



XL 440H Lawn Tractor

Model No. 71286 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame and Body Assembly	 3	Crankshaft Assembly Briggs and Stratton 31F777-0162-E1	 17
Hood and Tower Assembly	 4	Crankcase Assembly Briggs and Stratton 31F777-0162-E1	 18
Rear Body and Seat Assembly	 5	Oil Filter, Tube and Pump Assembly Briggs and Stratton 31F777-0162-E1	 19
Steering Assembly	 6	Carburetor Assembly Briggs and Stratton 31F777-0162-E1	 20
Fixed Steering Assembly	 7	Governor Assembly Briggs and Stratton 31F777-0162-E1	 21
Engine Assembly	 8	Blower Housing Assembly Briggs and Stratton 31F777-0162-E1	 22
Traction Brake Assembly	 9	Starter Assembly Briggs and Stratton 31F777-0162-E1	 23
Wheel and Tire Assembly	 10	Gasket Assembly Briggs and Stratton 31F777-0162-E1	 24
Transaxle Assembly	 11	Carburetor Overhaul Kit Assembly Briggs and Stratton 31F777-0162-E1	 25
Transaxle Installation Assembly	 12	Attachments and Accessories List	 26
Height-of-Cut Assembly	 13		
Electrical Assembly	 14		
Cylinder Assembly Briggs and Stratton 31F777-0162-E1	 15		
Cylinder Head Assembly Briggs and Stratton 31F777-0162-E1	 16		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- | | |
|---|---|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Included in Engine Gasket Set-Ref. 358. | ❹ Included in Valve Gasket Set-Ref. 1095. |
| ❺ Included in Carburetor Overhaul Kit-Ref. 121. | ❻ Included in Carburetor Gasket Set-Ref. 977. |
| ❼ Obtain from your local Briggs & Stratton dealer | |

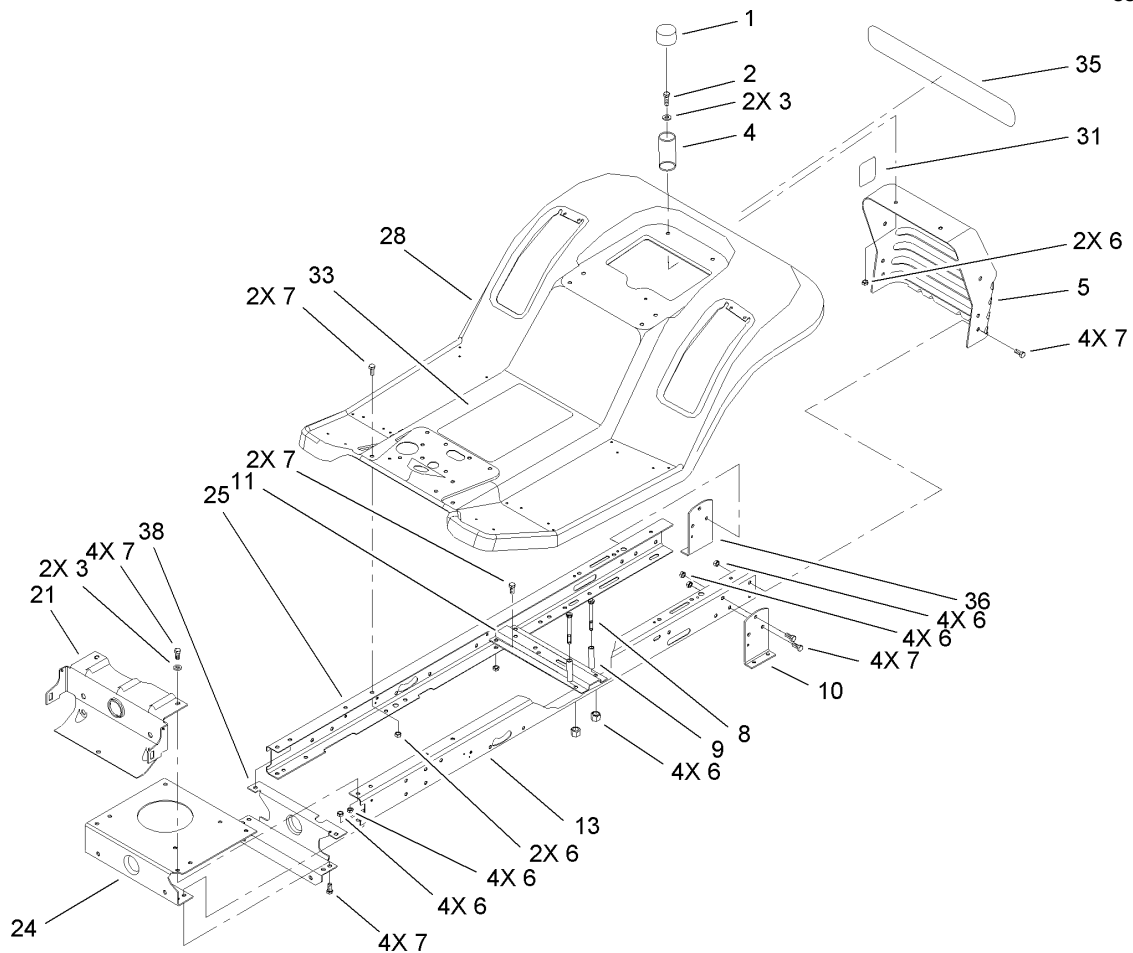

Frame and Body Assembly

Ref	Part No.	Qty.	Description				
1	701178	2	Cap-Protector				
2	322-5	2	Screw-HH				
3	3256-23	4	Washer-Flat				
4	88-6220	2	Spring-Compression				
5	99-2957-03	1	Panel-Rear, Hitch				
6	3296-29	24	Nut-Lock, NI				
7	322-3	20	Screw-HH				
8	322-12	2	Screw-HH				
9	88-5470	2	Spacer-Axle, Front				
10	93-3857-03	1	Bracket-Mounting, LH				
11	88-4620-03	1	Bracket-Idler, Pivot				
13	99-2958-03	1	Rail-Frame, LH				
21	98-3576-03	1	Support-Axle, Front				
24	88-4630-03	1	Plate-Engine, Mounting				
25	99-2959-03	1	Rail-Frame, RH				
28	99-2971	1	Rear Body ASM				
31	100-7449	1	Decal				
33	93-6676	1	Decal-Instruction				
35	105-2498	1	Decal				
36	93-3856-03	1	Bracket-Mounting, RH				
38	93-3831-03	1	Support-Rear				

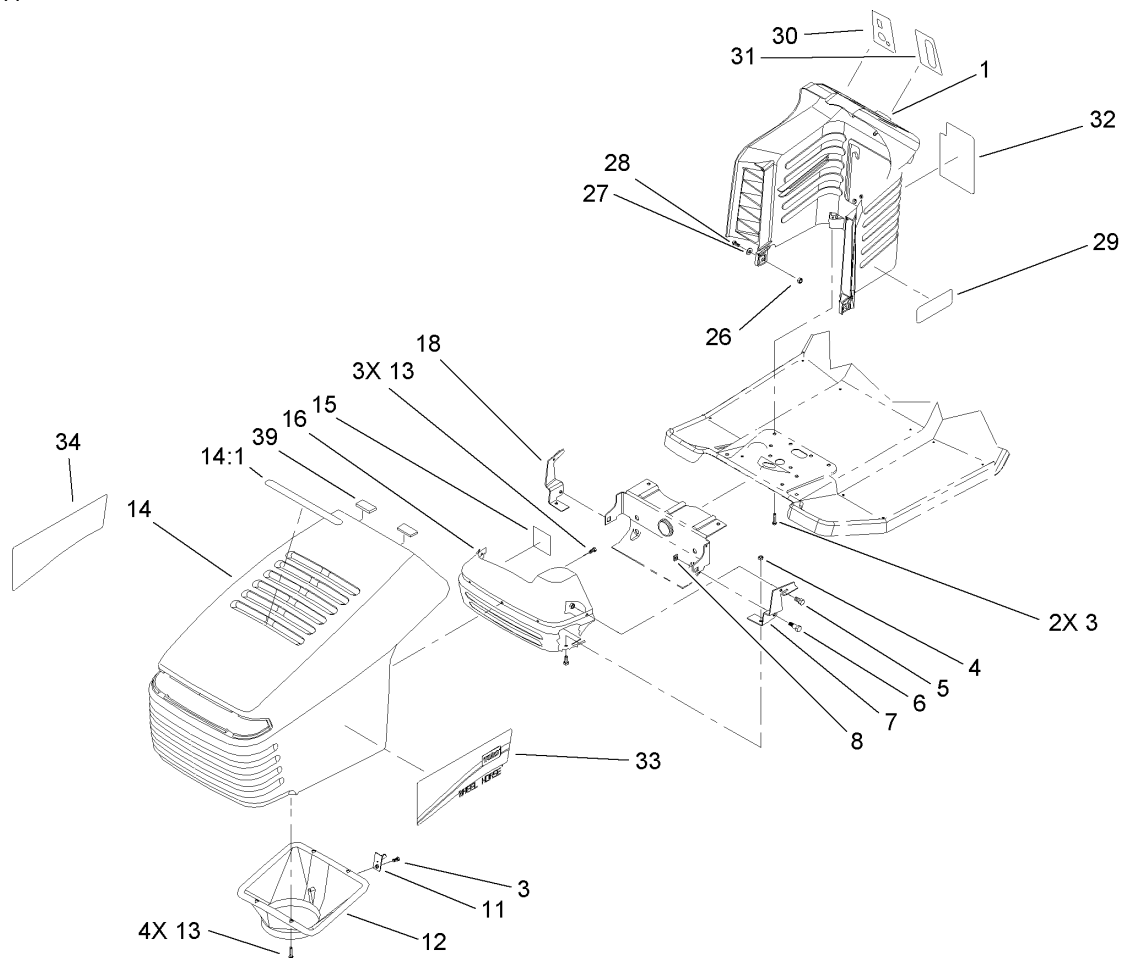


Hood and Tower Assembly

Ref	Part No.	Qty.	Description
1	107-4920	1	Tower-Steering
3	46-8091	3	Screw-HWH
4	3296-42	4	Nut-Lock, NI
5	321-2	4	Screw-HH
6	28-0540	2	Bolt-Shoulder
7	88-6050-03	1	Bracket-Hinge, LH
8	3290-496	2	Nut-Retainer
11	94-1984	1	Latch-Pin
12	93-3891	1	Duct-Air, Hood
13	46-8090	7	Screw-Plastite
14	92-8650	1	Hood ASM
14:1	92-5748	1	Decal
15	92-5782	3	Tape-Foil
16	93-3864-03	1	Shield-Heat
18	88-6040-03	1	Bracket-Hinge, RH
26	3296-29	2	Nut-Lock, NI
27	3256-23	2	Washer-Flat
28	322-3	2	Screw-HH
29	108-7805	2	Decal
30	99-8141	1	Decal-Ignition
31	92-5730	1	Decal-Throttle
32	107-4922	1	Decal-Danger
33	105-2497	1	Decal
34	105-2496	1	Decal

Ref	Part No.	Qty.	Description
39	94-1980	2	Foam-Hood


5

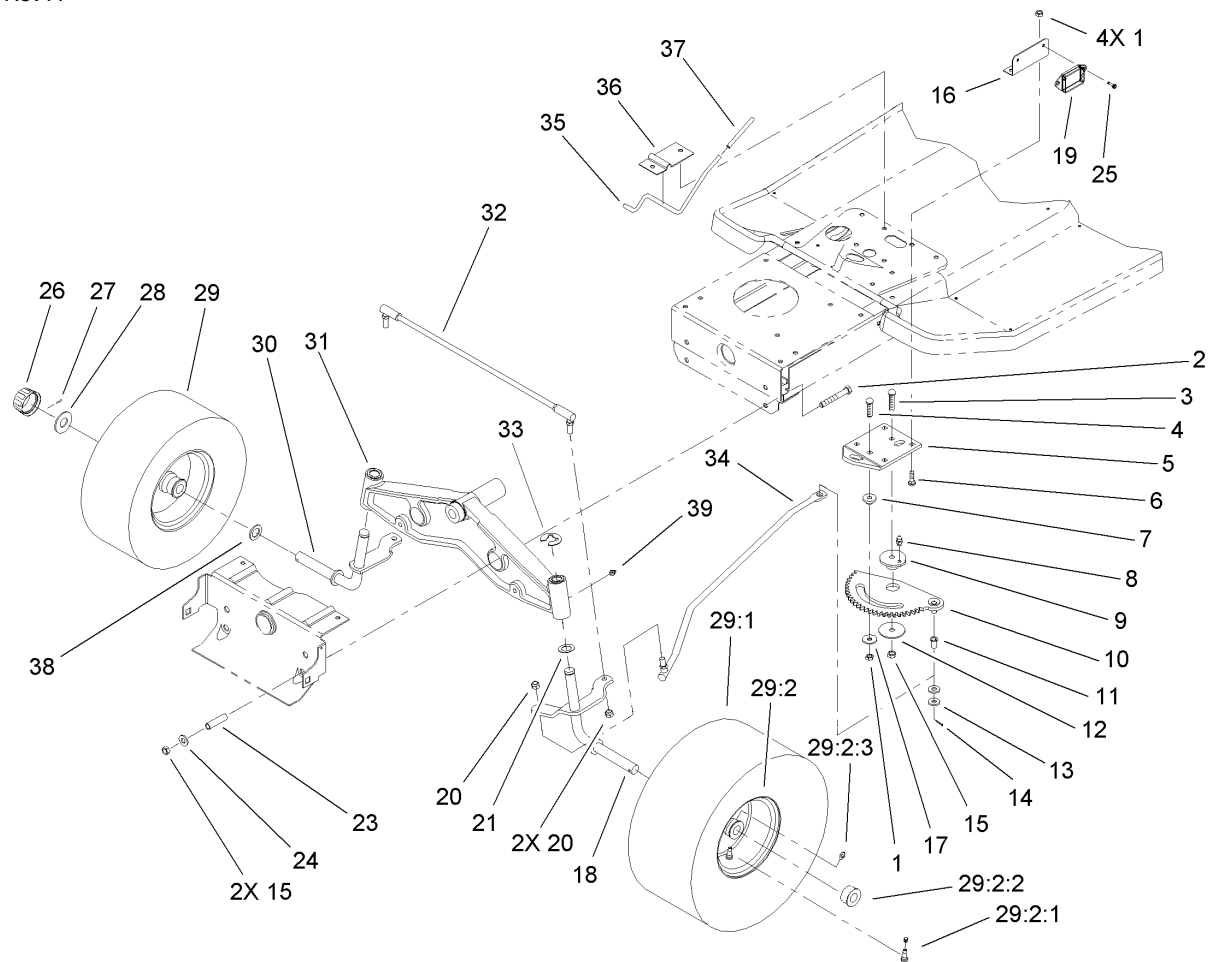

Steering Assembly


Ref	Part No.	Qty.	Description
1	3296-29	5	Nut-Lock, NI
2	323-13	2	Screw-HH
3	3231-4	1	Screw-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket-Rack, Steering
6	3230-2	4	Bolt-CARR
7	88-5010	1	Spacer-Rack, Steering
8	302-26	1	Fitting-Grease
9	88-4670	1	Bushing-Eccentric
10	88-5200	1	Rack-Steering
11	52-2891	1	Bushing-Link, Steering
12	111419	1	Washer-Bearing
13	3256-25	2	Washer-Flat
14	3272-10	1	Pin-Cotter
15	3296-39	3	Nut-Lock, NI
16	99-2956-03	1	Bracket-Module
17	5-4460	1	Washer-Pivot
18	93-3833-03	1	Spindle-LH
19	99-3701	1	Module-Clutch
20	3296-5	3	Nut-Lock
21	3-6498	2	Washer-Thrust
23	88-5470	2	Spacer-Axle, Front
24	3256-24	2	Washer-Flat
25	9266714	2	Screw-HWH

Ref	Part No.	Qty.	Description
26	61-9780	2	Cap-Hub
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer
29		2	Front Wheel And Tire ASM
29:1	99-2988	1	Tire
29:2	99-6829	1	Rim ASM
29:2:1	232-27	1	Stem-Valve
29:2:2	110513	2	Bearing-Wheel
29:2:3	302-5	1	Fitting-Grease
29:3	232-39	1	Tube-Inner
30	92-7889-03	1	RH Spindle ASM
31	99-2955-03	1	Axle-Front
32	93-3873	1	Tie Rod ASM
33	32151-48	2	E-Ring
34	93-3840	1	Link-Drag
35	88-5510	1	Rod-Brake, Parking
36	88-5520-03	1	Bracket-Brake, Parking
37	88-0890	1	Grip-Brake, Parking
38	3-6498	4	Washer-Thrust
39	302-5	2	Fitting-Grease

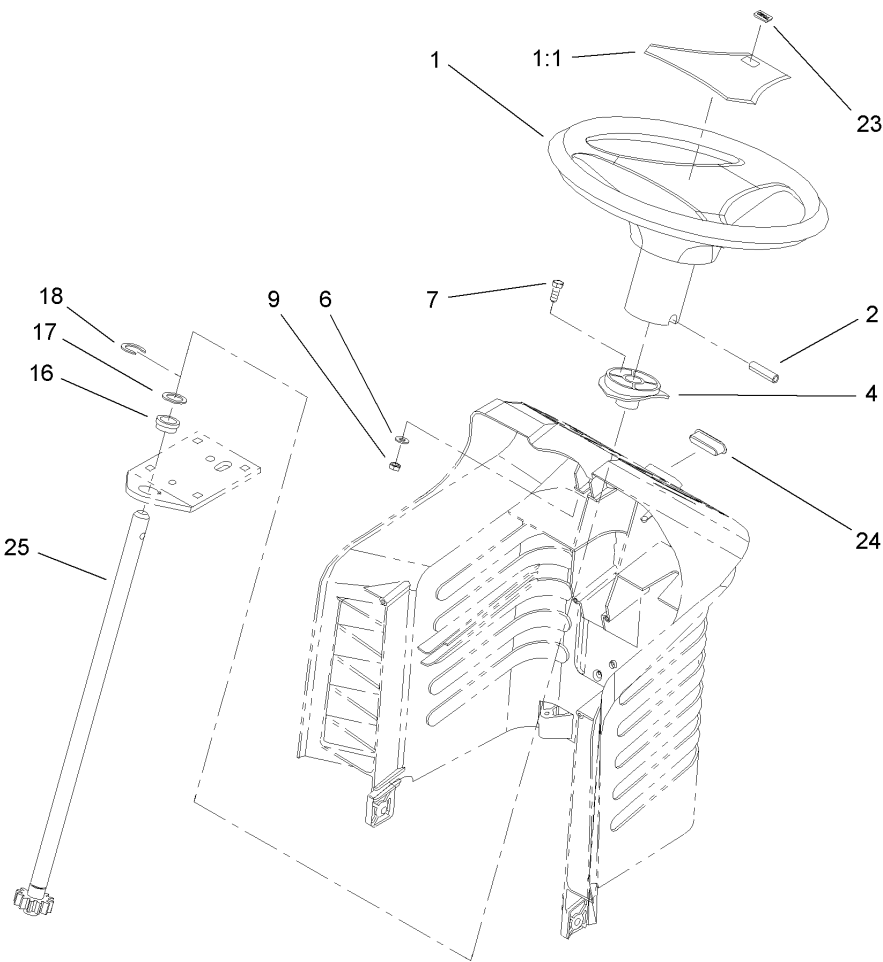

Fixed Steering Assembly


Ref	Part No.	Qty.	Description				
1	98-1467	1	Wheel-Steering				
1:1	98-1468	1	Cover-Wheel, Steering				
2	32121-111	1	Pin-Roll				
4	88-4190	1	Bushing-Sliding				
6	3256-22	2	Washer-Flat				
7	321-4	2	Screw-HH				
9	3296-42	2	Nut-Lock, NI				
16	88-5150	1	Bearing-Flange				
17	3-6498	1	Washer-Thrust				
18	32151-48	1	E-Ring				
23	98-1459	1	Decal				
24	88-4150	1	Plug				
25	88-6380	1	Shaft-Steering, Long				

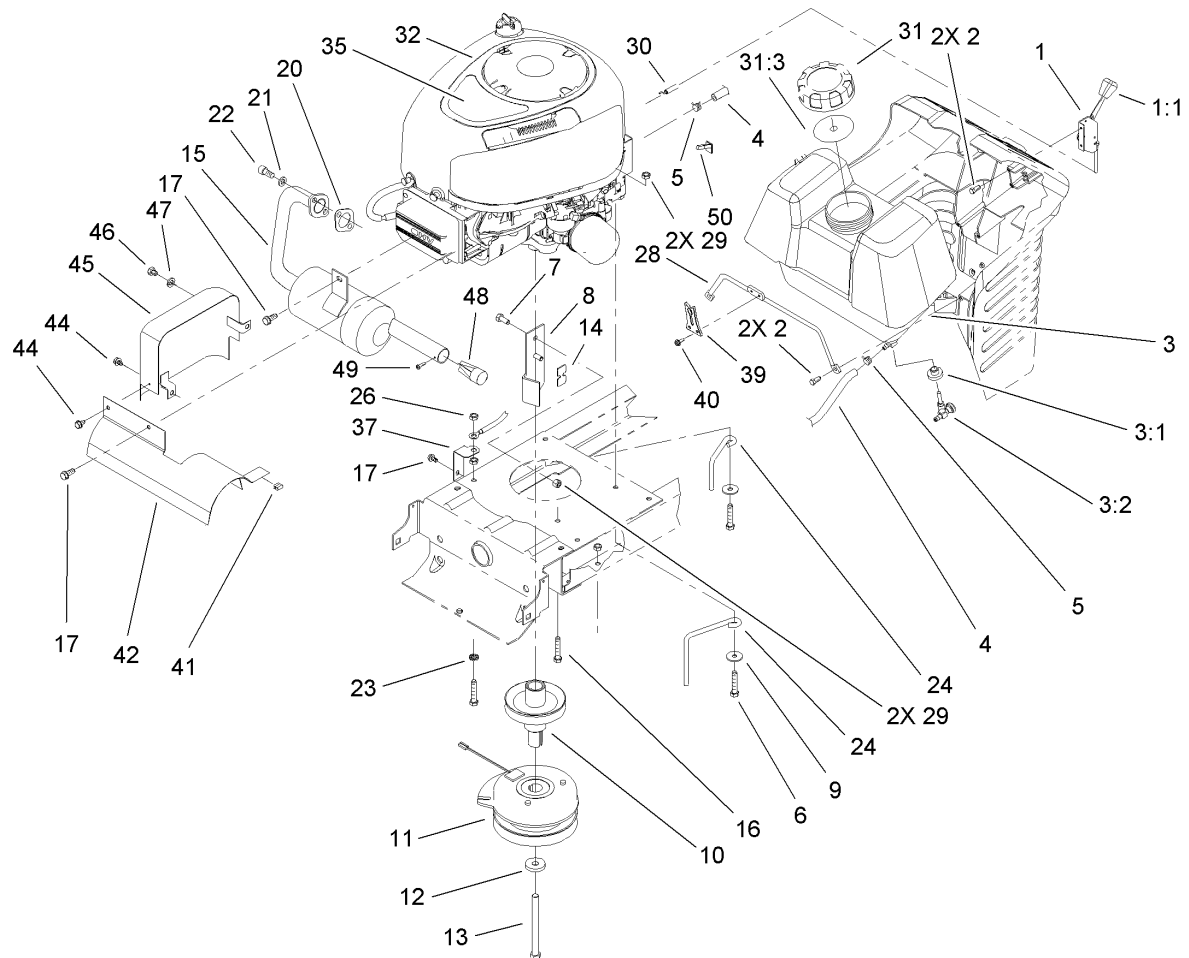

Engine Assembly

Ref	Part No.	Qty.	Description
1	88-4340	1	Control-Throttle
1:1	66-0120	1	Knob
2	27-0220	4	Screw-Special
3	88-3880	1	Gas Tank ASM
3:1	46-6560	1	Bushing
3:2	104048	1	Valve-Fuel
4	107-9297	1	Fuel-Hose, 8.5 Inch
5	2412-98	2	Clamp
6	322-9	3	Screw-HH
7	322-3	2	Screw-HH
8	107-4914-03	1	Stop-Clutch
9	5-4460	2	Washer-Pivot
10	107-4916	1	Pulley-Engine
11	108-9511	1	Clutch-PTO, Electric
12	112843	1	Washer
13	3212-19	1	Screw-HH
14	98-5023	1	Bumper
15	99-6845	1	Muffler
16	9267154	1	Screw
17	9266714	3	Screw-HWH
20	88-4410	1	Gasket-Muffler
21	3253-4	2	Washer-Lock
22	3274-10	2	Screw-HSH
23	3255-8	1	Washer-Lock


Ref	Part No.	Qty.	Description
24	93-3855	2	Guide-Belt, RH
26	32149-1	2	Nut-Keps
28	94-1952	1	Rod-Tank, Gas
29	3296-29	4	Nut-Lock, NI
30	88-4350	1	Cable-Throttle
31	88-3980	1	Gas Cap ASM
31:3	88-4010	1	Gasket-Cap, Gas
32		1	Engine-Briggs And Stratton, 31F777-0162-E1
35	107-4906	1	Decal-Engine
37	93-3809	1	Bracket-Ground
39	94-1951	1	Latch-Hood
40	32144-112	2	Screw-HWH
41	93-3882	1	Clip-Tinnerman
42	110-8643-03	1	Shield-Muffler
44	32104-76	2	Screw
45	93-8450-03	1	Exhaust Shield ASM
46	322-3	1	Screw-HH
47	3253-4	1	Washer-Lock
48	93-9911	1	Screen-Silencer, Exhaust
49	32144-42	1	Screw-HH
50	88-4490	1	Reducer-Throttle, Rpm

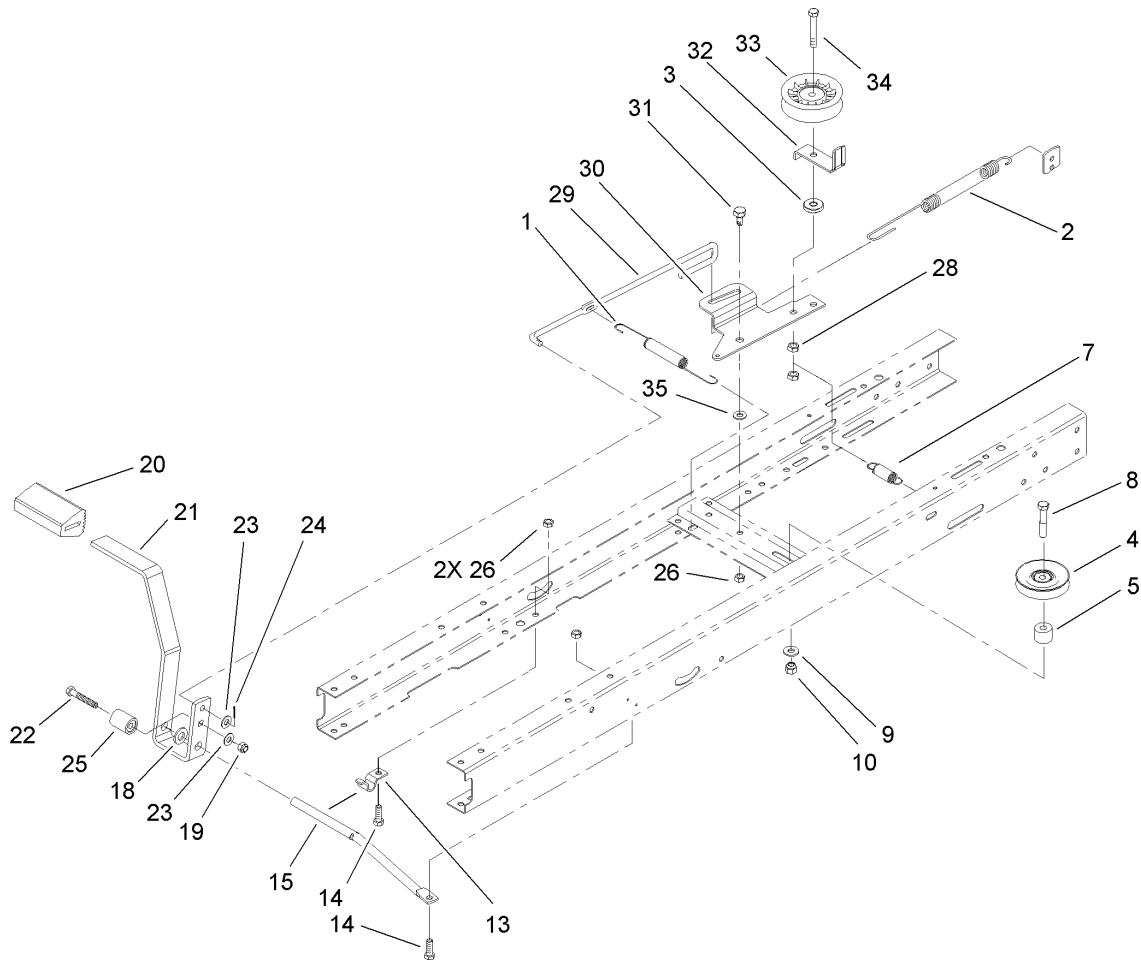

Traction Brake Assembly


Ref	Part No.	Qty.	Description
1	27-8890	1	Spring-Return
2	100-7422	1	Spring-Brake
3	92-4890	1	Washer
4	92-7102	1	Pulley-Idler
5	92-5791	1	Spacer
7	88-6330	1	Spring-Extension
8	323-10	1	Screw-HH
9	3256-3	1	Washer-Flat
10	3296-39	1	Nut-Lock, NI
13	88-4810	1	Clamp-Shift, Pivot
14	322-3	2	Screw-HH
15	88-5500	1	Rod-Pedal, Pivot
18	3256-26	1	Washer-Flat
19	3296-47	1	Nut-Lock, NI
20	65-2920	1	Pad-Pedal
21	88-5000-03	1	Pedal-Clutch / Brake
22	322-9	1	Screw-HH
23	3256-23	2	Washer-Flat
24	3272-10	1	Pin-Cotter
25	99-6836	1	Spacer-Plastic
26	3296-29	3	Nut-Lock, NI
28	3296-59	2	Nut-Lock, NI
29	88-5270	1	Rod-Clutch / Brake
30	88-6070	1	Arm-Idler

Ref	Part No.	Qty.	Description
31	37-8770	1	Bolt-Shoulder
32	88-5560	1	Guide-Idler, Belt
33	104-4160	1	Pulley-Idler
34	323-11	1	Screw-HH
35	5-4460	1	Washer-Pivot

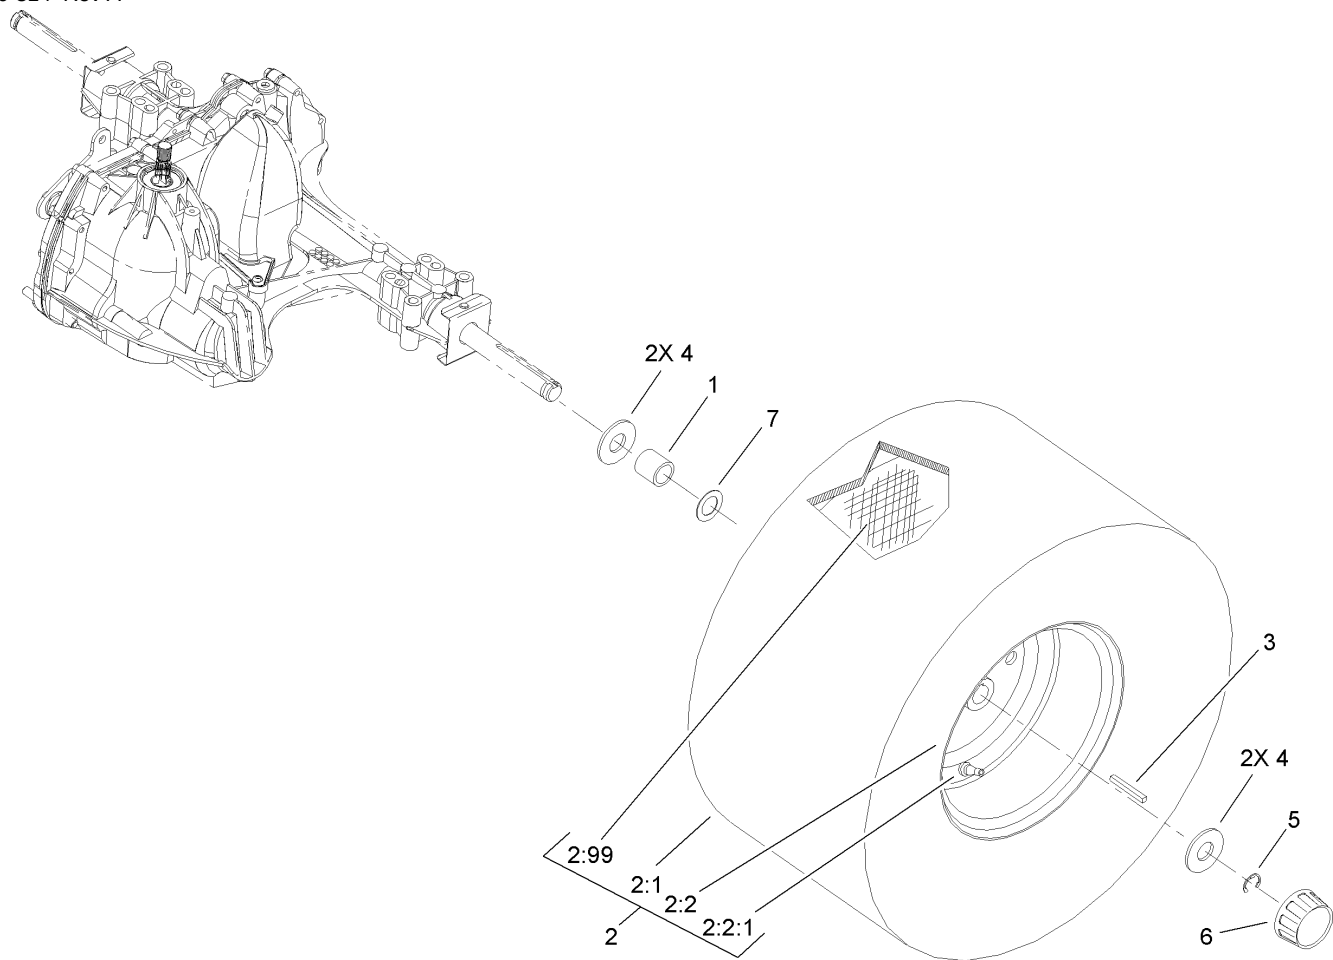

Wheel and Tire Assembly


Ref	Part No.	Qty.	Description				
1	104-4161	2	Spacer-Wheel				
2		2	Rear Wheel And Tire ASM				
2:1	99-2994	1	Tire				
2:2	88-4390	1	Rim ASM				
2:2:1	232-27	1	Stem-Valve				
2:99	93-3893	1	Tube-Inner				
3	7-0036	2	Key-Square				
4	28-2480	4	Washer				
5	32151-48	2	E-Ring				
6	61-9780	2	Cap-Hub				
7	3-6498	2	Washer-Thrust				

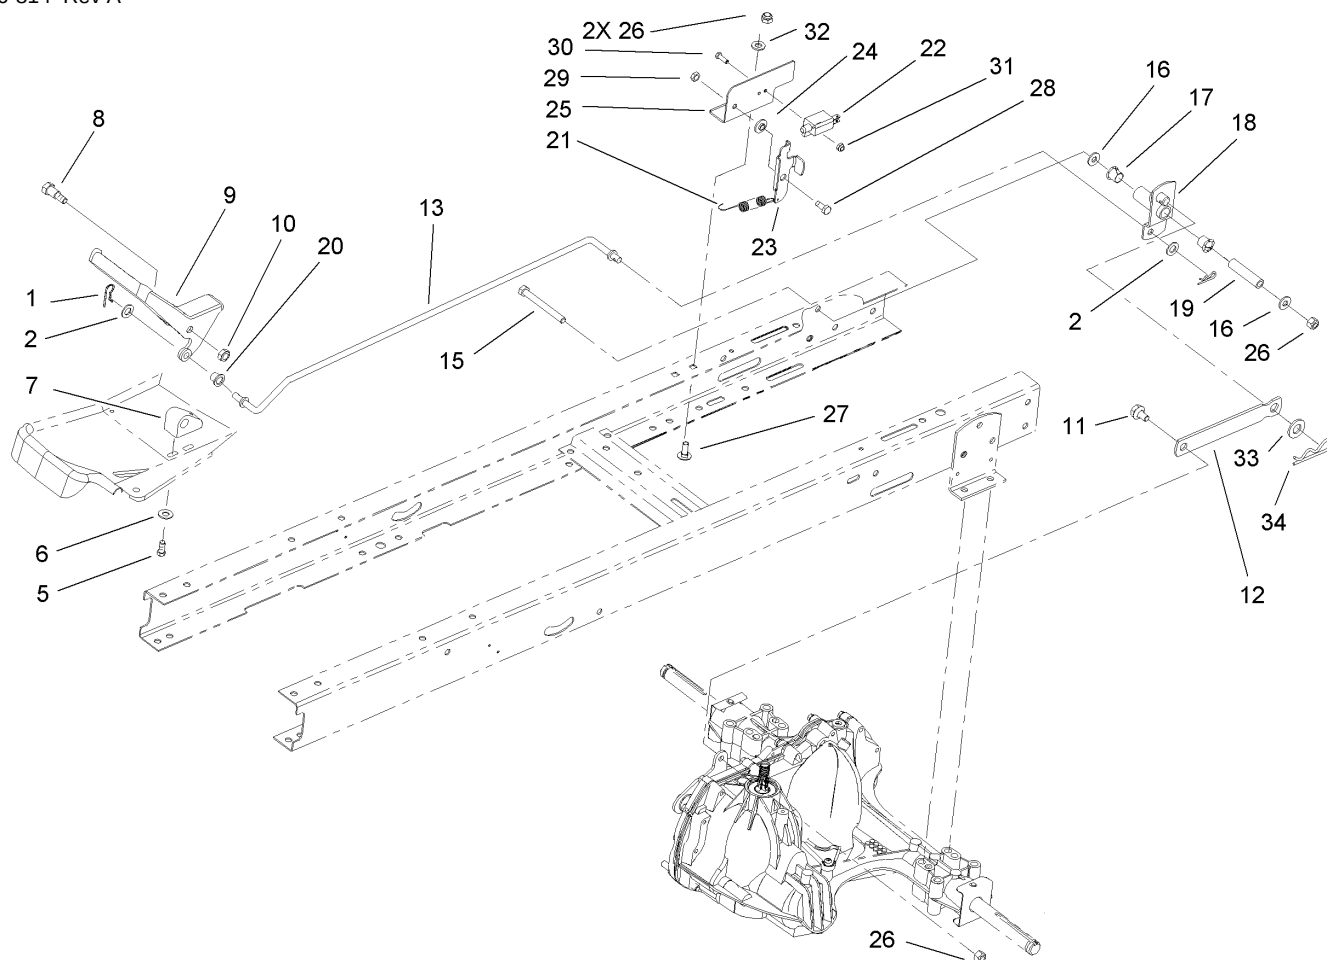

Transaxle Installation Assembly


Ref	Part No.	Qty.	Description
1	3290-307	2	Pin-Hair
2	3256-38	2	Washer-Flat
5	46-8090	2	Screw-Plastite
6	3256-22	2	Washer-Flat
7	88-4690	1	Block-Pivot
8	23-0310	1	Bolt-Shoulder
9	99-6120-05	1	Pedal-Control, Speed
10	3296-59	1	Nut-Lock, NI
11	37-8770	1	Bolt-Shoulder
12	99-6849	1	Link-Control, Speed
13	99-6839	1	Rod-Control, Speed
15	322-14	1	Screw-HH
16	3256-2	2	Washer-Flat
17	256-257	2	Bushing-Nyliner
18	99-6835-03	1	Pivot ASM
19	99-6832	1	Spacer-Pivot
20	99-6121	1	Bushing
21	99-6805	1	Spring-Extension
22	95-1653	1	Switch-Pole, Single
23	99-6807	1	Bracket-Pivot
24	99-6808	1	Washer-Stepped
25	99-6806	1	Bracket-Adjustment
26	3296-29	4	Nut-Lock, NI
27	3230-18	2	Screw-CARR

Ref	Part No.	Qty.	Description
28	99-6810	1	Screw-HH
29	3296-42	1	Nut-Lock, NI
30	3290-392	2	Screw-HHF
31	3296-1	2	Nut-Lock
32	3256-23	2	Washer-Flat
33	3256-26	1	Washer-Flat
34	9335054	1	Pin-Hair

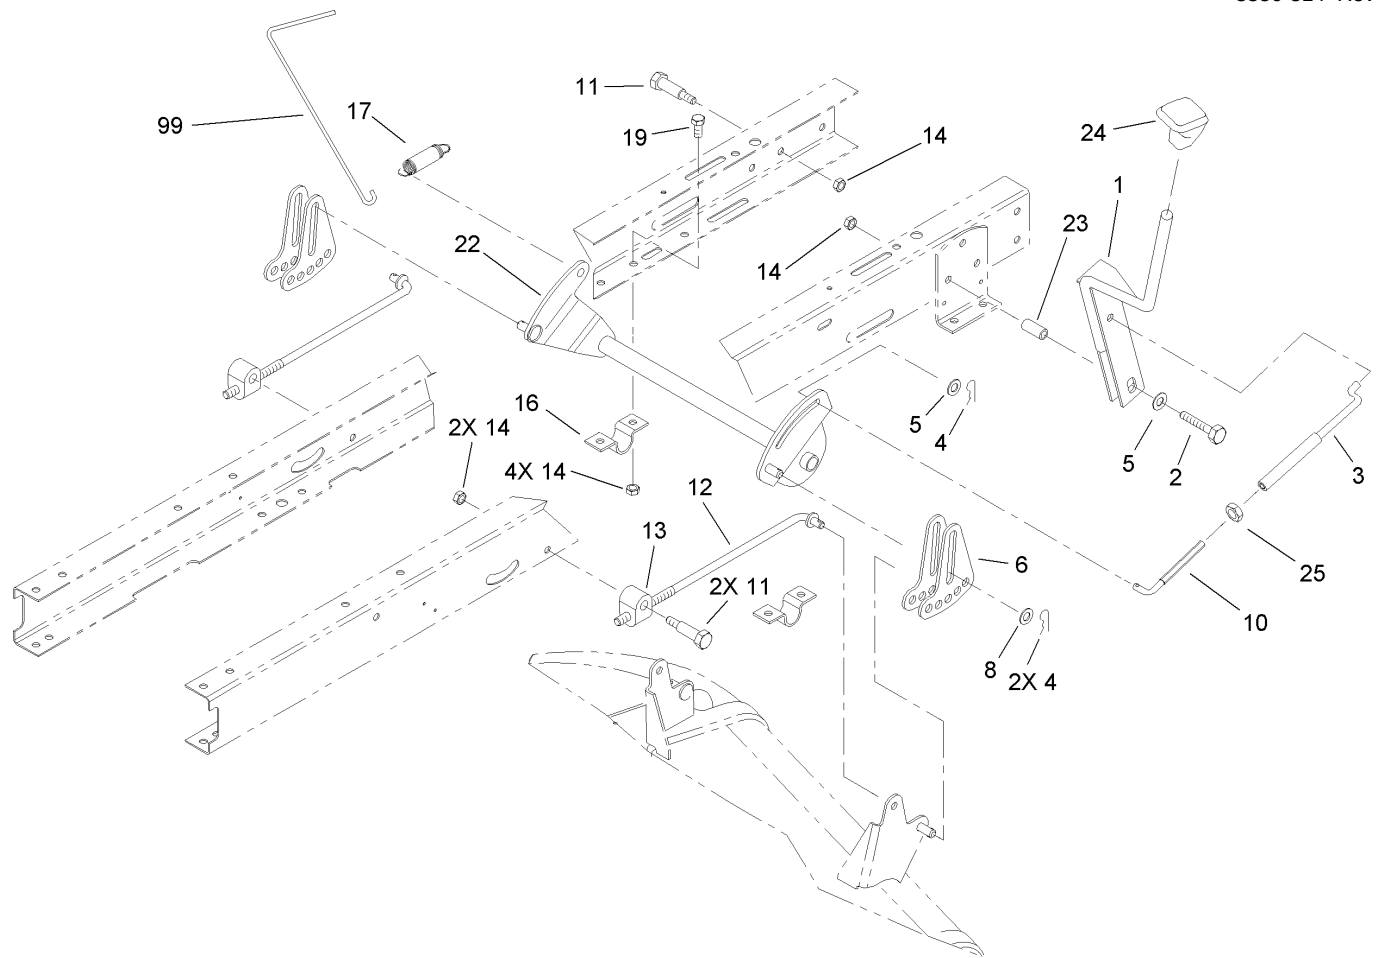

Height-of-Cut Assembly


Ref	Part No.	Qty.	Description				
1	93-3822-03	1	Lever ASM				
2	322-32	1	Screw-HH				
3	93-3885	1	Tube				
4	3290-307	3	Pin-Hair				
5	3256-24	2	Washer-Flat				
6	88-5570-03	4	Link-Adjusting, HOC				
8	80-6990	2	Washer-Hardened				
10	93-3888	1	Link-HOC				
11	7-0030	3	Bolt-Shoulder				
12	88-5450	2	Rod-Hanger, Rear				
13	88-4230	2	Trunnion-HOC				
14	3296-29	8	Nut-Lock, NI				
16	88-4730	2	Clamp-Pivot, HOC				
17	93-3808	1	Spring-Extension				
19	322-3	4	Screw-HH				
22	93-7660-03	1	Pivot-HOC				
23	65-7210	1	Spacer				
24	94-5565	1	Knob-Shift				
25	3218-2	1	Nut-Jam				
99	92-5771	1	Rod-Removal, Spring				

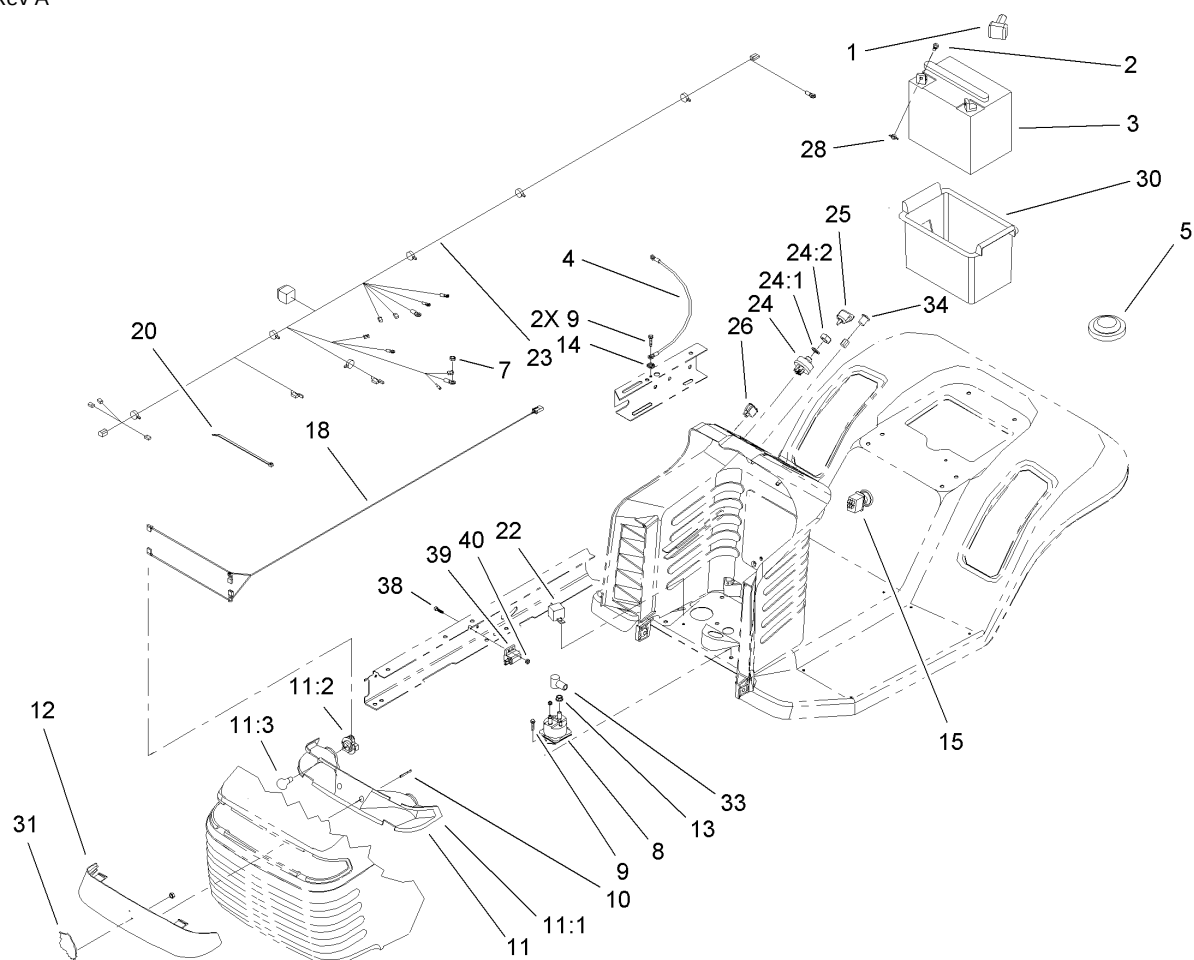

Electrical Assembly

Ref	Part No.	Qty.	Description
1	28-8080	1	Boot-Terminal
2	321-4	2	Screw-HH
3	104-1755	1	Battery
4	44-8110	1	Wire ASM
5	100-3524	1	Switch-Seat
7	32149-2	1	Nut-Keps
8	106-8245	1	Solenoid
9	9266714	3	Screw-HWH
10	32144-32	2	Screw
11	88-3970	1	Reflector And Lamp ASM
11:1	93-8741	1	Reflector
11:2	116262	2	Socket-Headlight
11:3	7228	2	Bulb
12	88-3960	1	Lens-Headlight
13	32149-2	2	Nut-Keps
14	3255-7	2	Washer-Lock / EXT
15	93-9998	1	Switch-PTO
18	99-1935	1	Harness-Headlight
20	614249	1	Strap-Tie
22	98-7249	1	Relay
23	107-4912	1	Harness-Wire
24	88-9830	1	Key Switch ASM
24:1	3254-5	1	Washer-Tooth
24:2	218-461	1	Nut-HH

Ref	Part No.	Qty.	Description
25	63-8360	1	Key-Ignition
26	92-8875	1	Switch-Rocker
28	32103-22	2	Nut-Wing
30	88-4040	1	Box-Battery
31	95-4248	1	Decal
33	93-3190	1	Boot-Insulator, Terminal
34	95-7652	1	Light-Indicator
38	3274-14	2	Screw-HSH
39	65-7410	1	Switch-Pole, Single
40	3296-2	2	Nut-Lock

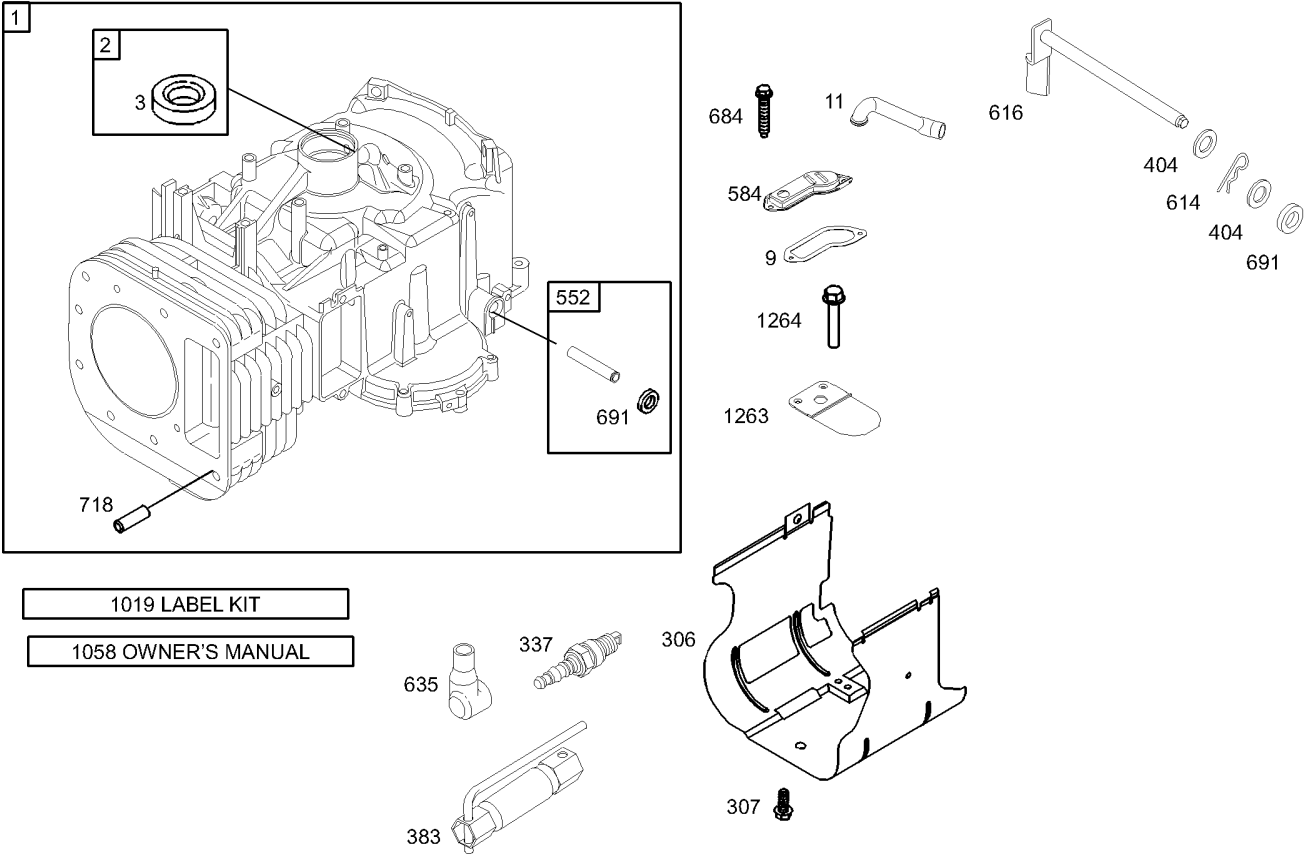


Assemblies include all parts shown in frames.

Cylinder Assembly

Briggs and Stratton 31F777-0162-E1


Ref	Part No.	Qty.	Description				
1	697174	1	Cylinder ASM				
2	399265	1	Bushing / Seal Kit				
3	391086	1	Seal-Oil				
9	697109	1	Gasket-Breather				
11	697113	1	Tube-Breather				
48	697762	1	Short Block ASM				
306	697107	1	Shield-Cylinder				
307	691003	1	Screw				
337	491055	1	Plug-Spark				
383	89838	1	Wrench-Plug, Spark				
404	691691	1	Washer				
552	697144	1	Bushing-Crank, Governor				
584	697112	1	Cover-Passage, Breather				
614	691620	1	Pin-Cotter				
616	692012	1	Crank-Governor				
635	691909	1	Boot-Plug, Spark				
684	697157	1	Screw				
691	692407	1	Seal-Shaft, Governor				
718	690959	1	Pin-Locating				
1019	697143	1	Label Kit				
1058	275038	1	Owner's Manual				
1263	697124	1	Reed-Breather				
1264	697104	1	Screw				

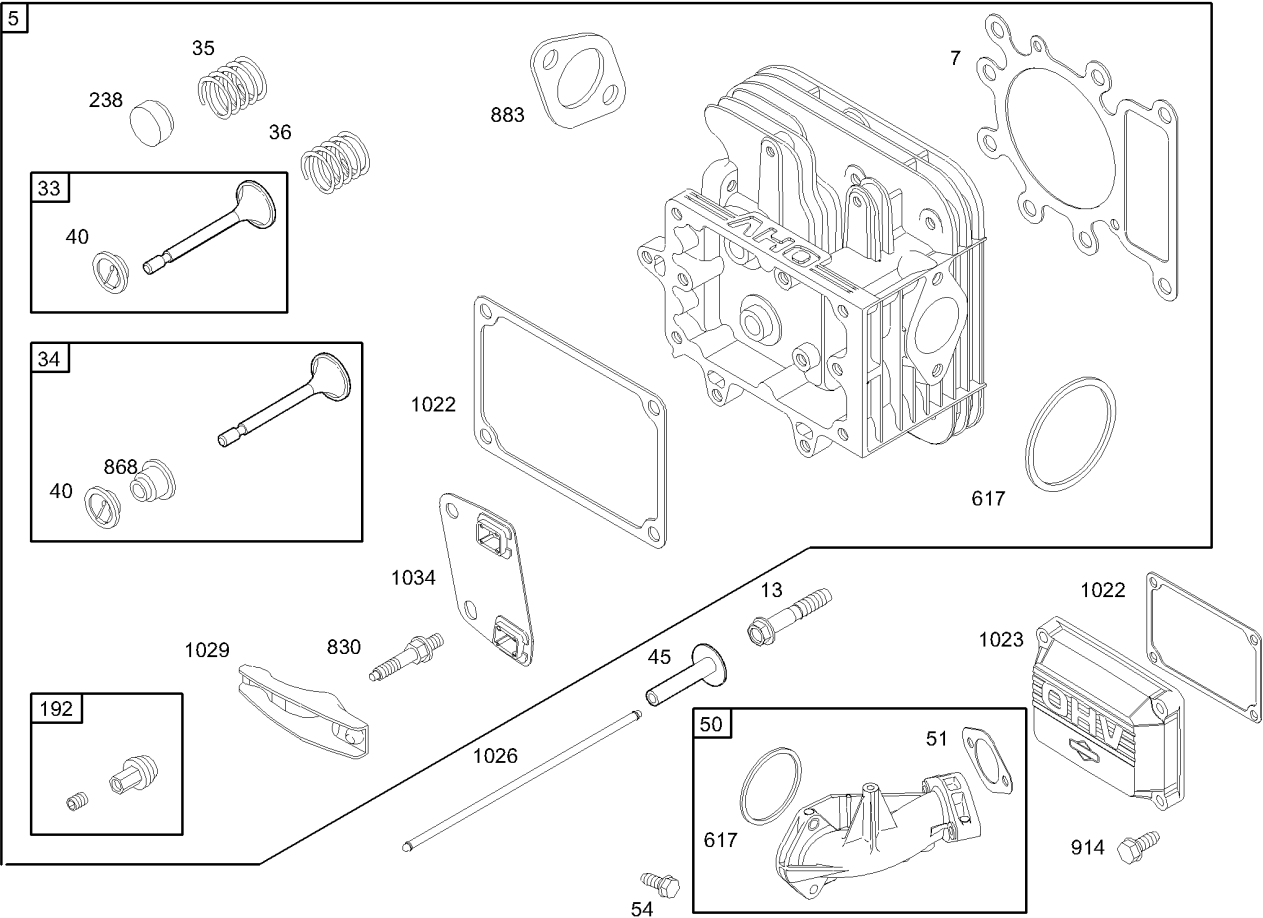

Cylinder Head Assembly
Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description
75	698147	1	Head-Cylinder
347	692410	1	Gasket-Cylinder Head
7			
713	690360	1	Screw
733	495856	1	Valve-Exhaust
734	495857	1	Valve-Intake
735	691279	1	Spring-Valve
736	691279	1	Spring-Valve
740	691752	1	Retainer-Valve
745	690564	1	Tappet-Valve
750	690193	1	Manifold-Intake
3451	692137	1	Gasket-Intake
56			
754	691148	1	Screw
7192	691986	1	Adjustor-Arm, Rocker
7238	691843	1	Cap-Valve
35617	692138	1	Seal
7			
7830	691095	1	Stud-Arm, Rocker
34868	690968	1	Seal-Valve
7			
7883	692236	1	Gasket-Exhaust
7914	690960	1	Screw
371022	272475	1	Gasket-Cover, Rocker
71023	692492	1	Cover-Rocker


Ref	Part No.	Qty.	Description
71026	692003	1	Rod-Push
7	692011	1	Rod-Push
71029	691751	1	Arm-Rocker
71034	690822	1	Guide-Rod, Push

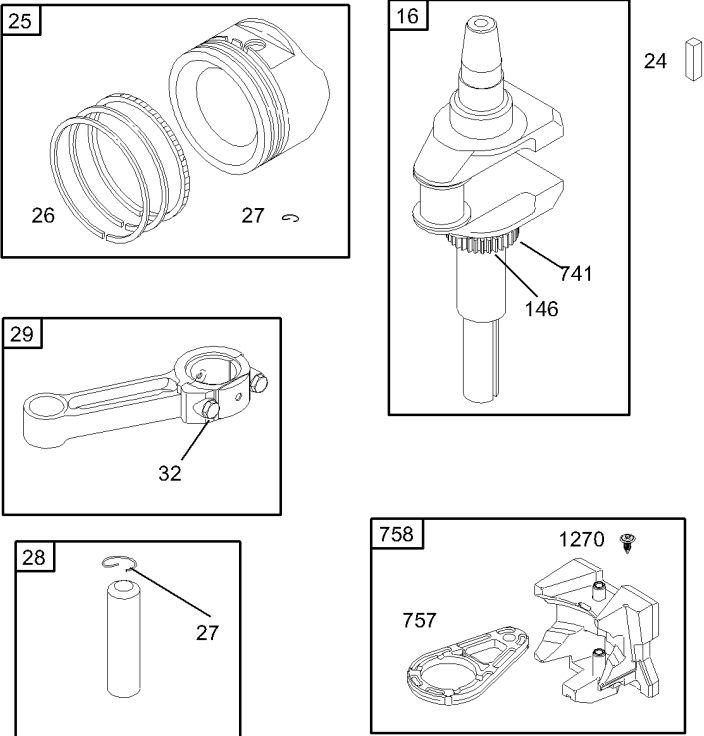

Assemblies include all parts shown in frames.

Crankshaft Assembly
Briggs and Stratton 31F777-0162-E1


Ref	Part No.	Qty.	Description				
16	697127	1	Crankshaft				
24	222698	1	Key				
25	697159	1	Piston ASM (Standard)				
7	697160	1	Piston ASM (.010" Oversize)				
7	697162	1	Piston ASM (.020" Oversize)				
7	697163	1	Piston ASM (.030" Oversize)				
26	697164	1	Ring Set (Standard)				
7	697165	1	Ring Set (.010" Oversize)				
7	697171	1	Ring Set (.020" Oversize)				
7	697172	1	Ring Set (.030" Oversize)				
27	698469	1	Lock-Pin, Piston				
28	697099	1	Pin-Piston (Standard)				
29	697126	1	Rod-Connecting (Standard)				
7	697264	1	Rod-Connecting (.020In Undersize)				
32	692852	1	Screw				
146	690979	1	Key-Timing				
741	697128	1	Gear-Timing				
757	697607	1	Link-Counterweight				
758	697134	1	Counterweight				
1270	697156	1	Plug-Counterweight, Avs				

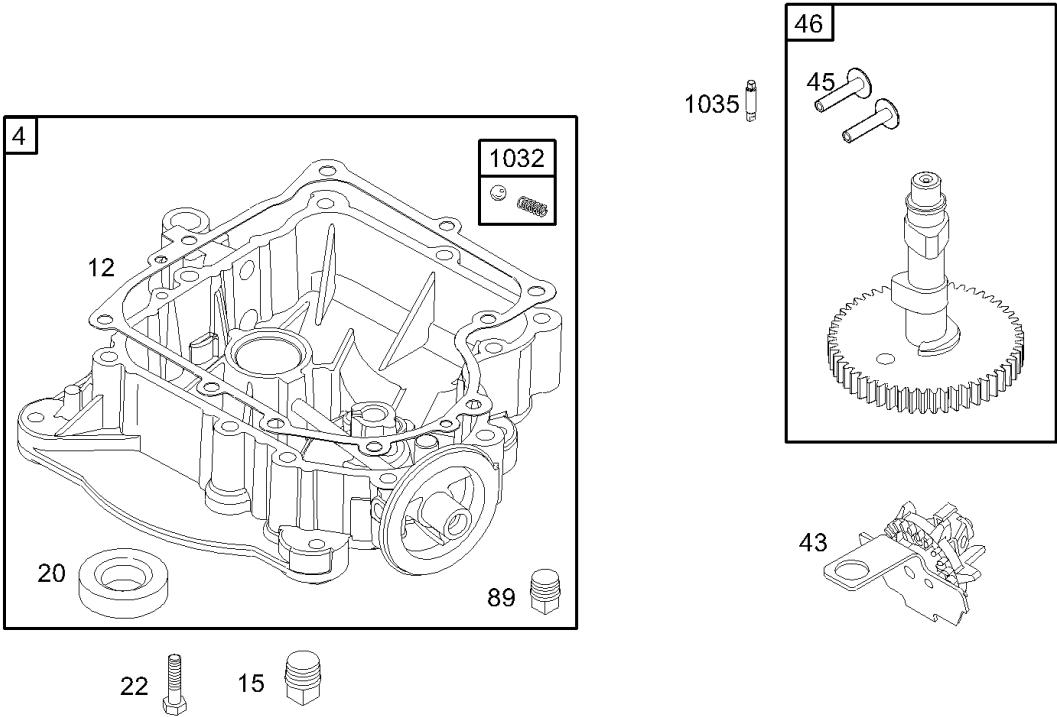

Assemblies include all parts shown in frames.

Crankcase Assembly
Briggs and Stratton 31F777-0162-E1


Ref	Part No.	Qty.	Description				
4	697188	1	Sump-Engine				
12	697110	1	Gasket-Crankcase				
15	690946	1	Plug-Drain, Oil				
20	690947	1	Seal-Oil				
22	692125	1	Screw				
43	691968	1	Slinger-Governor / Oil				
45	690564	1	Tappet-Valve				
46	693450	1	Camshaft				
89	690283	1	Plug				
1032	491710	1	Ball-Pump, Oil				
1035	693784	1	Shaft-Pump				

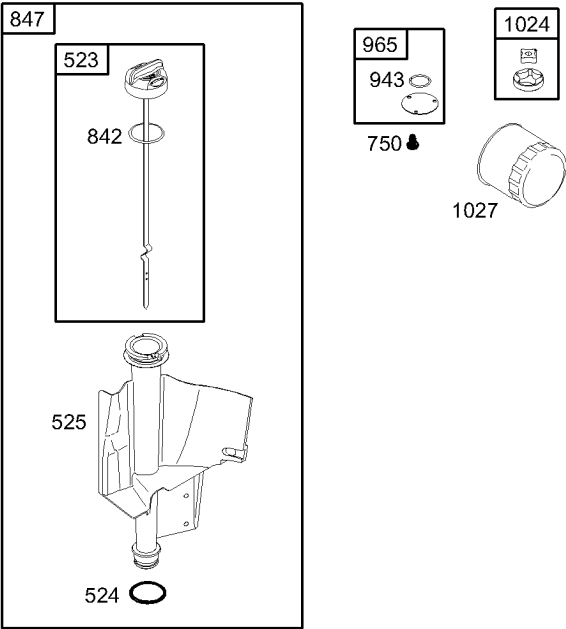

Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly
Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description				
7523	697086	1	Dipstick				
87524	691032	1	Seal				
7525	697184	1	Tube-Dipstick				
7750	691033	1	Screw				
87842	691031	1	Seal-O Ring				
7847	697611	1	Dipstick And Tube ASM				
87943	690589	1	Seal-O Ring				
7965	499613	1	Cover-Pump, Oil				
71024	499054	1	Pump-Oil				
71027	492932	1	Filter-Oil				

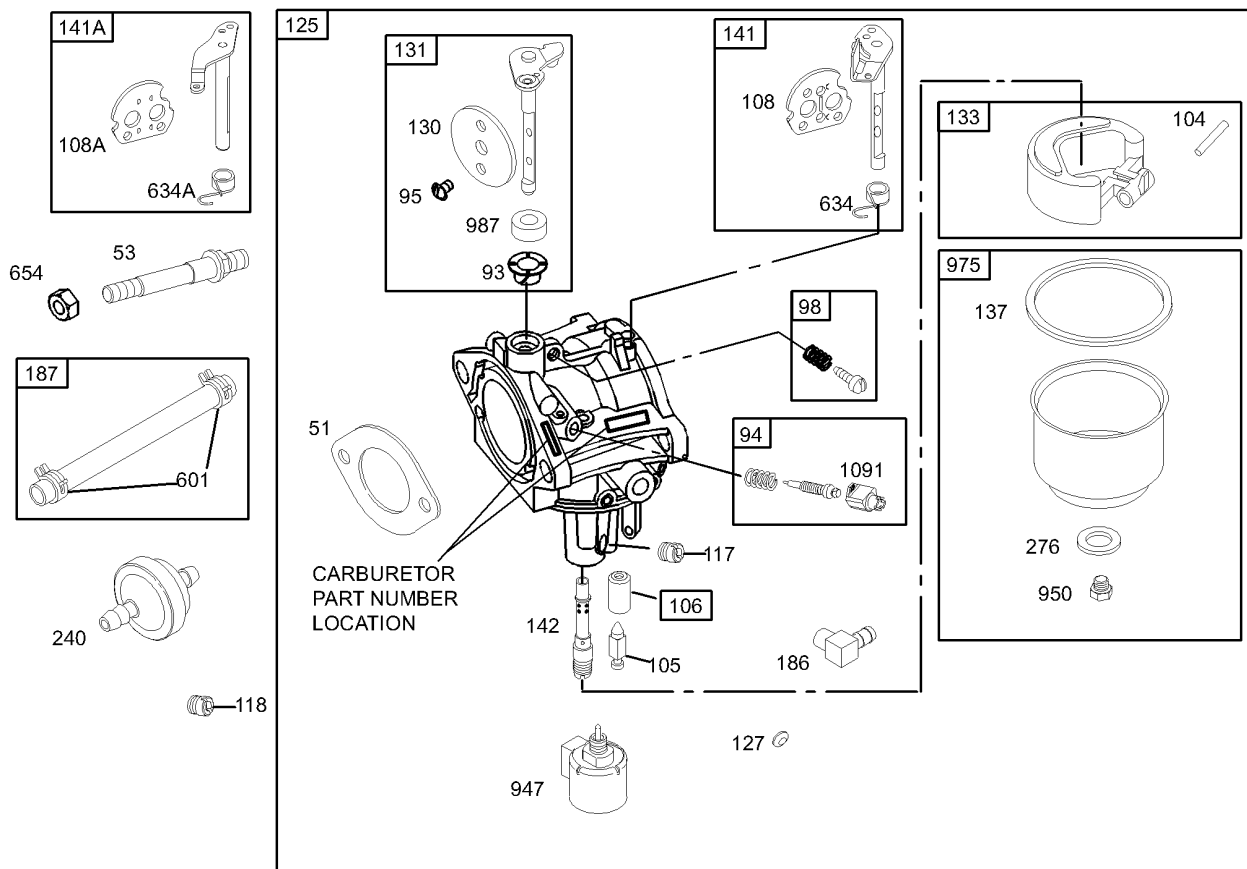


Assemblies include all parts shown in frames.

Carburetor Assembly Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description
5451	692137	1	Gasket-Intake
56			
753	690227	1	Stud
5793	690602	1	Bushing-Shaft, Throttle
794	498030	1	Idle Mixture Kit
5795	691636	1	Screw
798	495800	1	Idle Speed Kit
57104	690525	1	Pin-Hinge, Float
57105	231855	1	Valve-Needle, Float
57106	690577	1	Seat-Inlet
7108	690464	1	Valve-Choke
7108A	692344	1	Valve-Choke
57117	694352	1	Jet-Main (Standard)
7118	697228	1	Jet-Main (High Altitude)
7125	697190	1	Carburetor
7127	695005	1	Plug-Welch
7130	691750	1	Valve-Throttle
7131	494379	1	Throttle Shaft Kit
7133	494381	1	Float-Carburetor
56137	281165	1	Gasket-Bowl, Float
7			
7141	495097	1	Choke Shaft Kit
7141A	495931	1	Choke Shaft Kit
57142	697140	1	Nozzle-Carburetor


Ref	Part No.	Qty.	Description
7186	698174	1	Connector-Hose
7187	697098	1	Line-Fuel
7240	394358	1	Filter-Fuel
56276	692255	1	Washer-Sealing
7			
7601	95162	1	Clamp-Hose
57634	690801	1	Spring / Seal ASM
57634A	690802	1	Spring / Seal ASM
7654	690958	1	Nut
7947	694393	1	Solenoid-Fuel
7950	691657	1	Screw
7975	495933	1	Bowl-Float
57987	691326	1	Seal-Shaft, Throttle
71091	691333	1	Cap-Limiter

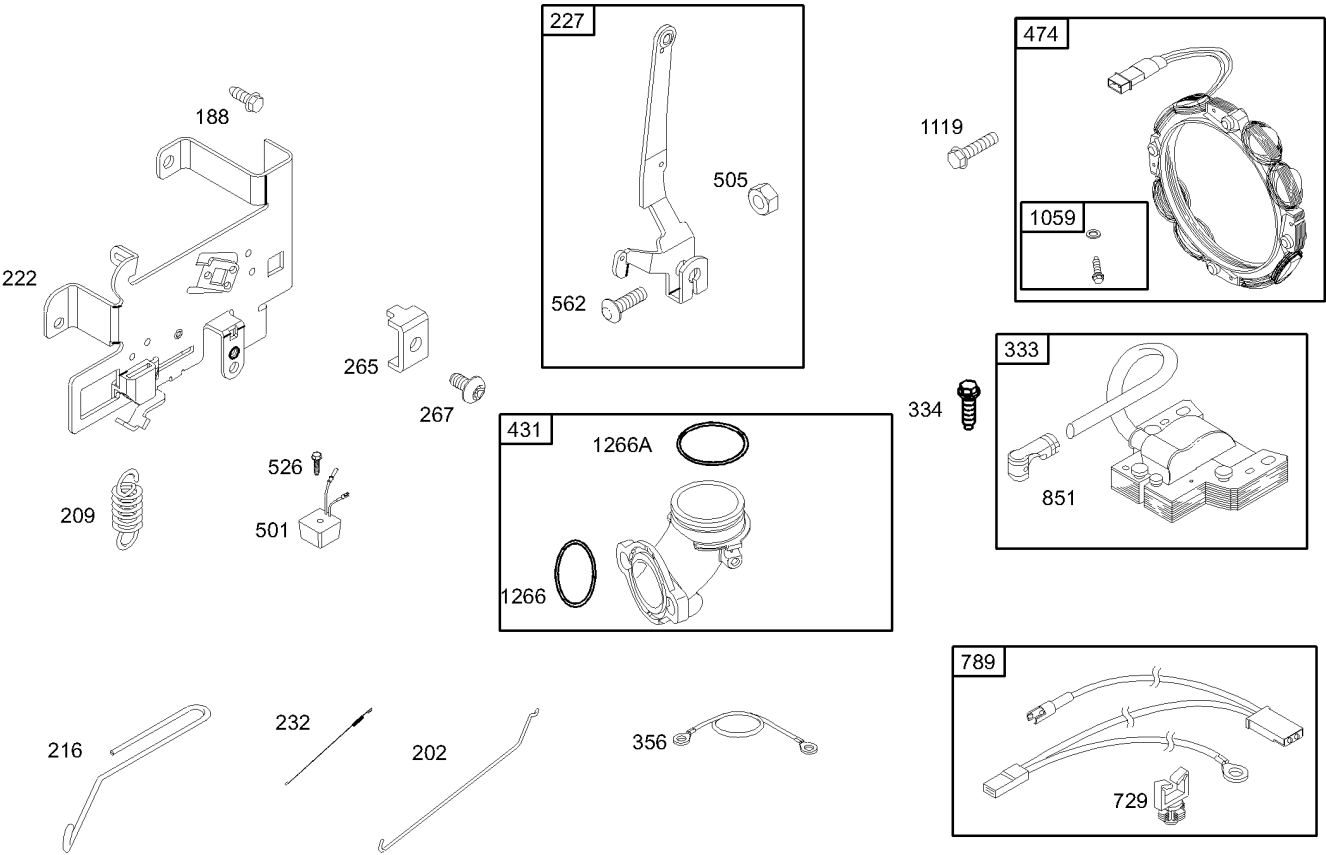

Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
● 188	691693	1	Screw	● 1266A	697123	1	Seal-O Ring
● 202	691841	1	Link-Governor, Mechanical				
● 209	692208	1	Spring-Governor				
● 216	691840	1	Link-Choke				
● 222	694042	1	Bracket-Control				
● 227	691374	1	Lever-Control, Governor				
● 232	691842	1	Spring-Link, Governor				
● 265	691024	1	Clamp-Casing				
● 267	695134	1	Screw				
● 333	492341	1	Armature-Magneto				
● 334	691061	1	Screw				
● 356	697089	1	Stop-Wire				
● 431	697122	1	Elbow-Intake				
● 474	696458	1	Alternator				
● 501	691185	1	Regulator				
● 505	691251	1	Nut				
● 526	697348	1	Screw				
● 562	691119	1	Screw				
● 729	691335	1	Clip-Wire				
● 789	692037	1	Wiring-Harness				
● 851	493880	1	Terminal-Spark Plug				
● 1059	698516	1	Screw / Washer Kit				
● 1119	691183	1	Screw				
● 1266	691917	1	Seal-O Ring				


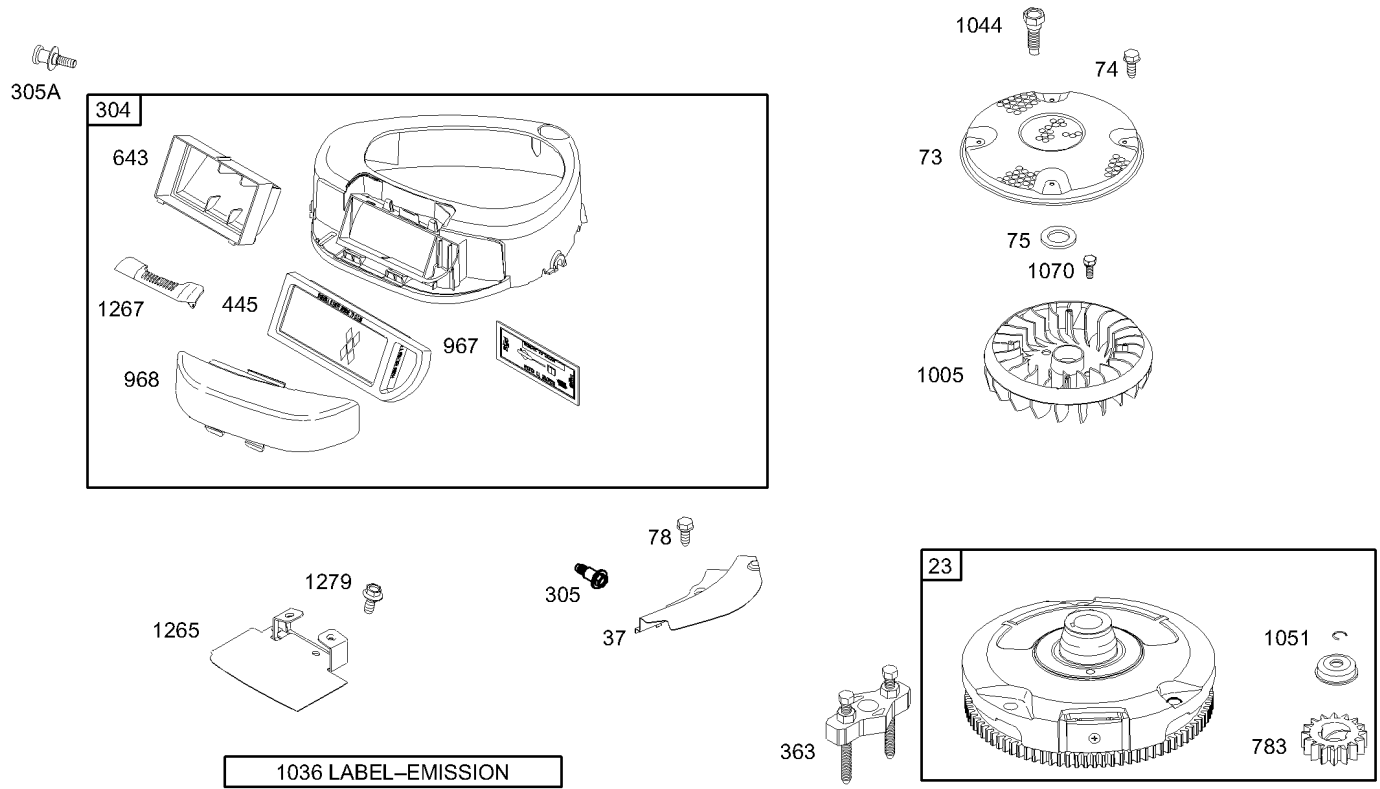


Assemblies include all parts shown in frames.

Blower Housing Assembly

Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description				
23	693556	1	Flywheel				
37	697108	1	Guard-Flywheel				
73	697133	1	Screen-Rotating				
74	697897	1	Screw				
75	690582	1	Washer-Flywheel				
78	691003	1	Screw				
304	698804	1	Housing-Blower				
305	697102	1	Screw				
305A	697103	1	Screw				
363	19203	1	Puller-Flywheel				
445	697014	1	Filter-Air Cleaner Cartridge				
643	697155	1	Retainer-Air Filter				
783	693713	1	Gear-Pinion				
1070	690372	1	Screw				
967	697015	1	Filter-Pre Cleaner				
968	697084	1	Cover-Cleaner, Air				
1005	697111	1	Fan-Flywheel				
1036	695700	1	Label-Emission				
1044	691658	1	Screw-Crankshaft Extension				
1051	691265	1	Ring-Retaining				
1070	690372	1	Screw				
1265	697125	1	Support-Housing, Blower				
1267	697135	1	Latch-Blower Housing				
1279	690960	1	Screw				

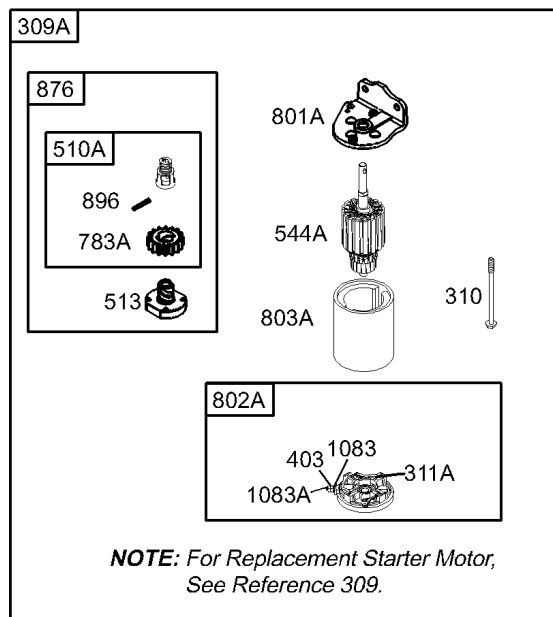
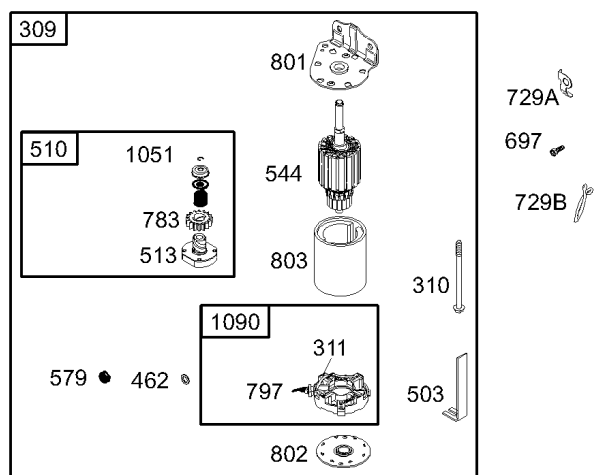


Starter Assembly

Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description
7309	693551	1	Motor-Starter
7309A		1	Motor-Starter(For Replacementstarter Motor, See Ref.309)
7310	690323	1	Bolt
7311	497608	1	Brush Set
7311A	395538	1	Brush Set
7403	690288	1	Washer (End Cap)
7462	691261	1	Washer
7503	691532	1	Strap-Starter
7510	693699	1	Drive-Starter
7510A	495878	1	Drive-Starter
7513	692024	1	Clutch-Drive
7544	692034	1	Armature-Starter
7544A	390837	1	Armature-Starter
7579	691029	1	Nut
7697	690372	1	Screw
7729A	691224	1	Clip-Wire
7729B	694123	1	Clip-Wire
7783	693713	1	Gear-Pinion
7783A	693059	1	Gear-Pinion
7797	693167	1	Nut
7801	691283	1	Cap-Drive
7801A	691429	1	Cap-Drive

Ref	Part No.	Qty.	Description
7802	691286	1	Cap-End
7802A	395537	1	Cap-End
7803	693757	1	Housing-Starter
7803A	398159	1	Housing-Starter
7876	495877	1	Kit-Gear
7896	691641	1	Pin-Drive Retainer
71051	691265	1	Ring-Retaining
71090	691293	1	Retainer-Brush
71083	690958	1	Nut
71083A	691626	1	Nut (End Cap)

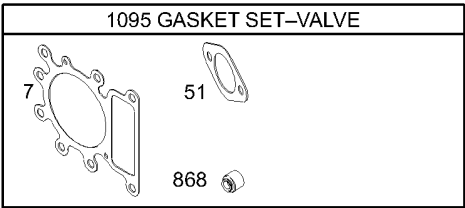
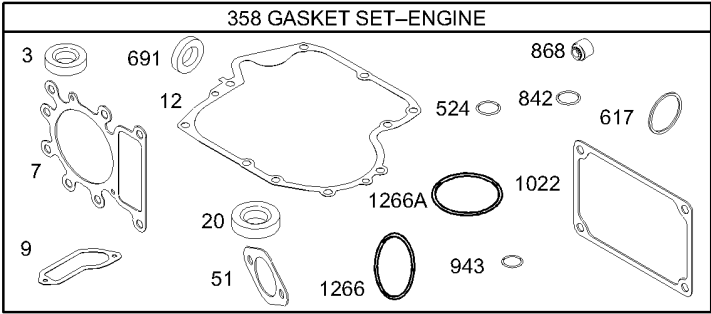


Assemblies include all parts shown in frames.

Gasket Assembly

Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description				
373	391086	1	Seal-Oil				
347	692410	1	Gasket-Cylinder Head				
7							
379	697109	1	Gasket-Breather				
3712	697110	0	Gasket-Crankcase				
3720	690947	1	Seal-Oil				
3451	692137	1	Gasket-Intake				
56							
7358	697191	1	Gasket Set-Engine				
35617	692138	1	Seal				
7							
37524	691032	1	Seal				
37691	692407	1	Seal-Shaft, Governor				
37842	691031	1	Seal-O Ring				
34868	690968	1	Seal-Valve				
7							
37943	690589	1	Seal-O Ring				
371022	272475	1	Gasket-Cover, Rocker				
71095	691581	1	Valve Gasket Set				
351266	691917	1	Seal-O Ring				
7							
351266A	697123	1	Seal-O Ring				
7							

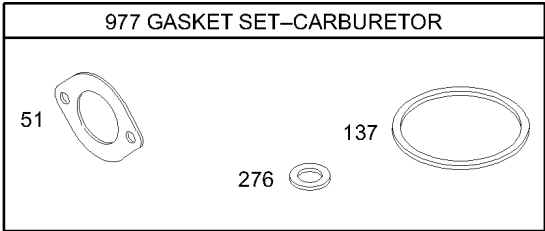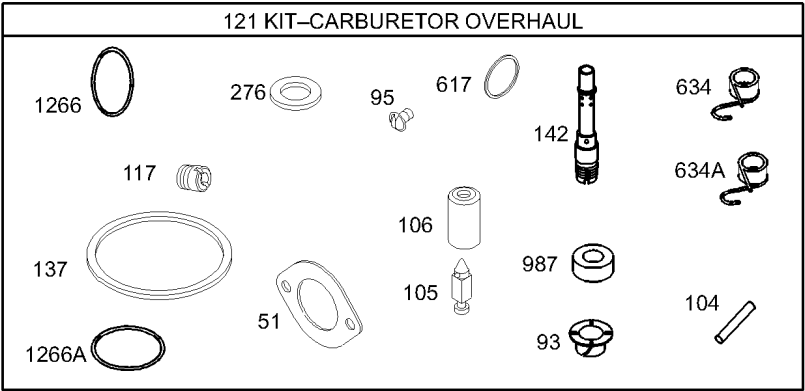

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description				
3451 56	692137	1	Gasket-Intake				
5793	690602	1	Bushing-Shaft, Throttle				
5795	691636	1	Screw				
57104	690525	1	Pin-Hinge, Float				
57105	231855	1	Valve-Needle, Float				
57106	690577	1	Seat-Inlet				
57117	694352	1	Jet-Main (Standard)				
7121	697241	1	Carburetor Overhaul Kit				
56137 7	281165	1	Gasket-Bowl, Float				
57142	697140	1	Nozzle-Carburetor				
56276 7	692255	1	Washer-Sealing				
55617 7	692138	1	Seal				
57634	690801	1	Spring / Seal ASM				
57634A	690802	1	Spring / Seal ASM				
7977	690192	1	Carburetor Gasket Set				
57987	691326	1	Seal-Shaft, Throttle				
551266 7	691917	1	Seal-O Ring				
551266A 7	697123	1	Seal-O Ring				

Attachments and Accessories

For 71286 - XL 440H Lawn Tractor

Product Name	Model/Part
Counterweight Kit	100-6230
8 Inch Rear Wheel Weight Kit	59159
11.0 cu. ft. Vac Bagger	79102
42 Inch Snow Blade	79150
44 Inch Baffle Kit	79174
10 cu. ft. Dump Cart	79901
Snow Cab	79912
Sunshade	79913
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
Tractor Rack	79990
Tire Chain Kit	82722
Snow Blade Completing Package	93-3806
Tower Kit	98-9880

NOTES

