




MODEL NO. 30156-1000001 & UP

PARTS CATALOG

12.5 H.P. COMMERCIAL WALK MOWER

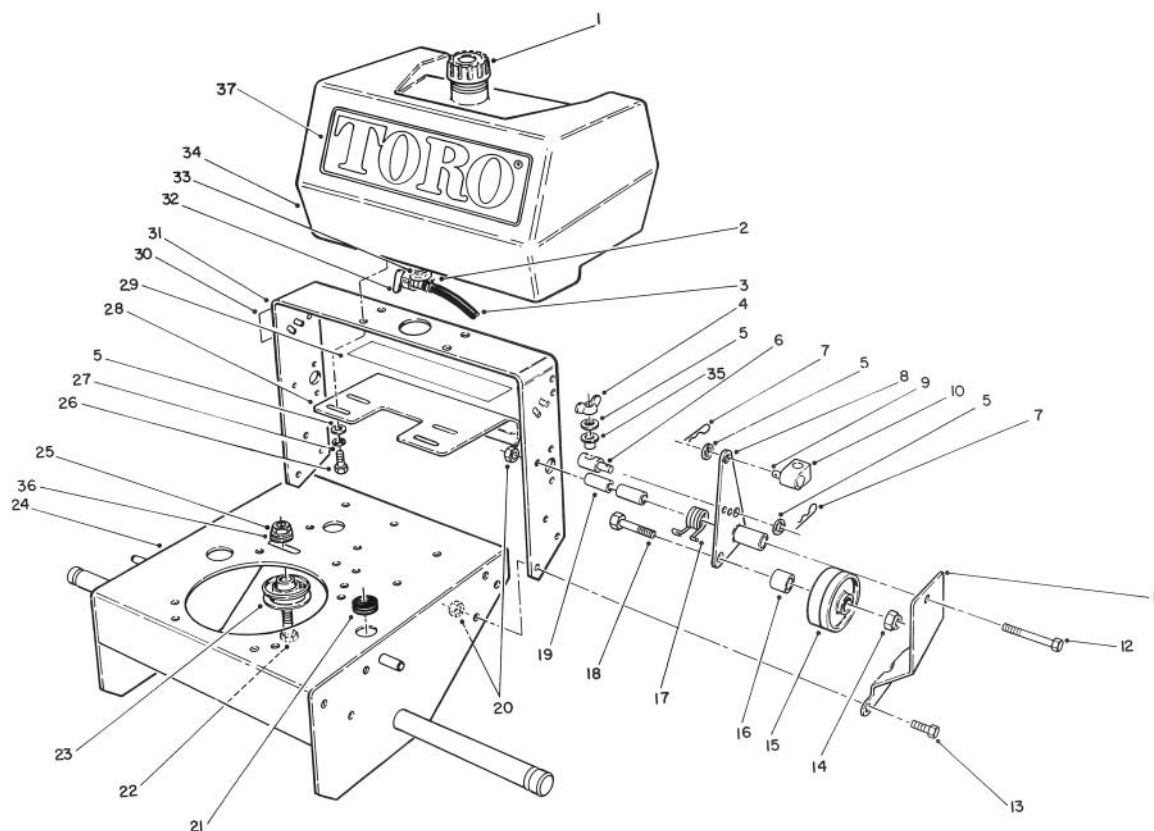


C-0505

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	55-3570	Cap - Fuel Tank	1	16	51-4490	Spacer - Idler Wheel	2
2	2412-98	Clamp - Fuel line	1	17	51-4380	Spring - Torsion L.H.	1
3	47-2964	Hose - Fuel	1	*	51-4370	Spring - Torsion R.H.	1
4	32103-25	Nut - Wing	2	18	51-4450	Screw - Leveler	2
5	3256-23	Washer - Flat	10	19	74-0040	Spacer - Pivot Idler	4
6	68-9690	Fitting - Rod	2	20	3296-39	Nut - Lock	8
7	3290-307	Pin - Cotter	4	21	237-124	Grommet	1
8	74-0220	Idler - Bracket L.H.	1	22	323-9	Screw - Hex. Hd. Cap	1
*	74-0230	Idler - Bracket R.H.	1	23	51-4810	Pulley - Idler	1
9	283-6	Pin - Clevis	2	24	74-0530	Frame	1
10	74-0521	Fitting - Rod	2	25	32128-21	Nut - Hex. Flange	1
11	67-6380	Bracket - Support L.H.	1	26	322-4	Screw - Hex. Hd. Cap	4
*	67-6370	Bracket - Support R.H.	1	27	3253-4	Washer - Lock	4
12	323-16	Screw - Hex. Hd. Cap	2	28	66-7400	Plate - Control	1
13	323-6	Screw - Hex. Hd. Cap	6	29	82-7750	Decal - Ground Speed	1
14	3296-23	Nut - Lock	2	30	74-0490	Decal - Fuel Shut Off	1
15	51-4480	Idler - Wheel	2	31	74-0360	Frame - Rear	1

*Not Illustrated

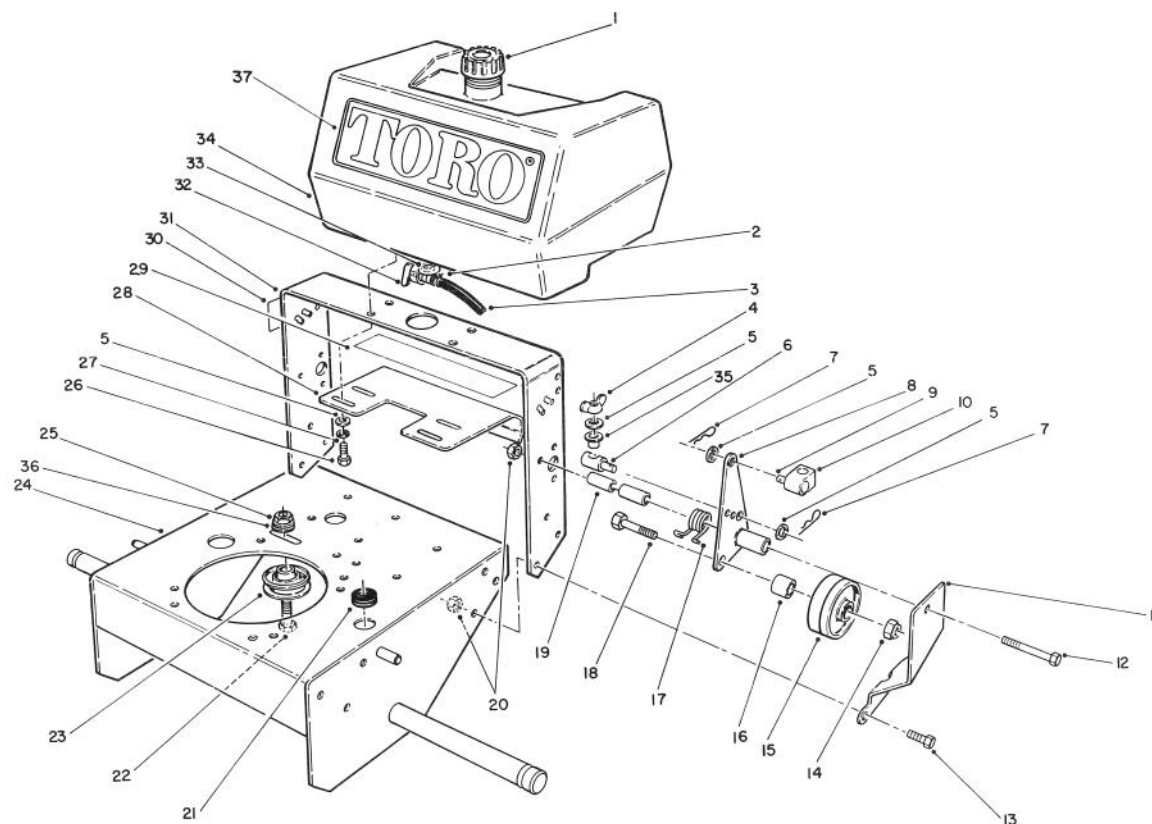


C-0505

FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
32	74-0510	Valve - Fuel	1
33	237-7	"O" Ring	1
34	82-8440	Tank - Fuel	1
35	52-2890	Bushing	2


Ref. No.	Part No.	Description	No. Used
36	3256-24	Washer - Flat	1
37	82-2370	Decal - Fuel Tank	1

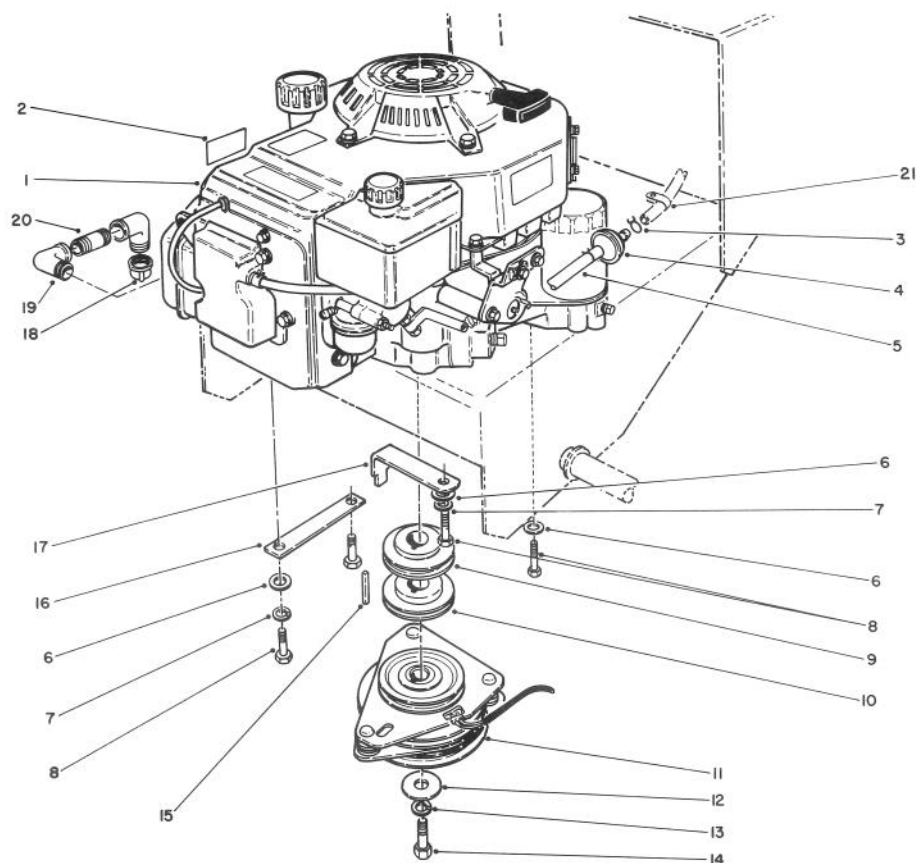

C-0709

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Engine	1	12	44-8160	Washer - Clutch	1
2	63-8440	Decal - Hot	1	13	3253-22	Washer - Lock	1
3	2412-98	Clamp - Fuel Filter	3	14	57-6360	Screw - Hex. Hd. Cap	1
4	56-6360	Filter - Fuel	1	15	5-1336	Key - Crankshaft	1
5	47-2964	Line - Fuel	1	16	74-0930	Guard - Pulley	1
6	3256-23	Washer - Flat	3	17	51-4540	Retainer - Clutch	1
7	3253-4	Washer - Lock	3	18	288-4	Cap - Pipe	1
8	57-6380	Screw - Hex. Hd. Cap	4	19	74-0950	Elbow	2
9	74-0060	Sheave - Upper Half	1	20	289-51	Nipple	1
10	74-0050	Sheave - Lower Half	1	21	2412-87	Clamp	1
11	54-3200	Clutch Assembly	1				

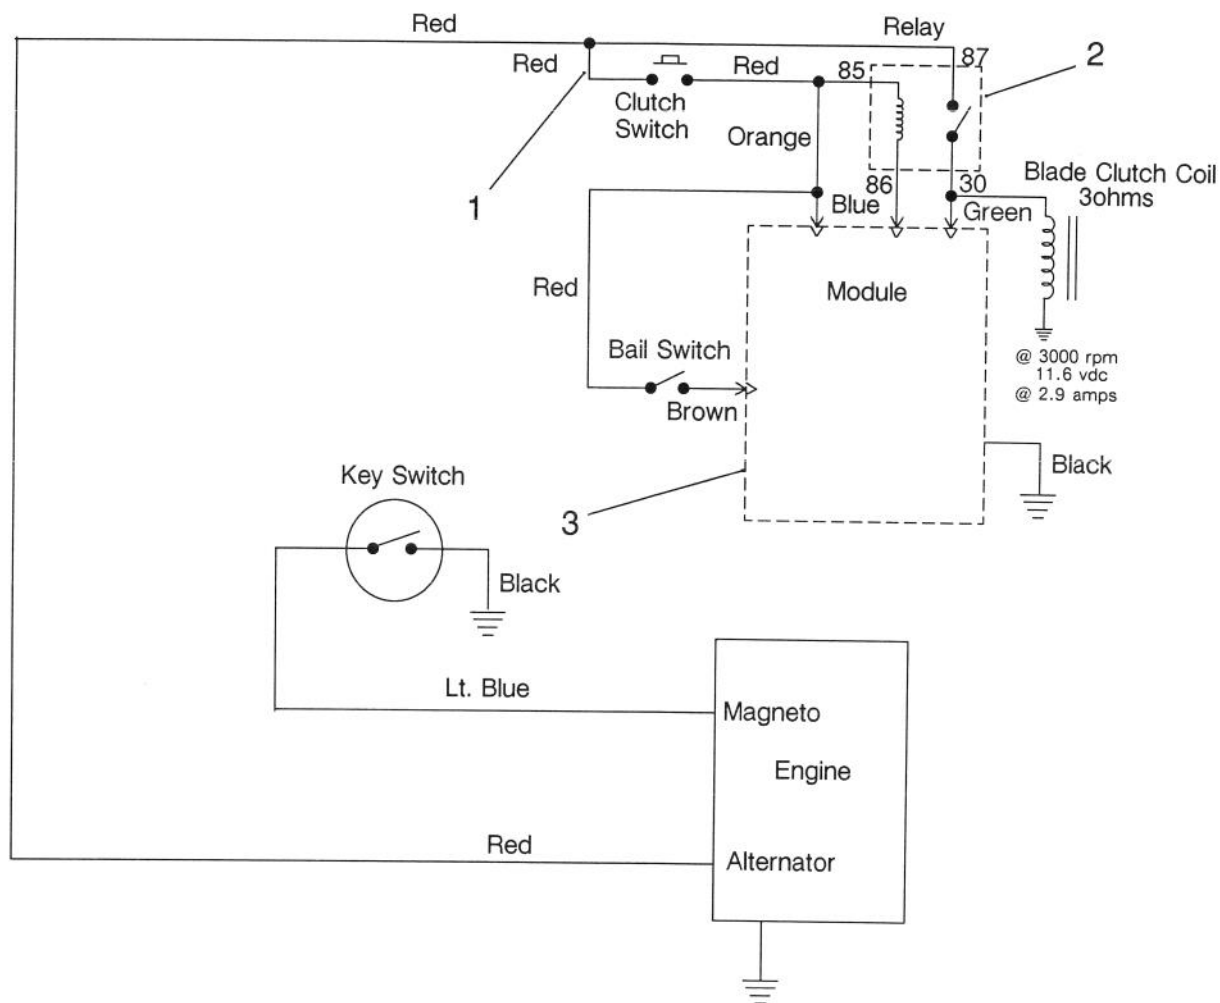


ELECTRIC SCHEMATIC

C-0748

Ref. No.	Part No.	Description	No. Used
1	82-2260	Wire Harness	1
2	63-7540	Relay	1


Ref. No.	Part No.	Description	No. Used
3	82-3850	Module - Interlock	1

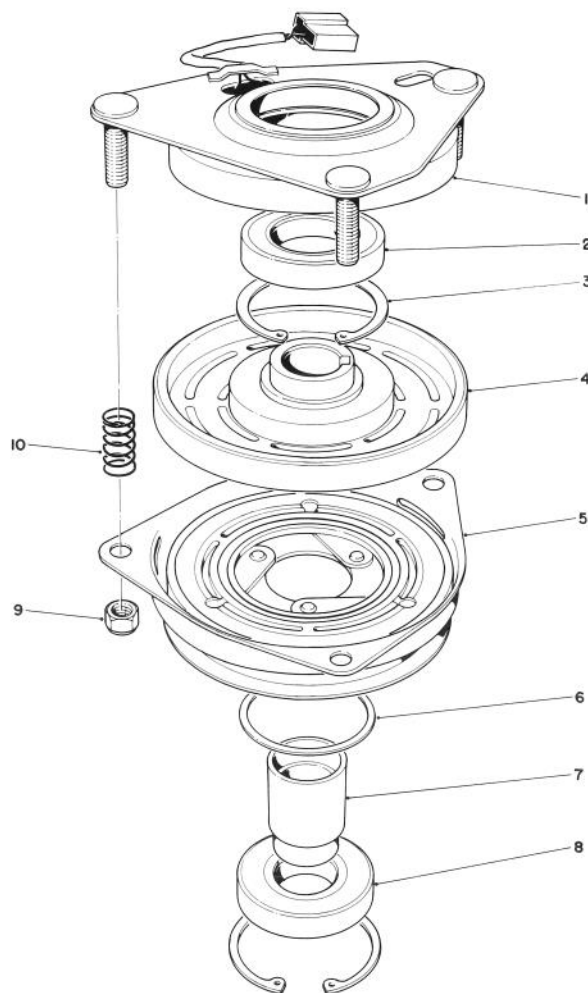

T-0080

CLUTCH ASSEMBLY NO. 54-3200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	44-8350	Field Assembly (Incl. Ref. #2 & 3)	1	6	44-8330	Spacer - Pulley Bearing	1
2	251-292	Bearing - Field	1	7	44-8340	Collar - Bearing	1
3	44-8310	Ring - Retaining	2	8	251-291	Bearing - Pulley	1
4	44-8360	Field Coil, Rotor & Bearing Assembly (Incl. Ref. #1)	1	9	3296-5	Nut - Lock	3
5	55-7410	Armature & Pulley Assembly (Incl. Ref. #3, 6, 7, & 8)	1	10	44-8320	Spring	3

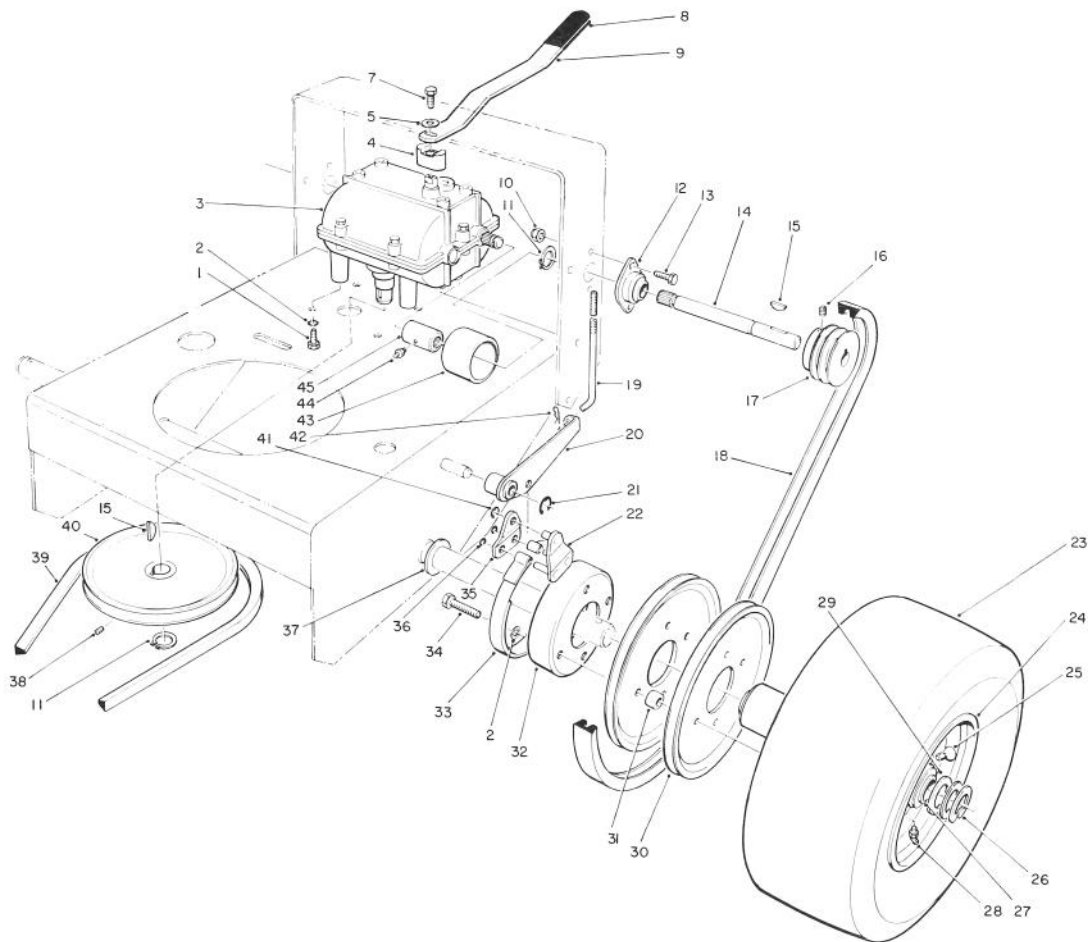


C-0502

AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-2	Screw - Hex. Hd. Cap	4
2	3253-4	Washer - Lock	12
3	74-0610	Transmission	1
4	72-2190	Mount - Shift Lever	1
5	7-5461	Spacer	1
7	329-10	Screw - Hex. Hd. Cap	1
8	47-1970	Grip - Engagement	1
9	74-0320	Lever - Shift	1
10	3296-42	Nut - Lock	4
11	32120-64	Ring - Retaining	3
12	51-4270	Bearing - Shaft Extension	2
13	321-4	Screw - Hex Hd. Cap	4
14	51-4240	Shaft - Extension R.H.	1
*	51-4250	Shaft - Extension L.H.	1
15	3257-5	Key - Woodruff	3
16	3245-3	Screw - Socket Hd. Set	2
17	74-0480	Pulley - Drive	2
18	51-4291	Belt - Drive	2
19	51-4580	Rod - Brake	2
20	67-6420	Brake Arm L.H.	1
*	67-6400	Brake Arm R.H.	1
21	32151-40	Ring - Retaining	2
22	51-4650	Link - Brake	2

Ref. No.	Part No.	Description	No. Used
23	231-137	Tire	2
24	242-81	Rim	2
25	232-27	Valve Stem	2
26	32151-91	Ring - Retaining	2
27	251-321	Bearing	4
28	302-57	Fitting - Grease	2
29	10-8110	Washer - Flat	A/R
30	51-4160	Pulley - Wheel	4
31	51-4170	Spacer - Pulley	8
32	51-4180	Drum - Brake	2
33	51-4700	Brake Band Assembly	2
34	322-7	Screw - Hex. Hd. Cap	8
35	51-4660	Plate - Link Brake	2
36	32151-72	Ring - Retaining	4
37	51-4230	Washer - Wheel	2
38	3241-5	Screw - Socket Hd. Set	1
39	26-9670	Belt - Traction	1
40	51-4190	Pulley - Driven	1
41	32151-56	Ring - Retaining	2
42	3290-307	Pin - Cotter	2
43	51-4220	Guard - Coupler	2
44	302-5	Fitting - Grease	2
45	51-4260	Coupler	2


*Not Illustrated

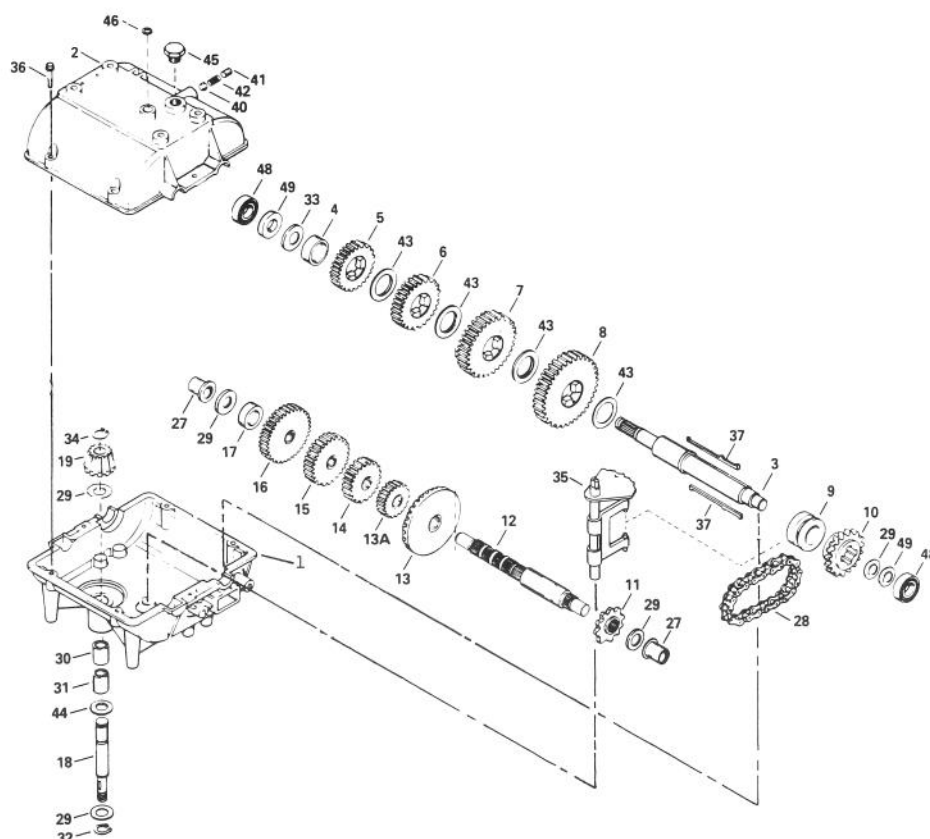

PEERLESS TRANSMISSION MODEL NO. 700-039

Ref. No.	Part No.	Description	No. Used
1	770090	Case - Transmission	1
2	772099	Cover - Transmission	1
3	776289A	Shaft - Output & Brake	1
4	786072	Spacer	1
5	778123A	Gear - Spur (25 Teeth)	1
6	778250	Gear - Spur (27 Teeth)	1
7	778124A	Gear - Spur (30 Teeth)	1
8	778125	Gear - Spur (35 Teeth)	1
9	784266	Collar - Shift	1
10	786083	Sprocket (18 Teeth)	1
11	786082	Sprocket (9 Teeth)	1
12	776134	Shaft - Counter	1
13	778154	Gear - Bevel (42Teeth)	1
13A	778136	Gear - Spur (15 Teeth)	1
14	778126A	Gear - Spur (20 Teeth)	1
15	778249	Gear - Spur (23 Teeth)	1
16	778127A	Gear - Spur (25 Teeth)	1
17	786071	Spacer	1
18	776135	Shaft - Input	1
19	778153	Pinion - Bevel Input	1
27	780105A	Bushing - Flanged	2

Ref. No.	Part No.	Description	No. Used
28	786081	Chain - Roller (No. 41 Chain 24 Links)	1
29	780072	Washer - Thrust	5
30	780086	Bearing - Needle	1
31	7800142	Bearing - Needle	1
32	792035	Ring - Retaining	1
33	780139	Washer - Thrust	1
34	788040	Ring - Retaining	1
35	784267	Rod & Fork Ass'y - Shift	1
36	792073	Screw - Flanged Hd. Thread Forming	6
37	792089A	Key	4
40	792077	Ball - Steel	1
41	792078	Screw - Set	1
42	792079	Spring	1
43	780108	Washer - Thrust	4
44	792001	"O" Ring	2
45	792074	Plug - Threaded	1
46	788069	Seal - Square Cut	1
48	780092	Bearing - Ball	2
49	780065	Washer - Thrust	2

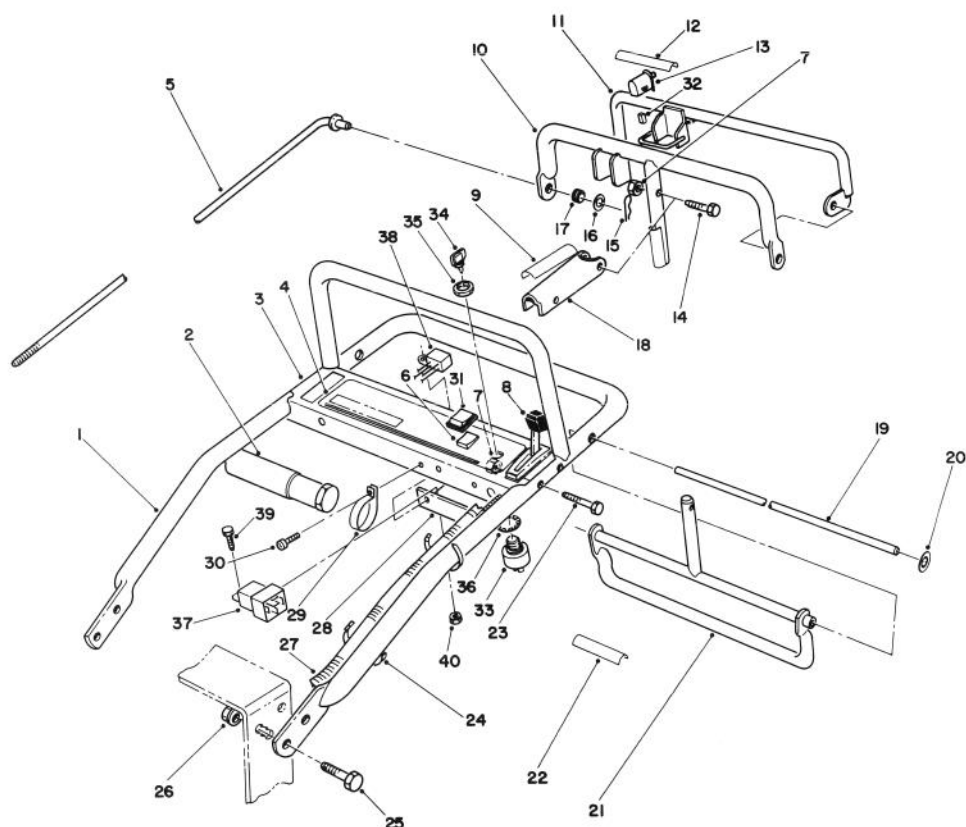


HANDLE ASSEMBLY

C-0686

Ref. No.	Part No.	Description	No. Used
1	67-6440	Handle - Upper	1
2	74-0720	Tube - Manual	1
3	82-2180	Panel - Control	1
4	82-7760	Decal - Proline	1
5	82-7632	Rod - Control	2
6	82-2300	Switch - Clutch	1
7	3296-2	Nut - Lock	5
8	74-0631	Control - Throttle	1
9	52-2010	Decal - Parking Brake	1
10	82-7690	Bar - Control	1
11	82-7680	Bail - Handle	1
12	82-2290	Decal - Control Bar	1
13	82-2190	Switch - Bail	1
14	32105-1	Screw - Hex. Hd. Machine	1
15	3290-307	Pin - Cotter	2
16	3256-24	Washer - Plain	2
17	237-141	Grommet - Rubber	2
18	51-4850	Lever - Brake, Parking	1
19	74-0470	Rod - Pivot	1
20	32151-80	Ring - Push On	2
21	74-0380	Control - Pivot	1

Ref. No.	Part No.	Description	No. Used
22	82-2280	Decal - Reverse Handle	1
23	32105-14	Screw - Hex. Hd. Machine	4
24	3290-378	Cable Tie	2
25	3234-11	Screw - Hex. Hd. Cap	4
26	32128-21	Nut - Hex. Flange	4
27	82-2260	Wire Harness	1
28	57-5811	Panel - Bottom	1
29	2412-120	"R" Clamp	2
30	32104-76	Screw - Self Tapping	4
31	82-3820	Boot - Switch	1
32	218-595	Connector - Body	1
33	29-5560	Switch - On/Off (Incl. Ref. #34-36)	1
34	63-8360	Key	2
35	218-461	Nut	1
36	3254-5	Washer - Lock	1
37	63-7590	Relay	1
38	82-3850	Module	1
39	321-2	Screw - Hex Hd. Cap	2
40	3296-42	Nut - Lock	2

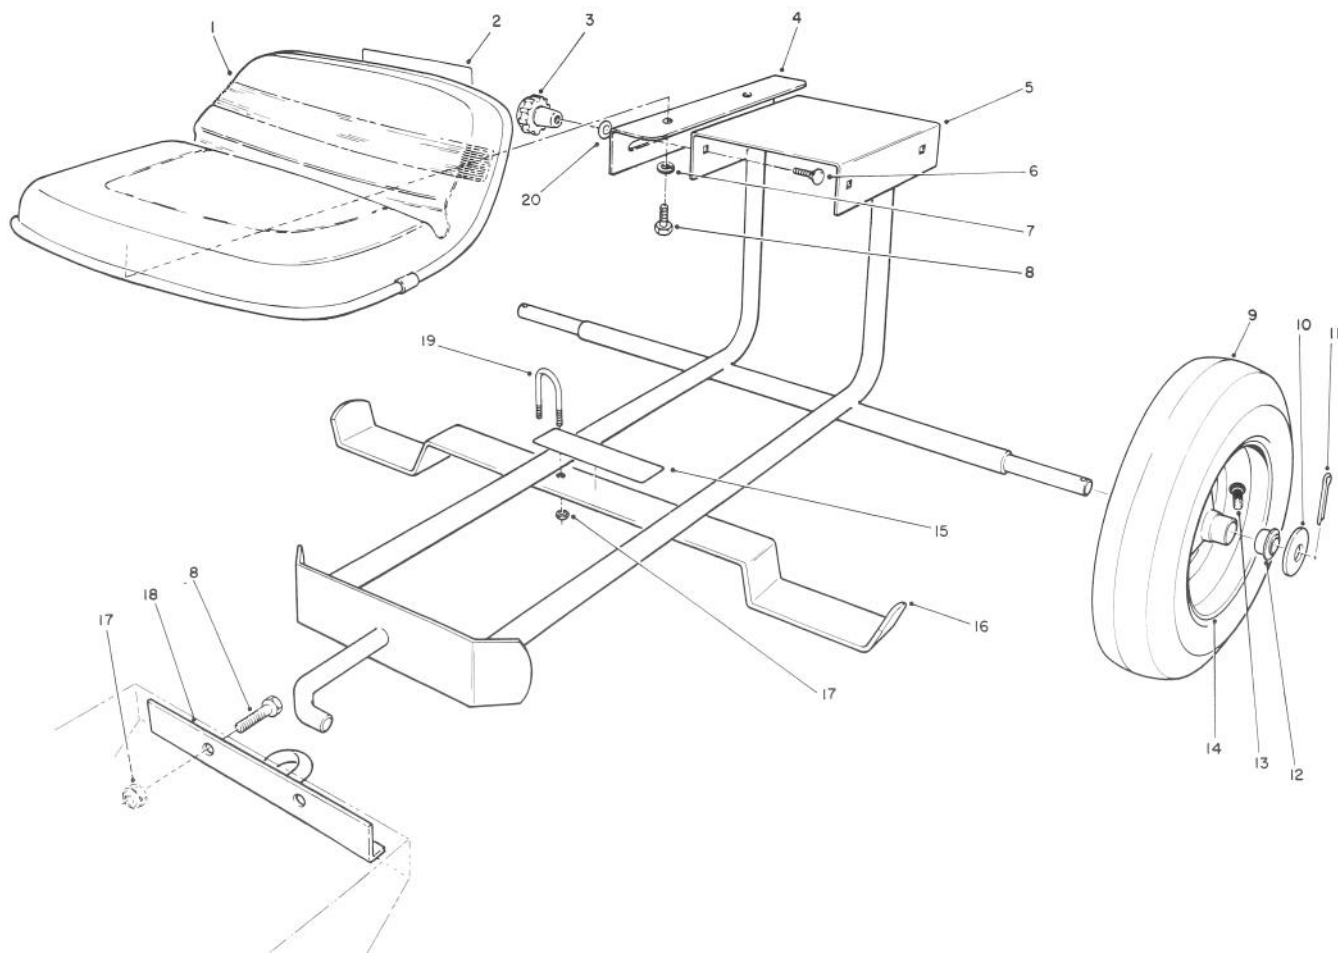

T-0518


SULKY KIT MODEL NO.30122 (Optional)

Ref. No.	Part No.	Description	No. Used
1	76-1410	Seat Assembly	1
2	62-7400	Decal - Toro	1
3	19-4050	Knob	4
4	76-4670	Bracket - Seat Adjustment	2
5	76-4740	Frame Assembly	1
6	3230-2	Bolt - Carriage	4
7	3255-8	Washer - Lock	4
8	322-3	Screw - Hex.Hd. Cap	6
9	55-3720	Tire	2
10	3256-39	Washer - Flat	2


Ref. No.	Part No.	Description	No. Used
11	3272-12	Pin - Cotter	2
12	55-3740	Bearing - Wheel	4
13	55-3730	Valve Stem/Cap	2
14	55-3750	Wheel	2
15	55-9900	Decal - Sulky	1
16	55-9840	Bracket - Footrest	1
17	3296-29	Nut - Lock	6
18	68-4190	Bracket - Hitch	1
19	60-9350	"U" Bolt	2
20	3290-456	Washer - Belleville	4

ENGINE – KOHLER MODEL CV12.5T SPEC. NO. 1254


Group 1 CRANKSHAFT

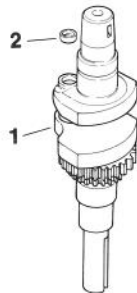

Group 2 CRANKCASE

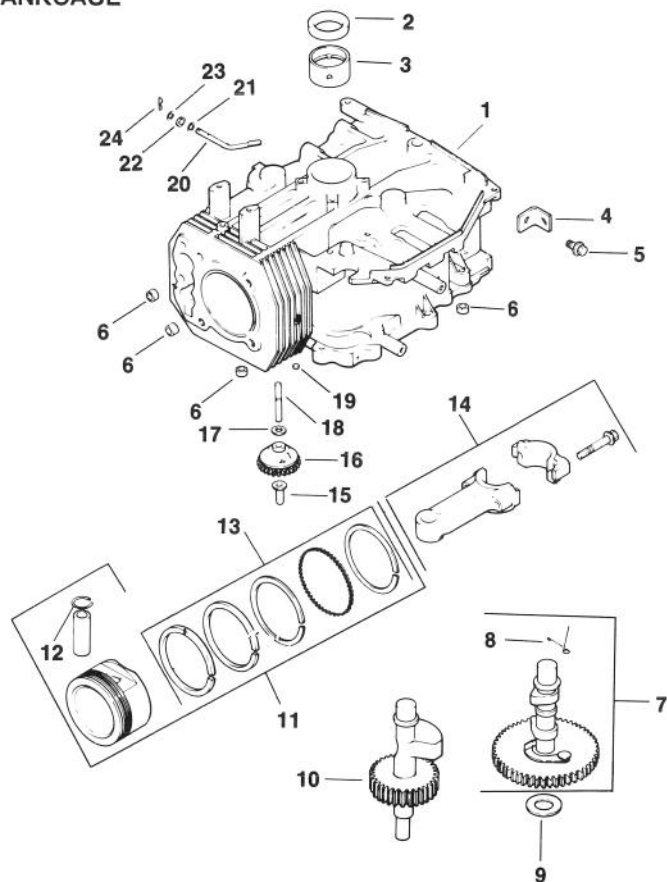

Group 3 OIL PAN/LUBRICATION

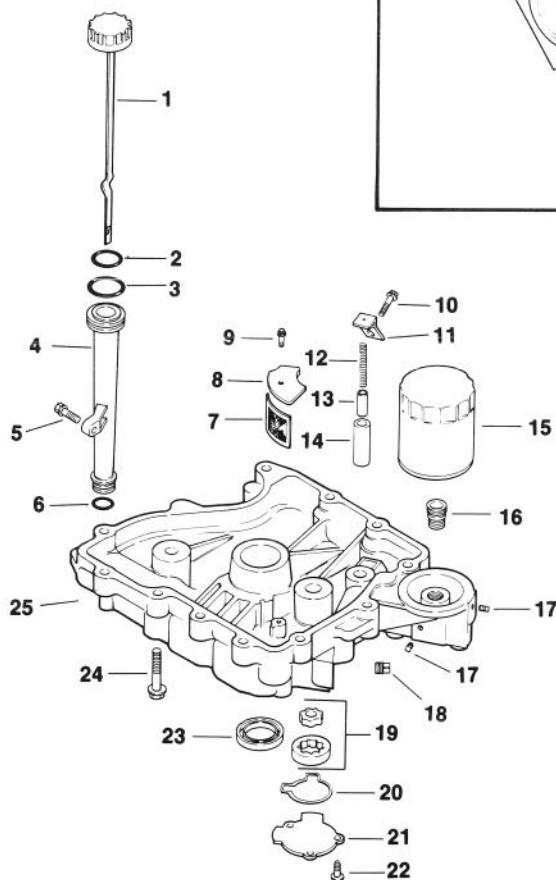


ENGINE - KOHLER MODEL CV12.5T SPEC. NO. 1254


Ref. No.	Part No.	Description	No. Used
		CRANKSHAFT - Group 1	
1	12 014 02	Crankshaft	1
2	12 139 01	Plug – Cup	1
		CRANKCASE - Group 2	
1		Block – Cylinder (Use: Short Block 12 522 02)	1
2	12 032 03	Seal – Crankshaft	1
3	12 030 01	Bearing – Crankshaft (Std.) (Flywheel End)	1
	12 030 02	Bearing – Crankshaft (.25)	1
	12 030 03	Bearing – Crankshaft (.50)	1
4	12 445 02	Strap – Lifting	1
5	SM-0839025	Screw – Lifting Strap	1
6	12 380 03	Dowel – Locating	4
7	12 010 02	Camshaft Assembly	1
8	12 089 18	Spring – Actuating	1
9	12 422 08	Shim – Camshaft	1
	12 422 02	Shim – Camshaft	A.R.
	12 422 10	Shim – Camshaft	A.R.
	12 422 11	Shim – Camshaft	A.R.
	12 422 12	Shim – Camshaft	A.R.
	12 422 06	Shim – Camshaft	A.R.
	12 422 07	Shim – Camshaft	A.R.
10	12 144 04	Shaft – Balance	1
11	12 874 01	Piston w/Ring Set (Std.)	1
	12 874 02	Piston w/Ring Set (.25)	1
	12 874 03	Piston w/Ring Set (.50)	1
12	12 018 02	Retainer – Piston Pin	2
13	12 108 01	Ring Set (Std.)	1
	12 108 02	Ring Set (.25)	1
	12 108 03	Ring Set (.50)	1
14	12 067 01	Connecting Rod (Std.)	1
	12 067 02	Connecting Rod (.25)	1
15	12 380 01	Pin – Governor Regulating	1
16	12 043 05	Gear – Governor Assembly	1
17	SM-0631005	Washer – Governor Gear Thrust	1
18	12 144 02	Shaft – Governor Gear	1
19	52 139 09	Plug – Cup	1
20	12 144 01	Shaft – Governor Cross	1
21	X-25-102	Washer – Plain	1
22	SM-0631015	Washer – Governor Shaft	1
23	12 032 01	Seal – Governor Cross Shaft	1
24	12 380 04	Pin – Governor Hitch	1

Ref. No.	Part No.	Description	No. Used
		OIL PAN/LUBRICATION - Group 3	
1	12 038 01	Dipstick Assembly	1
2	12 153 03	O-Ring – Dipstick	1
3	12 153 02	O-Ring – Upper Oil Fill Tube	1
4	12 123 04	Tube – Oil Fill	1
5	SM-0545020	Screw – Oil Fill Tube	1
6	12 153 01	O-Ring – Lower Oil Fill Tube	2
7	12 162 02	Screen – Oil Pick-up	1
8	12 096 03	Cover – Oil Pick-up Screen	1
9	SM-0545016	Screw – Screen Cover	1
10	M-1051025	Screw – Oil Pump Relief Valve Bracket	1
11	12 126 02	Bracket – Oil Pump Relief Valve	1
12	12 089 03	Spring – Oil Pump Relief Valve	1
13	12 462 01	Piston – Oil Pump Relief Valve	1
14	12 208 01	Body – Oil Pump Relief Valve	1
15	52 050 02	Filter – Oil	1
16	12 136 01	Adapter – Oil Filter	1
17	X-75-1	Plug – Sq. Hd. Solid	2
18	X-75-10	Plug – Sq. Hd. Solid	2
19	12 393 01	Pump – Oil Assembly	1
20	12 032 04	O-Ring – Oil Pump Cover	1
21	12 096 02	Cover – Oil Pump	1
22	SM-0545016	Screw – Oil Pump Cover	3
23	12 032 03	Seal – Oil (P.T.O. End)	1
24	SM-0839045	Screw – Oil Pan	12
25	12 199 09	Pan – Oil	1

Group 4
CYLINDER HEAD/VALVE/BREATHER

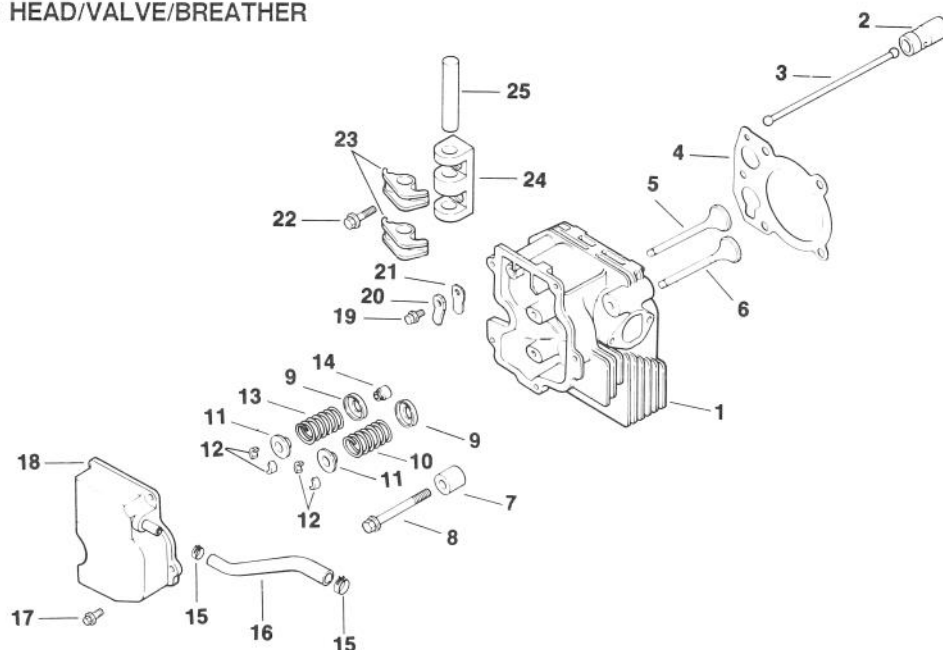

Group 5
IGNITION/ELECTRICAL

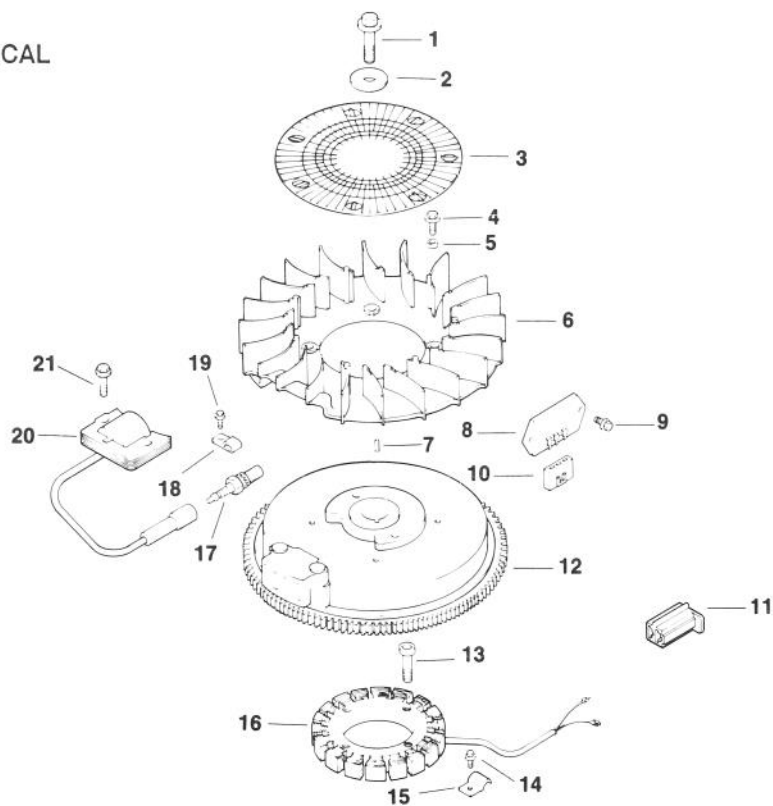


ENGINE - KOHLER MODEL CV12.5T SPEC. NO. 1254 (Cont'd.)

Ref. No.	Part No.	Description	No. Used
		CYLINDER HEAD/VALVE/ BREATHER - Group 4	
1	12 318 01	Cylinder Head	1
2	12 351 01	Lifter – Valve	2
3	12 411 01	Rod – Push	2
4	12 041 04	Gasket – Cylinder Head	1
5	12 017 01	Valve – Intake (Std.)	1
	12 017 02	Valve – Intake (.25)	1
6	12 016 01	Valve – Exhaust (Std.)	1
	12 016 02	Valve – Exhaust (.25)	1
7	12 112 04	Spacer – Head Bolt Exhaust Port	1
8	M-1040080	Screw – Cylinder Head	5
9	52 018 01	Retainer – Spring	2
10	12 089 01	Spring – Valve Exhaust	1
11	12 173 01	Cap – Valve Spring	2
12	12 755 03	Kit – Retainer	2
13	12 089 15	Spring – Valve Intake	1
14	12 032 02	Seal – Valve Stem	1
15	X-426-9	Clamp – Hose	2
16	12 326 03	Hose – Breather	1
17	SM-0645020	Screw – Valve Cover	3
18	12 096 07	Cover – Valve w/Nipple	1
19	SM-0545010	Screw – Breather Reed Ret.	1
20	12 018 01	Retainer – Breather Reed	1
21	12 402 01	Reed – Breather	1
22	SM-0642025	Screw – Rocker Bridge	2
23	12 186 01	Arm – Rocker	2
24	12 126 05	Bridge – Rocker Arm	1
25	12 144 03	Shaft – Rocker Arm	1
		NOT ILLUSTRATED	
	12 755 02	Kit – Cylinder Head	1


Ref. No.	Part No.	Description	No. Used
		IGNITION/ELECTRICAL - Group 5	
1	M-1040045	Screw – Flywheel Mounting	1
2	12 468 03	Washer – Flywheel Mtg. Screw	1
3	12 162 03	Screen – Grass	1
4	M-0651016	Screw – Fan Mounting	4
5	12 112 01	Spacer – Fan	4
6	12 157 01	Fan	1
7	X-42-15	Key	1
8	12 403 01	Rectifier – Unregulated	1
9	M-0651016	Screw – Rectifier-Regulator	2
10	236602	Connector – Rectifier-Regulator	1
11	41 155 03	Connector	1
12	12 025 08	Flywheel Assembly	1
13	M-0548025	Screw – Stator Mounting	4
14	SM-0545010	Screw – Stator Harness Clip	1
15	12 154 02	Clip – Stator Harness	1
16	41 085 07	Stator – 15 amp.	1
17	12 132 02	Spark Plug	1
18	X-728-1	Clip – Kill Lead	1
19	SM-0545010	Screw – Lead Clip	1
20	12 584 02	Module – Ignition	1
21	SM-0545020	Screw – Ignition Module	2
		NOT ILLUSTRATED	
	25 518 05	Lead – Black, Rectifier to Connector (5" - 14 Gauge – Uninsulated Push on Tab Terminals)	1
	12 518 01	Lead – White, Ground to Kill	1

ENGINE – KOHLER MODEL CV12.5T SPEC. NO. 1254


Group 6 BLOWER HOUSING & BAFFLES

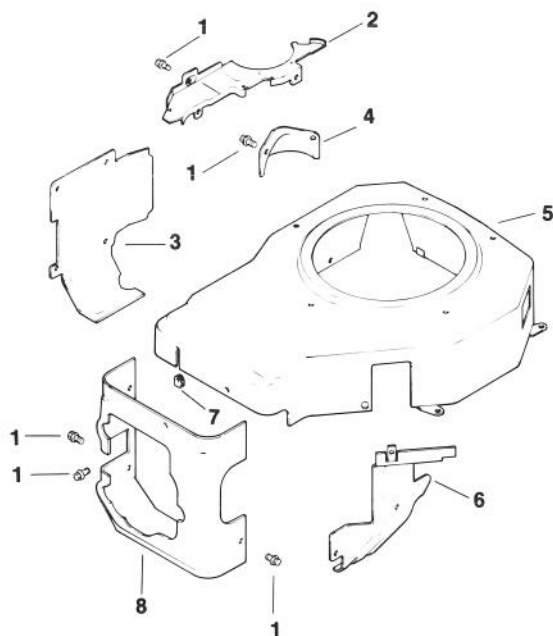

Group 7 STARTING SYSTEM

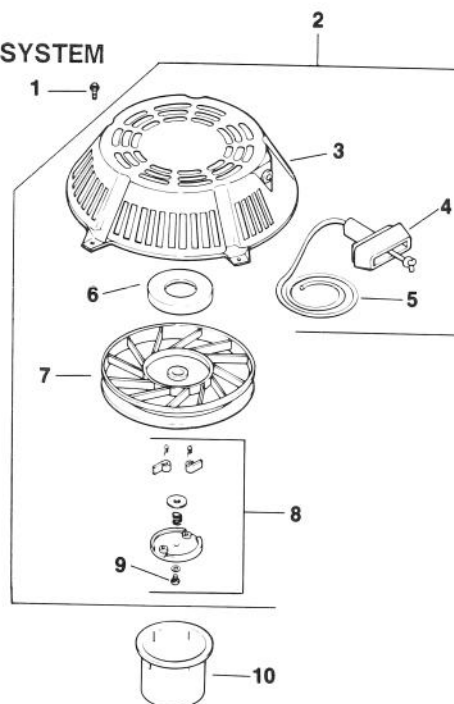

Group 8 FUEL SYSTEM

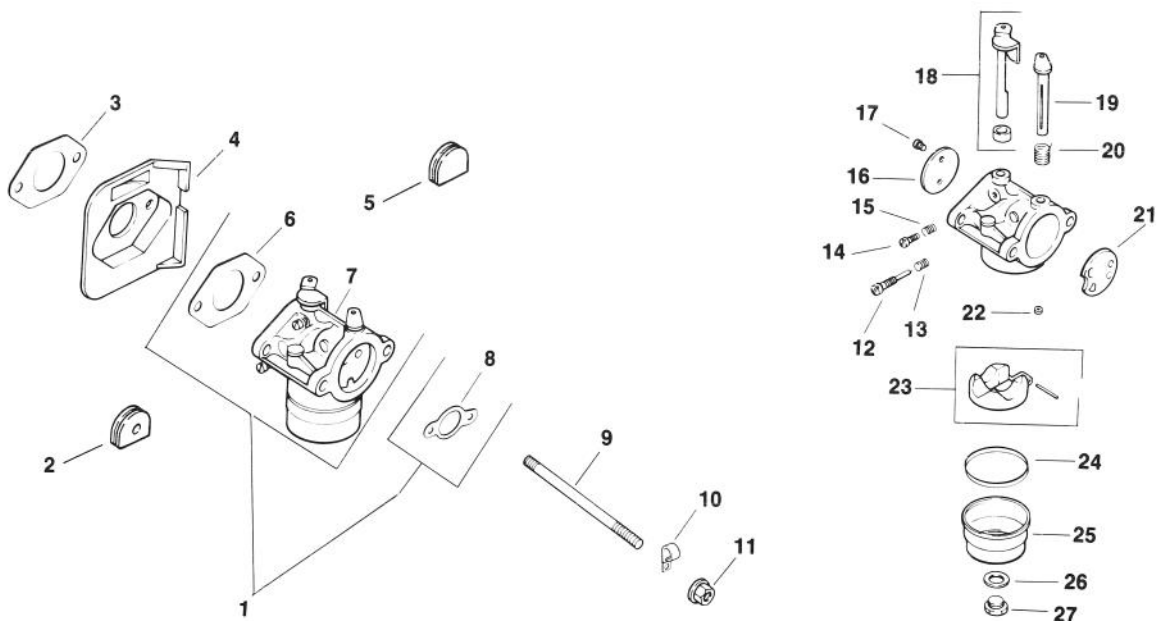


ENGINE - KOHLER MODEL CV12.5T SPEC. NO. 1254 (Cont'd.)

Ref. No.	Part No.	Description	No. Used
		BLOWER HOUSING & BAFFLES - Group 6	
1	SM-0545010	Screw – Mounting	14
2	12 146 07	Plate – Blower Housing	1
3	12 063 01	Baffle – Cylinder Barrel	1
4	12 096 05	Cover – Starter	1
5	12 027 03	Housing – Blower	1
6	12 063 05	Baffle – Carburetor	1
7	12 313 03	Grommet – Blower Housing	1
8	12 063 03	Baffle – Cylinder Head	1
		NOT ILLUSTRATED	
	12 113 02	Decal – Horsepower	1
		STARTING SYSTEM - Group 7	
1	SM-0545010	Screw	5
2	12 165 01	Starter – Retractable Assy. (Incl. Ref. #3-9)	1
3	12 081 01	Housing – Starter	1
4	234452	Handle – Recoil Start	1
5	12 160 01	Rope – Starter	1
6	12 089 06	Spring & Keeper	1
7	12 093 01	Pulley	1
8	12 757 06	Kit – Pawl (Dog) (Incl. Ref. #9)	1
9	41 086 09	Screw – Pozidriv	1
10	15 109 01	Cup – Drive	1


Ref. No.	Part No.	Description	No. Used
		FUEL SYSTEM - Group 8	
1	12 853 11	Kit – Carburetor	1
2	12 313 01	Grommet – Fuel Line	1
3	12 041 01	Gasket – Carburetor	1
4	12 265 01	Deflector – Heat	1
5	12 313 05	Grommet – Blower Housing	1
6	12 041 01	Gasket – Carburetor	1
7	12 053 10	Carburetor Assembly (for information only not available separately)	1
8	12 041 02	Gasket – Air Filter	1
9	M-0629122	Stud – Carburetor	2
10	47 154 01	Clamp – Fuel Line	1
11	SM-0641060	Nut – Carburetor	2
12	12 368 01	Needle – Idle Fuel Adj.	1
13	12 089 09	Spring – Idle Fuel	1
14	12 086 04	Screw – Idle Speed Adj.	1
15	12 089 09	Spring – Idle Speed	1
16	12 146 03	Plate – Throttle	1
17	25 086 27	Screw – Throttle Plate	2
18	12 144 09	Shaft – Throttle w/Lever & Seal	1
19	12 144 08	Shaft – Choke	1
20	12 089 10	Spring – Choke Return	1
21	12 146 02	Plate – Choke	1
22	12 337 01	Jet – Main	1
23	12 757 02	Kit – Float Assembly	1
24	12 041 05	Gasket – Bowl	1
25	12 104 01	Bowl – Fuel	1
26	12 041 06	Gasket – Bowl Retainer Screw	1
27	12 086 05	Screw – Bowl Retainer	
		NOT ILLUSTRATED	
	12 757 01	Kit – Carburetor Repair	1
	12 755 09	Kit – High Altitude	1

ENGINE – KOHLER MODEL CV12.5T SPEC. NO. 1254


Group 9
ENGINE CONTROLS

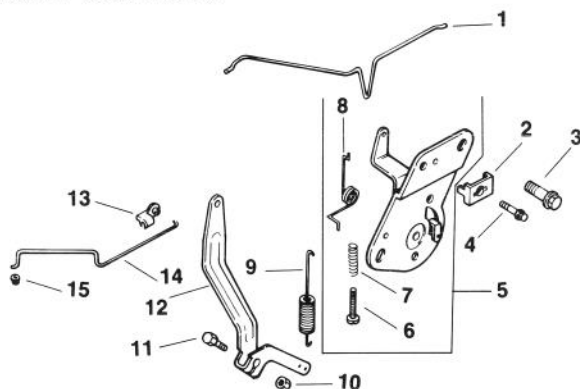

Group 10
AIR INTAKE/FILTRATION

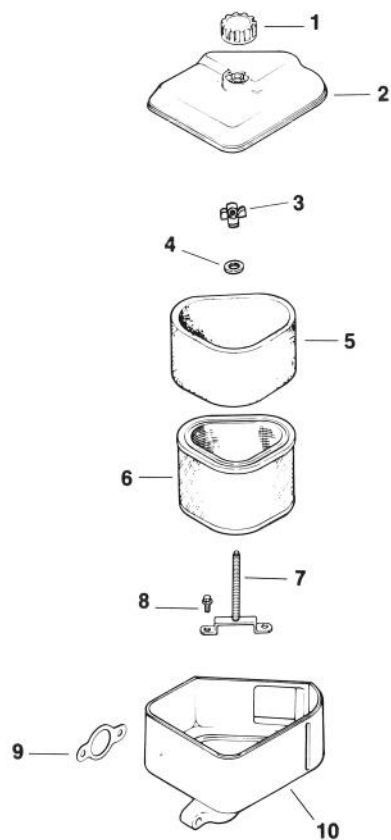

Group 11
EXHAUST

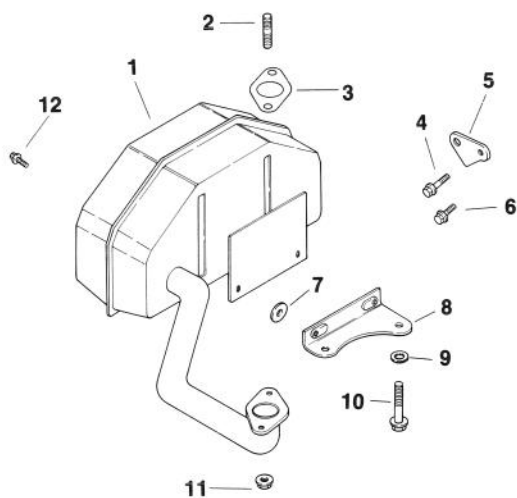

ENGINE - KOHLER MODEL CV12.5T SPEC. NO. 1254 (Cont'd.)

Ref. No.	Part No.	Description	No. Used
		ENGINE CONTROLS - Group 9	
1	12 079 03	Linkage – Choke	1
2	12 237 01	Clamp – Cable	1
3	SM-0545016	Screw – Cable Clamp	1
4	SM-0645020	Screw – Hex. Hd.	2
5	12 536 01	Control – Speed Assembly (Incl. Ref. #6-8)	1
6	SM-0443025	Screw	1
7	12 089 11	Spring – Choke Adj.	1
8	12 089 04	Spring – Choke Return	1
9	12 089 20	Spring – Governor	1
10	SM-0641060	Nut – Governor Arm	1
11	SM-0642025	Screw – Governor Arm	1
12	12 090 05	Lever – Governor	1
13	25 158 09	Bushing	1
14	12 079 01	Linkage – Throttle	1
15	25 158 08	Bushing	1

Ref. No.	Part No.	Description	No. Used
		AIR INTAKE/FILTRATION - Group 10	
1	12 341 01	Knob – Air Cleaner Cover	1
2	12 096 06	Cover – Air Cleaner	1
3	12 100 01	Wing Nut	1
4	X-25-63	Washer – Plain	1
5	12 083 08	Precleaner – Element	1
6	12 083 05	Element – Air Cleaner	1
7	12 086 01	Screw – Mtg. Plate Stud	1
8	12 072 03	Stud – Mounting Plate	1
9	12 041 02	Gasket – Air Cleaner	1
10	12 094 01	Base – Air Cleaner	1
		NOT ILLUSTRATED	
	12 113 04	Decal – Air Cleaner	1
		EXHAUST - Group 11	
1	12 068 03	Muffler	1
2	M-0829036	Stud – Exhaust Manifold	2
3	12 041 03	Gasket – Exhaust Manifold	1
4	SM-0645025	Screw – Lifting Strap	1
5	12 445 01	Strap – Lifting	1
6	SM-0645020	Screw – Valve Cover	1
7	X-25-52	Washer – Plain	2
8	12 126 39	Bracket – Muffler	1
9	12 468 01	Washer – Plain	1
10	M-0840050	Screw – Oil Pan	1
11	SM-0841080	Nut – Muffler	1
12	M-0650012	Screw – Muffler Bracket	2
		NOT ILLUSTRATED	
	12 522 02	Short Block	1
	12 755 01	Gasket Set	1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any

reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO Importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]