


MODEL NO. 30123-1000001 & UP

PARTS CATALOG

## STEERABLE SULKY WIDE AREA MOWERS - PROLINE

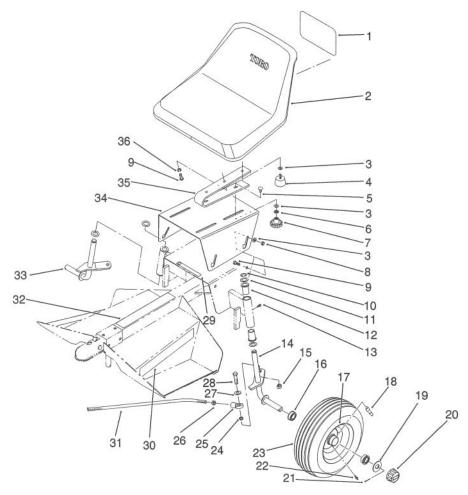


## SEAT AND WHEEL ASSEMBLY

Ref. No.	Part No. Description			
1	62-7400	Decal - Toro	1	
2	76-1410	Seat	1	
3	3256-23	Washer - Flat	10	
4	67-9800	Bumper	2	
5	3230-16	Screw - Carriage	4	
6	3255-8	Washer - Lock, Ext. Tooth	4	
7	19-4050	Knob	4	
8	3296-29	Nut - Lock	4	
9	322-4	Screw - Cap Hex. Hd.	6	
10	32151-48	Ring - Retaining	2	
11	3-6498	Washer - Thrust	4	
12	46-6680	Bushing	4	
13	302-49	Fitting - Grease	2	
14	82-7330	Spindle W.A LH	1	
15	32152-9	Nut - Lock	2	

Ref. No.	Part No.	No. Used	
16	251-210	Bearing - Wheel	4
17	242-60	Rim - Tire	2
18	232-27	Stem - Valve W/cap	2
19	28-2480	Washer	2
20	61-9780	Cap - Hub	2
21	3272-12	Pin - Cotter	2
22	302-5	Fitting - Grease	2
23	231-126	Tire	2
24	62-4420	Spacer	2
25	251-305	Rod End - RH	2
26	3220-4	Nut - Jam	2
27	3256-4	Washer - Flat	2
28	324-7	Screw - Cap Hex. Hd.	2
29	65-3090	Decal - Operators Manual	1
30	82-7410	Decal - Proline	2

C-0711

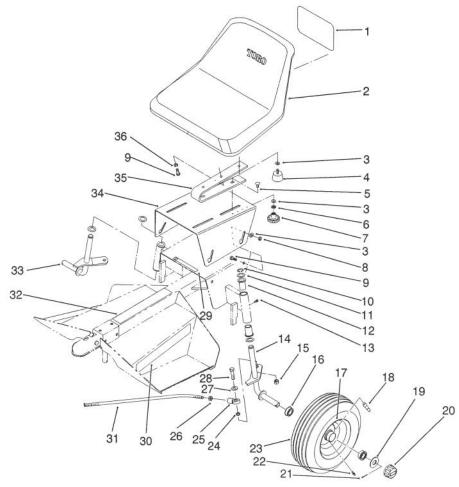


SEAT AND WHEEL ASSEMBLY (CONTINUED)

Ref. No.	Part No.	No. Use	
31	82-7380	Rod - Steering	2
32 33	82-7430 82-7310	Decal - Warning Spindle W.A RH	1 1
	-		

Ref. No.	Part No.	Description	No. Used
34	82-7220	Base - Seat	1 2 2
35	68-3280	Spring - Seat	
36	3253-4	Washer - Lock	

C-0711

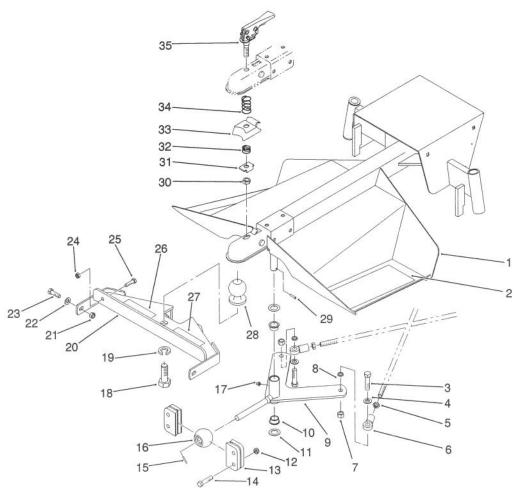

### C-0712

# FRAME AND HITCH ASSEMBLY

1 82-7050 Frame W.A. 2 82-7420 Tread - Footrest 3 324-7 Screw - Cap Hex. Hd. 4 3256-4 Washer - Flat 5 3220-19 Nut - Jam 6 251-304 Rod End - LH 7 32152-9 Nut - Lock 8 62-4420 Spacer 9 82-7350 Pivot W.A. 10 27-9080 Bushing 11 3-6498 Washer - Thrust 12 32128-21 Nut - Lock 13 82-7040 Channel - Ball 14 3234-19 Screw - Cap Hex. Hd. 15 32121-116 Pin - Roll 16 82-7030 Sphere	Ref. No.	Part No.	Description	No. Used
4 3256-4 Washer - Flat 5 3220-19 Nut - Jam 6 251-304 Rod End - LH 7 32152-9 Nut - Lock 8 62-4420 Spacer 9 82-7350 Pivot W.A. 10 27-9080 Bushing 11 3-6498 Washer - Thrust 12 32128-21 Nut - Lock 13 82-7040 Channel - Ball 14 3234-19 Screw - Cap Hex. Hd. 15 32121-116 Pin - Roll		7.00		1
4 3256-4 Washer - Flat 5 3220-19 Nut - Jam 6 251-304 Rod End - LH 7 32152-9 Nut - Lock 8 62-4420 Spacer 9 82-7350 Pivot W.A. 10 27-9080 Bushing 11 3-6498 Washer - Thrust 12 32128-21 Nut - Lock 13 82-7040 Channel - Ball 14 3234-19 Screw - Cap Hex. Hd. 15 32121-116 Pin - Roll	2	82-7420		2
5 3220-19 Nut - Jam 6 251-304 Rod End - LH 7 32152-9 Nut - Lock 8 62-4420 Spacer 9 82-7350 Pivot W.A. 10 27-9080 Bushing 11 3-6498 Washer - Thrust 12 32128-21 Nut - Lock 13 82-7040 Channel - Ball 14 3234-19 Screw - Cap Hex. Hd. 15 32121-116 Pin - Roll				2
6 251-304 Rod End - LH 7 32152-9 Nut - Lock 8 62-4420 Spacer 9 82-7350 Pivot W.A. 10 27-9080 Bushing 11 3-6498 Washer - Thrust 12 32128-21 Nut - Lock 13 82-7040 Channel - Ball 14 3234-19 Screw - Cap Hex. Hd. 15 32121-116 Pin - Roll	4	3256-4		2 2
7 32152-9 Nut - Lock 8 62-4420 Spacer 9 82-7350 Pivot W.A. 10 27-9080 Bushing 11 3-6498 Washer - Thrust 12 32128-21 Nut - Lock 13 82-7040 Channel - Ball 14 3234-19 Screw - Cap Hex. Hd. 15 32121-116 Pin - Roll				2
8 62-4420 Spacer 9 82-7350 Pivot W.A. 10 27-9080 Bushing 11 3-6498 Washer - Thrust 12 32128-21 Nut - Lock 13 82-7040 Channel - Ball 14 3234-19 Screw - Cap Hex. Hd. 15 32121-116 Pin - Roll	6			2
9 82-7350 Pivot W.A. 10 27-9080 Bushing 11 3-6498 Washer - Thrust 12 32128-21 Nut - Lock 13 82-7040 Channel - Ball 14 3234-19 Screw - Cap Hex. Hd. 15 32121-116 Pin - Roll		32152-9	Nut - Lock	2
10 27-9080 Bushing 11 3-6498 Washer - Thrust 12 32128-21 Nut - Lock 13 82-7040 Channel - Ball 14 3234-19 Screw - Cap Hex. Hd. 15 32121-116 Pin - Roll	8	62-4420	Spacer	2
11 3-6498 Washer - Thrust 12 32128-21 Nut - Lock 13 82-7040 Channel - Ball 14 3234-19 Screw - Cap Hex. Hd. 15 32121-116 Pin - Roll	9	82-7350	Pivot W.A.	1
12 32128-21 Nut - Lock 13 82-7040 Channel - Ball 14 3234-19 Screw - Cap Hex. Hd. 15 32121-116 Pin - Roll	10	27-9080	Bushing	2 2
13 82-7040 Channel - Ball 14 3234-19 Screw - Cap Hex. Hd. 15 32121-116 Pin - Roll	11	3-6498	Washer - Thrust	2
14 3234-19 Screw - Cap Hex. Hd. 15 32121-116 Pin - Roll	12	32128-21	Nut - Lock	4
15   32121–116   Pin – Roll	13	82-7040	Channel - Ball	4
	14	3234-19	Screw - Cap Hex. Hd.	4
16 82-7030 Sphere	15	32121-116	Pin - Roll	1
10 02 1000	16	82-7030	Sphere	1
17 302-49 Fitting - Grease	17	302-49	Fitting - Grease	1
18 328-24 Bolt - Cap Hex. Hd.	18	328-24	Bolt - Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
19	3253-9	Washer - Lock	1
20	82-7170	Plate - Hitch W.A.	1
21	3296-39	Nut - Lock	2
22	3256-24	Washer - Flat	2
23	323-7	Screw - Cap Hex. Hd.	2
24	3296-29	Nut - Lock	4
25	322-4	Screw - Cap Hex. Hd.	4
26	82-7400	Decal - Caution	1
27	82-7390	Decal - Warning	1
28	82-7300	Ball - Coupler	1
29	32121-45	Pin – Roll	1
30		Nut - Hex, Jam	1
31		Plate - Nut, Locking	1
32		Spring - Lock	1
33		Clamp - Ball	1
34		Spring - Release	1
35	82-7260	Assembly - Handle	1
		(Incl. Ref. #30-34)	1

### PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

### COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any

reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

### MAINTENANCE RECORD

Date					
				El .	

Compliance with Radio Interference Regulations Certified. Certifie Conforme au Reglement sur le Brouillage Radioelectrique.