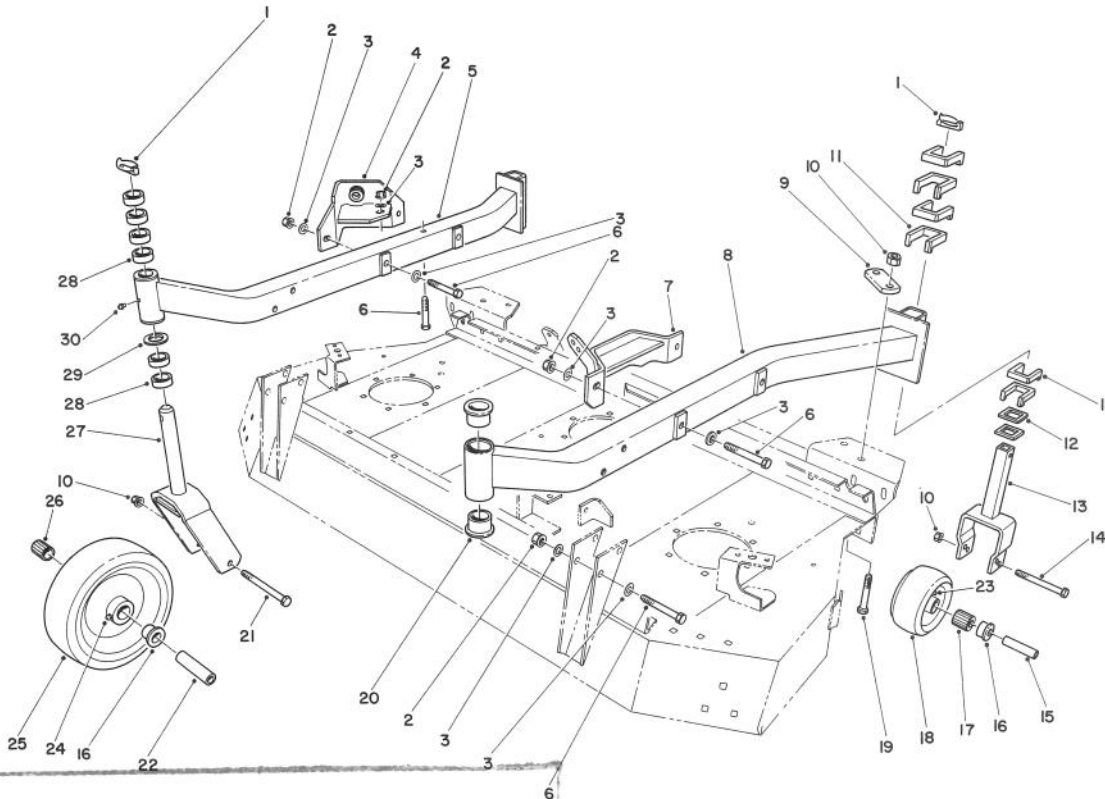


TORO®MODEL NO. 30715-10001 Thru
20001 &UP**PARTS
CATALOG****TRIFLEX 88 CUTTING UNIT**
(For Use With Groundsmaster® 300 Series)

ONLY COPY
DO NOT


CARRIER FRAME ASSEMBLY

T-0390A

Ref. No.	Part No.	Description	No. Used
1	3290-384	Pin - Lynch	4
2	32128-42	Nut - Flange	9
3	66-6480	Washer - Flat	17
4	63-0860	Joint - Ball, R.H.	1
5	63-0900	Arm - Caster, R.H. (Incl. Ref. #20)	1
6	324-19	Screw - Cap Hex. Hd.	9
7	63-0880	Joint - Ball, L.H.	1
8	63-0930	Arm - Caster, L.H.	1
9	39-3330	Bar - Clamp, Caster	2
10	32128-23	Nut - Flange	8
11	63-0060	Spacer	16
12	63-0960	Spacer - Caster, Rear	4
13	63-1910	Fork - Caster, Rear	2
14	325-18	Screw - Cap Hex. Hd.	2
15	63-1770	Bushing - Spanner	2
16	62-5580	Bushing	8

Ref. No.	Part No.	Description	No. Used
17	63-8580	Bearing - Roller	2
18	70-1820	Wheel - Caster, Rear (Incl. Ref. #16, 17 & 23)	2
19	325-13	Screw - Cap Hex. Hd.	4
20	28-9290	Bushing	4
21	325-22	Screw - Cap Hex. Hd.	2
22	62-4340	Spacer - Wheel, Caster	2
23	302-11	Fitting - Grease 45°	2
24	302-40	Fitting - Grease 90°	2
25	85-6310	Wheel - Caster, Front (Incl. Ref. #16, 24 & 26)	2
26	83-4740	Bearing - Roller	2
27	63-0730	Fork - Caster, Front	2
28	63-0070	Spacer	12
29	3-6781	Washer - Thrust	2
30	302-5	Fitting - Grease	2

TPS

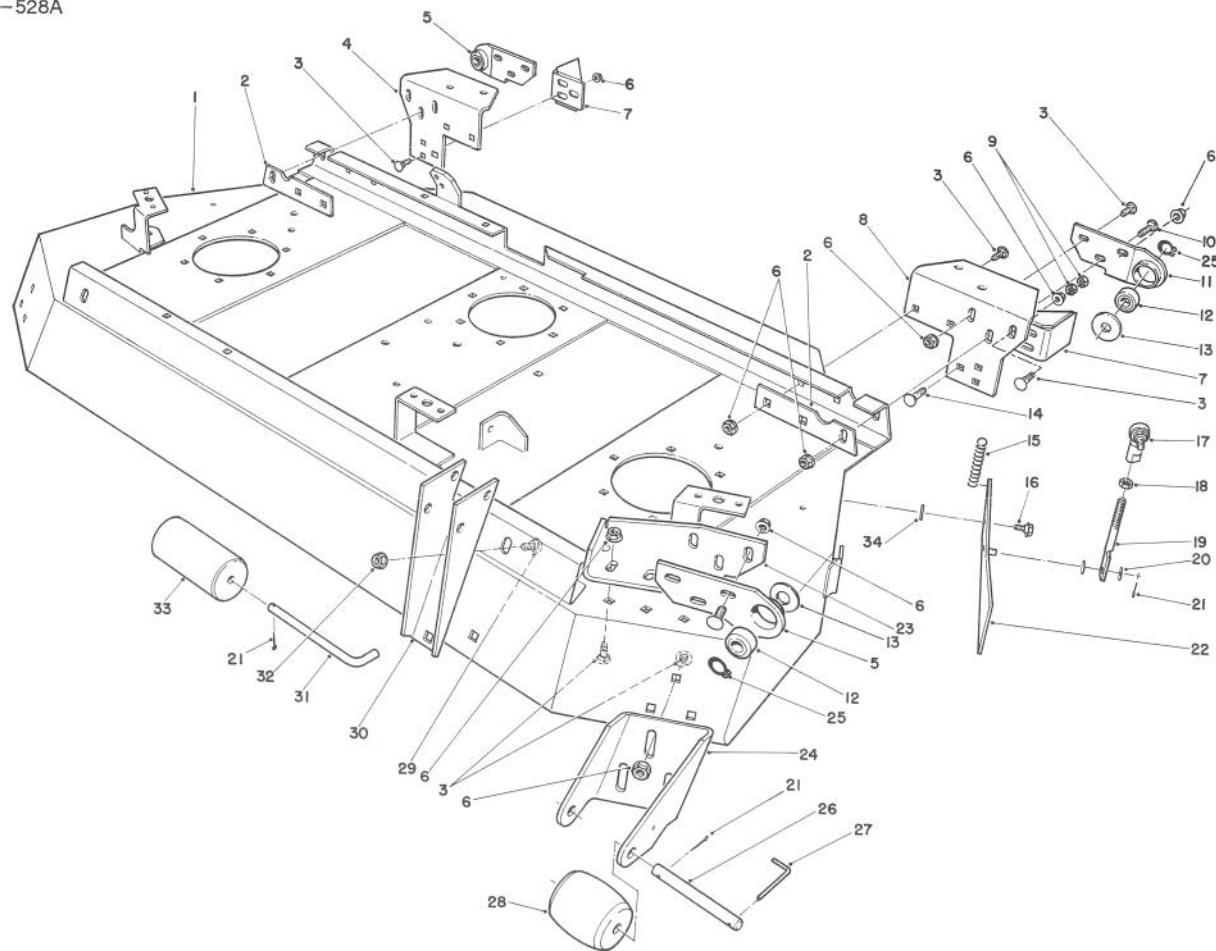


T-0391

CENTER DECK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	63-0200	Deck - Center	1
2	63-1960	Plate - Channel, Rear	2
3	3231-36	Bolt - Carriage	30
4	66-1270	Bracket - Caster, R.H.	1
5	66-6460	Assembly - Bracket, Hinge (Incl. Ref. 12)	2
6	32128-43	Nut - Lock	34
7	66-1110	Bracket - Stop, Rear	2
8	66-1280	Bracket - Caster, L.H.	1
9	32128-21	Nut - Lock	4
10	3231-26	Bolt - Carriage	2
11	66-6450	Assembly - Bracket, Hinge (Incl. Ref. 12)	2
12	63-0670	Bushing - Hinge	4
13	27-8810	Washer - Thrust	4
14	3231-33	Bolt - Carriage	2
15	63-1610	Spring - Extension	2
16	37-8771	Bolt - Shoulder	2
17	54-8030	Joint - Ball	2
18	3220-3	Nut - Jam	2

Ref. No.	Part No.	Description	No. Used
19	66-1190	Rod - Lift	2
20	37-8080	Washer - Flat	4
21	3272-11	Pin - Cotter	5
22	66-1120	Door - Safety, L.H.	1
*	66-1200	Door - Safety, R.H.	1
23	63-0800	Bracket - Hinge, L.H.	1
*	63-0790	Bracket - Hinge, R.H.	1
24	63-1560	Bracket - Roller, Front L.H.	1
*	63-1550	Bracket - Roller, Front R.H.	1
25	32151-62	Ring - Retaining	4
26	57-0680	Shaft - Roller, Front	2
27	57-0690	Pin	2
28	29-4820	Roller - Front	2
29	3233-9	Bolt - Carriage	4
30	63-0360	Support - Front	2
31	63-0850	Shaft - Roller	1
32	32128-23	Nut - Flange	4
33	36-1740	Roller - Anti-Scalp	1
34	39-5190	Washer - Flat	2

*Not Illustrated

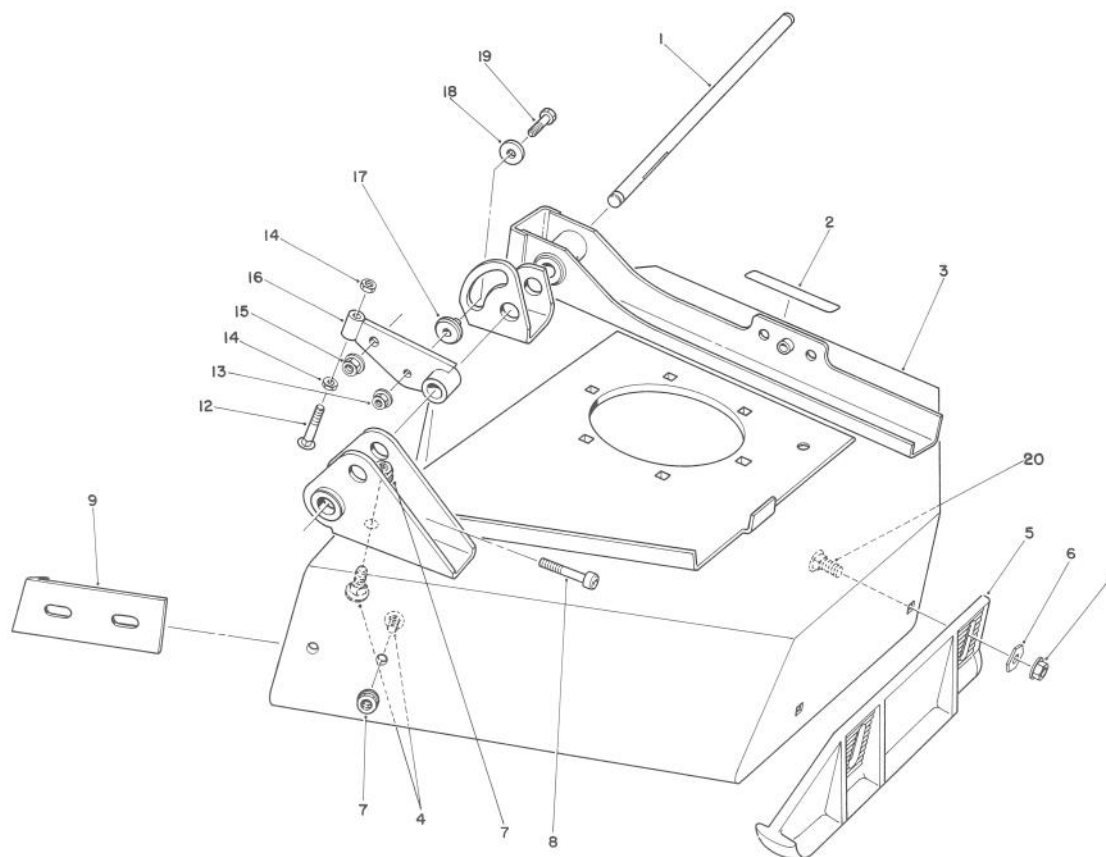

T-0392A


WING DECK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	82-6000	Shaft - Hinge	2
2	66-6380	Decal - Deflector	2
3	82-6030	Deck - Wing, L.H.	1
*	82-6020	Deck - Wing, R.H.	1
4	3231-36	Bolt - Carriage	6
5	63-1800	Skid - L.H.	1
*	63-1790	Skid - R.H.	1
6	3290-224	Washer - Dome, Hex.	4
7	32128-43	Nut - Flange	10
8	3274-7	Screw - Soc. Hd.	2
9	63-1200	Bracket - Stop, L.H.	1

Ref. No.	Part No.	Description	No. Used
*	63-1190	Bracket - Stop, R.H.	1
12	3230-25	Bolt - Carriage	2
13	32128-25	Nut - Flange	2
14	3218-2	Nut - Jam	4
15	32128-12	Nut - Flange	2
16	66-1170	Arm - Door, L.H.	1
*	63-1180	Arm - Door, R.H.	1
17	63-1020	Spacer - Door, Lift	2
18	66-6410	Washer - Spacer, Lift	2
19	322-7	Screw - Cap Hex. Hd.	2
20	3231-22	Bolt - Carriage	4

*Not Illustrated

Quality shown is for R.H. and L.H. assemblies except where noted with*.

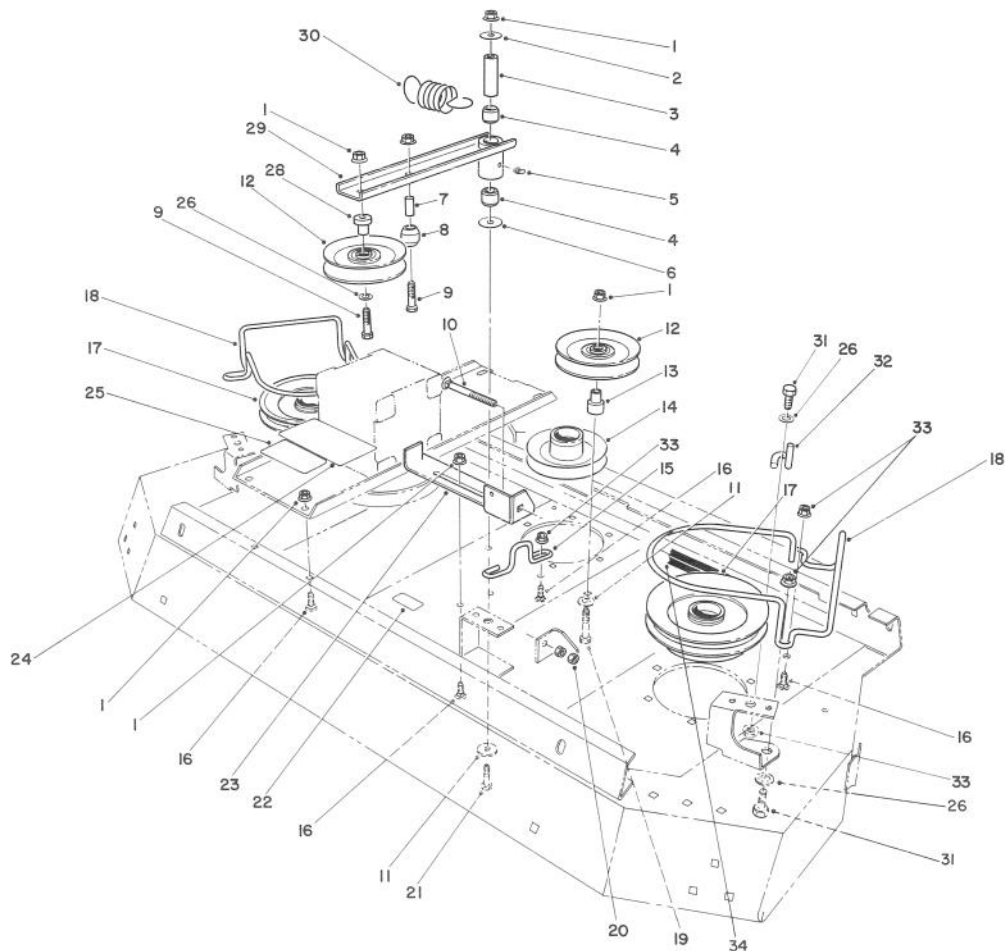


T-0393A

CENTER DECK SPINDLE DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-43	Nut - Flange	10
2	36-8020	Washer - Flat	1
3	63-1660	Sleeve - Pivot, Idler	1
4	63-0920	Bushing - Tension	2
5	302-11	Fitting - Grease 45°	1
6	63-1340	Washer	A/R
7	63-1480	Spacer	1
8	23-2270	Bushing - Rubber	1
9	323-10	Screw - Cap Hex. Hd.	2
10	3231-34	Bolt - Carriage	1
11	53-6380	Washer - Flat	2
12	63-1540	Pulley - Idler	2
13	63-1530	Spacer - Idler, Fixed	1
14	63-0090	Assembly - Pulley & Hub	1
15	66-1290	Guide - Belt	1
16	3231-22	Bolt - Carriage	10
17	63-0110	Assembly - Pulley & Hub	2

Ref. No.	Part No.	Description	No. Used
18	63-1430	Guide - Belt	2
19	323-11	Screw - Cap Hex. Hd.	1
20	3217-7	Nut - Hex.	2
21	323-20	Screw - Cap Hex. Hd.	1
22	55-4300	Decal - Warning	1
23	63-1470	Bracket - Spring	1
24	63-1740	Decal - Weights, Rear	1
25	68-8340	Decal - Bolt, Blade	1
26	3256-24	Washer - Flat	5
28	63-1520	Spacer - Idler	1
29	63-1450	Assembly - Arm, Idler (Incl. Ref. #4)	1
30	63-1580	Spring - Extension	1
31	323-7	Screw - Cap Hex. Hd.	4
32	67-5760	Rod - Belt	2
33	32128-21	Nut - Flange	8
34	63-1510	V-Belt - Drive, Main	1

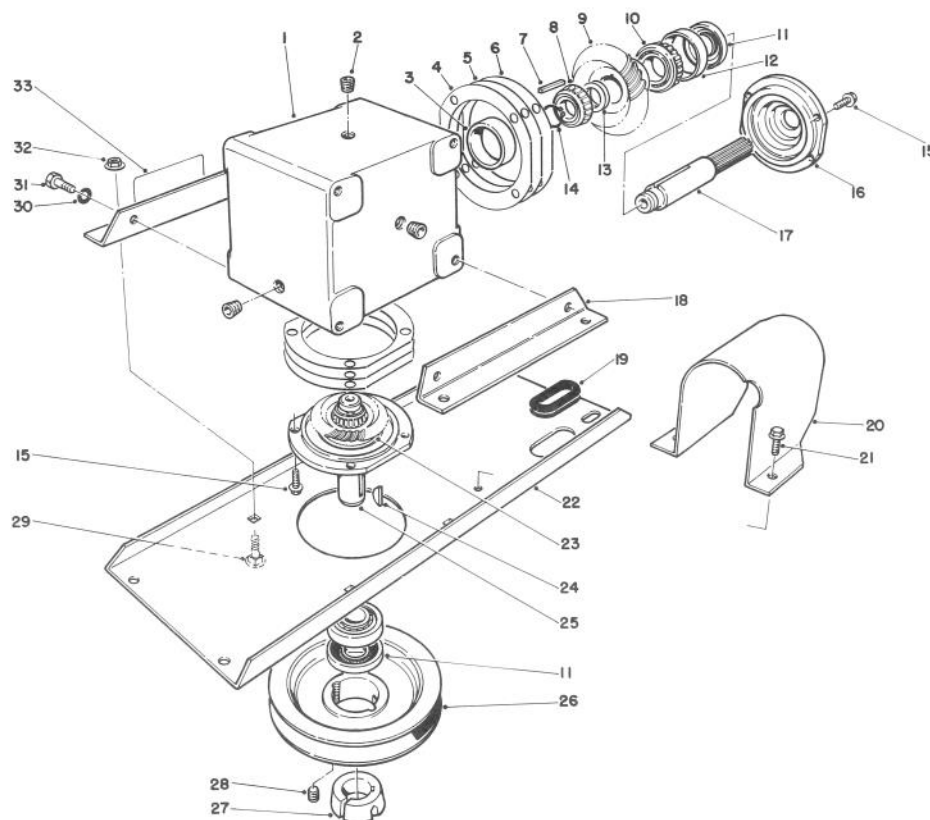


T-0961

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	68-7030	Housing	1
2	62-3490	Plug - Pipe (Solid)	4
3	62-3360	Cup - Bearing	2
4	62-3420	Gasket - .015	A/R
5	62-3430	Gasket - .005	A/R
6	62-3440	Gasket - .003	A/R
7	62-3380	Key	2
8	62-3370	Cone - Bearing	2
9	68-7080	Gear	1
10	62-3330	Cone - Bearing	2
11	62-3400	Seal	2
12	62-3340	Cup - Bearing	2
13	72-9370	Shim - .020	4
14	68-7070	Ring - Retaining	2
15	62-3310	Screw - Cap, Sems	8
16	62-3410	Cap	2
17	68-7050	Shaft	1
18	74-3540	Bracket - Box, Gear	2

Ref. No.	Part No.	Description	No. Used
19	237-152	Grommet	1
20	63-1970	Cover - Joint, Universal	1
21	32104-82	Screw - Self Tapping	2
22	74-3550	Plate - Mount, Gear Case	1
23	68-7060	Gear	1
24	3257-5	Key - Woodruff	1
25	68-7040	Shaft	1
26	63-0660	Pulley - Deck	1
27	23-1640	Bushing - Lock, Taper (Incl. Ref. #28)	1
28	3247-4	Screw - Set	2
29	3231-22	Bolt - Carriage	4
30	3253-21	Washer - Lock	4
31	323-4	Screw - Cap Hex. Hd.	4
32	32128-21	Nut - Flange	4
33	70-2560	Decal - Lube	1
*	68-6810	Assembly - Gear Case (Incl. Ref. #1-17 & 23-26)	1

*Not Illustrated

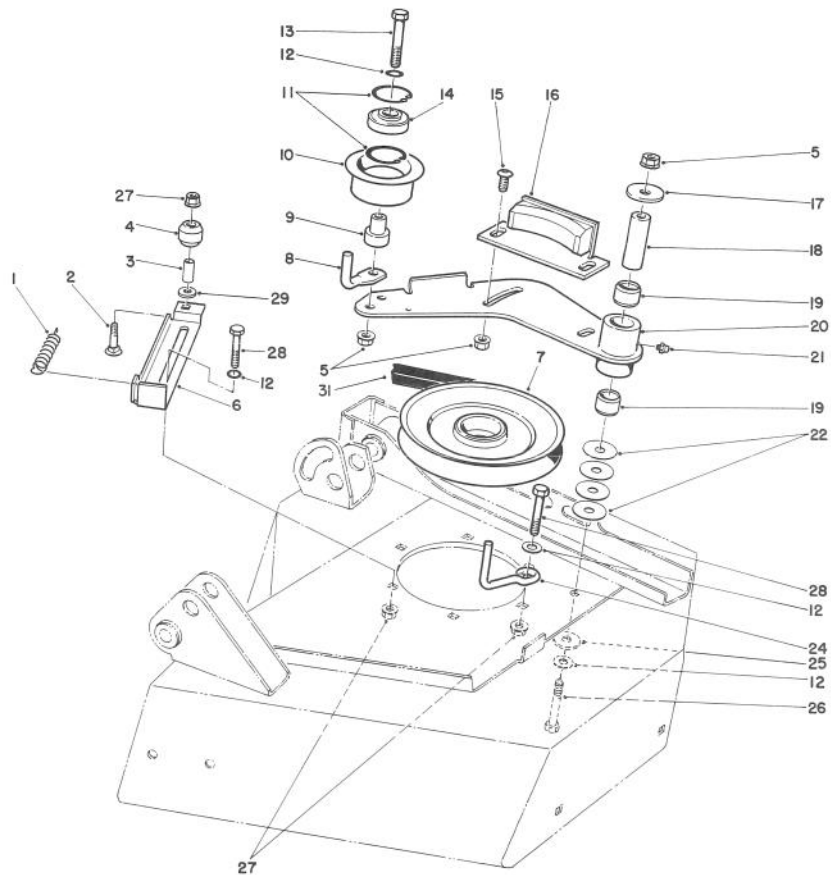


T-0395

WING DECK SPINDLE DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	63-1590	Spring - Extension	2
2	3231-33	Bolt - Carriage	2
3	63-1480	Spacer	2
4	23-2270	Bushing - Rubber	2
5	32128-43	Nut - Flange	8
6	63-1640	Bracket - Spring	2
7	63-0100	Assembly - Pulley & Hub	2
8	63-1690	Guide - Belt	2
9	63-1520	Spacer - Idler	2
10	63-1670	Pulley - Idler	2
11	32120-42	Ring - Retaining	4
12	3256-24	Washer - Flat	10
13	323-10	Screw - Cap Hex. Hd.	2
14	66-1240	Bearing - Idler	2
15	3274-80	Screw - Button Socket Hd.	4
16	63-1030	Assembly - Bracket, Brake	2

Ref. No.	Part No.	Description	No. Used
17	36-8020	Washer - Flat	2
18	63-1660	Sleeve - Pivot, Idler	2
19	63-0920	Bushing - Tension	4
20	63-1410	Assembly - Arm, Idler (Incl. Ref. #19)	2
21	302-5	Fitting - Grease, Straight	2
22	63-1340	Washer	A/R
24	63-1400	Rod - Belt	2
25	53-6380	Washer - Flat	2
26	323-15	Screw - Cap Hex. Hd.	2
27	32128-21	Nut - Flange	8
28	323-7	Screw - Cap Hex. Hd.	6
29	36-1430	Spacer	2
31	72-3760	V-Belt - Drive, Wing	2

Quantity shown is for a R.H. and a L.H. assembly.

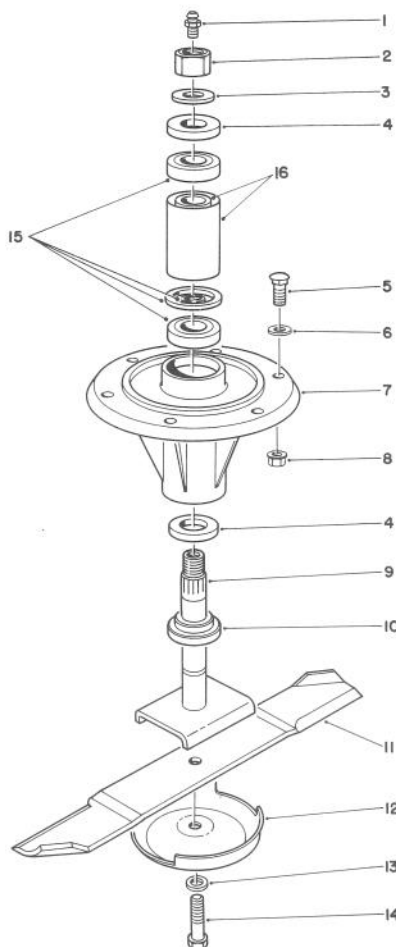


T-0396

SPINDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-2	Fitting - Grease	5	10	27-0950	Spacer - Spindle	5
2	32146-20	Nut - Jam	5	11	63-0080	Blade - 19"	5
3	7-4150	Washer	5	12	72-9360	Cup - Anti-Scalp	5
4	253-139	Seal - Wave	10	13	67-5770	Washer - Flat	5
5	3231-22	Bolt - Carriage	22	14	44-2200	Screw - Cap Hex. Hd.	5
6	3256-24	Washer - Flat	A/R	15	13-5109	Assembly - Bearing (Incl. Ref. #16)	5
7	63-0050	Housing - Spindle	5	16	67-5750	Spacer - Matched Set	5
8	32128-21	Nut - Flange	22				
9	51-3551	Shaft - Spindle	5				

Quantities shown are for 5 assemblies.

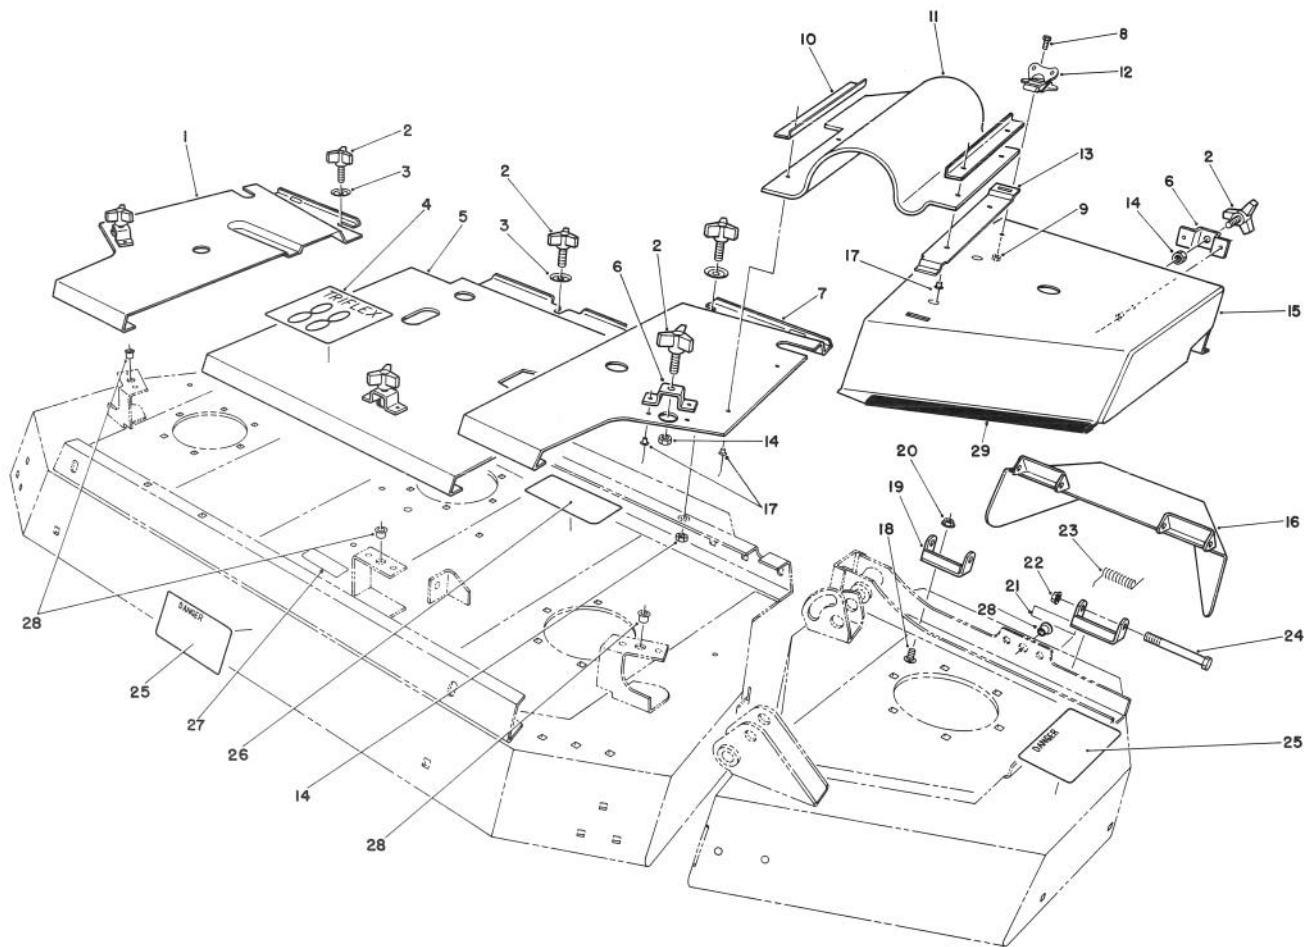

T-0397


COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	63-1140	Cover - Center, R.H.	1
2	27-4570	Knob	8
3	66-6310	Washer - Cup	3
4	63-1490	Decal - 88" Triflex	1
5	63-1130	Cover - Center	1
6	66-1260	Bracket - Knob	5
7	63-1150	Cover - Center, L.H.	1
8	3290-330	Screw - Cap Hex. Hd.	4
9	3296-9	Nut - Lock	4
□10	66-6340	Stiffener - Rubber	4
□11	70-1830	Cover - Flex	2
□12	66-1390	Latch - Spring	2
□13	66-1360	Latch - Cover	2
14	3296-59	Nut - Lock	8
15	63-1120	Cover - Wing, L.H.	1
*	63-1110	Cover - Wing, R.H.	1

Ref. No.	Part No.	Description	No. Used
16	63-1710	Chute - Discharge, L.H.	1
*	63-1700	Chute - Discharge, R.H.	1
17	3269-5	Rivet - Pop	18
□18	3230-1	Bolt - Carriage	8
□19	29-5590	Bracket - Pivot, Deflector	4
□20	32128-25	Nut - Flange	8
□21	66-6380	Decal - Deflector	2
□22	32128-21	Nut - Flange	4
□23	40-6230	Spring - Torsion	4
□24	323-15	Screw - Cap Hex. Hd.	4
25	66-1340	Decal - Discharge	3
26	63-1600	Decal - Belt Routing	1
27	55-4300	Decal - Warning	1
†28	3290-469	Nut - Grip	8
□29	37-9790	Trim	2

*Not Illustrated

†Special Tool Required to Install. □ Quantity shown is for R.H. and L.H. assemblies.

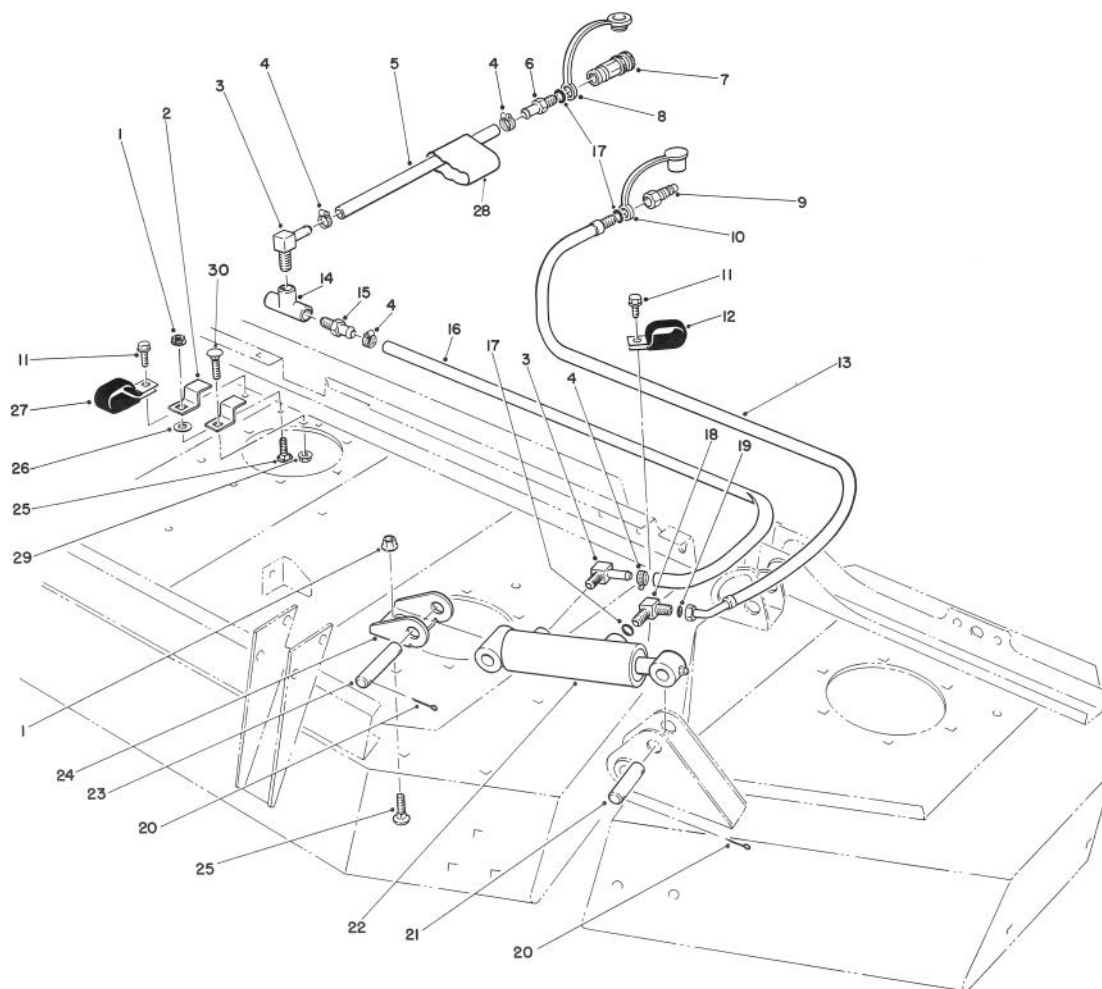


T-0398A

HYDRAULIC LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32128-43	Nut - Flange	5	15	304-73	Fitting - Straight	2
2	66-1380	Clamp - Hose	2	16	63-1354	Hose - Hydraulic, L.H.	1
3	66-6400	Fitting - Elbow 90°	3	*	63-1353	Hose - Hydraulic, R.H.	1
4	2412-108	Clamp - Hose	6	17	237-42	O-Ring	5
5	63-1352	Hose - Hydraulic	1	18	340-82	Fitting - Elbow 90° (Incl. Ref. #17 & 19)	2
6	353-983	Fitting - Straight (Incl. Ref. #17)	1	19	237-21	O-Ring	2
7	63-1220	Coupler - Quick Disconnect	1	20	3272-11	Pin - Cotter	8
8	353-984	Plug - Dust	1	21	63-1060	Pin - Clevis	2
9	63-1240	Nipple - Quick Disconnect	2	22	63-0040	Cylinder - Hydraulic	2
10	353-985	Cap - Dust	2	23	63-1070	Pin - Clevis	2
11	32104-82	Screw - Self Tapping	5	24	63-1050	Bracket - Cylinder, Lift	2
12	2412-105	Clamp - Tube, Double	4	25	3231-36	Bolt - Carriage	5
13	63-1300	Assembly - Hyd. Hose, LH (Incl. Ref. #17)	1	26	5-0838	Washer - Flat	1
*	63-1290	Assembly - Hyd. Hose, RH (Incl. Ref. #17)	1	27	2412-104	R-Clamp	1
14	304-77	Fitting - Tee	1	28	66-6420	Sleeve - Protective	1
				29	32128-21	Nut - Flange	1
				30	3231-22	Bolt - Carriage	1

*Not Illustrated

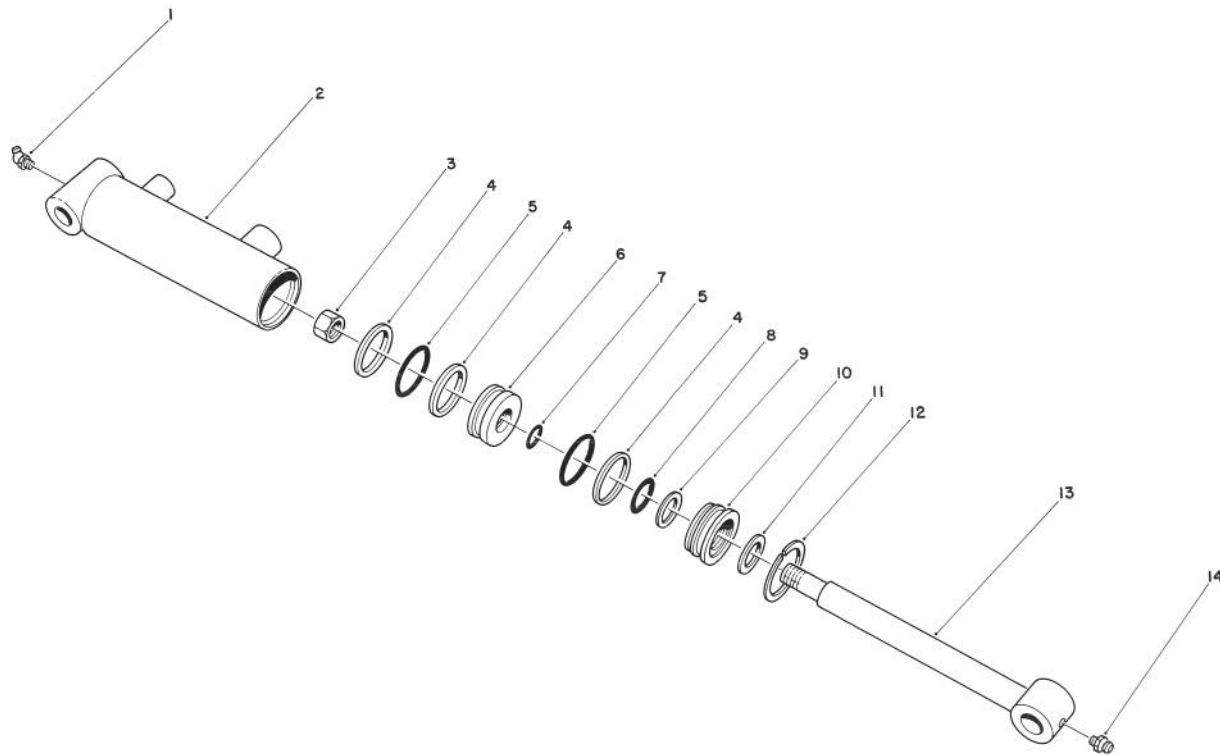


T-0399

HYDRAULIC CYLINDER NO. 63-0040

Ref. No.	Part No.	Description	No. Used
1	302-11	Fitting - Grease 45°	1
2		Body - Cylinder	1
3	43-5130	Nut - Lock	1
4		Washer - Backup	3
5		O-Ring	2
6	43-5150	Gland - Piston	1
7		O-Ring	1
8		O-Ring	1

Ref. No.	Part No.	Description	No. Used
9		Washer - Backup	1
10	43-5140	Gland - Rod	1
11		Seal - Rod	1
12	43-5220	Ring - Retaining	1
13	67-5540	Rod - Piston	1
14	302-5	Fitting - Grease	1
*	43-5250	Kit - Repair (Incl. Ref. #4, 5, 7-9 & 11)	1

*Not Illustrated

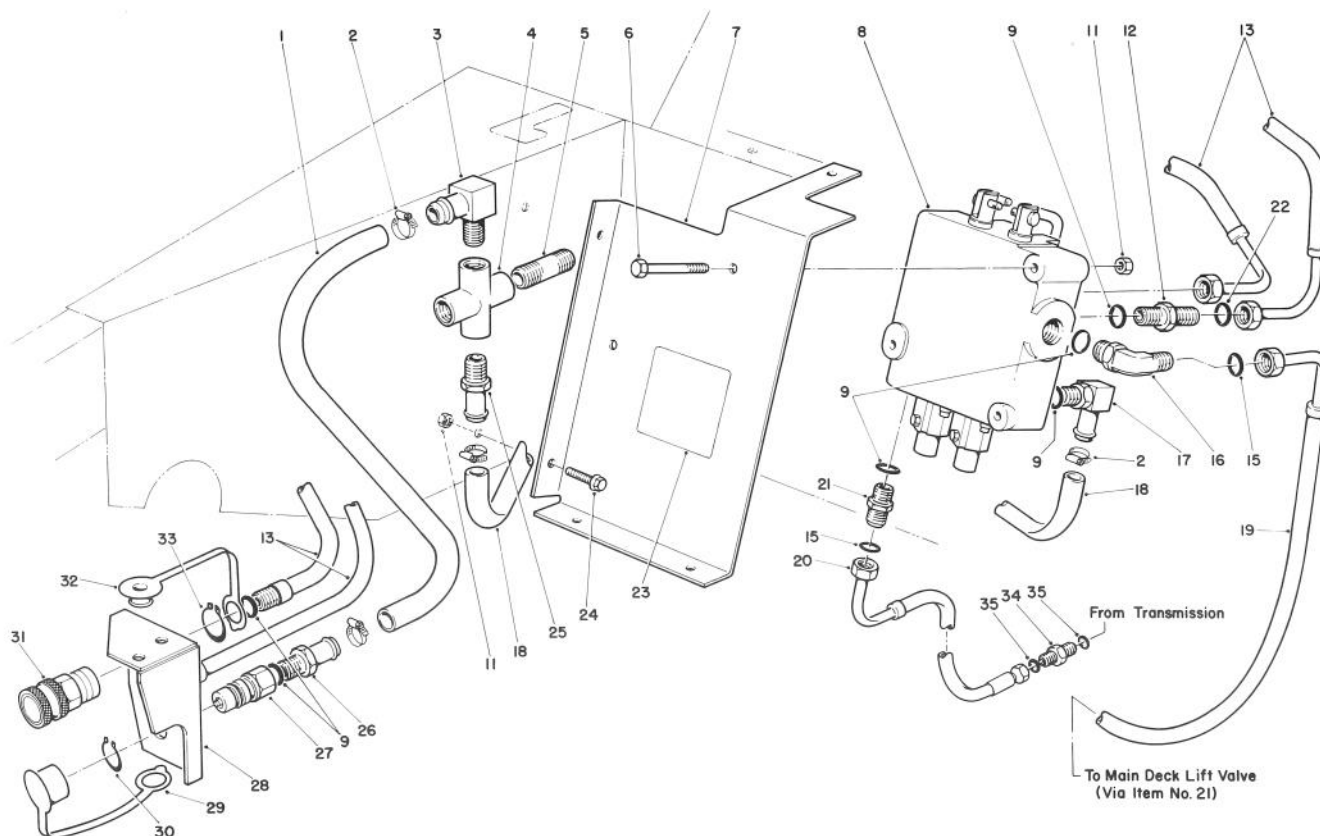


T-0400

TRACTION UNIT HYDRAULIC ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	63-1351	Hose - Hydraulic	1	20	63-1080	Assembly - Hydraulic Hose	1
2	2412-108	Clamp - Hose	4	21	340-2	Fitting - Straight (Incl. Ref. #9 & 15)	2
3	66-6400	Fitting - Elbow 90° (Only one fitting needed for non-power steering units)	2	22	237-21	O-Ring	2
4	353-974	Fitting - Cross	1	23	63-1500	Decal - Wing	1
5	289-4	Coupling	1	24	321-4	Screw - Cap Hex. Hd.	5
6	321-11	Screw - Cap Hex. Hd.	2	25	204-73	Fitting - Straight (For non-power steering units only) (Ref. #3 is for power steering units)	1
7	63-1210	Plate - Mount, Valve	1	26	353-983	Fitting - Straight (Incl. Ref. #9)	1
8	63-0020	Assembly - Valve	1	27	63-1240	Nipple - Quick Disconnect	1
9	237-42	O-Ring	8	28	63-1260	Bracket - Mount, Hose	1
11	32152-4	Nut - Flange	7	29	353-985	Cap - Dust	1
12	340-1	Fitting - Straight (Incl. Ref. #9 & 22)	2	30	32151-79	Ring - Retaining	2
13	63-1270	Assembly - Hydraulic Hose (Incl. Ref. #9)	2	31	63-1220	Coupler - Quick Disconnect	2
15	237-22	O-Ring	4	32	353-984	Plug - Dust	2
16	340-77	Fitting - Elbow 90° (Incl. Ref. #9 & 15)	1	33	32151-83	Ring - Retaining	2
17	353-982	Fitting - Elbow 90° (Incl. Ref. #9)	1	34	340-114	Fitting - Union (Incl. Ref. #35)(For power steering units only)	1
18	63-1350	Hose - Hydraulic	1	35	237-30	O-Ring	2
19	67-5530	Assembly - Hydraulic Hose	1	*	3290-378	Cable - Tie	5

*Not Illustrated

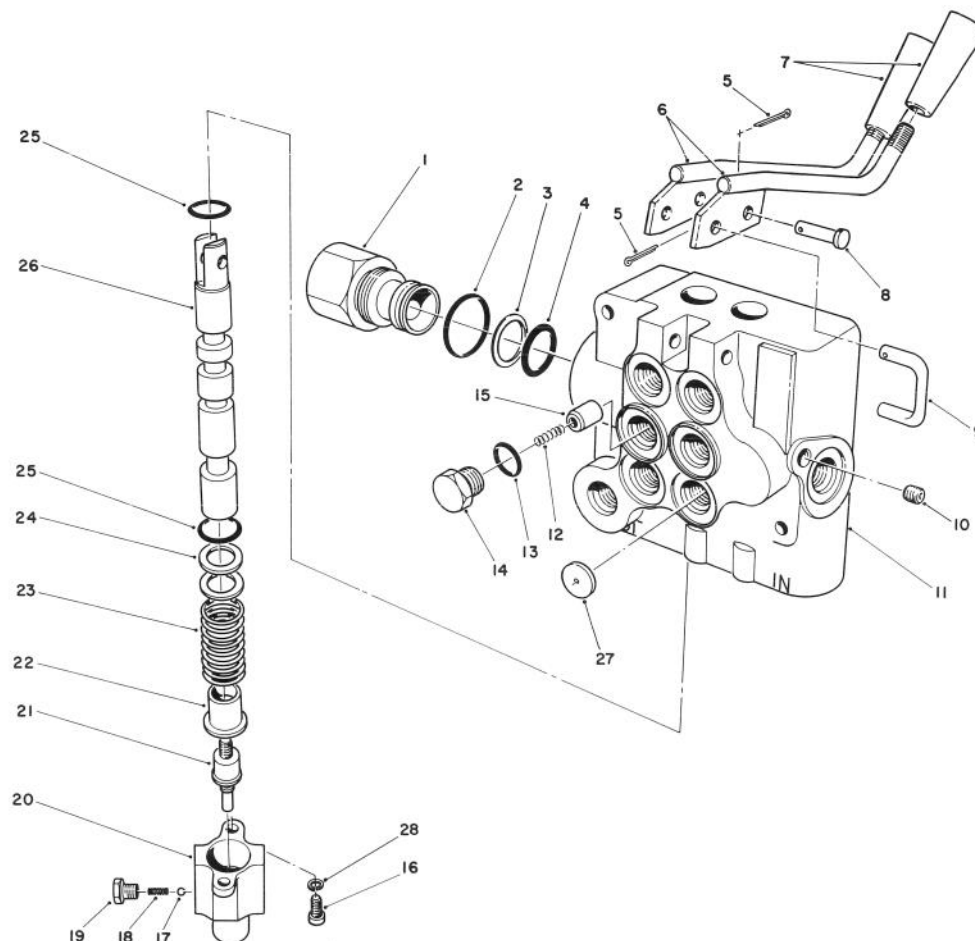


T-0401

HYDRAULIC VALVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67-5670	Assembly - Power Beyond (Incl. Ref. #2-4)	1
2		O-Ring	2
3		Washer - Backup	1
4		O-Ring	1
5	3272-6	Pin - Cotter	4
6	67-5710	Handle	2
7	233-39	Knob - Handle	2
8	67-5600	Pin - Clevis	2
9	67-5610	Hook - C	2
10	285-17	Plug - Pipe	1
11	63-0020	Assembly - Valve (Incl. Ref. #1-4 & 8-28)	1
12		Spring - Load Check	2
13		O-Ring	5
14	67-5660	Plug (Incl. Ref. #13)	5
15		Poppet - Load Check	2
16	3250-31	Screw	4
17		Ball - Detent	4

Ref. No.	Part No.	Description	No. Used
18		Spring - Detent	4
19		Plug - Detent	4
20	67-5620	End Cap - Detent	2
21	67-5630	Spool - Detent	2
22		Spacer	2
23		Spring - Return	2
24		Washer	4
25		O-Ring	4
26		Spool	2
27	67-5640	Plate - Orifice	2
28	3253-17	Washer - Lock	4
*	67-5580	Kit - Seal (Incl. Ref. #2-4, 13 & 25)	1
*	67-5560	Kit - Load Check (Incl. Ref. #12-15)	2
*	67-5570	Kit - Detent (Incl. Ref. #17-19)	4
*	67-5590	Kit - Return Spring (Incl. Ref. #22-24)	2

*Not Illustrated

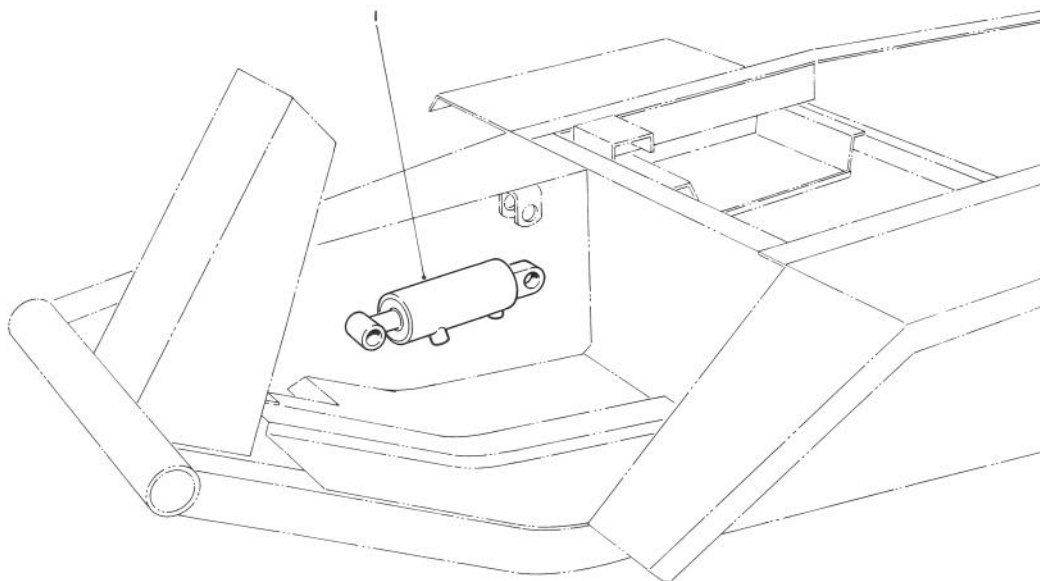


T-0405

HYDRAULIC LIFT CYLINDER

Ref. No.	Part No.	Description	No. Used
1	66-1250	Cylinder - Hydraulic, Lift	1

Ref. No.	Part No.	Description	No. Used

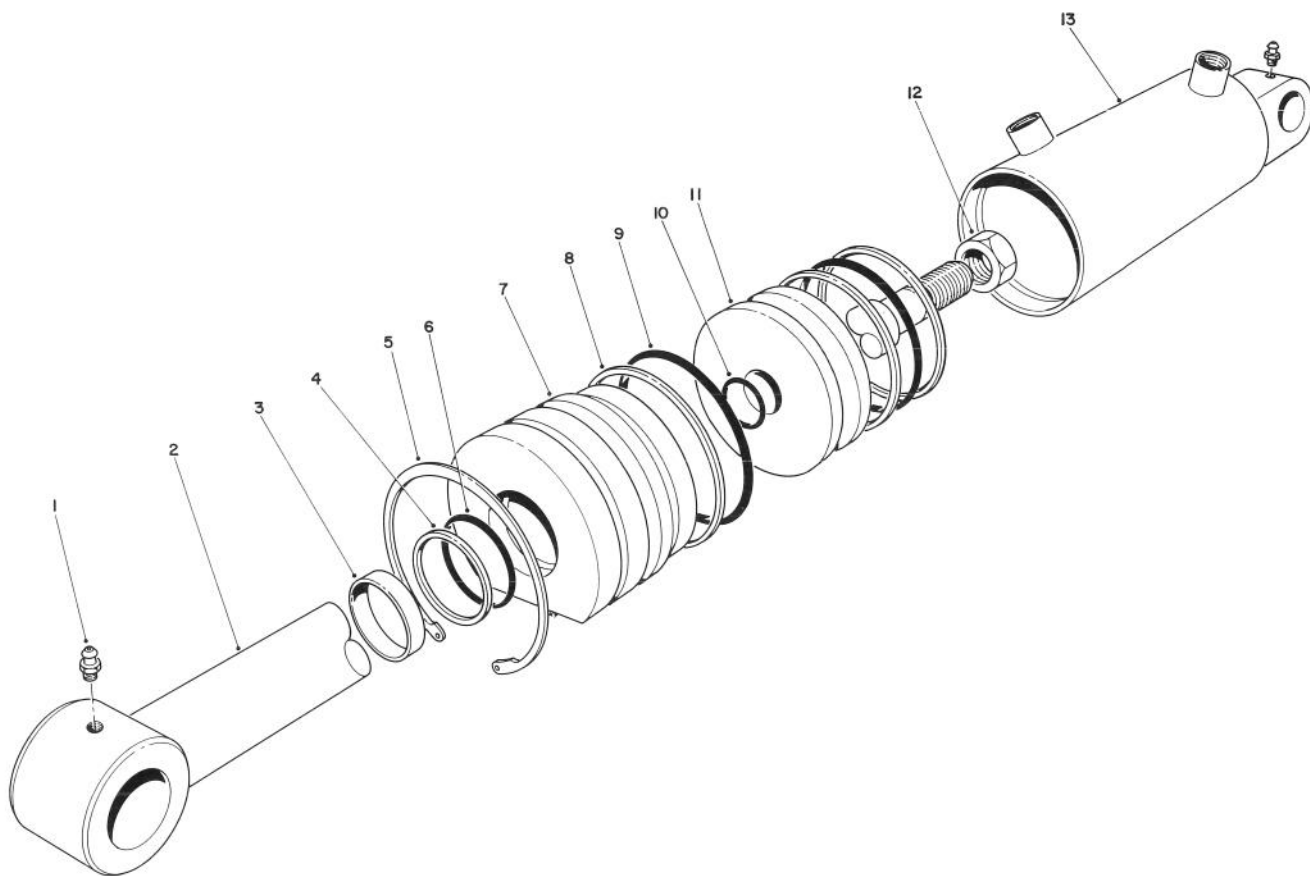


T-0406

HYDRAULIC LIFT CYLINDER NO. 66-1250

Ref. No.	Part No.	Description	No. Used
1	302-22	Fitting - Grease	2
2	67-5480	Shaft	1
3		Seal - Dust	1
4		Ring - Backup	1
5	67-5470	Ring - Retaining	1
6		O-Ring	1
7	67-5460	Head	1
8		Ring - Backup	3

Ref. No.	Part No.	Description	No. Used
9		O-Ring	2
10		O-Ring	1
11	67-5450	Piston	1
12	60-9760	Nut - Hex.	1
13	67-5490	Barrel	1
*	67-5500	Kit - Repair (Incl. Ref. #3, 4, 6 & 8-10)	1

*Not Illustrated

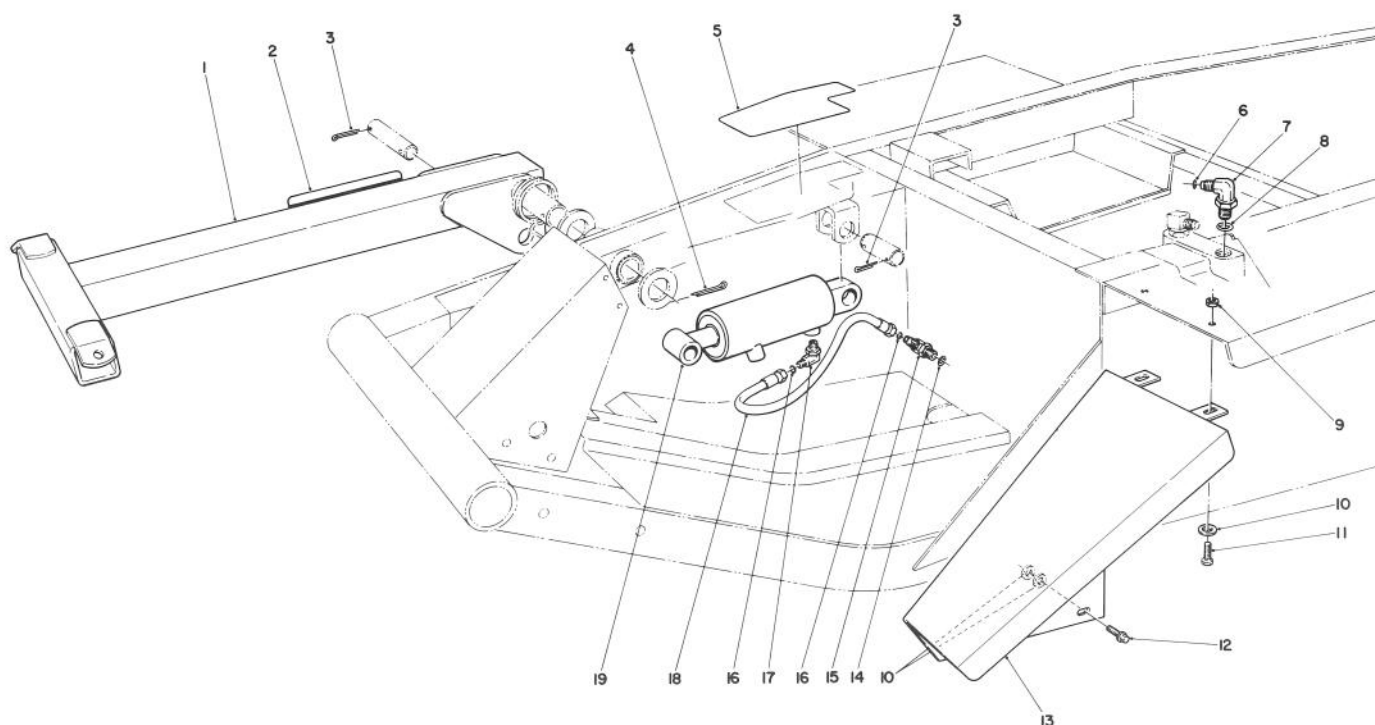


T-0405

RETROFIT KIT NO. 66-1230 (For Non-Power Steering 300 Series Groundsmasters)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	66-6370	Arm - Lift	1	13	67-5520	Fender	1
2	61-3610	Decal	1	14	237-78	O-Ring	1
3	3272-24	Pin - Cotter	2	15	340-97	Fitting - Elbow 90° (Incl. Ref. #14 & 16)	1
4	3272-33	Pin - Cotter	1	16	237-22	O-Ring	2
5	66-6390	Decal	1	17	340-112	Fitting - Elbow 90° (Incl. Ref. #16)	1
6	237-30	O-Ring	1	18	71-3580	Hose - Hydraulic	1
7	340-99	Fitting - Elbow 90° (Incl. Ref. #6 & 8)	1	19	66-1250	Cylinder - Hydraulic	1
8	237-42	O-Ring	1	*	304-73	Fitting - Straight Hose Barb (Return from 2 Lever Wing Lift Valve) (Ref. Model No. 30715 Parts Catalog)	1
9	32128-25	Nut - Flange	2				
10	3256-23	Washer - Flat	4				
11	322-5	Screw - Cap Hex. Hd.	2				
12	32144-14	Screw - Thread Forming	2				

*Not Illustrated

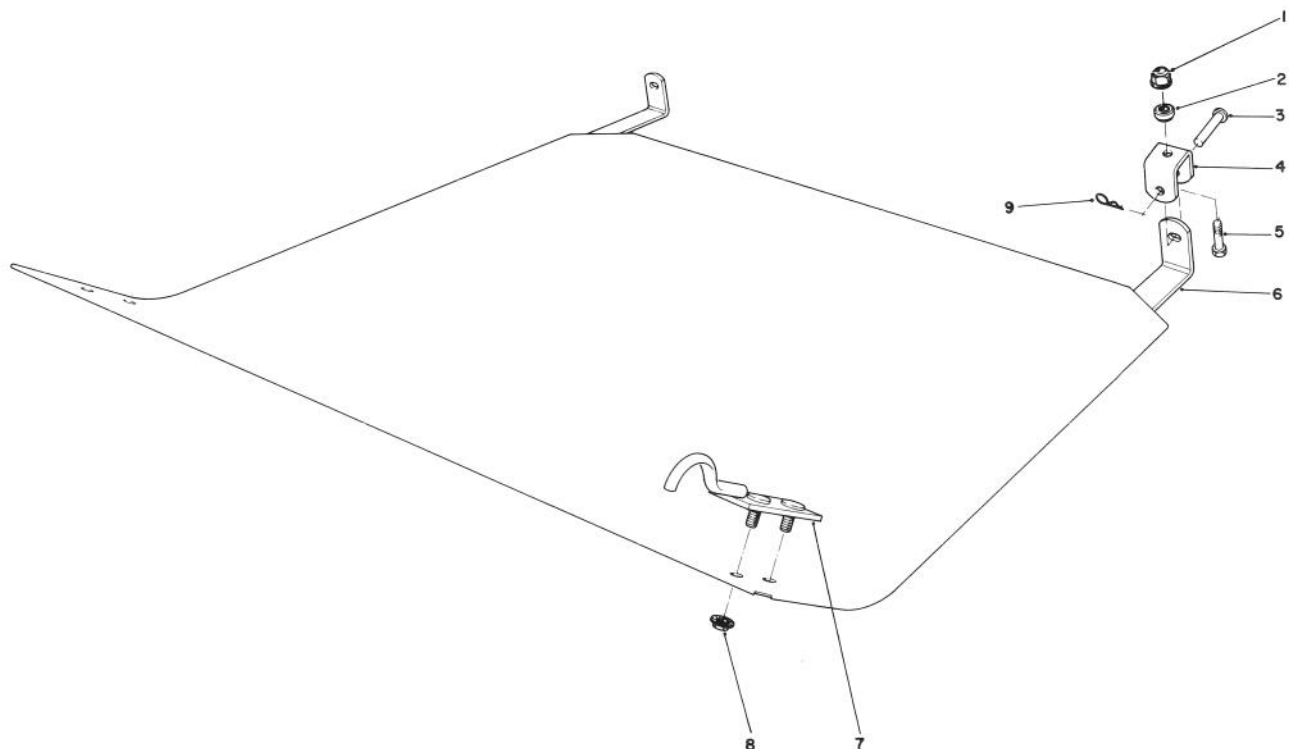


T-0402

TRACTOR 'BELLY SHIELD' ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-21	Nut - Flange (For Diesel Traction Units Only)	2
2	46-1600	Spacer (For Diesel Traction Units Only)	2
3	283-23	Pin - Clevis	2
4	39-1470	Hanger - Shield, Belly	2

Ref. No.	Part No.	Description	No. Used
5	323-7	Screw - Cap Hex. Hd.	2
6	39-1410	Shield - Belly	1
7	39-1440	Hook - Shield, Belly	2
8	32128-25	Nut - Flange	4
9	3290-322	Pin - Cotter, Hair	2

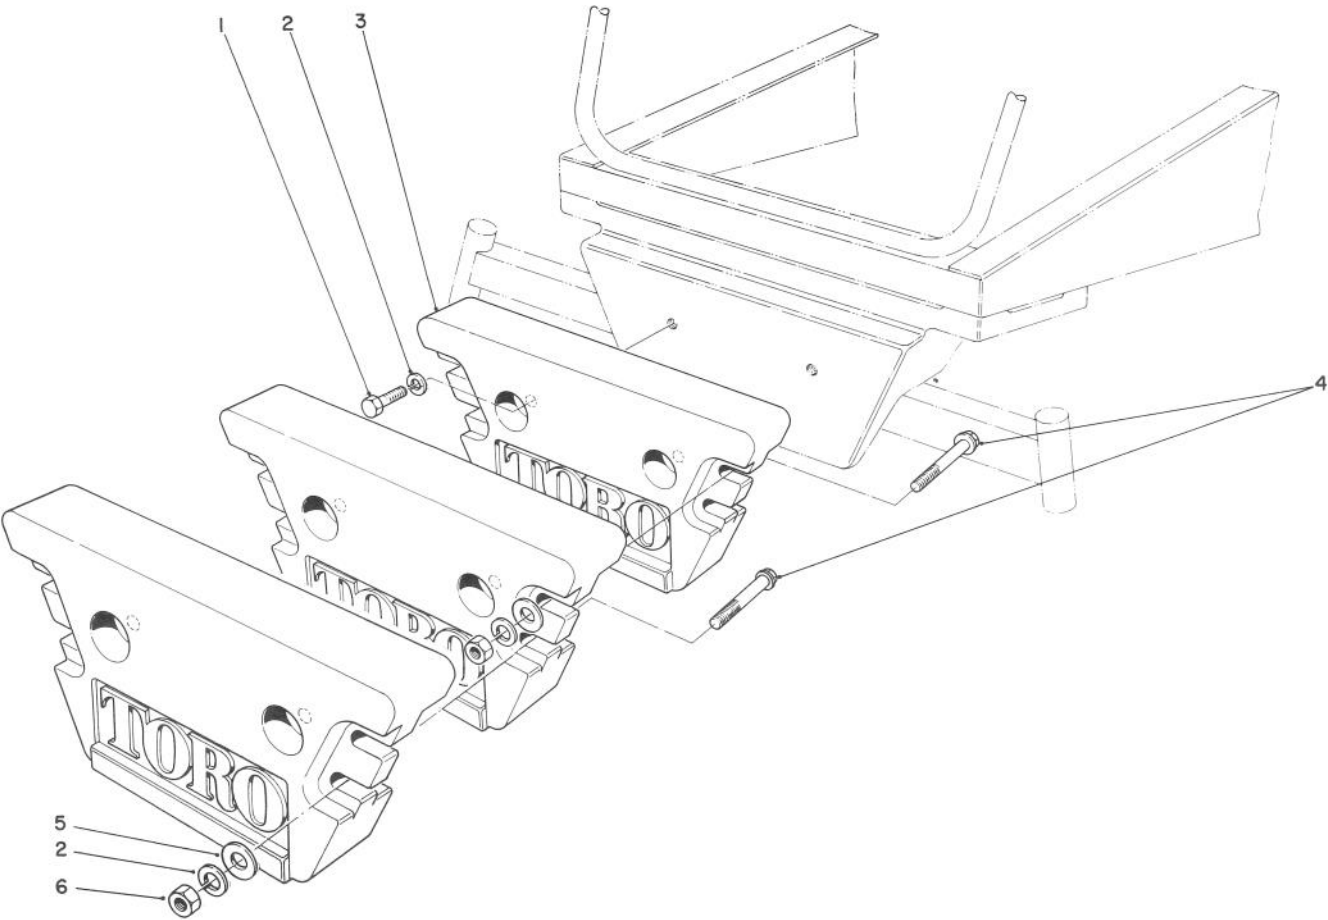


T-0403

REAR WEIGHTS

Ref. No.	Part No.	Description	No. Used
1	325-6	Screw - Cap Hex. Hd.	2
2	3253-7	Washer - Lock	6
3	24-5790	Weight - Rear	3

Ref. No.	Part No.	Description	No. Used
4	325-14	Screw - Cap Hex. Hd.	4
5	3256-26	Washer - Flat	10
6	3217-9	Nut - Hex.	4

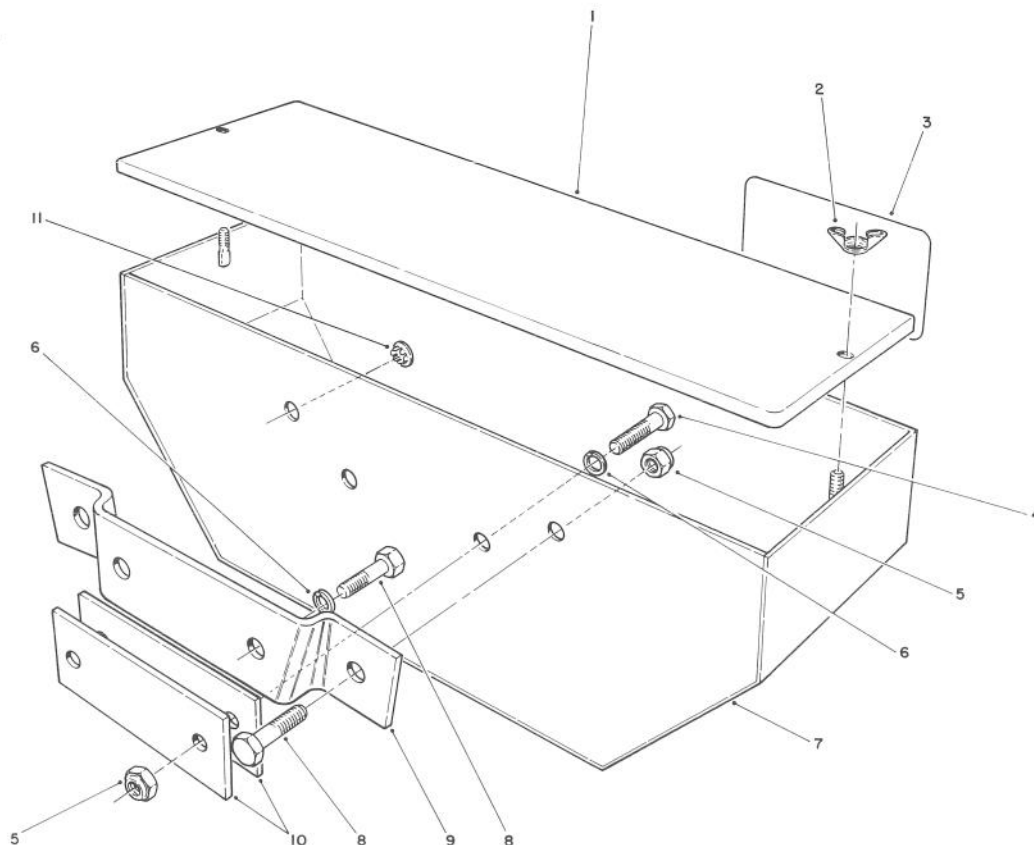

T-0404

WEIGHT BOX KIT NO. 62-6590

Ref. No.	Part No.	Description	No. Used
1	61-4130	Cover - Box, Weight	1
2	32103-2	Nut - Wing	2
3	43-5110	Decal	1
4	325-7	Screw - Cap Hex. Hd.	2
5	3296-25	Nut - Lock	2
6	3253-7	Washer - Lock	2

Ref. No.	Part No.	Description	No. Used
7	41-4090	Box - Weight	1
8	325-6	Screw - Cap Hex. Hd.	4
9	61-4140	Bracket	1
10	62-6710	Plate	2
11	2410-67	Plug	2

TORO PART NUMBER INDEX

3314-528A

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-6781	Washer - Thrust	1 29 2	63-0040	Cylinder - Hydraulic	9 22 2
5-0838	Washer - Flat	9 26 1	63-0050	Housing - Spindle	7 7 5
7-4150	Washer	7 3 5	63-0060	Spacer	1 11 16
13-5109	Assembly - Bearing	7 15 5	63-0070	Spacer	1 28 12
23-1640	Bushing - Lock, Taper	5 27 1	63-0080	Blade - 19	7 11 5
23-2270	Bushing - Rubber	6 4 2	63-0090	Assembly - Pulley & Hub	4 14 1
23-2270	Bushing - Rubber	4 8 1	63-0100	Assembly - Pulley & Hub	6 7 2
24-5790	Weight - Rear	17 3 3	63-0110	Assembly - Pulley & Hub	4 17 2
27-0950	Spacer - Spindle	7 10 5	63-0200	Deck - Center	2 1 1
27-4570	Knob	8 2 8	63-0360	Support - Front	2 30 2
27-8810	Washer - Thrust	2 13 4	63-0660	Pulley - Deck	5 26 1
28-9290	Bushing	1 20 4	63-0670	Bushing - Hinge	2 12 4
29-4820	Roller - Front	2 28 2	63-0730	Fork - Caster, Front	1 27 2
29-5590	Bracket - Pivot, Deflector	8 19 4	63-0790	Bracket - Hinge, R.H.	2 * 1
36-1430	Spacer	6 29 2	63-0800	Bracket - Hinge, L.H.	2 23 1
36-1740	Roller - Anti-Scalp	2 33 1	63-0850	Shaft - Roller	2 31 1
36-8020	Washer - Flat	4 2 1	63-0860	Joint - Ball, R.H.	1 4 1
36-8020	Washer - Flat	6 17 2	63-0880	Joint - Ball, L.H.	1 7 1
37-8080	Washer - Flat	2 20 4	63-0900	Arm - Caster, R.H.	1 5 1
37-8771	Bolt - Shoulder	2 16 2	63-0920	Bushing - Tension	4 4 2
37-9790	Trim	8 29 2	63-0920	Bushing - Tension	6 19 4
39-1410	Shield - Belly	16 6 1	63-0930	Arm - Caster, L.H.	1 8 1
39-1440	Hook - Shield, Belly	16 7 2	63-0960	Spacer - Caster, Rear	1 12 4
39-1470	Hanger - Shield, Belly	16 4 2	63-1020	Spacer - Door, Lift	3 17 2
39-3330	Bar - Clamp, Caster	1 9 2	63-1030	Assembly - Bracket, Brake	6 16 2
39-5190	Washer - Flat	2 34 2	63-1050	Bracket - Cylinder, Lift	9 24 2
40-6230	Spring - Torsion	8 23 4	63-1060	Pin - Clevis	9 21 2
41-4090	Box - Weight	18 7 1	63-1070	Pin - Clevis	9 23 2
43-5110	Decal	18 3 1	63-1080	Assembly - Hydraulic Hose	11 20 1
43-5130	Nut - Lock	10 3 1	63-1110	Cover - Wing, R.H.	8 * 1
43-5140	Gland - Rod	10 10 1	63-1120	Cover - Wing, L.H.	8 15 1
43-5150	Gland - Piston	10 6 1	63-1130	Cover - Center	8 5 1
43-5220	Ring - Retaining	10 12 1	63-1140	Cover - Center, R.H.	8 1 1
43-5250	Kit - Repair	10 * 1	63-1150	Cover - Center, L.H.	8 7 1
44-2200	Screw - Cap Hex. Hd.	7 14 5	63-1180	Arm - Door, R.H.	3 * 1
46-1600	Spacer (For Diesel Traction)	16 2 2	63-1190	Bracket - Stop, R.H.	3 * 1
51-3551	Shaft - Spindle	7 9 5	63-1200	Bracket - Stop, L.H.	3 9 1
53-6380	Washer - Flat	4 11 2	63-1210	Plate - Mount, Valve	11 7 1
53-6380	Washer - Flat	6 25 2	63-1220	Coupler - Quick Disconnect	9 7 1
54-8030	Joint - Ball	2 17 2	63-1220	Coupler - Quick Disconnect	11 31 2
55-4300	Decal - Warning	4 22 1	63-1240	Nipple - Quick Disconnect	9 9 2
55-4300	Decal - Warning	8 27 1	63-1240	Nipple - Quick Disconnect	11 27 1
57-0680	Shaft - Roller, Front	2 26 2	63-1260	Bracket - Mount, Hose	11 28 1
57-0690	Pin	2 27 2	63-1270	Assembly - Hydraulic Hose	11 13 2
60-9760	Nut - Hex.	14 12 1	63-1290	Assembly - Hyd. Hose, RH	9 * 1
61-3610	Decal	15 2 1	63-1300	Assembly - Hyd. Hose, LH	9 13 1
61-4130	Cover - Box, Weight	18 1 1	63-1340	Washer	4 6A/R
61-4140	Bracket	18 9 1	63-1340	Washer	6 22A/R
62-3310	Screw - Cap, Sems	5 15 8	63-1350	Hose - Hydraulic	11 18 1
62-3330	Cone - Bearing	5 10 2	63-1351	Hose - Hydraulic	11 1 1
62-3340	Cup - Bearing	5 12 2	63-1352	Hose - Hydraulic	9 5 1
62-3360	Cup - Bearing	5 3 2	63-1353	Hose - Hydraulic, R.H.	9 * 1
62-3370	Cone - Bearing	5 8 2	63-1354	Hose - Hydraulic, L.H.	9 16 1
62-3380	Key	5 7 2	63-1400	Rod - Belt	6 24 2
62-3400	Seal	5 11 2	63-1410	Assembly - Arm, Idler	6 20 2
62-3410	Cap	5 16 2	63-1430	Guide - Belt	4 18 2
62-3420	Gasket - .015	5 4A/R	63-1450	Assembly - Arm, Idler	4 29 1
62-3430	Gasket - .005	5 5A/R	63-1470	Bracket - Spring	4 23 1
62-3440	Gasket - .003	5 6A/R	63-1480	Spacer	6 3 2
62-3490	Plug - Pipe (Solid)	5 2 4	63-1480	Spacer	4 7 1
62-4340	Spacer - Wheel, Caster	1 22 2	63-1490	Decal - 88 Triflex	8 4 1
62-5580	Bushing	1 16 8	63-1500	Decal - Wing	11 23 1
62-6710	Plate	18 10 2	63-1510	V-Belt - Drive, Main	4 34 1
63-0020	Assembly - Valve	11 8 1	63-1520	Spacer - Idler	6 9 2
63-0020	Assembly - Valve	12 11 1	63-1520	Spacer - Idler	4 28 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
63-1530	Spacer - Idler, Fixed	4 13 1	67-5600	Pin - Clevis	12 8 2
63-1540	Pulley - Idler	4 12 2	67-5610	Hook - C	12 9 2
63-1550	Bracket - Roller, Front R.H.	2 * 1	67-5620	End Cap - Detent	12 20 2
63-1560	Bracket - Roller, Front L.H.	2 24 1	67-5630	Spool - Detent	12 21 2
63-1580	Spring - Extension	4 30 1	67-5640	Plate - Orifice	12 27 2
63-1590	Spring - Extension	6 1 2	67-5660	Plug	12 14 5
63-1600	Decal - Belt Routing	8 26 1	67-5670	Assembly - Power Beyond	12 1 1
63-1610	Spring - Extension	2 15 2	67-5710	Handle	12 6 2
63-1640	Bracket - Spring	6 6 2	67-5750	Spacer - Matched Set	7 16 5
63-1660	Sleeve - Pivot, Idler	4 3 1	67-5760	Rod - Belt	4 32 2
63-1660	Sleeve - Pivot, Idler	6 18 2	67-5770	Washer - Flat	7 13 5
63-1670	Pulley - Idler	6 10 2	68-6810	Assembly - Gear Case	5 * 1
63-1690	Guide - Belt	6 8 2	68-7030	Housing	5 1 1
63-1700	Chute - Discharge, R.H.	8 * 1	68-7040	Shaft	5 25 1
63-1710	Chute - Discharge, L.H.	8 16 1	68-7050	Shaft	5 17 1
63-1740	Decal - Weights, Rear	4 24 1	68-7060	Gear	5 23 1
63-1770	Bushing - Spanner	1 15 2	68-7070	Ring - Retaining	5 14 2
63-1790	Skid - R.H.	3 * 1	68-7080	Gear	5 9 1
63-1800	Skid - L.H.	3 5 1	68-8340	Decal - Bolt, Blade	4 25 1
63-1910	Fork - Caster, Rear	1 13 2	70-1820	Wheel - Caster, Rear	1 18 2
63-1960	Plate - Channel, Rear	2 2 2	70-1830	Cover - Flex	8 11 2
63-1970	Cover - Joint, Universal	5 20 1	70-2560	Decal - Lube	5 33 1
63-8580	Bearing - Roller	1 17 2	71-3580	Hose - Hydraulic	15 18 1
66-1110	Bracket - Stop, Rear	2 7 2	72-3760	V-Belt - Drive, Wing	6 31 2
66-1120	Door - Safety, L.H.	2 22 1	72-9360	Cup - Anti-Scalp	7 12 5
66-1170	Arm - Door, L.H.	3 16 1	72-9370	Shim - .020	5 13 4
66-1190	Rod - Lift	2 19 2	74-3540	Bracket - Box, Gear	5 18 2
66-1200	Door - Safety, R.H.	2 * 1	74-3550	Plate - Mount, Gear Case	5 22 1
66-1240	Bearing - Idler	6 14 2	82-6000	Shaft - Hinge	3 1 2
66-1250	Cylinder - Hydraulic	15 19 1	82-6020	Deck - Wing, R.H.	3 * 1
66-1250	Cylinder - Hydraulic, Lift	13 1 1	82-6030	Deck - Wing, L.H.	3 3 1
66-1260	Bracket - Knob	8 6 5	83-4740	Bearing - Roller	1 26 2
66-1270	Bracket - Caster, R.H.	2 4 1	85-6310	Wheel - Caster, Front	1 25 2
66-1280	Bracket - Caster, L.H.	2 8 1	204-73	Fitting - Straight	11 25 1
66-1290	Guide - Belt	4 15 1	233-39	Knob - Handle	12 7 2
66-1340	Decal - Discharge	8 25 3	237-21	O-Ring	9 19 2
66-1360	Latch - Cover	8 13 2	237-21	O-Ring	11 22 2
66-1380	Clamp - Hose	9 2 2	237-22	O-Ring	11 15 4
66-1390	Latch - Spring	8 12 2	237-22	O-Ring	15 16 2
66-6310	Washer - Cup	8 3 3	237-30	O-Ring	15 6 1
66-6340	Stiffener - Rubber	8 10 4	237-30	O-Ring	11 35 2
66-6370	Arm - Lift	15 1 1	237-42	O-Ring	15 8 1
66-6380	Decal - Deflector	8 21 2	237-42	O-Ring	11 9 8
66-6380	Decal - Deflector	3 2 2	237-42	O-Ring	9 17 5
66-6390	Decal	15 5 1	237-78	O-Ring	15 14 1
66-6400	Fitting - Elbow 90°	11 3 2	237-152	Grommet	5 19 1
66-6400	Fitting - Elbow 90°	9 3 3	2410-67	Plug	18 11 2
66-6410	Washer - Spacer, Lift	3 18 2	2412-104	R-Clamp	9 27 1
66-6420	Sleeve - Protective	9 28 1	2412-105	Clamp - Tube, Double	9 12 4
66-6450	Assembly - Bracket, Hinge	2 11 2	2412-108	Clamp - Hose	11 2 4
66-6460	Assembly - Bracket, Hinge	2 5 2	2412-108	Clamp - Hose	9 4 6
66-6480	Washer - Flat	1 3 17	253-139	Seal - Wave	7 4 10
67-5450	Piston	14 11 1	283-23	Pin - Clevis	16 3 2
67-5460	Head	14 7 1	285-17	Plug - Pipe	12 10 1
67-5470	Ring - Retaining	14 5 1	289-4	Coupling	11 5 1
67-5480	Shaft	14 2 1	302-2	Fitting - Grease	7 1 5
67-5490	Barrel	14 13 1	302-5	Fitting - Grease	10 14 1
67-5500	Kit - Repair	14 * 1	302-5	Fitting - Grease	1 30 2
67-5520	Fender	15 13 1	302-5	Fitting - Grease, Straight	6 21 2
67-5530	Assembly - Hydraulic Hose	11 19 1	302-11	Fitting - Grease 45°	10 1 1
67-5540	Rod - Piston	10 13 1	302-11	Fitting - Grease 45°	4 5 1
67-5560	Kit - Load Check	12 * 2	302-11	Fitting - Grease 45°	1 23 2
67-5570	Kit - Detent	12 * 4	302-22	Fitting - Grease	14 1 2
67-5580	Kit - Seal	12 * 1	302-40	Fitting - Grease 90°	1 24 2
67-5590	Kit - Return Spring	12 * 2	304-73	Fitting - Straight	9 15 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3314-528A

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
304-73	Fitting - Straight Hose Barb	15 * 1	3272-33	Pin - Cotter	15 4 1
304-77	Fitting - Tee	9 14 1	3274-7	Screw - Soc. Hd.	3 8 2
321-4	Screw - Cap Hex. Hd.	11 24 5	3274-80	Screw - Button Socket Hd.	6 15 4
321-11	Screw - Cap Hex. Hd.	11 6 2	3290-224	Washer - Dome, Hex.	3 6 4
322-5	Screw - Cap Hex. Hd.	15 11 2	3290-322	Pin - Cotter, Hair	16 9 2
322-7	Screw - Cap Hex. Hd.	3 19 2	3290-330	Screw - Cap Hex. Hd.	8 8 4
323-4	Screw - Cap Hex. Hd.	5 31 4	3290-378	Cable - Tie	11 * 5
323-7	Screw - Cap Hex. Hd.	16 5 2	3290-384	Pin - Lynch	1 1 4
323-7	Screw - Cap Hex. Hd.	6 28 6	3290-469	Nut - Grip	8 28 8
323-7	Screw - Cap Hex. Hd.	4 31 4	3296-9	Nut - Lock	8 9 4
323-10	Screw - Cap Hex. Hd.	4 9 2	3296-25	Nut - Lock	18 5 2
323-10	Screw - Cap Hex. Hd.	6 13 2	3296-59	Nut - Lock	8 14 8
323-11	Screw - Cap Hex. Hd.	4 19 1	32103-2	Nut - Wing	18 2 2
323-15	Screw - Cap Hex. Hd.	8 24 4	32104-82	Screw - Self Tapping	9 11 5
323-15	Screw - Cap Hex. Hd.	6 26 2	32104-82	Screw - Self Tapping	5 21 2
323-20	Screw - Cap Hex. Hd.	4 21 1	32120-42	Ring - Retaining	6 11 4
324-19	Screw - Cap Hex. Hd.	1 6 9	32128-12	Nut - Flange	3 15 2
325-6	Screw - Cap Hex. Hd.	17 1 2	32128-21	Nut - Flange	8 22 4
325-6	Screw - Cap Hex. Hd.	18 8 4	32128-21	Nut - Flange	7 8 22
325-7	Screw - Cap Hex. Hd.	18 4 2	32128-21	Nut - Flange	6 27 8
325-13	Screw - Cap Hex. Hd.	1 19 4	32128-21	Nut - Flange	9 29 1
325-14	Screw - Cap Hex. Hd.	17 4 4	32128-21	Nut - Flange	5 32 4
325-18	Screw - Cap Hex. Hd.	1 14 2	32128-21	Nut - Flange	4 33 8
325-22	Screw - Cap Hex. Hd.	1 21 2	32128-21	Nut - Flange (For Diesel)	16 1 2
3217-7	Nut - Hex.	4 20 2	32128-21	Nut - Lock	2 9 4
3217-9	Nut - Hex.	17 6 4	32128-23	Nut - Flange	1 10 8
3218-2	Nut - Jam	3 14 4	32128-23	Nut - Flange	2 32 4
3220-3	Nut - Jam	2 18 2	32128-25	Nut - Flange	8 20 8
3230-1	Bolt - Carriage	8 18 8	32128-25	Nut - Flange	16 8 4
3230-25	Bolt - Carriage	3 12 2	32128-25	Nut - Flange	15 9 2
3231-22	Bolt - Carriage	7 5 22	32128-25	Nut - Flange	3 13 2
3231-22	Bolt - Carriage	4 16 10	32128-42	Nut - Flange	1 2 9
3231-22	Bolt - Carriage	3 20 4	32128-43	Nut - Flange	4 1 10
3231-22	Bolt - Carriage	5 29 4	32128-43	Nut - Flange	9 1 5
3231-22	Bolt - Carriage	9 30 1	32128-43	Nut - Flange	6 5 8
3231-26	Bolt - Carriage	2 10 2	32128-43	Nut - Flange	3 7 10
3231-33	Bolt - Carriage	6 2 2	32128-43	Nut - Lock	2 6 34
3231-33	Bolt - Carriage	2 14 2	32144-14	Screw - Thread Forming	15 12 2
3231-34	Bolt - Carriage	4 10 1	32146-20	Nut - Jam	7 2 5
3231-36	Bolt - Carriage	2 3 30	32151-62	Ring - Retaining	2 25 4
3231-36	Bolt - Carriage	3 4 6	32151-79	Ring - Retaining	11 30 2
3231-36	Bolt - Carriage	9 25 5	32151-83	Ring - Retaining	11 33 2
3233-9	Bolt - Carriage	2 29 4	32152-4	Nut - Flange	11 11 7
3247-4	Screw - Set	5 28 2	340-1	Fitting - Straight	11 12 2
3250-31	Screw	12 16 4	340-2	Fitting - Straight	11 21 2
3253-7	Washer - Lock	17 2 6	340-77	Fitting - Elbow 90°	11 16 1
3253-7	Washer - Lock	18 6 2	340-82	Fitting - Elbow 90°	9 18 2
3253-17	Washer - Lock	12 28 4	340-97	Fitting - Elbow 90°	15 15 1
3253-21	Washer - Lock	5 30 4	340-99	Fitting - Elbow 90°	15 7 1
3256-23	Washer - Flat	15 10 4	340-112	Fitting - Elbow 90°	15 17 1
3256-24	Washer - Flat	7 6A/R	340-114	Fitting - Union	11 34 1
3256-24	Washer - Flat	6 12 10	353-974	Fitting - Cross	11 4 1
3256-24	Washer - Flat	4 26 5	353-982	Fitting - Elbow 90°	11 17 1
3256-26	Washer - Flat	17 5 10	353-983	Fitting - Straight	9 6 1
3257-5	Key - Woodruff	5 24 1	353-983	Fitting - Straight	11 26 1
3269-5	Rivet - Pop	8 17 18	353-984	Plug - Dust	9 8 1
3272-6	Pin - Cotter	12 5 4	353-984	Plug - Dust	11 32 2
3272-11	Pin - Cotter	9 20 8	353-985	Cap - Dust	9 10 2
3272-11	Pin - Cotter	2 21 5	353-985	Cap - Dust	11 29 1
3272-24	Pin - Cotter	15 3 2			

*Not Illustrated

23

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any

reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]