


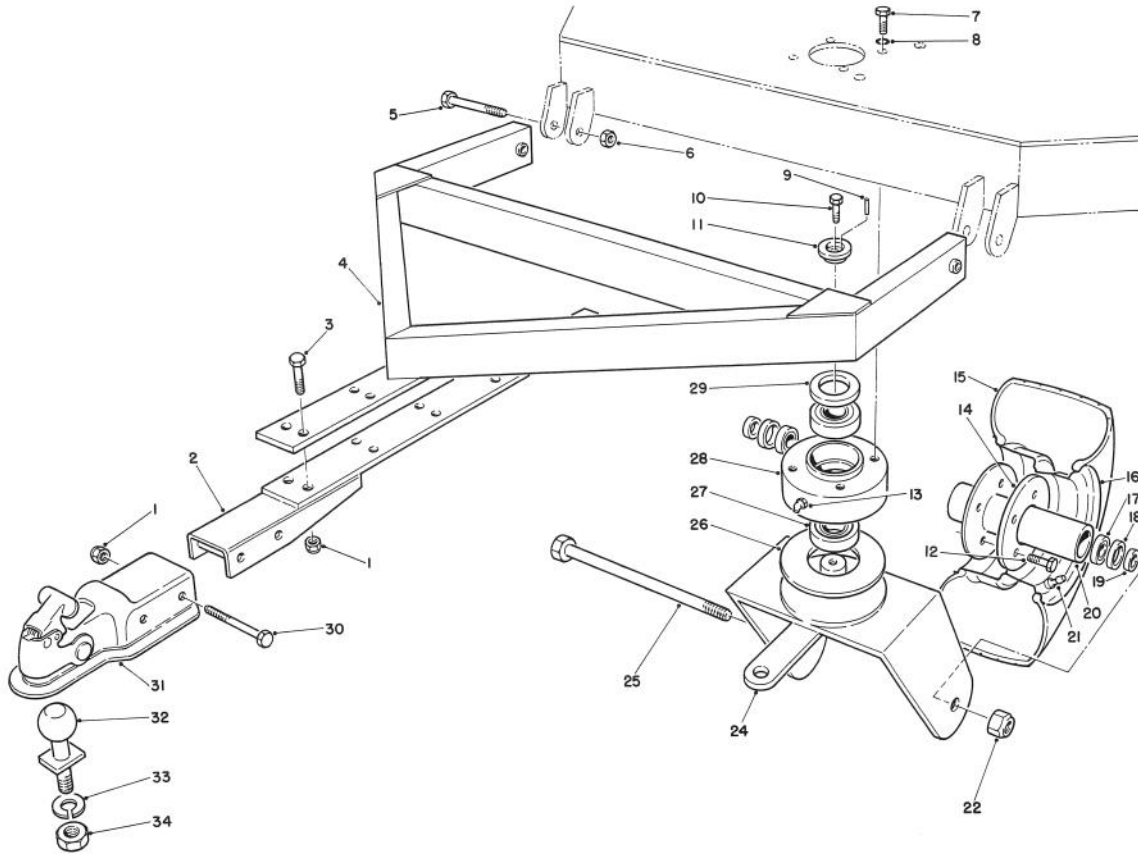

MODEL NO. 09500-10001 & UP


**PARTS
CATALOG**
FAIRWAY AERATOR


T-1309

TOW FRAME & FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-23	Nut - Lock	6
2	71-7020	Adapter W.A. - Hitch	1
3	325-8	Screw - Cap Hex. Hd.	4
4	71-6890	Hitch W.A.	1
5	327-14	Screw - Cap, Hex. Hd.	2
6	3217-11	Nut - Hex	2
7	325-5	Screw - Cap, Hex. Hd.	4
8	3253-7	Washer - Lock	4
9	32121-3	Pin - Roll	1
10	325-6	Screw - Cap, Hex. Hd.	1
11	71-6820	Cap - Retaining	1
12	3212-5	Bolt	4
13	302-61	Fitting - Grease	1
14	71-6760	Support - Rim	1
15	231-119	Tire	1
16	217-60	Rim	1
17	71-6780	Bearing	2

Ref. No.	Part No.	Description	No. Used
18	71-6790	Seal - Oil	2
19	71-6750	Spacer - Outer	2
20	71-6830	Hub W.A. - Wheel	1
21	232-35	Stem - Valve	1
22	3296-70	Nut - Hex	1
24	71-6730	Caster W.A.	1
25	71-6800	Shaft - Axle	1
26	71-6810	Disc - Plastic	1
27	71-6720	Bearing	2
28	71-6770	Housing - Bearing	1
29	71-6710	Seal - Oil	1
30	325-17	Screw - Cap, Hex. Hd.	2
31	71-7010	Coupler - Hitch	1
32	71-7070	Ball - Hitch	1
33	3253-11	Washer - Lock	1
34	72-8010	Nut - Hex	1

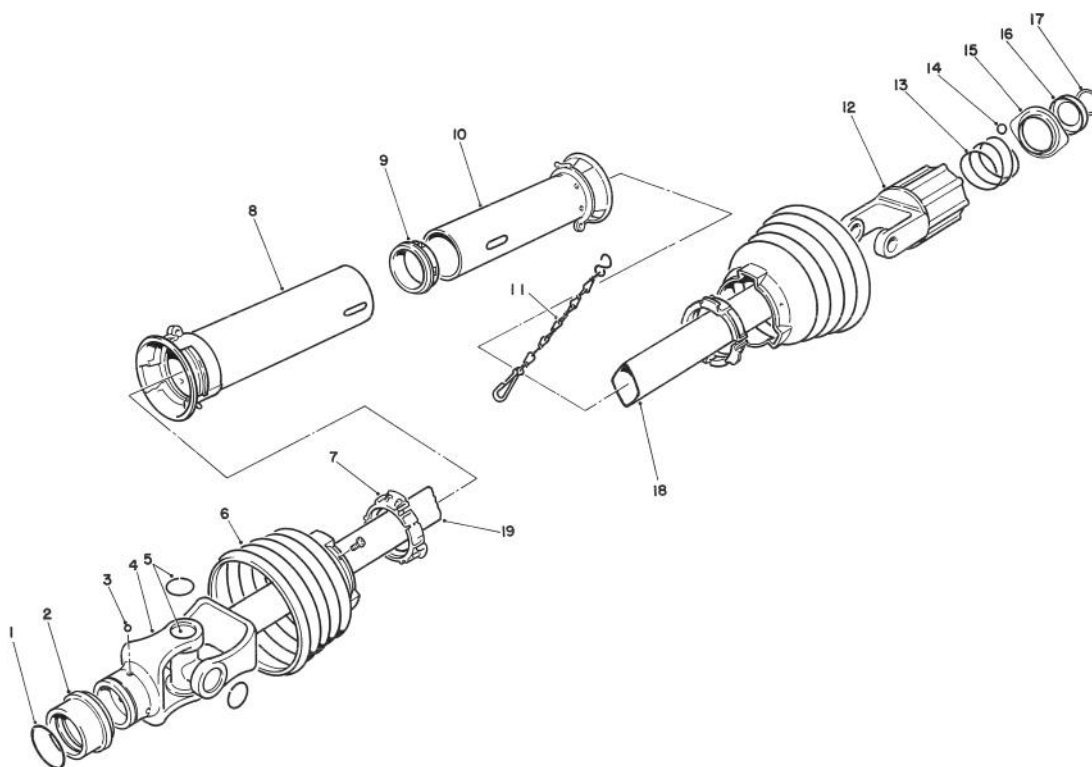


T-1154

DRIVE LINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Ring - Retaining	1
2		Assembly - Collar	1
3		Ball	3
4	77-4710	Yoke	1
5	77-4720	Cross & Bearing Kit	2
6	77-4730	Cone - Shield	2
7	77-4740	Ring - Bearing	2
8	77-4780	Tube - Shield, Outer	1
9	77-4790	Bearing - Support	1
10	77-4750	Tube - Shield, Inner	1
11	77-4760	Chain - Safety	1
12	77-4770	Clutch - Radial Pin	1

Ref. No.	Part No.	Description	No. Used
13		Spring - Compression	1
14		Ball	1
15		Collar - Lock	1
16		Ring - Flanged	1
17		Ring - Snap	1
†18		Outer Shaft & Yoke	1
†19		Inner Shaft & Yoke	1
*	77-4670	Kit - Collar (Incl. Ref. #1-3)	1
*	77-4660	Kit - Flange (Incl. Ref. #13-17)	1
*	77-4700	Drive Line (Complete)	1

*Not Illustrated

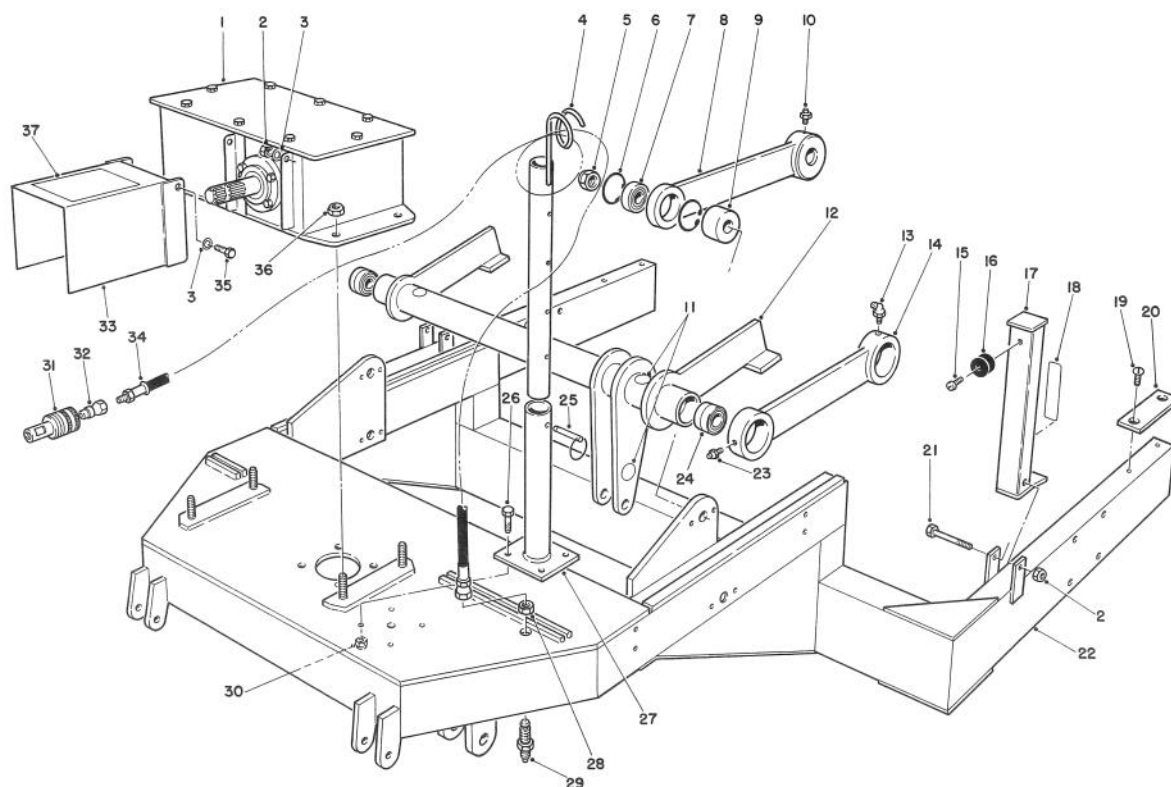

T-0898A


CHASSIS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Gear Case Assy. - Pickoff	1
2	3296-39	Nut - Lock	4
3	3256-56	Washer - Flat	4
4	71-6910	Extension W.A. - Stand	1
5	3296-70	Nut - Hex	2
6	32120-8	Ring - Retaining	4
7	70-9240	Bearing	2
8	71-6590	Lift Arm - Top	2
9	72-7970	Spacer - Lift Arm, Top	2
10	302-55	Fitting - Grease	3
11	58-6520	Decal - Grease	3
12	71-6510	Lift Unit W.A.	1
13	302-61	Fitting - Grease	2
14	71-6600	Lift Arm - Bottom, LH	1
*	74-3110	Lift Arm - Bottom, RH	1
15	47-2830	Screw	2
16	71-7530	Grommet	2
17	76-2920	Stand - Transport	2
18	67-5370	Decal - Caution	2
19	32108-20	Screw - Countersink	4
20	71-7510	Pad - Absorber, Shock	2

Ref. No.	Part No.	Description	No. Used
21	323-15	Screw - Cap, Hex. Hd.	2
22	71-6880	Frame W.A. - Carrier	1
23	302-55	Fitting - Grease	2
24	70-9240	Bearing	4
25	21-9110	Pin - Ball	1
26	322-5	Screw - Cap, Hex. Hd.	4
27	71-6950	Stand W.A. - Hose	1
†28		Nut - Bulkhead	1
29	354-33	Fitting Assembly - Bulkhead (Incl. Ref. #28)	1
30	3296-29	Nut - Lock	4
31		Body - Female	1
32		Tip - Male	1
33	82-3050	Shield - Drive Line (Incl. Ref. #37)	1
34	71-6980	Hose - Hydraulic	1
35	323-6	Screw - Cap, Hex. Hd.	2
36	3296-23	Nut - Lock	4
37	82-9400	Decal - Danger	1
*	71-7060	Coupler - Quick (Incl. Ref. #31 & 32)	1

*Not Illustrated

†Not Serviced Separately

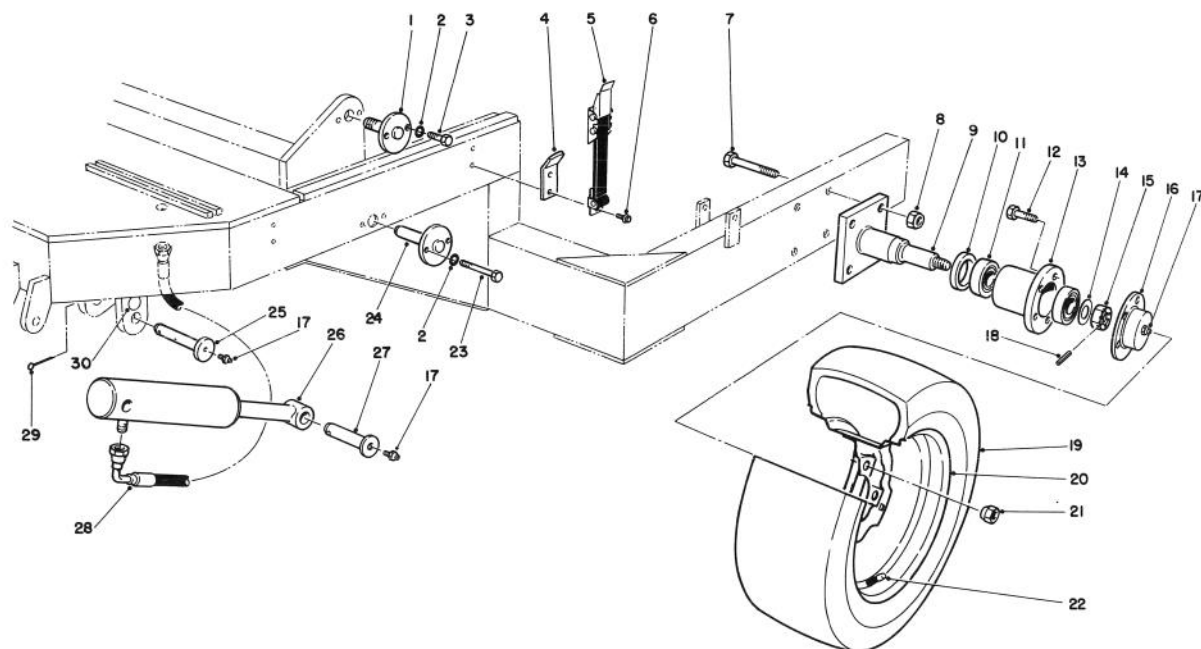


T-0897

REAR WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-6620	Pin - Location, Top	2
2	3253-21	Washer - Lock	4
3	323-6	Screw - Cap, Hex. Hd.	4
4	71-6900	Guide - Cover, Front	4
5	71-6990	Latch - Draw, Flexible	4
6	3234-13	Screw - Flange Hd.	8
7	327-14	Screw - Cap, Hex. Hd.	8
8	3296-61	Nut - Lock	8
9	71-6860	Shaft - Axle	2
10	71-6710	Seal - Oil	2
11	71-6630	Bearing	4
12	77-4520	Screw - Cap, Hex. Hd.	10
13	71-6850	Housing - Bearing	2
14	70-9520	Washer - Flat	2
15	70-9460	Nut - Castle	2

Ref. No.	Part No.	Description	No. Used
16	71-6840	Cap - Hub	2
17	302-55	Fitting - Grease	2
18	32121-34	Pin - Roll	2
19	231-101	Tire	2
20	217-117	Rim	2
21	23-7270	Nut - Wheel	10
22	232-27	Stem - Valve	2
23	323-14	Screw - Cap, Hex. Hd.	4
24	71-6520	Pin - Location, Bottom	2
25	71-6540	Pin - Mount, Front	1
26	71-6560	Cylinder - Hydraulic	1
27	71-6550	Pin - Mount, Rear	1
28	71-7490	Hose Assembly	1
29	3272-23	Pin - Cotter	2
30	58-6520	Decal - Grease	1

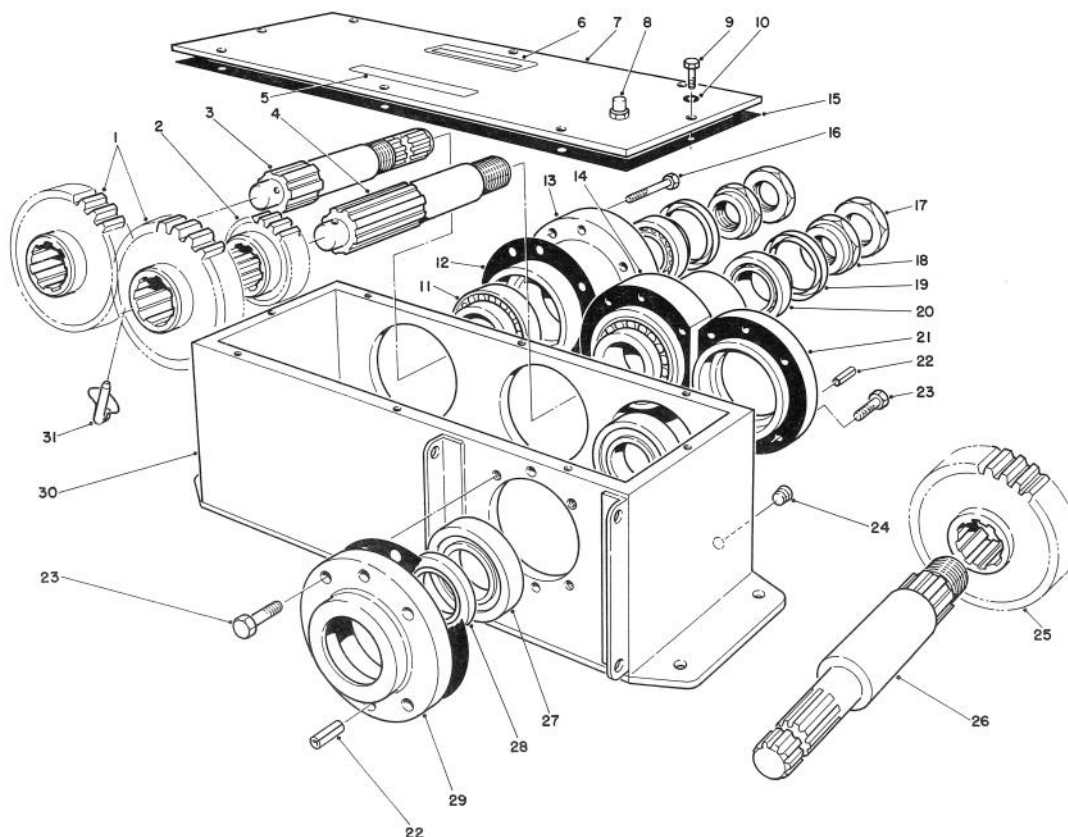


T-0893A

FRONT GEAR BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-7300	Gear - 30 Tooth	1
*	71-7310	Gear - 31 Tooth	1
*	71-7320	Gear - 32 Tooth	1
*	71-7330	Gear - 33 Tooth	1
*	71-7340	Gear - 34 Tooth	1
*	71-7350	Gear - 35 Tooth	2
*	71-7360	Gear - 36 Tooth	1
*	71-7370	Gear - 37 Tooth	1
*	71-7380	Gear - 38 Tooth	1
*	71-7390	Gear - 39 Tooth	1
*	71-7400	Gear - 40 Tooth	1
2	71-7200	Gear - 20 Tooth	1
3	71-6570	Shaft - Corer	1
4	70-9690	Shaft - Intermediate	1
5	65-3090	Decal	1
6	67-5360	Decal - Warning	1
7	70-9670	Cover - Gearbox	1
8	72-3800	Filter/Breather	1
9	322-5	Screw - Cap, Hex. Hd.	8
10	3253-4	Washer - Lock	8
11	71-6700	Bearing	2

Ref. No.	Part No.	Description	No. Used
12	71-7160	Gasket	4
13	71-6580	Housing - Bearing	1
14	71-6500	Housing - Bearing	1
15	71-6610	Gasket - Cover	1
16	323-8	Screw - Cap, Hex. Hd.	8
17	70-9720	Nut - Jam	2
18	70-9710	Nut - Hex	2
19	71-6490	Seal - Oil	2
20	71-6690	Bearing	2
21	70-9640	Cap - Bearing	1
22	32121-41	Pin - Roll	8
23	323-6	Screw - Cap, Hex. Hd.	8
24	285-21	Plug - Pipe	1
25	82-2900	Gear - 35 Tooth	1
26	70-9700	Shaft - Tractor	1
27	72-3820	Bearing	2
28	70-9680	Seal - Oil	1
29	70-9650	Cap - Bearing	1
30	70-9660	Gear Case W.A.	1
31	283-72	Pin - Lynch	2

*Not Illustrated

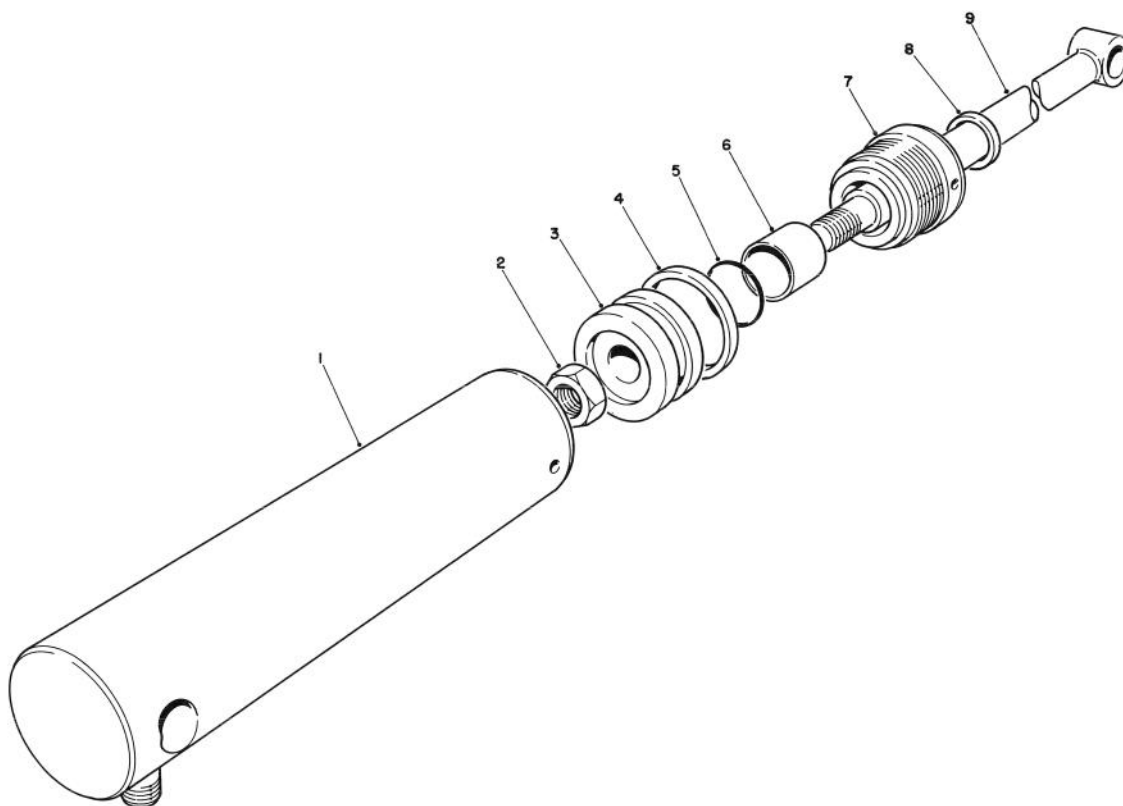

T-0899


CYLINDER ASSEMBLY 71-6560

Ref. No.	Part No.	Description	No. Used
1		Barrel	1
†2		Nut	1
†3		Piston	1
†4		Seal - Piston	1
†5		O-Ring	1
†6		Bushing - Bronze	1

Ref. No.	Part No.	Description	No. Used
†7		Cap - End	1
†8		Seal - Wiper	1
†9		Rod	1
*	71-6560	Cylinder (Complete)	1
*	71-6640	Seal Kit (Incl. Ref. #4-6 & 8)	1

*Not Illustrated

†Not Serviced Separately

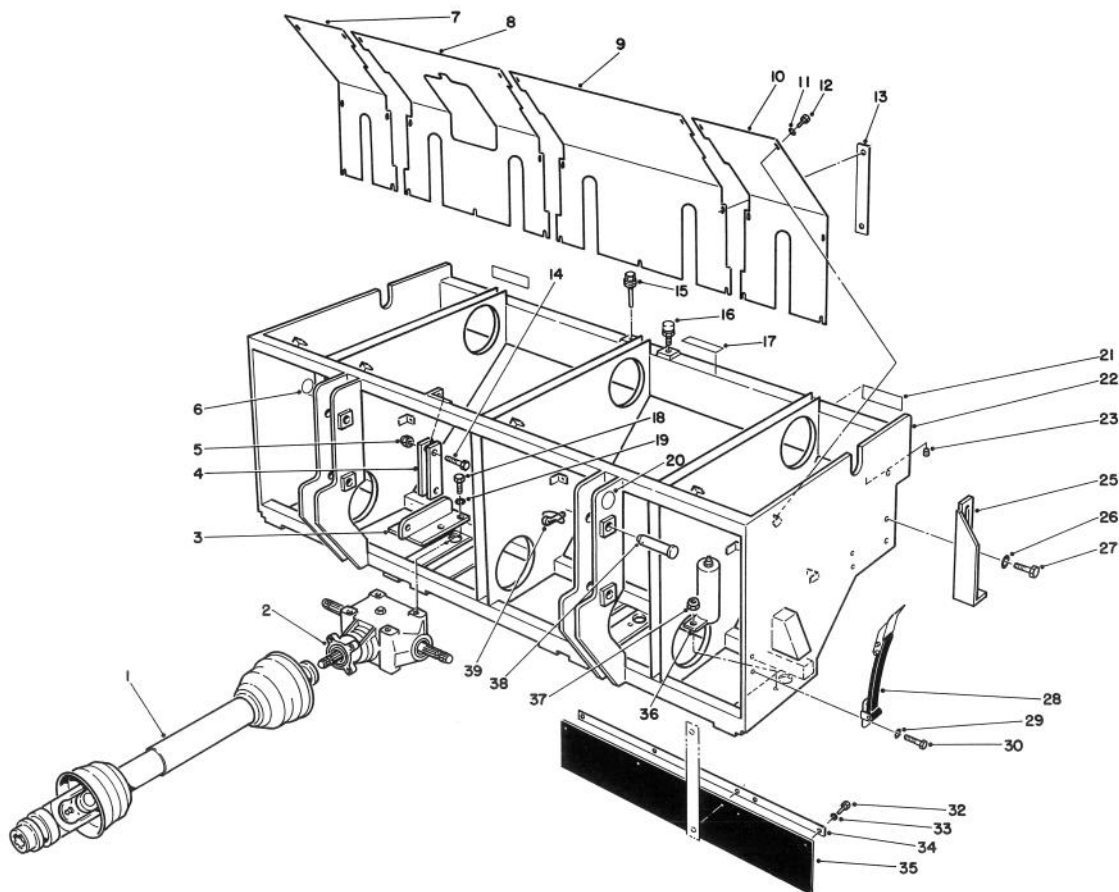


T-1137

CORER & SHIELD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	68-8060	Drive Line Assy. - Gearbox	1
2	77-3050	Gearbox - Bevel	1
3	76-3760	Plate - Mounting, Gearbox	1
4	71-7150	Plate - Upright, Gearbox	2
5	3296-23	Nut - Lock	2
6	58-6520	Decal - Grease	1
7	77-3070	Screen - Outer, R.H.	1
8	77-3090	Screen - Inner, R. H.	1
9	77-3080	Screen - Inner, L. H.	1
10	77-3060	Screen - Outer, L.H.	1
11	3253-4	Washer - Lock	16
12	322-3	Screw - Cap, Hex. Hd.	16
13	72-7980	Strap	6
14	325-8	Screw - Cap, Hex. Hd.	2
15	72-7960	Indicator - Oil Level	1
16	72-3800	Filter/Breather	1
17	67-5360	Decal - Warning, Covers	1
18	48-7830	Screw, Cap, Hex. Hd.	4
19	3253-7	Washer - Lock	4
20	58-6520	Decal - Grease	1
21	59-9930	Decal - Danger	2

Ref. No.	Part No.	Description	No. Used
22	77-3030	Head - Coring, W.A.	1
23	285-21	Plug - Pipe	1
25	71-7470	Adjuster - L.H.	1
*	71-7480	Adjuster - R. H.	1
26	3256-69	Washer - Flat	4
27	327-4	Screw - Cap, Hex. Hd.	4
28	71-6990	Latch - Draw, Flexible (Complete)	4
29	3253-3	Washer - Lock	8
30	321-2	Screw - Cap, Hex. Hd.	8
32	322-5	Screw - Cap, Hex. Hd.	10
33	3256-2	Washer - Flat	10
34	71-7460	Strap - Securing, Curtain	2
35	71-7450	Curtain - Lower	2
36	71-7180	Cover - Dust	6
37	3296-39	Nut - Lock	6
38	71-6530	Pin - Mount, Lift Arm	4
39	283-71	Pin - Lynch	4
*	72-7990	Cross & Bearing Kit (Used on Ref. #1)	2

*Not Illustrated

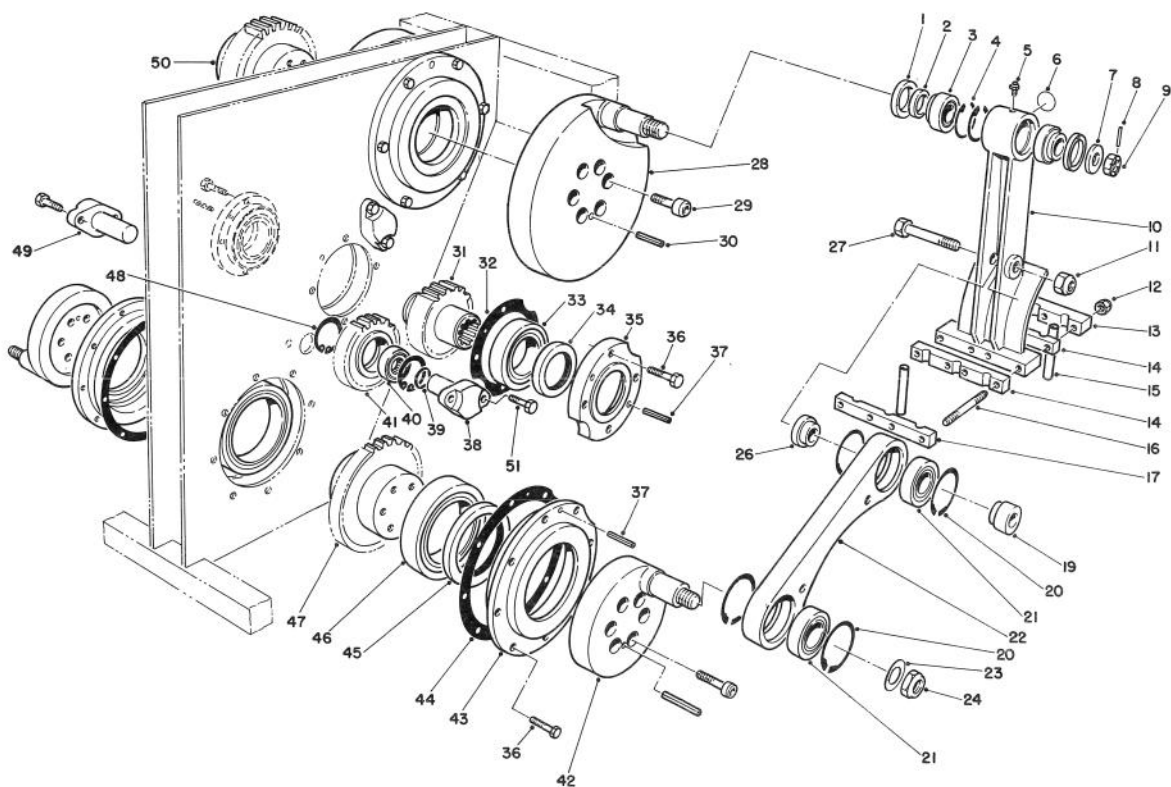


T-1138

CORER GEAR CASE & STOMPER ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	72-3840	Seal - Oil	12
2	70-9580	Spacer - Inner	6
3	72-3810	Bearing	12
4	32151-76	Ring - Retaining	12
5	302-55	Fitting - Grease	6
6	58-6520	Decal - Grease	6
7	70-9570	Spacer - Outer	6
8	32121-34	Pin - Roll	6
9	70-9460	Nut - Castle	6
10	70-9420	Arm - Tine	6
11	3296-70	Nut - Lock	6
12	3296-23	Nut - Lock	24
13	70-9380	Block - Outer, 6-Tine	6
*	70-9260	Block - Outer, 2-Tine	6

Ref. No.	Part No.	Description	No. Used
14	70-9400	Block - Inner, 6-Tine	12
*	70-9270	Block - Inner, 2-Tine	6
15	62-4600	Tine - 3/4"	36
*	71-0940	Tine - 7/8"	12
16	71-7120	Stud 1/2 x 150mm	24
*	71-7110	Stud 1/2 x 130mm	24
17	70-9390	Block - Bridging, 6-Tine	6
*	70-9410	Block - Bridging, 2-Tine	6
19	72-8060	Bushing - Spacer, Long	6
20	32151-88	Ring - Retaining	24
21	72-8070	Bearing	12
22	77-3040	Rod - Connecting	6
23	3256-62	Washer - Flat	6
24	3296-70	Nut - Lock	6

*Not Illustrated

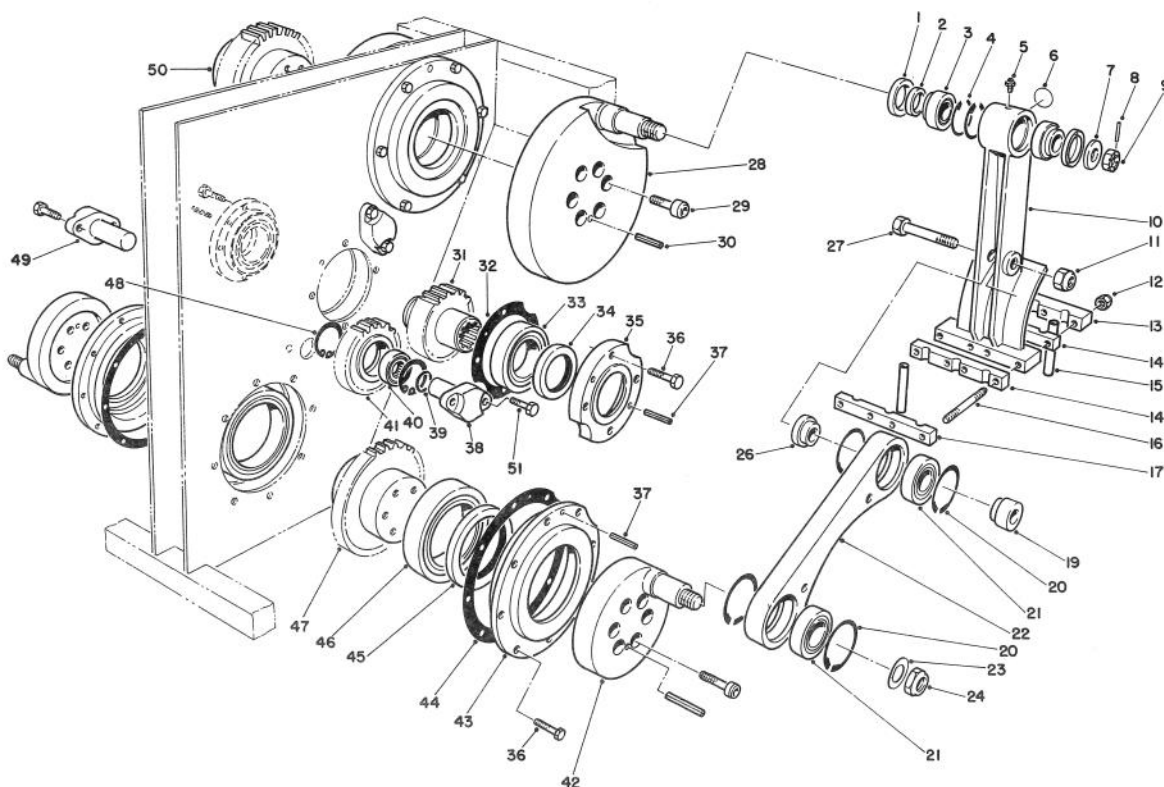


T-1138

CORER GEAR CASE & STOMPER ARM ASSEMBLY (Cont.)

Ref. No.	Part No.	Description	No. Used
26	72-8090	Bushing - Spacer, Short	6
27	70-9550	Bolt - Connecting	6
28	76-3780	Crank - Top	6
29	3274-4	Screw - Cap, Hex. Socket	72
30	71-7100	Pin - Roll	12
31	76-3630	Gear - Shaft, Drive	3
32	77-4510	Gasket	6
33	70-9220	Bearing	6
34	70-9350	Seal - Oil	6
35	76-3690	Flange - Shaft, Drive	6
36	3212-4	Screw - Cap, Hex. Hd.	132
37	32121-41	Pin - Roll	36
38	76-3680	Cap - End	6

Ref. No.	Part No.	Description	No. Used
39	237-168	O-Ring	12
40	77-4560	Bearing	6
41	76-3640	Gear - Idler	6
42	72-8100	Crank - Bottom	6
43	76-3700	Flange - Crankshaft	12
44	70-9470	Gasket	12
45	70-9340	Seal - Oil	12
46	70-9330	Bearing	12
47	76-3660	Crankshaft - Bottom	3
48	32120-62	Ring - Retaining	12
49	76-3670	Shaft - Idler	6
50	76-3650	Crankshaft - Top	3
51	3212-2	Screw - Cap, Hex. Hd.	24

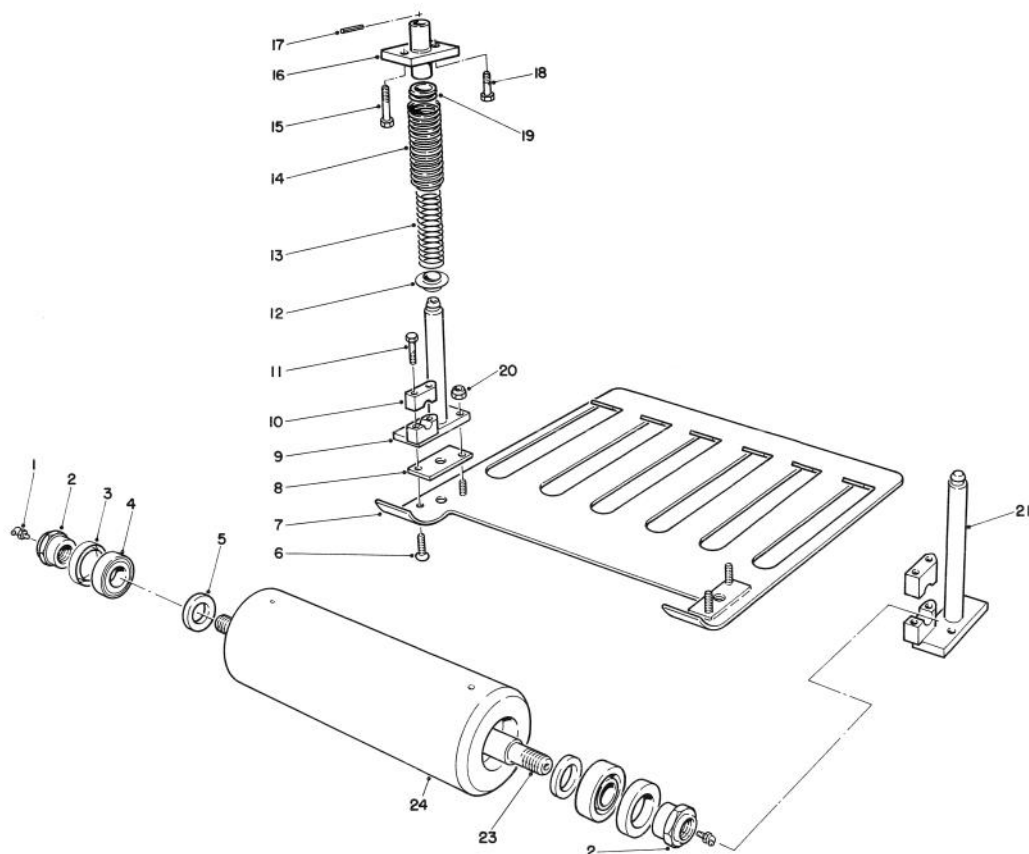


T-0896A

ROLLER & FINGER PLATE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302-61	Fitting - Grease	6
2	71-7290	Nut - Thin	6
3	71-6790	Seal - Oil	6
4	71-6780	Bearing	6
5	72-3830	Seal - Oil	6
6	3289-17	Screw - C'sink, Flat Hd.	12
7	70-9440	Plate - 6 Tine	3
*	70-9430	Plate - 2 Tine	3
8	71-7270	Plate - Backing	6
9	71-7220	Shaft - R.H.	3
10	72-8020	Block - Clamp, Top	6
11	3212-6	Screw - Cap, Hex. Hd.	12
12	71-7240	Ring - Clamp, Bottom	6

Ref. No.	Part No.	Description	No. Used
13	70-9450	Spring - Compression	6
14	82-2890	Shield - Rubber	6
15	323-35	Screw - Cap, Hex. Hd.	6
16	71-7130	Bushing	6
17	32121-15	Pin - Roll	6
18	323-7	Screw - Cap, Hex. Hd.	6
19	71-7230	Ring - Clamp, Top	6
20	3296-39	Nut -Lock	12
21	71-7210	Shaft - L.H.	3
23	71-7280	Shaft	3
24	71-7250	Roller Assembly (Incl. Ref. #1-5, 22 & 23)	3

*Not Illustrated

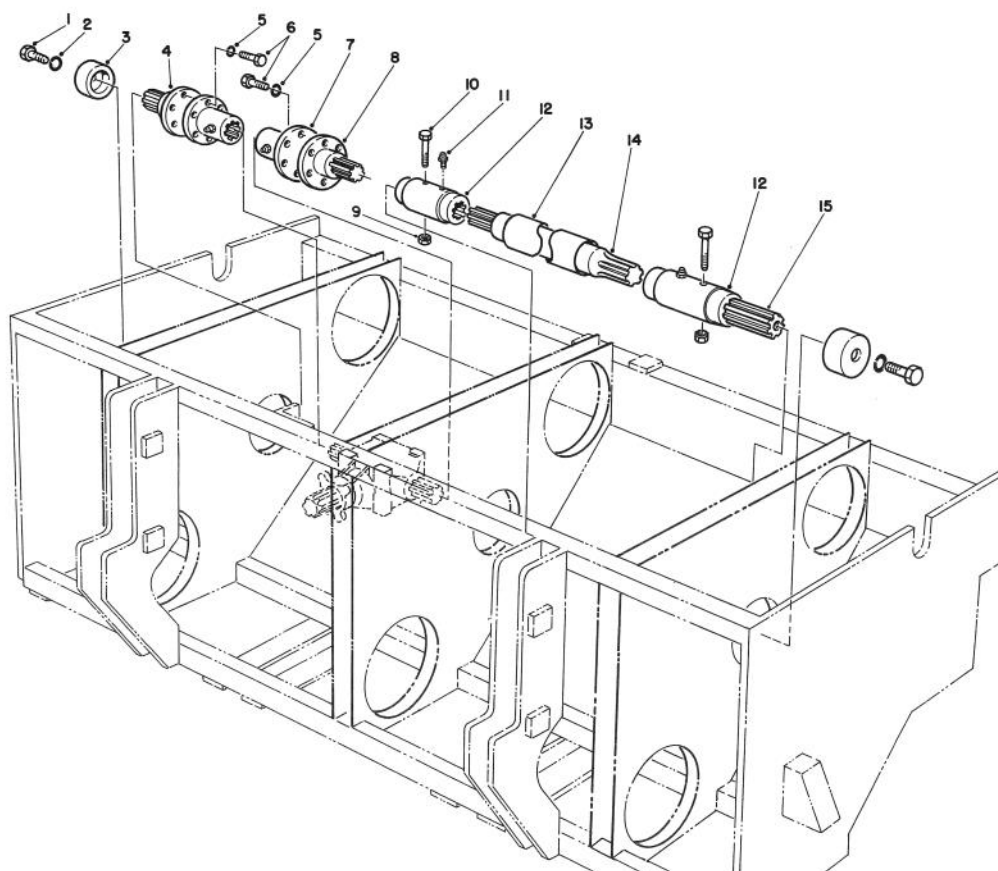


T-1139

DRIVE LINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	325-5	Screw - Cap, Hex. Hd.	2
2	48-8070	Washer - Lock	2
3	76-3750	Flange	2
4	76-3730	Shaft - Splined	1
5	3253-7	Washer - Lock	12
6	3274-89	Screw - Cap, Hex. Socket	12
7	76-3710	Coupling - Flange	2
8	76-3720	Shaft - Splined	1

Ref. No.	Part No.	Description	No. Used
9	3296-29	Nut - Lock	2
10	322-12	Screw - Cap, Hex. Hd.	2
11	302-55	Fitting - Grease	4
12	76-3740	Coupling - Splined	2
13	70-9620	Tube - Shield	1
14	70-9300	Shaft - Splined	1
15	70-9310	Shaft - Splined	1

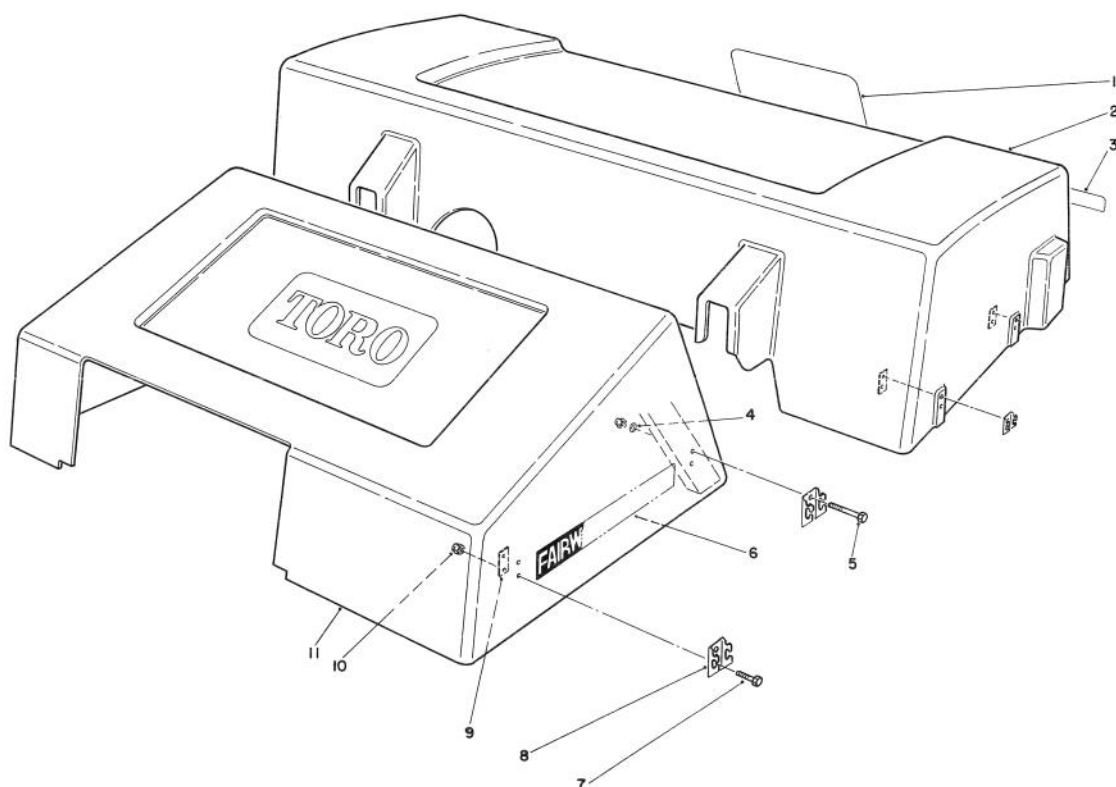


T-0900

AERATOR & CORING HEAD COVERS

Ref. No.	Part No.	Description	No. Used
1	67-7310	Decal - Toro	2
2	70-9190	Cover - Coring Head	1
3	59-9930	Decal - Danger	2
4	3256-22	Washer - Flat	4
5	321-9	Screw - Cap, Hex. Hd.	4
6	67-5330	Decal - Aerator, Fairway	2

Ref. No.	Part No.	Description	No. Used
7	321-4	Screw - Cap, Hex. Hd.	12
8	71-6990	Latch (Complete) (Keeper Shown Illustrated)	4
9	71-6940	Plate - Backing	6
10	3296-42	Nut - Lock	16
11	70-9200	Cover - Front, Aerator	1

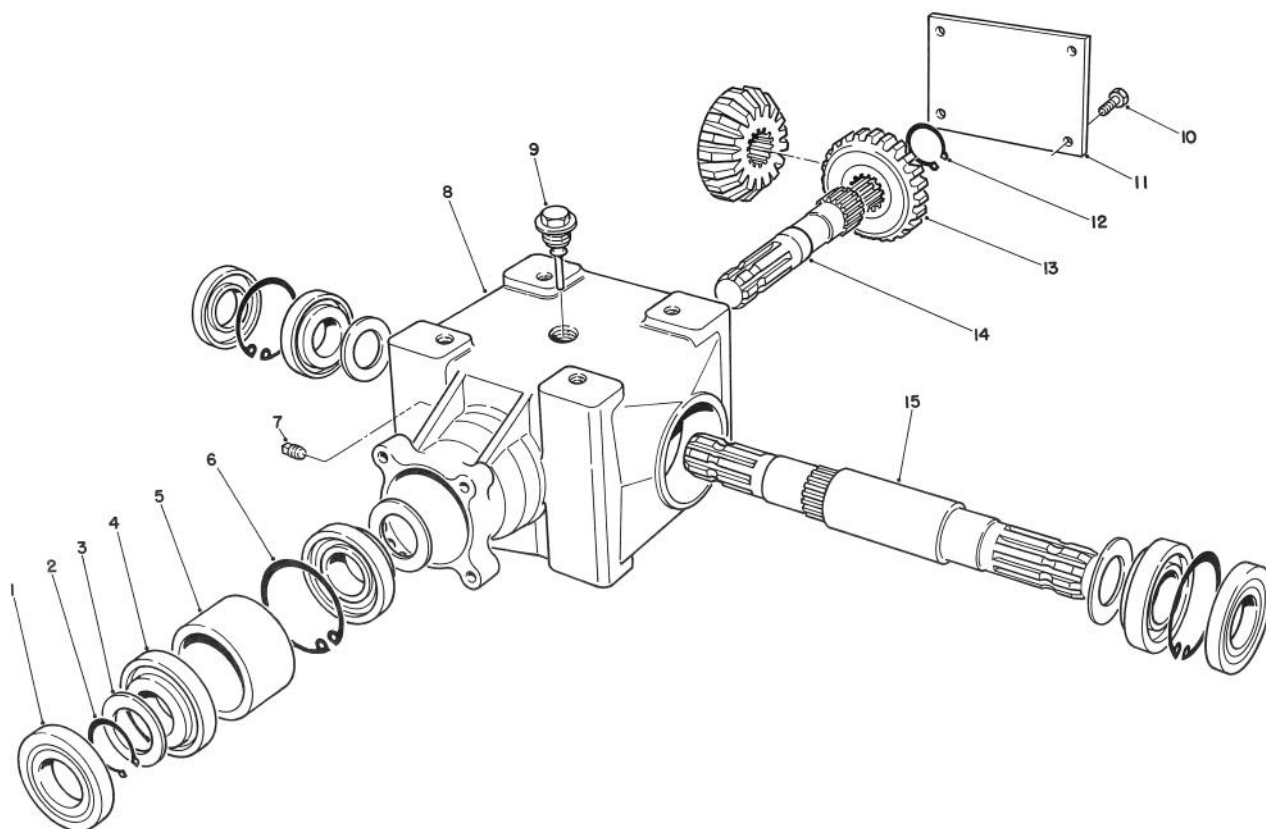

T-1127

GEAR BOX 77-3050

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	74-3200	Seal - Oil	3	9	77-4490	Plug - Oil Level/Filler	1
2	74-2960	Ring - Retaining	1	10	77-4500	Bolt - Hex. Socket Hd.	4
†3	74-2990	Shim Kit	4	11	77-4470	Cover	1
4	71-6630	Bearing	4	12	77-4460	Ring - Retaining	1
5	77-4430	Spacer	1	13	77-4450	Gear - 18 Tooth	2
6	32120-31	Ring - Snap	3	14	77-4440	Shaft - Input	1
7	281-1	Plug - Pipe	1	15	77-4480	Shaft	1
8		Case	1				

† Includes three (3) shims of various thickness to properly adjust gear backlash & shaft end play.
Required when replacing items #4, 5, & 13-15. Instruction sheet included.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any

reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]