



Groundsmaster® 3280-D 4-Wheel Drive

Model No. 30345 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame and Hood Assembly	 4	Driveshaft Assembly No. 98-5009	 33
Frame Assembly No. 108-2010	 5	Front Axle Assembly	 34
Fuel Tank and Control Panel Assembly	 6	Front Axle Assembly No. 108-6599-03	 35
Power Steering Assembly	 7	Right and Left Hand Brake Assembly	 37
Traction Pedal Assembly	 8	Air Cleaner and Drive Coupling Assembly	 38
Brake Pedal Assembly	 9	Air Cleaner Assembly No. 104-3428	 39
Battery and Engine Mount Assembly	 10	Engine Assembly No. 1	 40
Power-Take-Off and Shaft Assembly	 11	Engine Assembly No. 2	 41
Hydraulic Cylinder and Lift Arm Assembly	 12	Crankcase Assembly	 42
Radiator Assembly	 13	Oil Pan Assembly	 43
Transmission Installation Assembly	 14	Cylinder Head Assembly	 44
Center Section Assembly Transmission Assembly No. 108-1355	 15	Gear Case Assembly	 45
Neutral Return Arm Assembly Transmission Assembly No. 108-1355	 17	Head Cover Assembly	 46
Fuel Delivery System Assembly	 18	Dipstick and Guide Assembly	 47
Water and Fuel Filter Assembly No. 98-9305	 19	Main Bearing Case Assembly	 48
Lower Control Panel Assembly	 20	Camshaft and Idle Gear Shaft Assembly	 49
Driveshaft and 4 Wheel Drive Assembly	 21	Piston and Crankshaft Assembly	 50
Rear Axle Assembly	 22	Flywheel Assembly	 51
Bevel Pinion Shaft Assembly Rear Axle Assembly No. 106-1120	 23	Fuel Camshaft and Governor Shaft Assembly	 52
Differential Assembly Rear Axle Assembly No. 106-1120	 24	Idle Apparatus Assembly	 53
Axle Support Assembly Rear Axle Assembly No. 106-1120	 25	Injection Pump Assembly	 54
Bevel Gearcase Assembly Rear Axle Assembly No. 106-1120	 26	Governor Assembly	 55
Bevel Gear Shaft Assembly Rear Axle Assembly No. 106-1120	 27	Speed Control Plate Assembly	 56
Axle Case Assembly Rear Axle Assembly No. 106-1120	 28	Nozzle Holder and Glow Plug Assembly	 57
Axle Assembly Rear Axle Assembly No. 106-1120	 29	Nozzle Holder Assembly	 58
Bi-Directional Clutch Assembly No. 95-6296	 30	Alternator and Pulley Assembly	 59
Tie Rod Assembly No. 98-3871-03	 31	Alternator (Component Part) Assembly	 60
Hydraulic Cylinder Assembly No. 99-2415	 32	Starter Assembly	 61
		Starter Assembly No. 98-9705	 62
		Water Flange and Thermostat Assembly	 63
		Water Pump and Pipe Assembly	 64
		Valve and Rocker Arm Assembly	 65
		Inlet Manifold Assembly	 66
		Fuel Filter and Pump, Muffler Gasket and Engine Operator Manual	 67
		Gasket Assembly	 68
		Attachments and Accessories List	 69

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	LH.	left hand
BBC.	blade brake clutch	NI.	nylon insert
CARR.	carriage	NPTF.	national pipe thread fine
DEG.	degrees	PFH.	phillips flat head
EXT.	external	PPH.	phillips pan head
FH.	flat head	PPHTF.	phillips pan head thread forming
GA.	gauge	PRH.	phillips round head
HD.	heavy-duty	PTH.	phillips truss head
HF.	hex flange	PTO.	power-take-off
HH.	hex head	RH.	right hand
HHF.	hex head flange	ROPS.	roll-over protection system
HHFTF.	hex head flange thread forming	SFH.	slotted fillister head
HJ.	hex jam	SHH.	slotted hex head
HLH.	hex lag head	SHWH.	slotted hex washer head
HOC.	height-of-cut	SPH.	slotted pan head
HSBH.	hex socket button head	SQH.	square head
HSFH.	hex socket flat head	SRH.	slotted round head
HSH.	hex socket head	STD.	standard
HWH.	hex washer head	TAP.	self tapping
HWHTF.	hex washer head thread forming	TTH.	torx truss head


Footnotes

- ❶** Not illustrated
- ❷** Not serviced separately

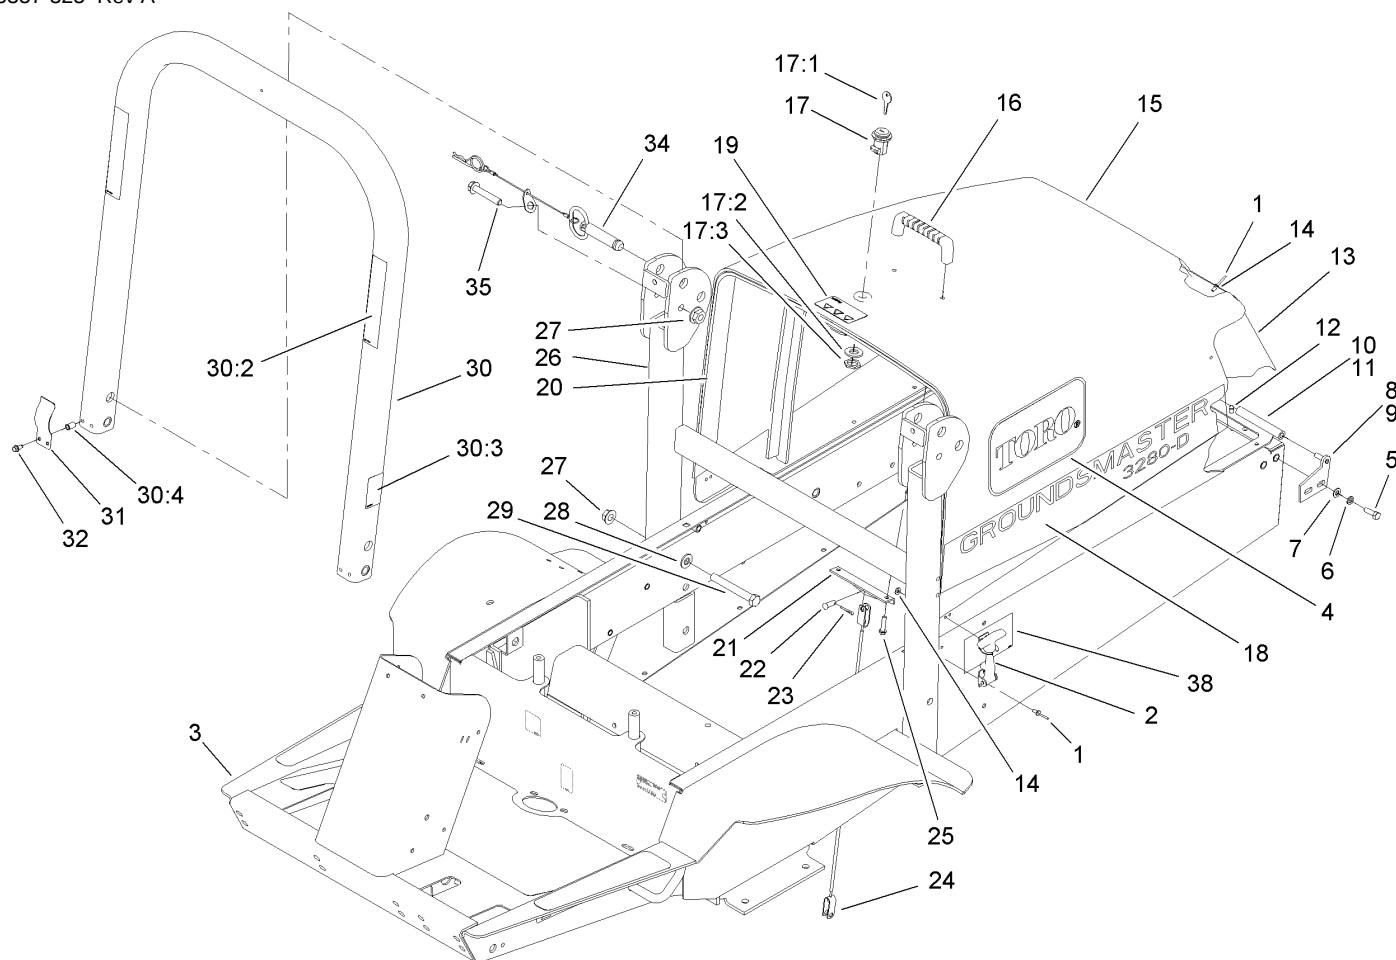


Frame and Hood Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	3269-4	18	Rivet-Pop	22	283-58	2	Pin-Clevis
2	95-6339	2	Latch	23	3272-10	2	Pin-Cotter
3	108-2010	1	Frame ASM	24	105-3650	1	Cable-Hood
4	66-6140	2	Decal	25	46-8092	2	Screw-Plastite
5	322-5	4	Screw-HH	26	110-5693-03	1	Lower ROPS ASM
6	3253-4	4	Washer-Lock	27	32128-23	6	Nut-HF
7	3256-23	4	Washer-Flat	28	3256-26	4	Washer-Flat
8	105-0003-01	1	RH Hinge Pin ASM	29	325-18	4	Screw-HH
9	105-0004-01	1	LH Hinge Pin ASM	30	110-5690	1	Upper ROPS ASM
10	105-4278-03	1	LH Hood Hinge ASM	30:2	108-2073	2	Decal-Warning
11	105-4277-03	1	RH Hood Hinge ASM	30:3	108-2074	1	Decal-ROPS
12	3290-412	12	Rivet	30:4	32148-11	4	Insert-Threaded
13	105-0006-03	1	Screen-Hood	31	110-5696	2	Spring-Leaf
14	3256-14	14	Washer-Flat	32	32144-10	4	Screw-HWH
15	104-3485	1	Hood	34	103-4553	2	ROPS Fold Pin ASM
16	65-5100	1	Handle-Door	35	325-13	2	Screw-HH
17	98-9315	1	Latch-Locking	38	94-8099	2	Decal
17:1	99-8350	2	Key-Latch, Locking				
17:2		1	Washer-Switch				
17:3		1	Nut-Switch				
18	108-2067	2	Decal				
19	106-6754	1	Decal-Danger				
20	105-3651	1	Strip-Foam				
21	105-0088-03	1	Bracket-Cable, Hood				

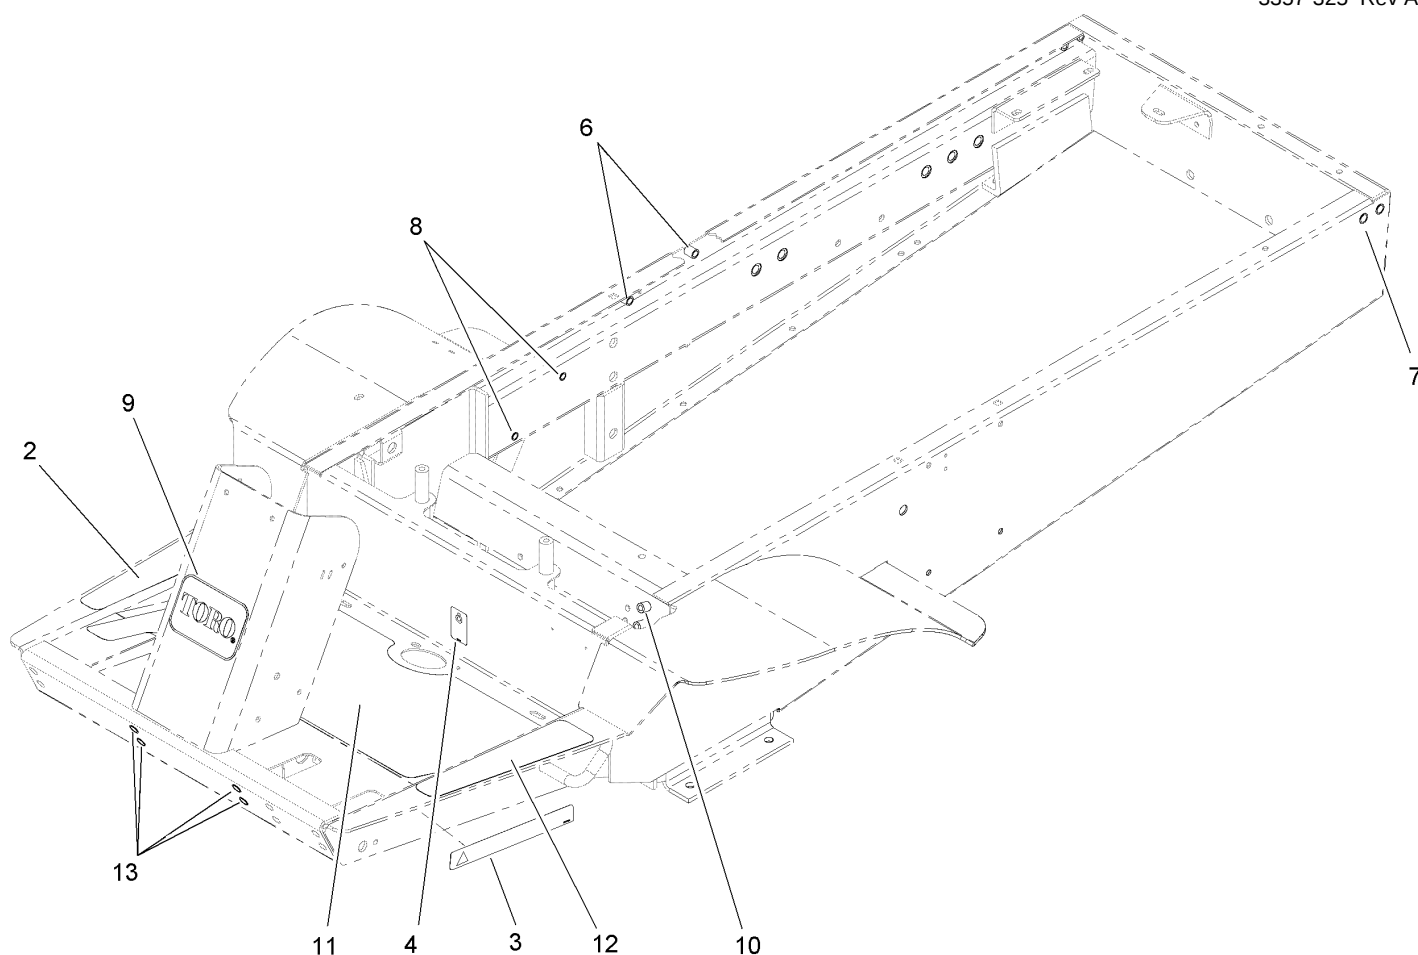 

Frame Assembly No. 108-2010


Ref	Part No.	Qty.	Description
2	93-7834	1	Decal-Footrest, RH
3	106-9206	2	Decal-Torque, Wheel
4	93-6686	1	Decal-Oil, HYD
6	32148-9	2	Insert-Nut
7	32148-7	4	Nut-Insert
8	32148-11	2	Insert-Threaded
9	67-1300	1	Decal
10	32148-8	4	Insert-Threaded
11	105-7160	1	Pad-Floor
12	66-3200	1	Tread-Footrest, LH
13	32148-10	4	Insert-Nut

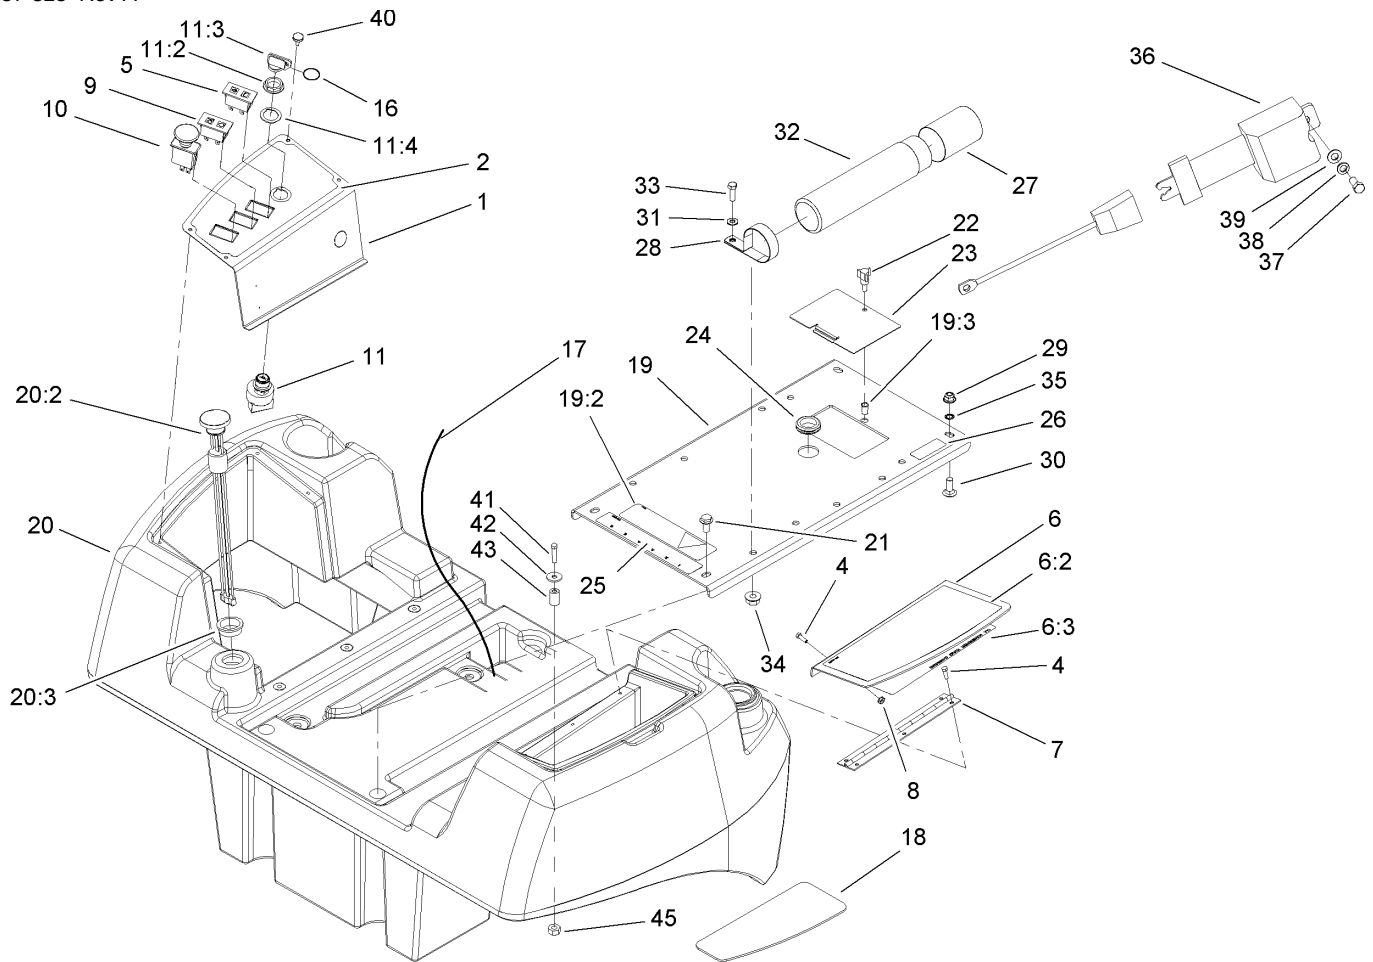 

Fuel Tank and Control Panel Assembly

Ref	Part No.	Qty.	Description
1	108-2017-03	1	Plate-Panel, Control
2	108-2018	1	Decal-Panel, Control
4	112-6349	6	Screw-HWH
5	100-8070	1	Lamp-Warning
6	108-6581	1	Cover ASM
6:2	108-6585	1	Decal-Danger
6:3	108-6583	1	Decal-Service
7	108-2024	1	Hinge
8	32149-8	3	Nut-Keps
9	100-8071	1	Lamp-Warning
10	93-9999	1	Switch-PTO
11	106-5269	1	Ignition Switch ASM
11:2	108-8660	1	Nut-Mounting
11:3	106-5270	1	Key Set-Ignition
11:4	108-8659	1	Washer-Backup
16	98-9321	1	Ring-Key
17	108-8657	1	Harness-Wire, Seat
18	108-2013	1	Pad-Rubber
19	108-6580	1	Seat Plate ASM
19:2	93-7841	1	Decal-Warning
19:3	32148-6	1	Insert-Nut
20	108-6596	1	Fuel Tank ASM
20:2	108-2025	1	Gauge-Fuel
20:3	95-8972	1	Grommet


Ref	Part No.	Qty.	Description
21	3234-1	2	Screw-HHF
22	233-70	1	Knob-Star, Three
23	108-2027-03	1	Cover-Bypass
24	240-5	1	Grommet
25	105-2511	1	Decal-Instructions, Starting
26	93-6680	1	Decal-Diesel
27	104-7048	1	Cap-Housing
28	2412-133	2	R-Clamp
29	104-8301	2	Nut-Flange, NI
30	3231-2	2	Screw-CARR
31	3256-23	2	Washer-Flat
32	104-7050	1	Housing-Manual
33	322-5	2	Screw-HH
34	32128-20	2	Nut-HF
35	32151-72	2	Ring-Retaining
36	100-4928	1	Belt-Seat
37	3212-4	2	Screw-HH
38	3253-6	2	Washer-Lock
39	3256-25	2	Washer-Flat
40	108-8689	4	Screw-Thumb
41	321-9	1	Screw-HH
42	3256-55	1	Washer-Flat
43	108-9688	1	Spacer
45	3296-42	1	Nut-Lock, NI

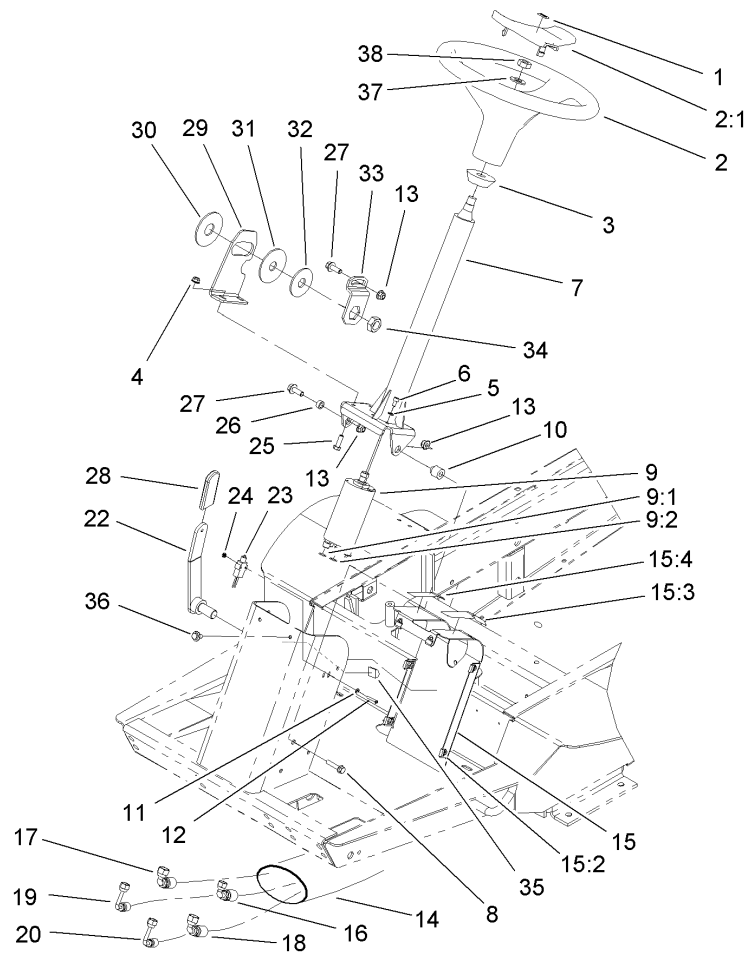 

Power Steering Assembly


Ref	Part No.	Qty.	Description
1	98-1459	1	Decal
2	98-1471	1	Wheel-Steering
2:1	98-1468	1	Cover-Wheel, Steering
3	93-5429	1	Collar-Foam
4	104-8300	2	Nut-Flange, NI
5	43-5930	4	Washer-Spring
6	99-7202	4	Screw
7	106-8098	1	Steering Column ASM
8	3234-18	1	Screw-HHF
9	108-2077	1	Steering Valve ASM
9:1	237-21	3	O-Ring
9:2	237-22	2	O-Ring
10	105-7166	1	Spacer
11	3256-53	2	Washer-Flat
12	3250-35	2	Screw-PPH
13	104-8301	3	Nut-Flange, NI
14	44-8530	1	Protector-Sleeve
15	105-7180	1	Tower Panel ASM
15:2	105-7170	6	Nut-Retainer
15:3	105-7179	1	Decal-Brake, Parking
15:4	82-8940	1	Decal-Steering, Tilt
16	108-2089	1	Hose ASM
17	108-2081	1	Hose ASM
18	108-2080	1	Hose ASM

Ref	Part No.	Qty.	Description
19	108-2084	1	Hose ASM
20	108-2085	1	Hose ASM
22	93-1353-03	1	Lever-Steering, Tilt
23	99-3410	1	Switch
24	32149-6	2	Nut-Keps
25	322-5	2	Screw-HH
26	80-2960	1	Spacer-Tower
27	3234-42	2	Screw-HHF
28	21-1880	1	Grip-Handle
29	105-7181-03	1	Plate-Pivot
30	31-0390	1	Disc-Friction
31	82-9010	1	Disc-Friction
32	80-2930	1	Washer-Flat
33	80-2880	1	Bracket-Tilt
34	3218-7	1	Nut-Jam
35	105-7188	2	Clamp-Adhesive
36	3250-32	6	Screw-PPH
37	3256-27	1	Washer-Flat
38	3296-33	1	Nut-Lock, NI

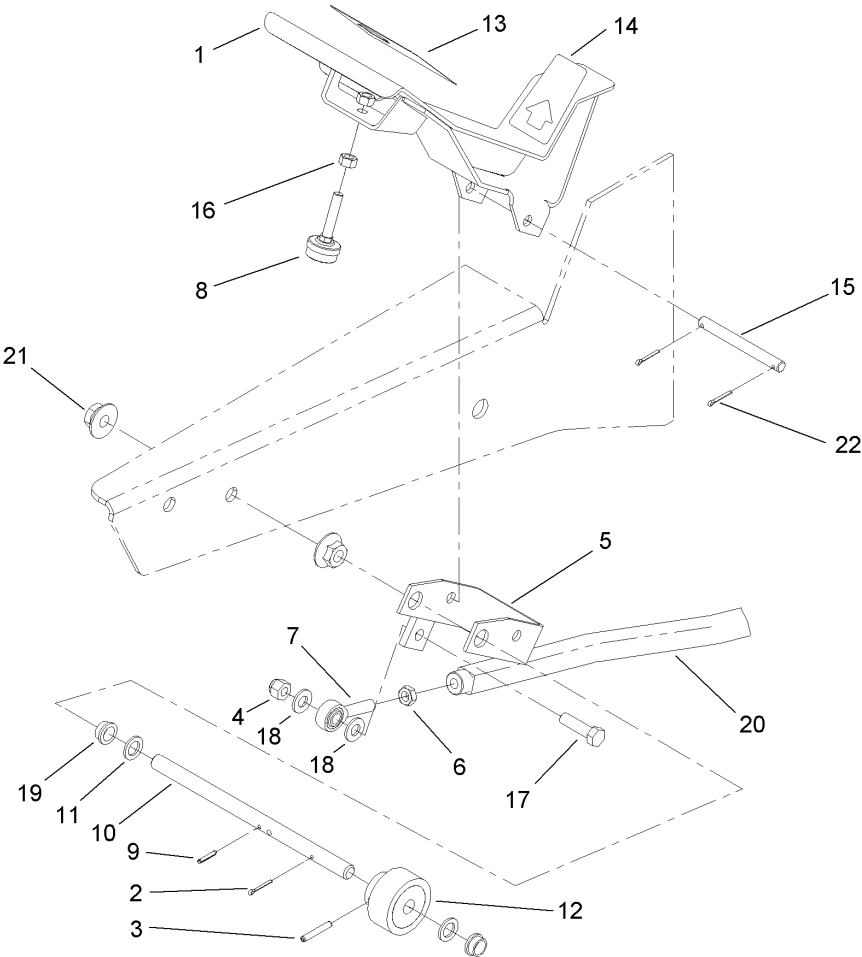 

Traction Pedal Assembly


Ref	Part No.	Qty.	Description				
1	105-7150-03	1	Pedal ASM				
2	3272-6	1	Pin-Cotter				
3	32121-6	1	Pin-Roll, Slotted				
4	3296-39	1	Nut-Lock, NI				
5	92-8854-03	1	Bracket-Pivot				
6	3220-3	1	Nut-HJ				
7	2411-36	1	Bearing-End, Rod				
8	32141-36	1	Screw-Adjustment, Level				
9	32121-50	1	Pin-Spring				
10	92-5534	1	Shaft-Pedal, Traction				
11	5-7570	2	Washer-Flat				
12	28-5220	1	Friction Wheel ASM				
13	94-3307	1	Pad-Pedal, Traction				
14	94-3308	1	Pad-Pedal, Traction				
15	92-5537	1	Pin-Pedal, Traction				
16	3217-6	2	Nut-Hex				
17	323-29	1	Screw-HH				
18	3256-24	2	Washer-Flat				
19	256-156	2	Bushing-Flange				
20	108-8661-03	1	Traction Rod ASM				
21	32128-56	2	Nut-HF				
22	3272-10	2	Pin-Cotter				

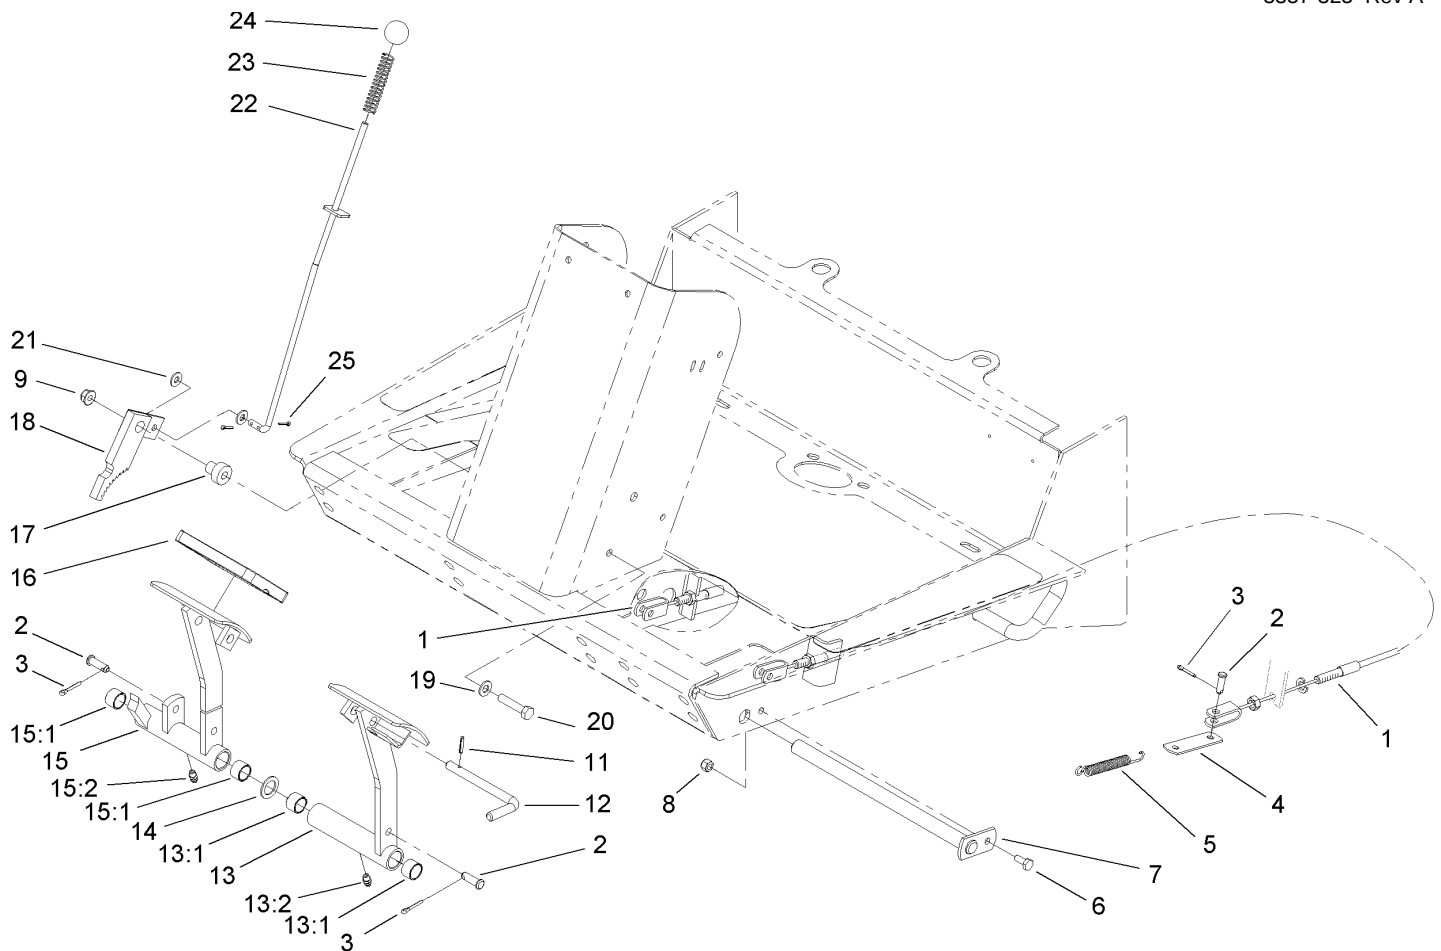 

Brake Pedal Assembly


Ref	Part No.	Qty.	Description
1	108-6556	2	Cable-Brake
2	283-58	4	Pin-Clevis
3	3272-10	4	Pin-Cotter
4	63-6750	2	Link-Cable, Brake
5	3-7243	2	Spring-Extension
6	321-4	1	Screw-HH
7	63-6210-03	1	Pin-Brake
8	3296-42	1	Nut-Lock, NI
9	104-8300	1	Nut-Flange, NI
11	32121-50	1	Pin-Spring
12	63-7880	1	Pin-Latch, Brake
13	63-6180	1	Pedal-Brake, LH
13:1	256-42	2	Bushing
13:2	302-5	1	Fitting-Grease
14	3256-69	2	Washer-Flat
15	63-6190	1	Pedal-Brake, RH
15:1	256-42	2	Bushing
15:2	302-5	1	Fitting-Grease
16	93-8742	2	Footpad-Brake
17	105-7156	1	Spacer
18	63-7900-03	1	Rack ASM
19	3256-23	1	Washer-Flat
20	322-7	1	Screw-HH
21	3256-22	2	Washer-Flat

Ref	Part No.	Qty.	Description
22	105-7168	1	Rod ASM
23	71-8310	1	Spring-Compression
24	233-17	1	Knob
25	3272-5	2	Pin-Cotter

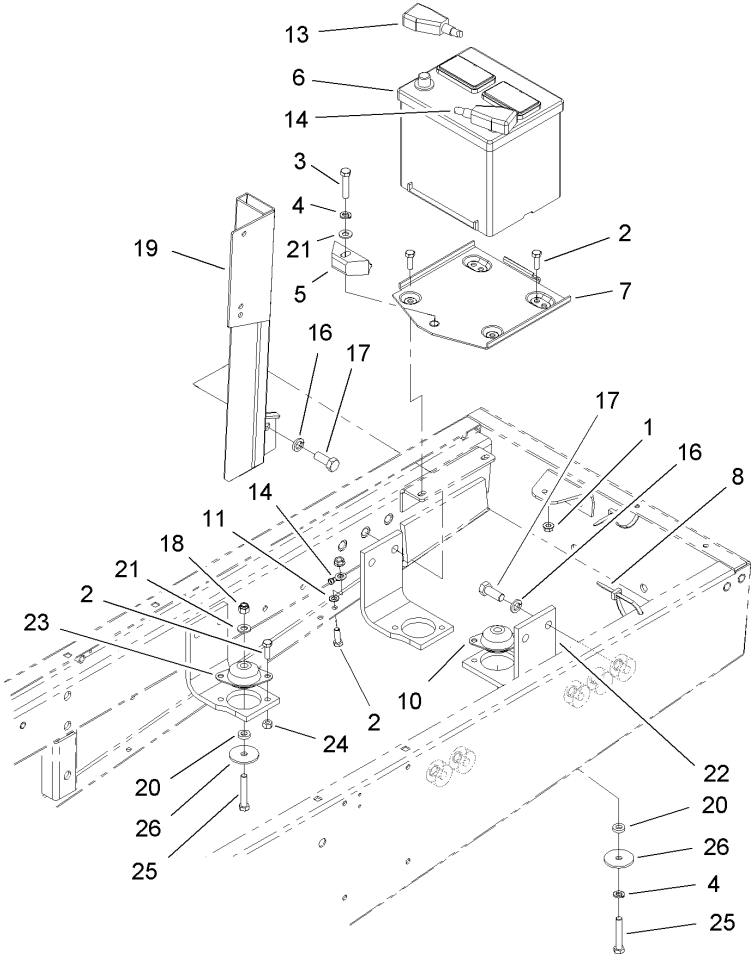 


Battery and Engine Mount Assembly

Ref	Part No.	Qty.	Description				
1	32128-20	4	Nut-HF				
2	322-5	12	Screw-HH				
3	323-9	1	Screw-HH				
4	3253-21	2	Washer-Lock				
5	66-2490	1	Retainer-Battery				
6	106-5187	1	Battery				
7	94-7343	1	Battery Base ASM				
8	3290-378	2	Tie-Cable				
10	63-7141	1	Mount-Shock, Engine				
11	3255-8	1	Washer-Lock				
13	104-0086	1	Cable-Battery, Positive				
14	105-0040	1	Cable-Battery, Negative				
16	3253-7	8	Washer-Lock				
17	3213-2	8	Screw-HH				
18	3296-39	3	Nut-Lock, NI				
19	105-2513-03	1	Air Cleaner Mount ASM				
20	80-7730	4	Spacer				
21	3256-24	4	Washer-Flat				
22	95-6271-03	4	Bracket-Mount, Engine				
23	63-7142	3	Mount-Shock, Engine				
24	3296-29	8	Nut-Lock, NI				
25	323-11	4	Screw-HH				
26	63-7400	4	Washer-Rebound				

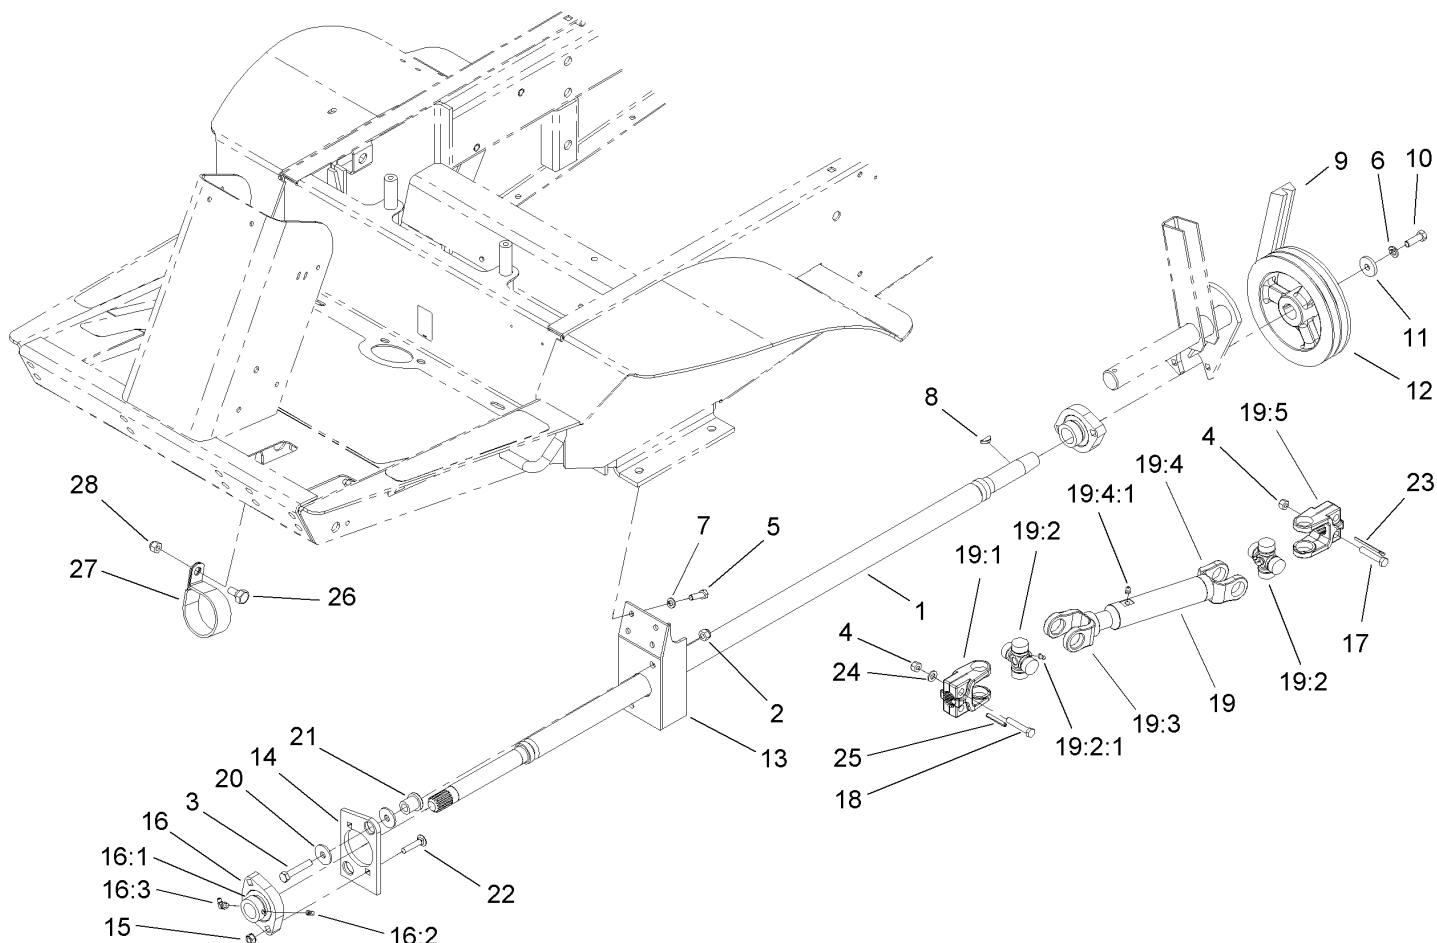 

Power-Take-Off and Shaft Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	92-8855-03	1	Shaft-PTO	19:2:1	62-3820	1	Fitting-Grease
2	3296-39	2	Nut-Lock, NI	19:3	108-6550	1	Shaft-Yoke, Slip
3	323-10	2	Screw-HH	19:4	108-6551	1	Tube-Yoke, Slip
4	3296-29	5	Nut-Lock, NI	19:4:1	302-58	1	Fitting-Straight
5	322-5	4	Screw-HH	19:5	54-9090	1	Yoke-End
6	3253-21	1	Washer-Lock	20	63-8410	4	Washer
7	3253-4	4	Washer-Lock	21	63-9750	2	Mount
8	3257-5	1	Key-Woodruff	22	3230-4	2	Screw-CARR
9	63-6240	1	V-Belt	23	3272-15	1	Pin-Cotter
10	323-18	1	Screw-HH	24	3256-23	1	Washer-Flat
11	29-4730	1	Washer-Flat	25	32121-34	1	Pin-Roll
12	43-5320-03	1	Pulley-PTO	26	46-3380	1	Bolt-Shoulder
13	92-8751-03	1	PTO Bearing Bracket ASM	27	2412-102	1	Clamp-R
14	84-7580	1	Plate-Support, Bushing	28	3296-39	1	Nut-Lock, NI
15	32149-1	2	Nut-Keps				
16	92-8799	1	Bearing-Flange				
16:1	251-77	1	Collar-Lock, Bearing				
16:2	3245-35	1	Screw-Set				
16:3	302-40	1	Fitting-Grease				
17	322-9	4	Screw-HH				
18	322-14	1	Screw-HH				
19	108-1366	1	PTO Drive Shaft ASM				
19:1	54-9040	1	Yoke-End				
19:2	54-9180	2	U-Joint Kit				

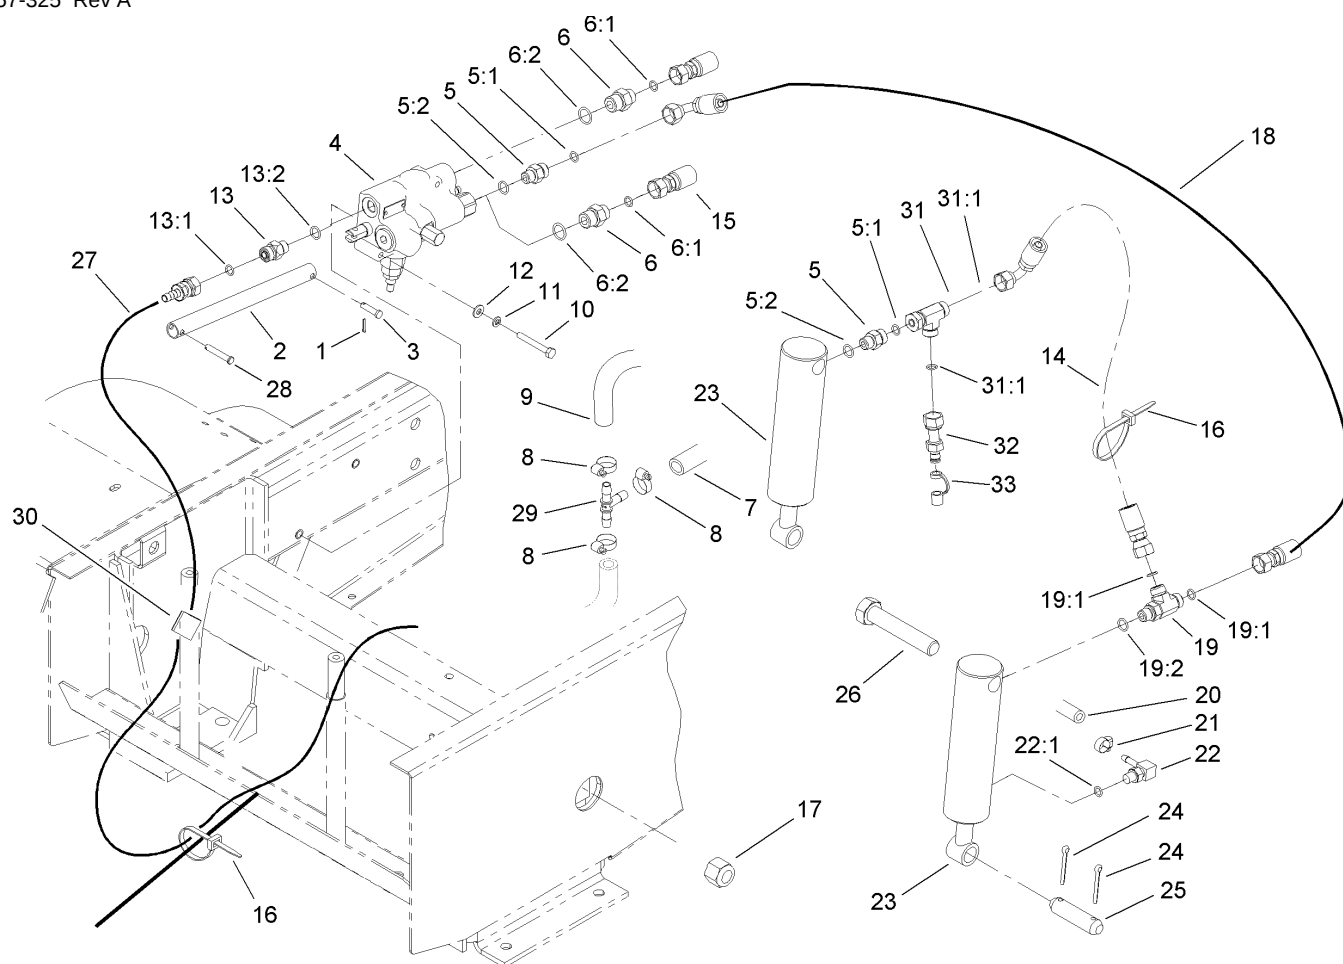 

Hydraulic Cylinder and Lift Arm Assembly


Ref	Part No.	Qty.	Description
1	3272-5	2	Pin-Cotter
2	108-2021-03	1	Tube-Link
3	283-26	1	Pin
4	108-2022	1	Control Valve ASM
④:1	108-8690	1	Cartridge-Transfer, Weight
④:2	108-8691	1	Pilot Check Kit
④:3	108-8692	1	Spring Center Kit
④:4	108-8693	1	Seal Kit
5	340-2	2	Fitting-HYD, Straight
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
6	340-3	2	Adapter
6:1	237-22	1	O-Ring
6:2	237-79	1	O-Ring
7	100-5641	1	Hose ASM
8	2412-36	3	Clamp-Hose
9	100-5649	1	Hose
10	321-18	2	Screw-HH
11	3253-3	2	Washer-Lock
12	3256-22	2	Washer-Flat
13	108-2093	1	Valve-Check
13:1	237-22	1	O-Ring
13:2	237-42	1	O-Ring
14	108-2083	1	Hose ASM

Ref	Part No.	Qty.	Description
15	108-2088	1	Hose ASM
16	3290-378	2	Tie-Cable
17	3296-51	2	Nut-Lock, NI
18	108-2082	1	Hose ASM
19	340-86	1	Fitting-HYD, Tee
19:1	237-22	2	O-Ring
19:2	237-42	1	O-Ring
20	92-5082	2	Hose-HYD
21	2412-108	2	Clamp-Worm
22	304-99	2	Stem-Hose
22:1	237-78	1	O-Ring
23	63-6630	2	Cylinder-HYD
24	3272-23	4	Pin-Cotter
25	27-4240	2	Pin-Cylinder
26	328-7	2	Screw-HH
27	108-2090	1	Hose ASM
28	283-66	1	Pin-Clevis
29	354-107	1	Fitting-HYD, Tee
30	105-7188	1	Clamp-Adhesive
31	340-115	1	Fitting-Tee
31:1	237-22	2	O-Ring
32	86-5480	1	Nipple-Test
33	354-79	1	Cap-Dust

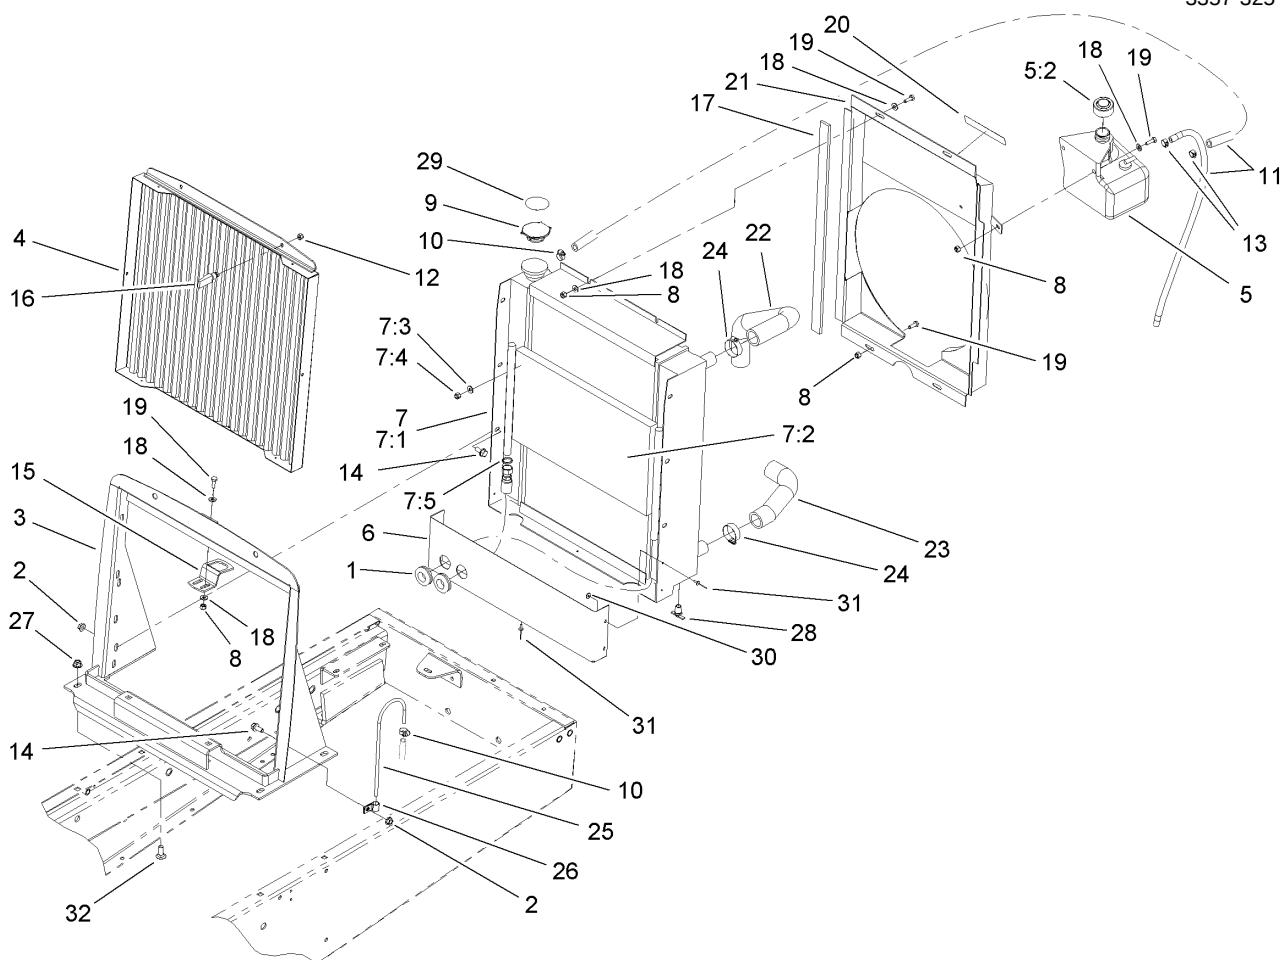 

Radiator Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	240-4	2	Grommet-Rubber	19	321-4	8	Screw-HH
2	32128-20	6	Nut-HF	20	93-7272	1	Decal-Warning
3	110-9668-03	1	Radiator Support ASM	21	108-9678-03	1	Fan Shroud ASM
4	108-2062-03	1	Screen ASM	22	104-3443	1	Hose-Radiator, Upper
5	93-5975	1	Coolant Reservoir ASM	23	104-3442	1	Hose-Radiator, Lower
5:2	93-5960	1	Cap-Reservoir	24	2412-34	4	Clamp-Hose
6	110-9663-03	1	Shield-Radiator, Bottom	25	66-3180	1	Tube-Vent
7		1	Radiator / Oil Cooler ASM	26	2412-103	2	Clamp
7:1	105-4289	1	Radiator	27	104-8301	4	Nut-Flange, NI
7:2	105-4290	1	Cooler-Oil	28	304-46	1	Draincock
7:3	3253-4	4	Washer-Lock	29	106-5976	1	Decal-Warning
7:4	3217-6	4	Nut-Hex	30	3269-10	2	Washer-Back
7:5	237-22	2	O-Ring	31	3269-13	5	Rivet-Pop
8	3296-42	8	Nut-Lock, NI	32	3231-2	4	Screw-CARR
9	66-3240	1	Cap-Radiator				
10	2412-108	2	Clamp-Worm				
11	110-4103	2	Hose-Fuel				
12	1-804254	2	Nut				
13	2412-98	2	Clamp				
14	3234-5	6	Screw-HHF				
15	98-9316	1	Latch-Hood				
16	74-5950	2	Latch-Swell				
17	108-9683	2	Strip-Foam				
18	3256-22	14	Washer-Flat				

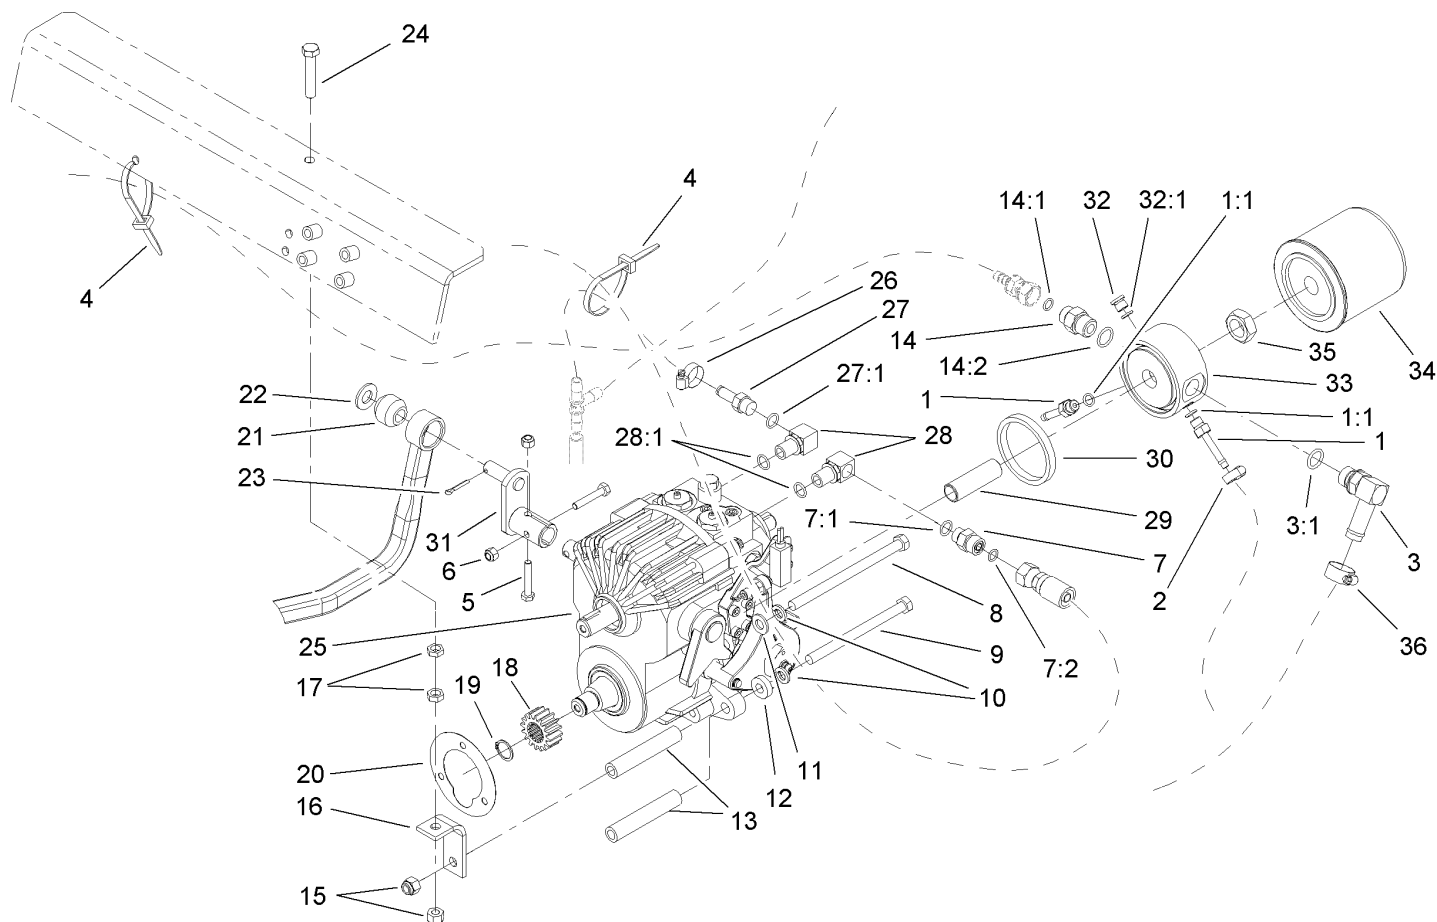 

Transmission Installation Assembly

Ref	Part No.	Qty.	Description
1	92-5512	2	Fitting-Hose, Barbed
1:1	237-78	1	O-Ring
2	2412-108	2	Clamp-Worm
3	92-5086	1	Fitting-Elbow, 90 DEG
3:1	237-79	1	O-Ring
4	3290-378	2	Tie-Cable
5	321-9	2	Screw-HH
6	3296-42	2	Nut-Lock, NI
7	82-8530	1	Fitting-Straight
7:1	237-42	1	O-Ring
7:2	237-22	1	O-Ring
8	27-9620	1	Screw-HH
9	323-39	3	Screw-HH
10	3253-21	4	Washer-Lock
11	3256-24	1	Washer-Flat
12	5-0652	1	Spacer
13	27-3680	4	Spacer-Mounting
14	340-3	1	Adapter
14:1	237-22	1	O-Ring
14:2	237-79	1	O-Ring
15	3296-39	2	Nut-Lock, NI
16	63-7170	1	Anchor-Transmission
17	3218-3	2	Nut-Jam
18	86-7220	1	Gear-Pinion


Ref	Part No.	Qty.	Description
19	32120-72	1	Ring-Snap
20	27-3690	1	Gasket-Transmission
21	23-2270	1	Bushing-Rubber
22	3256-26	1	Washer-Flat
23	3272-10	1	Pin-Cotter
24	67-1900	1	Screw-HH
25	108-1355	1	Transmission ASM
26	2412-36	1	Clamp-Hose
27	353-979	1	Fitting-Straight
27:1	237-42	1	O-Ring
28	66-3110	2	Fitting-HYD, 90 DEG
28:1	237-42	1	O-Ring
29	92-5085	1	Union-Filter
30	92-5087	1	Seal-Adaptor, Filter
31	108-2036-03	1	Pump Lever ASM
32	353-990	1	Plug
32:1	237-78	1	O-Ring
33	92-5076	1	Adapter-Filter
34	23-2300	1	Filter-Oil, Transmission
35	3220-7	1	Nut-Jam
36	2412-119	1	Clamp-Worm

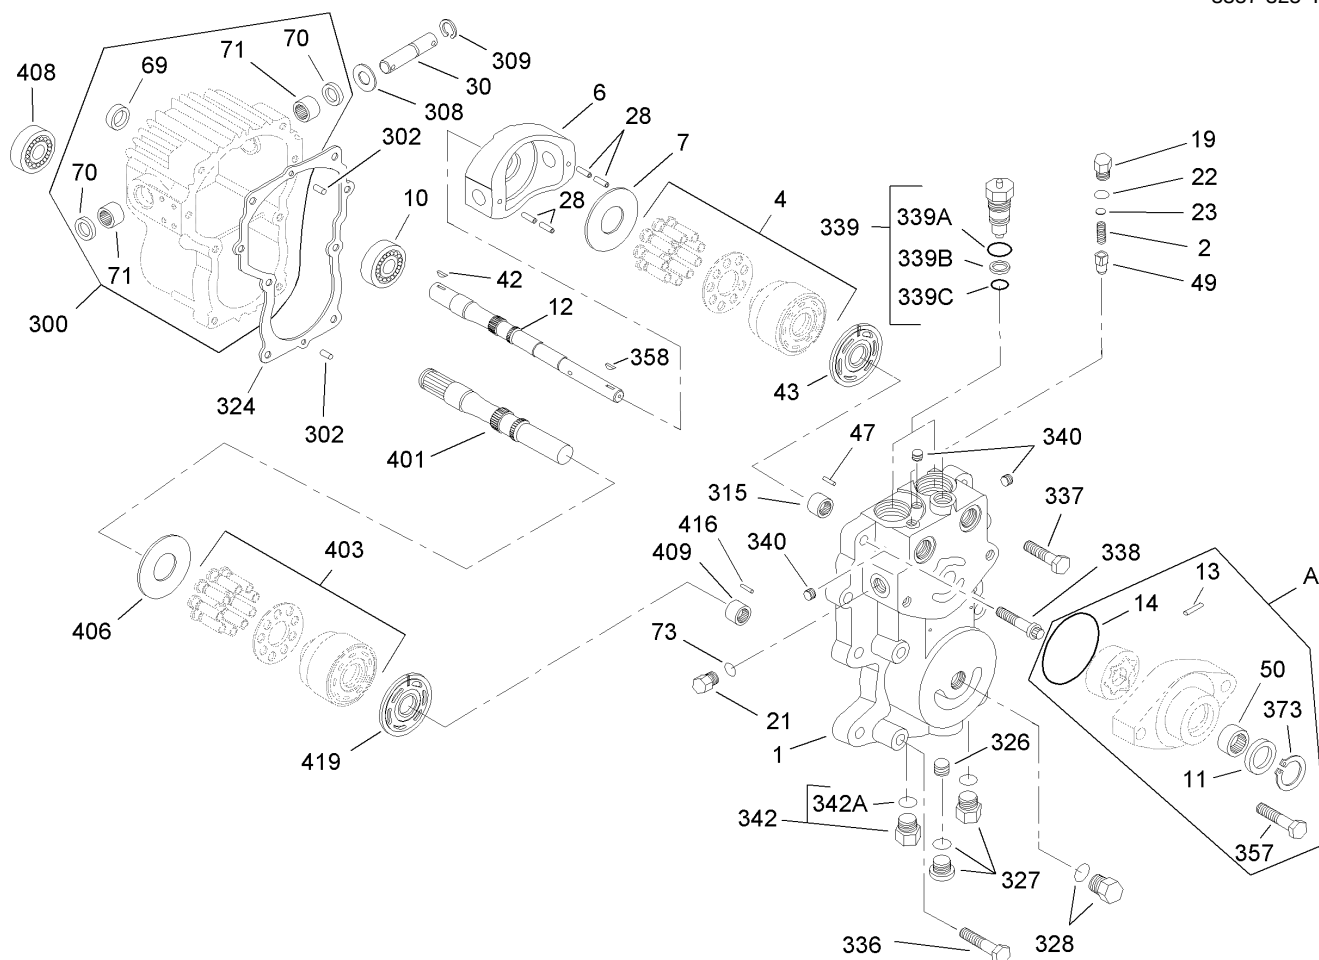 

Center Section Assembly Transmission Assembly No. 108-1355


Ref	Part No.	Qty.	Description
A	38-2670	1	Charge Pump Kit
1	92-5716	1	Section-Center
2	46-7310	1	Spring
4	48-1800	1	Cylinder Block Kit
6	25-2450	1	Plate-Swash, Variable
7	25-2380	1	Plate-Thrust
10	251-8	1	Bearing-Ball
11	94-2975	1	Seal-Shaft
12	28-3640	1	Shaft-Pump
13	38-2680	1	Pin
14	28-3520	1	O-Ring
19	25-2460	1	Plug-HH
21	25-2460	1	Plug-HH
22	28-3400	1	O-Ring
23	25-2470	1	Pack-Shim
28	83-3880	4	Pin-Spring
30	28-3670	1	Shaft-Trunnion
42	3257-5	1	Key-Woodruff
43	110-3051	1	Plate-Valve
47	25-2430	1	Pin-Dowel
49	67-8070	1	Cone-Relief, Charge
50	28-3480	1	Bearing
69	93-4133	1	Seal-Lip
70	103461	2	Seal

Ref	Part No.	Qty.	Description
71	252-82	2	Bearing-Needle
73	28-3400	1	O-Ring
300	110-3052	1	Housing ASM
302	353-599	2	Pin-Dowel
308	25-2510	1	Washer-Flat
309	32151-46	1	Ring-Retaining
315	25-3300	1	Bearing-Needle
324	28-3340	1	Gasket
326	107-4370	1	Plug-Expansion
327	67-9090	1	Plug ASM
328	28-3440	1	Plug-Threaded
336	323-10	4	Screw-HH
337	75-0110	2	Capscrew-HH
338	28-3530	2	Capscrew
339	49-7830	2	Check Valve Kit
340	75-0160	4	Plug-Pipe
342	28-3440	2	Plug-Threaded
357	92-1773	2	Screw-HHF
358	3257-5	1	Key-Woodruff
373	94-2976	1	Ring-Retaining
401	49-8200	1	Shaft-Motor
403	48-1800	1	Cylinder Block Kit
406	25-2380	1	Plate-Thrust
408	28-3300	1	Bearing-Roller

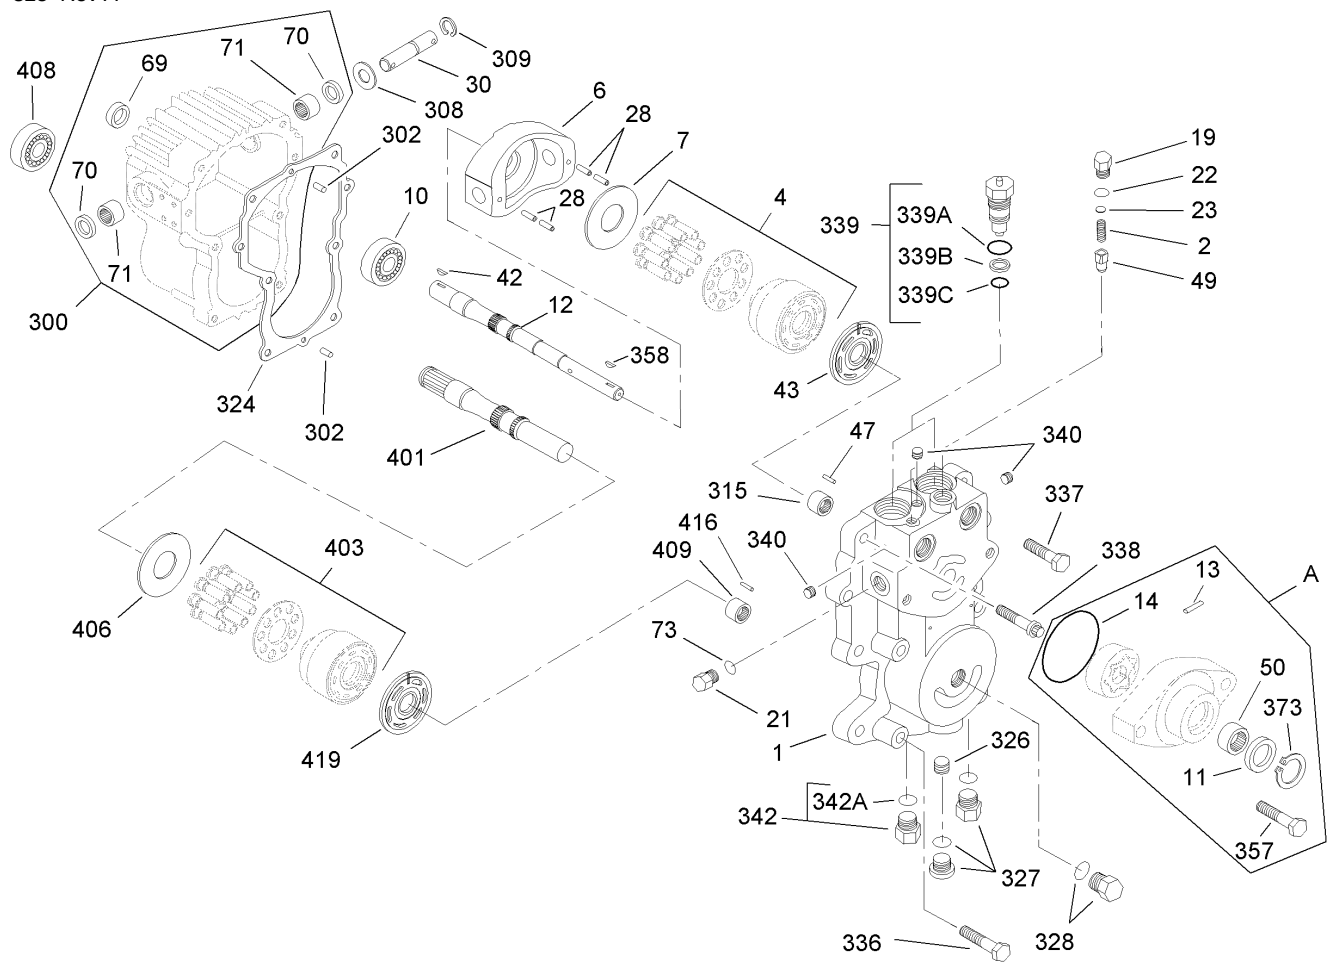 


Center Section Assembly
Transmission Assembly No. 108-1355 (continued)

Ref	Part No.	Qty.	Description
409	25-3300	1	Bearing-Needle
416	25-2430	1	Pin-Dowel
419	28-3380	1	Plate-Valve, Motor
339A	28-3570	2	O-Ring
339B	28-3580	2	Ring-Back Up
339C	28-3590	2	O-Ring
342A	75-0240	2	O-Ring

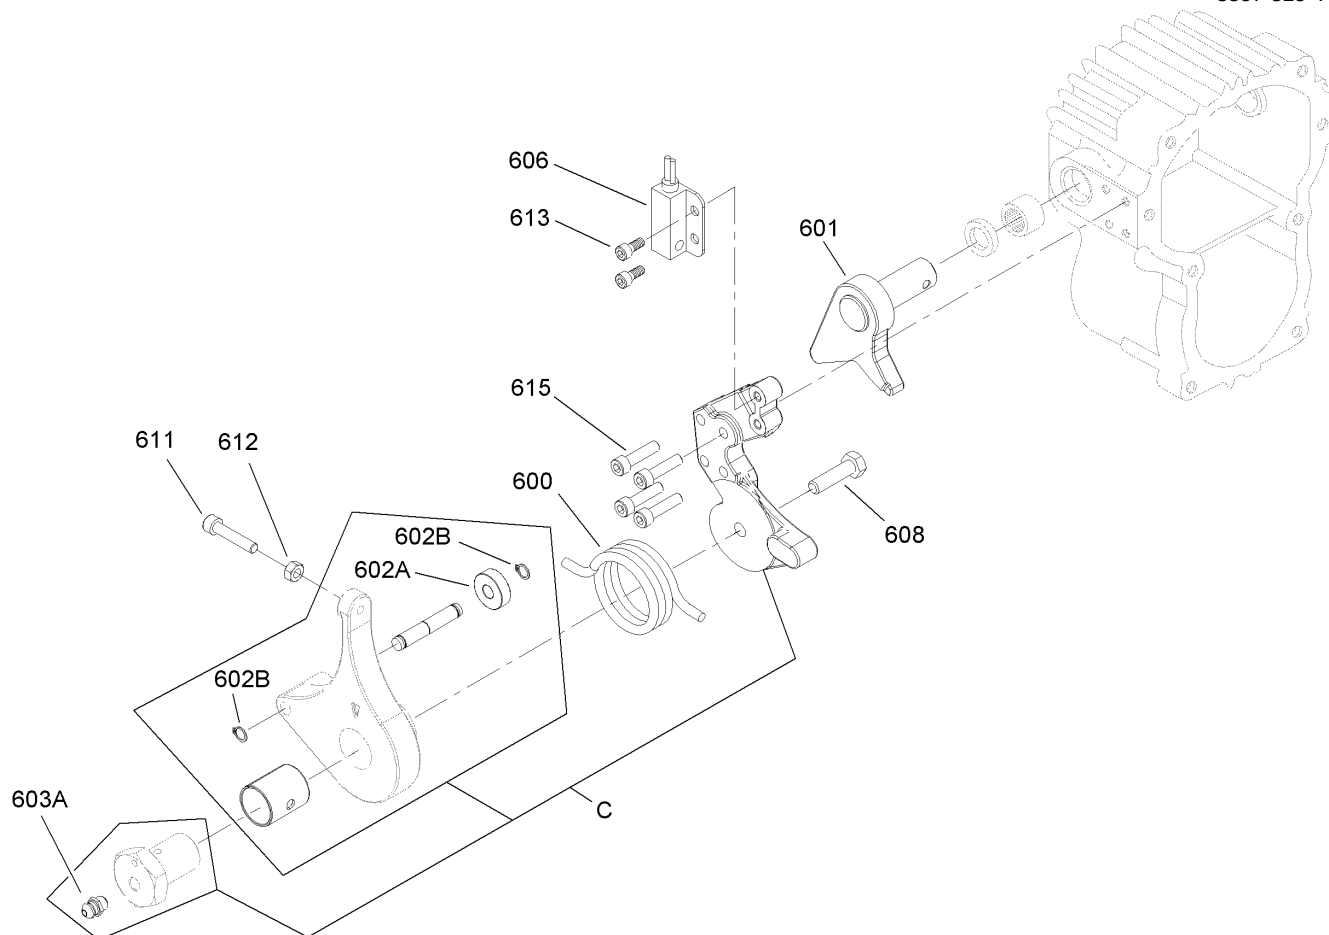 


Neutral Return Arm Assembly Transmission Assembly No. 108-1355

Ref	Part No.	Qty.	Description				
C	110-5685	1	Neutral Return ASM				
600	110-3053	1	Spring-Return, Neutral				
601	110-3054	1	Cam-Trunnion				
606	100-1270	1	Switch-Proximity				
608	33114-030	1	Screw-HH				
611	110-3060	1	Screw-HSH				
612	33013-00	1	Nut-Hex				
613	110-3061	2	Screw-HSH				
615	48-7850	4	Capscrew				
602A	251-259	1	Bearing-Ball				
602B	110-3056	2	Ring-Retaining				
603A	110-3058	1	Fitting-Lube				

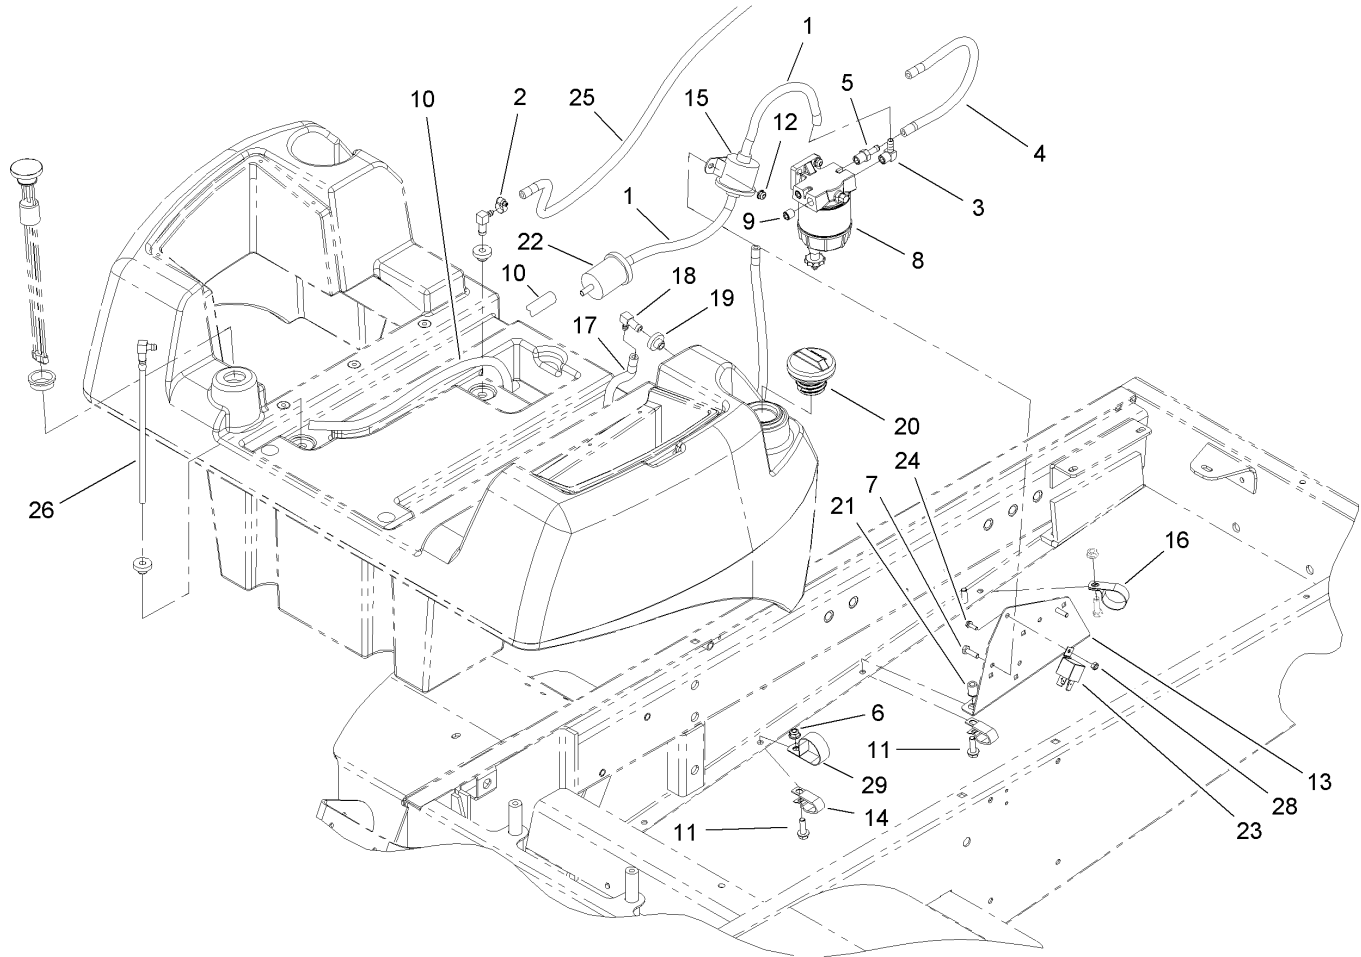 


Fuel Delivery System Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	110-4105	2	Hose-Fuel	25	108-9698	1	Hose-Fuel
2	2412-108	11	Clamp-Worm	26	110-9689	1	Standpipe
3	353-781	1	Fitting-Elbow	28	3296-2	1	Nut-Lock
4	110-4113	1	Hose-Fuel	29	2412-147	1	Clamp
5	353-783	1	Fitting-Straight				
6	104-8300	1	Nut-Flange, NI				
7	321-5	4	Screw-HH				
8	98-9305	1	Water / Fuel Filter ASM				
9	285-22	2	Plug-Pipe				
10	110-9662	1	Hose-Fuel				
11	3234-17	3	Screw-HHF				
12	104-7201	4	Nut-HF				
13	108-2078-03	1	Bracket-Support				
14	92-5753	2	Clamp-Hose				
15	107-0122	1	Pump-Fuel, Electric				
16	2412-74	1	R-Clamp				
17	109-0273	1	Hose-Fuel				
18	104-5228	2	Fitting-Elbow				
19	46-6560	3	Bushing				
20	93-3102	1	Cap-Fuel				
21	32148-7	2	Nut-Insert				
22	98-7612	1	Filter-Fuel				
23	99-7435	1	Relay-Power				
24	32105-2	1	Screw-SHWH				

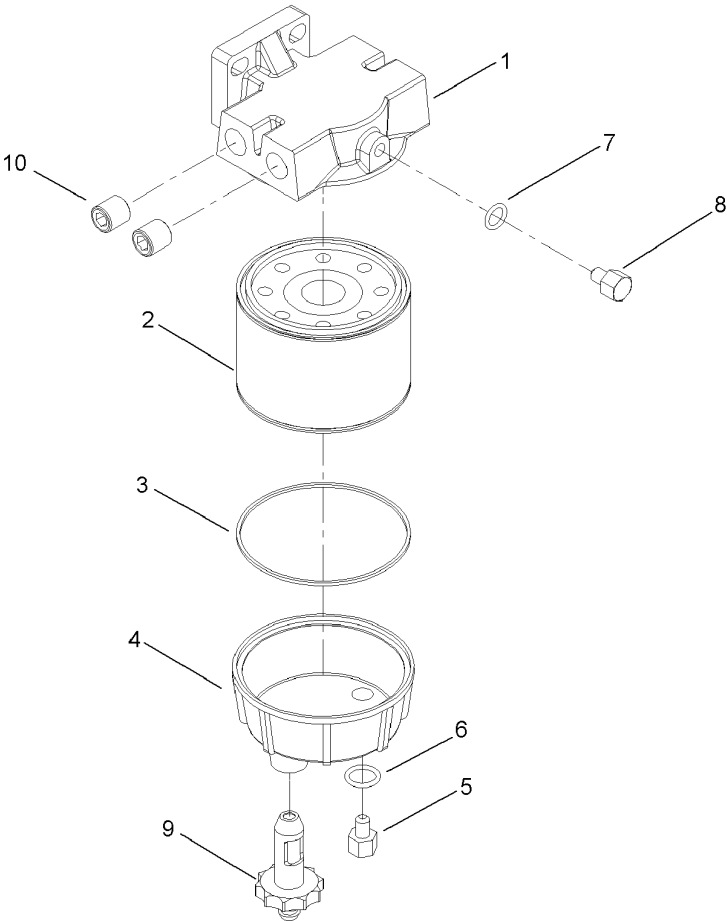 

Water and Fuel Filter Assembly No. 98-9305


Ref	Part No.	Qty.	Description				
1	98-9772	1	Head-Filter				
2	98-9764	1	Element				
3	98-9774	1	O-Ring				
4	98-9775	1	Base-Filter				
5	98-9773	1	Plug-Base, Filter				
6	237-42	1	O-Ring				
7	237-78	1	O-Ring				
8	98-9776	1	Plug-Head, Filter				
9	98-9777	1	Drain Valve ASM				
10	285-22	2	Plug-Pipe				

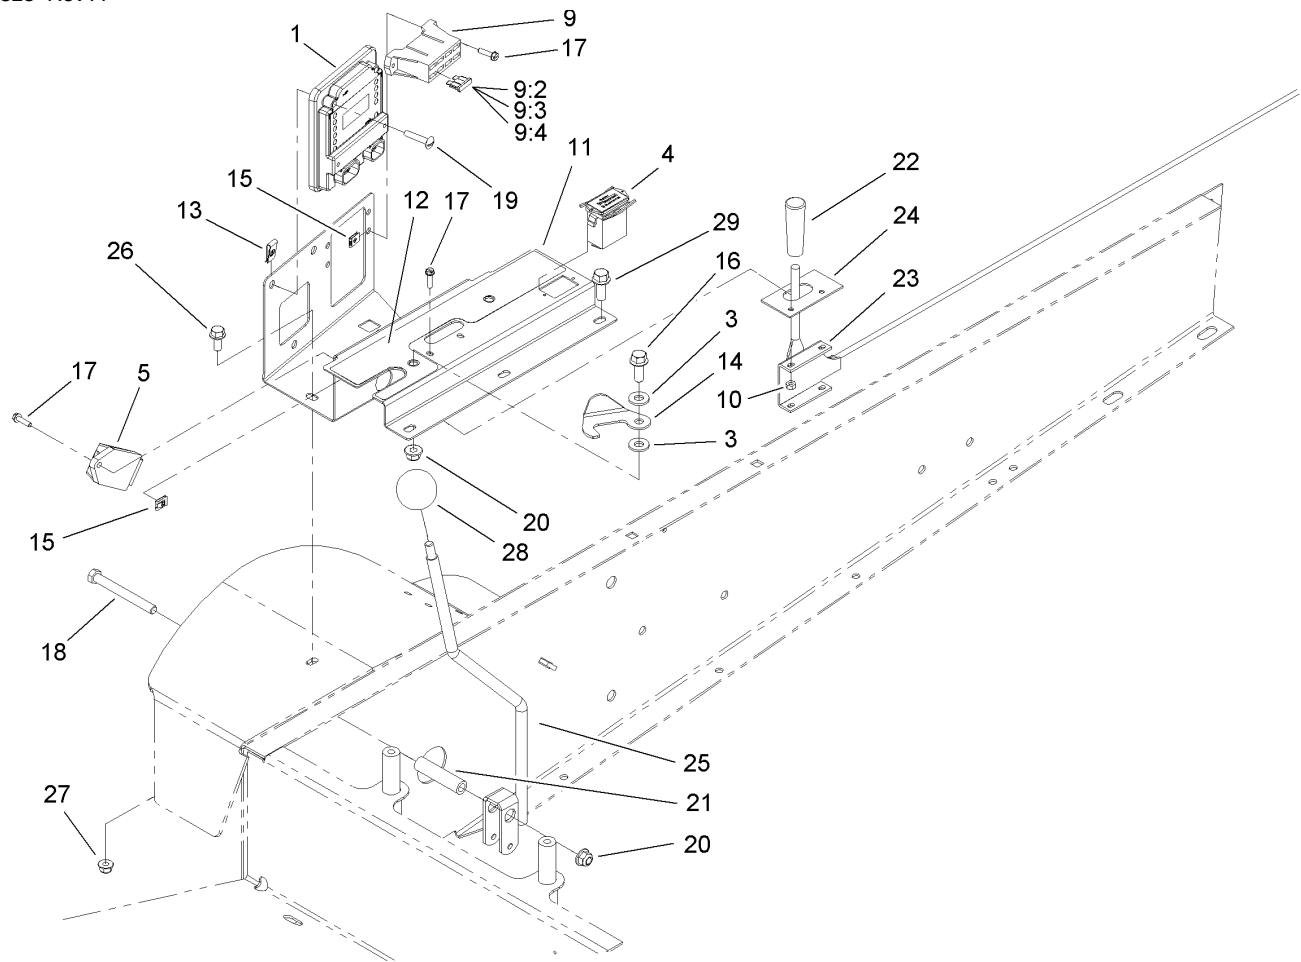 

Lower Control Panel Assembly


Ref	Part No.	Qty.	Description
1	106-9277	1	Module-Control, Standard
3	66-2920	2	Washer-Friction
4	1-513374	1	Meter-Hour
5	98-7611	1	Controller-Glow
9	110-1686	1	Harness-Wire, Main
9:2	94-6710	1	Fuse-Blade, 2 Amp
9:3	218-578	1	Fuse-10 Amp
9:4	109355	1	Fuse-15 Amp
10	3296-2	2	Nut-Lock
11	108-2030-03	1	Cover-Lower
12	108-2031	1	Decal-Panel, Lower
13	3290-199	3	Nut-Speed
14	108-2032	1	Latch-Lever
15	107-1013	8	Nut-Speed, U-Type
16	3234-11	1	Screw-HHF
17	32105-13	5	Screw-SHH
18	323-15	1	Screw-HH
19	3258-19	3	Screw
20	104-8301	2	Nut-Flange, NI
21	84-2350	1	Spacer-Long
22	233-39	1	Knob-Control
23	108-2033	1	Cable-Throttle, Diesel
24	108-2034-03	1	Plate-Throttle
25	108-2035-03	1	Lift Lever ASM

Ref	Part No.	Qty.	Description
26	3234-5	1	Screw-HHF
27	104-8300	1	Nut-Flange, NI
28	233-21	1	Knob
29	3234-14	3	Screw-HHF

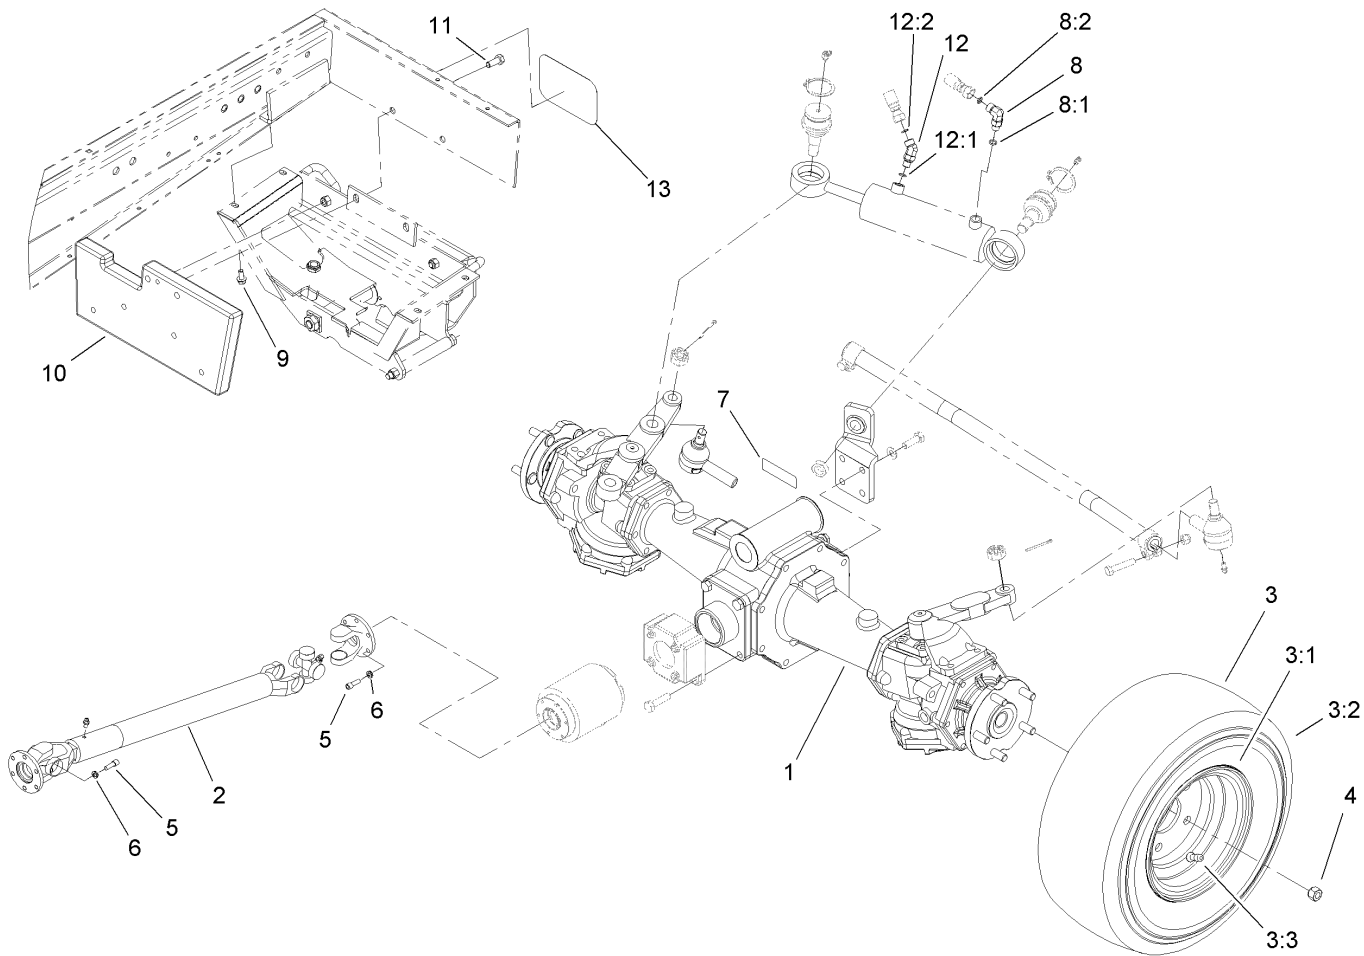 

Driveshaft and 4 Wheel Drive Assembly


Ref	Part No.	Qty.	Description				
1		1	Rear Axle ASM				
2	98-5009	1	Driveshaft ASM				
3		2	Tire And Wheel ASM				
3:1	105-7846	1	Wheel				
3:2	231-122	1	Tire				
3:3	232-27	1	Stem-Valve				
4	93-5268	10	Nut-Lug				
5	3274-8	12	Screw-HSH				
6	3253-3	12	Washer-Lock				
7	93-6697	1	Decal-Lube				
8	340-132	1	Fitting-HYD, 90 DEG				
8:1	237-78	1	O-Ring				
8:2	237-21	1	O-Ring				
9	3234-25	4	Screw-HHF				
10	110-1995-03	1	Weight-Rear, Inside				
11	325-5	4	Screw-HH				
12	340-103	1	Fitting-HYD, 45 DEG				
12:1	237-78	1	O-Ring				
12:2	237-21	1	O-Ring				
13	62-7400	1	Decal				

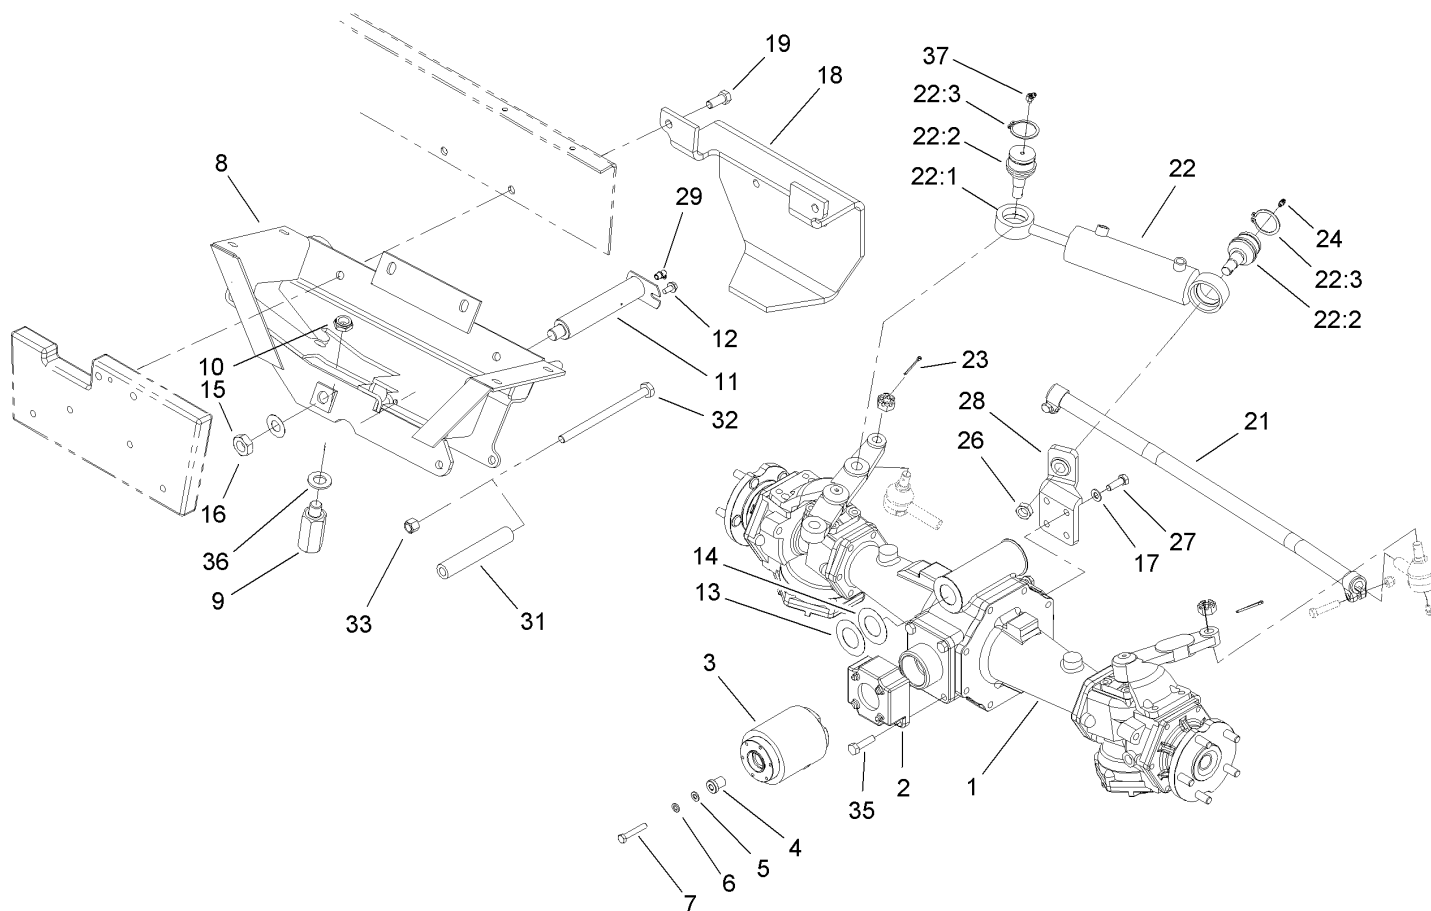 

Rear Axle Assembly


Ref	Part No.	Qty.	Description
1	106-1120	1	Rear Axle ASM
2	98-3860-03	1	Adaptor-Locator, Clutch
3	95-6296	1	Clutch-Bidirectional
4	98-1823	1	Spacer
5	33094-00	1	Washer-Plain
6	3253-4	1	Washer-Lock
7	33114-050	1	Screw-HH
8	105-4295-03	1	Axle Support ASM
9	98-3863	1	Stop-Oscillation
10	3296-15	1	Nut-Lock, NI
11	99-8434-03	1	Rear Axle Pin ASM
12	32144-14	1	Screw-HWH
13	99-8431	1	Washer-Thrust
14	99-8432	1	Washer-Thrust
15	71-4540	1	Washer-Thrust
16	32146-20	1	Nut-Jam
17	48-9220	4	Washer
18	99-2405-03	1	Bumper
19	325-5	2	Screw-HH
21	98-3871-03	1	Tie Rod ASM
22		1	Steering Cylinder ASM
22:1	99-2415	1	Cylinder-HYD
22:2	106-6774	2	Joint-Ball
22:3	32151-104	2	Ring-Retaining, External

Ref	Part No.	Qty.	Description
23	3272-11	2	Pin-Cotter
24	302-11	1	Fitting-Lube, 45 DEG
26	3220-6	4	Nut-Jam
27	108-1420	4	Screw-HSH
28	98-3862-03	1	Bracket-Support, Cylinder
29	302-33	1	Fitting-Grease
31	99-2404-03	1	Stop-Rear Axle, LH
32	325-36	1	Screw-HH
33	3296-23	1	Nut-Lock, NI
35	87-3700	2	Screw-Cap, HH
36	3256-28	1	Washer-Flat
37	302-5	1	Fitting-Grease

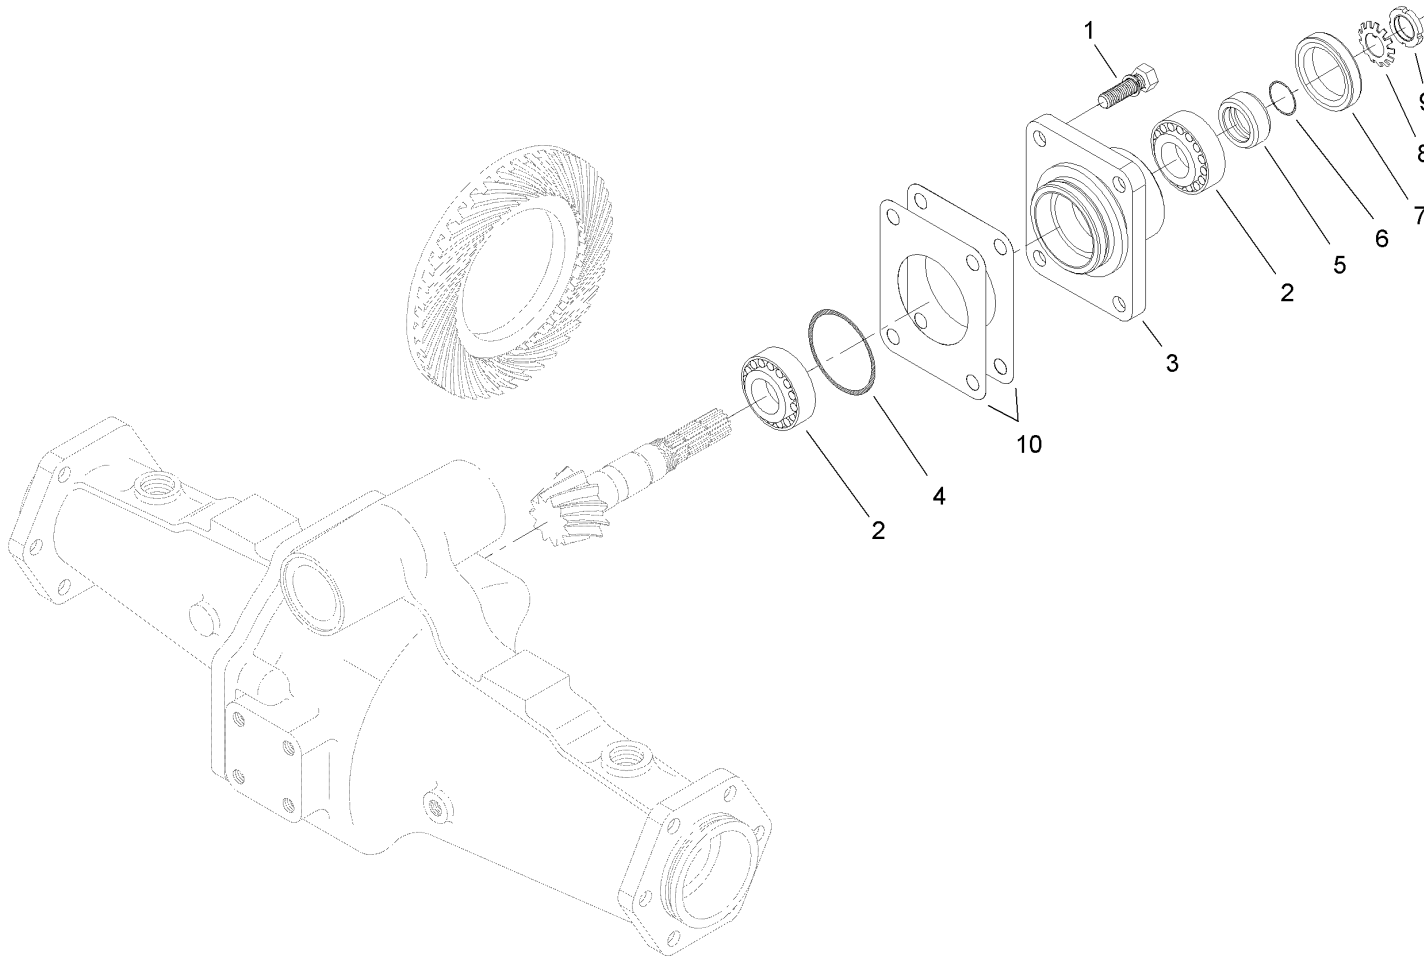 


Bevel Pinion Shaft Assembly
Rear Axle Assembly No. 106-1120

Ref	Part No.	Qty.	Description				
1	99-7575	4	Bolt				
2	99-7570	2	Bearing-Roller, Taper				
3	95-7535	1	Case-Bearing				
4	106-1065	1	O-Ring				
5	99-7572	1	Collar-Seal, Oil				
6	106-1066	1	O-Ring				
7	99-7574	1	Seal-Oil				
8	99-7559	1	Washer-Lock				
9	99-7560	1	Nut-Lock				
10	99-7550	2	Shim 0.1				
10	99-7551	2	Shim 0.2				

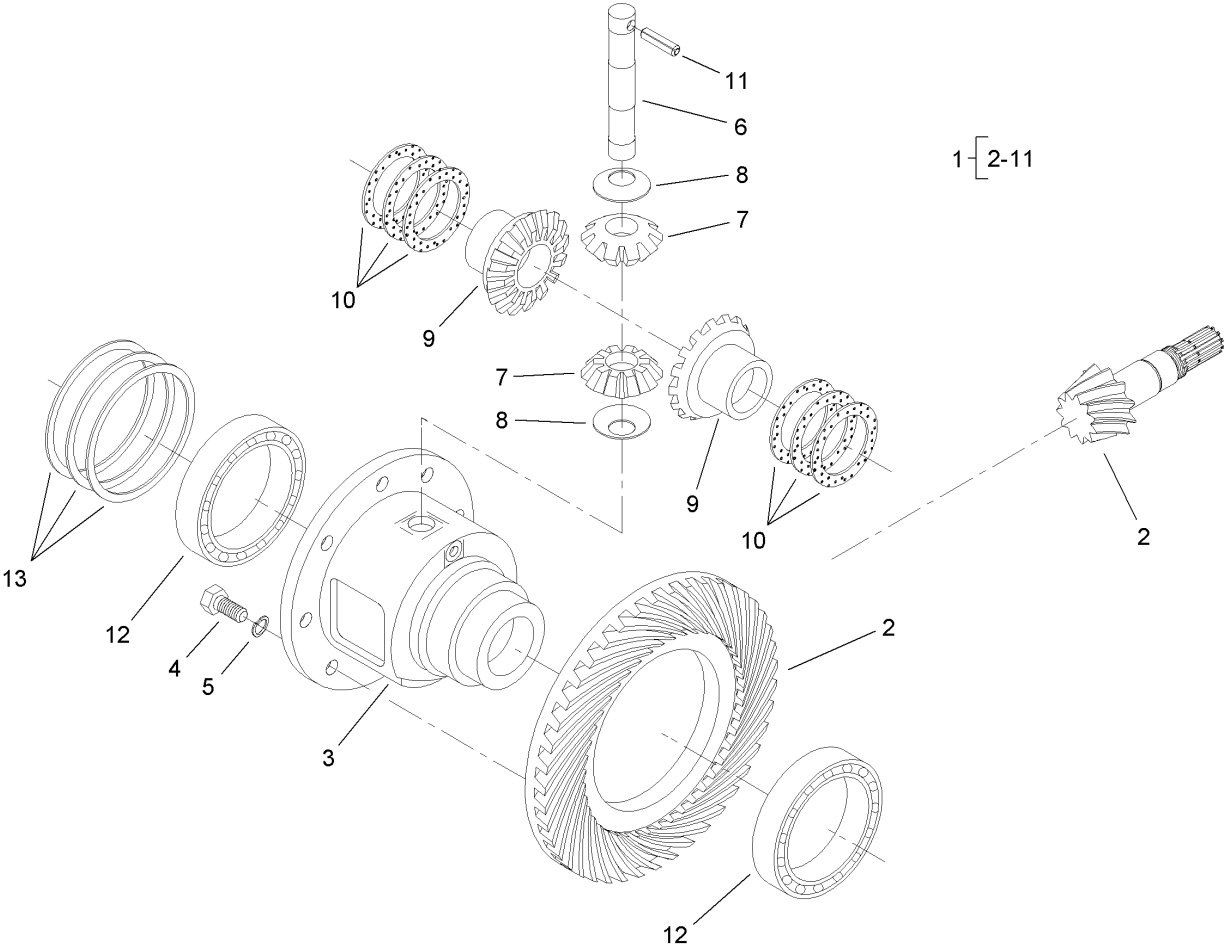 


Differential Assembly
Rear Axle Assembly No. 106-1120

Ref	Part No.	Qty.	Description				
1	95-7503	1	Differential ASM				
2	106-1093	1	Ring And Pinion, Matched Set				
3	95-7502	1	Case-Differential				
4	99-7576	8	Bolt				
5	3253-4	8	Washer-Lock				
6	99-7578	1	Shaft-Differential				
7	99-7579	2	Pinion-Differential				
8	99-7580	2	Washer-Differential				
9	99-7581	2	Gear-Differential				
10	99-7582	2	Washer-Differential				
10	99-7583	2	Washer-Differential				
10	99-7584	2	Washer-Differential				
11	99-7588	1	Pin-Spring				
12	99-7562	2	Bearing-Ball				
13	99-7585	2	Shim 0.1				
13	99-7586	2	Shim 0.2				
13	99-7587	2	Shim 0.4				

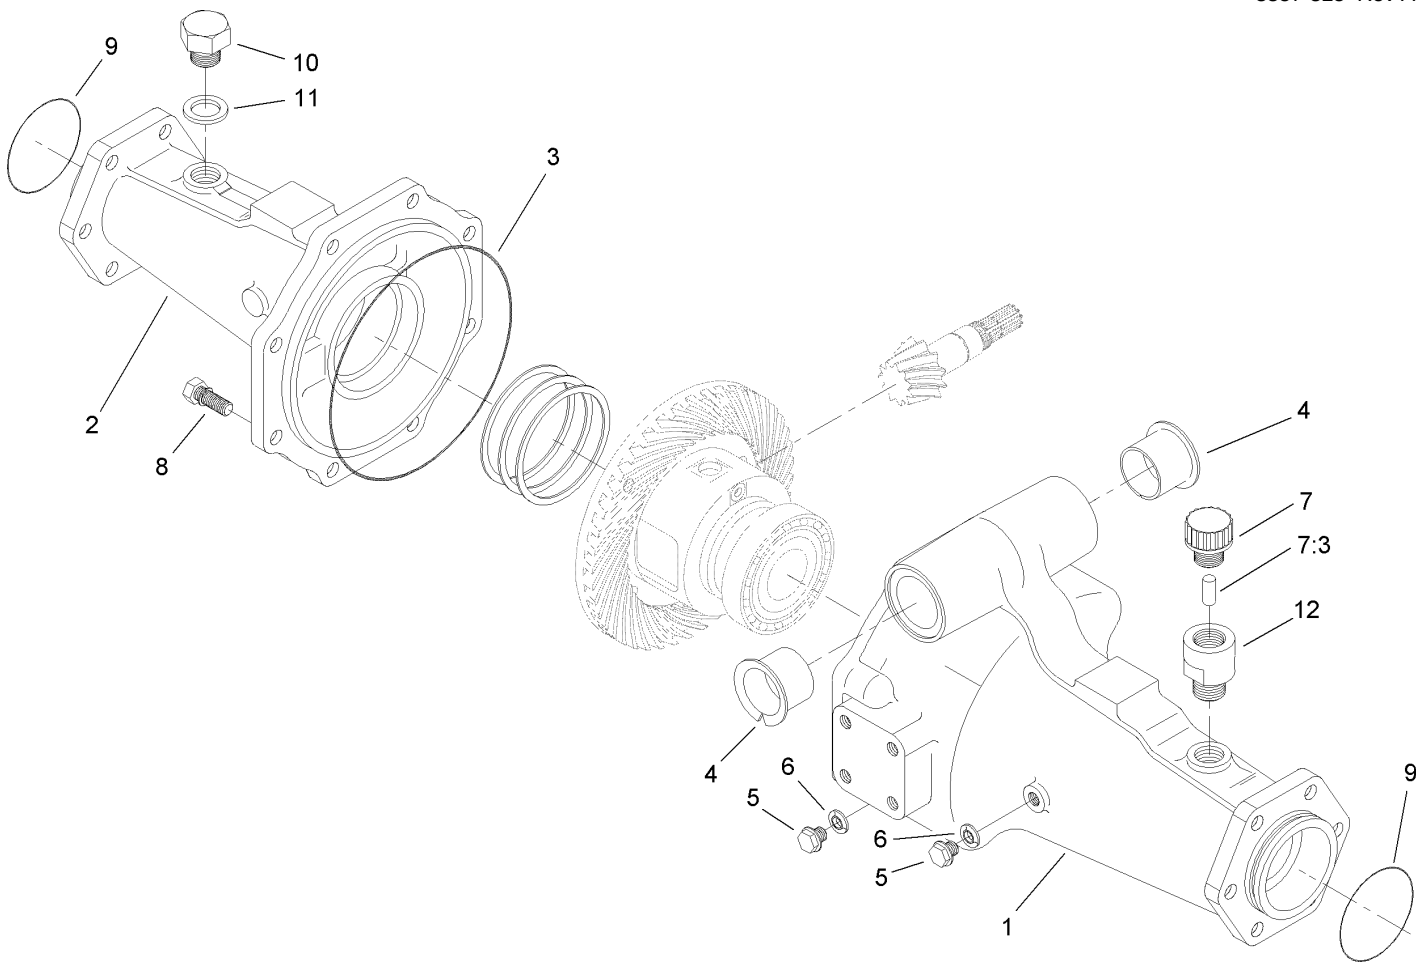 


Axle Support Assembly
Rear Axle Assembly No. 106-1120

Ref	Part No.	Qty.	Description				
1	95-7508	1	Support-Axle				
2	95-7506	1	Support-Axle				
3	106-1067	1	O-Ring				
4	95-7537	2	Bushing-Flanged				
5	99-7589	2	Plug				
6	99-7590	2	Washer-Seal				
7	110-4812	1	Axle Vent ASM				
7:3	110-4815	1	Insert-Filter, Foam				
8	99-7592	8	Bolt				
9	106-1068	2	O-Ring				
10	104-8643	1	Plug				
11	104-8644	1	O-Ring				
12	104-2377	1	Extension-Vent				

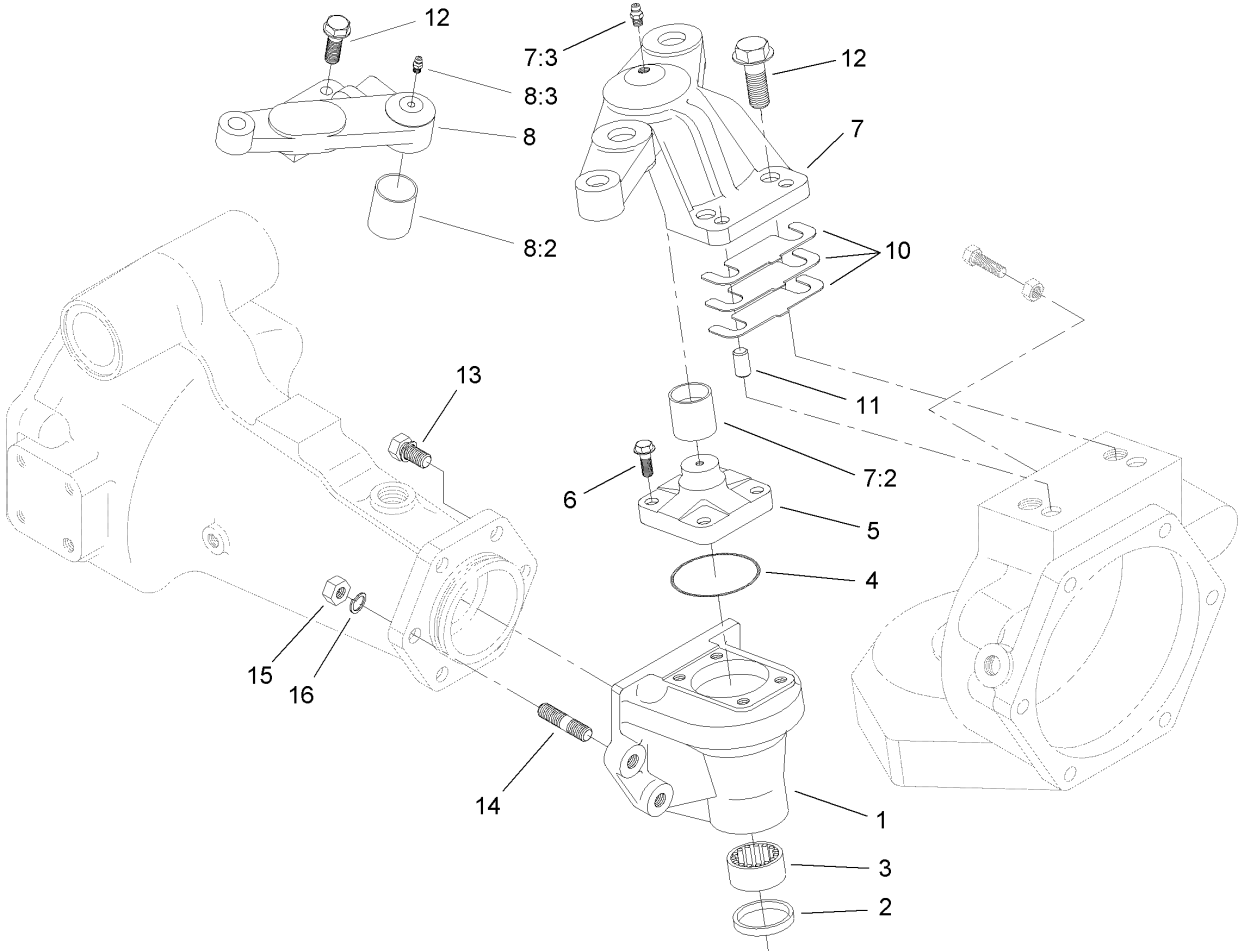 


Bevel Gearcase Assembly
Rear Axle Assembly No. 106-1120

Ref	Part No.	Qty.	Description				
1	106-1099	2	Case-Gear, Bevel				
2	99-7594	2	Seal-Oil				
3	99-7595	2	Bearing-Needle				
4	106-1069	2	O-Ring				
5	104-2373	2	Knuckle				
6	104-2374	8	Bolt				
7	110-4756	1	RH Axle Case Support ASM				
7:2	99-7529	1	Bushing				
7:3	99-7528	1	Nipple-Grease				
8	110-4757	1	LH Axle Case Support ASM				
8:2	99-7529	1	Bushing				
8:3	99-7528	1	Nipple-Grease				
10	95-7547	2	Shim 0.1				
10	95-7548	2	Shim 0.2				
10	95-7549	2	Shim 0.4				
11	99-7597	4	Pin-Dowel				
12	99-7598	4	Bolt				
13	99-7599	8	Bolt				
14	99-7525	4	Stud				
15	99-7526	4	Nut				
16	99-7527	4	Washer-Spring				

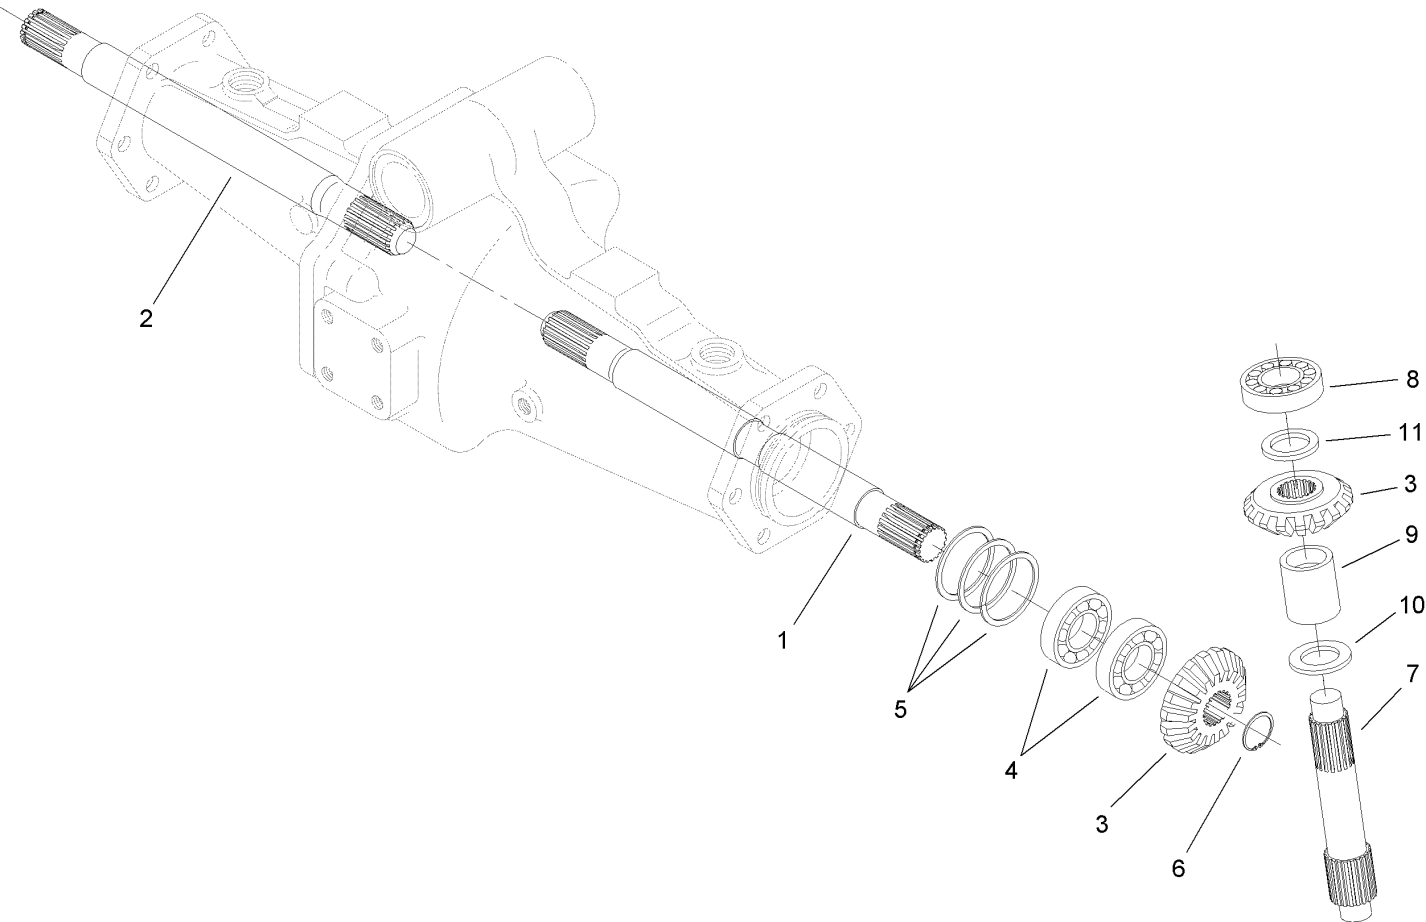 


Bevel Gear Shaft Assembly
Rear Axle Assembly No. 106-1120

Ref	Part No.	Qty.	Description				
1	95-7509	1	Shaft-Gear, Differential				
2	95-7512	1	Shaft-Gear, Differential				
3	95-7518	4	Gear-Bevel, 18 Tooth				
4	99-7530	4	Bearing-Ball				
5	99-7552	2	Shim 0.1				
5	99-7553	2	Shim 0.2				
5	99-7554	2	Shim 0.5				
6	99-7531	2	Clip				
7	106-1101	2	Shaft-Gear, Bevel				
8	99-7532	2	Bearing-Roller, Taper				
9	95-7543	2	Spacer				
10	99-7533	2	Collar-Thrust				
11	99-7558	2	Collar				

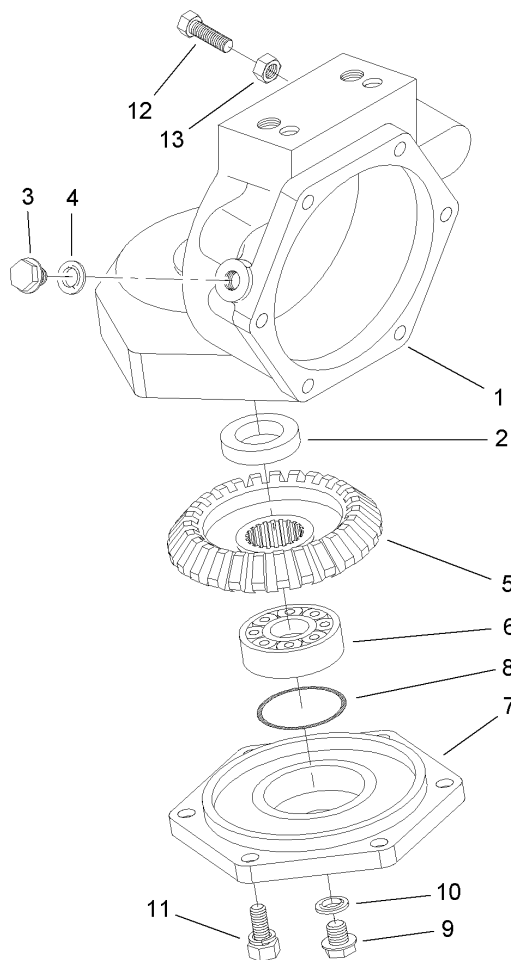 


Axle Case Assembly
Rear Axle Assembly No. 106-1120

Ref	Part No.	Qty.	Description				
1	106-1100	2	Case-Axle				
2	99-7594	2	Seal-Oil				
3	99-7535	2	Plug				
4	99-7536	2	Washer-Seal				
5	95-7528	2	Gear-Bevel, 27 Tooth				
6	99-7532	2	Bearing-Roller, Taper				
7	95-7526	2	Cover-Axle				
8	106-1072	2	O-Ring				
9	99-7589	2	Plug				
10	99-7590	2	Washer-Seal				
11	99-7596	12	Bolt				
12	106-1102	2	Bolt-Stop				
13	106-1103	2	Nut				

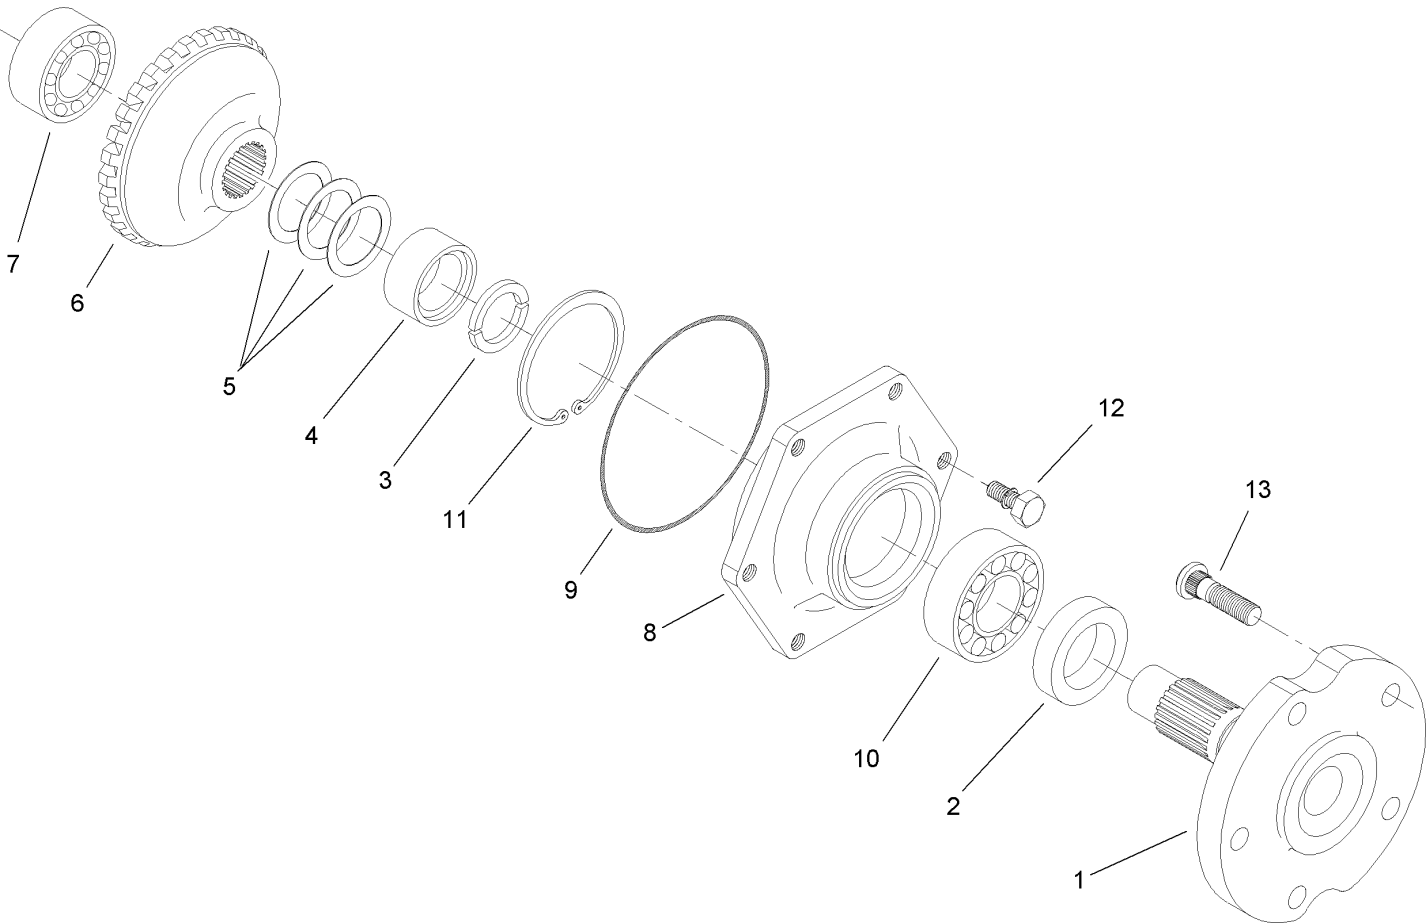 


Axle Assembly
Rear Axle Assembly No. 106-1120

Ref	Part No.	Qty.	Description				
1	95-7522	2	Axle				
2	99-7564	2	Seal-Oil				
3	95-7544	4	Clip				
4	95-7523	2	Spacer				
5	99-7555	2	Shim 0.3				
5	99-7556	2	Shim 0.2				
5	99-7557	2	Shim 0.5				
6	95-7525	2	Gear-Bevel, 27 Tooth				
7	99-7534	2	Bearing-Ball				
8	95-7521	2	Cover-Axle				
9	106-1071	2	O-Ring				
10	99-7561	2	Bearing-Ball				
11	99-7539	2	Clip				
12	99-7596	12	Bolt				
13	99-7563	10	Stud				

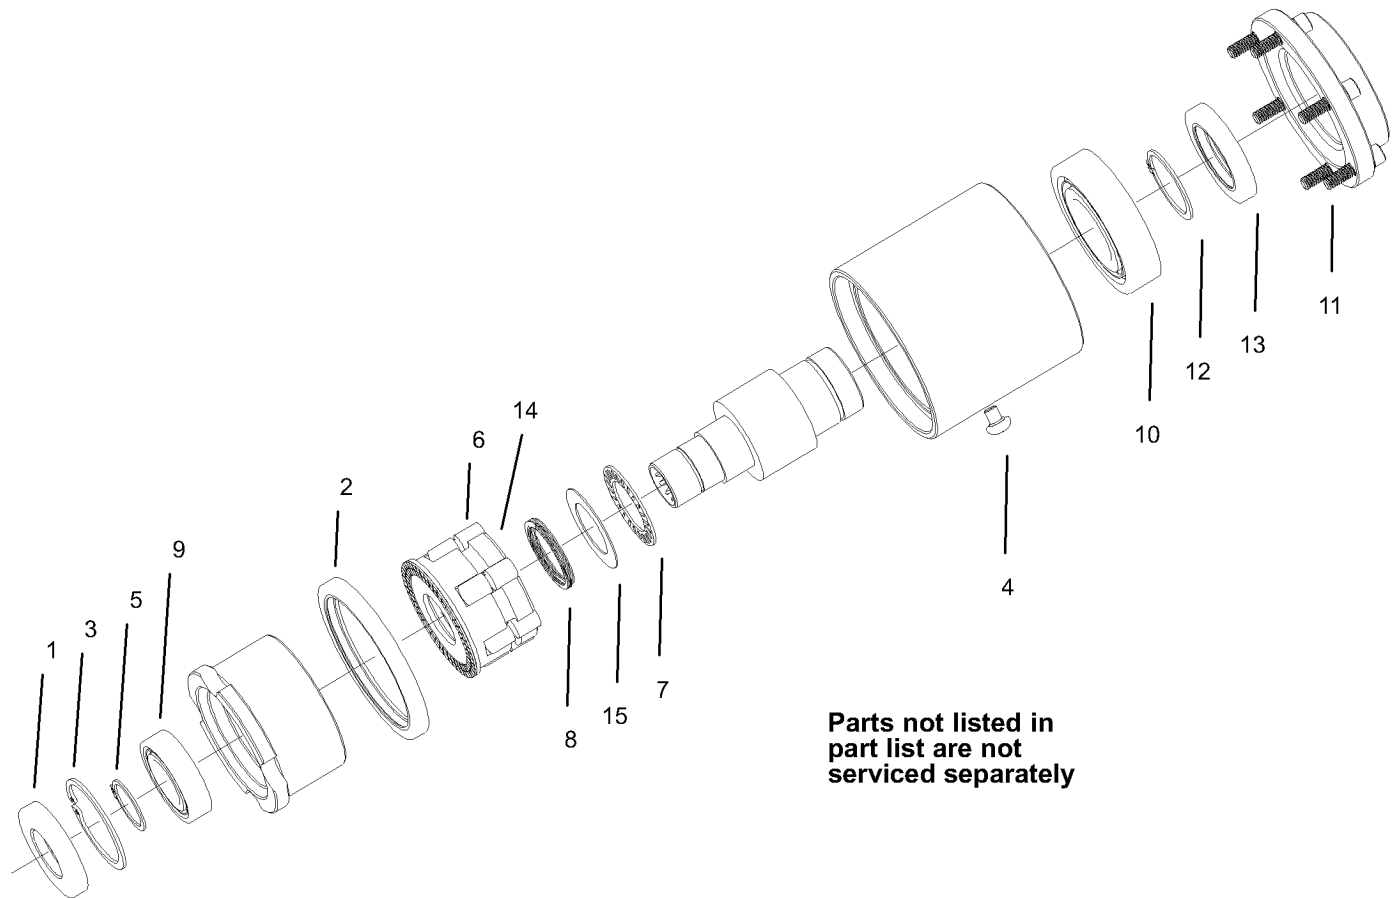 


Bi-Directional Clutch Assembly No. 95-6296

Ref	Part No.	Qty.	Description				
1	100-6589	1	Seal-Oil				
2	100-6593	1	Seal-Oil				
3	32151-75	1	Ring-Retaining				
4	100-6596	1	Screw-PPH				
5	100-6597	1	Ring-Snap, External				
6	93-8925	6	Roller				
7	93-8919	1	Bearing-Needle, Thrust				
8	93-8923	1	Spring-Wave				
9	99-2902	1	Bearing				
10	92-9705	1	Bearing				
11	3245-6	6	Screw-HSH				
12	32120-84	1	Ring-Snap, External				
13	71-6790	1	Seal-Oil				
14	100-2568	1	Roll Cage ASM				
15	93-8929	1	Washer-Thrust				

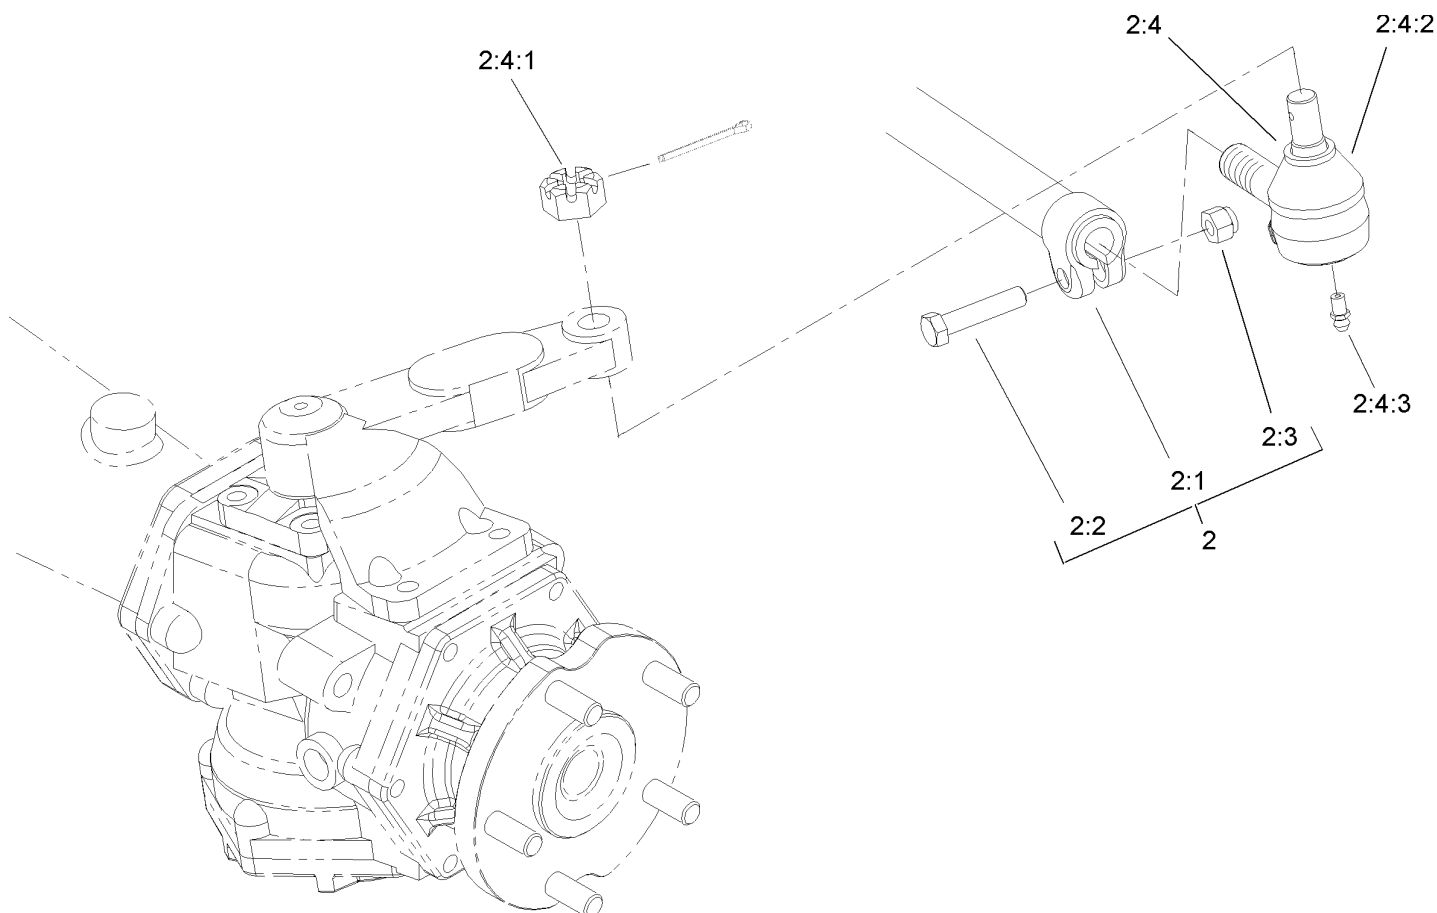 


Tie Rod Assembly No. 98-3871-03

Ref	Part No.	Qty.	Description
2		1	Rod-Tie
2:1	99-2412-03	1	Rod And Clamp ASM
2:2	323-9	2	Screw-HH
2:3	3296-39	2	Nut-Lock, NI
2:4	71-4740	2	End-Rod, Tie (RH)
2:4:1	105-7941	1	Nut-Hex, Slotted
2:4:2	105-7835	1	Seal
2:4:3	302-5	1	Fitting-Grease

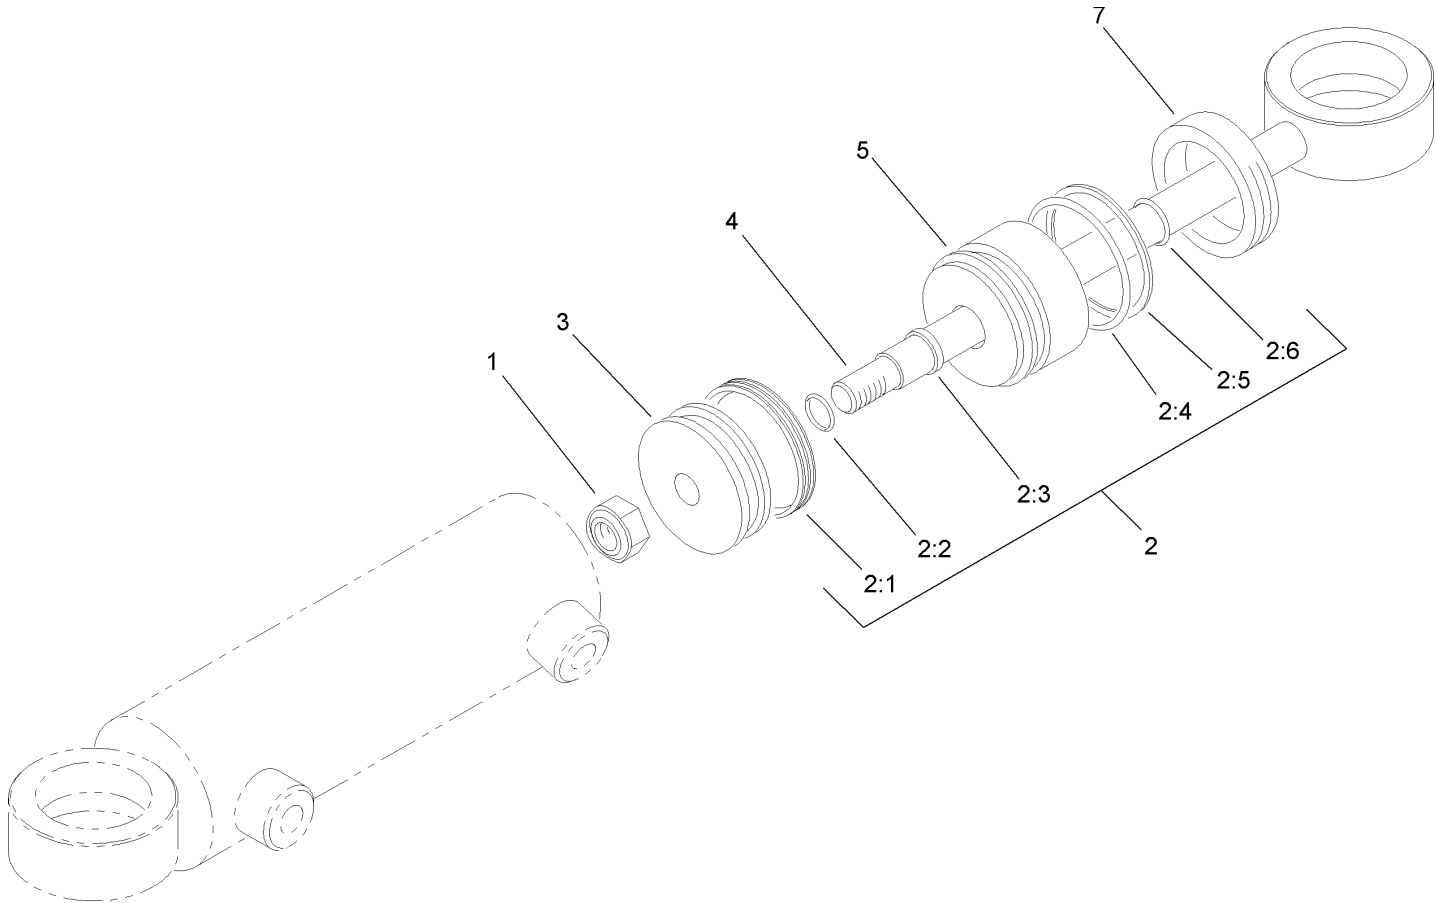 


Hydraulic Cylinder Assembly No. 99-2415

Ref	Part No.	Qty.	Description				
1	32152-10	1	Locknut				
2	86-5390	1	Seal Kit				
2:1		1	Uniring				
2:2		1	Seal-Dust				
2:3		1	Seal-Rod				
2:4		1	Seal-Dust				
2:5		1	Ring-Backup				
2:6		1	Seal-Dust				
3		1	Piston				
4		1	Rod				
5		1	Head				
7		1	Collar-Internal				

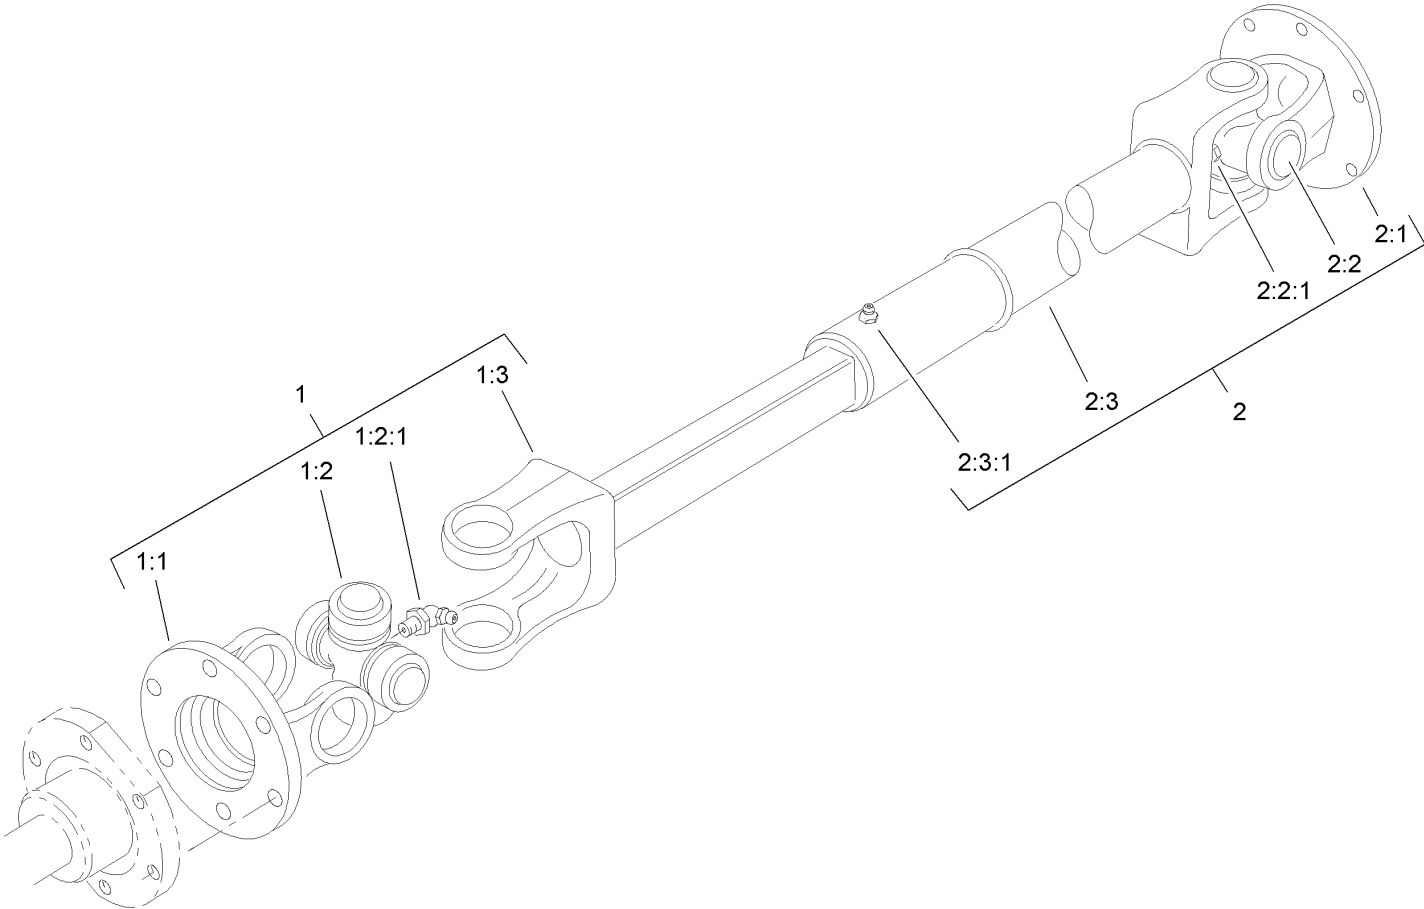 


Driveshaft Assembly No. 98-5009

Ref	Part No.	Qty.	Description				
1	92-5096	1	Joint And Shaft ASM				
1:1	72-3410	1	Yoke-Flange				
1:2	54-9180	1	U-Joint Kit				
1:2:1	62-3820	1	Fitting-Grease				
1:3	72-3420	1	Yoke And Shaft ASM				
2	98-3882	1	Joint And Tube ASM				
2:1	72-3410	1	Yoke-Flange				
2:2	54-9180	1	U-Joint Kit				
2:2:1	62-3820	1	Fitting-Grease				
2:3	72-3431	1	Yoke And Tube ASM				
2:3:1	302-58	1	Fitting-Straight				

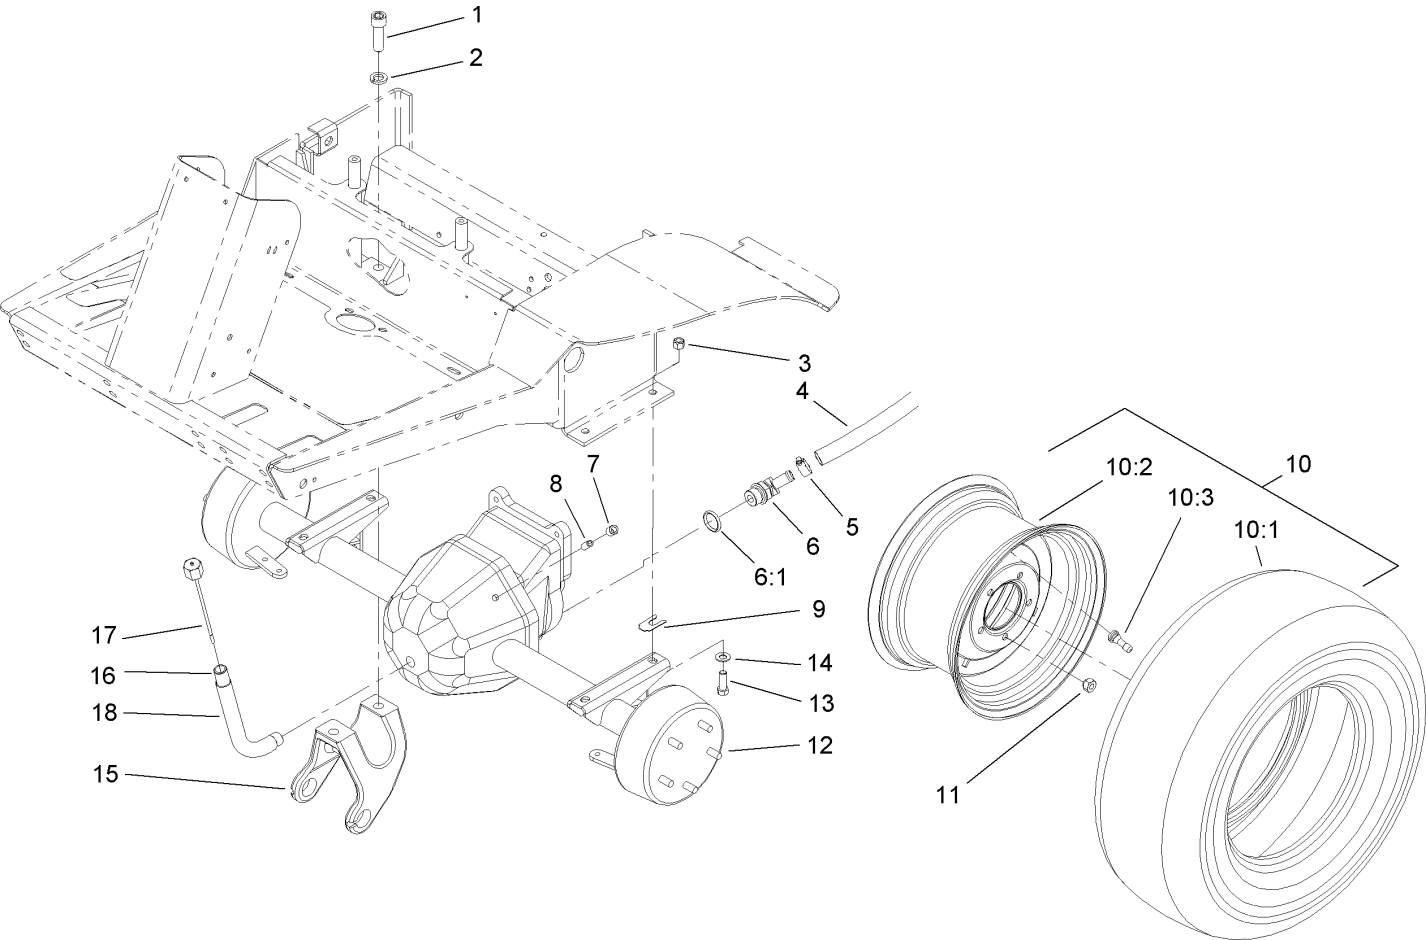 

Front Axle Assembly


Ref	Part No.	Qty.	Description				
1	3273-38	4	Screw-HSH				
2	3253-8	4	Washer-Lock				
3	3296-48	4	Nut-Lock, NI				
4	92-5083	1	Hose-HYD				
5	2412-119	1	Clamp-Worm				
6	92-5088	1	Fitting-Elbow, 45 DEG				
6:1	237-81	1	O-Ring				
7	2810-1	1	Coupling-Pipe				
8	289-6	1	Nipple-Pipe				
9	42-6080	1	Shim-Axle				
10		2	Wheel And Tire ASM				
10:1	108-6594	1	Tire-Standard				
10:2	108-1358	1	Wheel				
10:3	232-27	1	Stem-Valve				
11	242-50	10	Nut-Lug				
12	108-6599-03	1	Axle ASM				
13	324-5	4	Screw-HH				
14	3256-25	4	Washer-Flat				
15	110-9678-03	2	Bracket-Carrier				
16	105-7169	1	Tube-Fill, Oil				
17	105-7172	1	Dipstick ASM				
18	110-5651	1	Sleeve-Protective				

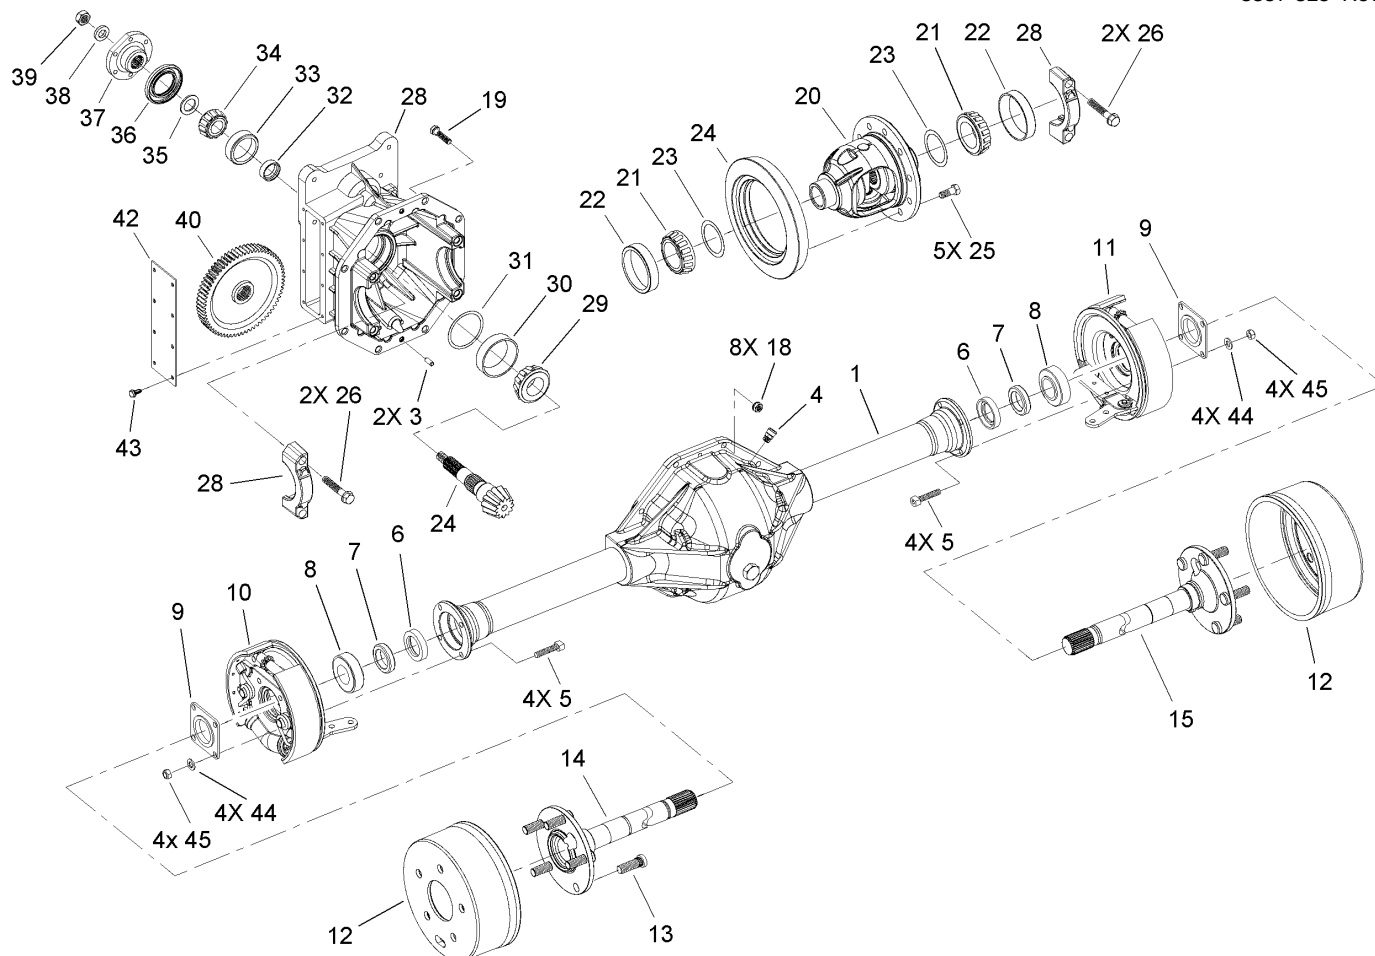 

Front Axle Assembly No. 108-6599-03

Ref	Part No.	Qty.	Description
1	110-9670	1	Lower Housing ASM
3	21-8270	2	Pin-Dowel
4	72-9420	1	Vent
5	94-6934	8	Screw-HH
6	24-8840	2	Ring-Retaining, Wheel Bearing
7	92-1774	2	Seal-Oil
8	21-8180	2	Bearing ASM
9	28-0670	2	Seal-Grease
10		1	Brake ASM, RH
11		1	Brake ASM, LH
12	110-3072	2	Drum-Brake
13	106-9205	10	Stud-Wheel
14	110-3073	1	Shaft-Axle, RH
15	110-3074	1	Shaft-Axle, LH
18	32149-5	8	Nut-Keps
19	3210-8	8	Screw-HH
20	110-4136	1	Differential Case ASM
21	254-65	2	Cone-Bearing, Roller
22	254-66	2	Cup-Bearing, Roller
23	21-8090	1	Shim-Bearing, Differential (.003)
23	21-8100	1	Shim-Bearing, Differential (.005)
23	21-8110	1	Shim-Bearing, Differential (.010)
23	21-8120	1	Shim-Bearing, Differential (.030)
24	92-1676	1	Gear And Pinion ASM


Ref	Part No.	Qty.	Description
25	21-7770	5	Screw-Gear, Drive
26	92-1773	4	Screw-HHF
28	110-3076	1	Carrier ASM
29	43-6760	1	Bearing-Roller, Cone Taper
30	43-6750	1	Bearing-Taper, Cup
31	43-6710	1	Shim-Pinion (.003)
31	43-6711	1	Shim-Pinion (.005)
31	43-6712	1	Shim-Pinion (.010)
31	43-6713	1	Shim-Pinion (.030)
32	21-8020	1	Spacer-Bearing
33	254-90	1	Bearing-Cup
34	254-91	1	Cone-Bearing
35	72-3570	1	Shim-Bearing, Front (.094)
35	72-3571	1	Shim-Bearing, Front (.096)
35	72-3572	1	Shim-Bearing, Front (.098)
35	72-3573	1	Shim-Bearing, Front (.100)
35	72-3574	1	Shim-Bearing, Front (.102)
35	72-3575	1	Shim-Bearing, Front (.104)
35	72-3576	1	Shim-Bearing, Front (.106)
35	72-3577	1	Shim-Bearing, Front (.108)
35	72-3578	1	Shim-Bearing, Front (.110)
35	72-3580	1	Shim-Bearing, Front (.112)
35	72-3581	1	Shim-Bearing, Front (.114)
35	72-3582	1	Shim-Bearing, Front (.116)

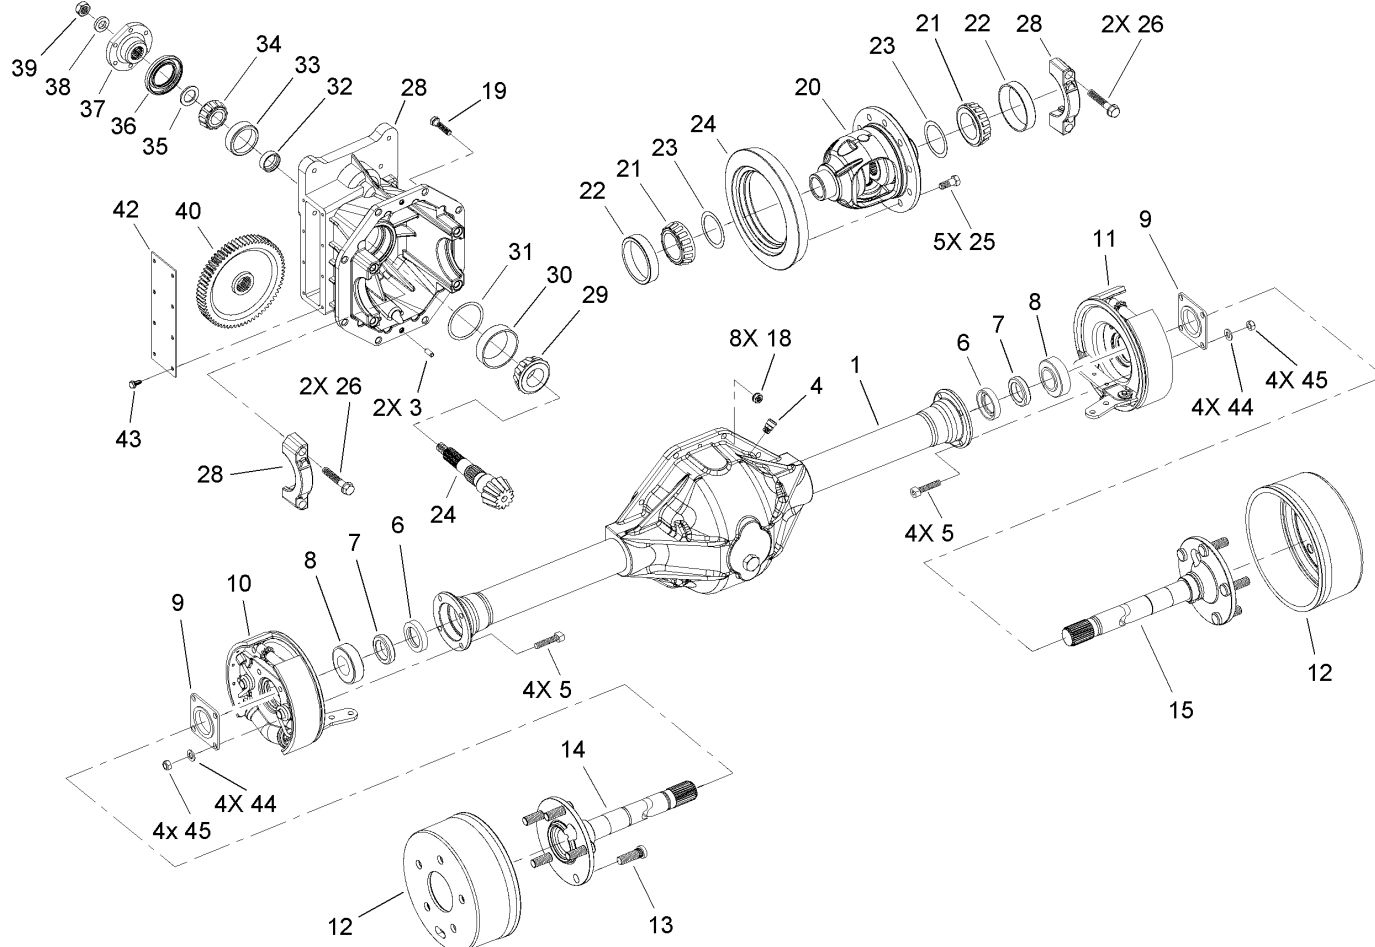 

Front Axle Assembly No. 108-6599-03 (continued)


Ref	Part No.	Qty.	Description
35	72-3583	1	Shim-Bearing, Front (.118)
35	72-3584	1	Shim-Bearing, Front (.120)
35	72-3585	1	Shim-Bearing, Front (.125)
35	72-3586	1	Shim-Bearing, Front (.127)
35	72-3587	1	Shim-Bearing, Front (.129)
35	72-3588	1	Shim-Bearing, Front (.131)
35	72-3590	1	Shim-Bearing, Front (.133)
35	72-3591	1	Shim-Bearing, Front (.135)
35	72-3592	1	Shim-Bearing, Front (.137)
35	72-3593	1	Shim-Bearing, Front (.139)
35	72-3594	1	Shim-Bearing, Front (.141)
35	72-3595	1	Shim-Bearing, Front (.143)
35	72-3596	1	Shim-Bearing, Front (.145)
35	72-3597	1	Shim-Bearing, Front (.147)
35	72-3598	1	Shim-Bearing, Front (.149)
35	72-3600	1	Shim-Bearing, Front (.151)
36	71-4330	1	Seal
37	68-7010	1	Flange
38	71-4340	1	Washer
39	71-4350	1	Nut
40	86-7230	1	Gear-Input, Transmission
42	21-7830	1	Cover-Gear
43	12-5450	8	Screw
44	94-6936	8	Washer-Hardened

Ref	Part No.	Qty.	Description
45	94-6935	8	Locknut

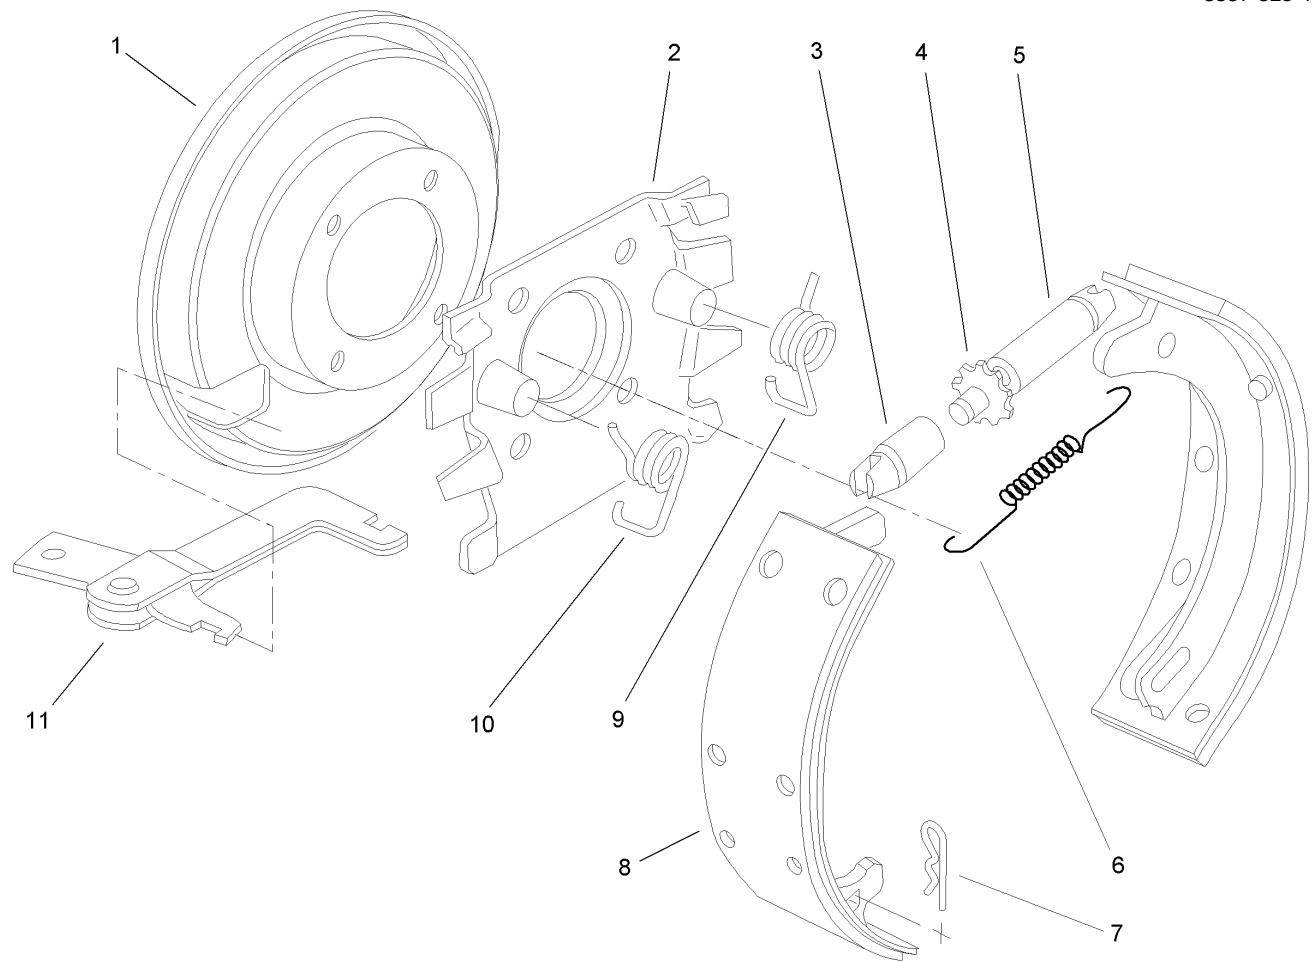 


Right and Left Hand Brake Assembly

Ref	Part No.	Qty.	Description				
1	21-9450	1	Shield-Dust				
2	43-6810	1	Spider-Torque				
3	21-9390	1	Socket-Screw, Adjusting				
4	21-9370	1	Screw-Adjusting				
5	21-9380	1	Nut-Pivot				
6	21-9440	1	Spring-Screw, Adjusting				
7	21-9460	2	Retainer-Lever, Brake				
8	84-8600	1	Set-Shoes, Lined				
9	21-9430	1	Spring-Return, RH				
10	21-9420	1	Spring-Return, LH				
11	24-9180	1	Strut And Lever ASM				
12	92-8775	1	Liquid Gasket Kit				

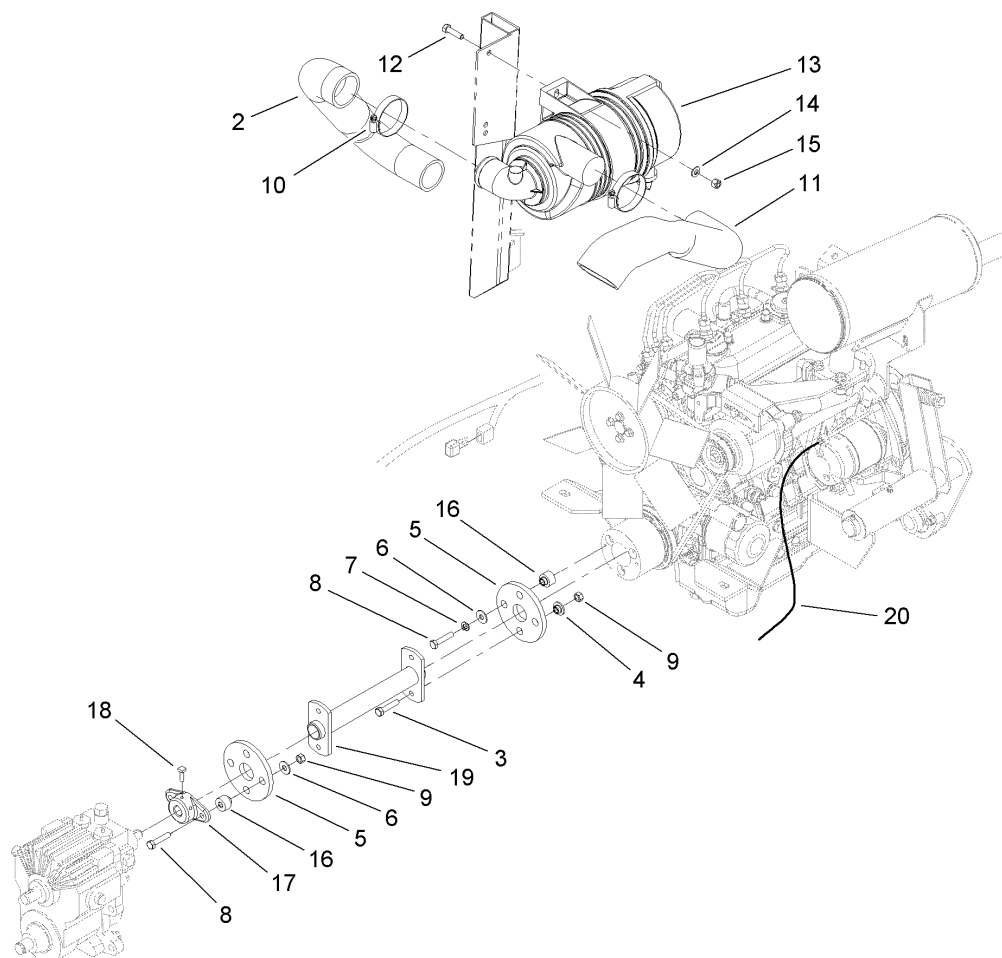 


Air Cleaner and Drive Coupling Assembly

Ref	Part No.	Qty.	Description				
2	104-3446	1	Hose-Outlet, Air				
3	3210-5	4	Screw-HH				
4	27-6600	4	Spacer-Coupling				
5	44-2230	2	Coupling-Rubber				
6	3256-71	4	Washer-Flat				
7	3253-4	2	Washer-Lock				
8	3210-8	4	Screw-HH				
9	32152-5	6	Nut-Lock, Cone				
10	2412-42	3	Clamp-Hose				
11	104-3444	1	Hose-Inlet, Air				
12	322-6	2	Screw-HH				
13	104-3427	1	Air Cleaner ASM				
14	3256-23	2	Washer-Flat				
15	3296-29	2	Nut-Lock, NI				
16	27-6590	4	Spacer-Coupling, Rubber				
17	27-4370	1	Hub-Pump				
18	3241-6	2	Screw-SQH				
19	104-3401-03	1	Drive Shaft ASM				
20	99-3441	1	Harness-Wire, Fusible Link				

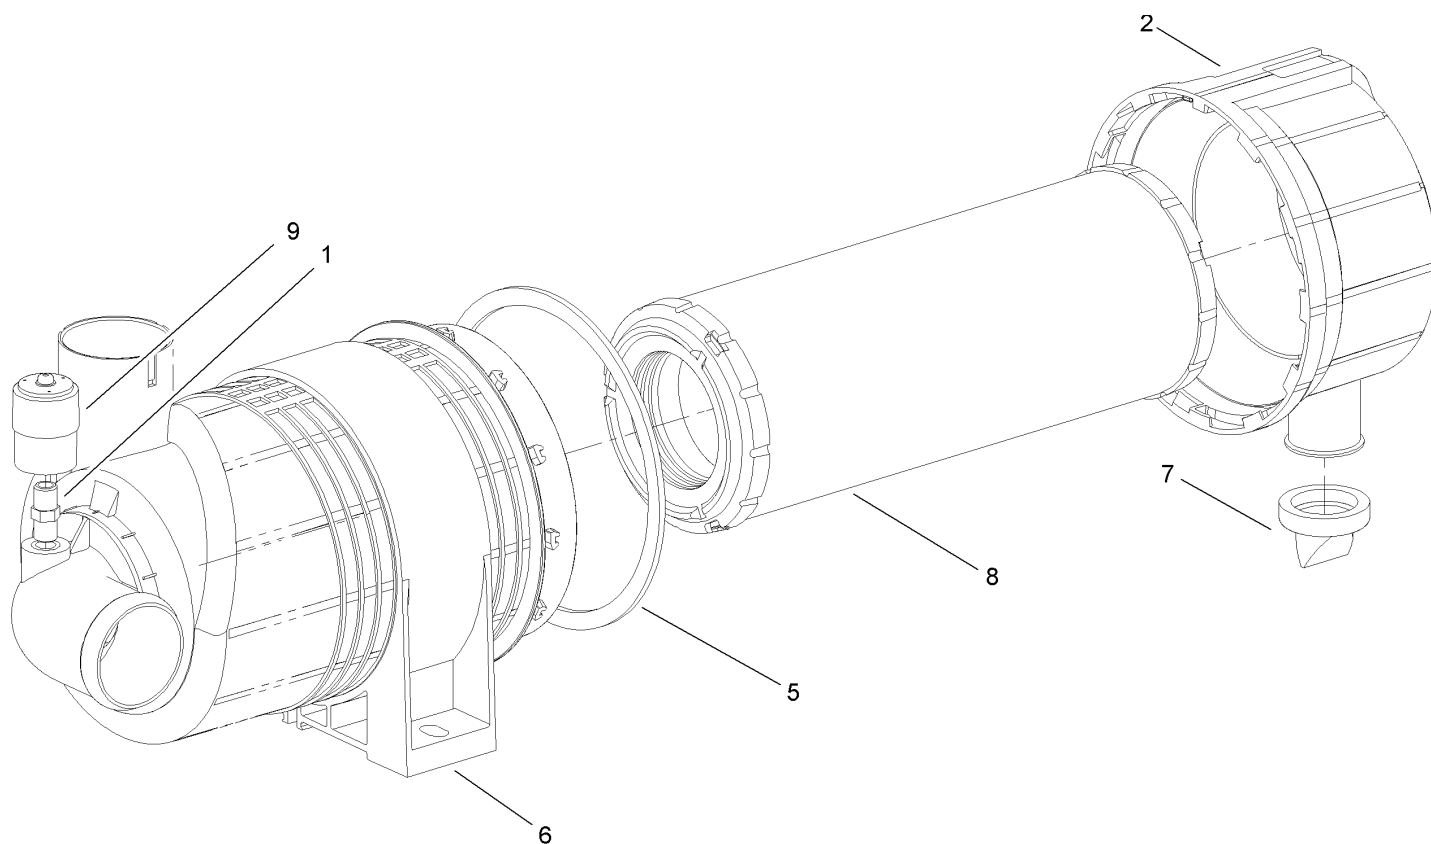 


Air Cleaner Assembly No. 104-3428

Ref	Part No.	Qty.	Description
1	105-4292	1	Nipple-Pipe
2	104-0497	1	Cover ASM
5	104-4897	1	Gasket
6	98-4525	1	Bracket-Cleaner, Air
7	104-0498	1	Valve-Vacuator
8	108-3810	1	Filter-Air
9	93-9164	1	Indicator-Mini

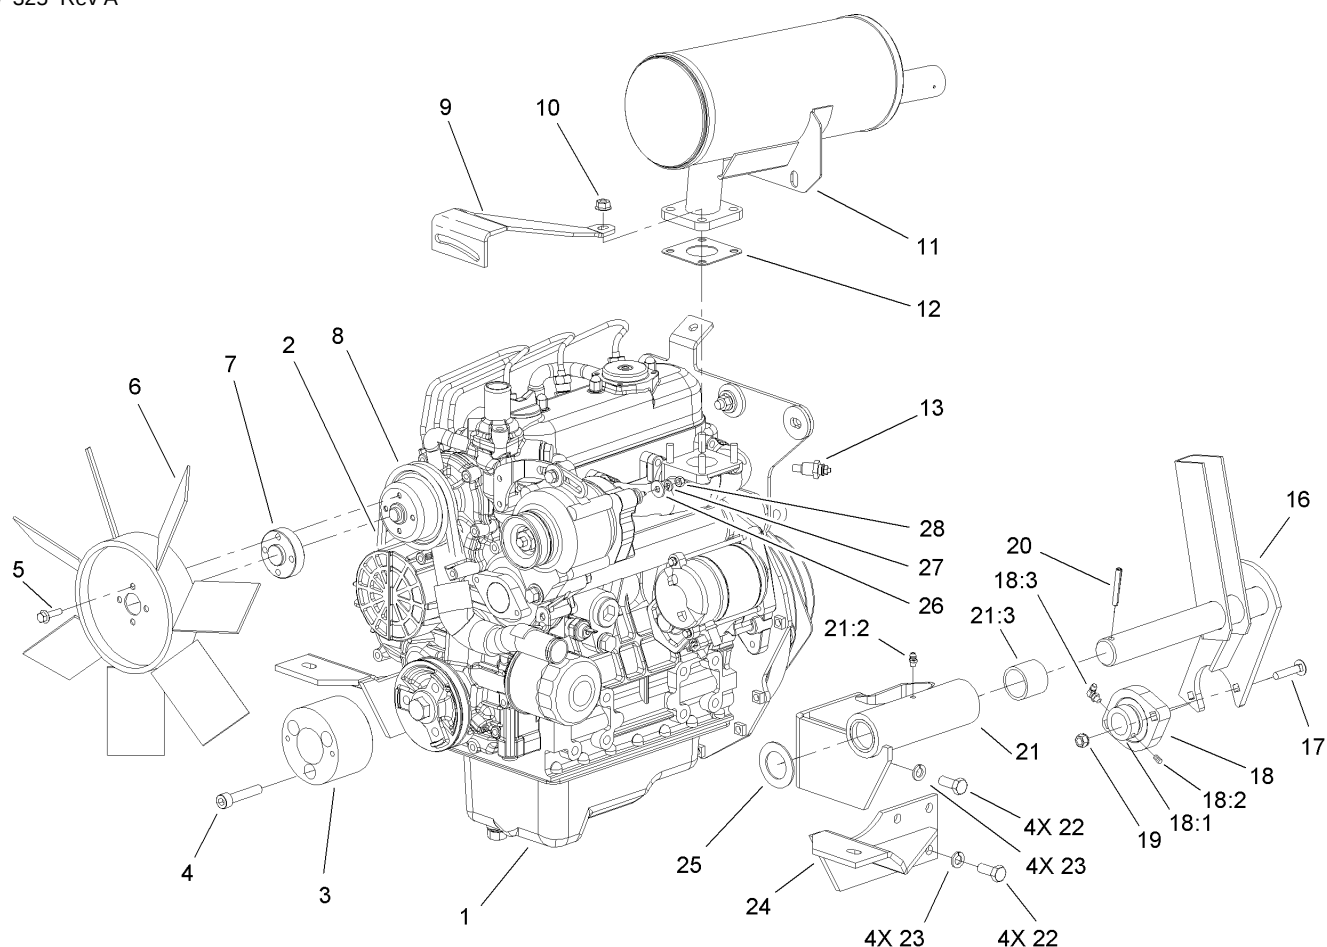 

Engine Assembly No. 1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	108-1361	1	Engine-Kubota	22	43-0090	8	Screw-HH
2	104-3494	1	Belt-V	23	42-9600	8	Washer-Lock, Spring
3	104-1723	1	Adapter-Front Drive	24	104-1702-03	1	Engine Mount ASM
4	3274-106	3	Screw-HSH	25	3-4324	1	Washer-Flat
5	33103-020	4	Screw-HHF	26	3256-22	1	Washer-Flat
6	104-4246	1	Fan-Engine	27	43-5930	1	Washer-Spring
7	104-4247	1	Spacer-Fan	28	33013-00	1	Nut-Hex
8	104-3497	1	Pulley-Fan				
9	105-2556-03	1	Brace-Alternator, Upper				
10	33004-00	4	Nut-HF				
11	108-1363	1	Muffler-Exhaust				
12	98-9611	1	Gasket				
13	108-8682	1	Thermoswitch				
16	106-4381-03	1	PTO Tension Shaft ASM				
17	3230-4	2	Screw-CARR				
18	92-8799	1	Bearing-Flange				
18:1	251-77	1	Collar-Lock, Bearing				
18:2	3245-35	1	Screw-Set				
18:3	302-40	1	Fitting-Grease				
19	32149-1	2	Nut-Keys				
20	32121-32	1	Pin-Roll				
21	104-3417	1	LH Engine Mount ASM				
21:2	302-5	1	Fitting-Grease				
21:3	256-299	2	Bushing-Straight				

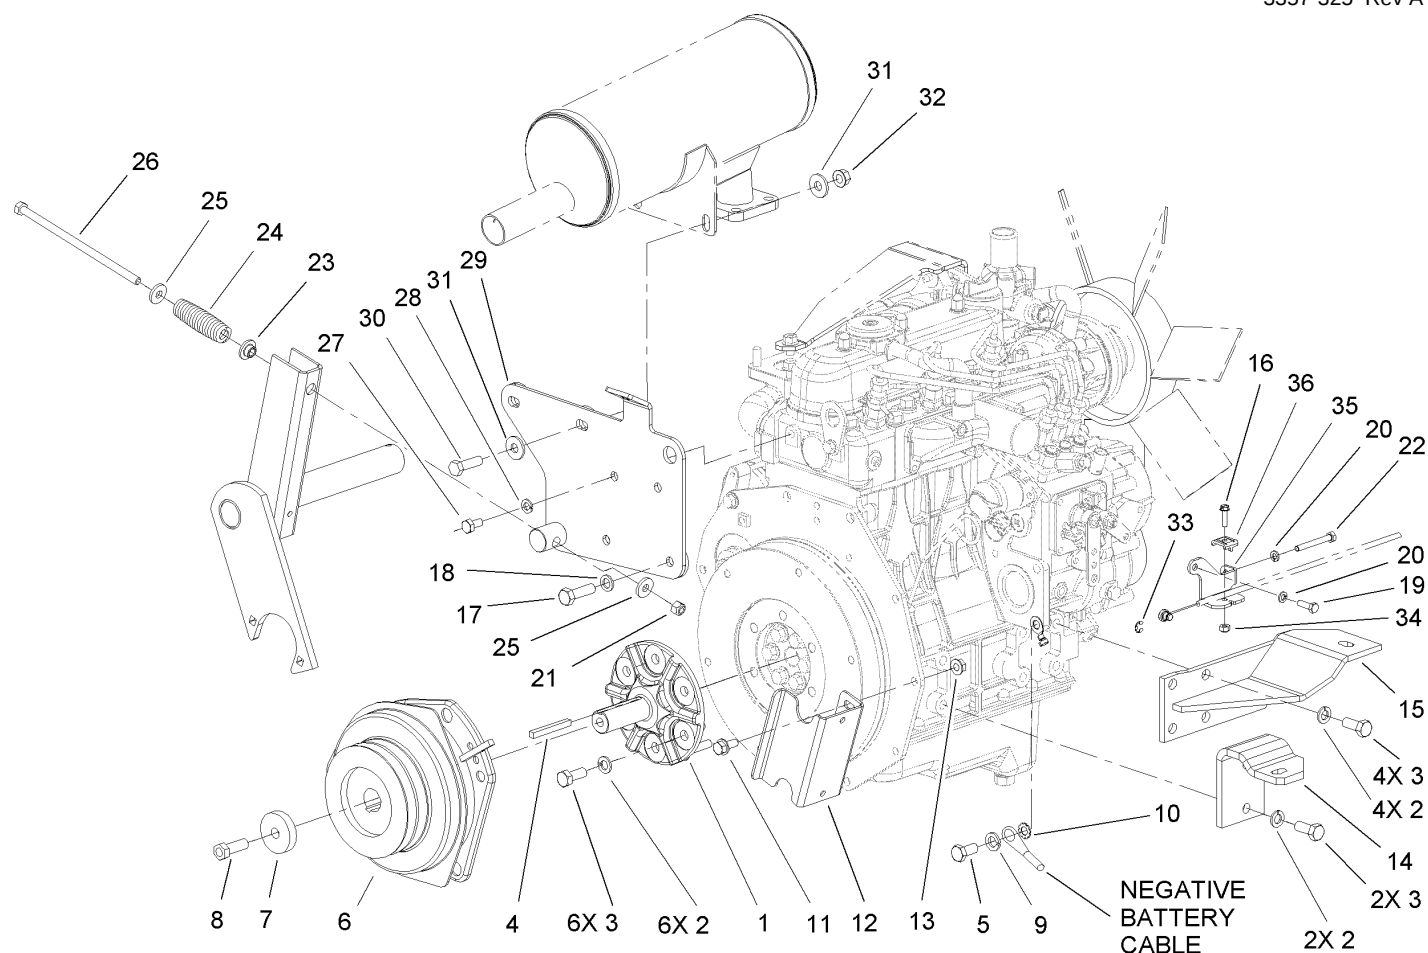 

Engine Assembly No. 2


Ref	Part No.	Qty.	Description
1	104-1715	1	Hub-Clutch
2	42-9600	12	Washer-Lock, Spring
3	43-0090	12	Screw-HH
4	63-8150	1	Key-Square
5	63-7790	1	Screw-Cap
6	107-9061	1	Electric Clutch / Brake ASM
7	105-3698	1	Spacer
8	3212-5	1	Screw-HH
9	3253-6	1	Washer-Lock
10	3255-9	1	Washer-Lock
11	3234-5	2	Screw-HHF
12	108-6586-03	1	Stop-Clutch
13	32128-25	2	Nut-HF
14	104-1713-03	1	Mount-Engine
15	104-1710-03	1	Engine Mount ASM
16	32105-13	1	Screw-SHH
17	56-2140	2	Bolt
18	48-9590	2	Washer-Lock
19	48-7630	1	Screw
20	48-8020	2	Washer-Spring
21	3296-29	1	Nut-Lock, NI
22	33113-050	1	Screw-HH
23	27-6600	1	Spacer-Coupling
24	21-0400-01	1	Spring-Compression

Ref	Part No.	Qty.	Description
25	4-2390	2	Washer-Flat
26	110-9696	1	Bolt-HH
27	33114-016	2	Screw-HH
28	3253-4	2	Washer-Lock
29	108-6561-03	1	Muffler Mount ASM
30	323-44	2	Screw-HH
31	80-6990	4	Washer-Hardened
32	32128-21	2	Nut-HF
33	701197	1	E-Ring
34	3296-2	1	Nut-Lock
35	110-9682-03	1	Bracket-Throttle
36	81-1690	1	Clamp-Cable

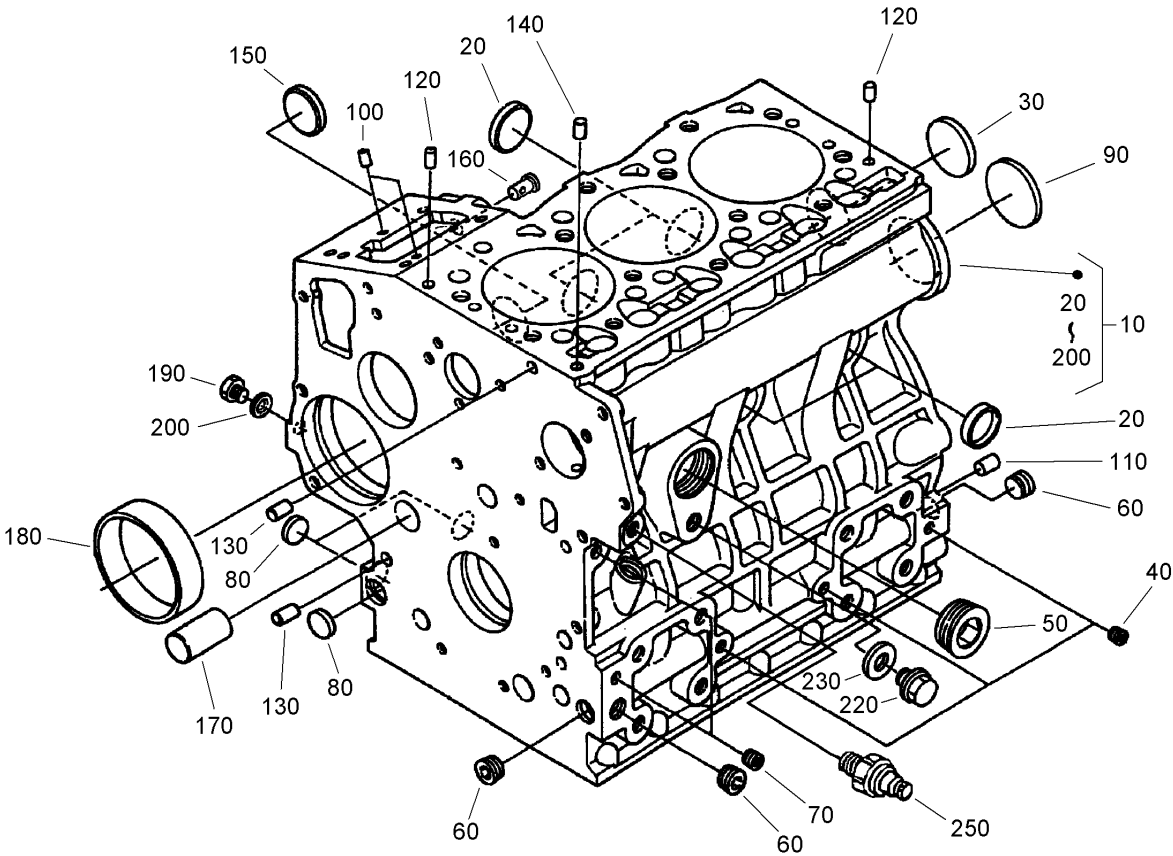 


Crankcase Assembly

Ref	Part No.	Qty.	Description				
10	108-6571	1	Crankcase ASM				
20	98-9398	4	Cap-Sealing				
30	98-7539	1	Cap-Sealing				
40	98-7540	3	Plug				
50	105-3779	1	Plug				
60	98-9597	3	Plug				
70	98-7487	2	Plug				
80	98-7489	3	Plug				
90	98-9668	1	Plug				
100	98-9375	2	Pin-Straight				
110	98-9377	2	Pin-Straight				
120	105-3795	2	Pin-Straight				
130	98-9387	2	Pin-Pipe				
140	98-9539	1	Pin-Pipe				
150	98-9599	1	Plug				
160	98-9630	1	Pin-Spring, Start				
170	98-9675	1	Plug				
180	98-9656	1	Bushing-Governor, Gear				
190	98-7507	1	Plug				
200	98-7428	1	Gasket				
220	99-3447	1	Plug				
230	106-7056	1	Gasket				
250	98-9416	1	Switch-Oil				

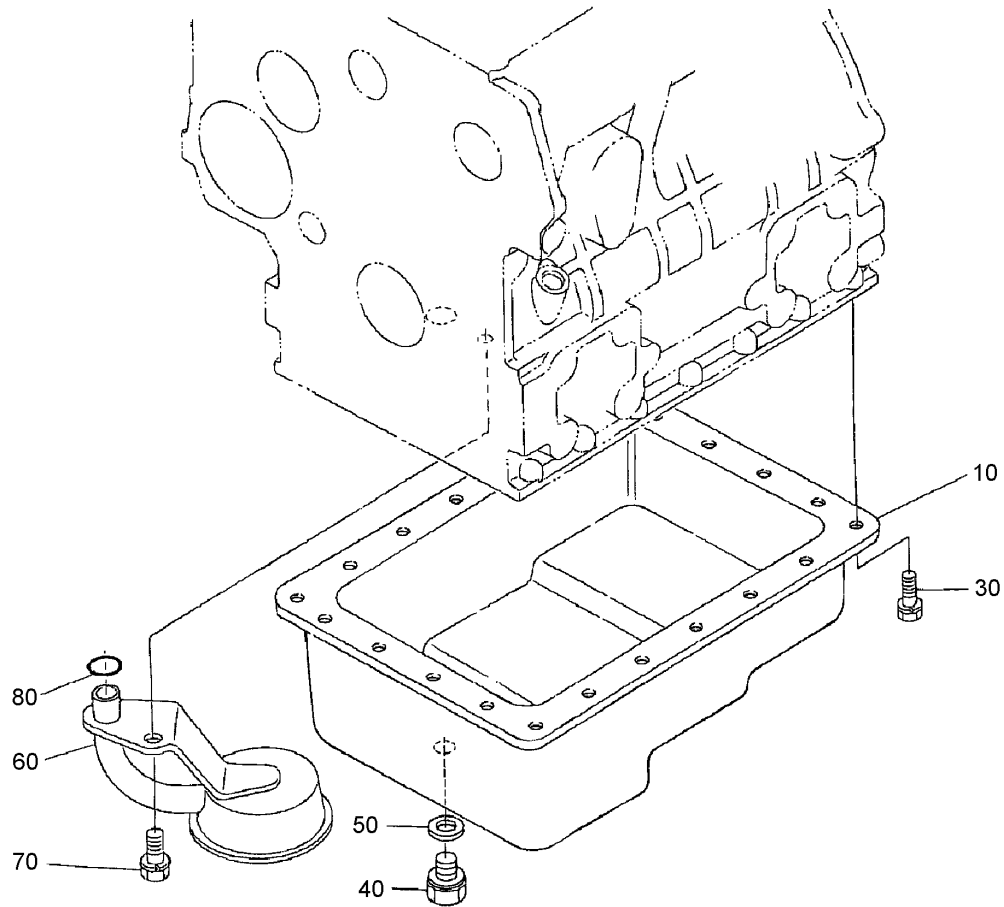 


Oil Pan Assembly

Ref	Part No.	Qty.	Description				
10	104-3495	1	Pan-Oil				
30	107-9065	22	Bolt				
40	108-6572	1	Plug-Drain				
50	98-7524	1	Gasket				
60	104-3496	1	Filter-Oil Pickup				
70	98-7526	1	Bolt				
80	105-3776	1	O-Ring				

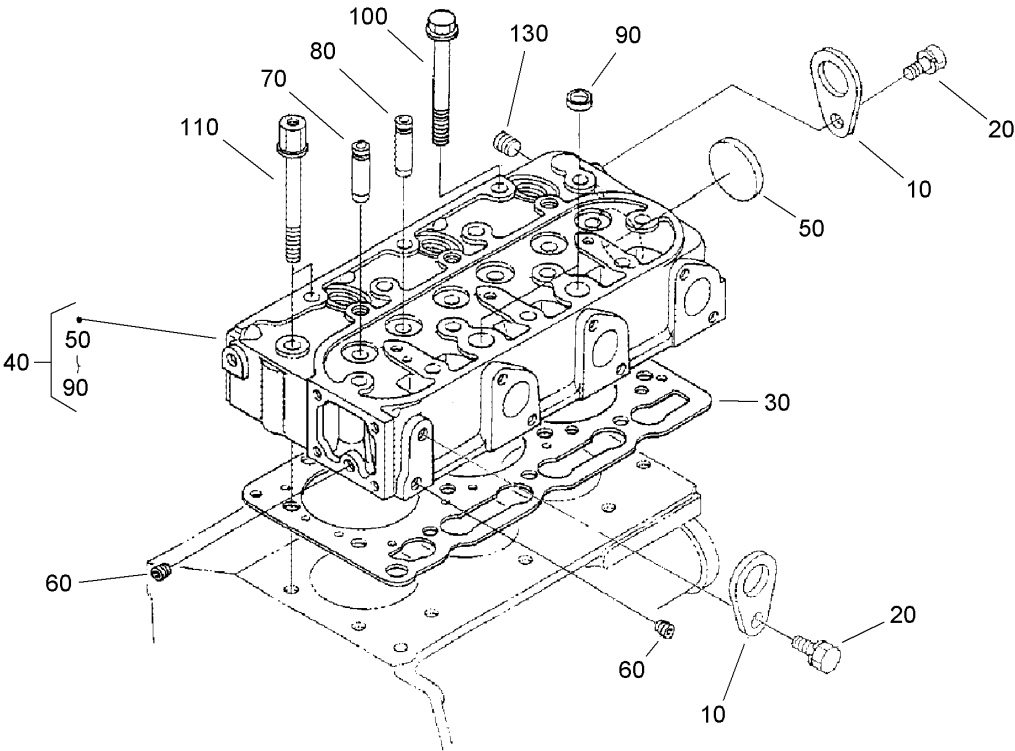 


Cylinder Head Assembly

Ref	Part No.	Qty.	Description				
10	98-7531	2	Hook-Engine				
20	100-9195	2	Bolt				
30	108-6573	1	Gasket-Head, Cylinder				
40	108-6574	1	Cylinder Head ASM				
50	98-9395	1	Cap-Sealing				
60	98-7540	2	Plug				
70	107-9066	3	Guide-Valve, Inlet				
80	107-9067	3	Guide-Valve, Exhaust				
90	98-9389	2	Cap-Sealing				
100	98-9479	1	Bolt-Head, Cylinder				
110	98-9647	2	Bolt-Head, Cylinder				
130	98-9444	1	Plug				

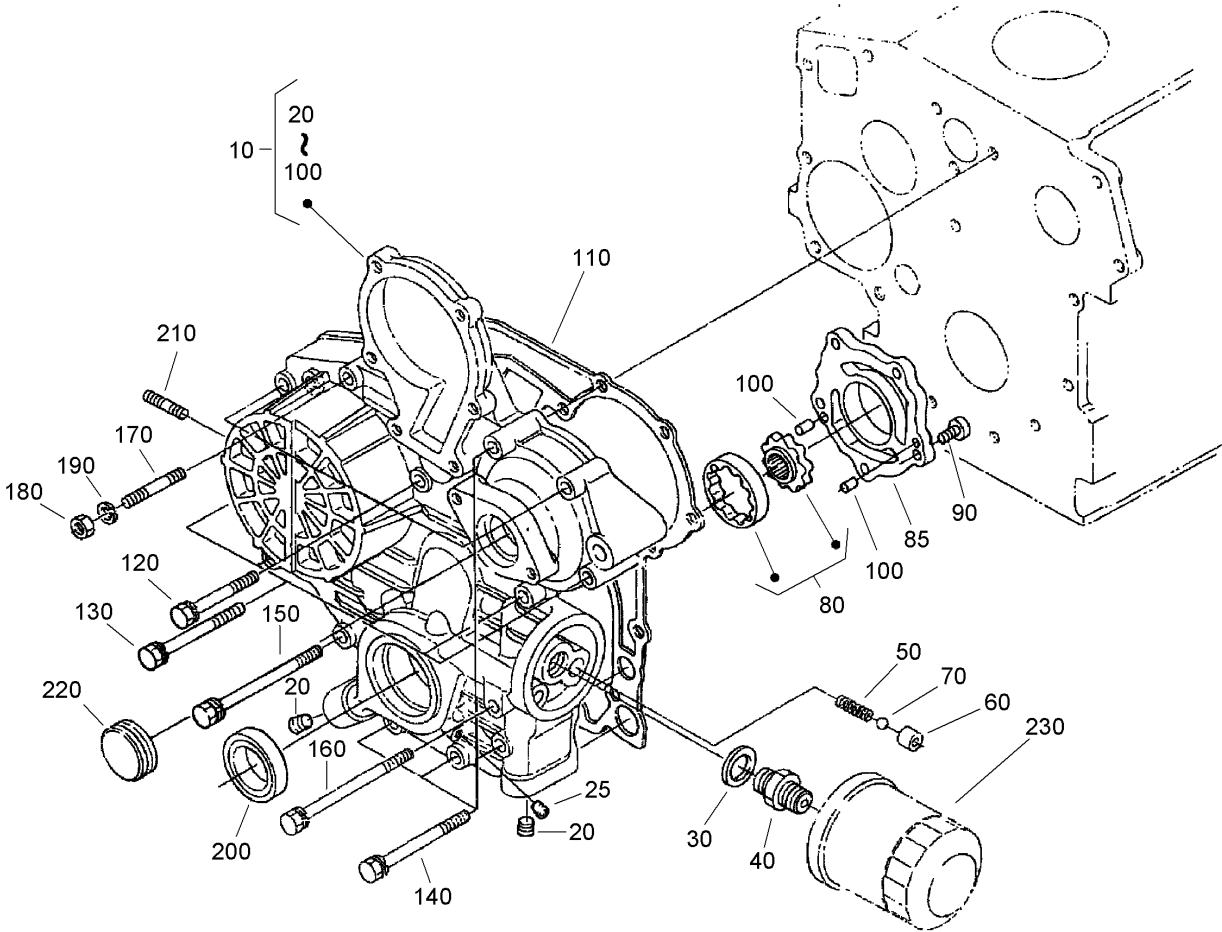 


Gear Case Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
10	107-9068	1	Gear Case ASM	230	108-3841	1	Filter-Oil
20	98-9598	2	Plug				
25	98-7487	1	Plug				
30	98-7562	1	Washer-Plain				
40	98-9388	1	Joint-Pipe				
50	98-9544	1	Spring				
60	98-9543	1	Seat-Valve				
70	98-9380	1	Ball				
80	98-9540	1	Oil Pump Rotor ASM				
85	107-9069	1	Cover-Pump, Oil				
90	107-9071	5	Screw				
100	107-9072	2	Pin-Straight				
110	98-9633	1	Gasket-Case, Gear				
120	107-9073	3	Bolt				
130	105-3797	4	Bolt				
140	98-9356	4	Bolt				
150	107-9074	1	Bolt				
160	98-9586	1	Bolt				
170	105-3709	1	Stud				
180	98-7572	1	Nut				
190	98-7699	1	Washer-Spring				
200	98-9482	1	Seal-Oil				
210	105-3710	2	Stud				
220	98-9641	1	Cover				

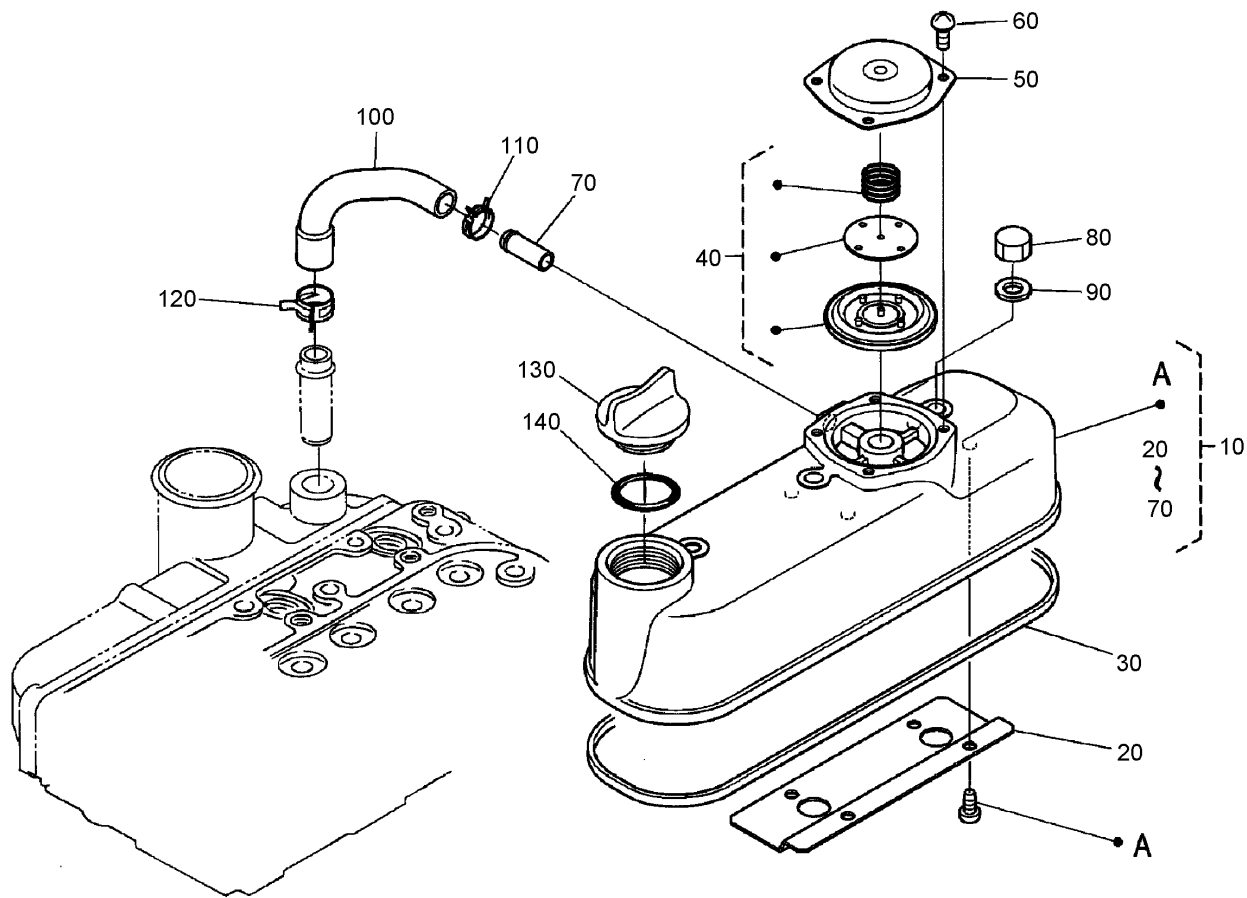 


Head Cover Assembly

Ref	Part No.	Qty.	Description				
10	108-6575	1	Cylinder Head Cover ASM				
20	108-2857	1	Shield-Breather				
30	98-9615	1	Gasket-Cover, Head				
40	108-2861	1	Breather Valve ASM				
50	108-2862	1	Cover-Breather				
60	108-2863	4	Screw-PPH				
70	98-7766	1	Pipe-Return, Water				
80	98-9455	3	Nut-Cap				
90	98-9454	3	Gasket				
100	108-2858	1	Tube-Beather				
110	108-2859	1	Clamp-Hose				
120	108-2860	1	Clamp-Hose				
130	107-9075	1	Plug-Filler, Oil				
140	99-3446	1	O-Ring				

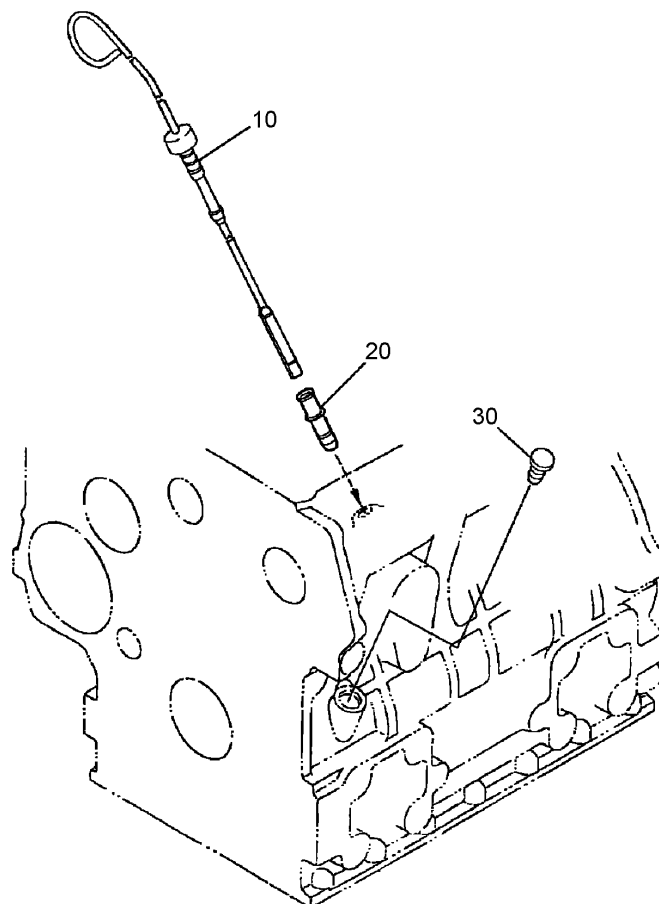 


Dipstick and Guide Assembly

Ref	Part No.	Qty.	Description
10	107-9076	1	Gauge-Oil
20	105-3713	1	Guide-Gauge, Oil
30	105-3715	1	Plug-Gauge, Oil

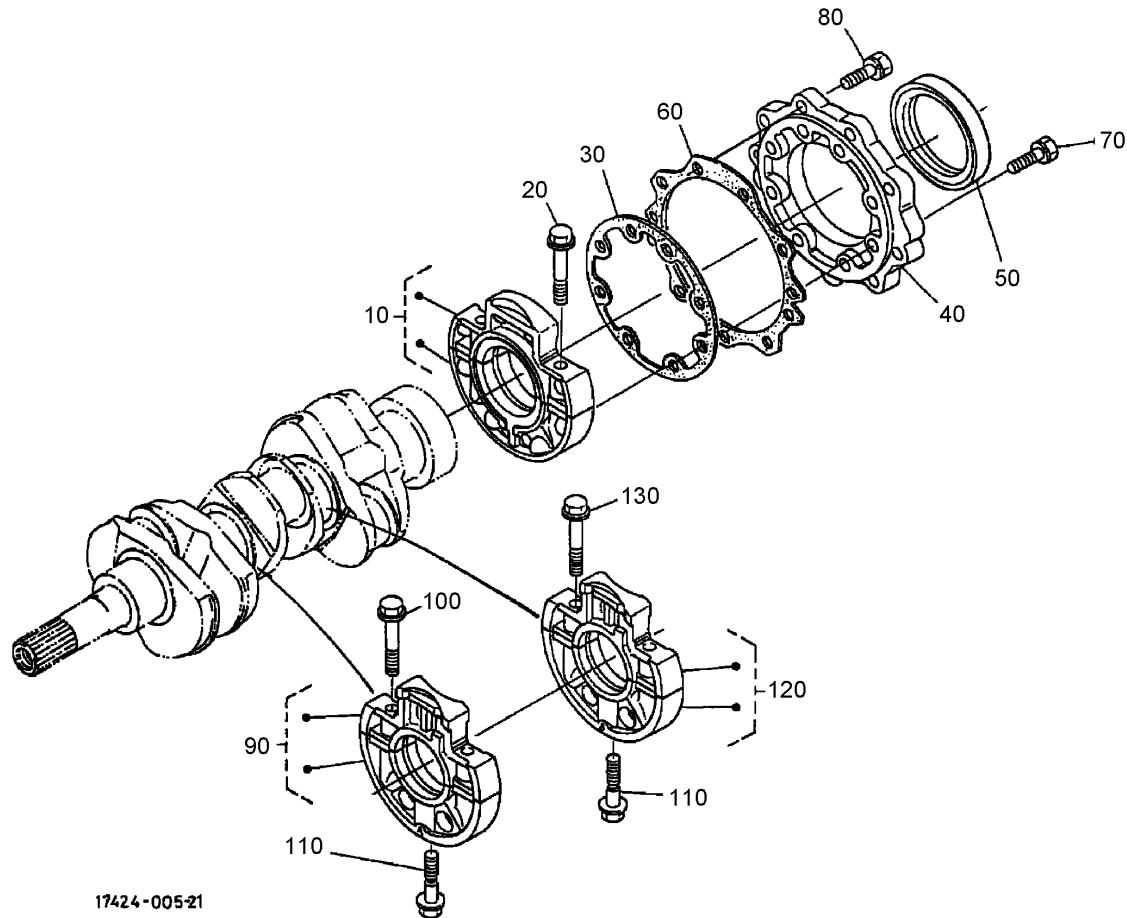 


Main Bearing Case Assembly

Ref	Part No.	Qty.	Description				
10	98-9480	1	Main Bearing Case ASM				
20	98-9484	6	Bolt-Case, Bearing				
30	98-9634	1	Gasket-Case, Bearing				
40	98-9487	1	Cover-Case, Bearing				
50	98-9483	1	Seal-Oil				
60	98-9635	1	Gasket-Cover, Bearing Case				
70	98-9352	8	Bolt				
80	98-7568	9	Bolt				
90	98-9606	1	Main Bearing Case ASM				
100	98-9484	2	Bolt-Case, Bearing				
110	98-9485	2	Bolt-Case, Bearing				
120	98-9607	1	Main Bearing Case ASM				
130	98-9484	2	Bolt-Case, Bearing				

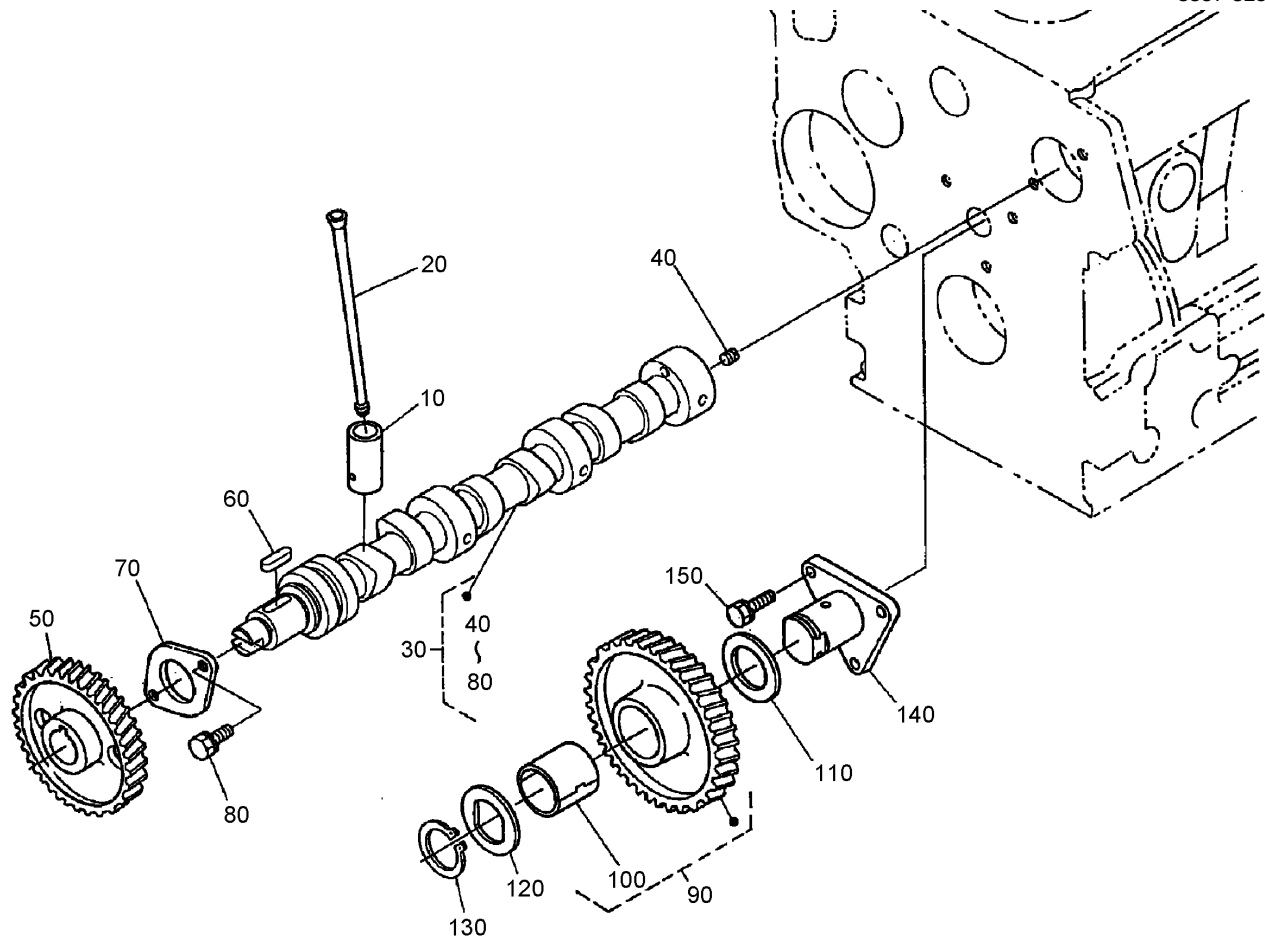 

Camshaft and Idle Gear Shaft Assembly


Ref	Part No.	Qty.	Description				
10	98-9616	6	Tappet				
20	98-9509	6	Rod-Push				
30	108-6576	1	Camshaft ASM				
40	98-7449	1	Screw-Set				
50	98-9512	1	Gear-Cam				
60	98-9378	1	Key-Feather				
70	98-9510	1	Stopper-Camshaft				
80	98-9351	2	Bolt				
90	98-9649	1	Idle Gear ASM				
100	98-9650	1	Bushing-Gear, Idle				
110	98-9535	1	Collar-Gear, Idle				
120	98-9536	1	Collar-Gear, Idle				
130	98-9534	1	Clip-Circular, Idle Gear				
140	98-9533	1	Shaft-Gear, Idle				
150	98-7692	3	Bolt				

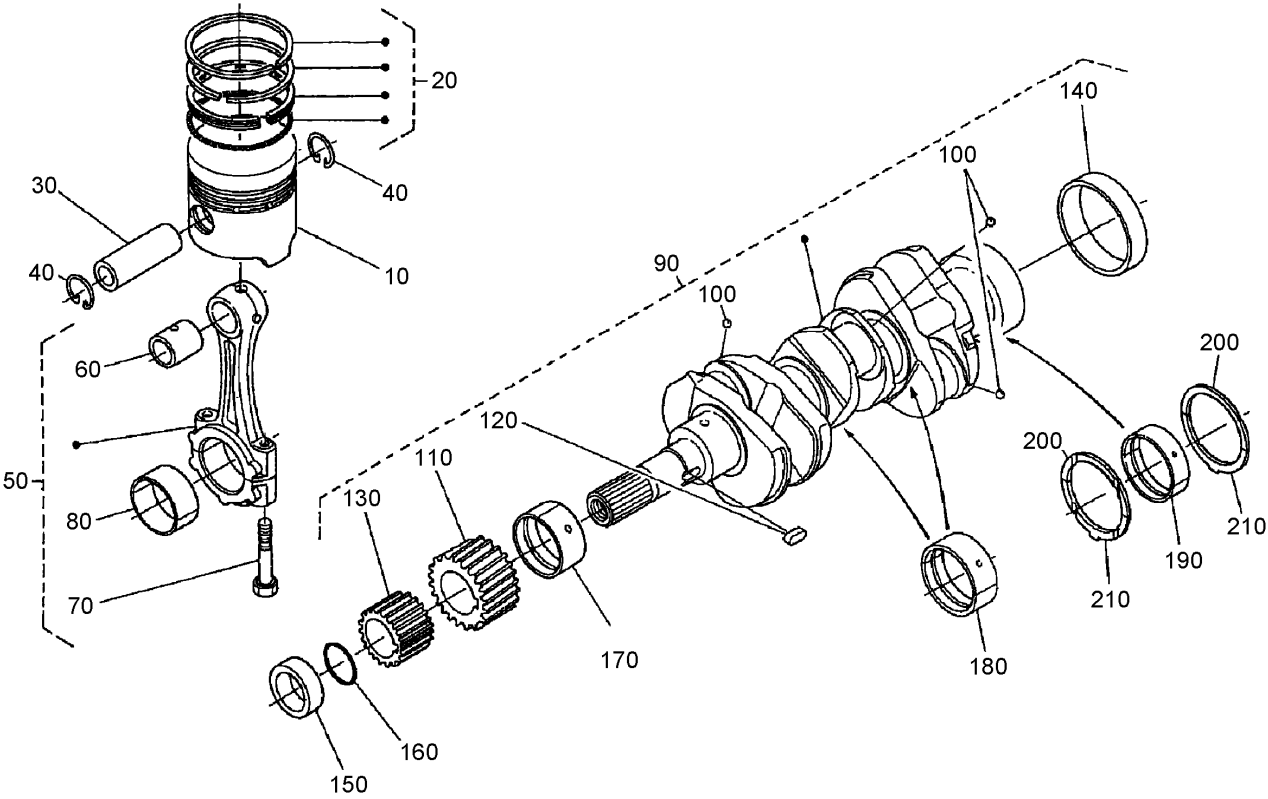 

Piston and Crankshaft Assembly


Ref	Part No.	Qty.	Description
10	98-9470	3	Piston (0.5Mm)
10	98-9469	3	Piston (STD)
20	98-9619	3	Piston Ring ASM (0.5Mm)
20	98-9618	3	Piston Ring ASM (STD)
30	98-9513	3	Pin-Piston
40	98-9514	6	Clip-Circular, Piston Pin
50	98-9516	3	Connecting Rod ASM
60	98-9515	3	Bushing-Pin, Piston
70	98-9517	6	Bolt-Rod, Connecting
80	98-9520	3	Bearing-Rod (0.4Mm)
80	98-9519	3	Bearing-Rod (0.2Mm)
80	98-9518	3	Metal-Crankpin (STD)
90	98-9642	1	Crankshaft ASM
100	98-7473	3	Ball
110	98-9532	1	Gear-Crankshaft
120	98-9666	1	Key
130	98-9542	1	Gear-Drive, Oil Pump
140	98-9522	1	Sleeve-Crankshaft
150	98-9521	1	Collar-Crankshaft
160	105-3783	1	O-Ring
170	98-9523	1	Metal Crankshaft (STD)
170	98-9528	1	Bearing-Main (0.2Mm)
170	98-9529	1	Bearing-Main (0.4Mm)
180	98-9524	2	Metal-Crankshaft (STD Set)

Ref	Part No.	Qty.	Description
180	98-9530	2	Bearing-Main (0.2Mm)
180	98-9531	2	Bearing-Main (0.4Mm)
190	98-9556	1	Bearing-Main (STD)
190	105-3719	1	Metal-Crankshaft (.2Mm)
190	105-3720	1	Metal-Crankshaft (.4Mm)
200	98-9413	2	Bearing-Thrust (STD)
200	98-9414	2	Bearing-Thrust (0.2Mm)
200	98-9415	2	Bearing-Thrust (0.4Mm)
210	98-9688	2	Bearing-Thrust (STD)
210	98-9689	2	Bearing-Thrust (0.2Mm)
210	98-9690	2	Bearing-Thrust (0.4Mm)

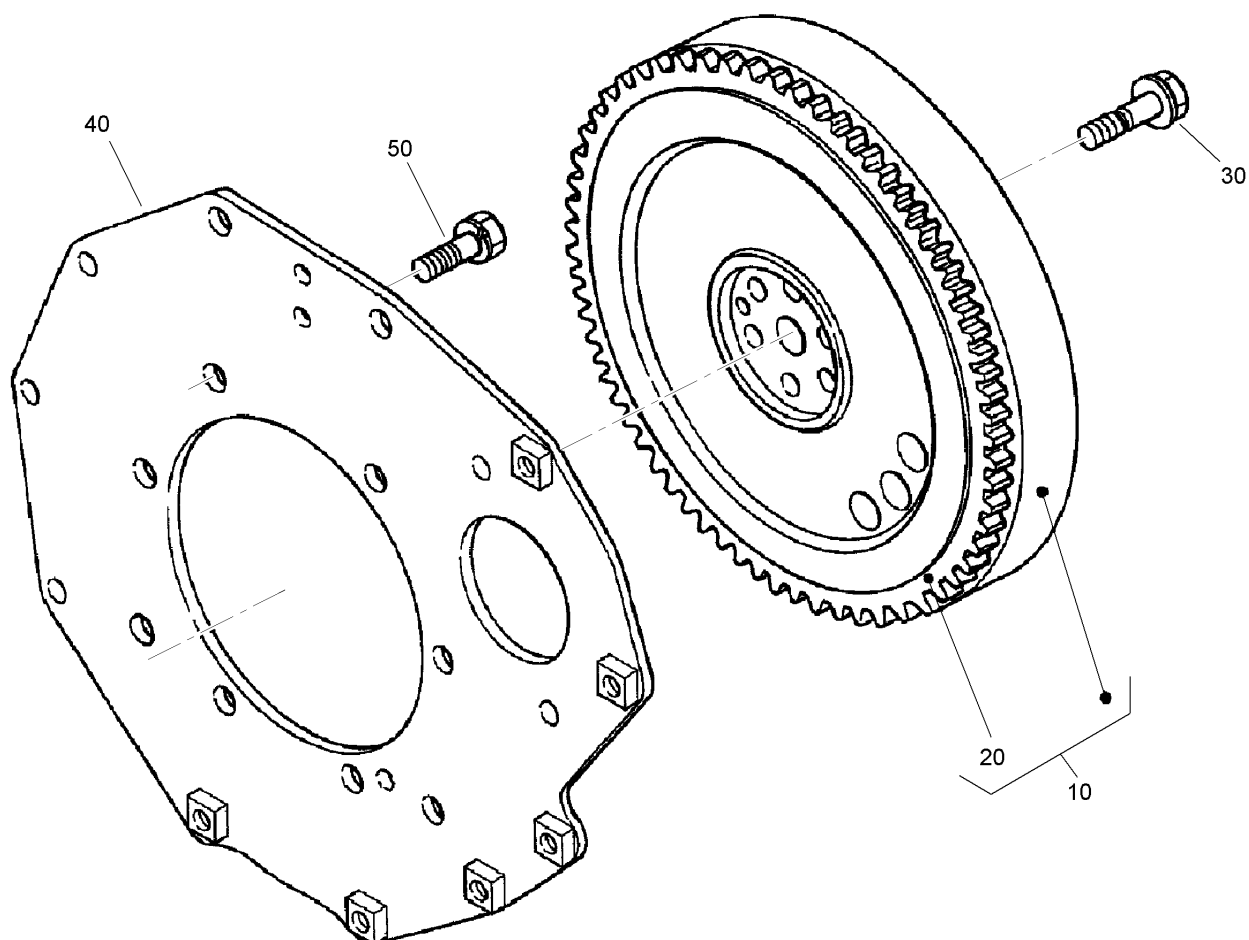 


Flywheel Assembly

Ref	Part No.	Qty.	Description
10	105-3784	1	Flywheel ASM
20	105-3722	1	Gear-Ring
30	98-9537	6	Bolt-Flywheel
40	98-9486	1	Plate-End, Rear
50	98-9392	8	Bolt

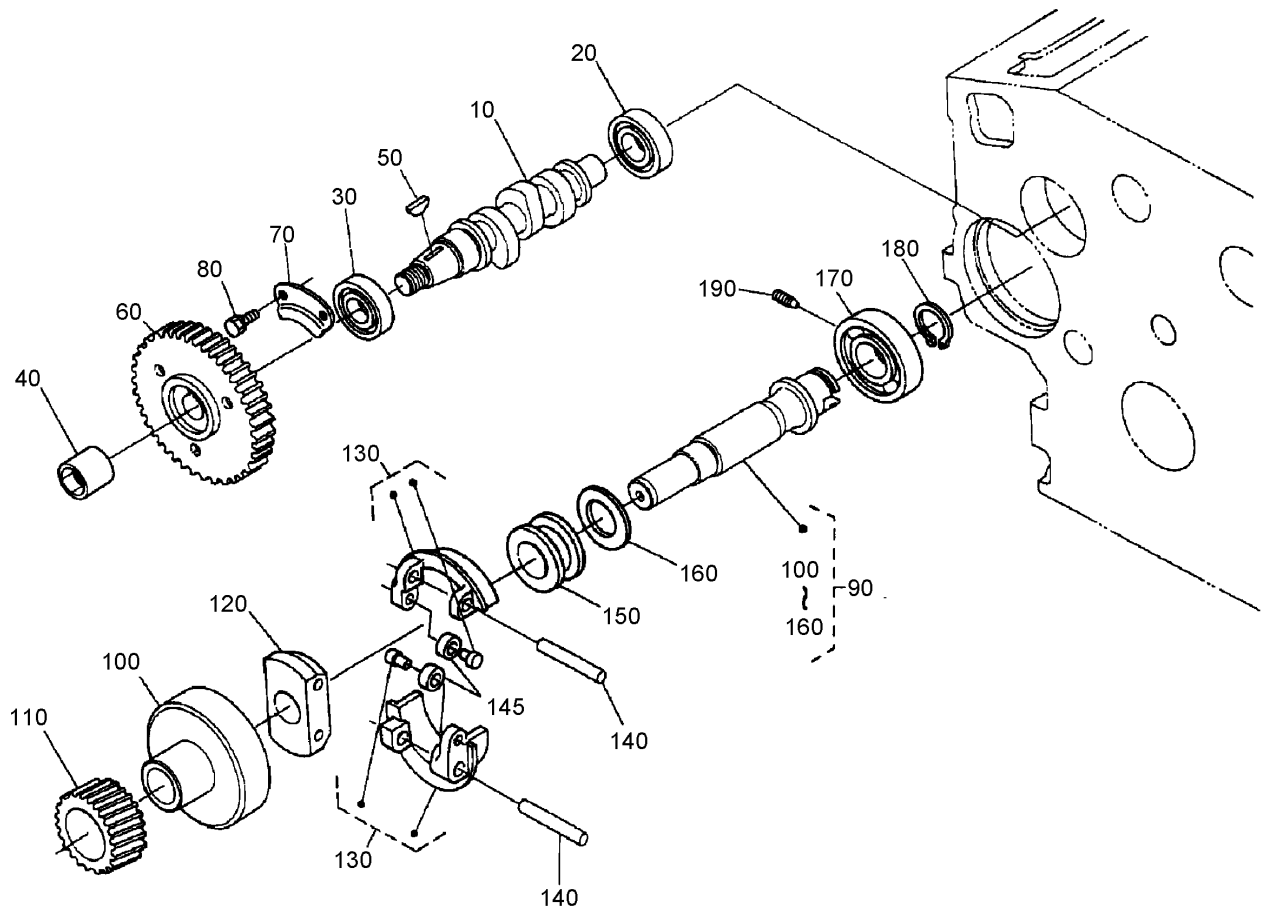 


Fuel Camshaft and Governor Shaft Assembly

Ref	Part No.	Qty.	Description				
10	98-9459	1	Camshaft-Fuel				
20	107-9077	1	Bearing-Ball				
30	107-9078	1	Bearing-Ball				
40	98-9590	1	Nut-Cap				
50	98-9595	1	Key-Woodruff				
60	98-9669	1	Gear-Pump, Injection				
70	98-9511	1	Stopper-Fuel, Camshaft				
80	98-9350	2	Bolt				
90	98-9644	1	Governor Shaft ASM				
100	98-9562	1	Holder-Gear, Governor				
110	98-9673	1	Gear-Governor				
120	98-9561	1	Holder-Weight, Governor				
130	98-9559	2	Governor Weight ASM				
140	98-9560	2	Shaft-Weight, Governor				
145	98-9692	2	Roller				
150	98-9563	1	Sleeve-Governor				
160	98-9564	1	Washer-Thrust				
170	107-9079	1	Bearing-Ball				
180	98-9657	1	Clip-Circular, Governor Shaft				
190	98-9565	1	Screw-Set				

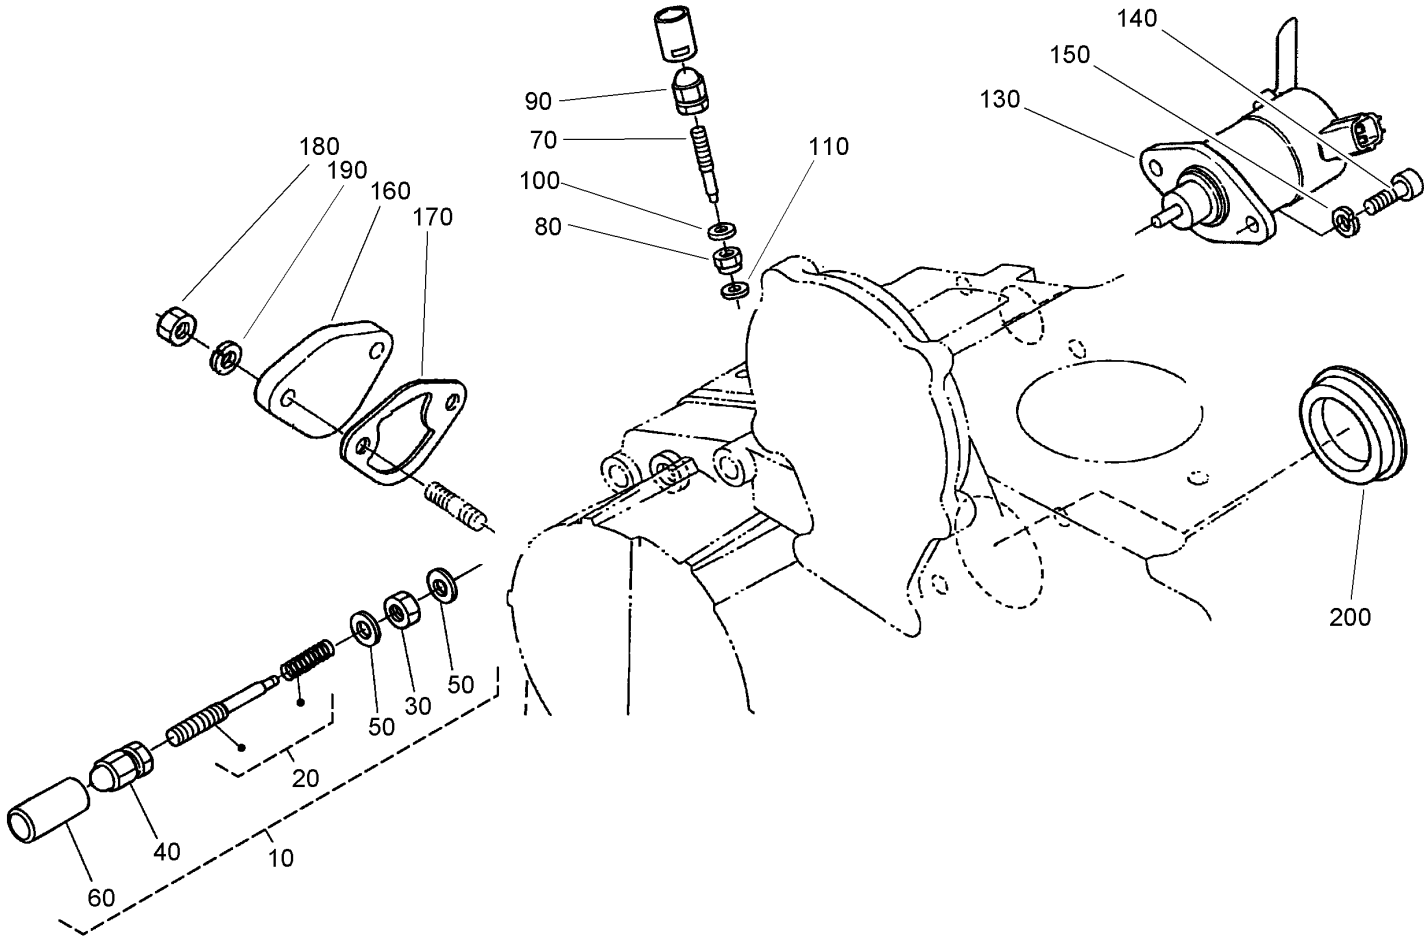 


Idle Apparatus Assembly

Ref	Part No.	Qty.	Description				
10	98-9678	1	Idle Apparatus ASM				
20	98-9679	1	Adjusting Bolt ASM				
30	98-9439	1	Nut				
40	99-8387	1	Nut-Cap				
50	98-7654	2	Gasket				
60	98-7656	1	Cap				
70	98-9557	1	Bolt-Adjusting				
80	99-3512	1	Nut				
90	99-8387	1	Nut-Cap				
100	98-7654	1	Gasket				
110	107-9081	1	Gasket				
130	104-5155	1	Solenoid-Stop				
140	105-3799	2	Bolt-HSH				
150	98-7699	2	Washer-Spring				
160	99-3514	1	Cover				
170	98-9636	1	Gasket-Pump, Fuel				
180	98-7572	2	Nut				
190	98-7699	2	Washer-Spring				
200	98-9640	1	Cover-Pump				

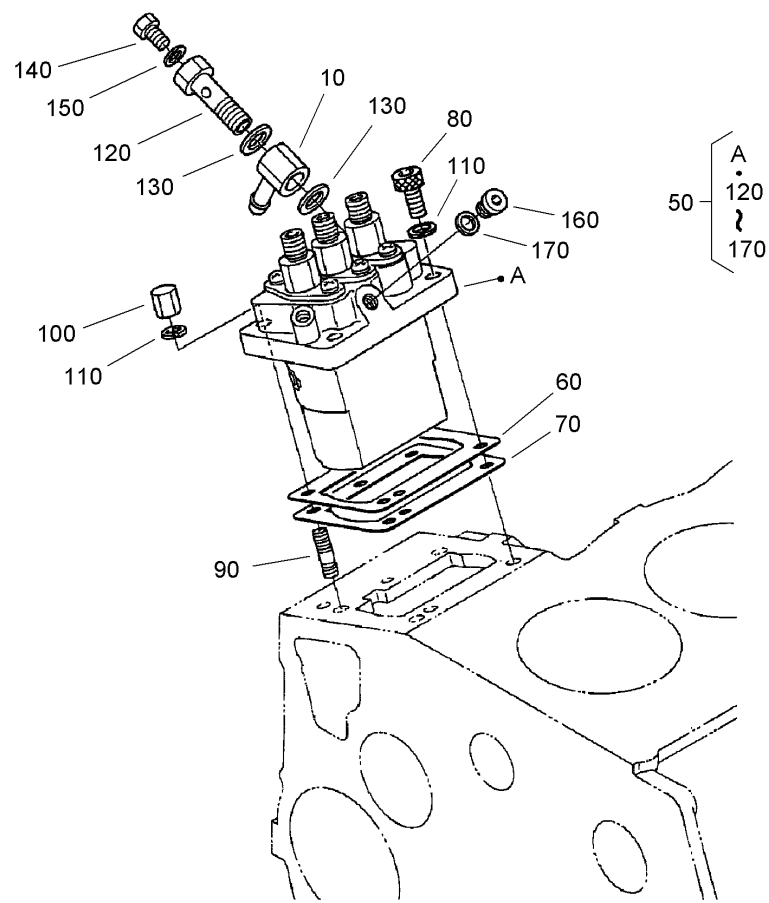 


Injection Pump Assembly

Ref	Part No.	Qty.	Description				
10	98-9596	1	Joint-Eye				
50	98-9643	1	Injection Pump ASM				
60	98-9457	1	Shim-Injection (0.25Mm)				
60	98-9456	1	Shim (0.2Mm)				
70	98-9458	1	Shim-Injection (0.30Mm)				
80	98-9361	2	Bolt-HSH				
90	98-9438	2	Stud				
100	98-9440	2	Nut-Cap				
110	98-7699	4	Washer-Spring				
120	98-9464	1	Bolt-Joint				
130	98-9445	2	Gasket				
140	98-9430	1	Screw				
150	98-9446	1	Gasket				
160	98-9466	1	Plug				
170	98-9451	1	Gasket				

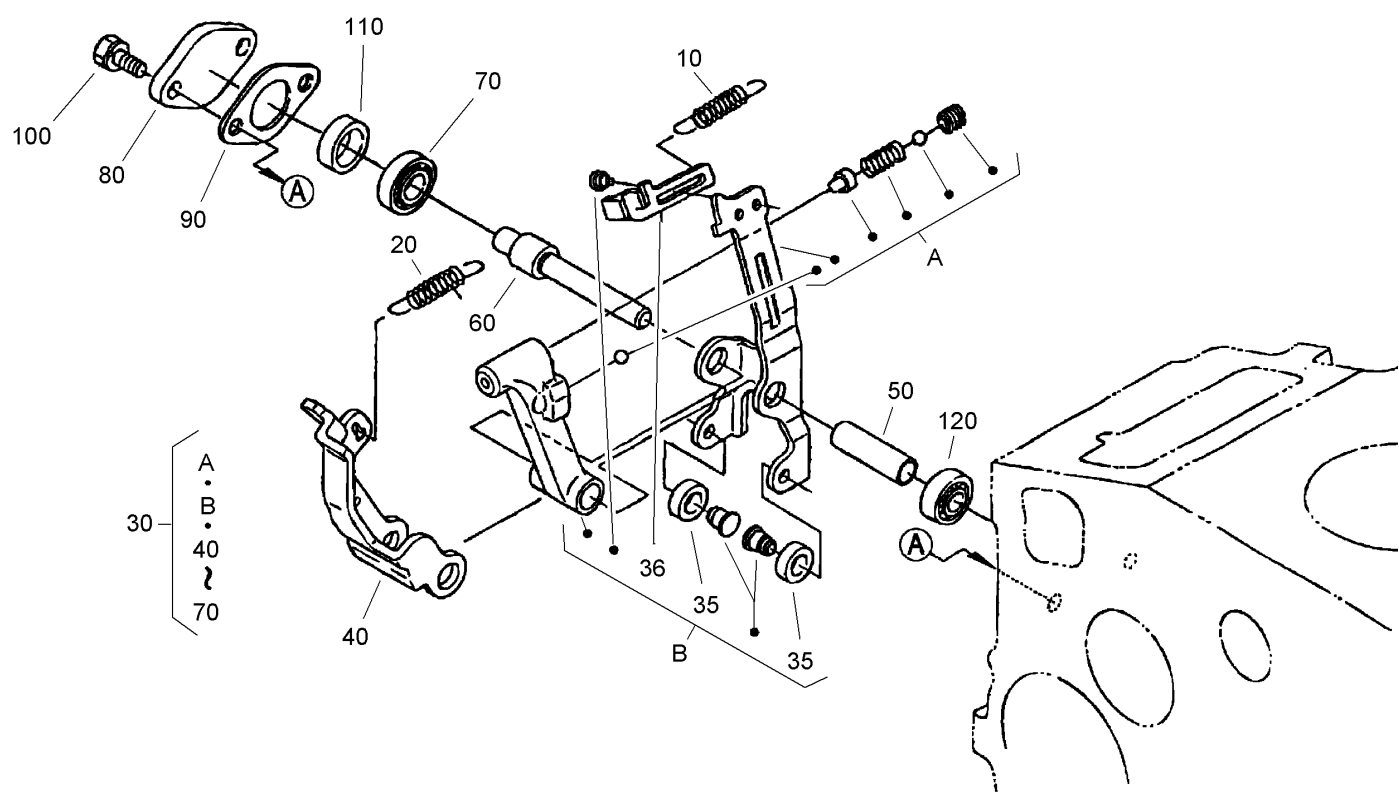 


Governor Assembly

Ref	Part No.	Qty.	Description				
10	105-3786	1	Spring-Start				
20	98-9681	1	Spring-Governor				
30	107-9082	1	Fork Lever ASM				
35	98-9692	2	Roller				
36	107-9083	1	Lever-Thrust				
40	107-9084	1	Lever-Fork				
50	107-9085	1	Shaft-Lever, Fork				
60	107-9086	1	Shaft-Lever, Fork				
70	98-9570	1	Bearing-Miniaturize				
80	98-9569	1	Cover-Shaft, Fork Lever				
90	98-9682	1	Gasket				
100	98-9351	2	Bolt				
110	98-9567	1	Collar				
120	98-9571	1	Bearing-Miniaturize				

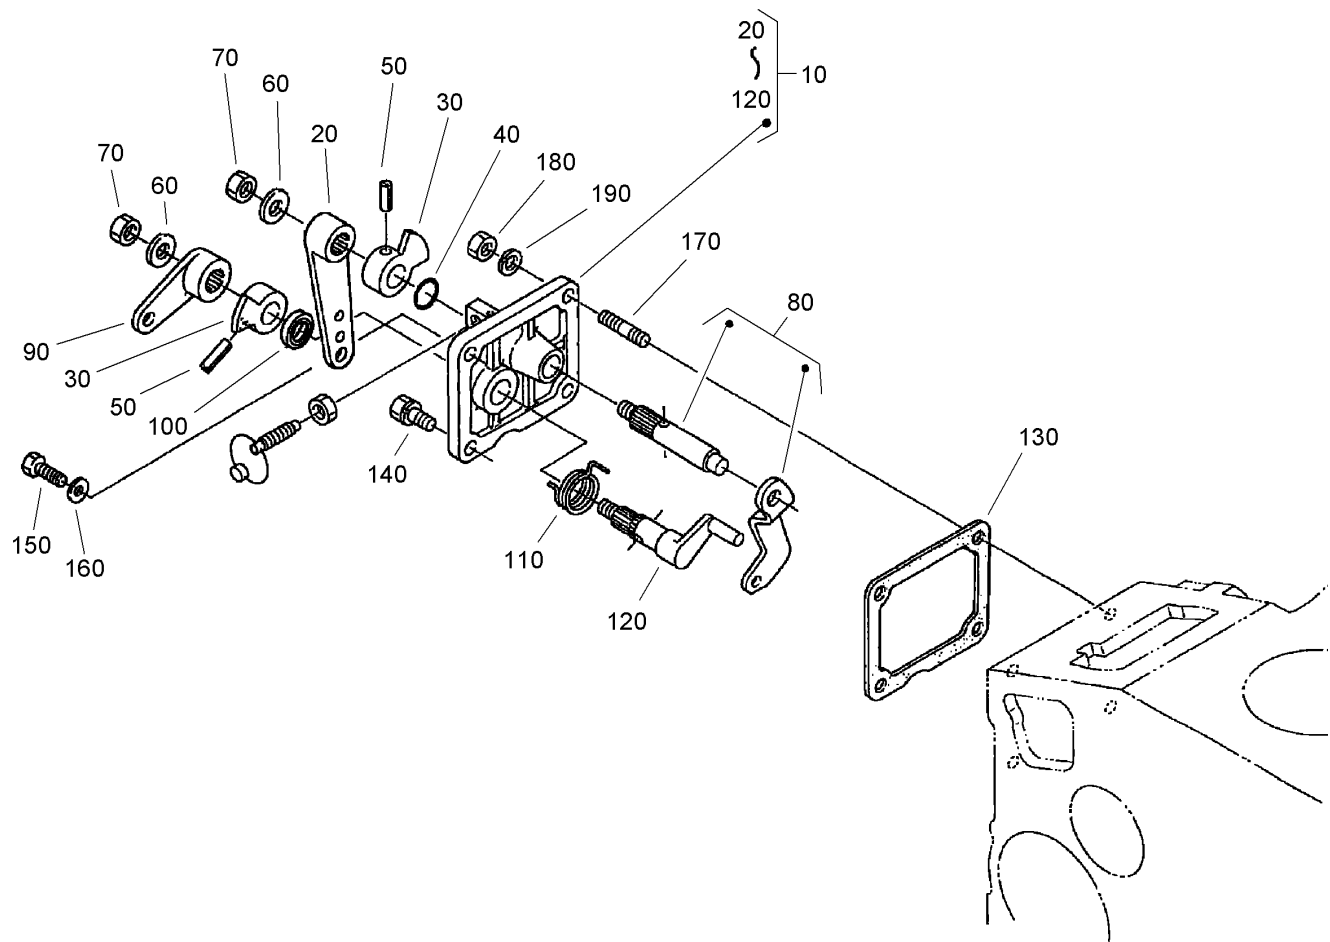 

Speed Control Plate Assembly


Ref	Part No.	Qty.	Description				
10	105-3735	1	Control Plate ASM				
20	98-9662	1	Lever-Control, Speed				
30	98-9572	2	Lever-Control, Speed				
40	105-3788	1	O-Ring				
50	98-7602	2	Pin-Spring				
60	98-9594	2	Washer-Plain				
70	98-9589	2	Nut				
80	98-9658	1	Governor Lever ASM				
90	98-9663	1	Lever-Stop, Engine				
100	98-7601	1	Seal-Oil				
110	98-9472	1	Spring-Return				
120	98-9664	1	Shaft-Lever, Stop				
130	98-9637	1	Gasket				
140	98-7692	1	Bolt				
150	99-8348	1	Bolt				
160	98-7654	2	Gasket				
170	105-3710	2	Stud				
180	98-7572	2	Nut				
190	98-7699	2	Washer-Spring				

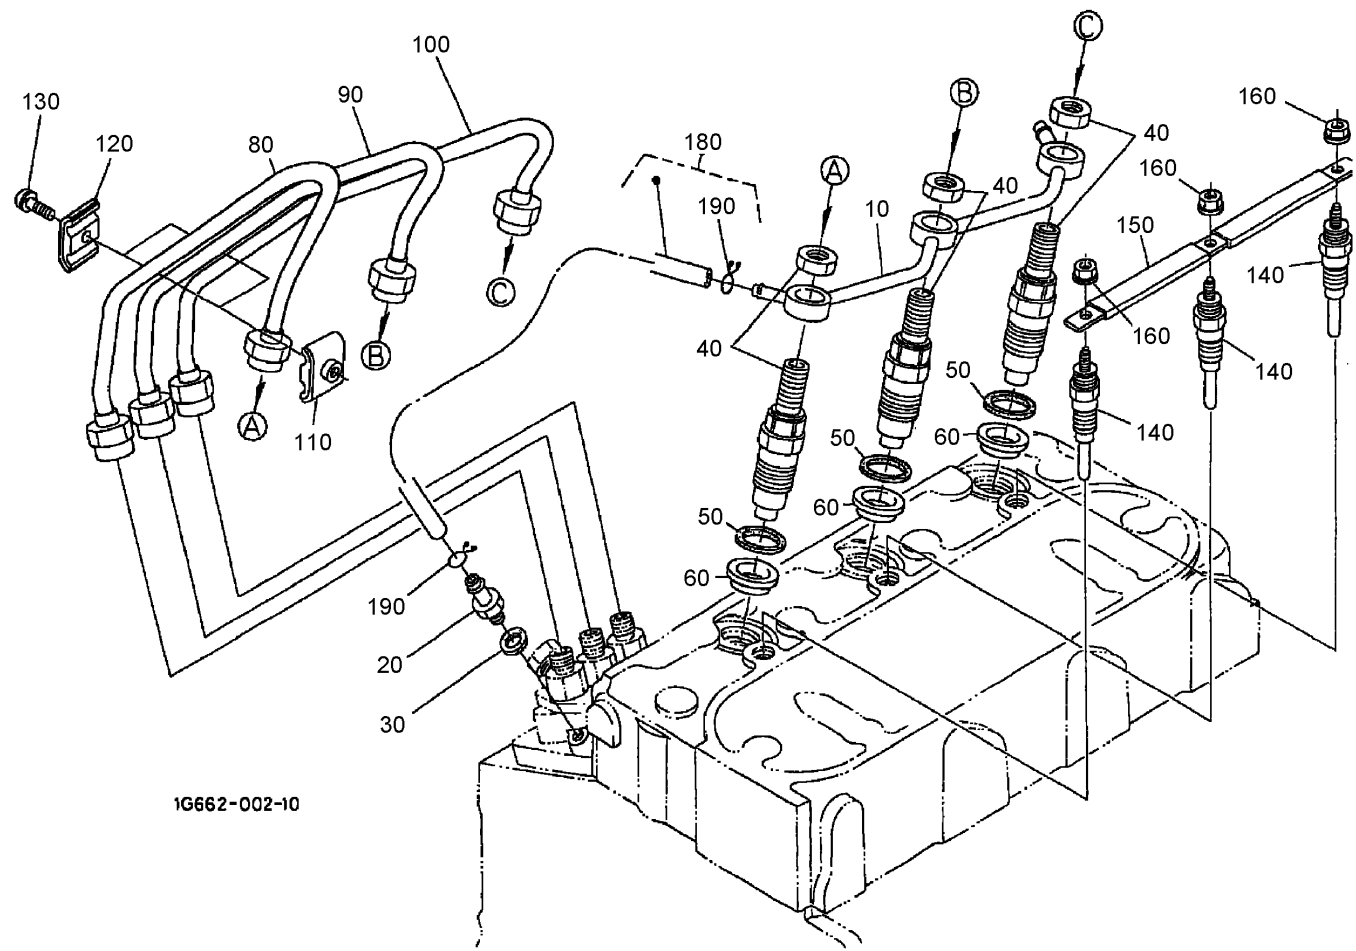 

1G662-002-10


Nozzle Holder and Glow Plug Assembly

Ref	Part No.	Qty.	Description				
10	98-9620	1	Over Flow Pipe ASM				
20	98-9431	1	Screw-Bleeder				
30	98-7654	1	Gasket				
40	108-2866	3	Nozzle Holder Kit				
50	98-7676	3	Gasket				
60	98-7677	3	Seal				
80	98-9653	1	Pipe-Injection				
90	98-9654	1	Pipe-Injection				
100	98-9655	1	Pipe-Injection				
110	98-7682	2	Clamp-Pipe				
120	98-7683	2	Clamp-Pipe				
130	98-7684	2	Screw (W/Washer)				
140	98-9695	3	Plug-Glow				
150	98-9631	3	Cord-Plug, Glow				
160	99-8377	3	Nut-Flange				
180	98-9420	1	Over Flow Pipe ASM				
190	98-7671	2	Clip-Pipe				

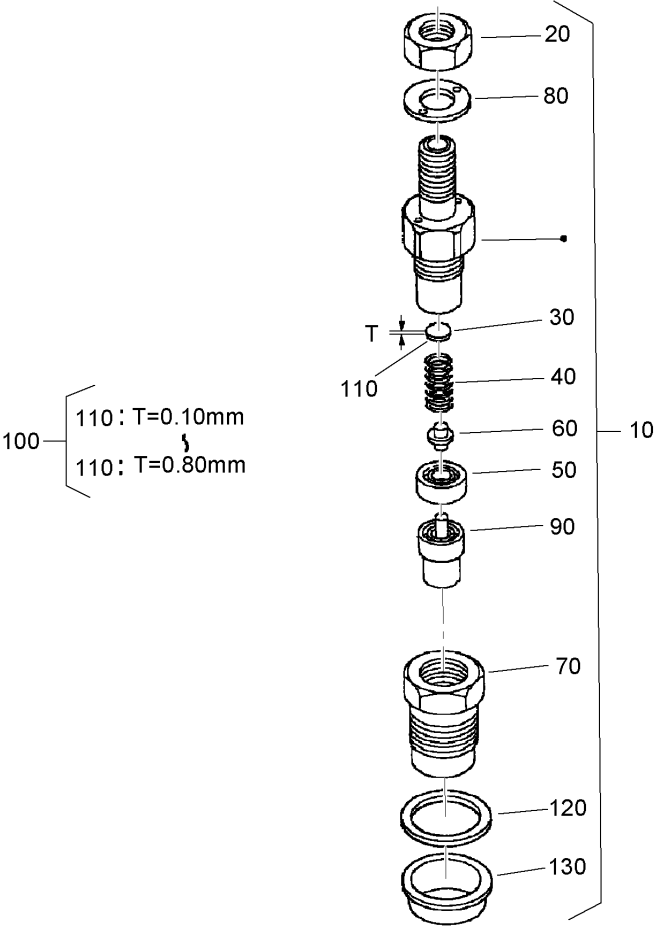 


Nozzle Holder Assembly

Ref	Part No.	Qty.	Description				
10	108-2866	3	Nozzle Holder Kit				
20	99-8301	3	Nut				
30	99-8302	3	Washer-Adjusting				
40	99-8303	3	Spring-Nozzle				
50	99-8304	3	Spacer-Distance				
60	99-8305	3	Rod-Push				
70	99-8306	3	Nut-Nozzle				
80	99-8307	3	Washer-Plain				
90	107-7826	3	Piece-Nozzle				
100	99-8309	3	Adjusting Washer ASM				
110	99-8310	3	Washer-Adjust (0.10Mm)				
110	99-8311	3	Washer-Adjust (0.20Mm)				
110	99-8312	3	Washer-Adjust (0.30Mm)				
110	99-8313	3	Washer-Adjust (0.40Mm)				
110	99-8314	3	Washer-Adjust (0.50Mm)				
110	99-8315	3	Washer-Adjust (0.52Mm)				
110	99-8316	3	Washer-Adjust (0.54Mm)				
110	99-8317	3	Washer-Adjust (0.56Mm)				
110	99-8318	3	Washer-Adjust (0.58Mm)				
110	99-8319	3	Washer-Adjust (0.80Mm)				
120	98-7676	3	Gasket				
130	98-7677	3	Seal				

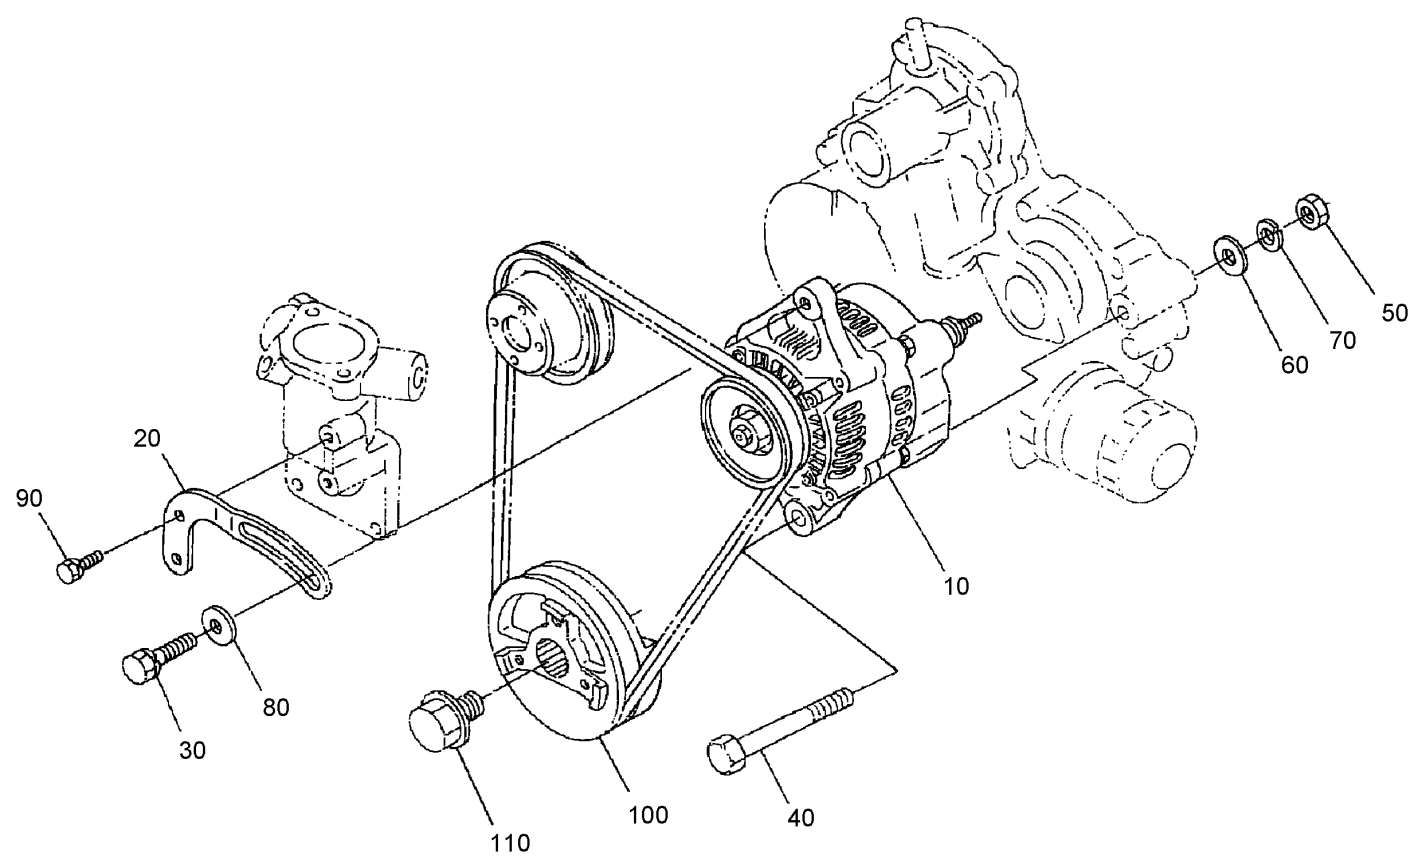 

Alternator and Pulley Assembly


Ref	Part No.	Qty.	Description				
10	98-9474	1	Alternator ASM				
20	98-9573	1	Stay-Dynamo				
30	108-7088	1	Bolt				
40	98-9360	1	Bolt				
50	98-7737	1	Nut				
60	3256-24	1	Washer-Flat				
70	98-7738	1	Washer-Spring				
80	100-9233	1	Washer-Plain				
90	98-7692	1	Bolt				
100	98-9473	1	Pulley-Drive, Fan				
110	98-9585	1	Bolt				

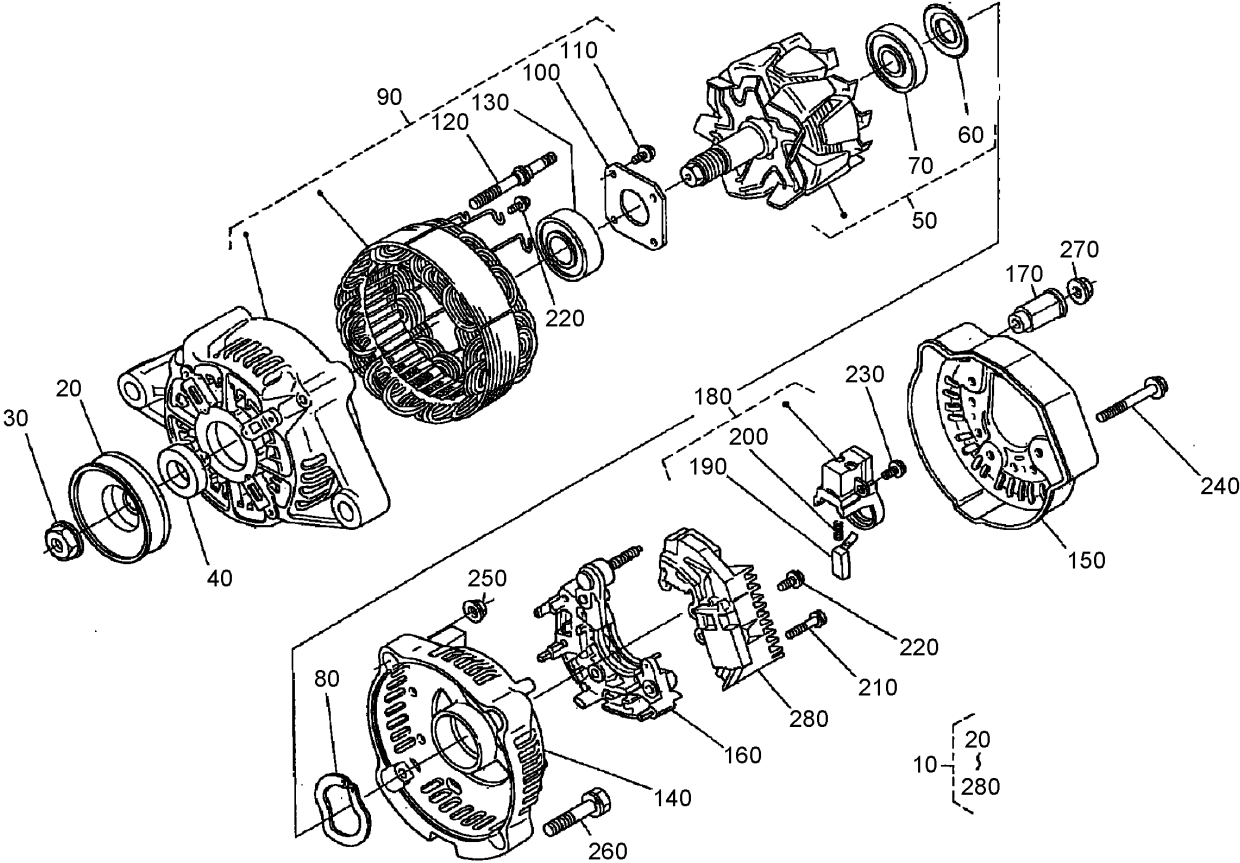 

Alternator (Component Part) Assembly


Ref	Part No.	Qty.	Description
10	98-9474	1	Alternator ASM
20	98-9453	1	Pulley-Dynamo
30	98-7708	1	Nut
40	98-7709	1	Collar
50	107-0136	1	Rotor
60	98-7711	1	Cover-Bearing
70	107-0138	1	Bearing-Ball
80	98-7713	1	Washer-Thrust
90	107-0139	1	Drive End Frame ASM
100	98-7715	1	Plate-Retainer
110	98-7716	4	Screw-Head, Round
120	98-7717	2	Bolt-Through
130	107-0137	1	Bearing-Ball
140	107-9087	1	Frame-End
150	107-0140	1	Cover-End
160	98-9476	1	Rectifier ASM
170	98-7722	1	Bushing-Insulation
180	107-0141	1	Holder-Brush
190	98-7724	2	Brush
200	98-7725	2	Spring-Brush
210	98-7726	2	Screw-Head, Round
220	98-7727	6	Screw-Head, Round
230	98-7728	1	Screw-Head, Round
240	98-7729	3	Bolt

Ref	Part No.	Qty.	Description
250	98-7730	2	Nut
260	98-7731	2	Bolt
270	98-7732	1	Nut
280	107-9088	1	Regulator ASM

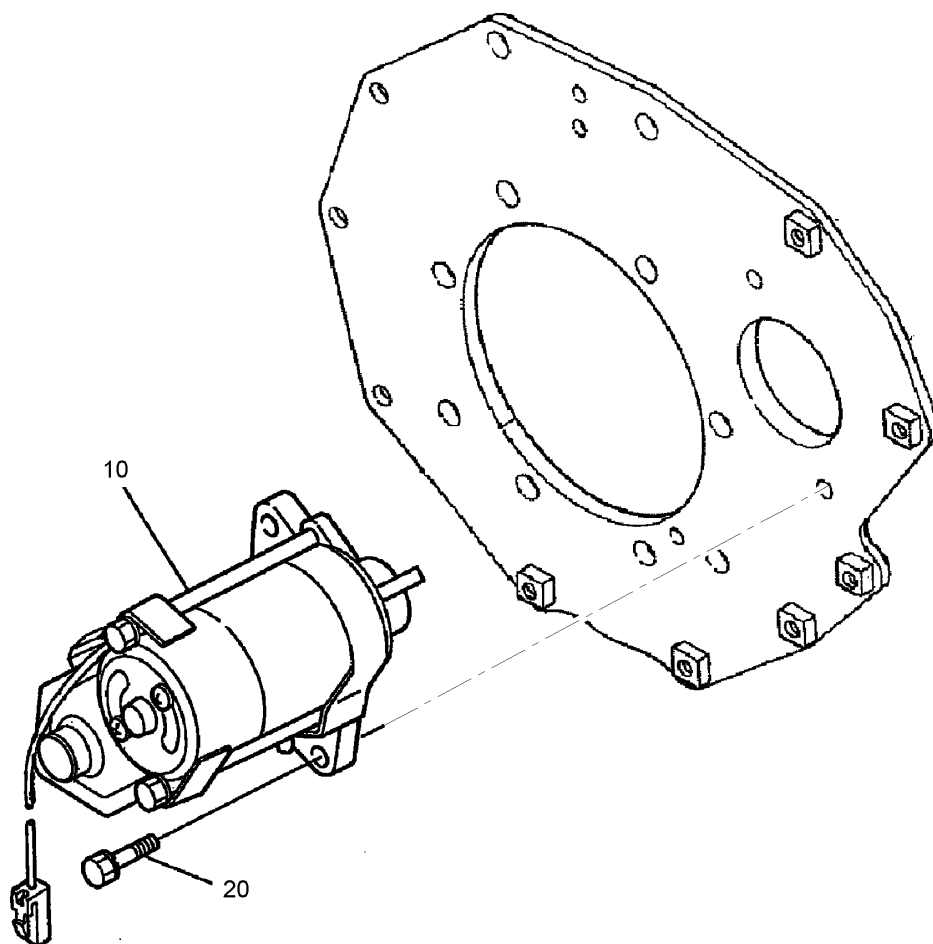 


Starter Assembly

Ref	Part No.	Qty.	Description
10	98-9705	1	Starter ASM
20	98-7697	2	Bolt

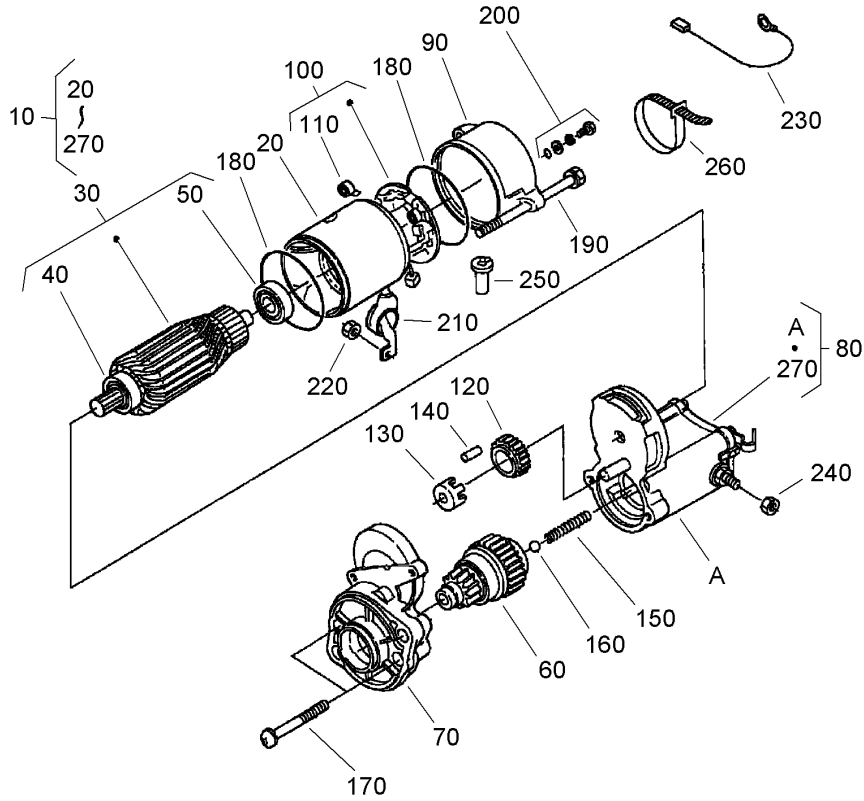 


Starter Assembly No. 98-9705

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
10	98-9705	1	Starter ASM	250	98-7759	1	Pipe-Drain
20	104-8608	1	Yoke ASM	260	98-9712	1	Band-Cover
30	98-7742	1	Armature ASM	270	105-2886	1	Cover ASM
40	98-7744	1	Bearing				
50	98-7743	1	Bearing				
60	99-8373	1	Clutch-Running, Over				
70	99-8374	1	Frame-End, Drive				
80	105-3746	1	Magnetic Switch ASM				
90	98-7748	1	Frame-End				
100	98-7749	1	Brush Holder ASM				
110	98-7750	4	Spring-Brush				
120	98-7751	1	Gear				
130	98-7752	1	Retainer				
140	98-7753	5	Roller				
150	98-7754	1	Spring				
160	98-7755	1	Ball				
170	98-7756	2	Bolt				
180	98-7757	2	O-Ring				
190	100-9240	2	Bolt				
200	98-7758	2	Bolt ASM				
210	99-8375	1	Cover				
220	99-8371	1	Nut-Hex				
230	98-9711	1	Cord-Solenoid, Stop				
240	99-8376	1	Nut-Hex				

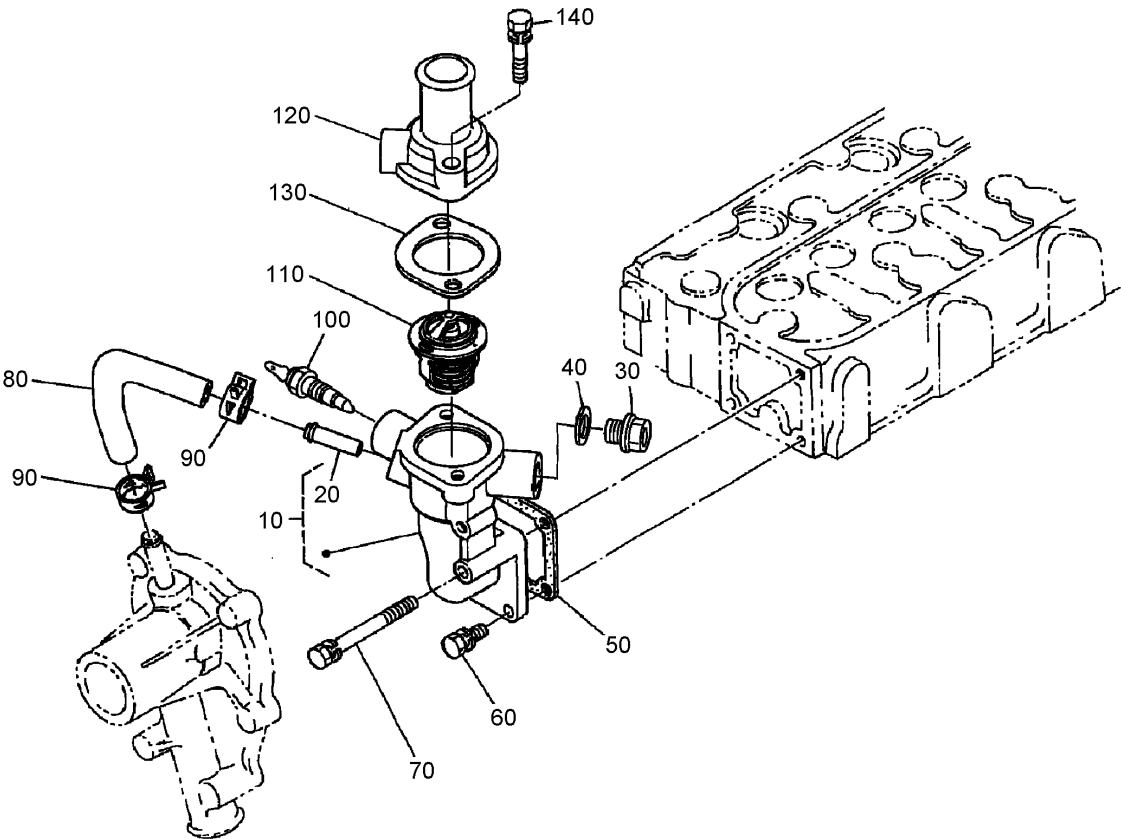 


Water Flange and Thermostat Assembly

Ref	Part No.	Qty.	Description				
10	98-9713	1	Water Flange ASM				
20	98-9580	1	Pipe-Return, Water				
30	105-3747	1	Plug				
40	99-3583	1	Packing				
50	98-9638	1	Gasket-Flange, Water				
60	98-7692	3	Bolt				
70	98-9356	1	Bolt				
80	98-9578	1	Pipe-Return, Water				
90	98-9579	2	Band-Pipe				
100	98-9719	1	Thermoswitch				
110	98-7778	1	Thermostat ASM				
120	98-9471	1	Cover-Thermostat				
130	105-3748	1	Gasket-Thermostat				
140	98-7777	2	Bolt				

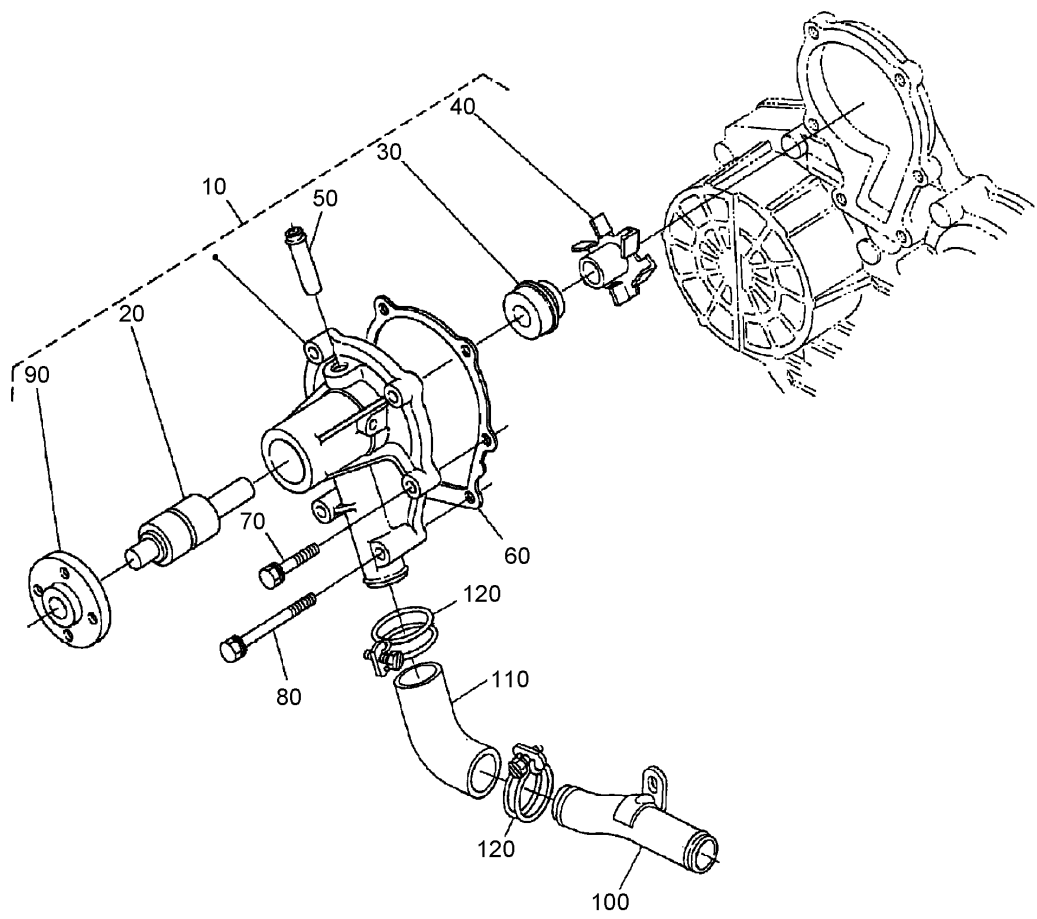 


Water Pump and Pipe Assembly

Ref	Part No.	Qty.	Description				
10	107-9089	1	Water Pump ASM				
20	99-3517	1	Bearing-Pump, Water				
30	105-3750	1	Mechanical Seal ASM				
40	99-3519	1	Impeller-Pump, Water				
50	98-9577	1	Pipe-Return, Water				
60	99-3454	1	Gasket-Pump, Water				
70	98-9353	4	Bolt				
80	107-9090	2	Bolt				
90	99-3516	4	Flange-Pump, Water				
100	98-9716	1	Pipe-Water				
110	107-9091	1	Pipe-Water				
120	98-9717	2	Clamp				

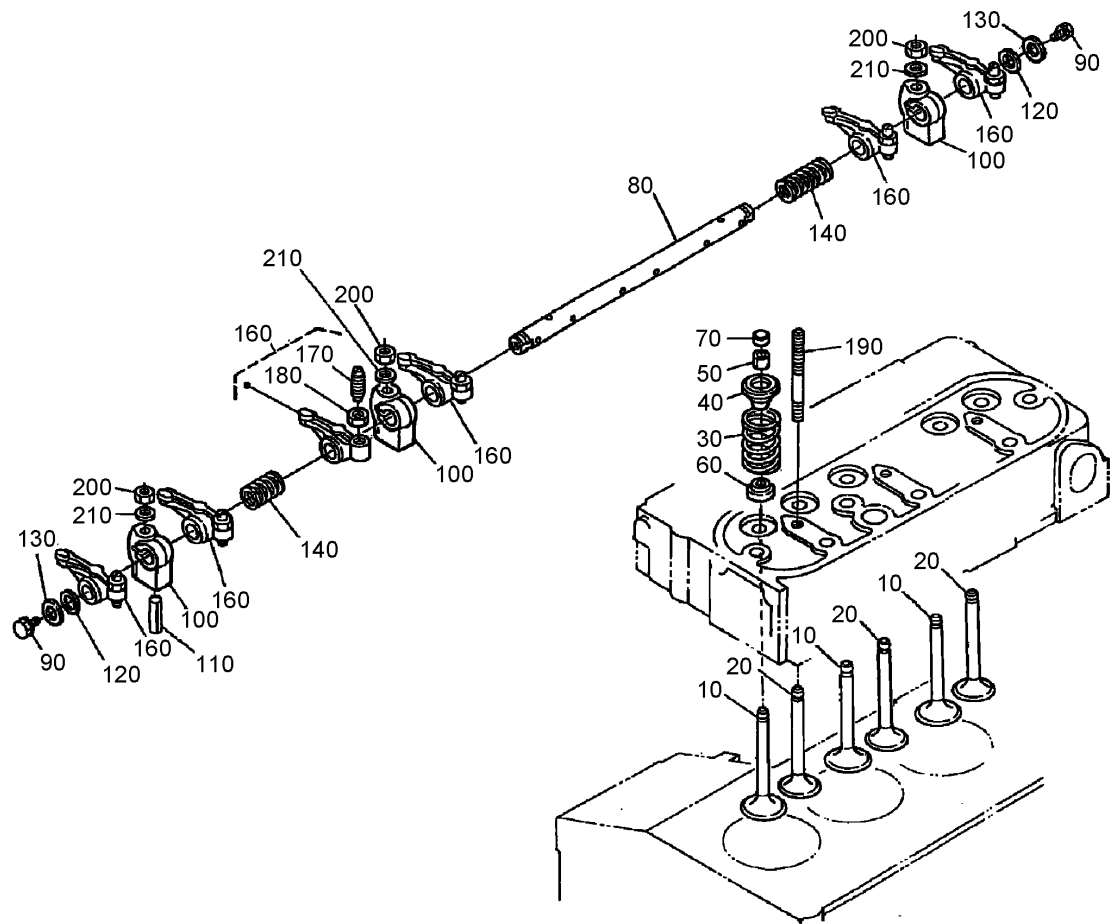 


Valve and Rocker Arm Assembly

Ref	Part No.	Qty.	Description				
10	98-9494	3	Valve-Inlet				
20	98-9495	3	Valve-Exhaust				
30	98-9648	6	Spring-Valve				
40	107-9092	6	Retainer-Spring				
50	98-9390	6	Collet-Set, Valve Spring				
60	99-8385	6	Seat-Stem, Valve				
70	98-9497	6	Cap-Valve				
80	105-3790	1	R-Arm Shaft ASM				
90	100-9265	2	Bolt				
100	98-9505	3	Bracket-Arm, Rocker				
110	105-3758	1	Pin-Spring				
120	98-9507	2	Washer-Shaft, R-Arm				
130	3256-1	2	Washer-Flat				
140	98-9504	2	Spring-Arm, Rocker				
160	98-9501	6	Rocker Arm ASM				
170	98-9502	6	Screw-Adjusting				
180	98-9503	6	Nut				
190	98-9506	3	Stud				
200	98-9393	3	Nut				
210	98-9385	3	Washer-Flat				

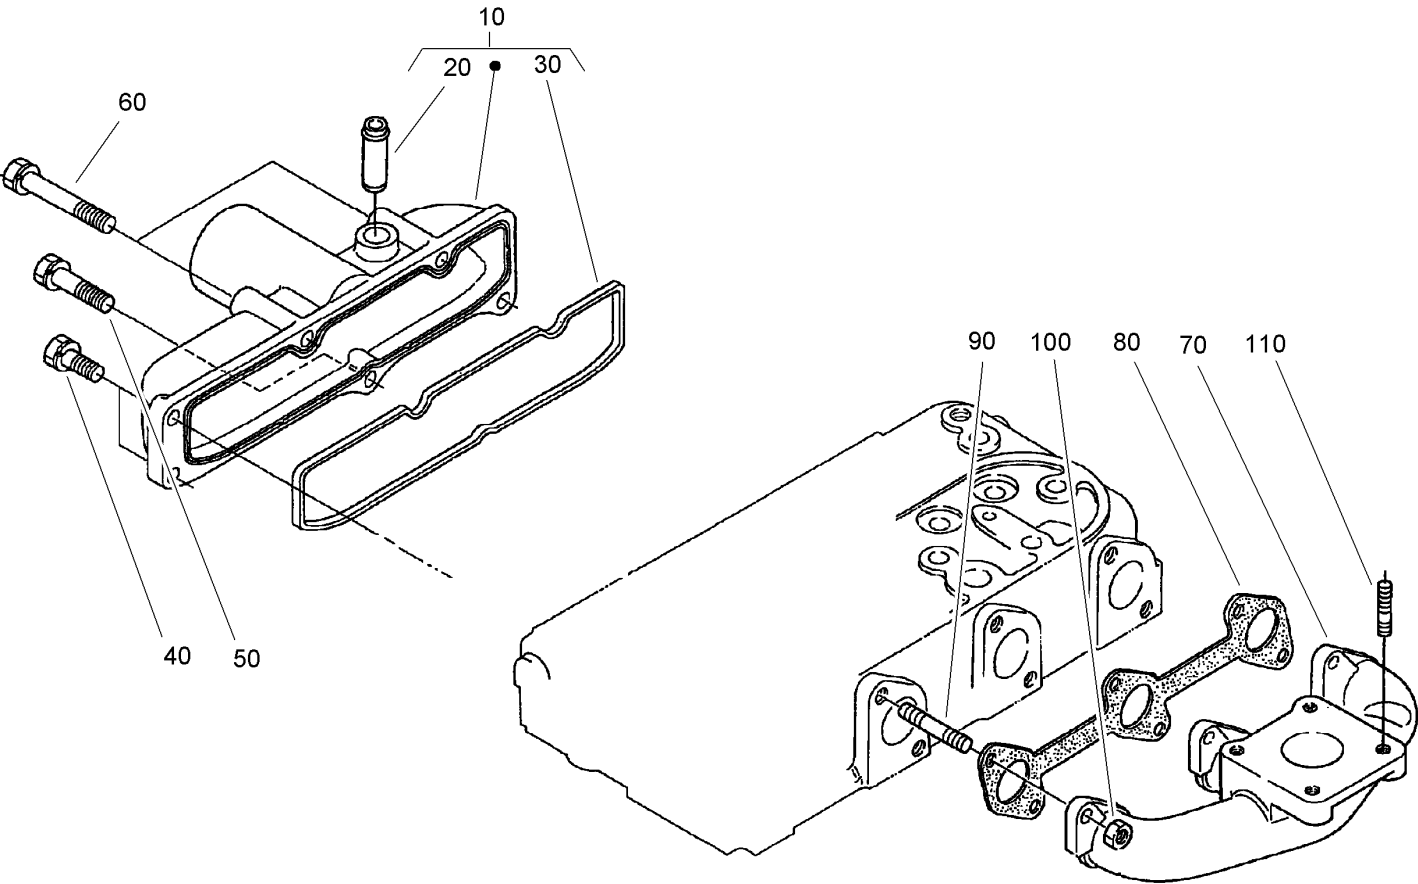 


Inlet Manifold Assembly

Ref	Part No.	Qty.	Description				
10	108-6577	1	Inlet Manifold ASM				
20	98-9492	1	Joint-Pipe, Breather				
30	98-9609	1	Gasket				
40	98-7605	3	Bolt				
50	98-9353	1	Bolt				
60	105-3797	2	Bolt				
70	107-9093	1	Manifold-Exhaust				
80	98-9610	1	Gasket				
90	98-9588	6	Stud				
100	98-9665	6	Nut				
110	98-7769	4	Stud				

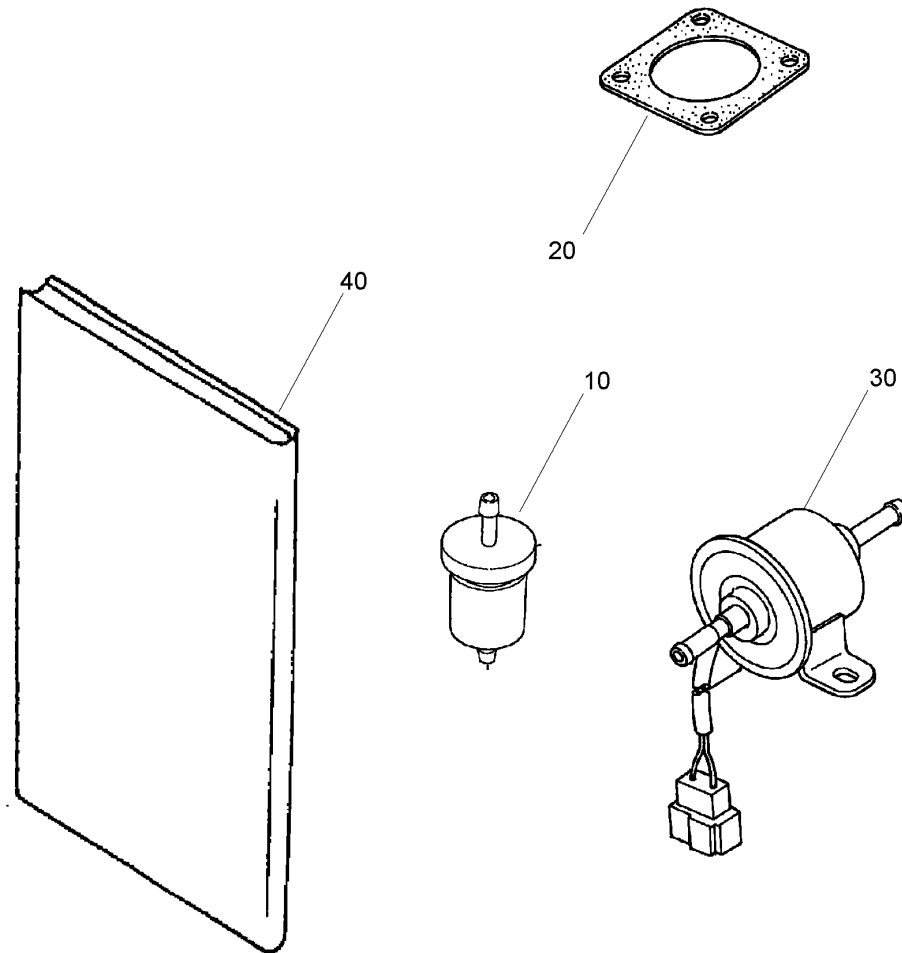 

Fuel Filter and Pump, Muffler Gasket and Engine Operator Manual

Ref	Part No.	Qty.	Description
10	98-7612	1	Filter-Fuel
20	99-8343	1	Gasket-Muffler
30	107-0122	1	Pump-Fuel, Electric
40	99-8954	1	Manual-Kubota

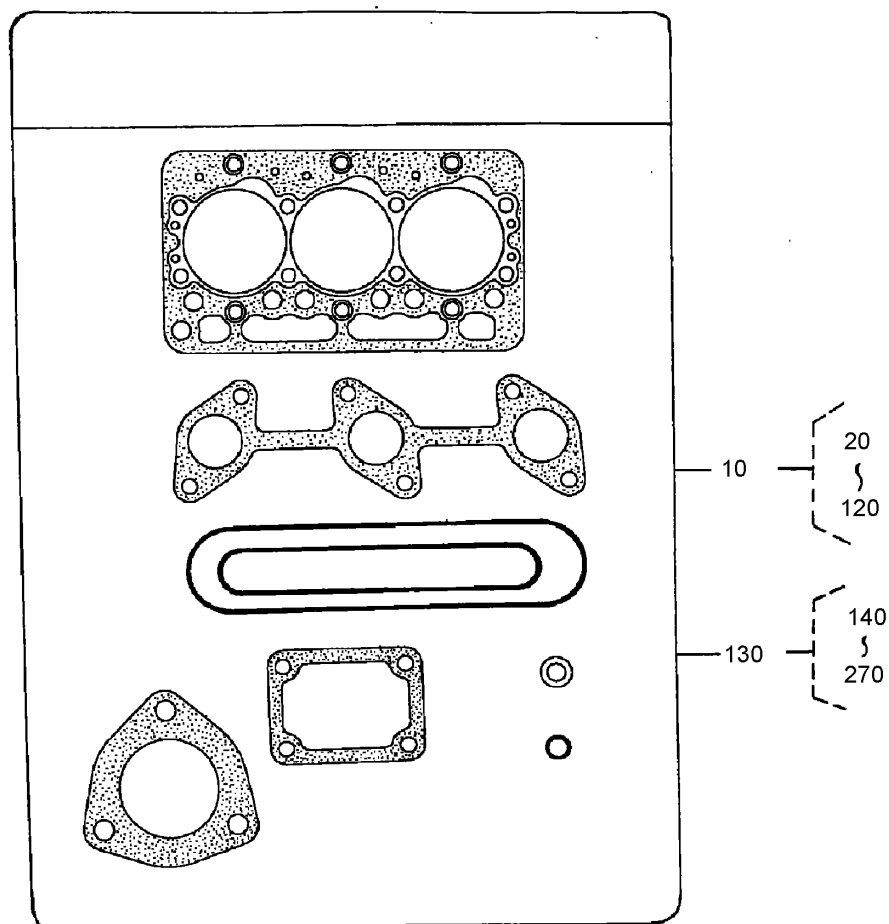 

Gasket Assembly

Ref	Part No.	Qty.	Description
10	107-7848	1	Upper Gasket Kit
130	107-9095	1	Lower Gasket Kit

Attachments and Accessories

For 30345 - Groundsmaster 3280-D 4-Wheel Drive

Product Name	Model/Part
Premium Engine Oil, 10w30 (Drum)	108-1179
Premium Engine Oil, 10w30 (Pail)	108-1180
Premium Engine Oil, 15w40 (Drum)	108-1181
Premium Engine Oil, 15w40 (Pail)	108-1182
Premium Transmission/Hydraulic Tractor Fluid (Drum)	108-1183
Premium Transmission/Hydraulic Tractor Fluid (Pail)	108-1184
Premium All Season Gear Lube (Pail)	108-1187
Premium All Purpose Grease	108-1190
Premium All Season Gear Lube (Quart)	108-1590
Wheel	108-6563
Wheel And Tire ASM (Wide Tire Option)	108-6598
65 lb. Weight Kit	108-9682
Armrest Adapter Kit	108-9687
Wheel Weight Kit	11-0440
Auxiliary Valve Kit	110-5670
Implement Flow Control Kit	110-5699
Rear Axle Skid Plate Kit	110-9694
Tire	231-95
Rear Weight Kit	24-5780
V-Plow Mounting Kit	30311
Mechanical Seat Suspension Kit	30312
Pneumatic Seat Suspension Kit	30313
15 Cubic Foot Bagger Kit	30356
60 Inch Blower Kit	30357
Hardtop Sunshade	30359
60 Inch Side Discharge Mower	30366
62 Inch Rear Discharge Mower	30367
72 Inch Side Discharge Mower	30368
72 Inch Rear Discharge Mower	30369
62 Inch Guardian Recycler Mower	30376
72 Inch Guardian Recycler Mower	30379
Auxiliary Power Unit	30382
Cab ASM	30391
Standard Seat Kit	30398
52 Inch Blower Kit	30502
52 Inch Side Discharge Mower	30555
Arm Rest Kit	30707
48 Inch V-Plow	30750
Debris Blower	30823
Tire	69-9880
Spark Arrestor Screen	75-6880
Tire Chains (23 x 9.50-12)	82531
Drive Shaft Kit	92-9075

NOTES

NOTES

