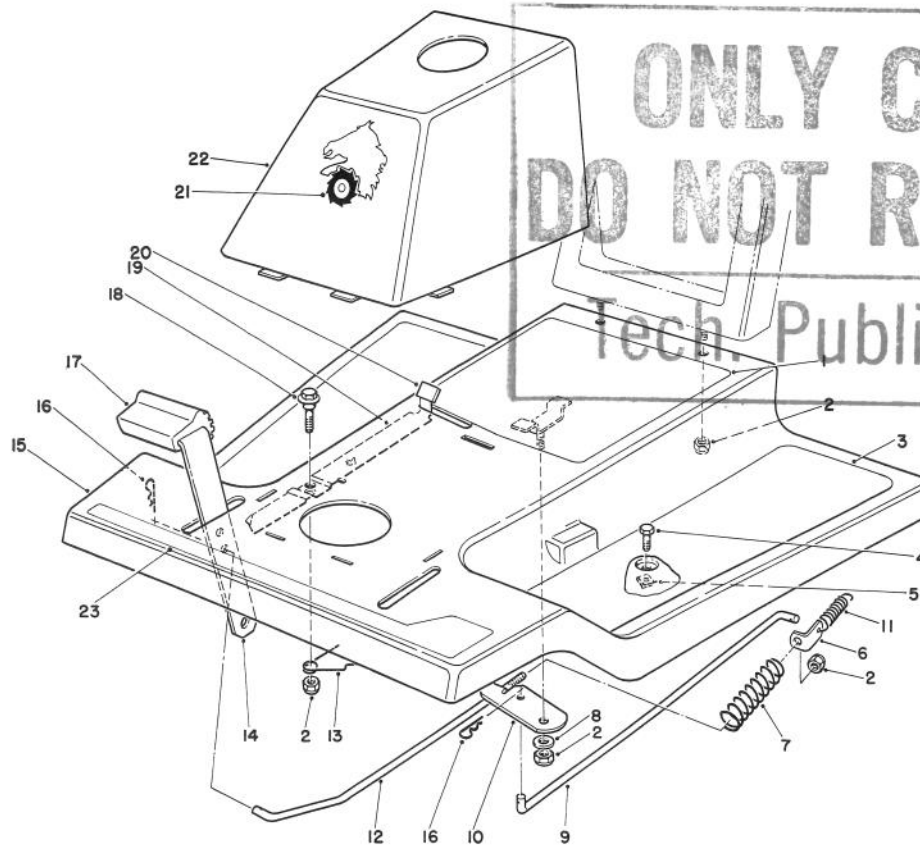


TORO®

MODEL NO. 56132-1000001 & UP

**PARTS
CATALOG****WHEEL HORSE®
8-25 RECYCLER® RIDING MOWER**


C-0727

FRONT BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-1620	Decal - Instruction	1
2	3296-29	Nut - Lock	5
3	44-7030	Tread - Foot Rest	2
4	32104-110	Screw - Cap Hex. Hd.	4
5	3290-347	Nut - U-Type	4
6	67-1590	Bracket - Brake Return	1
7	67-1430	Spring - Compression	1
8	26-9530	Washer - Pivot	1
9	67-1340	Rod - Brake, Transmission	1
10	67-1330	Lever - Brake, Bellcrank	1
11	67-1450	Spring - Extension	1
12	67-1350	Rod - Front, Brake	1

Ref. No.	Part No.	Description	No. Used
13	19-1970	Spring - Brake, Parking	1
14	67-1130	Pedal - Brake & Clutch	2
15	67-1070	Body W.A. - Front	1
16	3290-250	Pin - Hair, Cotter	2
17	65-2920	Pad - Pedal	2
18	19-1470	Bolt - Shoulder	1
19	19-1610	Lever - Brake, Parking	1
20	19-2200	Tip - Brake, Parking	1
21	76-3870	Decal	1
22	55-7102	Tower (Incl. Ref. #21)	1
23	82-6260	Decal - Recycler	1

TPS

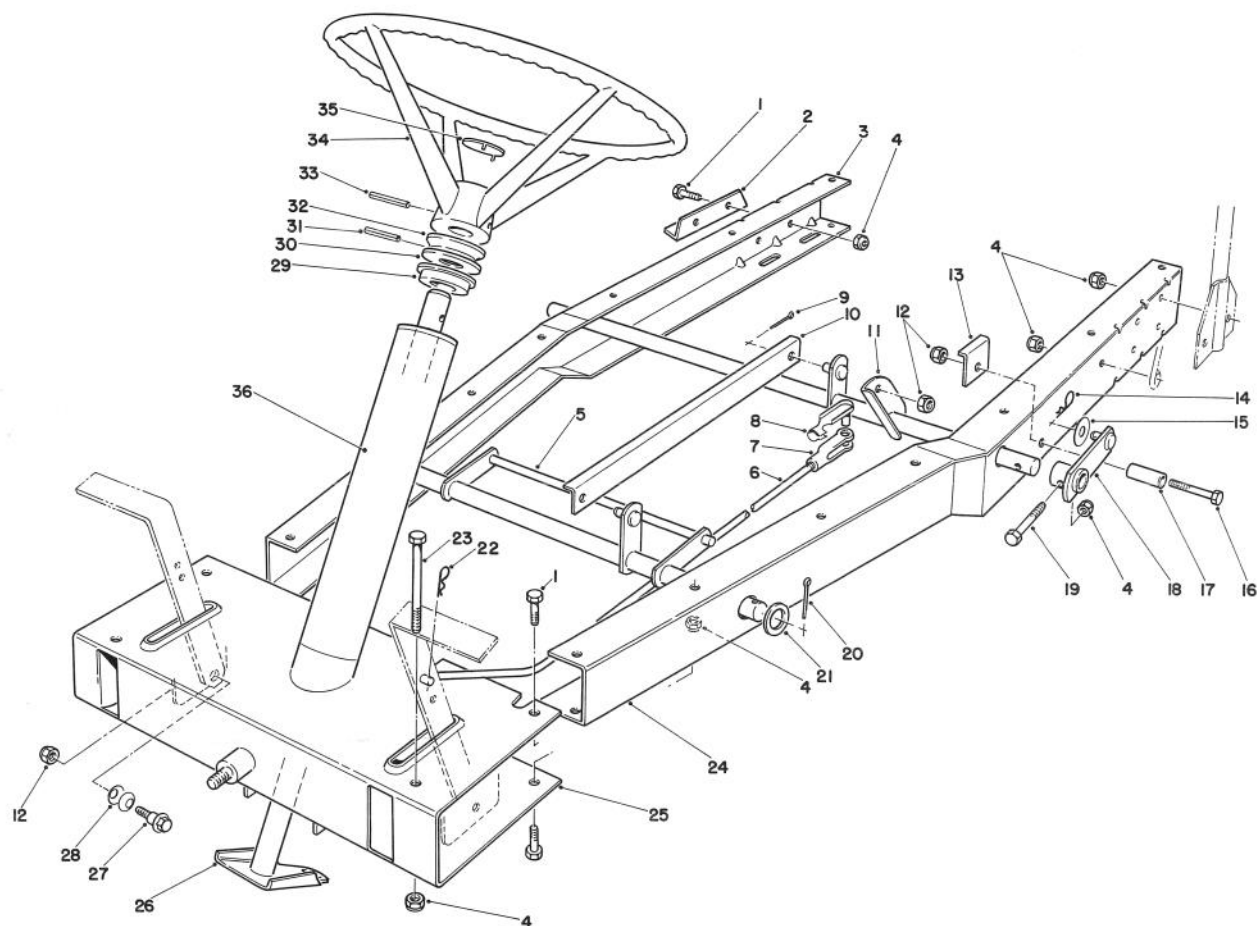


C-0005

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-3	Screw - Cap Hex. Hd.	6
2	44-7140	Mount - Bearing, Axle	1
3	67-0520	Channel - R.H.	1
4	3296-29	Nut - Lock	16
5	67-0010	Lift W.A. - Front, Deck	1
6	67-0430	Rod - Clutch	1
7	282-27	Clevis	1
8	67-1530	Assembly - Pin, Clevis	1
9	3272-6	Pin - Cotter	2
10	67-0090	Bracket - Link, H.O.C.	1
11	67-0050	Tube W.A. - Support, Rear	1
12	3296-39	Nut - Lock	5
13	67-1510	Brace - Stop, Deck	2
14	3290-355	Pin - Hair, Cotter	2
15	67-1460	Washer - Flat	2
16	323-10	Screw - Cap Hex. Hd.	2
17	68-8380	Spacer - Stop, Deck	2
18	67-0300	Lever W.A. - H.O.C.	2
19	46-2511	Bolt - Mounting, Axle	2

Ref. No.	Part No.	Description	No. Used
20	3272-23	Pin - Cotter	2
21	3256-29	Washer - Flat	2
22	3290-250	Pin - Hair, Cotter	1
23	322-14	Screw - Cap Hex. Hd.	2
24	67-0530	Channel - L.H.	1
25	67-0450	Frame W.A. - Front	1
26	67-0830	Shaft W.A. - Steering	1
27	67-0870	Bolt - Shoulder	2
28	3290-413	Washer - Belleville	4
29	67-0850	Bushing - Steering	2
30	67-0860	Washer - Steering	1
31	32121-32	Pin - Roll	1
32	67-0440	Spacer - Steering	1
33	32121-78	Pin - Roll	1
34	49-3240	Wheel - Steering	1
35	66-6910	Insert - Wheel, Steering	1
36	76-4080	Decal	1
*	13-6049	Kit - Loose parts	1


*Not Illustrated

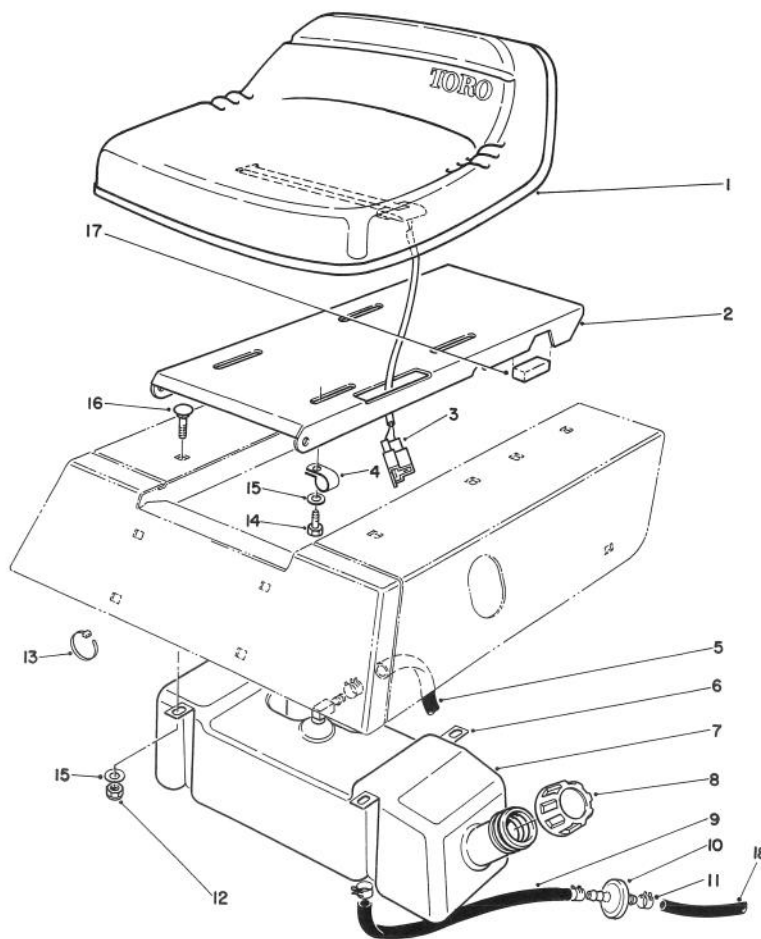

C-0002

SEAT & GAS TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	66-6680	Seat	1	10	56-6360	Filter	1
2	67-1241	Base - Seat	1	11	2412-98	Clamp - Hose	5
3	38-1420	Switch - Seat	1	12	3296-29	Nut - Lock	4
4	18-2970	R-Clamp	1	13	3290-378	Tie - Cable	1
5	47-2986	Hose - Gas	1	14	322-3	Screw - Cap Hex. Hd.	4
6	67-0950	Strap - Tank, Gas	2	15	3256-23	Washer - Flat	8
7	80-4580	Tank - Gas	1	16	3230-20	Bolt - Carriage	6
8	55-3576	Assembly - Cap, Gas	1	17	66-6920	Pad - Isolator	2
9	47-2983	Hose - Gas	1	18	47-2964	Hose - Gas	1

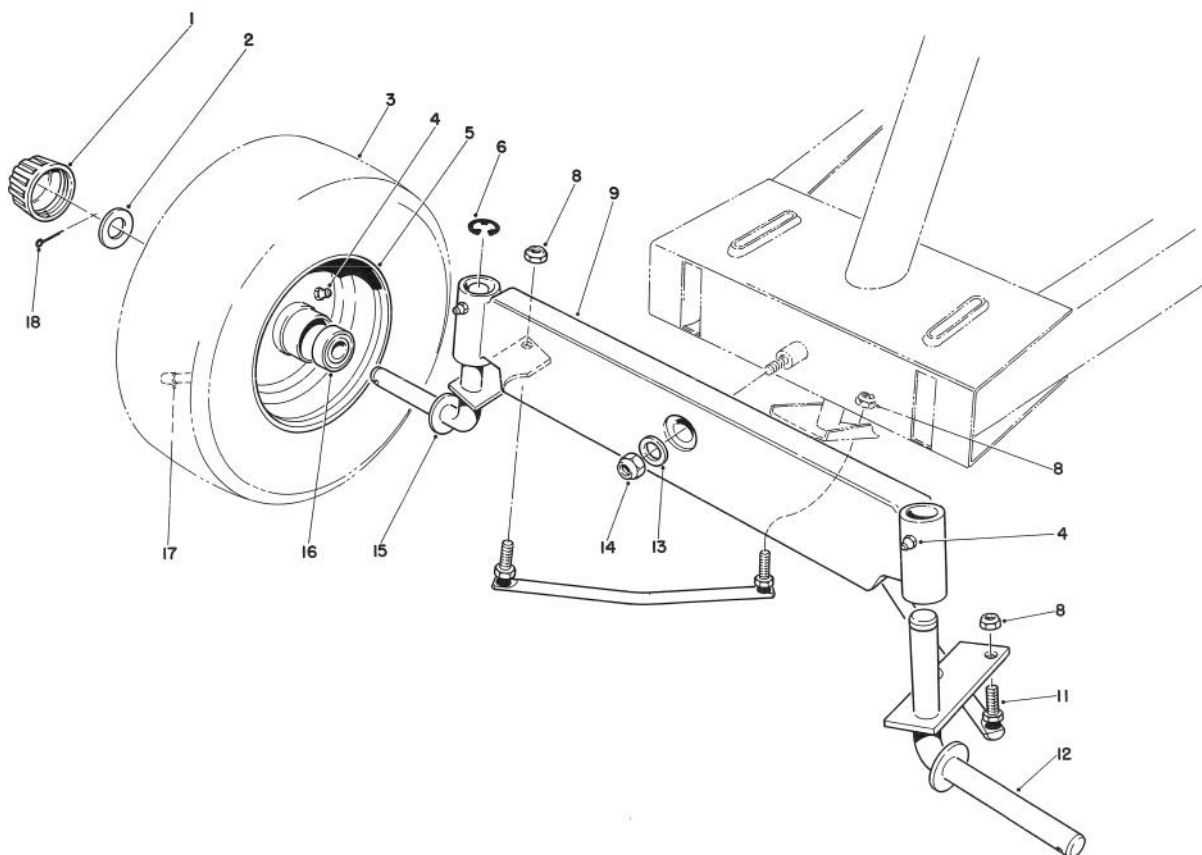


C-0003A

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-9780	Cap - Hub	2
2	28-2480	Washer - Flat	2
3	231-116	Tire	2
4	302-5	Fitting - Grease	4
5	217-80	Rim	2
6	32151-48	Ring - Retaining	2
8	3296-4	Nut - Lock	4
9	67-0990	Axle - Front	1

Ref. No.	Part No.	Description	No. Used
11	67-0880	Assembly - Tie Rod	2
12	67-0810	Spindle - L.H.	1
13	3256-26	Washer - Flat	1
14	3296-25	Nut - Lock	1
15	67-0800	Spindle - R.H.	1
16	251-210	Bearing	4
17	232-27	Valve Stem w/Cap	2
18	3272-12	Pin - Cotter	2

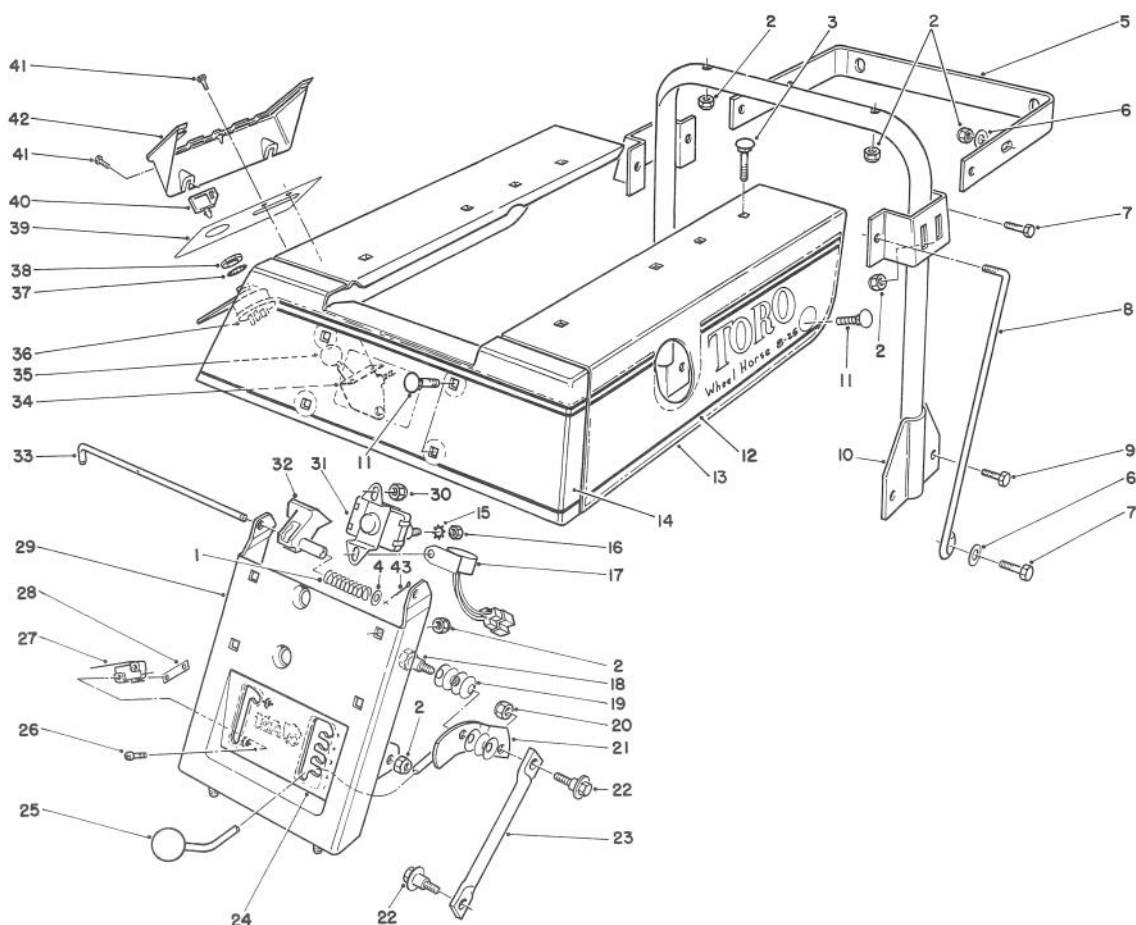


C-0007

REAR BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-8310	Spring - Prop, Seat	1
2	3296-29	Nut - Lock	11
3	3230-3	Bolt - Carriage	2
4	3256-22	Washer - Flat	1
5	67-1500	Bar - Stand	1
6	3256-23	Washer - Flat	4
7	322-5	Screw - Cap Hex. Hd.	4
8	67-1480	Brace - Support, Seat	2
9	322-3	Screw - Cap Hex. Hd.	4
10	67-0790	Support W.A. - Seat	1
11	3230-20	Bolt - Carriage	6
12	76-3840	Decal - Toro L.H.	1
*	76-3880	Decal - Toro R.H.	1
13	67-0231	Body W.A. - Rear	1
14	76-3850	Decal - Front	1
15	3255-7	Washer - Lock, Int. Tooth	2
16	3218-1	Nut - Jam	2
17	28-7890	Module - Interlock	1
18	28-0540	Bolt - Shoulder	1
19	3290-413	Washer - Belleville	7
20	3296-39	Nut - Lock	1
21	67-0270	Handle W.A. - H.O.C.	1
22	67-0870	Bolt - Shoulder	2

Ref. No.	Part No.	Description	No. Used
23	67-0080	Link - H.O.C.	1
24	76-3920	Decal - H.O.C. & Deck Engagement	1
25	233-22	Knob	1
26	3290-313	Screw - Pan Head	2
27	40-8200	Switch - Micro	1
28	3290-354	Nut - Double	1
29	67-1090	Support W.A. - Seat	1
30	3296-42	Nut - Lock	2
31	47-1910	Solenoid	1
32	80-4330	Prop - Seat	1
33	80-4550	Rod - Base, Seat	1
34	66-6640	Control - Throttle	1
35	233-59	Knob	1
36	23-0660	Switch - Ignition (Incl. Ref. #37 & 38)	1
37	3254-5	Washer - Lock, Int. Tooth	1
38	218-461	Nut - Hex.	1
39	67-1270	Decal - Panel, Control	1
40	63-8360	Key	2
41	32144-42	Screw - Hex. Hd. Tapping	4
42	67-1030	Cover - Panel, Control	1
43	3274-4	Pin - Cotter	1

*Not Illustrated

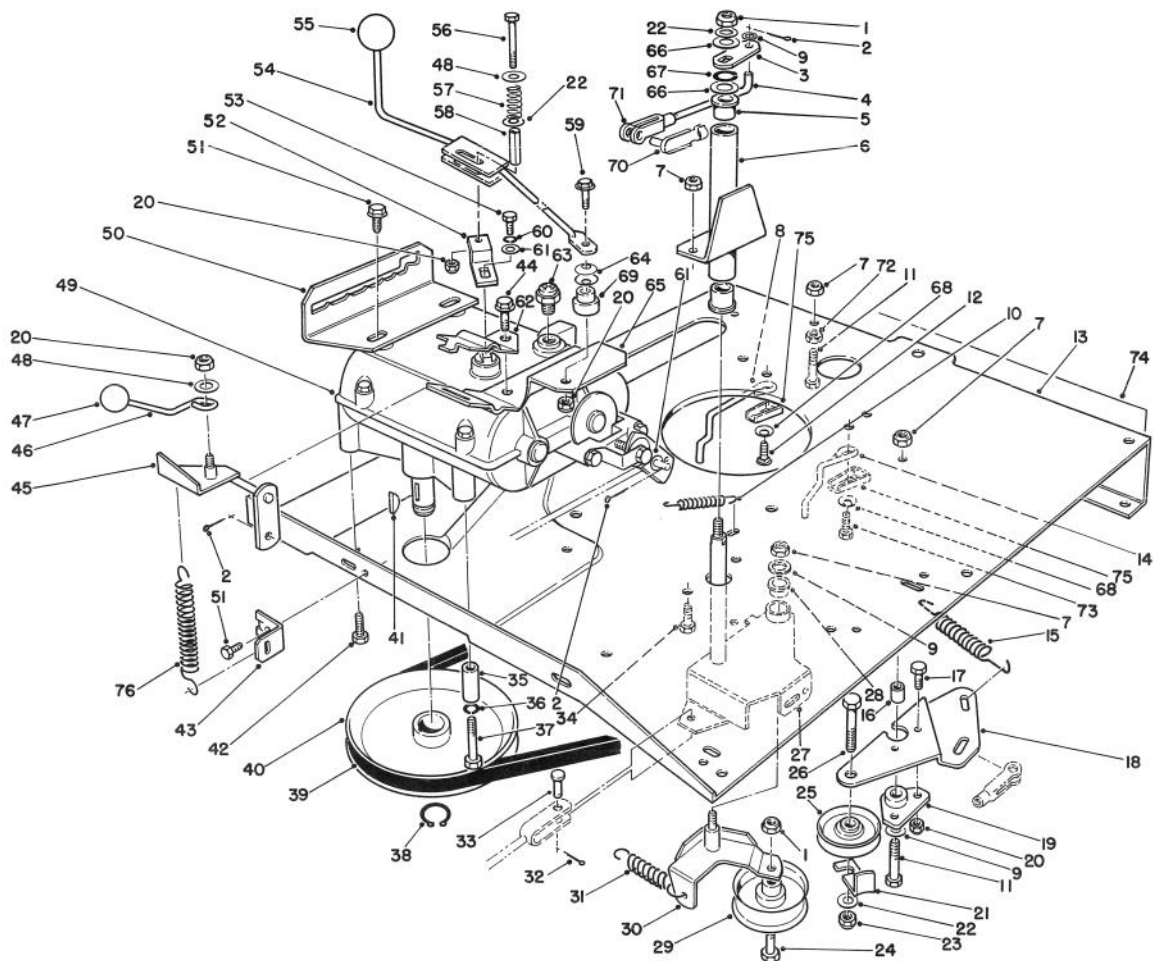


C-0009

TRANSMISSION & LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	2
2	3272-6	Pin - Cotter	1
3	67-0690	Flat - Deck Engage	1
4	68-8370	Link - Deck Engage	1
5	256-90	Bushing	3
6	67-0540	Tube W.A. - Pivot (Incl. Ref. #5)	1
7	3296-29	Nut - Lock	8
8	67-0930	Guide R.H. - Belt, Engine	1
9	3256-23	Washer - Flat	3
10	26-6700	Spring - Return, Brake	1
11	322-6	Screw - Cap Hex. Hd.	1
12	3230-2	Bolt - Carriage	1
13	76-4090	Plate - Engine	1
14	67-0940	Guide L.H. - Belt, Engine	1
15	68-9950	Spring - Traction	1
16	67-0410	Spacer - Pivot	1
17	321-4	Screw - Cap Hex. Hd.	2
18	67-0420	Plate - Mount, Idler	1
19	67-0400	Mount - Pivot	1
20	3296-42	Nut - Lock	5
21	12-9020	Retainer - Belt	1
22	3256-24	Washer - Flat	3
23	3296-59	Nut - Lock	1


Ref. No.	Part No.	Description	No. Used
24	323-10	Screw - Cap Hex. Hd.	1
25	12-5820	Pulley - Idler, Traction	1
26	323-8	Screw - Cap Hex. Hd.	1
27	67-0360	Bracket - Arm, Idler (Incl. Ref. #28)	1
28	256-155	Bushing	1
29	56-9870	Pulley - Idler, Deck	1
30	67-0330	Idler - Plate, Mount	1
31	67-9170	Spring	1
32	3274-4	Pin - Cotter	1
33	283-67	Pin - Clevis	1
34	322-3	Screw - Cap Hex. Hd.	2
35	67-0920	Guide - Belt	1
36	3253-4	Washer - Lock	1
37	322-10	Screw - Cap Hex. Hd.	1
38	32120-64	Ring - Retaining	1
39	67-0900	Belt - Traction	1
40	82-6450	Pulley - Transmission	1
41	3257-23	Key	1
42	32140-61	Screw - Sems, Hex. Hd.	3
43	67-0750	Bracket - Mount, Spring	1
44	32144-70	Screw - Hex. Hd. Tapping	1
45	67-0600	Lever W.A. - Deck Engage	1
46	67-0640	Handle - Deck Engage	1

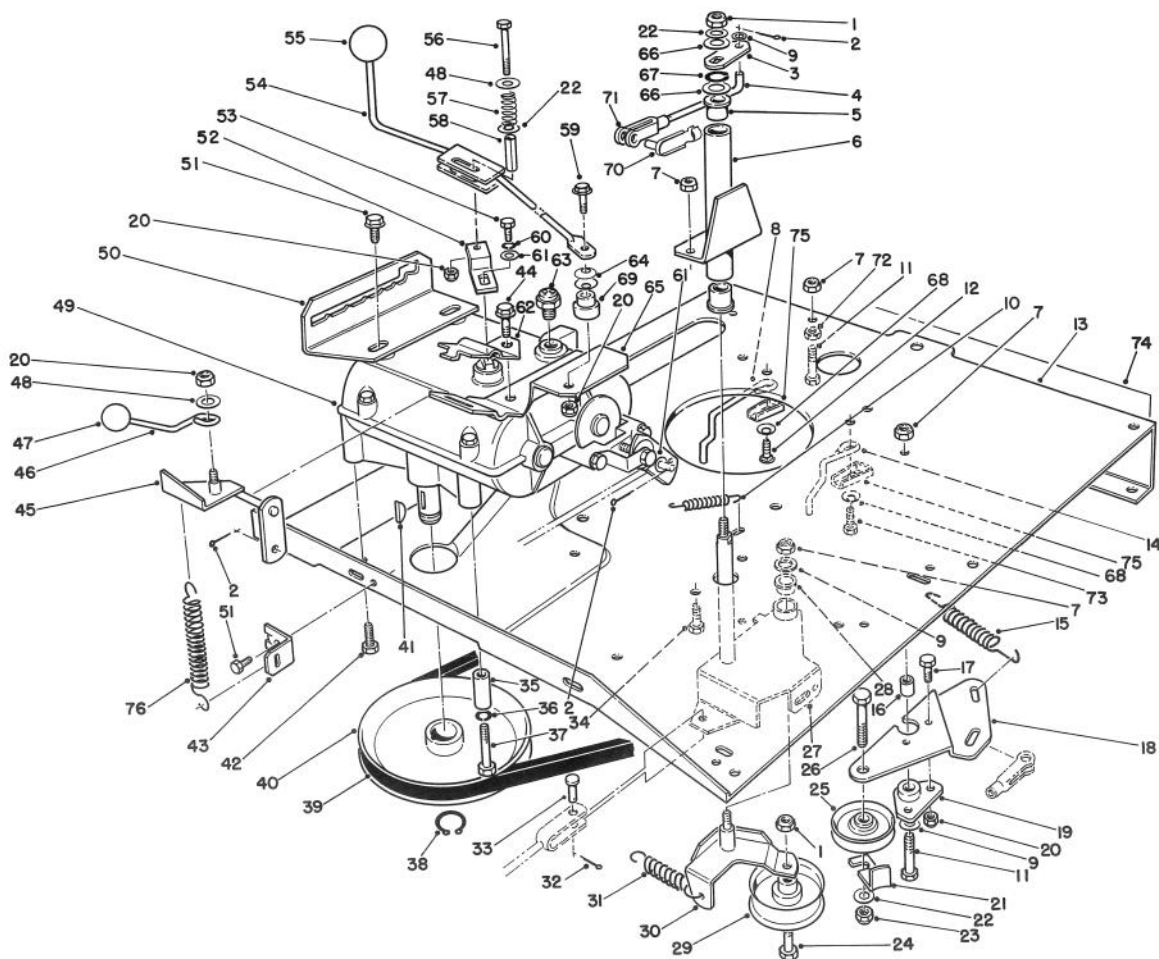

C-0009

TRANSMISSION & LINKAGE ASSEMBLY (CONTINUED)


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
47	233-22	Knob	1	62	67-0670	Bracket - Engage, Deck	1
48	3256-55	Washer - Fender	2	63	28-4250	Switch - Neutral	1
49	67-1400	Transmission	1	64	3290-478	Washer - Belleville	2
50	56-7630	Gate - Shift	1	65	67-0660	Bracket - Mount, Shifter	1
51	32144-14	Screw - Wash. Hd., Tap.	4	66	20-3220	Washer - Flat	2
52	56-7620	Lever - Shift	1	67	32151-62	Ring - Retaining	1
53	329-4	Screw - Cap Hex. Hd.	1	68	3290-456	Washer - Belleville	2
54	76-3940	Lever W.A. - Shift	1	69	76-3970	Spacer - Pivot	1
55	233-48	Knob	1	70	67-1530	Assembly - Pin, Clevis	1
56	321-15	Screw - Cap Hex. Hd.	1	71	282-27	Clevis	1
57	56-7730	Spring	1	72	3218-2	Nut - Jam	1
58	56-7740	Spacer	1	73	32144-26	Screw - Thread Forming	1
59	321-8	Screw - Cap Hex. Hd.	1	74	76-3860	Decal	1
60	3253-3	Washer - Lock	1	75	76-3820	Anchor - Guide, Belt	2
61	3256-22	Washer - Flat	5	76	67-1450	Spring	1

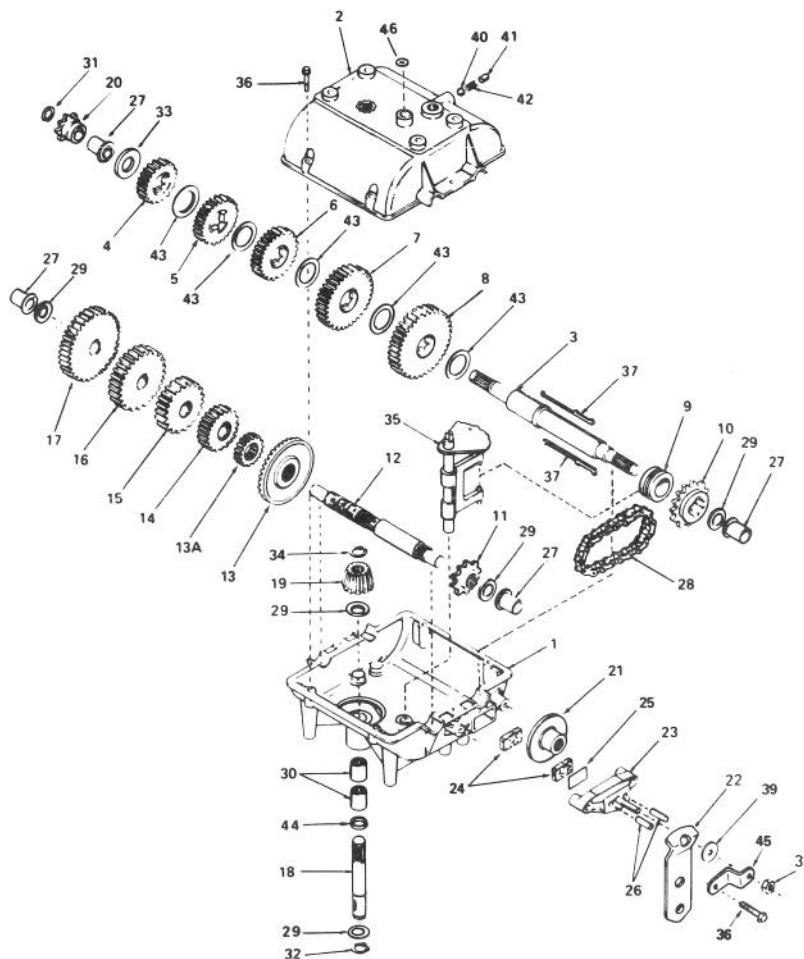

C-0441

TRANSMISSION PEERLESS MODEL 700-025

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	770061	Case - Transmission	1	24	790006	Pad - Brake	2
2	772083	Cover - Transmission	1	25	790007	Plate - Pad, Brake	1
3	776217	Shaft - Output	1	26	786026	Pin - Dowel	2
4	778121A	Gear - Spur (20 Teeth)	1	27	780105A	Bushing - Flange	4
5	778122A	Gear - Spur (22 Teeth)	1	28	786081	Chain - Roller	1
6	778123A	Gear - Spur (25 Teeth)	1			(No. 41 Chain, 24 Links)	
7	778124A	Gear - Spur (30 Teeth)	1	29	780072	Washer - Thrust	5
8	778125	Gear - Spur (35 Teeth)	1	30	780086	Bearing - Needle	2
9	784266	Collar - Shift	1	31	792072	Ring - Retaining	1
10	786083	Sprocket (18 Teeth)	1	32	792035	Ring - Retaining	1
11	786082	Sprocket (9 Teeth)	1	33	780109	Washer	1
12	776134	Shaft - Counter	1	34	788040	Ring - Retaining	1
13	788137A	Gear - Bevel (42 Teeth)	1	35	784267	Assy. Rod & Fork - Shift	1
13A	778136	Gear - Spur (15 Teeth)	1	36	792073	Screw - Thread Forming	8
14	778126A	Gear - Spur (20 Teeth)	1	37	792089A	Key	2
15	778127A	Gear - Spur (25 Teeth)	1	38	792075	Nut - Lock	1
16	778128A	Gear - Spur (28 Teeth)	1	39	792076	Washer	1
17	778129A	Gear - Spur (30 Teeth)	1	40	792077	Ball - Steel	1
18	776135	Shaft - Input	1	41	792078	Screw - Set	1
19	778113A	Bevel - Pinion, Input	1	42	792079	Spring	1
20	786047	Sprocket (8 Teeth)	1	43	780108	Washer - Thrust	5
21	790003	Disk - Brake	1	44	792001	O-Ring	1
22	790008A	Lever - Brake	1	45	786086	Bracket - Lever, Brake	1
23	790025	Holder - Pad, Brake	1	46	788069	Seal - Square Cut	1

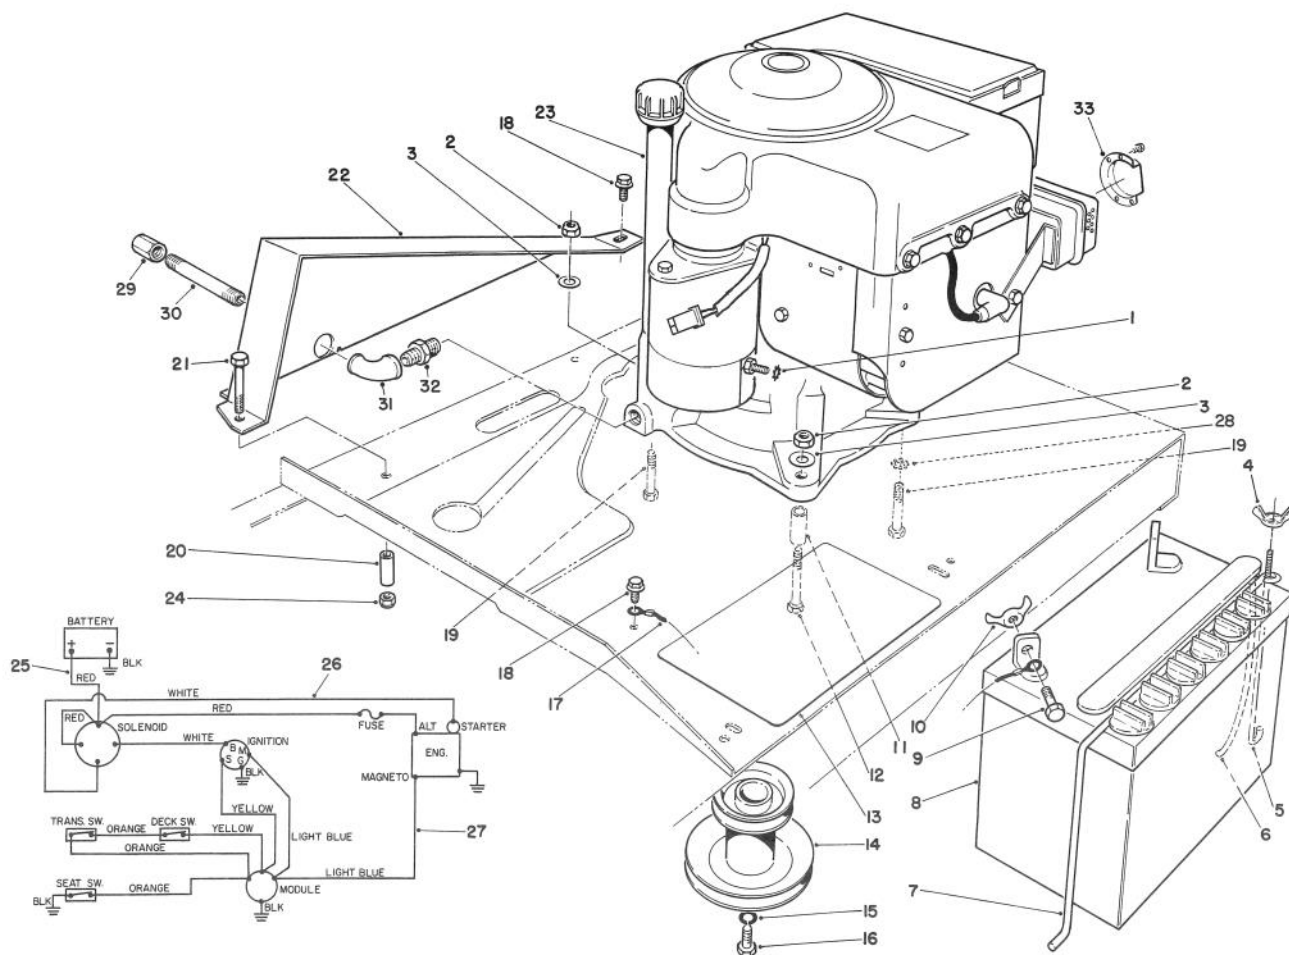


C-0006

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3255-7	Washer - Lock, Int. Tooth	1
2	32153-3	Nut - Lock	4
3	3256-23	Washer - Flat	4
4	32103-14	Nut - Wing	1
5	56-7720	Post - Hold Down, Battery	1
6	56-2540	Tube - Drain	1
7	56-7710	Hold Down - Battery	1
8	80-2600	Battery 12V	1
9	321-4	Screw - Cap Hex. Hd.	2
10	32103-22	Nut - Wing	2
11	80-4560	Spacer	1
12	322-12	Screw - Cap Hex. Hd.	1
13	62-4300	Pad - Anti-Skid	1
14	83-4840	Pulley - Engine	1
15	3256-25	Washer - Flat	1
16	62-3760	Screw - Cap Hex. Hd.	1
17	56-7870	Assembly - Wire Battery to Ground	1

Ref. No.	Part No.	Description	No. Used
18	32144-14	Screw - Self Tapping	2
19	322-7	Screw - Cap Hex. Hd.	3
20	67-0920	Guide - Belt	1
21	322-10	Screw - Cap Hex. Hd.	1
22	67-0962	Guard - Chain	1
23		Engine - 8 H.P. B & S	1
24	3296-29	Nut - Lock	1
25	67-1170	Assembly - Wire Battery to Solenoid	1
26	67-1160	Assembly - Wire Solenoid to Starter	1
27	82-6740	Harness - Wire	1
28	3255-8	Washer - Lock	4
29	288-2	Cap - Pipe	1
30	289-34	Nipple - Pipe	1
31	2811-17	Elbow - Street	1
32	2812-1	Reducer	1
33	2210-319	Deflector - Muffler	1

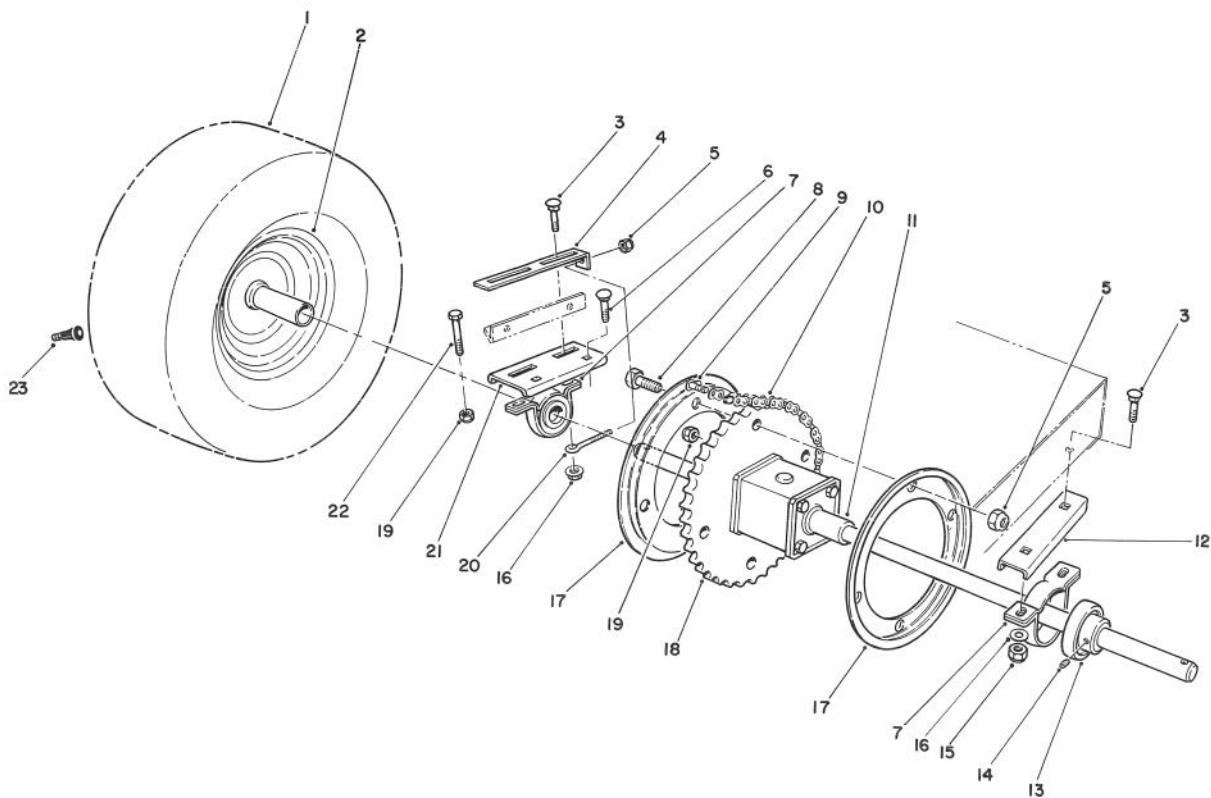


C-0008

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	231-115	Tire	2
2	44-9760	Rim	2
3	3231-4	Bolt - Carriage	2
4	61-9990	Plate - Adjusting	1
5	3296-42	Nut - Lock	5
6	3231-25	Bolt - Carriage	4
7	47-1480	Mount - Bearing	2
8	321-4	Screw - Cap Hex. Hd.	4
9	2710-11	Link - Connecting	1
10	67-0910	Chain	1
		(Incl. Ref. #9)	1
11	56-9960	Differential	1
12	66-6630	Support L.H.	1

Ref. No.	Part No.	Description	No. Used
13	47-1490	Bearing	2
		(Incl. Ref. #14)	
14	3245-32	Screw - Set	4
15	3296-39	Nut - Lock	6
16	3256-24	Washer - Flat	4
17	76-1580	Guide - Chain	2
18	76-4010	Sprocket	1
19	3296-29	Nut - Lock	6
20	61-9980	Screw - Adjusting	1
21	66-6620	Support R.H.	1
22	46-2511	Bolt - Axle	2
23	232-27	Valve Stem w/Cap	2
*	11-0410	Kit - Tire Chains (Optional)	1

*Not Illustrated

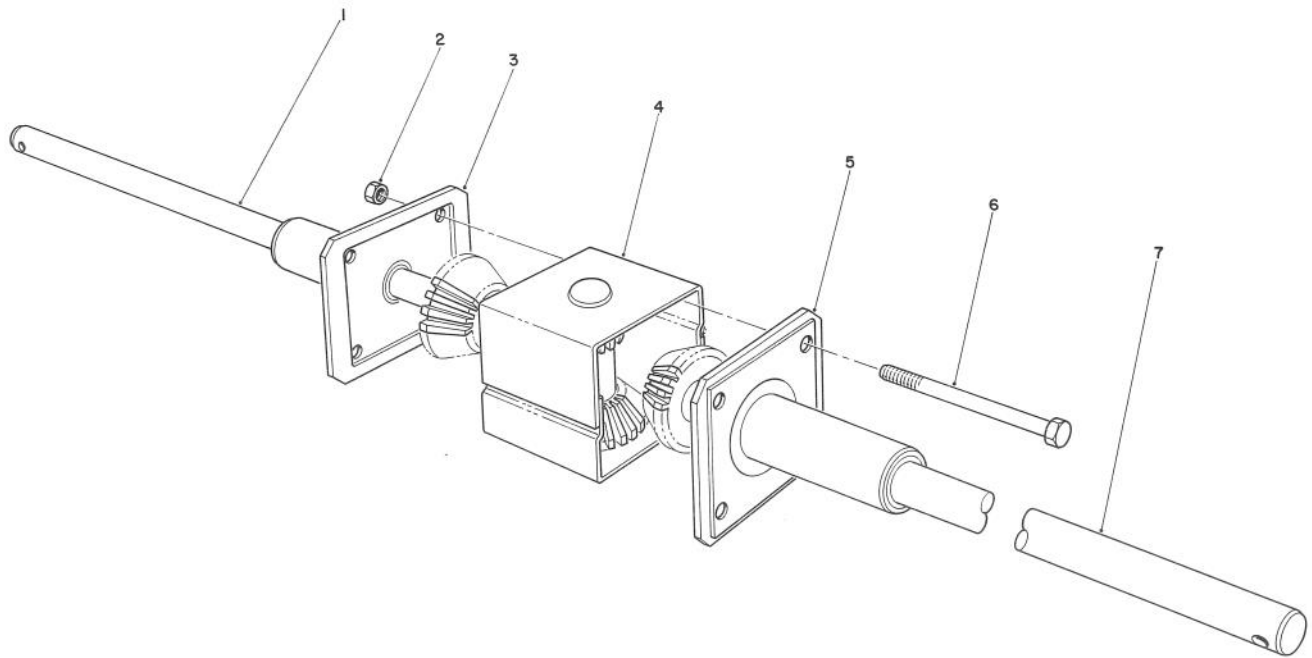


C-0010

DIFFERENTIAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55-7762	Axle - R.H.	1
2	32152-1	Nut - Lock	4
3	55-7770	Cap - End, R.H.	1
4	55-7780	Case - Gear, Transfer	1

Ref. No.	Part No.	Description	No. Used
5	55-7771	Cap - End, L.H.	1
6	322-22	Screw - Cap Hex. Hd.	4
7	55-7763	Axle - L.H.	1
*	56-9960	Differential - Complete	1

*Not Illustrated

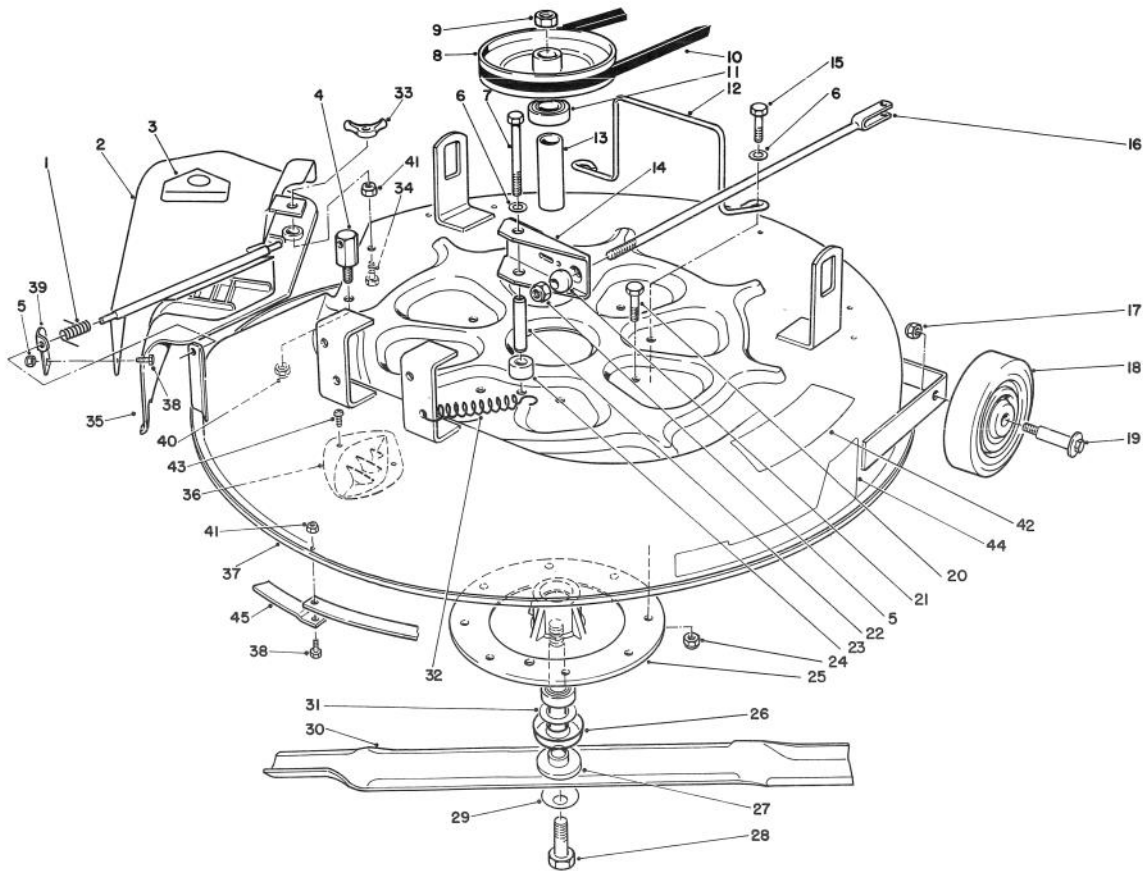


C-0728

CUTTING UNIT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-8010	Spring	1
2	67-1151	Deflector (Incl. Ref. #3)	1
3	54-9220	Decal - Danger	1
4	67-0140	Post - Pivot	1
5	3296-8	Nut - Lock	2
6	3256-23	Washer - Lock	3
7	322-22	Screw - Cap Hex. Hd.	1
8	80-4460	Pulley - Deck	1
9	3219-6	Nut - Hex.	1
10	67-1390	V-Belt	1
11	38-7820	Bearing - Ball	2
12	80-4520	Guide - Belt	1
13	62-3660	Spacer - Bearing	1
14	67-1370	Assy. - Brake, Deck	1
15	322-6	Screw - Cap Hex. Hd.	2
16	67-0570	Rod W.A. - Brake, Deck	1
17	3296-39	Nut - Lock	2
18	61-9760	Wheel - Deck	2
19	56-6590	Bolt - Wheel	2
20	322-3	Screw - Cap Hex. Hd.	6
21	67-0710	Ball - Swivel	1
22	67-0730	Post - Mount, Brake	1

Ref. No.	Part No.	Description	No. Used
23	67-0740	Spacer - Brake, Deck	1
24	3296-29	Nut - Lock	9
25	67-0970	Hub - Spindle	1
26	80-4360	Shield - Bearing	1
27	80-4340	Shaft - Spindle	1
28	26-0671	Bolt - Blade	1
29	3290-465	Washer - Belleville	1
30	80-4530	Blade	1
31	80-4380	Spacer - Spindle	1
32	67-1440	Spring - Brake	1
33	32109-14	Nut - Wing	1
34	3234-21	Screw - Cap Hex. Hd.	1
35	80-4450	Cover - Recycler	1
36	80-4510	Kicker	4
37	82-6230	Deck	1
38	321-4	Screw - Cap Hex. Hd.	9
39	67-1600	Bracket - Deflector	1
40	3296-59	Nut - Lock	1
41	3296-42	Nut - Lock	9
42	76-4070	Decal - Danger	1
43	32104-130	Screw - Special	8
44	82-6250	Decal - Recycler	1
45	80-4540	Ring - Deck, Recycler	4

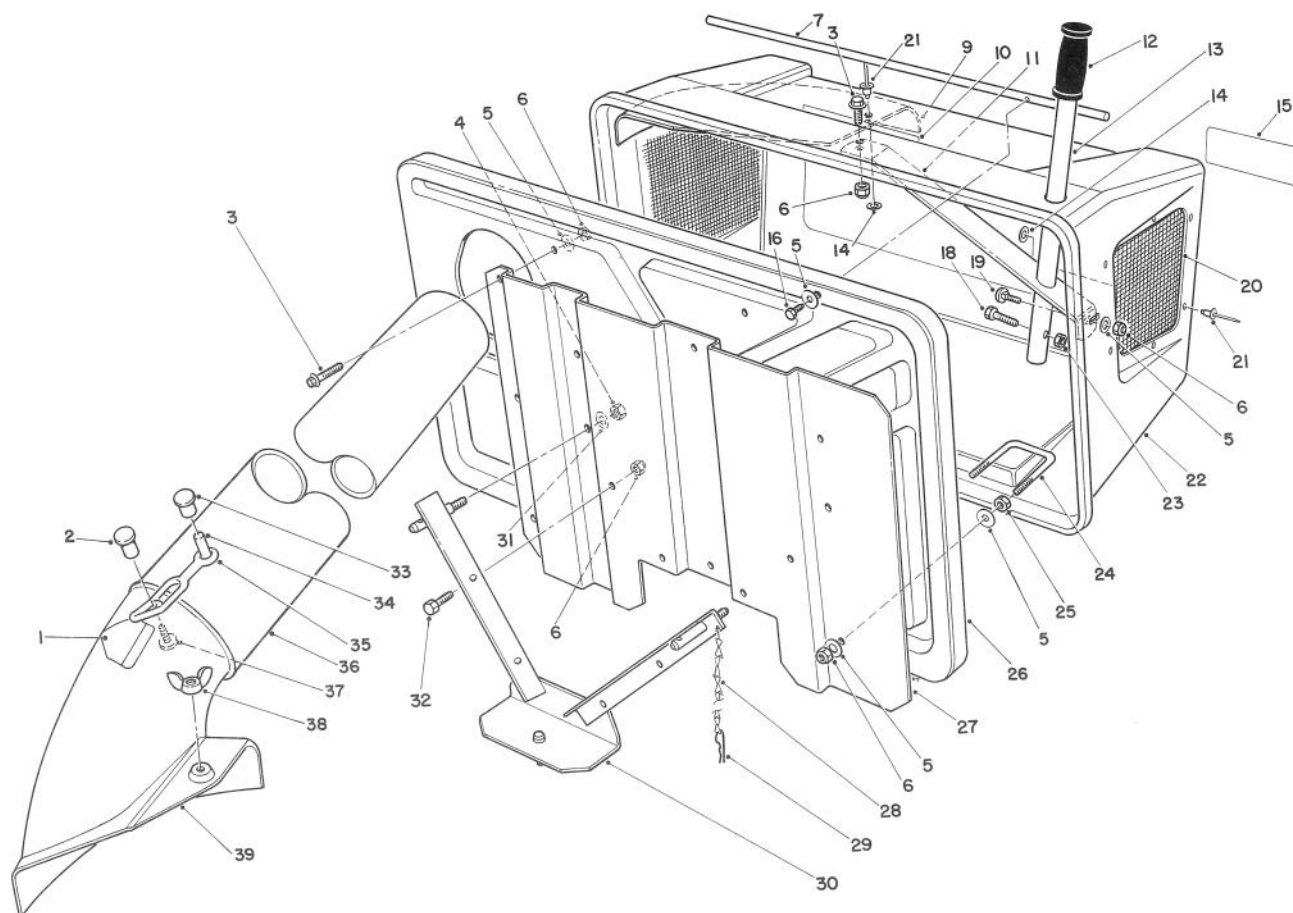


C-0011A

EASY EMPTY BAGGING KIT MODEL 59047 (Optional)

Ref. No.	Part No.	Description	No. Used
1	54-9220	Decal - Chute	1
2	233-68	Knob	1
3	3234-5	Screw - Hex. Hd. Flange	8
4	3296-17	Nut - Lock	2
5	3256-2	Washer - Flat	14
6	3296-29	Nut - Lock	15
7	25-1360	Rod - Pivot	1
9	25-1470	Deflector	1
10	46-2850	Decal - Warning	1
11	25-1390	Guide - Handle	1
12	233-40	Grip - Handle	1
13	25-1380	Tube - Handle	1
14	3269-6	Washer - Backup, Rivet	14
15	25-2200	Decal - Easy Empty Bagger	1
16	321-30	Screw - Cap Hex. Hd.	2
18	321-8	Screw - Cap Hex. Hd.	1
19	3230-1	Bolt - Carriage	1
20	26-0010	Screen	1
21	3290-382	Rivet - Pop	14

Ref. No.	Part No.	Description	No. Used
22	25-1290	Hopper	1
23	32153-4	Nut - Lock	1
24	25-1370	Latch	1
25	3217-6	Nut - Hex.	2
26	67-9980	Cap	1
27	67-1540	Plate - Mounting	1
28	2830-9	Chain	2
29	3290-355	Pin - Hair, Cotter	2
30	67-9900	V-Bracket	1
31	3256-24	Washer - Flat	2
32	322-2	Screw - Cap Hex. Hd.	4
33	3290-479	Fastner - Panel	1
34	22-9741	Spacer	1
35	82-5690	Retainer - Duct	1
36	67-9890	Duct	1
37	32140-64	Screw	1
38	32103-14	Nut - Wing	1
39	67-1550	Chute (Incl. Ref. #1, 2 & 37)	1

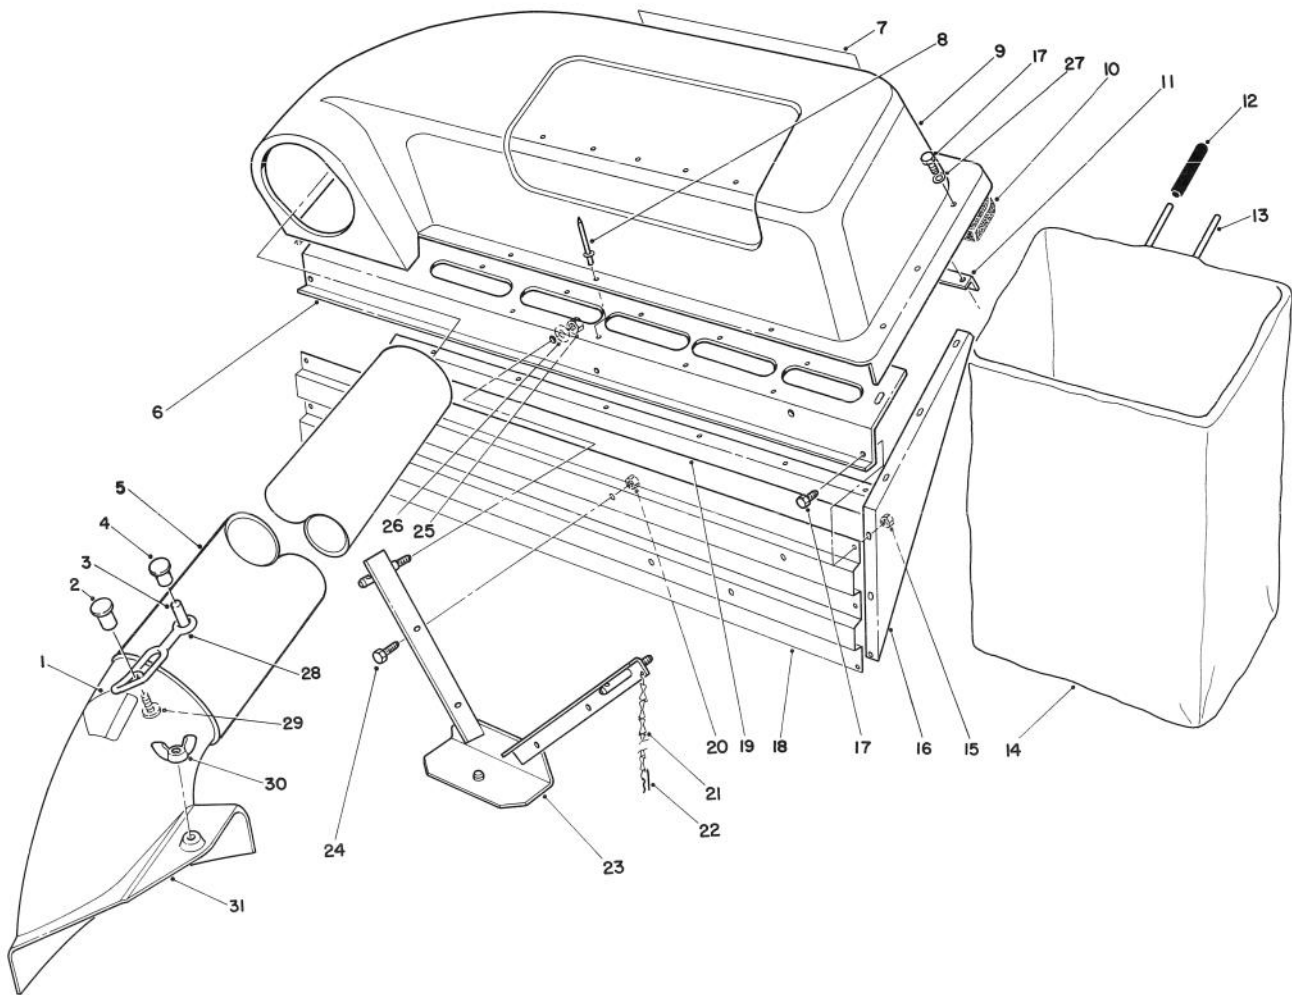


C-0012A

TWIN BAGGER GRASS CATCHER MODEL 59053 (Optional)

Ref. No.	Part No.	Description	No. Used
1	54-9220	Decal - Chute	1
2	233-68	Knob	1
3	22-9741	Spacer	1
4	3290479	Fastner - Panel	1
5	67-9890	Duct	1
6	57-7920	Baffle	1
7	57-7840	Decal - Twin Bagger	1
8	3269-15	Rivet - Pop	18
9	67-9960	Cover	1
10	57-7820	Seal - Foam	1
11	57-7880	Bracket - Frame, Bag	2
12	47-2550	Grip - Handle	4
13	57-7960	Frame - Bag	2
14	57-7990	Bag	2
15	3296-42	Nut - Lock	12
16	57-7980	Plate - Side	2

Ref. No.	Part No.	Description	No. Used
17	321-3	Screw - Cap Hex. Hd.	12
18	67-9960	Shield - Muffler	1
19	57-7890	Channel - Support, Bag	1
20	3296-29	Nut - Lock	4
21	2830-9	Chain	2
22	3290-355	Pin - Hair, Cotter	2
23	67-9900	V-Bracket	1
24	322-2	Screw - Cap Hex. Hd.	4
25	3296-17	Nut - Lock	2
26	3256-24	Washer - Flat	2
27	3256-1	Washer - Flat	5
28	82-5690	Retainer - Duct	1
29	32140-64	Screw	1
30	32103-14	Nut - Wing	1
31	67-1550	Assembly - Chute (Incl. Ref. #1, 2 & 29)	1

309

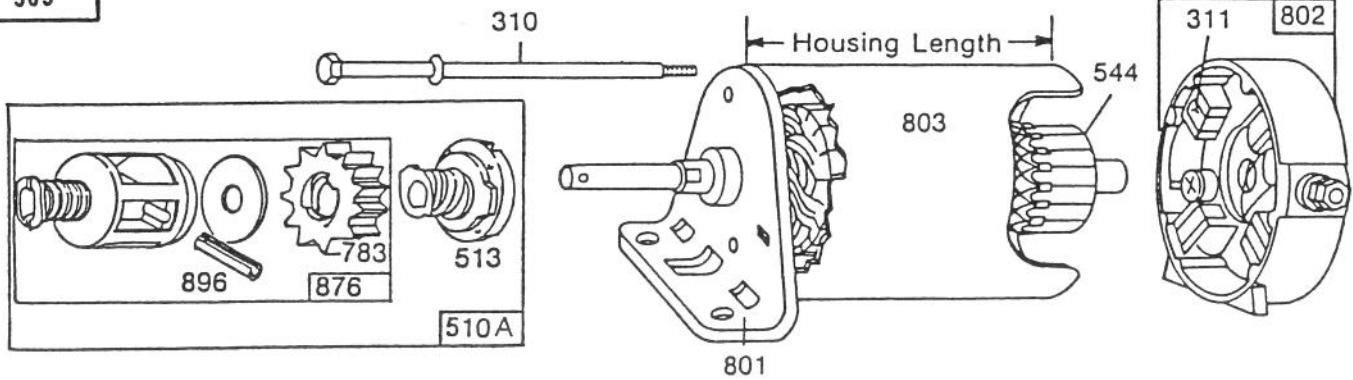

NOTE:


To identify Briggs & Stratton manufactured starter motors, measure the housing length.

C-0784

STARTER – BRIGGS & STRATTON NO. 191707-6021-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
309	394805	Assembly – Motor & Drive	1	783	280104	Gear	1
310	94003	Assembly – Thru Bolt	2	801	394856	Assembly – End Cap	1
311	395538	Assembly – Brush	2	802	395537	Assembly – Commutator, End Cap	1
510	490421	Assembly – Drive (Incl. Ref. #513, 783, 876 & 896)	1	803	393825	Assembly – Housing (3-21/32" Long)	1
513	398003	Assembly – Clutch	1	876	490467	Kit – Retainer	1
544	390837	Assembly – Armature	1	896	94288	Pin – Roll	1

BRIGGS & STRATTON MODEL NO. 191707-6021-01

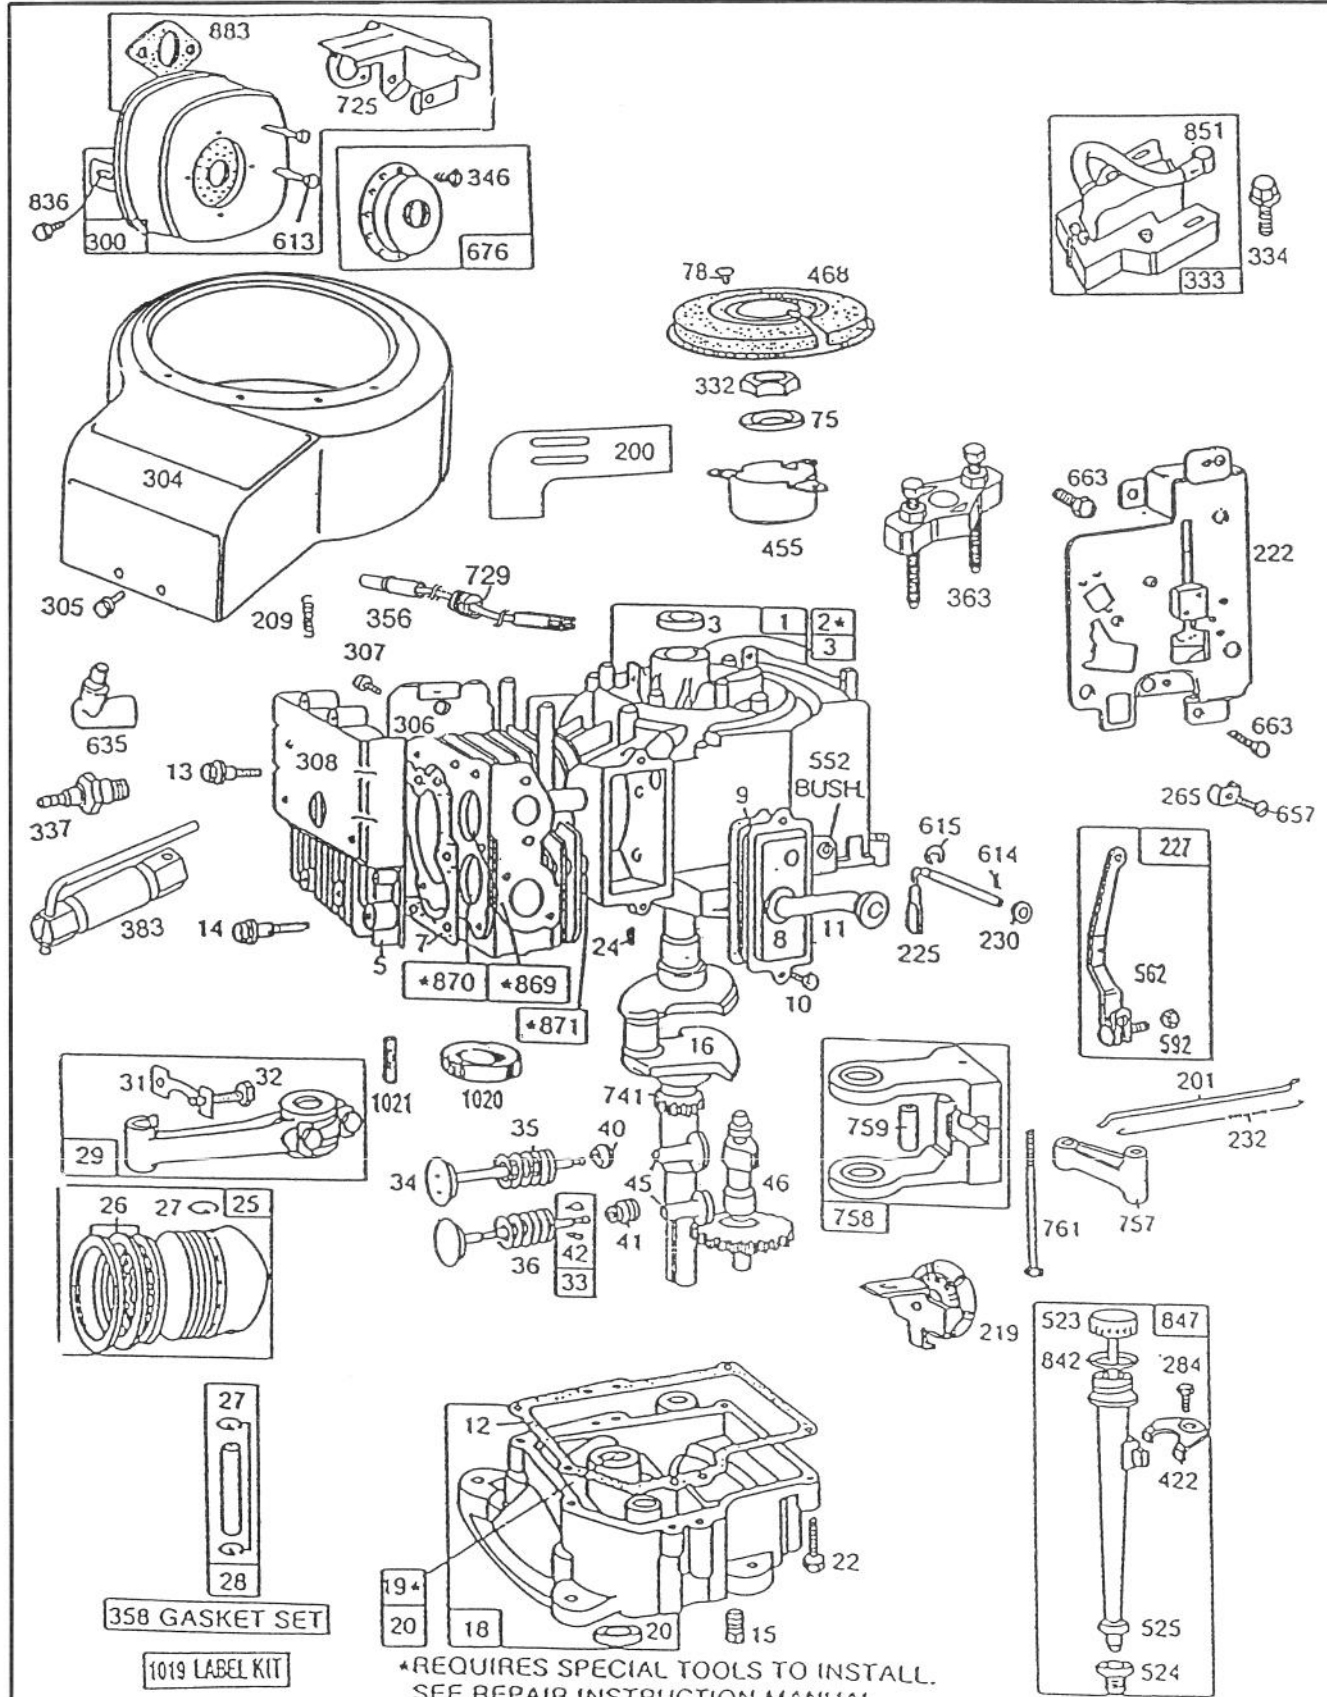






BRIGGS & STRATTON MODEL NO. 191707-6021-01 (Cont.)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	396269	Assembly - Cylinder	1	200	221760	Guide - Air	1
2	399267	Bearing - Cylinder	1	201	262431	Link - Governor	1
		Note: Requires special tools for installation.		209	260871	Spring - Governor	1
3	294606	Seal - Oil	1	219	491397	Slinger - Oil, Gov. Gear & Bracket Assembly	1
5	212286	Head - Cylinder	1	222	491594	Plate - Control, Governor	1
*7	272163	Gasket - Head, Cylinder	1	225	231058	Crank - Gov. (1/4" Dia.)	1
8	391406	Assembly - Breather	1	227	490927	Assy. Lever - Governor for 1/4" Dia. Crank	1
*9	27803	Gasket - Cover, Valve	1	230	222450	Washer - Lever, Governor (1/4" Inside Diameter)	1
10	93394	Screw	1	232	261911	Spring - Link, Governor	1
11	280005	Tube - Breather	1	265	221535	Clamp - Casing	1
*12	271701	Gasket - Cover, Crankcase 1/64" Thick	1	284	93572	Screw - Clamp, Mounting	1
*	27876	Gasket - Cover, Crankcase .005" Thick	1	300	398507	Muffler - Exhaust	1
*	27877	Gasket - Cover, Crankcase .009" Thick	1	304	491408	Housing - Blower	1
13	94565	Screw - Head, Cylinder	1	305	94608	Screw - Blower Hsg., Sems	1
14	93723	Screw - Head, Cylinder (3" Long)	1	306	224543	Shield - Cylinder	1
15	94239	Plug - Drain, Oil	1	307	93868	Screw - Shield, Cylinder	1
16	396876	Crankshaft	1	308	222636	Cover - Head, Cylinder	1
		Note: Order Part 94388 for timing gear pin replacement.		332	92284	Nut - Flywheel	1
18	392548	Base - Engine	1	333	398811	Armature - Magneto	1
19	295963	Bushing - Base, Engine	1	334	93381	Screw - Armature	1
		Note: Requires special tool for installation.		337	802592	Plug - Spark	1
20	391086	Seal - Oil	1	346	93705	Screw	1
22	93585	Screw - Base, Mounting	1	356	494328	Wire - Ground	1
24	222698	Key - Flywheel	1	358	299577	Gasket Set	1
25	391673	Assy. - Piston, Std.	1	363	19165	Puller - Flywheel	1
	391674	Assy. - Piston, .010" O.S.	1	383	89838	Wrench - Spark Plug	1
	391675	Assy. - Piston, .020" O.S.	1	422	223394	Clamp - Tube, Oil Filler	1
	391676	Assy. - Piston, .030" O.S.	1	455	222561	Cup - Screen Mounting	1
		PISTON RING SETS		468	222562	Screen - Flush, Rotating	1
		Note: For Chrome Piston		482	93621	Screw - Sems	1
		Ring Set - Standard Size - Order No. 299743.		523	391840	Cap & Dipstick - Oil Filler	1
26	391669	Ring Set - Piston, Std.	1	524	68838	Seal - Tube, Filler	1
	391670	Ring Set - Piston, .010" O.S.	1	525	280133	Tube - Filler, Oil	1
	391671	Ring Set - Piston, .020" O.S.	1	552	231055	Bushing - Crank, Gov.	1
	391672	Ring Set - Piston, .030" O.S.	1	562	92613	Bolt - Lever, Governor	1
27	68546	Lock - Piston Pin	1	592	231082	Nut - Hex.	1
28	295840	Assy. - Piston Pin, Std.	1	613	94042	Screw - Muffler	1
	295841	Assy. - Piston Pin, .005" O.S.	1	614	93306	Pin - Hair, Cotter	1
29	390402	Assy. - Rod, Connecting	1	615	93307	Retainer - E-Ring	1
		Note: For Connecting Rod with .020" Undersize Crankpin Bore - Order No. 390773.		635	66538	Elbow - Plug, Spark	1
31	222114	Lock - Screw, Conn. Rod	1	657	93496	Screw	1
32	92659	Screw - Connecting Rod	1	663	93572	Screw	1
33	261095	Valve - Exhaust	1	676	395700	Deflector - Exhaust	1
34	261055	Valve - Intake	1	725	223540	Shield - Muffler	1
35	65906	Spring - Valve, Intake	1	729	281159	Clip - Lead Wire	1
36	26828	Spring - Valve, Exhaust	1	741	262479	Gear - Timing	1
40	221596	Retainer - Valve, Intake	1	757	212359	Link - Counterweight	1
41	292260	Rotocoil - Valve, Exhaust	1	758	390172	Assy. - Counterweight	1
42	93630	Retainer - Valve, Exhaust	1	759	298909	Pin - Counterweight	1
		Rotocoil	2	761	93874	Screw - Counterweight	1
45	260933	Tappet - Valve	1	836	93559	Screw	1
46	211689	Gear - Cam	1	842	270920	Seal - Cap, Filler	1
75	224061	Washer - Spring	1	847	392066	Filler Group - Oil	1
78	93805	Screw - Sems	1	851	221798	Terminal - Ignition Cable	1
				869	211661	Seat - Valve, Intake (Std.)	1
				870	211661	Seat - Valve, Exhaust (Std.)	1
				871	231218	Guide - Exhaust or Intake Valve, See repair manual	1
				883	270918	Gasket - Pipe, Exhaust	1
				1019	491182	Kit - Label	1
				1020	261190	Eccentric	1
				1021	94160	Pin - Eccentric	1

*Included in Gasket Set - Part No. 299577.

BRIGGS & STRATTON MODEL NO. 191707-6021-01 (Cont.)

121 CARBURETOR OVERHAUL KIT

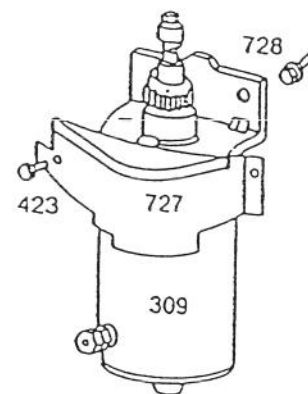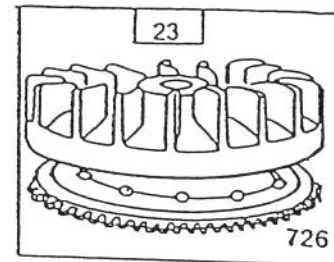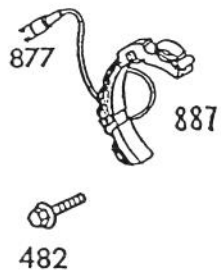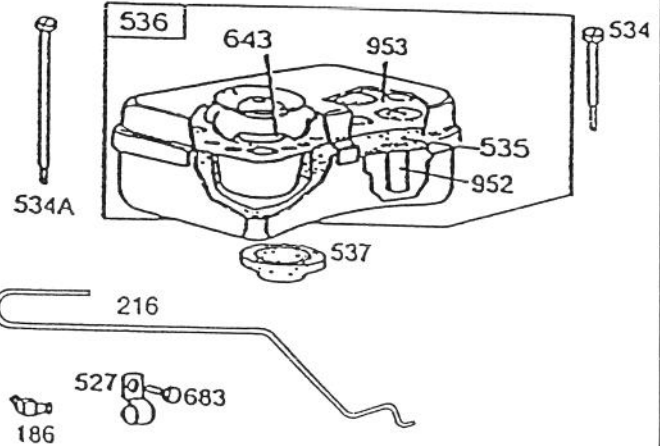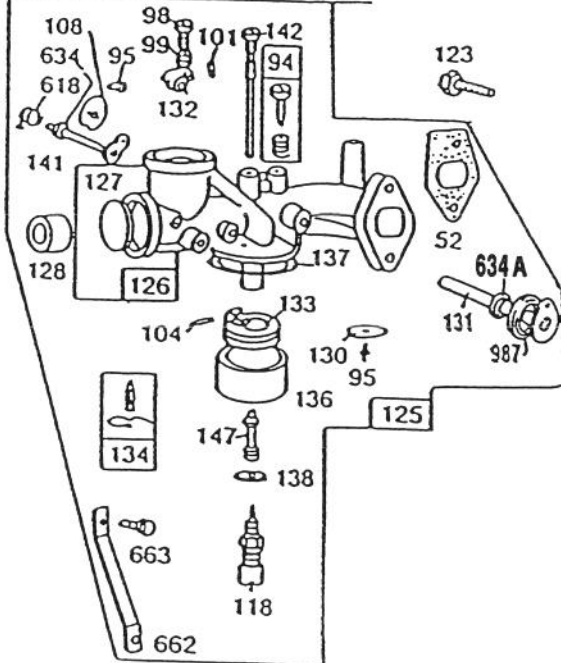

Assemblies include all parts shown in frames.

BRIGGS & STRATTON MODEL NO. 191707-6021-01 (Cont.)

Ref. No.	Part No.	Description	No. Used
23	391983	Assy. - Flywheel & Ring Gear, Magneto	1
*52	270824	Gasket - Carburetor Mtg.	1
*94	292681	Assy. - Valve, Carb. Idle	1
95	93499	Screw - Throttle & Choke Valve Mounting	1
98	91920	Screw - Mach. Fil. Hd.	1
99	26157	Spring - Adjust. Throttle	1
101	93043	Pin - Stop, Throttle	1
*104	230896	Pin - Hinge, Float	1
108	222010	Valve - Choke	1
*118	396568	Valve - Needle	1
121	394698	Kit - Overhaul, Carburetor	1
123	93357	Screw - Mounting, Carb.	1
125	491590	Assembly - Carburetor	1
126	299851	Assy. - Body, Carburetor	1
*127	221997	Plug - Welch	1
128	211682	Venturi - Carburetor	1
130	221986	Valve - Throttle	1
131	491006	Shaft & Lever, Throttle	1
132	211712	Stop - Throttle	1
133	299707	Float - Carburetor	1
*134	394681	Valve - Inlet, Fuel	1
136	221995	Bowl - Float	1
*137	270511	Gasket - Bowl, Float	1
*138	222014	Washer - Bowl, Float	1
141	390684	Shaft & Lever - Choke	1
*142	299740	Nozzle - Carburetor	1
*147	231323	Screw - Nozzle	1
186	67218	Connector - Fuel Pipe	1
216	261612	Link - Choke	1
309		Motor - Starting (12 V) See Chart for Replacement Parts on Illustrated Pages.	1

Ref. No.	Part No.	Description	No. Used
423	93984	Screw - Sems	1
482	93621	Screw - Sems	1
527	221428	Clamp	2
534	93622	Screw - Cleaner, Air	1
534A	93323	Screw - Cleaner, Air	1
535	270528	Element - Cleaner, Air	1
536	391399	Assy. - Cleaner, Air Uses: 280111 Support - Air Cleaner Element Plastic	1
537	270539	Gasket - Cleaner, Air	1
618	261116	Spring - Return, Choke	1
634	270382	Washer - Shaft, Choke (Felt)	1
634A	271853	Washer - Shaft, Throttle	1
643	222149	Cup - Cleaner, Air	1
662	222027	Bracket - Carburetor	1
663	93572	Screw	1
683	94419	Screw - Hex. Washer Hd. Self-Tapping	1
726	392134	Gear - Ring (Aluminum) (Includes Mounting Parts)	1
727	395405	Cover - Starter (Incl. Mounting Screws)	1
728	93535	Screw - Sems	1
877	393814	Assy. - Diode & Connector	1
887	391529	Assy. - Stator, Alternator (D.C.)	1
952	222495	Spacer - Cleaner, Air	1
953	222022	Screen - Cleaner, Air	1
987	398970	Seal - Throttle	1

*Included in Carburetor Overhaul Kit - Part no. 394698.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifié Conforme au Règlement sur le Brouillage Radioélectrique.

Litho in U.S.A.