



Greensmaster® Flex™ 18

Model No. 04018 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 3	Camshaft and Valve Assembly	 13
Reel Drive Assembly	 4	Ignition Assembly	 14
Drum Drive and Basket Assembly	 5	Governor Assembly	 15
Engine and Gearbox Assembly	 6	Carburetor Assembly	 16
Gearbox Assembly	 7	Air Cleaner and Muffler Assembly	 17
Differential Assembly No. 110-2243	 9	Fuel Tank Assembly	 18
Handle Assembly	 10	Engine Decals	 19
Crankcase Assembly	 12	Attachments and Accessories List	 20


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- ❶ Not serviced separately

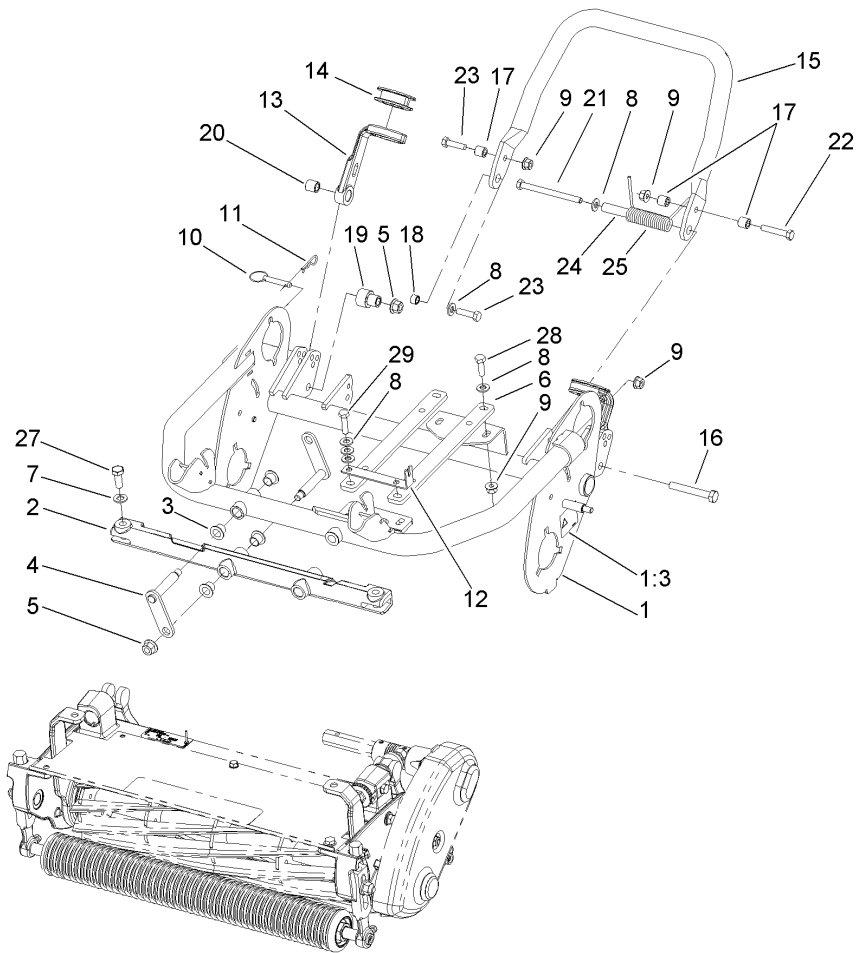


Frame Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	110-2402	1	Frame ASM	24	104-0502	1	Spacer-Kickstand, Long
1:3	93-9389	2	Decal-Warning, Belt (Japan)	25	99-2011	1	Spring-Torsion
2	110-2248-01	1	Frame-Front	27	33115-025	2	Screw-HH
3	93-2561	8	Bushing-Flange	28	33114-025	3	Screw-HH
4	99-2063	4	Link ASM	29	33114-030	1	Screw-HH
5	104-2611	6	Nut-HF				
6	99-2070-01	2	Base-Engine				
7	33095-00	2	Washer-Flat				
8	33094-00	8	Washer-Plain				
9	104-2612	8	Nut-HF				
10	93-6029	2	Pin-Clevis, Ring				
11	3290-467	2	Pin-Hair				
12	105-9939	1	Strap-Support, Cable				
13	99-3774-03	2	Arm-Handle				
14	65-7510	2	Grommet-Handle				
15	110-2246-03	1	Kickstand				
16	33115-070	2	Screw-HH				
17	93-6024	3	Bushing-Support, Handle				
18	65-7910	1	Spacer				
19	108-3177	2	Spacer-Hub				
20	99-2058	2	Spacer-Support, Handle				
21	33114-100	1	Screw-HH				
22	33114-045	1	Screw-HH				
23	33114-030	2	Screw-HH				

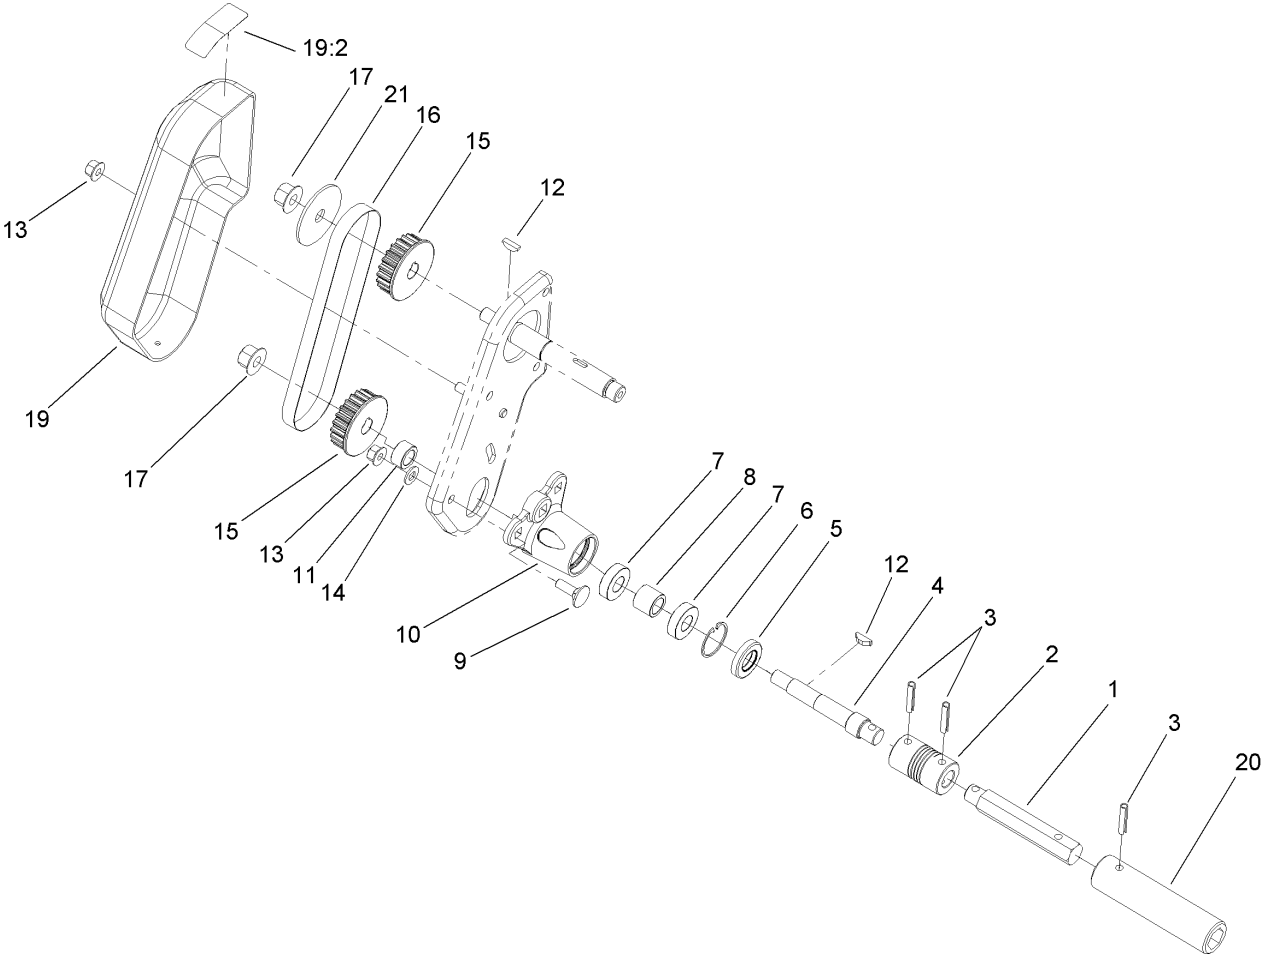

Reel Drive Assembly


Ref	Part No.	Qty.	Description				
1	110-2249	1	Shaft-Hex				
2	99-3757	1	Coupling-Flex				
3	32121-69	3	Pin-Spring				
4	110-2382	1	Shaft-Drive, Reel				
5	107-3205	1	Seal-Oil				
6	32151-51	1	Ring-Retaining				
7	251-336	2	Bearing-Ball				
8	99-2079	1	Spacer				
9	33124-025	2	Screw-CARR				
10	99-2083	1	Housing-Bearing				
11	110-2381	1	Spacer				
12	3257-30	2	Key-Woodruff				
13	104-2612	3	Nut-HF				
14	33094-00	2	Washer-Plain				
15	107-9044	2	Pulley-22 Tooth				
16	99-2022	1	Belt				
17	104-2610	2	Nut-HF				
19	110-2286	1	Belt Cover ASM				
19:2	105-2411	1	Decal-Oil, HYD				
20	110-2390	1	Tube-Hex				
21	104-0532	1	Washer-Pulley				

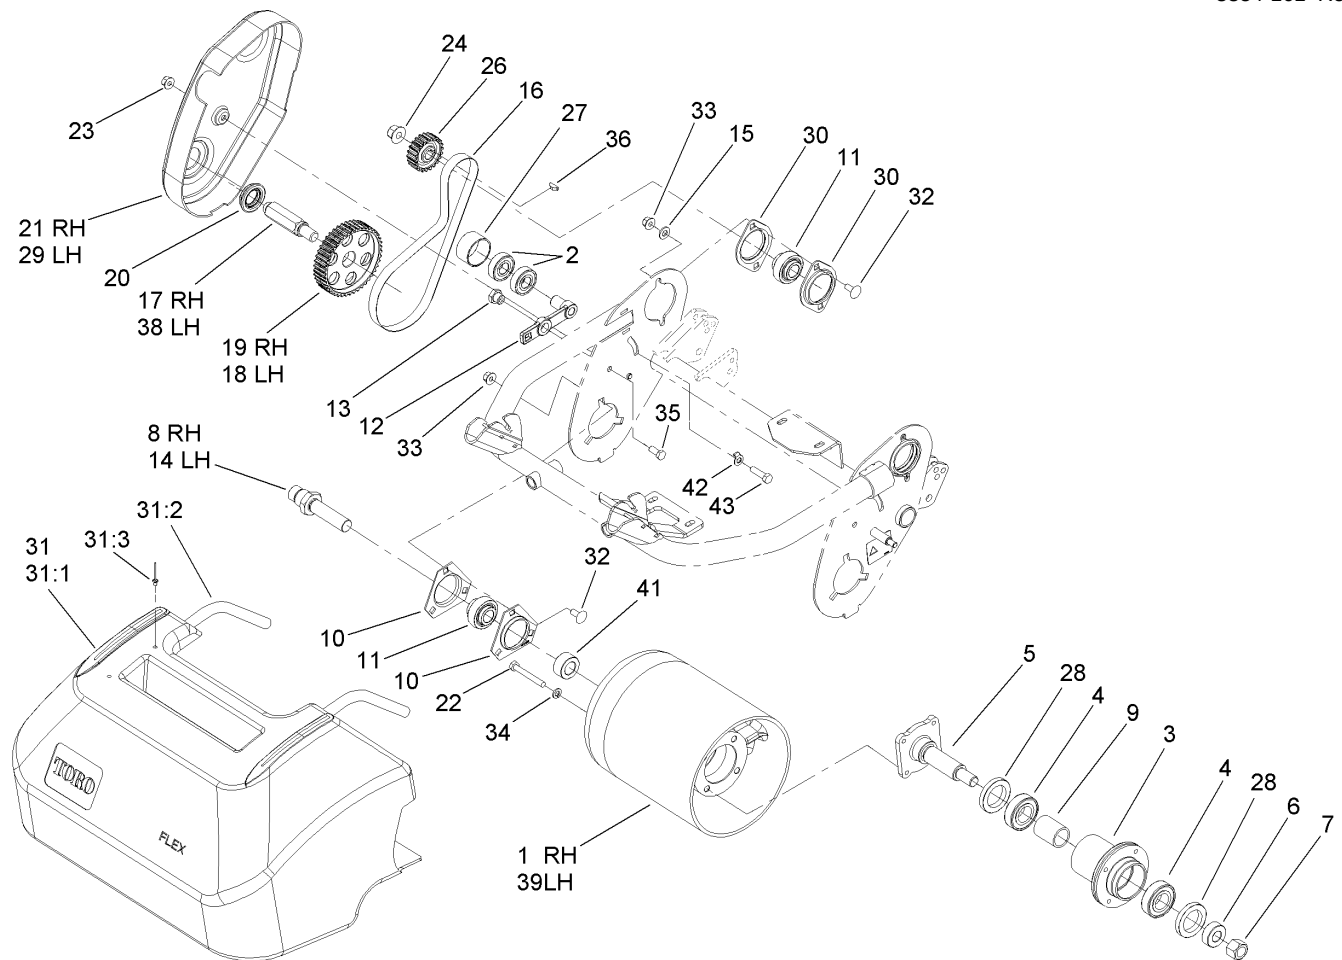

Drum Drive and Basket Assembly


Ref	Part No.	Qty.	Description
1	110-2238	1	Drum-Traction,RH 18 Inch
2	38-7820	4	Bearing-Ball
3	107-3214	1	Hub-Drum
4	251-82	2	Bearing-Ball
5	107-3215	1	Spindle-Drum
6	65-6530	1	Spacer
7	33028-00	1	Nut-Lock, NI
8	107-3206	1	Shaft-Drum, RH
9	65-6520	1	Spacer
10	108-8626	4	Flange-Triangular
11	106-8448	4	Bearing-Race, Extended
12	107-8179	2	Idler-Drive, Drum
13	105-5770	2	Nut-Shoulder
14	107-3207	1	Shaft-Drum, LH
15	33094-00	4	Washer-Plain
16	107-8175	2	Belt-Drum
17	107-3216	1	Shaft-Wheel, Transport (RH)
18	110-2290	1	Pulley-Driven, Traction (LH)
19	110-2289	1	Pulley-Driven, Traction (RH)
20	104-0533	2	Seal-Cover, Drum
21	105-5326	1	Cover-Drum, RH
22	33114-060	8	Screw-HH
23	33024-00	2	Nut-Lock
24	104-2610	2	Nut-HF

Ref	Part No.	Qty.	Description
26	110-2315	2	Pulley-Driver, 22 Tooth
27	104-2609	2	Sleeve-Pulley
28	253-159	2	Seal
29	105-5327	1	Cover-Drum, LH
30	700083	4	Flangette-Bearing
31	110-2252	1	Grass Basket ASM
31:1	110-2253	1	Basket-Grass
31:2	110-2250-03	1	Basket Frame ASM
31:3	3269-28	5	Rivet-Pop
32	33124-020	10	Screw-CARR
33	104-2612	10	Nut-HF
34	3253-4	8	Washer-Lock
35	33114-020	2	Screw-HH
36	3257-30	2	Key-Woodruff
38	107-3224	1	Shaft-Wheel, Transport (LH)
39	110-2237	1	Drum-Traction, LH 18 Inch
41	106-8417	2	Spacer-Shaft, Drum
42	107-8180	2	Washer-Tab
43	33114-030	2	Screw-HH

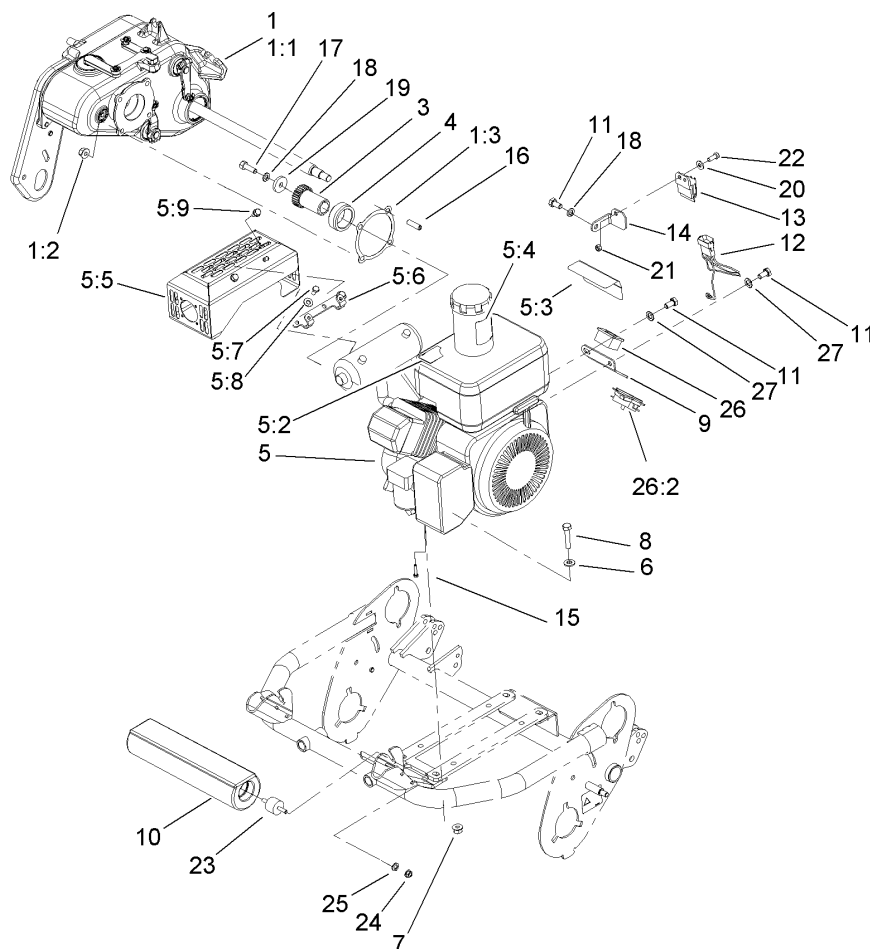

Engine and Gearbox Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	110-2241	1	Gearbox Service ASM	13	1-323430	1	Module-Interlock
1:1		1	Gearbox ASM	14	94-5861	1	Bracket-Module
1:2	104-2612	4	Nut-HF	15	94-9015	1	Screw-HH
1:3	99-2052	1	Gasket-Flange	16	108-9446	4	Screw-Set
3	110-2445	1	Gear-Engine, 28 Tooth	17	3210-5	1	Screw-HH
4	99-2001	1	Adapter-Engine	18	3253-4	2	Washer-Lock
5	107-7603	1	Engine ASM	19	65-8270	1	Washer
5:2	105-5309	1	Decal-Surface, Hot (Ce)	20	3256-22	1	Washer-Flat
5:2	83-2560	1	Decal-Surface, Hot	21	33023-00	1	Nut-Lock
5:3	92-4813	1	Decal-Danger (Japan)	22	33113-016	1	Screw-HH
5:3	93-7348	1	Decal-Danger	23	110-2259	2	Mount-Isolator
5:4	93-9886	1	Decal-Fuel	24	33003-00	2	Nut-HF
5:5	104-9784-03	1	Guard-Muffler	25	107-7601	2	Washer-Tab
5:6	104-9771	2	Bracket-Guard, Muffler	26	104-4233	1	Meter-Hour
5:7	33113-012	4	Screw-HH	26:2	104-4234	1	Clip-Mounting
5:8	3256-22	4	Washer-Flat	27	3255-9	2	Washer-Lock, EXT
5:9	104-2628	4	Screw-HWH				
6	33094-00	4	Washer-Plain				
7	104-2612	8	Nut-HF				
8	33114-040	4	Screw-HH				
9	104-2622	1	Bracket-Meter, Hour				
10	107-8191-01	1	Damper-13Lbs				
11	33114-016	3	Screw-HH				
12	105-5323	1	Module-Harness, Wire				

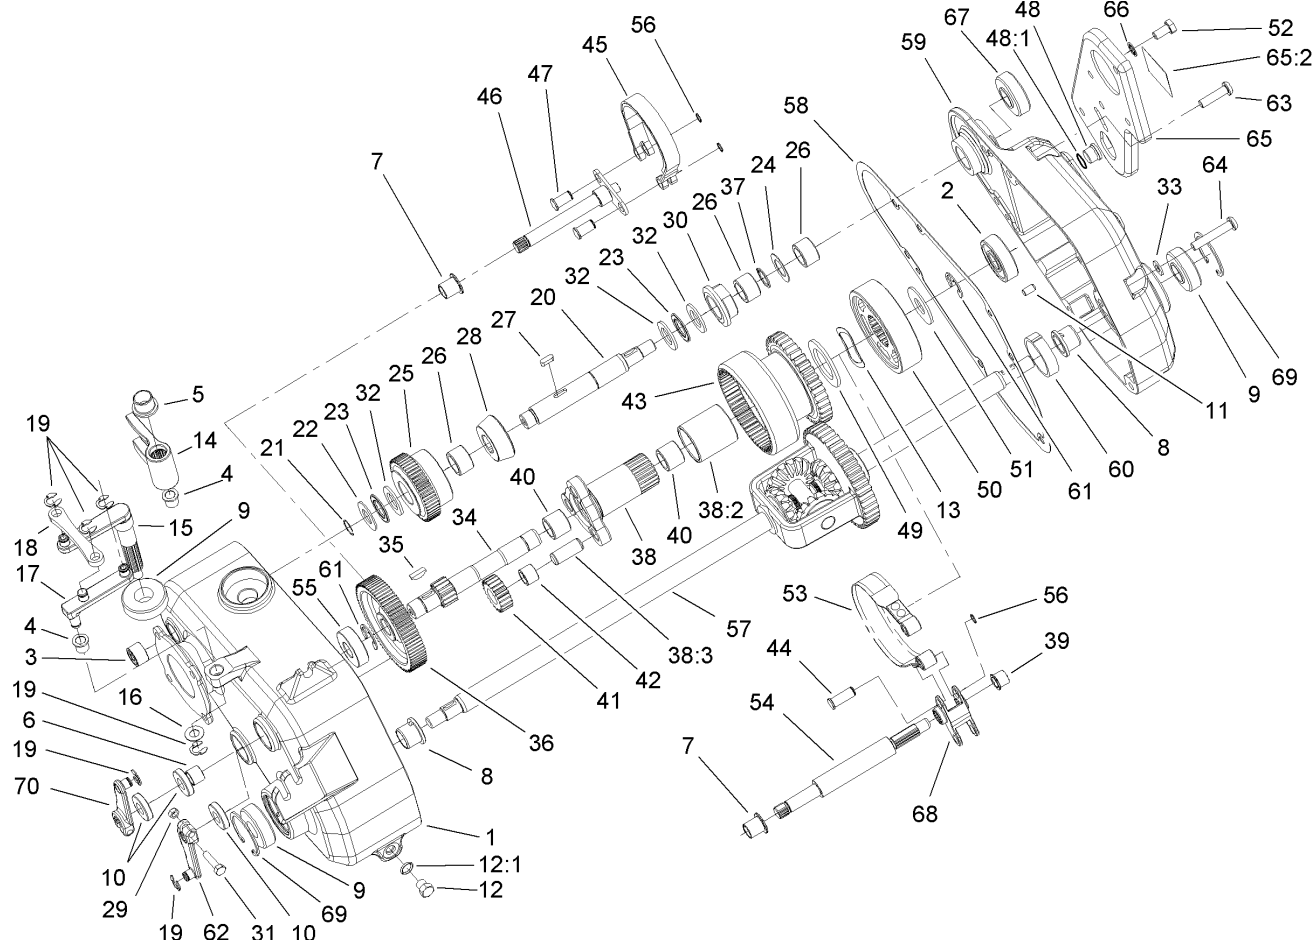

Gearbox Assembly


Ref	Part No.	Qty.	Description
1	106-4682	1	Housing-Gearbox
2	110-7339	1	Bearing-Ball
3	98-4194	1	Bearing-Needle, Caged
4	256-316	2	Bushing
5	256-287	1	Bushing
6	256-1	1	Bushing
7	256-219	2	Bushing
8	99-2062	2	Bushing-Keyed, Flanged
9	107-8132	3	Seal-Oil
10	99-2056	3	Seal-Oil
11	95-0715	2	Pin-Dowel
12	353-948	1	Fitting-Plug
12:1	237-118	1	O-Ring
13	105-9944	1	Washer-Wave, Spring
14	99-2014	1	Fork-Clutch
15	99-2015	1	Shaft-Fork
16	37-8080	1	Washer-Thrust
17	110-2450	1	Lever-Bellcrank
18	99-3780	1	Link
19	32151-47	6	Ring-Retaining
20	99-2009	1	Shaft-Clutch
21	99-3805	1	Ring-Retaining
22	99-3806	1	Washer-Thrust
23	99-3836	2	Bearing-Thrust

Ref	Part No.	Qty.	Description
24	99-3837	1	Washer-Thrust
25	110-2444	1	Gear-Clutch, 55 Tooth (Reel Crowned)
26	1523	3	Bearing-Needle
27	99-2059	2	Key-Square
28	107-3232	1	Cone ASM
29	33023-00	2	Nut-Lock
30	106-8440	1	Hub-Plunger
31	33113-025	2	Screw-HH
32	99-3807	3	Washer-Thrust
33	33094-00	4	Washer-Plain
34	99-2003	1	Gear-Sun
35	3257-30	1	Key-Woodruff
36	110-2442	1	Gear-Traction, 78 Tooth (Crowned)
37	32120-72	1	Ring-Snap
38	107-8166	1	Carrier ASM
38:2	104-0524	1	Bushing-Carrier
38:3	107-9031	3	Pin-Dowel
39	104-9776	1	Bushing-Flanged
40	104-0535	2	Bearing-Needle
41	106-4694	3	Gear-Spur
42	48-2060	3	Bearing-Roller
43	110-2451	1	Gear-Ring, Planetary

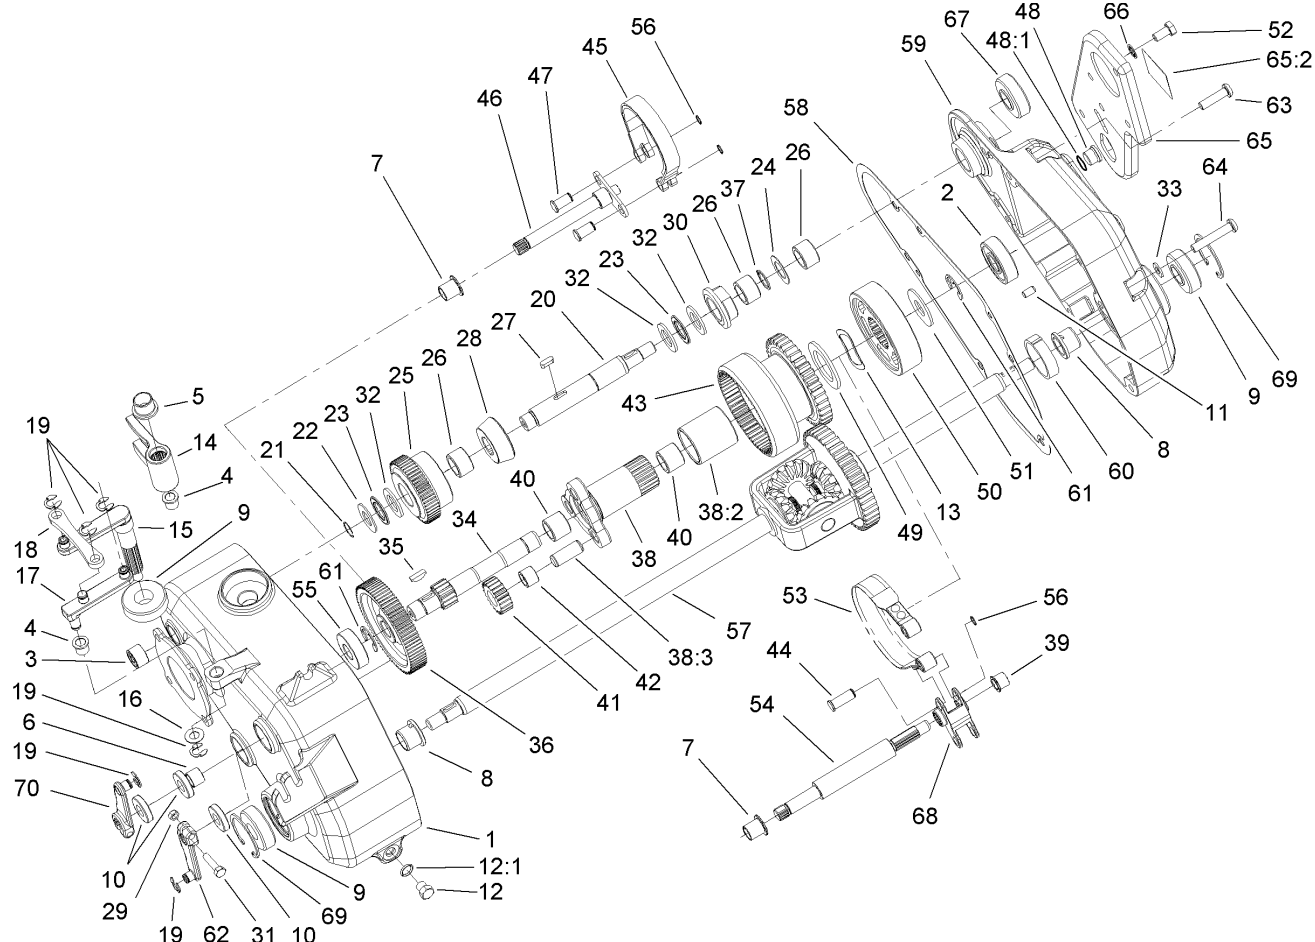


Gearbox Assembly (continued)

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
44	106-8444	2	Pin-Clevis, Long	65:2	93-9389	1	Decal-Warning, Belt (Japan)
45	99-2049	1	Band-Brake	66	3254-2	1	Washer-Lock, Internal
46	99-2020	1	Shaft-Brake	67	105-2429	1	Seal-Oil
47	106-8445	2	Pin-Clevis, Short	68	105-9938	1	Hub-Clutch, Traction
48	353-989	1	Plug-Hex, Hollow	69	32120-62	2	Ring-Retaining
48:1	237-42	1	O-Ring	70	110-3451	1	Lever-Gearbox
49	99-2054	1	Washer-Thrust				
50	110-2452	1	Drum-Clutch, Traction				
51	99-2055	1	Washer-Thrust				
52	33114-016	1	Screw-HH				
53	107-9042	1	Clutch Band ASM				
54	105-9937	1	Shaft-Clutch, Traction				
55	251-6	1	Bearing-Ball				
56	32120-46	4	Ring-Retaining				
57	110-2243	1	Differential ASM				
58	99-2051	1	Gasket				
59	106-4683	1	Cover-Gearbox				
60	99-2061	1	Bushing-Keyed				
61	32151-48	2	E-Ring				
62	99-3761	1	Lever-Gearbox				
63	99-6208	2	Screw-HSH				
64	99-6207	4	Screw-HSBH				
65	110-2293	1	Drive Plate ASM				
65:2	93-9356	1	Decal-Warning, Belt				

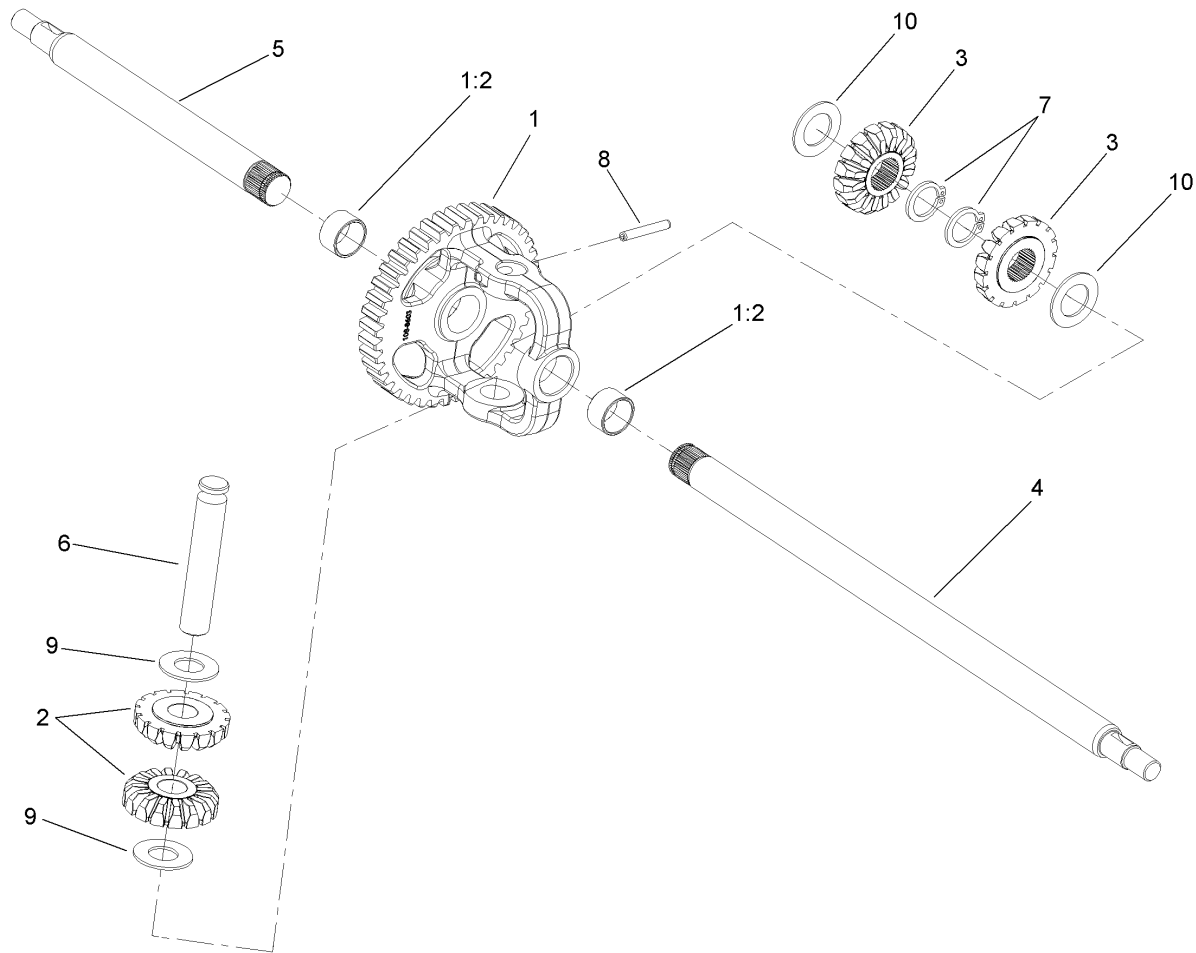

Differential Assembly No. 110-2243


Ref	Part No.	Qty.	Description				
1	108-8605	1	Differential Housing ASM				
1:2	108-8604	2	Bushing				
2	108-8606	2	Gear-Bevel, Driven				
3	108-8607	2	Gear-Bevel, Drive				
4	110-2244	1	Axle-Long				
5	110-2245	1	Axle-Short				
6	108-8611	1	Shaft-Gear				
7	32120-93	2	Ring-Retaining, EXT				
8	32121-6	1	Pin-Roll, Slotted				
9	108-8612	2	Washer				
10	108-8613	2	Washer				

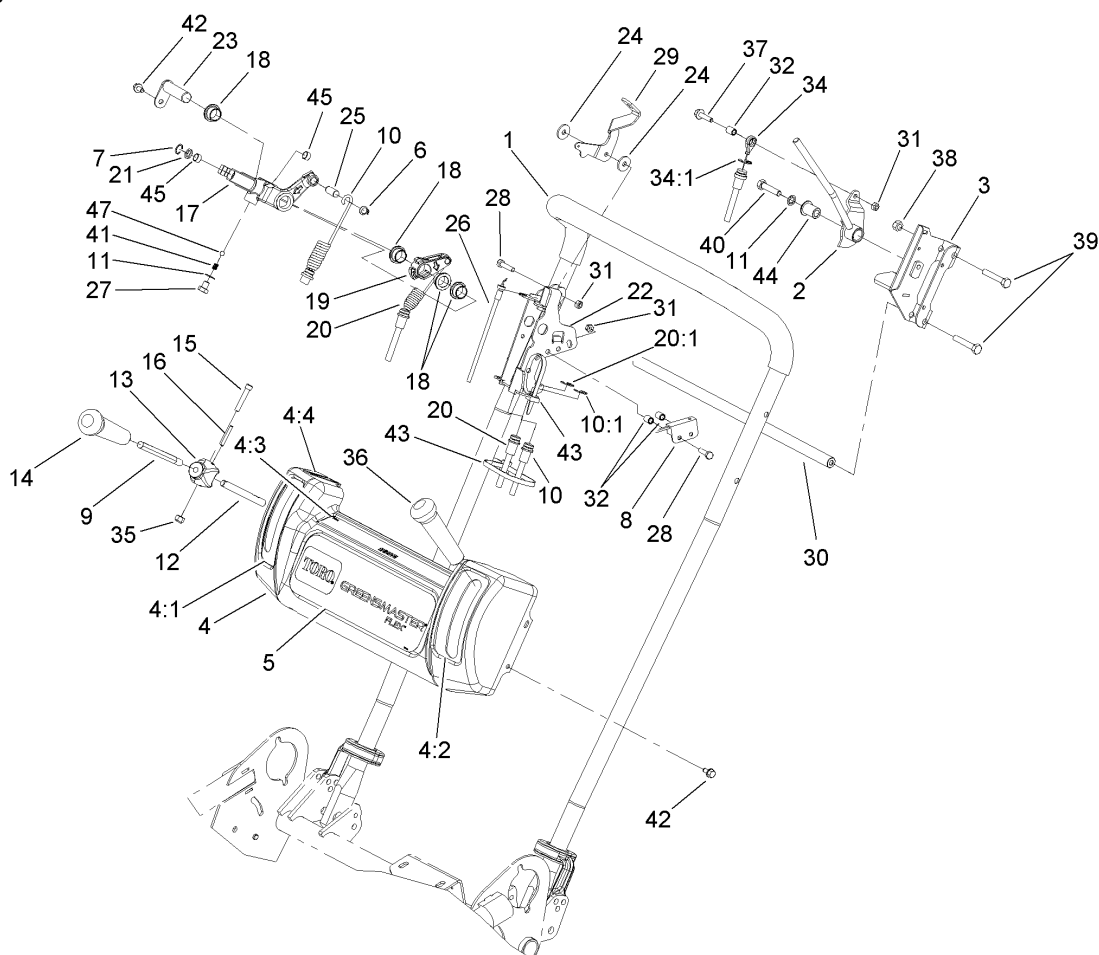

Handle Assembly


Ref	Part No.	Qty.	Description
1	110-2247	1	Handle
2	106-6143	1	Lever-Brake
3	108-4310-03	1	Brake Bracket ASM
4	104-2633	1	Console ASM
4:1	104-2617	1	Decal-Lever, Traction
4:2	104-2618	1	Decal-Lever, Brake
4:3	104-2621	1	Decal-Warning
4:4	93-6085	1	Decal-Throttle
5	110-2254	1	Decal-Console
6	105-2410	1	Ring-Retaining
7	105-5324	1	Ring-Retaining
8	100-1270	1	Switch-Proximity
9	105-5319	1	Rod-Handle
10	105-5328	1	Cable-Clutch, Traction
10:1	32120-47	1	Ring-Retaining, External
11	3254-2	2	Washer-Lock, Internal
12	99-3835	1	Pin
13	104-9761	1	Hub-Handle, Mount
14	104-9760	1	Knob-Black
15	105-5349	1	Screw-HSH, Special
16	32121-51	1	Pin-Roll
17	104-9758	1	Lever-Control, Traction
18	80-1290	4	Bushing
19	99-3830	1	Lever-Reel

Ref	Part No.	Qty.	Description
20	99-3765	1	Cable-Clutch, Reel
20:1	32120-47	1	Ring-Retaining, External
21	105-2407	1	Wiper
22	108-7652-03	1	Control Bracket ASM
23	99-3833	1	Pin-Lever, Reel
24	66-2921	2	Washer-Friction
25	104-9782	1	Pin-Dowel
26	104-2620	1	Cable-Throttle
27	108-8646	1	Screw-HH, Lock
28	33113-025	3	Screw-HH
29	108-3179	1	Lever-Throttle
30	106-4666	1	Rod-Support
31	33023-00	4	Nut-Lock
32	105-2401	3	Spacer-Cable, Brake
34	99-6214	1	Cable-Brake
34:1	32120-47	1	Ring-Retaining, External
35	3296-42	1	Nut-Lock, NI
36	104-9774	1	Knob-Red
37	33103-025	1	Screw-HHF
38	33024-00	2	Nut-Lock
39	33114-045	4	Screw-HH
40	108-8647	1	Screw-HH, Lock
41	105-2443	1	Spring-Detent
42	104-2628	5	Screw-HWH

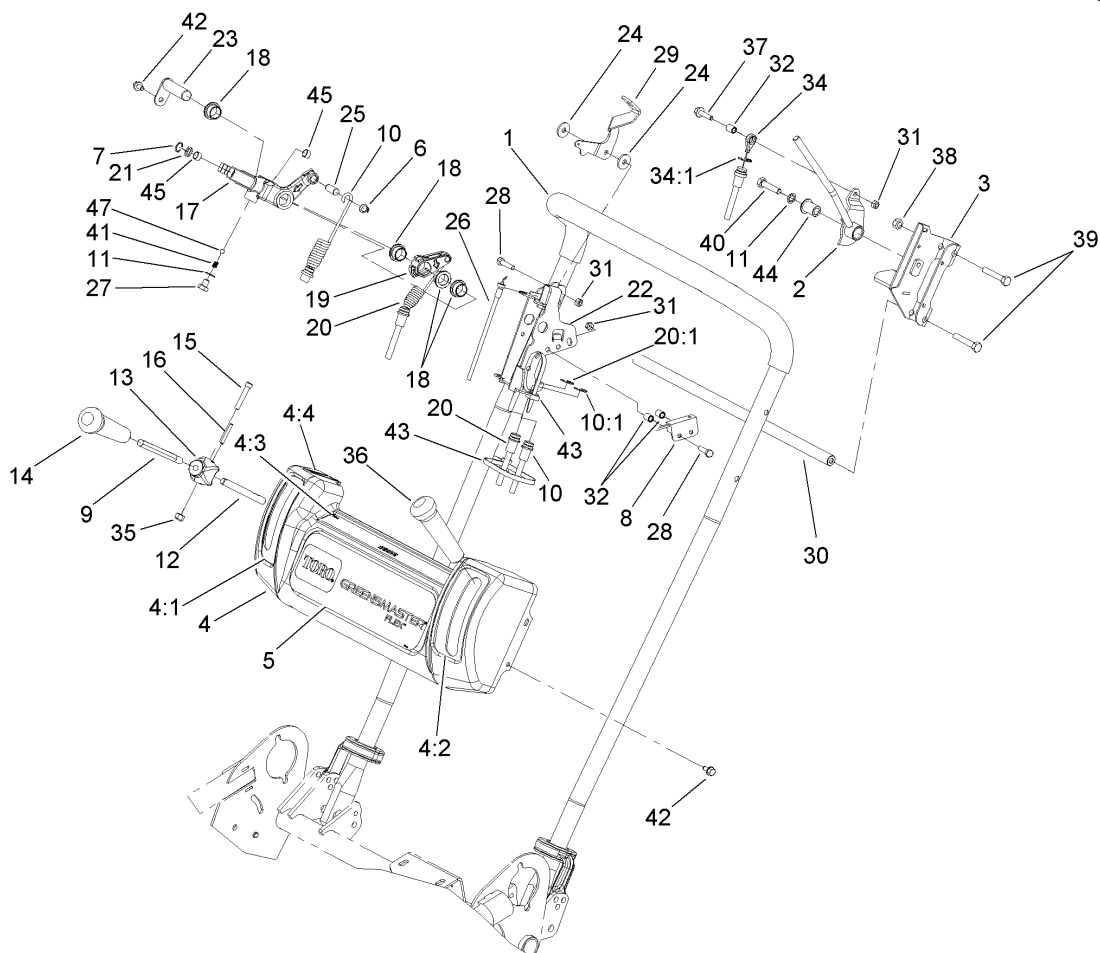


Handle Assembly (continued)

Ref	Part No.	Qty.	Description
43	3290-378	4	Tie-Cable
44	106-6135	1	Bushing-Flanged
45	99-6247	2	Bushing-Bronze
47	105-2442	1	Ball-Detent

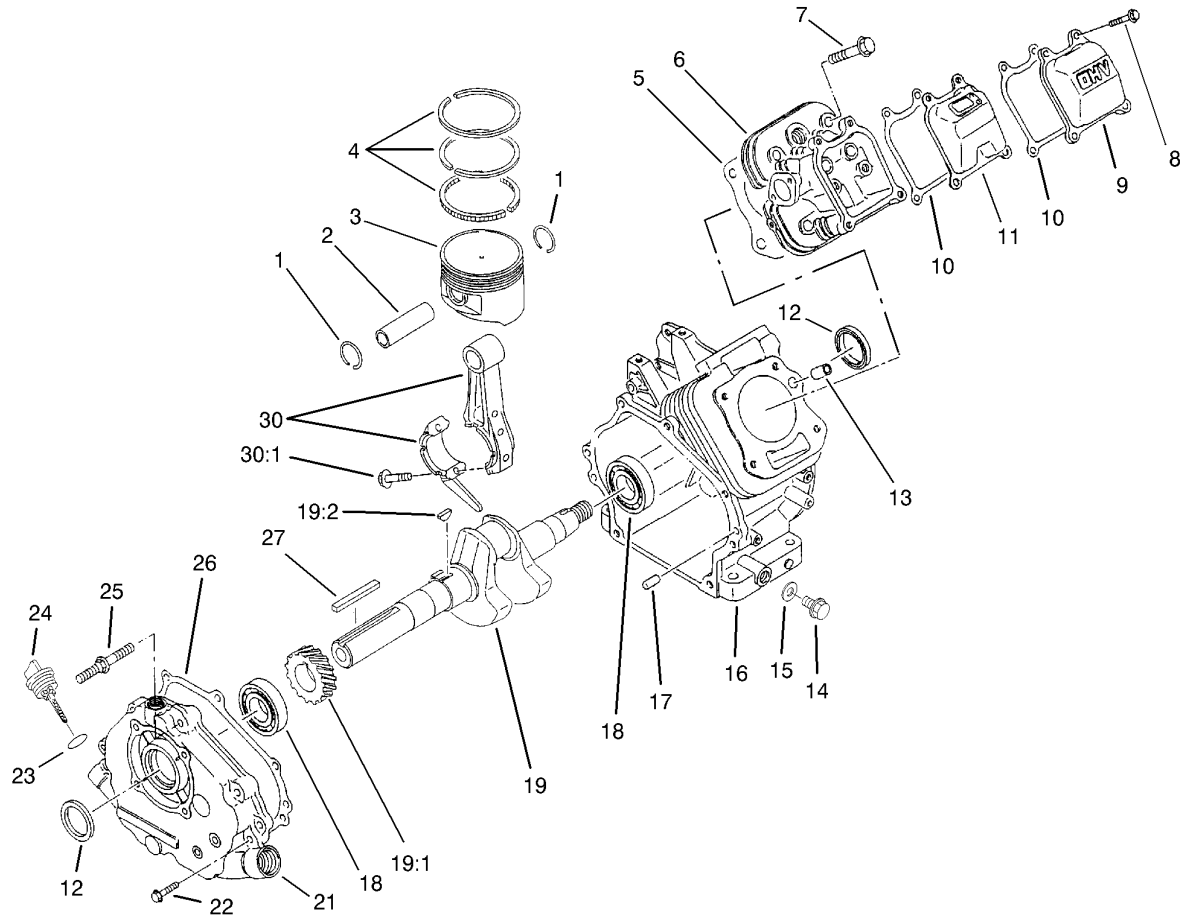


Crankcase Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	93-8500	2	Ring-Retaining	22	93-8521	7	Bolt-Flanged
2	93-8501	1	Pin-Piston	23	94-9041	2	O-Ring
3	93-8502	1	Piston	24	93-8523	2	Cap-Filter, Oil
3	94-6836	1	Piston-0.5 O/S	25	93-8524	1	Stud
4	93-8503	1	Set-Ring, Piston	26	93-8525	1	Gasket-Crankcase
4	94-6837	1	Set-Ring, Piston (.05Mm)	27	93-8526	1	Key
5	93-8504	1	Gasket-Head	30	93-8528	1	Connecting Rod ASM
6	93-8505	1	Head-Cylinder	30:1	93-8527	2	Bolt-Rod
7	93-8506	4	Bolt-Flanged				
8	94-6838	4	Bolt-Flanged				
9	93-8508	1	Case-Rocker				
10	93-8509	2	Gasket-Rocker				
11	93-8510	1	Breather				
12	93-8511	2	Seal-Oil				
13	93-8512	2	Pin				
14	93-8513	2	Plug-Drain				
15	93-8514	2	Gasket-Plug, Drain				
16	93-8515	1	Crankcase				
17	93-8516	2	Pin				
18	93-8517	2	Bearing-Ball				
19	93-8696	1	Crankshaft ASM				
19:1	94-9043	1	Gear-Helical				
19:2	93-8526	1	Key				
21	93-8697	1	Cover-Crankcase				

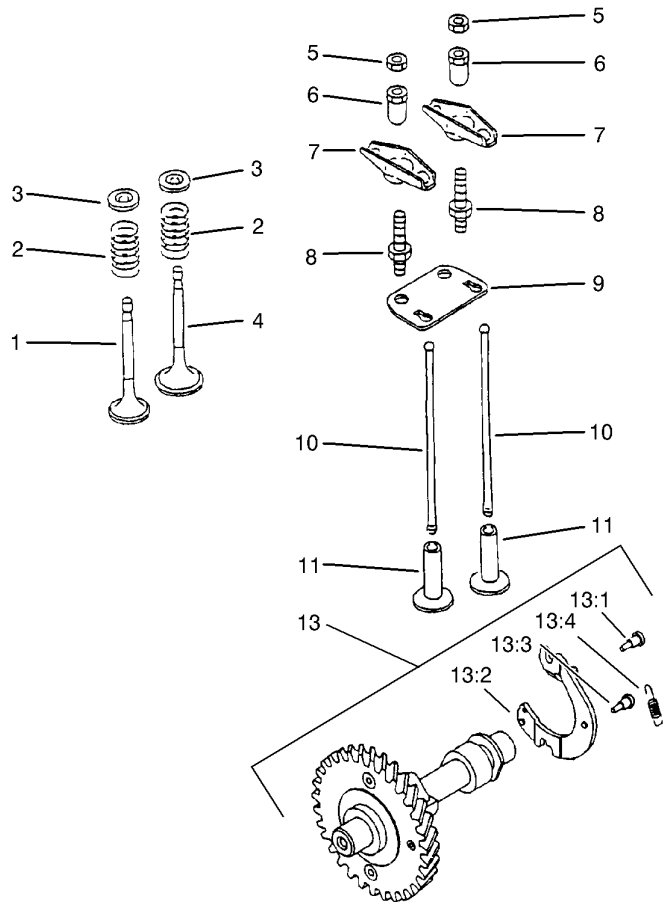

Camshaft and Valve Assembly


Ref	Part No.	Qty.	Description				
1	93-8529	1	Valve-Exhaust				
2	93-8530	2	Spring-Valve				
3	93-8531	2	Retainer-Spring				
4	93-8532	1	Valve-Intake				
5	93-8533	2	Nut				
6	93-8534	2	Nut				
7	93-8535	2	Arm-Rocker				
8	93-8536	2	Bolt				
9	93-8537	1	Guide				
10	93-8538	2	Rod-Push				
11	93-8539	2	Tappet				
13	93-8699	1	Camshaft ASM				
13:1	93-8540	2	Pin				
13:2	93-8543	1	Decompressor				
13:3	93-8542	1	Pin				
13:4	93-8541	1	Spring				

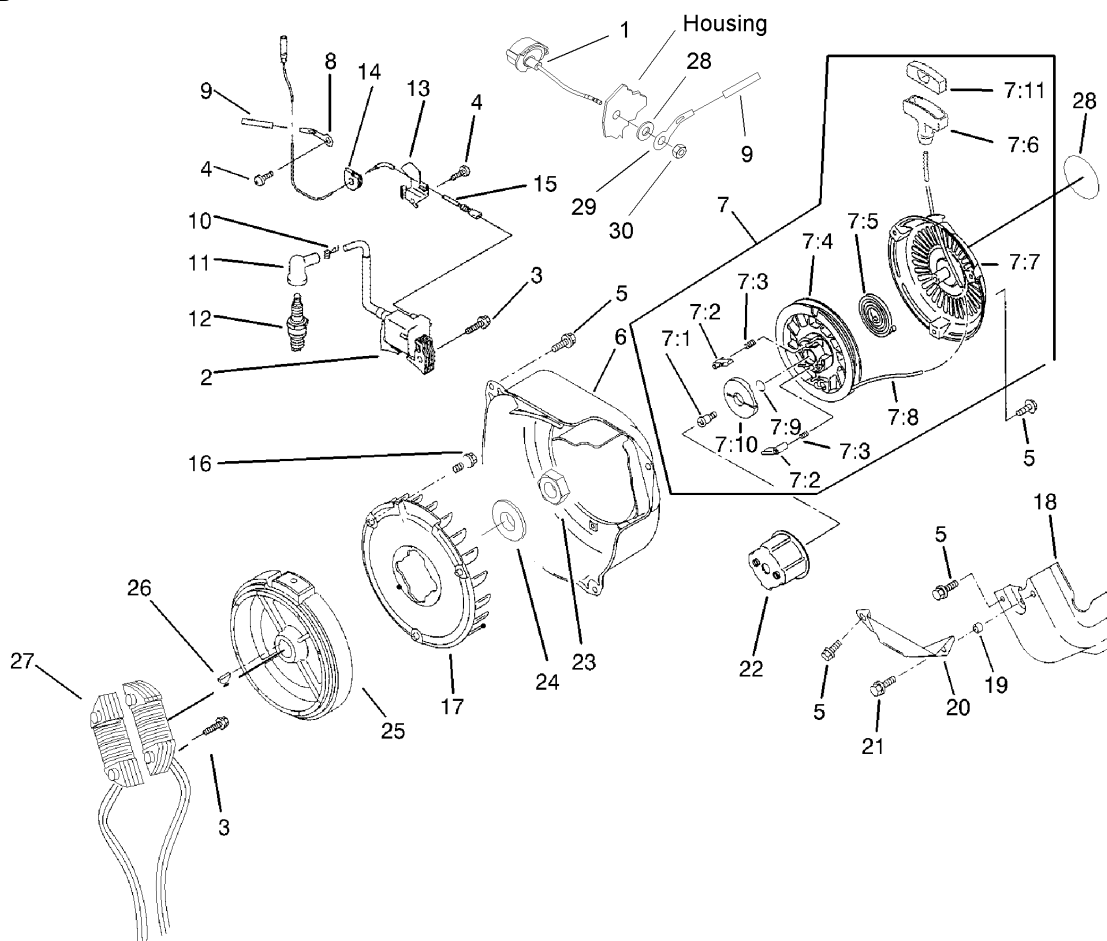

Ignition Assembly

Ref	Part No.	Qty.	Description
1	107-7606	1	Sealed Switch ASM
2	94-9031	1	Ignition Coil ASM
3	93-8548	6	Bolt-Flanged
4	93-8549	1	Screw
5	93-8550	10	Bolt-Flanged
6	107-7607	1	Housing-Fan
7	93-8552	1	Recoil Starter ASM
7:1	93-8553	1	Screw
7:2	93-8554	2	Pawl-Recoil
7:3	93-8555	2	Spring-Return
7:4	93-8556	1	Reel-Recoil
7:5	93-8557	1	Spring
7:6	94-9045	1	Grip-Starter, Recoil
7:7	94-9046	1	Case-Recoil
7:8	93-8560	1	Rope
7:9	93-8561	1	Ring-Retaining
7:10	93-8562	1	Guide-Pawl
7:11	94-9044	1	Cap-Grip
8	94-9039	1	Clamp
9	94-9040	2	Tube
10	94-9049	1	Spring-Terminal
11	93-8585	1	Cap-Plug, Spark
12	93-8584	1	Spark Plug
13	93-8583	1	Clamp


Ref	Part No.	Qty.	Description
14	107-7608	1	Grommet
15	94-9038	1	Wire-Lead
16	94-6840	3	Bolt-Flanged
17	93-8572	1	Fan
18	93-8563	1	Shroud-Engine
19	93-8564	1	Collar
20	93-8565	1	Shroud-Engine
21	93-8566	1	Bolt-Flanged
22	93-8567	1	Pulley-Recoil
23	93-8568	1	Nut
24	93-8569	1	Washer
25	99-6237	1	Flywheel ASM
26	93-8571	1	Key
27	99-4267	1	Coil-Lighting
28	33094-00	1	Washer-Plain
29	107-7609	1	Clamp
30	33014-00	1	Nut-Hex

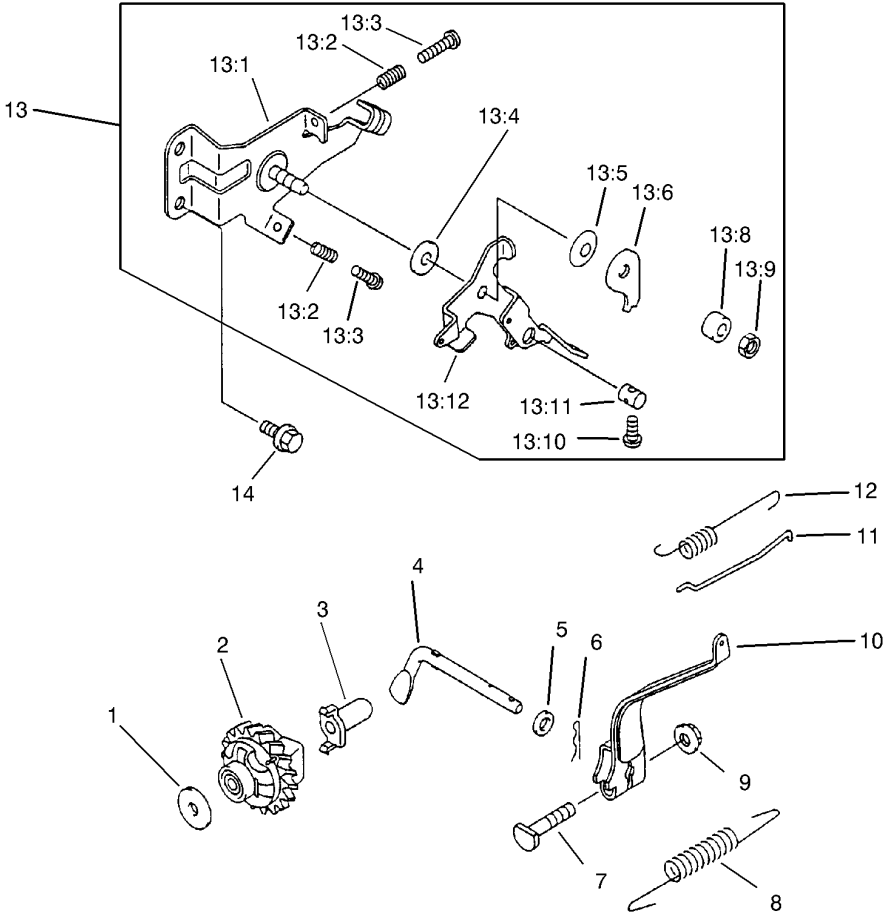

Governor Assembly

Ref	Part No.	Qty.	Description
1	94-6842	1	Washer
2	94-6841	1	Governor ASM
3	93-8610	1	Sleeve
4	93-8609	1	Arm-Pivot
5	93-8608	1	Washer
6	93-8607	1	Pin-Snap
7	93-8606	1	Bolt
8	94-9030	1	Spring-Governor
9	93-8631	1	Nut
10	93-8603	1	Arm-Governor
11	93-8602	1	Rod-Governor
12	93-8601	1	Spring
13	93-8599	1	Control ASM
13:1	93-8587	1	Bracket
13:2	93-8588	2	Spring
13:3	93-8589	2	Bolt
13:4	93-8590	1	Washer
13:5	93-8591	1	Spring
13:6	93-8592	1	Plate
13:8	93-8594	1	Spacer
13:9	93-8595	1	Nut
13:10	93-8596	1	Screw-Head, Pan
13:11	93-8597	1	Nut
13:12	93-8598	1	Lever


Ref	Part No.	Qty.	Description
14	93-8600	2	Bolt-Flanged

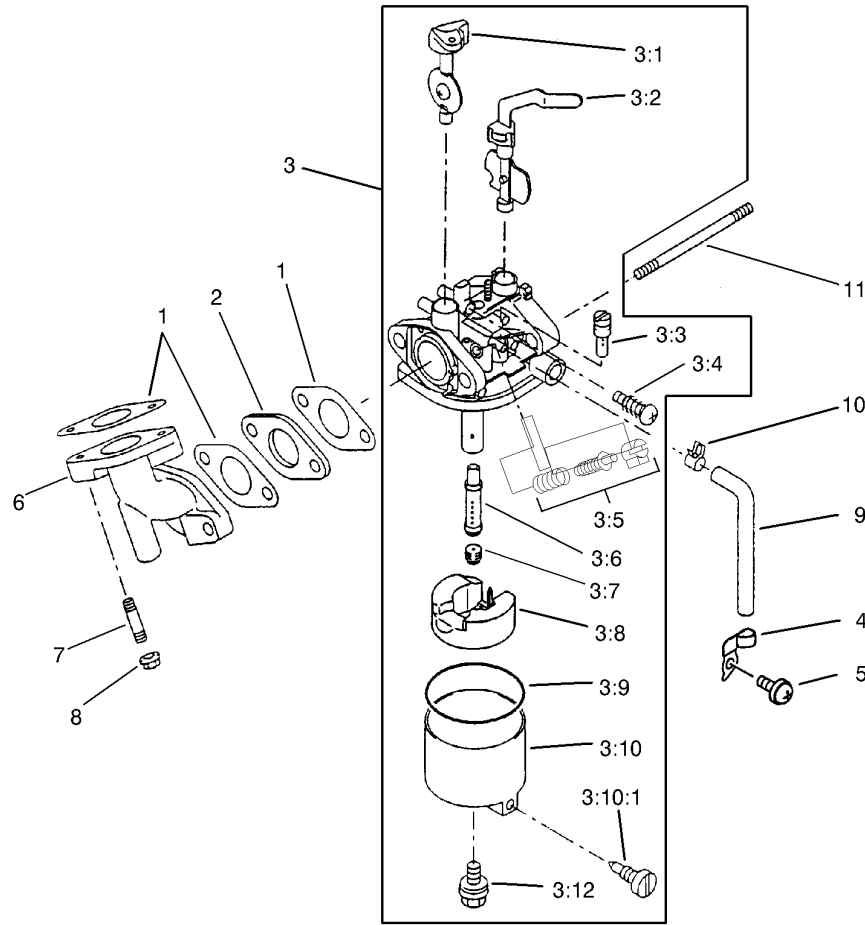

Carburetor Assembly


Ref	Part No.	Qty.	Description
1	93-8613	3	Gasket
2	94-9048	1	Insulator
3	94-9032	1	Carburetor ASM
3:1	94-9033	1	Throttle Valve ASM
3:2	93-8617	1	Valve-Choke
3:3	94-9037	1	Jet-Pilot, #40
3:4	93-8619	1	Screw ASM
3:5	94-9034	1	Limiter
3:6	94-9035	1	Nozzle-Main
3:7	94-9036	1	Jet-Main, #65
3:7	98-8736	1	Jet-Main, #60 High Alt
3:7	98-8735	1	Jet-Main, #62 High Alt
3:8	94-6844	1	Float ASM
3:9	93-8624	1	Gasket
3:10	93-8625	1	Float Chamber ASM
3:10:1	93-8626	1	Screw ASM
3:12	93-8627	1	Bolt
4	94-6846	1	Clamp
5	94-6845	1	Screw
6	93-8633	1	Pipe-Intake
7	93-8632	2	Bolt-Stud
8	93-8631	2	Nut
9	93-8630	1	Tube
10	93-8629	1	Clamp

Ref	Part No.	Qty.	Description
11	93-8628	1	Bolt-Stud

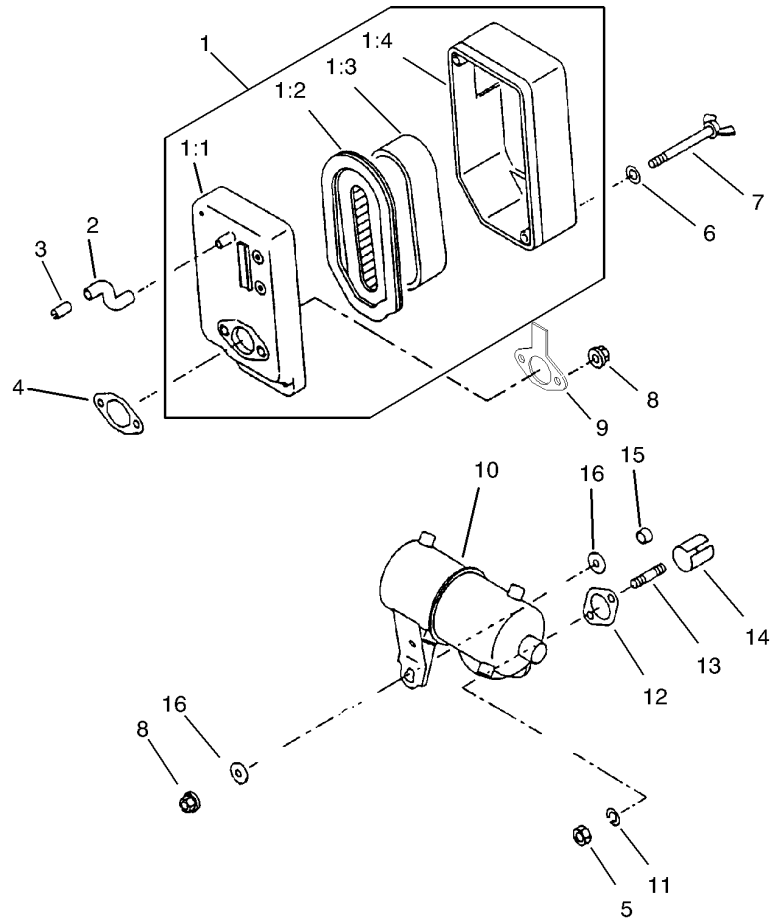

Air Cleaner and Muffler Assembly

Ref	Part No.	Qty.	Description				
1	93-8634	1	Air Filter ASM				
1:1	93-8635	1	Case Filter ASM				
1:2	93-8636	1	Element-Filter, Air				
1:3	93-8637	1	Element-Filter, Air				
1:4	93-8638	1	Cap-Filter, Air				
2	93-8659	1	Tube				
3	93-8658	1	Pipe				
4	93-8657	1	Gasket-Filter, Air				
5	93-8656	2	Nut-Hex				
6	93-8639	2	Washer				
7	93-8640	2	Bolt				
8	93-8631	3	Nut				
9	93-8642	1	Plate-Filter, Air				
10	98-3427	1	Muffler				
11	93-8655	2	Washer-Spring				
12	93-8654	1	Gasket-Muffler				
13	94-6848	2	Bolt-Stud				
14	93-8652	1	Pipe-Exhaust				
15	93-8651	1	Collar				
16	93-8650	2	Washer				

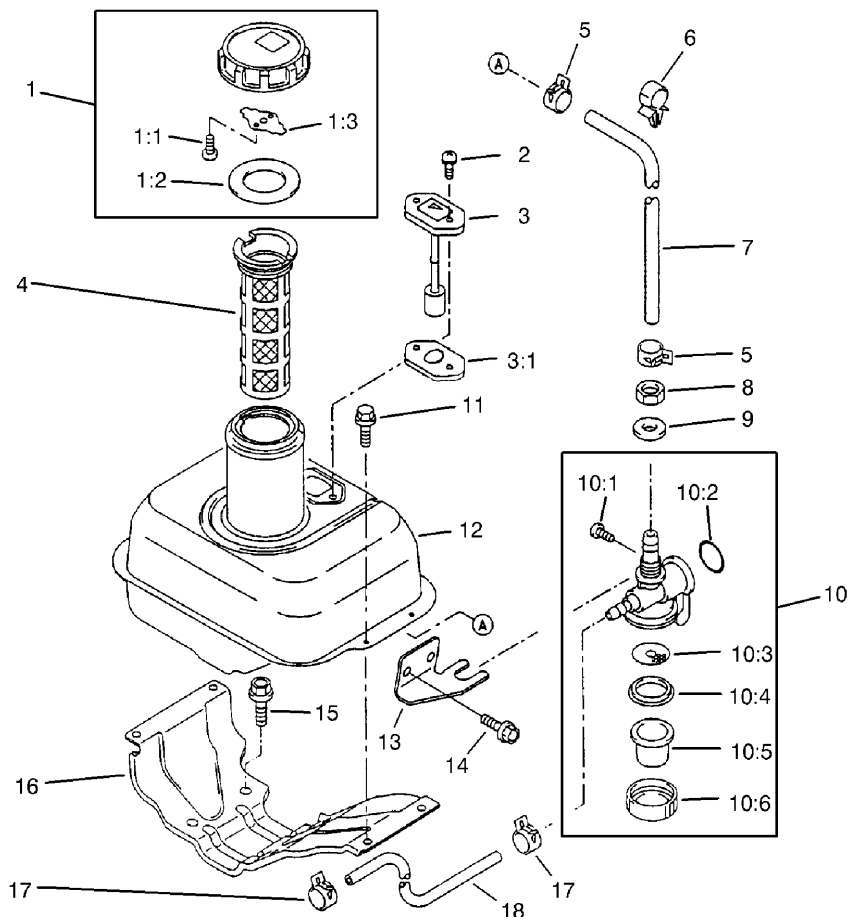

Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	93-8660	1	Fuel Cap ASM
1:1	93-8661	2	Screw
1:2	93-8662	1	Gasket
1:3	93-8663	1	Spring
2	93-8686	2	Screw
3	93-8685	1	Gauge-Fuel
3:1	104-2384	1	Gasket-Gauge, Fuel
4	94-6826	1	Filter-Fuel
5	93-8664	2	Clamp
6	93-8665	1	Clamp
7	93-8666	1	Tube
8	94-9042	1	Nut
9	93-8668	1	Washer
10	93-8669	1	TAP ASM
10:1	93-8670	1	Screw
10:2	93-8671	1	O-Ring
10:3	94-6849	1	Filter-TAP
10:4	93-8673	1	Gasket
10:5	93-8674	1	Cup-TAP
10:6	93-8675	1	Nut
11	94-6838	4	Bolt-Flanged
12	104-2382	1	Tank-Fuel
13	93-8681	1	Bracket
14	93-8680	2	Bolt-Flanged

Ref	Part No.	Qty.	Description
15	94-6825	4	Bolt-Flanged
16	104-2383	1	Bracket-Tank
17	93-8676	2	Clamp
18	93-8677	1	Tube

Attachments and Accessories

For 04018 - Greensmaster Flex 18

Product Name	Model/Part
Light Kit	04057
Out Front Brush Kit	04119
Wheel Kit	04123
Cutting Unit	04206
Operator Presence Kit	105-5333
Spark Arrester Kit	98-3426

NOTES

NOTES

NOTES

