



Super Recycler[®] Lawn Mower

Model No. 20062 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	 3	Air Cleaner Assembly Briggs and Stratton	
Housing Assembly No. 112-8862	 4	126T07-0204-E1	 16
Height-of-Cut Assembly	 5	Governor Assembly Briggs and Stratton	
Transmission Assembly	 6	126T07-0204-E1	 17
Gear Case Assembly No. 108-8140	 7	Muffler and Fuel Tank Assembly Briggs and	
Engine and Blade Assembly	 8	Stratton 126T07-0204-E1	 18
Handle Assembly	 9	Blower Housing Assembly Briggs and Stratton	
Electrical Assembly	 10	126T07-0204-E1	 19
Grass Bag Assembly	 11	Starter Assembly Briggs and Stratton 126T07-	
Cylinder Assembly Briggs and Stratton		0204-E1	 20
126T07-0204-E1	 12	Electric Starter Assembly Briggs and Stratton	
Crankshaft Assembly Briggs and Stratton		126T07-0204-E1	 21
126T07-0204-E1	 13	Gasket Kit Briggs and Stratton 126T07-0204-	
Crankcase Assembly Briggs and Stratton		E1	 22
126T07-0204-E1	 14	Carburetor Overhaul Kit Briggs and Stratton	
Carburetor Assembly Briggs and Stratton		126T07-0204-E1	 23
126T07-0204-E1	 15	Attachments and Accessories List	 24


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread
GA. gauge	forming
HD. heavy-duty	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over protection system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread	TAP. self tapping
forming	TTH. torx truss head

Footnotes


- | | |
|---|--|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Briggs & Stratton dealer | ❹ Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❺ Included in Engine Gasket Set (Ref. No. 358) | ❻ Included in Carburetor Gasket Set (Ref. No. 977) |

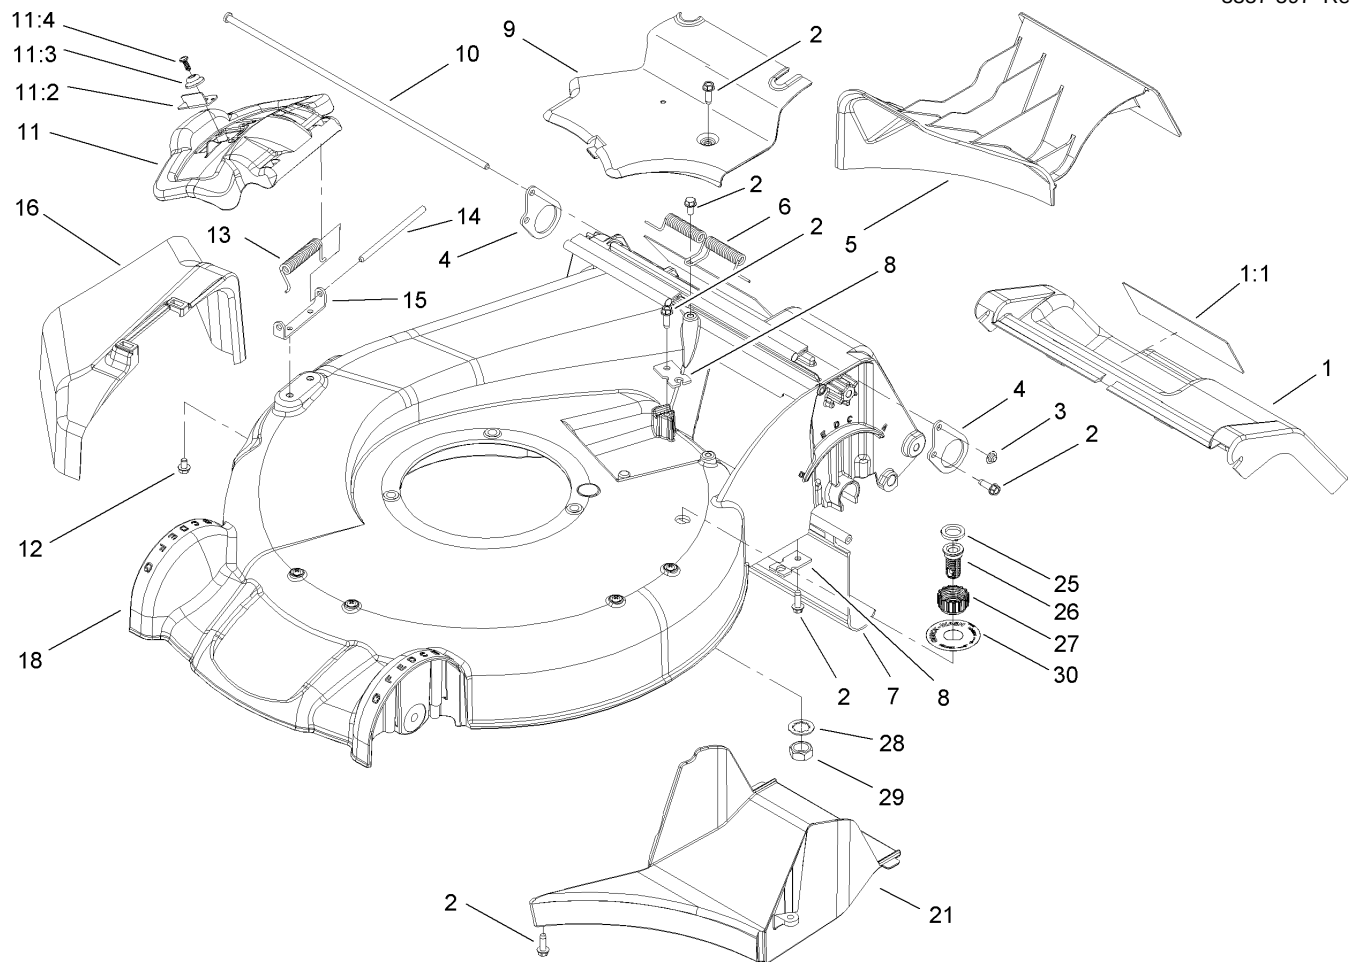

Housing Assembly


Ref	Part No.	Qty.	Description
1	108-8169	1	Door-Service
1:1	105-1295	1	Decal-Warning
2	49-2040	7	Screw-HWHTF
3	3290-337	1	Nut-Speed
4	107-7493	2	Plate-Support, Door
5	107-7490	1	Plug-Mulch
6	105-3032	1	Spring-Door, Rear
7	114-1586	1	Shield-Trailing
8	107-7497	1	Bracket-Cable, Traction
9	107-7494	1	Cover-Belt
10	107-7499	1	Rod-Support, Door
11	107-3717	1	Discharge Door ASM
11:2	107-0795	1	Latch-Door
11:3	107-7456	1	Cap-Door
11:4	107-7461	1	Screw-Plastite
12	99-8445	2	Screw-HWH
13	99-5293	1	Spring-Torsion
14	99-5291	1	Rod-Cover
15	112-6416	1	Bracket-Cover
16	108-3753	1	Chute-Discharge, Side
18	112-8862	1	Housing ASM
21	107-7495	1	Tunnel-Discharge
25	112-6438	1	Washer-Seal, Washout Port
26	112-6400	1	Port-Washout

Ref	Part No.	Qty.	Description
27	112-6401	1	Coupling-Hose, Washout Port
28	3254-5	1	Washer-Tooth
29	3218-6	1	Nut-Jam
30	112-8868	1	Decal-Washout Port

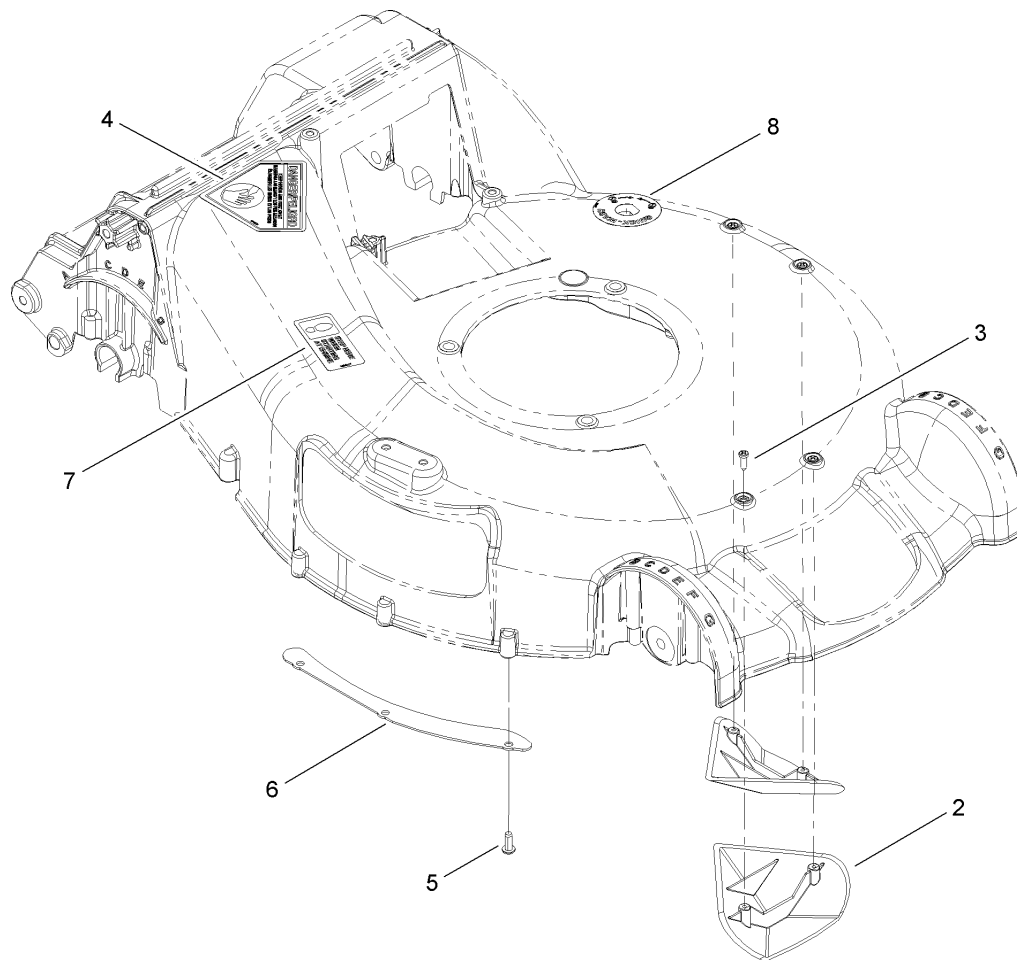


Housing Assembly No. 112-8862

Ref	Part No.	Qty.	Description				
2	108-3798	2	Kicker-Housing				
3	32144-111	4	Screw-PPH				
4	94-8072	1	Decal-Danger				
5	63-8590	3	Screw				
6	105-1316-03	1	Sheet-Lip				
7	108-8117	1	Decal-Placement, Foot				
8	112-8867	1	Decal-Washout Port, Trilingual				

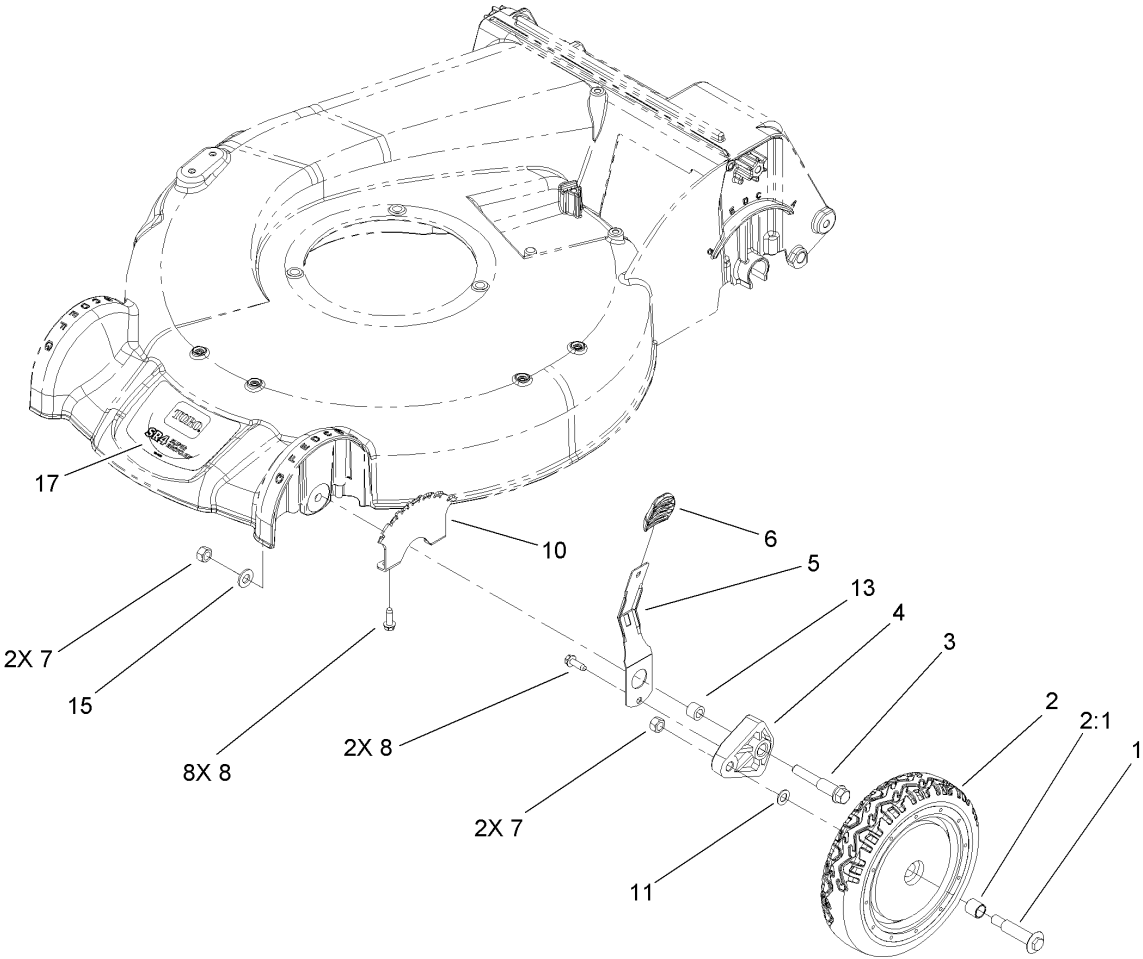

Height-of-Cut Assembly


Ref	Part No.	Qty.	Description				
1	92-1057	2	Bolt-Shoulder				
2	107-3708	2	Wheel ASM				
2:1	27-6250	2	Bushing				
3	107-7498	2	Screw-Shoulder, HOC				
4	107-7492	2	Arm-Pivot				
5	107-7491	2	Arm-Spring				
6	105-3042	2	Knob-Lever, HOC				
7	603773	4	Nut				
8	49-2040	10	Screw-HWHTF				
10	107-7478	4	Plate-HOC				
11	40-1940	2	Washer				
13	52-2480	2	Spacer-Wheel				
15	3256-24	2	Washer-Flat				
17	108-8168	1	Decal				

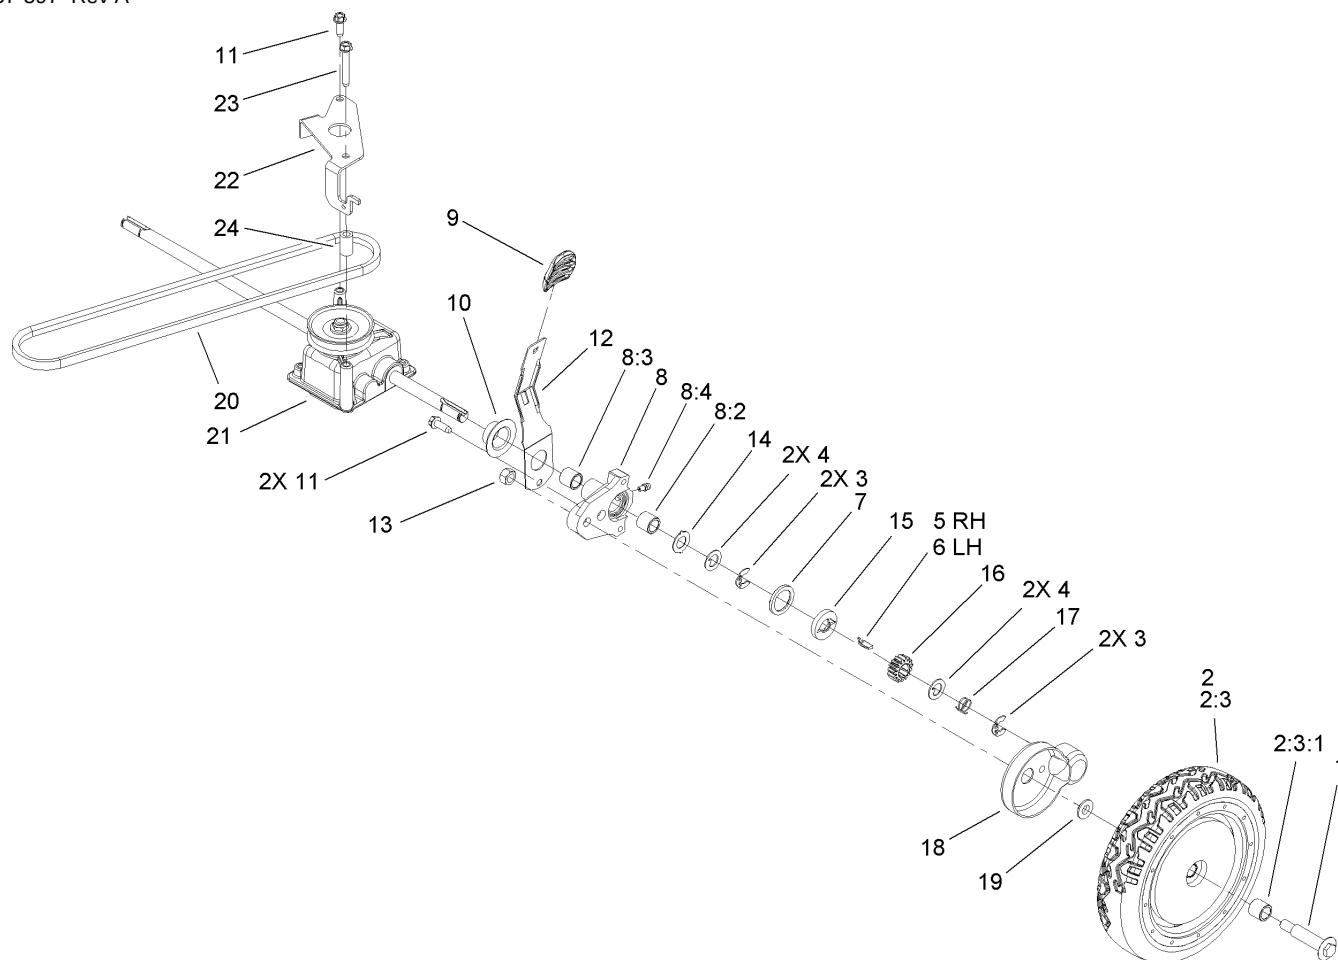

Transmission Assembly


Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3709	2	Wheel Gear ASM
2:3		1	Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
5	66-6040	1	Key-Rocking, RH
6	66-6050	1	Key-Rocking, LH
7	65-4710	2	Ring-Friction
8	100-8774	2	Pivot Arm ASM
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
8:4	302-56	1	Fitting-Grease
9	105-3042	2	Knob-Lever, HOC
10	42-3520	2	Cap-End
11	49-2040	3	Screw-HWHTF
12	107-7491	2	Arm-Spring
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover, Wheel

Ref	Part No.	Qty.	Description
20	99-1597	1	V-Belt
21	108-8140	1	Gear Case ASM
22	107-7483-03	1	Bracket-Gearbox
23	92-1616	1	Screw-HWHTF
24	614673	1	Bushing-Plate, Actuator

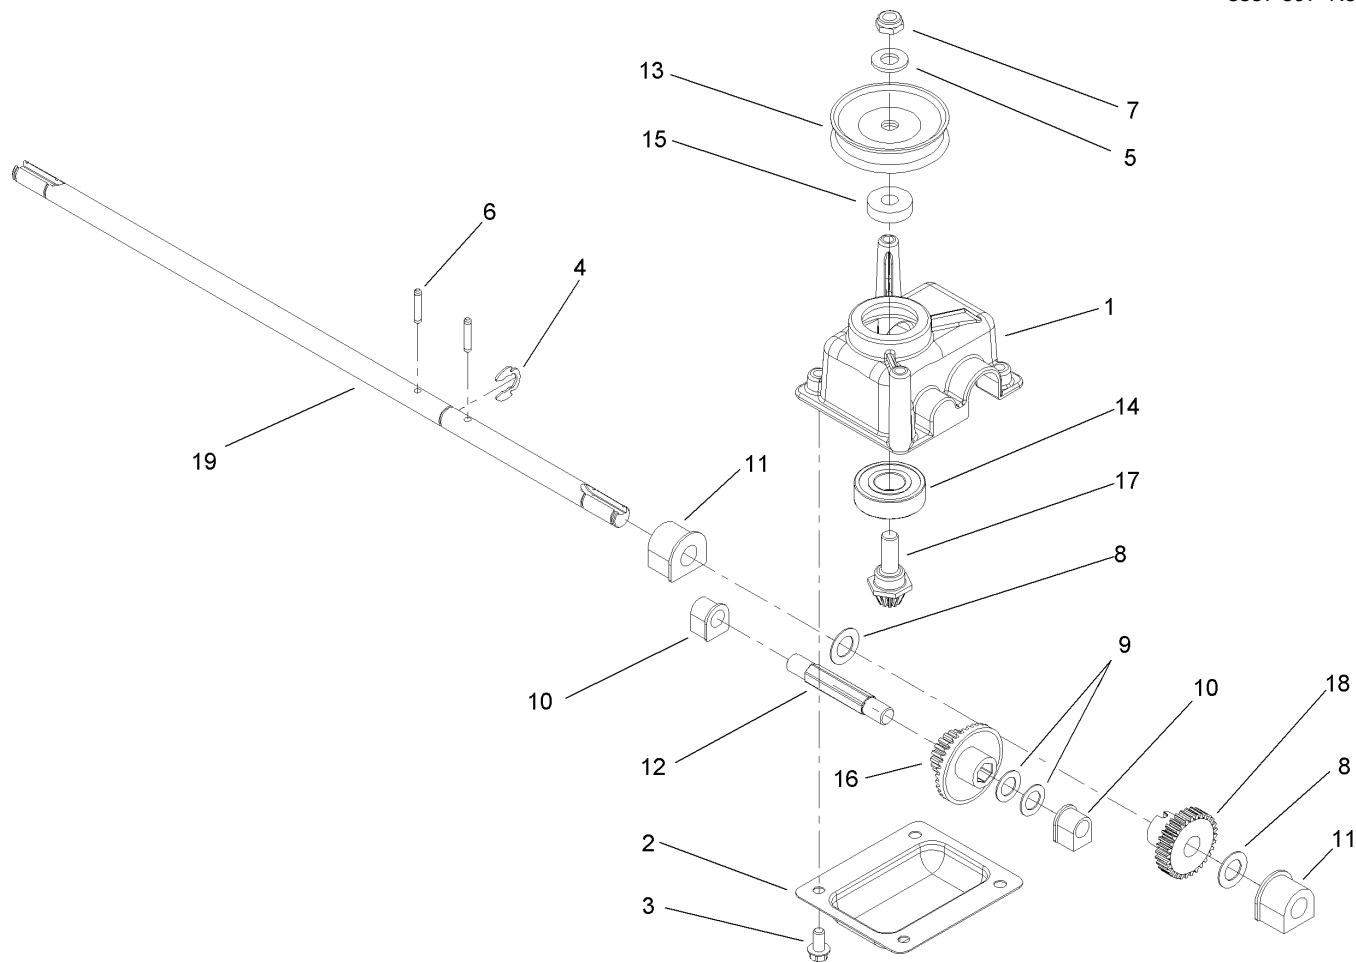


Gear Case Assembly No. 108-8140

Ref	Part No.	Qty.	Description				
1	104-7619	1	Case-Gear				
2	614668-03	1	Cover-Case, Gear				
3	32144-4	4	Screw-HWH				
4	32151-68	1	Ring-Retaining				
5	3256-24	1	Washer-Flat				
6	3285-19	2	Pin-Groove				
7	3296-5	1	Nut-Lock				
8	36-4780	2	Washer				
9	36-4791	2	Washer-Thrust				
10	60-8750	2	Bushing				
11	60-8850	2	Bushing				
12	614696	1	Shaft-Intermediate				
13	100-1176	2	Pulley-Half				
14	100-1048	1	Bearing-Ball				
15	62-6660	1	Spacer				
16	104-1005	1	Gear-19T Spur, 37T Bevel				
17	104-7667	1	Gear-Pinion, Bevel				
18	104-1004	1	Gear-30T				
19	108-8141	1	Shaft-Output				

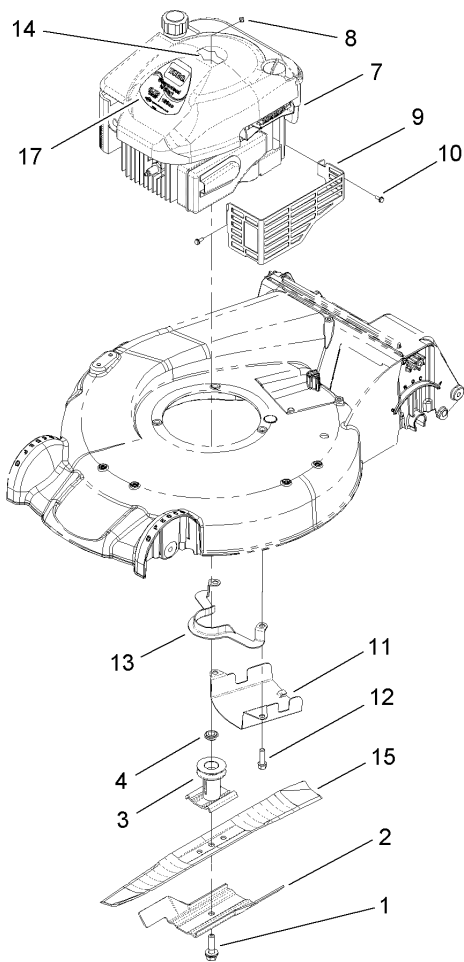

Engine and Blade Assembly


Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	105-6848-03	1	Accelerator-Blade				
3	106-3987	1	Blade Driver ASM				
4	106-3999	1	Spacer-Driver				
2 5 7		1	Engine-Briggs & Stratton, 126T07-0204-E1				
8	2210-316	1	Stop-Rope				
9	104-7577-03	1	Shield-Muffler				
10	32144-1	3	Screw-Taptite				
11	107-7489-03	1	Shield-Grass				
12	95-1727	3	Screw-Taptite				
13	108-8110-03	1	Guide-Belt				
14	108-8130	1	Decal-Recoil				
15	108-3762-03	1	Blade-Recycling				
17	114-0339	1	Decal-Engine				

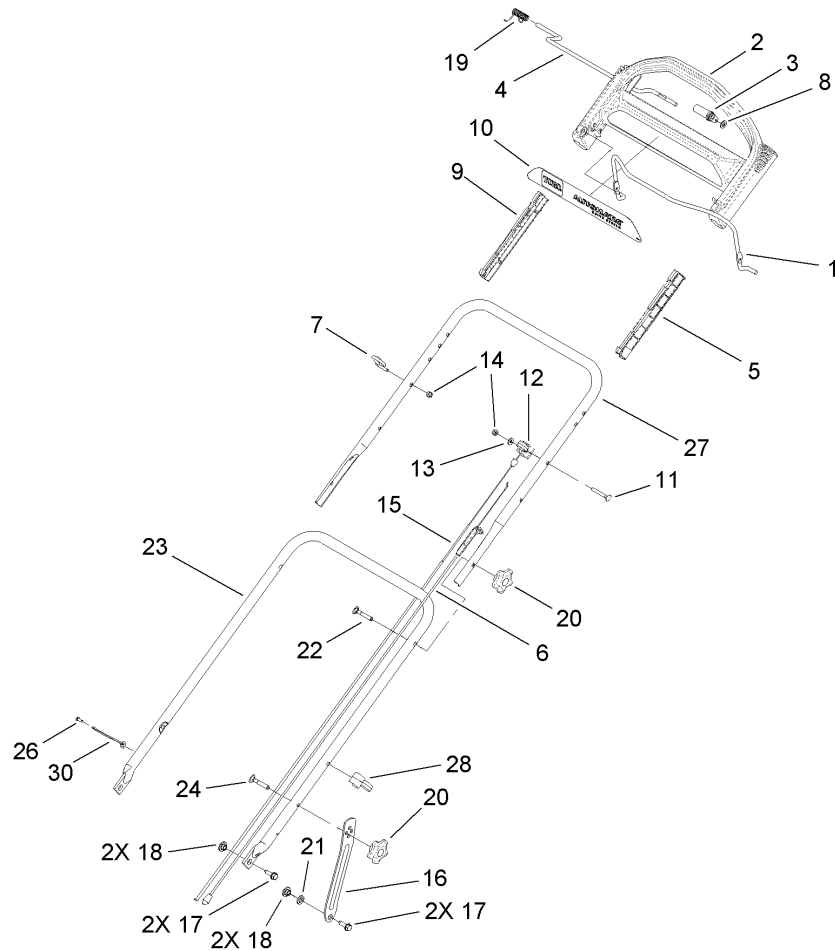

Handle Assembly


Ref	Part No.	Qty.	Description
1	104-8679-03	1	Bail-Brake
2	104-8678	1	Handle-Control
3	99-1589	1	Lever-Traction
4	99-1588	1	Bar-Control, Traction
5	105-6842	1	Guide-LH
6	108-8157	1	Cable-Brake
7	86-9671	1	Guide-Rope
8	3256-23	1	Washer-Flat
9	105-6841	1	Guide-RH
10	108-8134	1	Decal-Handle
11	321-50	1	Screw-HH
12	99-5239	1	Anchor-Cable
13	3256-1	1	Washer-Flat
14	3296-73	2	Nut-Lock, NI
15	108-8158	1	Cable-Traction
16	108-8145-03	2	Support-Handle
17	701243	4	Screw-HWHTF
18	27-6600	4	Spacer-Coupling
19	104-8690	1	Spring-Torsion
20	108-8162	4	Knob-Locking
21	55-9670	2	Washer
22	92-2260	2	Screw-Handle
23	107-7476-05	1	Handle-Lower
24	92-2260	2	Screw-Handle

Ref	Part No.	Qty.	Description
26	32144-53	1	Screw-SHWH
27	107-3783-05	1	Handle-Upper
28	106-6805	1	Guide-Cable
30	108-9452	1	Hook-Rope, Displacement

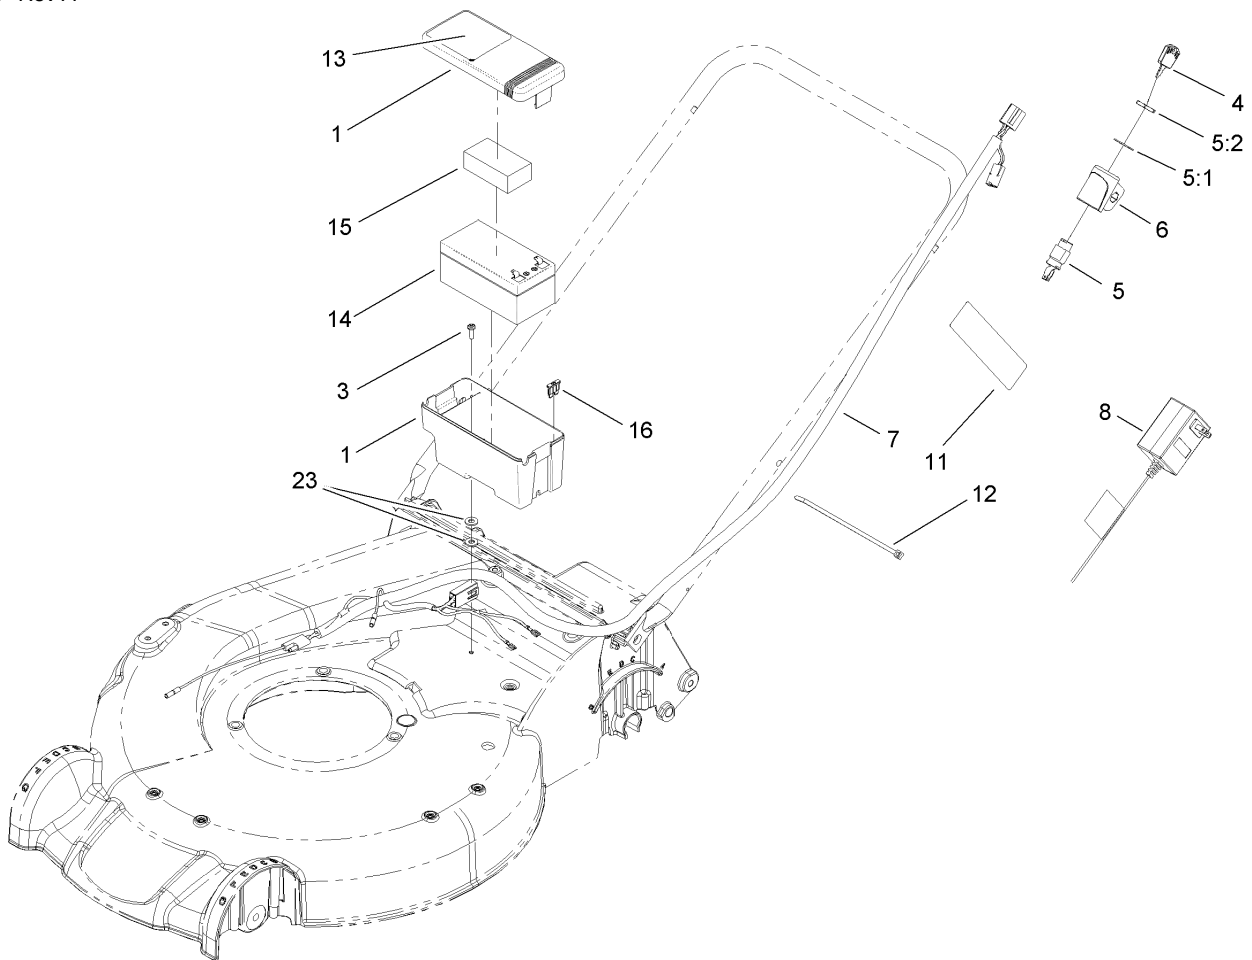

Electrical Assembly

Ref	Part No.	Qty.	Description				
1	108-4844	1	Battery Box ASM				
3	32144-32	1	Screw				
4	700918	1	Key				
5	46-5780	1	Switch-Starter				
5:1	3254-5	1	Washer-Tooth				
5:2	218-461	1	Nut-HH				
6	108-9760	1	Mount-Switch				
7	114-2625	1	Harness-Wire				
8	104-7401	1	Charger-12 Volt				
11	104-7953	1	Decal-Harness				
12	614249	2	Strap-Tie				
13	108-4791	1	Decal-Instructional				
14	106-8397	1	Battery-12 Volt				
15	107-3774	1	Foam-Battery, Top				
16	99-6124	2	Fuse-40 Amp				
23	3256-22	2	Washer-Flat				

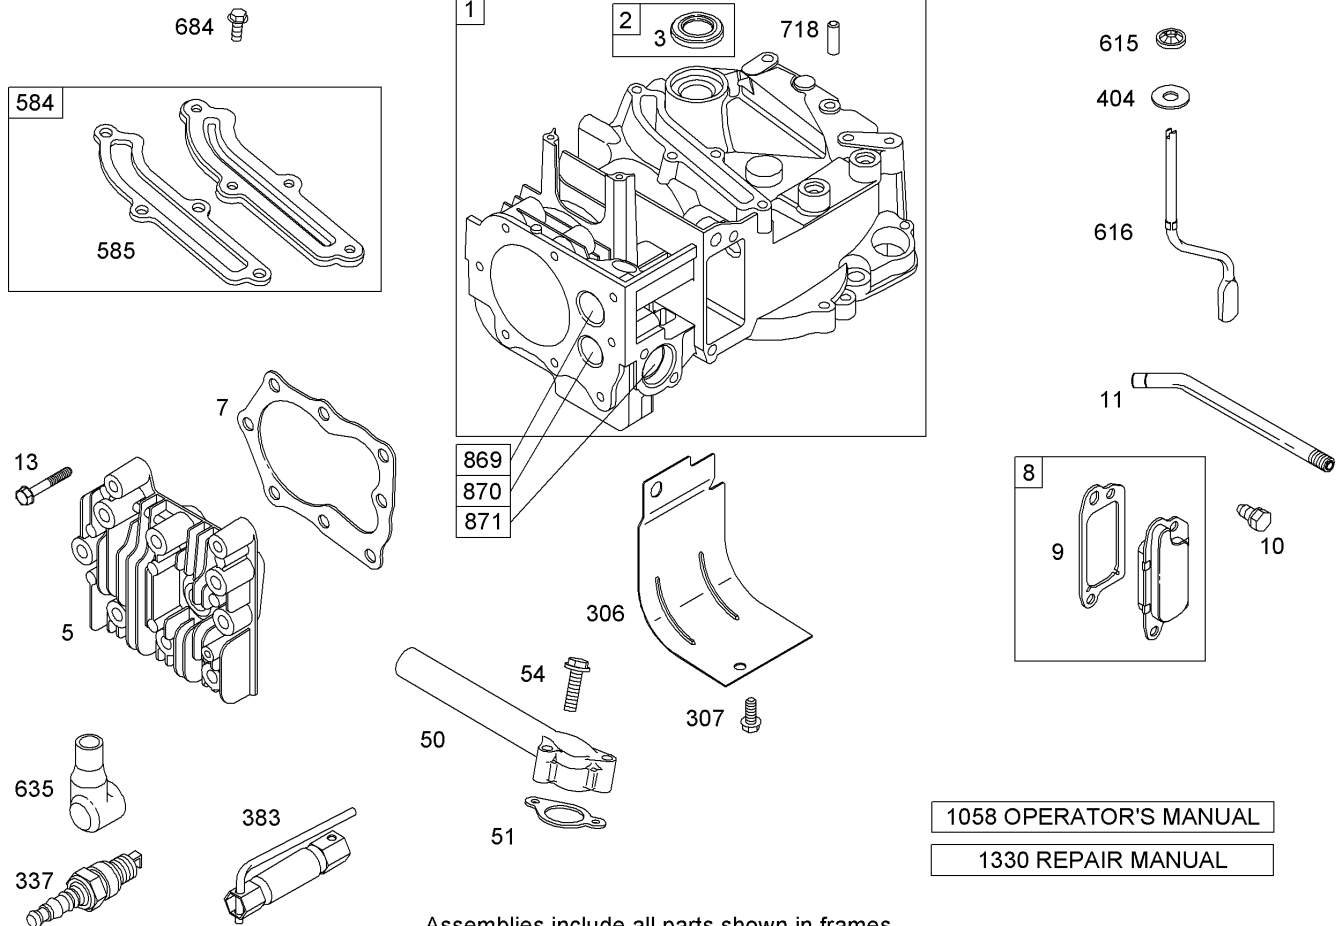


Assemblies include all parts shown in frames

Cylinder Assembly

Briggs and Stratton 126T07-0204-E1

Ref	Part No.	Qty.	Description
1	697322	1	Cylinder ASM
2	399269	1	Bushing Seal Kit
3	299819s	1	Seal-Oil (Magneto Side)
5	691160	1	Head-Cylinder
7	692249	1	Gasket-Head, Cylinder
8	695250	1	Breather ASM
9	699472	1	Gasket-Breather
10	691125	1	Screw (Breather ASM)
11	691781	1	Tube-Breather
13	690912	1	Screw (Cylinder Head)
50	497465	1	Manifold-Intake
51	272199s	1	Gasket-Intake
54	691650	1	Screw (Intake Manifold)
306	690450	1	Cylinder Shield
307	690345	1	Screw (Cylinder Shield)
337	802592s	1	Plug-Spark
383	89838s	1	Wrench-Spark Plug
404	690272	1	Washer (Governor Crank)
584	697734	1	Cover-Passage, Breather
585	691879	1	Gasket-Passage, Breather
615	690340	1	Retainer-Shaft, Governor
616	698801	1	Crank-Governor
635	66538s	1	Boot-Spark Plug
684	690345	1	Screw (Breather Passage Cover)


Ref	Part No.	Qty.	Description
718	690959	1	Pin-Locating
869	691155	1	Seat-Valve (Intake)
870	690380	1	Seat-Valve (Exhaust)
871	262001	1	Bushing-Guide (Exhaust)
871	63709	1	Bushing-Guide (Intake)
1058	MS3260	1	Operator's Manual
1330	270962	1	Repair Manual

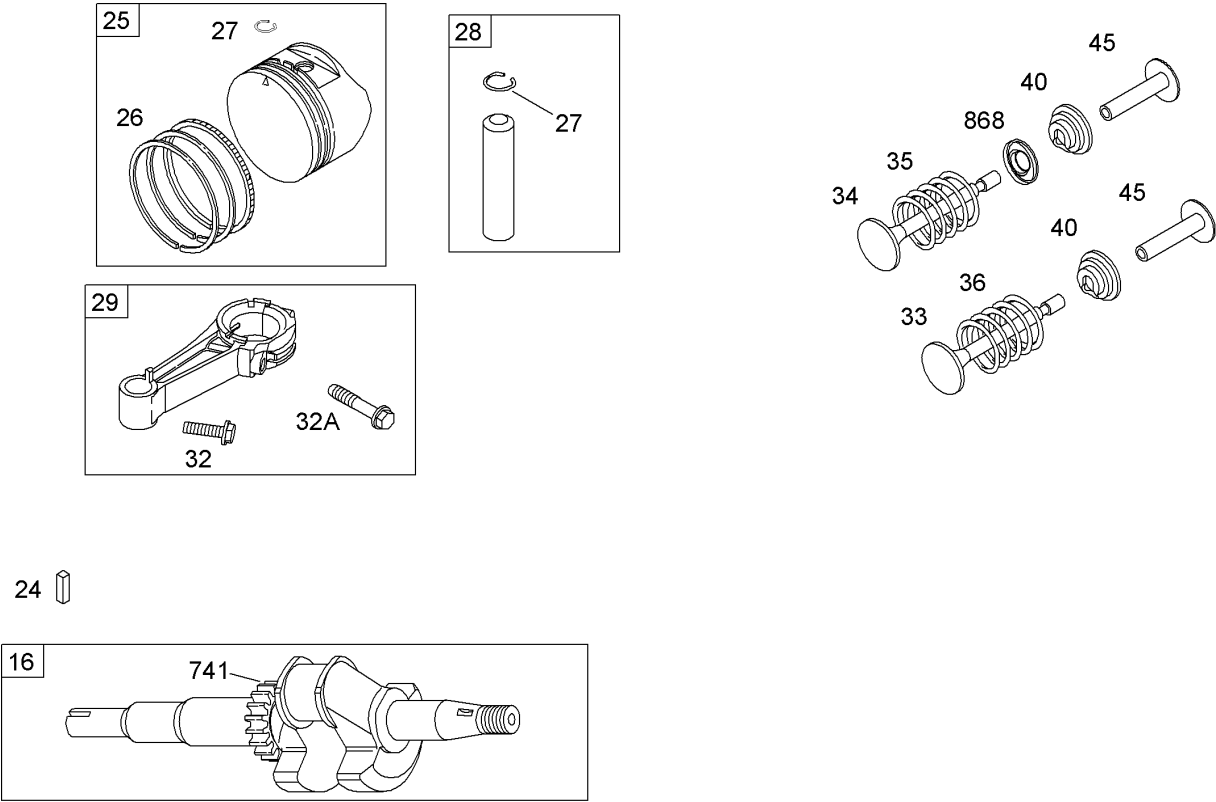

Assemblies include all parts shown in frames

Crankshaft Assembly
Briggs and Stratton 126T07-0204-E1

Ref	Part No.	Qty.	Description				
16	696009	1	Crankshaft				
24	222698s	1	Key-Flywheel				
25	790359	1	Piston ASM (STD)				
25	791326	1	Piston ASM (.020 O S)				
26	790360	1	Ring Set (STD)				
26	791324	1	Ring Set (.020 O S)				
27	691866	1	Lock-Pin, Piston				
28	499423	1	Pin-Piston (STD)				
29	499424	1	Rod-Connecting (STD)				
32	691664	1	Screw (Connecting Rod)				
32A	695759	1	Screw (Connecting Rod)				
33	262651s	1	Valve-Exhaust				
34	262652s	1	Valve-Intake				
35	691270	1	Spring-Valve (Intake)				
36	691270	1	Spring-Valve (Exhaust)				
40	692194	1	Retainer-Valve				
45	690548	1	Tappet-Valve				
741	790345	1	Gear-Timing				
868	697338	1	Seal-Valve				

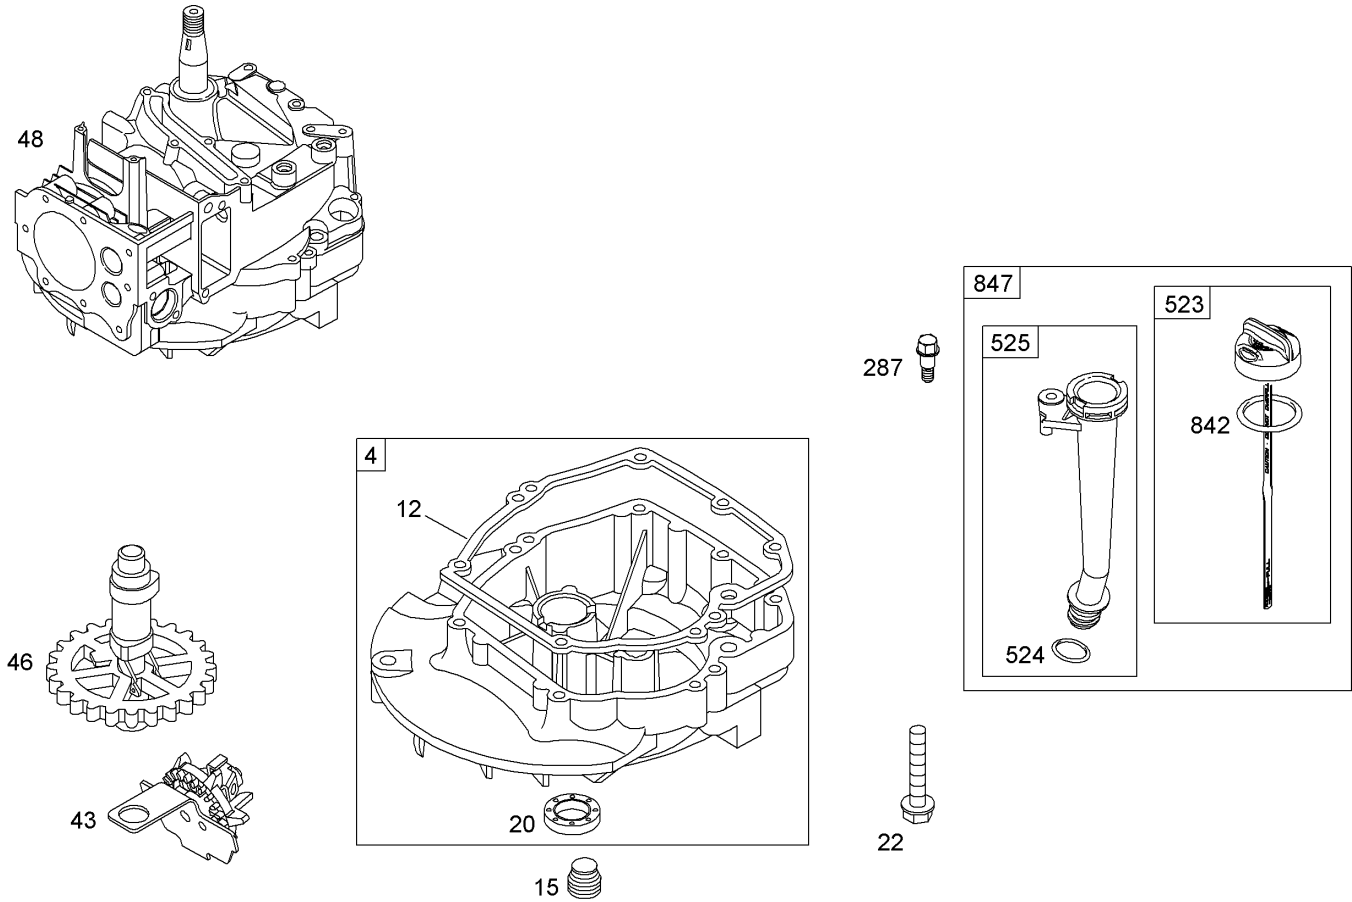


Assemblies include all parts shown in frames

Crankcase Assembly

Briggs and Stratton 126T07-0204-E1

Ref	Part No.	Qty.	Description				
4	493279	1	Sump-Engine				
12	692232	1	Gasket-Crankcase (.015 STD)				
15	691680	1	Plug-Drain, Oil				
20	399781s	1	Seal-Oil				
22	691092	1	Screw (Engine Sump)				
43	691997	1	Slinger-Governor, Oil				
46	691449	1	Camshaft				
48	792742	1	Short Block ASM				
287	690940	1	Screw (Dipstick Tube)				
523	499621	1	Dipstick				
524	692296	1	Seal, O-Ring (Dipstick Tube)				
525	495265	1	Tube-Dipstick				
842	691031	1	Seal, O-Ring (Dipstick Tube)				
847	692047	1	Dipstick Tube ASM				

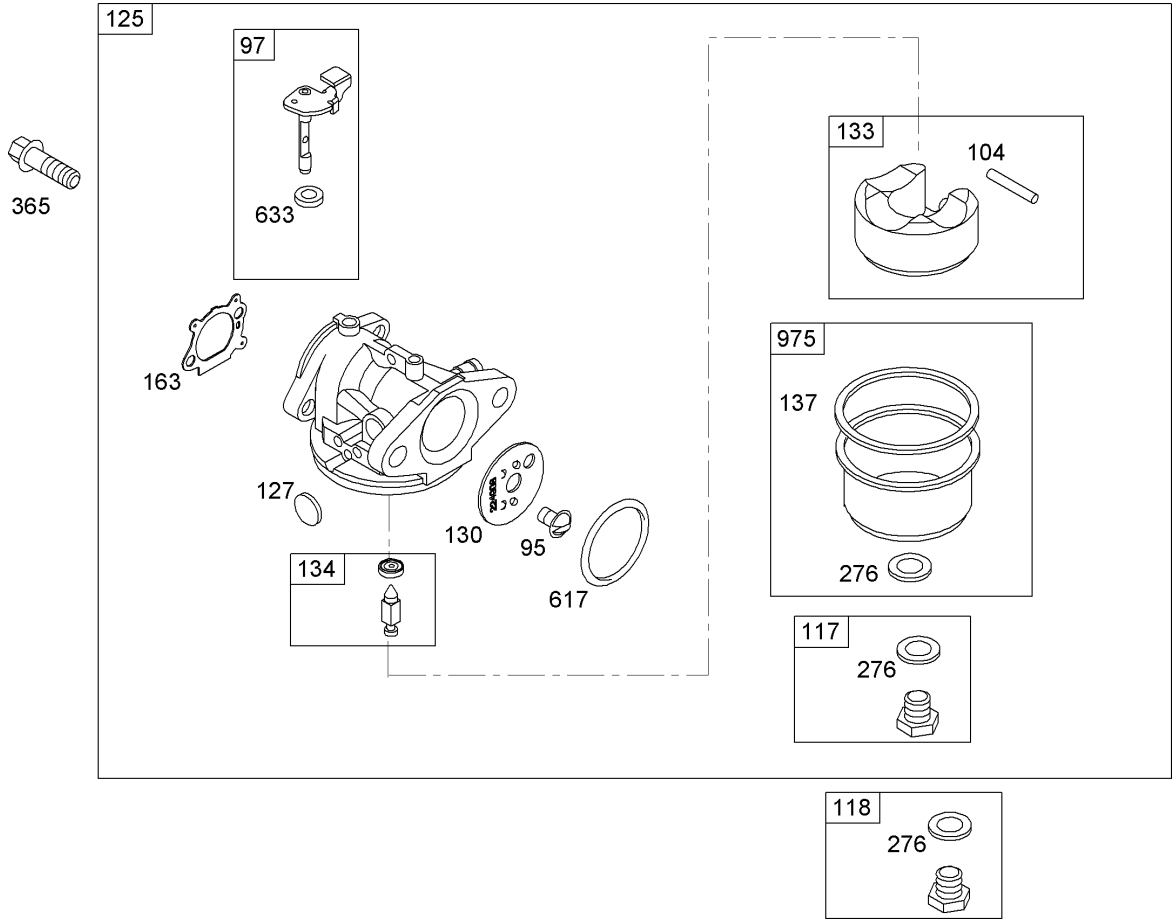


Assemblies include all parts shown in frames

Carburetor Assembly

Briggs and Stratton 126T07-0204-E1







Ref	Part No.	Qty.	Description				
③ 95	691636	1	Screw (Throttle Valve)				
③ 97	696565	1	Shaft-Throttle				
③ ④ 104	691242	1	Pin-Hinge, Float				
③ 117	498978	1	Jet-Main (STD)				
③ 118	497466	1	Jet-Main (High Altitude)				
③ 125	498170	1	Carburetor				
③ ④ 127	694468	1	Plug-Welch				
③ 130	696564	1	Valve-Throttle				
③ 133	398187	1	Float-Carburetor				
③ ④ 134	398188	1	Needle Seat Kit				
③ ④ 137	693981	1	Gasket-Bowl, Float				
③ ④ 163	272653s	1	Gasket-Cleaner, Air				
③ ④ 276	271716	1	Washer-Sealing				
③ 365	692524	1	Screw (Carburetor)				
③ ④ 617	270344s	1	Seal, O-Ring (Intake Manifold)				
③ ④ 633	691321	1	Seal-Shaft, Choke Throttle				
③ 975	493640	1	Bowl-Float				

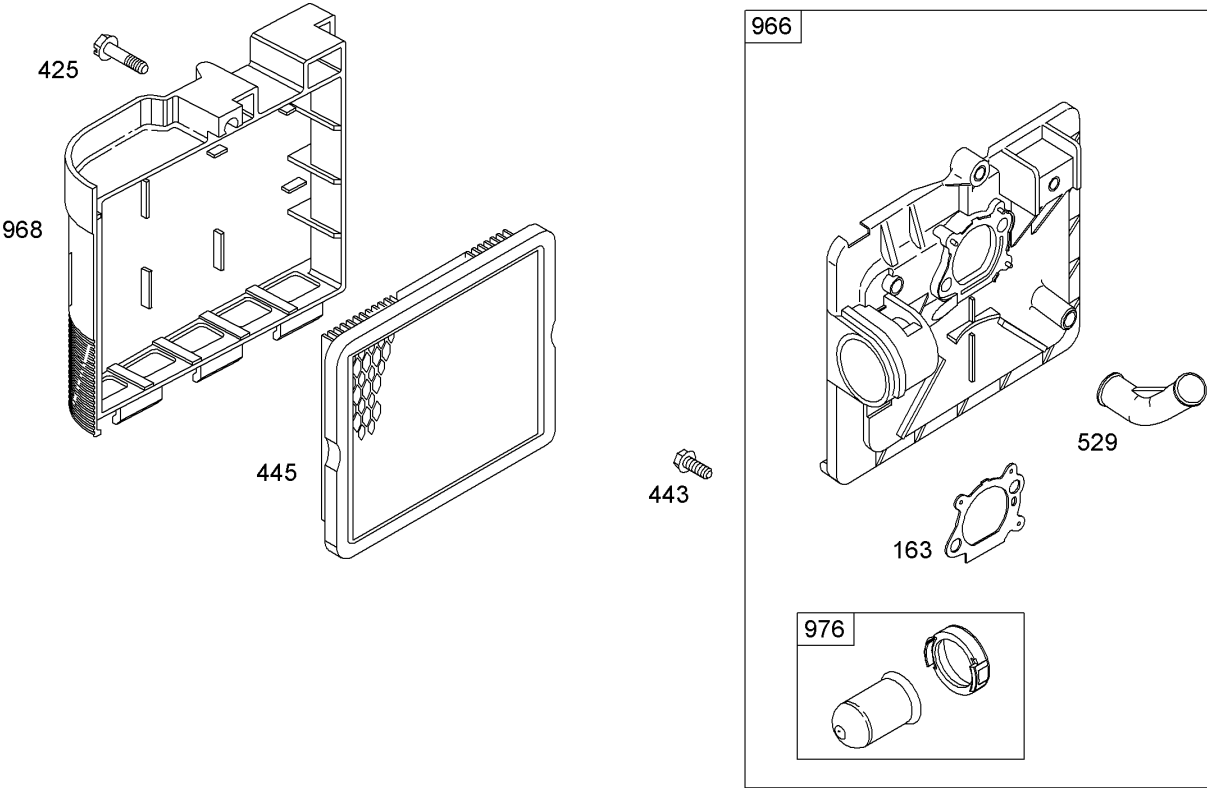

Assemblies include all parts shown in frames

Air Cleaner Assembly
Briggs and Stratton 126T07-0204-E1






Ref	Part No.	Qty.	Description				
3 4 163	272653s	1	Gasket-Cleaner, Air				
3 6							
4 425	690670	1	Screw (Air Cleaner Assembly)				
4 443	692523	1	Screw (Air Cleaner Primer Base)				
4 445	491588s	1	Filter-Cartridge, Air Cleaner				
5 529	691923	1	Grommet				
9 966	496116	1	Base-Primer, Air Cleaner				
9 968	692298	1	Cover-Cleaner, Air				
9 976	694395	1	Primer-Carburetor				

 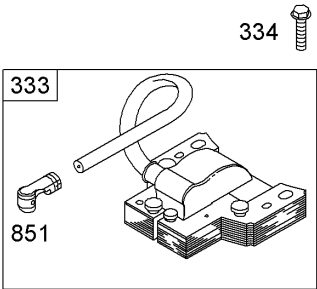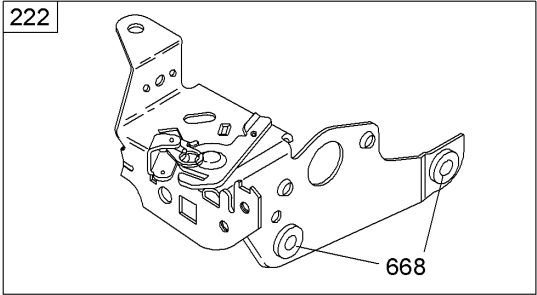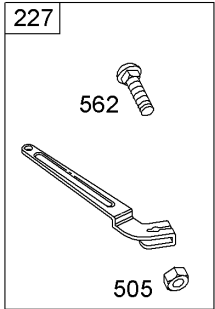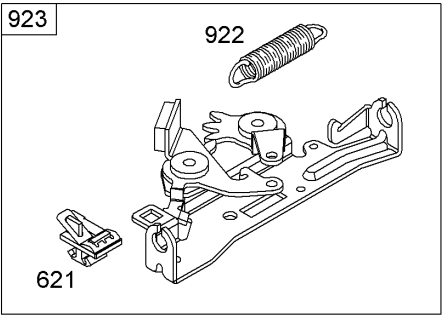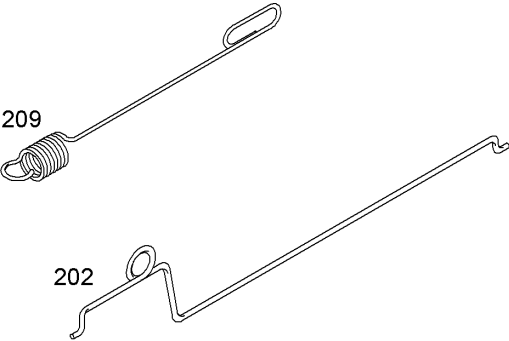

Assemblies include all parts shown in frames

Governor Assembly
Briggs and Stratton 126T07-0204-E1

Ref	Part No.	Qty.	Description				
188	693399	1	Screw (Control Bracket)				
202	691829	1	Link-Governor, Mechanical				
209	691292	1	Spring-Governor				
222	791128	1	Bracket-Control				
227	690783	1	Lever-Control, Governor				
333	802574	1	Armature-Magneto				
334	691061	1	Screw (Magneto Armature)				
356	692390	1	Wire-Stop				
505	691251	1	Nut (Governor Control Lever)				
562	691119	1	Bolt (Governor Control Lever)				
621	692310	1	Switch-Stop				
668	493823	1	Spacer				
745	691648	1	Screw (Brake)				
851	493880s	1	Terminal-Spark Plug				
922	691831	1	Spring-Brake				
923	691994	1	Brake ASM				
935	499421	1	Switch-Interlock				
1160	691627	1	Screw (Interlock Switch)				

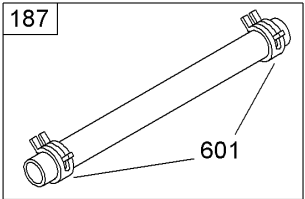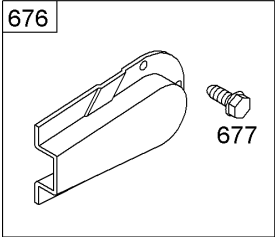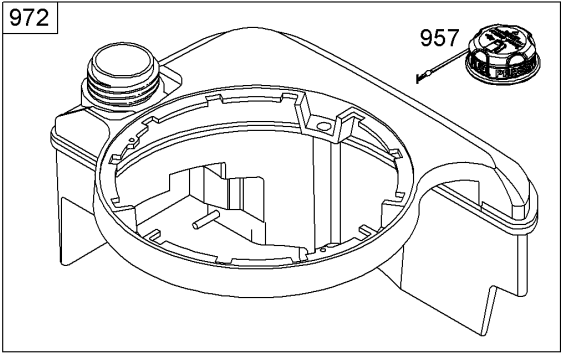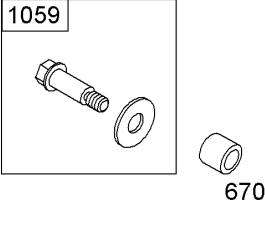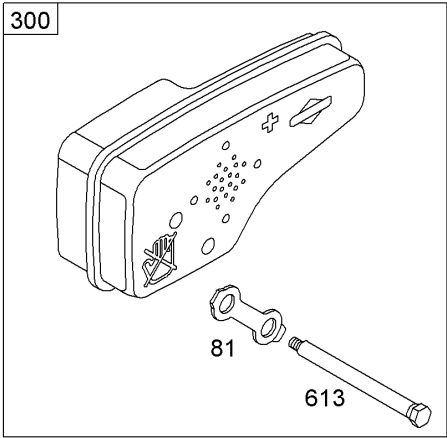


Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly

Briggs and Stratton 126T07-0204-E1


Ref	Part No.	Qty.	Description				
81	691740	1	Lock-Screw, Muffler				
187	791783	1	Line-Fuel				
190	690940	1	Screw (Fuel Tank)				
300	692038	1	Muffler				
601	791850	1	Clamp-Hose				
613	691340	1	Screw (Muffler)				
670	692294	1	Spacer-Tank, Fuel				
676	493871	1	Deflector-Muffler				
677	690661	1	Screw (Muffler Deflector)				
957	699985	1	Cap-Tank, Fuel				
972	699374	1	Tank-Fuel				
1059	692311	1	Screw/Washer Kit				

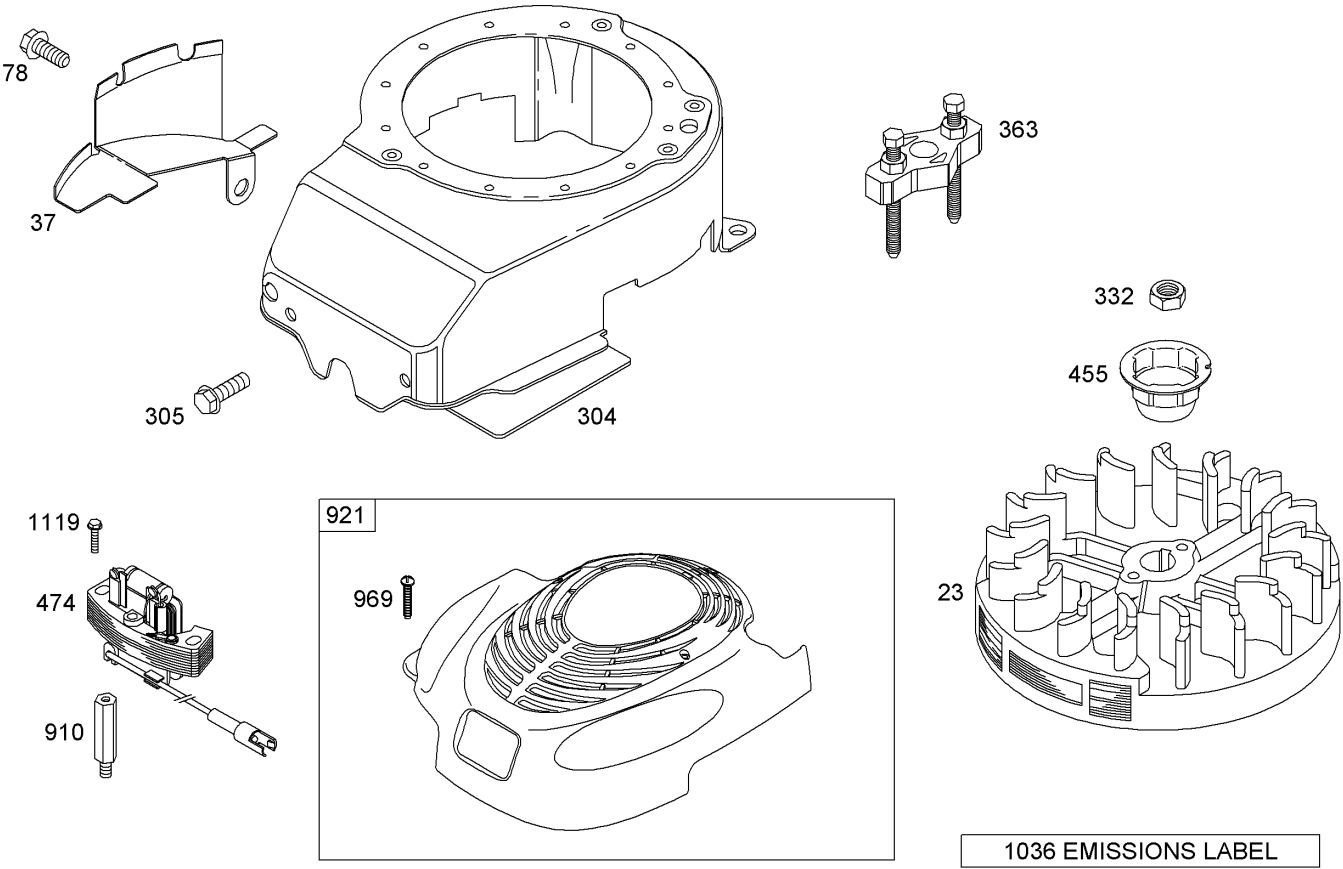

Assemblies include all parts shown in frames

Blower Housing Assembly
Briggs and Stratton 126T07-0204-E1


Ref	Part No.	Qty.	Description				
❸23	691987	1	Flywheel				
❸37	694086	1	Guard-Flywheel				
❸78	691108	1	Screw (Flywheel Guard)				
❸304	493293	1	Housing-Blower				
❸305	691108	1	Screw (Blower Housing)				
❸332	690662	1	Nut (Flywheel)				
❸363	19069	1	Puller-Flywheel				
❸455	791960	1	Cup-Flywheel				
❸474	691991	1	Alternator				
❸910	691094	1	Stud (Alternator)				
❸921	790036	1	Cover-Housing, Blower				
❸969	691138	1	Screw (Blower Housing Cover)				
❸1036		1	Label-Emissions (Available From An Authorized Briggs And Stratton Service Dealer)				
❸1119	691127	1	Screw (Alternator)				

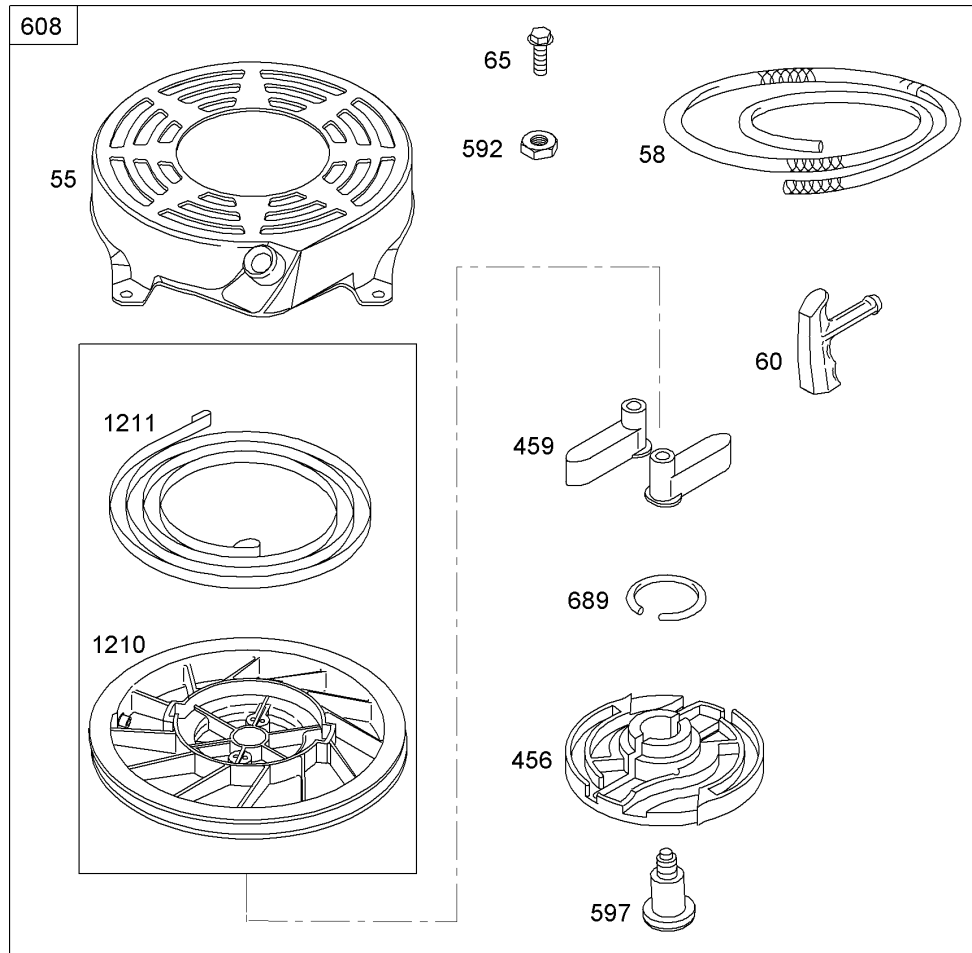

Starter Assembly

Briggs and Stratton 126T07-0204-E1


Ref	Part No.	Qty.	Description				
③55	691421	1	Housing-Starter, Rewind				
③58	697316	1	Rope-Starter (Cut To Required Length)				
③60	281434s	1	Grip-Rope, Starter				
③65	690837	1	Screw (Rewind Starter)				
③456	692299	1	Plate-Friction, Pawl				
③459	281505s	1	Ratchet-Pawl				
③592	690800	1	Nut (Rewind Starter)				
③597	691696	1	Screw (Pawl Friction Plate)				
③608	497680	1	Starter-Rewind				
③689	691855	1	Spring-Friction				
③1210	498144	1	Pulley/Spring ASM (Pulley)				
③1211	498144	1	Pulley/Spring ASM (Spring)				

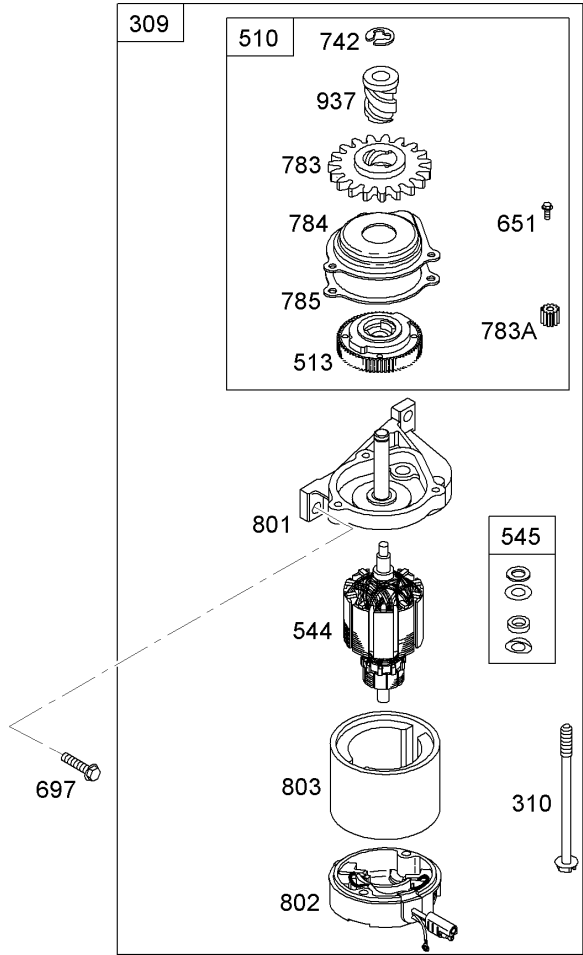

Electric Starter Assembly
Briggs and Stratton 126T07-0204-E1

Ref	Part No.	Qty.	Description				
309	695550	1	Motor-Starter				
310	692327	1	Bolt (Starter Motor)				
510	494147	1	Drive-Starter				
513	692358	1	Clutch-Drive				
544	690786	1	Armature-Starter				
545	492919	1	Washer Set				
651	691660	1	Screw (Starter Gear Cover)				
697	691127	1	Screw (Starter Motor)				
742	93941	1	Retainer-E Ring				
783	691918	1	Gear-Pinion				
783A	691269	1	Gear-Pinion				
784	692341	1	Cover-Gear, Starter				
785	692352	1	Gasket-Cover, Starter				
801	690782	1	Cap-Drive				
802	695267	1	Cap-End				
803	695266	1	Housing-Starter				
937	691325	1	Spline-Starter				

358 ENGINE GASKET SET


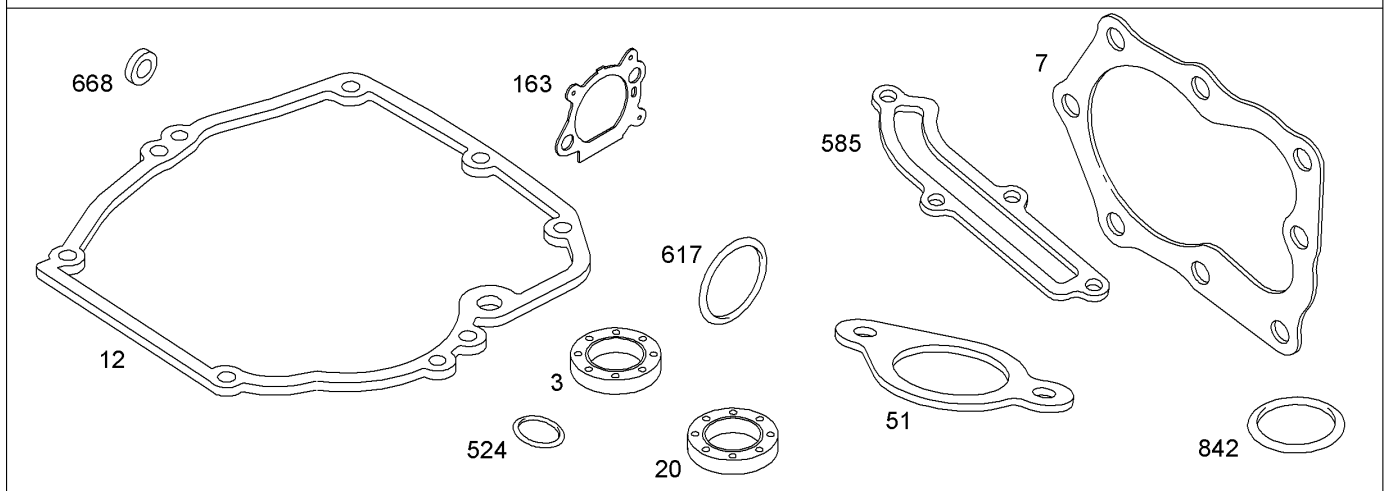


Assemblies include all parts shown in frames

Gasket Kit

Briggs and Stratton 126T07-0204-E1

Ref	Part No.	Qty.	Description				
333	299819s	1	Seal-Oil (Magnetos Side)				
337	692249	1	Gasket-Head, Cylinder				
3312	692232	1	Gasket-Crankcase				
3320	399781s	1	Seal-Oil (PTO Side)				
3351	272199s	1	Gasket-Intake				
34163 56	272653s	1	Gasket-Cleaner, Air				
33358	497316	1	Gasket Set-Engine				
33524	692296	1	Seal, O-Ring (Dipstick Tube)				
33585	691879	1	Gasket-Passage, Breather				
34617 56	270344s	1	Seal, O-Ring (Intake Manifold)				
33668	493823	1	Spacer				
33842	691031	1	Seal, O-Ring (Dipstick)				

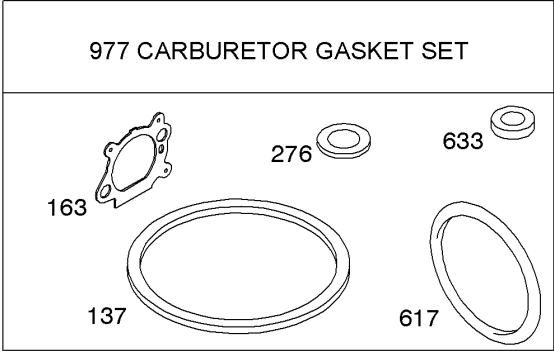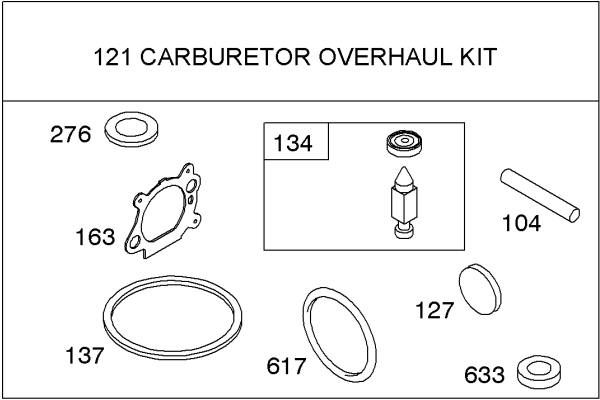

Assemblies include all parts shown in frames

Carburetor Overhaul Kit
Briggs and Stratton 126T07-0204-E1

Ref	Part No.	Qty.	Description				
34104	691242	1	Pin-Hinge, Float				
3121	498260	1	Carburetor Overhaul Kit				
34127	694468	1	Plug-Welch				
34134	398188	1	Needle Seat Kit				
34137	693981	1	Gasket-Bowl, Float				
6							
34163	272653s	1	Gasket-Cleaner, Air				
56							
3276	271716	1	Washer-Sealing				
34617	270344s	1	Seal, O-Ring (Intake Manifold)				
5							
34633	691321	1	Seal-Shaft, Choke Throttle				
6							
3977	498261	1	Carburetor Gasket Set				

Attachments and Accessories

For 20062 - Super Recycler Lawn Mower

Product Name	Model/Part
Bagging Blade	108-3759-03
Traction Assist Handle Kit	108-8120

NOTES

NOTES

NOTES

