



Commercial Walk-Behind Mower Floating Deck T-Bar Gear 36 Inch TURBO FORCE® Cutting Unit

Model No. 30094 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine and Clutch Assembly	 3	Piston and Crankshaft Assembly Kawasaki FH430V-DS28	 20
Power-Take-Off Idler and Weight Assembly	 4	Valve and Camshaft Assembly Kawasaki FH430V-DS28	 21
Fuel System Assembly	 5	Lubrication Equipment Assembly Kawasaki FH430V-DS28	 22
Lower Control Assembly	 6	Cooling Equipment Assembly Kawasaki FH430V-DS28	 23
Transmission Drive Assembly	 7	Electric Equipment Assembly Kawasaki FH430V-DS28	 24
Wheel Drive and Brake Assembly	 8	Control Equipment Assembly Kawasaki FH430V-DS28	 25
Upper Handle Assembly	 9	Carburetor Assembly Kawasaki FH430V-DS28	 26
Control Panel Assembly	 10	Air Filter and Muffler Assembly Kawasaki FH430V-DS28	 27
Carrier Frame Assembly	 11	Fuel Tank and Valve Assembly Kawasaki FH430V-DS28	 28
Deck Drive and Baffle Assembly	 12	Starter Assembly Kawasaki FH430V-DS28	 29
Deck Assembly No. 112-7080	 13	Label Assembly Kawasaki FH430V-DS28	 30
Lever Assembly No. 107-1664	 14	Attachments and Accessories List	 31
Spindle Assembly No. 110-0730	 15		
Spindle Assembly No. 110-0728	 16		
Outer Deck Assembly	 17		
Deflector Assembly No. 110-0790	 18		
Cylinder and Crankcase Assembly Kawasaki FH430V-DS28	 19		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes

- ❶ Not illustrated
- ❸ Obtain from your local Kawasaki dealer


- ❷ Not serviced separately

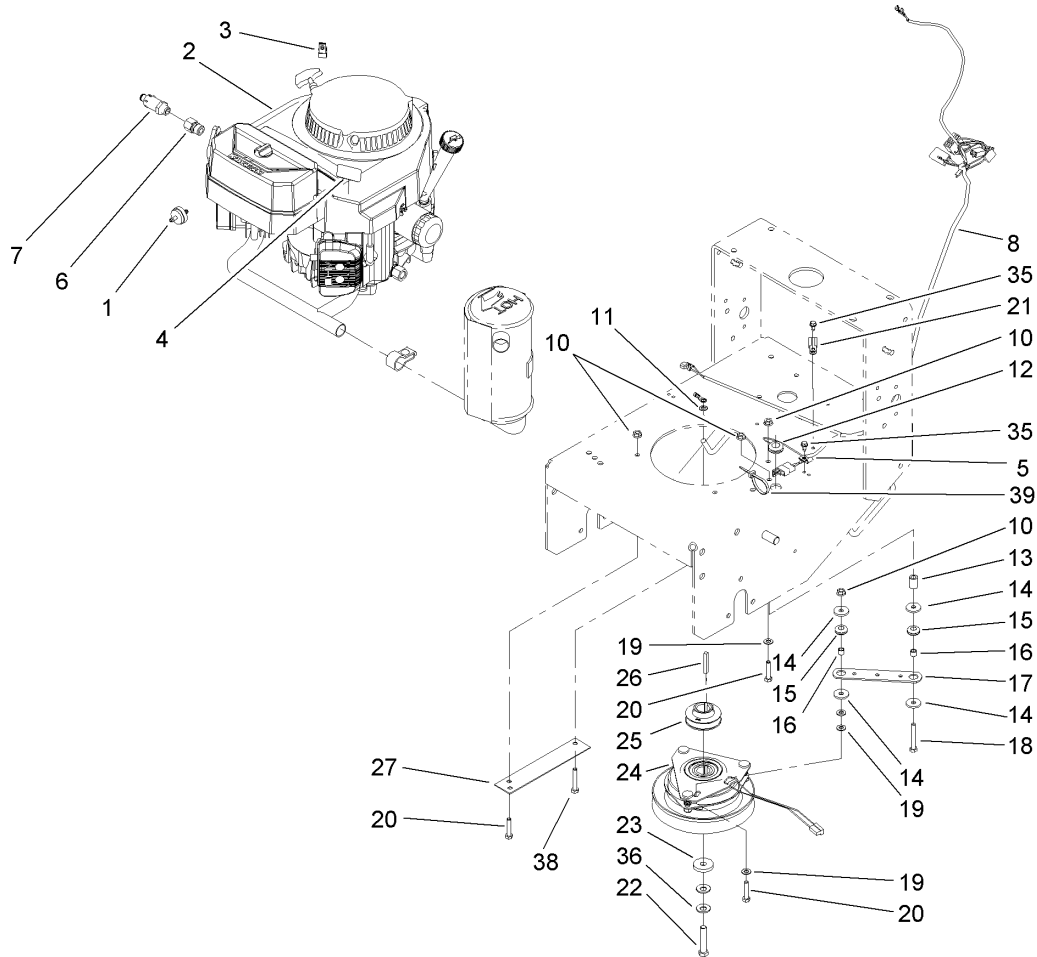

Engine and Clutch Assembly


Ref	Part No.	Qty.	Description
1	56-6360	1	Filter-Fuel
2		1	Engine-Kawasaki, FH430V Ds28
3	2412-87	1	Clamp-Cable
4	106-0699	1	Decal-Warning, Hot Surfaces
5	2412-72	1	Clip-Closed, Insulated
6	103-1966	1	Adapter
7	92-6877	1	Valve-Drain, Oil
8	104-8137	1	Harness-Wire
10	32128-20	6	Nut-HF
11	3255-8	1	Washer-Lock
12	112-7069	1	Grommet
13	104-6373	1	Tube-Retainer
14	1-613235	4	Washer
15	1-633630	2	Grommet-Brake
16	1-633545	2	Spacer
17	1-633543-03	1	Strap-Clutch, Brake
18	322-11	1	Screw-HH
19	3256-23	5	Washer-Flat
20	322-7	4	Screw-HH
21	2412-134	1	R-Clamp
22	3212-9	1	Screw-HH
23	107-4136	1	Washer
24	105-2635	1	Clutch / Brake
25	107-4112	1	Pulley-Drive

Ref	Part No.	Qty.	Description
26	608006	1	Key-Square
27	94-5847-01	1	Cover-Pulley
35	12-3270	2	Screw
36	1-603610	2	Washer-Spring
38	322-9	1	Screw-HH
39	3290-378	1	Tie-Cable
99	103-1964	1	Hose-Drain, Oil

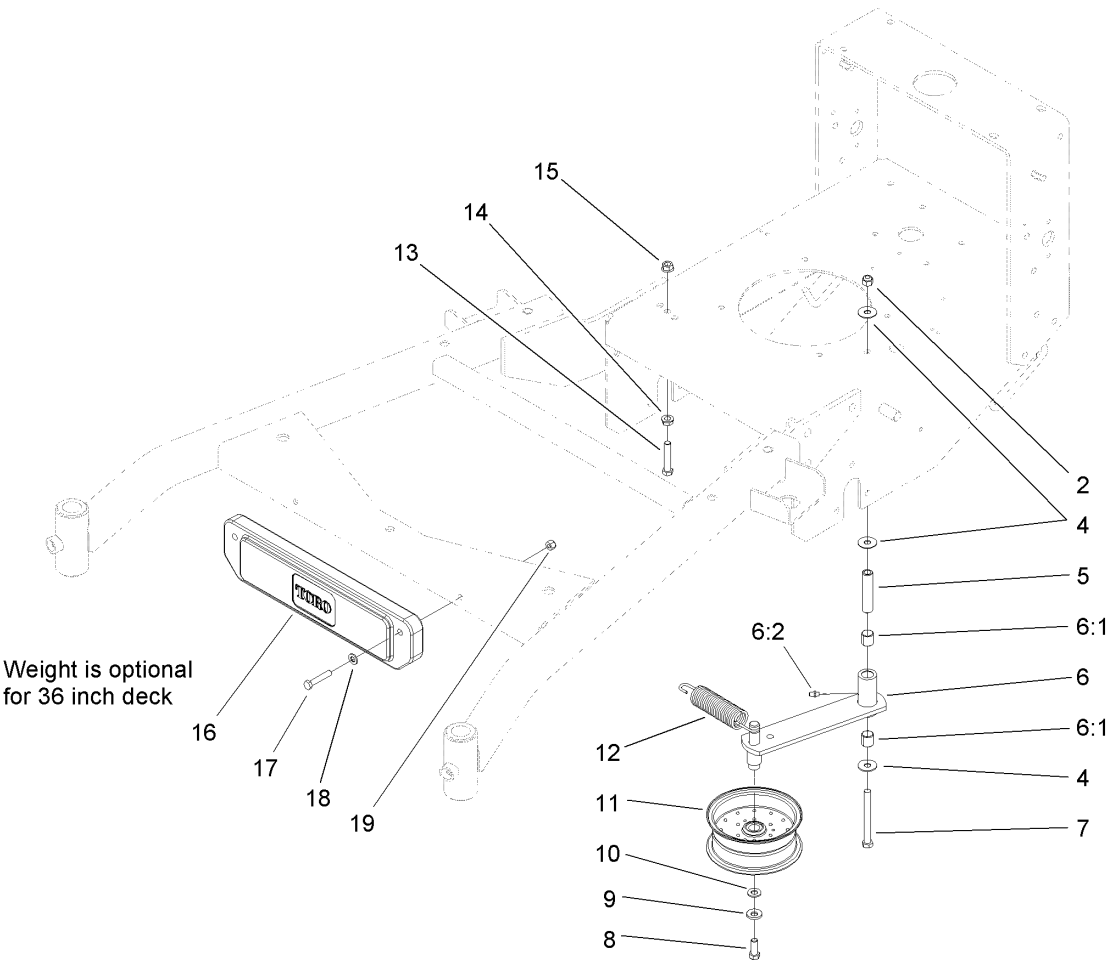


Power-Take-Off Idler and Weight Assembly

Ref	Part No.	Qty.	Description				
2	3296-39	1	Nut-Lock, NI				
4	52-2860	3	Washer				
5	104-6377	1	Tube-Idler				
6	112-7055	1	Idler Arm ASM				
6:1	1-513034	2	Sleeve-Bearing				
6:2	302-5	1	Fitting-Grease				
7	323-42	1	Screw-HH				
8	323-6	1	Screw-HH				
9	98-5975	1	Washer-Belleville				
10	3256-24	1	Washer-Flat				
11	1-413099	1	Pulley-Idler				
12	105-8443	1	Spring-Extension				
13	323-10	1	Screw-HH				
14	3290-357	1	Nut-HHF, Whiz				
15	32128-21	1	Nut-HF				
16	112-7059-01	1	Weight-Cast				
17	322-9	2	Screw-HH				
18	3256-23	2	Washer-Flat				
19	3296-29	2	Nut-Lock, NI				

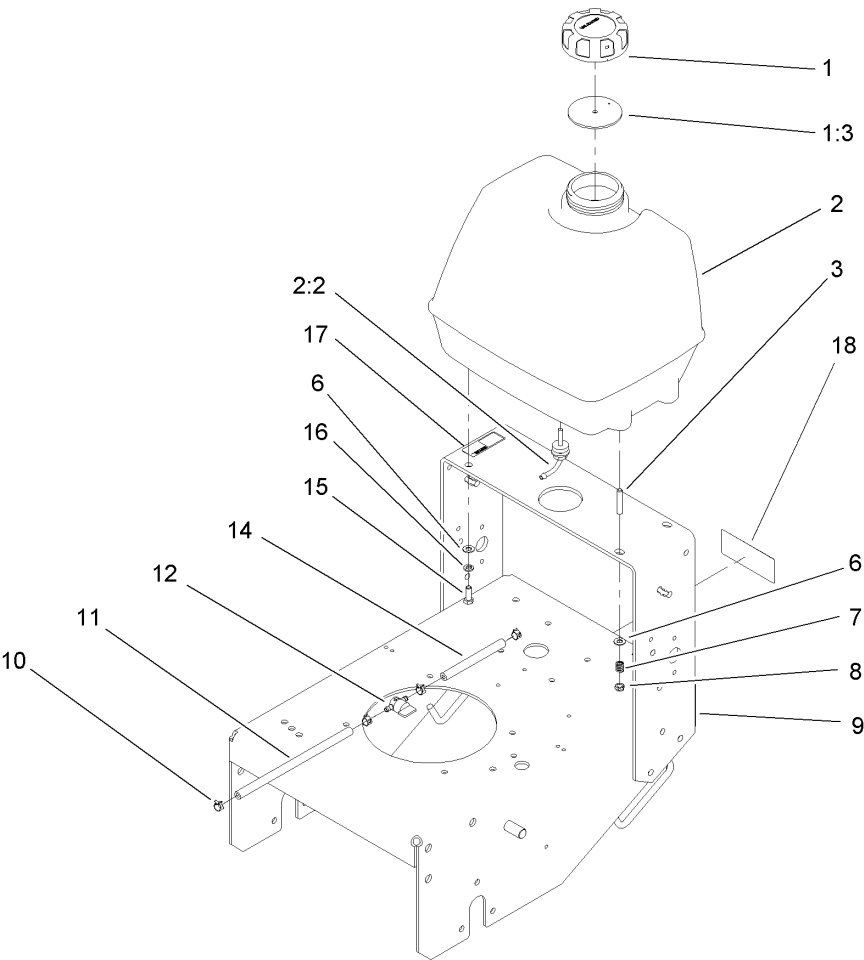


Fuel System Assembly

Ref	Part No.	Qty.	Description				
1	88-3980	1	Gas Cap ASM				
1:3	88-4010	1	Gasket-Cap, Gas				
2	106-0730	1	Fuel Tank ASM				
2:2	103-2605	1	Fitting-Fuel, Bulkhead				
3	104-8121	2	Stud-Threaded				
6	3256-23	4	Washer-Flat				
7	1-633349	2	Spring-Tank, Fuel				
8	3296-47	2	Nut-Lock, NI				
9	110-4985-01	1	Gear Frame ASM				
10	2412-98	4	Clamp				
11	110-4894	1	Hose-Fuel				
12	1-603770	1	Valve-Fuel				
14	107-0588	1	Hose-Fuel				
15	322-4	2	Screw-HH				
16	3253-4	2	Washer-Lock				
17	95-2814	1	Decal-Shut Off, Fuel				
18	98-0776	1	Decal-Caution				

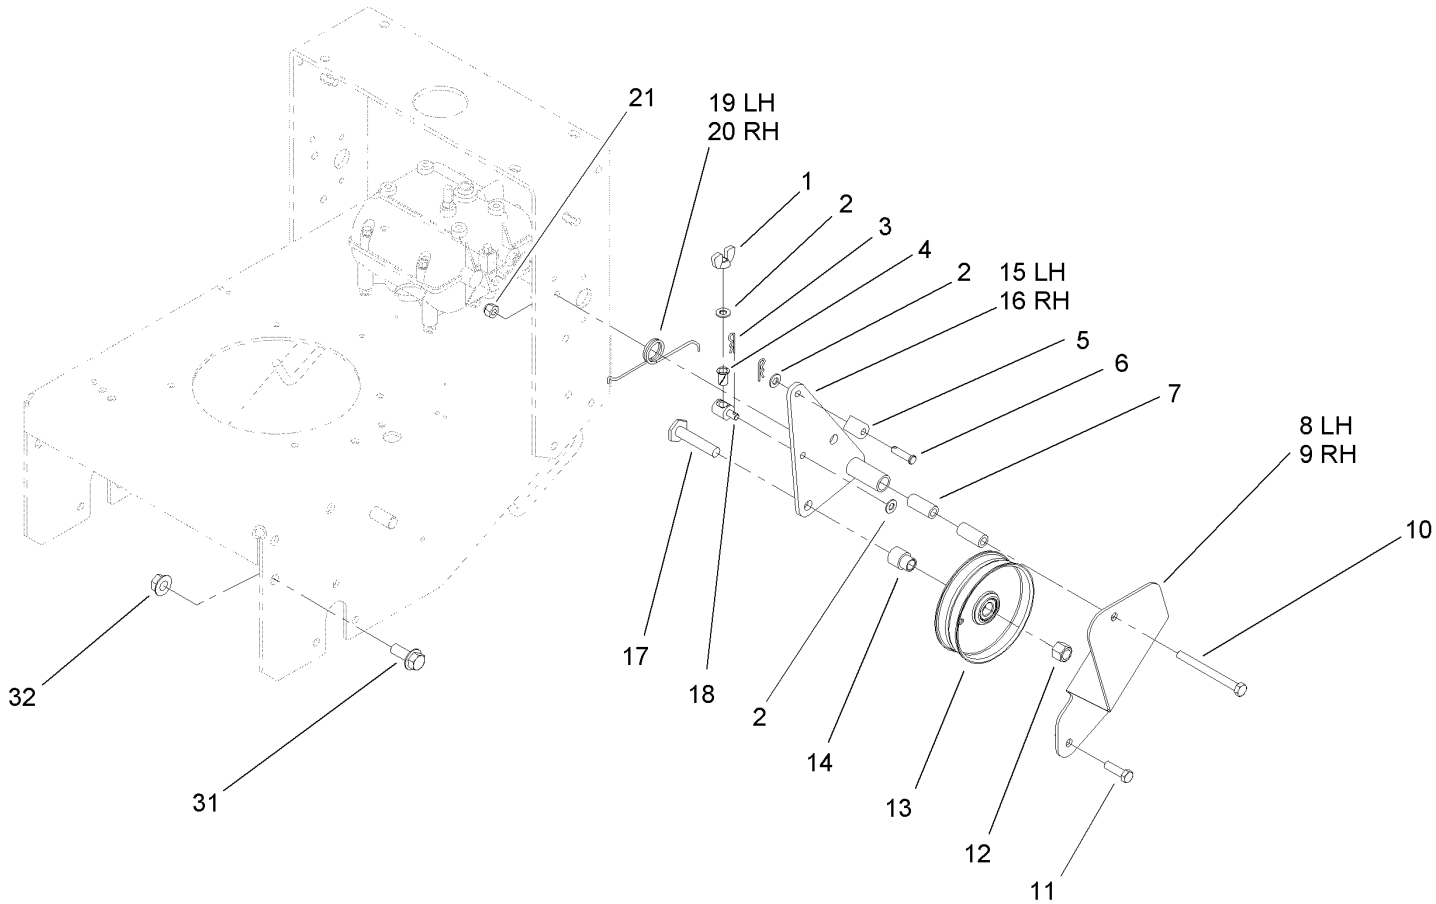

Lower Control Assembly


Ref	Part No.	Qty.	Description				
1	32103-25	2	Nut-Wing				
2	3256-23	6	Washer-Flat				
3	3290-307	4	Pin-Hair				
4	52-2890	2	Bushing-Nylon				
5	74-0521	2	Fitting-Rod				
6	283-6	2	Pin-Clevis				
7	74-0040	4	Spacer-Pivot, Idler				
8	108-2725-01	1	Support-Idler, LH				
9	108-2724-01	1	Support-Idler, RH				
10	323-16	2	Screw-HH				
11	323-7	4	Screw-HH				
12	3296-23	2	Nut-Lock, NI				
13	95-2800	2	Pulley-Idler				
14	95-2801	2	Spacer-Pulley				
15	108-2740-01	1	LH Idler Arm ASM				
16	108-2741-01	1	RH Idler Arm ASM				
17	51-4450	2	Screw-Leveler				
18	68-9690	2	Fitting-Rod				
19	51-4380	1	Spring-Torsion, LH				
20	51-4370	1	Spring-Torsion, RH				
21	3296-39	6	Nut-Lock, NI				
31	3234-32	6	Screw-HHF				
32	32128-23	6	Nut-HF				

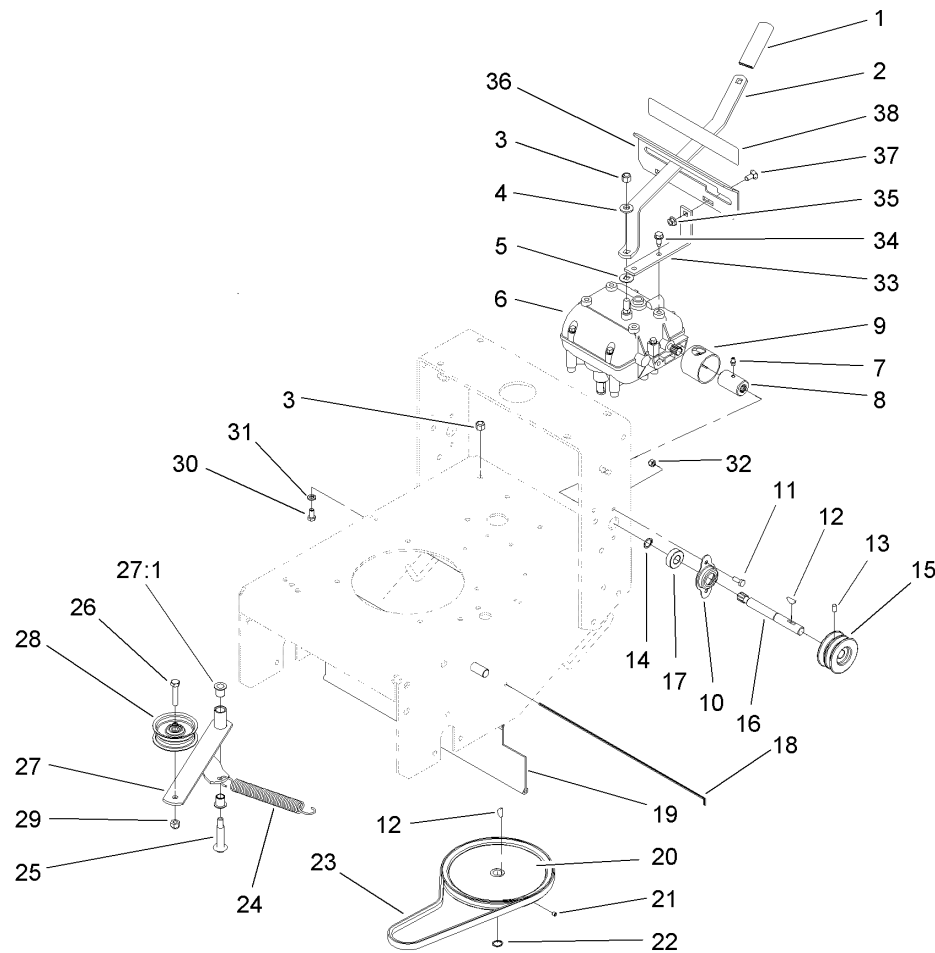

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	47-1970	1	Grip
2	98-3274-03	1	Lever-Shift
3	3296-6	2	Nut-Lock
4	98-5975	1	Washer-Belleville
5	1-323379	1	Washer
6	1-323500	1	Transmission
7	302-5	2	Fitting-Grease
8	1-323680	2	Coupler
9	51-4220	2	Guard-Coupler
10	1-323254	2	Flange-Output
11	321-4	4	Screw-HH
12	3257-5	3	Key-Woodruff
13	3245-9	2	Screw-Set
14	32151-62	2	Ring-Retaining
15	105-2698	2	Pulley-Transmission
16	104-1102	2	Shaft-Output
17	1-323252	2	Bearing-Shaft
18	95-1529	1	Rod-Shield
19	95-1526	1	Shield-Trailing
20	105-5646	1	Pulley-Driven
21	3245-1	1	Screw-Set, HSH
22	32120-64	1	Ring-Snap, External
23	105-5668	1	V-Belt
24	80-6610	1	Spring-Extension

Ref	Part No.	Qty.	Description
25	27-6230	1	Bolt-Wheel
26	323-9	1	Screw-HH
27	16-7509	1	Lever-Idler
27:1	256-155	2	Bushing-Flange
28	62-4540	1	Pulley
29	3296-39	1	Nut-Lock, NI
30	322-2	4	Screw-HH
31	3253-4	4	Washer-Lock
32	3296-42	4	Nut-Lock, NI
33	1-323389-03	2	Bracket-Plate, Shift
34	9264964	4	Screw-HWH, Thread Cut
35	32128-20	2	Nut-HF
36	1-323387-03	1	Plate-Shift
37	3230-1	2	Bolt-CARR
38	98-3256	1	Decal-Speed, Ground

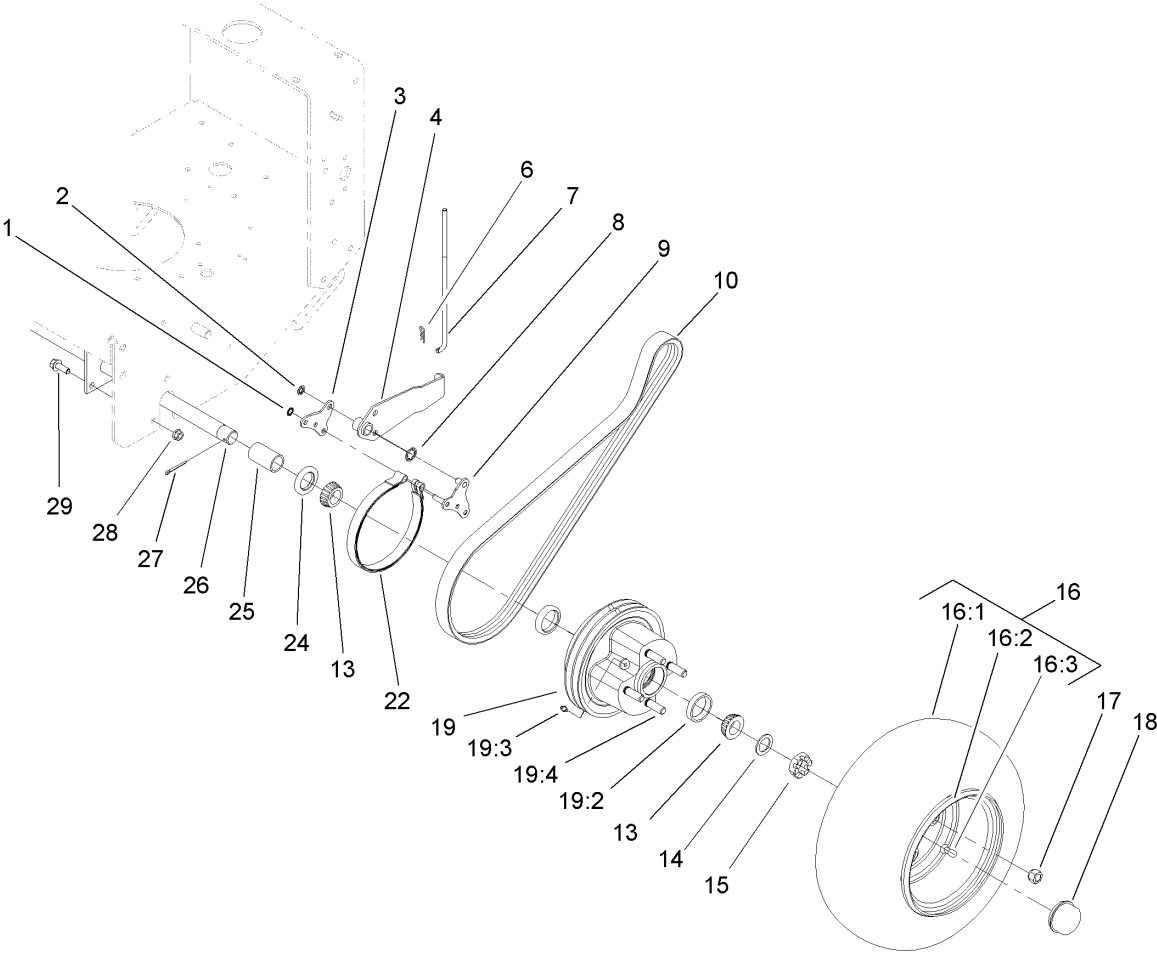


Wheel Drive and Brake Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	32151-72	4	Ring-Retaining	25	110-5006	2	Spacer-Wheel
2	32151-56	2	Ring-Retaining, External	26	110-4983-01	1	Axle ASM
3	106-8792	2	Plate-Link, Brake	27	1-806800	2	Pin-Cotter
4	110-5010-01	2	Brake Arm ASM	28	32128-21	6	Nut-HF
6	3290-307	2	Pin-Hair	29	3234-11	6	Screw-HHF
7	108-2730	2	Rod-Brake				
8	32151-40	2	Ring-Retaining				
9	106-8773	2	Brake Link ASM				
10	110-5004	2	Belt-V, Banded				
13	254-94	4	Bearing-Cone, Tapered				
14	1-523157	2	Washer-Spacer, 14 GA				
15	1-809082	2	Nut-SHH				
16	106-0892	2	Wheel And Tire ASM				
16:1	104-6322	1	Tire				
16:2	106-0893	1	Wheel				
16:3	232-27	1	Stem-Valve				
17	242-50	8	Nut-Lug				
18	241-119	2	Cap-Dust				
19	107-4090	2	Wheel Hub ASM				
19:2	254-72	2	Bearing-Cup, Tapered				
19:3	302-5	1	Fitting-Grease				
19:4	10-6830	4	Stud-Type, Drive				
22	1-323262	2	Band-Brake				
24	1-543511	2	Seal-Grease				

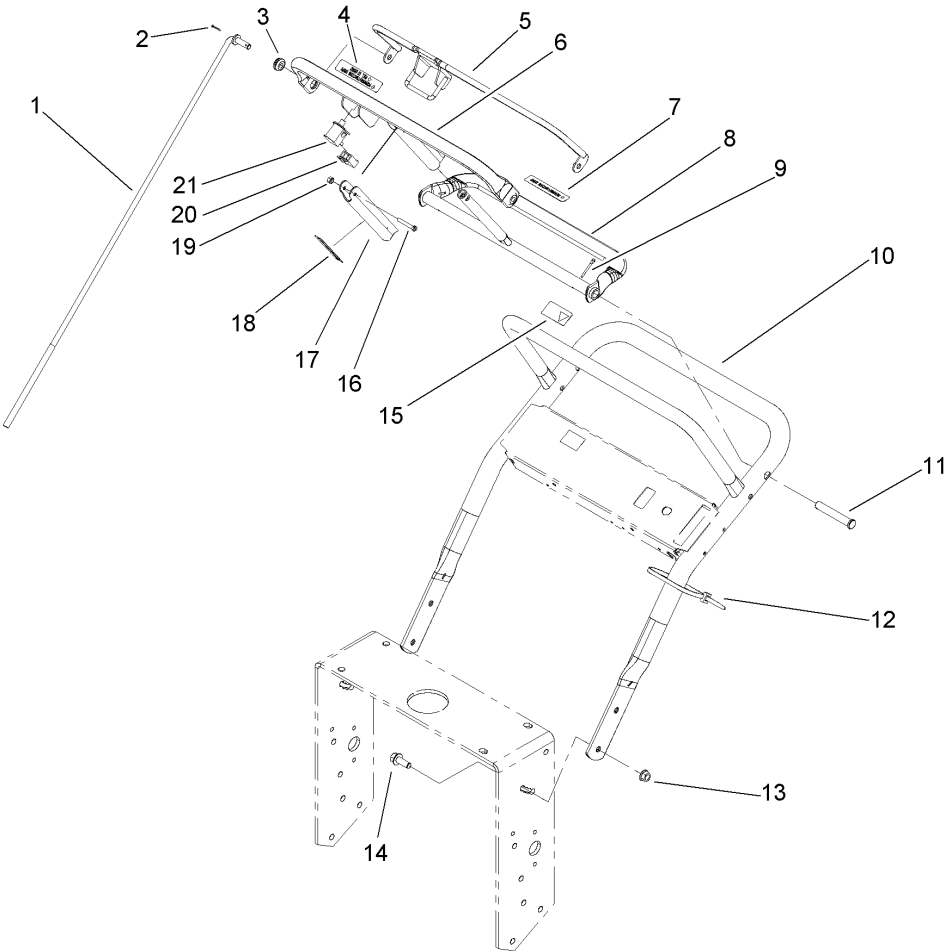


Upper Handle Assembly

Ref	Part No.	Qty.	Description				
1	105-4677	2	Rod-Control				
2	3272-4	2	Pin-Cotter				
3	237-141	2	Grommet-Rubber				
4	82-2290	1	Decal				
5	82-7680-03	1	Bail ASM				
6	82-7690-03	1	Bar-Control				
7	82-2280	1	Decal				
8	106-5477-03	1	Control Pivot ASM				
9	3272-11	2	Pin-Cotter				
10	105-3158-03	1	Upper Handle ASM				
11	283-55	2	Pin-Clevis				
12	3290-378	2	Tie-Cable				
13	32128-21	4	Nut-HF				
14	3234-11	4	Screw-HHF				
15	98-4387	1	Decal-Protection, Ear				
16	32105-1	1	Screw-SHH				
17	51-4850-03	1	Lever-Brake, Parking				
18	52-2010	1	Decal-Lever, Parking				
19	3296-2	1	Nut-Lock				
20	218-595	1	Connector-Body				
21	82-2190	1	Switch-Bail				

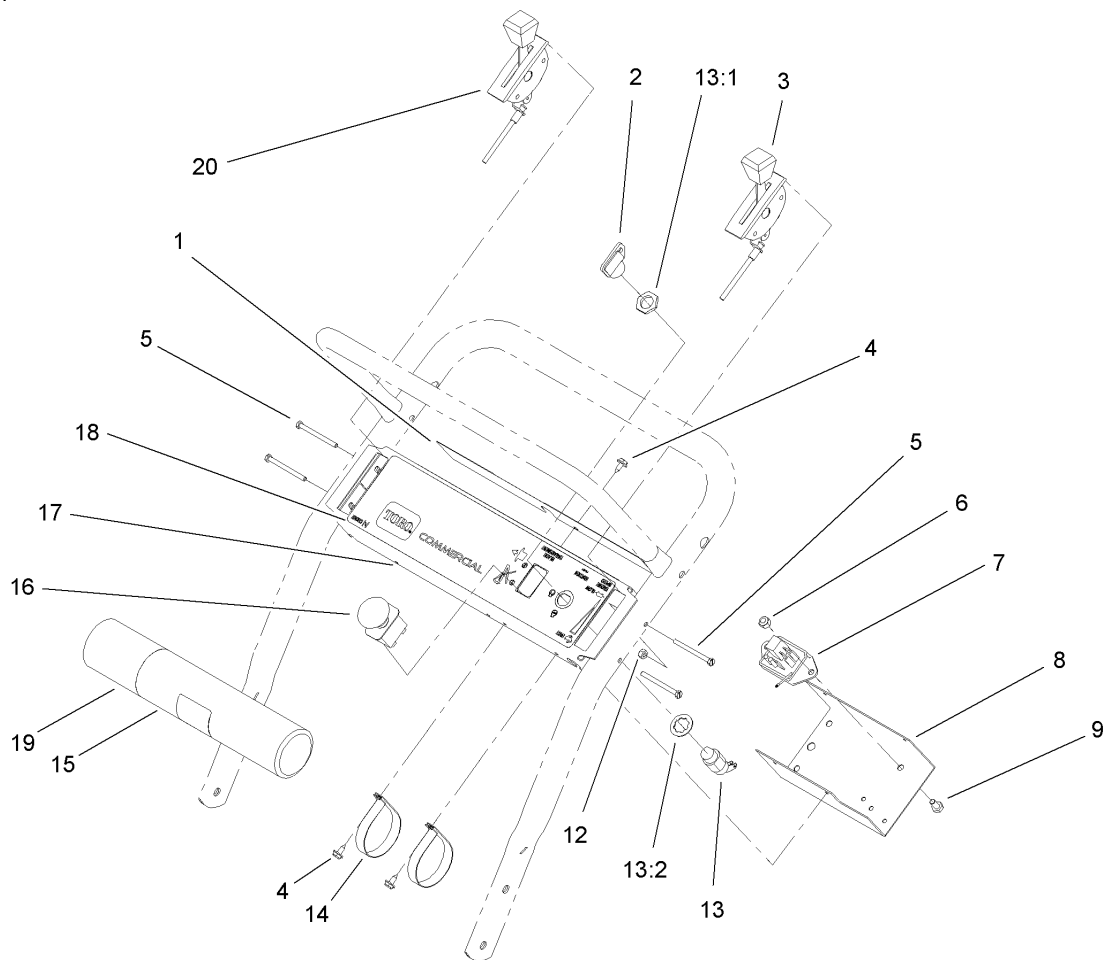


Control Panel Assembly

Ref	Part No.	Qty.	Description				
1	105-0884	1	Decal-Danger				
2	63-8360	1	Key-Ignition				
3	110-4994	1	Cable-Throttle				
4	32104-76	4	Screw				
5	32105-14	4	Screw-SHH				
6	3296-42	1	Nut-Lock, NI				
7	104-8141	1	Module-Delay				
8	93-1187-03	1	Panel-Bottom				
9	321-2	1	Screw-HH				
12	3296-2	4	Nut-Lock				
13	29-5560	1	Switch-On / Off				
13:1	218-461	1	Nut-HH				
13:2	3254-5	1	Washer-Tooth				
14	2412-120	2	R-Clamp				
15	104-7050	1	Housing-Manual				
16	104-8140	1	Switch-PTO				
17	110-4982-03	1	Panel-Control				
18	110-4971	1	Decal-Control Panel (Gear)				
19	104-7048	1	Cap-Housing				
20	110-4995	1	Cable-Choke				

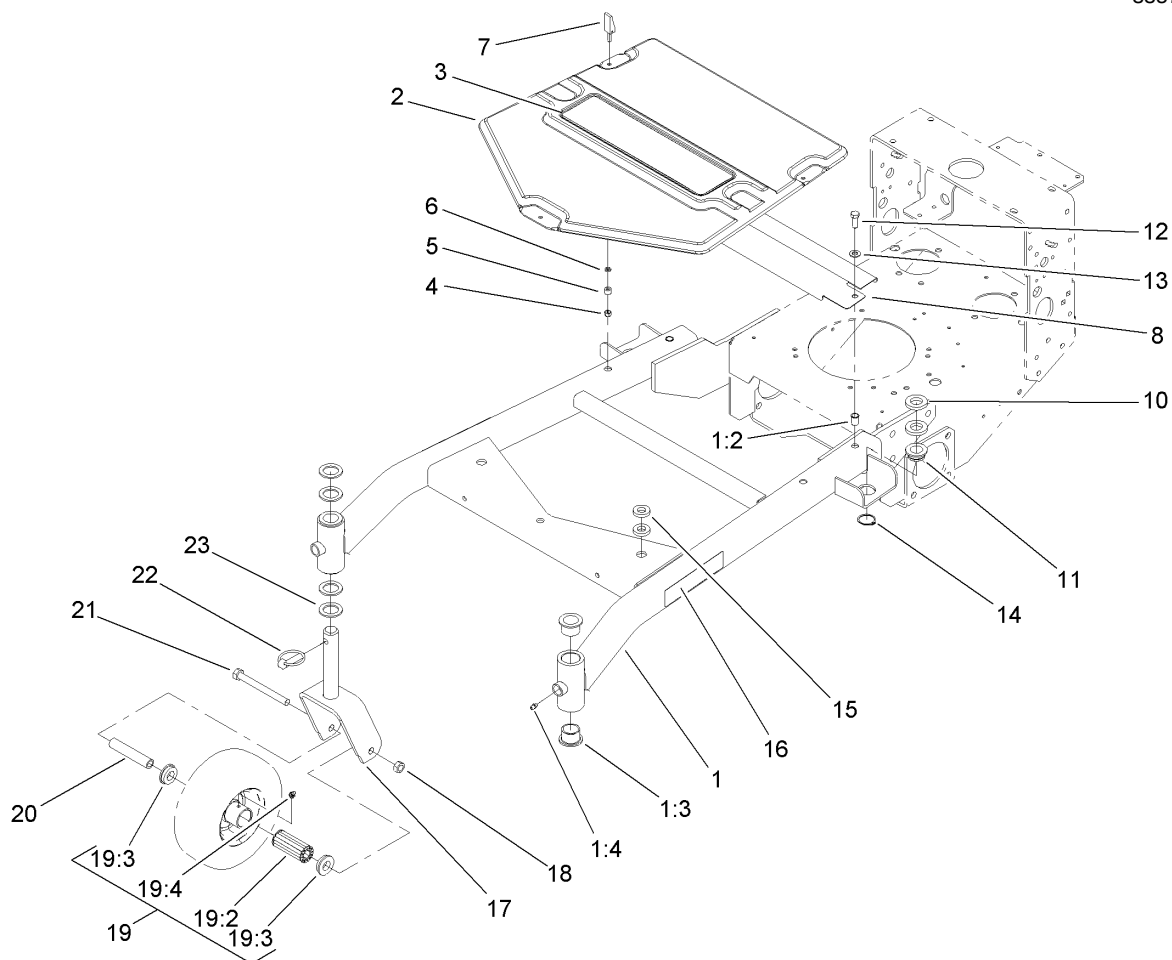


Carrier Frame Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	110-6960	1	Carrier Frame ASM	20	100-6453	2	Bushing-Spanner
1:2	32148-9	2	Insert-Nut	21	325-19	2	Screw-HH
1:3	94-1291	4	Bushing	22	283-71	2	Pin-Lynch
1:4	302-5	2	Fitting-Grease	23	3-6781	8	Washer-Thrust
2	110-6970	1	Cover-Carrier Frame				
3	110-6918	1	Decal				
4	1-804254	3	Nut				
5	106-6778	3	Bushing-Latch, Swell				
6	99-3058	3	Washer				
7	106-6777	3	Handle-Latch, Swell				
8	110-6971-01	1	Shield-Belt				
10	104-1105	4	Spacer-Support, Deck				
11	1-513336	2	Bushing-Deck				
12	323-6	2	Screw-HH				
13	3256-24	2	Washer-Flat				
14	32120-33	2	Ring-Retaining				
15	1-323539	4	Spacer-Drive, Blade				
16	106-0635	2	Decal-HOC				
17	105-3159-01	2	Castor Fork ASM				
18	32153-5	2	Nut-Lock, Side				
19	110-5024	2	Wheel And Tire ASM				
19:2	112-7066	1	Bearing-Roller				
19:3	1-513810	2	Bushing				
19:4	302-61	1	Zerk				

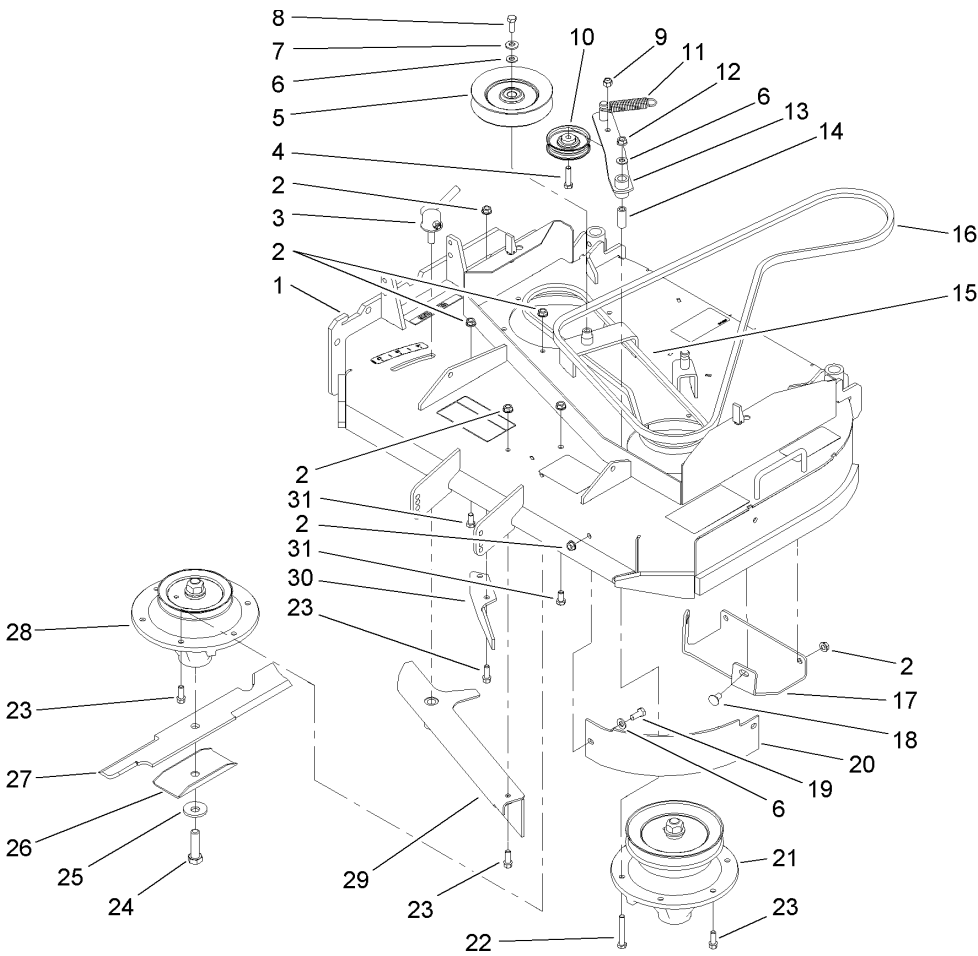

Deck Drive and Baffle Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-7080	1	Deck ASM	25	103-0865	2	Washer-Blade Bolt, Heavy
2	3290-357	22	Nut-HHF, Whiz	26	108-2727	2	Stiffener-Blade
3	107-1664	1	Lever ASM	27	105-7781-03	2	Blade-Hi Flow
4	323-8	1	Screw-HH	28	110-0728	1	Spindle ASM
5	1-633166	1	Pulley-Idler	29	110-6955-03	1	Adjust Baffle ASM
6	3256-24	4	Washer-Flat	30	110-0754-01	1	Baffle-Discharge
7	98-5975	1	Washer-Belleville	31	323-4	2	Screw-HH
8	323-6	1	Screw-HH				
9	3296-39	1	Nut-Lock, NI				
10	51-3660	1	Pulley-Idler				
11	105-2673	1	Spring-Extension				
12	32128-21	1	Nut-HF				
13	105-0889	1	Idler Arm ASM				
14	51-3641	1	Sleeve-Pivot, Idler				
15	110-6953	1	Belt-V				
16	110-6954	1	Belt-V				
17	110-2037-01	1	Plate-Skid				
18	3231-1	4	Screw-CARR				
19	323-5	2	Screw-HH				
20	110-6903-03	1	Baffle-Front, LH				
21	110-0730	1	Spindle ASM				
22	323-12	1	Screw-HH				
23	92-1624	14	Screw				
24	51-4060	2	Screw-Blade				

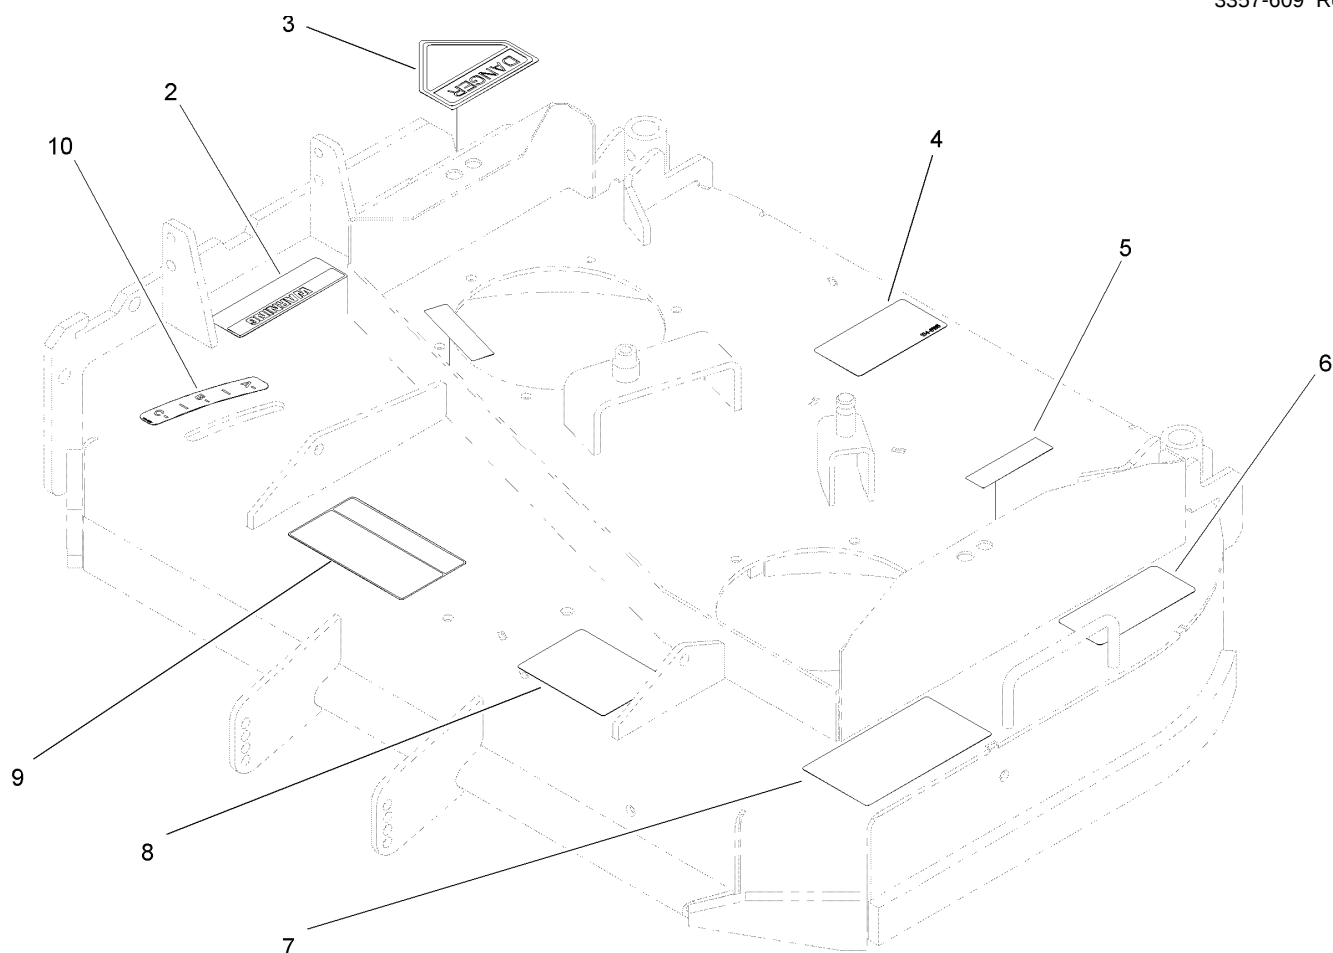


Deck Assembly No. 112-7080

Ref	Part No.	Qty.	Description
2	104-8569	1	Decal-Warning
3	43-8480	1	Decal-Danger
4	104-8185	1	Decal
5	98-5954	2	Decal-Cover, Missing
6	68-8340	1	Decal-Torque
7	66-1340	1	Decal-Danger
8	105-7798	1	Decal-Scalp, Anti
9	110-2068	1	Decal-Adjustment, Baffle
10	110-2067	1	Decal-Setting, Baffle


Lever Assembly No. 107-1664

Ref	Part No.	Qty.	Description
1	106-3239	1	Screw-Lock
2	107-1644	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

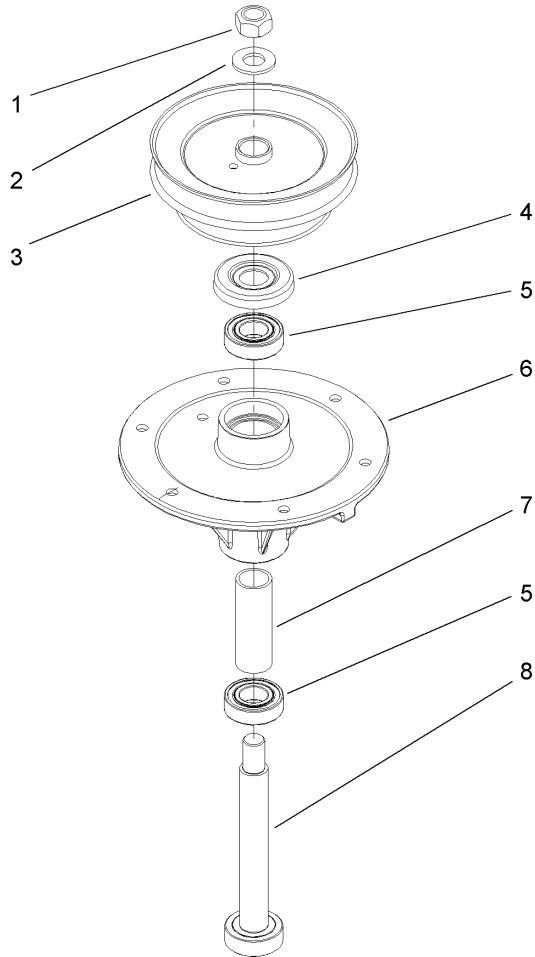


Spindle Assembly No. 110-0730

Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	108-6627	1	Pulley And Hub ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	108-6696	1	Housing-Spindle				
7	110-0727	1	Spacer-Bearing				
8	110-0725	1	Shaft-Spindle				

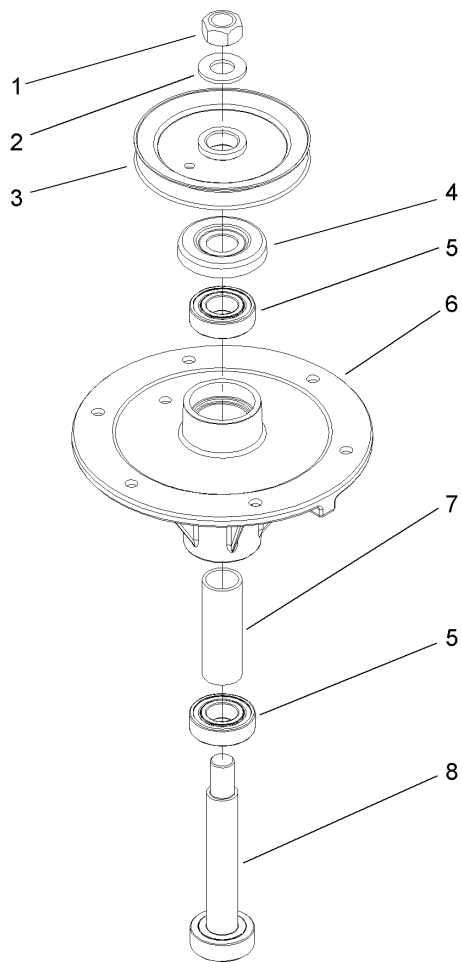


Spindle Assembly No. 110-0728

Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	104-1181	1	Pulley ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	108-6696	1	Housing-Spindle				
7	110-0727	1	Spacer-Bearing				
8	110-0726	1	Shaft-Spindle				

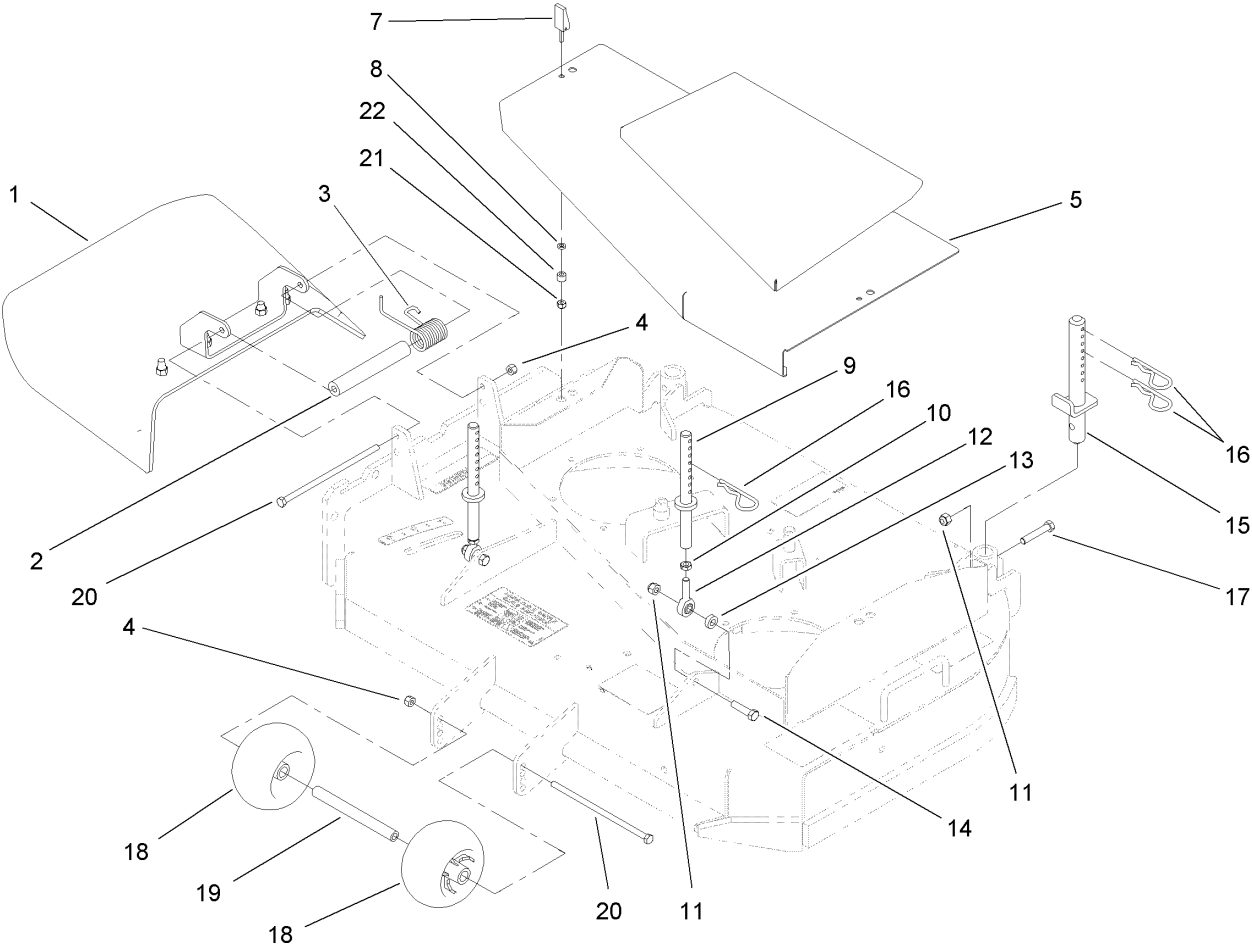


Outer Deck Assembly

Ref	Part No.	Qty.	Description				
1	110-0790	1	Deflector ASM				
2	105-4622	1	Spacer				
3	104-8554	1	Spring-Torsion				
4	3296-29	2	Nut-Lock, NI				
5	110-6964-01	1	Cover ASM				
7	106-6777	2	Handle-Latch, Swell				
8	99-3058	2	Washer				
9	108-2674	2	Front Pin ASM				
10	3220-3	2	Nut-HJ				
11	3296-39	4	Nut-Lock, NI				
12	1-613204	2	Balljoint				
13	104-1156	2	Spacer				
14	323-8	2	Screw-HH				
15	110-2086	2	Rear Pin ASM				
16	3290-256	6	Pin-Hair				
17	323-10	2	Screw-HH				
18	1-603299	2	Roller-Scalp, Anti				
19	98-5967	1	Spacer-Wheel				
20	322-50	2	Screw-HH				
21	1-804254	2	Nut				
22	106-6778	2	Bushing-Latch, Swell				

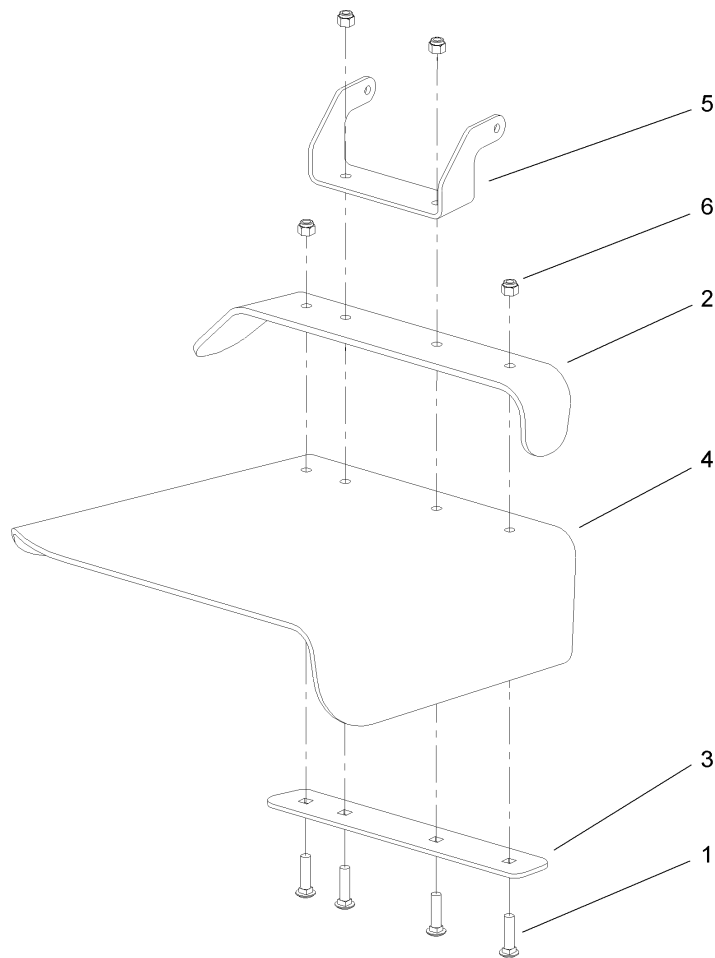


Deflector Assembly No. 110-0790

Ref	Part No.	Qty.	Description				
1	3231-4	4	Screw-CARR				
2	110-0792-01	1	Deflector				
3	110-0793-03	1	Strap-Discharge				
4	110-0791	1	Deflector-Rubber				
5	107-4164-01	1	Bracket-Mounting, Deflector				
6	3296-39	4	Nut-Lock, NI				

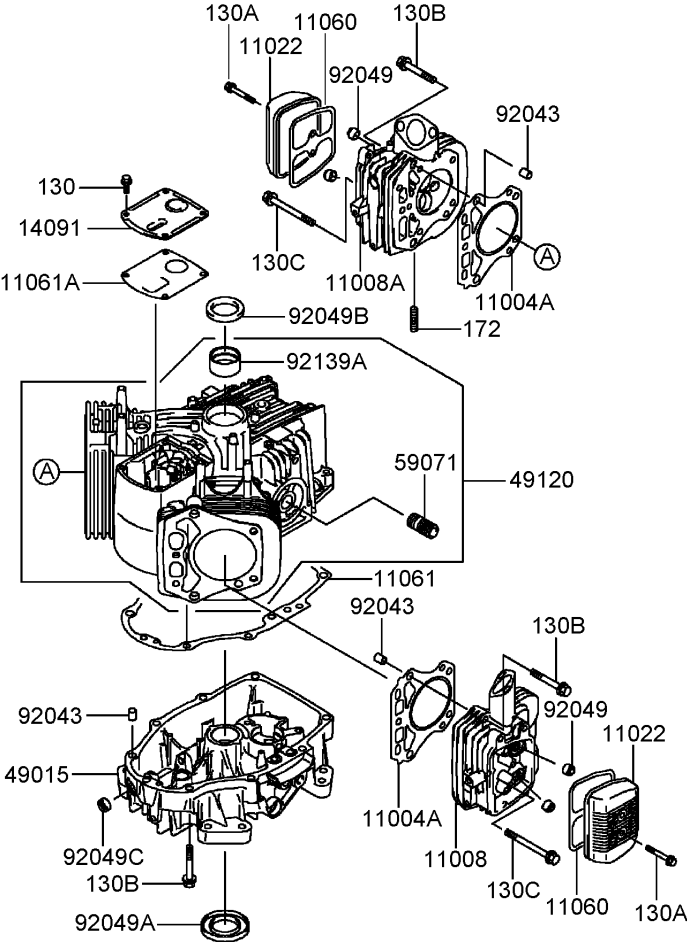


Cylinder and Crankcase Assembly
Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description				
❶11004A	11004-7018	2	Gasket-Head				
❶11008	11008-7021	1	Head-Cylinder, No. 2				
❶11008A	11008-7022	1	Head-Cylinder, No. 1				
❶11022	11022-7003	2	Case-Rocker				
❶11060	11060-7001	2	Gasket-Case, Rocker				
❶11061	11061-7007	1	Gasket-Cover, Crankcase				
❶11061A	11061-7008	1	Gasket-Breather				
❶14091	14091-7007	1	Cover				
❶49015	49015-7032	1	Cover-Crankcase				
❶49120	49120-7015	1	Crankcase				
❶59071	59071-2079	1	Joint				
❶92043	92043-7001	6	Pin				
❶92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)				
❶92049A	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)				
❶92049B	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)				
❶92049C	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)				
❶92139A	92139-7008	1	Bushing				
❶130	130B0612	4	Bolt-Flanged (6X12)				
❶130A	130B0640	4	Bolt-Flanged (6X40)				
❶130B	130T0850	17	Bolt-Flanged (8X50)				
❶130C	130T0875	2	Bolt-Flanged (8X75)				
❶172	172G0818	4	Bolt-Stud (8X18)				

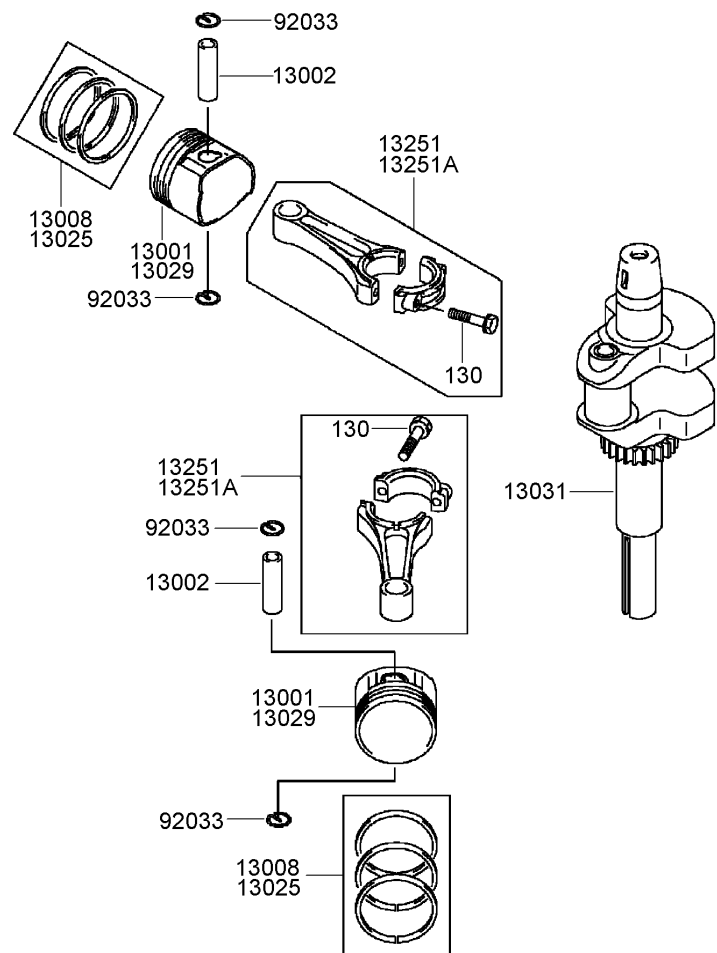


Piston and Crankshaft Assembly
Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description				
❶13001	13001-7009	2	Piston-Engine				
❶13002	13002-7001	2	Pin-Piston				
❶13008	13008-7001	2	Ring Set-Piston				
❶13025	13025-7003	1	Ring Set-Piston (L 0.50)				
❶13029	13029-7005	1	Piston-Engine (L 0.50)				
❶13031	13031-7033	1	Crankshaft				
❶13251	13251-7007	2	Connecting Rod ASM				
❶13251A	13251-7008	2	Connecting Rod ASM (0.50)				
❶92033	92033-7005	4	Ring-Snap				
❶130	130G0630	4	Bolt-Flanged (6X30)				

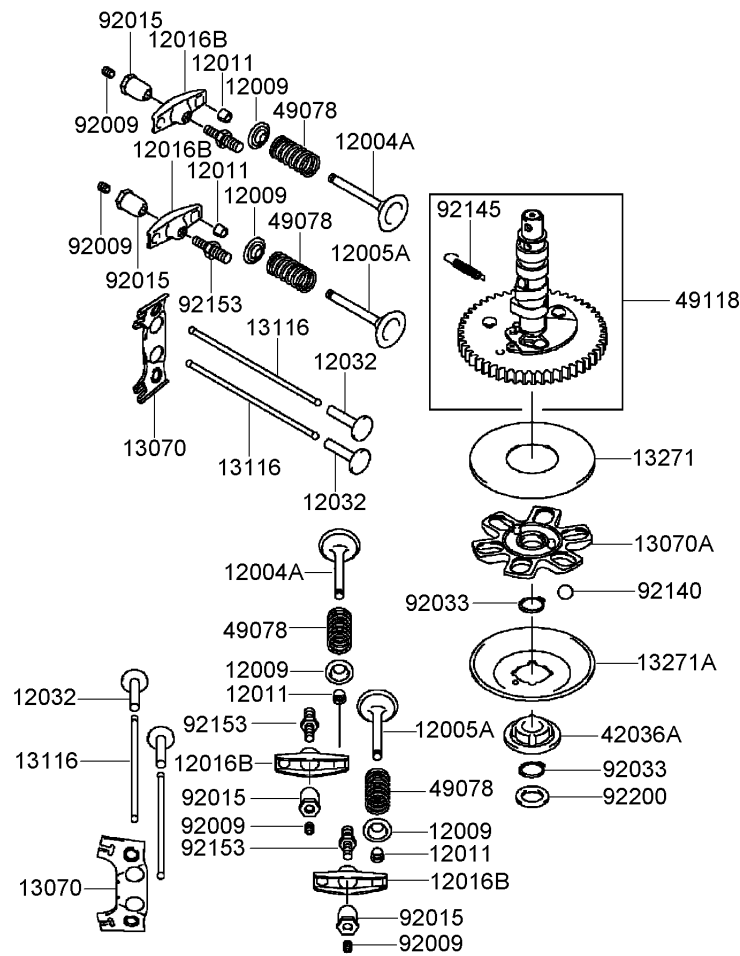


Valve and Camshaft Assembly
Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description				
❶12004A	12004-7005	2	Valve-Intake				
❶12005A	12005-7006	2	Valve-Exhaust				
❶12009	12009-7001	4	Retainer-Spring, Valve				
❶12011	12011-2056	8	Collet				
❶12016B	12016-7008	4	Arm-Rocker				
❶12032	12032-7001	4	Tappet				
❶13070	13070-7001	2	Guide				
❶13070A	13070-7004	1	Guide				
❶13116	13116-2057	4	Rod-Push				
❶13271	13271-7007	1	Plate				
❶13271A	13271-7021	1	Plate-Governor				
❶42036A	42036-7010	1	Sleeve				
❶49078	49078-7001	4	Spring-Valve, Engine				
❶49118	49118-7009	1	Camshaft				
❶92009	92009-2341	4	Screw				
❶92015	92015-2253	4	Nut				
❶92033	92033-7001	2	Ring-Snap				
❶92140	92140-7002	6	Ball				
❶92145	92145-7001	1	Spring				
❶92153	92153-7019	4	Bolt				
❶92200	92200-7001	1	Washer				

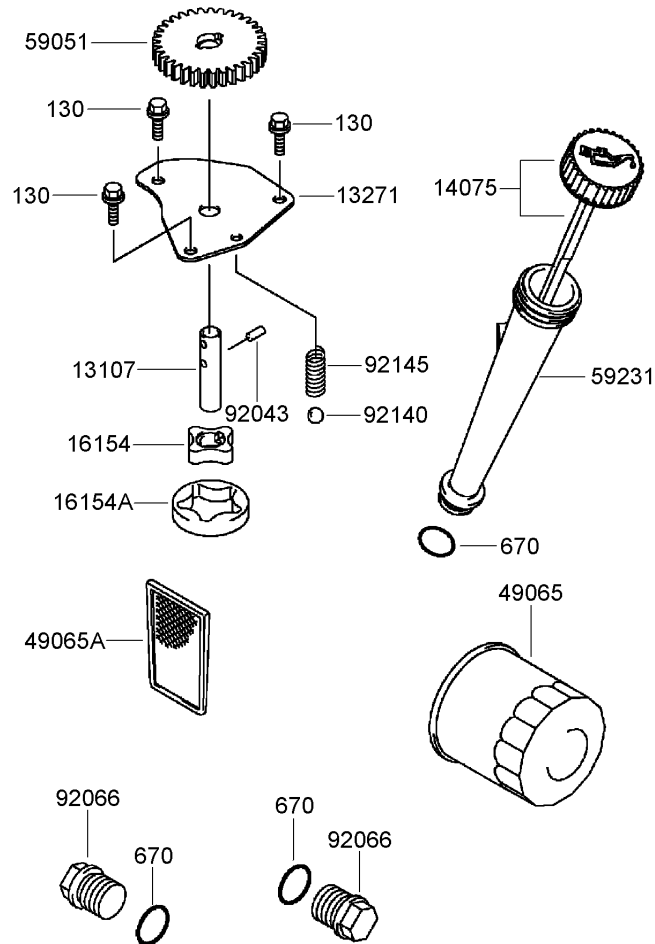


Lubrication Equipment Assembly
Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description				
❶13107	13107-7009	1	Shaft				
❶13271	13271-7017	1	Plate				
❶14075	14075-7009	1	Cap ASM				
❶16154	16154-2053	1	Rotor-Pump (In)				
❶16154A	16154-2054	1	Rotor-Pump (Out)				
❶49065	49065-2078	1	Filter-Oil				
❶49065A	49065-7004	1	Filter-Oil				
❶59051	59051-7011	1	Gear-Spur				
❶59231	59231-7003	1	Filler				
❶92043	92043-7003	2	Pin				
❶92066	92066-7003	2	Plug				
❶92140	92140-7003	1	Ball				
❶92145	92145-7002	1	Spring				
❶130	130B0612	3	Bolt-Flanged (6X12)				
❶670	670D2016	3	O-Ring (16Mm)				

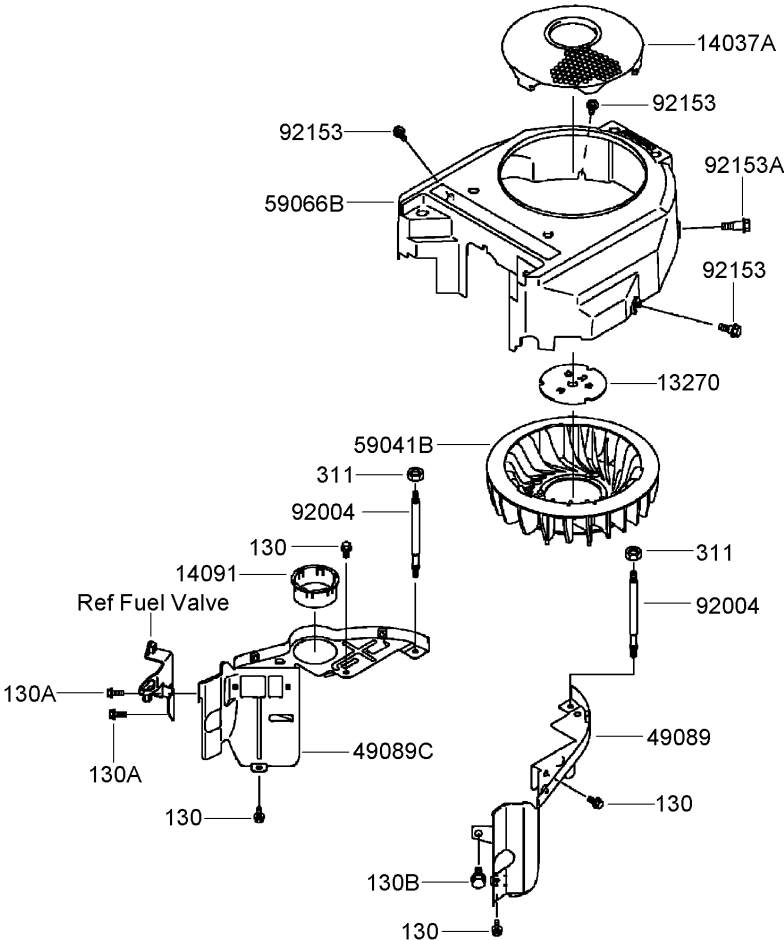

Cooling Equipment Assembly
Kawasaki FH430V-DS28


Ref	Part No.	Qty.	Description				
❶13270	13270-7007	1	Plate				
❶14037A	14037-7025-9H	1	Screen				
❶14091	14091-7009	1	Cover				
❶49089	49089-7044	1	Shroud-Engine				
❶49089C	49089-7061	1	Shroud-Engine				
❶59041B	59041-7012	1	Fan				
❶59066B	59066-7036	1	Housing-Fan				
❶92004	92004-7007	2	Stud				
❶92153	92153-7007	3	Bolt				
❶92153A	92153-7008	1	Bolt				
❶130	130B0612	4	Bolt-Flanged (6X12)				
❶130A	130B0616	2	Bolt-Flanged (6X16)				
❶130B	130B0816	1	Bolt-Flanged (8X16)				
❶311	311F0600	2	Nut-Hex (6Mm)				

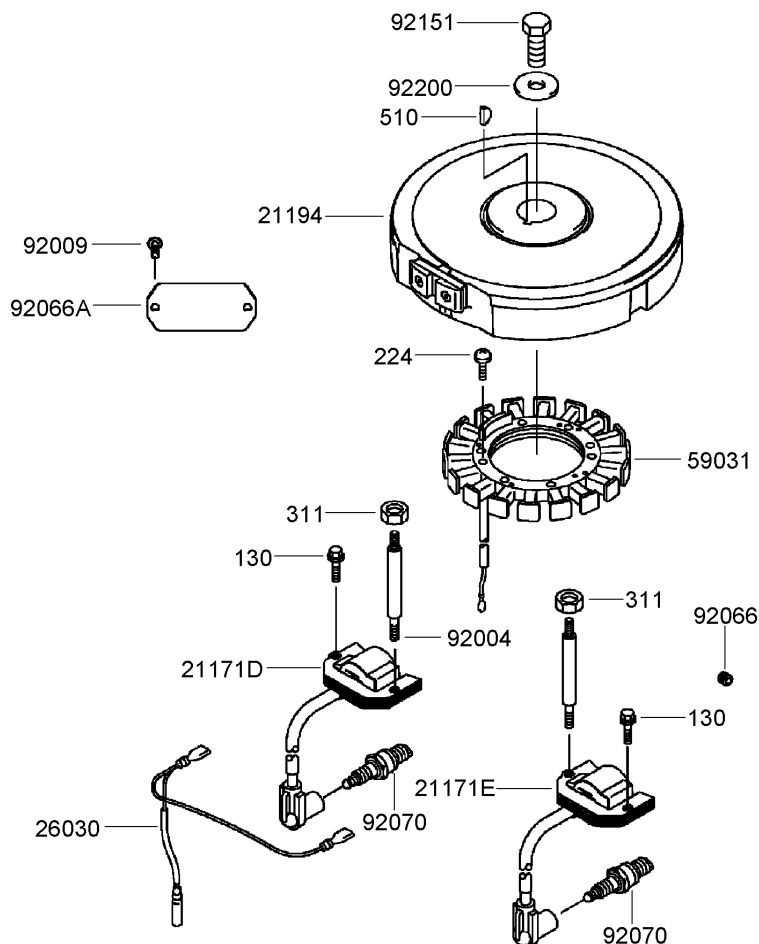

Electric Equipment Assembly

Kawasaki FH430V-DS28


Ref	Part No.	Qty.	Description				
⑨21171D	21171-7026	1	Coil-Assy-Ignition				
⑨21171E	21171-7027	1	Coil-Assy-Ignition				
⑨21194	21194-7012	1	Flywheel				
⑨26030	26030-7001	1	Harness				
⑨59031	59031-7002	1	Coil-Charging				
⑨92004	92004-7008	2	Stud				
⑨92009	92009-2308	2	Screw				
⑨92066	92066-7002	1	Plug				
⑨92066A	92066-7005	1	Plug				
⑨92070	92070-7003	2	Plug-Spark (R C J 8 Y, Solid)				
⑨92151	92151-2097	1	Bolt (12X30)				
⑨92200	92200-7002	1	Washer				
⑨130	130B0620	2	Bolt-Flanged (6X20)				
⑨224	224B0520	4	Screw-Pan (5X20)				
⑨311	311F0600	2	Nut-Hex (6Mm)				
⑨510	510A5100	1	Key-Woodruff				

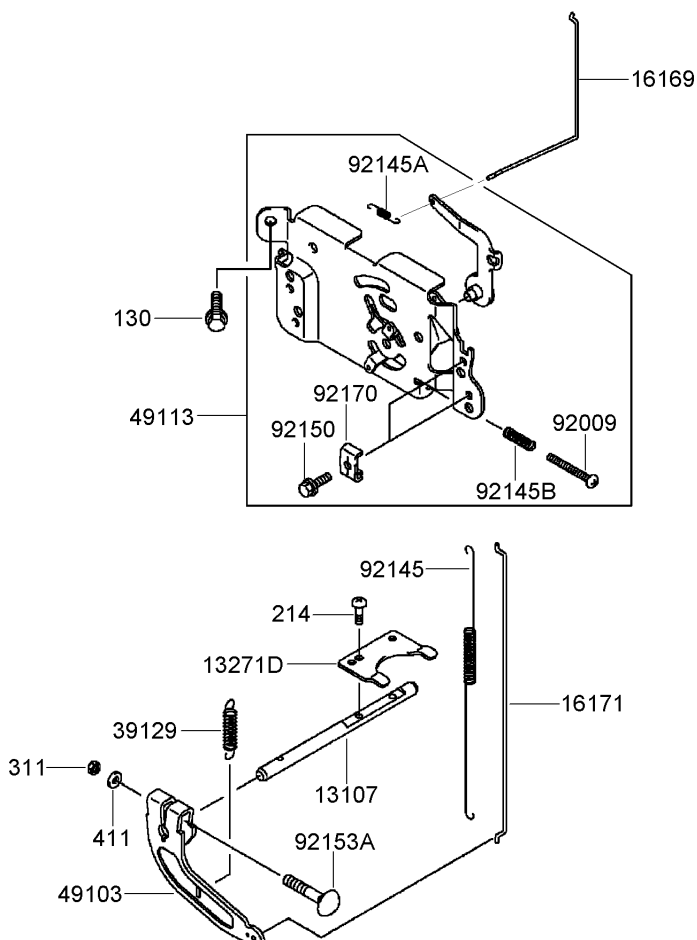

Control Equipment Assembly

Kawasaki FH430V-DS28


Ref	Part No.	Qty.	Description				
③13107	13107-7010	1	Shaft				
③13271D	13271-7032	1	Plate				
③16169	16169-7012	1	Link-Choke				
③16171	16171-7007	1	Link				
③39129	39129-7003	1	Spring-Governor				
③49103	49103-7004	1	Arm-Governor				
③49113	49113-7024	1	Panel-Control				
③92009	92009-7007	1	Screw (4X35)				
③92145	92145-7003	1	Spring				
③92145A	92145-7004	1	Spring				
③92145B	92145-7005	1	Spring				
③92150	92150-2182	1	Bolt (5X18)				
③92153A	92153-7033	1	Bolt (6X35)				
③92170	92170-7001	1	Clamp				
③130	130B0612	2	Bolt-Flanged (6X12)				
③214	214B0408	2	Screw-Pan (4X8)				
③311	311B0600	1	Nut-Hex (6Mm)				
③411	411B0600	1	Washer-Plain (6Mm)				

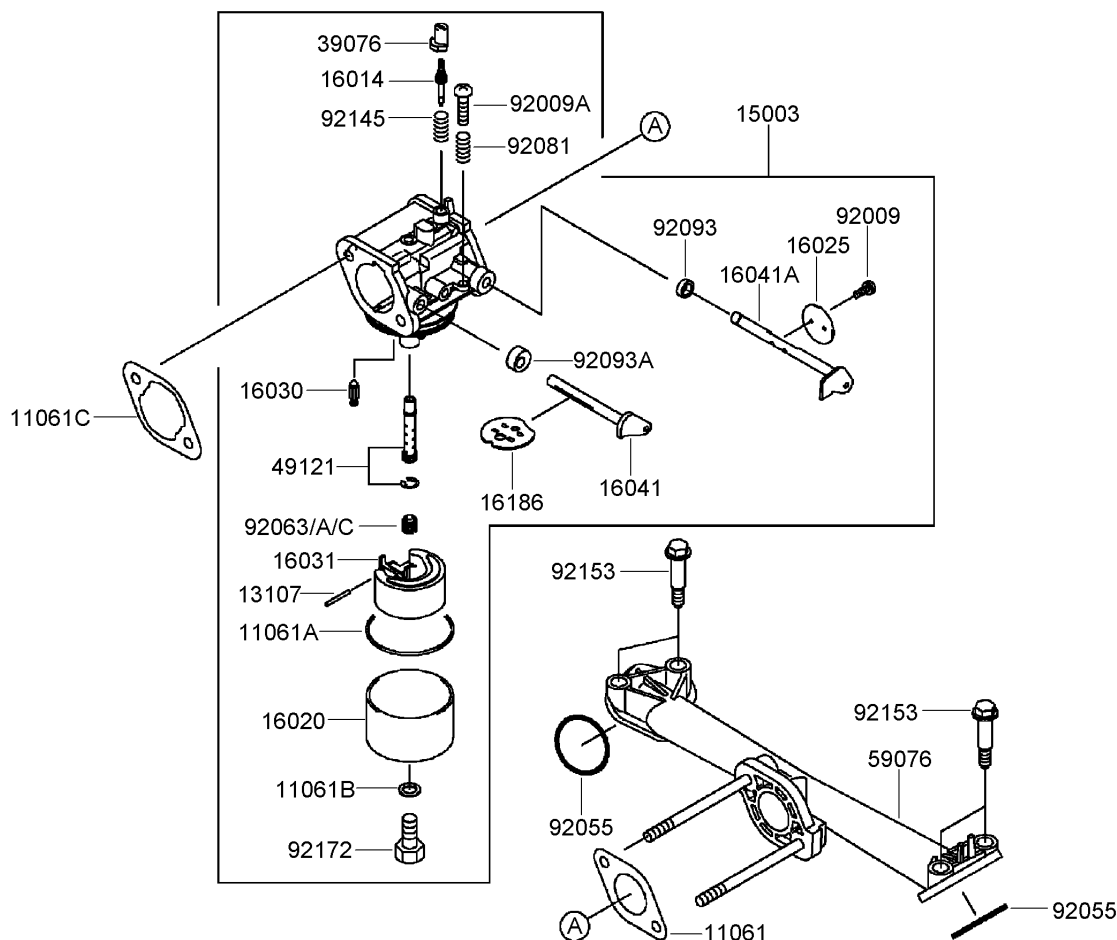

Carburetor Assembly Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description
③11061	11061-7004	1	Gasket-Insulator
③11061A	11061-7009	1	Gasket-Chamber
③11061B	11061-7010	1	Gasket-Screw
③11061C	11061-7018	1	Gasket-Cleaner, Air
③13107	13107-7018	1	Shaft
③15003	15003-7061	1	Carburetor ASM
③16014	16014-7002	1	Screw-Pilot
③16020	16020-7003	1	Chamber-Float
③16025	16025-7006	1	Valve-Throttle
③16030	16030-7003	1	Valve-Float
③16031	16031-7002	1	Float
③16041	16041-7016	1	Shaft-Choke, Carburetor
③16041A	16041-7018	1	Shaft-Throttle, Carburetor
③16186	16186-7002	1	Choke Valve ASM
③39076	39076-7001	1	Limiter
③49121	49121-7001	1	Nozzle-Main
③59076	59076-7005	1	Manifold-Intake
③92009	92009-2083	2	Screw
③92009A	92009-2349	1	Screw
③92055	92055-7007	2	O-Ring (I D 31)
③92063	92063-7026	1	Jet-Main, No. 88
③92063A	92063-7028	1	Jet-Main, No. 85
③92063C	92063-7029	1	Jet-Main, No. 82
③92081	92081-2234	1	Spring


Ref	Part No.	Qty.	Description
③92093	92093-2100	1	Seal
③92093A	92093-7003	1	Seal
③92145	92145-7015	1	Spring
③92153	92153-7009	4	Bolt
③92172	92172-7002	1	Screw

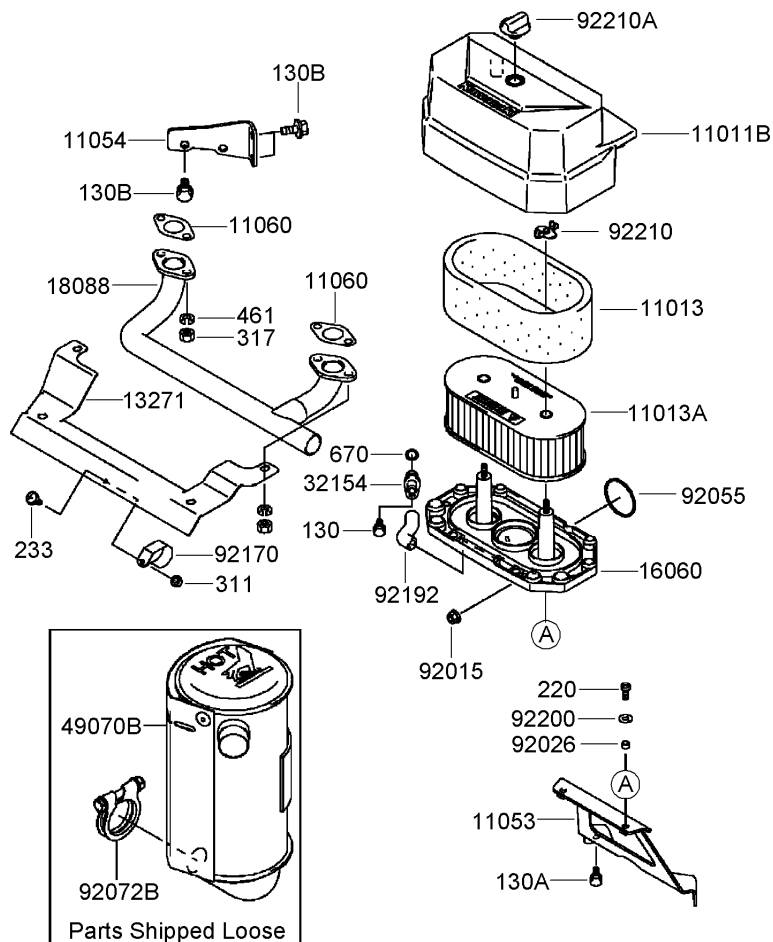

Air Filter and Muffler Assembly Kawasaki FH430V-DS28


Ref	Part No.	Qty.	Description
③11011B	11011-7045	1	Case-Filter, Air
③11013	11013-7025	1	Element-Filter, Air
③11013A	11013-7031	1	Element-Filter, Air
③11053	11053-7022	1	Bracket
③11054	11054-7002-9H	1	Bracket
③11060	11060-7021	2	Gasket-Muffler
③13271	13271-7022	1	Plate
③16060	16060-7016	1	Pipe-Intake
③18088	18088-7001	1	Pipe-Exhaust
③32154	32154-7006	1	Pipe
③49070B	49070-7021	1	Muffler
③92015	92015-1193	2	Nut
③92026	92026-7001	2	Spacer (6.2X7.9X5)
③92055	92055-7015	1	O-Ring
③92072B	92072-7012	1	Band
③92170	92170-7002	1	Clamp
③92192	92192-7010	1	Tube
③92200	92200-2070	2	Washer
③92210	92210-7004	2	Nut
③92210A	92210-7019	1	Nut
③130	130B0610	1	Bolt-Flanged (6X10)
③130A	130B0612	2	Bolt-Flanged (6X12)
③130B	130B0816	3	Bolt-Flanged (8X16)

Ref	Part No.	Qty.	Description
③220	220B0614	2	Screw-Pan (Cross) (6X14)
③233	233B0416	1	Screw (4X16)
③311	311B0400	1	Nut-Hex (4Mm)
③317	317R0800	4	Nut-Hex (8Mm)
③461	461F0800	4	Washer-Spring (8Mm)
③670	670B2010	1	O-Ring (10Mm)

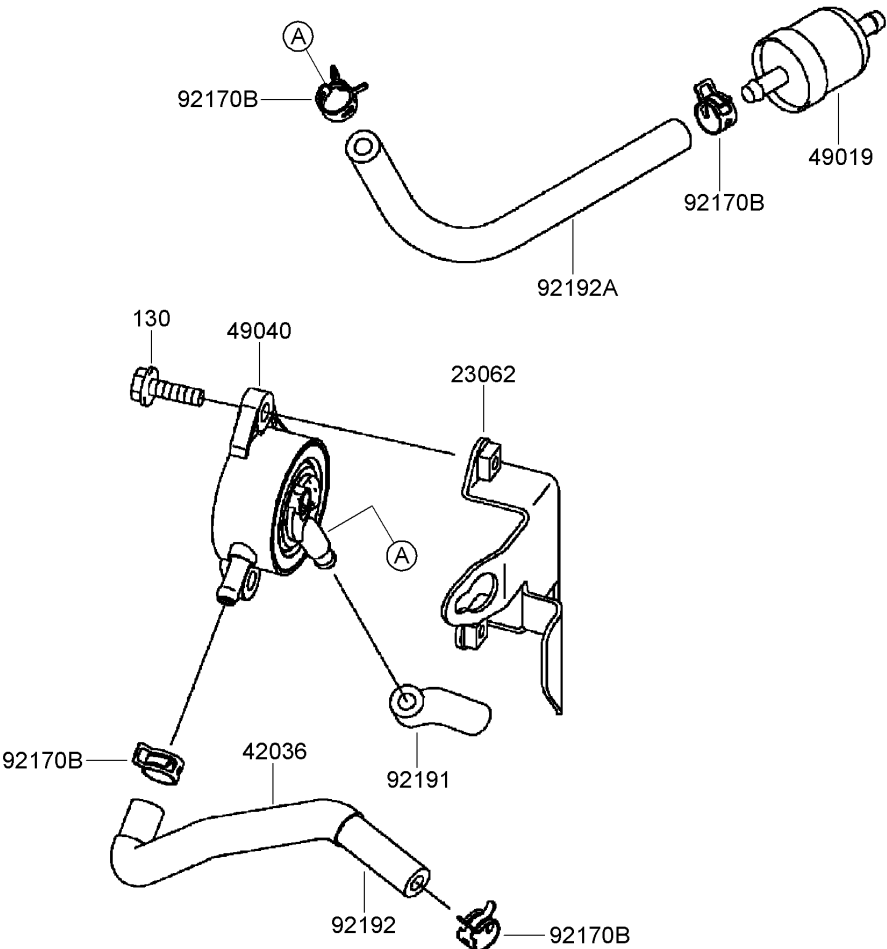

Fuel Tank and Valve Assembly
Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description				
③23062	23062-7004-9H	1	Bracket				
③42036	42036-7012	1	Sleeve				
③49019	49019-7001	1	Filter-Fuel				
③49040	49040-7001	1	Pump-Fuel				
③92170B	92170-2088	4	Clamp				
③92191	92191-7002	1	Tube				
③92192	92192-7035	1	Tube (6.35X12.7X170)				
③92192A	92192-7037	1	Tube (6.35X12.7X160)				
③130	130B0620	2	Bolt-Flanged (6X20)				

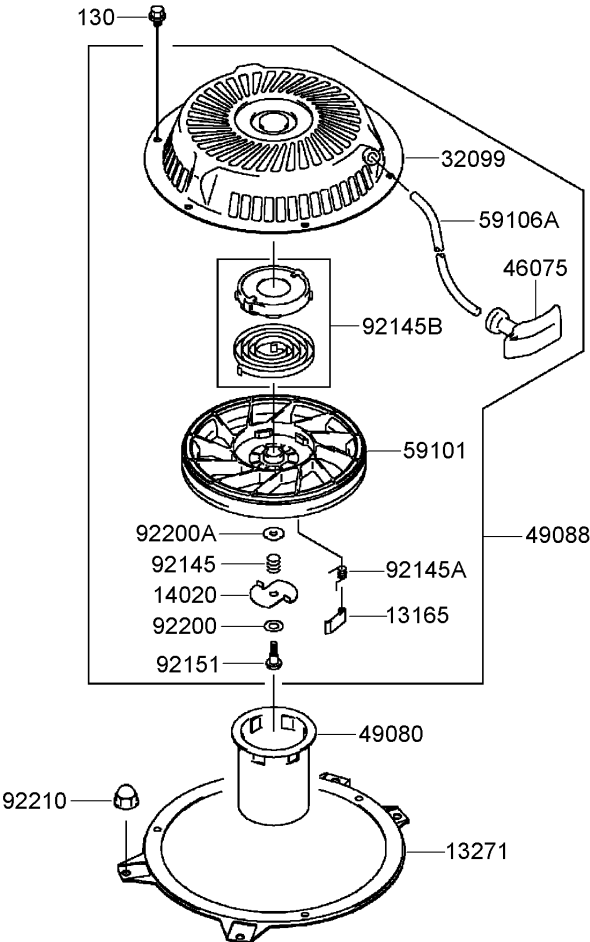

Starter Assembly
Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description				
❸13165	13165-7001	2	Pawl-Starter, Recoil				
❸13271	13271-7003-9H	1	Plate				
❸14020	14020-7001	1	Retainer				
❸32099	32099-7002	1	Case-Starter, Recoil				
❸46075	46075-7001	1	Grip-Starter, Recoil				
❸49080	49080-7001	1	Pulley-Starting				
❸49088	49088-7013	1	Starter-Recoil				
❸59101	59101-7001	1	Reel-Starter, Recoil				
❸59106A	59106-7005	1	Rope				
❸92145	92145-7006	1	Spring				
❸92145A	92145-7007	2	Spring				
❸92145B	92145-7008	1	Spring				
❸92151	92151-7008	1	Bolt				
❸92200	92200-7004	1	Washer				
❸92200A	92200-7005	1	Washer				
❸92210	92210-0003	4	Nut				
❸130	130B0608	3	Bolt-Flanged (6X8)				

Attachments and Accessories

**For 30094 - Commercial Walk-Behind Mower, Floating Deck T-Bar Gear with 36in TURBO
FORCE Cutting Unit**

Product Name	Model/Part
Blade-Recycler, 18 Inch	105-7779-03
Blade-Med Flow, 18 Inch	105-7794-03
Blade-Low Flow, 18 Inch	105-7795-03
Blade-Atomic, 18 Inch	105-7796-03
36 Inch Bagger Enhancement Kit	110-2026
36 Inch Recycler Kit	110-2080
Weight-Cast	112-7059-01
Soft Bag (3 Bushel)	30104
Tru Trak Sulky	30110

