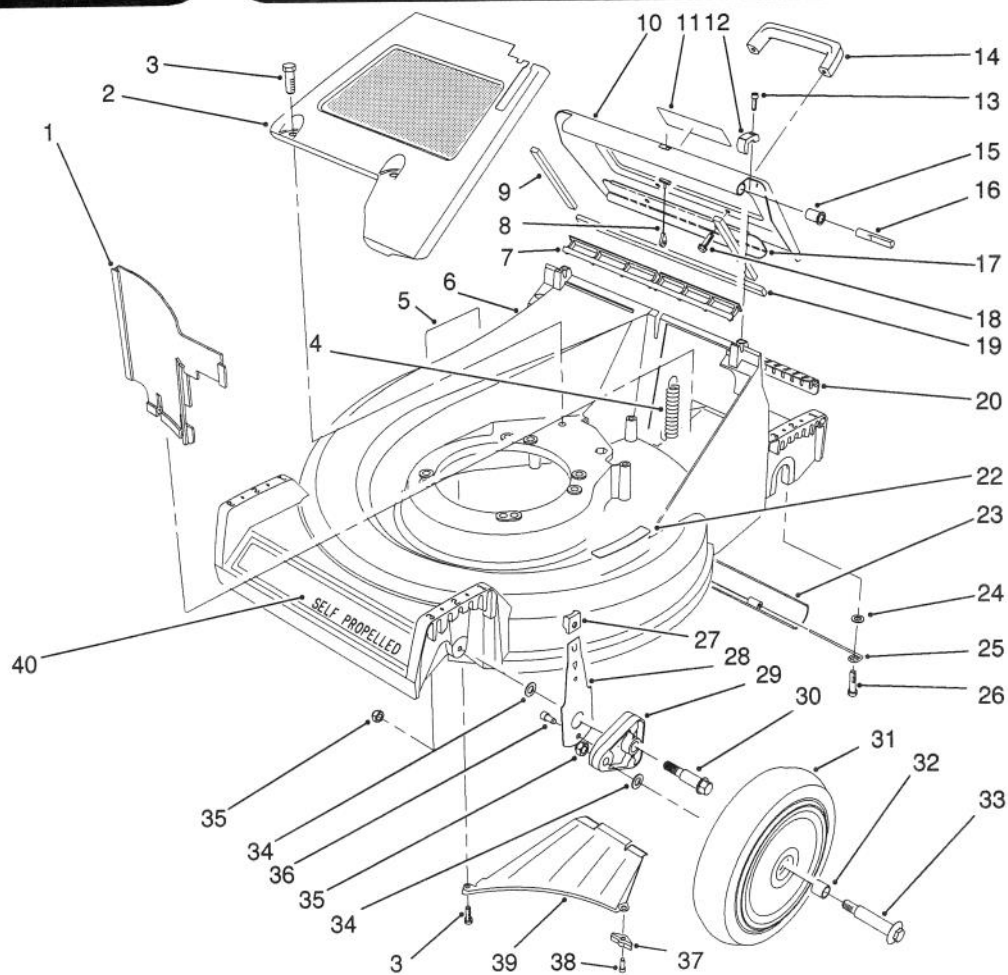


TORO®

MODEL NO 26683-1000001 & UP

**PARTS
CATALOG****21" S.P. REAR BAGGER**


C-0250

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-0020	Panel - Vertical	1
2	65-5660	Panel - Screen	1
3	32144-70	Screw - Hex. Hd.	3
4	65-5360	Spring - Extension	1
5	56-6270	Decal - Danger	1
6	13-5869	21" Housing Assembly (Incl. Ref. #5, 21-22)	1
7	65-5160	Seal - Door	1
8	65-5370	Cable - Door	1
9	65-5480	Seal - Door Side	2
10	13-5889	Door - Discharge (Incl. Ref. #9, 11, 17 & 19)	1
11	71-8370	Decal - Warning	1
12	65-5140	Clamp - Hinge	2
13	65-5210	Screw - Hex. Socket Hd.	2
14	65-5100	Handle - Door	1
15	65-5460	Bushing - Door	2
16	65-5290	Pin - Hinge	2

Ref. No.	Part No.	Description	No. Used
17	66-0610	Brace - Door	1
18	46-8091	Screw - Handle	2
19	65-5490	Seal - Door (End)	1
20	65-5150	Cover - Access	1
22	62-3950	Decal - Step Pad	1
23	65-5350	Shield - Trailing	1
24	3256-23	Washer - Flat	2
25	76-1980	Hanger - Shield	2
26	5-2490	Screw - Shoulder	2
27	25-7740	Knob - Spring Arm	2
28	66-0540	Arm - Front Spring	2
29	66-0580	Arm - Front Pivot	2
30	66-0560	Screw - Shoulder	2
31	11-9509	Wheel & Tire Assembly (Incl. Ref. #30)	2
32	27-6250	Bushing - Wheel	4
33	27-6231	Bolt - Wheel	2

TPS

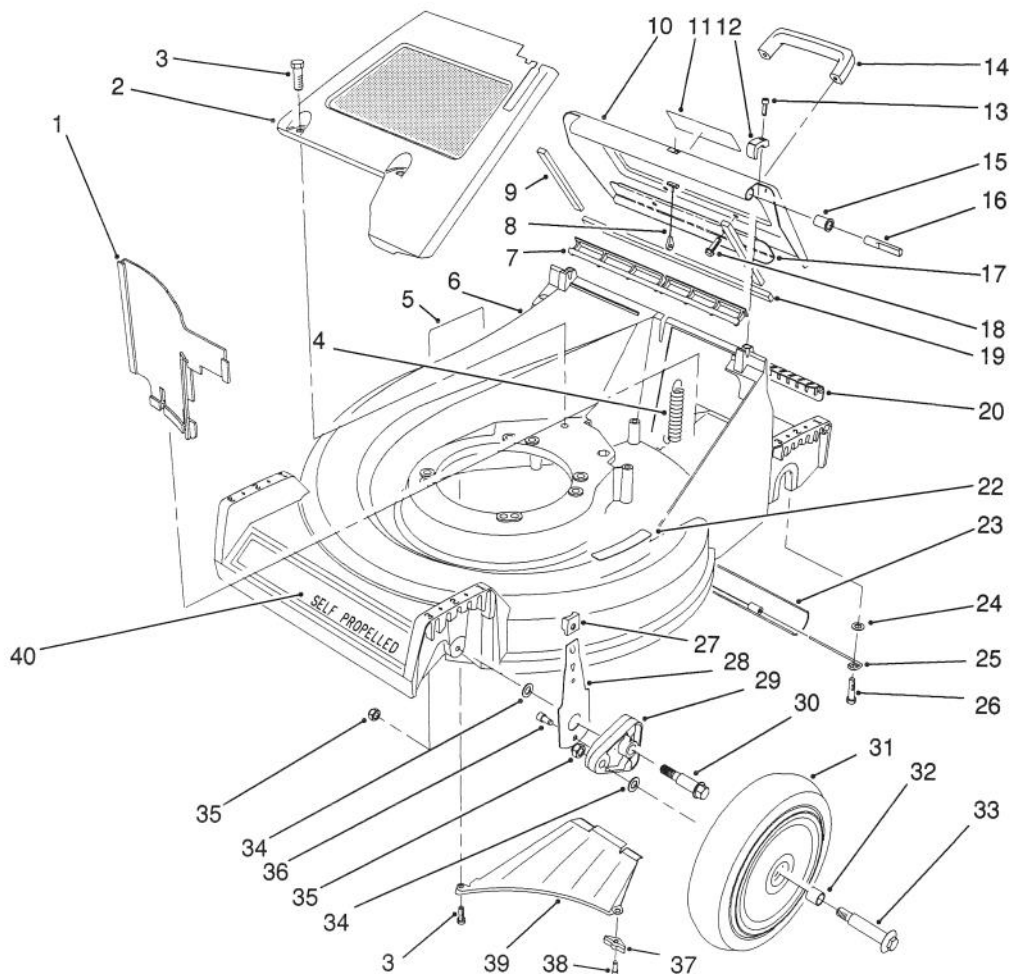


C-0250

HOUSING ASSEMBLY(Continued)

Ref. No.	Part No.	Description	No. Used
34	40-1940	Washer - Wheel	4
35	3296-6	Nut - Lock	4
36	65-5220	Screw - Socket Hd.	2
37	66-0640	Bracket - Discharge	1

Ref. No.	Part No.	Description	No. Used
38	65-5221	Screw - Bracket	1
39	65-5010	Ramp - Discharge	1
40	82-7890	Decal - 21"	1

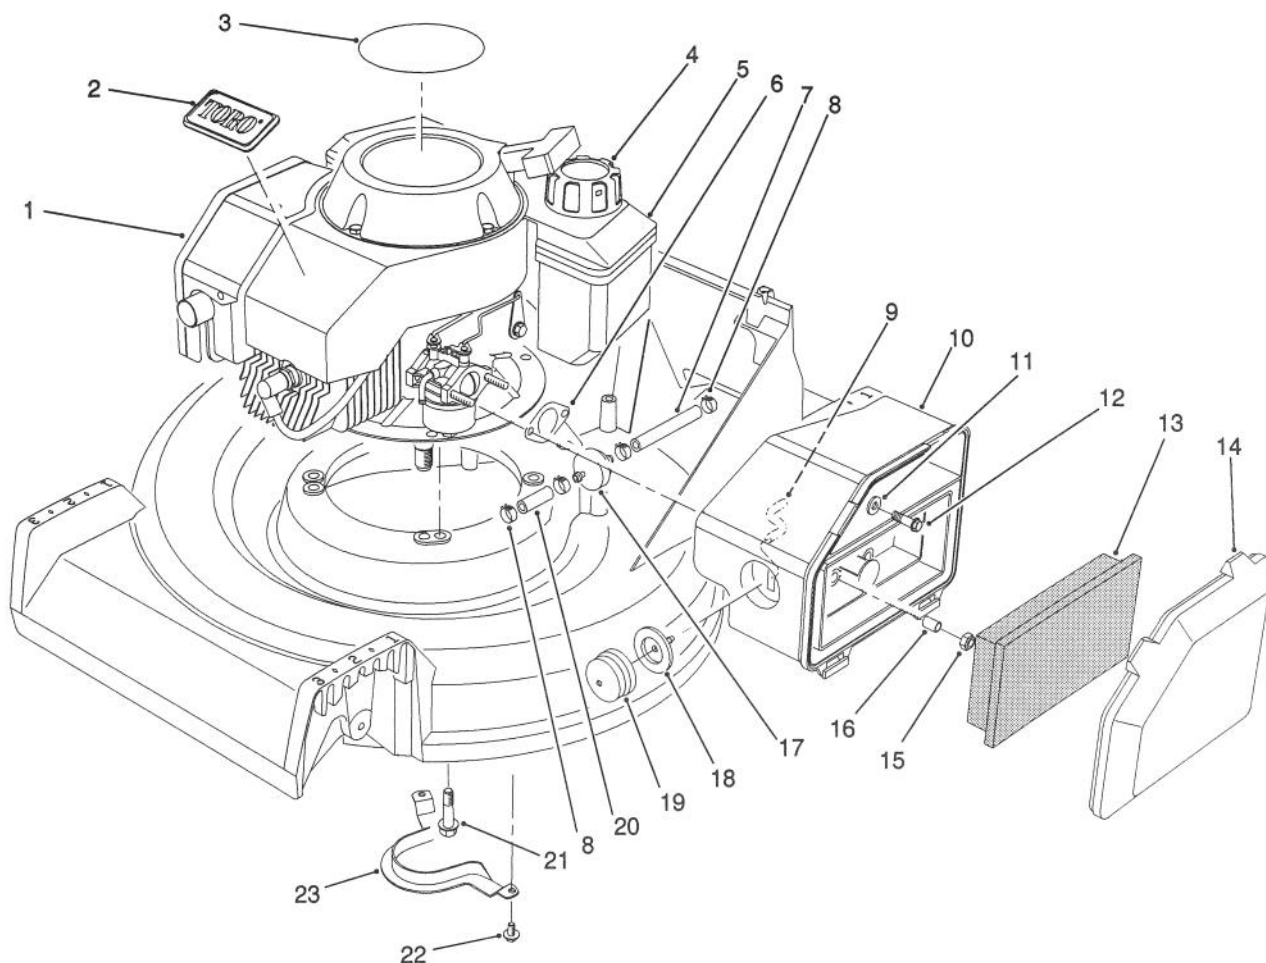


C-0175

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	51-0402	Engine - 2 Cycle	1
2	46-8290	Plate - Toro	1
3	66-0510	Decal - Recoil	1
4	55-3575	Cap - Fuel	1
5	81-0162	Tank - Fuel	1
6	81-0090	Gasket - Air Cleaner	1
7	51-3215	Line - Fuel	1
8	2412-95	Clamp - Fuel Line	4
9	44-3172	Hose - Primer	1
10	63-9330	Body - Air Cleaner	1
11	3256-16	Washer	1
12	51-2690	Screw - Hex. Flange	1

Ref. No.	Part No.	Description	No. Used
13	63-9380	Element - Air Cleaner	1
14	63-9340	Cover - Air Cleaner	1
15	50-7180	Nut - Lock	2
16	62-3980	Spacer	2
17	56-6360	Filter - Fuel	1
18	44-2750	Body - Primer	1
19	66-7460	Bulb - Primer	1
20	51-3216	Line - Fuel	1
21	66-9301	Screw - Hex. Hd.	3
22	32144-70	Screw - Hex. Hd.	2
23	66-0570	Guide - Belt	1

*Not Illustrated

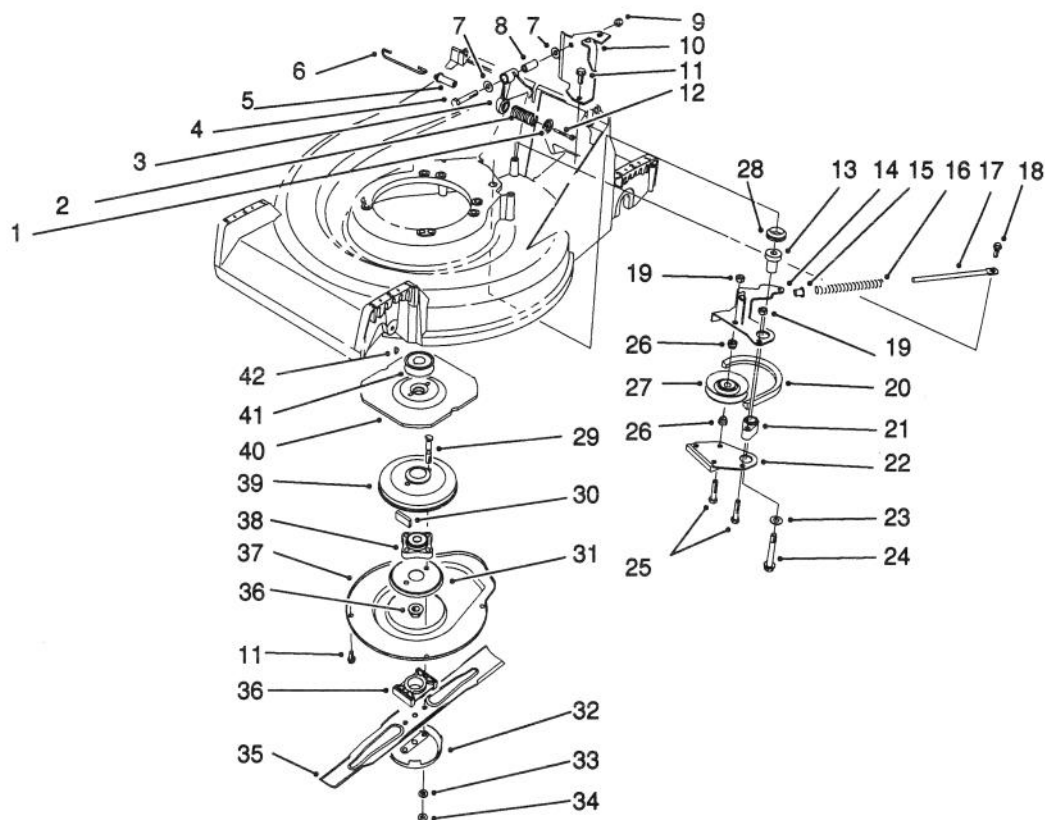


C-0182

BLADE BRAKE CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	65-5280	Retainer - Spring	1
2	71-3630	Spring - Compression	1
3	65-5700	Crank	1
4	322-21	Screw - Hex. Hd.	1
5	71-3660	Pin - BBC Spring	1
6	71-3650	Link - Control	1
7	3256-23	Washer - Flat	2
8	65-5690	Bushing - Bellcrank	1
9	32128-44	Nut - Lock	1
10	66-0030	Bracket - Cable Support	1
11	32144-70	Screw - Hex. Hd.	5
12	46-7040	Screw - Hex. Hd.	1
13	65-5720	Bushing - BBC	1
14	66-0090	Lever - Brake	1
15	66-0350	Bushing - Flange	1
16	71-3640	Spring - Compression	1
17	65-5320	Rod - Brake Spring	1
18	65-5670	Bolt - Shoulder	1
19	3296-42	Nut - Lock	2
20	65-5740	Belt - BBC	1
21	65-5070	Hub - Brake Plate	1

Ref. No.	Part No.	Description	No. Used
22	65-5780	Brake Plate Assembly	1
23	65-5380	Washer	1
24	11-0580	Screw - Hex. Hd.	1
25	321-13	Screw - Hex. Hd.	2
26	65-5130	Hub - Idler Pulley	2
27	46-5650	Idler Pulley Assembly	1
28	253-151	Seal - V-Ring	1
29	42-3190	Screw - BBC	2
30	52-3480	Dampner - Vibration	2
31	65-5330	Screen - BBC	1
32	80-2770	Cup - Anti Scalp	1
33	54-9190	Nut - Lock	2
34	62-7700	Blade - 21"	1
35	62-4280	Spacer - Blade	1
36	3296-33	Nut - Lock	1
37	65-5200	Cover - BBC	1
38	42-6890	Hub Assembly	1
39	62-3890	Drum - Brake	1
40	65-5300	Flywheel - BBC	1
41	62-7560	Pulley - Engine	1
42	3257-17	Key - Hypro	1

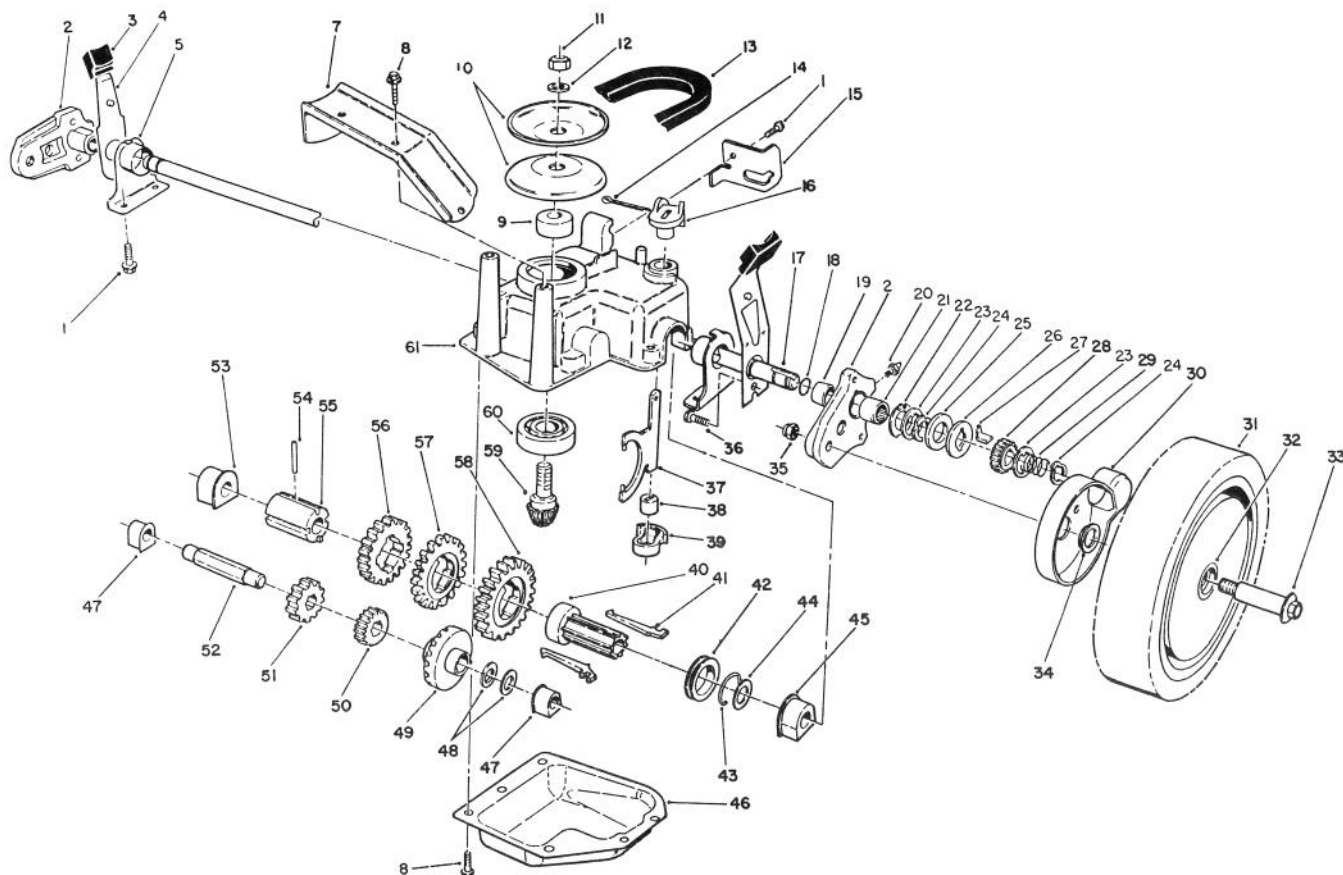


C-0152

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw - Hex. Washer Hd.	3	24	65-2720	Ring - Retaining	4
2	65-5042	Pivot Arm Assembly (Incl. Ref. #19-21)	2	25	65-4710	Ring - Friction	2
3	25-7740	Knob - Arm	2	26	65-4760	Washer -Clutch	2
4	65-5440	Spring Arm Assembly	2	27	66-6050	Key - Rocking (L.H.)	1
5	66-0360	Cap - End	2	*	66-6040	Key - Rocking (R.H.)	1
7	65-5190	Bracket - Belt Guide	1	28	65-4750	Pinion	2
8	49-2040	Screw - Self Tapping	8	29	65-4720	Spring - Compression	2
9	62-6660	Spacer	1	30	74-1660	Cover - Wheel	2
10	60-8840	Pulley - Half	2	31	11-9519	Wheel Tire & Gear Assy. (Incl. Ref. #32)	2
11	3296-5	Nut - Lock	1	32	27-6250	Bushing - Wheel	4
12	3256-24	Washer - Flat	1	33	27-6231	Bolt - Wheel	2
13	66-0210	V-Belt	1	34	74-1671	Spacer - Wheel Cover	2
14	3272-5	Pin - Cotter	1	35	3296-6	Nut - Lock	2
15	76-2930	Retainer - Cable	1	36	65-5220	Screw - Socket Hd.	2
16	76-0920	Lever - Shift	1	37	60-8870	Yoke - Shift	1
17	65-4770	Shaft - Output	1	38	29-9570	Bushing - Yoke	1
18	237-153	O-Ring	2	39	60-8810	Retainer - Shift Fork	1
19	70-9760	Bushing - Sleeve	2	40	76-0780	Sleeve - Shift Key	1
20	302-56	Fitting - Grease	2	41	76-0760	Key - Shift	2
21	48-2060	Bearing -Needle	2	42	76-0770	Collar - Shift	1
22	65-4730	Washer - Thrust (Inner)	2	43	65-5250	Clip - Spring	1
23	65-4740	Washer - Thrust (Keyed)	4	44	36-4780	Washer - Thrust	1

*Not Illustrated

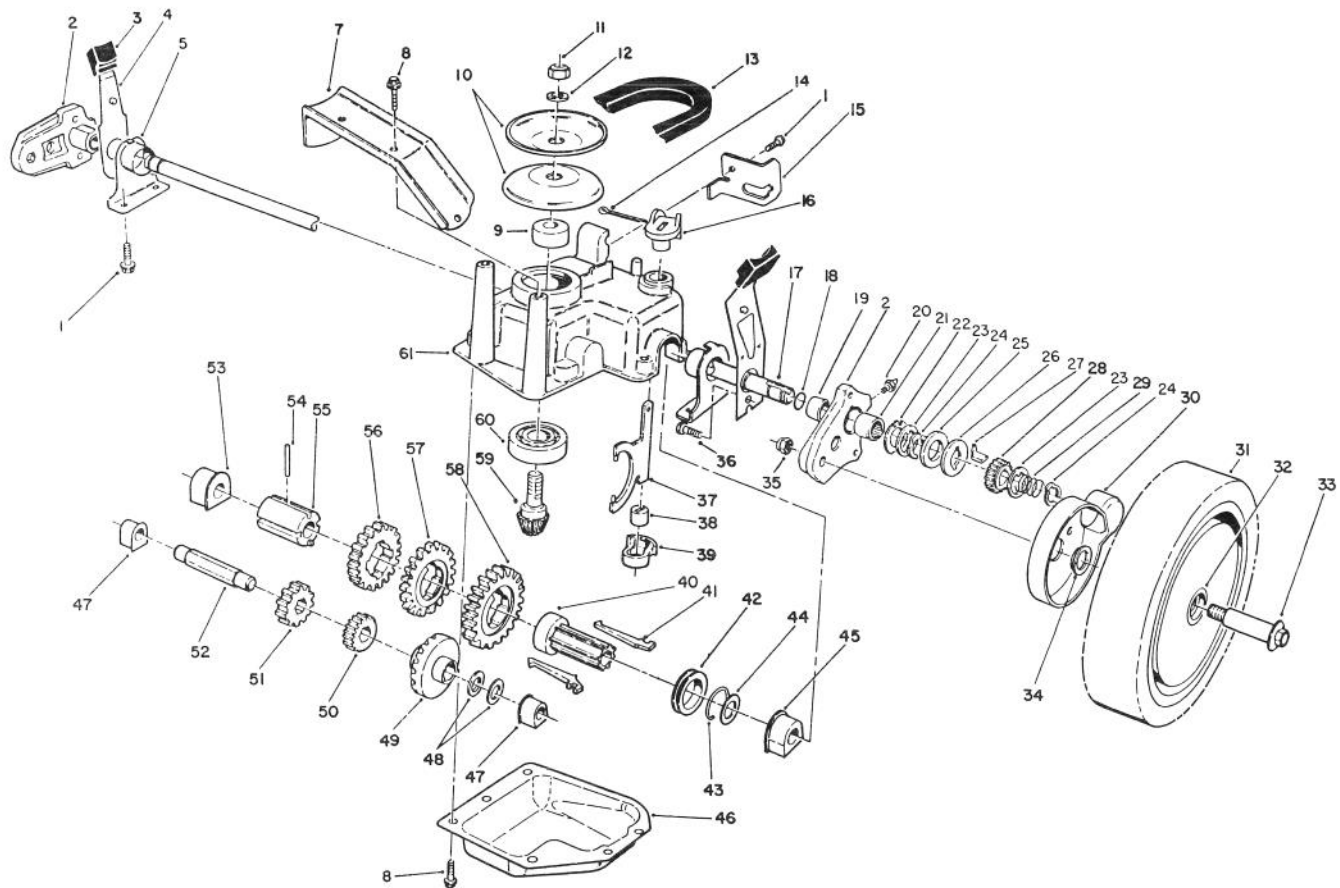


C-0152

GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	60-8770	Bushing - Output Shaft	1
46	60-8730	Cover - Gear Case	1
47	60-8750	Bushing - Intrmdt. Shaft	2
48	36-4791	Washer - Thrust	2
49	55-3760	Gear - Pinion 15T	1
50	55-3780	Gear - Pinion 20T	1
51	55-3800	Gear - Pinion 25T	1
52	60-8800	Shaft - Intermediate	1
53	60-8850	Bushing - Output Shaft	1

Ref. No.	Part No.	Description	No. Used
54	32121-120	Pin - Coil	1
55	60-8790	Sleeve - Gear	1
56	55-3810	Gear - 39T (3rd Gear)	1
57	55-3790	Gear - 44T (2nd Gear)	1
58	55-3770	Gear - 49T (1st Gear)	1
59	60-8890	Pinion - Bevel	1
60	38-7820	Bearing - Ball	1
61	60-8710	Case - Gear (Upper)	1
*	62-6673	Gear Case Assy. Complete	1

*Not Illustrated

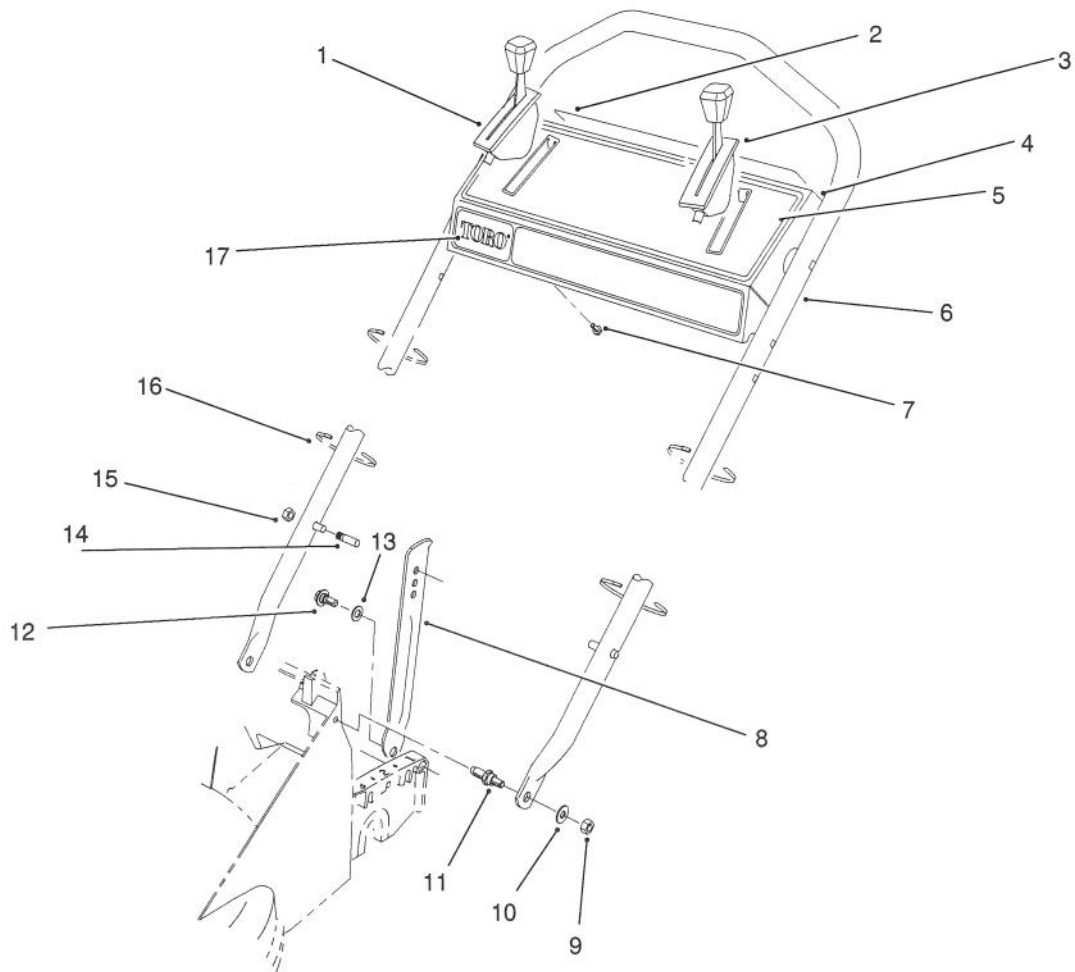


C-0173

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-2710	Control - Ground Speed Bend Type #3 Sheath Lg. 51-1/4" Wire Lg. 2-1/4"	1
2	66-1790	Decal - Danger	1
3	66-0236	Control - Throttle Bend Type #1 Sheath Lg. 44-3/4" Wire Lg. 2-3/4"	1
4	13-4339 65-5060	Control Panel Assembly (Incl. Ref. #2 & 5)	1
5	66-0260	Decal - Instruction	1

Ref. No.	Part No.	Description	No. Used
6	66-0320	Handle	1
7	32104-76	Screw - Self Tapping	4
8	65-5730	Latch - Handle	2
9	3296-29	Nut - Lock	2
10	3256-23	Washer - Flat	2
11	66-0450	Screw - Shoulder Stud	2
12	5-2490	Screw - Shoulder	2
13	256-313	Washer - Nylon	2
†14	49-2750	Pin - Handle	2
15	3296-47	Nut - Lock	2
16	3290-378	Tie - Cable	4
17	66-1770	Decal - TORO	1

†Service Replacement Parts

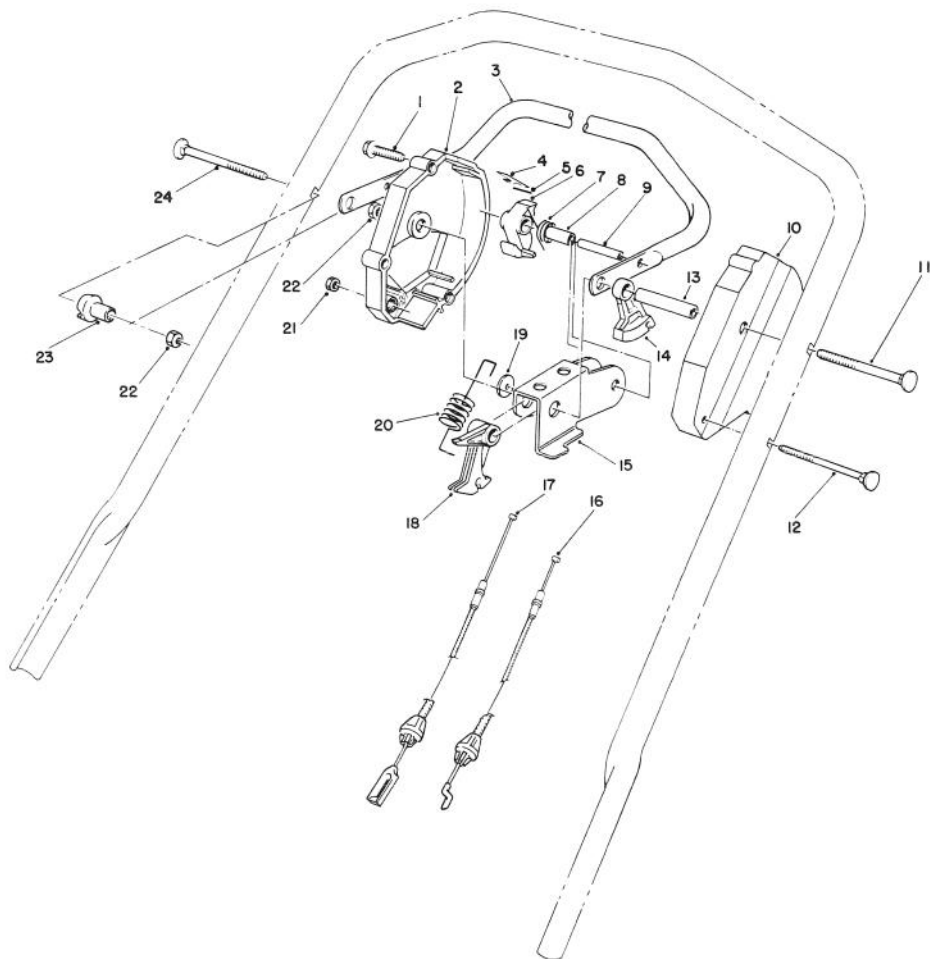


C-0153

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-7040	Screw - Hex. Washer Hd.	3
2	66-0160	Housing - Control R.H.	1
3	52-7430	Control Bar Assembly	1
4	52-7410	Spring - Leaf	1
5	57-6290	Pin - Insert	1
6	46-5530	Hook - Control	1
7	46-5510	Spring - Torsion	1
8	46-5550	Bushing - Sleeve	1
9	32121-9	Pin - Coil	1
10	46-5460	Housing - Control (L.H.)	1
11	17-9425	Screw - Handle	1
12	46-6431	Screw - Handle	1

Ref. No.	Part No.	Description	No. Used
13	46-5590	Spacer	1
14	46-5520	Lever - Traction	1
15	66-0180	Rocker	1
16	77-0210	Cable - Traction	1
17	77-0190	Cable - Clutch	1
18	46-5540	Lever - Cable	1
19	66-0170	Washer - Nylon	1
20	66-0190	Spring - Detent	1
21	3296-8	Nut - Lock	1
22	3296-58	Nut - Lock	2
23	66-0330	Support - Spacer	1
24	17-9426	Screw - Handle	1

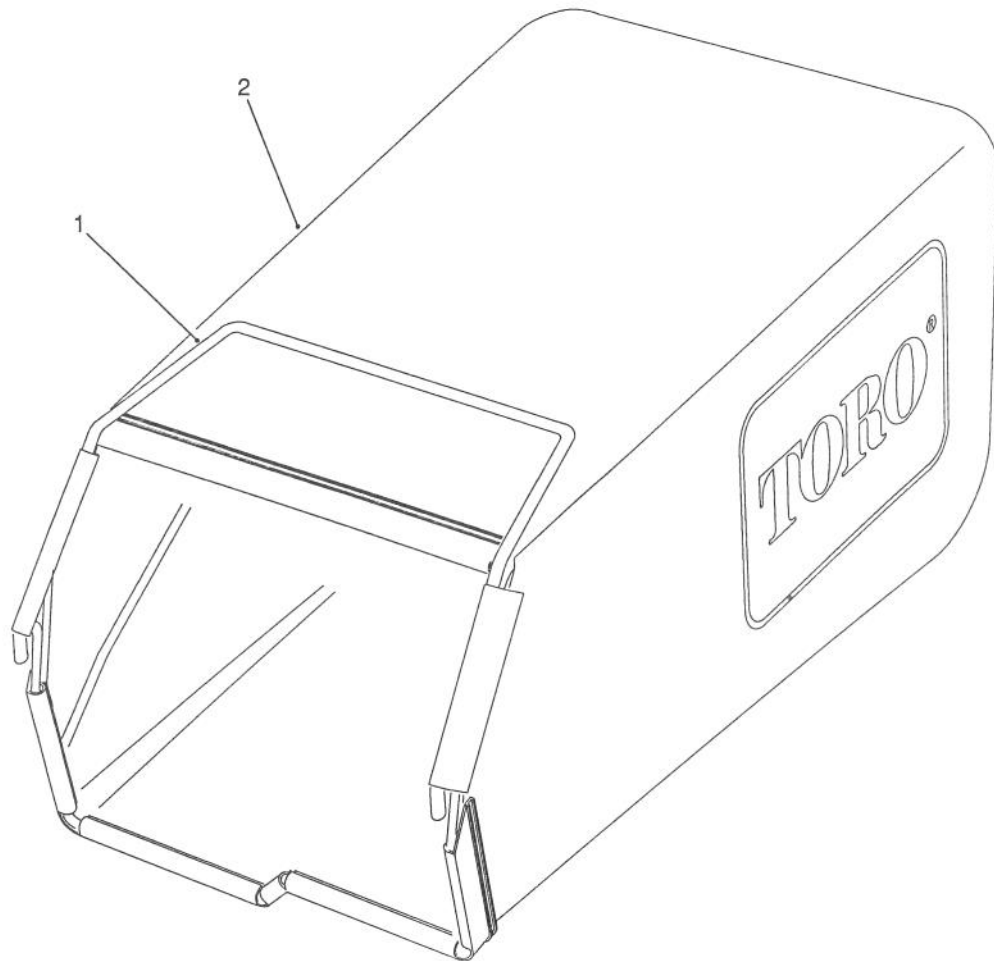


C-0168

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-1790	Frame - Grass Bag	1
2	66-0010	Bag	1

Ref. No.	Part No.	Description	No. Used
*		Grass Bag Assembly (Incl. Ref. #1 & 2)	1

*Not Illustrated

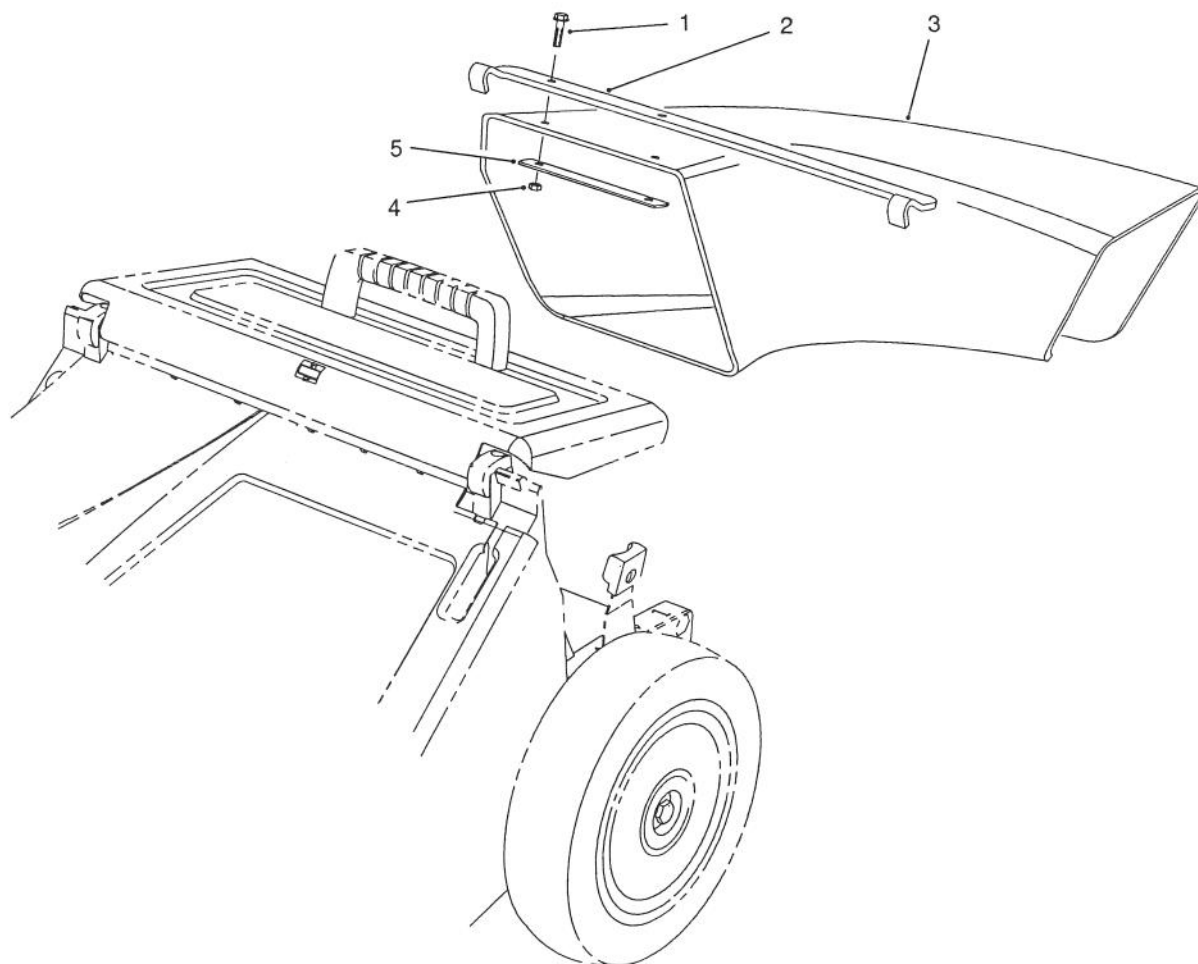


C-0169

SIDE DISCHARGE CHUTE MODEL NO. 59112 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3290-126	Screw - Hex. Washer Hd.	2
2	66-0070	Bracket - Chute Hanger	1
3	65-5240	Chute - Discharge	1

Ref. No.	Part No.	Description	No. Used
4	3296-12	Nut - Lock	2
5	66-0060	Plate - Stress	1

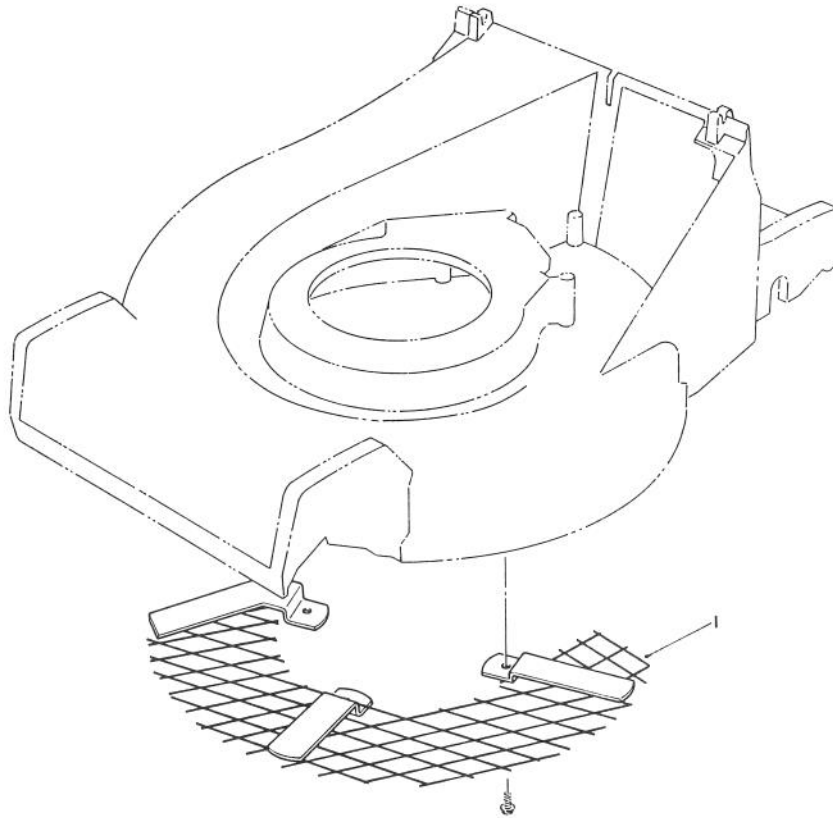


C-0542

LEAF SHREDDER Model No. 59180

Ref. No.	Part No.	Description	No. Used
1	77-0390	Shredder - Leaf	1

Ref. No.	Part No.	Description	No. Used

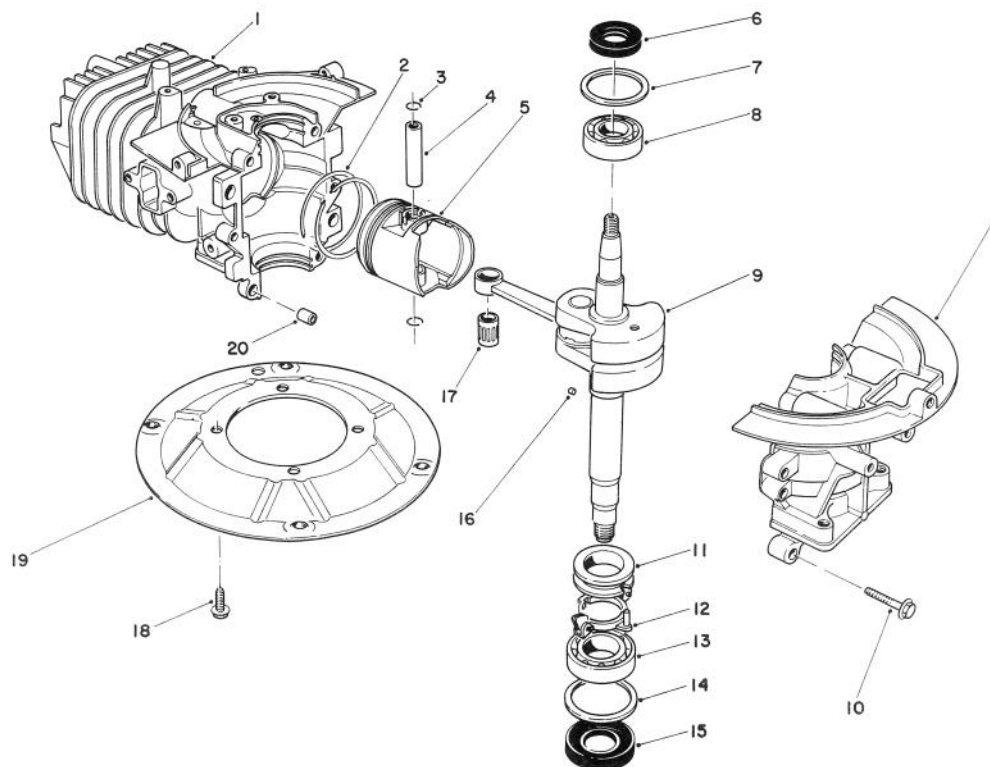


T-0663

CRANKSHAFT ASSEMBLY (Engine No. 47PL0-2)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	81-2800	Crankcase/Cylinder Assy.	1	11	81-0770	Collar - Governor	1
2	81-0590	Piston Ring Set	1	12	81-0750	Bracket - Governor Arm	1
3	81-0620	Circlip	2	13	81-0700	Bearing - Lower 25mm	1
4	81-0600	Pin - Wrist	1	14	81-0730	Washer - Thrust Lower	1
5	81-0580	Piston - 58mm	1	15	81-0740	Seal - Oil Lower	1
6	81-0720	Seal - Oil Upper	1	16	81-0760	Pin - Crankshaft	1
7	81-0710	Washer - Thrust Upper	1	17	81-0610	Bearing - Wrist Pin	1
8	81-0690	Bearing - Upper 20mm	1	18	81-0570	Bolt	4
9	81-4670	Crankshaft/Connecting Rod Assembly	1	19	81-0560	Plate - Mounting	1
10	81-0540	Bolt	6	20	81-0520	Pin - Crankcase	2
				*	12-7719	Short Block (Model 47PL0-2)	1

*Not Illustrated

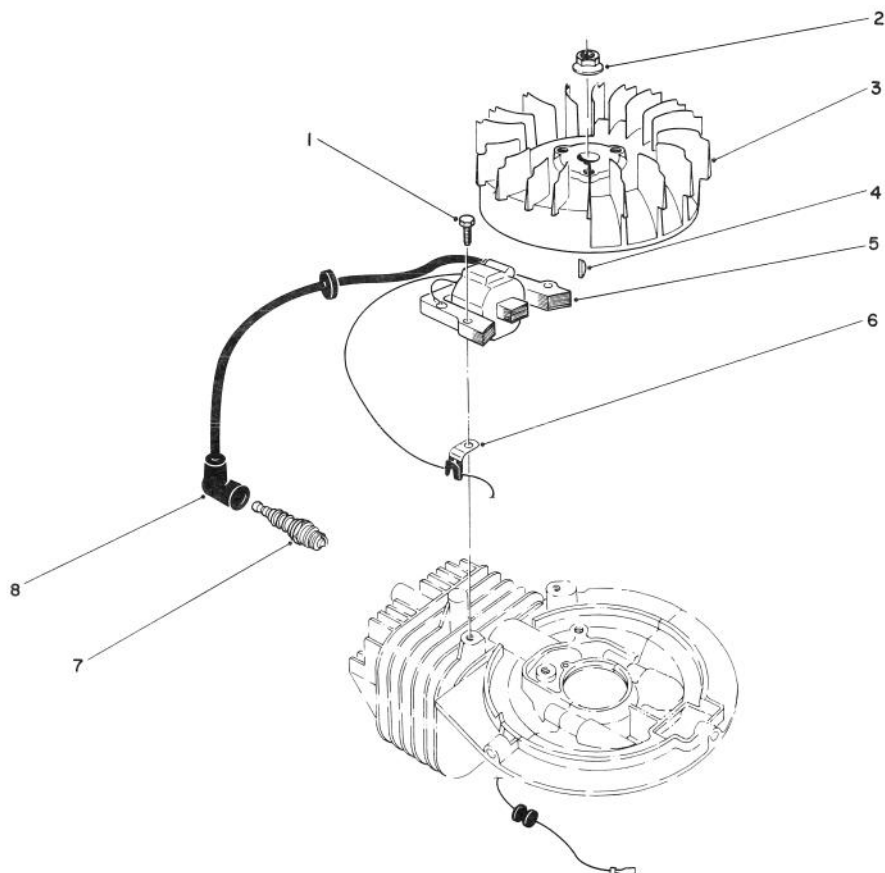


C-0176

FLYWHEEL & MAGNETO ASSEMBLY (Engine Model No. 47PL0-2)

Ref. No.	Part No.	Description	No. Used
1	81-5670	Screw - Hex. Hd	2
2	81-1330	Nut	1
3	81-2810	Flywheel - Magneto	1
4	81-2370	Key - Flywheel	1
5	81-2820	Coil/Ignition Assembly	1

Ref. No.	Part No.	Description	No. Used
6	81-1480	Clamp	1
7	81-0181	Spark - Plug	1
8	81-1500	Cover - Spark Plug	1
*	41-7650	Puller - Flywheel	1

*Not Illustrated

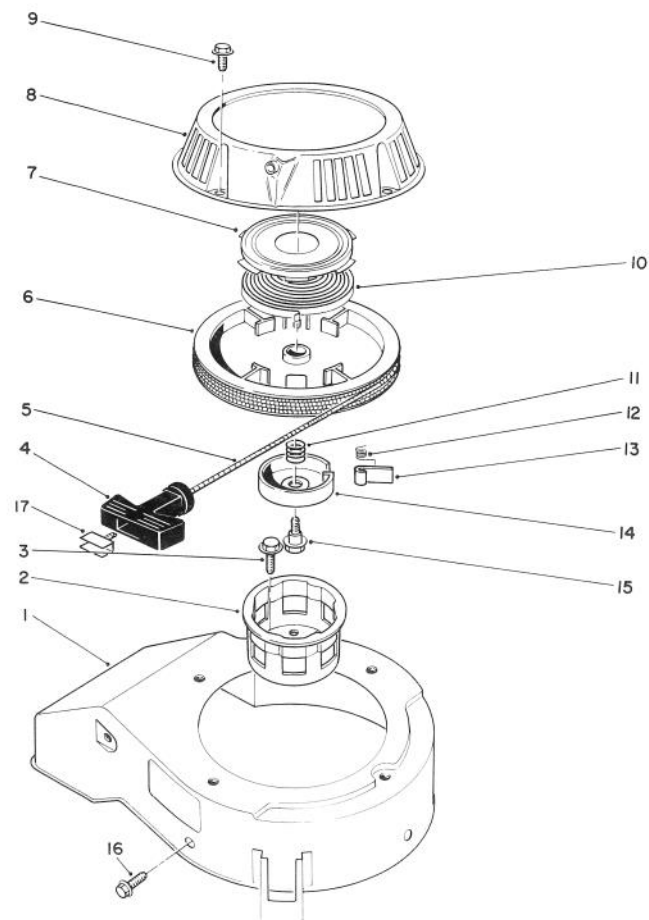


T-0668

RECOIL ASSEMBLY (Engine Model No. 47PL0-2)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	81-2070	Cover - Cooling Fan	1	12	81-1220	Spring - Dog	1
2	81-1290	Cup - Starter Pulley	1	13	81-1230	Dog	1
3	81-1300	Bolt	3	14	81-1250	Retainer - Dog	1
4	81-1630	Handle - Recoil	1	15	81-1260	Bolt - Shoulder	1
5	81-1270	Rope	1	16	81-1170	Bolt - Self Tapping	3
6	81-1210	Reel - Rope Pulley	1	17		Insert - Recoil Handle	1
7		Retainer - Recoil Spring	1	*	81-2300	Spring & Retainer Assembly (Incl. Ref. #7 & 10)	1
8	81-2090	Case - Recoil	1	*	81-5480	Recoil Ass'y (Incl. Ref. #2-15, & 17)	1
9	81-1280	Bolt	4				
10		Spring - Recoil	1				
11	81-1240	Spring - Compression	1				

*Not Illustrated

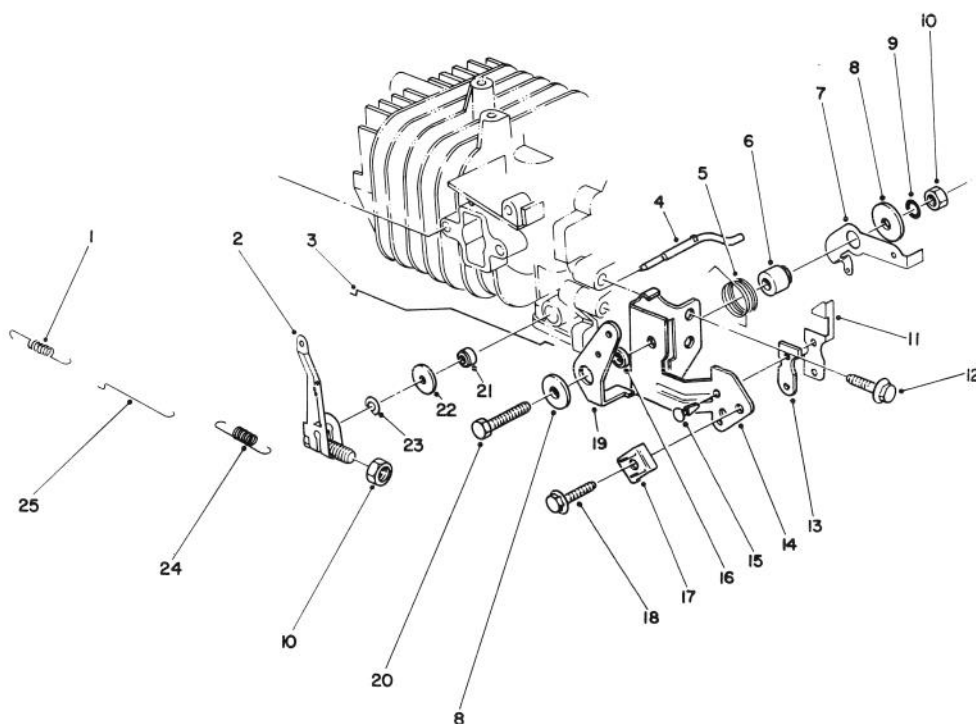


GOVERNOR ASSEMBLY (Engine No. 47PL0-2)

C-0177

Ref. No.	Part No.	Description	No. Used
1	81-0920	Spring - Carburetor Rod	1
2	81-5420	Governor Arm Bolt Ass'y.	1
3	81-5410	Rod - Choke	1
4	81-0840	Shaft - Governor	1
5	81-2460	Spring - Choke Lever	1
6	81-1770	Spacer - Governor Lever	1
7	81-2850	Lever - Governor	1
8	81-1750	Washer - Choke Lever	2
9	81-1450	Washer - Lock	1
10	81-0900	Nut	2
11	81-1840	Terminal - Kill Switch	1
12	81-1170	Bolt - Self Tapping	1
13	81-1830	Insulator - Kill Switch	1

Ref. No.	Part No.	Description	No. Used
14	81-2420	Bracket - Throttle	1
15	81-4530	Rivet - Kill Switch	2
16	81-2470	Spacer - Choke Lever	1
17	81-2430	Clamp - Cable	1
18	50-0130	Bolt - Cable Clamp	1
19	81-1710	Lever - Choke	1
20	81-1730	Bolt - Throttle Bracket	1
21	81-0850	Seal - Governor Shaft	1
22	81-0860	Washer	1
23	81-0870	Ring - Retaining	1
24	81-2830	Spring - Governor	1
25	81-0910	Rod - Carburetor	1

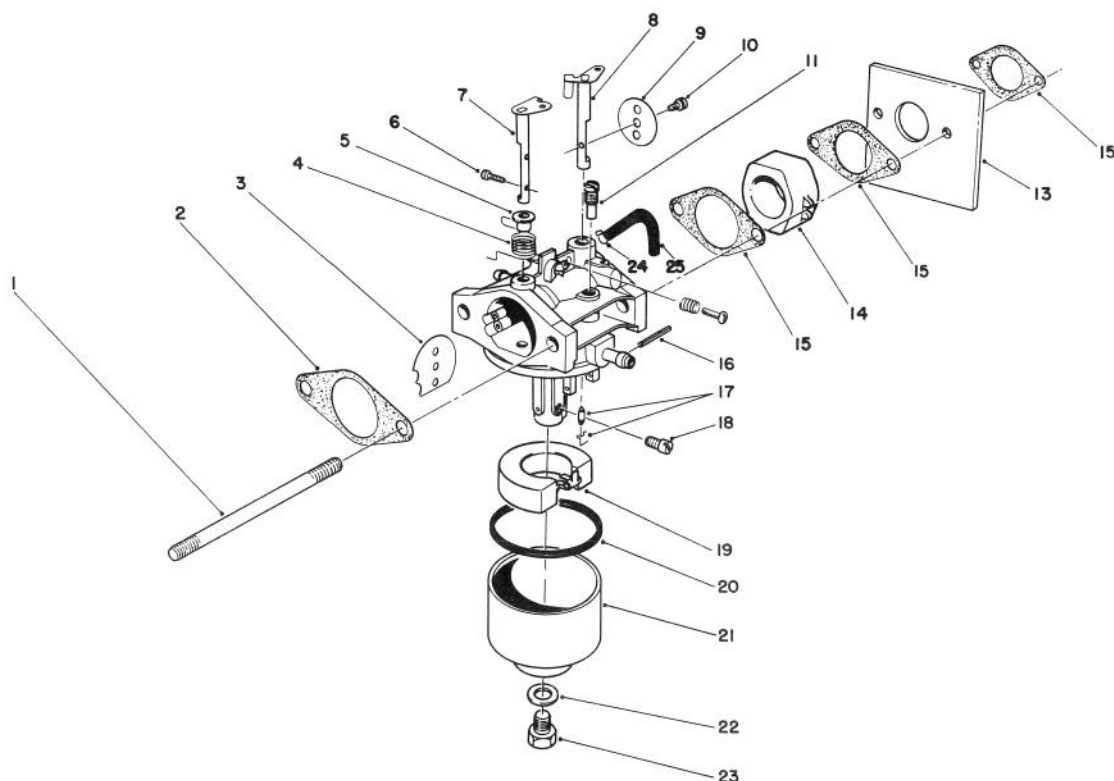


CARBURETOR ASSEMBLY (Engine No. 47PL0-2)

T-0665

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	81-5450	Stud - Carburetor Bolt	2	18	81-1060	Jet - Main (#75)	1
2	81-0090	Gasket - Air Cleaner	1	*	81-2340	Jet - Main (#72.5) High Alt. (Above 6000 ft.) Optional	1
3	81-0240	Valve - Choke	1	19	81-0970	Float	1
4	81-0230	Spring - Choke	1	20	81-1010	Gasket - Float Bowl	1
5	81-0220	Bushing - Choke Valve	1	21	81-5660	Bowl - Float	1
6	81-2160	Screw	2	22	81-1020	Gasket - Float Bowl Drain	1
7	81-1950	Shaft - Choke	1	23	81-5670	Screw - Float Bowl Drain	1
8	81-0250	Shaft - Throttle	1	24	81-5460	Clamp - Vent Tube	1
9	81-0260	Valve - Throttle	1	25	81-5470	Tube - Vent	1
10	81-0270	Screw - Throttle Valve	1	*	12-6379	Carburetor Kit (Incl. Ref. #2, 15, 17, 20 & 22)	1
11	81-1030	Jet - Pilot (#40)	1	*	81-5740	Carburetor Assy. Complete	1
13	81-5490	Shield - Carburetor	1	*	81-5810	Needle Valve Kit (Incl. Ref. #17)	1
14	81-5440	Insulator - Carburetor	1				
15	81-0780	Gasket	3				
16	81-5600	Pin	1				
17	81-4910	Needle Valve Spring Wire	1				

*Not Illustrated

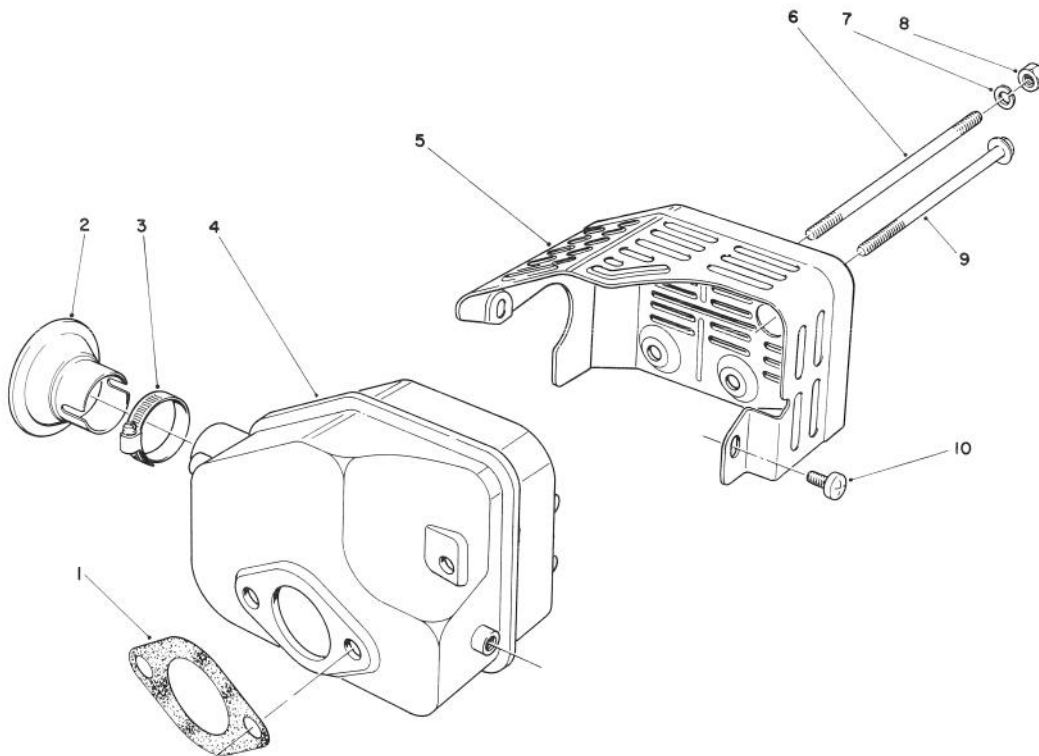

MUFFLER ASSEMBLY (Engine No. 47PL0-2)

T-0667

Ref. No.	Part No.	Description	No. Used
1	81-1080	Gasket - Muffler	1
2	81-0200	Spark Arrester (Optional)	1
†3		Clamp	1
4	81-5690	Muffler	1
5	81-2450	Cover - Muffler	1

Ref. No.	Part No.	Description	No. Used
6	81-1100	Bolt	2
7	81-1120	Washer - Lock	2
8	81-1110	Nut	2
9	81-1150	Bolt - Self Tapping	1
10	81-1140	Screw - Phillips Hd	2

†Obtain Locally

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any

reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

MAINTENANCE RECORD

[illegible]