



Platinum Series Lawn Mower

Model No. 10795 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front End and Tunnel Assembly	 3	Recoil Starter Assembly Honda GCV160A STL1	 14
Rear Axle and Transmission Assembly	 4	Recoil Starter Assembly Honda GCV160A STL1	 15
Upper Handle Assembly	 5	Fan Cover Assembly Honda GCV160A STL1	 16
Lower Handle Assembly	 6	Carburetor Assembly Honda GCV160A STL1	 17
Blade and Engine Assembly	 7	Air Cleaner Assembly Honda GCV160A STL1	 18
Rear Bag Assembly	 8	Muffler Assembly Honda GCV160A STL1	 19
Cylinder Barrel Assembly Honda GCV160A STL1	 9	Flywheel Assembly Honda GCV160A STL1	 20
Oil Pan Assembly Honda GCV160A STL1	 10	Control Assembly Honda GCV160A STL1	 21
Crankshaft Assembly Honda GCV160A STL1	 11	Choke Base Assembly Honda GCV160A STL1	 22
Piston and Connecting Rod Assembly Honda GCV160A STL1	 12	Top Cover Assembly Honda GCV160A STL1	 23
Camshaft Pulley Assembly Honda GCV160A STL1	 13	Label Assembly Honda GCV160A STL1	 24
		Attachments and Accessories List	 25

Part Description Abbreviations

 
Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HS. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❷ Obtain from your local Honda dealer

- ❸ Not serviced separately

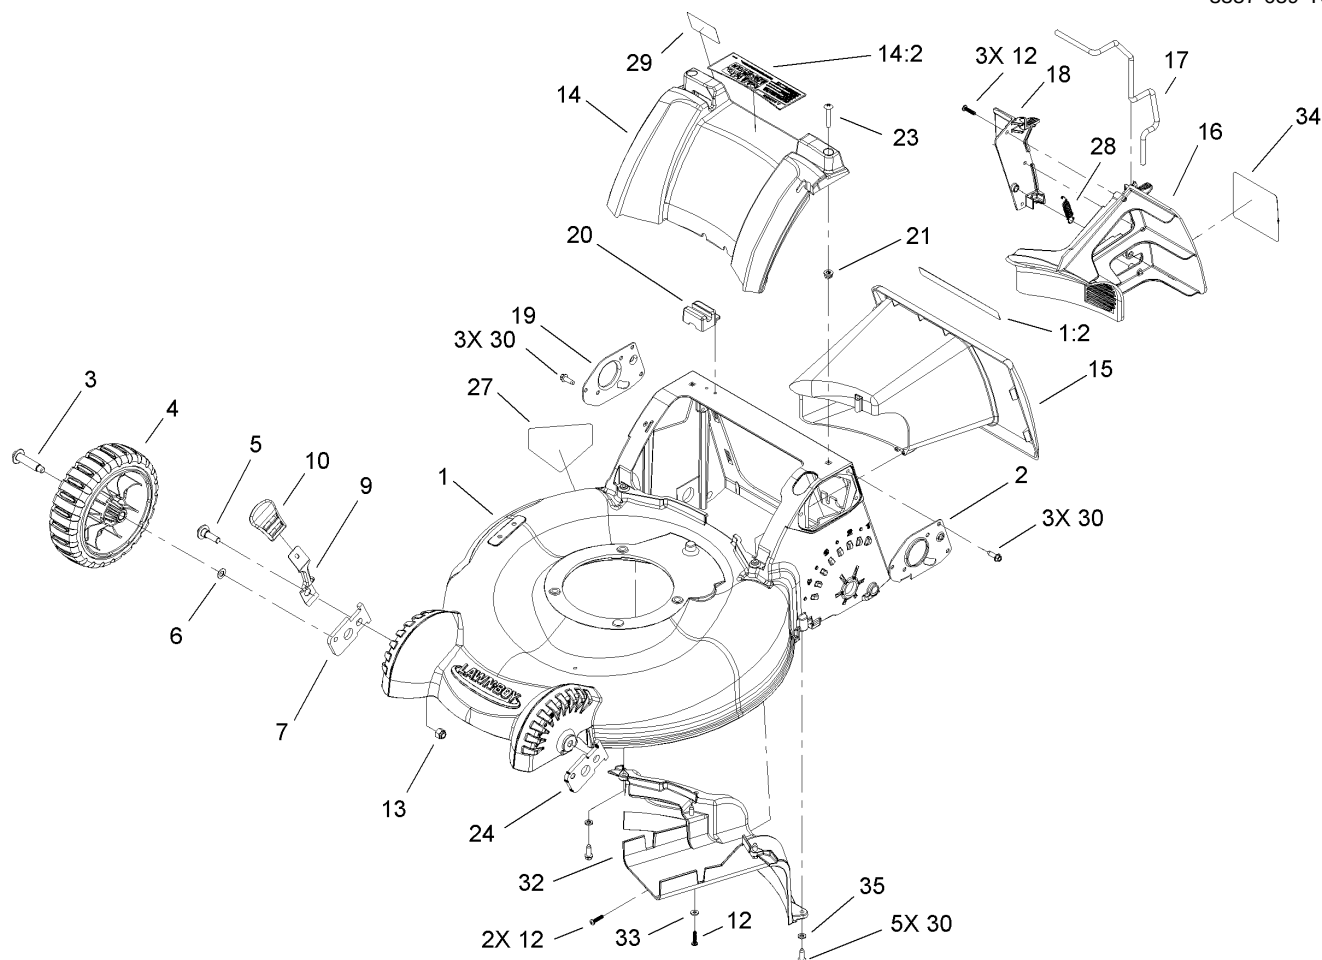

Front End and Tunnel Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	110-9419	1	Housing ASM	28	110-9458	1	Spring-Extension
2	110-9415-03	1	Mount-Handle, LH	29	107-1938	1	Decal-Bag Attachment
3	614650	2	Bolt-Shoulder	30	49-2040	11	Screw-HWHTF
4	107-3898	2	8 Inch Wheel ASM	31	110-9468	1	Mulch Plug ASM
5	614672	2	Bolt-Shoulder	32	110-9413	1	Baffle-Rear
6	40-1940	2	Washer	33	3256-14	1	Washer-Flat
7	110-9421	1	Arm-Pivot, RH	34	110-9457	1	Decal-Mulch Plug
9	110-9434	2	Arm-Spring, Front	35	3256-22	2	Washer-Flat
10	110-0549	2	Knob-HOC				
12	108-7476	6	Screw-Plastite				
1:2	107-1941	1	Decal-Safety, Bag				
13	3296-39	2	Nut-Lock, NI				
14	108-9349	1	Cover-Rear				
14:2	107-3888	1	Decal-Safety				
15	110-9455	1	Tunnel				
16	110-9446	1	Plug-Mulch, LH				
17	110-9448	1	Latch-Mulch Plug				
18	110-9447	1	Plug-Mulch, RH				
19	110-9416-03	1	Mount-Handle, RH				
20	110-1786	1	Module-Switch				
21	94-1610	2	Nut-Clip				
23	108-0965	2	Screw-PTH				
24	110-9420	1	Arm-Pivot, LH				
27	94-8072	1	Decal-Danger				

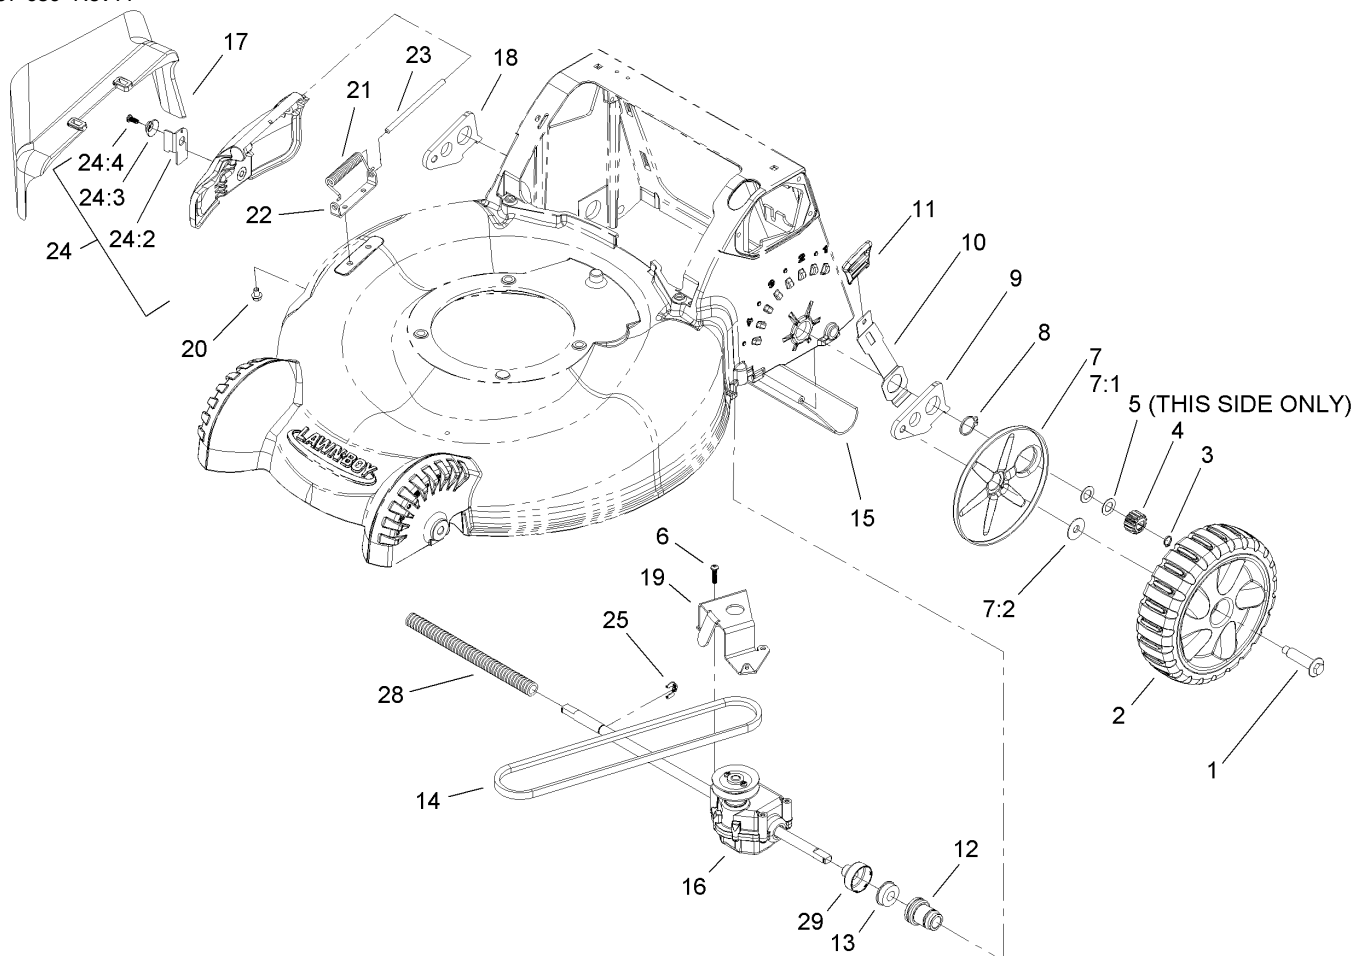 

Rear Axle and Transmission Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	107-3906	2	Rear Wheel ASM
3	32151-61	2	Ring-Retaining
4	110-9417	2	Pinion
5	36-4780	2	Washer
6	108-7476	3	Screw-Plastite
7	110-1793	2	Wheel Cover ASM
7:1		1	Cover-Wheel
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	108-9344	1	Arm-Rear Pivot, LH
10	110-9445	2	Arm-Spring, Rear
11	110-0549	2	Knob-HOC
12	110-9422	2	Retainer-Bearing
13	104-8699	2	Bearing-Ball
14	110-9429	1	V-Belt
15	112-8768	1	Shield-Trailing
16	110-9414	1	Transmission ASM
17	105-3028	1	Chute-Discharge, Side
18	108-9343	1	Arm-Rear Pivot, RH
19	110-9418-03	1	Bracket-Transmission
20	99-8445	2	Screw-HWH
21	99-5293	1	Spring-Torsion
22	112-6416	1	Bracket-Cover

Ref	Part No.	Qty.	Description
23	99-5291	1	Rod-Cover
24	106-8376	1	Discharge Door ASM
24:2	107-0795	1	Latch-Door
24:3	107-7456	1	Cap-Door
24:4	107-7461	1	Screw-Plastite
25	65-2720	1	Klipring-Locking
28	24-7922	1	Cover-Shaft, Drive
29	114-2755	2	Cap-Bearing

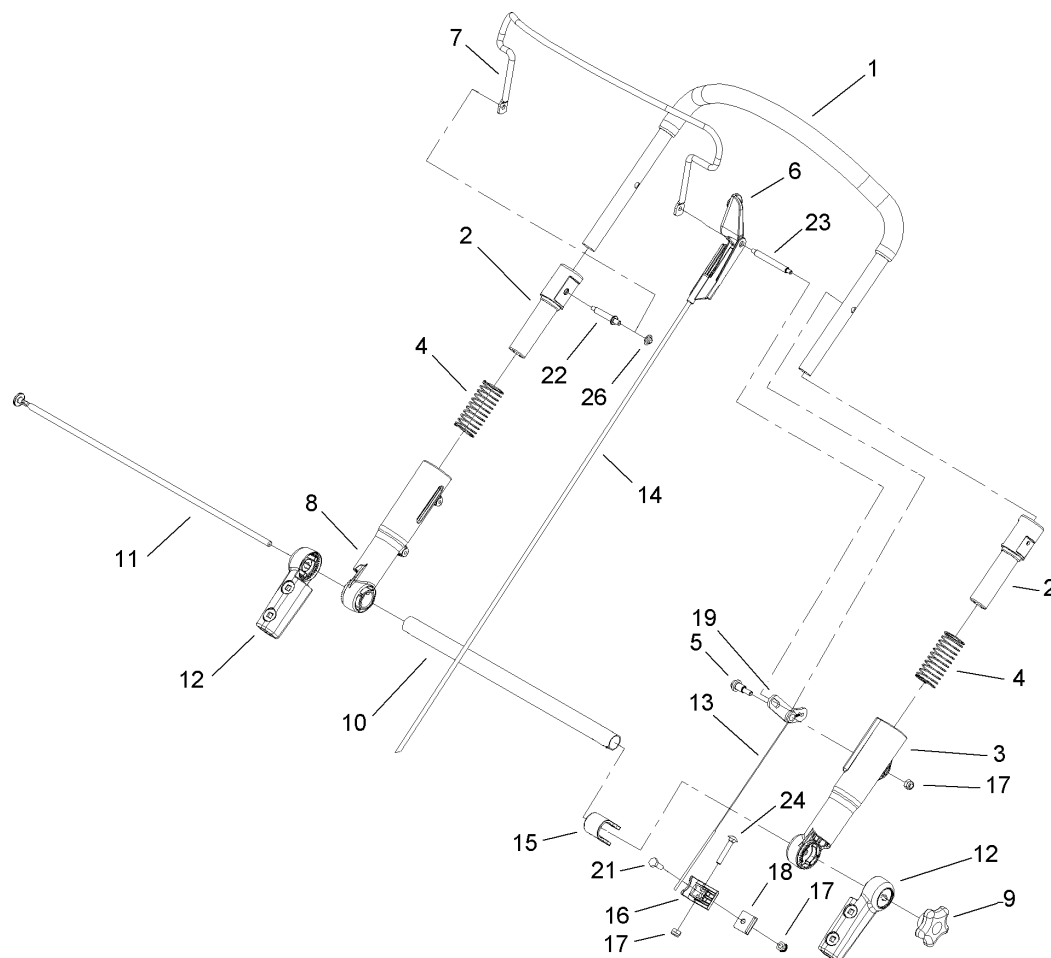 


Upper Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0974	1	Upper Handle ASM				
2	112-8754	2	Sleeve-Inner				
3	112-1544	1	Sleeve-Outer, LH				
4	107-3869	2	Spring-Compression				
5	104-0858	1	Bolt-Shoulder				
6	112-8764	1	Stop-Pivot				
7	110-1819-03	1	Bail-Brake				
8	112-1545	1	Sleeve-Outer, RH				
9	107-3937	1	Knob				
10	107-3867-03	1	Tube-Cross				
11	107-3871	1	Rod-Threaded				
12	107-3865	2	Mount-Handle, Lower				
13	110-9465	1	Cable-Traction				
14	107-3903	1	Cable-Brake				
15	108-1045	1	Support-Cable				
16	108-1046	1	Support-Guide, Cable				
17	3296-73	3	Nut-Lock, NI				
18	108-7454	1	Clamp-Cable				
19	107-3893	1	Lever-Traction				
21	321-4	1	Screw-HH				
22	108-0959	1	Pin-Handle				
23	108-1008	1	Pin-Bail, LH				
24	108-0988	1	Screw-CARR				
26	108-9378	1	Retainer-Push On				

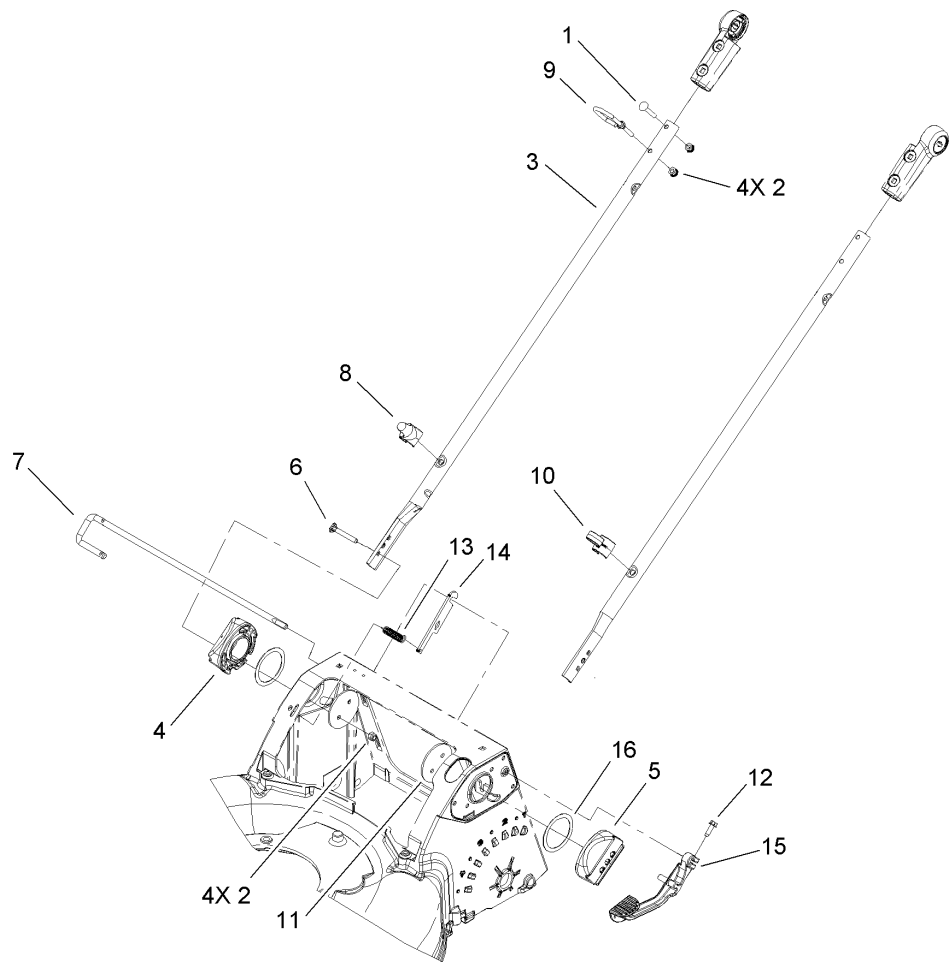 


Lower Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0988	3	Screw-CARR				
2	3296-73	8	Nut-Lock, NI				
3	107-3887-03	2	Tube-Lower				
4	108-9339-03	1	Mount-Handle, RH				
5	108-9340-03	1	Mount-Handle, LH				
6	95-4453	4	Screw				
7	112-8755	1	Handle-Rod, Release				
8	108-0994	1	Guide-Rope, Lower				
9	107-3908	1	Guide-Rope, Upper				
10	106-6805	1	Guide-Cable				
11	107-3944-03	2	Plate				
12	49-2040	1	Screw-HWHTF				
13	112-1542	1	Spring-Extension				
14	112-1539	1	Plate-Release Rod				
15	110-1823-03	1	Lever-Release				
16	107-3947	2	Washer-Nylon				

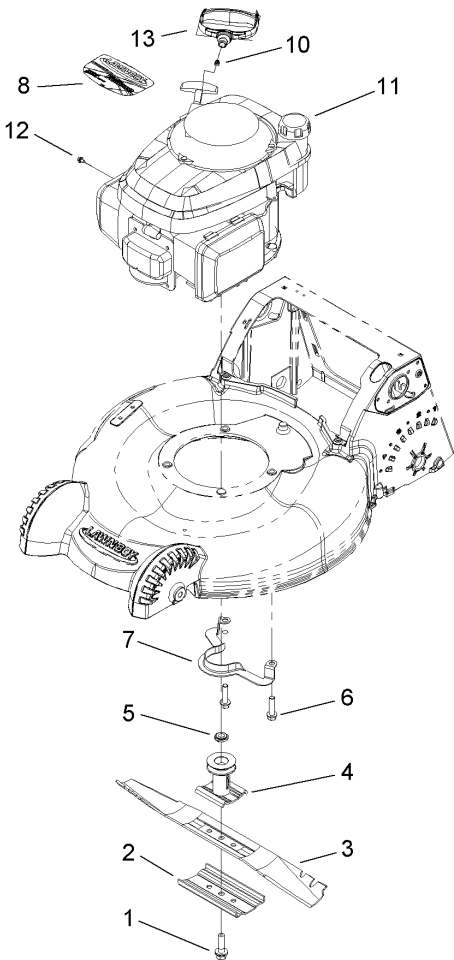 


Blade and Engine Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	108-3766-03	1	Support-Blade				
3	108-0954-03	1	Blade-21 Inch				
4	106-3987	1	Blade Driver ASM				
5	106-3999	1	Spacer-Driver				
6	32144-102	3	Screw-HWH				
7	108-8110-03	1	Guide-Belt				
8	110-9487	1	Decal-Engine				
10	92-1701	1	Stop-Rope				
2 11		1	Engine-Honda, Gcv160A Stl1				
12	98-1394	1	Screw-HWH				
13	110-1778	1	Handle-Recoil				

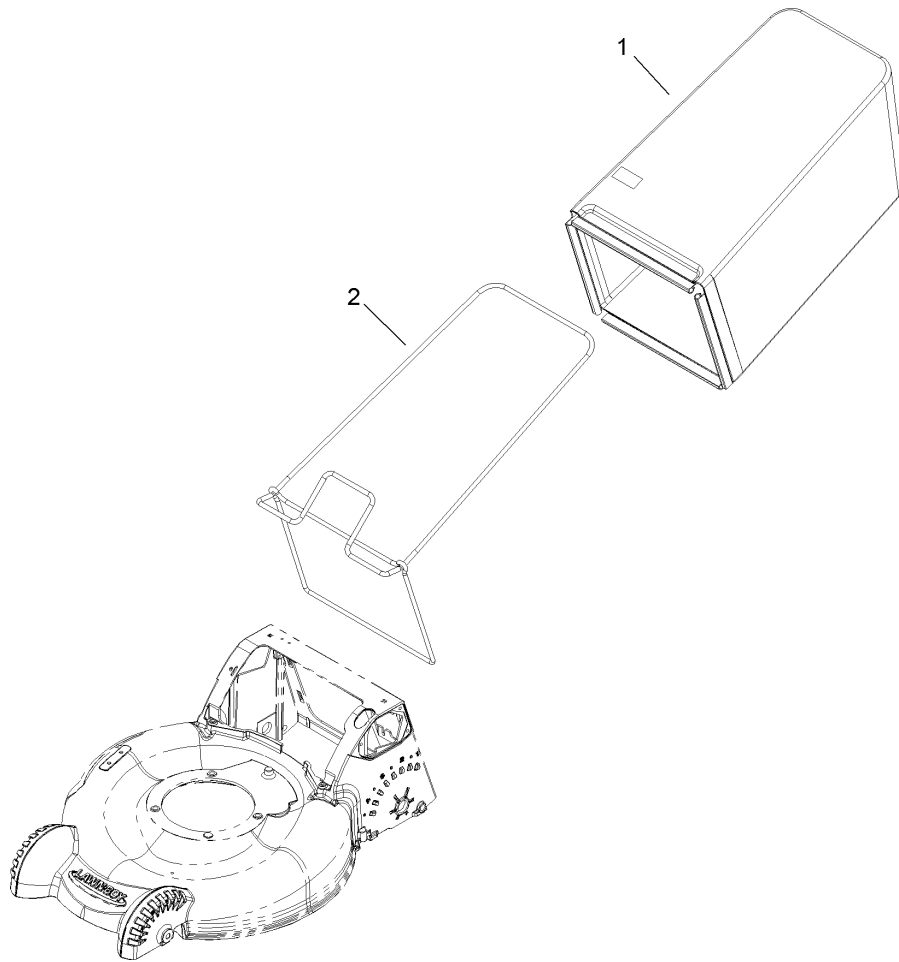 

Rear Bag Assembly


Ref	Part No.	Qty.	Description
1	110-9483	1	Grass Bag ASM
2	112-8750-03	1	Frame-Bag

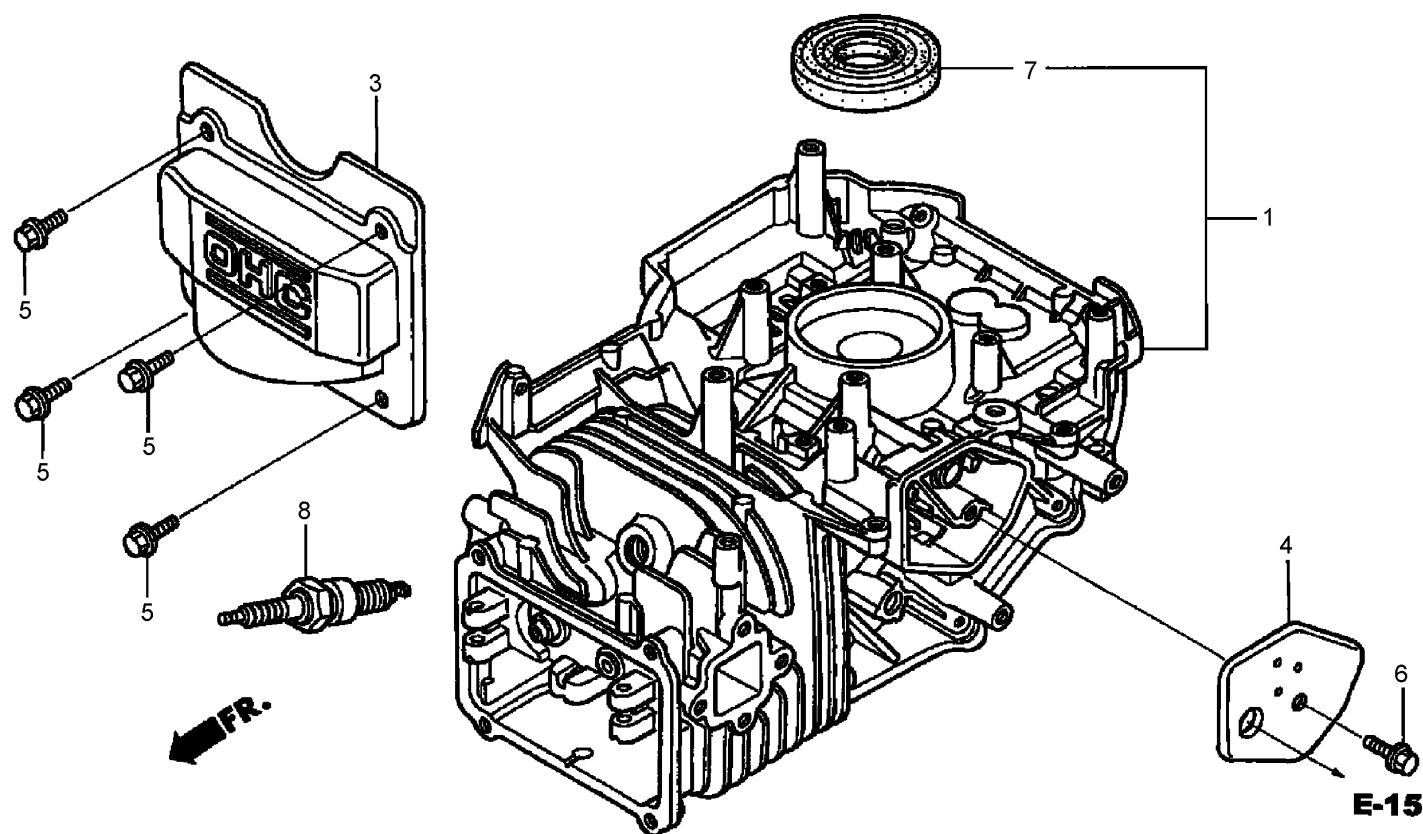 

Cylinder Barrel Assembly

Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
❸1	12000-ZL8-415	1	Cylinder ASM (010)				
❸3	12311-ZL8-000	1	Cover-Head				
❸4	12355-ZL8-000	1	Cover-Breather (Breather Valve ASM)				
❸5	90013-883-000	4	Bolt-Flange (6X12) (Ct200)				
❸6	90014-952-000	1	Bolt-Flange (6X14)				
❸7	91201-ZL8-003	1	Seal (25.4X62X6)				
❸8	98079-56846	1	Plug-Spark (Bpr6Es) (Ngk)				

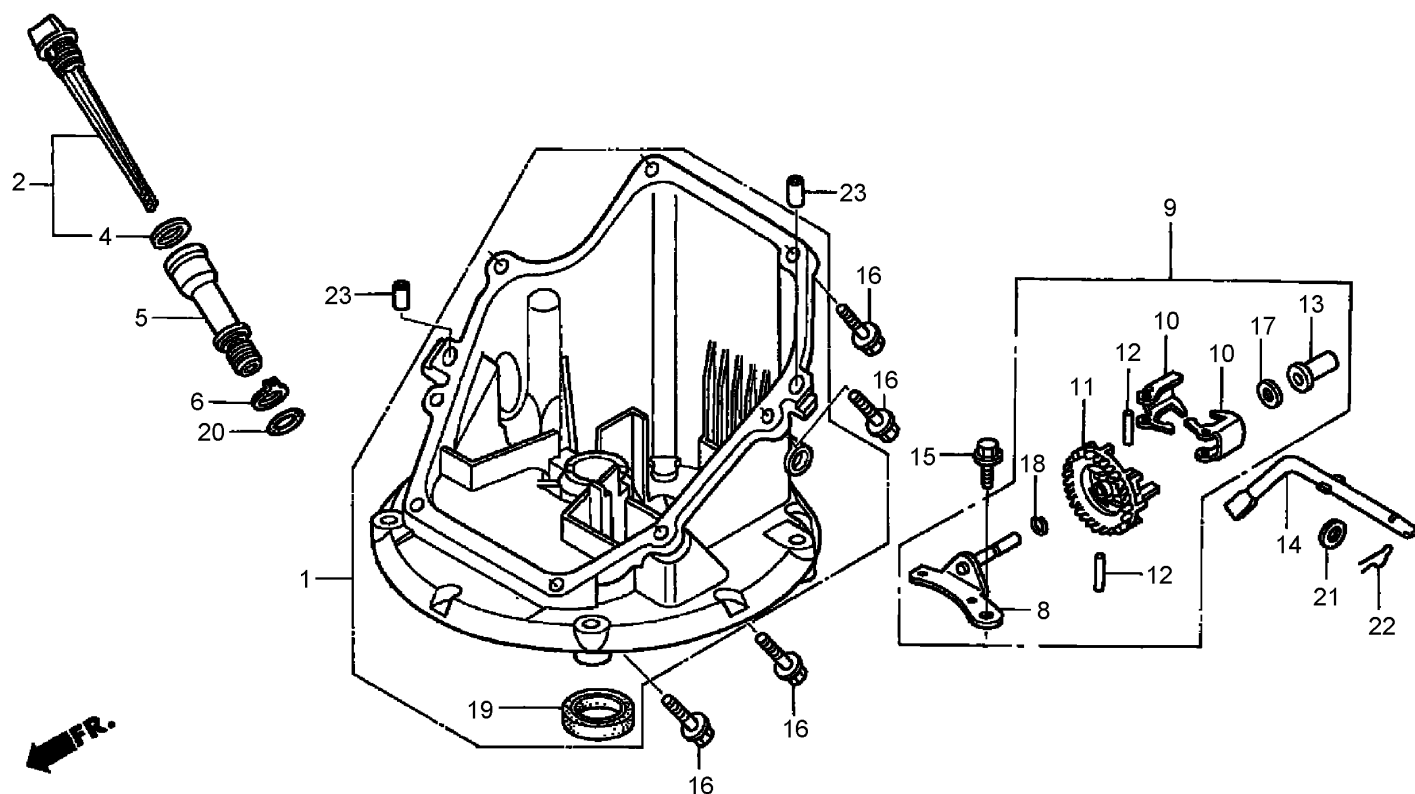 

Oil Pan Assembly Honda GCV160A STL1

Ref	Part No.	Qty.	Description
❶	11300-ZM0-405	1	Oil Pan ASM (000)
❷	15650-ZM0-801	1	Dipstick-Oil
❸	15625-ZE6-000	1	Gasket-Cap, Oil Filler
❹	15631-ZM0-000	1	Extension-Filler, Oil
❺	15639-ZM0-000	1	Washer-Lock, Extension
❻	16508-ZM0-010	1	Shaft-Holder, Governor
❼	16510-ZM0-010	1	Governor ASM
❽	16511-ZL8-000	2	Weight-Governor
❾	16512-ZM0-000	1	Holder-Weight, Governor
❿	16513-ZE1-000	2	Pin-Weight, Governor
⓫	16531-ZE1-000	1	Slider-Governor
⓬	16541-ZM0-000	1	Shaft-Arm, Governor
⓭	90014-952-000	1	Bolt-Flange (6X14)


Ref	Part No.	Qty.	Description
❶❹	90121-952-000	8	Bolt-Flange (6X25)
❶❷	90451-ZE1-000	1	Washer-Thrust (6Mm)
❶❸	90602-ZE1-000	1	Clip-Holder, Governor
❶❹	91202-ZL8-003	1	Seal-Oil (28X41.25X6)
❶❺	91303-KF0-003	1	O-Ring (14.8X2.4) (Arai)
❶❻	91356-MA6-005	1	O-Ring
❶❼	94101-06800	1	Washer-Plain (6Mm)
❶❽	94251-08000	1	Pin-Lock (8Mm)
❶❾	94301-08200	2	Pin-Dowel (8X20)

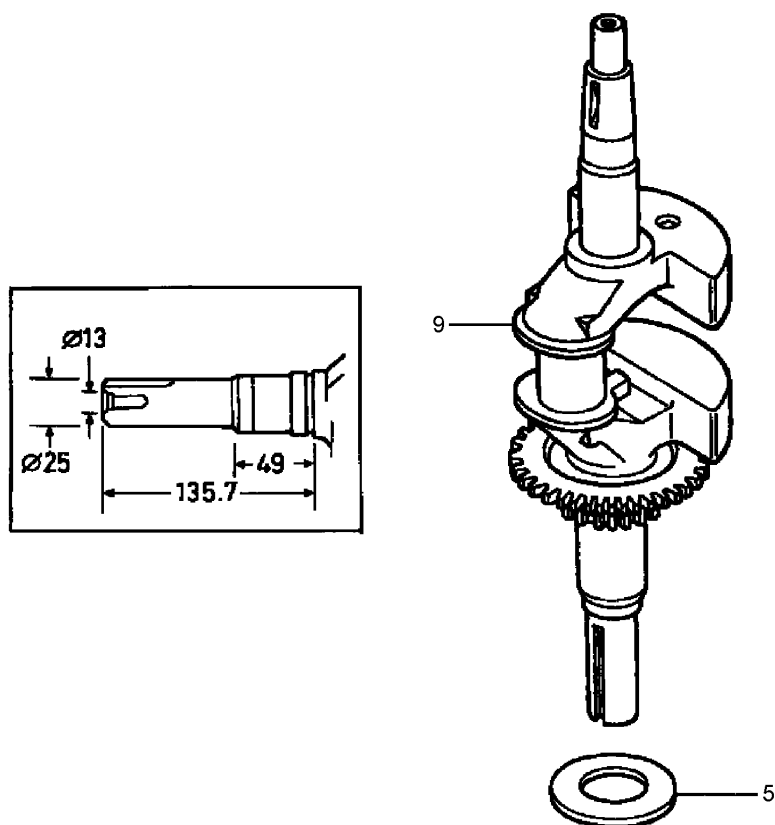 

Crankshaft Assembly


Honda GCV160A STL1

Ref	Part No.	Qty.	Description
5	90402-ZL8-000	1	Washer-Thrust
9	13310-Z0L-V70	1	Crankshaft

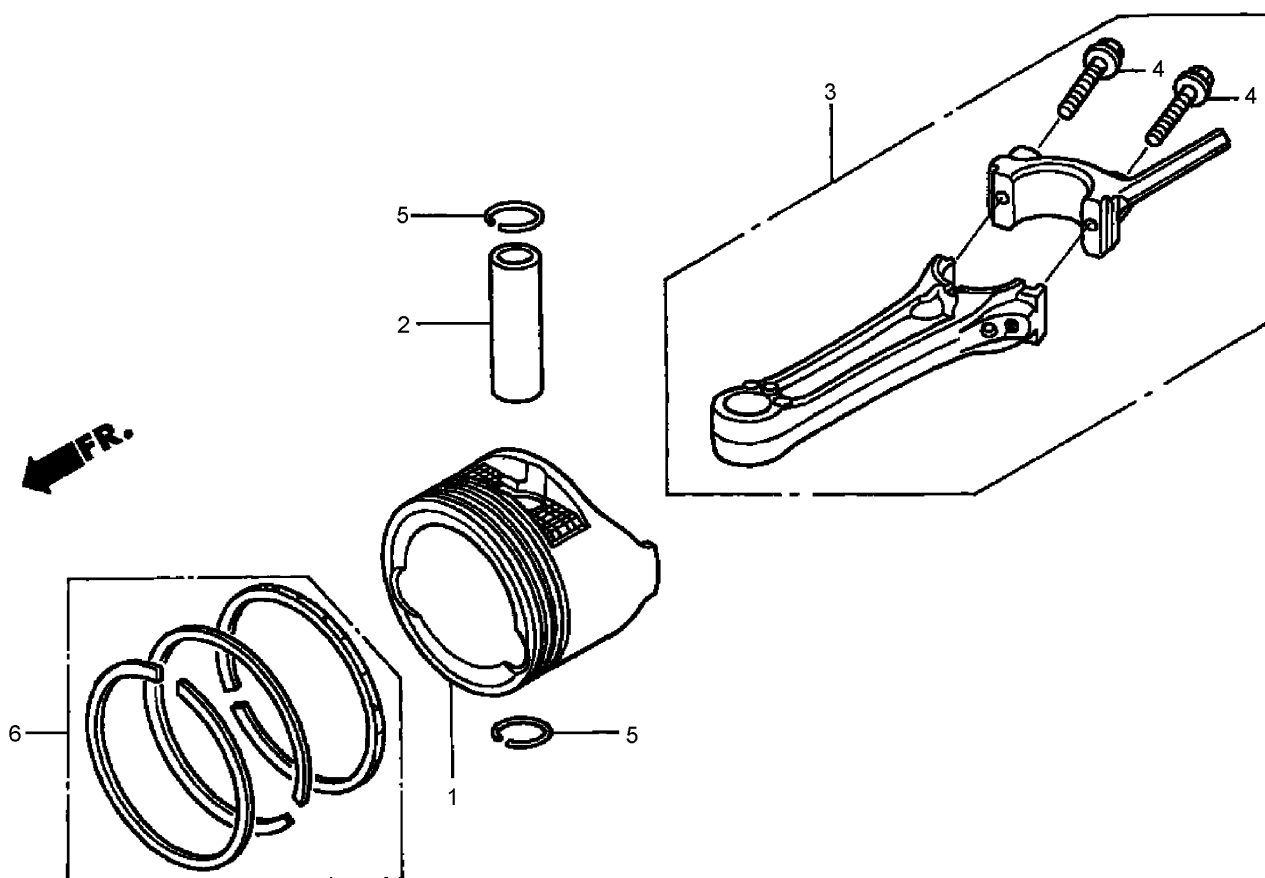 

Piston and Connecting Rod Assembly Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
③1	13101-ZL8-000	1	Piston				
③2	13111-ZE0-000	1	Pin-Piston				
③3	13200-ZL8-000	1	Connecting Rod ASM				
③4	90001-ZE1-000	2	Bolt-Rod, Connecting				
③5	90551-ZE0-000	2	Clip-Pin, Piston (13Mm)				
③6	13010-ZL8-003	1	Ring Set-Piston (Riken)				
③6	13010-ZL8-024	1	Ring Set-Piston (Teikoku)				

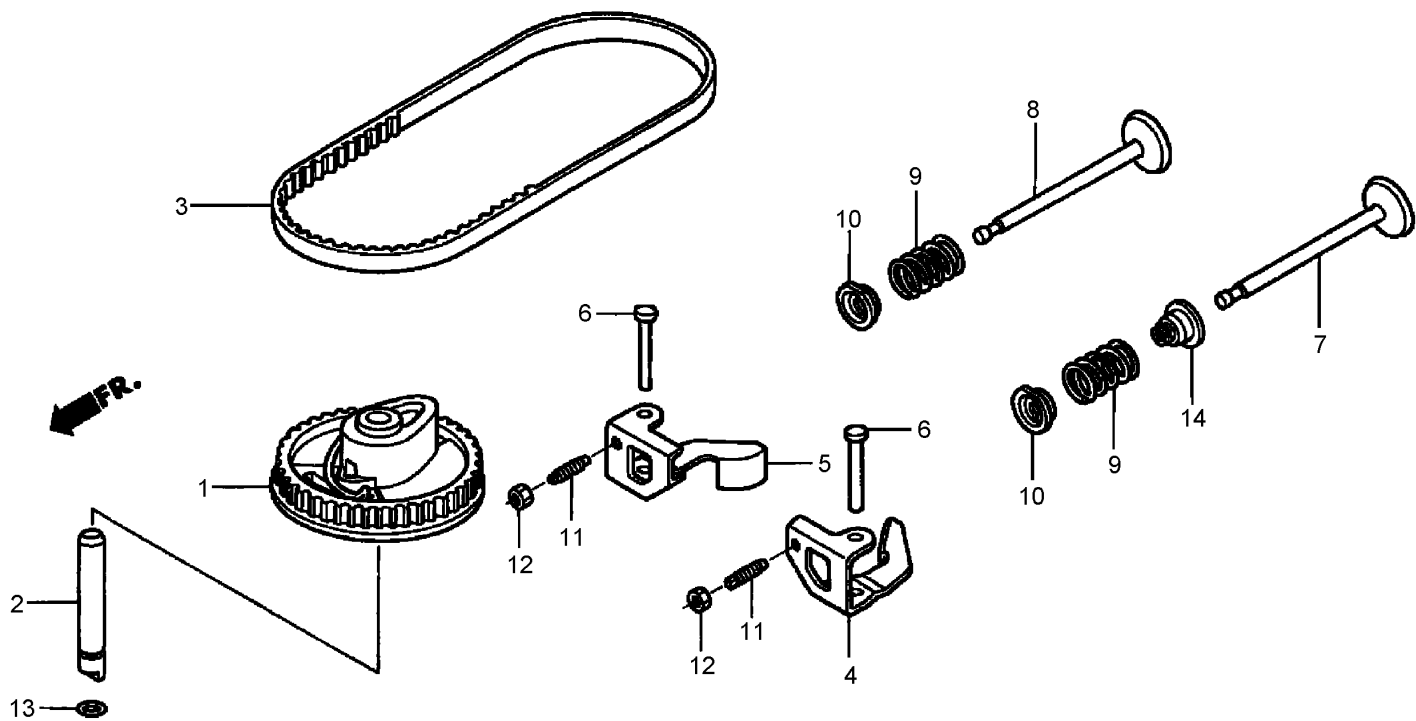 

Camshaft Pulley Assembly
Honda GCV160A STL1


Ref	Part No.	Qty.	Description
❶1	14320-ZL8-010	1	Pulley-Camshaft
❷2	14324-ZL8-000	1	Shaft-Pulley
❸3	14400-Z0J-014	1	Belt-Timing (84Hu7 G-200)
❹4	14431-Z0J-000	1	Rocker Arm-Valve, Intake
❺5	14441-Z0J-000	1	Rocker Arm-Valve, Exhaust
❻6	14461-ZL8-000	2	Shaft-Arm, Rocker
❼7	14711-Z0J-000	1	Valve-Intake
❽8	14721-ZL8-000	1	Valve-Exhaust
❾9	14751-ZL8-000	2	Spring-Valve
❿10	14771-Z0J-000	2	Retainer-Spring, Valve
⓫11	90012-333-000	2	Screw-Tappet, Adj.
⓬12	90206-001-000	2	Nut-Tappet, Adj.
⓭13	91301-ZM0-V31	1	O-Ring (6.8X1.9)

Ref	Part No.	Qty.	Description
❿14	12209-ZM0-003	1	Seal-Stem, Valve

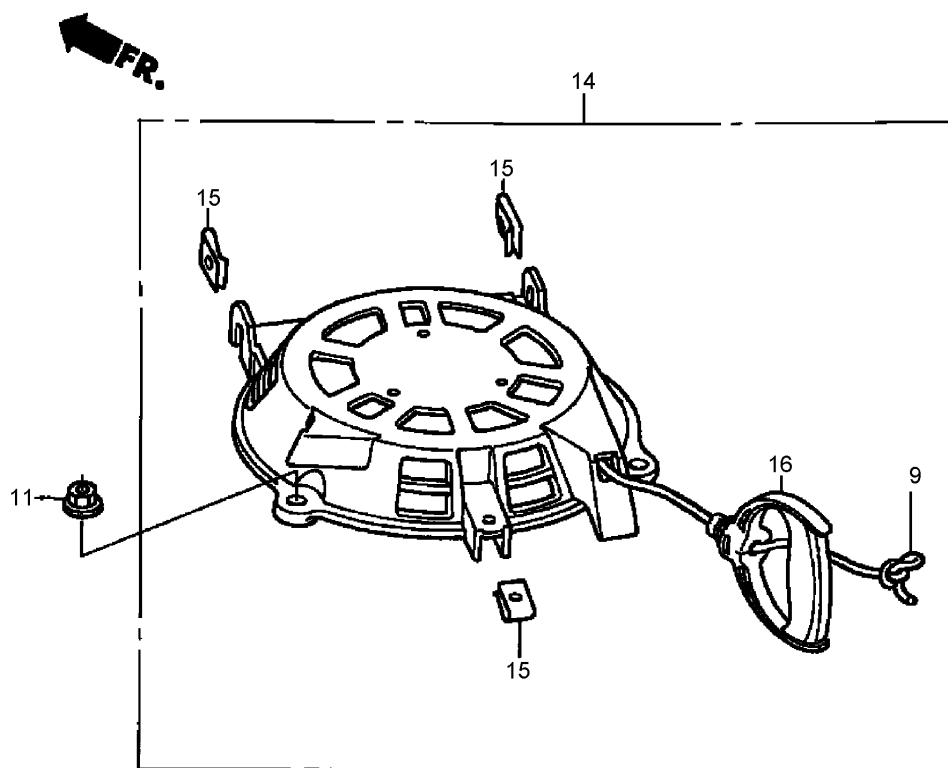 


Recoil Starter Assembly Honda GCV160A STL1

Ref	Part No.	Qty.	Description				
③9	28462-Z0L-V71	1	Rope-Starter, Recoil				
③11	90201-ZM0-000	3	Nut-Flange (6Mm)				
③14	28400-Z0L-V72	1	Recoil Starter ASM				
③15	66871-KY2-700	3	Nut-Cowl				
③16	28461-Z0L-V71	1	Knob-Starter, Recoil				

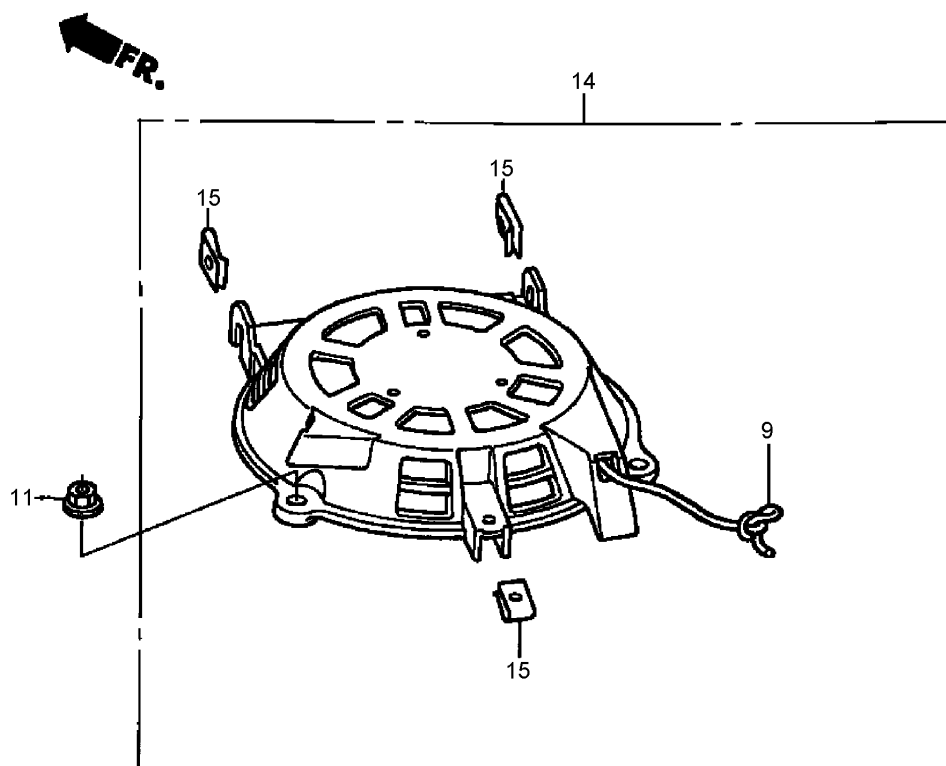 


Recoil Starter Assembly Honda GCV160A STL1

Ref	Part No.	Qty.	Description				
⑨9	28462-Z0L-V71	1	Rope-Starter, Recoil				
⑨11	90201-ZM0-000	3	Nut-Flange (6Mm)				
⑨14	28400-Z0L-V72	1	Recoil Starter ASM				
⑨15	66871-KY2-700	3	Nut-Cowl				

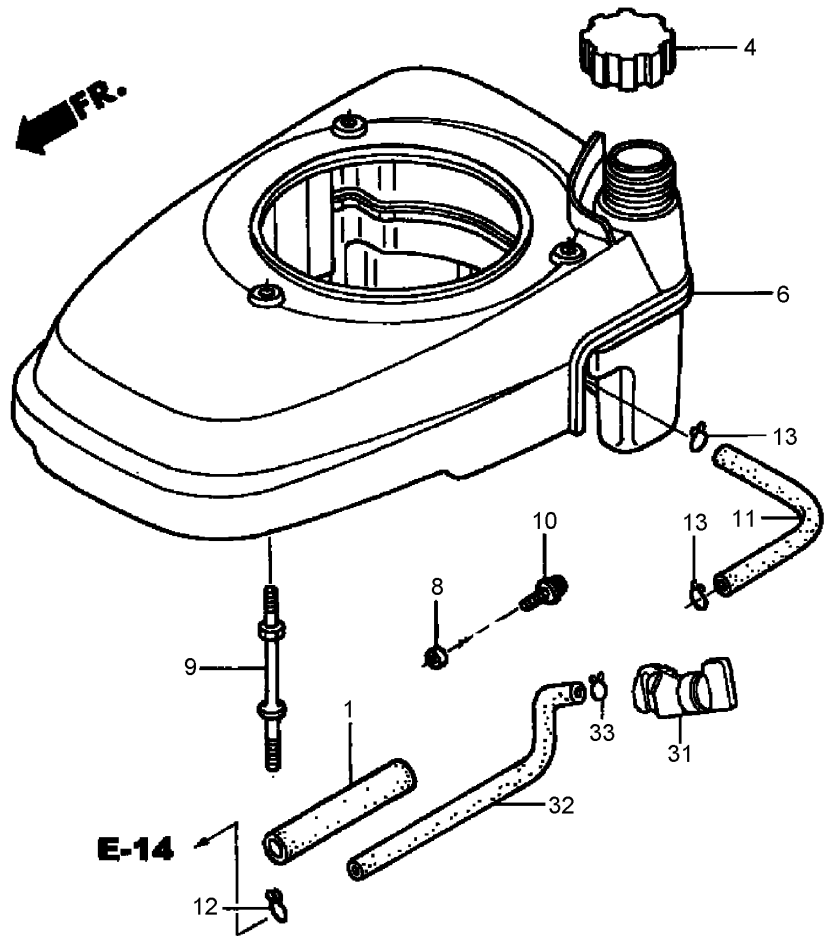 

Fan Cover Assembly Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
❶1	16854-ZH8-000	1	Supporter-Rubber (107Mm)				
❷4	17620-ZL8-013	1	Fuel Tank Cap ASM				
❸6	19610-Z0L-800ZA	1	Cover-Fan				
❹8	91501-Z0L-800	1	Collar-Petcock, Fuel				
❺9	90043-ZL8-000	3	Bolt-Stud				
❻10	93891-05010-08	1	Screw-Washer (5X10)				
❼11	95001-55008-60M	1	Fuel-Hose (5.5X8000) (5.5X100)				
❽12	95002-02080	1	Clip-Tube (B8)				
❽13	95002-02100	2	Clip-Tube (B10)				
❽31	16950-ZM0-003	1	Petcock ASM				
❽32	17702-ZM0-800	1	Tube- Fuel				
❽33	95002-02080	1	Clip-Tube (B8)				

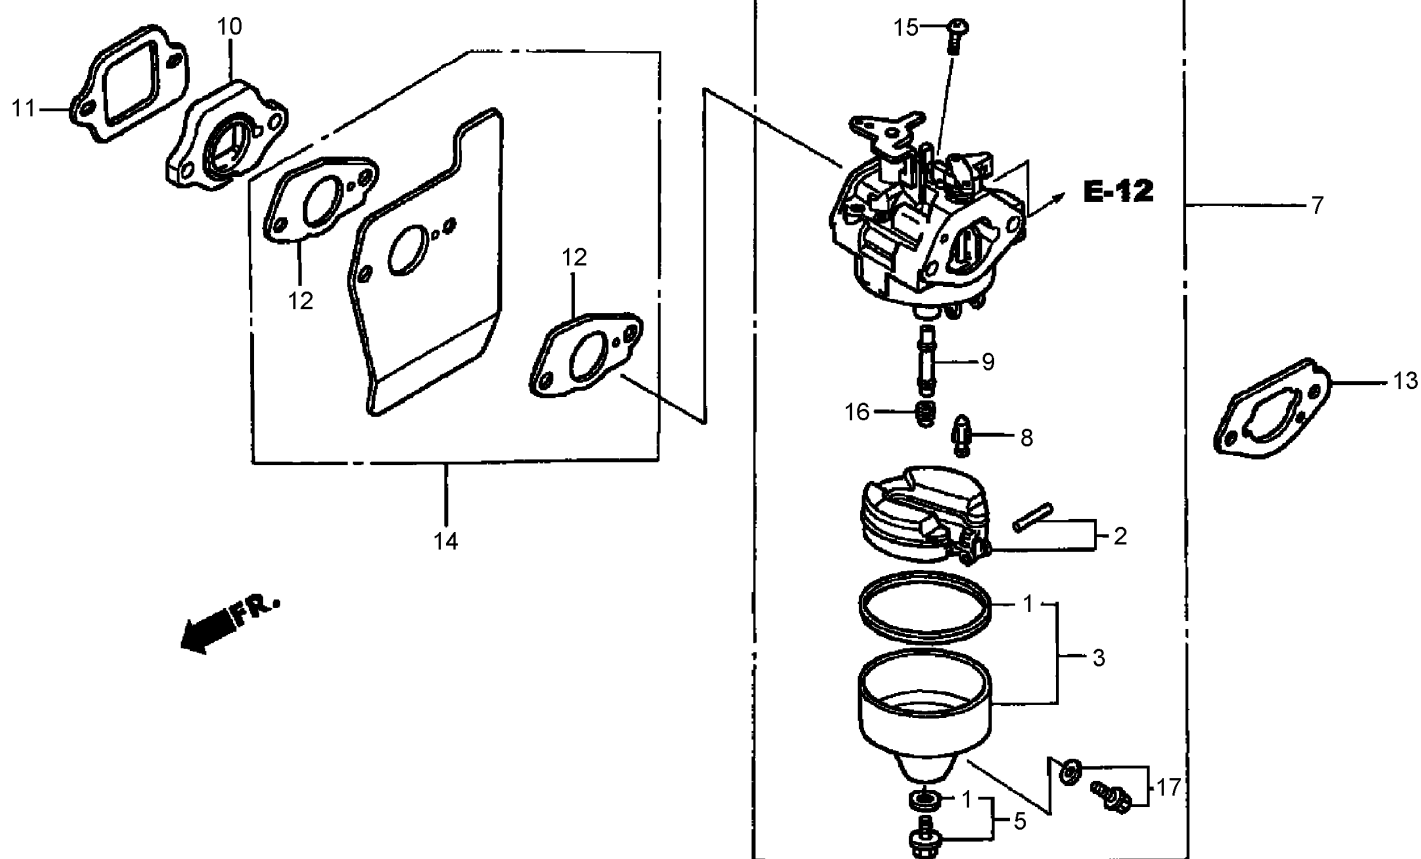 

Carburetor Assembly Honda GCV160A STL1

Ref	Part No.	Qty.	Description
❶1	16010-883-015	1	Gasket Set
❶2	16013-ZL1-003	1	Float Set
❶3	16015-887-782	1	Chamber Set-Float
❶5	16028-ZE0-005	1	Screw-Set
❶7	16100-Z0L-802	1	Carburetor ASM (Bb62G B)
❶8	16155-ZM0-013	1	Valve-Float (Carburetor No.)
❶9	16166-ZM0-003	1	Nozzle-Main
❶10	16211-ZL8-000	1	Insulator-Carburetor
❶11	16212-ZL8-000	1	Gasket-Insulator
❶12	16221-883-800	2	Gasket-Carburetor
❶13	16228-ZL8-000	1	Gasket-Carburetor (Choke Side)
❶14	19650-ZM0-000	1	Guide-Air
❶15	93500-05006-0H	1	Screw-Pan (5X6)


Ref	Part No.	Qty.	Description
❶16	99101-124-0600	1	Jet-Main (#60)
❶16	99101-124-0620	1	Jet-Main (#62)
❶16	99101-124-0650	1	Jet-Main (#65)
❶17	16024-ZE1-811	1	Screw Set-Drain

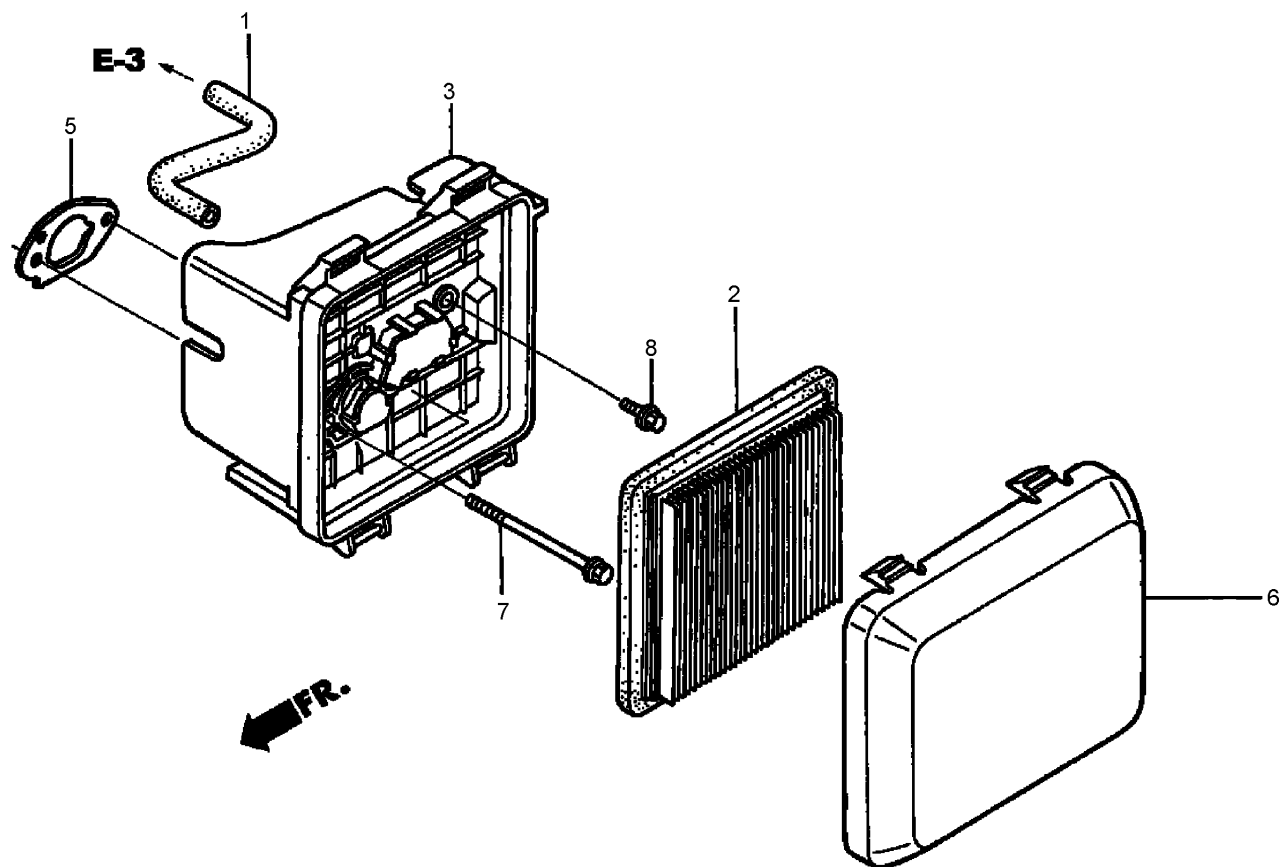 

Air Cleaner Assembly

Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
③1	15721-ZM0-000	1	Tube-Breather				
③2	17211-ZL8-013	1	Element-Cleaner, Air				
③3	17220-ZM0-000	1	Air Cleaner Case ASM				
③5	17228-ZM0-000	1	Gasket-Cleaner, Air				
③6	17231-Z0L-030	1	Cover-Cleaner, Air				
③7	90003-ZM0-000	2	Bolt-Flange (6X86) (Ct200)				
③8	95701-06014-08	1	Bolt-Flange (6X14)				

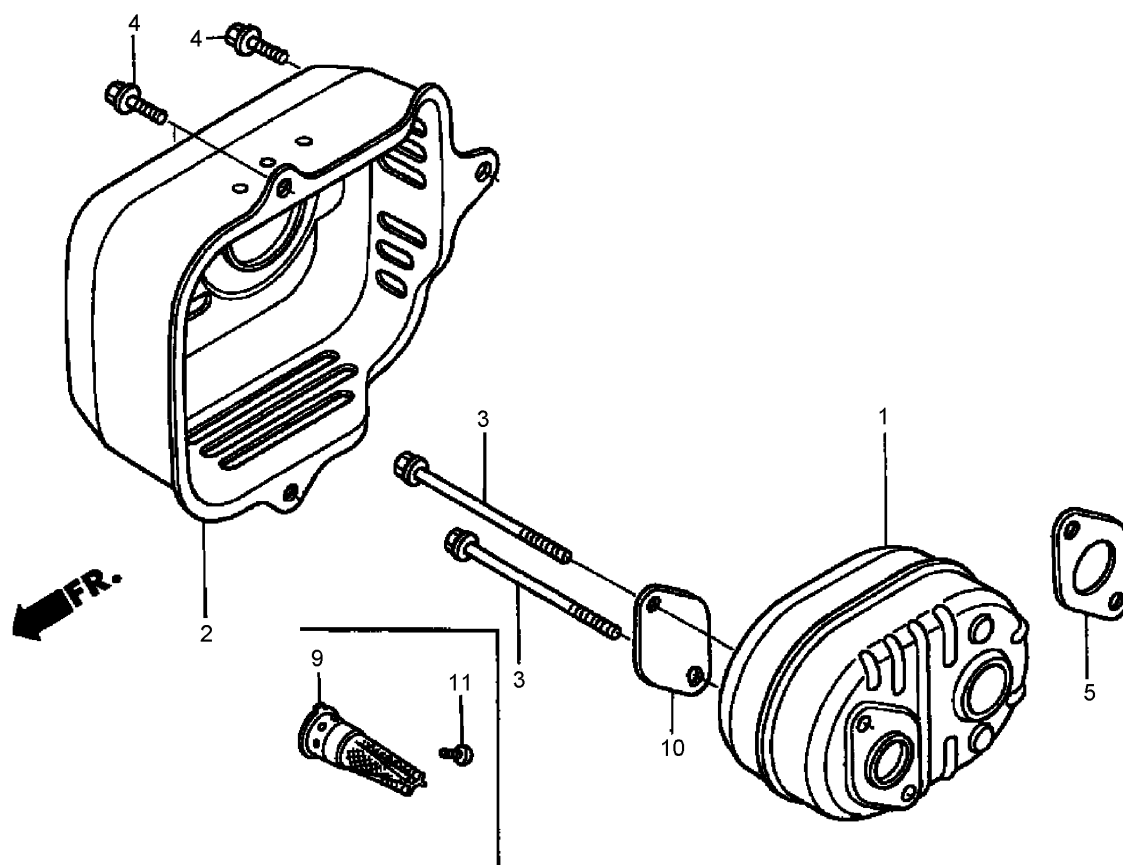 

Muffler Assembly

Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
❸1	18310-ZM0-000	1	Muffler				
❸2	18321-Z0L-J00	1	Protector-Muffler (Cbu)				
❸3	90004-ZL8-000	2	Bolt-Flange (6X79) (Ct200)				
❸4	90013-883-000	3	Bolt-Flange (6X12) (Ct200)				
❸5	18381-ZL8-305	1	Gasket-Muffler				
❸9	18350-ZL8-000	1	Arrester-Spark				
❸10	18356-ZL8-000	1	Plate-Number, Arrester				
❸11	90055-ZE1-000	1	Screw-Tapping (4X6)				

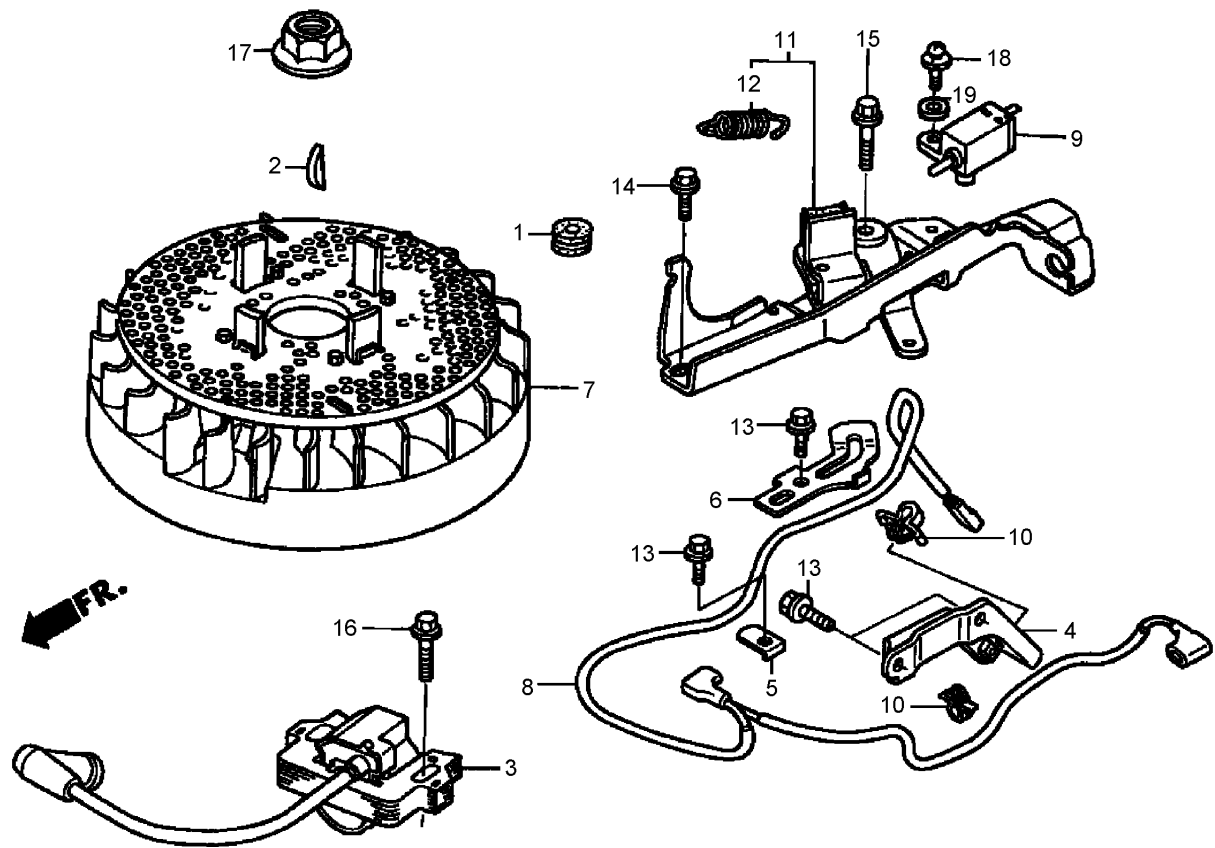 

Flywheel Assembly Honda GCV160A STL1


Ref	Part No.	Qty.	Description
❶1	11344-MB0-000	1	Grommet-Cover, A-Rr
❶2	13331-357-000	1	Key-Woodruff (25X18)
❶3	30500-ZL8-004	1	Ignition Coil ASM
❶4	30547-Z0L-S00	1	Clamp-Wire, Stop Switch
❶5	30548-ZL8-000	1	Clamp-Wire, Stop Switch
❶6	30549-ZL8-000	1	Clamp-Wire
❶7	31105-ZM0-000	1	Flywheel ASM
❶8	32195-Z0L-S00	1	Wire-Switch, Stop
❶9	35120-ZM0-003	1	Engine Stop Switch ASM
❶10	51125-Z0L-003	2	Holder-Wire
❶10	90681-959-003	2	Clip-Cable (A)
❶11	75110-Z0L-800	1	Brake Sub ASM
❶12	75113-ZM0-000	1	Spring-Lever, Brake

Ref	Part No.	Qty.	Description
❶13	90013-883-000	4	Bolt-Flange (6X12) (Ct200)
❶14	90014-952-000	1	Bolt-Flange (6X14)
❶15	90018-ZE1-000	1	Bolt-Flange
❶16	90022-888-010	1	Bolt-Flange (6X20)
❶17	90201-878-003	1	Nut (14Mm)
❶18	93892-04012-00	1	Screw-Washer
❶19	94103-04000	1	Washer-Plain

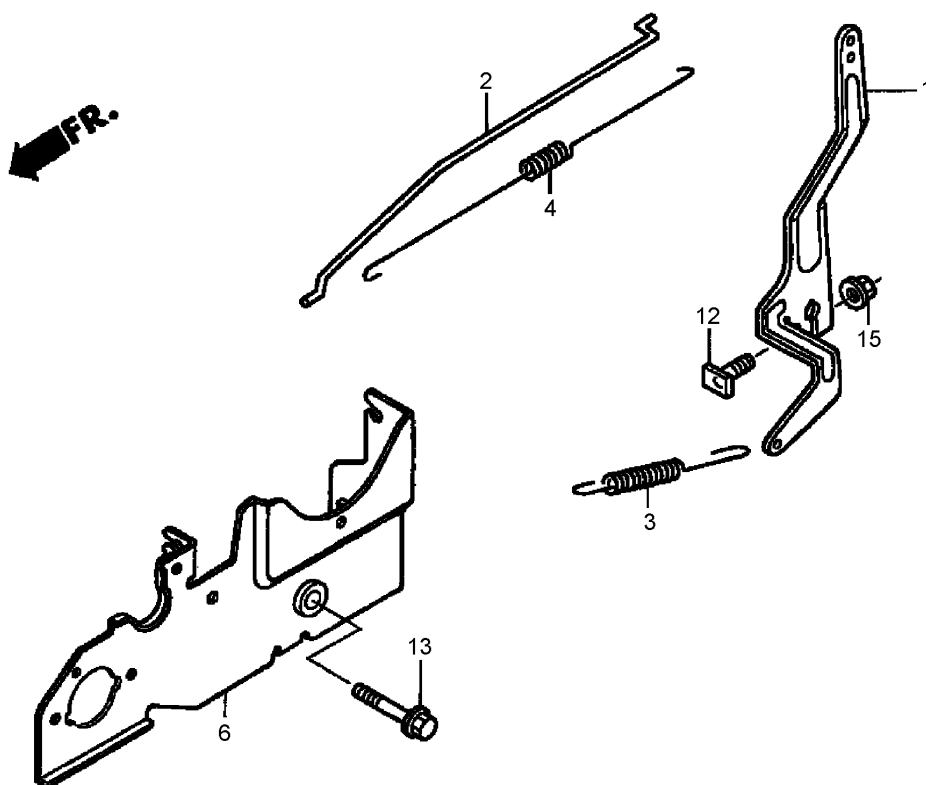 


Control Assembly Honda GCV160A STL1

Ref	Part No.	Qty.	Description				
③1	16551-ZM0-010	1	Arm-Governor				
③2	16555-Z0L-800	1	Rod-Governor				
③3	16561-Z0L-000	1	Spring-Governor				
③4	16562-ZM0-000	1	Spring-Return, Throttle				
③6	16580-Z0L-810	1	Base-Control				
③12	90015-ZE5-010	1	Bolt-Arm, Governor				
③13	90016-ZE8-000	1	Bolt-Flange (6X45)				
③15	94050-06000	1	Nut-Flange (6Mm)				

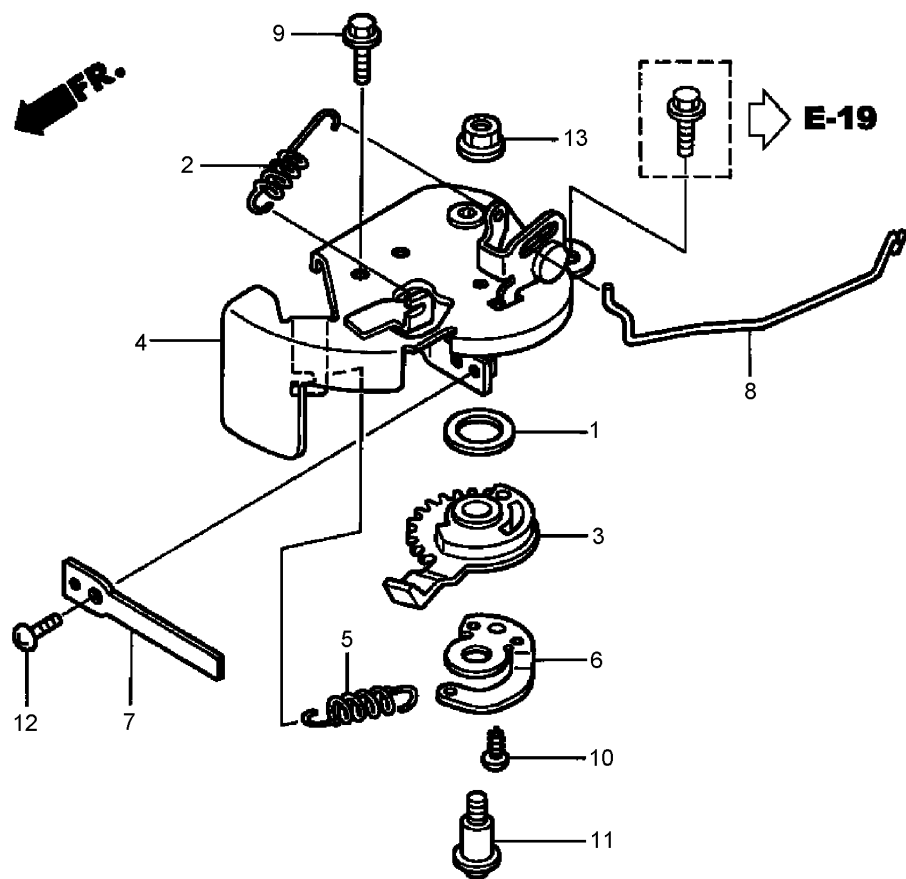 


Choke Base Assembly
Honda GCV160A STL1

Ref	Part No.	Qty.	Description				
❶1	16251-Z0L-800	1	Seal-Lever, Choke				
❷2	16592-ZJ1-000	1	Spring-Return, Cable				
❸3	16612-Z0L-800	1	Lever-Choke				
❹4	16613-Z0L-800	1	Base-Choke				
❺5	16614-Z0L-800	1	Spring-Lever, Choke				
❻6	16616-Z0L-800	1	Hook-Spring, Choke				
❼7	16619-Z0L-800	1	Plate-Choke				
❽8	16632-Z0L-800	1	Rod-Stop				
❾9	90029-888-000	1	Bolt-Flange (6X16)				
❿10	90102-SP1-003	1	Screw-Tapping (4X8) (Po)				
⓫11	90141-KT8-000	1	Screw-Pan (5X19)				
⓬12	93500-04008-0H	1	Screw-Pan (4X8)				
⓭13	94050-05000	1	Nut-Flange (5Mm)				

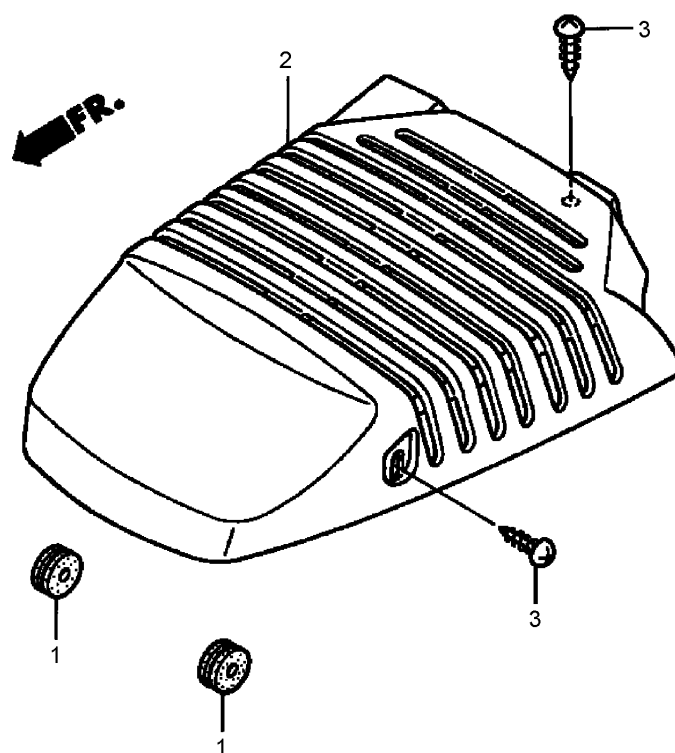 

Top Cover Assembly Honda GCV160A STL1

Ref	Part No.	Qty.	Description
❸1	16613-883-610	2	Grommet-Rod, Choke
❸2	19721-Z0L-000ZA	1	Cover-Top
❸3	90137-SH3-000	3	Screw-Tapping (4X16)

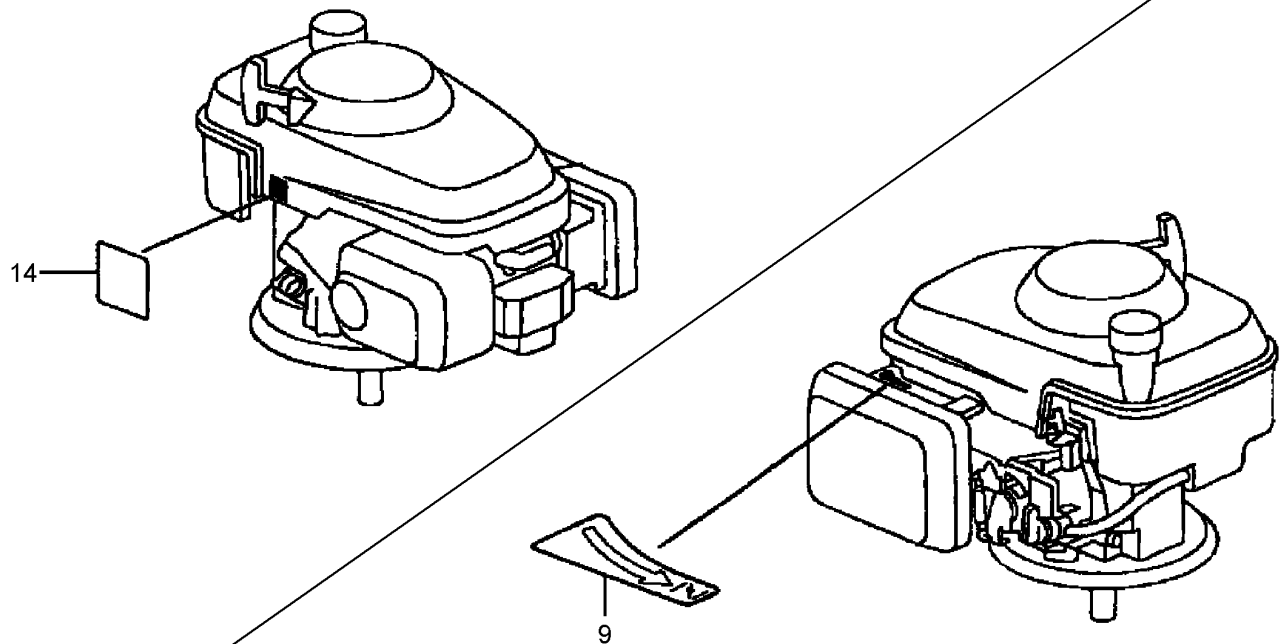 

Label Assembly

Honda GCV160A STL1

Ref	Part No.	Qty.	Description				
③9	87528-Z0L-V20	1	Mark-Indication, Choke				
③14	87594-VG3-010	1	Mark-Caution, Oil				

Attachments and Accessories

For 10795 - Platinum Series Lawn Mower

Product Name	Model/Part
Lawn Boy Paint	110-8800
Replacement Bag	89815
Rear Bag Kit	89913
21 Inch Blade	89914
Cruise Control Kit	89919
Air Filter	89928
Spark Plug	89947

NOTES

NOTES

