



Insight[®] Gold Lawn Mower

Model No. 10672 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front End and Tunnel Assembly	 3	Camshaft Pulley Assembly Honda GCV160A STL1	 14
Rear Axle and Transmission Assembly	 4	Recoil Starter Assembly Honda GCV160A STL1	 15
Transmission Assembly No. 107-3860	 5	Fan Cover Assembly Honda GCV160A STL1	 16
Upper Handle Assembly	 6	Carburetor Assembly Honda GCV160A STL1	 17
Lower Handle Assembly	 7	Air Cleaner Assembly Honda GCV160A STL1	 18
Blade and Engine Assembly	 8	Muffler Assembly Honda GCV160A STL1	 19
Rear Bag Assembly	 9	Flywheel Assembly Honda GCV160A STL1	 20
Cylinder Barrel Assembly Honda GCV160A STL1	 10	Control Assembly Honda GCV160A STL1	 21
Oil Pan Assembly Honda GCV160A STL1	 11	Choke Base Assembly Honda GCV160A STL1	 22
Crankshaft Assembly Honda GCV160A STL1	 12	Top Cover Assembly Honda GCV160A STL1	 23
Piston and Connecting Rod Assembly Honda GCV160A STL1	 13	Label Assembly Honda GCV160A STL1	 24
		Attachments and Accessories List	 25

Part Description Abbreviations

 
Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❷ Obtain from your local Honda dealer

- ❸ Not serviced separately

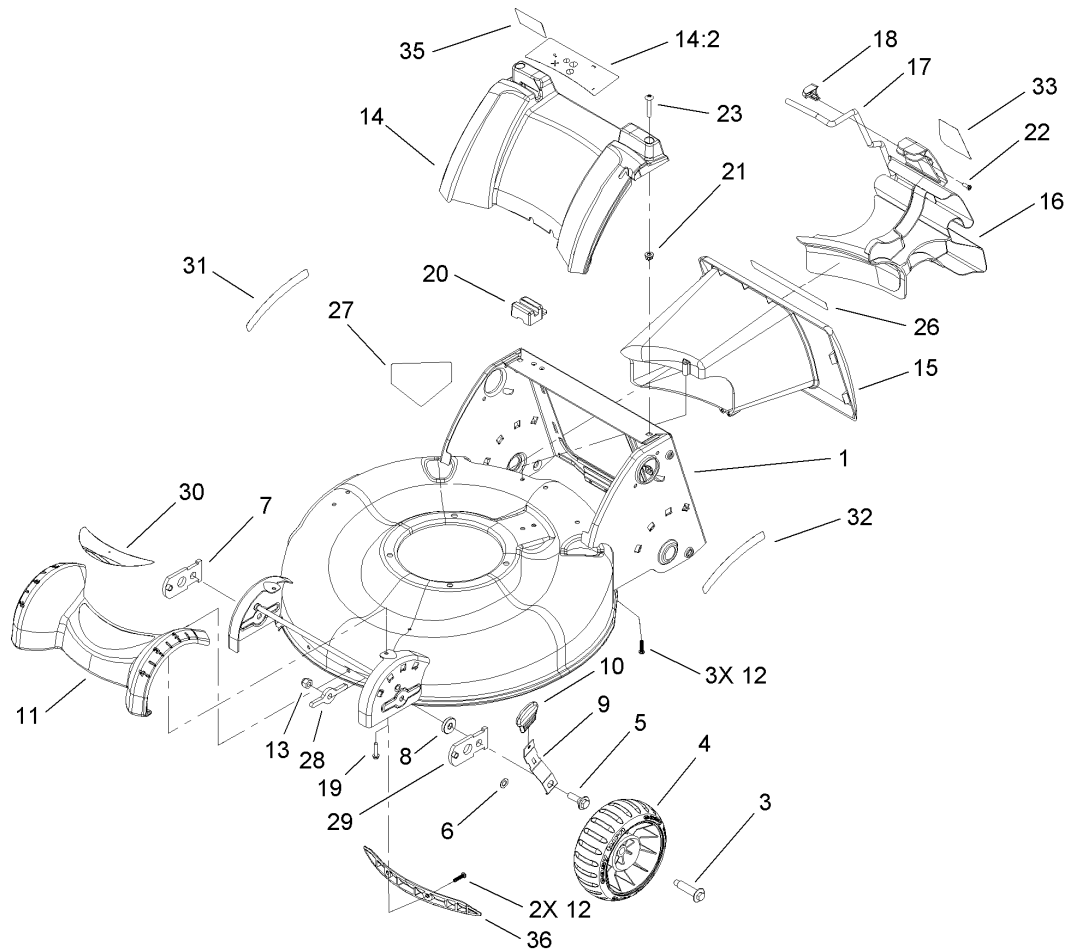


Front End and Tunnel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	107-3883-02	1	Housing ASM	27	94-8072	1	Decal-Danger,
3	614650	2	Bolt-Shoulder	28	108-1048	2	Washer-Support, Front
4	112-1548	2	7 Inch Front Wheel ASM	29	108-1044	1	Arm-Pivot, LH
5	614672	2	Bolt-Shoulder	30	108-7453	1	Decal
6	40-1940	2	Washer	31	108-7450	1	Decal-HOC, RH
7	107-3877	1	Arm-Pivot, RH	32	108-7451	1	Decal-HOC, LH
8	92-4890	2	Washer	33	107-1940	1	Decal-Mulch Plug, Ce
9	107-3878	2	Arm-Spring	35	107-1939	1	Decal-Bag Attachment, Ce
10	107-1904	2	Knob-Lever, HOC	36	108-7502	1	Insert-Housing
11	107-3926	1	Cover-Front	39	107-1948	1	Mulch Plug ASM
12	108-7476	5	Screw-Plastite				
13	3296-39	2	Nut-Lock, NI				
14	108-9395	1	Cover-Rear				
14:2	112-8759	1	Decal-Warning, Ce				
15	110-9455	1	Tunnel				
16	107-3907	1	Plug-Chute				
17	108-1038	1	Latch-Plug				
18	108-0956	1	Retainer-Latch				
19	108-7475	2	Screw-Plastite				
20	110-1786	1	Module-Switch				
21	94-1610	2	Nut-Clip				
22	32144-111	1	Screw-PPH				
23	108-0965	2	Screw-PTH				
26	107-3889	1	Decal-Safety				

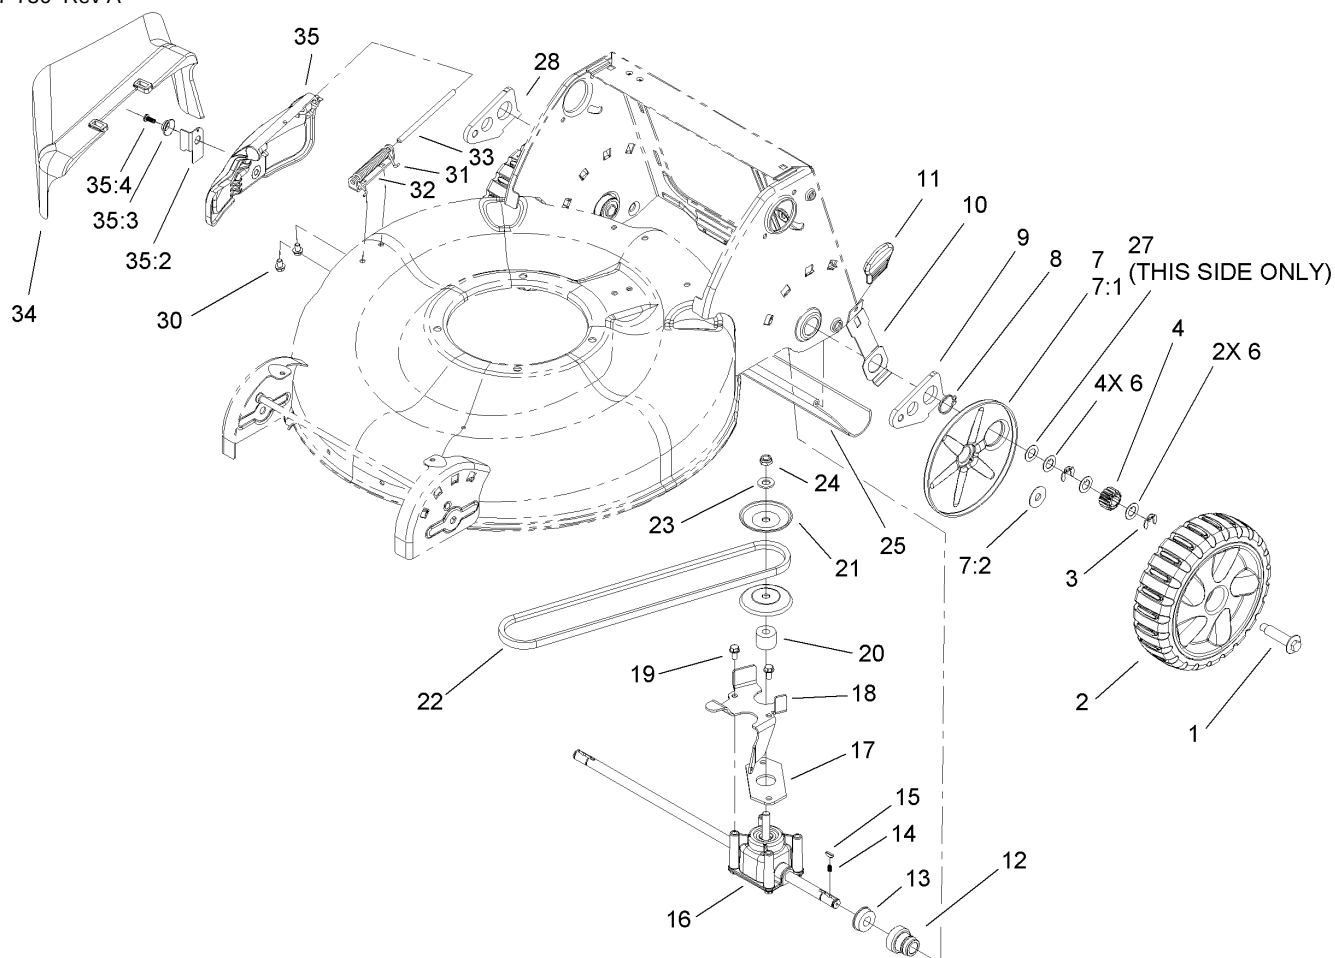 


Rear Axle and Transmission Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder	24	3296-5	1	Nut-Lock
2	107-3906	2	Rear Wheel ASM	25	112-8768	1	Shield-Trailing [lb]
3	65-2720	4	Klipring-Locking	27	36-4780	1	Washer
4	105-3040	2	Gear-Pinion, 15T	28	108-9343	1	Arm-Rear Pivot, RH
6	105-6840	6	Washer-Thrust	30	99-8445	2	Screw-HWH
7	110-1793	2	Wheel Cover ASM	31	99-5293	1	Spring-Torsion
7:1		1	Cover-Wheel	32	112-6416	1	Bracket-Cover
7:2	614426	1	Washer-Stepped	33	99-5291	1	Rod-Cover
8	32151-36	2	Ring-Retaining	34	105-3028	1	Chute-Discharge, Side
9	108-9344	1	Arm-Rear Pivot, LH	35	106-8376	1	Discharge Door ASM
10	110-9445	2	Arm-Spring, Rear	35:2	107-0795	1	Latch-Door
11	107-1904	2	Knob-Lever, HOC	35:3	107-7456	1	Cap-Door
12	104-8698	2	Retainer-Bearing, HOC	35:4	107-7461	1	Screw-Plastite
13	104-8699	2	Bearing-Ball				
14	39-9650	2	Spring-Compression				
15	612066	2	Key				
16	107-3860	1	Transmission ASM				
17	108-9756	1	Gasket-Gearbox				
18	107-3884-03	1	Bracket-Transmission				
19	32144-4	2	Screw-HWH				
20	92-5791	1	Spacer				
21	100-1176	2	Pulley-Half				
22	91-2258	1	V-Belt				
23	3256-24	1	Washer-Flat				

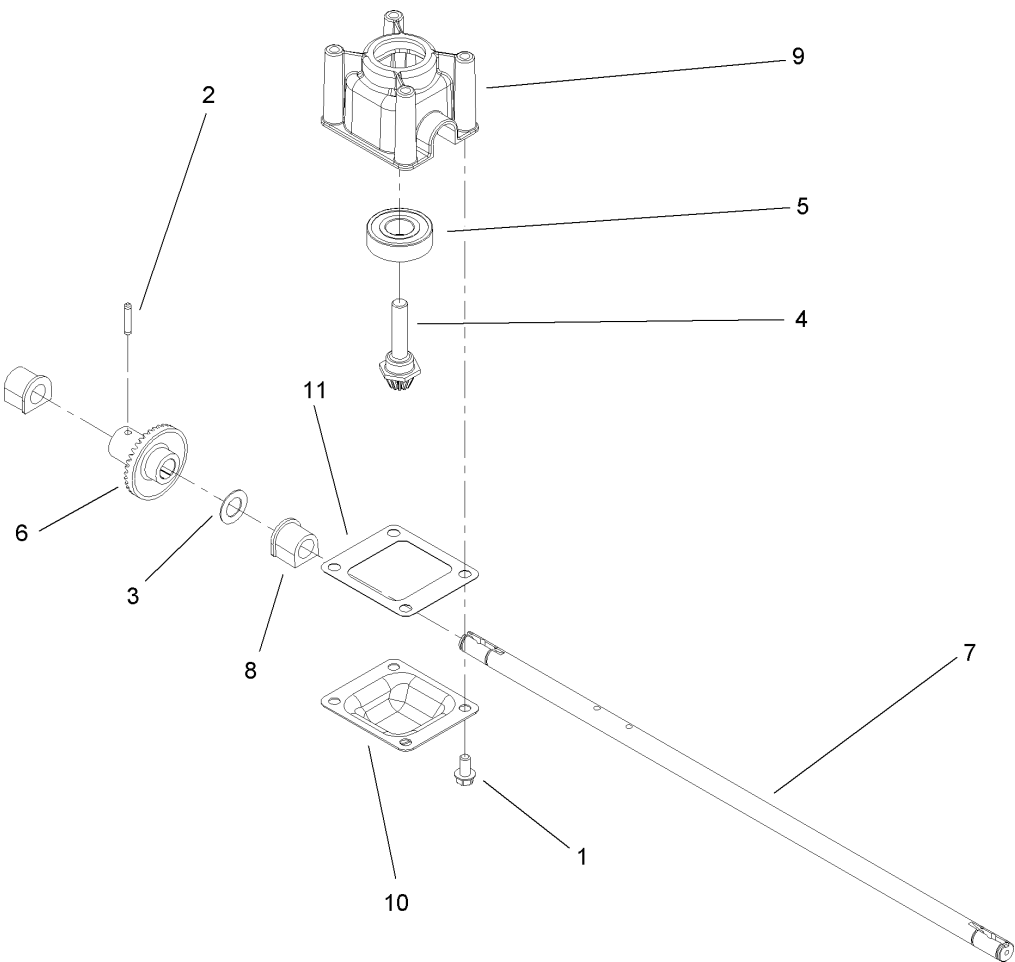 


Transmission Assembly No. 107-3860

Ref	Part No.	Qty.	Description				
1	32144-4	4	Screw-HWH				
2	3285-19	1	Pin-Groove				
3	36-4780	1	Washer				
4	92-5790	1	Pinion				
5	100-1048	1	Bearing-Ball				
6	104-8671	1	Gear-Bevel, 37T				
7	107-3861	1	Shaft-Output				
8	104-8673	2	Bushing-Shaft, Output				
9	104-8674	1	Gearcase-Upper				
10	104-8675-03	1	Cover-Gearcase				
11	105-6839	1	Gasket-Gearcase				

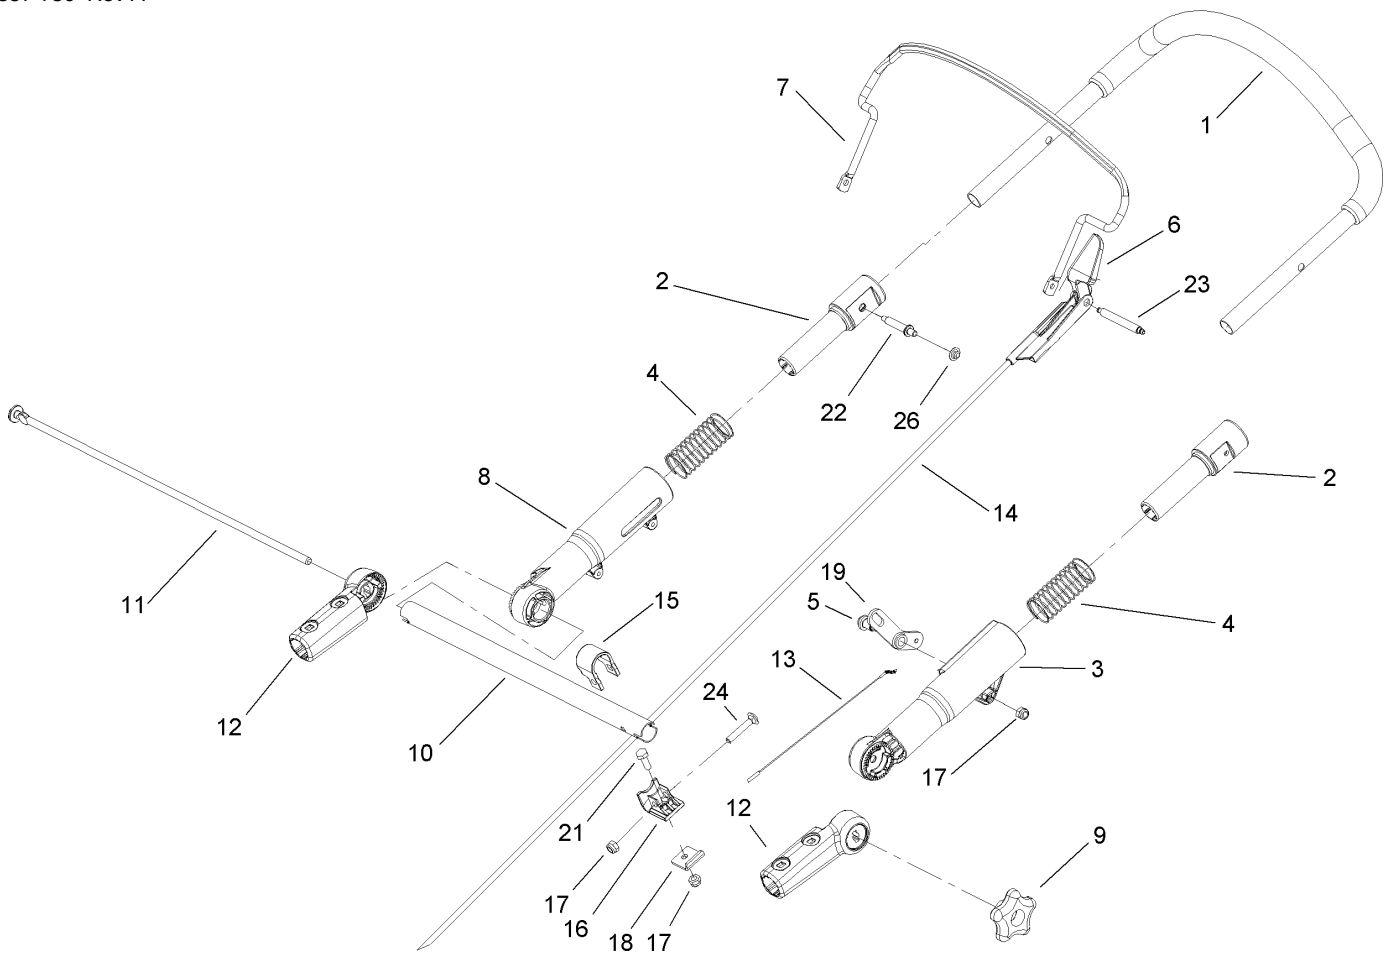 


Upper Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0974	1	Upper Handle ASM				
2	112-8754	2	Sleeve Inner				
3	112-1544	1	Sleeve Outer, LH				
4	107-3869	2	Spring-Compression				
5	104-0858	1	Bolt-Shoulder				
6	112-8764	1	Stop-Pivot				
7	110-1819-03	1	Bail-Brake				
8	112-1545	1	Sleeve Outer, RH				
9	107-3937	1	Knob				
10	107-3867-03	1	Tube-Cross				
11	107-3871	1	Rod-Threaded				
12	107-3865	2	Mount-Handle, Lower				
13	107-3902	1	Cable-Traction				
14	107-3903	1	Cable-Brake				
15	108-1045	1	Support-Cable				
16	108-1046	1	Support-Guide, Cable				
17	3296-73	3	Nut-Lock, NI				
18	108-7454	1	Clamp-Cable				
19	107-3893	1	Lever-Traction				
21	321-4	1	Screw-HH				
22	108-0959	1	Pin-Handle				
23	108-1008	1	Pin-Bail, LH				
24	108-0988	1	Screw-CARR				
26	108-9378	1	Retainer-Push On				

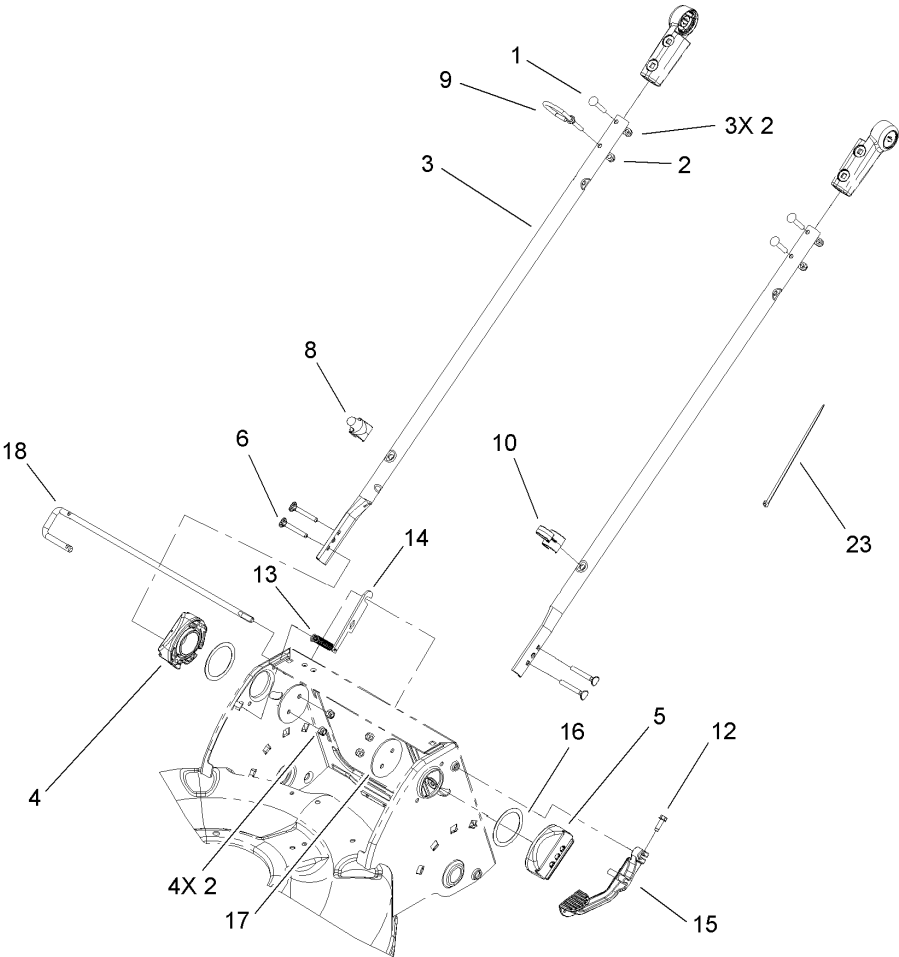 


Lower Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0988	3	Screw-CARR				
2	3296-73	8	Nut-Lock, NI				
3	107-3887-03	2	Tube-Lower				
4	108-9339-03	1	Mount-Handle, RH				
5	108-9340-03	1	Mount-Handle, LH				
6	95-4453	4	Screw				
8	108-0994	1	Guide-Rope, Lower				
9	107-3908	1	Guide-Rope, Upper				
10	106-6805	1	Guide-Cable				
12	49-2040	1	Screw-HWHTF				
13	112-1542	1	Spring-Extension				
14	112-1539	1	Plate-Release Rod				
15	110-1823-03	1	Lever-Release				
16	107-3947	2	Washer-Nylon				
17	107-3944-03	2	Plate				
18	112-8755	1	Handle-Rod, Release				
23	614249	1	Strap-Tie				

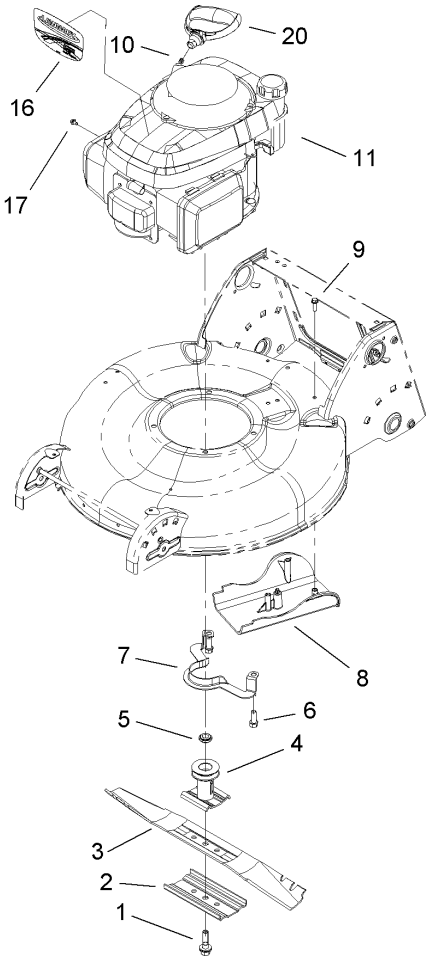 

Blade and Engine Assembly


Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	108-3766-03	1	Support-Blade				
3	108-0954-03	1	Blade-21 Inch				
4	106-3987	1	Blade Driver ASM				
5	106-3999	1	Spacer-Driver				
6	92-1624	3	Screw				
7	105-3030-03	1	Guide-Belt				
8	110-1832	1	Cover-Belt				
9	46-8091	3	Screw-HWH				
10	92-1701	1	Stop-Rope				
11		1	Engine-Honda, Gcv160A Stl1				
16	108-7529	1	Decal				
17	98-1394	1	Screw-HWH				
20	110-1778	1	Handle-Recoil				

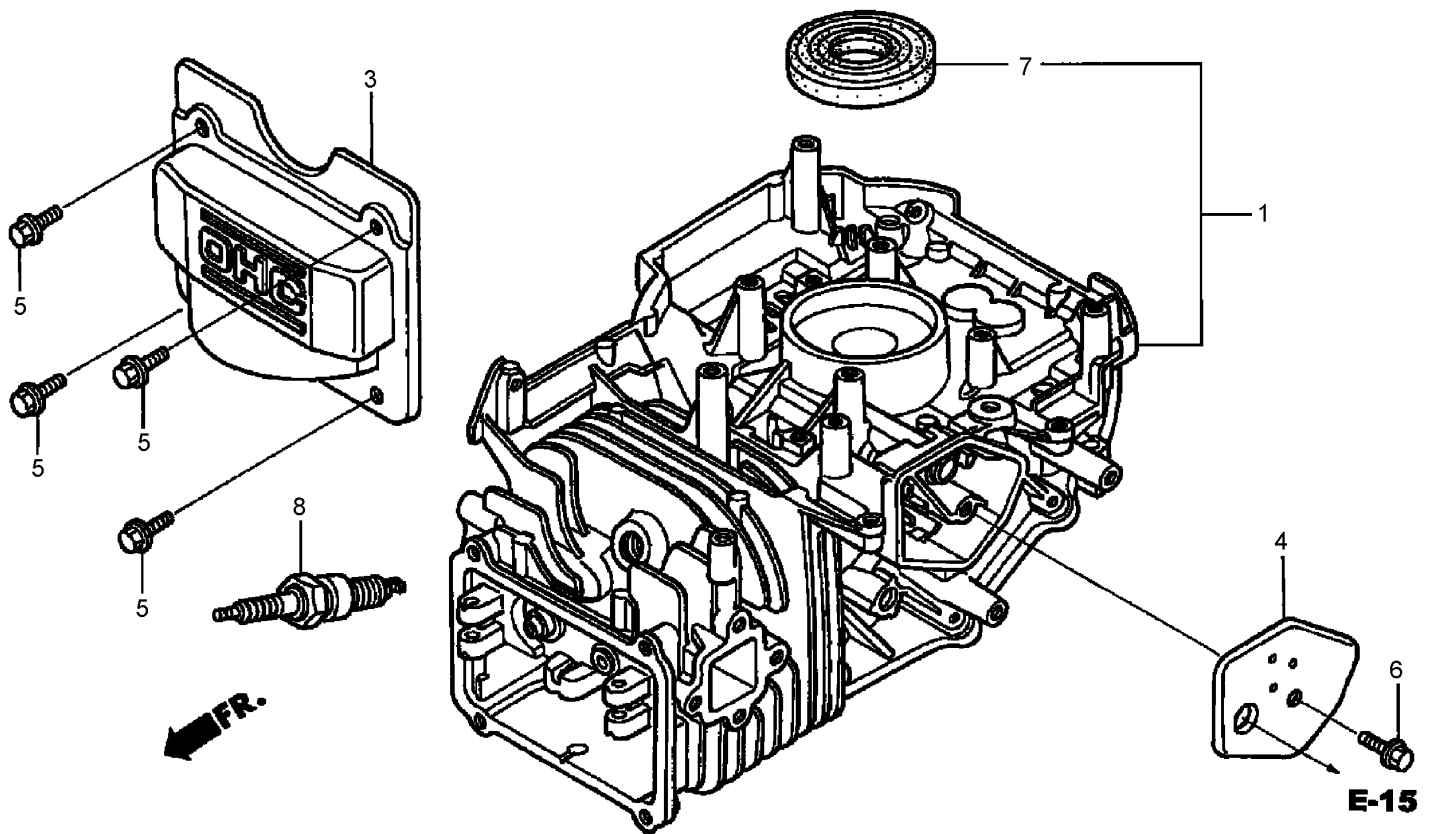 

Cylinder Barrel Assembly

Honda GCV160A STL1



Ref	Part No.	Qty.	Description				
❸1	12000-ZL8-415	1	Cylinder ASM (010)				
❸3	12311-ZL8-000	1	Cover-Head				
❸4	12355-ZL8-000	1	Cover-Breather (Breather Valve ASM)				
❸5	90013-883-000	4	Bolt-Flange (6X12) (Ct200)				
❸6	90014-952-000	1	Bolt-Flange (6X14)				
❸7	91201-ZL8-003	1	Seal (25.4X62X6)				
❸8	98079-56846	1	Plug-Spark (Bpr6Es) (Ngk)				

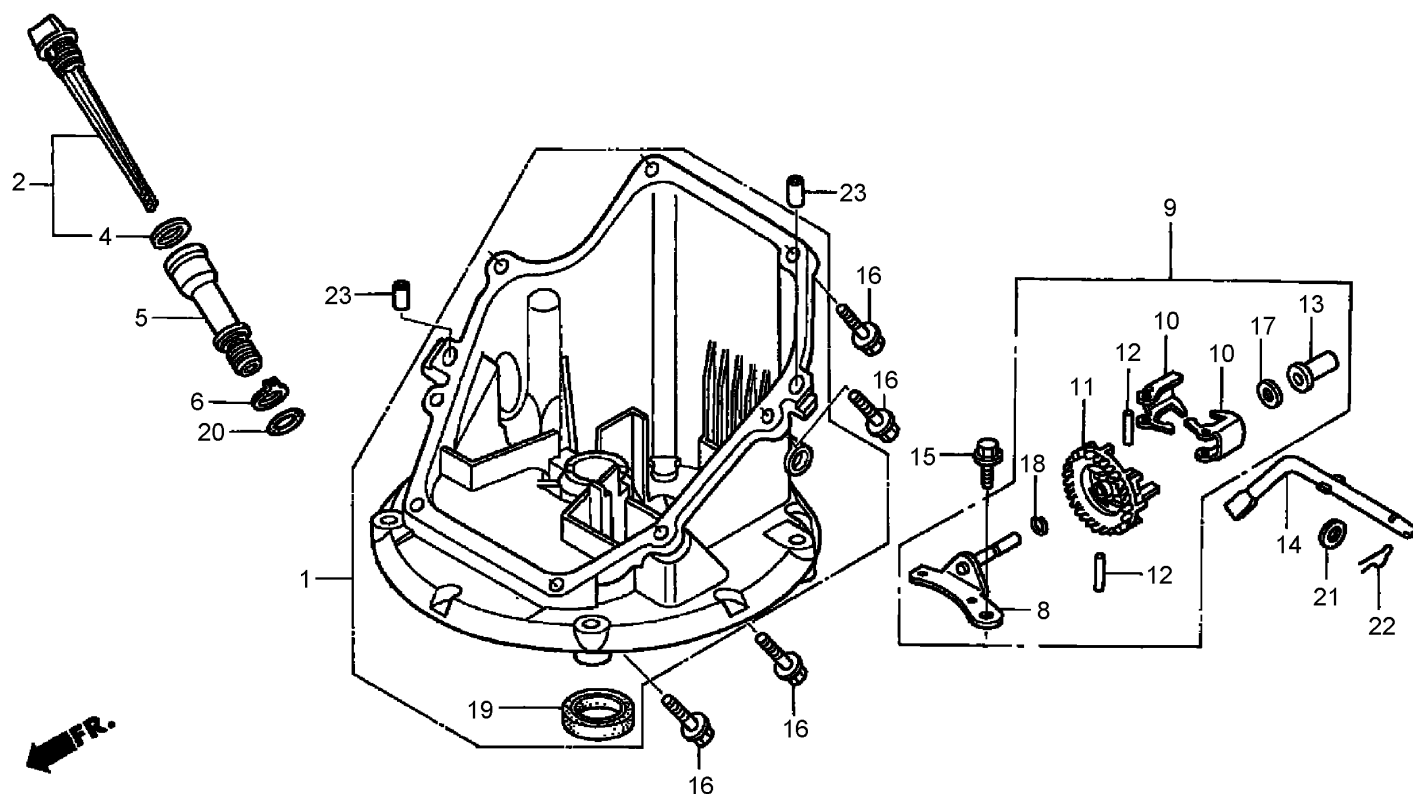 

Oil Pan Assembly Honda GCV160A STL1


Ref	Part No.	Qty.	Description
❶1	11300-ZM0-405	1	Oil Pan ASM (000)
❶2	15650-ZM0-801	1	Dipstick-Oil
❶4	15625-ZE6-000	1	Gasket-Cap, Oil Filler
❶5	15631-ZM0-000	1	Extension-Filler, Oil
❶6	15639-ZM0-000	1	Washer-Lock, Extension
❶8	16508-ZM0-010	1	Shaft-Holder, Governor
❶9	16510-ZM0-010	1	Governor ASM
❶10	16511-ZL8-000	2	Weight-Governor
❶11	16512-ZM0-000	1	Holder-Weight, Governor
❶12	16513-ZE1-000	2	Pin-Weight, Governor
❶13	16531-ZE1-000	1	Slider-Governor
❶14	16541-ZM0-000	1	Shaft-Arm, Governor
❶15	90014-952-000	1	Bolt-Flange (6X14)

Ref	Part No.	Qty.	Description
❶16	90121-952-000	8	Bolt-Flange (6X25)
❶17	90451-ZE1-000	1	Washer-Thrust (6Mm)
❶18	90602-ZE1-000	1	Clip-Holder, Governor
❶19	91202-ZL8-003	1	Seal-Oil (28X41.25X6)
❶20	91303-KF0-003	1	O-Ring (14.8X2.4) (Arai)
❶20	91356-MA6-005	1	O-Ring
❶21	94101-06800	1	Washer-Plain (6Mm)
❶22	94251-08000	1	Pin-Lock (8Mm)
❶23	94301-08200	2	Pin-Dowel (8X20)

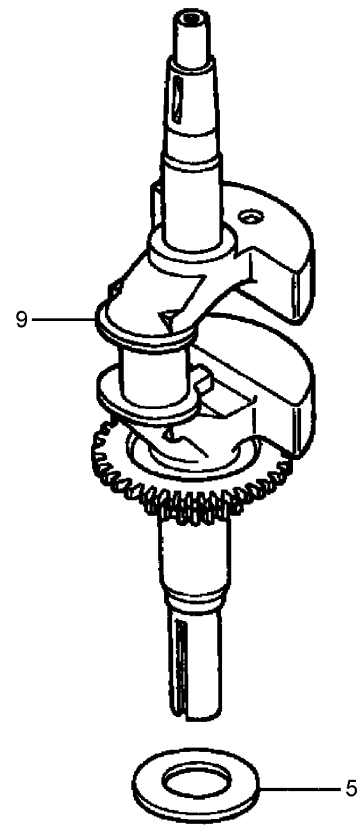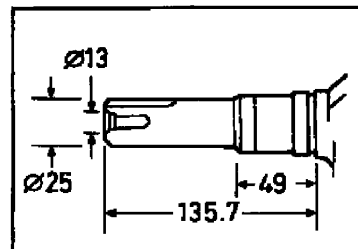  

Crankshaft Assembly Honda GCV160A STL1


Ref	Part No.	Qty.	Description
55	90402-ZL8-000	1	Washer-Thrust
59	13310-Z0L-V70	1	Crankshaft

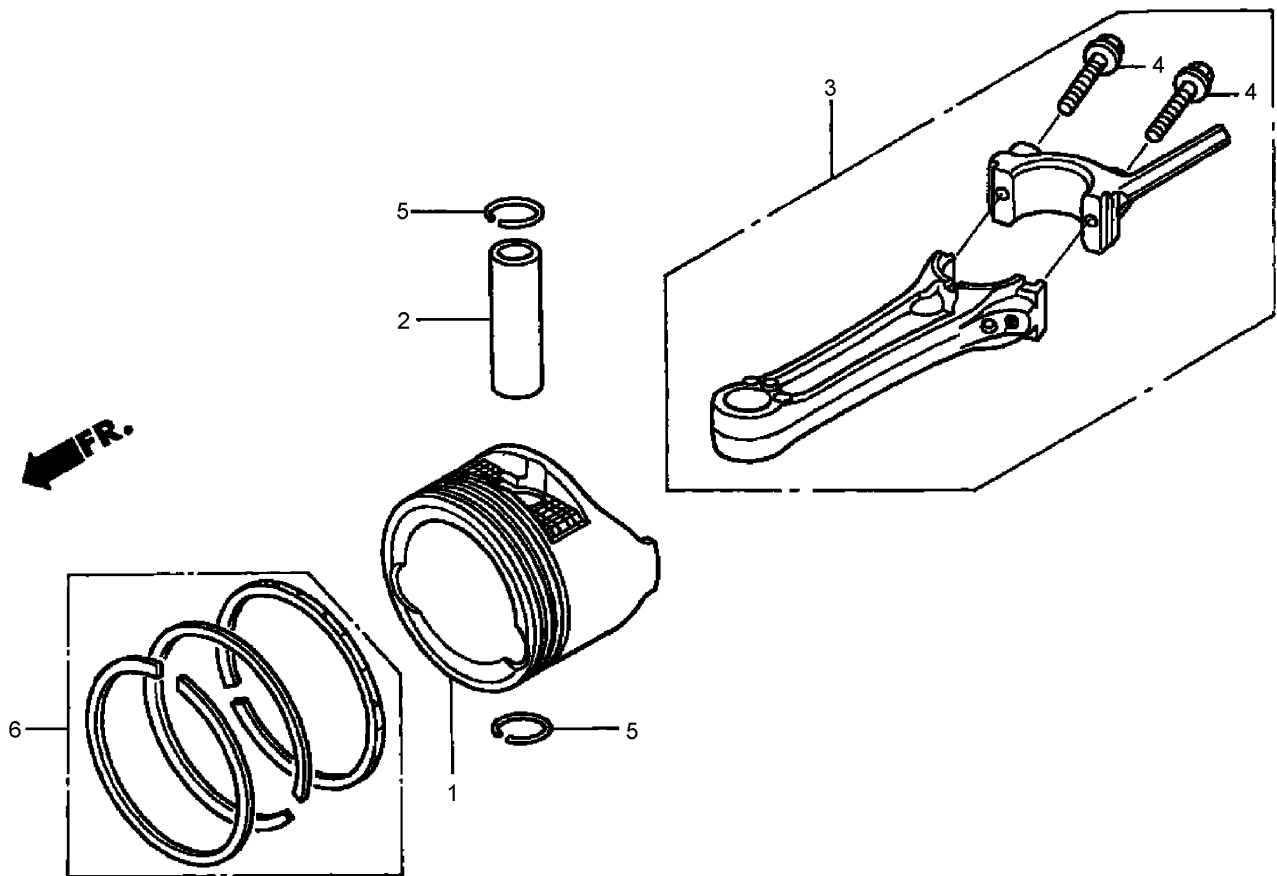 

Piston and Connecting Rod Assembly

Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
③1	13101-ZL8-000	1	Piston				
③2	13111-ZE0-000	1	Pin-Piston				
③3	13200-ZL8-000	1	Connecting Rod ASM				
③4	90001-ZE1-000	2	Bolt-Rod, Connecting				
③5	90551-ZE0-000	2	Clip-Pin, Piston (13Mm)				
③6	13010-ZL8-003	1	Ring Set-Piston (Riken)				
③6	13010-ZL8-024	1	Ring Set-Piston (Teikoku)				

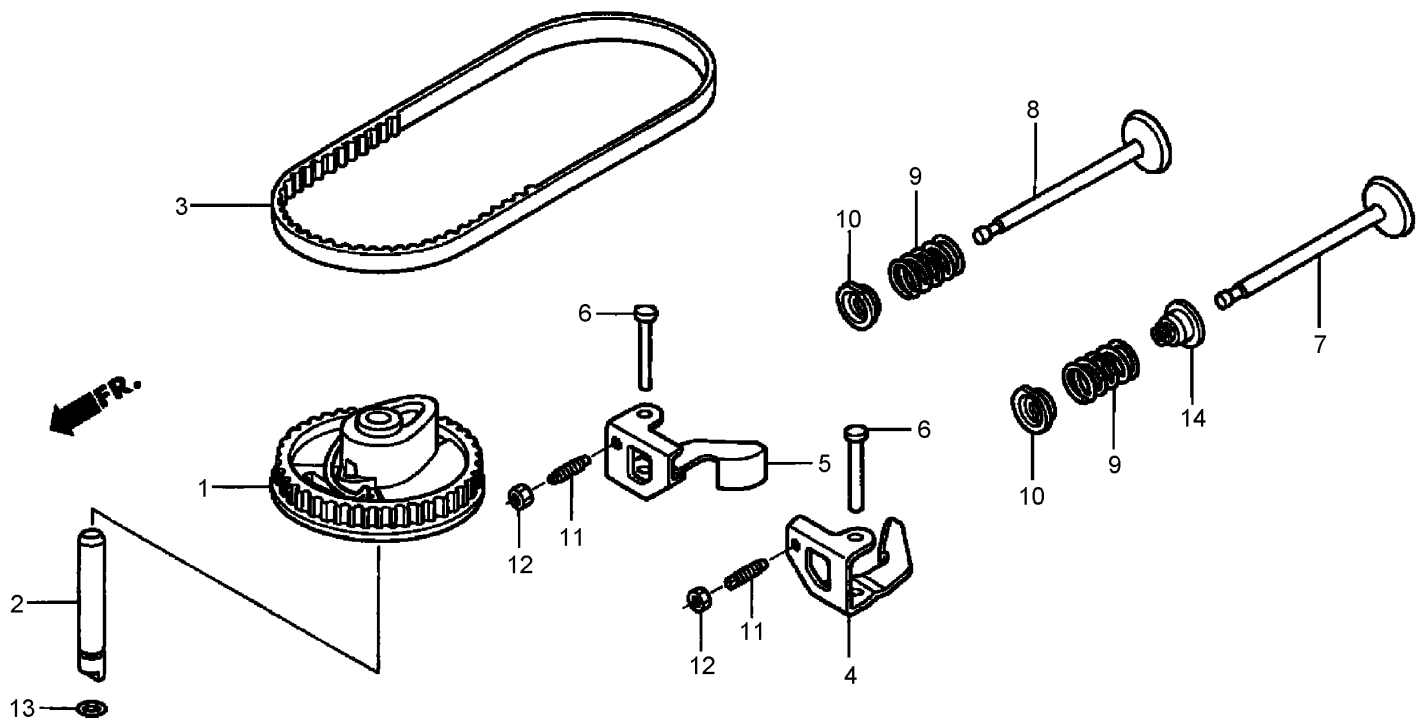 

Camshaft Pulley Assembly
Honda GCV160A STL1


Ref	Part No.	Qty.	Description
❶1	14320-ZL8-010	1	Pulley-Camshaft
❷2	14324-ZL8-000	1	Shaft-Pulley
❸3	14400-Z0J-014	1	Belt-Timing (84Hu7 G-200)
❹4	14431-Z0J-000	1	Rocker Arm-Valve, Intake
❺5	14441-Z0J-000	1	Rocker Arm-Valve, Exhaust
❻6	14461-ZL8-000	2	Shaft-Arm, Rocker
❼7	14711-Z0J-000	1	Valve-Intake
❽8	14721-ZL8-000	1	Valve-Exhaust
❾9	14751-ZL8-000	2	Spring-Valve
❿10	14771-Z0J-000	2	Retainer-Spring, Valve
⓫11	90012-333-000	2	Screw-Tappet, Adj.
⓬12	90206-001-000	2	Nut-Tappet, Adj.
⓭13	91301-ZM0-V31	1	O-Ring (6.8X1.9)

Ref	Part No.	Qty.	Description
❿14	12209-ZM0-003	1	Seal-Stem, Valve

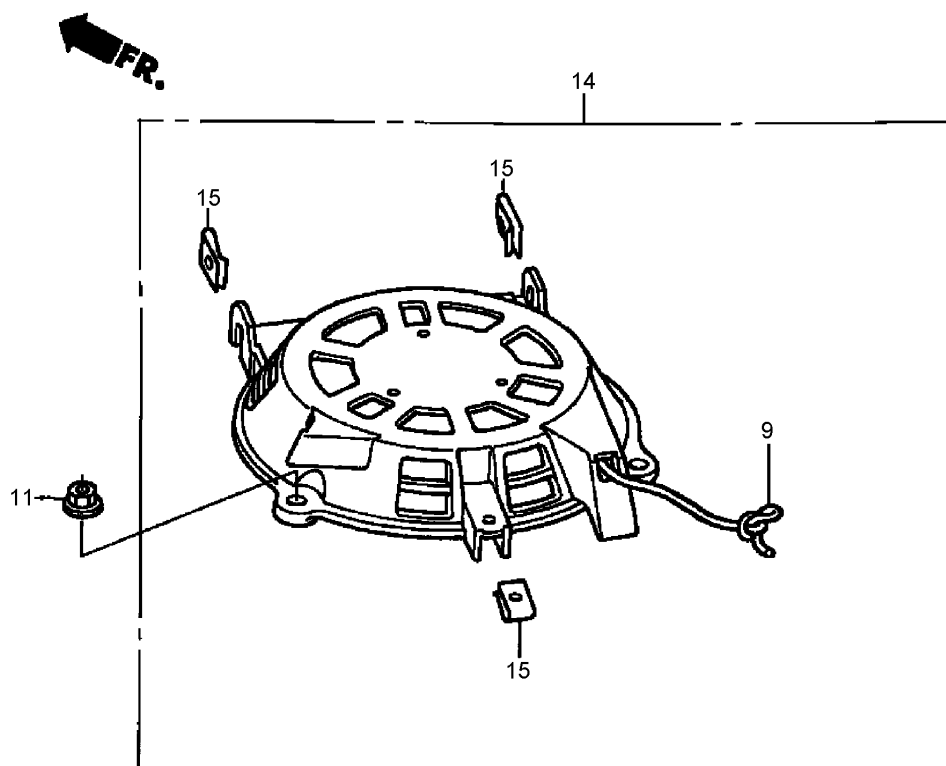 


Recoil Starter Assembly Honda GCV160A STL1

Ref	Part No.	Qty.	Description				
⑨9	28462-Z0L-V71	1	Rope-Starter, Recoil				
⑨11	90201-ZM0-000	3	Nut-Flange (6Mm)				
⑨14	28400-Z0L-V72	1	Recoil Starter ASM				
⑨15	66871-KY2-700	3	Nut-Cowl				

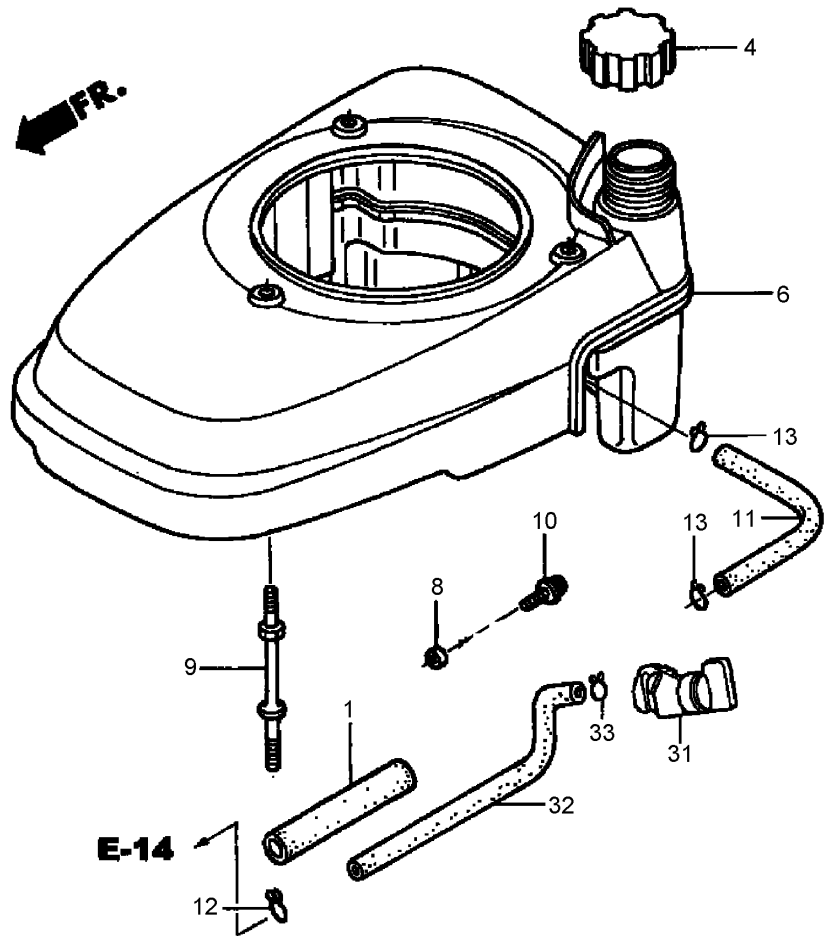 

Fan Cover Assembly
Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
❸1	16854-ZH8-000	1	Supporter-Rubber (107Mm)				
❸4	17620-ZL8-013	1	Fuel Tank Cap ASM				
❸6	19610-Z0L-800ZA	1	Cover-Fan				
❸8	91501-Z0L-800	1	Collar-Petcock, Fuel				
❸9	90043-ZL8-000	3	Bolt-Stud				
❸10	93891-05010-08	1	Screw-Washer (5X10)				
❸11	95001-55008-60M	1	Fuel-Hose (5.5X8000) (5.5X100)				
❸12	95002-02080	1	Clip-Tube (B8)				
❸13	95002-02100	2	Clip-Tube (B10)				
❸31	16950-ZM0-003	1	Petcock ASM				
❸32	17702-ZM0-800	1	Tube- Fuel				
❸33	95002-02080	1	Clip-Tube (B8)				

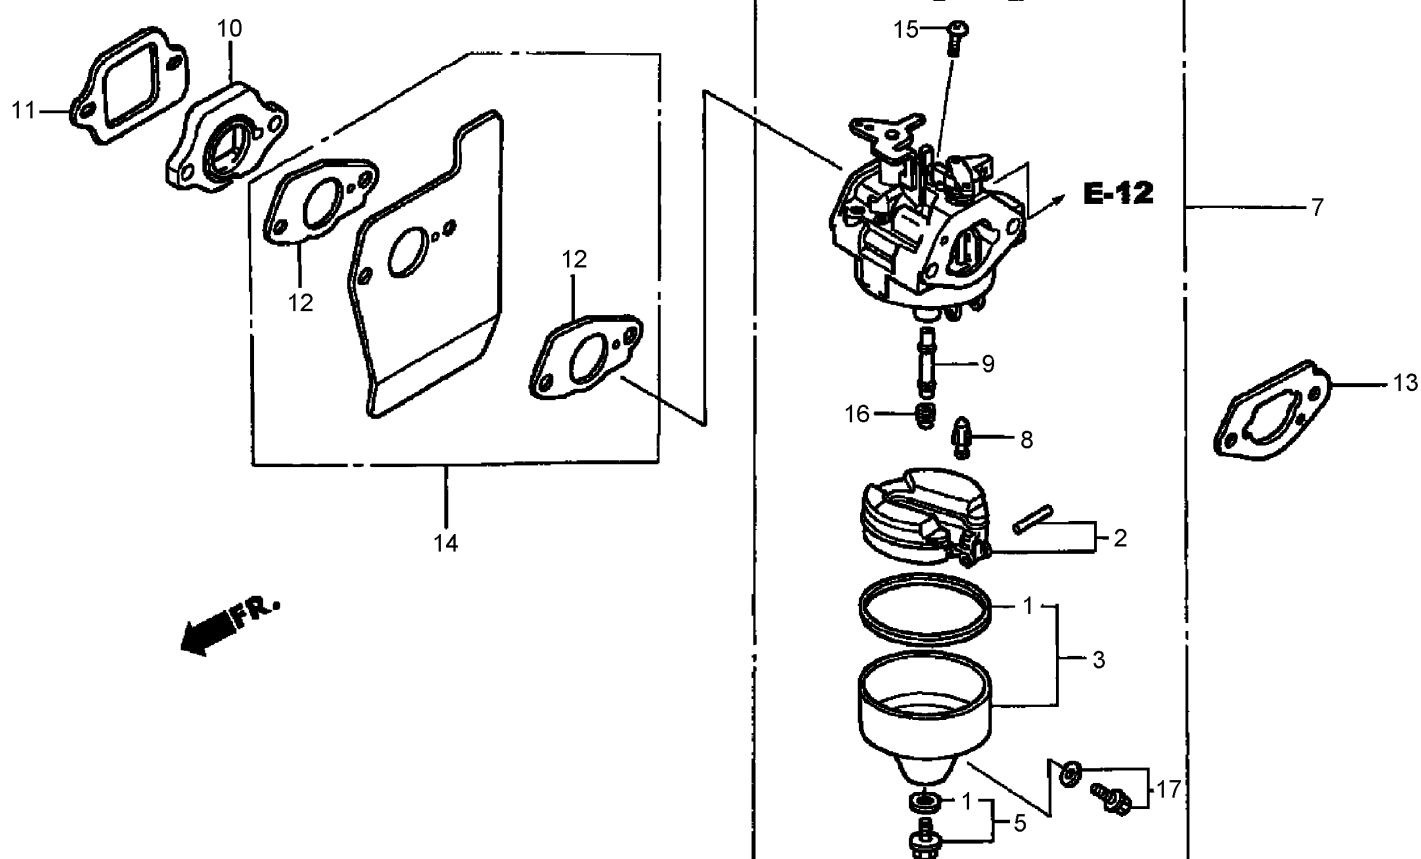 

Carburetor Assembly Honda GCV160A STL1

Ref	Part No.	Qty.	Description
❶	16010-883-015	1	Gasket Set
❷	16013-ZL1-003	1	Float Set
❸	16015-887-782	1	Chamber Set-Float
❺	16028-ZE0-005	1	Screw-Set
❷	16100-Z0L-802	1	Carburetor ASM (Bb62G B)
❸	16155-ZM0-013	1	Valve-Float (Carburetor No.)
❹	16166-ZM0-003	1	Nozzle-Main
❿	16211-ZL8-000	1	Insulator-Carburetor
❾	16212-ZL8-000	1	Gasket-Insulator
❿	16221-883-800	2	Gasket-Carburetor
❿	16228-ZL8-000	1	Gasket-Carburetor (Choke Side)
❿	19650-ZM0-000	1	Guide-Air
❿	93500-05006-0H	1	Screw-Pan (5X6)


Ref	Part No.	Qty.	Description
❿	99101-124-0600	1	Jet-Main (#60)
❿	99101-124-0620	1	Jet-Main (#62)
❿	99101-124-0650	1	Jet-Main (#65)
❿	16024-ZE1-811	1	Screw Set-Drain

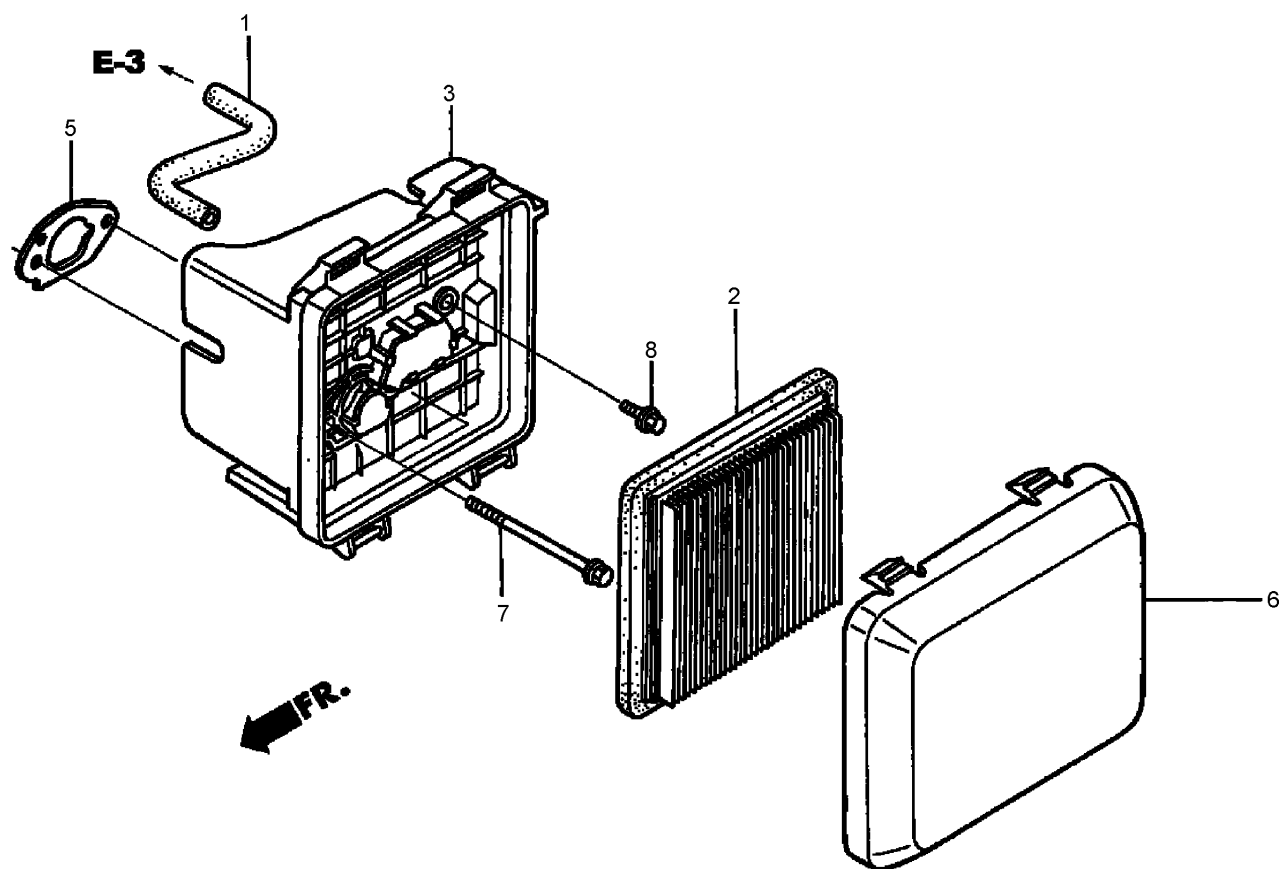 

Air Cleaner Assembly

Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
③1	15721-ZM0-000	1	Tube-Breather				
③2	17211-ZL8-013	1	Element-Cleaner, Air				
③3	17220-ZM0-000	1	Air Cleaner Case ASM				
③5	17228-ZM0-000	1	Gasket-Cleaner, Air				
③6	17231-Z0L-030	1	Cover-Cleaner, Air				
③7	90003-ZM0-000	2	Bolt-Flange (6X86) (Ct200)				
③8	95701-06014-08	1	Bolt-Flange (6X14)				

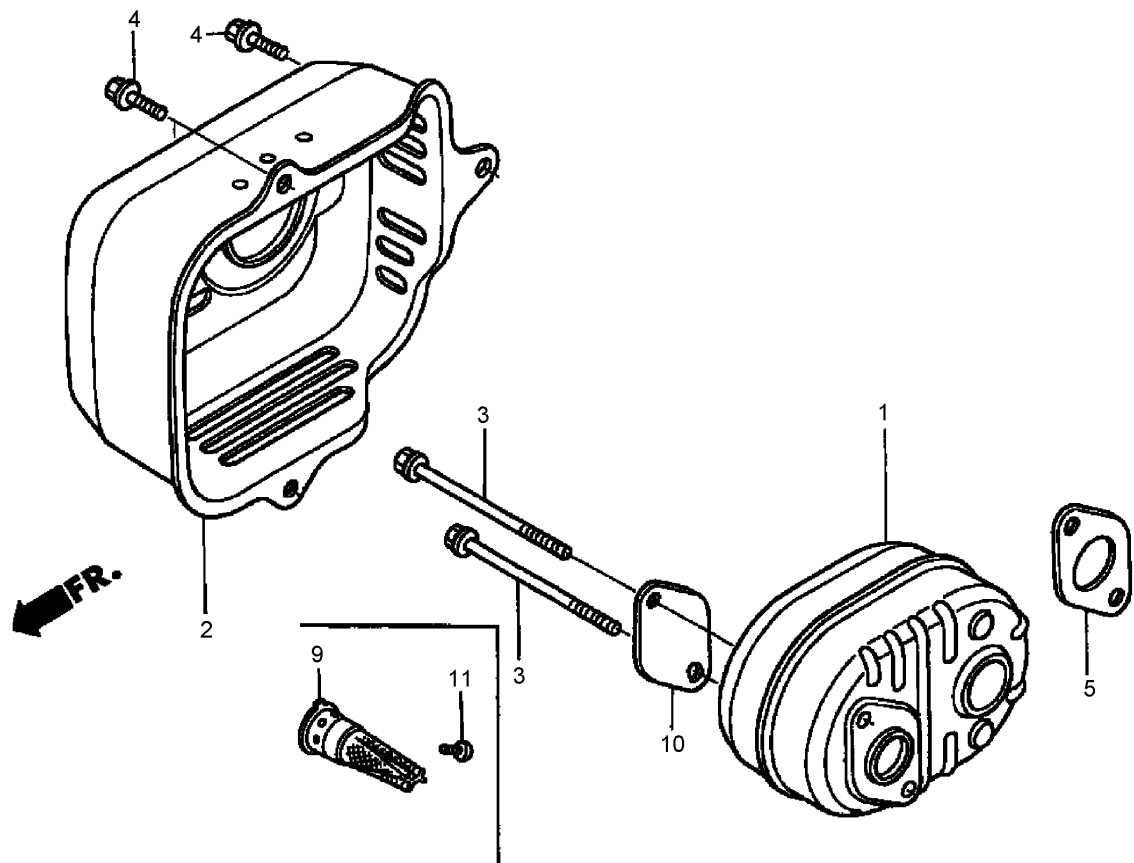 

Muffler Assembly

Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
③1	18310-ZM0-000	1	Muffler				
③2	18321-Z0L-J00	1	Protector-Muffler (Cbu)				
③3	90004-ZL8-000	2	Bolt-Flange (6X79) (Ct200)				
③4	90013-883-000	3	Bolt-Flange (6X12) (Ct200)				
③5	18381-ZL8-305	1	Gasket-Muffler				
③9	18350-ZL8-000	1	Arrester-Spark				
③10	18356-ZL8-000	1	Plate-Number, Arrester				
③11	90055-ZE1-000	1	Screw-Tapping (4X6)				

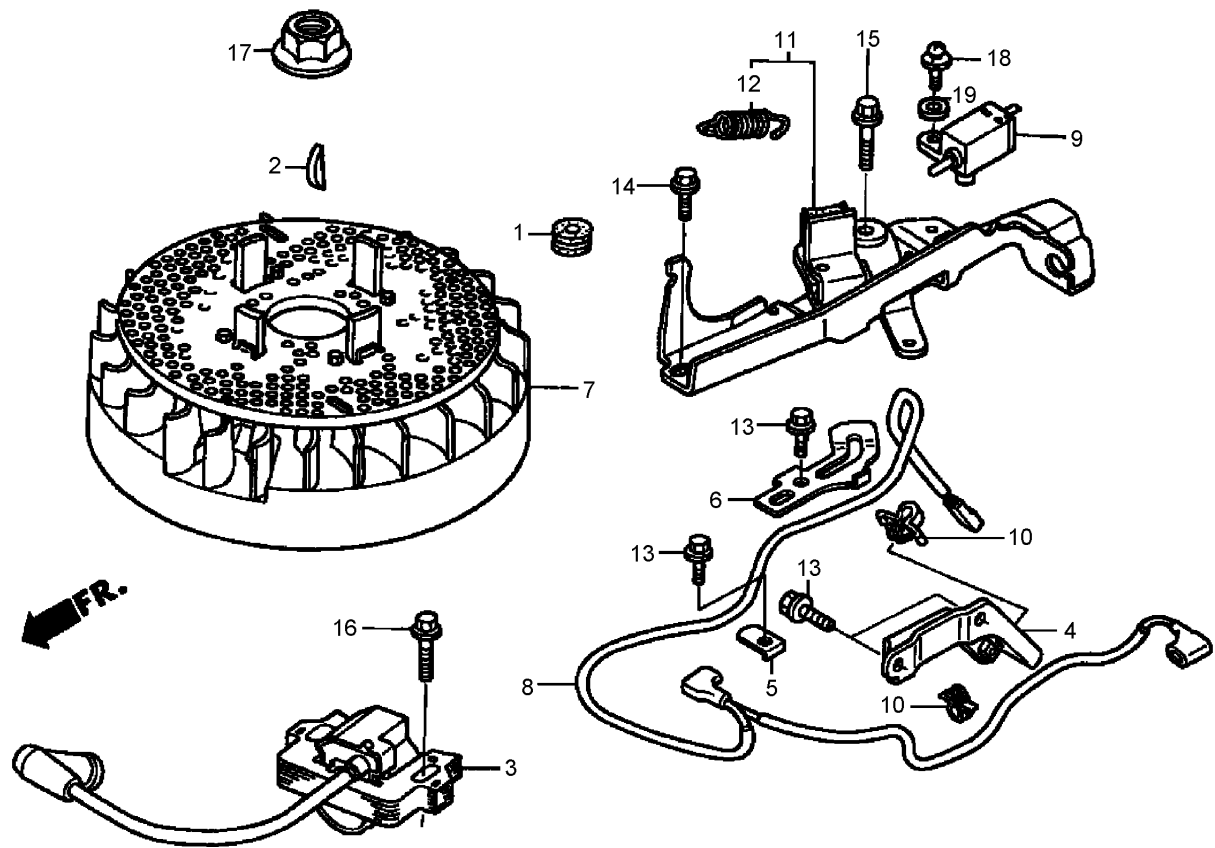 

Flywheel Assembly Honda GCV160A STL1


Ref	Part No.	Qty.	Description
❶1	11344-MB0-000	1	Grommet-Cover, A-Rr
❶2	13331-357-000	1	Key-Woodruff (25X18)
❶3	30500-ZL8-004	1	Ignition Coil ASM
❶4	30547-Z0L-S00	1	Clamp-Wire, Stop Switch
❶5	30548-ZL8-000	1	Clamp-Wire, Stop Switch
❶6	30549-ZL8-000	1	Clamp-Wire
❶7	31105-ZM0-000	1	Flywheel ASM
❶8	32195-Z0L-S00	1	Wire-Switch, Stop
❶9	35120-ZM0-003	1	Engine Stop Switch ASM
❶10	51125-Z0L-003	2	Holder-Wire
❶10	90681-959-003	2	Clip-Cable (A)
❶11	75110-Z0L-800	1	Brake Sub ASM
❶12	75113-ZM0-000	1	Spring-Lever, Brake

Ref	Part No.	Qty.	Description
❶13	90013-883-000	4	Bolt-Flange (6X12) (Ct200)
❶14	90014-952-000	1	Bolt-Flange (6X14)
❶15	90018-ZE1-000	1	Bolt-Flange
❶16	90022-888-010	1	Bolt-Flange (6X20)
❶17	90201-878-003	1	Nut (14Mm)
❶18	93892-04012-00	1	Screw-Washer
❶19	94103-04000	1	Washer-Plain

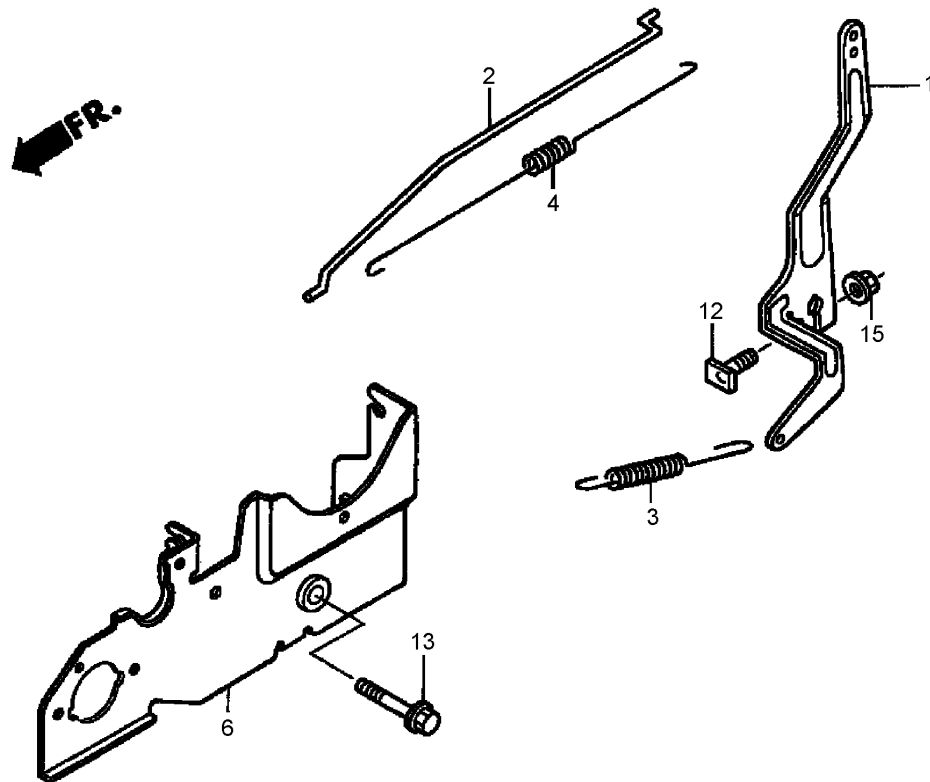 


Control Assembly Honda GCV160A STL1

Ref	Part No.	Qty.	Description				
③1	16551-ZM0-010	1	Arm-Governor				
③2	16555-Z0L-800	1	Rod-Governor				
③3	16561-Z0L-000	1	Spring-Governor				
③4	16562-ZM0-000	1	Spring-Return, Throttle				
③6	16580-Z0L-810	1	Base-Control				
③12	90015-ZE5-010	1	Bolt-Arm, Governor				
③13	90016-ZE8-000	1	Bolt-Flange (6X45)				
③15	94050-06000	1	Nut-Flange (6Mm)				

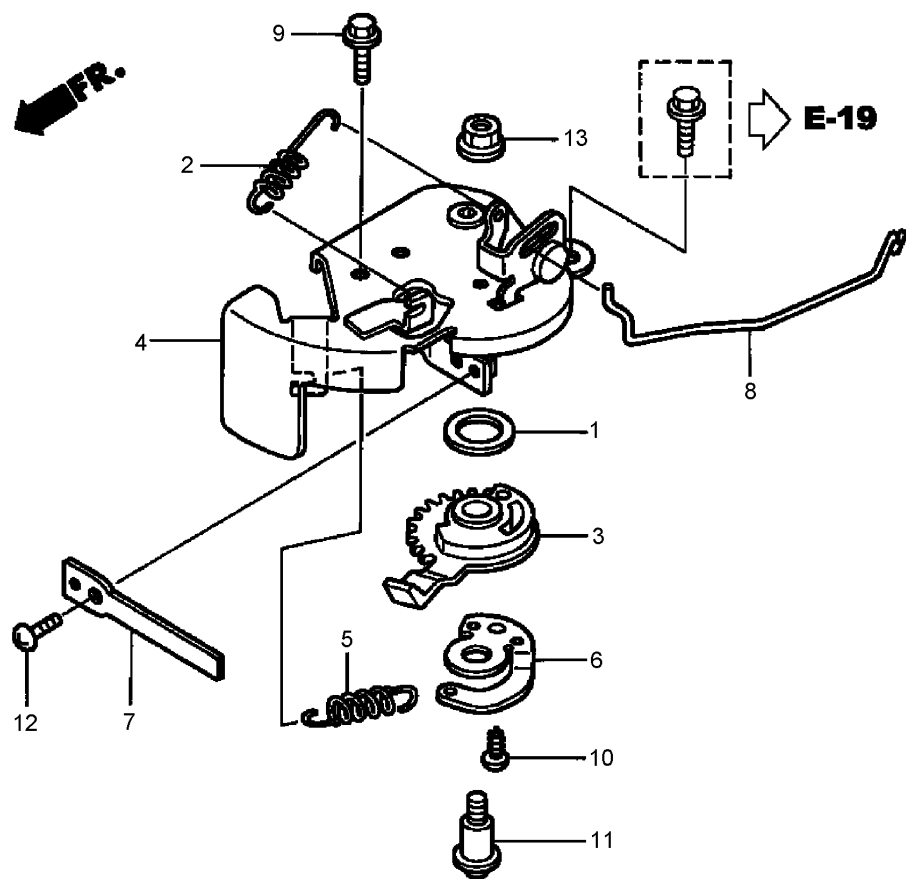 


Choke Base Assembly
Honda GCV160A STL1

Ref	Part No.	Qty.	Description				
❶1	16251-Z0L-800	1	Seal-Lever, Choke				
❷2	16592-ZJ1-000	1	Spring-Return, Cable				
❸3	16612-Z0L-800	1	Lever-Choke				
❹4	16613-Z0L-800	1	Base-Choke				
❺5	16614-Z0L-800	1	Spring-Lever, Choke				
❻6	16616-Z0L-800	1	Hook-Spring, Choke				
❼7	16619-Z0L-800	1	Plate-Choke				
❽8	16632-Z0L-800	1	Rod-Stop				
❾9	90029-888-000	1	Bolt-Flange (6X16)				
❿10	90102-SP1-003	1	Screw-Tapping (4X8) (Po)				
⓫11	90141-KT8-000	1	Screw-Pan (5X19)				
⓬12	93500-04008-0H	1	Screw-Pan (4X8)				
⓭13	94050-05000	1	Nut-Flange (5Mm)				

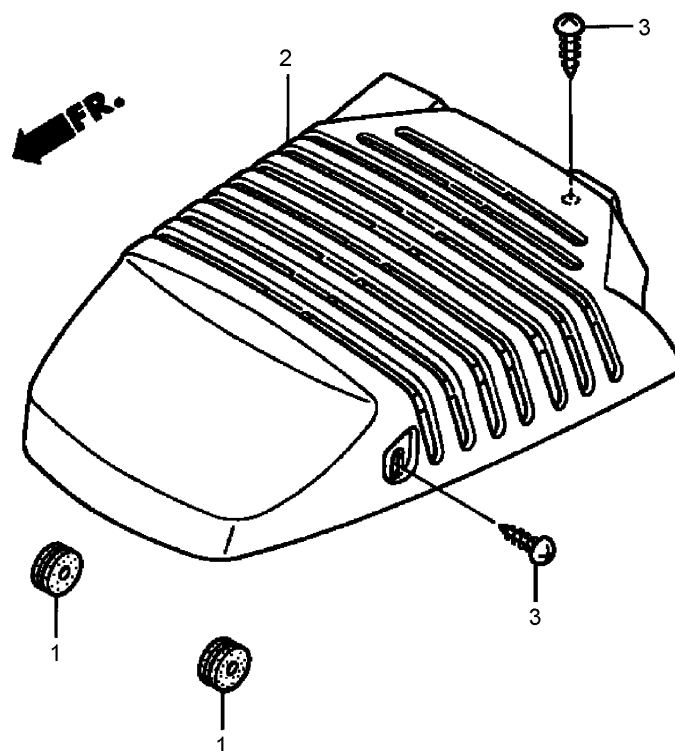 

Top Cover Assembly Honda GCV160A STL1

Ref	Part No.	Qty.	Description
❸1	16613-883-610	2	Grommet-Rod, Choke
❸2	19721-Z0L-000ZA	1	Cover-Top
❸3	90137-SH3-000	3	Screw-Tapping (4X16)

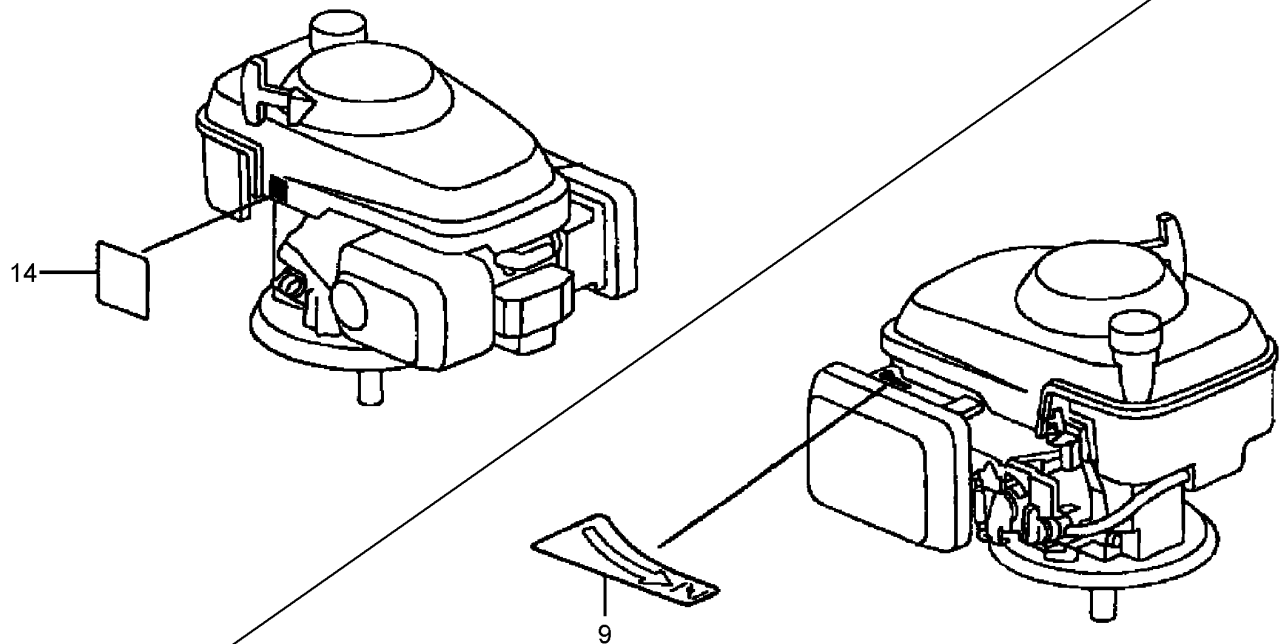 

Label Assembly

Honda GCV160A STL1

Ref	Part No.	Qty.	Description				
③9	87528-Z0L-V20	1	Mark-Indication, Choke				
③14	87594-VG3-010	1	Mark-Caution, Oil				

Attachments and Accessories

For 10672 - Insight Gold Lawn Mower

Product Name	Model/Part
Lawn Boy Paint	110-8800
Height-of-Cut Kit	110-8801
Loose Parts Kit	112-8770
Replacement Bag	89815
Rear Bag Kit	89913
21 Inch Blade	89914
Cruise Control Kit	89919
Air Filter	89928
Spark Plug	89947
Cup Holder	89951

NOTES

NOTES

