



Workman[®] 2110 Utility Vehicle

Model No. 07277 - 270000301 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Hood and Fender Assembly	 3	Cylinder Assembly Briggs and Stratton 303440-1326-E1	 27
Pedal Assembly	 4	Crankcase Assembly Briggs and Stratton 303440-1326-E1	 28
Shifter Assembly	 5	Crankshaft Assembly Briggs and Stratton 303440-1326-E1	 29
Frame Assembly	 6	Cylinder Head Assembly Briggs and Stratton 303440-1326-E1	 30
Seat Base Assembly	 7	Oil Filter, Tube and Pump Assembly Briggs and Stratton 303440-1326-E1	 31
Front Tire and Steering Assembly	 8	Carburetor Assembly Briggs and Stratton 303440-1326-E1	 32
Engine and Clutch Assembly	 9	Intake Manifold Assembly Briggs and Stratton 303440-1326-E1	 33
Drive Clutch Assembly No. 108-7013	 11	Governor Assembly Briggs and Stratton 303440-1326-E1	 34
Starter Generator Assembly No. 99-7108	 12	Flywheel Assembly Briggs and Stratton 303440-1326-E1	 35
Rear Tire and Transaxle Assembly	 13	Blower Housing Assembly Briggs and Stratton 303440-1326-E1	 36
Transaxle Assembly No. 107-0360	 14	Gasket Assembly Briggs and Stratton 303440-1326-E1	 37
Driven Clutch Assembly No. 99-7104	 16	Carburetor Overhaul Kit Assembly Briggs and Stratton 303440-1326-E1	 38
Left Hand Brake Assembly No. 104-6807	 17	Attachments and Accessories List	 39
Right Hand Brake Assembly No. 104-6806	 18		
Drivetrain Mounting, Battery and Air Cleaner Assembly	 19		
Air Cleaner Assembly No. 99-7120	 20		
Upper Steering Assembly	 21		
Steering Gearbox Assembly No. 99-7660	 22		
Box and Tailgate Installation Assembly	 23		
Box and Tailgate Assembly	 24		
Hydraulic Brake Assembly	 25		
Master Cylinder Assembly No. 104-6782	 26		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|---|---|
| ① Not illustrated | ② Not serviced separately |
| ③ Included in Engine Gasket Set-Ref. 358. | ④ Included in Valve Gasket Set-Ref. 1095. |
| ⑤ Included in Carburetor Overhaul Kit-Ref. 121. | ⑥ Obtain from your local Briggs & Stratton dealer |

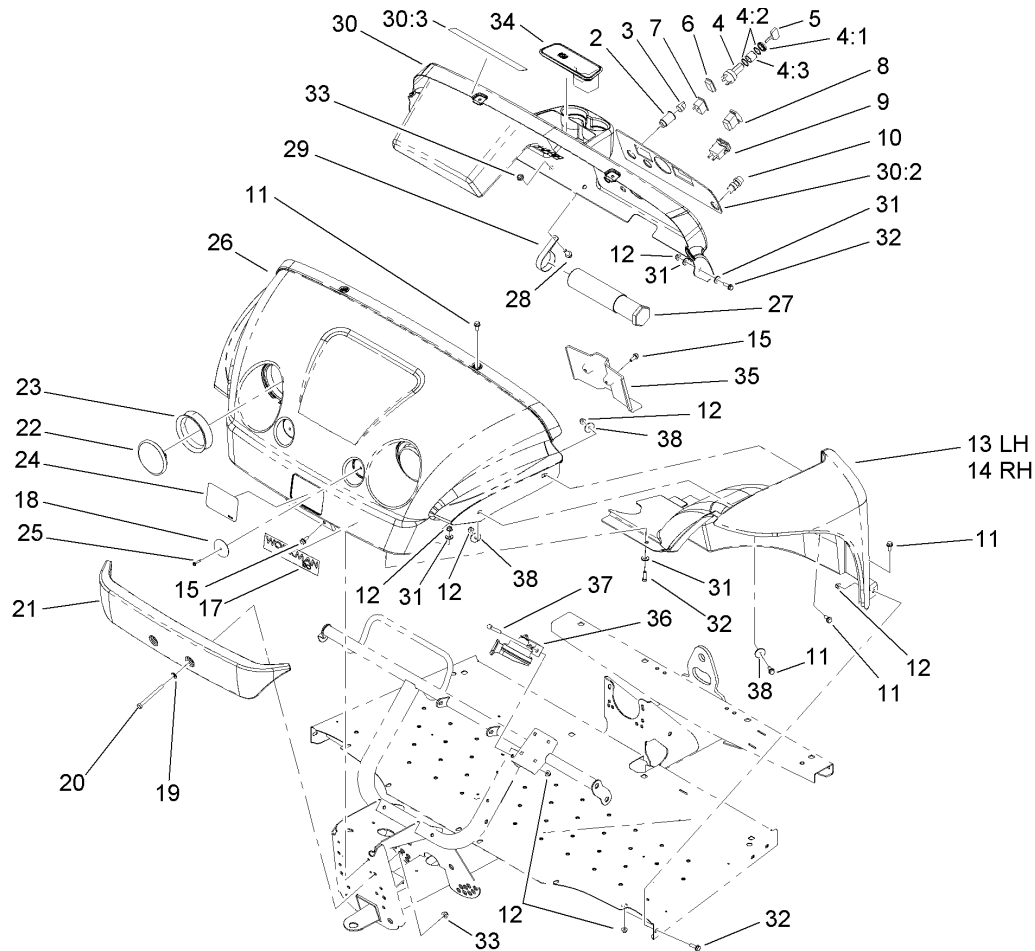

Hood and Fender Assembly


Ref	Part No.	Qty.	Description
2	99-7411	1	Point-Power
3	99-7416	1	Cap
4	104-6929	1	Switch-Ignition
4:1	104-7042	1	Nut-Switch, Plastic
4:2	104-7019	2	Washer-Lock, Internal
4:3	104-7021	1	Spacer-Switch
5	99-7418	2	Key-Ignition
6	99-7420	1	Plug-Hole
7	99-7410	1	Indicator-Light, Low-Oil Pressure
8	95-8999	1	Switch
9	94-4208	1	Hourmeter
10	18-2830	1	Button-Horn
11	3234-5	14	Screw-HHF
12	104-8300	15	Nut-Flange, NI
13	104-7076	1	LH Fender ASM
14	104-7077	1	RH Fender ASM
15	104-7206	4	Screw-HHF
17	104-7267	1	Decal
18	99-7312	2	Reflector
19	3256-24	2	Washer-Flat
20	323-42	2	Screw-HH
21	99-7733	1	Bumper-Plastic
22	99-7310	2	Headlight
23	99-7311	2	Mount-Headlight

Ref	Part No.	Qty.	Description
24	99-7339	1	Decal
25	32144-89	2	Screw-Forming, Thread
26	104-7003	1	Hood
27	74-0720	1	Tube-Manual
28	3234-11	2	Screw-HHF
29	2412-133	2	R-Clamp
30	107-0700	1	Dash ASM
30:2	107-0699	1	Decal-Panel, Control
30:3	104-6581	1	Decal-Danger
31	3256-3	8	Washer-Flat
32	3234-17	4	Screw-HHF
33	104-8301	4	Nut-Flange, NI
34	104-6930	1	Plug-Rubber
35	104-7075	1	Cover-Channel
36	116749	1	Horn
37	322-11	1	Screw-HH
38	3256-57	6	Washer-Flat

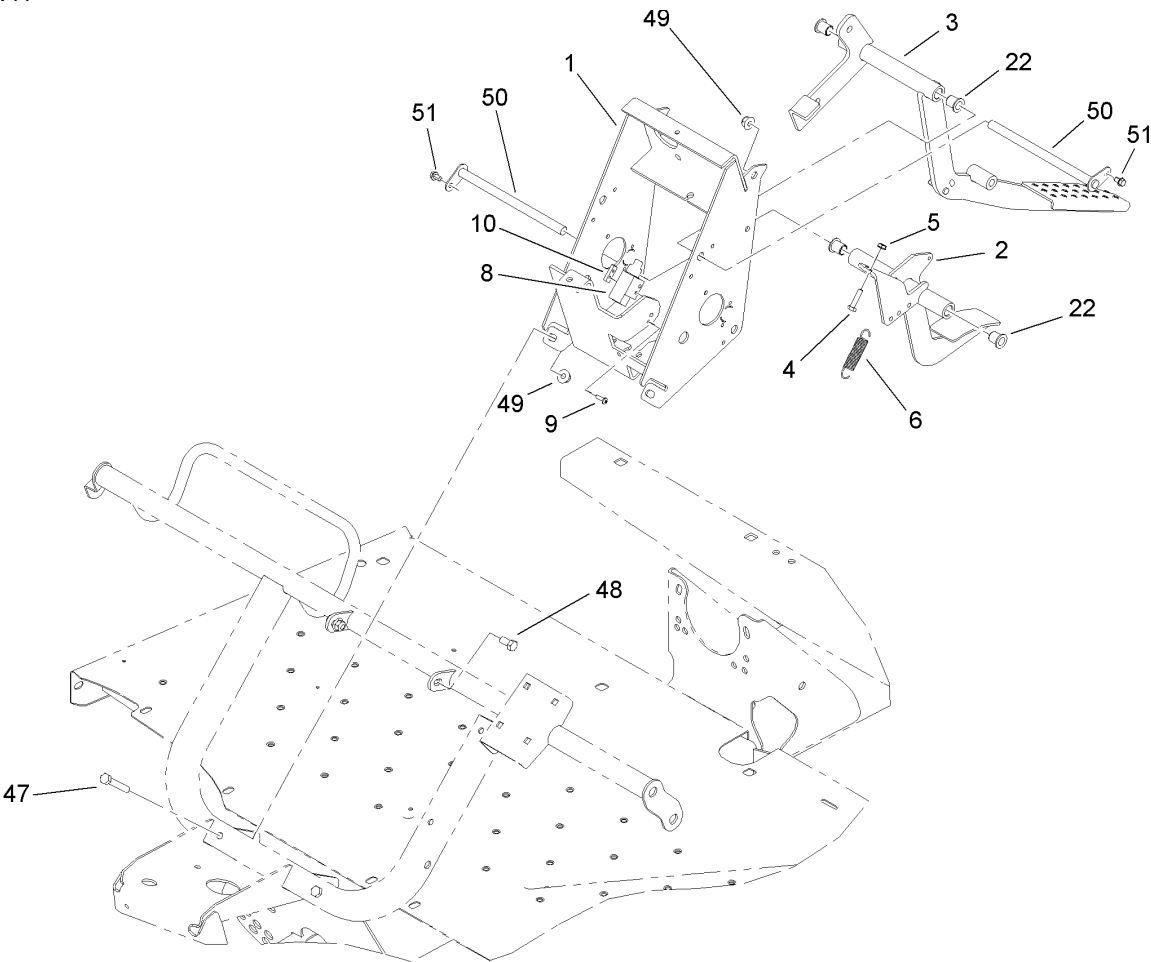 


Pedal Assembly

Ref	Part No.	Qty.	Description				
1	112-3048-03	1	Pedal Support Frame ASM				
2	110-2607-03	1	Pedal-Throttle				
3	104-7170-03	1	Pedal-Brake				
4	321-7	2	Screw-HH				
5	32149-2	2	Nut-Keps				
6	104-6415	1	Spring-Return, Pedal				
8	99-7407	1	Switch				
9	104-7221	2	Screw-PPH				
10	1-633181	1	Plate-Tapped				
22	256-155	4	Bushing-Flange				
47	323-11	2	Screw-HH				
48	323-4	2	Screw-HH				
49	104-8301	4	Nut-Flange, NI				
50	104-7164	2	Pivot-Pedal				
51	12-3270	2	Screw				

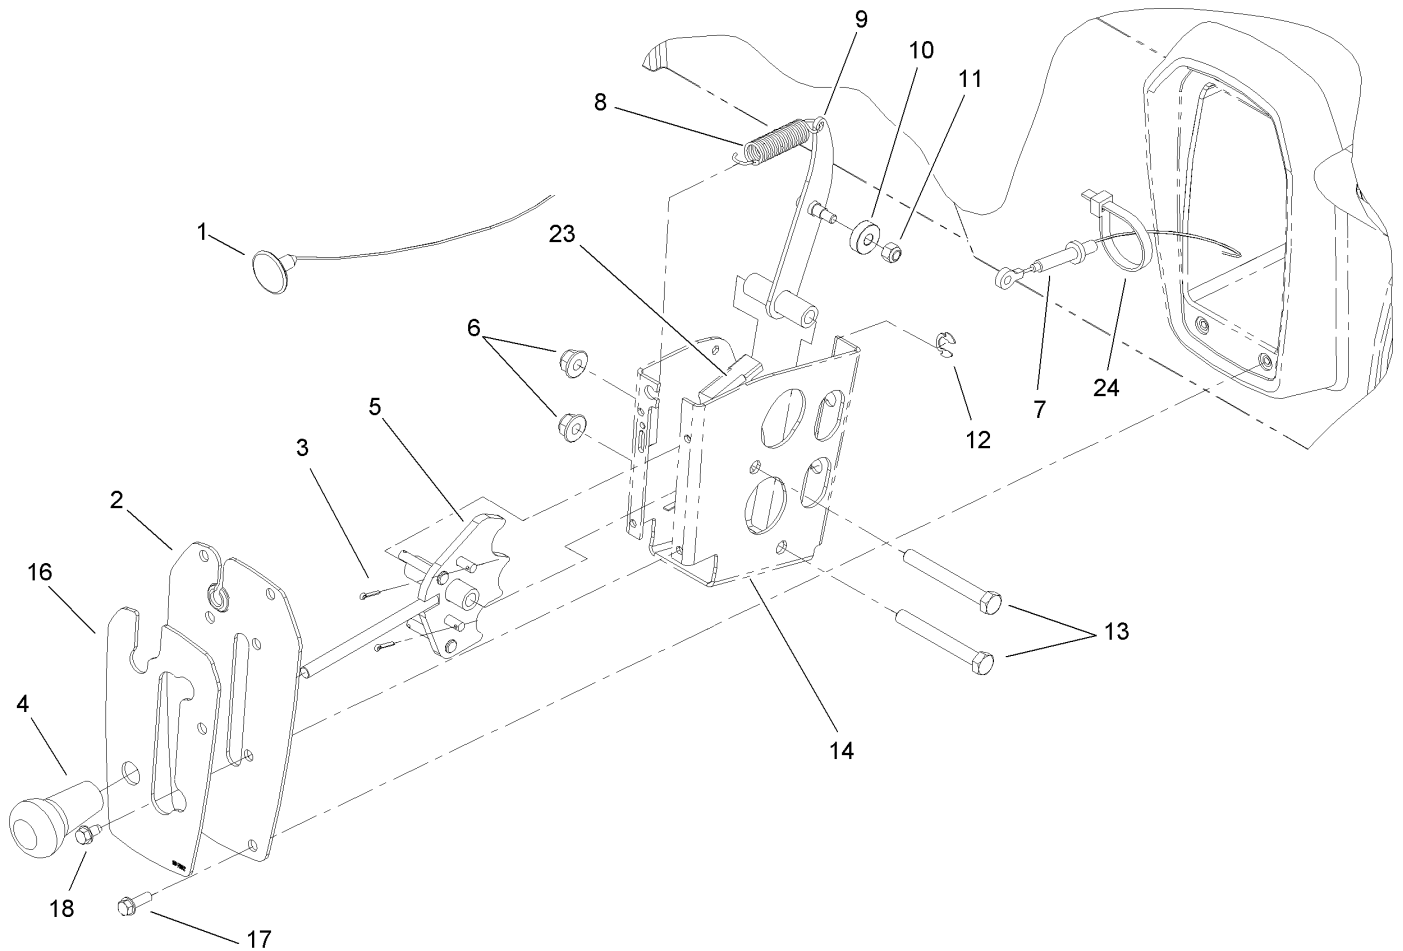 

Shifter Assembly


Ref	Part No.	Qty.	Description				
1	99-7111	1	Cable-Choke				
2	99-7887-03	1	Plate-Shifter				
3	3272-5	2	Pin-Cotter				
4	99-7981	1	Knob-Grip, Soft				
5	108-3139	1	Lever-Shift				
6	104-8301	2	Nut-Flange, NI				
7	104-6896	2	Cable-Shift				
8	104-6415	1	Spring-Return, Pedal				
9	108-3138	1	Arm-Detent				
10	251-307	1	Bearing-Ball				
11	3296-42	1	Nut-Lock, NI				
12	32151-101	2	E-Ring				
13	323-14	2	Screw-HH				
14	108-3141-03	1	Bracket-Shift				
16	99-7952	1	Decal-Shifter				
17	32105-15	4	Screw				
18	12-3270	4	Screw				
23	99-7408	1	Switch-Reverse				
24	3290-378	1	Tie-Cable				

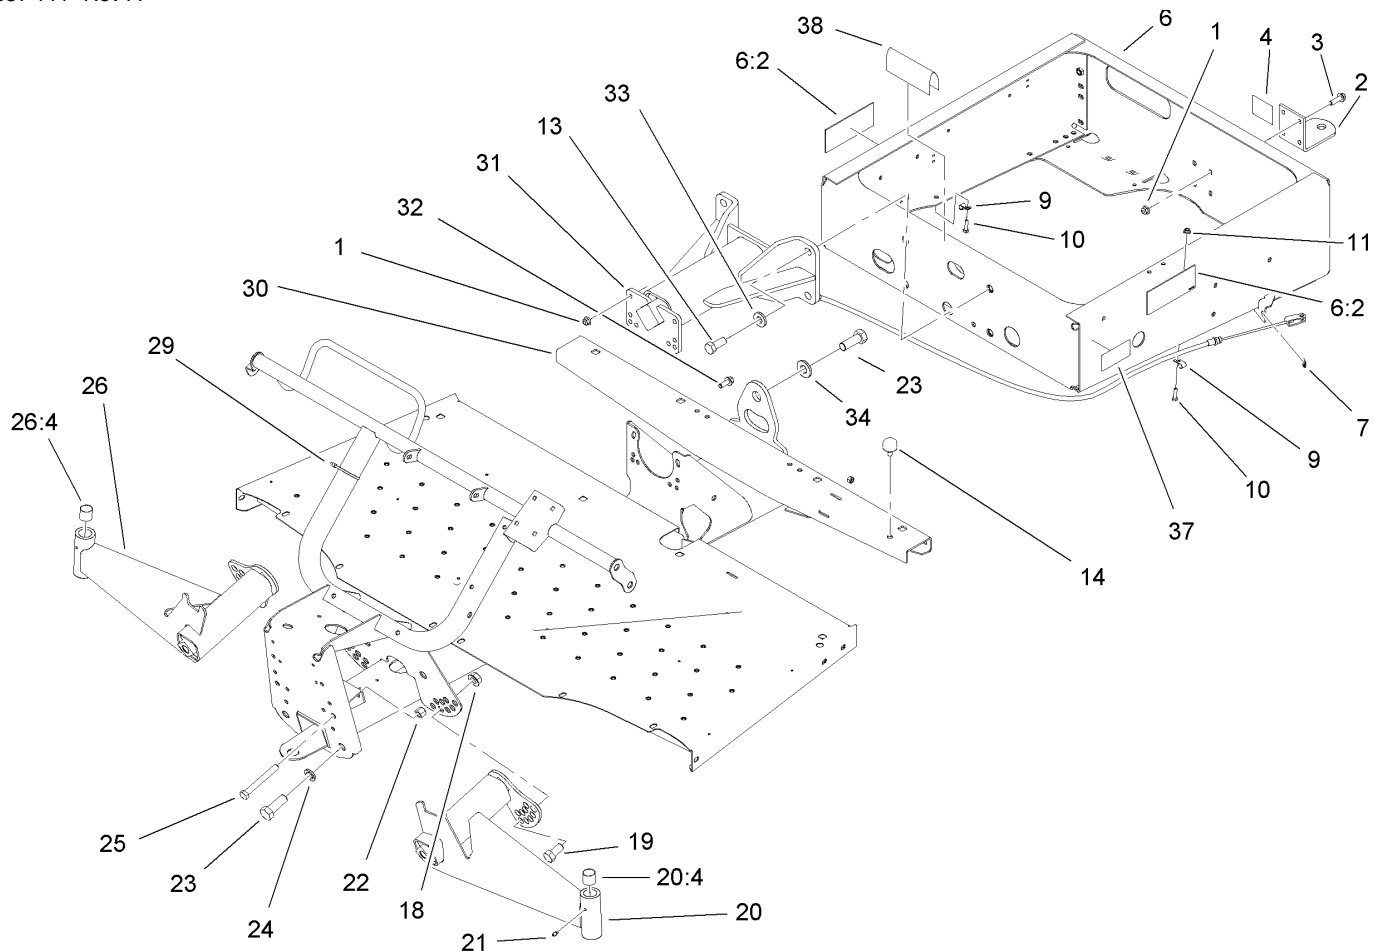 

Frame Assembly

Ref	Part No.	Qty.	Description
1	104-8301	8	Nut-Flange, NI
2	99-7654-03	1	Hitch-Duty, Light
3	3234-24	4	Screw-HHF
4	99-7350	1	Decal-Rating, Hitch (Light Duty)
6	108-3137	1	Rear Frame ASM
6:2	99-7345	2	Decal-Warning
7	32120-47	2	Ring-Retaining, External
9	2412-89	2	Clamp
10	321-6	2	Screw-HH
11	32128-33	2	Nut-HF
13	327-4	4	Screw-HH
14	87-2440	1	Bumper-Rubber
18	32128-54	2	Nut-HF
19	3214-2	2	Screw-HH
20	99-7685	1	LH A-Arm ASM
20:4	3-0348	2	Bushing
21	302-5	2	Fitting-Grease
22	3296-23	2	Nut-Lock, NI
23	328-24	5	Screw-HH
24	3254-7	4	Washer-Lock, Int
25	325-17	2	Screw-HH
26	99-7684	1	RH A-Arm ASM
26:4	3-0348	2	Bushing
29	3290-379	12	Tie-Cable


Ref	Part No.	Qty.	Description
30	104-7197-03	1	Front Frame ASM
31	99-7700	1	Pivot Yoke ASM
32	3234-11	4	Screw-HHF
33	99-7667	4	Washer-Flat
34	87-3060	1	Washer-Hardened
37	104-6591	1	Decal-Capacity
38	95-5686	1	Trim

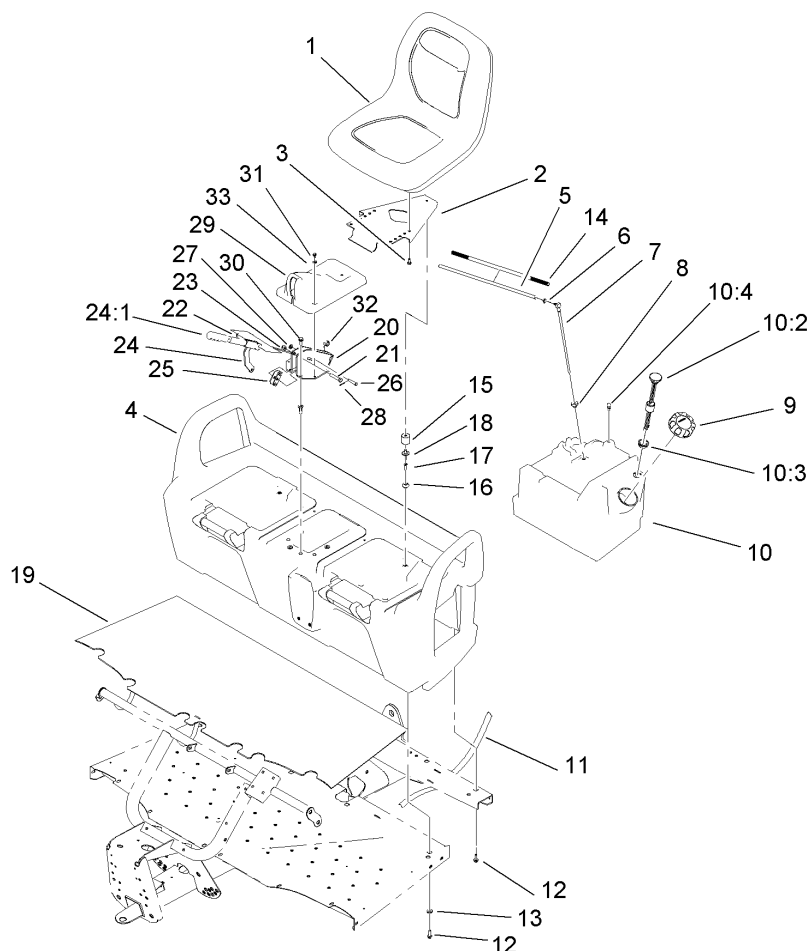 

Seat Base Assembly

Ref	Part No.	Qty.	Description
1	110-2645	2	Seat ASM
2	99-7829	2	Bracket-Seat
3	33114-016	8	Screw-HH
4	104-6847	1	Seat Base ASM
5	108-4582	1	Hose-Fuel
6	2412-98	1	Clamp
7	99-7264	1	Pipe-Stand
8	46-6560	1	Bushing
9	95-4192	1	Unleaded Gas Cap ASM
10	99-7323	1	Fuel Tank ASM
10:2	99-7262	1	Gauge-Fuel
10:3	95-8972	1	Grommet
10:4	99-7267	1	Vent-Air
11	3339-175	1	Strapping-Web, 48 Inch
12	3234-17	8	Screw-HHF
13	88-7200	8	Washer-Flat
14	99-7129	1	Conduit-Line, Fuel
15	99-7830	2	Rubber Receptical ASM
16	99-7833	2	Post-Holding
17	32108-5	2	Screw-FH
18	3290-412	2	Rivet
19	104-6590	1	Mat-Floor
20	104-6844-03	1	Support-Brake, Park
21	323-10	1	Screw-HH


Ref	Part No.	Qty.	Description
22	3290-477	1	Washer-Curved
23	3296-39	1	Nut-Lock, NI
24	104-6842	1	Lever-Brake, Park
24:1	106-7972	1	Grip-Handle
25	87-3480	1	Bracket-Equalizer, Cable
26	94-3829	1	Pin-Clevis
27	3256-23	1	Washer-Flat
28	3272-6	1	Pin-Cotter
29	104-7014	1	Cover-Brake, Parking
30	3234-17	4	Screw-HHF
31	12-3270	2	Screw
32	32120-47	2	Ring-Retaining, External
33	3256-1	2	Washer-Flat

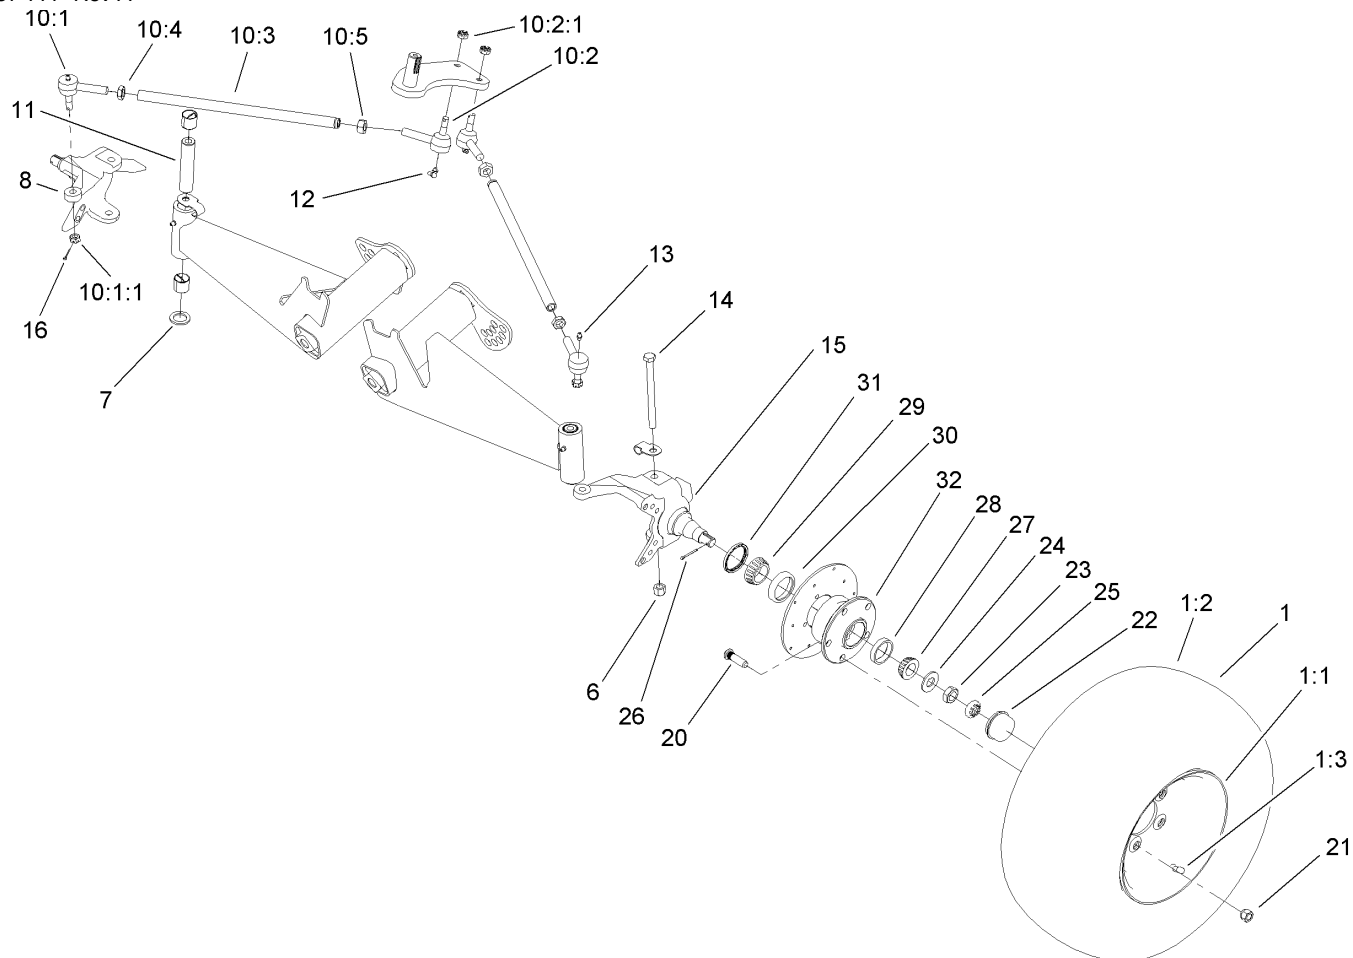 

Front Tire and Steering Assembly

Ref	Part No.	Qty.	Description
1	104-7290	2	Tire And Wheel ASM
1:1	104-7288	1	Wheel
1:2	104-7289	1	Tire (22 X 9.50-10) 4-Ply
1:3	232-27	1	Stem-Valve
6	3296-23	2	Nut-Lock, NI
7	256-115	2	Washer-Thrust
8	104-6877	1	Spindle-Disc, RH
10		2	Rod-Tie
10:1	112772-03	1	Joint-Ball, RH
10:1:1	915031	1	Nut
10:2	112771-03	1	Joint-Ball, LH
10:2:1	915031	1	Nut
10:3	99-7600-03	1	Rod-Tie
10:4	3220-11	1	Nut-Jam
10:5	3218-21	1	Nut-Jam
11	99-7499	2	Sleeve-Kingpin
12	302-60	2	Fitting-Grease, 90 DEG
13	302-5	2	Fitting-Grease
14	325-20	2	Screw-HH
15	104-6876	1	Spindle-Disc, LH
16	3272-7	4	Pin-Cotter
20	10-6830	10	Stud-Type, Drive
21	242-50	10	Nut-Lug
22	241-119	2	Cap-Dust


Ref	Part No.	Qty.	Description
23	3220-7	2	Nut-Jam
24	93-0309	2	Washer-Tab
25	93-0307	2	Nut-Lock, Retainer
26	3272-12	2	Pin-Cotter
27	254-94	2	Bearing-Cone, Tapered
28	254-72	2	Bearing-Cup, Tapered
29	254-106	2	Cone-Bearing, Tapered
30	254-107	2	Cup-Bearing, Tapered
31	108-7019	2	Seal-Shaft
32	104-6809	2	Hub

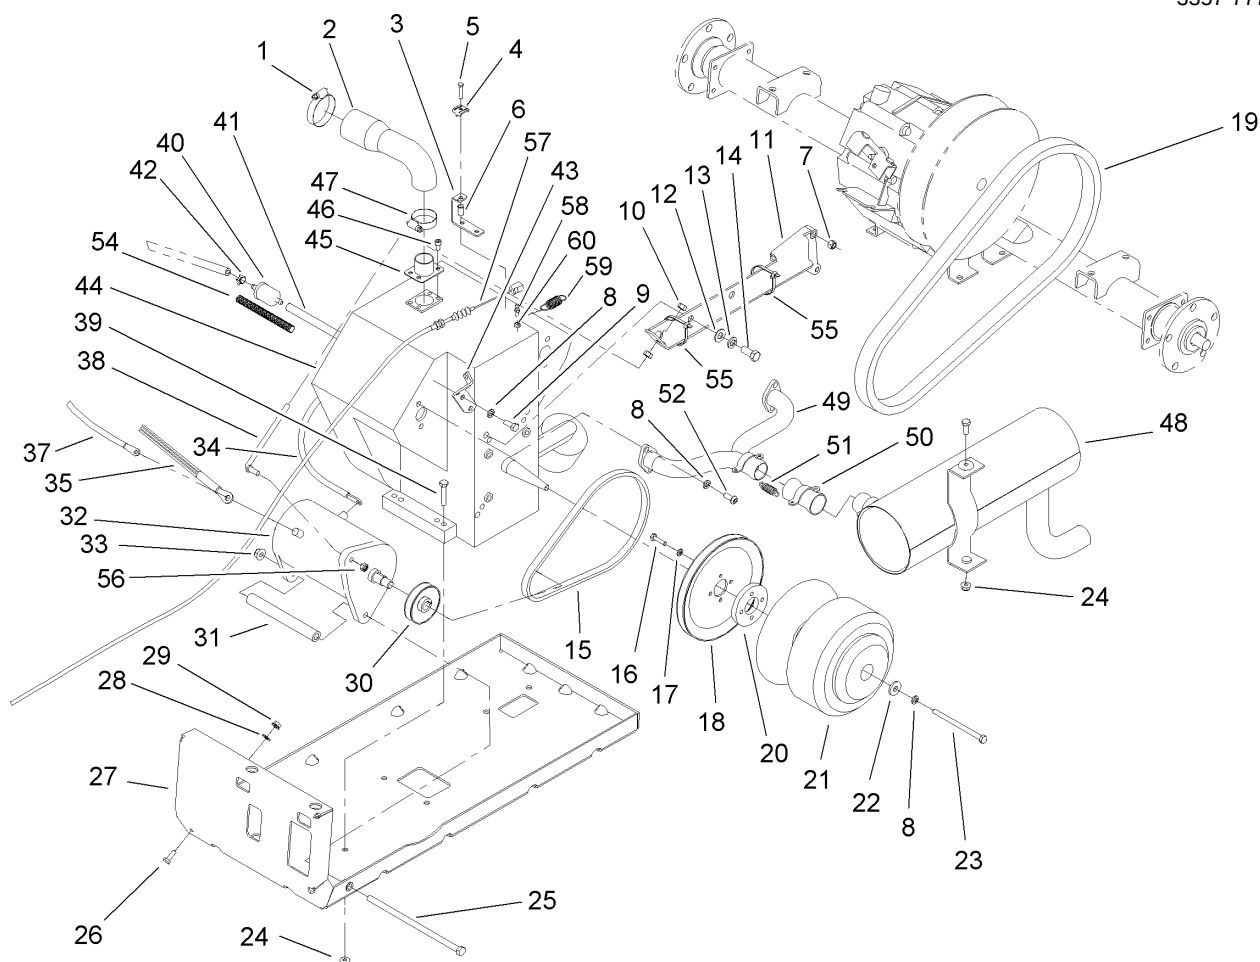 

Engine and Clutch Assembly


Ref	Part No.	Qty.	Description
1	2412-130	1	Clamp-Hose
2	99-7106	1	Hose-Intake
3	107-0319	1	Bracket-Cable
4	81-1690	1	Clamp-Cable
5	3290-432	1	Screw-HH
6	32148-14	1	Insert-Threaded
7	33024-00	2	Nut-Lock
8	3253-4	6	Washer-Lock
9	66-3160	2	Screw-Cap
10	3217-6	2	Nut-Hex
11	104-6631-03	1	Torque Arm ASM
12	3256-25	2	Washer-Flat
13	3253-6	2	Washer-Lock
14	324-4	2	Screw-HH
15	99-7133	1	V-Belt-Starter
16	321-6	4	Screw-HH
17	3253-3	4	Washer-Lock
18	99-7131	1	Pulley-Engine
19	99-7144	1	Belt-Drive
20	99-7064	1	Spacer-Starter
21	108-7013	1	Clutch-Drive
22	5-0838	1	Washer
23	99-7201	1	Screw-HH
24	104-8300	5	Nut-Flange, NI

Ref	Part No.	Qty.	Description
25	99-7203	1	Screw
26	321-4	1	Screw-HH
27	104-6433-03	1	Mount-Engine
28	3255-8	1	Washer-Lock
29	32128-32	1	Nut-HHF
30	99-7130	1	Pulley-Starter
31	99-7053	1	Pivot-Starter
32	99-7108	1	Generator-Starter
33	104-8301	2	Nut-Flange, NI
34	99-7403	1	Cable-Negative
35	99-7437	1	Harness-Wire, Engine
37	104-6926	1	Cable-Positive
38	104-6629	1	Rod-Starter
39	322-8	4	Screw-HH
40	94-2690	1	Filter-Fuel
41	109-0678	1	Hose-Fuel
42	2412-98	3	Clamp
43	104-7152	1	Bracket-Cable, Throttle
44	112-3133	1	Engine-Briggs & Stratton, 303440-1326-E1
45	99-7083	1	Bracket-Intake
46	99-7202	4	Screw
47	2412-3	1	Clamp-Hose
48	104-6475	1	Muffler-Engine

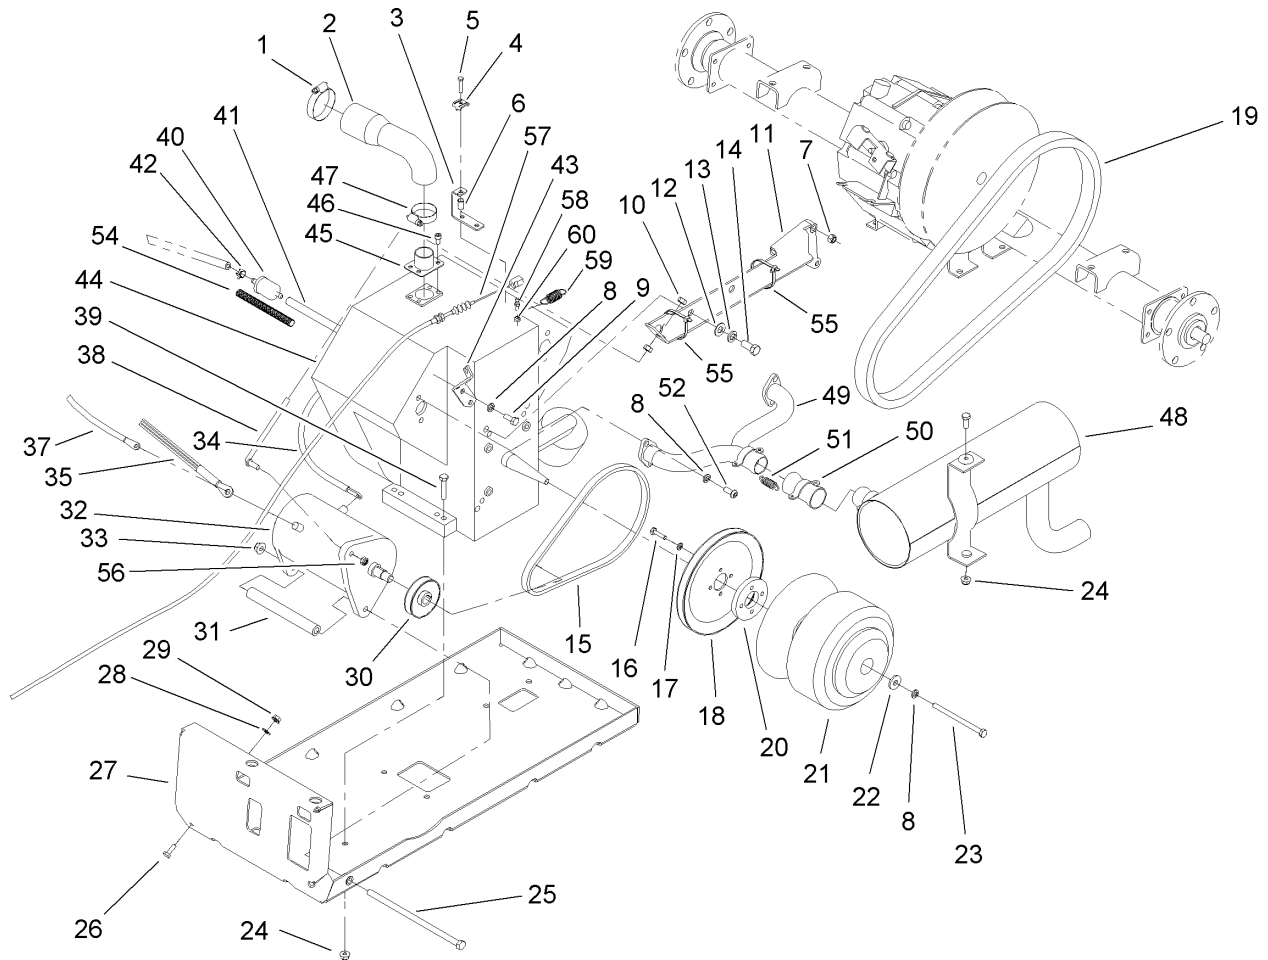 


Engine and Clutch Assembly (continued)

Ref	Part No.	Qty.	Description				
49	104-6476	1	Manifold-Engine				
50	104-6477	1	Coupler-Exhaust				
51	104-6478	4	Spring-Coupler, Exhaust				
52	3274-96	4	Screw				
54	99-7377	1	Conduit-Line, Fuel				
55	3290-379	2	Tie-Cable				
56	3296-20	1	Nut-Lock, NI				
57	108-7017	1	Cable-Accelerator				
58	99-7847	1	Ball-Stud				
59	71-5470	1	Spring-Brake				
60	110-2619	1	Keeper-Spring				

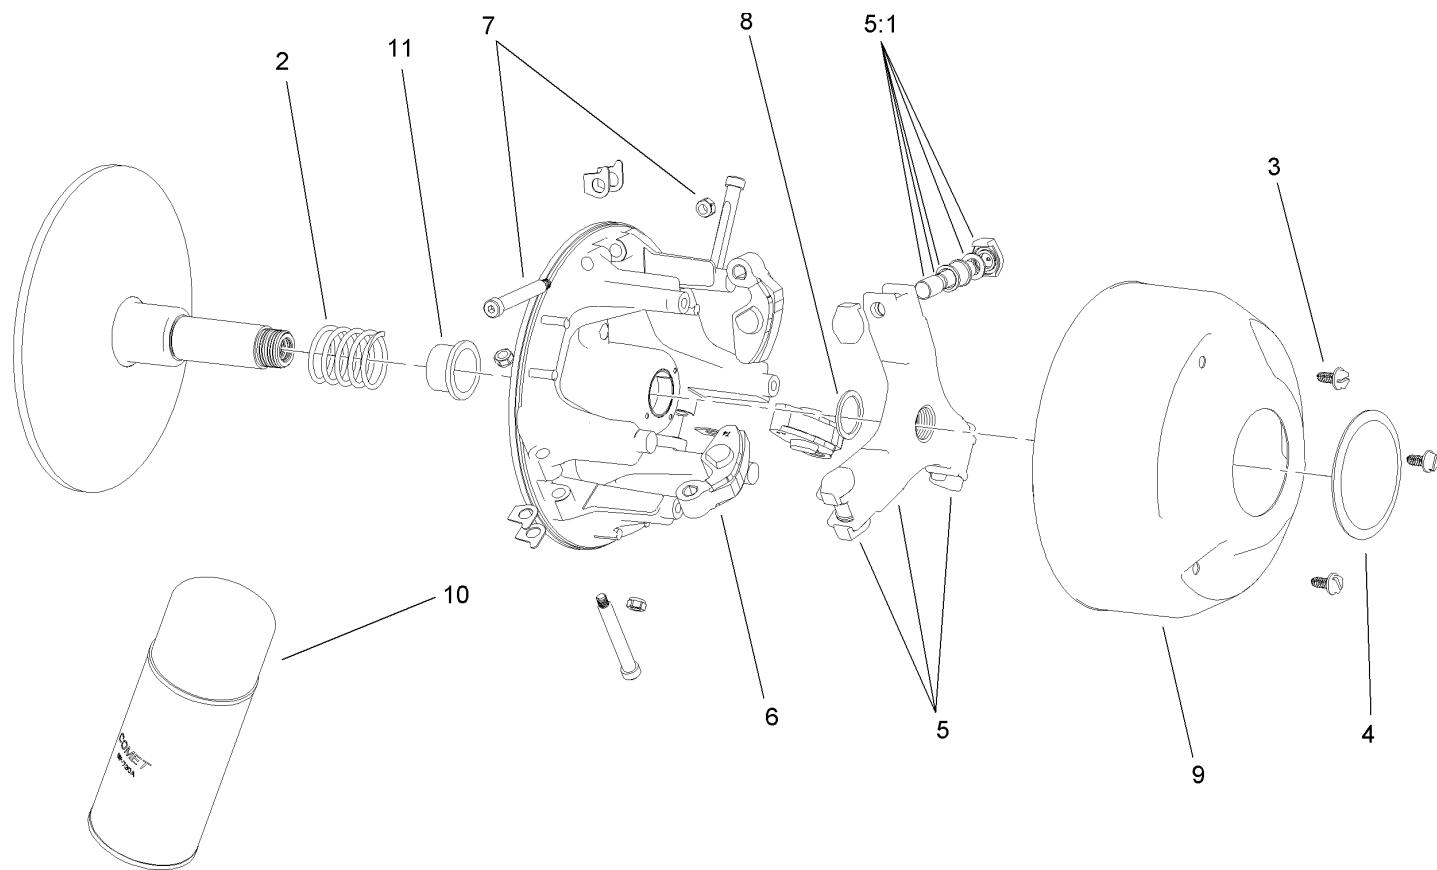 


Drive Clutch Assembly No. 108-7013

Ref	Part No.	Qty.	Description				
2	104-1686	1	Spring				
3	3234-26	3	Screw				
4	104-1690	1	Cap				
5	108-3047	1	Spider ASM				
5:1	110-2642	1	Spider Replacement Parts Kit				
6	108-7008	1	Arm-Cam (Set Of 3)				
7	104-4256	1	Pivot Bolt And Nut Kit				
8	104-1687	1	Spacer				
9	104-1691	1	Cover				
10	104-7011	1	Lubricant-Dry				
11	108-3048	1	Spacer-Clutch				

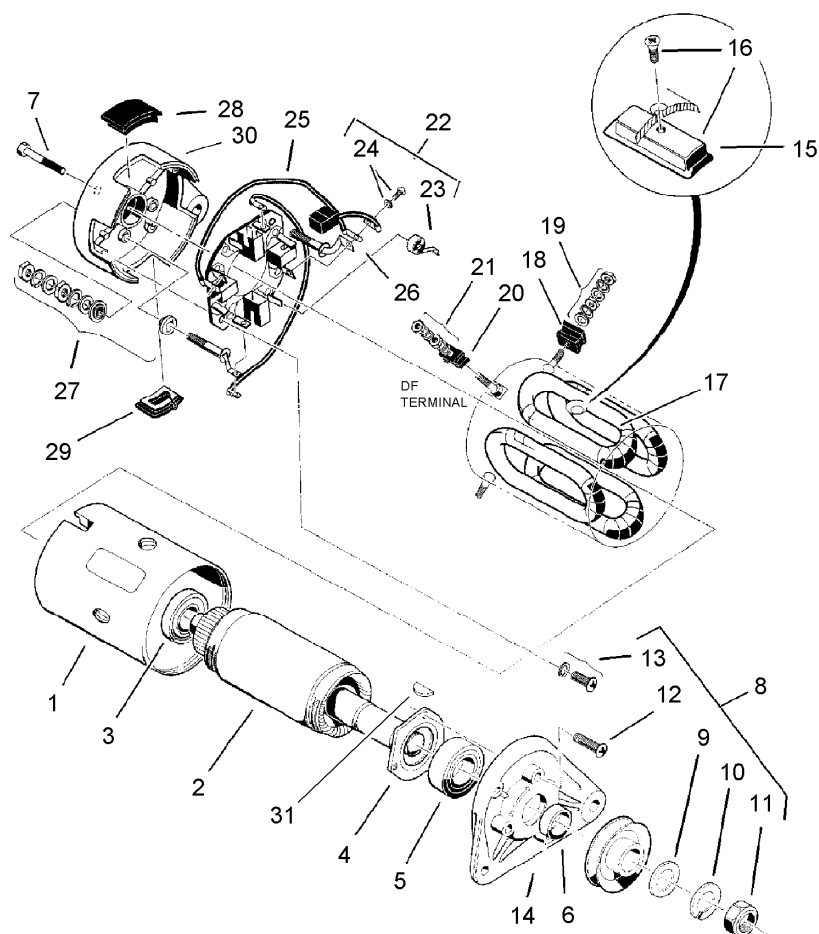 

Starter Generator Assembly No. 99-7108

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
②1		1	Yoke	②25		2	Brush Connector ASM
2	104-1210	1	Armature Kit	②26		2	A Terminal ASM
3	104-1211	1	Bearing-Ball, Rear	27	104-1228	2	Screw And Mold ASM
4	104-1212	1	Retainer	②28		1	Cover Set
5	104-1213	1	Bearing-Ball, Front	②29		1	Cover B
6	104-1214	1	Spacer	②30		1	Bracket-Rear
7	104-1215	2	Bolt	31	3257-3	1	Key-Woodruff
②8		1	Nut & Screw Set				
9	104-1216	1	Washer-Plain				
10	104-1217	1	Washer-Spring				
11	104-1218	1	Nut-Hex				
②12		3	Screw-Flange				
13	104-1219	2	Set-Screw				
14	104-1220	1	Bracket-Front				
②15		4	Pole				
16	104-1221	1	Set-Pole And Screw				
17	104-1222	1	Field Stator Coil ASM				
②18		2	F Mold				
19	104-1223	2	*obs* Nut & Washer Set				
②20		1	D F Mold				
21	104-1224	1	Nut & Washer Set				
22	104-1225	1	Brush Holder Kit				
23	104-1226	4	Spring-Brush				
24	104-1227	1	Brush And Screw Set				

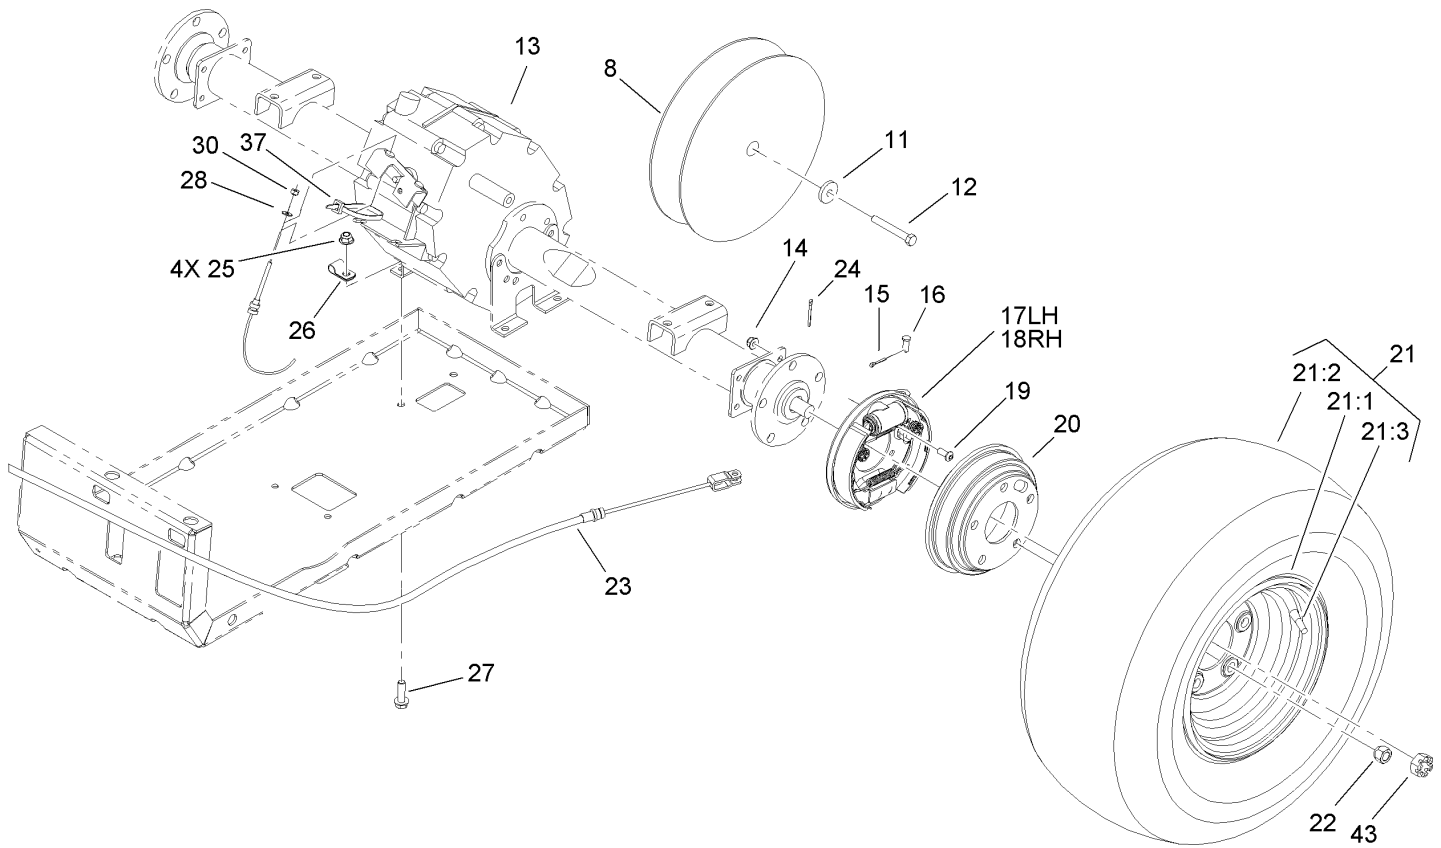 


Rear Tire and Transaxle Assembly

Ref	Part No.	Qty.	Description
8	99-7104	1	Clutch-Driven
11	104-6563	1	Washer-Stepped
12	104-6564	1	Screw-HH
13	107-0360	1	Transaxle
14	104-8300	8	Nut-Flange, NI
15	3272-10	2	Pin-Cotter
16	283-62	2	Pin-Clevis
17	104-6807	1	LH Brake ASM
18	104-6806	1	RH Brake ASM
19	3274-55	8	Screw-HSBH
20	104-6500	2	Drum-Brake
21	104-7282	2	Tire And Wheel ASM
21:1	104-7279	1	Wheel
21:2	104-7281	1	Tire (24 X 12.00-10)2-Ply Turf-Trac R/S
21:3	232-27	1	Stem-Valve
22	242-50	10	Nut-Lug
23	104-6846	2	Cable-Brake, Park
24	3272-42	2	Pin-Cotter
25	104-8301	4	Nut-Flange, NI
26	2412-10	1	R-Clamp
27	3234-24	4	Screw-HHF
28	3256-49	2	Washer-Flat
30	3296-2	2	Nut-Lock

Ref	Part No.	Qty.	Description
37	3290-378	1	Tie-Cable
43	104-1656	2	Nut-Castle

 
Transaxle Assembly No. 107-0360

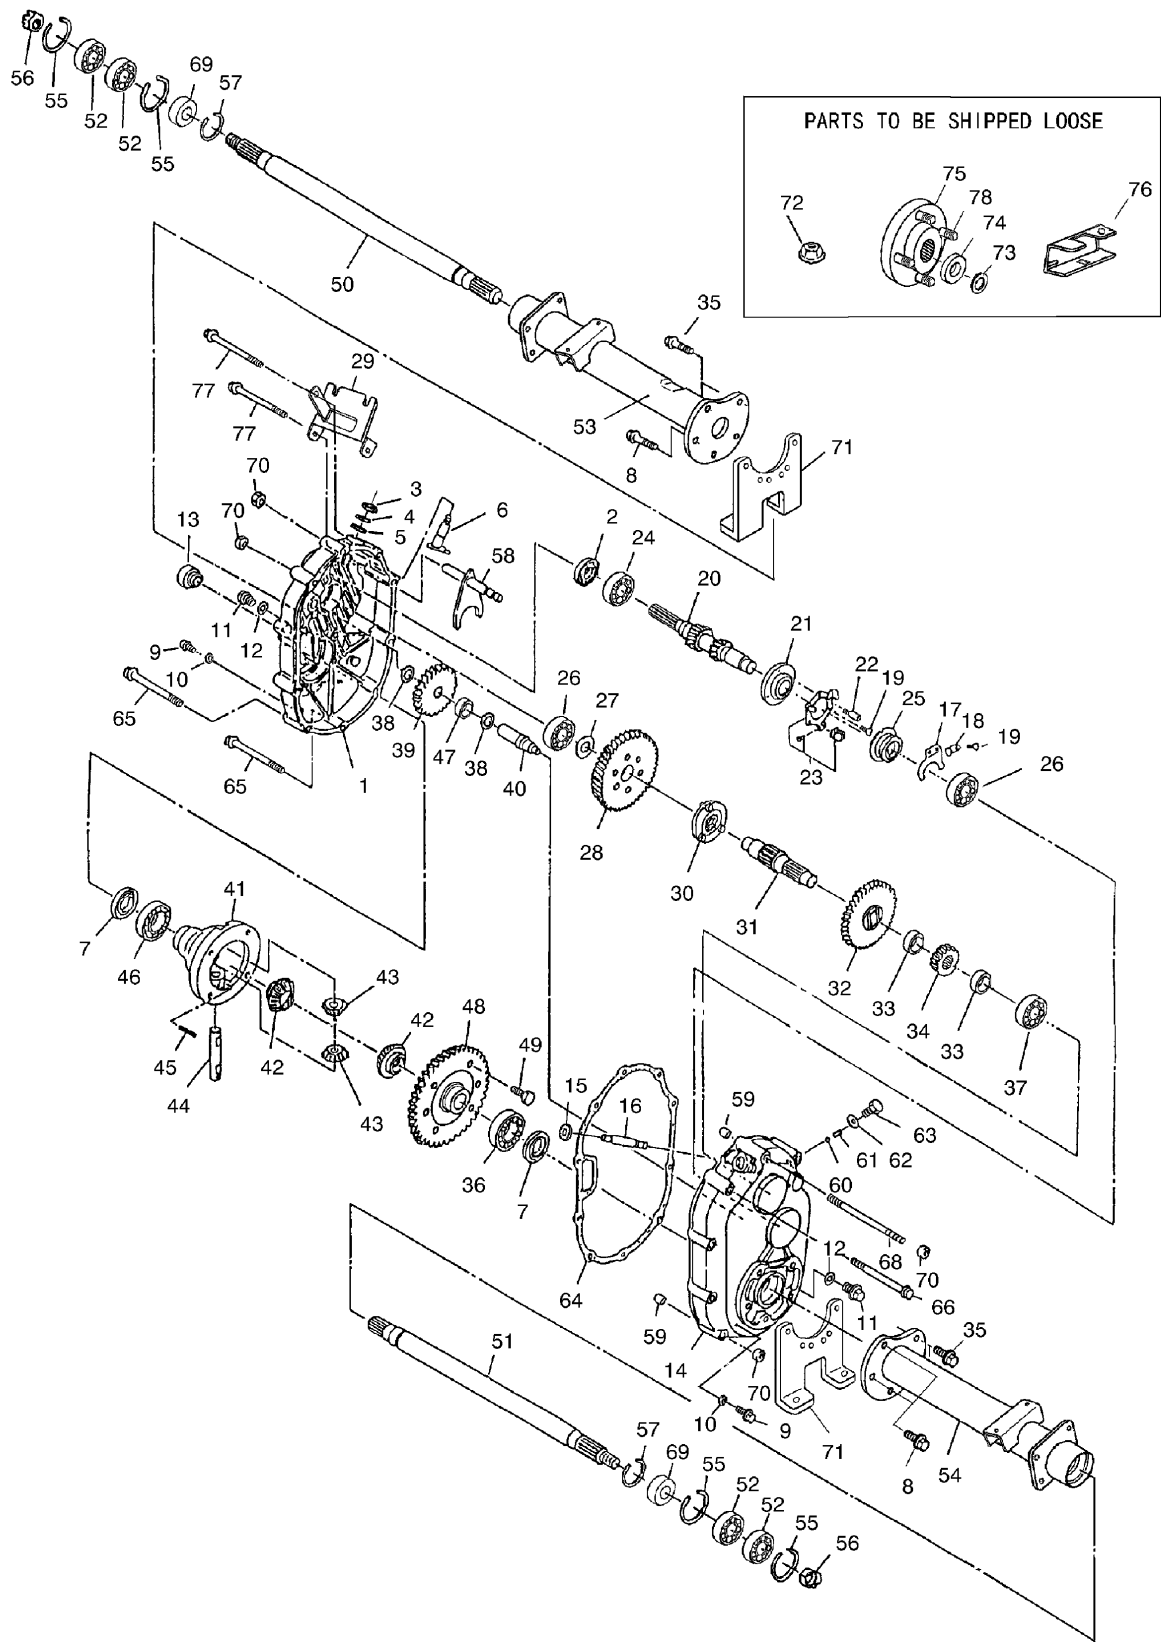

Transaxle Assembly No. 107-0360


Ref	Part No.	Qty.	Description
1	104-1601	1	Case-LH, Complete
2	104-1602	1	Seal-Oil
3	104-1603	1	Seal-Oil
4	104-1604	1	Ring-Snap
5	104-1605	1	Spacer
6	104-1606	1	Shaft-Selector
7	104-1607	2	Seal-Oil
8	104-1608	4	Bolt-Flange
9	104-1609	2	Plug-Check, Oil
10	104-1610	2	Gasket
11	104-1611	2	Plug-Drain, Oil
12	104-1612	2	Gasket
13	104-1613	1	Plug-Filler, Oil
14	104-1614	1	Case-Complete, RH
15	104-1615	1	Seal-Oil
16	104-1616	1	Shaft-Governor
17	104-1617	1	Fork-Governor
18	104-1618	1	Stopper
19	104-1619	4	Screw And Washer ASM
20	104-7002	1	Shaft-Input, Complete
21	104-1621	1	Base-Governor
22	104-1622	1	Pin-Lock
23	104-1623	1	Unit-Plate, Governor
24	104-1624	1	Bearing-Ball
25	104-1625	1	Sleeve-Governor
26	104-1626	2	Bearing-Ball
27	104-1627	1	Spacer
28	104-1628	1	Gear
29	104-1629	1	Bracket-Wire, Change
30	104-1630	1	Clutch-Pin
31	104-1631	1	Shaft-Center
32	104-1632	1	Gear
33	104-1633	2	Collar
34	104-1634	1	Gear
35	104-1635	6	Bolt-Flange
36	104-1636	1	Bearing-Ball
37	104-1637	1	Bearing-Ball
38	104-1638	2	Spacer
39	104-1639	1	Gear
40	104-1640	1	Shaft-Counter
41	104-1641	1	Case-Differential
42	104-1642	2	Gear-Side, Differential
43	104-1643	2	Pinion-Differential
44	104-1644	1	Shaft-Differential
45	104-1645	1	Pin
46	104-1646	1	Bearing-Ball
47	104-1647	1	Bearing-Needle
48	104-1648	1	Gear
49	104-1649	6	Bolt
50	104-1650	1	Shaft-Axle, LH
51	104-1651	1	Shaft-Axle, RH
52	104-1652	4	Bearing-Ball

Ref	Part No.	Qty.	Description
53	104-1653	1	Case-Axle, LH
54	104-1654	1	Case-Axle, RH
55	104-1655	4	Ring-Snap
56	104-1656	2	Nut-Castle
60	104-1660	1	Ball-Steel
57	104-1657	2	Ring-Snap
58	104-6870	1	Shaft-Shift, Complete
59	104-1659	2	Knock-Pipe
60	104-1660	1	Ball-Steel
61	104-1661	1	Spring
62	104-1662	1	Gasket
63	104-1663	1	Bolt
64	104-1664	1	Gasket
65	104-1665	6	Bolt-Flange
66	104-1666	1	Bolt-Flange
68	104-6866	1	Bolt
69	104-6867	2	Collar
70	33004-00	11	Nut-HF
71	104-1671	2	Bracket-Axle
72	104-1672	1	Nut-Lock
73	104-1673	2	Washer-Spring
74	104-1674	2	Washer
75	104-1675	2	Hub
76	104-6860	1	Lever-Select
77	104-6869	2	Bolt-Flange
78	104-8649	10	Stud

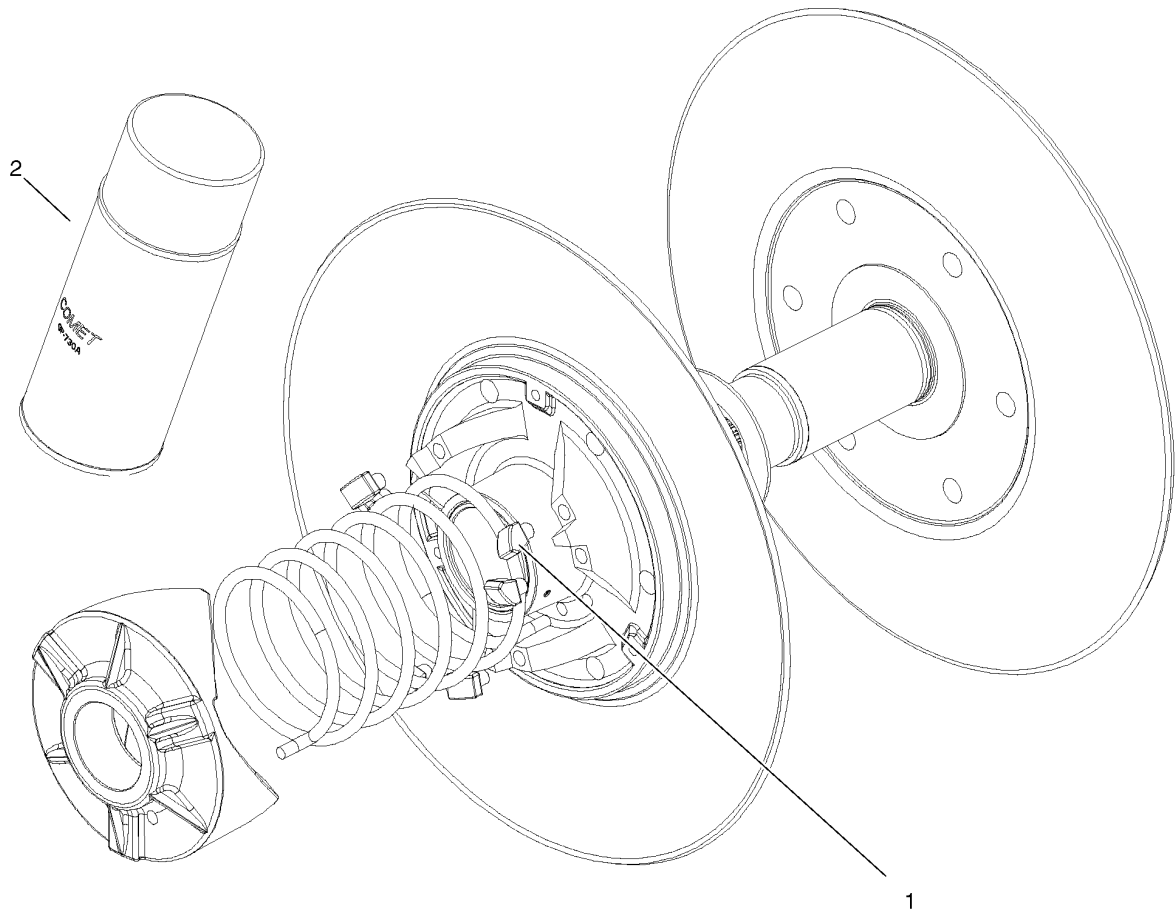 


Driven Clutch Assembly No. 99-7104

Ref	Part No.	Qty.	Description
1	104-4257	1	Button Kit
2	104-7011	1	Lubricant-Dry

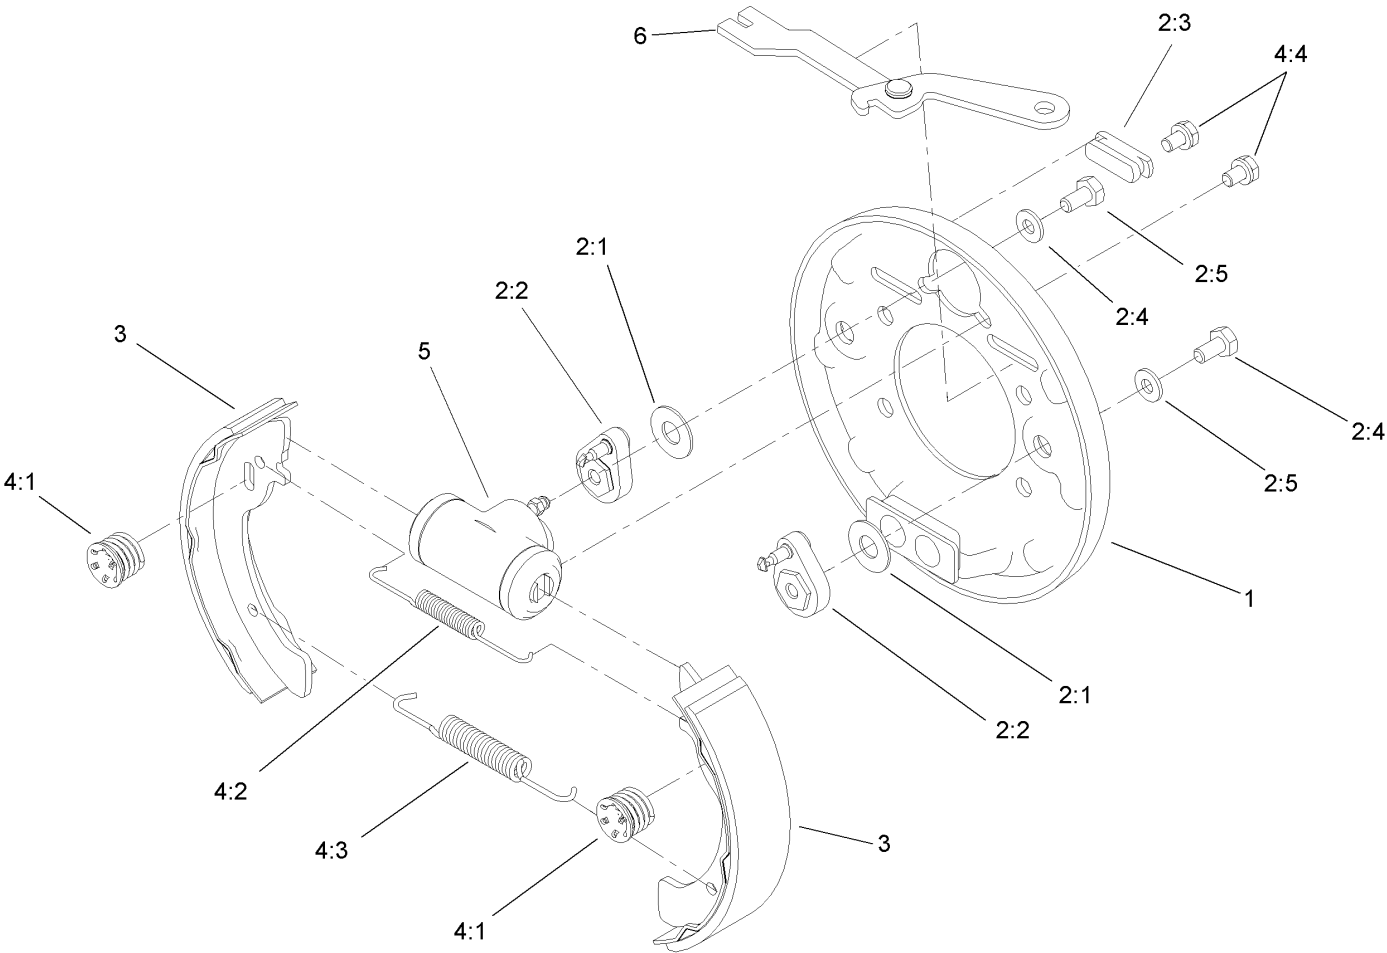 


Left Hand Brake Assembly No. 104-6807

Ref	Part No.	Qty.	Description				
1	100-8586	1	Backing Plate ASM				
2	104-6820	1	Adjuster Kit				
2:1	100-8585	2	Washer-Bellville				
2:2	100-8588	2	Adjuster Lever ASM				
2:3	100-8584	2	Cover-Dust				
2:4		2	Screw				
2:5		2	Bolt				
3	104-6818	4	Shoe And Lining Kit				
4	104-6819	1	Hardware Kit				
4:1	100-8583	2	Shoe Hold Down Spring ASM				
4:2	100-8581	2	Spring-Upper				
4:3	100-8582	2	Spring-Lower				
4:4		2	Bolt And Washer				
5	104-6824	1	Wheel Cylinder ASM				
6	104-6825	1	LH Park Brake Lever ASM				

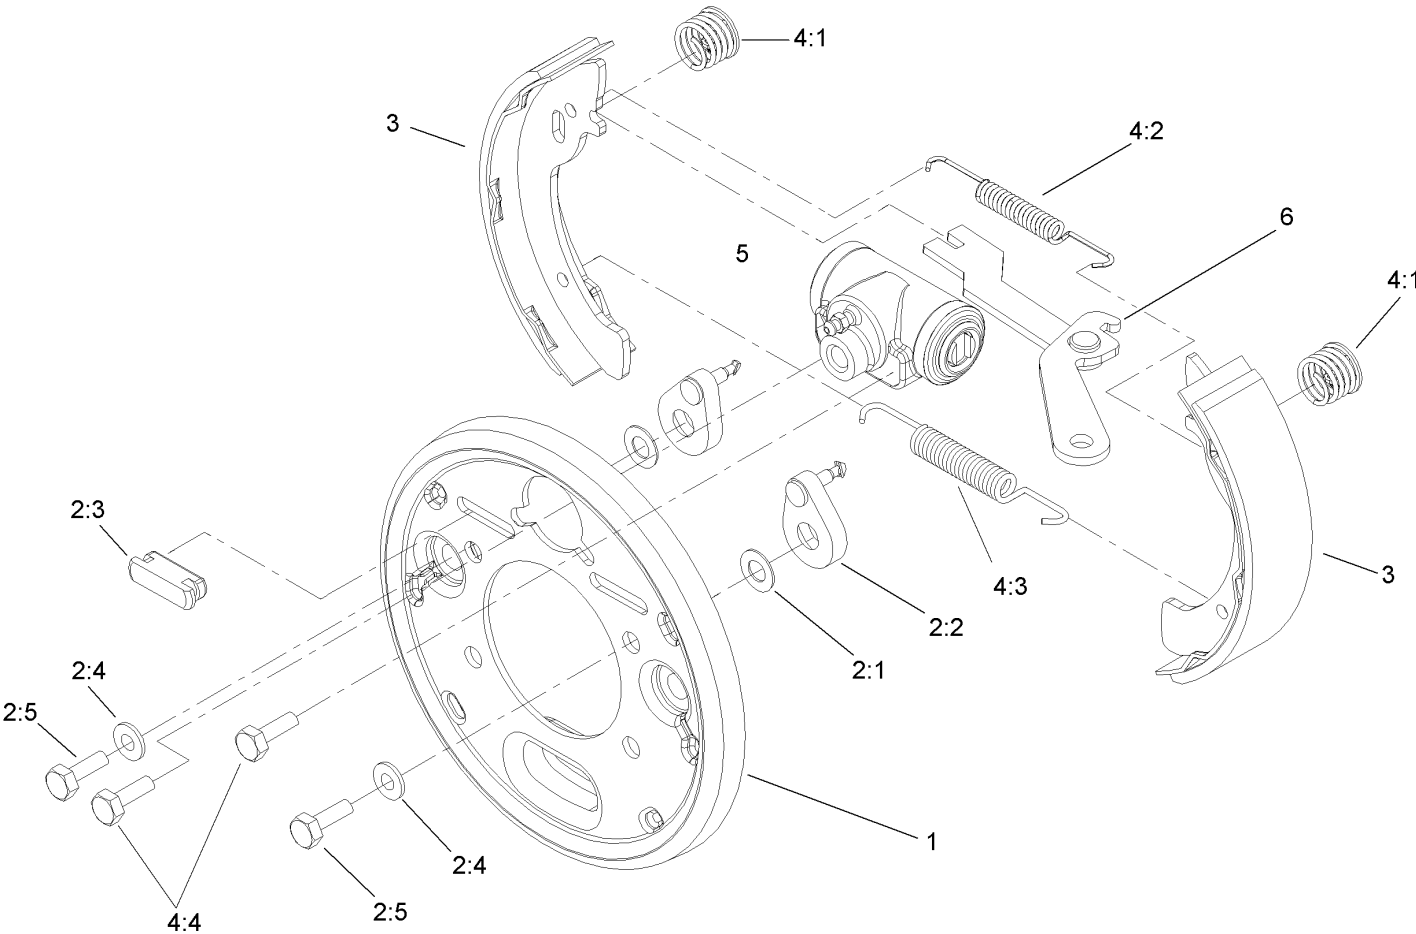

Right Hand Brake Assembly No. 104-6806


Ref	Part No.	Qty.	Description				
1	100-8586	1	Backing Plate ASM				
2	104-6820	1	Adjuster Kit				
2:1	100-8585	2	Washer-Bellville				
2:2	100-8588	2	Adjuster Lever ASM				
2:3	100-8584	2	Cover-Dust				
2:4		2	Screw				
2:5		2	Bolt				
3	104-6818	4	Shoe And Lining Kit				
4	104-6819	1	Hardware Kit				
4:1	100-8583	2	Shoe Hold Down Spring ASM				
4:2	100-8581	2	Spring-Upper				
4:3	100-8582	2	Spring-Lower				
4:4		2	Bolt & Washer				
5	104-6824	1	Wheel Cylinder ASM				
6	104-6826	1	RH Park Brake Lever ASM				

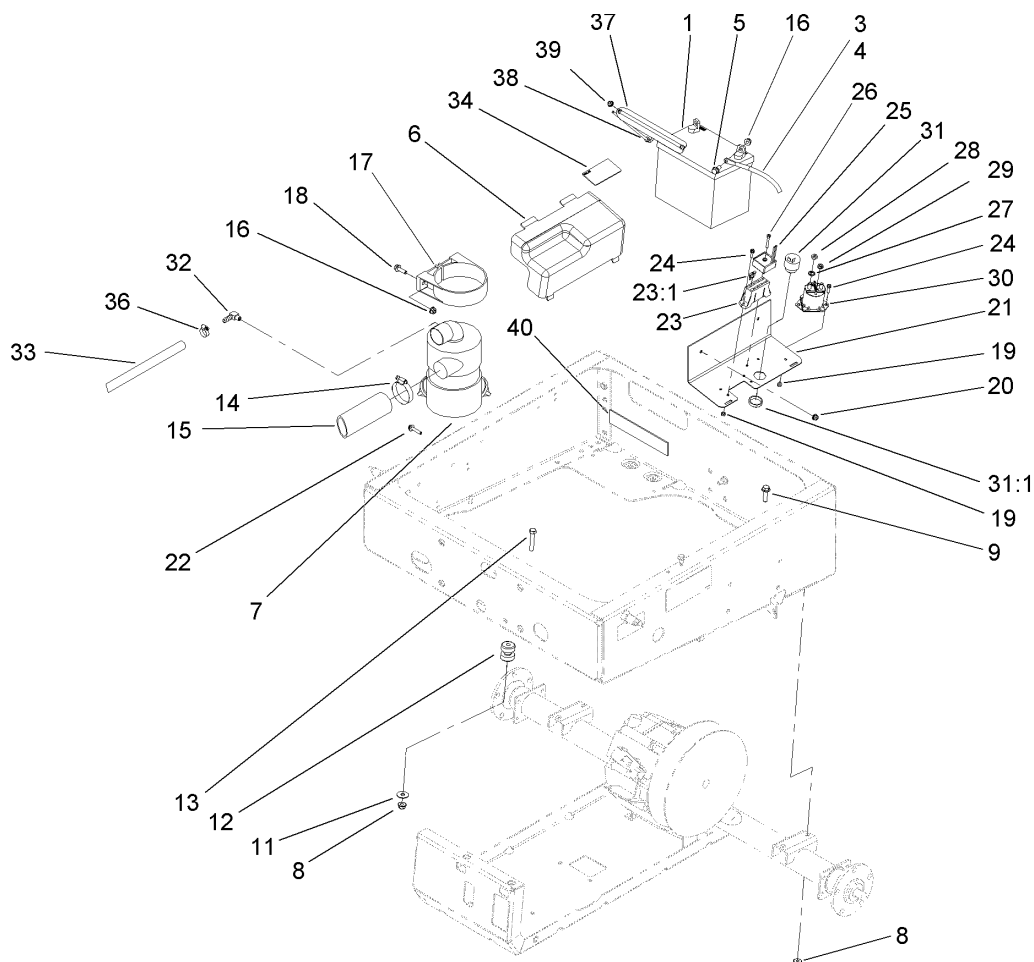 

Drivetrain Mounting, Battery and Air Cleaner Assembly


Ref	Part No.	Qty.	Description
1	104-8162	1	Battery
3	99-7415	1	Cable-Negative
4	99-7404	1	Cable-Positive
5	3234-5	2	Screw-HHF
6	99-7325	1	Cover-Electrical
7	99-7120	1	Air Cleaner ASM
8	104-8301	6	Nut-Flange, NI
9	3234-24	4	Screw-HHF
11	3256-35	2	Washer-Flat
12	95-2596	2	Mount-Iso
13	323-10	2	Screw-HH
14	2412-130	1	Clamp-Hose
15	104-6528	1	Hose-Intake
16	104-8300	4	Nut-Flange, NI
17	95-5806	1	Bracket-Mounting
18	3234-17	2	Screw-HHF
19	3296-2	5	Nut-Lock
20	32128-32	2	Nut-HHF
21	99-7051-03	1	Mount-Component
22	3234-21	2	Screw-Cap
23	107-0669	1	Harness-Wire, Main
23:1	218-578	3	Fuse-10 Amp
23:2	100-4918	1	Diode
24	32105-13	4	Screw-SHH

Ref	Part No.	Qty.	Description
25	104-6927	1	Regulator
26	32105-1	1	Screw-SHH
27	3255-8	2	Washer-Lock
28	3218-2	2	Nut-Jam
29	32149-8	2	Nut-Keps
30	99-7406	1	Solenoid
31	80-9330	1	Alarm-Audio
31:1	104-5107	1	Nut-Plastic, Knurled
32	99-7230	1	Fitting-90 DEG
33	99-7842	1	Hose-Breather
34	99-7352	1	Decal-Information
36	2412-36	2	Clamp-Hose
37	92-5018-03	1	Clamp-Battery
38	95-4042	2	Hook-Retain, Battery
39	104-7201	2	Nut-HF
40	104-7102	1	Pad-Battery

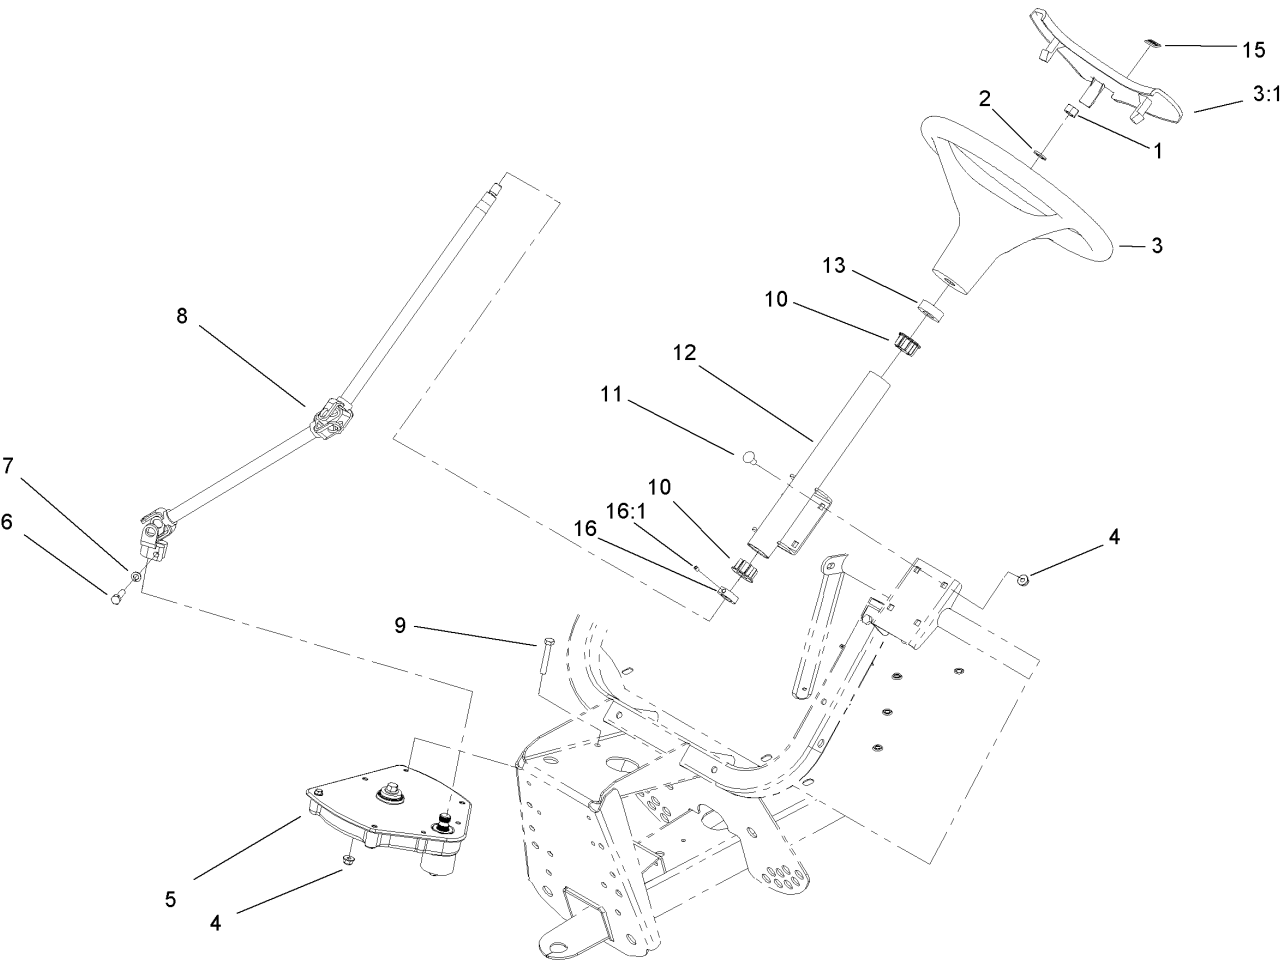 


Upper Steering Assembly

Ref	Part No.	Qty.	Description				
1	110-8815	1	Nut-Hex				
2	3256-26	1	Washer-Flat				
3	98-1471	1	Wheel-Steering				
3:1	98-1468	1	Cover-Wheel, Steering				
4	104-8300	7	Nut-Flange, NI				
5	99-7660	1	Steering Gearbox ASM				
6	48-7730	1	Screw-HH				
7	3253-4	1	Washer-Lock				
8	99-7653	1	Shaft-Steering				
9	322-10	3	Screw-HH				
10	93-1146	2	Bushing-Steering, Upper				
11	3230-1	4	Bolt-CARR				
12	99-7651-03	1	Column-Steering				
13	21-9260	1	Cover-Dust				
15	98-1459	1	Decal				
16	111383	1	Collar				
16:1	3245-32	1	Screw-HSH				

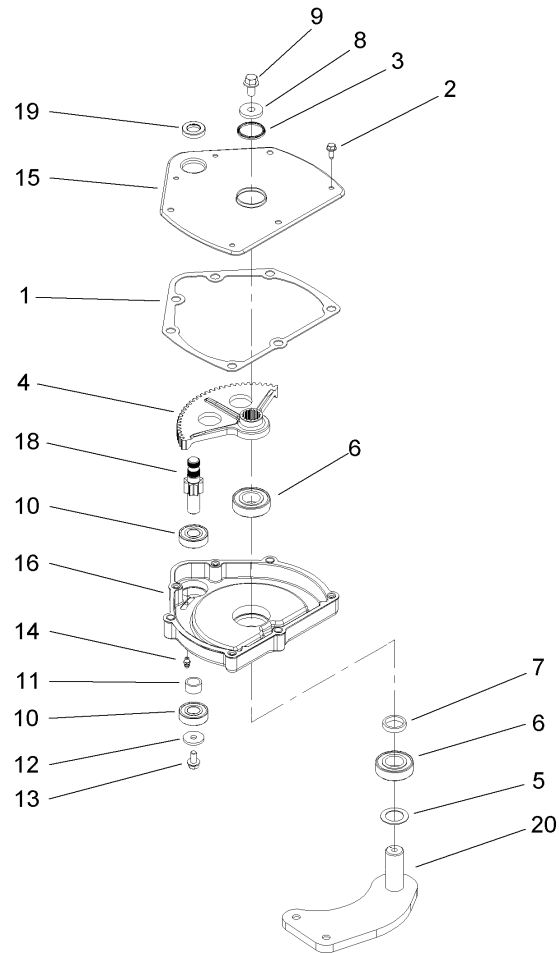 


Steering Gearbox Assembly No. 99-7660

Ref	Part No.	Qty.	Description				
1	94-2135	1	Gasket				
2	32144-10	4	Screw-HWH				
3	103118	1	Seal				
4	99-7843	1	Sector-Gear				
5	3256-42	1	Washer-Flat				
6	251-82	2	Bearing-Ball				
7	94-2218	1	Spacer-Shaft, Output				
8	104-6563	1	Washer-Stepped				
9	104-7156	1	Screw-HHF				
10	38-7820	2	Bearing-Ball				
11	94-2217	1	Spacer-Shaft, Input				
12	1-613235	1	Washer				
13	98-3498	1	Screw-HH				
14	302-5	1	Fitting-Grease				
15	99-7656-03	1	Cover-Housing, Steering				
16	99-7658	1	Housing-Steering				
18	99-7650	1	Gear-Pinion				
19	99-7657	1	Seal-Oil				
20	99-7601-03	1	Arm-Pitman				

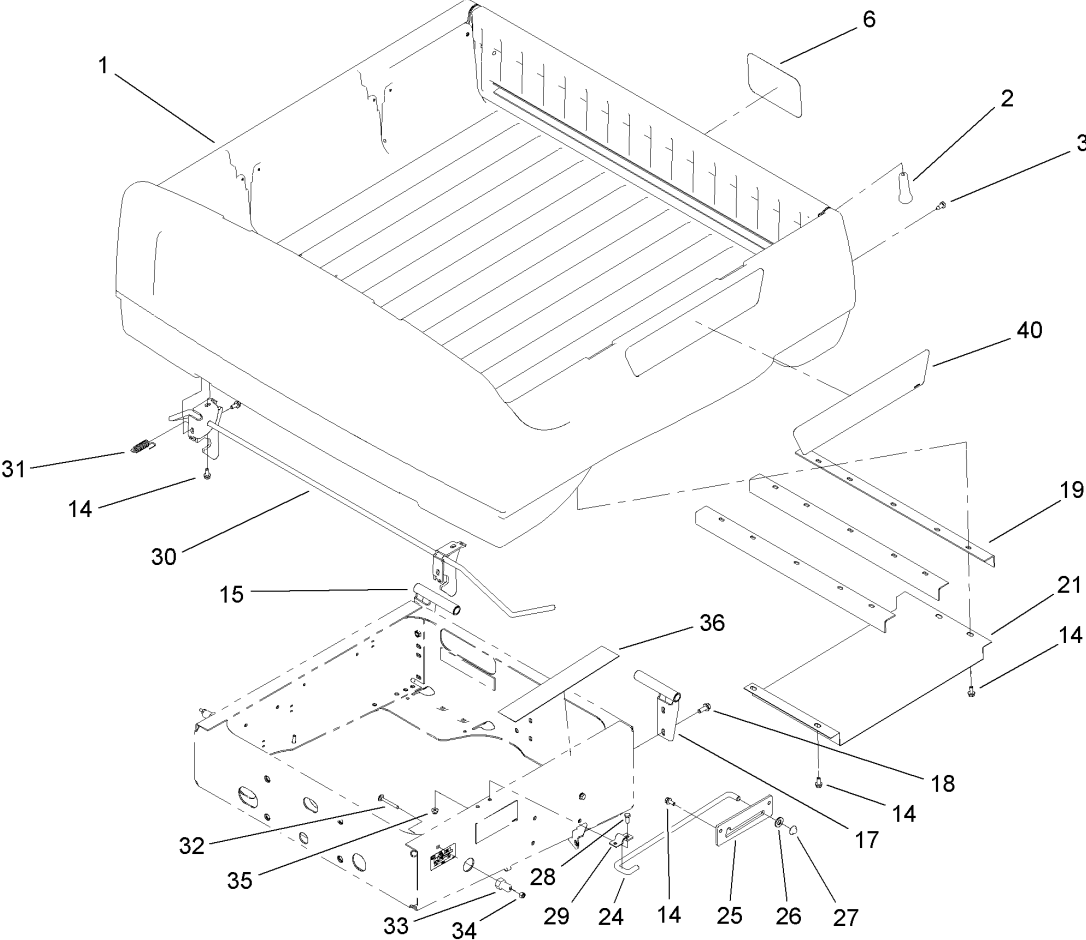 


Box and Tailgate Installation Assembly

Ref	Part No.	Qty.	Description				
1		1	Box And Tailgate ASM				
2	99-7984	2	Knob-Soft Grip, Push-On				
3	87-8460	2	Bumper-Rubber				
6	104-7213	1	Decal				
14	3234-5	18	Screw-HHF				
15	99-7309-03	1	RH Pivot Bracket ASM				
17	99-7308-03	1	LH Pivot Bracket ASM				
18	3234-11	4	Screw-HHF				
19	99-7864-03	3	Brace-Box				
21	99-7870	1	Shield-Heat				
24	99-7895	1	Rod-Prop				
25	99-7894	1	Bracket-Rod, Prop				
26	3256-26	1	Washer-Flat				
27	32112-14	1	Nut-Push				
28	3234-17	2	Screw-HHF				
29	99-7896	1	Bracket-U, Prop Rod				
30	104-7244	1	Rod-Latch				
31	5-7290	2	Spring-Tension				
32	3230-7	2	Screw-CARR				
33	104-7248	2	Pin-Latch				
34	3296-29	2	Nut-Lock, NI				
35	104-8300	1	Nut-Flange, NI				
36	104-6859	1	Shield-Heat				
40	104-7265	2	Decal				

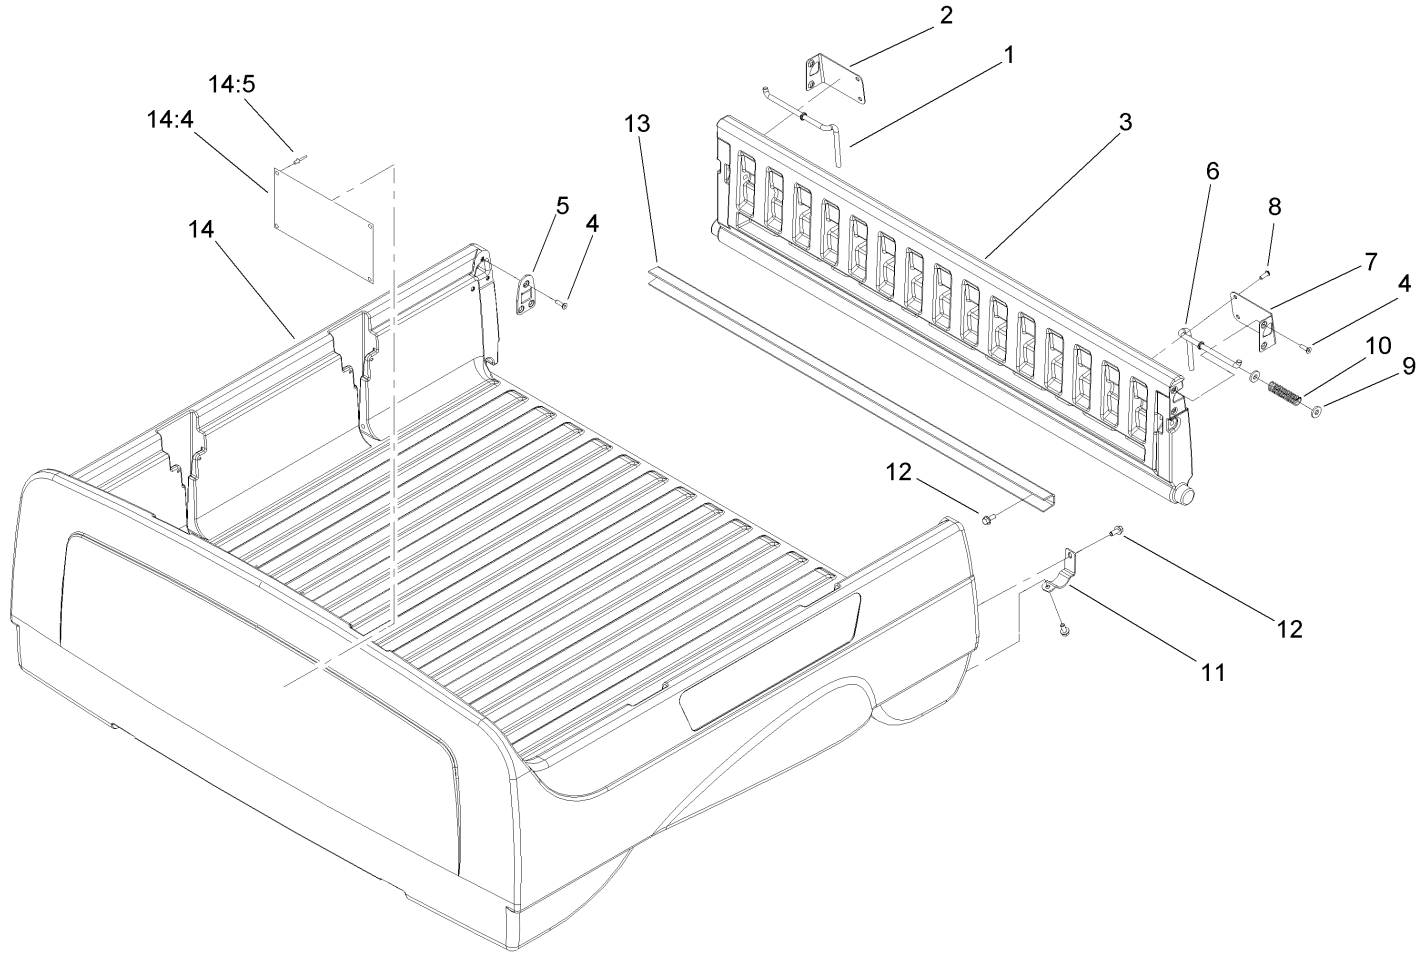 

Box and Tailgate Assembly


Ref	Part No.	Qty.	Description				
1	99-7860	1	Rod-Latch, Right				
2	99-7858	1	Bracket-Tailgate Latch, Right				
3	99-7893	1	Tailgate ASM				
4	99-7334	10	Screw				
5	99-7852	2	Plate-Striker				
6	99-7859	1	Rod-Latch, Left				
7	99-7857	1	Bracket-Tailgate Latch, Left				
8	99-7335	4	Screw				
9	99-7861	4	Washer-Latch				
10	61-8880	2	Spring				
11	99-7286	2	Bracket-Pivot, Tailgate				
12	3234-5	10	Screw-HHF				
13	99-7867	1	Channel-Tailgate				
14	104-7203	1	Box ASM				
14:4	99-7954	1	Decal-No Riders				
14:5	3290-415	4	Rivet				

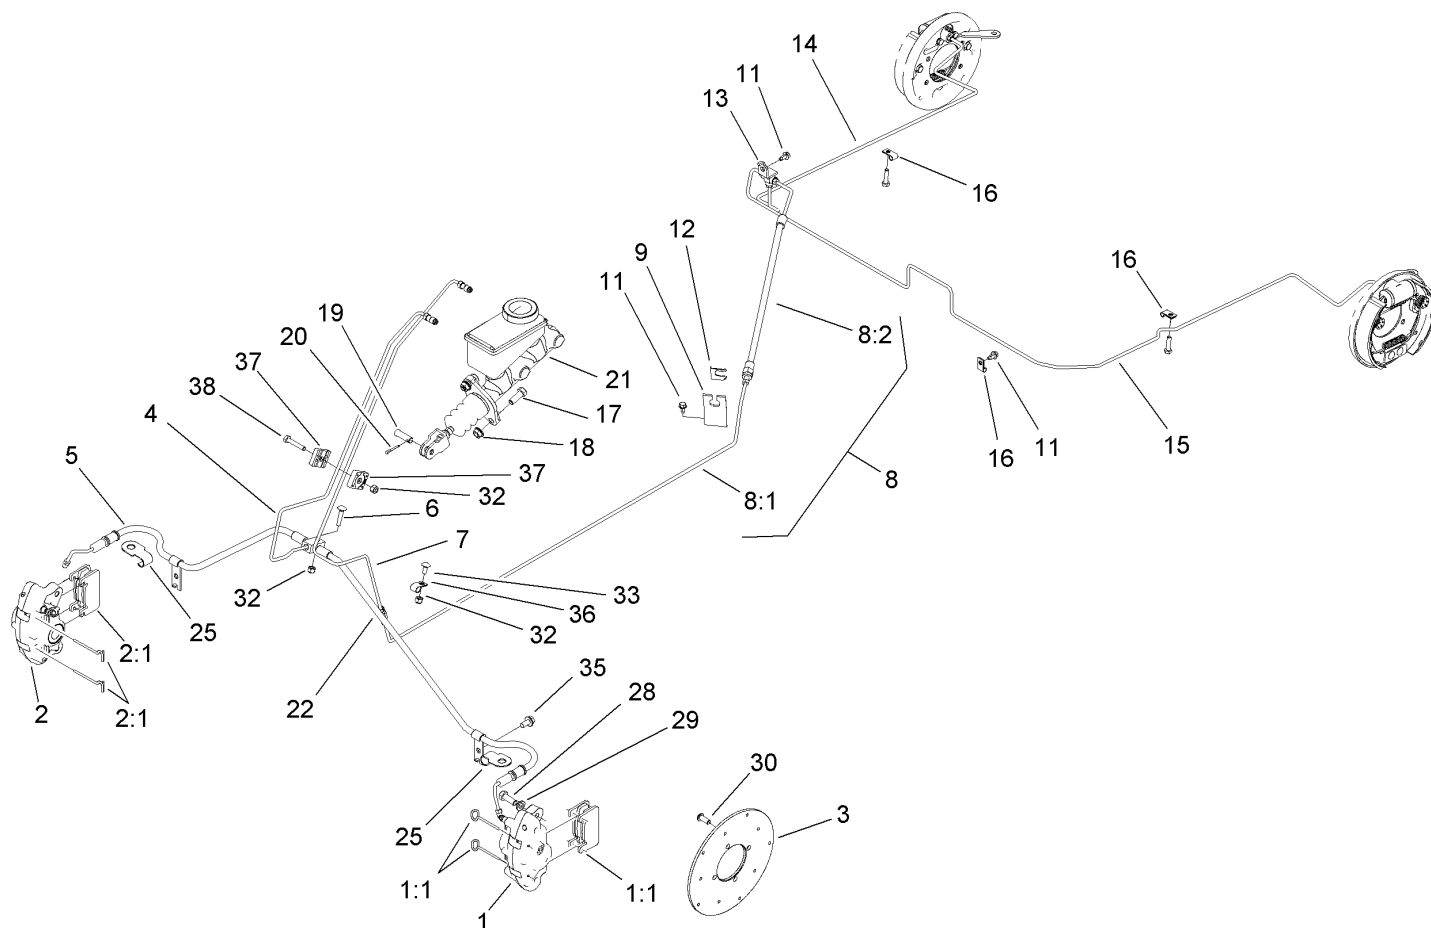 

Hydraulic Brake Assembly


Ref	Part No.	Qty.	Description
1	107-0361	1	Caliper-LH
1:1	107-0708	1	Friction Pad And Pin Kit
2	107-0362	1	Caliper-RH
2:1	107-0708	1	Friction Pad And Pin Kit
3	104-6891	2	Rotor
4	104-6798	1	Tube-Brake, Front
5	104-7256	1	Front Hose ASM
6	3229-3	1	Screw-CARR
7	104-6793	1	Tube-Brake, Rear
8		1	Rear Brake Hose ASM
8:1	104-6794	1	Tube-Brake, Rear
8:2	104-6795	1	Hose-Brake, Rear
9	104-6799	1	Bracket-Hose, Brake
11	12-3270	3	Screw
12	104-7092	1	Clip
13	87-3560	1	Tee
14	104-6796	1	Tube-Brake Rear, RH
15	110-2604	1	Tube-Brake Rear, LH
16	2412-72	3	Clip-Closed, Insulated
17	323-6	2	Screw-HH
18	3290-357	2	Nut-HHF, Whiz
19	283-2	1	Pin-Clevis
20	3272-10	1	Pin-Cotter
21	104-6782	1	Cylinder-Master

Ref	Part No.	Qty.	Description
22	87-3570	1	Union
25	104-7073	2	Bracket-Hose
28	323-6	4	Screw-HH
29	3253-21	4	Washer-Lock
30	3274-55	8	Screw-HSBH
32	3296-42	3	Nut-Lock, NI
33	3229-11	1	Screw-CARR
35	32144-14	2	Screw-HWH
36	2412-89	1	Clamp
37	87-7660	2	Clamp-Tube
38	321-9	1	Screw-HH

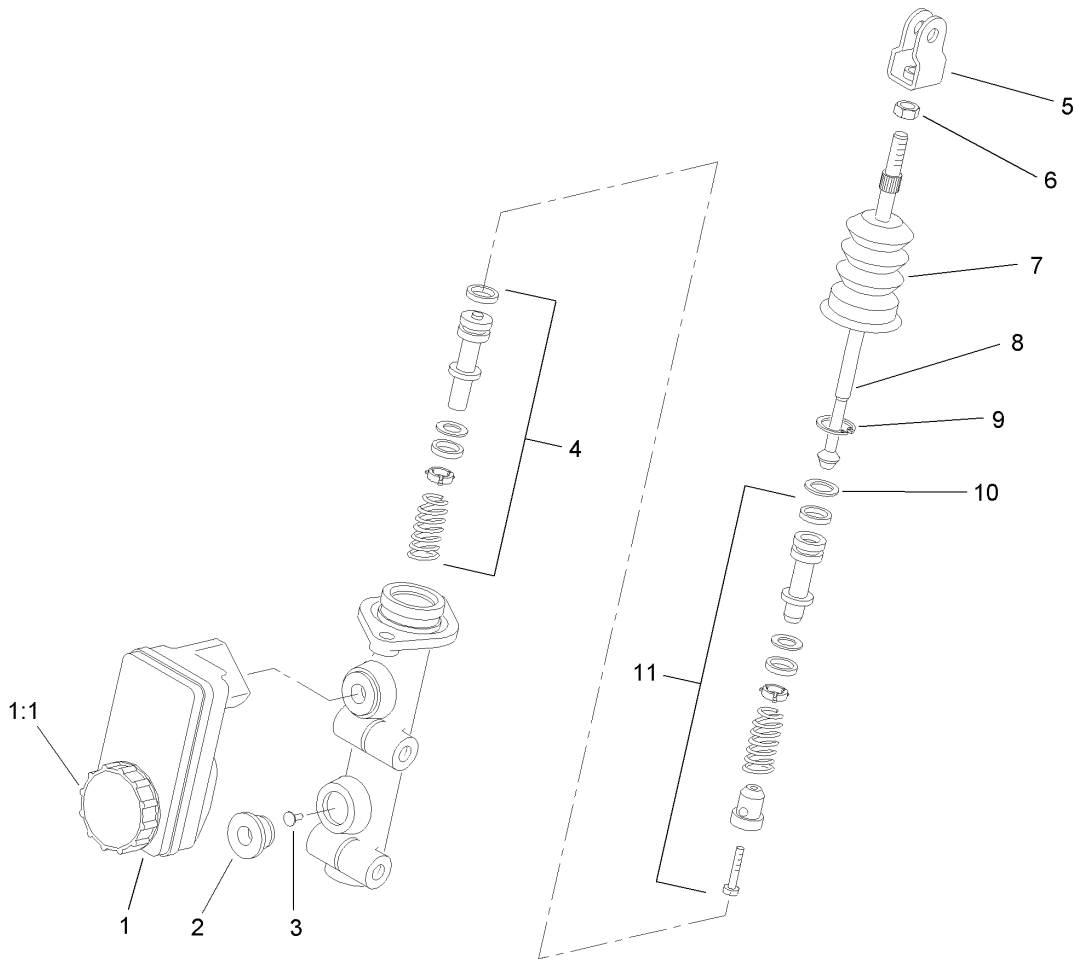 

Master Cylinder Assembly No. 104-6782


Ref	Part No.	Qty.	Description				
1	104-6845	1	Reservoir ASM				
1:1	92-4112	1	Cap ASM				
2	93-8971	2	Seal-Port, Flange				
3	92-4103	1	Pin-Stop				
4	92-4102	1	Secondary Piston ASM				
5	92-4110	1	Clevis				
6	21-0360	1	Nut-Hex				
7	94-5209	1	Cover-Dust				
8	94-5210	1	Rod-Push				
9	92-4109	1	Ring-Snap				
10	92-4108	1	Retainer-Washer				
11	92-4101	1	Primary Piston ASM				

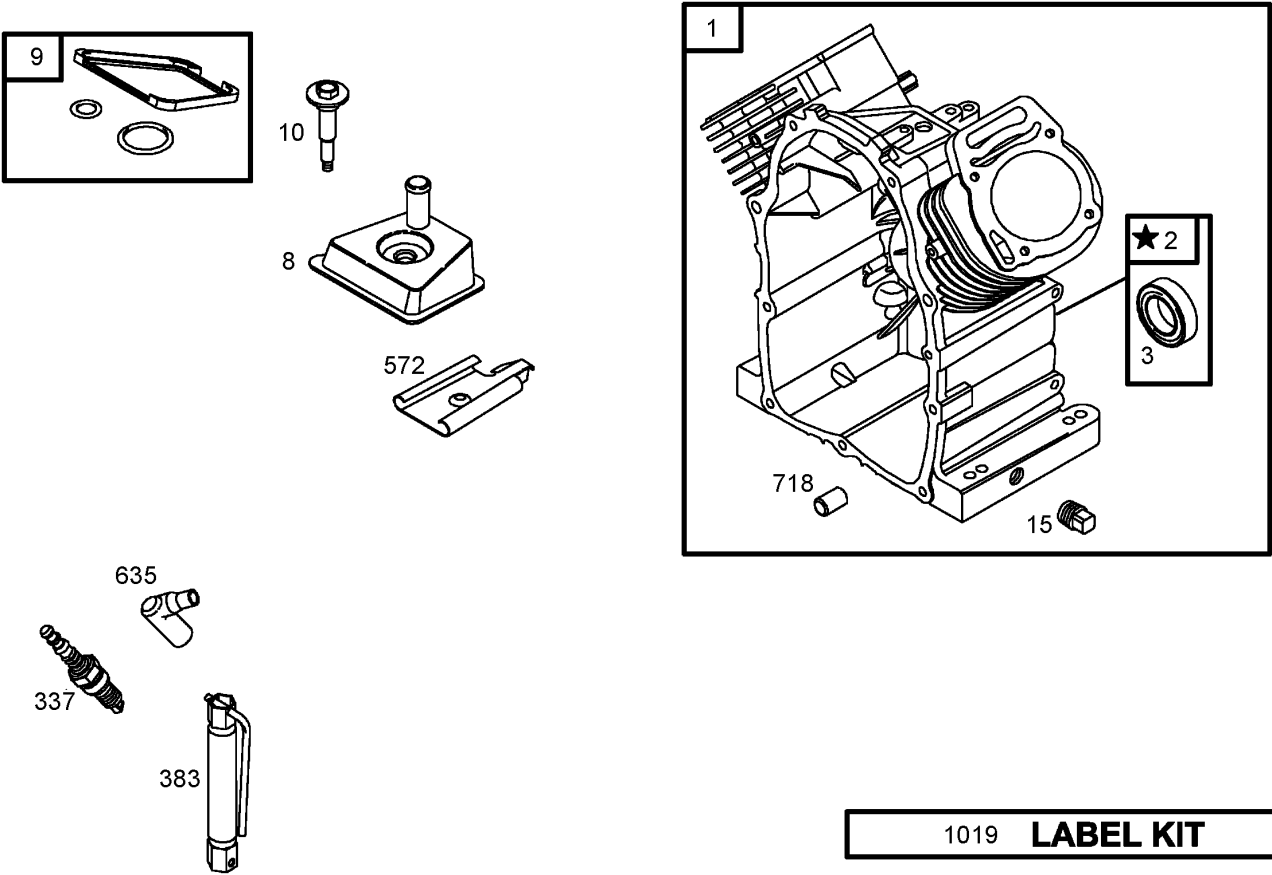 

Assemblies include all parts shown in frames.

Cylinder Assembly
Briggs and Stratton 303440-1326-E1


Ref	Part No.	Qty.	Description				
1	692178	1	Cylinder ASM				
2	808534	1	Bushing / Seal Kit				
3	805101	1	Seal-Oil				
8	808984	1	Breather ASM				
9	809094	1	Gasket-Breather				
10	690751	1	Screw				
15	690946	1	Plug-Drain, Oil				
337	496018	1	Plug-Spark				
383	19374	1	Wrench-Spark Plug				
572	690686	1	Baffle-Breather				
635	692076	1	Boot-Spark Plug				
718	690684	1	Pin-Locating				
1019	808036	1	Label Kit				

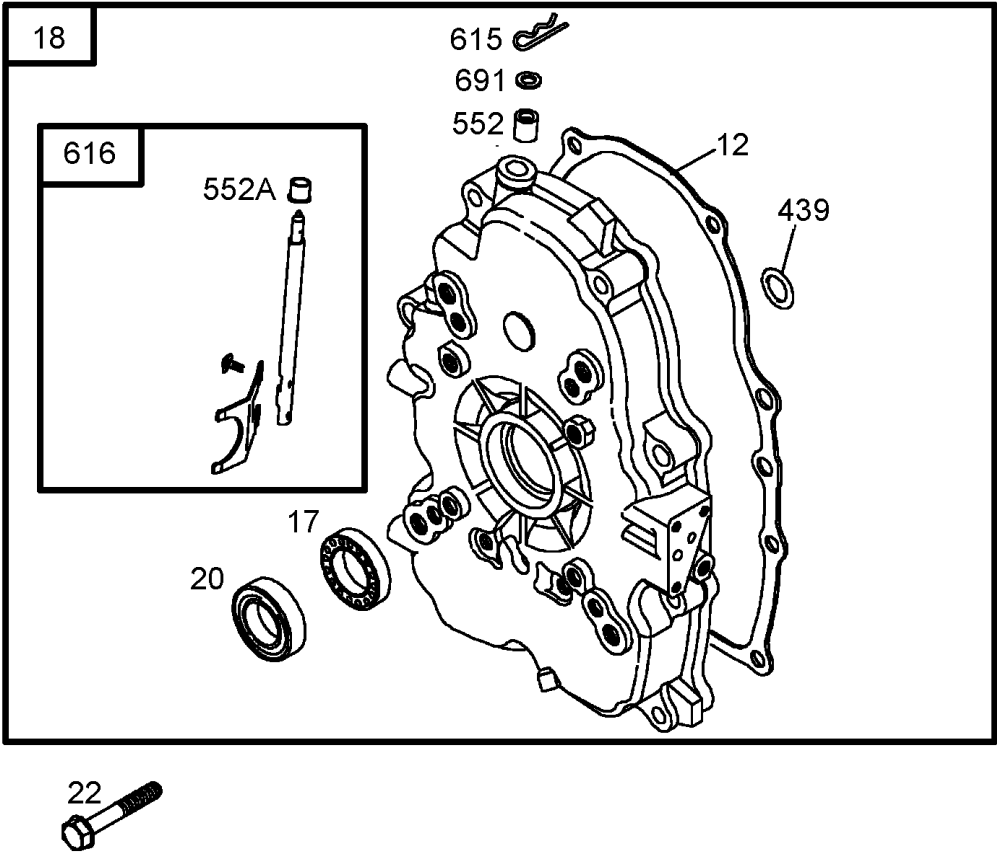 

Assemblies include all parts shown in frames.

Crankcase Assembly
Briggs and Stratton 303440-1326-E1

Ref	Part No.	Qty.	Description				
3 6 12	691684	1	Gasket-Crankcase				
6 17	690752	1	Bearing-Ball				
6 18	808847	1	Cover-Crankcase				
3 6 20	805049	1	Seal-Oil				
6 22	692540	1	Screw				
1 6 276A	690704	1	Washer-Sealing				
3 6 439	692154	1	Seal-O Ring				
6 552	690701	1	Bushing-Crank, Governor				
6 552A	806686	1	Bushing-Crank, Governor				
6 615	691550	1	Retainer-Shaft, Governor				
6 616	806685	1	Crank-Governor				
6 691	690680	1	Seal-Shaft, Governor				

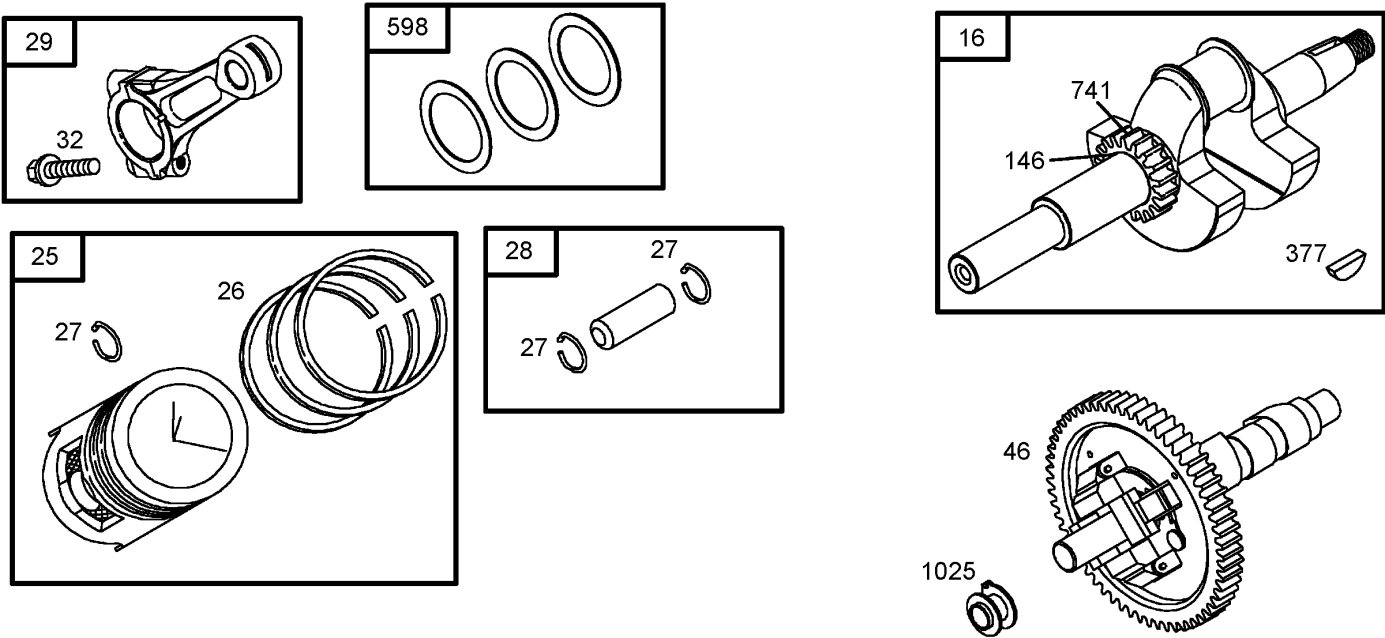 


Assemblies include all parts shown in frames.

Crankshaft Assembly

Briggs and Stratton 303440-1326-E1

Ref	Part No.	Qty.	Description				
16	692163	1	Crankshaft				
25	807619	1	Piston ASM (Standard)				
25	807807	1	Piston ASM (.010 Oversize)				
25	807809	1	Piston ASM (.020 Oversize)				
25	807811	1	Piston ASM (.030 Oversize)				
26	807620	1	Ring Set (Standard)				
26	807808	1	Ring Set (.010 Oversize)				
26	807810	1	Ring Set (.020 Oversize)				
26	807812	1	Ring Set (.030 Oversize)				
27	690683	1	Lock-Pin, Piston				
28	807621	1	Pin-Piston				
29	807900	1	Rod-Connecting (Standard)				
29	807809	1	Piston ASM (.020 Oversize)				
32	690698	1	Screw				
46	692157	1	Camshaft				
146	691639	1	Key-Timing				
377	808095	1	Key-Woodruff				
598	807625	1	Shim-Play, End				
741	691530	1	Gear-Timing				
1025	690689	1	Spool-Governor				

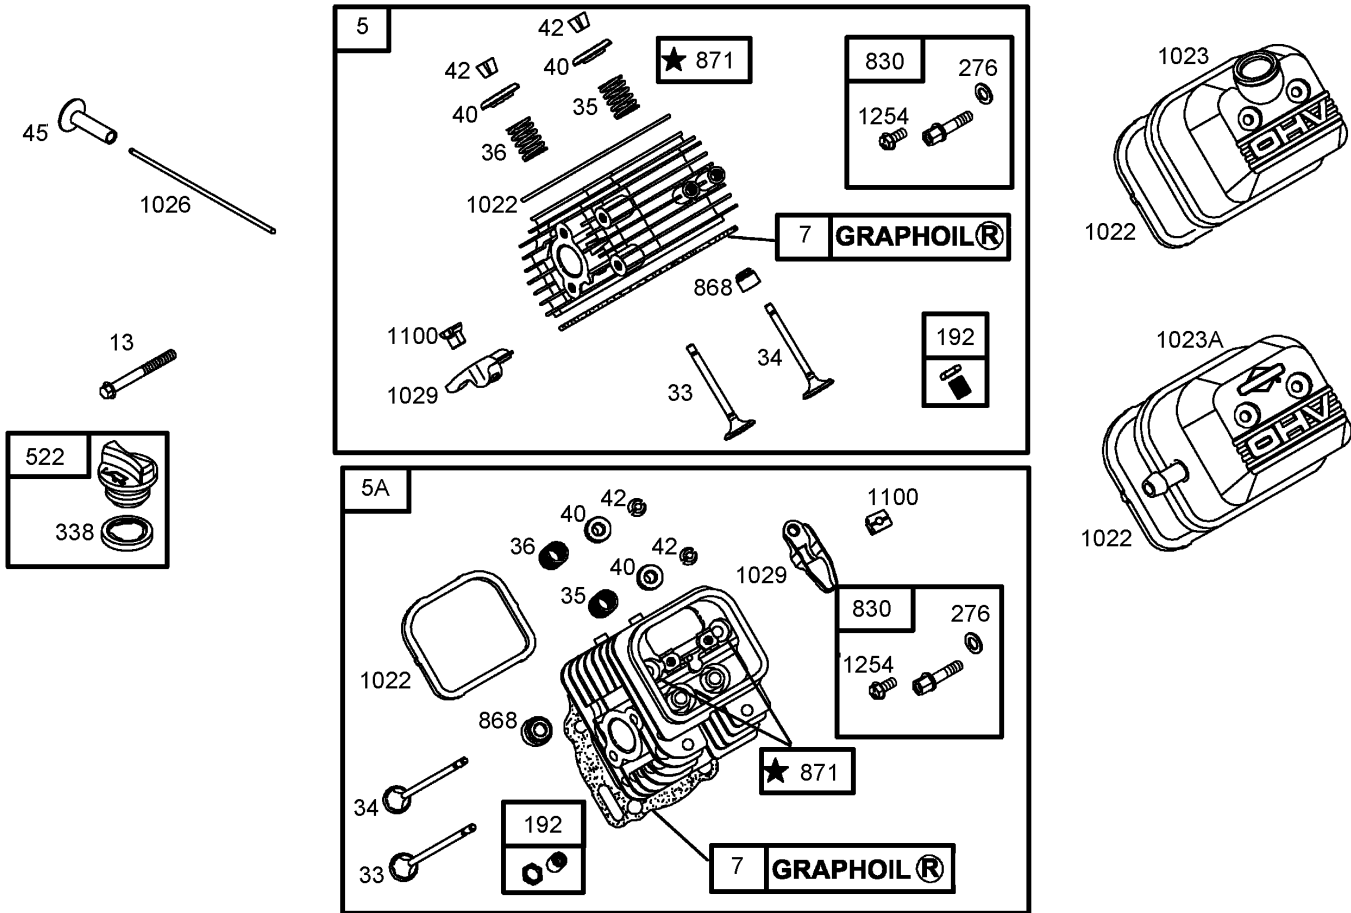 


Assemblies include all parts shown in frames.

Cylinder Head Assembly

Briggs and Stratton 303440-1326-E1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
5	809200	1	Head-Cylinder (Cylinder 1)	1026	691836	1	Rod-Push
5A	809201	1	Head-Cylinder (Cylinder 2)	1026	691758	1	Rod-Push
7	806085	1	Gasket-Head, Cylinder	1029	807323	1	Arm-Rocker
13	692059	1	Screw	1100	690973	1	Pivot-Arm, Rocker
33	807681	1	Valve-Exhaust	1254	807084	1	Screw
34	807680	1	Valve-Intake				
35	692084	1	Spring-Valve				
36	692084	1	Spring-Valve				
40	692058	1	Retainer-Valve				
42	807683	1	Keeper-Valve				
45	690977	1	Valve-Tappet				
192	807623	1	Adjuster-Arm, Rocker				
276	807085	1	Washer-Sealing				
338	691312	1	Gasket-Dipstick				
522	491832	1	Plug-Dipstick / Fill				
830	809157	1	Stud-Arm, Rocker				
868	691963	1	Seal-Valve				
871	692057	1	Bushing-Guide, Valve				
1022	806039	1	Gasket-Cover, Rocker				
1023	690758	1	Cover-Valve				
1023A	691558	1	Cover-Valve				

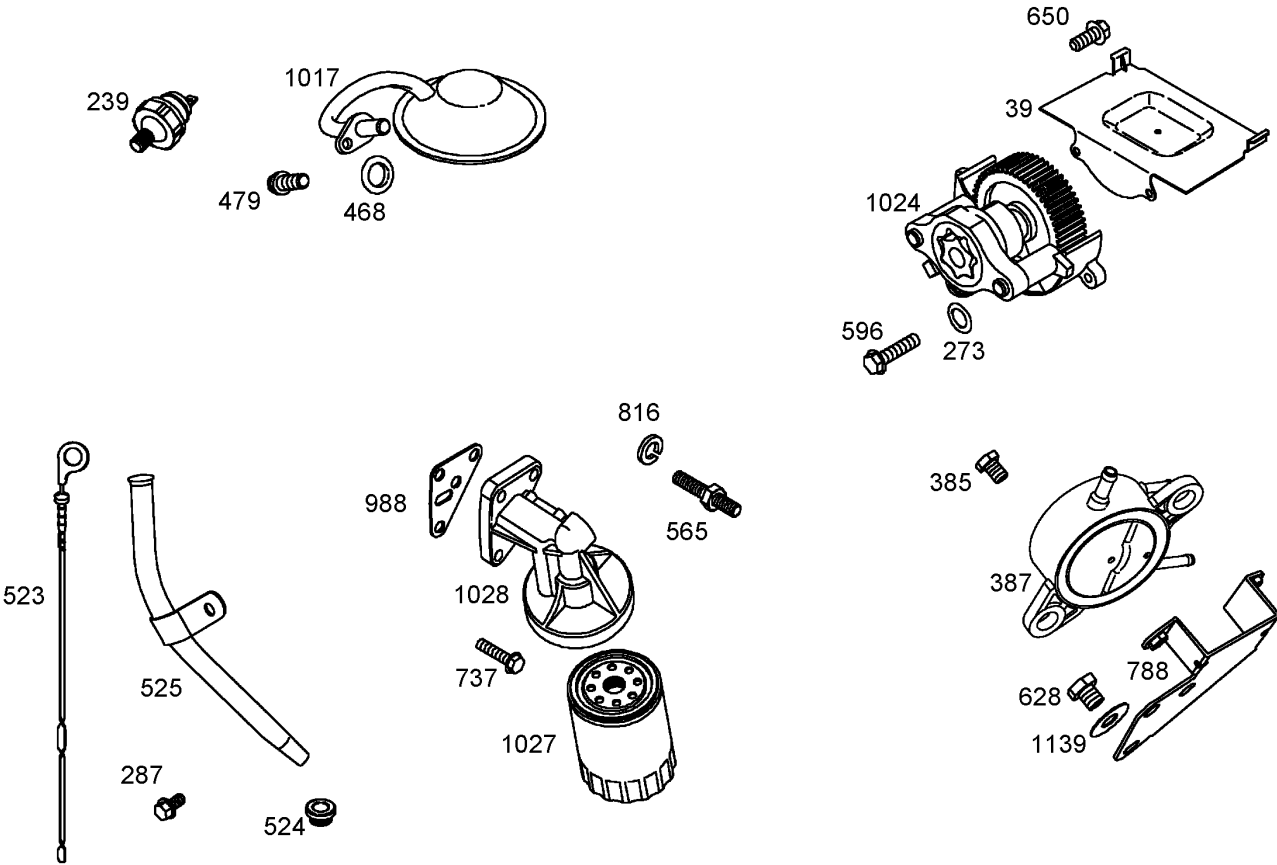 

Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly
Briggs and Stratton 303440-1326-E1

Ref	Part No.	Qty.	Description				
39	690745	1	Deflector-Oil				
239	690233	1	Switch-Pressure, Oil				
273	690681	1	Seal-O Ring				
287	692062	1	Screw				
385	807084	1	Screw				
387	808656	1	Pump-Fuel				
468	690690	1	Seal-O Ring				
479	692537	1	Screw				
523	693175	1	Dipstick				
524	693172	1	Seal-Tube, Dipstick				
525	693173	1	Tube-Dipstick				
565	690682	1	Stud				
596	691492	1	Screw				
628	806660	1	Screw (Fuel Pump Bracket)				
650	692539	1	Screw				
737	690679	1	Screw				
788	691559	1	Bracket-Pump, Fuel				
816	690706	1	Washer				
988	692063	1	Gasket-Adapter, Oil Filter				
1017	690900	1	Screen-Pump, Oil				
1024	693185	1	Pump-Oil				
1027	492932	1	Filter-Oil				
1028	808235	1	Adapter-Filter, Oil				
1139	806497	1	Washer				

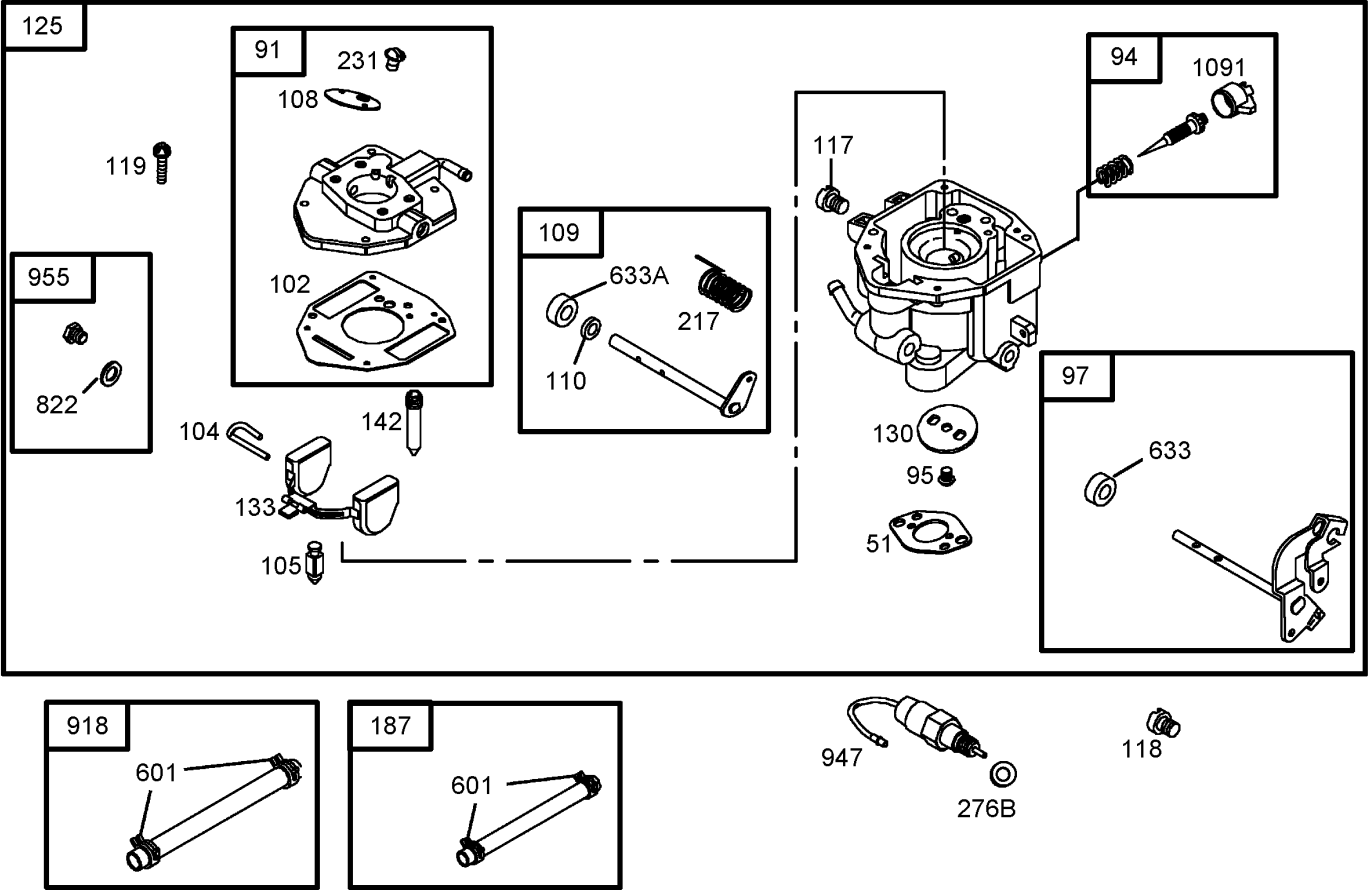 


Assemblies include all parts shown in frames.

Carburetor Assembly

Briggs and Stratton 303440-1326-E1

Ref	Part No.	Qty.	Description
51	691694	1	Gasket-Intake
91	808964	1	Body-Carburetor, Upper
94	808257	1	Idle Mixture Kit
95	690718	1	Screw
97	841498	1	Shaft-Throttle
102	692077	1	Gasket-Body, Carburetor
104	690723	1	Pin-Hinge, Float
105	692078	1	Valve-Needle, Float
108	690719	1	Valve-Choke
109	808962	1	Shaft-Choke
110	806861	1	Washer (Choke Shaft)
117	806859	1	Jet-Main
118	807115	1	Jet-Main (High Altitude)
119	690720	1	Screw
125	841494	1	Carburetor
130	690726	1	Valve-Throttle
133	806961	1	Float-Carburetor
142	806860	1	Nozzle-Carburetor
187	691050	1	Line-Fuel (Cut To Required Length)
217	806862	1	Spring-Return, Choke
231	690718	1	Screw
276B	806137	1	Washer-Sealing




Ref	Part No.	Qty.	Description
601	691038	1	Clamp-Hose
633	806131	1	Seal-Shaft, Choke / Throttle
633A	690722	1	Seal-Shaft, Choke / Throttle
822	690724	1	Seal-O Ring
918	393815	1	Line-Vacuum
947	692094	1	Solenoid-Fuel
955	807723	1	Plug-Carburetor
1091	691516	1	Cap-Limiter

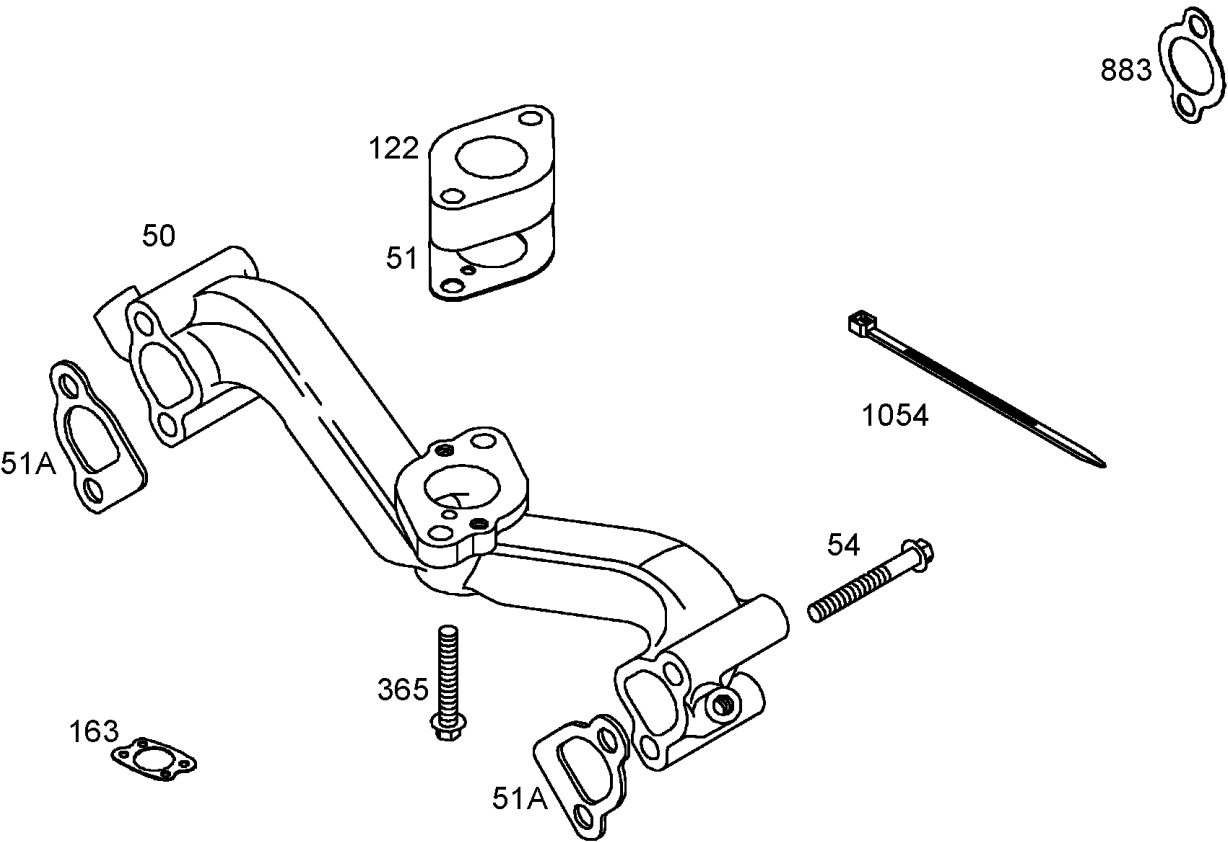 

Assemblies include all parts shown in frames.

Intake Manifold Assembly
Briggs and Stratton 303440-1326-E1


Ref	Part No.	Qty.	Description				
50	690754	1	Manifold-Intake				
51	691694	1	Gasket-Intake				
51A	692035	1	Gasket-Intake				
54	690676	1	Screw				
122	690691	1	Spacer-Carburetor				
163	692081	1	Gasket-Cleaner, Air				
365	690711	1	Screw				
883	691613	1	Gasket-Exhaust				
1054	280275	1	Tie-Cable				

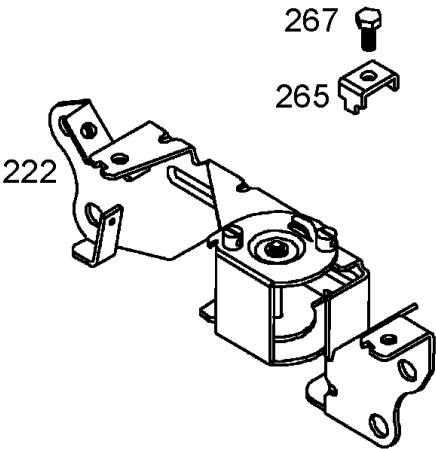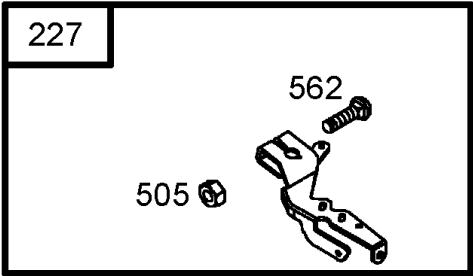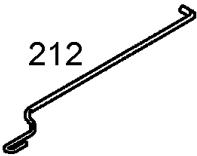   

Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton 303440-1326-E1

Ref	Part No.	Qty.	Description				
209	691507	1	Spring-Governor				
212	690712	1	Link-Throttle				
222	691570	1	Bracket-Control				
227	690236	1	Lever-Control, Governor				
232	692073	1	Spring-Link, Governor				
265	691024	1	Clamp-Casing				
267	692083	1	Screw				
505	690238	1	Nut				
562	690239	1	Bolt				

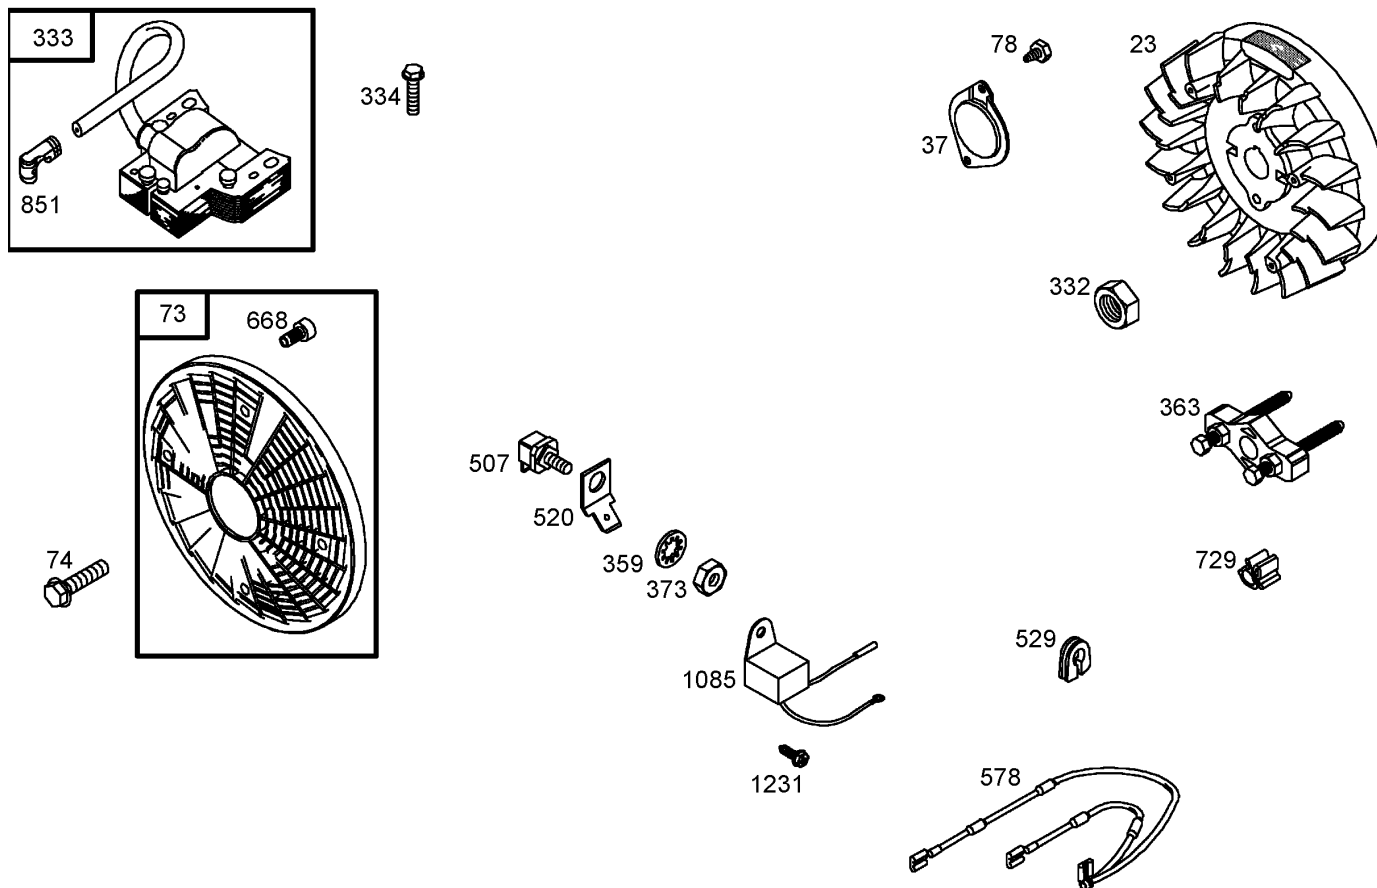 


Assemblies include all parts shown in frames.

Flywheel Assembly

Briggs and Stratton 303440-1326-E1

Ref	Part No.	Qty.	Description				
⑥23	690889	1	Flywheel				
⑥37	841309	1	Guard-Flywheel				
⑥73	494439	1	Screen-Rotating				
⑥74	691647	1	Screw				
⑥78	690688	1	Screw				
⑥332	690887	1	Nut				
⑥333	492341	1	Armature-Magneto				
⑥334	692066	1	Screw				
⑥359	691077	1	Washer				
⑥363	19203	1	Puller-Flywheel				
⑥373	691612	1	Nut				
⑥507	691972	1	Insulator				
⑥520	691084	1	Terminal-Ground				
⑥529	690744	1	Grommet				
⑥578	692319	1	Wire ASM				
⑥668	691500	1	Spacer				
⑥729	690586	1	Clip-Wire				
⑥851	493880	1	Terminal-Spark Plug				
⑥1085	809093	1	Module-Ignition				
⑥1231	692067	1	Screw				

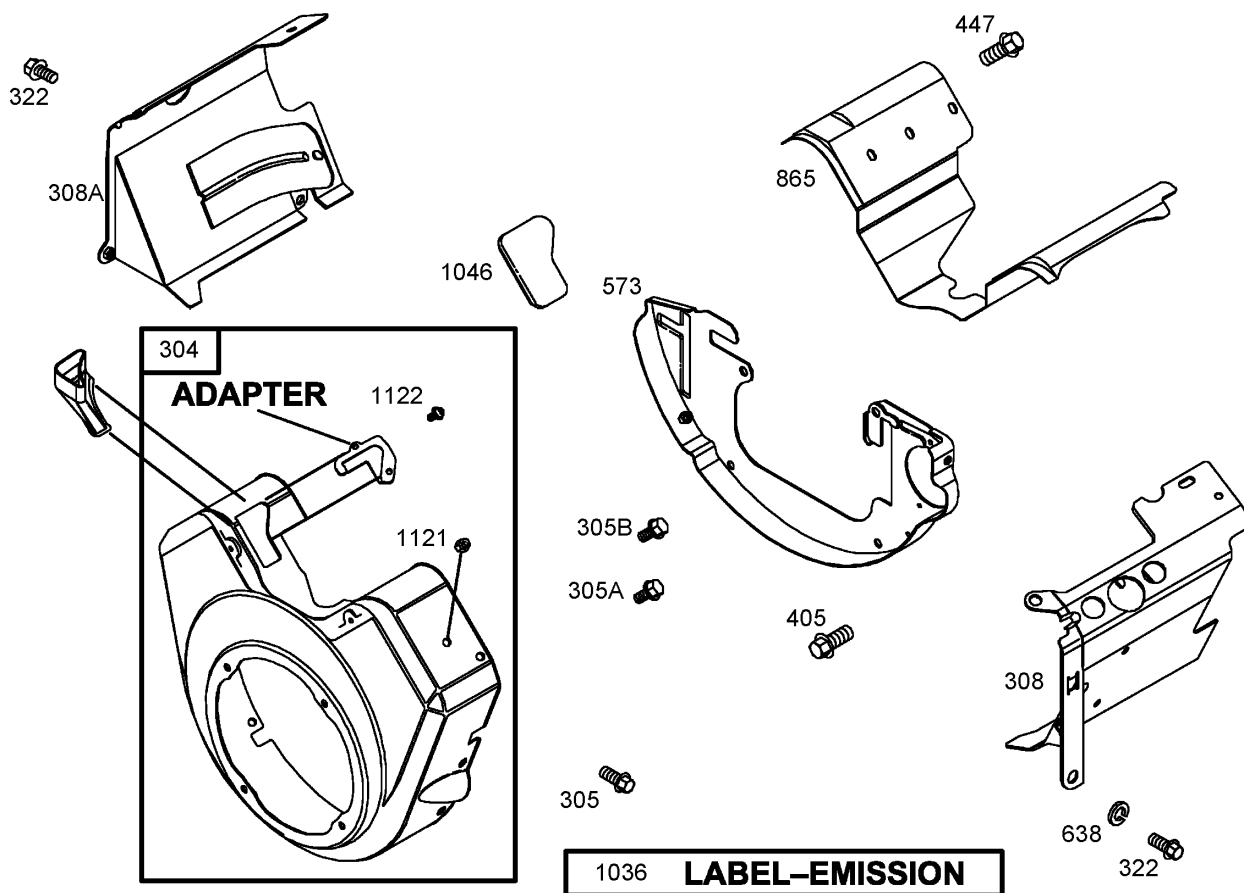 


Assemblies include all parts shown in frames.

Blower Housing Assembly

Briggs and Stratton 303440-1326-E1



Ref	Part No.	Qty.	Description				
⑥304	808408	1	Housing-Blower				
⑥305	692539	1	Screw				
⑥305A	692056	1	Screw				
⑥305B	692062	1	Screw				
⑥308	841232	1	Cover-Head, Cylinder (Cylinder 1)				
⑥308A	841182	1	Cover-Head, Cylinder (Cylinder 2)				
⑥322	692539	1	Screw				
⑥405	807163	1	Screw				
⑥447	692539	1	Screw				
⑥573	690902	1	Plate-Back				
⑥638	691551	1	Washer				
⑥865	690750	1	Cover-Guide, Air				
⑥1036	806881	1	Decal-Emission				
⑥1046	692082	1	Plug-Housing, Blower				
⑥1121	810056	1	Nut (Air Cleaner)				
⑥1122	93410	1	Screw (Control Wire Casing)				

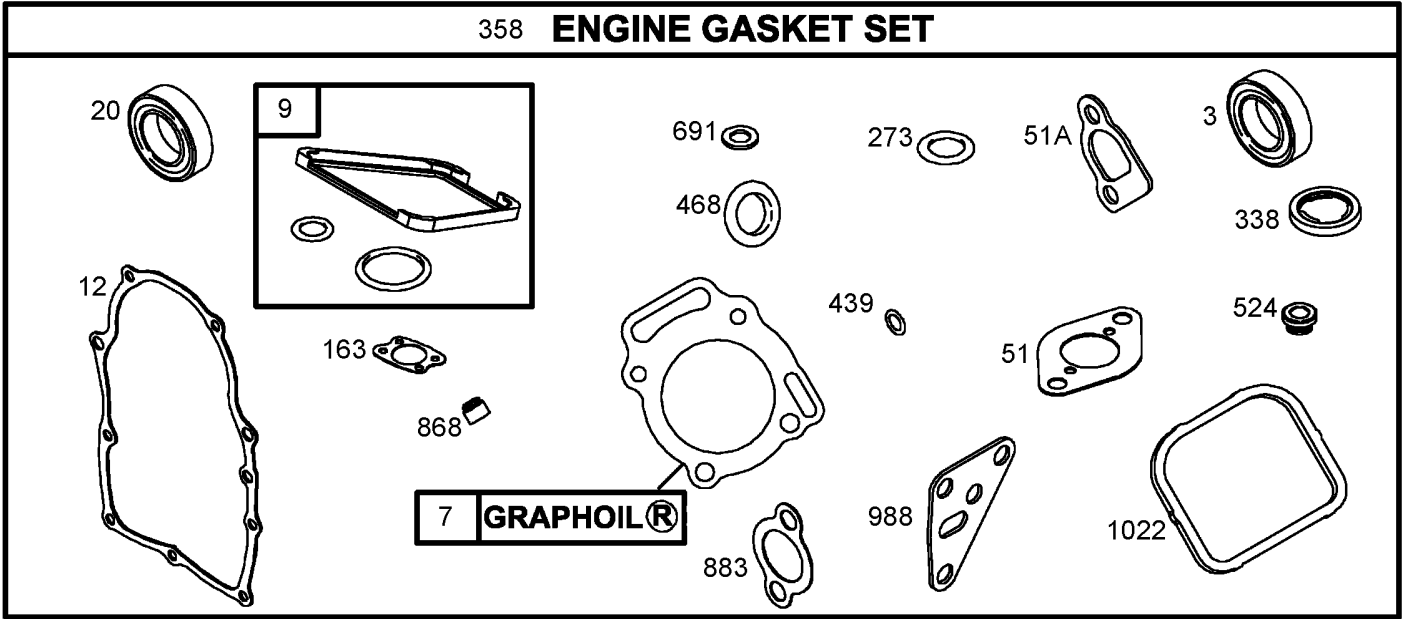 

Assemblies include all parts shown in frames.

Gasket Assembly
Briggs and Stratton 303440-1326-E1

Ref	Part No.	Qty.	Description				
363	805101	1	Seal-Oil				
3476	806085	1	Gasket-Head, Cylinder				
369	809094	1	Gasket-Breather				
3612	691684	1	Gasket-Crankcase				
3620	805049	1	Seal-Oil				
35516	691694	1	Gasket-Intake				
3451A6	692035	1	Gasket-Intake				
36163	692081	1	Gasket-Cleaner, Air				
36273	690681	1	Seal-O Ring				
343386	691312	1	Gasket-Dipstick				
3358	808390	1	Engine Gasket Set				
36439	692154	1	Seal-O Ring				
36468	690690	1	Seal-O Ring				
36524	693172	1	Seal-Tube, Dipstick				
36691	690680	1	Seal-Shaft, Governor				
348686	691963	1	Seal-Valve				
348836	691613	1	Gasket-Exhaust				
36988	692063	1	Gasket-Adapter, Oil Filter				
3410226	806039	1	Gasket-Cover, Rocker				

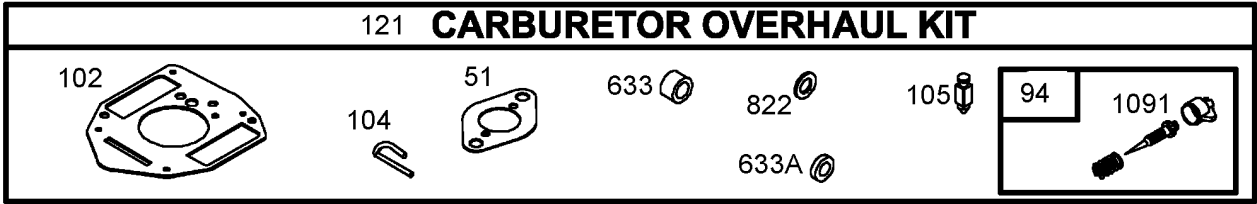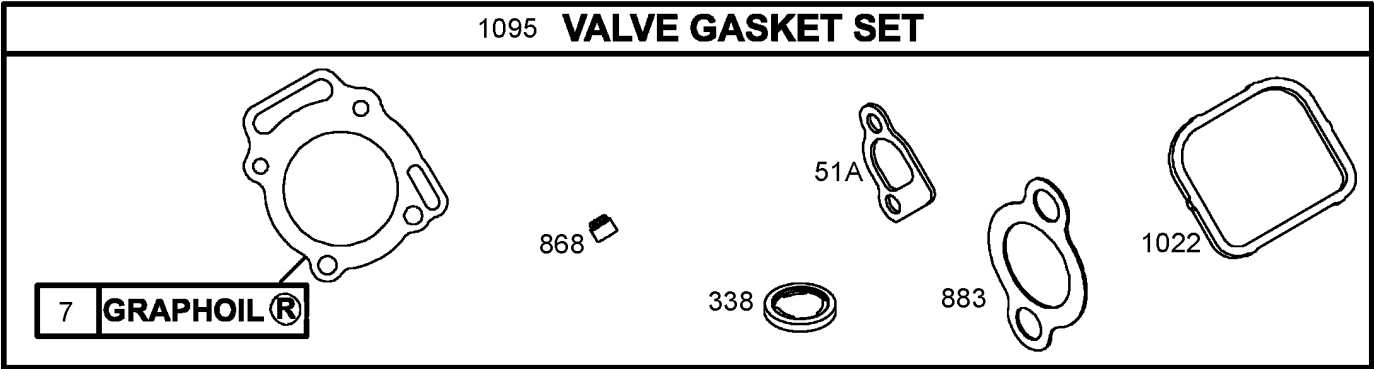  

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly

Briggs and Stratton 303440-1326-E1

Ref	Part No.	Qty.	Description				
347	806085	1	Gasket-Head, Cylinder				
6							
351	691694	1	Gasket-Intake				
6							
3451A	692035	1	Gasket-Intake				
6							
3694	808257	1	Idle Mixture Kit				
66102	692077	1	Gasket-Body, Carburetor				
6104	690723	1	Pin-Hinge, Float				
66105	692078	1	Valve-Needle, Float				
6121	809023	1	Carburetor Overhaul Kit				
34338	691312	1	Gasket-Dipstick				
6							
36633	806131	1	Seal-Shaft, Choke / Throttle				
66633A	690722	1	Seal-Shaft, Choke / Throttle				
66822	690724	1	Seal-O Ring				
34868	691963	1	Seal-Valve				
6							
34883	691613	1	Gasket-Exhaust				
6							
341022	806039	1	Gasket-Cover, Rocker				
6							
361091	691516	1	Cap-Limiter				
61095	808392	1	Valve Gasket Set				

Attachments and Accessories

For 07277 - Workman 2110 Utility Vehicle

Product Name	Model/Part
Stand Alone Windshield Kit	07221
Electric Bed Lift Kit	07262
Rear Lift Kit	07274
Roll-Over Protection System	07276
Receiver Hitch Kit	07278
Heavy-Duty Bumper Kit	07282
Stake Side Kit	07290
Cab	07291
Snow Plow-Mid Duty	07292
Folding Windshield Kit	07293
Windshield Kit	07294
Heavy-Duty Brushguard and Bumper Kit	07296
Canopy Kit	07297
Portable Refreshment Center	07298
Clutch Guard ASM	104-6408-03
Horn Kit	104-6663
Brake and Taillights (Rear lights, side reflectors)	104-6697
Signal Lights (Front marker lights / turn signal control)	104-6953
Key Start Kit	107-0330
Vinyl Enclosure	79979
Spark Arrestor (Meets USDA Forest Service Standard 5100-1A)	98-9099
Electric Harness Kit	99-7924

