 




MODEL NO. 03410-20001 & UP

PARTS CATALOG

REELMASTER® 216 2wd TRACTION UNIT AND ACCESSORIES

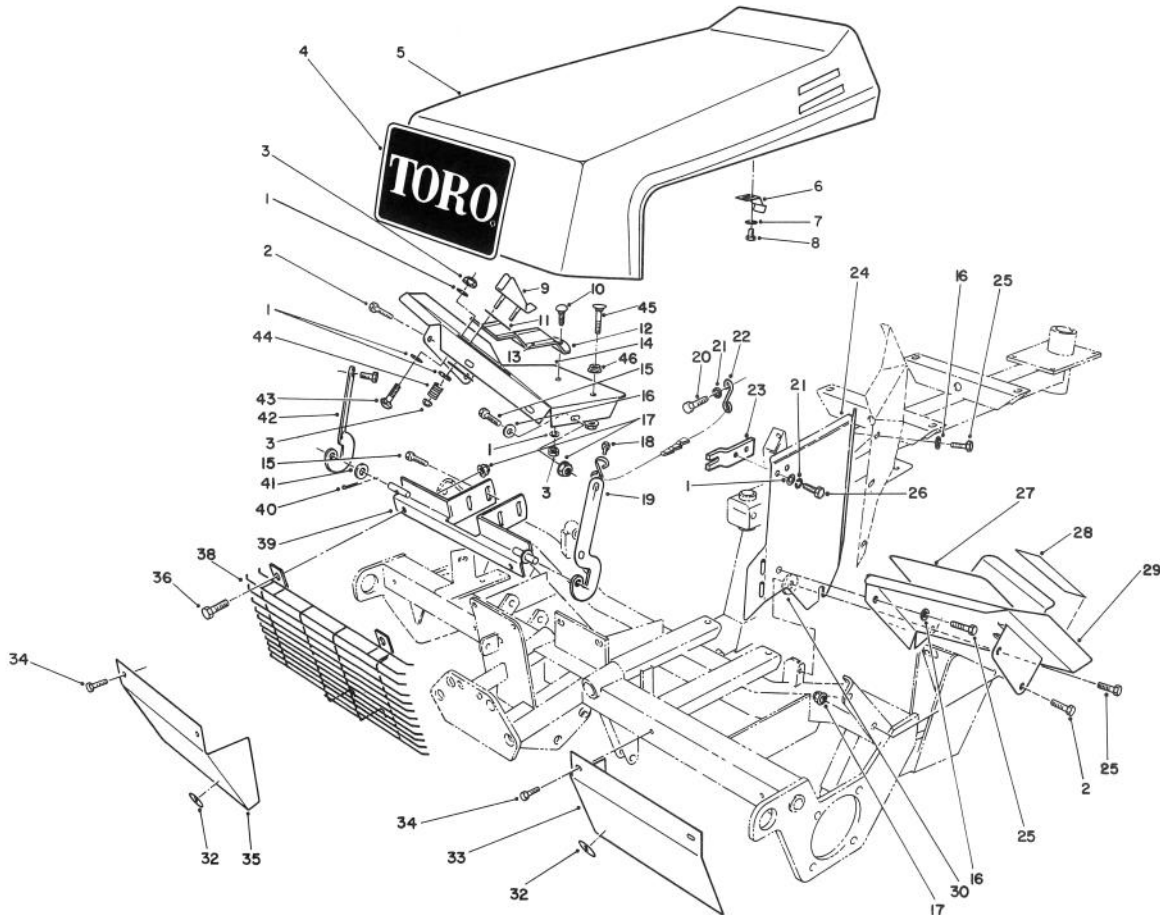


T-0881

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3256-22	Washer - Flat	8	18	32144-22	Screw - Hex. Hd. Self-Tap	4
2	3234-17	Screw- Cap Hex. Hd.	10	19	28-0120	Bracket - Hinge L.H.	1
3	3296-16	Nut - Lock	5	20	321-5	Screw - Cap Hex. Hd.	1
4	62-7400	Decal - Toro Logo	1	21	3253-3	Washer - Lock	3
5	62-5400	Hood Assembly	1	22	76-0130	Hood Stop Chain Assembly	1
6	75-9310	Latch - Hood	1	23	72-9540	Bracket - Heat Shield	1
7	3256-21	Washer - Flat	2	24	72-4150	Shield - Heat	1
8	32104-77	Screw - Hex. Hd. Self-Tap	2	25	322-3	Screw - Cap Hex. Hd.	3
9	62-7320	Stop - Traction Pedal	1	26	321-2	Screw	2
10	3229-1	Bolt - Carriage	2	27	66-6120	Pad-Foot	1
11	62-7350	Slide - Pedal Stop	2	28	84-1650	Decal - Brake	1
12	76-2200	Footrest - Traction	1	29	72-4360	Footrest - L.H.	1
13	76-2260	Pad - Footrest	1	30	62-7190	Spacer	1
14	80-4240	Footrest R.H.	1	32	58-6520	Decal - Grease Fitting	2
15	3234-17	Screw - Cap Hex. Hd.	6	33	61-2970	Shield - Front Grass L.H.	1
16	3256-23	Washer - Flat	1	34	32104-82	Screw - Hex. Hd. Self-Tap	4
17	32128-25	Nut - Flange Lock	6	35	61-2980	Shield - Front R.H.	1

 TPS

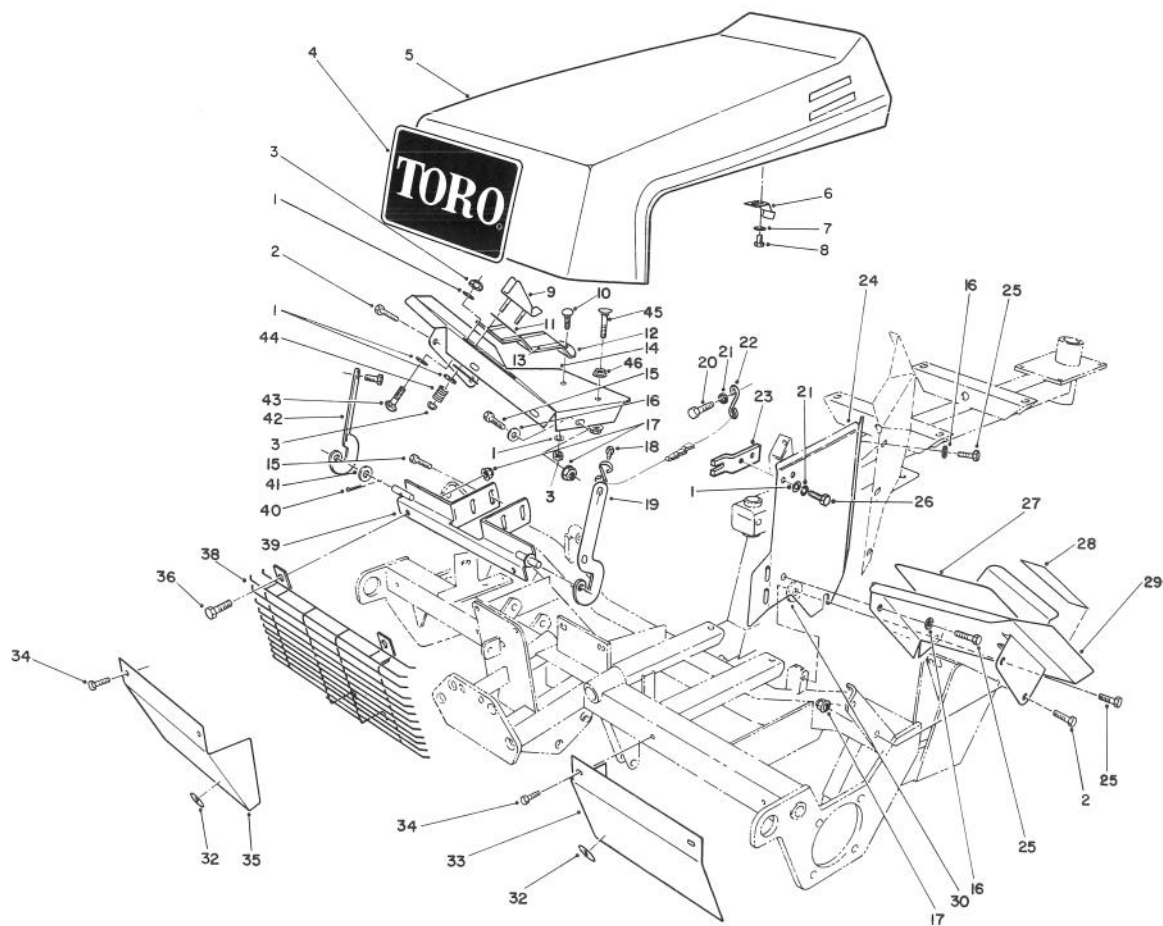


T-0881

HOOD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
36	32122-14	Screw - Truss Hd.	2
38	66-5340	Grille - Front	1
39	61-3010	Support - Hood & Grille	1
40	3272-6	Pin - Cotter	1
41	3256-24	Washer - Flat	1


Ref. No.	Part No.	Description	No. Used
42	28-0130	Bracket - Hinge R.H.	1
43	3229-22	Bolt - Carriage	1
44	10-4850	Spring - Compression	2
45	77-0480	Screw - Traction Stop	1
46	32128-20	Nut - Flange	2

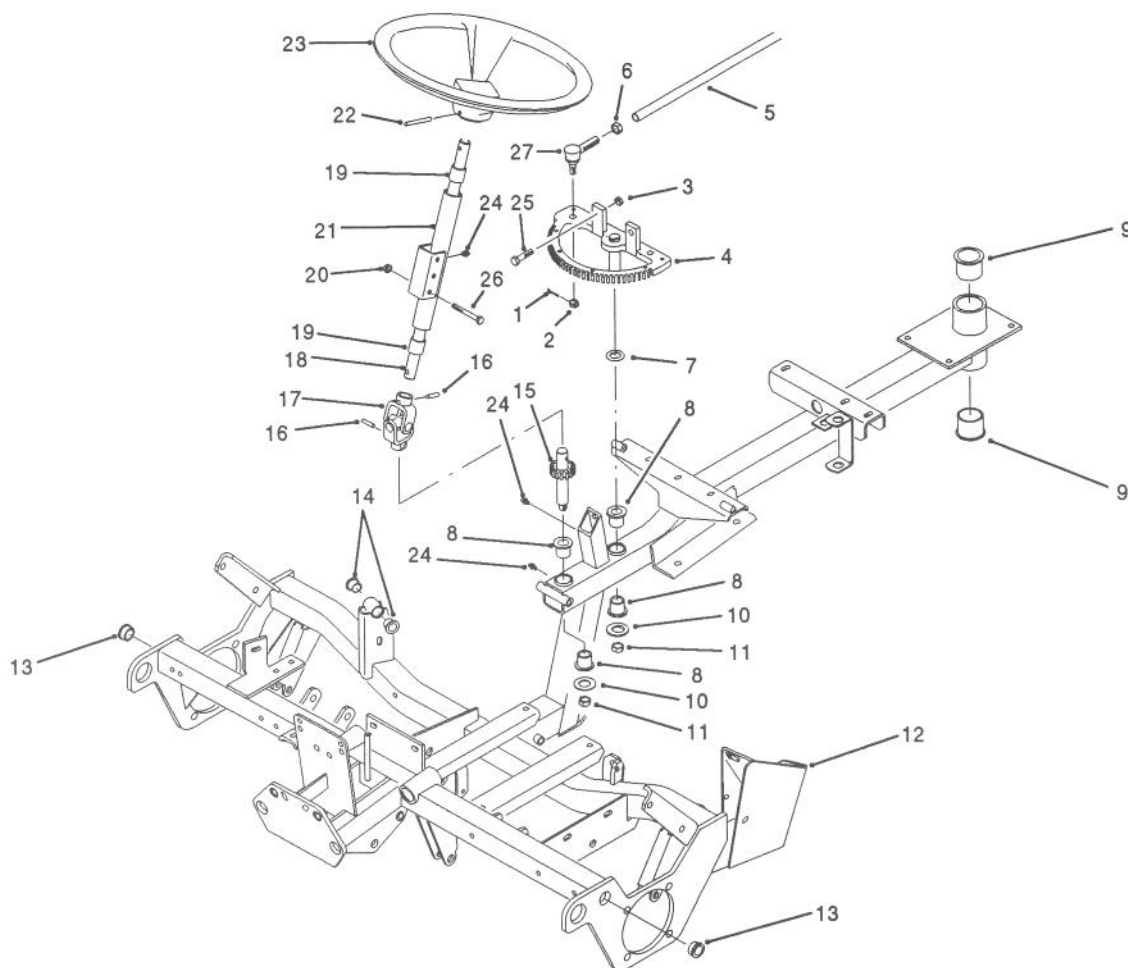 

T-1415

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin - Cotter	1	15	61-2010	Pinion - Steering	1
2	32136-4	Nut - Castle	1	16	32121-15	Pin - Roll	2
3	3218-3	Nut - Jam	2	17	61-3360	Joint - Universal	1
4	61-2040	Rack - Steering	1	18	61-2080	Shaft - Steering	1
5	61-2070	Rod - Steering	1	19	256-27	Bushing - Sleeve	2
6	3220-5	Nut - Jam	1	20	3296-29	Nut - Flange Lock	1
7	3-6498	Washer - Thrust	A/R	21	61-2090	Steering Column Assembly (Incl. Ref. #19)	1
8	256-117	Bushing - Flange	4	22	32121-10	Pin - Roll	1
9	256-245	Bushing - Flange	2	23	76-1420	Wheel - Steering	1
10	3256-26	Washer - Flat	2	24	302-5	Fitting - Grease	3
11	3296-28	Nut - Lock	2	25	32141-84	Screw - Cap Hex. Hd.	2
12	76-2700	Frame Assembly (Incl. Ref. #8, 9, 13 & 14)	1	26	322-12	Screw - Cap Hex. Hd.	1
13	256-247	Bushing - Flange	2	27	21-0140	Rod End Assembly (Incl. Ref. #2)	1
14	256-287	Bushing - Flange	2				

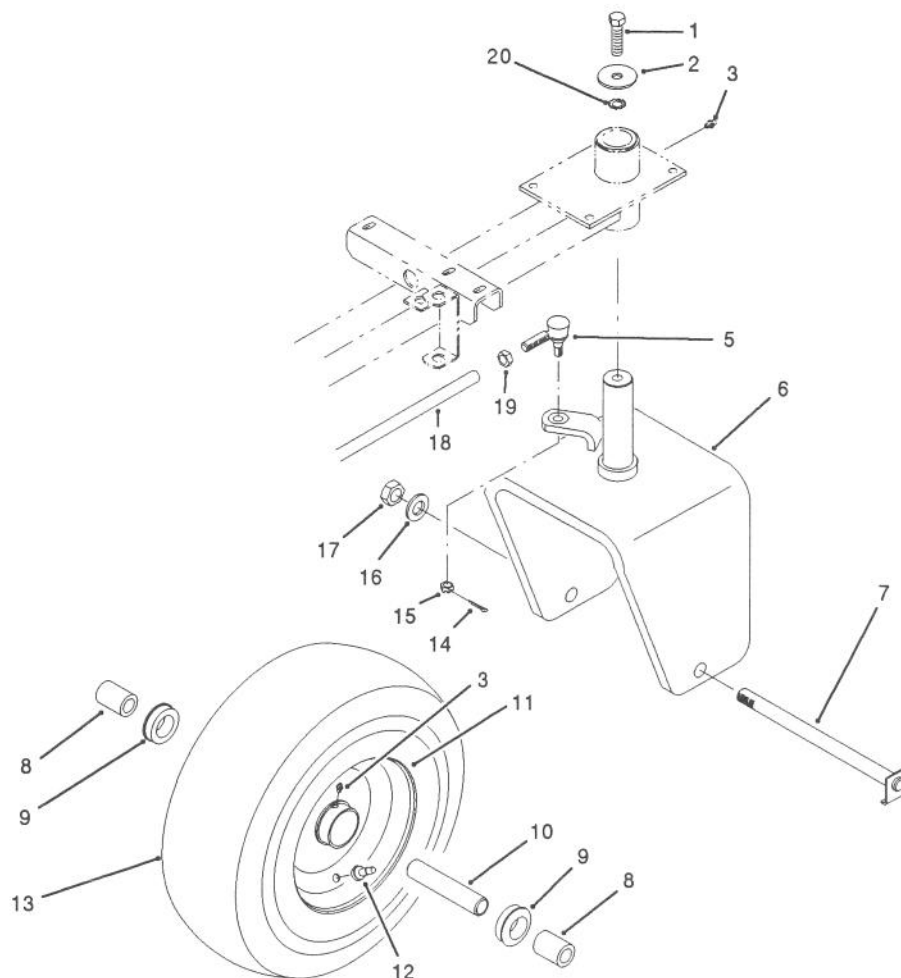 


T-1421

REAR WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	325-7	Screw - Cap Hex. Hd.	1
2	75-7730	Spacer	1
3	302-5	Fitting - Grease	2
5	20-0150	Rod End Assembly (Incl. Ref. #15)	1
6	83-7340	Fork - Caster	1
7	61-1960	Axle - Wheel	1
8	68-4210	Spacer - Wheel	2
9	251-321	Bearing - Wheel	2
10	241-130	Spacer - Bearing	1
11	241-129	Rim	1

Ref. No.	Part No.	Description	No. Used
12	232-47	Valve - Stem	1
13	231-122	Tire	1
14	3272-6	Pin - Cotter	1
15	32136-4	Nut - Castle	1
16	3256-28	Washer - Flat	1
17	3296-51	Nut - Lock	1
18	61-2070	Rod - Steering	1
19	3220-12	Nut - Jam	1
20	3255-2	Washer - Lock	1
*	232-47	Tube - Inner	1

 
*Not Illustrated

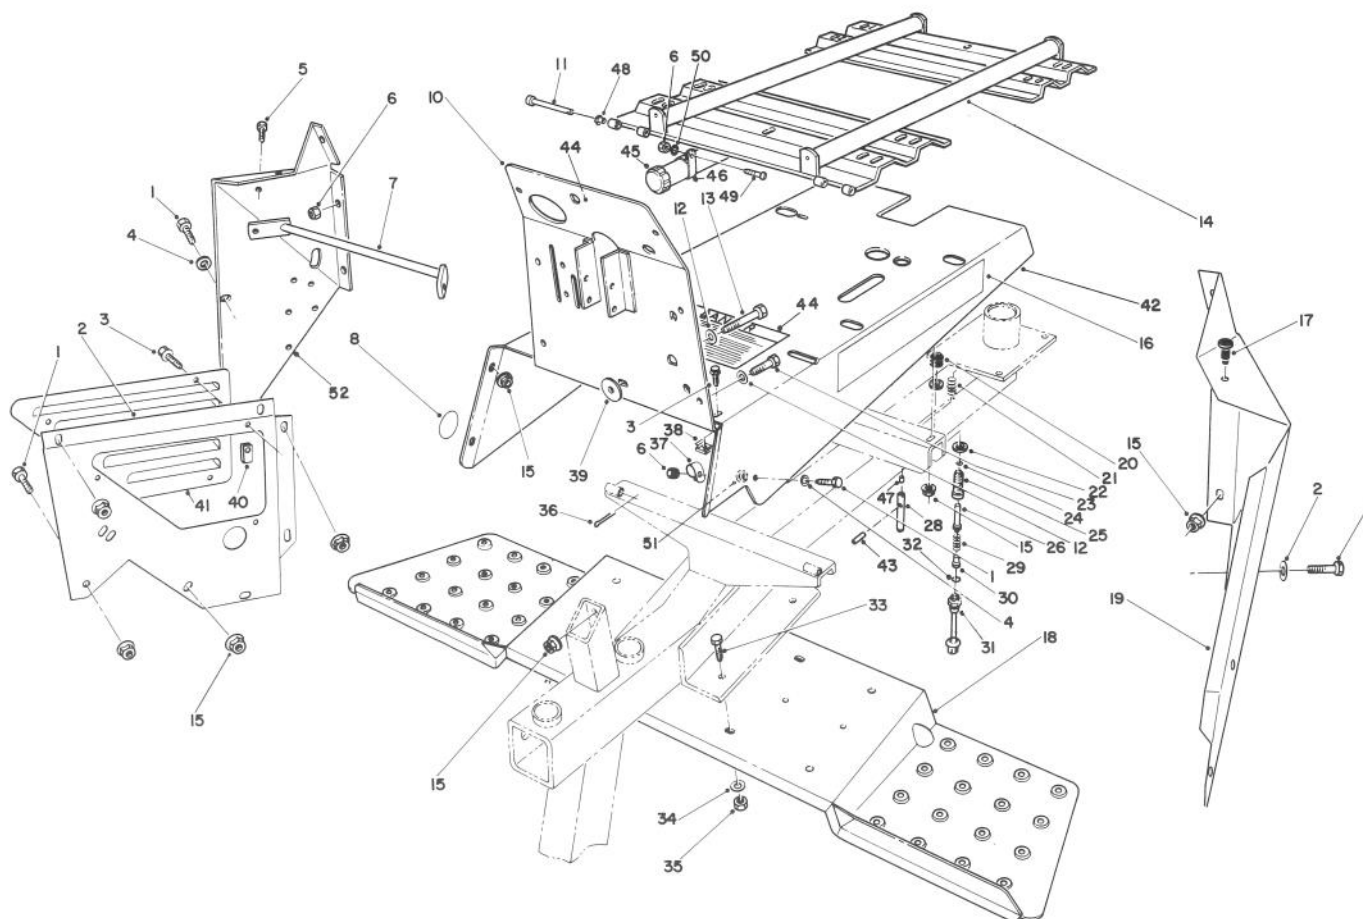

T-1066

SEAT SUPPORT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	322-3	Screw - Hex. Hd. Cap	9	28	27-9870	Pin - Seat Spring	1
2	75-9260	Support - Hydraulic Tank	1	29	43-8600	Spring - Compression	1
3	3234-13	Screw - Hex. Flange Hd.	6	30	43-8610	Guide - Spring & Ball Seat	1
4	3256-23	Washer - Flat	9	31	72-4320	Switch - Neutral	1
5	3234-14	Screw - Hex. Hd. Cap	2	32	237-30	Seal - O-Ring	1
6	3296-29	Nut - Lock	4	33	323-7	Screw - Cap Hex. Hd.	4
7	62-5330	Bracket - Side Panel	1	34	3256-4	Washer - Flat	4
8	58-6520	Decal - Grease Fitting	1	35	3296-39	Nut - Lock	4
10	76-0100	Panel - Instrument	1	36	3272-4	Pin - Cotter	2
11	283-49	Pin - Clevis	2	37	2412-71	Clamp - R	1
12	3256-70	Washer - Flat	7	38	3290-196	Nut - Retainer	3
13	322-45	Screw - Hex. Hd. Cap	1	39	62-7170	Spacer	1
14	76-2670	Plate - Seat	1	40	3290-199	Nut - Speed	3
15	32128-25	Nut - Flange Lock	18	41	76-0500	Cover - Reservoir Support	1
16	61-3840	Decal - Reelmaster 216	2	42	80-0520	Panel	1
17	237-37	Bumper - Rubber	2	43	32121-6	Pin - Roll	1
18	83-9730	Step - Foot	1	44	83-9550	Decal - Warning	1
19	72-4350	Panel - Access L.H.	1	45	74-0720	Tube - Manual	1
20	43-8870	Boot - Switch	1	46	2412-133	Clamp - R	2
21	37-9590	Spring	1	47	28-6180	Pin	1
22	218-461	Nut - Jam	2	48	80-4130	Bushing - Flange	4
23	322-43	Screw - Cap Hex. Hd.	1	49	32122-14	Screw - Truss Hd.	2
24	237-7	Seal - O-Ring	1	50	3256-3	Washer - Flat	2
25	43-8620	Guide - Switch Pin	1	51	237-88	Grommet	1
26	43-8860	Plunger - Switch	1	52	61-3880	Panel - Access R.H.	1
27	3234-17	Screw - Hex. Flange Hd.	2				

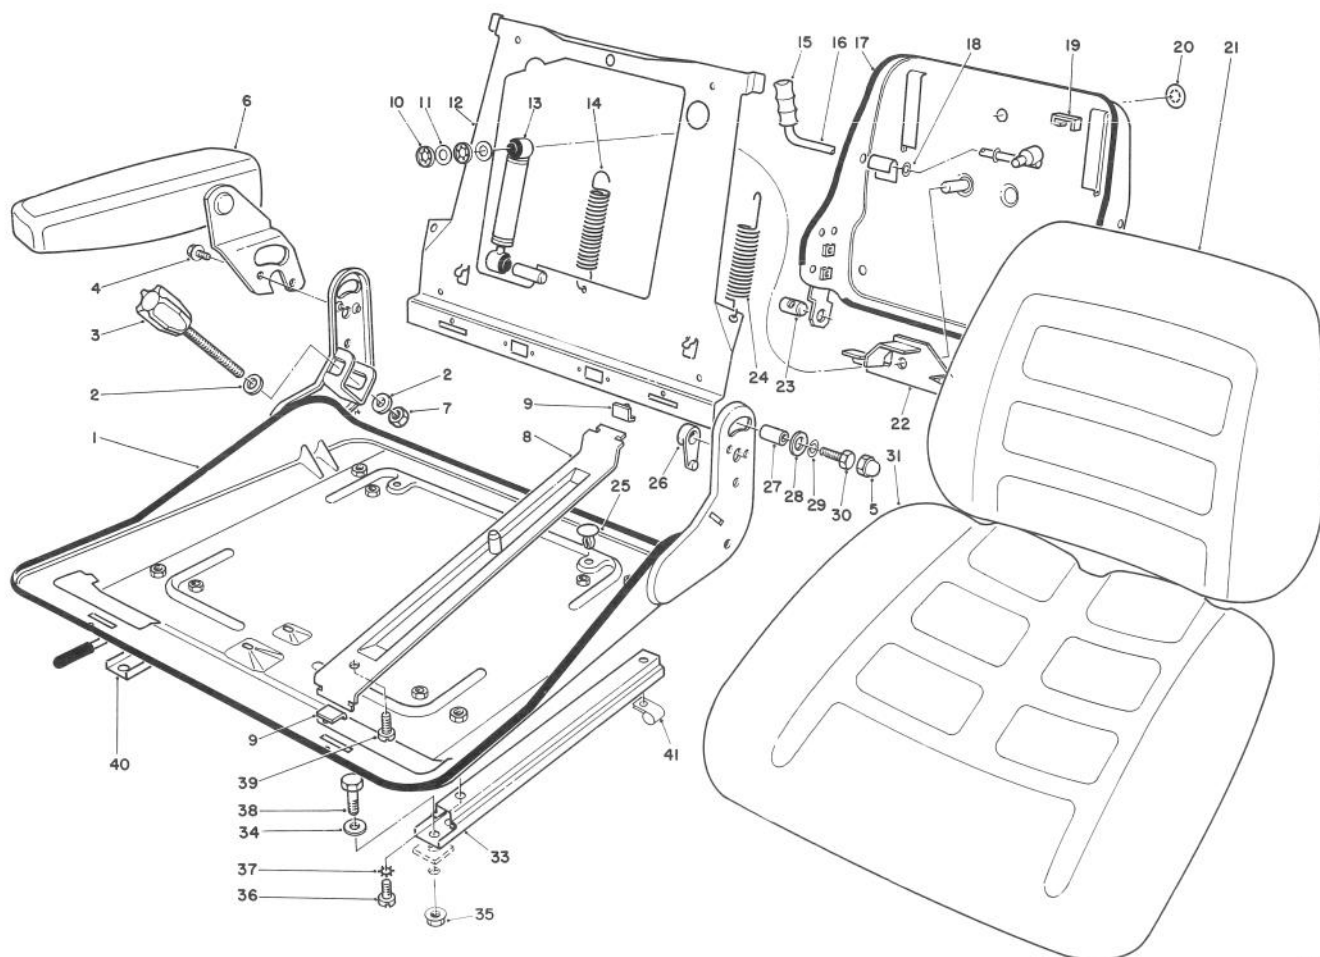 


T-0281

SEAT ASSEMBLY MODEL NO. 30797 (Optional)

Ref. No.	Part No.	Description	No. Used
1	56-3810	Platform - Seat	1
2	56-3880	Washer - Flat	2
3	56-3870	Knob - Adjustment	1
4	56-3850	Screw - Hex. Hd. Machine	2
5	56-3960	Cover - Screw	4
6	55-4331	Arm Rest Assembly R.H.	1
	55-4330	Arm Rest Assembly L.H.	1
7	56-3890	Nut - Hex.	1
8	56-3970	Carrier - Seat	2
9	56-3980	Clip - Rail	4
10	56-4080	Clamp - Axle	2
11	39-9500	Washer - Flat	2
12	56-4040	Plate - Back	1
13	62-7670	Shock Absorber - Seat	1
14	56-4050	Spring - Extension	1
15		Grip - Cover	1
16	56-4150	Lever - Handle (Incl. Ref. #15)	1
17	56-3820	Cover - Seat Sack	1
18	56-4160	Washer - Flat	2
19	56-4130	Bumper	2
20	56-4120	Cover	1
21	56-3800	Cushion - Seat Back	1
22	56-4100	Bracket - Lever	1

Ref. No.	Part No.	Description	No. Used
23	56-4170	Pin - Clevis	1
24	56-4060	Spring - Extension	1
25	56-4190	Cap - Seat	2
26	56-3900	Spacer - Arm L.H.	1
	56-3910	Spacer - Arm R.H.	1
27	56-3920	Bushing - Sleeve	4
28	56-3930	Washer - Flat	4
29	56-3940	Washer - Lock	4
30	56-3950	Screw - Cap Hex. Hd.	4
31	76-2240	Cushion - Seat Bottom	1
32	55-8380	Seat Wire Assembly	1
33	40-3820	Bottom Rail Assembly L.H.	1
34	3256-23	Washer - Flat	4
35	32128-25	Nut - Flange Lock	4
36	56-4020	Screw - Machine	4
37	56-4030	Washer - Lock	4
38	322-3	Screw - Cap Hex. Hd.	4
39	56-3990	Screw - Machine	2
40	40-3790	Bottom Rail Assembly R.H.	1
41	2412-67	Clamp - R	1
*	76-2230	Seat Assembly (Incl. Ref. #1-3, 5, 7-31, 33, 36-37 & 39-40)	1

 *Not Illustrated

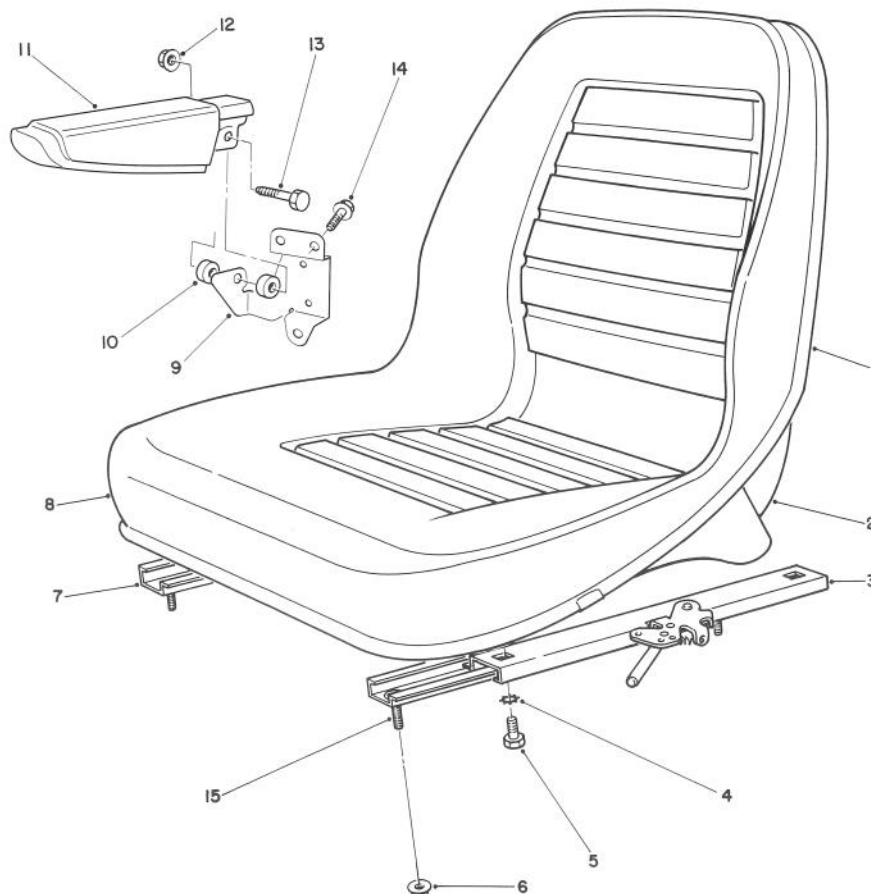


T-1070

SEAT ASSEMBLY MODEL NO. 30796 (Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Trim	1	†9	69-0770	Bracket - Arm R.H.	1
2		Shell	1		69-0760	Bracket - Arm L.H.	1
3	80-4260	Adjuster - L.H.	1	†10	69-1260	Spacer	4
4	3255-8	Washer - Ext. Tooth Lock	4	†11	69-1180	Armrest	2
5	322-2	Capscrew - Hex. Hd.	4	†12	32128-19	Nut - Flange	2
6	32128-25	Nut - Hex. Flange	4	†13	323-9	Screw - Cap Hex. Hd.	2
7	80-4250	Adjuster - R.H.	1	†14	3234-23	Screw - Hex. Flange	6
8		Cushion	1	15	3230-1	Bolt - Carriage	4
*	66-5400	Seat Assembly (Inc. Ref. #1, 2 & 8)	1				

*Not Illustrated

 †Optional item

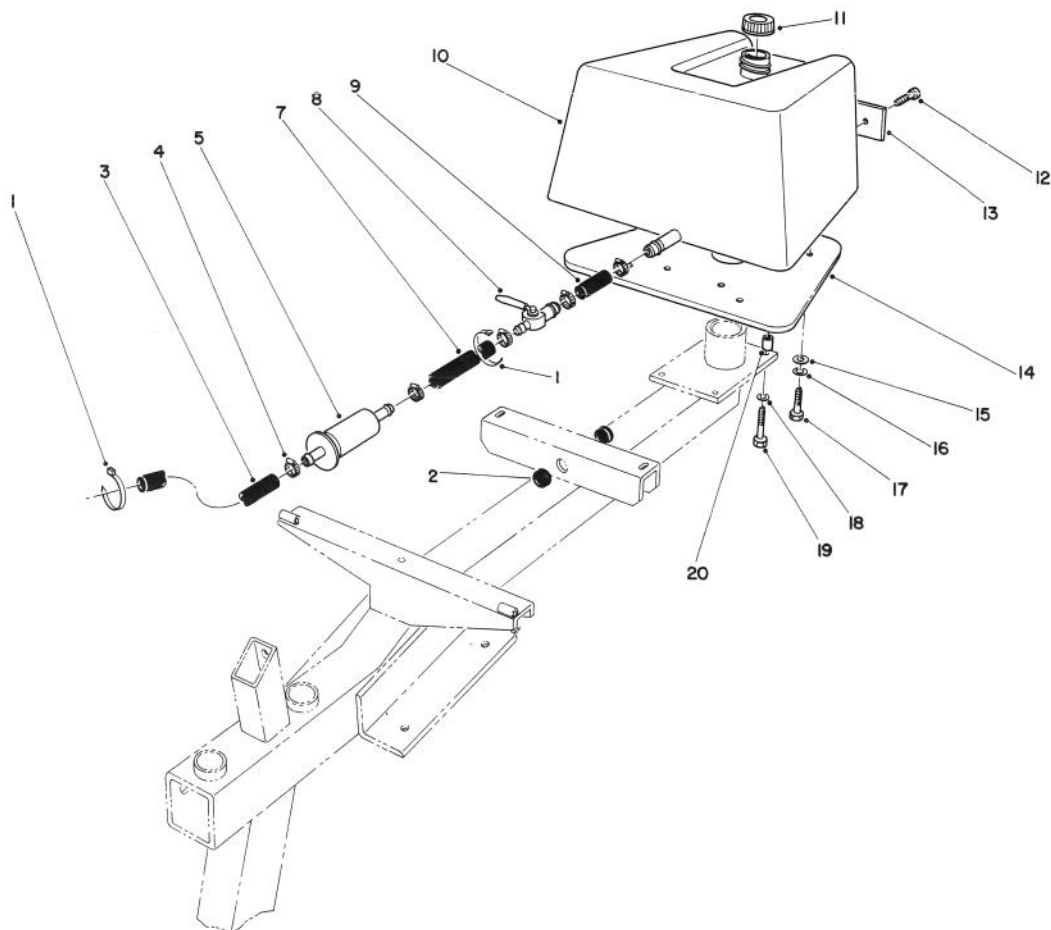

T-1067


FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290-379	Tie - Cable	2
2	237-125	Grommet	2
3	47-2980	Hose - Fuel	1
4	2412-36	Clamp - Hose	6
5	38-8000	Filter - Fuel	1
7	47-2988	Hose - Fuel	1
8	61-3550	Valve - Ball	1
9	56-2230	Hose - Fuel	1
10	61-0030	Tank-Fuel	1
11	55-3570	Cap-Fuel	1
12	3290-470	Screw - Machine	2

Ref. No.	Part No.	Description	No. Used
13	61-3310	Plate - Toro Logo	1
14	61-2680	Weight - Standard	1
*	62-5140	Weight - 8 Blade (Optional)	1
15	3256-23	Washer - Flat	4
16	3253-4	Washer - Lock	4
17	322-3	Capscrew - Hex. Hd.	4
18	3253-21	Washer - Lock	4
19	323-9	Capscrew - Hex. Hd.	4
†20	61-2220	Spacer	4

*Not Illustrated

 †Use with 5 blade cutting units only.

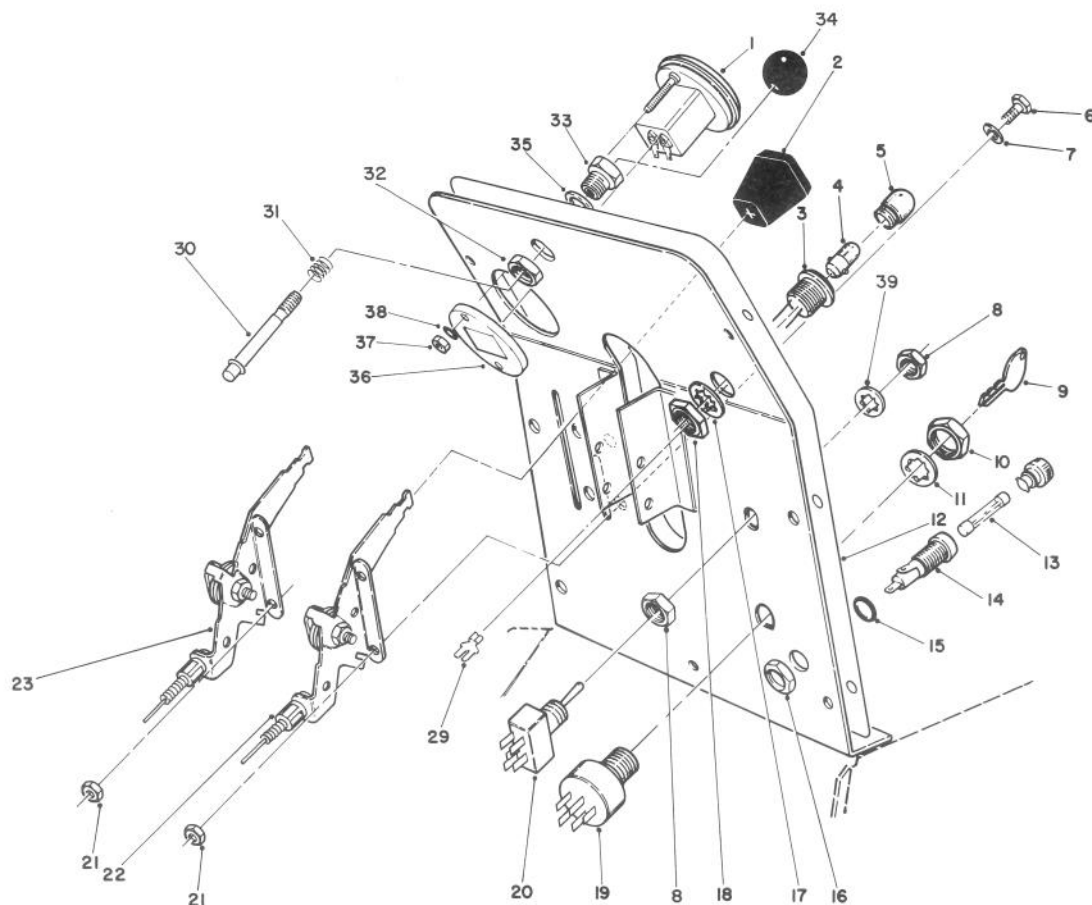


T-0264

INSTRUMENT PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-2950	Meter - Hour (Incl. Ref. #36-38)	1
2	66-0120	Knob	2
3	44-2212	Lamp - Pilot (Incl. Ref. #4, 5 & 17-18)	1
†4	219-18	Bulb- Light (GE #1893)	1
5	218-562	Lens	1
6	321-39	Screw - Cap Hex. Hd.	4
7	3256-1	Washer - Flat	4
8	3218-19	Nut - Hex.	2
9	63-8360	Key	1
10	218-461	Nut	1
11	3254-5	Washer - Lock	1
12	76-0110	Decal - Instrument Panel	1
†13		Fuse - 30 Amp.	1
14	218-489	Fuse Holder Assembly (Incl. Ref. #15-16)	1
15		Seal - O-Ring	1
16		Nut-Hex.	1
17	218-536	Washer - Lock	1

Ref. No.	Part No.	Description	No. Used
18	218-535	Nut	1
19	23-0660	Switch - Key (Incl. Ref. #9-11)	1
20	85-4980	Switch - Clutch (Incl. Ref. #8 & 39)	1
21	3296-42	Nut - Lock	4
22	80-4120	Control - Choke	1
23	80-4110	Control - Throttle	1
29	218-582	Tab Adaptor	2
30	75-9330	Pin - Hood Latch	1
31	5-4723	Spring - Compression	1
32	3218-5	Nut - Hex. Jam	1
33	75-9320	Bushing - Hood Latch	1
34	233-17	Knob	1
35	3256-26	Washer - Flat	1
36		Retainer	1
37		Nut	2
38		Washer	2
39	3254-20	Washer - Lock	1

 †Obtain Locally

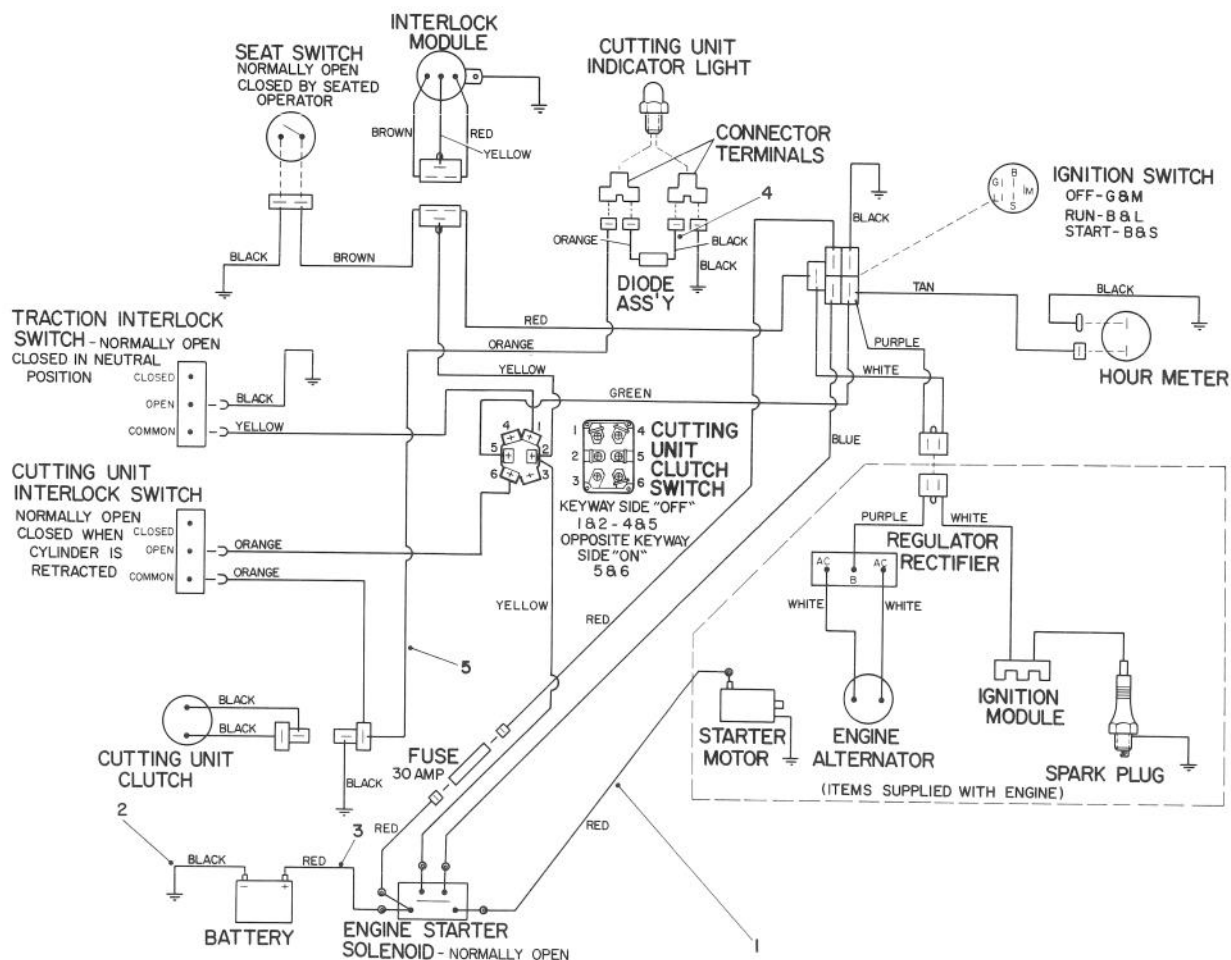


T-1068

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	61-2660	Wire - Solenoid/Starter	1
2	61-2670	Wire - Ground	1
3	10-7130	Wire - Battery/Solenoid	1

Ref. No.	Part No.	Description	No. Used
4	72-9560	Wire - Harness/Diode	1
5	85-6800	Wire Harness Assembly	1

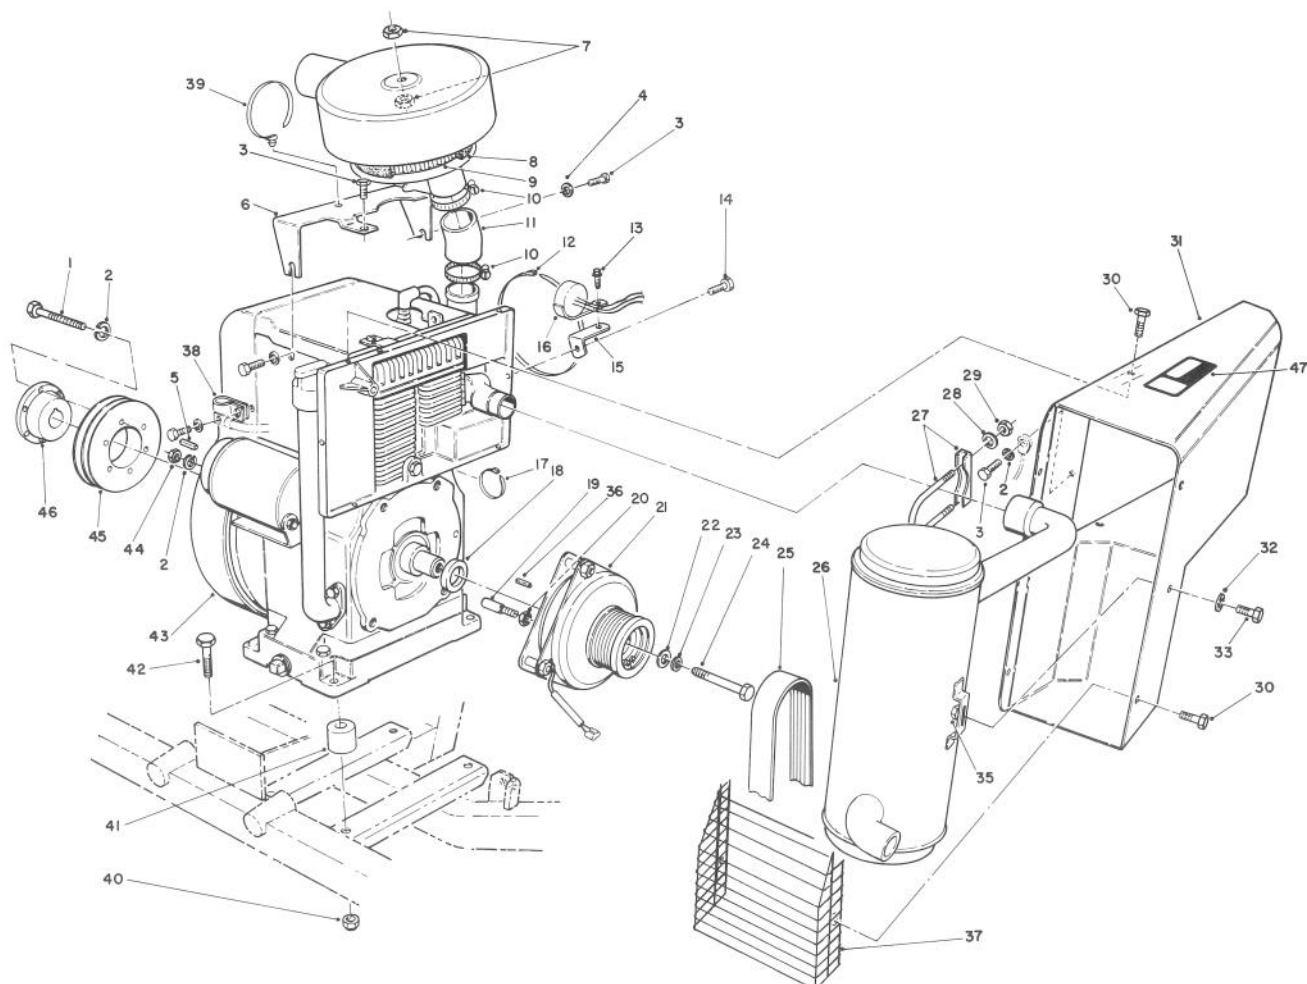 


T-0266

ENGINE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321-13	Screw - Cap Hex. Hd.	3
2	3253-3	Washer - Lock	3
3	3234-4	Screw - Cap Hex. Hd.	3
4	3255-7	Washer - Lock	1
5	10-7070	Key - Square	1
6	61-2120	Bracket - Air Cleaner	1
7	3296-56	Nut - Lock	2
8		Precleaner - Air Cleaner	1
9		Element - Air Cleaner	1
10	2412-92	Clamp - Hose	2
11	61-3470	Hose	1
12	3333-975	Tie - Cable	1
13	11-9760	Screw - Tapping	1
14	3234-4	Screw - Cap Hex. Hd.	1
15	76-0070	Bracket - Interlock Module	1
16	59-9810	Module - Ignition	1
17	3290-378	Tie - Cable	1
18	70-7080	Spacer - Clutch	1
19	61-2170	Stop - Clutch	1
20	3218-3	Nut - Jam	1
21	70-8020	Clutch Assembly	1
22	70-8040	Washer - Flat	1
23	3253-27	Washer - Lock	1
24	3213-9	Capscrew - Hex. Hd.	1
25	61-3390	Belt - Poly-V	1

Ref. No.	Part No.	Description	No. Used
26	84-1850	Muffler	1
27	2112-9	Clamp - Muffler (Incl. Ref. #28-29)	1
28	3253-4	Washer - Lock	2
29	3217-6	Nut - Hex.	2
30	12-3270	Screw - Cap Hex. Hd.	8
31	61-0020	Shroud - Muffler	1
32	3256-70	Washer - Flat	2
33	322-46	Screw - Cap Hex. Hd.	2
35	32128-25	Nut - Lock	2
36	70-8030	Key	1
37	84-1840	Grille - Muffler	1
38	2412-41	Clamp - R	1
39	3290-410	Tie - Push Mount	1
40	3296-39	Nut - Lock	4
41	61-2220	Spacer - Engine	4
42	323-47	Screw - Cap Hex. Hd.	4
43		Engine - Kohler Model No. M16 Spec. No. 711563	1
44	3218-1	Nut - Hex.	1
45	61-3330	Pulley - Engine	1
46	61-3340	Bushing - Taper (Incl. Ref. #1-2)	1
47	66-6840	Decal - Hot	1

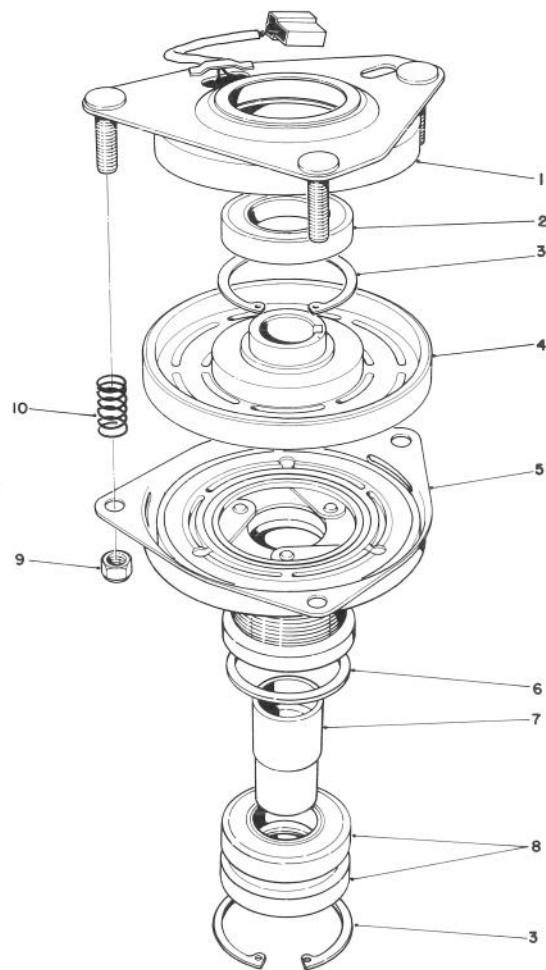 


T-0267

ELECTRIC CLUTCH ASSEMBLY NO. 70-8020

Ref. No.	Part No.	Description	No. Used
1	44-8350	Field Assembly (Incl. Ref. #2 & 3)	1
2	251-292	Bearing - Field	1
3	44-8310	Ring - Retaining	2
4	44-8360	Field Coil, Rotor & Bearing Assembly (Incl. Ref. #1)	1

Ref. No.	Part No.	Description	No. Used
5	62-5250	Armature & Pulley Assembly (Incl. Ref. #3, 6, 7 & 8)	1
6	44-8330	Spacer - Pulley Bearing	1
7	76-0080	Collar - Bearing	1
8	251-291	Bearing - Pulley	2
9	3296-6	Nut - Lock	3
10	44-8320	Spring - Compression	3

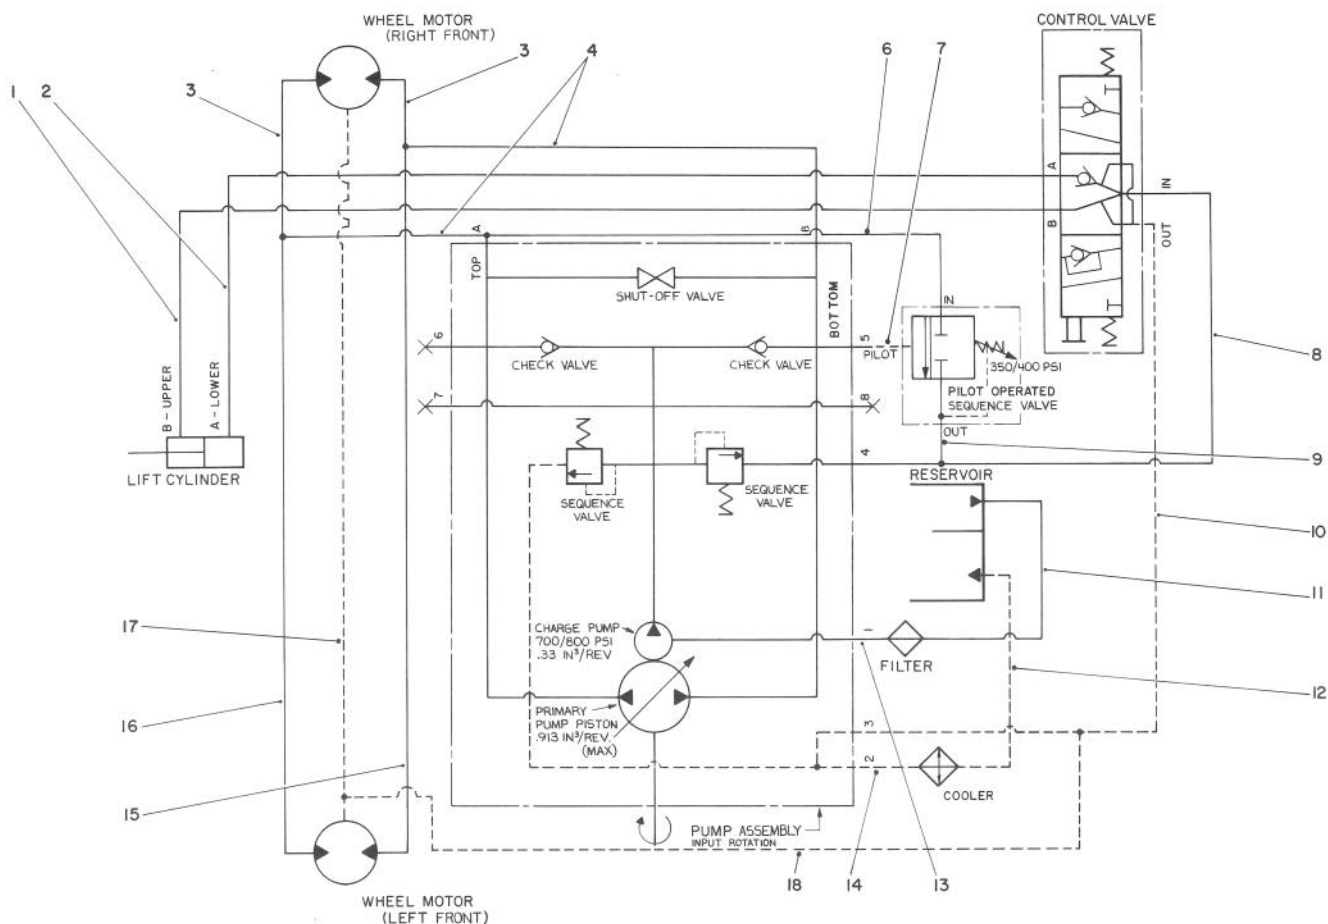 


T-0268

HYDRAULIC SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	61-2500	Hose Assembly	1
2	61-2490	Hose Assembly	1
3	61-3060	Tube - Hydraulic R.H.	2
4	76-2520	Hydraulic Hose Assembly	2
6	76-2530	Hose - Hydraulic	1
7	63-4890	Hose - Hydraulic	1
8	61-2520	Hydraulic Hose Assy. Upper	1
9	63-4880	Hose - Hydraulic	1
10	61-2510	Hydraulic Hose Assy. Lower	1

Ref. No.	Part No.	Description	No. Used
11	61-2550	Hose - Hydraulic	1
12	63-5180	Hose - Hydraulic	1
13	61-2540	Hose - Hydraulic	1
14	76-2580	Hose - Hydraulic	1
15	61-3070	Tube - Hydraulic L.H. Rear	1
16	61-3080	Tube - Hydraulic L.H. Front	1
17	76-2550	Hose - Hydraulic	1
18	76-2540	Hose - Hydraulic	1

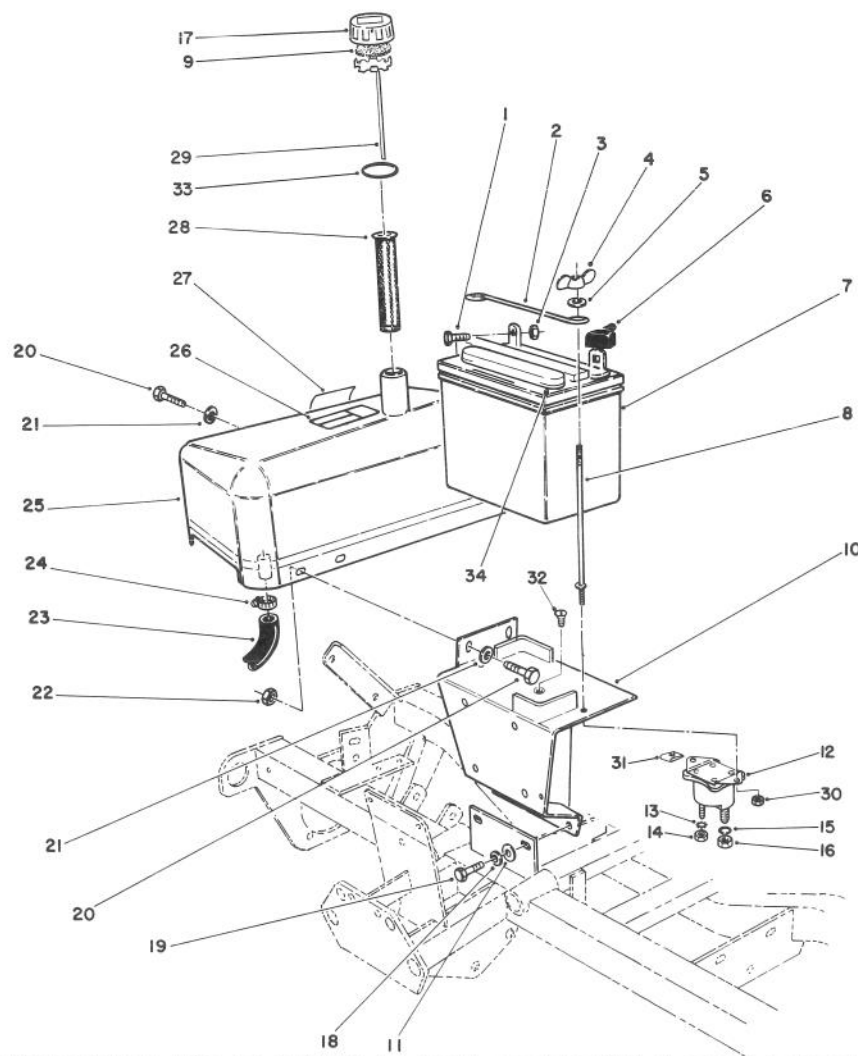 


T-0269

HYDRAULIC TANK & BATTERY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-3	Screw - Cap Hex. Hd.	2
2	72-4790	Clamp - Battery	1
3	3217-6	Nut - Hex.	2
4	32103-12	Nut - Wing	2
5	3256-1	Washer - Flat	2
6	28-8080	Boot - Battery Terminal	1
7	82-4640	Battery - 12 Volt	1
8	10-8120	Bolt - Battery	2
9	76-0220	Foam - Oil Filter	1
10	76-0440	Battery Support W.A.	1
11	3256-24	Washer - Flat	2
12	28-4210	Solenoid - Starter	1
13	3254-1	Washer - Lock	2
14	3219-14	Nut - Hex.	2
15	3253-4	Washer - Lock	2
16	3218-13	Nut-Lock	2
17	76-0190	Cap-Oil	1
18	3253-21	Washer - Lock	2

Ref. No.	Part No.	Description	No. Used
19	11-0590	Screw- Cap Hex. Hd.	2
20	322-43	Screw - Cap Hex. Hd.	4
21	3256-70	Washer - Flat	4
22	32128-25	Nut- Lock	2
23	63-5180	Hose - Hydraulic	1
24	2412-34	Clamp - Hose	1
25	61-0100	Tank - Hydraulic	1
26	66-6840	Decal - Hot	1
27	58-6530	Decal - Oil	1
28	61-2790	Screen - Filler	1
29	76-0240	Dipstick Assembly	1
30	32149-2	Nut - Hex.	2
31	3290-199	Nut - Speed	1
32	32108-101	Screw - Flathead	1
33	237-71	O-Ring	1
34	84-1830	Cap - Battery Vent	6
*	76-0200	Oil Cap Assembly (Incl. Ref. #9, 17, 29 & 33)	1

 *Not Illustrated

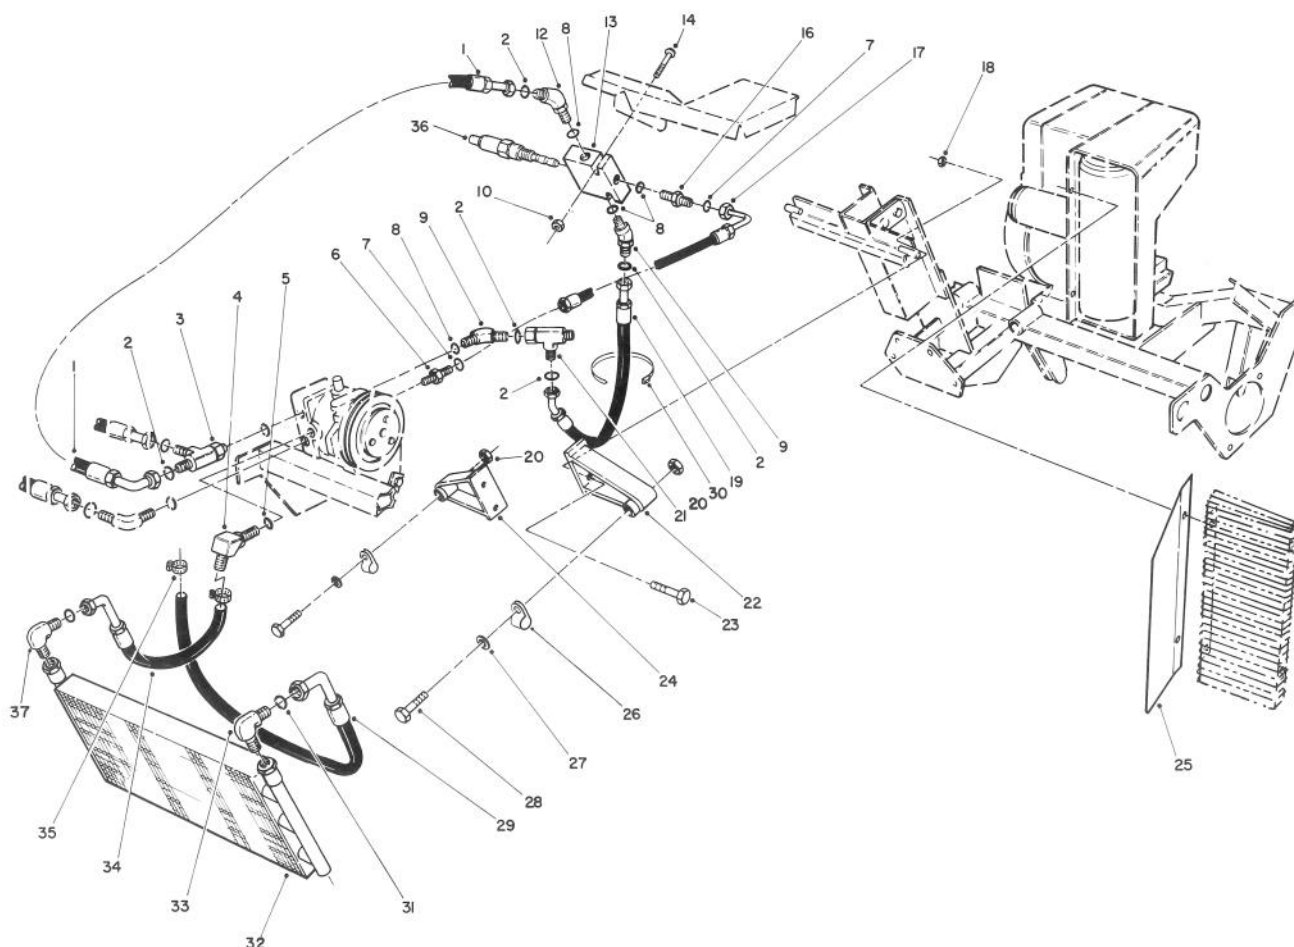


T-0270

HYDRAULIC OIL COOLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-2530	Hydraulic Hose Assembly	1	21	340-104	Fitting - Male/Female Tee (Incl. Ref. #2)	1
2	237-30	Seal - O-Ring	5	22	63-5340	Bracket - Cooler L.H.	1
3	340-109	Fitting - Male Tee (Incl. Ref. #2)	1	23	322-4	Screw - Hex. Washer Hd.	4
4	353-379	Fitting - Hydraulic 45° (Incl. Ref. #5)	1	24	63-5350	Bracket - Cooler R.H.	1
5	237-79	Seal - O-Ring	1	25	63-8940	Shield - Cooler	1
6	340-107	Fitting - Straight (Incl. Ref. #5)	1	26	2412-39	Clamp - R	2
7	237-150	Seal - O-Ring	2	27	3256-24	Washer - Flat	2
8	237-22	Seal - O-Ring	4	28	323-10	Screw - Cap Hex. Hd.	2
9	340-96	Fitting - 45° Elbow (Incl. Ref. #2 & 6)	2	29	63-5180	Hydraulic Hose Assembly	1
10	32128-32	Nut - Hex. Flange	2	30	3290-379	Tie - Cable	1
12	63-8770	Fitting - 45° Orifice (Incl. Ref. #2 & 6)	1	31	237-151	Seal - O-Ring	2
13	63-5080	Pressure Sequence Valve (Incl. Ref. #10)	1	32	63-5400	Exchanger - Heat	1
14	321-11	Screw - Cap Hex. Hd.	2	33	340-108	Fitting - 90° Male Elbow (Incl. Ref. #29)	1
16	340-1	Fitting - Straight (Incl. Ref. #5 & 6)	1	34	76-2580	Hydraulic Hose Assembly	1
17	63-4890	Hydraulic Hose Assembly	1	35	2412-34	Clamp - Hose	1
18	3296-29	Nut - Hex.	4	36	63-8790	Cartridge Valve Assembly	1
19	63-4880	Hydraulic Hose Assembly	1	37	353-372	Fitting - 90° Elbow (Incl. Ref. #31)	1
20	3296-39	Nut - Hex.	2	*	63-8800	Seal Kit Pressure Sequence Valve (For Ref. #10 & 12)	1
				*	56-7982	Sleeve - Protective	1

 *Not Illustrated

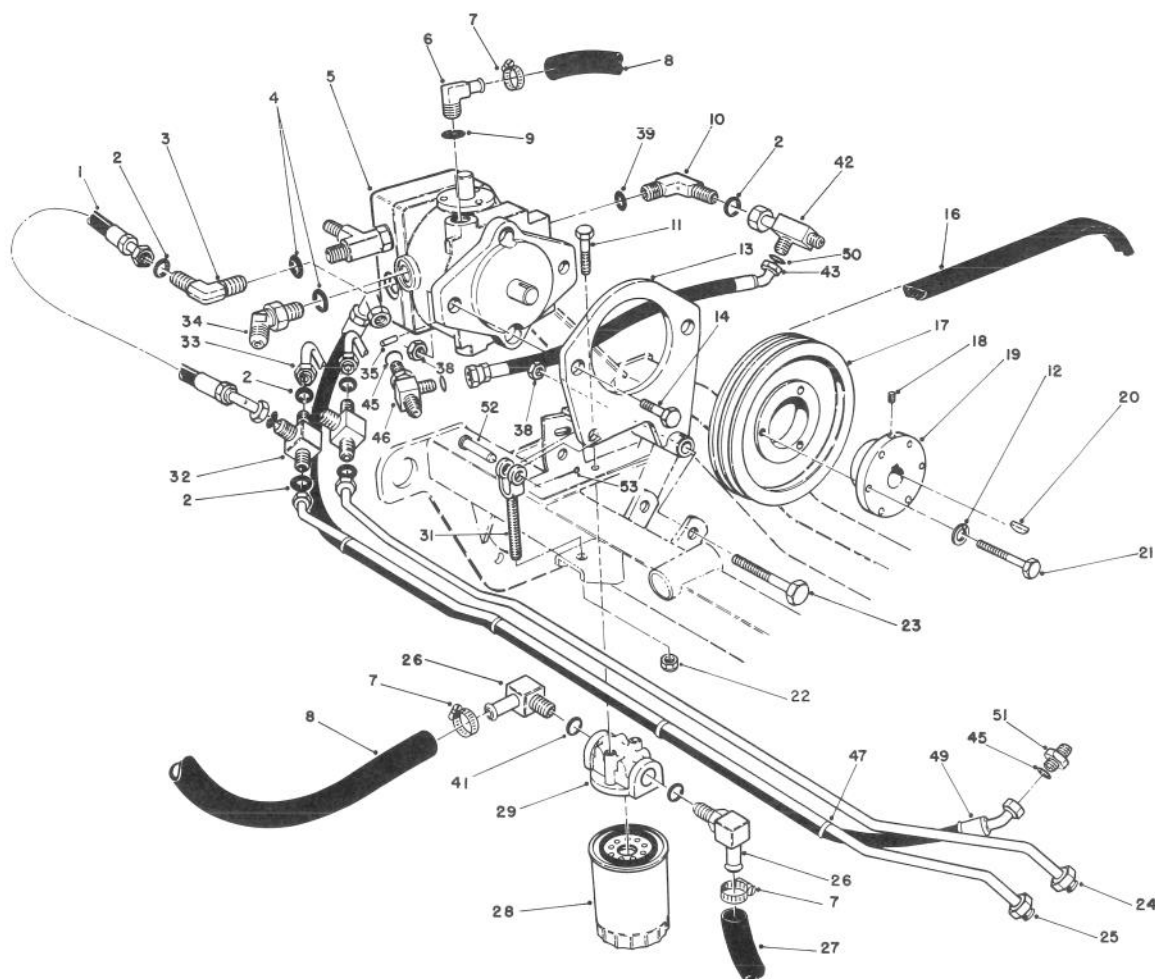


T-0271

HYDRAULIC DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-2520	Hydraulic Hose	2
2	237-30	O-Ring	10
3	340-98	Fitting - 90° Elbow (Incl. Ref. #2 & 4)	1
4	237-79	O-Ring	2
5	85-4920	Pump Assembly (Incl. Ref. #20)	1
6	61-2710	Fitting - 90° Hose Elbow (Incl. Ref. #9)	1
7	2412-3	Clamp - Hose	4
8	61-2540	Hose - Hydraulic	1
9	237-80	O-Ring	1
10	340-96	Fitting - 45° Elbow (Incl. Ref. #2 & 39)	3
11	3234-4	Screw - Hex Washer Hd.	2
12	3253-3	Washer - Lock	3
13	61-2230	Plate - Pump Mount	1
14	325-7	Screw - Cap Hex Hd.	2
16	61-3400	V-Belt - Pump	1
17	61-3320	Pulley- Pump	1
18	3245-9	Screw- Set	1
19	61-3350	Bushing - Tapes (Incl. Ref. #12, 18 & 21)	1
20	3257-32	Key - Woodruff	1
21	321-13	Screw- Cap Hex Hd.	3
22	3296-6	Nut - Lock	1
23	325-18	Screw - Cap Hex Hd.	1

Ref. No.	Part No.	Description	No. Used
24	61-3080	Tube - Hyd. L.H. (Front)	1
25	61-3070	Tube - Hyd. L.H. (Rear)	1
26	23-8910	Fitting - 90° Hose Elbow (incl. Ref. #41)	2
27	61-2550	Hose - Hydraulic	1
28	54-0110	Filter - Oil	1
29	61-3770	Head - Filter	1
31	76-2220	Adjustment Yoke Assembly	1
32	340-102	Fitting - Tee (Incl. Ref. #2)	2
33	61-3060	Tube - Hydraulic R.H.	2
34	353-379	Fitting - 45° Elbow (Incl. Ref. #4)	1
35	32121-34	Pin - Roll	1
38	3296-23	Nut - Lock	3
39	237-22	O-Ring	2
41	237-117	O-Ring	2
42	340-104	T-Fitting	1
43	76-2540	Hose Assembly - Hyd.	1
45	237-30	O-Ring	3
46	340-140	Fitting - Tee	1
47	3290-379	Cable Tie	4
49	76-2550	Hose Assembly	1
50	237-78	O-Ring	1
51	340-92	Fitting	1
52	283-2	Pin - Yoke	1
53	3272-6	Pin - Cotter	1

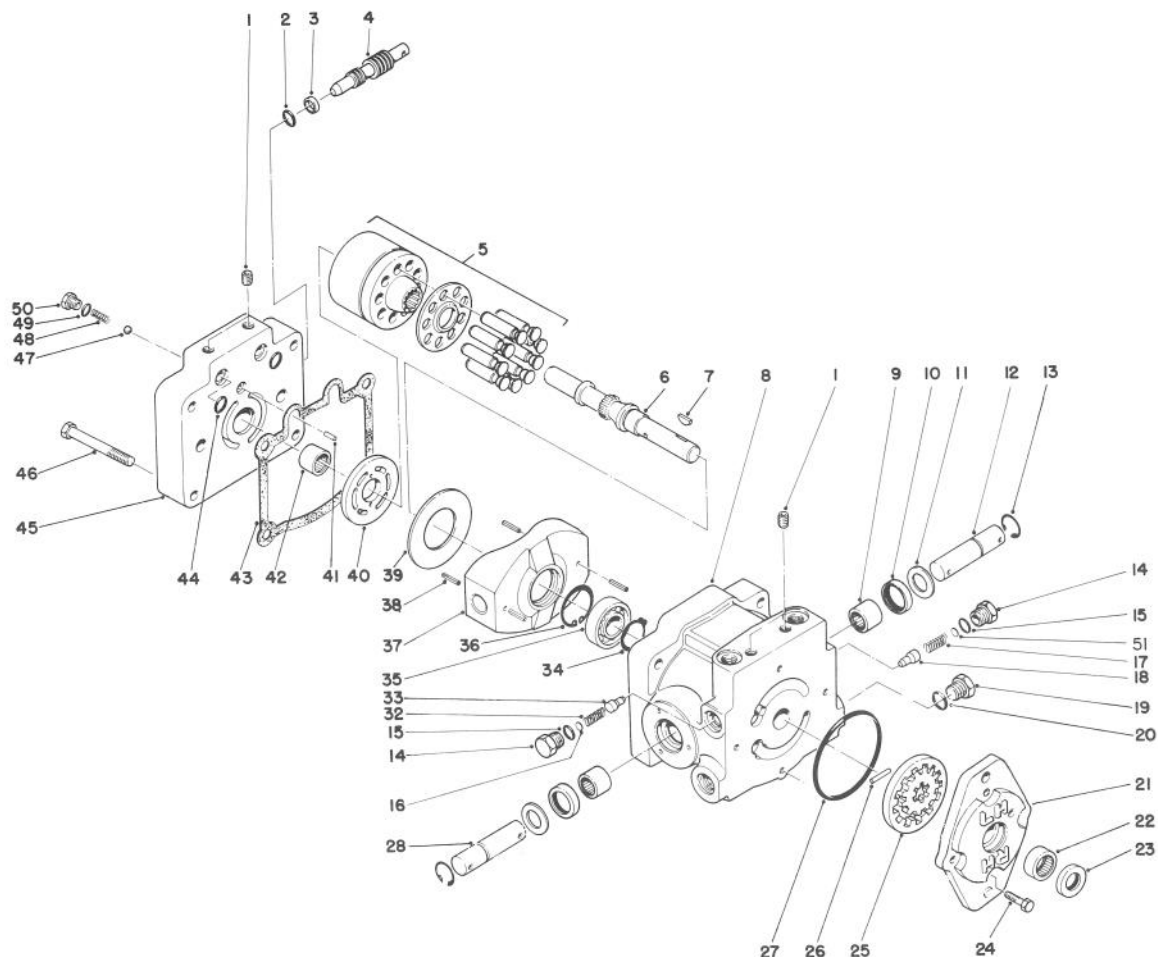 


T-0245

HYDRAULIC PUMP ASSEMBLY NO. 85-4920

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	285-17	Plug - Pipe	6	25	25-2680	Gerotor Assembly	1
2	237-22	O-Ring	1	26	25-2530	Pin - Straight	1
3	25-2630	Ring	1	27	237-95	O-Ring	1
4	25-2620	Valve - By-Pass	1	28	49-8480	Shaft - Trunion	1
5	48-1800	Cylinder Block Kit	1	32	25-2480	Spring - Charge Relief	1
6	67-8020	Shaft - Pump	1	33	28-3420	Cone - Charge Relief	1
7	3257-32	Key - Woodruff	1	34	32120-15	Ring - Retaining	1
8	85-4920	Hydraulic Pump Assembly (Complete)	1	35	251-8	Bearing - Ball	1
9	252-82	Bearing - Needle	2	36	32120-11	Ring - Retaining	1
10	25-3210	Seal - Lip	2	37	25-2450	Swash/Plate	1
11	25-2510	Washer	2	38	32121-91	Pin - Coiled Spring	3
12	25-2580	Shaft - Trunion	1	39	25-2380	Plate - Thrust	1
13	32151-46	Ring - Retaining	2	40	25-2390	Plate - Valve	1
14	25-2460	Plug	2	41	25-2430	Pin - Straight	1
15	237-86	O-Ring	2	42	67-8080	Bearing - Needle	1
16	25-2470	Kit - Shim Pack	2	43	25-2400	Gasket	1
17	25-2570	Spring - Relief Valve	1	44	62-4290	O-Ring	2
18	25-2560	Cone - Relief Valve	1	45	67-8090	Cap - Pump End	1
19	67-8030	Plug Assembly (Incl. Ref. #20)	1	46	323-11	Screw - Cap Hex. Hd.	4
20	67-8040	O-Ring	1	47	25-2490	Ball - Check Valve	2
21	25-2690	Housing - Charge Pump	1	48	25-2640	Spring - Check Valve	2
22	67-8050	Bearing - Needle	1	50	25-2650	Plug - Check Valve	2
23	67-8060	Seal - Lip	1	*	25-3180	Kit - Check Valve (Incl. Ref. #47-50)	1
24	322-4	Screw - Cap Hex. Hd.	4	*	49-8520	Kit - Implement Relief (Incl. Ref. #14-18)	1

 *Not Illustrated

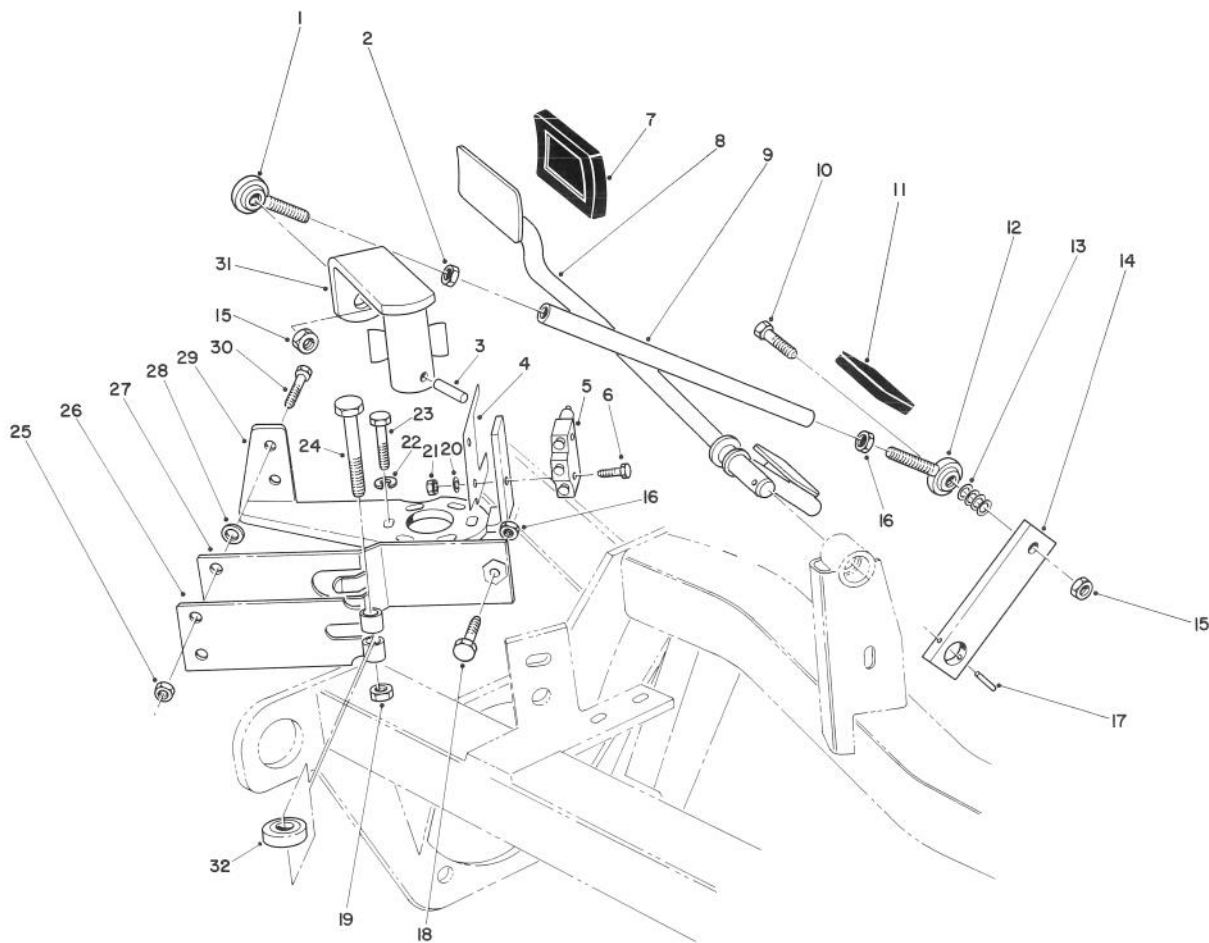


T-1069

TRACTION CONTROLS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-0480	Bearing - Rod End L.H.	1
2	3220-20	Nut - Jam L.H.	1
3	32121-24	Pin - Roll	1
4	46-8810	Stop - Spring	1
5	29-6162	Switch - Micro	1
6	3249-11	Screw - Rd. Hd. Machine	2
7	74-9100	Pad - Pedal Forward	1
8	76-2170	Pedal - Traction	1
9	76-0420	Rod - Pump Control	1
10	322-7	Capscrew - Hex. Nd.	2
11	74-9110	Pad - Pedal Reverse	1
12	76-0470	Bear - Rod End R.H.	1
13	3256-74	Washer - Flat	8
14	61-2610	Arm - Traction	1
15	32153-3	Nut - Lock	2
16	3220-2	Nut - Jam R.H.	1

Ref. No.	Part No.	Description	No. Used
17	32121-6	Pin - Roll	1
18	3210-7	Capscrew - Hex. Hd.	1
19	3296-29	Nut - Lock	1
20	3254-9	Washer - Lock	2
21	3217-16	Nut-Lock	2
22	3255-7	Washer - Lock	3
23	11-9760	Screw - Hex. Hd. Self Tap	3
24	322-17	Capscrew- Hex. Hd.	1
25	3296-16	Nut- Lock	2
26	29-6150	Spring - Leaf	1
27	29-6170	Spring - Extended Leaf	1
28	51-3150	Shim - Spring Arm	1
29	29-6120	Plate - Pump	1
30	3234-4	Capscrew - Hex. Hd.	2
31	61-2940	Lever-Pump	1
32	251-259	Bearing - Ball	1

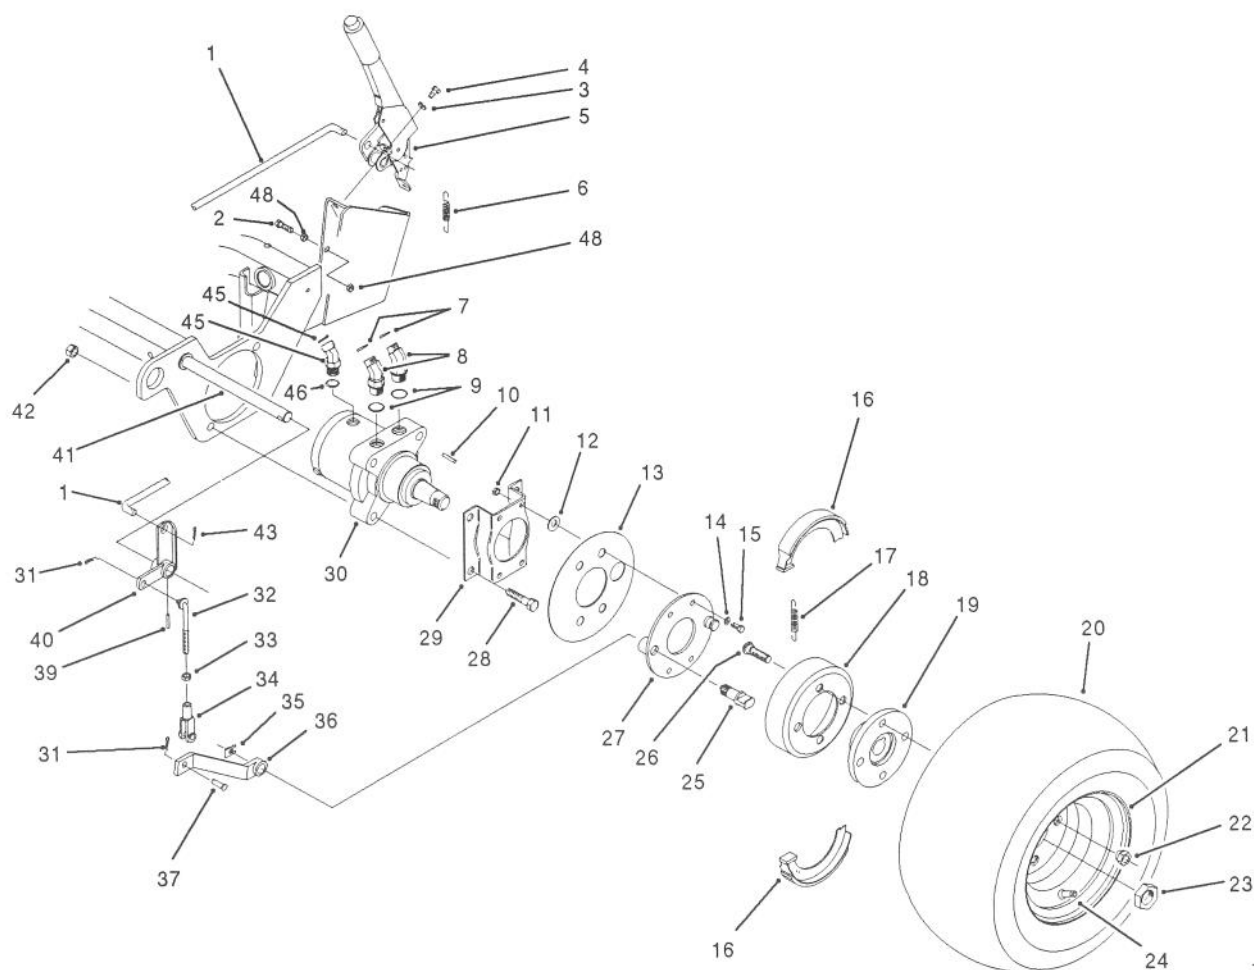 


T-1416

FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-9350	Rod - Parking Brake	1
2	322-17	Screw - Cap Hex. Hd.	1
3	3253-4	Washer - Lock	2
4	322-4	Screw - Hex. Washer Hd.	2
5	61-3990	Parking Brake Assembly	1
6	5-7290	Spring - Extension	1
7	237-30	Seal - O-Ring	4
8	340-89	Fitting - Hydraulic 45° (Incl. Ref. 7 & 9)	2
9	237-80	Seal - O-Ring	4
10	65-4640	Key - Square	2
11	3296-42	Nut - Lock	8
12	3256-16	Washer - Flat	8
13	83-9340	Shield - Grass	2
14	3253-3	Washer - Lock	8
15	321-5	Screw - Cap Hex. Hd.	8
16	70-9840	Shoe - Brake	4
17	70-9880	Spring - Extension	4
18	10-6821	Brake Drum Assembly (Incl. Ref. #19 & 26)	2
19	10-6870	Hub - Wheel	2
20	231-127	Tire	2
21	217-60	Rim	2

Ref. No.	Part No.	Description	No. Used
22	242-50	Nut - Lug	8
23	26-3790	Nut - Lock	2
24	232-27	Valve - Stem	2
25	70-9860	Pin - Pivot Brake	2
26	85-6540	Stud - Drive	8
27	70-9870	Plate - Brake	2
28	325-11	Screw - Cap Hex. Hd.	8
29	84-2000	Bracket - Brake	2
30	66-5291	Hydraulic Motor Assembly (Incl. Ref. #10)	2
31	3272-6	Pin - Cotter	4
32	84-1990	Rod - Adjusting	2
33	3220-2	Nut - Jam	2
34	282-2	Clevis	2
35	70-9850	Clip - Retaining	2
36	83-9250	Lever - Brake	2
37	283-1	Pin - Clevis	2
39	32121-79	Pin - Roll	2
40	83-9270	Pivot - Brake L.H.	1
*	83-9310	Pivot - Brake R.H.	1
41	83-9330	Shaft - Brake	1
42	3296-23	Nut - Lock	8
43	3272-7	Pin - Cotter	1

 *Not Illustrated

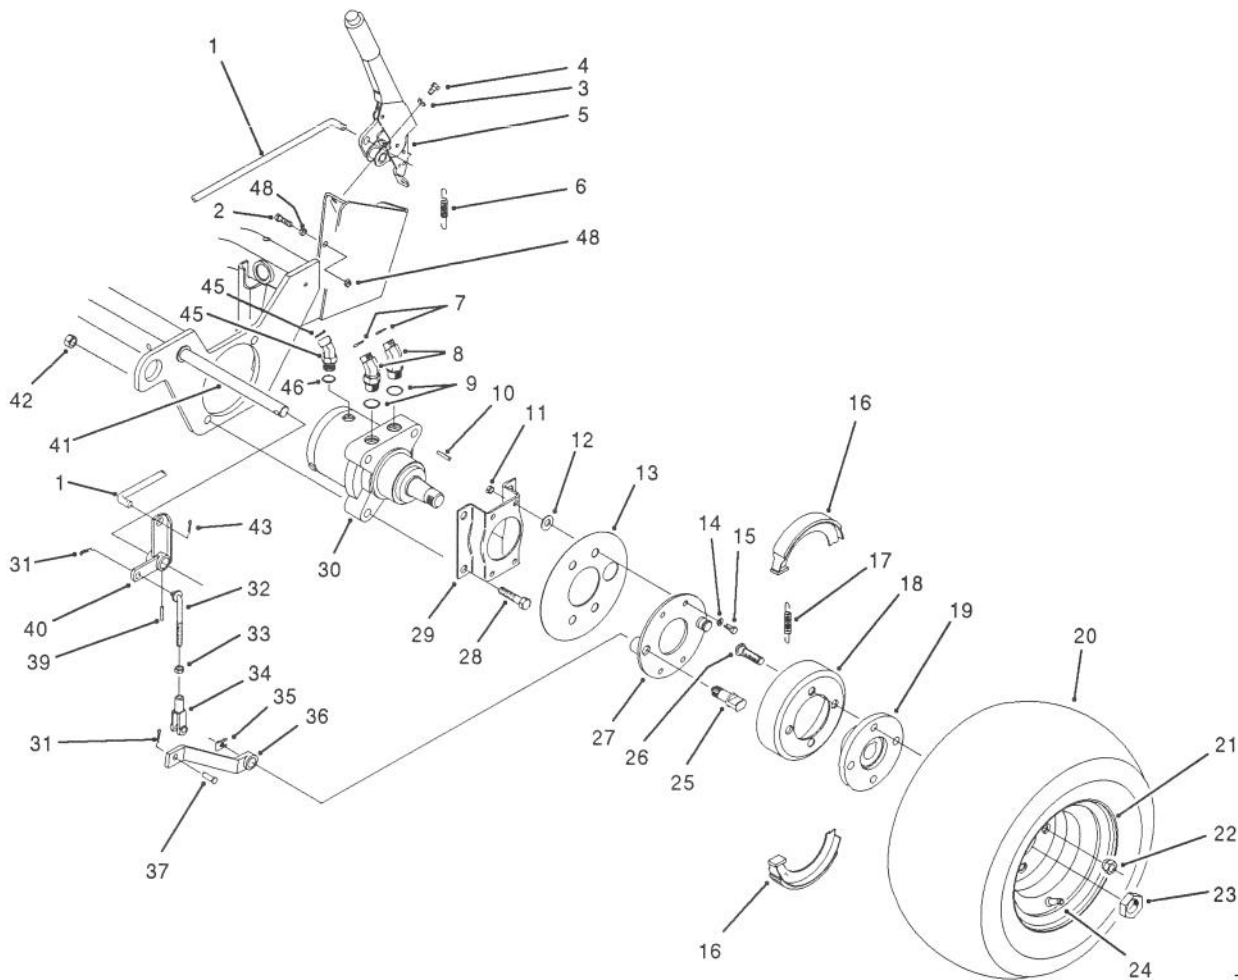


T-1416

FRONT WHEEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	340-103	Fitting - Hydraulic 45° (Incl. Ref. #46 & 47) (For Left Wheel Motor)	1
*	340-140	Fitting - Hydraulic Tee (Incl. Ref. #46 & 47) (For Right Wheel Motor)	1

Ref. No.	Part No.	Description	No. Used
46	237-78	Seal - O-Ring	2
47	237-21	Seal - O-Ring	3
48	32128-20	Nut - Lock	2
*	71-1500	Brake Assembly (Incl. Ref. #16, 17, 25, 27 & 35)	2

 *Not Illustrated

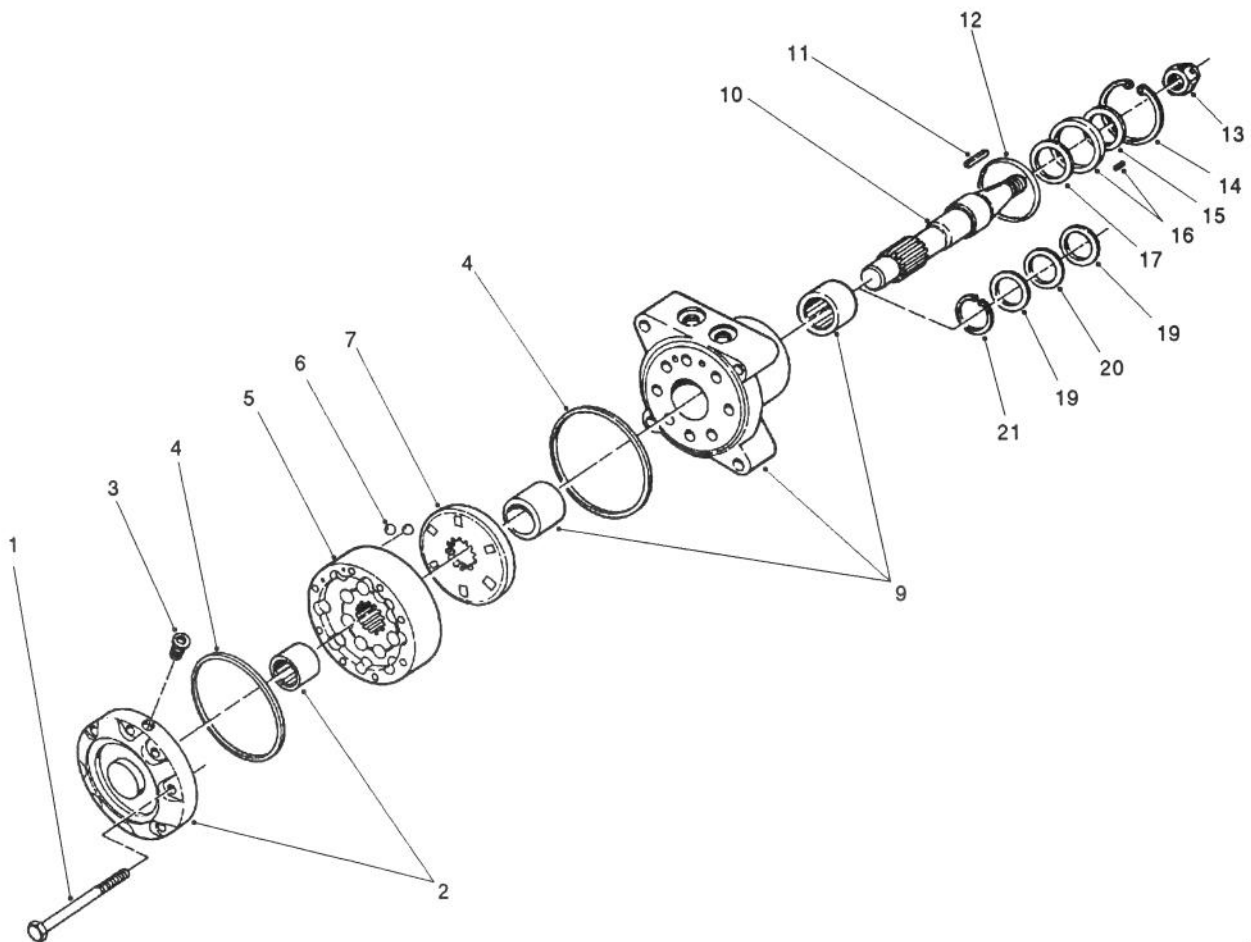

T-0274


HYDRAULIC DRIVE MOTOR ASSEMBLY NO. 66-5291

Ref. No.	Part No.	Description	No. Used
1	65-4580	Screw - Cap Hex Hd.	8
2	65-4680	Cover & Bearing Assembly	1
3	65-4560	Plug - Hex (Hollow)	1
4	65-4570	Seal - Square Ring	2
5	66-6110	IGR Assembly	1
6	65-4550	Valve - Check Ball	2
7	70-8150	Plate - Valve	1
9	65-4670	Body & Bearing Assembly	1
10	65-4660	Shaft	1
11	65-4640	Key - Square	1
12	65-4620	Seal - O-Ring	1

Ref. No.	Part No.	Description	No. Used
14	65-4500	Seal - Snap Ring	1
†15		Seal-Dust	1
†16		Retainer/Pin	1
†17		Seal-Lip	1
*	76-2350	Seal/Retainer Assembly (Incl. Ref. #15-17)	1
19	65-4600	Washer - Thrust	2
20	65-4610	Bearing - Thrust	1
21	65-4590	Ring - Snap	1
*	76-2360	Body Seal Kit (Incl. Ref. #4,12 & 15-17)	1

*Not Illustrated

 †Not available from Toro as a replacement part.

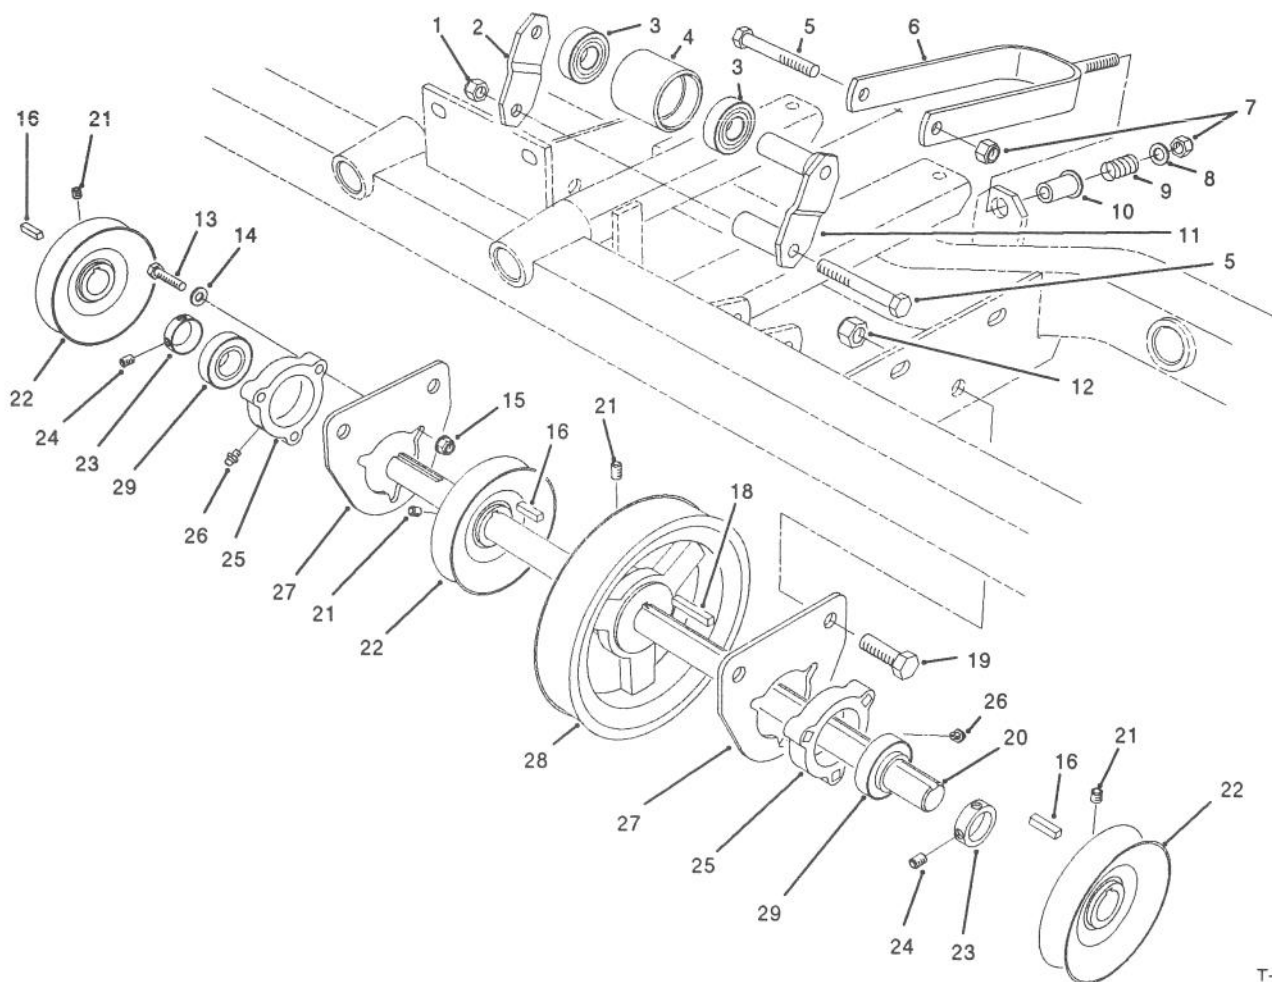


T-0276

JACKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	2
2	67-7911	Strap - Idler Bracket	1
3	38-7820	Bearing - Idler	2
4	67-7750	Pulley - Idler	1
5	323-15	Screw - Cap Hex. Hd.	2
6	67-7890	Belt Tensioner W.A.	1
7	3296-59	Nut - Lock	1
8	3256-24	Washer - Flat	1
9	83-9690	Spring - Compression	1
10	256-300	Bushing - Flange	1
11	67-7870	Idler Bracket W.A.	1
12	3296-23	Nut - Lock	4
13	322-17	Screw - Cap Hex. Hd.	6
14	3256-23	Washer - Flat	6
15	32128-25	Nut - Flange Lock	6
16	5-7280	Key - Square (Short)	3

Ref. No.	Part No.	Description	No. Used
18	67-7490	Key - Square (Long)	1
19	325-4	Screw - Cap Hex. Hd.	4
20	83-7820	Shaft - Drive	1
21	3242-4	Screw - Set	8
22	61-0140	Pulley - Jackshaft	3
23	251 -77	Collar - Locking (Incl. Ref. #24)	2
24	3245-35	Screw - Set	4
25	76-2460	Bearing Assembly (Incl. Ref. #23, 26 & 29)	2
26	302-5	Fitting - Grease	2
27	61-2350	Mount - Bearing	2
28	61-0070	Pulley - Poly V	1
29	251-337	Bearing	2
*	13-1279	Idler Pulley Assembly (Incl. Ref. #3, 4 & 11)	1

 *Not Illustrated

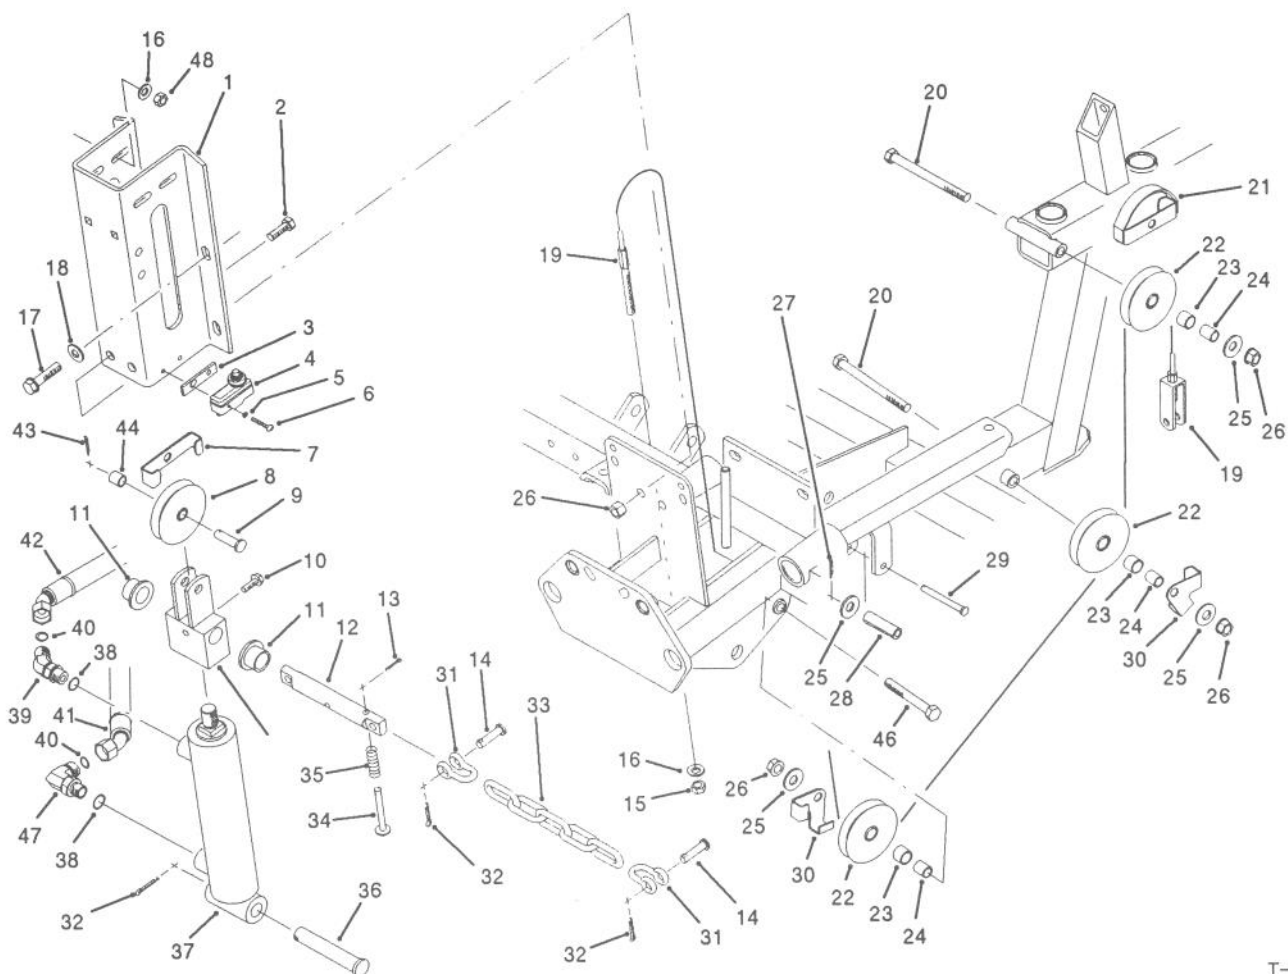


T-1417

CUTTING UNIT LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-9760	Bracket - Cylinder Support	1
2	323-6	Screw - Cap Hex. Hd.	1
3	61-2990	Spacer - Switch	1
4	29-6162	Switch - Lift	1
5	3254-9	Washer - Lock Internal	2
6	3250-35	Screw - Pan Hd.	2
7	5-2655	Keeper - Cable	1
8	5-2653	Cable Pulley Assembly (Incl. Ref. #44)	1
9	283-42	Pin - Clevis	1
10	3234-4	Screw - Hex. Washer Hd.	1
11	84-8440	Bushing - Flange	2
12	72-4190	Pin - Cylinder Guide	1
13	3272-4	Pin - Cotter	1
14	283-6	Pin - Clevis	4
15	3296-4	Nut - Lock	1
16	3256-23	Washer - Flat	5
17	11-0590	Screw - Thread Forming	4
18	3256-24	Washer - Flat	4
19	61-3260	Cable - Lift	1
20	323-17	Screw - Cap Hex. Hd.	2
21	61-3240	Keeper - Cable	1
22	61-3210	Cable Pulley Assembly (Incl. Ref. #23)	3
23	256-1	Bushing - Sleeve	3
24	61-3230	Spacer	3

Ref. No.	Part No.	Description	No. Used
25	3256-4	Washer - Flat	4
26	3296-39	Nut - Flange Lock	4
27	3272-4	Pin - Cotter	1
28	32121-124	Pin - Roll	1
29	283-79	Pin - Clevis	1
30	5-2656	Keeper - Cable	2
31	282-4	Clevis	4
32	3272-11	Pin - Cotter	5
33	61-3830	Chain - Lift	2
34	71-1380	Pin - Spring	1
35	71-1370	Spring - Compression	1
36	283-78	Pin - Clevis	1
37	76-0020	Hydraulic Cylinder Assembly	1
38	237-42	Seal - O-Ring	2
39	340-87	Fitting - Hydraulic 45° (Incl. Ref. #38 & 40)	1
40	237-22	Seal - O-Ring	2
41	61-2500	Hose - Hydraulic	1
42	61-2490	Hose - Hydraulic	1
43	3272-6	Pin - Cotter	1
45	61-2430	Hub - Lift	1
44	256-2	Bushing - Sleeve	1
46	323-13	Screw - Cap Hex. Hd.	1
47	340-77	Fitting - Hydraulic 90° (Incl. Ref. #38 & 40)	1
48	3296-29	Nut - Lock	4

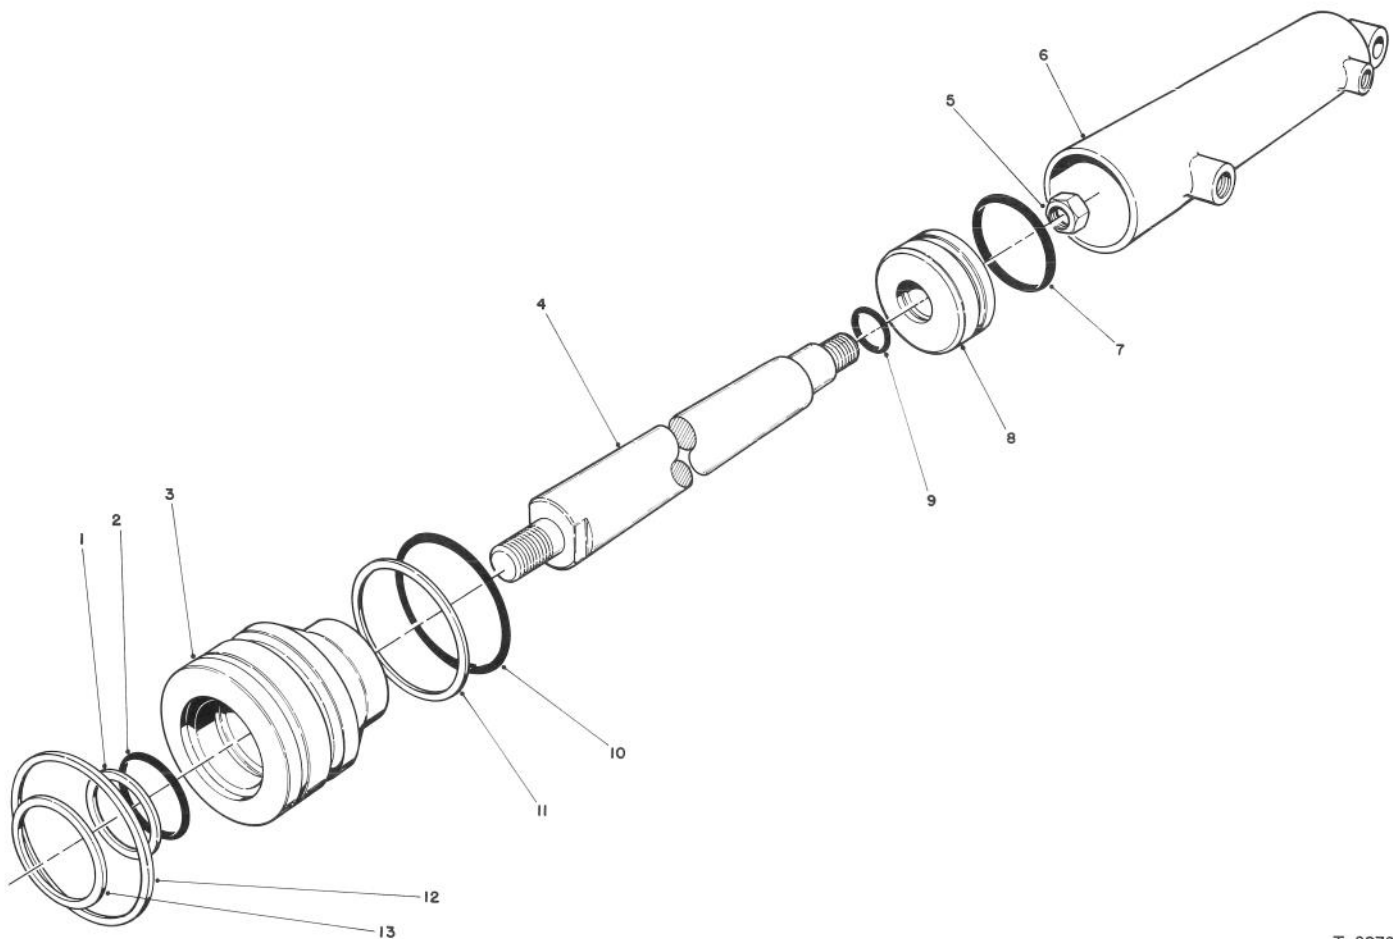 


T-0278

HYDRAULIC CYLINDER ASSEMBLY NO. 76-0020

Ref. No.	Part No.	Description	No. Used
1		Washer - Backup	1
2		O-Ring	1
3	76-0090	Head	1
4	76-2320	Shaft	1
5	76-2330	Nut - Lock	1
6		Barrel	1
7		Uniring	1
8	76-0040	Piston	1

Ref. No.	Part No.	Description	No. Used
9		O-Ring	1
10		O-Ring	1
11		Washer - Backup	1
12	76-0050	Ring - Retaining	1
13		Seal-Dust	1
*	76-0030	Repair Kit (Incl. Ref. #1-2, 7, 9-11 & 13)	1

 *Not Illustrated

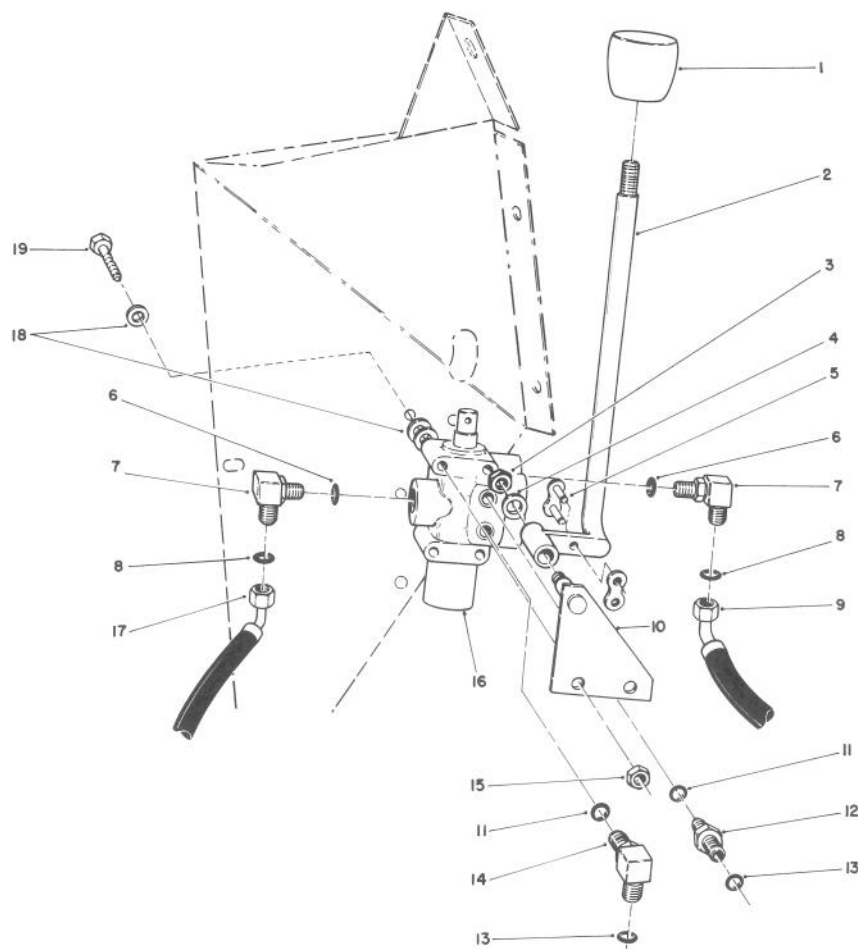


T-0279

CUTTING UNIT LIFT VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-37	Knob	1
2	85-5160	Lever - Lift Valve	1
3	3296-39	Nut - Lock	1
4	3256-24	Washer	1
5	2710-16	Link - Connecting	1
6	237-79	Seal - O-Ring	1
7	340-99	Fitting - Hydraulic 90° (Incl. Ref. #6 & 8)	2
8	237-22	Seal - O-Ring	2
9	61-2510	Hose - Hydraulic	1
10	61-2720	Bracket - Lever	1

Ref. No.	Part No.	Description	No. Used
11	237-78	Seal - O-Ring	2
12	340-88	Fitting - Hydraulic Straight (Incl. Ref. #11 & 13)	1
13	237-21	Seal - O-Ring	2
14	340-97	Fitting - Hydraulic 90° (Incl. Ref. #14 & 16)	1
15	3296-16	Nut - Lock	3
16	43-1950	Valve - Hydraulic	1
17	61-2520	Hose - Hydraulic	1
18	3256-22	Washer - Flat	9
19	321-23	Screw - Cap Hex. Hd.	3

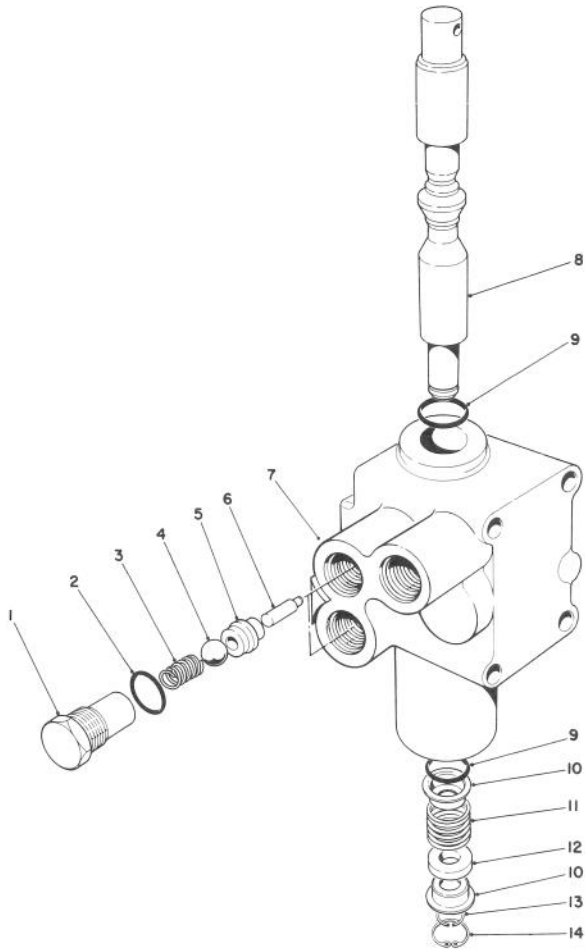 


T-0280

CONTROL VALVE ASSEMBLY NO. 43-1950

Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2
2	237-42	O-Ring	2
3	22-8340	Spring	2
4	22-8350	Ball	2
5	22-8370	Seat - Check Valve	2
6	22-8360	Pin - Cam	2
7		Body	1

Ref. No.	Part No.	Description	No. Used
8	22-8420	Spool	1
9	22-8500	O-Ring	2
10	22-8380	Retainer -Spring	2
11	22-8410	Spring	1
12	23-3030	Spacer	1
13	22-8480	Snap Ring- Spool	1
14	22-8490	Snap Ring	1

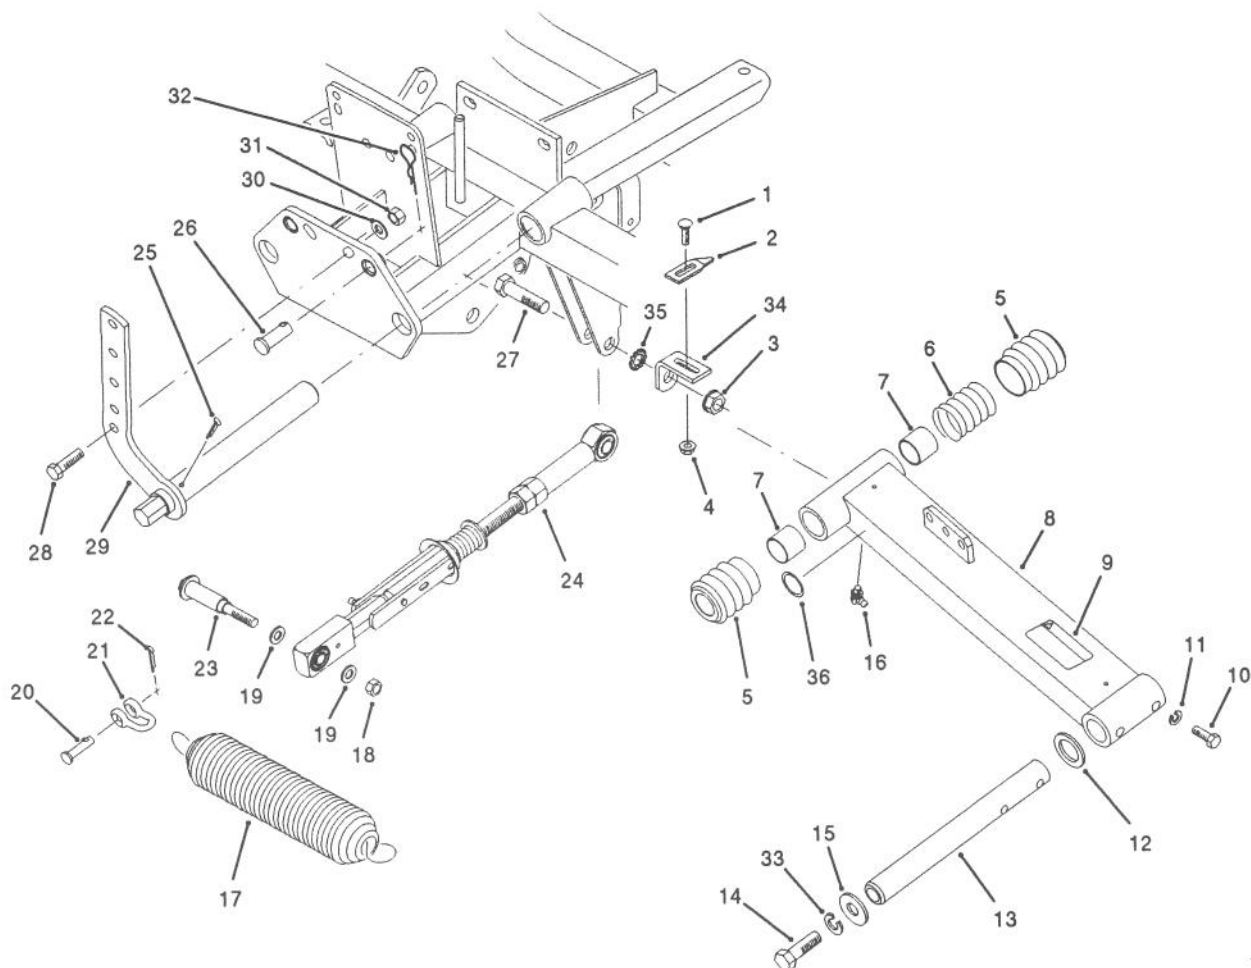 


T-1419

FRONT CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3229-11	Bolt - Carriage	2
2	76-2430	Scraper - Pulley	2
3	32128-23	Nut - Flange Lock	2
4	32128-10	Nut - Flange Lock	2
5	61-7250	Boot	4
6	61-3270	Spring - Compression	2
7	3-0348	Bushing - Sleeve	4
8	61-2880	Lift Arm Assembly L.H. (Incl. Ref. #7 & 16)	1
*	61-2830	Lift Arm Assembly R.H. (Incl. Ref. #7 & 16)	1
9	55-4300	Decal - Warning	2
10	322-4	Screw - Cap Hex. Hd.	4
11	3253-4	Washer - Lock	4
12	256-115	Washer - Thrust	2
13	61-3000	Rod - Pivot	2
14	325-4	Screw - Hex. Hd.	2
15	3256-6	Washer - Flat	2
16	302-60	Fitting - Grease	2
17	5-0743	Spring - Extension	2

Ref. No.	Part No.	Description	No. Used
18	3296-59	Nut - Lock	2
19	3256-45	Washer - Flat	4
20	283-6	Pin - Clevis	2
21	282-4	Clevis	2
22	3272-11	Pin - Cotter	2
23	76-0370	Bolt - Shoulder	2
24	76-0250	Belt Tensioner Assembly	2
25	3272-17	Pin - Cotter	2
26	283-8	Pin - Clevis	2
27	325-8	Screw - Cap Hex. Hd.	2
28	323-7	Screw - Cap Hex. Hd.	2
29	61-2930	Shaft - Pivot L.H.	1
*	61-2900	Shaft - Pivot R.H.	1
30	3256-4	Washer - Flat	2
31	3296-39	Nut - Lock	2
32	3290-322	Pin - Hair	2
33	3253-7	Washer - Lock	2
34	76-2440	Support - Scraper	2
35	3255-2	Washer - Lock	2
36	58-6520	Decal - Grease	2

 *Not Illustrated

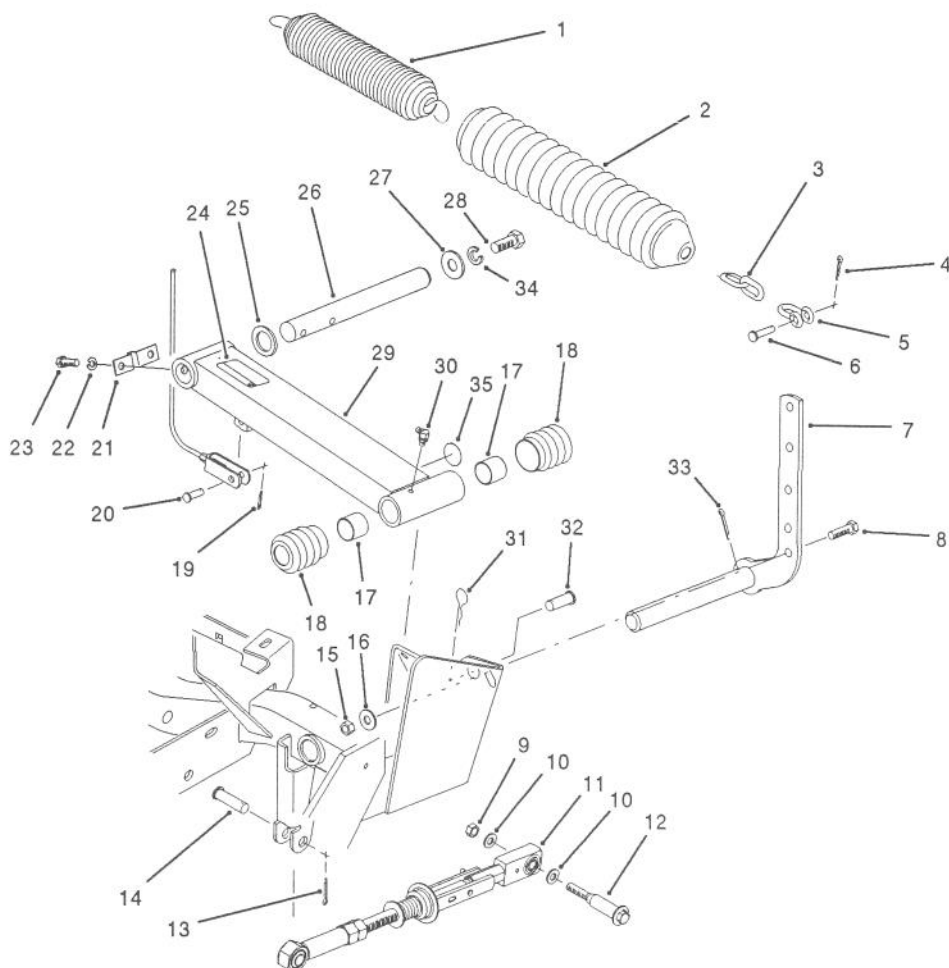


T-1418

REAR CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5-0743	Spring - Extension	1
2	62-7240	Cover - Spring	1
3	62-7300	Chain	1
4	3272-11	Pin - Cotter	1
5	282-4	Clevis	1
6	283-6	Pin - Clevis	1
7	61-2930	Shaft - Pivot	1
8	323-7	Screw - Cap Hex. Hd.	1
9	3296-59	Nut - Lock	2
10	3256-45	Washer - Flat	2
11	76-0250	Belt Tensioner Assembly	2
12	76-0370	Bolt - Shoulder	2
13	3272-13	Pin - Cotter	2
14	283-40	Pin - Clevis	2
15	3296-39	Nut - Lock	1
16	3256-4	Washer - Flat	1
17	3-0348	Bushing - Sleeve	2
18	62-7250	Boot	2

Ref. No.	Part No.	Description	No. Used
19	3272-6	Pin - Cotter	1
20	283-1	Pin - Clevis	1
21	61-3820	Retainer - Cable	1
22	3253-4	Washer - Lock	2
23	322-4	Screw - Cap Hex. Hd.	2
24	55-4300	Decal - Warning	1
25	256-115	Washer - Thrust	1
26	61-3000	Rod - Pivot	1
27	3256-6	Washer - Flat	1
28	325-4	Screw - Cap Hex. Hd.	1
29	61-2890	Lift Arm Assembly (Incl. Ref. #17 & 30)	1
30	302-60	Fitting - Grease	1
31	3290-322	Pin - Hair	1
32	283-8	Pin - Clevis	1
33	3272-17	Pin - Cotter	1
34	3253-7	Washer - Lock	1
35	58-6520	Decal - Grease	1

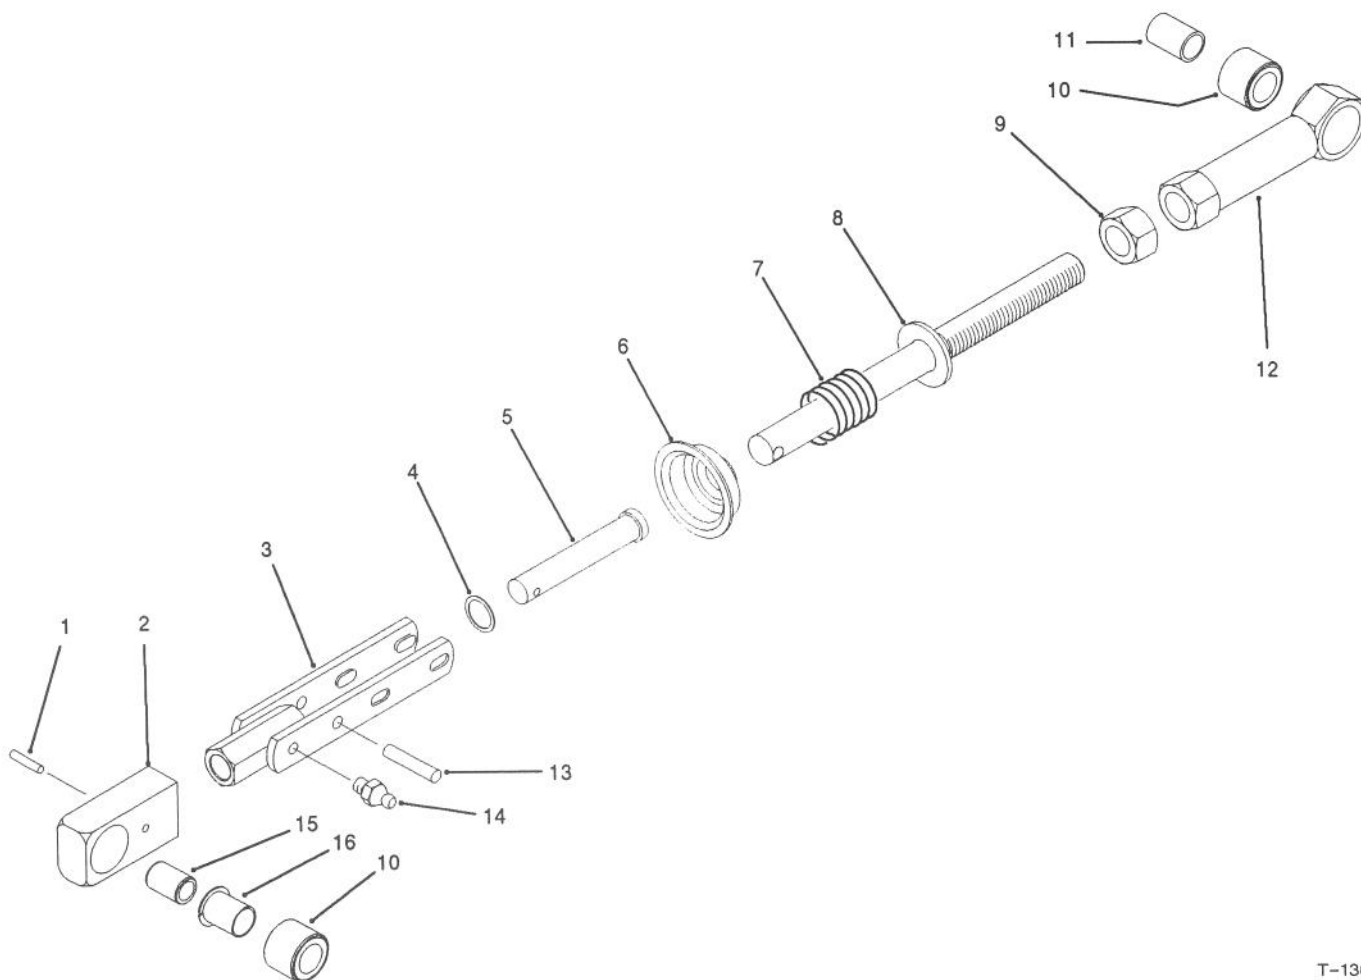 


T-1367

BELT TENSIONER ASSEMBLY NO. 76-0250

Ref. No.	Part No.	Description	No. Used
1	32121-23	Pin - Roll	1
2	76-0350	Housing - Bushing	1
3	76-0260	Yoke	1
4	3256-54	Washer - Flat	1
5	283-55	Pin - Clevis	1
6	76-0360	Cup - Retainer	1
7	76-0410	Spring - Compression	1
8	76-0330	Rod	1

Ref. No.	Part No.	Description	No. Used
9	3218-6	Nut - Jam	1
10	56-9510	Bushing Assembly	2
11	256-173	Bushing - Sleeve	1
12	76-0300	Housing - Bushing	1
13	32121-9	Pin - Roll	1
14	302-5	Fitting - Grease	1
15	76-0390	Spacer	1
16	56-9520	Bushing - Nyliner	1

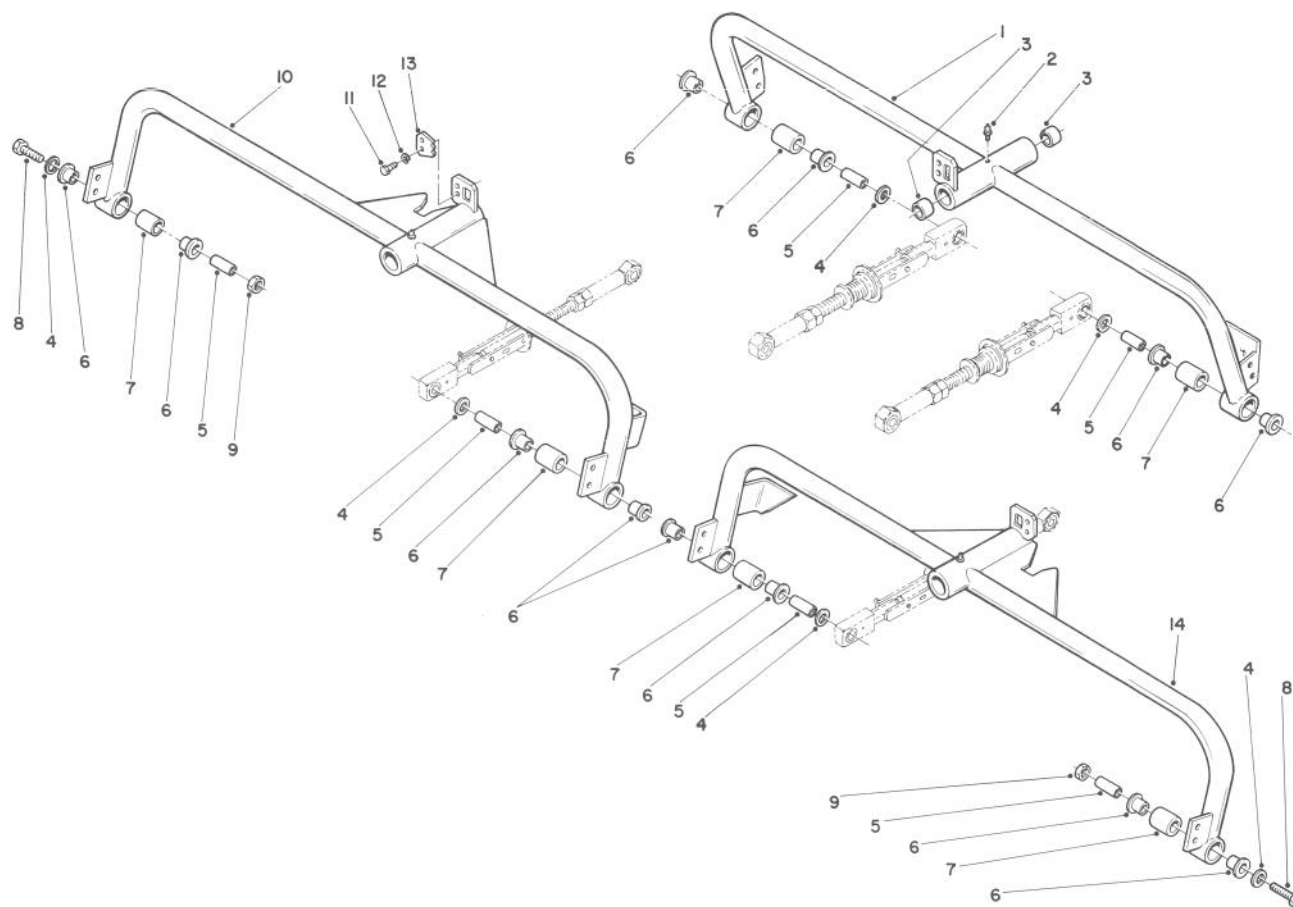 


T-1371

CUTTING UNIT CARRIER FRAME ASSEMBLY (Floating Suspension For 8 & 11 Blade Cutting Units)

Ref. No.	Part No.	Description	No. Used
1	61-0870	Rear Carrier Frame Assy. (Incl. Ref. #2, 3 & 7)	1
2	302-5	Fitting - Grease	3
3	3-0348	Bushing	6
4	3256-26	Washer - Flat	6
5	61-1370	Spacer	6
6	256-285	Bushing - Flange	12
7	61-0710	Bushing Assembly	6
8	325-10	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
9	3296-59	Nut - Lock	2
10	61-0860	Right Carrier Frame Assy. (Incl. Ref. #2, 3 & 7)	1
11	321-2	Screw - Cap Hex. Hd.	6
12	3253-3	Washer - Lock	6
13	61-3600	Tab - Lift	3
14	61-0880	Left Carrier Frame Assy. (Incl. Ref. #2, 3 & 7)	1

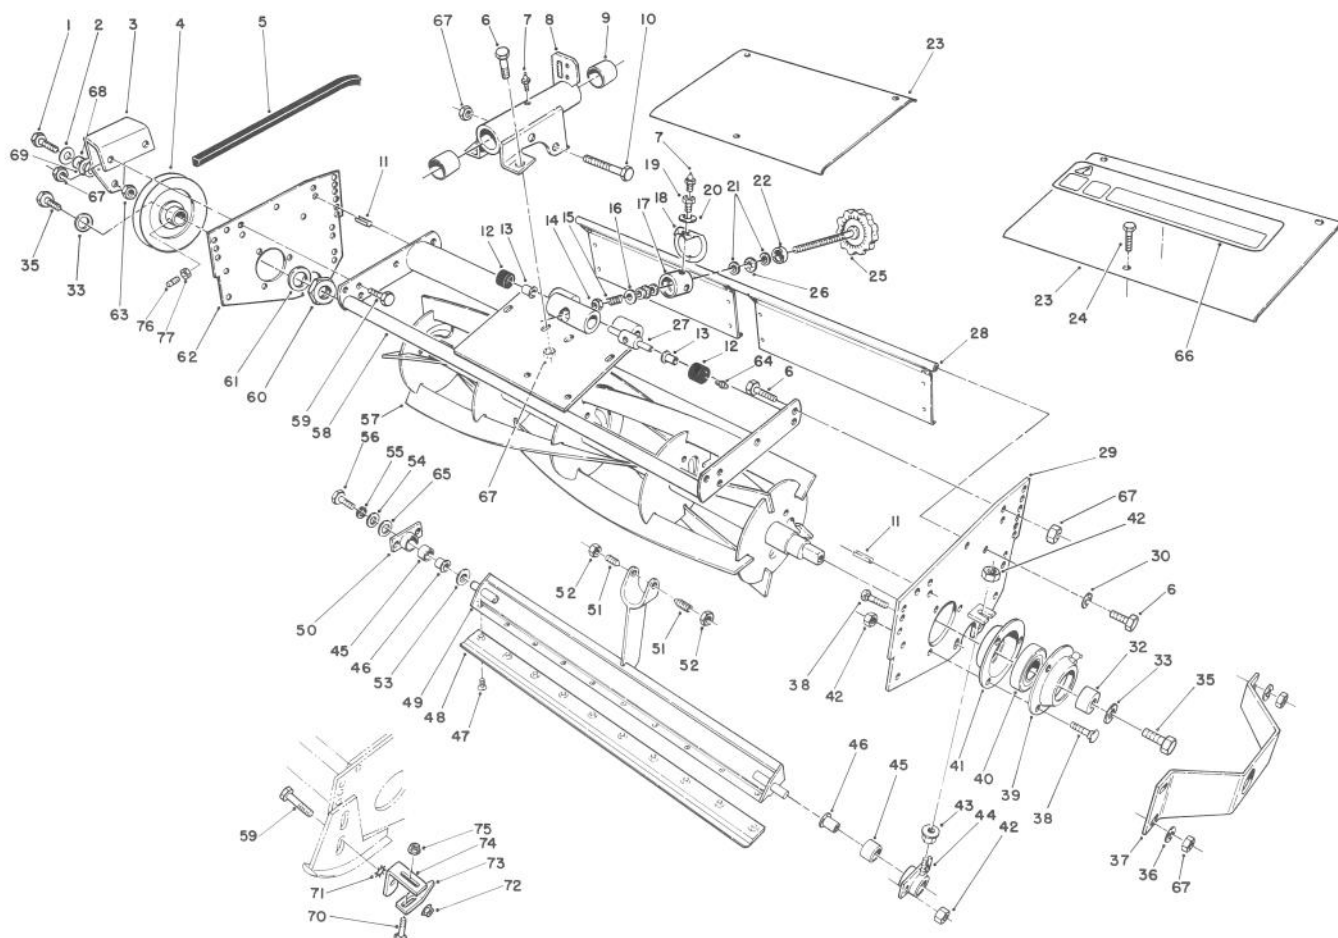 

T-0283


5 BLADE CUTTING UNIT REEL ASSEMBLY (Fixed Suspension)

Ref. No.	Part No.	Description	No. Used
1	323-9	Screw - Cap Hex. Hd. (Use 2 on rear C.U.)	1
2	3256-24	Washer - Flat (Use 2 on rear C.U.)	1
3	61-0900	Bracket - Tensioner (Use 2 on rear C.U.)	1
4	80-4280	Pulley - Reel, 5 Blade	1
5	61-3380	V-Belt	1
6	323-6	Screw - Cap Hex. Hd.	8
7	302-5	Fitting - Grease	2
8	61-1050	Front Support - L.H. (Incl. Ref. #7 & 9)	1
*	61-3660	Front Support - R.H. (Incl. Ref. #7 & 9)	1
*	61-0670	Rear Support (Incl. Ref. #7 & 9)	1
9	3-0348	Bushing	2
10	323-12	Screw - Cap Hex. Hd.	1
11	32121-36	Pin-Roll	4
12	62-5510	Rubber Bushing Assembly	2
13	52-2890	Bushing - Flanged Nylon	2
14	3296-62	Nut - Lock	1
15	57-5270	Spring - Compression	1
16	29-8870	Washer - Flat	1
17	52-2980	Pivot - Single Point Adjust	1
18	52-3000	Arm - Spring	1
19	52-2990	Capscrew - Spring Retainer	1

Ref. No.	Part No.	Description	No. Used
20	3256-25	Washer - Flat	1
21	257-5	Washer - Thrust	4
22	253-84	Seal	1
23	61-0550	Shield - Top	2
24	32144-10	Screw - Cap Hex. Hd.	6
25	61-1070	Handle - Assembly	1
26	257-6	Bearing - Thrust	2
27	57-5260	Pin - S.P.A.	1
28	61-1130	Rear Grass Guard (#1 Cutting Unit)	1
*	84-8840	Rear Grass Guard (#2 & 3 Cutting Unit)	1
29	61-0940	Sideplate - Adjust	1
30	3253-5	Washer - Lock	2
32	61-0500	Spacer - Bearing	1
33	67-9760	Washer - Flat	2
35	3211-4	Screw - Cap Hex. Hd.	2
36	3256-3	Washer - Flat	5
37	61-0610	Guard - Side (Used on front units only)	1
38	3230-20	Bolt - Carriage	10
39	76-2490	Flange - Bearing (Lube)	2
*	302-11	Fitting - Grease	2
40	251-331	Bearing	2
41	76-2500	Flange - Bearing	2
42	3296-29	Nut - Lock	11
43	3217-6	Nut	1

NOTE: Front Left Cutting Unit Shown

 *Not Illustrated

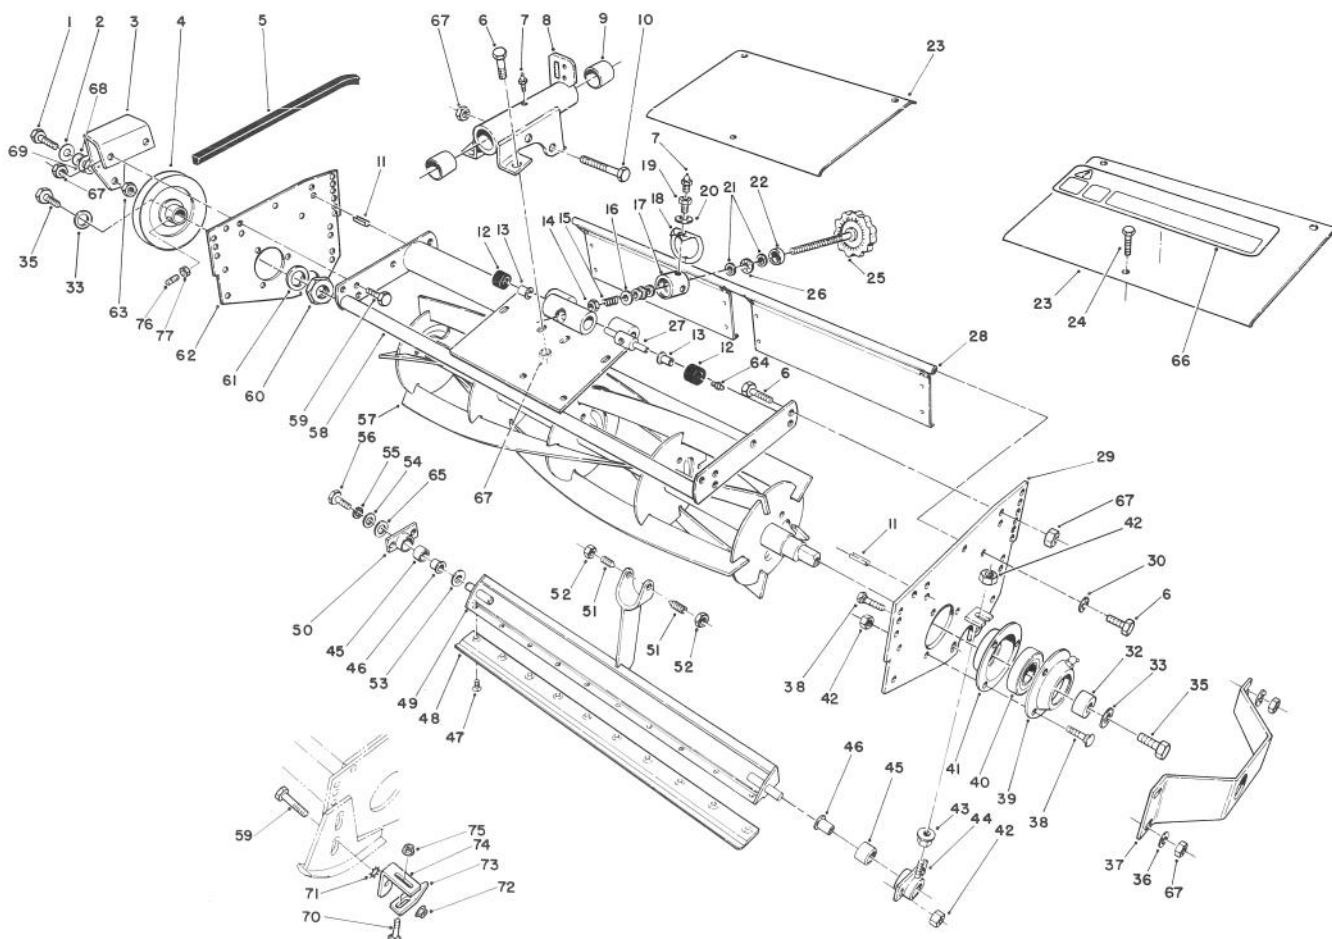


T-0283

5 BLADE CUTTING UNIT REEL ASSEMBLY(Continued) (Fixed Suspension)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
44	61-0970	Housing - Bedbar Adj.	1	65	62-7120	Spacer	1
45	56-9510	Bushing Assembly	2	66	62-5070	Decal - Warning	1
46	56-9520	Bushing - Flanged	2	67	3296-39	Nut - Lock (Use 14 nuts on rear unit)	12
47	57-4910	Screw - Special	10	68	76-2290	Spacer (Use 2 spacers on rear cutting unit)	1
48	62-5180	Bedknife - 7 In. Reel	1	69	3256-45	Washer Flat (Use 4 washers on rear cutting unit)	2
49	61-1210	Bedbar	1	70	3229-11	Bolt - Carriage (Rear cutting unit)	1
50	61-1010	Bedbar Housing	1	71	3255-2	Washer - Lock E.T.L.W. (Rear cutting unit)	1
51	57-5190	Screw - Adjustment	2	72	32128-21	Nut - Flange Lock (Rear cutting unit)	1
52	3218-18	Nut - Jam	2	73	76-2430	Bracket - Debris Cleaner (Rear cutting unit)	1
53	61-1950	Washer - Bedbar	1	74	76-2440	Support - Debris Cleaner (Rear cutting unit)	1
54	3256-56	Washer - Flat	1	75	32128-10	Nut - Flange Lock (Rear cutting unit)	1
55	3253-4	Washer - Lock	1	76	3247-6	Screw - Set	1
56	322-3	Screw - Cap Hex. Hd.	1	77	3218-3	Nut - Jam	1
57	12-7079	Reel Assy. - 5 Blade (Left C.U.)	1	*	13-3649	Overhaul Kit (Incl. Ref. #12, 13, 22, 26 40 & 45-47)	1
*	12-7059	Reel Assy. - 5 Blade (Right & Rear C.U.)	1				
58	61-0660	Reel Frame	1				
59	323-7	Screw - Cap Hex. Hd. (Use 5 screws on rear cutting unit)	2				
60	67-5840	Nut - Jam	1				
61	27-1850	Washer	1				
62	61-1320	Sideplate - Reel	1				
63	3296-59	Nut - Lock (Use 2 nuts on rear C.U.)	1				
64	302-18	Fitting - Grease	1				

NOTE: Front Left Cutting Unit Shown

 *Not Illustrated

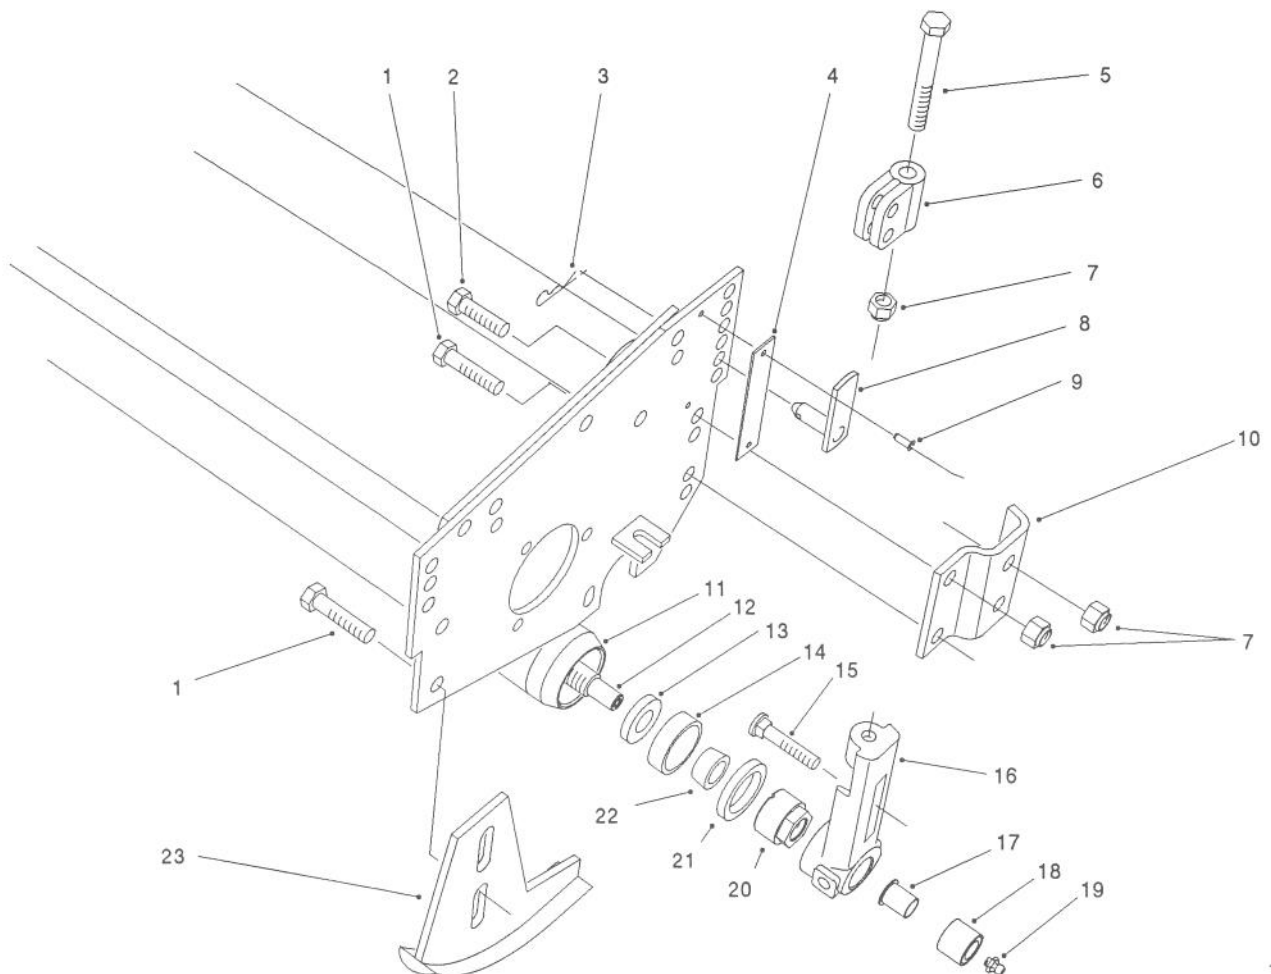

T-0284


5 BLADE CUTTING UNIT ROLLER ASSEMBLY (Fixed Suspension)

Ref. No.	Part No.	Description	No. Used
1	323-7	Screw - Cap Hex. Hd.	3
2	323-6	Screw - Cap Hex. Hd.	5
3	3290-467	Cotter - Hairpin	2
4	61-3810	Plate - HOC	2
5	61-0790	Screw - Cap Hex. Hd.	2
6	61-0420	Support - HOC	2
7	3296-39	Nut - Lock	9
8	71-3690	Pin - HOC	2
9	3290-55	Rivet - Pop	4
10	61-0910	Bracket - Angle	2
11	61-0380	Cap - Roller	2
12	61-0400	Shaft - Roller	1
13	253-152	Seal - Inner	2

Ref. No.	Part No.	Description	No. Used
14	254-79	Cup - Bearing	2
15	3231-25	Bolt - Carriage	2
16	61-0430	Bracket - Rear	2
17	56-9520	Bushing - Flanged	1
18	56-9510	Bushing Assembly	2
19	302-5	Fitting - Grease	2
20	71-3590	Nut - Adjustment	2
21	253-153	Seal - Outer	2
22	254-78	Cone - Bearing	2
23	03446	Skid Kit (Incl. Ref. #1)	1
*	61-0410	Roller Assembly (Incl. Ref. #11-14,19-22)	1

NOTE: Front Left Cutting Unit Shown

 *Not Illustrated

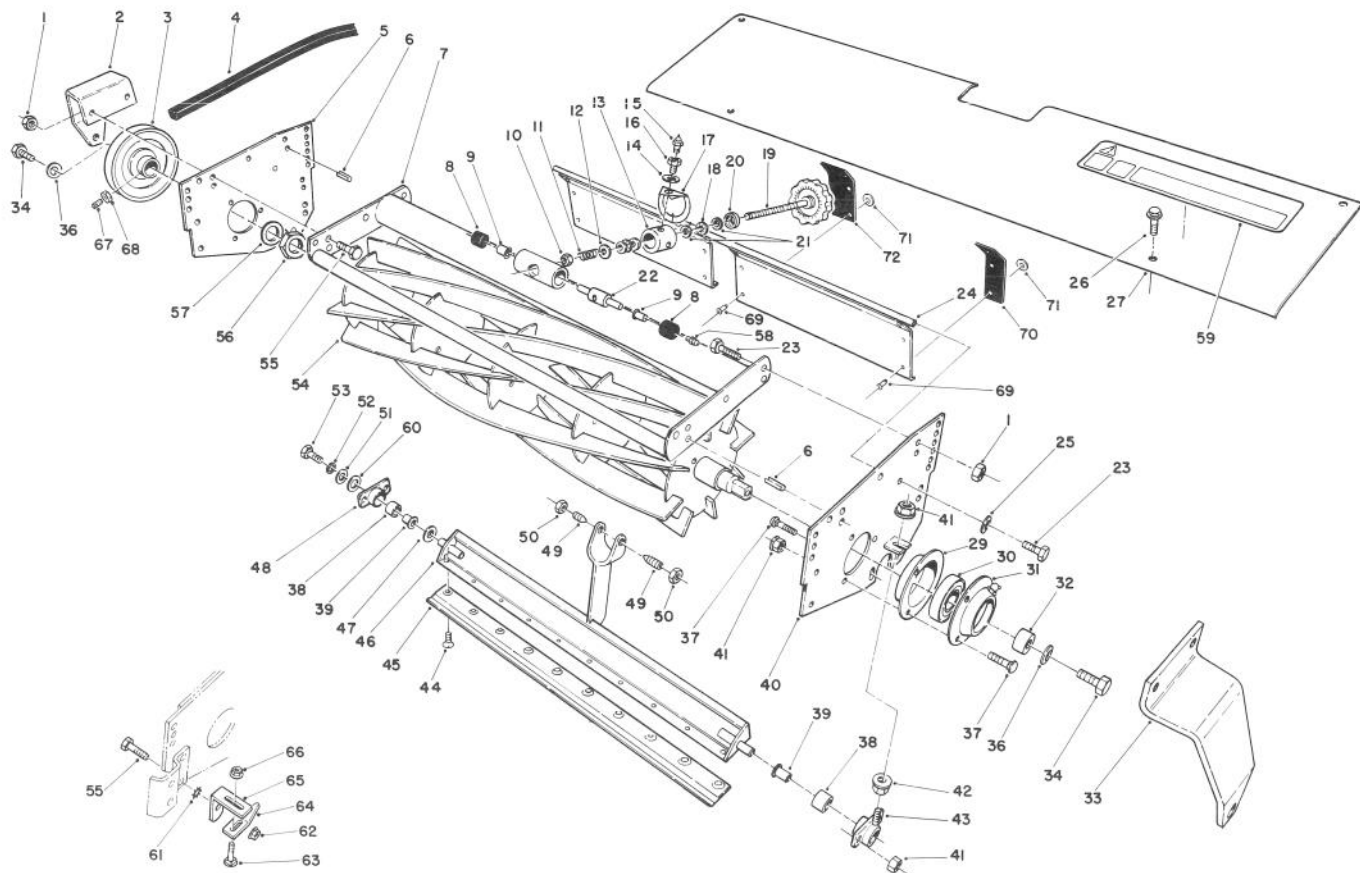

T-0285


5, 8 & 11 BLADE CUTTING UNIT REEL ASSEMBLY (Floating Suspension)

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	8
2	61-0900	Bracket - Tensioner/Carrier (Use 2 on Rear C.U.)	1
3	80-4270	Pulley - Reel (8 & 11 Blade)	1
*	80-4280	Pulley - Reel (5 Blade)	1
4	61-3380	V-Belt - Reel	1
5	61-1320	Sideplate	1
6	32121-36	Pin - Roll	4
7	61-0930	Frame - Reel	1
8	62-5510	Rubber Bushing Assembly	2
9	52-2890	Bushing - Flanged (Nylon)	2
10	3296-62	Nut - Lock	1
11	57-5270	Spring - Compression	1
12	29-8870	Washer	1
13	52-2980	Pivot - Single Point Adjust	1
14	3256-25	Washer - Flat	1
15	302-5	Fitting - Grease	1
16	52-2990	Capscrew - Spring Retainer	1
17	52-3000	Arm - Spring	1
18	257-6	Bearing - Thrust	2
19	61-1070	Handle - Assembly	1
20	253-84	Seal	1
21	257-5	Washer - Thrust	4

Ref. No.	Part No.	Description	No. Used
22	57-5260	Pin - S.P.A.	1
23	323-6	Screw - Cap Hex. Hd.	6
24	61-1130	Rear Grass Guard (#1 Cutting Unit)	1
*	84-8840	Rear Grass Guard (#2 & 3 Cutting Unit)	1
25	3253-5	Washer - Lock	2
26	32144-10	Screw - Hex. Washer Hd.	4
27	61-0560	Shield - Top	1
29	76-2500	Flange - Bearing	2
30	251-331	Bearing	2
31	76-2490	Flange - Bearing (Lube)	2
*	302-11	Fitting - Grease	2
32	61-0500	Spacer - Reel	1
33	61-0890	Bracket - Carrier	1
34	3211-4	Screw - Cap Hex. Hd.	2
36	67-9760	Washer	2
37	3230-20	Bolt - Carriage	10
38	56-9510	Bushing Assy.	2
39	56-9520	Bushing - Flanged	2
40	61-0940	Sideplate - Adjust	1
41	3296-29	Nut - Lock	11
42	3217-6	Nut	1
43	61-0970	Housing - Bedbar Adj.	1
44	57-4910	Screw - Special	10

NOTE: Front Left Cutting Unit Shown

 *Not Illustrated

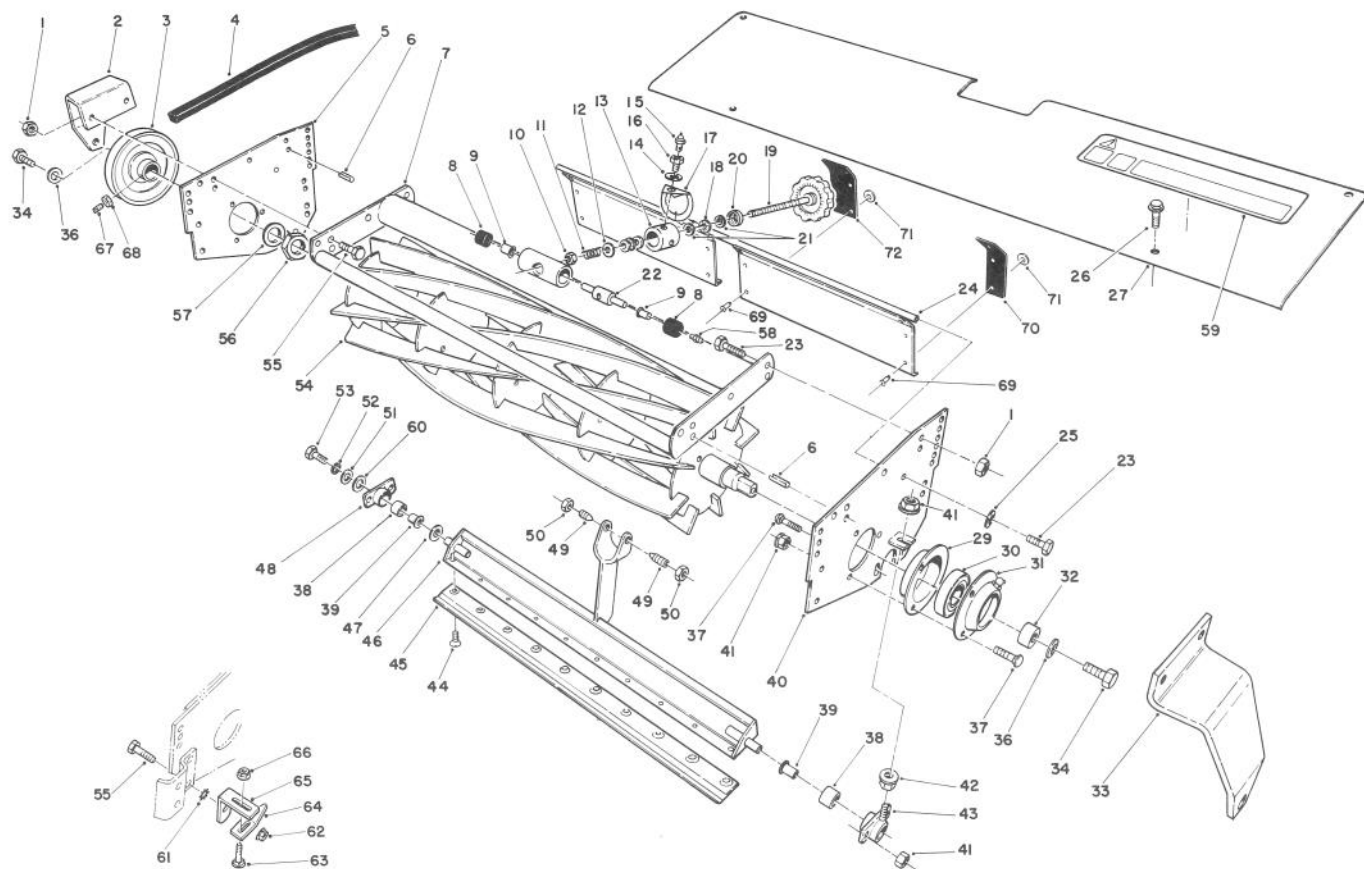


T-0285

5, 8 & 11 BLADE CUTTING UNIT ASSEMBLY (Continued) (Floating Suspension)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
45	62-5180	Bedknife - 7 In. Reel	1	55	323-7	Screw - Cap Hex. Hd.	5
46	61-1210	Bedbar	1	56	67-5840	Nut - Jam	1
47	61-1950	Washer - Bedbar	1	57	27-1850	Washer	1
48	61-1010	Bedbar Housing	1	58	302-18	Fitting - Grease	1
49	57-5190	Screw - Adjustment	2	59	62-5070	Decal - Warning	1
50	3218-18	Nut - Jam	2	60	62-7120	Spacer	1
51	3256-56	Washer - Flat	1	61	3255-2	Washer - Lock E.T.L.W.	1
52	3253-4	Washer - Lock	1	62	32128-21	Nut - Flange Lock	1
53	322-3	Screw - Cap Hex. Hd.	1	63	3229-11	Bolt - Carriage	1
54	12-7079	Reel Assembly - 5 Blade (Left C.U.)	1	64	76-2430	Bracket - Debris Cleaner	1
*	12-7059	Reel Assembly - 5 Blade (Right & Center C.U.)	1	65	76-2440	Support - Debris Cleaner	1
*	12-7099	Reel Assembly - 8 Blade (Left C.U.)	1	66	32128-10	Nut - Flange Lock	1
*	12-7089	Reel Assembly - 8 Blade (Right & Center C.U.)	1	67	3247-6	Screw - Set	1
*	13-1709	Reel Assembly - 11 Blade (Left C.U.)	1	68	3218-3	Nut - Jam	1
*	13-1699	Reel Assembly - 11 Blade (Right & Center C.U.)	1	69	3269-23	Rivet - Pop	8
				70	61-3280	Cover - End	2
				71	3256-49	Washer - Flat	8
				72	61-3290	Cover - Middle	2
				*	13-3649	Overhaul Kit (Incl. Ref. #8, 9, 18, 20, 30, 38, 39 & 44)	1

NOTE: Front Left Cutting Unit Shown

 *Not Illustrated

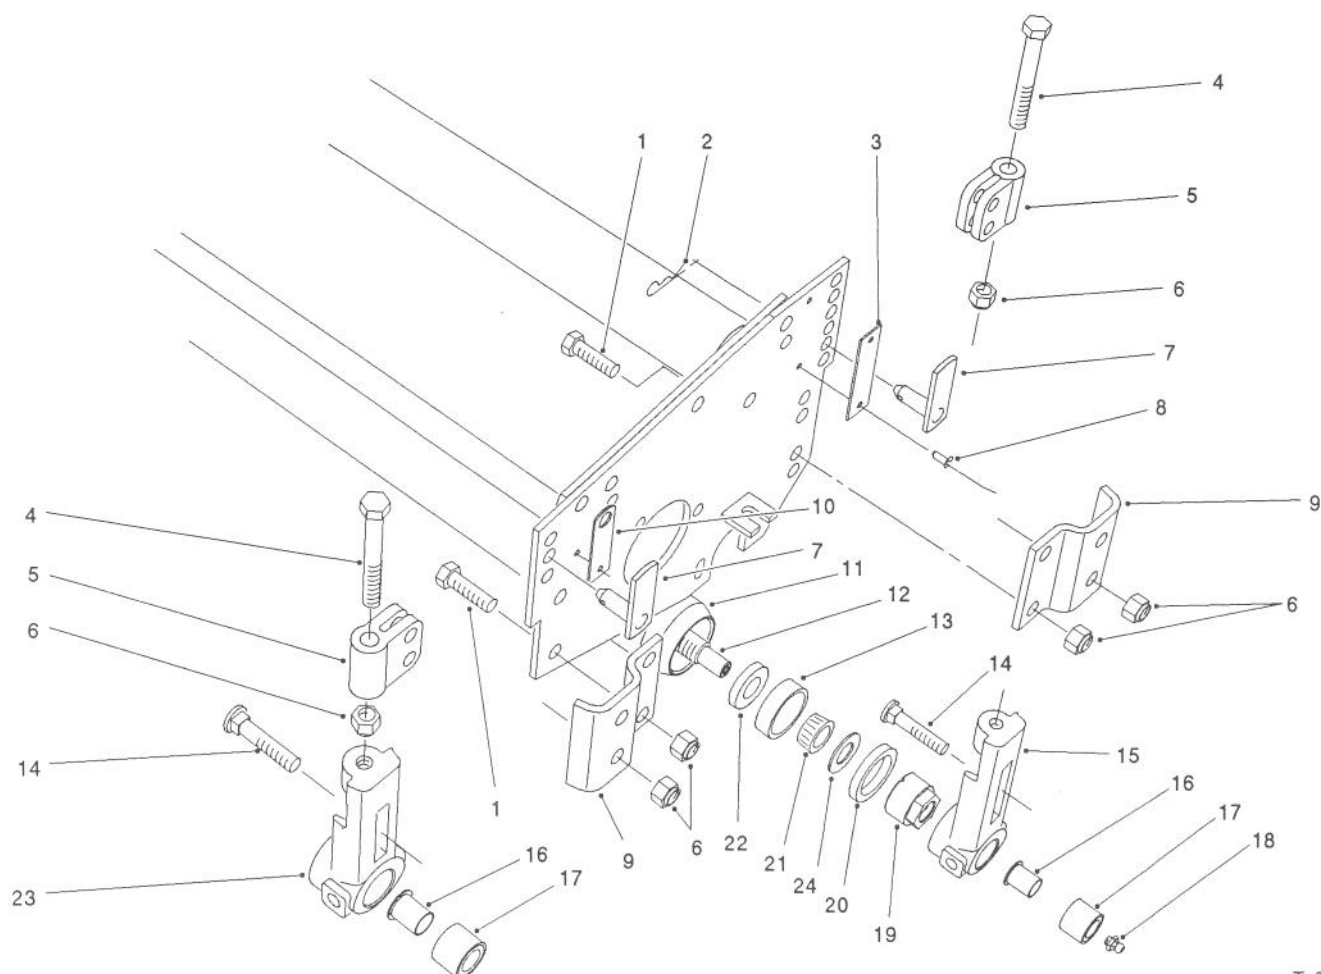

T-0286


5, 8 & 11 BLADE CUTTING UNIT ROLLER ASSEMBLY (Floating Suspension)

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw - Cap Hex Hd.	8
2	3290-467	Cotter - Hairpin	4
3	61-3800	Plate - HOC Rear	2
4	61-0790	Screw - Cap Hex Hd.	4
5	61-0420	Support - HOC	4
6	3296-39	Nut - Lock	16
7	71-3690	Pin - HOC	4
8	3290-55	Rivet - Pop	6
9	61-0910	Bracket - Angle	4
10	61-3790	Plate - HOC Front	2
11	61-0380	Cap - Roller	2
12	61-0400	Shaft - Roller	1
13	254-79	Cup - Bearing	2
14	3231-25	Bolt - Carriage	4

Ref. No.	Part No.	Description	No. Used
15	61-0430	Bracket - Rear	2
16	56-9520	Bushing - Flanged	2
17	56-9510	Bushing	4
18	302-5	Fitting - Grease	2
19	71-3590	Nut - Adjustment	2
20	253-153	Seal - Outer	2
21	254-78	Cone - Bearing	2
22	253-152	Seal - Inner	2
23	61-0440	Bracket - Front	2
24	62-7660	Washer - Shim (not used on all full roller assemblies)	2
*	61-0410	Full Roller Assembly (Incl. Ref. #11-13, 18-22 & 24)	1

NOTE: Front Left Cutting Unit Shown

 *Not Illustrated

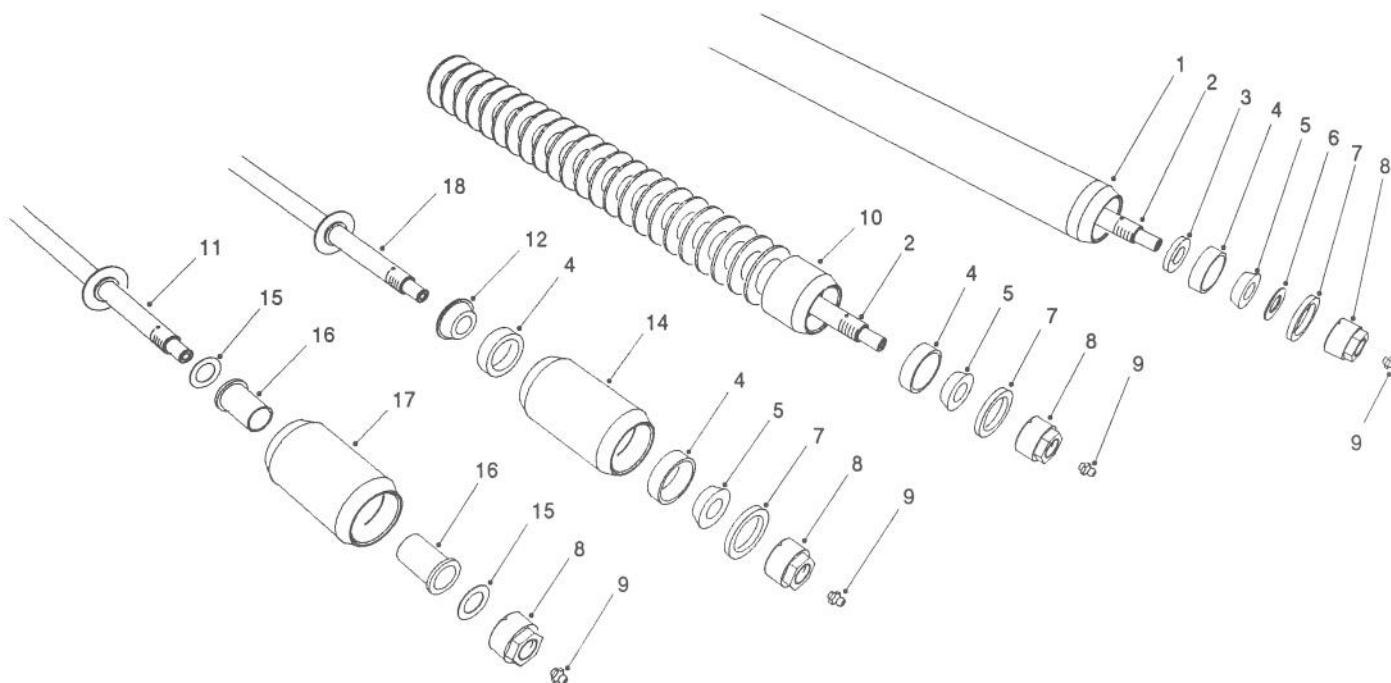


T-0287

CUTTING UNIT ROLLER OPTIONS

Ref. No.	Part No.	Description	No. Used
1	61-0380	Cap - Full Roller	2
2	61-0400	Shaft - Full/Wiehle Roller	2
3	253-152	Seal - Inner	2
4	254-79	Cup - Bearing (Outer)	8
5	254-78	Cone - Bearing (Outer)	6
6	62-7660	Washer - Shim (not used on all full roller assemblies)	2
7	253-153	Seal - Outer	6
8	71-3590	Nut - Adjustment	8
9	302-5	Fitting - Grease	8
10	82-2400	Wiehle Roller Weld Assy.	1
11	62-4990	Shaft - Anti-Scalp Roller	1
12	252-112	Cone - Bearing (Inner)	2
14	76-2400	Roller - Sectional	2
15	3-6498	Washer - Thrust	4
16	256-117	Bushing - Flanged	4
17	63-5060	Roller - Anti-Scalp	2

Ref. No.	Part No.	Description	No. Used
18	76-2380	Shaft - Sectional Roller	1
*	61-0410	Full Roller Assembly (Incl. Ref. #1 -9)	1
*	62-7410	Wiehle Roller Assembly (Incl. Ref. #2, 4-5 & 7-10)	1
*	62-4970	Sectional Roller Assembly (Incl. Ref. #4-5, 7-9, 12, 14 & 18)	1
*	63-5090	Anti-Scalp Roller Assembly (Incl. Ref. #8-9, 11 & 15-17)	1
*	03440	Full Roller Kit (Incl. 3 No. 61-0410)	1
*	03450	Wiehle Roller Kit (Incl. 3 No. 62-7410)	1
*	03445	Sectional Roller Kit (Incl. 3 No. 62-4970)	1
*	03447	Anti-Scalp Roller Kit (Incl. 3 No. 63-5090)	1

 *Not Illustrated

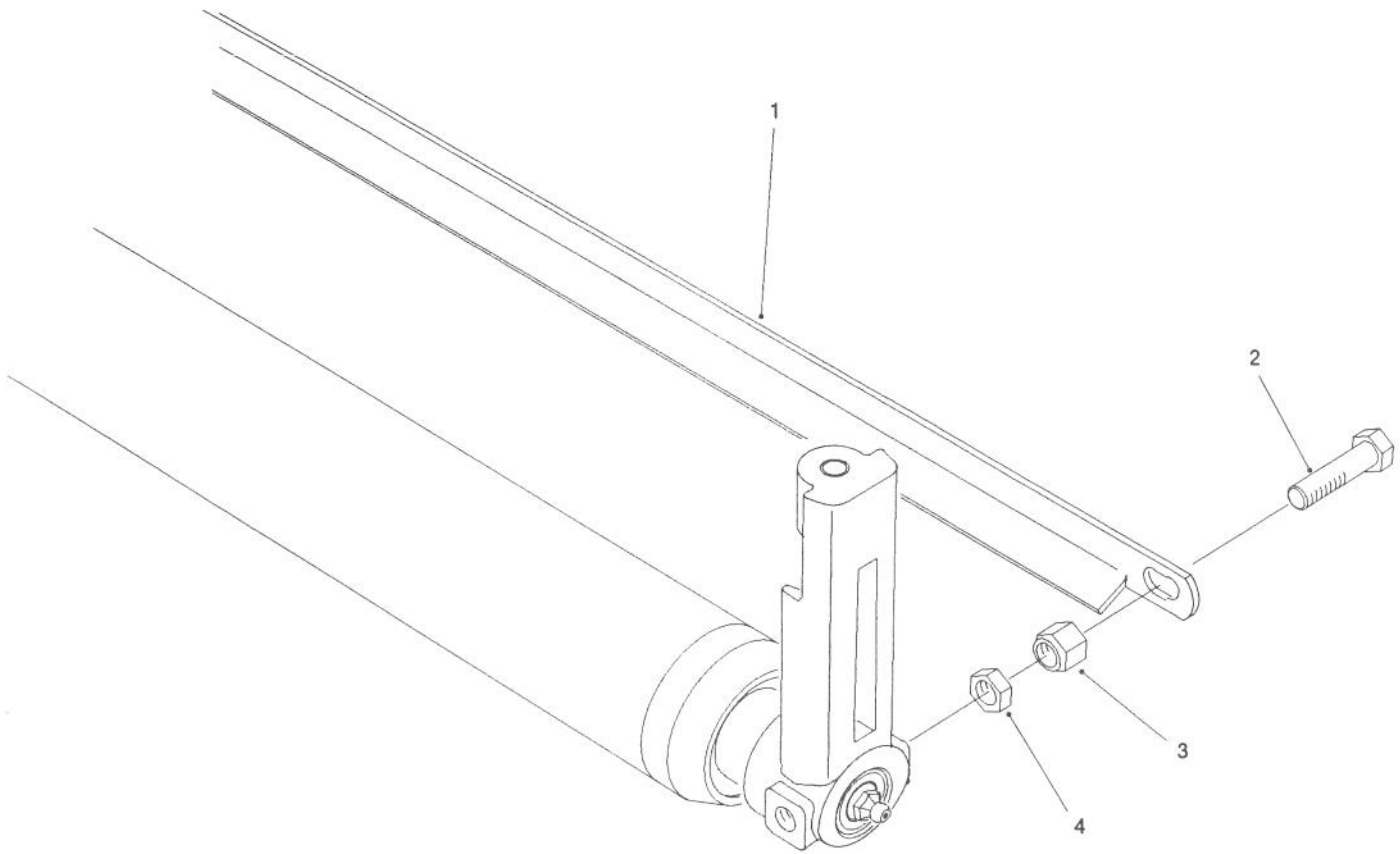


T-0288

CUTTING UNIT ROLLER SCRAPER KIT NO. 60-9560 (Optional)

Ref. No.	Part No.	Description	No. Used
1	61-0590	Scraper - Roller	3
2	323-7	Screw - Cap Hex. Hd.	6

Ref. No.	Part No.	Description	No. Used
3	3296-59	Nut - Lock	6
4	3218-3	Nut - Jam	6

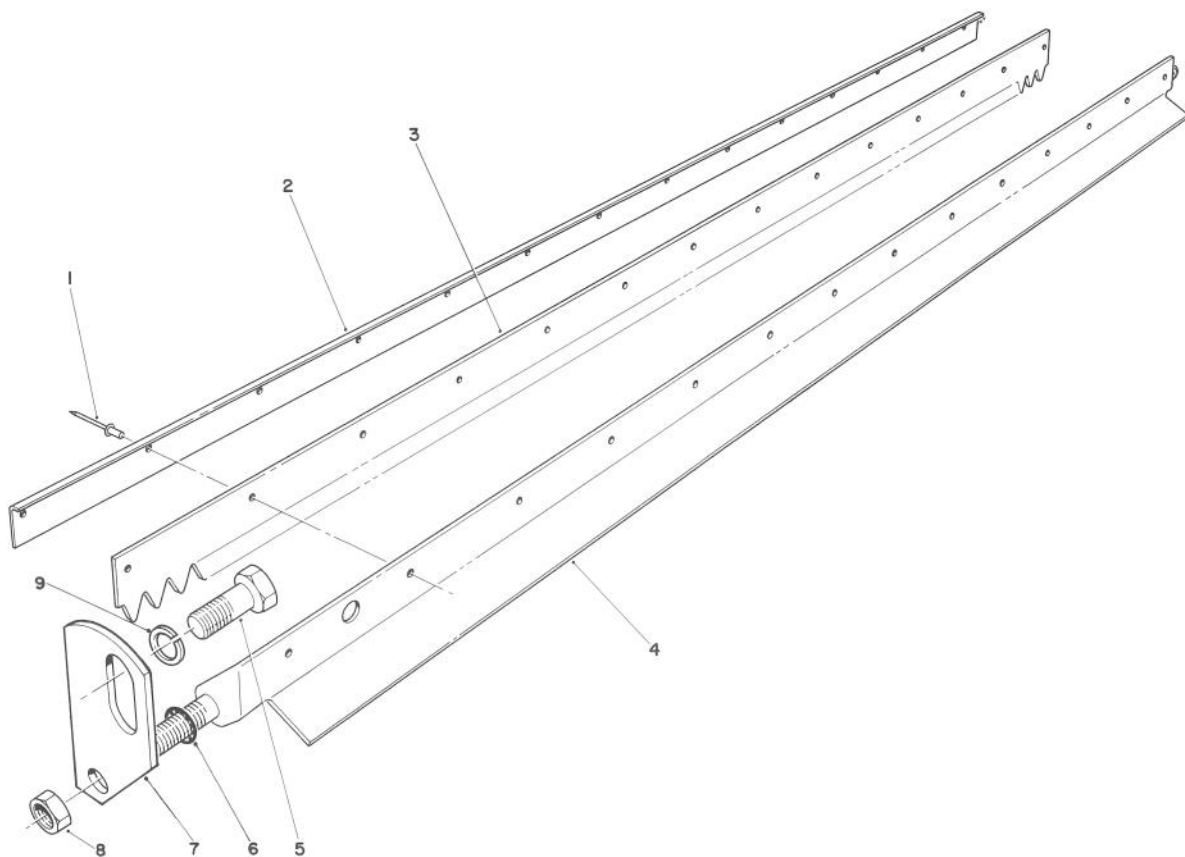 


T-1036

COMB KIT PART NO. 67-9400 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3296-13	Rivet - Pop	14
2	67-9450	Support - Comb	1
3	67-9470	Comb	1
4	67-9430	Plate - Comb	1
5	323-7	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
6	3254-18	Washer - Lock I.T.L.W.	6
7	80-4690	Support - Scraper	2
8	3296-39	Nut - Lock	2
9	3256-35	Washer	6

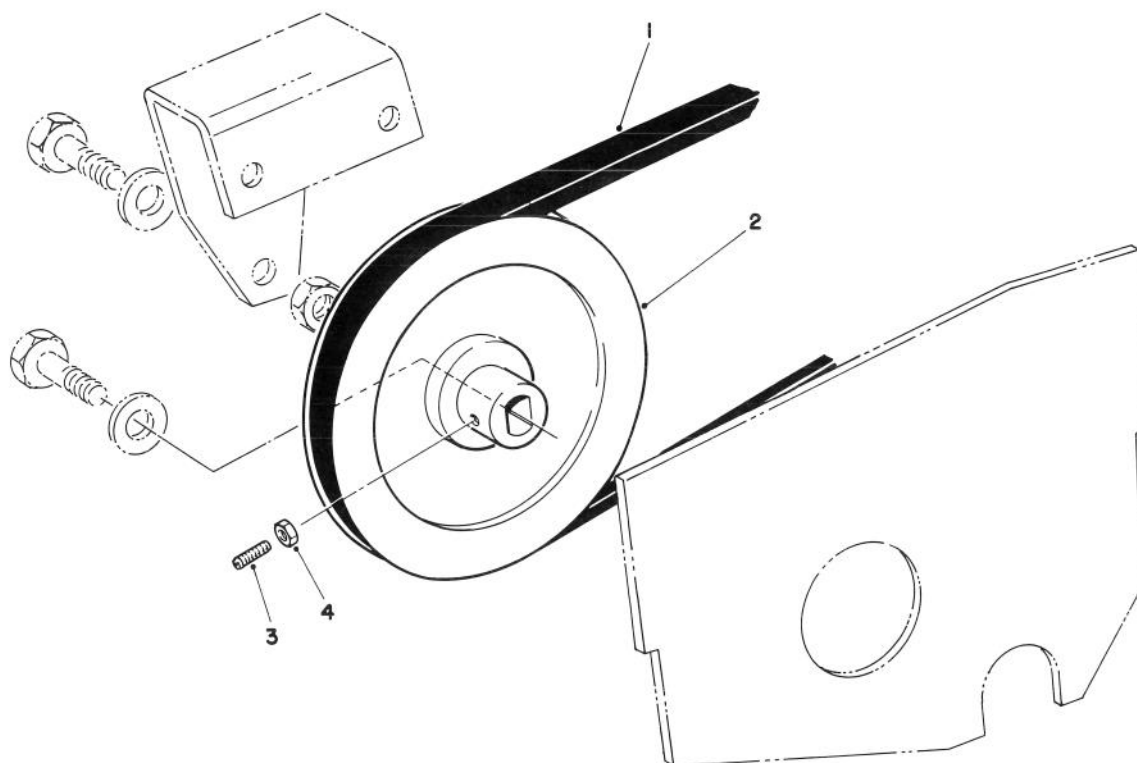 


T-0930

LARGE PULLEY KIT NO. 67-9540 (Optional)

Ref. No.	Part No.	Description	No. Used
1	80-4290	Pulley - Reel	3
2	72-4770	Belt - V	3

Ref. No.	Part No.	Description	No. Used
3	3247-6	Screw - Set	3
4	3218-3	Nut - Jam	3

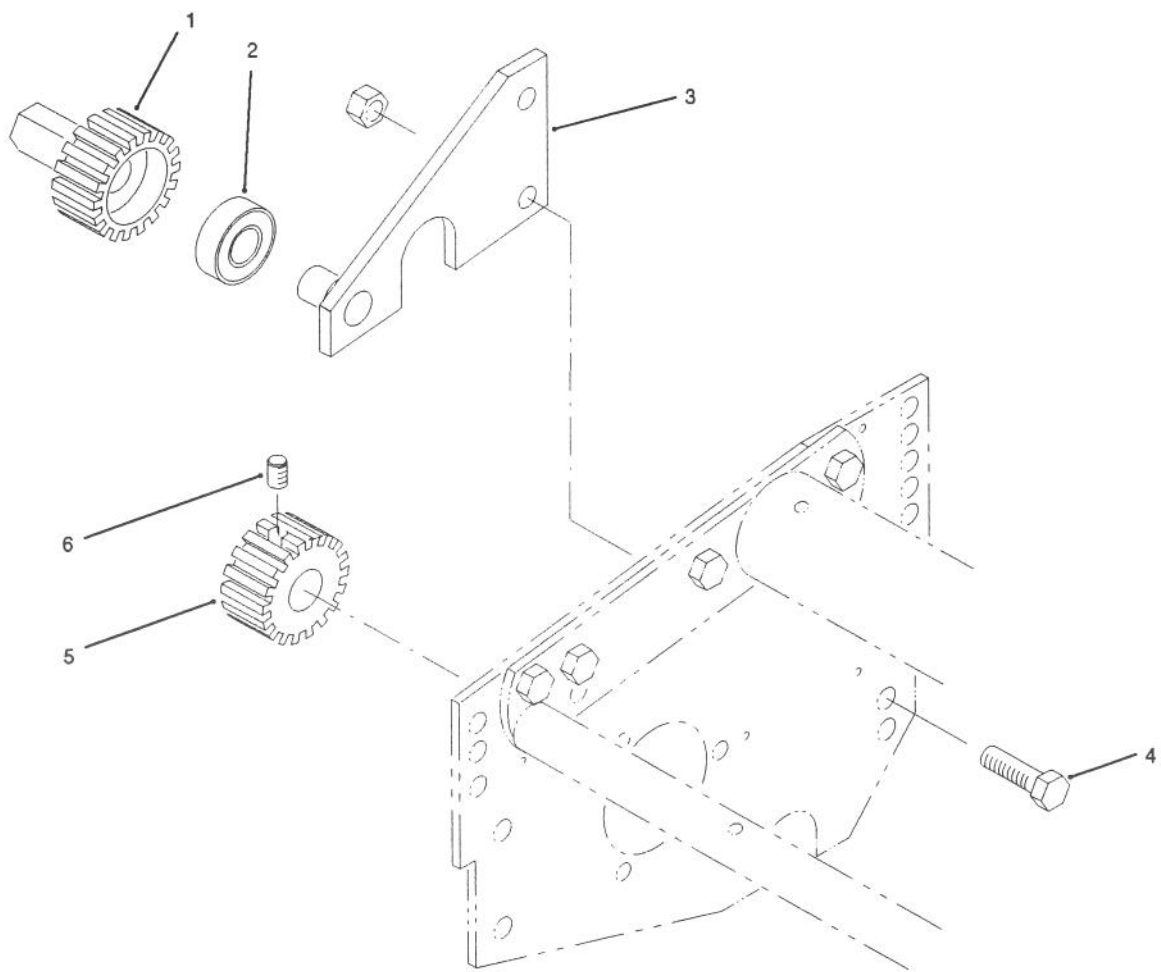 


T-1372

BACKLAP KIT NO. 84-5510

Ref. No.	Part No.	Description	No. Used
1	84-5590	Gear - Driver	1
2	251-270	Bearing - Ball	1
3	84-5580	Plate - Attachment (L.H. Cutting Unit)	1
*	84-5570	Plate - Attachment (R.H. & Ctr. Cutting Unit)	2

Ref. No.	Part No.	Description	No. Used
4	323-7	Screw - Cap Hex. Hd.	6
5	84-5560	Gear - Reel Shaft	3
6	3246-9	Screw - Set	6

 *Not Illustrated

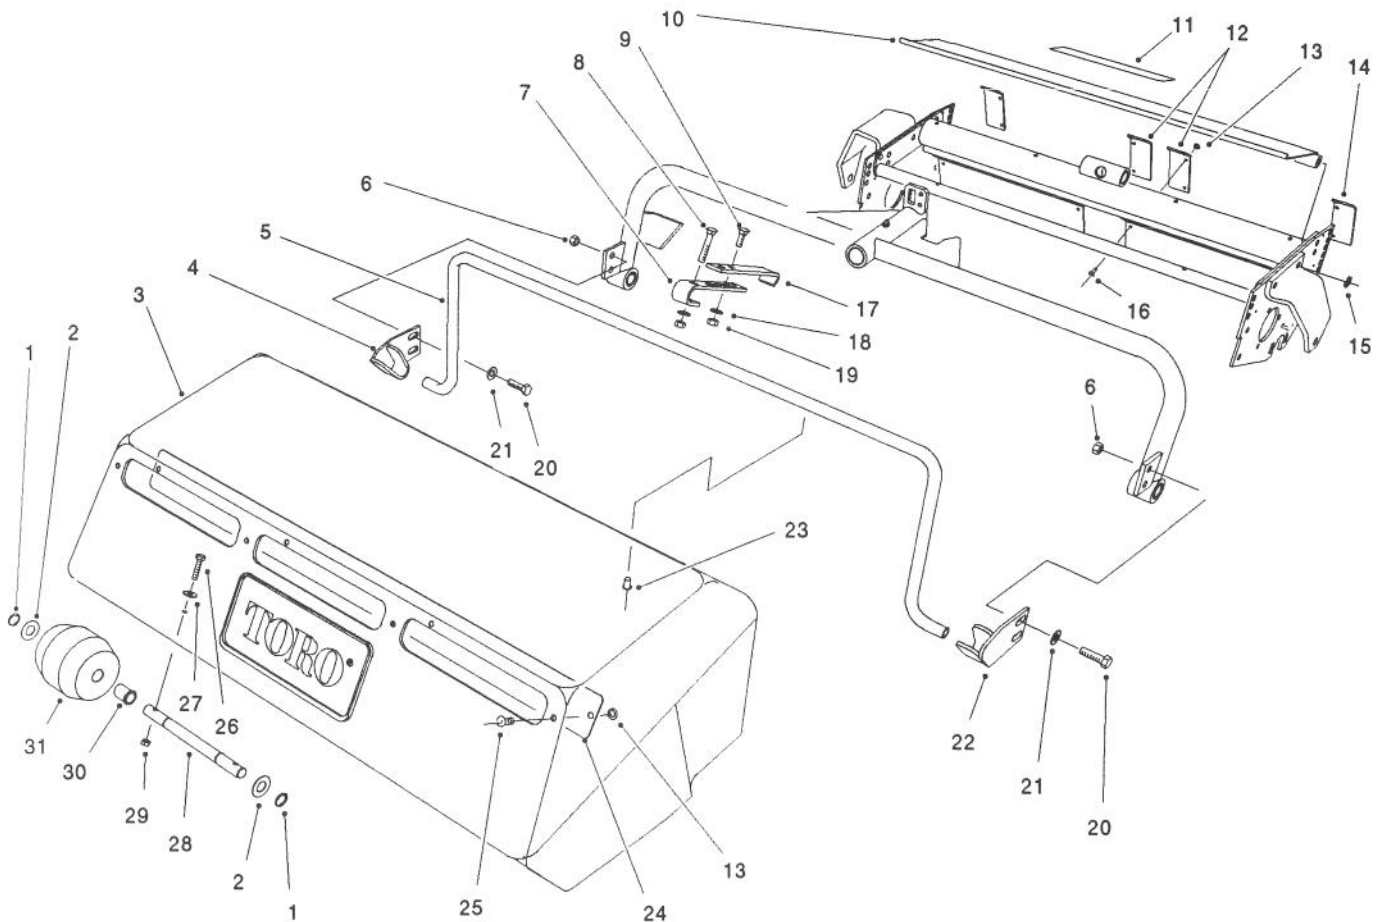

T-0289


GRASS COLLECTION SYSTEM MODEL NO. 03433 (Optional) (Front Cutting Unit Basket Assembly)

Ref. No.	Part No.	Description	No. Used
1	32120-64	Ring - Snap	8
2	3-9274	Spacer - Wheel	8
3	61-1330	Front Grass Basket Assy. (Incl. Ref. #1, 2, 5, 7-9, 13, 17-19 & 23-31)	2
4	61-1280	Bracket - Basket R.H.	2
5	61-1190	Support - Basket (Front)	2
6	3296-39	Nut - Lock	8
7	61-3160	Hanger - Basket (Front)	2
8	3230-5	Bolt - Carriage	2
9	3230-2	Bolt - Carriage	4
10	61-0750	Deflector - Grass	2
11	62-5070	Decal - Warning	2
12	61-3290	Cover - Middle	4
13	3256-49	Washer - Flat	32
14	61-3280	Cover - End	4
15	3253-21	Washer - Lock	4

Ref. No.	Part No.	Description	No. Used
16	3269-23	Rivet - Pop	24
17	62-7230	Hanger - Adjustable (Front)	2
18	3256-23	Washer - Flat	6
19	3296-29	Nut - Lock	6
20	323-7	Screw - Cap Hex. Hd.	8
21	3256-24	Washer - Flat	8
22	61-1270	Bracket - Basket L.H.	2
23	3269-18	Rivet - Pop	20
24	61-3170	Baffle - Grass	2
25	3269-22	Rivet - Pop	8
26	321-8	Screw - Cap Hex. Hd.	8
27	3256-2	Washer - Flat	8
28	5-2891	Shaft - Wheel	4
29	32153-4	Nut-Lock	8
30	256-90	Bushing - Flange	8
31	4-7439	Wheel Assembly (Incl. Ref. #30)	4

NOTE: Left Front Cutting Unit Shown

 NOTE: Model No. 03433 Includes 2 Front and 1 Rear Basket Assembly.

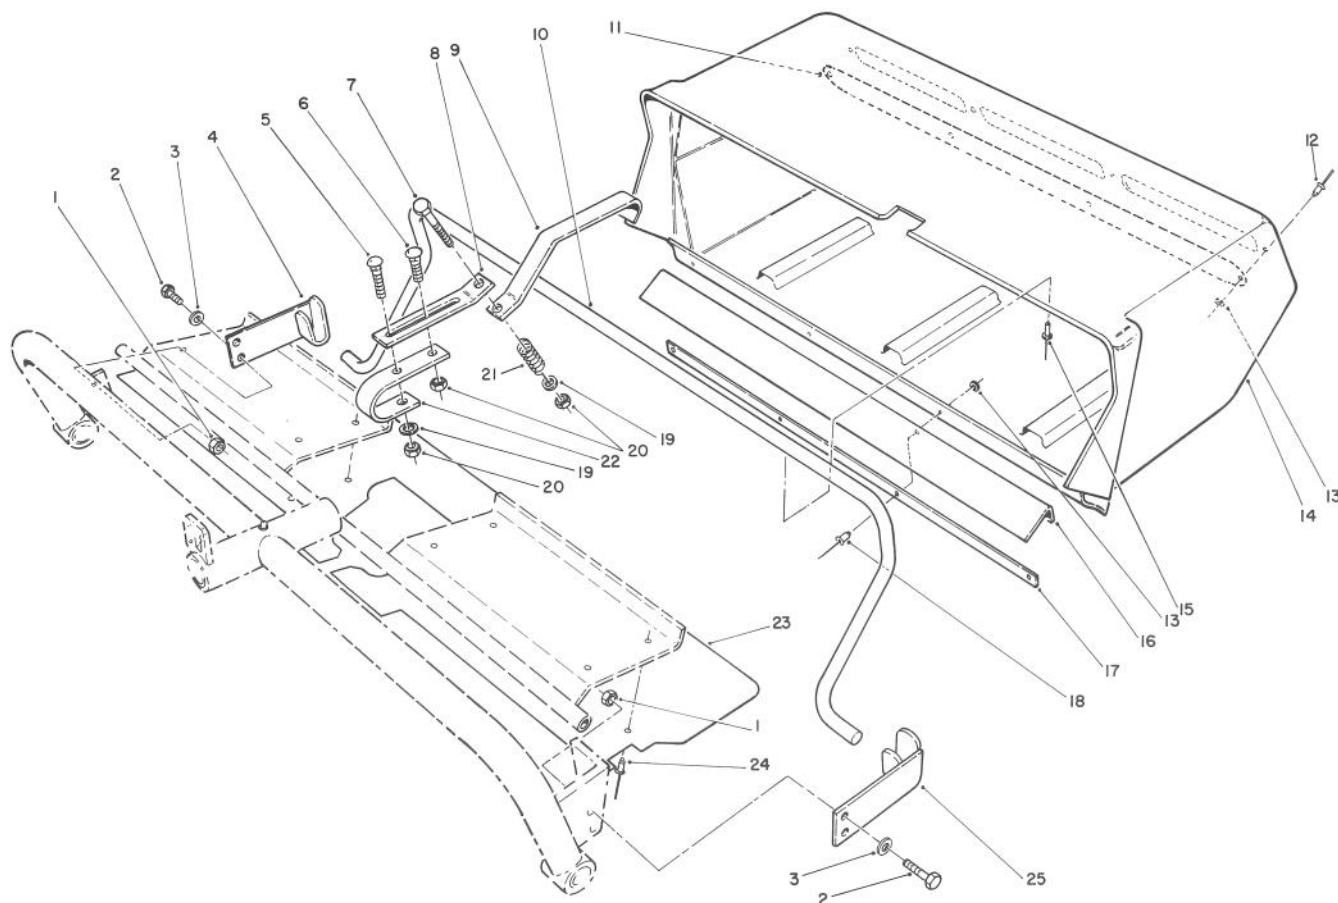

T-0290


GRASS COLLECTION SYSTEM MODEL NO. 03433 (Optional) (Rear Cutting Unit Basket Assembly)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	3	14	61-1340	Rear Grass Basket Assy. (Incl. Ref. #10-13 & 15-18)	1
2	323-7	Screw - Cap Hex. Hd.	4	15	3269-18	Rivet - Pop	10
3	3256-24	Washer - Flat	4	16	62-5130	Flap - Rubber	1
4	61-1260	Bracket - Basket R.H.	1	17	63-8740	Strap - Basket	1
5	3230-8	Bolt - Carriage	1	18	3290-282	Rivet - Pop	10
6	3230-2	Bolt - Carriage	1	19	3256-23	Washer - Flat	2
7	322-7	Screw - Cap Hex. Hd.	1	20	3296-29	Nut - Lock	3
8	67-5910	Plate - Rear	1	21	63-4220	Spring - Compression	1
9	67-5890	Hanger - Basket Rear	1	22	62-7480	Bracket - Hanger	1
10	67-5920	Support - Basket Rear	1	23	67-5800	Flap - Basket Rear	1
11	61-3170	Baffle - Grass	1	24	3269-23	Rivet - Pop	8
12	3269-22	Rivet - Pop	4	25	61-1250	Bracket - Basket L.H.	1
13	3256-49	Washer	8				


NOTE: Model No. 03433 Includes 2 Front and 1 Rear Basket Assembly.

ENGINE KOHLER MODEL NO. M16QS SPEC NO. 711563

 
Air Intake

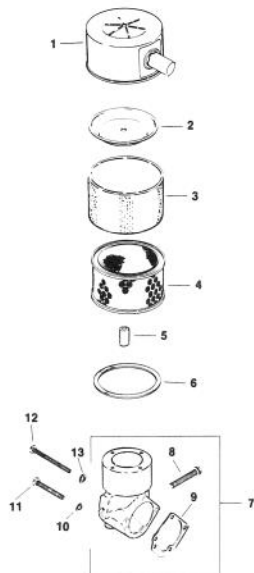


Baffles & Shroud

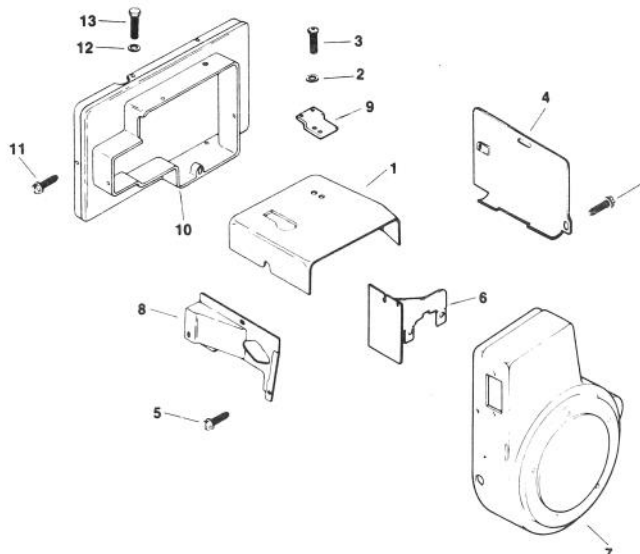 


Breather & Vent

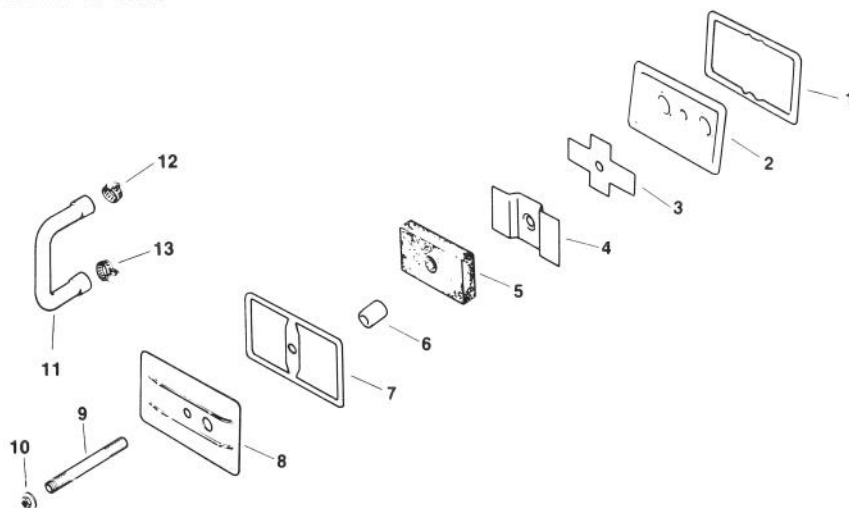 


Camshaft & Valves

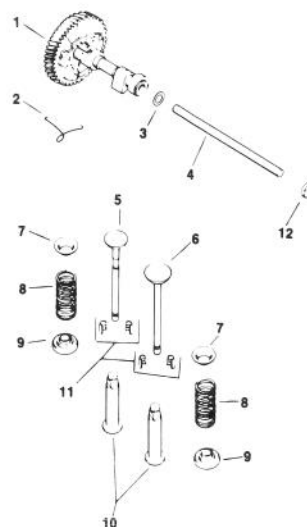 

Carburetor

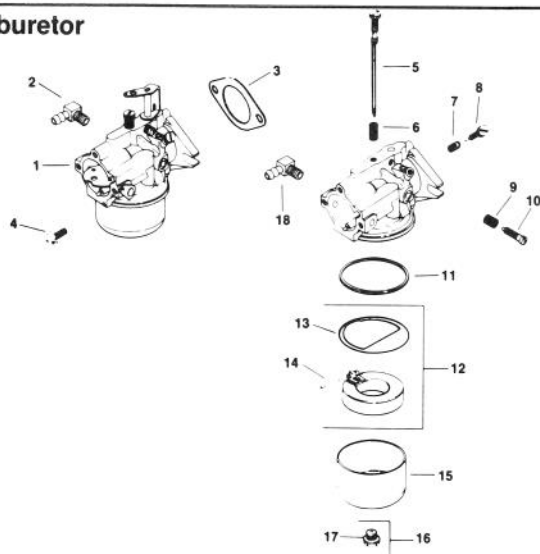 

Crankcase

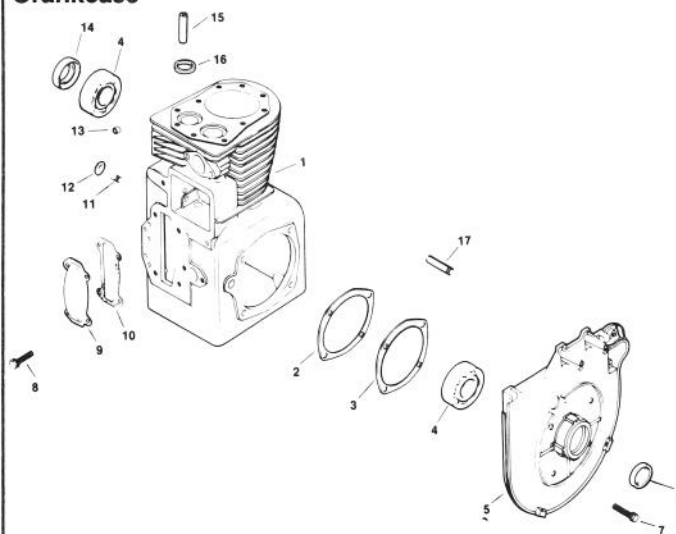 


ENGINE KOHLER MODEL NO. M16QS SPEC NO. 711563

Ref. No.	Part No.	Description	No. Used
		Air Intake	
1	52 096 26	Cover - Air Cleaner	1
2	52 082 04	Cover - Element	1
3	45 083 01	Precleaner	1
4	45 083 02	Element - Air Cleaner	1
5	231032	Seal	1
6	47 041 11	Gasket - Base	1
7	48 754 03	Kit - Air Cleaner Elbow (Incl. Ref. #8 & 9)	1
8	52 086 11	Screw - Self Tap	1
9	25 041 06	Gasket - Air Cleaner Elbow	1
10	X-22-9	Washer - I.T.L.W.	2
11	X-50-57	Screw - Pan Hd. Mach.	2
12	X-50-37	Screw - Pan Hd. Mach.	1
13	X-25-79	Washer - Plain	1
		Baffles & Shroud	
1	45 063 08	Baffle - Head	1
2	X-25-53	Washer - Plain	1
3	47 086 08	Screw - Pozidriv T.H.	1
4	47 063 10	Baffle - Cylinder	1
5	52 086 11	Screw - Hex Wash. Hd.	6
6	47 063 07	Baffle - Inner	1
7	47 027 42	Housing - Blower	1
8	47 063 06	Baffle - Side Air	1
9	47 126 23	Bracket - Duct	1
10	47 755 33	Kit - Air Duct	1
11	X-67-64	Screw - Hex Wash. Hd.	3
12	X-25-20	Washer - Plain	1
13	X-154A	Screw - H.C.	1
		Breather & Vent	
1	235048	Gasket - Breather Plate	1
2	235631	Plate - Breather	1
3	235047	Reed - Breather	1
4	235117	Baffle - Breather	1
5	235118	Filter - Breather	1
6	231032	Seal - Breather	1
7	275144	Gasket - Valve Cover	1
8	275839	Cover - Valve	1
9	275220	Stud - Valve Cover	1
10	X-799-1	Palnut	1
11	47 326 02	Hose	1
12	X-426-3	Clamp - Hose	1
13	X-426-9	Clamp - Hose	1
		Camshaft & Valves	
1	47 010 11	Camshaft Assembly	1
2	47 089 01	Spring - Actuating	1
3	275066	Spacer .005	A/R
	275067	Spacer .010	A/R
4	47 380 09	Pin - Camshaft	1
5	237672	Valve - Exhaust	1
6	235582	Valve - Intake	1
7	235011	Retainer - Upper Spring	2
8	235168	Spring - Valve	2
9	52 413 01	Rotator - Valve	2
10	D-235327	Tappet	2
11	41 755 10	Kit - Retainer	2
12	X-702-3	Plug - Cup	1


Ref. No.	Part No.	Description	No. Used
		Carburetor	
1	45 053 76	Carburetor Assembly (Incl. Ref. #5-18)	1
2	25 155 02	Connector - Hose	1
3	47 049 01	Gasket - Carburetor	1
4	X-770-1	Screw - Sltd. Hd.	2
5	45 103 01	Needle - Main Fuel Adj.	1
6	200383	Spring - Main Fuel	1
7	200380	Spring - Idle Fuel	1
8	275231	Needle - Idle Fuel Adj.	1
9	232555	Spring - Idle Speed	1
10	232556	Screw - Idle Speed Adj.	1
11	200375	Gasket - Bowl	1
12	25 757 03	Kit - Float (Incl. Ref. #13)	1
13	25 041 02	Gasket - Bowl Baffle	1
14	200376	Pin - Float Hinge	1
15	235448	Bowl - Fuel	1
16	47 100 06	Screw - Bowl Retainer (Incl. Ref. #17)	1
17	200372	Gasket - Bowl Screw	1
18	X-391-10	Connector - Hose	1
	25 757 02	Kit - Carburetor Repair	1
	25 757 05	Kit - Choke/Throttle Repair	1
		Crankcase	
1		Block Cylinder Assembly (Incl. Ref. #13,15,16) (USE: Miniblock 4578233)	1
2	47 422 05	Gasket - Shim	A/R
3	47 041 09	Gasket - Bearing Plate	1
4	235376	Bearing - Ball	2
5	47 146 11	Plate - Bearing	1
6	47 032 06	Seal - Front Oil	1
7	X-159-2	Screw - H.C.	4
8	X-132-6	Screw - H.C.	4
9	235026	Cover - Camshaft	1
10	235025	Gasket - Camshaft Cover	1
11	235125-5	Shaft - Governor Gear	1
12	X-230-11	Plug - Expansion	1
13	234866	Bearing - Gov. Cross Shaft	1
14	47 032 07	Seal - Rear Oil	1
15	230265	Insert - Valve	2
16	235007-5	Guide - Valve	2
17	236559	Shaft - Balance Gear Stub	3

ENGINE KOHLER MODEL NO. M16QS SPEC NO. 711563

 
Crankshaft

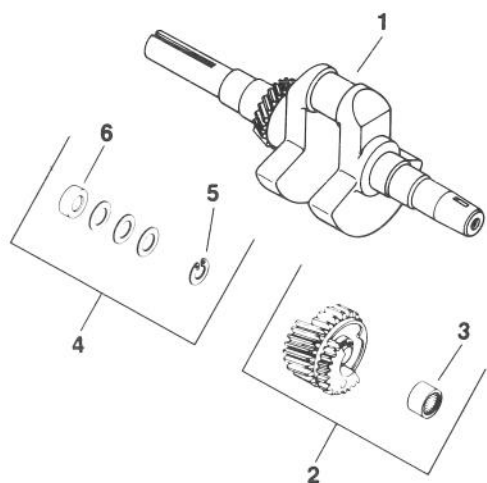


Cylinder Head

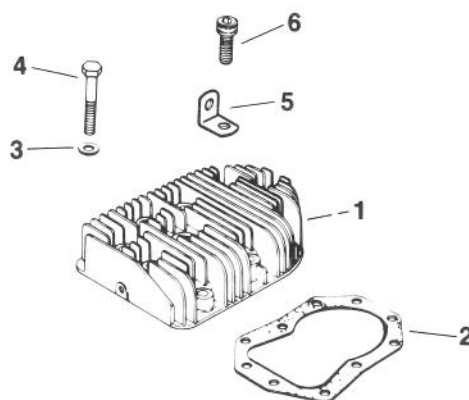 


Dipstick

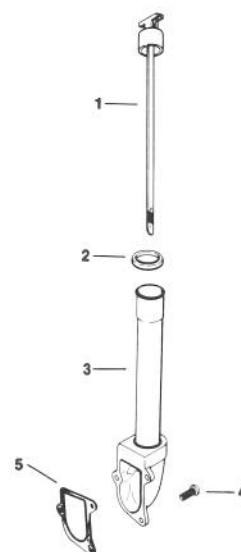 


Electric Start

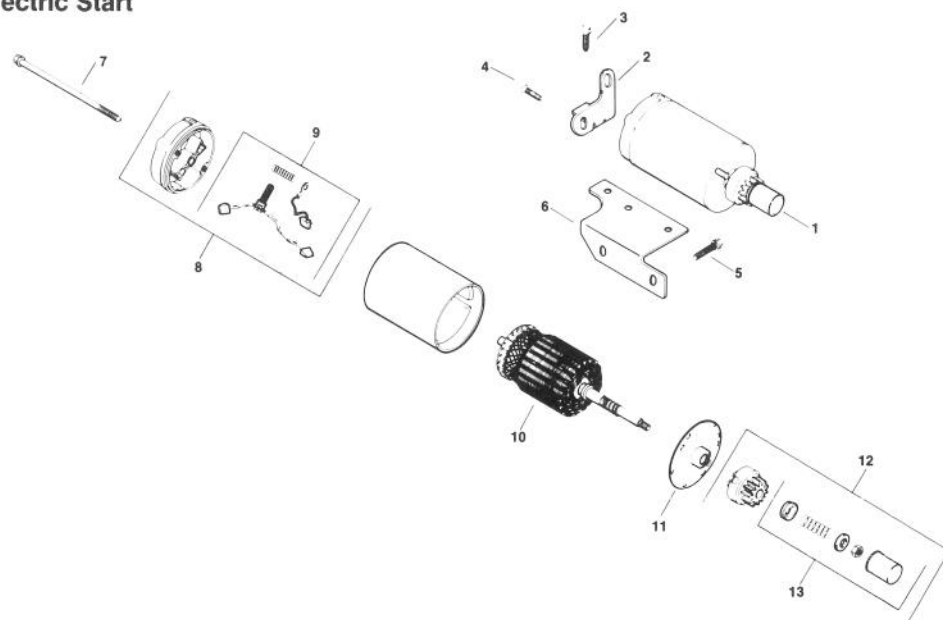 


Exhaust

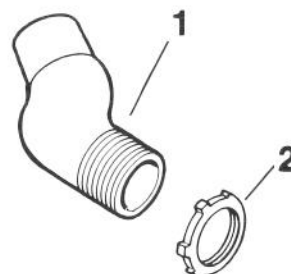 

Flywheel

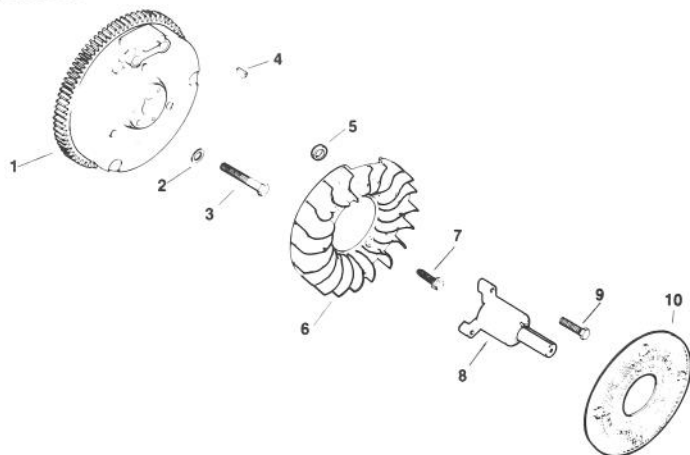 

Fuel Pump

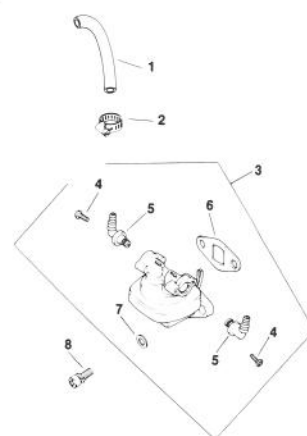 


ENGINE KOHLER MODEL NO. M16QS SPEC NO. 711563

Ref. No.	Part No.	Description	No. Used
		Crankshaft	
1	45 014 86	Crankshaft	
2	45 043 03	Gear Assembly (Incl. Ref. #3)	3
3	47 030 01	Bearing - Needle	3
4	47 755 01	Kit - Spacer (Incl. Ref. #5 & 6)	1
5	X-269-34	Retainer	3
6	237769	Spacer	3
		Cylinder Head	
1	45 015 09	Head - Cylinder	1
2	45 041 17	Gasket - Head	1
3	270889	Washer - Plain	10
4	270158	Screw- H.C.	9
5	47 445 02	Strap - Lifting	1
6	47 086 17	Screw - Hex Socket Hd.	1
		Dipstick	
1	47 038 27	Dipstick	1
2	41 153 01	O-Ring	1
3	47 029 06	Adapter - Oil Fill	1
4	X-131-2	Screw - F.H.	3
5	237064	Gasket	1
		Electric Start	
1	41 098 04	Starter Assembly (Incl. Ref. #7-13)	1
2	45 126 17	Brace - Tail	1
3	X-67-83	Screw - Hex Wash. Hd.	1
4	X-67-62	Screw - Hex Wash. Hd.	1
5	X-159-2	Screw - H.C.	2
6	47 126 29	Bracket - Solenoid	1
7	41 086 19	Bolt -Thru	2
8	41 227 04	Cap - Commutator End (Incl. Ref. #9)	1
9	52 755 15	Kit- Brush	1
10	45 170 02	Armature	1
11	41 227 03	Cap-Drive End	1
12	47 755 07	Kit - Drive (Incl. Ref. #13)	1
13	47 755 13	Kit- Drive Parts	1
	25 450 03	Tag - Caution	1
	52 357 01	Lubricant - Starter	


Ref. No.	Part No.	Description	No. Used
		Exhaust	
1	45 054 04	Elbow - Exhaust	1
2	45 100 01	Nut-Lock	1
		Flywheel	
1	47 025 53	Flywheel	1
2	52 468 15	Washer - Plain	1
3	25 086 24	Screw - Hex Mach.	1
4	X-46-3	Key - Woodruff	1
5	25 112 04	Spacer	4
6	25 157 01	Fan	1
7	25 086 21	Screw - Hex Wash. Hd.	4
8	235954	Shaft - Front Drive	1
9	X-159-2	Screw - H.C.	4
10	25 162 03	Screen - Grass	1
		Fuel Pump	
1	25 353 01	Line - Fuel	1
2	X-426-9	Clamp - Hose	2
3	47 559 08	Pump - Fuel Assembly (Incl. Ref. #4-7)	1
4	25 086 35	Screw - Tapping	2
5	25 294 01	Fitting & O-Ring - 90°	2
6	25 041 05	Gasket - Fuel Pump	1
7	X-25-63	Washer - Plain	2
8	X-174-2	Screw - F.H.M.	2

ENGINE KOHLER MODEL NO. M16QS SPEC NO. 711563

 
Governor

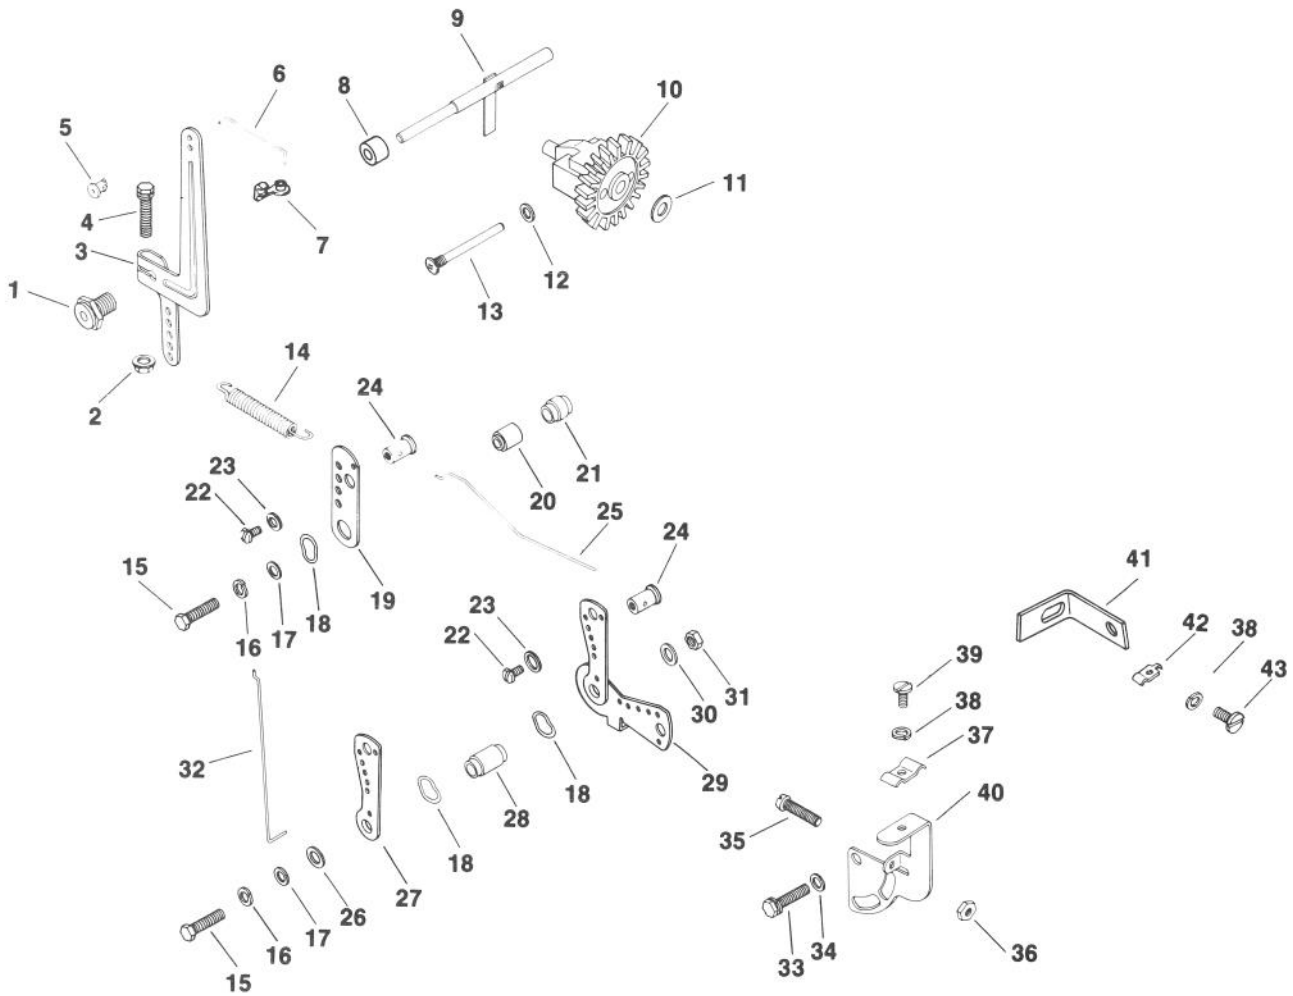


Ignition

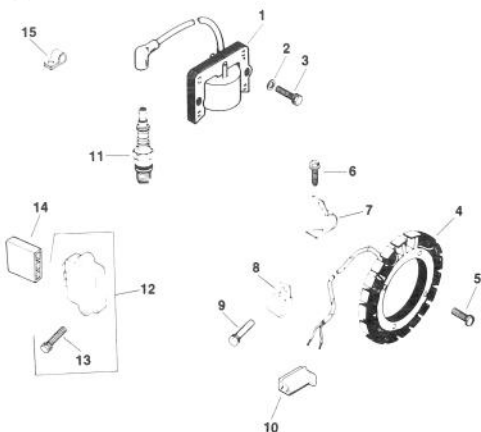 

Oil Pan

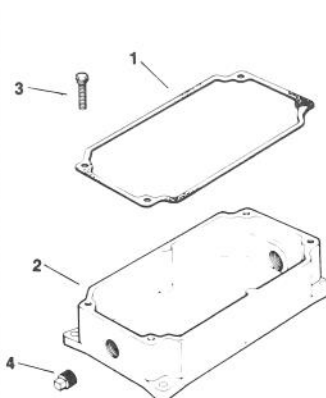 

Piston & Rod

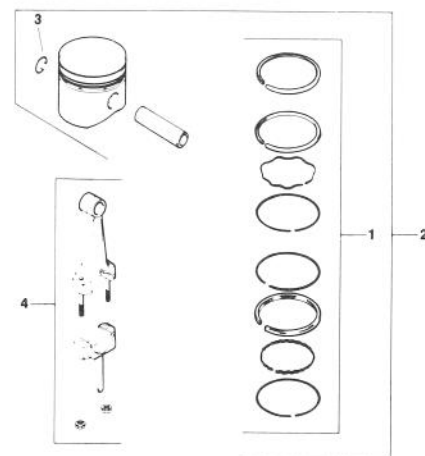 

ENGINE KOHLER MODEL NO. M16QS SPEC NO. 711563


Ref. No.	Part No.	Description	No. Used
		Governor	
1	235476	Bushing - Governor	1
2	X-799-1	Palnut	1
3	47 090 20	Lever - Governor	1
4	X-776-1	Screw - H.C.	1
5	25 158 09	Bushing - Linkage Rtng.	1
6	47 079 05	Linkage - Governor	1
7	47 158 07	Bushing - Linkage Rtng.	1
8	X-400-80	Spacer	1
9	A-235256-S	Kit - Governor Cross Shaft	1
10	A-235743-S	Kit - Governor Gear	1
11	237022	Washer-Thrust	1
12	25 468 01	Washer - Plain	1
13	231355	Pin - Governor Stop	1
14	235496	Spring - Governor	1
15	X-5-26	Screw - H.C.	2
16	X-20-1	Washer - Lock	2
17	X-25-63	Washer - Plain	2
18	275690	Washer - Wave	3
19	235086	Bracket - Speed Control	1
20	235085	Spacer	1
21	X-384-2	Spacer	1
22	X-51-8	Screw - Slted. Pan Hd.	1
23	X-25-102	Washer - Plain	1
24	48 755 10	Kit - Clamp (Incl. Ref. #22 & 23)	1
25	47 079 08	Linkage - Throttle	1
26	X-25-82	Washer - Plain	1
27	47 090 05	Lever - Choke	1
28	47 112 19	Spacer	1
29	47 090 09	Lever - Throttle	1
30	X-25-95	Washer - Plain	1
31	X-81-1	Nut - Hex	1
32	47 079 01	Linkage - Choke	1
33	X-132-6	Screw- H.C.	1
34	X-25-72	Washer - Plain	1
35	232556	Screw	1
36	X-72-4	Nut - Hex	1
37	1223701	Clamp - Cable	1
38	X-19-1	Washer-Lock	2
39	X-67-38	Screw	1
40	47 126 13	Bracket - Choke	1
41	47 126 36	Bracket - Choke	1
†42	81-1690	Clamp - Cable	1
43	X-15-5	Screw - F.H.M.	1

Ref. No.	Part No.	Description	No. Used
		Ignition	
1	47 584 02	Module - Ignition	
2	X-25-79	Washer - Plain	2
3	X-156-1	Screw - H.C.	2
4	237878	Kit - Stator	1
5	X-67-51	Screw - Hex. Wash. Hd.	4
6	X-67-59	Screw - Hex. Wash. Hd.	1
7	X-728-1	Clip (Mounts to Bearing Plate)	1
8	235173	Clip (Mounts to Cylinder Block)	1
9	X-132-6	Screw	1
10	41 155 03	Connector - Male	1
11	235041-5	Spark Plug RH-10	1
12	25 755 03	Kit - Rectifier-Regulator (Incl. Ref. #13)	1
13	X-132-5	Screw - H.C.	2
14	236602	Connector - Female	1
15	210281	Clip - Hi-Tension Lead	1
	47 518 38	Lead - White, Module to Connector (23"-18 g. - insulated push on tab - uninsulated push on tab terminals)	1
	47 518 46	Lead - Violet, Rectifier Regulator to Connector (12.5" - 14-gauge - uninsulated push on tab terminals)	1
		Oil Pan	
1	235057	Gasket - Oil Pan	1
2	47 199 10	Pan-Oil	1
3	X-159-3	Screw - H.C.	4
4	X-75-6	Plug - Sq. Hd. Solid	2
		Piston & Rod	
1	45 108 10	Ring Set (Std. & .003)	1
	45 108 11	Ring Set (.010)	1
	45 108 12	Ring Set (.020)	1
	45 108 13	Ring Set (.030)	1
2	45 874 11	Piston w/Ring Set (Std.)	1
	45 874 12	Piston w/Ring Set (.003)	1
	45 874 13	Piston w/Ring Set (.010)	1
	45 874 14	Piston w/Ring Set (.020)	1
	45 874 15	Piston w/Ring Set (.030)	1
3	47 018 01	Retainer - Piston Pin	2
4	45 067 24	Connecting Rod (Std.)	1
	45 067 25	Connecting Rod (.010)	
	45 782 33	Miniblock	1
	47 004 02	Gasket Set w/o Seals	1
	45 755 12	Gasket Set w/Seals	1

†Available from your local TORO Distributor

SPECIAL TOOLS

 
DRIVE MOTOR SEAL INSTALLATION TOOL NO. *19-2660

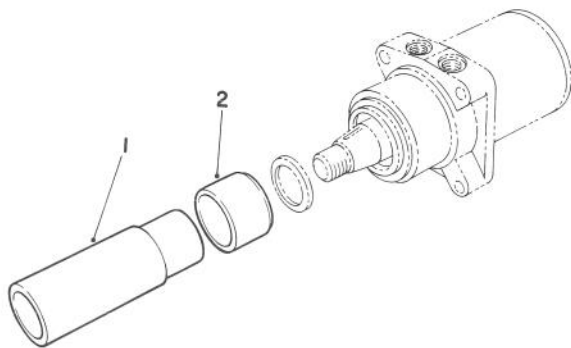

T-0728

Ref. No.	Part No.	Description	No. Used
1		Driver - Seal	1
2		Holder - Seal	1

 
BEDKNIFE SCREW TOOL NO. *TOR510880

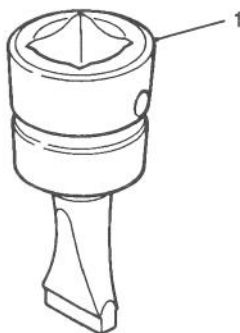

T-0729

Ref. No.	Part No.	Description	No. Used
1		Tool - Bedknife Screw	1

 
HYDRAULIC OIL RESERVOIR PLUG NO. *63-4310

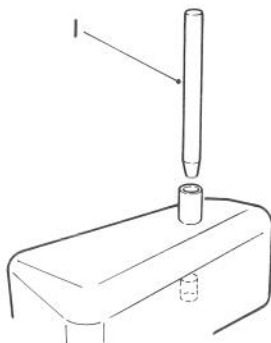

T-1213

Ref. No.	Part No.	Description	No. Used
1		Plug - Reservoir	1

 BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

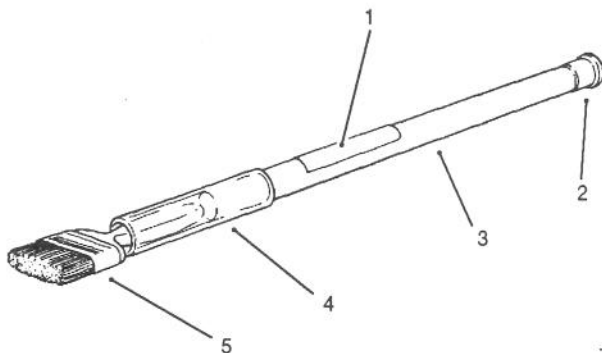

T-0731

Ref. No.	Part No.	Description	No. Used
1	12-9140	Decal	1
2	2410-18	Plug	1
3	29-9080	Handle	1
4	29-9090	Hose - Handle	1
5	36-4310	Brush	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
03440	Full Roller Kit	37 * 1	25-2530	Pin - Straight	17 26 1
03445	Sectional Roller Kit	37 * 1	25-2560	Cone - Relief Valve	17 18 1
03446	Skid Kit	33 23 1	25-2570	Spring - Relief Valve	17 17 1
03447	Anti-Scalp Roller Kit	37 * 1	25-2580	Shaft - Trunion	17 12 1
03450	Wiehle Roller Kit	37 * 1	25-2620	Valve - By-Pass	17 4 1
3-0348	Bushing	30 3 6	25-2630	Ring	17 3 1
3-0348	Bushing	31 9 2	25-2640	Spring - Check Valve	17 48 2
3-0348	Bushing - Sleeve	27 7 4	25-2650	Plug - Check Valve	17 50 2
3-0348	Bushing - Sleeve	28 17 2	25-2680	Gerotor Assembly	17 25 1
3-6498	Washer - Thrust	3 7 A/R	25-2690	Housing - Charge Pump	17 21 1
3-6498	Washer - Thrust	37 15 4	25-3180	Kit - Check Valve	17 * 1
3-9274	Spacer - Wheel	42 2 8	25-3210	Seal - Lip	17 10 2
4-7439	Wheel Assembly	42 31 4	26-3790	Nut - Lock	19 23 2
5-0743	Spring - Extension	27 17 2	27-1850	Washer	32 61 1
5-0743	Spring - Extension	28 1 1	27-1850	Washer	35 57 1
5-2653	Cable Pulley Assembly	23 8 1	27-9870	Pin - Seat Spring	5 28 1
5-2655	Keeper - Cable	23 7 1	28-0120	Bracket - Hinge L.H.	1 19 1
5-2656	Keeper - Cable	23 30 2	28-0130	Bracket - Hinge R.H.	2 42 1
5-2891	Shaft - Wheel	42 28 4	28-3420	Cone - Charge Relief	17 33 1
5-4723	Spring - Compression	9 31 1	28-4210	Solenoid - Starter	14 12 1
5-7280	Key - Square (Short)	22 16 3	28-6180	Pin	5 47 1
5-7290	Spring - Extension	19 6 1	28-8080	Boot - Battery Terminal	14 6 1
10-4850	Spring - Compression	2 44 2	29-6120	Plate - Pump	18 29 1
10-6821	Brake Drum Assembly	19 18 2	29-6150	Spring - Leaf	18 26 1
10-6870	Hub - Wheel	19 19 2	29-6162	Switch - Lift	23 4 1
10-7070	Key-Square	11 5 1	29-6162	Switch - Micro	18 5 1
10-7130	Wire - Battery/Solenoid	10 3 1	29-6170	Spring - Extended Leaf	18 27 1
10-8120	Bolt - Battery	14 8 2	29-8870	Washer	34 12 1
11-0590	Screw - Thread Forming	23 17 4	29-8870	Washer - Flat	31 16 1
11-0590	Screw - Cap Hex. Hd.	14 19 2	37-9590	Spring	5 21 1
11-9760	Screw - Hex. Hd. Self Tap	18 23 3	38-7820	Bearing - Idler	22 3 2
11-9760	Screw - Tapping	11 13 1	38-8000	Filter - Fuel	8 5 1
12-3270	Screw - Cap Hex. Hd.	11 30 8	39-9500	Washer - Flat	6 11 2
12-7059	Reel Assembly - 5 Blade	35 * 1	40-3790	Bottom Rail Assembly R.H.	6 40 1
12-7059	Reel Assy. - 5 Blade	32 * 1	40-3820	Bottom Rail Assembly L.H.	6 33 1
12-7079	Reel Assembly - 5 Blade	35 54 1	43-1950	Valve - Hydraulic	25 16 1
12-7079	Reel Assy. - 5 Blade	32 57 1	43-8600	Spring - Compression	5 29 1
12-7089	Reel Assembly - 8 Blade	35 * 1	43-8610	Guide - Spring & Ball Seat	5 30 1
12-7099	Reel Assembly - 8 Blade	35 * 1	43-8620	Guide - Switch Pin	5 25 1
13-1279	Idler Pulley Assembly	22 * 1	43-8860	Plunger - Switch	5 26 1
13-1699	Reel Assembly - 11 Blade	35 * 1	43-8870	Boot - Switch	5 20 1
13-1709	Reel Assembly - 11 Blade	35 * 1	44-2212	Lamp - Pilot	9 3 1
13-3649	Overhaul Kit	32 * 1	44-8310	Ring - Retaining	12 3 2
13-3649	Overhaul Kit	35 * 1	44-8320	Spring - Compression	12 10 3
20-0150	Rod End Assembly	4 5 1	44-8330	Spacer - Pulley Bearing	12 6 1
21-0140	Rod End Assembly	3 27 1	44-8350	Field Assembly	12 1 1
22-8330	Plug	26 1 2	44-8360	Field Coil, Rotor & Bearing	12 4 1
22-8340	Spring	26 3 2	46-8810	Stop - Spring	18 4 1
22-8350	Ball	26 4 2	47-2980	Hose - Fuel	8 3 1
22-8360	Pin - Cam	26 6 2	47-2988	Hose - Fuel	8 7 1
22-8370	Seat - Check Valve	26 5 2	48-1800	Cylinder Block Kit	17 5 1
22-8380	Retainer - Spring	26 10 2	49-8480	Shaft - Trunion	17 28 1
22-8410	Spring	26 11 1	49-8520	Kit - Implement Relief	17 * 1
22-8420	Spool	26 8 1	51-3150	Shim - Spring Arm	18 28 1
22-8480	Snap Ring- Spool	26 13 1	52-2890	Bushing - Flanged (Nylon)	34 9 2
22-8490	Snap Ring	26 14 1	52-2890	Bushing - Flanged Nylon	31 13 2
22-8500	O-Ring	26 9 2	52-2980	Pivot - Single Point Adjust	31 17 1
23-0660	Switch - Key	9 19 1	52-2980	Pivot - Single Point Adjust	34 13 1
23-3030	Spacer	26 12 1	52-2990	Capscrew - Spring Retainer	31 19 1
23-8910	Fitting - 90° Hose Elbow	16 26 2	52-2990	Capscrew - Spring Retainer	34 16 1
25-2380	Plate - Thrust	17 39 1	52-3000	Arm - Spring	31 18 1
25-2390	Plate - Valve	17 40 1	52-3000	Arm - Spring	34 17 1
25-2400	Gasket	17 43 1	54-0110	Filter - Oil	16 28 1
25-2430	Pin - Straight	17 41 1	55-3570	Cap-Fuel	8 11 1
25-2450	Swash/Plate	17 37 1	55-4300	Decal - Warning	27 9 2
25-2460	Plug	17 14 2	55-4300	Decal - Warning	28 24 1
25-2470	Kit - Shim Pack	17 16 2	55-4330	Arm Rest Assembly L.H.	6 1
25-2480	Spring - Charge Relief	17 32 1	55-4331	Arm Rest Assembly R.H.	6 6 1
25-2490	Ball - Check Valve	17 47 2	55-8380	Seat Wire Assembly	6 32 1
25-2510	Washer	17 11 2	56-2230	Hose - Fuel	8 9 1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
56-3800	Cushion - Seat Back	6	21	1	61-0420	Support - HOC	36	5	4
56-3810	Platform - Seat	6	1	1	61-0430	Bracket - Rear	33	16	2
56-3820	Cover - Seat Sack	6	17	1	61-0430	Bracket - Rear	36	15	2
56-3850	Screw - Hex. Hd. Machine	6	4	2	61-0440	Bracket - Front	36	23	2
56-3870	Knob - Adjustment	6	3	1	61-0500	Spacer - Bearing	31	32	1
56-3880	Washer - Flat	6	2	2	61-0500	Spacer - Reel	34	32	1
56-3890	Nut - Hex.	6	7	1	61-0550	Shield - Top	31	23	2
56-3900	Spacer - Arm L.H.	6	26	1	61-0560	Shield - Top	34	27	1
56-3910	Spacer - Arm R.H.	6		1	61-0590	Scraper - Roller	38	1	3
56-3920	Bushing - Sleeve	6	27	4	61-0610	Guard - Side	31	37	1
56-3930	Washer - Flat	6	28	4	61-0660	Reel Frame	32	58	1
56-3940	Washer - Lock	6	29	4	61-0670	Rear Support	31	*	1
56-3950	Screw - Cap Hex. Hd.	6	30	4	61-0710	Bushing Assembly	30	7	6
56-3960	Cover - Screw	6	5	4	61-0750	Defector - Grass	42	10	2
56-3970	Carrier - Seat	6	8	2	61-0790	Screw - Cap Hex Hd.	36	4	4
56-3980	Clip - Rail	6	9	4	61-0790	Screw - Cap Hex. Hd.	33	5	2
56-3990	Screw - Machine	6	39	2	61-0860	Right Carrier Frame Assy.	30	10	1
56-4020	Screw - Machine	6	36	4	61-0870	Rear Carrier Frame Assy.	30	1	1
56-4030	Washer - Lock	6	37	4	61-0880	Left Carrier Frame Assy.	30	14	1
56-4040	Plate - Back	6	12	1	61-0890	Bracket - Carrier	34	33	1
56-4050	Spring - Extension	6	14	1	61-0900	Bracket - Tensioner	31	3	1
56-4060	Spring - Extension	6	24	1	61-0900	Bracket - Tensioner/Carrier	34	2	1
56-4080	Clamp - Axle	6	10	2	61-0910	Bracket - Angle	33	10	2
56-4100	Bracket - Lever	6	22	1	61-0910	Bracket - Angle	36	9	4
56-4120	Cover	6	20	1	61-0930	Frame - Reel	34	7	1
56-4130	Bumper	6	19	2	61-0940	Sideplate - Adjust	31	29	1
56-4150	Lever - Handle	6	16	1	61-0940	Sideplate - Adjust	34	40	1
56-4160	Washer - Flat	6	18	2	61-0970	Housing - Bedbar Adj.	32	44	1
56-4170	Pin - Clevis	6	23	1	61-0970	Housing - Bedbar Adj.	34	43	1
56-4190	Cap - Seat	6	25	2	61-1010	Bedbar Housing	32	50	1
56-7982	Sleeve - Protective	15	*	1	61-1010	Bedbar Housing	35	48	1
56-9510	Bushing	36	17	4	61-1050	Front Support - L.H.	31	8	1
56-9510	Bushing Assembly	29	10	2	61-1070	Handle - Assembly	31	25	1
56-9510	Bushing Assembly	32	45	2	61-1070	Handle - Assembly	34	19	1
56-9510	Bushing Assembly	33	18	2	61-1130	Rear Grass Guard	31	28	1
56-9510	Bushing Assy.	34	38	2	61-1130	Rear Grass Guard	34	24	1
56-9520	Bushing - Flanged	32	46	2	61-1190	Support - Basket (Front)	42	5	2
56-9520	Bushing - Flanged	33	17	1	61-1210	Bedbar	32	49	1
56-9520	Bushing - Flanged	34	39	2	61-1210	Bedbar	35	46	1
56-9520	Bushing - Flanged	36	16	2	61-1250	Bracket - Basket L.H.	43	25	1
56-9520	Bushing - Nyliner	29	16	1	61-1260	Bracket - Basket R.H.	43	4	1
57-4910	Screw - Special	32	47	10	61-1270	Bracket - Basket L.H.	42	22	2
57-4910	Screw - Special	34	44	10	61-1280	Bracket - Basket R.H.	42	4	2
57-5190	Screw - Adjustment	32	51	2	61-1320	Sideplate	34	5	1
57-5190	Screw - Adjustment	35	49	2	61-1320	Sideplate - Reel	32	62	1
57-5260	Pin - S.P.A.	31	27	1	61-1330	Front Grass Basket Assy.	42	3	2
57-5260	Pin - S.P.A.	34	22	1	61-1340	Rear Grass Basket Assy.	43	14	1
57-5270	Spring - Compression	31	15	1	61-1370	Spacer	30	5	6
57-5270	Spring - Compression	34	11	1	61-1950	Washer - Bedbar	35	47	1
58-6520	Decal - Grease	27	36	2	61-1950	Washer-Bedbar	32	53	1
58-6520	Decal - Grease	28	35	1	61-1960	Axle - Wheel	4	7	1
58-6520	Decal - Grease Fitting	1	32	2	61-2010	Pinion - Steering	3	15	1
58-6520	Decal - Grease Fitting	5	8	1	61-2040	Rack - Steering	3	4	1
58-6530	Decal - Oil	14	27	1	61-2070	Rod - Steering	3	5	1
59-9810	Module - Ignition	11	16	1	61-2070	Rod - Steering	4	18	1
61-0020	Shroud - Muffler	11	31	1	61-2080	Shaft - Steering	3	18	1
61-0030	Tank-Fuel	8	10	1	61-2090	Steering Column Assembly	3	21	1
61-0070	Pulley - Poly V	22	28	1	61-2120	Bracket - Air Cleaner	11	6	1
61-0100	Tank - Hydraulic	14	25	1	61-2170	Stop - Clutch	11	19	1
61-0140	Pulley - Jackshaft	22	22	3	61-2220	Spacer	8	20	4
61-0380	Cap - Full Roller	37	1	2	61-2220	Spacer - Engine	11	41	4
61-0380	Cap - Roller	33	11	2	61-2230	Plate - Pump Mount	16	13	1
61-0380	Cap - Roller	36	11	2	61-2350	Mount - Bearing	22	27	2
61-0400	Shaft - Full/Wiehle Roller	37	2	2	61-2430	Hub - Lift	23	45	1
61-0400	Shaft - Roller	33	12	1	61-2490	Hose - Hydraulic	23	42	1
61-0400	Shaft - Roller	36	12	1	61-2490	Hose Assembly	13	2	1
61-0410	Full Roller Assembly	36	*	1	61-2500	Hose - Hydraulic	23	41	1
61-0410	Full Roller Assembly	37	*	1	61-2500	Hose Assembly	13	1	1
61-0410	Roller Assembly	33	*	1	61-2510	Hose - Hydraulic	25	9	1
61-0420	Support - HOC	33	6	2	61-2510	Hydraulic Hose Assy. Lower	13	10	1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
61-2520	Hose - Hydraulic	25 17 1	62-4990	Shaft - Anti-Scalp Roller	37 11 1
61-2520	Hydraulic Hose Assy. Upper	13 8 1	62-5070	Decal - Warning	32 66 1
61-2540	Hose - Hydraulic	13 13 1	62-5070	Decal - Warning	35 59 1
61-2540	Hose - Hydraulic	16 8 1	62-5070	Decal - Warning	42 11 2
61-2550	Hose - Hydraulic	13 11 1	62-5130	Flap - Rubber	43 16 1
61-2550	Hose - Hydraulic	16 27 1	62-5140	Weight - 8 Blade	8 * 1
61-2610	Arm - Traction	18 14 1	62-5180	Bedknife - 7 In. Reel	32 48 1
61-2660	Wire - Solenoid/Starter	10 1 1	62-5180	Bedknife - 7 In. Reel	35 45 1
61-2670	Wire - Ground	10 2 1	62-5250	Armature & Pulley Assembly	12 5 1
61-2680	Weight - Standard	8 14 1	62-5330	Bracket - Side Panel	5 7 1
61-2710	Fitting - 90° Hose Elbow	16 6 1	62-5400	Hood Assembly	1 5 1
61-2720	Bracket - Lever	25 10 1	62-5510	Rubber Bushing Assembly	31 12 2
61-2790	Screen - Filler	14 28 1	62-5510	Rubber Bushing Assembly	34 8 2
61-2830	Lift Arm Assembly R.H.	27 * 1	62-7120	Spacer	32 65 1
61-2880	Lift Arm Assembly L.H.	27 8 1	62-7120	Spacer	35 60 1
61-2890	Lift Arm Assembly	28 29 1	62-7170	Spacer	5 39 1
61-2900	Shaft - Pivot R.H.	27 * 1	62-7190	Spacer	1 30 1
61-2930	Shaft - Pivot	28 7 1	62-7230	Hanger - Adjustable (Front)	42 17 2
61-2930	Shaft - Pivot L.H.	27 29 1	62-7240	Cover - Spring	28 2 1
61-2940	Lever-Pump	18 31 1	62-7250	Boot	28 18 2
61-2970	Shield - Front Grass L.H.	1 33 1	62-7300	Chain	28 3 1
61-2980	Shield - Front R.H.	1 35 1	62-7320	Stop - Traction Pedal	1 9 1
61-2990	Spacer - Switch	23 3 1	62-7350	Slide - Pedal Stop	1 11 2
61-3000	Rod - Pivot	27 13 2	62-7400	Decal - Toro Logo	1 4 1
61-3000	Rod - Pivot	28 26 1	62-7410	Wihle Roller Assembly	37 * 1
61-3010	Support - Hood & Grille	2 39 1	62-7480	Bracket - Hanger	43 22 1
61-3060	Tube - Hydraulic R.H.	13 3 2	62-7660	Washer - Shim	37 6 2
61-3060	Tube - Hydraulic R.H.	16 33 2	62-7660	Washer - Shim (not used)	36 24 2
61-3070	Tube - Hyd. L.H. (Rear)	16 25 1	62-7670	Shock Absorber - Seat	6 13 1
61-3070	Tube - Hydraulic L.H. Rear	13 15 1	63-4220	Spring - Compression	43 21 1
61-3080	Tube - Hyd. L.H. (Front)	16 24 1	63-4880	Hose - Hydraulic	13 9 1
61-3080	Tube - Hydraulic L.H. Front	13 16 1	63-4880	Hydraulic Hose Assembly	15 19 1
61-3160	Hanger - Basket (Front)	42 7 2	63-4890	Hose - Hydraulic	13 7 1
61-3170	Baffle - Grass	42 24 2	63-4890	Hydraulic Hose Assembly	15 17 1
61-3170	Baffle - Grass	43 11 1	63-5060	Roller - Anti-Scalp	37 17 2
61-3210	Cable Pulley Assembly	23 22 3	63-5080	Pressure Sequence Valve	15 13 1
61-3230	Spacer	23 24 3	63-5090	Anti-Scalp Roller Assembly	37 * 1
61-3240	Keeper - Cable	23 21 1	63-5180	Hose - Hydraulic	13 12 1
61-3260	Cable - Lift	23 19 1	63-5180	Hose - Hydraulic	14 23 1
61-3270	Spring - Compression	27 6 2	63-5180	Hydraulic Hose Assembly	15 29 1
61-3280	Cover - End	35 70 2	63-5340	Bracket - Cooler L.H.	15 22 1
61-3280	Cover - End	42 14 4	63-5350	Bracket - Cooler R.H.	15 24 1
61-3290	Cover - Middle	35 72 2	63-5400	Exchanger - Heat	15 32 1
61-3290	Cover - Middle	42 12 4	63-8360	Key	9 9 1
61-3310	Plate - Toro Logo	8 13 1	63-8740	Strap - Basket	43 17 1
61-3320	Pulley - Pump	16 17 1	63-8770	Fitting - 45° Orifice	15 12 1
61-3330	Pulley - Engine	11 45 1	63-8790	Cartridge Valve Assembly	15 36 1
61-3340	Bushing - Taper	11 46 1	63-8800	Seal Kit	15 * 1
61-3350	Bushing - Tapes	16 19 1	63-8940	Shield - Cooler	15 25 1
61-3360	Joint - Universal	3 17 1	65-4500	Seal - Snap Ring	21 14 1
61-3380	V-Belt	31 5 1	65-4550	Valve - Check Ball	21 6 2
61-3380	V-Belt - Reel	34 4 1	65-4560	Plug - Hex (Hollow)	21 3 1
61-3390	Belt - Poly-V	11 25 1	65-4570	Seal - Square Ring	21 4 2
61-3400	V-Belt - Pump	16 16 1	65-4580	Screw - Cap Hex Hd.	21 1 8
61-3470	Hose	11 11 1	65-4590	Ring - Snap	21 21 1
61-3550	Valve - Ball	8 8 1	65-4600	Washer - Thrust	21 19 2
61-3600	Tab - Lift	30 13 3	65-4610	Bearing - Thrust	21 20 1
61-3660	Front Support - R.H.	31 * 1	65-4620	Seal - O-Ring	21 12 1
61-3770	Head - Filter	16 29 1	65-4640	Key - Square	19 10 2
61-3790	Plate - HOC Front	36 10 2	65-4640	Key - Square	21 11 1
61-3800	Plate - HOC Rear	36 3 2	65-4660	Shaft	21 10 1
61-3810	Plate - HOC	33 4 2	65-4670	Body & Bearing Assembly	21 9 1
61-3820	Retainer - Cable	28 21 1	65-4680	Cover & Bearing Assembly	21 2 1
61-3830	Chain - Lift	23 33 2	66-0120	Knob	9 2 2
61-3840	Decal - Reelmaster 216	5 16 2	66-2950	Meter - Hour	9 1 1
61-3880	Panel - Access R.H.	5 52 1	66-5291	Hydraulic Motor Assembly	19 30 2
61-3990	Parking Brake Assembly	19 5 1	66-5340	Grille - Front	2 38 1
61-7250	Boot	27 5 4	66-5400	Seat Assembly	7 * 1
62-4290	O-Ring	17 44 2	66-6110	IGR Assembly	21 5 1
62-4970	Sectional Roller Assembly	37 * 1	66-6120	Pad-Foot	1 27 1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
66-6840	Decal - Hot	11 47 1	76-0080	Collar - Bearing	12 7 1
66-6840	Decal - Hot	14 26 1	76-0090	Head	24 3 1
67-5800	Flap - Basket Rear	43 23 1	76-0100	Panel - Instrument	5 10 1
67-5840	Nut - Jam	32 60 1	76-0110	Decal - Instrument Panel	9 12 1
67-5840	Nut - Jam	35 56 1	76-0130	Hood Stop Chain Assembly	1 22 1
67-5890	Hanger - Basket Rear	43 9 1	76-0190	Cap-Oil	14 17 1
67-5910	Plate - Rear	43 8 1	76-0200	Oil Cap Assembly	14 * 1
67-5920	Support - Basket Rear	43 10 1	76-0220	Foam - Oil Filter	14 9 1
67-7490	Key - Square (Long)	22 18 1	76-0240	Dipstick Assembly	14 29 1
67-7750	Pulley - Idler	22 4 1	76-0250	Belt Tensioner Assembly	27 24 2
67-7870	Idler Bracket W.A.	22 11 1	76-0250	Belt Tensioner Assembly	28 11 2
67-7890	Belt Tensioner W.A.	22 6 1	76-0260	Yoke	29 3 1
67-7911	Strap - Idler Bracket	22 2 1	76-0300	Housing - Bushing	29 12 1
67-8020	Shaft - Pump	17 6 1	76-0330	Rod	29 8 1
67-8030	Plug Assembly	17 19 1	76-0350	Housing - Bushing	29 2 1
67-8040	O-Ring	17 20 1	76-0360	Cup - Retainer	29 6 1
67-8050	Bearing - Needle	17 22 1	76-0370	Bolt - Shoulder	27 23 2
67-8060	Seal - Lip	17 23 1	76-0370	Bolt - Shoulder	28 12 2
67-8080	Bearing - Needle	17 42 1	76-0390	Spacer	29 15 1
67-8090	Cap - Pump End	17 45 1	76-0410	Spring - Compression	29 7 1
67-9430	Plate - Comb	39 4 1	76-0420	Rod - Pump Control	18 9 1
67-9450	Support - Comb	39 2 1	76-0440	Battery Support W.A.	14 10 1
67-9470	Comb	39 3 1	76-0470	Bear - Rod End R.H.	18 12 1
67-9760	Washer	34 36 2	76-0480	Bearing - Rod End L.H.	18 1 1
67-9760	Washer - Flat	31 33 2	76-0500	Cover - Reservoir Support	5 41 1
68-4210	Spacer - Wheel	4 8 2	76-1420	Wheel - Steering	3 23 1
69-0760	Bracket - Arm L.H.	7 1 1	76-2170	Pedal - Traction	18 8 1
69-0770	Bracket - Arm R.H.	7 9 1	76-2200	Footrest - Traction	1 12 1
69-1180	Armrest	7 11 2	76-2220	Adjustment Yoke Assembly	16 31 1
69-1260	Spacer	7 10 4	76-2230	Seat Assembly	6 * 1
70-7080	Spacer - Clutch	11 18 1	76-2240	Cushion - Seat Bottom	6 31 1
70-8020	Clutch Assembly	11 21 1	76-2260	Pad - Footrest	1 13 1
70-8030	Key	11 36 1	76-2290	Spacer	32 68 1
70-8040	Washer - Flat	11 22 1	76-2320	Shaft	24 4 1
70-8150	Plate - Valve	21 7 1	76-2330	Nut - Lock	24 5 1
70-9840	Shoe - Brake	19 16 4	76-2350	Seal/Retainer Assembly	21 * 1
70-9850	Clip - Retaining	19 35 2	76-2360	Body Seal Kit	21 * 1
70-9860	Pin - Pivot Brake	19 25 2	76-2380	Shaft - Sectional Roller	37 18 1
70-9870	Plate - Brake	19 27 2	76-2400	Roller - Sectional	37 14 2
70-9880	Spring - Extension	19 17 4	76-2430	Bracket - Debris Cleaner	32 73 1
71-1370	Spring - Compression	23 35 1	76-2430	Bracket - Debris Cleaner	35 64 1
71-1380	Pin - Spring	23 34 1	76-2430	Scraper - Pulley	27 2 2
71-1500	Brake Assembly	20 * 2	76-2440	Support - Debris Cleaner	32 74 1
71-3590	Nut - Adjustment	33 20 2	76-2440	Support - Debris Cleaner	35 65 1
71-3590	Nut - Adjustment	36 19 2	76-2440	Support - Scraper	27 34 2
71-3590	Nut - Adjustment	37 8 8	76-2460	Bearing Assembly	22 25 2
71-3690	Pin - HOC	33 8 2	76-2490	Flange - Bearing (Lube)	31 39 2
71-3690	Pin - HOC	36 7 4	76-2490	Flange - Bearing (Lube)	34 31 2
72-4150	Shield - Heat	1 24 1	76-2500	Flange - Bearing	31 41 2
72-4190	Pin - Cylinder Guide	23 12 1	76-2500	Flange - Bearing	34 29 2
72-4320	Switch - Neutral	5 31 1	76-2520	Hydraulic Hose Assembly	13 4 2
72-4350	Panel - Access L.H.	5 19 1	76-2520	Hydraulic Hose	16 1 2
72-4360	Footrest - L.H.	1 29 1	76-2530	Hose - Hydraulic	13 6 1
72-4770	Belt - V	40 2 3	76-2530	Hydraulic Hose Assembly	15 1 1
72-4790	Clamp - Battery	14 2 1	76-2540	Hose - Hydraulic	13 18 1
72-9540	Bracket - Heat Shield	1 23 1	76-2540	Hose Assembly - Hyd.	16 43 1
72-9560	Wire - Harness/Diode	10 4 1	76-2550	Hose - Hydraulic	13 17 1
74-0720	Tube - Manual	5 45 1	76-2550	Hose Assembly	16 49 1
74-9100	Pad - Pedal Forward	18 7 1	76-2580	Hose - Hydraulic	13 14 1
74-9110	Pad - Pedal Reverse	18 11 1	76-2580	Hydraulic Hose Assembly	15 34 1
75-7730	Spacer	4 2 1	76-2670	Plate - Seat	5 14 1
75-9260	Support - Hydraulic Tank	5 2 1	76-2700	Frame Assembly	3 12 1
75-9310	Latch - Hood	1 6 1	77-0480	Screw - Traction Stop	2 45 1
75-9320	Bushing - Hood Latch	9 33 1	80-0520	Panel	5 42 1
75-9330	Pin - Hood Latch	9 30 1	80-4110	Control - Throttle	9 23 1
76-0020	Hydraulic Cylinder Assembly	23 37 1	80-4120	Control - Choke	9 22 1
76-0030	Repair Kit	24 * 1	80-4130	Bushing - Flange	5 48 4
76-0040	Piston	24 8 1	80-4240	Footrest R.H.	1 14 1
76-0050	Ring - Retaining	24 12 1	80-4250	Adjuster - R.H.	7 7 1
76-0070	Bracket - Interlock Module	11 15 1	80-4260	Adjuster - L.H.	7 3 1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
80-4270	Pulley - Reel	34	3	1	237-42	Seal - O-Ring	23	38	2
80-4280	Pulley - Reel	34	*	1	237-71	O-Ring	14	33	1
80-4280	Pulley - Reel, 5 Blade	31	4	1	237-78	O-Ring	16	50	1
80-4290	Pulley - Reel	40	1	3	237-78	Seal - O-Ring	20	46	2
80-4690	Support - Scraper	39	7	2	237-78	Seal - O-Ring	25	11	2
82-2400	Wiehle Roller Weld Assy.	37	10	1	237-79	O-Ring	16	4	2
82-4640	Battery - 12 Volt	14	7	1	237-79	Seal - O-Ring	15	5	1
83-7340	Fork - Caster	4	6	1	237-79	Seal - O-Ring	25	6	1
83-7820	Shaft - Drive	22	20	1	237-80	O-Ring	16	9	1
83-9250	Lever - Brake	19	36	2	237-80	Seal - O-Ring	19	9	4
83-9270	Pivot - Brake L.H.	19	40	1	237-86	O-Ring	17	15	2
83-9310	Pivot - Brake R.H.	19	*	1	237-88	Grommet	5	51	1
83-9330	Shaft - Brake	19	41	1	237-95	O-Ring	17	27	1
83-9340	Shield - Grass	19	13	2	237-117	O-Ring	16	41	2
83-9350	Rod - Parking Brake	19	1	1	237-125	Grommet	8	2	2
83-9550	Decal - Warning	5	44	1	237-150	Seal - O-Ring	15	7	2
83-9690	Spring - Compression	22	9	1	237-151	Seal - O-Ring	15	31	2
83-9730	Step - Foot	5	18	1	241-129	Rim	4	11	1
83-9760	Bracket - Cylinder Support	23	1	1	241-130	Spacer - Bearing	4	10	1
84-1650	Decal - Brake	1	28	1	242-50	Nut - Lug	19	22	8
84-1830	Cap - Battery Vent	14	34	6	2412-3	Clamp - Hose	16	7	4
84-1840	Grille - Muffler	11	37	1	2412-34	Clamp - Hose	14	24	1
84-1850	Muffler	11	26	1	2412-34	Clamp - Hose	15	35	1
84-1990	Rod - Adjusting	19	32	2	2412-36	Clamp - Hose	8	4	6
84-2000	Bracket - Brake	19	29	2	2412-39	Clamp - R	15	26	2
84-5560	Gear - Reel Shaft	41	5	3	2412-41	Clamp - R	11	38	1
84-5570	Plate - Attachment	41	*	2	2412-67	Clamp - R	6	41	1
84-5580	Plate - Attachment	41	3	1	2412-71	Clamp - R	5	37	1
84-5590	Gear - Driver	41	1	1	2412-92	Clamp - Hose	11	10	2
84-8440	Bushing - Flange	23	11	2	2412-133	Clamp - R	5	46	2
84-8840	Rear Grass Guard	31	*	1	251-8	Bearing - Ball	17	35	1
84-8840	Rear Grass Guard	34	*	1	251-77	Collar - Locking	22	23	2
85-4920	Hydraulic Pump Assembly	17	8	1	251-259	Bearing - Ball	18	32	1
85-4920	Pump Assembly	16	5	1	251-270	Bearing - Ball	41	2	1
85-4980	Switch - Clutch	9	20	1	251-291	Bearing - Pulley	12	8	2
85-5160	Lever - Lift Valve	25	2	1	251-292	Bearing - Field	12	2	1
85-6540	Stud - Drive	19	26	8	251-321	Bearing - Wheel	4	9	2
85-6800	Wire Harness Assembly	10	5	1	251-331	Bearing	31	40	2
217-60	Rim	19	21	2	251-331	Bearing	34	30	2
218-461	Nut	9	10	1	251-337	Bearing	22	29	2
218-461	Nut - Jam	5	22	2	252-82	Bearing - Needle	17	9	2
218-489	Fuse Holder Assembly	9	14	1	252-112	Cone - Bearing (Inner)	37	12	2
218-535	Nut	9	18	1	253-84	Seal	31	22	1
218-536	Washer - Lock	9	17	1	253-84	Seal	34	20	1
218-562	Lens	9	5	1	253-152	Seal - Inner	33	13	2
218-582	Tab Adaptor	9	29	2	253-152	Seal - Inner	36	22	2
219-18	Bulb- Light (GE #1893)	9	4	1	253-152	Seal - Inner	37	3	2
2112-9	Clamp - Muffler	11	27	1	253-153	Seal - Outer	33	21	2
231-122	Tire	4	13	1	253-153	Seal - Outer	36	20	2
231-127	Tire	19	20	2	253-153	Seal - Outer	37	7	6
232-27	Valve - Stem	19	24	2	254-78	Cone - Bearing	33	22	2
232-47	Tube - Inner	4	*	1	254-78	Cone - Bearing	36	21	2
232-47	Valve - Stem	4	12	1	254-78	Cone - Bearing (Outer)	37	5	6
233-17	Knob	9	34	1	254-79	Cup - Bearing	33	14	2
233-37	Knob	25	1	1	254-79	Cup - Bearing	36	13	2
237-7	Seal - O-Ring	5	24	1	254-79	Cup - Bearing (Outer)	37	4	8
237-21	Seal - O-Ring	20	47	3	256-1	Bushing - Sleeve	23	23	3
237-21	Seal - O-Ring	25	13	2	256-2	Bushing - Sleeve	23	44	1
237-22	O-Ring	16	39	2	256-27	Bushing - Sleeve	3	19	2
237-22	O-Ring	17	2	1	256-90	Bushing - Flange	42	30	8
237-22	Seal - O-Ring	15	8	4	256-115	Washer - Thrust	27	12	2
237-22	Seal - O-Ring	23	40	2	256-115	Washer - Thrust	28	25	1
237-22	Seal - O-Ring	25	8	2	256-117	Bushing - Flange	3	8	4
237-30	O-Ring	16	2	10	256-117	Bushing - Flanged	37	16	4
237-30	O-Ring	16	45	3	256-173	Bushing - Sleeve	29	11	1
237-30	Seal - O-Ring	5	32	1	256-245	Bushing - Flange	3	9	2
237-30	Seal - O-Ring	15	2	5	256-247	Bushing - Flange	3	13	2
237-30	Seal - O-Ring	19	7	4	256-285	Bushing - Flange	30	6	12
237-37	Bumper - Rubber	5	17	2	256-287	Bushing - Flange	3	14	2
237-42	O-Ring	26	2	2	256-300	Bushing - Flange	22	10	1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
257-5	Washer - Thrust	31 21 4	322-43	Screw - Cap Hex. Hd.	14 20 4
257-5	Washer - Thrust	34 21 4	322-45	Screw - Hex. Hd. Cap	5 13 1
257-6	Bearing - Thrust	31 26 2	322-46	Screw - Cap Hex. Hd.	11 33 2
257-6	Bearing - Thrust	34 18 2	323-6	Screw - Cap Hex Hd.	36 1 8
2710-16	Link - Connecting	25 5 1	323-6	Screw - Cap Hex. Hd.	23 2 1
282-2	Clevis	19 34 2	323-6	Screw - Cap Hex. Hd.	31 6 8
282-4	Clevis	23 31 4	323-6	Screw - Cap Hex. Hd.	33 2 5
282-4	Clevis	27 21 2	323-6	Screw - Cap Hex. Hd.	34 23 6
282-4	Clevis	28 5 1	323-7	Screw - Cap Hex. Hd.	5 33 4
283-1	Pin - Clevis	19 37 2	323-7	Screw - Cap Hex. Hd.	27 28 2
283-1	Pin - Clevis	28 20 1	323-7	Screw - Cap Hex. Hd.	28 8 1
283-2	Pin - Yoke	16 52 1	323-7	Screw - Cap Hex. Hd.	32 59 2
283-6	Pin - Clevis	23 14 4	323-7	Screw - Cap Hex. Hd.	33 1 3
283-6	Pin - Clevis	27 20 2	323-7	Screw - Cap Hex. Hd.	35 55 5
283-6	Pin - Clevis	28 6 1	323-7	Screw - Cap Hex. Hd.	38 2 6
283-8	Pin - Clevis	27 26 2	323-7	Screw - Cap Hex. Hd.	39 5 2
283-8	Pin - Clevis	28 32 1	323-7	Screw - Cap Hex. Hd.	41 4 6
283-40	Pin - Clevis	28 14 2	323-7	Screw - Cap Hex. Hd.	42 20 8
283-42	Pin - Clevis	23 9 1	323-7	Screw - Cap Hex. Hd.	43 2 4
283-49	Pin - Clevis	5 11 2	323-9	Capscrew - Hex. Hd.	8 19 4
283-55	Pin - Clevis	29 5 1	323-9	Screw - Cap Hex. Hd.	31 1 1
283-78	Pin - Clevis	23 36 1	323-9	Screw - Cap Hex. Hd.	7 13 2
283-79	Pin - Clevis	23 29 1	323-10	Screw - Cap Hex. Hd.	15 28 2
285-17	Plug - Pipe	17 1 6	323-11	Screw - Cap Hex. Hd.	17 46 4
302-5	Fitting - Grease	3 24 3	323-12	Screw - Cap Hex. Hd.	31 10 1
302-5	Fitting - Grease	4 3 2	323-13	Screw - Cap Hex. Hd.	23 46 1
302-5	Fitting - Grease	22 26 2	323-15	Screw - Cap Hex. Hd.	22 5 2
302-5	Fitting - Grease	29 14 1	323-17	Screw - Cap Hex. Hd.	23 20 2
302-5	Fitting - Grease	30 2 3	323-47	Screw - Cap Hex. Hd.	11 42 4
302-5	Fitting - Grease	31 7 2	325-4	Screw - Cap Hex. Hd.	22 19 4
302-5	Fitting - Grease	33 19 2	325-4	Screw - Cap Hex. Hd.	28 28 1
302-5	Fitting - Grease	34 15 1	325-4	Screw - Hex. Hd.	27 14 2
302-5	Fitting - Grease	36 18 2	325-7	Screw - Cap Hex Hd.	16 14 2
302-5	Fitting - Grease	37 9 8	325-7	Screw - Cap Hex. Hd.	4 1 1
302-11	Fitting - Grease	31 * 2	325-8	Screw - Cap Hex. Hd.	27 27 2
302-11	Fitting - Grease	34 * 2	325-10	Screw - Cap Hex. Hd.	30 8 2
302-18	Fitting - Grease	32 64 1	325-11	Screw - Cap Hex. Hd.	19 28 8
302-18	Fitting - Grease	35 58 1	325-18	Screw - Cap Hex Hd.	16 23 1
302-60	Fitting - Grease	27 16 2	3210-7	Capscrew - Hex. Hd.	18 18 1
302-60	Fitting - Grease	28 30 1	3211-4	Screw - Cap Hex. Hd.	34 34 2
321-2	Screw	1 26 2	3211-4	Screw - Cap Hex. Hd.	31 35 2
321-2	Screw - Cap Hex. Hd.	30 11 6	3213-9	Capscrew - Hex. Hd.	11 24 1
321-5	Screw - Cap Hex. Hd.	1 20 1	3217-6	Nut	31 43 1
321-5	Screw - Cap Hex. Hd.	19 15 8	3217-6	Nut	34 42 1
321-8	Screw - Cap Hex. Hd.	42 26 8	3217-6	Nut - Hex.	11 29 2
321-11	Screw - Cap Hex. Hd.	15 14 2	3217-6	Nut - Hex.	14 3 2
321-13	Screw - Cap Hex Hd.	16 21 3	3217-16	Nut-Lock	18 21 2
321-13	Screw - Cap Hex. Hd.	11 1 3	3218-1	Nut - Hex.	11 44 1
321-23	Screw - Cap Hex. Hd.	25 19 3	3218-3	Nut - Jam	3 3 2
321-39	Screw - Cap Hex. Hd.	9 6 4	3218-3	Nut - Jam	11 20 1
322-2	Capscrew - Hex. Hd.	7 5 4	3218-3	Nut - Jam	32 77 1
322-3	Capscrew - Hex. Hd.	8 17 4	3218-3	Nut - Jam	35 68 1
322-3	Screw - Cap Hex. Hd.	1 25 3	3218-3	Nut - Jam	38 4 6
322-3	Screw - Cap Hex. Hd.	6 38 4	3218-3	Nut - Jam	40 4 3
322-3	Screw - Cap Hex. Hd.	14 1 2	3218-5	Nut - Hex. Jam	9 32 1
322-3	Screw - Cap Hex. Hd.	32 56 1	3218-6	Nut - Jam	29 9 1
322-3	Screw - Cap Hex. Hd.	35 53 1	3218-13	Nut-Lock	14 16 2
322-3	Screw - Hex. Hd. Cap	5 1 9	3218-18	Nut - Jam	35 50 2
322-4	Screw - Cap Hex. Hd.	17 24 4	3218-18	Nut-Jam	32 52 2
322-4	Screw - Cap Hex. Hd.	27 10 4	3218-19	Nut - Hex.	9 8 2
322-4	Screw - Cap Hex. Hd.	28 23 2	3219-14	Nut - Hex.	14 14 2
322-4	Screw - Hex. Washer Hd.	15 23 4	3220-2	Nut - Jam	19 33 2
322-4	Screw - Hex. Washer Hd.	19 4 2	3220-2	Nut - Jam R.H.	18 16 1
322-7	Capscrew - Hex. Nd.	18 10 2	3220-5	Nut - Jam	3 6 1
322-7	Screw - Cap Hex. Hd.	43 7 1	3220-12	Nut - Jam	4 19 1
322-12	Screw - Cap Hex. Hd.	3 26 1	3220-20	Nut - Jam L.H.	18 2 1
322-17	Capscrew - Hex. Hd.	18 24 1	3229-1	Bolt - Carriage	1 10 2
322-17	Screw - Cap Hex. Hd.	19 2 1	3229-11	Bolt - Carriage	27 1 2
322-17	Screw - Cap Hex. Hd.	22 13 6	3229-11	Bolt - Carriage	32 70 1
322-43	Screw - Cap Hex. Hd.	5 23 1	3229-11	Bolt - Carriage	35 63 1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3229-22	Bolt - Carriage	2	43	1	3256-4	Washer - Flat	23	25	4
3230-1	Bolt - Carriage	7	15	4	3256-4	Washer - Flat	27	30	2
3230-2	Bolt - Carriage	42	9	4	3256-4	Washer - Flat	28	16	1
3230-2	Bolt - Carriage	43	6	1	3256-6	Washer - Flat	27	15	2
3230-5	Bolt - Carriage	42	8	2	3256-6	Washer - Flat	28	27	1
3230-8	Bolt - Carriage	43	5	1	3256-16	Washer - Flat	19	12	8
3230-20	Bolt - Carriage	31	38	10	3256-21	Washer - Flat	1	7	2
3230-20	Bolt - Carriage	34	37	10	3256-22	Washer - Flat	1	1	8
3231-25	Bolt - Carriage	33	15	2	3256-22	Washer - Flat	25	18	9
3231-25	Bolt - Carriage	36	14	4	3256-23	Washer - Flat	1	16	1
3234-4	Capscrew - Hex. Hd.	18	30	2	3256-23	Washer - Flat	5	4	9
3234-4	Screw - Cap Hex. Hd.	11	3	3	3256-23	Washer - Flat	6	34	4
3234-4	Screw - Cap Hex. Hd.	11	14	1	3256-23	Washer - Flat	8	15	4
3234-4	Screw - Hex Washer Hd.	16	11	2	3256-23	Washer - Flat	22	14	6
3234-4	Screw - Hex. Washer Hd.	23	10	1	3256-23	Washer - Flat	23	16	5
3234-13	Screw - Hex. Flange Hd.	5	3	6	3256-23	Washer - Flat	42	18	6
3234-14	Screw - Hex. Hd. Cap	5	5	2	3256-23	Washer - Flat	43	19	2
3234-17	Screw - Cap Hex. Hd.	1	15	6	3256-24	Washer	25	4	1
3234-17	Screw - Hex. Flange Hd.	5	27	2	3256-24	Washer - Flat	2	41	1
3234-17	Screw - Cap Hex. Hd.	1	2	10	3256-24	Washer - Flat	14	11	2
3234-23	Screw - Hex. Flange	7	14	6	3256-24	Washer - Flat	15	27	2
3242-4	Screw - Set	22	21	8	3256-24	Washer - Flat	22	8	1
3245-9	Screw - Set	16	18	1	3256-24	Washer - Flat	23	18	4
3245-35	Screw - Set	22	24	4	3256-24	Washer - Flat	31	2	1
3246-9	Screw - Set	41	6	6	3256-24	Washer - Flat	42	21	8
3247-6	Screw - Set	32	76	1	3256-24	Washer - Flat	43	3	4
3247-6	Screw - Set	35	67	1	3256-25	Washer - Flat	31	20	1
3247-6	Screw - Set	40	3	3	3256-25	Washer - Flat	34	14	1
3249-11	Screw - Rd. Hd. Machine	18	6	2	3256-26	Washer - Flat	3	10	2
3250-35	Screw - Pan Hd.	23	6	2	3256-26	Washer - Flat	9	35	1
3253-3	Washer - Lock	1	21	3	3256-26	Washer - Flat	30	4	6
3253-3	Washer - Lock	11	2	3	3256-28	Washer - Flat	4	16	1
3253-3	Washer - Lock	16	12	3	3256-35	Washer	39	9	6
3253-3	Washer - Lock	19	14	8	3256-45	Washer - Flat	27	19	4
3253-3	Washer - Lock	30	12	6	3256-45	Washer - Flat	28	10	2
3253-4	Washer - Lock	8	16	4	3256-45	Washer Flat	32	69	2
3253-4	Washer - Lock	11	28	2	3256-49	Washer	43	13	8
3253-4	Washer - Lock	14	15	2	3256-49	Washer - Flat	35	71	8
3253-4	Washer - Lock	19	3	2	3256-49	Washer - Flat	42	13	32
3253-4	Washer - Lock	27	11	4	3256-54	Washer - Flat	29	4	1
3253-4	Washer - Lock	28	22	2	3256-56	Washer - Flat	32	54	1
3253-4	Washer - Lock	35	52	1	3256-56	Washer - Flat	35	51	1
3253-4	Washer - Lock	32	55	1	3256-70	Washer - Flat	5	12	7
3253-5	Washer - Lock	31	30	2	3256-70	Washer - Flat	11	32	2
3253-5	Washer - Lock	34	25	2	3256-70	Washer - Flat	14	21	4
3253-7	Washer - Lock	27	33	2	3256-74	Washer - Flat	18	13	8
3253-7	Washer - Lock	28	34	1	3257-32	Key - Woodruff	16	20	1
3253-21	Washer - Lock	8	18	4	3257-32	Key - Woodruff	17	7	1
3253-21	Washer - Lock	14	18	2	3269-18	Rivet - Pop	43	15	10
3253-21	Washer - Lock	42	15	4	3269-18	Rivet - Pop	42	23	20
3253-27	Washer - Lock	11	23	1	3269-22	Rivet - Pop	42	25	8
3254-1	Washer - Lock	14	13	2	3269-22	Rivet - Pop	43	12	4
3254-5	Washer - Lock	9	11	1	3269-23	Rivet - Pop	35	69	8
3254-9	Washer - Lock	18	20	2	3269-23	Rivet - Pop	42	16	24
3254-9	Washer - Lock Internal	23	5	2	3269-23	Rivet - Pop	43	24	8
3254-18	Washer - Lock I.T.L.W.	39	6	6	3272-4	Pin - Cotter	5	36	2
3254-20	Washer - Lock	9	39	1	3272-4	Pin - Cotter	23	13	1
3255-2	Washer - Lock	4	20	1	3272-4	Pin - Cotter	23	27	1
3255-2	Washer - Lock	27	35	2	3272-6	Pin - Cotter	2	40	1
3255-2	Washer - Lock E.T.L.W.	32	71	1	3272-6	Pin - Cotter	3	1	1
3255-2	Washer - Lock E.T.L.W.	35	61	1	3272-6	Pin - Cotter	4	14	1
3255-7	Washer - Lock	11	4	1	3272-6	Pin - Cotter	16	53	1
3255-7	Washer - Lock	18	22	3	3272-6	Pin - Cotter	19	31	4
3255-8	Washer - Ext. Tooth Lock	7	4	4	3272-6	Pin - Cotter	23	43	1
3256-1	Washer - Flat	9	7	4	3272-6	Pin - Cotter	28	19	1
3256-2	Washer - Flat	14	5	2	3272-7	Pin - Cotter	19	43	1
3256-2	Washer - Flat	42	27	8	3272-11	Pin - Cotter	23	32	5
3256-3	Washer - Flat	5	50	2	3272-11	Pin - Cotter	27	22	2
3256-3	Washer - Flat	31	36	5	3272-11	Pin - Cotter	28	4	1
3256-4	Washer - Flat	5	34	4	3272-13	Pin - Cotter	28	13	2

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3272-17	Pin - Cotter	27 25 2	32120-15	Ring - Retaining	17 34 1
3272-17	Pin - Cotter	28 33 1	32120-64	Ring - Snap	42 1 8
3290-55	Rivet - Pop	33 9 4	32121-6	Pin - Roll	5 43 1
3290-55	Rivet - Pop	36 8 6	32121-6	Pin - Roll	18 17 1
3290-196	Nut - Retainer	5 38 3	32121-9	Pin - Roll	29 13 1
3290-199	Nut - Speed	5 40 3	32121-10	Pin - Roll	3 22 1
3290-199	Nut - Speed	14 31 1	32121-15	Pin - Roll	3 16 2
3290-282	Rivet - Pop	43 18 10	32121-23	Pin - Roll	29 1 1
3290-322	Pin - Hair	27 32 2	32121-24	Pin - Roll	18 3 1
3290-322	Pin - Hair	28 31 1	32121-34	Pin - Roll	16 35 1
3290-378	Tie - Cable	11 17 1	32121-36	Pin - Roll	34 6 4
3290-379	Cable Tie	16 47 4	32121-36	Pin-Roll	31 11 4
3290-379	Tie - Cable	8 1 2	32121-79	Pin - Roll	19 39 2
3290-379	Tie - Cable	15 30 1	32121-91	Pin - Coiled Spring	17 38 3
3290-410	Tie - Push Mount	11 39 1	32121-124	Pin - Roll	23 28 1
3290-467	Cotter - Hairpin	33 3 2	32122-14	Screw - Truss Hd.	2 36 2
3290-467	Cotter - Hairpin	36 2 4	32122-14	Screw - Truss Hd.	5 49 2
3290-470	Screw - Machine	8 12 2	32128-10	Nut - Flange Lock	27 4 2
3296-4	Nut - Lock	23 15 1	32128-10	Nut - Flange Lock	32 75 1
3296-6	Nut - Lock	12 9 3	32128-10	Nut - Flange Lock	35 66 1
3296-6	Nut - Lock	16 22 1	32128-19	Nut - Flange	7 12 2
3296-13	Rivet - Pop	39 1 14	32128-20	Nut - Flange	2 46 2
3296-16	Nut - Lock	1 3 5	32128-20	Nut - Lock	20 48 2
3296-16	Nut - Lock	25 15 3	32128-21	Nut - Flange Lock	32 72 1
3296-16	Nut - Lock	18 25 2	32128-21	Nut - Flange Lock	35 62 1
3296-23	Nut - Lock	16 38 3	32128-23	Nut - Flange Lock	27 3 2
3296-23	Nut - Lock	19 42 8	32128-25	Nut - Flange Lock	1 17 6
3296-23	Nut - Lock	22 12 4	32128-25	Nut - Flange Lock	5 15 18
3296-28	Nut - Lock	3 11 2	32128-25	Nut - Flange Lock	6 35 4
3296-29	Nut - Flange Lock	3 20 1	32128-25	Nut - Flange Lock	22 15 6
3296-29	Nut - Hex.	15 18 4	32128-25	Nut - Hex. Flange	7 6 4
3296-29	Nut - Lock	5 6 4	32128-25	Nut - Lock	11 35 2
3296-29	Nut - Lock	18 19 1	32128-25	Nut - Lock	14 22 2
3296-29	Nut - Lock	23 48 4	32128-32	Nut - Hex. Flange	15 10 2
3296-29	Nut - Lock	31 42 11	32136-4	Nut - Castle	3 2 1
3296-29	Nut - Lock	34 41 11	32136-4	Nut - Castle	4 15 1
3296-29	Nut - Lock	42 19 6	32141-84	Screw - Cap Hex. Hd.	3 25 2
3296-29	Nut - Lock	43 20 3	32144-10	Screw - Cap Hex. Hd.	31 24 6
3296-39	Nut - Flange Lock	23 26 4	32144-10	Screw - Hex. Washer Hd.	34 26 4
3296-39	Nut - Hex.	15 20 2	32144-22	Screw - Hex. Hd. Self-Tap	1 18 4
3296-39	Nut - Lock	5 35 4	32149-2	Nut - Hex.	14 30 2
3296-39	Nut - Lock	11 40 4	32151-46	Ring - Retaining	17 13 2
3296-39	Nut - Lock	22 1 2	32153-3	Nut - Lock	18 15 2
3296-39	Nut - Lock	25 3 1	32153-4	Nut-Lock	42 29 8
3296-39	Nut - Lock	27 31 2	3333-975	Tie - Cable	11 12 1
3296-39	Nut - Lock	28 15 1	340-1	Fitting - Straight	15 16 1
3296-39	Nut - Lock	32 67 12	340-77	Fitting - Hydraulic 90°	23 47 1
3296-39	Nut - Lock	33 7 9	340-87	Fitting - Hydraulic 45°	23 39 1
3296-39	Nut - Lock	34 1 8	340-88	Fitting - Hydraulic Straight	25 12 1
3296-39	Nut - Lock	36 6 16	340-89	Fitting - Hydraulic 45°	19 8 2
3296-39	Nut - Lock	39 8 2	340-92	Fitting	16 51 1
3296-39	Nut - Lock	42 6 8	340-96	Fitting - 45° Elbow	15 9 2
3296-39	Nut - Lock	43 1 3	340-96	Fitting - 45° Elbow	16 10 3
3296-42	Nut - Lock	9 21 4	340-97	Fitting - Hydraulic 90°	25 14 1
3296-42	Nut - Lock	19 11 8	340-98	Fitting - 90° Elbow	16 3 1
3296-51	Nut - Lock	4 17 1	340-99	Fitting - Hydraulic 90°	25 7 2
3296-56	Nut - Lock	11 7 2	340-102	Fitting - Tee	16 32 2
3296-59	Nut - Lock	22 7 1	340-103	Fitting - Hydraulic 45°	20 45 1
3296-59	Nut - Lock	27 18 2	340-104	Fitting - Male/Female Tee	15 21 1
3296-59	Nut - Lock	28 9 2	340-104	T-Fitting	16 42 1
3296-59	Nut - Lock	30 9 2	340-107	Fitting - Straight	15 6
3296-59	Nut - Lock	32 63 1	340-108	Fitting - 90° Male Elbow	15 33 1
3296-59	Nut - Lock	38 3 6	340-109	Fitting - Male Tee	15 3 1
3296-62	Nut - Lock	31 14 1	340-140	Fitting - Hydraulic Tee	20 * 1
3296-62	Nut - Lock	34 10 1	340-140	Fitting - Tee	16 46 1
32103-12	Nut - Wing	14 4 2	353-372	Fitting - 90° Elbow	15 37 1
32104-77	Screw - Hex. Hd. Self-Tap	1 8 2	353-379	Fitting - 45° Elbow	16 34 1
32104-82	Screw - Hex. Hd. Self-Tap	1 34 4	353-379	Fitting - Hydraulic 45°	15 4 1
32108-101	Screw - Flathead	14 32 1			
32120-11	Ring - Retaining	17 36 1			

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 216 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Reelmaster 216, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 216.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Hood Assembly	1-2	Cutting Unit Carrier Frame Assembly (Floating Suspension For 8 & 11 Blade Cutting Units)	30
Frame Assembly	3	5 Blade Cutting Unit Reel Assembly (Fixed Suspension)	31-32
Rear Wheel Assembly	4	5 Blade Cutting Unit Roller Assembly (Fixed Suspension)	33
Seat Support Assembly	5	5, 8 & 11 Blade Cutting Unit Reel Assembly (Floating Suspension)	34-35
Seat Assembly Model No. 30797 (Optional)	6	5, 8 & 11 Blade Cutting Unit Roller Assembly (Floating Suspension)	36
Seat Assembly Model No. 30796 (Optional)	7	Cutting Unit Roller Options	37
Fuel Tank Assembly	8	Cutting Unit Roller Scraper Kit Part No. 60-9590 (Optional)	38
Instrument Panel Assembly	9	Comb Kit Part No. 67-9400 (Optional)	39
Electrical Schematic	10	Large Pulley Kit Part No. 67-9540 (Optional) ..	40
Engine & Clutch Assembly	11	Backlap Kit No. 84-5510	41
Electric Clutch Assembly No. 70-8020	12	Grass Collection System Model No. 03433 (Optional) (Front Cutting Unit Basket Assembly)	42
Hydraulic Schematic	13	Grass Collection System Model No. 03433 (Optional) (Rear Cutting Unit Basket Assembly)	43
Hydraulic Tank & Battery Assembly	14	Engine Kohler Model No. M1605 Spec. No. 711563	44-49
Hydraulic Oil Cooler Assembly	15	Special Tools	50
Hydraulic Drive Assembly	16	Part Number Index	51-58
Hydraulic Pump Assembly No. 85-4920	17		
Traction Controls Assembly	18		
Front Wheel Assembly	19-20		
Hydraulic Drive Motor No. 66-5291	21		
Jackshaft Assembly	22		
Cutting Unit Lift Assembly	23		
Hydraulic Cylinder No. 76-0020	24		
Cutting Unit Lift Control Valve Assembly	25		
Control Valve No. 43-1950	26		
Front Cutting Unit Lift Arm Assembly	27		
Rear Cutting Unit Lift Arm Assembly	28		
Belt Tensioner Assembly No. 76-0250	29		

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.