 




MODEL NO. 03420-20001 & UP

PARTS CATALOG

REELMASTER® 216-D 2wd TRACTION UNIT WITH ACCESSORIES

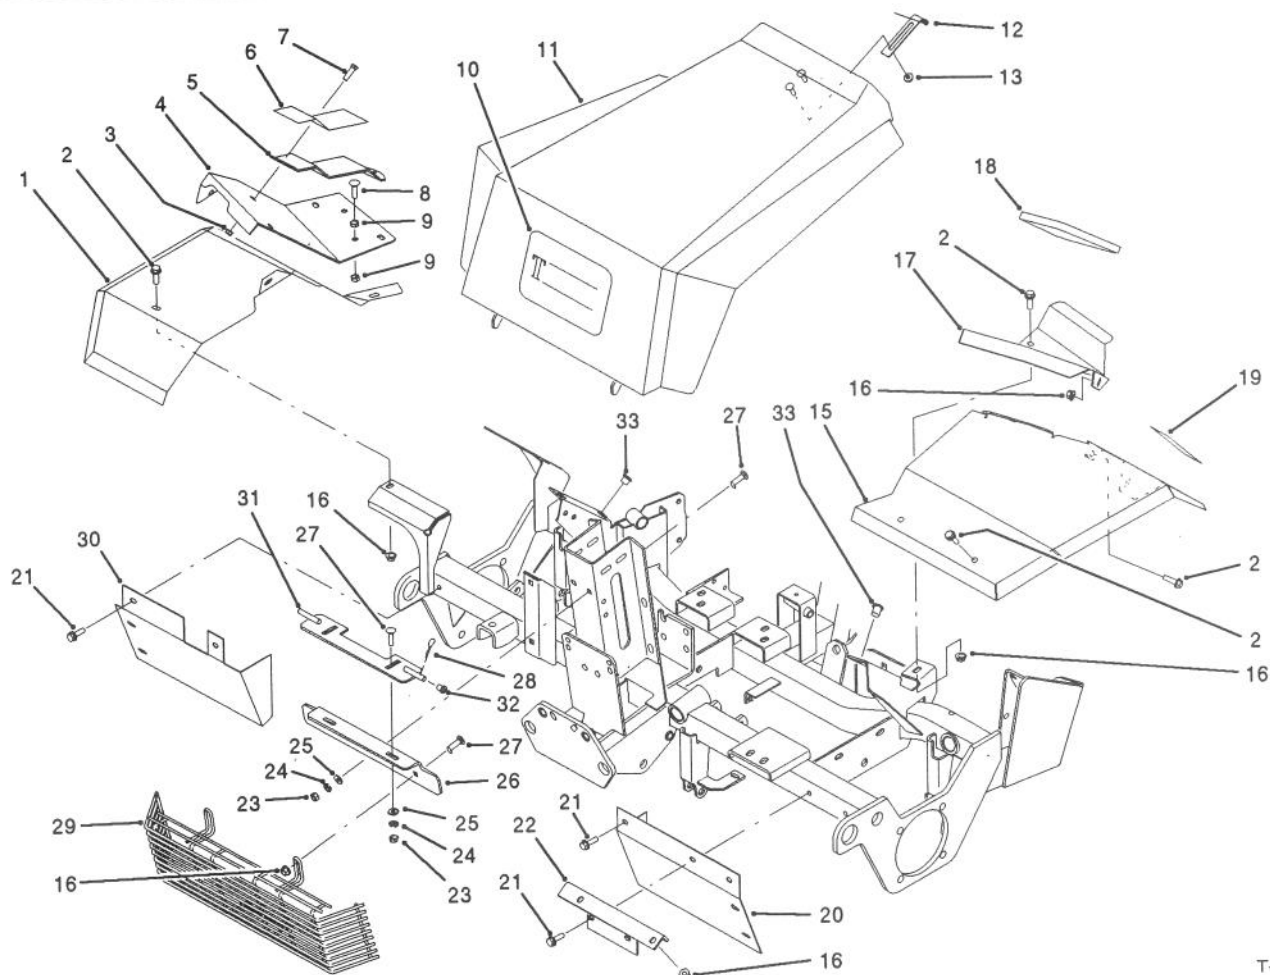


T-1347

HOOD & GRILLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-9720	Fender - R.H.	1	18	83-9840	Pad - Footrest L.H.	1
2	3234-5	Screw - Hex. Washer Hd.	14	19	84-1650	Decal - Brake	1
3	32128-33	Nut - Flange Lock	2	20	83-9800	Shield - Grass Front L.H.	1
4	83-9740	Footrest - R.H.	1	21	32104-82	Screw - Hex. Washer Hd.	5
5	76-2200	Footrest - Traction	1	22	83-8510	Bracket - Fender L.H.	1
6	76-2260	Pad - Footrest Traction	1	23	3217-6	Nut - Hex.	4
7	3229-1	Screw - Carriage	2	24	3253-4	Washer - Lock	4
8	3230-27	Screw - Carriage	1	25	3256-23	Washer - Flat	4
9	3218-2	Nut - Hex.	2	26	85-4870	Support - Hinge	1
10	62-7400	Decal - TORO	1	27	3230-23	Screw - Carriage	6
11	83-7950	Hood	1	28	3290-467	Pin - Cotter Hair	2
12	83-9970	Latch - Hood	1	29	83-8850	Grille - Front	1
13	32128-14	Nut - Flange Lock	2	30	83-8860	Shield - Grass Front R.H.	1
15	83-9700	Fender - L.H.	1	31	85-4890	Hinge - Hood	1
16	32128-44	Nut - Flange Lock	13	32	256-320	Bushing	2
17	83-9710	Footrest - L.H.	1	33	32148-7	Insert - Threaded	3

‡For different language versions of this part, see International Decal Cross Reference.

 TPS

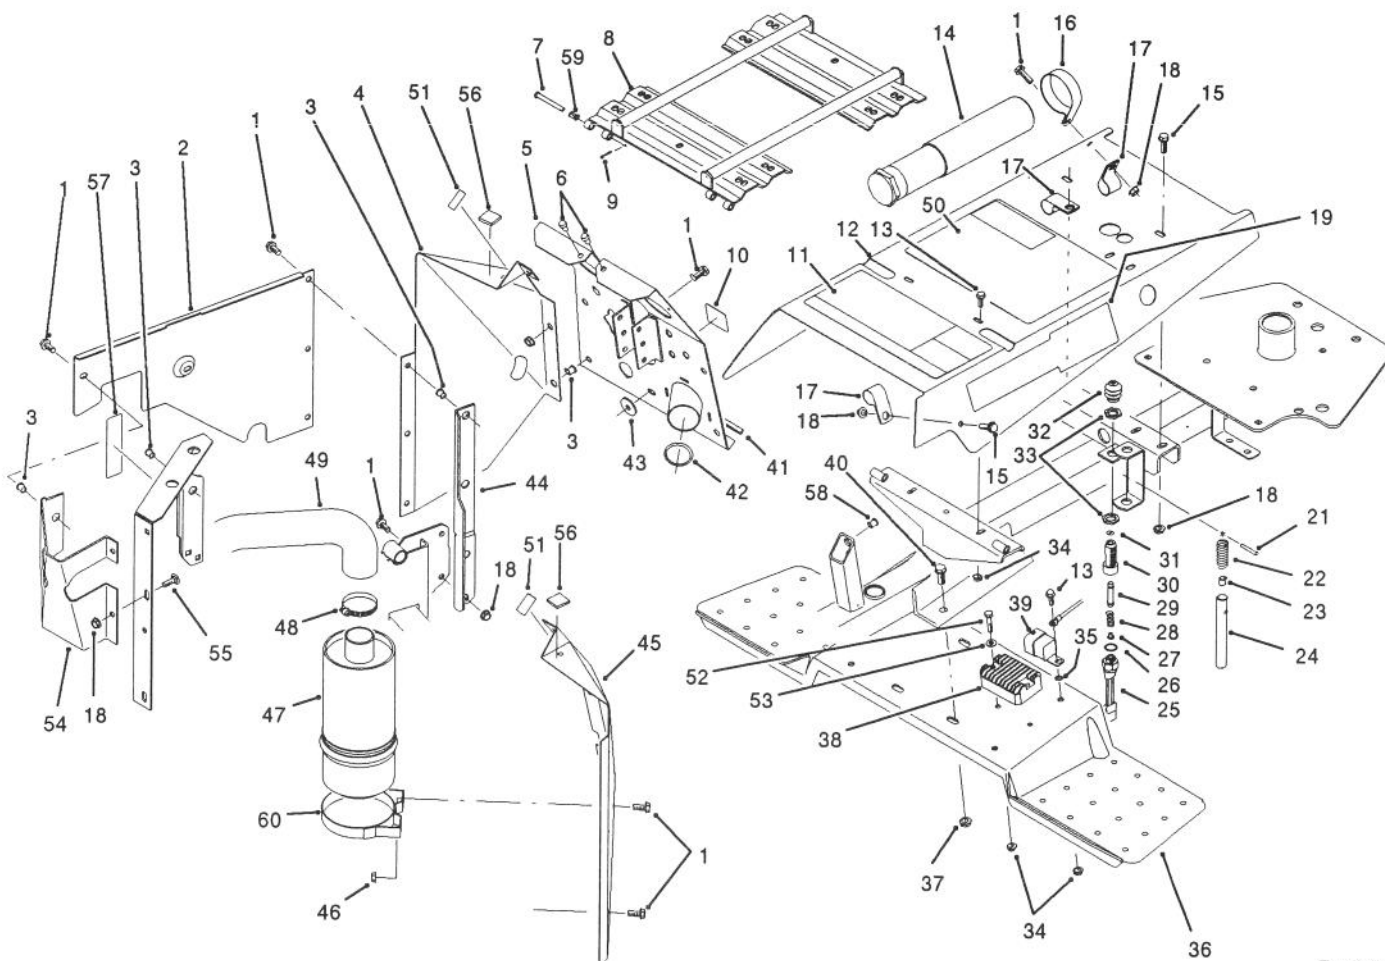


T-1348

SKIRT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3234-5	Screw - Hex. Flange Hd.	21
2	83-8230	Panel - Right Front	1
3	32148-7	Insert - Threaded	5
4	83-8120	Panel - Right Rear	1
5	83-8190	Panel - Control	1
6	237-37	Bumper - Rubber	2
7	283-49	Pin - Clevis	2
8	76-2670	Plate - Seat Mounting	1
9	3272-4	Pin - Cotter	2
±10	83-9150	Decal - Starting Fluid	1
±11	83-9550	Decal - Warning	1
12	83-8880	Panel - Skirt	1
13	3234-4	Screw - Hex. Flange Hd.	3
14	74-0720	Tube - Manual	1
15	3234-17	Screw - Hex. Flange Hd.	3
16	2412-133	Clamp - R	2
17	2412-39	Clamp - R	3
18	32128-44	Nut - Flange Lock	12
19	83-8890	Decal - Reelmaster 216-D	2
21	32121-6	Pin - Roll	1
22	37-9590	Spring - Compression	1
23	28-6180	Pin	1
24	27-9870	Pin - Seat	1
25	72-4320	Switch - Seat	1
26	237-30	Seal - O-Ring	1
27	43-8610	Guide - Spring	1

Ref. No.	Part No.	Description	No. Used
28	43-8600	Spring - Compression	1
29	43-8860	Plunger - Switch	1
30	43-8620	Guide - Pin	1
31	237-7	Seal - O-Ring	1
32	43-8870	Boot - Switch	1
33	218-461	Nut - Hex.	2
34	32128-33	Nut - Flange Lock	5
35	3255-7	Washer - ETLW	1
36	83-9730	Step - Foot	1
37	32128-43	Nut - Flange Lock	4
38	83-8930	Regulator - Voltage	1
39	63-7590	Relay	1
40	3234-11	Screw - Hex. Flange Hd.	4
41	76-6471	Trim - Control Panel Bottom	1
42	237-71	Seal - O-Ring	1
43	62-7170	Spacer	1
44	83-9170	Right Channel Assembly (Incl. Ref. #3)	1
45	83-8110	Panel - Left	1
46	32128-20	Nut - Flange Lock	4
47	85-4910	Air Cleaner Assembly	1
48	2412-92	Clamp - Hose	1
49	83-8550	Hose - Air Cleaner	1
±50	83-8900	Decal - Service Information	1
51	85-5180	Trim	2
52	321-8	Screw - Cap Hex. Hd.	2

 ±For different language versions of this part, see International Decal Cross Reference.

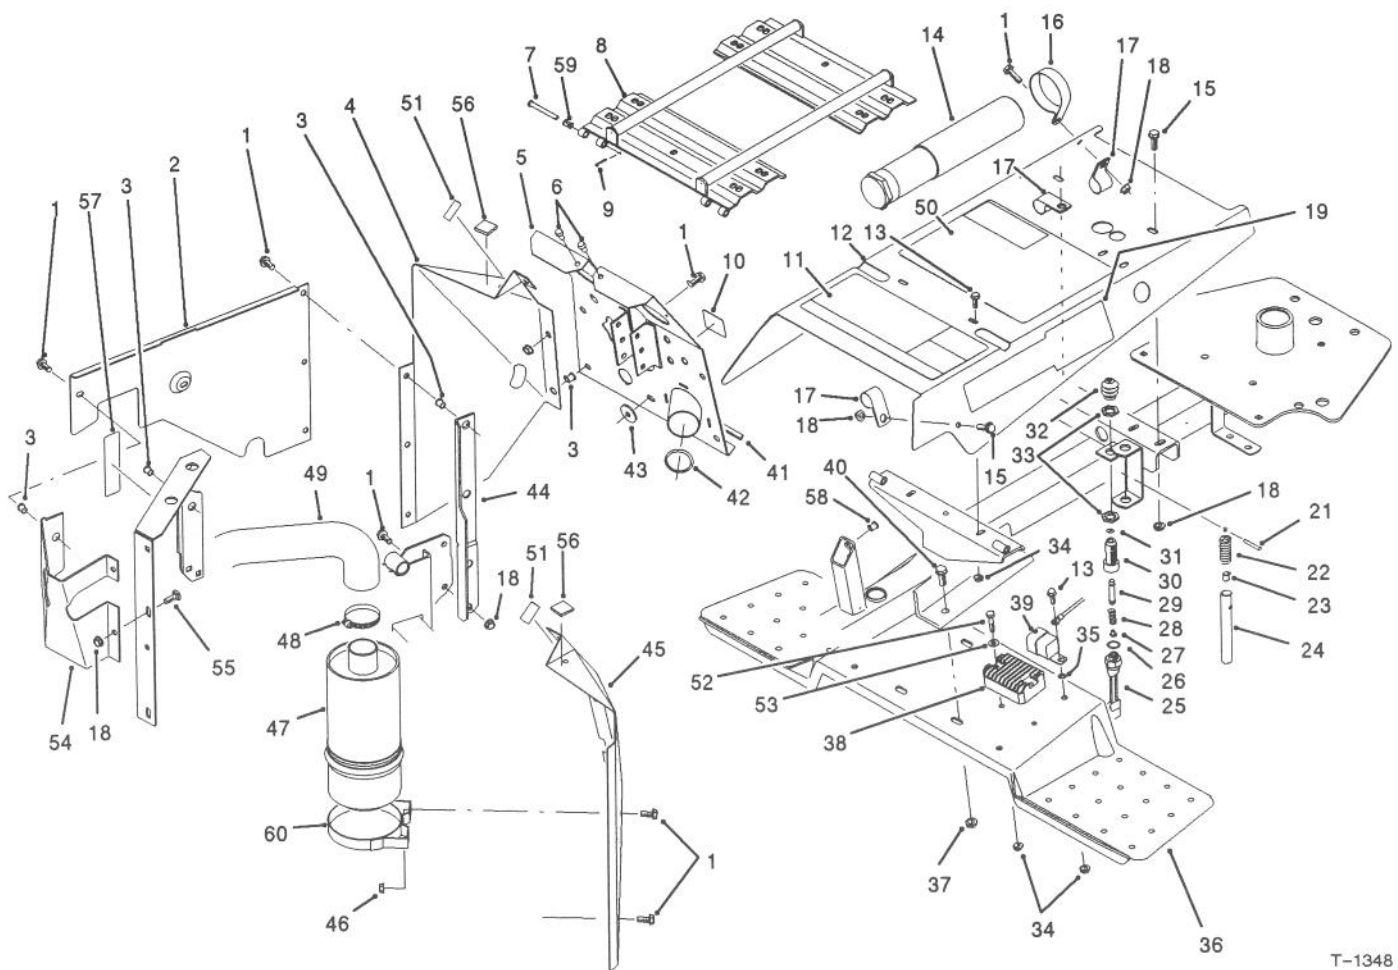


T-1348

SKIRT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
53	3256-33	Washer - Flat	2	60	33-1350	Clamp Assembly (Incl. Ref. #61 & 62)	2
54	85-5010	Bracket - Right Front	1	*61	3258-19	Screw - Round Hd.	2
55	3230-23	Screw - Carriage	2	*62	32107-11	Nut - Square	2
56	85-5140	Foam - Hood	2	*	43-9071	Seat Switch Assembly (Incl. Ref. #25-33)	1
57	67-5360	Decal - Danger	1				
58	32148-8	Insert - Threaded	1				
59	80-4130	Bushing	4				

 *Not Illustrated

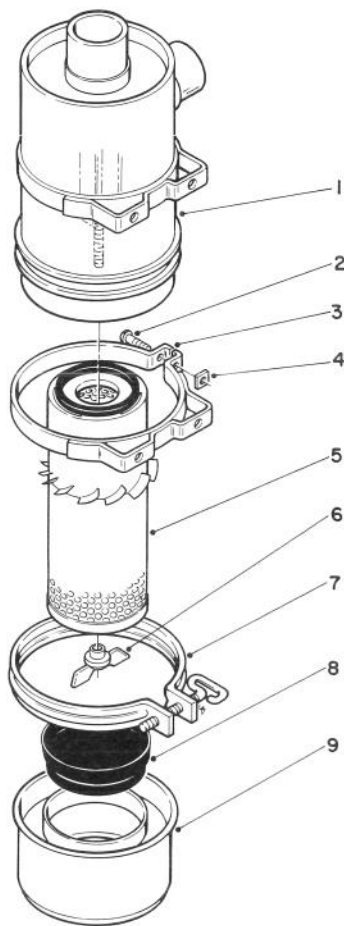


T-1349

AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Body	1
2	3258-19	Screw - Round Hd.	2
3	33-1350	Band Assembly (Incl. Ref. #2 & 4)	2
4	32107-11	Nut - Square	2
5	33-1300	Element Assembly	1

Ref. No.	Part No.	Description	No. Used
6	33-1330	Nut Assembly	1
7	33-1340	Clamp Assembly	1
8	33-1310	Baffle	1
9	33-1320	Cup	1
*	85-4910	Air Cleaner (Complete) (Incl. Ref. #1 & 5-9)	1

 *Not Illustrated

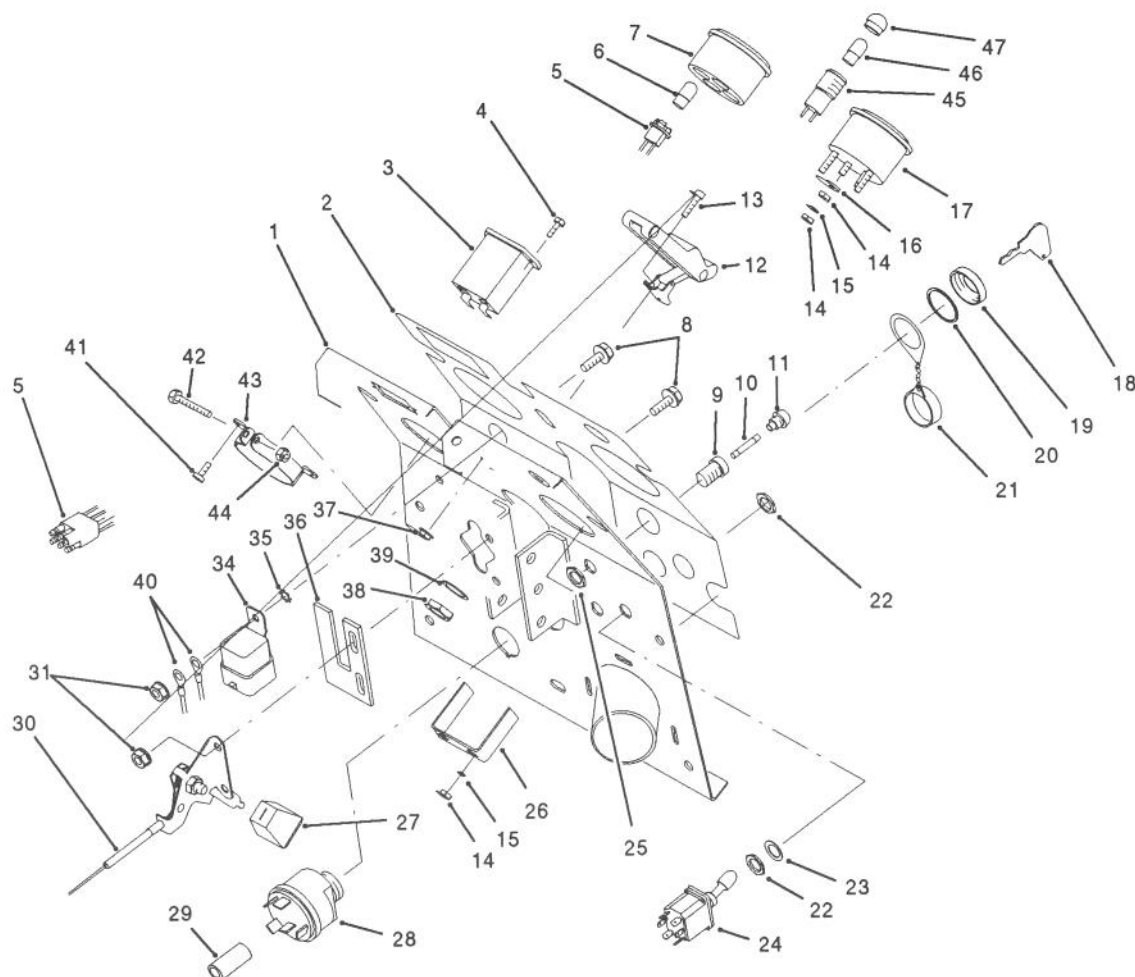


T-1350

INSTRUMENT PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-8190	Panel - Instrument	1
2	83-8180	Decal - Instrument Panel	1
3	75-6820	Hourmeter	1
4	32144-18	Screw - Hex. Hd.	2
5	75-4710	Harness - Warning Light	1
6	219-17	Bulb - Light	4
7	66-2960	Cluster - Warning	1
8	3234-4	Screw - Hex. Washer Hd.	3
9	218-489	Fuse Holder Assembly (Incl. Ref. #11 & 25)	2
10	218-469	Fuse - 15 Amp.	2
11		Cap - Fuse Holder	2
12	80-6980	Latch - Hood	1
13	3274-90	Screw - Hex. Socket Hd.	2
14	3219-14	Nut - Hex.	6
15	3253-2	Washer - Lock	5
16	3256-14	Washer - Flat	2
17	63-7430	Temperature Gauge Assy. (Incl. Ref. #14-16 & 26)	1
18		Key - Ignition	2
19		Nut - Retaining	1
20		Seal - Switch	1
21		Cover - Switch	1
22	218-500	Nut - Hex.	2
23		Washer - Lock	1

Ref. No.	Part No.	Description	No. Used
24	85-4980	Switch Assembly (Incl. Ref. #22-23)	1
25		Nut - Hex.	2
26		Clamp - Gauge	1
27		Knob - Throttle	1
28	83-8910	Ignition Switch Assembly (Incl. Ref. #18-21)	1
29	80-7345	Hose	
30	83-8280	Throttle Assembly (Incl. Ref. #27)	1
31	32128-33	Nut - Flange Lock	3
34	63-7590	Relay	1
35	3255-7	Washer - Lock E.T.L.W.	1
36	85-5000	Plate - Throttle	1
37	32149-9	Nut - Flange Lock	2
38		Nut - Hex.	1
39		Washer - Flat	1
40	83-8920	Harness - Wire	1
41	32144-39	Screw - Pan Hd.	2
42	32105-1	Screw - Hex. Hd.	1
43	69-4780	Clamp - Light Cluster	1
44	3296-2	Nut - Lock	1
45	44-2212	Light Assembly (Incl. Ref. #38-39 & 46-47)	1
46	219-18	Bulb - Light	1
47	218-562	Lens - Light	1

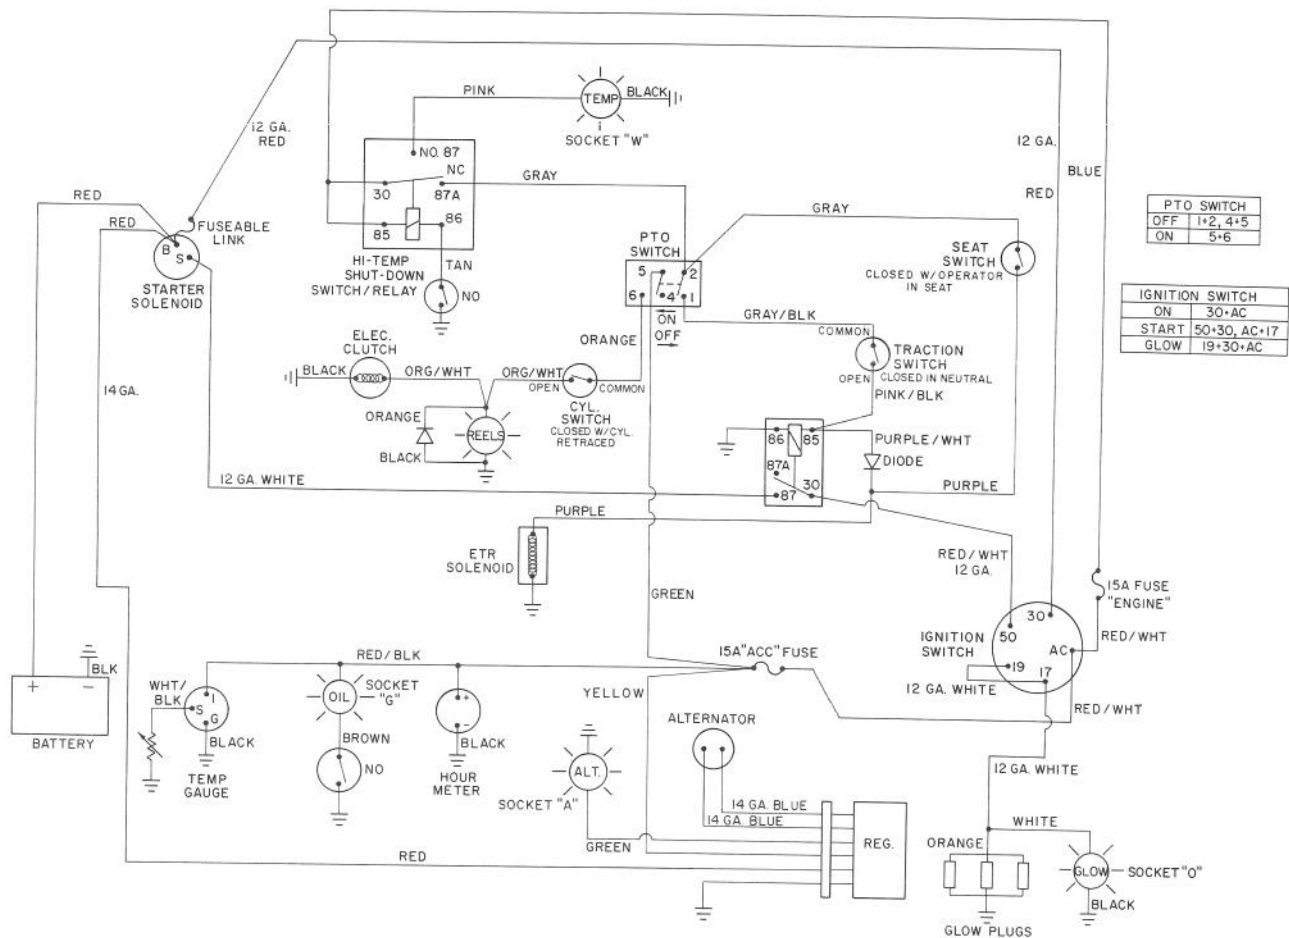 


T-1409

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used


Ref. No.	Part No.	Description	No. Used

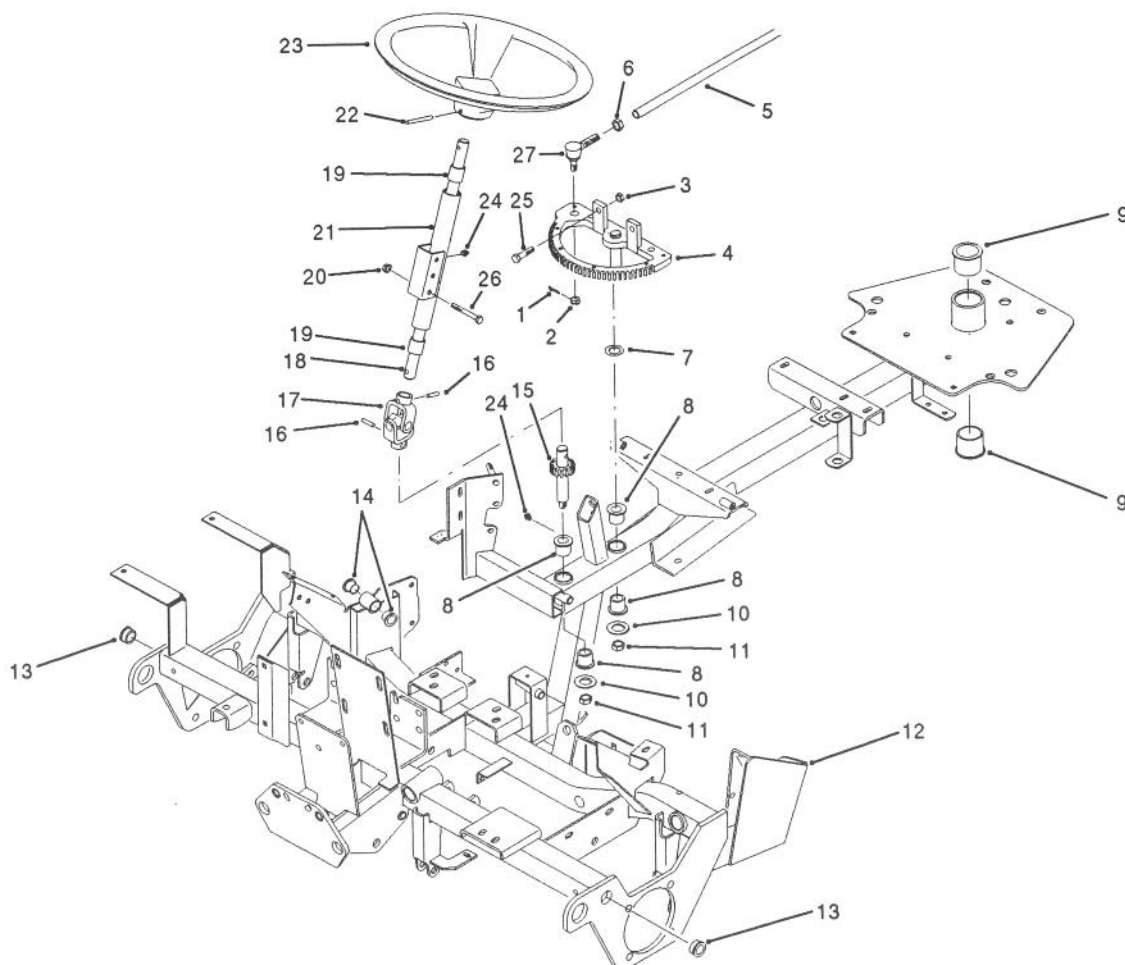 

T-1351

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin - Cotter	1	15	61-2010	Pinion - Steering	1
2	32136-4	Nut - Castle	1	16	32121-15	Pin - Roll	2
3	3218-3	Nut - Jam	2	17	61-3360	Joint - Universal	1
4	61-2040	Rack - Steering	1	18	61-2080	Shaft - Steering	1
5	61-2070	Rod - Steering	1	19	256-27	Bushing - Sleeve	2
6	3220-5	Nut - Jam	1	20	3296-29	Nut - Flange Lock	1
7	3-6498	Washer - Thrust	A/R	21	61-2090	Steering Column Assembly (Incl. Ref. #19)	1
8	256-117	Bushing - Flange	4	22	32121-10	Pin - Roll	1
9	256-245	Bushing - Flange	2	23	76-1420	Wheel - Steering	1
10	3256-26	Washer - Flat	2	24	302-5	Fitting - Grease	3
11	3296-28	Nut - Lock	2	25	32141-84	Screw - Cap Hex. Hd.	2
12	83-7570	Frame Assembly (Incl. Ref. #8, 9, 13 & 14)	1	26	322-12	Screw - Cap Hex. Hd.	1
13	256-247	Bushing - Flange	2	27	21-0140	Rod End Assembly (Incl. Ref. #2)	1
14	256-287	Bushing - Flange	2				

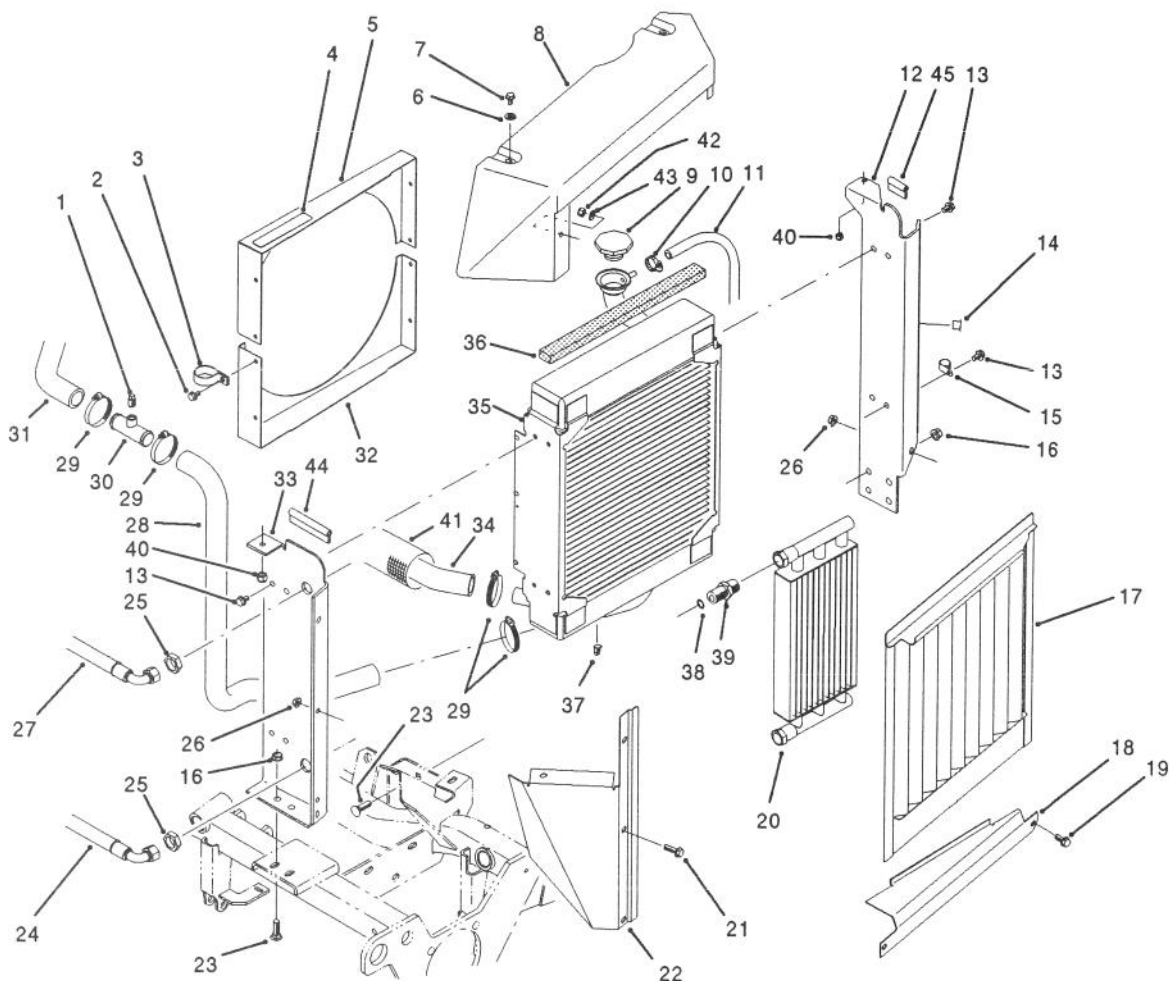 


T-1352

RADIATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	281-7	Plug - Pipe	1
2	32104-116	Screw - Hex. Washer Hd.	8
3	2412-74	Clamp - R	1
‡4	77-3100	Decal - Warning	1
5	83-7840	Shroud - Fan Top	1
6	3256-22	Washer - Flat	2
7	3234-4	Screw - Cap Hex. Hd.	2
8	83-8040	Cover - Left	1
9	66-3240	Cap - Radiator	1
10	2412-108	Clamp - Hose	1
11	71-3382	Hose - Overflow	1
12	83-7980	Bracket - Radiator Rear	1
13	3234-28	Screw - Hex. Washer Hd.	8
14	32148-8	Insert - Threaded	3
15	2412-41	Clamp - R	1
16	32128-43	Nut - Flange Lock	6
17	83-8150	Screen - Radiator	1
18	83-8070	Bracket - Radiator Bottom	1
19	3234-5	Screw - Hex. Washer Hd.	2
20	24-0760	Cooler - Oil	1
21	3234-17	Screw - Hex. Washer Hd.	3
22	83-8210	Panel - Front Left	1
23	3231-22	Bolt - Carriage	6
24	85-5030	Hose - Hydraulic	1

Ref. No.	Part No.	Description	No. Used
25	340-127	Nut - Bulkhead	2
26	32128-44	Nut - Flange Lock	4
27	83-9670	Hose - Hydraulic	1
28	83-9060	Hose - Radiator	1
29	2412-34	Clamp - Hose	5
30	83-9080	Connector - Bleed	1
31	83-9070	Hose - Radiator	1
32	83-7850	Shroud - Fan Bottom	1
33	83-7990	Bracket - Radiator Front	1
34	83-9050	Hose - Radiator	1
35	83-7550	Radiator Assembly (Incl. Ref. #37)	1
36	83-9030	Foam - Top	1
37	281-1	Plug - Pipe	2
38	237-30	Seal - O-Ring	2
39	83-7970	Fitting - Hydraulic Bulkhead (Incl. Ref. #38)	2
40	3296-42	Nut - Lock	2
41	85-5170	Sleeve	1
42	3296-29	Nut - Lock	1
43	3256-23	Washer - Flat	1
44	76-6365	Trim	1
45	76-6366	Trim	1

 
‡For different language versions of this part, see International Decal Cross Reference.

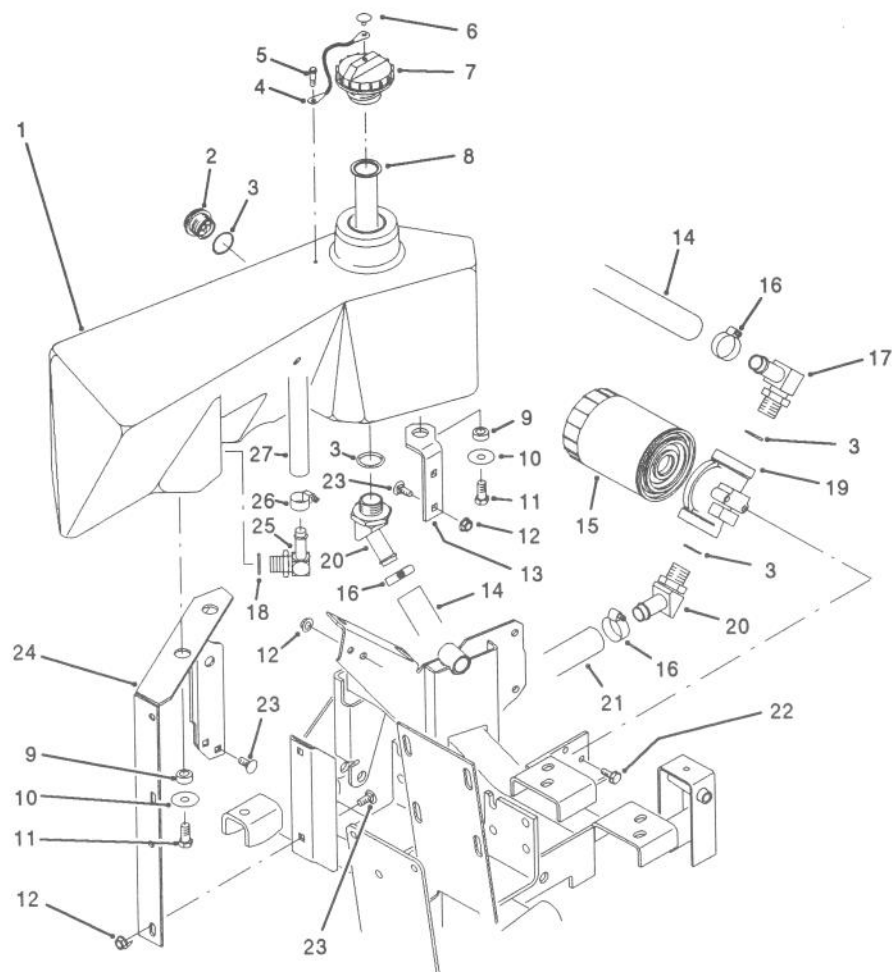

T-1353

HYDRAULIC RESERVOIR & FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-7720	Reservoir - Hydraulic	1	15	54-0110	Element - Oil Filter	1
2	69-1170	Glass - Sight (Incl. Ref. #3)	1	16	3212-34	Clamp - Hose	3
3	237-81	Seal - O-Ring	4	17	353-987	Fitting- Hydraulic 90° (Incl. Ref. #3)	1
4	75-0540	Teather - Cap	1	18	237-79	Seal - O-Ring	1
5	57-5420	Screw - Shoulder	1	19	68-8990	Head - Oil Filter	1
6	2410-73	Retainer - Teather	1	20	354-127	Fitting - Hydraulic 45° (Incl. Ref. #3)	2
7	70-8640	Cap - Hydraulic Reservoir (Incl Ref. #4 & 6)	1	21	83-9650	Hose - Hydraulic	1
8	61-2790	Screen - Filler	1	22	3234-4	Screw - Hex. Washer Hd.	2
9	240-11	Grommet	3	23	3230-23	Screw - Carriage	6
10	63-8410	Washer - Flat	3	24	83-7780	Bracket - Support	1
11	323-5	Screw - Cap Hex. Hd.	3	25	354-120	Fitting - Hydraulic 90° (Incl. Ref. #18)	1
12	32128-44	Nut - Hex. Flange Hd.	6	26	2412-36	Clamp - Hose	1
13	83-9920	Bracket - Reservoir	1	27	83-9670	Hose - Hydraulic	1
14	83-9651	Hose - Hydraulic	1				

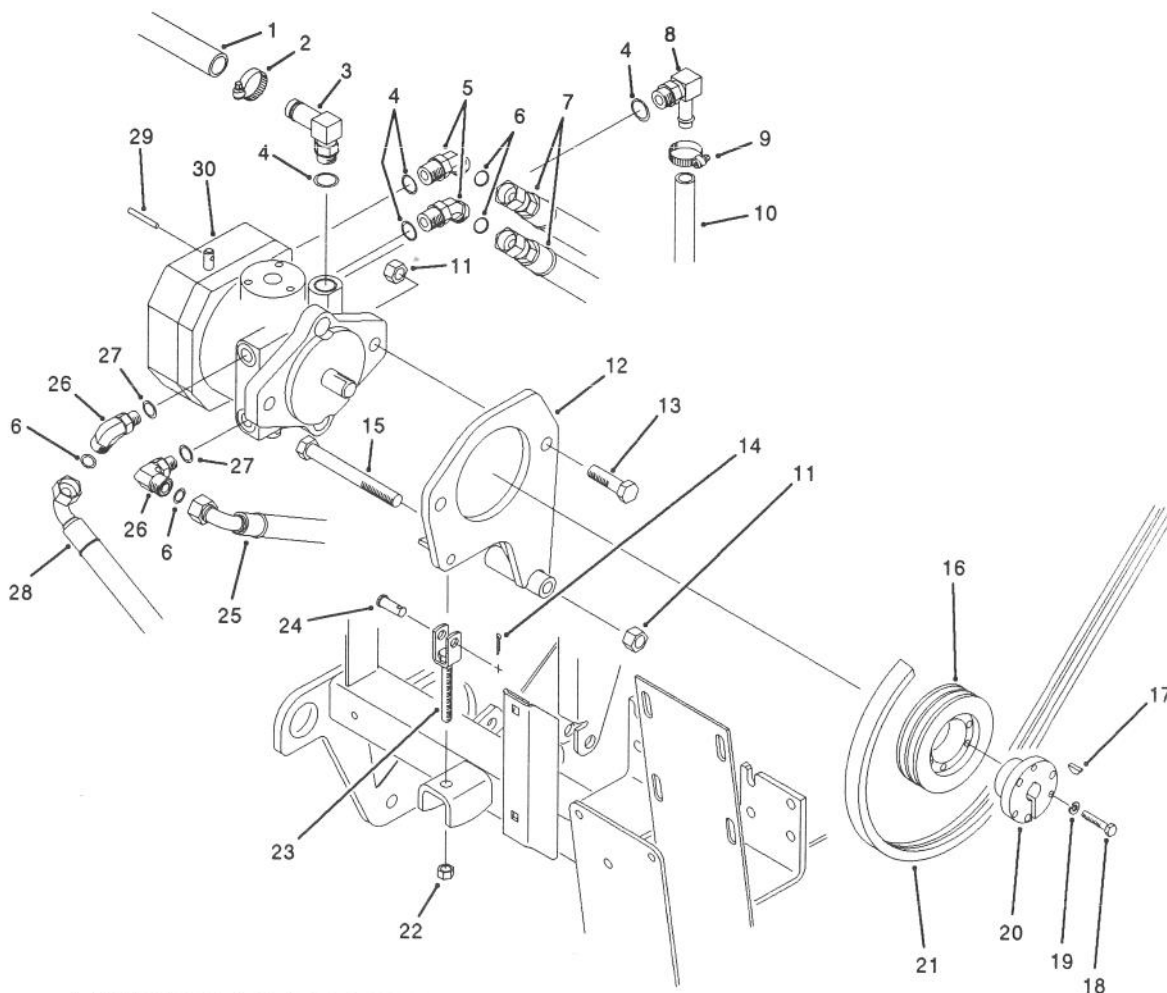 


T-1354

HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-9650	Hose - Hydraulic	1
2	2412-34	Clamp - Hose	1
3	354-128	Fitting - Hydraulic 90° (Incl. Ref. #4)	1
4	237-79	Seal - O-Ring	4
5	340-101	Fitting - Hydraulic 45° (Incl. Ref. #4 & 6)	2
6	237-30	Seal - O-Ring	4
7	83-9600	Hose - Hydraulic	2
8	354-120	Fitting - Hydraulic 90° (Incl. Ref. #4)	1
9	2412-36	Clamp - Hose	1
10	83-9670	Hose - Hydraulic	1
11	3296-23	Nut - Lock	3
12	83-8320	Mount - Pump	1
13	325-7	Screw - Cap Hex. Hd.	2
14	3272-6	Pin - Cotter	1
15	325-18	Screw - Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
16	85-4960	Pulley	1
17	3257-32	Key - Woodruff	1
18	321-13	Screw - Cap Hex. Hd.	3
19	3253-3	Washer - Lock	3
20	59-2150	Taper Lock Bushing Assy. (Incl. Ref. #18 & 19)	1
21	83-8540	Belt - Pump Drive	1
22	3296-6	Nut - Lock	1
23	83-9660	Clevis	1
24	283-2	Pin - Clevis	1
25	83-9640	Hose - Hydraulic	1
26	340-99	Fitting - Hydraulic 90° (Incl. Ref. #6 & 27)	2
27	237-42	Seal - O-Ring	2
28	83-9630	Hose - Hydraulic	1
29	32121-34	Pin - Dowel	1
30	85-4920	Hydraulic Pump Assembly (Incl. Ref. #17)	1

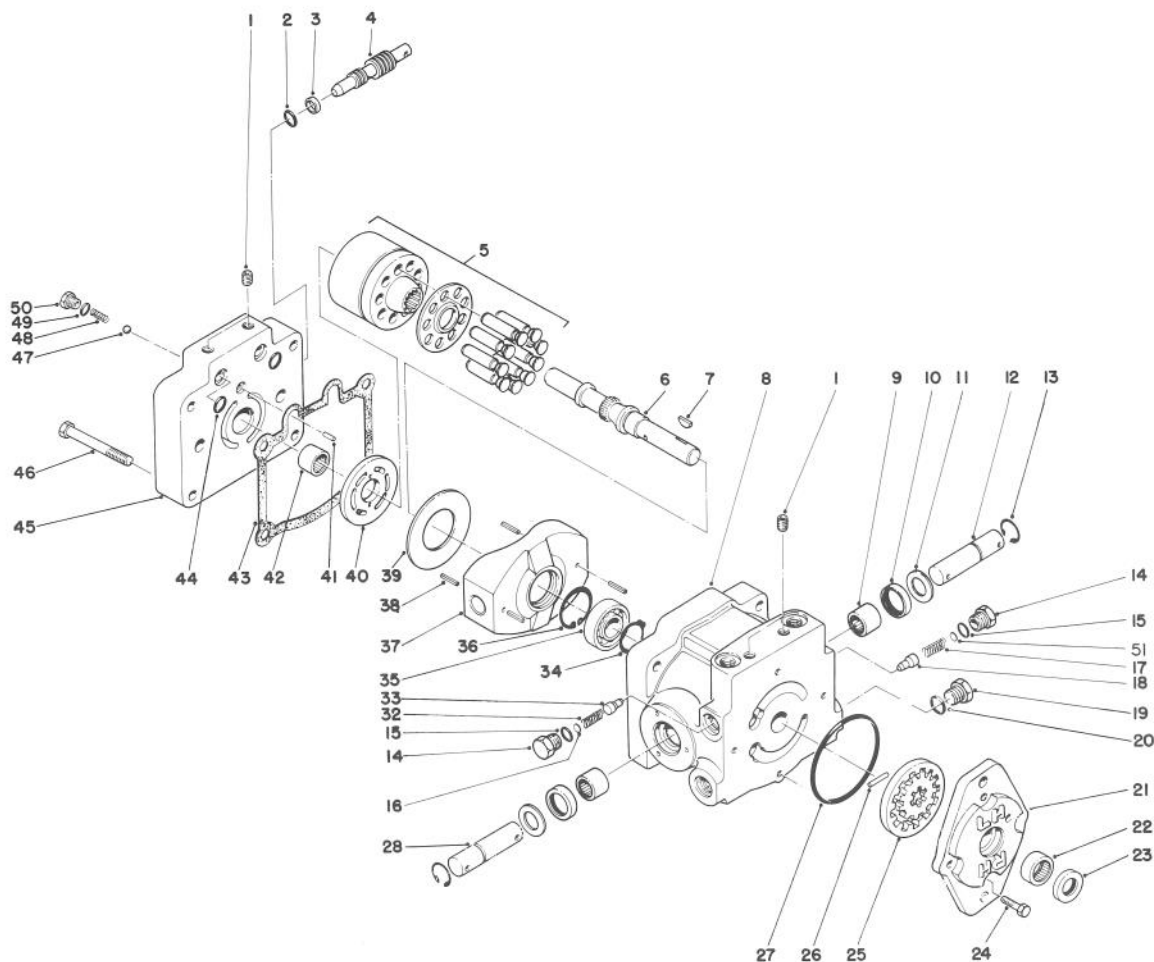 


T-0245

HYDRAULIC PUMP ASSEMBLY NO. 85-4920

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	285-17	Plug - Pipe	6	25	25-2680	Gerotor Assembly	1
2	237-22	O-Ring	1	26	25-2530	Pin - Straight	1
3	25-2630	Ring	1	27	237-95	O-Ring	1
4	25-2620	Valve - By-Pass	1	28	49-8480	Shaft - Trunion	1
5	48-1800	Cylinder Block Kit	1	32	25-2480	Spring - Charge Relief	1
6	67-8020	Shaft - Pump	1	33	28-3420	Cone - Charge Relief	1
7	3257-32	Key - Woodruff	1	34	32120-15	Ring - Retaining	1
8	85-4920	Hydraulic Pump Assembly (Complete)	1	35	251-8	Bearing - Ball	1
9	252-82	Bearing - Needle	2	36	32120-11	Ring - Retaining	1
10	25-3210	Seal - Lip	2	37	25-2450	Swash/Plate	1
11	25-2510	Washer	2	38	32121-91	Pin - Coiled Spring	3
12	25-2580	Shaft - Trunion	1	39	25-2380	Plate - Thrust	1
13	32151-46	Ring - Retaining	2	40	25-2390	Plate - Valve	1
14	25-2460	Plug	2	41	25-2430	Pin - Straight	1
15	237-86	O-Ring	2	42	67-8080	Bearing - Needle	1
16	25-2470	Kit - Shim Pack	2	43	25-2400	Gasket	1
17	25-2570	Spring - Relief Valve	1	44	62-4290	O-Ring	2
18	25-2560	Cone - Relief Valve	1	45	67-8090	Cap - Pump End	1
19	67-8030	Plug Assembly (Incl. Ref. #20)	1	46	323-11	Screw - Cap Hex. Hd.	4
20	67-8040	O-Ring	1	47	25-2490	Ball - Check Valve	2
21	25-2690	Housing - Charge Pump	1	48	25-2640	Spring - Check Valve	2
22	67-8050	Bearing - Needle	1	50	25-2650	Plug - Check Valve	2
23	67-8060	Seal - Lip	1	*	25-3180	Kit - Check Valve (Incl. Ref. #47-50)	1
24	322-4	Screw - Cap Hex. Hd.	4	*	49-8520	Kit - Implement Relief (Incl. Ref. #14-18)	1

 *Not Illustrated

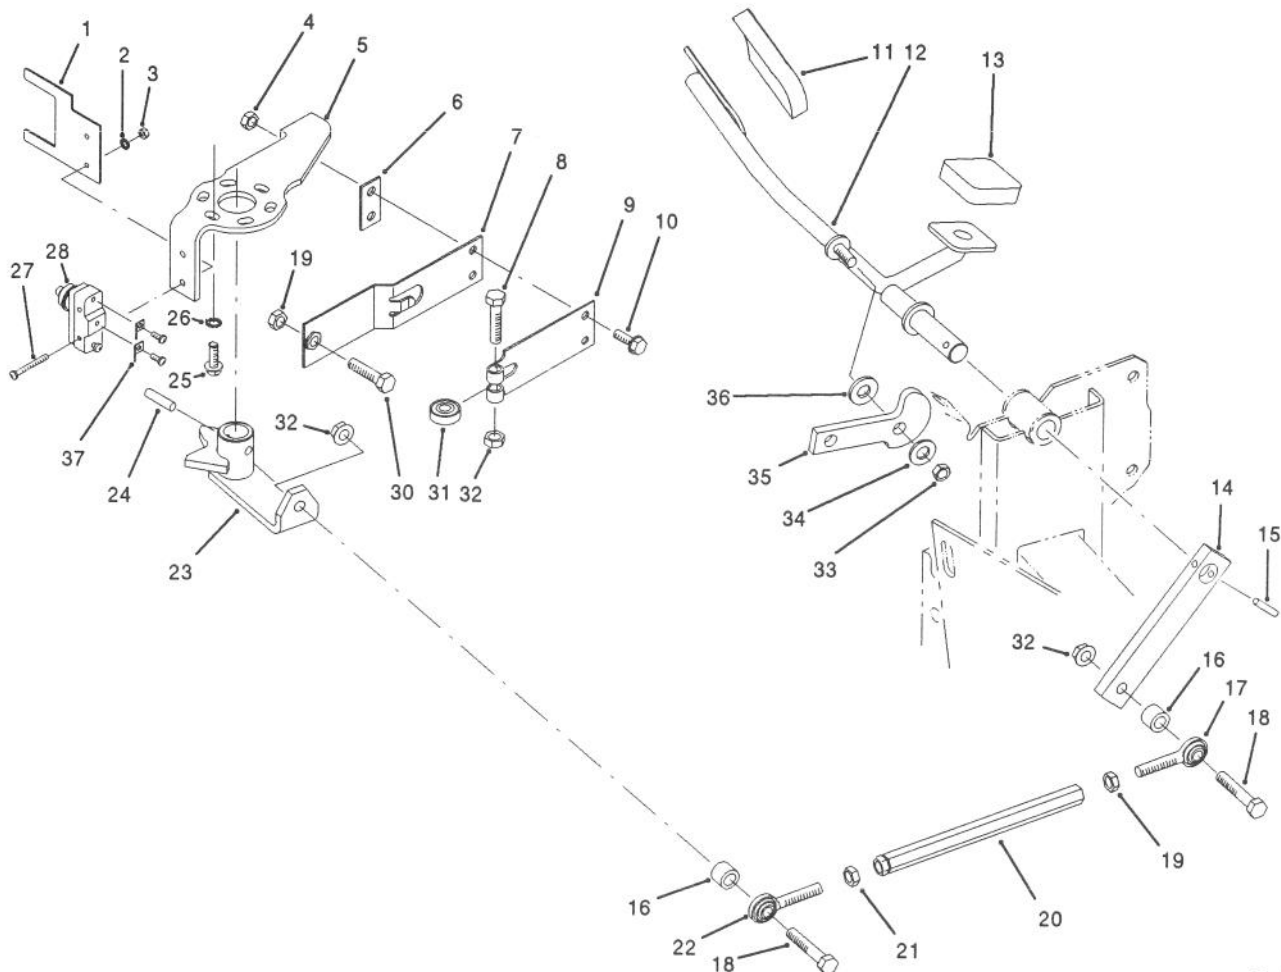


T-1355

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-8810	Stop - Spring	1
2	3254-9	Washer - ITLW	2
3	3217-16	Nut - Lock	2
4	3296-16	Nut - Lock	2
5	29-6120	Plate - Pump	1
6	51-3150	Shim - Spring	1
7	29-6170	Spring - Extended Leaf	1
8	322-17	Screw - Cap Hex. Hd.	1
9	29-6150	Spring - Leaf	1
10	3234-4	Screw - Hex. Flange Hd.	2
11	74-9100	Pad - Forward	1
12	83-8270	Pedal - Traction	1
13	74-9110	Pad - Reverse	1
14	61-2610	Arm - Traction	1
15	32121-6	Pin - Roll	1
16	61-2370	Spacer	2
17	2411-52	End - Rod	1
18	322-9	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
19	3220-2	Nut - Jam	2
20	83-8760	Rod - Control	1
21	3220-20	Nut - Jam	1
22	2411-53	End - Rod	1
23	83-8770	Lever - Pump	1
24	32121-24	Pin - Roll	1
25	11-9760	Screw - Hex. Flange Hd.	3
26	3255-7	Washer - ETLW	3
27	3249-11	Screw - Round Hd.	2
28	29-6163	Switch	1
30	3210-7	Screw - Cap Hex. Hd.	1
31	251-259	Bearing - Ball	1
32	3296-29	Nut - Lock	3
33	3296-59	Nut - Lock	1
34	3256-24	Washer - Flat	1
35	74-6110	Cam - Stop	1
36	66-2920	Spacer	1
37	218-596	Tab	2

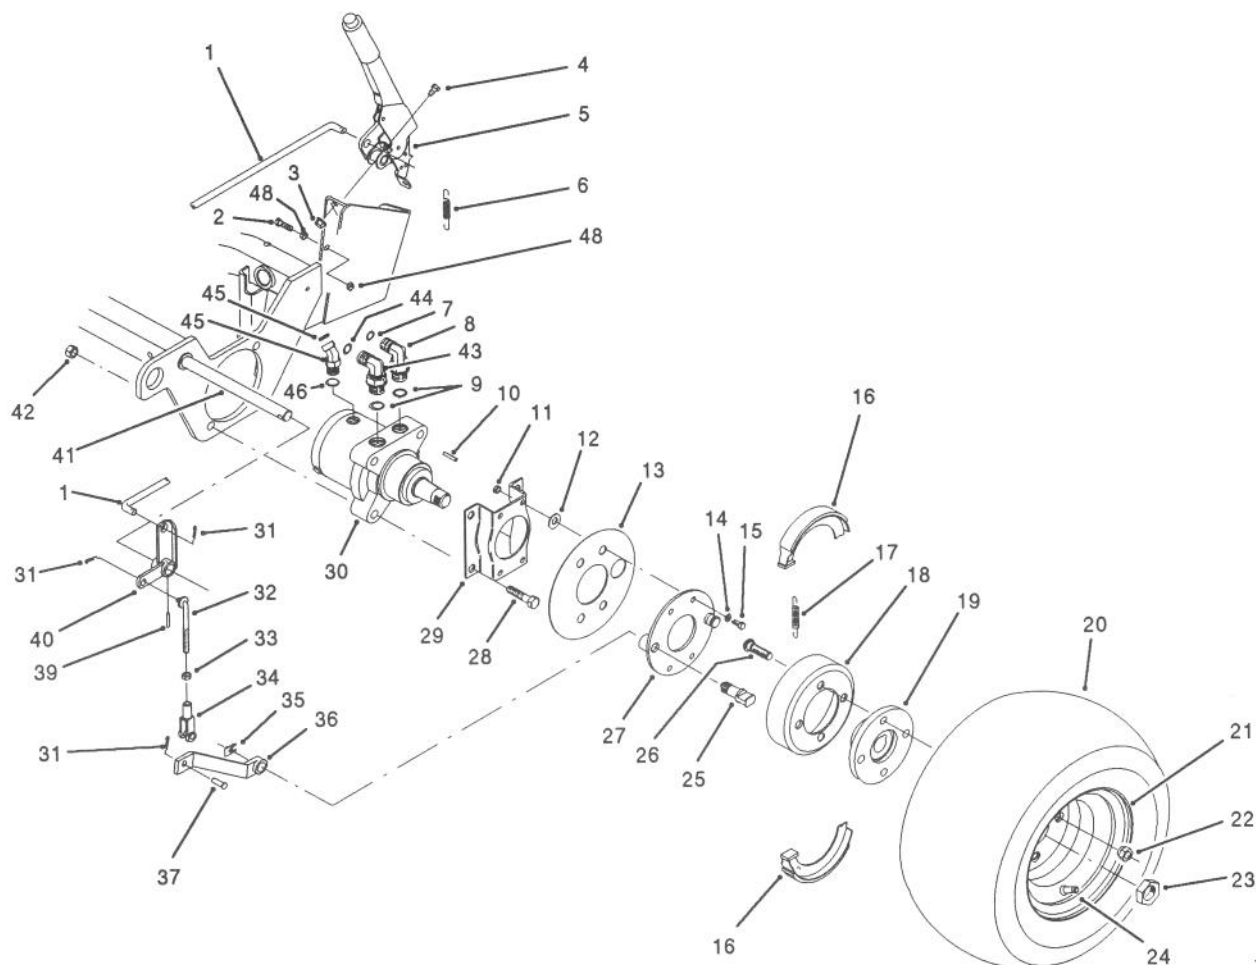 


T-1356

FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-9350	Rod - Parking Brake	1	23	26-3790	Nut - Lock	2
2	322-17	Screw - Cap Hex. Hd.	1	24	232-27	Valve - Stem	2
3	32128-44	Nut - Lock	2	25	70-9860	Pin - Pivot Brake	2
4	3234-5	Screw - Hex. Washer Hd.	2	26	85-6540	Stud - Drive	8
5	61-3990	Parking Brake Assembly	1	27	70-9870	Plate - Brake	2
6	5-7290	Spring - Extension	1	28	325-11	Screw - Cap Hex. Hd.	8
7	237-30	Seal - O-Ring	2	29	84-2000	Bracket - Brake	2
8	340-105	Fitting - Hydraulic 90° (Incl. Ref. 7 & 9)	2	30	66-5291	Hydraulic Motor Assembly (Incl. Ref. #10)	2
9	237-80	Seal - O-Ring	4	31	3272-6	Pin - Cotter	5
10	65-4640	Key - Square	2	32	84-1990	Rod - Adjusting	2
11	3296-42	Nut - Lock	8	33	3220-2	Nut - Jam	2
12	3256-16	Washer - Flat	8	34	282-2	Clevis	2
13	83-9340	Shield - Grass	2	35	70-9850	Clip - Retaining	2
14	3253-3	Washer - Lock	8	36	83-9250	Lever - Brake	2
15	321-5	Screw - Cap Hex. Hd.	8	37	283-1	Pin - Clevis	2
16	70-9840	Shoe - Brake	4	39	32121-79	Pin - Roll	2
17	70-9880	Spring - Extension	4	40	83-9270	Pivot - Brake L.H.	1
18	10-6821	Brake Drum Assembly (Incl. Ref. #19 & 26)	2	*	83-9310	Pivot - Brake R.H.	1
19	10-6870	Hub - Wheel	2	41	83-9330	Shaft - Brake	1
20	231-127	Tire	2	42	3296-23	Nut - Lock	8
21	217-60	Rim	2	43	340-17	Fitting - Hydraulic 90° (Incl. Ref. #9 & 44)	2
22	242-50	Nut - Lug	8	44	237-65	Seal - O-Ring	2

 *Not Illustrated

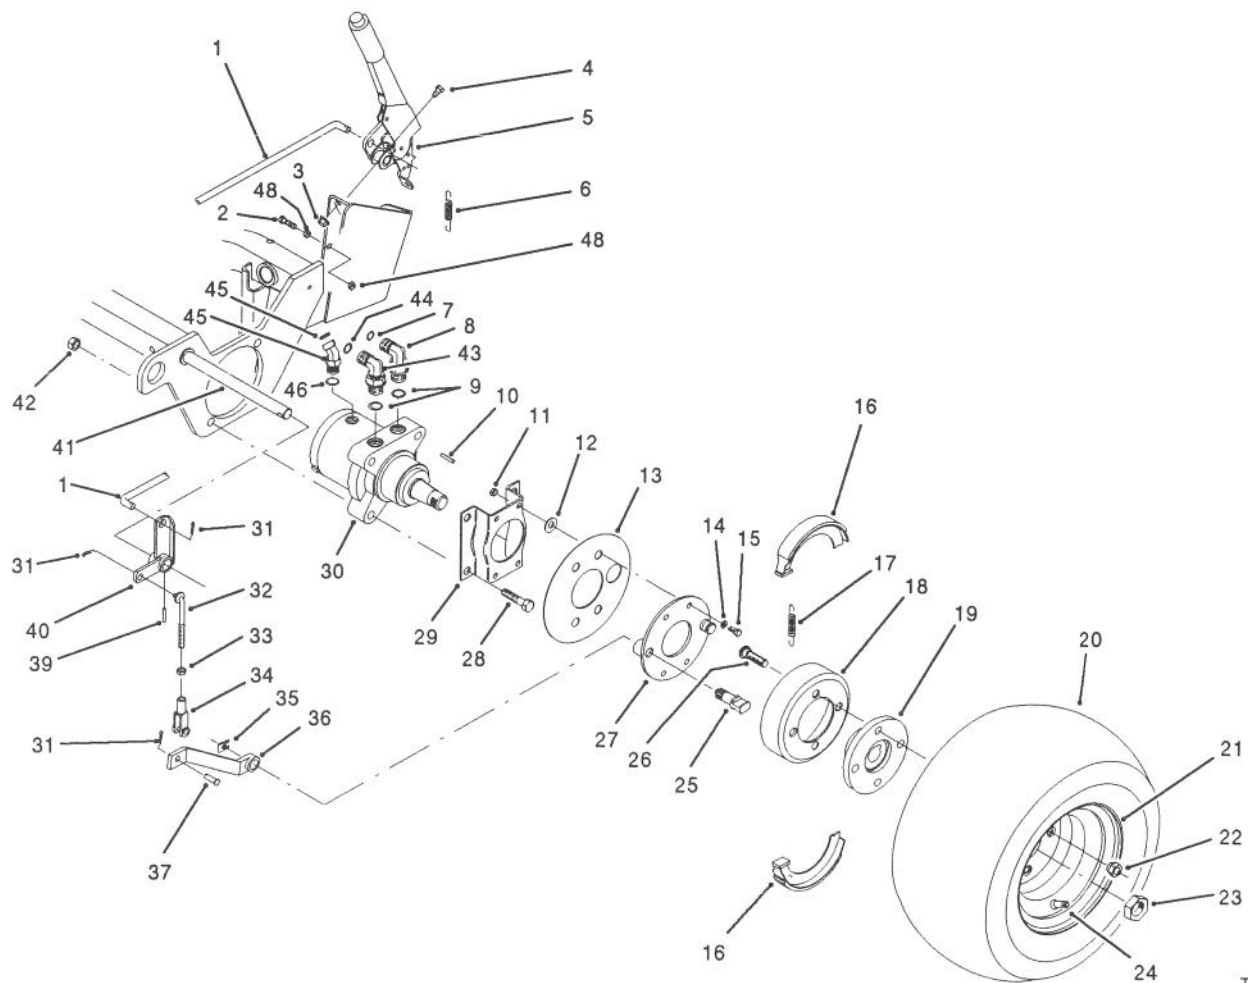


T-1356

FRONT WHEEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	340-103	Fitting - Hydraulic 45° (Incl. Ref. #46 & 47) (For Left Wheel Motor)	1
*	340-140	Fitting - Hydraulic Tee (Incl. Ref. #46 & 47) (For Right Wheel Motor)	1

Ref. No.	Part No.	Description	No. Used
46	237-78	Seal - O-Ring	2
47	237-21	Seal - O-Ring	3
48	32128-20	Nut - Lock	2
*	71-1500	Brake Assembly (Incl. Ref. #16, 17, 25, 27 & 35)	2

 *Not Illustrated

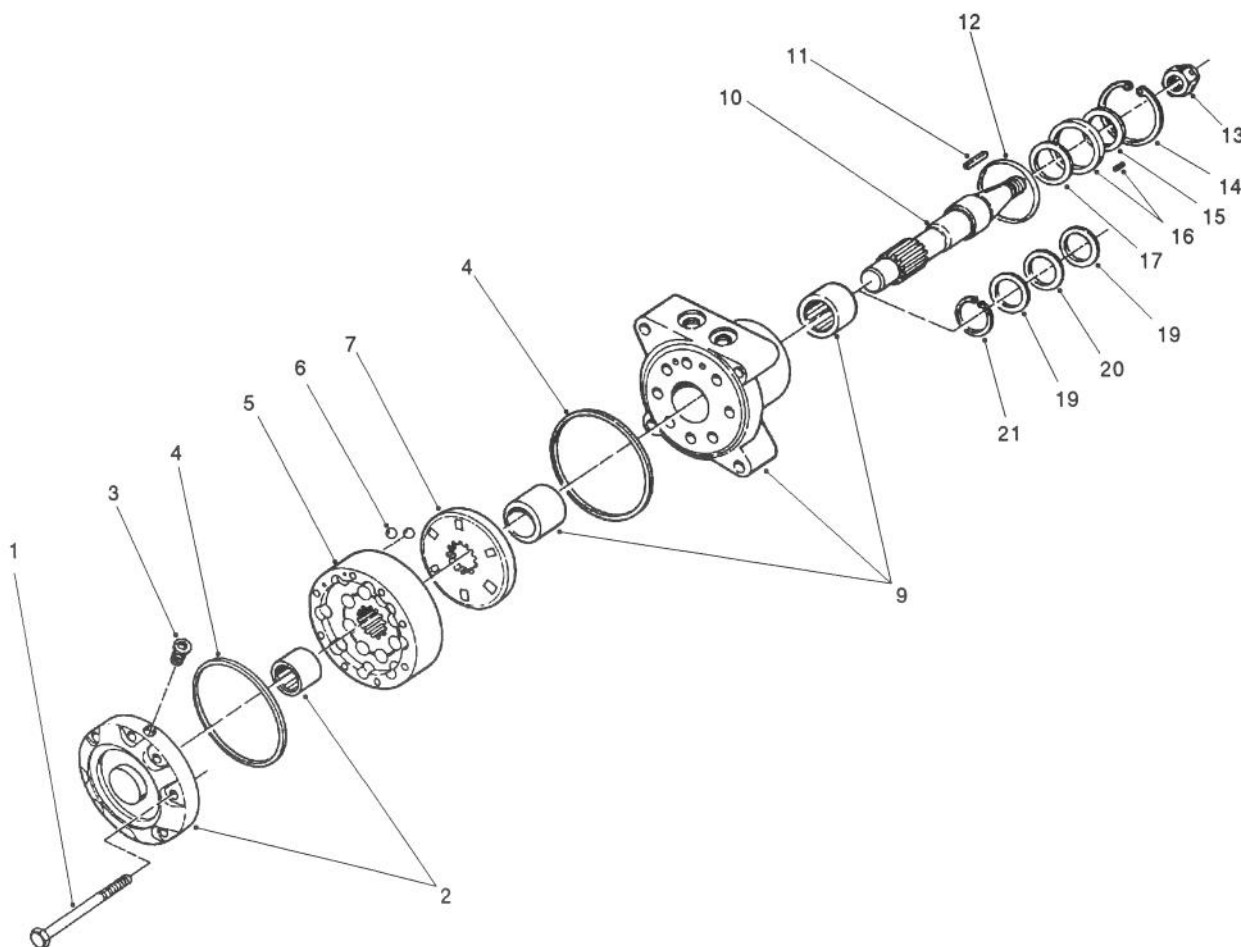

T-0274


HYDRAULIC DRIVE MOTOR ASSEMBLY NO. 66-5291

Ref. No.	Part No.	Description	No. Used
1	65-4580	Screw - Cap Hex Hd.	8
2	65-4680	Cover & Bearing Assembly	1
3	65-4560	Plug - Hex (Hollow)	1
4	65-4570	Seal - Square Ring	2
5	66-6110	IGR Assembly	1
6	65-4550	Valve - Check Ball	2
7	70-8150	Plate - Valve	1
9	65-4670	Body & Bearing Assembly	1
10	65-4660	Shaft	1
11	65-4640	Key - Square	1
12	65-4620	Seal - O-Ring	1

Ref. No.	Part No.	Description	No. Used
14	65-4500	Seal - Snap Ring	1
†15		Seal-Dust	1
†16		Retainer/Pin	1
†17		Seal-Lip	1
*	76-2350	Seal/Retainer Assembly (Incl. Ref. #15-17)	1
19	65-4600	Washer - Thrust	2
20	65-4610	Bearing - Thrust	1
21	65-4590	Ring - Snap	1
*	76-2360	Body Seal Kit (Incl. Ref. #4,12 & 15-17)	1

*Not Illustrated

 †Not available from Toro as a replacement part.

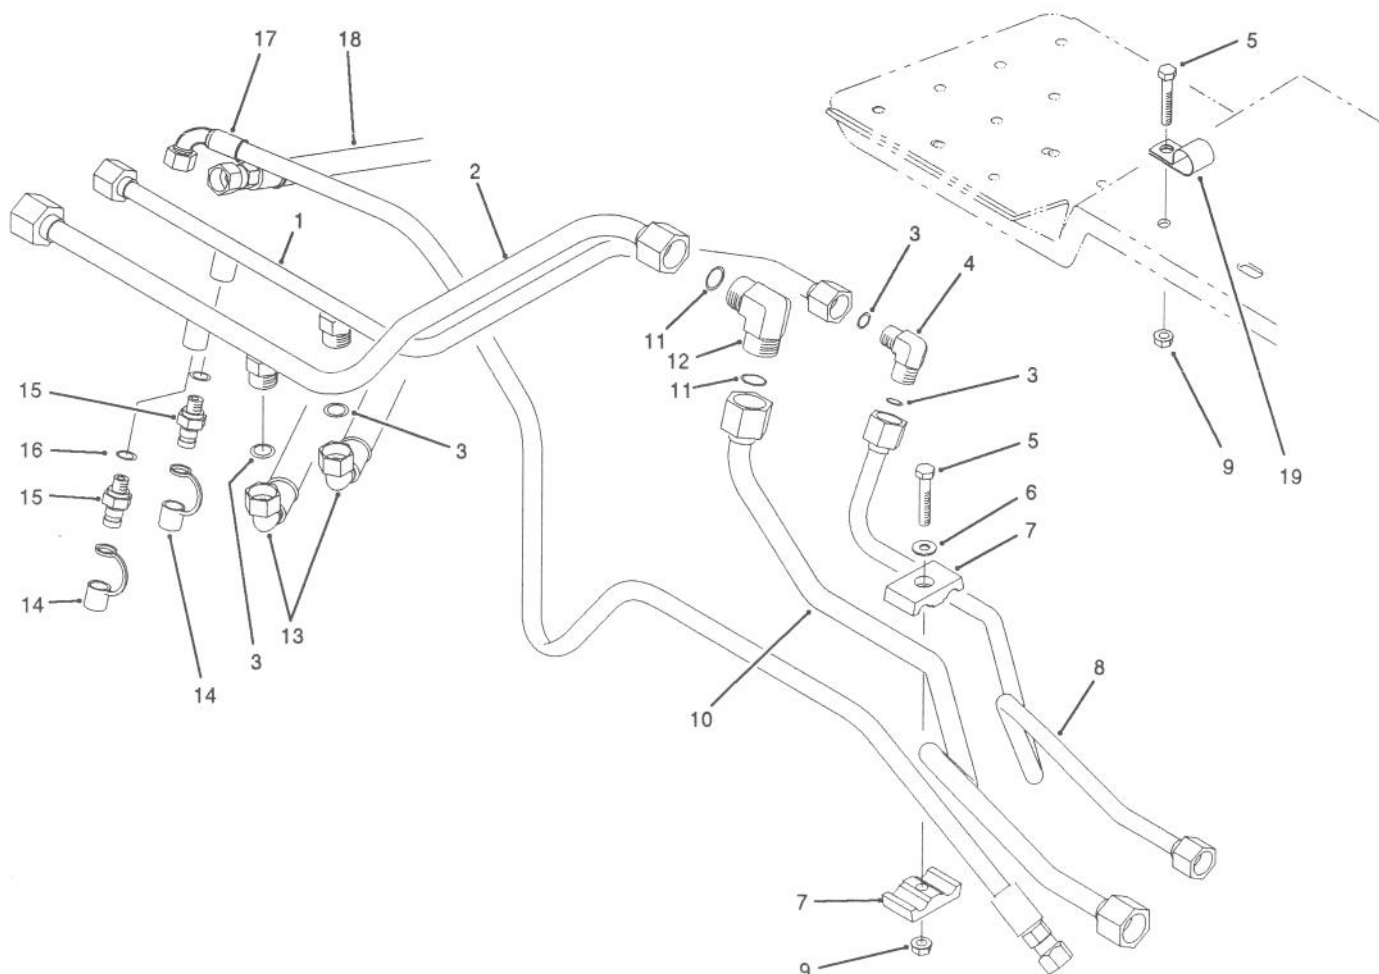


T-1357

DRIVE MOTOR PLUMBING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-9470	Hydraulic Tube Assembly (Incl. Ref. #3)	1
2	83-9440	Hydraulic Tube Assembly (Incl. Ref. #3)	1
3	237-30	Seal - O-Ring	4
4	340-163	Fitting - Hydraulic 90° (Incl. Ref. #3)	1
5	322-9	Screw - Cap Hex. Hd.	2
6	3256-3	Washer - Flat	1
7	56-7976	Clamp - Hydraulic Tube	2
8	83-9480	Tube - Hydraulic	1
9	3296-29	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
10	83-9450	Tube - Hydraulic	1
11	237-65	Seal - O-Ring	2
12	340-162	Fitting - Hydraulic 90° (Incl. Ref. #11)	1
13	83-9600	Hose - Hydraulic	2
14	354-79	Cap - Test Port	2
15	354-77	Hydraulic Test Port Fitting (Incl. Ref. #16)	2
16	237-78	Seal - O-Ring	2
17	85-4940	Hose - Hydraulic	1
18	85-4990	Hose - Hydraulic	1
19	2412-39	Clamp - R	1

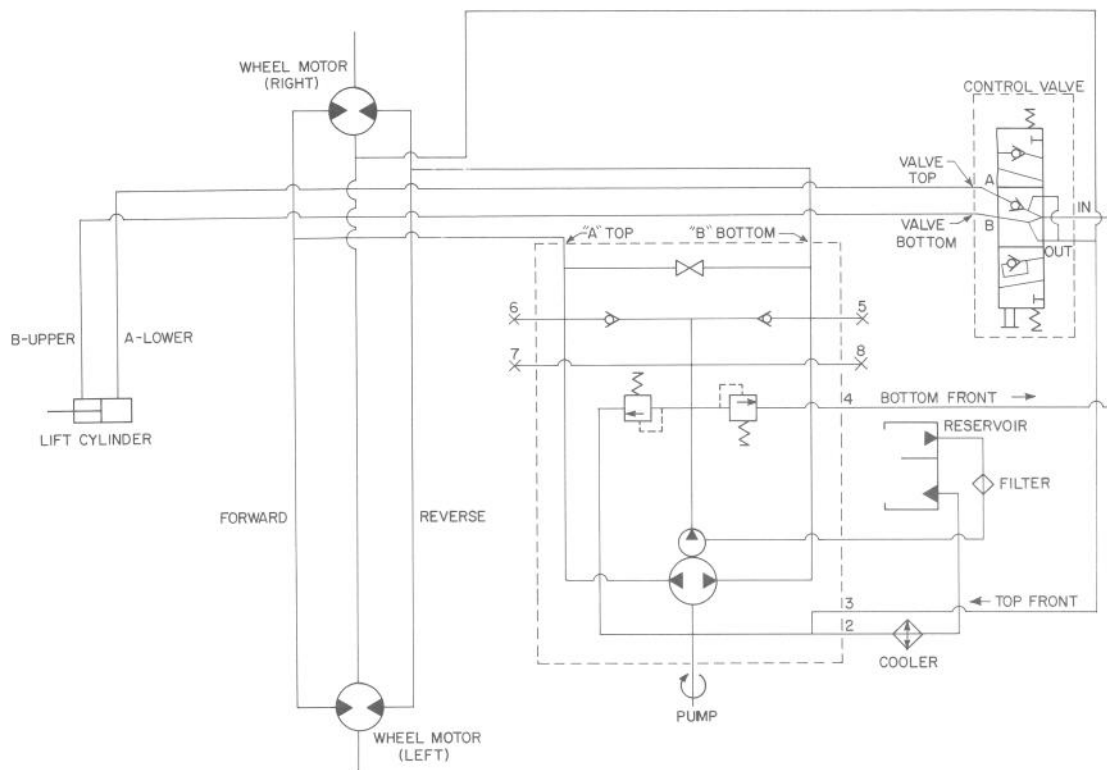 


T-1410

HYDRAULIC SCHEMATIC

Ref. No.	Part No.	Description	No. Used

Ref. No.	Part No.	Description	No. Used

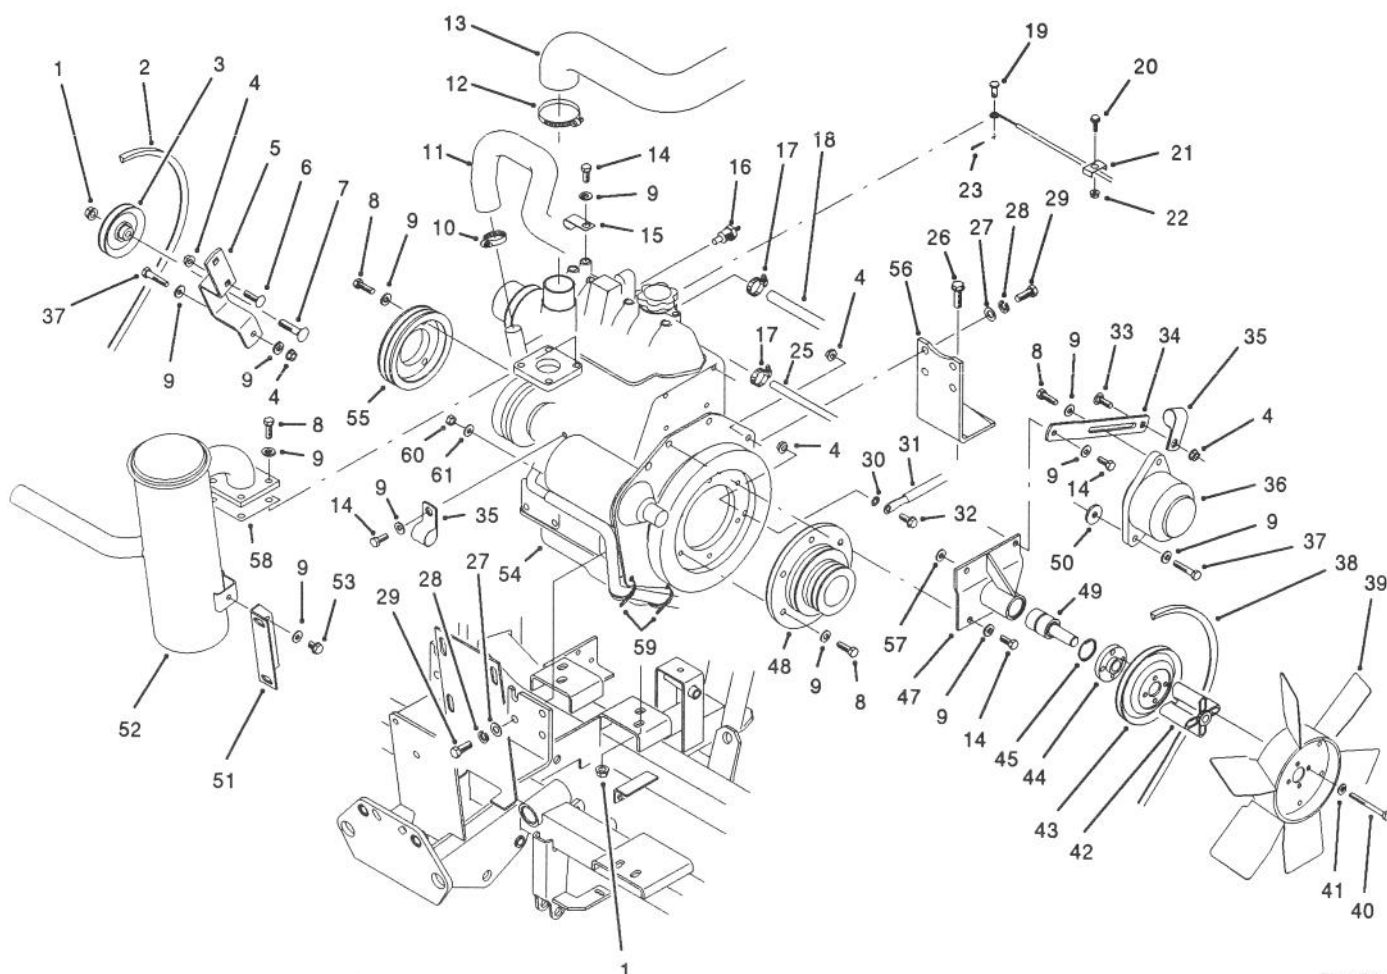 


T-1360

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-43	Nut - Flange Lock	5
2	37-9090	Belt - V	1
3	63-8140	Pulley - Idler	1
4	32128-44	Nut - Flange Lock	5
5	83-7690	Bracket - Idler	1
6	3230-22	Screw - Carriage	1
7	3231-26	Screw - Carriage	1
8	48-9460	Screw - Cap Hex. Hd.	14
9	3256-23	Washer - Flat	23
10	2412-34	Clamp - Hose	2
11	83-9070	Hose - Coolant	1
12	2412-92	Clamp - Hose	1
13	83-8550	Hose - Air Intake	1
14	48-7700	Screw - Cap Hex. Hd.	6
15	249-53	Clamp - J	1
16	82-3110	Sensor - Temp	1
17	2412-108	Clamp - Hose	2
18	63-7620	Hose - Fuel	1
19	283-62	Pin - Clevis	1
20	32105-13	Screw - Cap Hex. Hd.	1
21	81-1690	Clamp - Throttle Cable	1
22	32108-17	Nut - Flange Lock	1
23	3272-9	Pin - Cotter	1
25	75-4703	Hose - Fuel	1
26	3234-24	Screw - Hex. Flange Hd.	4
27	3256-24	Washer - Flat	16

Ref. No.	Part No.	Description	No. Used
28	48-9590	Washer - Lock	16
29	48-7780	Screw - Cap Hex. Hd.	16
30	3255-8	Washer - Lock E.T.L.W.	1
31	83-9210	Cable - Ground	1
32	3234-5	Screw - Hex. Washer Hd.	1
33	3230-1	Screw - Carriage	1
34	83-7700	Bracket - Alternator	1
35	2412-39	Clamp - R	2
36		Alternator	1
37	322-7	Screw - Cap Hex. Hd.	2
38	83-9020	Belt - V	1
39	83-7560	Fan	1
40	321-14	Screw - Cap Hex. Hd.	4
41	48-8010	Washer - Flat	4
42	83-7620	Spacer - Fan	1
43	83-7630	Pulley - Fan	1
44	83-7610	Hub - Fan	1
45	32120-10	Ring - Retaining	1
47	83-9880	Bracket - Fan Spindle	1
48	83-8410	Pulley - Engine	1
49	36-7290	Spindle - Fan	1
50	62-9510	Washer - Flat	1
51	83-8220	Bracket - Muffler	1
52	83-8500	Muffler	1
53	3234-28	Screw - Hex. Washer Hd.	1
54	83-7540	Engine Assembly	1

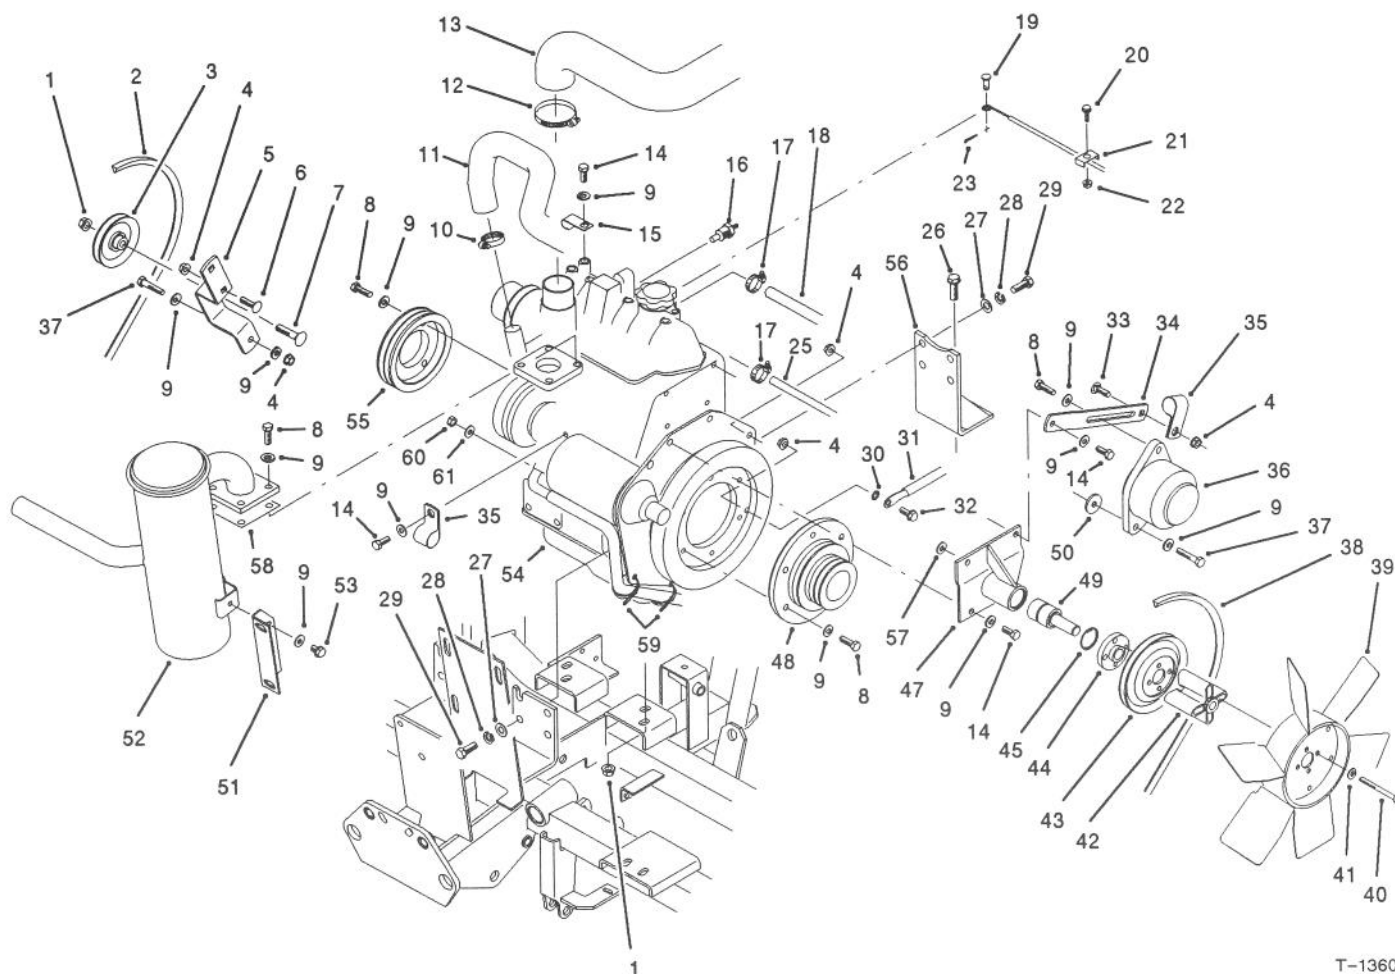 


T-1360

ENGINE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
55	83-7590	Pulley - Engine	1
56	83-8470	Bracket - Engine Mount	2
57	65-8270	Waher	1
58	83-9910	Gasket - Muffler	1


Ref. No.	Part No.	Description	No. Used
59	3290-379	Tie - Cable	2
60	57-6390	Nut	1
61	42-9850	Washer	1

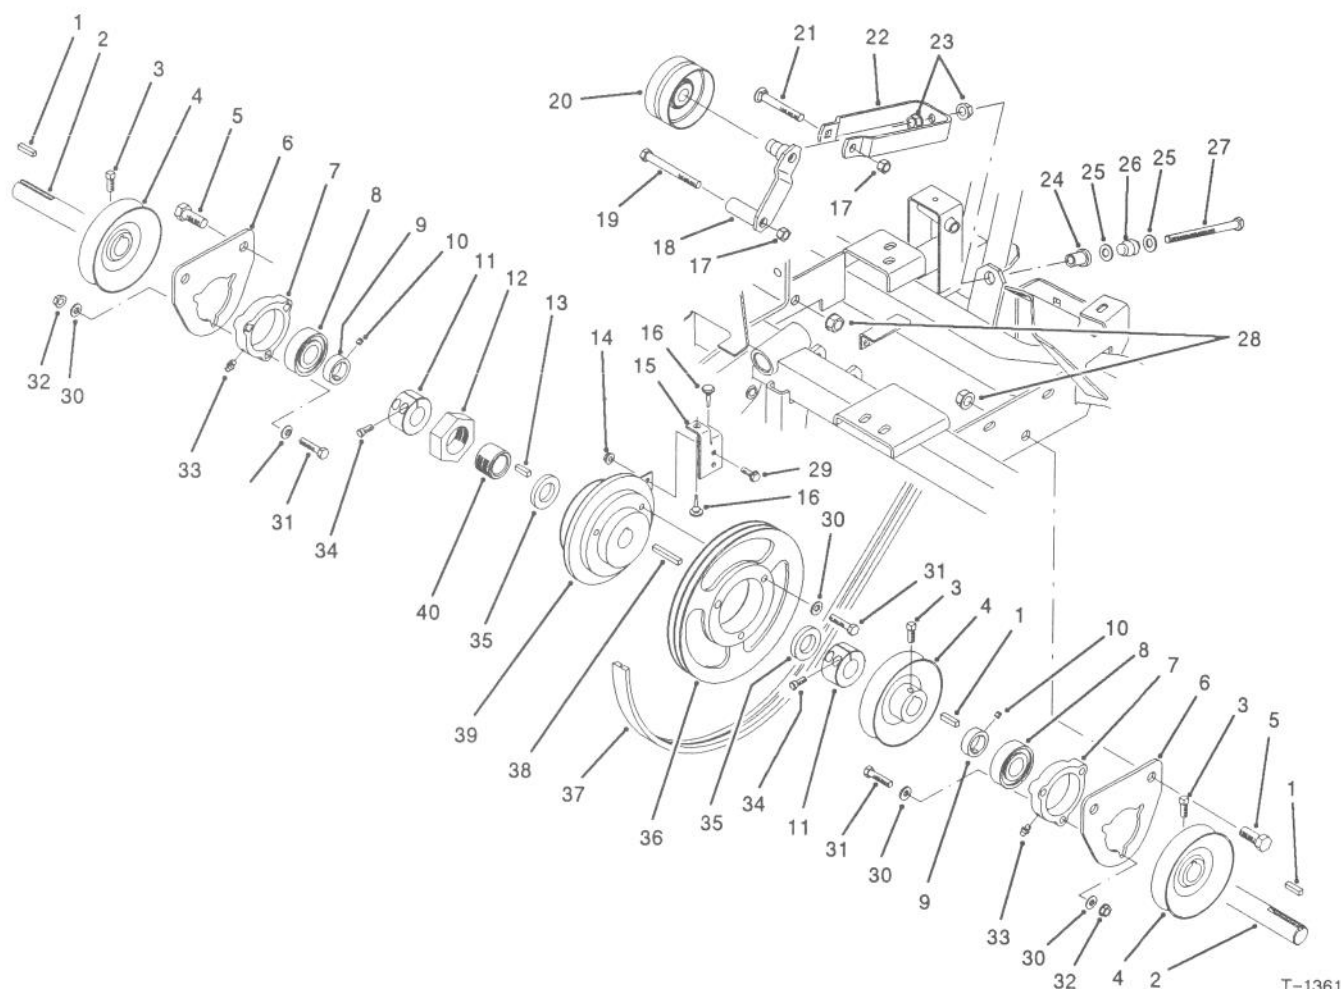 

REEL DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5-7280	Key - Square	3
2	83-7820	Shaft - Drive	1
3	3242-4	Screw - Square Hd. Set	6
4	61-0140	Pulley - Reel	3
5	3234-32	Screw - Cap Hex. Hd.	4
6	61-2350	Support - Bearing	2
7	76-2460	Bearing Assembly (Incl. Ref. #7-10 & 33)	2
8	251-337	Bearing - Ball	2
9	251-77	Collar - Locking	2
10	3245-35	Screw - Set	4
11	83-7790	Collar	2
12	3218-17	Nut - Jam	1
13	10-7070	Key - Square	1
14	32128-33	Nut - Flange Lock	2
15	83-7830	Retainer - Clutch	1
16	240-13	Bumper	2
17	3296-39	Nut - Lock	2
18	83-8620	Bracket - Idler	1
19	323-15	Screw - Cap Hex. Hd.	1
20	83-8400	Pulley - Idler	1

Ref. No.	Part No.	Description	No. Used
21	3231-31	Bolt - Carriage	1
22	83-8630	Yoke - Belt Tension	1
23	32128-43	Nut - Flange Lock	2
24	83-9810	Bushing - Flange	1
25	3256-24	Washer - Flat	2
26	83-9690	Spring - Compression	1
27	83-9680	Screw - Cap Hex. Hd.	1
28	3296-23	Nut - Flange Lock	4
29	3234-4	Screw - Hex. Flange Hd.	2
30	3256-23	Washer - Flat	15
31	322-17	Screw - Cap Hex. Hd.	9
32	3296-29	Nut - Flange Lock	6
33	302-5	Fitting - Grease	2
34	3273-18	Screw - Hex. Socket Hd.	4
35	83-7810	Spacer	2
36	83-8420	Pulley - Clutch	1
37	83-8490	Belt - Drive	1
38	83-8080	Key - Square	1
39	83-9140	Clutch Assembly	1
40	83-7800	Sleeve	1

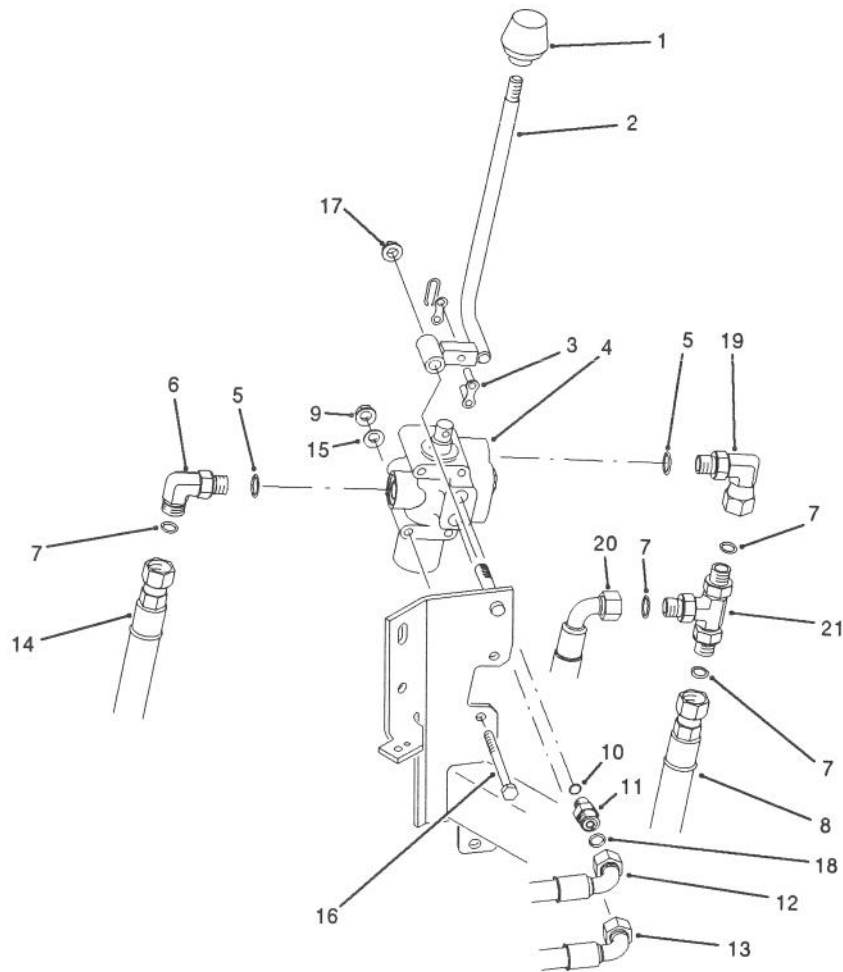 


T-1376

CUTTING UNIT LIFT VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-37	Knob	1
2	85-5160	Lever - Lift Valve	1
3	2710-16	Connecting Link Assembly	1
4	43-1950	Lift Valve Assembly	1
5	237-42	Seal - O-Ring	1
6	340-77	Fitting - Hydraulic 90° (Incl. Ref. #5 & 7)	1
7	237-22	Seal - O-Ring	4
8	83-9630	Hose - Hydraulic	1
9	3296-16	Nut - Flange Lock	2
10	237-78	Seal - O-Ring	2
11	340-92	Fitting - Hydraulic Straight (Incl. Ref. #10 & 18)	1

Ref. No.	Part No.	Description	No. Used
12	83-9610	Hose - Hydraulic	1
13	83-9620	Hose - Hydraulic	1
14	83-9640	Hose - Hydraulic	1
15	3256-22	Washer - Flat	2
16	321-23	Screw - Cap Hex. Hd.	2
17	3296-39	Nut - Flange Lock	1
18	237-21	Seal - O-Ring	2
19	340-110	Fitting - Hydraulic 90° (Incl. Ref. #5)	1
20	85-4990	Hose - Hydraulic	1
21	340-20	Fitting - Hydraulic Tee (Incl. Ref. #7)	1
2	84-7780	Armature Assembly	1

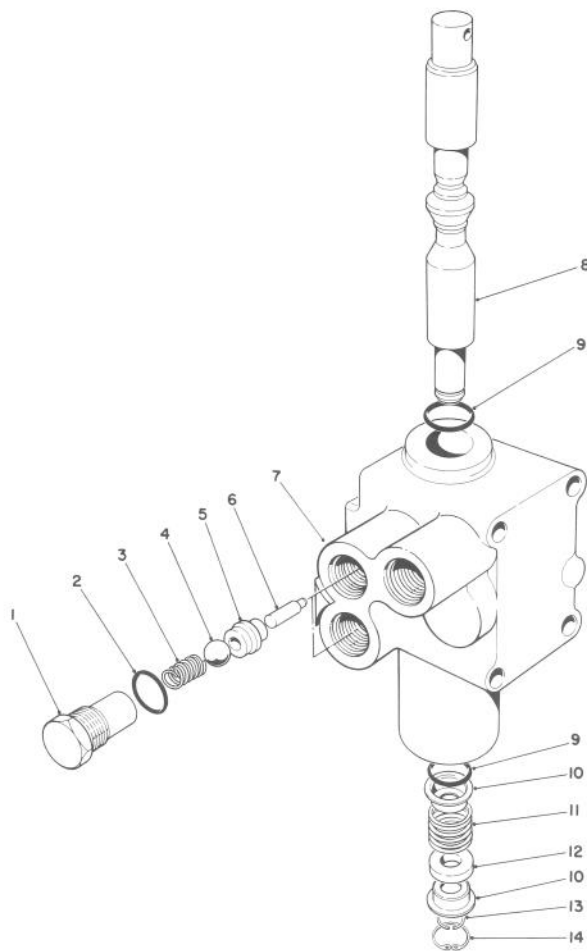 


T-0280

CONTROL VALVE ASSEMBLY NO. 43-1950

Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2
2	237-42	Seal - O-Ring	2
3	22-8340	Spring	2
4	22-8350	Ball	2
5	22-8370	Seat - Check Valve	2
6	22-8360	Pin - Cam	2
7		Body	1

Ref. No.	Part No.	Description	No. Used
8	22-8420	Spool	1
9	22-8500	Seal - O-Ring	2
10	22-8380	Retainer - Spring	2
11	22-8410	Spring	1
12	23-3030	Spacer	1
13	22-8480	Snap Ring - Spool	1
14	22-8490	Snap Ring	1

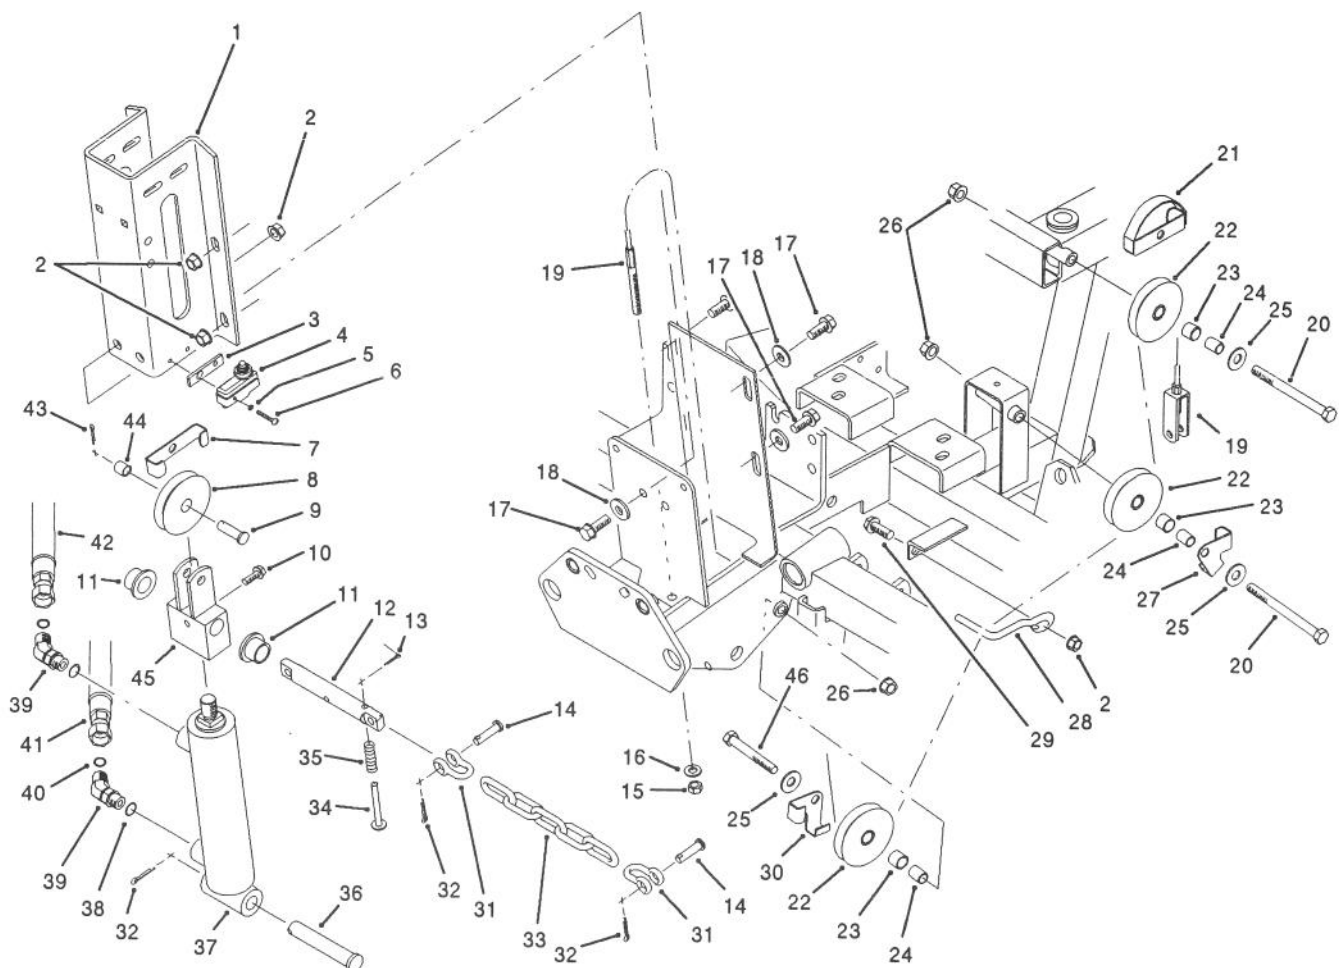 


T-1364

CUTTING UNIT LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-9760	Bracket - Cylinder Support	1
2	32128-43	Nut - Flange Lock	7
3	61-2990	Spacer - Switch	1
4	29-6163	Switch - Lift	1
5	3254-9	Washer - Lock Internal	2
6	3250-35	Screw - Pan Hd.	2
7	5-2655	Keeper - Cable	1
8	5-2653	Cable Pulley Assembly (Incl. Ref. #44)	1
9	283-42	Pin - Clevis	1
10	3234-4	Screw - Hex. Washer Hd.	1
11	84-8440	Bushing - Flange	2
12	72-4190	Pin - Cylinder Guide	1
13	3272-4	Pin - Cotter	1
14	283-6	Pin - Clevis	4
15	3296-4	Nut - Lock	1
16	3256-23	Washer - Flat	1
17	3234-25	Screw - Hex. Washer Hd.	5
18	80-6990	Washer	4
19	83-8590	Cable - Lift	1
20	323-17	Screw - Cap Hex. Hd.	2
21	61-3240	Keeper - Cable	1
22	61-3210	Cable Pulley Assembly (Incl. Ref. #23)	3
23	256-1	Bushing - Sleeve	3

Ref. No.	Part No.	Description	No. Used
24	31-3230	Spacer	3
25	3256-24	Washer - Flat	3
26	3296-39	Nut - Flange Lock	3
27	83-9130	Keeper - Cable	1
28	63-1400	Guide - Cable	1
29	3234-11	Screw - Hex. Washer Hd.	1
30	5-2656	Keeper - Cable	1
31	282-4	Clevis	4
32	3272-11	Pin - Cotter	5
33	61-3830	Chain - Lift	2
34	71-1380	Pin - Spring	1
35	71-1370	Spring - Compression	1
36	283-78	Pin - Clevis	1
37	76-0020	Hydraulic Cylinder Assembly	1
38	237-42	Seal - O-Ring	2
39	340-87	Fitting - Hydraulic 45° (Incl. Ref. #38 & 40)	2
40	237-22	Seal - O-Ring	2
41	83-9610	Hose - Hydraulic	1
42	83-9620	Hose - Hydraulic	1
43	3272-6	Pin - Cotter	1
45	61-2430	Hub - Lift	1
44	256-2	Bushing - Sleeve	1
46	323-13	Screw - Cap Hex. Hd.	1

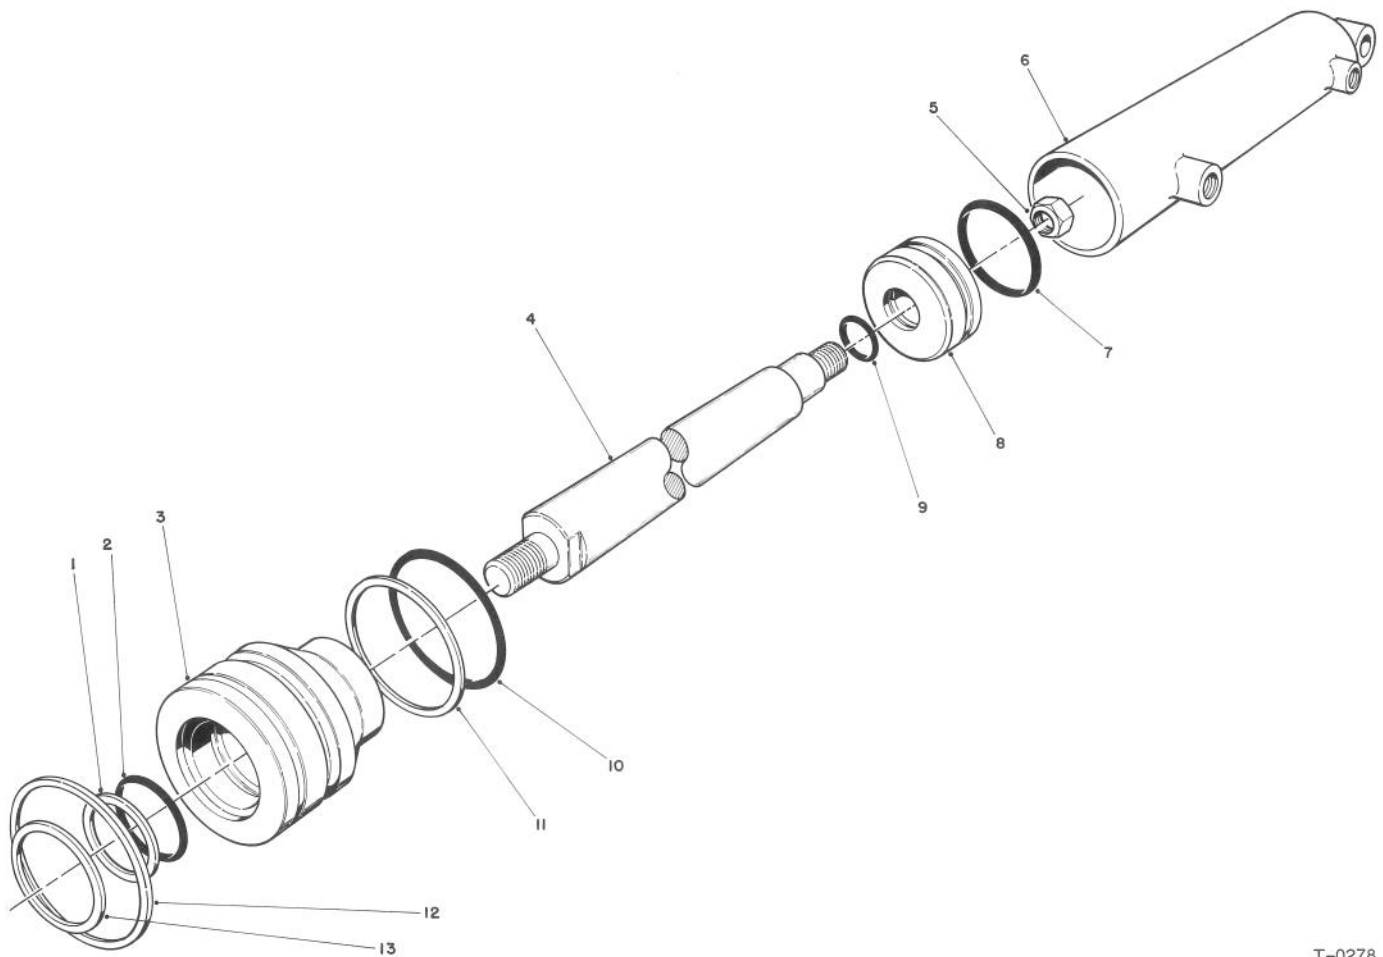 


T-0278

HYDRAULIC CYLINDER ASSEMBLY NO. 76-0020

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Washer - Backup	1	9		Seal - O-Ring	1
2		Seal - O-Ring	1	10		Seal - O-Ring	1
3	76-0090	Head	1	11		Washer - Backup	1
4	76-2320	Shaft	1	12	76-0050	Ring - Retaining	1
5	76-2330	Nut - Lock	1	13		Seal-Dust	1
6		Barrel	1	*	76-0030	Repair Kit	
7		Uniring	1			(Incl. Ref. #1-2, 7, 9-11 & 13)	1
8	76-0040	Piston	1				

 *Not Illustrated

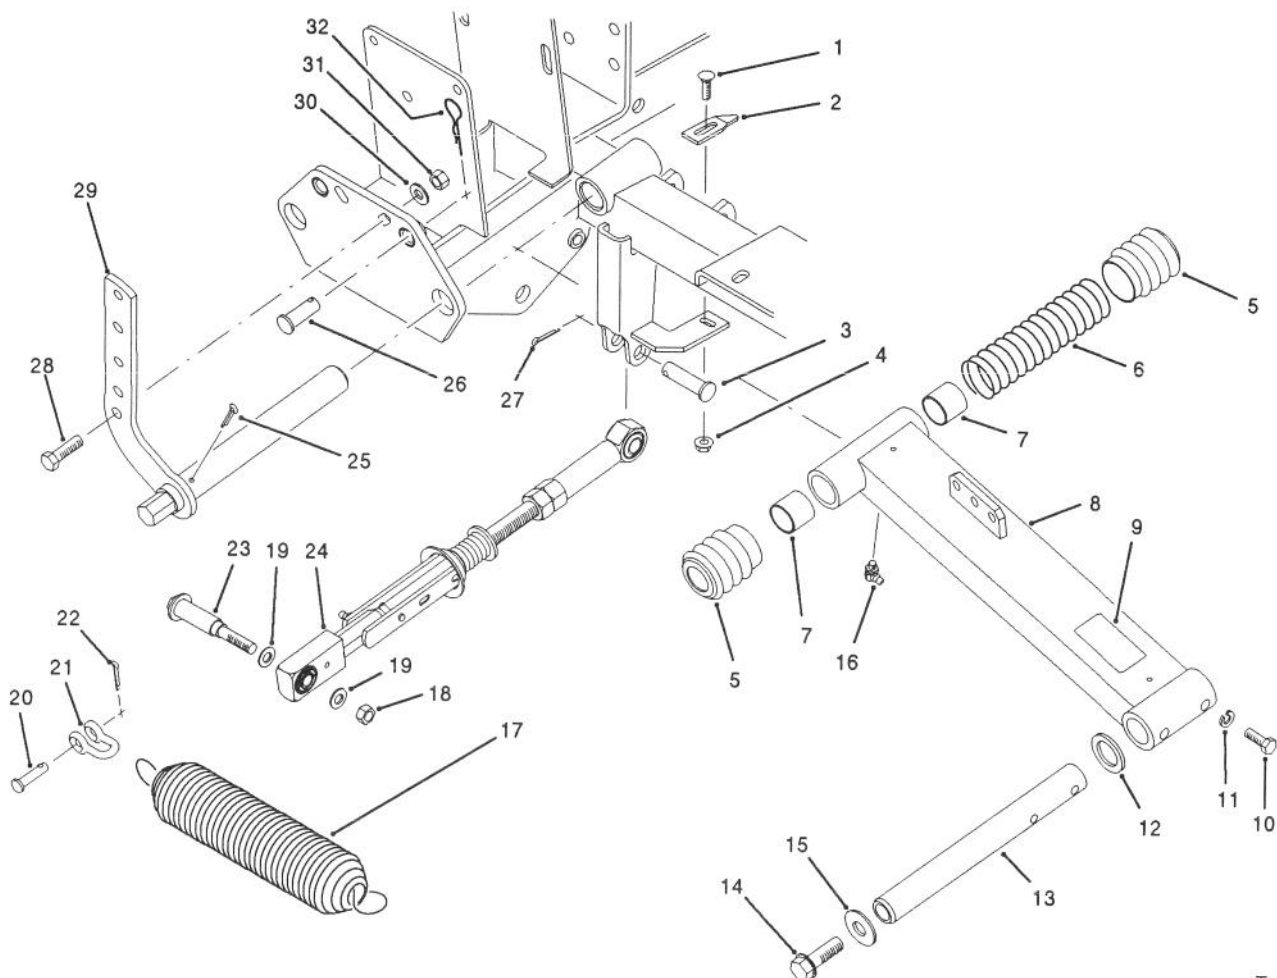

T-1365


FRONT CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3229-1	Bolt - Carriage	2
2	76-2430	Scraper - Pulley	2
3	283-40	Pin - Clevis	2
4	32128-33	Nut - Flange Lock	2
5	61-7250	Boot	4
6	61-3270	Spring - Compression	2
7	3-0348	Bushing - Sleeve	4
8	61-2880	Lift Arm Assembly L.H. (Incl. Ref. #7 & 16)	1
*	61-2830	Lift Arm Assembly R.H. (Incl. Ref. #7 & 16)	1
†9	55-4300	Decal - Warning	2
10	322-4	Screw - Cap Hex. Hd.	4
11	3253-4	Washer - Lock	4
12	256-115	Washer - Thrust	2
13	61-3000	Rod - Pivot	2
14	3234-32	Screw - Hex. Flange Hd.	2
15	3256-6	Washer - Flat	2

Ref. No.	Part No.	Description	No. Used
16	302-60	Fitting - Grease	2
17	5-0743	Spring - Extension	2
18	3296-59	Nut - Lock	2
19	3256-45	Washer - Flat	4
20	283-6	Pin - Clevis	2
21	282-4	Clevis	2
22	3272-11	Pin - Cotter	2
23	76-0370	Bolt - Shoulder	2
24	83-7900	Belt Tensioner Assembly	2
25	3272-17	Pin - Cotter	2
26	283-8	Pin - Clevis	2
27	3272-13	Pin - Cotter	2
28	323-7	Screw - Cap Hex. Hd.	2
29	61-2930	Shaft - Pivot L.H.	1
*	61-2900	Shaft - Pivot R.H.	1
30	3256-24	Washer - Flat	2
31	3296-39	Nut - Lock	2
32	3290-322	Pin - Hair	2

*Not Illustrated

 †For different language versions of this part, see International Decal Cross Reference.

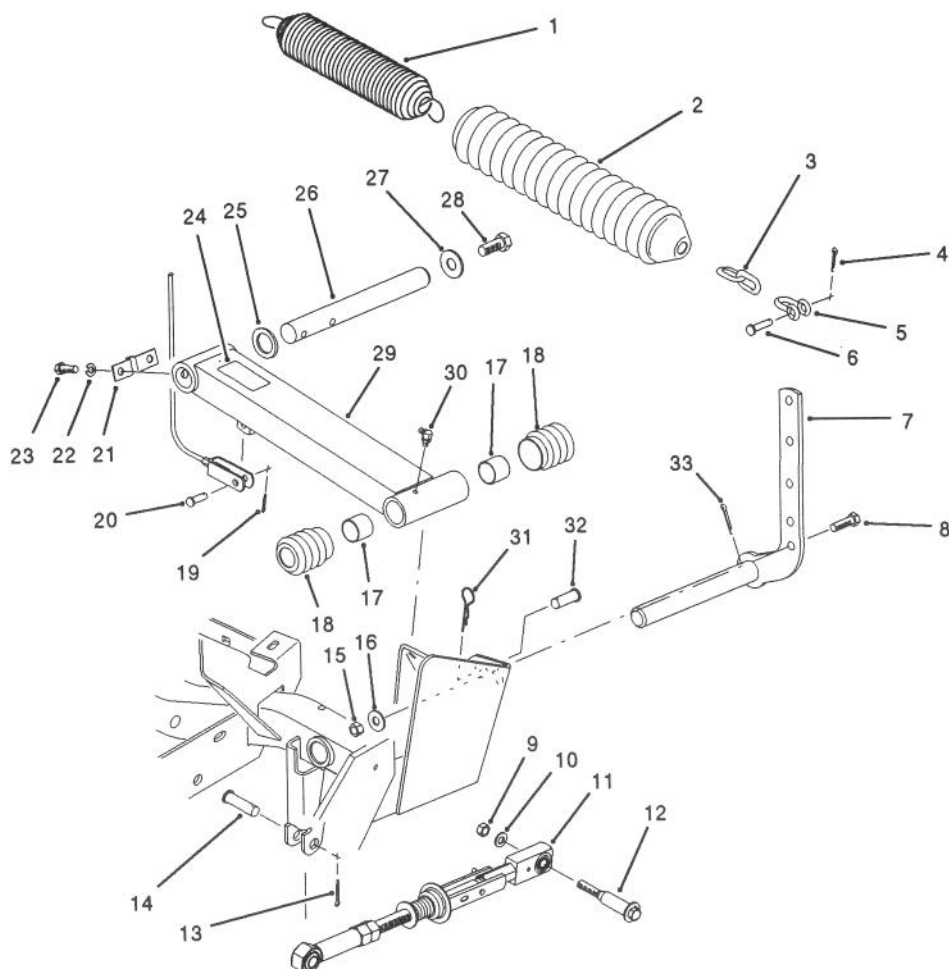


T-1366

REAR CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	5-0743	Spring - Extension	1	18	62-7250	Boot	2
2	62-7240	Cover - Spring	1	19	3272-6	Pin - Cotter	1
3	62-7300	Chain	1	20	283-1	Pin - Clevis	1
4	3272-11	Pin - Cotter	1	21	61-3820	Retainer - Cable	1
5	282-4	Clevis	1	22	3253-4	Washer - Lock	2
6	283-6	Pin - Clevis	1	23	322-4	Screw - Cap Hex. Hd.	2
7	61-2930	Shaft - Pivot	1	‡24	55-4300	Decal - Warning	1
8	323-7	Screw - Cap Hex. Hd.	1	25	256-115	Washer - Thrust	1
9	3296-59	Nut - Lock	2	26	61-3000	Rod - Pivot	1
10	3256-45	Washer - Flat	2	27	3256-6	Washer - Flat	1
11	83-7900	Belt Tensioner Assembly	2	28	3234-32	Screw - Cap Hex. Hd.	1
12	76-0370	Bolt - Shoulder	2	29	61-2890	Lift Arm Assembly (Incl. Ref. #17 & 30)	1
13	3272-13	Pin - Cotter	2	30	302-60	Fitting - Grease	1
14	283-40	Pin - Clevis	2	31	3290-322	Pin - Hair	1
15	3296-39	Nut - Lock	1	32	283-8	Pin - Clevis	1
16	3256-24	Washer - Flat	1	33	3272-17	Pin - Cotter	1
17	3-0348	Bushing - Sleeve	2				

 ‡For different language versions of this part, see International Decal Cross Reference.

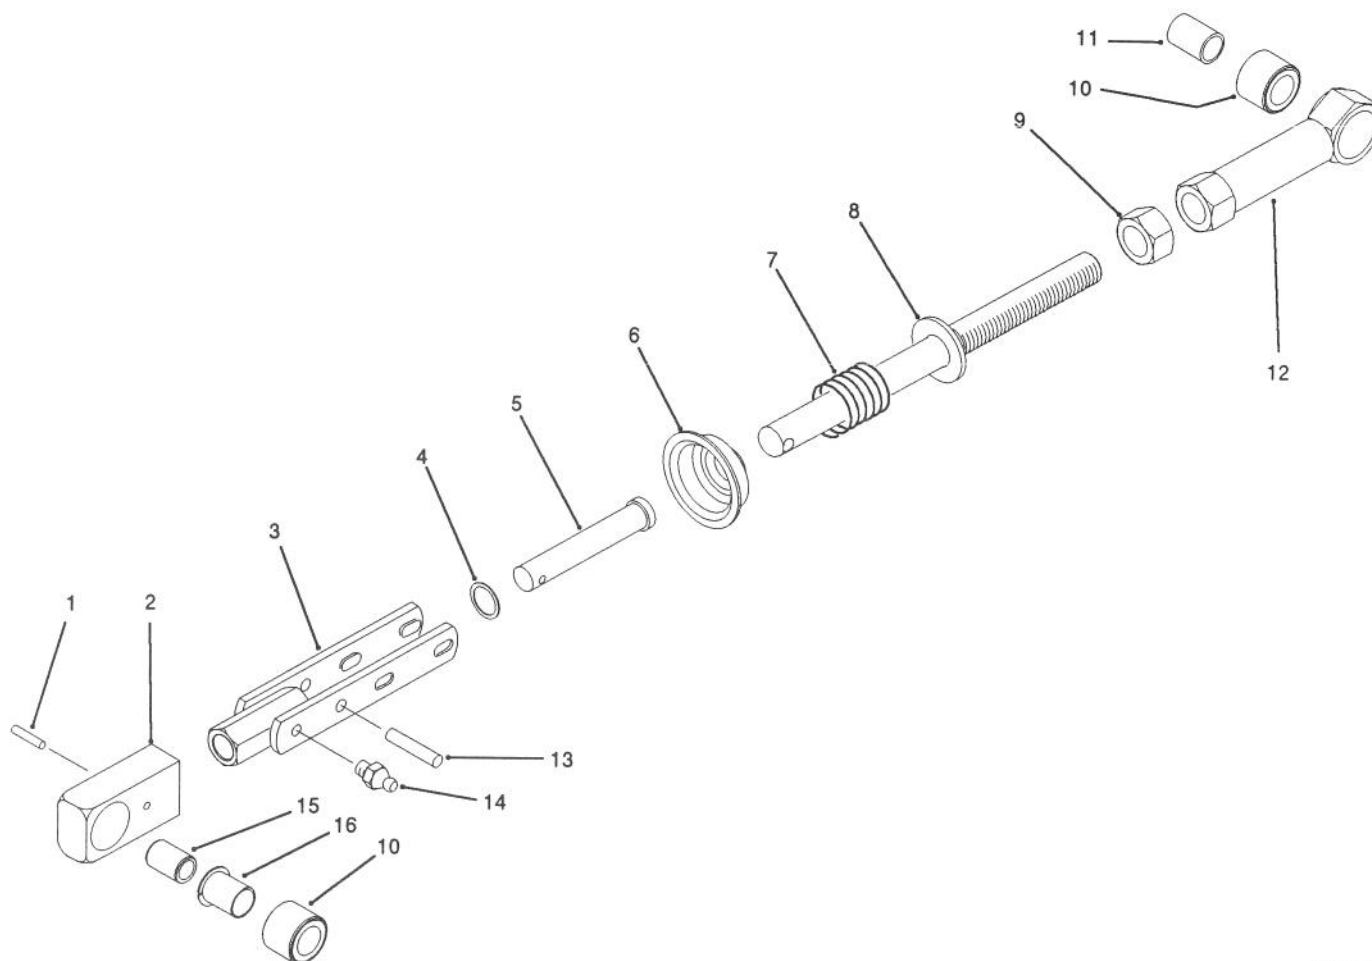


BELT TENSIONER ASSEMBLY NO. 83-7900

T-1367

Ref. No.	Part No.	Description	No. Used
1	32121-23	Pin - Roll	1
2	76-0350	Housing - Bushing	1
3	83-7930	Yoke	1
4	3256-54	Washer - Flat	1
5	283-55	Pin - Clevis	1
6	76-0360	Cup - Retainer	1
7	76-0410	Spring - Compression	1
8	83-7910	Rod	1

Ref. No.	Part No.	Description	No. Used
9	3218-6	Nut - Jam	1
10	56-9510	Bushing Assembly	2
11	256-173	Bushing - Sleeve	1
12	76-0300	Housing - Bushing	1
13	32121-9	Pin - Roll	1
14	302-5	Fitting - Grease	1
15	76-0390	Spacer	1
16	56-9520	Bushing - Nyliner	1

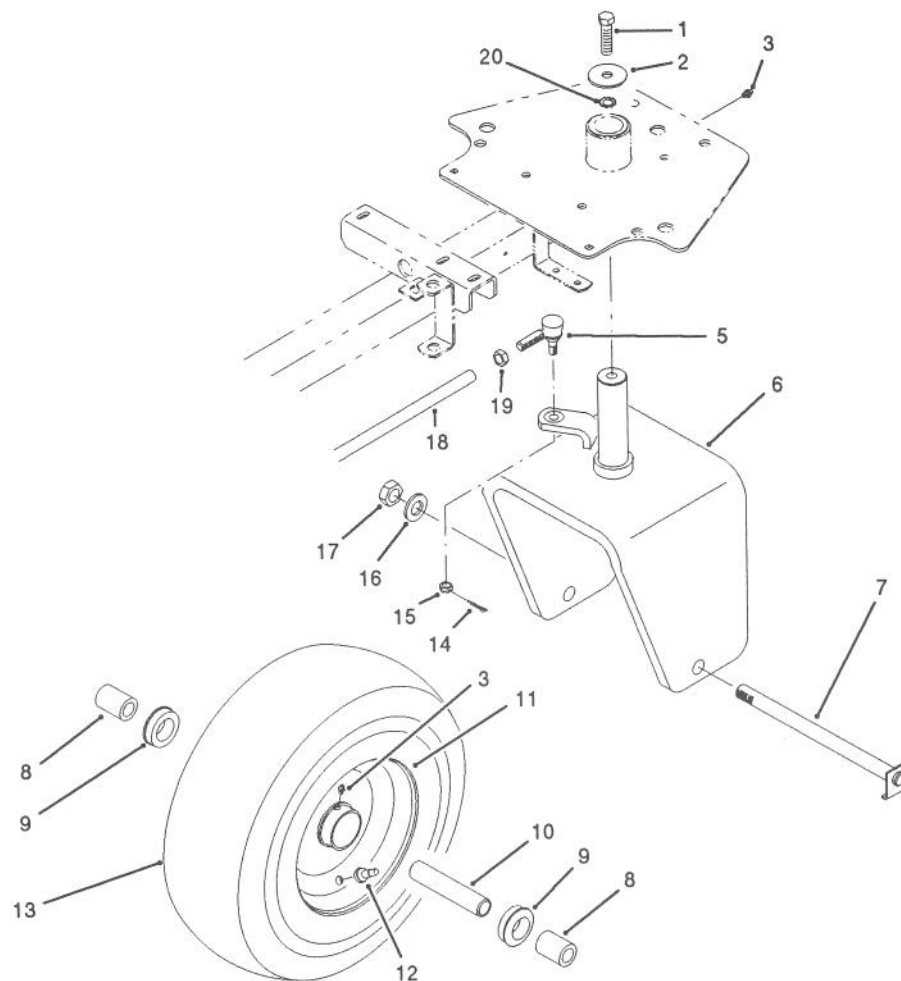 


T-1368

REAR WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	325-7	Screw - Cap Hex. Hd.	1
2	75-7730	Spacer	1
3	302-5	Fitting - Grease	2
5	20-0150	Rod End Assembly (Incl. Ref. #15)	1
6	83-7340	Fork - Caster	1
7	61-1960	Axle - Wheel	1
8	68-4210	Spacer - Wheel	2
9	251-321	Bearing - Wheel	2
10	241-130	Spacer - Bearing	1

Ref. No.	Part No.	Description	No. Used
11	241-129	Rim	1
12	232-47	Valve - Stem	1
13	231-122	Tire	1
14	3272-6	Pin - Cotter	1
15	32136-4	Nut - Castle	1
16	3256-28	Washer - Flat	1
17	3296-51	Nut - Lock	1
18	61-2070	Rod - Steering	1
19	3220-12	Nut - Jam	1
20	3255-2	Washer - Lock	1

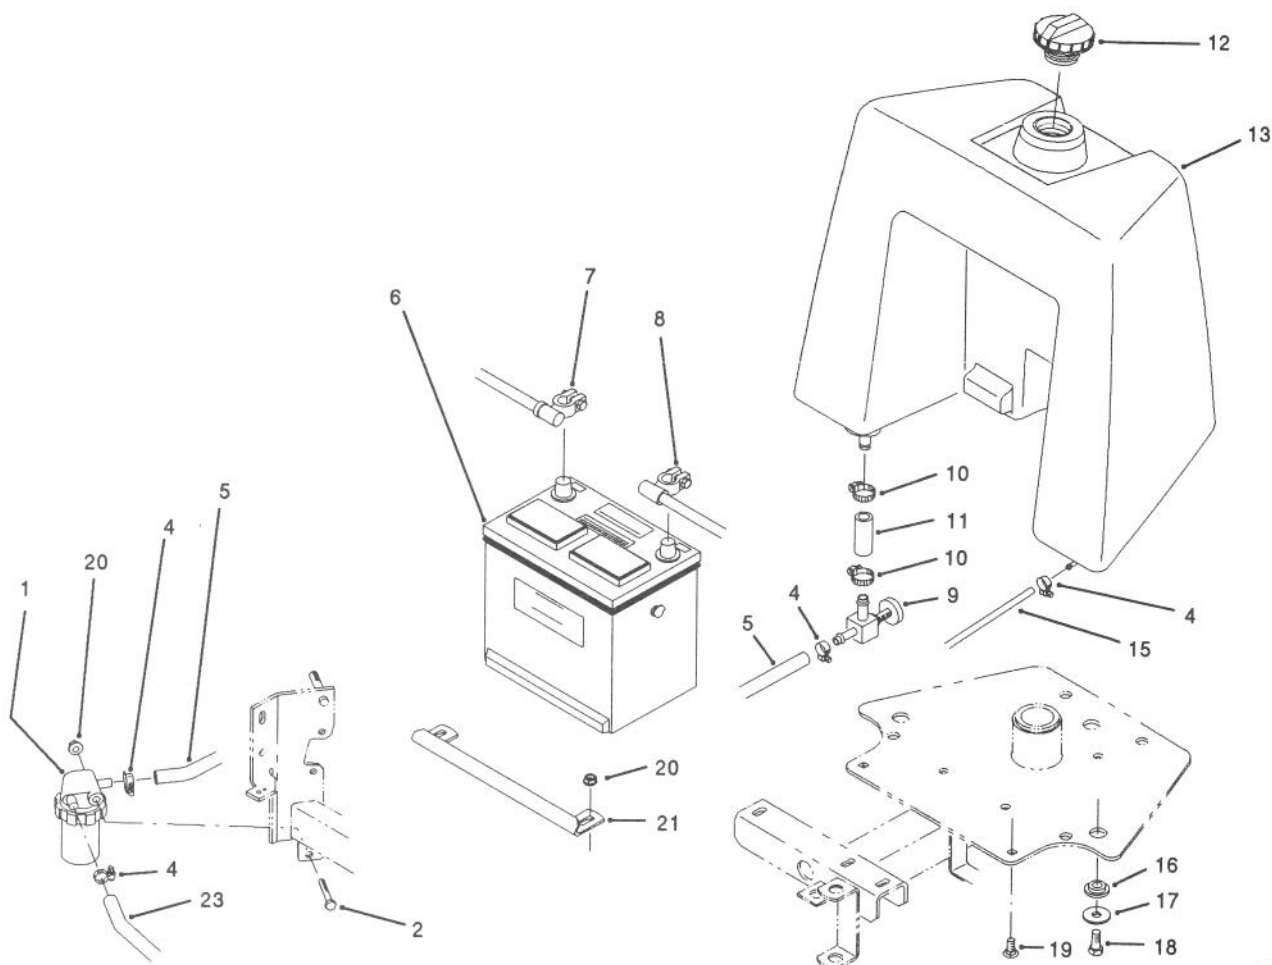 


T-1370

FUEL SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-8970	Filter - Fuel	1
2	321-12	Screw - Cap Hex. Hd.	1
4	2412-108	Clamp - Hose	4
5	63-7620	Hose - Fuel	1
6	83-9000	Battery	1
7	83-9220	Cable - Battery Pos.	1
8	83-9210	Cable - Battery Neg.	1
9	56-2520	Valve - Fuel Shut-Off	1
10	2412-36	Clamp - Hose	2
11	56-2230	Hose - Fuel	1

Ref. No.	Part No.	Description	No. Used
12	70-8621	Cap - Fuel Tank	1
13	83-8720	Tank - Fuel	1
15	75-4703	Hose - Fuel	1
16	240-11	Grommet	3
17	63-8410	Washer - Flat	3
18	323-5	Screw - Cap Hex. Hd.	3
19	3230-1	Screw - Carriage	2
20	32128-44	Nut - Flange Lock	3
21	83-9240	Hold-Down - Battery	1
23	23-2140	Hose - Fuel	1

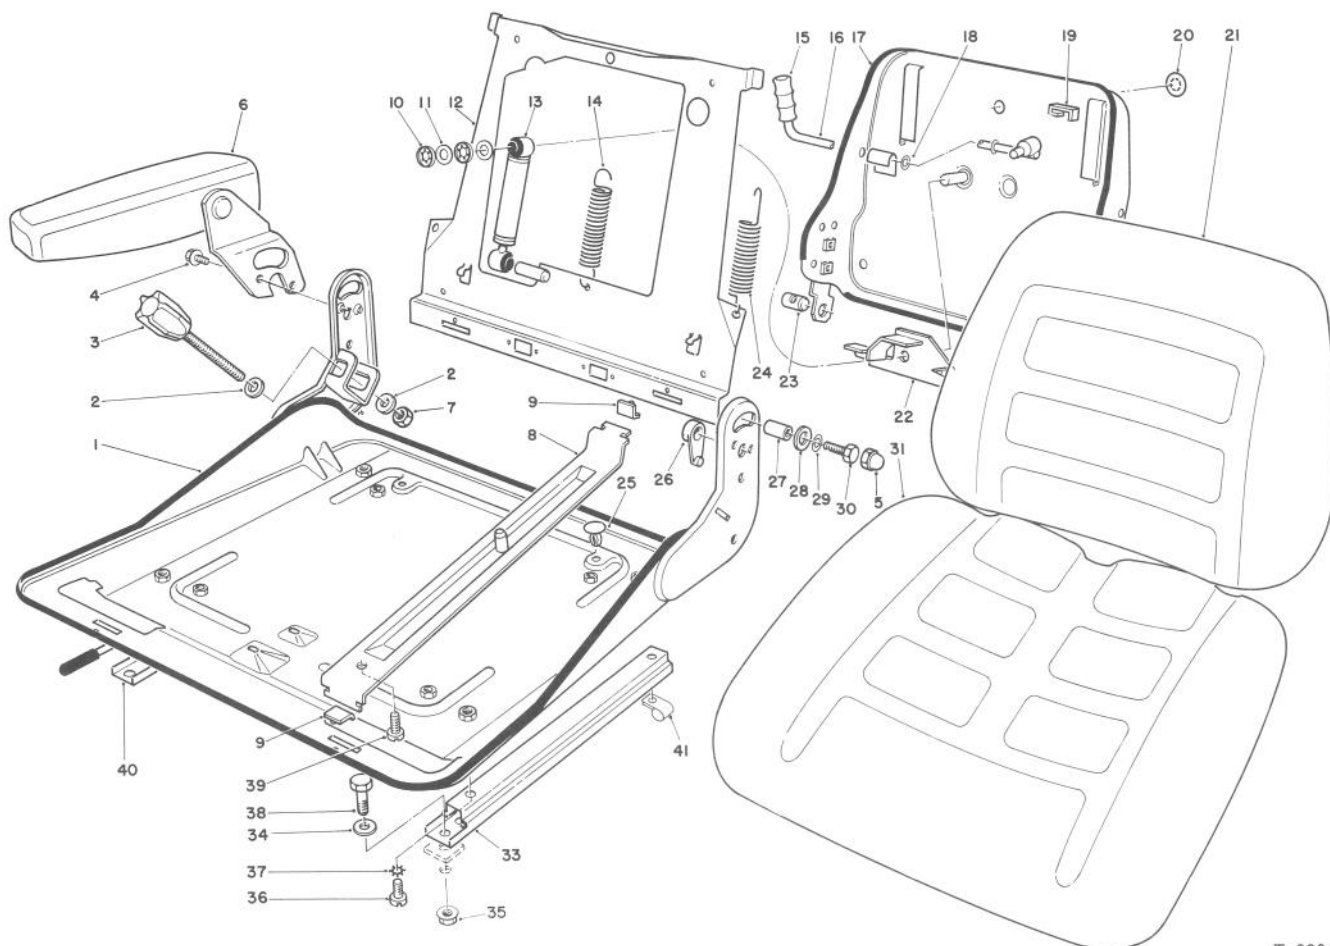 


T-0281

SEAT ASSEMBLY MODEL NO. 30797 (Optional)

Ref. No.	Part No.	Description	No. Used
1	56-3810	Platform - Seat	1
2	56-3880	Washer - Flat	2
3	56-3870	Knob - Adjustment	1
4	56-3850	Screw - Hex. Hd. Machine	2
5	56-3960	Cover - Screw	4
6	55-4331	Arm Rest Assembly R.H.	1
	55-4330	Arm Rest Assembly L.H.	1
7	56-3890	Nut - Hex.	1
8	56-3970	Carrier - Seat	2
9	56-3980	Clip - Rail	4
10	56-4080	Clamp - Axle	2
11	39-9500	Washer - Flat	2
12	56-4040	Plate - Back	1
13	62-7670	Shock Absorber - Seat	1
14	56-4050	Spring - Extension	1
15		Grip - Cover	1
16	56-4150	Lever - Handle (Incl. Ref. #15)	1
17	56-3820	Cover - Seat Sack	1
18	56-4160	Washer - Flat	2
19	56-4130	Bumper	2
20	56-4120	Cushion - Seat Back	1
21	56-3800	Cushion - Seat Back	1
22	56-4100	Bracket - Lever	1

Ref. No.	Part No.	Description	No. Used
23	56-4170	Pin - Clevis	1
24	56-4060	Spring - Extension	1
25	56-4190	Cap - Seat	2
26	56-3900	Spacer - Arm L.H.	1
	56-3910	Spacer - Arm R.H.	1
27	56-3920	Bushing - Sleeve	4
28	56-3930	Washer - Flat	4
29	56-3940	Washer - Lock	4
30	56-3950	Screw - Cap Hex. Hd.	4
31	76-2240	Cushion - Seat Bottom	1
32	55-8380	Seat Wire Assembly	1
33	40-3820	Bottom Rail Assembly L.H.	1
34	3256-23	Washer - Flat	4
35	32128-25	Nut - Flange Lock	4
36	56-4020	Screw - Machine	4
37	56-4030	Washer - Lock	4
38	322-3	Screw - Cap Hex. Hd.	4
39	56-3990	Screw - Machine	2
40	40-3790	Bottom Rail Assembly R.H.	1
41	2412-67	Clamp - R	1
*	76-2230	Seat Assembly (Incl. Ref. #1-3, 5, 7-31, 33, 36-37 & 39-40)	1

 *Not Illustrated

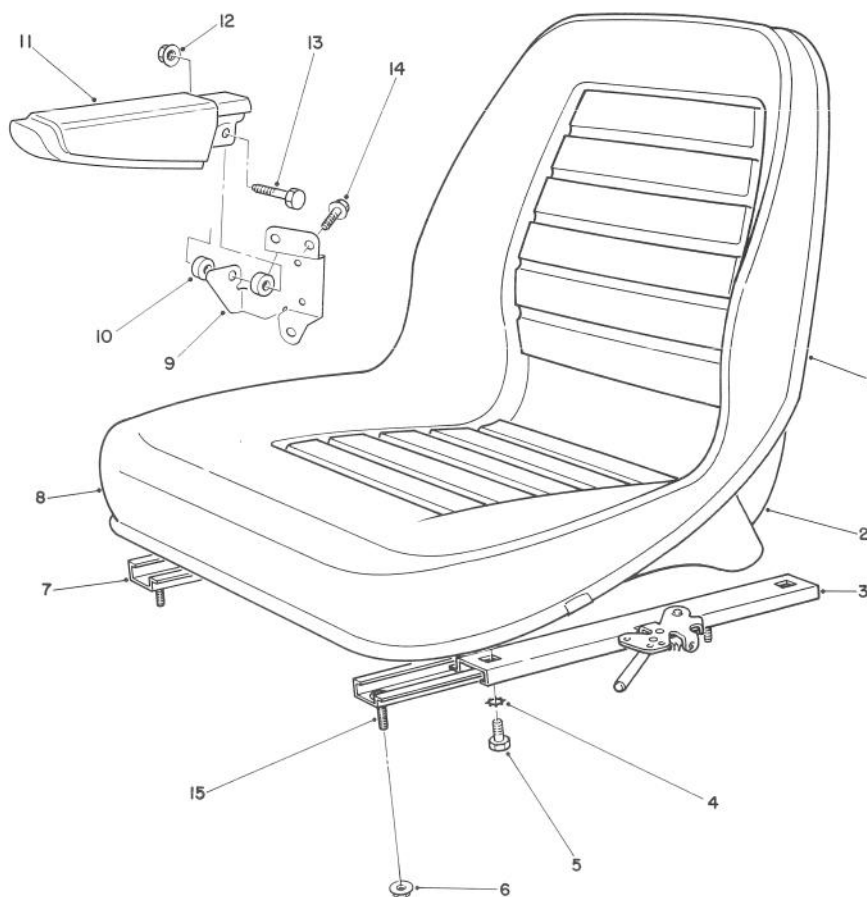

T-1070


SEAT ASSEMBLY MODEL NO. 30796 (Optional)

Ref. No.	Part No.	Description	No. Used
1		Trim	1
2		Shell	1
3	80-4260	Adjuster - L.H.	1
4	3255-8	Washer - Ext. Tooth Lock	4
5	322-2	Capscrew - Hex. Hd.	4
6	32128-25	Nut - Hex. Flange	4
7	80-4250	Adjuster - R.H.	1
8		Cushion	1
*	66-5400	Seat Assembly (Inc. Ref. #1, 2 & 8)	1

Ref. No.	Part No.	Description	No. Used
†9	69-0770	Bracket - Arm R.H.	1
	69-0760	Bracket - Arm L.H.	1
†10	69-1260	Spacer	4
†11	69-1180	Armrest	2
†12	32128-19	Nut - Flange	2
†13	323-9	Screw - Cap Hex. Hd.	2
†14	3234-23	Screw - Hex. Flange	6
15	3230-1	Bolt - Carriage	4

*Not Illustrated

 
†Optional item

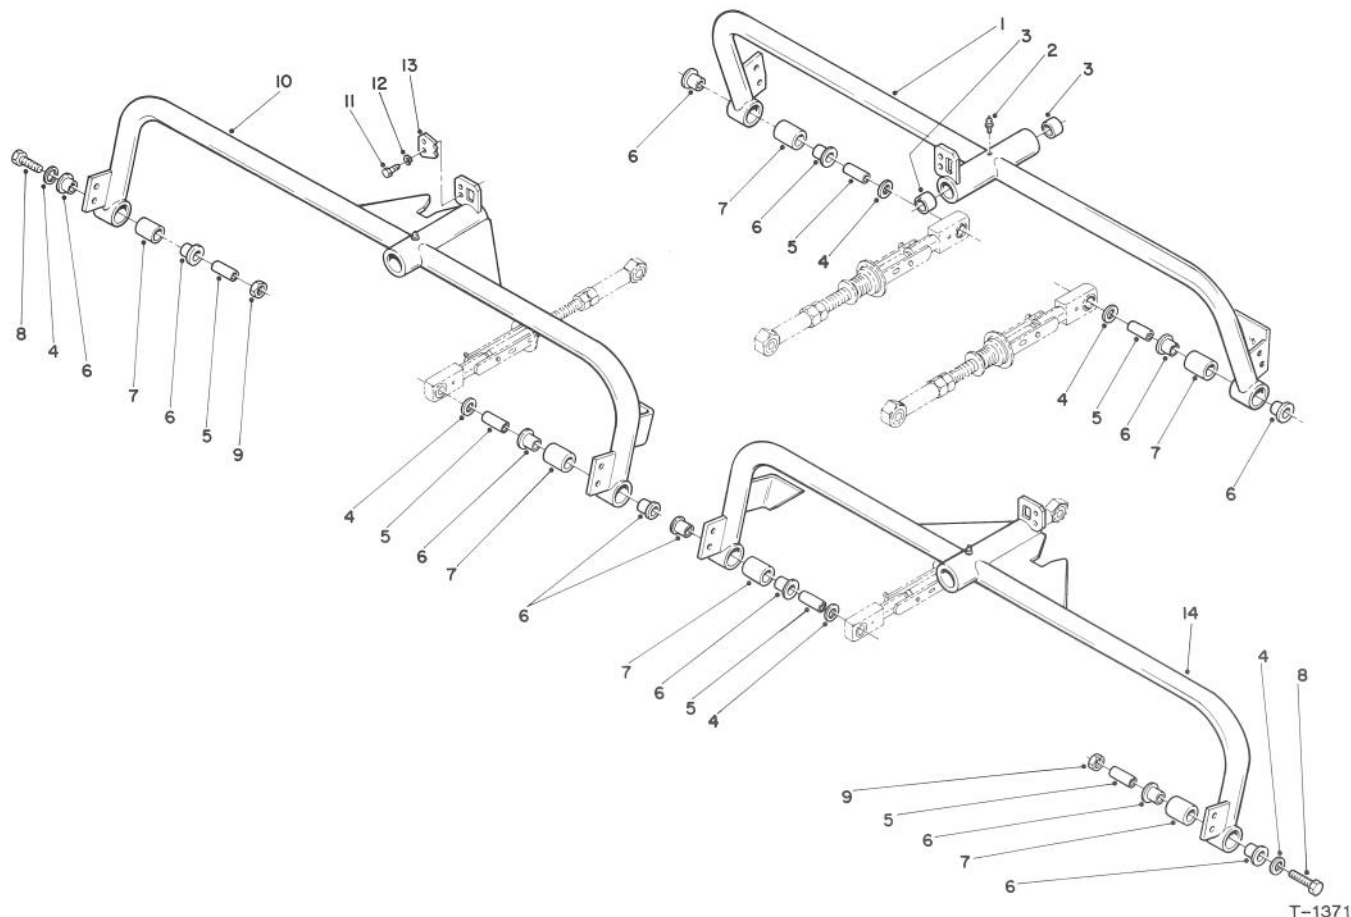

CUTTING UNIT CARRIER FRAME ASSEMBLY (Floating Suspension For 8 & 11 Blade Cutting Units)

Ref. No.	Part No.	Description	No. Used
1	61-0870	Rear Carrier Frame Assy. (Incl. Ref. #2, 3 & 7)	1
2	302-5	Fitting - Grease	3
3	3-0348	Bushing	6
4	3256-26	Washer - Flat	6
5	61-1370	Spacer	6
6	256-285	Bushing - Flange	12
7	61-0710	Bushing Assembly	6
8	325-10	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
9	3296-59	Nut - Lock	2
10	61-0860	Right Carrier Frame Assy. (Incl. Ref. #2, 3 & 7)	1
11	321-2	Screw - Cap Hex. Hd.	6
12	3253-3	Washer - Lock	6
13	61-3600	Tab - Lift	3
14	61-0880	Left Carrier Frame Assy. (Incl. Ref. #2, 3 & 7)	1

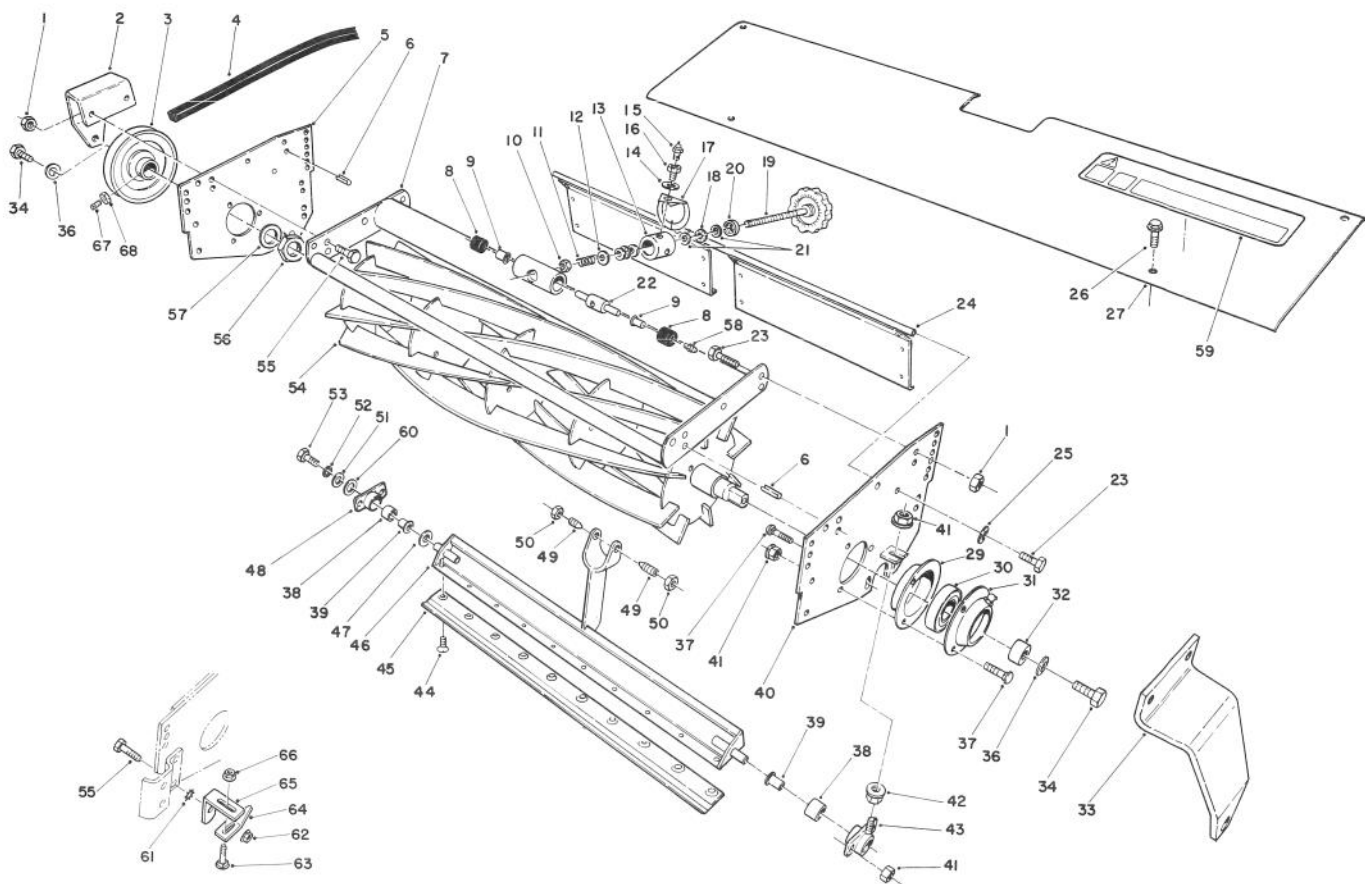 

8 & 11 BLADE CUTTING UNIT REEL ASSEMBLY


T-0285

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	8
2	61-0900	Bracket - Tensioner/Carrier (Use 2 Brackets on Rear Cutting Unit)	1
3	80-4270	Pulley - Reel	1
4	61-3380	V-Belt - Reel	1
5	61-1320	Sideplate	1
6	32121-36	Pin - Roll	4
7	61-0930	Frame - Reel	1
8	62-5510	Rubber Bushing Assembly	2
9	52-2890	Bushing - Flanged (Nylon)	2
10	3296-62	Nut - Lock	1
11	57-5270	Spring - Compression	1
12	29-8870	Washer	1
13	52-2980	Pivot - Single Point Adjust	1
14	3256-25	Washer - Flat	1
15	302-5	Fitting - Grease	1
16	52-2990	Capscrew - Spring Retainer	1
17	52-3000	Arm - Spring	1
18	257-6	Bearing - Thrust	2
19	61-1070	Handle - Assembly	1
20	253-84	Seal	1
21	257-5	Washer - Thrust	4
22	57-5260	Pin - S.P.A.	1
23	323-6	Screw - Cap Hex. Hd.	6
24	61-1130	Rear Grass Guard	1

Ref. No.	Part No.	Description	No. Used
25	3253-5	Washer - Lock	2
26	32144-10	Screw - Hex. Washer Hd.	4
27	61-0560	Shield - Top	1
29	76-2500	Flange - Bearing	2
30	251-331	Bearing	2
31	76-2490	Flange - Bearing (Lube)	2
*	302-11	Fitting - Grease	2
32	61-0500	Spacer - Reel	1
33	61-0890	Bracket - Carrier	1
34	3211-4	Screw - Cap Hex. Hd.	2
36	67-9760	Washer	2
37	3230-20	Bolt - Carriage	10
38	56-9510	Bushing Assy.	2
39	56-9520	Bushing - Flanged	2
40	61-0940	Sideplate - Adjust	1
41	3296-29	Nut - Lock	11
42	3217-6	Nut	1
43	61-0970	Housing - Bedbar Adj.	1
44	57-4910	Screw - Special	10
45	62-5180	Bedknife - 7 In. Reel	1
46	61-1210	Bedbar	1
47	61-1950	Washer - Bedbar	1
48	61-1010	Bedbar Housing	1
49	57-5190	Screw - Adjustment	2
50	3218-18	Nut - Jam	2
51	3256-56	Washer - Flat	1

NOTE: Front Left Cutting Unit Shown

 *Not Illustrated

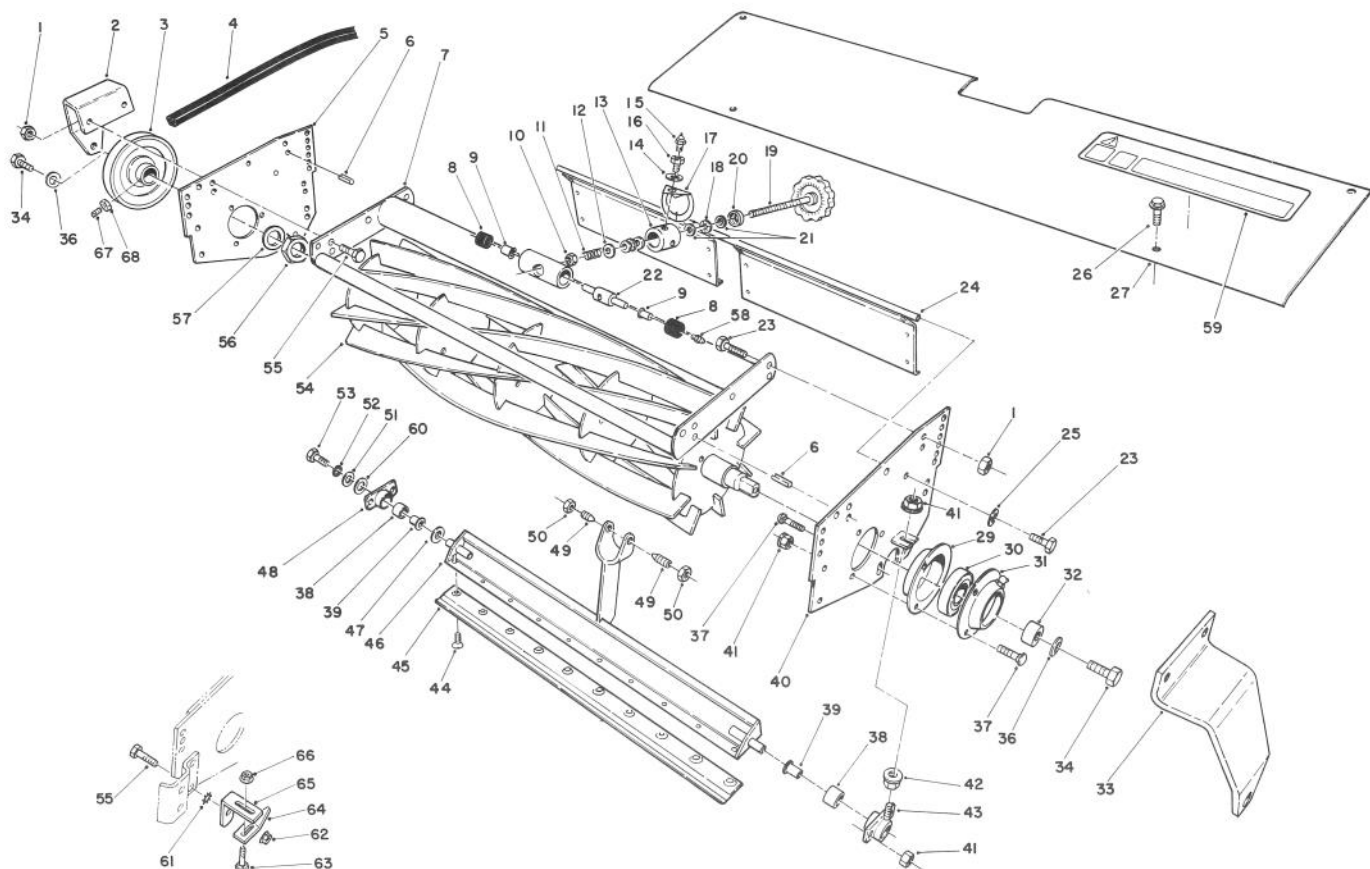


T-0285

8 & 11 BLADE CUTTING UNIT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
52	3253-4	Washer - Lock	1	‡59	62-5070	Decal - Warning	1
53	322-3	Screw - Cap Hex. Hd.	1	60	62-7120	Spacer	1
54	12-7099	Reel Assembly - 8 Blade (Left C.U.)	1	61	3255-2	Washer - Lock E.T.L.W.	1
*	12-7089	Reel Assembly - 8 Blade (Right & Center C.U.)	1	62	32128-21	Nut - Flange Lock	1
*	13-1709	Reel Assembly - 11 Blade (Left C.U.)	1	63	3229-11	Bolt - Carriage	1
*	13-1699	Reel Assembly - 11 Blade (Right & Center C.U.)	1	64	76-2430	Bracket - Debris Cleaner	1
55	323-7	Screw - Cap Hex. Hd.	5	65	76-2440	Support - Debris Cleaner	1
56	67-5840	Nut - Jam	1	66	32128-10	Nut - Flange Lock	1
57	27-1850	Washer	1	67	3243-6	Screw - Set Sq. Hd.	1
58	302-18	Fitting - Grease	1	68	3218-3	Nut - Jam	1
				*	13-3649	Overhaul Kit (Incl. Ref. #8, 9, 18, 20, 30, 38, 39 & 44)	1

NOTE: Front Left Cutting Unit Shown

 *Not Illustrated ‡For different language versions of this part, see International Decal Cross Reference.

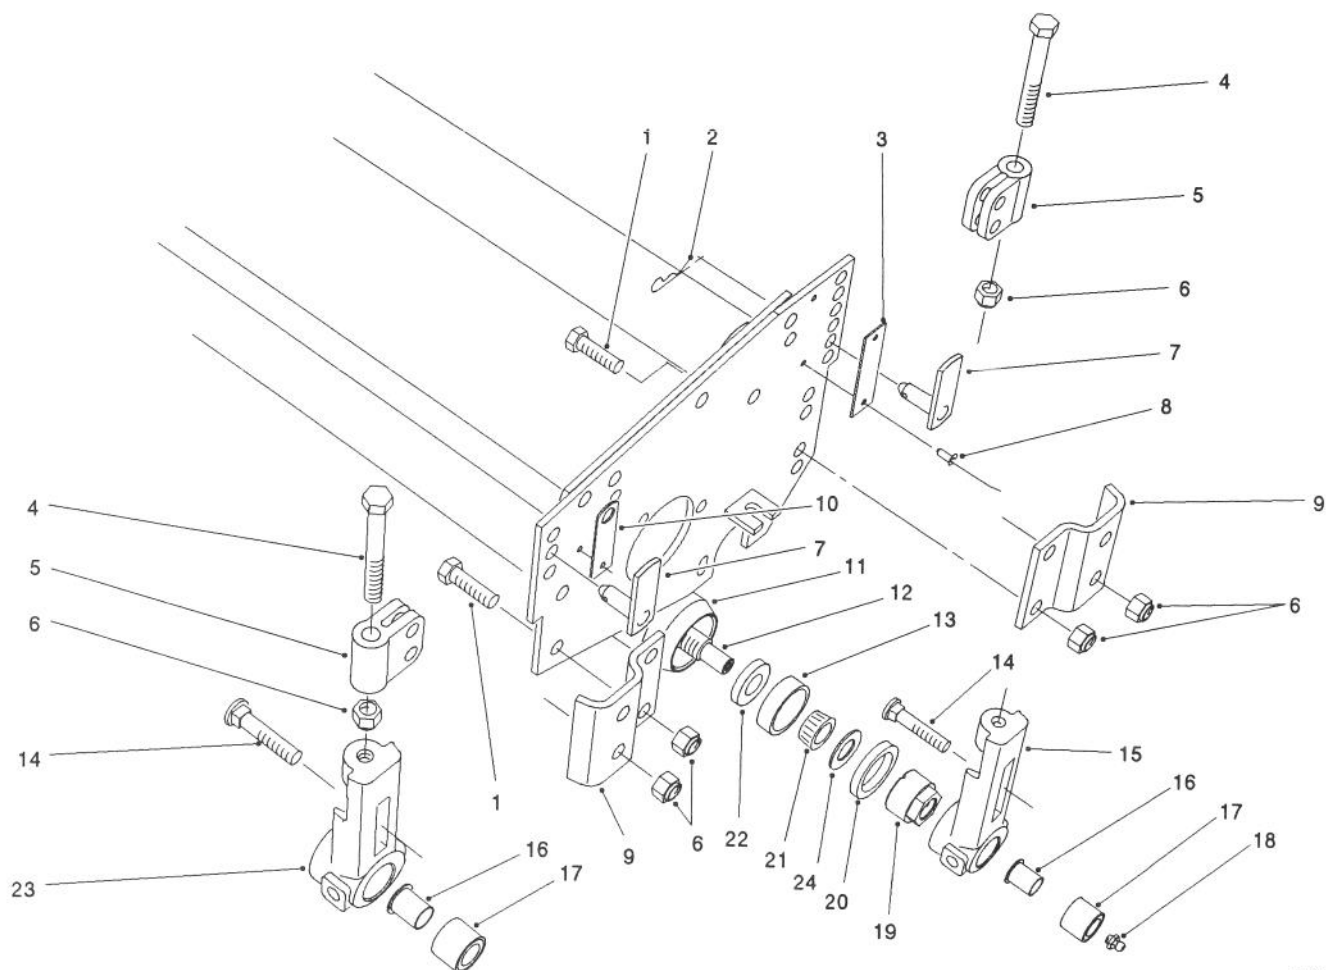

T-0286


8 & 11 BLADE CUTTING UNIT ROLLER ASSEMBLY (Floating Suspension)

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw - Cap Hex Hd.	8
2	3290-467	Cotter - Hairpin	4
3	61-3800	Plate - HOC Rear	2
4	61-0790	Screw - Cap Hex Hd.	4
5	61-0420	Support - HOC	4
6	3296-39	Nut - Lock	16
7	71-3690	Pin - HOC	4
8	3290-55	Rivet - Pop	6
9	61-0910	Bracket - Angle	4
10	61-3790	Plate - HOC Front	2
11	61-0380	Cap - Roller	2
12	61-0400	Shaft - Roller	1
13	254-79	Cup - Bearing	2
14	3231-2	Bolt - Carriage	4

Ref. No.	Part No.	Description	No. Used
15	61-0430	Bracket - Rear	2
16	56-9520	Bushing - Flanged	2
17	56-9510	Bushing	4
18	302-5	Fitting - Grease	2
19	71-3590	Nut - Adjustment	2
20	253-153	Seal - Outer	2
21	254-78	Cone - Bearing	2
22	253-152	Seal - Inner	2
23	61-0440	Bracket - Front	2
24	62-7660	Washer - Shim (not used on all full roller assemblies)	2
*	61-0410	Full Roller Assembly (Incl. Ref. #11-13, 18-22 & 24)	1

NOTE: Front Left Cutting Unit Shown

 *Not Illustrated

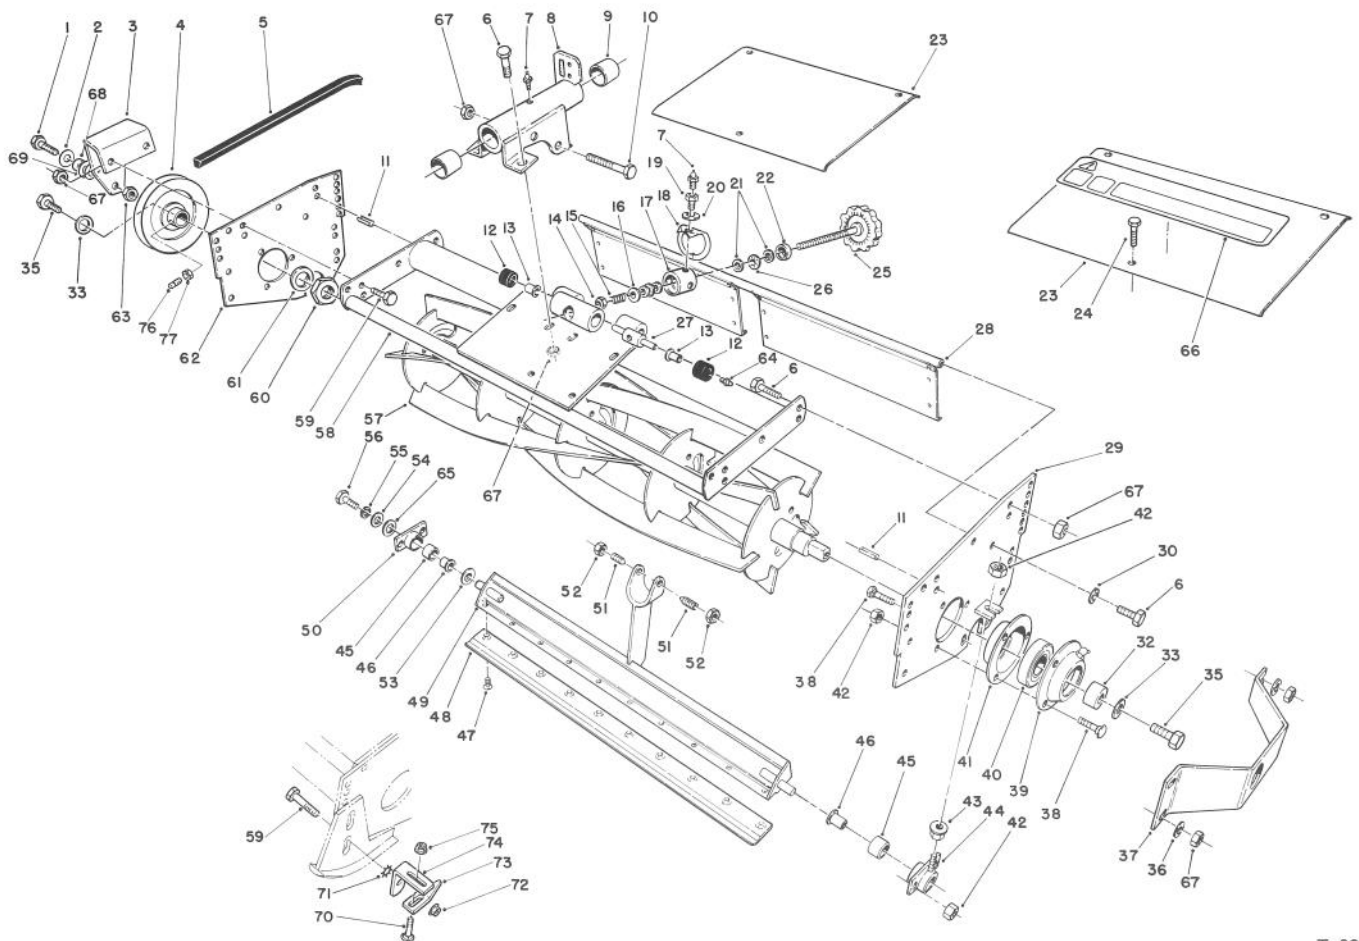


T-0283

5 BLADE CUTTING UNIT REEL ASSEMBLY (Fixed Suspension)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	323-9	Screw - Cap Hex. Hd. (Use 2 capscrews on rear cutting unit)	1	17	52-2980	Pivot - Single Point Adjust	1
2	3256-24	Washer - Flat (Use 2 washers on rear cutting unit)	1	18	52-3000	Arm - Spring	1
3	61-0900	Bracket - Tensioner (Use 2 brackets on rear cutting unit)	1	19	52-2990	Capscrew - Spring Retainer	1
4	80-4280	Pulley - Reel, 5 Blade	1	20	3256-25	Washer - Flat	1
5	61-3380	V-Belt	1	21	257-5	Washer - Thrust	4
6	323-6	Screw - Cap Hex. Hd.	8	22	253-84	Seal	1
7	302-5	Fitting - Grease	2	23	61-0550	Shield - Top	2
8	61-1050	Front Support - L.H. (Incl. Ref. #7 & 9)	1	24	32144-10	Screw - Cap Hex. Hd.	6
*	61-3660	Front Support - R.H. (Incl. Ref. #7 & 9)	1	25	61-1070	Handle - Assembly	1
*	61-0670	Rear Support (Incl. Ref. #7 & 9)	1	26	257-6	Bearing - Thrust	2
9	3-0348	Bushing	2	27	57-5260	Pin - S.P.A.	1
10	323-12	Screw - Cap Hex. Hd.	1	28	61-1130	Rear Grass Guard	1
11	32121-36	Pin-Roll	4	29	61-0940	Sideplate - Adjust	1
12	62-5510	Rubber Bushing Assembly	2	30	3253-5	Washer - Lock	2
13	52-2890	Bushing - Flanged Nylon	2	32	61-0500	Spacer - Bearing	1
14	3296-62	Nut - Lock	1	33	67-9760	Washer - Flat	2
15	57-5270	Spring - Compression	1	35	3211-4	Screw - Cap Hex. Hd.	2
16	29-8870	Washer - Flat	1	36	3256-3	Washer - Flat	5
				37	61-0610	Guard - Side (Used on front units only)	1
				38	3230-20	Bolt - Carriage	10
				39	76-2490	Flange - Bearing (Lube)	2
				*	302-11	Fitting - Grease	2
				40	251-331	Bearing	2
				41	76-2500	Flange - Bearing	2
				42	3296-29	Nut - Lock	11
				43	3217-6	Nut	1

NOTE: Front Left Cutting Unit Shown

 *Not Illustrated

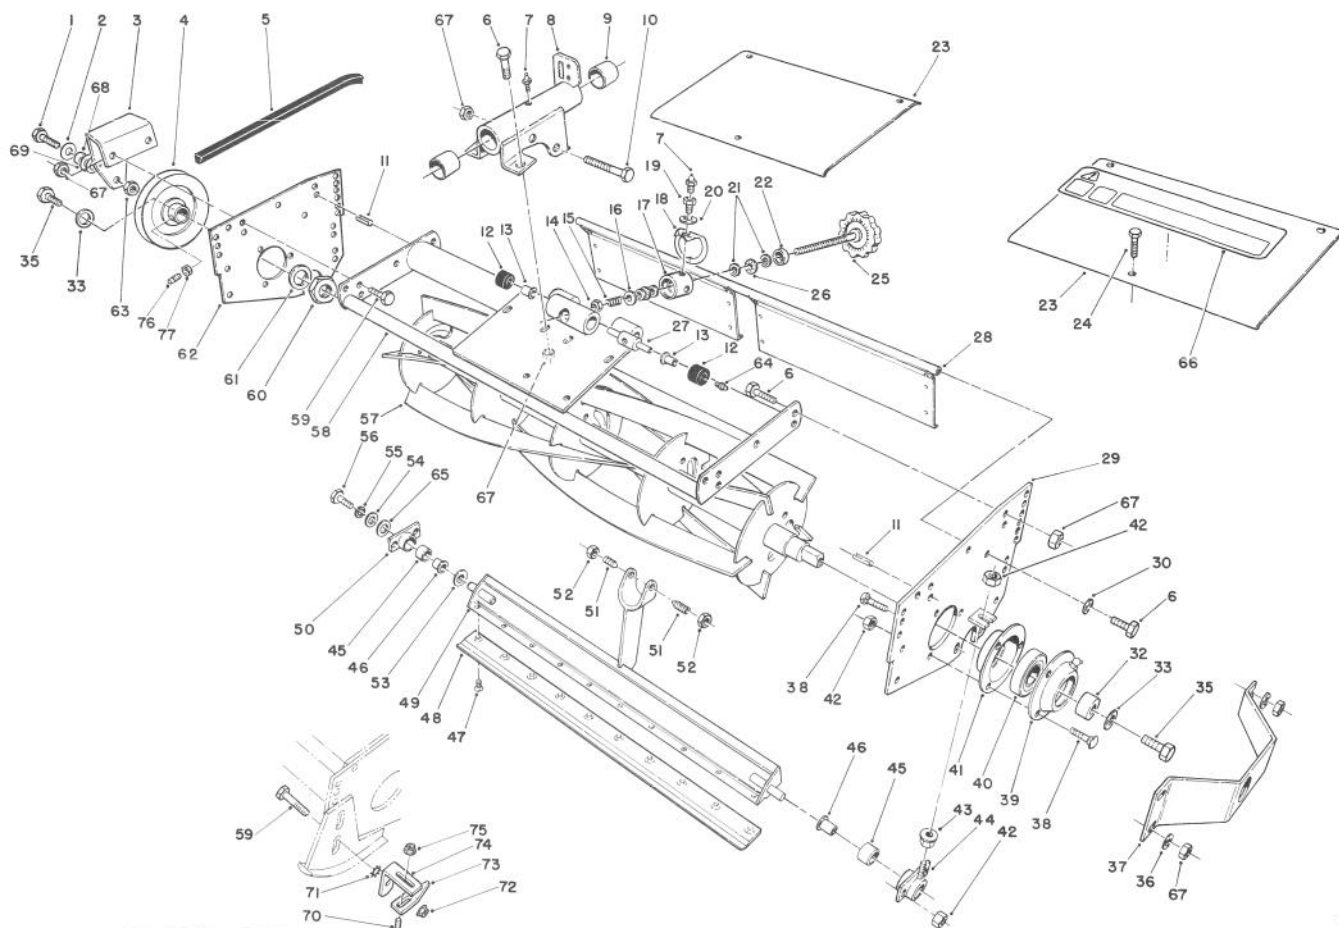

T-0283


5 BLADE CUTTING UNIT REEL ASSEMBLY(Continued) (Fixed Suspension)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
44	61-0970	Housing - Bedbar Adj.	1	65	62-7120	Spacer	1
45	56-9510	Bushing Assembly	2	‡66	62-5070	Decal - Warning	1
46	56-9520	Bushing - Flanged	2	67	3296-39	Nut - Lock (Use 14 nuts on rear unit)	12
47	57-4910	Screw - Special	10	68	76-2290	Spacer (Use 2 spacers on rear cutting unit)	1
48	62-5180	Bedknife - 7 In. Reel	1	69	3256-45	Washer Flat (Use 4 washers on rear cutting unit)	2
49	61-1210	Bedbar	1	70	3229-11	Bolt - Carriage (Rear cutting unit)	1
50	61-1010	Bedbar Housing	1	71	3255-2	Washer - Lock E.T.L.W. (Rear cutting unit)	1
51	57-5190	Screw - Adjustment	2	72	32128-21	Nut - Flange Lock (Rear cutting unit)	1
52	3218-18	Nut - Jam	2	73	76-2430	Bracket - Debris Cleaner (Rear cutting unit)	1
53	61-1950	Washer - Bedbar	1	74	76-2440	Support - Debris Cleaner (Rear cutting unit)	1
54	3256-56	Washer - Flat	1	75	32128-10	Nut - Flange Lock (Rear cutting unit)	1
55	3253-4	Washer - Lock	1	76	3243-6	Screw - Set Sq. Hd.	1
56	322-3	Screw - Cap Hex. Hd.	1	77	3218-3	Nut - Jam	1
57	12-7079	Reel Assy. - 5 Blade (Left C.U.)	1	*	13-3649	Overhaul Kit (Incl. Ref. #12, 13, 22, 26 40 & 45-47)	1
*	12-7059	Reel Assy. - 5 Blade (Right & Rear C.U.)	1				
58	61-0660	Reel Frame	1				
59	323-7	Screw - Cap Hex. Hd. (Use 5 screws on rear cutting unit)	2				
60	67-5840	Nut - Jam	1				
61	27-1850	Washer	1				
62	61-1320	Sideplate - Reel	1				
63	3296-59	Nut - Lock (Use 2 nuts on rear C.U.)	1				
64	302-18	Fitting - Grease	1				

NOTE: Front Left Cutting Unit Shown

*Not Illustrated

 ‡For different language versions of this part, see International Decal Cross Reference.

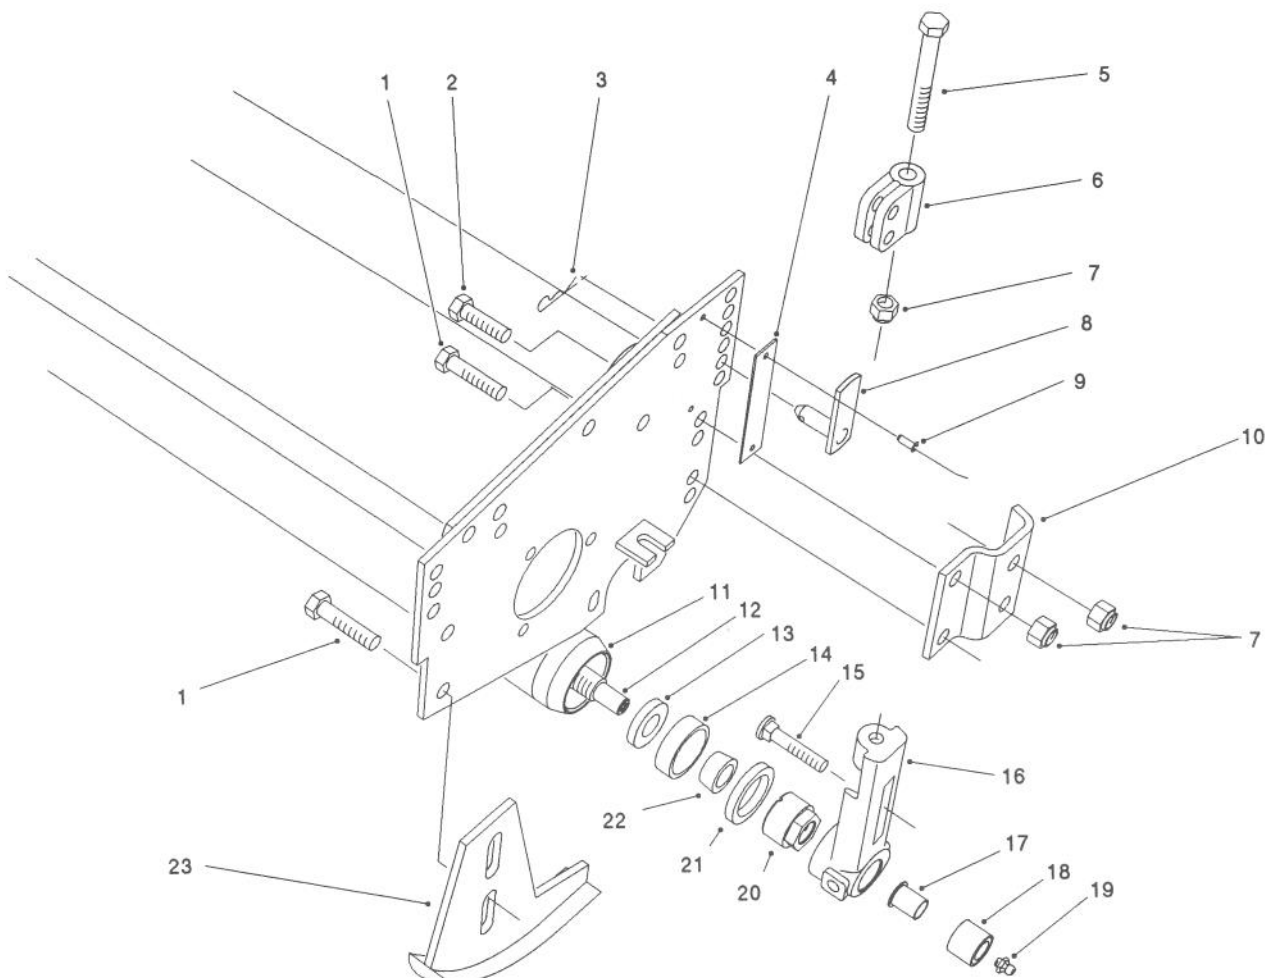

T-0284


5 BLADE CUTTING UNIT ROLLER ASSEMBLY (Fixed Suspension)

Ref. No.	Part No.	Description	No. Used
1	323-7	Screw - Cap Hex. Hd.	3
2	323-6	Screw - Cap Hex. Hd.	5
3	3290-467	Cotter - Hairpin	2
4	61-3810	Plate - HOC	2
5	61-0790	Screw - Cap Hex. Hd.	2
6	61-0420	Support - HOC	2
7	3296-39	Nut - Lock	9
8	71-3690	Pin - HOC	2
9	3290-55	Rivet - Pop	4
10	61-0910	Bracket - Angle	2
11	61-0380	Cap - Roller	2
12	61-0400	Shaft - Roller	1
13	253-152	Seal - Inner	2

Ref. No.	Part No.	Description	No. Used
14	254-79	Cup - Bearing	2
15	3231-2	Bolt - Carriage	2
16	61-0430	Bracket - Rear	2
17	56-9520	Bushing - Flanged	1
18	56-9510	Bushing Assembly	2
19	302-5	Fitting - Grease	2
20	71-3590	Nut - Adjustment	2
21	253-153	Seal - Outer	2
22	254-78	Cone - Bearing	2
23	03446	Skid Kit (Incl. Ref. #1)	1
*	61-0410	Roller Assembly (Incl. Ref. #11-14,19-22)	1

NOTE: Front Left Cutting Unit Shown

 *Not Illustrated

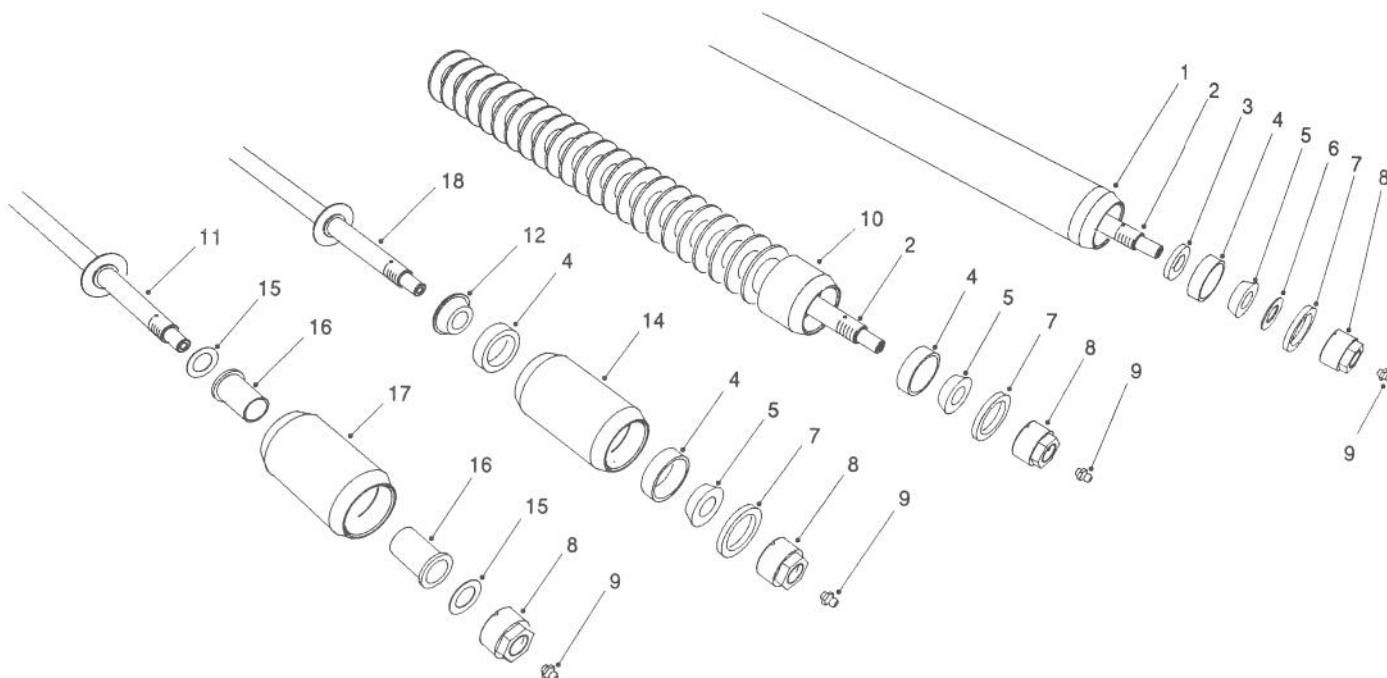


T-0287

CUTTING UNIT ROLLER OPTIONS

Ref. No.	Part No.	Description	No. Used
1	61-0380	Cap - Full Roller	2
2	61-0400	Shaft - Full/Wiehle Roller	2
3	253-152	Seal - Inner	2
4	254-79	Cup - Bearing (Outer)	8
5	254-78	Cone - Bearing (Outer)	6
6	62-7660	Washer - Shim (not used on all full roller assemblies)	2
7	253-153	Seal - Outer	6
8	71-3590	Nut - Adjustment	8
9	302-5	Fitting - Grease	8
10	82-2400	Wiehle Roller Weld Assy.	1
11	62-4990	Shaft - Anti-Scalp Roller	1
12	252-112	Cone - Bearing (Inner)	2
14	76-2400	Roller - Sectional	2
15	3-6498	Washer - Thrust	4
16	256-117	Bushing - Flanged	4
17	63-5060	Roller - Anti-Scalp	2

Ref. No.	Part No.	Description	No. Used
18	76-2380	Shaft - Sectional Roller	1
*	61-0410	Full Roller Assembly (Incl. Ref. #1 -9)	1
*	62-7410	Wiehle Roller Assembly (Incl. Ref. #2, 4-5 & 7-10)	1
*	62-4970	Sectional Roller Assembly (Incl. Ref. #4-5, 7-9, 12, 14 & 18)	1
*	63-5090	Anti-Scalp Roller Assembly (Incl. Ref. #8-9, 11 & 15-17)	1
*	03440	Full Roller Kit (Incl. 3 No. 61-0410)	1
*	03450	Wiehle Roller Kit (Incl. 3 No. 62-7410)	1
*	03445	Sectional Roller Kit (Incl. 3 No. 62-4970)	1
*	03447	Anti-Scalp Roller Kit (Incl. 3 No. 63-5090)	1

 *Not Illustrated

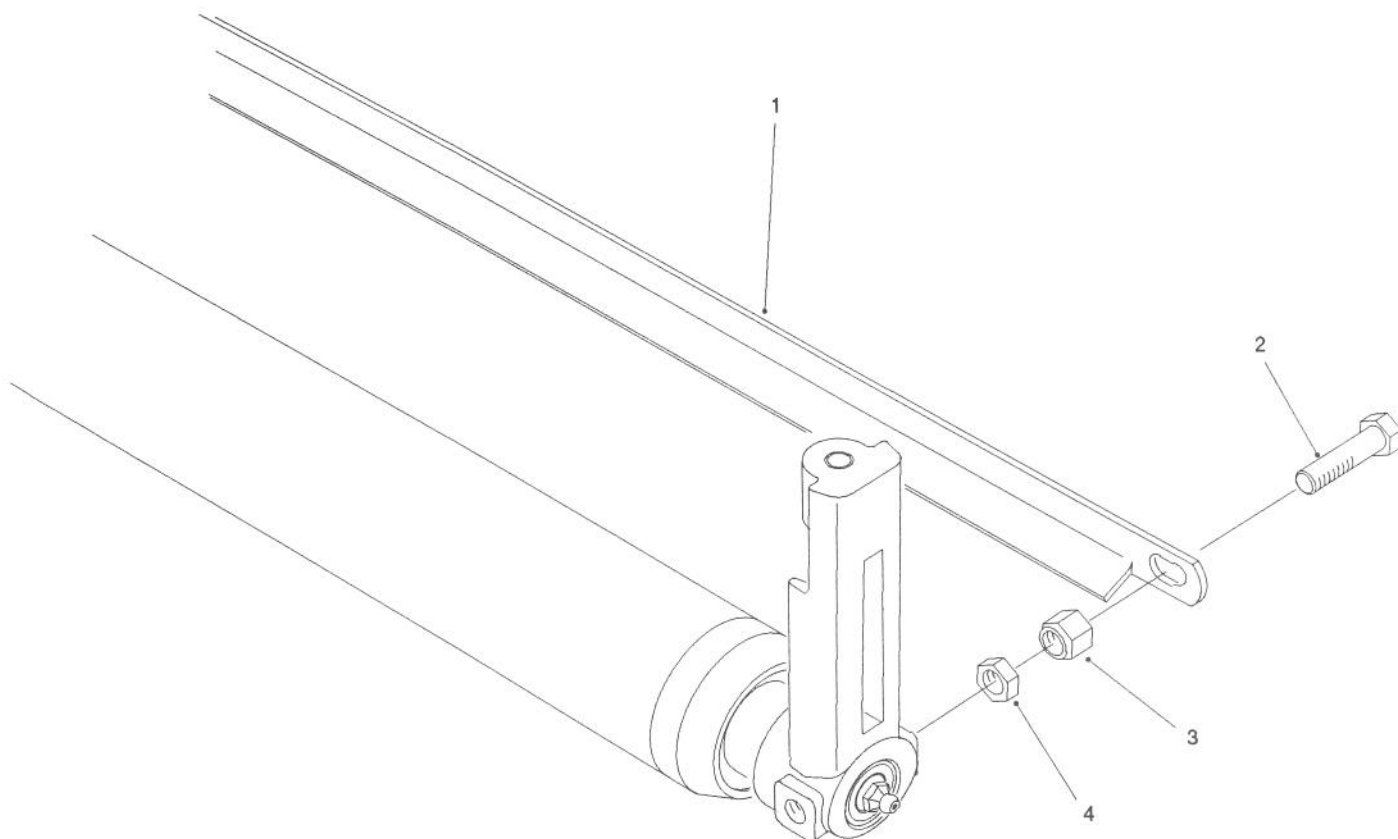


T-0288

CUTTING UNIT ROLLER SCRAPER KIT NO. 60-9560 (Optional)

Ref. No.	Part No.	Description	No. Used
1	61-0590	Scraper - Roller	3
2	323-7	Screw - Cap Hex. Hd.	6

Ref. No.	Part No.	Description	No. Used
3	3296-59	Nut - Lock	6
4	3218-3	Nut - Jam	6

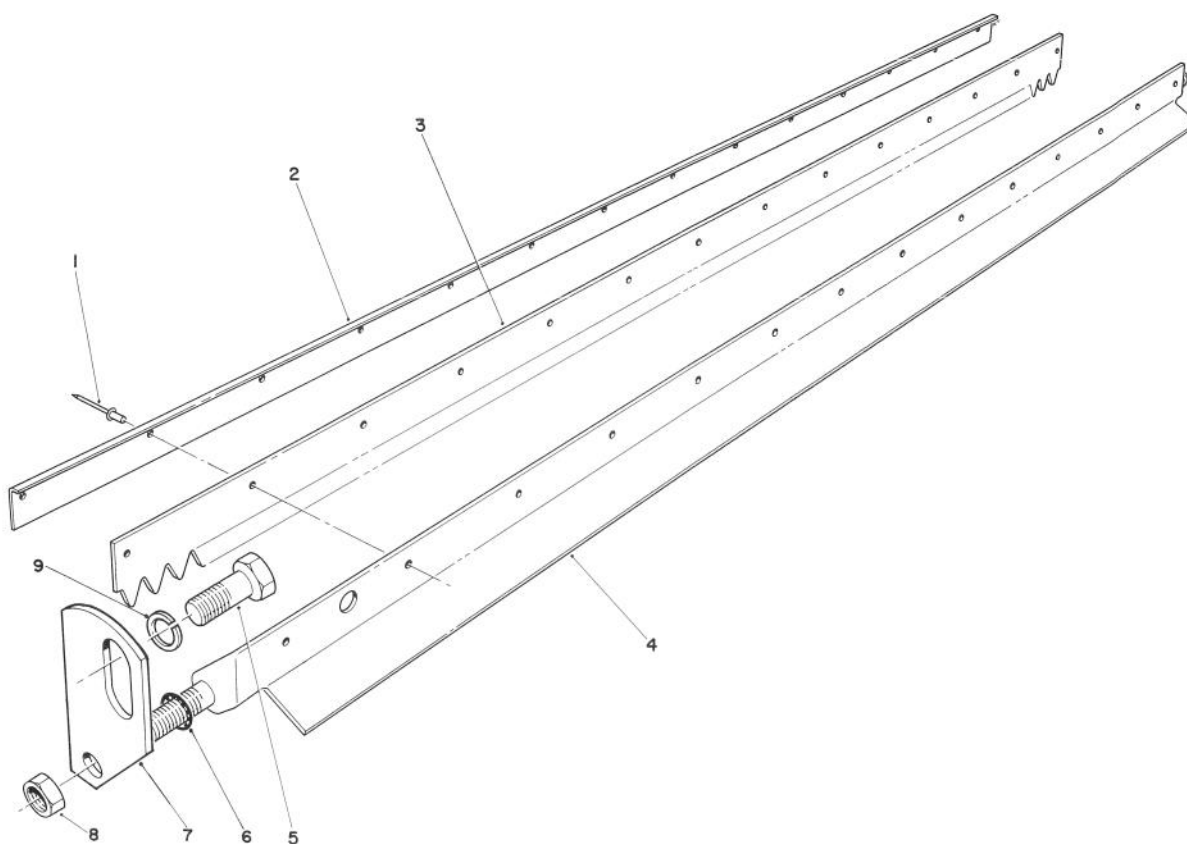 


COMB KIT PART NO. 67-9400 (Optional)

T-1036

Ref. No.	Part No.	Description	No. Used
1	3296-13	Rivet - Pop	14
2	67-9450	Support - Comb	1
3	67-9470	Comb	1
4	67-9430	Plate - Comb	1
5	323-7	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
6	3254-18	Washer - Lock I.T.L.W.	6
7	80-4690	Support - Scraper	2
8	3296-39	Nut - Lock	2
9	3256-35	Washer	6

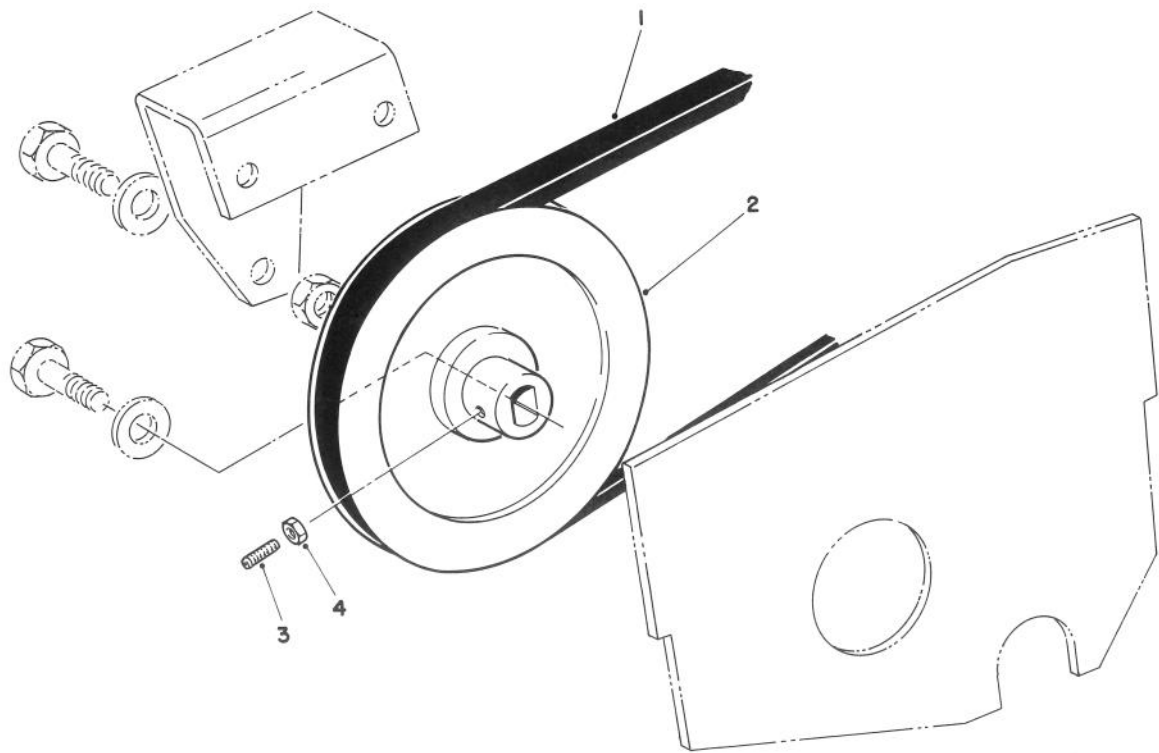 


T-0930

LARGE PULLEY KIT NO. 67-9540 (Optional)

Ref. No.	Part No.	Description	No. Used
1	80-4290	Pulley - Reel	3
2	72-4770	Belt - V	3

Ref. No.	Part No.	Description	No. Used
3	3247-6	Screw - Set	3
4	3218-3	Nut - Jam	3

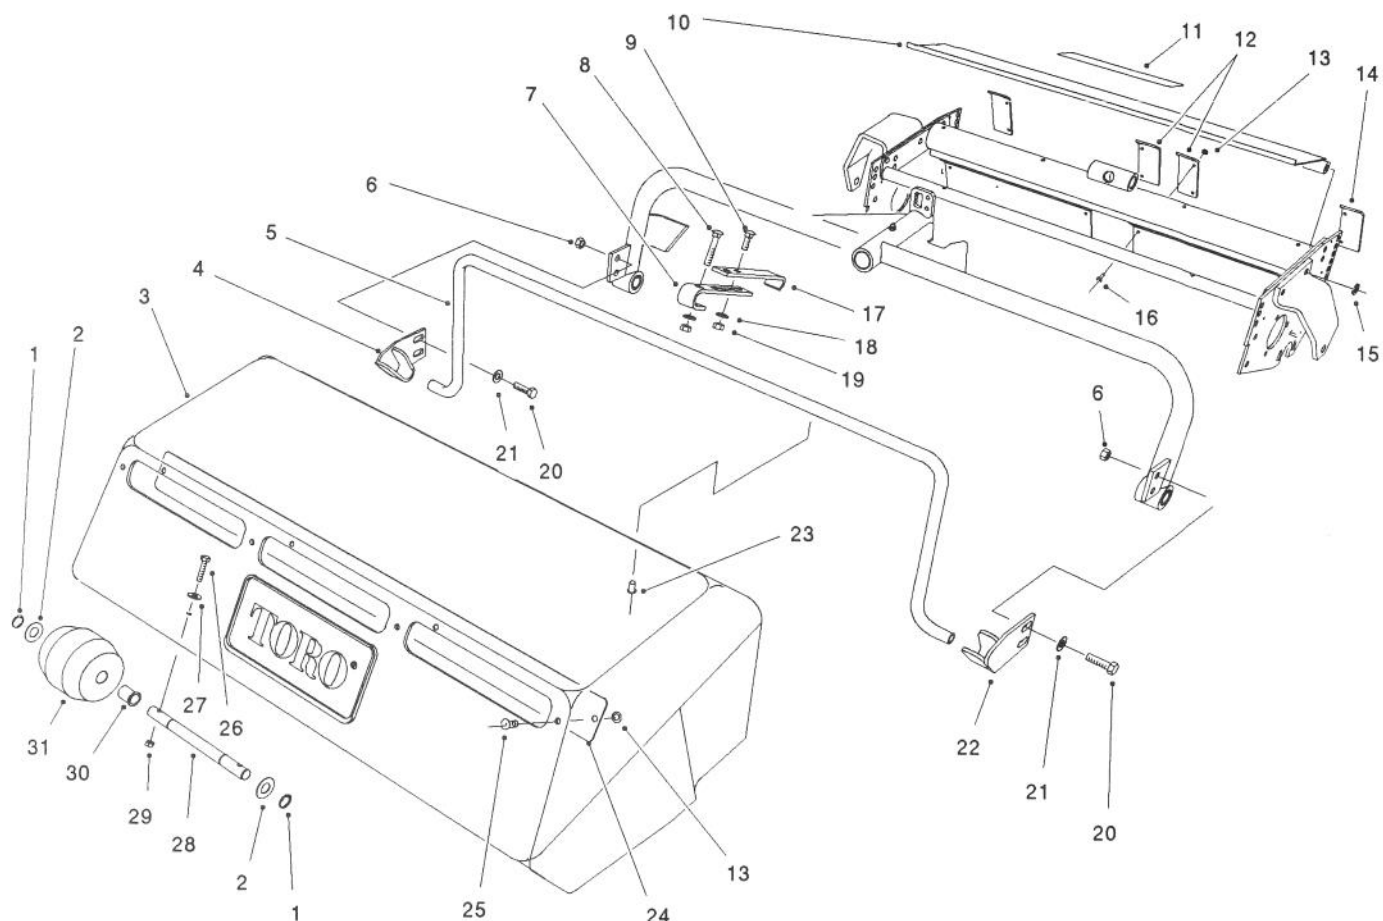 

T-0289


GRASS COLLECTION SYSTEM MODEL NO. 03433 (Optional) (Front Cutting Unit Basket Assembly)

Ref. No.	Part No.	Description	No. Used
1	32120-64	Ring - Snap	8
2	3-9274	Spacer - Wheel	8
3	61-1330	Front Grass Basket Assy. (Incl. Ref. #1, 2, 5, 7-9, 13, 17-19 & 23-31)	2
4	61-1280	Bracket - Basket R.H.	2
5	61-1190	Support - Basket (Front)	2
6	3296-39	Nut - Lock	8
7	61-3160	Hanger - Basket (Front)	2
8	3230-5	Bolt - Carriage	2
9	3230-2	Bolt - Carriage	4
10	61-0750	Deflector - Grass	2
11	62-5070	Decal - Warning	2
12	61-3290	Cover - Middle	4
13	3256-49	Washer - Flat	32
14	61-3280	Cover - End	4
15	3253-21	Washer - Lock	4

Ref. No.	Part No.	Description	No. Used
16	3269-23	Rivet - Pop	24
17	62-7230	Hanger - Adjustable (Front)	2
18	3256-23	Washer - Flat	6
19	3296-29	Nut - Lock	6
20	323-7	Screw - Cap Hex. Hd.	8
21	3256-24	Washer - Flat	8
22	61-1270	Bracket - Basket L.H.	2
23	3269-18	Rivet - Pop	20
24	61-3170	Baffle - Grass	2
25	3269-22	Rivet - Pop	8
26	321-8	Screw - Cap Hex. Hd.	8
27	3256-2	Washer - Flat	8
28	5-2891	Shaft - Wheel	4
29	32153-4	Nut - Lock	8
30	256-90	Bushing - Flange	8
31	4-7439	Wheel Assembly (Incl. Ref. #30)	4

NOTE: Left Front Cutting Unit Shown

 NOTE: Model No. 03433 Includes 2 Front and 1 Rear Basket Assembly.

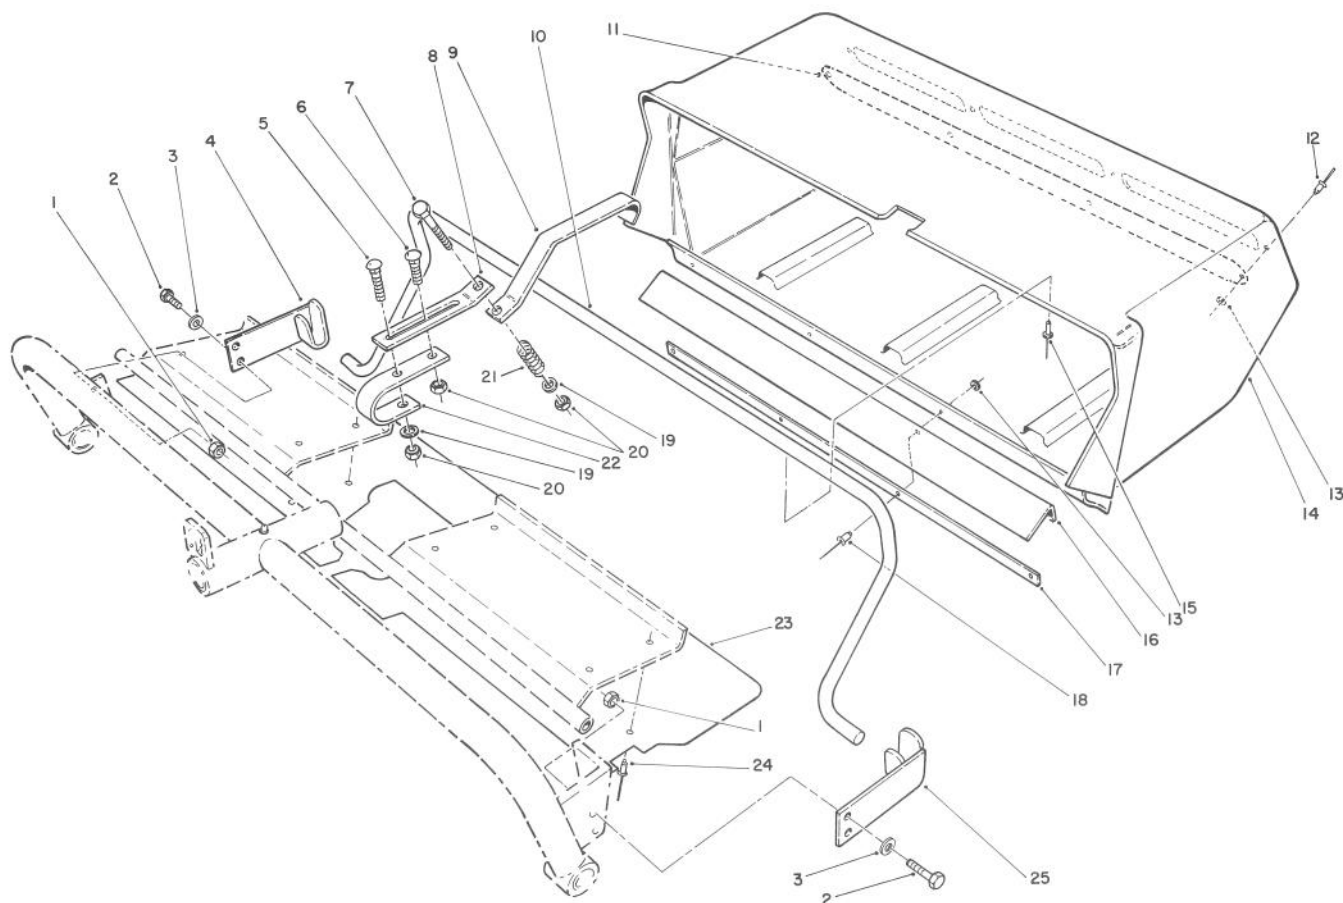


T-0290

GRASS COLLECTION SYSTEM MODEL NO. 03433 (Optional) (Rear Cutting Unit Basket Assembly)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	3	14	61-1340	Rear Grass Basket Assy. (Incl. Ref. #10-13 & 15-18)	1
2	323-7	Screw - Cap Hex. Hd.	4	15	3269-18	Rivet - Pop	10
3	3256-24	Washer - Flat	4	16	62-5130	Flap - Rubber	1
4	61-1260	Bracket - Basket R.H.	1	17	63-8740	Strap - Basket	1
5	3230-8	Bolt - Carriage	1	18	3290-282	Rivet - Pop	10
6	3230-2	Bolt - Carriage	1	19	3256-23	Washer - Flat	2
7	322-7	Screw - Cap Hex. Hd.	1	20	3296-29	Nut - Lock	3
8	67-5910	Plate - Rear	1	21	63-4220	Spring - Compression	1
9	67-5890	Hanger - Basket Rear	1	22	62-7480	Bracket - Hanger	1
10	67-5920	Support - Basket Rear	1	23	67-5800	Flap - Basket Rear	1
11	61-3170	Baffle - Grass	1	24	3269-23	Rivet - Pop	8
12	3269-22	Rivet - Pop	4	25	61-1250	Bracket - Basket L.H.	1
13	3256-49	Washer	8				

 NOTE: Model No. 03433 Includes 2 Front and 1 Rear Basket Assembly.

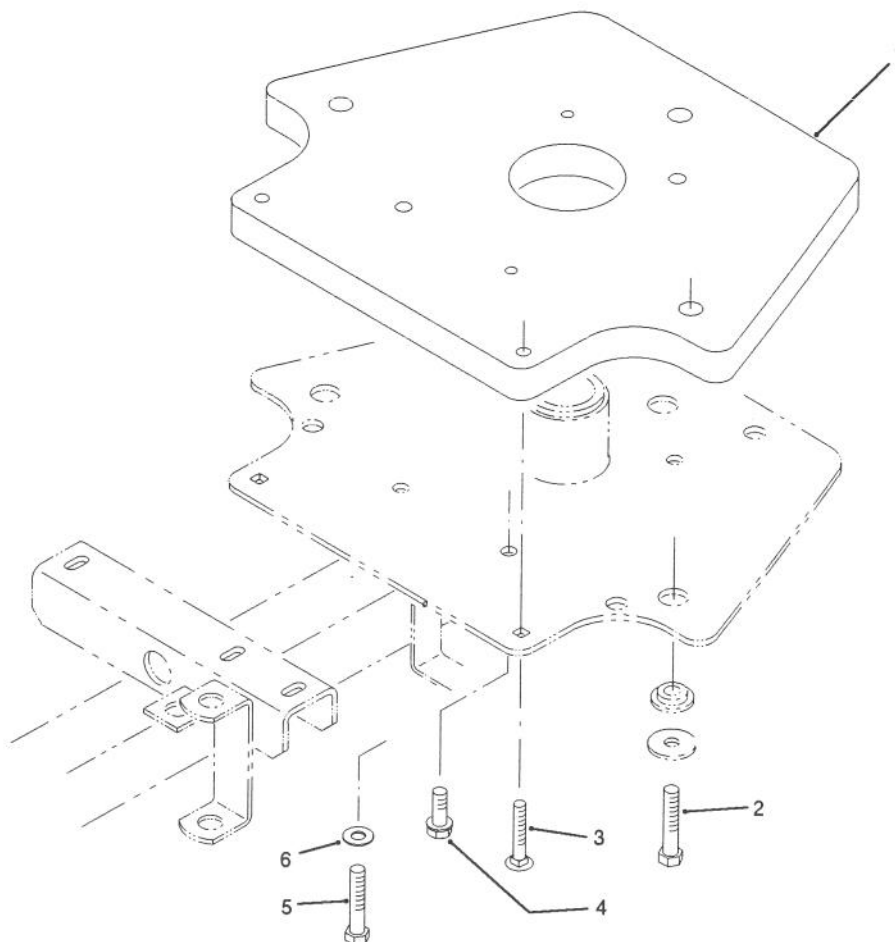

WEIGHT KIT NO. 83-9370


T-1372

Ref. No.	Part No.	Description	No. Used
1	83-9390	Weight	1
2	323-10	Screw - Cap Hex. Hd.	3
*†	232-14	Screw - Cap Hex. Hd.	3
3	3230-5	Screw - Carriage	2
*†	3230-9	Screw - Carriage	2

Ref. No.	Part No.	Description	No. Used
4	3234-11	Screw - Hex. Washer Hd.	2
†5	323-10	Screw - Cap Hex. Hd.	2
†6	3256-24	Washer - Flat	2

*Not Illustrated

 †Required when installing 2 weights.

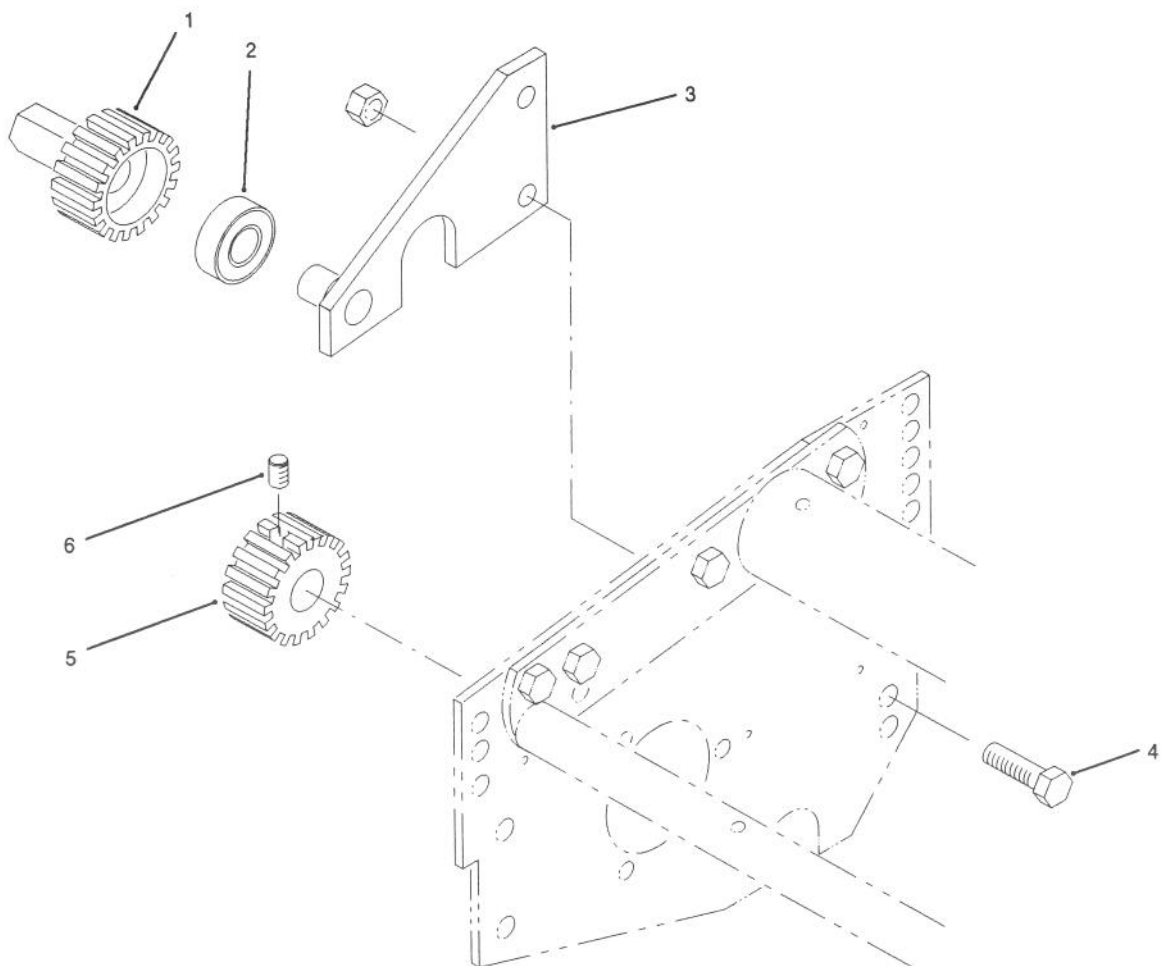

T-1372

BACKLAP KIT NO. 84-5510


Ref. No.	Part No.	Description	No. Used
1	84-5590	Gear - Driver	1
2	251-270	Bearing - Ball	1
3	84-5580	Plate - Attachment (L.H. Cutting Unit)	1
*	84-5570	Plate - Attachment (R.H. & Ctr. Cutting Unit)	2

Ref. No.	Part No.	Description	No. Used
4	323-7	Screw - Cap Hex. Hd.	6
5	84-5560	Gear - Reel Shaft	3
6	3246-9	Screw - Set	6

*Not Illustrated

SPECIAL TOOLS

 
DRIVE MOTOR SEAL INSTALLATION TOOL NO. *19-2660

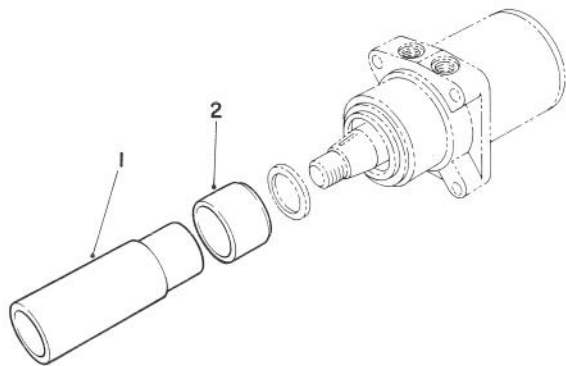

T-0728

Ref. No.	Part No.	Description	No. Used
1		Driver - Seal	1
2		Holder - Seal	1

 
BEDKNIFE SCREW TOOL NO. *TOR510880

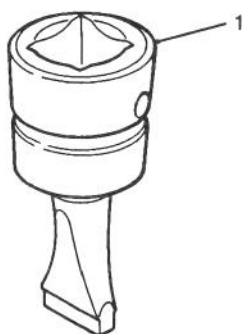

T-0729

Ref. No.	Part No.	Description	No. Used
1		Tool - Bedknife Screw	1

 
HYDRAULIC OIL RESERVOIR PLUG NO. *63-4310

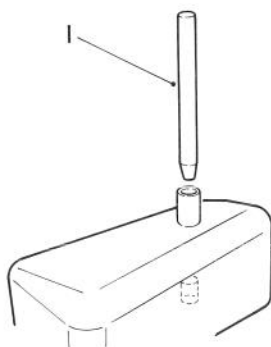

T-1213

Ref. No.	Part No.	Description	No. Used
1		Plug - Reservoir	1

 
BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

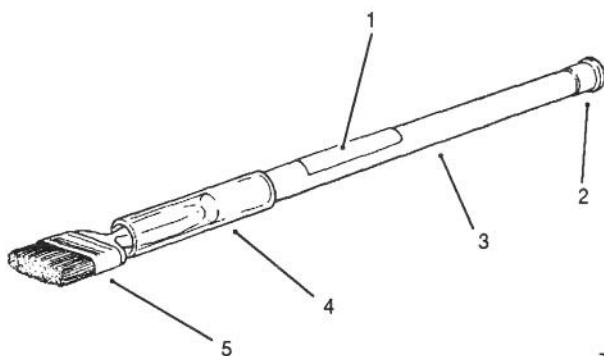

T-0731

Ref. No.	Part No.	Description	No. Used
1	12-9140	Decal	1
2	2410-18	Plug	1
3	29-9080	Handle	1
4	29-9090	Hose - Handle	1
5	36-4310	Brush	1

 *Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

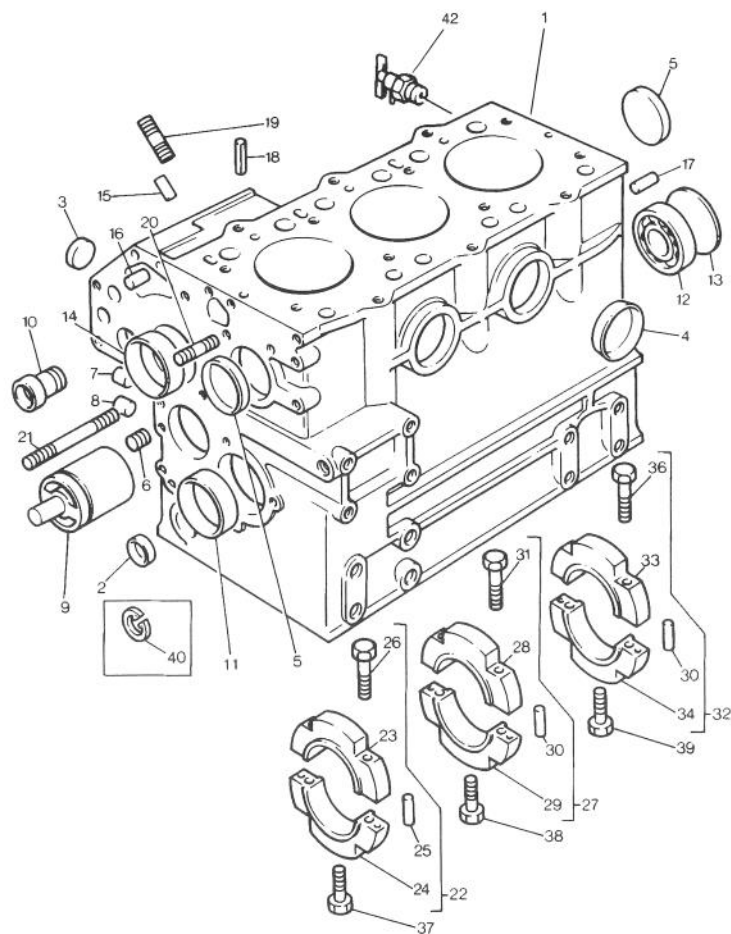


T-1377

CYLINDER BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	110186030	Kit - Cylinder Block	1	23		Cap	1
2	064200015	Plug	1	24		Cap	1
4	064200040	Plug	2	25	030500612	Dowel	2
5	064200040	Plug	2	26	010810840	Screw	2
6	198466050	Plug	3	27	110156230	Holder	
7	198466010	Plug	4			Incl. Ref. #28 & 29)	1
8	198466070	Plug	2	28		Cap	1
9	165296160	Shaft	1	29		Cap	1
10	198517090	Bush	1	30	030500612	Dowel	2
11	198517300	Bush	1	31	010810840	Screw	2
*	198517304	Bush -.25mm	1	32	110156240	Holder	
*	198517307	Bush -.50mm	1			Incl. Ref. #33 & 34)	1
12	040106203	Bearing - Ball	1	33		Cap	1
13	064100045	Plug	1	34		Cap	1
14	042303015	Bush	1	35	030500612	Dowel	2
15	030500512	Dowel	2	36	010810840	Screw	2
16	030500512	Dowel	2	37	011310850	Screw	1
17	030500820	Dowel	2	38	011310850	Screw	1
18	030309005	Pin	2	39	010700845	Screw	2
19	012100620	Stud	2	40	036509005	Circlip	1
20	012100635	Stud	1	41	064200018	Plug	2
21	012100660	Stud	1	42	198736052	Cock	1
22	110156220	Holder		*	110006330	Short Block Assembly	1
		Incl. Ref. #23 & 24)	1	*	195906610	Kit - Gasket	1

 *Not Illustrated

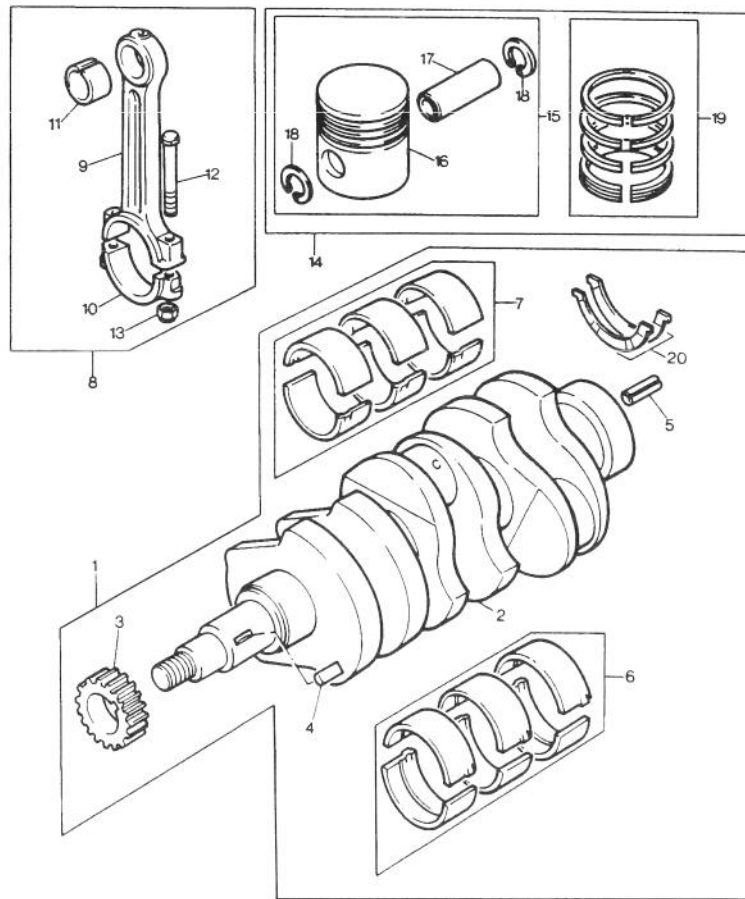


CRANKSHAFT ASSEMBLY

T-1378

Ref. No.	Part No.	Description	No. Used
1	115236020	Kit - Crankshaft Incl. Ref. #2)	1
2		Crankshaft	1
3	115276210	Gear	1
4	030509020	Key	1
6	198586030	Kit - Bearing Std.	1
*	198586034	Kit - Bearing -0.25mm	1
*	198586037	Kit - Bearing -0.50mm	1
7	198586060	Kit - Bearing Std.	1
*	198586064	Kit - Bearing -0.25mm	1
*	198586067	Kit - Bearing -0.50mm	1
8	115026240	Connecting Rod Assembly Incl. Ref. # 9 & 10)	3
9		Rod	1
10		Cap	1
11	198517325	Bush	1
12	115176130	Screw	2

Ref. No.	Part No.	Description	No. Used
13	020109103	Nut	2
14	115016670	Kit - Piston Std.	3
*	115016674	Kit - Piston +0.5mm	1
*	115016677	Kit - Piston +1.0mm	1
15	115016770	Kit - Piston Std. Incl. Ref. #16)	1
*	115016774	Kit - Piston +0.5mm Incl. Ref. #16)	1
*	115016777	Kit - Piston +1.0mm Incl. Ref. #16)	1
16		Piston	1
17	115326260	Pin	1
18	03500019	Circlip	2
19	115107260	Kit - Piston Ring	1
*	115107263	Kit - Piston Ring +0.5mm	1
*	115107265	Kit - Piston Ring +1.0mm	1

 *Not Illustrated

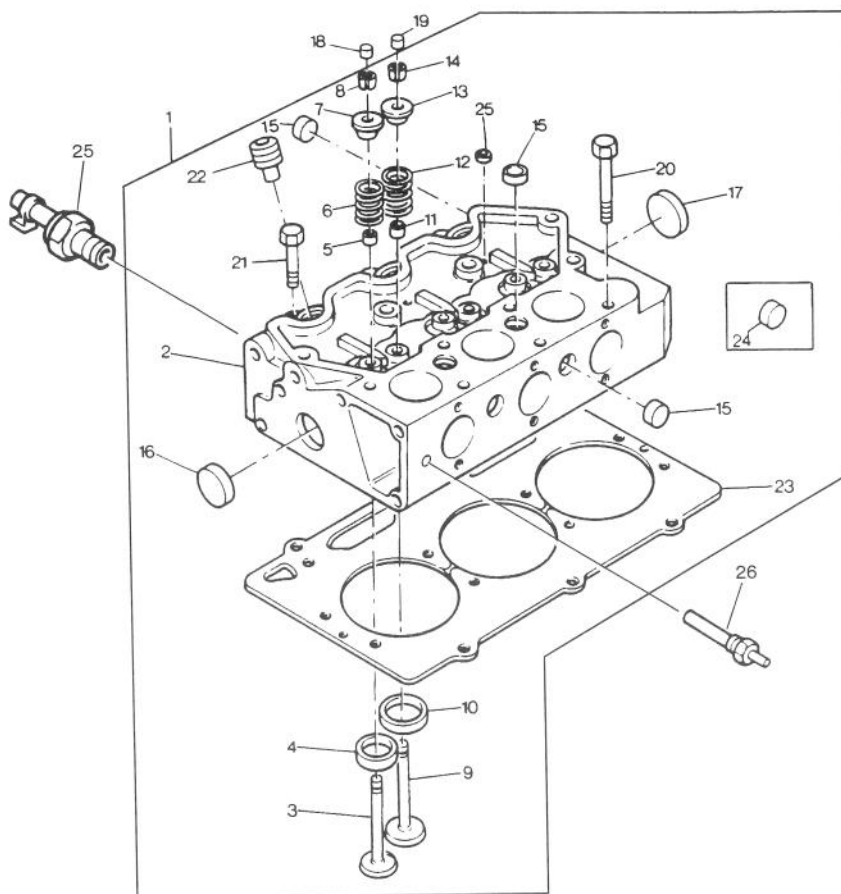


T-1379

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	111016911	Kit - Cylinder Head	1	14	120226080	Cotter	6
2	111086030	Kit - Cylinder Head	1	15	198466070	Plug	4
3	120166280	Valve Inlet	3	16	064200022	Plug	3
5	120406080	Seal	3	17	064200022	Plug	3
6	198217070	Spring	3	20	111136340	Screw	11
7	120186100	Cap	3	21	111136350	Screw	3
8	120226080	Cotter	6	23	111147100	Gasket +1.2mm	1
9	120176290	Valve Exhaust	3	*	111147110	Gasket +1.3mm	1
10	110136290	Insert	3	24	064200018	Plug	2
11	120406080	Seal	3	25	185246060	Switch - Oil Pressure	1
12	198217070	Spring	3	26	385720101	Sender - Temperature	1
13	120186100	Cap	3				

 *Not Illustrated

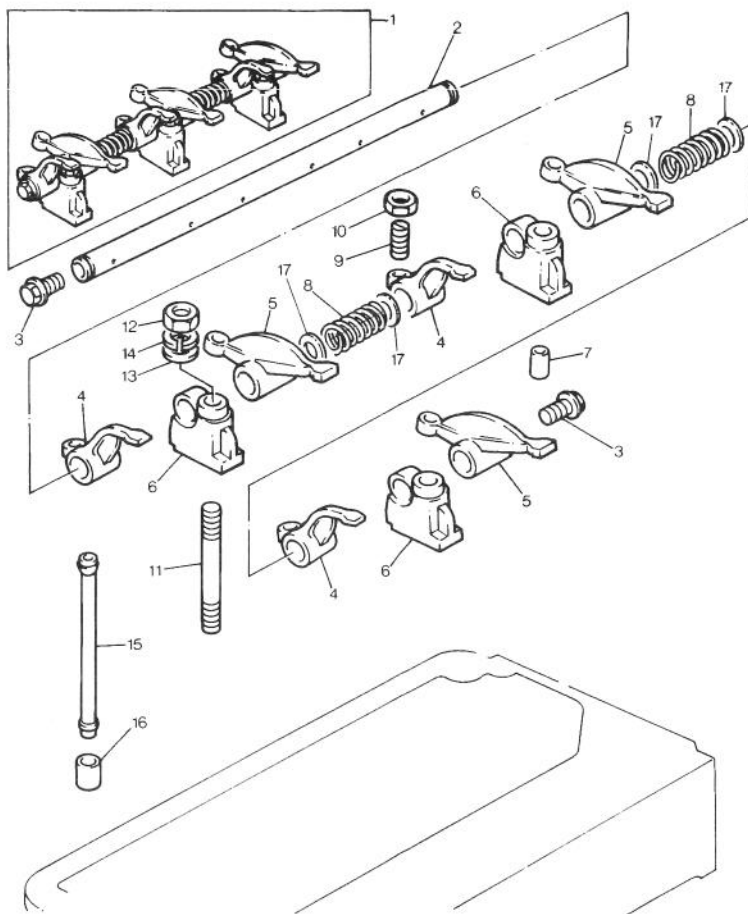


T-1380

ROCKER ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	120336020	Rocker Shaft Assembly	1
2	120316190	Shaft	1
3	064609006	Plug	2
4	120356120	Lever	3
5	120356110	Lever	3
6	120346170	Bracket	3
7	030300325	Pin	1
8	198217080	Spring	2

Ref. No.	Part No.	Description	No. Used
9	199486220	Adjusting Screw	6
10	020109076	Nut	6
11	012109177	Stud	3
12	023100008	Nut	3
15	120456240	Rod	6
16	120116100	Tappet	6
17	199280280	Washer	4

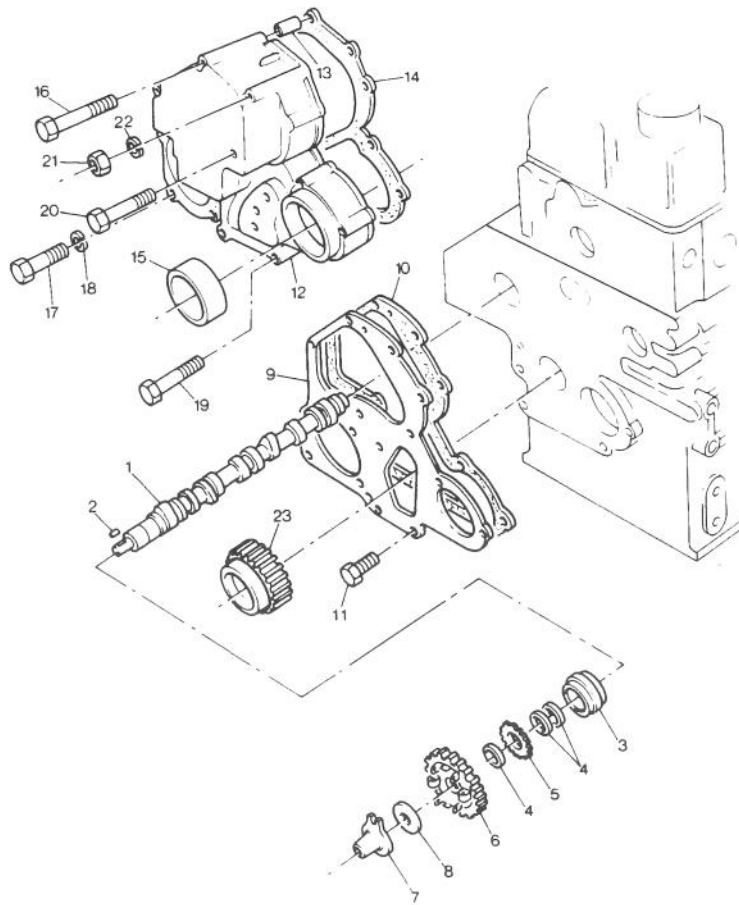 


T-1381

CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	120026120	Camshaft	1
2	034100508	Key	1
3	040109059	Bearing	1
4	199216230	Spacer	3
5	120736081	Gear	1
6	120016030	Gear	1
7	125256120	Tappet	1
9	165166260	Plate	1
10	165996400	Joint	1
11	011300612	Bolt	3

Ref. No.	Part No.	Description	No. Used
12	165106130	Cover	1
13	030300414	Pin	1
14	165996410	Joint	1
15	198636090	Seal	1
16	011300680	Screw	2
19	011300640	Screw	4
20	011300660	Screw	2
21	023100006	Nut	1
23		Gear	1

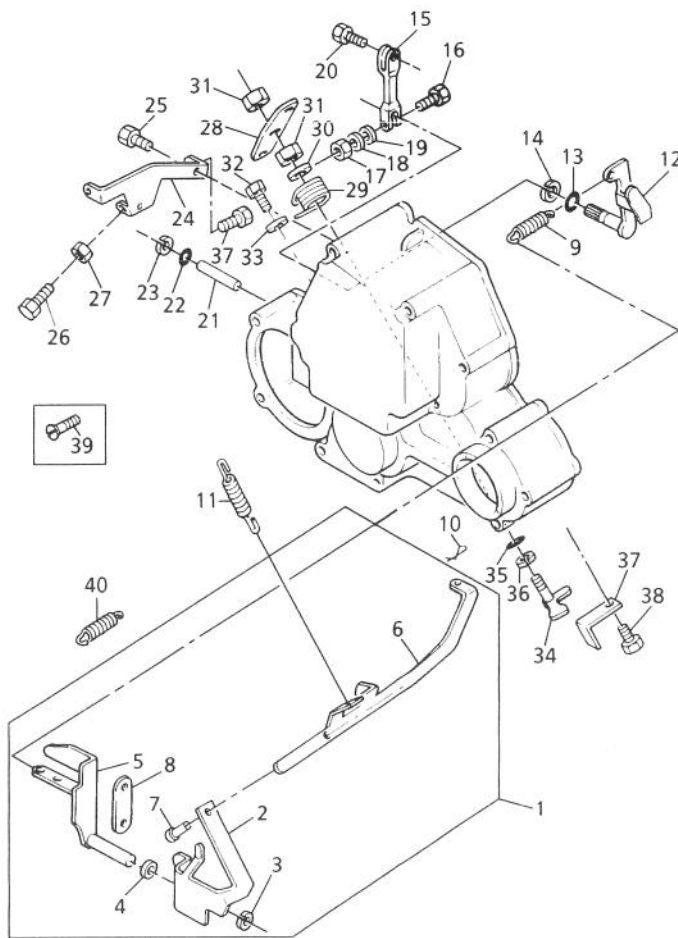 


T-1382

TIMING COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	125046140	Lever Incl. Ref. #2, 6 & 7)	1
2		Lever	1
3	036800008	Circlip	1
4	026200010	Washer	1
5	125406071	Lever	1
6		Link	1
7		Pin	1
9	198217220	Spring	1
10	031100004	Pin	1
11	198217420	Spring	1
12	125156170	Arm	1
13	052100070	O Ring	1
14	036800008	Circlip	1
15	125416020	Lever	1
16	010110630	Screw	1

Ref. No.	Part No.	Description	No. Used
17	023100006	Nut	1
21	125116130	Shaft	1
22	052100030	Seal - O-Ring	1
23	036800005	Circlip	1
24	125976120	Stay	1
25	011300618	Screw	2
26	010109264	Screw	2
27	023100006	Nut	2
28	125176080	Lever	1
29	198216760	Spring	1
30	026200008	Washer	1
31	020300008	Nut	2
34	125156180	Arm	1
35	052100050	O Ring	1
36	036800006	Circlip	1

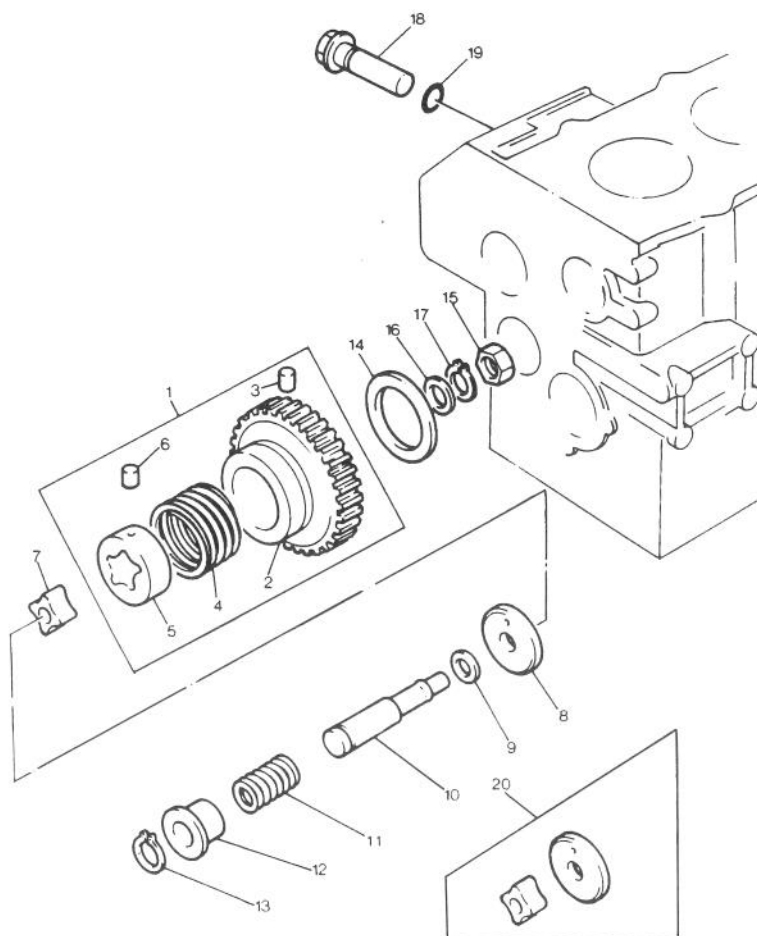 


T-1383

OIL PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	165026110	Gear	1
4	198216821	Spring	1
7	140166130	Rotor	1
8	140116140	Cover	1
9	199286150	Shim +0.10mm	1
*	199286160	Shim +0.15mm	1
*	199286170	Shim +0.20mm	1
*	199286180	Shim +0.50mm	1

Ref. No.	Part No.	Description	No. Used
11	198216720	Spring	1
12	199236540	Collar	1
13	036800010	Circlip	1
14	199266180	Washer	1
18	140036120	Valve	1
19	052100150	Seal - O-Ring	1
20	140186010	Repair Kit	1

 * Not Illustrated

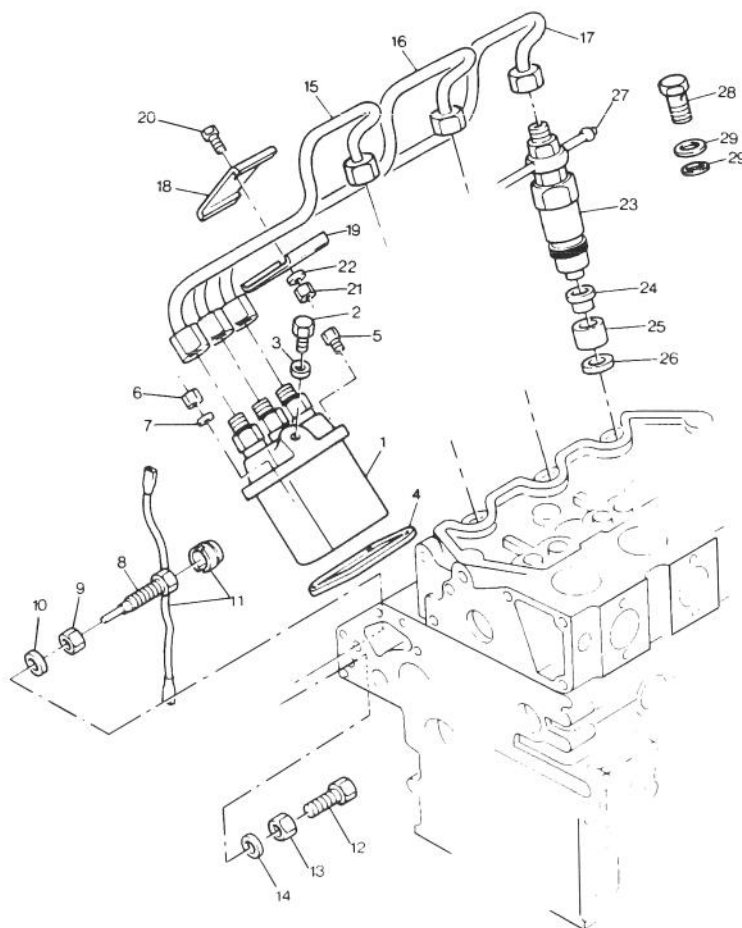


FUEL INJECTION SYSTEM ASSEMBLY

T-1384

Ref. No.	Part No.	Description	No. Used
1	131017340	Injection Pump	1
2	131236201	Screw	1
3	025100006	Washer	1
4	131437310	Shim +0.2mm	1
*	131437320	Shim +0.3mm	1
*	131437330	Shim +0.4mm	1
*	131437340	Shim +0.5mm	1
*	131437340	Shim +1.0mm	1
5	011300620	Screw	2
6	023100006	Nut	2
8	131046160	Screw	1
9	023109002	Nut	1
10	025100010	Washer	1
11	198236030	Wire	1
12	010109270	Screw	1

Ref. No.	Part No.	Description	No. Used
13	023109002	Nut	1
14	025100010	Washer	1
15	131507010	Injection Pipe No. 1 Cyl.	1
16	131507020	Injection Pipe No. 2 Cyl.	1
17	131507030	Injection Pipe No. 3 Cyl.	1
18	199106020	Damper	2
19	199106020	Damper	2
20	010100625	Screw	2
21	023100006	Nut	2
23	131406340	Atomiser	3
24	131426200	Gasket	3
25	111316280	Insert	3
26	198996090	Seal	3
27	131606260	Pipe	1

 *Not Illustrated

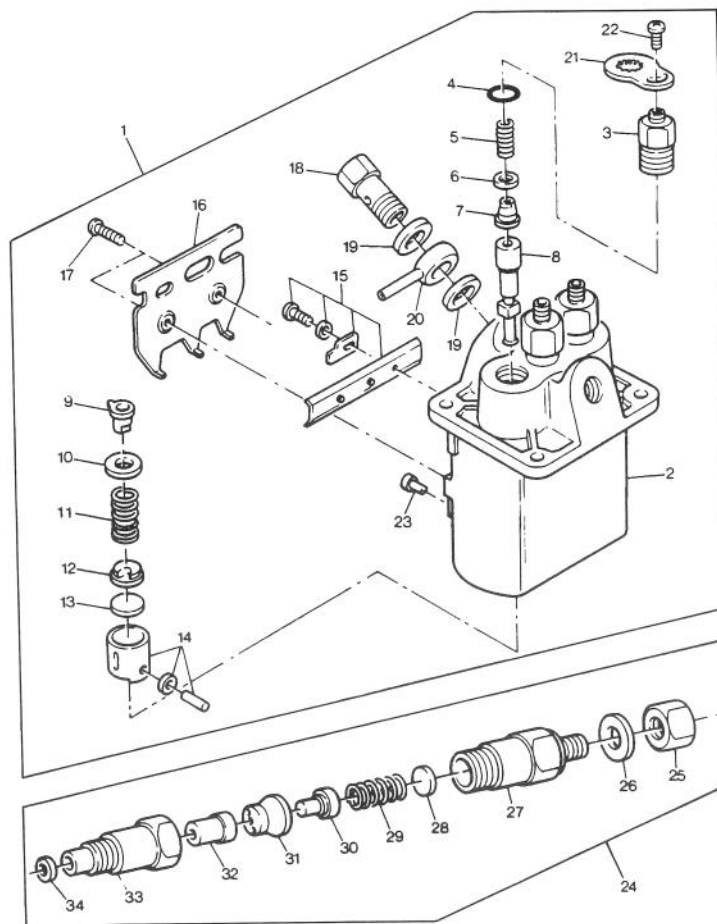


T-1385

INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	131017340	Injection Pipe	1
2	131296665	Housing	1
3	131196120	Holder	3
4	131226170	Seal - O-Ring	3
5	131176430	Spring	3
6	131186050	Gasket	3
7	131156160	Valve	3
8	131116410	Element	3
9	131296951	Sleeve	3
10	131296620	Seat	3
11	131176440	Spring	3
12	131296621	Seat	3
*	131296622	Plate +1.85mm	1
*	131296623	Plate +1.90mm	1
*	131296625	Plate +2.00mm	1
*	131296626	Plate +2.05mm	1
*	131296627	Plate +2.10mm	1
*	131296628	Plate +2.15mm	1
*	131296629	Plate +2.20mm	1
*	131296630	Plate +2.25mm	1
*	131296631	Plate +2.30mm	1
*	131296632	Plate +2.35mm	1
*	131296633	Plate +2.40mm	1
*	131296634	Plate +2.45mm	1
*	131296635	Plate +2.50mm	1
14	131256120	Tappet	3

Ref. No.	Part No.	Description	No. Used
15	131296636	Rack	1
16	131296650	Bracket	1
17	131136320	Screw	2
18	131236190	Bolt	1
19	131246180	Washer	2
20	131246130	Nipple	1
21	131296662	Plate	3
22	131136330	Screw	3
23	131296651	Pin	3
24	131406340	Atomiser	3
25	131446069	Nut	1
26	131426210	Washer	1
27	131446065	Body	1
28	131437250	Shim +0.90mm	1
*	131437251	Shim +0.925mm	1
*	131437252	Shim +0.95mm	1
*	131437253	Shim +0.975mm	1
*	131437354	Shim +1.00mm	1
*	131437255	Shim +1.025mm	1
*	131437256	Shim +1.05mm	1
*	131437257	Shim +1.075mm	1
*	131437258	Shim +1.10mm	1
*	131437259	Shim +1.125mm	1
*	131437260	Shim +1.15mm	1
*	131437261	Shim +1.175mm	1
*	131437262	Shim +1.20mm	1

 *Not Illustrated

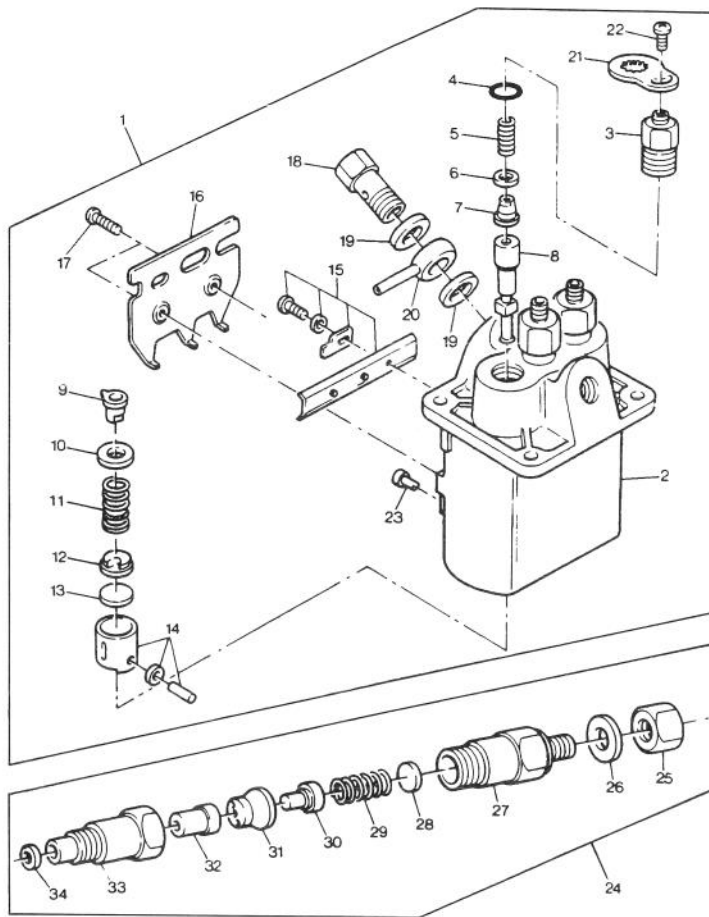


T-1385

INJECTION PUMP ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
28	131437263	Shim +1.225mm	1	29	131446066	Spring	1
*	131437264	Shim +1.250mm	1	30	131446070	Pin	1
*	131437265	Shim +1.275mm	1	31	131446068	Spacer	1
*	131437266	Shim +1.30mm	1	32	131416150	Nozzle	1
*	131437267	Shim +1.325mm	1	33	131446067	Nut	1
*	131437268	Shim +1.35mm	1				
*	131437269	Shim +1.375mm	1				
*	131437270	Shim +1.40mm	1				
*	131437271	Shim +1.425mm	1				
*	131437272	Shim +1.45mm	1				

 *Not Illustrated

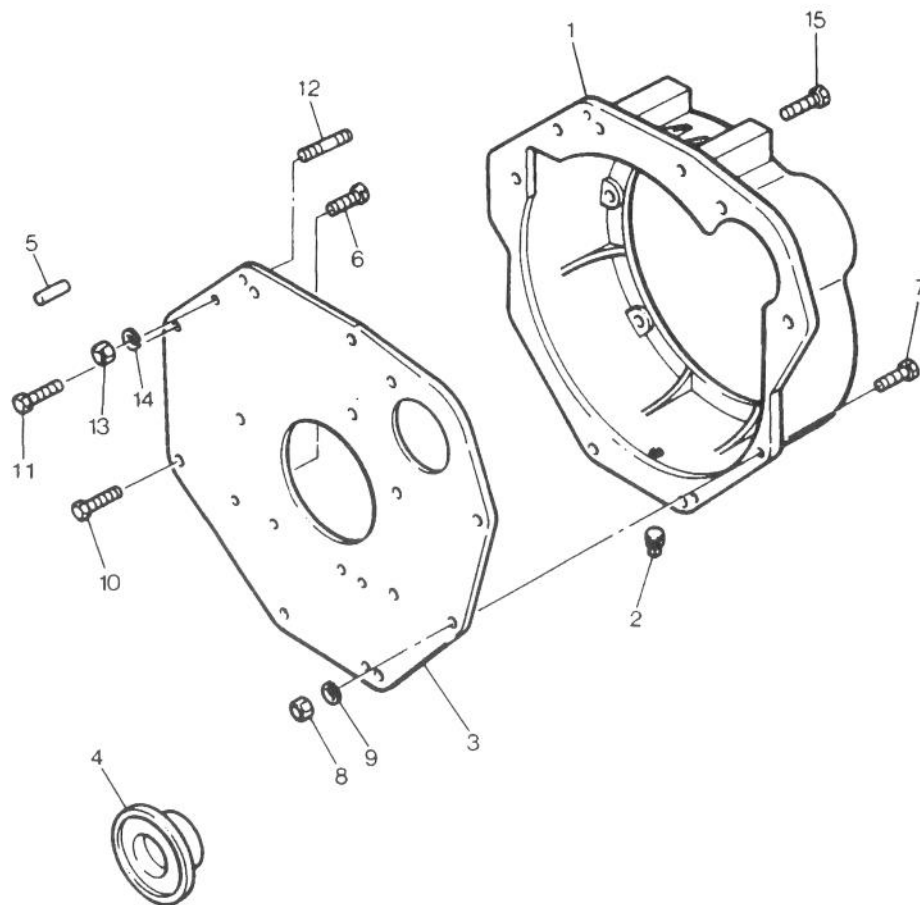


T-1386

FLYWHEEL HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
13	110366700	Plate	1
4	198636080	Seal	1

Ref. No.	Part No.	Description	No. Used
10	011310816	Screw	10

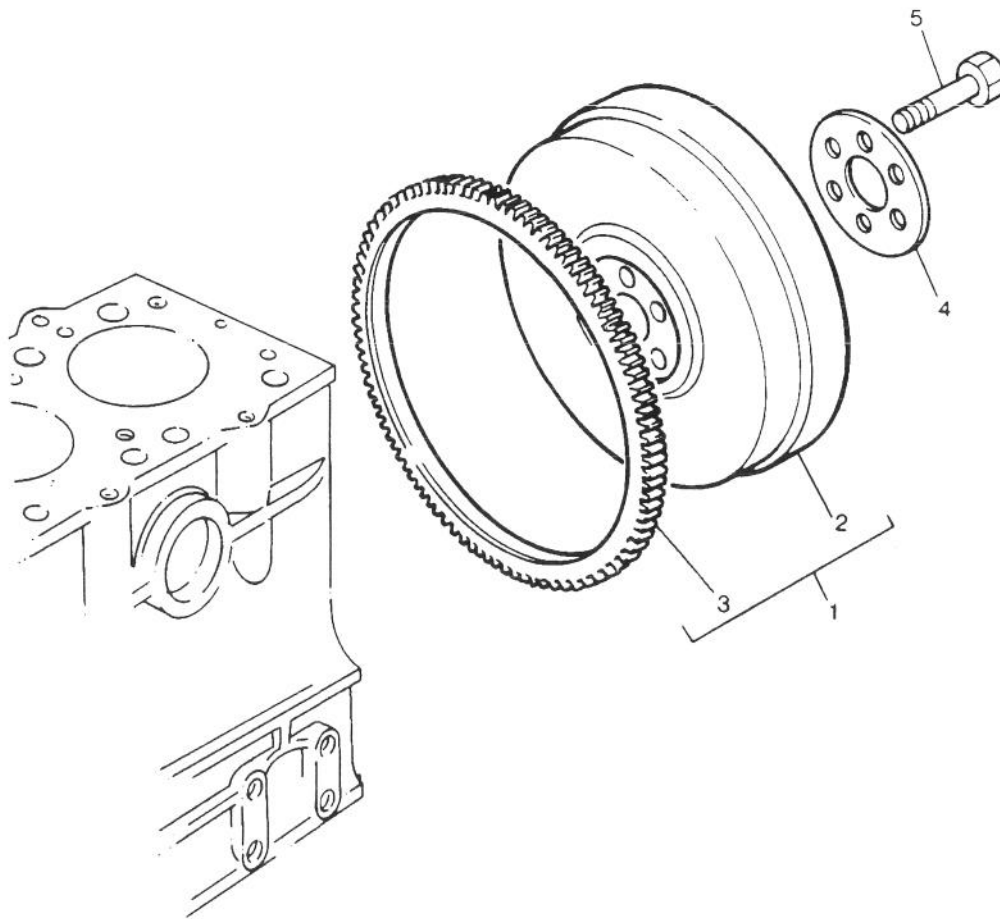 

FLYWHEEL ASSEMBLY


T-1387

Ref. No.	Part No.	Description	No. Used
2	115356921	Flywheel	1
3	115376150	Gear - Ring	1

Ref. No.	Part No.	Description	No. Used
5	010109330	Screw	4



Ref. No.	Part No.	Description	No. Used
2	011601020	Screw	2

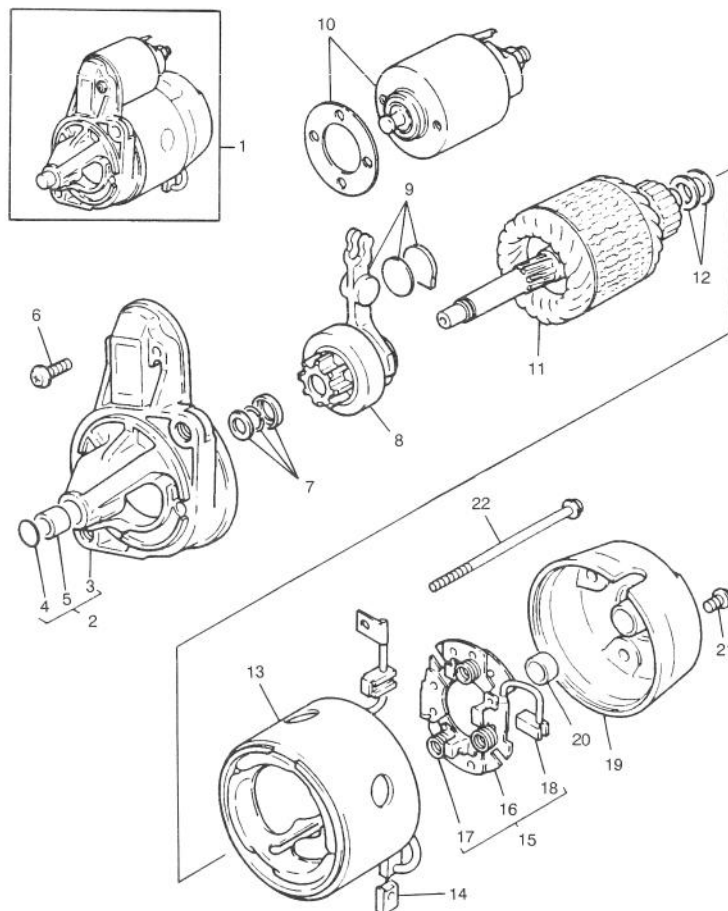 


STARTER ASSEMBLY

T-1389

Ref. No.	Part No.	Description	No. Used
1	185086370	Startermotor	1
2	185846471	Cover	
		(Incl. Ref. #3 & 4)	1
3		Cover	1
4		Ring	1
5	185846472	Bush	2
6	185846468	Screw	2
7	185846473	Washer	1
8	185866240	Pinion	1
9	185846469	Lever	1
10	185816220	Switch	1
11	185846474	Armature	1

Ref. No.	Part No.	Description	No. Used
12	185846475	Washer	1
13	185846476	Yoke	1
14	185416400	Brush	1
15	185416390	Holder	
		(Incl. Ref. #16)	1
16		Holder	1
17	185886010	Spring	1
18	185416410	Brush	1
19	185846477	Cover	1
20	185846478	Bush	1
21	185846468	Screw	3
22	185846470	Screw	2

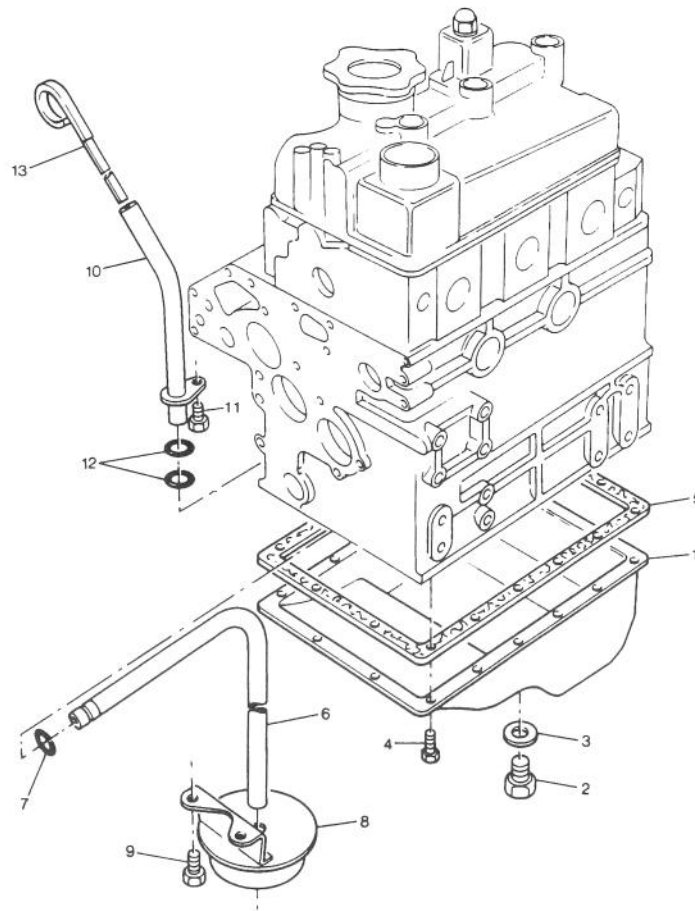 


T-1390

OIL SUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	110706860	Sump	1
2	010401212	Plug	2
3	025100012	Washer	2
4	010109235	Screw	18
5	110996590	Gasket	1
6	140986590	Pipe	1
7	052109076	Seal - O-Ring	1

Ref. No.	Part No.	Description	No. Used
8	140406310	Strainer	1
9	011300612	Bolt	2
11	011300612	Bolt	1
*	011300812	Screw	1
12	052100100	Seal - O-Ring	2
13	198416371	Dipstick	1

 *Not Illustrated

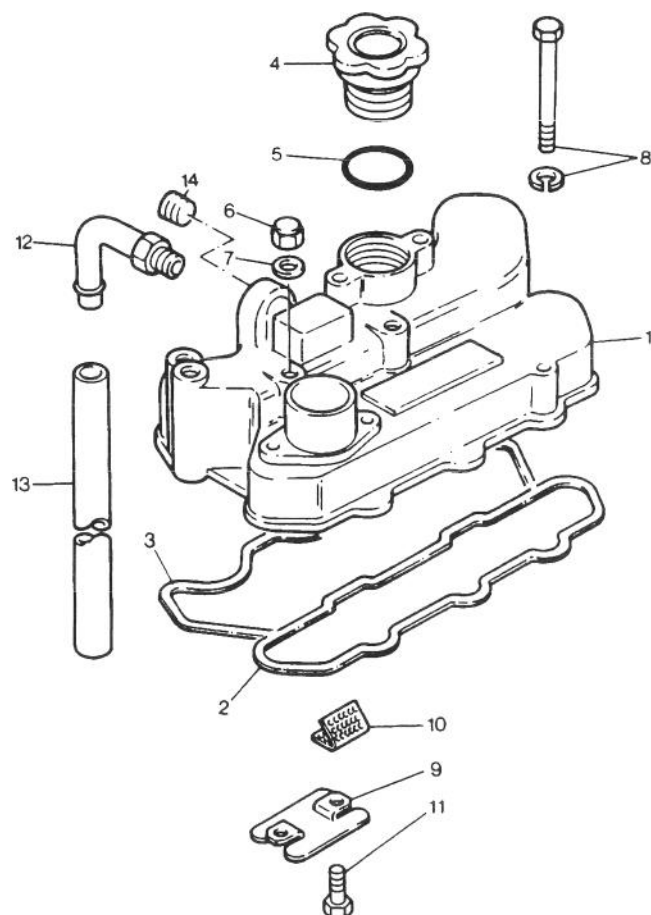


VALVE COVER ASSEMBLY

T-1391

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	111216630	Cover	1	7	198996060	Washer	3
*	111026371	Cover	1	8	011300650	Screw	2
2	111996330	Gasket	1	9	110666110	Plate	1
3	111996060	Gasket	1	10	110666120	Gauze	1
4	198436010	Cap	1	11	011300612	Bolt	2
5	052100400	Seal	1	12	110986500	Pipe	1
6	024500008	Nut	3	13	068122560	Hose	1

 *Not Illustrated

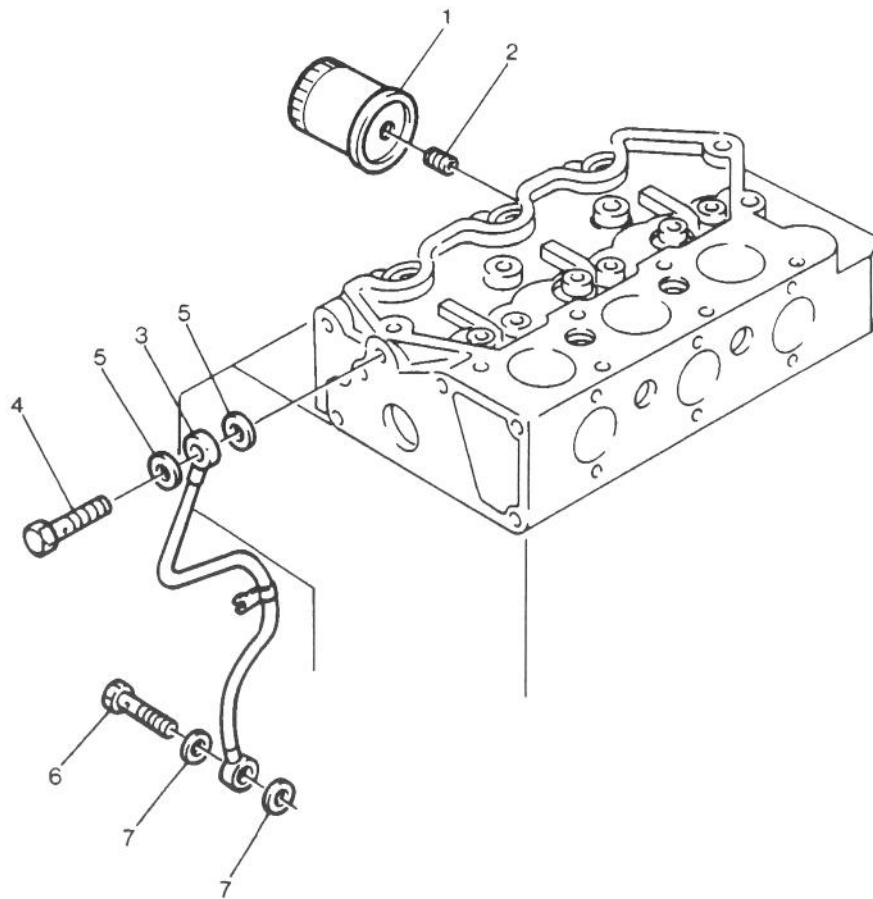


T-1392

OIL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	140516190	Filter – Oil	1
2	140546020	Connection	1
3	140606680	Pipe	1
4	198486780	Bolt	1

Ref. No.	Part No.	Description	No. Used
5	198996060	Washer	2
6	198486780	Bolt	1
7	198996060	Washer	2

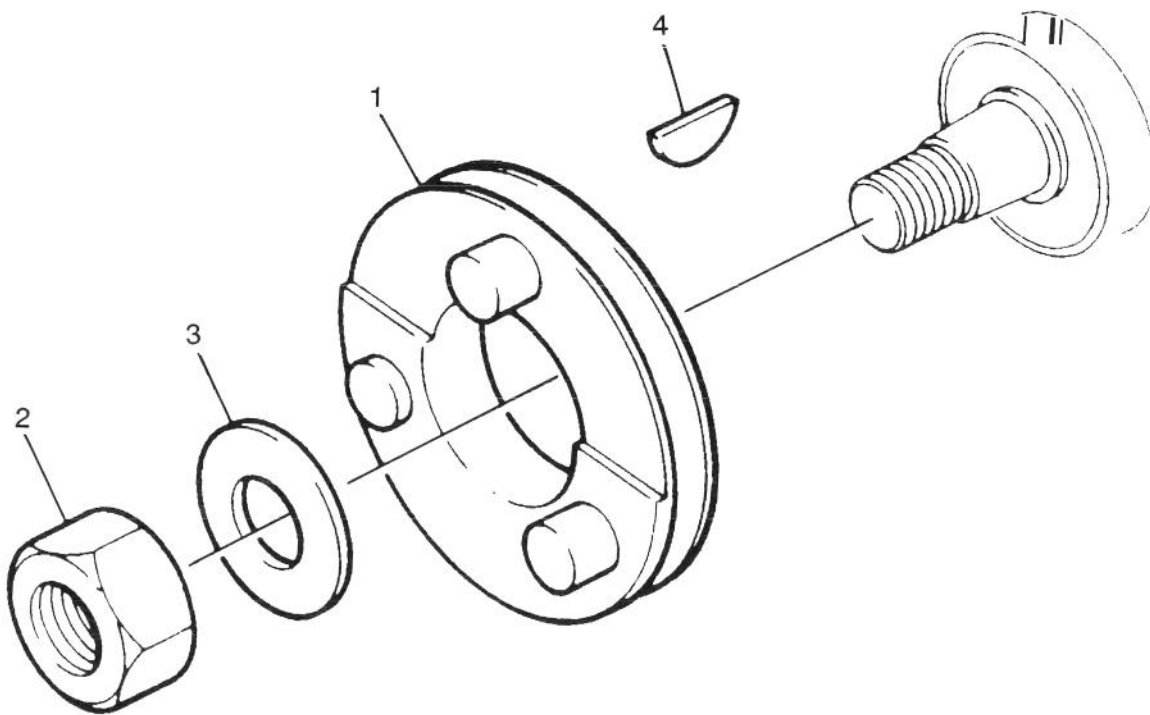 


T-1393

FRONT DRIVE PULLEY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	115397550	Pulley	1
2	020800018	Nut	1

Ref. No.	Part No.	Description	No. Used
3	026200018	Washer	1
4	134100508	Key	1

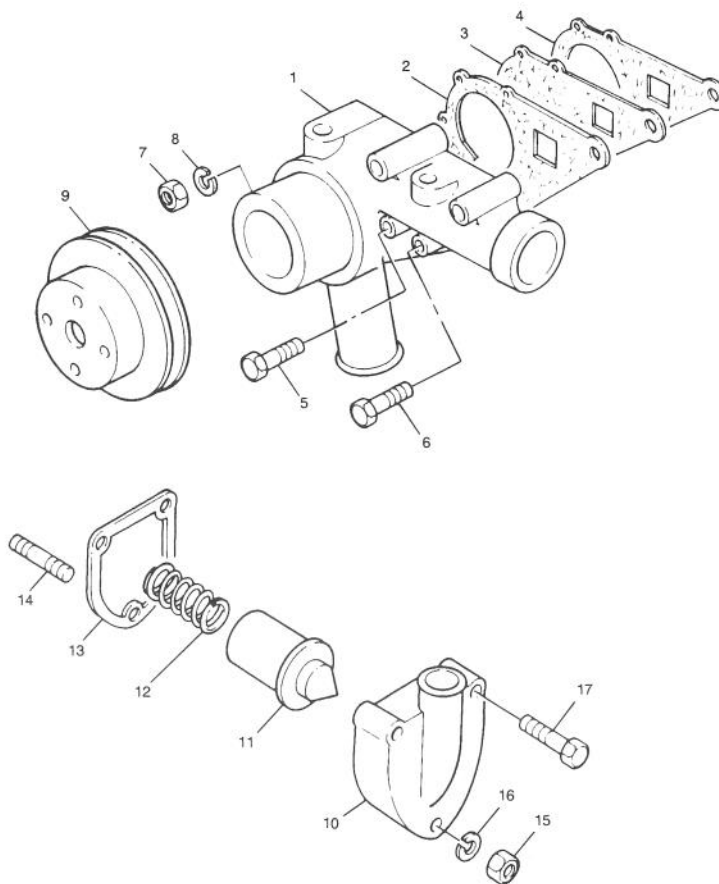 


T-1394

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	145016840	Pump – Water	1
2	145996430	Gasket	1
3	145146270	Backplate	1
4	145996420	Gasket	1
5	011300635	Screw	3
6	011300650	Screw	4
7	023100006	Nut	1
8	027100006	Washer	1
9	145336490	Pulley	1

Ref. No.	Part No.	Description	No. Used
10	145216160	Housing	1
11	145206061	Thermostat	1
12	198217090	Spring	1
13	145996440	Gasket	1
14	012100650	Stud	1
15	023100006	Nut	1
16	027100006	Washer	1
17	011300650	Screw	2

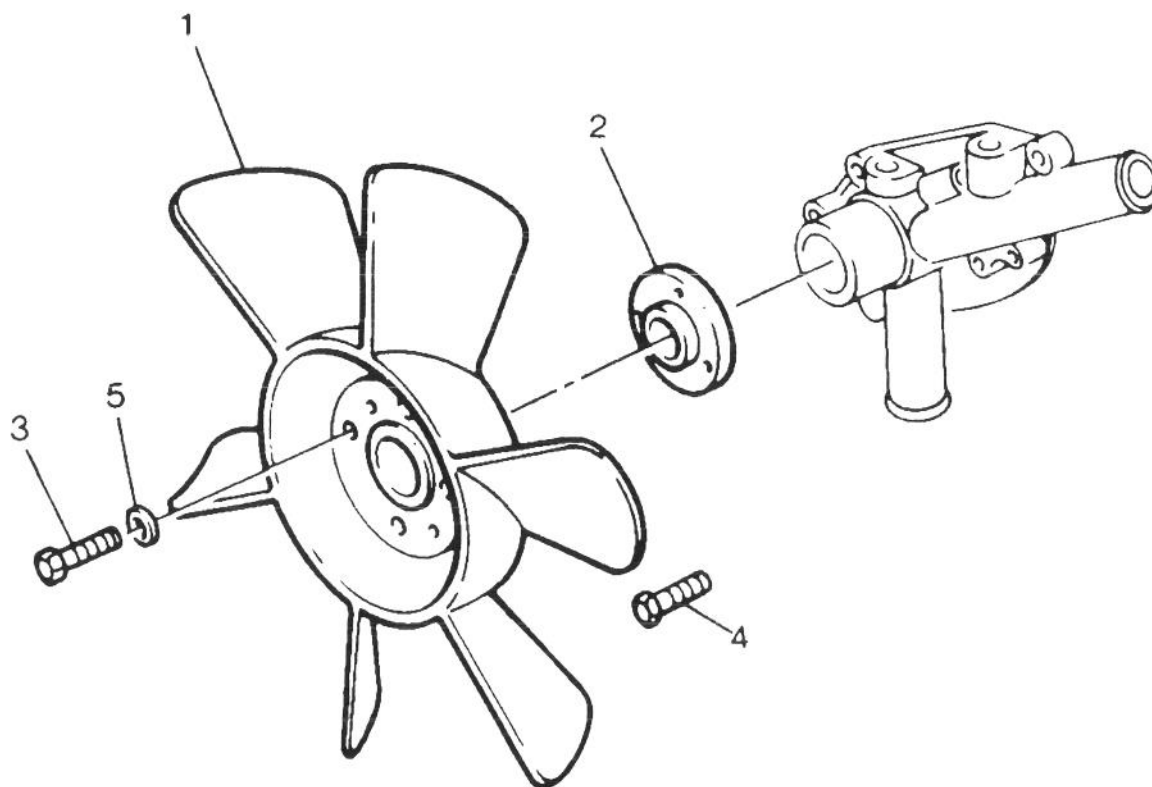 


T-1395

FAN & EXTENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	145306380	Fan	1
2	145386520	Plate	1


Ref. No.	Part No.	Description	No. Used
3	011310614	Screw	4

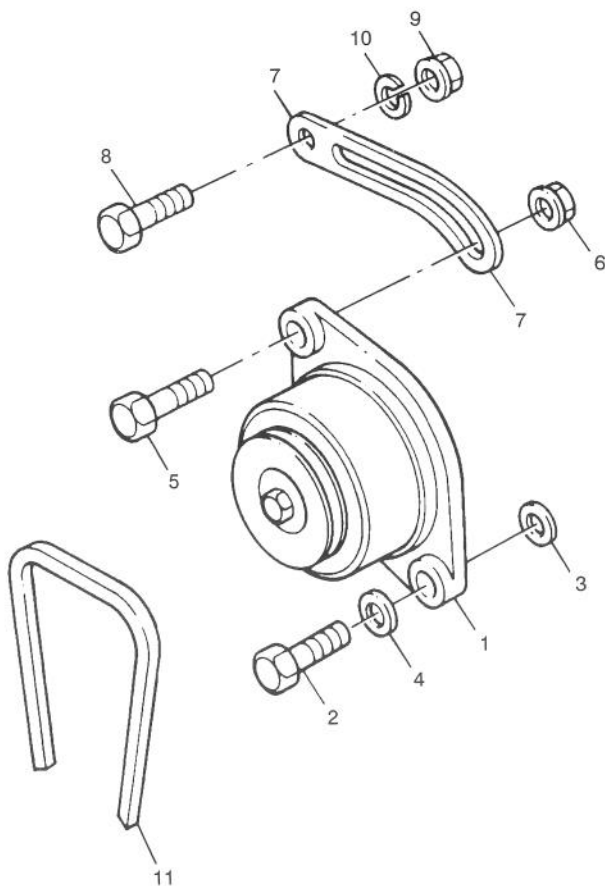 

T-1396

ALTERNATOR INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	185046210	Alternator	1	6	023100008	Nut	1
2	010110850	Screw	1	7	185726431	Lever	1
3	026109011	Washer	1	8	011300816	Screw	1
4	026200008	Washer	1	9	023100008	Nut	1
5	012810830	Screw	1	10	027100008	Washer	1

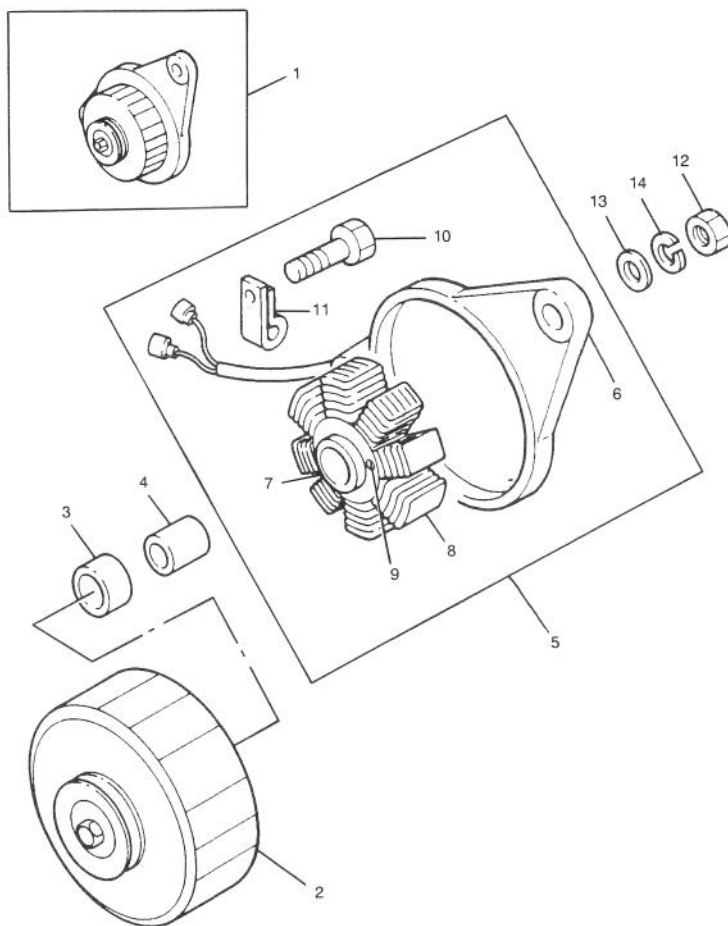 


T-1397

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185046210	Alternator	1
2	185446219	Pulley	1
3	040126201	Bearing	1
4	199236510	Collar	1
5	185446217	Plate	1
6	185716200	Plate	1
7	040126201	Bearing	1

Ref. No.	Part No.	Description	No. Used
8	185426218	Stator	1
9	015140425	Screw	2
10	015140408	Screw	1
11	185446220	Clip	1
12	020210010	Nut	1
13	026100010	Washer	1
14	027100010	Washer	1

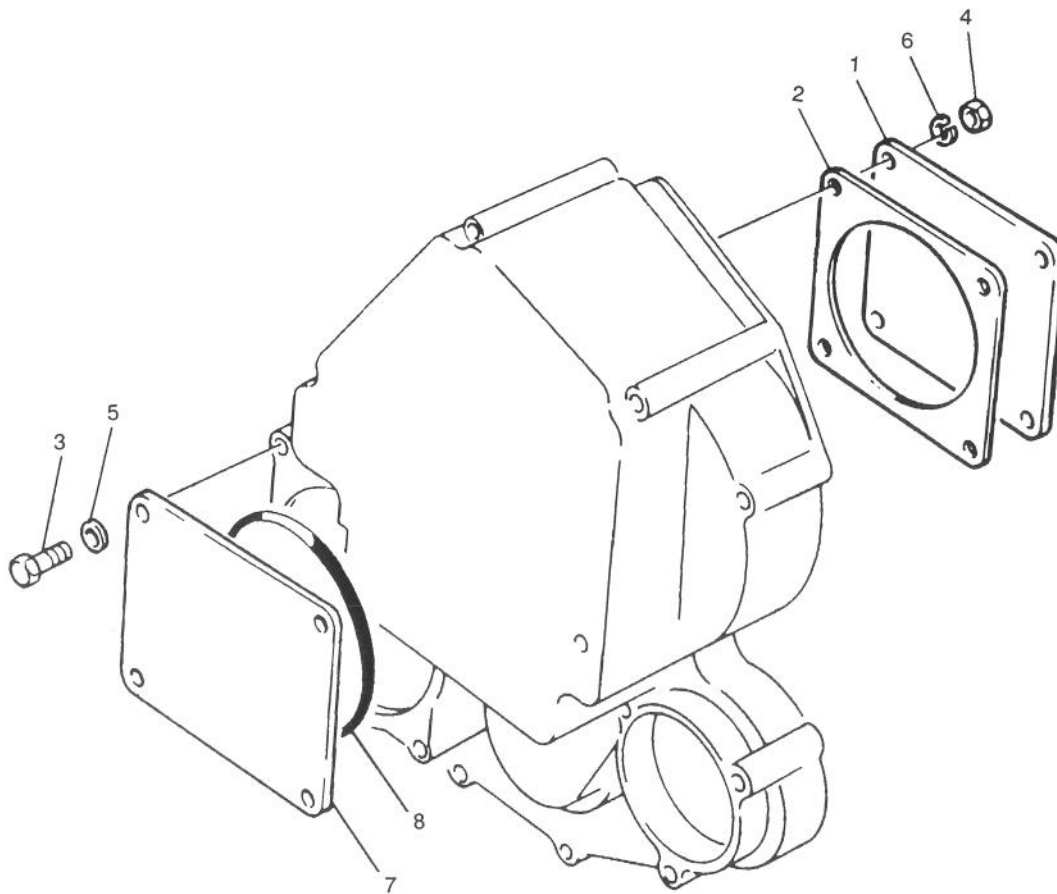 


T-1398

TIMING COVER PLATE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	165206360	Plate	1
2	165996420	Gasket	1

Ref. No.	Part No.	Description	No. Used
3	010110850	Screw	4
4	023100008	Nut	4

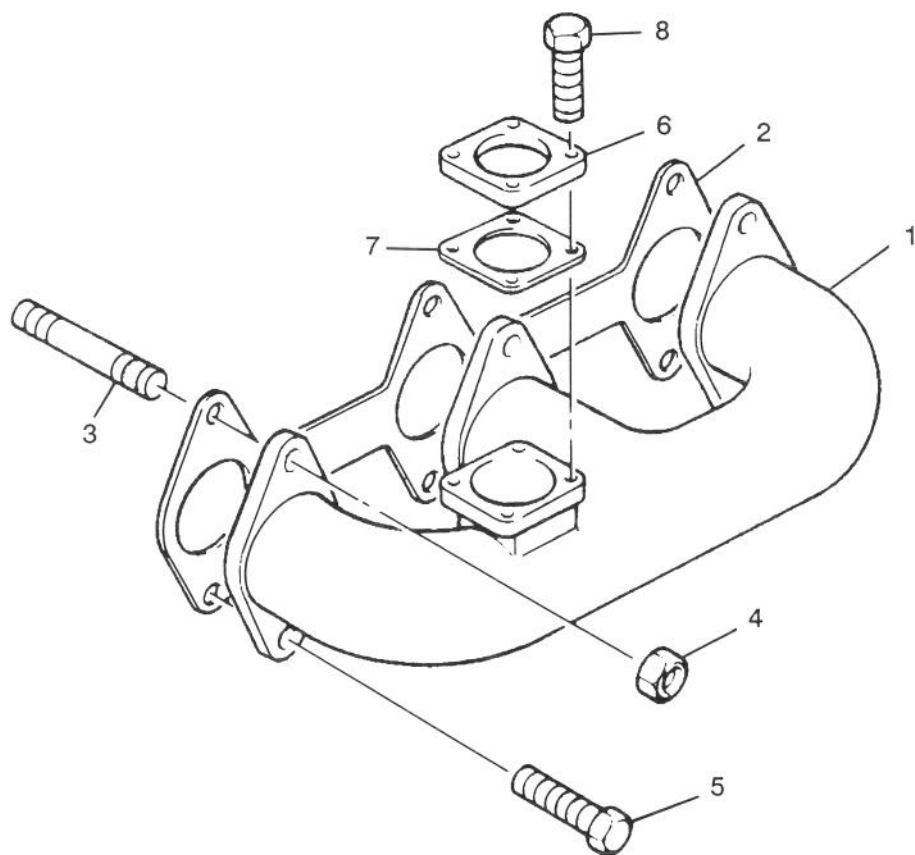 


T-1399

EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	135616630	Manifold - Exhaust	1
2	135996520	Gasket	1
3	012110625	Stud	3


Ref. No.	Part No.	Description	No. Used
4	023100006	Nut	3
5	011310625	Screw	3

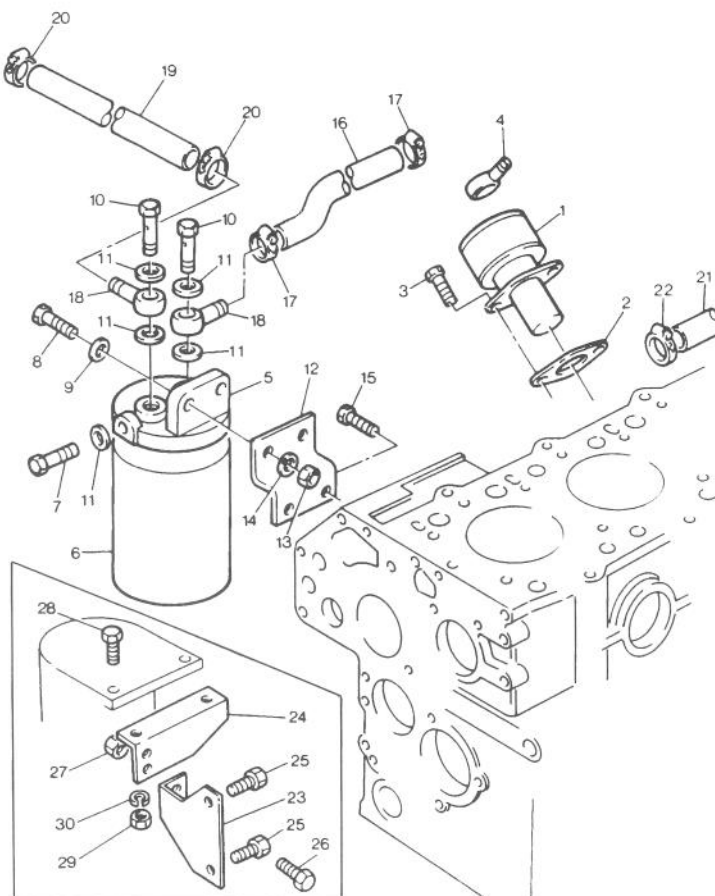 

LOW PRESSURE FUEL SYSYEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	130506140	Pump – Lift	1
2	130996070	Gasket	1
3	011140616	Screw	2

Ref. No.	Part No.	Description	No. Used
4	198486840	Connection	2
16	068209084	Hose	1
17	067100015	Clip	2

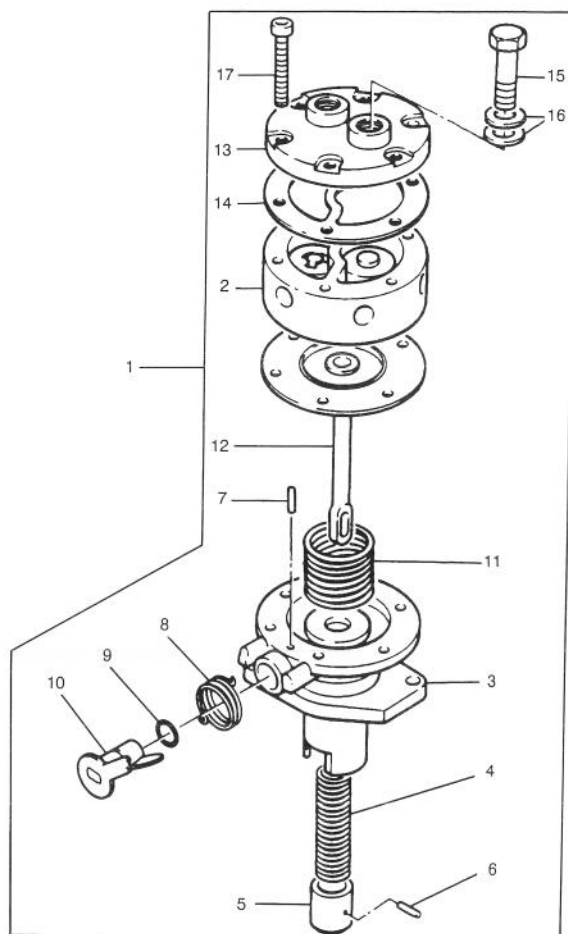 


T-1401

LIFT PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	130506140	Lift Pump Assembly (Incl. Ref. #2)	1
2		Body	1
3	130516080	Body	1
4	130516081	Spring	1
5	130516082	Plunger	1
6	130516085	Pin	1
7	130516088	Pin	1
8	130516083	Spring	1

Ref. No.	Part No.	Description	No. Used
9	131226180	Seal - O-Ring	1
10	130516086	Lever	1
11	130516087	Spring	1
12	130516084	Diaphragm	1
13	130516090	Cap	1
14	130516089	Gasket	1
15	130516092	Bolt	2
16	130516069	Washer	4
17	130516091	Screw	6

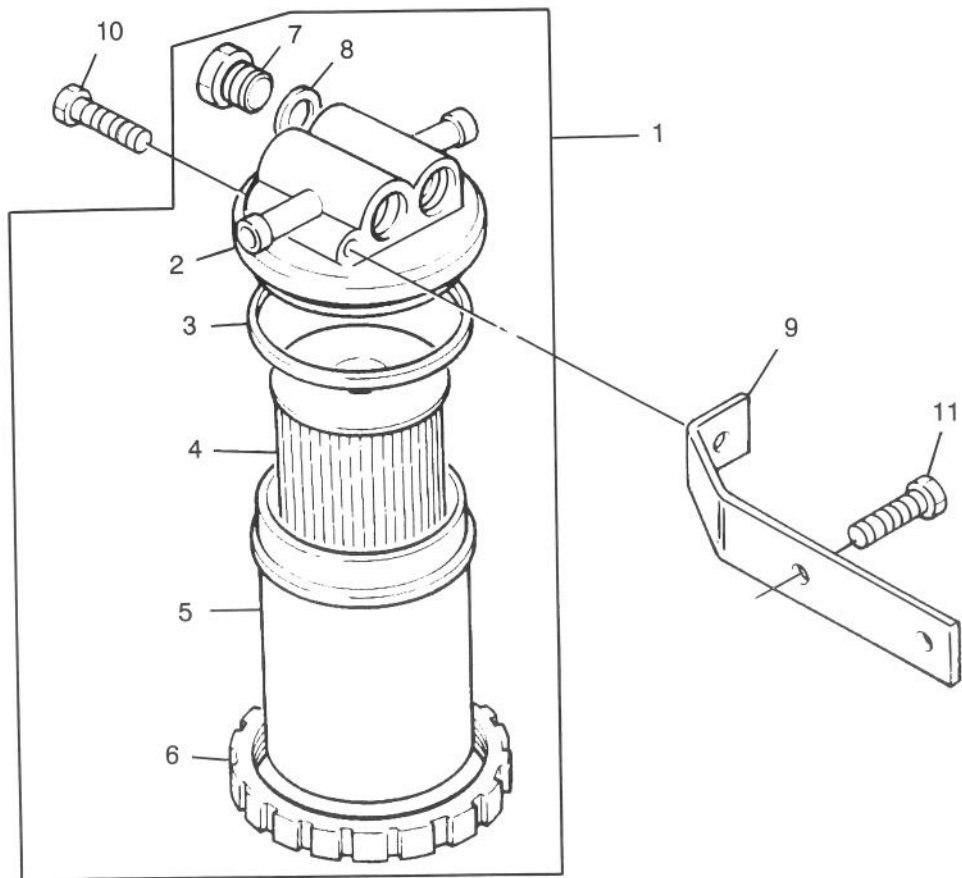 


T-1402

FUEL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	130306041	Fuel Filter Assembly (Incl. Ref. #2)	1
2		Head	1
3	052100440	Seal - O-Ring	1
4	130366040	Element	1

Ref. No.	Part No.	Description	No. Used
5	130336031	Container	1
6	130446090	Seal - O-Ring	1
7	130446080	Plug	2
8	130326120	Washer	2

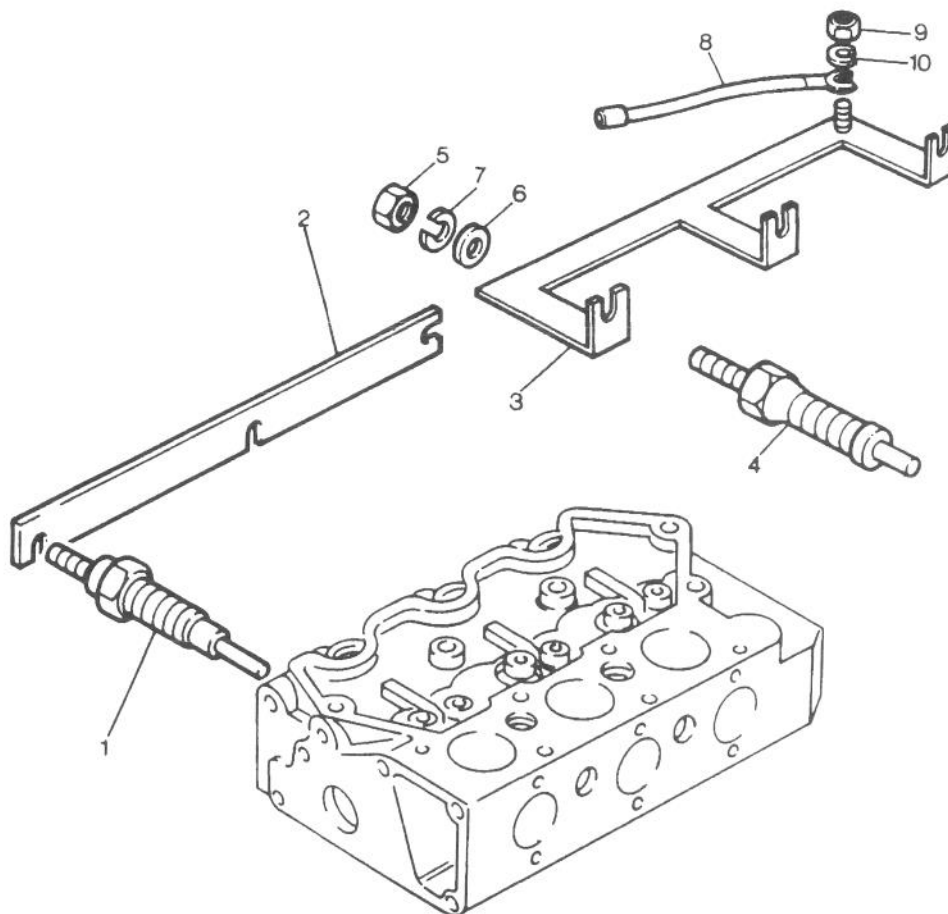 


COLD START SYSTEM ASSEMBLY

T-1403

Ref. No.	Part No.	Description	No. Used
1	185366060	Heater	3

Ref. No.	Part No.	Description	No. Used
2	185376170	Bar	1

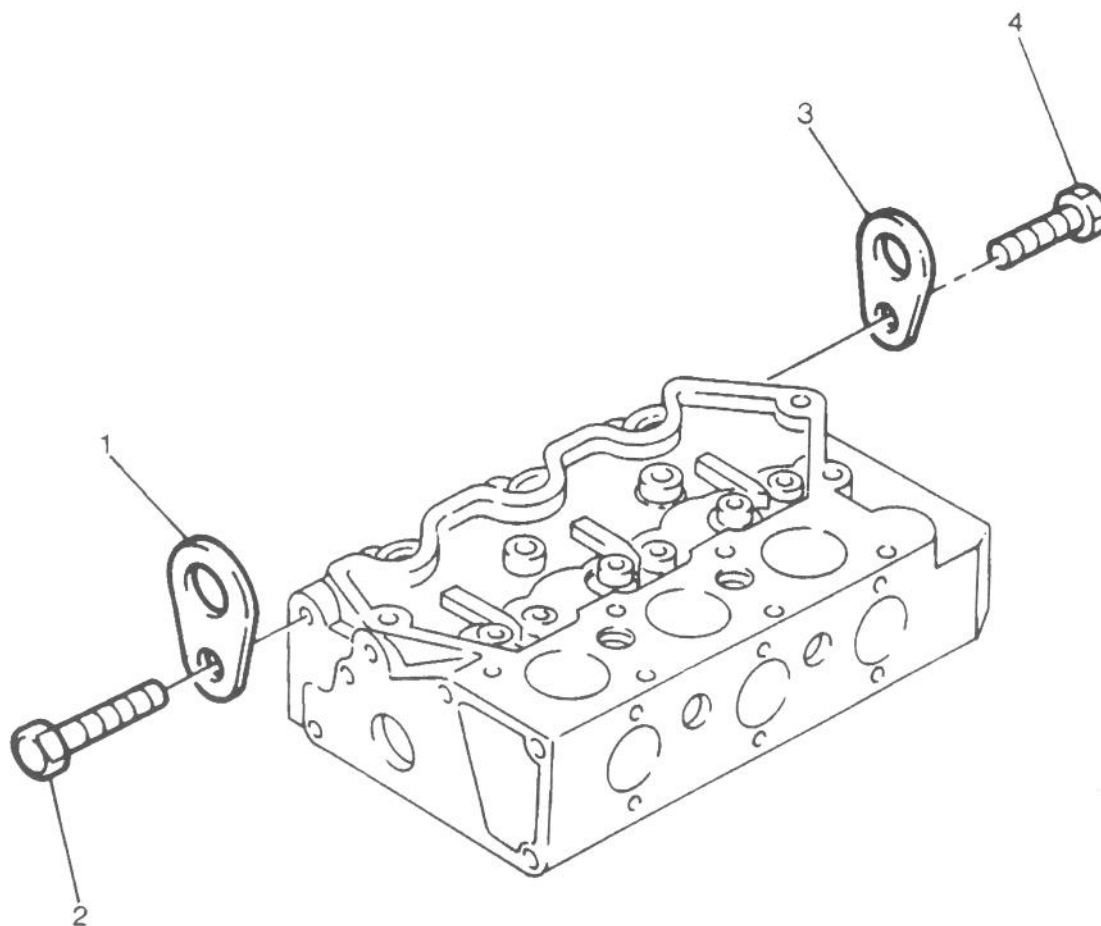 


T-1404

ENGINE LIFTING TAB ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	195816200	Plate	1
2	011310816	Screw	1

Ref. No.	Part No.	Description	No. Used
3	195816200	Plate	1
4	011310816	Screw	1

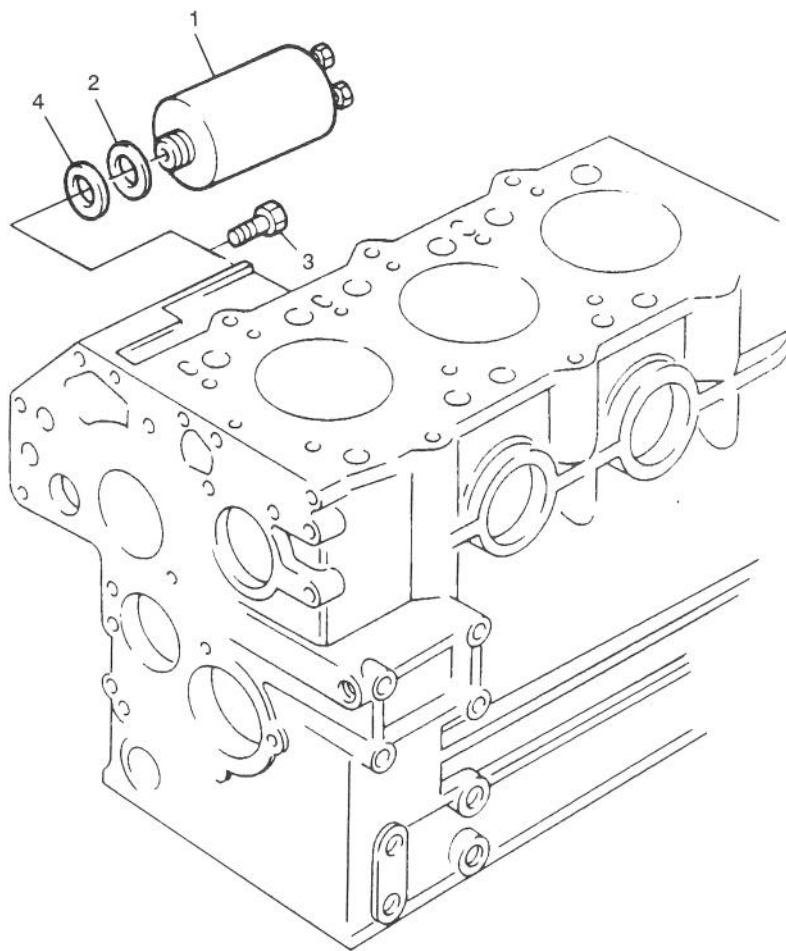 


T-1405

THROTTLE STOP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185206082	Solenoid	1

Ref. No.	Part No.	Description	No. Used
2	025100016	Washer	1

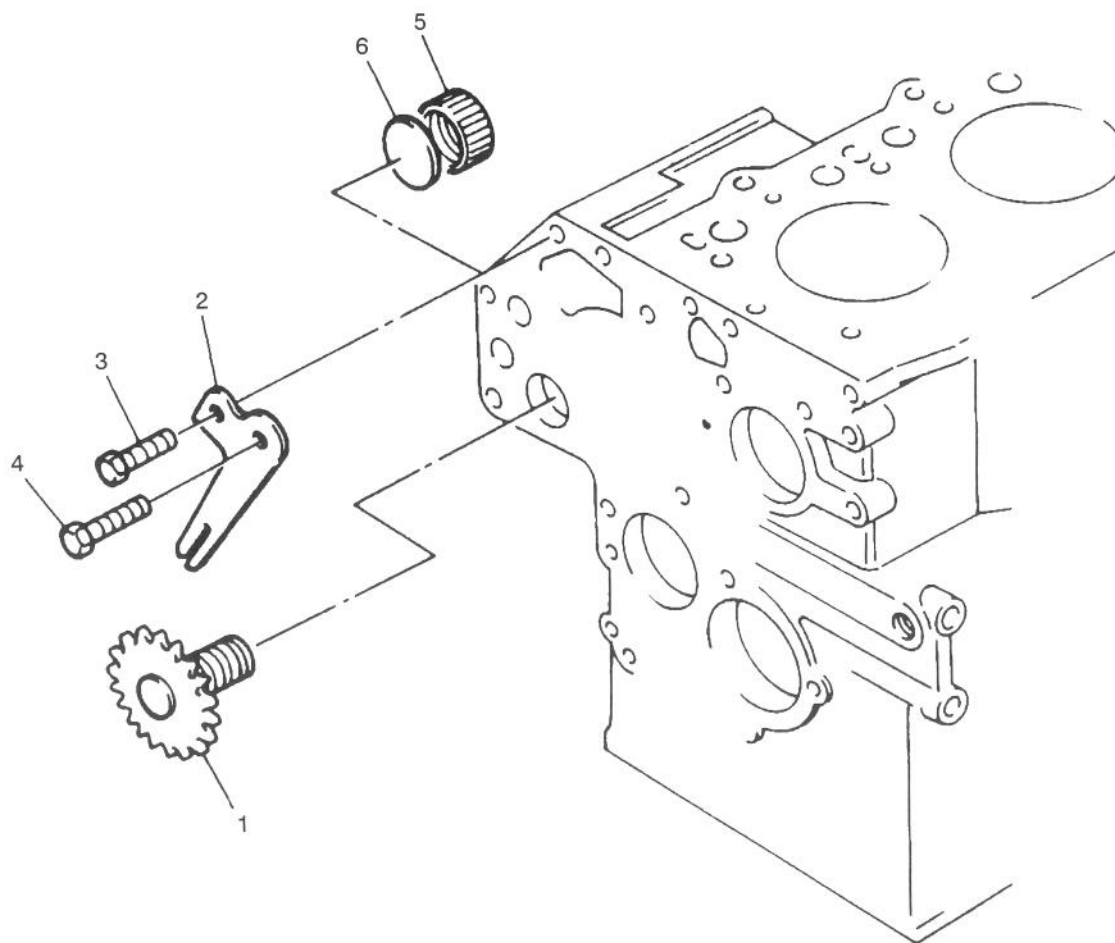 


T-1406

RECORDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	120076070	Shaft	1
2	199566651	Plate	1
3	011310612	Screw	1

Ref. No.	Part No.	Description	No. Used
4	010700610	Screw	1
5	199376230	Cap	1
6	120996060	Seal	1

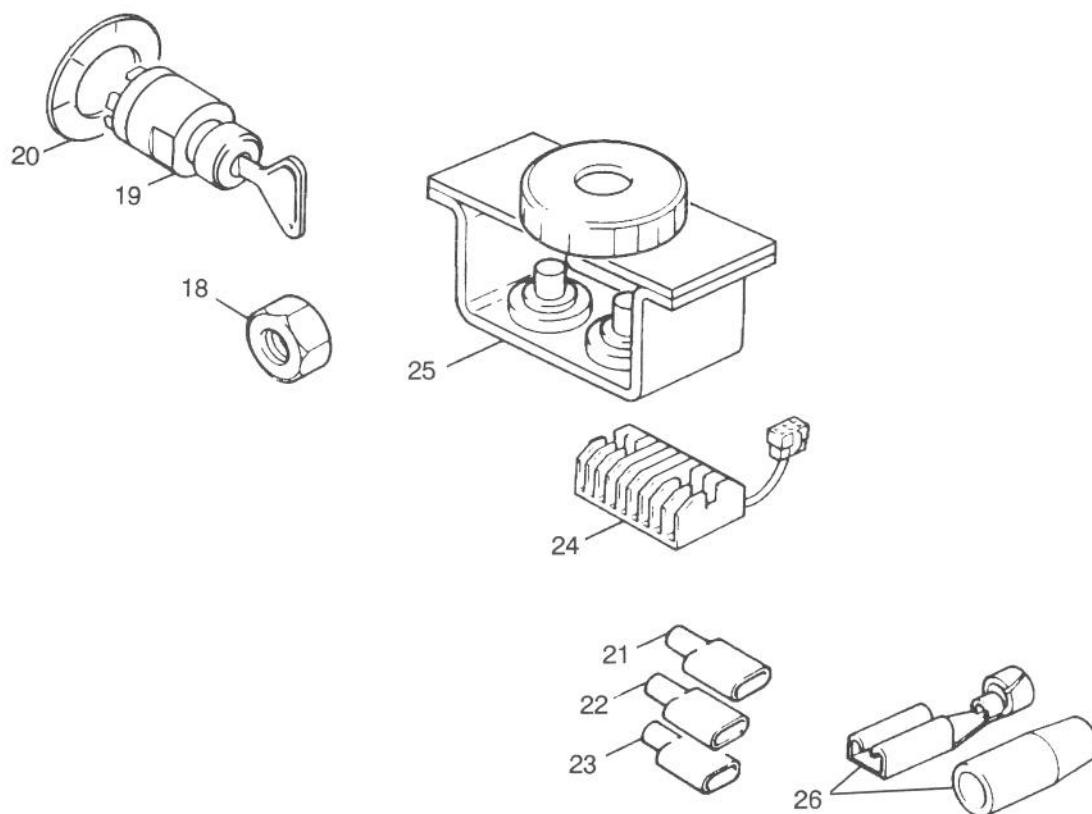 

T-1407

ELECTRICAL COMPONANT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
18	020100008	Nut	1
19	385201160	Switch	1
20	390190030	Plate	1
21	385620010	Connection	1
22	385620280	Connection	2

Ref. No.	Part No.	Description	No. Used
23	385620270	Connection	1
24	185516060	Regulator	1
26	385620200	Connection	2
28	314990013	Gasket	1

INTERNATIONAL DECAL CROSS REFERENCE

JAPANESE DECAL KIT NO. 85-5110

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	JAPANESE
Decal Control	Skirt Panel	80-4220	84-6960
Decal Service	Skirt Panel	83-8900	84-7180
Panel Starting Fluid	Control Panel	83-9150	84-6660
Decal Parking Brake	Left Fender	84-1650	84-6860
Decal Warning	Fan Top Shroud	77-3100	84-6760
Decal Warning	Skirt Panel	83-9550	84-7080
Decal Warning	Hydraulic Tank Support	67-5360	84-7280
Decal Warning	Cutting Unit Top Shields	62-5070	84-6560
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2940

ITALIAN DECAL KIT NO. 85-5120

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	ITALIAN
Decal Control	Skirt Panel	80-4220	84-6950
Decal Service	Skirt Panel	83-8900	84-7170
Panel Starting Fluid	Control Panel	83-9150	84-6650
Decal Parking Brake	Left Fender	84-1650	84-6850
Decal Warning	Fan Top Shroud	77-3100	84-6750
Decal Warning	Skirt Panel	83-9550	84-7070
Decal Warning	Hydraulic Tank Support	67-5360	84-7270
Decal Warning	Cutting Unit Top Shields	62-5070	84-6550
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2910

SWEDISH DECAL KIT NO. 85-5060

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SWEDISH
Decal Control	Skirt Panel	80-4220	84-6990
Decal Service	Skirt Panel	83-8900	84-7210
Panel Starting Fluid	Control Panel	83-9150	84-6690
Decal Parking Brake	Left Fender	84-1650	84-6890
Decal Warning	Fan Top Shroud	77-3100	84-6790
Decal Warning	Skirt Panel	83-9550	84-7110
Decal Warning	Hydraulic Tank Support	67-5360	84-7310
Decal Warning	Cutting Unit Top Shields	62-5070	84-6590
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2870

GERMAN DECAL KIT NO. 85-5050

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	GERMAN
Decal Control	Skirt Panel	80-4220	84-6940
Decal Service	Skirt Panel	83-8900	84-7160
Panel Starting Fluid	Control Panel	83-9150	84-6640
Decal Parking Brake	Left Fender	84-1650	84-6840
Decal Warning	Fan Top Shroud	77-3100	84-6740
Decal Warning	Skirt Panel	83-9550	84-7060
Decal Warning	Hydraulic Tank Support	67-5360	84-7260
Decal Warning	Cutting Unit Top Shields	62-5070	84-6540
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2900

INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

SPANISH DECAL KIT NO. 85-5070

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SPANISH
Decal Control	Skirt Panel	80-4220	84-6980
Decal Service	Skirt Panel	83-8900	84-7200
Panel Starting Fluid	Control Panel	83-9150	84-6680
Decal Parking Brake	Left Fender	84-1650	84-6880
Decal Warning	Fan Top Shroud	77-3100	84-6780
Decal Warning	Skirt Panel	83-9550	84-7100
Decal Warning	Hydraulic Tank Support	67-5360	84-7300
Decal Warning	Cutting Unit Top Shields	62-5070	84-6580
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2900

FRENCH DECAL KIT NO. 85-5040

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	FRENCH
Decal Control	Skirt Panel	80-4220	84-6930
Decal Service	Skirt Panel	83-8900	84-7150
Panel Starting Fluid	Control Panel	83-9150	84-6630
Decal Parking Brake	Left Fender	84-1650	84-6830
Decal Warning	Fan Top Shroud	77-3100	84-6730
Decal Warning	Skirt Panel	83-9550	84-7050
Decal Warning	Hydraulic Tank Support	67-5360	84-7250
Decal Warning	Cutting Unit Top Shields	62-5070	84-6530
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2800

DANISH DECAL KIT NO. 85-5130

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	DANISH
Decal Control	Skirt Panel	80-4220	84-6900
Decal Service	Skirt Panel	83-8900	84-7120
Panel Starting Fluid	Control Panel	83-9150	84-6600
Decal Parking Brake	Left Fender	84-1650	84-6800
Decal Warning	Fan Top Shroud	77-3100	84-6700
Decal Warning	Skirt Panel	83-9550	84-7020
Decal Warning	Hydraulic Tank Support	67-5360	84-7220
Decal Warning	Cutting Unit Top Shields	62-5070	84-6500
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2930

DUTCH DECAL KIT NO. 85-5080

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	DUTCH
Decal Control	Skirt Panel	80-4220	84-6910
Decal Service	Skirt Panel	83-8900	84-7130
Panel Starting Fluid	Control Panel	83-9150	84-6610
Decal Parking Brake	Left Fender	84-1650	84-8610
Decal Warning	Fan Top Shroud	77-3100	84-6710
Decal Warning	Skirt Panel	83-9550	84-7030
Decal Warning	Hydraulic Tank Support	67-5360	84-7230
Decal Warning	Cutting Unit Top Shields	62-5070	84-6510
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2920

INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

FINNISH DECAL KIT NO. 85-5090

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	FINISH
Decal Control	Skirt Panel	80-4220	84-6920
Decal Service	Skirt Panel	83-8900	84-7140
Panel Starting Fluid	Control Panel	83-9150	84-6620
Decal Parking Brake	Left Fender	84-1650	84-6820
Decal Warning	Fan Top Shroud	77-3100	84-6720
Decal Warning	Skirt Panel	83-9550	84-7040
Decal Warning	Hydraulic Tank Support	67-5360	84-7240
Decal Warning	Cutting Unit Top Shields	62-5070	84-6520
Decal Warning	Cutting Unit Lift Arms	55-4300	84-7010

NORWEGIAN DECAL KIT NO. 85-5100

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	NORWEGIAN
Decal Control	Skirt Panel	80-4220	84-6970
Decal Service	Skirt Panel	83-8900	84-7190
Panel Starting Fluid	Control Panel	83-9150	84-6670
Decal Parking Brake	Left Fender	84-1650	84-6870
Decal Warning	Fan Top Shroud	77-3100	84-6770
Decal Warning	Skirt Panel	83-9550	84-7090
Decal Warning	Hydraulic Tank Support	67-5360	84-7270
Decal Warning	Cutting Unit Top Shields	62-5070	84-6570
Decal Warning	Cutting Unit Lift Arms	55-4300	84-7000

PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-0348	Bushing	33 3 6	28-3420	Cone - Charge Relief	11 33 1
3-0348	Bushing	37 9 2	28-6180	Pin	2 23 1
3-0348	Bushing - Sleeve	26 7 4	29-6120	Plate - Pump	12 5 1
3-0348	Bushing - Sleeve	27 17 2	29-6150	Spring - Leaf	12 9 1
3-6498	Washer - Thrust	7 7 A/R	29-6163	Switch	12 28 1
3-6498	Washer - Thrust	40 15 4	29-6163	Switch - Lift	24 4 1
3-9274	Spacer - Wheel	44 2 8	29-6170	Spring - Extended Leaf	12 7 1
4-7439	Wheel Assembly	44 31 4	29-8870	Washer	34 12 1
5-0743	Spring - Extension	26 17 2	29-8870	Washer - Flat	37 16 1
5-0743	Spring - Extension	27 1 1	29-9080	Handle	48 3 1
5-2653	Cable Pulley Assembly	24 8 1	29-9090	Hose - Handle	48 4 1
5-2655	Keeper - Cable	24 7 1	31-3230	Spacer	24 24 3
5-2656	Keeper - Cable	24 30 1	33-1300	Element Assembly	4 5 1
5-2891	Shaft - Wheel	44 28 4	33-1310	Baffle	4 8 1
5-7280	Key - Square	20 1 3	33-1320	Cup	4 9 1
5-7290	Spring - Extension	13 6 1	33-1330	Nut Assembly	4 6 1
10-6821	Brake Drum Assembly	13 18 2	33-1340	Clamp Assembly	4 7 1
10-6870	Hub - Wheel	13 19 2	33-1350	Band Assembly	4 3 2
10-7070	Key - Square	20 13 1	33-1350	Clamp Assembly	3 60 2
11-9760	Screw - Hex. Flange Hd.	12 25 3	36-4310	Brush	48 5 1
12-7059	Reel Assy. - 5 Blade	38 * 1	36-7290	Spindle - Fan	18 49 1
12-7079	Reel Assy. - 5 Blade	38 57 1	37-9090	Belt - V	18 2 1
12-7089	Reel Assembly - 8 Blade	35 * 1	37-9590	Spring - Compression	2 22 1
12-7099	Reel Assembly - 8 Blade	35 54 1	39-9500	Washer - Flat	31 11 2
12-9140	Decal	48 1 1	40-3790	Bottom Rail Assembly R.H.	31 40 1
13-1699	Reel Assembly - 11 Blade	35 * 1	40-3820	Bottom Rail Assembly L.H.	31 33 1
13-1709	Reel Assembly - 11 Blade	35 * 1	42-9850	Washer	19 61 1
13-3649	Overhaul Kit	35 * 1	43-1950	Lift Valve Assembly	22 4 1
13-3649	Overhaul Kit	38 * 1	43-8600	Spring - Compression	2 28 1
20-0150	Rod End Assembly	29 5 1	43-8610	Guide - Spring	2 27 1
21-0140	Rod End Assembly	7 27 1	43-8620	Guide - Pin	2 30 1
22-8330	Plug	23 1 2	43-8860	Plunger - Switch	2 29 1
22-8340	Spring	23 3 2	43-8870	Boot - Switch	2 32 1
22-8350	Ball	23 4 2	43-9071	Seat Switch Assembly	3 * 1
22-8360	Pin - Cam	23 6 2	44-2212	Light Assembly	5 45 1
22-8370	Seat - Check Valve	23 5 2	46-8810	Stop - Spring	12 1 1
22-8380	Retainer - Spring	23 10 2	48-1800	Cylinder Block Kit	11 5 1
22-8410	Spring	23 11 1	48-7700	Screw - Cap Hex. Hd.	18 14 6
22-8420	Spool	23 8 1	48-7780	Screw - Cap Hex. Hd.	18 29 16
22-8480	Snap Ring - Spool	23 13 1	48-8010	Washer - Flat	18 41 4
22-8490	Snap Ring	23 14 1	48-9460	Screw - Cap Hex. Hd.	18 8 14
22-8500	Seal - O-Ring	23 9 2	48-9590	Washer - Lock	18 28 16
23-2140	Hose - Fuel	30 23 1	49-8480	Shaft - Trunion	11 28 1
23-3030	Spacer	23 12 1	49-8520	Kit - Implement Relief	11 * 1
24-0760	Cooler - Oil	8 20 1	51-3150	Shim - Spring	12 6 1
25-2380	Plate - Thrust	11 39 1	52-2890	Bushing - Flanged (Nylon)	34 9 2
25-2390	Plate - Valve	11 40 1	52-2890	Bushing - Flanged Nylon	37 13 2
25-2400	Gasket	11 43 1	52-2980	Pivot - Single Point Adjust	34 13 1
25-2430	Pin - Straight	11 41 1	52-2980	Pivot - Single Point Adjust	37 17 1
25-2450	Swash/Plate	11 37 1	52-2990	Capscrew - Spring Retainer	34 16 1
25-2460	Plug	11 14 2	52-2990	Capscrew - Spring Retainer	37 19 1
25-2470	Kit - Shim Pack	11 16 2	52-3000	Arm - Spring	34 17 1
25-2480	Spring - Charge Relief	11 32 1	52-3000	Arm - Spring	37 18 1
25-2490	Ball - Check Valve	11 47 2	54-0110	Element - Oil Filter	9 15 1
25-2510	Washer	11 11 2	55-4300	Decal - Warning	26 9 2
25-2530	Pin - Straight	11 26 1	55-4300	Decal - Warning	27 24 1
25-2560	Cone - Relief Valve	11 18 1	55-4330	Arm Rest Assembly L.H.	31 1 1
25-2570	Spring - Relief Valve	11 17 1	55-4331	Arm Rest Assembly R.H.	31 6 1
25-2580	Shaft - Trunion	11 12 1	55-8380	Seat Wire Assembly	31 32 1
25-2620	Valve - By-Pass	11 4 1	56-2230	Hose - Fuel	30 11 1
25-2630	Ring	11 3 1	56-2520	Valve - Fuel Shut-Off	30 9 1
25-2640	Spring - Check Valve	11 48 2	56-3800	Cushion - Seat Back	31 21 1
25-2650	Plug - Check Valve	11 50 2	56-3810	Platform - Seat	31 1 1
25-2680	Gerotor Assembly	11 25 1	56-3820	Cover - Seat Sack	31 17 1
25-2690	Housing - Charge Pump	11 21 1	56-3850	Screw - Hex. Hd. Machine	31 4 2
25-3180	Kit - Check Valve	11 * 1	56-3870	Knob - Adjustment	31 3 1
25-3210	Seal - Lip	11 10 2	56-3880	Washer - Flat	31 2 2
26-3790	Nut - Lock	13 23 2	56-3890	Nut - Hex.	31 7 1
27-1850	Washer	35 57 1	56-3900	Spacer - Arm L.H.	31 26 1
27-1850	Washer	38 61 1	56-3910	Spacer - Arm R.H.	31 1 1
27-9870	Pin - Seat	2 24 1	56-3920	Bushing - Sleeve	31 27 4

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
56-3930	Washer - Flat	31 28 4	61-0880	Left Carrier Frame Assy.	33 14 1
56-3940	Washer - Lock	31 29 4	61-0890	Bracket - Carrier	34 33 1
56-3950	Screw - Cap Hex. Hd.	31 30 4	61-0900	Bracket - Tensioner	37 3 1
56-3960	Cover - Screw	31 5 4	61-0900	Bracket - Tensioner/Carrier	34 2 1
56-3970	Carrier - Seat	31 8 2	61-0910	Bracket - Angle	36 9 4
56-3980	Clip - Rail	31 9 4	61-0910	Bracket - Angle	39 10 2
56-3990	Screw - Machine	31 39 2	61-0930	Frame - Reel	34 7 1
56-4020	Screw - Machine	31 36 4	61-0940	Sideplate - Adjust	34 40 1
56-4030	Washer - Lock	31 37 4	61-0940	Sideplate - Adjust	37 29 1
56-4040	Plate - Back	31 12 1	61-0970	Housing - Bedbar Adj.	34 43 1
56-4050	Spring - Extension	31 14 1	61-0970	Housing - Bedbar Adj.	38 44 1
56-4060	Spring - Extension	31 24 1	61-1010	Bedbar Housing	34 48 1
56-4080	Clamp - Axle	31 10 2	61-1010	Bedbar Housing	38 50 1
56-4100	Bracket - Lever	31 22 1	61-1050	Front Support - L.H.	37 8 1
56-4120	Cover	31 20 1	61-1070	Handle - Assembly	34 19 1
56-4130	Bumper	31 19 2	61-1070	Handle - Assembly	37 25 1
56-4150	Lever - Handle	31 16 1	61-1130	Rear Grass Guard	34 24 1
56-4160	Washer - Flat	31 18 2	61-1130	Rear Grass Guard	37 28 1
56-4170	Pin - Clevis	31 23 1	61-1190	Support - Basket (Front)	44 5 2
56-4190	Cap - Seat	31 25 2	61-1210	Bedbar	34 46 1
56-7976	Clamp - Hydraulic Tube	16 7 2	61-1210	Bedbar	38 49 1
56-9510	Bushing	36 17 4	61-1250	Bracket - Basket L.H.	45 25 1
56-9510	Bushing Assembly	28 10 2	61-1260	Bracket - Basket R.H.	45 4 1
56-9510	Bushing Assembly	38 45 2	61-1270	Bracket - Basket L.H.	44 22 2
56-9510	Bushing Assembly	39 18 2	61-1280	Bracket - Basket R.H.	44 4 2
56-9510	Bushing Assy.	34 38 2	61-1320	Sideplate	34 5 1
56-9520	Bushing - Flanged	34 39 2	61-1320	Sideplate - Reel	38 62 1
56-9520	Bushing - Flanged	36 16 2	61-1330	Front Grass Basket Assy.	44 3 2
56-9520	Bushing - Flanged	38 46 2	61-1340	Rear Grass Basket Assy.	45 14 1
56-9520	Bushing - Flanged	39 17 1	61-1370	Spacer	33 5 6
56-9520	Bushing - Nyliner	28 16 1	61-1950	Washer - Bedbar	34 47 1
57-4910	Screw - Special	34 44 10	61-1950	Washer-Bedbar	38 53 1
57-4910	Screw - Special	38 47 10	61-1960	Axle - Wheel	29 7 1
57-5190	Screw - Adjustment	34 49 2	61-2010	Pinion - Steering	7 15 1
57-5190	Screw - Adjustment	38 51 2	61-2040	Rack - Steering	7 4 1
57-5260	Pin - S.P.A.	34 22 1	61-2070	Rod - Steering	7 5 1
57-5260	Pin - S.P.A.	37 27 1	61-2070	Rod - Steering	29 18 1
57-5270	Spring - Compression	34 11 1	61-2080	Shaft - Steering	7 18 1
57-5270	Spring - Compression	37 15 1	61-2090	Steering Column Assembly	7 21 1
57-5420	Screw - Shoulder	9 5 1	61-2350	Support - Bearing	20 6 2
57-6390	Nut	19 60 1	61-2370	Spacer	12 16 2
59-2150	Taper Lock Bushing Assy.	10 20 1	61-2430	Hub - Lift	24 45 1
61-0140	Pulley - Reel	20 4 3	61-2610	Arm - Traction	12 14 1
61-0380	Cap - Full Roller	40 1 2	61-2790	Screen - Filler	9 8 1
61-0380	Cap - Roller	36 11 2	61-2830	Lift Arm Assembly R.H.	26 * 1
61-0380	Cap - Roller	39 11 2	61-2880	Lift Arm Assembly L.H.	26 8 1
61-0400	Shaft - Full/Wiehle Roller	40 2 2	61-2890	Lift Arm Assembly	27 29 1
61-0400	Shaft - Roller	36 12 1	61-2900	Shaft - Pivot R.H.	26 * 1
61-0400	Shaft - Roller	39 12 1	61-2930	Shaft - Pivot	27 7 1
61-0410	Full Roller Assembly	36 * 1	61-2930	Shaft - Pivot L.H.	26 29 1
61-0410	Full Roller Assembly	40 * 1	61-2990	Spacer - Switch	24 3 1
61-0410	Roller Assembly	39 * 1	61-3000	Rod - Pivot	26 13 2
61-0420	Support - HOC	36 5 4	61-3000	Rod - Pivot	27 26 1
61-0420	Support - HOC	39 6 2	61-3160	Hanger - Basket (Front)	44 7 2
61-0430	Bracket - Rear	36 15 2	61-3170	Baffle - Grass	44 24 2
61-0430	Bracket - Rear	39 16 2	61-3170	Baffle - Grass	45 11 1
61-0440	Bracket - Front	36 23 2	61-3210	Cable Pulley Assembly	24 22 3
61-0500	Spacer - Bearing	37 32 1	61-3240	Keeper - Cable	24 21 1
61-0500	Spacer - Reel	34 32 1	61-3270	Spring - Compression	26 6 2
61-0550	Shield - Top	37 23 2	61-3280	Cover - End	44 14 4
61-0560	Shield - Top	34 27 1	61-3290	Cover - Middle	44 12 4
61-0590	Scraper - Roller	41 1 3	61-3360	Joint - Universal	7 17 1
61-0610	Guard - Side	37 37 1	61-3380	V-Belt	37 5 1
61-0660	Reel Frame	38 58 1	61-3380	V-Belt - Reel	34 4 1
61-0670	Rear Support	37 * 1	61-3600	Tab - Lift	33 13 3
61-0710	Bushing Assembly	33 7 6	61-3660	Front Support - R.H.	37 * 1
61-0750	Defector - Grass	44 10 2	61-3790	Plate - HOC Front	36 10 2
61-0790	Screw - Cap Hex Hd.	36 4 4	61-3800	Plate - HOC Rear	36 3 2
61-0790	Screw - Cap Hex. Hd.	39 5 2	61-3810	Plate - HOC	39 4 2
61-0860	Right Carrier Frame Assy.	33 10 1	61-3820	Retainer - Cable	27 21 1
61-0870	Rear Carrier Frame Assy.	33 1 1	61-3830	Chain - Lift	24 33 2

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
61-3990	Parking Brake Assembly	13 5 1	67-8050	Bearing - Needle	11 22 1
61-7250	Boot	26 5 4	67-8060	Seal - Lip	11 23 1
62-4290	O-Ring	11 44 2	67-8080	Bearing - Needle	11 42 1
62-4970	Sectional Roller Assembly	40 * 1	67-8090	Cap - Pump End	11 45 1
62-4990	Shaft - Anti-Scalp Roller	40 11 1	67-9430	Plate - Comb	42 4 1
62-5070	Decal - Warning	35 59 1	67-9450	Support - Comb	42 2 1
62-5070	Decal - Warning	38 66 1	67-9470	Comb	42 3 1
62-5070	Decal - Warning	44 11 2	67-9760	Washer	34 36 2
62-5130	Flap - Rubber	45 16 1	67-9760	Washer - Flat	37 33 2
62-5180	Bedknife - 7 In. Reel	34 45 1	68-4210	Spacer - Wheel	29 8 2
62-5180	Bedknife - 7 In. Reel	38 48 1	68-8990	Head - Oil Filter	9 19 1
62-5510	Rubber Bushing Assembly	34 8 2	69-0760	Bracket - Arm L.H.	32 1 1
62-5510	Rubber Bushing Assembly	37 12 2	69-0770	Bracket - Arm R.H.	32 9 1
62-7120	Spacer	35 60 1	69-1170	Glass - Sight	9 2 1
62-7120	Spacer	38 65 1	69-1180	Armrest	32 11 2
62-7170	Spacer	2 43 1	69-1260	Spacer	32 10 4
62-7230	Hanger - Adjustable (Front)	44 17 2	69-4780	Clamp - Light Cluster	5 43 1
62-7240	Cover - Spring	27 2 1	70-8150	Plate - Valve	15 7 1
62-7250	Boot	27 18 2	70-8621	Cap - Fuel Tank	30 12 1
62-7300	Chain	27 3 1	70-8640	Cap - Hydraulic Reservoir	9 7 1
62-7400	Decal - TORO	1 10 1	70-9840	Shoe - Brake	13 16 4
62-7410	Wiehle Roller Assembly	40 * 1	70-9850	Clip - Retaining	13 35 2
62-7480	Bracket - Hanger	45 22 1	70-9860	Pin - Pivot Brake	13 25 2
62-7660	Washer - Shim	40 6 2	70-9870	Plate - Brake	13 27 2
62-7660	Washer - Shim (not used)	36 24 2	70-9880	Spring - Extension	13 17 4
62-7670	Shock Absorber - Seat	31 13 1	71-1370	Spring - Compression	24 35 1
62-9510	Washer - Flat	18 50 1	71-1380	Pin - Spring	24 34 1
63-1400	Guide - Cable	24 28 1	71-1500	Brake Assembly	14 * 2
63-4220	Spring - Compression	45 21 1	71-3382	Hose - Overflow	8 11 1
63-5060	Roller - Anti-Scalp	40 17 2	71-3590	Nut - Adjustment	36 19 2
63-5090	Anti-Scalp Roller Assembly	40 * 1	71-3590	Nut - Adjustment	39 20 2
63-7430	Temperature Gauge Assy.	5 17 1	71-3590	Nut - Adjustment	40 8 8
63-7590	Relay	2 39 1	71-3690	Pin - HOC	36 7 4
63-7590	Relay	5 34 1	71-3690	Pin - HOC	39 8 2
63-7620	Hose - Fuel	18 18 1	72-4190	Pin - Cylinder Guide	24 12 1
63-7620	Hose - Fuel	30 5 1	72-4320	Switch - Seat	2 25 1
63-8140	Pulley - Idler	18 3 1	72-4770	Belt - V	43 2 3
63-8410	Washer - Flat	9 10 3	74-0720	Tube - Manual	2 14 1
63-8410	Washer - Flat	30 17 3	74-6110	Cam - Stop	12 35 1
63-8740	Strap - Basket	45 17 1	74-9100	Pad - Forward	12 11 1
65-4500	Seal - Snap Ring	15 14 1	74-9110	Pad - Reverse	12 13 1
65-4550	Valve - Check Ball	15 6 2	75-0540	Teather - Cap	9 4 1
65-4560	Plug - Hex (Hollow)	15 3 1	75-4703	Hose - Fuel	18 25 1
65-4570	Seal - Square Ring	15 4 2	75-4703	Hose - Fuel	30 15 1
65-4580	Screw - Cap Hex Hd.	15 1 8	75-4710	Harness - Warning Light	5 5 1
65-4590	Ring - Snap	15 21 1	75-6820	Hourmeter	5 3 1
65-4600	Washer - Thrust	15 19 2	75-7730	Spacer	29 2 1
65-4610	Bearing - Thrust	15 20 1	76-0020	Hydraulic Cylinder Assembly	24 37 1
65-4620	Seal - O-Ring	15 12 1	76-0030	Repair Kit	25 * 1
65-4640	Key - Square	13 10 2	76-0040	Piston	25 8 1
65-4640	Key - Square	15 11 1	76-0050	Ring - Retaining	25 12 1
65-4660	Shaft	15 10 1	76-0090	Head	25 3 1
65-4670	Body & Bearing Assembly	15 9 1	76-0300	Housing - Bushing	28 12 1
65-4680	Cover & Bearing Assembly	15 2 1	76-0350	Housing - Bushing	28 2 1
65-8270	Waher	19 57 1	76-0360	Cup - Retainer	28 6 1
66-2920	Spacer	12 36 1	76-0370	Bolt - Shoulder	26 23 2
66-2960	Cluster - Warning	5 7 1	76-0370	Bolt - Shoulder	27 12 2
66-3240	Cap - Radiator	8 9 1	76-0390	Spacer	28 15 1
66-5291	Hydraulic Motor Assembly	13 30 2	76-0410	Spring - Compression	28 7 1
66-5400	Seat Assembly	32 * 1	76-1420	Wheel - Steering	7 23 1
66-6110	IGR Assembly	15 5 1	76-2200	Footrest - Traction	1 5 1
67-5360	Decal - Danger	3 57 1	76-2230	Seat Assembly	31 * 1
67-5800	Flap - Basket Rear	45 23 1	76-2240	Cushion - Seat Bottom	31 31 1
67-5840	Nut - Jam	35 56 1	76-2260	Pad - Footrest Traction	1 6 1
67-5840	Nut - Jam	38 60 1	76-2290	Spacer	38 68 1
67-5890	Hanger - Basket Rear	45 9 1	76-2320	Shaft	25 4 1
67-5910	Plate - Rear	45 8 1	76-2330	Nut - Lock	25 5 1
67-5920	Support - Basket Rear	45 10 1	76-2350	Seal/Retainer Assembly	15 * 1
67-8020	Shaft - Pump	11 6 1	76-2360	Body Seal Kit	15 * 1
67-8030	Plug Assembly	11 19 1	76-2380	Shaft - Sectional Roller	40 18 1
67-8040	O-Ring	11 20 1	76-2400	Roller - Sectional	40 14 2

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
76-2430	Bracket - Debris Cleaner	35 64 1	83-8400	Pulley - Idler	20 20 1
76-2430	Bracket - Debris Cleaner	38 73 1	83-8410	Pulley - Engine	18 48 1
76-2430	Scraper - Pulley	26 2 2	83-8420	Pulley - Clutch	20 36 1
76-2440	Support - Debris Cleaner	35 65 1	83-8470	Bracket - Engine Mount	19 56 2
76-2440	Support - Debris Cleaner	38 74 1	83-8490	Belt - Drive	20 37 1
76-2460	Bearing Assembly	20 7 2	83-8500	Muffler	18 52 1
76-2490	Flange - Bearing (Lube)	34 31 2	83-8510	Bracket - Fender L.H.	1 22 1
76-2490	Flange - Bearing (Lube)	37 39 2	83-8540	Belt - Pump Drive	10 21 1
76-2500	Flange - Bearing	34 29 2	83-8550	Hose - Air Cleaner	2 49 1
76-2500	Flange - Bearing	37 41 2	83-8550	Hose - Air Intake	18 13 1
76-2670	Plate - Seat Mounting	2 8 1	83-8590	Cable - Lift	24 19 1
76-6365	Trim	8 44 1	83-8620	Bracket - Idler	20 18 1
76-6366	Trim	8 45 1	83-8630	Yoke - Belt Tension	20 22 1
76-6471	Trim - Control Panel Bottom	2 41 1	83-8720	Tank - Fuel	30 13 1
77-3100	Decal - Warning	8 4 1	83-8760	Rod - Control	12 20 1
80-4130	Bushing	3 59 4	83-8770	Lever - Pump	12 23 1
80-4250	Adjuster - R.H.	32 7 1	83-8850	Grille - Front	1 29 1
80-4260	Adjuster - L.H.	32 3 1	83-8860	Shield - Grass Front R.H.	1 30 1
80-4270	Pulley - Reel	34 3 1	83-8880	Panel - Skirt	2 12 1
80-4280	Pulley - Reel, 5 Blade	37 4 1	83-8890	Decal - Reelmaster 216-D	2 19 2
80-4290	Pulley - Reel	43 1 3	83-8900	Decal - Service Information	2 50 1
80-4690	Support - Scraper	42 7 2	83-8910	Ignition Switch Assembly	5 28 1
80-6980	Latch - Hood	5 12 1	83-8920	Harness - Wire	5 40 1
80-6990	Washer	24 18 4	83-8930	Regulator - Voltage	2 38 1
80-7345	Hose	5 29 1	83-8970	Fitter - Fuel	30 1 1
81-1690	Clamp - Throttle Cable	18 21 1	83-9000	Battery	30 6 1
82-2400	Whehle Roller Weld Assy.	40 10 1	83-9020	Belt - V	18 38 1
82-3110	Sensor - Temp	18 16 1	83-9030	Foam - Top	8 36 1
83-7340	Fork - Caster	29 6 1	83-9050	Hose - Radiator	8 34 1
83-7540	Engine Assembly	18 54 1	83-9060	Hose - Radiator	8 28 1
83-7550	Radiator Assembly	8 35 1	83-9070	Hose - Coolant	18 11 1
83-7560	Fan	18 39 1	83-9070	Hose - Radiator	8 31 1
83-7570	Frame Assembly	7 12 1	83-9080	Connector - Bleed	8 30 1
83-7590	Pulley - Engine	19 55 1	83-9130	Keeper - Cable	24 27 1
83-7610	Hub - Fan	18 44 1	83-9140	Clutch Assembly	20 39 1
83-7620	Spacer - Fan	18 42 1	83-9150	Decal - Starting Fluid	2 10 1
83-7630	Pulley - Fan	18 43 1	83-9170	Right Channel Assembly	2 44 1
83-7690	Bracket - Idler	18 5 1	83-9210	Cable - Battery Neg.	30 8 1
83-7700	Bracket - Alternator	18 34 1	83-9210	Cable - Ground	18 31 1
83-7720	Reservoir - Hydraulic	9 1 1	83-9220	Cable - Battery Pos.	30 7 1
83-7780	Bracket - Support	9 24 1	83-9240	Hold-Down - Battery	30 21 1
83-7790	Collar	20 11 2	83-9250	Lever - Brake	13 36 2
83-7800	Sleeve	20 40 1	83-9270	Pivot - Brake L.H.	13 40 1
83-7810	Spacer	20 35 2	83-9310	Pivot - Brake R.H.	13 * 1
83-7820	Shaft - Drive	20 2 1	83-9330	Shaft - Brake	13 41 1
83-7830	Retainer - Clutch	20 15 1	83-9340	Shield - Grass	13 13 2
83-7840	Shroud - Fan Top	8 5 1	83-9350	Rod - Parking Brake	13 1 1
83-7850	Shroud - Fan Bottom	8 32 1	83-9390	Weight	46 1 1
83-7900	Belt Tensioner Assembly	26 24 2	83-9440	Hydraulic Tube Assembly	16 2 1
83-7900	Belt Tensioner Assembly	27 11 2	83-9450	Tube - Hydraulic	16 10 1
83-7910	Rod	28 8 1	83-9470	Hydraulic Tube Assembly	16 1 1
83-7930	Yoke	28 3 1	83-9480	Tube - Hydraulic	16 8 1
83-7950	Hood	1 11 1	83-9550	Decal - Warning	2 11 1
83-7970	Fitting - Hydraulic Bulkhead	8 39 2	83-9600	Hose - Hydraulic	10 7 2
83-7980	Bracket - Radiator Rear	8 12 1	83-9600	Hose - Hydraulic	16 13 2
83-7990	Bracket - Radiator Front	8 33 1	83-9610	Hose - Hydraulic	22 12 1
83-8040	Cover - Left	8 8 1	83-9610	Hose - Hydraulic	24 41 1
83-8070	Bracket - Radiator Bottom	8 18 1	83-9620	Hose - Hydraulic	22 13 1
83-8080	Key - Square	20 38 1	83-9620	Hose - Hydraulic	24 42 1
83-8110	Panel - Left	2 45 1	83-9630	Hose - Hydraulic	10 28 1
83-8120	Panel - Right Rear	2 4 1	83-9630	Hose - Hydraulic	22 8 1
83-8150	Screen - Radiator	8 17 1	83-9640	Hose - Hydraulic	10 25 1
83-8180	Decal - Instrument Panel	5 2 1	83-9640	Hose - Hydraulic	22 14 1
83-8190	Panel - Control	2 5 1	83-9650	Hose - Hydraulic	9 21 1
83-8190	Panel - Instrument	5 1 1	83-9650	Hose - Hydraulic	10 1 1
83-8210	Panel - Front Left	8 22 1	83-9651	Hose - Hydraulic	9 14 1
83-8220	Bracket - Muffler	18 51 1	83-9660	Clevis	10 23 1
83-8230	Panel - Right Front	2 2 1	83-9670	Hose - Hydraulic	8 27 1
83-8270	Pedal - Traction	12 12 1	83-9670	Hose - Hydraulic	9 27 1
83-8280	Throttle Assembly	5 30 1	83-9670	Hose - Hydraulic	10 10 1
83-8320	Mount - Pump	10 12 1	83-9680	Screw - Cap Hex. Hd.	20 27 1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
83-9690	Spring - Compression	20 26 1	237-42	Seal - O-Ring	22 5 1
83-9700	Fender - L.H.	1 15 1	237-42	Seal - O-Ring	23 2 2
83-9710	Footrest - L.H.	1 17 1	237-42	Seal - O-Ring	24 38 2
83-9720	Fender - R.H.	1 1 1	237-65	Seal - O-Ring	13 44 2
83-9730	Step - Foot	2 36 1	237-65	Seal - O-Ring	16 11 2
83-9740	Footrest - R.H.	1 4 1	237-71	Seal - O-Ring	2 42 1
83-9760	Bracket - Cylinder Support	24 1 1	237-78	Seal - O-Ring	14 46 2
83-9800	Shield - Grass Front L.H.	1 20 1	237-78	Seal - O-Ring	16 16 2
83-9810	Bushing - Flange	20 24 1	237-78	Seal - O-Ring	22 10 2
83-9840	Pad - Footrest L.H.	1 18 1	237-79	Seal - O-Ring	9 18 1
83-9880	Bracket - Fan Spindle	18 47 1	237-79	Seal - O-Ring	10 4 4
83-9910	Gasket - Muffler	19 58 1	237-80	Seal - O-Ring	13 9 4
83-9920	Bracket - Reservoir	9 13 1	237-81	Seal - O-Ring	9 3 4
83-9970	Latch - Hood	1 12 1	237-86	O-Ring	11 15 2
84-1650	Decal - Brake	1 19 1	237-95	O-Ring	11 27 1
84-1990	Rod - Adjusting	13 32 2	240-11	Grommet	9 9 3
84-2000	Bracket - Brake	13 29 2	240-11	Grommet	30 16 3
84-5560	Gear - Reel Shaft	47 5 3	240-13	Bumper	20 16 2
84-5570	Plate - Attachment	47 * 2	241-129	Rim	29 11 1
84-5580	Plate - Attachment	47 3 1	241-130	Spacer - Bearing	29 10 1
84-5590	Gear - Driver	47 1 1	242-50	Nut - Lug	13 22 8
84-7770	Field & Rotor Assembly	21 1 1	249-53	Clamp - J	18 15 1
84-7780	Armature Assembly	22 2 1	2410-18	Plug	48 2 1
84-8440	Bushing - Flange	24 11 2	2410-73	Retainer - Teather	9 6 1
85-4870	Support - Hinge	1 26 1	2411-52	End - Rod	12 17 1
85-4890	Hinge - Hood	1 31 1	2411-53	End - Rod	12 22 1
85-4910	Air Cleaner (Complete)	4 * 1	2412-34	Clamp - Hose	8 29 5
85-4910	Air Cleaner Assembly	2 47 1	2412-34	Clamp - Hose	10 2 1
85-4920	Hydraulic Pump Assembly	10 30 1	2412-34	Clamp - Hose	18 10 2
85-4920	Hydraulic Pump Assembly	11 8 1	2412-36	Clamp - Hose	9 26 1
85-4940	Hose - Hydraulic	16 17 1	2412-36	Clamp - Hose	10 9 1
85-4960	Pulley	10 16 1	2412-36	Clamp - Hose	30 10 2
85-4980	Switch Assembly	5 24 1	2412-39	Clamp - R	2 17 3
85-4990	Hose - Hydraulic	16 18 1	2412-39	Clamp - R	16 19 1
85-4990	Hose - Hydraulic	22 20 1	2412-39	Clamp - R	18 35 2
85-5000	Plate - Throttle	5 36 1	2412-41	Clamp - R	8 15 1
85-5010	Bracket - Right Front	3 54 1	2412-67	Clamp - R	31 41 1
85-5030	Hose - Hydraulic	8 24 1	2412-74	Clamp - R	8 3 1
85-5140	Foam - Hood	3 56 2	2412-92	Clamp - Hose	2 48 1
85-5160	Lever - Lift Valve	22 2 1	2412-92	Clamp - Hose	18 12 1
85-5170	Sleeve	8 41 1	2412-108	Clamp - Hose	8 10 1
85-5180	Trim	2 51 2	2412-108	Clamp - Hose	18 17 2
85-6540	Stud - Drive	13 26 8	2412-108	Clamp - Hose	30 4 4
217-60	Rim	13 21 2	2412-133	Clamp - R	2 16 2
218-461	Nut - Hex.	2 33 2	251-8	Bearing - Ball	11 35 1
218-469	Fuse - 15 Amp.	5 10 2	251-77	Collar - Locking	20 9 2
218-489	Fuse Holder Assembly	5 9 2	251-259	Bearing - Ball	12 31 1
218-500	Nut - Hex.	5 22 2	251-270	Bearing - Ball	47 2 1
218-562	Lens - Light	5 47 1	251-321	Bearing - Wheel	29 9 2
218-596	Tab	12 37 2	251-331	Bearing	34 30 2
219-17	Bulb - Light	5 6 4	251-331	Bearing	37 40 2
219-18	Bulb - Light	5 46 1	251-337	Bearing - Ball	20 8 2
231-122	Tire	29 13 1	252-82	Bearing - Needle	11 9 2
231-127	Tire	13 20 2	252-112	Cone - Bearing (Inner)	40 12 2
232-14	Screw - Cap Hex. Hd.	46 * 3	253-84	Seal	34 20 1
232-27	Valve - Stem	13 24 2	253-84	Seal	37 22 1
232-47	Valve - Stem	29 12 1	253-152	Seal - Inner	36 22 2
233-37	Knob	22 1 1	253-152	Seal - Inner	39 13 2
237-7	Seal - O-Ring	2 31 1	253-152	Seal - Inner	40 3 2
237-21	Seal - O-Ring	14 47 3	253-153	Seal - Outer	36 20 2
237-21	Seal - O-Ring	22 18 2	253-153	Seal - Outer	39 21 2
237-22	O-Ring	11 2 1	253-153	Seal - Outer	40 7 6
237-22	Seal - O-Ring	22 7 4	254-78	Cone - Bearing	36 21 2
237-22	Seal - O-Ring	24 40 2	254-78	Cone - Bearing	39 22 2
237-30	Seal - O-Ring	2 26 1	254-78	Cone - Bearing (Outer)	40 5 6
237-30	Seal - O-Ring	8 38 2	254-79	Cup - Bearing	36 13 2
237-30	Seal - O-Ring	10 6 4	254-79	Cup - Bearing	39 14 2
237-30	Seal - O-Ring	13 7 2	254-79	Cup - Bearing (Outer)	40 4 8
237-30	Seal - O-Ring	16 3 4	256-1	Bushing - Sleeve	24 23 3
237-37	Bumper - Rubber	2 6 2	256-2	Bushing - Sleeve	24 44 1
237-42	Seal - O-Ring	10 27 2	256-27	Bushing - Sleeve	7 19 2

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
256-90	Bushing - Flange	44 30 8	322-9	Screw - Cap Hex. Hd.	12 18 2
256-115	Washer - Thrust	26 12 2	322-9	Screw - Cap Hex. Hd.	16 5 2
256-115	Washer - Thrust	27 25 1	322-12	Screw - Cap Hex. Hd.	7 26 1
256-117	Bushing - Flange	7 8 4	322-17	Screw - Cap Hex. Hd.	12 8 1
256-117	Bushing - Flanged	40 16 4	322-17	Screw - Cap Hex. Hd.	13 2 1
256-173	Bushing - Sleeve	28 11 1	322-17	Screw - Cap Hex. Hd.	20 31 9
256-245	Bushing - Flange	7 9 2	323-5	Screw - Cap Hex. Hd.	9 11 3
256-247	Bushing - Flange	7 13 2	323-5	Screw - Cap Hex. Hd.	30 18 3
256-285	Bushing - Flange	33 6 12	323-6	Screw - Cap Hex. Hd.	36 1 8
256-287	Bushing - Flange	7 14 2	323-6	Screw - Cap Hex. Hd.	34 23 6
256-320	Bushing	1 32 2	323-6	Screw - Cap Hex. Hd.	37 6 8
257-5	Washer - Thrust	34 21 4	323-6	Screw - Cap Hex. Hd.	39 2 5
257-5	Washer - Thrust	37 21 4	323-7	Screw - Cap Hex. Hd.	26 28 2
257-6	Bearing - Thrust	34 18 2	323-7	Screw - Cap Hex. Hd.	27 8 1
257-6	Bearing - Thrust	37 26 2	323-7	Screw - Cap Hex. Hd.	35 55 5
2710-16	Connecting Link Assembly	22 3 1	323-7	Screw - Cap Hex. Hd.	38 59 2
281-1	Plug - Pipe	8 37 2	323-7	Screw - Cap Hex. Hd.	39 1 3
281-7	Plug - Pipe	8 1 1	323-7	Screw - Cap Hex. Hd.	41 2 6
282-2	Clevis	13 34 2	323-7	Screw - Cap Hex. Hd.	42 5 2
282-4	Clevis	24 31 4	323-7	Screw - Cap Hex. Hd.	44 20 8
282-4	Clevis	26 21 2	323-7	Screw - Cap Hex. Hd.	45 2 4
282-4	Clevis	27 5 1	323-7	Screw - Cap Hex. Hd.	47 4 6
283-1	Pin - Clevis	13 37 2	323-9	Screw - Cap Hex. Hd.	37 1 1
283-1	Pin - Clevis	27 20 1	323-9	Screw - Cap Hex. Hd.	32 13 2
283-2	Pin - Clevis	10 24 1	323-10	Screw - Cap Hex. Hd.	46 5 2
283-6	Pin - Clevis	24 14 4	323-10	Screw - Cap Hex. Hd.	46 2 3
283-6	Pin - Clevis	26 20 2	323-11	Screw - Cap Hex. Hd.	11 46 4
283-6	Pin - Clevis	27 6 1	323-12	Screw - Cap Hex. Hd.	37 10 1
283-8	Pin - Clevis	26 26 2	323-13	Screw - Cap Hex. Hd.	24 46 1
283-8	Pin - Clevis	27 32 1	323-15	Screw - Cap Hex. Hd.	20 19 1
283-40	Pin - Clevis	26 3 2	323-17	Screw - Cap Hex. Hd.	24 20 2
283-40	Pin - Clevis	27 14 2	325-7	Screw - Cap Hex. Hd.	10 13 2
283-42	Pin - Clevis	24 9 1	325-7	Screw - Cap Hex. Hd.	29 1 1
283-49	Pin - Clevis	2 7 2	325-10	Screw - Cap Hex. Hd.	33 8 2
283-55	Pin - Clevis	28 5 1	325-11	Screw - Cap Hex. Hd.	13 28 8
283-62	Pin - Clevis	18 19 1	325-18	Screw - Cap Hex. Hd.	10 15 1
283-78	Pin - Clevis	24 36 1	3210-7	Screw - Cap Hex. Hd.	12 30 1
285-17	Plug - Pipe	11 1 6	3211-4	Screw - Cap Hex. Hd.	34 34 2
302-5	Fitting - Grease	7 24 3	3211-4	Screw - Cap Hex. Hd.	37 35 2
302-5	Fitting - Grease	20 33 2	3212-34	Clamp - Hose	9 16 3
302-5	Fitting - Grease	28 14 1	3217-6	Nut	34 42 1
302-5	Fitting - Grease	29 3 2	3217-6	Nut	37 43 1
302-5	Fitting - Grease	33 2 3	3217-6	Nut - Hex.	1 23 4
302-5	Fitting - Grease	34 15 1	3217-16	Nut - Lock	12 3 2
302-5	Fitting - Grease	36 18 2	3218-2	Nut - Hex.	1 9 2
302-5	Fitting - Grease	37 7 2	3218-3	Nut - Jam	7 3 2
302-5	Fitting - Grease	39 19 2	3218-3	Nut - Jam	35 68 1
302-5	Fitting - Grease	40 9 8	3218-3	Nut - Jam	38 77 1
302-11	Fitting - Grease	34 * 2	3218-3	Nut - Jam	41 4 6
302-11	Fitting - Grease	37 * 2	3218-3	Nut - Jam	43 4 3
302-18	Fitting - Grease	35 58 1	3218-6	Nut - Jam	28 9 1
302-18	Fitting - Grease	38 64 1	3218-17	Nut - Jam	20 12 1
302-60	Fitting - Grease	26 16 2	3218-18	Nut - Jam	34 50 2
302-60	Fitting - Grease	27 30 1	3218-18	Nut - Jam	38 52 2
321-2	Screw - Cap Hex. Hd.	33 11 6	3219-14	Nut - Hex.	5 14 6
321-5	Screw - Cap Hex. Hd.	13 15 8	3220-2	Nut - Jam	12 19 2
321-8	Screw - Cap Hex. Hd.	2 52 2	3220-2	Nut - Jam	13 33 2
321-8	Screw - Cap Hex. Hd.	44 26 8	3220-5	Nut - Jam	7 6 1
321-12	Screw - Cap Hex. Hd.	30 2 1	3220-12	Nut - Jam	29 19 1
321-13	Screw - Cap Hex. Hd.	10 18 3	3220-20	Nut - Jam	12 21 1
321-14	Screw - Cap Hex. Hd.	18 40 4	3229-1	Bolt - Carriage	26 1 2
321-23	Screw - Cap Hex. Hd.	22 16 2	3229-1	Screw - Carriage	1 7 2
322-2	Capscrew - Hex. Hd.	32 5 4	3229-11	Bolt - Carriage	35 63 1
322-3	Screw - Cap Hex. Hd.	31 38 4	3229-11	Bolt - Carriage	38 70 1
322-3	Screw - Cap Hex. Hd.	35 53 1	3230-1	Bolt - Carriage	32 15 4
322-3	Screw - Cap Hex. Hd.	38 56 1	3230-1	Screw - Carriage	18 33 1
322-4	Screw - Cap Hex. Hd.	11 24 4	3230-1	Screw - Carriage	30 19 2
322-4	Screw - Cap Hex. Hd.	26 10 4	3230-2	Bolt - Carriage	44 9 4
322-4	Screw - Cap Hex. Hd.	27 23 2	3230-2	Bolt - Carriage	45 6 1
322-7	Screw - Cap Hex. Hd.	18 37 2	3230-5	Bolt - Carriage	44 8 2
322-7	Screw - Cap Hex. Hd.	45 7 1	3230-5	Screw - Carriage	46 3 2

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3230-8	Bolt - Carriage	45 5 1	3256-3	Washer - Flat	16 6 1
3230-9	Screw - Carriage	46 * 2	3256-3	Washer - Flat	37 36 5
3230-20	Bolt - Carriage	34 37 10	3256-6	Washer - Flat	26 15 2
3230-20	Bolt - Carriage	37 38 10	3256-6	Washer - Flat	27 27 1
3230-22	Screw - Carriage	18 6 1	3256-14	Washer - Flat	5 16 2
3230-23	Screw - Carriage	1 27 6	3256-16	Washer - Flat	13 12 8
3230-23	Screw - Carriage	3 55 2	3256-22	Washer - Flat	8 6 2
3230-23	Screw - Carriage	9 23 6	3256-22	Washer - Flat	22 15 2
3230-27	Screw - Carriage	1 8 1	3256-23	Washer - Flat	1 25 4
3231-2	Bolt - Carriage	36 14 4	3256-23	Washer - Flat	8 43 1
3231-2	Bolt - Carriage	39 15 2	3256-23	Washer - Flat	18 9 23
3231-22	Bolt - Carriage	8 23 6	3256-23	Washer - Flat	20 30 15
3231-26	Screw - Carriage	18 7 1	3256-23	Washer - Flat	24 16 1
3231-31	Bolt - Carriage	20 21 1	3256-23	Washer - Flat	31 34 4
3234-4	Screw - Cap Hex. Hd.	8 7 2	3256-23	Washer - Flat	44 18 6
3234-4	Screw - Hex. Flange Hd.	2 13 3	3256-23	Washer - Flat	45 19 2
3234-4	Screw - Hex. Flange Hd.	12 10 2	3256-24	Washer - Flat	12 34 1
3234-4	Screw - Hex. Flange Hd.	20 29 2	3256-24	Washer - Flat	18 27 16
3234-4	Screw - Hex. Washer Hd.	5 8 3	3256-24	Washer - Flat	20 25 2
3234-4	Screw - Hex. Washer Hd.	9 22 2	3256-24	Washer - Flat	24 25 3
3234-4	Screw - Hex. Washer Hd.	24 10 1	3256-24	Washer - Flat	26 30 2
3234-5	Screw - Hex. Flange Hd.	2 1 21	3256-24	Washer - Flat	27 16 1
3234-5	Screw - Hex. Washer Hd.	1 2 14	3256-24	Washer - Flat	37 2 1
3234-5	Screw - Hex. Washer Hd.	8 19 2	3256-24	Washer - Flat	44 21 8
3234-5	Screw - Hex. Washer Hd.	13 4 2	3256-24	Washer - Flat	45 3 4
3234-5	Screw - Hex. Washer Hd.	18 32 1	3256-24	Washer - Flat	46 6 2
3234-11	Screw - Hex. Flange Hd.	2 40 4	3256-25	Washer - Flat	34 14 1
3234-11	Screw - Hex. Washer Hd.	24 29 1	3256-25	Washer - Flat	37 20 1
3234-11	Screw - Hex. Washer Hd.	46 4 2	3256-26	Washer - Flat	7 10 2
3234-17	Screw - Hex. Flange Hd.	2 15 3	3256-26	Washer - Flat	33 4 6
3234-17	Screw - Hex. Washer Hd.	8 21 3	3256-28	Washer - Flat	29 16 1
3234-23	Screw - Hex. Flange	32 14 6	3256-33	Washer - Flat	3 53 2
3234-24	Screw - Hex. Flange Hd.	18 26 4	3256-35	Washer	42 9 6
3234-25	Screw - Hex. Washer Hd.	24 17 5	3256-45	Washer - Flat	26 19 4
3234-28	Screw - Hex. Washer Hd.	8 13 8	3256-45	Washer - Flat	27 10 2
3234-28	Screw - Hex. Washer Hd.	18 53 1	3256-45	Washer Flat	38 69 2
3234-32	Screw - Cap Hex. Hd.	20 5 4	3256-49	Washer	45 13 8
3234-32	Screw - Cap Hex. Hd.	27 28 1	3256-49	Washer - Flat	44 13 32
3234-32	Screw - Hex. Flange Hd.	26 14 2	3256-54	Washer - Flat	28 4 1
3242-4	Screw - Square Hd. Set	20 3 6	3256-56	Washer - Flat	34 51 1
3243-6	Screw - Set Sq. Hd.	35 67 1	3256-56	Washer - Flat	38 54 1
3243-6	Screw - Set Sq. Hd.	38 76 1	3257-32	Key - Woodruff	10 17 1
3245-35	Screw - Set	20 10 4	3257-32	Key - Woodruff	11 7 1
3246-9	Screw - Set	47 6 6	3258-19	Screw - Round Hd.	3 *61 2
3247-6	Screw - Set	43 3 3	3258-19	Screw - Round Hd.	4 2 2
3249-11	Screw - Round Hd.	12 27 2	3269-18	Rivet - Pop	45 15 10
3250-35	Screw - Pan Hd.	24 6 2	3269-18	Rivet - Pop	44 23 20
3253-2	Washer - Lock	5 15 5	3269-22	Rivet - Pop	44 25 8
3253-3	Washer - Lock	10 19 3	3269-22	Rivet - Pop	45 12 4
3253-3	Washer - Lock	13 14 8	3269-23	Rivet - Pop	44 16 24
3253-3	Washer - Lock	33 12 6	3269-23	Rivet - Pop	45 24 8
3253-4	Washer - Lock	1 24 4	3272-4	Pin - Cotter	2 9 2
3253-4	Washer - Lock	26 11 4	3272-4	Pin - Cotter	24 13 1
3253-4	Washer - Lock	27 22 2	3272-6	Pin - Cotter	7 1 1
3253-4	Washer - Lock	35 52 1	3272-6	Pin - Cotter	10 14 1
3253-4	Washer - Lock	38 55 1	3272-6	Pin - Cotter	13 31 5
3253-5	Washer - Lock	34 25 2	3272-6	Pin - Cotter	24 43 1
3253-5	Washer - Lock	37 30 2	3272-6	Pin - Cotter	27 19 1
3253-21	Washer - Lock	44 15 4	3272-6	Pin - Cotter	29 14 1
3254-9	Washer - ITLW	12 2 2	3272-9	Pin - Cotter	18 23 1
3254-9	Washer - Lock Internal	24 5 2	3272-11	Pin - Cotter	24 32 5
3254-18	Washer - Lock I.T.L.W.	42 6 6	3272-11	Pin - Cotter	26 22 2
3255-2	Washer - Lock	29 20 1	3272-11	Pin - Cotter	27 4 1
3255-2	Washer - Lock E.T.L.W.	35 61 1	3272-13	Pin - Cotter	26 27 2
3255-2	Washer - Lock E.T.L.W.	38 71 1	3272-13	Pin - Cotter	27 13 2
3255-7	Washer - ETLW	2 35 1	3272-17	Pin - Cotter	26 25 2
3255-7	Washer - ETLW	12 26 3	3272-17	Pin - Cotter	27 33 1
3255-7	Washer - Lock E.T.L.W.	5 35 1	3273-18	Screw - Hex. Socket Hd.	20 34 4
3255-8	Washer - Ext. Tooth Lock	32 4 4	3274-90	Screw - Hex. Socket Hd.	5 13 2
3255-8	Washer - Lock E.T.L.W.	18 30 1	3290-55	Rivet - Pop	36 8 6
3256-2	Washer - Flat	44 27 8	3290-55	Rivet - Pop	39 9 4

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3290-282	Rivet - Pop	45	18	10	32121-36	Pin - Roll	34	6	4
3290-322	Pin - Hair	26	32	2	32121-36	Pin-Roll	37	11	4
3290-322	Pin - Hair	27	31	1	32121-79	Pin - Roll	13	39	2
3290-379	Tie - Cable	19	59	2	32121-91	Pin - Coiled Spring	11	38	3
3290-467	Cotter - Hairpin	36	2	4	32128-10	Nut - Flange Lock	35	66	1
3290-467	Cotter - Hairpin	39	3	2	32128-10	Nut - Flange Lock	38	75	1
3290-467	Pin - Cotter Hair	1	28	2	32128-14	Nut - Flange Lock	1	13	2
3296-2	Nut - Lock	5	44	1	32128-19	Nut - Flange	32	12	2
3296-4	Nut - Lock	24	15	1	32128-20	Nut - Flange Lock	2	46	4
3296-6	Nut - Lock	10	22	1	32128-20	Nut - Lock	14	48	2
3296-13	Rivet - Pop	42	1	14	32128-21	Nut - Flange Lock	35	62	1
3296-16	Nut - Flange Lock	22	9	2	32128-21	Nut - Flange Lock	38	72	1
3296-16	Nut - Lock	12	4	2	32128-25	Nut - Flange Lock	31	35	4
3296-23	Nut - Flange Lock	20	28	4	32128-25	Nut - Hex. Flange	32	6	4
3296-23	Nut - Lock	10	11	3	32128-33	Nut - Flange Lock	1	3	2
3296-23	Nut - Lock	13	42	8	32128-33	Nut - Flange Lock	2	34	5
3296-28	Nut - Lock	7	11	2	32128-33	Nut - Flange Lock	5	31	3
3296-29	Nut - Flange Lock	7	20	1	32128-33	Nut - Flange Lock	20	14	2
3296-29	Nut - Flange Lock	20	32	6	32128-33	Nut - Flange Lock	26	4	2
3296-29	Nut - Lock	8	42	1	32128-43	Nut - Flange Lock	2	37	4
3296-29	Nut - Lock	12	32	3	32128-43	Nut - Flange Lock	8	16	6
3296-29	Nut - Lock	16	9	2	32128-43	Nut - Flange Lock	18	1	5
3296-29	Nut - Lock	34	41	11	32128-43	Nut - Flange Lock	20	23	2
3296-29	Nut - Lock	37	42	11	32128-43	Nut - Flange Lock	24	2	7
3296-29	Nut - Lock	44	19	6	32128-44	Nut - Flange Lock	1	16	13
3296-29	Nut - Lock	45	20	3	32128-44	Nut - Flange Lock	2	18	12
3296-39	Nut - Flange Lock	22	17	1	32128-44	Nut - Flange Lock	8	26	4
3296-39	Nut - Flange Lock	24	26	3	32128-44	Nut - Flange Lock	18	4	5
3296-39	Nut - Lock	20	17	2	32128-44	Nut - Flange Lock	30	20	3
3296-39	Nut - Lock	26	31	2	32128-44	Nut - Hex. Flange Hd.	9	12	6
3296-39	Nut - Lock	27	15	1	32128-44	Nut - Lock	13	3	2
3296-39	Nut - Lock	34	1	8	32136-4	Nut - Castle	7	2	1
3296-39	Nut - Lock	36	6	16	32136-4	Nut - Castle	29	15	1
3296-39	Nut - Lock	38	67	12	32141-84	Screw - Cap Hex. Hd.	7	25	2
3296-39	Nut - Lock	39	7	9	32144-10	Screw - Cap Hex. Hd.	37	24	6
3296-39	Nut - Lock	42	8	2	32144-10	Screw - Hex. Washer Hd.	34	26	4
3296-39	Nut - Lock	44	6	8	32144-18	Screw - Hex. Hd.	5	4	2
3296-39	Nut - Lock	45	1	3	32144-39	Screw - Pan Hd.	5	41	2
3296-42	Nut - Lock	8	40	2	32148-7	Insert - Threaded	1	33	3
3296-42	Nut - Lock	13	11	8	32148-7	Insert - Threaded	2	3	5
3296-51	Nut - Lock	29	17	1	32148-8	Insert - Threaded	3	58	1
3296-59	Nut - Lock	12	33	1	32148-8	Insert - Threaded	8	14	3
3296-59	Nut - Lock	26	18	2	32149-9	Nut - Flange Lock	5	37	2
3296-59	Nut - Lock	27	9	2	32151-46	Ring - Retaining	11	13	2
3296-59	Nut - Lock	33	9	2	32153-4	Nut-Lock	44	29	8
3296-59	Nut - Lock	38	63	1	340-17	Fitting - Hydraulic 90°	13	43	2
3296-59	Nut - Lock	41	3	6	340-20	Fitting - Hydraulic Tee	22	21	1
3296-62	Nut - Lock	34	10	1	340-77	Fitting - Hydraulic 90°	22	6	1
3296-62	Nut - Lock	37	14	1	340-87	Fitting - Hydraulic 45°	24	39	2
32104-82	Screw - Hex. Washer Hd.	1	21	5	340-92	Fitting - Hydraulic Straight	22	11	1
32104-116	Screw - Hex. Washer Hd.	8	2	8	340-99	Fitting - Hydraulic 90°	10	26	2
32105-1	Screw - Hex. Hd.	5	42	1	340-101	Fitting - Hydraulic 45°	10	5	2
32105-13	Screw - Cap Hex. Hd.	18	20	1	340-103	Fitting - Hydraulic 45°	14	45	1
32107-11	Nut - Square	3	*62	2	340-105	Fitting - Hydraulic 90°	13	8	2
32107-11	Nut - Square	4	4	2	340-110	Fitting - Hydraulic 90°	22	19	1
32108-17	Nut - Flange Lock	18	22	1	340-127	Nut - Bulkhead	8	25	2
32120-10	Ring - Retaining	18	45	1	340-140	Fitting - Hydraulic Tee	14	*	1
32120-11	Ring - Retaining	11	36	1	340-162	Fitting - Hydraulic 90°	16	12	1
32120-15	Ring - Retaining	11	34	1	340-163	Fitting - Hydraulic 90°	16	4	1
32120-64	Ring - Snap	44	1	8	353-987	Fitting - Hydraulic 90°	9	17	1
32121-6	Pin - Roll	2	21	1	354-77	Hydraulic Test Port Fitting	16	15	2
32121-6	Pin - Roll	12	15	1	354-79	Cap - Test Port	16	14	2
32121-9	Pin - Roll	28	13	1	354-120	Fitting - Hydraulic 90°	9	25	1
32121-10	Pin - Roll	7	22	1	354-120	Fitting - Hydraulic 90°	10	8	1
32121-15	Pin - Roll	7	16	2	354-127	Fitting - Hydraulic 45°	9	20	2
32121-23	Pin - Roll	28	1	1	354-128	Fitting - Hydraulic 90°	10	3	1
32121-24	Pin - Roll	12	24	1					
32121-34	Pin - Dowel	10	29	1					

*Not Illustrated

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 216-D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Reelmaster 216-D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 216-D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

INDEX

Description	Page	Description	Page
Hood & Grille	1	Grass Collection System	
Skirt Assembly	2-3	Model No. 03433 (Optional)	
Air Cleaner Assembly	4	(Front Cutting Unit Basket Assembly)	44
Instrument Panel Assembly	5	Grass Collection System	
Electrical Schematic	6	Model No. 03433 (Optional)	
Frame Assembly	7	(Rear Cutting Unit Basket Assembly)	45
Radiator Assembly	8	Weight Kit No. 83-9370	46
Hydraulic Reservoir & Filter Assembly	9	Backlap Kit No. 84-5510	47
Hydraulic Pump Installation Assembly	10	Special Tools	48
Hydraulic Pump Assembly No. 85-4920	11	Cylinder Block Assembly	49
Traction Control Assembly	12	Crankshaft Assembly	50
Front Wheel Assembly	13-14	Cylinder Head Assembly	51
Hydraulic Drive Motor No. 66-5291	15	Rocker Arm Assembly	52
Drive Motor Plumbing Assembly	16	Camshaft Assembly	53
Hydraulic Schematic	17	Timing Cover Assembly	54
Engine Installation Assembly	18-19	Oil Pump Assembly	55
Reel Drive Assembly	20	Fuel Injection System Assembly	56
Electric Clutch Assembly No. 83-9140	21	Injection Pump Assembly	57-58
Cutting Unit Lift Valve Installation Assembly ..	22	Flywheel Housing Assembly	59
Control Valve No. 43-1950	23	Flywheel Assembly	60
Cutting Unit Lift Assembly	24	Starter Installation Assembly	61
Hydraulic Cylinder No. 76-0020	25	Starter Assembly	62
Front Cutting Unit Lift Arm Assembly	26	Oil Sump Assembly	63
Rear Cutting Unit Lift Arm Assembly	27	Valve Cover Assembly	64
Belt Tensioner Assembly No. 83-7900	28	Oil Filter Assembly	65
Rear Wheel Assembly	29	Front Drive Pulley Assembly	66
Fuel System Assembly	30	Water Pump Assembly	67
Seat Assembly Model No. 30797 (Optional) ..	31	Fan & Extension Assembly	68
Seat Assembly Model No. 30796 (Optional) ..	32	Alternator Installation Assembly	69
Cutting Unit Carrier Frame Assembly		Alternator Assembly	70
(Floating Cutting Unit Suspension)	33	Timing Cover Plate Assembly	71
8 & 11 Blade Cutting Unit Reel Assembly ..	34-35	Exhaust Manifold Assembly	72
8 & 11 Blade Cutting Unit Roller Assembly		Low Pressure Fuel System Assembly	73
(Floating Suspension)	36	Lift Pump Assembly	74
5 Blade Cutting Unit Reel Assembly		Fuel Filter Assembly	75
(Fixed Suspension)	37-38	Cold Start System Assembly	76
5 Blade Cutting Unit Roller Assembly		Engine Lifting Tab Assembly	77
(Fixed Suspension)	39	Throttle Stop Assembly	78
Cutting Unit Roller Options	40	Recorder Assembly	79
Cutting Unit Roller Scraper Kit		Electrical Component Assembly	80
Part No. 60-9590 (Optional)	41	International Decal Cross Reference	81-83
Comb Kit Part No. 67-9400 (Optional)	42	Part Number Index	84-91
Large Pulley Kit Part No. 67-9540 (Optional) ..	43		