



GoldPro Series[®] Lawnmower

Model No. 10550 - 210000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing And Wheel Assembly	 3	Handle Assembly	 7
Gearcase Assembly No. 104-7676	 4	Engine Assembly	 8
Engine Installation Assembly	 5	Short Block Assembly No. 95-7636	 10
Gearcase And Wheel Assembly	 6	Carburetor Assembly No. 98-7042	 11


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not illustrated

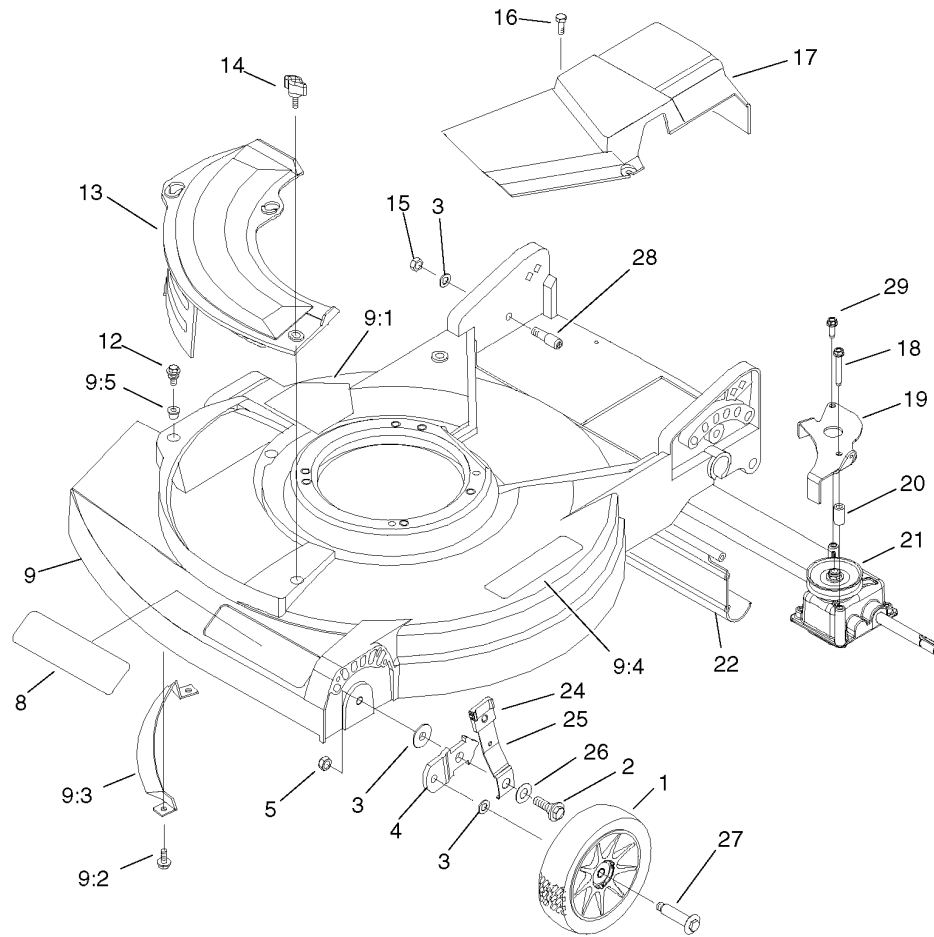

Housing And Wheel Assembly


Ref	Part No.	Qty.	Description
1	684776	2	Wheel And Tire ASM
2	92-4856	2	Bolt-Shoulder
3	40-1940	6	Washer
4	95-7403-03	2	Bracket-Height Adjustment, Wheel
5	3296-39	2	Nut-Lock, NI
8	104-7956	1	Decal-Deck
9	100-1044	1	Housing
9:1	43-8480	1	Decal-Danger
9:2	46-6811	2	Screw-HWH
9:3	608175	1	Bar-Toe
9:4	93-7250	1	Decal-Warning
9:5	94-1610	3	Nut-Clip
12	614677	2	Screw-Sems
13	92-8630	1	Plate-Mulch
14	98-8332	1	Knob
15	603773	2	Nut
16	12-5450	2	Screw
17	104-7662	1	Cover-Drive
18	92-1616	1	Screw-HWHTF
19	104-7930-03	1	Bracket-Transmission
20	614673	1	Bushing-Plate, Actuator
21	104-7676	1	Gear Case ASM
22	92-7736	1	Shield-Trailing
24	92-1008	2	Knob-Lever, Height Adjustment

Ref	Part No.	Qty.	Description
25	92-1006	2	Front Spring Arm ASM
26	3290-413	2	Washer-Belleville
27	92-1099	2	Bolt-Shoulder
28	92-9673	2	Bolt-Shoulder
29	49-2040	1	Screw-HWHTF
99	95-7052	1	Plate-Opening, Chute

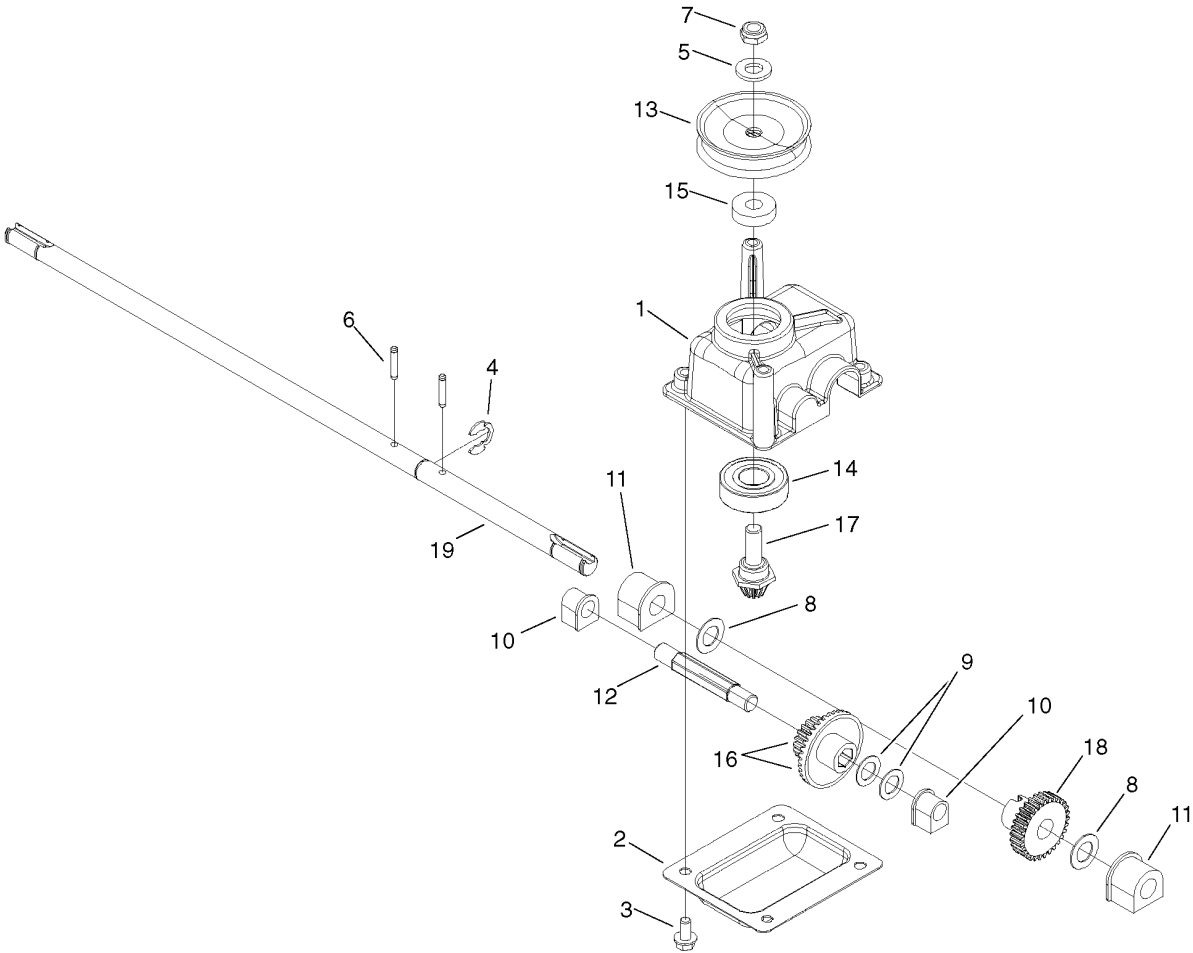


Gearcase Assembly No. 104-7676

Ref	Part No.	Qty.	Description				
1	104-7619	1	Case-Gear				
2	614668-03	1	Cover-Case, Gear				
3	32144-4	4	Screw-HWH				
4	32151-68	1	Ring-Retaining				
5	3256-24	1	Washer-Flat				
6	3285-19	2	Pin-Groove				
7	3296-5	1	Nut-Lock				
8	36-4780	2	Washer				
9	36-4791	2	Washer-Thrust				
10	60-8750	2	Bushing				
11	60-8850	2	Bushing				
12	614696	1	Shaft-Intermediate				
13	100-1176	2	Pulley-Half				
14	100-1048	1	Bearing-Ball				
15	62-6660	1	Spacer				
16	104-1005	1	Gear-19T Spur, 37T Bevel				
17	104-7667	1	Gear-Pinion, Bevel				
18	104-1004	1	Gear-30T				
19	104-7675	1	Shaft-Output				

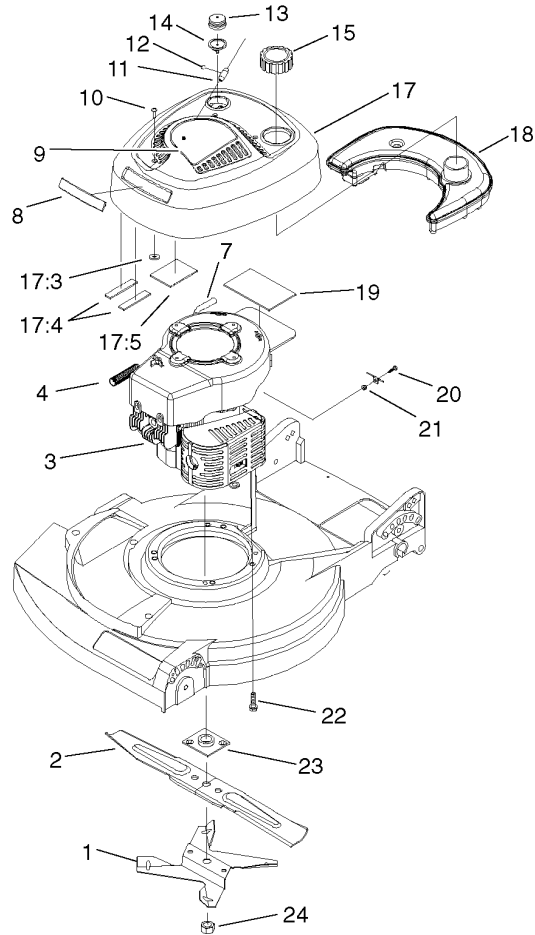


Engine Installation Assembly

Ref	Part No.	Qty.	Description				
1	99-6351-03	1	Fan-Mulching				
2	612543-03	1	Blade-20.88 Inch				
4	93-4306	1	Spring-Compression				
7	612782	1	Line-Fuel				
8	92-8615	1	Applique-Shroud				
9	95-7420	1	Decal-Recoil				
10	95-7621	3	Screw				
11	47-2480	1	Stop-Rope				
12	3290-443	1	Staple				
13	66-7460	1	Bulb-Primer				
14	44-2750	1	Body-Primer				
15	98-8344	1	Fuel And Oil Cap ASM				
17	100-8750	1	Shroud And Recoil Cover ASM				
17:3	613329	2	Nut-Push				
17:4	99-1522	2	Strip-Foam				
17:5	99-1521	1	Strip-Foam				
18	95-1897	1	Tank				
19	98-1386	1	Pad-Foam				
20	314576	1	Screw				
21	306531	1	Nut-Hex				
22	98-4480	3	Screw-HH, Sems				
23	677525	1	Plate And Collar ASM				
24	603164	1	Nut-Blade				

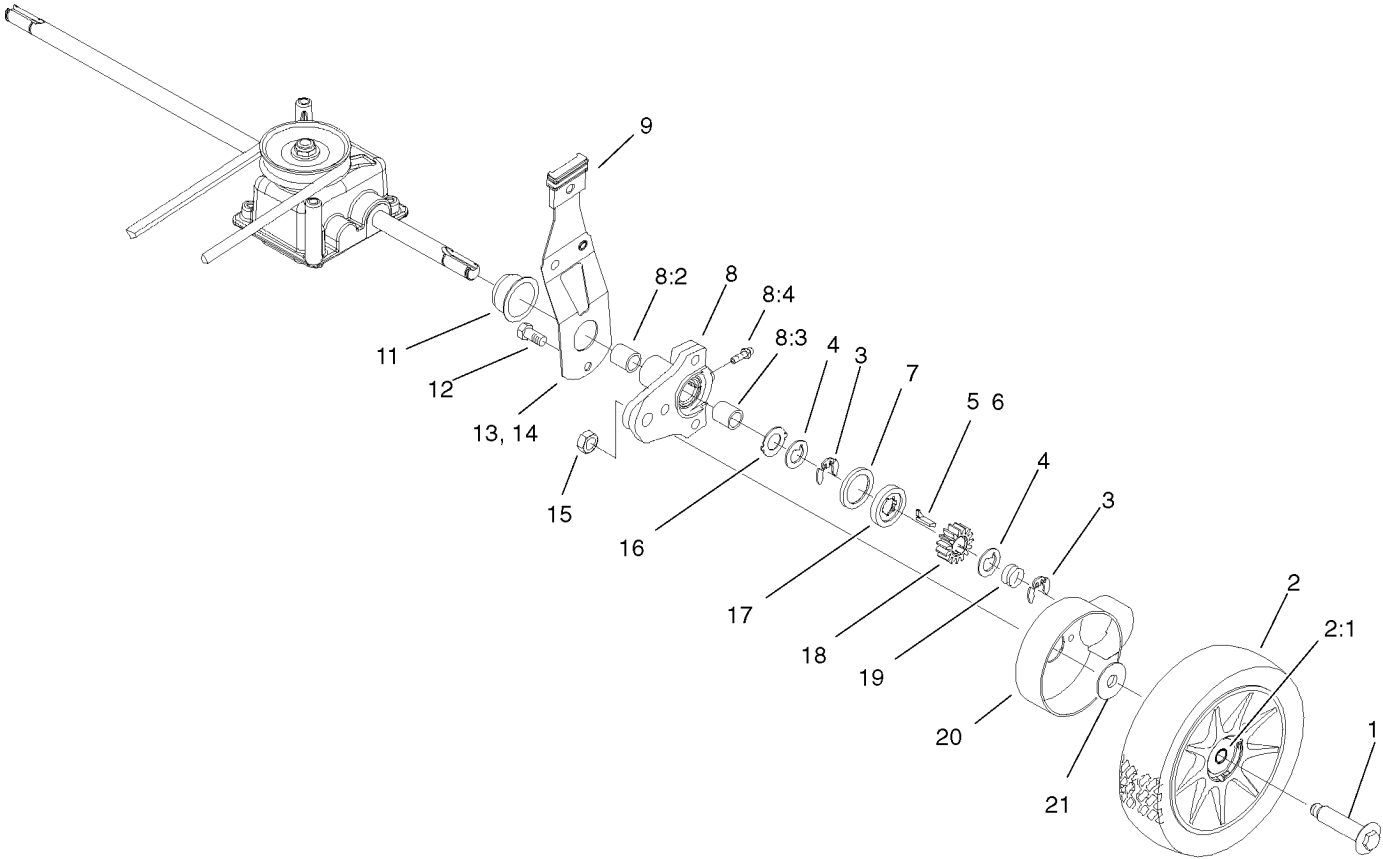

Gearcase And Wheel Assembly


Ref	Part No.	Qty.	Description				
1	92-1057	2	Bolt-Shoulder				
2	92-1042	2	Wheel And Tire ASM				
2:1	27-6250	2	Bushing				
3	65-2720	4	Klipring-Locking				
4	65-4740	4	Washer-Thrust, Keyed				
5	66-6050	1	Key-Rocking, LH				
6	66-6040	1	Key-Rocking, RH				
7	65-4710	2	Ring-Friction				
8	92-7746	2	Rear Height Adjustment Arm ASM				
8:2	70-9760	1	Bushing				
8:3	47-2900	1	Bushing				
8:4	302-56	1	Fitting-Grease				
9	92-1008	2	Knob-Lever, Height Adjustment				
11	92-6535	2	Ring-Isolator				
12	32144-85	2	Screw-HWH				
13	92-6540	1	LH Rear Spring Arm ASM				
14	92-6539	1	RH Rear Spring Arm ASM				
15	603773	2	Nut				
16	65-4730	2	Washer-Arm, Pivot				
17	65-4760	2	Washer-Clutch				
18	65-4750	2	Gear-Pinion				
19	65-4720	2	Spring-Compression				
20	94-1609	2	Cover-Wheel				
21	614426	2	Washer-Stepped				

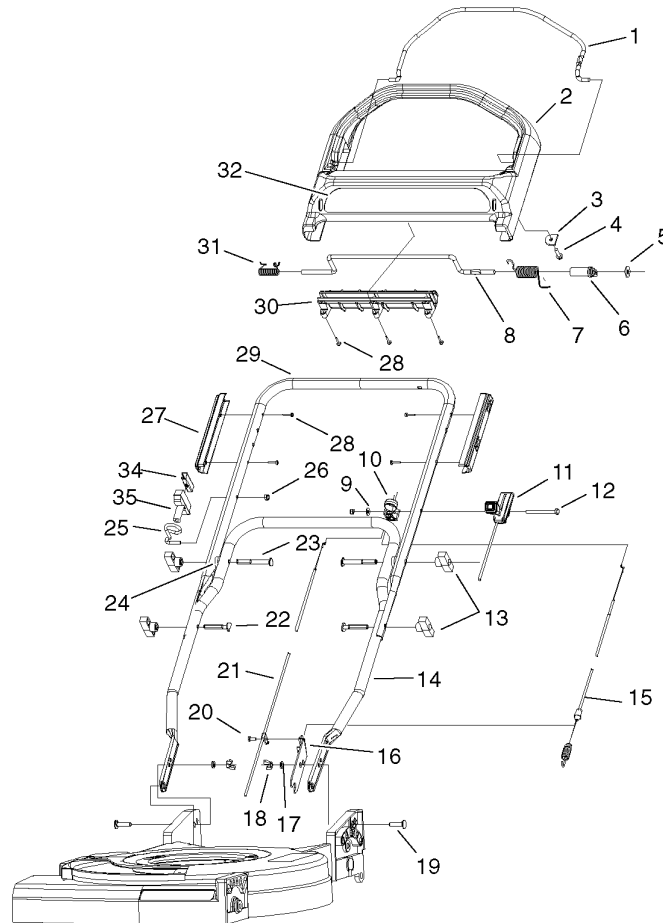

Handle Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	99-1593-03	1	Bail-Brake	25	86-9671	1	Guide-Rope
2	104-7680	1	Handle-Control	26	3296-73	2	Nut-Lock, NI
3	99-1595	1	Retainer-Cable, Brake	27	99-1590	2	Guide-Handle, Control
4	46-8091	1	Screw-HWH	28	94-4496	10	Screw-PPH
5	3256-71	1	Washer-Flat	29	104-7692-05	1	Handle-Upper
6	99-1589	1	Lever-Traction	30	99-6008	1	Retainer-Control Rod, Traction
7	104-7690	1	Spring-Torsion	31	99-1592	1	Spring-Torsion, RH
8	99-1588	1	Bar-Control, Traction	32	104-7960	1	Decal-Handle
9	3256-1	1	Washer-Flat	34	612824	1	Clip-Starter
10	99-5239	1	Anchor-Cable	35	612825	1	Handle-Start
11	95-7446	1	Cable - Throttle				
12	321-55	1	Screw-HH				
13	98-7134	4	Knob-Handle				
14	104-7693-05	1	Handle-Lower				
15	99-1584	1	Cable-Traction				
16	104-7928-03	1	Bracket-Cable, Traction				
17	3253-33	2	Washer-Lock				
18	32103-29	2	Nut-Wing				
19	3230-29	2	Screw-CARR				
20	32144-1	1	Screw-Taptite				
21	104-7696	1	Cable-Brake, Flywheel				
22	614697	2	Screw				
23	104-7691	2	Screw-Handle				
24	104-7658	2	Spacer				


Engine Assembly

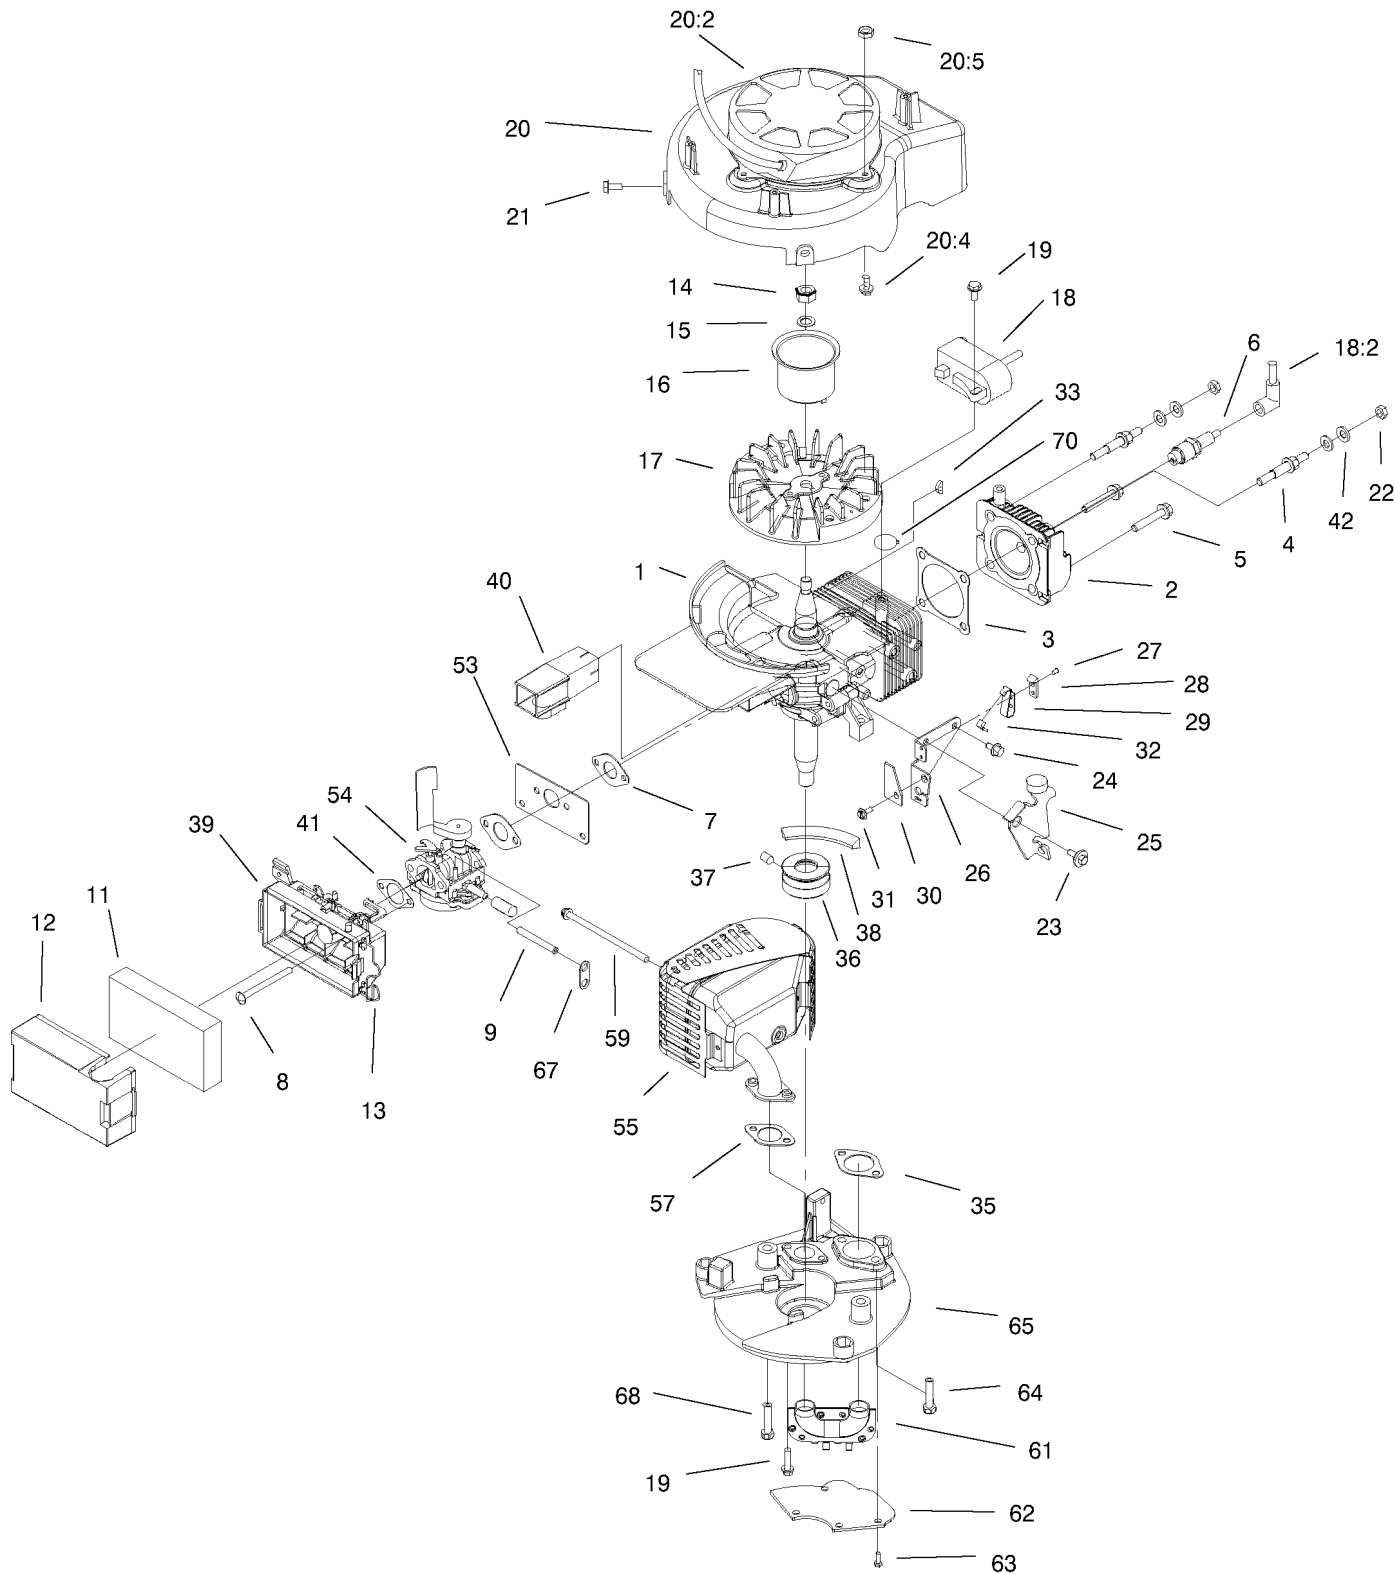

Engine Assembly


Ref	Part No.	Qty.	Description
1	95-7636	1	Short Block ASM
2	94-5776	1	Head-Cylinder
3	94-5778	1	Gasket-Head
4	94-5779	2	Stud
5	94-5780	2	Screw-HWH
6	50-1170	1	Spark Plug
7	94-5795	2	Gasket-Intake
8	612507	2	Screw
9	95-1861	1	Hose-Primer
11	95-5574	1	Filter-Air
12	95-5577	1	Cover-Filter, Air
13	610383	1	Retainer-Cover, Filter
14	130743	1	Nut
15	316959	1	Washer-Lock
16	95-1786	1	Cup-Starter
17	95-1866	1	Flywheel
18	99-2911	1	Module-Ignition
18:2	99-6719	1	Lead-Tension, High
19	613208	4	Screw
20	95-1868	1	Shroud-Recoil
20:2	99-6713	1	Recoil ASM
①20:2:1	613773	1	Rope-Recoil
①20:2:2	100-9540	1	Retainer And Clip ASM
20:4	3290-321	4	Screw-HWH
20:5	3296-2	4	Nut-Lock
21	700094	2	Screw-HH
22	146501	2	Nut
23	95-1870	1	Screw-Shoulder
24	95-1871	1	Screw-HWH
25	93-4312	1	Plate-Brake
26	84-7820	1	Plate-Brake
27	3290-459	2	Rivet-Plastic
28	92-2925	1	Strap-Insulation
29	60-9010	1	Strap-Ground
30	100-2929	1	Stop-Strap, Ground
31	12-5450	1	Screw
32	98-7037	1	Lead Wire-Switch, Brake
33	607199	1	Key
35	95-1778	1	Gasket-Exhaust
36	95-1878	1	Pulley
37	104-0214	1	Screw-Set
38	62-3900	1	V-Belt E
39	95-5588	1	Air Base ASM
40	95-5578	1	Tunnel-Inlet
41	95-7613	1	Gasket-Filter
42	3290-456	4	Washer-Belleville
①51	609790	1	Sealer-Loctite 50Cc
53	98-1388	1	Shield-Carb
54	98-7042	1	Carburetor ASM
55	100-9514	1	Muffler And Guard
57	98-1392	1	Gasket
59	611228	1	Bolt-Console

Ref	Part No.	Qty.	Description
61	98-1557	1	Pipe-Transfer
62	98-1591	1	Cover-Muffler
63	700822	4	Screw-HH
64	322-17	2	Screw-HH
65	98-1383	1	Plate-Mounting
67	95-7615	1	Hose-Retainer
68	613233	2	Screw
70	317893	1	Strap-Tie

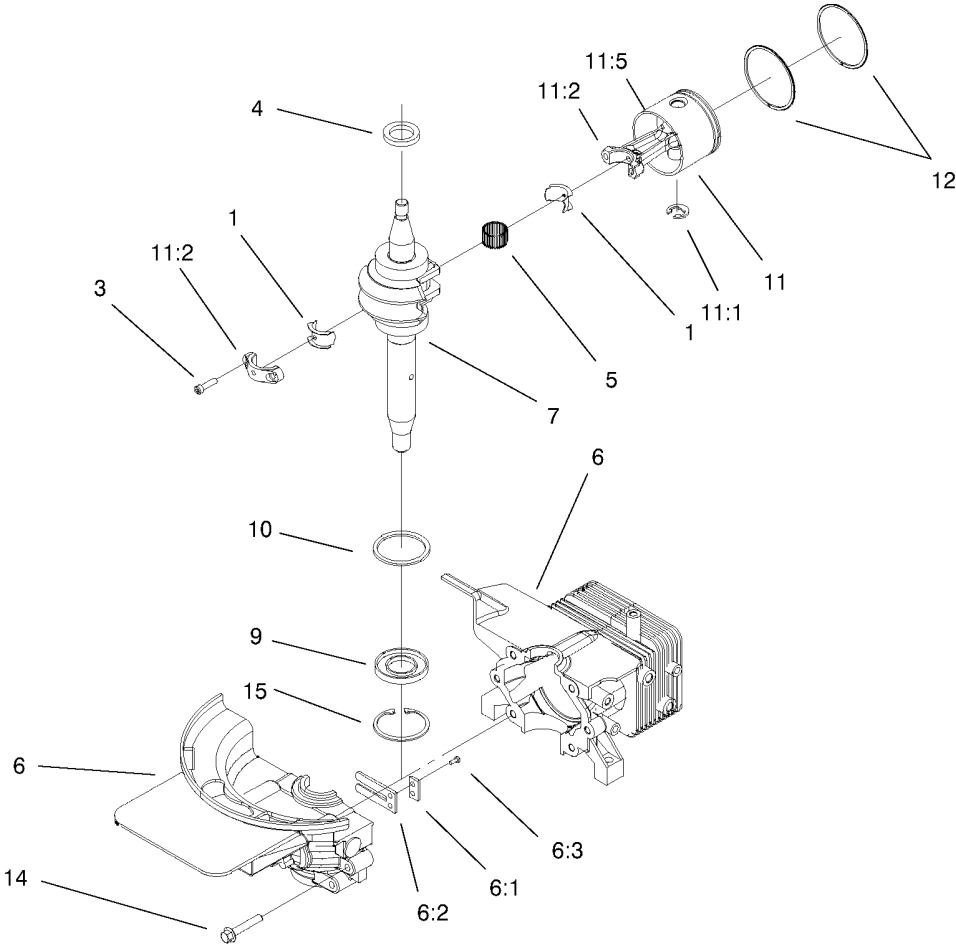

Short Block Assembly No. 95-7636

Ref	Part No.	Qty.	Description				
1	677982	1	Liner ASM				
❶2	610372	1	Sealer-Loctite 6Cc				
❶2	609790	1	Sealer-Loctite 50Cc				
3	611393	2	Screw-HSH				
4	611396	1	Seal-Oil				
5	683911	1	Bearing-Needle				
6	95-7631	1	Cylinder And Crankcase ASM				
6:1	602587	1	Plate-Backup, Reed				
6:2	602588	1	Reed-Carburetor				
6:3	612872	2	Screw-HH				
7	99-2920	1	Crankshaft And Bearing ASM				
9	94-5764	1	Seal-Oil				
10	94-5765	1	Ring-Retaining, EXT.				
11		1	Piston And Connecting Rod ASM				
11:1	303712	2	Ring-Retaining				
11:2	95-7629	1	Connecting Rod ASM				
❶11:4	94-5774	1	Pin-Wrist				
11:5	100-2916	1	Piston And Rings ASM				
12	100-2917	1	Set-Ring				
14	94-5781	6	Screw-HHF				
15	98-7046	1	Ring-Retaining				

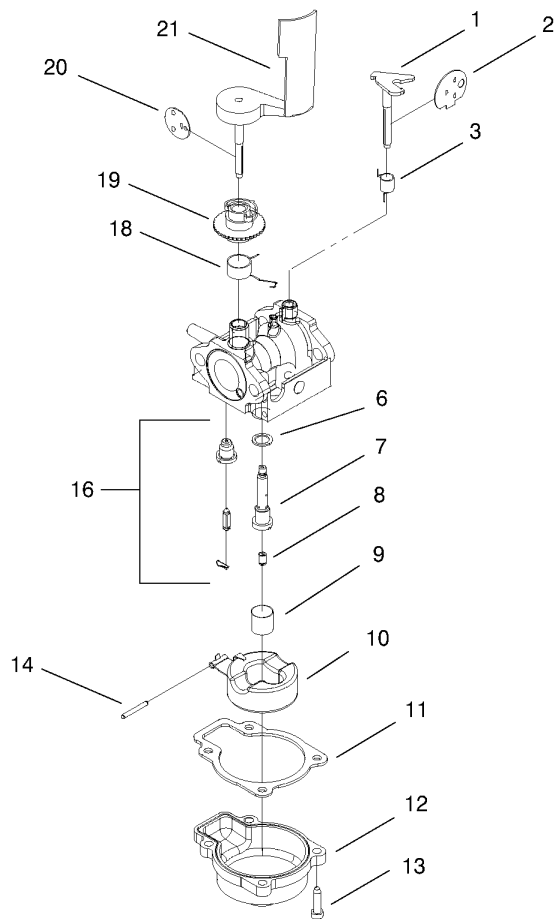

Carburetor Assembly No. 98-7042

Ref	Part No.	Qty.	Description				
1	95-5581	1	Shaft-Choke				
2	94-5788	1	Disc-Choke				
3	95-5583	1	Spring-Choke				
6	612383	1	Washer				
7	98-7001	1	Nozzle				
8	98-1357	1	Jet-Main 77.5				
9	94-5787	1	Filter-Fuel				
10	95-1899	1	Float And Arm ASM				
11	98-1362	1	Gasket				
12	92-9691	1	Chamber-Float				
13	608850	4	Screw-HH				
14	92-6389	1	Pin-Straight				
16	92-9697	1	Valve / Seat-Float				
18	98-7011	1	Spring-Throttle				
19	610834	1	Collar-Adjust, Airvane				
20	104-4431	1	Throttle-Disc				
21	104-4430	1	Airvane And Shaft ASM				

