



48cm Recycler[®]/Rear Bagging Lawnmower

Model No. 20826 - 200000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck, Kickers And Recycler Plug Assembly	 3	Carburetor Assembly Briggs and Stratton 123602-0152-E1	 13
Engine And Blade Assembly	 4	Governor Assembly Briggs and Stratton 123602-0152-E1	 14
Hoc And Wheel Assembly	 5	Air Cleaner Assembly Briggs and Stratton 123602-0152-E1	 15
Self Propelled Handle And Controls Assembly	 6	Flywheel Assembly Briggs and Stratton 123602-0152-E1	 16
Rear Bagger Assembly	 7	Starter Assembly Briggs and Stratton 123602-0152-E1	 17
Drive Assembly	 8	Gasket Set Briggs and Stratton 123602-0152-E1	 18
Gear Case Assembly No. 99-6466	 9	Fuel Line and Fuel Pump Assembly 123602-0152-E1	 19
Cylinder Assembly Briggs and Stratton 123602-0152-E1	 10		
Cylinder Head Assembly Briggs and Stratton 123602-0152-E1	 11		
Crankcase and Crankshaft Assembly Briggs and Stratton 123602-0152-E1	 12		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- | | |
|--|--|
| ❶ Included in Engine Gasket Set-See Ref. 358 | ❷ Included in Carburetor Gasket Set-See Ref. 977 |
| ❸ Included in Carburetor Overhaul Kit-See Ref. 121 | ❹ Included in Valve Gasket Set-See Ref. 1095 |

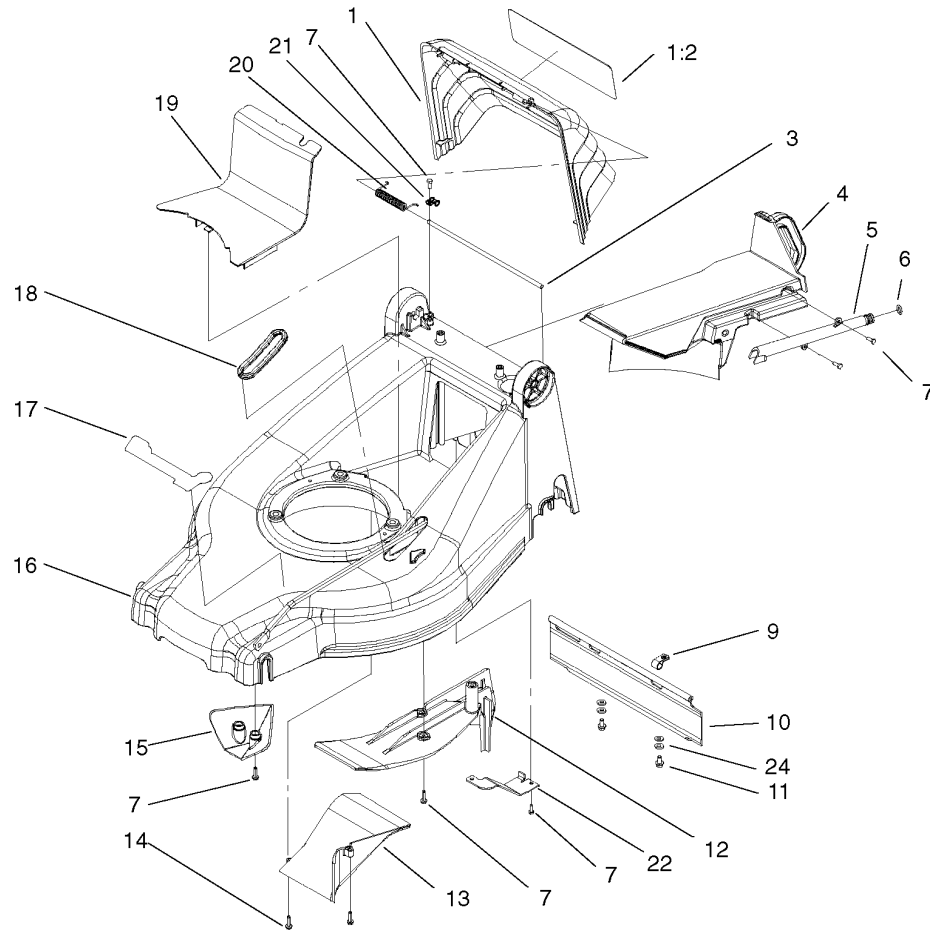


Deck, Kickers And Recycler Plug Assembly

Ref	Part No.	Qty.	Description				
1	100-9115	1	Door ASM				
1:2	93-4105	1	Decal-Danger				
3	100-1509	1	Rod-Pivot				
4	100-1505	1	Plug-Kicker, Recycler				
5	100-1522	1	Fitting-Washout				
6	46-6290	1	O-Ring				
7	32144-1	11	Screw-Taptite				
9	2412-87	2	Clamp-Cable				
10	100-4367	1	Shield-Trailing				
11	49-2040	2	Screw-HWHTF				
12	99-6486	1	Cover-Kicker, Rear				
13	100-1506	1	Ramp-Discharge				
14	100-4352	2	Screw-HWH				
15	99-6485	1	Kicker-Front				
16	99-6457-01	1	Deck				
17	100-4354	1	Decal-Recycler				
18	100-3932	1	Boot-HOC				
19	99-6479	1	Cover-Belt				
20	99-5293	1	Spring-Torsion				
21	98-2256	2	Clamp				
22	100-9123-03	1	Bracket-Deck				
24	3256-22	4	Washer-Flat				

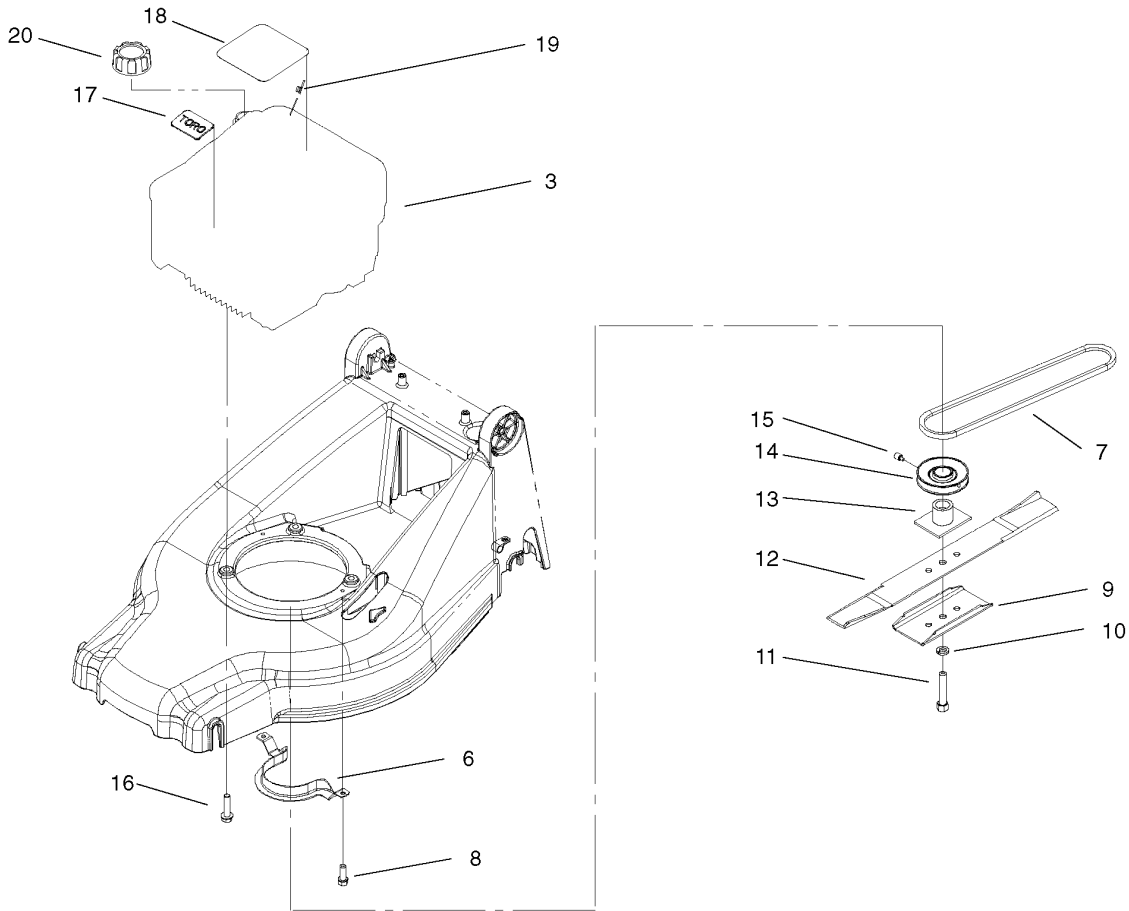 


Engine And Blade Assembly

Ref	Part No.	Qty.	Description				
3		1	Engine-B & S (123602-0152-E1)				
6	100-1523-03	1	Guide-Belt, Engine				
7	93-0232	1	V-Belt				
8	32144-4	2	Screw-HWH				
9	80-0510-03	1	Stiffener-Blade				
10	3253-22	1	Washer-Lock				
11	100-4368	1	Bolt-Blade				
12	71-9260-03	1	Blade				
13	99-6467	1	Blade Driver ASM				
14	100-1102	1	Pulley ASM				
15	613227	1	Screw-Set				
16	32144-102	3	Screw-HWH				
17	92-2289	1	Plate-Logo				
18	100-5951	1	Decal-Engine				
19	2210-316	1	Stop-Rope				
20	93-7198	1	Gas Cap ASM				

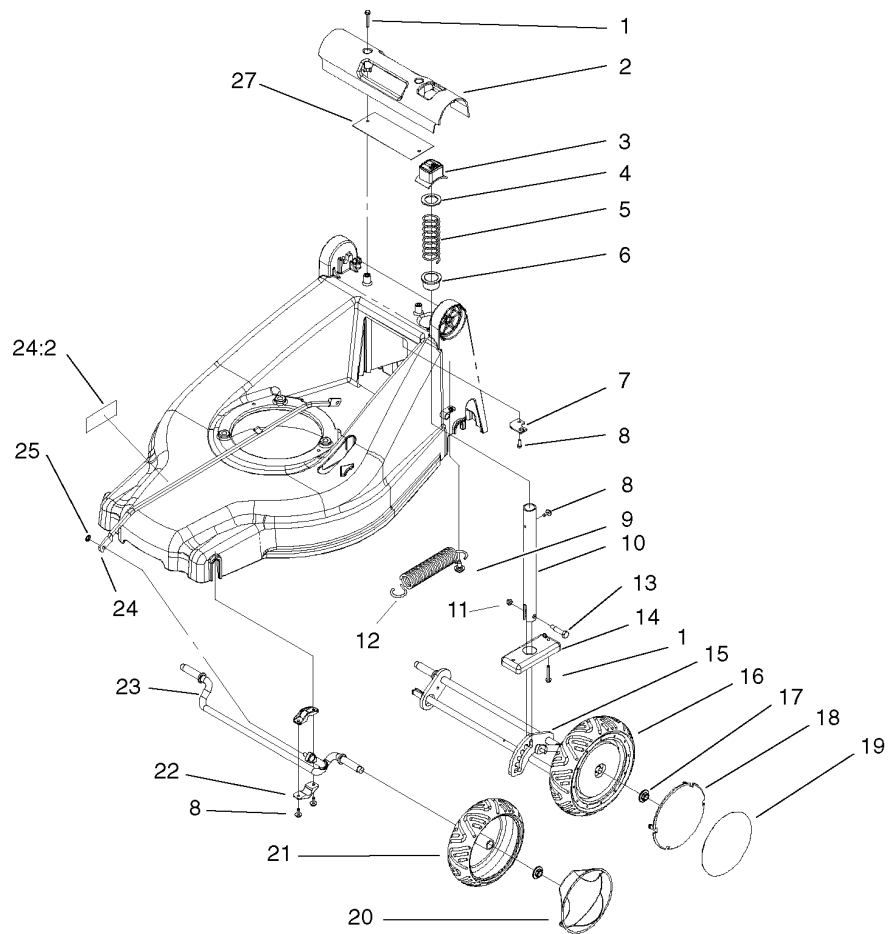 

Hoc And Wheel Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	100-4352	4	Screw-HWH	24:2	100-4355	1	Decal-HOC
2	99-6487	1	Handle-Deck	25	100-3939	2	Palnut
3	99-6480	1	Button-HOC	27	100-4383-03	1	Cover-Handle
4	88-7540	1	Washer-Backup				
5	99-6481	1	Spring-Compression, HOC				
6	99-6483	1	Bushing-HOC				
7	100-1525	1	Bracket-Cable, Traction				
8	32144-1	6	Screw-Taptite				
9	92-9698	1	Screw-Shoulder				
10	99-6458	1	Pipe-HOC				
11	3296-73	1	Nut-Lock, NI				
12	100-4384	1	Spring-Extension, HOC				
13	99-6459	1	Bolt-Shoulder				
14	99-6460	1	Plate-Support, HOC				
15	99-6478	1	Rear Axle ASM				
16	99-6471	2	Wheel And Tire ASM				
17	100-4370	4	Nut-Lock, Flanged				
18	100-4366	2	Cover-Smart Wheel				
19	100-9114	2	Decal-Smart Wheel				
20	95-6543	2	Cover-Wheel				
21	99-6470	2	Wheel ASM				
22	100-1500	4	Mount-Axle, Front				
23	99-6464	1	Axle-Front ASM				
24	100-9116	1	Rod ASM				

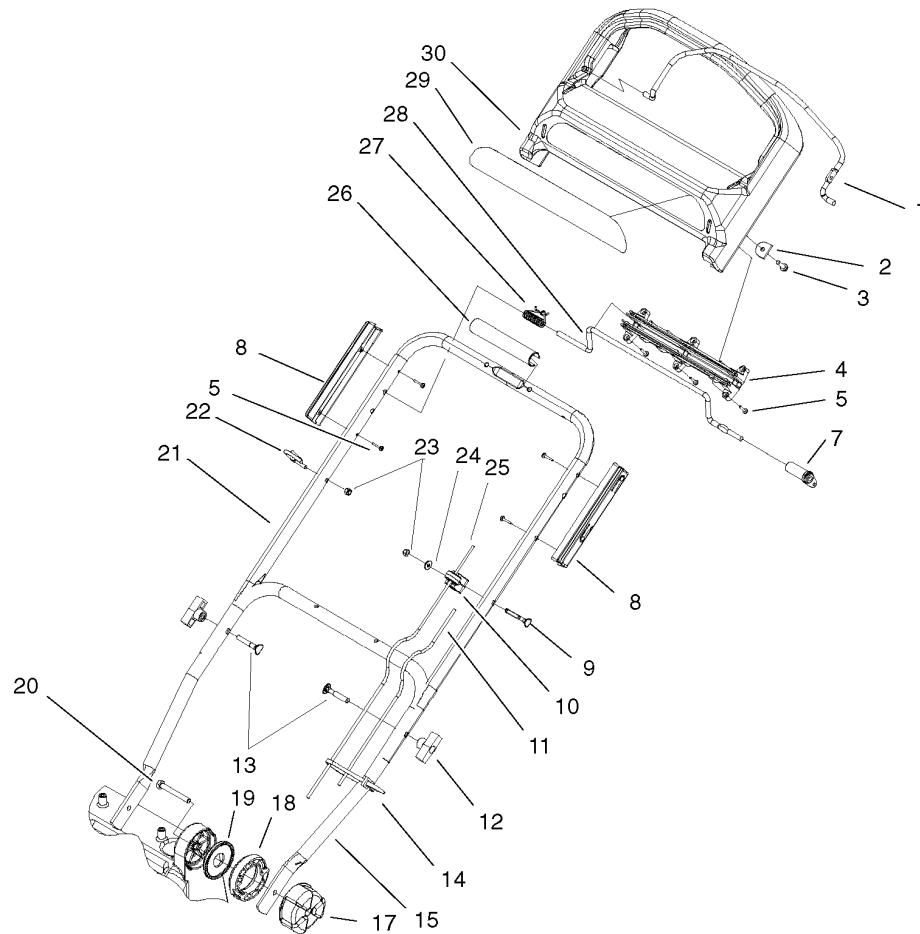 

Self Propelled Handle And Controls Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	99-1593-03	1	Bail-Brake	27	99-1592	1	Spring-Torsion, RH
2	99-1595	1	Retainer-Cable, Brake	28	99-1588	1	Bar-Control, Traction
3	46-8091	1	Screw-HWH	29	100-5950	1	Decal-Automatic
4	99-6008	1	Retainer-Control Rod, Traction	30	99-1582	1	Handle-Control
5	94-4496	10	Screw-PPH				
7	99-1589	1	Lever-Traction				
8	99-1590	2	Guide-Handle, Control				
9	95-4453	1	Screw				
10	99-5239	1	Anchor-Cable				
11	100-3936	1	Cable-Traction				
12	98-7134	2	Knob-Handle				
13	92-2260	2	Screw-Handle				
14	3290-378	2	Tie-Cable				
15	100-1502-05	1	Handle-Lower				
17	100-4396	2	Knob-Adjusting, Handle				
18	100-1510	2	Disk Adjusting-Handle				
19	100-1517	2	Disk-Holding, Handle				
20	60-6690	2	Capscrew				
21	99-1596-05	1	Handle-Upper				
22	86-9671	1	Guide-Rope				
23	3296-73	2	Nut-Lock, NI				
24	3256-1	1	Washer-Flat				
25	100-3937	1	Cable-Brake				
26	100-5970	1	Cover-Handle				

 7

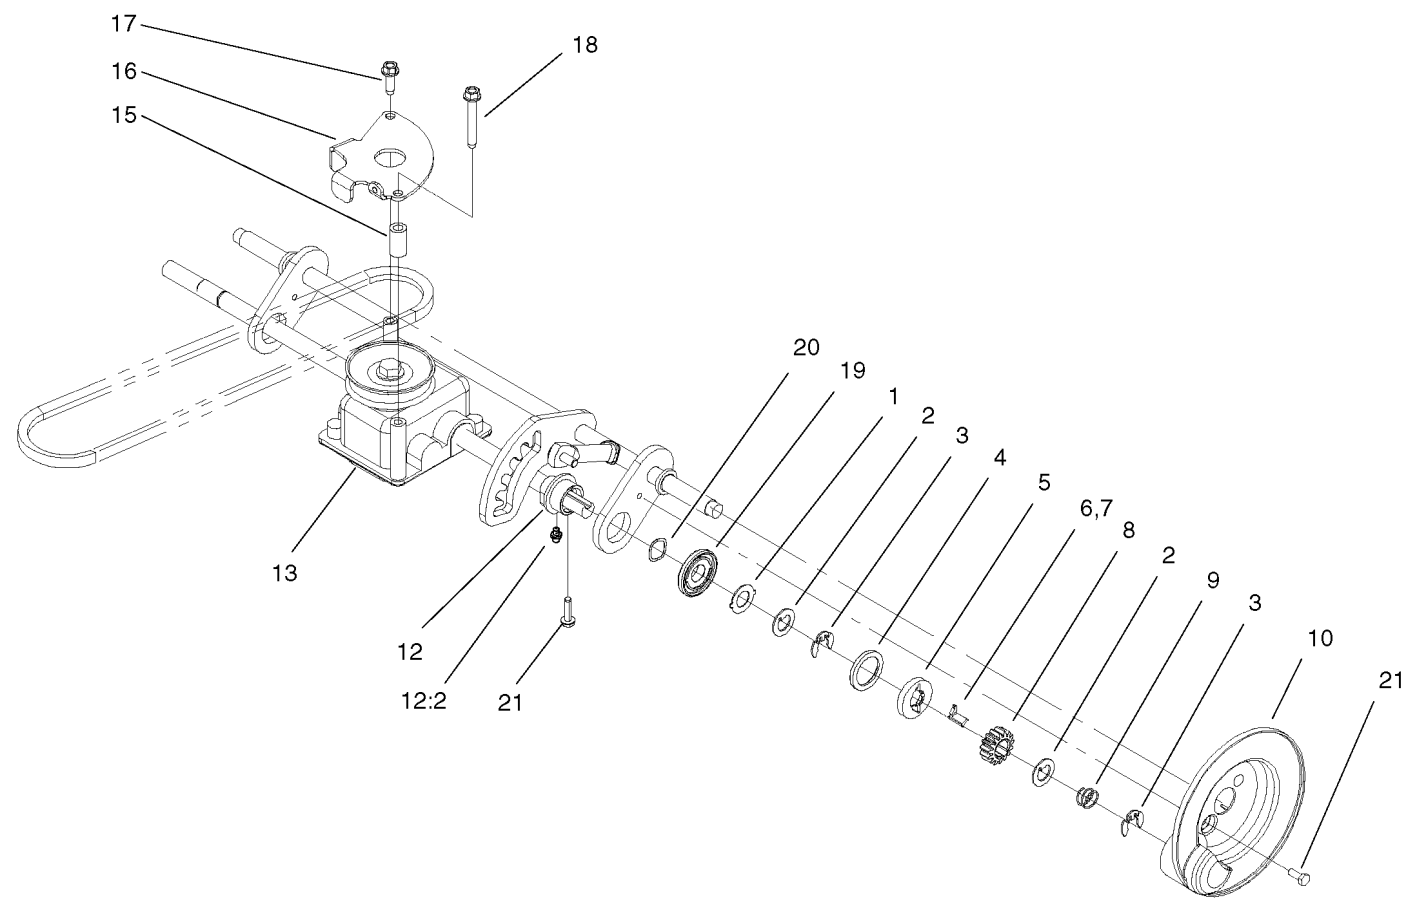


Drive Assembly

Ref	Part No.	Qty.	Description				
1	65-4730	2	Washer-Arm, Pivot				
2	65-4740	4	Washer-Thrust, Keyed				
3	65-2720	4	Klipring-Locking				
4	65-4710	2	Ring-Friction				
5	65-4760	2	Washer-Clutch				
6	66-6040	1	Key-Rocking, RH				
7	66-6050	1	Key-Rocking, LH				
8	65-4750	2	Gear-Pinion				
9	65-4720	2	Spring-Compression				
10	100-1513	2	Cover-Gear				
12	100-9118	2	Bushing ASM				
12:2	302-56	1	Fitting-Grease				
13	99-6466	1	Transmission ASM				
15	614673	1	Bushing-Plate, Actuator				
16	100-1524-03	1	Guide-Transmission				
17	49-2040	1	Screw-HWHTF				
18	92-1616	1	Screw-HWHTF				
19	100-1511	2	Retainer-Ring				
20	100-1515	2	Washer-Wave				
21	32144-1	4	Screw-Taptite				

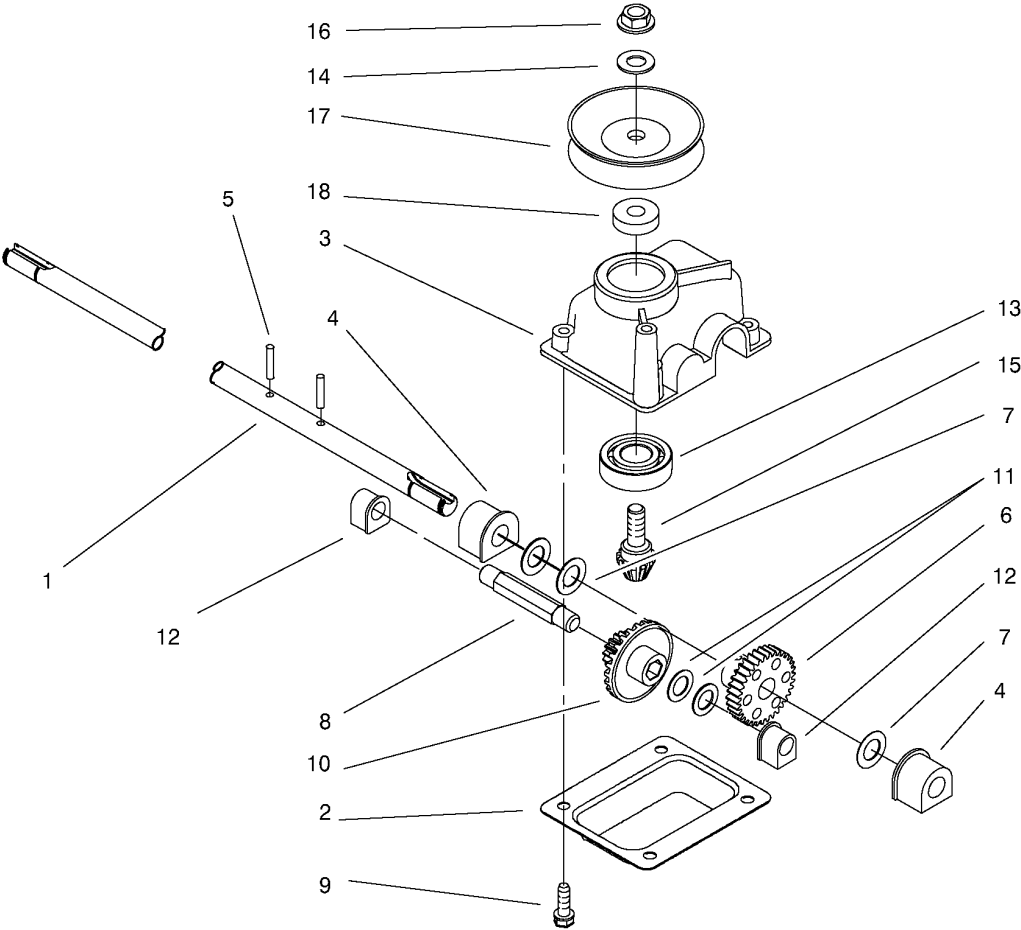 

Gear Case Assembly No. 99-6466

Ref	Part No.	Qty.	Description				
1	100-1514	1	Shaft-Output				
2	614668-03	1	Cover-Case, Gear				
3	92-7727	1	Gearcase				
4	60-8850	2	Bushing				
5	3285-19	2	Pin-Groove				
6	614596	1	Gear				
7	36-4780	2	Washer-Plain				
8	614696	1	Shaft-Intermediate				
9	49-2040	4	Screw-HWHTF				
10	55-3760	1	Gear-Bevel				
11	36-4791	2	Washer-Thrust				
12	60-8750	2	Bushing				
13	38-7820	1	Bearing-Ball				
14	3256-24	1	Washer-Flat				
15	60-8890	1	Gear-Pinion				
16	3296-5	1	Nut-Lock				
17	100-1176	2	Pulley-Half				
18	62-6660	1	Spacer				

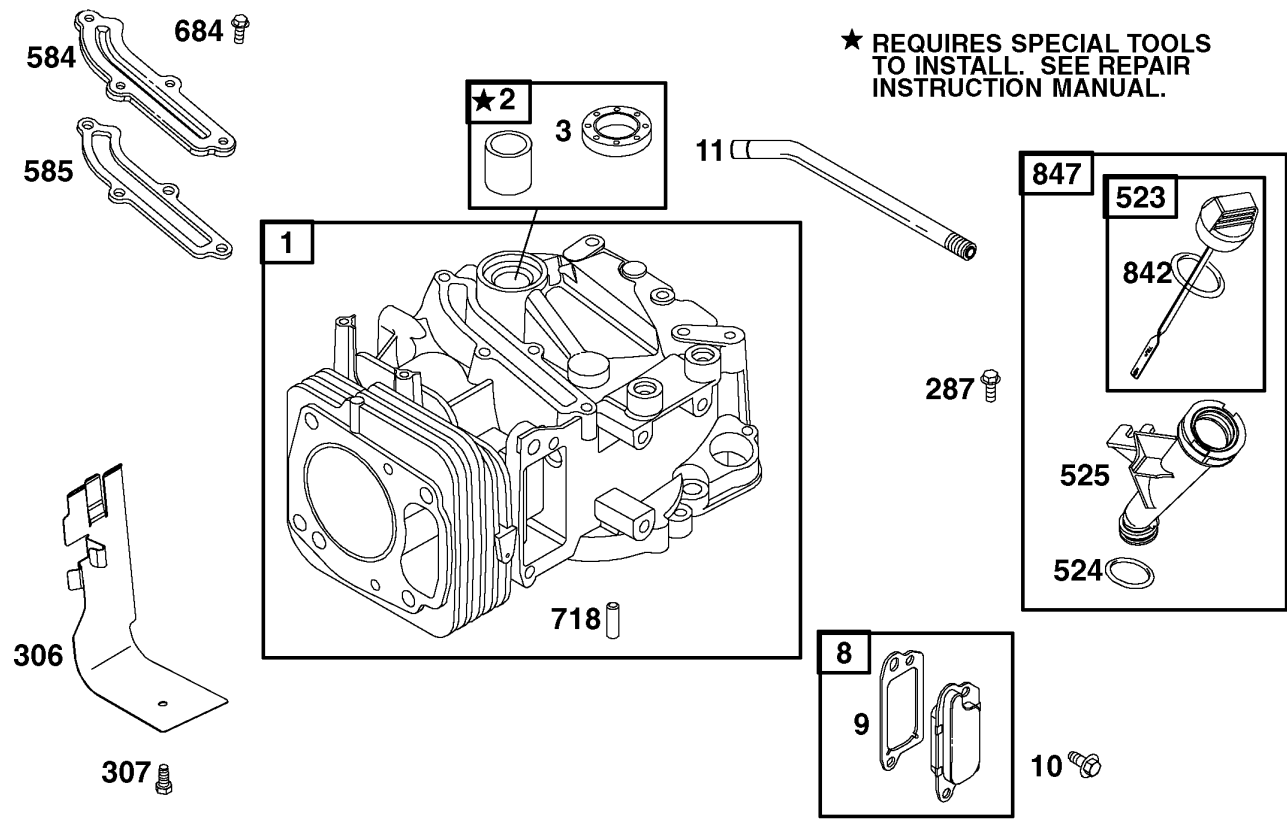 


Assemblies include all parts shown in frames.

Cylinder Assembly

Briggs and Stratton 123602-0152-E1

Ref	Part No.	Qty.	Description				
1	99-0900	1	Cylinder ASM				
2	99-0911	1	Bushing				
❶3	77-9060	1	Seal - Oil				
8	77-9260	1	Breather ASM				
❶9	99-0913	1	Gasket-Breather				
10	99-0914	1	Screw-HH				
11	99-0915	1	Tube-Breather				
523	100-9146	1	Dipstick				
306	99-0917	1	Governor Lever ASM				
❶842	77-7270	1	O-Ring				
❶524	77-7300	1	O-Ring				
307	99-0920	1	Screw-HH				
❶585	77-7410	1	Gasket-Breather				
525	99-0906	1	Tube-Filter, Oil				
718	77-7600	1	Dowel - Sleeve				
584	99-0922	1	Baffle-Cylinder				
847	98-9209	1	Dipstick Tube ASM				
684	99-0920	1	Screw-HH				
287	99-0927	1	Screw-HH				

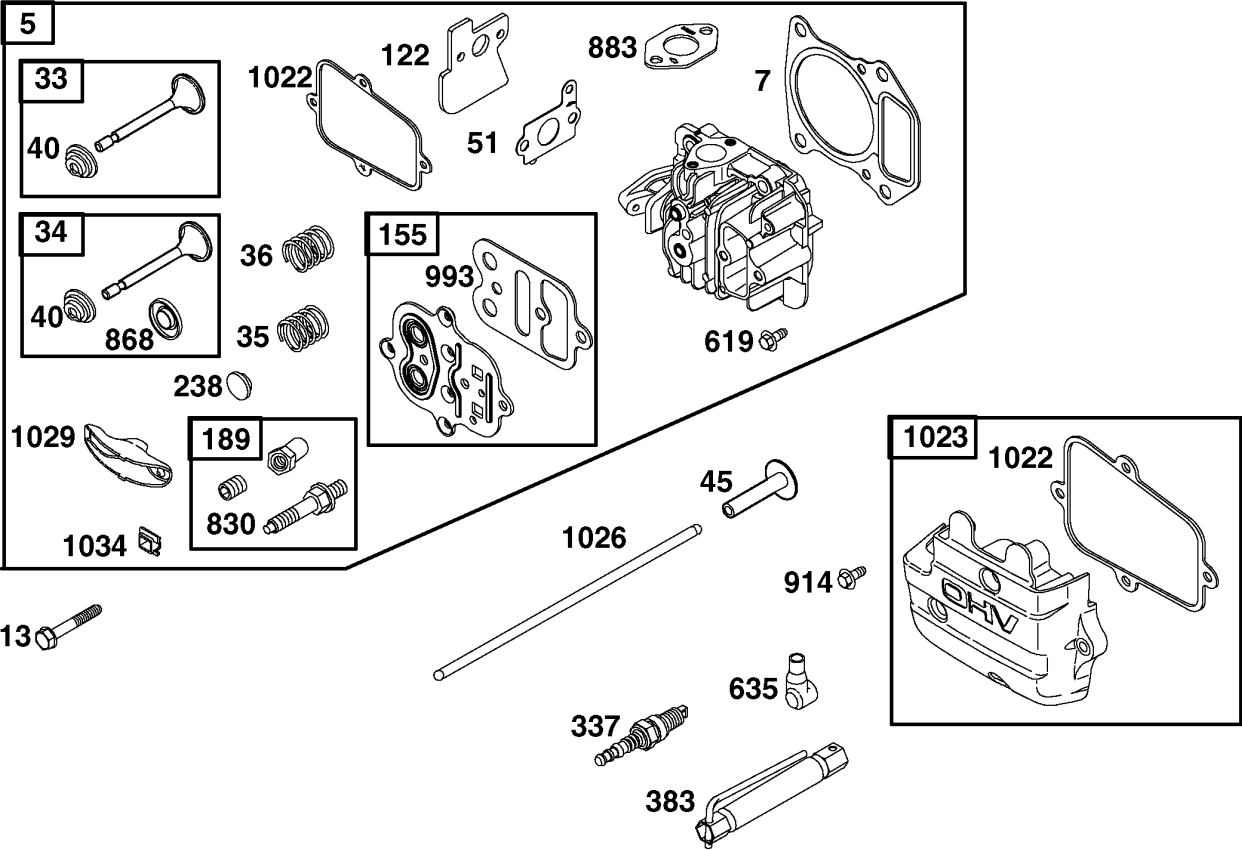 


Assemblies include all parts shown in frames.

Cylinder Head Assembly

Briggs and Stratton 123602-0152-E1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
5	99-0929	1	Head-Cylinder	1034	99-0951	1	Guide-Rod, Push
147	99-0930	1	Gasket-Head, Cylinder	14993	99-6264	1	Gasket-Plate
13	99-0931	1	Screw-HH	51	99-0968	1	Gasket-Intake
33	99-0932	1	Valve-Exhaust	12122	99-0978	1	Spacer-Carburetor
34	99-0933	1	Valve-Intake				
35	99-0934	1	Spring-Valve				
40	99-0935	1	Retainer-Spring, Valve				
45	99-0936	1	Tappet-Valve				
155	99-0938	1	Plate-Head, Cylinder				
189	99-0939	1	Ball-Rocker Arm				
238	99-0940	1	Cap-Valve				
914	100-9147	1	Screw - Rocker Cover				
337	77-7330	1	Plug-Spark				
383	99-0944	1	Spark Plug Wrench				
635	77-9190	1	Elbow-Plug, Spark				
830	99-0945	1	Stud-Arm, Rocker				
619	99-0941	1	Screw-HH				
14868	99-0946	1	Seal-Valve				
14883	99-0947	1	Gasket-Exhaust				
36	99-0934	1	Spring-Valve				
141022	99-0907	1	Gasket-Cover, Rocker				
1023	98-9211	1	Cover-Rocker & Gasket				
1026	99-0949	1	Rod-Push				
1029	99-0950	1	Arm-Rocker				

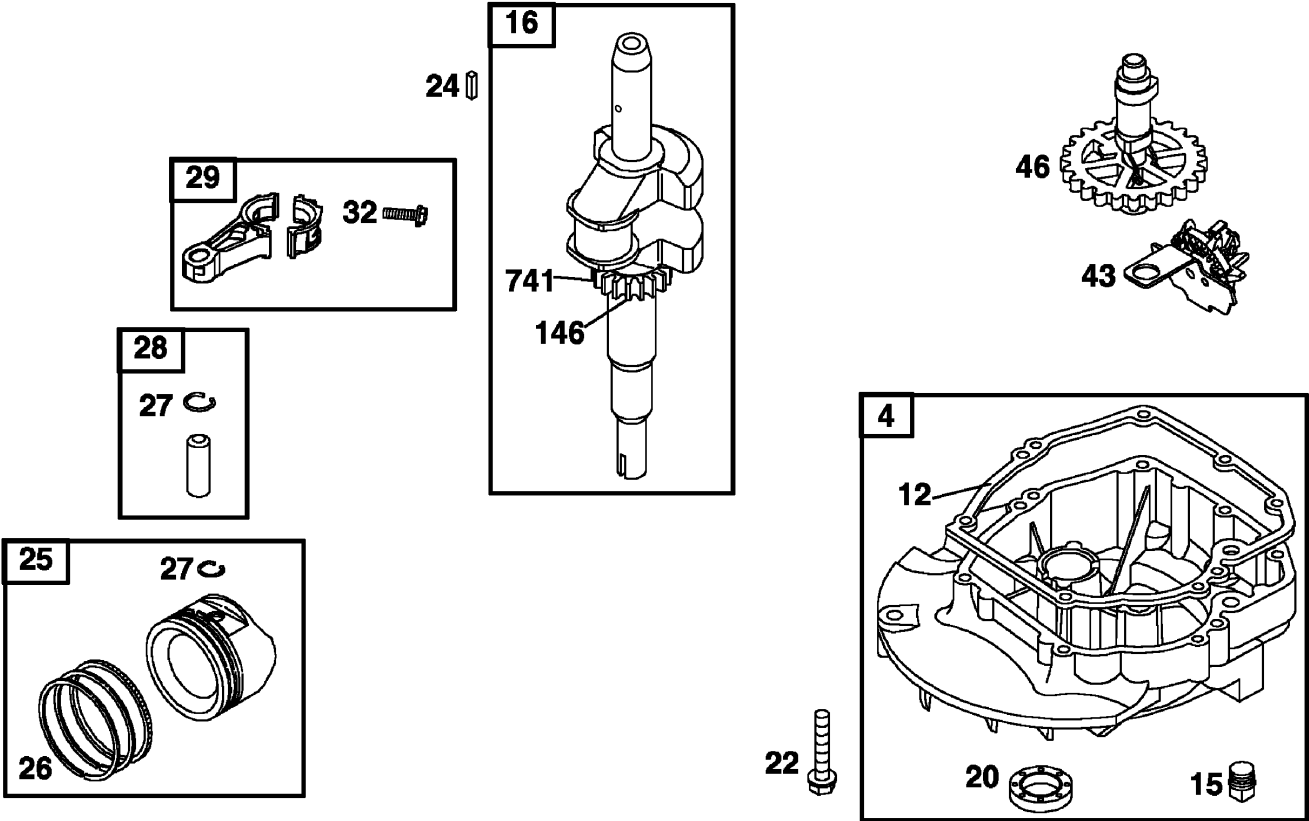 

Assemblies include all parts shown in frames.

Crankcase and Crankshaft Assembly
Briggs and Stratton 123602-0152-E1


Ref	Part No.	Qty.	Description				
4	99-0952	1	Sump-Engine				
❶12	99-0953	1	Gasket-Crankcase				
15	99-0954	1	Plug-Drain, Oil				
16	100-8796	1	Crankshaft				
24	77-8340	1	Key - Flywheel				
❶20	99-0955	1	Oil Seal				
22	99-0957	1	Key-Flywheel				
25	99-0958	1	Piston ASM				
26	99-0959	1	Set-Ring				
27	99-0960	1	Lock-Pin, Piston				
28	99-0961	1	Pin-Piston				
29	99-0962	1	Rod-Connecting				
32	99-0963	1	Screw-Rod, Connecting				
43	99-0964	1	Slinger-Oil, Governor				
46	99-0965	1	Gear-Cam				
146	99-0966	1	Key-Timing				
741	99-0967	1	Gear-Timing				

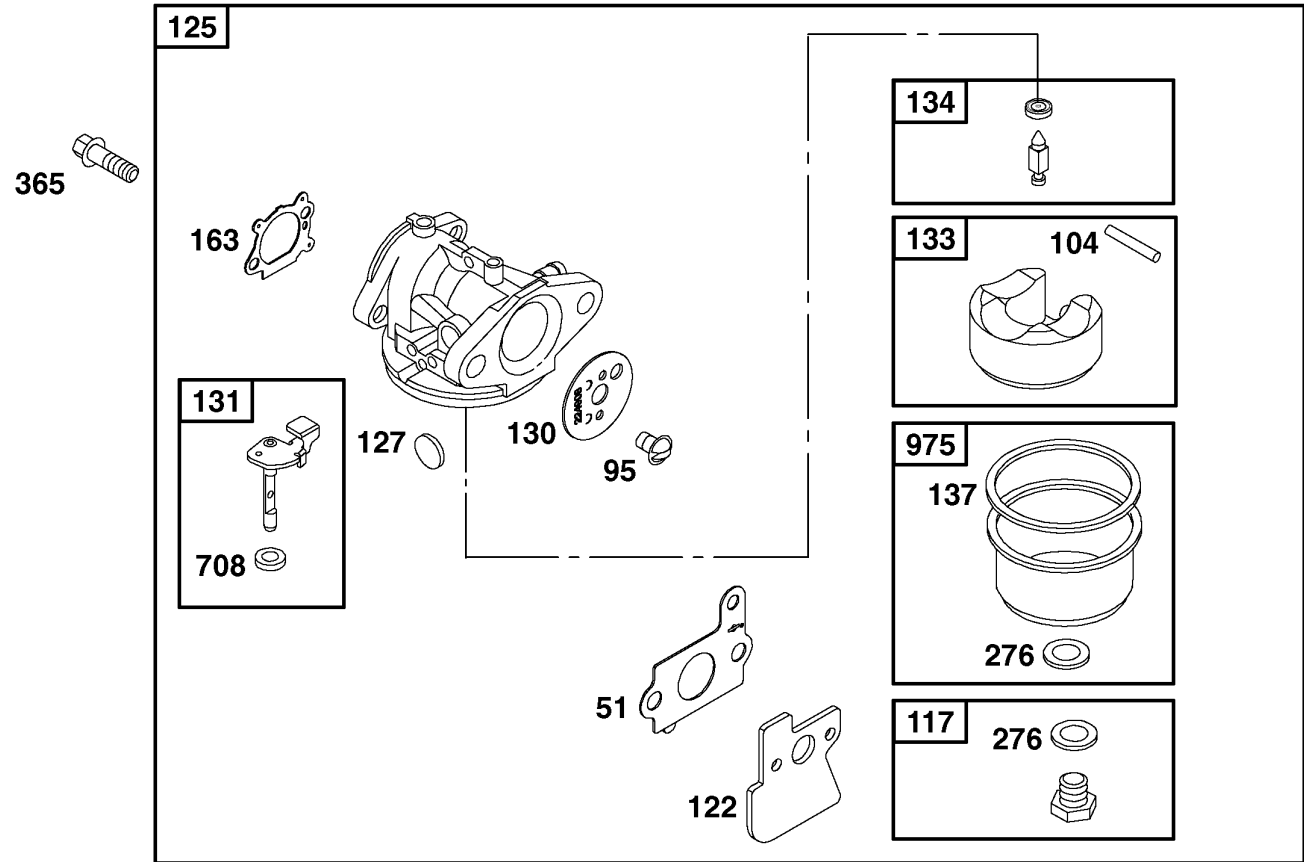 

Assemblies include all parts shown in frames.

Carburetor Assembly
Briggs and Stratton 123602-0152-E1

Ref	Part No.	Qty.	Description				
95	99-0969	1	Screw-SPH				
③104	99-0970	1	Pin-Hinge, Float				
117	99-0971	1	Jet-Main				
②⑤708	100-5037	1	Seal-Dust				
125	99-0973	1	Carburetor				
130	99-0974	1	Valve-Throttle				
131	99-0975	1	Shaft-Throttle				
②⑤276	100-5038	1	Washer-Sealing				
⑤134	77-8110	1	Valve-Float				
①②163	99-0976	1	Gasket-Cleaner, Air				
③							
975	99-0977	1	Bowl-Float				
133	77-8170	1	Float-Carburetor				
①②51	99-0968	1	Gasket-Intake				
③④							
365	99-0972	1	Screw-Shoulder				
①②122	99-0978	1	Spacer-Carburetor				
③④							
⑤127	100-9107	1	Plug-Welch				
②⑤137	104-7550	1	Gasket-Float Bowl				

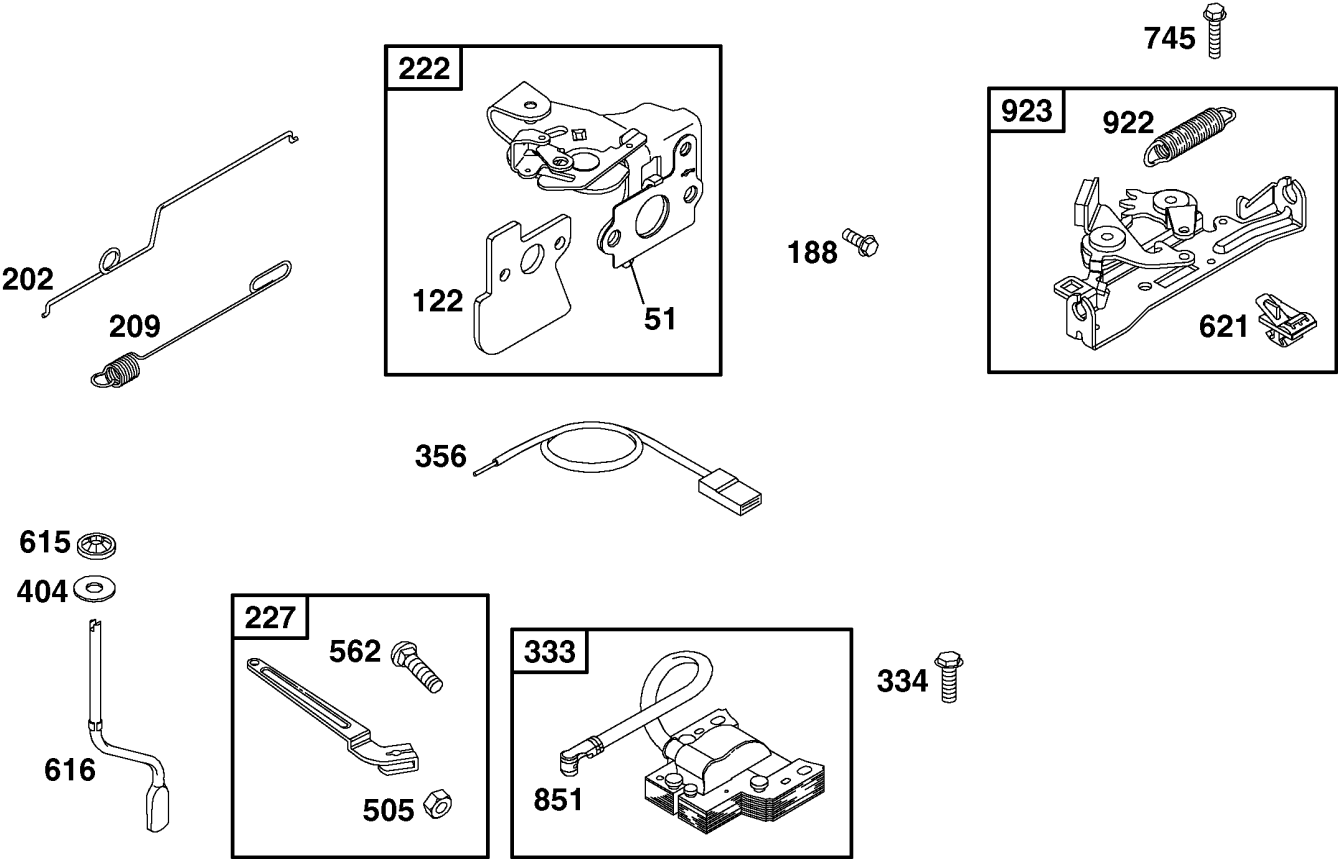 


Assemblies include all parts shown in frames.

Governor Assembly

Briggs and Stratton 123602-0152-E1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1 2 51	99-0968	1	Gasket-Intake	616	99-0926	1	Crank-Governor
3 4				209	99-0982	1	Spring-Governor
1 2 122	99-0978	1	Spacer-Carburetor	1119	104-7551	1	Screw-Alternator
3 4							
222	100-2891	1	Bracket-Control				
910	99-1014	1	Stud-Mounting, Starter				
202	99-0981	1	Link-Governor				
188	100-5031	1	Screw-Control Bracket				
745	99-0983	1	Screw-HH				
474	99-1011	1	Alternator				
356	99-1007	1	Wire-Stop				
334	99-1006	1	Screw-HH				
935	100-9109	1	Switch-Interlock				
851	77-9450	1	Terminal-Plug, Spark				
333	99-1005	1	Armature-Magneto				
922	99-0987	1	Spring-Brake				
923	99-0988	1	Brake Assembly				
621	99-0986	1	Switch-Stop				
1160	77-9520	1	Screw-HH				
227	99-0917	1	Governor Lever ASM				
404	99-0918	1	Washer-Crank, Governor				
562	99-0921	1	Screw-HH				
505	99-0924	1	Nut-Hex				
615	99-0925	1	Fastener				

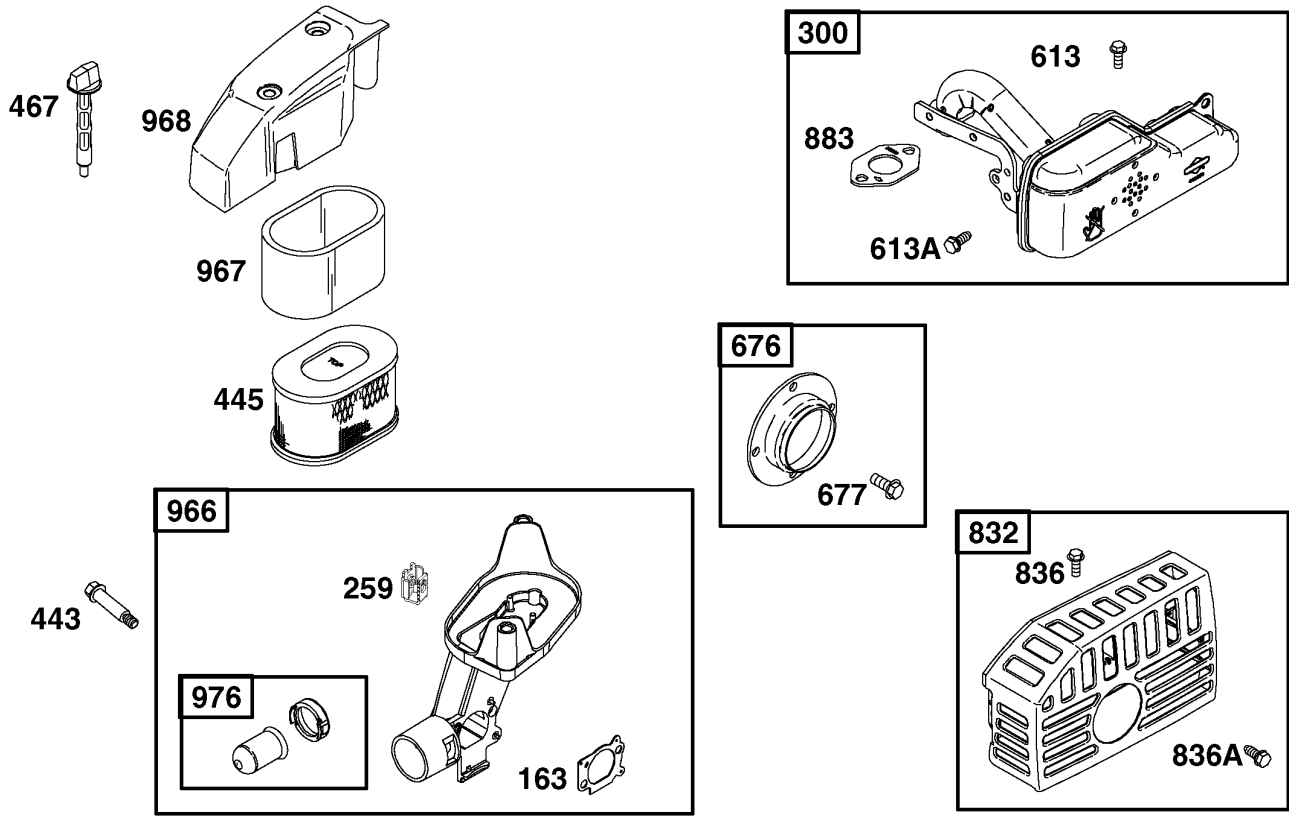 


Assemblies include all parts shown in frames.

Air Cleaner Assembly

Briggs and Stratton 123602-0152-E1

Ref	Part No.	Qty.	Description
467	100-9108	1	Knob-Air Cleaner
677	100-9148	1	Screw
836	94-1674	1	Screw-HH
968	98-9207	1	Cover-Cleaner, Air
445	98-9212	1	Element-Filter, Air
1 4883	99-0947	1	Gasket-Exhaust
1 2163	99-0976	1	Gasket-Cleaner, Air
966	99-0979	1	Base-Cleaner, Air
613	99-1047	1	Screw-HH
836A	99-0999	1	Screw-HH
300	99-0995	1	Muffler-Exhaust
259	99-0984	1	Grommet
967	99-0989	1	Wrap-Foam, Pre-Filter
676	99-1044	1	Deflector-Muffler
832	98-9206	1	Guard-Muffler
613A	99-0941	1	Screw-HH
443	99-0990	1	Screw-Hex
976	99-0991	1	Primer

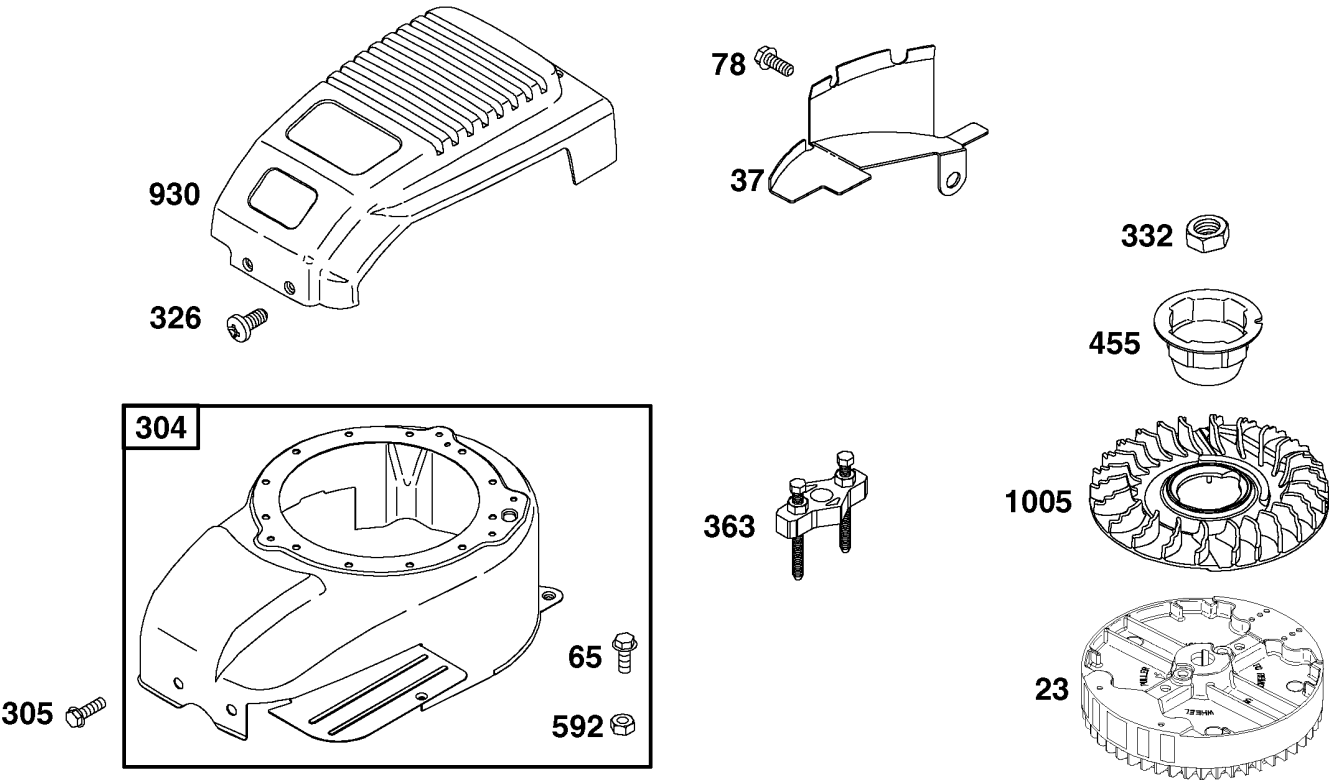 


1036 EMISSIONS LABEL

Assemblies include all parts shown in frames.

Flywheel Assembly
Briggs and Stratton 123602-0152-E1

Ref	Part No.	Qty.	Description				
23	99-1001	1	Flywheel				
332	94-1673	1	Nut-Flywheel				
65	99-1002	1	Screw-HH				
304	99-1003	1	Housing-Blower				
930	98-9203	1	Guard-Rewind				
1036	99-1016	1	Kit-Label, Emissions				
1005	99-1015	1	Fan-Flywheel				
326	98-9204	1	Screw-Shroud				
363	99-1008	1	Puller-Flywheel				
592	99-1009	1	Nut-Hex				
455	99-1010	1	Cup-Flywheel				
305	99-0941	1	Screw-HH				
37	99-0905	1	Guard-Flywheel				
78	99-0941	1	Screw-HH				




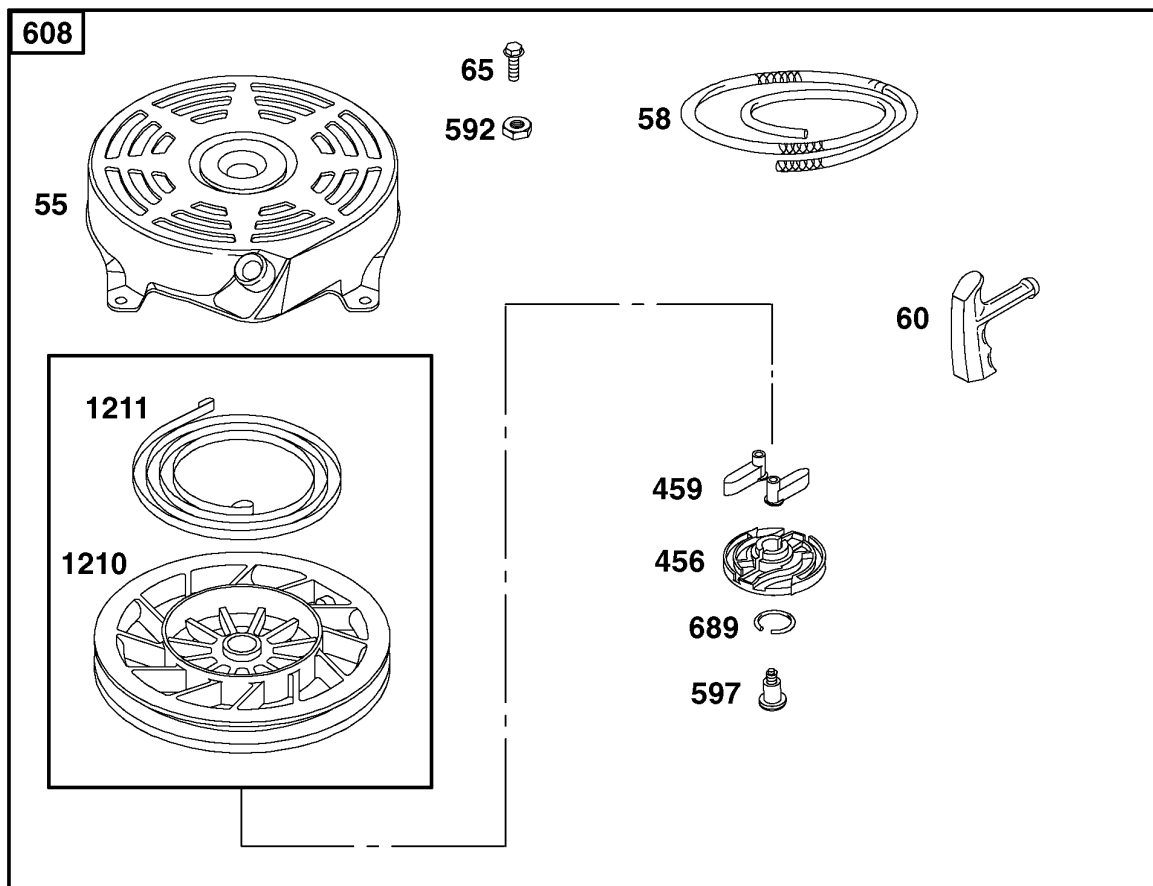 


Assemblies include all parts shown in frames.

Starter Assembly

Briggs and Stratton 123602-0152-E1


Ref	Part No.	Qty.	Description				
55	99-1048	1	Housing-Starter				
65	99-1002	1	Screw-HH				
58	94-1668	1	Rope-Starter				
592	100-9149	1	Nut (Rewind Starter)				
60	77-8510	1	Handle - Rewind Starter				
1210	94-1657	1	Pulley-Starter, Rewind				
1211	94-1657	1	Pulley-Starter, Rewind				
456	94-1659	1	Retainer-Starter, Rewind				
459	94-1654	1	Pawl-Starter				
597	94-1660	1	Screw-Shoulder				
689	94-1655	1	Spring-Torsion				
608	98-9215	1	Rewind ASM				

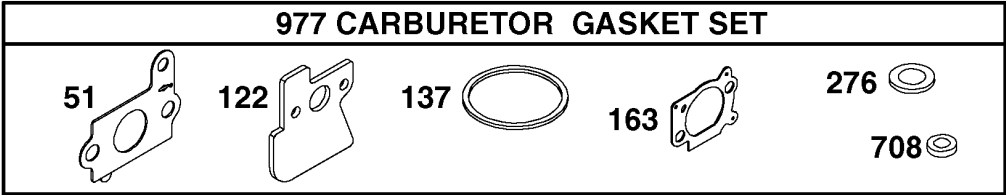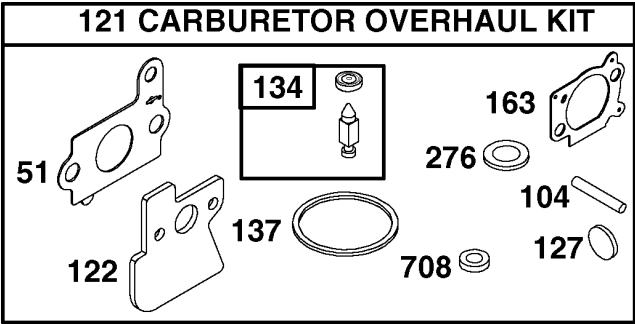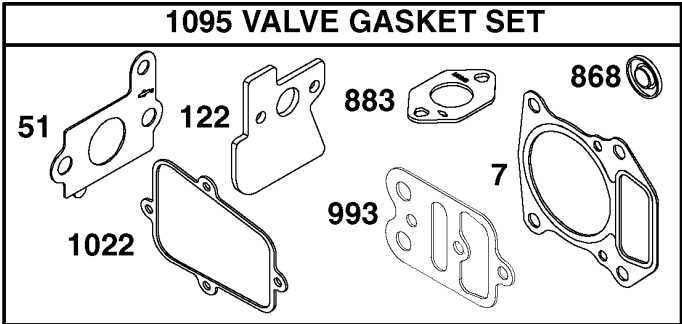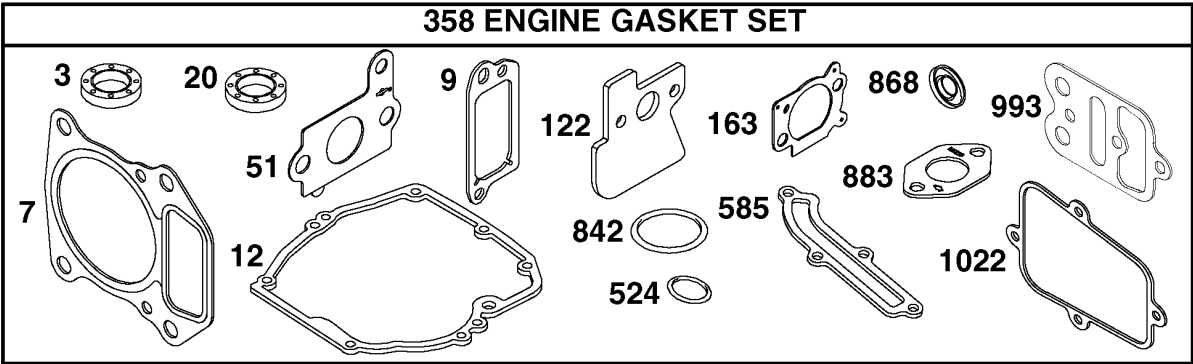    

Gasket Set
Briggs and Stratton 123602-0152-E1

Ref	Part No.	Qty.	Description
13	99-0912	1	Oil Seal
147	99-0930	1	Gasket-Head, Cylinder
19	99-0913	1	Gasket-Breather
112	99-0953	1	Gasket-Crankcase
1095	100-5033	1	Valve Overhaul Gasket Set
104	99-0970	1	Pin-Hinge, Float
977	100-5034	1	Gasket Set-Carburetor
358	100-5035	1	Engine Overhaul Gasket Set
134	77-8110	1	Valve-Float
121	100-5036	1	Carburetor Kit
708	100-5037	1	Seal-Dust
276	100-5038	1	Washer-Sealing
868	99-0946	1	Seal-Valve
883	99-0947	1	Gasket-Exhaust
842	77-7270	1	O-Ring
524	77-7300	1	O-Ring
1022	99-0907	1	Gasket-Cover, Rocker
122	99-0978	1	Spacer-Carburetor
585	99-0925	1	Fastener
993	99-0948	1	Plate-Gasket
20	99-0955	1	Oil Seal
251	99-0968	1	Gasket-Intake

Ref	Part No.	Qty.	Description
163	99-0976	1	Gasket-Cleaner, Air
127	100-9107	1	Plug-Welch
137	104-7550	1	Gasket-Float Bowl

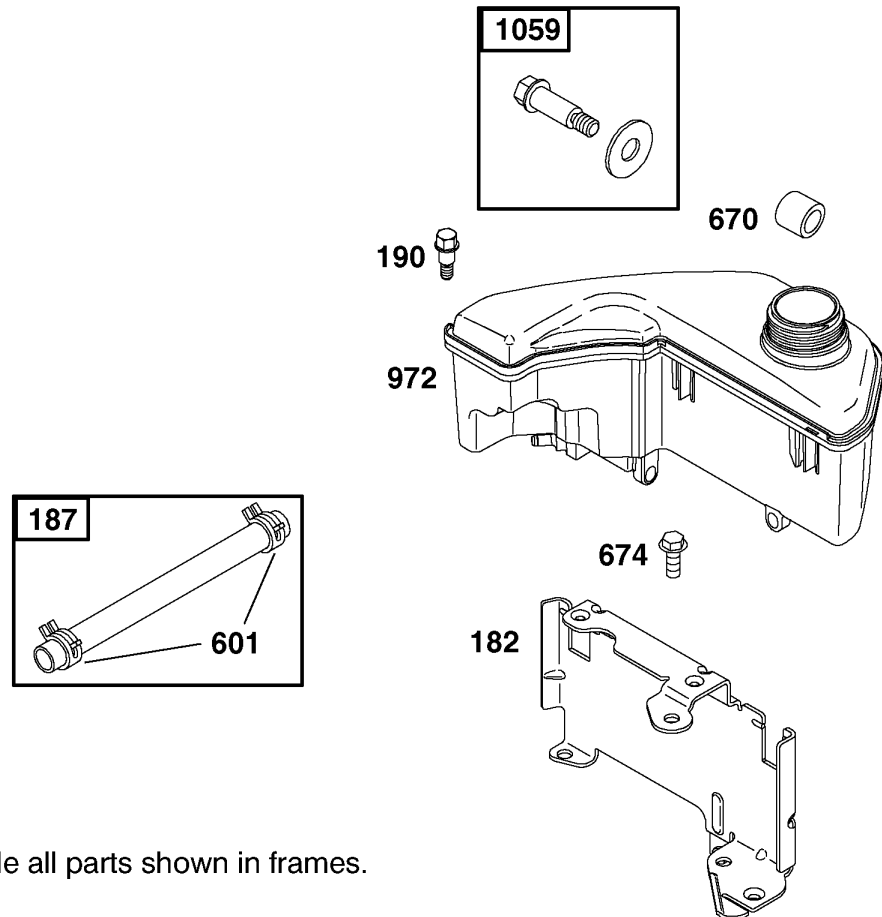 

Assemblies include all parts shown in frames.

Fuel Line and Fuel Pump Assembly

123602-0152-E1

Ref	Part No.	Qty.	Description				
601	78-4690	1	Clamp				
674	98-9202	1	Screw-Bracket, Tank				
182	98-9205	1	Bracket-Tank, Fuel				
187	99-0992	1	Line-Fuel				
1059	99-0993	1	Screw-Shoulder				
190	99-0994	1	Screw-HH				
670	99-0997	1	Spacer-Tank, Fuel				
972	99-1000	1	Tank-Fuel				

