



Titan Z5200

Zero-Turn-Radius Riding Mower

Model No. 74814 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 3	Crankcase Assembly Briggs and Stratton 44M777-0118-E1	 22
Motion Control and Brake Assembly	 5	Fuel Line and Pump Assembly Briggs and Stratton 44M777-0118-E1	 23
Seat Assembly	 6	Carburetor Assembly Briggs and Stratton 44M777-0118-E1	 24
Fuel Tank Assembly	 7	Air Cleaner Assembly Briggs and Stratton 44M777-0118-E1	 25
Engine Assembly	 8	Governor Assembly Briggs and Stratton 44M777-0118-E1	 26
Transmission Assembly	 9	Flywheel Assembly Briggs and Stratton 44M777-0118-E1	 27
RH Transmission Assembly No. 109-3371	 10	Starter Assembly Briggs and Stratton 44M777-0118-E1	 28
LH Transmission Assembly No. 109-3372	 12	Gasket Set Briggs and Stratton 44M777-0118-E1	 29
52 Inch Deck Assembly	 14	Carburetor Overhaul Kit Briggs and Stratton 44M777-0118-E1	 30
52 Inch Blade and Discharge Assembly	 15	Attachments and Accessories List	 31
Cutter Housing Assembly No. 109-6394	 16		
Rubber Deflector Assembly No. 114-1651	 17		
Electrical Assembly	 18		
Cylinder Assembly Briggs and Stratton 44M777-0118-E1	 19		
Cylinder Head Assembly Briggs and Stratton 44M777-0118-E1	 20		
Crankshaft Assembly Briggs and Stratton 44M777-0118-E1	 21		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|---|--|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Briggs & Stratton dealer | ❹ Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❺ Included in Engine Gasket Set (Ref. No. 358) | ❻ Included in Carburetor Gasket Set (Ref. No. 977) |
| ❽ Included in Valve Gasket Set (Ref. No. 1095) | |

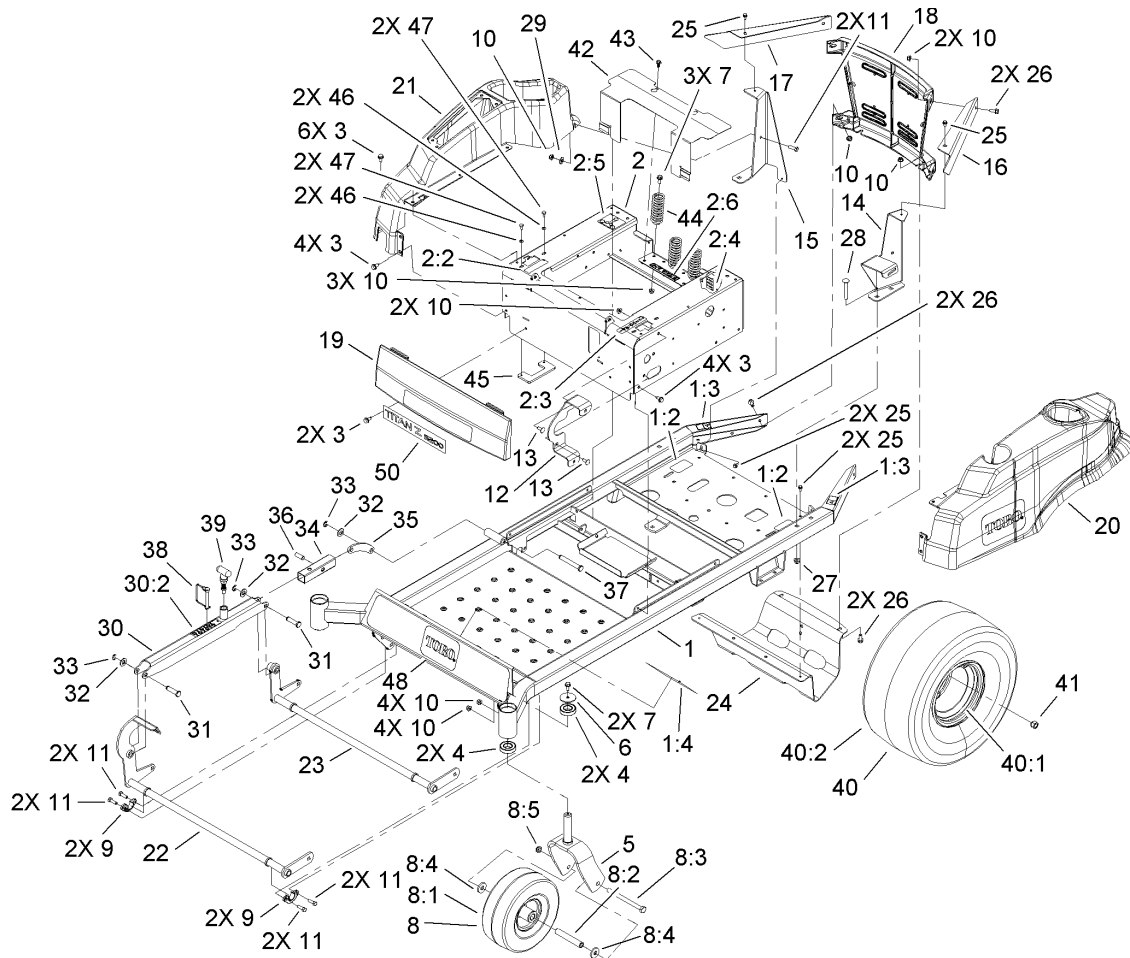

Frame Assembly


Ref	Part No.	Qty.	Description
1	109-6257	1	Frame ASM
1:2	109-6008	2	Decal-Drive Release
1:3	106-5517	2	Decal-Surface, Hot
1:4	109-6013	1	Decal-Safety Warning
2	109-6404	1	Seat Box ASM
2:2	99-8936	1	Decal-Control, Motion
2:3	109-6009	1	Decal-Control, Brake
2:4	109-6011	1	Decal-Fuse Block
2:5	109-6014	1	Decal-Belt Routing
2:6	109-6210	1	Decal-Danger
3	32144-70	16	Screw-HWHTF
4	109-3678	4	Bearing-Ball
5	109-6218-01	2	Caster Fork ASM
6	109-3724	2	Washer
7	3234-47	5	Screw-HHF
8	109-6405	2	Caster Wheel ASM
8:1	105-1863	1	Wheel-Caster
8:2	104-3667	1	Spanner-Wheel
8:3	325-20	1	Screw-HH
8:4	92-2651	2	Washer
8:5	3296-45	1	Nut-Lock, NI
9	109-3667	4	Bearing-Flange
10	104-8300	21	Nut-Flange, NI
11	322-5	10	Screw-HH

Ref	Part No.	Qty.	Description
12	109-6045-03	1	Bracket-Tank Mount
13	3230-23	2	Screw-CARR
14	109-6867-03	1	Bracket-Rear Tank, LH
15	109-3406-03	1	Bracket-Rear Console, RH
16	109-3381-03	1	Guard-Engine, LH
17	109-3391-03	1	Guard-Engine, RH
18	109-5444-03	1	Casting-Rear, Toro
19	109-5432	1	Panel-Front, Toro
20	109-5441	1	Fender-Toro, LH
21	109-5442	1	Fender-Toro, RH
22	109-3421-03	1	Front Shaft ASM
23	109-3422-03	1	Rear Shaft ASM
24	109-5392-03	1	Guard-Muffler
25	9266714	6	Screw-HWH
26	3234-5	6	Screw-HHF
27	104-8301	4	Nut-Flange, NI
28	3231-9	4	Screw-CARR
29	3256-3	2	Washer-Flat
30	109-6396	1	Height Adjust ASM
30:2	109-6010	1	Decal-Cut Height
31	109-5819	2	Pin-Clevis
32	3256-26	3	Washer-Flat
33	32120-47	3	Ring-Retaining, External
34	109-5822	1	Stop-Height Adjust

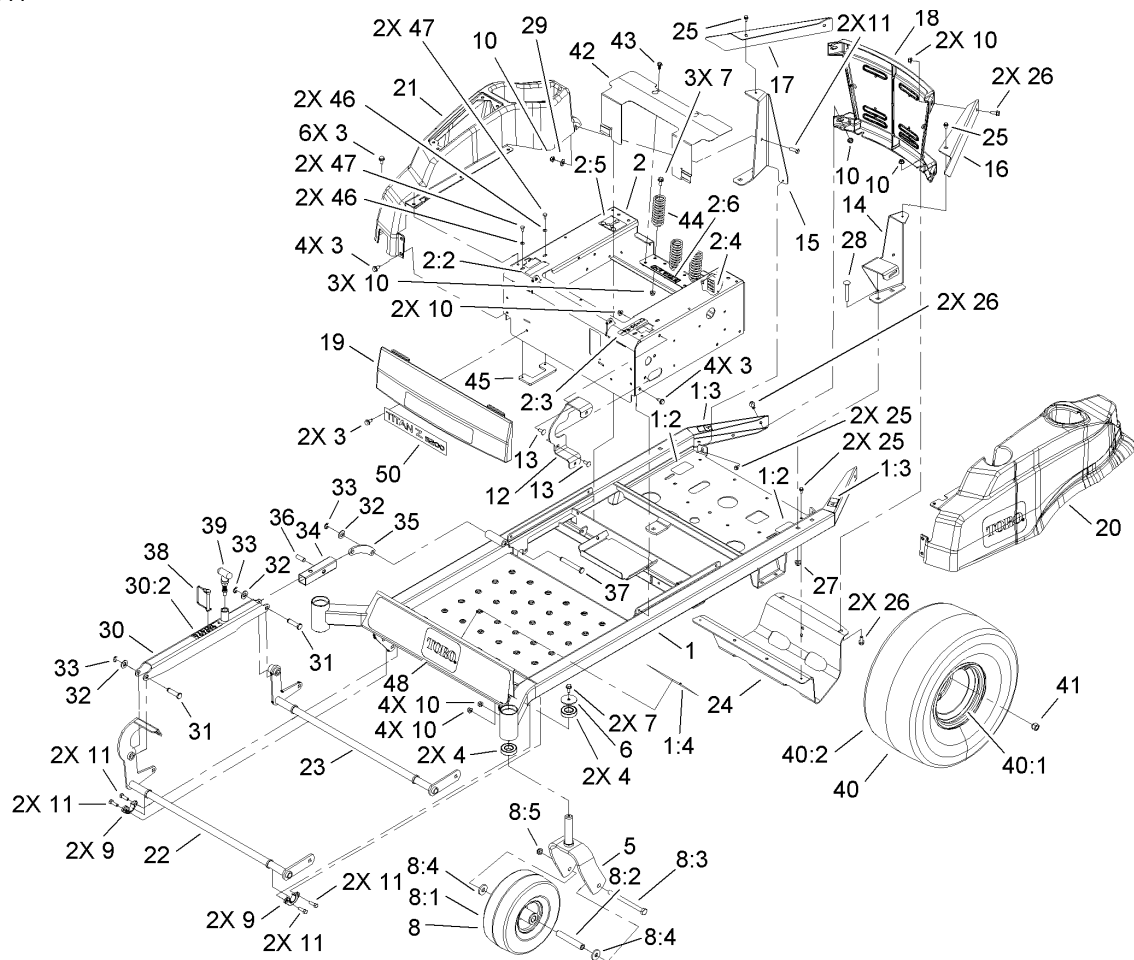 

Frame Assembly (continued)


Ref	Part No.	Qty.	Description				
35	109-5814	1	Arm-Float Link				
36	109-5818	1	Pin-Pivot				
37	109-6172	1	Pin-Clevis				
38	93-4696	1	Pin-Hitch				
39	109-6177	1	Pin-Spring				
40	109-5268	2	Wheel And Tire ASM				
40:1	109-5270	1	Wheel				
40:2	109-5269	1	Tire				
41	242-50	8	Nut-Lug				
42	109-6190-03	1	Cover-Hydro Fan				
43	99-6810	2	Screw-HH				
44	92-7054	3	Spring-Compression				
45	109-6214	2	Stop-Motion Control				
46	1-303435	4	Washer-Spring				
47	321-2	4	Screw-HH				
48	109-5865	1	Decal-Front Panel, Toro				
50	109-5867	1	Decal				

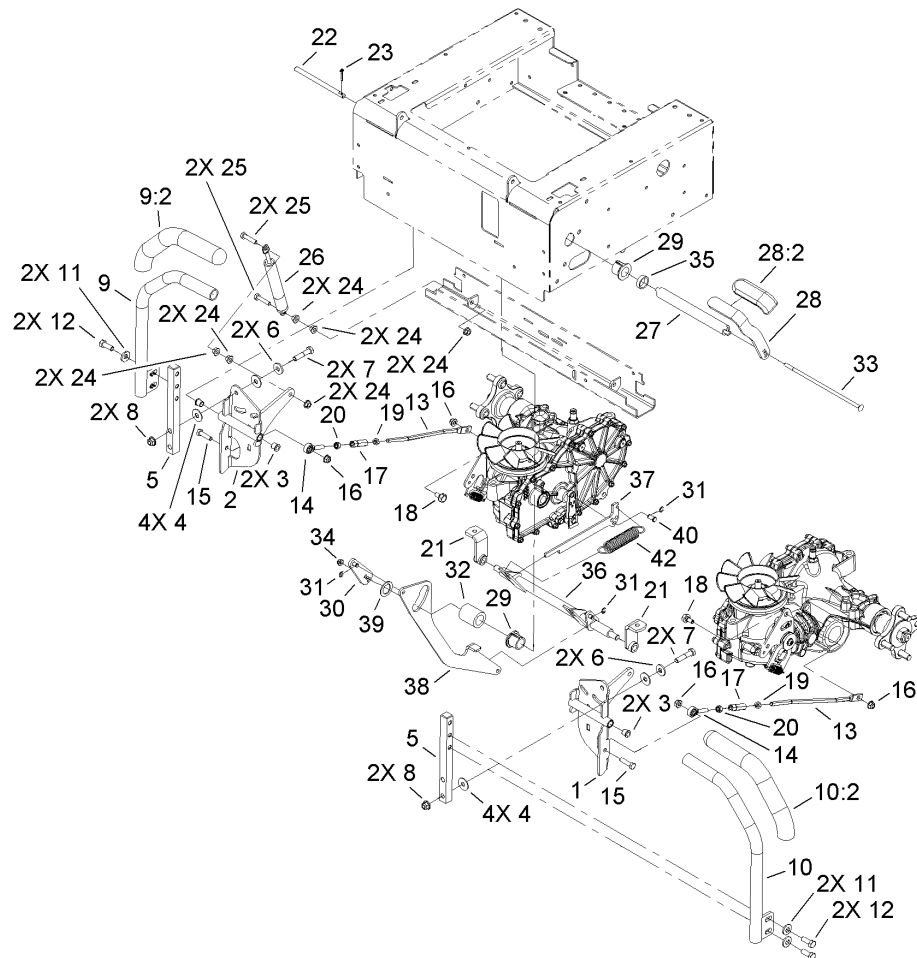 

Motion Control and Brake Assembly


Ref	Part No.	Qty.	Description
1	109-6518	1	LH Motion Control Pivot ASM
2	109-6519	1	RH Motion Control Pivot ASM
3	103-9928	4	Bearing
4	52-2900	8	Washer-Plastic
5	109-3689	2	Post-Lever Mount
6	5-0838	4	Washer
7	323-9	4	Screw-HH
8	104-8301	4	Nut-Flange, NI
9	109-6197	1	RH Lever Grip ASM
9:2	109-5192	1	Grip-Control Lever
10	109-6202	1	LH Lever Grip ASM
10:2	109-5192	1	Grip-Control Lever
11	98-5975	4	Washer-Belleville
12	323-6	4	Screw-HH
13	109-3414	2	Rod-Steering
14	2411-53	2	Bearing-Rod End, LH
15	322-6	2	Screw-HH
16	104-8300	4	Nut-Flange, NI
17	109-3728	2	Nut-Rod Adjustment
18	37-8771	2	Bolt-Shoulder
19	3220-2	2	Nut-Jam
20	3220-20	2	Nut-Jam
21	109-6220	2	Brake Pivot ASM
22	109-3705	2	Pin-Control Pivot

Ref	Part No.	Qty.	Description
23	3272-10	2	Pin-Cotter
24	32128-20	12	Nut-HF
25	1-403180	4	Screw-HH
26	109-5957	2	Damper-Motion Control
27	109-5825	1	Tube-Brake Pivot
28	109-5918	1	Lever ASM
28:2	1-633268	1	Grip-Lever, Brake
29	107-7581	2	Bushing-Flange, Keyed
30	109-5824	1	Bellcrank ASM
31	701197	2	E-Ring
32	109-5834	1	Spacer
33	109-5868	1	Bolt-CARR
34	104-7201	1	Nut-HF
35	109-5914	1	Spacer
36	109-5828	1	Brake Shaft ASM
37	109-5832	2	Plate-Spring Anchor
38	109-5833	1	Arm-Brake
39	99-4958	1	Spacer
40	1-808278	2	Pin-Clevis
42	1-603693	2	Spring-Extension

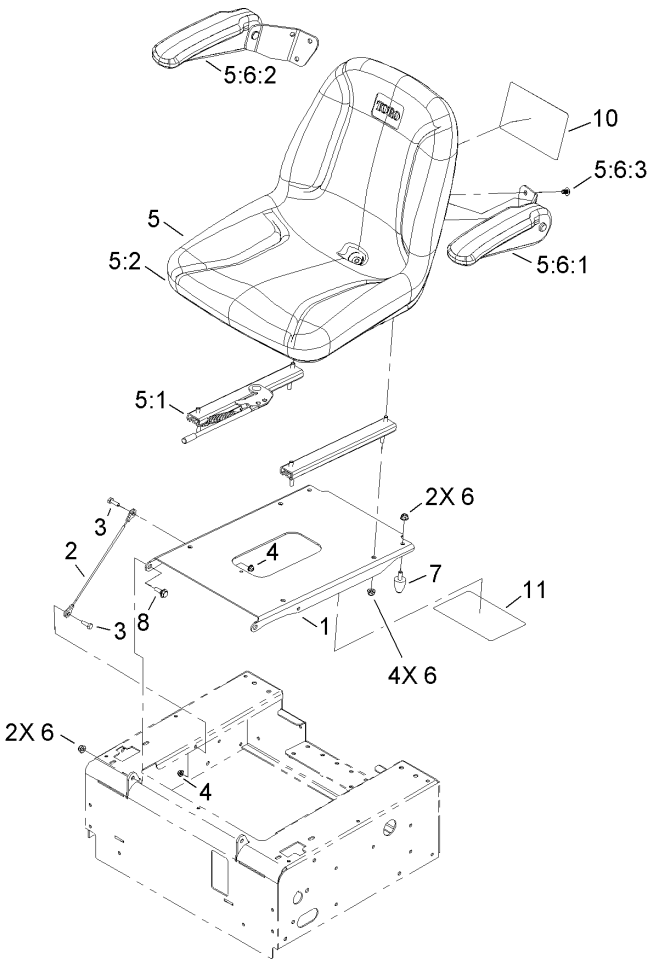 


Seat Assembly

Ref	Part No.	Qty.	Description				
1	106-6916	1	Plate-Seat				
2	109-2628	1	Cable-Stop, Seat				
3	321-5	2	Screw-HH				
4	104-7201	2	Nut-HF				
5		1	Seat ASM				
5:1	107-1880	1	Seat Track Kit				
5:2	109-6381	1	Seat,Toro				
5:6		1	Armrest Kit				
5:6:1	110-6569	1	LH Armrest Kit				
5:6:2	110-6570	1	RH Armrest Kit				
5:6:3	108-6179	6	Screw-HSBH				
6	104-8300	6	Nut-Flange, NI				
7	103-9376	2	Bumper-Seat				
8	109-6564	1	Pin-Seat Pivot				
10	99-2385	1	Decal				
11	109-6016	1	Decal-Service Aid				

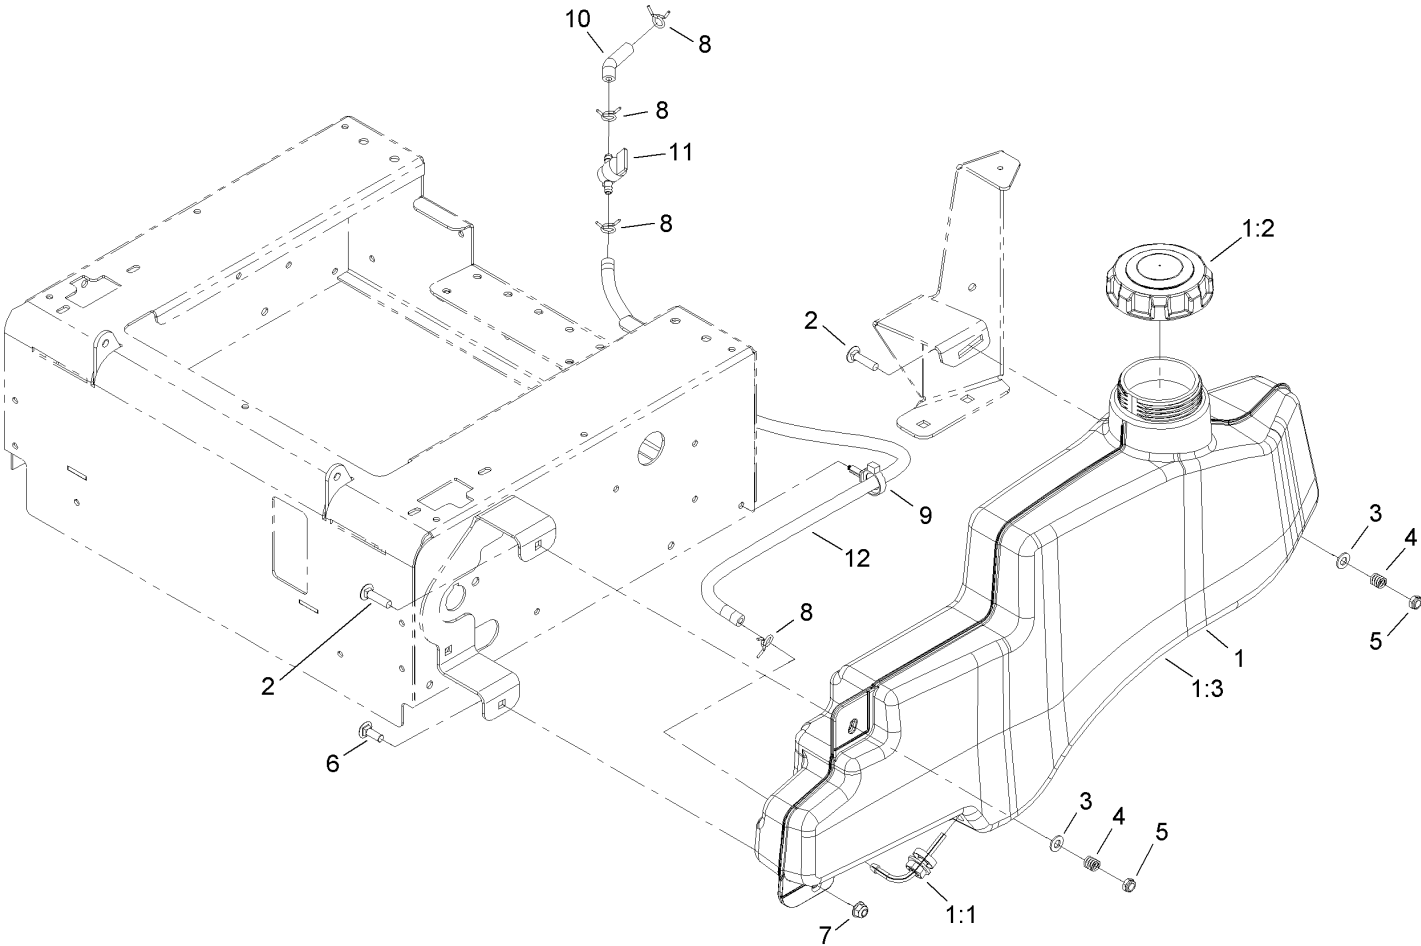 


Fuel Tank Assembly

Ref	Part No.	Qty.	Description				
1	109-5510	1	Fuel Tank ASM				
1:1	103-2605	1	Fitting-Fuel, Bulkhead				
1:2	109-0346	1	Cap-Fuel, Gas				
1:3	109-3412	1	Tank,Fuel				
2	3230-3	2	Screw-CARR				
3	3256-23	2	Washer-Flat				
4	1-633349	2	Spring-Tank, Fuel				
5	3296-47	2	Nut-Lock, NI				
6	3230-16	1	Screw-CARR				
7	104-8300	1	Nut-Flange, NI				
8	1-303077	4	Clamp				
9	105-1853	1	Clamp-Hose				
10	109-0304	1	Hose-Fuel				
11	1-603770	1	Valve-Fuel				
12	109-0286	1	Hose-Fuel				

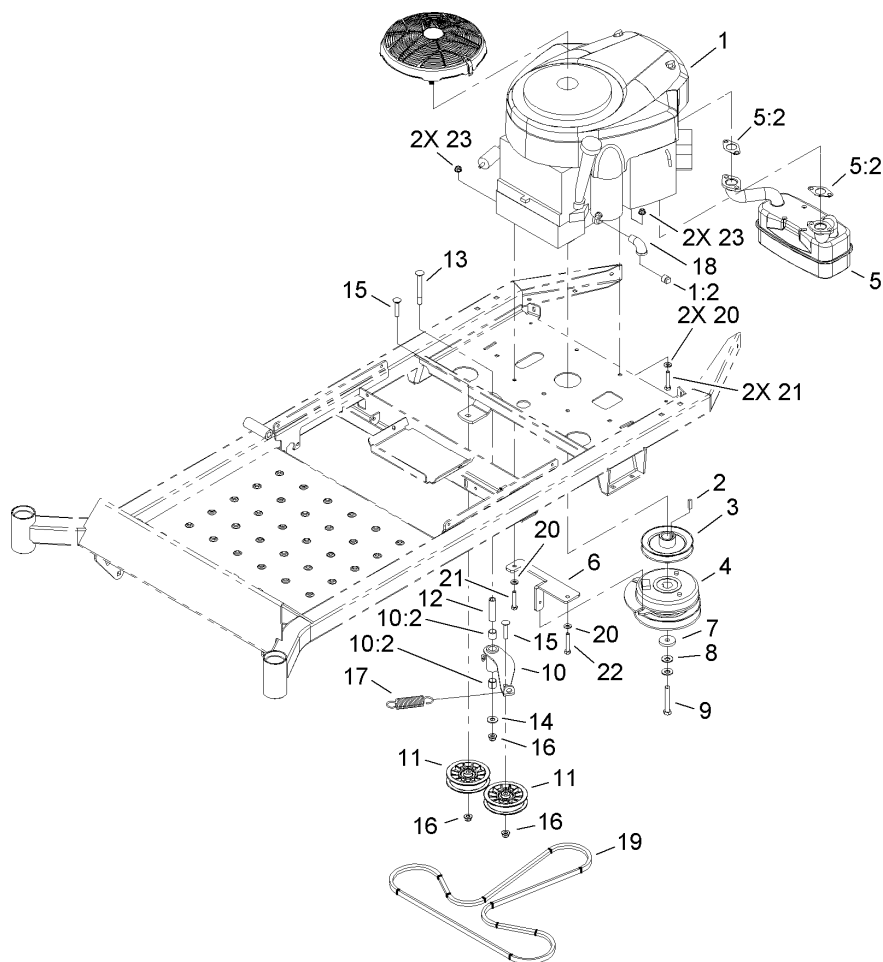 


Engine Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1		1	Engine-Briggs And Stratton, 44M777-0118-E1	21	322-9	3	Screw-HH
1:2	281-2	1	Plug-Pipe, SQH	22	322-10	1	Screw-HH
2	5-7280	1	Key	23	104-8300	4	Nut-Flange, NI
3	109-3386	1	Sheave-Split Steel				
4	110-6766	1	Clutch-Electric, PTO				
5	109-6402	1	Muffler ASM				
5:2	104-3226	2	Gasket-Exhaust				
6	109-3694-03	1	Anchor-Clutch				
7	1-543610	1	Washer-Clutch				
8	1-603610	2	Washer-Spring				
9	3212-11	1	Screw-HH				
10	109-5259	1	Idler Arm ASM				
10:2	1-513034	2	Sleeve-Bearing				
11	109-3397	2	Pulley-Flat Idler				
12	1-603384	1	Bushing-Pivot, Idler				
13	3231-11	1	Screw-CARR				
14	3256-4	1	Washer-Flat				
15	3231-5	2	Screw-CARR				
16	104-8301	3	Nut-Flange, NI				
17	1-603402	1	Spring-Extension				
18	1-403124	1	Elbow-90 DEG				
19	109-3388	1	Belt				
20	1-303334	4	Washer-Spring				

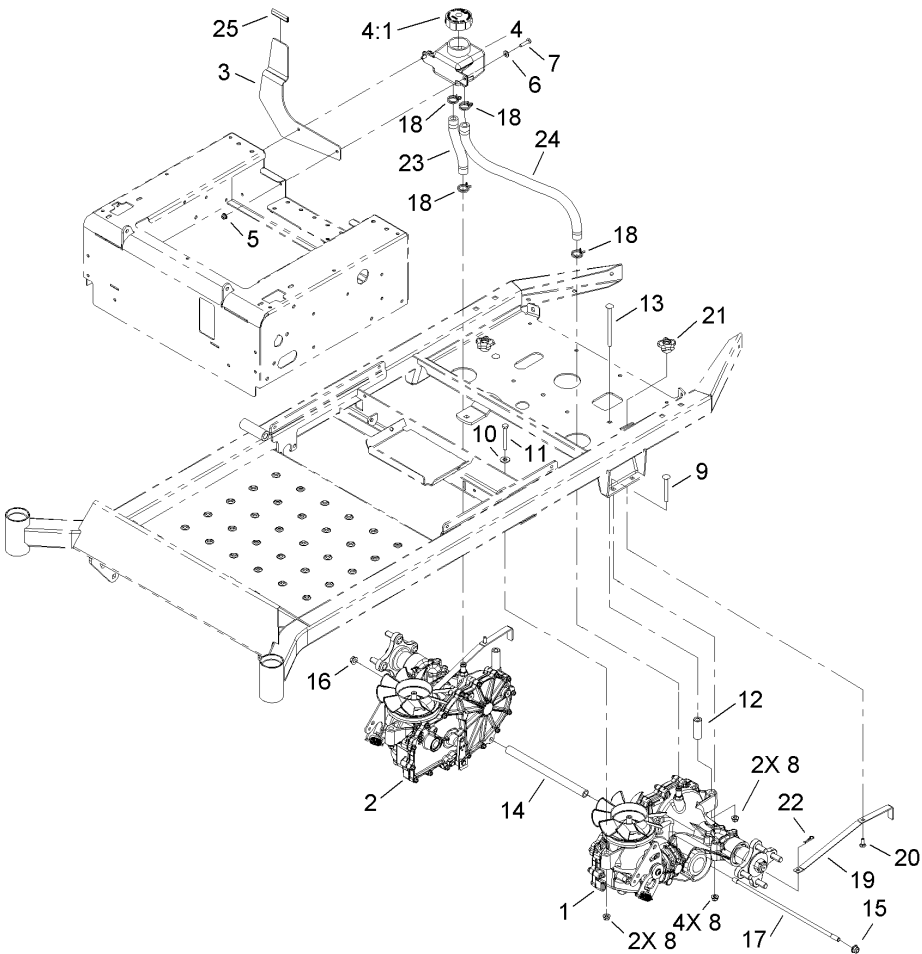 

Transmission Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	109-3372	1	Transmission-LH	24	109-5578	1	Hose-Hydraulic
2	109-3371	1	Transmission-RH	25	109-2985	1	Trim
3	109-6570-03	1	Bracket-Fender Support				
4	109-2250	1	Vent-Tank, Hydro				
4:1	109-3320	1	Cap-Reservoir, Hydraulic				
5	104-7201	2	Nut-HF				
6	3256-22	2	Washer-Flat				
7	321-6	2	Screw-HH				
8	104-8300	8	Nut-Flange, NI				
9	3230-9	4	Screw-CARR				
10	3256-3	2	Washer-Flat				
11	322-12	2	Screw-HH				
12	109-3652	2	Spacer-Hydro				
13	3230-30	2	Screw-CARR				
14	109-3710	1	Tube-Spacer				
15	104-8301	1	Nut-Flange, NI				
16	3290-357	1	Nut-HHF, Whiz				
17	109-3711	1	Rod-Tension				
18	109-3322	4	Clamp-Hose				
19	109-5395	2	Arm-Hydro Bypass				
20	3229-1	2	Screw-CARR				
21	108-6402	2	Knob-Handle				
22	1-806003	2	Pin-Hair				
23	109-5577	1	Hose-Hydraulic				

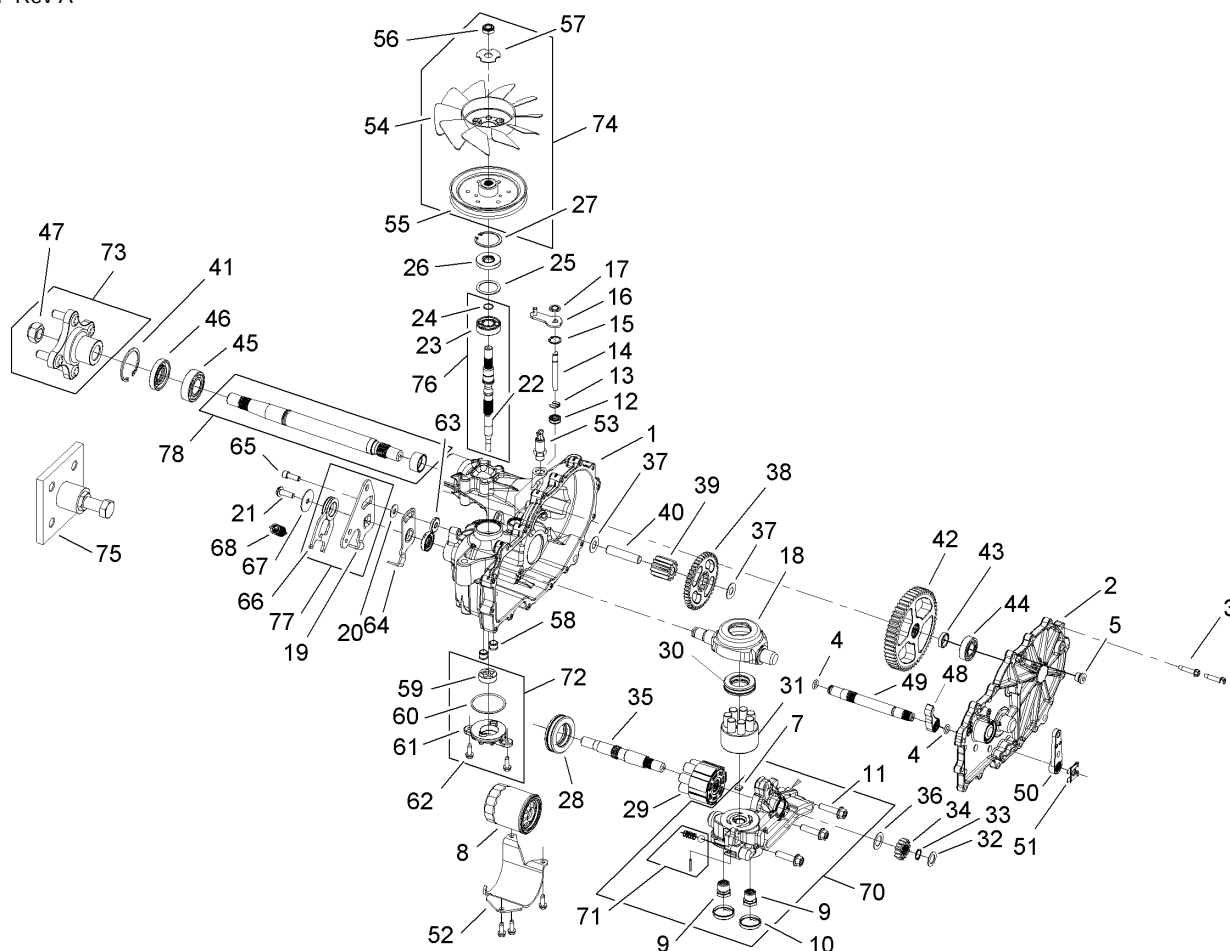 

RH Transmission Assembly No. 109-3371


Ref	Part No.	Qty.	Description
1	114-1676	1	RH Main Housing Kit
2	114-1677	1	RH Side Cover Kit
3	104-5305	16	Screw-HHF
4	114-1678	2	O-Ring
5	112-9850	1	Plug
6	114-1679	1	Loctite 590-Gasket Material
7	114-1680	1	Plate-Bypass
8	109-3321	1	Element-Oil Filter, HYD
9	114-1682	2	Check Plug
10	114-1683	2	Seal-Plug
11	114-1684	3	Screw-Hfhc
12	106-8676	1	Seal-Lip
13	106-8677	1	Ring-Retaining, EXT
14	114-1685	1	Rod-Bypass
15	106-8679	1	Ring-Retaining, Int
16	107-2490	1	Arm-Bypass
17	106-8681	1	Ring-Retaining, EXT
18	104-5304	1	Swashplate-Trunnion
19	114-1686	1	Arm-Control, RH
20	114-8491	1	Washer
21	107-2488	1	Screw
22	114-1687	1	Shaft-Input
23	103-7441	1	Bearing-Shaft, Input
24	104-5307	1	Ring-Retaining

Ref	Part No.	Qty.	Description
25	104-5308	1	Spacer
26	104-5310	1	Seal-Lip
27	104-5309	1	Ring-Retaining
28	114-1688	1	Bearing-Thrust
29	114-1689	1	Motor Cylinder Block Kit
30	94-6922	1	Bearing-Thrust
31	110-8561	1	Pump Block ASM
32	104-5339	1	Washer-Flat
33	104-5340	1	Ring-Retaining
34	114-1690	1	Gear-14T
35	114-1691	1	Shaft-Motor
36	104-5360	1	Washer-Shaft, Motor
37	94-1933	2	Washer
38	114-1692	1	Gear-45T
39	114-1693	1	Gear-11T
40	104-5329	1	Pin-Jackshaft
41	104-2169	1	Ring-Retaining
42	114-1694	1	Gear-54T
43	114-1695	1	Spacer
44	114-1696	1	Bearing-Ball
45	104-2143	1	Bearing-Ball
46	104-2144	1	Seal
47	105-1895	1	Nut
48	114-1697	1	Pawl-Brake

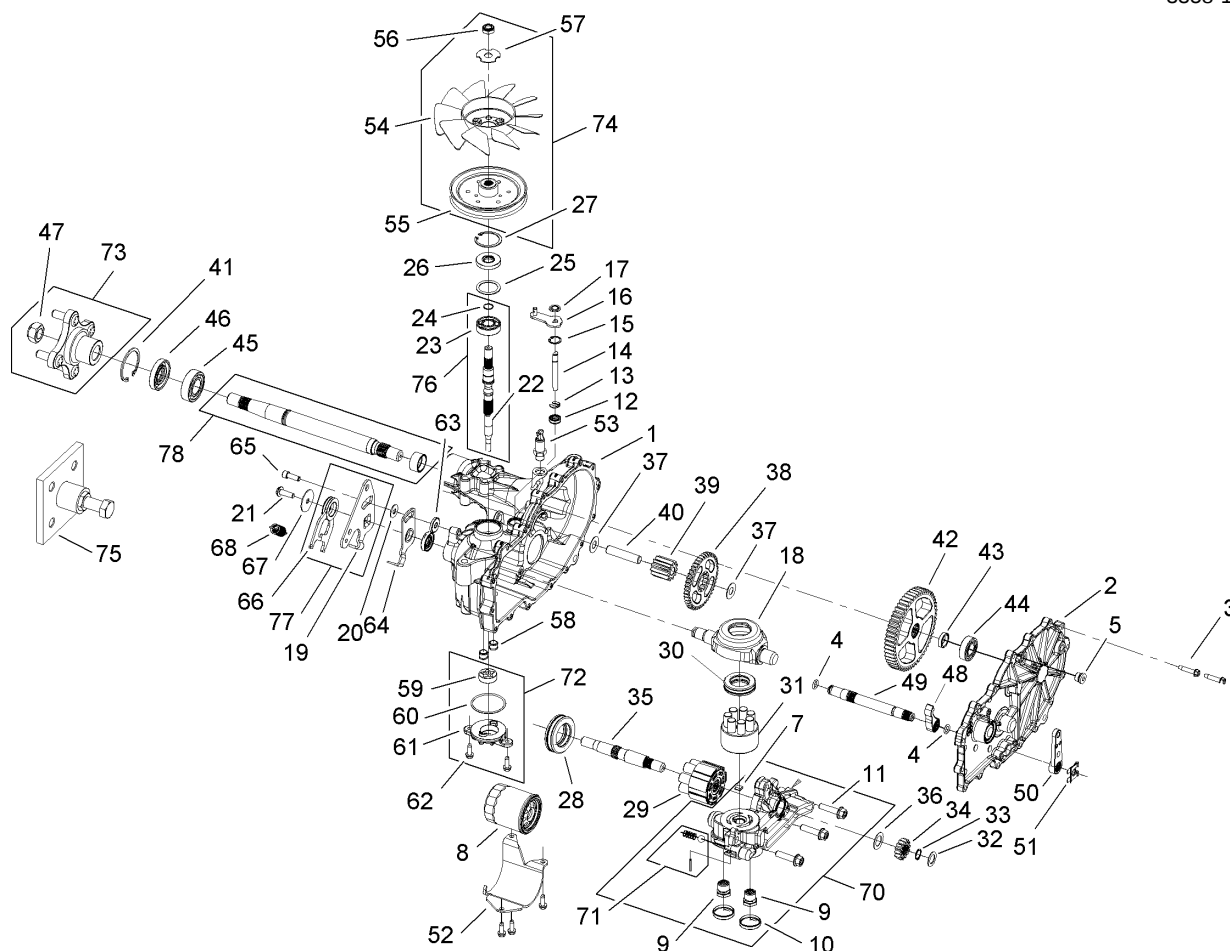 


RH Transmission Assembly No. 109-3371 (continued)

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
49	114-1698	1	Shaft-Inboard Brake	72	114-8465	1	Charge Kit
50	114-1699	1	Handle-Brake	73	109-5939	1	Hub Kit
51	114-8450	1	Clip-Retaining	73:2		1	Hub W/Studs
52	114-8451	1	Guard-Filter, RH	74	109-5938	1	Fan And Pulley Kit
53	109-3278	1	Adapter-Straight	75	114-8467	1	Hub-Puller, 4 Bolt
53:1	1-603921	1	O-Ring	76	114-8468	1	Input Shaft Kit
54	114-8453	1	Fan-7.0	77	114-8469	1	Rtn Cw Kit
55	114-8454	1	Pulley-5.0 Inch	78	114-8470	1	Axle Shaft Kit
56	105-1875	1	Nut-Lock				
57	107-9122	1	Washer-Slotted				
58	114-8455	2	Tube-Connecting				
59	104-2122	1	Gerotor ASM				
60	109-3540	1	O-Ring-Seal, Charge Cover				
61	114-8457	1	Cover-Charge Pump				
62	104-2120	2	Screw				
63	114-8458	1	Spacer				
64	114-8459	1	Arm-Neutral, Right				
65	106-8682	1	Screw-Sh				
66	114-8460	1	Cw Rtn ASM				
67	114-8478	1	Washer				
68	109-5592	1	Spring-Extension				
69	109-3537	1	Complete Seal Kit				
70	114-8463	1	RH Center Section Kit				
71	114-8464	1	Charge Relief Kit				

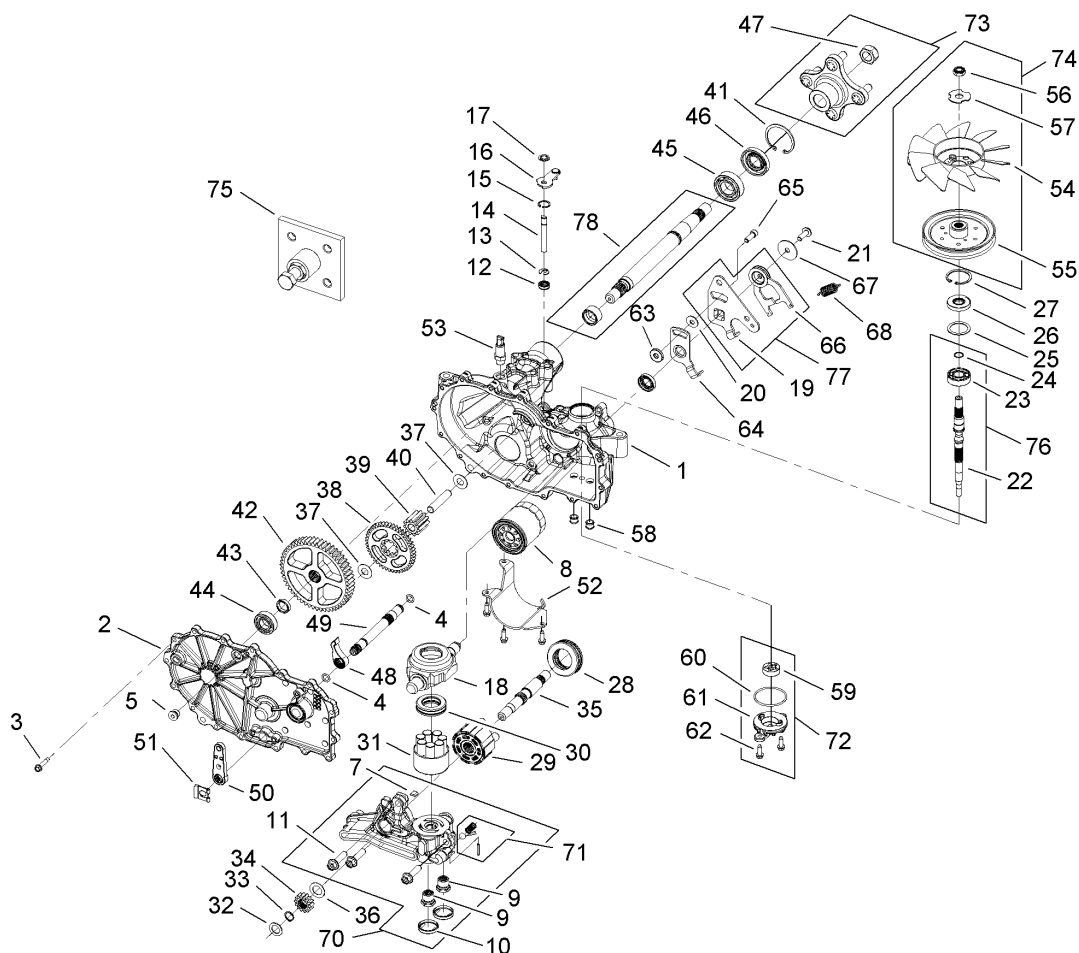 

LH Transmission Assembly No. 109-3372


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	114-8471	1	LH Main Housing Kit	25	104-5308	1	Spacer
2	114-8472	1	LH Side Cover Kit	26	104-5310	1	Seal-Lip
3	104-5305	16	Screw-HHF	27	104-5309	1	Ring-Retaining
4	114-1678	1	O-Ring	28	114-1688	1	Bearing-Thrust
5	112-9850	1	Plug	29	114-1689	1	Motor Cylinder Block Kit
6	114-1679	1	Loctite 590-Gasket Material	30	94-6922	1	Bearing-Thrust
7	114-1680	1	Plate-Bypass	31	110-8561	1	Pump Block ASM
8	109-3321	1	Element-Oil Filter, HYD	32	104-5339	1	Washer-Flat
9	114-1682	2	Check Plug	33	104-5340	1	Ring-Retaining
10	114-1683	2	Seal-Plug	34	114-1690	1	Gear-14T
11	114-1684	3	Screw-Hfhc	35	114-1691	1	Shaft-Motor
12	106-8676	1	Seal-Lip	36	104-5360	1	Washer-Shaft, Motor
13	106-8677	1	Ring-Retaining, EXT	37	94-1933	1	Washer
14	114-1685	1	Rod-Bypass	38	114-1692	1	Gear-45T
15	106-8679	1	Ring-Retaining, Int	39	114-1693	1	Gear-11T
16	107-2490	1	Arm-Bypass	40	104-5329	1	Pin-Jackshaft
17	106-8681	1	Ring-Retaining, EXT	41	104-2169	1	Ring-Retaining
18	104-5304	1	Swashplate-Trunnion	42	114-1694	1	Gear-54T
19	114-1686	1	Arm-Control, RH	43	114-1695	1	Spacer
20	114-8491	1	Washer	44	114-1696	1	Bearing-Ball
21	107-2488	1	Screw	45	104-2143	1	Bearing-Ball
22	114-1687	1	Shaft-Input	46	104-2144	1	Seal
23	103-7441	1	Bearing-Shaft, Input	47	105-1895	1	Nut
24	104-5307	1	Ring-Retaining	48	114-1697	1	Pawl-Brake

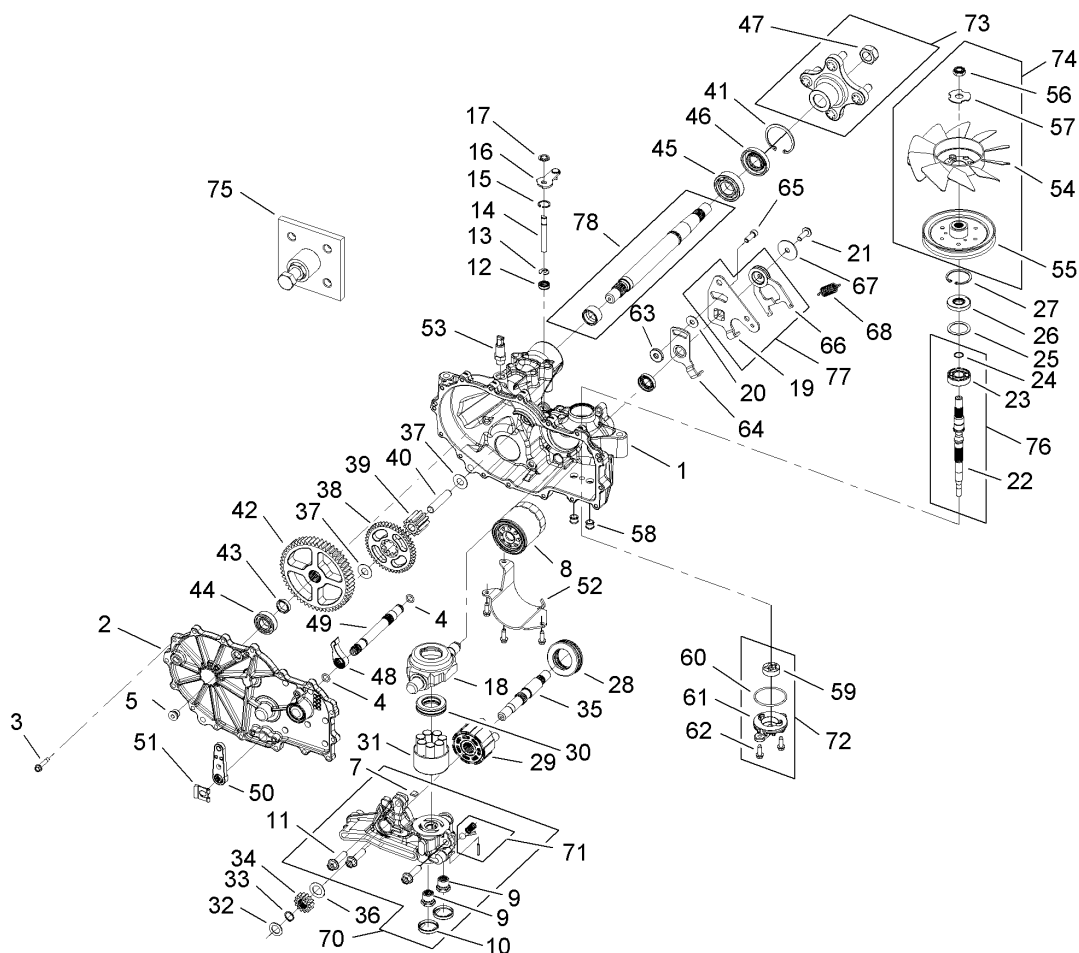 

LH Transmission Assembly No. 109-3372 (continued)

Ref	Part No.	Qty.	Description
49	114-1698	1	Shaft-Inboard Brake
50	114-1699	1	Handle-Brake
51	114-8450	1	Clip-Retaining
52	114-8473	1	Guard-Filter, LH
53	109-3278	1	Adapter-Straight
①53:1	1-603921	1	O-Ring
54	114-8453	1	Fan-7.0
55	114-8454	1	Pulley-5.0 Inch
56	105-1875	1	Nut-Lock
57	107-9122	1	Washer-Slotted
58	114-8455	1	Tube-Connecting
59	104-2122	1	Gerotor ASM
60	109-3540	1	O-Ring-Seal, Charge Cover
61	114-8457	1	Cover-Charge Pump
62	104-2120	1	Screw
63	114-8458	1	Spacer
64	114-8474	1	Arm-Neutral, Left
65	106-8682	1	Screw-Sh
66	114-8475	1	Rtn Ccw ASM
67	114-8478	1	Washer
68	109-5592	1	Spring-Extension
①69	109-3537	1	Complete Seal Kit
70	114-8476	1	LH Center Section Kit
71	114-8464	1	Charge Relief Kit


Ref	Part No.	Qty.	Description
72	114-8465	1	Charge Kit
73	109-5939	1	Hub Kit
②73:2		1	Hub W/Studs
74	109-5938	1	Fan And Pulley Kit
75	114-8467	1	Hub-Puller, 4 Bolt
76	114-8468	1	Input Shaft Kit
77	114-8477	1	Rtn Ccw Kit
78	114-8470	1	Axle Shaft Kit

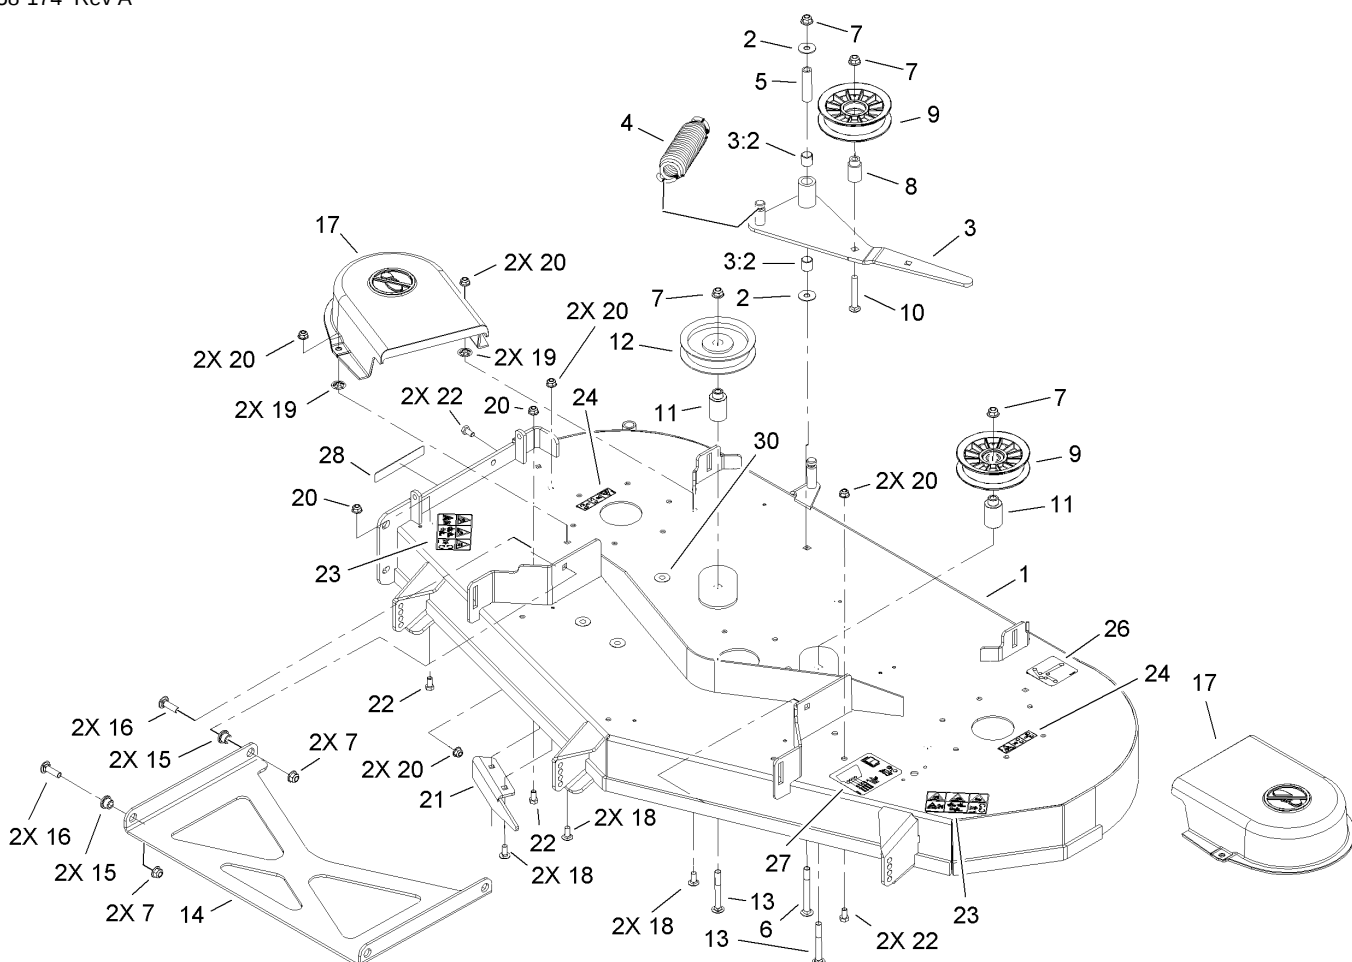 

52 Inch Deck Assembly


Ref	Part No.	Qty.	Description
1	109-6254	1	52 Inch Deck ASM
2	52-2860	2	Washer
3	109-5276	1	Idler Arm ASM
3:2	1-513034	2	Sleeve-Bearing
4	103-3330	1	Spring-Extension
5	1-603384	1	Bushing-Pivot, Idler
6	3231-11	1	Screw-CARR
7	104-8301	8	Nut-Flange, NI
8	1-413113	1	Bushing-Idler
9	109-3658	2	Sheave And Bearing ASM
10	3231-31	1	Screw-CARR
11	109-6572	2	Bushing-Idler
12	1-603843	1	Pulley-Idler
13	109-6868	2	Bolt-Carriage
14	109-3723-01	1	Strut-Deck
15	103-3900	4	Spacer-Strut
16	3231-28	4	Screw-CARR
17	109-3449	2	Shield-Belt
18	3230-23	6	Screw-CARR
19	78-7170	4	Ring-Retaining
20	104-8300	12	Nut-Flange, NI
21	109-5498-03	1	Baffle-Discharge
22	322-2	6	Screw-HH
23	110-6691	2	Decal-Danger

Ref	Part No.	Qty.	Description
24	109-6459	2	Decal-Belt Shield Warning
26	109-6035	1	Decal-Belt Routing
27	109-6036	1	Decal-Anti-Scalp Roller
28	93-7009	1	Decal-Danger
30	109-6625	3	Decal-Hole Cover

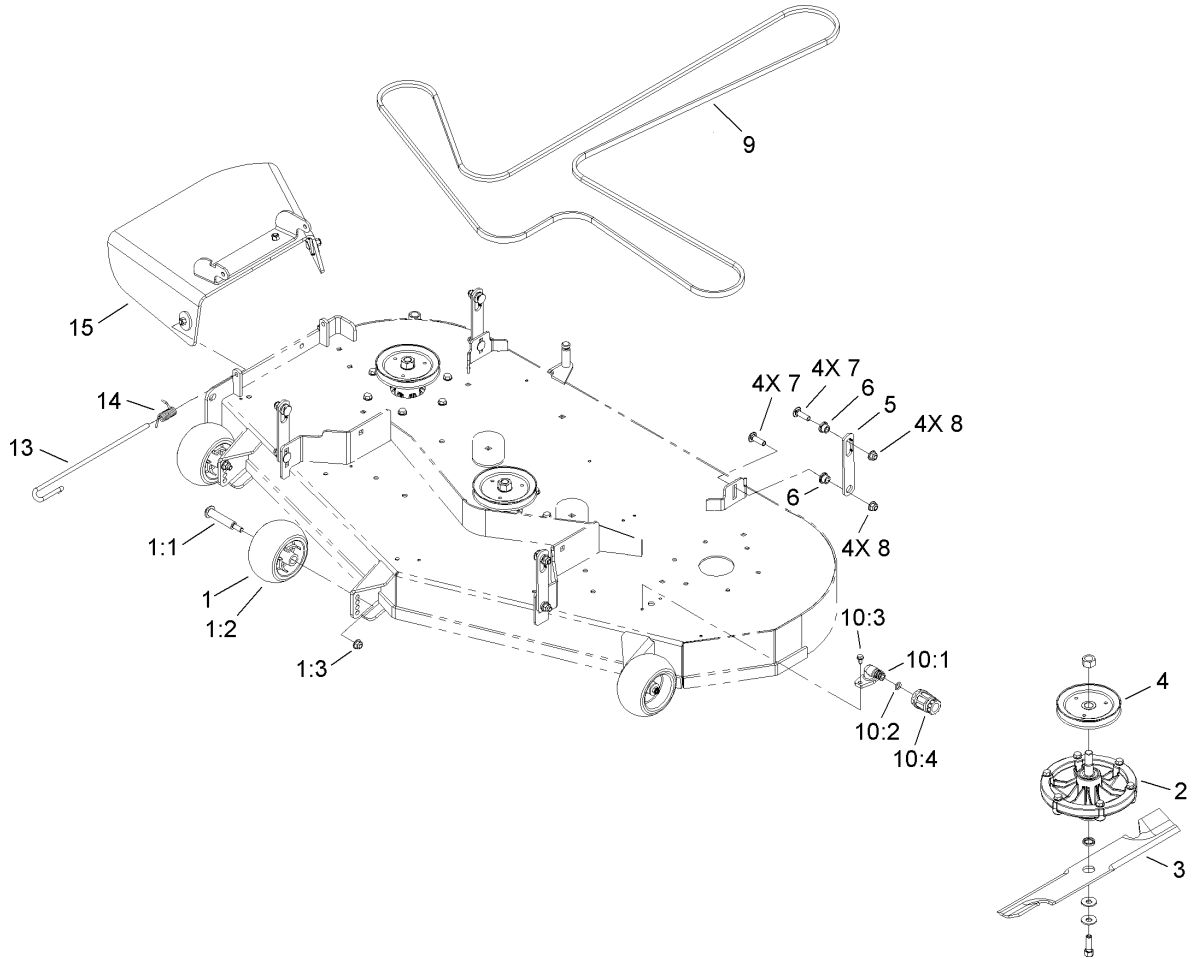 


52 Inch Blade and Discharge Assembly

Ref	Part No.	Qty.	Description				
1	109-6388	3	Anti-Scalp Roller Kit				
1:1	112-3977	1	Bolt-Shoulder				
1:2	1-603299	1	Roller-Scalp, Anti				
1:3	104-8301	1	Nut-Flange, NI				
2	109-6394	3	Complete Cutter Housing ASM				
3	109-6873	3	Blade-Notched				
4	109-3671	3	Pulley-Deck				
5	109-3410	4	Hanger-Deck				
6	103-3900	8	Spacer-Strut				
7	3231-25	8	Screw-CARR				
8	104-8301	8	Nut-Flange, NI				
9	109-3661	1	Belt				
10	109-6393	1	Washout Port Kit				
10:1	95-2747	1	Fitting-Washout				
10:2	46-6290	1	O-Ring				
10:3	93-6083	2	Screw-HWH				
10:4	95-3270	1	Connector-Hose				
13	109-5152	1	Pin-Chute				
14	57-6950	1	Spring				
15	114-1651	1	Rubber Deflector ASM				

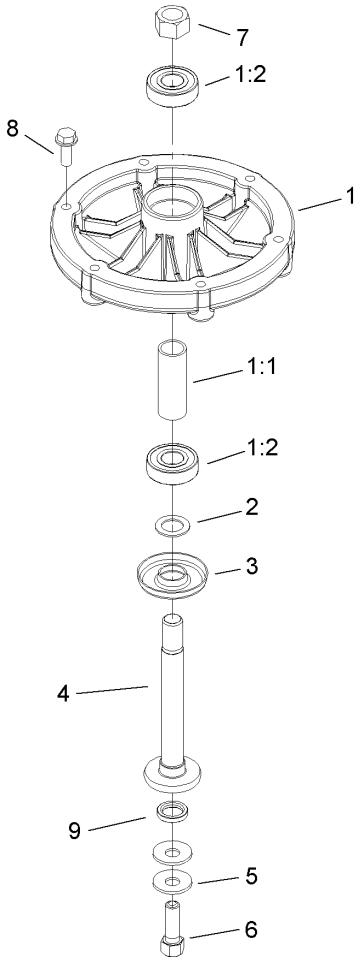 


Cutter Housing Assembly No. 109-6394

Ref	Part No.	Qty.	Description				
1	109-5242	1	Cutter Housing ASM				
1:1	62-3661	1	Spacer-Bearing				
1:2	100-1048	2	Bearing-Ball				
2	80-4380	1	Spacer				
3	80-4360	1	Shield-Bearing				
4	80-4341	1	Shaft				
5	3290-465	2	Washer-Belleville				
6	26-0671	1	Screw-Blade				
7	3219-6	1	Nut-Hex				
8	32144-41	6	Screw-Taptite				
9	109-6857	1	Spacer				

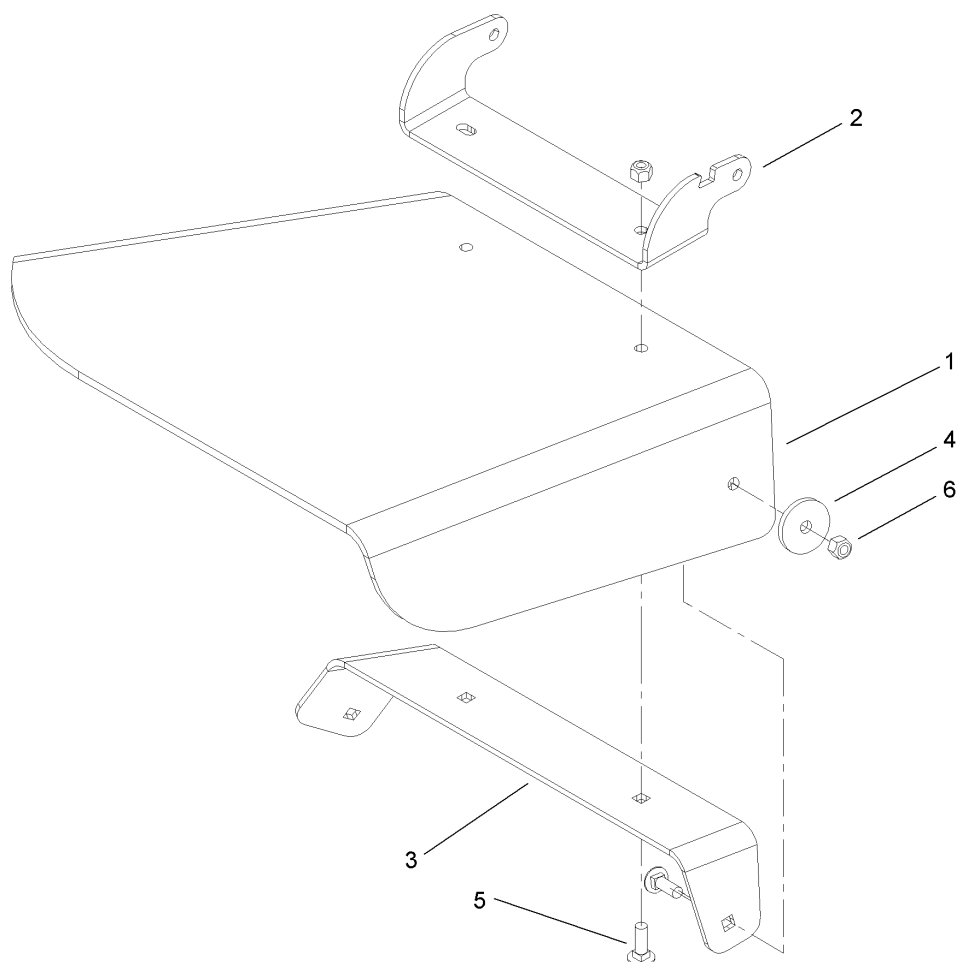 

Rubber Deflector Assembly No. 114-1651


Ref	Part No.	Qty.	Description
1	114-1660	1	Deflector-Rubber
2	114-1648-03	1	Bracket-Deflector, Upper
3	114-1649-03	1	Bracket-Deflector, Lower
4	62-7190	2	Spacer-Steel
5	3230-2	4	Bolt-CARR
6	3296-29	4	Nut-Lock, NI

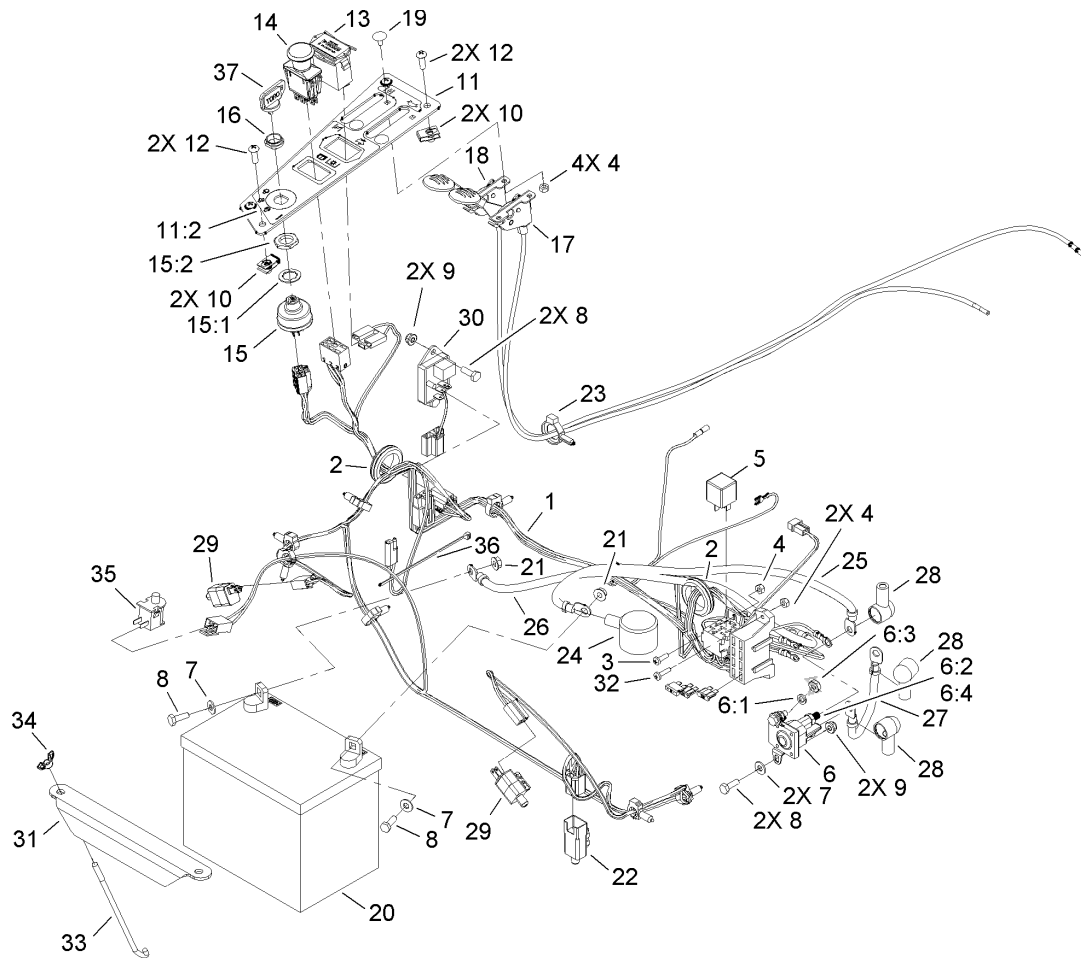 

Electrical Assembly

Ref	Part No.	Qty.	Description
1	109-5570	1	Harness
2	240-3	2	Grommet-Rubber
3	3290-500	1	Screw-PPH
4	3296-2	7	Nut-Lock
5	1-643275	1	Relay
6	1-513075	1	Switch-Solenoid
6:1	3253-17	2	Washer-Lock
6:2	3253-4	2	Washer-Lock
6:3	3219-14	2	Nut-Hex
6:4	3220-2	2	Nut-Jam
7	3256-22	4	Washer-Flat
8	321-4	6	Screw-HH
9	104-7201	4	Nut-HF
10	107069	4	Clip
11	109-6398	1	Control Panel ASM
11:2	109-6029	1	Decal-Console
12	3258-166	4	Screw-PRH
13	1-513374	1	Meter-Hour
14	103-5221	1	Switch-PTO
15	103-0206	1	Switch-Starting, Key
15:1	3254-5	1	Washer-Tooth
15:2	218-461	1	Nut-HH
16	103-0498	1	Nut-Switch, Ignition
17	109-3987	1	Control-Throttle





Ref	Part No.	Qty.	Description
18	109-5607	1	Control-Choke
19	1-807513	4	Bolt-CARR
20	104-2491	1	Battery-Dry
21	32128-33	2	Nut-HF
22	99-7408	1	Switch-Reverse
23	105-1853	1	Clamp-Hose
24	109-2407	1	Insulator-Battery
25	1-513053	1	Cable-Battery, Positive
26	103-0705	1	Cable-Ground, Negative
27	1-633306	1	Cable-Starter, Positive
28	1-543393	3	Insulator-Solenoid
29	110-6765	2	Switch-Single Pole No
30	103-5218	1	Module-Delay, Seat
31	103-1311-03	1	Holddown-Battery
32	3250-13	2	Screw-PPH
33	1-633651	2	Bolt-Holddown
34	1-543792	2	Wingnut
35	82-2190	1	Switch-Bail
36	1-303287	1	Tie-Plastic
37	63-8360	1	Key-Ignition

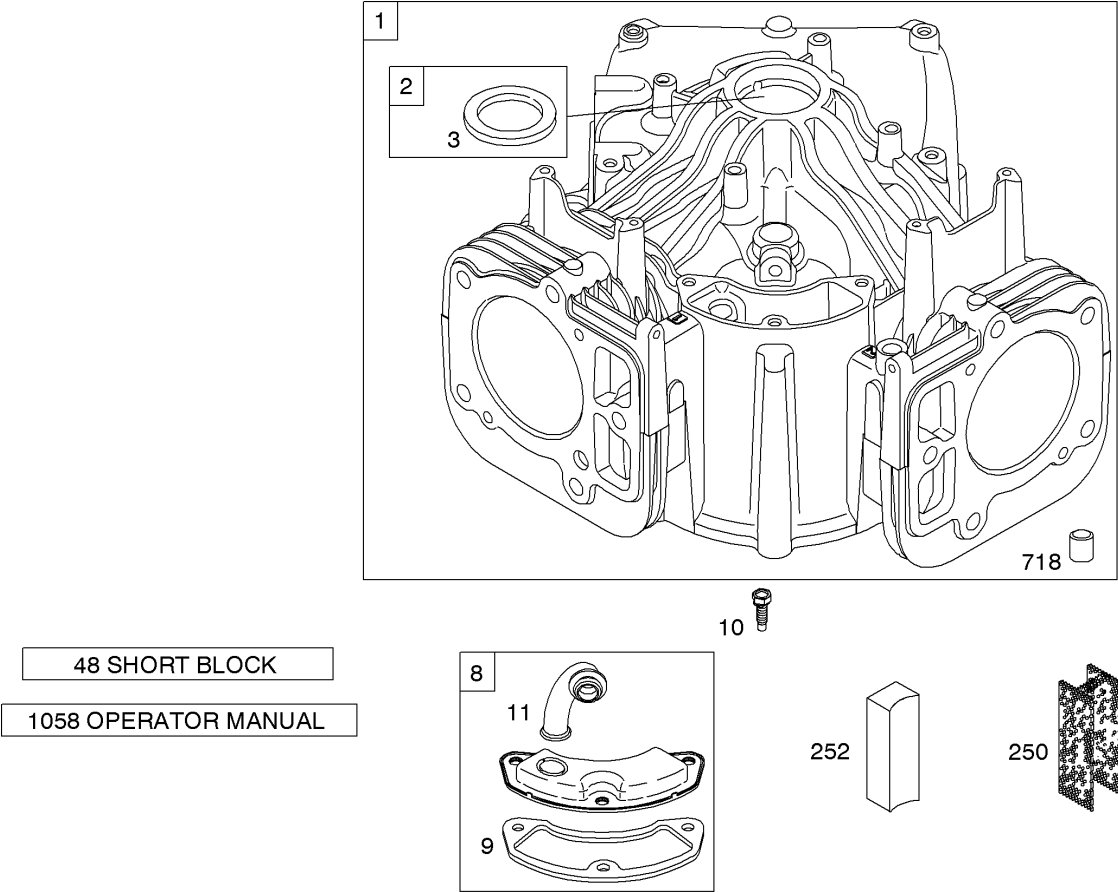 

Assemblies include all parts shown in frames

Cylinder Assembly
Briggs and Stratton 44M777-0118-E1

Ref	Part No.	Qty.	Description				
1	699753	1	Cylinder ASM				
2	499585	1	Bushing And Seal Kit (Magneto Side)				
3	391086s	1	Seal-Oil (Magneto Side)				
8	792185	1	Breather ASM				
9	690937	1	Gasket-Breather				
10	691108	1	Screw (Breather ASM)				
11	792184	1	Tube-Breather				
48	698172	1	Short Block				
250	690957	1	Retainer-Breather				
252	690956	1	Collector-Oil				
718	690959	1	Pin-Locating				
1058	277103	1	Operator Manual				

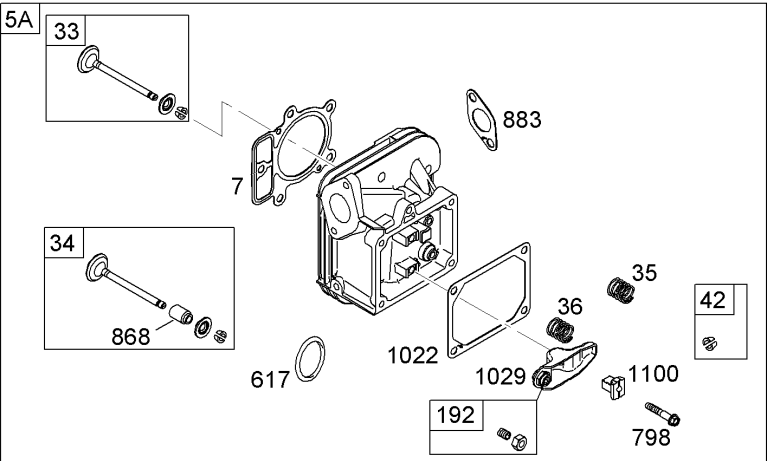 
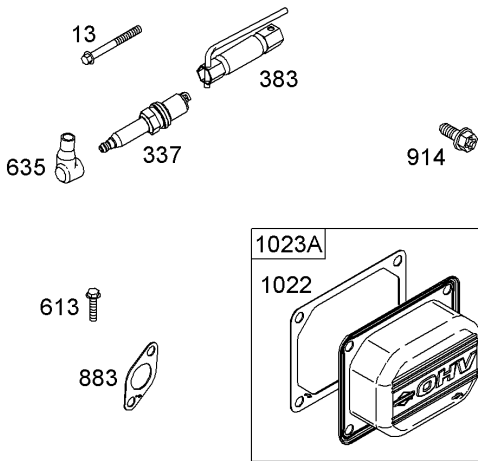 
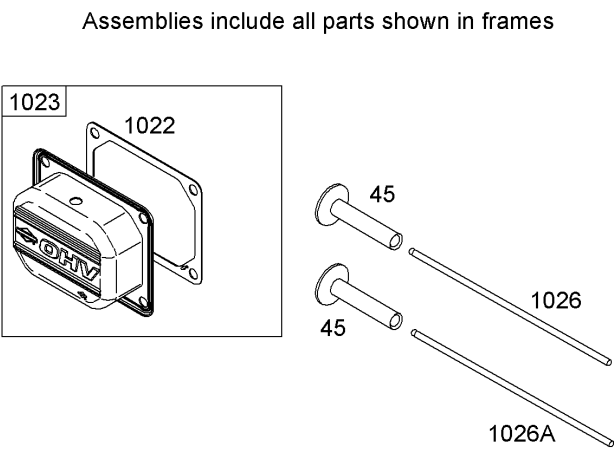 
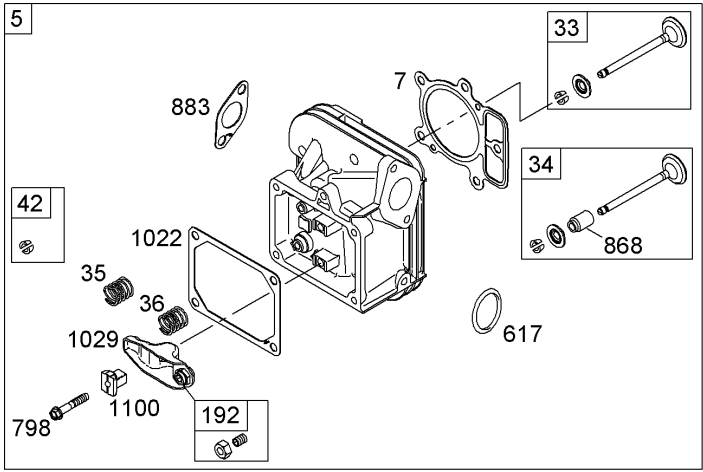 


Cylinder Head Assembly

Briggs and Stratton 44M777-0118-E1

Ref	Part No.	Qty.	Description
5	792299	1	Head-Cylinder (Cylinder No.1)
5A	792300	1	Head-Cylinder (Cylinder No.2)
7	693997	1	Gasket-Head, Cylinder
13	791130	1	Screw (Cylinder Head)
33	697576	1	Valve-Exhaust
34	792200	1	Valve-Intake
35	694865	1	Spring-Valve (Intake)
36	694865	1	Spring-Valve (Exhaust)
42	499586	1	Keeper-Valve
45	690977	1	Valve-Tappet
192	690083	1	Adjuster-Arm, Rocker
337	792015	1	Plug-Spark
383	19374s	1	Wrench-Spark Plug
613	690341	1	Screw (Muffler)
617	697891	1	O-Ring, Seal (Intake Manifold)
635	66538s	1	Boot-Spark Plug
798	697890	1	Screw (Rocker Arm)
868	690968	1	Seal-Valve
883	690970	1	Gasket-Exhaust
914	691127	1	Screw (Rocker Cover)
1022	690971	1	Gasket-Cover, Rocker
1023	793146	1	Cover-Rocker (Cylinder 1)

Ref	Part No.	Qty.	Description
1023A	499600	1	Cover-Rocker (Cylinder 2)
1026	690981	1	Rod-Push (Steel)
1026A	690982	1	Rod-Push (Aluminum)
1029	690972	1	Arm-Rocker
1100	791959	1	Pivot-Arm, Rocker

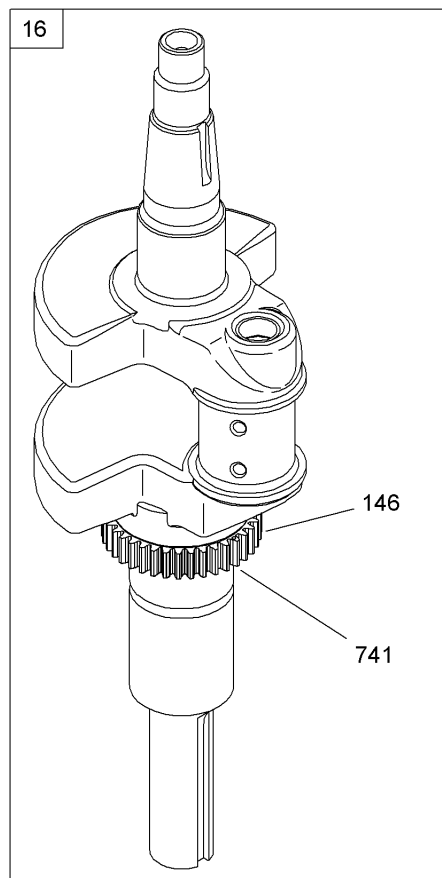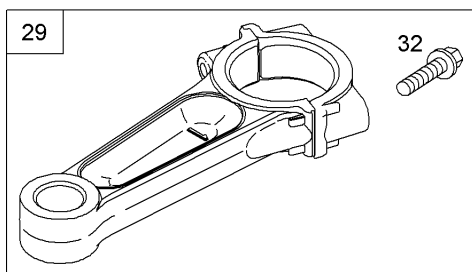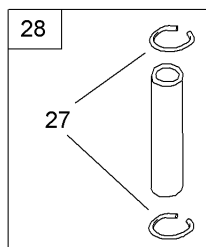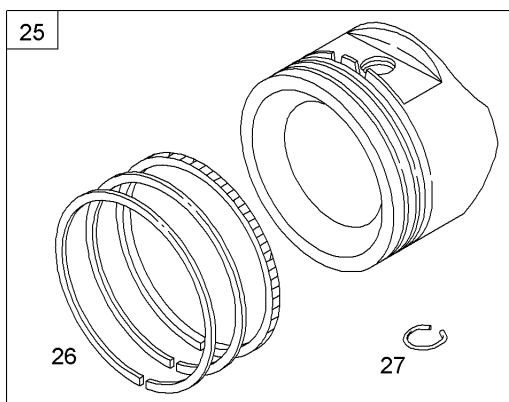    
24

Assemblies include all parts shown in frames

Crankshaft Assembly

Briggs and Stratton 44M777-0118-E1

Ref	Part No.	Qty.	Description
③16	699700	1	Crankshaft
③24	222698s	1	Key-Flywheel
③25	792117	1	Piston ASM (STD)
③25	792144	1	Piston ASM (.020 O S)
③26	792026	1	Ring Set (STD)
③26	792073	1	Ring Set (.020 O S)
③27	690975	1	Lock-Pin, Piston
③28	690229	1	Pin-Piston (STD)
③29	699699	1	Rod-Connecting
③32	690976	1	Screw (Connecting Rod)
③146	690979	1	Key-Timing
③741	690980	1	Gear-Timing




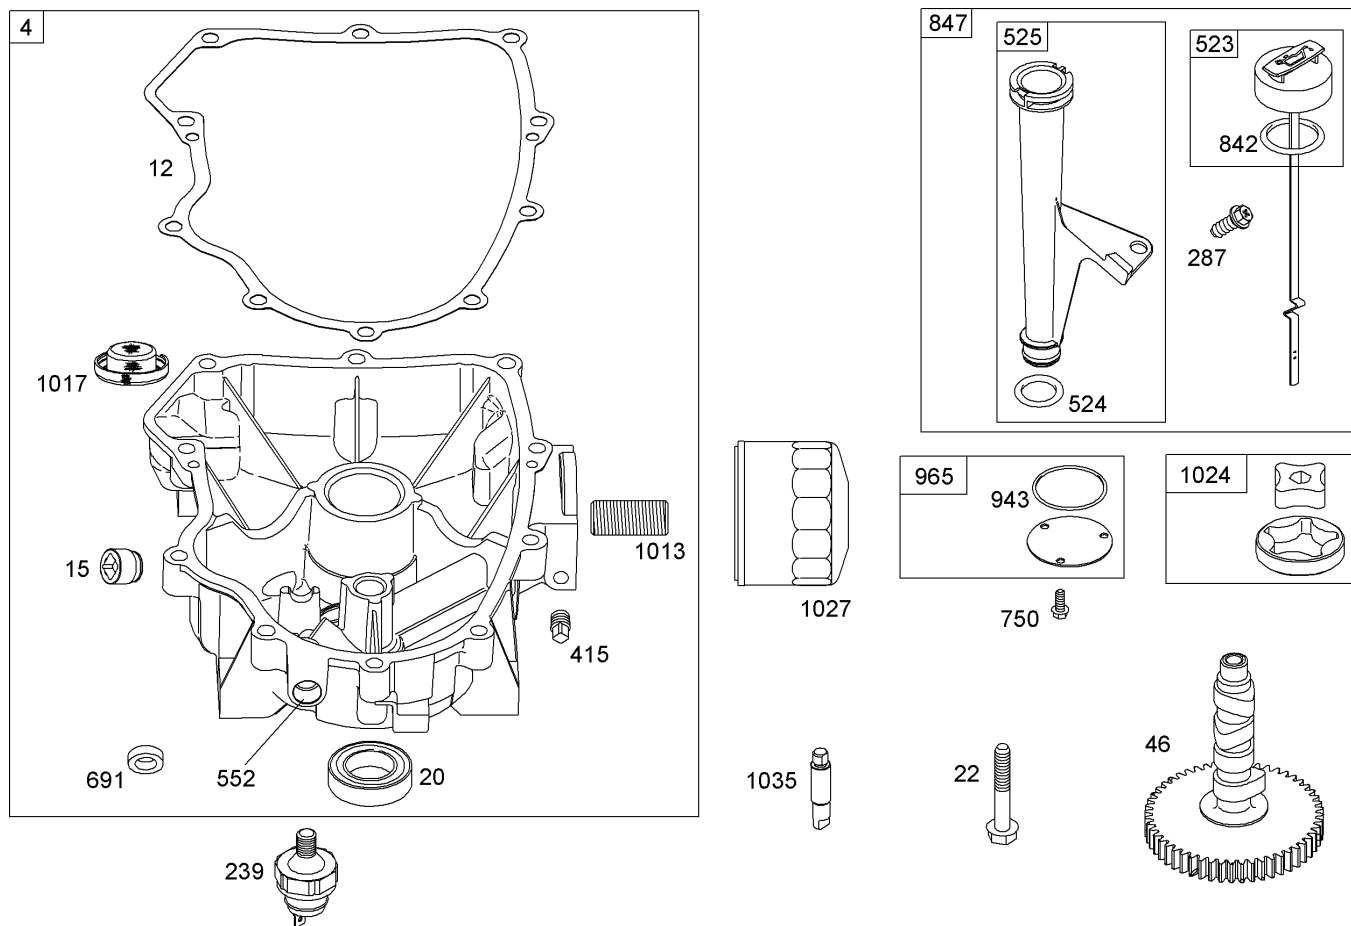 


Assemblies include all parts shown in frames

Crankcase Assembly

Briggs and Stratton 44M777-0118-E1



Ref	Part No.	Qty.	Description
34	699747	1	Sump-Engine
3512	697227	1	Gasket-Crankcase
315	690946	1	Plug-Drain, Oil
3520	791892	1	Seal-Oil (P-T-O Side)
322	694966	1	Screw (Crankcase Sump Cover)
346	792555	1	Camshaft
3239	697049	1	Switch-Pressure, Oil
3287	691108	1	Screw (Dipstick And Tube ASM)
3415	690283	1	Plug-Oil
3523	691036	1	Dipstick
35524	691032	1	Seal, O-Ring (Dipstick Tube)
3525	691037	1	Tube-Dipstick
3552	690552	1	Bushing-Crank, Governor
35691	690657	1	Seal-Shaft, Governor
3750	696999	1	Screw (Oil Pump Cover)
35842	691031	1	Seal, O-Ring (Dipstick)
3847	499602	1	Dipstick And Tube ASM
35943	690589	1	Seal, O-Ring (Oil Pump Cover)
3965	499613	1	Cover-Pump, Oil
31013	690954	1	Nipple-Filter, Oil
31017	690770	1	Screen-Pump, Oil
31024	499054	1	Pump-Oil
31027	696854	1	Filter—Oil
31035	691042	1	Shaft-Pump, Oil

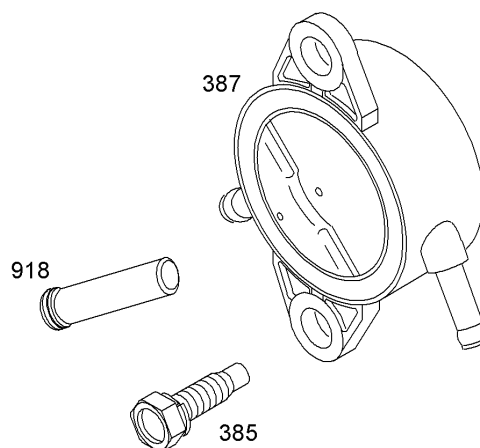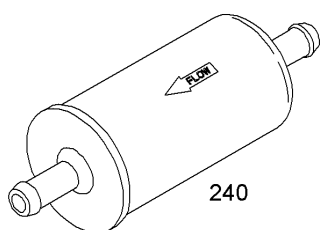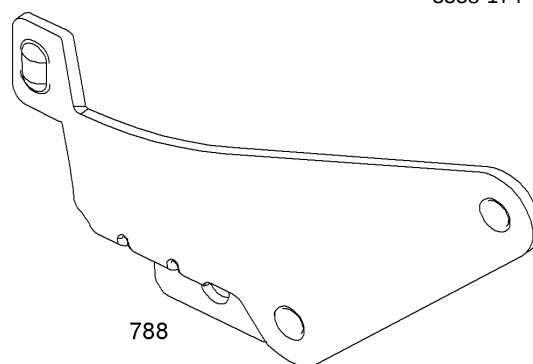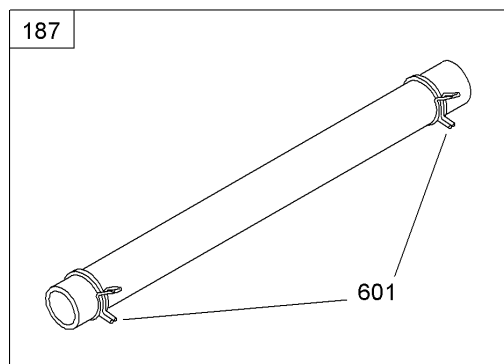    

Assemblies include all parts shown in frames

Fuel Line and Pump Assembly Briggs and Stratton 44M777-0118-E1

Ref	Part No.	Qty.	Description				
③187	791766	1	Line-Fuel (Cut To Required Length)				
③240	695666	1	Filter-Fuel				
③385	691108	1	Screw (Fuel Pump)				
③387	808656	1	Pump-Fuel				
③601	691038	1	Clamp-Hose				
③788	793145	1	Bracket-Pump, Fuel				
③918	793147	1	Hose-Vacuum				

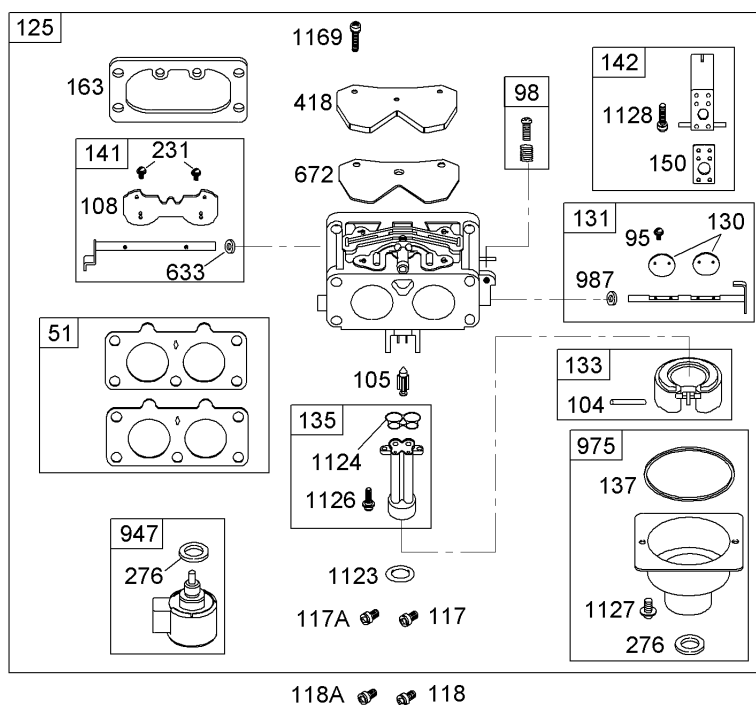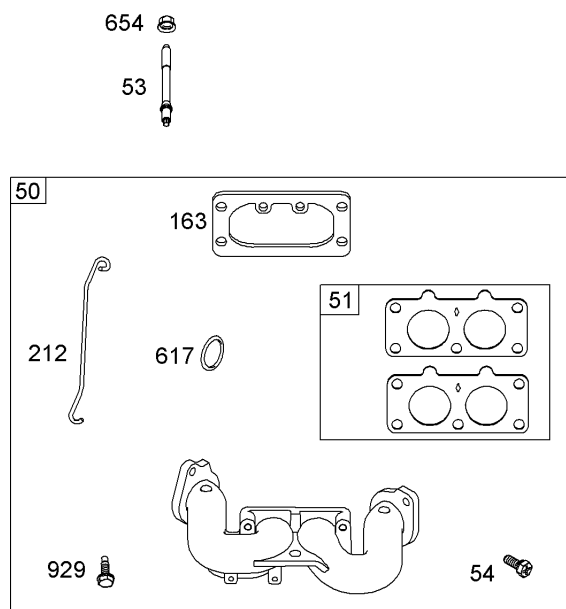  


Assemblies include all parts shown in frames

Carburetor Assembly

Briggs and Stratton 44M777-0118-E1

Ref	Part No.	Qty.	Description
③ 50	695241	1	Manifold-Intake
③ ④ 51	791677	1	Gasket-Intake
③ ⑥			
③ 53	690951	1	Stud (Carburetor)
③ 54	699816	1	Screw (Intake Manifold)
③ 95	690718	1	Screw (Throttle Valve)
③ 98	699721	1	Idle Speed Kit
③ ④ 104	694918	1	Pin-Hinge, Carburetor Float
③ ④ 105	698537	1	Valve-Needle, Float
③ 108	699723	1	Valve-Choke
③ 117	792296	1	Jet-Main (STD, LH)
③ 117A	842627	1	Jet-Main (STD, RH)
③ 118	699457	1	Jet-Main (High Altitude, LH)
③ 118A	699733	1	Jet-Main (High Altitude, RH)
③ 125	792295	1	Carburetor
③ 130	690993	1	Valve-Throttle
③ 131	499805	1	Throttle Shaft Kit
③ 133	699724	1	Float-Carburetor
③ 135	699729	1	Tube-Transfer, Fuel
③ ④ 137	690994	1	Gasket-Bowl, Float
③ 141	699722	1	Choke Shaft Kit
③ 142	699726	1	Nozzle-Carburetor
③ ④ 150	690995	1	Gasket-Nozzle

Ref	Part No.	Qty.	Description
③ ⑤ 163	691001	1	Gasket-Cleaner, Air
③ ⑦			
③ 212	695238	1	Link-Throttle
③ 231	690718	1	Screw (Choke Valve)
③ ④ 276	695410	1	Washer-Sealing
③ ⑤			
③ 418	690999	1	Plate-Cover, Carburetor
③ 617	697891	1	O-Ring, Seal (Intake Manifold)
③ ④ 633	690998	1	Seal-Shaft, Choke
③ 654	690958	1	Nut (Carburetor)
③ ④ 672	690234	1	Gasket-Cover Plate, Carburetor
③ 929	695239	1	Screw (Choke Control Bracket)
③ 947	841546	1	Solenoid-Fuel
③ 975	791232	1	Bowl-Float
③ ④ 987	691000	1	Seal-Shaft, Throttle
③ ④ 1123	841653	1	O-Ring, Seal (Solenoid Retainer)
③ ④ 1124	690988	1	O-Ring, Seal (Fuel Transfer Tube)
③ 1126	690991	1	Screw (Fuel Transfer Tube)
③ 1127	695407	1	Screw (Float Bowl)
③ 1128	690990	1	Screw (Carburetor Nozzle)
③ 1169	690990	1	Screw (Carburetor Cover Plate)

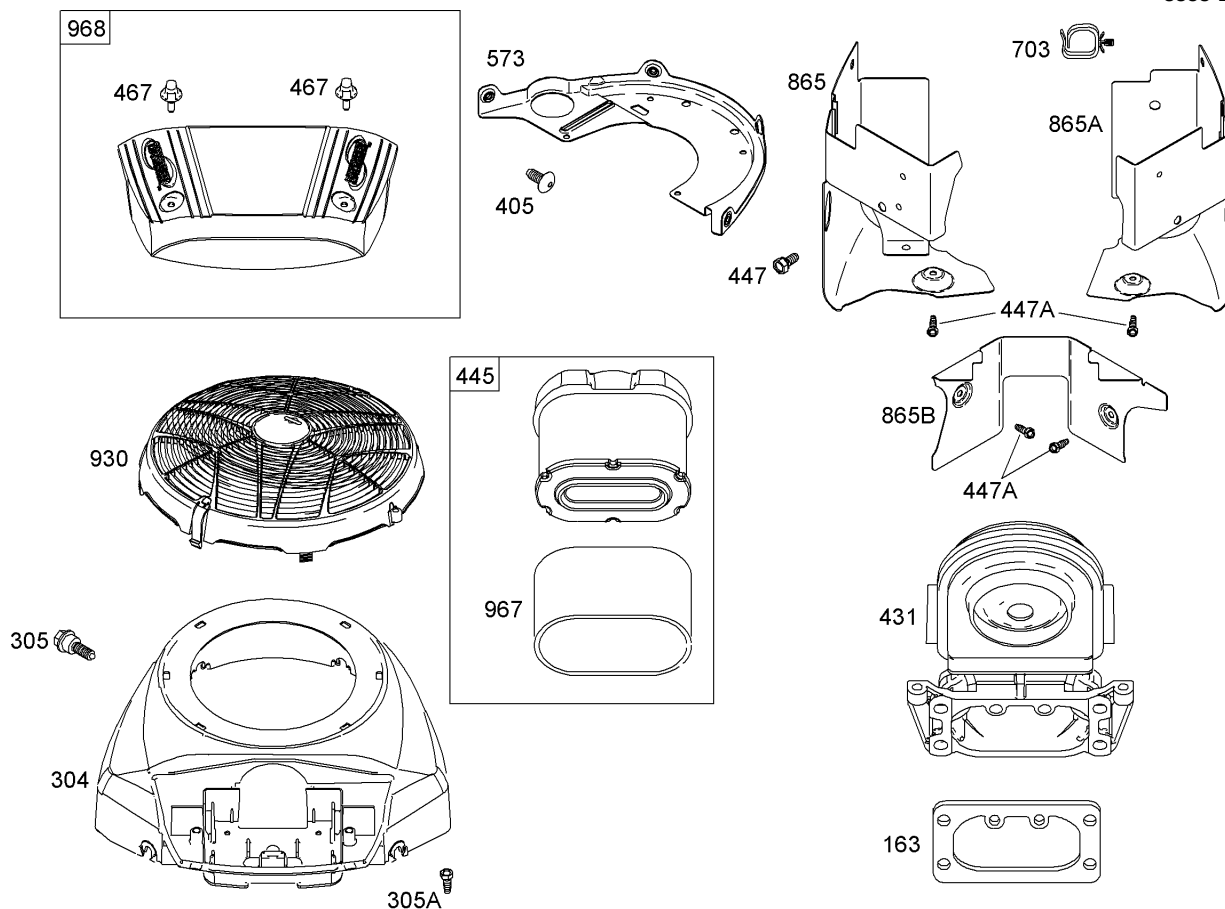 


Assemblies include all parts shown in frame

Air Cleaner Assembly

Briggs and Stratton 44M777-0118-E1

Ref	Part No.	Qty.	Description				
3 3163 7	691001	1	Gasket-Cleaner, Air				
3 304	792301	1	Housing-Blower				
3 305	691005	1	Screw (Blower Housing)				
3 305A	790690	1	Screw (Blower Housing)				
3 405	697820	1	Screw (Back Plate)				
3 431	792297	1	Elbow-Intake				
3 445	792105	1	Filter-Air Cleaner Cartridge				
3 447	691003	1	Screw (Air Guide Cover)				
3 447A	691108	1	Screw (Air Guide Cover)				
3 467	790697	1	Knob-Cleaner, Air				
3 573	790444	1	Plate-Back				
3 703	691010	1	Clip				
3 865	691012	1	Cover-Guide, Air (Cylinder 1)				
3 865A	793205	1	Cover-Guide, Air (Cylinder 2)				
3 865B	792286	1	Cover-Guide, Air (Valley)				
3 930	794277	1	Guard-Rewind				
3 967	792303	1	Filter-Pre Cleaner				
3 968	792289	1	Cover-Air Cleaner				

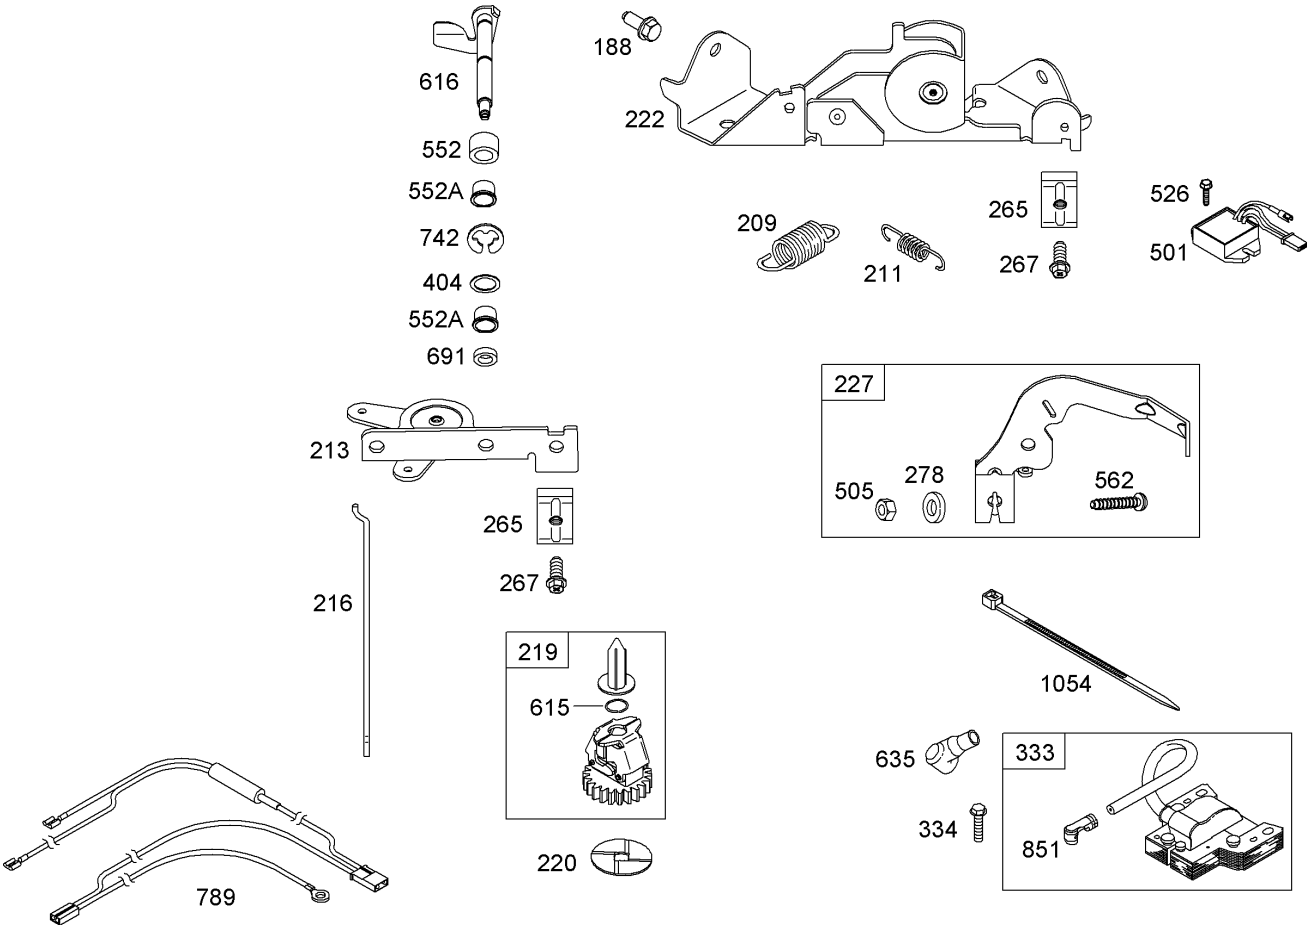 


Assemblies include all parts shown in frames

Governor Assembly

Briggs and Stratton 44M777-0118-E1


Ref	Part No.	Qty.	Description
❶188	691108	1	Screw (Control Bracket)
❷209	793343	1	Spring-Governor
❸211	691019	1	Spring-Idle, Governed
❹213	691021	1	Bracket-Control, Choke
❺216	691022	1	Link-Choke
❻219	793338	1	Gear-Governor
❼220	690412	1	Washer (Governor Gear)
❽222	698761	1	Bracket-Control
❾227	792492	1	Lever-Control, Governor
❿265	691024	1	Clamp-Casing
⓫267	695134	1	Screw (Casing Clamp)
⓬278	792651	1	Washer (Governor Control Lever)
⓭333	691060	1	Armature-Magneto
⓮334	691061	1	Screw (Magneto Armature)
⓯404	690442	1	Washer (Governor Crank)
⓰501	691185	1	Regulator
⓱505	691029	1	Nut (Governor Control Lever)
⓲526	691108	1	Screw (Regulator)
⓳552	690552	1	Bushing-Crank, Governor
⓴552A	690553	1	Bushing-Crank, Governor
⓵562	690311	1	Bolt (Governor Control Lever)
⓶615	698290	1	Retainer-Shaft, Governor
⓷616	691045	1	Crank-Governor
⓸635	66538s	1	Boot-Spark Plug

Ref	Part No.	Qty.	Description
❶❷691	790574	1	Seal-Shaft, Governor
❷742	690328	1	Retainer-E Ring
❸789	691220	1	Harness-Wiring
❹851	493880s	1	Terminal-Spark Plug
❺1054	280275	1	Tie-Cable

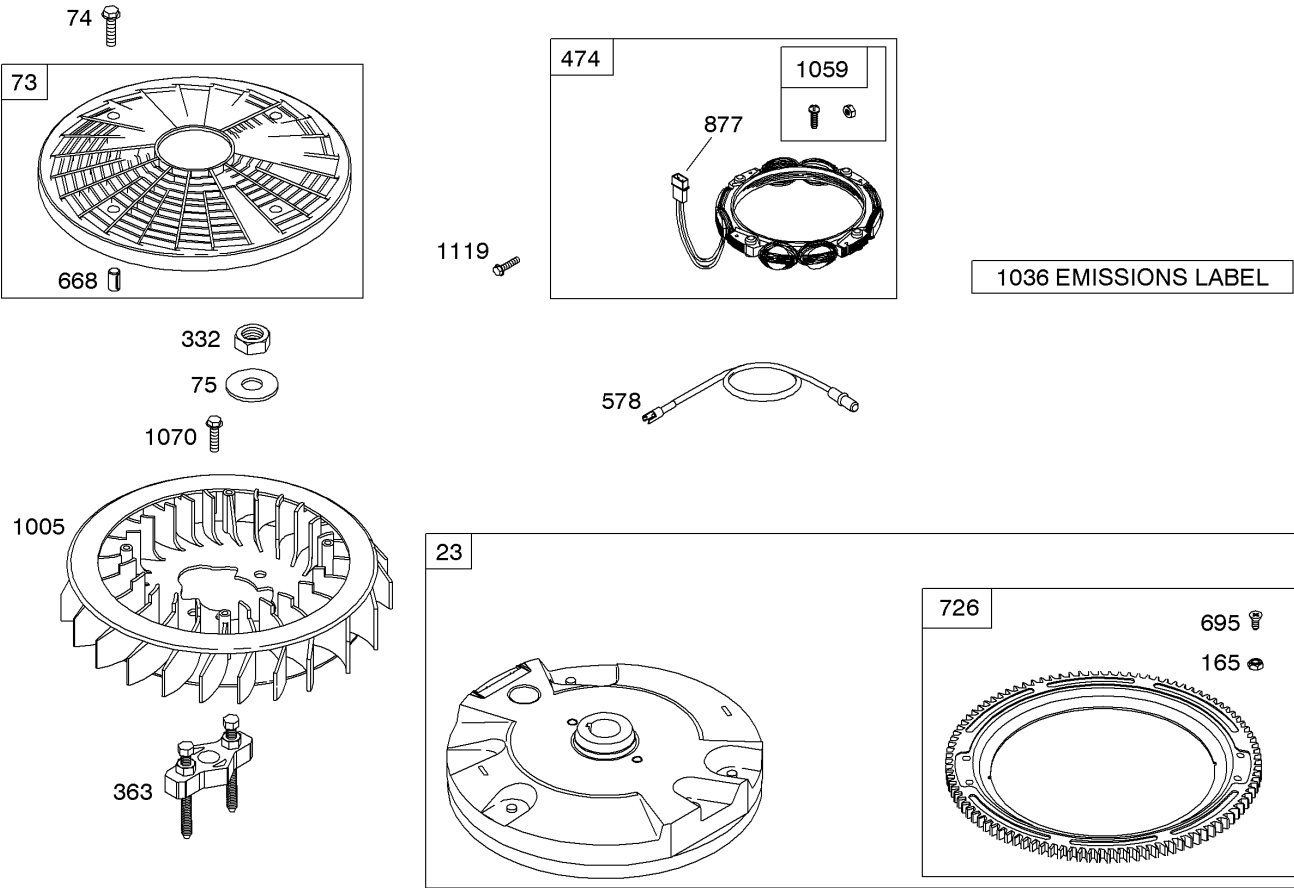 

Flywheel Assembly
Briggs and Stratton 44M777-0118-E1

Ref	Part No.	Qty.	Description				
23	691053	1	Flywheel				
73	494439	1	Screen-Rotating				
74	698425	1	Screw (Rotating Screen)				
75	691056	1	Washer (Flywheel)				
165	693148	1	Nut (Ring Gear)				
332	691059	1	Nut (Flywheel)				
363	19203	1	Puller-Flywheel				
474	696458	1	Alternator				
578	691208	1	Wire ASM				
668	691500	1	Spacer				
695	693149	1	Screw (Ring Gear)				
726	499612	1	Gear-Ring				
877	399916	1	Connector-Wire, Alternator				
1005	791236	1	Fan-Flywheel				
1036		1	Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)				
1059	698516	1	Screw And Washer Kit				
1070	690372	1	Screw (Flywheel Fan)				
1119	691183	1	Screw (Alternator)				


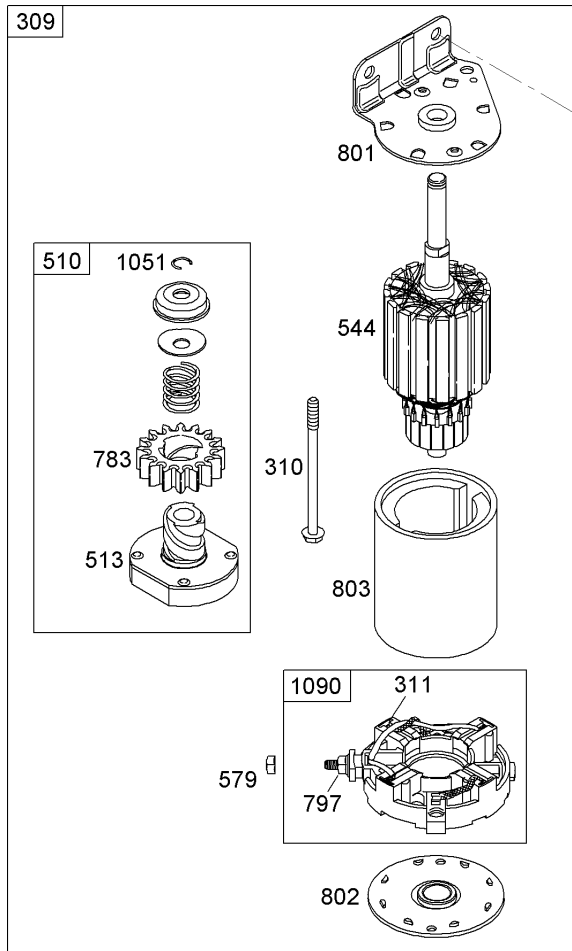 


Assemblies include all parts shown in frames

Starter Assembly

Briggs and Stratton 44M777-0118-E1

Ref	Part No.	Qty.	Description
③309	499521	1	Motor-Starter
③310	691263	1	Bolt (Starter Motor)
③311	497608	1	Brush Set
③510	696541	1	Drive-Starter
③513	692024	1	Clutch-Drive
③544		1	Armature-Starter (Service With 499521 Starter Motor)
③579	691029	1	Nut (Starter Cable)
③697	690372	1	Screw (Starter Motor)
③783	695708	1	Gear-Pinion
③797	693167	1	Nut (Brush Retainer)
③801	691283	1	Cap-Drive
③802	691286	1	Cap-End
③803		1	Housing-Starter (Service With 499521 Starter Motor)
③1051	691265	1	Ring-Retaining
③1090	691293	1	Retainer-Brush

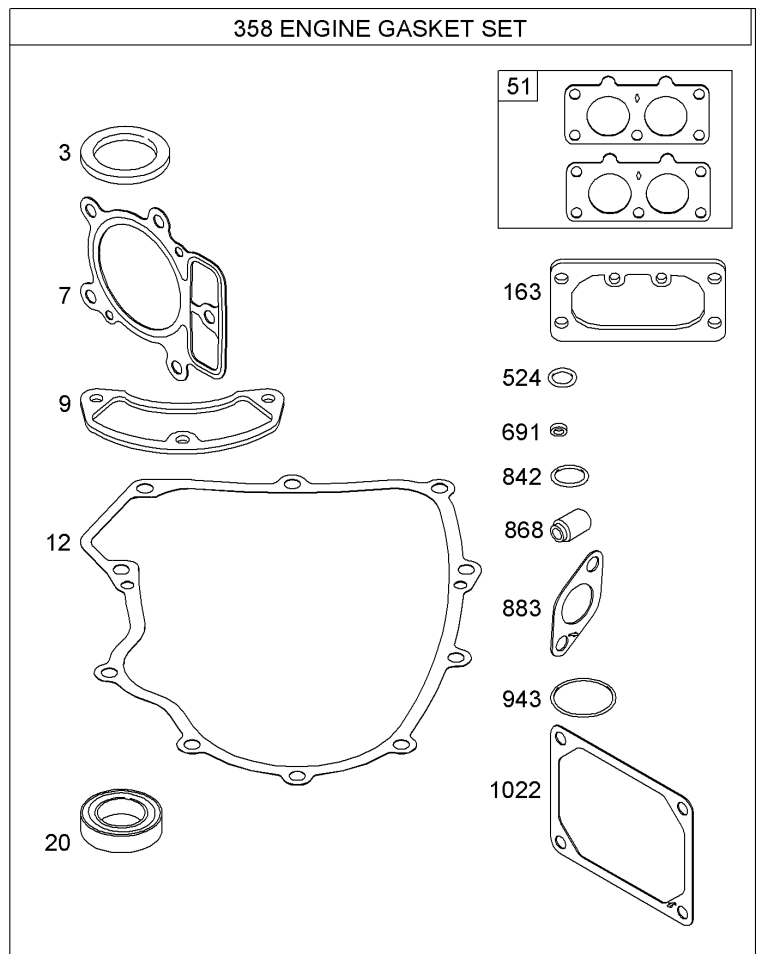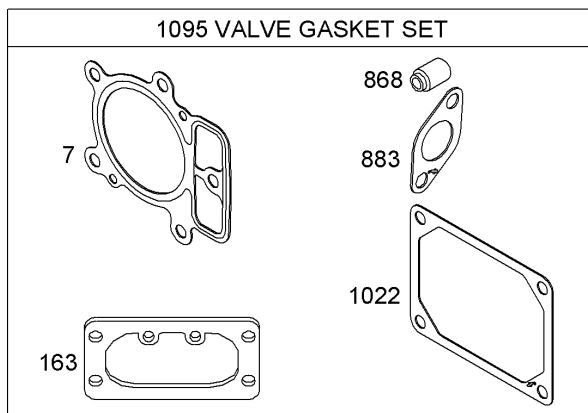  


Assemblies include all parts shown in frames

Gasket Set
Briggs and Stratton 44M777-0118-E1

Ref	Part No.	Qty.	Description
353	391086s	1	Seal-Oil (Magneto Side)
347	693997	1	Gasket-Head, Cylinder
7			
359	690937	1	Gasket-Breather
3512	697227		Gasket-Crankcase
3520	791892	1	Seal-Oil (P-T-O Side)
3551	791677	1	Gasket-Intake
35163	691001	1	Gasket-Cleaner, Air
7			
3358	694012	1	Gasket Set-Engine
35524	691032	1	Seal-O Ring (Dipstick Tube)
35691	790574	1	Seal-Shaft, Governor
35842	691031	1	Seal, O-Ring (Dipstick)
35868	690968	1	Seal-Valve
7			
35883	690970	1	Gasket-Exhaust
7			
35943	690589	1	Seal, O-Ring (Oil Pump Cover)
351022	690971	1	Gasket-Cover, Rocker
7			
31095	694013	1	Gasket Set-Valve

 121 CARBURETOR OVERHAUL KIT

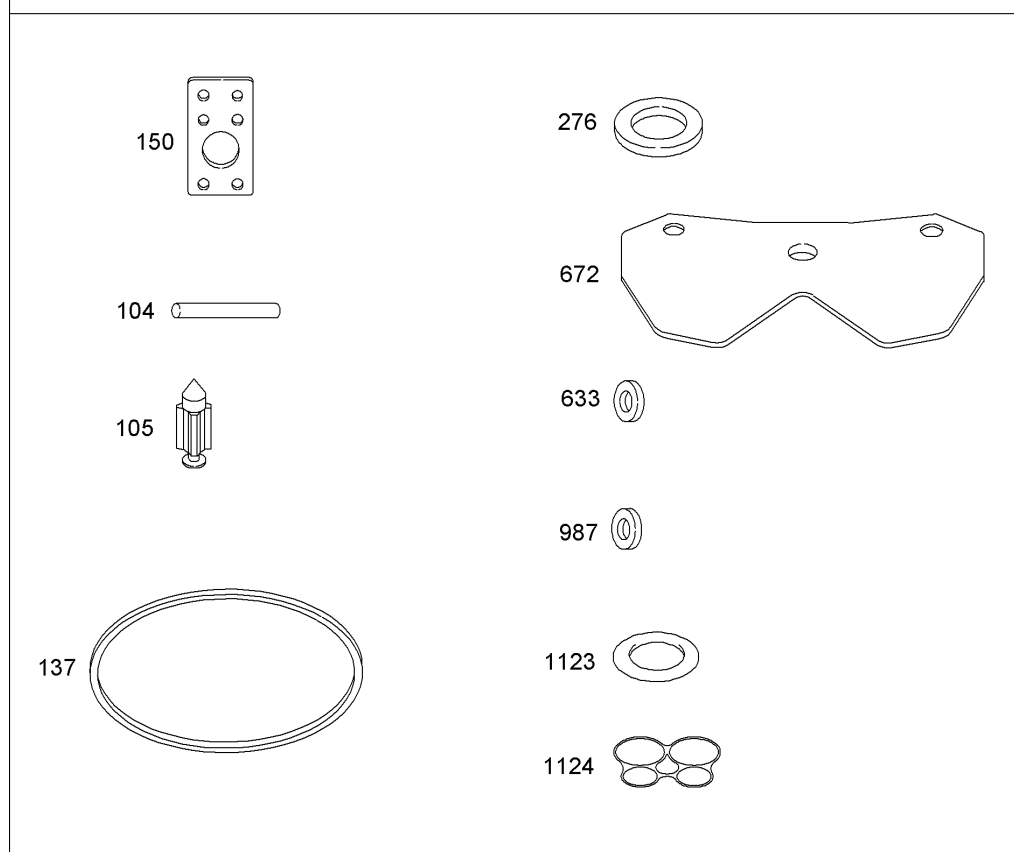

Assemblies include all parts shown in frames

Carburetor Overhaul Kit

Briggs and Stratton 44M777-0118-E1

Ref	Part No.	Qty.	Description
3 4 104	694918	1	Pin-Hinge, Carburetor Float
3 4 105	698537	1	Valve-Needle, Float
3 121	792455	1	Carburetor Overhaul Kit
3 4 137	690994	1	Gasket-Bowl, Float
6			
3 4 150	690995	1	Gasket-Nozzle
6			
3 4 276	695410	1	Washer-Sealing
6			
3 4 633	690998	1	Seal-Shaft, Choke
6			
3 4 672	690234	1	Gasket-Cover Plate, Carburetor
6			
3 4 987	691000	1	Seal-Shaft, Throttle
6			
3 4 1123	841653	1	Seal, O-Ring (Solenoid Retainer)
6			
3 4 1124	690988	1	Seal, O-Ring (Fuel Transfer Tube)
6			

Attachments and Accessories

For 74814 - Titan Z5200 Zero-Turn-Radius Riding Mower

Product Name	Model/Part
52 Inch Bagging Blade Kit	79142
48 Inch and 52 Inch Bagger	79155
52 Inch Mulching Kit	79156
Z Sunshade	79157
Z Light Kit	79158

