



Workman[®] e2065 Utility Vehicle

Model No. 07288TC - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Dash Panel Assembly	 3	Controller Assembly	 13
Solenoid Assembly No. 104-7135	 5	Battery and Transaxle Assembly	 14
Pedal Assembly	 6	Electric Motor Assembly No. 104-7335	 15
Hydraulic Brake Assembly	 7	Electric Transaxle Assembly No. 112-3085	 16
Master Cylinder Assembly No. 104-6782	 8	Left Hand Brake Assembly No. 104-6807	 17
Frame Assembly	 9	Right Hand Brake Assembly No. 104-6806	 18
Seat Base Assembly	 10	Upper Steering Assembly	 19
Offboard 48 Volt Charger Assembly No. 110-2570	 11	Steering Gearbox Assembly No. 99-7660	 20
Front Tire and Steering Assembly	 12	Box and Tailgate Installation Assembly	 21
		Box and Tailgate Assembly	 22
		Attachments and Accessories List	 23

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes

❶ Not illustrated


❷ Not serviced separately

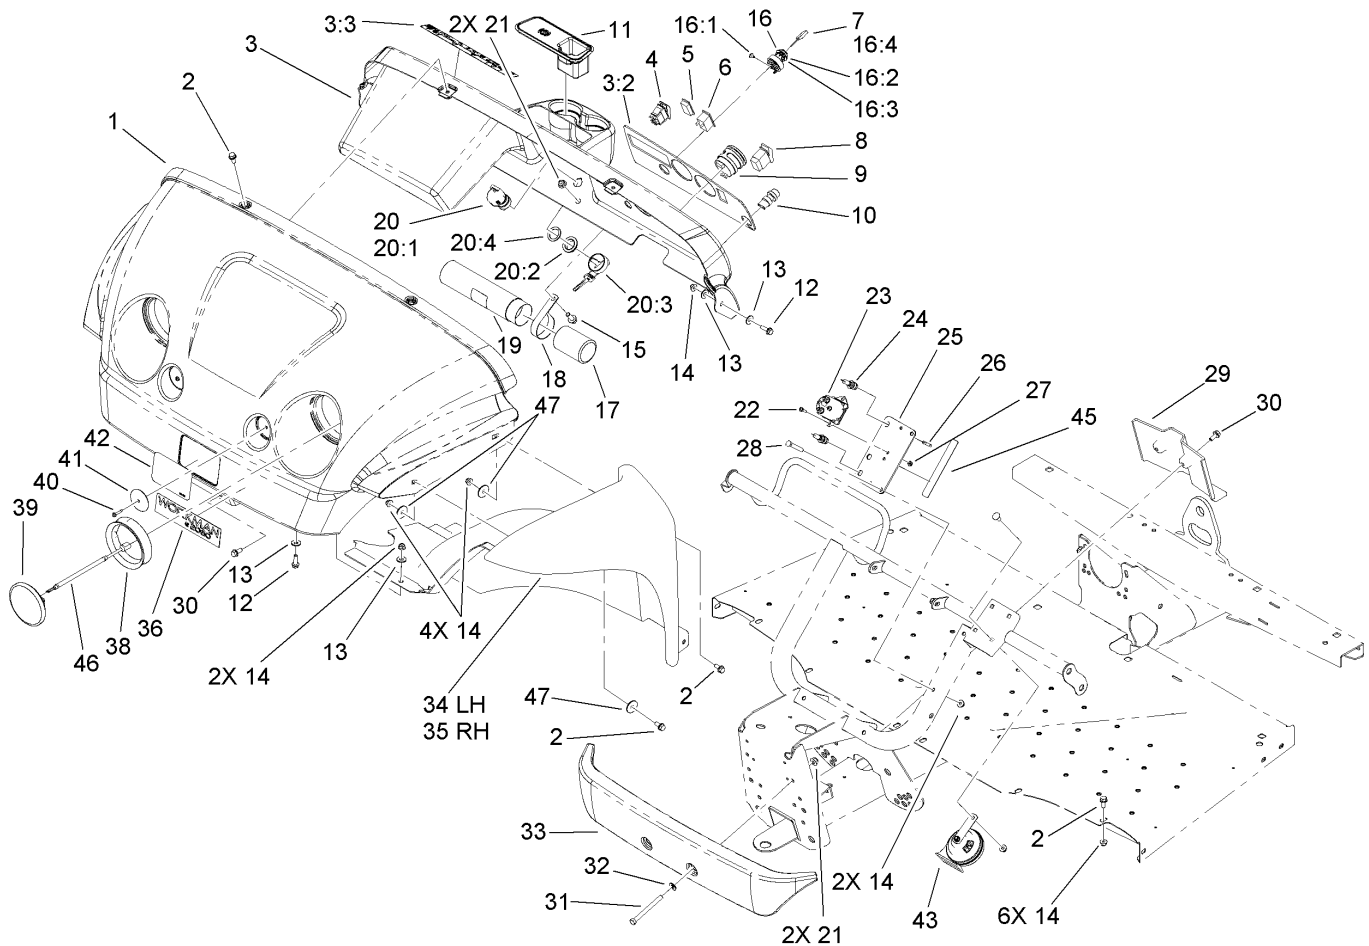

Dash Panel Assembly


Ref	Part No.	Qty.	Description
1	104-7003	1	Hood
2	3234-5	14	Screw-HHF
3	112-3078	1	Dash ASM
3:2	104-7214	1	Decal-Dash, Electric
3:3	104-7215	1	Decal-Danger
4	107-0255	1	Switch
5	99-7420	2	Plug-Hole
6	104-7129	1	Light-Indicator
7	99-7418	1	Key-Ignition
8	107-0747	1	Switch-Rocker
9	107-0260	1	Guage-Hour/Battery Level, 48 Volt
10	18-2830	1	Button-Horn
11	104-6930	1	Plug-Rubber
12	3234-17	4	Screw-HHF
13	3256-3	8	Washer-Flat
14	104-8300	16	Nut-Flange, NI
15	3234-11	2	Screw-HHF
16	107-0348	1	Switch-Key, 48V
16:1	3250-28	3	Screw
16:2	108-8659	1	Washer-Backup
16:3	108-8660	1	Nut-Mounting
16:4	108-6994	1	Key-Ignition
17	104-7048	1	Cap-Housing
18	2412-133	2	R-Clamp

Ref	Part No.	Qty.	Description
19	104-7050	1	Housing-Manual
20	110-2580	1	Switch-Key, Supervisor
20:1		1	Switch-Key
20:2	108-8660	1	Nut-Mounting
20:3	110-5221	1	Set-Key, Supervisor
20:4	108-8659	1	Washer-Backup
21	104-8301	4	Nut-Flange, NI
22	32105-13	2	Screw-SHH
23	104-7135	1	Solenoid
24	218-489	2	Holder-Fuse
25	104-7252	1	Mount-Solenoid
26	98-8876	2	Fuse-10 Amp
27	32149-7	2	Nut-Keps
28	322-11	2	Screw-HH
29	104-7075	1	Cover-Channel
30	104-7206	4	Screw-HHF
31	323-42	2	Screw-HH
32	3256-24	2	Washer-Flat
33	99-7733	1	Bumper-Plastic
34	104-7076	1	LH Fender ASM
35	104-7077	1	RH Fender ASM
36	112-3143	1	Decal
38	99-7311	2	Mount-Headlight
39	104-7312	2	Headlight

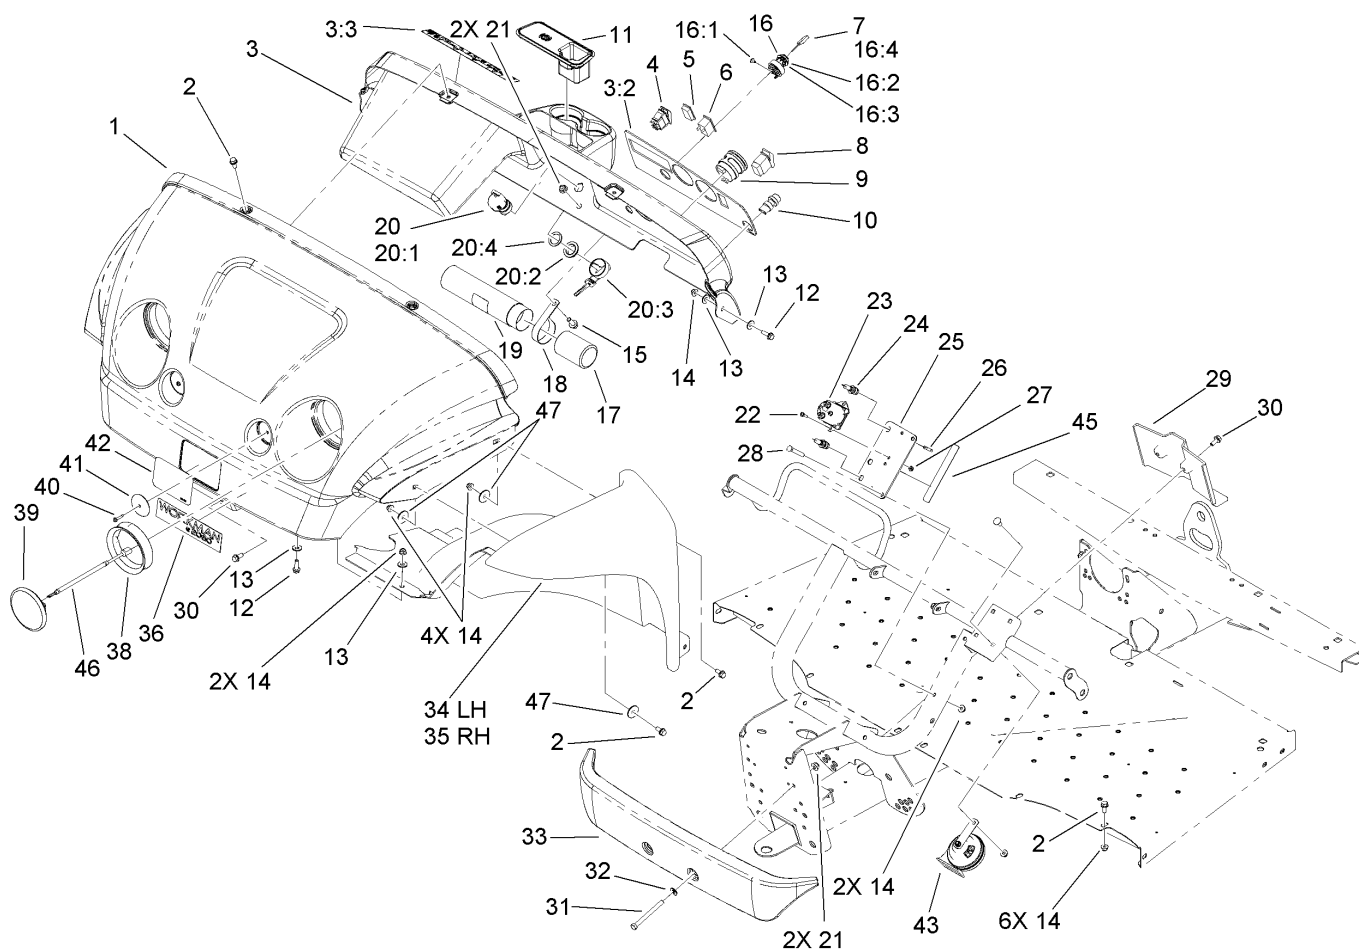


Dash Panel Assembly (continued)

Ref	Part No.	Qty.	Description
40	32144-89	2	Screw-Forming, Thread
41	99-7312	2	Reflector
42	99-7339	1	Decal
43	107-0358	1	Horn
45	107-0287	1	Decal-Fuse
46	106-2401	2	Harness-Headlight
47	3256-57	6	Washer-Flat

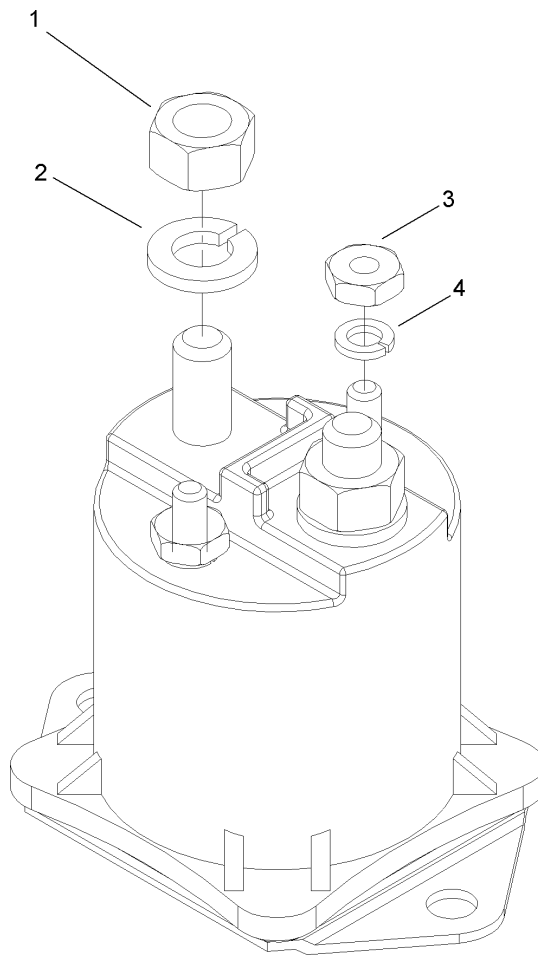


Solenoid Assembly No. 104-7135

Ref	Part No.	Qty.	Description				
1	3217-6	2	Nut-Hex				
2	3253-4	2	Washer-Lock				
3	3219-14	2	Nut-Hex				
4	3253-17	2	Washer-Lock				

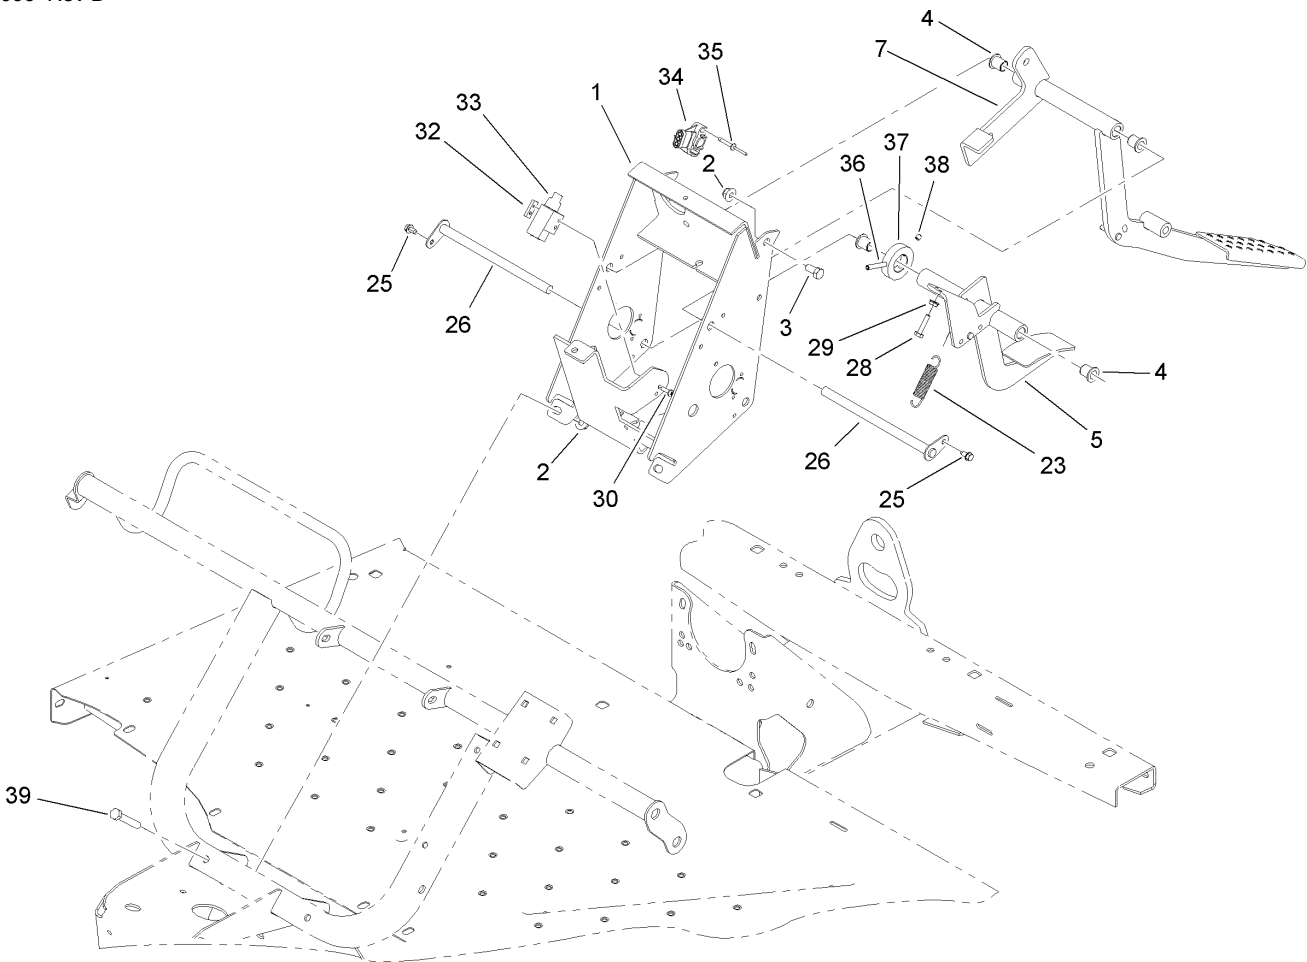

Pedal Assembly


Ref	Part No.	Qty.	Description				
1	112-3048-03	1	Pedal Support Frame ASM				
2	104-8301	4	Nut-Flange, NI				
3	323-4	2	Screw-HH				
4	256-155	4	Bushing-Flange				
5	110-2607-03	1	Pedal-Throttle				
7	104-7170-03	1	Pedal-Brake				
23	104-6415	1	Spring-Return, Pedal				
25	12-3270	2	Screw				
26	104-7164	2	Pivot-Pedal				
28	321-7	2	Screw-HH				
29	32149-2	2	Nut-Keps				
30	104-7221	2	Screw-PPH				
32	1-633181	1	Plate-Tapped				
33	99-7407	1	Switch				
34	112-3046	1	Sensor-Position, Rotary				
35	107-0386	2	Rivet-Blind				
36	32121-78	1	Pin-Roll				
37	104-7301	1	Collar				
38	3245-32	2	Screw-HSH				
39	323-11	2	Screw-HH				

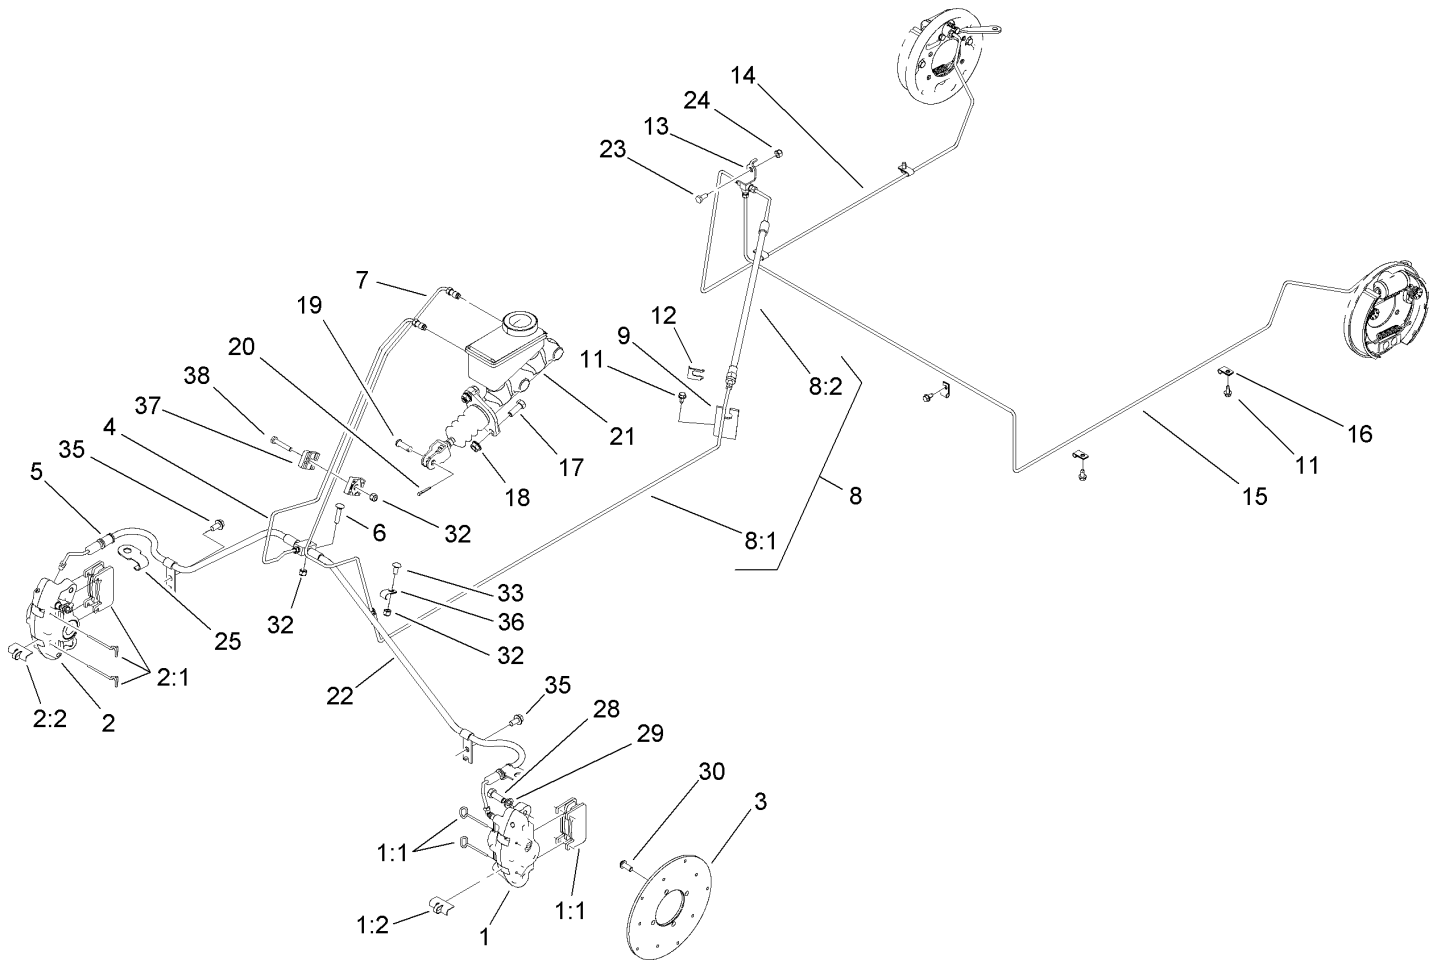

Hydraulic Brake Assembly


Ref	Part No.	Qty.	Description
1	112-3150	1	Caliper-LH
1:1	107-0708	1	Friction Pad And Pin Kit
1:2	112-3152	1	Spring-Rattle, Anti
2	112-3151	1	Caliper-RH
2:1	107-0708	1	Friction Pad And Pin Kit
2:2	112-3152	1	Spring-Rattle, Anti
3	104-6891	2	Rotor
4	104-6798	1	Tube-Brake, Front
5	104-7256	1	Front Hose ASM
6	3229-3	1	Screw-CARR
7	104-6793	1	Tube-Brake, Rear
8		1	Rear Brake Hose ASM
8:1	104-6794	1	Tube-Brake, Rear
8:2	104-6795	1	Hose-Brake, Rear
9	104-6799	1	Bracket-Hose, Brake
11	12-3270	6	Screw
12	104-7092	1	Clip
13	87-3560	1	Tee
14	112-3019	1	Tube-Brake, Rear (RH)
15	112-3020	1	Tube-Brake, Rear (LH)
16	2412-72	5	Clip-Closed, Insulated
17	323-6	2	Screw-HH
18	3290-357	2	Nut-HHF, Whiz
19	283-2	1	Pin-Clevis

Ref	Part No.	Qty.	Description
20	3272-10	1	Pin-Cotter
21	104-6782	1	Cylinder-Master
22	87-3570	1	Union
24	3296-42	1	Nut-Lock, NI
23	321-3	1	Screw-HH
25	104-7073	2	Bracket-Hose
28	323-6	4	Screw-HH
29	3253-21	4	Washer-Lock
30	3274-55	8	Screw-HSBH
32	3296-42	3	Nut-Lock, NI
33	3229-11	1	Screw-CARR
35	32144-14	2	Screw-HWH
36	2412-89	1	Clamp
37	87-7660	2	Clamp-Tube
38	321-9	1	Screw-HH

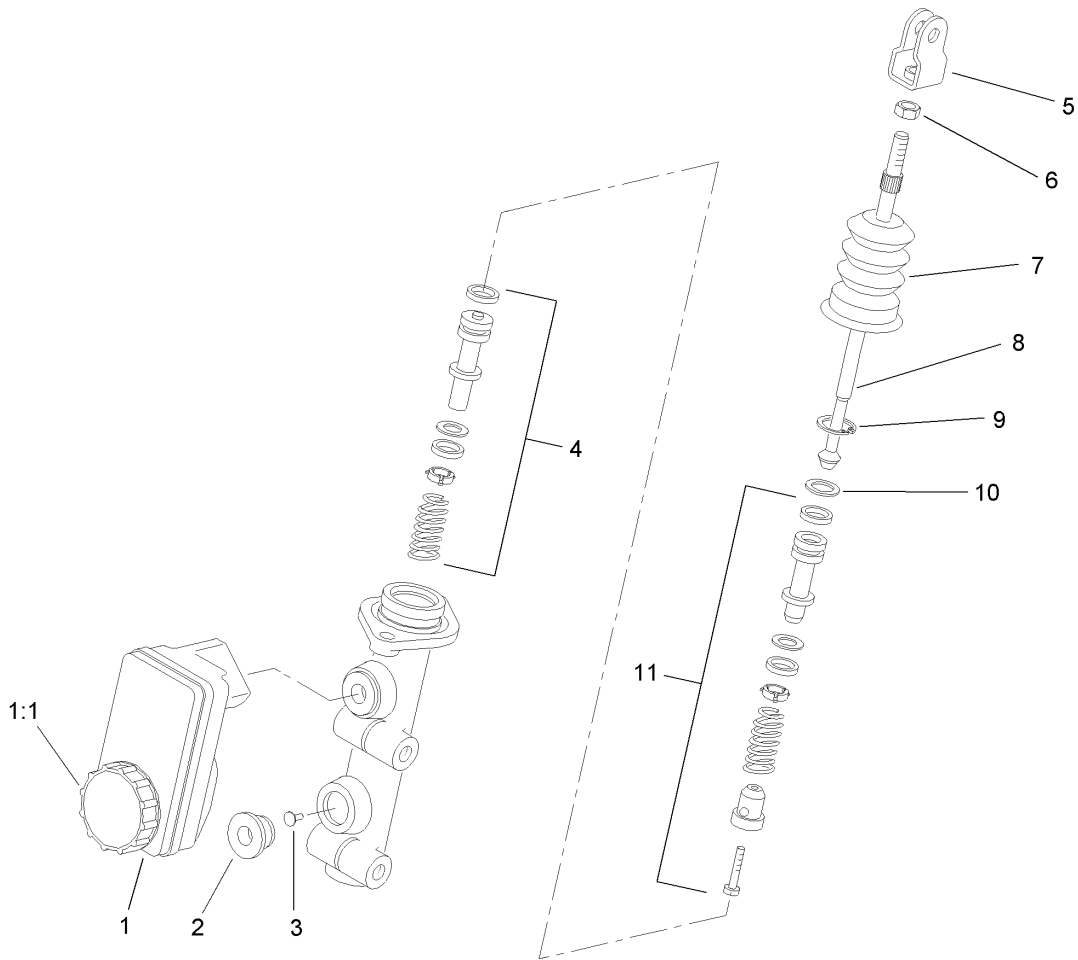

Master Cylinder Assembly No. 104-6782


Ref	Part No.	Qty.	Description				
1	104-6845	1	Reservoir ASM				
1:1	92-4112	1	Cap ASM				
2	93-8971	2	Seal-Port, Flange				
3	92-4103	1	Pin-Stop				
4	92-4102	1	Secondary Piston ASM				
5	92-4110	1	Clevis				
6	21-0360	1	Nut-Hex				
7	94-5209	1	Cover-Dust				
8	94-5210	1	Rod-Push				
9	92-4109	1	Ring-Snap				
10	92-4108	1	Retainer-Washer				
11	92-4101	1	Primary Piston ASM				

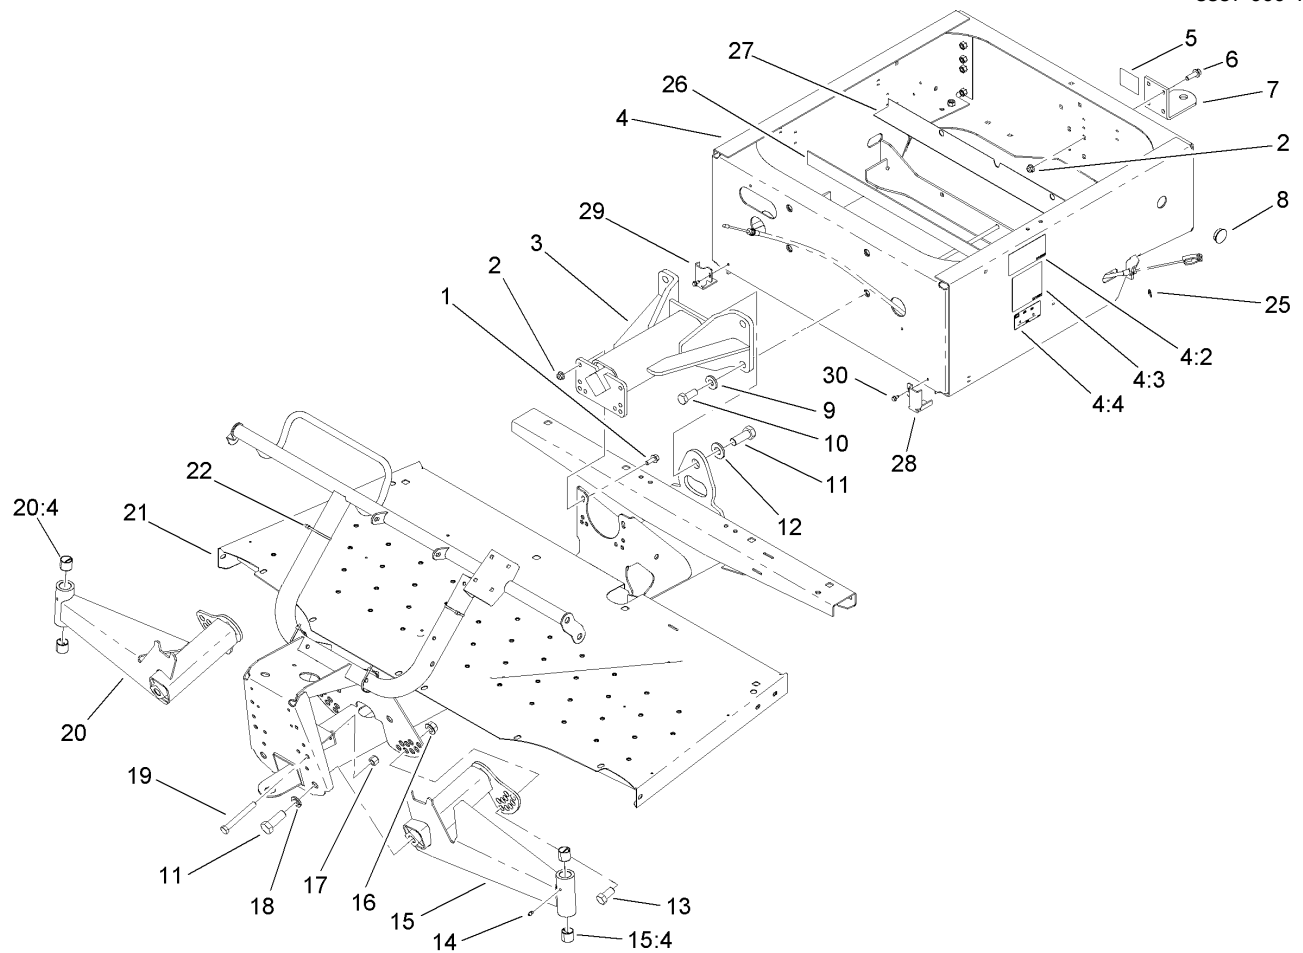

Frame Assembly

Ref	Part No.	Qty.	Description
1	3234-11	4	Screw-HHF
2	104-8301	8	Nut-Flange, NI
3	99-7700	1	Pivot Yoke ASM
4	112-3018	1	Rear Frame ASM
4:2	104-7207	2	Decal-Electric
4:3	107-0257	1	Decal-Polarity
4:4	112-3049	1	Decal-Capacity, Workman (Ce)
5	99-7350	1	Decal-Rating, Hitch (Light Duty)
6	3234-24	4	Screw-HHF
7	99-7654-03	1	Hitch-Duty, Light
8	94-1402	1	Plug-Hole
9	99-7667	4	Washer-Flat
10	327-4	4	Screw-HH
11	328-24	5	Screw-HH
12	87-3060	1	Washer-Hardened
13	3214-2	2	Screw-HH
14	302-5	2	Fitting-Grease
15	99-7685	1	LH A-Arm ASM
15:4	3-0348	2	Bushing
16	32128-54	2	Nut-HF
17	3296-23	2	Nut-Lock, NI
18	3254-7	4	Washer-Lock, Int
19	325-17	2	Screw-HH
20	99-7684	1	RH A-Arm ASM


Ref	Part No.	Qty.	Description
20:4	3-0348	2	Bushing
21	104-7197-03	1	Front Frame ASM
22	3290-379	15	Tie-Cable
25	32120-47	2	Ring-Retaining, External
26	107-0252	1	Pad-Battery
27	107-0267	4	Isolator-Battery
28	112-2951	1	Guard-Brake Line, LH
29	112-2952	1	Guard-Brake Line, RH
30	12-3270	2	Screw

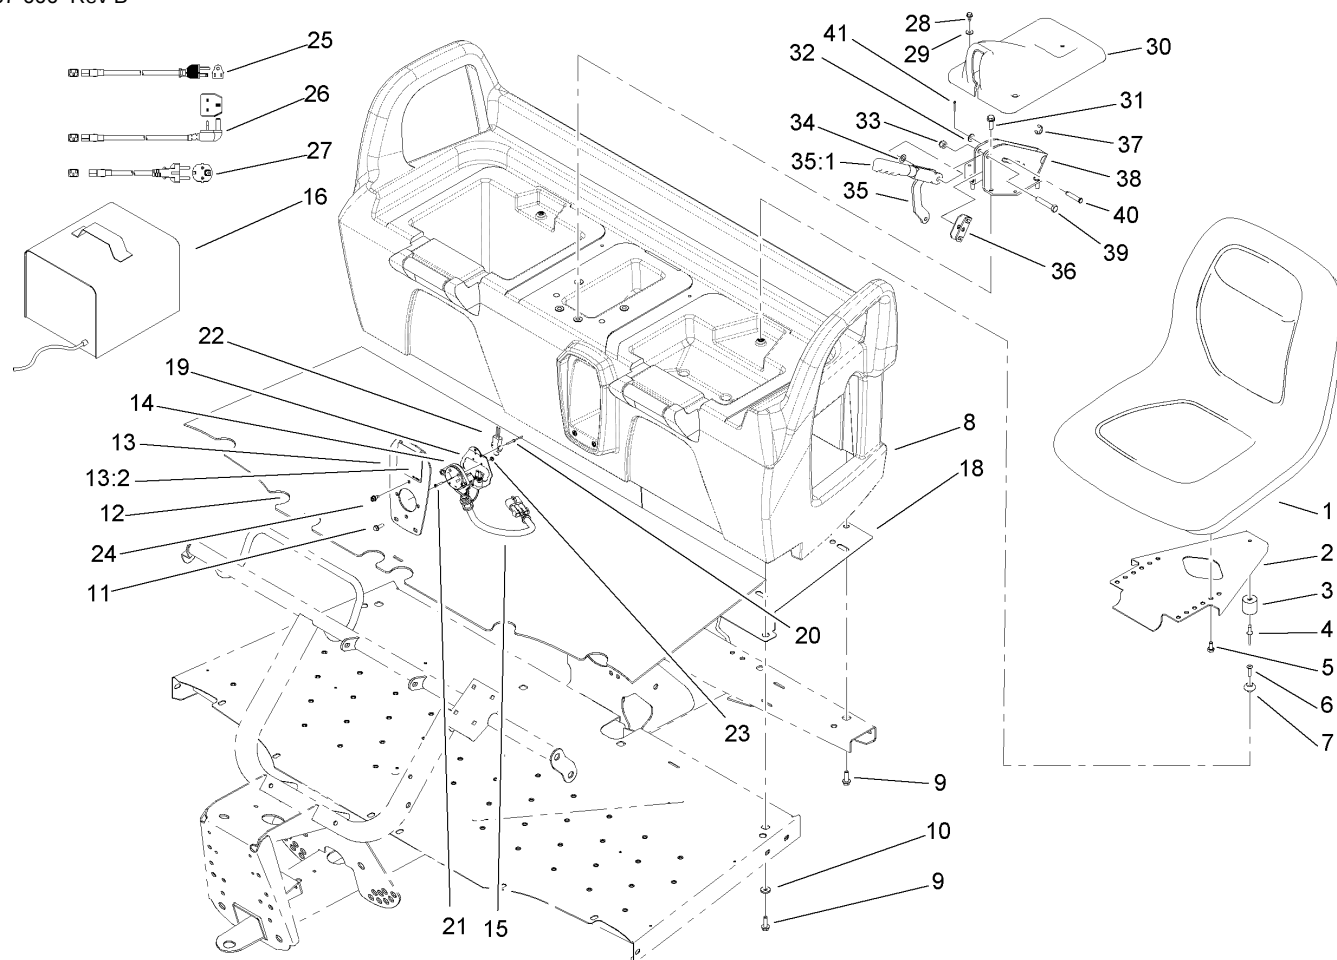

Seat Base Assembly


Ref	Part No.	Qty.	Description
1	110-2645	2	Seat ASM
2	99-7829	2	Bracket-Seat
3	99-7830	2	Rubber Receptical ASM
4	3290-412	2	Rivet
5	33114-016	8	Screw-HH
6	32108-5	2	Screw-FH
7	99-7833	2	Post-Holding
8	104-6847	1	Seat Base ASM
9	3234-17	8	Screw-HHF
10	88-7200	8	Washer-Flat
11	32105-15	4	Screw
12	104-6590	1	Mat-Floor
13	107-0370	1	Plate-Receptacle
13:2	107-0295	1	Decal-Charger
14	107-0288	1	Receptacle-Charger
15	107-0746	1	Harness-Wire, Charger
16	110-2570	1	Charger-48V, Offboard (Int'l)
18	107-0359-03	1	Tray-Seatbase
19	107-0716	1	Bracket-Mount, Socket
20	107-0333	2	Rivet-Pop
21	107-0334	2	Screw-HSH
22	99-3410	1	Switch
23	3296-9	2	Nut-Lock
24	32104-17	4	Screw-HWH

Ref	Part No.	Qty.	Description
25	107-0384	1	Powercord-Ac, Canada
26	107-0383	1	Powercord-Ac, U.K.
27	107-0382	1	Powercord-Ac, Europe
28	12-3270	2	Screw
29	3256-1	2	Washer-Flat
30	104-7014	1	Cover-Brake, Parking
31	3234-17	4	Screw-HHF
32	3256-23	1	Washer-Flat
33	3296-39	1	Nut-Lock, NI
34	3290-477	1	Washer-Curved
35	104-6842	1	Lever-Brake, Park
35:1	106-7972	1	Grip-Handle
36	87-3480	1	Bracket-Equalizer, Cable
37	32120-47	2	Ring-Retaining, External
38	104-6844-03	1	Support-Brake, Park
39	323-10	1	Screw-HH
40	94-3829	1	Pin-Clevis
41	3272-6	1	Pin-Cotter

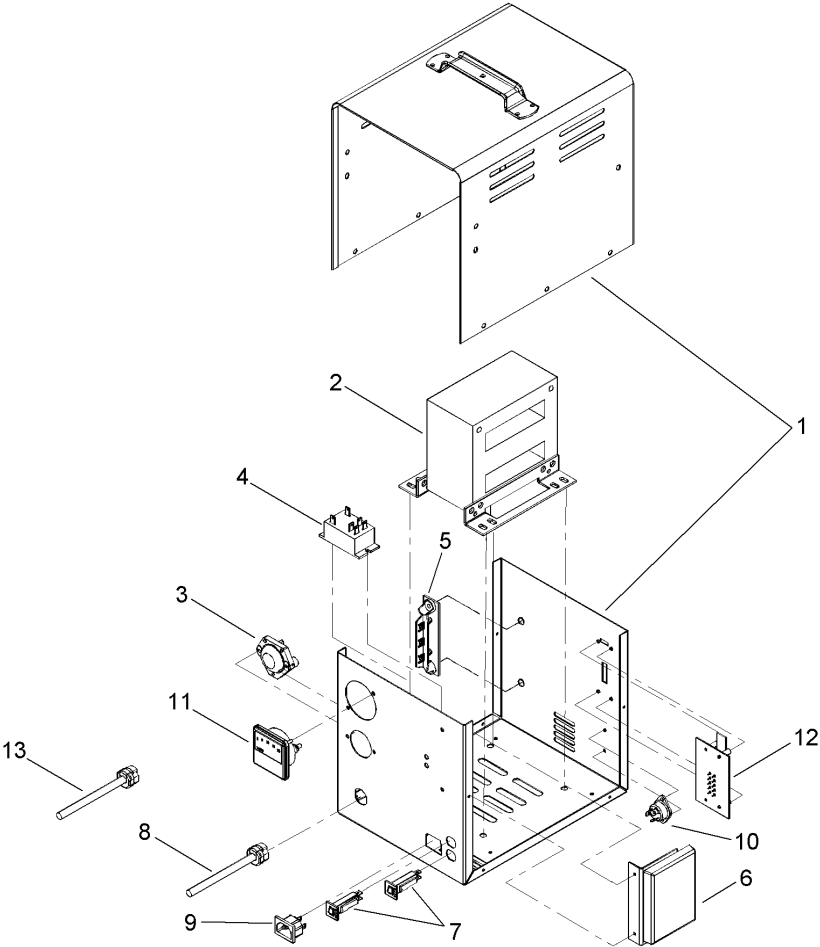

Offboard 48 Volt Charger Assembly No. 110-2570


Ref	Part No.	Qty.	Description				
②1		1	Case ASM				
②2		1	Transformer ASM				
3	108-1161	1	Fuse ASM				
4	108-1170	1	Relay, 48V Dc				
5	108-1163	1	Diode ASM				
6	110-2574	1	Control Board ASM				
7	110-2577	1	Breaker-Circuit				
8	108-1173	1	Kit-Cordset				
9	108-1174	1	Connnector-Inlet				
10	108-1168	1	Terminal And Screw ASM				
11	108-1175	1	Ammeter				
12	110-2578	1	Switch ASM				
13	108-3071	1	Kit-Cordset, 20 Foot (Dc)				

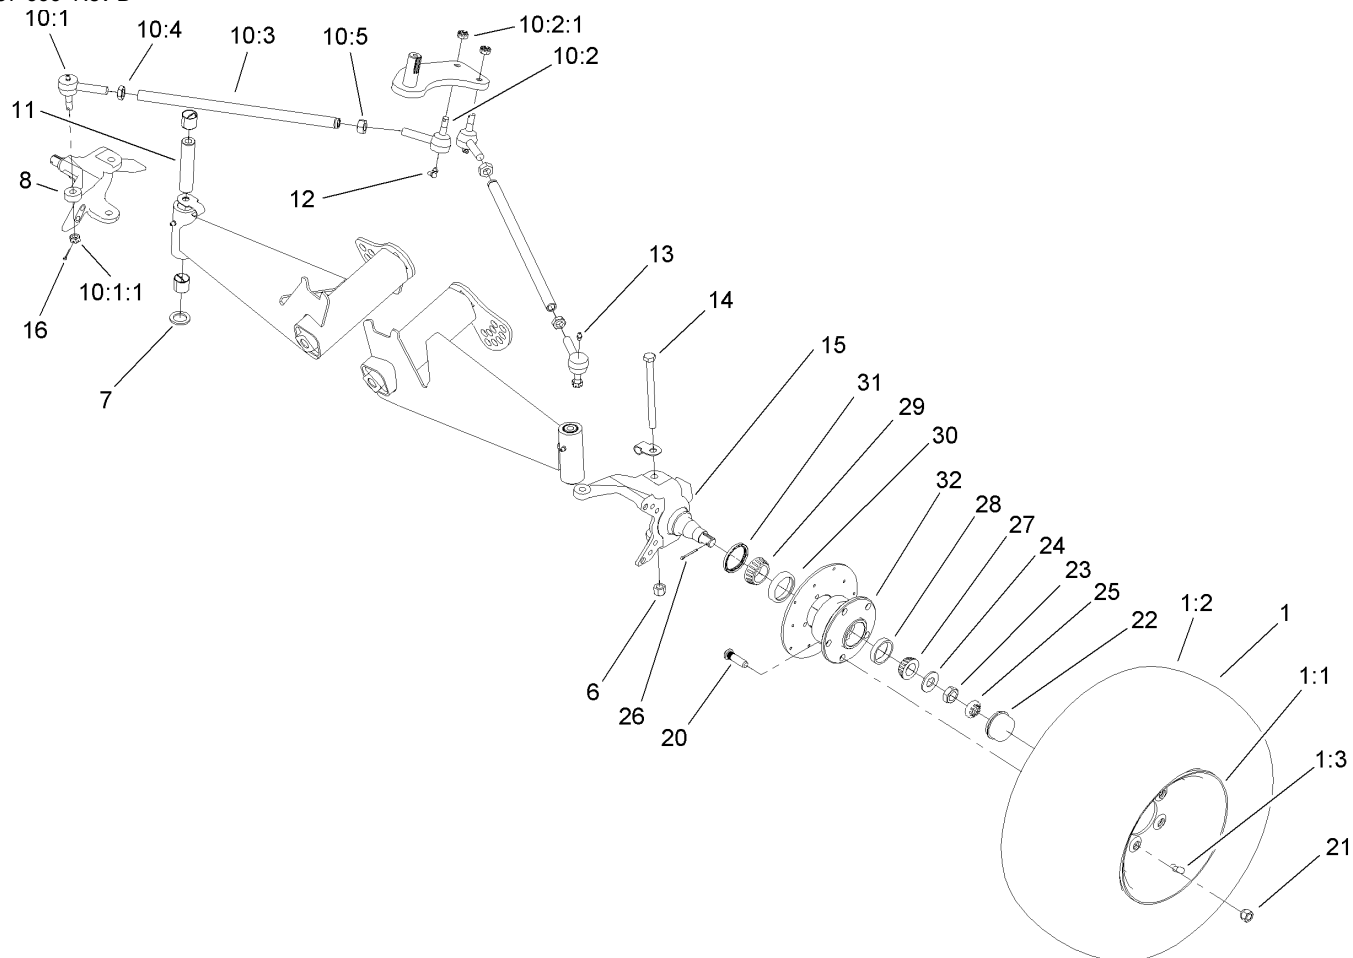

Front Tire and Steering Assembly

Ref	Part No.	Qty.	Description
1	104-7290	2	Tire And Wheel ASM
1:1	104-7288	1	Wheel
1:2	104-7289	1	Tire (22 X 9.50-10) 4-Ply
1:3	232-27	1	Stem-Valve
6	3296-23	2	Nut-Lock, NI
7	256-115	2	Washer-Thrust
8	104-6877	1	Spindle-Disc, RH
10		2	Rod-Tie
10:1	112772-03	1	RH Ball Joint ASM
10:1:1	915031	1	Nut
10:2	112771-03	1	LH Ball Joint ASM
10:2:1	915031	1	Nut
10:3	99-7600-03	1	Rod-Tie
10:4	3220-11	1	Nut-Jam
10:5	3218-21	1	Nut-Jam
11	99-7499	2	Sleeve-Kingpin
12	302-60	2	Fitting-Grease, 90 DEG
13	302-5	2	Fitting-Grease
14	325-20	2	Screw-HH
15	104-6876	1	Spindle-Disc, LH
16	3272-7	4	Pin-Cotter
20	10-6830	10	Stud-Type, Drive
21	242-50	10	Nut-Lug
22	241-119	2	Cap-Dust


Ref	Part No.	Qty.	Description
23	3220-7	2	Nut-Jam
24	93-0309	2	Washer-Tab
25	93-0307	2	Nut-Lock, Retainer
26	3272-12	2	Pin-Cotter
27	254-94	2	Bearing-Cone, Tapered
28	254-72	2	Bearing-Cup, Tapered
29	254-106	2	Cone-Bearing, Tapered
30	254-107	2	Cup-Bearing, Tapered
31	108-7019	2	Seal-Shaft
32	104-6809	2	Hub

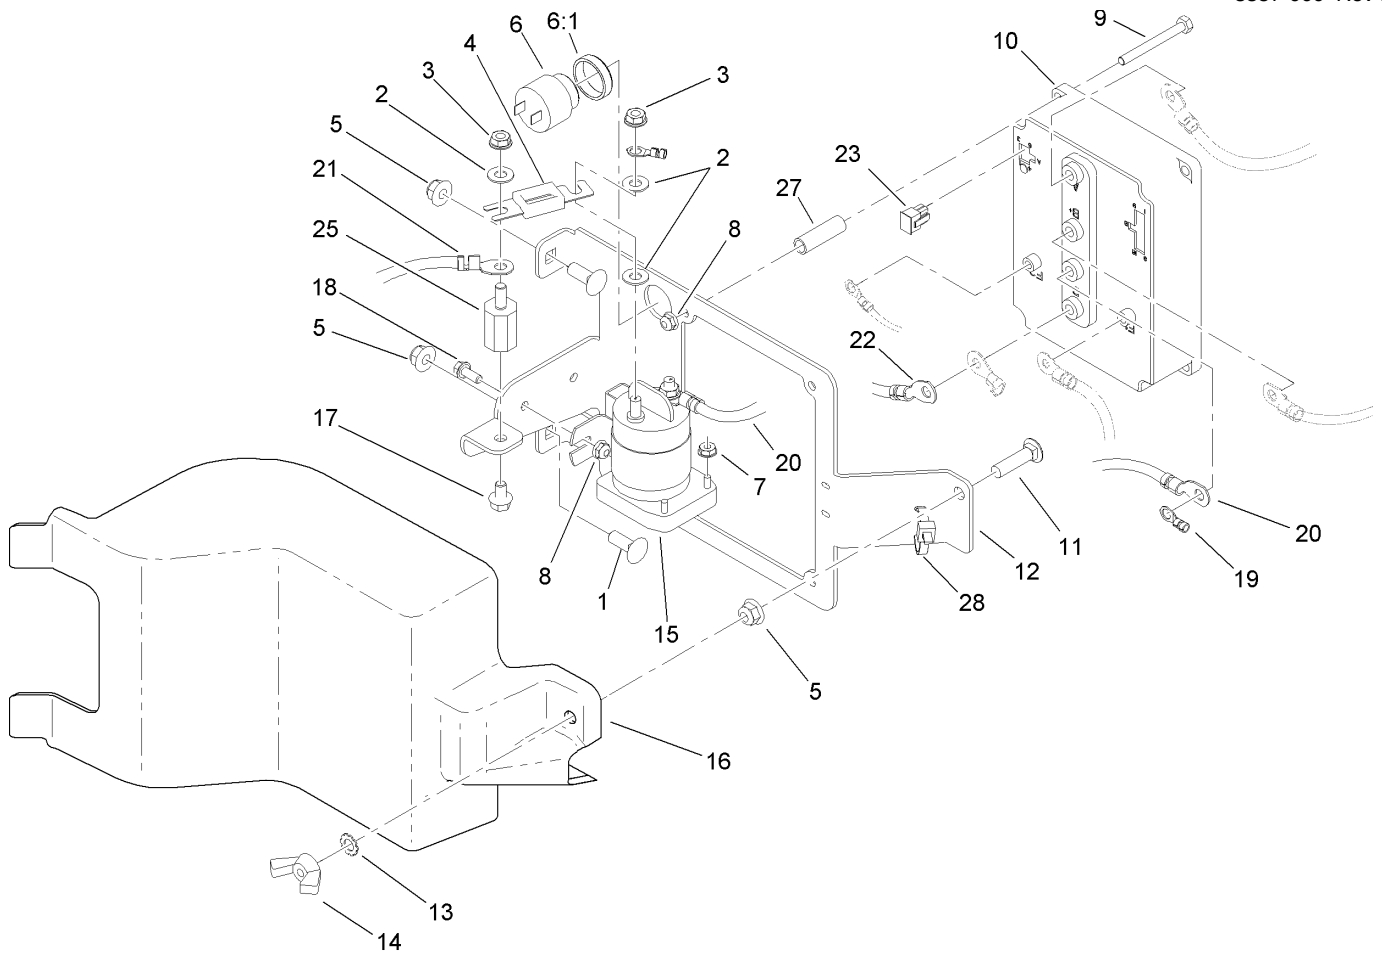

Controller Assembly


Ref	Part No.	Qty.	Description
1	3231-22	2	Screw-CARR
2	107-0394	3	Washer-Flat
3	107-0380	3	Nut-HHF
4	104-7320	1	Fuse
5	104-8301	3	Nut-Flange, NI
6	94-5582	1	Alarm-Audio
6:1	104-5107	1	Nut-Plastic, Knurled
7	32149-8	2	Nut-Keps
8	104-7201	6	Nut-HF
9	321-15	4	Screw-HH
10	110-2569	1	Controller-Sevcon
11	3231-4	1	Screw-CARR
12	104-7137-03	1	Mount-Controler
13	3255-9	1	Washer-Lock
14	32103-3	1	Nut-Wing
15	104-7136	1	Contactora-48V
16	104-7138	1	Cover-Controller
17	100-1719	1	Screw-Flange
18	3234-33	2	Screw-HHF
19	112-3531	1	Harness-Wire, Main
20	107-0740	1	Cable-Battery, Positive
21	107-0741	1	Cable-Battery, Positive
22	107-0742	1	Cable-Battery, Negative
23	32160-130	1	Connector

Ref	Part No.	Qty.	Description
24	107-0737	1	Harness-Wire, Battery Cable
25	107-0286	1	Isolator
27	107-0285	4	Spacer
28	3290-379	2	Tie-Cable

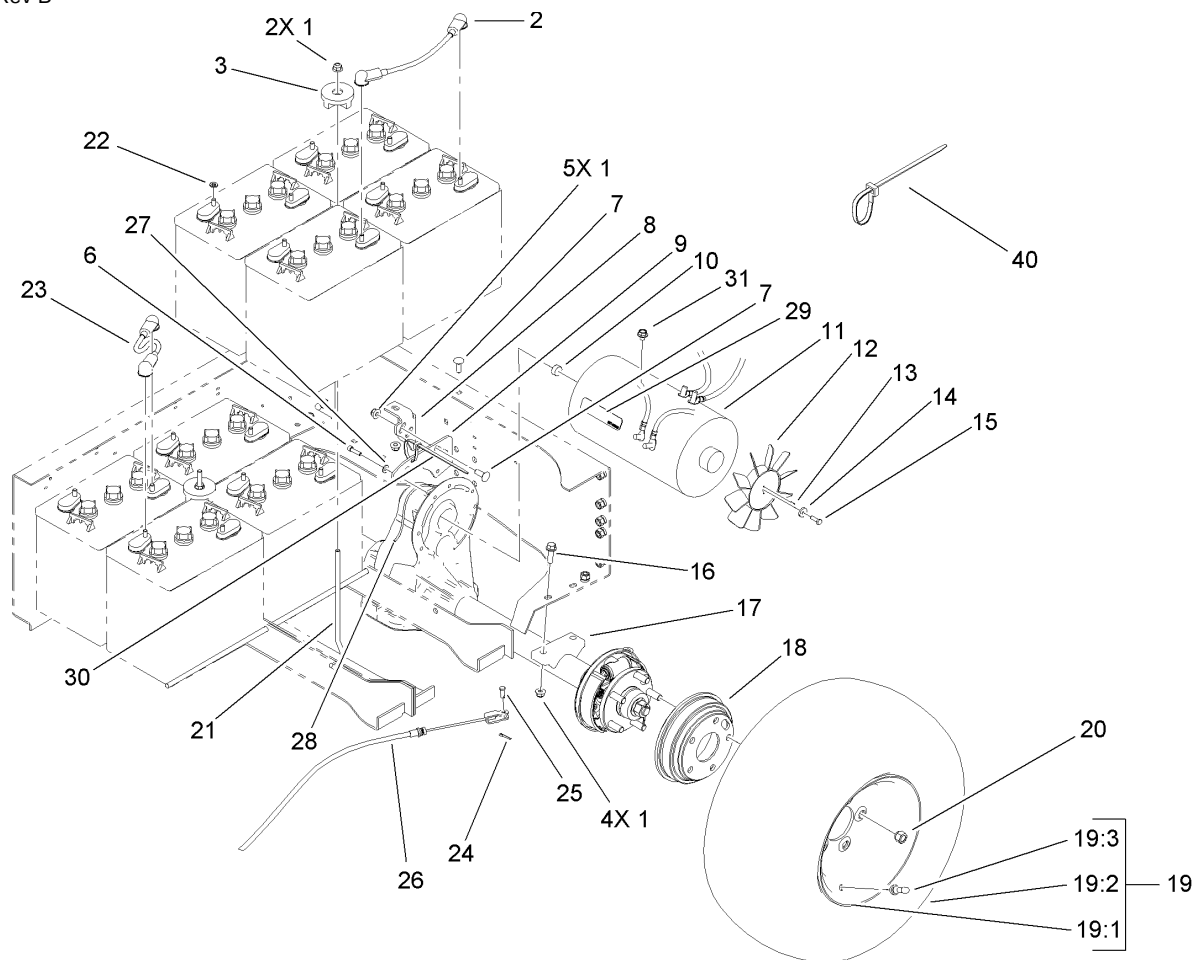


Battery and Transaxle Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	104-8301	11	Nut-Flange, NI	24	3272-10	2	Pin-Cotter
2	107-0739	1	Cable-Battery, Positive	25	283-62	2	Pin-Clevis
3	104-7149	2	Hold Down ASM	26	110-2647	2	Cable-Brake, Park
6	3274-26	6	Screw-HSH	27	3256-22	6	Washer-Flat
7	3231-22	5	Screw-CARR	28	110-1872	1	Hose-Fuel
8	104-7249-03	1	Bracket-Support	29	107-0356	1	Decal-Motor
9	104-7305-03	1	Plate-Mount, Transaxle	30	3290-379	12	Tie-Cable
10	104-7243	1	Damper-Rubber	31	107-0376	1	Screw-HSFH
11	104-7335	1	Motor-Electric	40	3290-378	4	Tie-Cable
12	107-0259	1	Fan-10 Blade, Clockwise	99	107-0392	1	Protection-Terminal, Aerosol
13	32121-68	2	Pin-Roll				
14	73-3580	1	Washer				
15	3274-8	1	Screw-HSH				
16	3234-24	4	Screw-HHF				
17	112-3085	1	Electric Transaxle ASM				
18	104-6500	2	Drum-Brake				
19	104-7290	2	Tire And Wheel ASM				
19:1	104-7288	1	Wheel				
19:2	104-7289	1	Tire (22 X 9.50-10) 4-Ply				
19:3	232-27	1	Stem-Valve				
20	242-50	10	Nut-Lug				
21	104-7339	2	Rod-Battery				
22	107-0280	16	Washer-Lock				
23	107-0738	6	Cable-Battery, Positive				

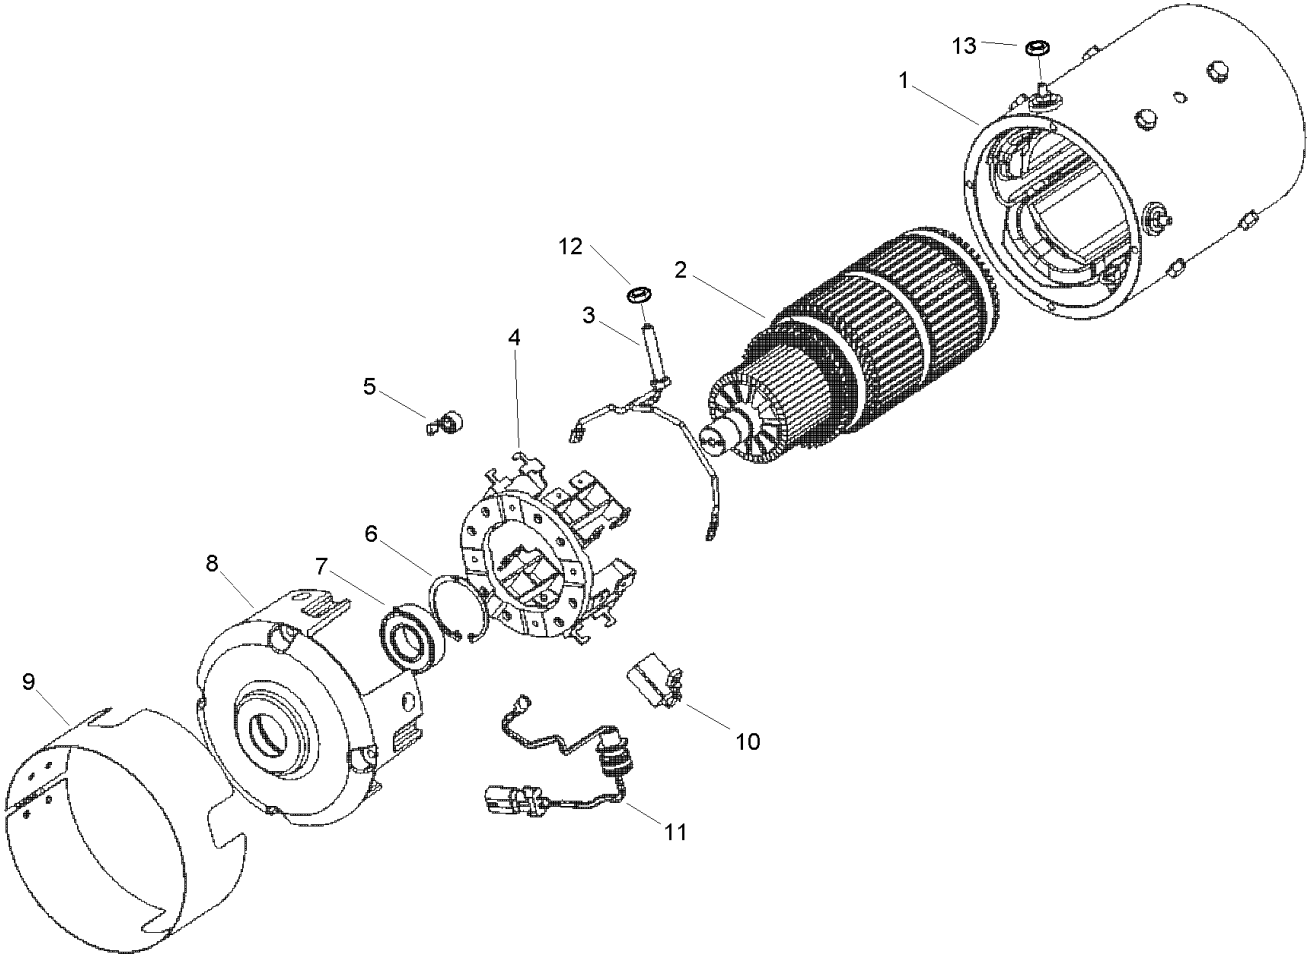

Electric Motor Assembly No. 104-7335


Ref	Part No.	Qty.	Description				
1			1 Frame And Field ASM				
2			1 Armature ASM				
3	108-1151		2 Brush Lead ASM				
4	108-1152		1 Brush Box ASM				
5	108-1153		8 Spring-Brush				
6	108-1154		1 Ring-Retaining				
7	108-1155		1 Bearing				
8	108-1156		1 Head-Commutator				
9	108-1157		1 Headband ASM				
10	108-1158		8 Brush				
11	108-1159		1 Thermal Sensor ASM				
12	3218-13		2 Nut-Jam, Brass				
13	3218-14		2 Nut-Jam, Brass				

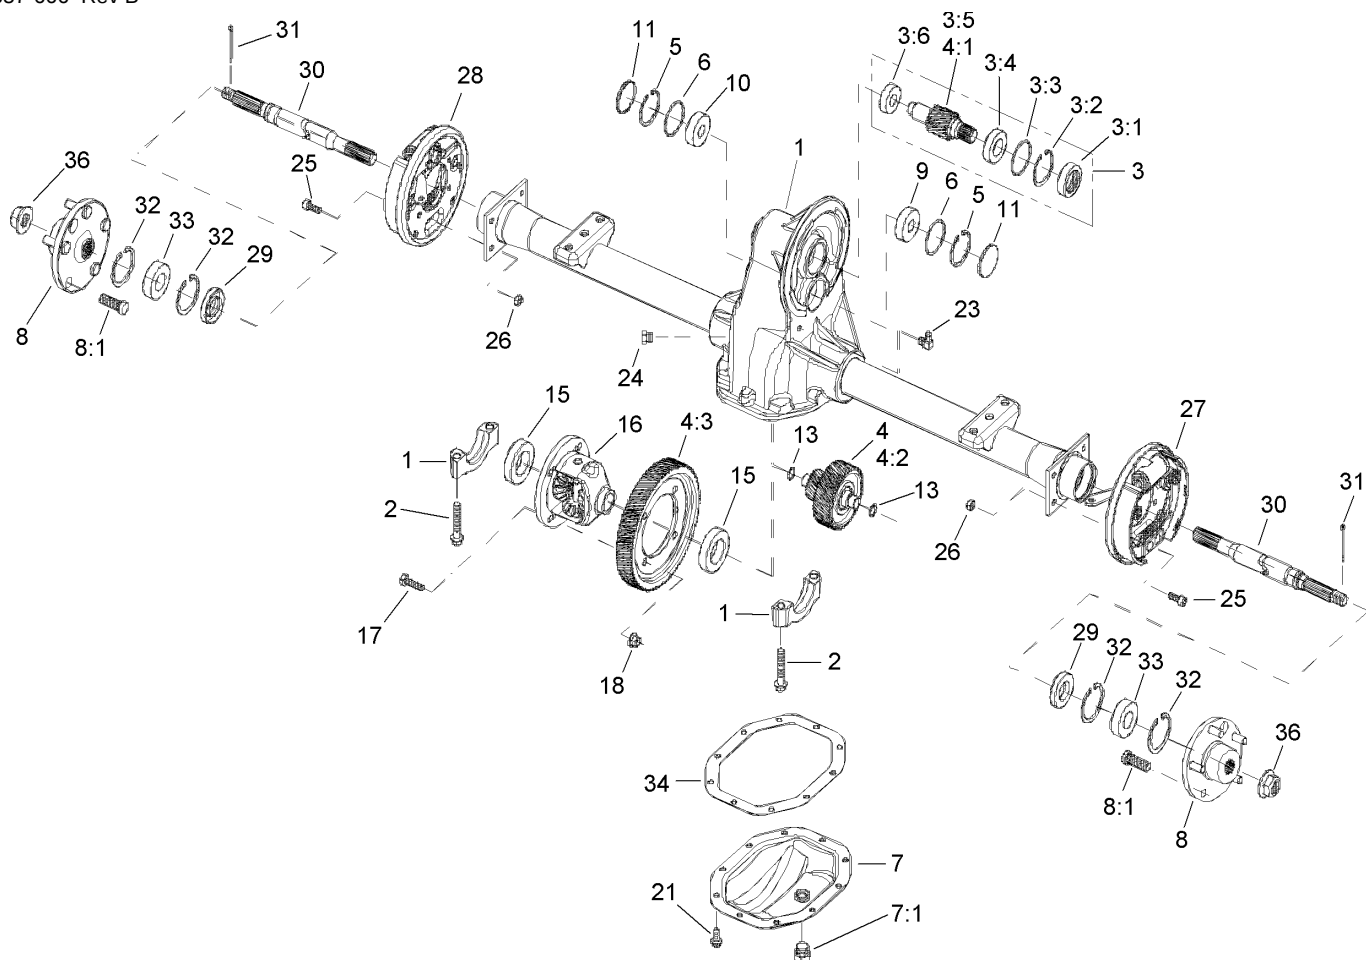

Electric Transaxle Assembly No. 112-3085


Ref	Part No.	Qty.	Description
②1		1	Transaxle ASM
2	108-2401	4	Bolt-Cap, Bearing
3	108-2402	1	Input Shaft Kit
3:1	108-2403	1	Seal-Oil
3:2	108-2404	1	Ring-Retaining
3:3	108-2405	1	O-Ring
②3:4		1	Bearing-Ball
②3:5		1	Shaft-Input
②3:6		1	Bearing-Ball
4	108-2409	1	Internal Gear Kit
②4:1		1	Shaft-Input
②4:2		1	Gear-Intermediate
4:3	110-2541	1	Gear-Drive, Final
5	108-2404	2	Ring-Retaining
6	108-2405	2	O-Ring
7	108-2416	1	Cover Kit
7:1	108-2415	1	Plug-HH
8	112-3136	2	Hub ASM
8:1	112-3137	1	Bolt-Wheel
9	108-2406	1	Bearing-Ball
10	108-2407	1	Bearing-Ball
11	108-2408	2	Plug-Cap, End
13	108-2410	2	O-Ring
15	108-2411	2	Bearing-Ball

Ref	Part No.	Qty.	Description
16	112-3138	1	Differential ASM
17	108-2413	4	Screw-Hex
18	108-2414	4	Nut-Lock
21	108-2427	10	Screw-Tapping
23	108-2428	1	Elbow-90 Degree
24	108-2429	1	Plug-HH
25	112-3139	8	Screw-HSH
26	108-2418	8	Nut-Lock
27	104-6807	1	LH Brake ASM
28	104-6806	1	RH Brake ASM
29	112-3140	2	Seal-Oil
30	112-3141	2	Shaft-Axle
31	3272-12	2	Pin-Cotter
32	108-2424	4	Ring-Retaining
33	108-2425	2	Bearing-Ball
34	108-3148	1	Gasket
36	112-3142	2	Nut-HF

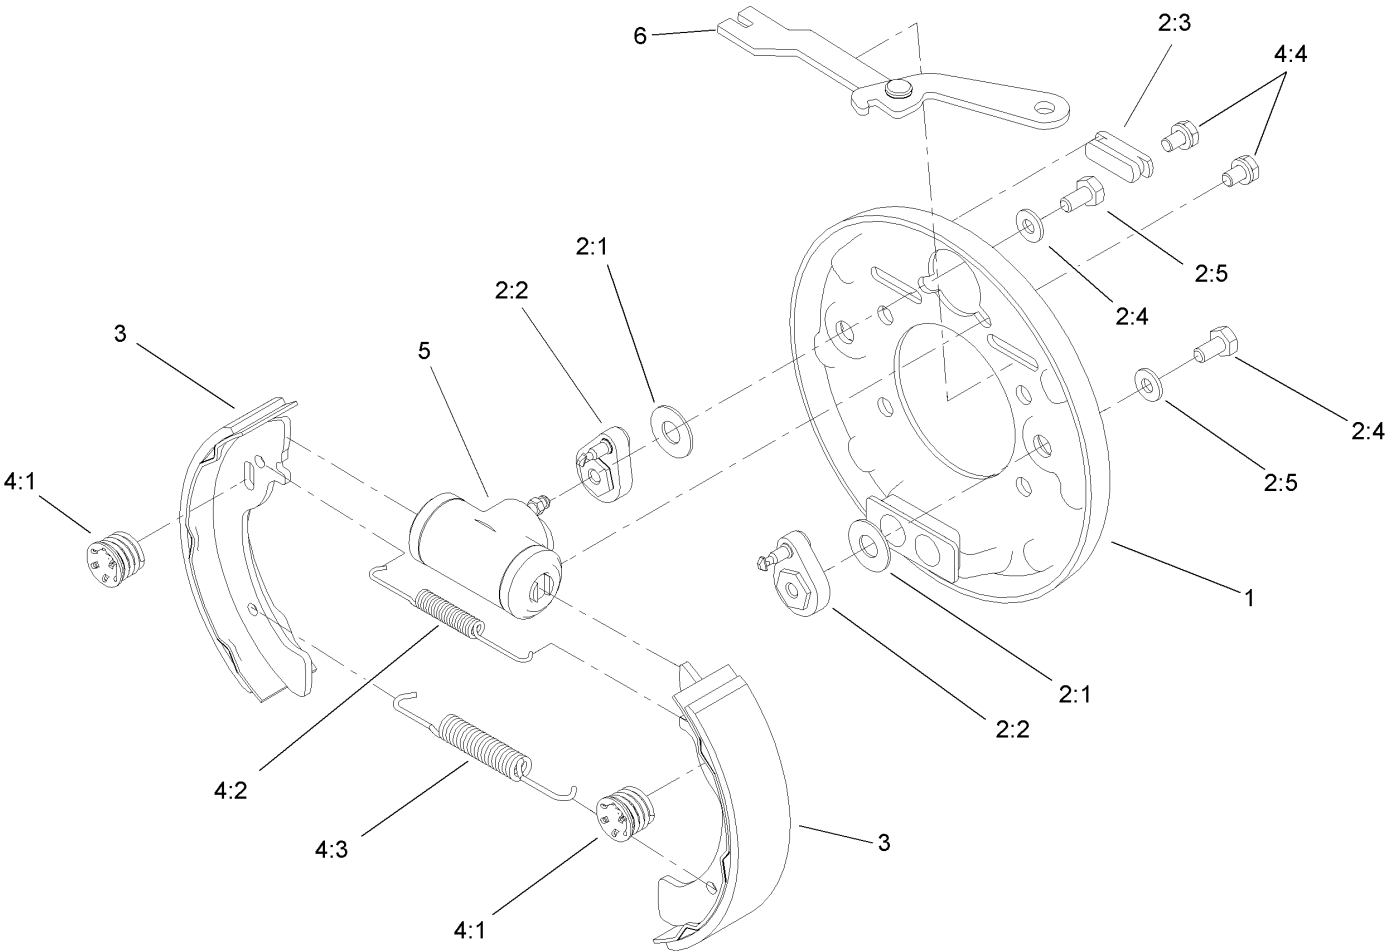


Left Hand Brake Assembly No. 104-6807

Ref	Part No.	Qty.	Description				
1	100-8586	1	Backing Plate ASM				
2	104-6820	1	Adjuster Kit				
2:1	100-8585	2	Washer-Bellville				
2:2	100-8588	2	Adjuster Lever ASM				
2:3	100-8584	2	Cover-Dust				
2:4		2	Screw				
2:5		2	Bolt				
3	104-6818	4	Shoe And Lining Kit				
4	104-6819	1	Hardware Kit				
4:1	100-8583	2	Shoe Hold Down Spring ASM				
4:2	100-8581	2	Spring-Upper				
4:3	100-8582	2	Spring-Lower				
4:4		2	Bolt And Washer				
5	104-6824	1	Wheel Cylinder ASM				
6	104-6825	1	LH Park Brake Lever ASM				

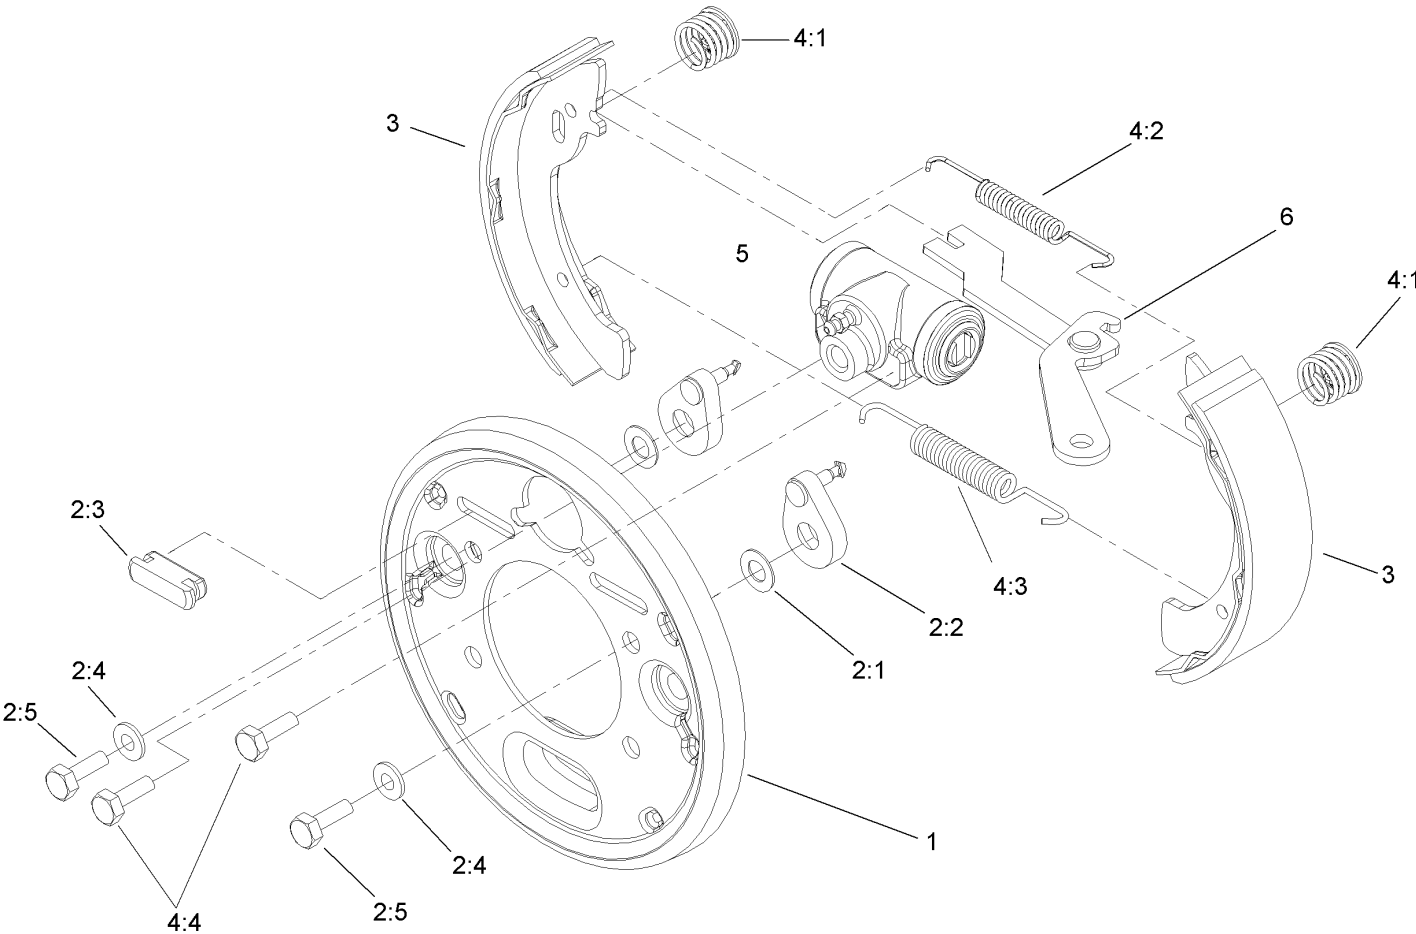


Right Hand Brake Assembly No. 104-6806

Ref	Part No.	Qty.	Description				
1	100-8586	1	Backing Plate ASM				
2	104-6820	1	Adjuster Kit				
2:1	100-8585	2	Washer-Bellville				
2:2	100-8588	2	Adjuster Lever ASM				
2:3	100-8584	2	Cover-Dust				
2:4		2	Screw				
2:5		2	Bolt				
3	104-6818	4	Shoe And Lining Kit				
4	104-6819	1	Hardware Kit				
4:1	100-8583	2	Shoe Hold Down Spring ASM				
4:2	100-8581	2	Spring-Upper				
4:3	100-8582	2	Spring-Lower				
4:4		2	Bolt & Washer				
5	104-6824	1	Wheel Cylinder ASM				
6	104-6826	1	RH Park Brake Lever ASM				

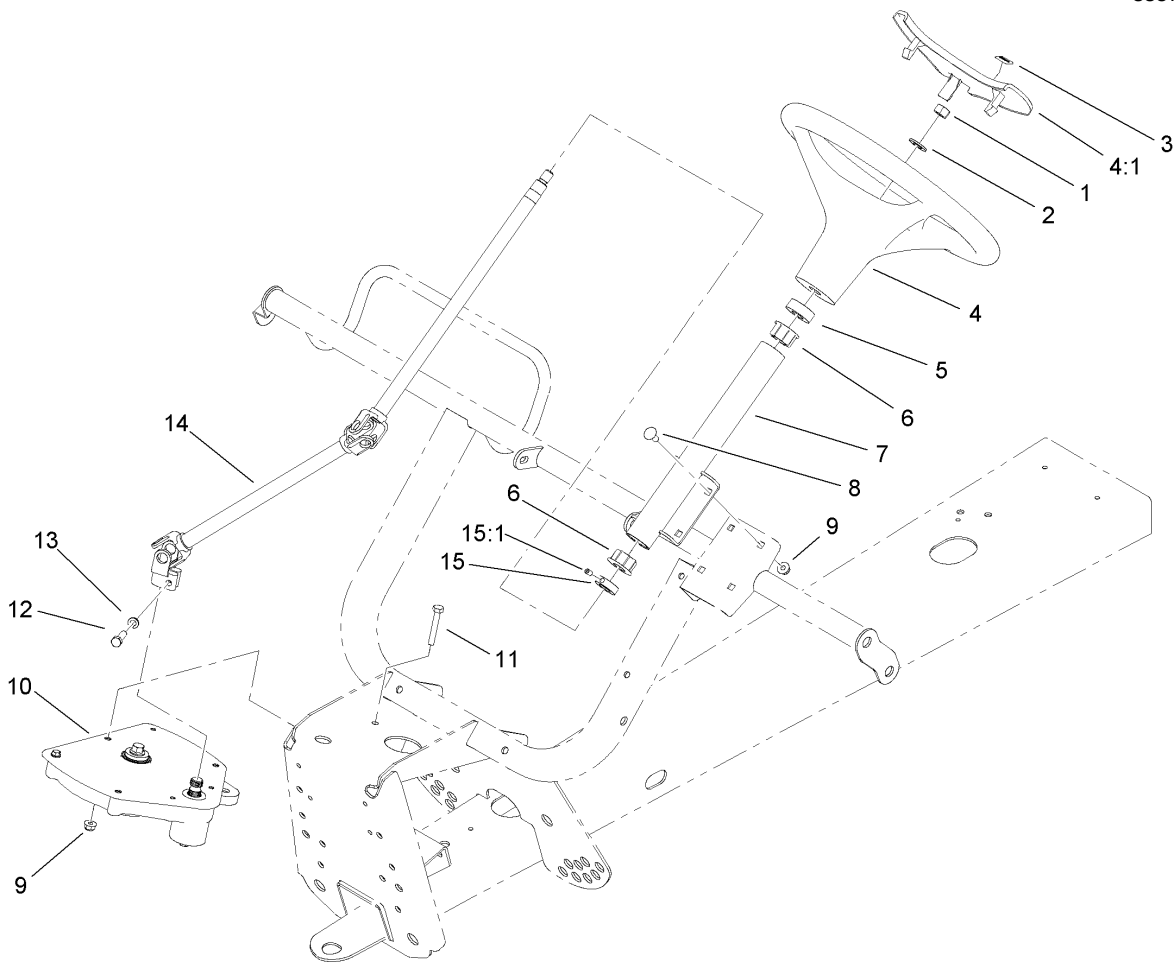


Upper Steering Assembly

Ref	Part No.	Qty.	Description				
1	110-8815	1	Nut-Hex				
2	3256-26	1	Washer-Flat				
3	98-1459	1	Decal				
4	98-1471	1	Wheel-Steering				
4:1	98-1468	1	Cover-Wheel, Steering				
5	21-9260	1	Cover-Dust				
6	93-1146	2	Bushing-Steering, Upper				
7	99-7651-03	1	Column-Steering				
8	3230-1	4	Bolt-CARR				
9	104-8300	7	Nut-Flange, NI				
10	99-7660	1	Steering Gearbox ASM				
11	322-10	3	Screw-HH				
12	48-7730	1	Screw-HH				
13	3253-4	1	Washer-Lock				
14	99-7653	1	Shaft-Steering				
15	111383	1	Collar				
15:1	3245-32	1	Screw-HSH				

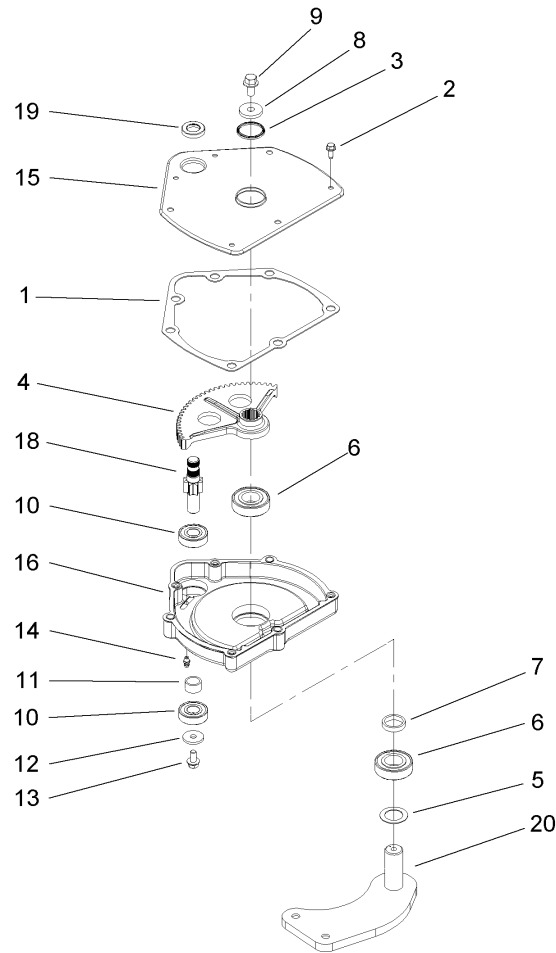


Steering Gearbox Assembly No. 99-7660

Ref	Part No.	Qty.	Description				
1	94-2135	1	Gasket				
2	32144-10	4	Screw-HWH				
3	103118	1	Seal				
4	99-7843	1	Sector-Gear				
5	3256-42	1	Washer-Flat				
6	251-82	2	Bearing-Ball				
7	94-2218	1	Spacer-Shaft, Output				
8	104-6563	1	Washer-Stepped				
9	104-7156	1	Screw-HHF				
10	38-7820	2	Bearing-Ball				
11	94-2217	1	Spacer-Shaft, Input				
12	1-613235	1	Washer				
13	98-3498	1	Screw-HH				
14	302-5	1	Fitting-Grease				
15	99-7656-03	1	Cover-Housing, Steering				
16	99-7658	1	Housing-Steering				
18	99-7650	1	Gear-Pinion				
19	99-7657	1	Seal-Oil				
20	99-7601-03	1	Arm-Pitman				

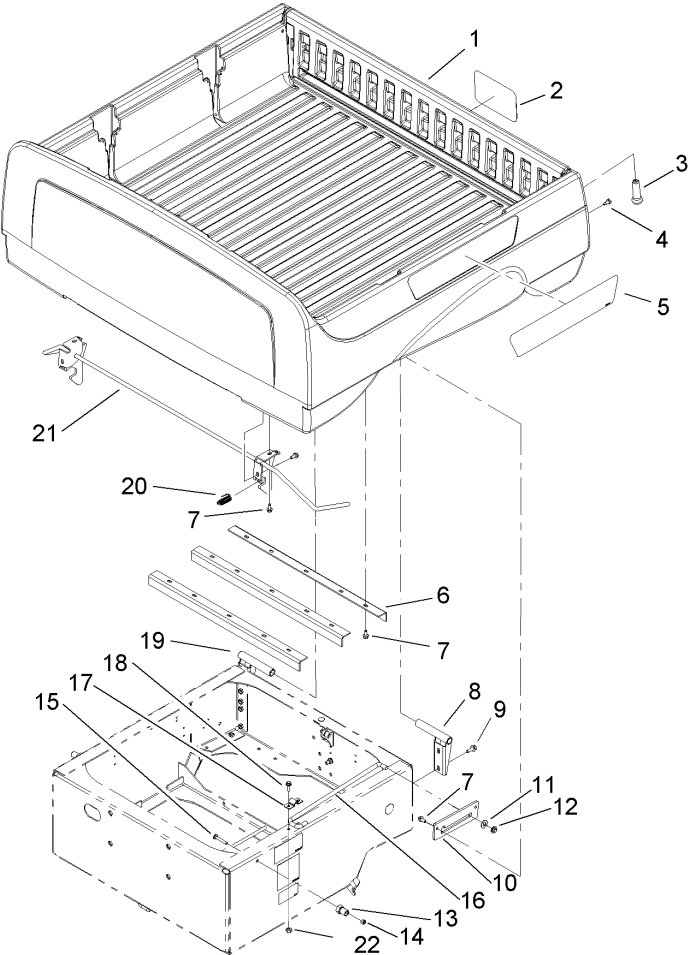

Box and Tailgate Installation Assembly

Ref	Part No.	Qty.	Description				
1		1	Box And Tailgate ASM				
2	104-7213	1	Decal				
3	99-7984	2	Knob-Soft Grip, Push-On				
4	87-8460	2	Bumper-Rubber				
5	104-7265	2	Decal				
6	99-7864-03	3	Brace-Box				
7	3234-5	18	Screw-HHF				
8	99-7308-03	1	LH Pivot Bracket ASM				
9	3234-11	4	Screw-HHF				
10	99-7894	1	Bracket-Rod, Prop				
11	3256-26	1	Washer-Flat				
12	32112-14	1	Nut-Push				
13	104-7248	2	Pin-Latch				
14	3296-29	2	Nut-Lock, NI				
15	3230-7	2	Screw-CARR				
16	99-7895	1	Rod-Prop				
17	99-7896	1	Bracket-U, Prop Rod				
18	3234-17	2	Screw-HHF				
19	99-7309-03	1	RH Pivot Bracket ASM				
20	5-7290	2	Spring-Tension				
21	104-7244	1	Rod-Latch				
22	104-8300	2	Nut-Flange, NI				

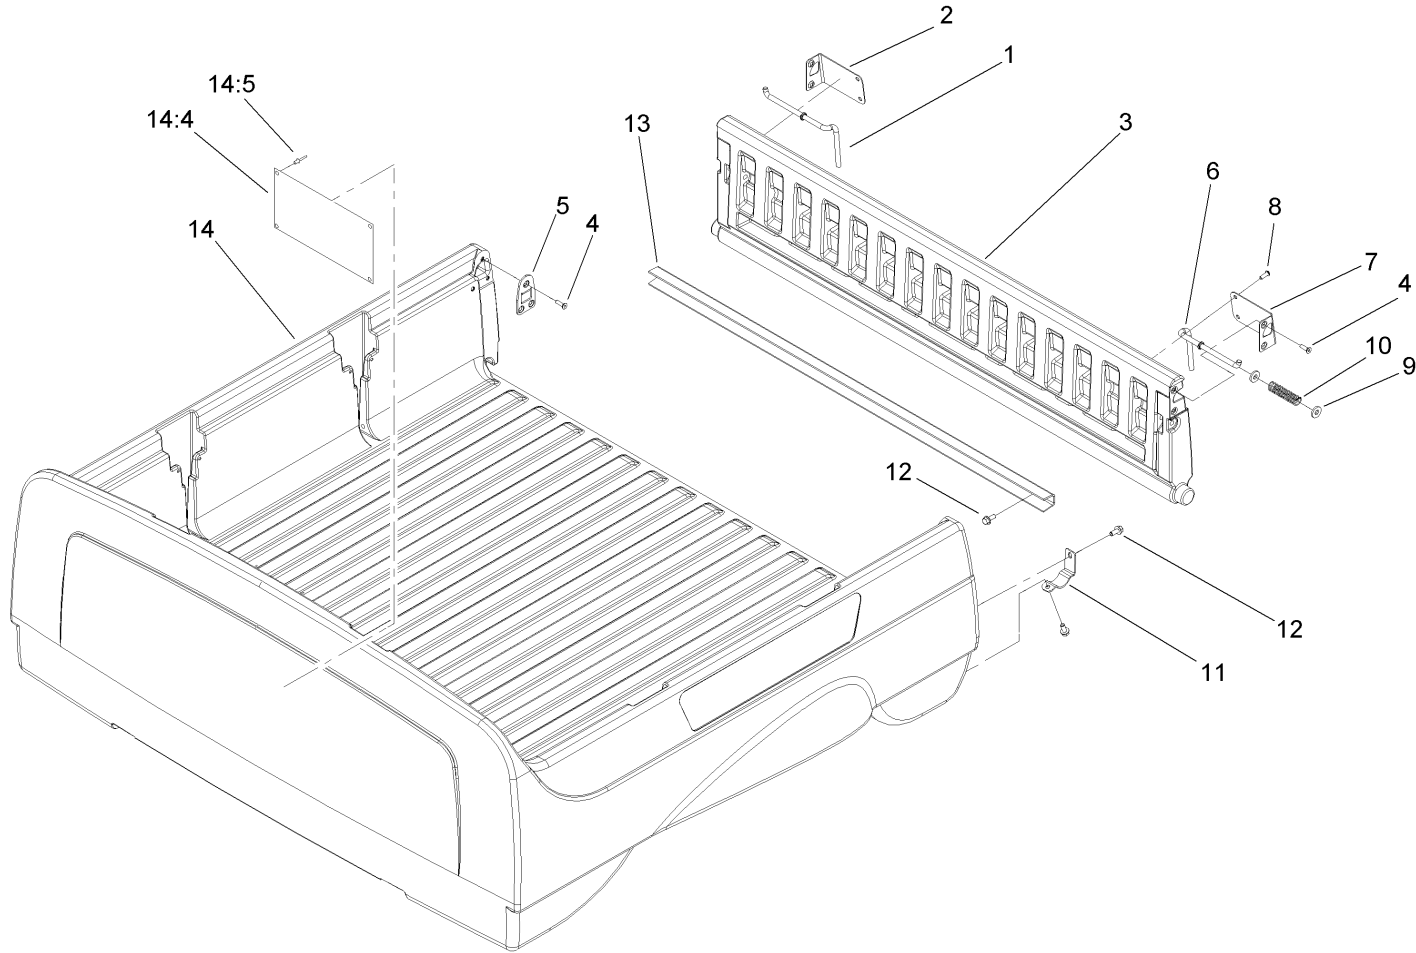

Box and Tailgate Assembly

Ref	Part No.	Qty.	Description				
1	99-7860	1	Rod-Latch, Right				
2	99-7858	1	Bracket-Tailgate Latch, Right				
3	99-7893	1	Tailgate ASM				
4	99-7334	10	Screw				
5	99-7852	2	Plate-Striker				
6	99-7859	1	Rod-Latch, Left				
7	99-7857	1	Bracket-Tailgate Latch, Left				
8	99-7335	4	Screw				
9	99-7861	4	Washer-Latch				
10	61-8880	2	Spring				
11	99-7286	2	Bracket-Pivot, Tailgate				
12	3234-5	10	Screw-HHF				
13	99-7867	1	Channel-Tailgate				
14	104-7203	1	Box ASM				
14:4	99-7954	1	Decal-No Riders				
14:5	3290-415	4	Rivet				

Attachments and Accessories

For 07288TC - Workman e2065 Utility Vehicle

Product Name	Model/Part
Stand Alone Windshield Kit	07221
Rear Lift Kit	07261
Electric Bed Lift Kit	07263
Roll-Over Protection System	07276
Receiver Hitch Kit	07278
Heavy-Duty Bumper Kit	07282
12V Converter Kit	07289
Stake Side Kit	07290
Cab	07291
Folding Windshield Kit	07293
Windshield Kit	07294
Heavy-Duty Brushguard and Bumper Kit	07296
Canopy Kit	07297
Portable Refreshment Center	07298
Brake and Signal Light Kit	107-8020
Vinyl Enclosure	79979

