



G132 Rear-Engine Riding Mower

Model No. 70185 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Body and Decal Assembly	 3	Oil Filter, Tube and Pump Assembly Briggs and Stratton 31G777-0121-E1	 16
Seat and Rear Bag Assembly	 4	Crankcase Assembly Briggs and Stratton 31G777-0121-E1	 17
Front Axle and Steering Assembly	 5	Carburetor Assembly Briggs and Stratton 31G777-0121-E1	 18
Deck and Spindle Assembly	 6	Governor Assembly Briggs and Stratton 31G777-0121-E1	 19
Deck Suspension Assembly	 8	Blower Housing Assembly Briggs and Stratton 31G777-0121-E1	 20
Rear Wheel and Trasmission Assembly	 9	Starter Assembly Briggs and Stratton Model 31G777-0121-E1	 21
Engine and Fuel Tank Assembly	 10	Gasket Assembly Briggs and Stratton 31G777-0121-E1	 22
Gear Transmission and Linkage Assembly	 11	Carburetor Overhaul Kit Assembly Briggs and Stratton 31G777-0121-E1	 23
Electrical Component and Cable Assembly	 12		
Cylinder Assembly Briggs and Stratton 31G777-0121-E1	 13		
Cylinder Head Assembly Briggs and Stratton 31G777-0121-E1	 14		
Crankshaft Assembly Briggs and Stratton 31G777-0121-E1	 15		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- | | |
|---|---|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Included in Engine Gasket Set-Ref. 358. | ❹ Included in Valve Gasket Set-Ref. 1095. |
| ❺ Included in Carburetor Overhaul Kit-Ref. 121. | ❻ Included in Carburetor Gasket Set-Ref. 977. |
| ❼ Obtain from your local Briggs & Stratton dealer | |

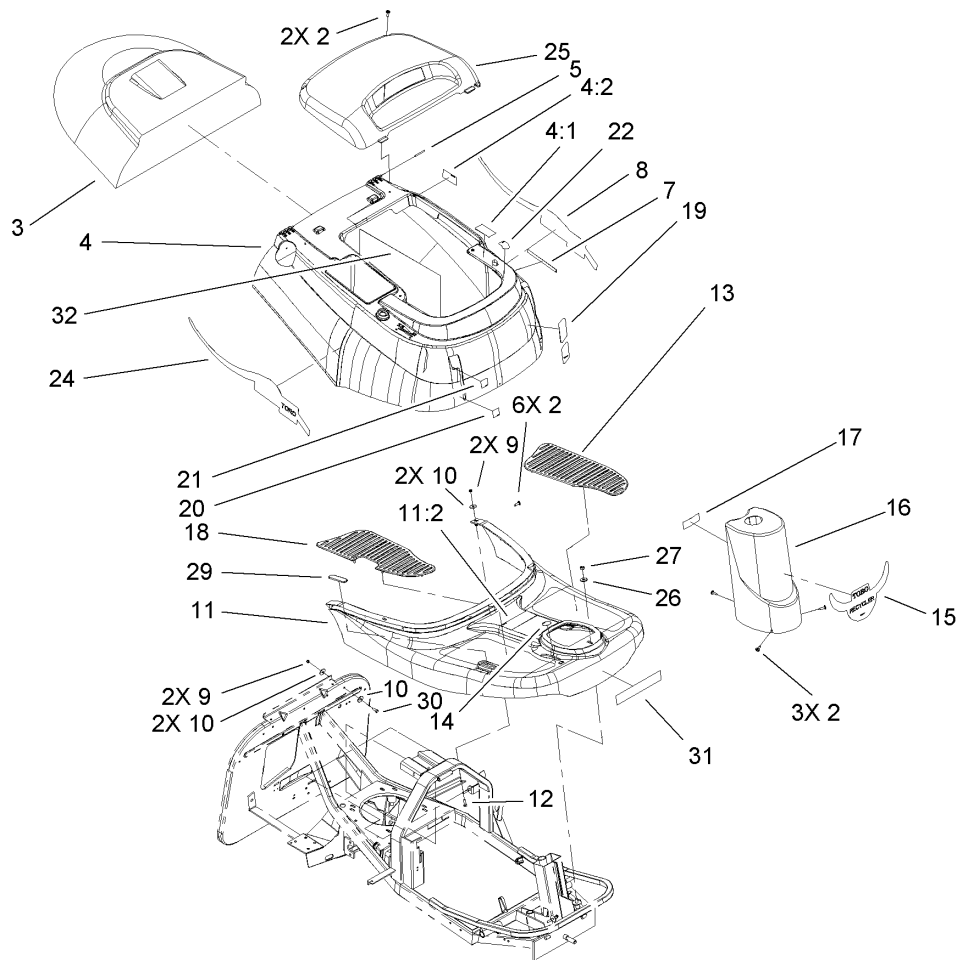


Body and Decal Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2	106-2851	11	Screw-HH, TAP	25	106-2860	1	Cover-Engine
3	106-1810	1	Cover-Grass Bag	26	106-2854	1	Washer-Flat
4	106-2885	1	Shroud And Decal ASM	27	46-0330	1	Nut-Lock
24:1		1	Decal-Danger	29	106-2987	1	Cover
24:2		1	Decal-Warning, Hot	30	33113-016	2	Screw-HH
5	106-2870	2	Pin-Dowel	31	106-6525	1	Decal
27		1	Decal-Shift	32	107-2228	1	Insulation
8	107-8978	1	Decal	99	106-2887	1	Decal Kit
9	49-7810	4	Nut-Lock				
10	106-2853	5	Washer-Flat				
11	106-2901	1	Foot Rest And Decal ASM				
211:2		1	Decal-Caution				
12	33113-020	2	Screw-HH				
13	106-2973	1	Floormat-LH				
214		1	Decal-Clutch, Intl Rer				
15	106-6517	1	Decal-Front				
16	106-2906	1	Steering-Turret				
217		1	Decal-Run Lights				
18	106-2972	1	Floormat-RH				
219		1	Decal-HOC				
220		1	Decal-PTO, Disengage				
221		1	Decal-PTO, Engage				
222		1	Decal-Switch				
24	107-8979	1	Decal				

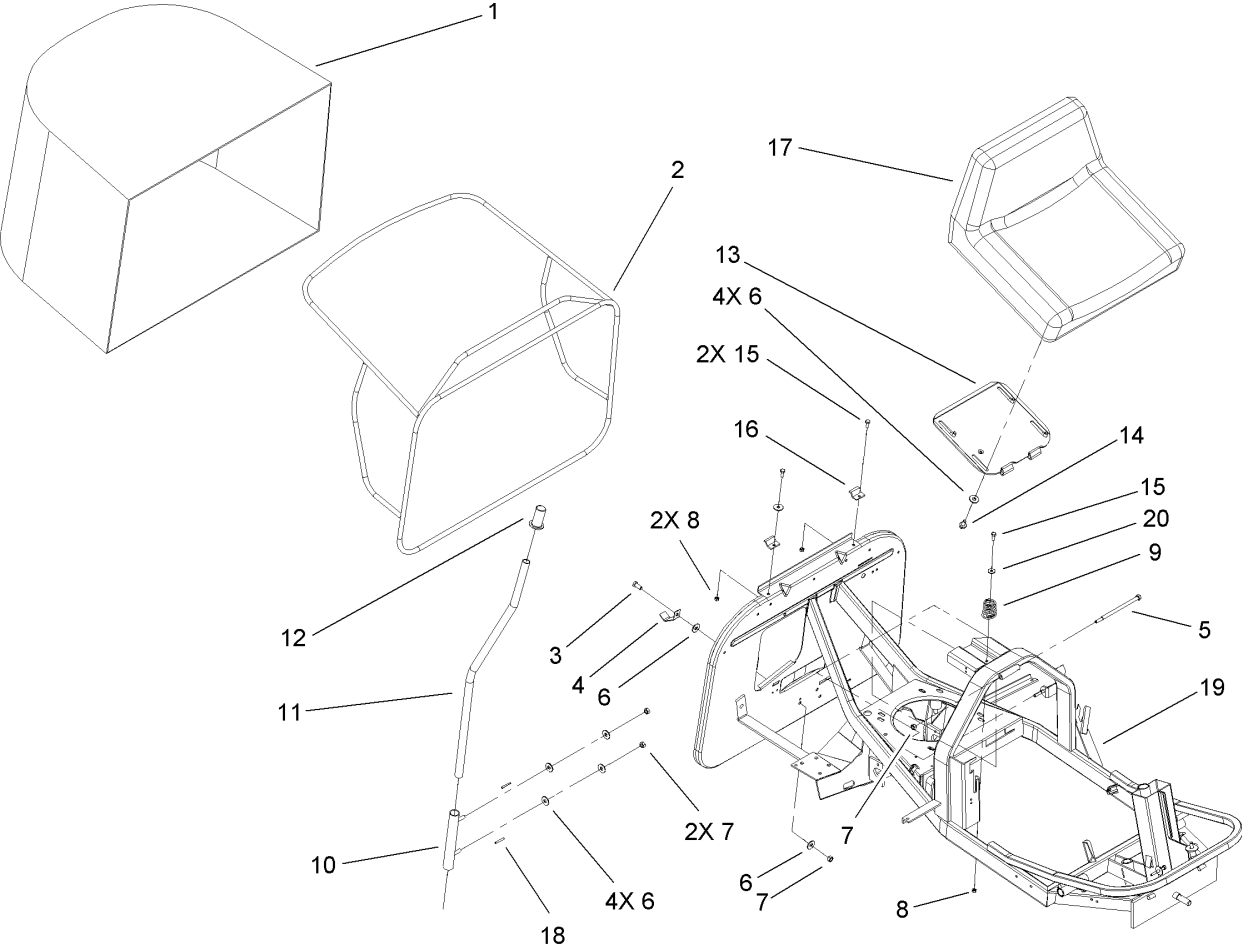 

Seat and Rear Bag Assembly


Ref	Part No.	Qty.	Description				
1	106-2867	1	Bag-Grass				
2	106-2924	1	Frame-Bag				
3	33114-020	1	Screw-HH				
4	106-2969	1	Hook-Bag				
5	106-1844	1	Screw-HH				
6	106-2854	10	Washer-Flat				
7	46-0330	4	Nut-Lock				
8	49-7810	3	Nut-Lock				
9	106-2945	1	Spring-Compression				
10	106-2927	1	Support				
11	106-2928	1	Lever				
12	106-2903	1	Knob				
13	106-2944	1	Plate-Seat				
14	33104-016	4	Screw-HHF				
15	33113-016	3	Screw-HH				
16	106-2929	2	Clip				
17	106-2857	1	Seat				
18	106-2871	2	Pin-Spring				
19	107-2238	1	Frame				
20	106-2865	3	Washer-Flat				

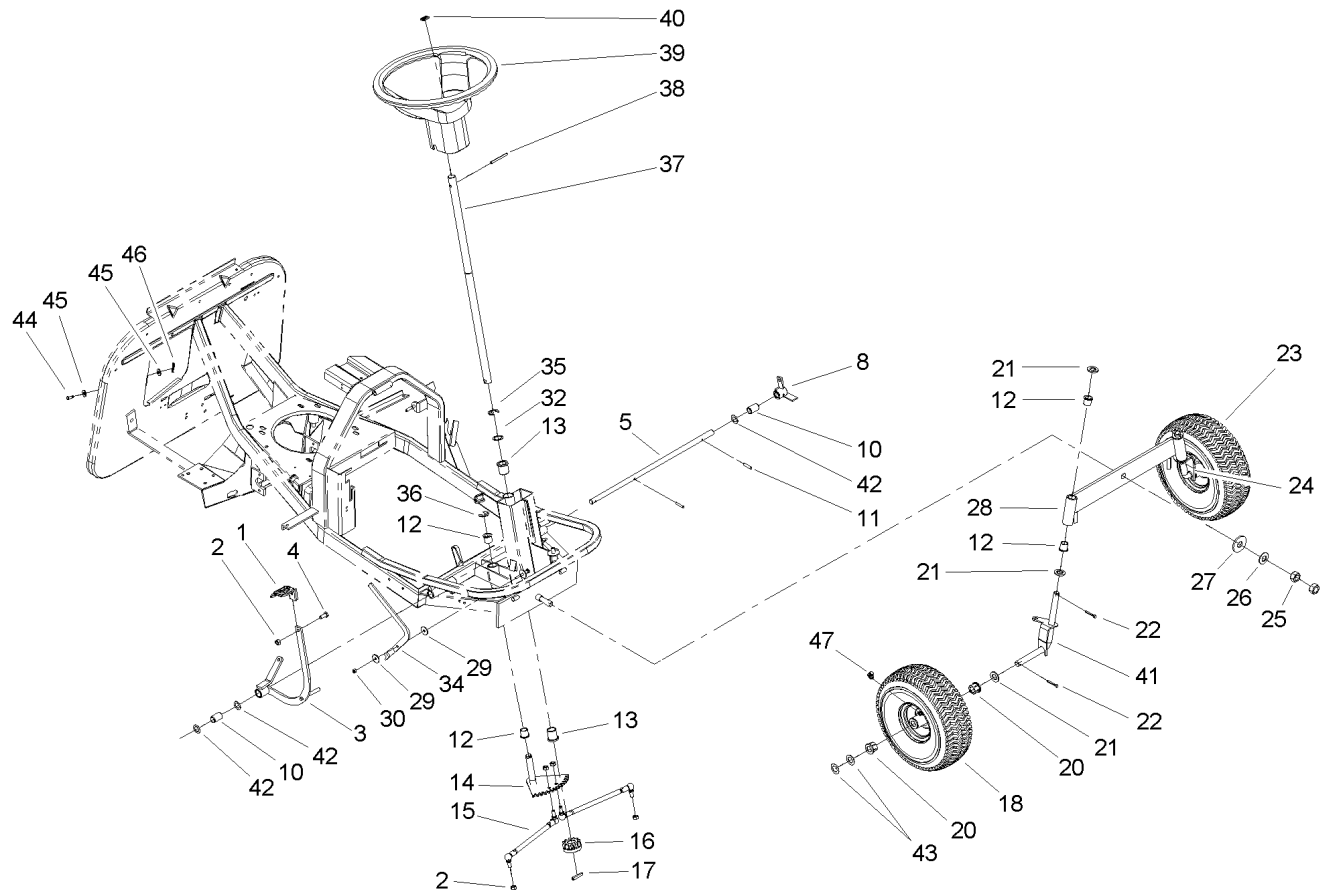 

Front Axle and Steering Assembly

Ref	Part No.	Qty.	Description
1	106-2957	1	Pedal-Brake
2	46-0330	5	Nut-Lock
3	106-2965	1	Lever-Brake
4	33114-020	1	Screw-HH
5	106-2985	1	Shaft
8	106-2978	1	Bushing
10	106-2962	2	Bushing
11	106-2874	2	Pin-Dowel
12	106-1811	6	Bushing
13	106-2873	2	Bushing
14	106-2868	1	Rack-Steering
15	106-2933	2	Rod-Tie
16	106-2878	1	Gear-Steering
17	106-1845	1	Pin-Spiral
18	106-2951	2	Wheel
20	106-6508	4	Bushing
21	33098-00	4	Washer-Flat
22	3272-21	4	Pin-Cotter
23	106-2907	2	Tire
24	106-2953	1	Axle-Wheel, LH
25	33018-00	2	Nut-Hex
26	106-2926	1	Washer-Bell
27	106-2925	1	Washer-Flat
28	106-2864	1	Axle-Front


Ref	Part No.	Qty.	Description
29	106-2853	2	Washer-Flat
30	49-7810	1	Nut-Lock
32	106-1807	1	Spacer
34	106-2961	1	Lever
35	106-2909	1	Ring-Retaining, EXT
36	106-2908	1	Ring-Retaining, EXT
37	106-2872	1	Shaft-Steering
38	106-1846	1	Pin-Roll
39	106-2883	1	Wheel-Steering
40	98-1459	1	Decal
41	106-2952	1	Axle-Wheel, RH
42	106-1835	3	Spacer
43	106-6544	4	Washer
44	106-6543	1	Pin-Grooved
45	106-2865	2	Washer-Flat
46	106-2879	1	Pin-Hair
47	106-6546	2	Zerk-Grease 90 DEG

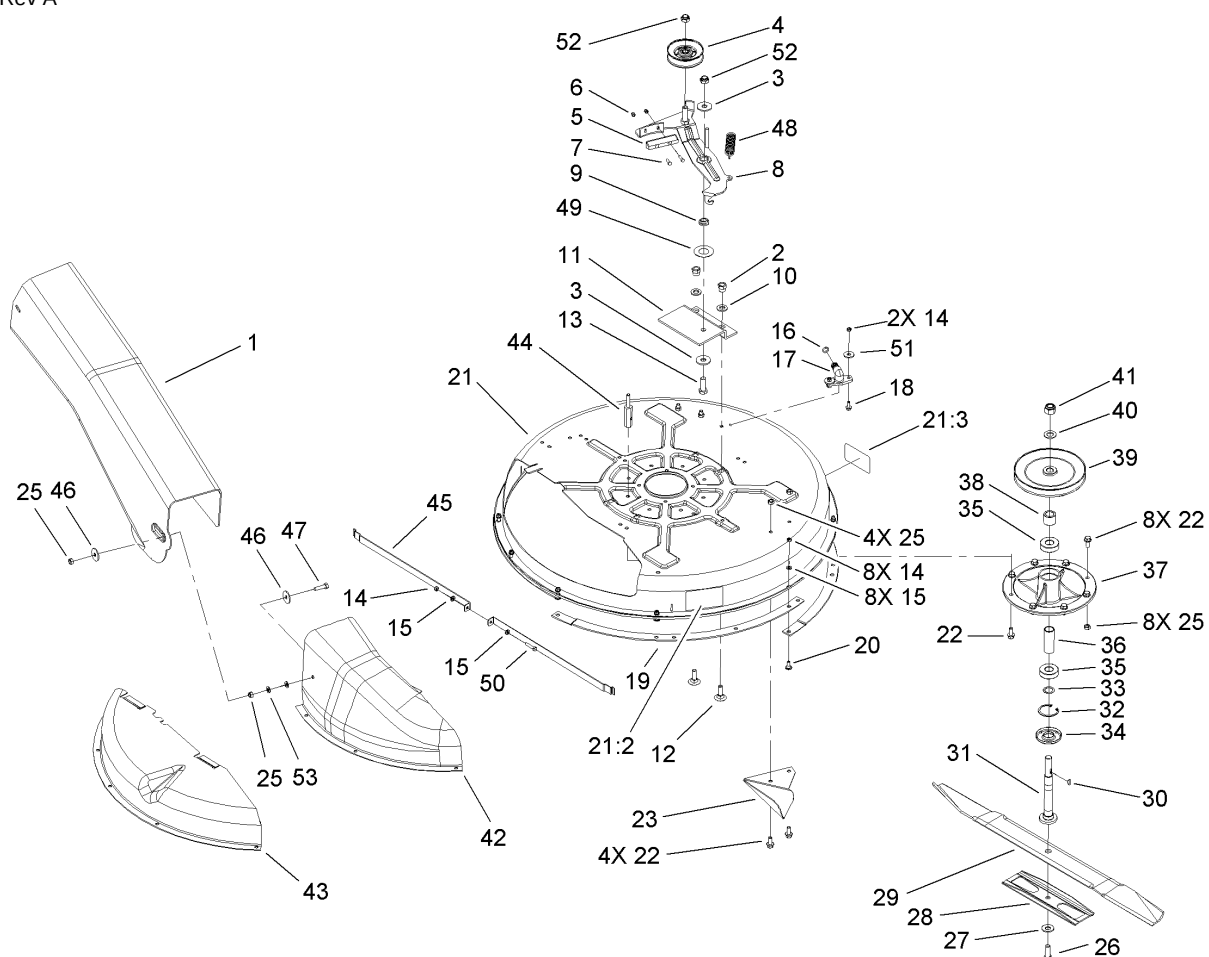 

Deck and Spindle Assembly

Ref	Part No.	Qty.	Description
1	106-2970	1	Tube-Discharge
2	46-0090	2	Nut-Lock
3	106-2922	2	Washer-Flat
4	106-1813	1	Pulley-Idler
5	106-1814	1	Brake-Rubber
6	46-0410	2	Nut-Lock
7	60-6910	2	Screw
8	106-2889	1	Brake ASM
9	106-2892	1	Bushing
10	33096-00	2	Washer-Flat
11	106-2884	1	Bracket-Deck
12	33126-035	2	Screw-CARR
13	33116-035	1	Screw-HH
14	49-7810	11	Nut-Lock
15	33093-00	10	Washer-Flat
16	106-1847	1	O-Ring
17	95-2747	1	Fitting-Washout
18	33103-016	2	Screw-HHF
19	80-4490	4	Ring-Deck
20	106-6510	8	Screw-Sh
21	106-6545	1	Deck ASM
21:2	106-2940	1	Decal-Caution
21:3	106-2943	1	Decal-Discharge Cover
22	33104-020	13	Screw-HHF


Ref	Part No.	Qty.	Description
23	80-2630	2	Kicker
25	46-0330	13	Nut-Lock
26	3212-5	1	Screw-HH
27	106-2858	1	Washer-Bell
28	80-4570	1	Stiffener
29	106-6547	1	Blade-Recycler
30	106-1805	1	Key
31	106-2902	1	Shaft-Spindle
32	106-2910	1	Ring-Snap
33	106-1807	1	Spacer
34	80-4370	1	Shield-Bearing
35	251-297	2	Bearing-Ball
36	106-2888	1	Spacer
37	56-7030	1	Spindle
38	106-1842	1	Spacer
39	106-1812	1	Pulley
40	33098-00	1	Washer-Flat
41	106-2914	1	Nut-Hex
42	106-2898	1	Tunnel-Discharge
43	106-2899	1	Cover-Recycler
44	106-2897	1	Guide-Belt
45	106-6542	2	Strap-Deck
46	106-2855	2	Washer-Flat
47	33114-030	1	Screw-HH

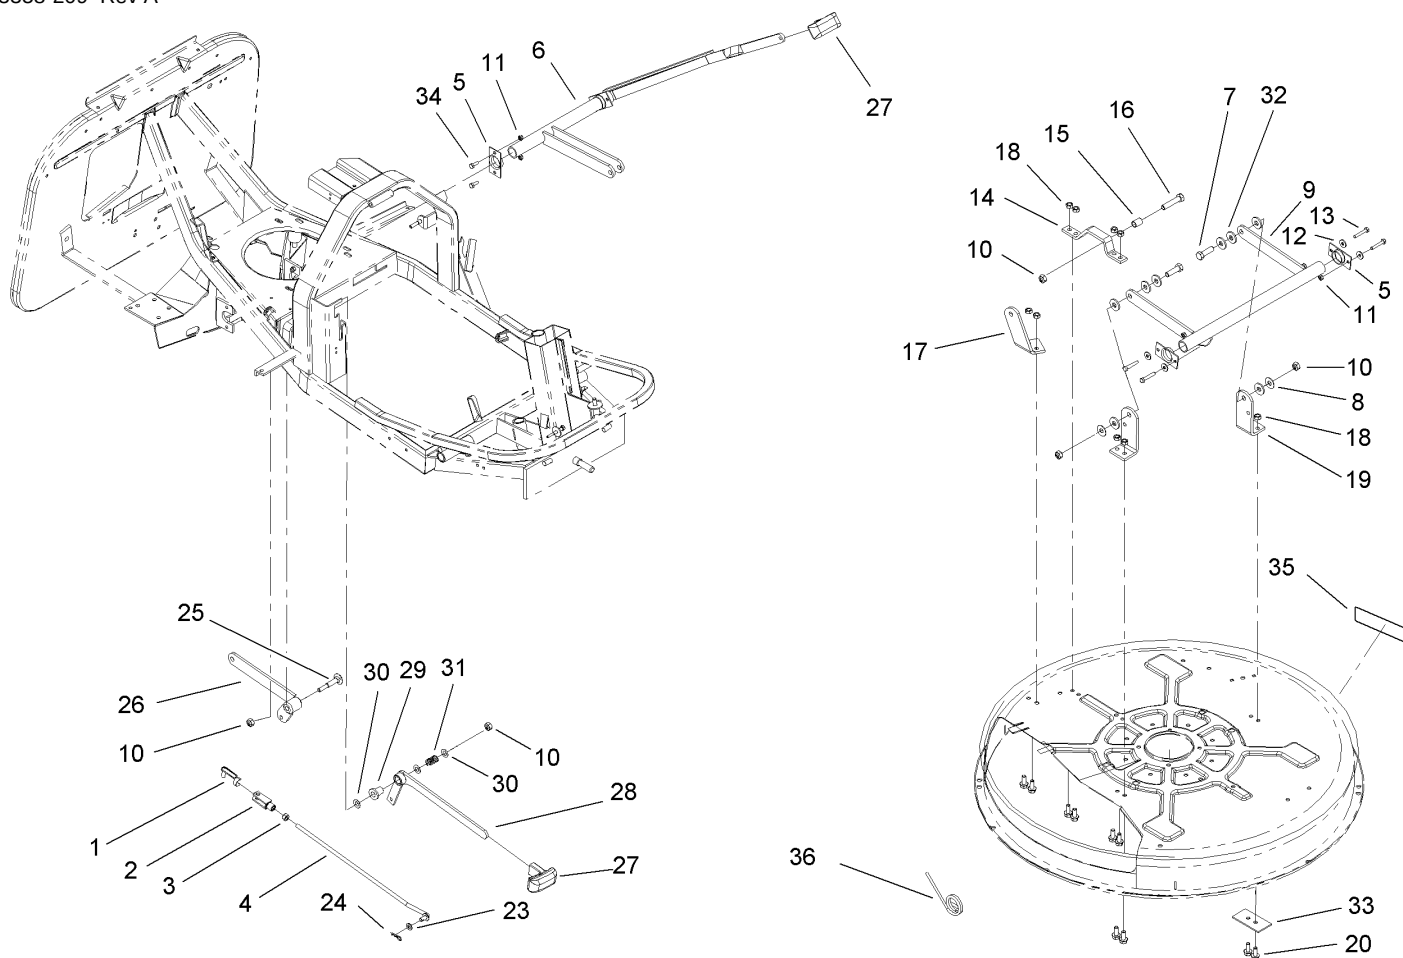 

Deck Suspension Assembly


Ref	Part No.	Qty.	Description
1	106-1809	1	Retainer-Yoke
2	106-1803	1	Yoke
3	33014-00	1	Nut-Hex
4	106-2937	1	Rod-Tie
5	106-2880	3	Bracket-Support
6	107-8942	1	Lever-Lift
7	33115-035	3	Screw-HH
8	106-6511	6	Washer-Flat
9	106-1829	1	Hanger Deck ASM
10	33025-00	6	Nut-Lock
11	49-7810	8	Nut-Lock
12	106-2865	4	Washer-Flat
13	33113-035	4	Screw-HH
14	106-2895	1	Bracket-Deck
15	106-2912	1	Bushing
16	33115-050	1	Screw-HH
17	106-2894	1	Bracket-Deck
18	46-0330	6	Nut-Lock
19	106-2896	2	Bracket-Deck
20	33104-020	6	Screw-HHF
23	33094-00	1	Washer-Plain
24	106-2879	1	Pin-Hair
25	106-2882	1	Screw-CARR
26	106-1830	1	Hanger Deck ASM

Ref	Part No.	Qty.	Description
27	106-2967	2	Handle
28	106-2954	1	Lever-Blade, Clutch
29	106-2955	1	Bushing
30	106-2869	3	Shim
31	106-2950	1	Spring-Compression
32	106-1806	9	Washer
33	106-6512	1	Plate
34	33113-016	4	Screw-HH
35	106-6406	1	Decal-Recycler
36	107-2229	1	Spring-Lift, Deck

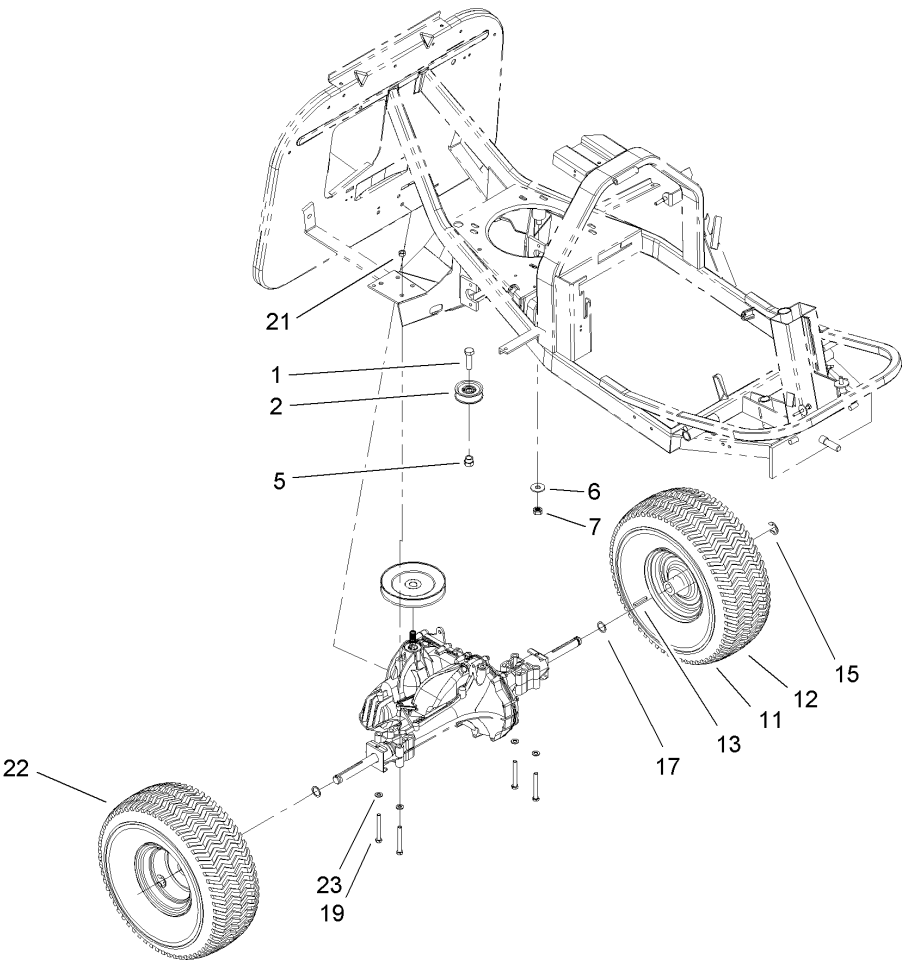 

Rear Wheel and Trasmission Assembly


Ref	Part No.	Qty.	Description				
1	33116-035	1	Screw-HH				
2	106-2877	1	Pulley ASM				
5	106-6513	1	Nut-Lock				
6	106-2921	1	Washer-Flat				
7	33025-00	1	Nut-Lock				
11	106-2948	1	Wheel-LH				
12	106-2913	2	Tire				
13	106-2994	2	Key-Square				
15	106-2909	2	Ring-Retaining, EXT				
17	106-2992	2	Washer-Flat				
19	33114-060	4	Screw-HH				
21	46-0330	4	Nut-Lock				
22	106-2947	1	Wheel-RH				
23	33094-00	4	Washer-Plain				

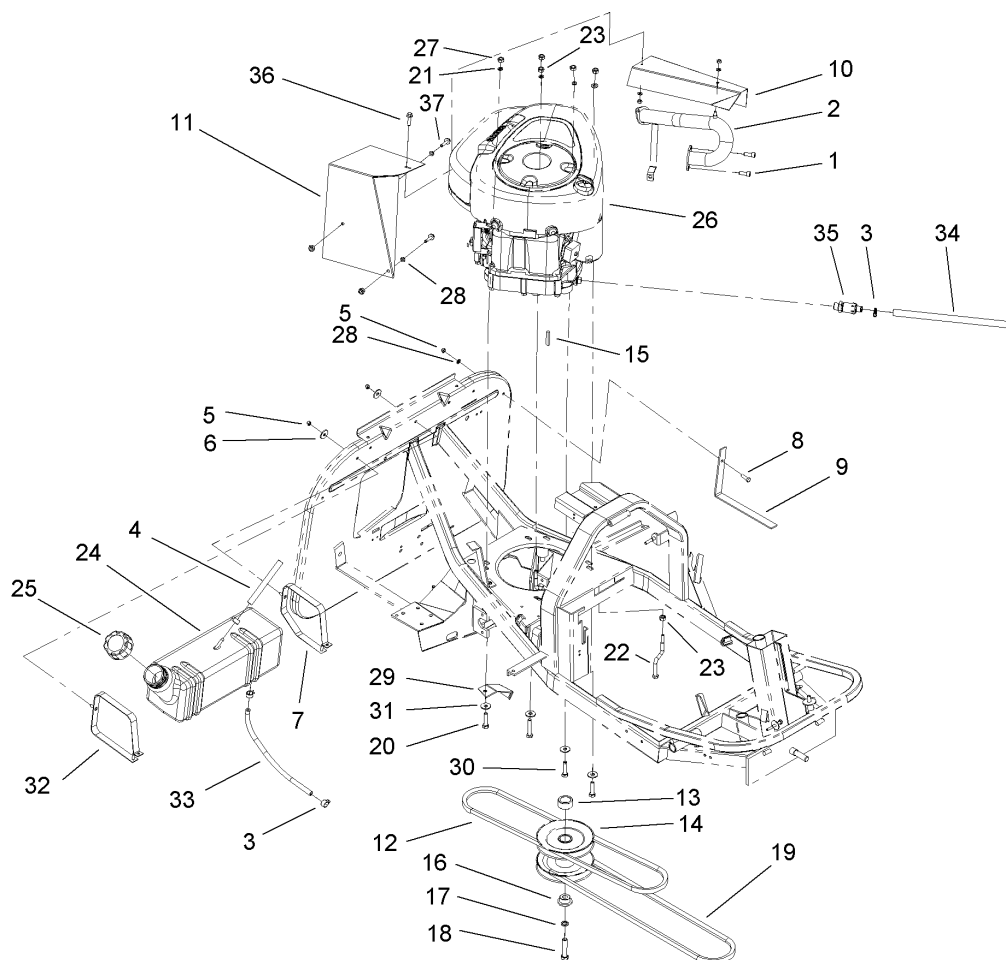 

Engine and Fuel Tank Assembly


Ref	Part No.	Qty.	Description
1	3274-10	2	Screw-HSH
2	107-2233	1	Pipe-Exhaust
3	107-2210	4	Clamp-Tube
4	106-2990	1	Hose-Fuel
5	49-7810	8	Nut-Lock
6	106-2853	2	Washer-Flat
7	106-6541	1	Strap-Fuel Tank, Left
8	33113-020	1	Screw-HH
9	106-1828	1	Guard-Muffler
10	107-2235	1	Shield-Pipe, Exhaust
11	107-2234	1	Shield-Muffler, Rear
12	106-2905	1	Belt
13	106-1836	1	Spacer
14	106-2915	1	Pulley
15	67-7490	1	Key-Square
16	106-1837	1	Spacer
17	106-2856	1	Washer-Lock
18	3212-8	1	Screw-HH
19	106-1826	1	Belt-Deck
20	33114-035	3	Screw-HH
21	33094-00	4	Washer-Plain
22	106-2974	2	Guide-Belt
23	33014-00	2	Nut-Hex
24	106-6537	1	Tank-Fuel

Ref	Part No.	Qty.	Description
25	55-3576	1	Gas Cap ASM
26		1	Engine-Briggs And Stratton, 31G777-0121-E1
27	46-0330	4	Nut-Lock
28	33093-00	3	Washer-Flat
29	107-2239	1	Bracket, Drive Belt
30	33114-045	1	Screw-HH
31	106-2854	4	Washer-Flat
32	106-6540	1	Strap-Fuel Tank, Rt
33	107-1555	1	Hose-Fuel
34	107-2241	1	Tube-Drain, Oil
35	92-6877	1	Valve-Drain, Oil
36	33103-025	1	Screw-HHF
37	33103-030	2	Screw-HHF

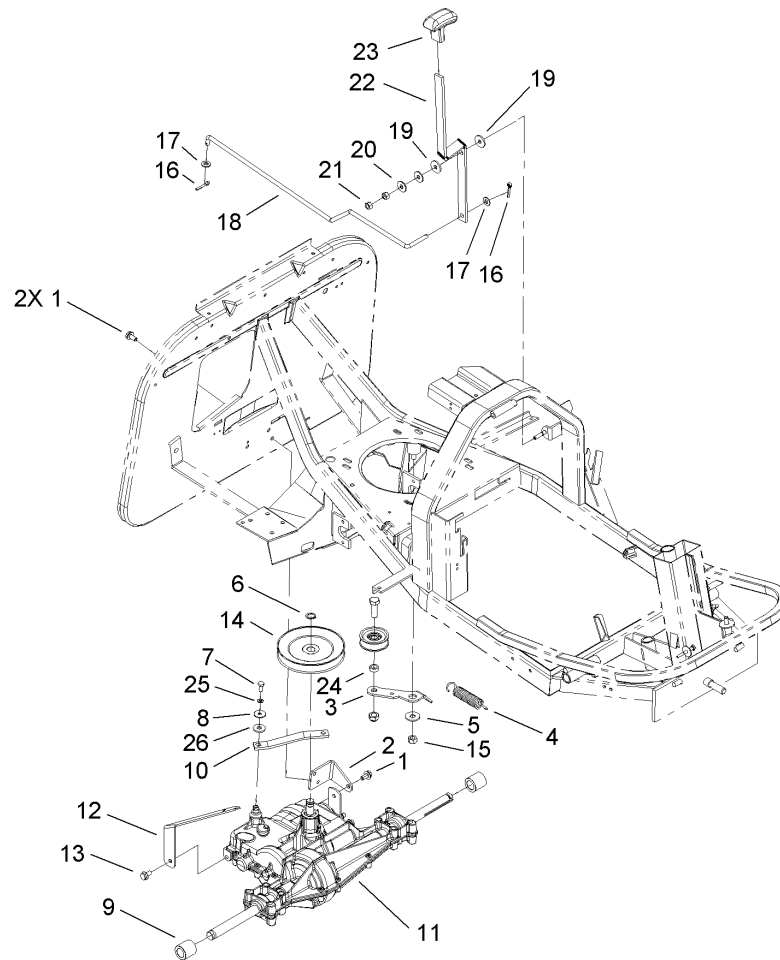 

Gear Transmission and Linkage Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-6516	3	Screw-HHF TAP	25	106-6506	1	Washer-Lock/Sp
2	106-2979	1	Bracket	26	106-6514	1	Washer-Flat
3	106-2938	1	Bracket-Idler				
4	106-2936	1	Spring-Extension				
5	106-2921	1	Washer-Flat				
6	106-2862	1	Ring-External				
7	321-3	1	Screw-HH				
8	106-2853	1	Washer-Flat				
9	114-3121	2	Sleeve-Transmission, Dana				
10	106-2976	1	Bracket				
11	110-8649	1	Differential-Gear				
12	114-3123	1	Plate-Switch, Transmission Dana				
13	106-6516	1	Screw-HHF TAP				
14	106-2932	1	Pulley				
15	33025-00	1	Nut-Lock				
16	3272-21	2	Pin-Cotter				
17	33094-00	2	Washer-Plain				
18	114-3122	1	Link-Transmission, Dana				
19	106-2975	2	Washer				
20	106-2854	2	Washer-Flat				
21	33014-00	2	Nut-Hex				
22	106-2935	1	Lever-Clutch				
23	106-2967	1	Handle				
24	106-2986	1	Spacer				

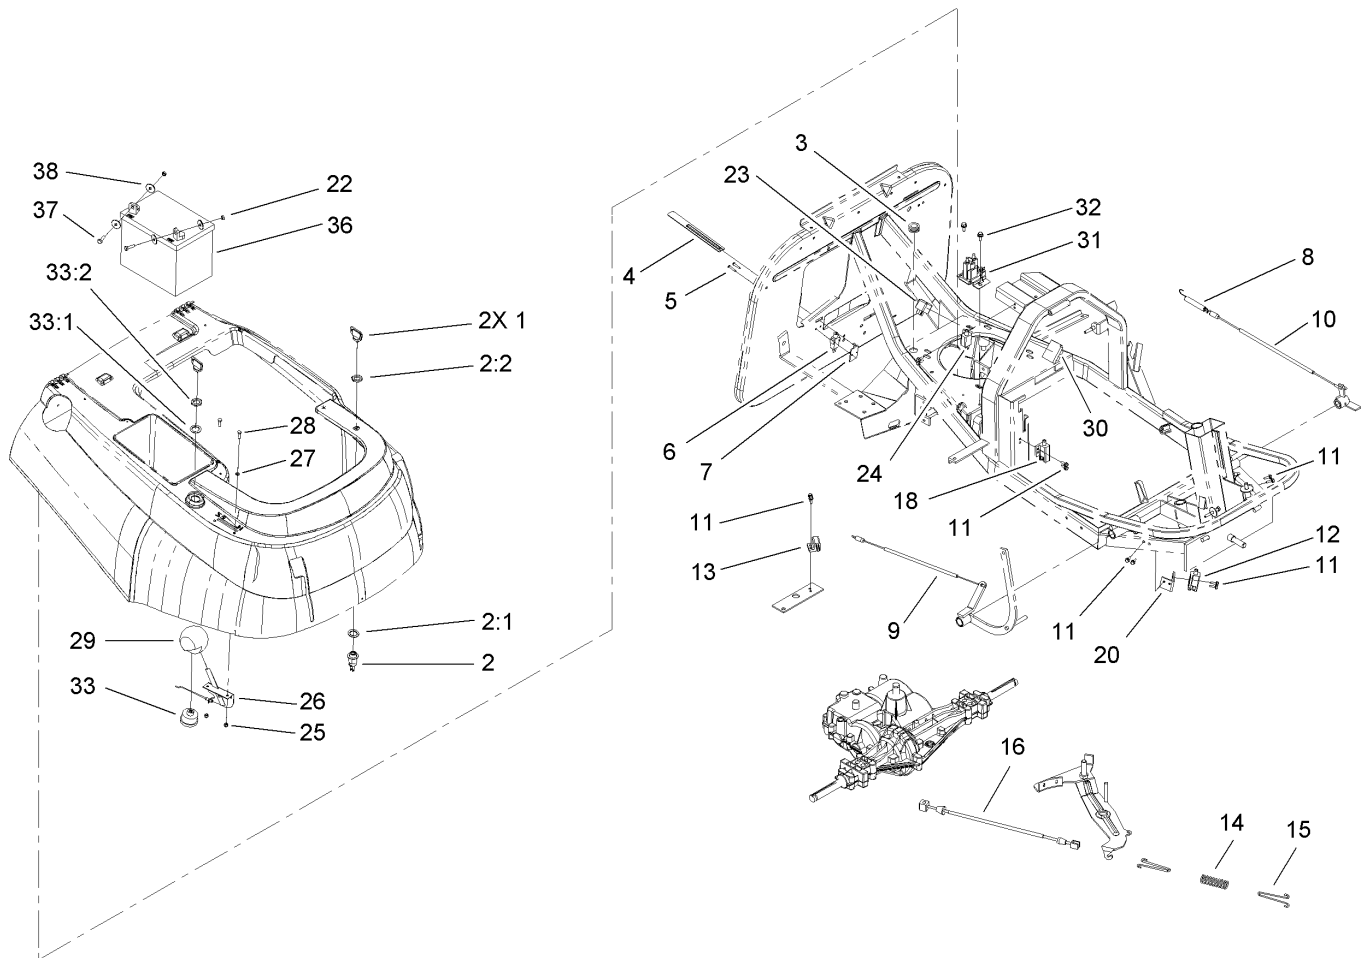 

Electrical Component and Cable Assembly

Ref	Part No.	Qty.	Description
1	63-8360	2	Key-Ignition
2	46-5780	1	Switch-Starter
2:1	3254-5	1	Washer-Tooth
2:2	218-461	1	Nut-HH
3	106-2863	1	Grommet
4	106-1831	1	Lever-Bag Fill
5	106-2850	2	Screw
6	106-1843	1	Switch
7	106-1827	1	Clamp-Bag Fill
8	106-2981	1	Spring-Extension
9	106-2983	1	Cable
10	106-2982	1	Cable
11	106-1849	16	Screw-HH TAP
12	65-7410	1	Switch-Pole, Single
13	106-2998	1	Switch
14	106-2917	1	Spring-Compression
15	106-2918	2	Hook-Spring
16	106-2956	1	Cable
18	86-4690	1	Switch-Interlock
20	106-1816	1	Bracket-Switch
22	33013-00	2	Nut-Hex
23	98-7249	1	Relay
24	65-7410	1	Switch-Pole, Single
25	46-0410	2	Nut-Lock

Ref	Part No.	Qty.	Description
26	106-2916	1	Throttle Cable ASM
27	52-6430	2	Washer
28	60-6910	2	Screw
29	106-2989	1	Knob
30	99-3700	1	Module
31	47-1910	1	Solenoid
32	106-2852	2	Screw-HHF TAP
33	88-9830	1	Key Switch ASM
33:1	3254-5	1	Washer-Tooth
33:2	218-461	1	Nut-HH
36	104-1755	1	Battery
37	33113-020	2	Screw-HH
38	106-2853	4	Washer-Flat
99	108-8715	1	Harness-Wiring

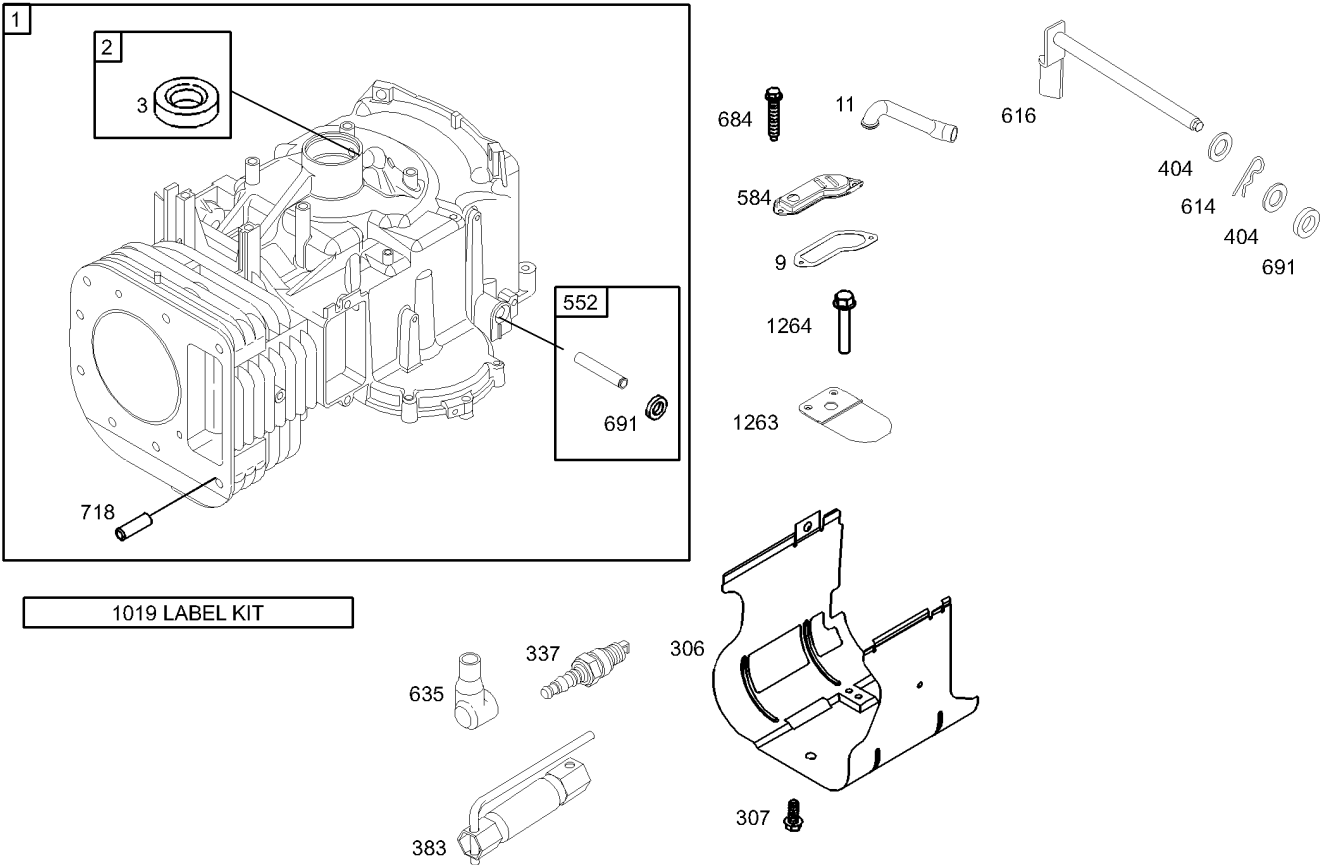 


Assemblies include all parts shown in frames.

Cylinder Assembly

Briggs and Stratton 31G777-0121-E1

Ref	Part No.	Qty.	Description				
1	697174	1	Cylinder ASM				
2	399265	1	Bushing / Seal Kit				
3	391086	1	Seal-Oil				
4	697109	1	Gasket-Breather				
5	697113	1	Tube-Breather				
6	697762	1	Short Block ASM				
7	697107	1	Shield-Cylinder				
8	691003	1	Screw				
9	691043	1	Spark Plug				
10	89838	1	Wrench-Plug, Spark				
11	691691	1	Washer				
12	697144	1	Bushing-Crank, Governor				
13	697112	1	Cover-Passage, Breather				
14	691620	1	Pin-Cotter				
15	692012	1	Crank-Governor				
16	691909	1	Boot-Plug, Spark				
17	697157	1	Screw				
18	692407	1	Seal-Shaft, Governor				
19	690959	1	Pin-Locating				
20	697143	1	Label Kit				
21	697124	1	Reed-Breather				
22	697104	1	Screw				

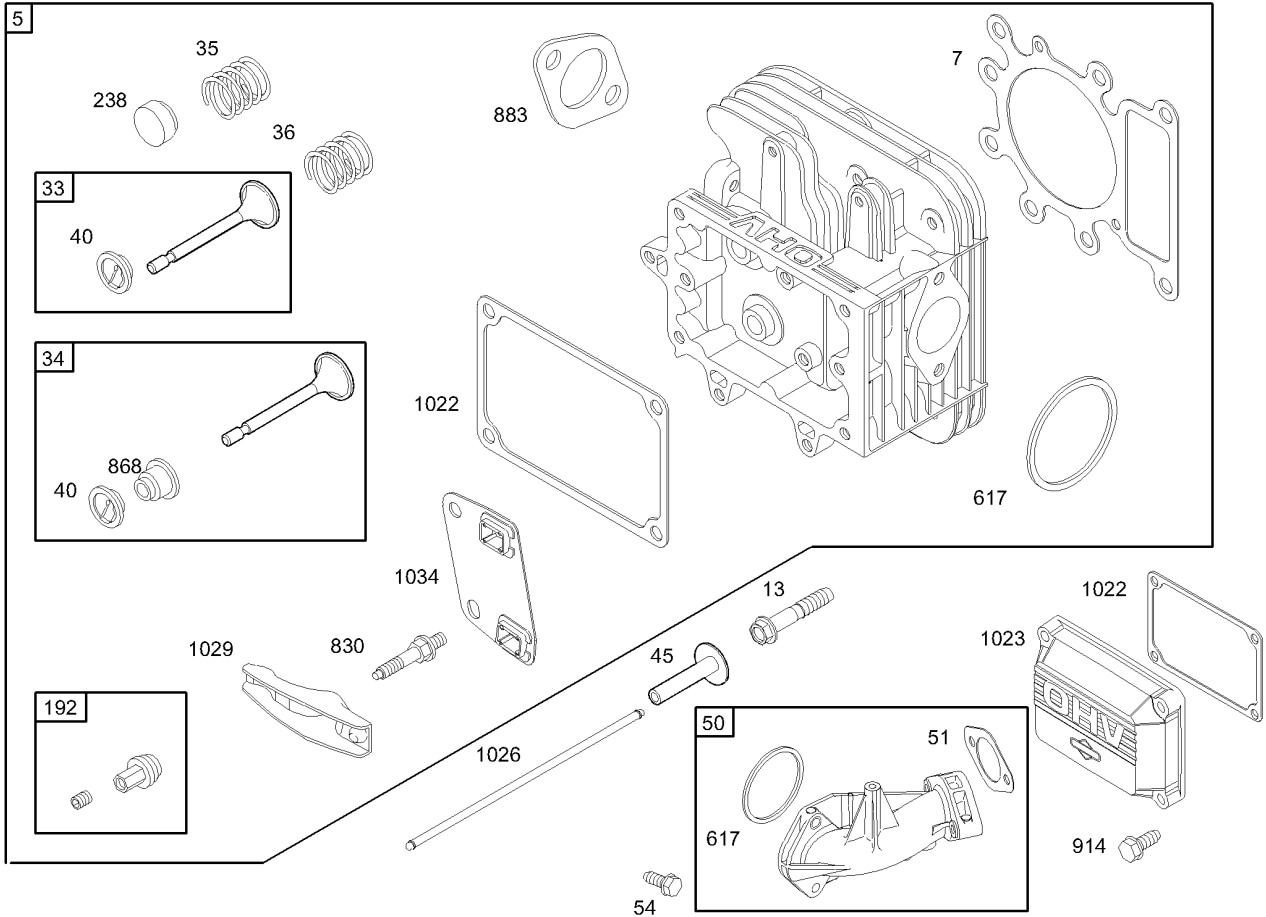 


Cylinder Head Assembly

Briggs and Stratton 31G777-0121-E1

Ref	Part No.	Qty.	Description
75	698147	1	Head-Cylinder
347	692410	1	Gasket-Cylinder Head
7			
713	690360	1	Screw
733	695760	1	Valve-Exhaust
734	695761	1	Valve-Intake
735	691279	1	Spring-Valve
736	691279	1	Spring-Valve
740	691752	1	Retainer-Valve
745	690564	1	Tappet-Valve
750	690193	1	Manifold-Intake
3451	692137	1	Gasket-Intake
56			
754	691148	1	Screw
7192	691986	1	Adjustor-Arm, Rocker
7238	691843	1	Cap-Valve
35617	692138	1	Seal
7			
7830	691095	1	Stud-Arm, Rocker
34868	690968	1	Seal-Valve
7			
7883	692236	1	Gasket-Exhaust
7914	690960	1	Screw
371022	272475	1	Gasket-Cover, Rocker
71023	692492	1	Cover-Rocker

Ref	Part No.	Qty.	Description
71026	692003	1	Rod-Push
7	692011	1	Rod-Push
71029	691751	1	Arm-Rocker
71034	690822	1	Guide-Rod, Push

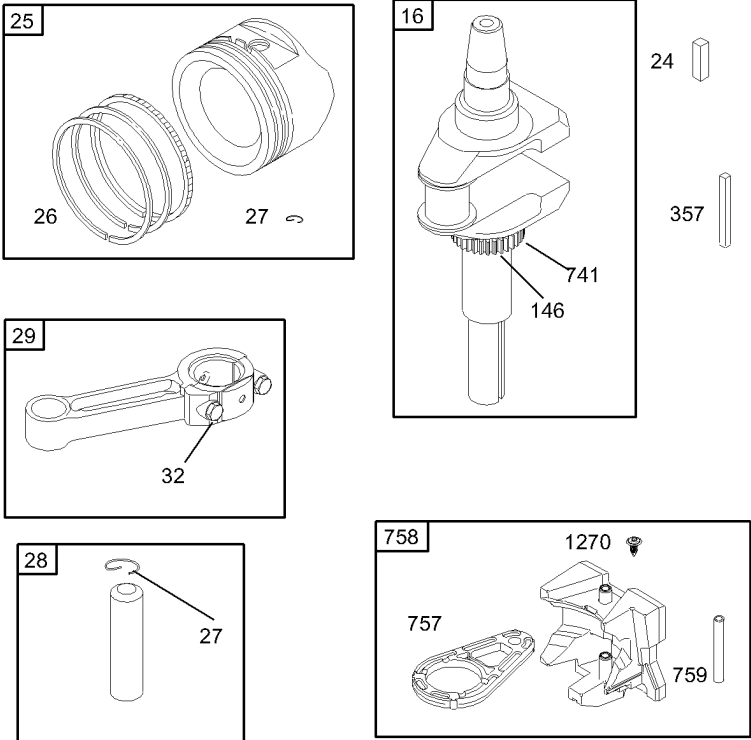 


Assemblies include all parts shown in frames.

Crankshaft Assembly

Briggs and Stratton 31G777-0121-E1

Ref	Part No.	Qty.	Description				
16	697127	1	Crankshaft				
24	222698	1	Key				
25	697159	1	Piston ASM (Standard)				
7	697160	1	Piston ASM (.010" Oversize)				
7	697162	1	Piston ASM (.020" Oversize)				
7	697163	1	Piston ASM (.030" Oversize)				
26	697164	1	Ring Set (Standard)				
7	697165	1	Ring Set (.010" Oversize)				
7	697171	1	Ring Set (.020" Oversize)				
7	697172	1	Ring Set (.030" Oversize)				
27	698469	1	Lock-Pin, Piston				
28	697099	1	Pin-Piston (Standard)				
29	697126	1	Rod-Connecting (Standard)				
7	697263	1	Rod-Connecting (.020In Undersize)				
32	692852	1	Screw				
146	691639	1	Key-Timing				
357	691483	1	Key-Pulley, Drive				
741	697128	1	Gear-Timing				
757	697607	1	Link-Counterweight				
758	697134	1	Counterweight				
759	697392	1	Pin-Counterweight				
1270	697156	1	Plug-Counterweight, Avs				

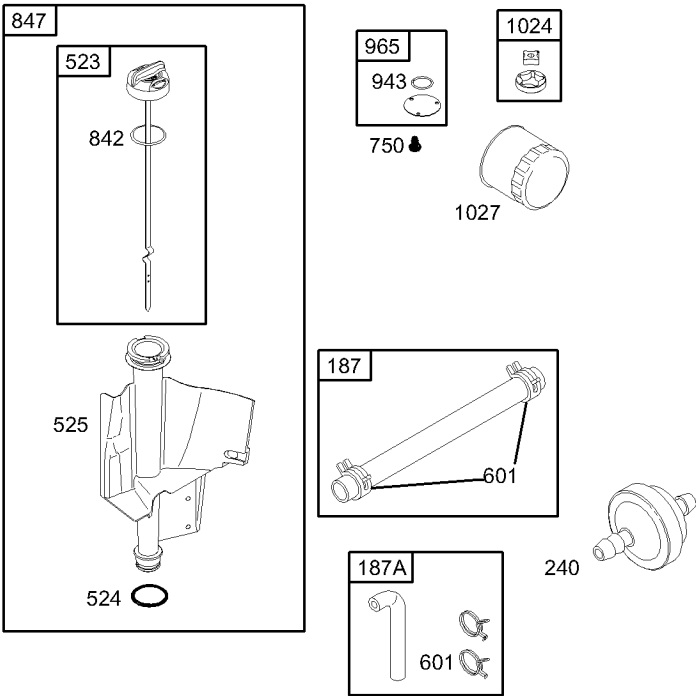 


Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly

Briggs and Stratton 31G777-0121-E1


Ref	Part No.	Qty.	Description				
⑦187	296004	1	Fuel-Hose				
⑦187A	698820	1	Line-Fuel				
⑦240	298090	1	Filter				
⑦523	697086	1	Dipstick				
③⑦524	691032	1	Seal, O-Ring				
⑦525	697085	1	Tube-Dipstick				
⑦601	691038	1	Clamp-Hose				
⑦750	691033	1	Screw				
③⑦842	691031	1	Seal, O-Ring				
⑦847	697087	1	Dipstick/Tube ASM				
③⑦943	690589	1	Seal, O-Ring				
⑦965	499613	1	Cover-Pump, Oil				
⑦1024	499054	1	Pump-Oil				
⑦1027	492932	1	Filter-Oil				

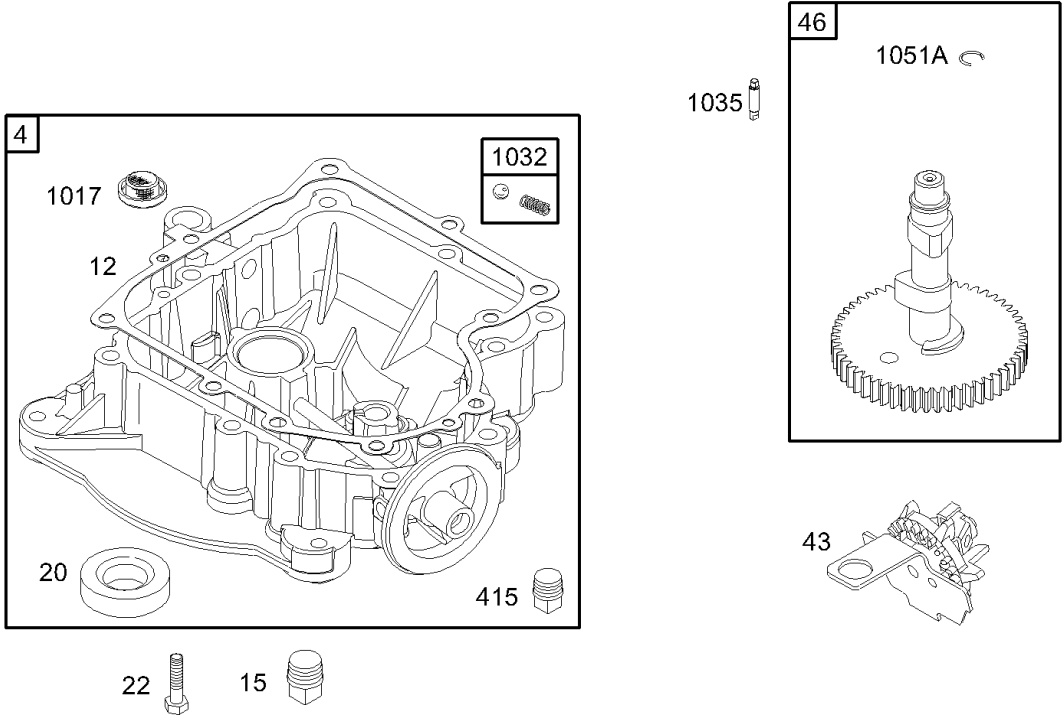 

Assemblies include all parts shown in frames.

Crankcase Assembly
Briggs and Stratton 31G777-0121-E1

Ref	Part No.	Qty.	Description				
4	697188	1	Sump-Engine				
12	697110	1	Gasket-Crankcase				
15	690946	1	Plug-Drain, Oil				
20	690947	1	Seal-Oil				
22	692125	1	Screw				
43	691968	1	Slinger-Governor / Oil				
46	698492	1	Camshaft				
415	690283	1	Plug-Oil				
1017	690770	1	Screen-Pump, Oil				
1032	491710	1	Ball-Pump, Oil				
1035	693784	1	Shaft-Pump				
1051A	698802	1	Ring-Retaining				

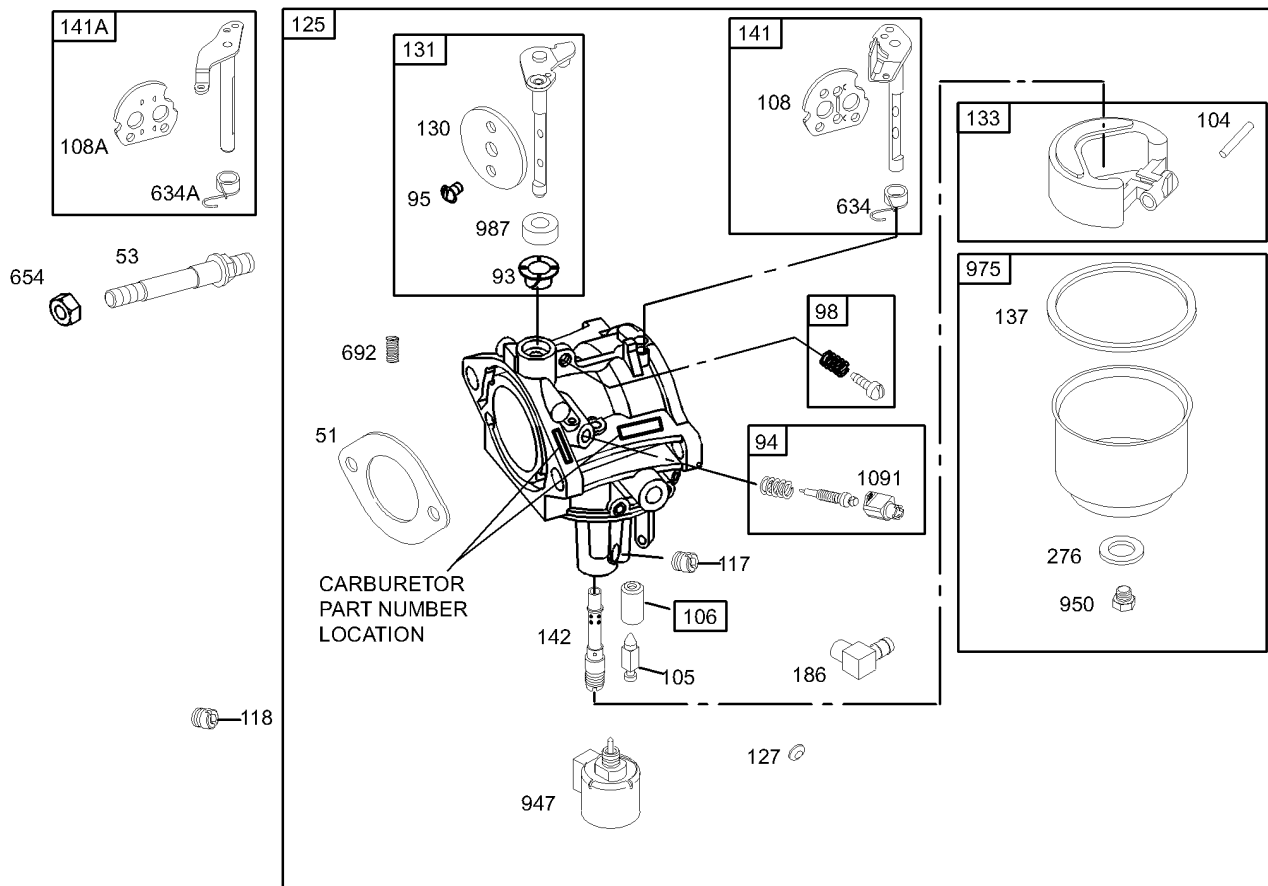 


Assemblies include all parts shown in frames.

Carburetor Assembly Briggs and Stratton 31G777-0121-E1

Ref	Part No.	Qty.	Description
⑤ ④ 51	692137	1	Gasket-Intake
⑥ ⑦			
⑦ 53	690227	1	Stud
⑤ ⑦ 93	690602	1	Bushing-Shaft, Throttle
⑦ 94	498030	1	Idle Mixture Kit
⑤ ⑦ 95	691636	1	Screw
⑦ 98	495800	1	Idle Speed Kit
⑤ ⑦ 104	690525	1	Pin-Hinge, Float
⑤ ⑦ 105	231855	1	Valve-Needle, Float
⑤ ⑦ 106	690577	1	Seat-Inlet
⑦ 108	690464	1	Valve-Choke
⑦ 108A	692344	1	Valve-Choke
⑦ 117	694352	1	Jet-Main (Standard)
⑦ 118	697228	1	Jet-Main (High Altitude)
⑦ 125	697190	1	Carburetor
⑦ 127	695005	1	Plug-Welch
⑦ 130	691750	1	Valve-Throttle
⑦ 131	494379	1	Throttle Shaft Kit
⑦ 133	494381	1	Float-Carburetor
⑤ ⑥ ⑥ 137	281165	1	Gasket-Bowl, Float
⑦			
⑦ 141	495097	1	Choke Shaft Kit
⑦ 141A	495931	1	Choke Shaft Kit
⑤ ⑦ 142	697140	1	Nozzle-Carburetor

Ref	Part No.	Qty.	Description
⑦ 186	698174	1	Connector-Hose
⑤ ⑥ ⑥ 276	692255	1	Washer-Sealing
⑦			
⑤ ⑦ 634	690801	1	Spring / Seal ASM
⑤ ⑦ 634A	690802	1	Spring / Seal ASM
⑦ 654	690958	1	Nut
⑦ 692	690572	1	Spring-Detent
⑦ 947	694393	1	Solenoid-Fuel
⑦ 950	691657	1	Screw
⑦ 958	494768	1	Valve-Fuel Shut Off
⑦ 975	495933	1	Bowl-Float
⑤ ⑦ 987	691326	1	Seal-Shaft, Throttle
⑦ 1091	691333	1	Cap-Limiter

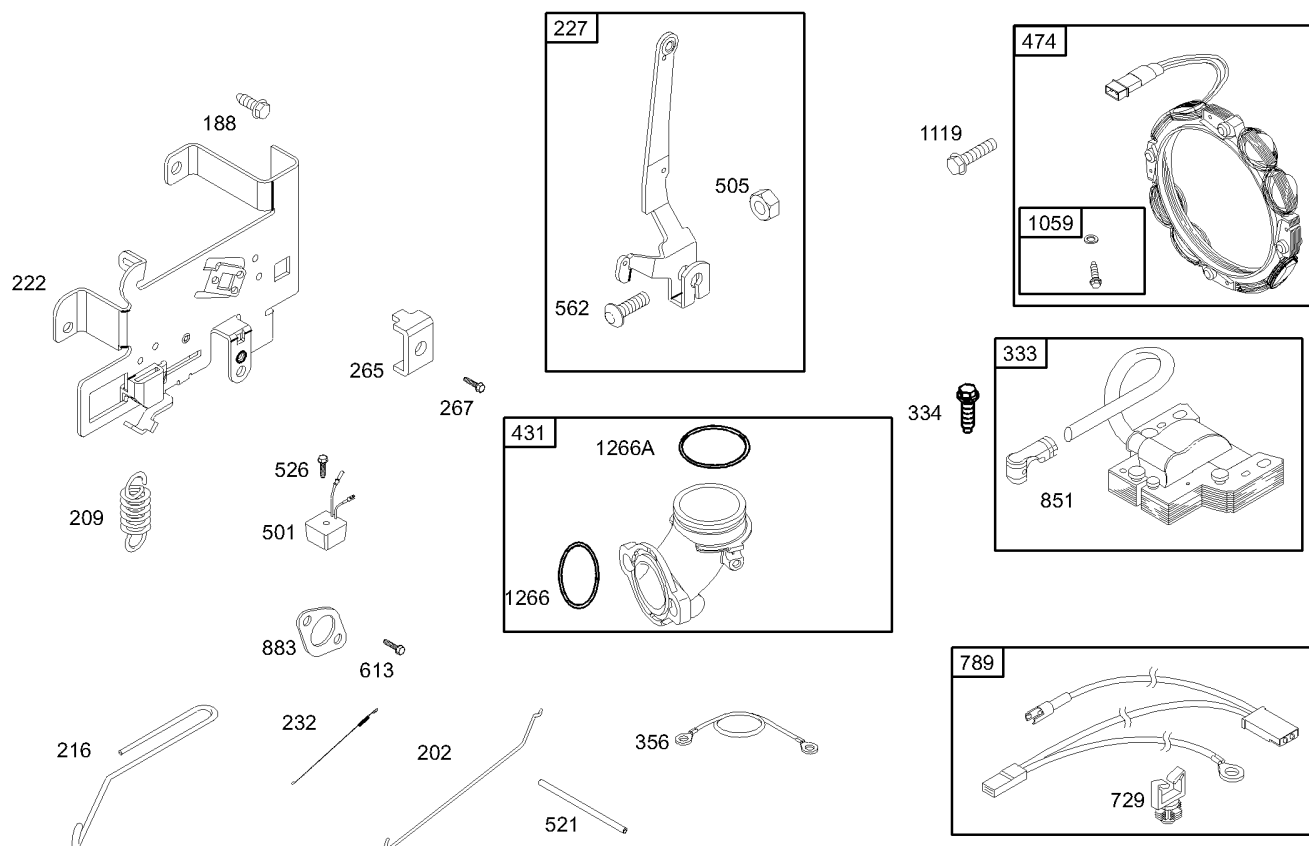 


Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton 31G777-0121-E1

Ref	Part No.	Qty.	Description
7188	691693	1	Screw
7202	691841	1	Link-Governor, Mechanical
7209	691795	1	Spring-Governor
7216	691840	1	Link-Choke
7222	694042	1	Bracket-Control
7227	691374	1	Lever-Control, Governor
7232	691842	1	Spring-Link, Governor
7265	691024	1	Clamp-Casing
7267	690804	1	Screw-Casing Clamp
7333	492341	1	Armature-Magneto
7334	691061	1	Screw
7356	697089	1	Stop-Wire
7431	697122	1	Elbow-Intake
7474	696457	1	Alternator
7501	691188	1	Regulator
7505	691251	1	Nut
7521	690581	1	Shield-Cable
7526	697088	1	Screw
7562	691119	1	Screw
7613	698941	1	Screw-Exhaust
7729	691335	1	Clip-Wire
7789	692037	1	Wiring-Harness
7851	692424	1	Terminal-Spark Plug
7883	692236	1	Gasket-Exhaust


Ref	Part No.	Qty.	Description
71059	698516	1	Screw And Washer Kit
71119	691183	1	Screw
3 71266	691917	1	Seal-O Ring
3 71266A	697123	1	Seal-O Ring

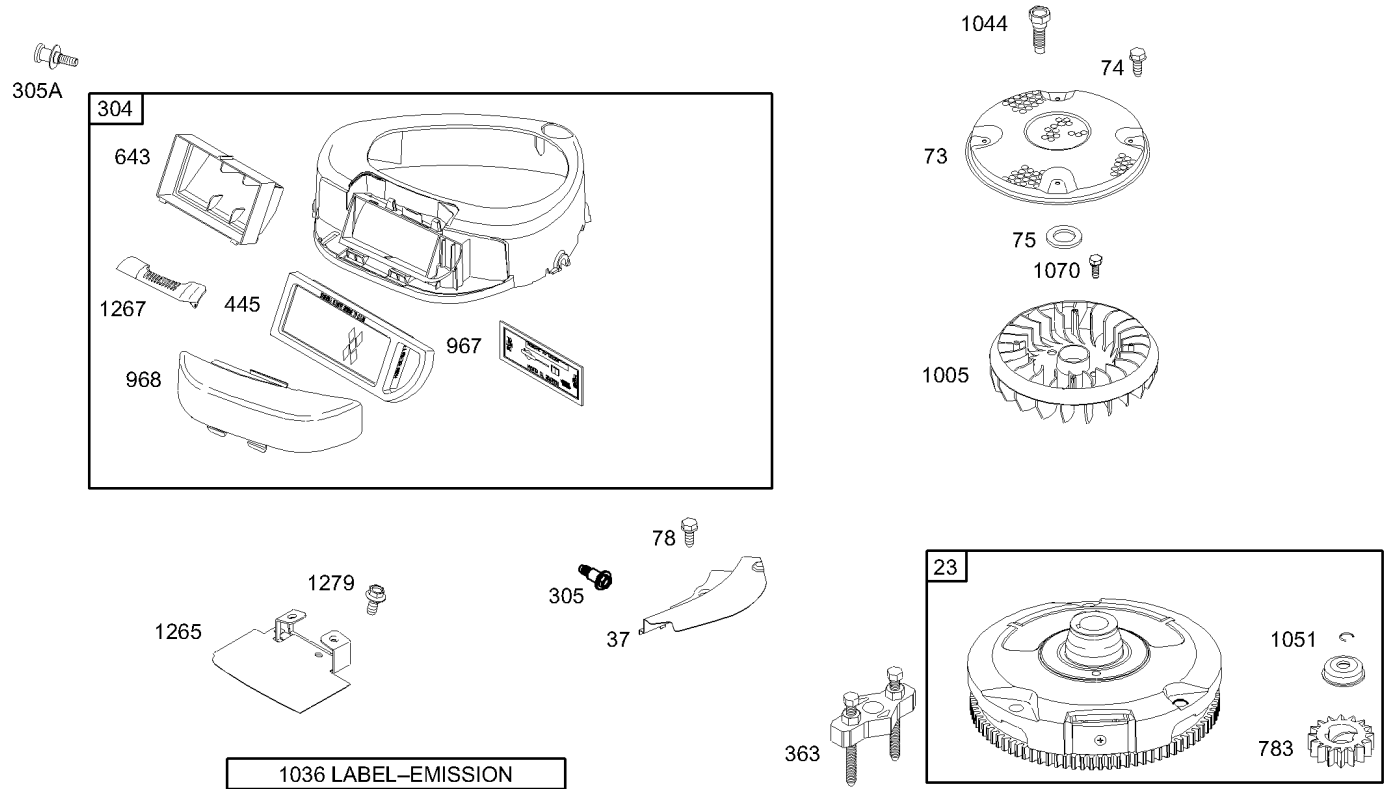 

Assemblies include all parts shown in frames.

Blower Housing Assembly
Briggs and Stratton 31G777-0121-E1


Ref	Part No.	Qty.	Description				
23	693556	1	Flywheel				
37	697108	1	Guard-Flywheel				
73	697133	1	Screen-Rotating				
74	697897	1	Screw				
75	690582	1	Washer-Flywheel				
78	691003	1	Screw				
304	698804	1	Housing-Blower				
305	697102	1	Screw				
305A	697103	1	Screw				
363	19203	1	Puller-Flywheel				
445	698083	1	Filter-Cartridge, Air Cleaner				
643	698401	1	Retainer-Filter, Air				
783	693713	1	Gear-Pinion				
967	697015	1	Filter-Pre Cleaner				
968	697084	1	Cover-Cleaner, Air				
1005	697111	1	Fan-Flywheel				
1036	695700	1	Label-Emission				
1044	691658	1	Screw-Crankshaft Extension				
1051	691265	1	Ring-Retaining				
1070	690372	1	Screw				
1265	697125	1	Support-Housing, Blower				
1267	697135	1	Latch-Blower Housing				
1279	690960	1	Screw				

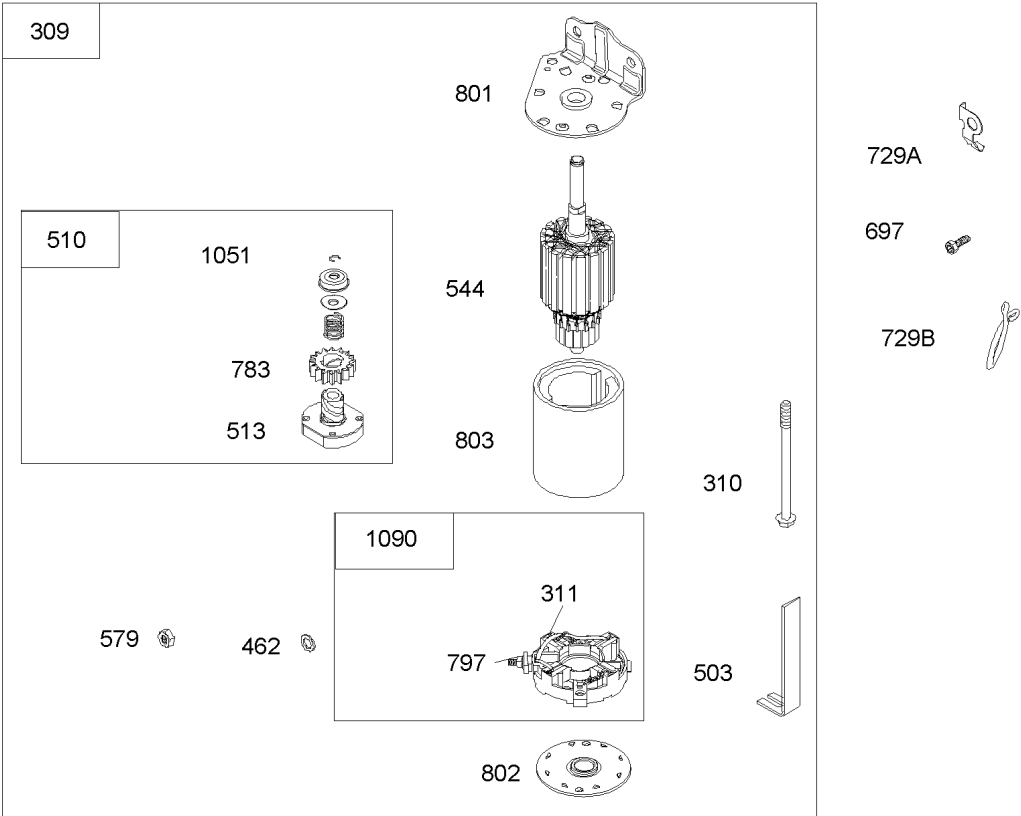 

Assemblies include all parts shown in frames.

Starter Assembly
Briggs and Stratton Model 31G777-0121-E1


Ref	Part No.	Qty.	Description				
7309	693551	1	Motor-Starter				
7310	690323	1	Bolt				
7311	497608	1	Brush Set				
7462	691261	1	Washer				
7503	691532	1	Strap-Starter				
7510	693699	1	Drive-Starter				
7513	692024	1	Clutch-Drive				
7544	692034	1	Armature-Starter				
7579	691029	1	Nut				
7697	690372	1	Screw				
7729A	691224	1	Clip-Wire				
7729B	694123	1	Clip-Wire				
7783	693713	1	Gear-Pinion				
7797	693167	1	Nut				
7801	691283	1	Cap-Drive				
7802	691286	1	Cap-End				
7803	693757	1	Housing-Starter				
71051	691265	1	Ring-Retaining				
71090	691293	1	Retainer-Brush				

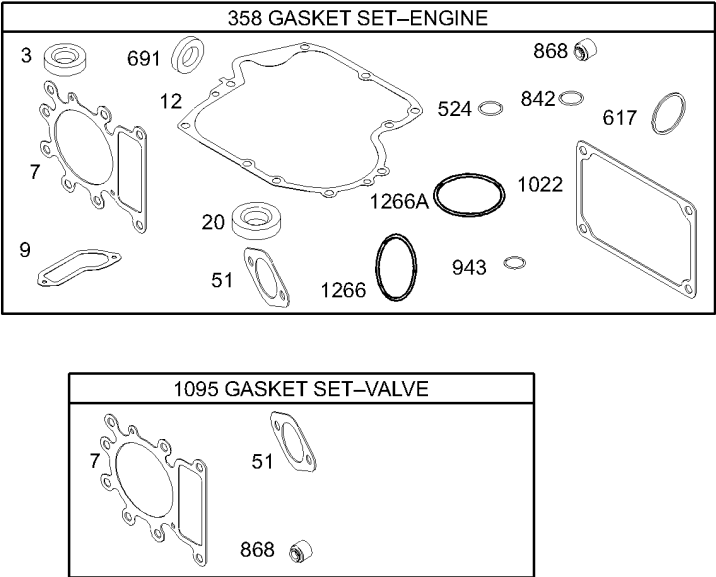 

Assemblies include all parts shown in frames.

Gasket Assembly
Briggs and Stratton 31G777-0121-E1

Ref	Part No.	Qty.	Description				
373	391086	1	Seal-Oil				
347	692410	1	Gasket-Cylinder Head				
7							
379	697109	1	Gasket-Breather				
3712	697110	0	Gasket-Crankcase				
3720	690947	1	Seal-Oil				
3451	692137	1	Gasket-Intake				
56							
7358	697191	1	Gasket Set-Engine				
35617	692138	1	Seal				
7							
37524	691032	1	Seal, O-Ring				
37691	692407	1	Seal-Shaft, Governor				
37842	691031	1	Seal, O-Ring				
34868	690968	1	Seal-Valve				
7							
37943	690589	1	Seal, O-Ring				
371022	272475	1	Gasket-Cover, Rocker				
71095	691581	1	Valve Gasket Set				
351266	691917	1	Seal-O Ring				
7							
351266A	697123	1	Seal-O Ring				
7							

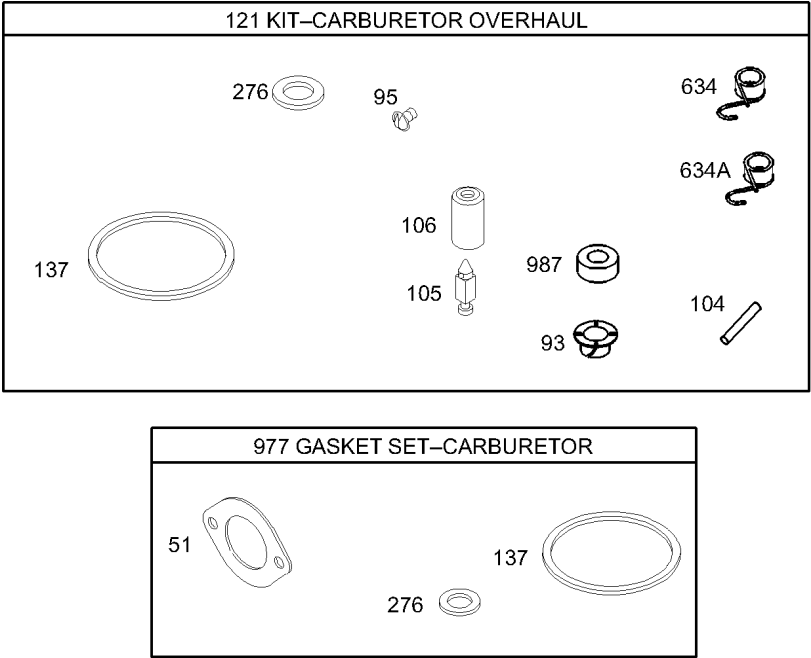 

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Briggs and Stratton 31G777-0121-E1

Ref	Part No.	Qty.	Description				
51	692137	1	Gasket-Intake				
93	690602	1	Bushing-Shaft, Throttle				
95	691636	1	Screw				
104	690525	1	Pin-Hinge, Float				
105	231855	1	Valve-Needle, Float				
106	691780	1	Seat-Inlet				
121	697884	1	Kit-Carburetor Overhaul				
137	281165	1	Gasket-Bowl, Float				
276	692255	1	Washer-Sealing				
634	690801	1	Spring / Seal ASM				
634A	690802	1	Spring / Seal ASM				
777	690192	1	Carburetor Gasket Set				
987	691326	1	Seal-Shaft, Throttle				

