



Insight[®] Gold Lawn Mower

Model No. 10695 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front End and Tunnel Assembly	 3	Camshaft Pulley Assembly Honda GCV160A STL1	 15
Housing Assembly No. 108-9346	 4	Recoil Starter Assembly Honda GCV160A STL1	 16
Rear Axle and Transmission Assembly	 5	Fan Cover Assembly Honda GCV160A STL1	 17
Transmission Assembly No. 107-3860	 6	Carburetor Assembly Honda GCV160A STL1	 18
Upper Handle Assembly	 7	Air Cleaner Assembly Honda GCV160A STL1	 19
Lower Handle Assembly	 8	Muffler Assembly Honda GCV160A STL1	 20
Blade and Engine Assembly	 9	Flywheel Assembly Honda GCV160A STL1	 21
Rear Bag Assembly	 10	Control Assembly Honda GCV160A STL1	 22
Cylinder Barrel Assembly Honda GCV160A STL1	 11	Choke Base Assembly Honda GCV160A STL1	 23
Oil Pan Assembly Honda GCV160A STL1	 12	Top Cover Assembly Honda GCV160A STL1	 24
Crankshaft Assembly Honda GCV160A STL1	 13	Label Assembly Honda GCV160A STL1	 25
Piston and Connecting Rod Assembly Honda GCV160A STL1	 14	Attachments and Accessories List	 26

Part Description Abbreviations

 
Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HS. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❷ Obtain from your local Honda dealer

- ❸ Not serviced separately

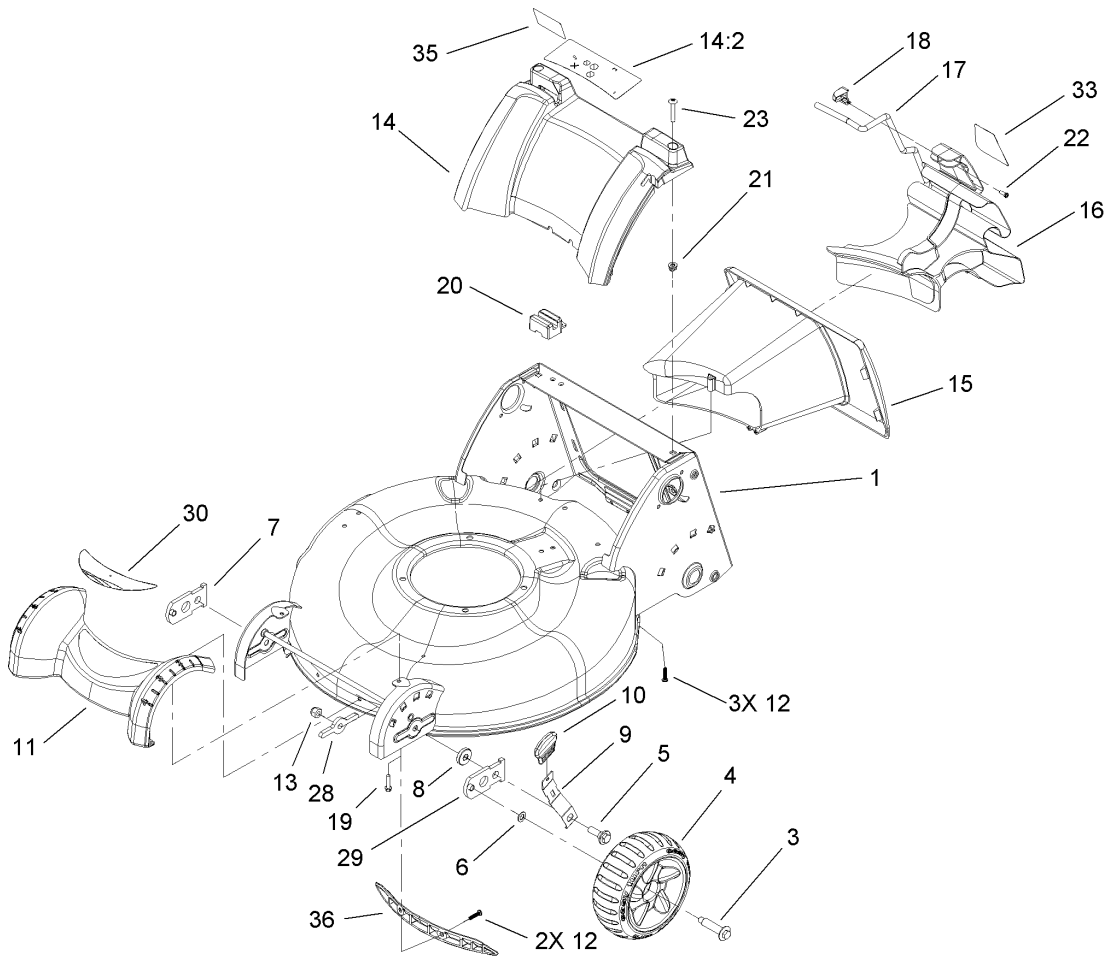


Front End and Tunnel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	108-9346	1	Housing ASM	29	108-1044	1	Arm-Pivot, LH
3	614650	2	Bolt-Shoulder	30	108-7453	1	Decal
4	112-1548	2	7 Inch Front Wheel ASM	33	108-7461	1	Decal
5	614672	2	Bolt-Shoulder	35	107-1938	1	Decal-Bag Attachment
6	40-1940	2	Washer	36	108-7502	1	Insert-Housing
7	107-3877	1	Arm-Pivot, RH	39	110-1751	1	Mulch Plug ASM
8	92-4890	2	Washer				
9	107-3878	2	Arm-Spring				
10	107-1904	2	Knob-Lever, HOC				
11	107-3926	1	Cover-Front				
12	108-7476	5	Screw-Plastite				
13	3296-39	2	Nut-Lock, NI				
14	108-9349	1	Cover-Rear				
14:2	107-3888	1	Decal-Safety				
15	110-9455	1	Tunnel				
16	107-3907	1	Plug-Chute				
17	108-1038	1	Latch-Plug				
18	108-0956	1	Retainer-Latch				
19	108-7475	2	Screw-Plastite				
20	110-1786	1	Module-Switch				
21	94-1610	2	Nut-Clip				
22	32144-111	1	Screw-PPH				
23	108-0965	2	Screw-PTH				
28	108-1048	2	Washer-Support, Front				

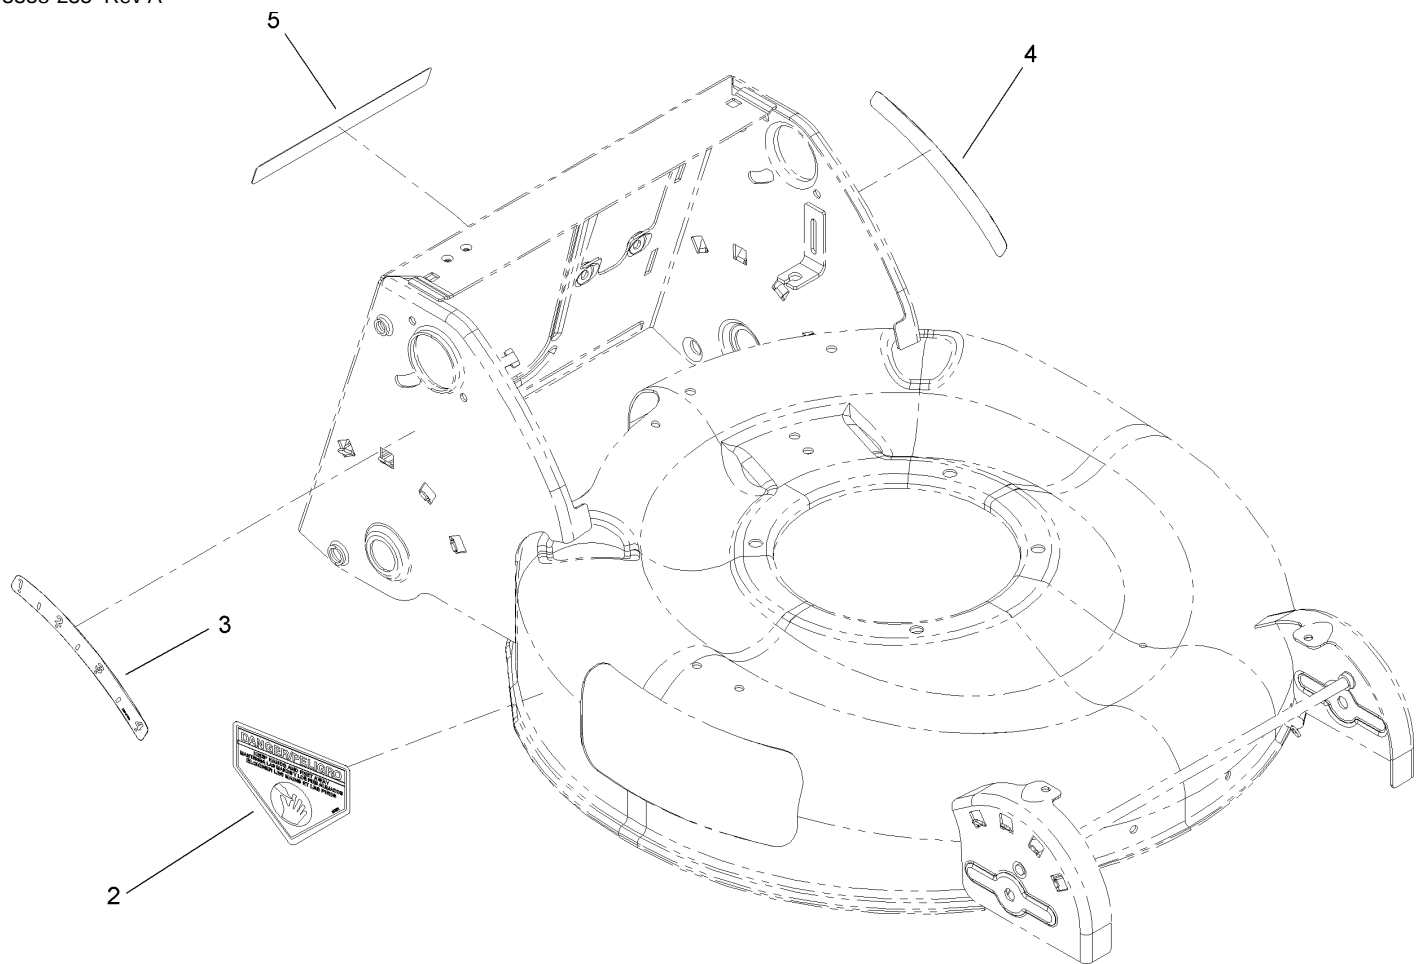 **Housing Assembly No. 108-9346**


Ref	Part No.	Qty.	Description
2	94-8072	1	Decal-Danger
3	108-7450	1	Decal-HOC, RH
4	108-7451	1	Decal-HOC, LH
5	107-3889	1	Decal-Safety

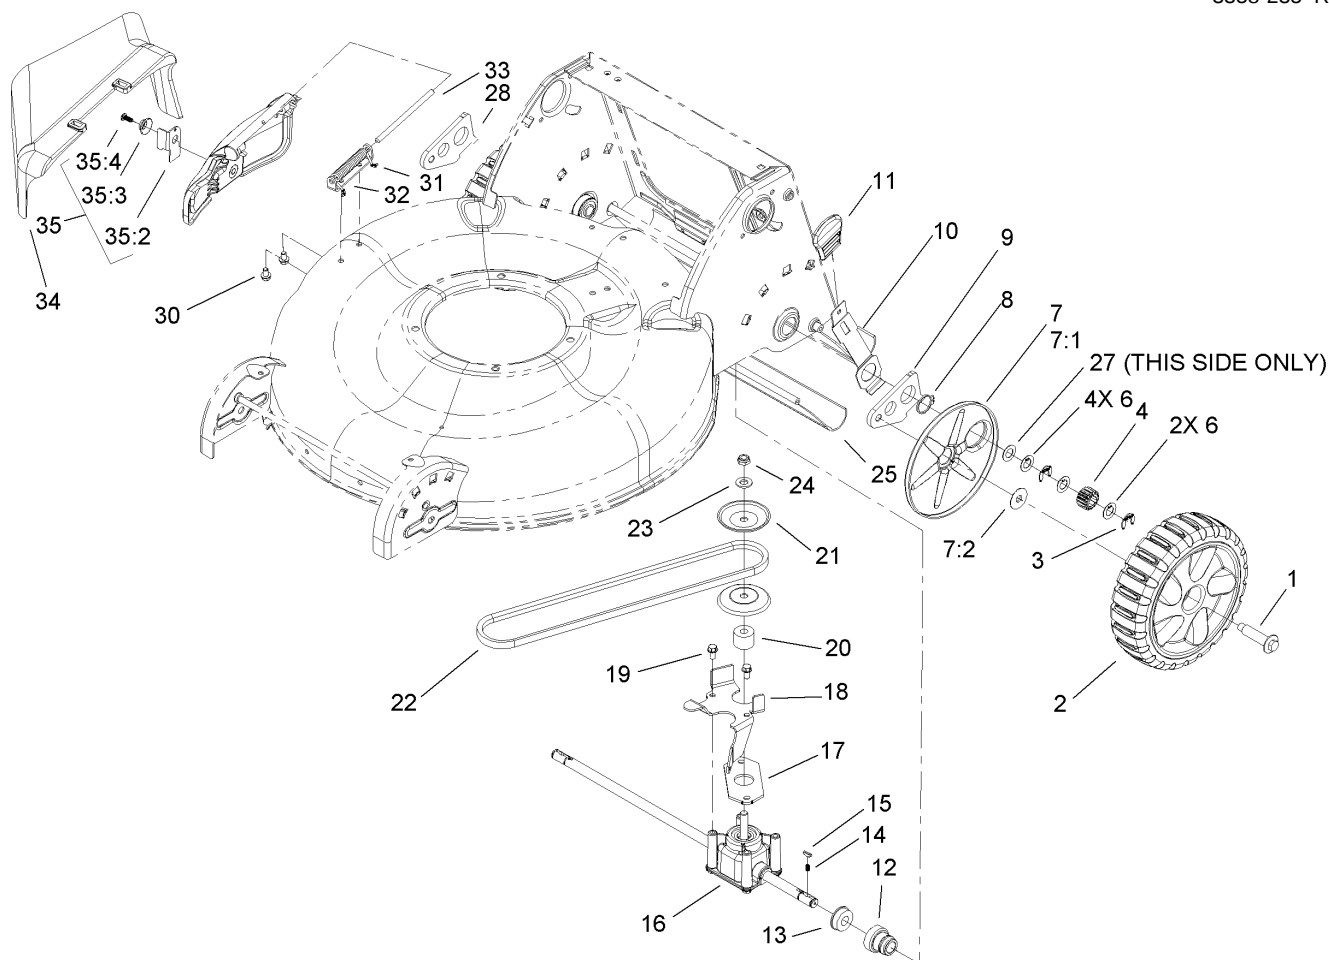 

Rear Axle and Transmission Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	107-3906	2	Rear Wheel ASM
3	65-2720	4	Klipring-Locking
4	105-3040	2	Gear-Pinion, 15T
6	105-6840	6	Washer-Thrust
7	110-1793	2	Wheel Cover ASM
7:1		1	Cover-Wheel
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	108-9344	1	Arm-Rear Pivot, LH
10	110-9445	2	Arm-Spring, Rear
11	107-1904	2	Knob-Lever, HOC
12	104-8698	2	Retainer-Bearing, HOC
13	104-8699	2	Bearing-Ball
14	39-9650	2	Spring-Compression
15	612066	2	Key
16	107-3860	1	Transmission ASM
17	108-9756	1	Gasket-Gearbox
18	107-3884-03	1	Bracket-Transmission
19	32144-4	2	Screw-HWH
20	92-5791	1	Spacer
21	100-1176	2	Pulley-Half
22	91-2258	1	V-Belt
23	3256-24	1	Washer-Flat

Ref	Part No.	Qty.	Description
24	3296-5	1	Nut-Lock
25	112-8768	1	Shield-Trailing
27	36-4780	1	Washer-Plain
28	108-9343	1	Arm-Rear Pivot, RH
30	99-8445	2	Screw-HWH
31	99-5293	1	Spring-Torsion
32	112-6416	1	Bracket-Cover
33	99-5291	1	Rod-Cover
34	105-3028	1	Chute-Discharge, Side
35	106-8376	1	Discharge Door ASM
35:2	107-0795	1	Latch-Door
35:3	107-7456	1	Cap-Door
35:4	107-7461	1	Screw-Plastite

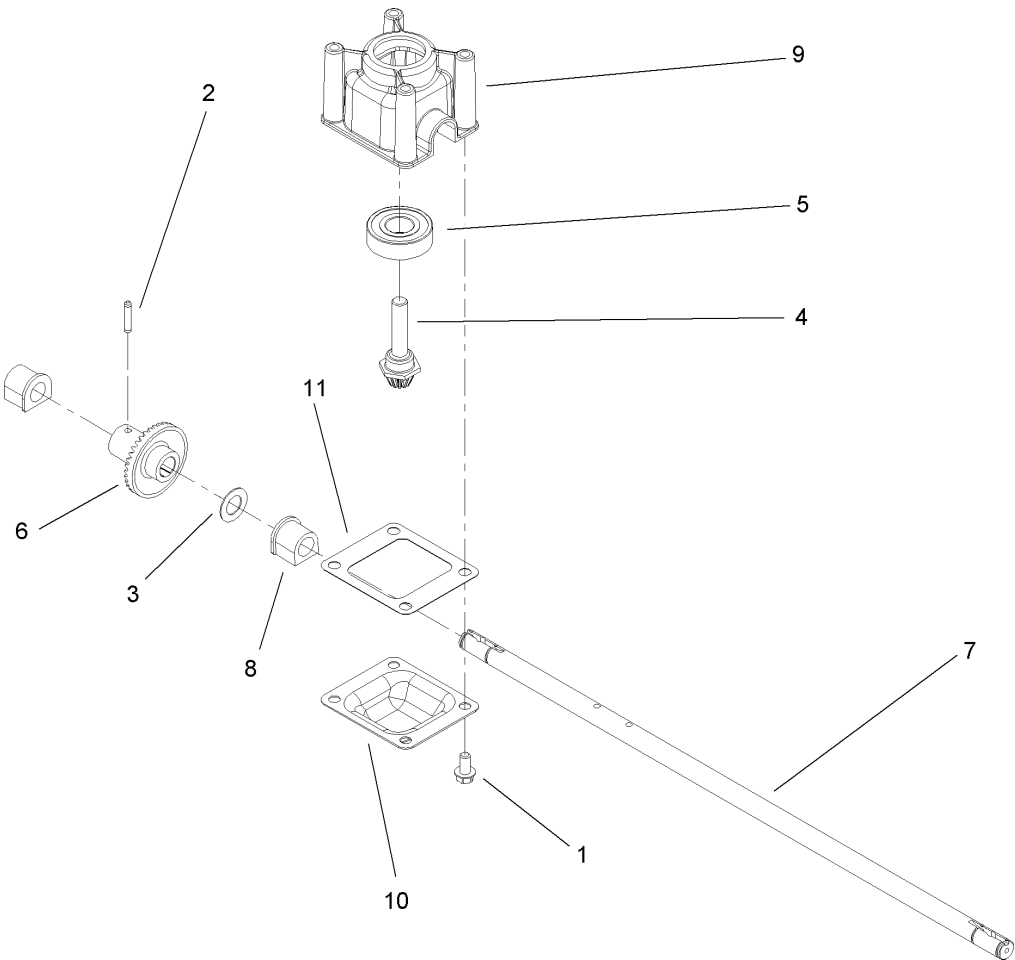 


Transmission Assembly No. 107-3860

Ref	Part No.	Qty.	Description				
1	32144-4	4	Screw-HWH				
2	3285-19	1	Pin-Groove				
3	36-4780	1	Washer-Plain				
4	92-5790	1	Pinion				
5	100-1048	1	Bearing-Ball				
6	104-8671	1	Gear-Bevel, 37T				
7	107-3861	1	Shaft-Output				
8	104-8673	2	Bushing-Shaft, Output				
9	104-8674	1	Gearcase-Upper				
10	104-8675-03	1	Cover-Gearcase				
11	105-6839	1	Gasket-Gearcase				

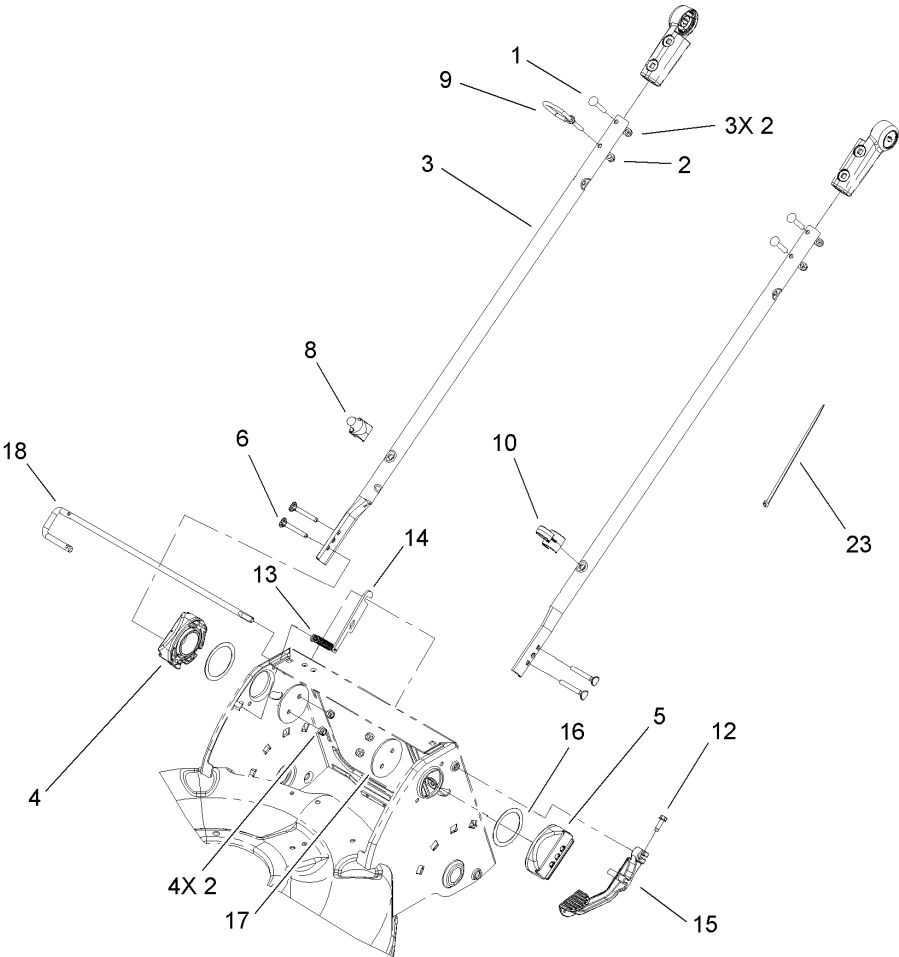 


Lower Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0988	3	Screw-CARR				
2	3296-73	8	Nut-Lock, NI				
3	107-3887-03	2	Tube-Lower				
4	108-9339-03	1	Mount-Handle, RH				
5	108-9340-03	1	Mount-Handle, LH				
6	95-4453	4	Screw				
8	108-0994	1	Guide-Rope, Lower				
9	107-3908	1	Guide-Rope, Upper				
10	106-6805	1	Guide-Cable				
12	49-2040	1	Screw-HWHTF				
13	112-1542	1	Spring-Extension				
14	112-1539	1	Plate-Release Rod				
15	110-1823-03	1	Lever-Release				
16	107-3947	2	Washer-Nylon				
17	107-3944-03	2	Plate				
18	112-8755	1	Handle-Rod, Release				
23	614249	1	Strap-Tie				

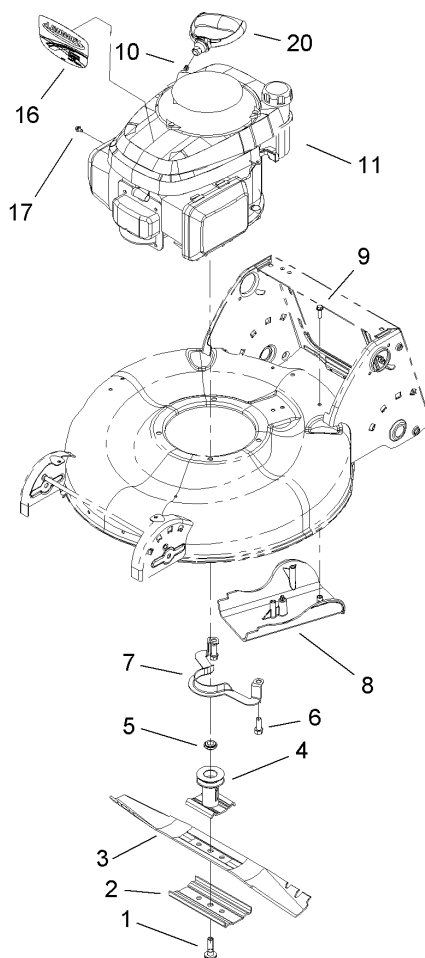 


Blade and Engine Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	108-3766-03	1	Support-Blade				
3	108-0954-03	1	Blade-21 Inch				
4	106-3987	1	Blade Driver ASM				
5	106-3999	1	Spacer-Driver				
6	92-1624	3	Screw				
7	105-3030-03	1	Guide-Belt				
8	110-1832	1	Cover-Belt				
9	46-8091	3	Screw-HWH				
10	92-1701	1	Stop-Rope				
2011		1	Engine-Honda, Gcv160A Stl1				
16	108-7529	1	Decal				
17	98-1394	1	Screw-HWH				
20	110-1778	1	Handle-Recoil				

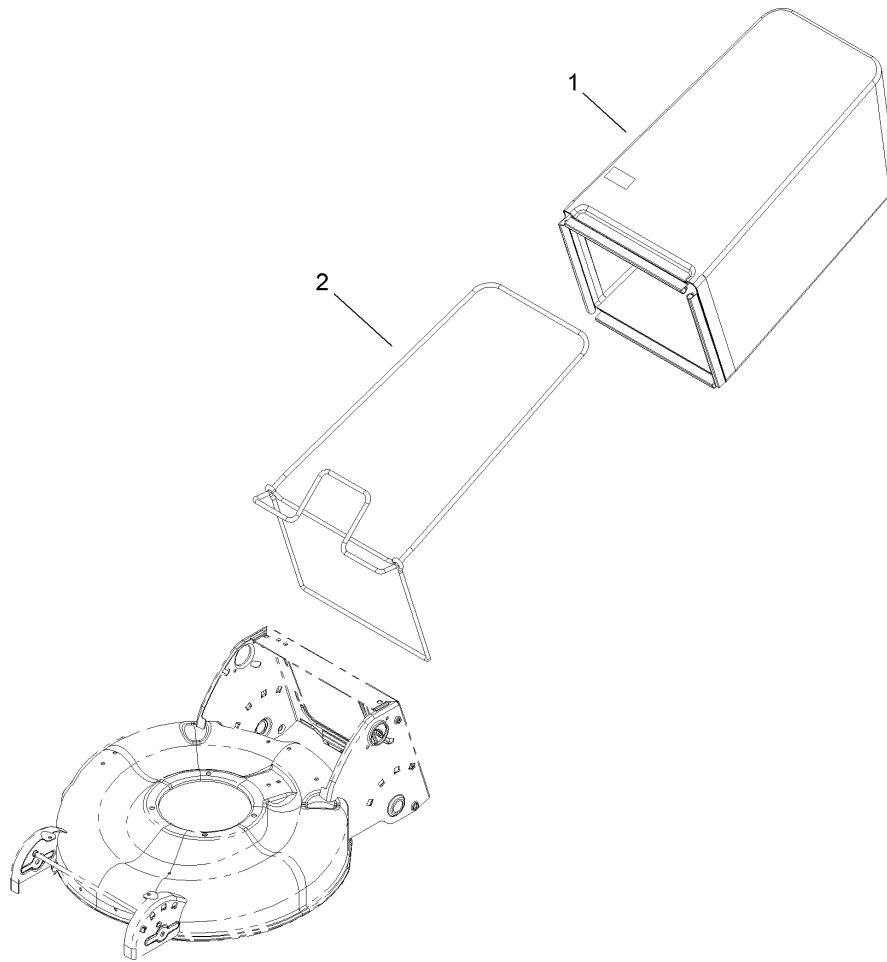 

Rear Bag Assembly


Ref	Part No.	Qty.	Description
1	107-3911	1	Bag-Grass
2	112-8750-03	1	Frame-Bag

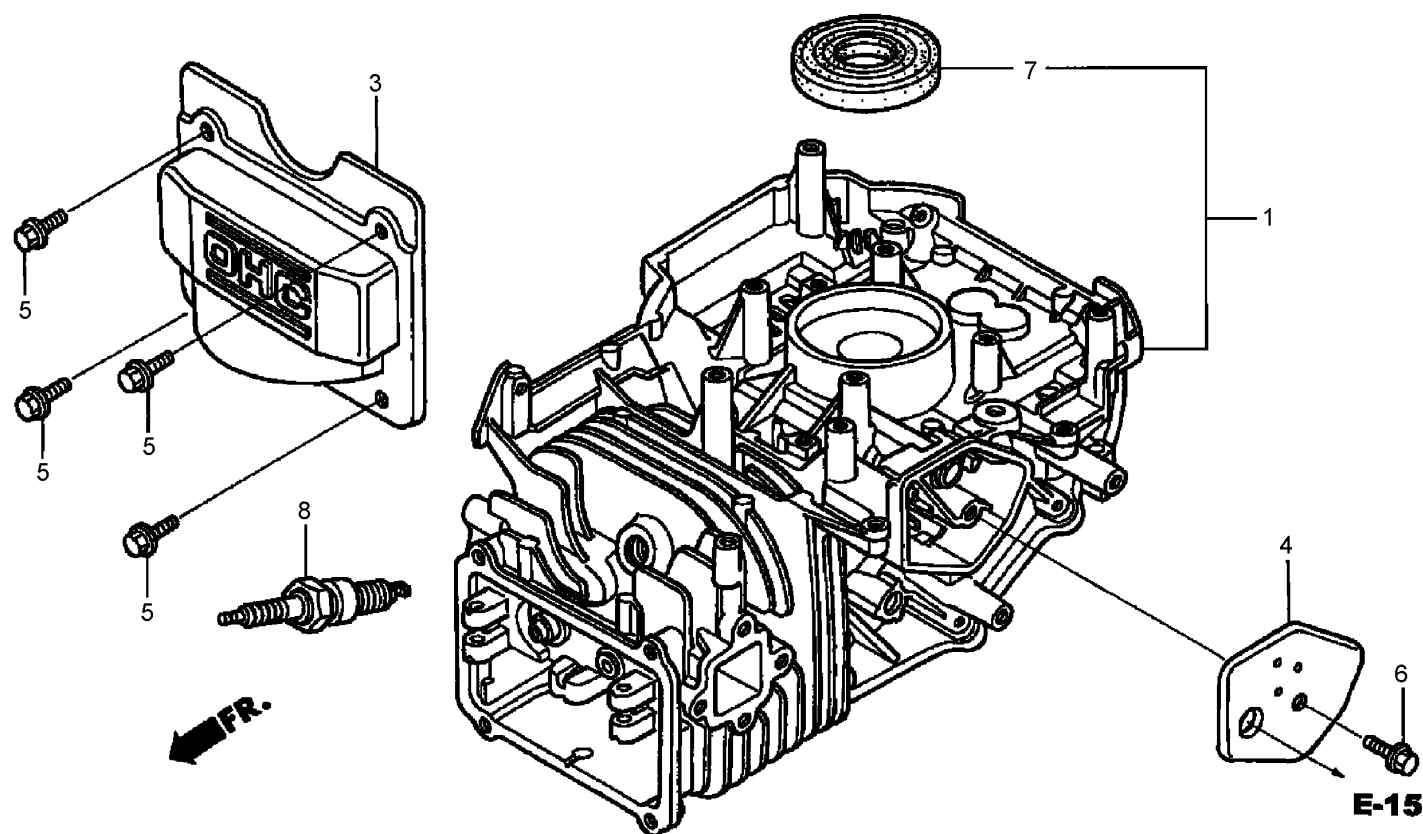 

Cylinder Barrel Assembly

Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
❸1	12000-ZL8-415	1	Cylinder ASM (010)				
❸3	12311-ZL8-000	1	Cover-Head				
❸4	12355-ZL8-000	1	Cover-Breather (Breather Valve ASM)				
❸5	90013-883-000	4	Bolt-Flange (6X12) (Ct200)				
❸6	90014-952-000	1	Bolt-Flange (6X14)				
❸7	91201-ZL8-003	1	Seal (25.4X62X6)				
❸8	98079-56846	1	Plug-Spark (Bpr6Es) (Ngk)				

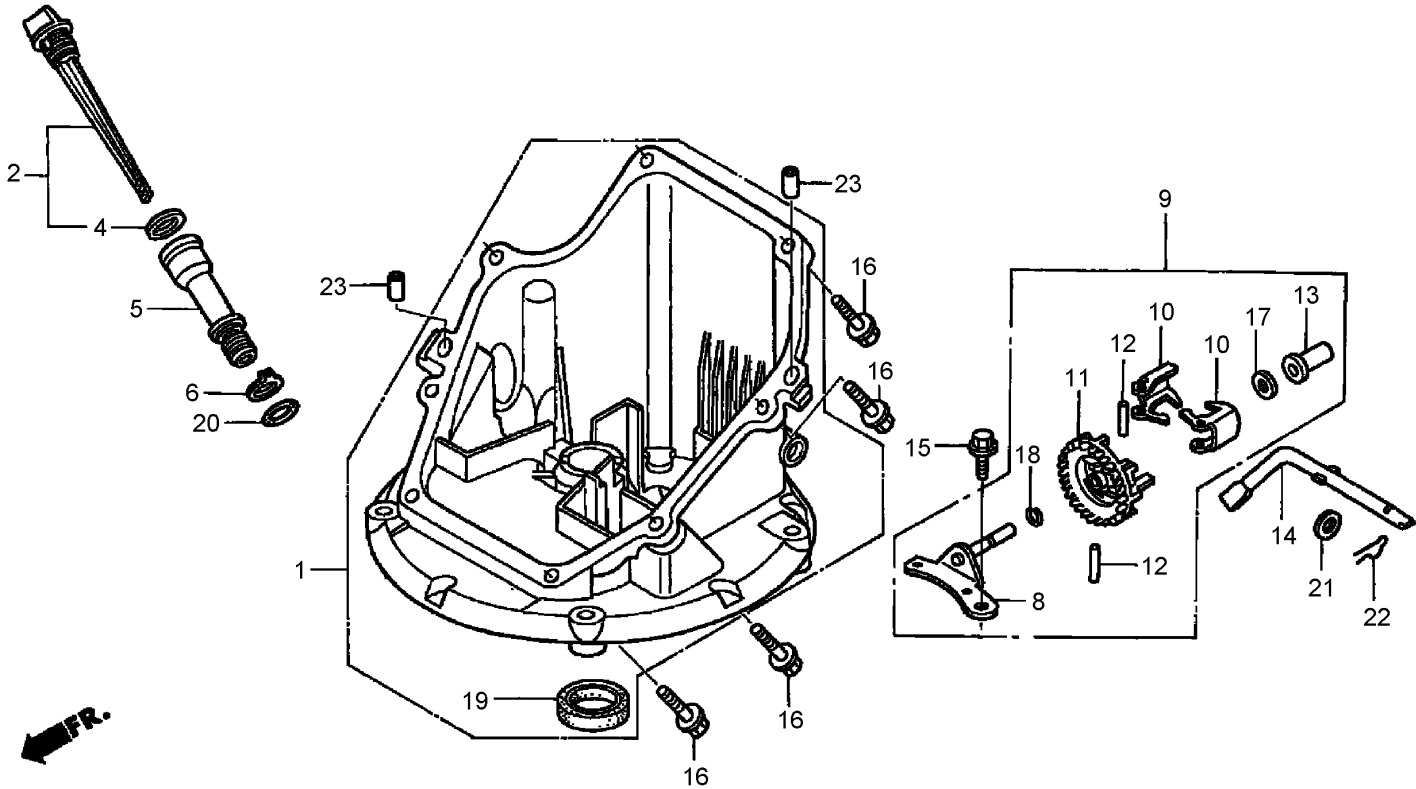 

Oil Pan Assembly
Honda GCV160A STL1

Ref	Part No.	Qty.	Description
❶1	11300-ZM0-405	1	Oil Pan ASM (000)
❷2	15650-ZM0-801	1	Dipstick-Oil
❹4	15625-ZE6-000	1	Gasket-Cap, Oil Filler
❺5	15631-ZM0-000	1	Extension-Filler, Oil
❻6	15639-ZM0-000	1	Washer-Lock, Extension
❸8	16508-ZM0-010	1	Shaft-Holder, Governor
❹9	16510-ZM0-010	1	Governor ASM
❺10	16511-ZL8-000	2	Weight-Governor
❺11	16512-ZM0-000	1	Holder-Weight, Governor
❺12	16513-ZE1-000	2	Pin-Weight, Governor
❺13	16531-ZE1-000	1	Slider-Governor
❺14	16541-ZM0-000	1	Shaft-Arm, Governor
❺15	90014-952-000	1	Bolt-Flange (6X14)


Ref	Part No.	Qty.	Description
❸16	90121-952-000	8	Bolt-Flange (6X25)
❸17	90451-ZE1-000	1	Washer-Thrust (6Mm)
❸18	90602-ZE1-000	1	Clip-Holder, Governor
❸19	91202-ZL8-003	1	Seal-Oil (28X41.25X6)
❸20	91303-KF0-003	1	O-Ring (14.8X2.4) (Arai)
❸20	91356-MA6-005	1	O-Ring
❸21	94101-06800	1	Washer-Plain (6Mm)
❸22	94251-08000	1	Pin-Lock (8Mm)
❸23	94301-08200	2	Pin-Dowel (8X20)

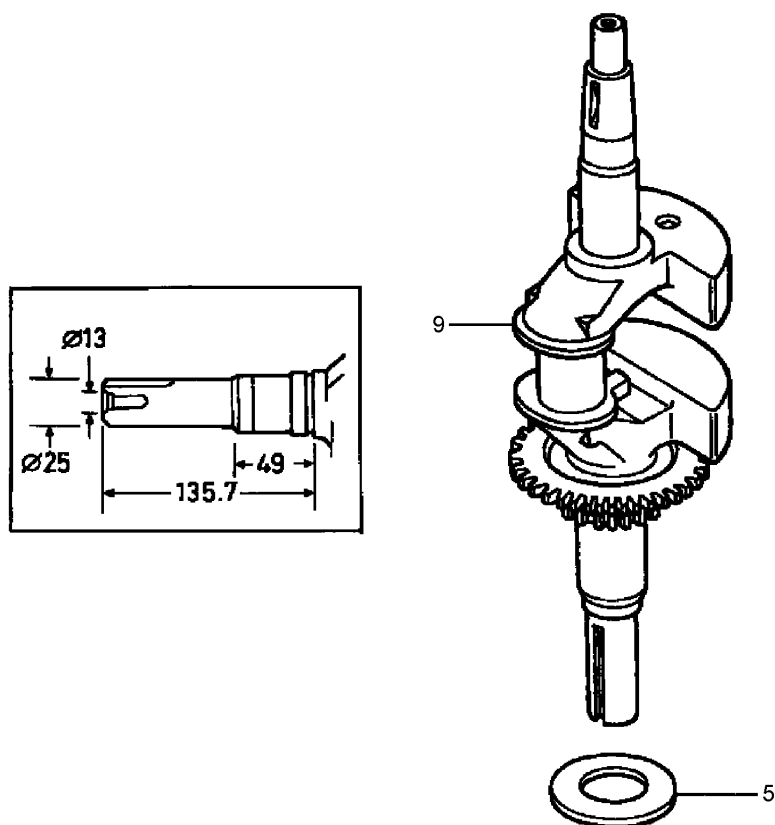 

Crankshaft Assembly


Honda GCV160A STL1

Ref	Part No.	Qty.	Description
5	90402-ZL8-000	1	Washer-Thrust
9	13310-Z0L-V70	1	Crankshaft

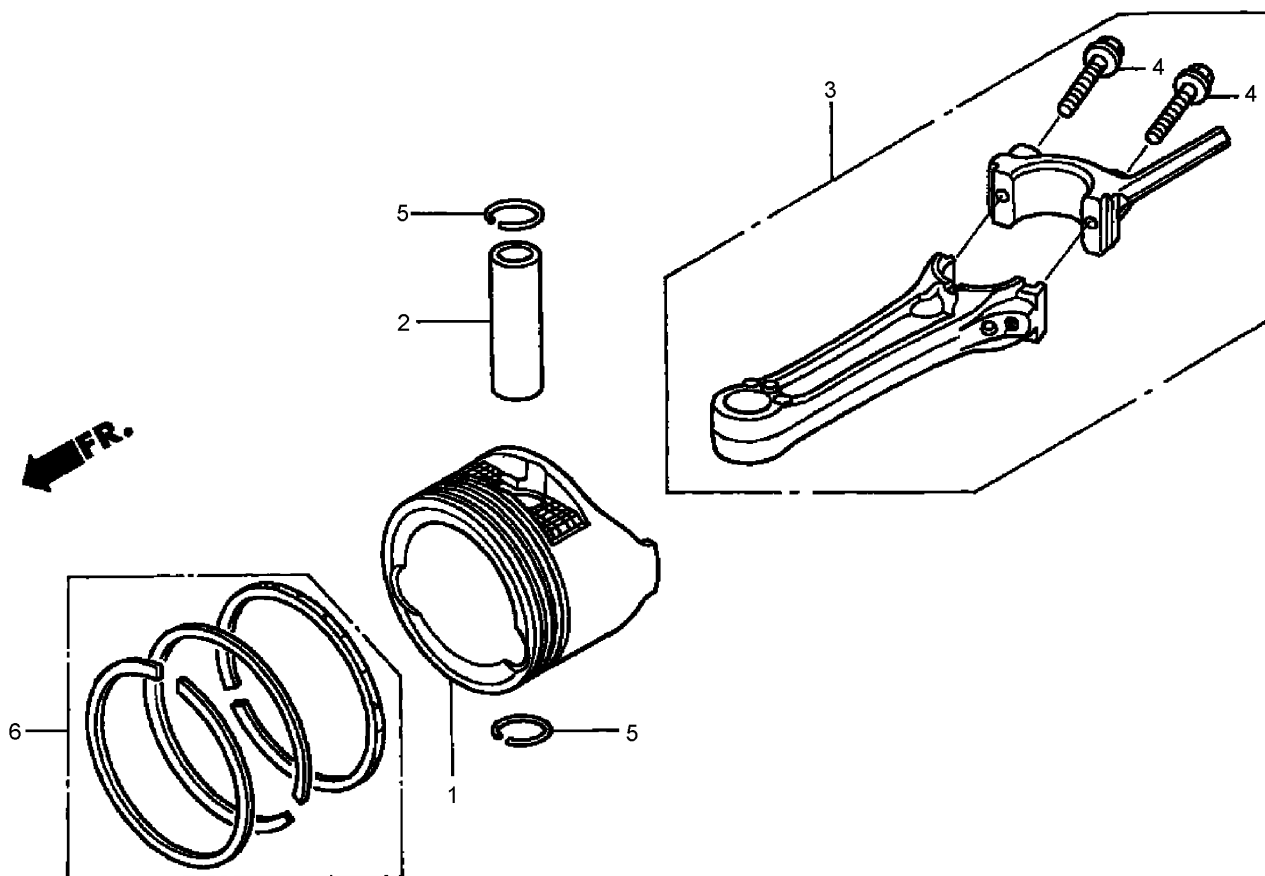 

Piston and Connecting Rod Assembly Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
❸1	13101-ZL8-000	1	Piston				
❸2	13111-ZE0-000	1	Pin-Piston				
❸3	13200-ZL8-000	1	Connecting Rod ASM				
❸4	90001-ZE1-000	2	Bolt-Rod, Connecting				
❸5	90551-ZE0-000	2	Clip-Pin, Piston (13Mm)				
❸6	13010-ZL8-003	1	Ring Set-Piston (Riken)				
❸6	13010-ZL8-024	1	Ring Set-Piston (Teikoku)				

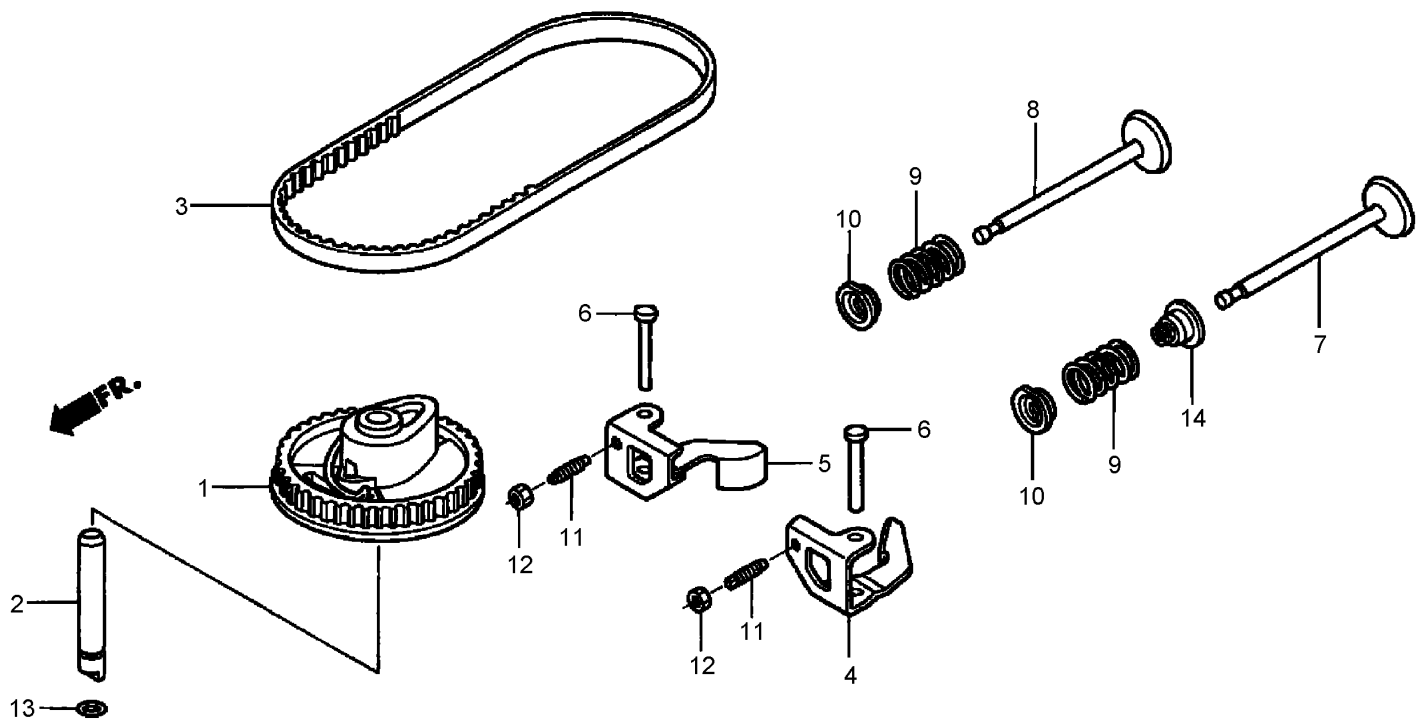 

Camshaft Pulley Assembly
Honda GCV160A STL1


Ref	Part No.	Qty.	Description
❶1	14320-ZL8-010	1	Pulley-Camshaft
❷2	14324-ZL8-000	1	Shaft-Pulley
❸3	14400-Z0J-014	1	Belt-Timing (84Hu7 G-200)
❹4	14431-Z0J-000	1	Rocker Arm-Valve, Intake
❺5	14441-Z0J-000	1	Rocker Arm-Valve, Exhaust
❻6	14461-ZL8-000	2	Shaft-Arm, Rocker
❼7	14711-Z0J-000	1	Valve-Intake
❽8	14721-ZL8-000	1	Valve-Exhaust
❾9	14751-ZL8-000	2	Spring-Valve
❿10	14771-Z0J-000	2	Retainer-Spring, Valve
⓫11	90012-333-000	2	Screw-Tappet, Adj.
⓬12	90206-001-000	2	Nut-Tappet, Adj.
⓭13	91301-ZM0-V31	1	O-Ring (6.8X1.9)

Ref	Part No.	Qty.	Description
❿14	12209-ZM0-003	1	Seal-Stem, Valve

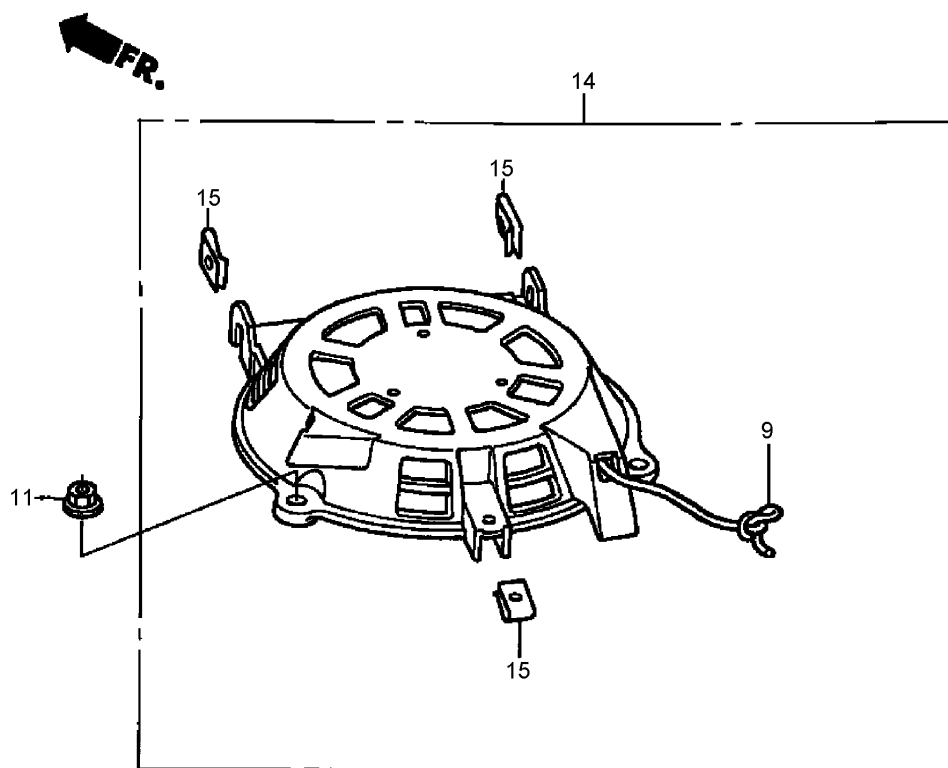 


Recoil Starter Assembly Honda GCV160A STL1

Ref	Part No.	Qty.	Description				
③9	28462-Z0L-V71	1	Rope-Starter, Recoil				
③11	90201-ZM0-000	3	Nut-Flange (6Mm)				
③14	28400-Z0L-V72	1	Recoil Starter ASM				
③15	66871-KY2-700	3	Nut-Cowl				

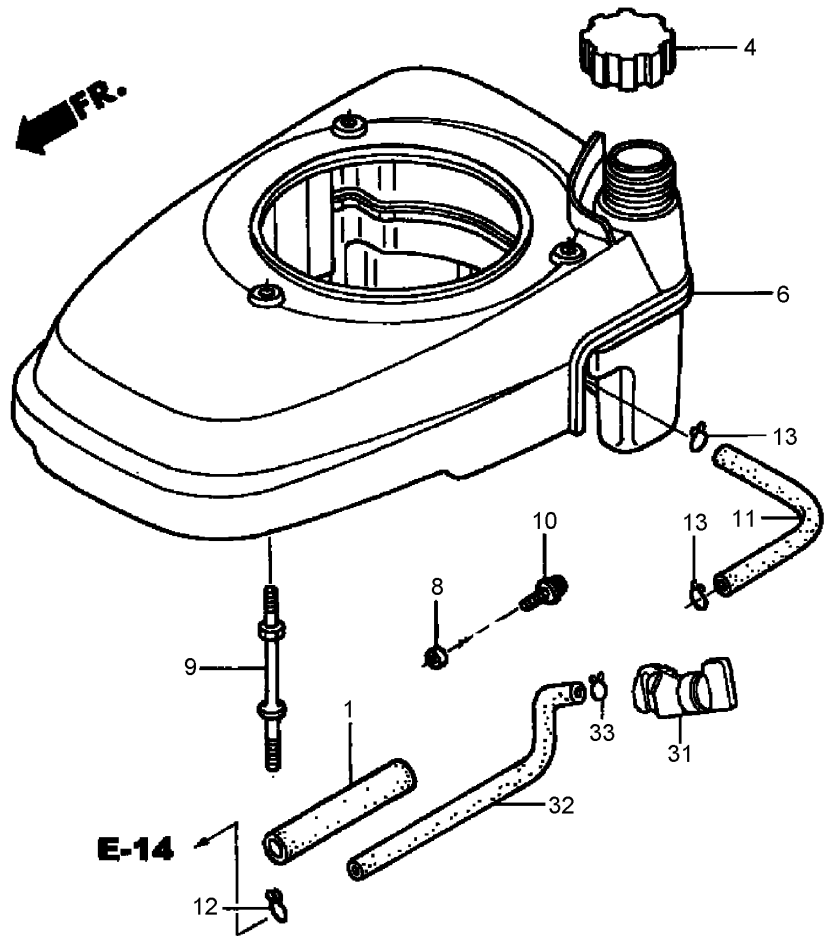 

Fan Cover Assembly
Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
❶1	16854-ZH8-000	1	Supporter-Rubber (107Mm)				
❶4	17620-ZL8-013	1	Fuel Tank Cap ASM				
❶6	19610-Z0L-800ZA	1	Cover-Fan				
❶8	91501-Z0L-800	1	Collar-Petcock, Fuel				
❶9	90043-ZL8-000	3	Bolt-Stud				
❶10	93891-05010-08	1	Screw-Washer (5X10)				
❶11	95001-55008-60M	1	Fuel-Hose (5.5X8000) (5.5X100)				
❶12	95002-02080	1	Clip-Tube (B8)				
❶13	95002-02100	2	Clip-Tube (B10)				
❶31	16950-ZM0-003	1	Petcock ASM				
❶32	17702-ZM0-800	1	Tube- Fuel				
❶33	95002-02080	1	Clip-Tube (B8)				

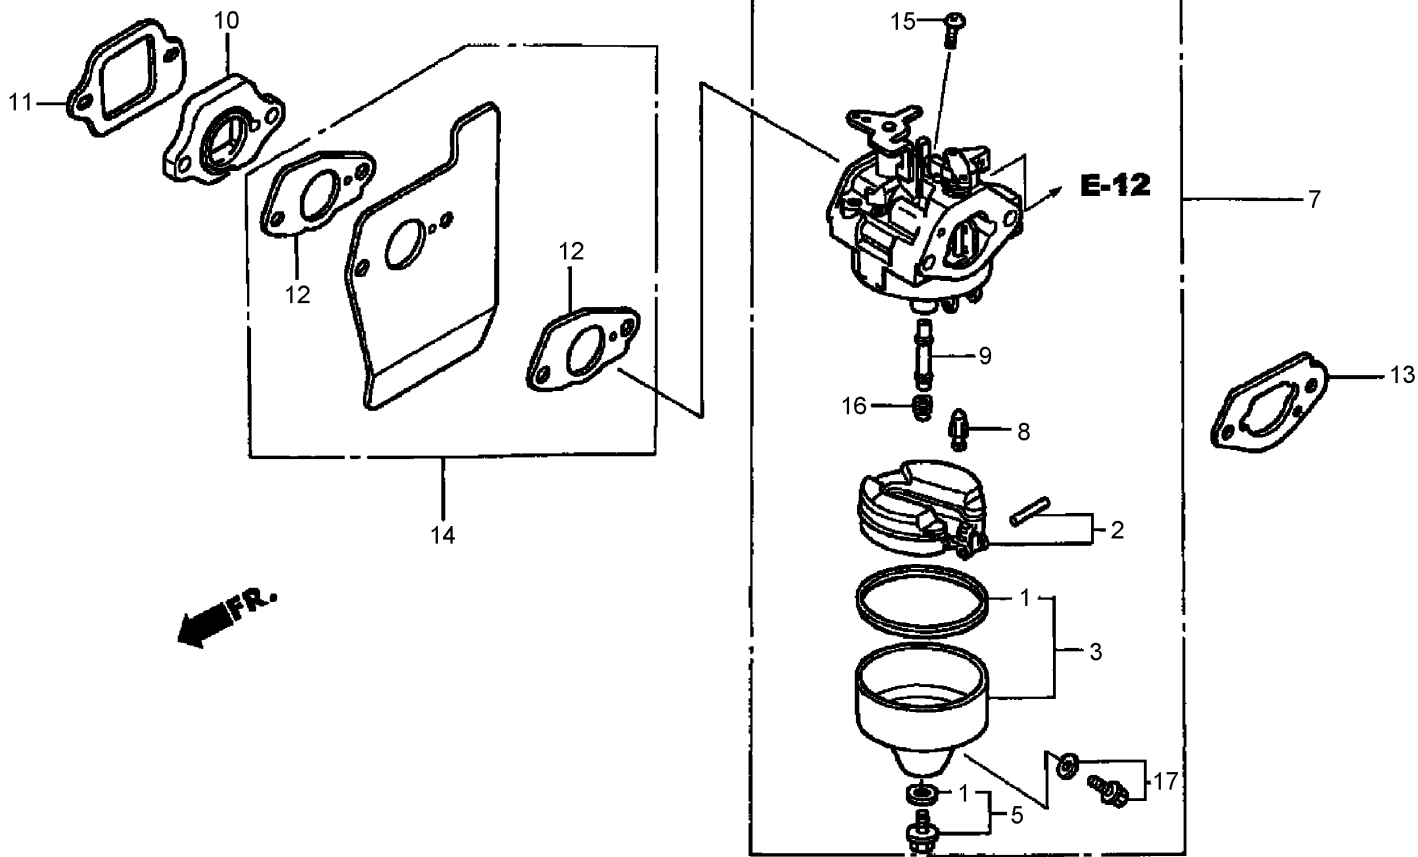 

Carburetor Assembly
Honda GCV160A STL1

Ref	Part No.	Qty.	Description
❶1	16010-883-015	1	Gasket Set
❷2	16013-ZL1-003	1	Float Set
❸3	16015-887-782	1	Chamber Set-Float
❺5	16028-ZE0-005	1	Screw-Set
❷7	16100-Z0L-802	1	Carburetor ASM (Bb62G B)
❸8	16155-ZM0-013	1	Valve-Float (Carburetor No.)
❹9	16166-ZM0-003	1	Nozzle-Main
❺10	16211-ZL8-000	1	Insulator-Carburetor
❻11	16212-ZL8-000	1	Gasket-Insulator
❻12	16221-883-800	2	Gasket-Carburetor
❻13	16228-ZL8-000	1	Gasket-Carburetor (Choke Side)
❻14	19650-ZM0-000	1	Guide-Air
❻15	93500-05006-0H	1	Screw-Pan (5X6)


Ref	Part No.	Qty.	Description
❹16	99101-124-0600	1	Jet-Main (#60)
❹16	99101-124-0620	1	Jet-Main (#62)
❹16	99101-124-0650	1	Jet-Main (#65)
❹17	16024-ZE1-811	1	Screw Set-Drain

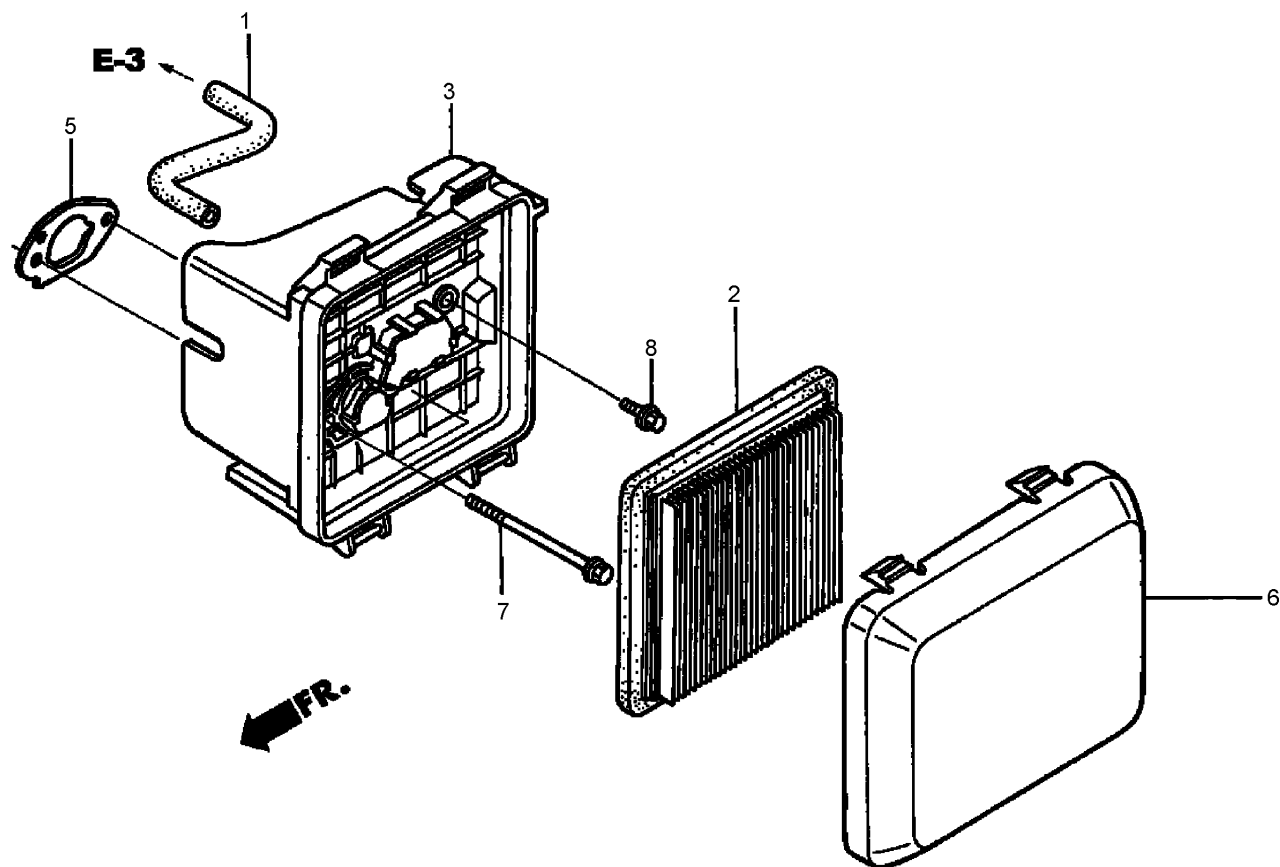 

Air Cleaner Assembly

Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
③1	15721-ZM0-000	1	Tube-Breather				
③2	17211-ZL8-013	1	Element-Cleaner, Air				
③3	17220-ZM0-000	1	Air Cleaner Case ASM				
③5	17228-ZM0-000	1	Gasket-Cleaner, Air				
③6	17231-Z0L-030	1	Cover-Cleaner, Air				
③7	90003-ZM0-000	2	Bolt-Flange (6X86) (Ct200)				
③8	95701-06014-08	1	Bolt-Flange (6X14)				

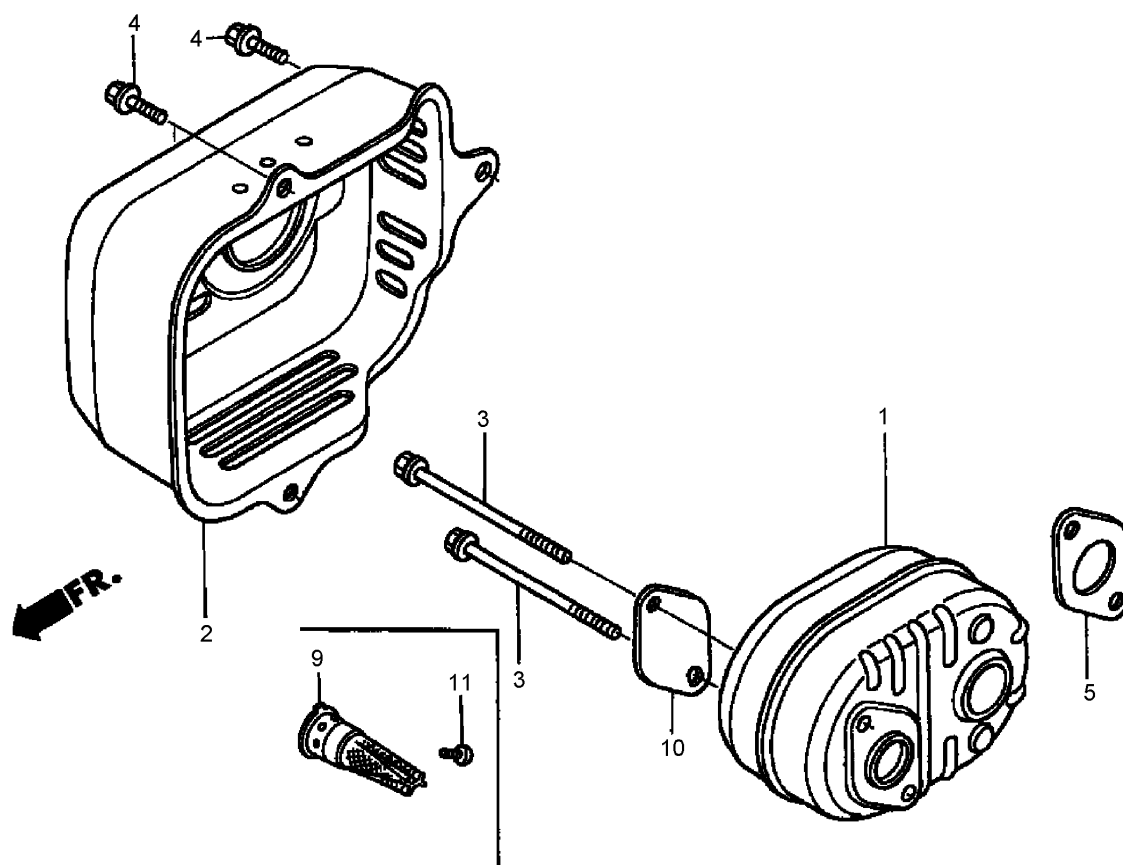 

Muffler Assembly

Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
❸1	18310-ZM0-000	1	Muffler				
❸2	18321-Z0L-J00	1	Protector-Muffler (Cbu)				
❸3	90004-ZL8-000	2	Bolt-Flange (6X79) (Ct200)				
❸4	90013-883-000	3	Bolt-Flange (6X12) (Ct200)				
❸5	18381-ZL8-305	1	Gasket-Muffler				
❸9	18350-ZL8-000	1	Arrester-Spark				
❸10	18356-ZL8-000	1	Plate-Number, Arrester				
❸11	90055-ZE1-000	1	Screw-Tapping (4X6)				

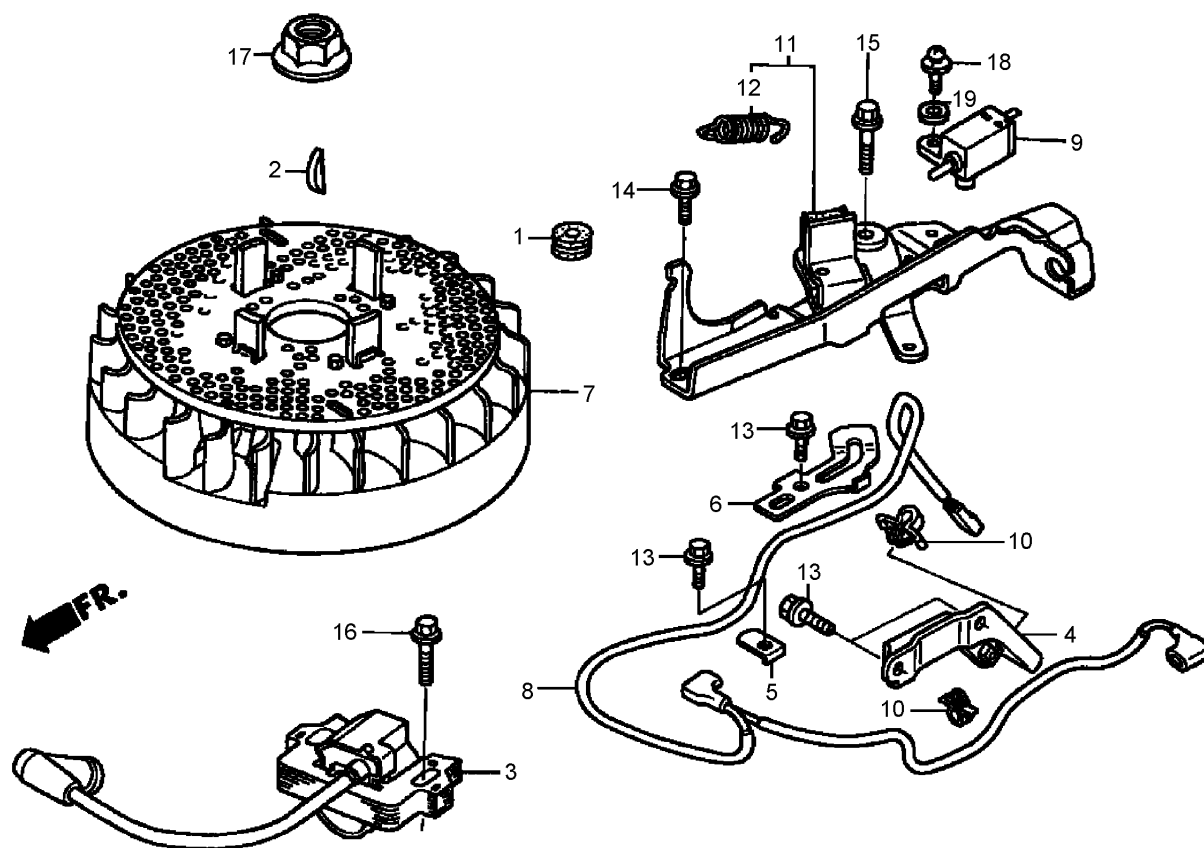 

Flywheel Assembly Honda GCV160A STL1


Ref	Part No.	Qty.	Description
❶1	11344-MB0-000	1	Grommet-Cover, A-Rr
❶2	13331-357-000	1	Key-Woodruff (25X18)
❶3	30500-ZL8-004	1	Ignition Coil ASM
❶4	30547-ZOL-S00	1	Clamp-Wire, Stop Switch
❶5	30548-ZL8-000	1	Clamp-Wire, Stop Switch
❶6	30549-ZL8-000	1	Clamp-Wire
❶7	31105-ZM0-000	1	Flywheel ASM
❶8	32195-ZOL-S00	1	Wire-Switch, Stop
❶9	35120-ZM0-003	1	Engine Stop Switch ASM
❶10	51125-ZOL-003	2	Holder-Wire
❶10	90681-959-003	2	Clip-Cable (A)
❶11	75110-ZOL-800	1	Brake Sub ASM
❶12	75113-ZM0-000	1	Spring-Lever, Brake

Ref	Part No.	Qty.	Description
❶13	90013-883-000	4	Bolt-Flange (6X12) (Ct200)
❶14	90014-952-000	1	Bolt-Flange (6X14)
❶15	90018-ZE1-000	1	Bolt-Flange
❶16	90022-888-010	1	Bolt-Flange (6X20)
❶17	90201-878-003	1	Nut (14Mm)
❶18	93892-04012-00	1	Screw-Washer
❶19	94103-04000	1	Washer-Plain

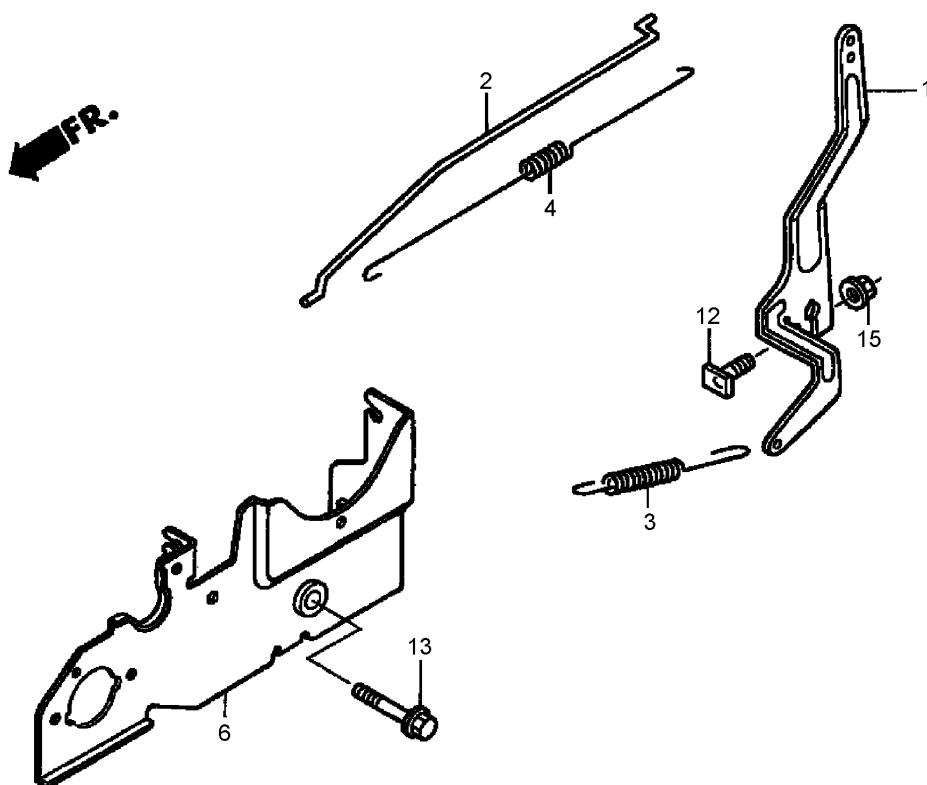 


Control Assembly Honda GCV160A STL1

Ref	Part No.	Qty.	Description				
③1	16551-ZM0-010	1	Arm-Governor				
③2	16555-Z0L-800	1	Rod-Governor				
③3	16561-Z0L-000	1	Spring-Governor				
③4	16562-ZM0-000	1	Spring-Return, Throttle				
③6	16580-Z0L-810	1	Base-Control				
③12	90015-ZE5-010	1	Bolt-Arm, Governor				
③13	90016-ZE8-000	1	Bolt-Flange (6X45)				
③15	94050-06000	1	Nut-Flange (6Mm)				

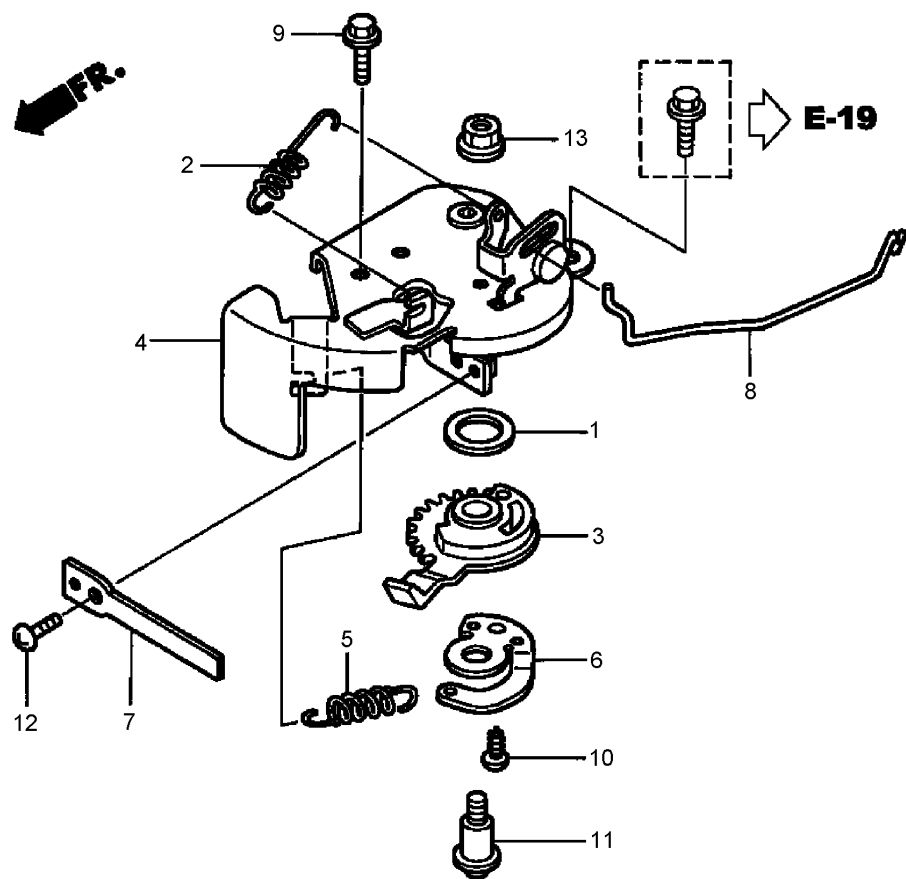 


Choke Base Assembly
Honda GCV160A STL1

Ref	Part No.	Qty.	Description				
❶1	16251-ZOL-800	1	Seal-Lever, Choke				
❷2	16592-ZJ1-000	1	Spring-Return, Cable				
❸3	16612-ZOL-800	1	Lever-Choke				
❹4	16613-ZOL-800	1	Base-Choke				
❺5	16614-ZOL-800	1	Spring-Lever, Choke				
❻6	16616-ZOL-800	1	Hook-Spring, Choke				
❼7	16619-ZOL-800	1	Plate-Choke				
❽8	16632-ZOL-800	1	Rod-Stop				
❾9	90029-888-000	1	Bolt-Flange (6X16)				
❿10	90102-SP1-003	1	Screw-Tapping (4X8) (Po)				
⓫11	90141-KT8-000	1	Screw-Pan (5X19)				
⓬12	93500-04008-0H	1	Screw-Pan (4X8)				
⓭13	94050-05000	1	Nut-Flange (5Mm)				

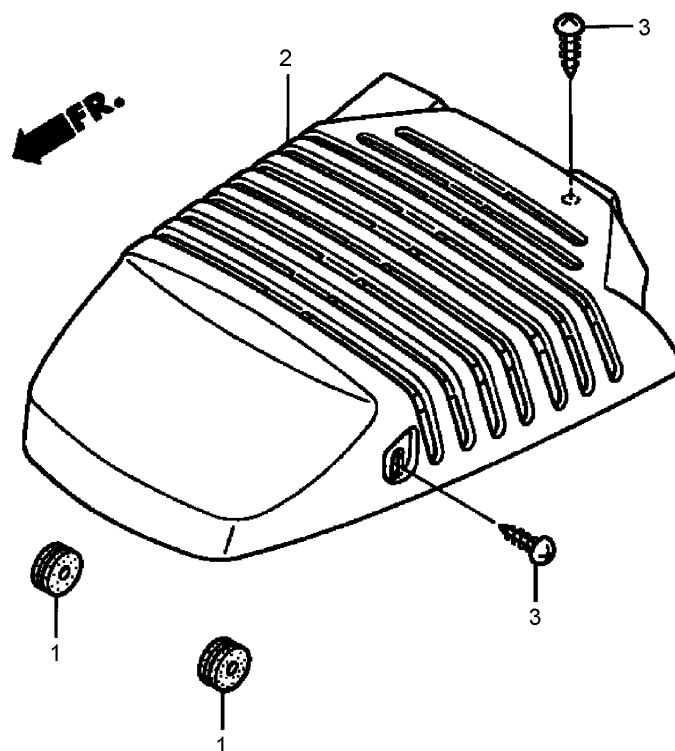 

Top Cover Assembly Honda GCV160A STL1

Ref	Part No.	Qty.	Description
❸1	16613-883-610	2	Grommet-Rod, Choke
❸2	19721-Z0L-000ZA	1	Cover-Top
❸3	90137-SH3-000	3	Screw-Tapping (4X16)

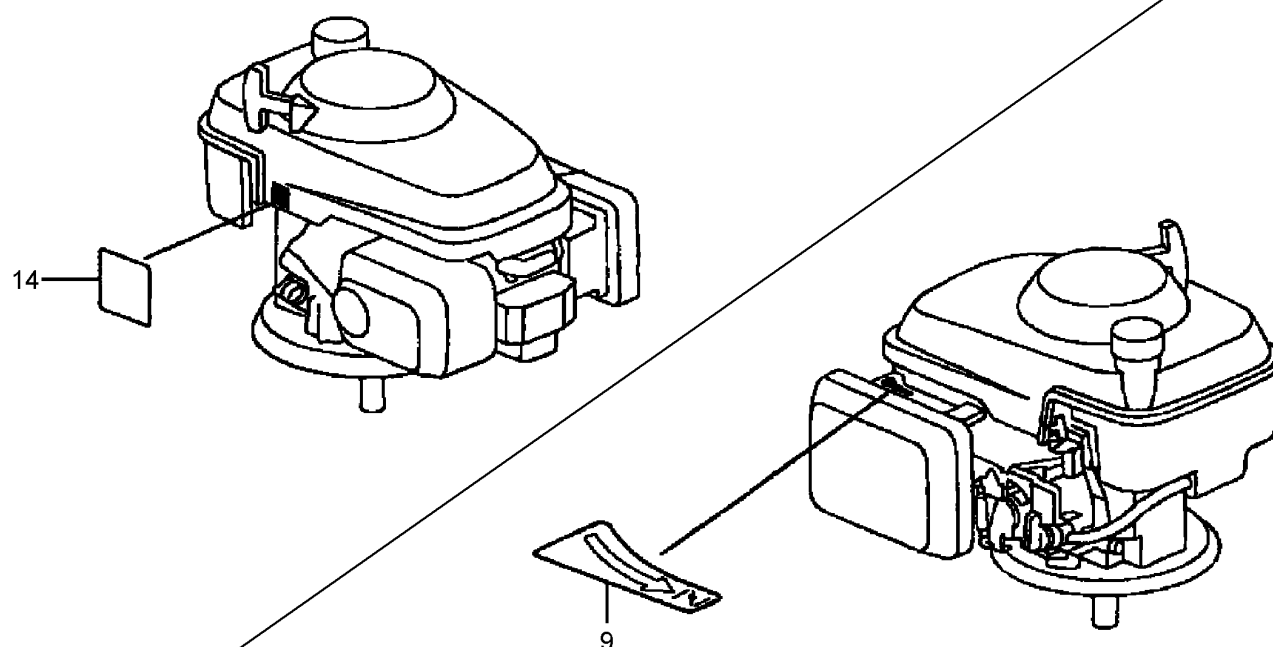 

Label Assembly

Honda GCV160A STL1

Ref	Part No.	Qty.	Description
⑨9	87528-Z0L-V20	1	Mark-Indication, Choke
⑨14	87594-VG3-010	1	Mark-Caution, Oil

Attachments and Accessories

For 10695 - Insight Gold Lawn Mower

Product Name	Model/Part
Lawn Boy Paint	110-8800
Height-of-Cut Kit	110-8801
Replacement Bag	89815
Rear Bag Kit	89913
21 Inch Blade	89914
Cruise Control Kit	89919
Air Filter	89928
Spark Plug	89947
Cup Holder	89951

NOTES

