



21Inch Heavy-Duty Recycler[®] Rear Bagger Lawn Mower

Model No. 22188 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing, Chute and Wheel Assembly	 3	Valve and Camshaft Assembly Kawasaki	
Housing Assembly No. 98-7146	 4	FJ180V-AS30	 17
Front Wheel and Tire Assembly No. 100-2870	 5	Lubrication Equipment Assembly Kawasaki	
Gear Case Assembly No. 74-1861	 6	FJ180V-AS30	 18
Engine and Blade Assembly	 7	Cooling Equipment Assembly Kawasaki	
Fuel Hose and Tank Assembly	 9	FJ180V-AS30	 19
Handle Assembly	 10	Electric Equipment Assembly Kawasaki	
Control Panel Assembly	 11	FJ180V-AS30	 20
Rear Drive and Wheel Assembly	 12	Control Equipment Assembly Kawasaki	
Rear Wheel Assembly No. 100-2860	 13	FJ180V-AS30	 21
Grass Bag Assembly No. 106-0975	 14	Carburetor Assembly Kawasaki FJ180V-AS30	 22
Cylinder and Crankcase Assembly Kawasaki		Air Filter and Muffler Assembly Kawasaki	
FJ180V-AS30	 15	FJ180V-AS30	 23
Piston and Crankshaft Assembly Kawasaki		Starter Assembly Kawasaki FJ180V-AS30	 24
FJ180V-AS30	 16	Label Assembly Kawasaki FJ180V-AS30	 25

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❷ Obtain from your local Kawasaki dealer

- ❸ Not serviced separately

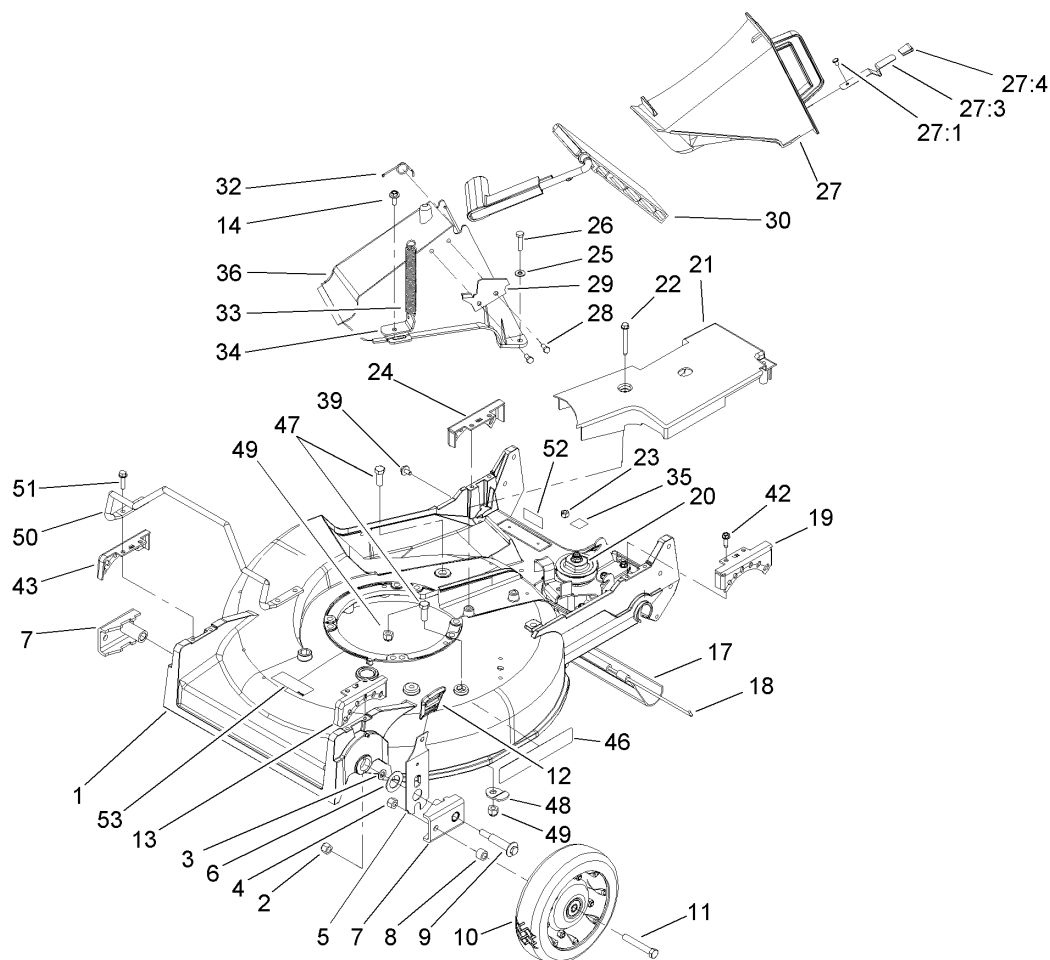


Housing, Chute and Wheel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	98-7146	1	Housing	27	77-0500	1	Discharge Plug ASM
2	3296-6	2	Nut-Lock	27:1	3295-35	1	Rivet-Head, Flat
3	40-1940	2	Washer	27:3	76-4640	1	Latch-Plug, Discharge
4	32152-2	2	Nut-Lock, Cone	27:4	76-4650	1	Grip-Latch
5	110-0537	2	Spring Arm ASM	28	46-8090	2	Screw-Plastite
6	257-3	2	Washer-Thrust	29	93-3154	1	Latch-Plate
7	61-8300	2	Arm-Pivot, Front	30	93-7351	1	Discharge Door ASM
8	52-2480	2	Spacer-Wheel	32	80-3770	1	Retainer-Door
9	27-6232	2	Bolt-Wheel	33	76-4660	1	Spring-Door
10	100-2870	2	Wheel And Tire ASM	34	71-9350	1	Bracket-Spring
11	323-12	2	Screw-HH	35	52-2620	1	Label-Grease
12	110-0549	2	Knob-HOC	36	82-9152	1	Tunnel-Discharge
13	49-8760	1	Quadrant-Front, LH	39	46-6810	1	Screw And Washer ASM
14	46-6811	1	Screw-HWH	42	49-2040	4	Screw-HWHTF
17	112-9989	1	Shield- Trailing	43	49-8770	1	Quadrant-Front, RH
18	33-3208	1	Rod-Shield	46	106-0689	1	Decal
19	49-8740	1	Quadrant-Rear, LH	47	323-6	3	Screw-HH
20	74-1861	1	Gear Case ASM	48	84-8930	3	Shield-Retainer
21	74-1770	1	Cover-Belt	49	3296-39	3	Nut-Lock, NI
22	37-7260	2	Screw-HH	50	99-6722	1	Guard-Engine
23	3296-42	2	Nut-Lock, NI	51	32144-86	4	Screw-HWHTF
24	49-8750	1	Quadrant-Rear, RH	52	92-1779	1	Decal-Warning
25	3256-22	2	Washer-Flat	53	68-7410	1	Decal-Blade
26	321-8	2	Screw-HH				

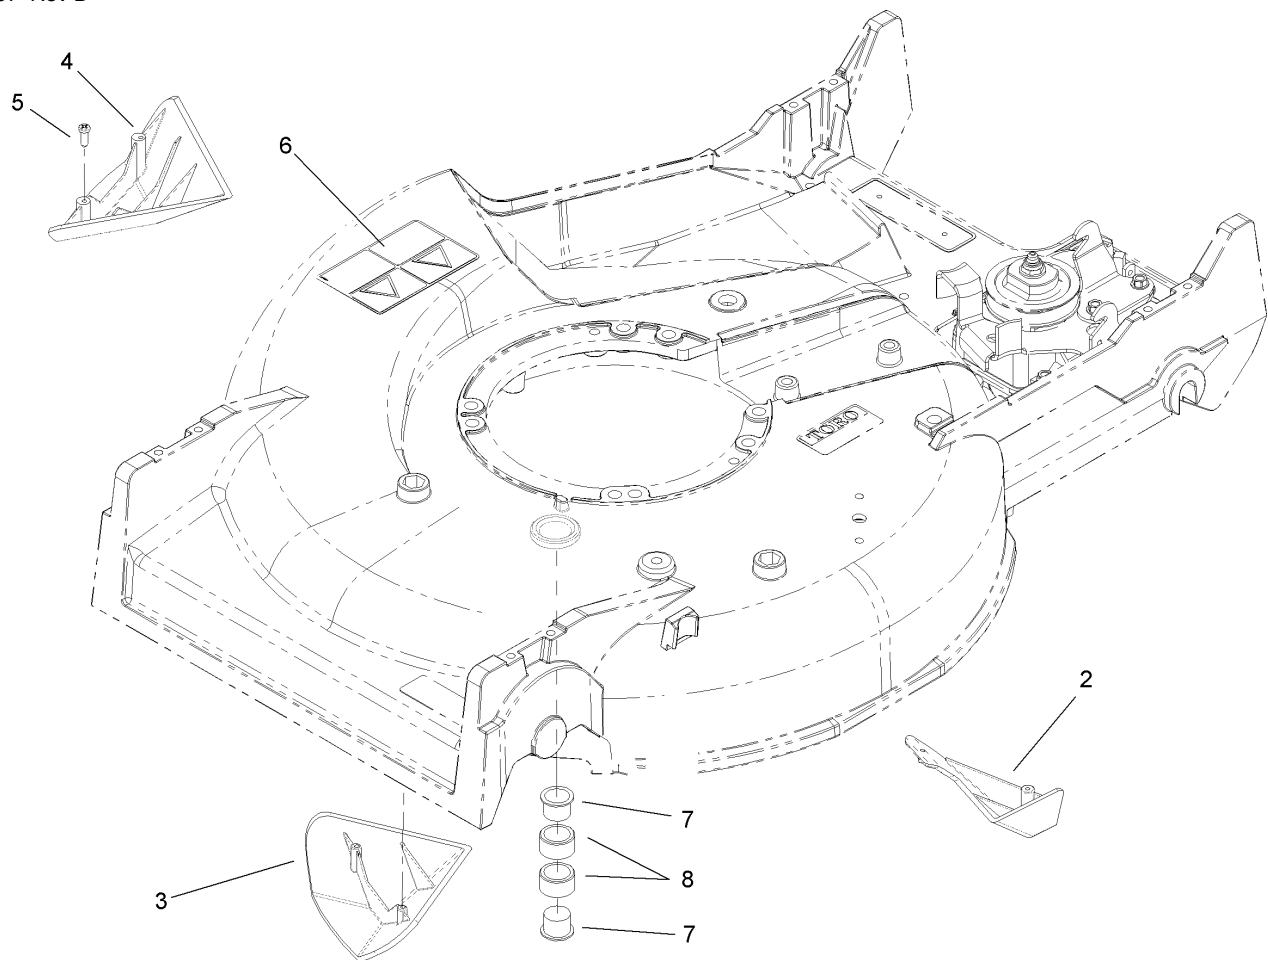


Housing Assembly No. 98-7146

Ref	Part No.	Qty.	Description				
2	92-1750	1	Kicker-Rear				
3	92-1720	1	Kicker-Front				
4	92-1730	1	Kicker-RH				
5	32144-111	6	Screw-PPH				
6	93-6654	1	Decal-Danger				
7	2410-72	2	Caplug				
8	68-9780	2	Bearing				

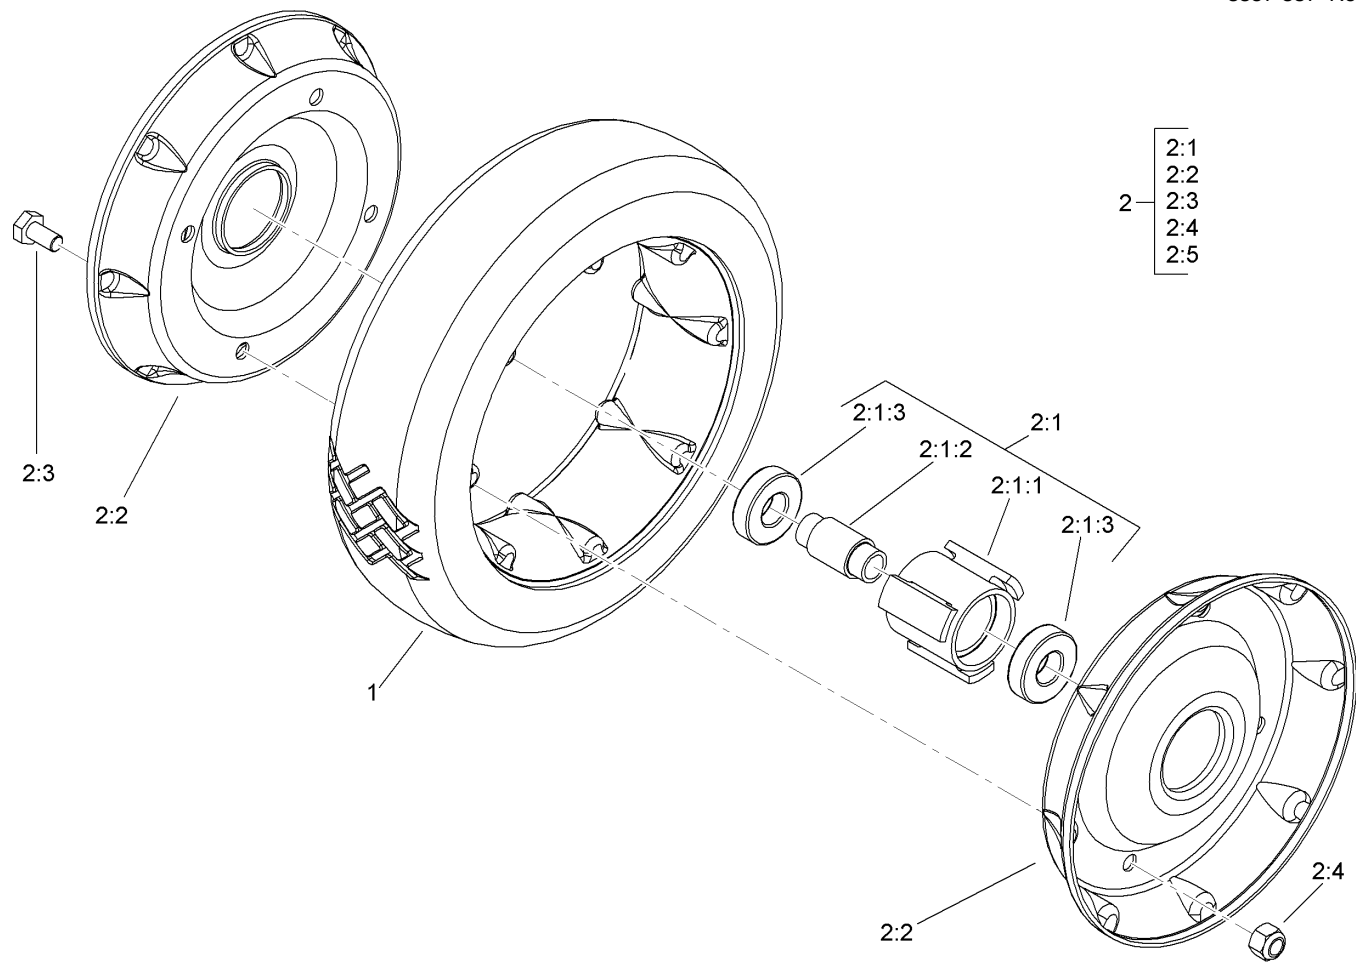


Front Wheel and Tire Assembly No. 100-2870

Ref	Part No.	Qty.	Description				
1	53-7740	1	Tire				
2		1	Wheel ASM				
2:1		1	Hub And Bearing ASM				
2:1:1	52-2410	1	Hub-Bearing				
2:1:2	52-2440	1	Spacer-Bearing				
2:1:3	52-2450	2	Bearing-Wheel				
2:2	53-7780-06	2	Plate-Wheel, Half				
2:3	321-2	4	Screw-HH				
2:4	3296-42	4	Nut-Lock, NI				

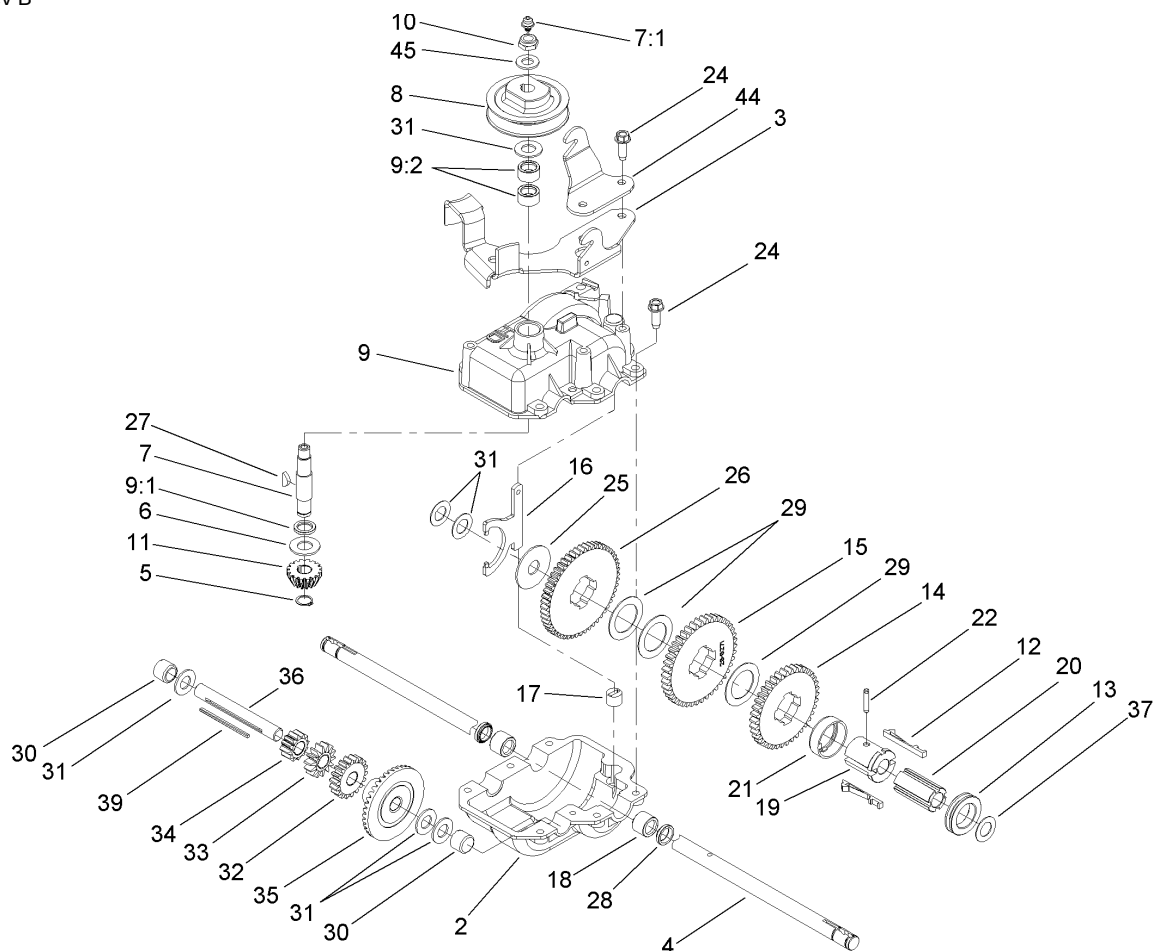

Gear Case Assembly No. 74-1861


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2	74-1920	1	Case-Gear, Lower	24	49-2040	6	Screw-HWHTF
3	49-8461-03	1	Bracket-Guide, Belt	25	29-9690	1	Washer
4	74-1890	1	Shaft-Output	26	46-3560	1	Gear
5	32151-57	1	Ring-Retaining	27	3257-1	2	Key-Woodruff
6	47-2910	1	Washer-Thrust	28	48-2060	2	Bearing-Roller
7	13-5149	1	Input Shaft ASM	29	36-4770	3	Washer
7:1	302-63	1	Zerk	30	252-103	2	Bearing-Closed
8	39-6740	1	Pulley	31	36-4792	4	Washer-Thrust
9	13-9739	1	Upper Gearcase ASM	32	39-6650	1	Gear-18T
9:1	47-7260	1	Seal	33	46-3550	1	Gear-14T
9:2	47-7270	2	Bearing	34	46-3540	1	Gear-12T
10	3296-5	1	Nut-Lock	35	74-1760	1	Gear-Bevel
11	39-6660	1	Pinion-Bevel	36	53-7950	1	Shaft-Intermediate
12	29-9330	2	Key-Shift	37	36-4780	3	Washer
13	29-9340	1	Collar-Shift	39	39-7842	1	Key
14	42-4740	1	Gear-38T	44	74-1750-03	1	Bracket-Engage, Traction
15	29-9271	1	Gear-42T	45	3256-45	1	Washer-Flat
16	60-8870	1	Yoke-Shift				
17	29-9570	1	Bushing-Yoke				
18	47-6730	2	Seal-Oil				
19	55-8010	1	Sleeve-Gear				
20	39-6720	1	Sleeve				
21	55-8020	1	Retainer-Key				
22	3285-19	1	Pin-Groove				

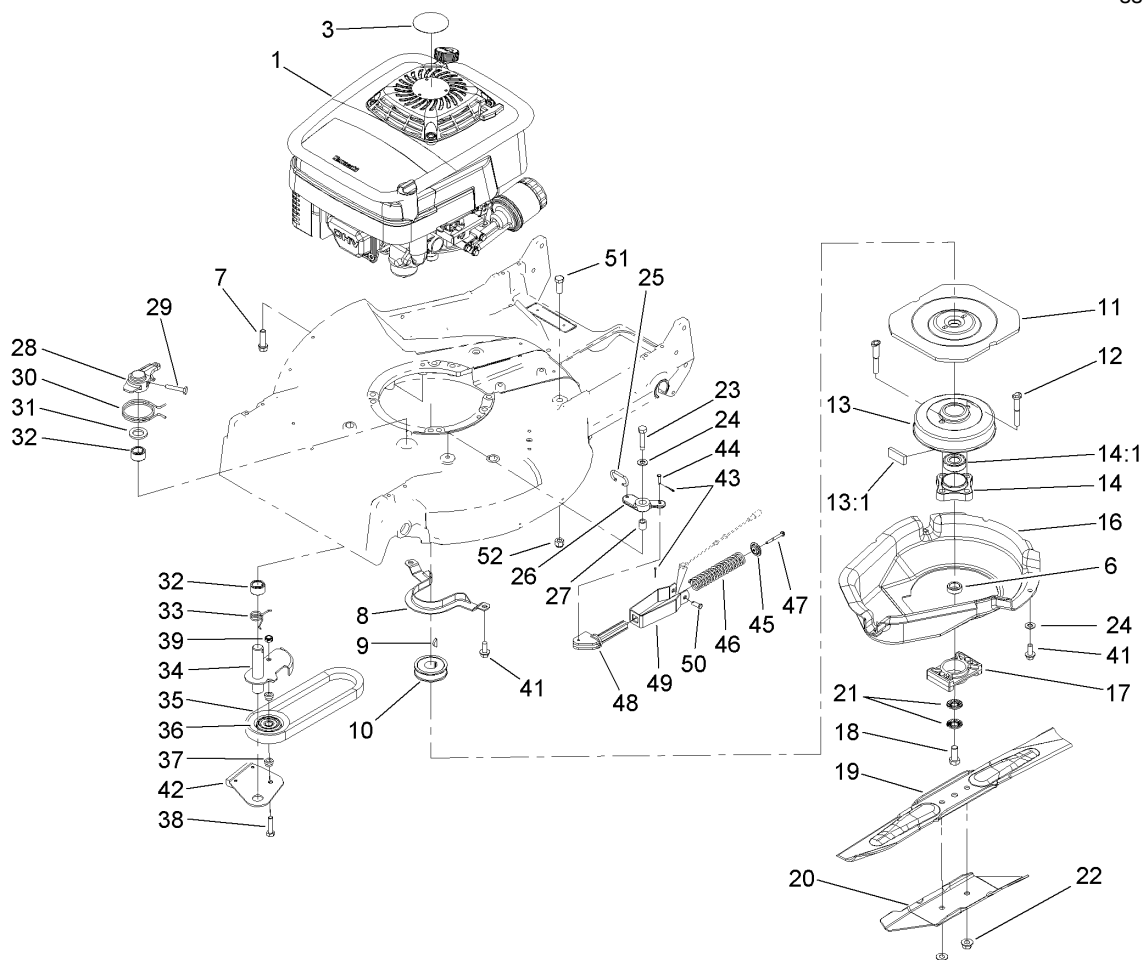

Engine and Blade Assembly


Ref	Part No.	Qty.	Description
1	110-5048	1	Engine-Kawasaki
3	112-9974	1	Decal
6	107-4058	1	Spacer-Output Shaft
7	95-1727	4	Screw-Taptite
8	66-0570-03	1	Bracket-Guide, Belt
9	3257-17	1	Key-Woodruff
10	56-6180	1	Pulley-Driver
11	56-6160-03	1	Flywheel-BBC
12	42-3190	2	Bolt-Blade
13	94-9431	1	Brake Drum ASM
13:1	52-3480	2	Dampener-Vibration
14	42-6890	1	Hub ASM
14:1	100-1048	2	Bearing-Ball
16	46-5693	1	Shield
17	107-4275	1	Spacer-Blade
18	3212-4	1	Screw-HH
19	91-2256-03	1	Blade-21 Inch
20	91-2255-03	1	Stiffener-Blade
21	1-603610	2	Washer-Spring
22	54-9190	2	Nut-Lock
23	32104-107	1	Screw-HH
24	3256-23	3	Washer-Flat
25	49-2810	1	Link-Control
26	49-7960	1	Bellcrank

Ref	Part No.	Qty.	Description
27	49-7950	1	Sleeve-Bellcrank
28	49-2820	1	Lever
29	32104-96	1	Screw-HH
30	49-7970	1	Spring-Torsion
31	70-1160	1	Washer
32	68-9780	2	Bearing
33	85-6880	1	Spring-Torsion
34	84-9130	1	Arm-Idler
35	42-0884	1	V-Belt
36	46-5650	1	Pulley-Idler
37	46-5631	2	Hub-Pulley, Idler
38	322-6	1	Screw-HH
39	3296-47	1	Nut-Lock, NI
41	32144-70	3	Screw-HWHTF
42	84-9180	1	Brake Plate ASM
43	3272-1	2	Pin-Cotter
44	84-9050	1	Pin-Spring
45	65-5280	1	Retainer-Spring
46	84-9100	1	Spring
47	46-7040	1	Screw-HWHTF
48	106-0842	1	Guide-Spring
49	107-4087-03	1	Bracket-Spring
50	84-9040	1	Pin-Cable
51	323-6	2	Screw-HH

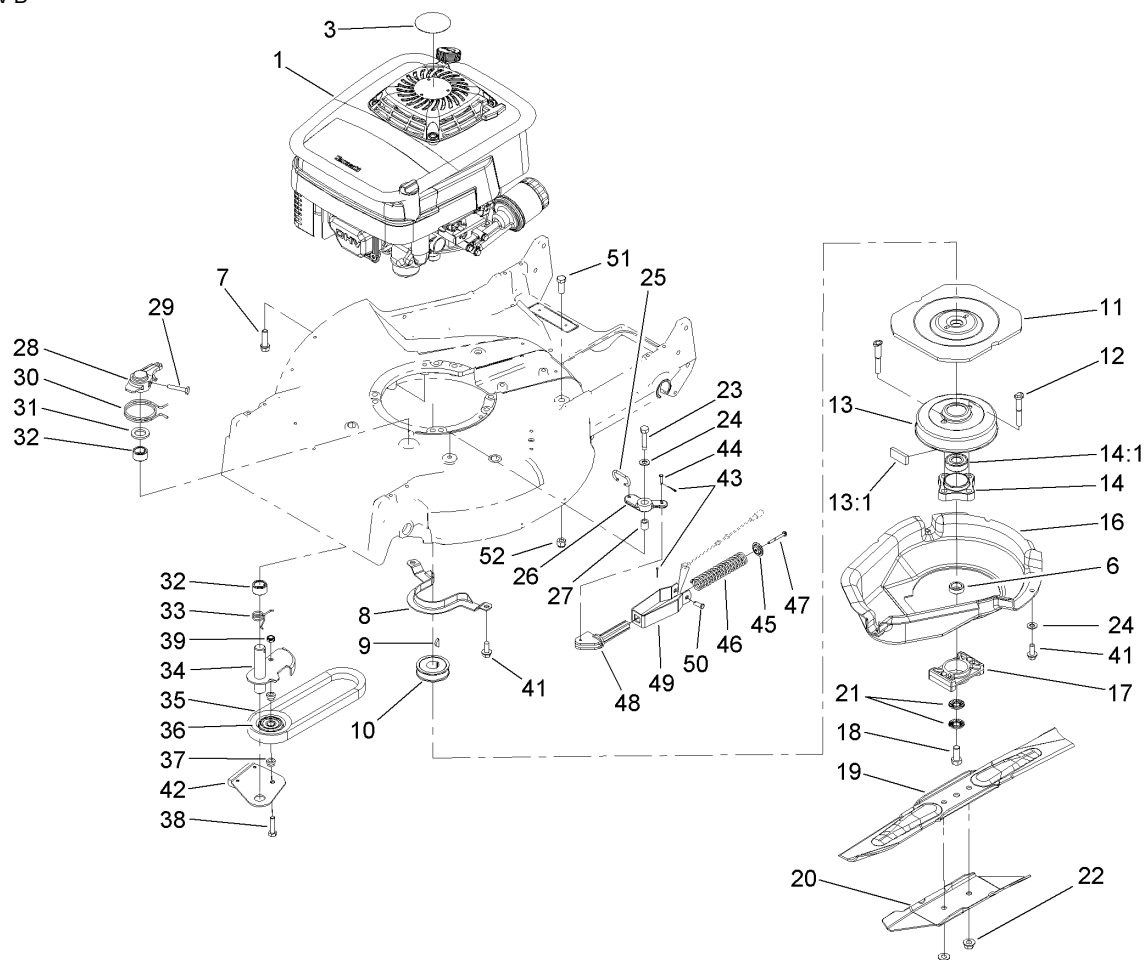


Engine and Blade Assembly (continued)

Ref	Part No.	Qty.	Description
52	3296-39	2	Nut-Lock, NI

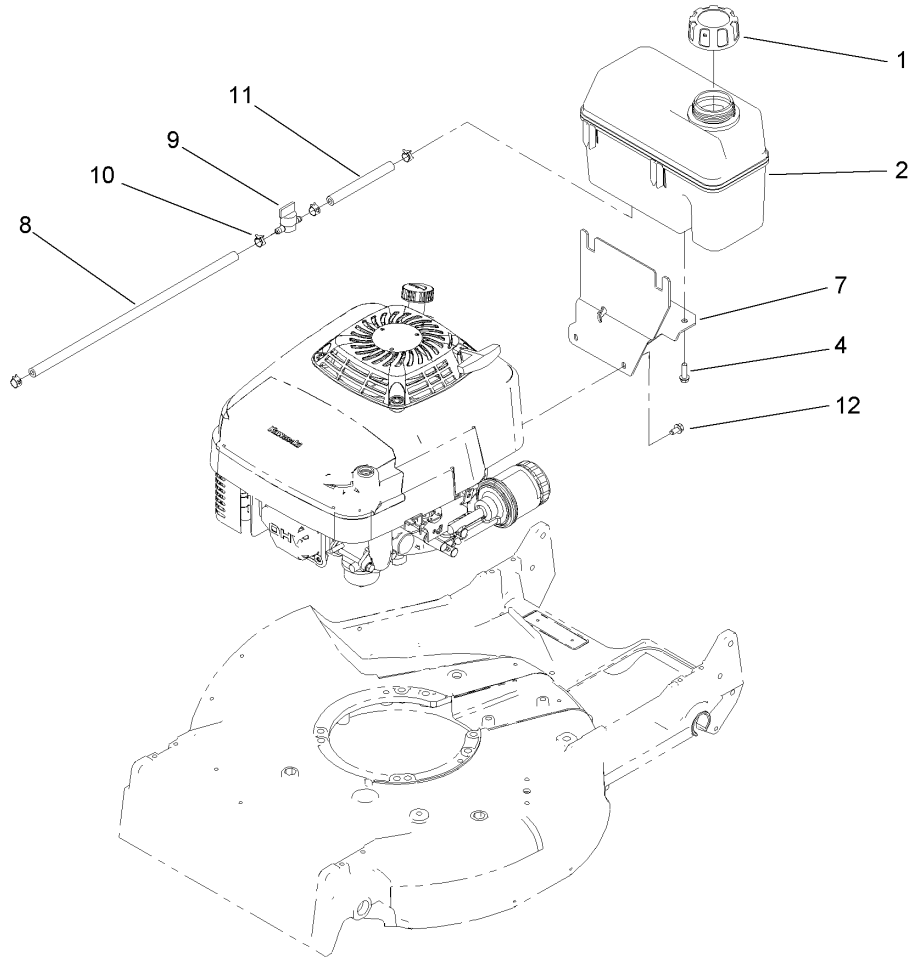


Fuel Hose and Tank Assembly

Ref	Part No.	Qty.	Description				
1	93-7198	1	Gas Cap ASM				
2	106-0625	1	Tank-Fuel				
4	46-8091	2	Screw-HWH				
7	110-4950-03	1	Tank Mount ASM				
8	109-0296	1	Hose-Fuel				
9	1-603770	1	Valve-Fuel				
10	2412-98	4	Clamp				
11	109-0650	1	Hose-Fuel				
12	104-2628	3	Screw-HWH				

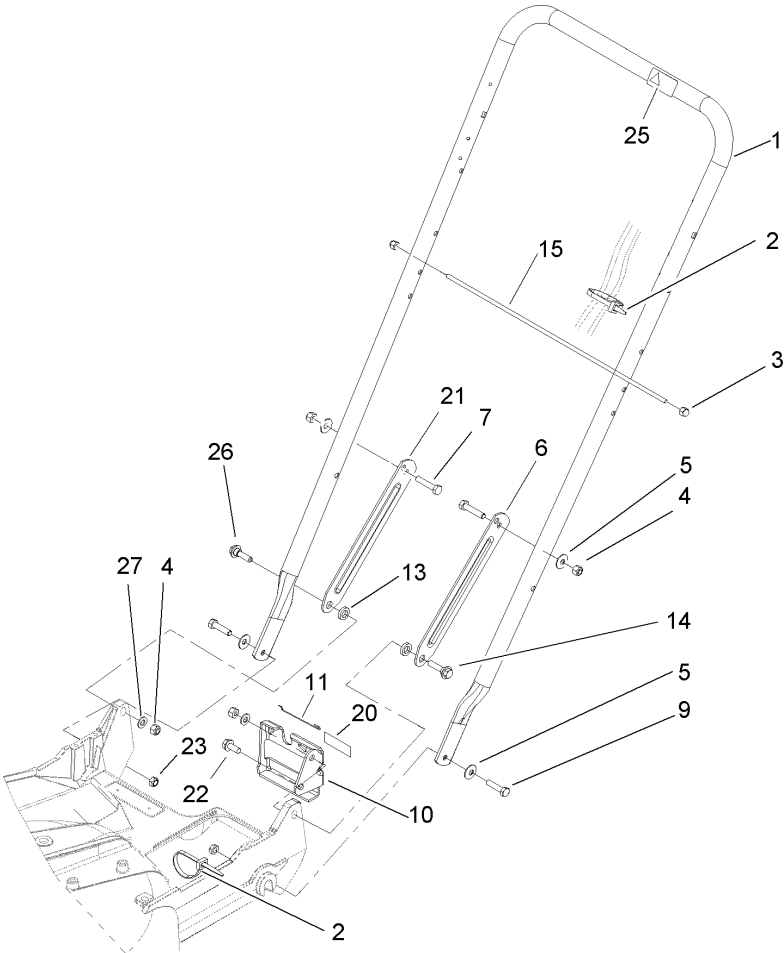

Handle Assembly


Ref	Part No.	Qty.	Description				
1	98-2385-03	1	Handle				
2	3290-378	3	Tie-Cable				
3	32111-7	2	Nut-Cap				
4	3296-29	4	Nut-Lock, NI				
5	3290-456	4	Washer-Belleville				
6	100-3298-03	1	Latch-Handle, LH				
7	322-7	2	Screw-HH				
9	322-6	2	Screw-HH				
10	74-1741	1	Bracket-Adjustment, Traction				
11	46-7030	1	Retainer-Cable				
13	3-3287	2	Spacer-Latch, Handle				
14	27-7210	1	Screw-Shoulder				
15	48-2810	1	Rod-Support, Bag				
20	74-1970	1	Decal-Position, Gear				
21	100-3297-03	1	Latch-Handle, RH				
22	32144-70	1	Screw-HWHTF				
23	3296-47	2	Nut-Lock, NI				
25	98-4387	1	Decal-Protection, Ear				
26	27-7211	1	Screw-Shoulder				
27	3256-23	2	Washer-Flat				

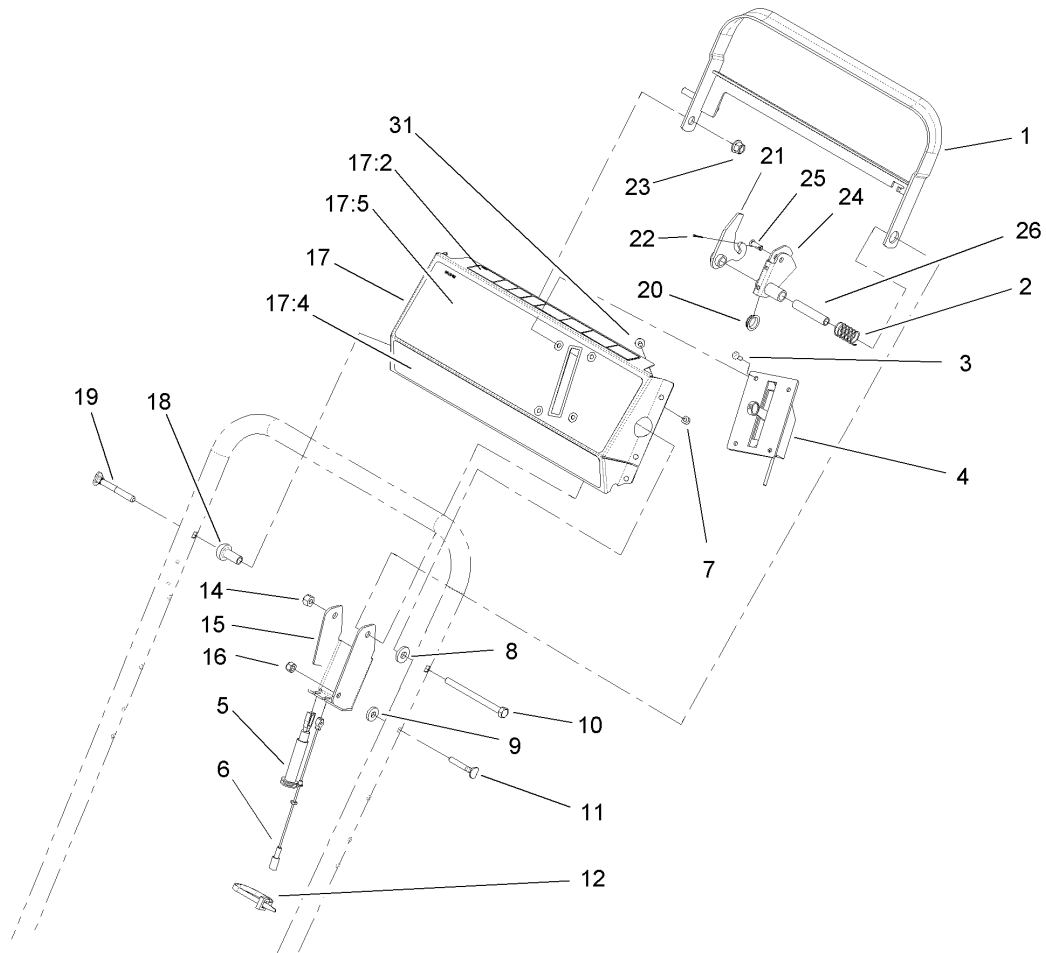

Control Panel Assembly

Ref	Part No.	Qty.	Description
1	84-8940-03	1	Bar-Control
2	85-6750	1	Spring-Control
3	3250-12	4	Screw-PPH
4	106-0857	1	Control-Throttle
5	84-9120	1	Cable-Traction
6	84-9110	1	Cable-Clutch
7	3296-2	4	Nut-Lock
8	71-9310	1	Spacer
9	71-9320	1	Spacer
10	322-19	1	Screw-HH
11	46-6430	1	Screw-Handle
12	3290-378	1	Tie-Cable
14	3296-29	1	Nut-Lock, NI
15	92-1778-03	1	Bracket-Control
16	3296-42	1	Nut-Lock, NI
17	14-7709	1	Panel ASM
17:2	104-8582	1	Decal-Panel, Danger
17:4	106-0771	1	Decal-Panel
17:5	107-4098	1	Decal-Panel, Proline
18	49-1631	1	Spacer-Support
19	17-9427	1	Screw
20	86-9320	1	Bushing-Flange
21	84-9000	1	Lever-Traction
22	3272-1	1	Pin-Cotter


Ref	Part No.	Qty.	Description
23	3296-58	1	Nut-Lock, NI
24	84-8990	1	Lever-BBC
25	84-9040	1	Pin-Cable
26	84-9030	1	Spacer-Bracket, Control
31	32104-76	6	Screw

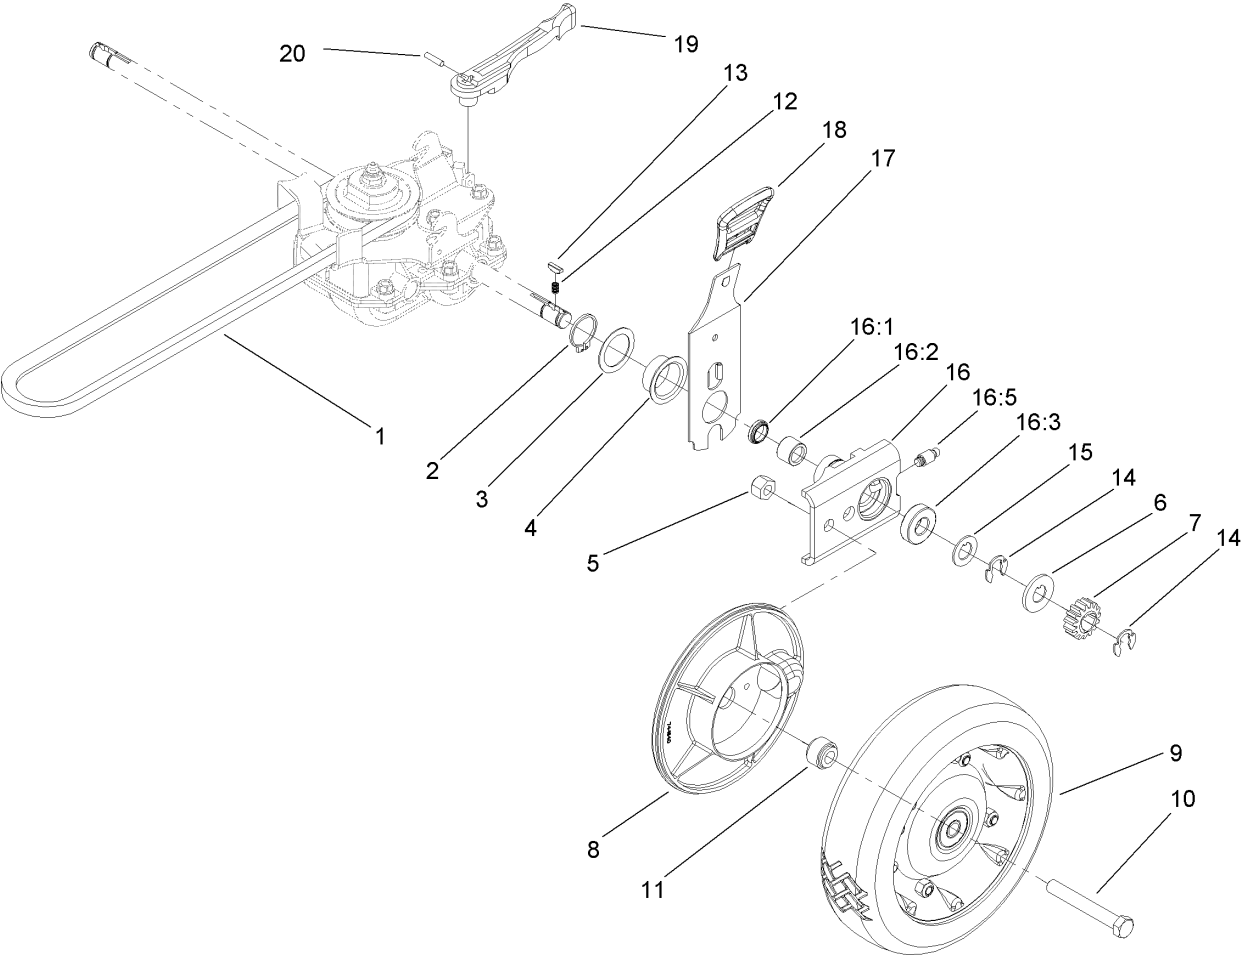

Rear Drive and Wheel Assembly


Ref	Part No.	Qty.	Description
1	36-8070	1	V-Belt
2	32151-36	2	Ring-Retaining
3	74-1810	2	Washer
4	48-2170	2	Cap-End
5	32152-2	2	Nut-Lock, Cone
6	62-3830	2	Washer-Thrust, Outer
7	39-9160	2	Gear-Pinion
8	74-1640	2	Cover-Wheel
9	100-2860	2	Wheel And Tire ASM
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Cover, Wheel
12	39-9650	2	Spring-Compression
13	612066	2	Key
14	32151-68	4	Ring-Retaining
15	49-7700	2	Washer-Thrust, Outer
16	74-1851	2	Pivot Arm ASM
16:1	47-6730	1	Seal-Oil
16:2	48-2060	1	Bearing-Roller
16:3	52-2450	1	Bearing-Wheel
16:5	92-6316	1	Zerk
17	110-0538	2	Rear Spring Arm ASM
18	110-0549	2	Knob-HOC
19	74-1960	1	Lever-Shift
20	32121-99	1	Pin-Coil

Ref	Part No.	Qty.	Description
●99	106-0975	1	Grass Bag ASM

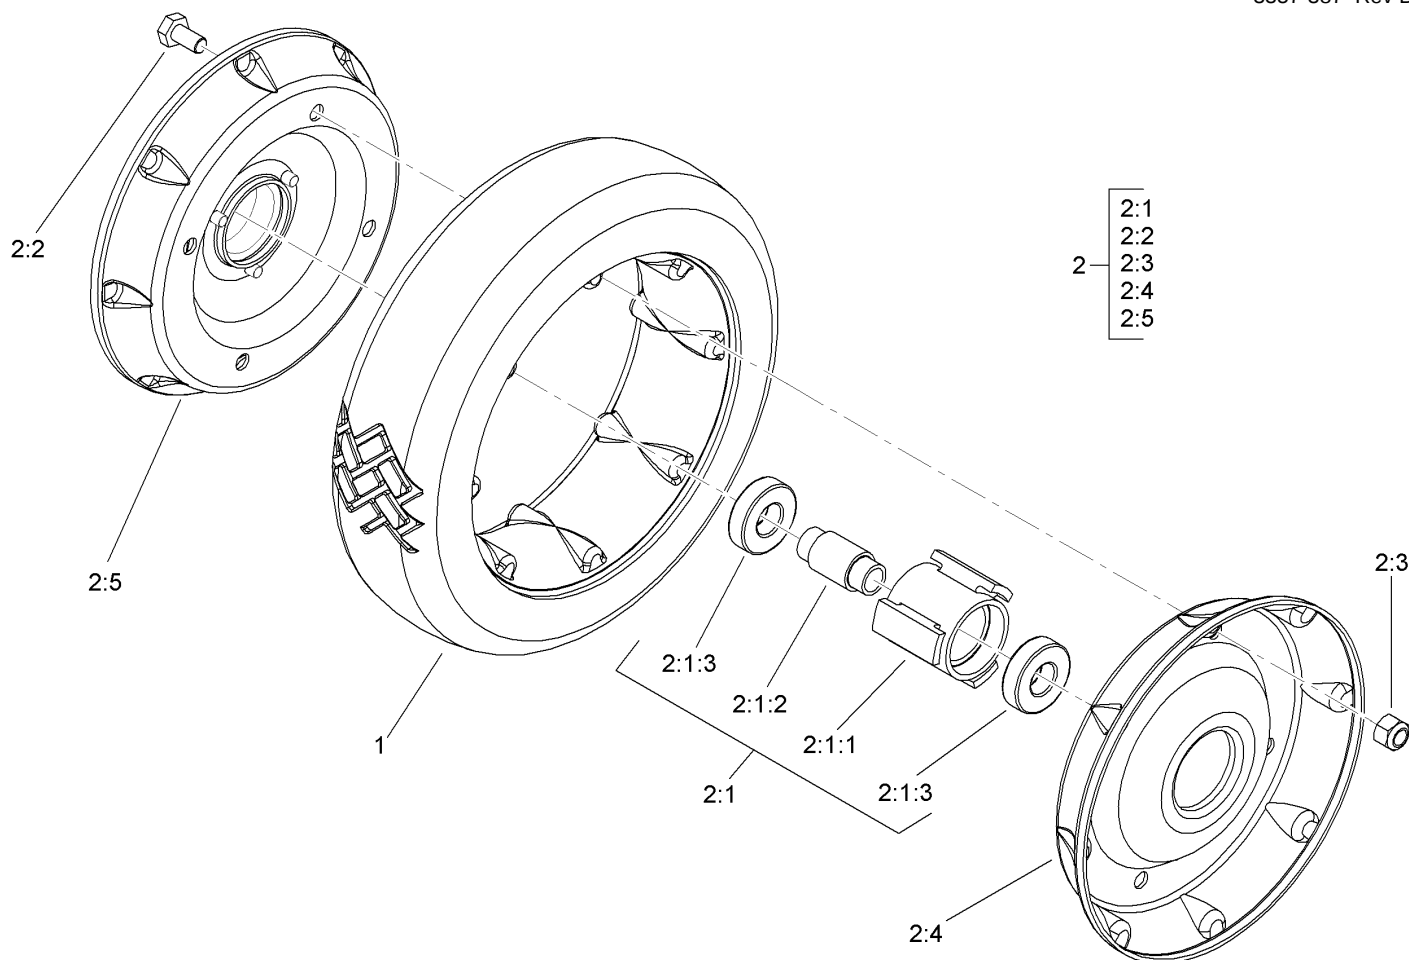


Rear Wheel Assembly No. 100-2860

Ref	Part No.	Qty.	Description				
1	53-7740	1	Tire				
2		1	Wheel ASM				
2:1		1	Hub And Bearing ASM				
2:1:1	52-2410	1	Hub-Bearing				
2:1:2	52-2440	1	Spacer-Bearing				
2:1:3	52-2450	2	Bearing-Wheel				
2:2	321-2	4	Screw-HH				
2:3	3296-42	4	Nut-Lock, NI				
2:4	53-7780-06	1	Plate-Wheel, Half				
2:5	92-4957-06	1	Wheel Half And Gear ASM				

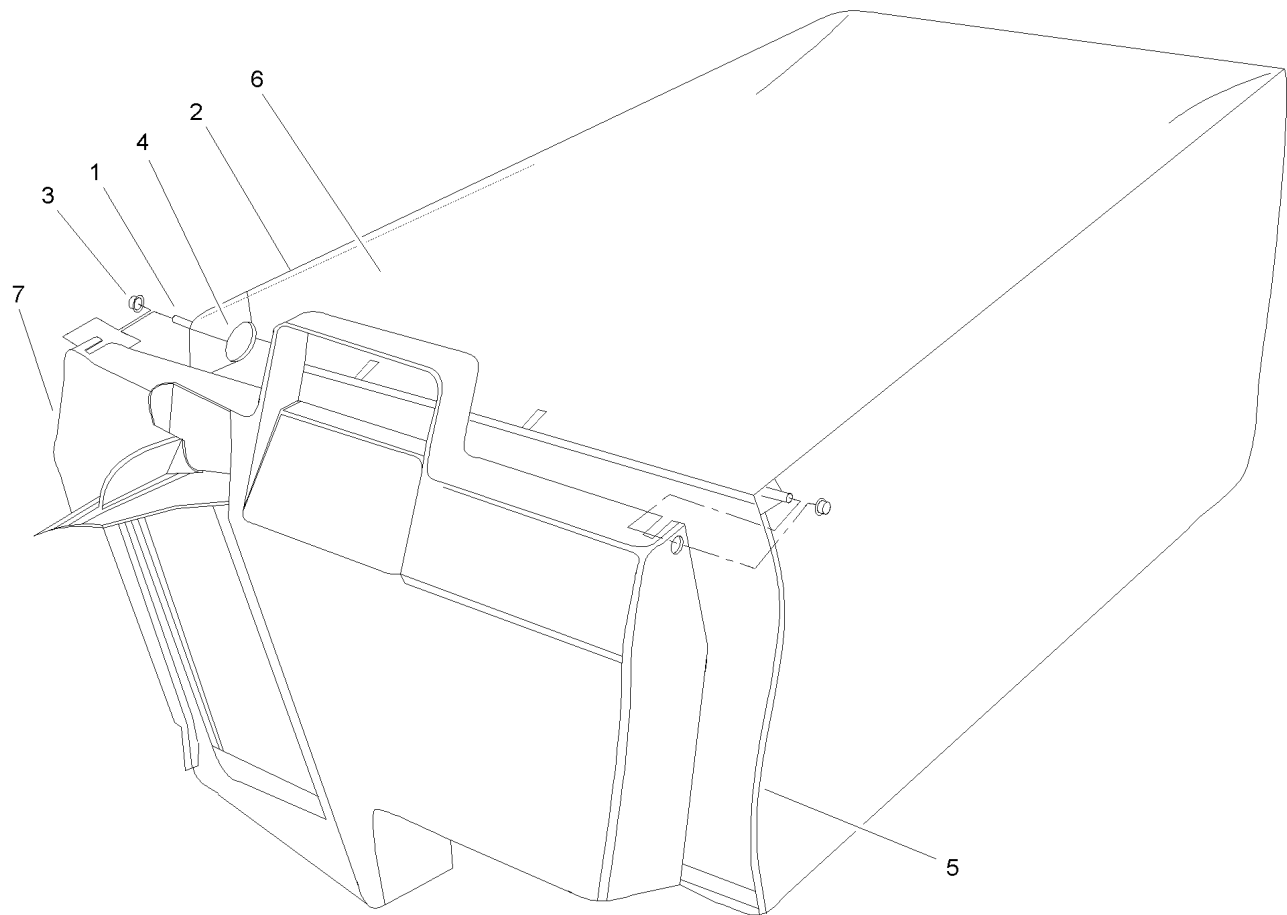


Grass Bag Assembly No. 106-0975

Ref	Part No.	Qty.	Description				
1	33-4820	1	Hinge-Door, Bag				
2	42-4030	1	Frame-Bag, Upper				
3	3290-422	2	Nut-Push				
4	36-6910	2	Spring				
5	42-4020	1	Frame-Bag				
6	106-0926	1	Bag-Grass				
7	48-2840	1	Door-Bag, Grass				

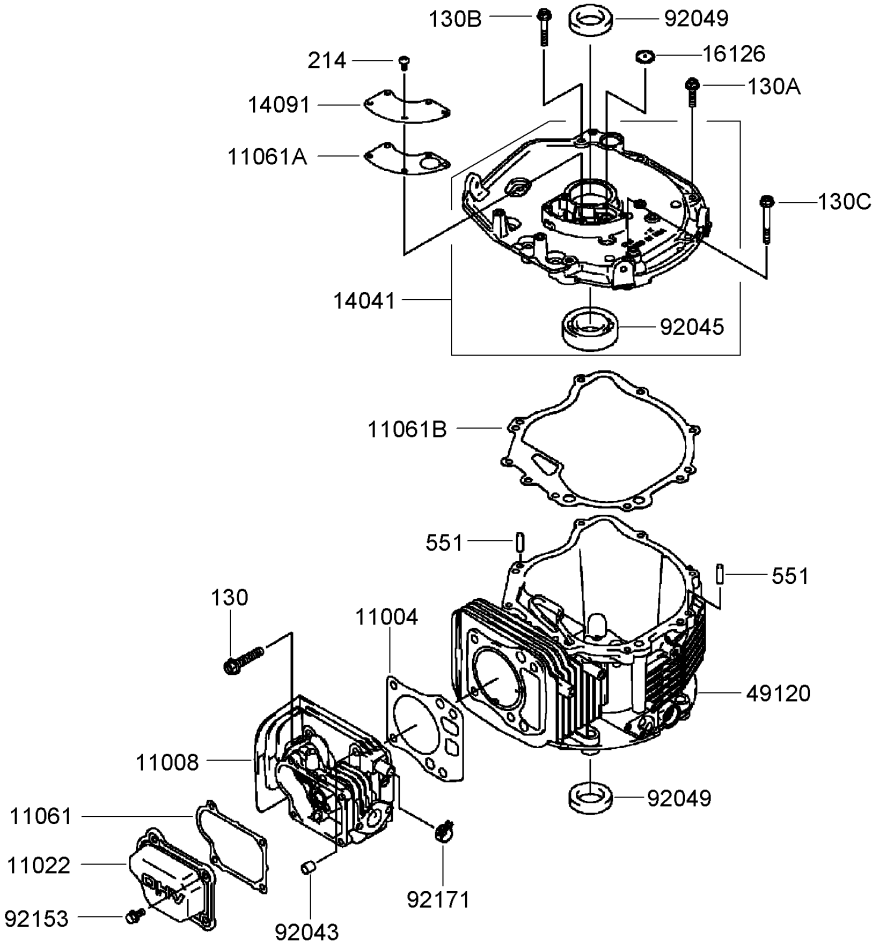


Cylinder and Crankcase Assembly
Kawasaki FJ180V-AS30

Ref	Part No.	Qty.	Description				
❶11004	11004-7020	1	Gasket-Head				
❶11008	11008-7025	1	Head-Cylinder				
❶11022	11022-7005	1	Case-Rocker				
❶11061	11061-7023	1	Gasket-Case, Rocker				
❶11061A	11061-7031	1	Gasket-Breather				
❶11061B	11061-7060	1	Gasket-Cover, Crankcase				
❶14041	14041-7010	1	Cover				
❶14091	14091-7010	1	Cover-Breather				
❶16126	16126-7014	1	Valve-Breather				
❶49120	49120-7082	1	Crankcase				
❶92043	92043-7001	2	Pin				
❶92045	92045-1207	1	Bearing-Ball (62/28)				
❶92049	92049-7008	2	Seal-Oil (28-44-9 T C)				
❶92153	92153-7043	4	Bolt (6X12)				
❶92171	92171-7024	1	Clamp				
❶130	130CA0840	4	Bolt-Flanged (8X40)				
❶130A	130G0625	7	Bolt-Flanged (6X25)				
❶130B	130G0635	1	Bolt-Flanged (6X35)				
❶130C	130G0650	1	Bolt-Flanged,6X50				
❶214	214B0510	5	Screw-Pan (5X10)				
❶551	551A0612	2	Pin-Dowel (6X12)				

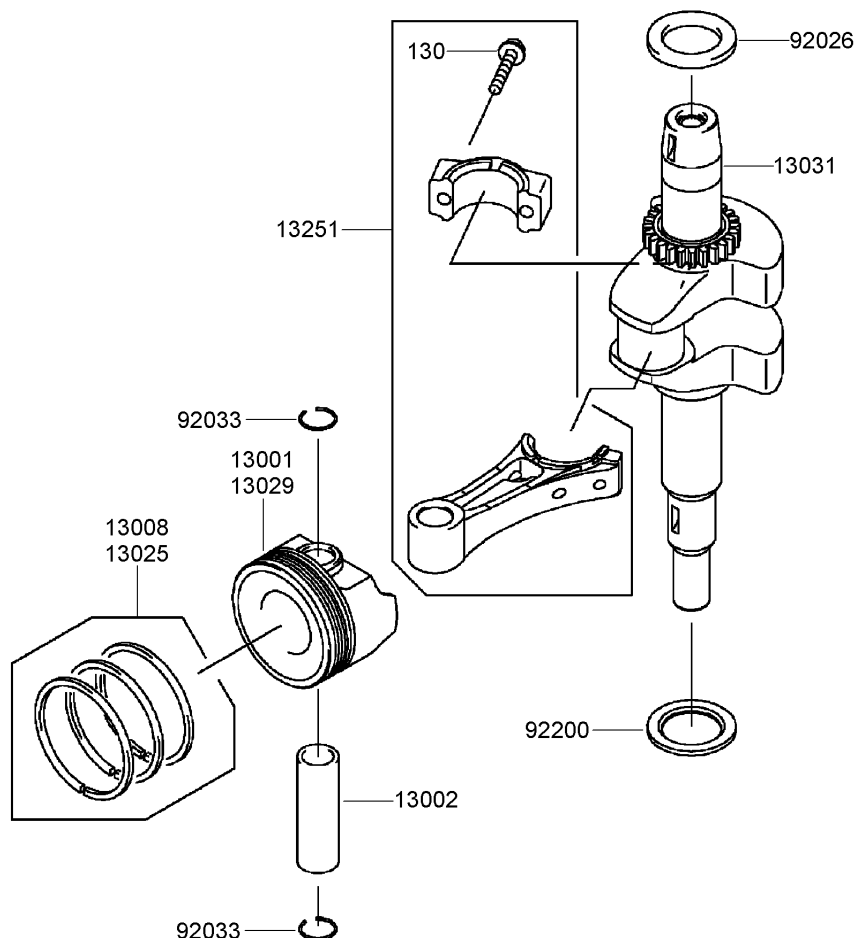


Piston and Crankshaft Assembly Kawasaki FJ180V-AS30

Ref	Part No.	Qty.	Description				
③13001	13001-7022	1	Piston-Engine				
③13002	13002-7001	1	Pin-Piston				
③13008	13008-7002	1	Ring Set-Piston				
③13025	13025-7006	1	Ring Set-Piston (L 0.50)				
③13029	13029-7005	1	Piston-Engine (L 0.50)				
③13031	13031-7077	1	Crankshaft				
③13251	13251-7011	1	Connecting Rod ASM				
③92026	92026-7020	1	Spacer				
③92033	92033-7002	2	Ring-Snap				
③92200	92200-7042	1	Washer (28X41.5X2.5)				
③130	130G0630	2	Bolt-Flanged (6X30)				

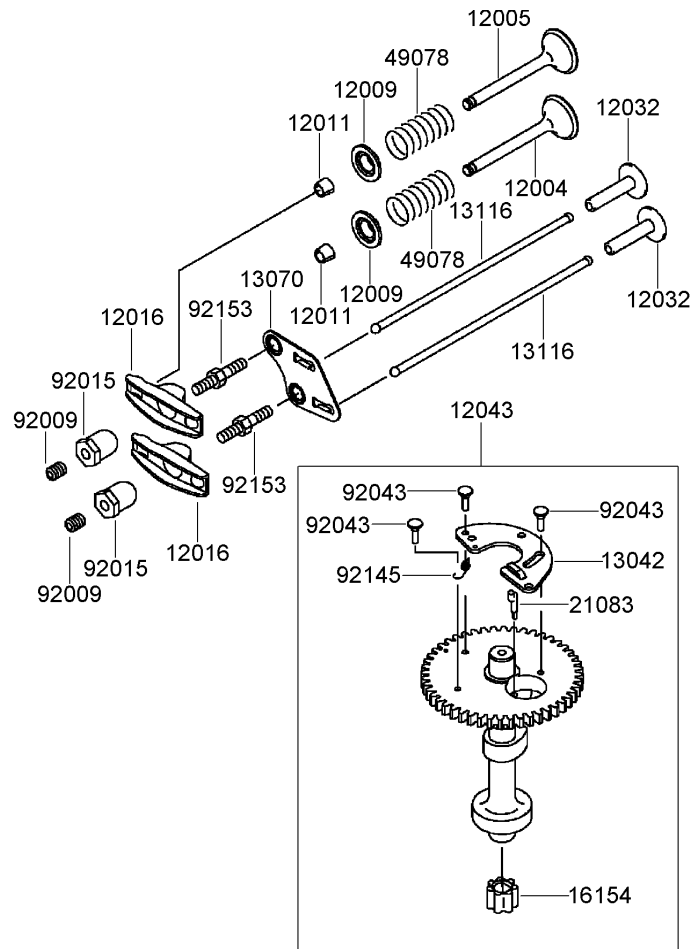


Valve and Camshaft Assembly
Kawasaki FJ180V-AS30

Ref	Part No.	Qty.	Description				
❶12004	12004-7005	1	Valve-Intake				
❶12005	12005-7006	1	Valve-Exhaust				
❶12009	12009-7001	2	Retainer-Spring, Valve				
❶12011	12011-2056	4	Collet				
❶12016	12016-7008	2	Arm-Rocker				
❶12032	12032-7001	2	Tappet				
❶12043	12043-7005	1	Camshaft Valve ASM				
❶13042	13042-7006	1	Weight				
❶13070	13070-7009	1	Guide				
❶13116	13116-7003	2	Rod-Push				
❶16154	16154-7004	1	Rotor-Pump				
❶21083	21083-7009	1	Arm				
❶49078	49078-7001	2	Spring-Valve, Engine				
❶92009	92009-2341	2	Screw				
❶92015	92015-2253	2	Nut				
❶92043	92043-7006	3	Pin				
❶92145	92145-7016	1	Spring				
❶92153	92153-7019	2	Bolt				

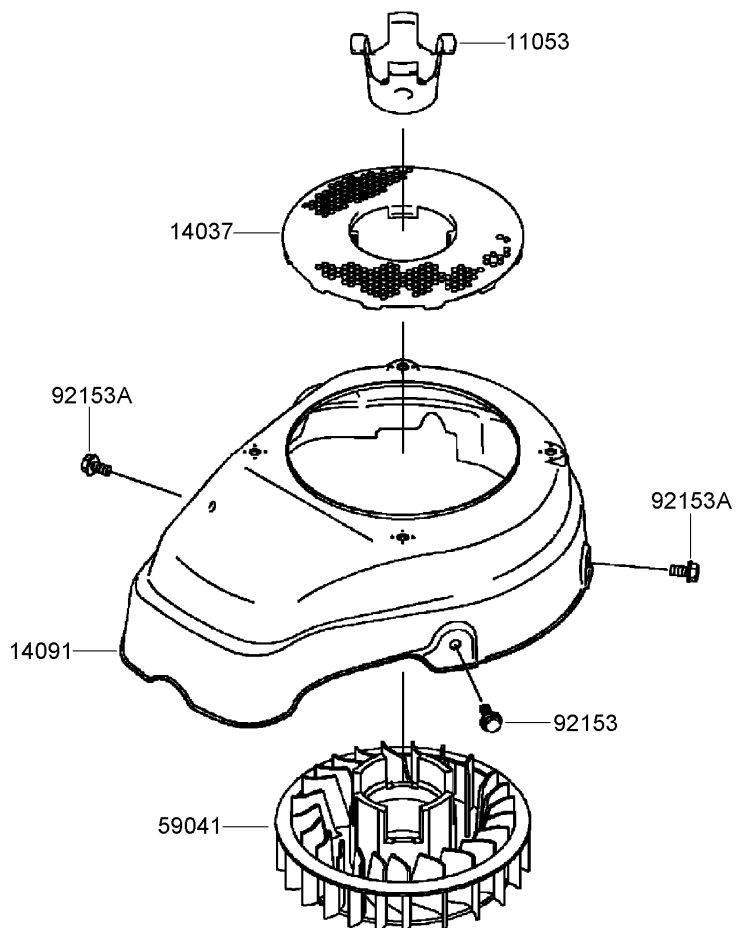

Cooling Equipment Assembly Kawasaki FJ180V-AS30


Ref	Part No.	Qty.	Description				
③11053	11053-7009	1	Bracket, Fan				
③14037	14037-7017	1	Screen				
③14091	14091-7053	1	Cover				
③59041	59041-7009	1	Fan				
③92153	92153-7007	1	Bolt				
③92153A	92153-7043	2	Bolt (6X12)				

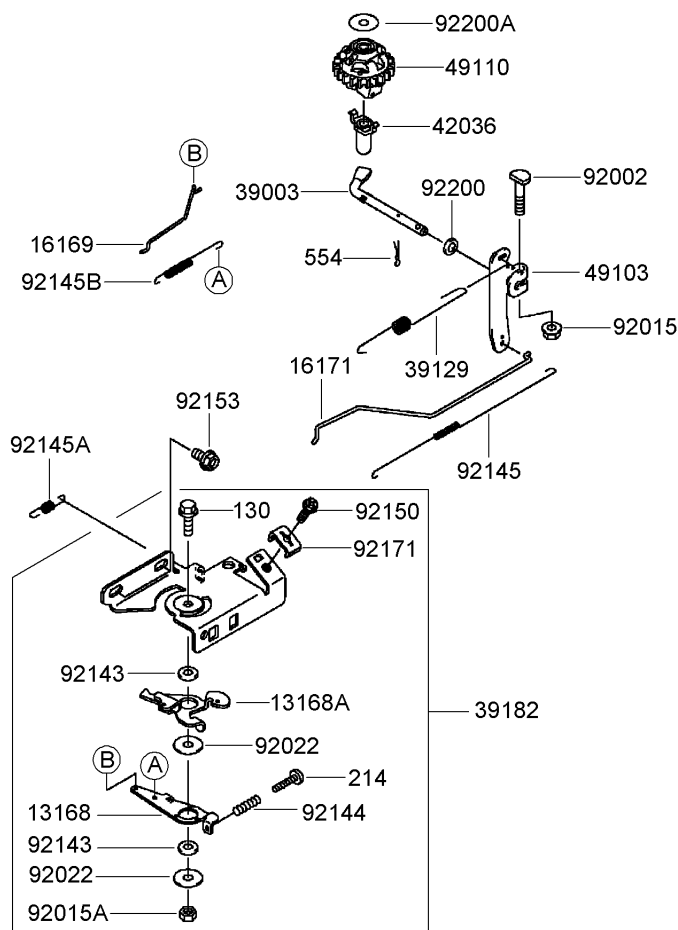

Control Equipment Assembly Kawasaki FJ180V-AS30


Ref	Part No.	Qty.	Description
③13168	13168-7028	1	Lever
③13168A	13168-7032	1	Lever
③16169	16169-7015	1	Link-Choke
③16171	16171-7015	1	Link-Throttle
③39003	39003-7002	1	Arm-Pivot
③39129	39129-7014	1	Spring-Governor
③39182	39182-7007	1	Panel-Assy-Control
③42036	42036-2051	1	Sleeve
③49103	49103-7005	1	Arm-Governor
③49110	49110-7002	1	Governor ASM
③92002	92002-2269	1	Bolt (6X28)
③92015	92015-1193	1	Nut
③92015A	92015-2051	1	Nut
③92022	92022-2372	2	Washer (6X19X1.2)
③92143	92143-2135	2	Collar (6X13X2.3)
③92144	92144-2266	1	Spring
③92145	92145-7025	1	Spring-Throttle
③92145A	92145-7032	1	Spring
③92145B	92145-7043	1	Spring
③92150	92150-2182	1	Bolt (5X18)
③92153	92153-7043	2	Bolt (6X12)
③92171	92171-7016	1	Clamp
③92200	92200-2029	1	Washer (6.5X11.5X2.0)
③92200A	92200-2036	1	Washer (6.2X20X0.5)

Ref	Part No.	Qty.	Description
③130	130B0618	1	Bolt-Flanged
③214	214B0420	1	Screw-Pan +- (4X20)
③554	554A0600	1	Pin-Snap (1.2X21.2)

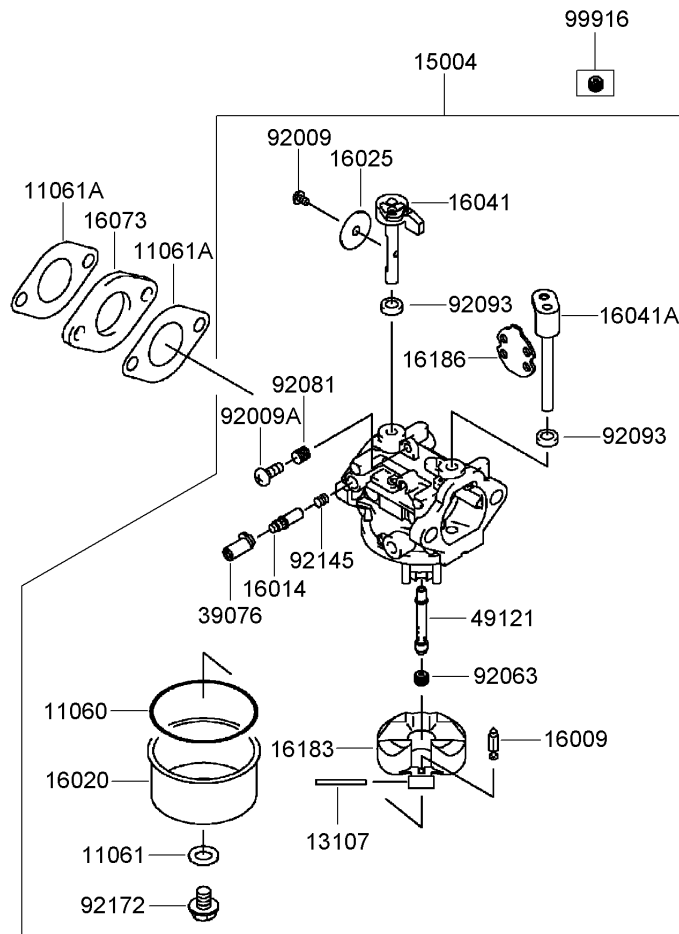


Carburetor Assembly Kawasaki FJ180V-AS30

Ref	Part No.	Qty.	Description				
⑨11060	11060-2190	1	Gasket				
⑨11061	11061-7010	1	Gasket-Screw				
⑨11061A	11061-7015	2	Gasket-Insulator				
⑨13107	13107-7024	1	Shaft				
⑨15004	15004-7010	1	Carburetor ASM				
⑨16009	16009-2136	1	Needle-Jet				
⑨16014	16014-7008	1	Screw-Air, Pilot				
⑨16020	16020-7004	1	Chamber-Float				
⑨16025	16025-7007	1	Valve-Throttle				
⑨16041	16041-7019	1	Shaft-Carburetor				
⑨16041A	16041-7020	1	Shaft-Carburetor				
⑨16073	16073-7006	1	Insulator				
⑨16183	16183-2002	1	Float ASM				
⑨16186	16186-7003	1	Choke Valve ASM				
⑨39076	39076-7001	1	Limiter				
⑨49121	49121-7014	1	Nozzle-Main				
⑨92009	92009-2083	1	Screw				
⑨92009A	92009-2349	1	Screw				
⑨92063	92063-7067	1	Jet-Main (No 70)				
⑨92081	92081-2234	1	Spring				
⑨92093	92093-2100	2	Seal				
⑨92145	92145-7015	1	Spring				
⑨92172	92172-7002	1	Screw				
⑨99916	99916-7007	1	Main Jet K H I Parts Kit				

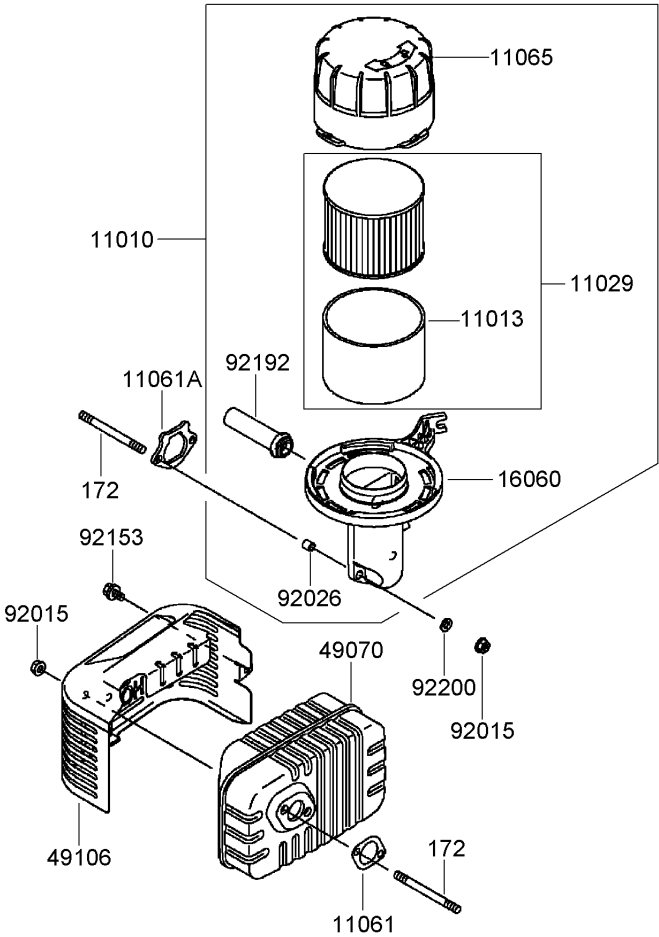

Air Filter and Muffler Assembly
Kawasaki FJ180V-AS30

Ref	Part No.	Qty.	Description				
❶11010	11010-7021	1	Air Filter ASM				
❶11013	11013-7037	1	Element-Filter, Air				
❶11029	11029-7023	1	Air Filter Element ASM				
❶11061	11061-7029	1	Gasket-Muffler				
❶11061A	11061-7075	1	Gasket-Pipe, Intake				
❶11065	11065-7018	1	Cap				
❶16060	16060-7026	1	Pipe-Intake				
❶49070	49070-7022	1	Muffler				
❶49106	49106-7021	1	Cover-Muffler				
❶92015	92015-1193	4	Nut				
❶92026	92026-7021	2	Spacer				
❶92153	92153-7023	1	Bolt (6X10)				
❶92192	92192-7083	1	Tube				
❶92200	92200-7022	2	Washer				
❶172	172G0680	4	Bolt-Stud (6X80)				

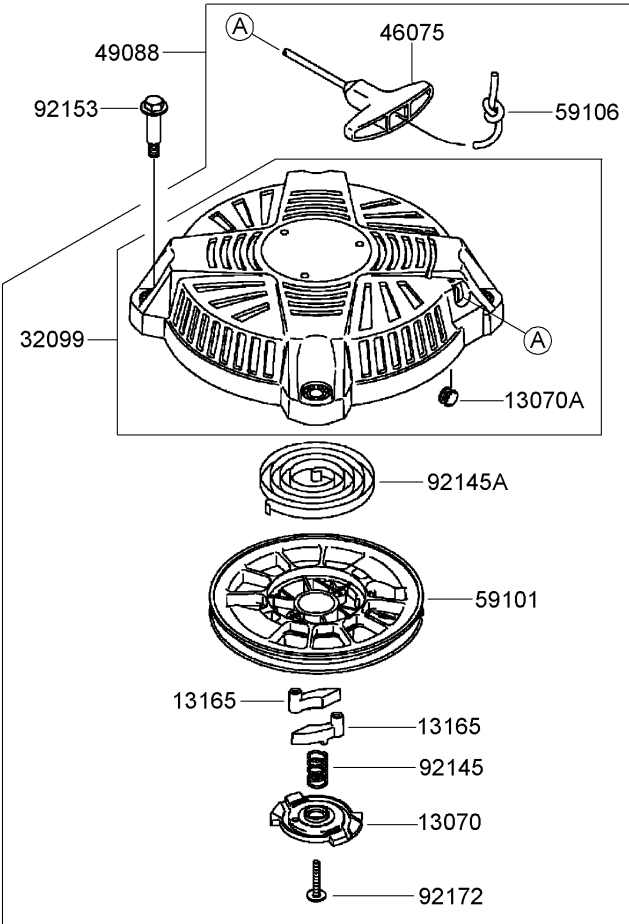

Starter Assembly
Kawasaki FJ180V-AS30

Ref	Part No.	Qty.	Description				
13070	13070-7014	1	Guide				
13070A	13070-7015	1	Guide				
13165	13165-7002	2	Pawl-Starter, Recoil				
32099	32099-7004	1	Case-Starter, Recoil				
46075	46075-7002	1	Grip				
49088	49088-7024	1	Starter-Recoil				
59101	59101-7002	1	Reel-Starter, Recoil				
59106	59106-7006	1	Rope (1500Mm)				
92145	92145-7052	1	Spring				
92145A	92145-7053	1	Spring				
92153	92153-7021	4	Bolt (M6)				
92172	92172-7030	1	Screw				

NOTES

NOTES

