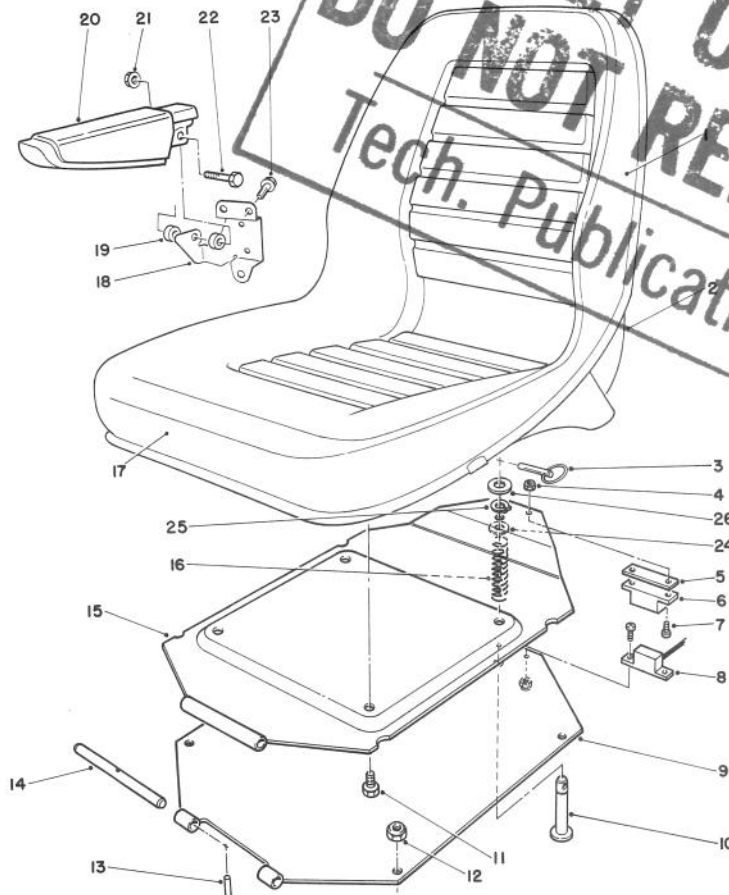


TORO®

MODEL NO. 30580-200001 & UP

**PARTS
CATALOG****GROUNDMASTER® 580-D
TRACTION UNIT WITH ACCESSORIES**


T-1278A

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-5400	Assembly - Seat (Incl. Ref. #2)	1
2	67-9560	Shell - Seat	1
3	283-72	Pin - Lynch	1
4	3296-54	Nut - Lock	4
5	83-6630	Shim - Switch	1
6	75-6330	Catch - Magnetic	1
7	32122-53	Screw - Pan Head	4
8	83-6640	Sensor - Switch	1
9	83-6700	Plate W.A. - Suspension	1
10	85-6160	Pin - Spring	1
11	3234-5	Screw - Cap Hex. Hd.	4
12	3296-29	Nut - Lock	4
13	32121-4	Pin - Roll	1

Ref. No.	Part No.	Description	No. Used
14	27-4720	Pin - Pivot, Seat	1
15	83-6690	Plate W. A. - Seat	1
16	85-6140	Spring	1
17	67-9550	Cushion - Seat	1
18	69-0770	Bracket - Rest, Arm R.H.	1
*	69-0760	Bracket - Rest, Arm L.H.	1
19	69-1260	Spacer	4
20	69-1180	Armrest	2
21	32128-19	Nut - Lock, Flange Hd.	2
22	323-9	Screw - Cap Hex. Hd.	2
23	3234-23	Screw - Cap Hex. Hd.	6
24	3256-27	Washer - Flat	1
25	32120-64	Ring - Retaining	1
26	3256-7	Washer - Flat	1

*Not Illustrated

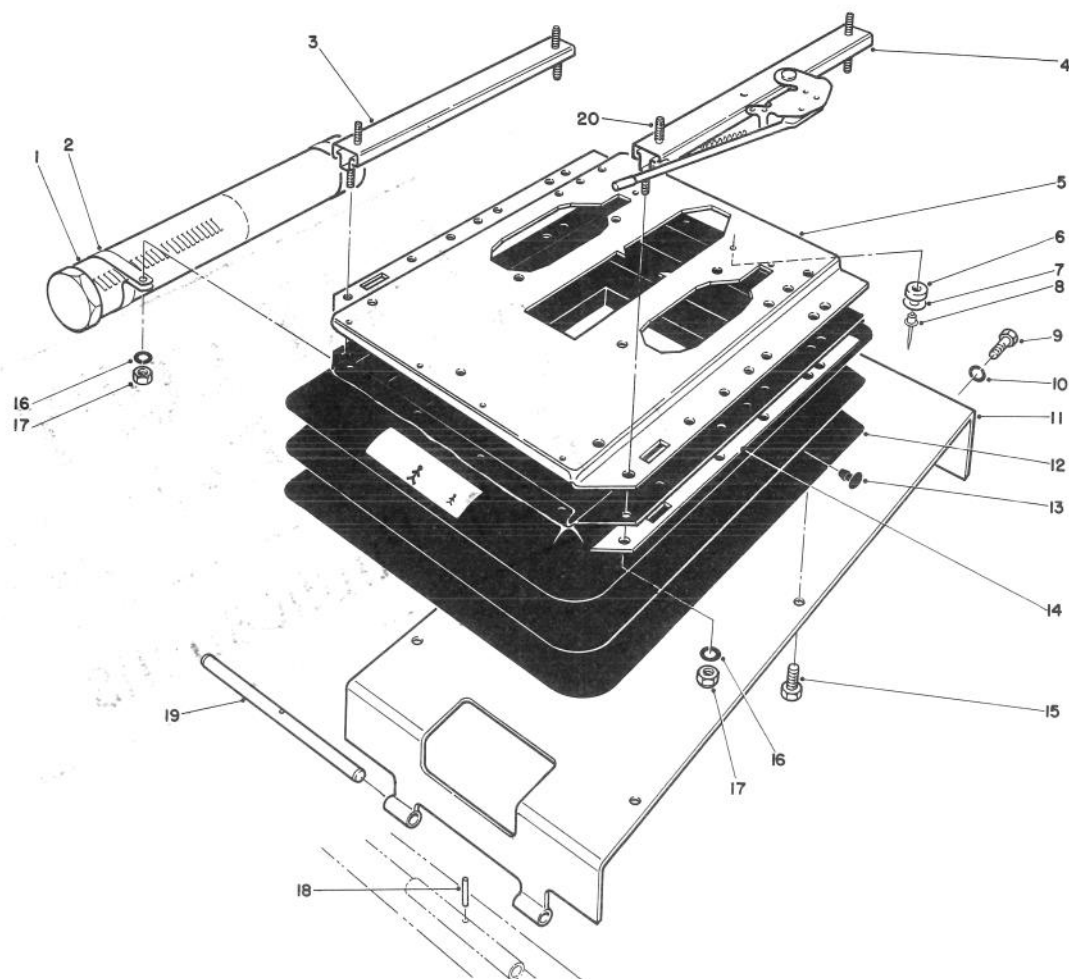


SEAT PIVOT AND BELLOWS ASSEMBLY

T-1279A

Ref. No.	Part No.	Description	No. Used
1	74-0720	Tube - Manual	1
2	2412-133	Clamp	2
3	66-8530	Track - Adjustment	1
4	82-9060	Track & Latch - Adjustment	1
5	71-2410	Plate - Upper Suspension (Incl. Ref. #6)	1
6	71-2400	Assembly - Bumper (Incl. Ref. #7 & 8)	2
7	71-2380	Washer	2
8	71-2390	Rivet - Pop	2
9	323-6	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
10	3253-21	Washer - Lock	2
11	83-6660	Support - Seat	1
12	71-2420	Bellows - Rubber	1
13	39-5710	Plug	21
14	40-3890	Trim	2
15	48-7780	Screw - Cap Hex. Hd.	4
16	3256-23	Washer - Flat	4
17	3296-29	Nut - Lock	4
18	32121-4	Pin - Roll	1
19	27-4720	Pin - Pivot, Seat	1
20	3230-22	Bolt - Carriage	1

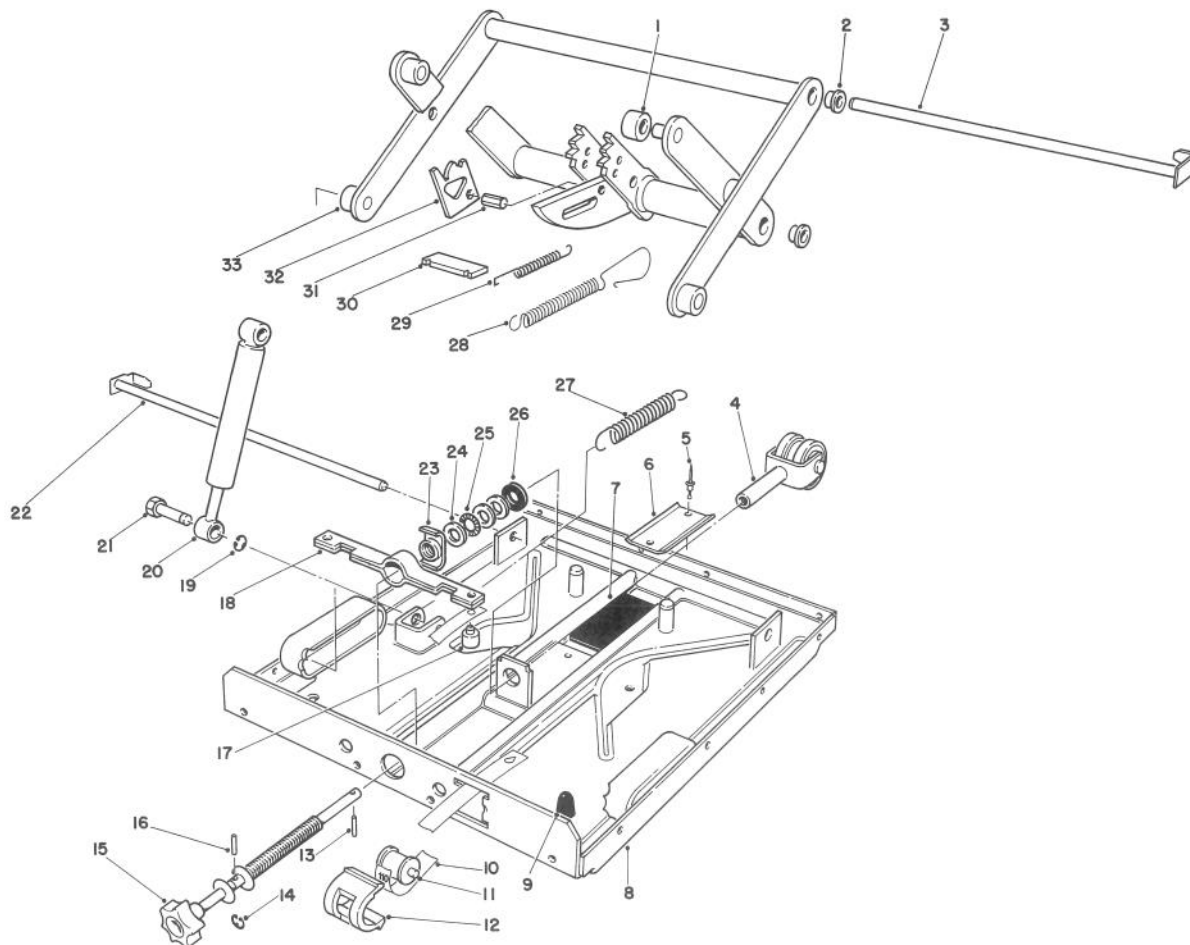


T-0483-90

SEAT SUSPENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	40-4010	Roller	4	19	71-2330	Ring - Snap	2
2	71-2180	Bearing	4	20	71-2340	Absorber - Shock	1
3	71-2190	Pin	1	21	71-2320	Pin	2
4	71-2290	Bearing - Triple	1	22	71-2170	Pin	1
5	40-4090	Rivet - Pop	2	23	71-2270	Nut - Special	1
6	40-4080	Track - U	1	24	40-4070	Washer	3
7	40-4120	Plate - Rubber	1	25	40-4310	Bearing - Thrust Needle	1
8	71-2310	Plate - Lower Suspension (Incl. Ref. #5-7 & 9)	1	26	40-4060	Washer - Rubber	1
9	71-2300	Bumper	2	27	71-2260	Spring	2
10	71-2280	Band - Weight Indicator	1	28	40-4340	Spring - Extension	1
11	40-4150	Roller	1	29	40-4350	Spring - Extension	2
12	40-4160	Guide - Sleeve	1	30	40-4360	Plate	1
13	71-2210	Pin	1	31	40-4370	Bolt	1
14	71-2230	Ring - Snap	1	32	40-4380	Bracket - Release	2
15	71-2240	Knob Assembly (Incl. Ref. #13, 14 & 16)	1	33	71-2200	Bracket - Swing Arm (Incl. Ref. #1-3, 22 & 29-32)	1
16	71-2220	Pin	1	*	71-0480	Suspension Assembly (Incl. Ref. #1-33, & 6-8, 12 & 13, from page 2)	1
17	40-4230	Plug	1				
18	71-2250	Bracket - Spring	1				

*Not Illustrated

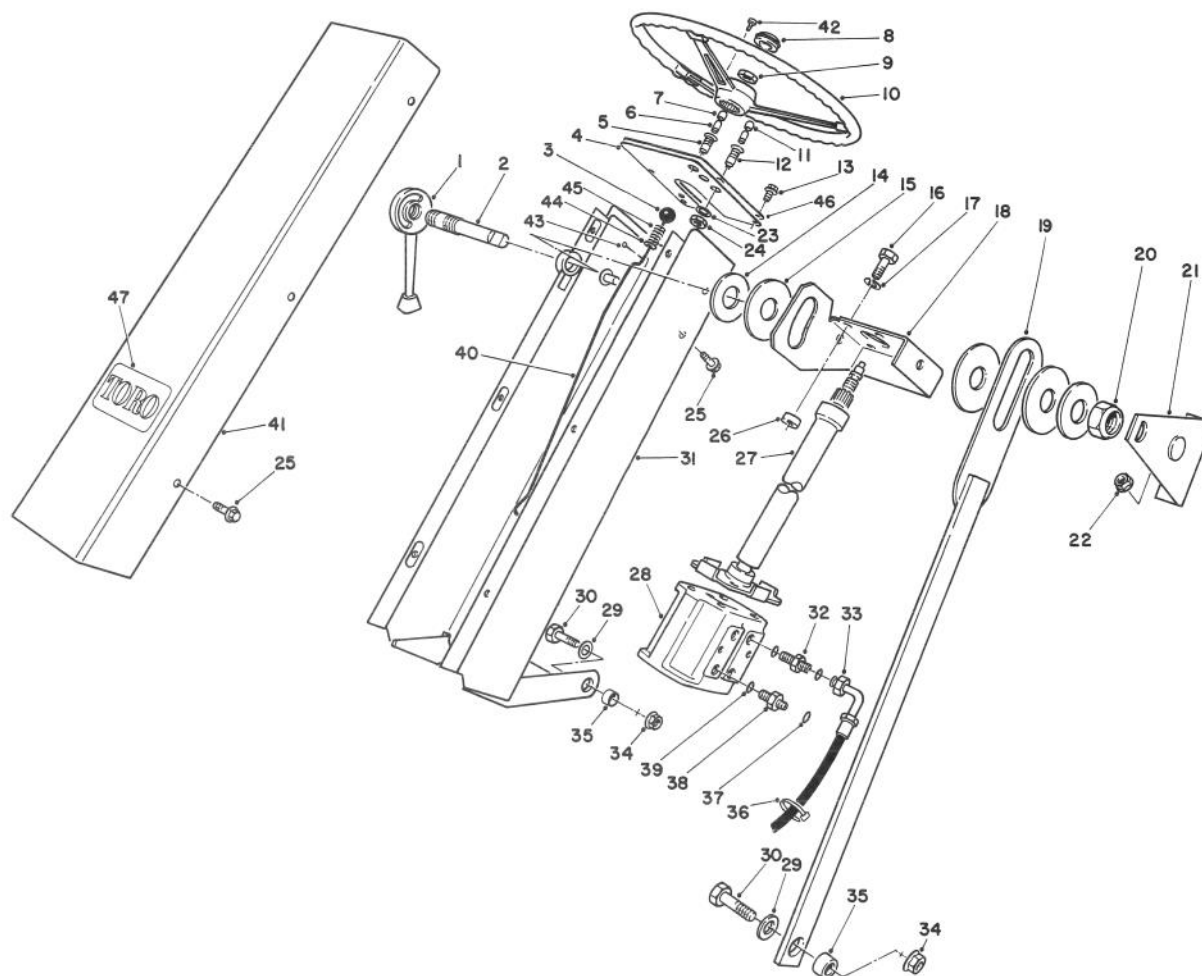


T-0338-90

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-1560	Lever - Lock	1	24	218-535	Nut - Hex.	3
2	69-9230	Shaft - Steering Pivot	1	25	3234-14	Screw - Hex. Washer Hd.	8
3	233-17	Knob	1	26	46-1600	Spacer	4
4	69-9440	Panel - Steering Tower	1	27	71-0540	Column - Steering	1
5	44-2210	Body - Indicator Light (Incl. Ref. #6-7 & 23-24)	1	28	69-1850	Valve - Power Steering	1
†6		Bulb - Indicator Light (#1891)	3	29	3256-26	Washer - Flat	3
7	218-533	Lens - Indicator Light (Red)	1	30	325-5	Screw - Cap Hex. Hd.	3
8	213-31	Cover - Steering Wheel	1	31	69-8160	Tower - Steering	1
9	47-6990	Nut - Hex.	1	32	340-133	Fitting - Hydraulic Straight (Incl. Ref. #37 & 39)	3
10	68-8080	Wheel - Steering	1	33	69-5500	Hose - Hydraulic	4
11	218-562	Lens - Indicator Light (Amber)	2	34	32128-23	Nut - Flange Lock	3
12	44-2212	Body - Indicator Light (Incl. Ref. #6, 11 & 23-24)	2	35	28-0380	Spacer	3
13	32144-64	Screw - Hex. Washer Hd.	4	36	3290-378	Tie-Cable	2
14	20-9500	Spacer	2	37	237-22	Seal - O-Ring	4
15	31-0390	Washer - Friction	3	38	69-6980	Valve - Check (Incl. Ref. # 37 & 39)	1
16	323-7	Screw - Cap Hex. Hd.	4	39	237-79	Seal - O-Ring	4
17	3253-21	Washer - Lock	4	40	71-4060	Rod - Brake Latch	1
18	69-9540	Bracket - Steering Gear	1	41	69-8510	Cover - Steering Tower	1
19	69-7760	Link - Steering Gear	1	42	32144-96	Screw - Mach. Round Hd.	3
20	3296-49	Nut - Lock	1	43	3272-5	Pin - Cotter	1
21	69-7740	Support - Steering Gear	1	44	3256-22	Washer - Flat	1
22	32128-20	Nut - Flange Lock	2	45	3-3251	Spring - Compression	1
23	218-536	Washer - Lock	3	46	69-0970	Panel - Control	1
				47	62-5550	Decal	1

†Obtain Locally

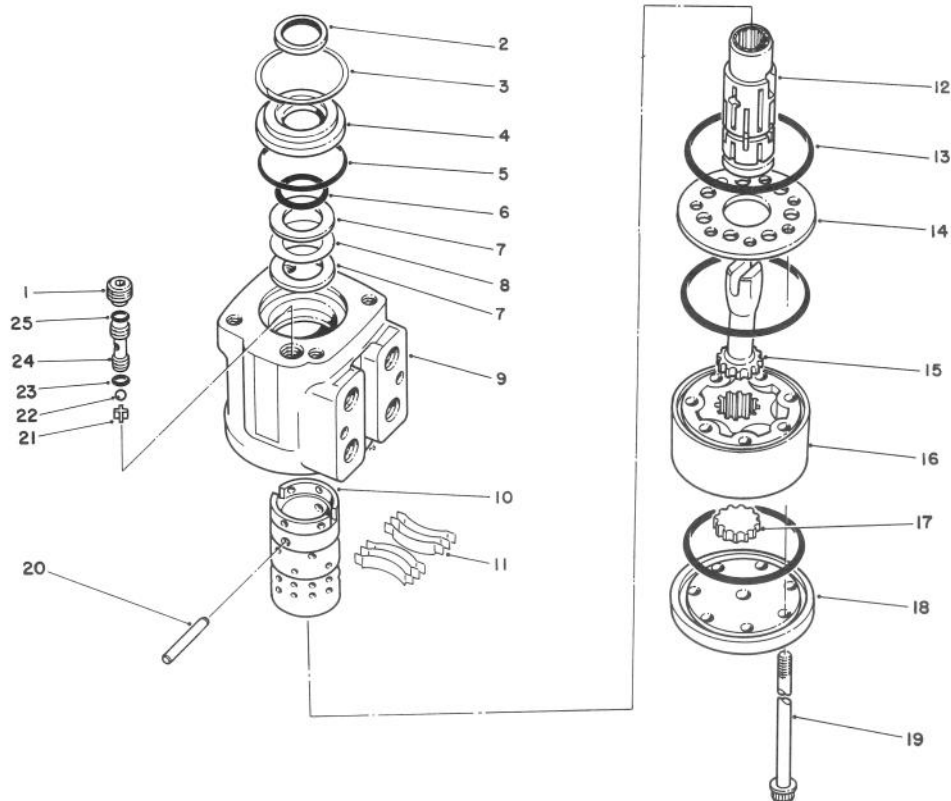

T-0383-90


POWER STEERING VALVE ASSEMBLY NO. 69-1850

Ref. No.	Part No.	Description	No. Used
1	52-9260	Screw - Set	1
†2		Seal - 1" ID	1
3	52-9230	Ring - Retaining	1
4	52-9240	Bushing - Gland Seal	1
†5		Seal - 1.875" ID	1
†6		Seal - Quad Ring	1
7	59-6730	Race - Bearing	2
8	59-6740	Bearing - Needle Thrust	1
†9		Housing	1
†10		Sleeve - Control	1
†11	59-6820	Centering Spring Kit	1
†12		Spool - Control	1
†13		Seal	3
14	59-6850	Plate - Spacer	1
15	59-6860	Drive	1
16	69-1860	Gerotor	1

Ref. No.	Part No.	Description	No. Used
17	69-1880	Spacer	1
18	59-6890	Cap - End	1
19	69-1870	Screw - Cap	7
20	59-6830	Kit - Centering Pin	1
21	52-9290	Retainer - Check Ball	1
22	52-9280	Ball - Check	1
†23		Seal	1
24	52-9270	Seat - Check Ball	1
†25		Seal	1
*	52-9250	Needle Bearing Kit (Incl. Ref. #7-8)	1
*	59-6810	Control Parts Assembly (Incl. Ref. #9-12 & 20)	1
*	49-0170	Seal Kit (Incl. Ref. #2, 5-6, 13, 23 & 25)	1

*Not Illustrated

†Not Serviceable Separately

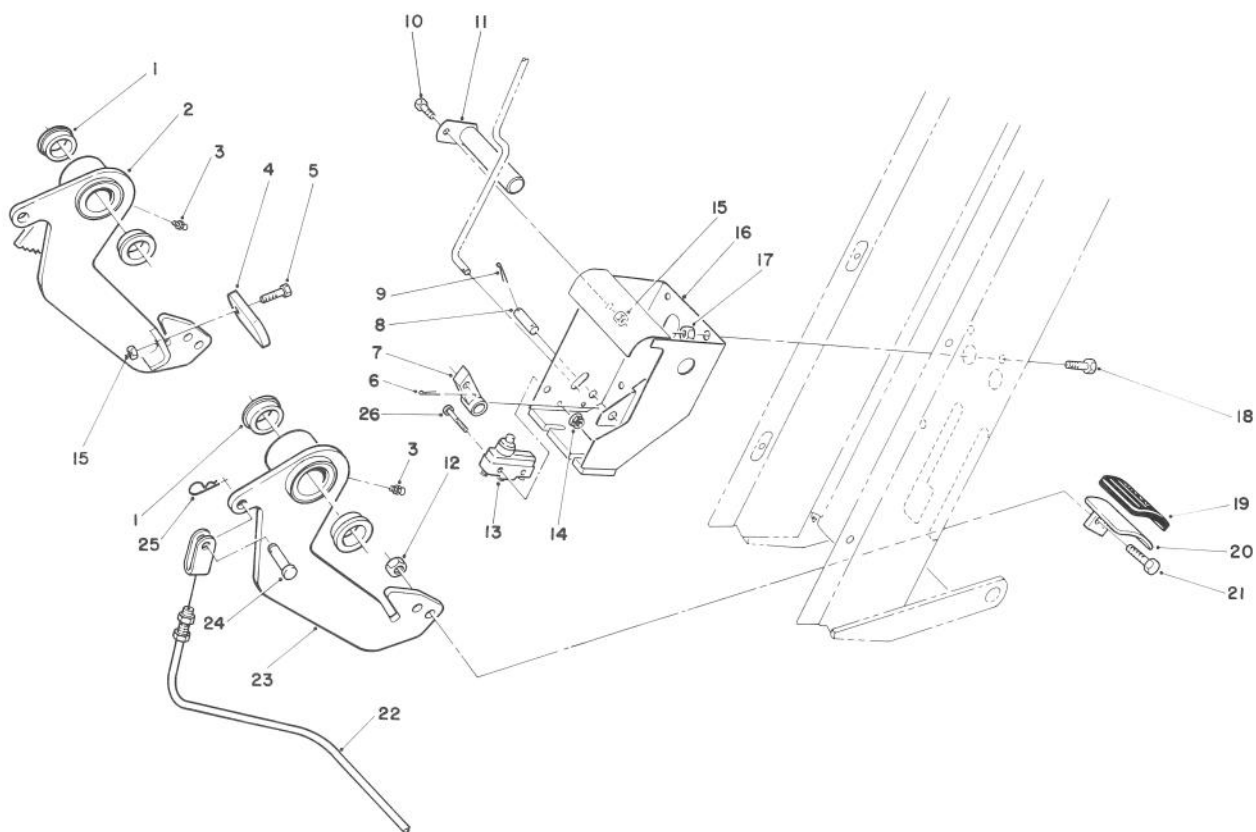


T-0339A-90

STEERING BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	256-247	Bushing - Flange	4
2	69-7890	Arm - Brake R.H. (Incl. Ref. #1 & 3)	1
3	302-5	Fitting - Grease	2
4	69-9210	Lever - Brake Latch	1
5	321-4	Screw - Cap Hex. Hd.	1
6	3272-5	Pin - Cotter	1
7	69-7720	Pawl - Brake	1
8	69-9200	Pin - Brake Pawl	1
9	3272-6	Pin - Cotter	2
10	321-2	Screw - Cap Hex. Hd.	1
11	69-7790	Pin - Brake Arm	1
12	32152-1	Nut - Lock	4
13	29-6163	Switch - Micro	1
14	3296-9	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
15	32152-4	Nut - Lock	2
16	69-7840	Mount - Brake Arm	1
17	32128-20	Nut - Lock	3
18	3234-14	Screw - Cap Hex. Hd.	3
19	49-6171	Pad - Brake Pedal L.H.	1
*	49-6172	Pad - Brake Pedal R.H.	1
20	69-7700	Pedal - Brake	2
21	323-4	Screw - Cap Hex. Hd.	4
22	69-5670	Cable - Brake	2
23	69-7880	Arm - Brake L.H. (Incl. Ref. #1 & 3)	1
24	283-1	Pin - Clevis	2
25	3290-307	Pin - Cotter, Hair	2
26	3249-11	Screw - Machine	2
*	3290-378	Tie - Cable	3


*Not Illustrated

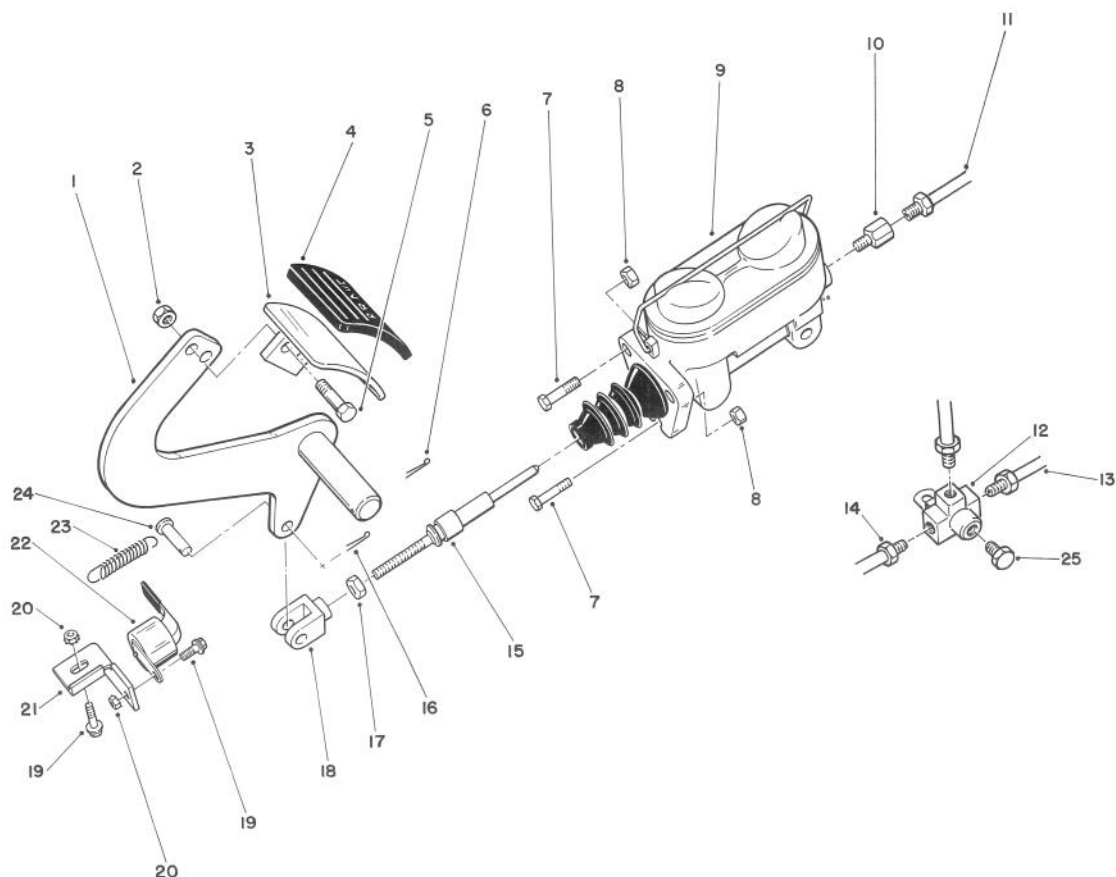

T-0341

SERVICE BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-8750	Arm - Brake	1	14	74-2520	Tube - Hydraulic R.H.	1
2	32152-1	Nut - Lock	2	15	69-9340	Rod - Brake	1
3	69-7700	Pedal - Brake	1	16	3272-10	Pin - Cotter	1
4	49-6170	Pad - Brake	1	17	3220-2	Nut - Jam	1
5	322-3	Screw - Cap Hex. Hd.	2	18	282-2	Clevis - Brake Rod	1
6	3272-12	Pin - Cotter	1	19	3234-13	Screw - Hex. Washer Hd.	2
7	323-7	Screw - Cap Hex. Hd.	3	20	32149-2	Nut - Keps	2
8	32128-21	Nut - Lock	3	21	69-9160	Bracket - Brake Switch	1
9	69-2640	Master Cylinder Assembly	1	22	69-0750	Switch - Brake	1
10	353-994	Adapter	1	23	21-1830	Spring - Extension	1
11	74-2530	Tube - Hydraulic	1	24	283-1	Pin - Clevis	1
12	218-243	Fitting - Tee	1	25	281-7	Plug - Pipe	1
13	74-2510	Tube - Hydraulic L.H.	1				

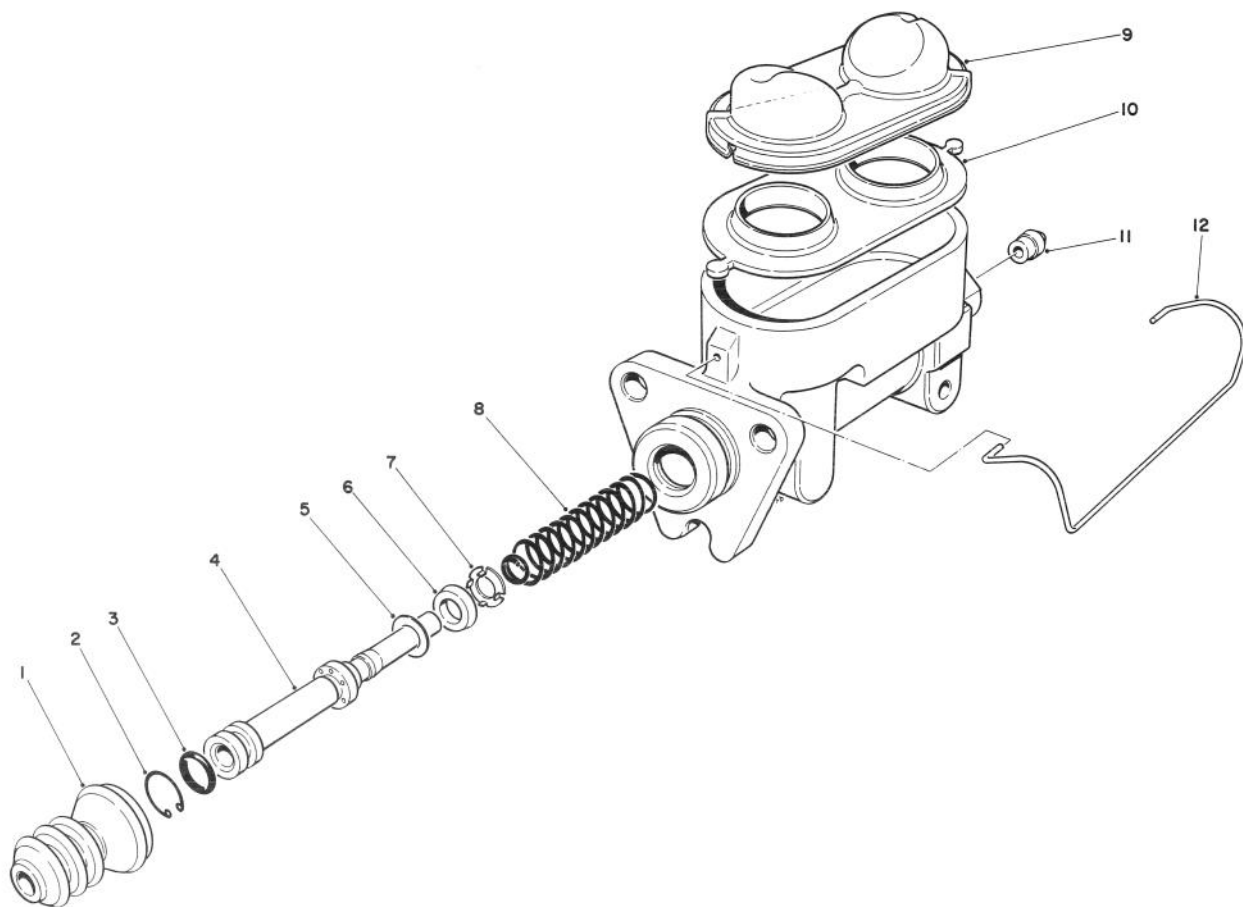

T-0384-90


BRAKE SYSTEM MASTER CYLINDER NO. 69-2640

Ref. No.	Part No.	Description	No. Used
1	69-2650	Boot - Rod	1
2	69-2660	Ring - Retaining	1
†3		Seal - Lip	1
†4		Piston	1
†5		Protector - Cup	1
†6		Cup - Pumping	1
†7		Retainer - Cup	1

Ref. No.	Part No.	Description	No. Used
†8		Spring - Piston Return	1
9	69-2750	Cover - Reservoir	1
10	69-2760	Gasket - Diaphragm	1
11	69-2770	Seat - Tube	1
12	69-2740	Bail - Cover	1
*	69-2730	Piston Assembly (Incl. Ref. #3-8)	1

*Not Illustrated

†Not serviceable separately.

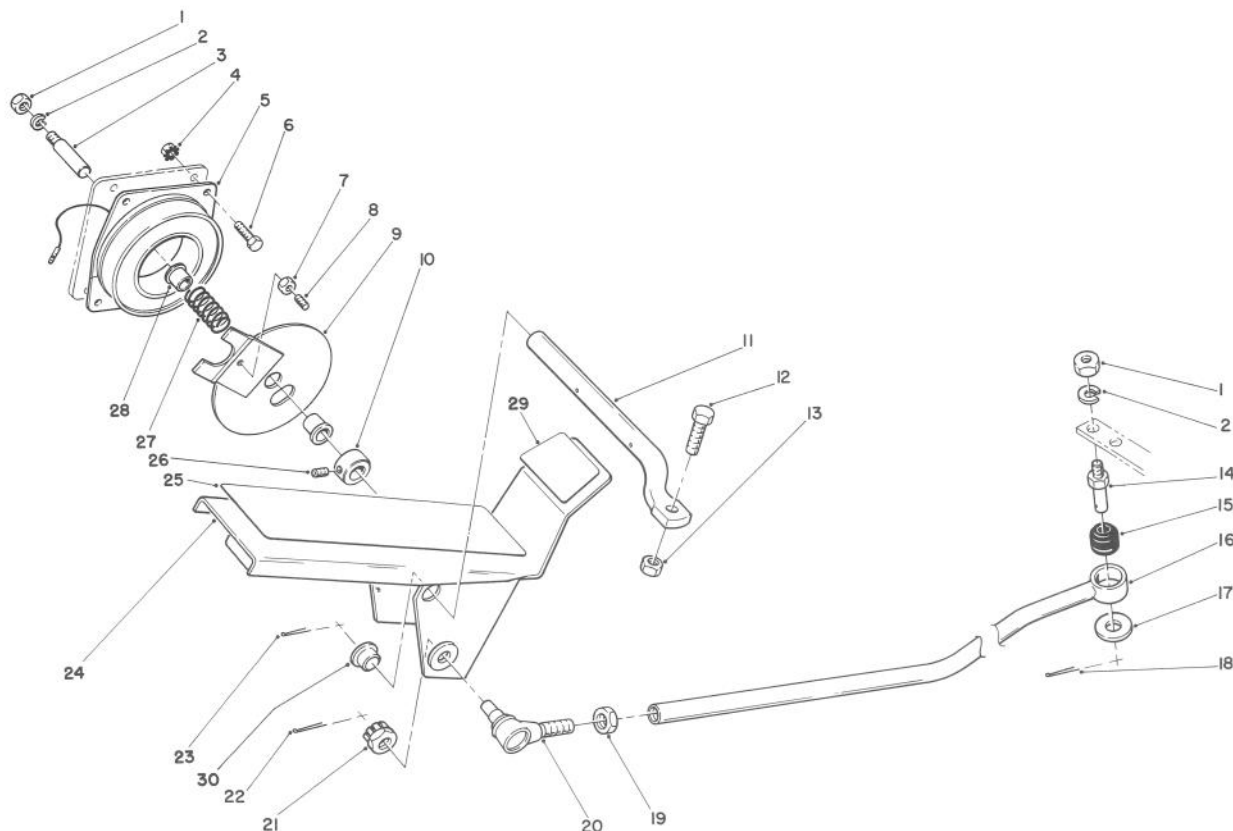


T-0351-90

TRACTION PEDAL & CRUISE CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3217-7	Nut - Lock	2
2	3253-21	Washer - Lock	2
3	69-9170	Shaft - Cruise Control	1
4	32149-2	Nut - Keps	4
5	42-1720	Field Core Coil Assembly	1
6	321-4	Screw - Cap Hex. Hd.	4
7	3217-26	Nut - Lock	1
8	3245-31	Screw - Set	1
9	43-6110	Plate - Clutch	1
10	43-6320	Collar - Locking	1
11	69-9390	Shaft - Pedal	1
12	3234-14	Screw - Cap Hex. Hd.	1
13	32128-20	Nut - Lock	1
14	69-9030	Post - Neutral Device	1
15	23-2270	Bushing - Rubber	1

Ref. No.	Part No.	Description	No. Used
16	74-2700	Rod - Control	1
17	3256-6	Washer - Flat	1
18	3272-10	Pin - Cotter	1
19	3220-5	Nut - Jam	1
20	21-0140	Joint - Ball (Incl. Ref. #21)	1
21	32136-4	Nut - Castle	1
22	3272-6	Pin - Cotter	1
23	3272-7	Pin - Cotter	2
24	69-7650	Pedal - Traction	1
25	71-0440	Abrasive - Pedal Front	1
26	3245-32	Screw - Set	1
27	43-6200	Spring - Compression	1
28	256-273	Bushing - Flange	2
29	71-0450	Abrasive - Pedal Rear	1
30	256-156	Bushing - Flange	2


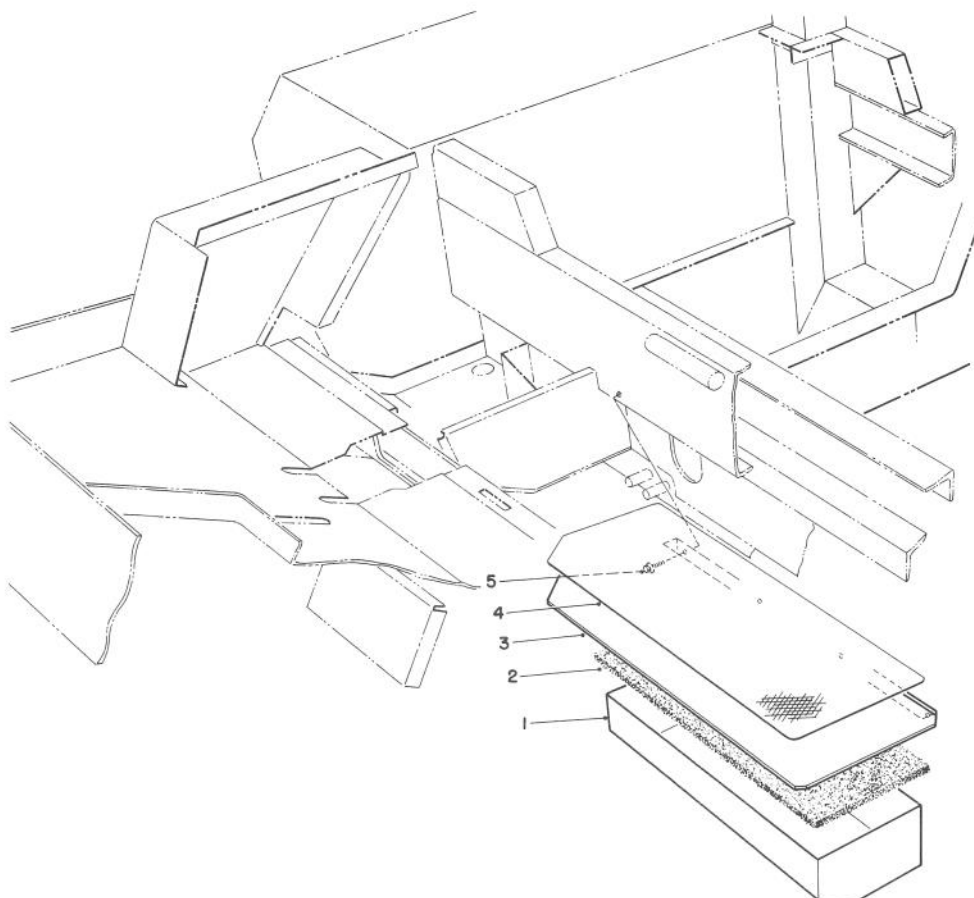


TOOL BOX ASSEMBLY

T-0876-90

Ref. No.	Part No.	Description	No. Used
1	69-8110	Box - Tool	1
2	69-9430	Foam - Tool Box	1
3	69-8080	Cover - Tool Box	1

Ref. No.	Part No.	Description	No. Used
4	71-0410	Cover - Abrasive	1
5	3234-14	Screw - Hex. Flange Hd.	4

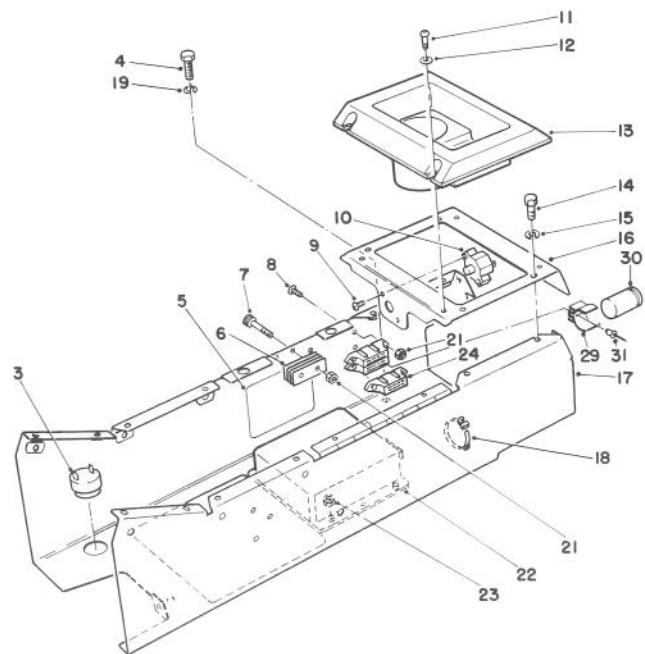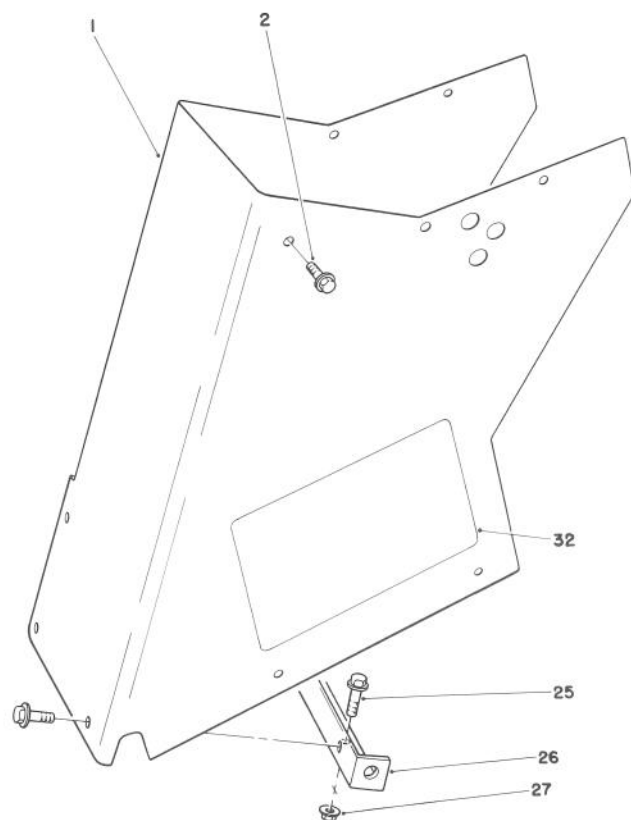


T-0340B

CONTROL BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-9560	Housing - Control	1
2	3234-7	Screw - Hex. Washer Hd.	11
3	80-9330	Alarm - Audio	1
4	323-4	Screw - Cap Hex. Hd.	4
5	71-4270	Decal - Fuse	1
6	69-6260	Magnet	1
7	32105-1	Screw - Hex. Socket Hd.	2
8	32105-13	Screw - Round Hd.	4
9	32122-53	Screw - Round Hd.	2
10	43-4000	Breaker - Circuit 40A	1
11	3290-133	Screw - Round Hd.	4
12	3256-22	Washer - Flat	4
13	69-7040	Holder - Cup	1
14	321-3	Screw - Cap Hex. Hd.	4
15	3253-3	Washer - Lock	4
16	71-2430	Plate - Rear	1
17	71-4130	Support - Control	1
18	3290-378	Tie - Cable	2
19	3253-21	Washer - Lock	4

Ref. No.	Part No.	Description	No. Used
21	3296-2	Nut - Lock	6
22	71-2480	Controller	1
23	32149-7	Nut - Keps	3
24	67-7160	Block - Fuse	3
25	3234-14	Screw - Cap Hex. Hd.	2
26	69-8210	Support - Cover	1
27	32128-20	Nut - Flange Lock	2
29	74-2310	Clamp - Plastic	1
30	37-2690	Capacitor	1
31	3296-15	Rivet - Pop	2
32	80-4890	Decal - Service	1
*	69-0070	Wire Harness Assembly (Incl. *Diode Part No. 218-586 & Ref. #24)	1
*	218-586	Diode	1
*	218-573	Fuse - 5A	9
*	218-578	Fuse - 10A	1
*	218-581	Fuse - 15A	1
*	3290-378	Tie - Cable	25

*Not Illustrated

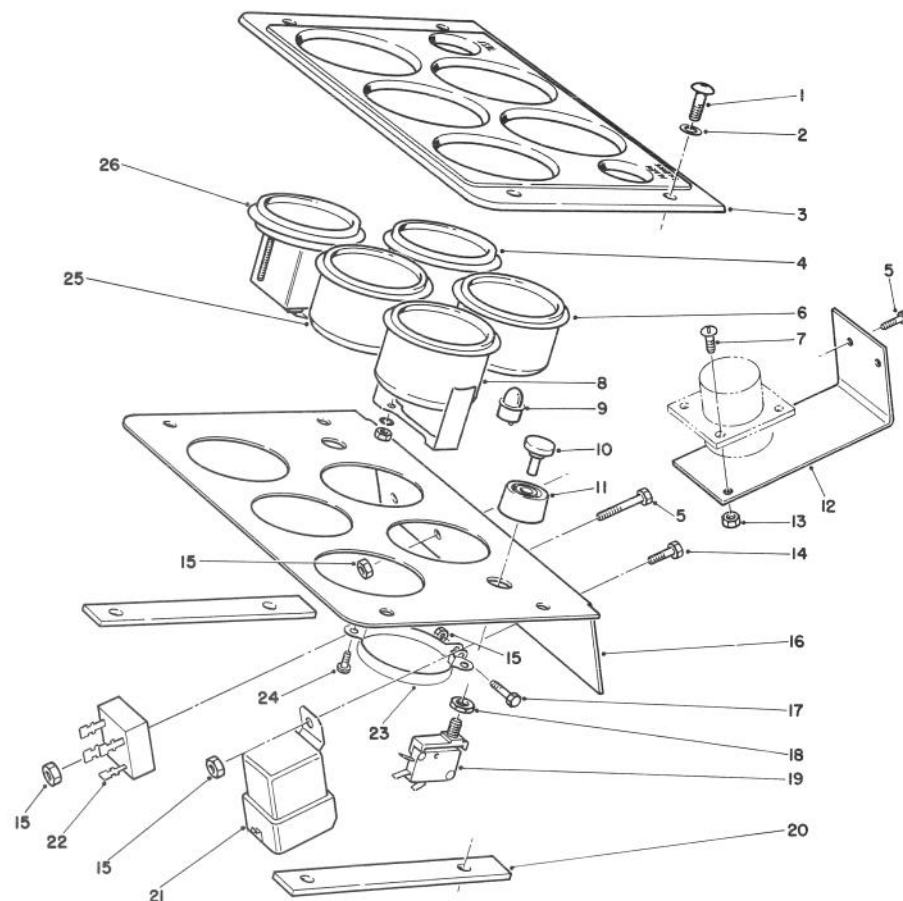


T-0877-90

UPPER CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290-133	Screw - Round Hd.	4
2	3256-23	Washer	4
3	71-4230	Panel	1
4	71-4210	Cluster - Warning Light	1
5	32105-13	Hex. Hd.	6
6	71-4200	Cluster - Warning Light	1
7	3290-330	Screw - Round Hd.	2
8	63-7430	Gauge - Temperature	1
9	219-17	Bulb - Light	8
10	43-6280	Button	2
11	43-6420	Bezel	2
12	69-9320	Bracket - Connector	1
13	3296-9	Nut - Lock	2
14	3290-321	Screw - Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
15	3296-2	Nut - Lock	9
16	71-4220	Plate	1
17	32105-1	Screw - Cap Hex. Hd.	2
18	218-498	Nut	2
19	43-6290	Switch (Incl. Ref. #18)	2
20	71-4250	Spacer	2
21	63-7590	Relay	1
22	37-7600	Rectifier	4
23	69-4780	Clamp - Gauge	2
24	32144-39	Screw - Round Hd.	4
25	66-2940	Gauge - Fuel	1
26	66-2950	Hourmeter	1
*	71-4240	Wire Harness - Gauge	1

*Not Illustrated

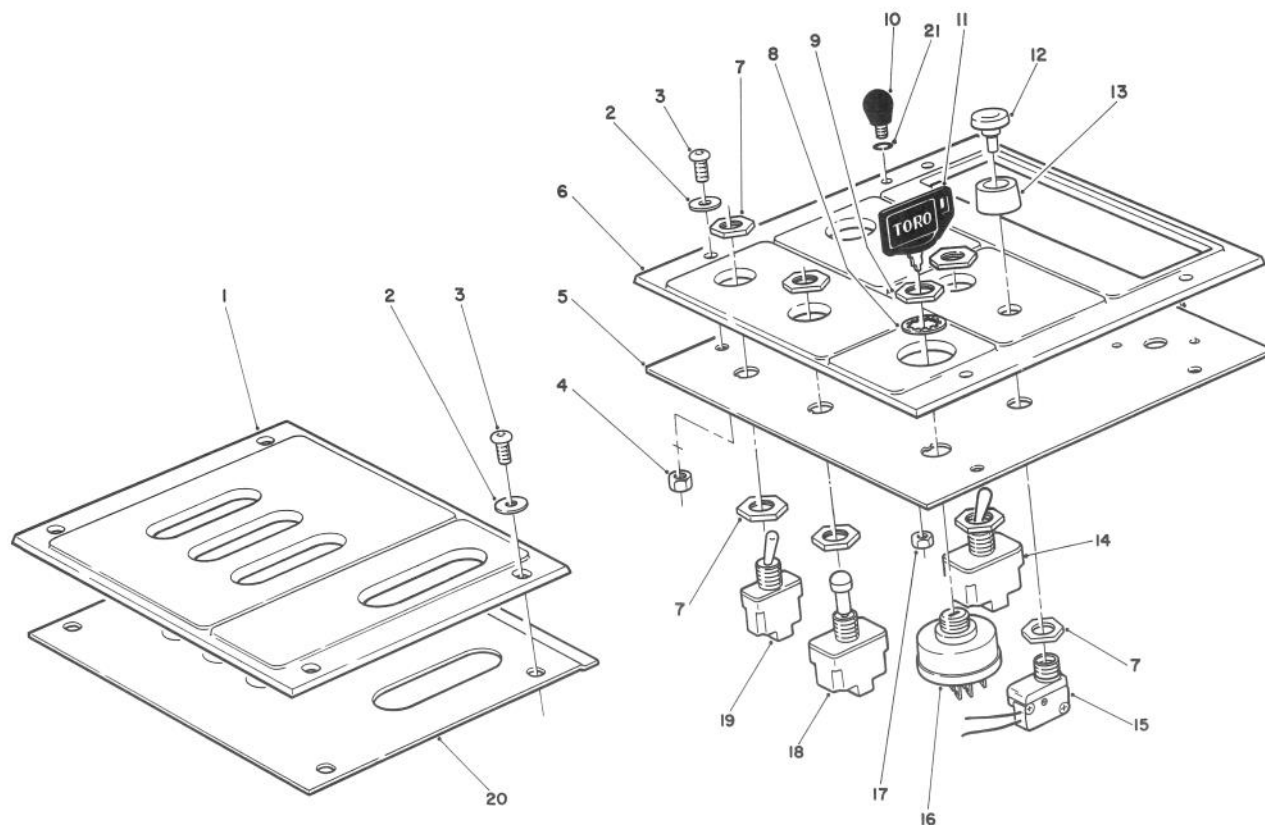


T-0371-90

LOWER CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-0980	Panel - Lever	1
2	3256-22	Washer - Flat	8
3	3290-133	Screw - Round Hd.	8
4	3296-42	Nut - Lock	4
5	71-2460	Plate - Control	1
6	69-0990	Panel - Control	1
7	218-498	Nut - Hex	10
8	218-447	Washer - Lock	1
9	218-446	Nut - Hex	1
10	233-66	Knob	1
11	63-8360	Key - Ignition	1
12	43-6280	Button - Switch	2
13	43-6420	Bezel - Switch	2

Ref. No.	Part No.	Description	No. Used
14	69-9740	Switch - Toggle (Incl. Ref. #7)	1
15	72-9760	Switch - Push Button (Incl. Ref. #7, 12 & 13)	2
16	27-2360	Switch - Ignition (Incl. Ref. #8 & 9)	1
17	3290-392	Nut - Lock	1
18	69-9730	Switch - Toggle (Incl. Ref. #7)	1
19	71-4170	Switch - Toggle (Incl. Ref. #7)	1
20	69-9310	Plate - Lever	1
21	3253-15	Washer - Lock	A/R

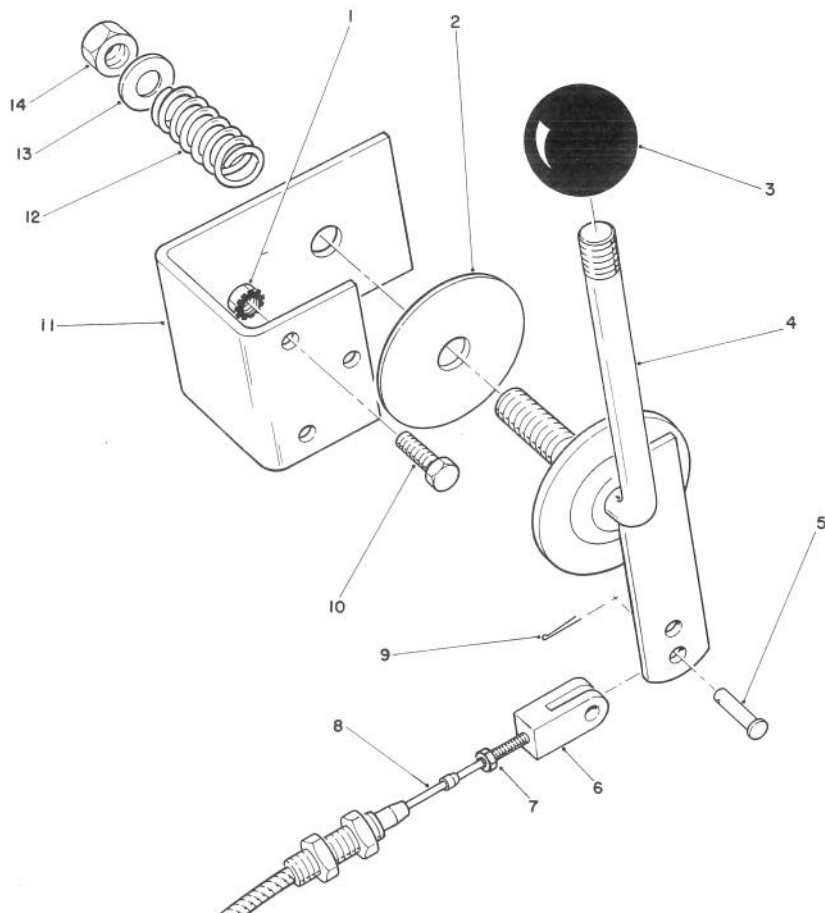


T-0352A-90

THROTTLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-42	Nut - Keps	3
2	3-2858	Disc - Friction	1
3	233-48	Knob	1
4	69-8040	Arm - Throttle	1
5	283-67	Pin - Clevis Arm End	1
*	69-0090	Pin - Clevis Engine End	1
6	282-28	Clevis - Adjustable	2
7	3219-14	Nut - Hex.	2

Ref. No.	Part No.	Description	No. Used
8	77-2990	Cable - Throttle	1
9	3272-1	Pin - Cotter	3
10	321-3	Screw - Cap Hex. Hd.	3
11	69-9130	Bracket - Throttle	1
12	3-8596	Spring - Compression	1
13	3256-26	Washer - Flat	1
14	3296-23	Nut - Lock	1

*Not Illustrated

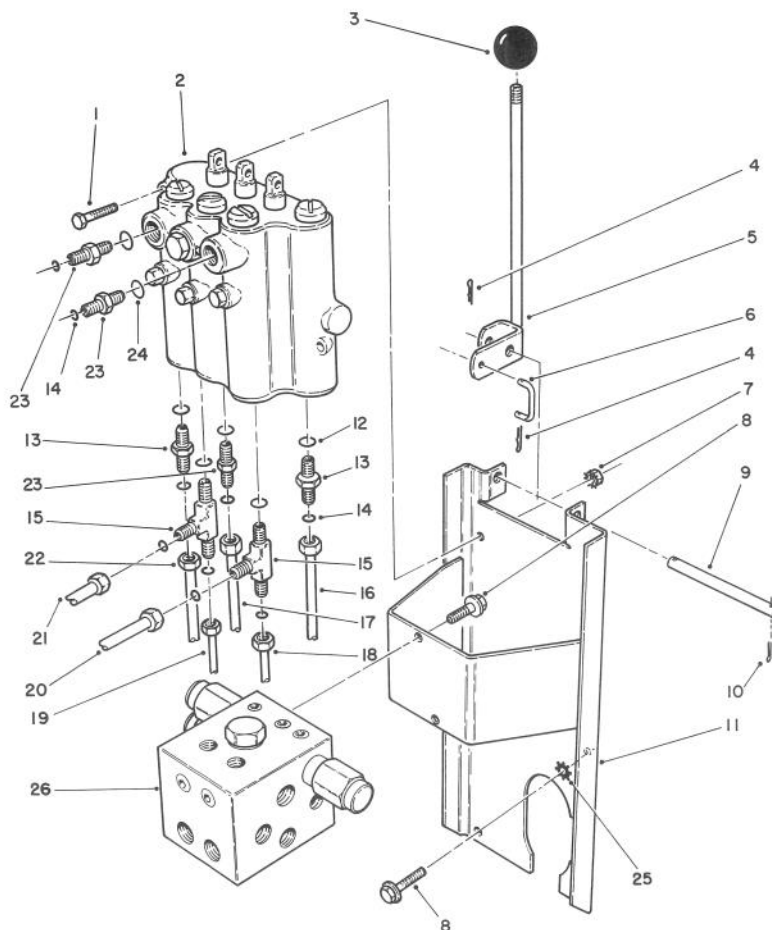


T-0355-90

LIFT VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	321-10	Screw - Cap Hex. Hd.	2	14	237-22	Seal - O-Ring	9
2	69-1780	Lift Valve Assembly	1	15	340-86	Fitting - Hydraulic Tee (Incl. Ref. #14 & 24)	2
3	233-42	Knob	3	16	69-5860	Tube - Hydraulic	1
4	3272-1	Pin - Cotter	6	17	69-5720	Tube - Hydraulic	1
5	69-7010	Lever - Valve L.H.	1	18	69-5700	Tube - Hydraulic	1
*	69-6990	Lever - Valve Mid.	1	19	69-5740	Tube - Hydraulic	1
*	69-7000	Lever - Valve R.H.	1	20	69-5680	Tube - Hydraulic	1
6	69-9140	Link - Valve Lever	3	21	69-5890	Tube - Hydraulic	1
7	32149-2	Nut - Keps	2	22	69-5870	Tube - Hydraulic	1
8	3234-14	Screw - Hex. Flange Hd.	6	23	340-2	Fitting - Hydraulic Straight (Incl. Ref. #14 & 24)	3
9	69-9150	Shaft - Valve Lever	1	24	237-42	Seal - O-Ring	5
10	3272-6	Pin - Cotter	2	25	3254-6	Washer - Lock	1
11	69-7810	Bracket - Valve	1	26	69-4060	Counterbalance Manifold Assembly	1
12	237-79	Seal - O-Ring	2				
13	340-3	Fitting - Hydraulic Straight (Incl. Ref. #12 & 14)	2				

*Not Illustrated

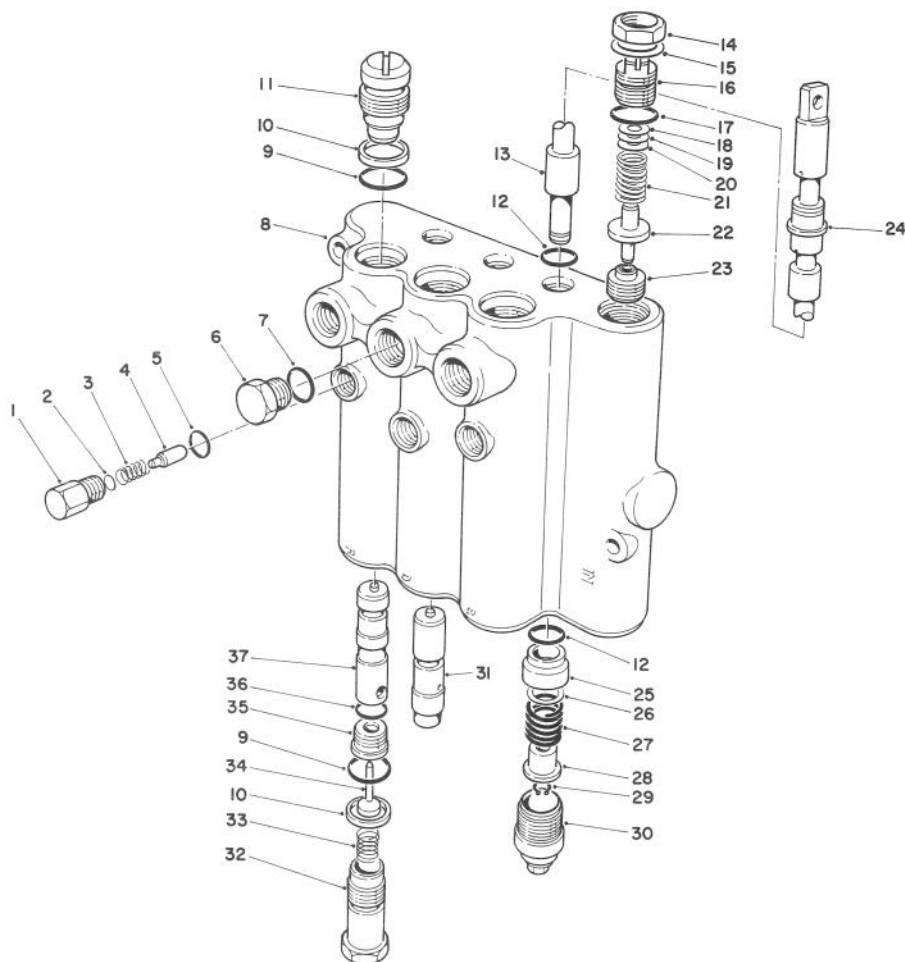


T-0379-90

LIFT VALVE ASSEMBLY NO. 69-1780

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	58-6780	Plug Assy. (Incl. Ref. #5)	3	21	69-1820	Spring - Black	1
2	60-6450	Disc	A/R	22	58-6440	Poppet	1
3	58-6760	Spring	3	†23		Seat	1
4	58-6770	Plunger - Detent	3	24	58-6320	Wiper - Seal	3
5	58-6790	Seal - O-Ring	3	25	58-6400	Bushing	3
6	58-6710	Plug Assy. (Incl. Ref. #7)	1	26	58-6700	Washer	3
7	58-6720	Seal - O-Ring	1	27	58-6730	Spring	3
†8		Body	1	28	58-6310	Spacer	3
9	60-5720	Seal - O-Ring	6	29	58-6460	Ring - Retaining	3
10	58-6370	Washer - Back-Up	6	30	58-6420	Cap Assembly	3
11	58-6350	Plug Assembly (Incl. Ref. #9-10)	3	31	69-1840	Plunger	1
12	58-6450	Seal - O-Ring	6	32	69-1800	Plug Assembly (Incl. Ref. #9-10)	3
†13		Spool	3	33	69-1810	Spring	3
14		Nut - Lock	1	34	58-6290	Poppet Assembly	3
15		Washer	1	35	58-6330	Seat Assy. (Incl. Ref. #36)	3
16	69-1830	Plug Assembly (Incl. Ref. #14, 15 & 17)	1	36	58-6340	Seal - O-Ring	3
17	58-6750	Seal - O-Ring	1	37	69-1790	Plunger	2
18	58-6470	Washer	A/R	*	60-3780	Seal Kit (Incl. Ref. #5, 7, 9, 10, 12, 17, 24, 29, 34, & 36)	
19	58-6480	Washer	A/R				
20	58-6490	Washer	A/R				

*Not Illustrated

†Not Serviceable Separately

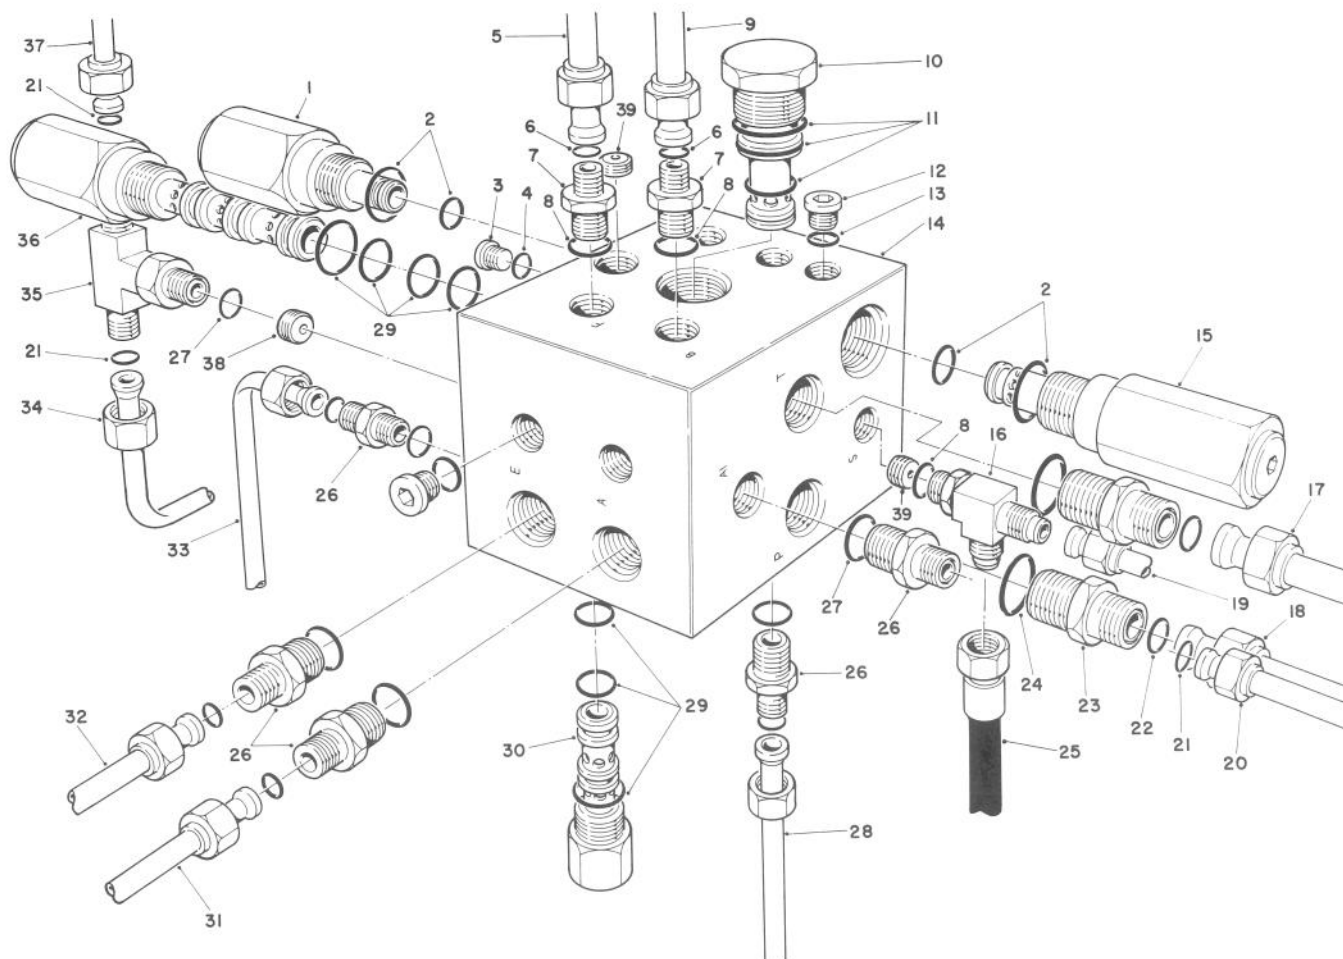


T-0356A-90

COUNTERBALANCE MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-4080	Valve - Hydraulic Cartridge (Incl. Ref. #2)	1
2	69-4230	Kit - Seal	2
3	353-990	Plug - Hose (Incl. Ref. #4)	2
4	237-78	Seal - O-Ring	2
5	69-5890	Tube - Hydraulic	1
6	237-21	Seal - O-Ring	2
7	340-92	Fitting - Hydraulic Straight (Incl. Ref. #6 & 8)	2
8	237-78	Seal - O-Ring	3
9	69-5680	Tube - Hydraulic	1
10	69-4120	Valve - Hydraulic Cartridge (Incl. Ref. #11)	1
11	69-4240	Kit - Seal	1
12	353-991	Plug - Hole (Incl. Ref. #13)	8
13	237-156	Seal - O-Ring	8
14	69-4070	Manifold - Counter Balance	1
15	69-4100	Valve - Hydraulic Cartridge (Incl. Ref. #2)	1
16	353-566	Tee - Hydraulic (Incl. Ref. #8)	1
17	71-3970	Tube - Hydraulic	1
18	69-5850	Tube - Hydraulic	1
19	69-5910	Tube - Hydraulic	1
20	69-5710	Tube - Hydraulic	1
21	237-22	Seal - O-Ring	7

Ref. No.	Part No.	Description	No. Used
22	237-30	Seal - O-Ring	2
23	340-4	Fitting - Hydraulic Straight (Incl. Ref. #22 & 24)	2
24	237-79	Seal - O-Ring	2
25	69-5660	Hose - Hydraulic Diagnostic	1
26	340-2	Fitting - Hydraulic Straight (Incl. Ref. #21 & 27)	5
27	237-42	Seal - O-Ring	6
28	69-5870	Tube - Hydraulic	1
29	69-4250	Kit - Seal	3
30	69-4110	Valve - Hydraulic Cartridge (Incl. Ref. #29)	2
31	69-5820	Tube - Hydraulic	1
32	69-5830	Tube - Hydraulic	1
33	69-5730	Tube - Hydraulic	1
34	69-5860	Tube - Hydraulic	1
35	340-94	Tee - Hydraulic (Incl. Ref. #21 & 27)	1
36	69-4090	Valve - Hydraulic Cartridge (Incl. Ref. #29)	1
37	69-5920	Tube - Hydraulic	1
*	69-4060	Counterbalance Manifold (Incl. Ref. #1-4, 10-15, 29, 30 & 36)	1
38	69-4140	Plug - Orifice .120	1
39	69-4130	Plug - Orifice .047	2

*Not Illustrated

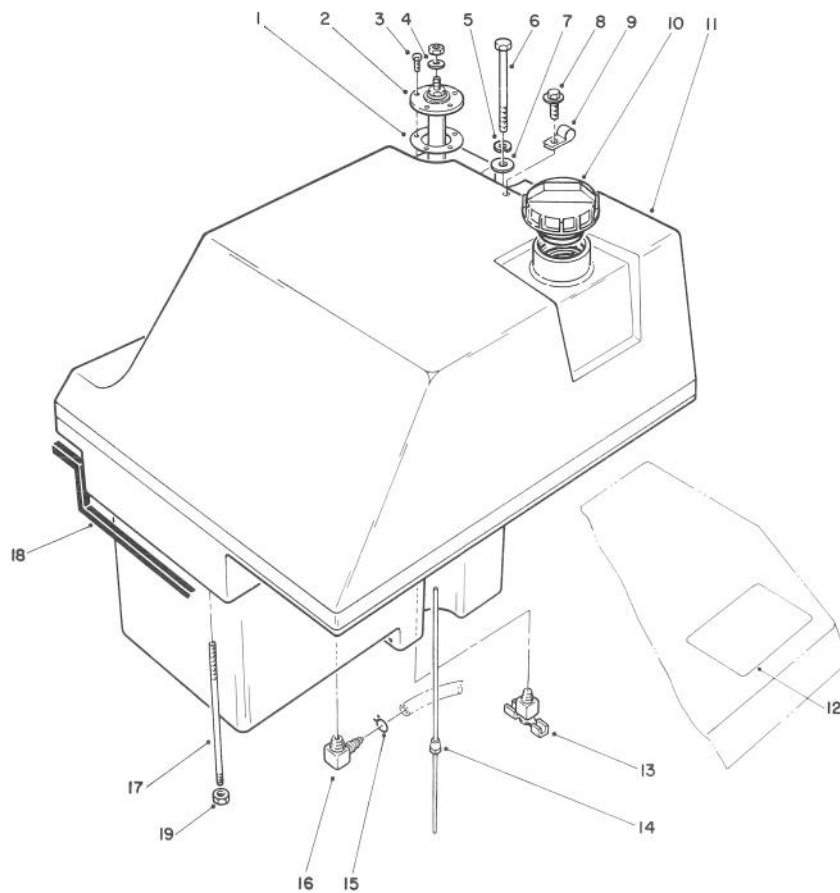


T-0353A-90

FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62-7650	Gasket - Level Sensing Unit	1
2	70-6990	Level Sensing Unit Assembly	1
3	32140-40	Screw - Cap Hex. Hd.	5
4	5-3637	Spacer - Terminal	1
5	3253-21	Washer - Lock	2
6	323-23	Screw - Cap Hex. Hd.	1
7	5-3177	Washer - Flat	1
8	3234-13	Screw - Hex. Washer Hd.	1
9	2412-89	Clamp - R	1
10	70-8620	Cap - Fuel	1


Ref. No.	Part No.	Description	No. Used
11	80-0010	Tank - Fuel	1
12	69-0930	Decal - Warning	1
13	304-46	Drain - Fuel Tank	1
14	69-7200	Tube - Vent	1
15	2412-6	Clamp - Hose	1
16	353-781	Fitting - Fuel 90 Elbow	1
17	72-9550	Stud - Fuel Tank	1
18	68-7572	Strip - Sealing	1
19	3217-7	Nut - Hex.	1

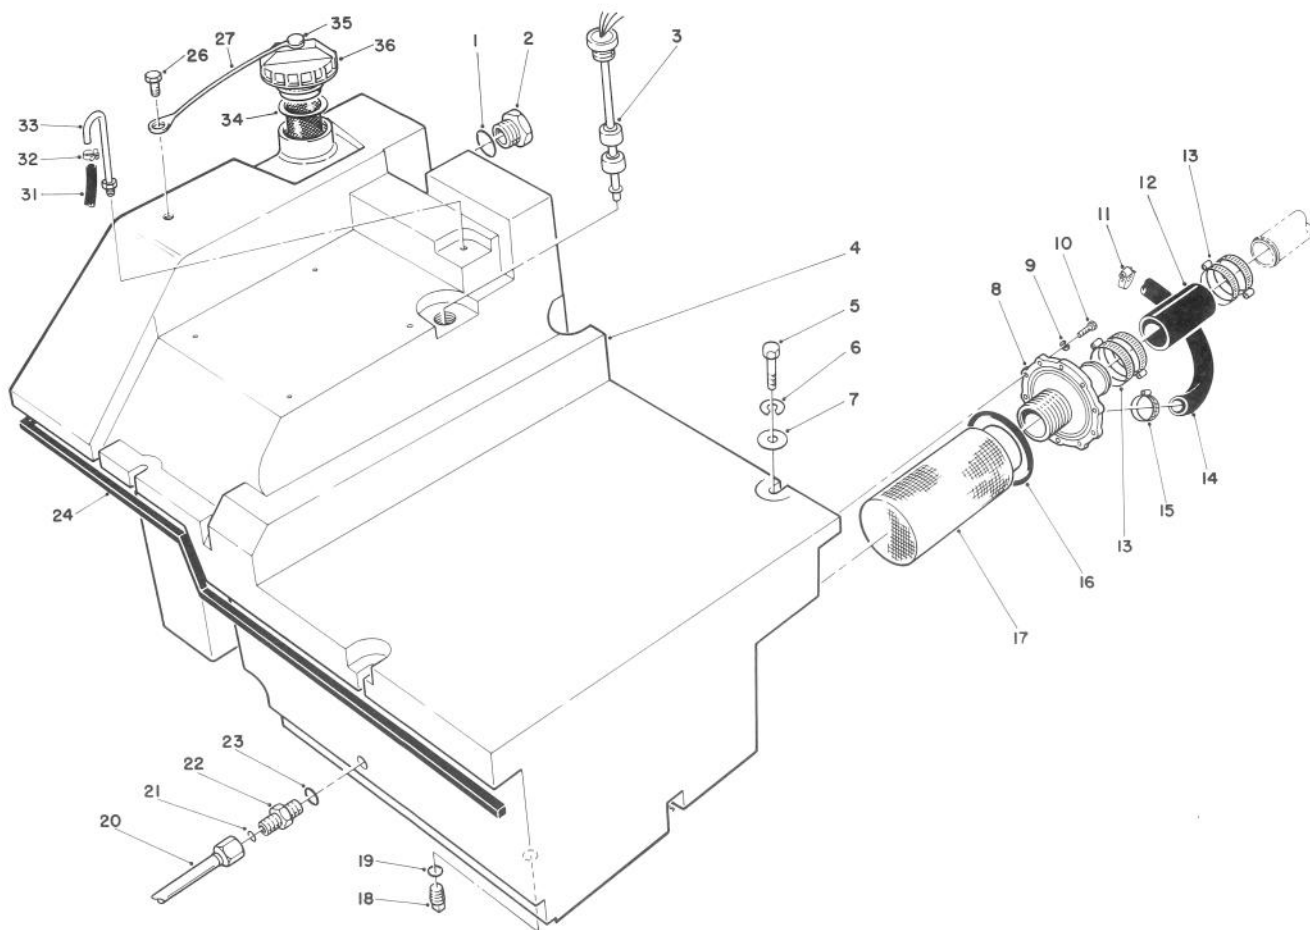

T-0354A-90

HYDRAULIC TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	237-81	Seal - O-Ring	1	18	58-9160	Plug - Drain	1
2	69-1170	Gauge - Sight (Incl. Ref. #1)	1	19	237-80	Seal - O-Ring	3
3	85-6260	Level Sensing Unit	1	20	69-5800	Tube - Hydraulic	1
4	77-5390	Tank - Hydraulic	1	21	237-22	Seal - O-Ring	1
5	323-10	Screw - Cap Hex. Hd.	4	22	340-3	Fitting - Hydraulic Straight (Incl. Ref. #21 & 23)	1
6	3253-21	Washer - Lock	4	23	237-79	Seal - O-Ring	1
7	5-3177	Washer - Flat	4	24	68-7571	Strip - Sealing	1
8	69-1610	Adapter - Suction Hose	1	26	321-2	Screw - Cap, Hex. Hd.	1
9	3253-3	Washer - Lock	10	27	75-0540	Tether - Cap, Reservoir	1
10	321-5	Screw - Cap Hex. Hd.	10	31	71-2680	Hose - Vent	1
11	2412-34	Clamp - Hose	1	32	2412-108	Clamp - Hose	2
12	69-5640	Hose - Suction	1	33	69-4280	Tube - Hydraulic Vent	1
13	2412-42	Clamp - Hose	4	34	61-2790	Filler - Screen	1
14	69-5370	Hose - Auxiliary Suction	1	35	2410-73	Pin - Tether	1
15	2412-3	Clamp - Hose	1	36	70-8640	Cap - Hydraulic (Incl. Ref. #27 & 35)	1
16	237-157	Seal - O-Ring	1				
17	69-1650	Screen - Suction	1				

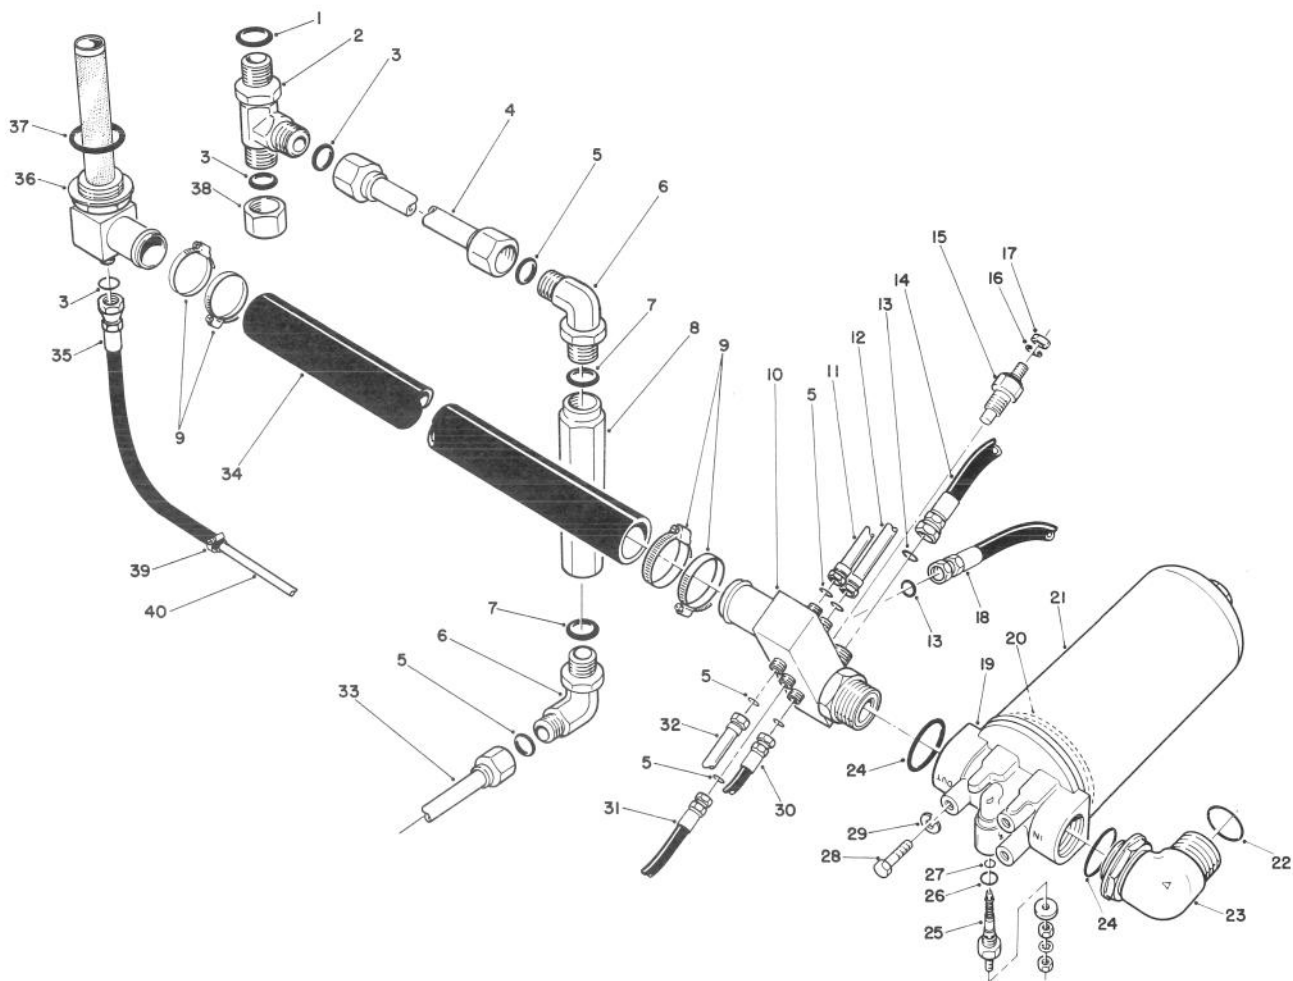


T-0367A

HYDRAULIC FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	237-80	Seal - O-Ring	1
2	340-22	Fitting - Hydraulic Tee (Incl. Ref. #1 & 3)	1
3	237-65	Seal - O-Ring	3
4	76-4450	Tube - Hydraulic	1
5	237-22	Seal - O-Ring	5
6	340-18	Fitting - Hydraulic 90° Elbow (Incl. Ref. #5 & 7)	2
7	237-79	Seal - O-Ring	2
8	76-4470	Valve - Check	1
9	2412-92	Clamp - Hose	4
10	69-5410	Manifold - Return (Incl. Ref. #5, 13 & 24)	1
11	69-6000	Tube - Hydraulic (Incl. Ref. #5)	1
12	69-5990	Tube - Hydraulic (Incl. Ref. #5)	1
13	237-30	Seal - O-Ring	2
14	69-5460	Hose - Hydraulic	1
15	39-7592	Temperature Sending Unit	1
16	3253-2	Washer - Lock	1
17	3219-14	Nut - Hex.	1
18	69-5650	Hose - Hydraulic	1
19	69-1700	Hydraulic Filter Assembly (Incl. Ref. #20, 21 & 25-27)	1
20	237-155	Seal - O-Ring	1

Ref. No.	Part No.	Description	No. Used
21	69-1720	Element - Filter (Incl. Ref. #20)	1
22	340-65	Seal - O-Ring	1
23	340-79	Fitting - Hydraulic 90° Elbow (Incl. Ref. #22 & 24)	1
24	237-101	Seal - O-Ring	2
25	69-1710	Indicator - Filter (Incl. Ref. # 26 & 27)	1
†26		Seal - O-Ring	1
†27		Seal - O-Ring	1
28	323-4	Screw - Cap Hex. Hd.	3
29	3253-21	Washer - Lock	3
30	69-5440	Hose - Hydraulic	1
31	69-8440	Hose - Hydraulic	1
32	69-5950	Tube - Hydraulic	1
33	76-4440	Tube - Hydraulic	1
34	74-2660	Hose - Hydraulic Return	1
35	77-4970	Hose - Hydraulic	1
36	74-2670	Fitting - Tank Return (Incl. Ref. #17 & 35)	1
37	340-136	Seal - O-Ring	1
38	340-150	Cap - Hydraulic	1
39	2412-119	Clamp - Hose	1
40	77-4960	Tube - Hydraulic	1

†Not serviceable separately.

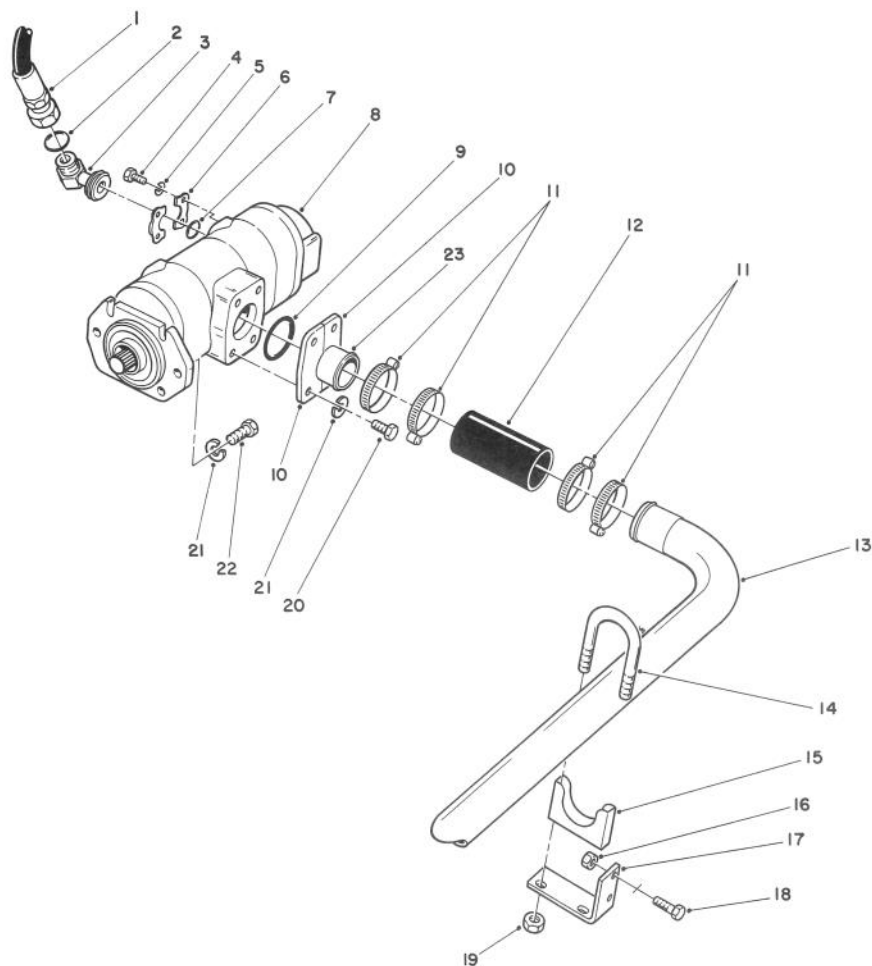


T-0349-90

HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-5590	Hydraulic Hose Assembly	2
2	237-58	Seal - O-Ring	2
3	69-6240	Fitting - Hydraulic 90° (Incl. Ref # 2 & 7)	2
4	323-7	Screw - Cap Hex. Hd.	8
5	3253-21	Washer - Lock	8
6	353-992	Flange - Fitting	4
7	340-135	Seal - O-Ring	2
8	69-2050	Hydraulic Pump Assembly	1
9	237-116	Seal - O-Ring	1
10	354-42	Flange - Half	2
11	2412-42	Clamp - Hose	4
12	69-5640	Hose - Hydraulic	1

Ref. No.	Part No.	Description	No. Used
13	69-6110	Hydraulic Tube Assembly	1
†14		Bolt - U	2
15	20-4840	Clamp - Tube (Incl. Ref. #14 & 19)	2
16	32152-2	Nut - Lock	4
17	69-9220	Support - Tube Clamp	2
18	323-6	Screw - Cap Hex. Hd.	4
19	3217-6	Nut - Lock	4
20	325-6	Screw - Cap Hex. Hd.	4
21	3253-7	Washer - Lock	8
22	3213-2	Screw - Cap Hex. Hd.	4
23	74-2270	Fitting - Suction	1

†Not serviceable separately.

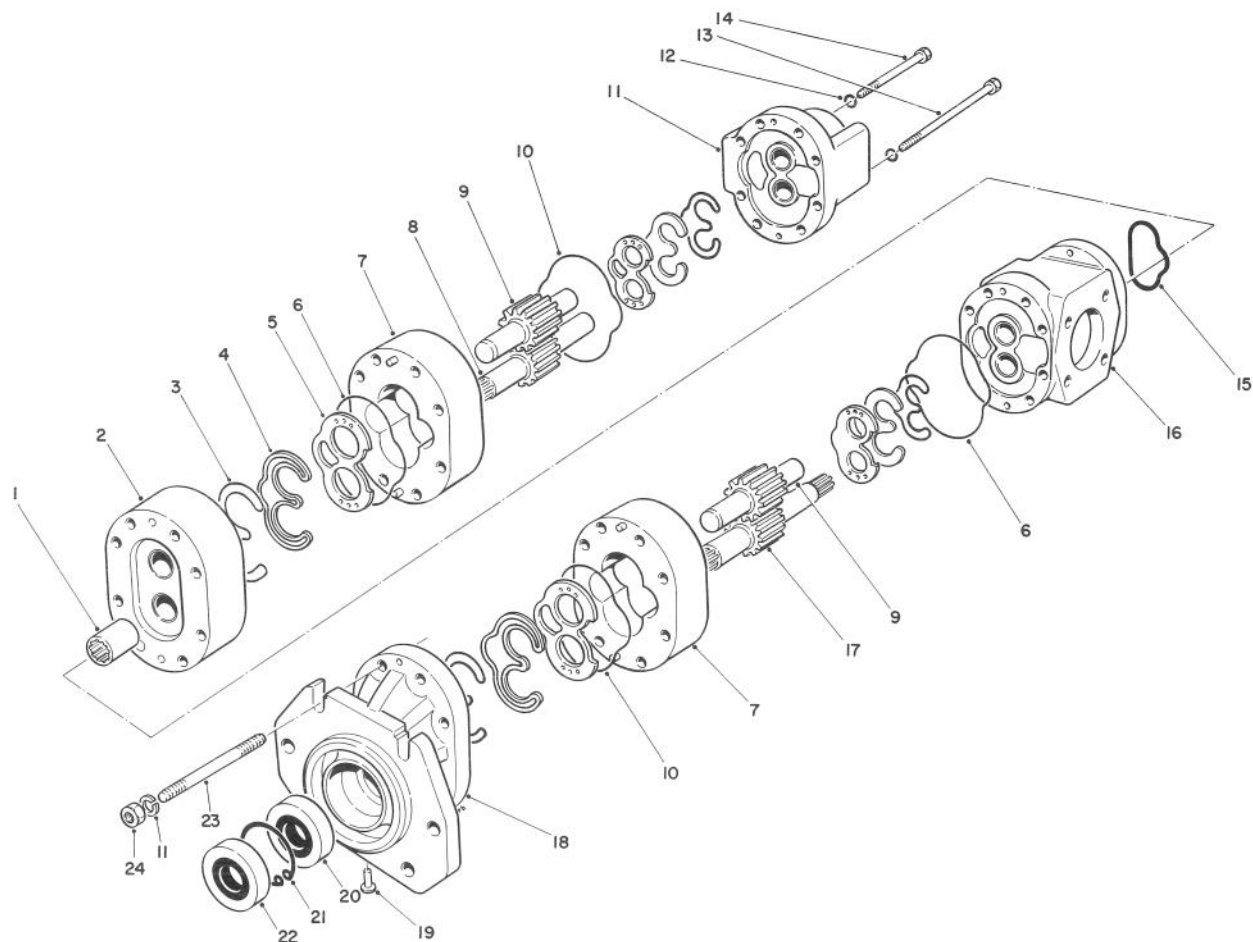


DOUBLE GEAR PUMP NO. 69-2050

T-0382-90

Ref. No.	Part No.	Description	No. Used
1	69-2110	Coupling	1
2	69-2170	Adapter Section Assembly	1
3	59-7990	Seal - Gland	4
4	59-8470	Retainer - Seal	4
5	69-2070	Plate - Flex	4
6	69-2200	Seal - O-Ring	2
7	69-2080	Center Section Assembly	2
8	69-2090	Gear/Shaft - Rear Drive	1
9	59-8600	Gear - Driven	2
10	69-2120	Seal - O-Ring	2
11	69-2100	Rear Cover Assembly	1
12	59-7590	Washer - Lock	16
13	69-2150	Screw - Cap Hex. Hd.	4

Ref. No.	Part No.	Description	No. Used
14	69-2140	Screw - Cap Hex. Hd.	4
15	69-2210	Seal - O-Ring	1
16	69-2160	Port Section Assembly	1
17	59-8500	Gear/Shaft - Front Drive	1
18	69-2060	Shaft End Cover Assembly	1
19	69-2130	Plug	1
20	59-8590	Seal - Shaft	1
21	59-8580	Ring - Retaining	1
22	59-8570	Seal - Shaft	1
23	59-7970	Stud - Threaded	8
24	59-7580	Nut - Hex.	8
*	59-8610	Repair Kit (Incl. Ref. #3, 4, 20 & 22)	1

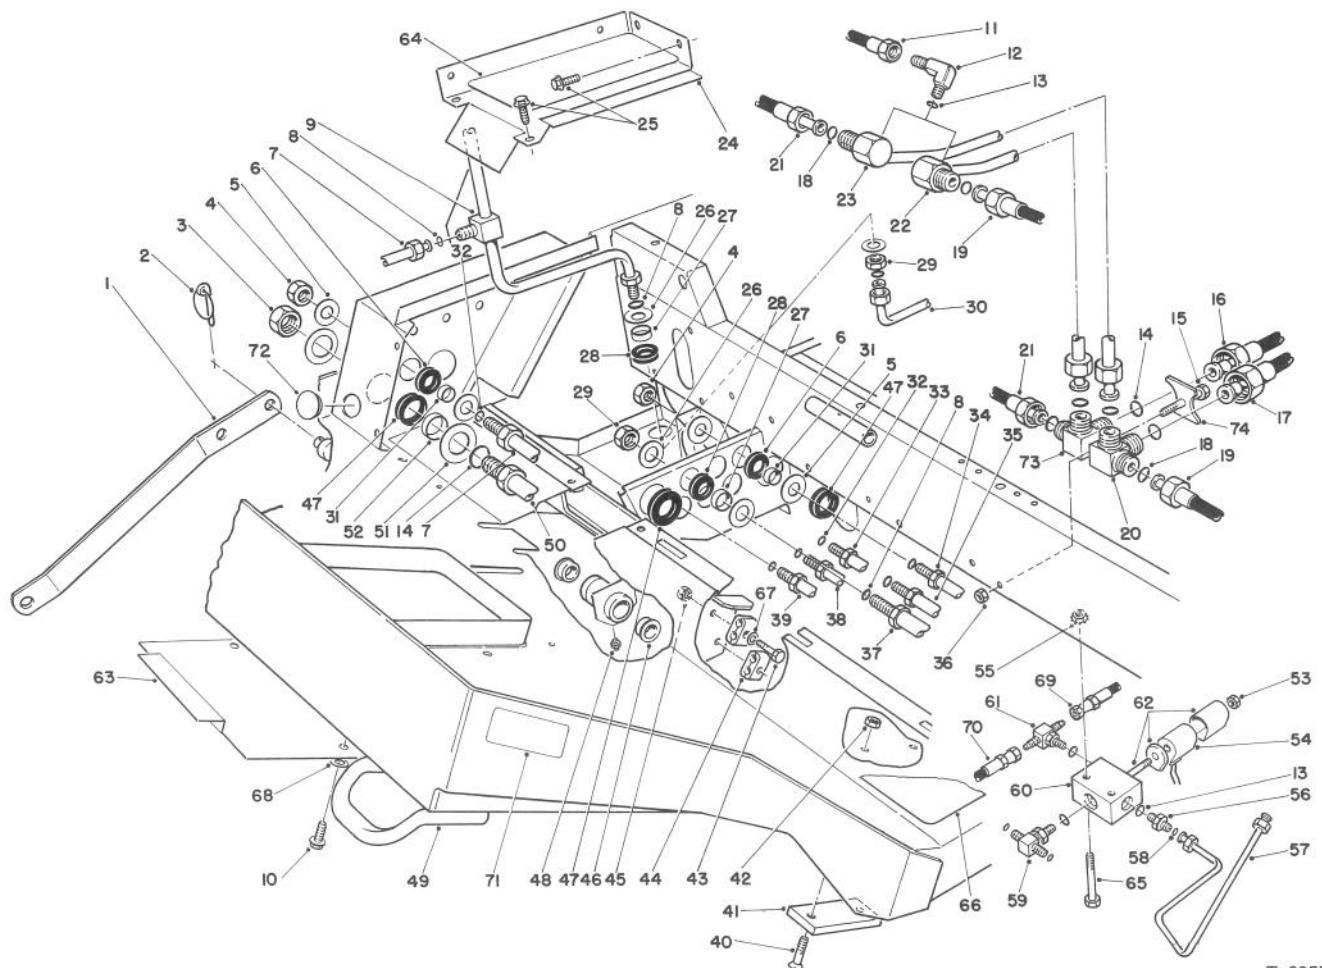


T-0357B

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	85-6190	Link - Deck Tilt	1
2	32-0140	Pin - Lynch	2
3	340-126	Nut - Bulkhead	2
4	340-70	Nut - Bulkhead	6
5	69-8940	Washer	12
6	240-4	Grommet	6
7	69-5690	Tube - Hydraulic (Incl. Ref. #32)	1
8	237-30	Seal - O-Ring	3
9	71-3970	Tube - Hydraulic (Incl. Ref. #8)	1
10	3234-28	Screw - Hex. Flange Hd.	2
11	69-5660	Hose - Hydraulic	2
12	353-375	Fitting - Hydraulic 90° Elbow (Incl. Ref. #13)	2
13	237-78	Seal - O- Ring	5
14	237-58	Seal - O- Ring	4
15	322-10	Screw - Cap Hex. Hd.	1
16	69-5470	Hose - Hydraulic	1
17	69-5480	Hose - Hydraulic	1
18	237-65	Seal - O-Ring	6
19	83-4330	Assy. - Tube, Traction L.H.	2
20	83-8350	Fitting - Traction, L.H. (Incl. Ref. #14 & 18)	1
21	83-4340	Assy. - Tube, Traction R.H.	2
22	69-6200	Tube - Hydraulic (Incl. Ref. #18)	1

Ref. No.	Part No.	Description	No. Used
23	69-6190	Tube - Hydraulic (Incl. Ref. #18)	1
24	71-2450	Cover - Access	1
25	3234-14	Screw - Hex. Flange Hd.	4
26	69-8930	Washer	4
27	69-8960	Spacer	2
28	240-5	Grommet	2
29	340-127	Nut - Bulkhead	2
30	76-4460	Tube - Hydraulic	1
31	69-8970	Spacer	6
32	237-22	Seal - O-Ring	6
33	69-6050	Tube - Hydraulic (Incl. Ref. #32)	1
34	69-6040	Tube - Hydraulic (Incl. Ref. #32)	1
35	69-6030	Tube - Hydraulic (Incl. Ref. #32)	1
36	32152-1	Nut - Lock	1
37	69-5790	Tube - Hydraulic (Incl. Ref. #8)	1
38	69-6060	Tube - Hydraulic (Incl. Ref. #32)	1
39	69-5880	Tube - Hydraulic (Incl. Ref. #32)	1
40	32108-103	Screw - Machine Flat Hd.	4
41	69-9300	Cushion - Rubber	2
42	32152-1	Nut - Lock	4

*Not Illustrated

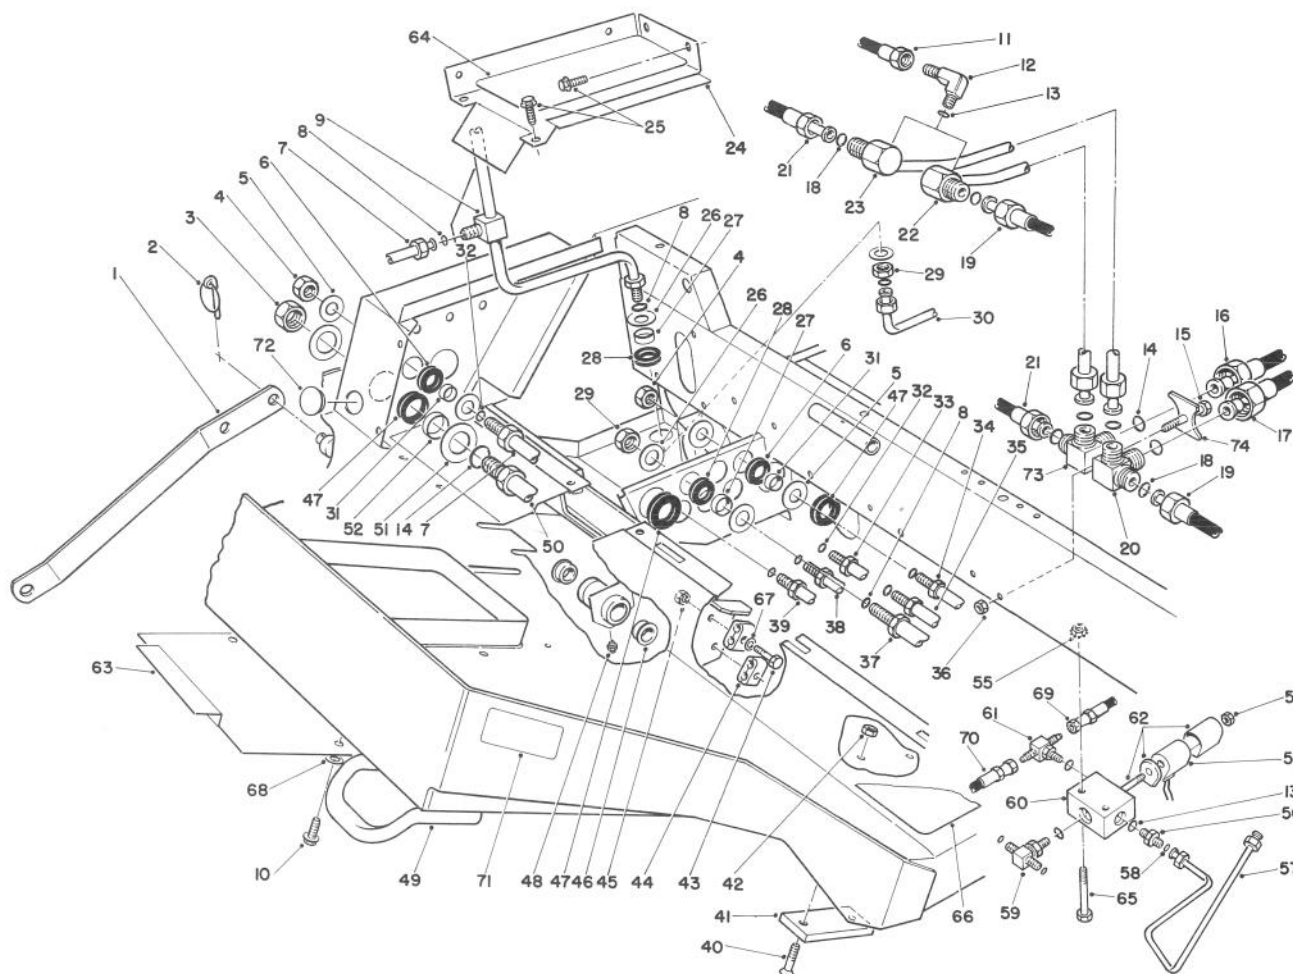

T-0357B


FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
43	321-9	Screw - Cap Hex. Hd.	2
44	56-7973	Clamp Half - Hydraulic Line	4
45	32152-4	Nut - Lock	2
46	256-247	Bushing - Flange	2
47	240-7	Grommet	4
48	302-5	Fitting - Grease	1
49	69-0100	Frame - Assembly (Incl. Ref. #46 & 48)	1
50	69-6100	Tube - Hydraulic Pressure (Incl. Ref. #14)	1
*	69-5810	Tube - Hydraulic Return (Incl. Ref. #14)	1
51	69-8910	Washer	4
52	69-8900	Spacer	2
53	3220-3	Nut	1
54	71-2660	Solenoid Coil Kit (Incl. Ref. #53)	3
55	32149-2	Nut - Keps	2
56	340-92	Fitting - Hydraulic (Incl. Ref. #13 & 58)	1
57	69-5950	Tube - Hydraulic	1
58	237-21	Seal - O-Ring	3
59	340-125	Fitting - Hydraulic	

Ref. No.	Part No.	Description	No. Used
		(Incl. Ref. #13 & 58)	1
†60		Body - Valve	1
61	340-123	Fitting - Hydraulic (Incl. Ref. #13)	1
62	71-2640	Valve - Solenoid (Incl. Ref. #53-54)	1
63	69-9470	Cover - Access	1
64	71-0430	Cover - Abrasive	1
65	321-11	Screw - Cap Hex. Hd.	2
66	71-0420	Floor - Abrasive	1
67	3256-56	Washer - Flat	2
68	3256-23	Washer - Flat	2
69	69-5663	Hose - Diagnostic	1
70	69-5664	Hose - Diagnostic	1
71	72-4080	Decal - Danger	2
72	2410-10	Plug - Button	1
73	83-8360	Fitting - Traction, R.H.	1
74	83-8370	Plate - Clamp	1
*	71-2650	Valve Seal Kit	1
*	71-2630	Solenoid Valve Assembly (Incl. Ref. #53, 54, 60 & 62)	1

*Not Illustrated


†Not serviceable separately.

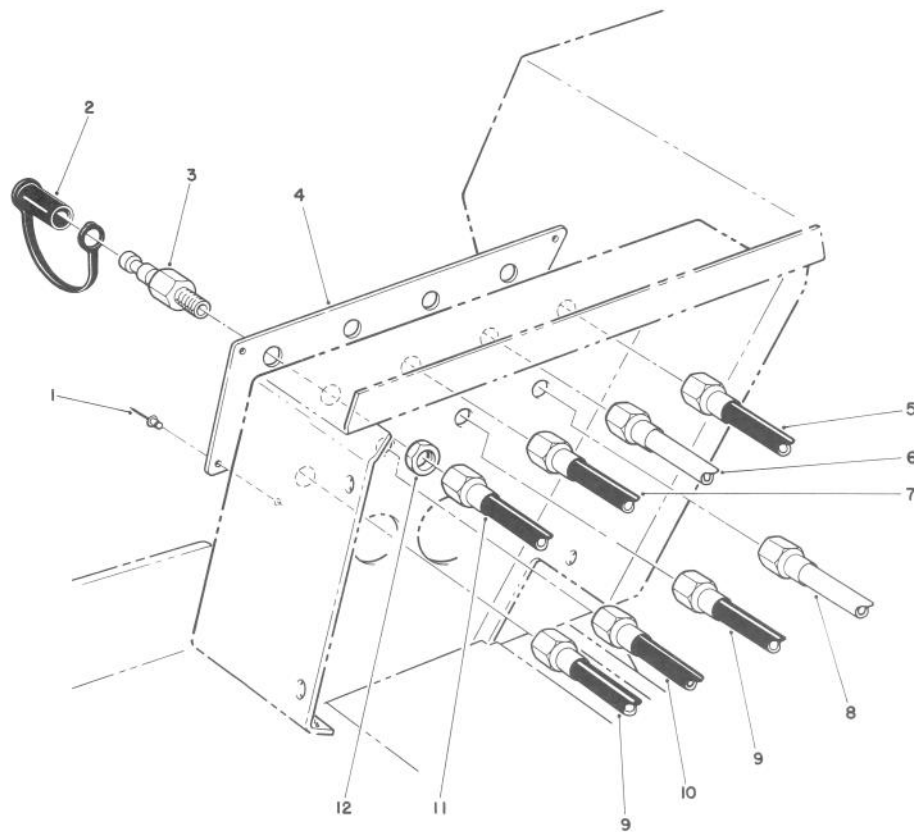

T-0363A-90

HYDRAULIC SYSTEM DIAGNOSTIC PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3269-25	Rivet - Pop	4	7	69-5664	Hose - Hydraulic Diagnostic	1
2	353-947	Cap - Fitting	8	8	69-5920	Tube - Diagnostic	1
3	353-997	Fitting - Hydraulic Bulkhead (Incl. Ref. #12)	8	9	69-5662	Hose - Hydraulic Diagnostic	2
4	69-0960	Panel - Diagnostic	1	10	69-5665	Hose - Hydraulic Diagnostic	1
5	69-5660	Hose - Hydraulic Diagnostic	1	11	69-5661	Hose - Hydraulic Diagnostic	1
6	69-5910	Tube - Hydraulic Diagnostic	1	12	3220-4	Nut - Bulkhead	8

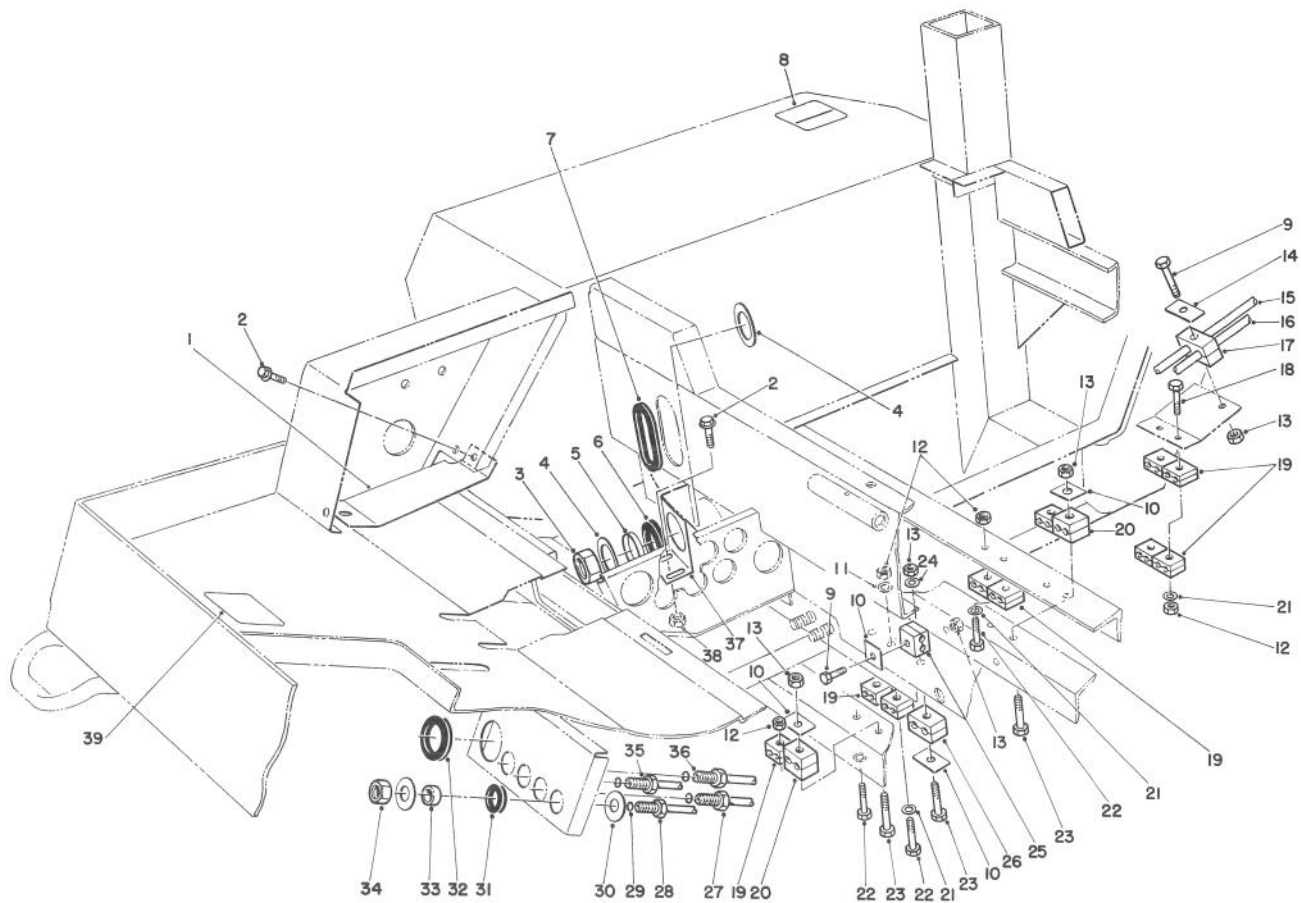


T-0358-90

HYDRAULIC LINE CLAMPS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-9330	Cover	1
2	3234-14	Screw - Hex. Flange Hd.	6
3	340-128	Nut - Bulkhead	2
4	69-8920	Washer	4
5	69-8950	Spacer	2
6	240-2	Grommet	2
7	237-164	Grommet	1
8	69-0920	Decal - Hydraulic Oil	1
9	322-11	Screw - Cap Hex. Hd.	8
10	69-9760	Plate - Cover	10
11	3256-22	Washer - Flat	2
12	32152-4	Nut - Lock	6
13	32152-1	Nut - Lock	11
14	69-9761	Plate - Cover	1
15	69-6130	Tube - Hydraulic	1
16	69-6120	Tube - Hydraulic	1
17	56-7974	Clamp Half - Hydraulic Line	2
18	321-15	Screw - Cap Hex. Hd.	2
19	56-7973	Clamp Half - Hydraulic Line	20
20	56-7972	Clamp Half - Hydraulic Line	4
21	3256-56	Washer - Flat	8
22	321-9	Screw - Cap Hex. Hd.	6

Ref. No.	Part No.	Description	No. Used
23	322-10	Screw - Cap Hex. Hd.	3
24	3256-23	Washer - Flat	1
25	56-7975	Clamp Half - Hydraulic Line	14
26	56-7971	Clamp Half - Hydraulic Line	2
27	69-6090	Tube - Hydraulic (Incl. Ref. #29)	1
28	69-5800	Tube - Hydraulic (Incl. Ref. #29)	1
29	237-21	Seal - O-Ring	4
30	69-8980	Washer	8
31	240-6	Grommet	4
32	240-7	Grommet	1
33	69-8990	Spacer	4
34	340-78	Nut - Bulkhead	4
35	69-6080	Tube - Hydraulic (Incl. Ref. #29)	1
36	69-6070	Tube - Hydraulic (Incl. Ref. #29)	1
37	71-2560	Support - Bulkhead	2
38	32128-20	Nut - Lock	4
39	69-0940	Decal - Caution	1

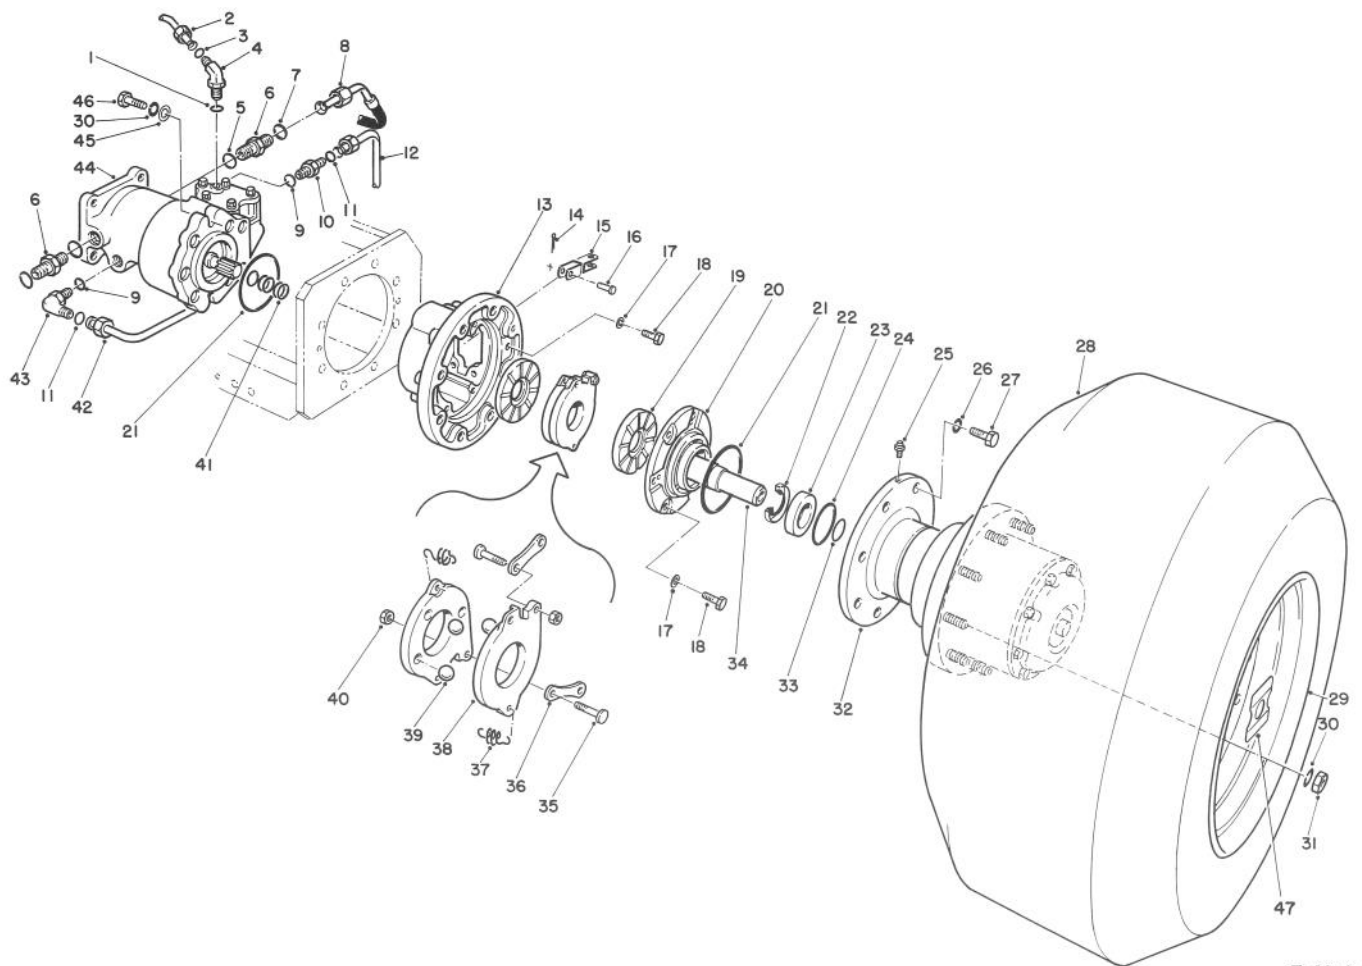


T-0342-90

FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	237-42	Seal - O-Ring	2
2	69-5940	Tube - Hydraulic L.H.	1
*	69-5930	Tube - Hydraulic R.H.	1
3	237-21	Seal - O-Ring	2
4	340-82	Fitting - Hydraulic Elbow (Incl. Ref. #1 & 3)	2
5	237-146	Seal - O-Ring	4
6	340-91	Fitting - Hydraulic Straight (Incl. Ref. #5 & 7)	4
7	237-58	Seal - O-Ring	6
8	69-5760	Hose - Hydraulic L.H.	2
*	69-5770	Hose - Hydraulic R.H.	2
9	237-81	Seal - O-Ring	4
10	340-8	Fitting - Hydraulic St. L.H. (Incl. Ref. #9 & 11)	1
*	340-148	Fitting - Hydraulic Tee R.H. (Incl. Ref. #7 & 9)	1
11	237-65	Seal - O-Ring	3
12	77-4960	Tube - Hydraulic L.H.	1
*	76-4440	Tube - Hyd. R.H. Run	1
*	85-6150	Tube - Hyd. R.H. Branch	1
13	71-4010	Housing - Brake	2
14	3272-6	Pin - Cotter	2
15	71-3880	Clevis - Brake Cable	2
16	283-2	Pin - Clevis	2
17	3253-21	Washer - Lock	14
18	323-6	Screw - Cap Hex. Hd.	14
19	71-0470	Disc - Middle	4
20	71-3990	Cap - Brake Housing	2
21	237-158	Seal - O-Ring	4

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
22	253-156	Seal - Oil	2
23	251-340	Bearing - Ball	2
24	32120-22	Ring - Retaining Internal	2
25	302-39	Vent	2
26	3253-8	Washer - Lock	16
27	327-22	Screw - Cap Hex. Hd.	16
28	69-9800	Tire	2
*	58-5620	Tube - Inner	1
*	231-139	Tire - R.H. (Optional)	2
*	231-140	Tire - L.H. (Optional)	1
29	71-2470	Rim	2
30	3253-7	Washer - Lock	22
31	3219-5	Nut - Hex.	18
32	69-1730	Planetary Gear Drive Assy.	2
33	32120-84	Ring - Retaining External	2
34	71-3810	Coupling - Hydraulic Motor	2
35	69-9970	Stud	4
36	69-9960	Link	4
37	69-9950	Spring - Extension	4
38	69-9990	Disc - Actuating	4
39	69-9980	Ball	6
40	69-9940	Nut - Jam	4
41	253-157	Ring - Cup	8
42	71-3950	Tube - Hydraulic	1
43	340-139	Fitting - Hydraulic Elbow (Incl. Ref. #9 & 11)	2
44	69-3050	Motor - Hydraulic Wheel	2
45	3256-26	Washer - Flat	4
46	325-7	Screw - Cap Hex. Hd.	4
47	72-4070	Decal - Danger	2

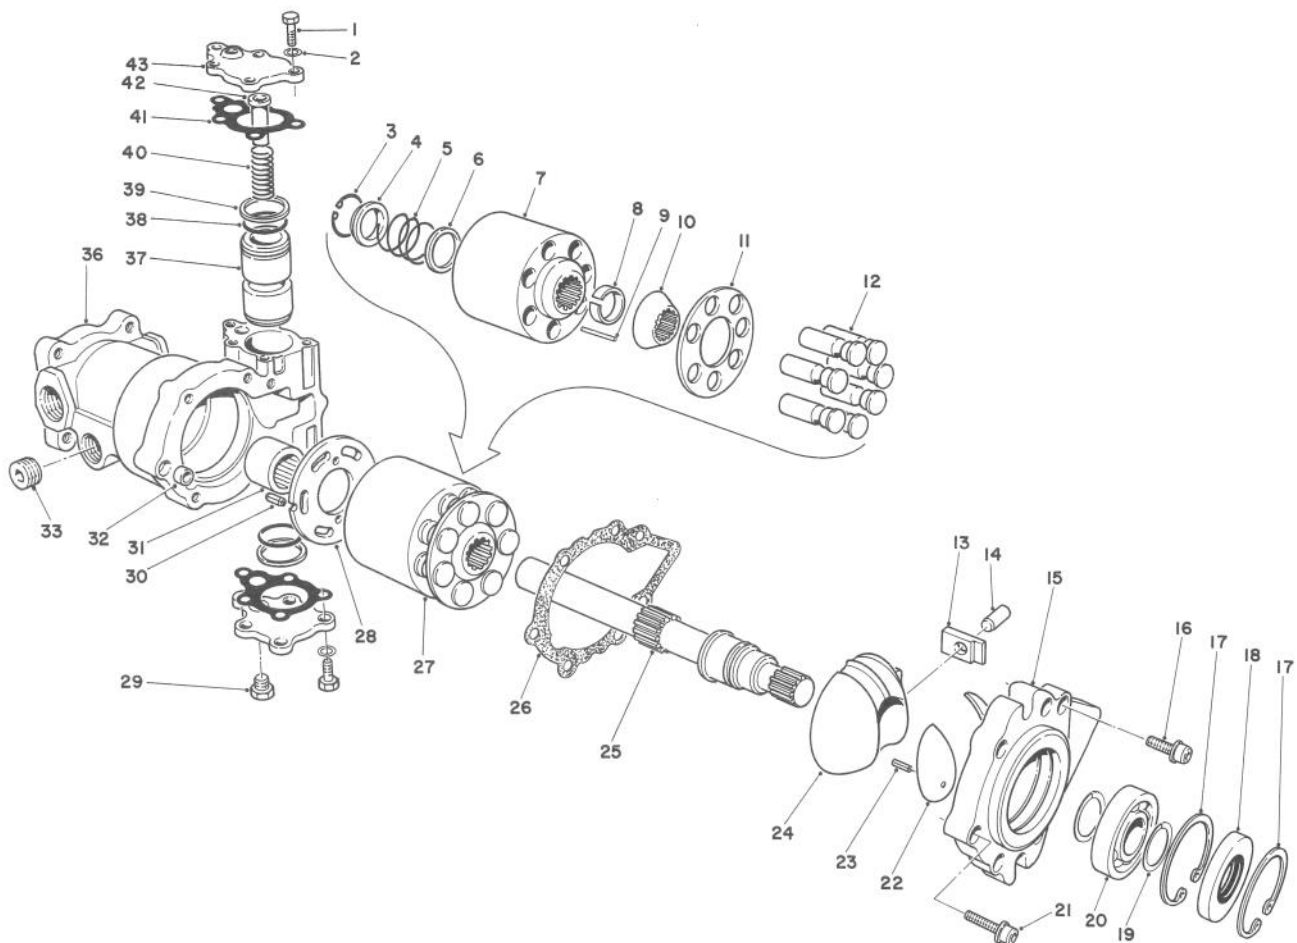

T-0372-90


WHEEL MOTOR NO. 69-3050

Ref. No.	Part No.	Description	No. Used
1	69-3150	Screw Hex. Hd.	10
2	69-3070	Washer - Plain	10
†3		Ring - Retaining	1
†4		Washer	1
†5		Spring - Compression	1
†6		Washer	1
†7		Block - Cylinder	1
†8		Retainer	1
†9		Pin - Slipper Hold Down	3
†10		Guide - Retainer	1
†11		Guide - Slipper	1
†12		Piston Assembly	7
13	69-3500	Bearing - Sleeve	1
14	69-3510	Pin	1
15	76-4610	Cover - Front	1
16	76-4590	Screw	6
17	69-3200	Ring - Retaining	2
18	69-3190	Seal - Lip	1
19	69-3170	Ring - Retaining	2
20	69-3210	Bearing - Ball	1
21	69-3960	Screw	1
22	69-3970	Bearing - Journal	2

Ref. No.	Part No.	Description	No. Used
23	69-3520	Pin - Spring	2
24	69-3980	Swashplate - Variable	1
25	69-3950	Shaft - Motor	1
26	76-4600	Gasket - Front Cover	1
27	69-3910	Cylinder Block Kit (Incl. Ref. #3-12)	1
28	69-3990	Plate - Motor Valve	1
29	69-3940	Plug	1
30	69-3450	Pin	1
31	69-3370	Bearing - Needle	1
32	69-3230	Pin - Spring	1
33	69-3130	Plug - Hole	1
†36		Housing	1
37	69-4020	Piston - Servo	1
38	69-3560	Seal - O-Ring	2
39	69-3570	Ring - Piston	2
40	69-4030	Spring - Servo	1
41	69-3710	Gasket - Servo Cover	2
42	69-4040	Stop - Servo Piston	1
43	69-3720	Cover - Servo	2
*	69-3920	Piston Ring & O-Ring Kit (Incl. Ref. #38 & 39)	1

*Not Illustrated

†Not serviceable separately.

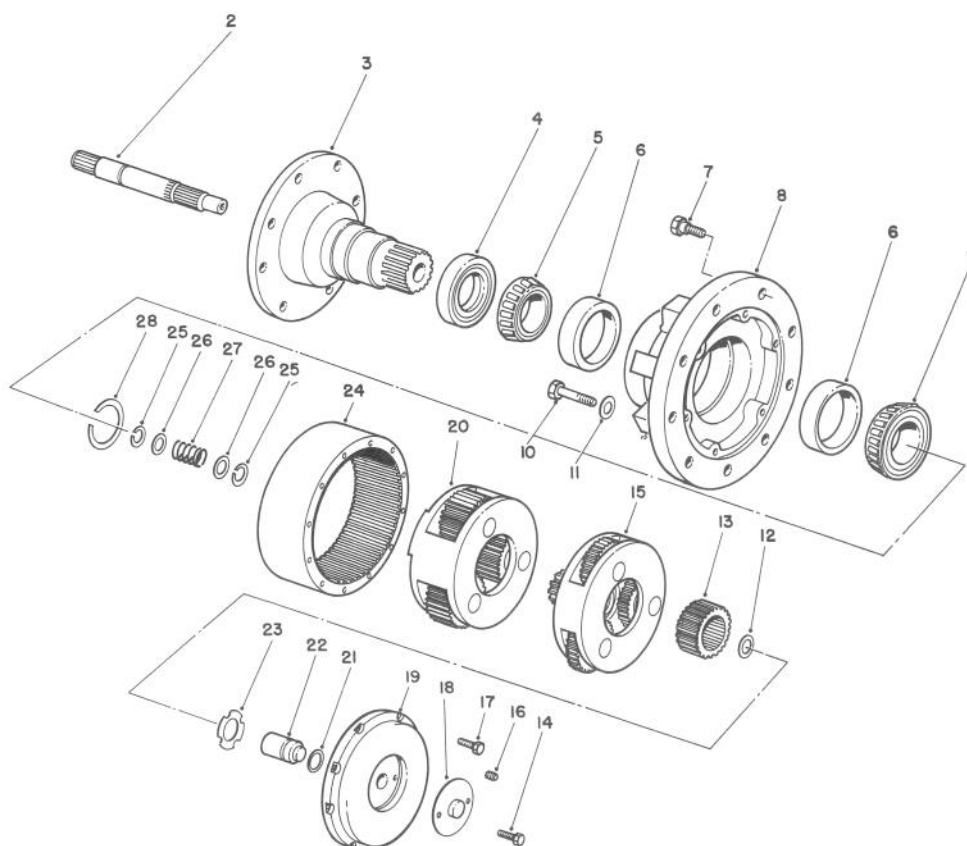


T-0140-90

PLANETARY GEAR ASSEMBLY NO. 69-1730

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
2	60-3810	Shaft - Input	1	16	60-4040	Plug - Pipe	1
3	69-1740	Spindle	1	17	60-4030	Bolt - Hex. Hd.	8
4	60-3830	Seal - Oil	1	18	60-4060	Cover - Disengage	1
5	60-3840	Cone - Bearing	1	19	60-4050	Cover - Large	1
6	60-3850	Cup - Bearing	2	20	60-4000	Secondary Carrier Assy.	1
7	60-3860	Bolt - Wheel	9	21	60-4020	Seal - O-Ring	1
8	60-3870	Hub	1	22	60-4010	Plunger - Disengage	1
9	60-3880	Cone - Bearing	1	23	60-3990	Washer - Thrust	1
10	60-3890	Bolt - Hex. Hd.	6	24	60-3900	Gear - Ring	1
11	60-3910	Washer - Flat	6	25	60-3930	Ring - Retaining	2
12	60-3980	Washer - Thrust	1	26	60-3940	Washer	2
13	60-3970	Gear - Primary Sun	1	27	60-3950	Spring - Disengage	1
14	60-4070	Bolt - Hex. Hd.	2	†28	62-6450	Kit - Retaining Ring	1
15	60-3960	Primary Carrier Assembly	1	*	62-6460	Sealant - RTV (Tube)	1

*Not Illustrated

†Includes 7 different thickness retaining rings for service adjustment of bearings.

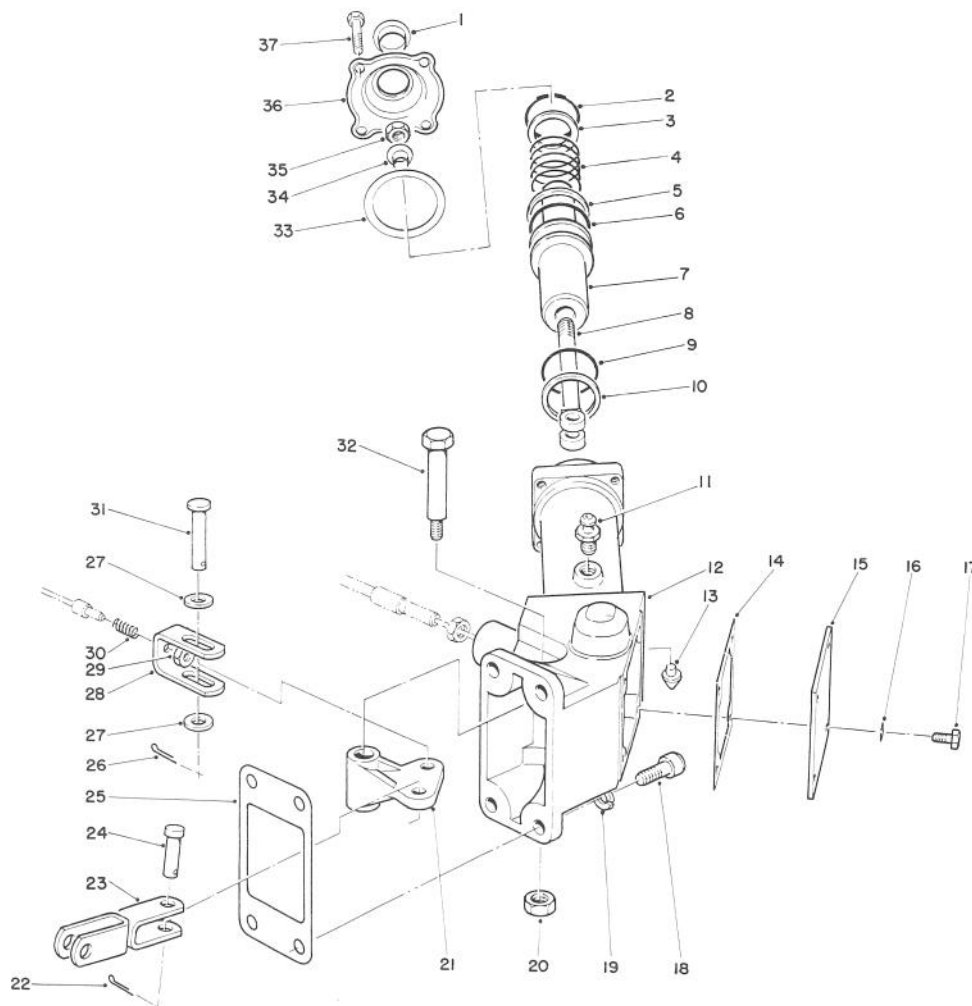


T-1277

WHEEL BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	2410-71	Plug	2	19	3253-21	Washer - Lock	8
2	32151-100	Ring - Retaining	2	20	32128-25	Nut - Lock	2
3	69-8910	Washer	2	21	71-3830	Bellcrank - Brake	2
4	82-7850	Spring - Compression	2	22	3272-6	Pin - Cotter	2
5	354-104	Ring - Backup	2	23	71-3880	Clevis - Brake Cable	2
6	237-175	O-Ring	2	24	283-2	Pin - Clevis	2
7	82-7840	Piston - Brake	2	25	71-3900	Gasket	2
8	21-2070	Yoke - End	2	26	3272-10	Pin - Cotter	2
9	237-174	O-Ring	2	27	3256-24	Washer - Flat	4
10	354-105	Ring - Backup	2	28	71-3860	Clevis	2
11	82-7830	Screw - Bleed, Brake	2	29	3296-3	Nut - Lock	2
12	82-7790	Housing - Actuator, R.H.	1	30	69-0030	Spring - Compression	2
*	82-7780	Housing - Actuator, L.H.	1	31	283-15	Pin - Clevis	2
13	82-7820	Seat - Brake, Tube	2	32	12-8900	Bolt - Shoulder	2
14	71-3920	Gasket	2	33	71-3920	Gasket	2
15	71-3850	Cover - Housing	2	34	71-3910	Collar	2
16	3253-3	Washer - Lock	8	35	3296-59	Nut - Lock	2
17	321-2	Screw - Cap Hex. Hd.	8	36	71-4110	Cap - Actuator	2
18	3274-7	Screw - Cap Socket Hd.	8	37	321-6	Screw - Cap Hex. Hd.	8


*Not Illustrated

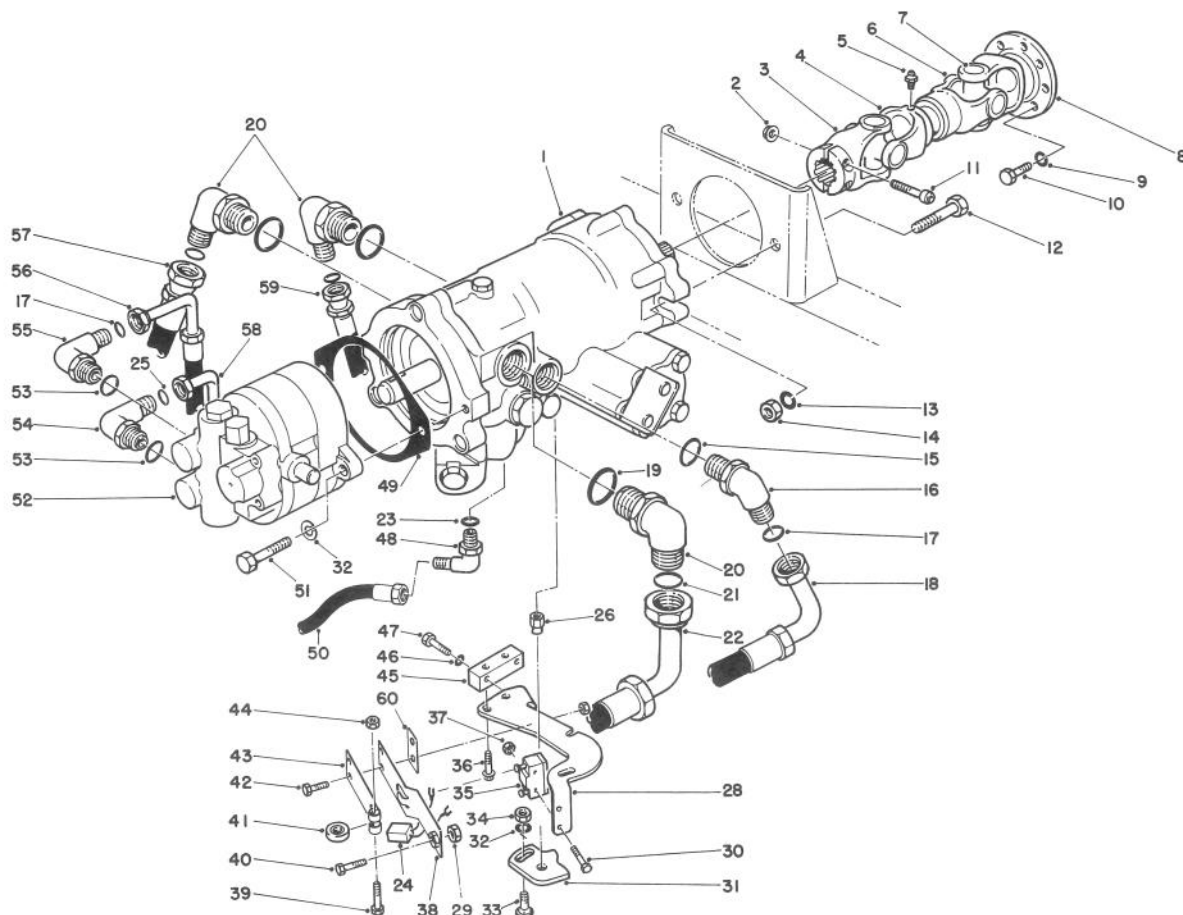

T-0350-90

VARIABLE DISPLACEMENT PUMP INSTALLATION

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-3040	Variable Displacement Pump	1	27	32152-4	Nut - Lock	2
2	32128-21	Nut - Flange Lock	2	28	69-9480	Bracket - Neutral Device	1
3	71-0520	Yoke - Pump End	1	29	3219-2	Nut - Hex.	1
4	71-0530	Tube - Slip Yoke	1	30	3249-11	Screw - Cap Hex. Hd.	2
5	302-2	Fitting - Grease	1	31	69-9040	Cam - Neutral Device	1
6	71-0510	Shaft - Slip Yoke	1	32	3253-21	Washer - Lock	3
7	2115-95	Kit - Universal Joint	2	33	3231-30	Bolt - Carriage	1
8	71-0500	Yoke - Engine End	1	34	3217-7	Nut - Hex.	1
9	48-9570	Washer - Lock	8	35	29-6163	Switch - Neutral	1
10	48-7710	Screw - Cap Hex. Hd.	8	36	3234-13	Screw - Hex. Flange Hd.	4
11	3274-50	Screw - Hex. Socket Hd.	2	37	3296-9	Nut - Lock	2
12	325-7	Screw - Cap Hex. Hd.	2	38	29-6170	Leaf Spring Assembly	1
13	3253-7	Washer - Lock	2	39	322-17	Screw - Cap Hex. Hd.	1
14	3217-9	Nut - Hex.	2	40	3210-7	Screw - Cap Hex. Hd.	1
15	237-81	Seal - O-Ring	1	41	251-259	Bearing - Neutral Detent	1
16	340-131	Fitting - Hydraulic Elbow (Incl. Ref. #15 & 17)	1	42	321-4	Screw - Cap Hex. Hd.	2
17	237-30	Seal - O-Ring	2	43	29-6150	Spring - Leaf	1
18	69-5460	Hose - Hydraulic	1	44	32153-3	Nut - Lock	1
19	237-146	Seal - O-Ring	3	45	69-9050	Bar - Neutral Device	1
20	340-15	Fitting - Hydraulic Elbow (Incl. Ref. #19 & 21)	3	46	3253-3	Washer - Lock	2
21	237-58	Seal - O-Ring	3	47	321-10	Screw - Cap Hex. Hd.	2
22	69-5650	Hose - Hydraulic	1	48	340-134	Fitting - Hydraulic Elbow (Incl. Ref. #23)	1
23	237-42	Seal - O-Ring	1	49	41-8760	Gasket - Pump	1
24	72-3790	Wire - Neutral Switch	1	50	69-5663	Hose - Hydraulic	1
26	69-9020	Nut - Special	1	51	323-7	Screw - Cap Hex. Hd.	2
				52	69-2220	Pump/Valve	1

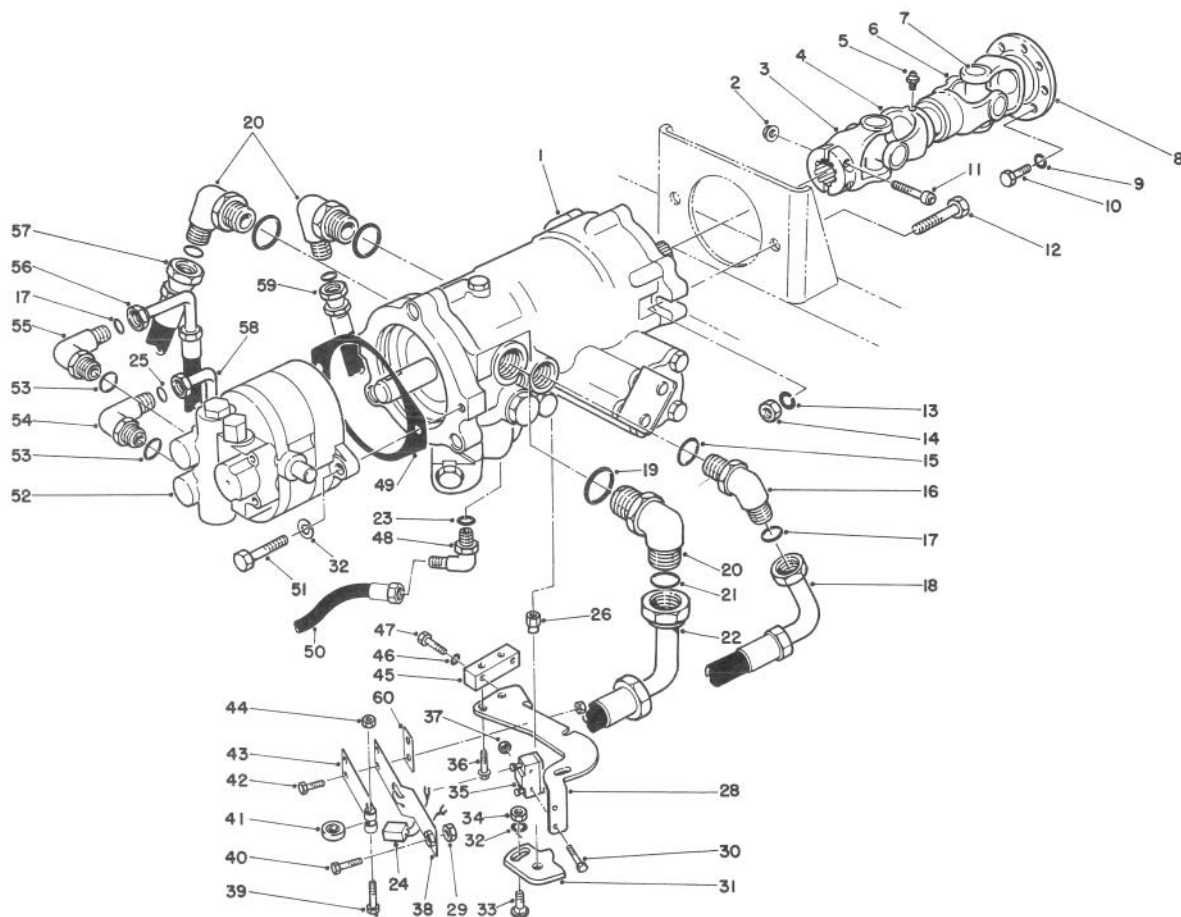


T-0350-90

VARIABLE DISPLACEMENT PUMP INSTALLATION (Cont.)

Ref. No.	Part No.	Description	No. Used
53	327-80	Seal - O-Ring	2
54	340-130	Fitting - Hydraulic Elbow (Incl. Ref. #25 & 53)	1
55	340-105	Fitting - Hydraulic Elbow (Incl. Ref. #17 & 53)	1
56	69-5450	Hose - Hydraulic	1

Ref. No.	Part No.	Description	No. Used
57	69-5470	Hose - Hydraulic	1
58	69-5440	Hose - Hydraulic	1
59	69-5480	Hose - Hydraulic	1
60	51-3150	Shim - Spring	A/R
*	71-0490	Pump Drive Shaft Assembly (Incl. Ref. #3-8)	1

*Not Illustrated

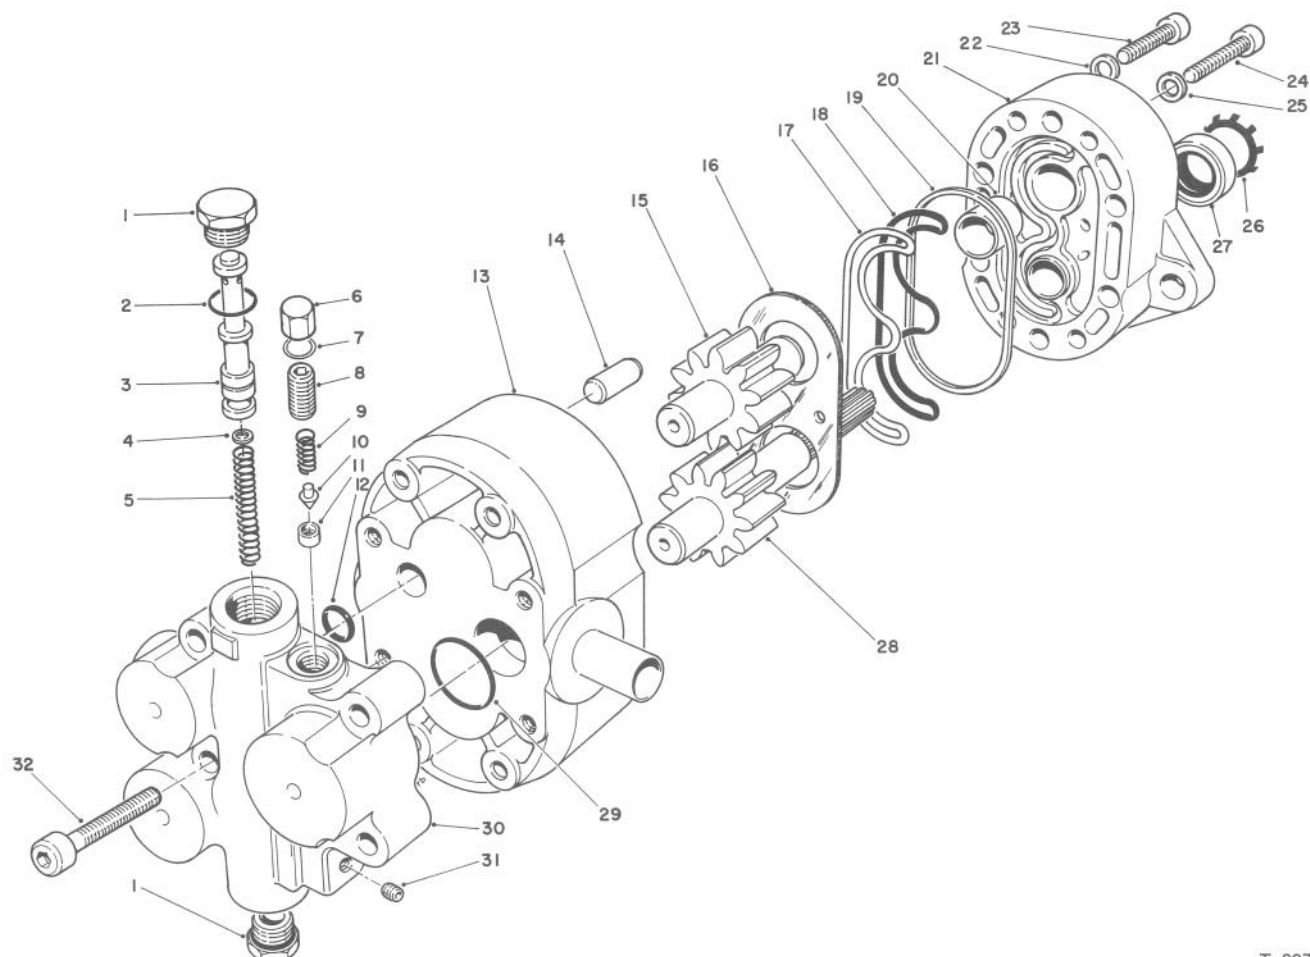


T-0374-90

GEAR PUMP & FLOW DIVIDER NO. 69-2220

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-2410	Plug (Incl. Ref. #2)	2	20	69-2250	Bearing - Sleeve	4
2	69-2420	Seal - O-Ring	2	21	69-2330	Body Assembly (Incl. Ref. #20)	1
3	69-2450	Piston	1	22	69-2370	Washer	4
4	69-2440	Orifice	1	23	69-2360	Screw	4
5	69-2430	Spring - Compression	1	24	69-2380	Screw	4
6	69-2460	Cap	1	25	69-2390	Washer	4
7	69-2470	Gasket - Cap	1	26	69-2300	Ring - Retaining	1
8	69-2480	Screw - Set	1	27	69-2310	Seal - Shaft	1
9	69-2490	Spring - Compression	1	28	69-2290	Shaft/Gear - Drive	1
10	69-2500	Poppet	1	29	69-2400	Seal - O-Ring	1
11	69-2510	Seat	1	30	69-2230	Flow Divider Assembly (Incl. Ref. #1-11 & 31)	1
12	69-2530	Seal - O-Ring	1	31	69-2520	Plug - Pipe	1
13	69-2540	Cover Assembly (Incl. Ref. #20)	1	32	69-2240	Screw	4
14	69-2340	Pin - Dowel	2	*	69-2550	Repair Kit - Pump (Incl. Ref. #16-19, 22 & 25-27)	1
15	69-2280	Shaft/Gear - Idler	1	*	69-2560	Repair Kit - Pump & Divider Incl. Ref. #2, 7, 9-10, 12, 16-19, 22, 25-27 & 29)	1
16	69-2320	Plate - Wear	1				
17	69-2260	Seal - Load	1				
18	69-2270	Seal - Pre-Load	1				
19	69-2350	Ring - Sealing	1				

*Not Illustrated

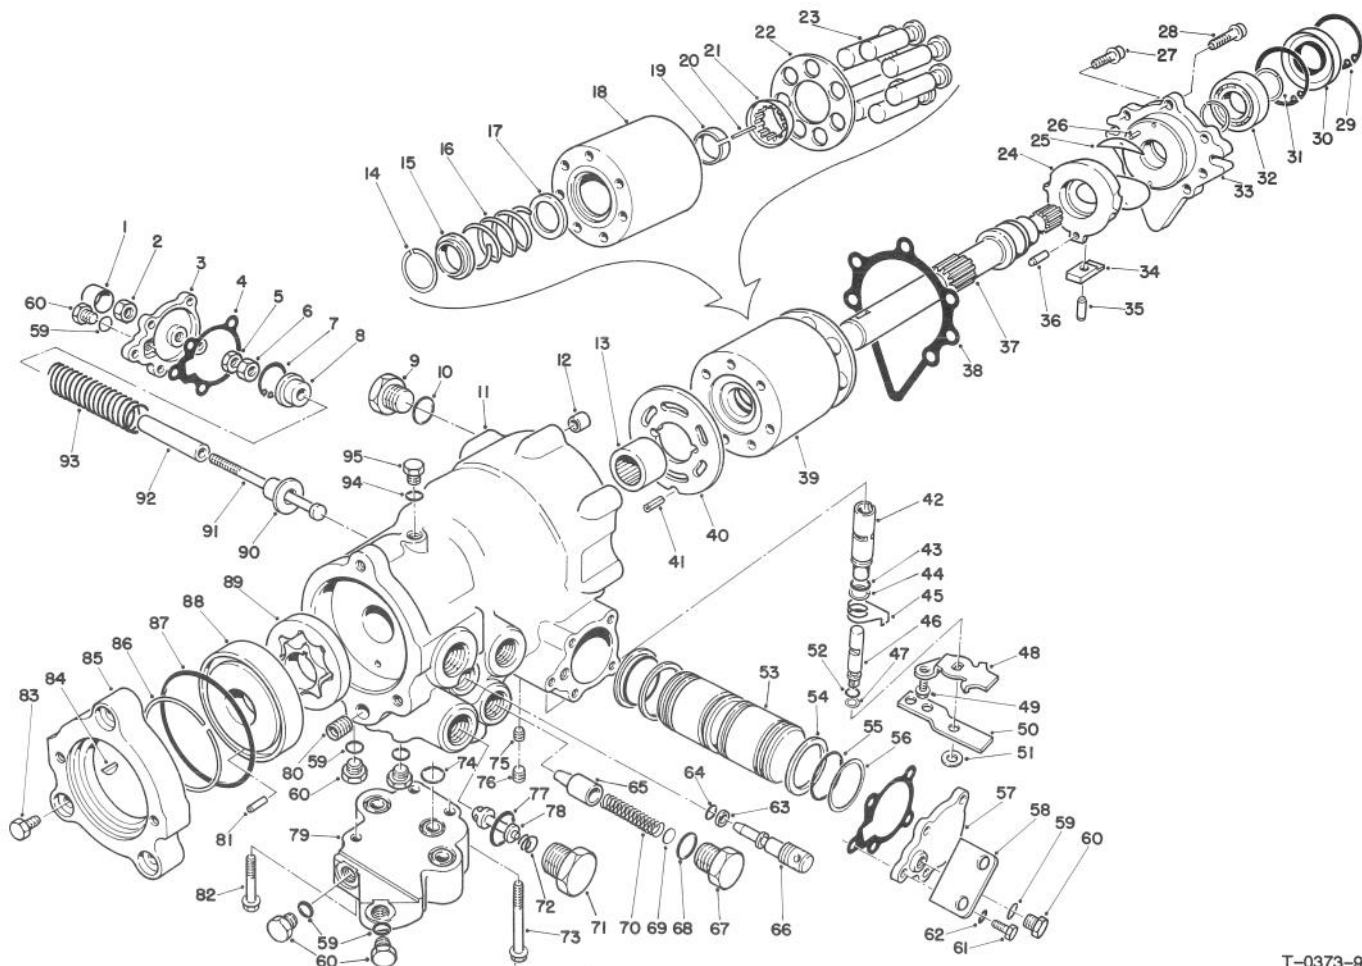


T-0373-90

VARIABLE DISPLACEMENT PUMP NO. 69-3040

Ref. No.	Part No.	Description	No. Used
1	69-3620	Cover - Servo Adjustment	1
2	69-3630	Nut Special	1
3	69-3640	Cover - Servo	1
4	69-3710	Gasket - Servo	2
5	69-3610	Nut - Jam	1
6	69-3600	Nut - Hex.	1
7	69-3590	Ring - Retaining	1
8	69-3580	Guide - Spring	1
9	69-3130	Plug (Incl. Ref. #10)	1
†10		Seal - O-Ring	1
†11		Housing - Pump	1
12	69-3230	Pin - Spring	1
13	69-3370	Bearing - Needle	1
†14		Ring - Retaining	1
†15		Washer	1
†16		Spring - Compression	1
†17		Washer	1
†18		Block - Cylinder	1
†19		Retainer	1
†20		Pin - Slipper Hold Down	3
†21		Guide - Retainer	1
†22		Guide - Slipper	1
†23		Piston - Assembly	7
24	69-3250	Swashplate - Variable	1
25	69-3240	Bearing - Journal	2
26	69-3520	Pin	2
27	76-4590	Screw	6

Ref. No.	Part No.	Description	No. Used
28	69-3220	Screw	1
29	69-3200	Ring - Retaining	2
30	69-3190	Seal - Lip	1
31	69-3170	Ring - Retaining	2
32	69-3210	Bearing - Ball	1
33	76-4610	Cover	1
34	69-3500	Sleeve - Bearing	1
35	69-3510	Pin	1
36	69-3470	Pin	1
37	69-3180	Shaft Pump	1
38	76-4600	Gasket - Cover	1
39	69-3910	Cylinder Block Assembly (Incl. Ref #14-23)	1
40	69-3360	Plate - Valve L.H.	1
41	69-3450	Pin	1
42	69-3820	Sleeve - Control Valve	1
43	28-3590	Seal O-Ring	1
44	28-3580	Ring - Back Up	1
45	69-3880	Spring - Neutral Return	1
46	69-3830	Spool - Rotary Valve	1
47	25-2630	Ring Back Up	1
48	69-3890	Bracket - Neutral Return	1
49	69-3860	Screw - Flange Hd.	1
50	69-3870	Handle - Control Valve	1
51	69-3900	Washer	1
52	69-3840	Seal - O-Ring	1
53	69-3650	Piston - Servo	1

†Not serviceable separately.

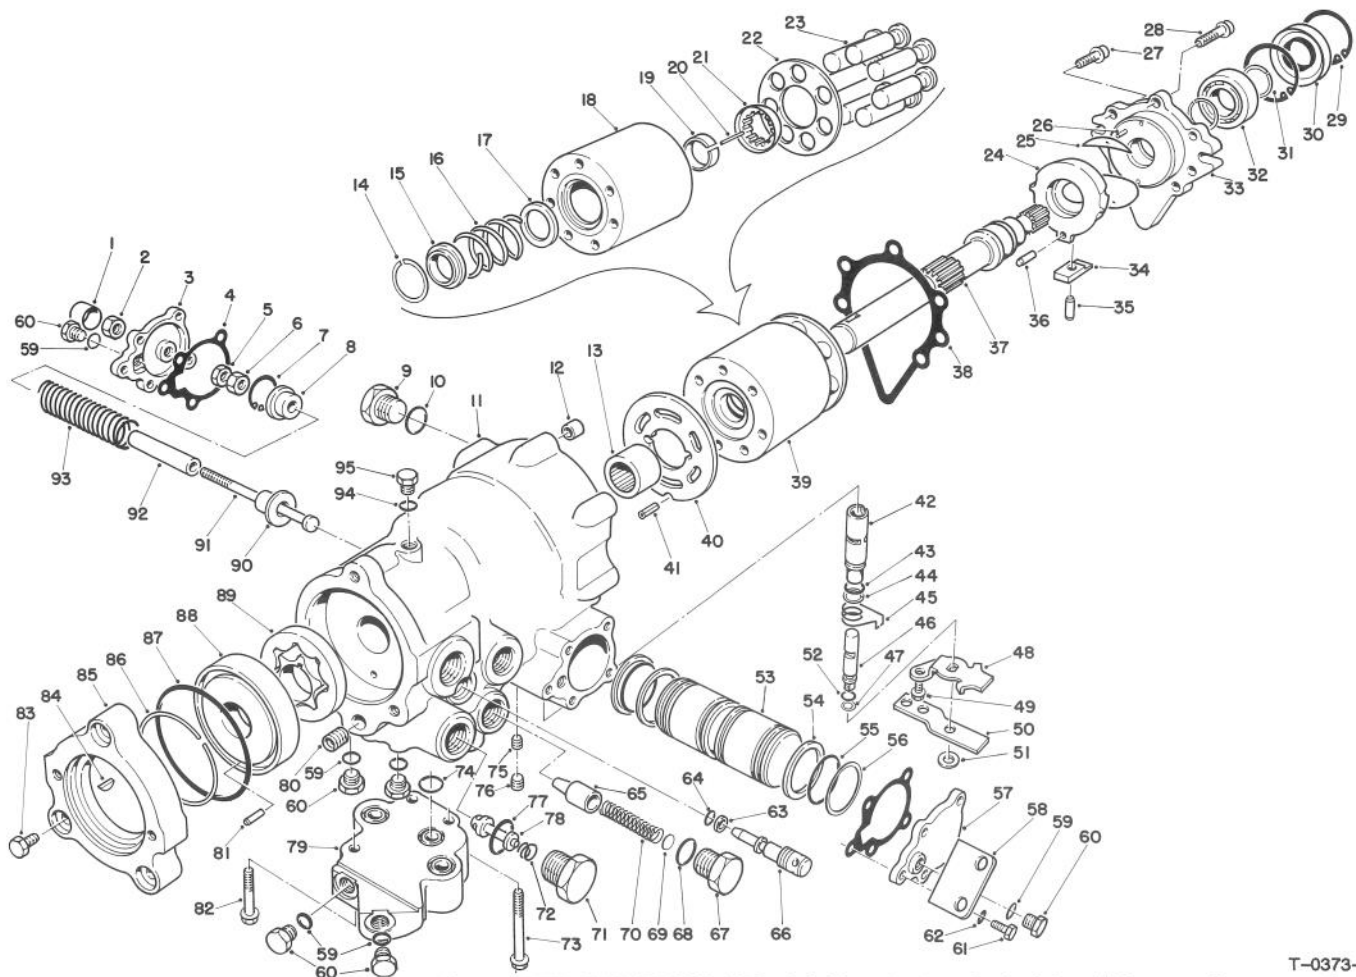


T-0373-90

VARIABLE DISPLACEMENT PUMP NO. 69-3040 (Continued)

Ref. No.	Part No.	Description	No. Used
54	69-3690	Bearing	2
55	69-3560	Seal - O-Ring	2
56	69-3570	Ring - Piston	2
57	69-3720	Cover Servo	1
58	69-3140	Bracket - Lifting	1
†59		Seal - O-Ring	6
60	69-3080	Plug (Incl. Ref. #59)	6
61	69-3150	Screw - Hex. Hd.	10
62	69-3070	Washer - Lock	10
63	25-2630	Ring - Back Up	1
64	237-22	Seal - O-Ring	1
65	69-3800	Valve	1
66	69-3810	Valve - By Pass	1
67	69-3780	Plug (Incl. Ref. #68)	1
68	237-80	Seal - O-Ring	1
69	69-3770	Shim	1
70	69-3790	Spring Compression	1
71	69-3760	Plug Special (Incl. Ref. #77)	2
72	69-3740	Spring - Compression	2
73	69-3110	Screw	2
74	69-3160	Seal -O-Ring	3
75	69-3530	Plug - Orifice	1

Ref. No.	Part No.	Description	No. Used
76	285-17	Plug - Pipe	2
77	69-3750	Seal -O-Ring	2
78	69-3730	Valve - Relief (Incl. Ref. #71, 72 & 77)	2
79	69-3090	Adapter - Suction	1
80	69-3460	Plug Expansion	1
81	69-3550	Pin	1
82	69-3100	Screw	1
83	69-3400	Screw Hex. Hd.	3
84	69-3430	Key - Woodruff	1
85	69-3410	Adapter - A Flange	1
86	69-3420	Ring - Temper Load	1
87	69-3440	Seal - O-Ring	1
88	69-3540	Cover - Gerotor	1
89	69-3390	Gerotor Assembly	1
90	69-3700	Guide - Spring	1
91	69-3660	Screw - Special	1
92	69-3680	Stop - Servo	1
93	69-3670	Spring - Compression Servo	1
†94		Seal O-Ring	1
95	69-3120	Plug (Incl. Ref. #94)	1

†Not serviceable separately.

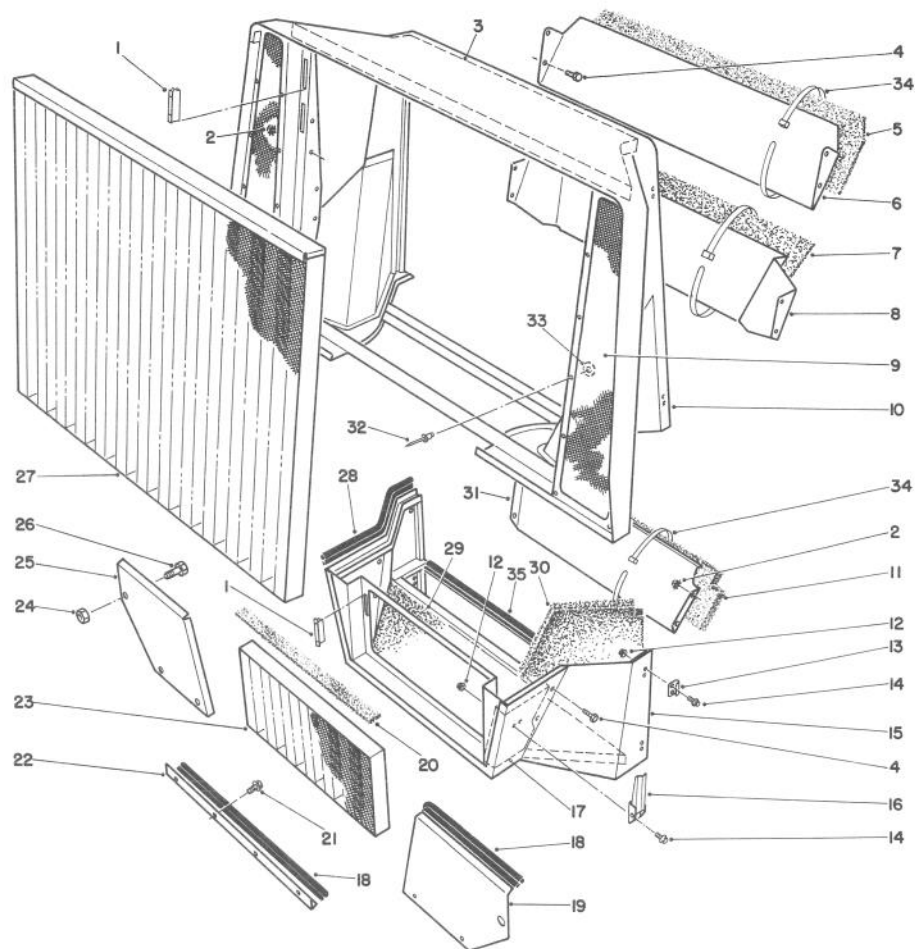


T-0368-90

COWL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	58-4250	Magnet	6
2	32149-2	Nut - Keps	16
3	71-0280	Foam - Cowl Top	1
4	321-2	Screw - Cap Hex. Hd.	16
5	71-0240	Foam - Louver Top	2
6	69-9370	Louver - Top	2
7	71-0230	Foam - Louver Middle	1
8	69-1130	Louver - Middle	1
9	69-9650	Screen - Cowl	2
10	69-8650	Cowl - Radiator	1
11	71-0220	Foam - Louver Lower	1
12	3296-2	Nut - Flange Lock	20
13	69-3030	Strike - Latch	8
14	3290-321	Screw - Hex. Washer Hd.	20
15	69-8690	Support - Grille	1
16	69-3020	Handle - Latch	2
17	71-0300	Foam - Low Front Cowl L.H.	1
*	71-0310	Foam - Low Front Cowl R.H.	1
18	69-9721	Strip - Sealing	3

Ref. No.	Part No.	Description	No. Used
19	75-9460	Bracket - Sealing L.H.	1
20	69-0040	Foam - Lower Grille	1
21	32144-11	Screw - Hex. Flange Hd.	8
22	75-9480	Bracket - Sealing Bottom	1
23	69-7150	Grille - Lower	1
24	32153-6	Nut Lock	2
25	75-9470	Bracket - Sealing R.H.	1
26	328-11	Screw - Cap Hex. Hd.	2
27	69-7120	Grille - Upper	1
28	69-9720	Strip - Sealing	2
29	71-0290	Foam - Cowl Bottom	1
30	71-0330	Foam - Low Rear Cowl L.H.	1
*	71-0320	Foam - Low Rear Cowl R.H.	1
31	69-1140	Louver - Lower	1
32	3269-15	Rivet - Pop	22
33	3269-6	Washer - Backup	22
34	250-5	Tie - Cable	16
35	69-9722	Trim - Sealing	1

*Not Illustrated

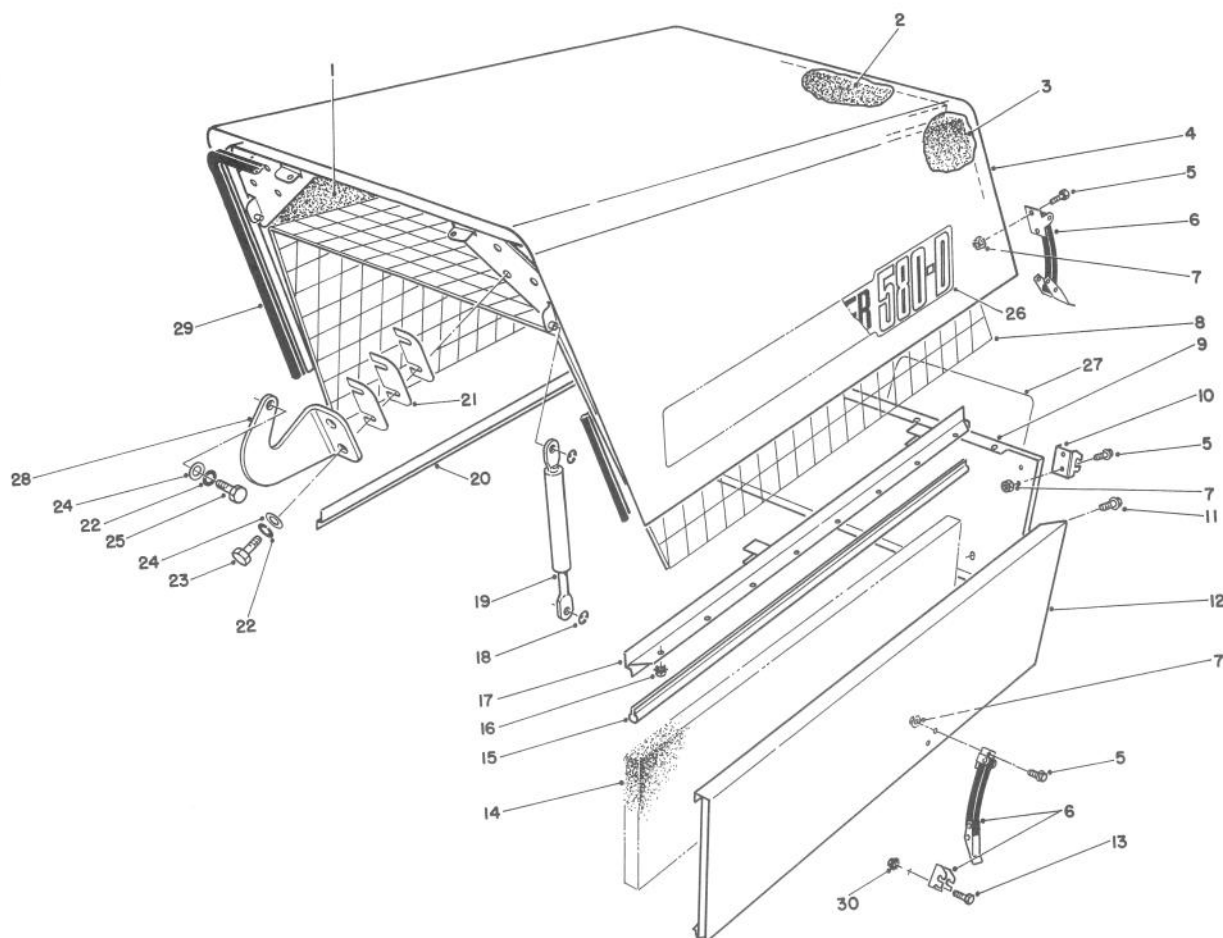

T-0360-90


HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-0270	Foam - Hood Side R.H.	1
2	71-0250	Foam - Hood Top	1
3	71-0260	Foam - Hood Side L.H.	1
4	14-0639	Hood Assembly (Incl. Ref.#1-4, 8, 15-17, 20, 26 & 29)	1
5	3290-321	Screw - Cap Hex. Hd.	12
6	69-3010	Strap - Hold Down (Incl. Ref. #10)	4
7	3296-2	Nut - Flange Lock	12
8	71-0060	Support - Foam	1
9	69-9520	Panel - Rear	1
†10		Latch - Hold - Down	4
11	3234-14	Screw - Cap Hex. Hd.	6
12	69-1390	Panel - Side L.H.	1
*	69-1380	Panel - Side R.H.	1
13	3290-134	Screw - Cap Hex. Hd.	4

Ref. No.	Part No.	Description	No. Used
14	71-0400	Foam - Side Panel	2
15	69-9723	Seal - Hood Bottom	2
16	32149-2	Nut - Keps	16
17	69-8230	Bracket - Trim L.H.	1
18	32151-32	Ring Retaining	4
19	69-0740	Spring - Gas	2
20	69-8250	Bracket - Trim R.H	1
21	69-8500	Shim - Hinge Bracket	6
22	3253-21	Washer - Lock	6
23	323-6	Screw - Cap Hex. Hd.	4
24	3256-24	Washer - Flat	6
25	323-4	Screw - Cap Hex. Hd.	2
26	69-0950	Decal - 580D	2
27	66-6140	Decal - TORO	1
28	69-8520	Bracket - Hinge	2
29	69-9724	Seal - Hood Front	1
30	32149-7	Nut	4

*Not Illustrated

†Not serviceable separately.

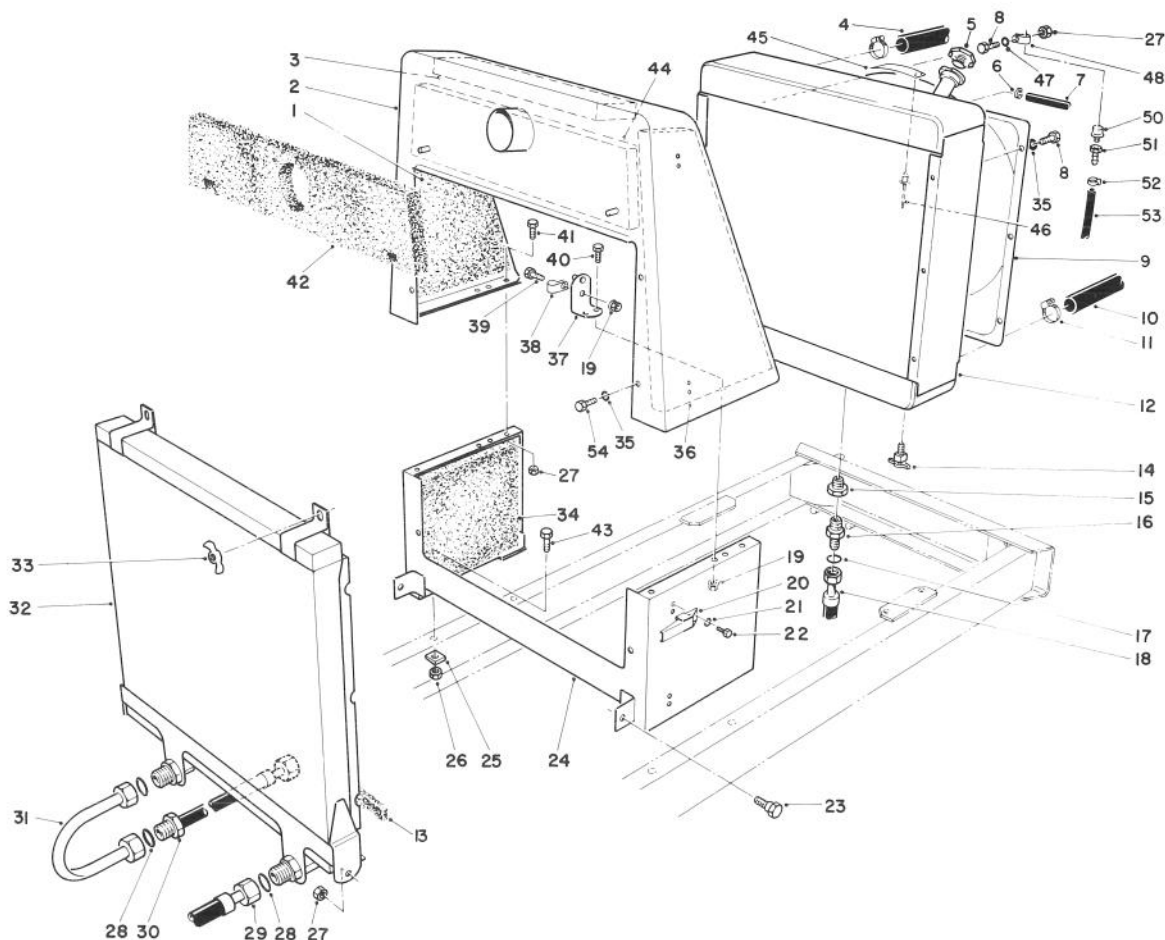


T-0359A

RADIATOR & OIL COOLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-0350	Foam - Rad. Support R.H.	1
2	69-8590	Support - Radiator Upper	1
3	71-0360	Foam - Rad. Support Top	1
4	69-5380	Hose - Upper Radiator	1
5	66-3241	Cap - Radiator	1
6	2412-6	Clamp - Hose	1
7	23-2140	Hose - Radiator Vent	1
8	323-34	Screw - Cap Hex. Hd.	7
9	13-4239	Shroud - Fan (Incl. Ref. #45 & 46)	1
10	69-5390	Hose - Lower Radiator	1
11	2412-92	Clamp - Hose	4
12	69-1640	Radiator	1
13	71-0210	Foam - Radiator Seal	1
14	304-46	Valve - Drain	1
15	2812-4	Fitting - Reducer	2
16	340-124	Fitting - Hydraulic Straight (Incl. Ref. #17)	2
17	237-22	Seal - O-Ring	2
18	69-8430	Hose - Hydraulic	2
19	32128-20	Nut - Flange Lock	5
20	69-3020	Latch	8
21	3253-2	Washer - Lock	16
22	3290-321	Screw - Cap Hex. Hd.	16
23	46-3380	Bolt - Shoulder	2
24	69-7100	Support - Radiator Lower	1
25	3290-216	Washer - Bevel	4
26	32153-5	Nut - Lock	4

Ref. No.	Part No.	Description	No. Used
27	32152-2	Nut - Lock	7
28	340-65	Seal - O-Ring	3
29	69-5620	Hose - Hydraulic	1
30	69-8450	Hose - Hydraulic (Incl. Ref. #28)	1
31	69-5900	Tube - Hydraulic	1
32	69-1670	Cooler - Oil (Incl. Ref. #28)	1
33	32103-3	Nut - Wing	2
34	71-0370	Foam - Lower Rad. Support	2
35	3253-21	Washer - Lock	12
36	71-0340	Foam - Rad. Support L.H.	1
37	69-7260	Bracket - Hood Cylinder	2
38	2412-41	Clamp - R	1
39	322-5	Screw - Cap Hex. Hd.	1
40	322-6	Screw - Cap Hex. Hd.	4
41	323-7	Screw - Cap Hex. Hd.	4
42	71-0380	Foam - Rad. Support Front	1
43	325-6	Screw - Cap Hex. Hd.	2
44	71-0390	Foam - Rad. Support Rear	1
45	76-8750	Plate - Caution	2
46	3290-271	Rivet - Pop	4
47	3256-56	Washer - Flat	2
48	2412-82	Clamp - R	1
50	43-8510	Breather	1
51	354-32	Fitting	1
52	2412-108	Clamp - Hose	2
53	71-2680	Hose - Vent	1
54	32144-69	Screw - Cap, Hex. Hd.	6

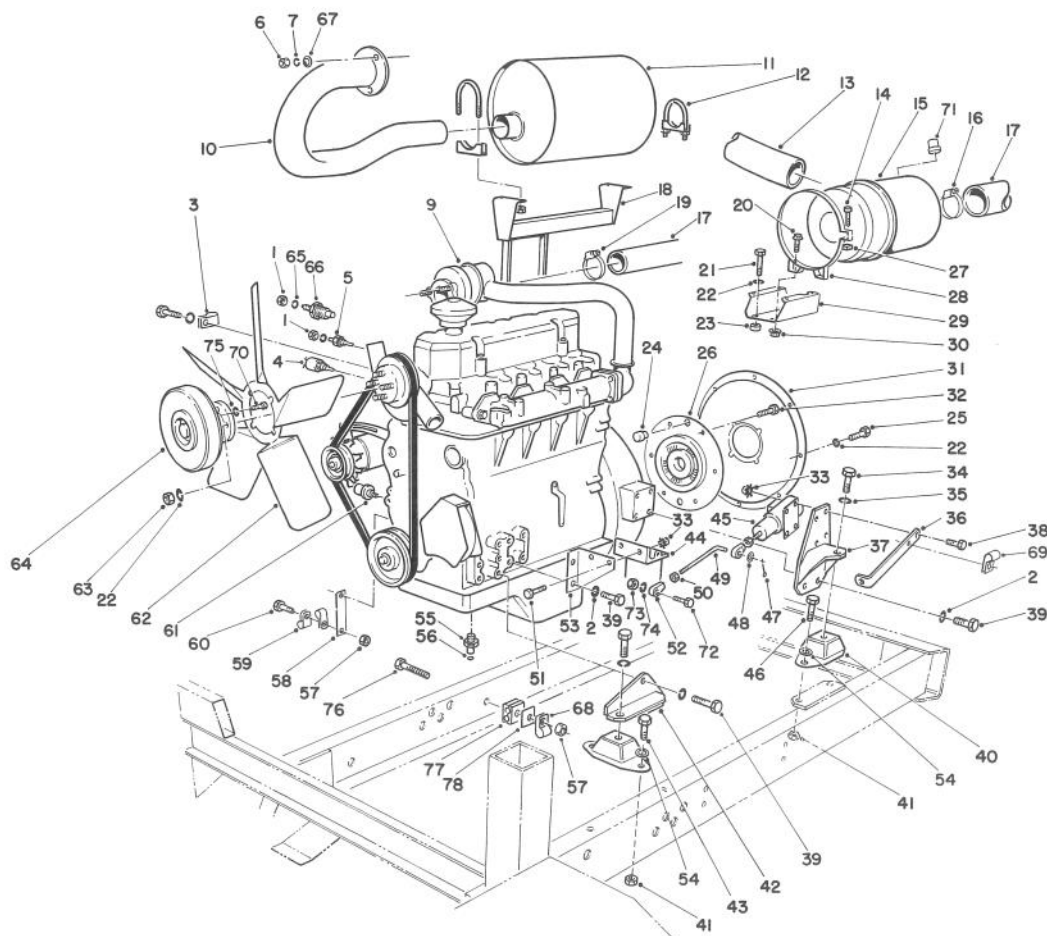


T-0347-90

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3219-14	Nut - Hex.	2
2	48-8070	Washer - Lock	16
3	2412-70	Clamp - R	1
4	67-4510	Sending Unit - Temperature	1
5	39-7592	Switch - Temperature	1
6	48-7930	Nut - Lock	3
7	48-9570	Washer - Lock	3
9	69-6250	Engine - Assembly	1
10	76-0980	Pipe - Exhaust	1
11	69-9420	Muffler	1
12	20-4840	Clamp - Exhaust	2
13	69-5350	Hose - Air Cleaner Inlet	1
14	3258-19	Screw - Machine	2
15	69-1890	Air Cleaner Assembly	1
16	2412-110	Clamp - Hose	3
17	69-5360	Hose - Air Cleaner	1
18	69-7610	Bracket - Muffler	1
19	2412-42	Clamp - Hose	1
20	3234-14	Screw - Hex. Washer Hd.	4
21	48-9480	Screw - Cap Hex. Hd.	4
22	48-9590	Washer - Lock	16
23	17-7190	Spacer	4
24	58-3590	Pin - Flywheel	2
25	48-9470	Screw - Cap Hex. Hd.	8
26	48-6260	Coupling - Spring Centering	1
27	32107-11	Nut - Square	2
28	69-1950	Band - Air Cleaner (Incl. Ref. #14 & 27)	2

Ref. No.	Part No.	Description	No. Used
29	69-9530	Bracket - Air Cleaner	1
30	32128-20	Nut - Flange Lock	4
31	69-9550	Plate - Adapter	1
32	48-7780	Screw - Cap Hex. Hd.	6
33	32149-2	Nut - Keps	5
34	69-8410	Screw - Cap Hex. Hd.	4
35	69-8420	Washer - Lock	4
36	69-8490	Bracket - Throttle Cable	1
37	85-6210	Bracket - Rear Eng. Mount	2
38	321-6	Screw - Cap Hex. Hd.	3
39	69-0060	Screw - Cap Hex. Hd.	16
40	69-1660	Mount - Engine	4
41	32153-5	Nut - Lock	8
42	69-7580	Bracket - Front Engine Mount L.H.	1
*	69-7570	Bracket - Front Engine Mount R. H.	1
43	325-17	Screw - Cap Hex. Hd.	4
44	69-1750	Fuel Filter Assembly	1
45	85-6230	Solenoid - Engine Run	1
46	325-4	Screw - Cap Hex. Hd.	4
47	3272-6	Pin - Cotter	1
48	3256-1	Washer - Flat	1
49	69-9110	Rod - Engine Run Solenoid	1
50	3220-1	Nut - Jam	2
51	321-4	Screw - Cap Hex. Hd.	2

*Not Illustrated

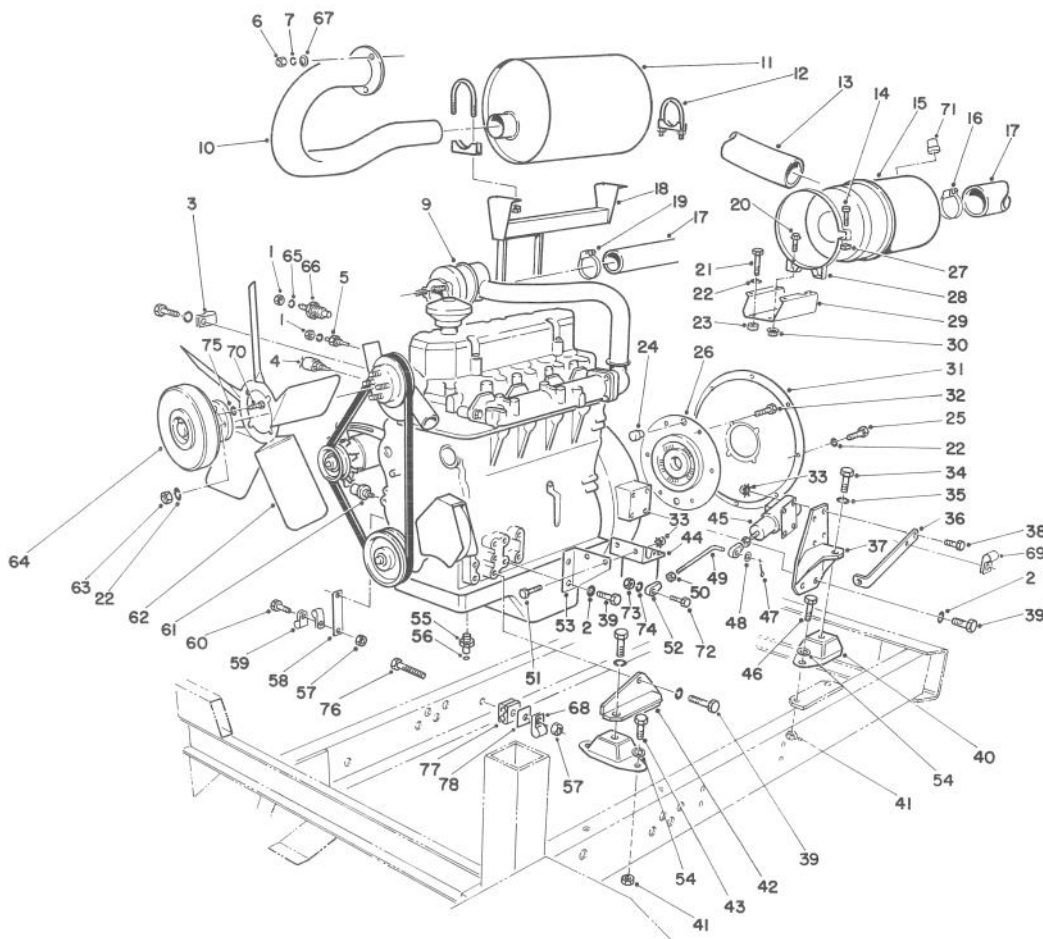


T-0347-90

ENGINE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
52	2411-41	End - Rod	2	65	3253-2	Washer - Lock	2
53	69-9360	Bracket - Fuel Filter	1	66	39-7591	Thermo Switch Assembly	1
54	3256-26	Washer - Flat	8	67	3256-3	Washer - Flat	3
55	69-8460	Fitting - Hydraulic Straight (incl. Ref. #56)	2	68	2412-39	Clamp - R	1
56	237-22	Seal - O-Ring	2	69	2412-73	Clamp - R	1
57	32152-1	Nut - Lock	2	70	323-4	Screw - Cap Hex. Hd.	4
58	69-9070	Bracket - Clamp	1	71	69-1940	Indicator - Electrical	1
59	2412-41	Clamp - R	2	72	48-7630	Screw	1
60	323-6	Screw - Cap Hex. Hd.	1	73	48-7890	Nut - Hex.	1
61	71-4280	Sending Unit - Oil Pressure	1	74	3253-3	Washer - Lock	1
62	69-1680	Fan	1	75	3253-21	Washer - Lock	4
63	69-9710	Nut - Lock	4	76	322-13	Screw - Cap Hex. Hd.	1
64	69-1690	Clutch - Fan	1	77	56-7974	Clamp Half - Hydraulic Line	2
				78	69-9761	Plate - Cover	1

*Not Illustrated

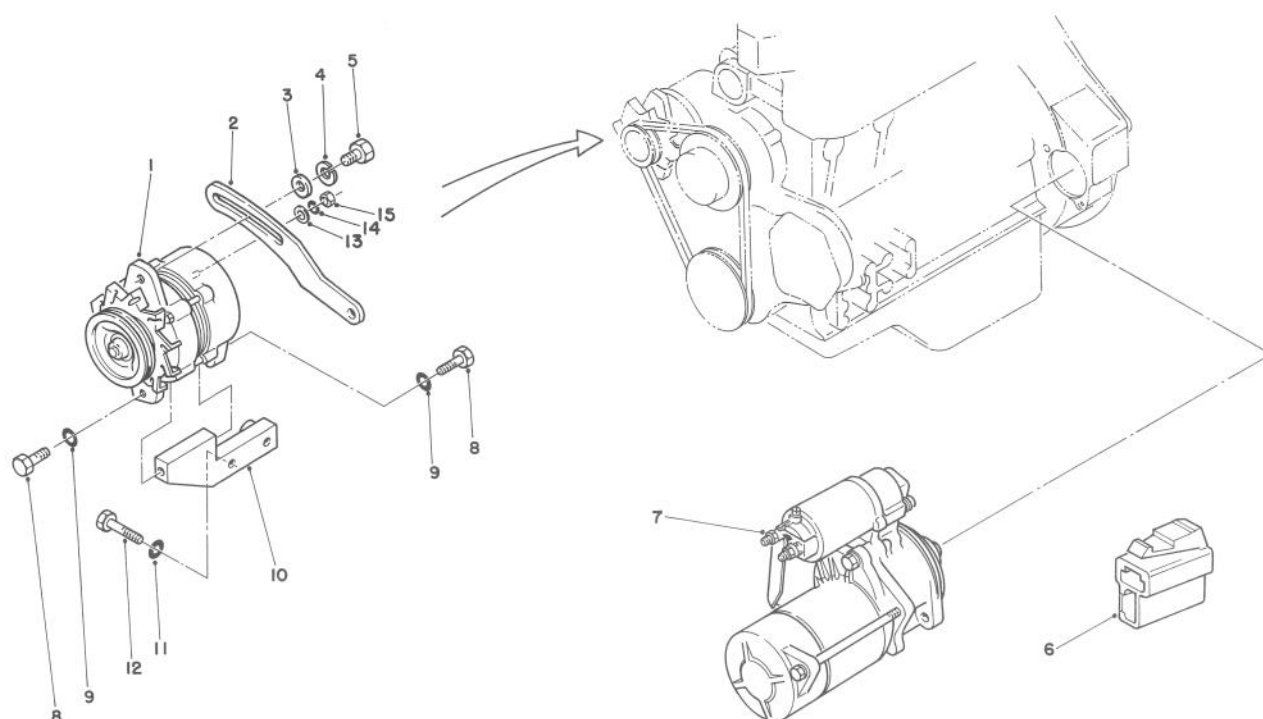


T-0580-90

STARTER & ALTERNATOR INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-5760	Alternator Assembly	1
2	70-5740	Plate	1
3	51-8590	Washer	1
4	51-7250	Washer - Lock	1
5	60-7370	Bolt	1
6	59-6910	Connector	1
7	70-5860	Starter Assembly	1
8	51-8640	Bolt	2

Ref. No.	Part No.	Description	No. Used
9	51-6390	Washer - Lock	2
10	70-5750	Bracket	1
11	51-8610	Washer - Lock	2
12	70-2940	Bolt	2
13	5-3637	Washer - Flat	1
14	43-5920	Washer - Lock	1
15	43-5970	Nut - Hex.	1

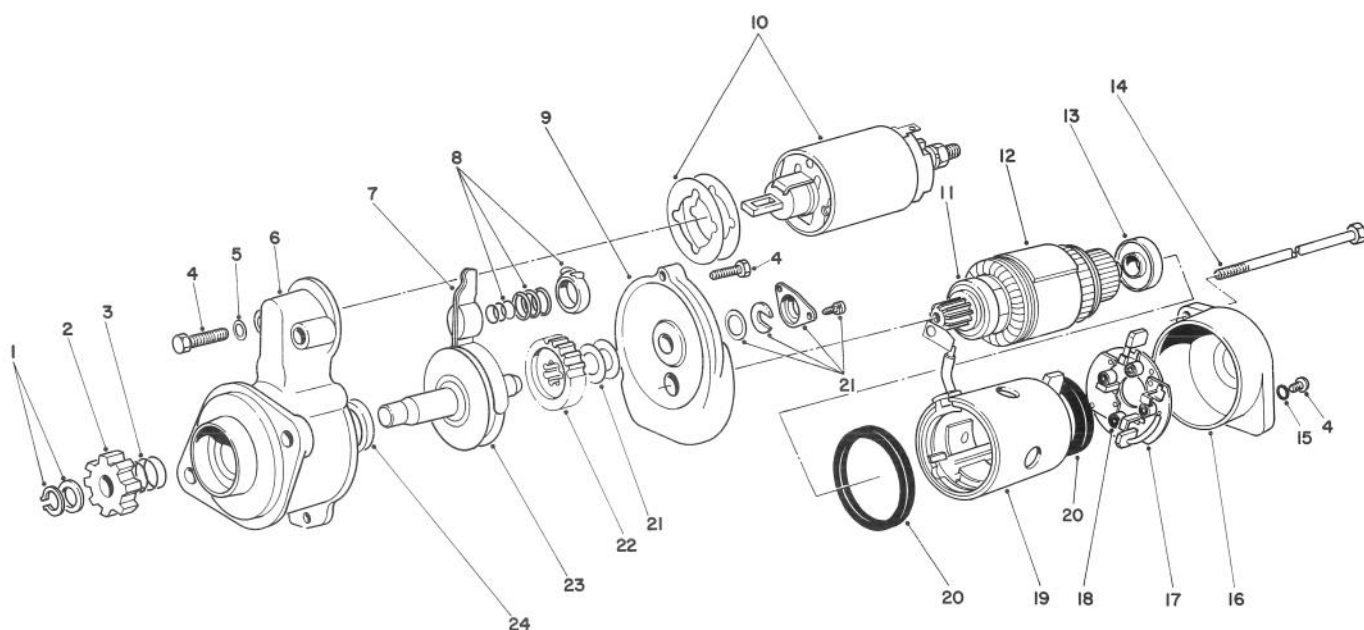

STARTER MOTOR ASSEMBLY NO. 70-5860


T-0160-90

Ref. No.	Part No.	Description	No. Used
1	51-7740	Retaining Ring Assembly	1
2	51-7730	Gear Pinion Assembly (Incl. Ref. #1 & 3)	1
†3		Spring	1
4	51-7600	Screw Set	1
5	51-7610	Packing	2
6	70-3280	Cover Assembly Front (Incl. Ref. #24)	1
7	51-7640	Lever Assembly	1
8	51-7650	Spring Assembly	1
9	51-7660	Bracket Assembly Center	1
10	51-7670	Solenoid	1
11	51-7690	Bearing	1
12	70-3260	Armature Assembly (Incl. Ref. #11 & 13)	1
13	70-3330	Bearing	1

Ref. No.	Part No.	Description	No. Used
14	70-3310	Bolt Set	1
15	51-7840	Ring - Rubber	2
16	51-7830	Cover - Rear	1
17	70-3290	Brush Holder Assembly (Incl. Ref. #18)	1
18	70-3270	Spring - Brush	4
19	70-3300	Yoke Assembly	1
20	51-7790	Packing	2
21	51-7780	Cover Assembly	1
22	51-7770	Gear - Pinion	1
23	51-7760	Shaft Assembly	1
24	51-7630	Seal - Oil	1
*	51-7750	Gear Assembly (Incl. Ref. #22 & 23)	1
*	51-7720	Clutch Assy. (Incl. Ref. #1-3 & 21-24)	1

*Not Illustrated

†Not Serviceable Separately

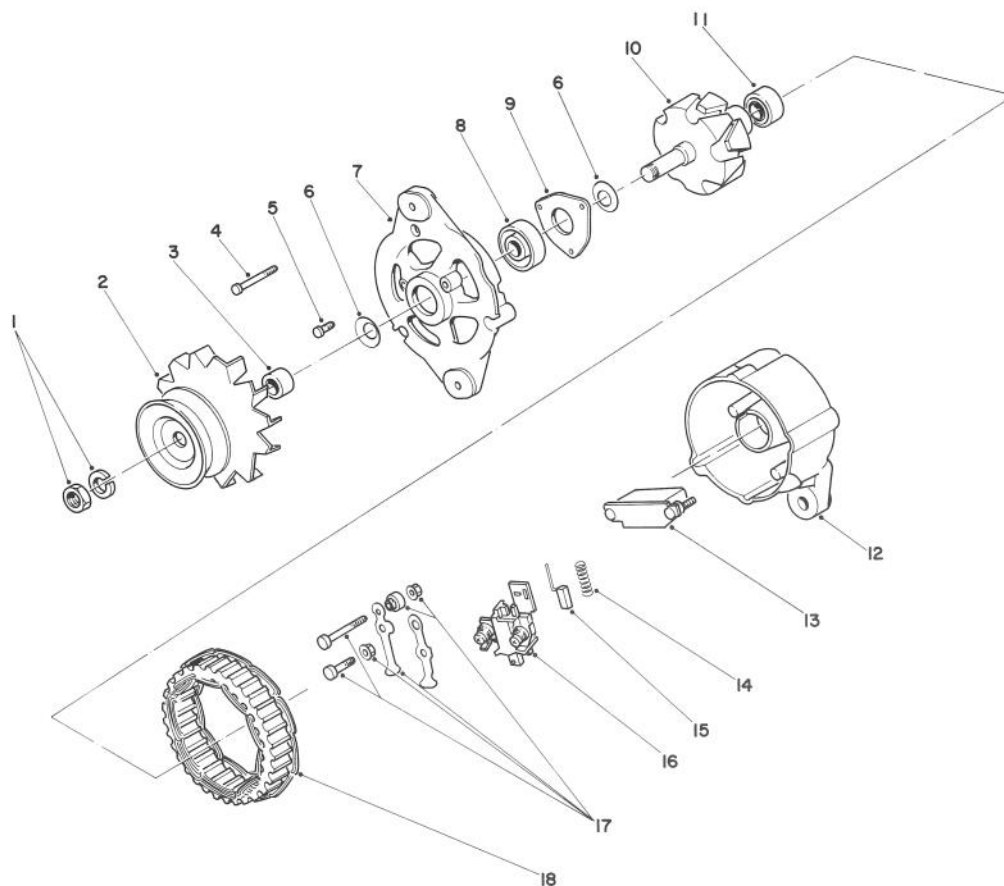


T-0161-90

ALTERNATOR ASSEMBLY NO. 70-5760

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	51-7850	Nut Assembly	1	10	51-7910	Rotor Assembly (Incl. Ref. #11)	1
2	70-2800	Pulley Assembly (Incl. Ref. #3)	1	11	60-5360	Bearing	1
†3		Collar - Shaft	1	12	60-5380	Cover Assembly - Rear (Incl. Ref. #13-17)	1
4	51-7870	Screw Set	1	13	60-5370	Rectifier Assembly	1
5	51-7890	Screw Set	1	14	70-2810	Spring - Return	2
†6		Spring Washer	2	15	51-7970	Brush	2
7	60-5340	Cover Assembly - Front (Incl. Ref. #5, 6, 8 & 9)	1	16	51-7960	Regulator Assembly (Incl. Ref. #14 & 15)	1
8	70-3320	Bearing	1	17	51-7950	Terminal Assembly	1
†9		Plate - Bearing Retainer	1	18	51-7930	Stator	1

†Not Serviceable Separately

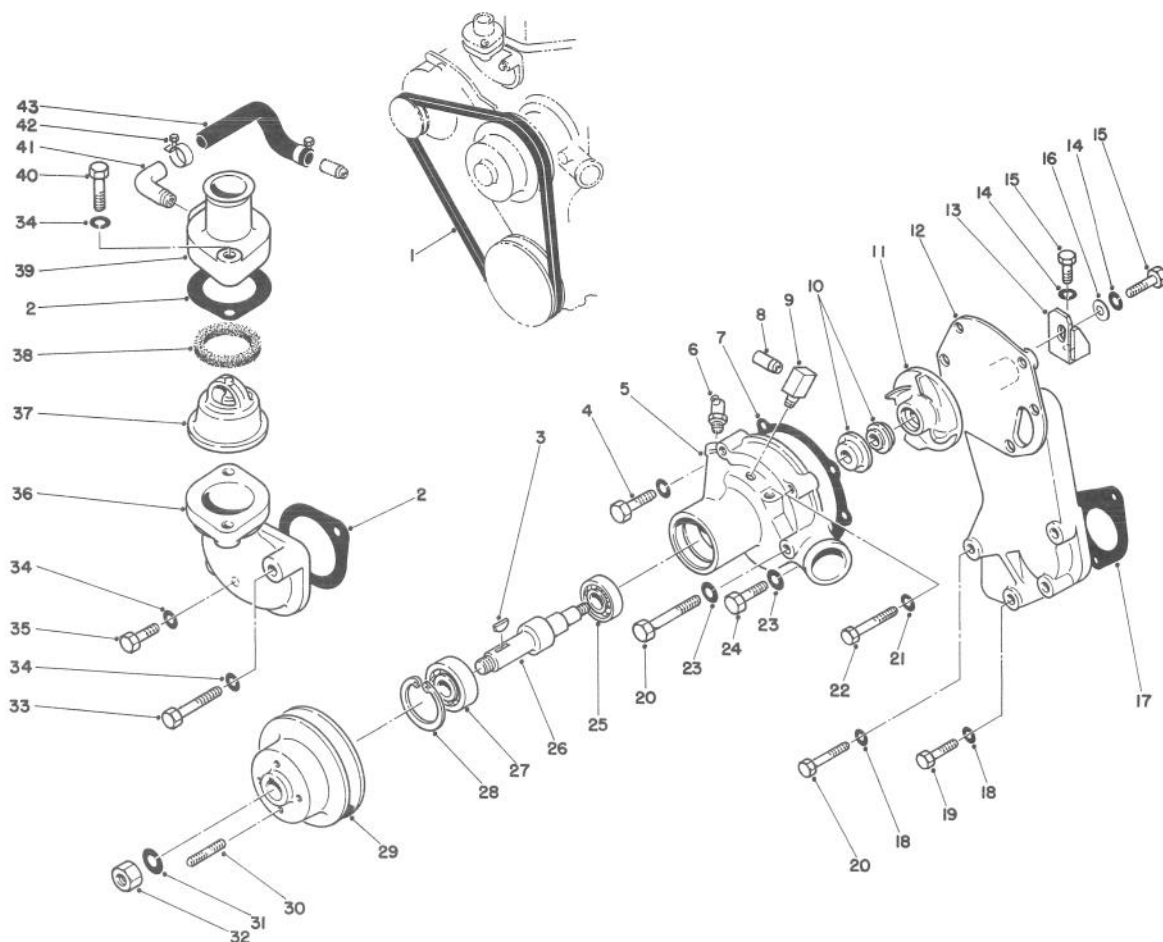


WATER PUMP ASSEMBLY

T-0581-90

Ref. No.	Part No.	Description	No. Used
1	70-3450	V-Belt	1
†2	51-7210	Gasket	2
3	51-6960	Key	1
4	70-2910	Bolt	1
5	70-5600	Water Pump Assembly (Incl. Ref #3-4, 6-11 & 25-32)	1
6	51-7020	Nipple	1
7	70-5650	Gasket	1
8	51-7170	Pipe	1
9	70-5620	Connector	1
10	51-7030	Seal	1
11	70-5610	Impeller	1
12	70-5640	Bracket	1
13	70-5670	Stay	1
14	51-6390	Washer - Lock	2
15	70-2890	Bolt	2
16	70-2990	Washer	1
†17	70-5660	Gasket	1
18	51-6390	Washer - Lock	4
19	70-2900	Bolt	1
20	70-2920	Bolt	3
21	51-6920	Washer - Lock	2

Ref. No.	Part No.	Description	No. Used
22	70-2850	Bolt	2
23	51-6390	Washer - Lock	4
24	51-4910	Bolt	2
25	51-6980	Bearing	1
26	70-5630	Shaft	1
27	51-6950	Bearing	1
28	51-6940	Ring	1
29	70-5680	Pulley	1
30	70-2950	Stud	4
31	51-6920	Washer - Lock	1
32	51-6910	Nut	1
33	70-2860	Bolt	1
34	51-7250	Washer - Lock	4
35	60-7280	Bolt	1
36	70-5690	Elbow	1
37	51-7230	Thermostat	1
†38	51-7220	Gasket	1
39	70-5050	Cover	1
40	60-7040	Bolt	2
41	70-5590	Connector	1
42	51-7200	Clamp	2
43	70-5040	Hose	1

†Included in Gasket Set No. 70-6950

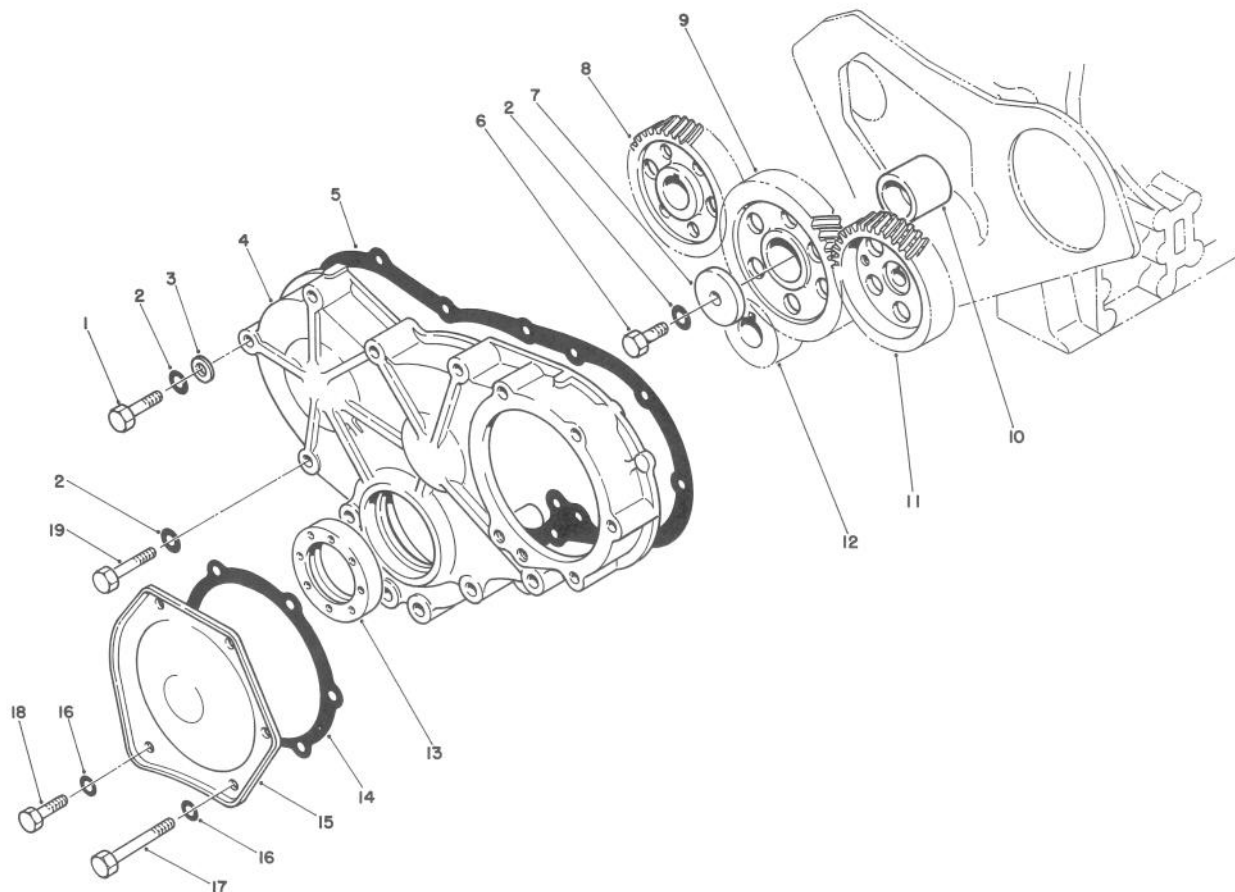

T-0582-90


TIMING GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	51-4920	Bolt	1
2	51-6390	Washer - Lock	11
3	70-2990	Washer	1
4	70-5790	Case	1
†5	70-5370	Gasket	1
6	60-7210	Bolt	1
7	51-6400	Plate	1
8	70-5020	Gear - Camshaft	1
9	70-5450	Idler Assembly (Incl. Ref. #10)	1

Ref. No.	Part No.	Description	No. Used
10	51-6430	Bushing	1
11	70-6040	Gear - Injection Pump	1
12	70-5830	Gear - Crankshaft	1
†13	70-5780	Seal	1
†14	51-5860	Gasket	1
15	51-5850	Cover	1
16	51-7250	Washer - Lock	5
17	70-2860	Bolt	4
18	60-7110	Bolt	1
19	70-2930	Bolt	9

†Included in Gasket Set No. 70-6950

‡Included In Oil Seal Kit No. 70-6960

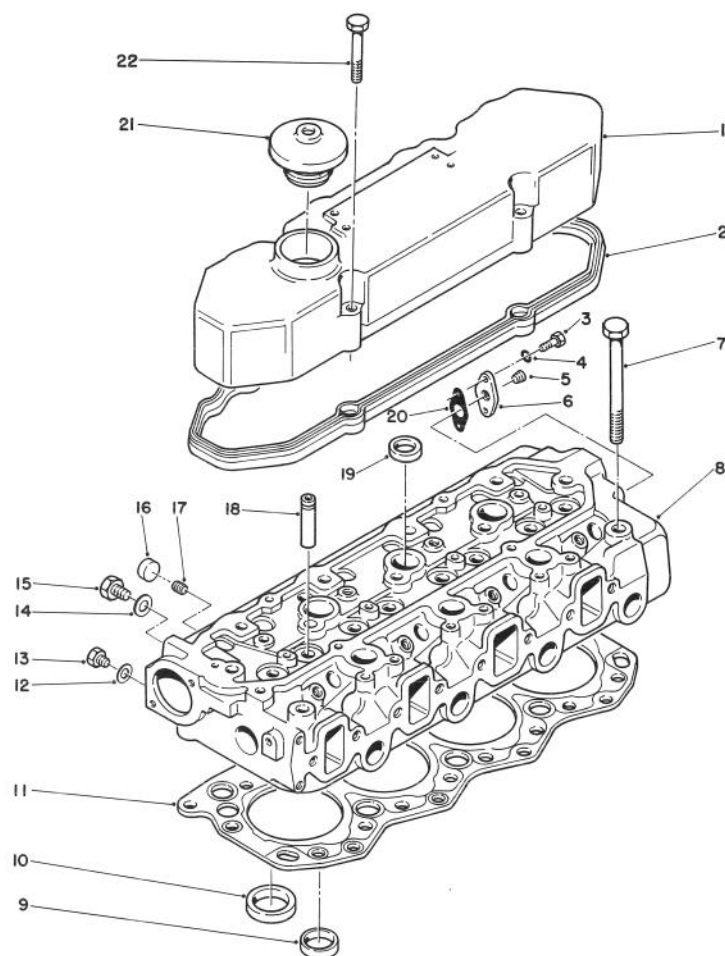


T-0583-90

ROCKER COVER & CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	70-5220	Cover	1	†11	70-5130	Gasket	1
†2	70-5210	Gasket	1	†12	51-5840	Washer	1
3	60-7280	Bolt	2	13	70-3100	Plug	1
4	51-7250	Washer - Lock	2	†14	51-6890	Gasket	1
5	70-5140	Plug	1	15	70-3230	Plug	1
6	70-5890	Flange	1	16	70-3360	Cap	4
7	63-4740	Bolt	17	17	70-3390	Plug	4
8	70-5900	Cylinder Head Assembly (Incl. Ref. #3-6, 9-10 & 12-20)	1	18	51-4950	Guide	8
9	70-5870	Insert - Exhaust	4	19	70-3380	Cap	15
10	70-5880	Insert - Inlet	4	20	70-5090	Gasket	1
				21	51-5350	Cap	1
				22	70-2930	Bolt	4

†Included in Gasket Set No. 70-6950

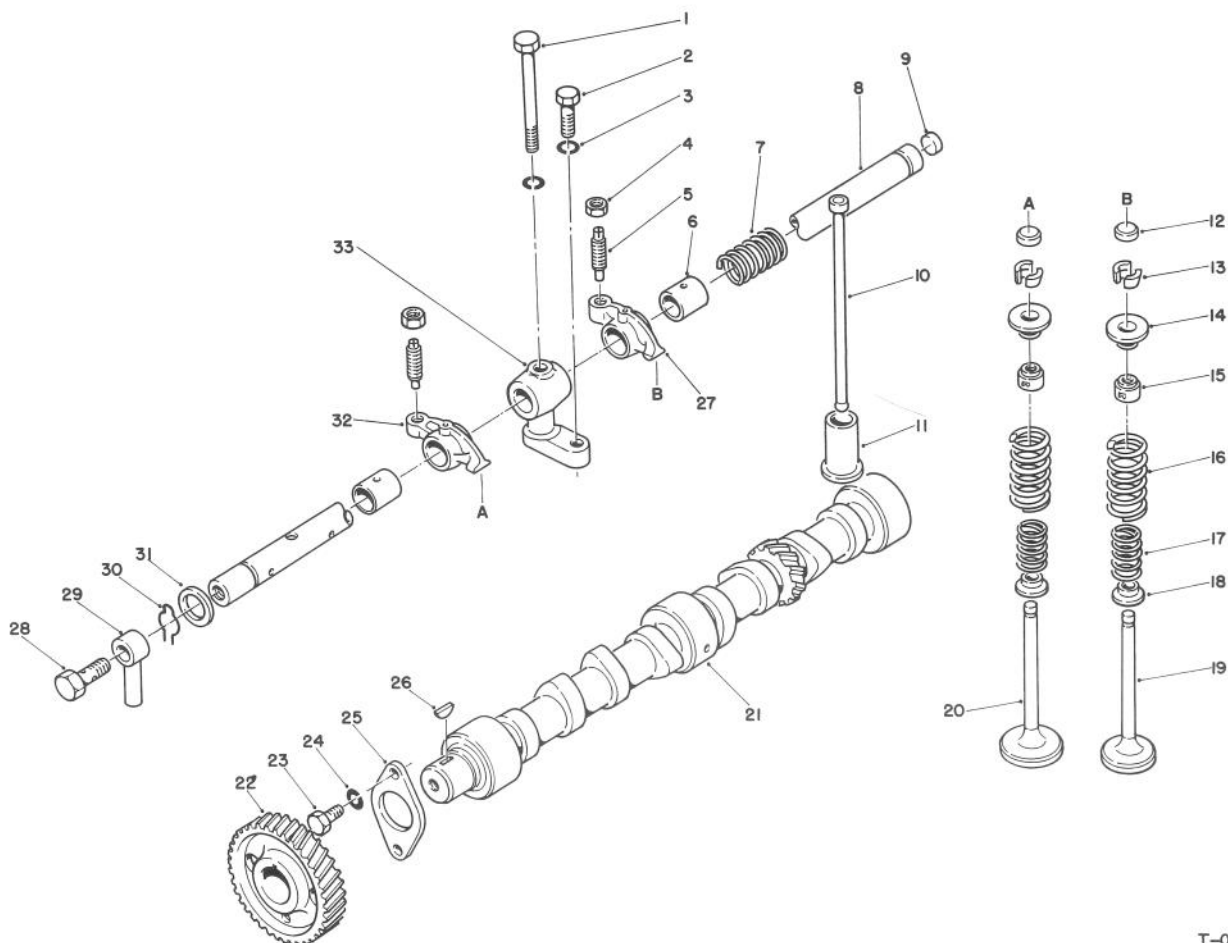

T-0584-90


VALVE & CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-2870	Bolt	4
2	60-7280	Bolt	4
3	51-7250	Washer - Lock	8
4	70-2970	Nut	8
5	70-3160	Screw	8
6	70-5080	Bushing	8
7	70-5190	Spring	3
8	70-5180	Rocker Shaft Assembly (Incl. Ref. #9)	1
9	51-5090	Plug	1
10	70-5230	Rod - Push	8
11	70-5010	Tappet	8
12	51-5280	Cap	8
13†	51-5290	Cotter	16
14	51-5300	Retainer	8
‡15	51-5310	Seal	8
16	70-5930	Spring	8
17	70-4990	Spring	8

Ref. No.	Part No.	Description	No. Used
18	70-5000	Retainer	8
19	70-5920	Valve - Exhaust	4
20	70-5910	Valve - Inlet	4
21	70-5940	Camshaft	1
22	70-5020	Gear - Camshaft	1
23	60-7110	Bolt	2
24	51-7250	Washer - Lock	2
25	51-5470	Plate	1
26	51-5460	Key	1
27	70-5160	Rocker Assembly - Exhaust (Incl. Ref. #4-6)	4
28	70-3050	Bolt	1
29	70-5170	Pipe	1
30	51-5260	Ring - Retaining	2
31	70-5110	Washer	2
32	70-5150	Rocker Assembly - Intake (Incl. Ref. #4-6)	4
33	70-5200	Bracket	4

‡Included in Oil Seal Kit No. 70-6960

†Sold in sets of two

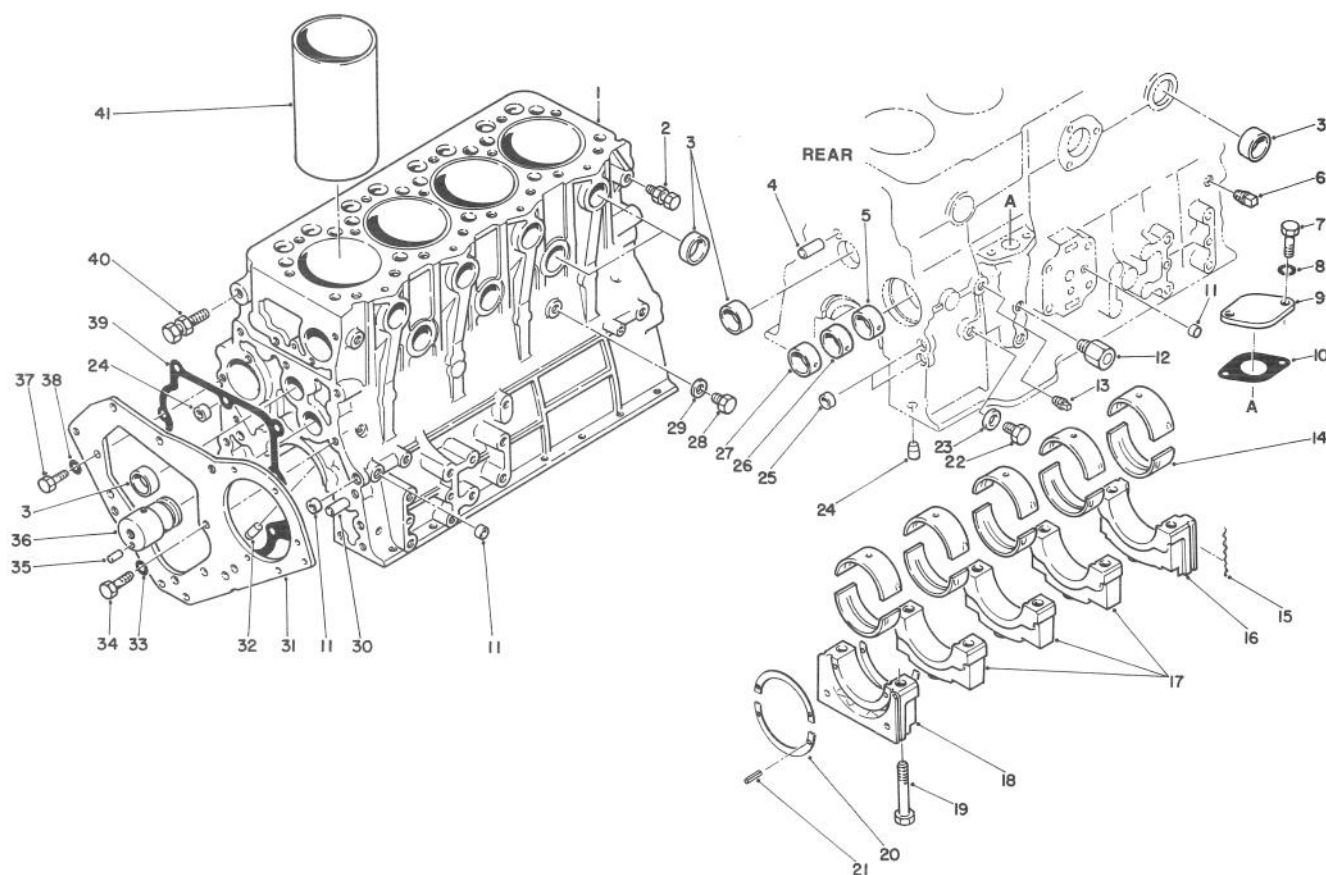

CRANKCASE ASSEMBLY


T-0585-90

Ref. No.	Part No.	Description	No. Used
1	70-5960	Crankcase Assembly (Incl. Ref. #2-6, 11, 13, 15-19, 21-30, 32, 35-36, & 40-41)	1
2	51-5580	Hanger	1
3	51-5600	Cap	11
4	70-3000	Pin	2
5	51-5500	Bushing No. 1	1
6	70-3400	Plug	6
7	60-7280	Bolt	2
8	51-7250	Washer	2
9	51-6480	Cover	1
†10	51-6490	Gasket	1
11	70-3350	Cap	6
12	70-5950	Connector	1
13	70-3410	Plug	1
14	70-5350	Bearing - Main (Std.)	10
‡15	70-5240	Seal	4
16		Cap - Bearing No. 1	1
17		Cap - Bearing No. 2,3, & 4	3
18		Cap - Bearing No. 5	1
19	70-5300	Bolt	10
20	70-5360	Plate - Thrust (Std.)	3

Ref. No.	Part No.	Description	No. Used
21	51-5650	Pin	6
22	70-3120	Plug	1
†23	70-3080	Gasket	1
24		Plug	2
25	70-3370	Cap	3
26	51-5510	Bushing - No. 2	1
27	51-5520	Bushing - No. 3	1
28	51-8280	Bolt	1
†29	51-8270	Washer	1
30	70-5320	Pin	2
31	70-5250	Plate	1
32	70-5340	Valve	4
33	51-6390	Washer	1
34	70-2890	Bolt	1
35	51-5650	Pin	1
36	51-5640	Idler Shaft Assembly (Incl. Ref. #35)	1
37	60-7110	Bolt	1
38	51-7250	Washer	1
†39	70-5260	Gasket	1
40	70-5290	Hanger	1
41	70-5280	Sleeve	4

†Included in Gasket Set No. 70-6950

‡Included In Oil Seal Kit No. 70-6960

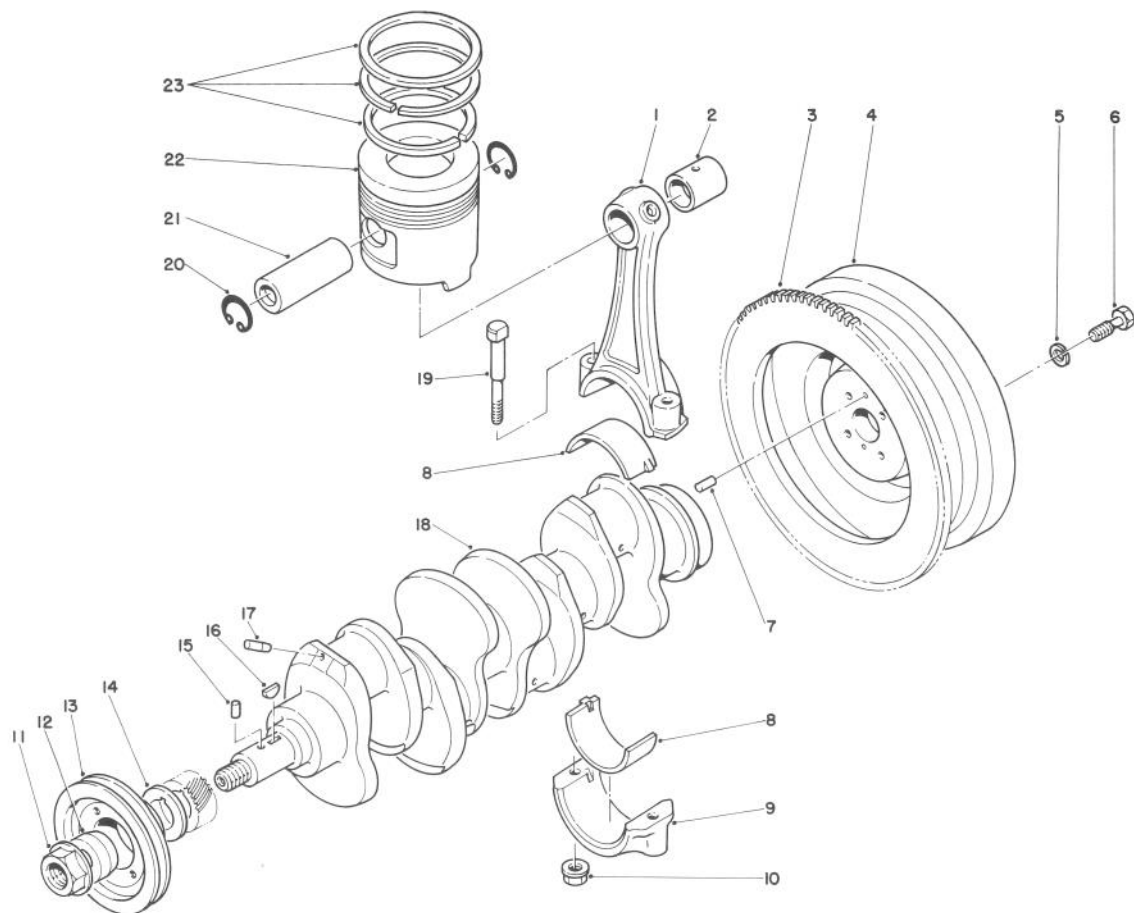


T-0586-90

PISTON, CONNECTING ROD, CRANKSHAFT & FLYWHEEL

Ref. No.	Part No.	Description	No. Used
1	70-5990	Connecting Rod - Std. (Incl. Ref. #2, 8-10 & 19)	4
2	70-6000	Bushing	4
3	51-6350	Gear	1
4	70-6030	Flywheel Assembly (Incl. Ref. #3)	1
5	51-8610	Washer - Lock	4
6	70-2880	Bolt	4
7	70-5800	Pin	2
8†	70-5430	Bearing - Rod (Std.)	8
9		Cap	4
10	70-5420	Nut	8
11	70-3170	Nut	1

Ref. No.	Part No.	Description	No. Used
12	70-5820	Cone	1
13	70-5440	Pulley	1
14	70-5810	Plate	1
15	51-5650	Pin	1
16	51-5460	Key	1
17		Plug	2
18	70-6020	Crankshaft Assembly (Incl. Ref. #7, 11, & 15-17)	1
19	70-6010	Bolt	8
20	70-3020	Ring	8
21	70-5410	Pin	4
22	70-5980	Piston (Std.)	4
23	70-5400	Ring Set - Std.	4

†Sold in sets of two

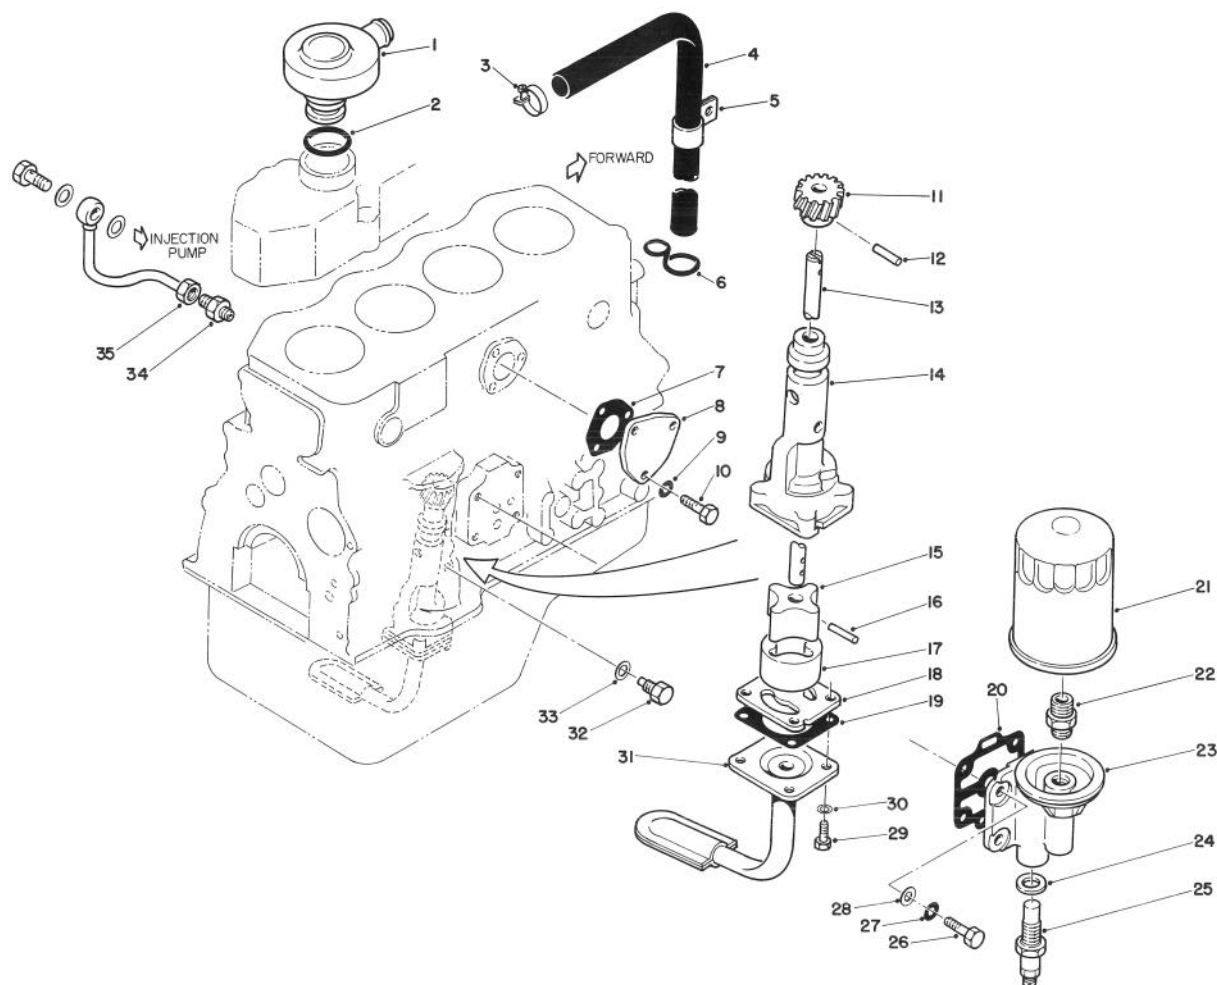


T-0587-90

OIL PUMP, BREATHER & FILTER

Ref. No.	Part No.	Description	No. Used
1	70-5570	Breather	1
†2	70-3220	O-Ring	1
3	70-3090	Clamp	1
4	70-3030	Tube	1
5	70-3420	Clip	1
6	70-5580	Stay	1
†7	70-5100	Gasket	1
8	70-5270	Cover	1
9	51-7250	Washer	3
10	60-7110	Bolt	3
11		Gear	1
12		Pin	1
13		Shaft	1
14	70-5840	Oil Pump Assembly (Incl. Ref. #11-13, 15-18 & 29-30)	1
15		Rotor	1
16		Pin	2
17		Rotor	1
18	70-5850	Cover	1

Ref. No.	Part No.	Description	No. Used
†19	70-5510	Gasket	1
†20	70-5550	Gasket	1
21	49-2500	Element Assembly	1
22	70-5520	Union	1
23	70-5530	Bracket Assembly (Incl. Ref. #22, 24 & 25)	1
24	51-6820	Washer	1
25	51-6830	Relief Valve Assembly	1
26	60-7480	Bolt	4
27	51-6390	Washer - Lock	4
28	70-2990	Washer	4
29	60-7290	Bolt	4
30	51-7400	Washer	4
31	70-5500	Strainer	1
32	70-5120	Bolt	1
†33	70-3070	Gasket	1
34	70-3340	Connector	1
35	70-5030	Pipe	1
*	70-5540	Oil Filter Assembly (Incl. Ref. #21-25)	1

†Included in Gasket Set No. 70-6950

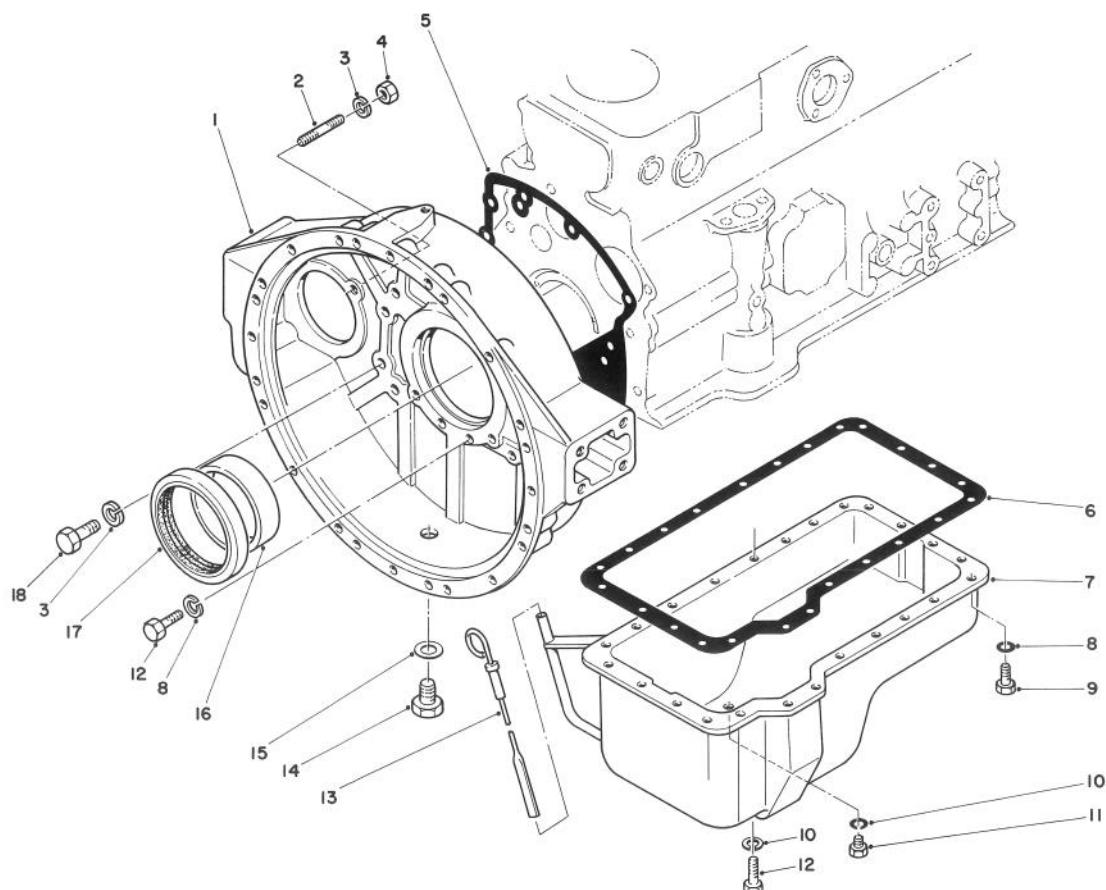

T-0588-90


FLYWHEEL HOUSING & OIL PAN ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-5970	Housing	1
2	51-5950	Stud	2
3	51-6390	Washer - Lock	13
4	51-5970	Nut	2
†5	70-5330	Gasket	1
†6	70-5390	Gasket	1
7	70-5380	Pan - Oil (Incl. Ref. #10 & 11)	1
8	51-7250	Washer - Lock	28
9	60-7280	Bolt	23

Ref. No.	Part No.	Description	No. Used
†10	70-3470	Washer - Drain Plug	1
11	70-3110	Plug - Drain	1
12	60-7370	Bolt	5
13	70-5560	Gage	1
14	70-3230	Plug	1
†15	51-6890	Gasket - Plug	1
16		Sleeve	1
‡17	51-5890	Oil Seal Assembly (Incl. Ref. #16)	1
18	70-2900	Bolt	11

†Included in Gasket Set No. 70-6950

‡Included In Oil Seal Kit No. 70-6960

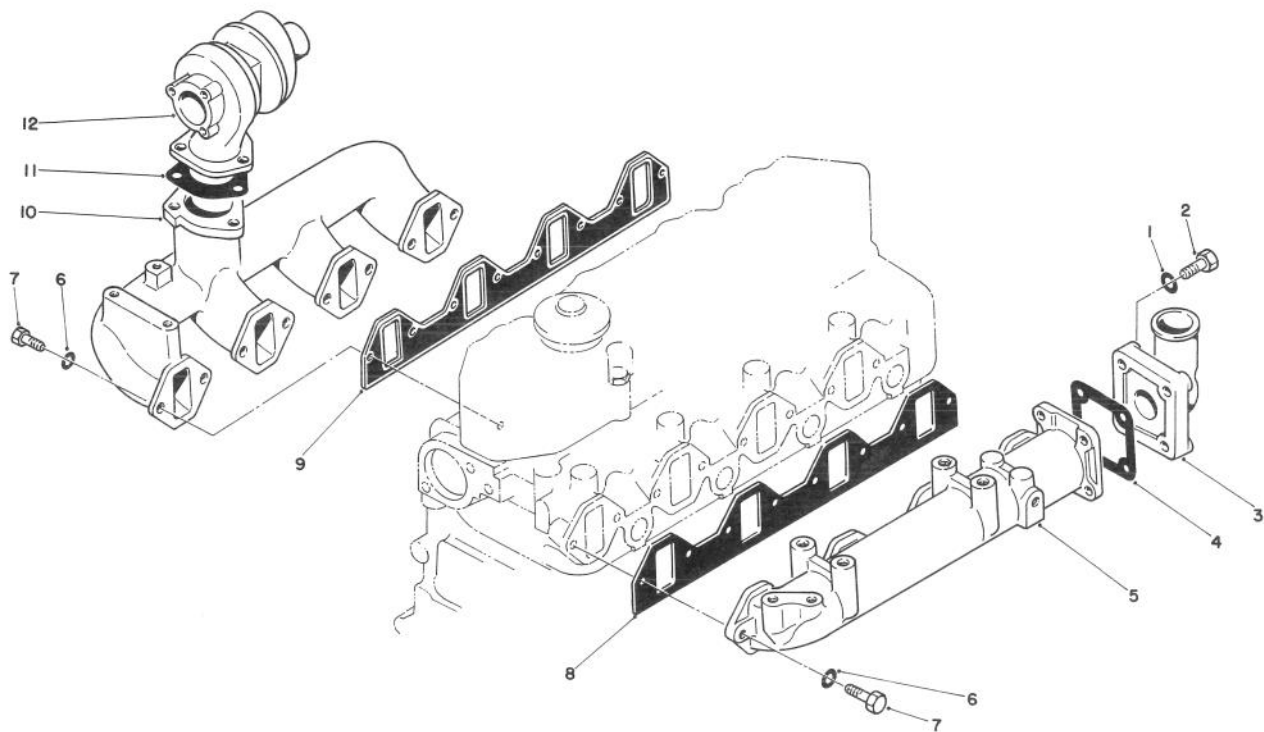


T-0590-90

INTAKE & EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	51-7250	Washer	4
2	60-7370	Bolt	4
3	70-6090	Elbow	1
†4	70-3130	Gasket	1
5	70-6050	Manifold	1
6	51-7250	Washer	16

Ref. No.	Part No.	Description	No. Used
7	60-7370	Bolt	16
†8	70-6060	Gasket	1
†9	70-5460	Gasket	1
10	70-5470	Manifold	1
†11	70-6250	Gasket	1
12	70-6430	Turbocharger Assembly	1

†Included in Gasket Set No. 70-6950

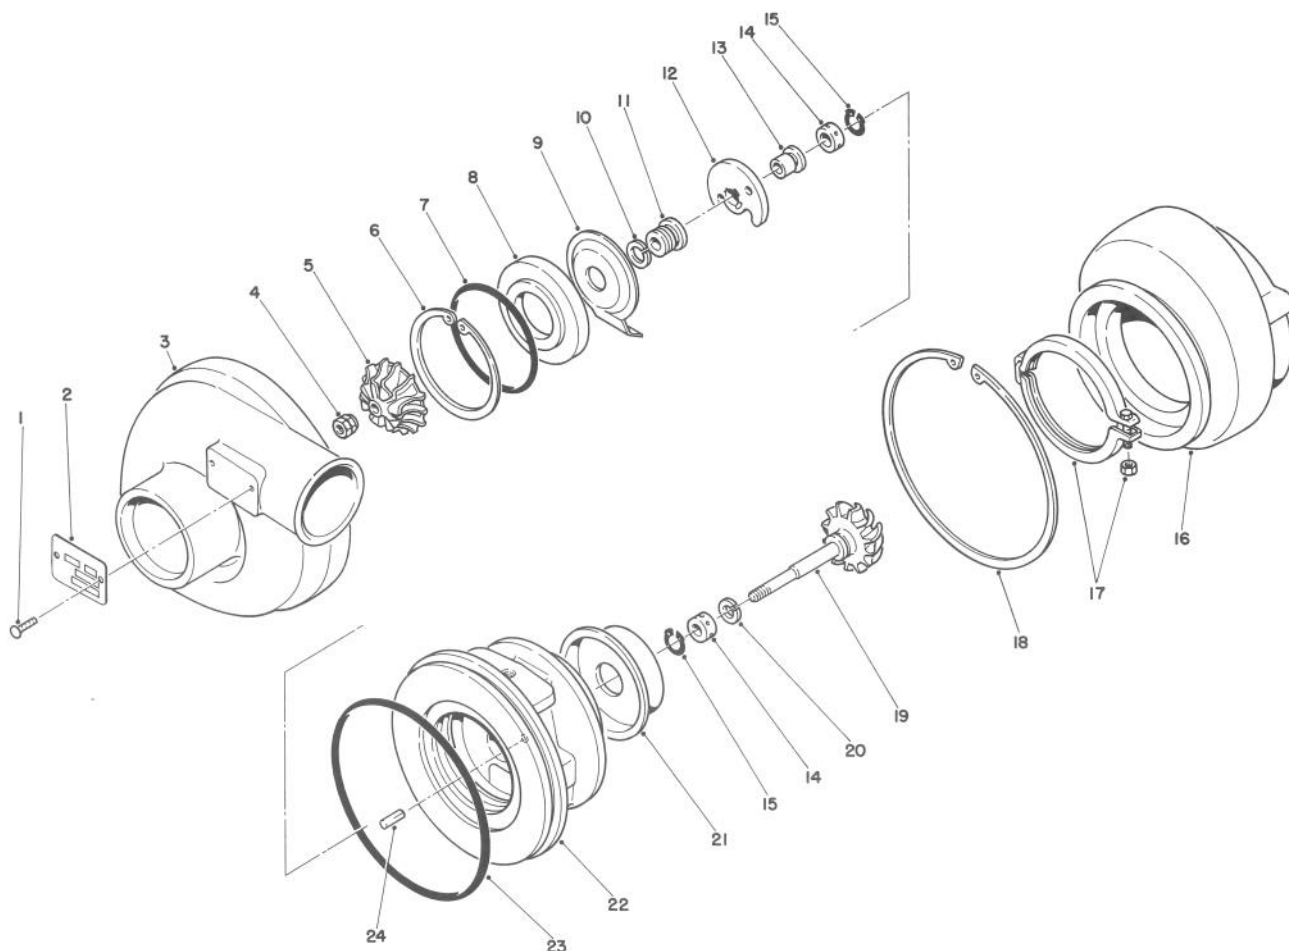


TURBOCHARGER ASSEMBLY NO. 70-6430

T-0591-90

Ref. No.	Part No.	Description	No. Used
1	60-7160	Rivet	2
2	70-6360	Plate	1
3	70-6340	Cover	1
4	70-6330	Nut	1
5	70-6320	Wheel	1
6	70-6300	Ring	1
7	70-6270	O-Ring	1
8	70-6290	Insert	1
9	70-6280	Deflector	1
10	70-6310	Ring	1
11	70-6410	Sleeve	1
12	70-6380	Bearing	1
13	70-6420	Ring	1
14	70-6370	Bearing	2

Ref. No.	Part No.	Description	No. Used
15	70-6390	Ring	2
16	70-6450	Housing	1
17	70-6230	Coupling Assembly	1
18	70-6400	Ring	1
19	70-6470	Shaft & Turbine Wheel Assy.	1
20	70-6350	Ring	1
21	70-6260	Plate	1
22	70-6460	Bearing Housing Assembly (Incl. Ref. #24)	1
23	70-3010	O-Ring	1
24		Pin	1
*	70-6440	Cartridge Assembly (Incl. Ref. #4-15 & 19-24)	1

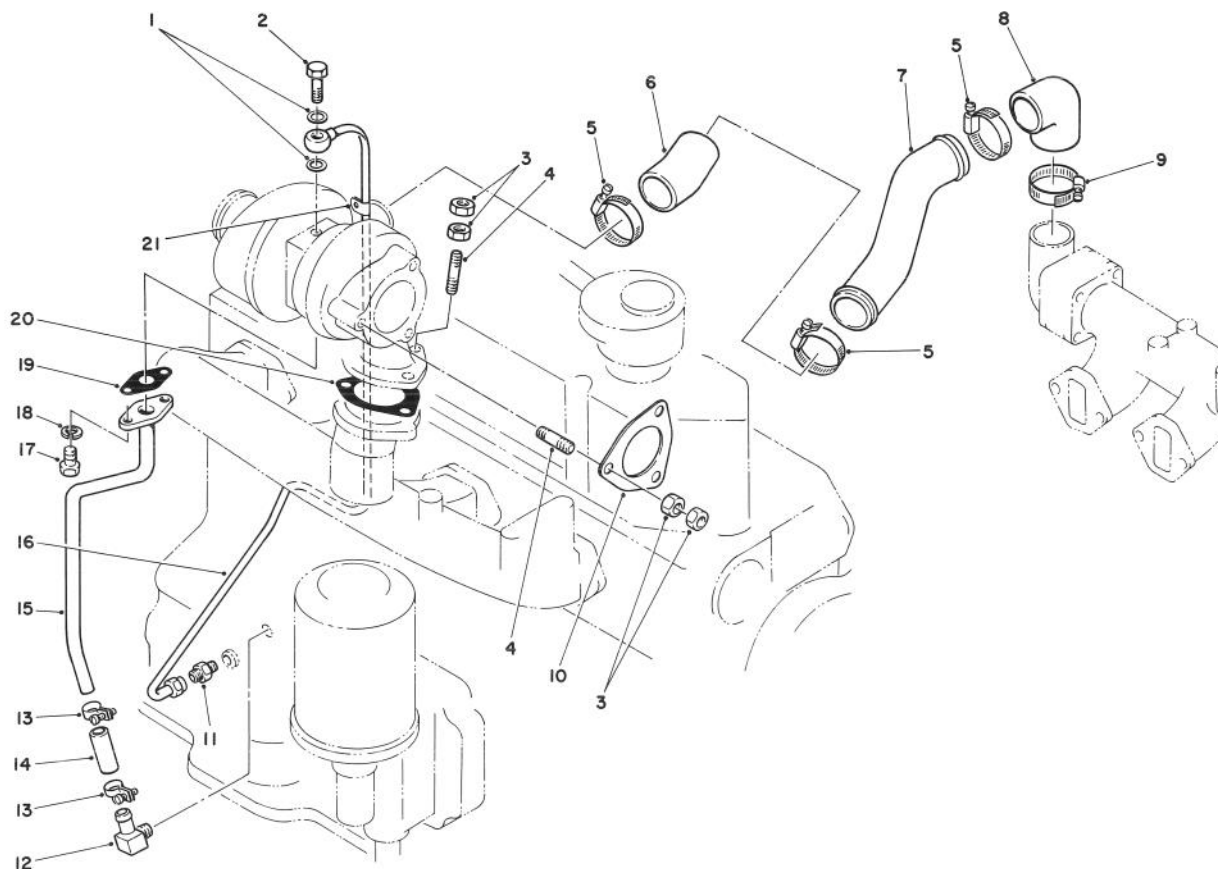


T-0592-90

TURBOCHARGER OIL PIPE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
†1	70-3060	Gasket	2
2	70-4980	Bolt - Cap Hex Hd.	1
3	60-7120	Nut - Hex.	12
4	70-3480	Stud	6
5	70-3430	Clamp - Hose	3
6	70-6080	Hose	1
7	70-6070	Pipe	1
8	70-4950	Hose - 90° Elbow	1
9	70-3440	Clamp - Hose	1
10	70-6240	Gasket	1
11	70-3340	Connector	1

Ref. No.	Part No.	Description	No. Used
12	70-5310	Fitting - 90° Elbow	1
13	70-3090	Clamp - Hose	2
14	70-3040	Hose	1
15	70-5490	Pipe - Oil	1
16	70-5480	Pipe - Oil	1
17	70-2830	Bolt - Cap Hex. Hd.	2
18	51-7400	Washer - Lock	2
19	70-4970	Gasket	1
†20	70-6250	Gasket	1
21	70-4960	Clamp - R	1

†Included in Gasket Set No. 70-6950

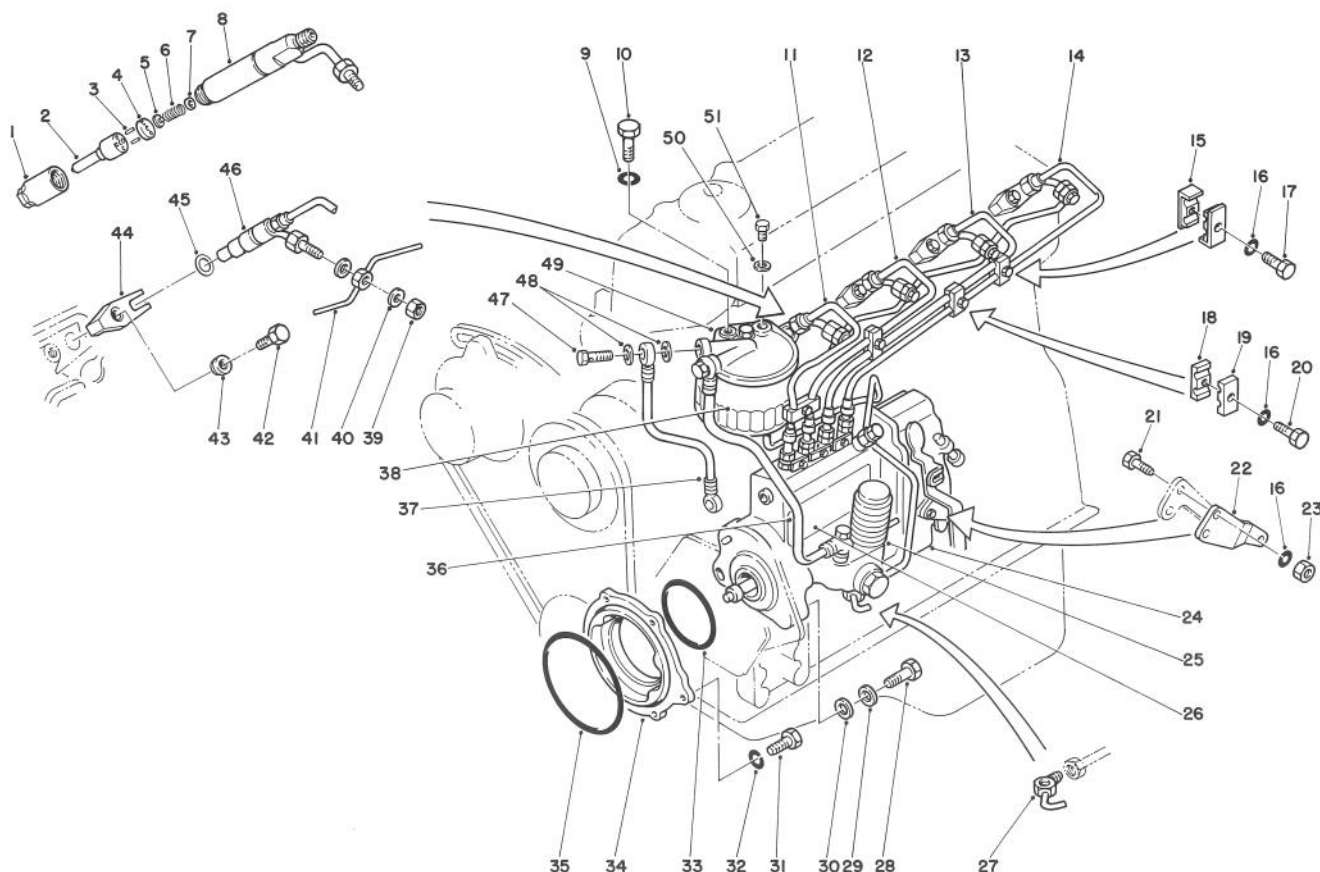

T-0593-90


FUEL SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-4840	Nut	4
2	70-6170	Nozzle Tip Assembly	4
3	70-6830	Pin	8
4	70-4930	Packing	4
5	70-4820	Pin	4
6	70-4830	Spring	4
7	70-4860	Washer 1.00 mm	A/R
*	70-4870	Washer 1.05 mm	A/R
*	70-4880	Washer 1.10 mm	A/R
*	70-4850	Washer 2.15 mm	A/R
*	70-4890	Washer 1.275 mm	A/R
*	70-4900	Washer 1.325 mm	A/R
*	70-4910	Washer 1.775 mm	A/R
*	70-4920	Washer 0.95 mm	A/R
8	70-4810	Body Assembly	4
9	51-6390	Washer - Lock	2
10	60-7480	Bolt	2
11	70-6190	Pipe - No. 1	1
12	70-6100	Pipe - No. 2	1
13	70-6200	Pipe - No. 3	1
14	70-6110	Pipe - No. 4	1
15	60-5210	Clamp	2
16	51-7400	Washer - Lock	6
17	70-2840	Bolt	1

Ref. No.	Part No.	Description	No. Used
18	70-3180	Clamp	3
19	70-3190	Clamp	3
20	70-2830	Bolt	3
21	70-2820	Bolt	2
22	70-5770	Lever	1
23	70-2960	Nut	2
24		Governor	1
25	70-5700	Fuel Feed Pump	1
26	70-6180	Injection Pump (Incl. Ref. #24 & 25)	1
27	70-5060	Joint	1
28	51-4910	Bolt	4
29	51-6390	Washer	4
30	70-2990	Washer	4
31	60-7280	Bolt	2
32	51-7250	Washer - Lock	2
†33	70-6130	O-Ring	1
34	70-6210	Flange	1
†35	70-5070	O-Ring	1
36	70-3140	Pipe	1
37	70-3150	Pipe	1
38	70-5730	Filter Element Assembly	1
39	70-2980	Nut	4
†40	70-3460	Washer	8

*Not Illustrated

†Included in Gasket Set No. 70-6950

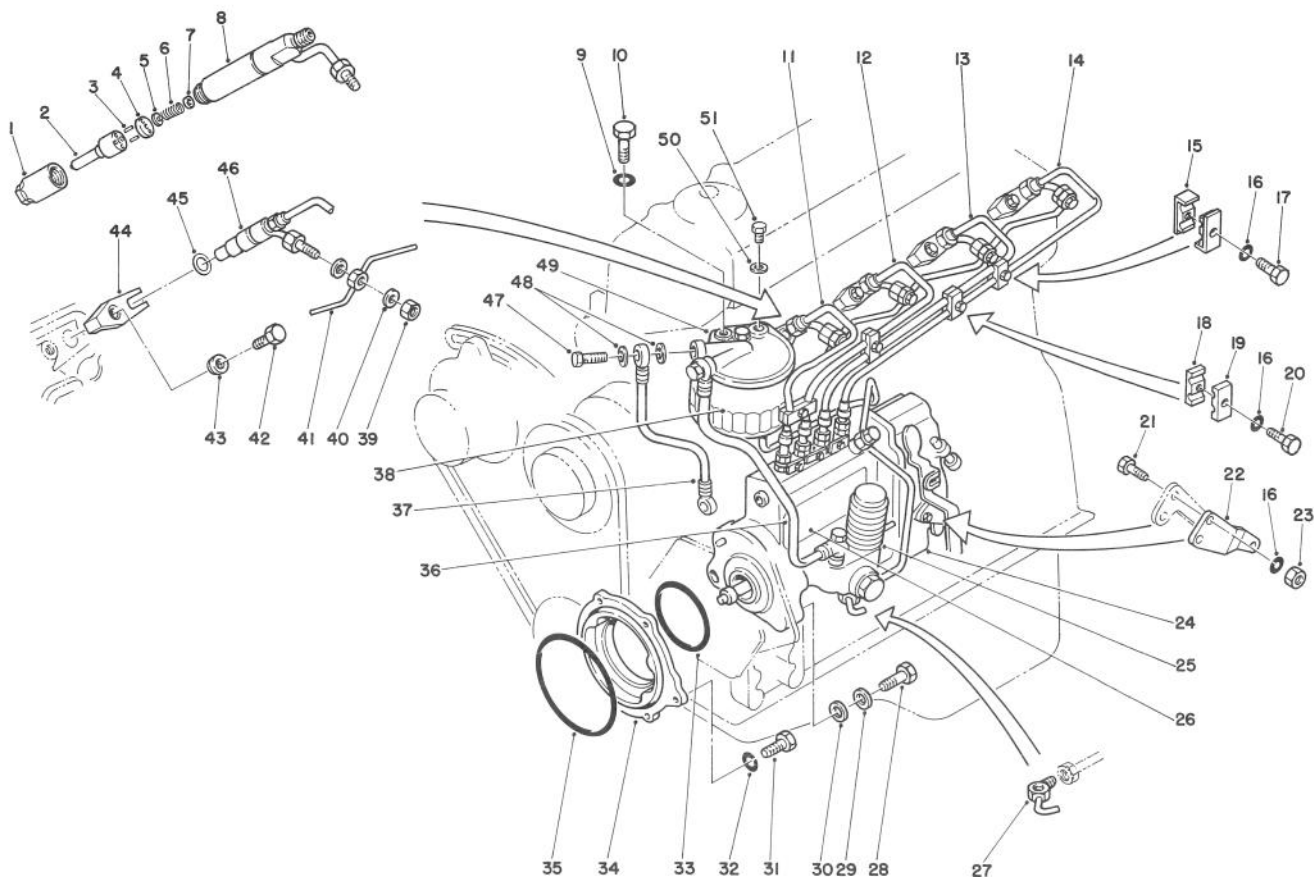


T-0593-90

FUEL SYSTEM ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
41	70-6120	Pipe	1	47	70-3250	Bolt	2
42	70-2850	Bolt	4	48	70-3210	Packing	4
43	70-6140	Washer	4	49	70-5720	Bracket	1
44	70-6220	Gland	4	50	70-3200	Washer	1
†45	70-6150	Gasket	4	51	70-3240	Plug	1
46	70-6160	Nozzle Assembly (Incl. Ref. #1-8)	4	*	70-5710	Fuel Filter Assembly (Incl. Ref. #38 & 47-51)	1

*Not Illustrated

†Included in Gasket Set No. 70-6950

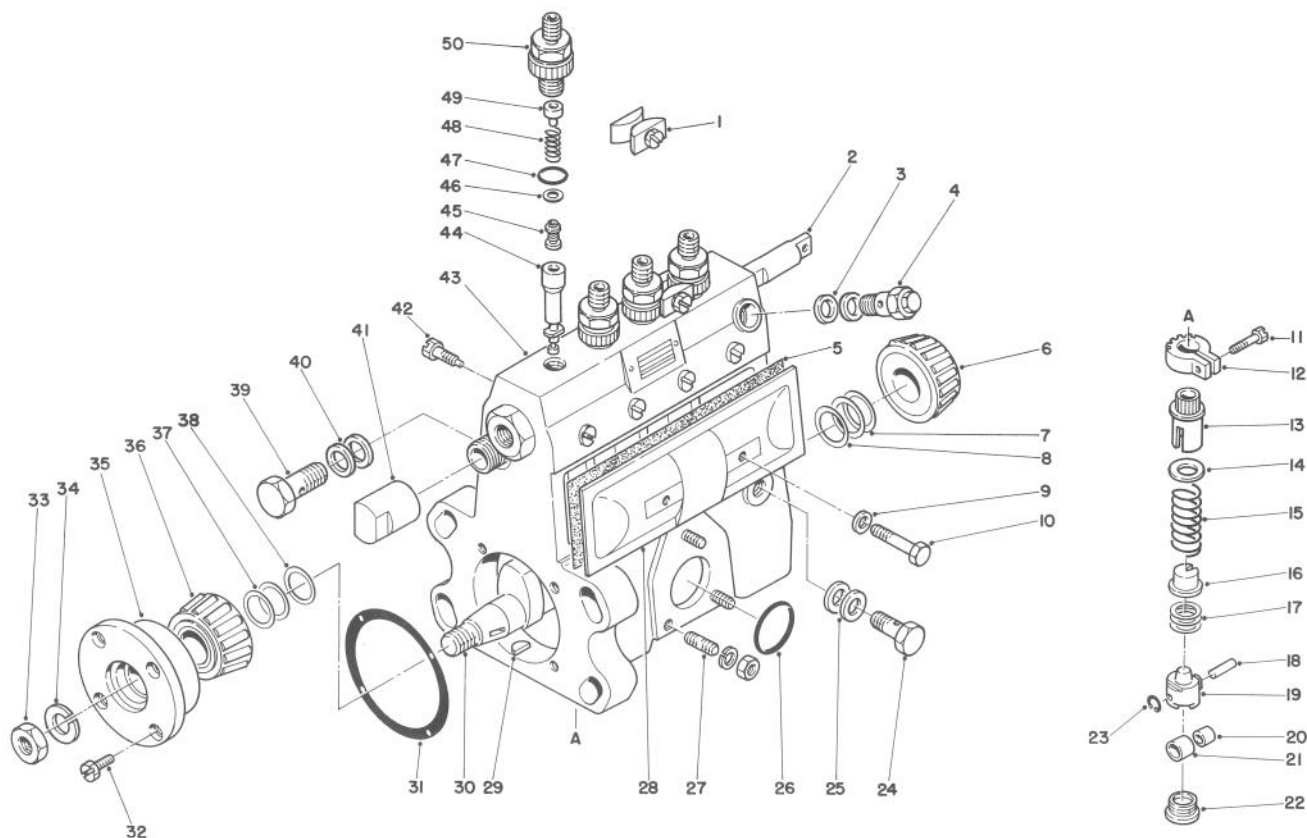


FUEL INJECTION PUMP ASSEMBLY

T-0594-90

Ref. No.	Part No.	Description	No. Used
1	70-3880	Plate	2
2	70-3840	Rack	1
3	70-3860	Washer	2
4	70-3960	Valve	1
5	70-3930	Gasket	1
6	70-6850	Bearing	2
7	70-3710	Plate - 0.10	A/R
*	70-3720	Plate - 0.12	A/R
*	70-3730	Plate - 0.14	A/R
*	70-3740	Plate - 0.16	A/R
*	70-3750	Plate - 0.18	A/R
*	70-3760	Plate - 0.50	A/R
*	70-3770	Plate - 0.30	A/R
8	70-3690	Ring	1
9	70-3900	Packing	2
10	70-3950	Screw	2
11	70-3570	Screw	4
12	70-3560	Pinion	4
13	70-3580	Sleeve	4
14	70-3590	Seat	4
15	70-3600	Spring	4
16	70-3610	Seat	4

Ref. No.	Part No.	Description	No. Used
17	70-3970	Plate - 0.6	A/R
*	70-3980	Plate - 0.7	A/R
*	70-3990	Plate - 0.8	A/R
*	70-4000	Plate - 0.9	A/R
*	70-4010	Plate - 1.0	A/R
*	70-4020	Plate - 1.1	A/R
*	70-4030	Plate - 1.2	A/R
*	70-4040	Plate - 1.3	A/R
*	70-4050	Plate - 1.4	A/R
*	70-4060	Plate - 0.1	A/R
*	70-4070	Plate - 0.2	A/R
*	70-4080	Plate - 0.3	A/R
*	70-4090	Plate - 0.4	A/R
*	70-4100	Plate - 0.5	A/R
*	70-4110	Plate - 0.15	A/R
18	70-3640	Pin	4
19	70-3620	Body	4
20	70-3650	Bushing	4
21	70-3660	Roller	4
22	70-3670	Plug	4
23	70-6800	E-Ring	4
24	70-6930	Screw	1

*Not Illustrated

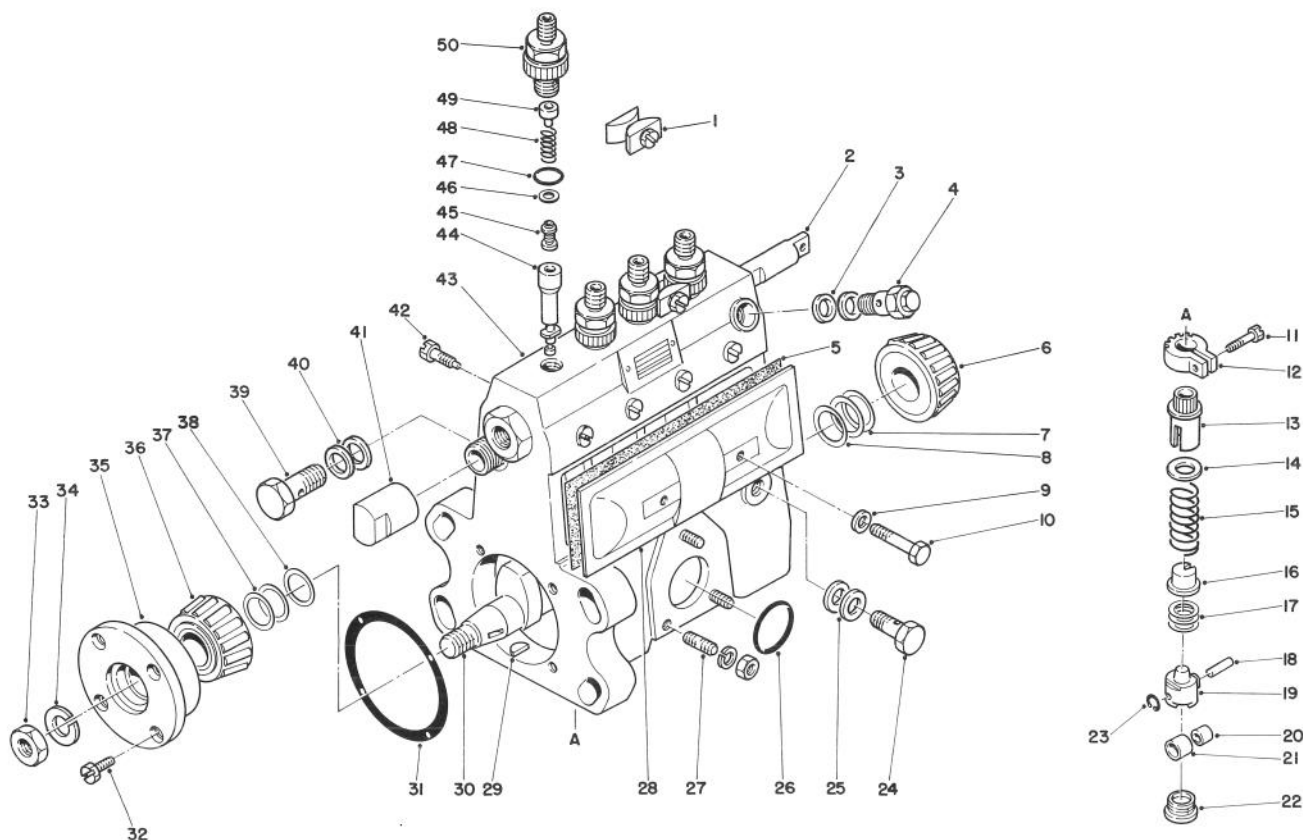

T-0594-90


FUEL INJECTION PUMP ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
25	70-3910	Washer	2
26	70-6900	O-Ring	1
27	70-6720	Stud	3
28	70-3940	Plate	2
29	70-6880	Key	1
30	70-3680	Camshaft	1
31	70-3830	Gasket	1
32	70-6540	Bolt	4
33	70-6780	Nut	1
34	70-6680	Washer	1
35	70-3820	Cover	1
36	70-6840	Bearing	1
37	70-3780	Plate - 0.1	A/R
*	70-3790	Plate - 0.15	A/R
*	70-3800	Plate - 0.3	A/R
*	70-3810	Plate - 0.5	A/R
38	70-3700	Ring	1

Ref. No.	Part No.	Description	No. Used
39	70-6940	Screw	1
†40	70-3870	Washer	2
41	70-3490	Cover	1
42	70-3850	Screw	1
43	70-4940	Housing Assembly (Incl. Ref. #27)	1
44	70-3550	Element Assembly	4
45	70-3540	Valve Assembly	4
46	70-3530	Gasket	4
47	70-6910	O-Ring	4
48	70-3520	Spring	4
49	70-3510	Stopper	4
50	70-3500	Holder	4
*	70-3920	Cover Assembly (Incl. Ref. #5, 9-10 & 28)	1
*	70-3630	Tappet Assembly (Incl. Ref. #18-21 & 23)	1

*Not Illustrated

†Included in Gasket Set No. 70-6950

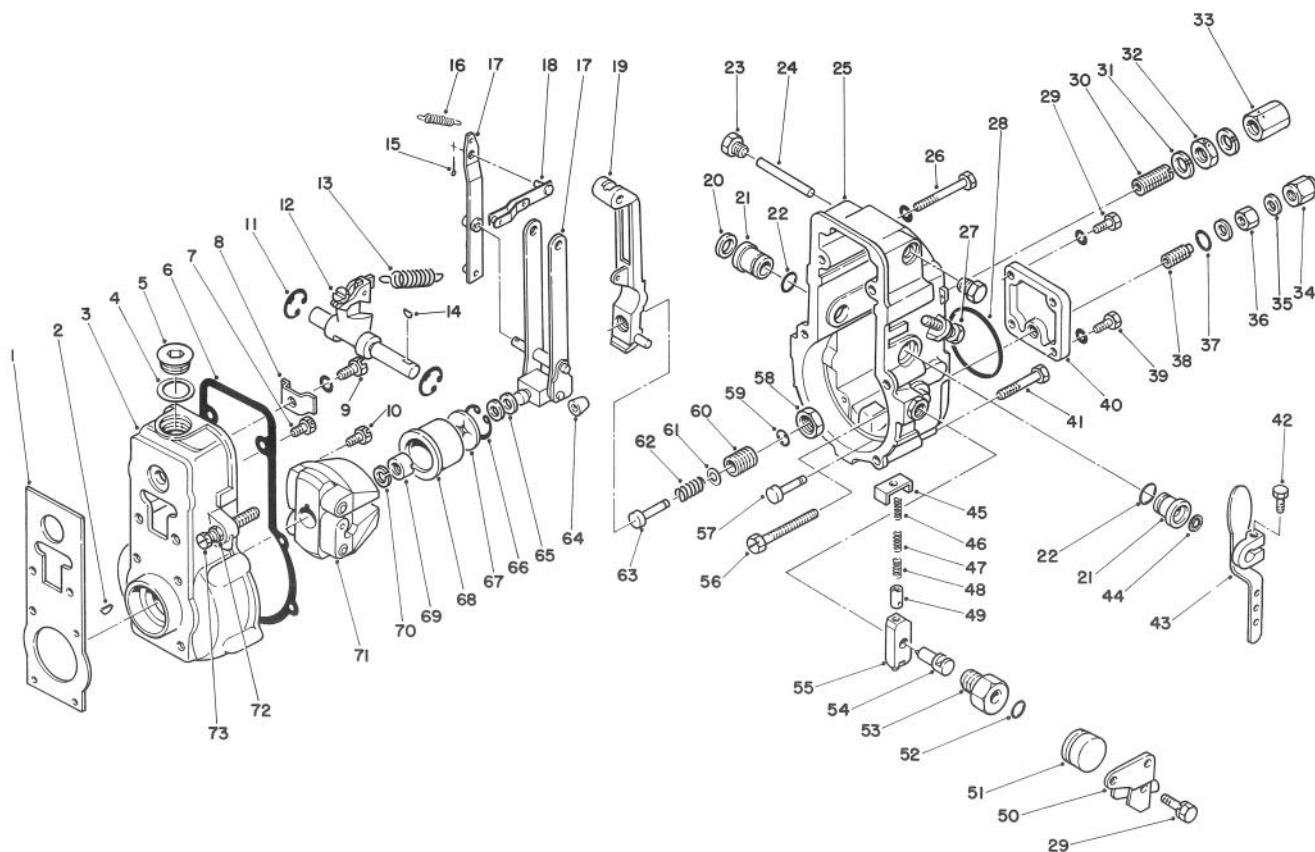


T-0595-90

GOVERNOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-4160	Gasket	1
2	70-6870	Key	1
3	70-4130	Housing	1
4	70-6710	Washer	1
5	70-4590	Plug	1
6	70-4150	Gasket	1
7	70-6530	Bolt	5
8	70-4210	Plate	1
9	70-6550	Bolt	1
10	70-6520	Bolt	1
11	70-6810	E-Ring	2
12	70-4220	Swiveling Lever Assembly	1
13	70-4370	Spring	1
14	70-6860	Key	1
15	70-6480	Pin	1
16	70-4380	Spring	1
17	70-4320	Lever Assembly	1
18	70-4340	Shackle Assembly	1
19	70-4250	Tension Lever Assembly	1
20	70-4580	Cap	1
21	70-4230	Bushing	2
22	70-6510	O-Ring	2
23	70-4360	Plug	2
24	70-4350	Shaft	1
25	70-4400	Cover	1
26	70-6740	Bolt	2

Ref. No.	Part No.	Description	No. Used
27	70-4140	Stopper	1
28	70-6790	Packing	1
29	70-6520	Bolt & Washer	3
30	70-4120	Capsule	1
31	70-3890	Washer	2
32	70-4310	Nut	1
33	70-4440	Nut	1
34	70-4450	Nut	1
35	70-6690	Washer	2
36	70-6770	Nut	1
37	70-6500	O-Ring	1
38	70-4330	Bushing	1
39	70-6760	Bolt & Washer	2
40	70-4550	Plate	1
41	70-6750	Bolt	4
42	70-6730	Bolt	1
43	70-4560	Adjusting Lever Assembly	1
44	70-6920	Seal	1
45	70-4460	Plate	1
46	70-4500	Spring	1
47	70-4520	Spring	1
48	70-4510	Spring	1
49	70-4490	Cup	1
50	70-4570	Stop Lever Assembly	1
51	70-4530	Cover	1
52	70-6890	O-Ring	1

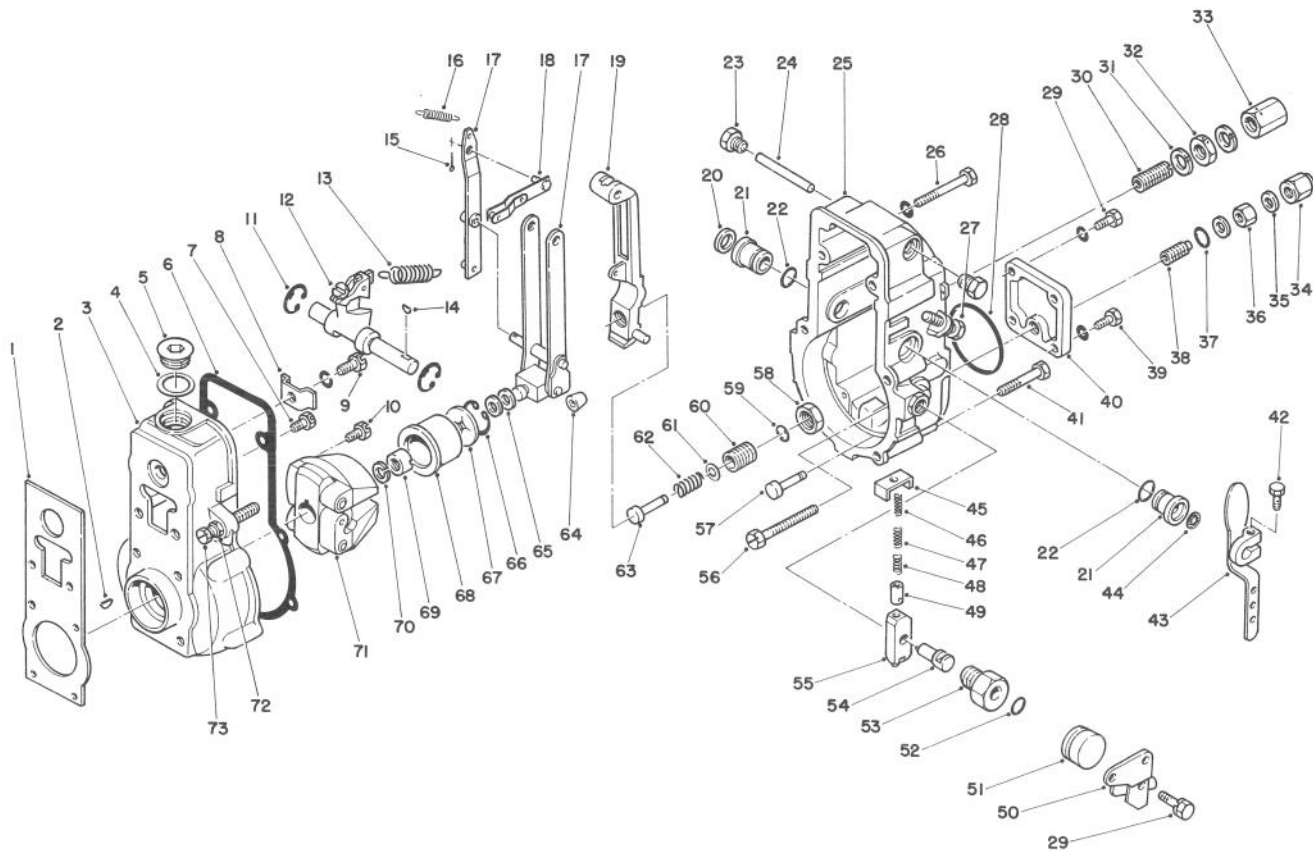


T-0595-90

GOVERNOR ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
53	70-4420	Bushing	1
54	70-4480	Shaft	1
55	70-4470	Lever	1
56	70-4390	Screw	1
57	70-4410	Pin	1
58	70-4300	Nut	1
59	70-4240	E-Ring	1
60	70-4270	Screw	1
61	70-6570	Washer - 0.1	A/R
*	70-6600	Washer - 0.2	A/R
*	70-6580	Washer - 0.25	A/R
*	70-6590	Washer - 0.5	A/R
*	70-6660	Washer - 1.0	A/R
62	70-4280	Spring	1
63	70-4290	Adapter	1
64	70-4540	Slider	1

Ref. No.	Part No.	Description	No. Used
65	70-6610	Washer - 0.2	A/R
*	70-6620	Washer - 0.3	A/R
*	70-6630	Washer - 0.4	A/R
*	70-6640	Washer - 0.1	A/R
*	70-6650	Washer - 1.0	A/R
66	70-6490	Ring	1
67	70-4200	Plate	1
68	70-4190	Sleeve	1
69	70-4180	Nut	1
70	70-6670	Washer	1
71	70-4170	Flyweight Assembly	1
72	70-6560	Nut	2
73	70-4430	Screw	1
*	70-4260	Adapter Assembly (Incl. Ref. #59-63)	1

*Not Illustrated

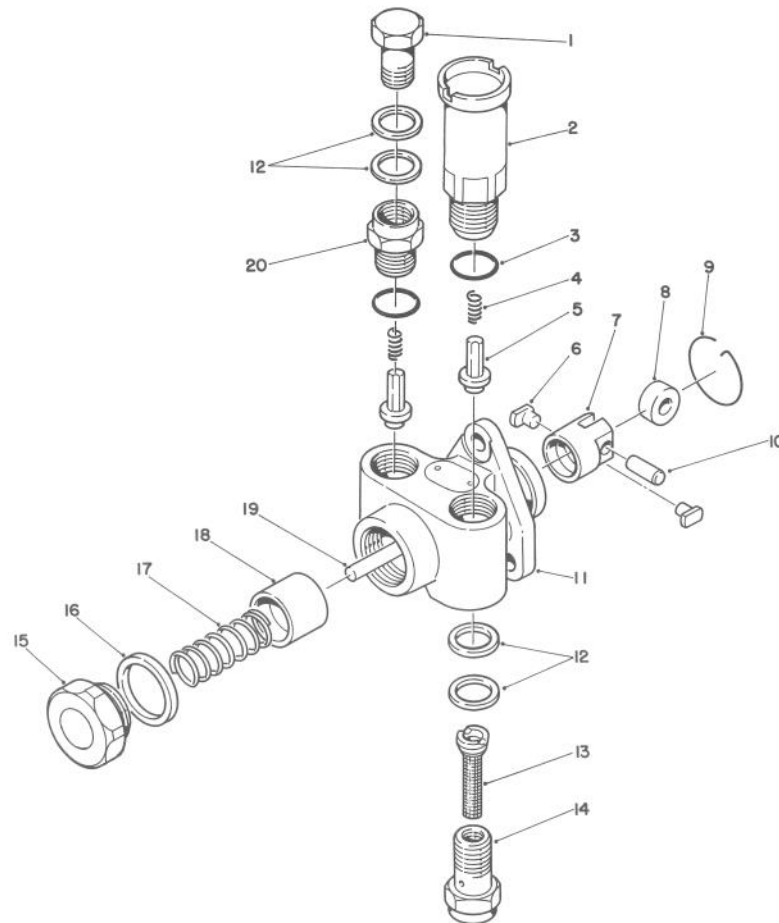


T-0596-90

FUEL FEED PUMP ASSEMBLY NO. 70-5700

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	70-6940	Screw	1	14	70-4800	Screw	1
2	70-4650	Pump Assembly	1	15	70-4780	Plug	1
3	70-4630	Gasket	2	16	70-6700	Washer	1
4	70-4620	Spring	2	17	70-4770	Spring	1
5	70-4610	Valve	2	18	70-4720	Piston	1
6	70-4760	Block	2	19	70-4660	Rod, Blue Small Dia.	A/R
7	70-4730	Tappet	1	*	70-4670	Rod, Red Small Dia.	A/R
8	70-4740	Roller	1	*	70-4680	Rod, Yellow Small Dia.	A/R
9	70-6820	Ring	1	*	70-4690	Rod, Green Small Dia.	A/R
10	70-4750	Pin	1	*	70-4700	Rod, White Small Dia.	A/R
11	70-4600	Housing Assembly	1	*	70-4710	Rod, Brown Big Dia.	A/R
†12	70-3870	Washer	4	20	70-4640	Support	1
13	70-4790	Filter	1				

*Not Illustrated

†Included in Gasket Set No. 70-6950

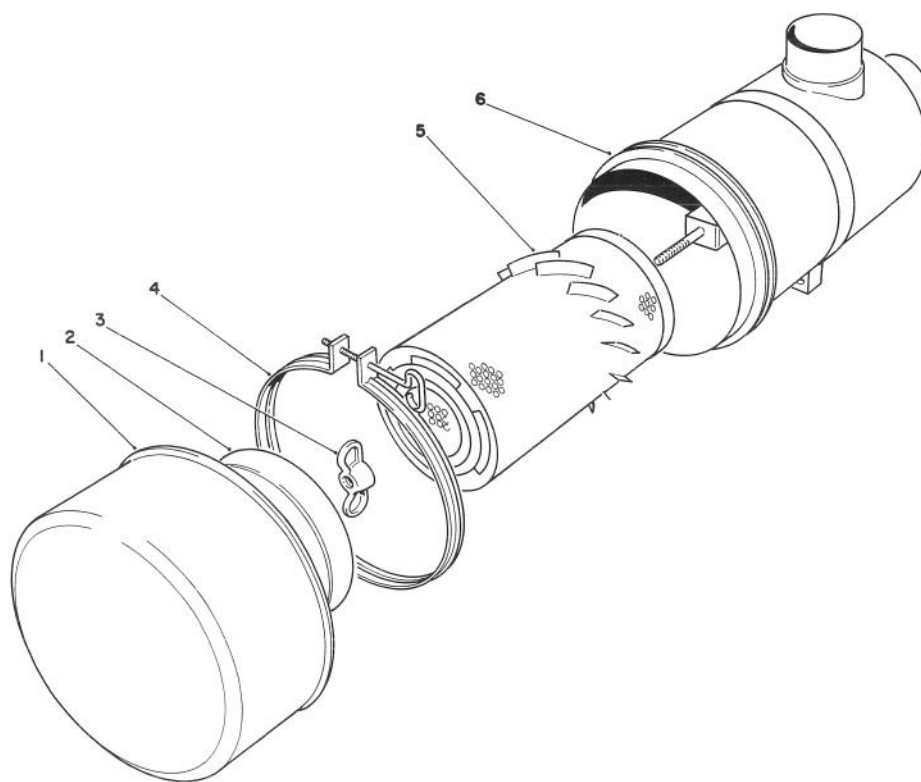

T-0387-90


AIR CLEANER ASSEMBLY NO. 69-1890

Ref. No.	Part No.	Description	No. Used
1	69-1930	Cup Assembly	1
2	69-1920	Baffle	1
3	27-7120	Nut	1
4	69-1910	Clamp Assembly	1

Ref. No.	Part No.	Description	No. Used
5	69-1900	Element Assembly	1
†6		Housing	1
*	27-7220	Detergent - Element	1

*Not Illustrated

†Not Serviceable

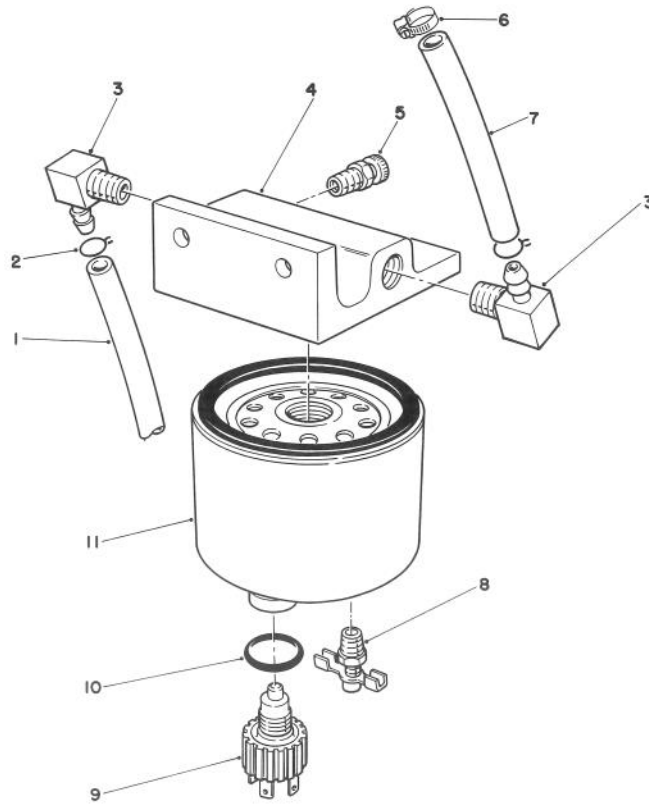


T-0376-90

FUEL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	37-9560	Hose - Fuel	1
2	2412-6	Clamp - Hose	2
3	353-781	Fitting - Fuel Elbow	2
4	63-8280	Head - Fuel Filter (Incl. Ref. #5)	1
5	63-8290	Vent - Air	1
6	2412-36	Clamp - Hose	1
7	71-2690	Hose - Fuel	1

Ref. No.	Part No.	Description	No. Used
8	63-8310	Valve - Drain	1
9	69-1760	Sensor - Water	1
10	237-154	Seal - O-Ring	1
11	69-1770	Element - Spin-On (Incl. Ref. #6)	1
*	69-1750	Fuel Filter Assembly (Incl. Ref. #4, 5 & 8-11)	1

*Not Illustrated

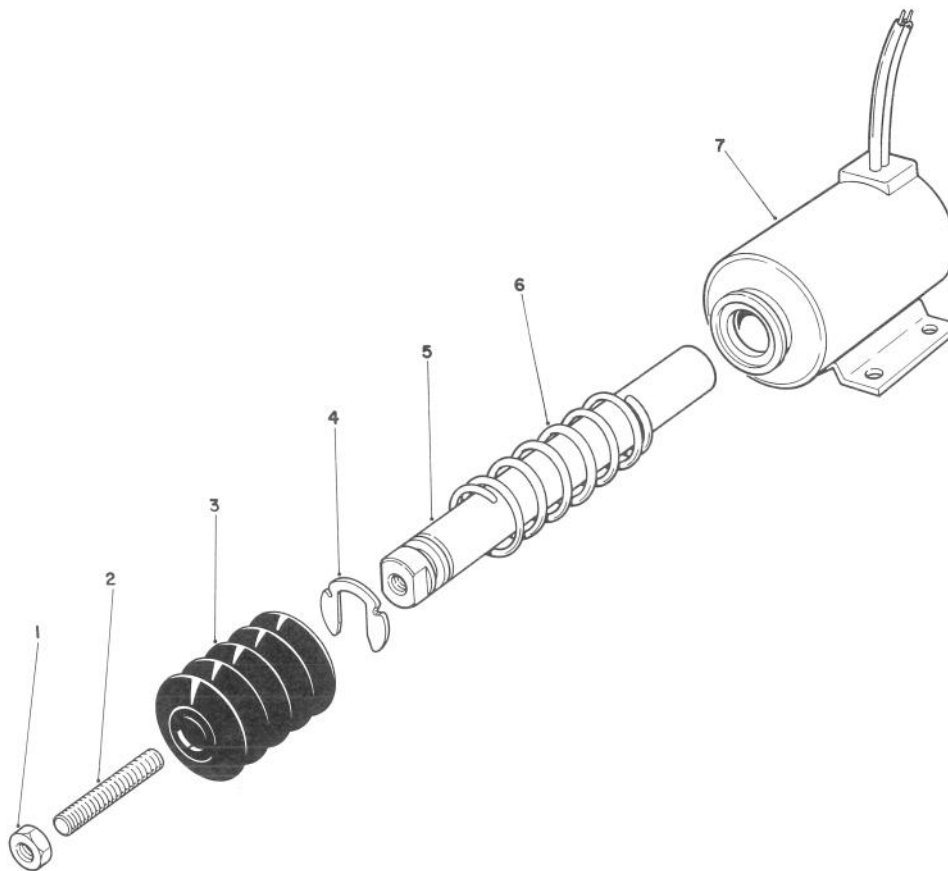


SOLENOID VALVE NO. 69-4330

T-0375-90

Ref. No.	Part No.	Description	No. Used
1	3220-1	Nut - Jam	1
2	69-4370	Stud - Threaded	1
3	69-4360	Boot - Rubber	1
4	69-4350	Ring - Retaining	1
5		Plunger - Solenoid	1

Ref. No.	Part No.	Description	No. Used
6	69-4340	Spring - Return	1
7		Body - Solenoid	1
*	69-4330	Solenoid Valve Assembly (Incl. Ref. #1-7)	1

*Not Illustrated

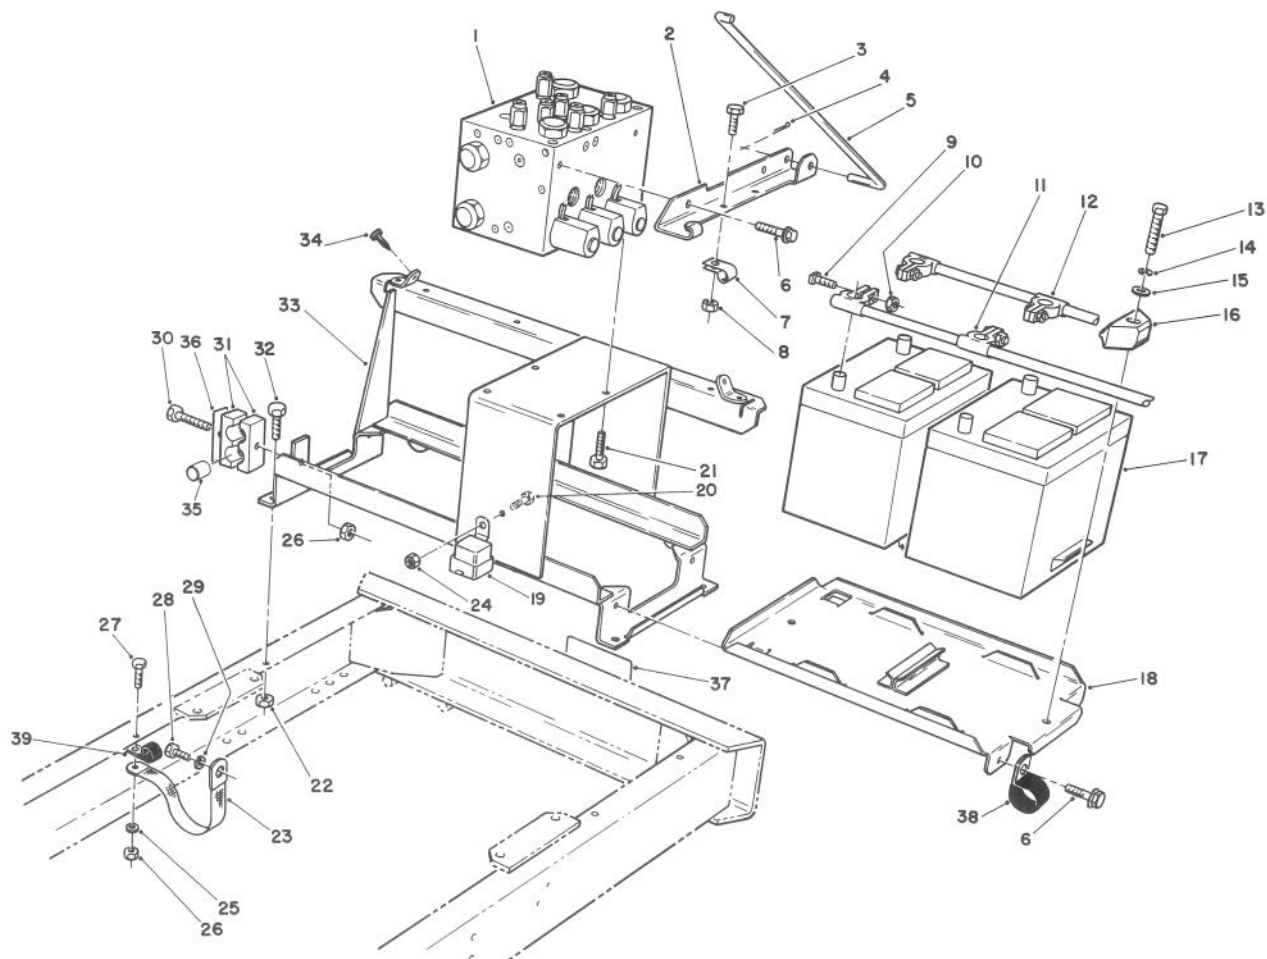


T-0346A

BATTERY FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-4150	PTO Manifold Assembly	1	21	323-4	Screw - Cap Hex. Hd.	4
2	69-9350	Bracket - Hood Prop Rod	1	22	32152-2	Nut - Lock	4
3	321-3	Screw - Cap Hex. Hd.	3	23	18-2770	Strap - Ground	1
4	3272-6	Pin - Cotter	1	24	3296-2	Nut - Flange Lock	1
5	69-9120	Rod - Hood Prop	1	25	3254-2	Washer - Lock	1
6	3234-17	Screw - Hex. Flange Hd.	4	26	32152-1	Nut - Lock	2
7	2412-73	Clamp - R	3	27	322-5	Screw - Cap Hex Hd.	1
8	32149-2	Nut - Keps	3	28	69-0060	Screw - Cap Hex. Hd.	1
†9		Bolt - Clamp	4	29	48-8070	Washer - Lock	1
†10		Nut - Clamp	4	30	322-11	Screw - Cap Hex. Hd.	1
11	80-0130	Cable - Negative	1	31	56-7974	Clamp - Hydraulic Lines	2
12	80-0120	Cable - Positive	1	32	323-6	Screw - Cap Hex. Hd.	4
13	323-8	Screw - Cap Hex. Hd.	2	33	69-8290	Frame - Battery	1
14	3253-21	Washer - Lock	2	34	237-37	Bumper - Rubber	4
15	3256-24	Washer - Flat	2	35	23-7250	Spacer	1
16	66-2490	Hold-Down - Battery	2	36	69-9761	Plate - Clamp	1
‡17		Battery (Type 24, LTV)	2	37	72-4080	Decal - Danger	1
18	80-0160	Tray - Battery	1	38	2412-93	Clamp	2
19	63-7590	Relay	1	39	2412-39	Clamp	1
20	3290-321	Screw - Cap Hex. Hd.	1				

†Not serviceable separately.

‡Obtain Locally

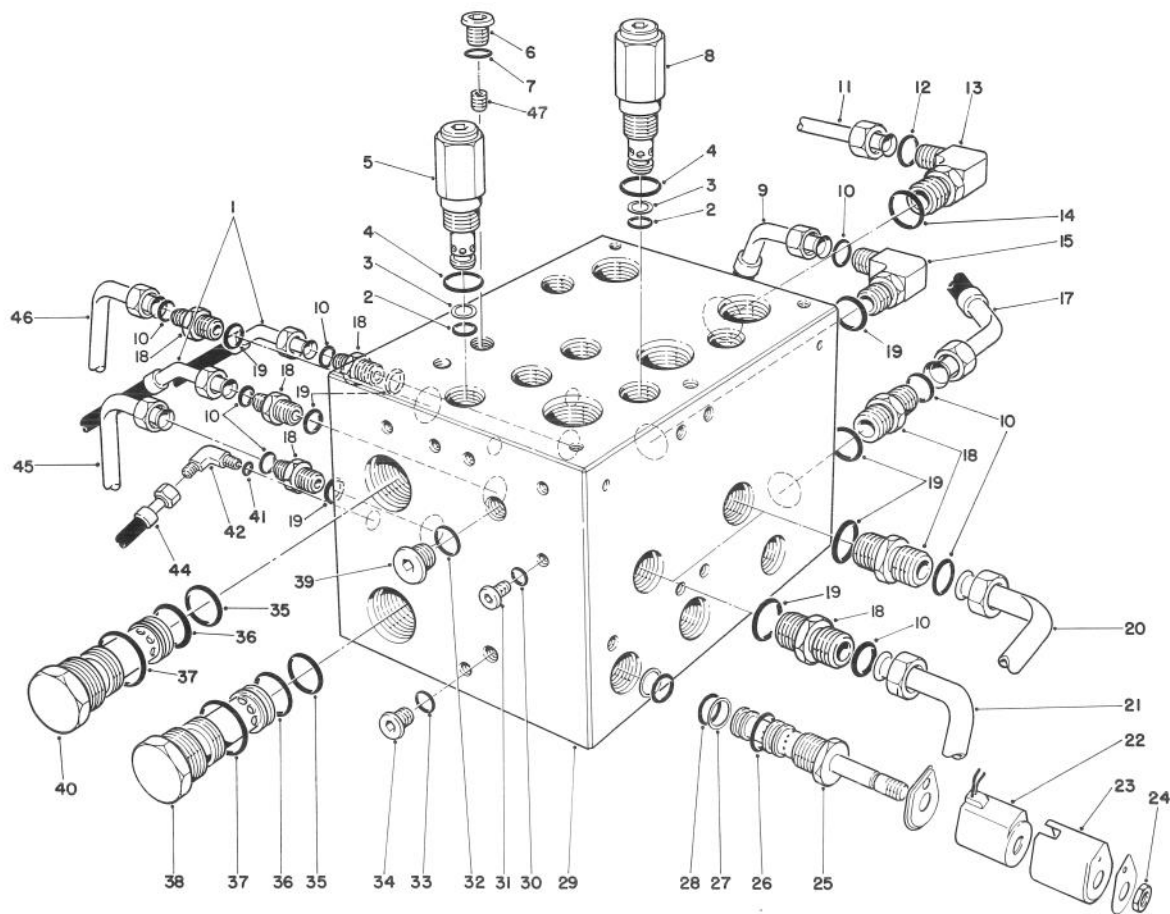


T-0364B

PTO MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-5590	Hose - Hydraulic	2
†2		Seal - O-Ring	6
†3		Seal - Washer	6
†4		Seal - O-Ring	6
5	69-4170	Valve - Cartridge (600 lbs) (Incl. Ref. #2-4)	3
6	353-989	Plug (Incl. Ref. #7)	1
7	237-42	Seal - O-Ring	1
8	69-4180	Valve - Cartridge (3000 lbs) (Incl. Ref. #2-4)	3
9	69-5600	Hose - Hydraulic	1
10	237-58	Seal - O-Ring	8
11	69-6160	Tube - Hydraulic	1
12	340-65	Seal - O-Ring	2
13	340-129	Fitting - Hydraulic Elbow (Incl. Ref. #12 & 14)	1
14	237-146	Seal - O-Ring	1
15	340-142	Fitting - Hydraulic Elbow (Incl. Ref. #10 & 16)	1
17	69-5610	Hose - Hydraulic	1
18	340-9	Fitting - Hydraulic Straight (Incl. Ref. #10 & 19)	7
19	237-81	Seal - O-Ring	8
20	69-6180	Tube - Hydraulic	1
21	69-6170	Tube - Hydraulic	1
22	69-4290	Coil - Solenoid Valve (Incl. Ref. #24)	3

Ref. No.	Part No.	Description	No. Used
23	69-4210	Solenoid Valve Assembly (Incl. Ref. #22, 24-28)	3
24	69-4300	Nut - Jam	3
†25		Spool - Solenoid Valve	3
†26		Seal - O-Ring	3
†27		Seal - Washer	6
†28		Seal - O-Ring	6
29	69-4160	Manifold - PTO	1
30	237-156	Seal - O-Ring	30
31	353-991	Plug (Incl. Ref. #30)	30
32	237-79	Seal - O-Ring	4
33	237-78	Seal - O-Ring	1
34	353-990	Plug (Incl. Ref. #33)	1
†35		Seal - O-Ring	6
†36		Seal - O-Ring	6
†37		Seal - O-Ring	6
38	69-4200	Valve - Cartridge (75 lbs) (Incl. Ref. #35-37)	3
39	353-988	Plug (Incl. Ref. #32)	4
40	69-4190	Valve - Cartridge (20 lbs) (Incl. Ref. #35-37)	3
41	237-78	Seal - O-Ring	2
42	353-431	Fitting - Hydraulic 45° Elbow (Incl. Ref. #41 & 43)	2
44	69-5662	Hose - Diagnostic	2
45	69-6140	Tube - Hydraulic	1
46	69-6150	Tube - Hydraulic	1

†Not serviceable separately.

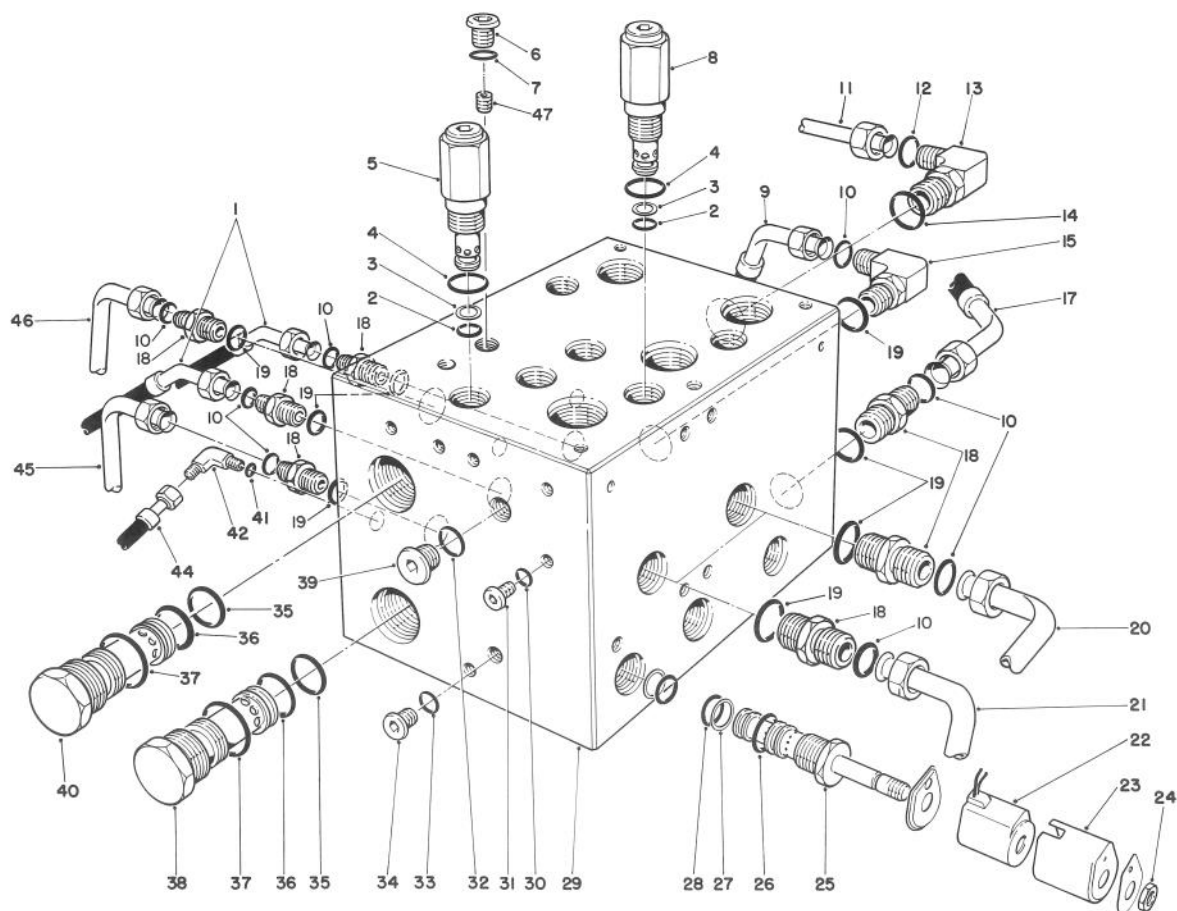


T-0364A-90

PTO MANIFOLD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
47	69-4220	Plug - Orifice	1	*	69-4260	Solenoid Valve Seal Kit (Incl. Ref. #26-28)	3
*	69-4230	Cartridge Valve Seal Kit (Incl. Ref. #2-4)	6	*	69-4150	PTO Manifold Assembly (Incl. Ref. #2-8, 22-40 & 47)	1
*	69-4270	Cartridge Valve Seal Kit (Incl. Ref. #35-37)	6				

*Not Illustrated

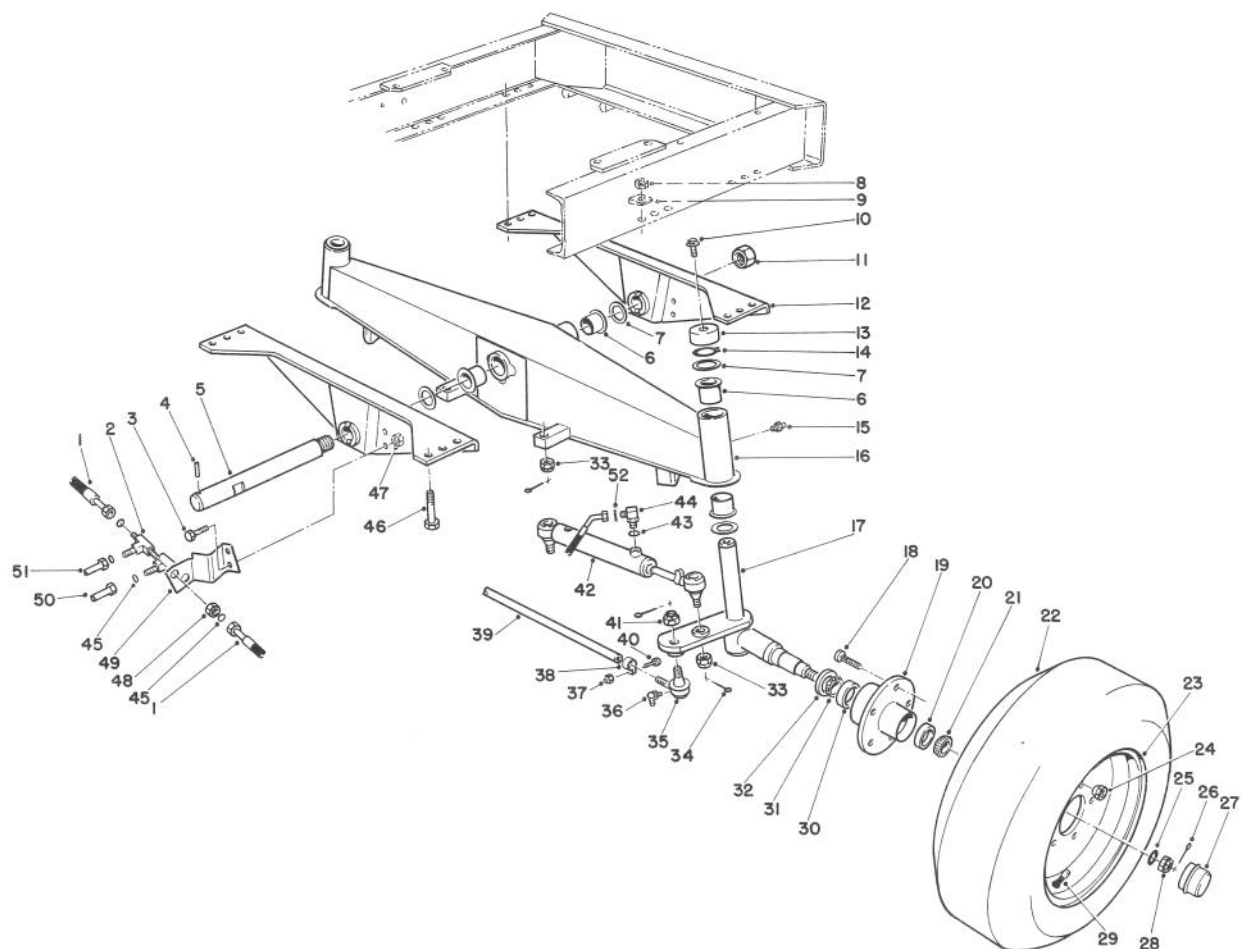

T-0345-90


REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-5510	Hose - Hydraulic	4
2	340-68	Fitting - Hydraulic Bulkhead Tee (Incl. Ref. #45)	2
3	323-6	Screw - Cap Hex. Hd.	2
4	32121-110	Pin - Roll	1
5	71-2590	Shaft - Pivot	1
6	69-6470	Bushing - Flange	6
7	256-304	Washer - Thrust	6
8	32128-23	Nut - Lock	12
9	3290-216	Washer - Bevel	12
10	3234-12	Screw - Hex. Flange Hd.	2
11	3296-68	Nut - Lock	1
12	69-7960	Support - Axle	2
13	69-8890	Cap - Spindle	2
14	32151-10	Ring - Retaining	2
15	302-5	Fitting - Grease	3
16	69-7420	Axle - Rear (Incl. Ref. #6 & 15)	1
17	69-7370	Spindle - Wheel L.H.	1
*	69-7360	Spindle - Wheel R.H.	1
18	69-2990	Screw - Drive	10
19	69-2960	Hub - Rear Wheel (Incl. Ref. #18, 20 & 30)	2
20	254-72	Cup - Bearing Outer	2
21	254-92	Cone - Bearing Outer	2
22	69-9880	Tire	2
23	217-116	Rim	2

Ref. No.	Part No.	Description	No. Used
24	23-7270	Nut - Lug	10
25	49-0010	Washer	2
26	3272-13	Pin - Cotter	2
27	69-2970	Cap - Hub	2
28	32136-5	Nut - Castle	2
29	232-27	Stem - Valve	2
30	254-107	Cup - Bearing Inner	2
31	254-106	Cone - Bearing Inner	2
32	69-2980	Seal - Inner	2
33	32136-13	Nut - Castle	4
34	3272-12	Pin - Cotter	6
35	2116-4	Joint - Ball R.H.	1
*	2116-3	Joint - Ball L.H.	1
36	302-33	Fitting - Grease	2
†37		Nut - Lock	2
38	2412-7	Clamp Assembly (Incl. Ref. #37 & 40)	2
39	3-3710	Tie Rod Assembly (Incl. Ref. #35-41)	1
†40		Screw - Cap Hex. Hd.	2
41	32136-2	Nut - Castle	2
42	69-1960	Cylinder - Steering	2
43	237-78	Seal - O-Ring	4
44	340-132	Fitting - Hydraulic Elbow (Incl. Ref. #43 & 52)	4
45	237-22	Seal - O-Ring	6
46	325-6	Screw - Cap Hex. Hd.	12

*Not Illustrated

†Not serviceable separately.

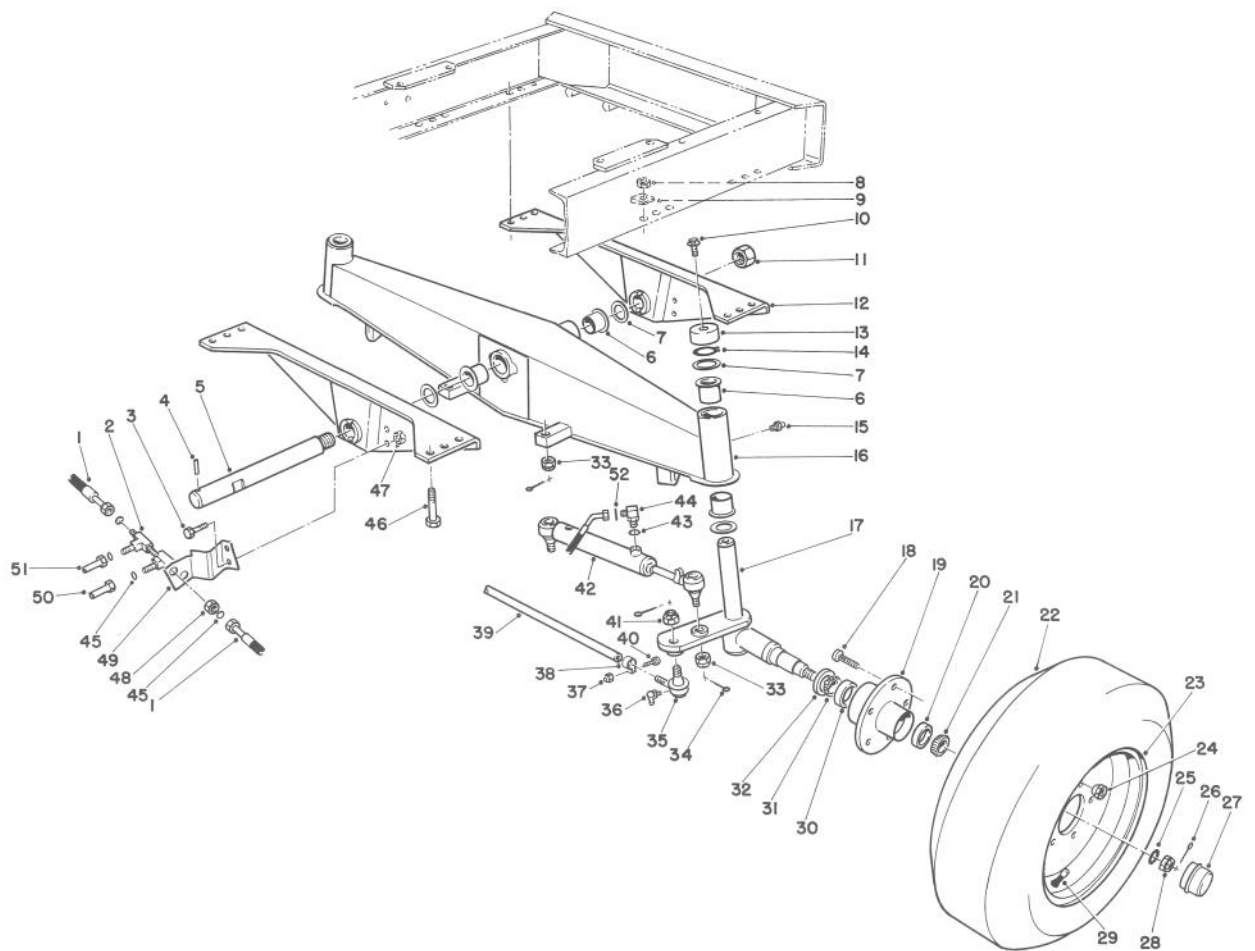


T-0345-90

REAR AXLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	32152-2	Nut - Lock	2
48	340-70	Nut - Bulkhead	2
49	69-9400	Bracket - Hose Support	1

Ref. No.	Part No.	Description	No. Used
50	69-6010	Tube - Hydraulic	1
51	69-6020	Tube - Hydraulic	1
52	237-21	Seal - O-Ring	4

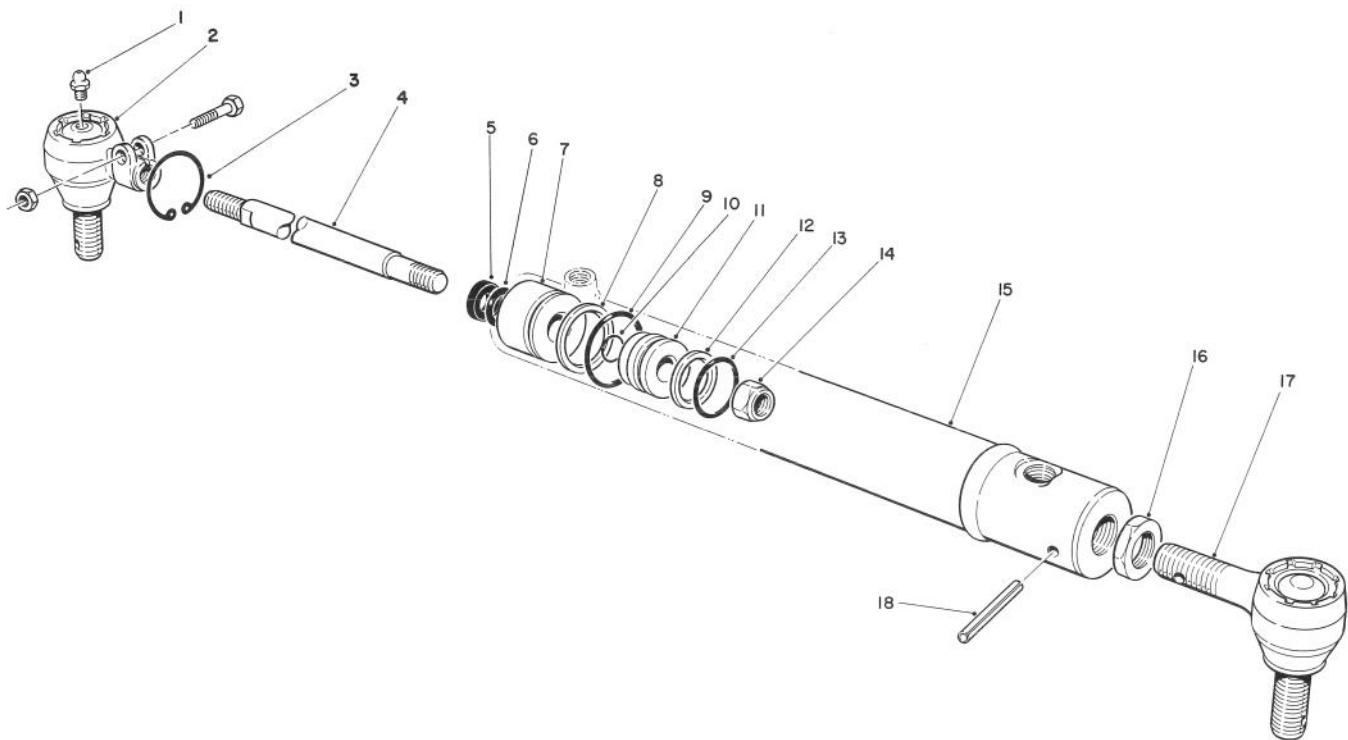


T-0378-90

HYDRAULIC STEERING CYLINDER

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting - Grease	1
2	69-9810	Joint - Ball	1
3		Ring - Retaining	1
4	69-2020	Rod - Piston	1
5		Wiper - Rod	1
6		Seal - U-Cup	1
7	69-2030	Ring - Head	1
8		Ring - Back-Up	1
9		Seal - O-Ring	1
10		Seal - O-Ring	1
11	69-2000	Piston	1

Ref. No.	Part No.	Description	No. Used
12		Ring - Piston	1
13		Seal - O-Ring	1
14	69-1990	Nut - Lock	1
15		Barrel - Cylinder	1
16	69-1980	Nut - Jam	1
17	69-1970	Joint - Ball	1
18	32121-34	Pin - Roll	1
*	69-2040	Repair Kit (Incl. Ref. #3, 5, 6, 8-10 & 12-13)	1
*	69-1960	Steering Cylinder (Complete) (Incl. Ref. #3-18)	2


*Not Illustrated

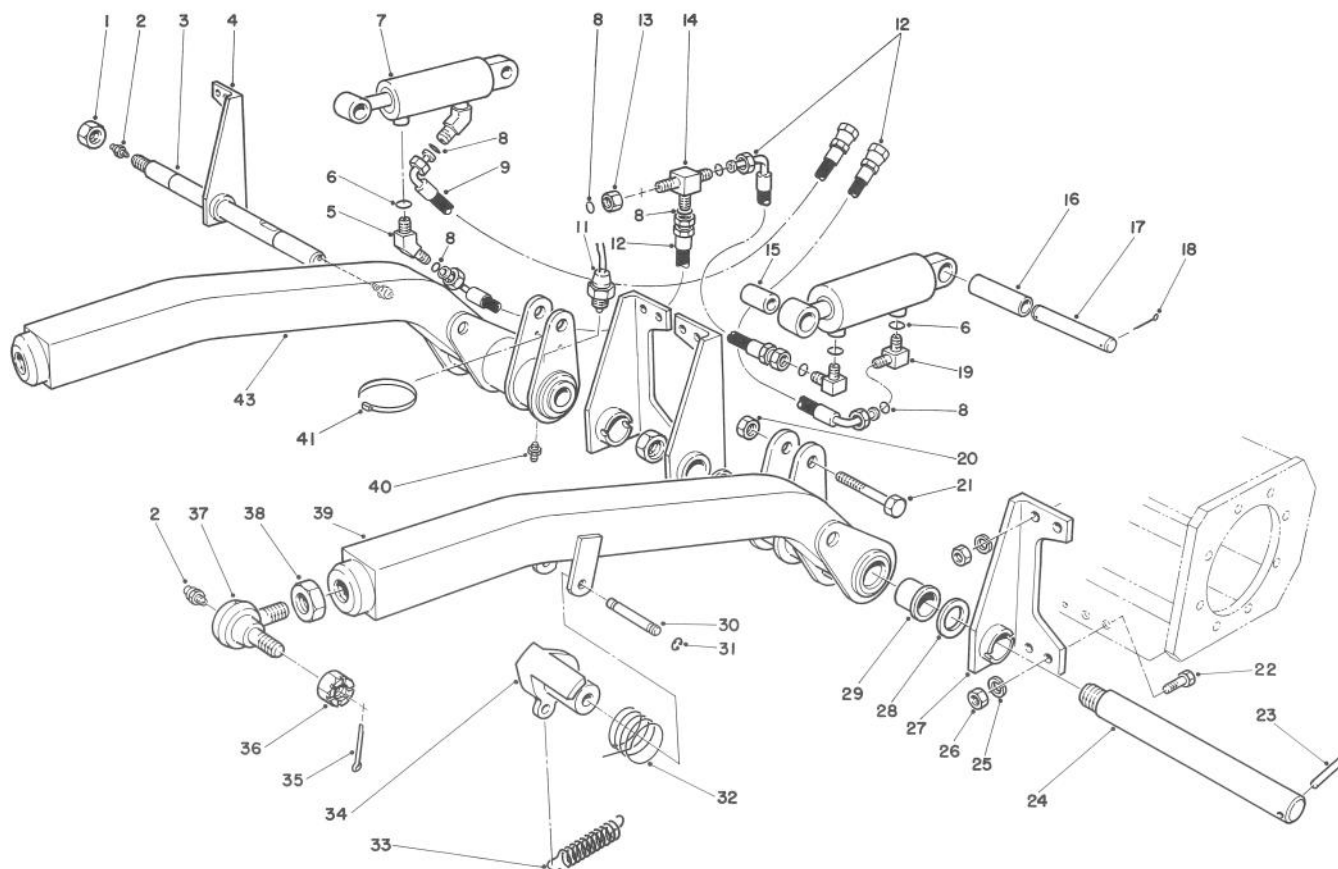

T-0344-90

FRONT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-68	Nut - Lock	2	22	325-6	Screw - Cap Hex. Hd.	12
2	302-2	Fitting - Grease	4	23	32121-110	Pin - Roll	2
3	71-2570	Shaft - Pivot	1	24	71-2590	Shaft - Pivot	1
4	69-7940	Support - Lift Arm R.H.	2	25	3253-7	Washer - Lock	16
5	340-87	Fitting - Hydraulic Elbow (Incl. Ref. #6 & 8)	2	26	3217-9	Nut - Hex.	16
6	237-42	Seal - O-Ring	4	27	69-7920	Support - Lift Arm L.H.	2
7	69-2180	Cylinder - Hydraulic	2	28	256-304	Washer - Thrust	2
8	237-22	Seal - O-Ring	7	29	69-6470	Bushing - Flange	4
9	69-8440	Hose - Hydraulic	1	30	69-9080	Pin - Latch	1
11	72-4310	Switch - Ball	1	31	32120-47	Ring - Retaining	2
12	69-5440	Hose - Hydraulic	3	32	69-8470	Spring - Torsion	1
13	340-70	Nut - Bulkhead	1	33	76-1670	Spring - Extension	1
14	340-68	Fitting - Hydraulic Bulk. Tee (Incl. Ref. #8)	1	34	69-1540	Pivot - Spring	1
15	69-9190	Tube - Cylinder Bushing	2	35	3272-12	Pin - Cotter	2
16	20-4360	Tube - Spacer	2	36	32136-2	Nut - Slotted	2
17	69-9180	Pin - Cylinder	2	37	21-0160	Joint - Ball (Incl. Ref. #36)	2
18	3272-23	Pin - Cotter	4	38	21-3000	Nut - Jam	2
19	340-77	Fitting - Hydraulic Elbow (Incl. Ref. #6 & 8)	2	39	69-9580	Front Lift Arm Assy. L.H. (Incl. Ref. #29 & 40)	1
20	32153-6	Nut - Lock	2	40	302-5	Fitting - Grease	2
21	328-10	Screw - Cap Hex. Hd.	2	41	3290-378	Tie - Cable	1
				43	69-9570	Front Lift Arm Assy. R.H. (Incl. Ref. #29 & 40)	1

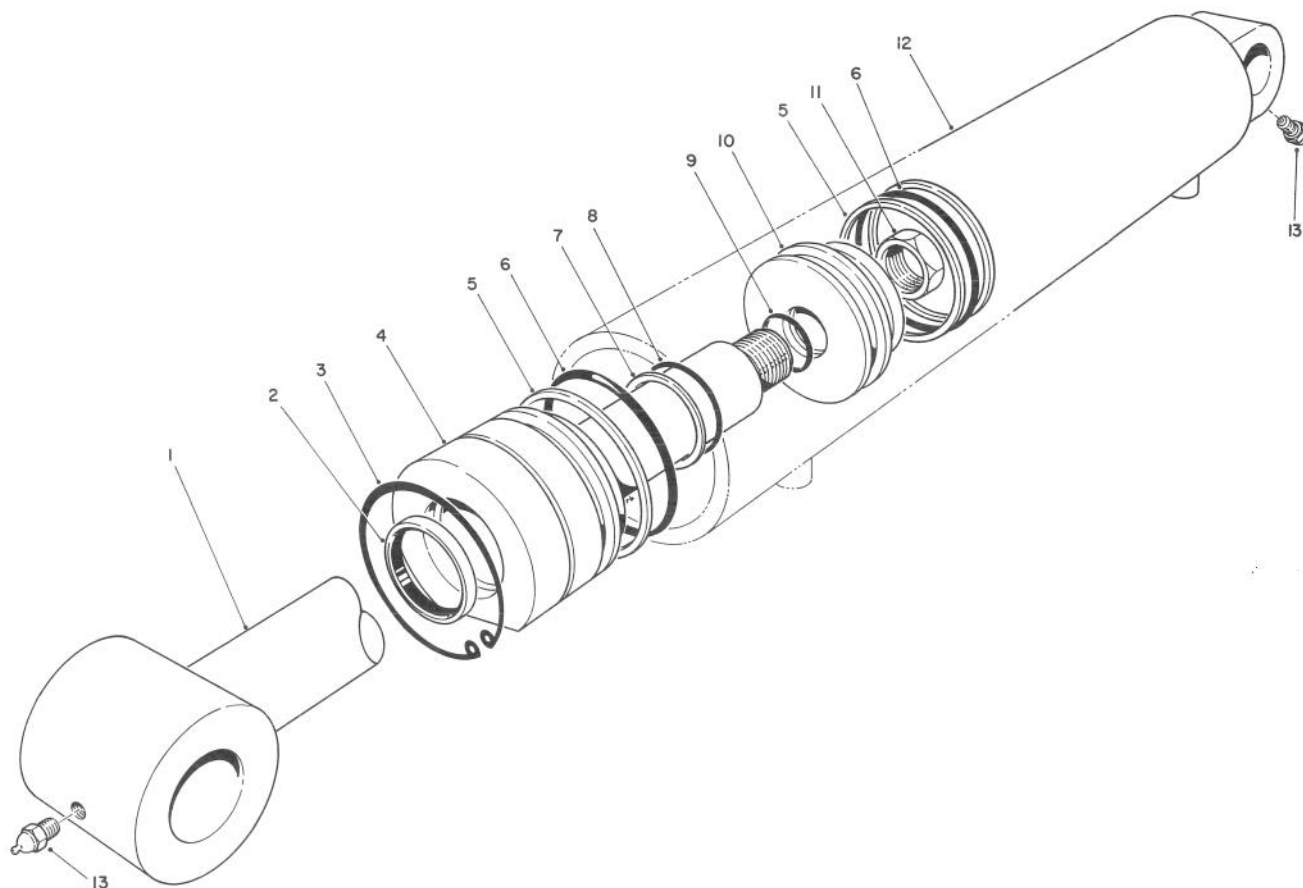

T-0380-90


HYDRAULIC CYLINDER ASSEMBLY NO. 69-2180

Ref. No.	Part No.	Description	No. Used
1	69-2580	Shaft w/clevis	1
†2		Seal - Dust	1
3	61-4990	Ring - Retaining	1
4	69-2570	Head	1
†5		Ring - Back-Up	3
†6		Seal - O-Ring	2
†7		Ring - Back-Up	1
†8		Seal - O-Ring	1

Ref. No.	Part No.	Description	No. Used
†9		Seal - O-Ring	1
10	60-9770	Piston	1
11	60-9760	Nut - Lock	1
†12		Barrel	1
13	302-5	Fitting - Grease	2
*	69-2620	Seal Repair Kit (Incl. Ref. #2 & 5-9)	1

*Not Illustrated

†Not serviceable separately.

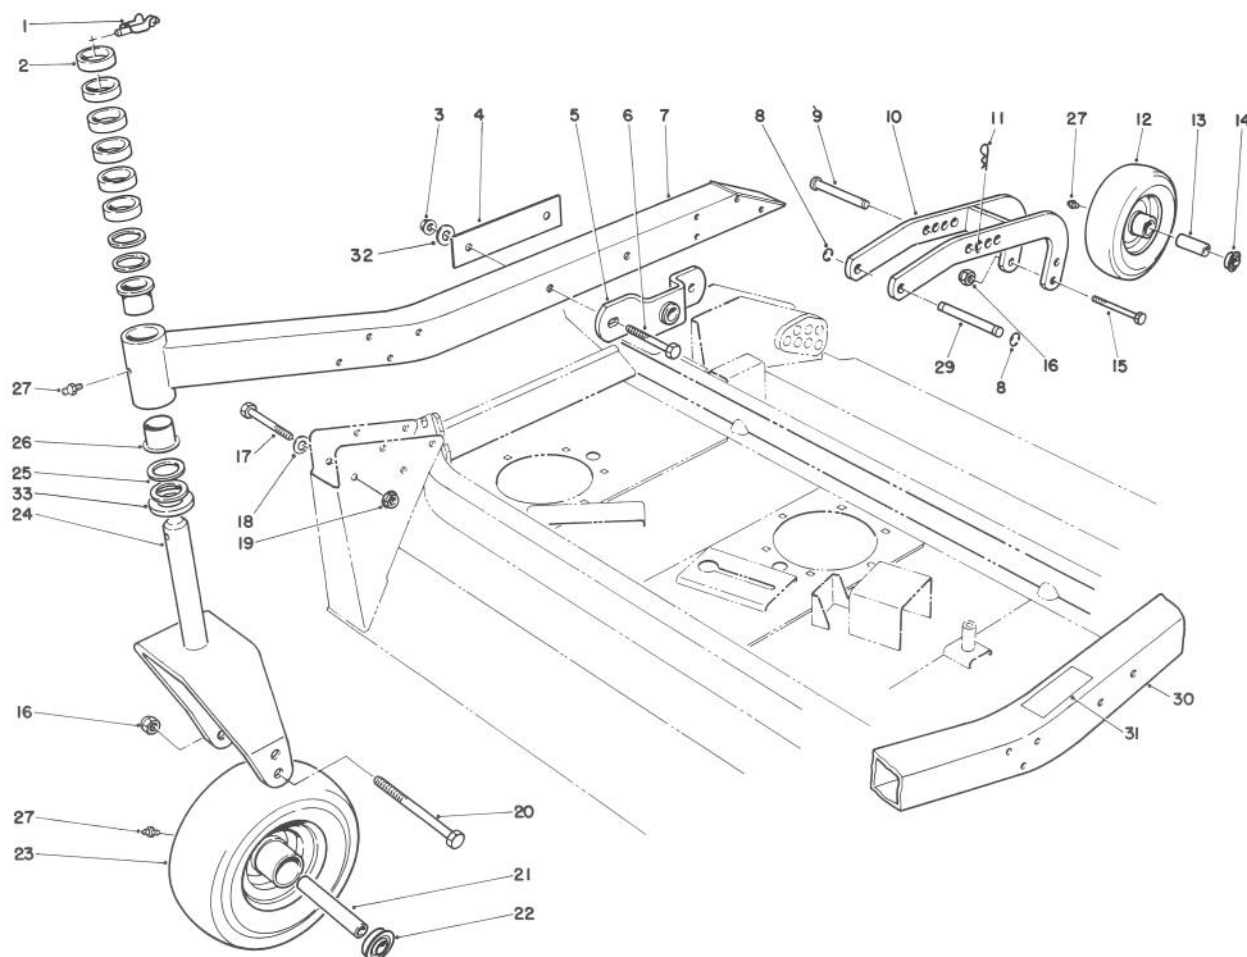


T-0362A-90

CENTER DECK MODEL NO. 30592 CARRIER FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290-384	Pin - Lynch	2
2	69-1510	Spacer - Caster	12
3	32128-23	Nut - Flange Lock	4
4	69-8790	Plate - Reinforcing	2
5	69-7290	Mount - Ball Joint	2
6	325-15	Screw - Cap Hex. Hd.	4
7	69-8860	Arm - Castor R.H. (Incl. Ref. #26-27)	1
8	32151-48	Ring - Retaining	4
9	283-70	Pin - Hitch (Incl. Ref. #11)	2
10	75-9790	Arm - Pivot	2
11	3290-343	Pin - Cotter Hair	2
12	69-6930	Castor Wheel Assembly (Incl. Ref. #13-14, & 27)	2
13	251-332	Spacer Bearing	2
14	251-321	Bearing - Castor	4
15	327-17	Screw Cap Hex. Hd.	2
16	3296-53	Nut - Lock	4

Ref. No.	Part No.	Description	No. Used
17	323-15	Screw - Cap Hex. Hd.	16
18	5-0838	Washer - Flat	16
19	32128-43	Nut - Lock	16
20	327-25	Screw - Cap Hex. Hd.	2
21	251-333	Spacer - Bearing	2
22	251-321	Bearing - Castor	4
23	69-6940	Castor Wheel Assembly (Incl. Ref. #21-22, & 27)	2
24	75-9650	Fork - Castor	2
25	69-6860	Washer - Castor	8
26	69-6470	Bushing - Flange	4
27	302-5	Fitting - Grease	6
29	69-9260	Pin - Clevis	2
30	13-5069	Arm - Castor L.H. (Incl. Ref. #26-27, & 31)	1
31	69-0880	Decal - Torque	1
32	30-8770	Washer - Flat	2
33	77-0950	Washer - Castor	2

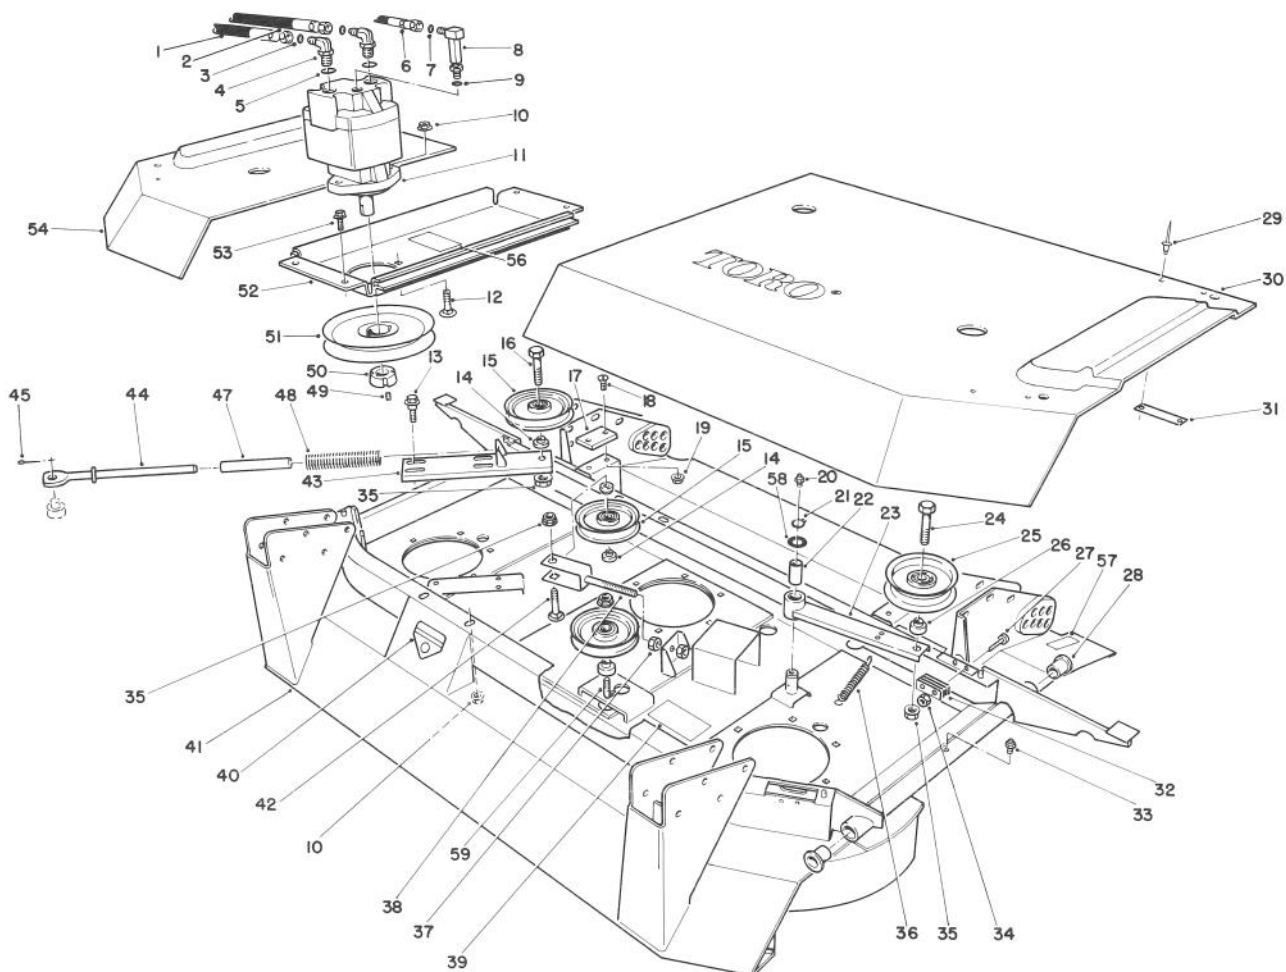


T-0361B

CENTER DECK MODEL NO. 30592

Ref. No.	Part No.	Description	No. Used
1	76-2760	Hydraulic Hose Assembly	1
2	76-2750	Hydraulic Hose Assembly	1
3	237-58	Seal - O-Ring	2
4	340-142	Fitting - Hydraulic Elbow (Incl. Ref #3 & 5)	2
5	237-81	Seal - O-Ring	2
6	76-2770	Hydraulic Hose Assembly	1
7	237-22	Seal - O-Ring	1
8	69-4320	Fitting - Hydraulic 90° Elbow (Incl. Ref. #7 & 9)	1
9	237-42	Seal O-Ring	1
10	32128-21	Nut - Flange Lock	6
11	69-2780	Motor - Hydraulic	1
12	3231-28	Bolt - Carriage	2
13	19-1470	Bolt - Shoulder	4
14	69-6960	Spacer - Idler	4
15	63-1540	Pulley - Idler	3
16	325-7	Screw - Cap Hex. Hd.	1
17	69-9290	Pad - Bumper	2
18	32108-103	Screw - Flat Hd.	4
19	32128 -20	Nut - Lock	4
20	302-2	Fitting - Grease	1
21	32120-72	Ring - Retaining	1
22	256-188	Bushing - Sleeve	1
23	69-6610	Arm - Idler (Incl. Ref. #22)	1
24	325-8	Screw - Cap Hex. Hd.	1
25	69-5430	Pulley-Idler	1

Ref. No.	Part No.	Description	No. Used
26	69-6970	Spacer - Idler	1
27	32105-1	Screw - Machine	8
28	256-117	Bushing - Flange	4
29	3269-25	Rivet - Pop	8
30	69-6780	Cover - Center Left	1
31	69-6870	Plate - Magnet	4
32	69-6260	Magnet - Cover	4
33	302-5	Fitting - Grease	2
34	3296-2	Nut - Lock	8
35	32128-23	Nut - Flange Lock	4
36	76-1670	Spring - Extension	1
37	3217-9	Nut - Jam	2
38	69-6550	Arm - Tension	1
39	82-2560	Decal - Belt Routing	1
40	43-8480	Decal - Danger	1
41	13-4969	Deck - Center (Incl. Ref. #20, 28, 33, 39, 40 & 57)	1
42	3233-27	Bolt - Carriage	1
43	69-6490	Plate - Tension	1
44	77-2830	Rod - Spring	1
45	3272-7	Pin - Cotter	1
47	69-6890	Spacer - Spring	1
48	69-9270	Spring - Compression	1
49		Screw - Set	2

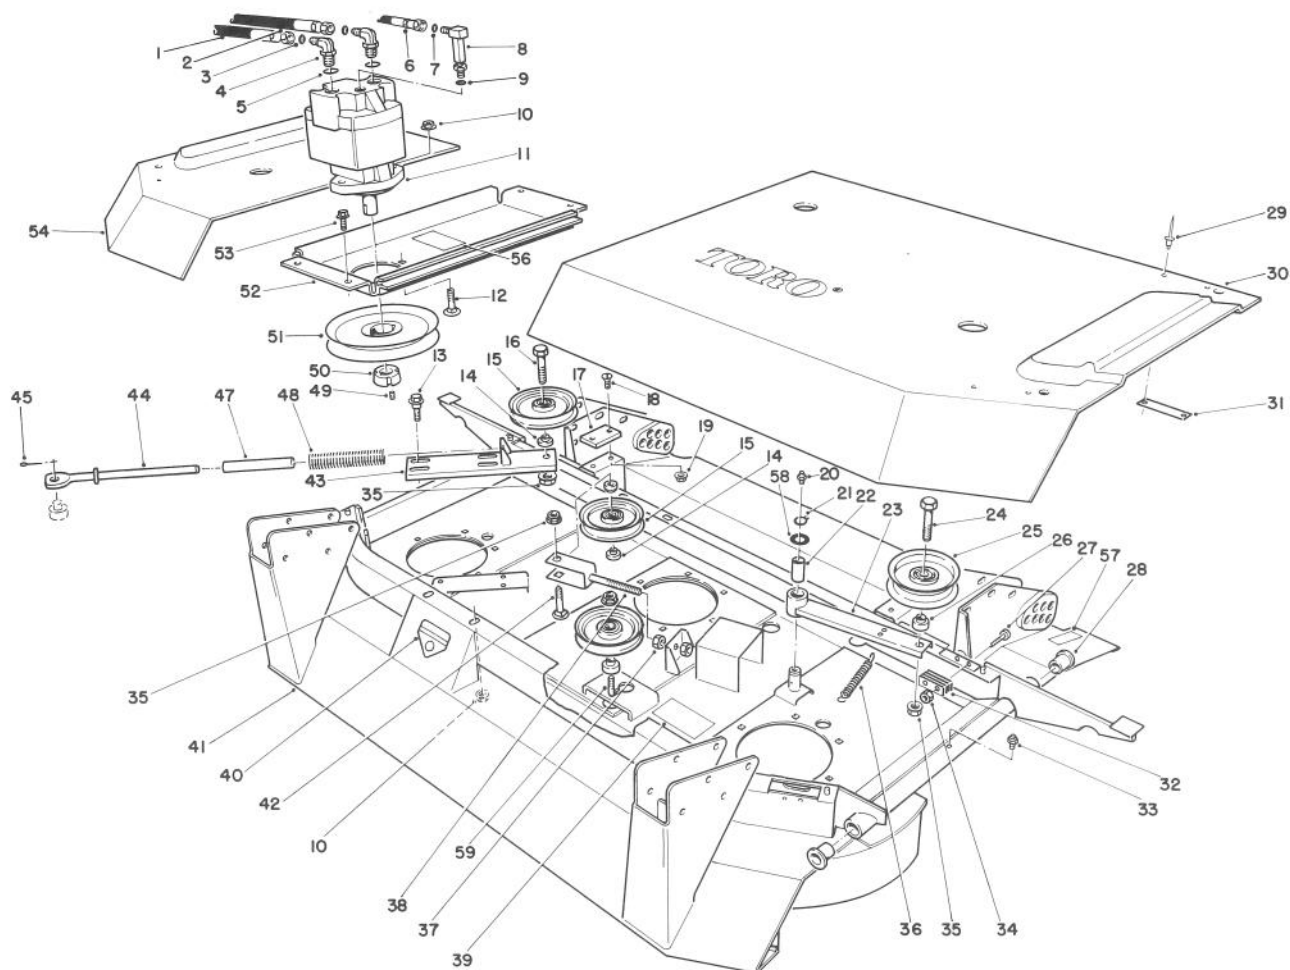


T-0361A

CENTER DECK MODEL NO. 30592 (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
50	23-1640	Bushing - Taper Lock (Incl. Ref. #49)	1	56	71-4260	Decal - H.O.C.	1
51	63-0660	Pulley - Drive	1	57	69-0820	Decal - H.O.C.	1
52	69-6390	Plate - Gearbox	1	58	3-6498	Washer - Flat	1
53	3234-12	Screw - Hex. Flange Hd.	4	59	3233-30	Bolt - Carriage	1
54	69-6790	Cover - Center Right	1	*	69-6220	Hex.-Belt - Deck Drive	1
				*	3290-378	Tie - Cable	2

*Not Illustrated

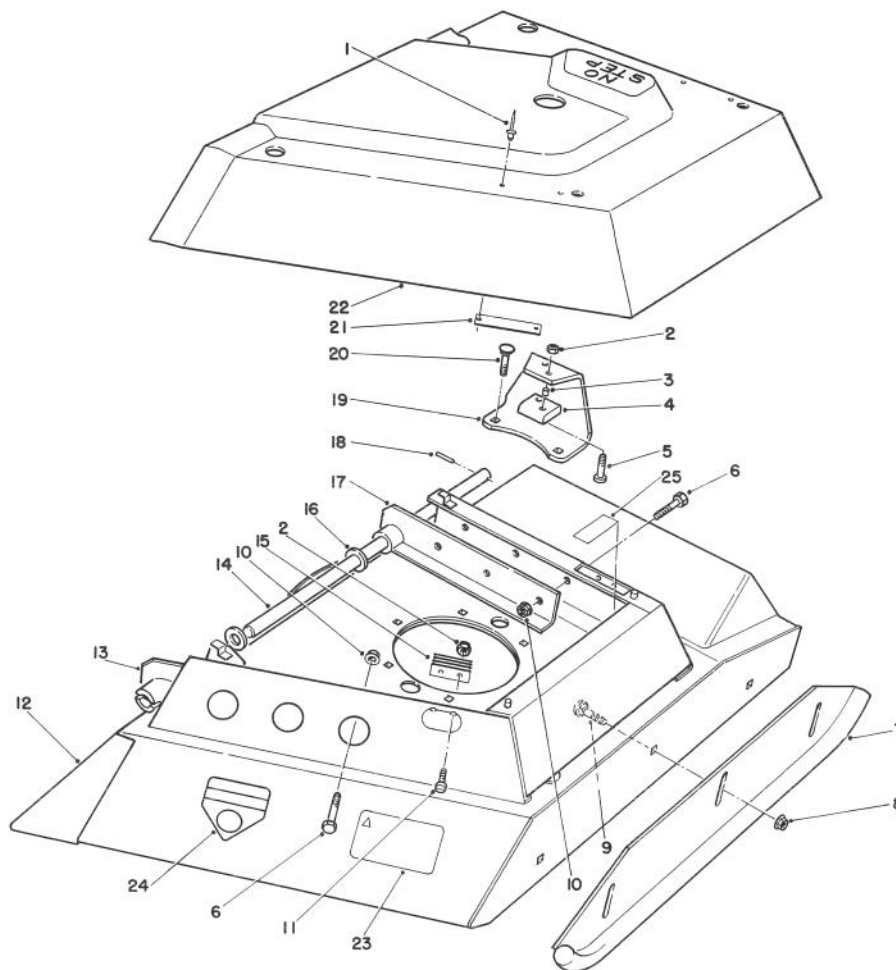


T-0366-90

CENTER DECK MODEL NO. 30592 LEFT WING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3269-25	Rivet - Pop	4
2	3296-2	Nut - Lock	6
3	40-9520	Spacer - Split	2
4	40-0330	Cushion - Rubber	1
5	3250-27	Screw - Truss Hd.	2
6	323-6	Screw - Cap Hex. Hd.	6
7	69-6730	Skid	1
8	32128-23	Nut - Flange Lock	3
9	3233-9	Bolt - Carriage	3
10	32128-21	Nut - Flange Lock	6
11	32105-1	Screw - Machine	4
12	13-4989	Deck - Left Wing (Incl. Ref. #23-25)	1
13	69-6640	Hinge - Left Front	1

Ref. No.	Part No.	Description	No. Used
14	69-6900	Shaft - Hinge	1
15	69-6260	Magnet - Cover	2
16	256-305	Washer - Thrust	2
17	69-6670	Hinge - Left Rear	1
18	32121-6	Pin - Roll	2
19	69-6910	Bracket - Support	1
20	3231-25	Bolt - Carriage	2
21	69-6870	Plate - Magnet	2
22	69-6850	Cover - Left Wing	1
23	66-1340	Decal - Danger	1
24	43-8480	Decal - Danger	1
25	67-5360	Decal - Danger	1
*	76-2060	V-Belt	1
*	42-6200	Shim - Cushion	A/R

*Not Illustrated

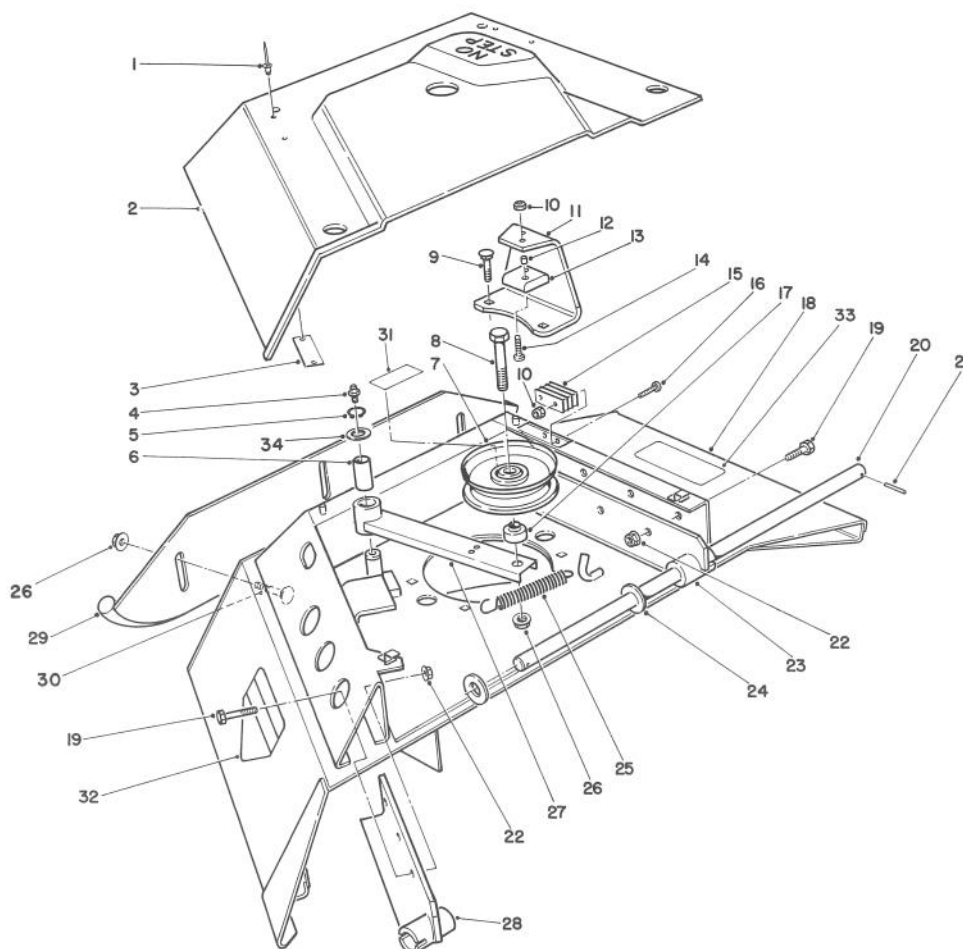


T-0365-90

CENTER DECK MODEL NO. 30592 RIGHT WING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3269-25	Rivet - Pop	4	19	323-6	Screw - Cap Hex. Hd.	6
2	69-6840	Cover - Right Wing	1	20	69-6900	Shaft - Hinge	1
3	69-6870	Plate - Magnet	2	21	32121-6	Pin - Roll	2
4	302-2	Fitting - Grease	1	22	32128-21	Nut - Flange Lock	6
5	32120-72	Ring - Retaining	1	23	69-6710	Hinge - Right Rear	1
6	256-188	Bushing - Sleeve	1	24	256-305	Washer - Thrust	2
7	69-5430	Pulley - Idler	1	25	76-1670	Spring - Extension	1
8	325-8	Screw - Cap Hex. Hd.	1	26	32128-23	Nut - Flange Lock	4
9	3231-25	Bolt - Carriage	2	27	69-6610	Arm - Idler (Incl. Ref. #6)	1
10	3296-2	Nut - Lock	6	28	69-6690	Hinge - Right Front	1
11	69-6910	Bracket - Support	1	29	69-6730	Skid	1
12	40-9520	Spacer - Split	2	30	3233-9	Bolt - Carriage	3
13	40-0330	Cushion - Rubber	1	31	67-5360	Decal - anger	1
14	3250-27	Screw - Truss Hd.	2	32	43-8480	Decal - Danger	1
15	69-6260	Magnet - Cover	2	33	66-1340	Decal - Danger	1
16	32105-1	Screw - Machine	4	34	3-6498	Washer	1
17	69-6970	Spacer - Idler	1	*	76-2060	V-Belt	1
18	13-4979	Deck - Right Wing (Incl. Ref. #4, 32 & 33)	1	*	42-6200	Shim - Cushion	A/R

*Not Illustrated

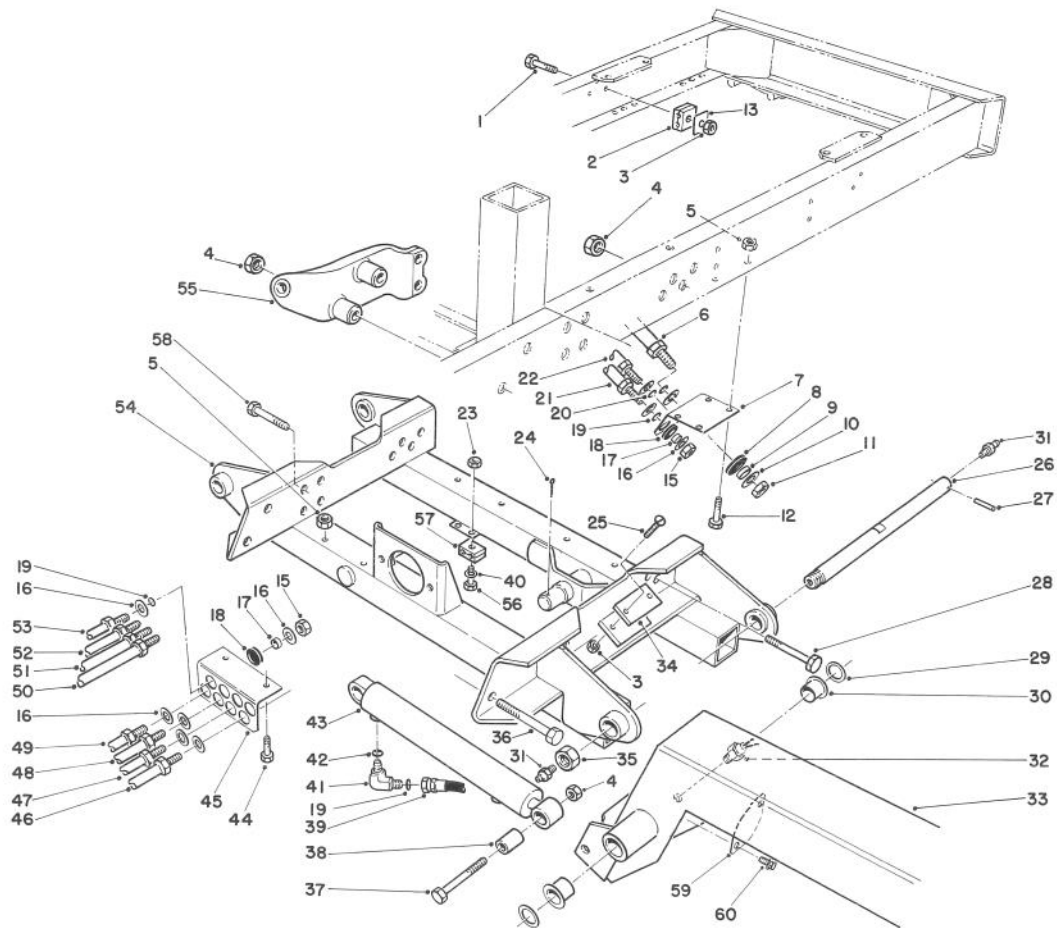


T-0348-90

WING DECK LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	322-11	Screw - Cap Hex. Hd.	1	22	69-6180	Tube - Hydraulic L.H. (Incl. Ref. #20)	1
2	56-7974	Clamp Half - Hydraulic Line	2	*	69-6150	Tube - Hydraulic R.H. (Incl. Ref. #20)	1
3	32152-1	Nut - Lock	5	23	32152-4	Nut Lock	3
4	32153-6	Nut - Lock	22	24	3272-33	Pin - Cotter	2
5	32152-2	Nut - Lock	6	25	32108-103	Screw - Machine Flat Hd.	4
6	69-6170	Tube - Hydraulic L.H. (Incl. Ref. #20)	1	26	71-2580	Shaft - Lift Arm Pivot	2
*	69-6140	Tube - Hydraulic R.H. (Incl. Ref. # 20)	1	27	32121-110	Pin - Roll	2
7	69-9450	Bracket - Wing Hose L.H.	1	28	328-26	Screw - Cap Hex. Hd.	12
*	69-9460	Bracket - Wing Hose R.H.	1	29	256-304	Washer - Thrust	4
8	240-3	Grommet	4	30	69-6470	Bushing - Flange	4
9	69-9000	Spacer	4	31	302-2	Fitting - Grease	4
10	69-9010	Washer	8	32	72-4310	Switch - Lift	2
11	340-74	Nut - Bulkhead	4	33	71-0160	Lift Arm Assembly L.H. (Incl. Ref. #30-31)	1
12	323-6	Screw - Cap Hex. Hd.	4	*	71-0150	Lift Arm Assembly R.H. (Incl. Ref. #30-31)	1
13	69-9761	Plate - Cover	1	34	69-9300	Cushion - Rubber	2
15	340-70	Nut - Bulkhead	10	35	3296-68	Nut Lock	2
16	69-8940	Washer	20	36	328-8	Screw - Cap Hex. Hd.	4
17	69-8970	Spacer	10	37	328-10	Screw - Cap Hex. Hd.	2
18	240-4	Grommet	10	38	69-9190	Bushing - Cylinder	2
19	237-22	Seal - O-Ring	14	39	69-5490	Hose - Cylinder	4
20	237-65	Seal - O-Ring	4	40	3256-56	Washer - Flat	3
21	69-5980	Tube - Hydraulic L.H. (Incl. Ref. #19)	1	41	340-77	Fitting - Hydraulic Elbow (Incl. Ref. #19 & 42)	4
*	69-5970	Tube - Hydraulic R.H. (Incl. Ref #19)	1				

*Not Illustrated

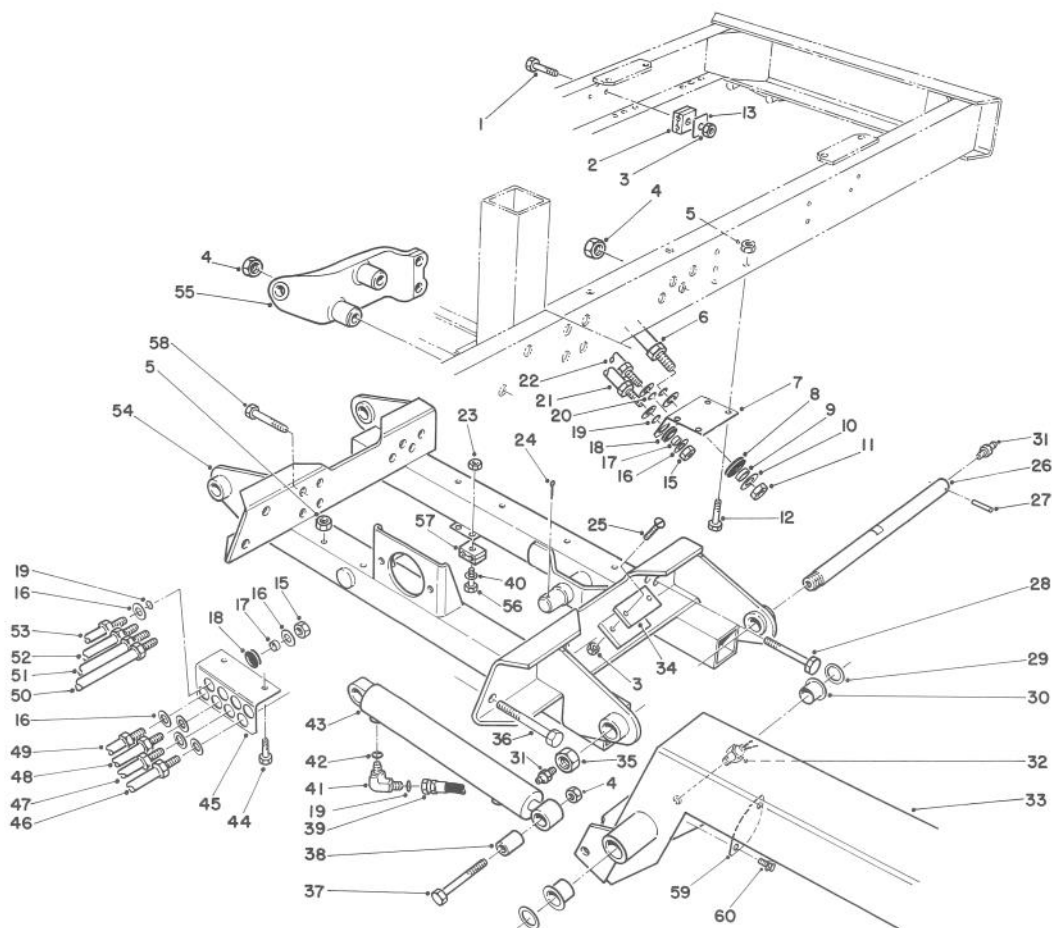


T-0348-90

WING DECK LIFT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
42	237-42	Seal - O-Ring	4	51	69-6050	Tube - Hydraulic (Incl. Ref. #19)	1
43	74-2170	Cylinder - Lift	2	52	69-6080	Tube - Hydraulic (Incl. Ref. #19)	1
44	323-15	Screw - Cap Hex. Hd.	2	53	69-5990	Tube - Hydraulic (Incl. Ref. #19)	1
45	74-2680	Bracket - Bulkhead	1	54	69-4400	Carrier -Wing Deck	1
46	69-6030	Tube - Hydraulic (Incl. Ref. #19)	1	55	69-1580	Anchor - Latch L.H.	1
47	69-6060	Tube - Hydraulic (Incl. Ref. #19)	1	*	69-1600	Anchor - Latch R.H.	1
48	69-6070	Tube - Hydraulic (Incl. Ref. #19)	1	56	321-9	Screw - Cap Hex. Hd.	3
49	69-6000	Tube - Hydraulic (Incl. Ref. #19)	1	57	56-7973	Clamp Half - Hydraulic Line	6
50	69-6040	Tube - Hydraulic (Incl. Ref. #19)	1	58	328-24	Screw - Cap Hex. Hd.	4
				59	39-7650	Plate - Cover	2
				60	32144-11	Screw - Thread Forming	4
				*	3290-378	Tie - Cable	3

*Not Illustrated

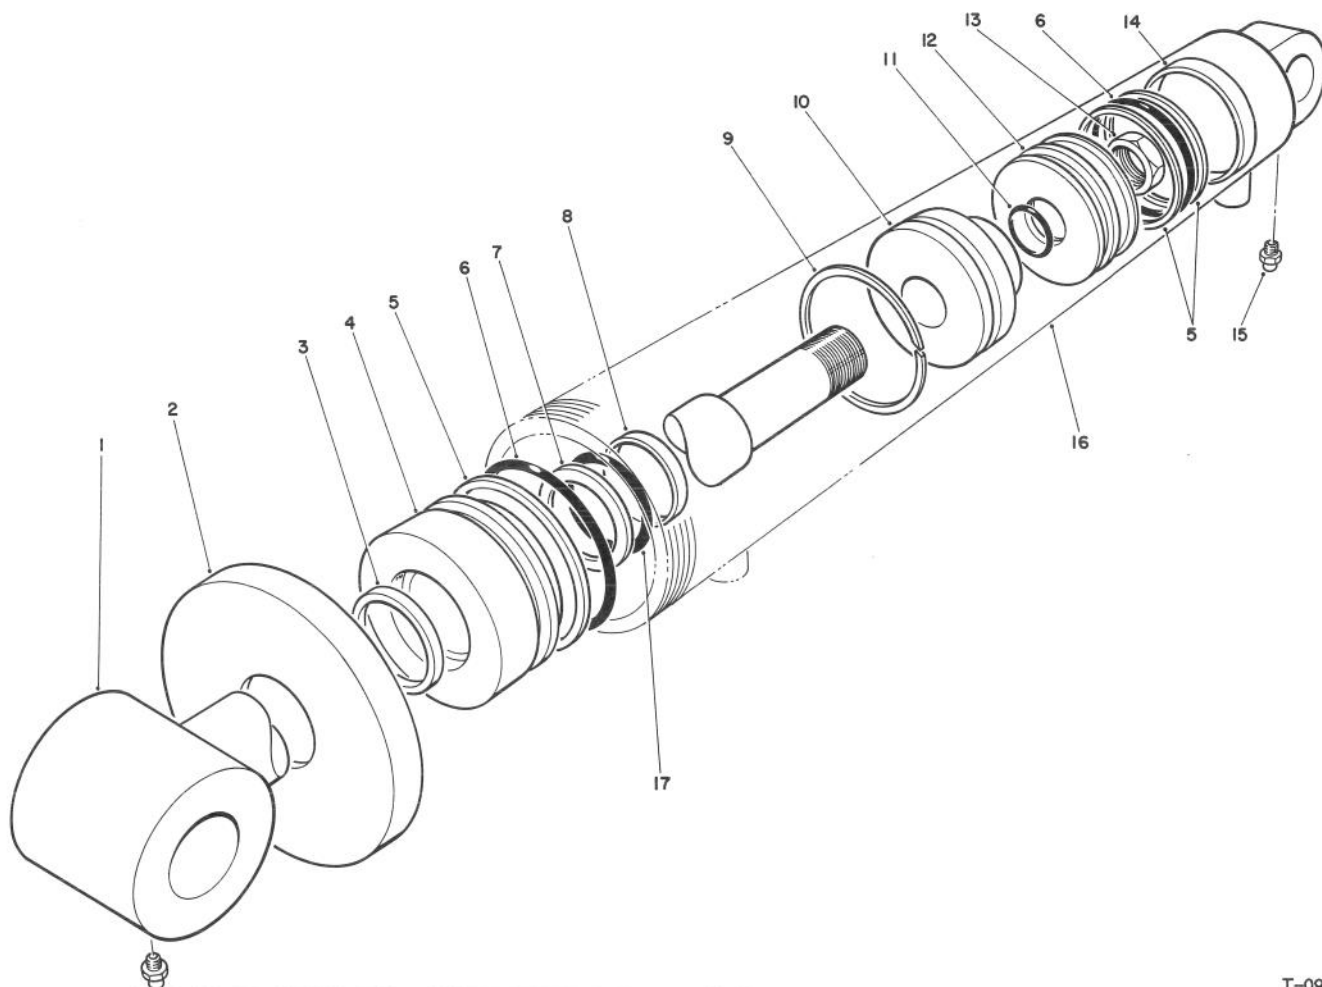

T-0959-90


HYDRAULIC CYLINDER ASSEMBLY NO. 74-2170

Ref. No.	Part No.	Description	No. Used
1	74-2230	Shaft/Clevis	1
2	74-2220	Collar	1
†3		Seal - Dust	1
4	74-2200	Head	1
†5		Ring - Back-Up	3
†6		Seal - O-Ring	2
†7		Ring - Back-Up	1
†8		Ring - Wear	1
9	74-2180	Ring - Steel	1
10	74-2190	Cushion	1

Ref. No.	Part No.	Description	No. Used
†11		Seal - O-Ring	1
12	74-2210	Piston	1
13	60-9760	Nut - Lock	1
†14		Ring - Wear	1
15	302-5	Fitting - Grease	2
†16		Barrel/Clevis	1
†17		Seal - O-Ring	1
*	74-2250	Seal Repair Kit (Incl. Ref. #3, 5-8, 11, 14 & 17)	1

*Not Illustrated

†Not serviceable separately.

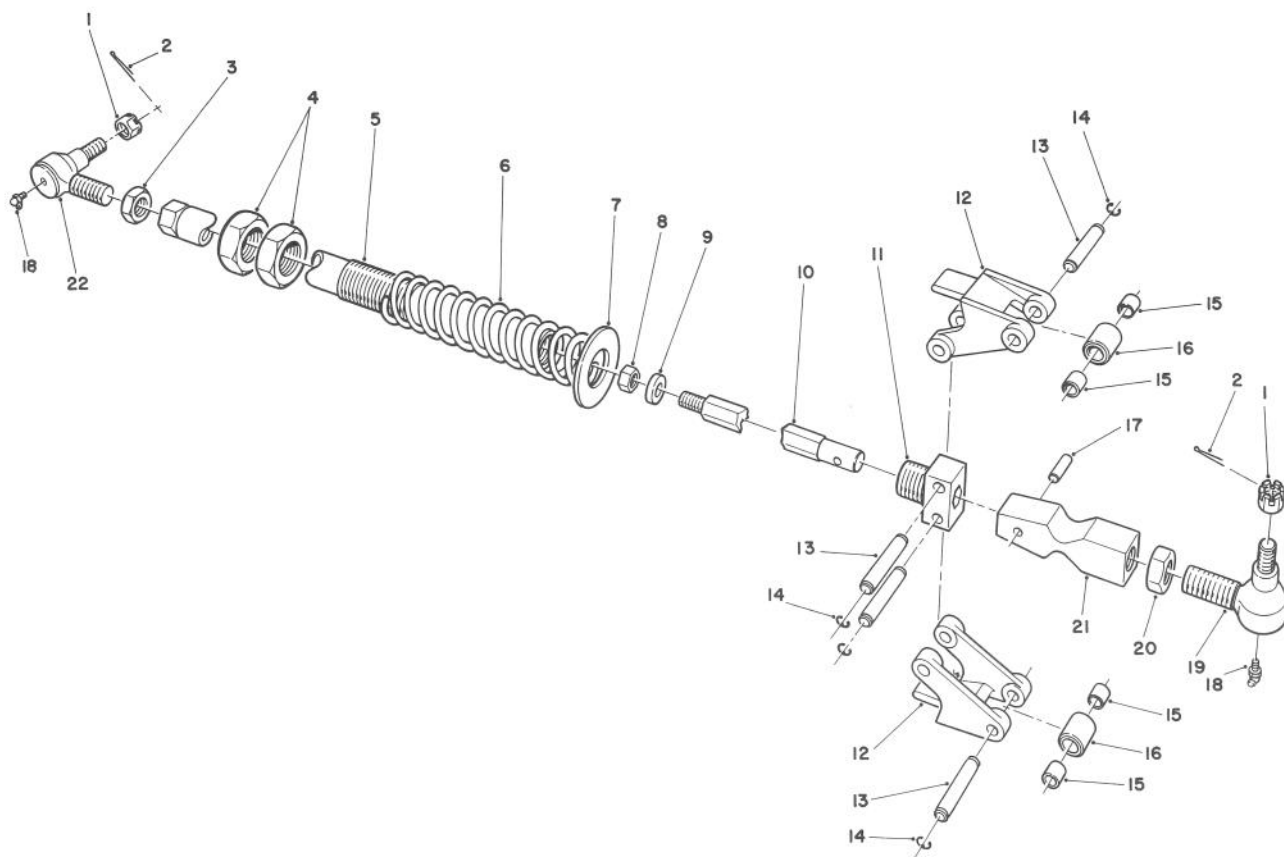


T-0369-90

WING DECK LATCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32136-2	Nut - Castle	4
2	3272-12	Pin - Cotter	4
3	21-3001	Nut - Jam L.H. Thread	2
4	3220-22	Nut - Jam	4
5	69-7210	Tube - Latch	2
6	69-8480	Spring - Compression	2
7	69-9100	Washer - Latch	2
8	3296-41	Nut - Lock	2
9	71-2550	Washer - Latch Shaft	2
10	69-9680	Shaft - Latch	2
11	69-9690	Block - Latch Pivot	2

Ref. No.	Part No.	Description	No. Used
12	69-1630	Arm - Latch Pivot	4
13	69-9080	Pin - Latch	8
14	32120-47	Ring - Retaining	16
15	256-172	Bearing - Sleeve	8
16	69-9090	Roller - Latch	4
17	32121-49	Pin - Roll	2
18	302-33	Fitting - Grease	4
19	21-0160	Joint - Ball (Incl. Ref. #1)	2
20	21-3000	Nut - Jam	2
21	69-9670	Cam - Spring Trip	2
22	21-0161	Joint - Ball (Incl. Ref. #1)	2

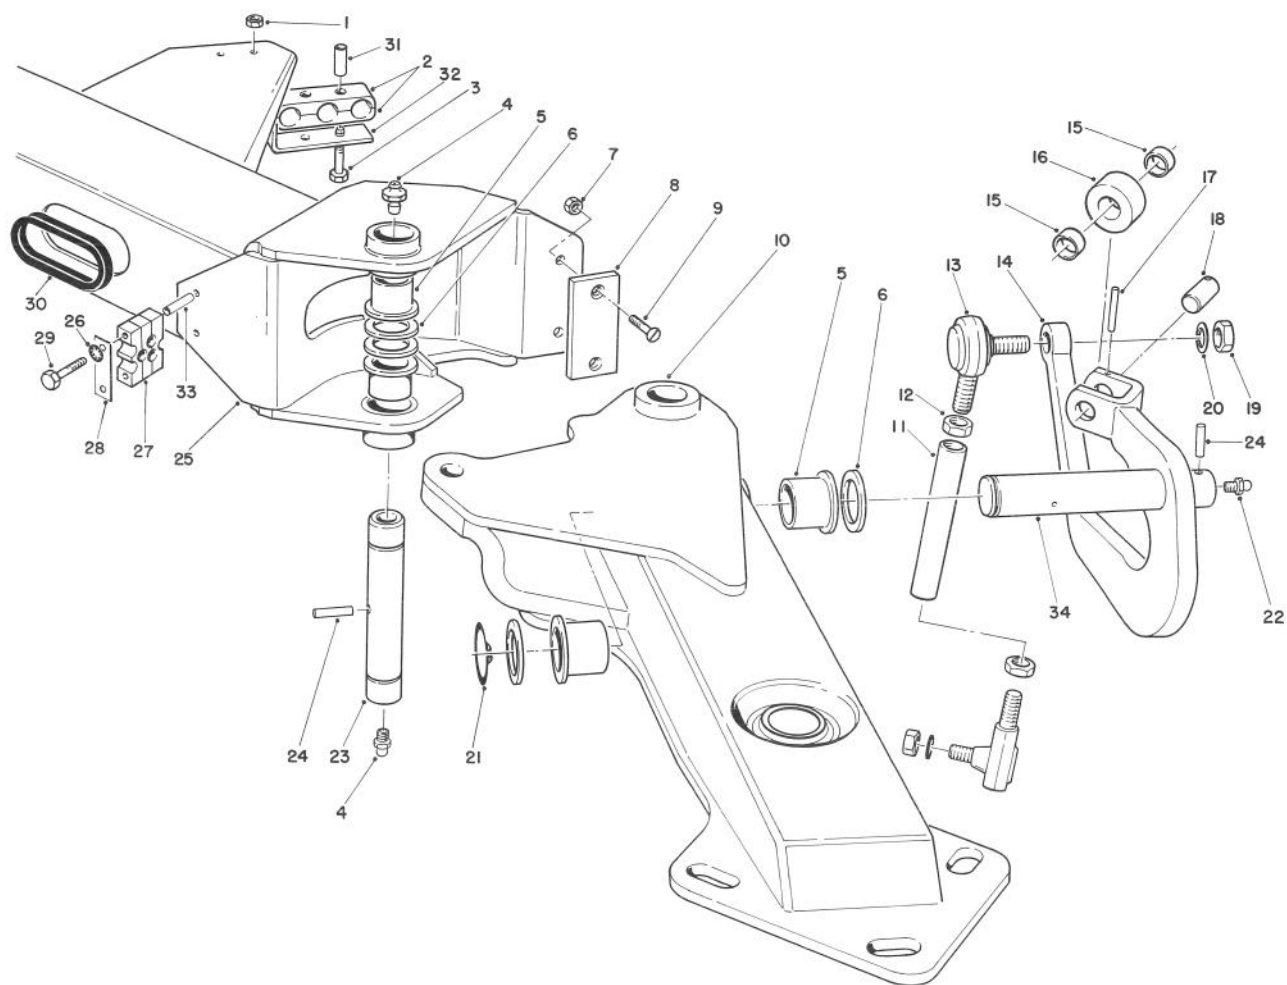


T-0370B

WING DECK LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32152-4	Nut - Lock	4
2	74-2710	Clamp Half - Hydraulic Line	4
3	321-15	Screw - Cap Hex. Hd.	4
4	302-2	Fitting - Grease	4
5	69-6470	Bushing - Flange	8
6	256-304	Washer - Thrust	8
7	32152-1	Nut - Lock	4
8	69-9300	Cushion - Rubber	2
9	32108-103	Screw - Machine Flat Hd.	4
10	71-0180	Arm - Outer Lift L.H. (Incl. Ref. #5)	1
*	71-0170	Arm - Outer Lift R.H. (Incl. Ref. #5)	1
11	71-2600	Tube - Anti - Sway	2
12	3220-7	Nut - Jam	4
13	2411-40	Joint - Ball	4
14	82-7930	Arm - Anti-Sway L.H.	1
*	82-7940	Arm - Anti-Sway R.H.	1
15	256-76	Bushing - Sleeve	4
16	69-9240	Roller - Cam	2
17	32121-34	Pin - Roll	2

Ref. No.	Part No.	Description	No. Used
18	69-9250	Shaft - Roller	2
19	3219-7	Nut - Lock	4
20	3253-9	Washer - Lock	4
21	32151-10	Ring - Retaining	2
22	302-5	Fitting - Grease	2
23	71-2620	Shaft - Lift Arm Elbow	2
24	32121-110	Pin Roll	4
25	71-0160	Lift Arm Assembly L.H. (Incl. Ref. #5)	1
*	71-0150	Lift Arm Assembly R.H. (Incl. Ref. #5)	1
26	3254-8	Washer	4
27	82-8170	Clamp - Hose	6
28	71-4100	Plate - Clamp	2
29	321-19	Screw - Cap Hex. Hd.	4
30	240-8	Grommet	4
31	74-2730	Tube - Clamp	4
32	74-2750	Retainer - Clamp	2
33	82-8160	Spacer	4
34	82-7900	Shaft - Arm	2

*Not Illustrated

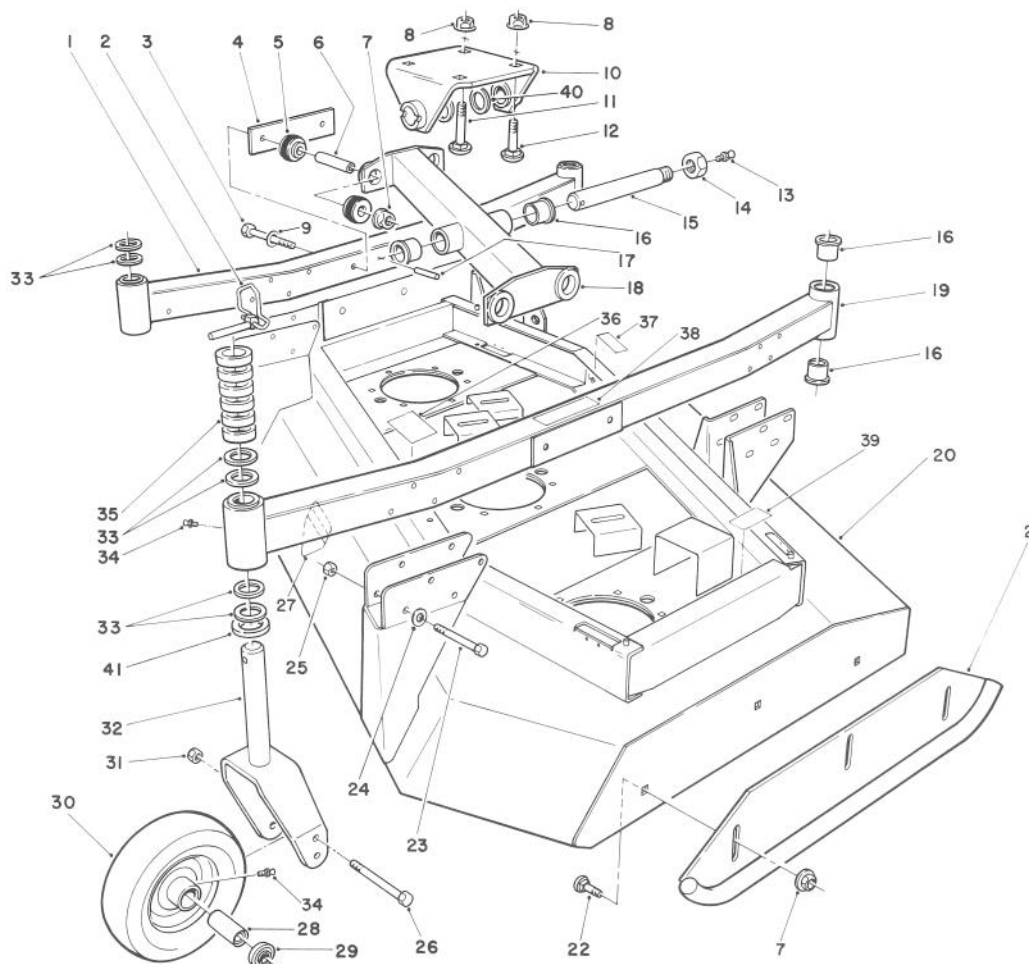


T-0335A

WING DECK MODEL NO 30591 L.H. & 30593 R.H.

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-8830	Arm - Inside Castor (Incl. Ref. #16 & 34)	2	*	13-4999	Ref. #27, 36, 37 & 39) Deck - Wing R.H. (Incl. Ref. #27, 36, 37 & 39)	1
2	3290-384	Pin - Lynch	8	21	69-6730	Skid	4
3	325-20	Screw - Cap Hex. Hd.	8	22	3233-9	Bolt - Carriage	12
4	69-8790	Plate - Reinforcing	2	23	323-15	Screw - Cap Hex. Hd.	32
5	69-9700	Mount - Rubber (Incl. Ref. #6)	8	24	5-0838	Washer - Flat	32
6		Spacer	8	25	32128-43	Nut - Lock	32
7	32128-23	Nut - Flange Lock	20	26	327-17	Screw Cap Hex. Hd.	8
8	32128-45	Nut - Lock	8	27	43-8480	Decal - Danger	2
9	30-8770	Washer - Flat	8	28	251-332	Spacer - Bearing	8
10	69-7170	Clevis - Deck	2	29	251-321	Bearing - Castor	16
11	3233-29	Bolt - Carriage	2	30	69-6930	Castor Wheel Assembly (Incl. Ref. #28, 29 & 34)	8
12	3233-28	Bolt - Carriage	6	31	3296-53	Nut - Lock	8
13	302-2	Fitting - Grease	2	32	75-9670	Fork - Castor	8
14	3296-68	Nut - Lock	2	33	69-6860	Washer - Thrust	28
15	71-2610	Shaft - Deck Pivot	2	34	302-5	Fitting - Grease	16
16	69-6470	Bushing - Flange	20	35	69-1510	Spacer - Castor	48
17	32121-110	Pin - Roll	2	36	69-0890	Decal - Belt Routing L.H.	1
18	69-6420	Bar - Lift L.H. (Incl. Ref. #16)	1	*	69-0900	Decal - Belt Routing R.H.	1
*	69-6480	Bar - Lift R.H. (Incl. Ref. #16)	1	37	66-1340	Decal - Danger	2
19	13-5059	Arm - Outside Castor (Incl. Ref. #16, 34 & 41)	2	38	69-0880	Decal - Torque	2
20	13-5009	Deck - Wing L.H. (Incl.		39	67-5360	Decal - Danger	4
				40	256-304	Washer - Thrust	4
				41	77-0950	Washer - Castor	8

*Not Illustrated

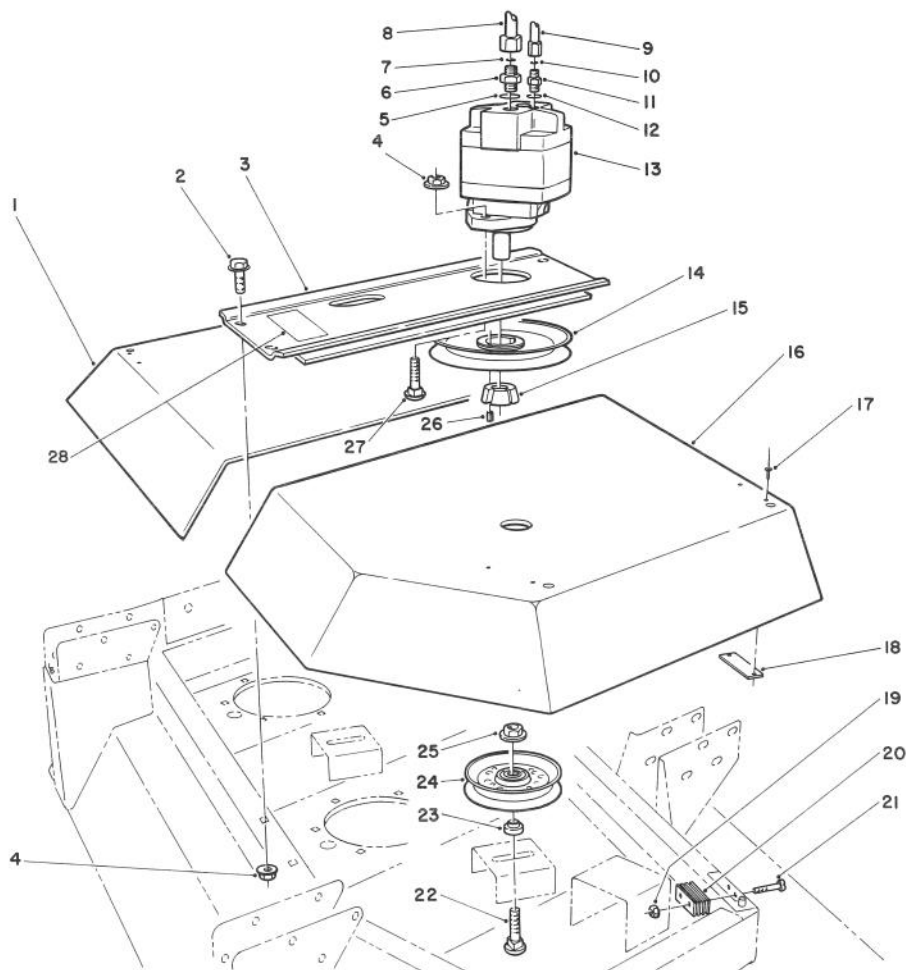


T-0336-90

WING DECK MODEL NO. 30591 L.H. & 30593 R.H. DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-6800	Cover - Inner L.H.	1	15	23-1640	Bushing - Taper Lock (Incl. Ref. #26)	2
*	69-6820	Cover - Inner R.H.	1	16	69-6810	Cover - Outer L.H.	1
2	3234-12	Screw - Hex. Washer Hd.	8	*	69-6830	Cover - Outer R.H.	1
3	69-6360	Plate - Motor Mounting L.H.	1	17	3269-25	Rivet - Pop	16
*	69-6340	Plate - Motor Mounting R.H.	1	18	69-6870	Plate - Magnet	8
4	32128-21	Nut - Flange Lock	12	19	3296-2	Nut - Lock	16
5	237-81	Seal - O-Ring	4	20	69-6260	Magnet - Cover	8
6	340-8	Fitting - Hydraulic Straight (Incl. Ref. #5 & 7)	4	21	32105-1	Screw - Pan Hd.	16
7	237-65	Seal - O-Ring	4	22	3233-30	Bolt - Carriage	6
8	76-2730	Hose - Hydraulic	4	23	69-6960	Spacer - Idler	6
9	76-2740	Hose - Hydraulic	2	24	63-1540	Pulley - Idler	6
10	237-22	Seal - O-Ring	2	25	32128-23	Nut - Flange Lock	6
11	340-2	Fitting - Hydraulic Straight (Incl. Ref. # 10 & 12)	2	26		Screw - Set	4
12	237-42	Seal - O-Ring	2	27	3231-28	Bolt - Carriage	4
13	69-2780	Motor - Hydraulic	2	28	71-4260	Decal - H.O.C.	2
14	63-0660	Pulley - Wing Deck Drive	2	*	76-2060	V-Belt	6
				*	3290-378	Tie - Cable	24

*Not Illustrated

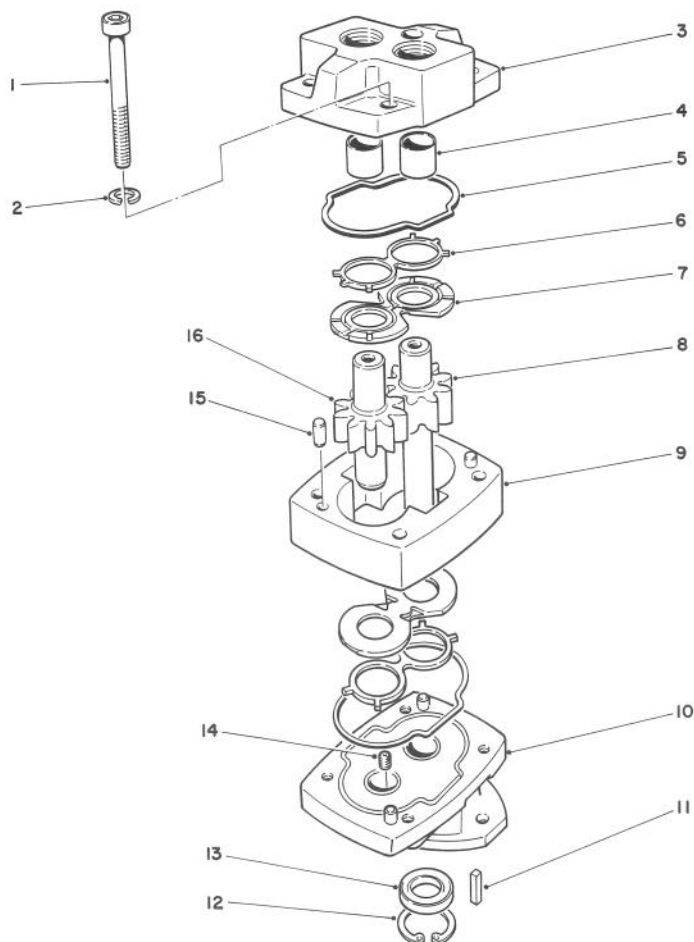


T-0386-90

HYDRAULIC MOTOR ASSEMBLY NO. 69-2780

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-2890	Screw - Hex. Socket Hd.	4	10	69-2790	Body Assembly (Incl. Ref. #4 & 14)	1
2	69-2910	Washer	4	11	69-2880	Key - Square	1
3	69-2800	Cover Assembly (Incl. Ref. #4)	1	12	69-2930	Ring - Retaining	1
†4		Bushing - Sleeve	4	13	69-2860	Seal - Oil	1
5	69-2920	Seal - Square	2	14	69-2900	Plug - Pipe	2
6	69-2850	Seal - Load	2	15	69-2870	Pin - Dowel	4
7	69-2840	Plate - Wear	2	16	69-2820	Shaft/Gear - Idler	1
8	69-2830	Shaft/Gear - Drive	1	*	69-2940	Repair Kit (Incl. Ref. #5, 6 & 13)	1
9	69-2810	Plate - Gear	1				

*Not Illustrated

†Not serviced separately.

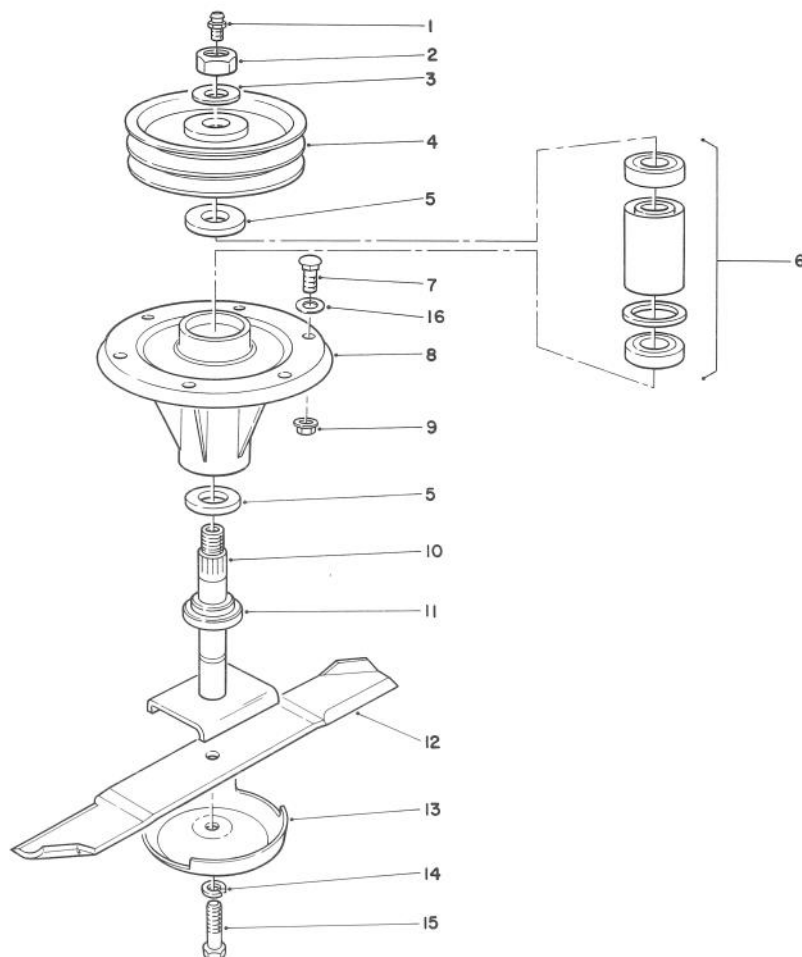


SPINDLE ASSEMBLY

T-0337-90

Ref. No.	Part No.	Description	No. Used
1	302-2	Fitting - Grease Str.	1
*	302-10	Fitting - Grease 45° (Used only on wing deck center & inside spindles)	1
2	3296-49	Nut - Lock	1
3	3-8514	Washer	1
4	69-8390	Pulley - Spindle	1
5	253-154	Seal - Wave	2
6	71-2530	Bearing Assembly	1
7	3231-22	Bolt - Carriage	6

Ref. No.	Part No.	Description	No. Used
8	69-1530	Housing - Spindle	1
9	32128-21	Nut - Flange Lock	6
10	69-6760	Shaft - Spindle	1
11	69-6950	Spacer - Spindle	1
12	69-6920	Blade - 20"	1
13	67-7561	Cup - Anti Scalp	1
14	3253-8	Washer - Lock	1
15	51-4060	Bolt - Blade	1
16	3256-24	Washer - Flat	A/R

*Not Illustrated

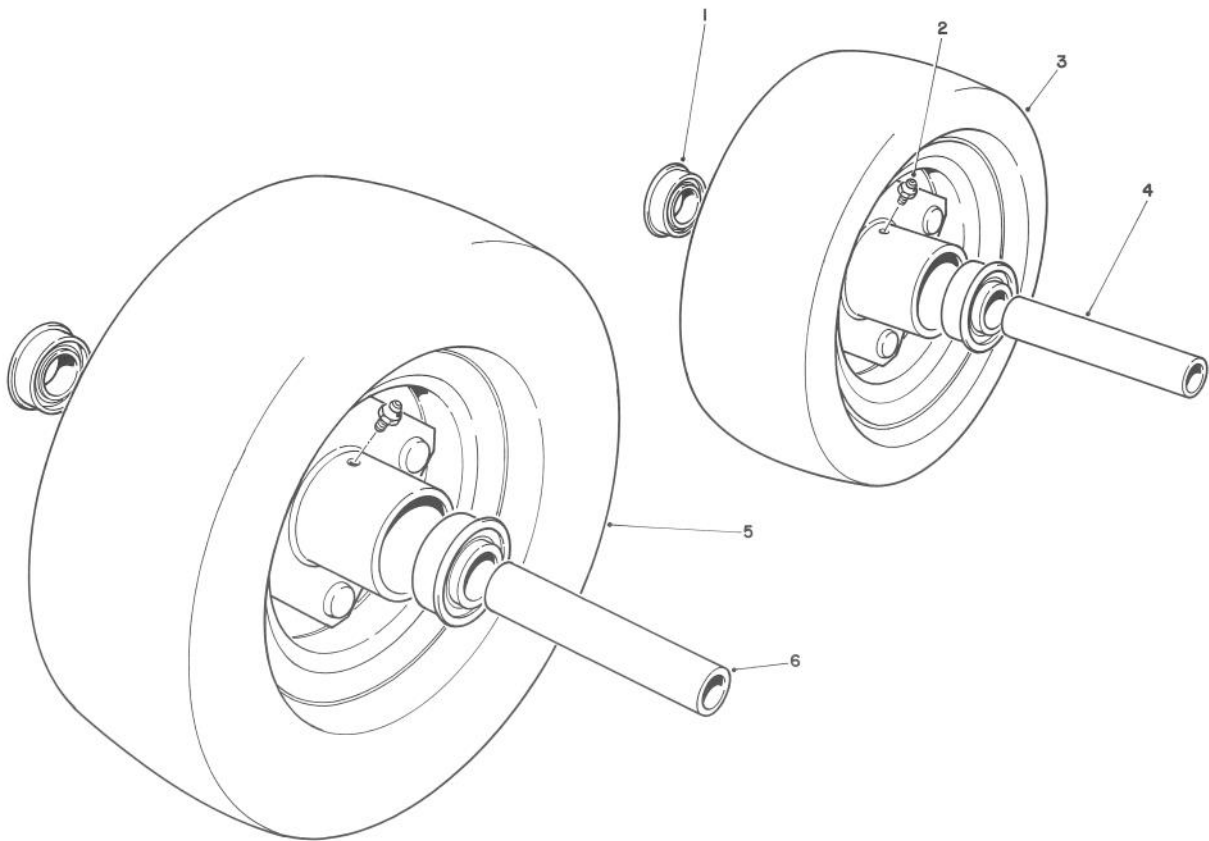


T-0992-90

10" & 13" SEGMENTED TIRE ASSEMBLIES (Optional)

Ref. No.	Part No.	Description	No. Used
1	251-321	Bearing - Ball	2
2	302-5	Fitting - Grease	1
3	76-1880	10" Segmented Tire Assy. (Incl. Ref. #1, 2 & 4)	1

Ref. No.	Part No.	Description	No. Used
4	251-332	Spacer - Inner	1
5	76-1890	13" Segmented Tire Assy. (Incl. Ref. #1, 2 & 6)	1
6	251-333	Spacer - Inner	1

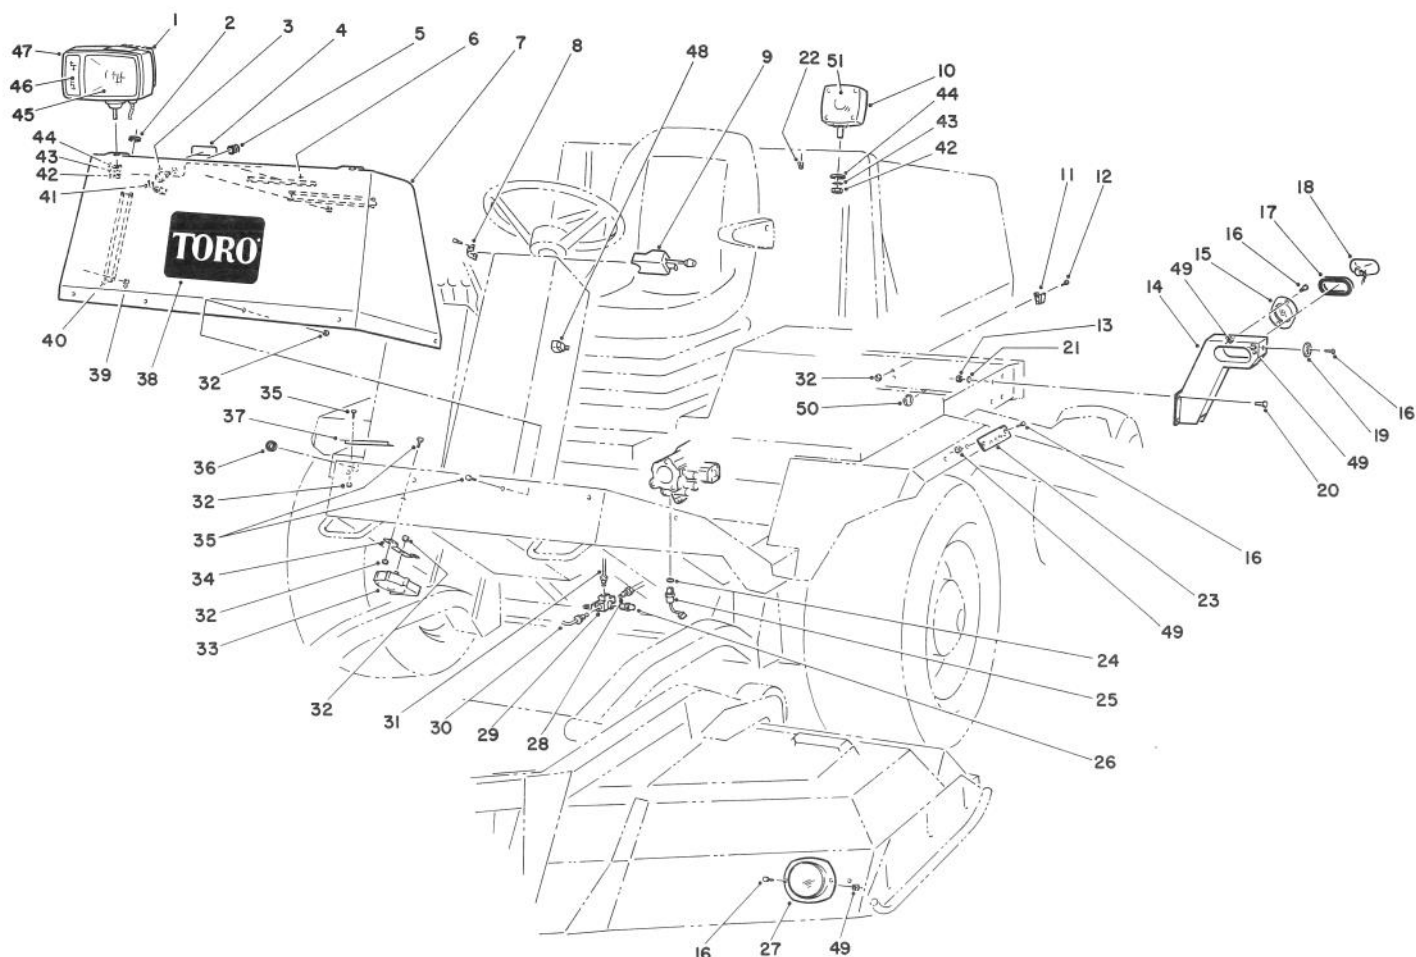

T-0936-90


ROAD LIGHT KIT MODEL NO. 30585 (Optional) CHASSIS COMPONENTS

Ref. No.	Part No.	Description	No. Used
1	75-9740	Headlight Assembly R.H. (Incl. Ref. #42, 43, 45-47)	1
*	75-9730	Headlight Assembly L.H. (Incl. Ref. #42, 43, 45-47)	1
*†		Bulb - Flasher (GE #1157)	4
2	237-41	Grommet	2
3	18-2830	Switch - Horn (Incl. Ref. #5)	1
4	74-2330	Decal - Horn	1
5		Cover - Horn Switch	1
6	66-8110	Trim - Shroud	1
7	74-2320	Front Shroud Assembly (Incl. Ref. #4 & 38)	1
8		Clamp - Signal Controller	1
9	63-4460	Signal Controller Assembly (Incl. Ref. #8 & 48)	1
10	38-6190	Flashing Lamp Assembly (Incl. Ref. #42-44 & 51)	2
*†		Bulb - Flasher (GE #1156)	2
11	38-6200	Socket - S.M.V.	1
12	3230-22	Bolt - Carriage	2
13	3217-7	Nut - Hex.	8

Ref. No.	Part No.	Description	No. Used
14	74-2460	Arm - Light L.H.	1
*	74-2480	Arm - Light R.H.	1
15	74-2370	Reflector - 3" Red	2
16	32144-1	Screw - Cap Hex. Hd.	14
17	74-2360	Grommet	2
18	74-2350	Taillight	2
19	74-2390	Reflector - 2" Red	2
20	3234-11	Screw - Cap Hex. Hd.	8
21	3253-5	Washer - Lock	8
22	249-47	Clip - Wire	4
23	74-2540	Reflector - Amber	2
24	237-42	Seal - O-Ring	1
25	74-2420	Switch - Brake (Incl. Ref. #24)	1
26	218-242	Switch - Brake	1
27	74-2371	Reflector - 3" Amber	2
28	74-2530	Brake Line Assembly Front	1
29	218-243	Tee - Brake Line	1
30	74-2520	Brake Line Assembly R.H.	1
31	74-2510	Brake Line Assembly L.H.	1
32	32128-20	Nut - Flange Lock	13
33	19-6050	Horn	1
34	18-2820	Bracket - Horn	1
35	3234-7	Screw - Hex. Flange Hd.	11

*Not Illustrated

†Obtain Locally

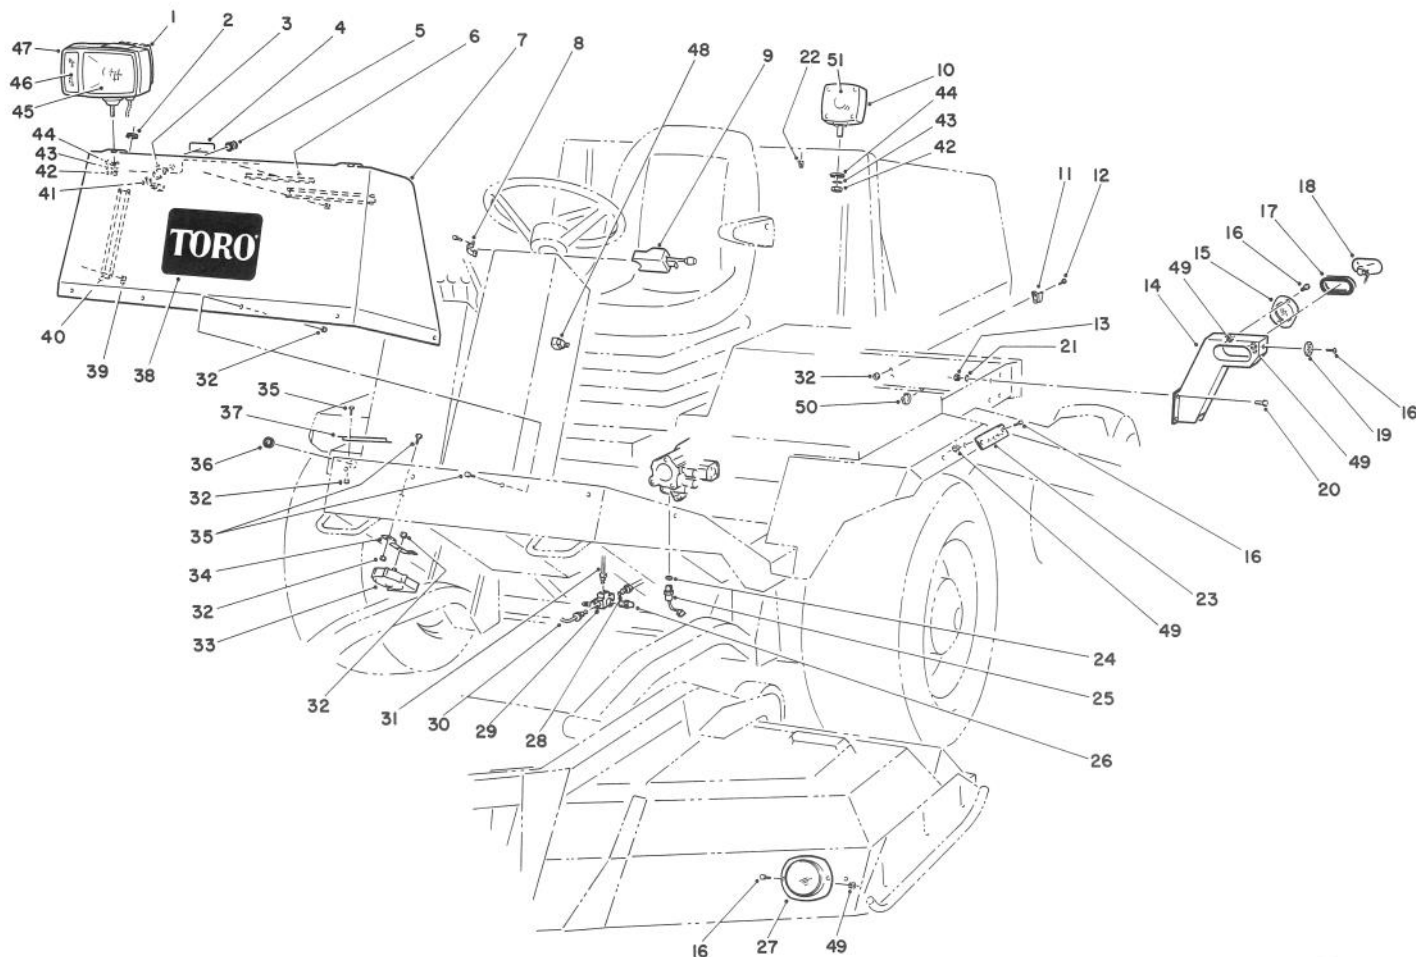


T-0936-90

ROAD LIGHT KIT MODEL NO. 30585 (Optional) CHASSIS COMPONENTS (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
36	240-3	Grommet	1	46	75-9760	Lens - Amber	2
37	74-2400	Cover - Wire	1	47	75-9770	Bezel - Headlight	2
38	67-7310	Decal - TORO	1	48	63-7590	Relay	1
39	32149-2	Nut - Lock	8	49	32149-7	Nut - Keps	14
40	74-2550	Cover - Wire	2	50	3290-378	Tie - Cable	30
41	72-3790	Wire Assembly	1	51	218-587	Lens - Amber	4
42	3219-5	Nut - Hex.	4	*	237-88	Grommet	
43	3253-7	Washer - Lock	4			(Used when mounting the flashing lamps to a ROPS kit with a sun shield)	2
44	3256-6	Washer - Flat	4				
45	75-9750	Bulb - Sealed Beam (GE #6054 HP)	2				

*Not Illustrated

†Obtain Locally

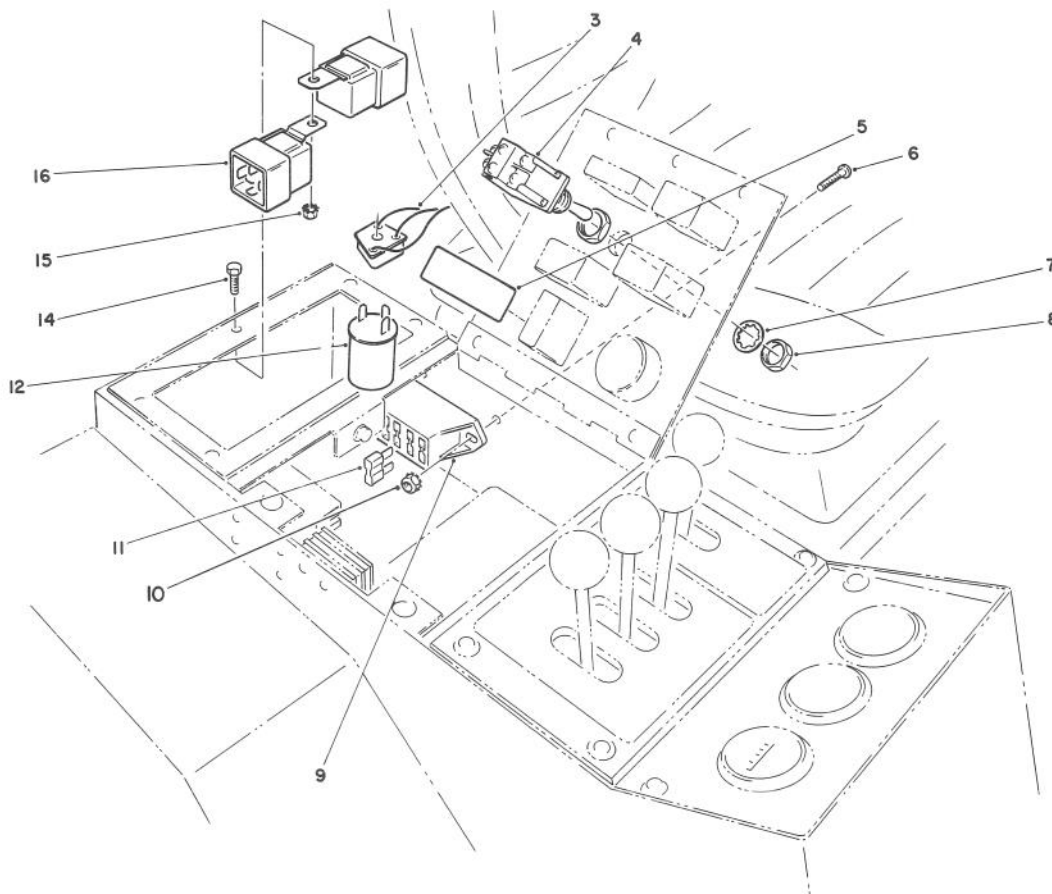


T-0937-90

ROAD LIGHT KIT MODEL NO. 30585 (Optional) CONTROL BOX COMPONENTS

Ref. No.	Part No.	Description	No. Used
3	74-2410	Harness - Wire (Incl. Ref. #9 & 11)	1
4	74-2300	Switch - Toggle (Incl. Ref. #7 & 8)	1
5	74-2340	Decal - Fuse	1
6	32105-13	Screw - Mach. Round Hd.	2
7		Washer - Lock	1
8		Nut - Hex.	2

Ref. No.	Part No.	Description	No. Used
9	67-7160	Block - Fuse	1
10	32149-7	Nut - Keps	2
11	218-581	Fuse - 15A	4
12	218-456	Relay - Flasher	2
14	321-2	Screw - Cap Hex. Hd.	1
15	32149-2	Nut - Keps	1
16	63-7590	Relay	2
*	74-2430	Tubing - Shrink	1

*Not Illustrated

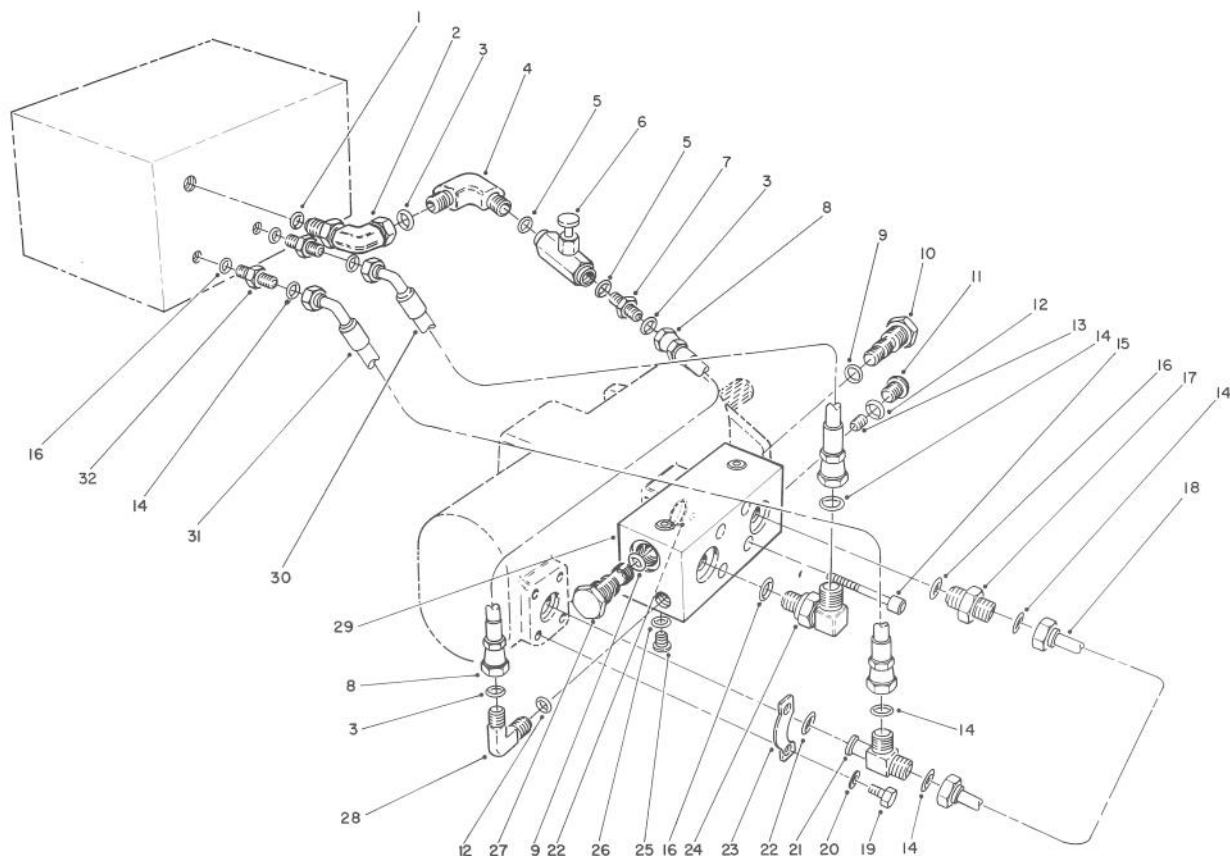


T-1145-90

FLOW COMBINE KIT MODEL No. 30586

Ref. No.	Part No.	Description	No. Used
1	237-79	O-Ring	1
2	340-18	Fitting	1
3	237-22	O-Ring	2
4	340-110	Fitting - Swivel	1
5	237-42	O-Ring	2
6	76-2810	Valve - Needle	1
7	340-2	Fitting	1
8	77-5130	Hose - Hydraulic	1
9	69-4270	Seal Kit	1
10	69-4190	Cartridge - Logic, N.C.	1
11	353-990	Plug - Hex Socket	1
12	237-78	O-Ring	2
13	69-4130	Plug - Orifice	2
14	237-58	O-Ring	2
15	3274-20	Screw - Cap, Socket Hd.	4
16	237-81	O-Ring	2
17	340-9	Fitting	1

Ref. No.	Part No.	Description	No. Used
18	74-2610	Tube Assembly - Hydraulic	1
19	323-7	Screw - Cap, Hex. Hd.	4
20	3253-21	Washer - Lock	4
21	74-2590	Fitting - Tee	1
22	340-135	O-Ring	1
23	353-992	Fitting - Flange	2
24	340-142	Fitting	1
25	353-991	Plug - Hex. Socket	4
26	237-156	O-Ring	4
27	74-2560	Cartridge - Logic, N.C.	1
28	340-97	Fitting	1
29	74-2580	Valve - Flow Combining (Incl. Ref. #9-13, 22, & 25-27)	1
30	77-0940	Hose Assembly - Hydraulic	1
31	69-5590	Hose Assembly (Existing)	1
32	340-9	Fitting (Existing)	1

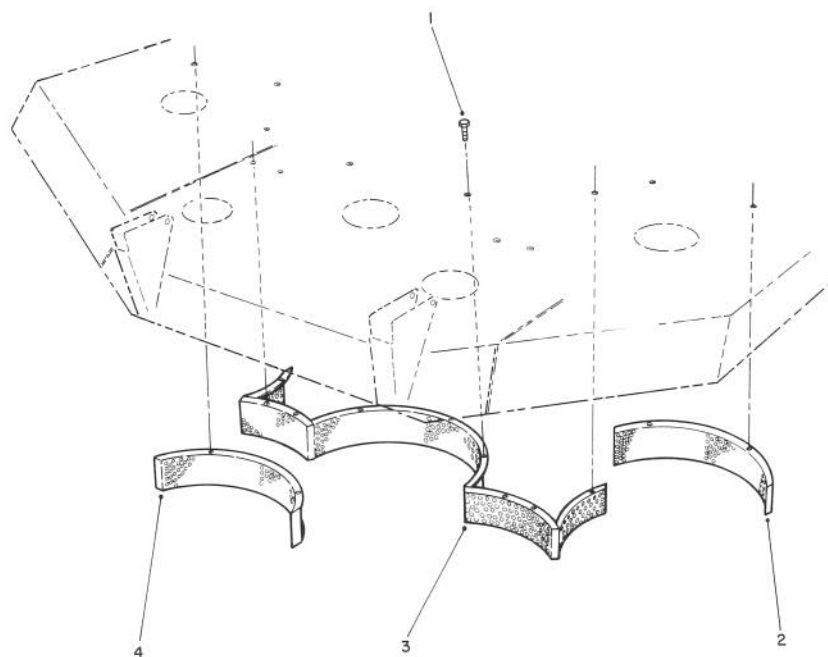

T-1146-90

MULCHER KIT – FRONT DECKS (Model No. 30588)

Ref. No.	Part No.	Description	No. Used
1	323-5	Screw – Cap, Hex. Hd.	12
2	77-0740	Screen – Deck, L.H.	1

Ref. No.	Part No.	Description	No. Used
3	77-0730	Screen – Deck, Center	1
4	77-0750	Screen – Deck, R.H.	1



Ref. No.	Part No.	Description	No. Used

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]

INDEX

Description	Page
Seat Assembly	1
Seat Pivot & Bellows Assembly	2
Seat Suspension Assembly	3
Steering Tower Assembly	4
Power Steering Valve Assembly No. 69-1850	5
Steering Brake Assembly	6
Service Brake Assembly	7
Brake System Master Cylinder No.69-2640	8
Traction Pedal & Cruise Control Assembly	9
Tool Box Assembly	10
Control Box Assembly	11
Upper Control Panel Assembly	12
Lower Control Panel Assembly	13
Throttle Assembly	14
Lift Valve Installation Assembly	15
Lift Valve Assembly No. 69-1780	16
Counterbalance Manifold Assembly	17
Fuel Tank Assembly	18
Hydraulic Tank Assembly	19
Hydraulic Filter Assembly	20
Hydraulic Pump Installation Assembly	21
Double Gear Pump No. 69-2050	22
Frame Assembly	23-24
Hydraulic System Diagnostic Panel Assembly	25
Hydraulic Line Clamps Assembly	26
Front Wheel & Brake Assembly	27
Wheel Motor No. 69-3050	28
Planetary Gear Drive Assembly No. 69-1730	29
Wheel Brake Assembly	30
Variable Displacement Pump Installation	31-32
Gear Pump & Flow Divider No. 69-2220	33
Variable Displacement Pump No. 69-3040	34-35
Cowl Assembly	36
Hood Assembly	37
Radiator & Oil Cooler Assembly	38
Engine Installation Assembly	39-40
Starter & Alternator Installation Assembly	41
Starter Motor Assembly No. 70-5860	42
Alternator Assembly No. 70-5760	43
Water Pump Assembly	44
Timing Gear Case Assembly	45
Rocker Cover & Cylinder Head Assembly	46
Valve & Camshaft Assembly	47

Description	Page
Crankcase Assembly	48
Piston, Connecting Rod, Crankshaft & Flywheel	49
Oil Pump, Breather & Filter	50
Flywheel Housing & Oil Pan Assembly	51
Intake & Exhaust Manifold Assembly	52
Turbocharger Assembly No. 70-6430	53
Turbocharger Oil Pipe Assembly	54
Fuel System Assembly	55-56
Fuel Injection Pump Assembly	57-58
Governor Assembly	59-60
Fuel Feed Pump Assembly No. 70-5700	61
Air Cleaner Assembly No. 69-1890	62
Fuel Filter Assembly	63
Solenoid Valve Assembly No. 69-4330	64
Battery Frame Assembly	65
PTO Manifold Assembly	66-67
Rear Axle Assembly	68-69
Hydraulic Steering Cylinder	70
Front Lift Arm Assembly	71
Hydraulic Cylinder Assembly No. 69-2180	72
Center Deck Model No. 30592	
Carrier Frame Assembly	73
Center Deck Model No. 30592	74-75
Center Deck Model No. 30592	
Left Wing Assembly	76
Center Deck Model No. 30592	
Right Wing Assembly	77
Wing Deck Lift Assembly	78-79
Hydraulic Cylinder Assembly No. 74-2170	80
Wing Deck Latch Assembly	81
Wing Deck Lift Arm Assembly	82
Wing Deck Model No. 30591 L.H. & 30593 R.H.	83
Wing Deck Model No. 30591 L.H. & 30593 R.H.	
Drive Assembly	84
Hydraulic Motor Assembly No. 69-2780	85
Spindle Assembly	86
10" & 13" Segmented Tire Assemblies	
(Optional)	87
Road Kit Model No. 30585 (Optional)	88-90
Flow Combine Kit Model No. 30586.	91
Mulcher Kit - Front Decks, Model No. 30588.	92
Mulcher Kit - Wing Decks, Model No. 30588.	93