



Z334 Z Master[®]

With 86cm 7-Gauge Side Discharge Mower

Model No. 74408TE - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck Connection Assembly	 3	Piston and Crankshaft Assembly Kawasaki FH580V-AS50-R	 22
Deck Assembly	 4	Valve and Camshaft Assembly Kawasaki FH580V-AS50-R	 23
Deck Decal Assembly No. 112-3841	 5	Lubrication Equipment Assembly Kawasaki FH580V-AS50-R	 24
Deflector Assembly No. 110-9917	 6	Cooling Equipment Assembly Kawasaki FH580V-AS50-R	 25
Idler Assembly No. 114-0474	 7	Electric Equipment Assembly Kawasaki FH580V-AS50-R	 26
Spindle Assembly No. 114-0459	 8	Control Equipment Assembly Kawasaki FH580V-AS50-R	 27
Brake Linkage Assembly	 9	Carburetor Assembly Kawasaki FH580V-AS50-R	 28
Front Frame Assembly	 10	Air Filter and Muffler Assembly Kawasaki FH580V-AS50-R	 29
Frame Decal Assembly No. 112-3796	 11	Fuel Tank and Valve Assembly Kawasaki FH580V-AS50-R	 30
Caster and Height-of-Cut Assembly	 12	Starter Assembly Kawasaki FH580V-AS50-R	 31
Seat Assembly	 13	Label Assembly Kawasaki FH580V-AS50-R	 32
Motion Control Assembly	 14	Attachments and Accessories List	 33
RH Transmission Assembly No. 109-2240	 15		
LH Transmission Assembly No. 109-2241	 16		
Fuel Tank Assembly	 17		
Engine Mounting Assembly	 18		
Hydraulic Drive Assembly	 19		
Electrical Assembly	 20		
Cylinder and Crankcase Assembly Kawasaki FH580V-AS50-R	 21		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain from your local Kawasaki dealer

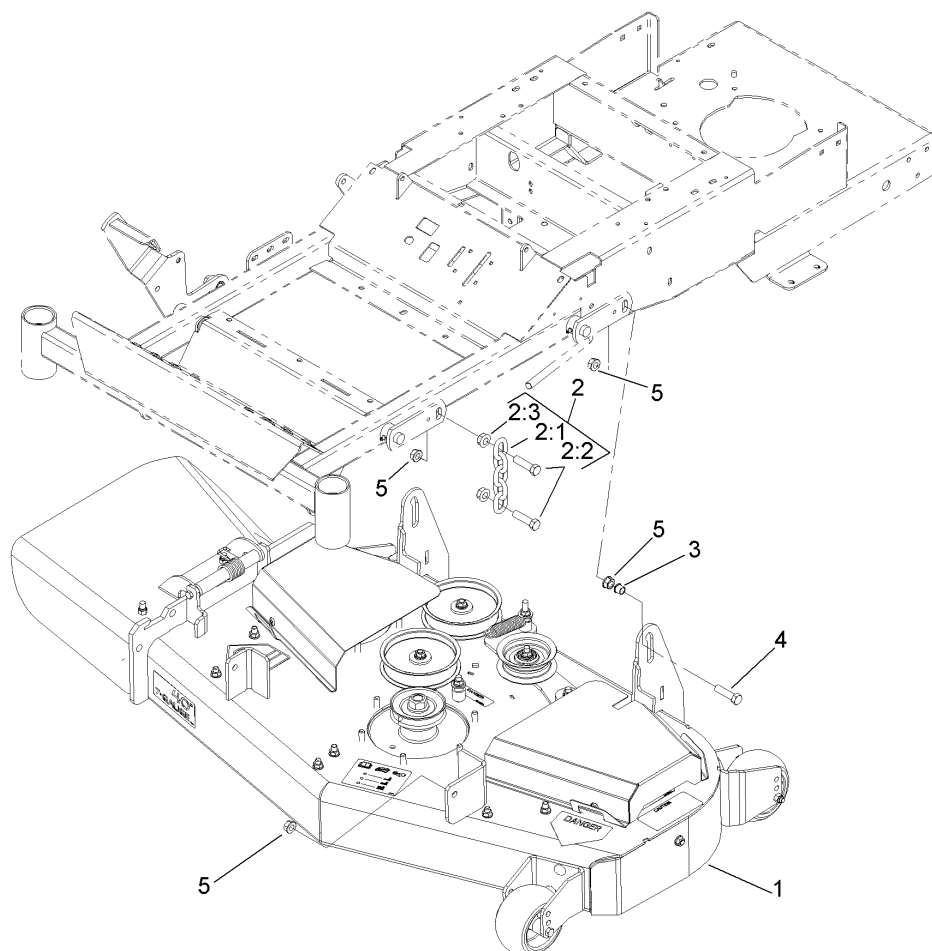


Deck Connection Assembly

Ref	Part No.	Qty.	Description				
1		1	Deck ASM				
2	103-9817	2	Deck Chain ASM				
2:1	1-633447	1	Chain-Lift, Deck				
2:2	103-1898	2	Screw-HH				
2:3	32128-37	2	Nut-HF				
3	104-9776	2	Bushing-Flanged				
4	103-1898	2	Screw-HH				
5	32128-37	8	Nut-HF				

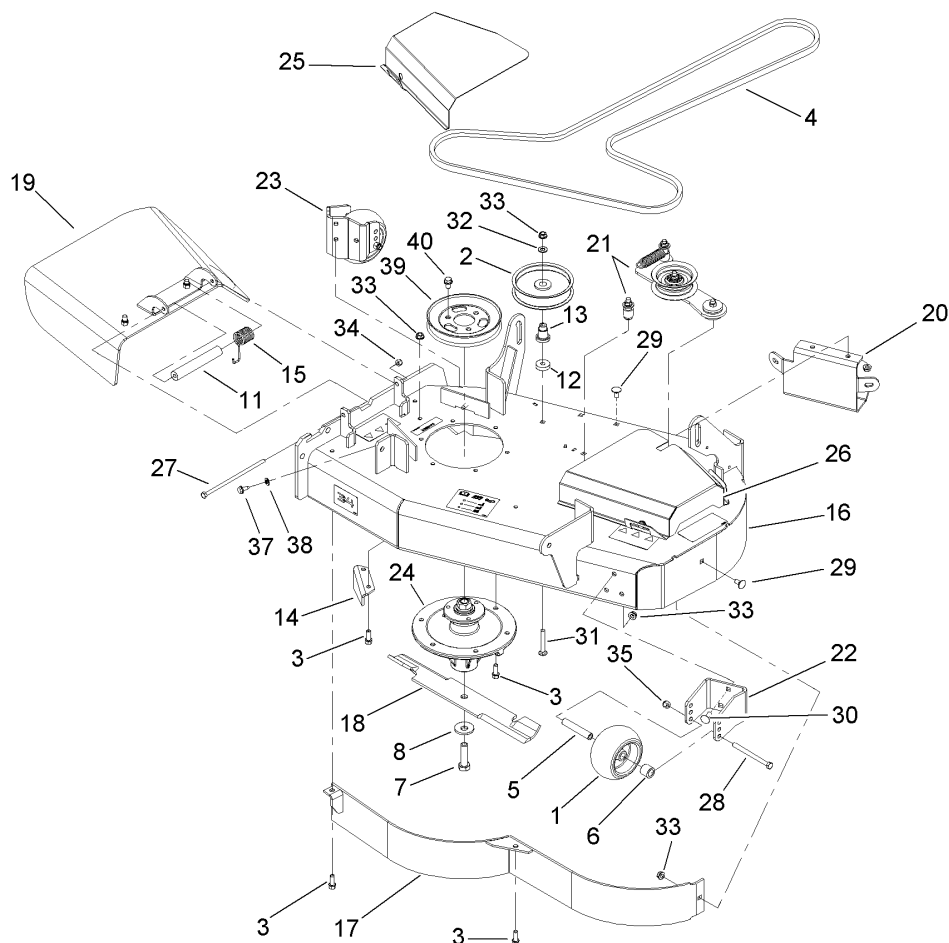 


Deck Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	1-603299	2	Roller-Scalp, Anti	27	322-50	1	Screw-HH
2	1-613098	1	Pulley-Idler	28	323-23	2	Screw-HH
3	92-1624	16	Screw	29	3231-1	5	Screw-CARR
4	114-0452	1	Belt	30	3231-2	6	Screw-CARR
5	98-7912	2	Tube-Spanner	31	3231-31	1	Screw-CARR
6	98-7913	2	Tube-Spacer	32	3256-24	1	Washer-Flat
7	51-4060	2	Screw-Blade	33	3290-357	14	Nut-HHF, Whiz
8	103-0865	2	Washer-Blade Bolt, Heavy	34	3296-29	1	Nut-Lock, NI
11	105-4622	1	Spacer	35	3296-39	2	Nut-Lock, NI
12	105-7788	1	Spacer	37	32144-70	4	Screw-HWHTF
13	106-3214	1	Mount-Pulley	38	3256-23	4	Washer-Flat
14	107-8541-01	1	Baffle-Discharge	39	105-7735	2	Pulley
15	108-4052	1	Spring-Torsion	40	32144-15	6	Screw-HHFTF
16	112-3841	1	Deck Decal ASM				
17	110-1515-01	1	Baffle				
18	110-9961-03	2	Blade-Rotary, Recycling (17.50)				
19	110-9917	1	Deflector ASM				
20	110-9926-01	1	Plate-Skid				
21	114-0474	1	Idler Spring ASM				
22	110-9946-01	1	Plate-Support, Wheel				
23	110-9949-01	1	Mount-Wheel, RH				
24	114-0459	2	Spindle ASM				
25	110-9959-01	2	Cover-RH				
26	110-9968-01	1	Cover-LH				

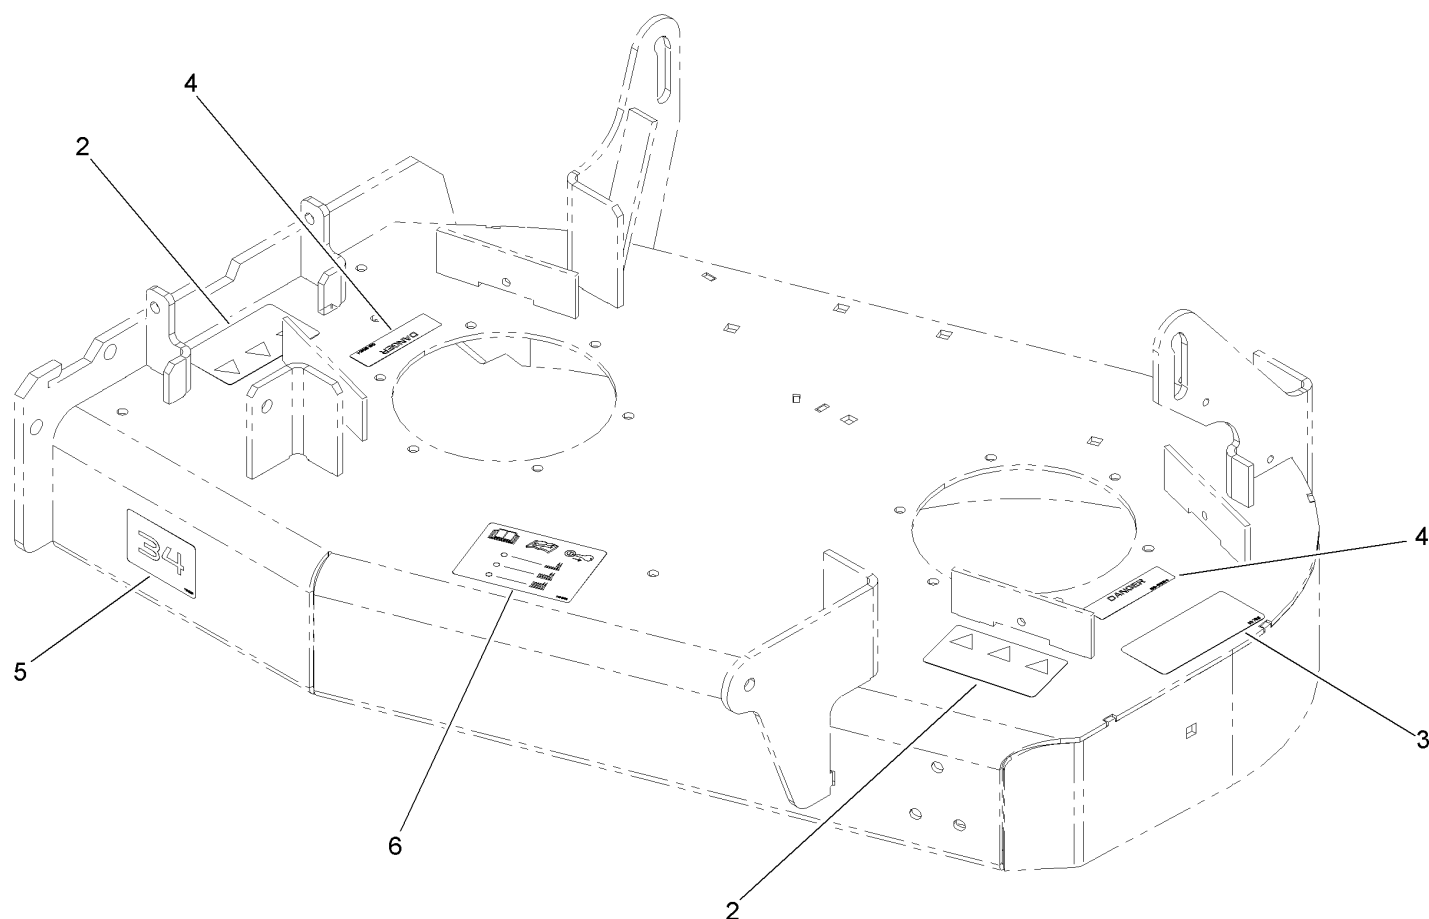 


Deck Decal Assembly No. 112-3841

Ref	Part No.	Qty.	Description
2	93-7010	2	Decal-Danger
3	93-7818	1	Decal-Torque, Blade Bolt
4	98-1977	2	Decal-Warning
5	112-3852	3	Decal
6	112-3858	1	Decal-Anti Scalp

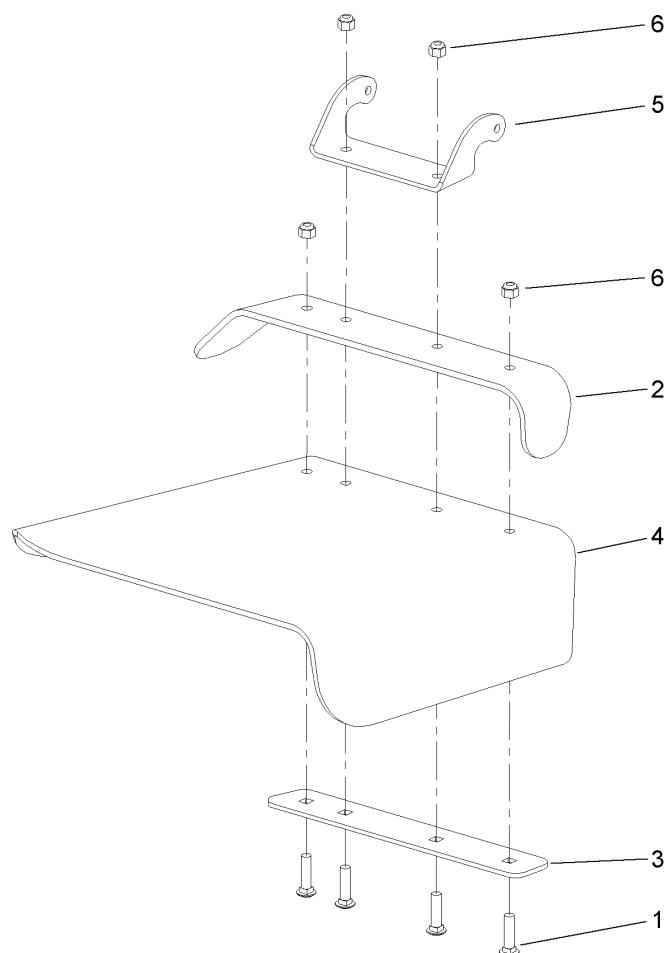 


Deflector Assembly No. 110-9917

Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	110-0792-01	1	Deflector
3	110-0793-03	1	Strap-Discharge
4	110-0791	1	Deflector-Rubber
5	110-9923-01	1	Bracket-Mounting, Deflector
6	3296-39	4	Nut-Lock, NI

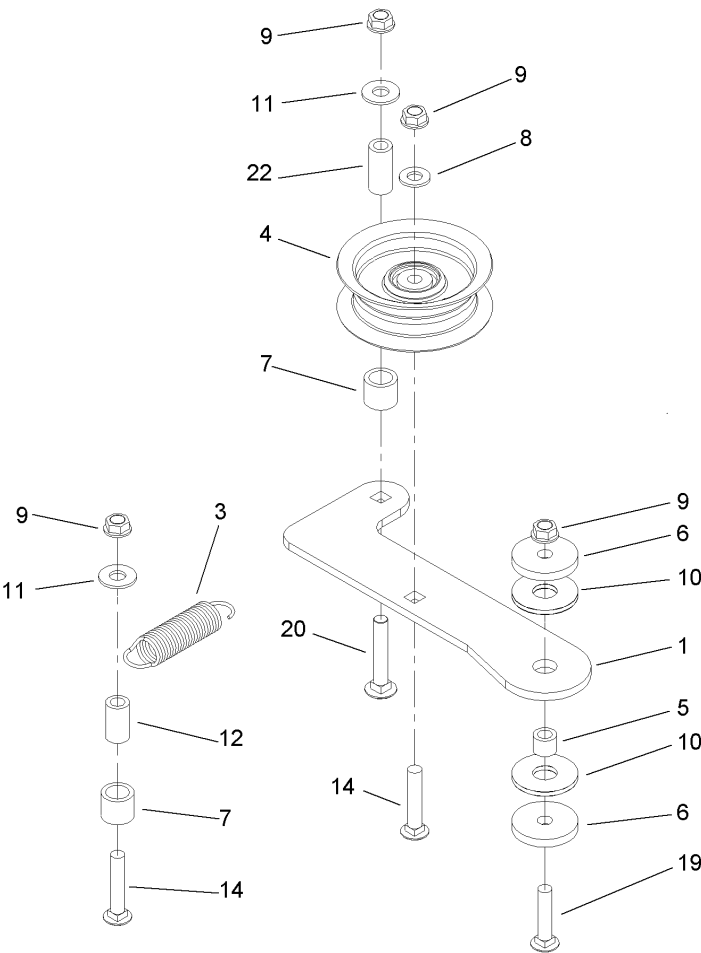 


Idler Assembly No. 114-0474

Ref	Part No.	Qty.	Description				
1	110-9996	1	Arm-Idler				
3	108-4056	1	Spring-Extension				
4	106-2175	1	Pulley-Idler, Flat				
5	1-413088	1	Bushing-Lever, Lift				
6	110-9981	2	Washer-Plain				
7	108-4063	1	Spacer-Rubber				
8	3256-24	1	Washer-Flat				
9	3290-357	4	Nut-HHF, Whiz				
10	114-0463	2	Washer-Friction, Composite				
11	3256-4	2	Washer-Flat				
14	3231-6	2	Screw-CARR				
19	3231-5	1	Screw-CARR				
20	3231-7	1	Screw-CARR				
22	114-0474	1	Idler Spring ASM				

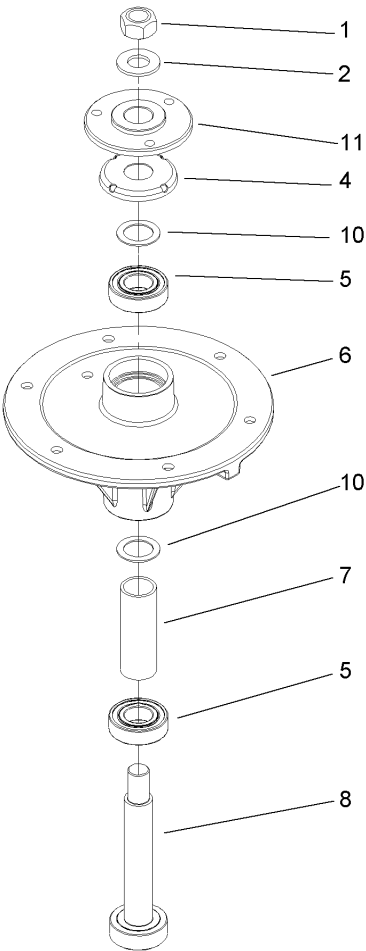 


Spindle Assembly No. 114-0459

Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
4	106-3204	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	108-6696	1	Housing-Spindle				
7	107-8502	1	Spacer-Bearing				
8	110-0726	1	Shaft-Spindle				
10	10-8110	2	Washer-Thrust				
11	114-0450	1	Hub-Pulley				

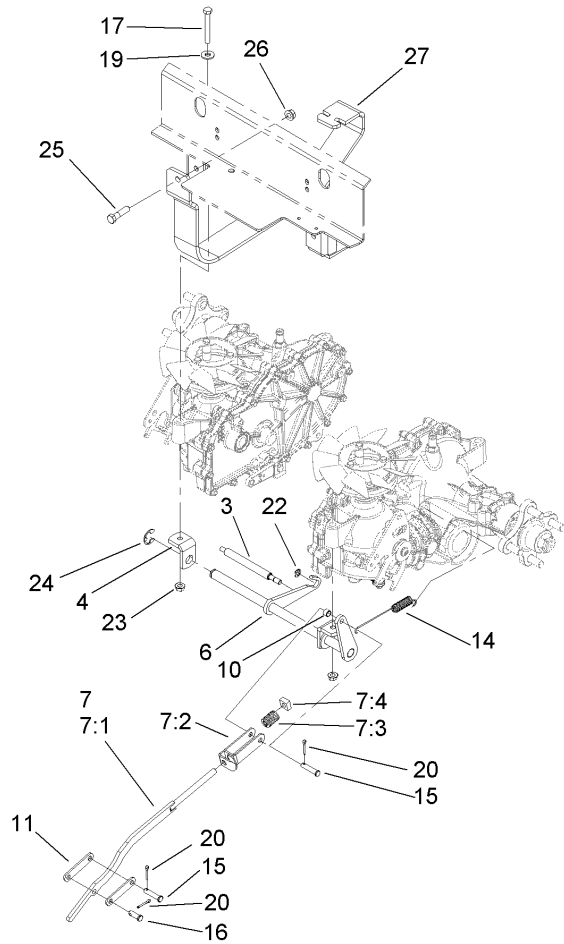 

Brake Linkage Assembly


Ref	Part No.	Qty.	Description				
3	103-9408	1	Bar-Equalizer				
4	103-9409	1	Bracket-Pivot, Brake				
6	109-4754	1	Bellcrank-Brake				
7		1	Brake Link ASM				
7:1	109-0227	1	Link-Brake				
7:2	103-9938	1	Clevis-Brake				
7:3	103-9925	1	Spring-Brake				
7:4	103-9926	1	Nut-Square				
10	1-633545	1	Spacer				
11	109-0223	2	Link-Center, Over				
14	109-2861	1	Spring-Return, Brake				
15	283-6	2	Pin-Clevis				
16	283-75	1	Pin-Clevis				
17	322-12	2	Screw-HH				
19	3256-3	2	Washer-Flat				
20	3272-10	3	Pin-Cotter				
22	32120-35	1	Ring-Retaining, EXT				
23	32128-20	2	Nut-HF				
24	32151-48	1	E-Ring				
25	323-8	2	Screw-HH				
26	3290-357	2	Nut-HHF, Whiz				
27	114-0469	2	Guard-Transmission				

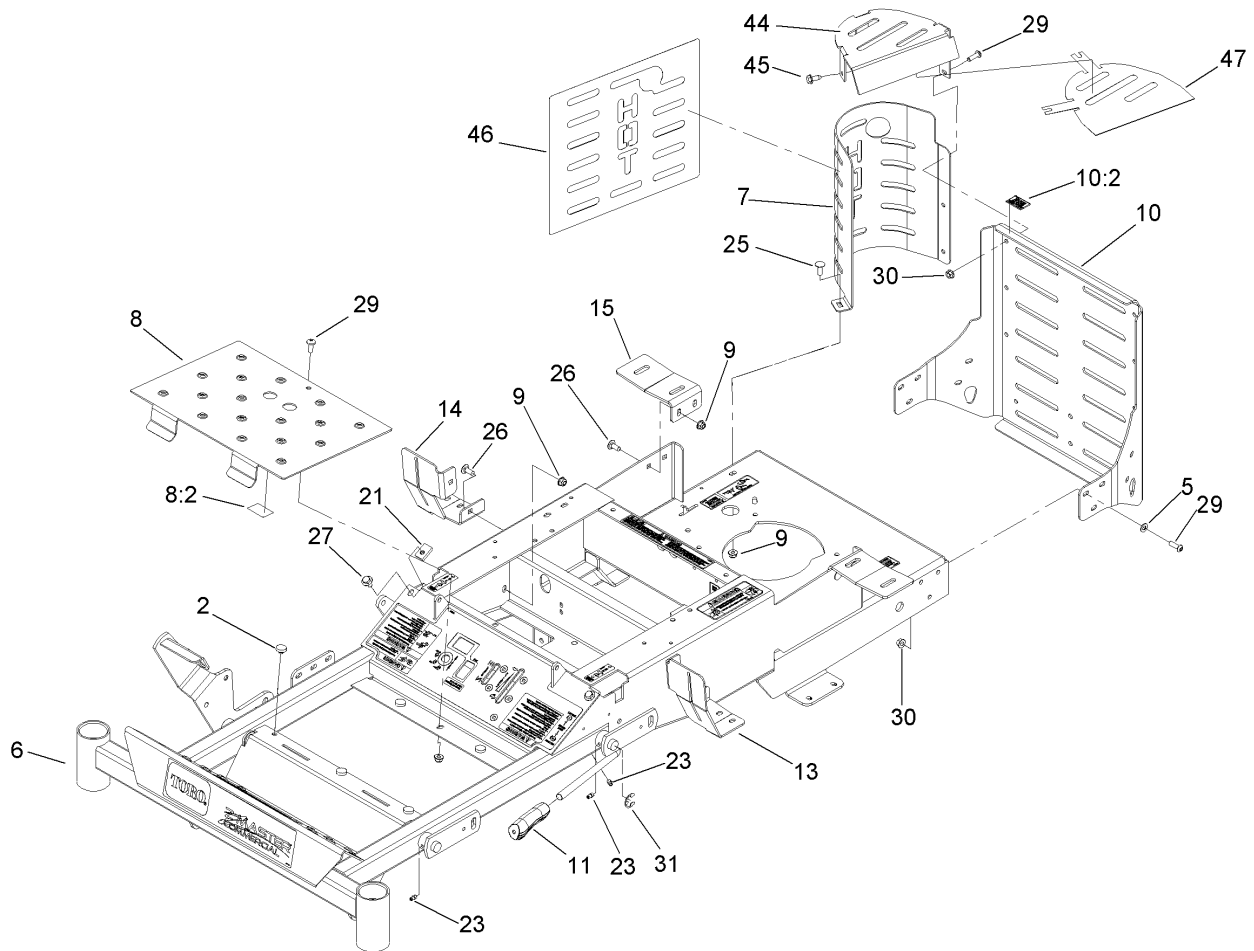 

Front Frame Assembly


Ref	Part No.	Qty.	Description
2	1-513658	5	Bumper
5	3256-23	6	Washer-Flat
6	112-3796	1	Frame ASM W/Decals, Ce
7	103-9343-03	1	Guard-Muffler
8	112-3821	1	Floor Pan ASM
8:2	98-1977	1	Decal-Warning
9	104-8300	19	Nut-Flange, NI
10	112-3822	1	Rear Guard ASM
10:2	93-8069	1	Decal-Surface, Hot
11	109-0375	1	Grip-Lever, Brake
13	109-2421-03	1	Mount-Tank, Fuel (LH)
14	109-2422-03	1	Mount-Tank, Fuel (RH)
15	109-2429-03	2	Bracket-Fuel Tank, Rear
21	109-2605	2	Motion Stop
23	302-19	5	Fitting-Grease
25	3230-22	1	Screw-CARR
26	3230-22	8	Screw-CARR
27	3234-7	2	Screw-HHF
29	3274-104	11	Screw-HSBH
30	32128-20	11	Nut-HF
31	32151-48	1	E-Ring
44	114-0481-03	1	Shield Heat
45	32144-70	2	Screw-HWHTF
46	114-0479	1	Guard-Foil

Ref	Part No.	Qty.	Description
47	114-0478	1	Shield-Foil

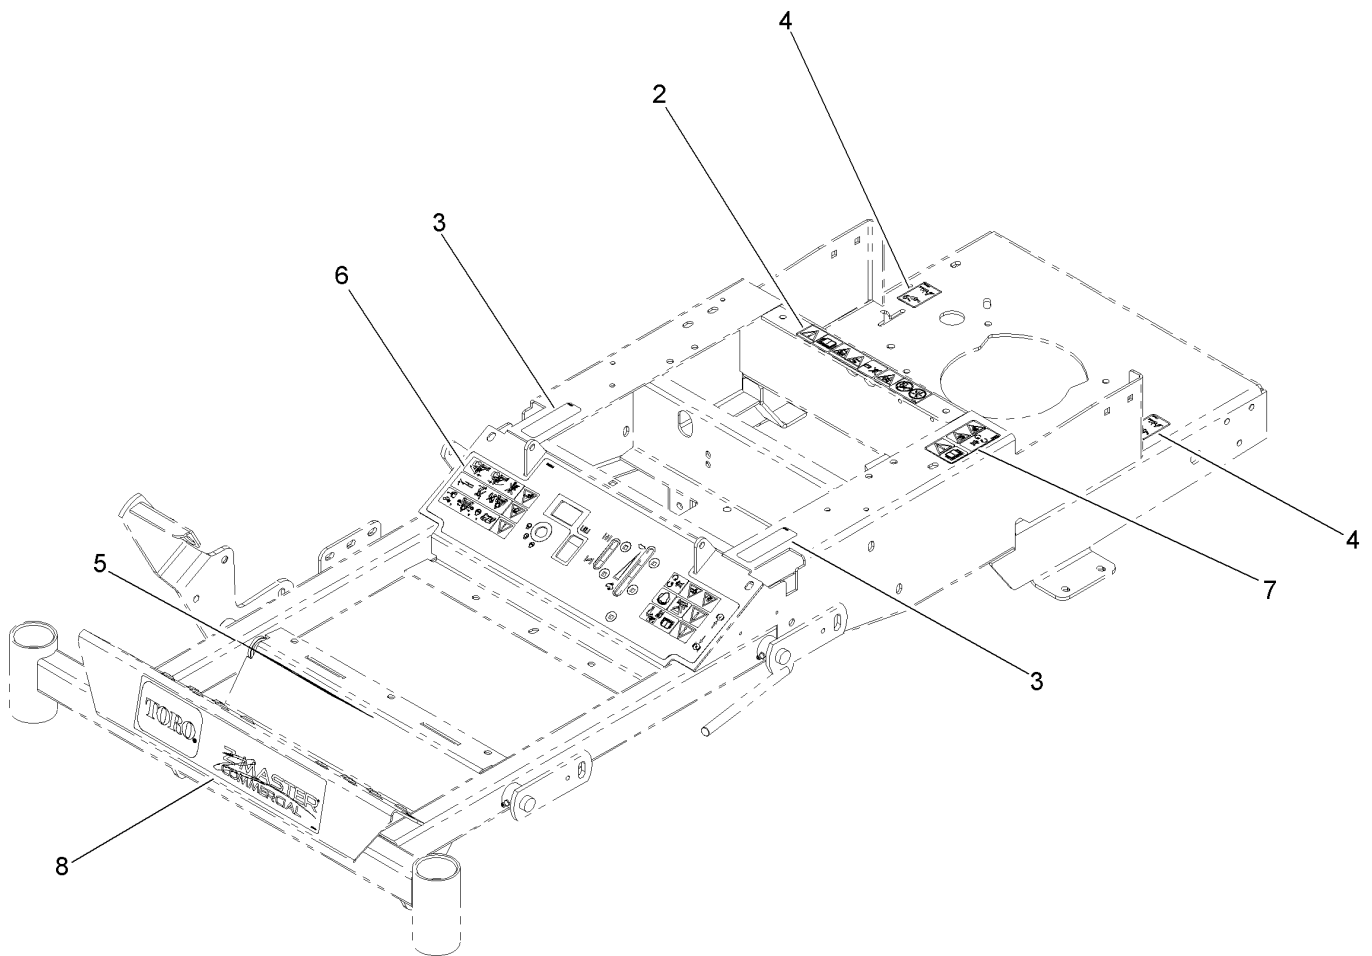 


Frame Decal Assembly No. 112-3796

Ref	Part No.	Qty.	Description				
2	112-3856	1	Decal-Danger Battery, Ce				
3	99-8936	2	Decal-Control, Motion				
4	112-3854	2	Decal-Transport, Ce				
5	112-3850	1	Decal-Danger Slope, Ce				
6	112-3860	1	Decal-Console, Ce				
7	112-3857	1	Decal-Danger, Ce				
8	112-3837	1	Decal				

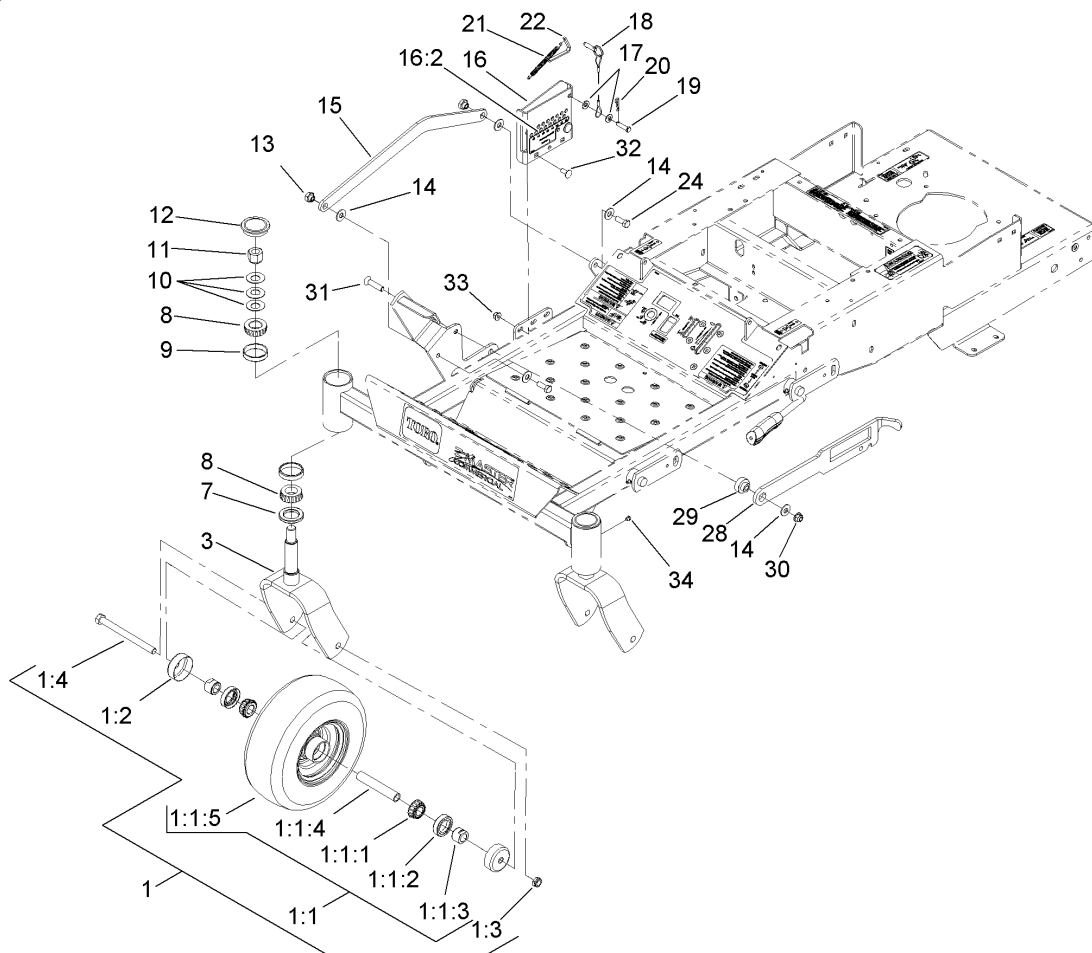 

Caster and Height-of-Cut Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-3810	2	Wheel And Bearing ASM	19	283-6	1	Pin-Clevis
1:1	110-9964	1	Wheel Bearing ASM	20	1-806003	1	Pin-Hair
1:1:1	1-633585	2	Bearing-Cone, Taper	21	109-2416	1	Spring-Adjust, Height
1:1:2	103-0063	2	Seal-Caster	22	109-2620	1	Pawl-Control, Height
1:1:3	103-3051	2	Spacer-Nut	24	323-6	2	Screw-HH
1:1:4	103-3157	1	Axle-Caster	28	109-2410	1	Bar-Adjust, Height
1:1:5	110-9965	1	Wheel And Tire ASM	29	103-9934	1	Bushing
1:2	103-2768	2	Guard-Seal	30	104-8301	1	Nut-Flange, NI
1:3	3296-45	1	Nut-Lock, NI	31	3289-19	1	Screw-FH
1:4	325-20	1	Screw-HH	32	3230-23	2	Screw-CARR
3	103-8618-01	2	Fork-Caster	33	104-8300	2	Nut-Flange, NI
7	1-543511	2	Seal-Grease	34	1-811010	2	Plug
8	1-543509	4	Bearing-Roller, Tapered				
9	1-543508	4	Cup-Bearing				
10	1-633508	6	Washer-Bellville				
11	3296-51	2	Nut-Lock, NI				
12	103-4882	2	Cap-Grease				
13	103-9933	2	Nut-Shoulder				
14	63-8410	5	Washer				
15	103-9932	1	Link-Control, Deck				
16	112-3820	1	Height Adjust ASM				
16:2	112-3855	1	Decal-Deck Height, Ce				
17	1-303334	2	Washer-Spring				
18	109-3323	1	Height Pin W/Lanyard ASM				

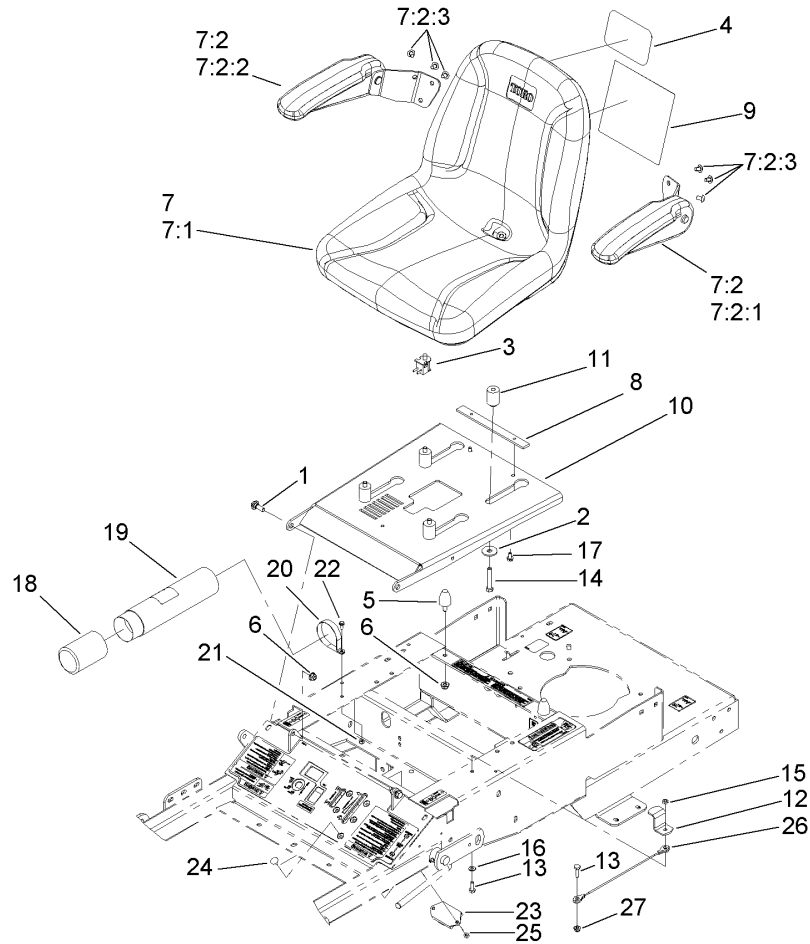 

Seat Assembly


Ref	Part No.	Qty.	Description
1	27-0410	2	Screw-Shoulder
2	63-8410	4	Washer
3	82-2190	1	Switch-Bail
4	94-2579	1	Decal
5	103-9376	2	Bumper-Seat
6	104-8300	4	Nut-Flange, NI
7	112-3845	1	Seat (With Arm Rests)
7:1	112-3846	1	Seat
7:2	108-6163	1	Armrest Kit
7:2:1	110-6569	1	LH Armrest Kit
7:2:2	110-6570	1	RH Armrest Kit
7:2:3	108-6179	6	Screw-HSBH
8	109-2427-03	1	Bar-Stop, Seat
9	112-3851	1	Decal-Service Aid, Ce
10	109-2607-03	1	Bracket-Seat
11	109-2608	4	Spacer
12	109-3519	1	Bracket-Hold Down, Seat
13	321-6	2	Screw-HH
14	322-10	4	Screw-HH
15	3220-1	1	Nut-Jam
16	3256-63	1	Washer-Flat
17	32144-4	2	Screw-HWH
18	104-7048	1	Cap-Housing
19	104-7050	1	Housing-Manual

Ref	Part No.	Qty.	Description
20	2412-120	1	R-Clamp
21	3296-2	1	Nut-Lock
22	3290-321	1	Screw-HWH
23	100-6186	1	Module-Delay, Seat
24	1-807513	1	Bolt-CARR
25	3296-2	1	Nut-Lock
26	109-2628	1	Cable-Stop, Seat
27	104-7201	1	Nut-HF

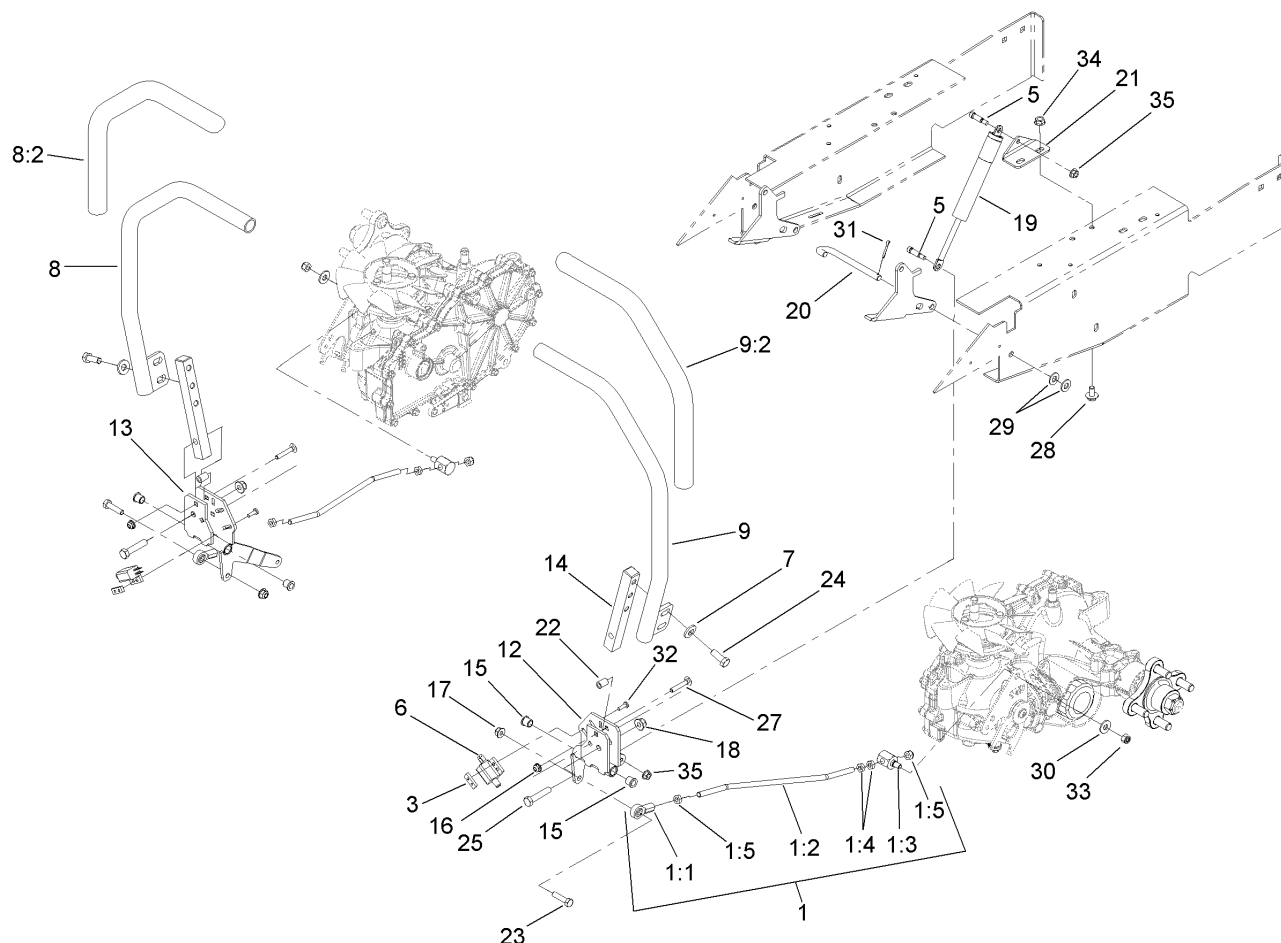 


Motion Control Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
②1		2	Steering Rod ASM	22	1-633545	4	Spacer
1:1	1-543017	1	Balljoint-RH	23	322-6	2	Screw-HH
1:2	103-9407	1	Rod-Steering, LH	24	323-6	4	Screw-HH
1:3	103-9373	1	Trunnion	25	323-9	2	Screw-HH
1:4	3220-2	3	Nut-Jam	27	3229-4	4	Screw-CARR
1:5	3296-4	1	Nut-Lock	28	3234-7	4	Screw-HHF
3	1-633181	2	Plate-Tapped	29	3256-24	2	Washer-Flat
5	1-809057	4	Screw-HSH	30	3256-3	2	Washer-Flat
6	65-7410	2	Switch-Pole, Single	31	3272-10	2	Pin-Cotter
7	98-5975	4	Washer-Belleville	32	3290-500	4	Screw-PPH
8	112-3814	1	RH Control Lever ASM	33	3296-4	2	Nut-Lock
8:2	108-5213	1	Grip-Foam	34	32128-20	4	Nut-HF
9	112-3815	1	LH Control Lever ASM	35	32128-33	4	Nut-HF
9:2	108-5213	1	Grip-Foam				
12	103-9411	1	Control-Steering, RH				
13	103-9413	1	Control-Steering, LH				
14	103-9414	2	Mount-Post, Lever				
15	103-9928	4	Bearing				
16	104-7201	4	Nut-HF				
17	104-8300	2	Nut-Flange, NI				
18	104-8301	2	Nut-Flange, NI				
19	109-2339	2	Damper-Control, Motion				
20	109-2423	2	Shaft-Pivot, Control				
21	109-2428	2	Bracket-Damper				

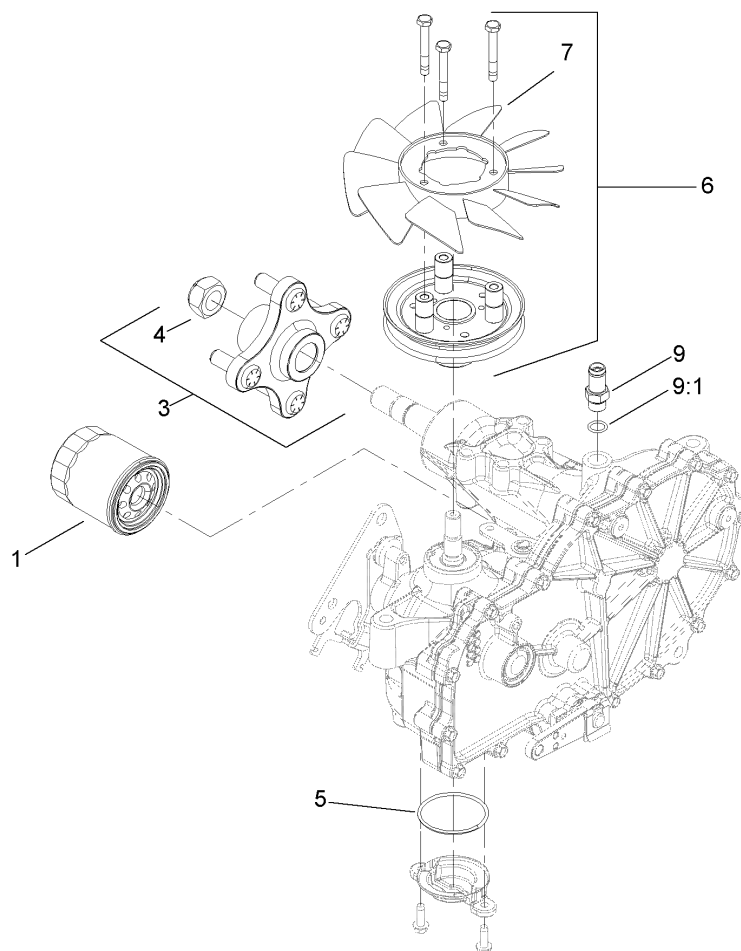 


RH Transmission Assembly No. 109-2240

Ref	Part No.	Qty.	Description				
1	109-3321	1	Element-Oil Filter, HYD				
①2	109-3537	1	Complete Seal Kit				
3	109-3538	1	Hub-Kit				
4	109-3536	1	Nut-Hub				
5	109-3540	1	O-Ring-Seal, Charge Cover				
6	109-3541	1	Fan And Pulley Kit				
7	109-3542	1	Fan				
9	109-3278	1	Adapter-Straight				
9:1	1-603921	1	O-Ring				

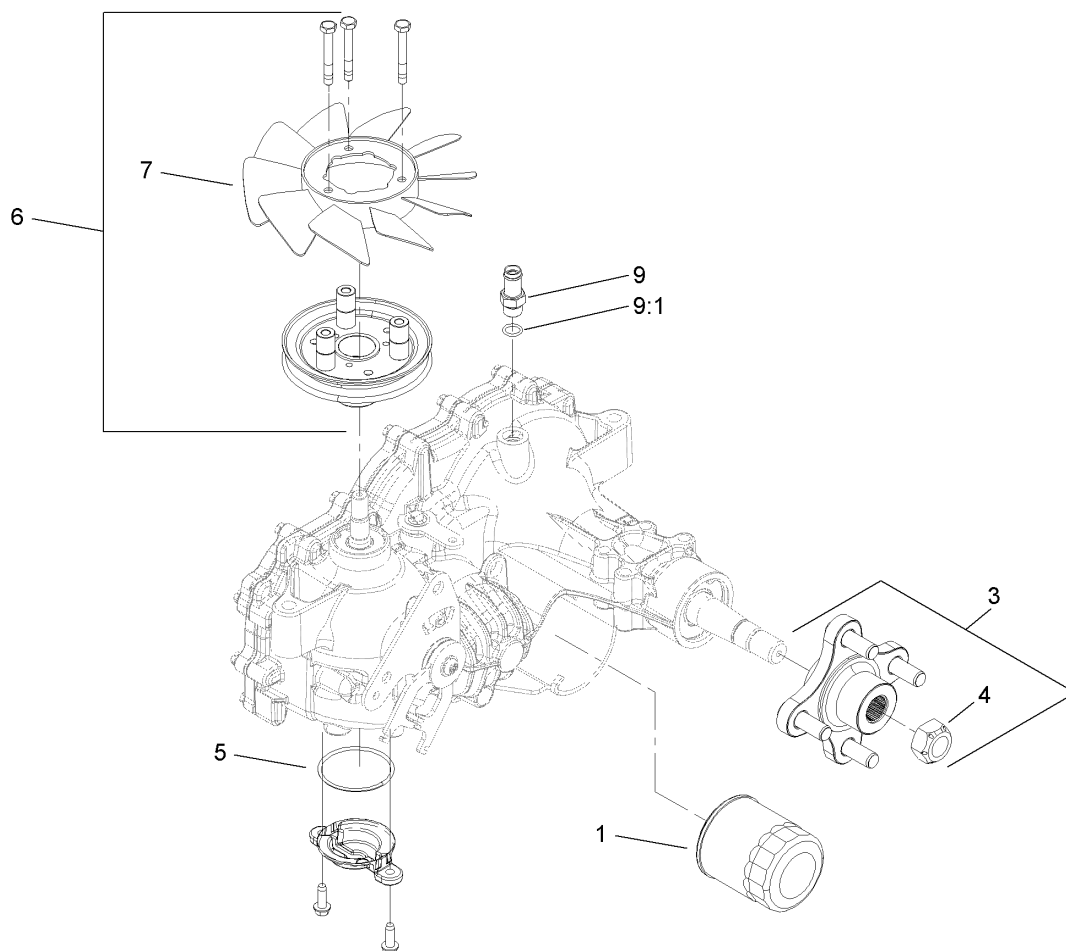 

LH Transmission Assembly No. 109-2241


Ref	Part No.	Qty.	Description				
1	109-3321	1	Element-Oil Filter, HYD				
①2	109-3537	1	Complete Seal Kit				
3	109-3538	1	Hub-Kit				
4	109-3536	1	Nut-Hub				
5	109-3540	1	O-Ring-Seal, Charge Cover				
6	109-3541	1	Fan And Pulley Kit				
7	109-3542	1	Fan				
9	109-3278	1	Adapter-Straight				
9:1	1-603921	1	O-Ring				

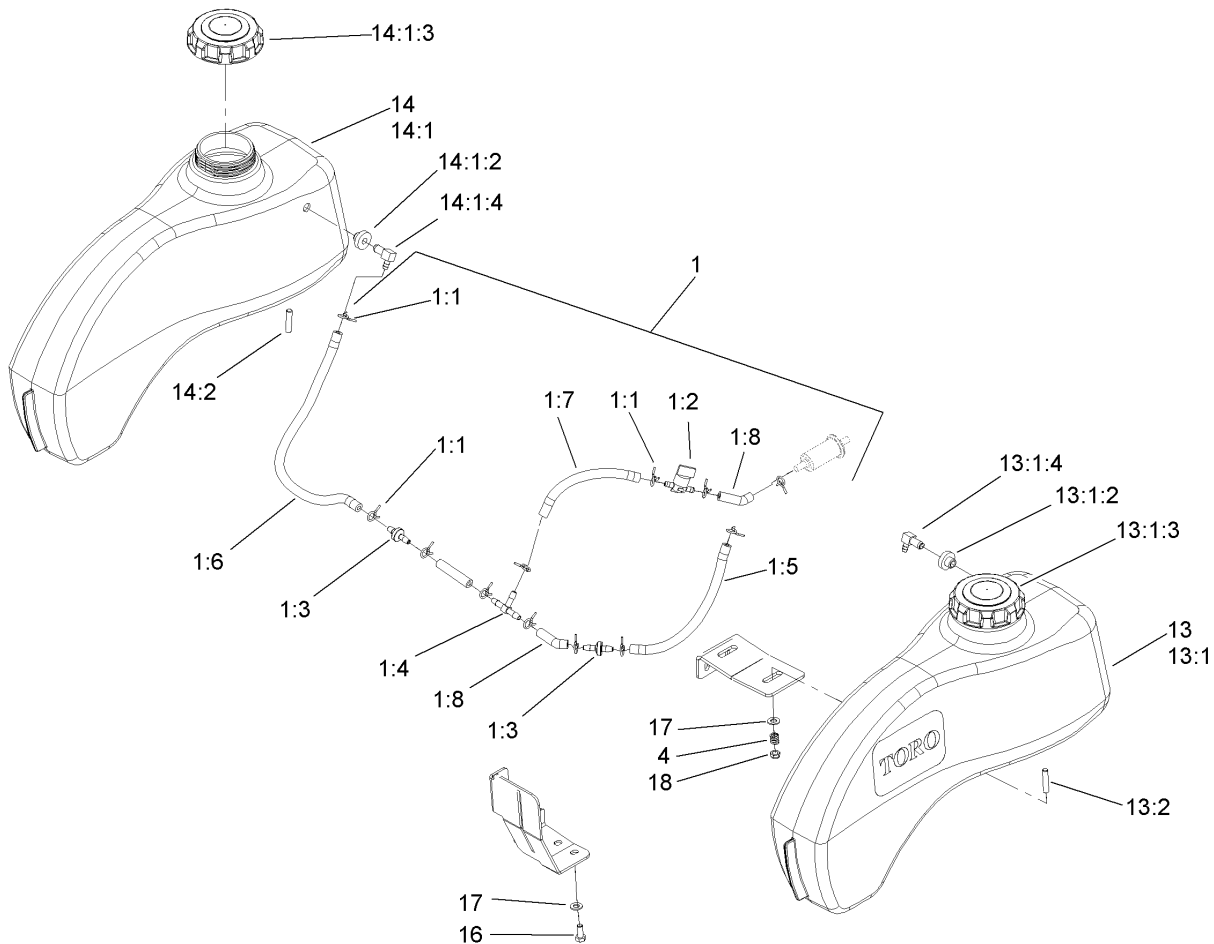 

Fuel Tank Assembly


Ref	Part No.	Qty.	Description
1		1	Fuel Line ASM
1:1	1-303077	12	Clamp
1:2	1-603770	1	Valve-Fuel
1:3	99-5000	2	Valve-Check, Fuel
1:4	99-5005	1	Fitting-Tee, Barbed
1:5	107-7684	1	Hose-Fuel
1:6	108-4582	1	Hose-Fuel
1:7	109-0293	1	Hose-Fuel
1:8	109-0304	3	Hose-Fuel
4	1-633349	4	Spring-Tank, Fuel
13	112-3780	1	LH Tank ASM (W/Studs)
13:1		1	LH Tank ASM
13:1:2	104-7789	1	Bushing
13:1:3	109-0346	1	Cap-Fuel, Gas
13:1:4	109-2420	1	Fitting-Fuel (W/Line And Screen)
13:2	1-633023	2	Stud
14	112-3783	1	RH Tank ASM (W/Studs)
14:1		1	RH Tank ASM
14:1:2	104-7789	1	Bushing
14:1:3	109-0346	1	Cap-Fuel, Gas
14:1:4	109-2420	1	Fitting-Fuel (W/Line And Screen)
14:2	1-633023	2	Stud
16	322-3	2	Screw-HH
17	3256-23	6	Washer-Flat

Ref	Part No.	Qty.	Description
18	3296-47	4	Nut-Lock, NI

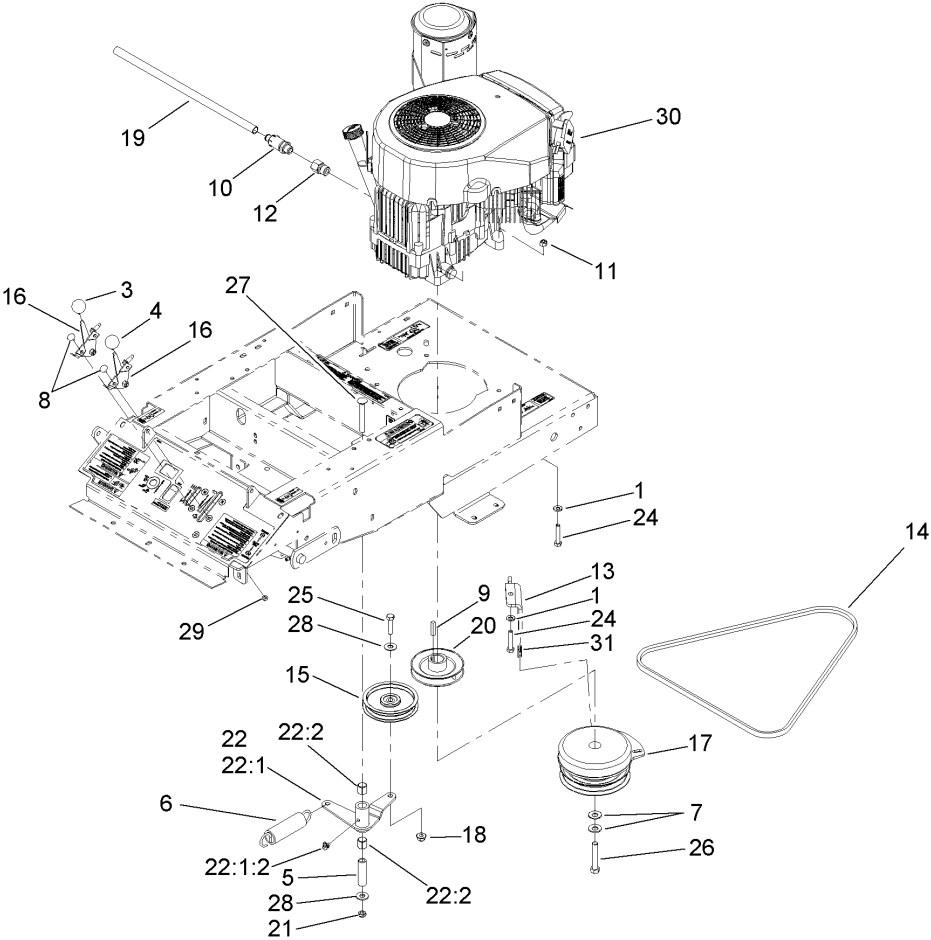 


Engine Mounting Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	1-303334	4	Washer-Spring	24	322-9	4	Screw-HH
3	1-513592	1	Knob-Ball	25	323-8	1	Screw-HH
4	1-513593	1	Knob-Ball, Black	26	3212-10	1	Screw-HH
5	1-603384	1	Bushing-Pivot, Idler	27	3231-10	1	Screw-CARR
6	108-4056	1	Spring-Extension	28	3256-4	2	Washer-Flat
7	1-603610	2	Washer-Spring	29	3296-2	4	Nut-Lock
8	1-807513	4	Bolt-CARR	30		1	Engine-Kawasaki, FH580V-As50-R
9	13-2840	1	Key-Square	31	109-3765	1	Bumper
10	92-6877	1	Valve-Drain, Oil				
11	3296-29	4	Nut-Lock, NI				
12	103-1966	1	Adapter				
13	103-9356-03	1	Rotation-Stop, Clutch				
14	112-3799	1	Belt-V				
15	103-9401	1	Idler				
16	103-9946	2	Throttle Control ASM				
17	103-9950	1	Clutch				
18	104-8301	1	Nut-Flange, NI				
19	106-7022	1	Tube-Drain, Oil				
20	109-0393	1	Pulley-Engine				
21	3296-59	1	Nut-Lock, NI				
22	109-3119	1	Idler Hydro ASM				
22:1		1	Arm-Idler				
22:1:2	302-40	1	Fitting-Grease				
22:2	1-513034	2	Sleeve-Bearing				

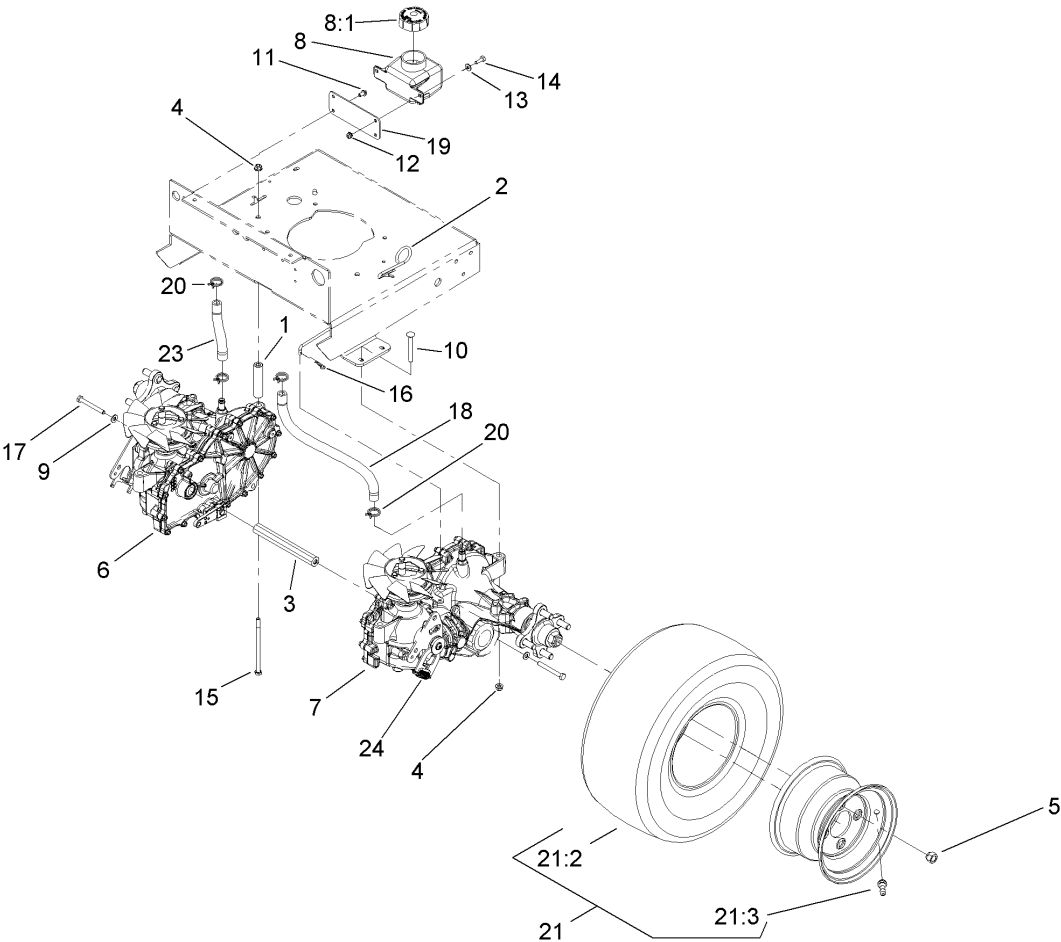 

Hydraulic Drive Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	103-9397	2	Spacer-Hydro	●21:99	107-2491	1	Tube-Tire
2	103-9380	2	Rod-Bypass, Hydro	23	109-3319	1	Hose-HYD
3	103-9398	1	Spacer-Axle	24	109-2631	2	Spring-Return, Neutral
4	104-8300	6	Nut-Flange, NI				
5	242-50	8	Nut-Lug				
6	109-2240	1	Transmission-RH				
7	109-2241	1	Transmission-LH				
8	109-2250	1	Vent-Tank, Hydro				
8:1	109-3320	1	Cap-Reservoir, Hydraulic				
9	98-5975	2	Washer-Belleville				
10	3230-9	4	Screw-CARR				
11	32144-4	2	Screw-HWH				
12	104-7201	2	Nut-HF				
13	3256-22	2	Washer-Flat				
14	321-4	2	Screw-HH				
15	1-800286	2	Screw-Hhc				
16	1-806003	2	Pin-Hair				
17	323-11	2	Screw-HH				
18	109-3459	1	Hose-HYD				
19	103-9350-03	1	Plate-Mount, Tank				
20	109-3322	4	Clamp-Hose				
21	112-3794	2	Wheel And Tire				
21:2	112-3797	1	Tire				
21:3	232-27	1	Stem-Valve				

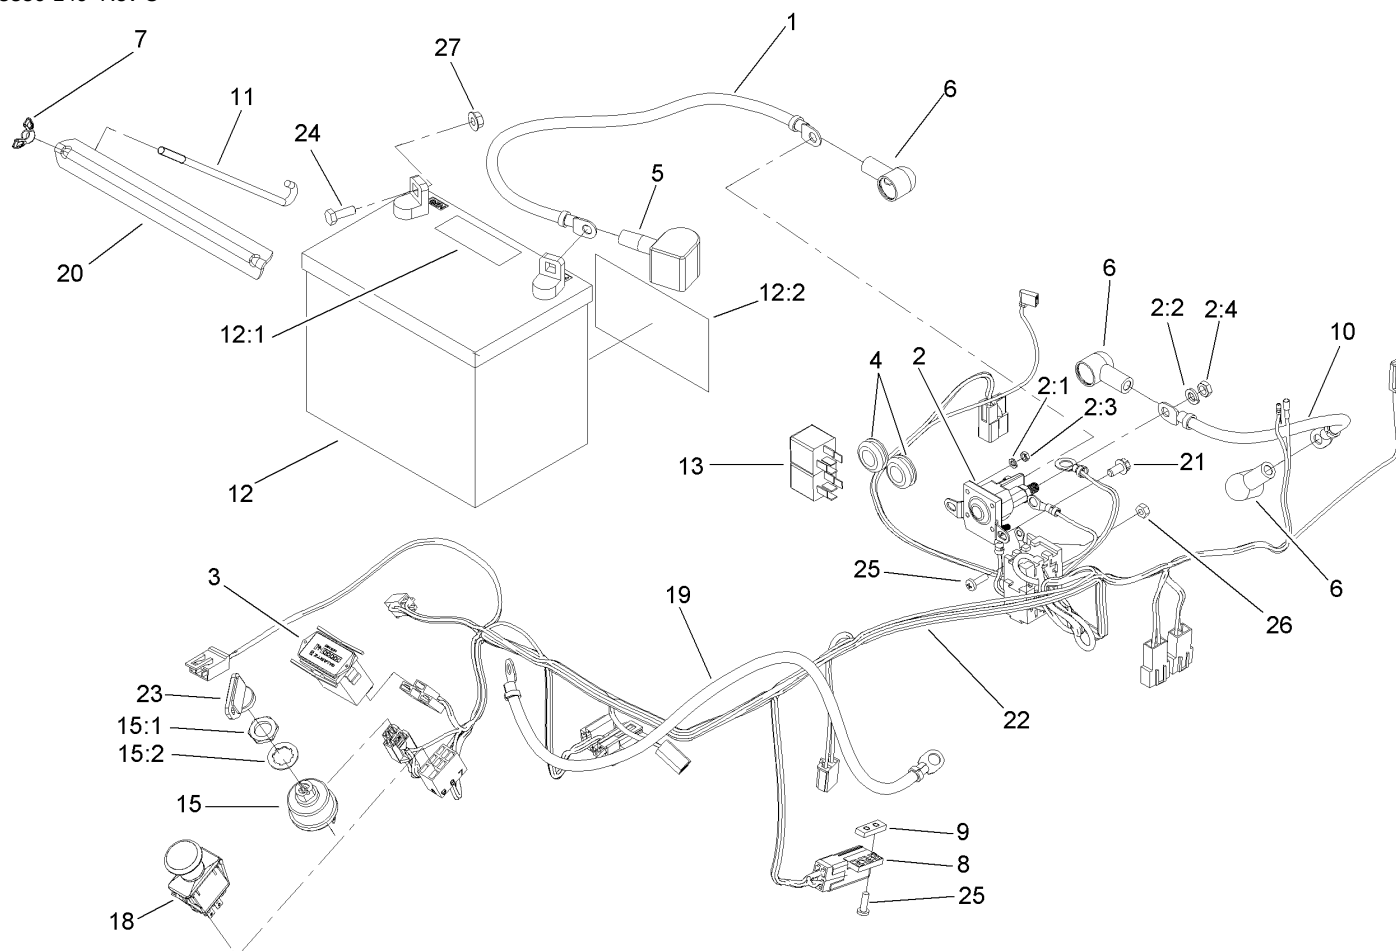 

Electrical Assembly


Ref	Part No.	Qty.	Description
1	1-513053	1	Cable-Battery, Positive
2	1-513075	1	Switch-Solenoid
2:1	3253-17	2	Washer-Lock
2:2	3253-4	2	Washer-Lock
2:3	3219-14	2	Nut-Hex
2:4	3220-2	2	Nut-Jam
3	1-513374	1	Meter-Hour
4	1-543296	2	Grommet
5	1-543391	1	Insulator-Battery
6	1-543393	3	Insulator-Solenoid
7	1-543792	2	Wingnut
8	1-633111	1	Switch
9	1-633181	1	Plate-Tapped
10	1-633306	1	Cable-Starter, Positive
11	1-633651	2	Bolt-Holddown
12	105-1692	1	Battery
12:1	104-4163	1	Decal-Battery
12:2	104-4164	1	Decal-Battery
13	1-643275	2	Relay
15	104-2541	1	Switch-Key
15:1	218-461	1	Nut-HH
15:2	3254-5	1	Washer-Tooth
18	103-5221	1	Switch-PTO
19	103-8355	1	Cable-Battery, Negative

Ref	Part No.	Qty.	Description
20	103-9944-03	1	Angle-Battery
21	32144-4	2	Screw-HWH
22	109-4112	1	Harness-Wire
23	63-8360	1	Key-Ignition
24	321-4	2	Screw-HH
25	3290-500	6	Screw-PPH
26	3296-2	4	Nut-Lock
27	32128-33	2	Nut-HF

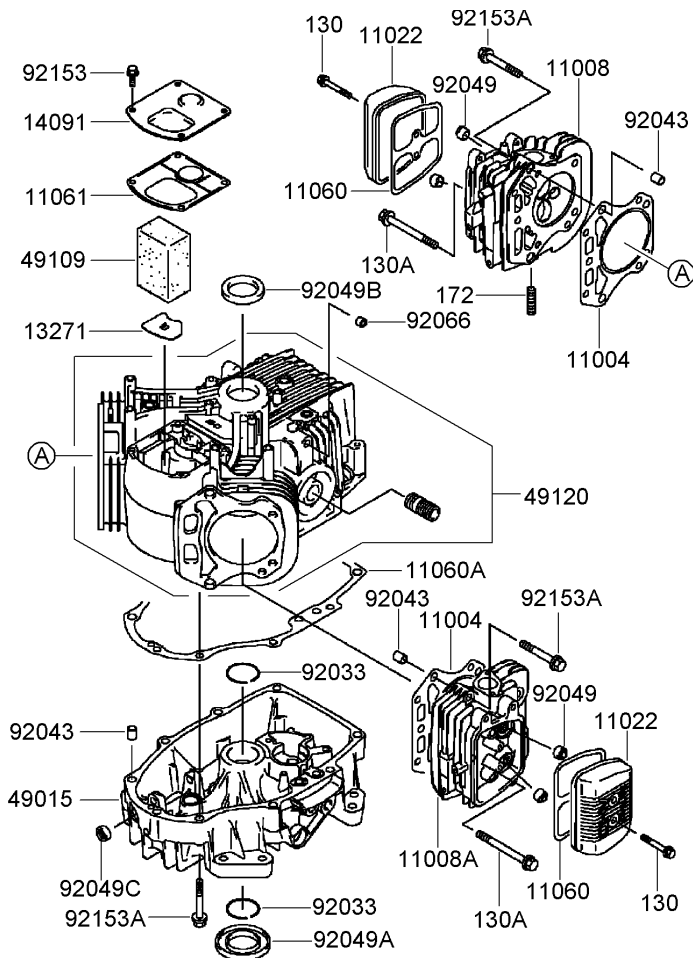 


Cylinder and Crankcase Assembly
Kawasaki FH580V-AS50-R

Ref	Part No.	Qty.	Description				
❶11004	11004-7016	2	Gasket-Head				
❶11008	11008-6043	1	Head-Cylinder, No. 1				
❶11008A	11008-7020	1	Head-Cylinder, No. 2				
❶11022	11022-7003	2	Case-Rocker				
❶11060	11060-7001	2	Gasket-Case, Rocker				
❶11060A	11060-7008	1	Gasket-Cover, Crankcase				
❶11061	11061-7001	1	Gasket-Breather				
❶13271	13271-7016	1	Plate				
❶14091	14091-7006	1	Cover				
❶49015	49015-6253	1	Cover-Crankcase				
❶49109	49109-7002	1	Element-Breather				
❶49120	49120-7023	1	Crankcase				
❶92033	92033-7003	2	Ring-Snap				
❶92043	92043-7001	6	Pin				
❶92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)				
❶92049A	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)				
❶92049B	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)				
❶92049C	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)				
❶92066	92066-7002	1	Plug				
❶92153	92153-7043	4	Bolt (6X12)				
❶92153A	92153-7054	17	Bolt, 8X50				
❶130	130B0640	4	Bolt-Flanged (6X40)				
❶130A	130CA0875	2	Bolt-Flanged (8X75)				
❶172	172G0818	4	Bolt-Stud (8X18)				

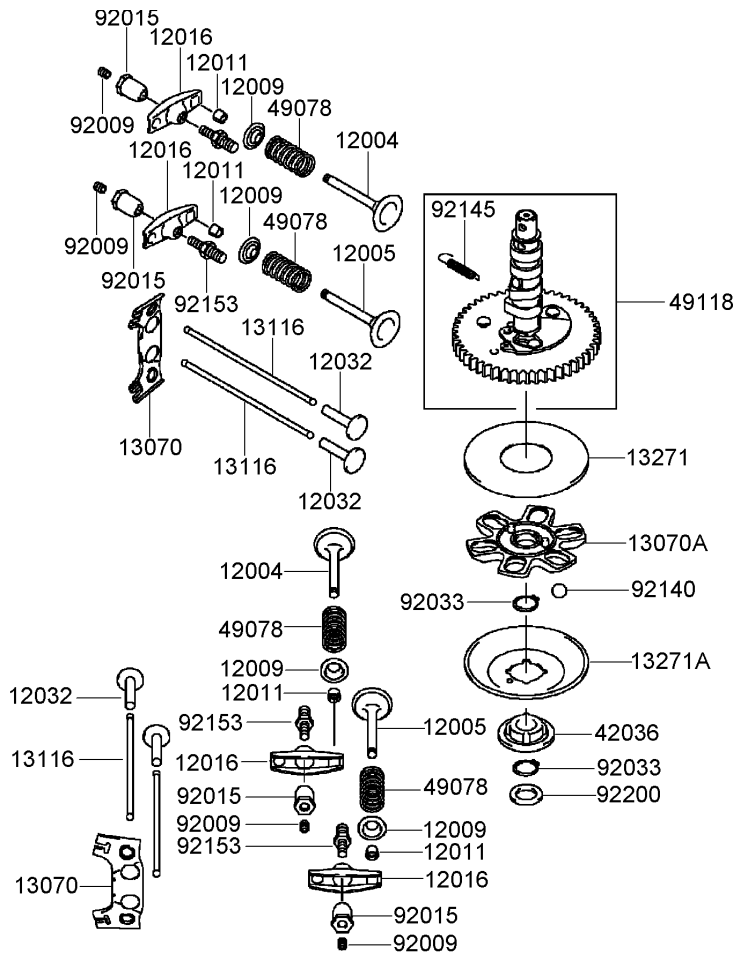 

Valve and Camshaft Assembly
Kawasaki FH580V-AS50-R


Ref	Part No.	Qty.	Description				
❶12004	12004-7003	2	Valve-Intake				
❶12005	12005-7003	2	Valve-Exhaust				
❶12009	12009-7001	4	Retainer-Spring, Valve				
❶12011	12011-2056	8	Collet				
❶12016	12016-7008	4	Arm-Rocker				
❶12032	12032-7001	4	Tappet				
❶13070	13070-7001	2	Guide				
❶13070A	13070-7004	1	Guide				
❶13116	13116-2057	4	Rod-Push				
❶13271	13271-7007	1	Plate				
❶13271A	13271-7021	1	Plate-Governor				
❶42036	42036-7010	1	Sleeve				
❶49078	49078-7001	4	Spring-Valve, Engine				
❶49118	49118-7004	1	Camshaft				
❶92009	92009-2341	4	Screw				
❶92015	92015-2253	4	Nut				
❶92033	92033-7001	2	Ring-Snap				
❶92140	92140-7002	6	Ball				
❶92145	92145-7001	1	Spring				
❶92153	92153-7019	4	Bolt				
❶92200	92200-7001	1	Washer				

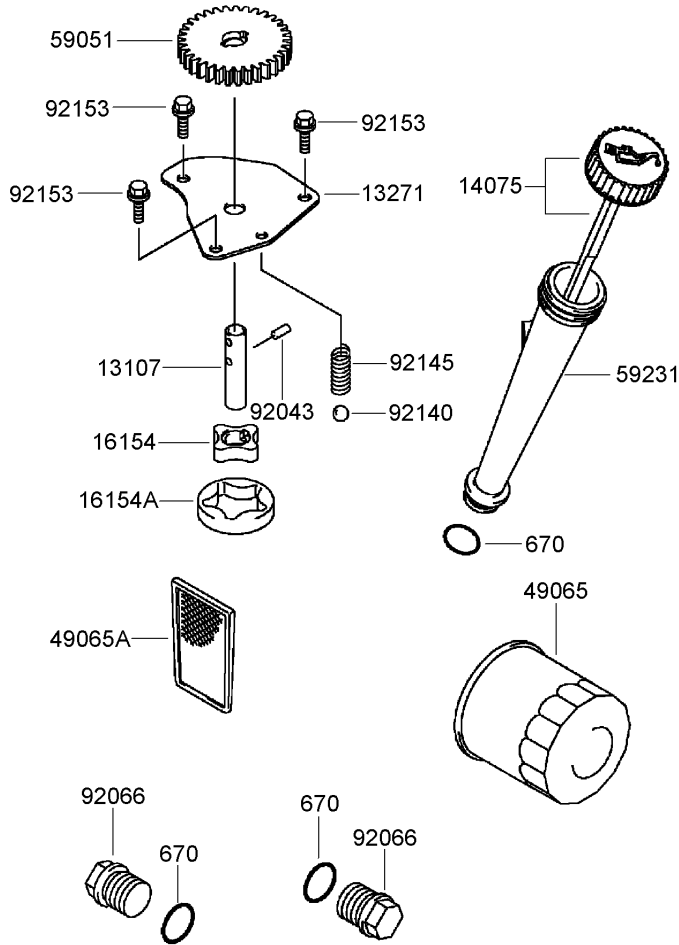 

Lubrication Equipment Assembly


Kawasaki FH580V-AS50-R

Ref	Part No.	Qty.	Description				
1	13107-7009	1	Shaft				
2	13271-7017	1	Plate				
3	14075-7009	1	Cap ASM				
4	16154-2053	1	Rotor-Pump (In)				
5	16154-2054	1	Rotor-Pump (Out)				
6	49065-2078	1	Filter-Oil				
7	49065-7004	1	Filter-Oil				
8	59051-7011	1	Gear-Spur				
9	59231-7005	1	Filler				
10	92043-7003	2	Pin				
11	92066-7003	2	Plug				
12	92140-7003	1	Ball				
13	92145-7002	1	Spring				
14	92153-7043	3	Bolt (6X12)				
15	670D2016	3	O-Ring (16Mm)				

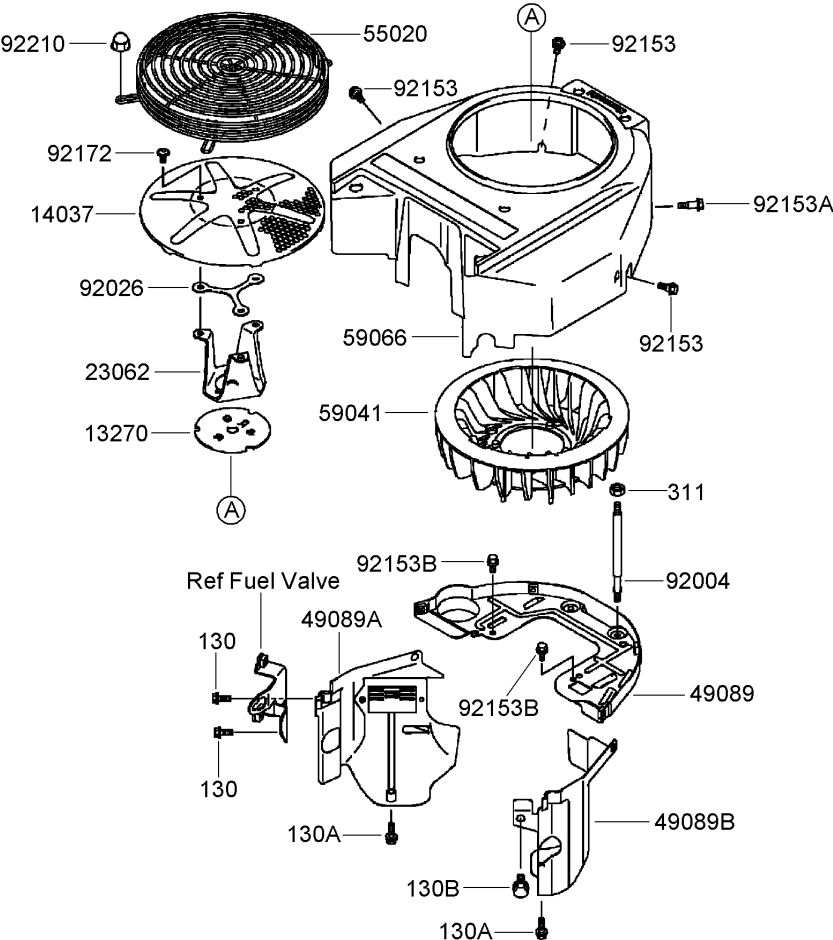 

Cooling Equipment Assembly
Kawasaki FH580V-AS50-R


Ref	Part No.	Qty.	Description				
❸13270	13270-7007	1	Plate				
❸14037	14037-7020-9H	1	Screen				
❸23062	23062-7010	1	Bracket				
❸49089	49089-7032	1	Shroud-Engine				
❸49089A	49089-7042	1	Shroud-Engine				
❸49089B	49089-7043	1	Shroud-Engine				
❸55020	55020-7009-9H	1	Guard				
❸59041	59041-7012	1	Fan				
❸59066	59066-7037	1	Housing-Fan				
❸92004	92004-7006	2	Stud				
❸92026	92026-7007	1	Spacer				
❸92153	92153-7007	3	Bolt				
❸92153A	92153-7008	1	Bolt				
❸92153B	92153-7043	2	Bolt (6X12)				
❸92172	92172-7029	3	Screw, Socket (6X12)				
❸92210	92210-0003	4	Nut				
❸130	130B0616	2	Bolt-Flanged (6X16)				
❸130A	130B0625	2	Bolt-Flanged (6X25)				
❸130B	130B0816	1	Bolt-Flanged (8X16)				
❸311	311B0600	2	Nut-Hex (6Mm)				

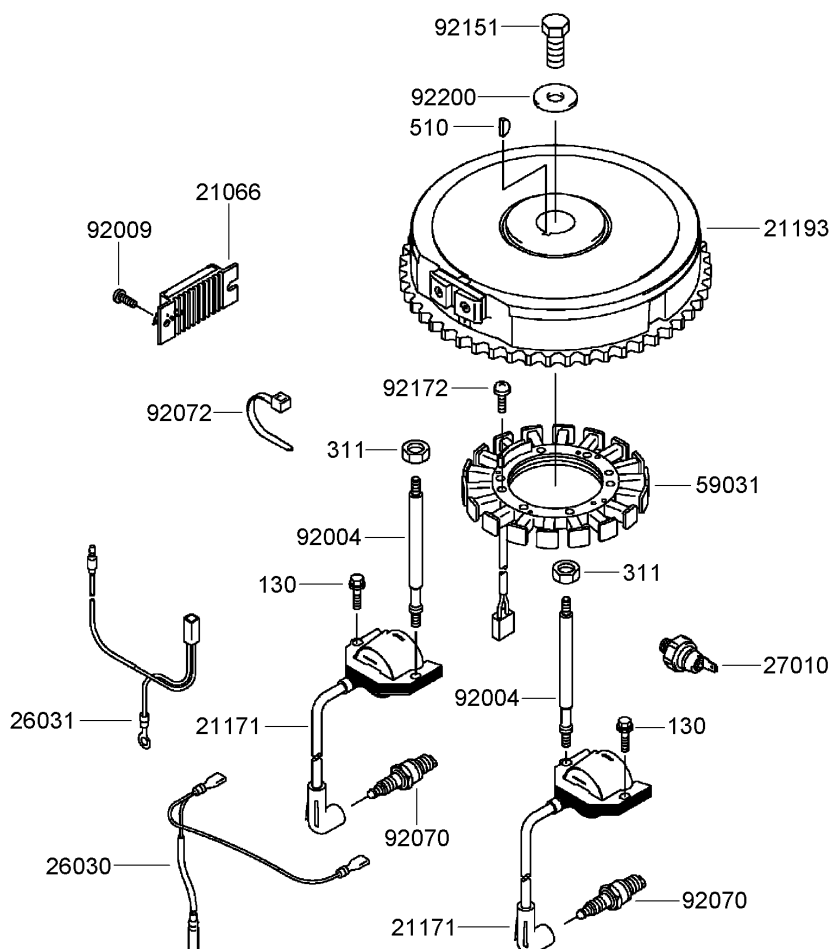 

Electric Equipment Assembly

Kawasaki FH580V-AS50-R


Ref	Part No.	Qty.	Description				
⑨21066	21066-7011	1	Regulator-Voltage				
⑨21171	21171-7013	2	Ignition Coil ASM				
⑨21193	21193-7007	1	Flywheel ASM				
⑨26030	26030-7001	1	Harness				
⑨26031	26031-7012	1	Harness				
⑨27010	27010-7001	1	Switch				
⑨59031	59031-7009	1	Coil-Charging				
⑨92004	92004-7009	2	Stud				
⑨92009	92009-2308	1	Screw				
⑨92070	92070-7003	2	Plug-Spark (R C J 8 Y, Solid)				
⑨92072	92072-7003	3	Band				
⑨92151	92151-2097	1	Bolt (12X30)				
⑨92172	92172-7018	4	Screw (5X20)				
⑨92200	92200-7002	1	Washer				
⑨130	130B0620	2	Bolt-Flanged (6X20)				
⑨311	311B0600	2	Nut-Hex (6Mm)				
⑨510	510A5100	1	Key-Woodruff				

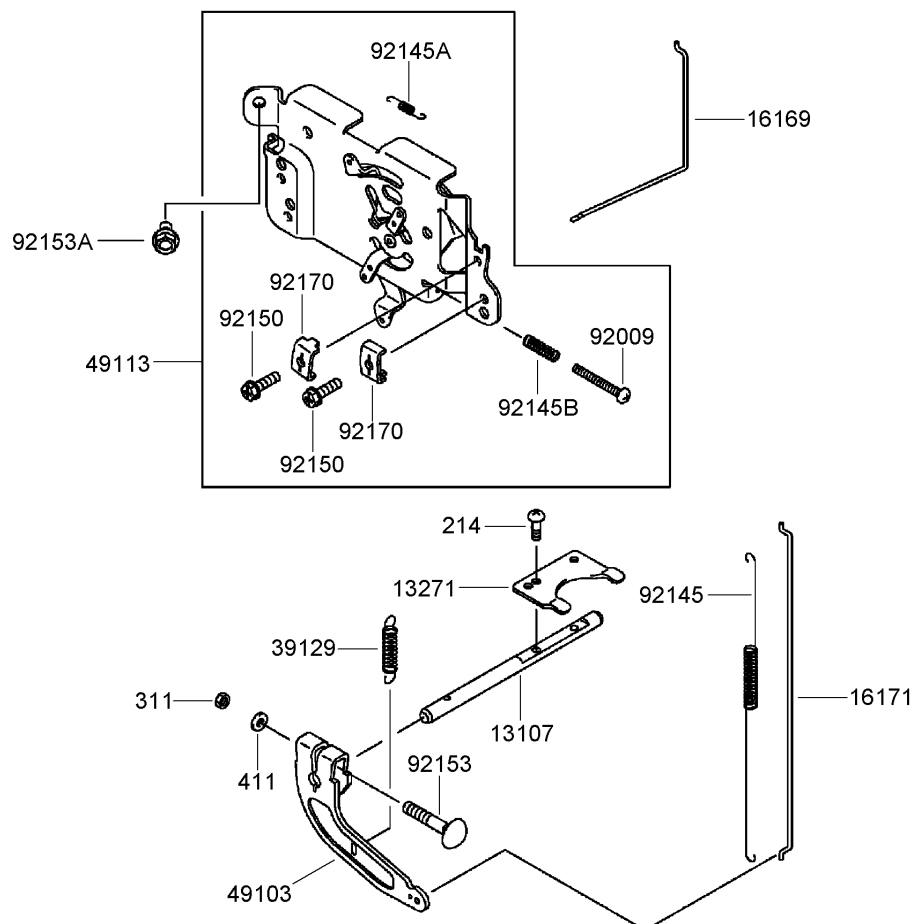 

Control Equipment Assembly


Kawasaki FH580V-AS50-R

Ref	Part No.	Qty.	Description				
③13107	13107-7010	1	Shaft				
③13271	13271-7032	1	Plate				
③16169	16169-7010	1	Link-Choke				
③16171	16171-7001	1	Link				
③39129	39129-7003	1	Spring-Governor				
③49103	49103-7004	1	Arm-Governor				
③49113	49113-7011	1	Panel-Control				
③92009	92009-7007	1	Screw (4X35)				
③92145	92145-7003	1	Spring				
③92145A	92145-7004	1	Spring				
③92145B	92145-7005	1	Spring				
③92150	92150-2182	2	Bolt (5X18)				
③92153	92153-7033	1	Bolt (6X35)				
③92153A	92153-7043	2	Bolt (6X12)				
③92170	92170-7001	2	Clamp				
③214	214B0408	2	Screw-Pan (4X8)				
③311	311B0600	1	Nut-Hex (6Mm)				
③411	411B0600	1	Washer-Plain (6Mm)				

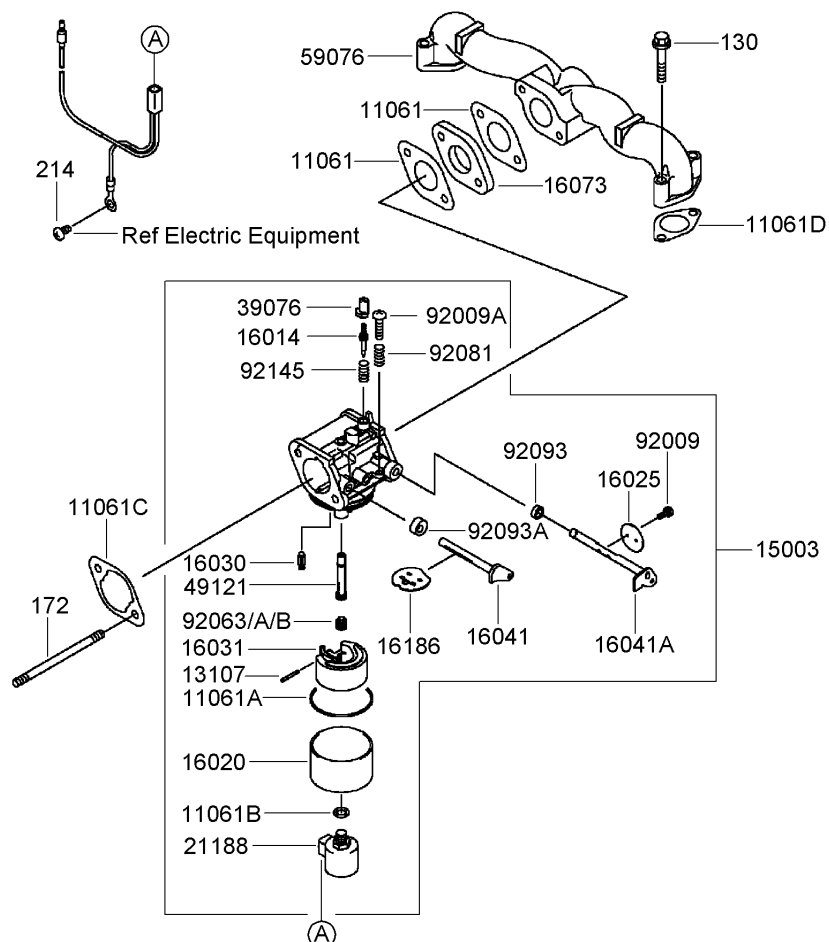 


Carburetor Assembly Kawasaki FH580V-AS50-R

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
①11061	11061-7004	2	Gasket-Insulator	⑨2063B	92063-7062	1	Jet-Main No. 110
①11061A	11061-7009	1	Gasket-Chamber	⑨2081	92081-2234	1	Spring
①11061B	11061-7010	1	Gasket-Screw	⑨2093	92093-2100	1	Seal
①11061C	11061-7018	1	Gasket-Cleaner, Air	⑨2093A	92093-7003	1	Seal
①11061D	11061-7019	2	Gasket	⑨2145	92145-7015	1	Spring
①13107	13107-7018	1	Shaft	⑨130	130B0635	4	Bolt-Flanged (6X35)
①15003	15003-7100	1	Carburetor ASM	⑨172	172G0690	2	Bolt-Stud (6X90)
①16014	16014-7007	1	Screw-Air, Pilot	⑨214	214B0510	1	Screw-Pan (5X10)
①16020	16020-7003	1	Chamber-Float				
①16025	16025-7006	1	Valve-Throttle				
①16030	16030-7003	1	Valve-Float				
①16031	16031-7002	1	Float				
①16041	16041-7016	1	Shaft-Choke, Carburetor				
①16041A	16041-7018	1	Shaft-Throttle, Carburetor				
①16073	16073-7007	1	Insulator				
①16186	16186-7004	1	Choke Valve ASM				
①21188	21188-7002	1	Solenoid				
①39076	39076-7001	1	Limiter				
①49121	49121-7004	1	Nozzle-Main				
①59076	59076-7001	1	Manifold-Intake				
①92009	92009-2083	2	Screw				
①92009A	92009-2349	1	Screw				
①92063	92063-7037	1	Jet-Main (No. 105)				
①92063A	92063-7046	1	Jet-Main (No. 100)				

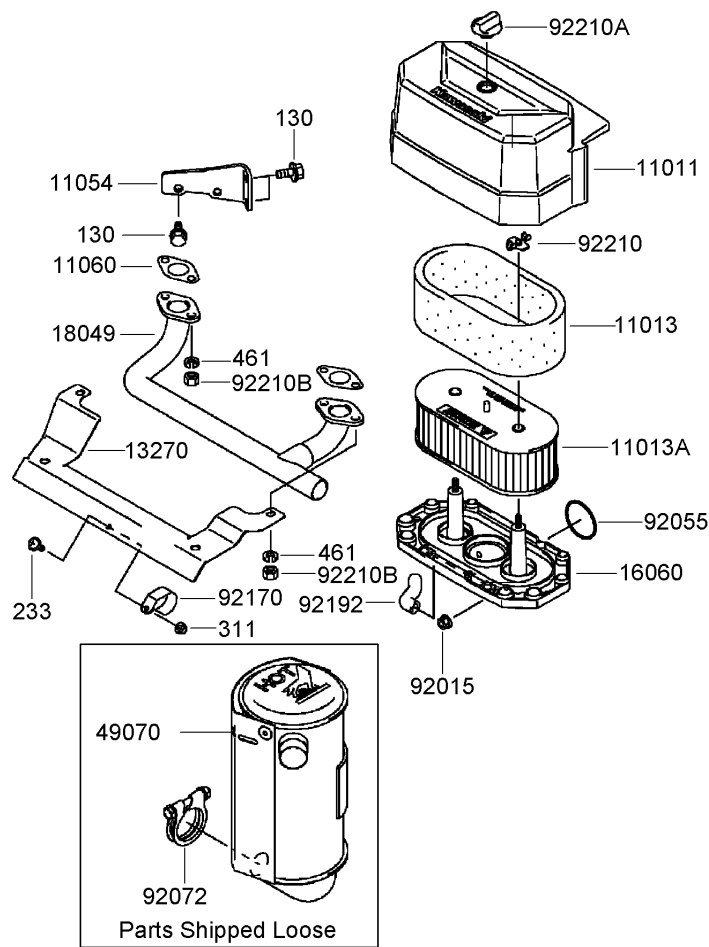 


Air Filter and Muffler Assembly
Kawasaki FH580V-AS50-R

Ref	Part No.	Qty.	Description				
❸11011	11011-7046	1	Case-Air Filter				
❸11013	11013-7025	1	Element-Filter, Air				
❸11013A	11013-7031	1	Element-Filter, Air				
❸11054	11054-7002-9H	1	Bracket				
❸11060	11060-7021	2	Gasket-Muffler				
❸13270	13270-7008	1	Plate				
❸16060	16060-7016	1	Pipe-Intake				
❸18049	18049-7001	1	Pipe-Exhaust				
❸49070	49070-7021	1	Muffler				
❸92015	92015-1193	2	Nut				
❸92055	92055-7015	1	O-Ring				
❸92072	92072-7012	1	Band				
❸92170	92170-7002	1	Clamp				
❸92192	92192-7010	1	Tube				
❸92210	92210-7004	2	Nut				
❸92210A	92210-7019	1	Nut				
❸92210B	92210-7027	4	Nut (M8)				
❸130	130B0816	3	Bolt-Flanged (8X16)				
❸233	233B0416	1	Screw (4X16)				
❸311	311B0400	1	Nut-Hex (4Mm)				
❸461	461F0800	4	Washer-Spring (8Mm)				

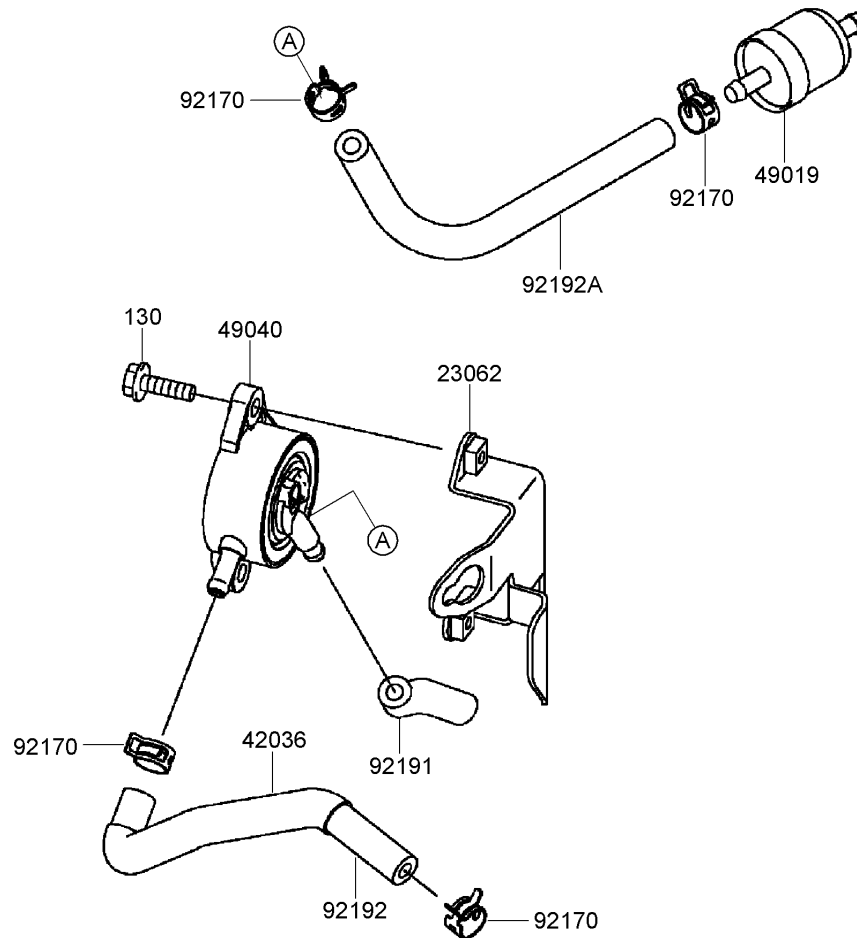 

Fuel Tank and Valve Assembly Kawasaki FH580V-AS50-R

Ref	Part No.	Qty.	Description				
③23062	23062-7004-9H	1	Bracket				
③42036	42036-7012	1	Sleeve				
③49019	49019-7001	1	Filter-Fuel				
③49040	49040-7001	1	Pump-Fuel				
③92170	92170-2088	4	Clamp				
③92191	92191-7002	1	Tube				
③92192	92192-7035	1	Tube (6.35X12.7X170)				
③92192A	92192-7037	1	Tube (6.35X12.7X160)				
③130	130B0620	2	Bolt-Flanged (6X20)				

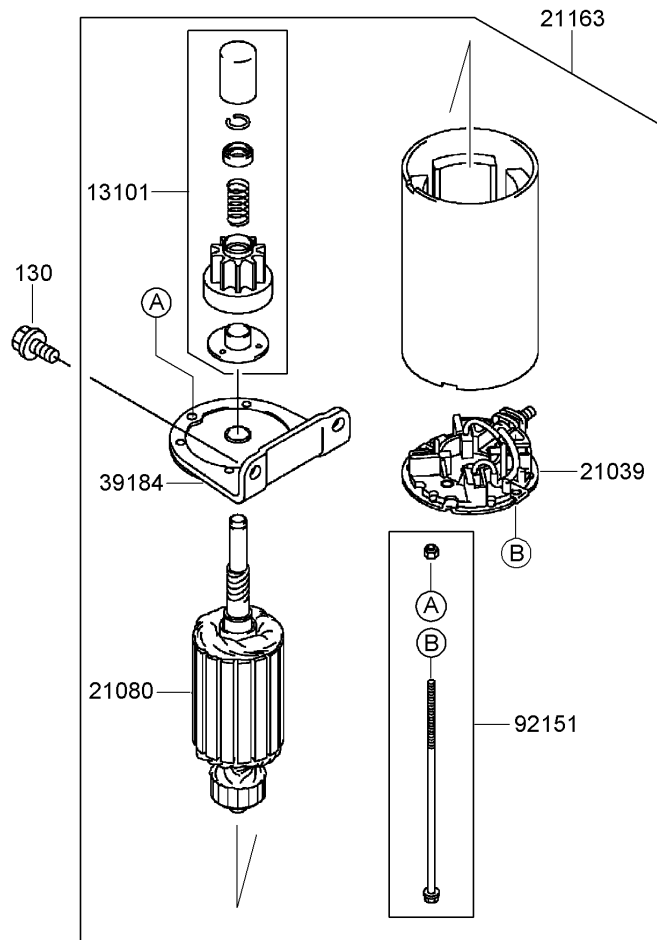 

Starter Assembly Kawasaki FH580V-AS50-R

Ref	Part No.	Qty.	Description				
③13101	13101-7003	1	Gear ASM				
③21039	21039-7004	1	Brush				
③21080	21080-7001	1	Armature				
③21163	21163-7010	1	Starter-Electric				
③39184	39184-7004	1	Bracket ASM				
③92151	92151-7013	1	Bolt				
③130	130B0816	2	Bolt-Flanged (8X16)				

Attachments and Accessories

For 74408TE - Z334 Z Master, With 86cm 7-Gauge Side Discharge Mower

Product Name	Model/Part
Blade-Rotary, 17.5 Inch Med Flow	108-4114-03
Blade-Rotary, 17.5 Inch Low Flow	108-4115-03
Blade-Rotary, 17.5 Inch Atomic	108-4117-03
Recycler Kit	110-9960

NOTES

NOTES

