


TORO®

MODEL NO. 38180-2000001 & UP
MODEL NO. 38181-2000001 & UP

PARTS CATALOG

CCR 2000® SNOWTHROWER

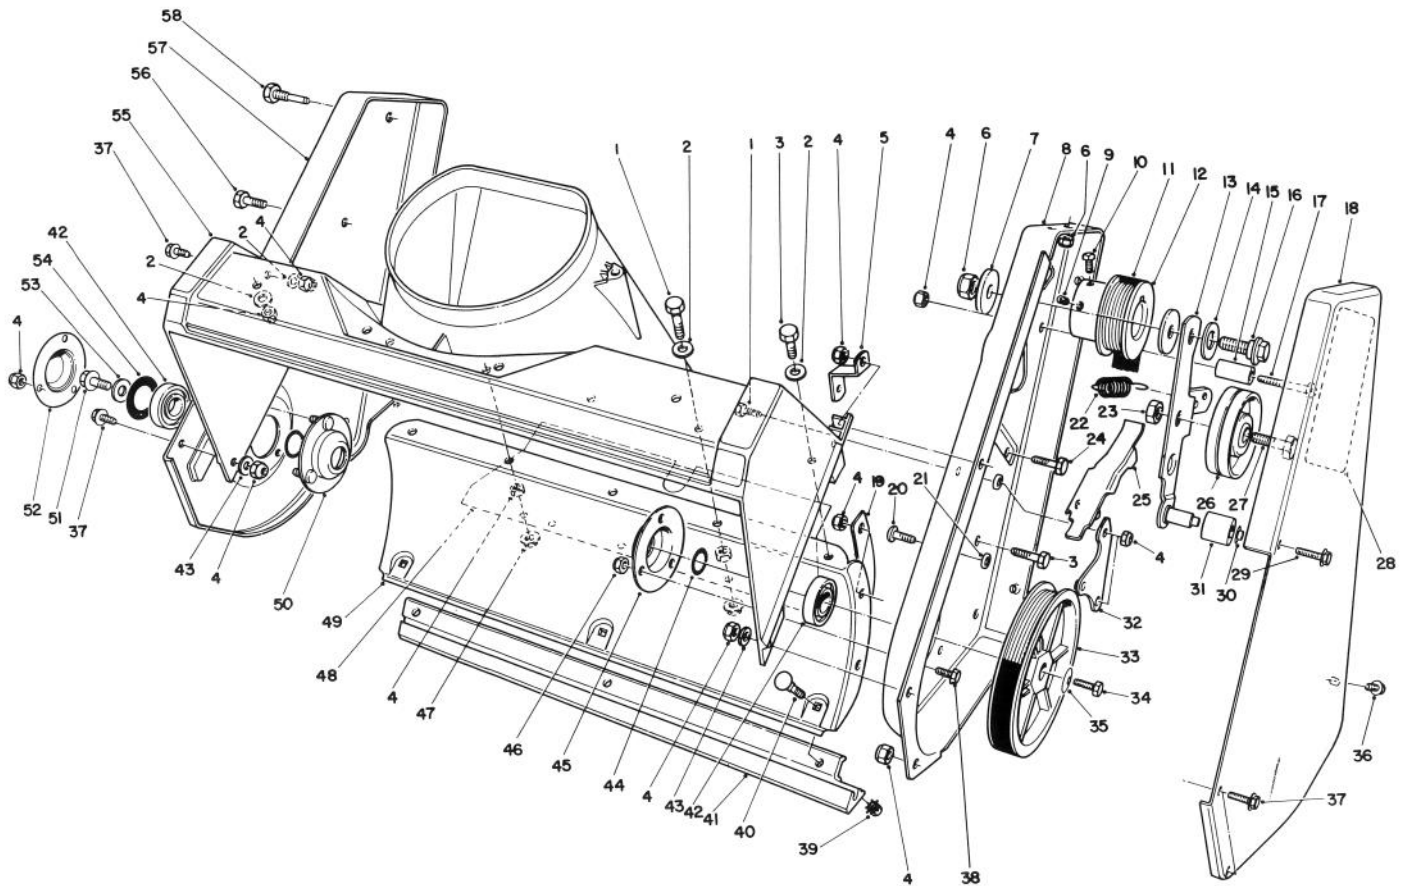


C-0013

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321-6	Screw - Hex Hd.	3
2	3256-22	Washer	9
3	321-4	Screw - Hex Hd.	5
4	3296-42	Nut - Lock	22
5	55-9430	Bracket - Housing	1
6	3296-29	Nut - Lock	3
7	5-4460	Washer	2
8	55-8850	Sideplate - L.H.	1
9	3245-41	Screw - Set	1
10	3241-7	Screw - Set. Sq. Hd.	1
11	55-9300	Belt - Drive	1
12	55-9180	Pulley - Engine	1
13	12-8279	Idler Arm Assembly (Incl. Ref. #30 & 31)	1
14	25-5640	Washer	1

Ref. No.	Part No.	Description	No. Used
15	55-9530	Guide - Drive Belt	1
16	27-0410	Screw - Shoulder	1
17	321-13	Screw - Hex. Hd.	1
18	55-9010	Cover - Drive	1
19	56-2610	Bracket - Lower Housing	1
20	3274-31	Screw - Button Hd.	1
21	55-9620	Spacer	3
22	55-9280	Spring - Extension	1
23	32152-2	Nut - Lock	1
24	322-3	Screw - Hex Hd.	2
25	55-9550	Arm - Brake	1
26	55-9290	Pulley - Idler	1
27	323-29	Screw - Hex. Hd.	1
28	60-9480	Decal - Belt Routing	1
29	36-3860	Screw - Special	1

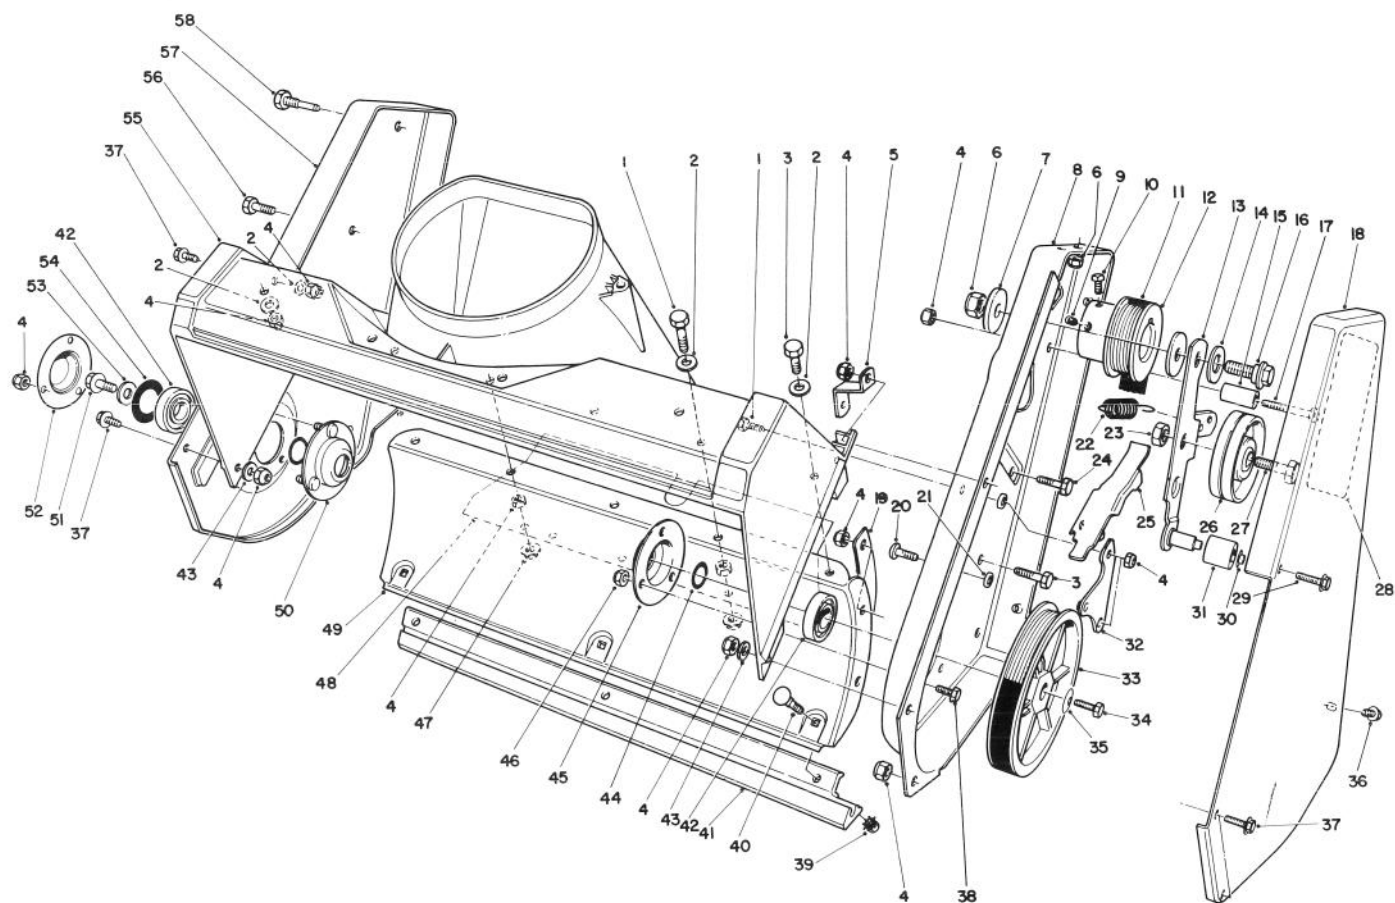


C-0013

HOUSING ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used
30	32112-11	Pushnut	1
31	55-9520	Roller - Brake	1
32	55-9570	Pivot Plate Assembly	1
33	60-9320	Pulley - Rotor	1
34	321-30	Screw - Hex. Hd.	1
35	3290-456	Washer - Belleville	1
36	12-3270	Screw - Self Tapping	2
37	32105-15	Screw - Hex. Hd.	7
38	32105-8	Screw - Hex. Hd.	3
39	32149-2	Nut - Keps	3
40	3229-11	Screw - Carriage	3
41	55-8760	Scraper	1
42	38-7820	Bearing - Ball	2
43	3256-67	Washer	2
44	52-7280	Washer - Thrust	2

Ref. No.	Part No.	Description	No. Used
45	38-8620	Retainer - Bearing	1
46	3296-2	Nut - Lock	3
47	32128-10	Nut - Flange Lock	2
48	55-9512	Cover - Bottom	1
49	55-9220	Housing - Lower	1
50	52-9110	Flange - Bearing	1
51	3234-25	Screw - Hex. Flange Hd.	1
52	52-7290	Retainer - Bearing	1
53	3256-24	Washer	1
54	52-7270	Washer - Rubber	1
55	55-8700	Housing	1
56	322-43	Screw - Hex. Hd.	1
57	55-8840	Sideplate - R.H.	1
58	38-8211	Pin	1

*Not Illustrated

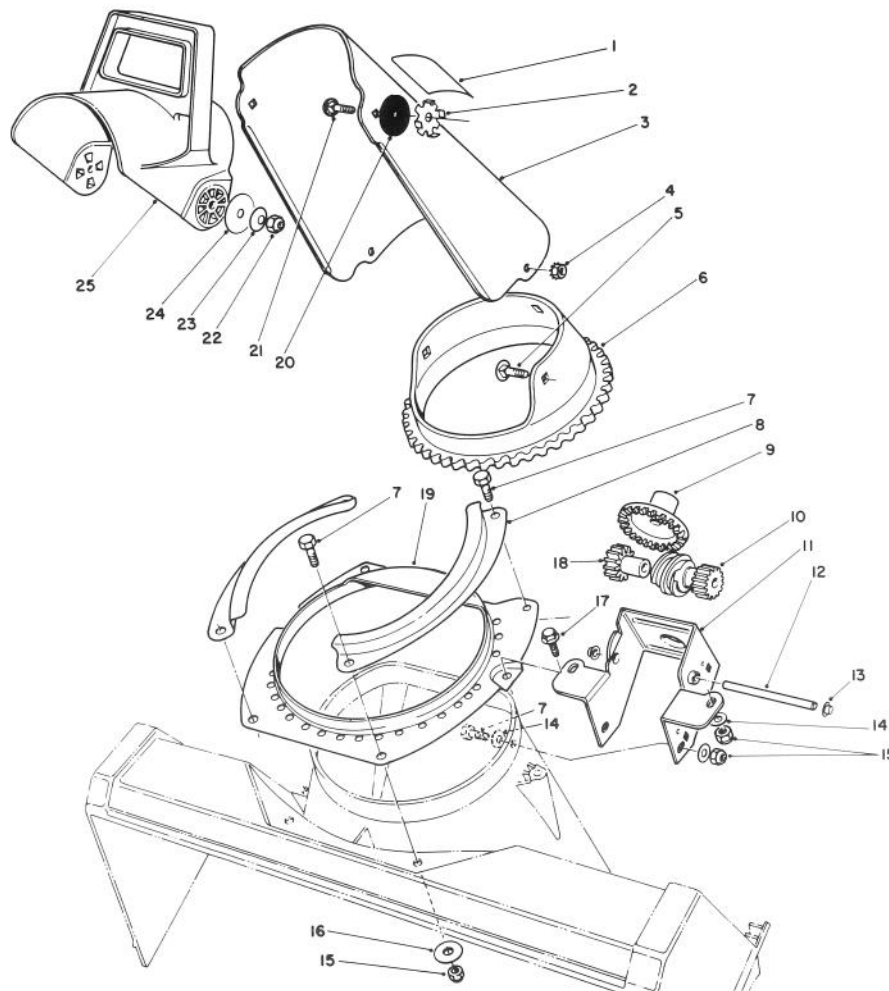


C-0014

DISCHARGE CHUTE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	63-3740	Decal - Discharge (Model No. 38180)	1
*	63-3760	Decal - Discharge (Model No. 38181)	1
2	55-8950	Plate - Friction	2
3	12-8749	Chute - Discharge (Incl. Ref. #1: 63-3760)	1
4	32149-1	Nut - Keps	3
5	3230-18	Screw - Carriage	3
6	55-8720	Gear Ring - Chute	1
7	321-4	Screw - Hex Hd.	6
8	55-8910	Retainer - Chute Ring	2
9	55-8740	Gear - Face	1
10	55-8730	Gear - Worm/Spur	1
11	84-5650	Bracket - Chute Gears	1

Ref. No.	Part No.	Description	No. Used
12	55-9150	Shaft - Gear	1
13	32112-11	Pushnut	2
14	3256-22	Washer	6
15	3296-42	Nut - Lock	6
16	3256-22	Washer	2
17	46-8092	Screw - Special	2
18	55-8750	Spacer/Spur Gear	1
19	55-8921	Ring - Chute Support	1
20	20-4320	Washer - Rubber	2
21	3230-22	Bolt - Carriage	2
22	3296-29	Nut - Lock	2
23	3290-456	Washer - Belleville	2
24	3256-68	Washer	2
25	56-2680	Deflector	1

*Not Illustrated

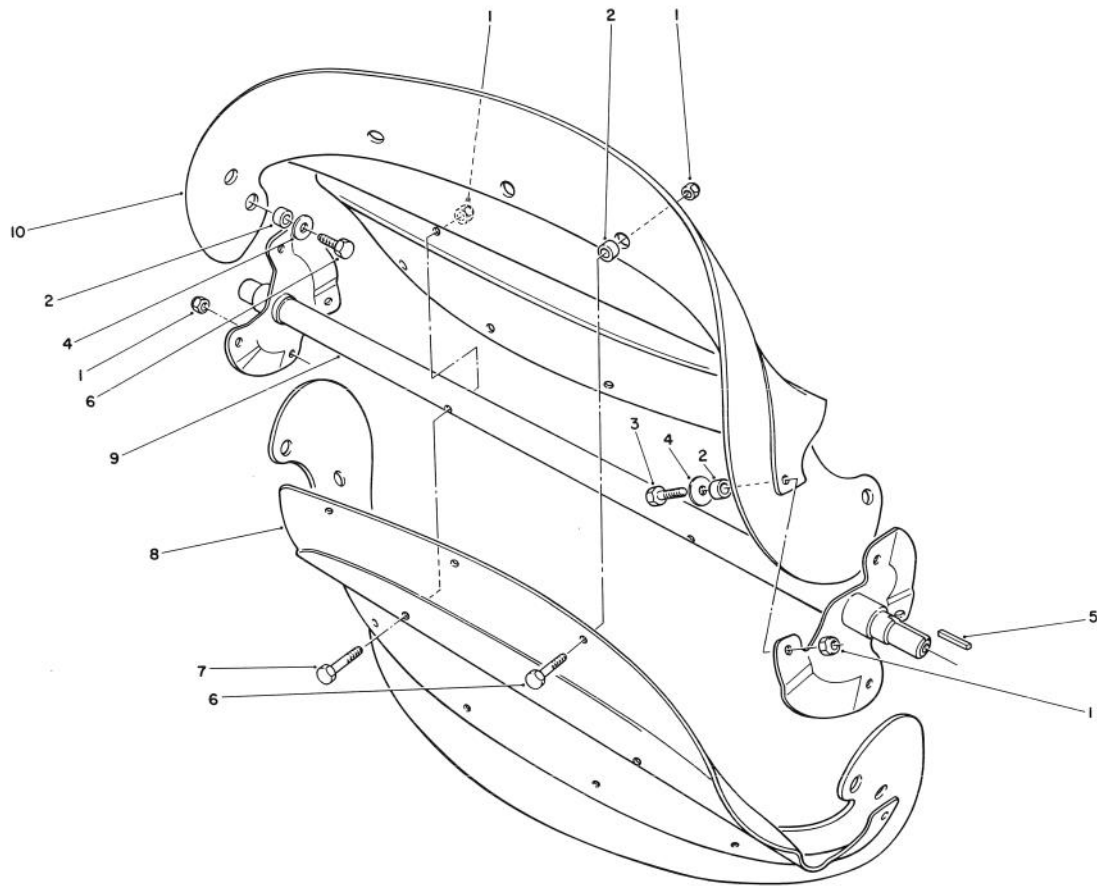


C-0015

ROTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-56	Nut - Lock	18
2	55-9370	Spacer	16
3	321-5	Screw - Hex Hd.	4
4	3256-67	Washer	8
5	10-8040	Key - Square	1

Ref. No.	Part No.	Description	No. Used
6	321-4	Screw - Hex Hd.	12
7	321-8	Screw - Hex Hd.	2
8	55-8900	Rotor Half	2
9	55-9201	Rotor Shaft Assembly	1
10	55-9251	Blade - Rotor	2

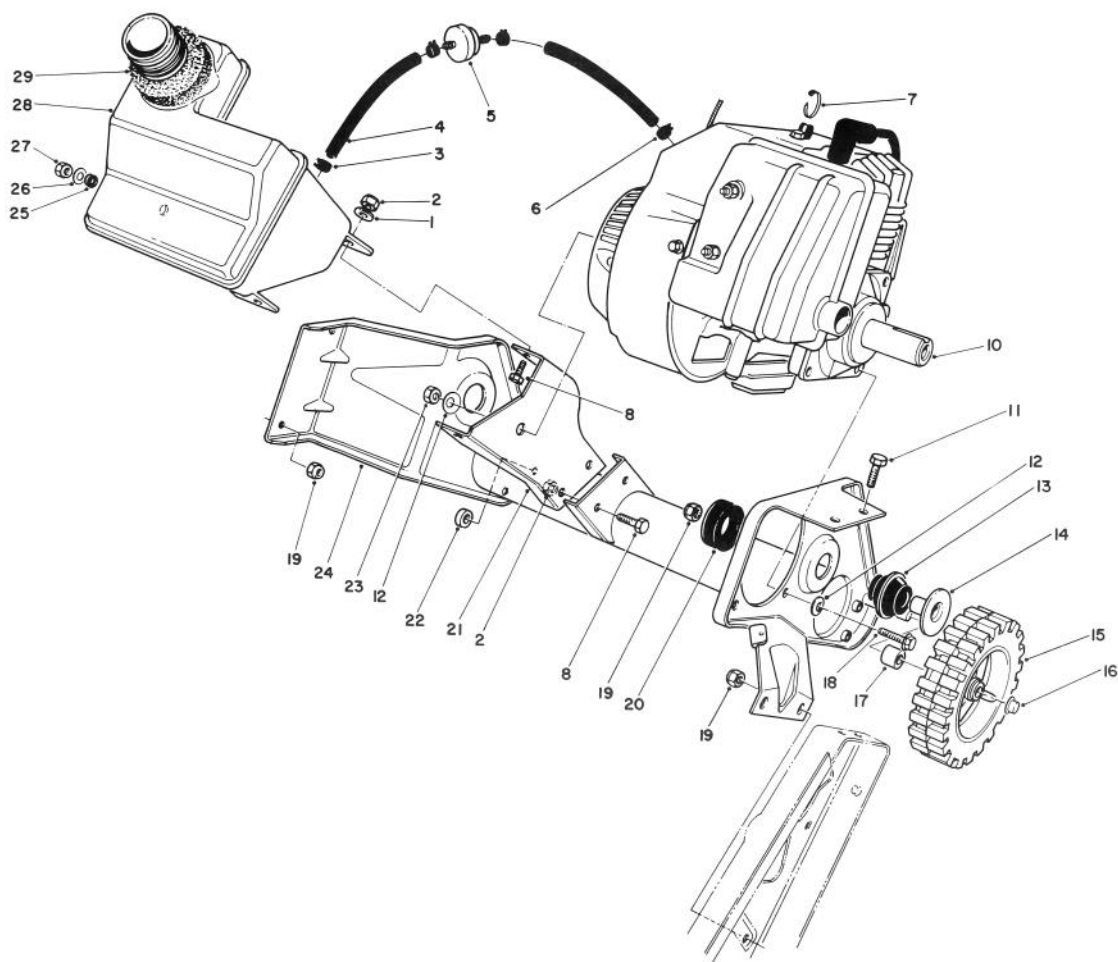


C-0016

ENGINE & MAIN FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3256-22	Washer	2
2	3296-42	Nut - Lock	4
3	2412-86	Clamp - Fuel Line	3
4	49-2481	Line - Fuel	2
5	56-6360	Filter - Fuel	1
6	2412-80	Clamp - Fuel Line	1
7	250-4	Cable Tie	1
8	321-4	Screw - Hex Hd.	4
10	62-6720	Engine Assembly	1
11	322-3	Screw - Hex Hd.	2
12	3290-456	Washer - Belleville	5
13	55-9460	Mount - Rebound	2
14	55-9470	Tube - Spacer	2
15	66-6510	Wheel	2
16	32112-14	Pushnut	2

Ref. No.	Part No.	Description	No. Used
17	66-6501	Spacer - Wheel	1
18	81-0570	Bolt - Engine Mount	1
19	3296-29	Nut - Lock	5
20	55-9450	Mount - Load	2
21	55-9070	Support - Recoil	1
22	66-6500	Spacer - Wheel	1
23	81-0300	Nut - Hex	1
24	63-3750	Frame Assembly	1
25	237-89	Grommet	1
26	3256-23	Washer	1
27	32152-8	Nut - Lock	1
28	13-2459	Tank - Fuel (Incl. Ref. #25)	1
29	55-9310	Seal - Tank	1

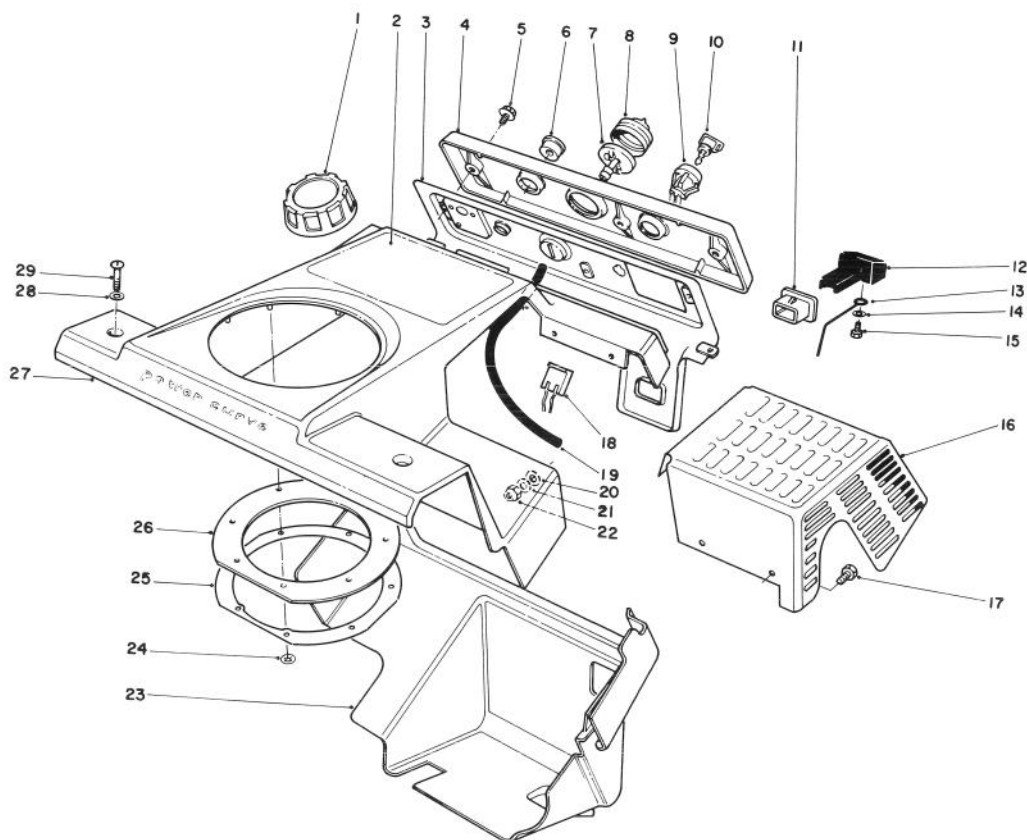


C-0017

CONTROL PANEL & SHROUDING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	55-3573	Gas Cap Assembly	1	13	61-4650	Linkage - Choke	1
2	72-9970	Decal - CCR-2000	1	14	3256-49	Washer	1
3	12-4659	Control Panel Assembly (Incl. Ref. #6-8 & 11)	1	15	32104-130	Screw - Hex Hd.	1
4	55-9350	Nameplate - Control (Model No. 38180)	1	16	55-9210	Shield - Heat	1
*	60-9490	Nameplate - Control (Model No. 38181)	1	17	32105-8	Screw - Hex Hd.	4
5	12-5450	Screw - Hex Flange Hd.	3	18	218-532	Connector Body	1
6	55-9410	Guide - Starter Rope	1	19	44-3171	Hose - Primer	1
7	44-2750	Body - Primer	1	20	55-9660	Washer - Rubber	4
8	66-7460	Bulb - Primer	1	21	3256-14	Washer	4
9	40-5940	Switch - Key	1	22	3296-12	Nut - Lock	4
10	63-8360	Key	1	23	55-8790	Shroud - Lower	1
11	55-8820	Fitting - Choke Control	1	24	3290-474	Pushnut	8
12	55-8810	Control - Choke (Model No. 38180)	1	25	55-9540	Retainer - Chute Seal	1
*	55-8811	Control - Choke (Model No. 38181)	1	26	55-9260	Seal - Chute	1
				27	12-4649	Upper Shroud Assembly (Incl. Ref. #2 & 24-26)	1
				28	3256-22	Washer	2
				29	3250-32	Screw - Phillips	2

*Not Illustrated

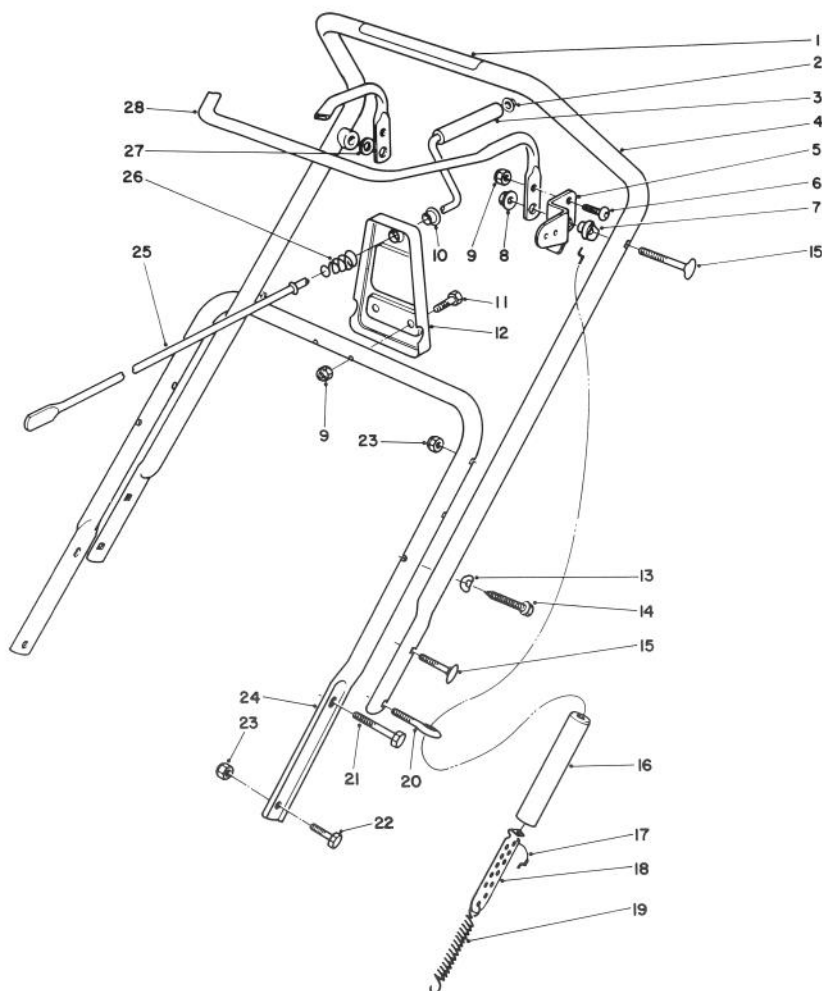


C-0018

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	66-6870	Decal - Rotor Drive (Model No. 38180)	1	13	3-7501	Washer - Curved	2
*	60-9470	Decal - Rotor Drive (Model No. 38181)	1	14	61-8640	Screw - Hex Hd.	2
2	3290-320	Pushnut	1	15	17-9424	Screw - Handle	5
3	66-6540	Grip - Crank Handle	1	16	55-9390	Cover - Spring	2
4	12-5939	Upper Handle Assembly (Incl. Ref. #1: 66-6870)	1	17	55-9321	Cable - Clutch	1
5	55-9100	Arm - Clutch Cable	1	18	55-9380	Adjuster - Clutch Cable	1
6	3274-31	Screw - Button Hd.	1	19	55-9270	Spring - Extension	1
7	55-9340	Spacer - Control Bar	2	20	55-9420	Bolt - Eye	1
8	32111-8	Nut - Flange Lock	2	21	322-9	Screw - Hex Hd.	2
9	3296-42	Nut - Lock	3	22	322-3	Screw - Hex Hd.	2
10	256-249	Nyliner	1	23	3296-29	Nut - Lock	6
11	321-13	Screw - Hex Hd.	2	24	55-9120	Handle - Lower	1
12	55-9090	Support - Chute Crank	1	25	55-9140	Rod - Chute Crank	1
				26	55-9440	Spring - Compression	1
				27	55-9670	Washer - Rubber	1
				28	55-9130	Bar - Control	1

*Not Illustrated

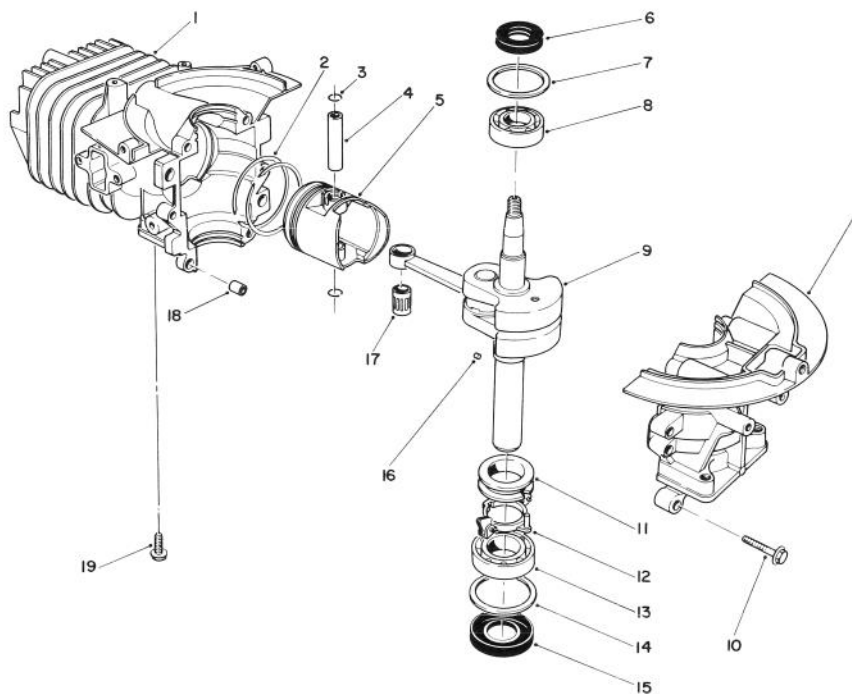

SHORT BLOCK ASSEMBLY


(Engine Model No. 47PM1-4)

C-0019

Ref. No.	Part No.	Description	No. Used
1	81-0350	Cylinders//Crankcase Assembly	1
2	81-0590	Ring Set	1
3	81-0620	Circlip	2
4	81-2140	Pin - Wrist	1
5	81-0580	Piston	1
6	81-0720	Oil Seal	1
7	81-0710	Washer - Thrust	1
8	81-0690	Bearing - Upper	1
9	81-5700	Crankshaft	1
10	81-0540	Bolt	5
11	81-0770	Collar - Governor	1

Ref. No.	Part No.	Description	No. Used
12	81-0750	Centrifugal Bracket - Governor	1
13	81-0700	Bearing - Lower	1
14	81-0730	Washer - Thrust	1
15	81-0740	Oil Seal	1
16	81-0760	Pin - Governor	1
17	81-0610	Wrist Pin	1
18	81-0520	Dowel Pin - Crankcase	2
19	81-0570	Bolt	4
*	12-2479	Short Block (Incl. Ref. #1-19)	1

*Not Illustrated

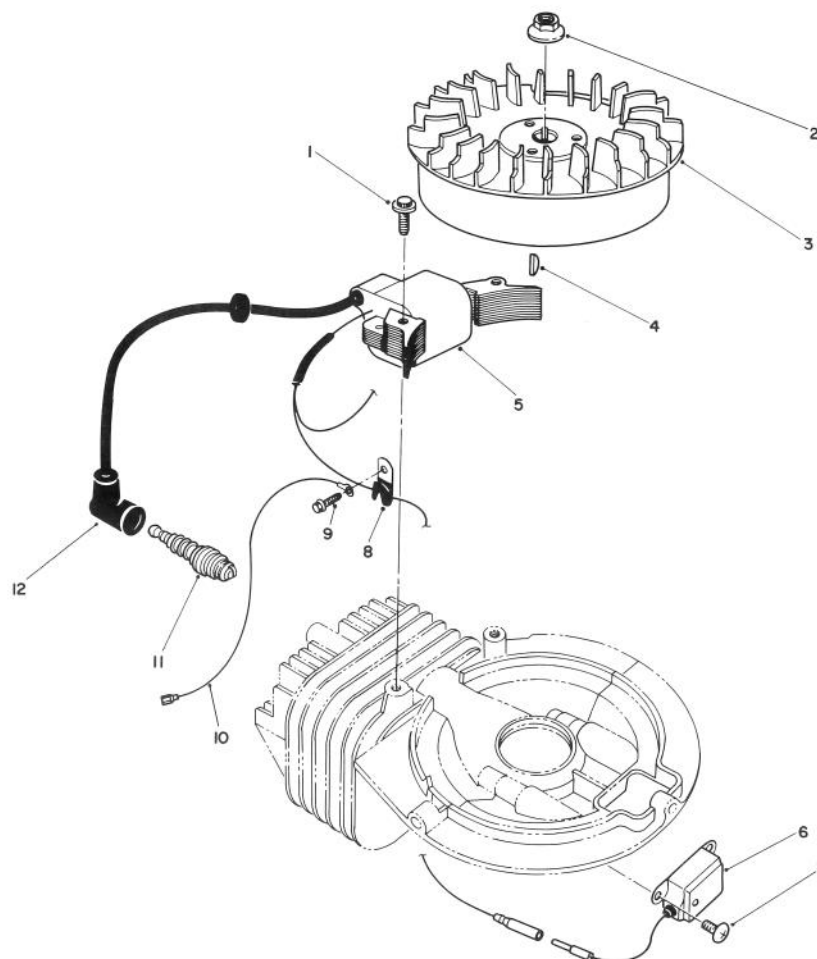

C-0020


FLYWHEEL & MAGNETO ASSEMBLY

(Engine Model No. 47PM1-4)

Ref. No.	Part No.	Description	No. Used
1	81-5710	Socket Hd. Capscrew	2
2	81-1330	Hex Flange Nut	1
3	81-0320	Flywheel	1
4	81-2370	Woodruff Key	1
5	81-0330	Coil - Magneto	1
6	81-0340	Xstar Module - Magneto	1
7	81-0380	Screw	2

Ref. No.	Part No.	Description	No. Used
8	81-1480	Clamp	1
9	53-1340	Bolt	1
10	81-2860	Wire - Ground	1
11	81-0181	Spark Plug (NGK-BPMR4A)	1
12	81-1500	Cover - Spark Plug	1
*	41-7650	Puller - Flywheel	1

*Not Illustrated

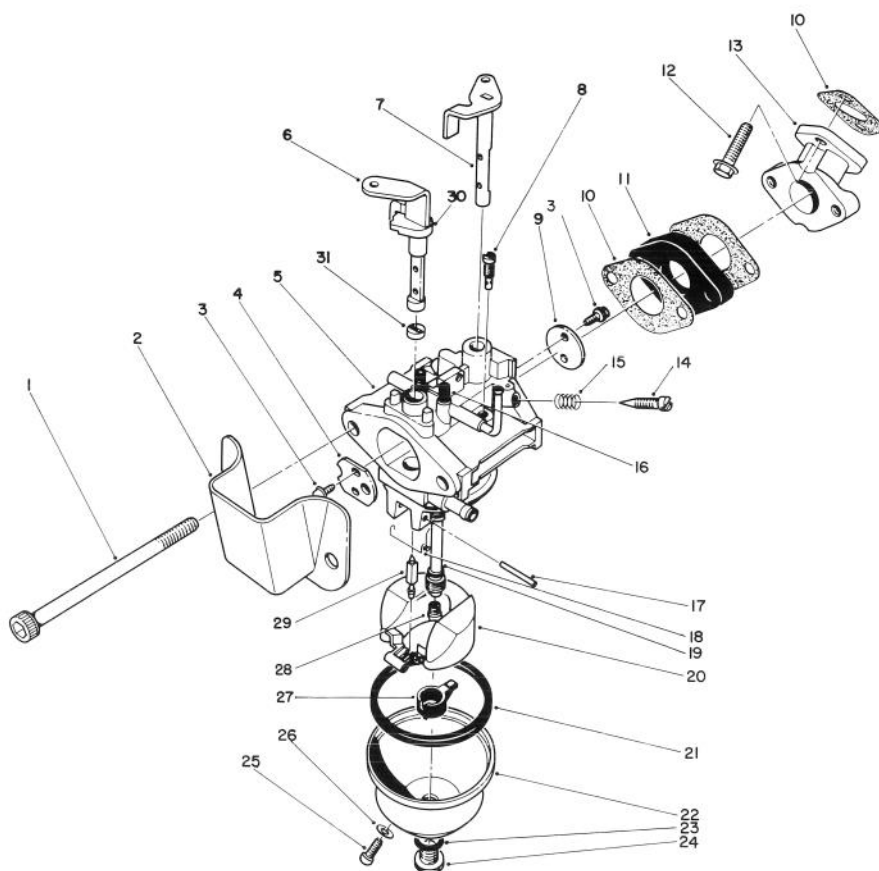

C-0021


CARBURETOR ASSEMBLY

(Engine Model No. 47PM1-4)

Ref. No.	Part No.	Description	No. Used
1	81-0450	Screw	2
2	81-2700	Spitcup	1
3	81-2710	Screw	4
4	81-2720	Valve - Choke	1
5		Body - Carburetor	1
6	81-5510	Shaft - Choke (Incl. Ref. #30 & 31)	1
7	81-2920	Shaft - Throttle	1
8	81-2930	Jet - Pilot	1
9	81-2940	Valve - Throttle	1
10	81-2570	Gasket - Carburetor	3
11	81-0460	Insulator - Carburetor	1
12	50-6350	Bolt	2
13	81-0470	Manifold - Intake	1
14	50-2360	Screw - Pilot	1
15	81-2580	Spring - Pilot Screw	1
16	81-2590	Spring - Choke Detent	2
17	81-2600	Pin - Hinge	1
18	81-2610	Spring - Torsion	1

Ref. No.	Part No.	Description	No. Used
19	81-2740	Nozzle - Main	1
20	81-4920	Float	1
21	81-2630	Gasket - Float Bowl	1
22	81-2640	Bowl - Float	1
23	81-2650	Gasket - Bowl Screen	1
24	81-2660	Screw - Float Bowl	1
25	81-2670	Screw - Drain	1
26	81-2680	Gasket - Drain Screw	1
27	81-4930	Spacer-Float	1
28	81-1040	Jet - Main (#80)	1
*	81-1940	Jet - Main (#76.3)	1
29	81-4700	Needle	1
30	81-5520	Ring - Upper Choke	1
31	81-5530	Ring - Lower Choke	1
*	81-4690	Carburetor Assembly Complete	1
*	81-2910	Choke Shaft Ass'y (Incl. Ref. #6, 30, & 31)	1

*Not Illustrated

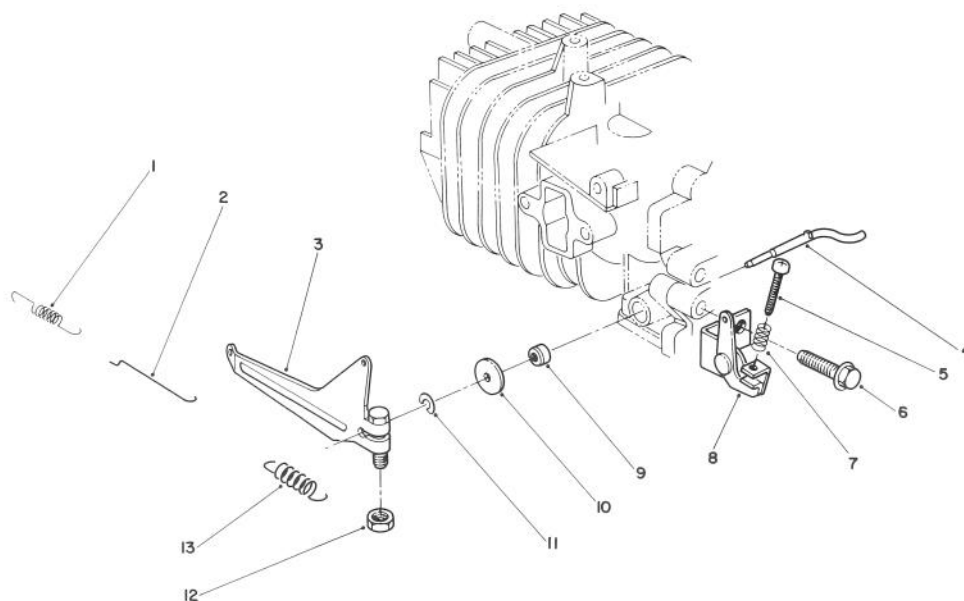


C-0022

GOVERNOR ASSEMBLY

(Engine Model No. 47PM1-4)

Ref. No.	Part No.	Description	No. Used
1	81-0440	Spring - Carburetor	1
2	81-0430	Rod - Carburetor	1
3	81-0410	Arm - Governor	1
4	81-2880	Shaft - Governor	1
5	81-2890	Screw	1
6	81-0540	Bolt	1
7	81-2900	Spring - Compression	1

Ref. No.	Part No.	Description	No. Used
8	81-0370	Bracket - Governor	1
9	81-0850	Spring	1
10	81-0860	Oil Seal	1
11	81-0870	Washer	1
12	81-0870	E-Ring	1
13	81-0900	Hex Nut	1
	81-0360	Spring - Governor	1

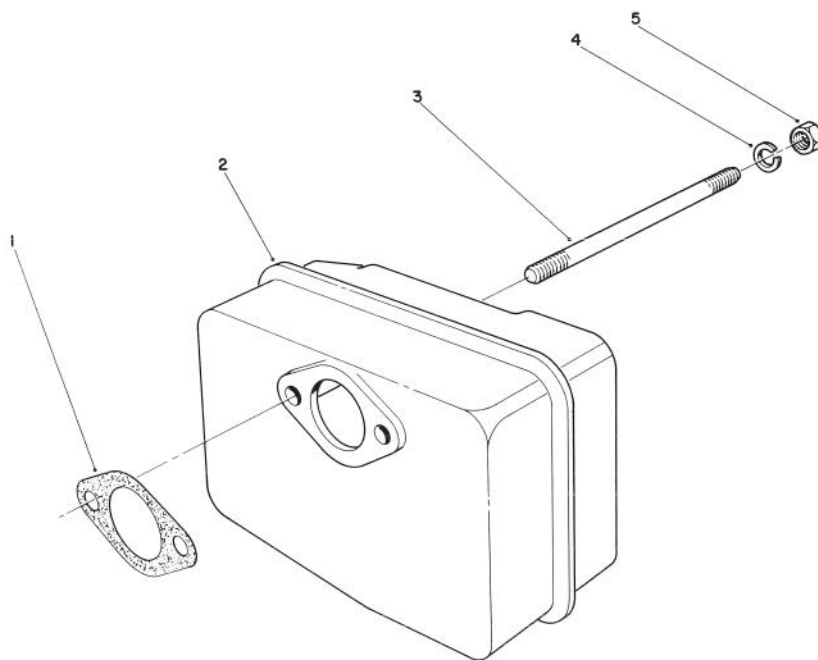


MUFFLER ASSEMBLY

(Engine Model No. 47PM1-4)

C-0023

Ref. No.	Part No.	Description	No. Used
1	81-1080	Gasket - Muffler	1
2	81-0490	Muffler	1
3	81-0500	Stud - Muffler	2

Ref. No.	Part No.	Description	No. Used
4	81-1120	Lockwasher	2
5	81-1110	Hex Nut	2

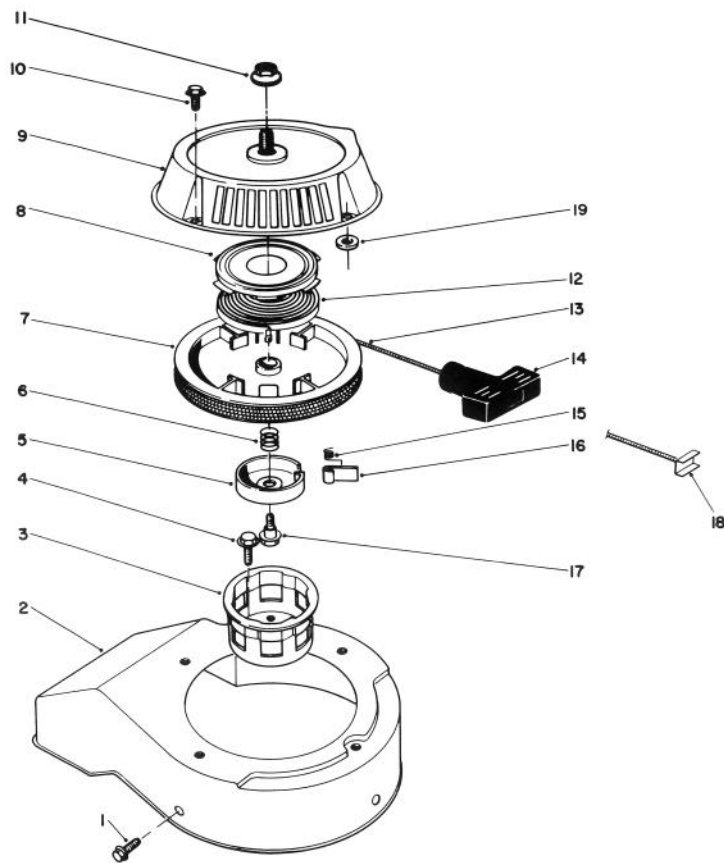

C-0024

RECOIL STARTER ASSEMBLY

(Engine Model No. 47PM1-4)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	53-1349	Bolt	3	14	81-1630	Handle - Recoil	1
2	81-0310	Shroud - Blower	1	15	81-1220	Spring - Dog	1
3	81-1290	Cup - Starter	1	16	81-1230	Dog - Starter	1
4	82-1300	Bolt	3	17	81-1260	Bolt	1
5	81-1250	Retainer - Dog	1	18	81-5760	Insert - Handle	1
6	81-1240	Spring - Compression	1	19	55-9620	Spacer	1
7	81-1210	Reel - Rope Pulley	1	*	81-0280	Recoil Assembly (Incl. Ref. No. 5-9, & 12-17)	1
8		Retainer - Recoil Spring	1				
9	81-0290	Case - Recoil	1	*	81-2300	Recoil Spring & Retainer Assembly (Incl. Ref. #8 & 12)	1
10	81-0390	Bolt	4				
11	81-0300	Flange Locknut	1				
12		Spring - Recoil	1				
13	81-1270	Rope	1				

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are

dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]