



Rear Roller Scraper Kit

27" Rotary Cutting Unit

Model No. 30829

Form No. 3351-776 Rev A

Installation Instructions

1. Position the machine on a level surface, lower cutting decks, stop engine, engage the parking brake and remove key from ignition switch.
2. Loosely mount each end of scraper and a scraper plate to each roller mount with (2) capscrews and a jam nut (Fig. 1). The longer capscrew and jam nut are to be installed in the lower mounting hole.
3. Slide the scraper up or down until a gap of .020-.040 in. is achieved between the rod and the roller. Tighten the capscrews/grease fittings to lock adjustment. Torque to 30 ft.-lb. (41 N·m). Tighten the jam nut against the scraper plate, if applicable.

Note: If there are grease fittings on the roller mounts (Fig. 2) they must be removed and used instead of the longer capscrews and jam nuts when mounting the roller scraper.

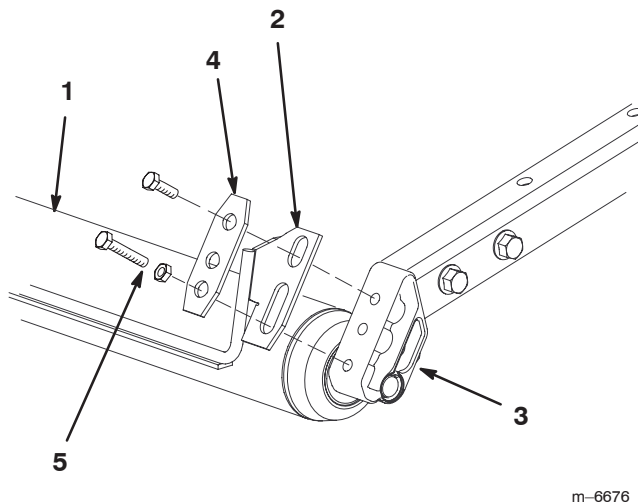


Figure 1

- | | |
|-----------------|------------------------------|
| 1. Rear roller | 4. Scraper plate |
| 2. Scraper | 5. Longer capscrew & jam nut |
| 3. Roller mount | |

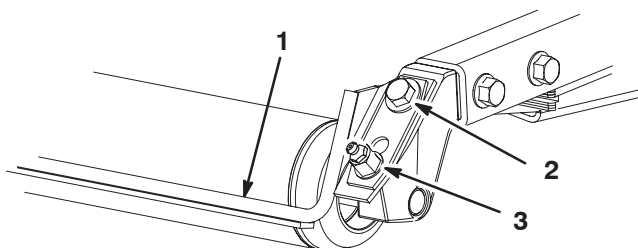


Figure 2

- | | |
|-------------------|-------------------|
| 1. Roller scraper | 3. Grease fitting |
| 2. Mounting screw | |