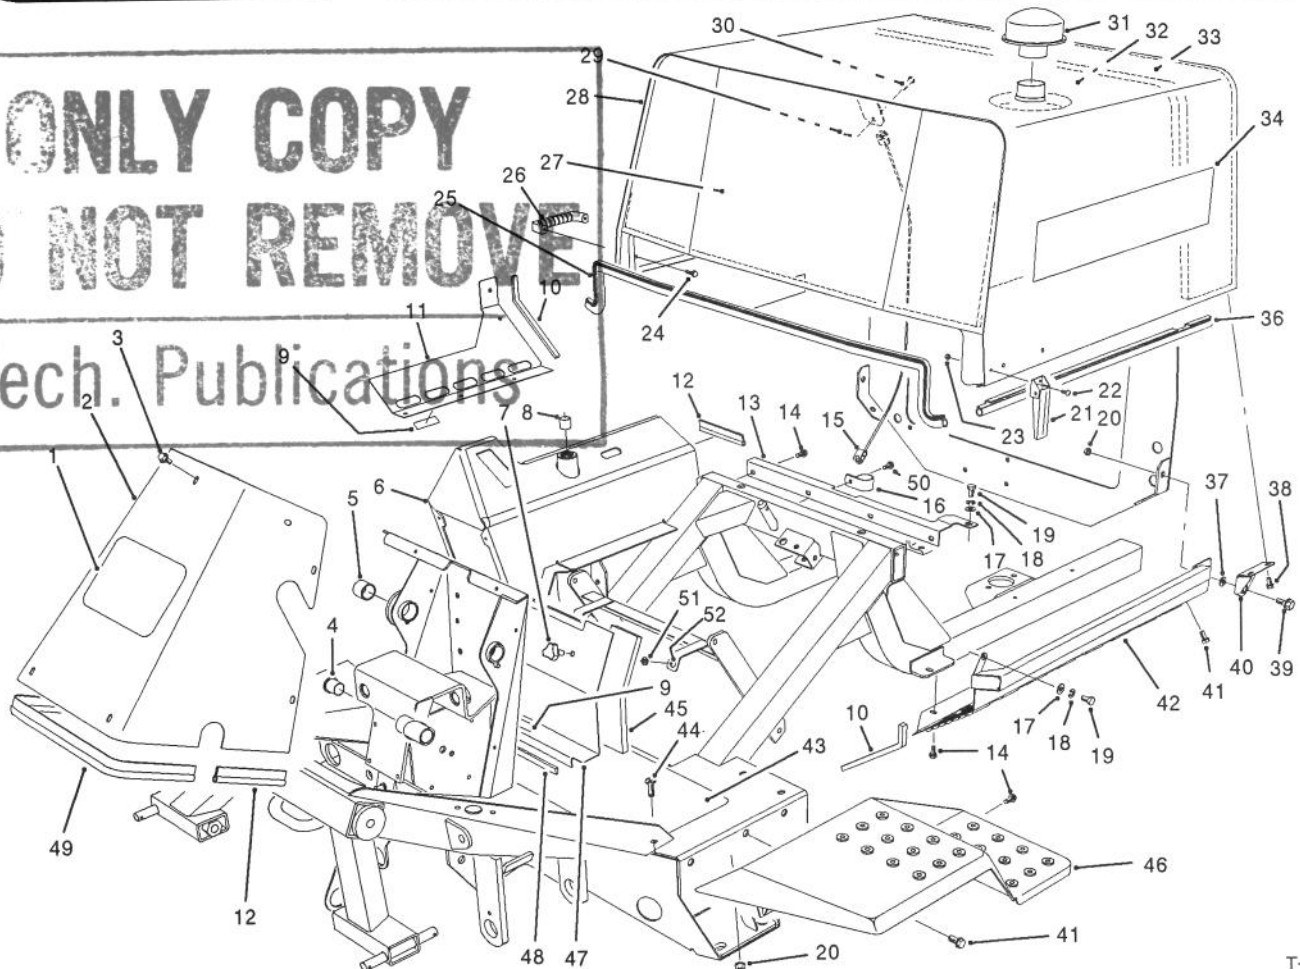 


TORO®MODEL NO. 03600-20001 & UP
MODEL NO. 03601-20001 & UP**PARTS
CATALOG****REELMASTER® 335D**
TRACTION UNIT WITH ACCESSORIES**ONLY COPY
DO NOT REMOVE**
Tech. Publications


T-1082

FRAME & BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62-7400	Decal - TORO	1
2	76-9700	Cover - Tower	1
3	46-6810	Screw - Hex. Washer Hd.	9
4	256-10	Bushing - Flange	2
5	256-237	Bushing - Sleeve	1
6	82-4920	Frame Assembly (Incl. Ref # 4, 5, 8 & 52)	1
7	77-3620	Retainer - Cover	2
8	256-32	Bushing - Sleeve	2
9	70-2560	Decal - Oil (Model No. 03600) (Model No. 03601)	1 2
10	68-7573	Seal - Shroud L.H.	2
11	76-8290	Shroud - Lower R.H.	1
12	76-6360	Strip - Seal	2
13	76-8430	Support - Hood Front	1

Ref. No.	Part No.	Description	No. Used
14	32144-11	Screw - Hex. Washer Hd.	10
15	66-2871	Cable - Hood	1
16	2412-104	Clamp - R	1
17	3256-24	Washer - Flat	2
18	3253-21	Washer - Lock	2
19	323-34	Screw - Cap Hex. Hd.	2
20	3290-357	Nut - Flange Lock	4
21	69-3020	Latch - Draw	1
22	3290-359	Screw - Round Hd.	2
23	3296-2	Nut - Lock	2
24	46-8091	Screw - Hex. Washer Hd.	4
25	76-6470	Strip - Seal Hood Front	1
26	65-5100	Handle - Hood	2
27	76-6370	Foam - Hood Front	1
28	76-9800	Hood	1
29	3272-10	Pin - Cotter	1

 *Not Illustrated

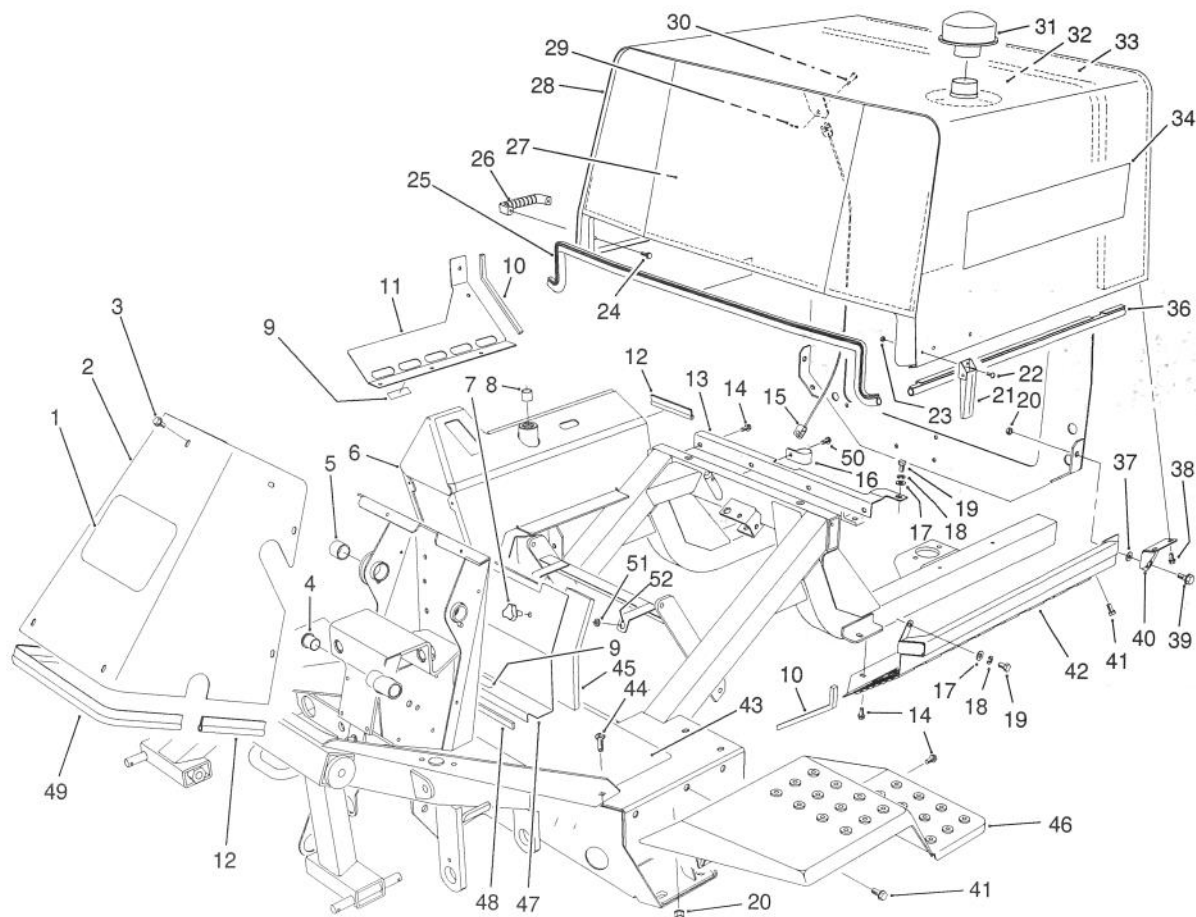


T-1082

FRAME & BODY ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
30	283-58	Pin - Clevis	1
31	27-7180	Cap - Air Cleaner Inlet	1
32	76-6430	Foam - Hood Middle	1
33	76-6440	Foam - Hood Rear	1
34	76-8190	Decal - Reelmaster® 335D	2
36	76-6460	Strip - Seal Hood L.H.	1
*	76-6450	Strip - Seal Hood R.H.	1
37	3256-3	Washer - Flat	2
38	3234-14	Screw - Hex. Washer Hd.	4
39	67-0870	Screw - Shoulder	2
40	76-9160	Bracket - Hood Pivot L.H.	1
*	76-9170	Bracket - Hood Pivot R.H.	1
41	3234-12	Screw - Hex. Washer Hd.	9

Ref. No.	Part No.	Description	No. Used
42	82-3600	Shroud - Lower L.H.	1
43	74-4090	Tread - Foot	1
44	3231-22	Bolt - Carriage	2
45	76-6340	Foam - Access Panel	1
46	76-9300	Fender L. H.	1
*	76-9340	Fender R.H.	1
47	82-3770	Panel - Access	1
48	76-6380	Strip - Seal Access Panel	1
49	76-6361	Strip - Seal Tower	1
50	32104-82	Screw - Hex. Flange Hd.	1
51	32151-72	Retainer - Push-In	2
52	32148-9	Insert - Threaded	2

 *Not Illustrated

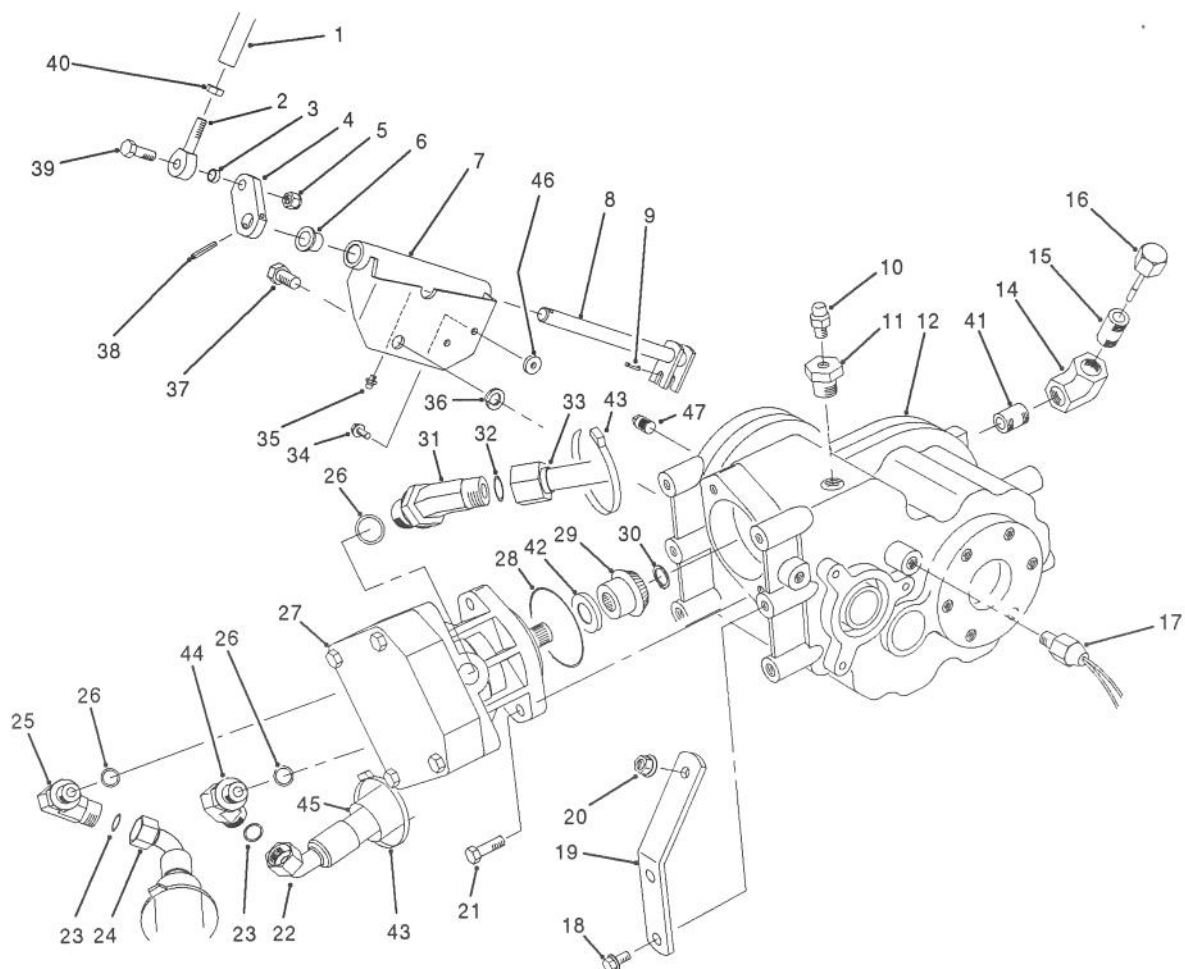


T-1077

FRONT TRANSAXLE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-8850	Rod - Shift Linkage	1	23	237-65	Seal - O-Ring	2
2	2411-36	Eye - Rod	1	24	86-2750	Hose - Hydraulic (L.H. Traction)	1
3	76-9100	Spacer - Rod Eye	1	25	340-153	Fitting - Hydraulic 90° (Incl. Ref. #23 & 26)	1
4	84-0190	Link - Shift Linkage	1	26	237-79	Seal - O-Ring	3
5	3296-59	Nut - Lock	1	27	77-4090	Hydraulic Motor Assembly	1
6	3-1506	Bushing - Flange	2	28	237-167	Seal - O-Ring	1
7	74-5710	Shift Linkage Bracket Assy. (Incl. Ref. #6 & 35)	1	29		Gear - Spiral Bevel	1
8	74-5730	Shaft - Shift Linkage	1	30	32151-62	Ring - Retaining	1
9	32121-24	Pin - Roll	1	31	340-101	Fitting - Hydraulic 45° (Incl. Ref. #26 & 32)	1
10	302-14	Breather	1	32	237-30	Seal - O-Ring	1
11	2812-11	Fitting - Reducing Bushing	1	33	74-6220	Tube - Hydraulic	1
12	82-4930	Front Transaxle Assembly (Incl. Ref. #29 & 47)	1	34	3234-4	Screw - Hex. Flange Hd.	2
14	2813-14	Fitting - Pipe Elbow 90°	1	35	302-5	Fitting - Grease	1
15	289-44	Nipple - Pipe	1	36	65-6390	Washer - Thrust	1
16	27-3710	Dipstick	1	37	325-2	Screw - Cap Hex. Hd.	1
17	72-4320	Switch - Neutral	1	38	32121-6	Pin - Roll	1
18	3234-12	Screw - Hex. Flange Hd.	2	39	323-8	Screw - Cap Hex. Hd.	1
19	76-8260	Bracket - Transaxle Support	1	40	3220-3	Nut - Jam	1
20	3290-357	Nut - Flange Lock	1	41	289-50	Nipple - Pipe	1
21	323-7	Screw - Cap Hex. Hd.	2	42	82-5380	Shim - Pinion .045"	A/R
22	86-2760	Hose - Hydraulic (Model No. 03600 Only)	1	*	82-5390	Shim - Pinion .038"	A/R
*	86-2720	Hose - Hydraulic (Model No. 03601 Only)	1	*	82-5400	Shim - Pinion .052"	A/R
				43	3290-378	Tie - Cable	3

 *Not Illustrated

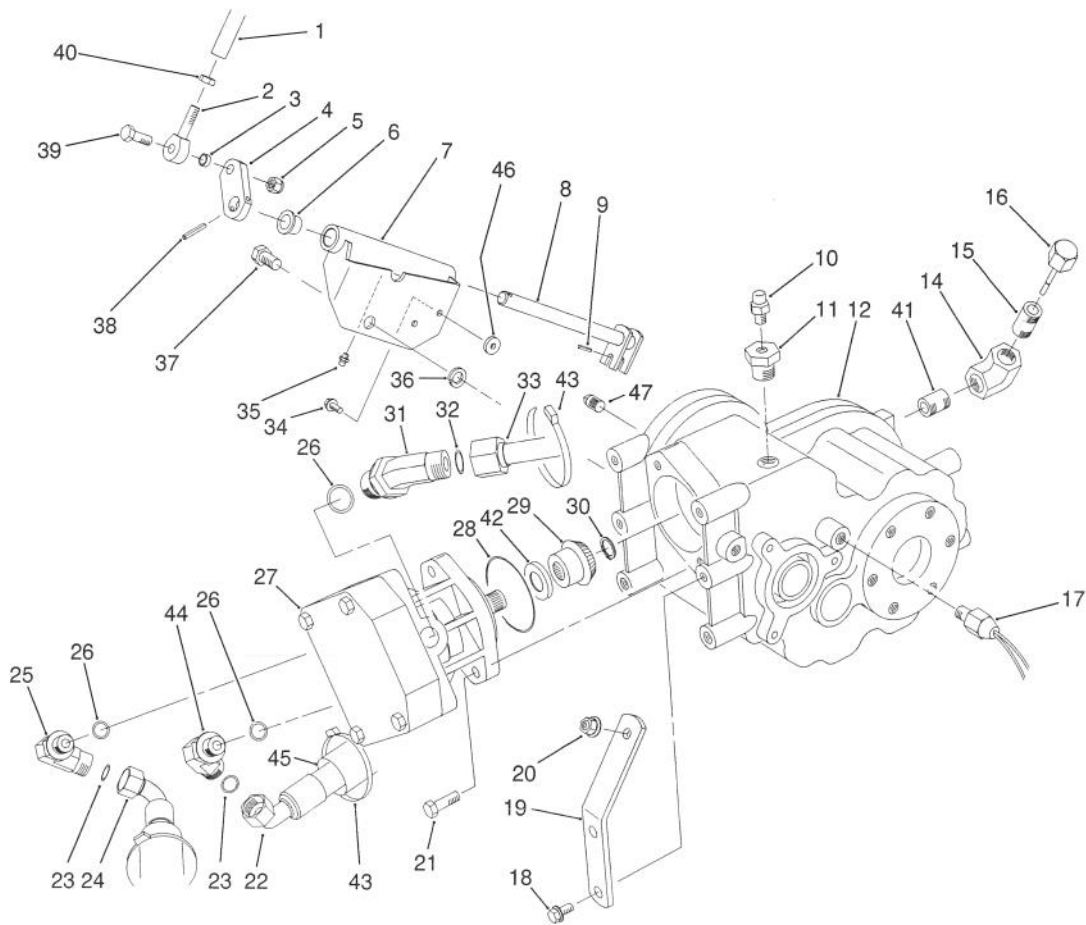


T-1077

FRONT TRANSAXLE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
44	340-55	Fitting - Hydraulic 45° (Incl. Ref. #23 & 26)	1
45	56-7982	Sleeve - Protective	2

Ref. No.	Part No.	Description	No. Used
46	73-3580	Washer	2
47	76-6040	Plug - Pipe	1

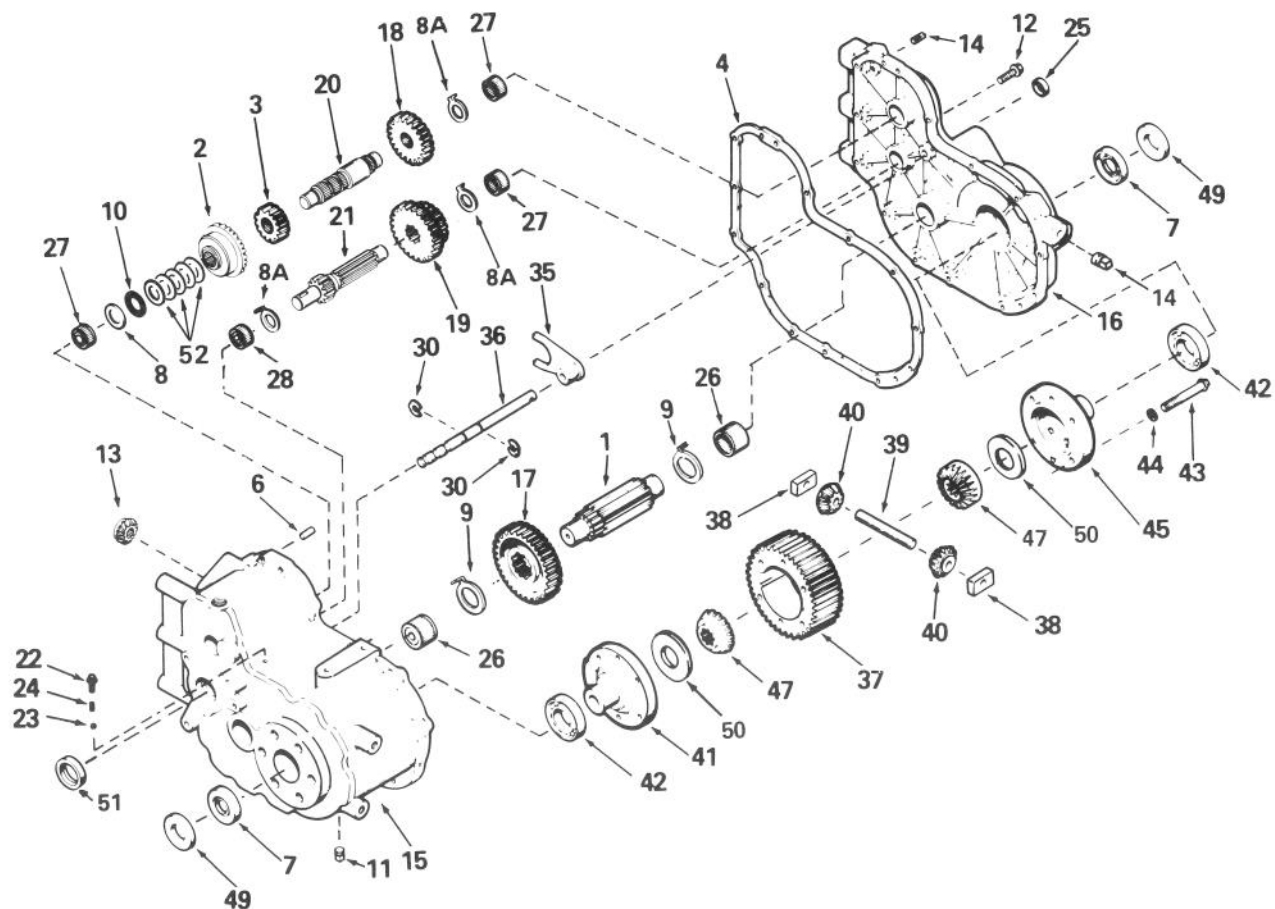 


T-1008

TRANSAXLE ASSEMBLY NO. 82-4930

Ref. No.	Part No.	Description	No. Used
1	76-5610	Pinion - Output	1
2		Gear - Spiral Bevel	1
3	76-5630	Gear - Spur	1
4	76-5640	Gasket	1
6	76-5660	Pin-Dowel	2
7	76-5670	Seal-Oil	2
8	76-5680	Washer - Thrust	1
8A	76-5650	Washer - Thrust	3
9	76-5690	Washer - Thrust	2
10	76-5700	Bearing-Thrust	1
11	76-5710	Plug-Magnetic - Drain	1
12	76-5720	Screw - Hex Hd.	13
13		Pinion - Spiral Bevel	1
14	76-6040	Plug - Pipe	2
15	76-5750	Case Assembly (Incl. Ref. #26-28)	1
16	76-5760	Cover Assembly (Incl. Ref. #26-27)	1
17	76-5770	Gear - Output	1
18	76-5780	Gear - Spur	1
19	76-5790	Gear - Cluster	1
20	76-5800	Shaft - Counter	1
21	76-5810	Shaft & Gear - Shifter	1
22	76-5820	Screw - Hex Flanged Hd.	1
23	76-5830	Ball - Steel	1
24	76-5840	Spring - Shifter Fork	1
25	76-5850	Seal - Oil	1

Ref. No.	Part No.	Description	No. Used
26	76-5860	Bearing - Needle	2
27	76-5870	Bearing - Needle	3
28	76-5880	Bearing - Needle	1
30	76-5890	Ring - Retaining	2
35	76-5900	Fork - Shift	1
36	76-5910	Rod - Shift (High-Low)	1
37	76-5920	Gear - Ring	1
38	76-5930	Block - Drive	2
39	76-5940	Pin - Drive	1
40	76-5950	Pinion - Bevel	2
41	76-5960	Carrier (Incl. Ref. #50)	1
42	76-5970	Bearing - Ball	2
43	76-5980	Screw - Hex Flanged Hd.	6
44	3253-21	Washer - Lock	6
45	76-5990	Carrier - Differential	1
47	76-6000	Gear - Bevel	2
49	76-6010	Spacer	2
50	76-6020	Washer - Thrust	2
51	76-6030	Seal - Oil	1
52	76-5680	Shim - Orange	A/R
*	76-5740	Shim - White	A/R
*	84-0090	Shim - Blue	A/R
*	84-0130	Shim - Pink	A/R
*	84-0140	Shim - Brown	A/R
*	84-0080	Spiral Gear Set (Matched) (Incl. Ref. #2 & 13)	1

 *Not Illustrated

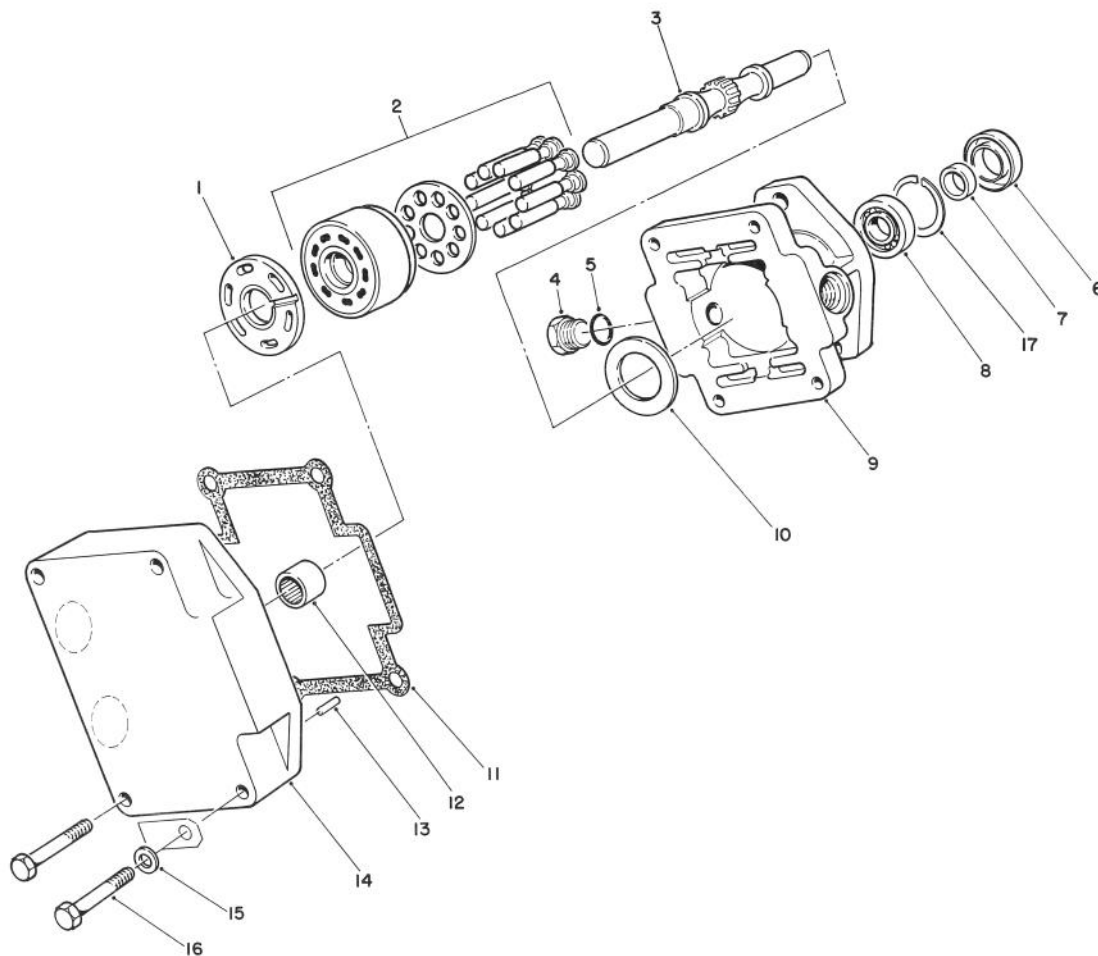


T-1040

HYDRAULIC MOTOR NO. 77-4090

Ref. No.	Part No.	Description	No. Used
1	28-3380	Plate - Valve	1
2	48-1800	Cylinder Block Kit	1
3	84-0030	Shaft Assembly (Incl. Ref. #7 & 8)	1
4	74-9450	Plug	1
5	237-65	Seal - O-Ring	1
6	74-9480	Seal - Lip	1
7		Sleeve	1
8		Bearing - Roller	1

Ref. No.	Part No.	Description	No. Used
9	82-4990	Housing - Fixed	1
10	25-2380	Plate - Thrust	1
11	74-9440	Gasket	1
12	77-3640	Bearing	1
13	25-2430	Pin - Straight	1
14	74-9430	Cap - End	1
15	74-9510	Washer - Flat	1
16	74-9500	Screw - Cap Hex. Hd.	4
17	82-4970	Ring - Retaining	1

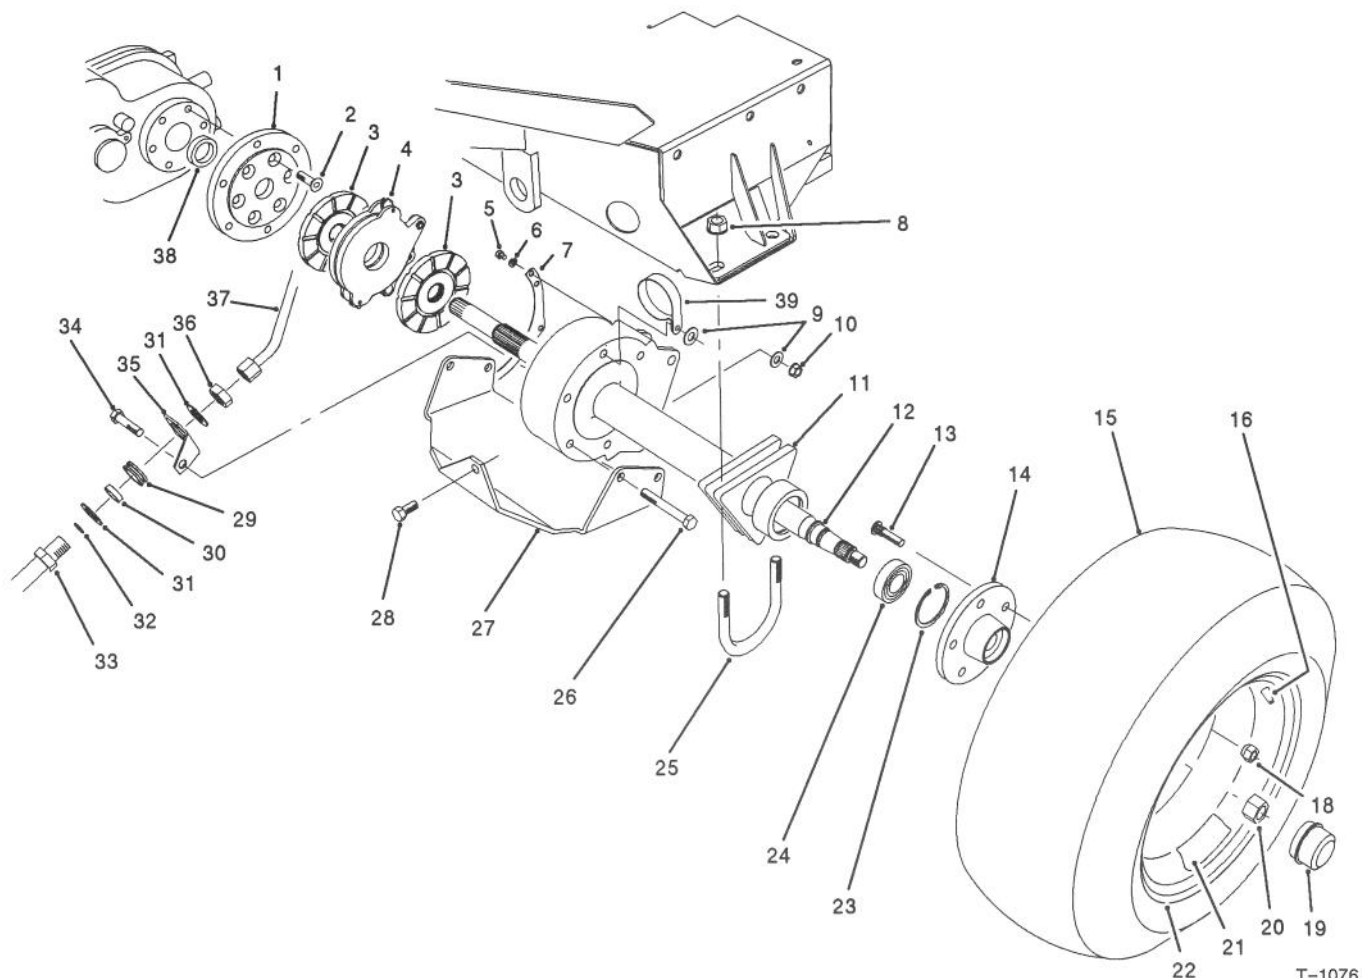 


T-1076

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-4240	Plate - Adaptor	2
2	3274-87	Screw - Flat Hd. Socket	12
3	74-3640	Disc - Brake	4
4	74-3630	Actuator - Brake	2
5	322-1	Screw - Cap Hex. Hd.	6
6	3253-4	Washer - Lock	6
7	76-8300	Cover - Axle Housing	2
8	32128-50	Nut - Flange Lock	4
9	3256-26	Washer - Flat	3
10	32128-23	Nut - Flange Lock	4
11	74-5410	Housing - Axle	2
12	74-5660	Shaft - Axle	2
13	242-34	Stud Drive	10
14	74-5440	Hub - Wheel	2
15	69-9880	Tire	2
16	232-27	Stem - Valve	2
18	23-7270	Nut - Lug	10
19	241-119	Cap - Hub	2
20	3296-67	Nut - Axle	2
21	76-8740	Decal - Torque	2
22	217-123	Rim	2
23	32120-22	Ring - Retaining	2
24	74-5680	Bearing - Ball	2

Ref. No.	Part No.	Description	No. Used
25	76-8120	Bolt - U	2
26	325-15	Screw - Cap Hex. Hd.	10
27	76-9380	Plate - Skid	1
28	325-4	Screw - Cap Hex. Hd.	1
29	240-3	Grommet	2
30	69-9000	Spacer	2
31	69-9010	Washer	4
32	237-65	Seal - O-Ring	2
33	74-6350	Tube - Hydraulic L.H. (Incl. Ref. #32)	1
*	74-6340	Tube - Hydraulic R.H. (Incl. Ref. #32)	1
34	325-5	Screw - Cap Hex. Hd.	2
35	74-6420	Bracket - Bulkhead L.H.	1
*	74-6430	Bracket - Bulkhead R.H.	1
36	340-74	Nut - Bulkhead	2
37	82-5330	Tube - Hydraulic (L.H. Reel)	1
*	82-5210	Hose - Hydraulic (R.H. Reel)	1
38	76-6010	Spacer - Transaxle (Supplied with transaxle)	2
39	2412-102	Clamp - R	1

 *Not Illustrated

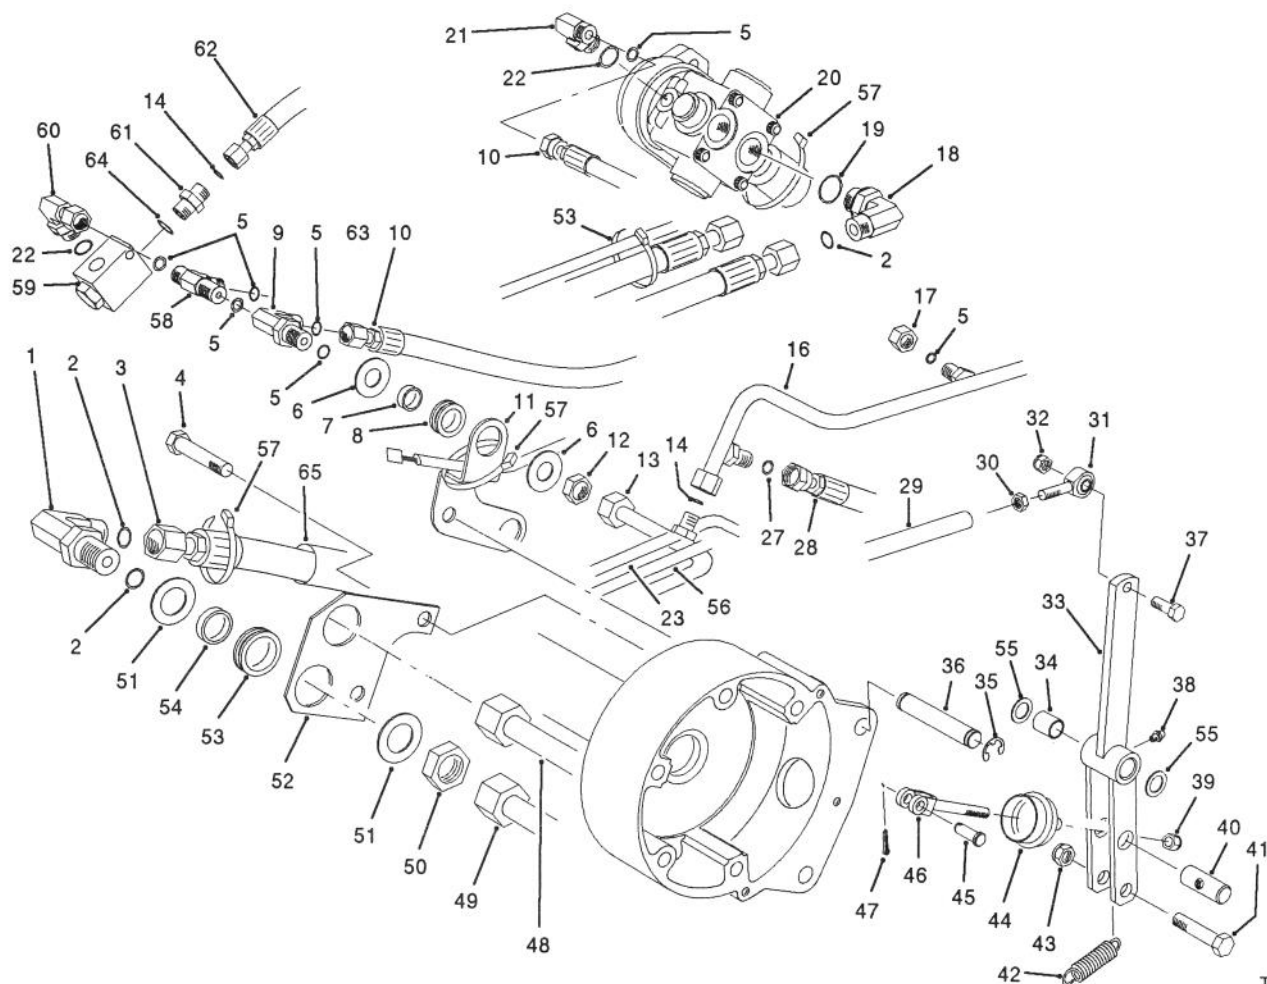


T-1078

BRAKE LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	340-72	Fitting - Hydraulic 90° (Incl. Ref. #2)	2
2	237-65	Seal - O-Ring	6
3	76-9400	Hose - Hydraulic	2
4	325-15	Screw - Cap Hex. Hd.	10
5	237-22	Seal - O-Ring	7
6	69-8940	Washer	2
7	69-8970	Spacer	1
8	240-4	Grommet	1
9	340-154	Fitting - Hydraulic 90° (Incl. Ref. #5) (Model No. 03600 Only)	1
10	76-6880	Hose - Hydraulic	1
11	74-6440	Bracket - Bulkhead	1
12	340-70	Nut - Bulkhead	1
13	74-6360	Tube - Hydraulic (Incl. Ref. #14)	1
14	237-30	Seal - O-Ring	2
16	74-6370	Tube - Hydraulic (Incl. Ref. #5 & 27)	1
17	340-117	Fitting - Hydraulic Cap	1
18	340-139	Fitting - Hydraulic 90° (Incl. Ref. #2 & 19)	2
19	237-81	Seal - O-Ring	2


Ref. No.	Part No.	Description	No. Used
20	74-3390	Motor - Hydraulic	1
21	340-77	Fitting - Hydraulic 90° (Incl. Ref. #5 & 22)	1
22	237-42	Seal - O-Ring	2
23	74-6250	Tube - Hydraulic	1
27	237-21	Seal - O-Ring	1
28	76-9410	Hose - Hydraulic	1
29	76-9690	Rod - Brake Linkage	2
30	3220-3	Nut - Jam	2
31	2411-36	Eye - Rod	2
32	3296-59	Nut - Lock	2
33	76-6510	Brake Linkage Arm Assy. (Incl. Ref. #34 & 38)	2
34	256-49	Bushing - Sleeve	2
35	32120-19	Ring - Retaining	4
36	76-8250	Pin - Linkage Arm	2
37	323-7	Screw - Cap Hex. Hd.	2
38	302-5	Fitting - Grease	2
39	3296-39	Nut - Lock	2
40	76-8270	Rod - Clevis Adjusting	2
41	325-9	Screw - Cap Hex. Hd.	2
42	76-8230	Spring - Extension	2
43	3296-45	Nut - Lock	2
44	76-4180	Boot	2

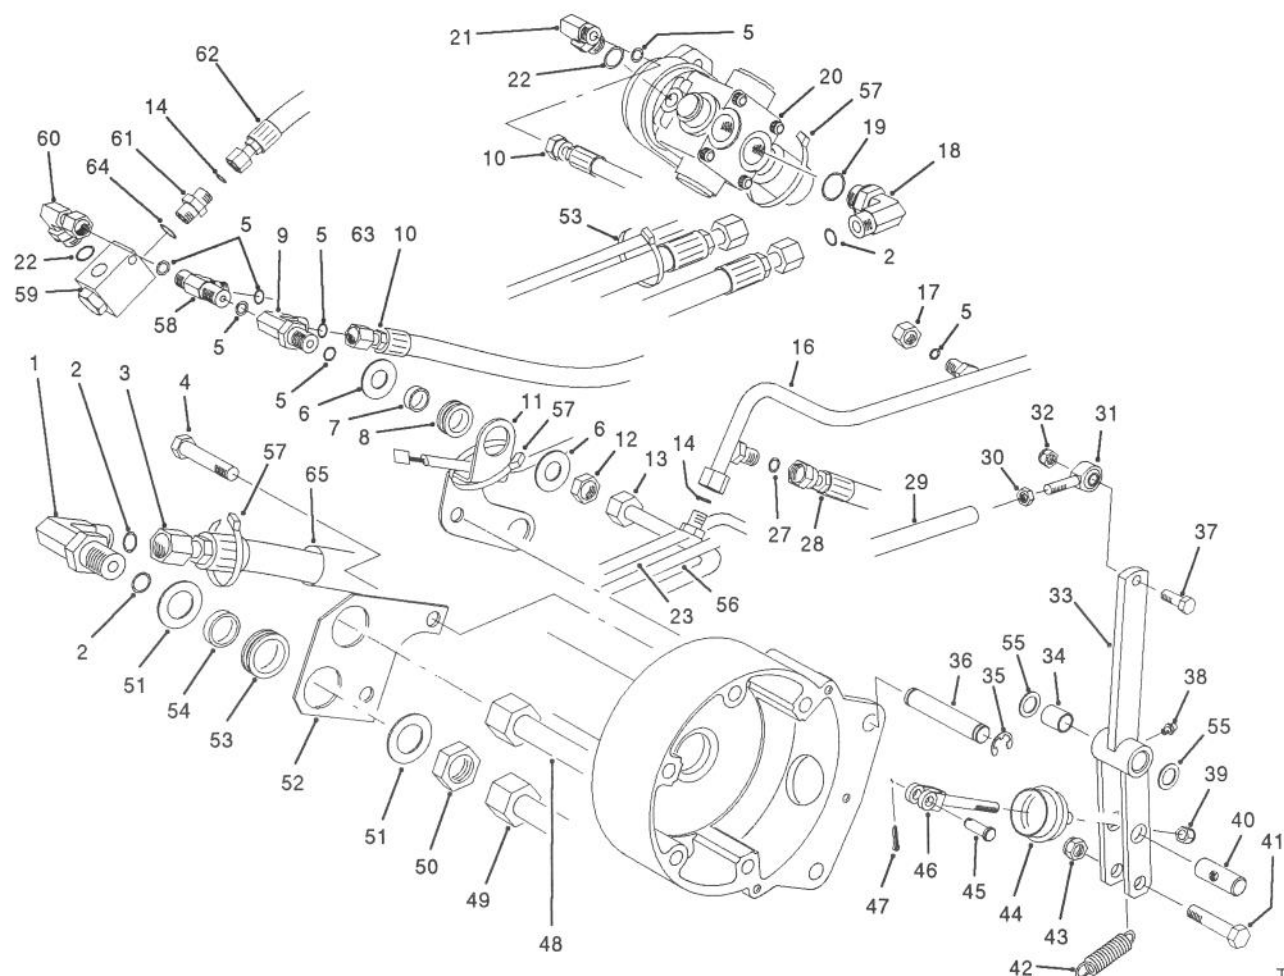 

T-1078

BRAKE LINKAGE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
45	283-2	Pin - Clevis	2	59	84-0650	Valve - Velocity Fuse (Model No. 03601 Only)	1
46	76-6610	Clevis - Brake	2	60	340-110	Fitting - Hydraulic 90° El. (Incl. Ref. #22) (Model No. 03601 Only)	1
47	3272-6	Pin - Cotter	2	61	340-2	Fitting - Hydraulic Straight (Incl. Ref. #14 & 64) (Model No. 03601 Only)	1
48	74-6210	Tube - Hydraulic	1	62	77-4080	Hose - Hydraulic (Model No. 03601 Only)	1
49	74-6340	Tube - Hydraulic	1	63	76-8970	Harness - Wire #1	1
50	340-74	Nut - Bulkhead	2	64	237-79	Seal - O-Ring (Model No. 03601 Only)	1
51	69-9010	Washer	4	65	56-7982	Sleeve - Protective	2
52	76-9710	Bracket - Bulkhead	1				
53	240-3	Grommet	2				
54	69-9000	Spacer	2				
55	3256-27	Washer - Flat	4				
56	74-6240	Tube - Hydraulic	1				
57	3290-378	Tie - Cable	5				
58	340-68	Fitting - Hydraulic Tee (Incl. Ref. #5) (Model No. 03601 Only)	1				

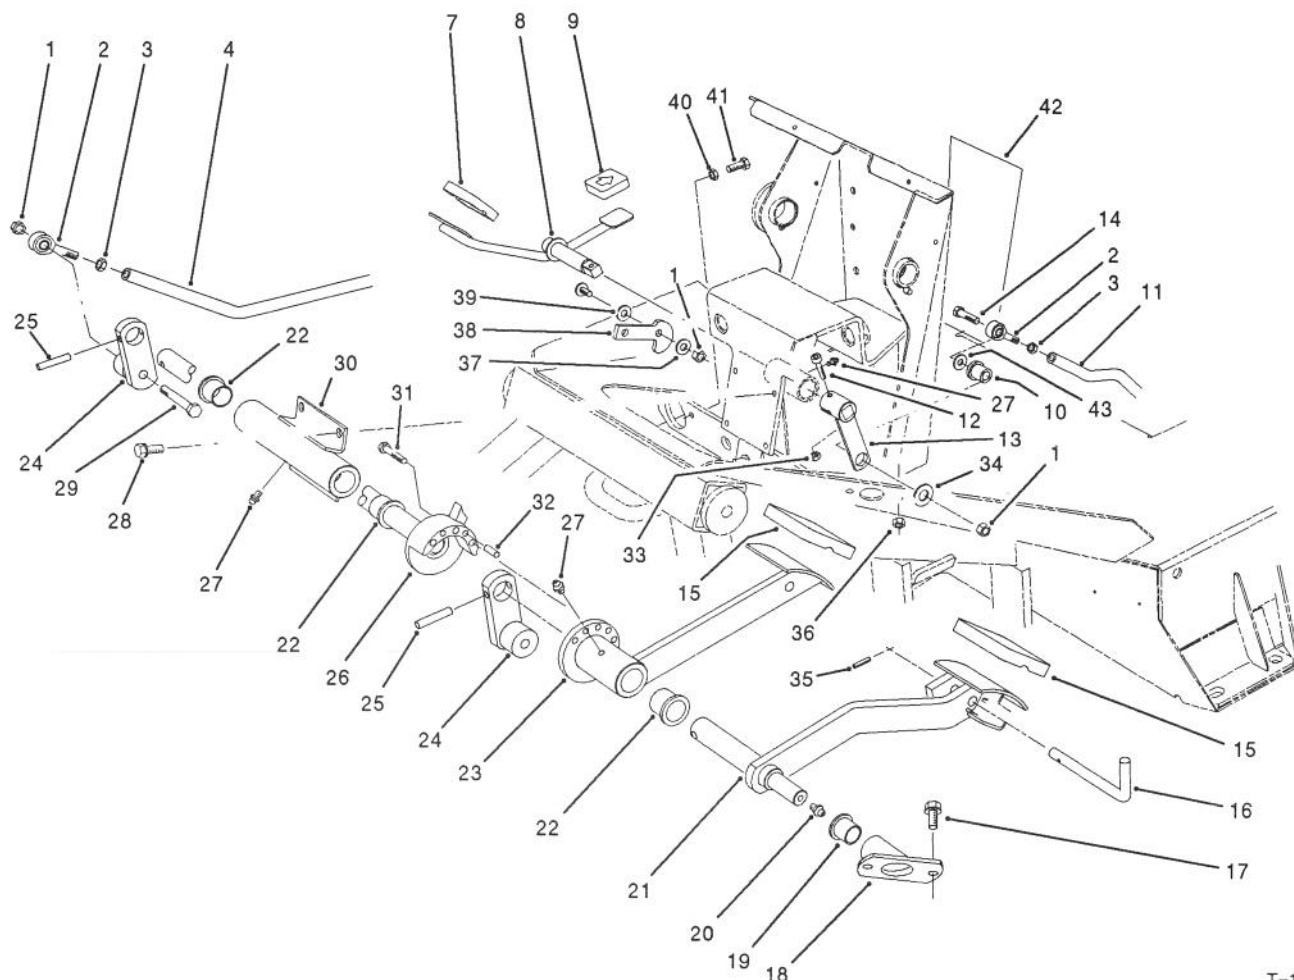 


T-1091

TRACTION & BRAKE PEDALS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-59	Nut - Lock	4
2	2411-36	Eye - Rod	3
3	3220-3	Nut - Jam	3
4	76-9690	Rod - Brake Linkage	2
7	74-9100	Pad - Forward Pedal	1
8	82-5190	Shaft - Traction Pedal	1
9	74-9110	Pad - Reverse Pedal	1
10	63-9751	Mount - Linkage Rod	4
11	82-5290	Rod - Traction Linkage	1
12	3274-19	Screw - Cap Socket Hd.	1
13	82-5030	Arm - Traction Linkage	1
14	323-9	Screw - Cap Hex. Hd.	1
15	82-4690	Pad - Brake	2
16	63-7880	Latch - Brake	1
17	3234-14	Screw - Hex. Flange Hd.	2
18	76-9680	Bearing Housing Assembly (Incl. Ref. #19)	1
19	256-90	Bushing - Flange	1
20	302-2	Fitting - Grease	1
21	76-8890	Pedal - Brake L.H.	1
22	256-10	Bushing - Flange	4
23	76-8930	Brake Pedal Assembly R.H. (Incl. Ref. #22 & 27)	1

Ref. No.	Part No.	Description	No. Used
24	76-8830	Arm - Brake Linkage	2
25	32121-25	Pin - Roll	2
26	76-9720	Shaft - Brake	1
27	302-5	Fitting - Grease	3
28	32144-11	Screw - Hex. Flange Hd.	4
29	323-12	Screw - Cap Hex. Hd.	2
30	76-9030	Bearing Housing Assembly (Incl. Ref. #22 & 27)	1
31	321-9	Screw - Cap Hex. Hd.	3
32	32121-11	Pin - Roll	2
33	3296-42	Nut - Lock	1
34	63-8410	Washer	1
35	32121-50	Pin - Roll	1
36	32128-20	Nut - Lock	2
37	3256-24	Washer - Flat	1
38	74-6110	Stop - Pedal	1
39	66-2920	Washer - Nylon	1
40	3218-2	Nut - Jam	2
41	322-4	Screw - Cap Hex. Hd.	2
42	76-8810	Decal - Safety	1
43	3256-3	Washer - Flat	1

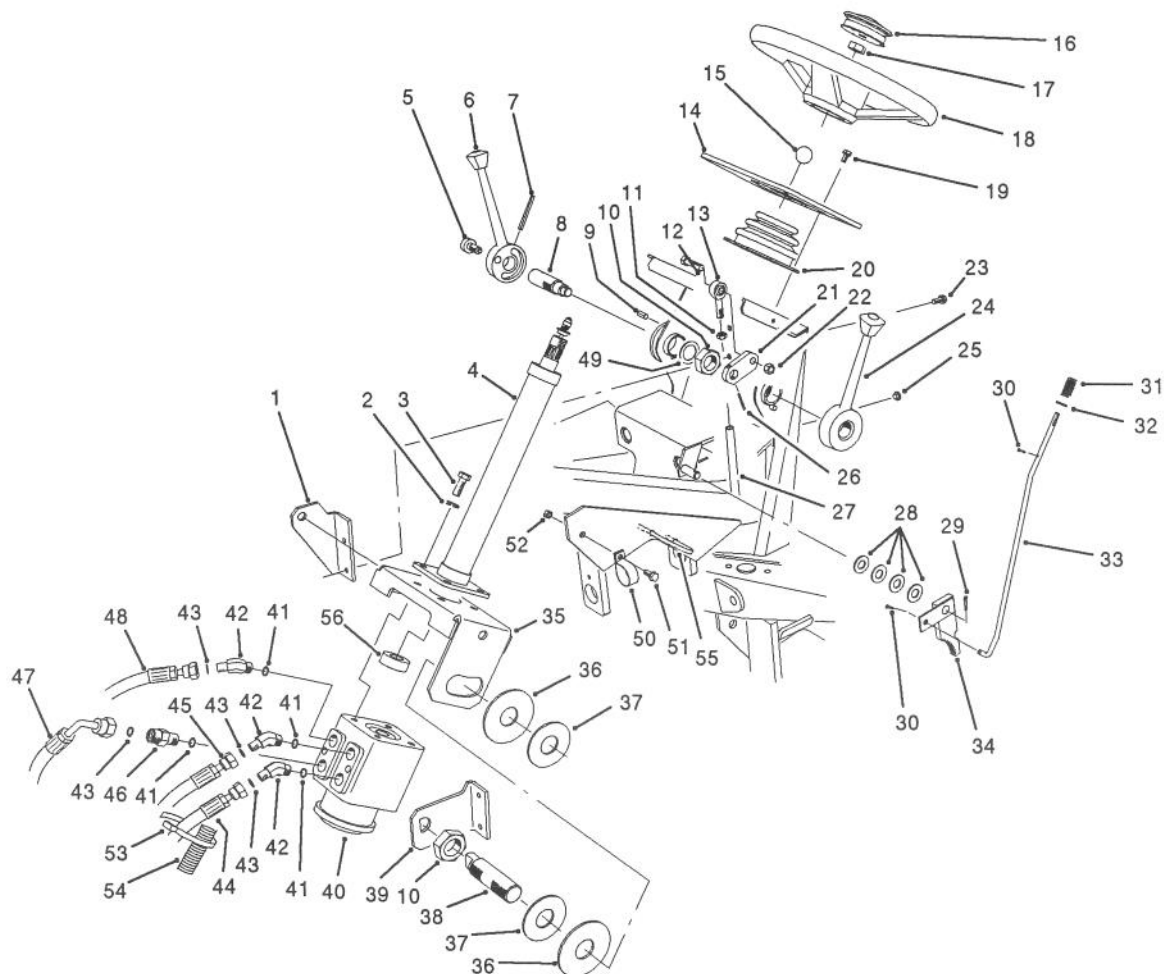 


T-1087

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-8160	Support - Steering Gear	1
2	3253-21	Washer - Lock	4
3	323-6	Screw - Cap Hex. Hd.	4
4	74-3670	Steering Column Assembly	1
5	82-4950	Retractable Spring Plunger	1
6	74-5770	Lever - Shift	1
7	32121-10	Pin - Roll	1
8	74-5790	Shaft - Shift Linkage	1
9	32121-123	Pin - Roll	2
10	3296-49	Nut - Lock	2
11	3220-3	Nut - Jam	1
12	3296-59	Nut - Lock	1
13	2411-36	Eye - Rod	1
14	76-8720	Panel - Steering Tower	1
15	233-17	Knob - Parking Brake	1
16	72-0130	Horn Button Assembly	1
17	47-6990	Nut - Lock	1
18	68-8080	Wheel - Steering	1
19	32144-4	Screw - Hex. Flange Hd.	4
20	76-9450	Boot - Steering Column	1
21	77-4260	Arm - Shift Linkage	1
22	323-8	Screw - Cap Hex. Hd.	1
23	32144-11	Screw - Hex. Washer Hd.	4

Ref. No.	Part No.	Description	No. Used
24	69-1560	Lever - Tilt Steering	1
25	2410-64	Plug - Dome	2
26	32121-6	Pin - Roll	1
27	76-8850	Rod - Shift Linkage	1
28	3256-26	Washer - Flat	4
29	3272-10	Pin - Cotter	1
30	3272-5	Pin - Cotter	2
31	3-3251	Spring - Compression	1
32	3256-22	Washer - Flat	1
33	76-9050	Rod - Parking Brake	1
34	63-7900	Latch - Parking Brake	1
35	76-8140	Bracket - Steering Gear	1
36	31-0390	Washer - Friction	2
37	20-9500	Washer - Flat	2
38	76-8340	Shaft - Tilt Steering	1
39	76-8150	Support - Steering Shaft	1
40	74-3660	Power Steering Valve Assy.	1
41	237-79	Seal - O-Ring	4
42	340-138	Fitting - Hydraulic 45° (Incl. Ref. #40 & 42)	3
43	237-22	Seal - O-Ring	4
44	76-9570	Hose - Hydraulic	1
45	76-9560	Hose - Hydraulic	1

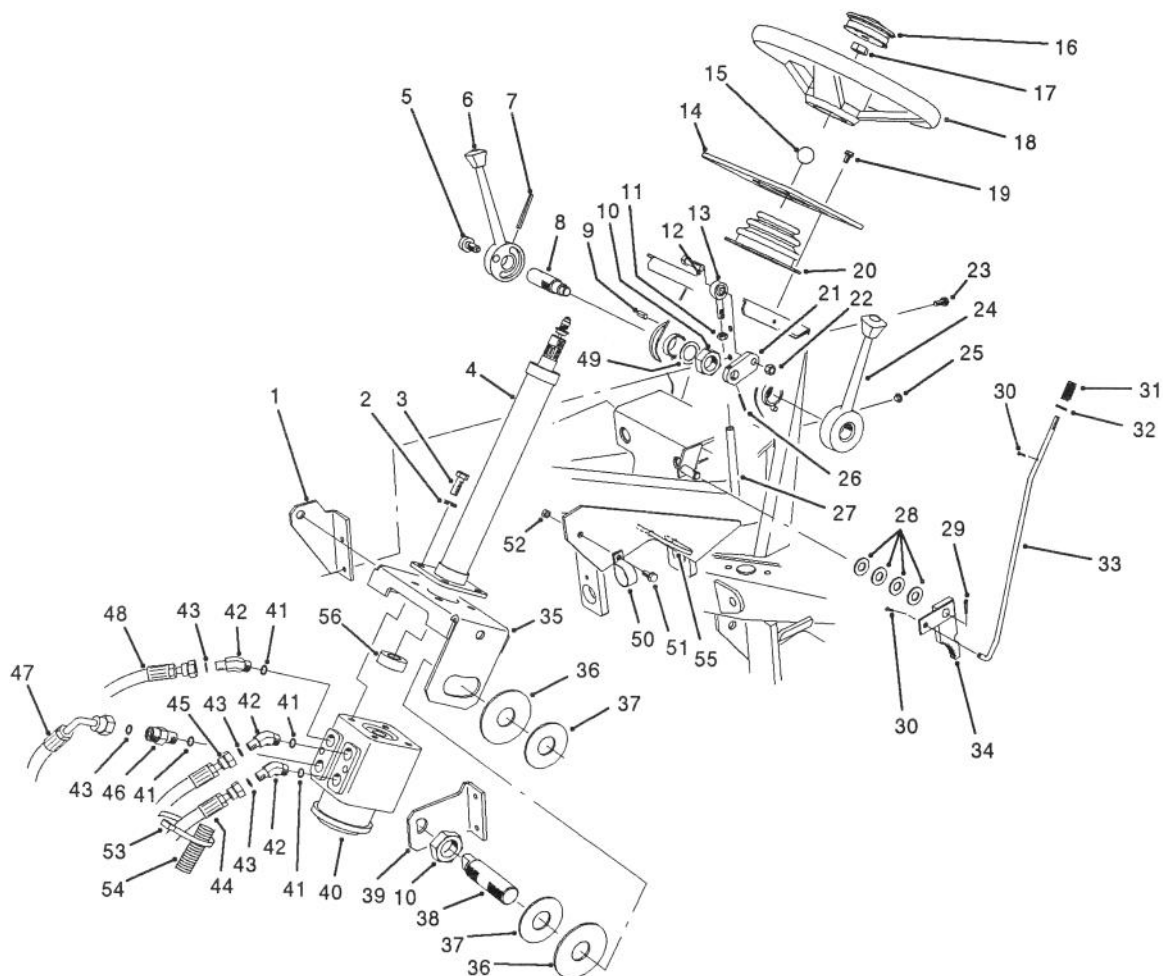 


T-1087

STEERING TOWER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
46	59-6430	Valve - Check (Incl. Ref. #40 & 42)	1
47	82-5080	Hose - Hydraulic	1
48	76-9530	Hose - Hydraulic	1
49	10-8110	Washer	1
50	2412-74	Clamp - R	1

Ref. No.	Part No.	Description	No. Used
51	3234-17	Screw - Cap Hex. Hd.	1
52	32128-20	Nut - Lock	1
53	3290-378	Tie - Cable	1
54	76-8960	Harness - Wire Reel	1
55	3333-975	Tie - Cable	1
56	21-9260	Cover - Dust	1

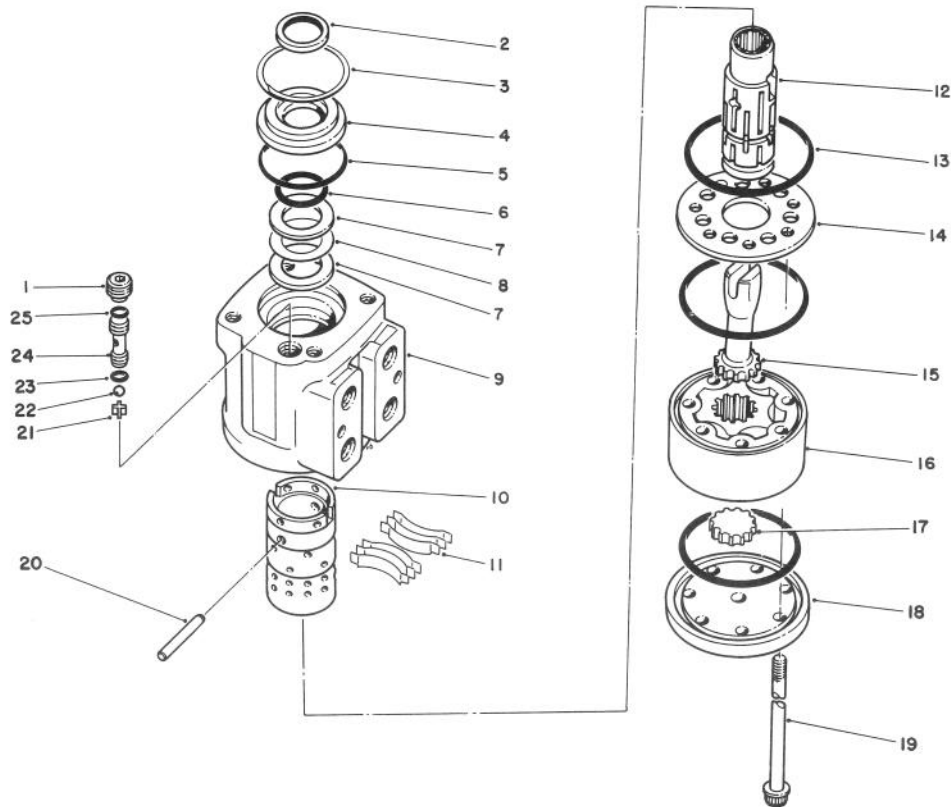 

T-1007


POWER STEERING VALVE No. 74-3660

Ref. No.	Part No.	Description	No. Used
1	52-9260	Screw-Set	1
†2		Seal-Dust	1
3	52-9230	Ring-Retaining	1
4	52-9240	Bushing-Seal, Gland	1
†5		Seal	1
†6		Seal-Ring, Quad	1
7	59-6730	Race-Bearing	2
8	59-6740	Bearing-Needle, Thrust	1
†9		Housing	1
†10		Sleeve-Control	1
11	59-6820	Centering Spring Kit	1
†12		Spool-Control	1
†13		Seal	3
14	59-6850	Plate-Spacer	1
15	59-6860	Drive	1
16	76-6300	Gerotor	1

Ref. No.	Part No.	Description	No. Used
17	76-6320	Spacer	1
18	59-6890	Cap-End	1
19	76-6310	Screw-Cap	7
20	59-6830	Kit-Centering Pin	1
21	52-9290	Retainer-Check Ball	1
22	52-9280	Ball-Check	1
†23		Seal	1
24	52-9270	Seat-Ball, Check	1
†25		Seal	1
*	52-9250	Needle Bearing Kit (Incl. Ref. #7-8)	1
*	76-6330	Control Parts Assembly (Incl. Ref. #9-12 & 20)	1
*	49-0170	Seal Kit (Incl. Ref. #2, 5-6, 13, 23 & 25)	1

*Not Illustrated

 †Not Serviceable Separately

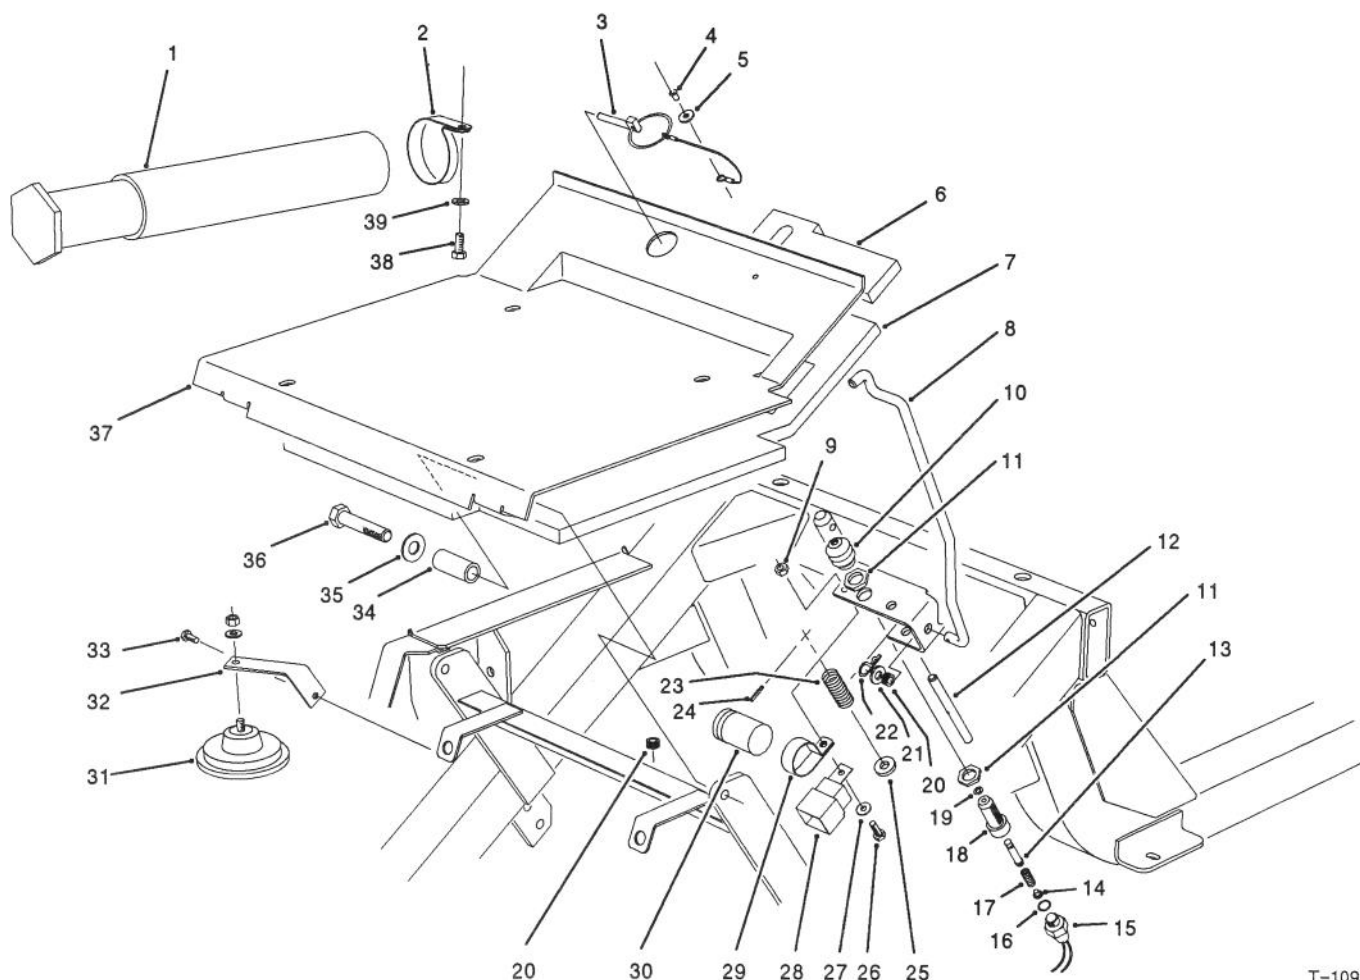


T-1093

SEAT PLATE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-0720	Tube - Manual	1
2	2412-133	Clamp - R	2
3	77-3780	Pin - Lynch	1
4	3290-282	Rivet - Pop	1
5	3256-49	Washer - Flat	1
6	76-9930	Foam - Seat Plate Rear	1
7	82-4900	Foam - Seat Front	1
8	76-9440	Rod - Seat Prop	1
9	32128-33	Nut - Lock	1
10	43-8870	Boot - Switch	1
11	218-461	Nut - Hex	2
12	76-9190	Rod - Seat Spring	1
13	43-8860	Rod - Switch	1
14	43-8610	Cap - Switch Spring	1
15	72-4320	Switch - Ball	1
16	237-30	Seal - O-Ring	1
17	43-8600	Spring - Switch	1
18	43-8620	Body - Switch	1
19	237-7	Seal - O-Ring	1
20	237-136	Grommet	2
21	3256-3	Washer	1

Ref. No.	Part No.	Description	No. Used
22	3290-307	Pin - Hair	1
23	3-6685	Spring - Seat	1
24	3284-3	Pin - Roll	1
25	52-5980	Spacer	1
26	321-4	Screw - Cap Hex. Hd.	1
27	3256-22	Washer - Flat	1
28	63-7590	Relay - SPDT	1
29	2412-74	Clamp - R	1
30	37-2690	Capacitor	1
31	48-4590	Horn	1
32	74-8910	Bracket - Horn	1
33	32144-4	Screw - Hex. Hd.	1
34	76-9480	Sleeve - Seat Pivot	2
35	3256-26	Washer - Flat	2
36	325-9	Screw - Cap Hex. Hd	2
37	76-9460	Plate - Seat	1
38	322-2	Screw - Cap Hex. Hd.	2
39	3256-23	Washer - Flat	2
*	43-9071	Seat Switch Assembly (Incl. Ref. #10, 11 & 13-19)	1

 *Not Illustrated

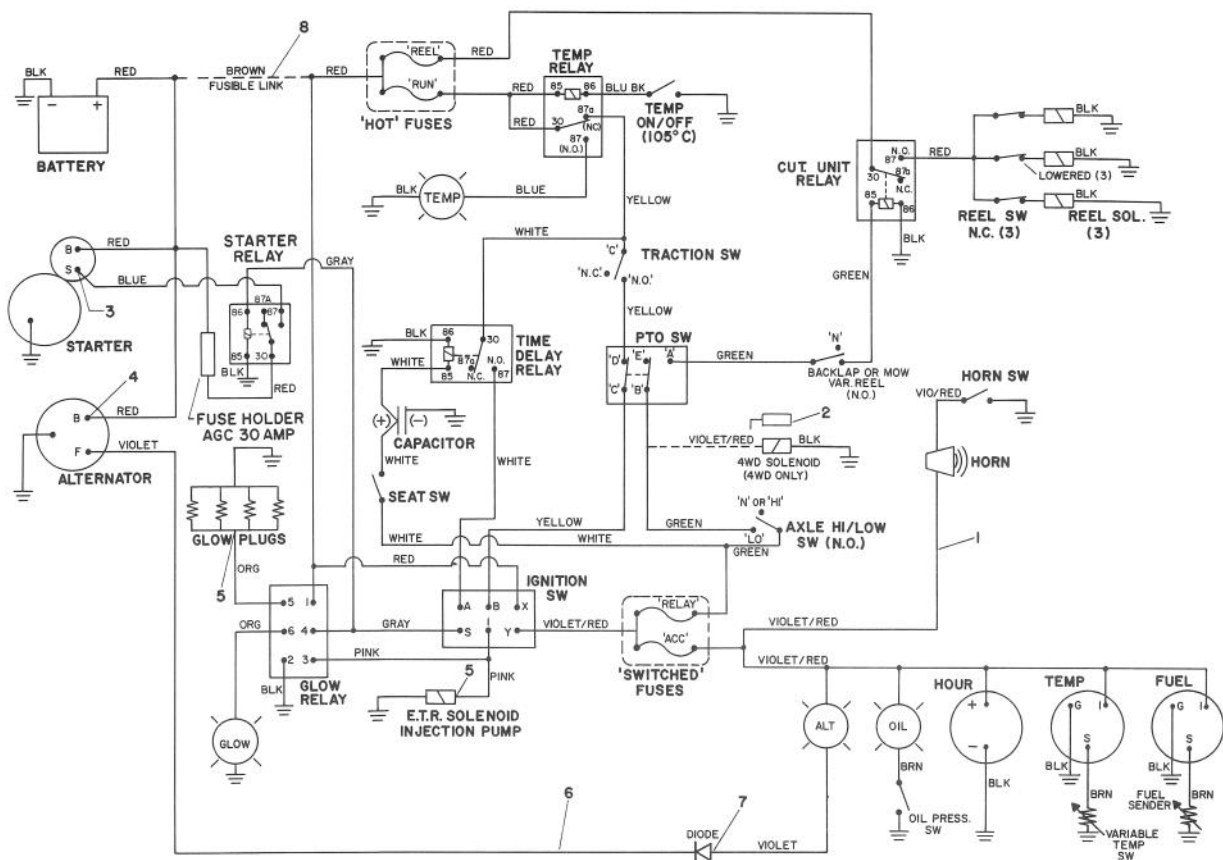


T-1130

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	76-8960	Harness - Wire Reel	1
2	76-4880	Plug - Electrical (Model No. 03600 Only)	1
3	48-7930	Nut - Hex.	1
4	48-7890	Nut - Hex.	1

Ref. No.	Part No.	Description	No. Used
5	48-7880	Nut - Hex.	2
6	76-8860	Harness - Wire Main (Incl. Ref. #7)	1
7	67-7130	Diode	1
8	67-7180	Link - Fusible	1

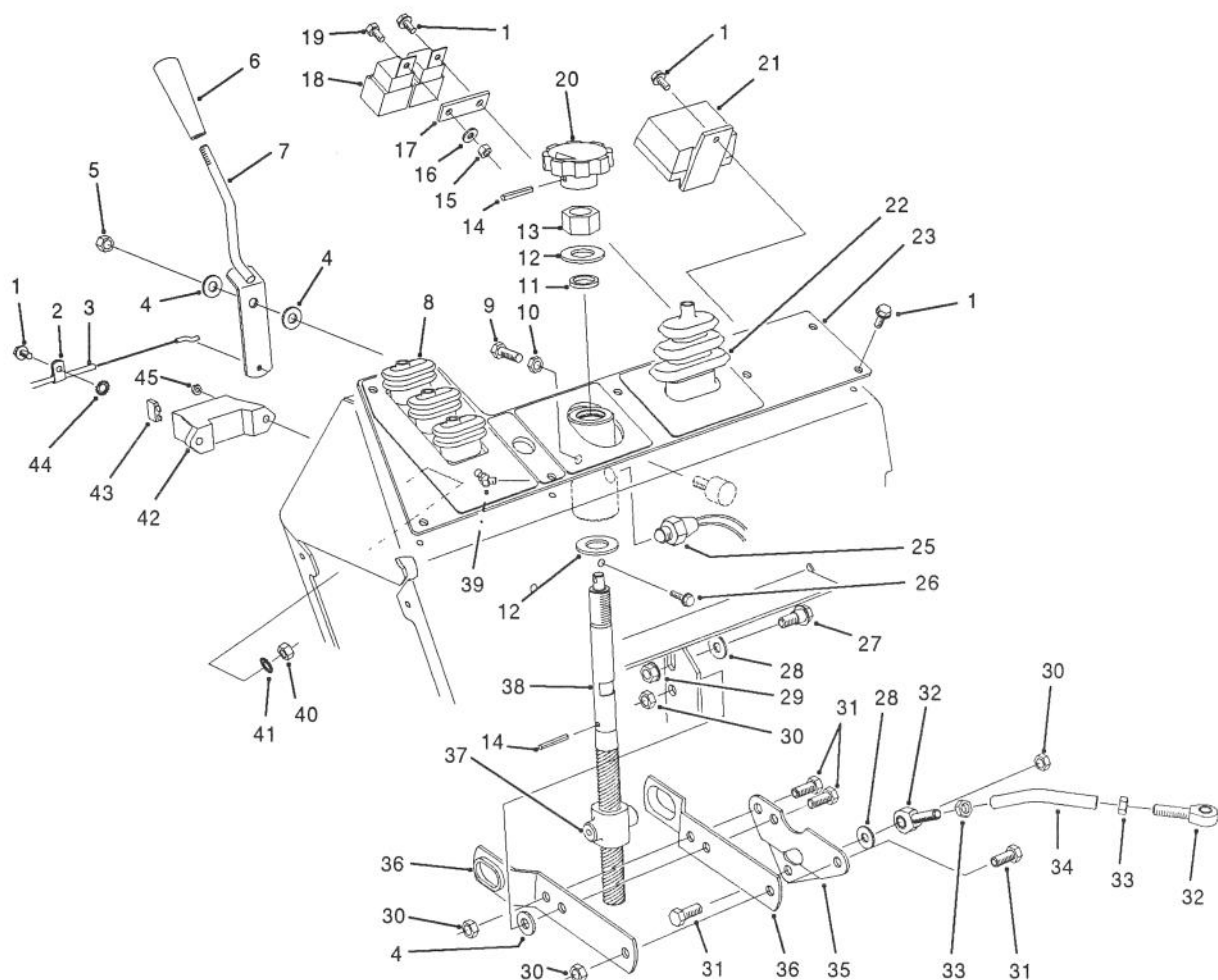 


T-1089

CONTROL CONSOLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw - Hex. Washer Hd.	11
2	2412-32	Clamp - R	1
3	74-5480	Cable - Throttle	1
4	66-2920	Washer - Friction	3
5	3296-41	Nut - Lock	1
6	233-39	Knob - Throttle	1
7	76-4300	Lever - Throttle	1
8	76-8450	Boot - Lift Lever	1
9	322-5	Screw - Cap Hex. Hd.	1
10	3218-2	Nut - Jam	1
11	253-84	Seal - Oil	1
12	3256-28	Washer - Flat	2
13	3296-51	Nut - Lock	1
14	32121-6	Pin - Roll	2
15	3296-42	Nut - Lock	1
16	3256-1	Washer - Flat	1
17	77-3970	Support - Relay	1
18	63-7590	Relay - SPDT	2
19	321-2	Screw - Cap Hex. Hd.	1
20	59-7130	Knob - Reel Speed	1
21	76-5260	Relay - Glow Plug	1
22	76-8440	Boot - Throttle	1
23	76-8710	Panel - Console	1

Ref. No.	Part No.	Description	No. Used
25	72-4320	Switch - Ball	1
26	3290-126	Screw - Hex. Washer Hd.	2
27	67-0870	Bolt - Shoulder	1
28	3256-3	Washer - Flat	2
29	3290-357	Nut - Flange Lock	1
30	3296-59	Nut - Lock	4
31	323-6	Screw - Cap Hex. Hd.	4
32	2411-36	Eye - Rod	2
33	3220-3	Nut - Jam	2
34	82-5160	Rod - Reel Lever	1
35	82-5250	Plate - Adapter	1
36	76-9090	Arm - Reel Speed	2
37	37-0500	Follower - Reel Speed	1
38	76-4100	Shaft - Reel Speed	1
39	302-11	Fitting - Grease	1
40	3296-47	Nut - Lock	1
41	3255-8	Washer - Lock E.T.L.W.	1
42	67-7160	Block - Fuse	1
43	218-573	Fuse - 5A	2
*	218-581	Fuse - 15A	1
*	218-593	Fuse - 30A	1
44	3255-7	Washer - E.T.L.W.	1
45	3296-12	Nut - Lock	2

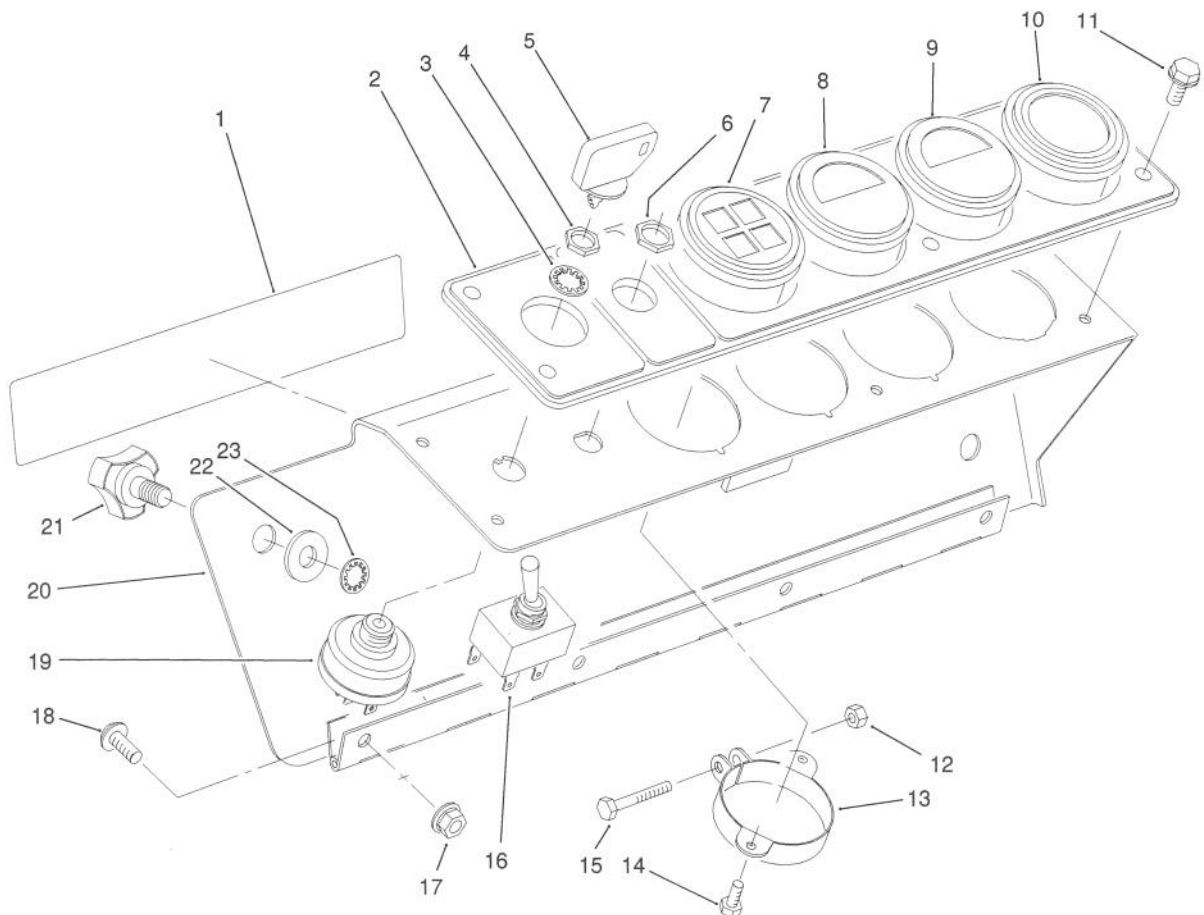 


T-1090

GAGE PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-9780	Decal - 4 Matic (Model 03601 Only)	1
2	76-8700	Panel - Gauge	1
3	218-447	Washer - Lock	1
4	218-446	Nut - Hex.	1
5	62-7770	Key - Ignition	1
6	218-500	Nut - Hex.	1
7	66-2960	Cluster - Warning Light	1
*	76-8950	Harness - Wire (Lamp)	1
*	219-17	Bulb - Warning Light	4
8	76-9060	Gauge - Temperature	1
9	66-2940	Gauge - Fuel	1
10	66-2950	Meter - Hour	1

Ref. No.	Part No.	Description	No. Used
11	32144-4	Screw - Hex. Washer Hd.	6
12	3296-2	Nut Lock	1
13	69-4780	Clamp - Gauge	1
14	32144-1	Screw - Hex. Hd.	2
15	32105-12	Screw - Hex. Hd.	1
16	37-2610	Switch - Toggle	1
17	32128-33	Nut - Flange Lock	4
18	3274-68	Screw - Socket Button Hd.	4
19	27-2360	Switch - Ignition	1
20	82-3750	Cover - Console	1
21	77-3620	Retainer - Cover	2
22	3256-3	Washer	2
23	32151-72	Retainer - Push-On	2

 *Not Illustrated

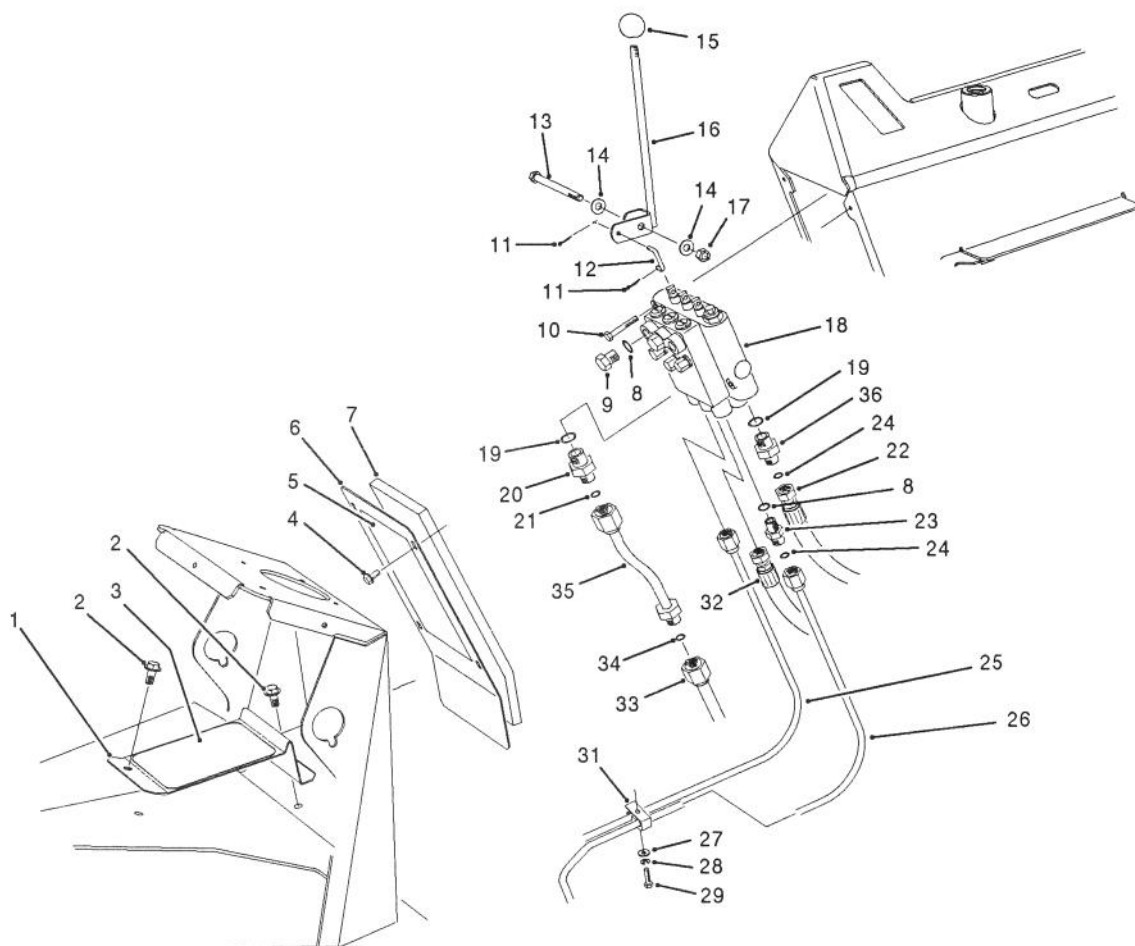


T-1135

LIFT VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	82-5300	Support - Heel	1
2	32144-11	Screw	2
3	76-7040	Pad - Foot	1
4	46-6810	Screw - Hex. Washer Hd.	4
5	82-4870	Decal - Service	1
*	82-4880	Decal - Service	1
6	76-7090	Cover - Console	1
7	76-6270	Foam - Cover	1
8	237-42	Seal - O-Ring	5
9	353-508	Fitting - Hydraulic Plug	2
10	321-10	Screw - Cap Hex. Hd.	2
11	3272-1	Pin - Cotter	6
12	69-9140	Link - Lift Lever	3
13	323-17	Screw - Cap Hex. Hd.	1
14	3256-24	Washer - Flat	2
15	233-42	Knob	3
16	74-6060	Lever - Lift Control R.H.	1
*	74-6050	Lever - Lift Control Mid.	1
*	69-7010	Lever - Lift Control L.H.	1

Ref. No.	Part No.	Description	No. Used
17	3296-39	Nut - Lock	1
18	69-1780	Lift Valve Assembly	1
19	237-79	Seal - O-Ring	2
20	340-4	Fitting - Hydraulic Straight	1
21	237-30	Seal - O-Ring	1
22	84-0850	Hose - Hydraulic	1
23	340-2	Fitting - Hydraulic Straight	3
24	237-22	Seal - O-Ring	4
25	74-6310	Tube - Hydraulic	1
26	74-6300	Tube - Hydraulic	1
27	3256-22	Washer - Flat	1
28	3253-3	Washer - Lock	1
29	321-8	Screw - Cap Hex. Hd.	1
31	58-3880	Clamp - Tube	1
32	76-9900	Hose - Hydraulic	1
33	74-6380	Tube - Hydraulic	1
34	237-65	Seal - O-Ring	1
35	82-3680	Counterbalance Tube Assy.	1
36	340-3	Fitting - Hydraulic Straight	1

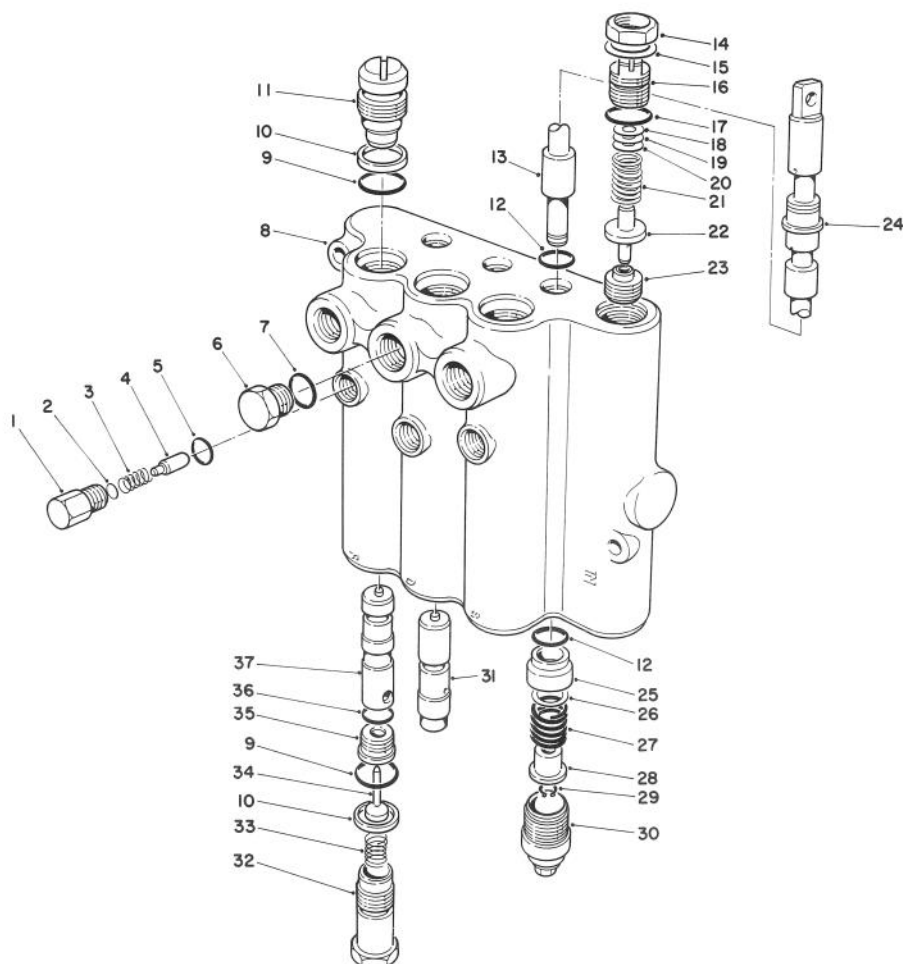 


LIFT VALVE NO. 69-1780

T-0379

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	58-6780	Plug Assy. (Incl. Ref. #5)	3	21	69-1820	Spring - Black	1
2	60-6450	Disc	A/R	22	58-6440	Poppet	1
3	58-6760	Spring	3	†23		Seat	1
4	58-6770	Plunger - Detent	3	24	58-6320	Wiper - Seal	3
5	58-6790	Seal - O-Ring	3	25	58-6400	Bushing	3
6	58-6710	Plug Assy. (Incl. Ref. #7)	1	26	58-6700	Washer	3
7	58-6720	Seal - O-Ring	1	27	58-6730	Spring	3
†8		Body	1	28	58-6310	Spacer	3
9	60-5720	Seal - O-Ring	6	29	58-6460	Ring - Retaining	3
10	58-6370	Washer - Back-Up	6	30	58-6420	Cap Assembly	3
11	58-6350	Plug Assembly (Incl. Ref. #9-10)	3	31	69-1840	Plunger	1
12	58-6450	Seal - O-Ring	6	32	69-1800	Plug Assembly (Incl. Ref. #9-10)	3
†13		Spool	3	33	69-1810	Spring	3
†14		Nut - Lock	1	34	58-6290	Poppet Assembly	3
†15		Washer	1	35	58-6330	Seat Assy. (Incl. Ref. #36)	3
16	69-1830	Plug Assembly (Incl. Ref. #14, 15 & 17)	1	36	58-6340	Seal - O-Ring	3
17	58-6750	Seal - O-Ring	1	37	69-1790	Plunger	2
18	58-6470	Washer	A/R	*	60-3780	Seal Kit (Incl. Ref. #5, 7, 9, 10, 12, 17, 24, 29, 34, & 36)	
19	58-6480	Washer	A/R				
20	58-6490	Washer	A/R				

*Not Illustrated

 †Not Serviceable Separately

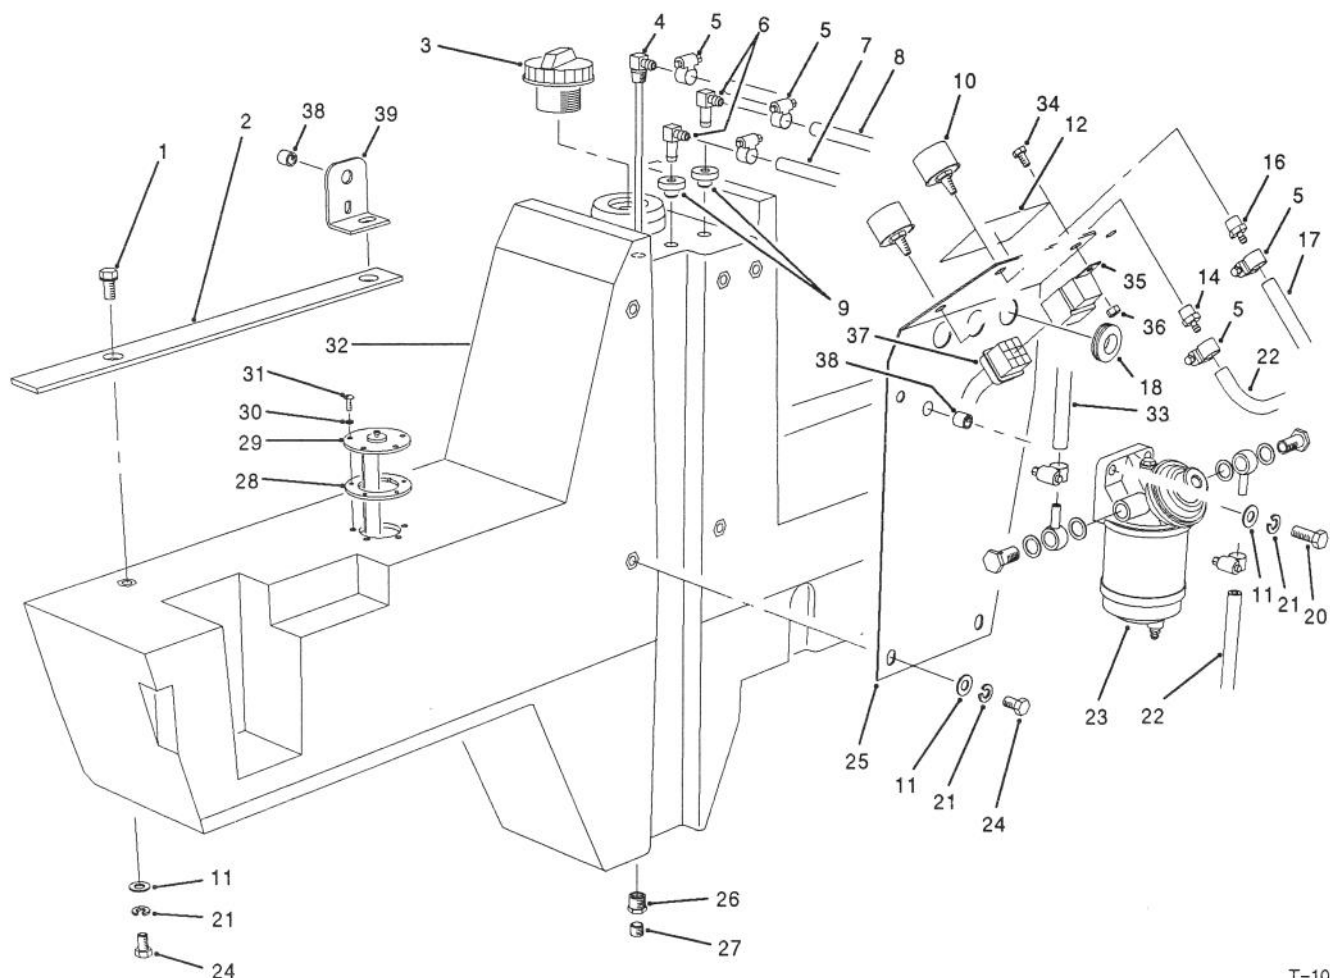


T-1088

FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3234-12	Screw - Hex. Washer Hd.	2
2	76-9790	Foam - Fuel Tank	1
3	70-8621	Cap - Fuel	1
4	76-6600	Pipe - Stand	1
5	2412-108	Clamp - Hose	12
6	46-6550	Fitting - Fuel 90°	2
8	63-7627	Hose - Fuel	1
9	46-6560	Bushing - Rubber	2
10	68-6150	Breather	2
11	3256-24	Washer - Flat	9
12	76-8780	Decal - Fuel	1
14	354-95	Fitting - Barb	1
16	354-94	Fitting - Barb	1
17	74-9122	Hose - Vent	1
18	240-6	Grommet	3
20	323-7	Screw - Cap Hex. Hd.	2
21	3253-21	Washer - Lock	9
22	63-7622	Hose - Fuel	2

Ref. No.	Part No.	Description	No. Used
23	76-5200	Fuel Filter Assembly	1
24	323-34	Screw - Cap Hex. Hd.	7
25	14-0859	Fuel Tank Plate Assembly (Incl. Ref. #38)	1
26	2812-1	Fitting - Reducing Bushing	1
27	285-22	Plug - Pipe	1
28	62-7650	Gasket - Sending Unit	1
29	74-5860	Sending Unit - Fuel	1
30	3253-15	Washer - Lock	5
31	32122-24	Screw - Round Hd.	5
32	74-5580	Tank - Fuel	1
33	63-7626	Hose - Fuel	1
34	321-2	Screw - Cap Hex. Hd.	1
35	70-1480	Relay - Starter	1
36	3296-42	Nut - Lock	1
37	77-4200	Harness - Wire Relay	1
38	32148-9	Insert - Threaded	3
39	82-3660	Bracket - Cover	1

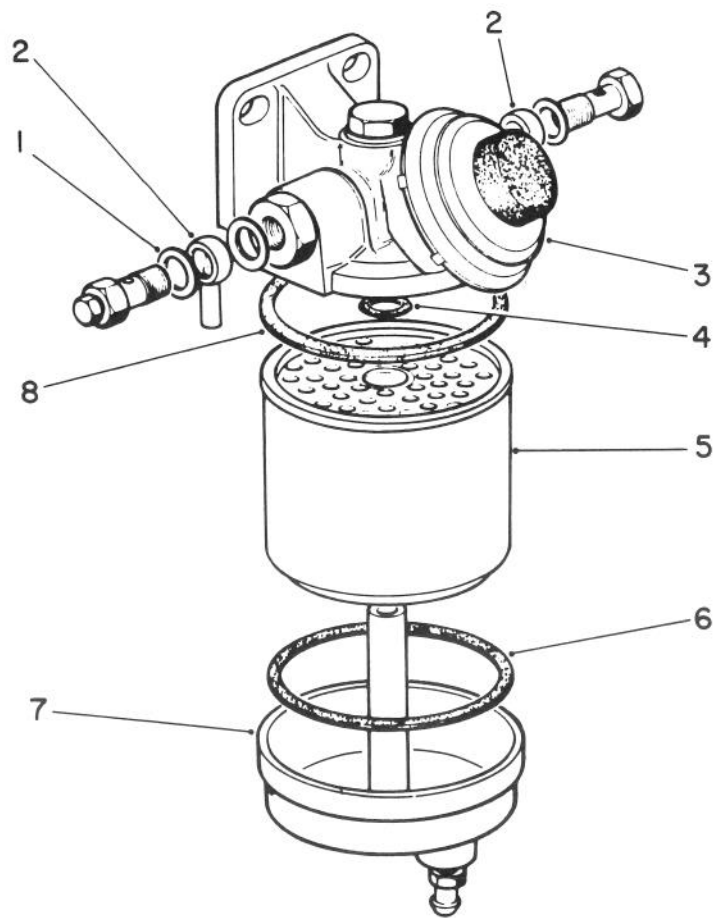 


T-0966

FUEL FILTER ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-5180	Washer - Copper	4	5	76-5220	Element - Filter (Incl. Ref. #4, 6 & 8)	1
2	76-5190	Fitting - Adjustable	2	6		Seal - Gasket	1
3	76-5200	Fuel Filter Assembly (Incl. Ref. #7)	1	7		Cap - Fuel Filter	1
4		Seal - O-Ring	1	8		Seal - Gasket	1

 
HYDRAULIC SCHEMATIC (Model No. 03600)

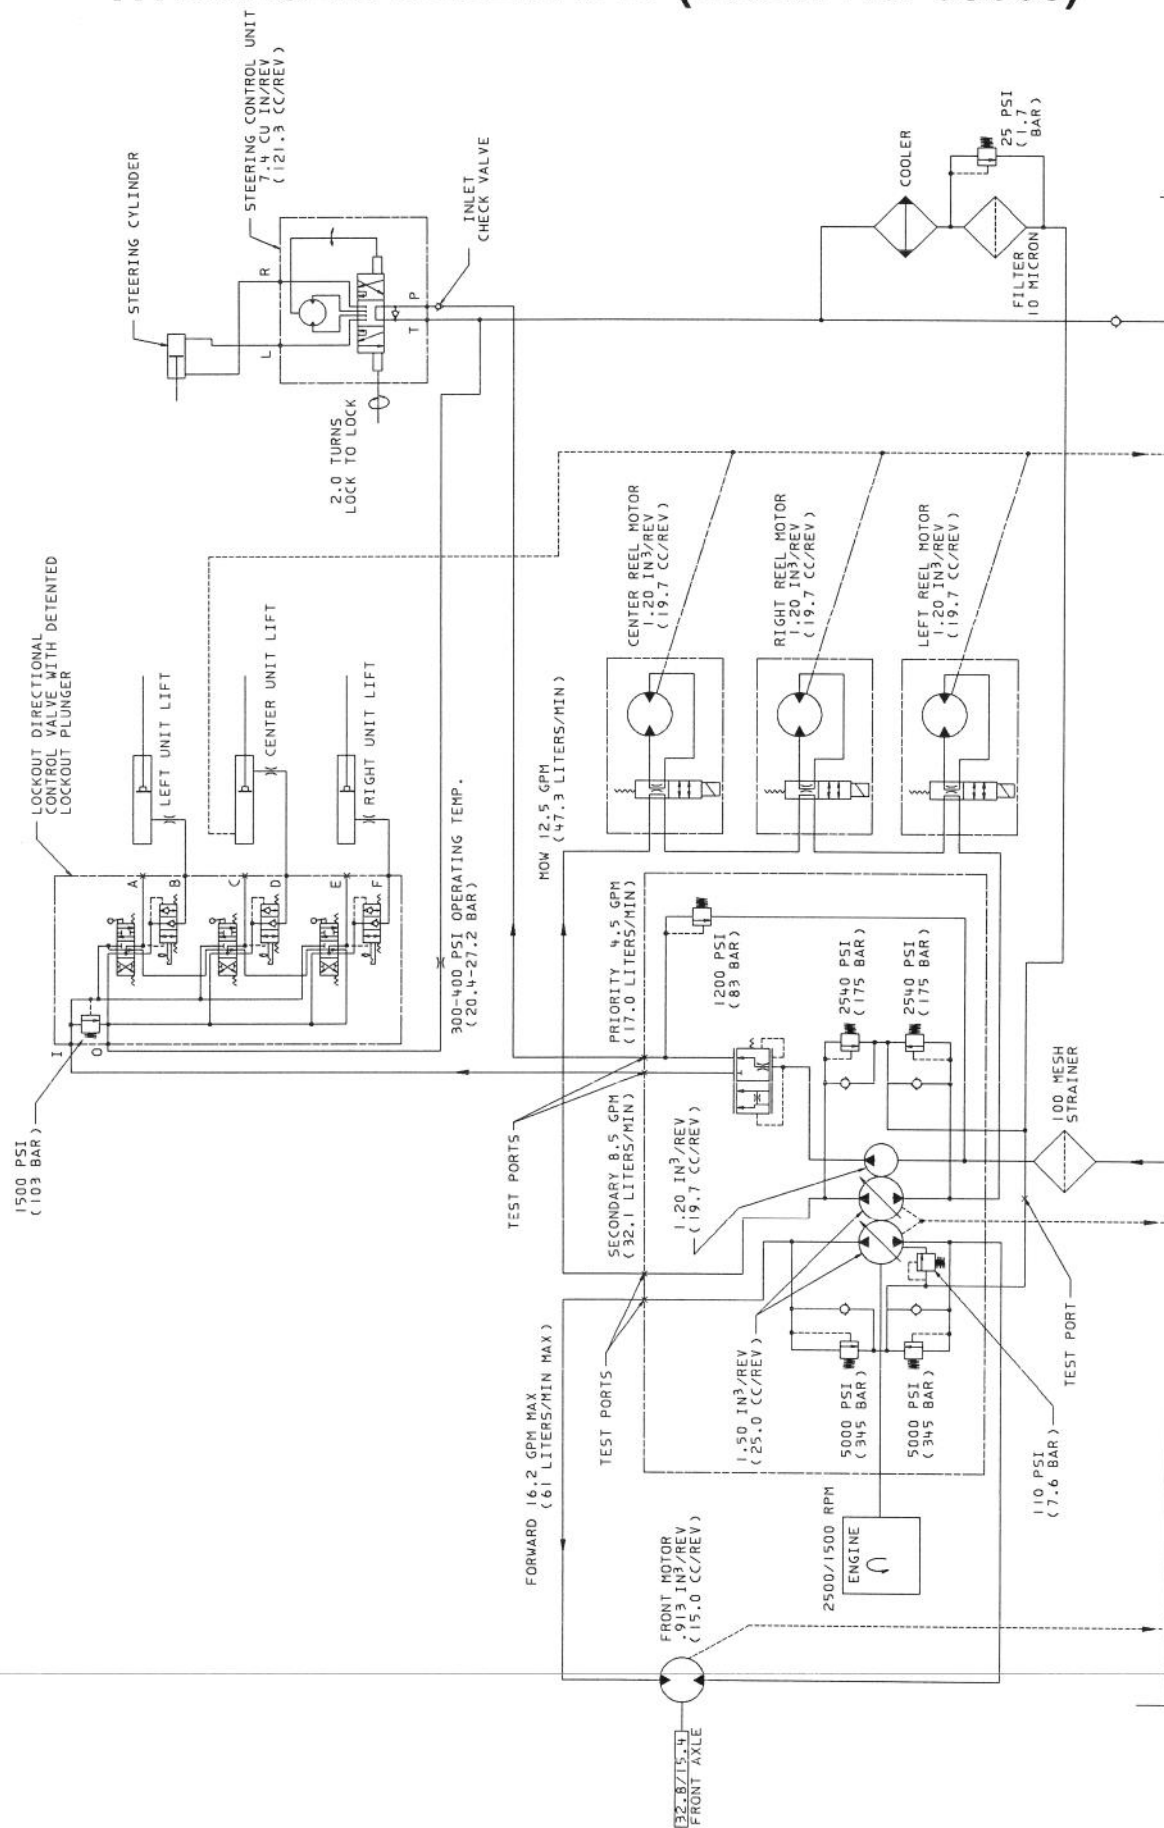

T-1128

  HYDRAULIC SCHEMATIC (Model No. 03601)

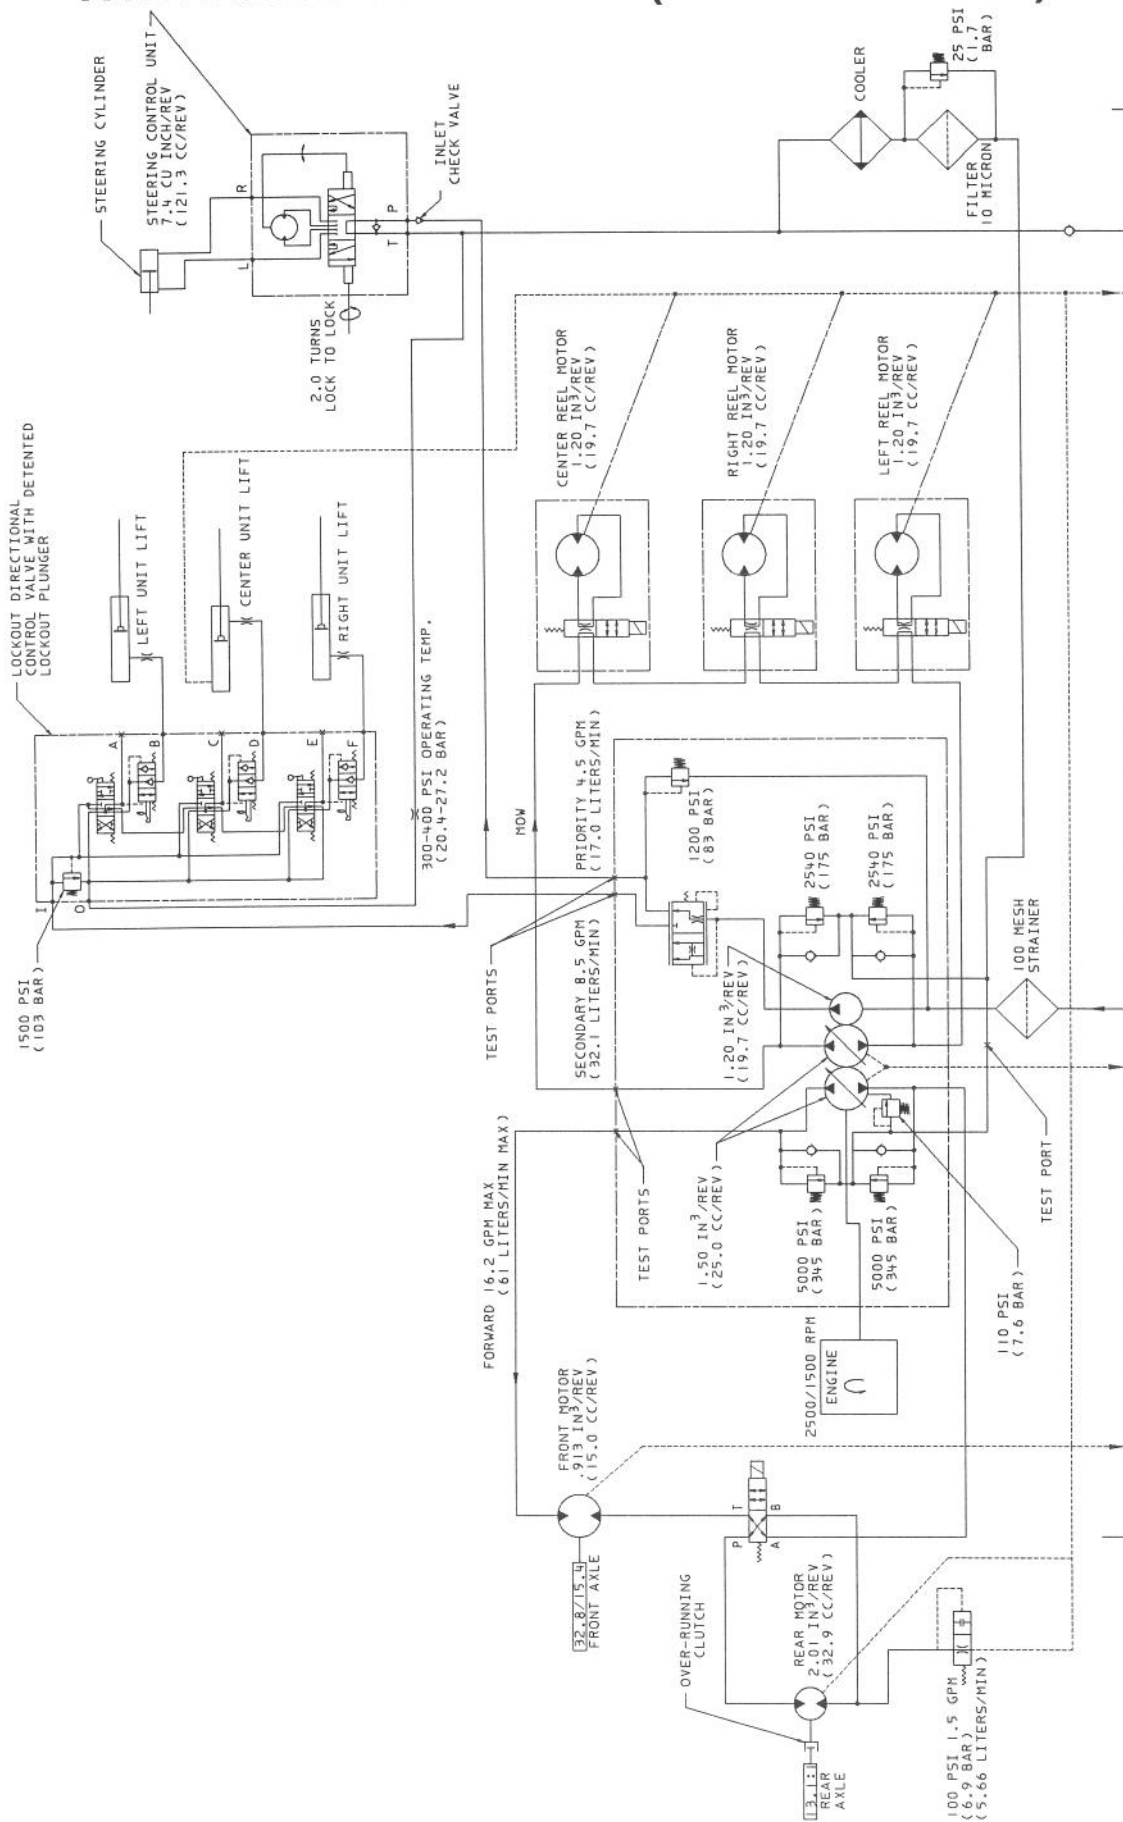

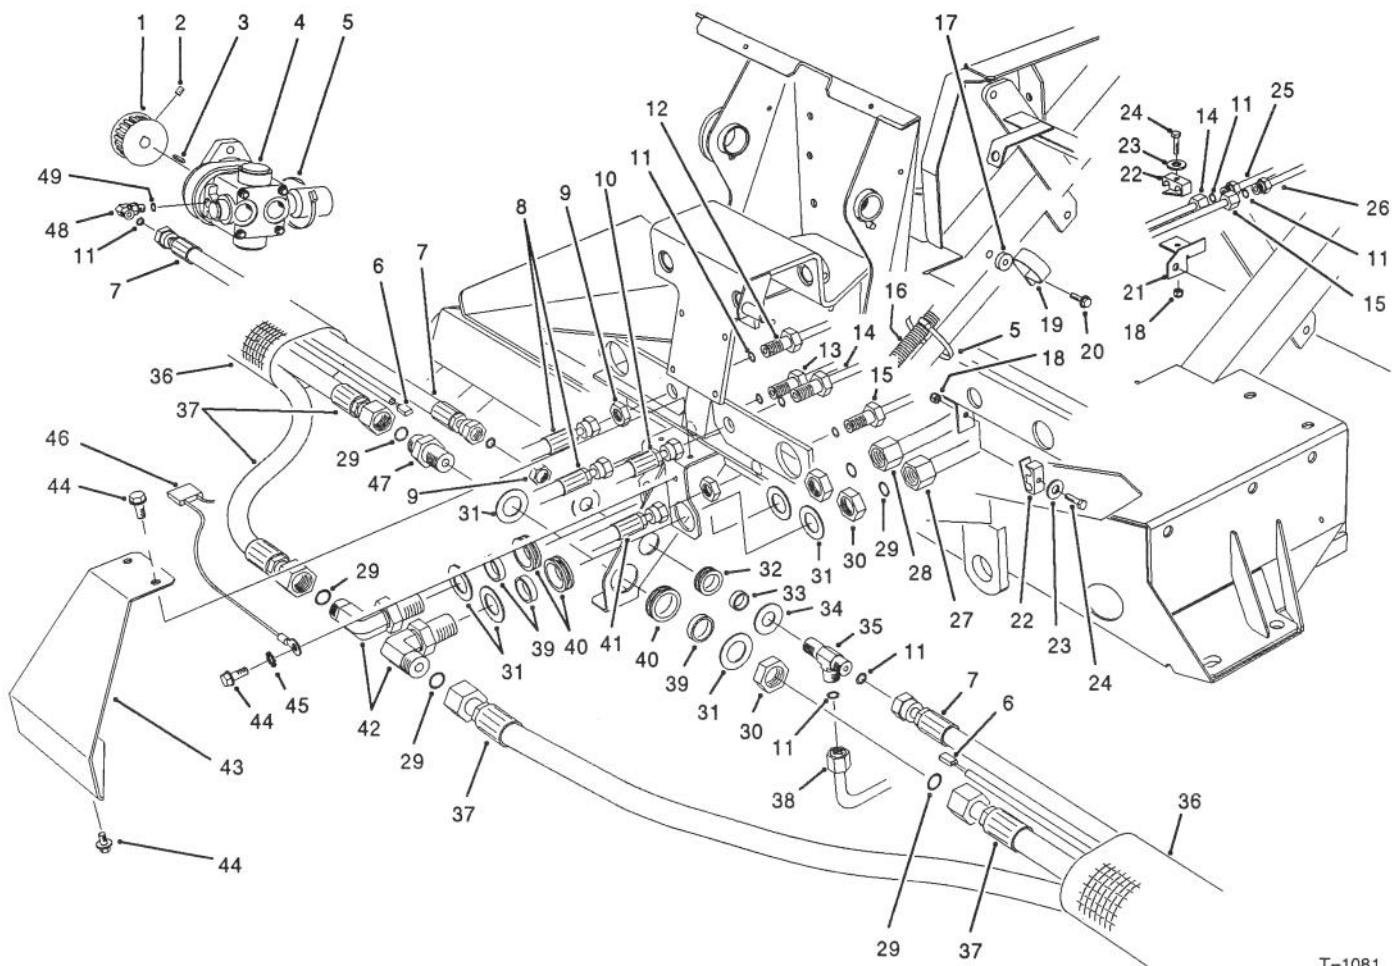


T-1081

FRONT HYDRAULIC ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	47-7150	Pulley - Reel Drive	2
2	3246-17	Screw - Set	4
3	47-2380	Key - Square	2
4	74-3390	Motor - Reel	2
5	3290-378	Tie - Cable	3
6	76-8980	Harness - Wire (Reel)	2
7	76-8210	Hose - Hydraulic	2
8	76-8220	Hose - Hydraulic	2
9	340-70	Nut - Bulkhead	5
10	76-9570	Hose - Hydraulic	1
11	237-22	Seal - O-Ring	11
12	74-6300	Tube - Hydraulic (Incl. Ref. #11)	1
13	74-6310	Tube - Hydraulic (Incl. Ref. #11)	1
14	74-6250	Tube - Hydraulic (Incl. Ref. #11)	1
15	74-6240	Tube - Hydraulic (Incl. Ref. #11)	1
16	76-8860	Harness - Wire (Main)	1
17	77-4060	Spacer	2
18	3296-42	Nut - Lock	2
19	2412-126	Clamp - R	2
20	32144-26	Screw - Hex. Washer Hd.	2
21	74-6470	Bracket - Clamp	1
22	58-3880	Clamp - Hose	2

Ref. No.	Part No.	Description	No. Used
23	3256-22	Washer	2
24	321-8	Screw - Cap Hex. Hd.	2
25	74-6270	Tube - Hydraulic (Incl. Ref. #11)	1
26	74-6260	Tube - Hydraulic (Incl. Ref. #11)	1
27	74-6350	Tube - Hydraulic	1
28	74-6210	Tube - Hydraulic	1
29	237-65	Seal - O-Ring	6
30	340-74	Nut - Bulkhead	3
31	69-9010	Washer	6
32	240-4	Grommet	1
33	69-8970	Spacer	1
34	69-8940	Washer	2
35	340-120	Fitting - Hydraulic Tee (Incl. Ref. #11)	1
36	59-7260	Sleeve - Protective	2
37	76-8170	Hose - Hydraulic	4
38	74-6360	Tube - Hydraulic	1
39	69-9000	Spacer	3
40	240-3	Grommet	3
41	76-9560	Hose - Hydraulic	1
42	340-72	Fitting - Hydraulic 90° (Incl. Ref. #29)	2
43	74-4970	Guard - Bulkhead	1
44	46-6810	Screw - Hex. Washer Hd.	4

 *Not Illustrated

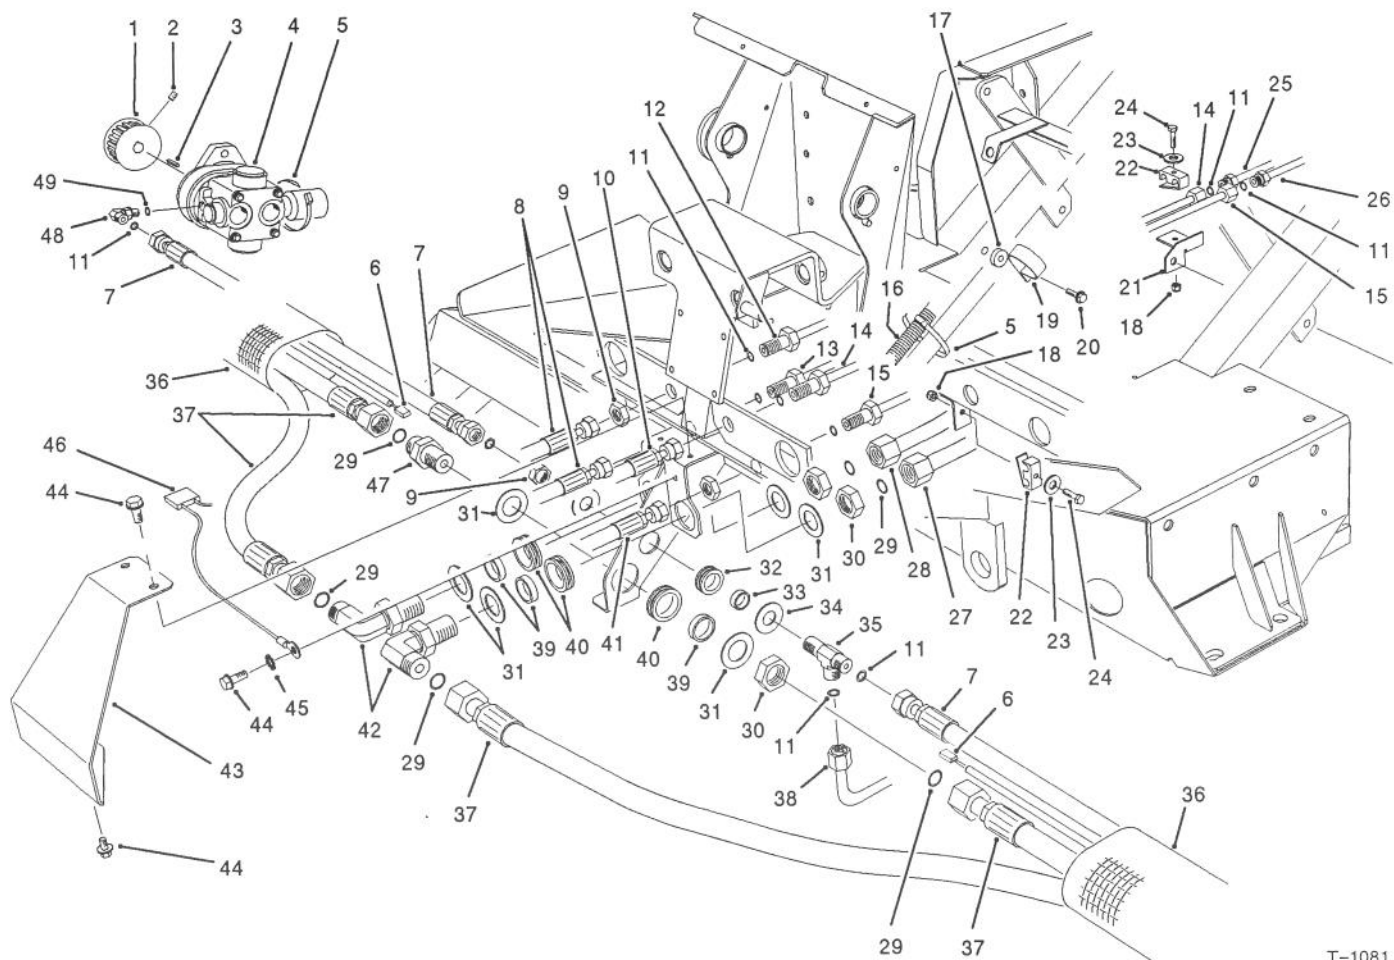


T-1081

FRONT HYDRAULIC ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	3255-8	Washer - E.T.L.W.	1
46	76-8960	Harness - Wire Reel	1
47	340-76	Fitting - Hydraulic Straight (Incl. Ref. #29)	1

Ref. No.	Part No.	Description	No. Used
48	340-77	Fitting - Hydraulic 90° (Incl. Ref. #11 & 49)	2
49	237-42	Seal - O-Ring	2

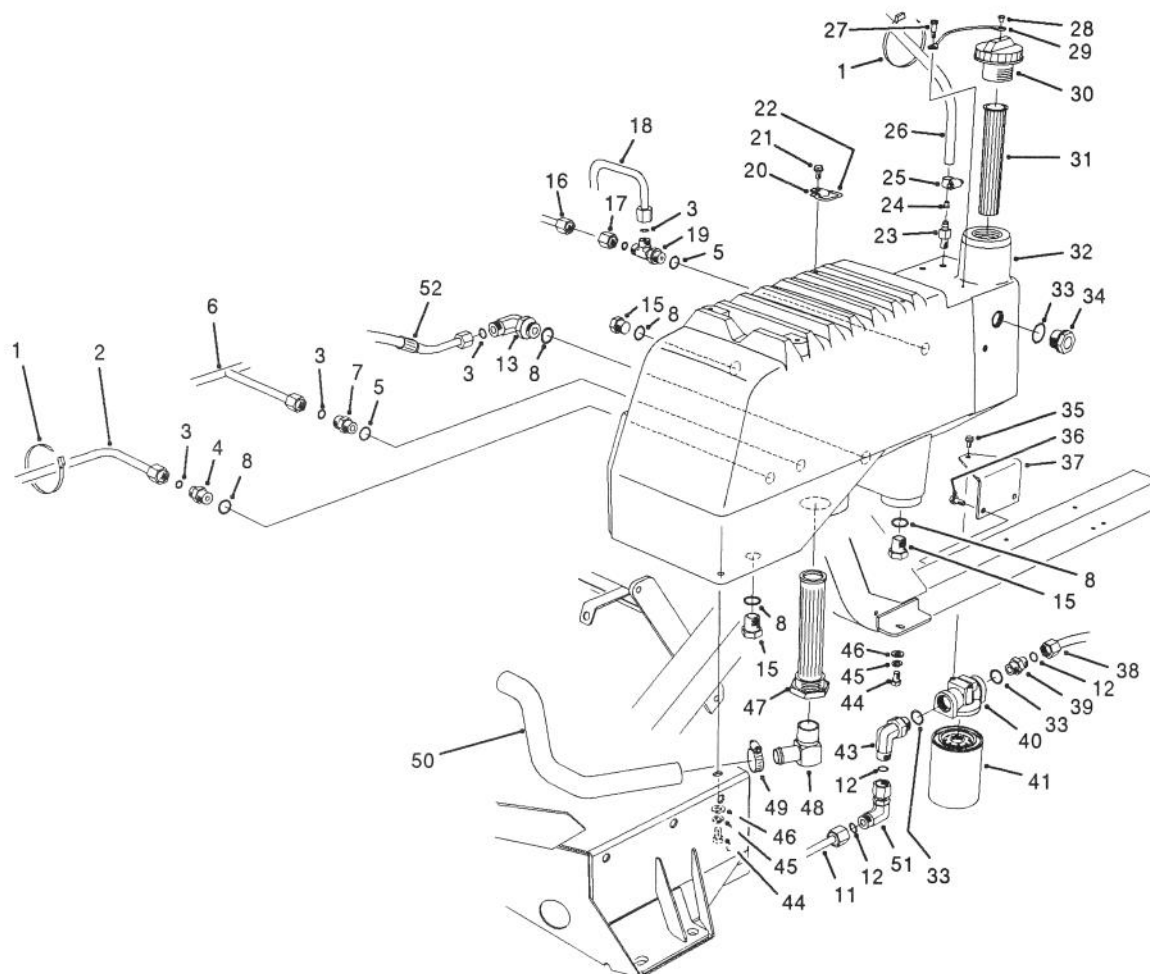 


T-1092

HYDRAULIC RESERVOIR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290-378	Tie - Cable	2
2	74-6220	Tube - Hydraulic	1
3	237-30	Seal - O-Ring	5
4	340-6	Fitting - Hydraulic Straight (Incl. Ref. #3 & 8)	1
5	237-79	Seal - O-Ring	2
6	74-6380	Tube - Hydraulic	1
7	75-9550	Valve - Check (Incl. Ref. #3 & 5)	1
8	237-80	Seal - O-Ring	5
11	84-0900	Hose - Hydraulic	1
12	237-65	Seal - O-Ring	3
13	340-105	Fitting - Hydraulic 90° (Incl. Ref. #8 & 12)	1
15	353-551	Plug (Incl. Ref. #8)	3
16	74-6230	Tube - Hydraulic (Model No. 03601 Only)	1
17	340-152	Cap - Hydraulic (Model No. 03600 Only)	1
18	74-6370	Tube - Hydraulic	1
19	340-109	Fitting - Hydraulic Tee (Incl. Ref. #3 & 5)	1
20	76-9950	Bracket - Ring	4
21	32144-4	Screw - Hex. Washer Hd.	2

Ref. No.	Part No.	Description	No. Used
22	249-49	Ring - D	4
23	354-103	Fitting - Straight	1
24	74-4080	Orifice - Breather	1
25	2412-108	Clamp - Hose	2
26	74-9122	Hose - Return	1
27	57-5420	Screw - Shoulder	1
28	2410-73	Pin - Tether	1
29	75-0540	Tether - Reservoir Cap	1
30	70-8640	Cap - Hydraulic Reservoir	1
31	61-2790	Screen - Fill	1
32	82-3700	Reservoir - Hydraulic	1
33	237-81	Seal - O-Ring	3
34	69-1170	Gauge - Sight (Incl. Ref. #23)	1
35	3234-13	Screw - Hex. Washer Hd.	2
36	32144-11	Screw - Hex. Washer Hd.	2
37	74-4230	Bracket - Oil Filter	1
38	74-6400	Tube - Hydraulic	1
39	340-8	Fitting - Hydraulic Straight (Incl. Ref. #12 & 23)	1
40	86-3000	Head - Hydraulic Filter	1
41	76-6490	Element - Hydraulic Filter	1
43	340-139	Fitting - Hydraulic 90° (Incl. Ref. #12 & 23)	1

 *Not Illustrated

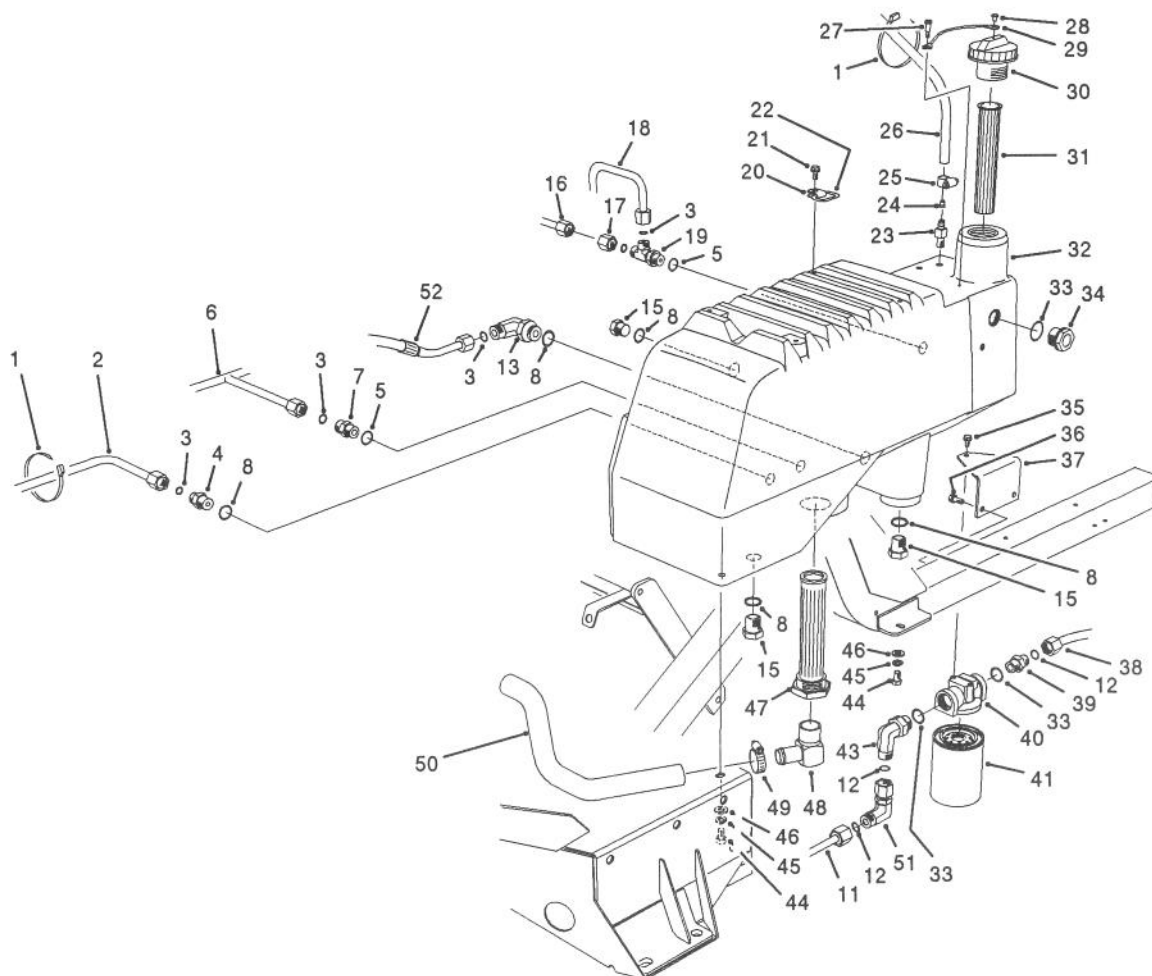


T-1092

HYDRAULIC RESERVOIR ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
44	323-4	Screw - Cap Hex. Hd.	3
45	3253-21	Washer - Lock	3
46	3256-24	Washer - Flat	3
47	75-0550	Strainer - Tank	1
48	354-87	Fitting - Hydraulic 90°	1

Ref. No.	Part No.	Description	No. Used
49	2412-34	Clamp - Hose	1
50	82-5110	Hose - Suction	1
51	340-160	Fitting - Hydraulic 90° (Incl. Ref. #12)	1
52	84-0890	Hose - Hydraulic	1

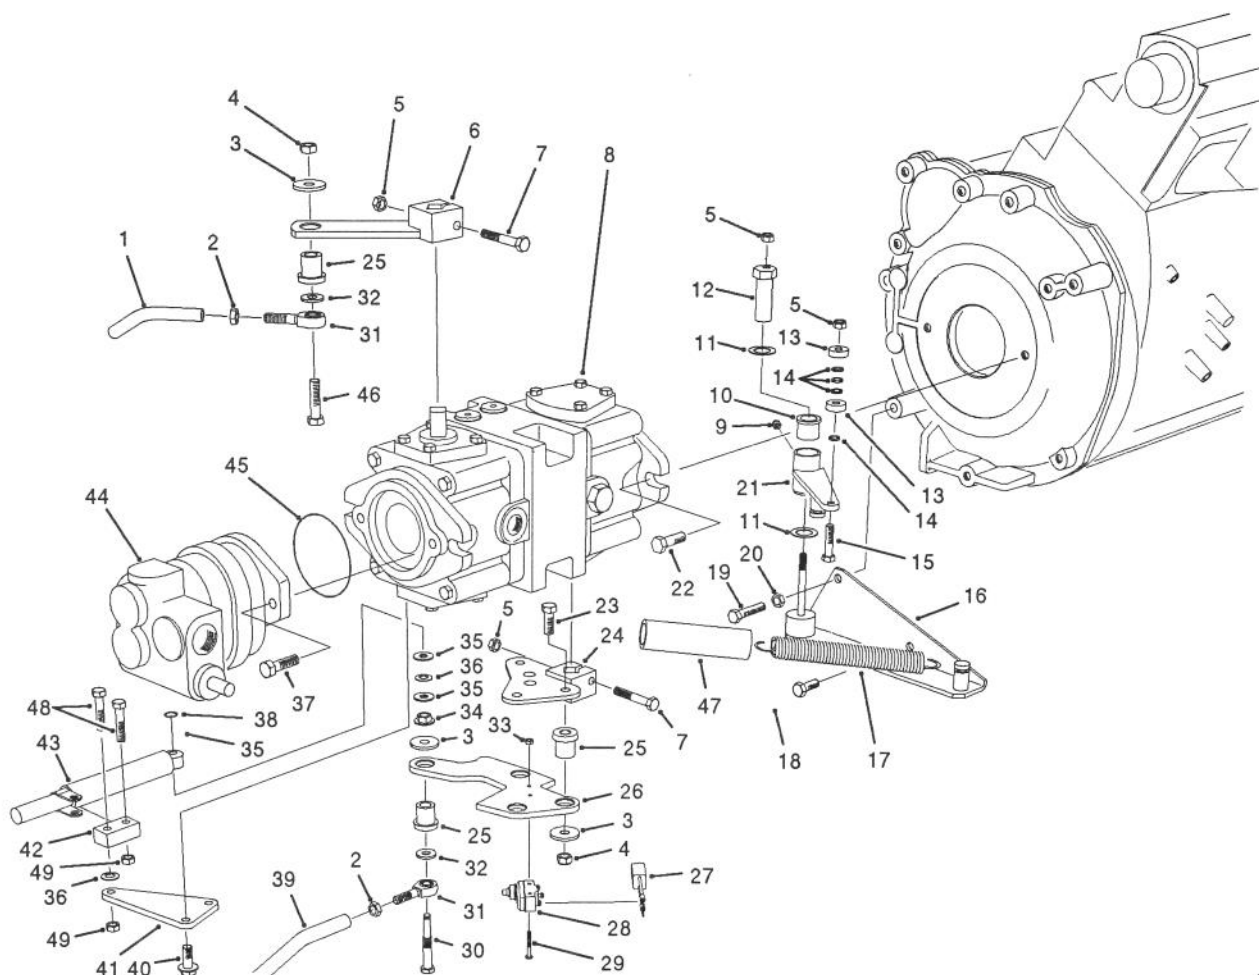 


T-1085

HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	82-5160	Rod - Reel Lever	1
2	3220-3	Nut - Jam	2
3	63-8410	Washer	5
4	3296-59	Nut - Lock	4
5	3296-29	Nut - Lock	4
6	82-5130	Lever - Reel	1
7	322-10	Screw - Cap Hex. Hd.	2
8	82-5100	Tandem Pump Assembly	1
9	302-5	Fitting - Grease	1
10	256-113	Bushing - Flange	2
11	3-6498	Washer	2
12	76-8640	Stud - Traction	1
13	251-259	Bearing - Ball	2
14	75-5470	Washer	4
15	322-7	Screw - Cap Hex. Hd.	1
16	82-5270	Bracket - Spring	1
17	76-9430	Spring - Extension	1
18	323-6	Screw - Cap Hex. Hd.	1
19	57-3210	Screw - Hex. Hd.	1
20	3217-7	Nut - Hex.	1
21	75-4090	Neutral Switch Assembly (Incl. Ref. #9 & 10)	1
22	82-5050	Screw - Cap Hex. Hd.	2
23	323-29	Screw - Cap Hex. Hd.	3
24	82-5180	Control - Pump	1

Ref. No.	Part No.	Description	No. Used
25	63-9751	Mount - Rubber	5
26	82-5170	Plate - Pump Control	1
27	72-3790	Wire - Neutral Switch	1
28	29-6163	Switch - Micro	1
29	3249-11	Screw - Round Hd.	2
30	82-5280	Shaft - Pivot	1
31	2411-36	Eye - Rod	2
32	3256-3	Washer - Flat	2
33	3296-9	Nut - Lock	2
34	3290-357	Nut - Flange Lock	1
35	3256-71	Washer - Flat	3
36	3290-477	Washer - Curved	2
37	323-7	Screw - Cap Hex. Hd.	2
38	32151-73	Ring - Clip	1
39	82-5290	Rod - Traction Control	1
40	32144-26	Screw - Hex. Flange Hd.	2
41	82-5240	Plate - Pivot	1
42	76-9760	Damper - Pivot	1
43	76-8870	Lever Damper Assembly	1
44	74-3420	Gear Pump Assembly	1
45	237-161	Seal - O-Ring	1
46	323-8	Screw - Cap Hex. Hd.	1
47	84-1480	Hose - Dampner	1
48	322-6	Screw - Cap Hex. Hd	2
49	3296-47	Nut - Lock	2

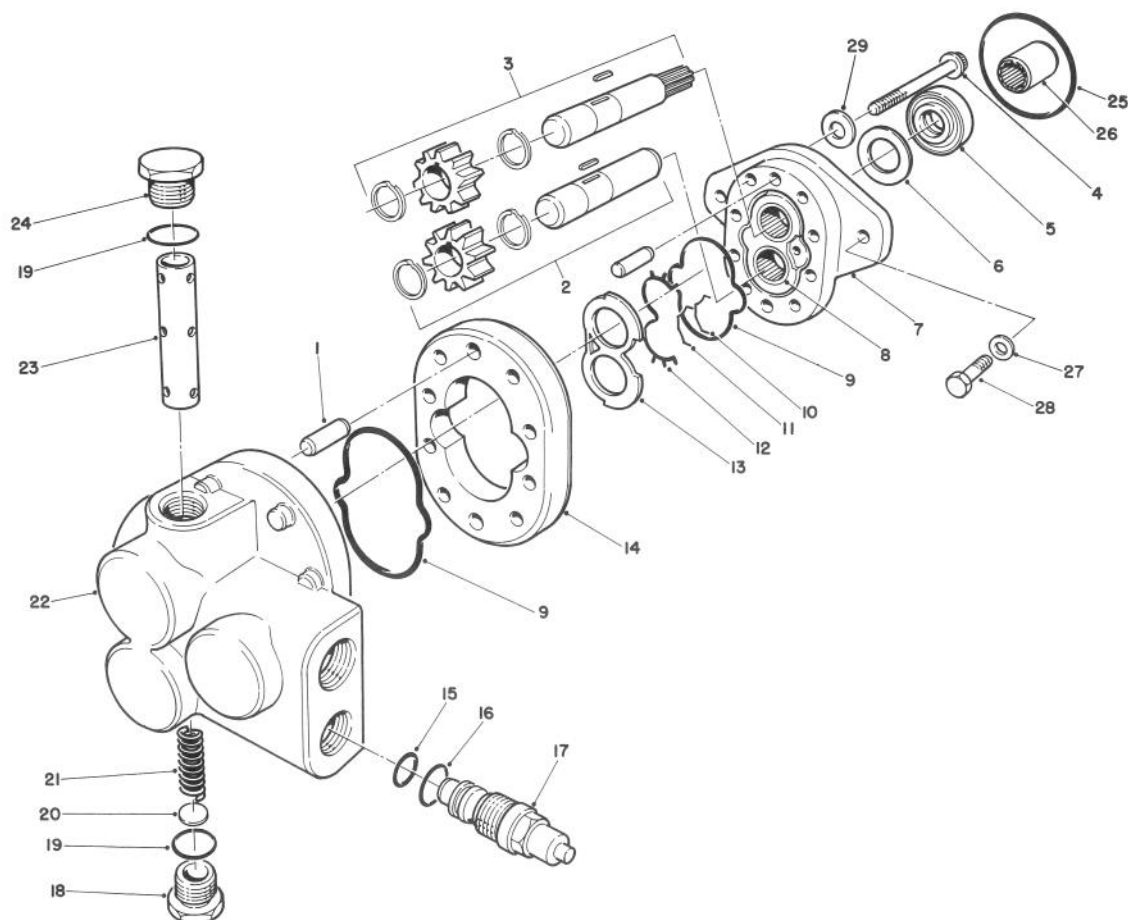 


T-0995

GEAR PUMP ASSEMBLY NO. 74-3420

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1		Pin-Dowel	4	18	60-5710	Plug Assembly (Incl. Ref. #19)	1
2	74-8960	Idler Gear Assembly	1	†19		O-Ring	2
3	74-8970	Drive Gear Assembly	1	20	60-5730	Disc	1
4	42-3120	Capscrew	8	21	60-5820	Spring	1
5	49-2640	Seal-Shaft	1	†22	74-8980	Backplate Assembly	1
6	60-5890	Washer	1	†23	74-8990	Spool Assembly	1
7	49-2660	Frontplate Assembly (Incl. Ref. #8)	1	24	60-5860	Plug Assembly (Incl. Ref. #19)	1
†8		Bearing - Needle	2	25	60-3520	O - Ring	1
9	56-6710	Seal - O-Ring	2	26	74-9040	Coupling	1
10	49-2680	Seal - O-Ring (Molded)	1	27	60-3540	Washer	2
11	49-2700	Seal-Bearing	1	28	60-3530	Screw-Cap, Hex. Hd.	2
12	49-2690	Gasket-Backup	1	29	74-8920	Washer - Copper	4
13	49-2670	Plate-Wear	1	*	74-9020	Backplate Repair Kit	1
14	74-8950	Body Assembly (Incl. Ref. #1)	1	*	74-9010	Kit - Seal	1
†15		Seal - O-Ring	1	*	74-3420	Gear Pump Assembly (Incl. Ref. #1-24 & 27-28)	1
†16		Seal - O-Ring	1				
17	74-9000	Relief Valve Assy. (Incl. Ref. #15 & 16)	1				

*Not Illustrated

 †Not Serviced Separately

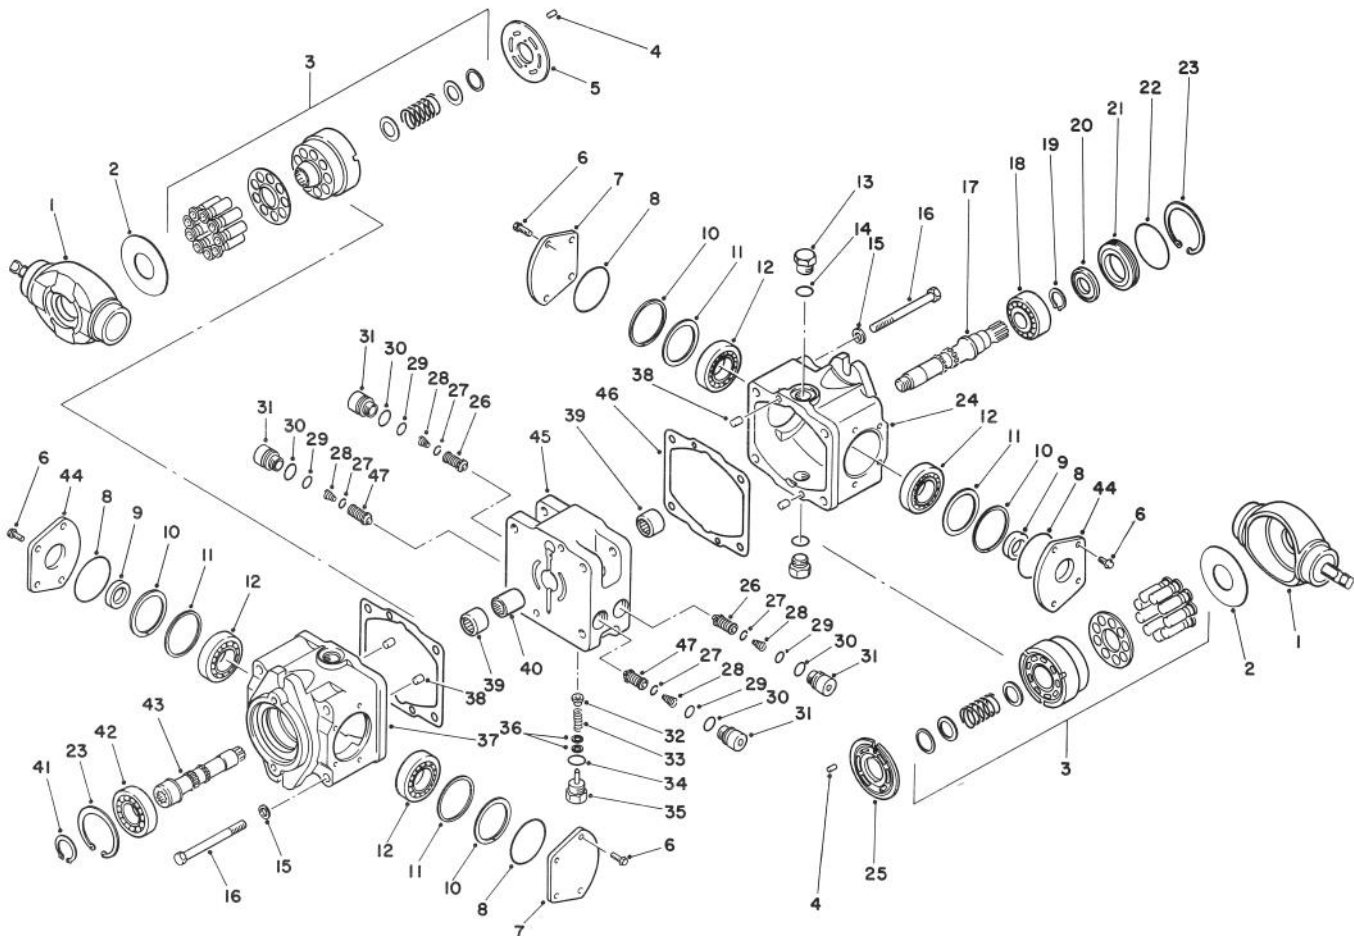


T-1314

TANDEM PUMP ASSEMBLY NO. 82-5100

Ref. No.	Part No.	Description	No. Used
1	84-0250	Swash Plate - Variable	2
2	75-0400	Plate - Thrust	2
3	75-0470	Cylinder Block Kit	2
4	75-0510	Pin	2
5	84-0290	Plate - Valve L.H.	1
6	84-0460	Screw	16
7	84-0440	Cover - Trunnion	2
8	84-0430	Seal - O-Ring	4
9	84-0470	Seal - Lip	2
10	84-0270	Spacer - Trunnion	4
11	84-0570	Shim - Trunnion Kit	4
12	84-0260	Bearing - Roller	4
13	353-551	Plug Assembly (Incl. Ref. #14)	3
14	237-80	Seal - O-Ring	3
15	84-0360	Washer	8
16	84-0330	Screw - Cap Hex. Hd.	8
17	84-0300	Shaft - Pump	1
18	84-0310	Bearing - Ball	1
19	84-0320	Ring - Retaining	1
20	84-0400	Seal - Lip	1
21	84-0410	Carrier - Seal	1
22	28-3520	Seal - O-Ring	1
23	84-0380	Ring - Retaining Internal	2


Ref. No.	Part No.	Description	No. Used
24	84-0240	Housing - Pump	1
25	84-0280	Plate - Valve R.H.	1
26	84-0540	Valve - Screw 345 BAR	2
27	84-0550	Ring - Retaining	4
28	75-0140	Spring - Conical	4
29	75-0240	Seal - O-Ring	4
30	84-0560	Seal - O-Ring	4
31	84-0520	Plug - Special	4
32	84-0480	Poppet - Charge Relief	1
33	84-0490	Spring - Compression	1
34	28-3570	Seal - O-Ring	1
35	84-0500	Charge Relief Plug Assy.	1
36	84-0580	Shim - Charge Relief Kit	1
37	84-0340	Housing - Pump	1
38	75-0480	Pin	4
39	75-0500	Bearing - Needle	2
40	84-0230	Coupling	1
41	84-0390	Ring - Retaining	1
42	84-0370	Bearing - Ball	1
43	84-0350	Shaft - Pump	1
44	84-0450	Cover - Trunnion	2
45	84-0220	Body - Center	1
46	84-0210	Gasket - End Cap	2
47	84-0530	Valve - Screw 175 BAR	2

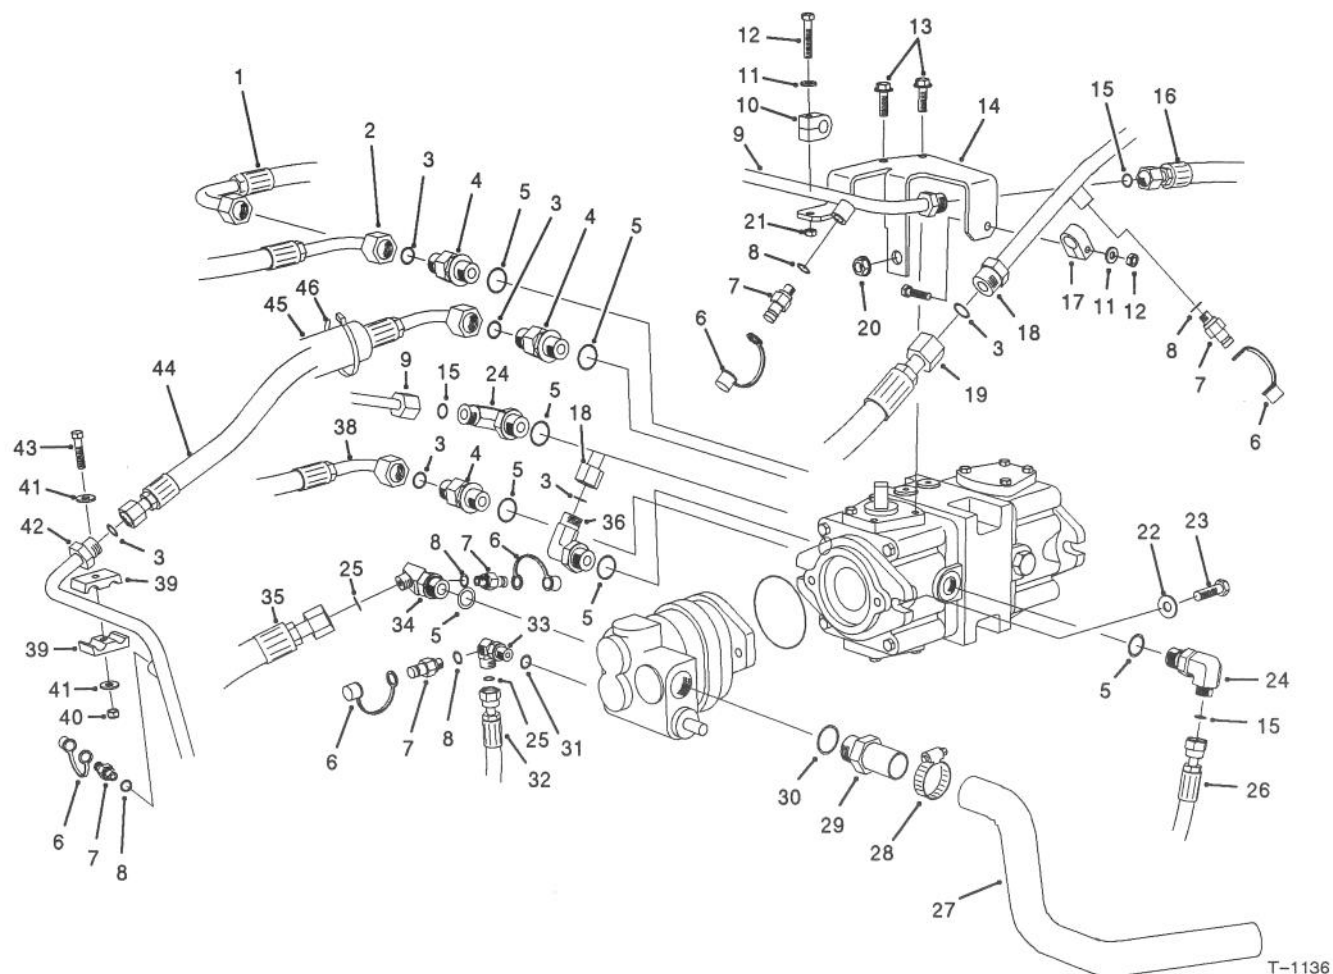 

HYDRAULIC PUMP FITTINGS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	86-2740	Hose - Hydraulic (Model No. 30601 Only)	1
2	86-2760	Hose - Hydraulic (Model No. 30600 Only)	1
3	237-65	Seal - O-Ring	6
4	340-7	Fitting - Hydraulic Straight (Incl. Ref. #3 & 5)	3
5	237-80	Seal - O-Ring	6
6	354-79	Cap - Fitting (Yellow)	5
7	354-77	Fitting - Test Port (Incl. Ref. #8)	5
8	237-78	Seal - O-Ring	5
9	82-5320	Hydraulic Tube Assembly (Incl. Ref. #15)	1
10	82-5360	Clamp - Tube	1
11	3256-22	Washer	2
12	321-9	Screw - Cap Hex. Hd.	2
13	32144-26	Screw - Hex. Flange Hd.	2
14	82-5340	Bracket - Pump	1
15	237-30	Seal - O-Ring	3
16	84-0900	Hose - Hydraulic	1
17	82-5361	Clamp - Tube	1
18	82-5310	Hydraulic Tube Assembly (Incl. Ref. #3)	1
19	86-2750	Hose - Hydraulic	1

Ref. No.	Part No.	Description	No. Used
20	32128-37	Nut - Flange Lock	1
21	3296-42	Nut - Lock	2
22	3256-4	Washer	1
23	324-6	Screw - Cap Hex. Hd.	1
24	340-105	Fitting - Hydraulic 90° (Incl. Ref. #8 & 15)	2
25	237-22	Seal - O-Ring	2
26	84-0890	Hose - Hydraulic	1
27	82-5110	Hose - Suction	1
28	2412-34	Clamp - Hose	1
29	354-78	Fitting - Hydraulic Hose (Incl. Ref. #30)	1
30	237-146	Seal - O-Ring	1
31	237-79	Seal - O-Ring	1
32	82-5080	Hose - Hydraulic	1
33	74-5890	Fitting - Hydraulic 90° (Incl. Ref. #25 & 31)	1
34	84-0840	Fitting - Hydraulic 45° (Incl. Ref. #5 & 25)	1
35	84-0850	Hose - Hydraulic	1
36	340-17	Fitting - Hydraulic 90° (Incl. Ref. #3 & 5)	1
38	82-5210	Hose - Hydraulic	1
39	56-7977	Clamp - Tube	2
40	3296-29	Nut - Lock	1

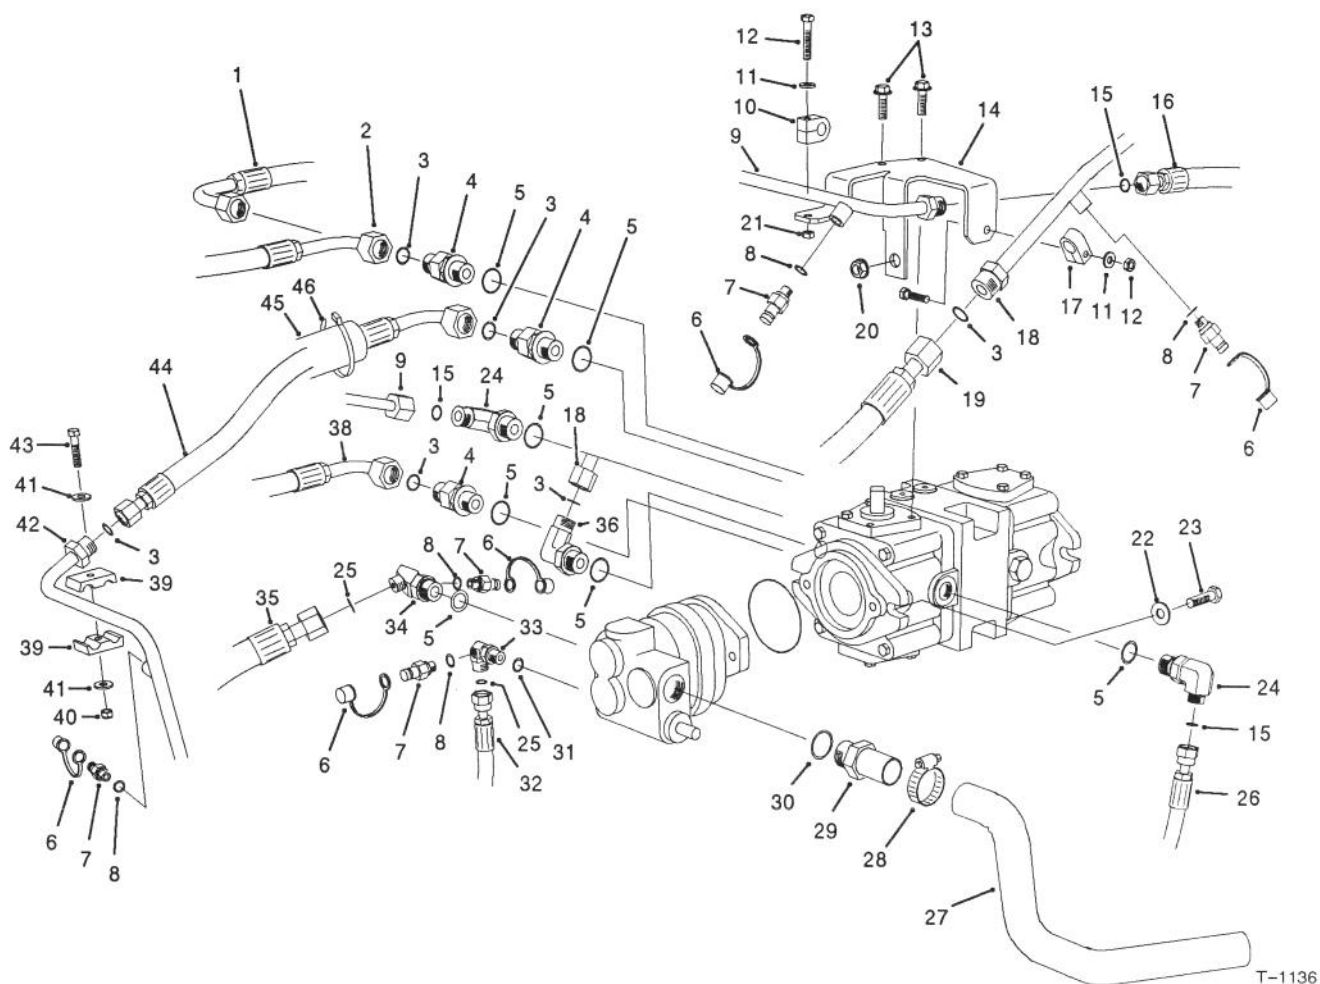 


T-1136

HYDRAULIC PUMP FITTINGS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
41	3256-3	Washer - Flat	2
42	82-5330	Hydraulic Tube Assembly (Incl. Ref. #3)	1
43	322-7	Screw - Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
44	82-5350	Hose - Hydraulic	1
45	56-7982	Sleeve - Protective	1
46	3290-378	Tie - Cable	1

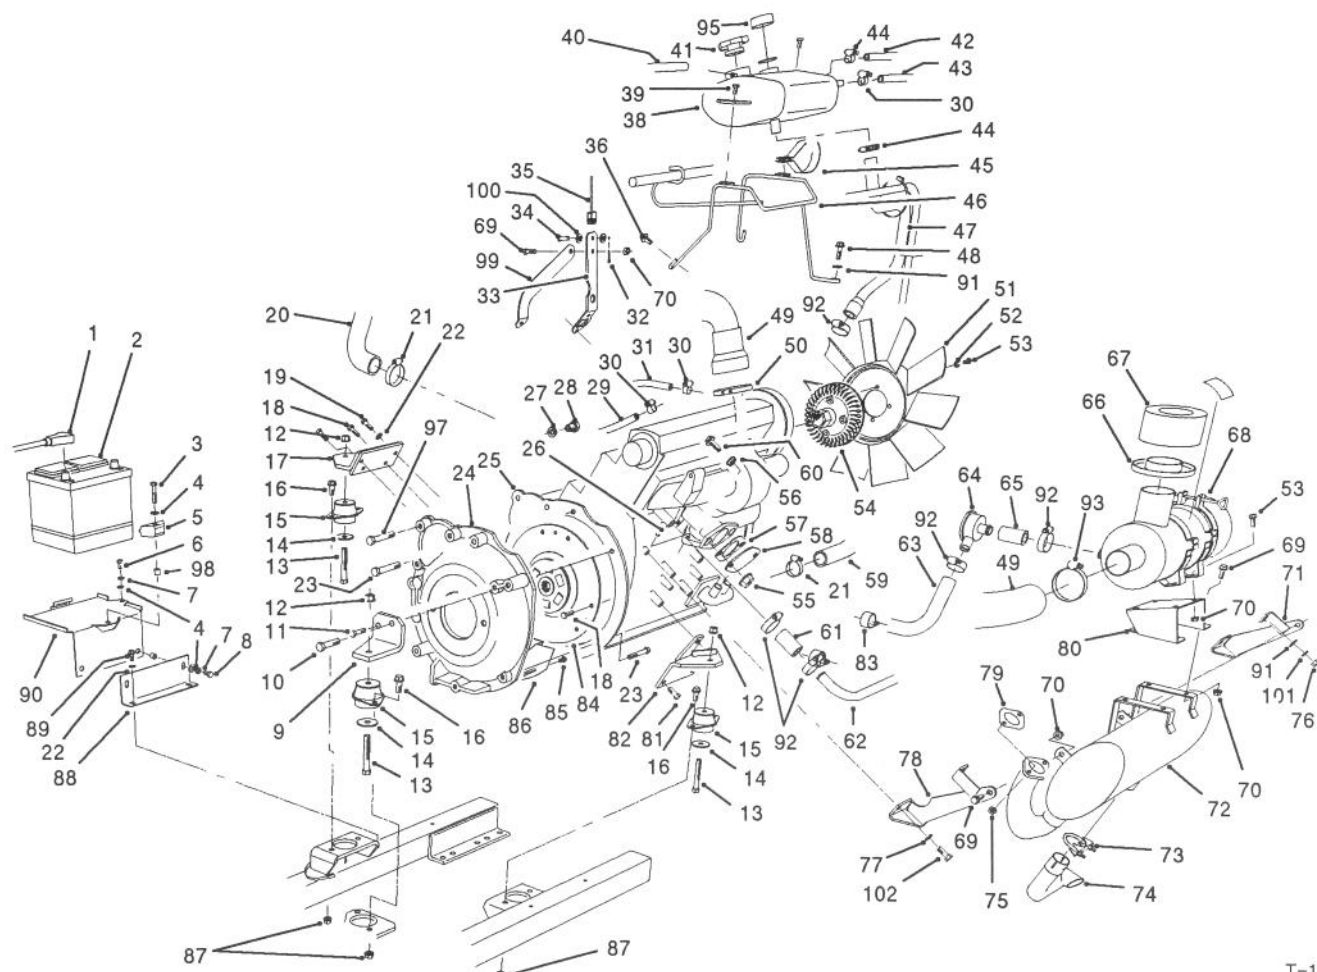 

T-1084


ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-9080	Cable - Battery Pos.	1
*	74-9090	Cable - Battery Neg.	1
†2		Battery - Type 26 SMF-5	1
3	323-9	Screw - Cap Hex. Hd.	1
4	3256-24	Washer - Flat	4
5	66-2490	Clamp - Battery	1
6	323-34	Screw - Cap Hex. Hd.	1
7	3253-21	Washer - Lock	3
8	323-33	Screw - Cap Hex. Hd.	2
9	74-5470	Bracket - Engine Front	1
10	48-7840	Screw - Cap Hex. Hd.	1
11	48-9470	Screw - Cap Hex. Hd.	1
12	32128-37	Nut - Flange Lock	3
13	324-12	Screw - Cap Hex. Hd.	3
14	53-9480	Washer - Flat	3
15	53-9681	Mount - Engine	3
16	3234-11	Screw - Hex. Washer Hd.	6
17	76-4120	Bracket - Engine R.H.	1
18	48-7700	Screw - Cap Hex. Hd.	8
19	48-9460	Screw - Cap Hex. Hd.	2
20	74-5930	Hose - Radiator Upper	1
21	2412-3	Clamp - Hose	2
22	3255-8	Washer - Lock	2
23	48-7570	Screw - Cap Hex. Hd.	3

Ref. No.	Part No.	Description	No. Used
24	82-5120	Plate - Adaptor	1
25	74-5510	Engine Assembly	1
26	322-16	Screw - Cap Hex. Hd.	2
27	3218-6	Nut - Jam	1
28	76-8280	Mount - Throttle Cable	1
29	63-7622	Hose - Fuel	1
30	2412-108	Clamp - Hose	8
31	63-7627	Hose - Fuel	1
32	3272-10	Pin - Cotter	1
33	77-3890	Bracket - Hood Cable	1
34	283-58	Pin - Clevis	1
35	66-2871	Cable - Hood	1
36	77-3900	Screw - Cap Hex. Hd.	1
37	3290-379	Tie - Cable	3
38	77-3550	Tank - Expansion	1
39	46-6811	Screw - Hex. Washer Hd.	2
40	55-4130	Hose - Coolant	1
41	66-3240	Cap - Expansion Tank	1
42	74-6040	Hose - Coolant	1
43	74-9120	Hose - Expansion Tank	1
44	2412-119	Clamp - Hose	3
45	2412-96	Clamp - Hose	1
46	74-4010	Support - Expansion Tank	1
47	74-6010	Hose - Coolant	1

*Not Illustrated

 †Obtain Locally

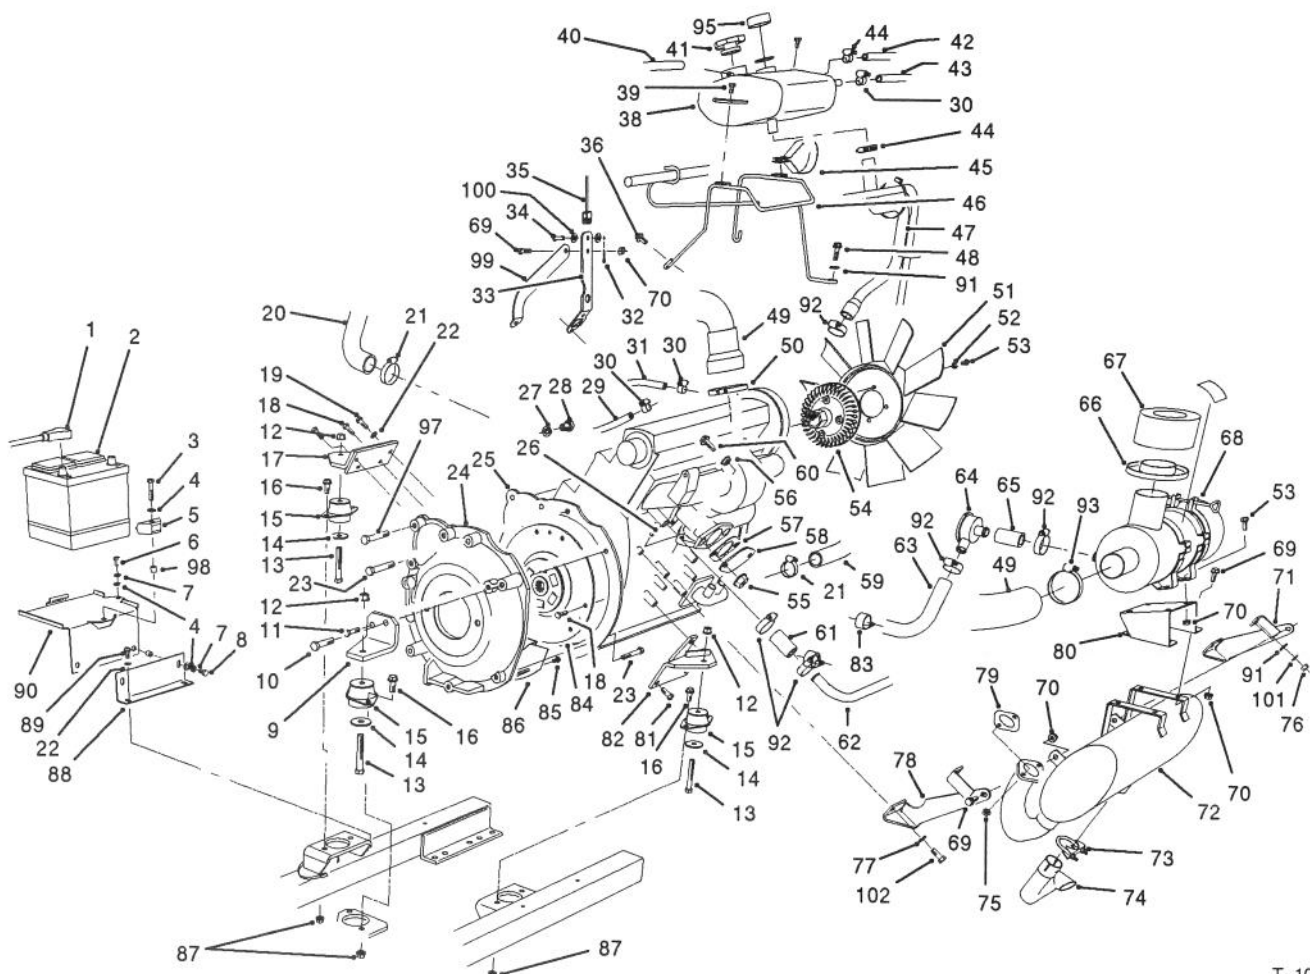


T-1084

ENGINE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
48	3234-17	Screw - Hex. Washer Hd.	1
49	74-6030	Hose - Air Intake	1
50	2412-125	Clamp - Hose	1
51	74-3650	Fan - Cooling	1
52	3253-4	Washer - Lock	4
53	322-3	Screw - Cap Hex. Hd.	8
54	74-5520	Clutch - Fan	1
55	32128-19	Nut - Flange Lock	2
56	76-4230	Guide - Exhaust Manifold	2
57	74-5590	Gasket - Exhaust	1
58	76-4160	Plate - Cover	1
59	74-6020	Hose - Radiator Lower	1
60	3234-11	Screw - Hex. Flange Hd.	2
61	74-6490	Hose - Water Tube	2
62	74-4900	Tube - Water	1
63	74-7720	Hose - PCV	1
64	74-5760	Valve - PCV	1
65	74-7730	Hose - PCV	1
66	76-9980	Holder - Seal	1
67	76-9990	Seal - Air Intake	1
68	74-6000	Air Cleaner Assembly	1
69	3234-5	Screw - Hex. Washer Hd.	5
70	32128-20	Nut - Flange Lock	10

Ref. No.	Part No.	Description	No. Used
71	74-4160	Bracket - Muffler Rear	1
72	74-5980	Muffler	1
*	77-3990	Spark Arrester Muffler (Optional)	1
73	2112-9	Clamp - Muffler	1
74	74-6090	Pipe - Exhaust	1
75	32128-13	Nut - Flange Lock	2
76	77-3320	Nut - Lock	2
77	68-9420	Washer - Lock	4
78	74-4150	Bracket - Muffler Front	1
79	77-3700	Gasket - Muffler	1
80	77-3880	Bracket - Air Cleaner	1
81	48-7780	Screw - Cap Hex. Hd.	3
82	76-4220	Bracket - Engine L.H.	1
83	2412-104	Clamp - R	1
84	74-5670	Coupling - Spring Center	1
85	48-7610	Screw - Cap Hex. Hd.	3
86	77-3600	Plate - Cover	1
87	3290-357	Nut - Flange Lock	6
88	76-4310	Bracket - Battery Base	1
89	32144-11	Screw - Hex. Washer Hd.	2
90	14-0949	Battery Base Assembly (Incl. Ref. #98)	1

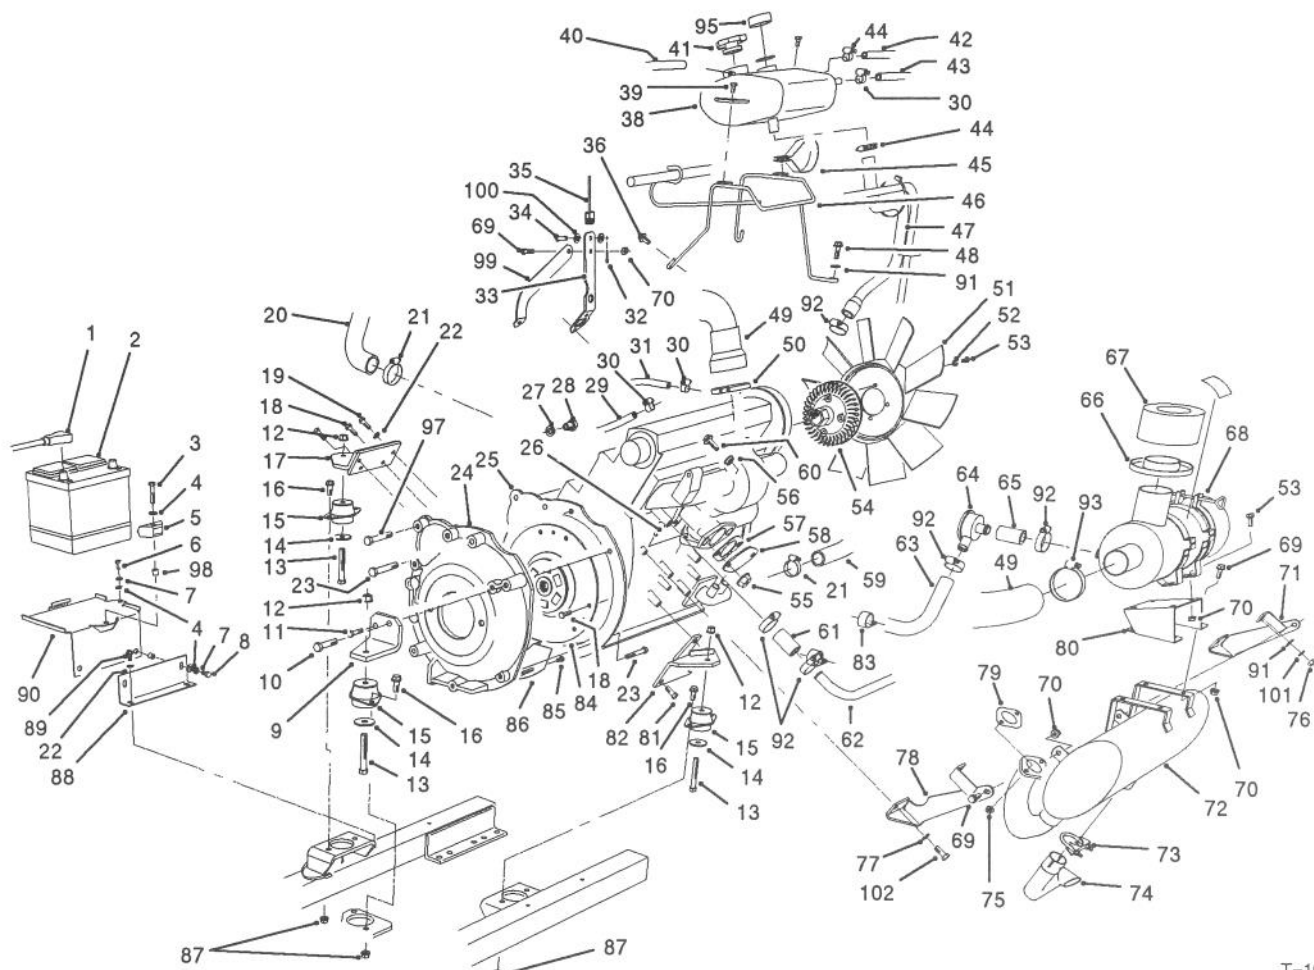 


T-1084

ENGINE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
91	3256-3	Washer - Flat	3
92	2412-129	Clamp - Hose	9
93	2412-130	Clamp - Hose	1
95	77-3560	Cap	1
97	48-7810	Screw - Cap Hex. Hd.	3

Ref. No.	Part No.	Description	No. Used
98	32148-9	Insert - Threaded	1
99	74-4050	Bracket - Hood Support	1
100	62-1230	Washer	2
101	68-9420	Washer - Lock	2
102	48-7700	Screw - Cap Hex. Hd.	2

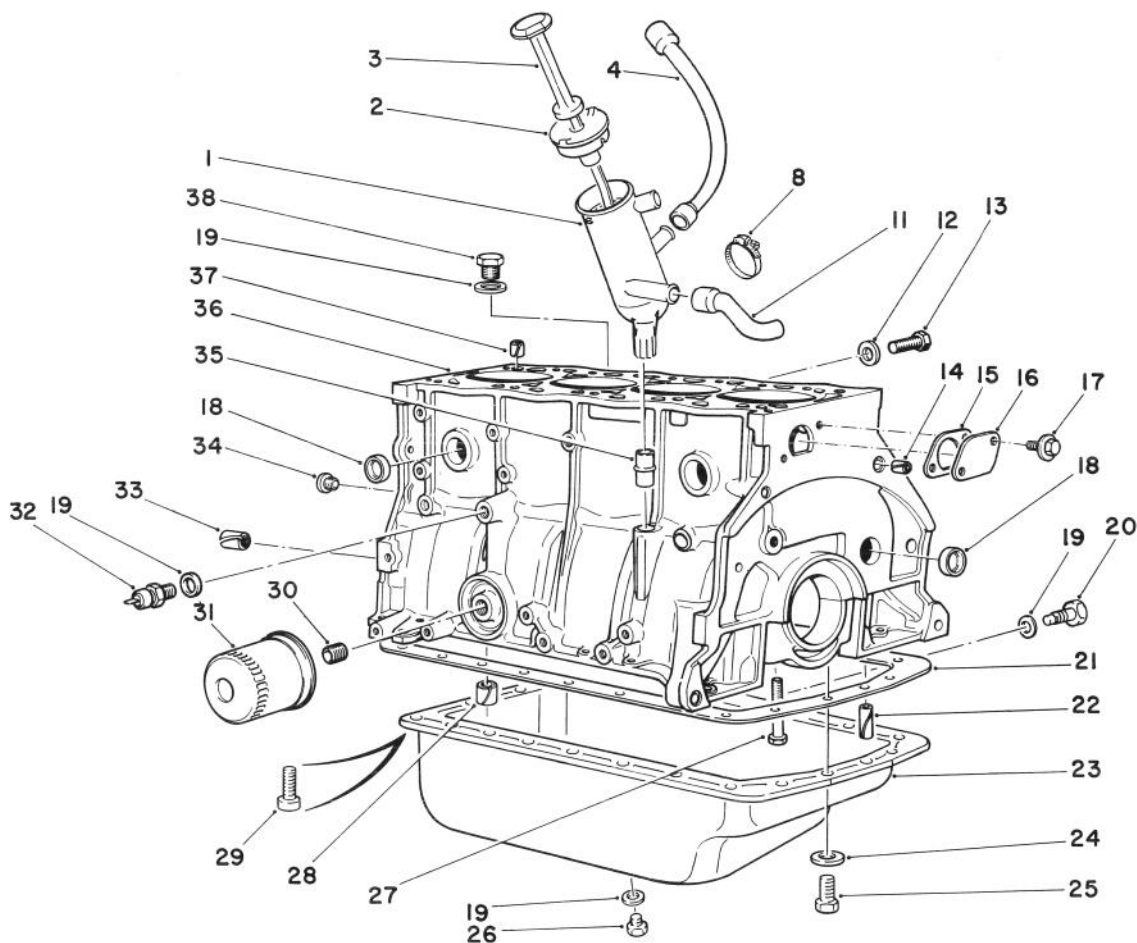 


T-0962

CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-8050	Oil Decanter Assembly	1
2	74-7690	Cap - Filler	1
3	74-7700	Dipstick - Oil	1
4	74-7710	Hose - Breather	1
8	2412-129	Clamp - Hose	4
11	74-7770	Hose - Crankcase	1
12	74-7780	Gasket	1
13	74-7790	Screw	1
14	74-7800	Pin - Spring	2
15	74-7810	Gasket - Plate	1
16	74-7820	Plate	1
17	74-7830	Screw - Washer Hd.	2
18	74-7840	Plug	8
19	74-7850	Gasket	4
20	74-7920	Plug	1
21	74-7870	Gasket - Oil Pan	1
22	74-7880	Pin - Groove	2
23	74-7890	Pan - Oil	1

Ref. No.	Part No.	Description	No. Used
24	74-7900	Washer - Stop	23
25	74-7910	Screw - Cap Hex. Hd.	20
26	77-3790	Plug - Drain	1
27	74-7930	Screw - Bearing Cap	10
28	74-7940	Bushing - Spring	1
29	74-7950	Screw - Plate	6
30	74-7960	Stud - Filter	1
31	74-7970	Filter - Oil	1
32	74-7980	Switch - Pressure	1
33	74-7990	Pin - Spring	4
34	74-8000	Plug	2
35	74-8010	Tube	1
36	74-8020	Shortblock Assembly (Incl. Pistons)	1
37	74-8030	Pin - Spring	1
38	74-8040	Plug	1
*	74-8060	Gasket Set (Without Head Gasket)	1

 *Not Illustrated

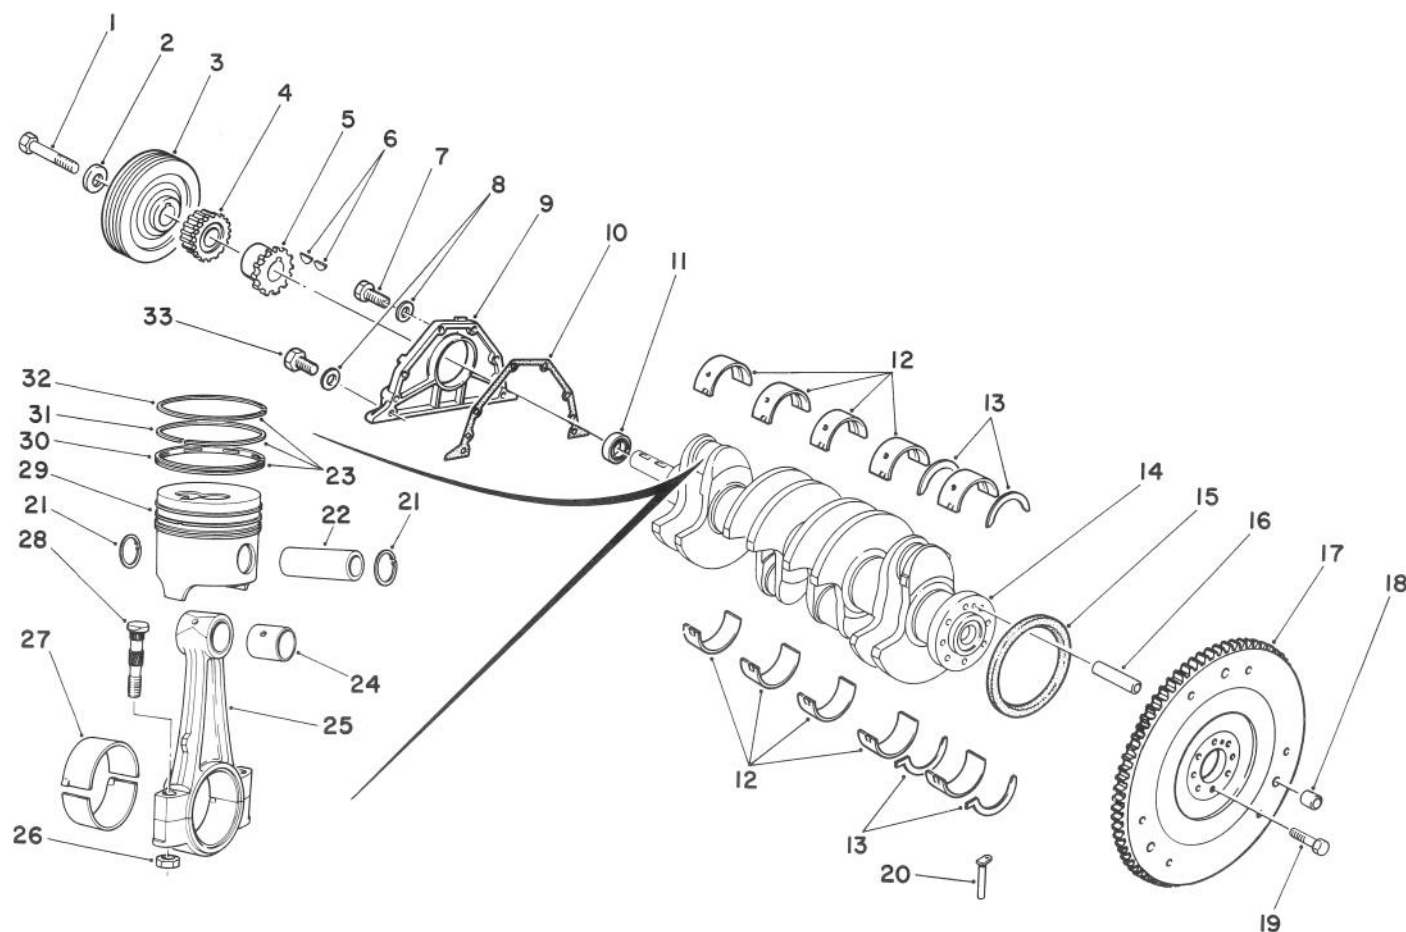


T-0963

CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-8070	Screw - Cap Hex. Hd.	1
2	74-8080	Washer	1
3	74-8090	Pulley	1
4	74-8100	Gear - Pinion	1
5	74-8110	Sprocket - Oil Pump	1
6	74-8120	Key - Woodruff	2
7	74-8130	Screw - Cap Hex. Hd.	4
8	74-7560	Washer	6
9	74-8140	Cover	1
10	74-8150	Gasket - Cover	1
11	74-8160	Seal - Shaft	1
12	74-8170	Bearing Set (Std.)	5
*	74-8180	Bearing Set (.30mm OS)	5
13	74-8190	Thrust Bearing Set (Std.)	2
*	74-8200	Thrust Bearing Set (.10mm OS)	2
*	74-8210	Thrust Bearing Set (.15mm OS)	2
*	74-8220	Thrust Bearing Set (.20mm OS)	2
14	74-8230	Crankshaft	1
15	74-8240	Seal	1

Ref. No.	Part No.	Description	No. Used
16	74-8250	Pin	1
17	74-8260	Flywheel	1
18	74-8270	Pin	3
19	74-8280	Screw - Cap Hex. Hd.	8
20	74-8290	Seal - #1 Bearing Cap	2
21	74-8300	Clip - Piston Pin	8
22	74-8310	Pin - Piston	4
23	74-8320	Piston Ring Set (Stage #1)	4
*	74-8330	Piston Ring Set (Stage #2)	4
*	74-8340	Piston Ring Set (Stage #3)	4
24	74-8350	Bushing - Sleeve	4
25	74-8360	Rod - Connecting	4
26	74-8370	Nut - Hex.	8
27	74-8380	Bearing - Connecting Rod (Std.)	4
*	74-8390	Bearing - Connecting Rod (49.7mm ID)	4
28	74-8400	Bolt - Connecting Rod	4
29	74-8420	Piston Set - Stage #1 (83.13mm OD) (Incl. Ref. #21-23)	1

 *Not Illustrated

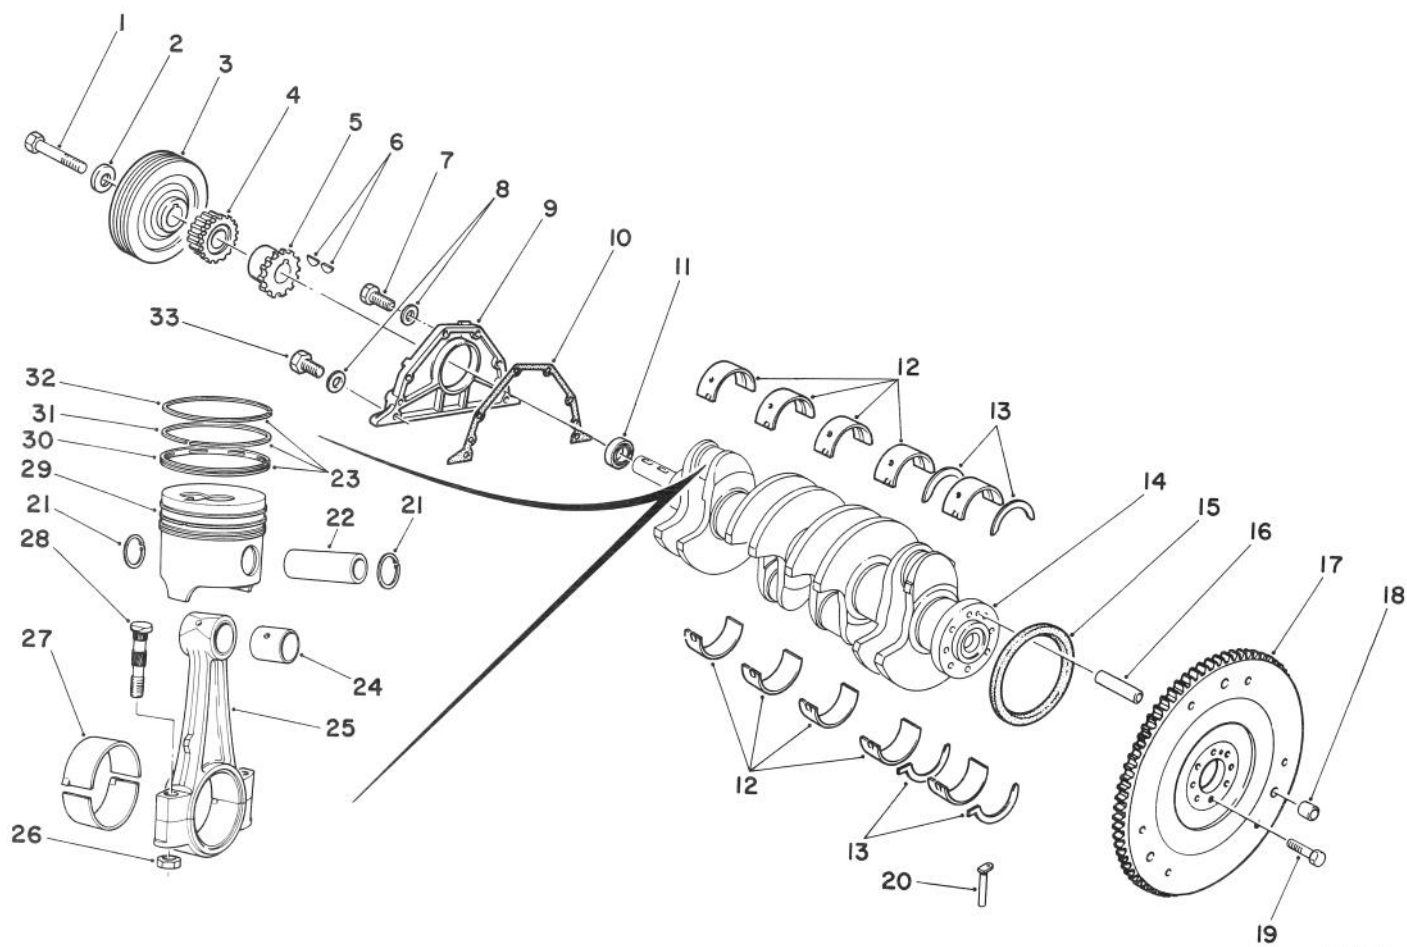


T-0963

CRANKSHAFT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
29	74-8430	Piston Set - Stage #2 (83.43mm OD) (Incl. Ref. #21-23)	1
*	74-8440	Piston Set - Stage #3 (83.73mm OD) (Incl. Ref. #21-23)	1
30	74-8450	Piston Ring - Oil (Std.)	4
*	74-8460	Piston Ring - Oil (Stage #1)	4
*	74-8470	Piston Ring - Oil (Stage #2)	4
*	74-8480	Piston Ring - Oil (Stage #3)	4
31	74-8490	Piston Ring - Compression (Std.)	4
*	74-8500	Piston Ring-Compression (Stage#1)	4

Ref. No.	Part No.	Description	No. Used
31	74-8510	Piston Ring - Compression (Stage #2)	4
*	74-8520	Piston Ring - Compression (Stage #3)	4
32	74-8530	Piston Ring - Compression (Std.)	4
*	74-8540	Piston Ring - Compression (Stage #1)	4
*	74-8550	Piston Ring - Compression (Stage #2)	4
*	74-8560	Piston Ring - Compression (Stage #3)	4
33	74-8570	Screw - Cap Hex. Hd.	2

 *Not Illustrated

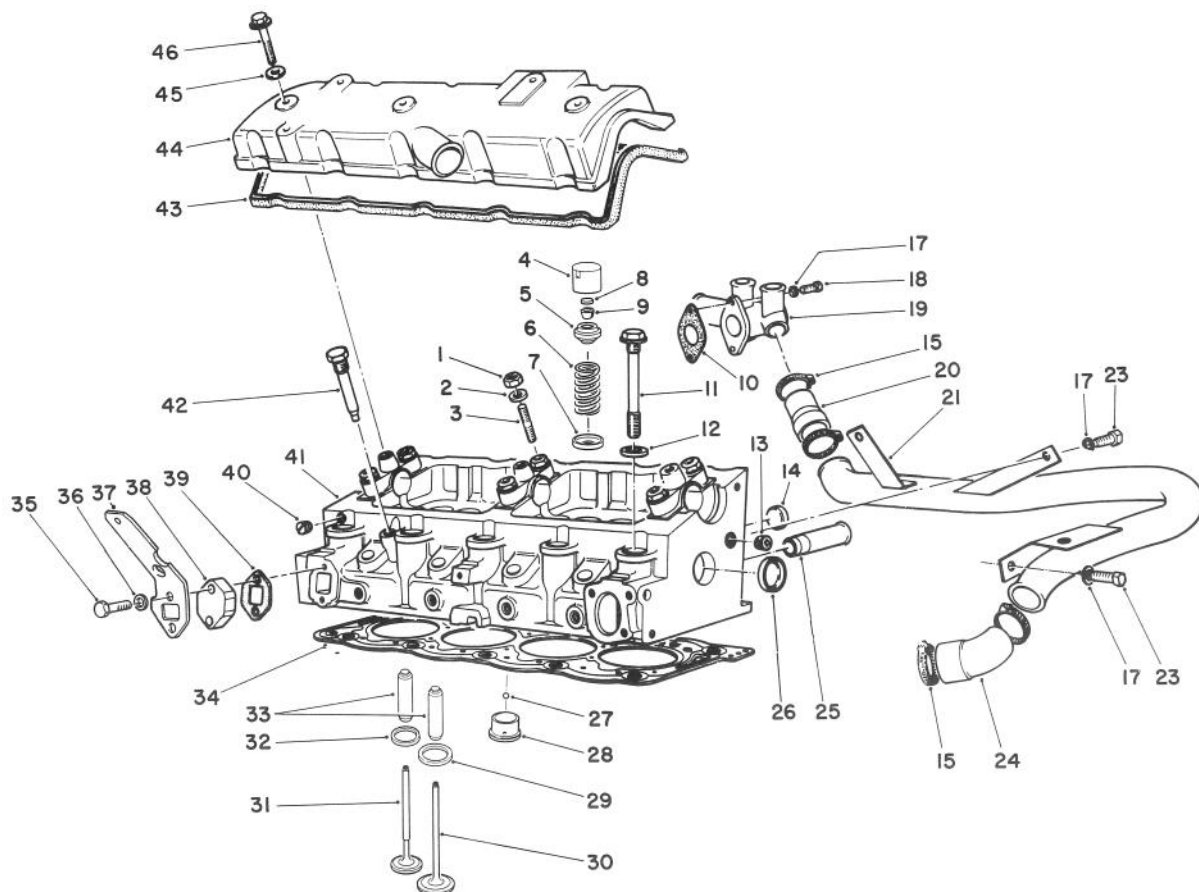


T-0965

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	46-0330	Nut - Lock	6	*	74-6740	Insert - Valve (2.450mm)	8
2	74-6520	Washer - Flat	6	*	74-6750	Insert - Valve (2.475mm)	8
3	74-6530	Stud	6	*	74-6760	Insert - Valve (2.500mm)	8
4	74-6540	Tappet - Valve	8	*	74-6770	Insert - Valve (2.525mm)	8
5	74-6550	Cup - Upper Valve Spring	8	*	74-6780	Insert - Valve (2.550mm)	8
6	74-6560	Spring - Valve	8	*	74-6790	Insert - Valve (2.575mm)	8
7	74-6570	Cup - Lower Valve Spring	8	*	74-6800	Insert - Valve (2.600mm)	8
8	74-6580	Insert - Valve (1.650mm)	8	*	74-6810	Insert - Valve (2.625mm)	8
*	74-6590	Insert - Valve (1.725mm)	8	*	74-6820	Insert - Valve (2.650mm)	8
*	74-6600	Insert - Valve (1.800mm)	8	*	74-6830	Insert - Valve (2.675mm)	8
*	74-6610	Insert - Valve (1.900mm)	8	*	74-6840	Insert - Valve (2.700mm)	8
*	74-6620	Insert - Valve (1.975mm)	8	*	74-6850	Insert - Valve (2.725mm)	8
*	74-6630	Insert - Valve (2.050mm)	8	*	74-6860	Insert - Valve (2.750mm)	8
*	74-6640	Insert - Valve (2.125mm)	8	*	74-6870	Insert - Valve (2.775mm)	8
*	74-6650	Insert - Valve (2.225mm)	8	*	74-6880	Insert - Valve (2.800mm)	8
*	74-6660	Insert - Valve (2.250mm)	8	*	74-6890	Insert - Valve (2.825mm)	8
*	74-6670	Insert - Valve (2.275mm)	8	*	74-6900	Insert - Valve (2.850mm)	8
*	74-6680	Insert - Valve (2.300mm)	8	*	74-6910	Insert - Valve (2.875mm)	8
*	74-6690	Insert - Valve (2.325mm)	8	*	74-6920	Insert - Valve (2.900mm)	8
*	74-6700	Insert - Valve (2.350mm)	8	*	74-6930	Insert - Valve (2.925mm)	8
*	74-6710	Insert - Valve (2.375mm)	8	*	74-6940	Insert - Valve (2.950mm)	8
*	74-6720	Insert - Valve (2.400mm)	8	*	74-6950	Insert - Valve (2.975mm)	8
*	74-6730	Insert - Valve (2.425mm)	8	*	74-6960	Insert - Valve (3.000mm)	8

 *Not Illustrated

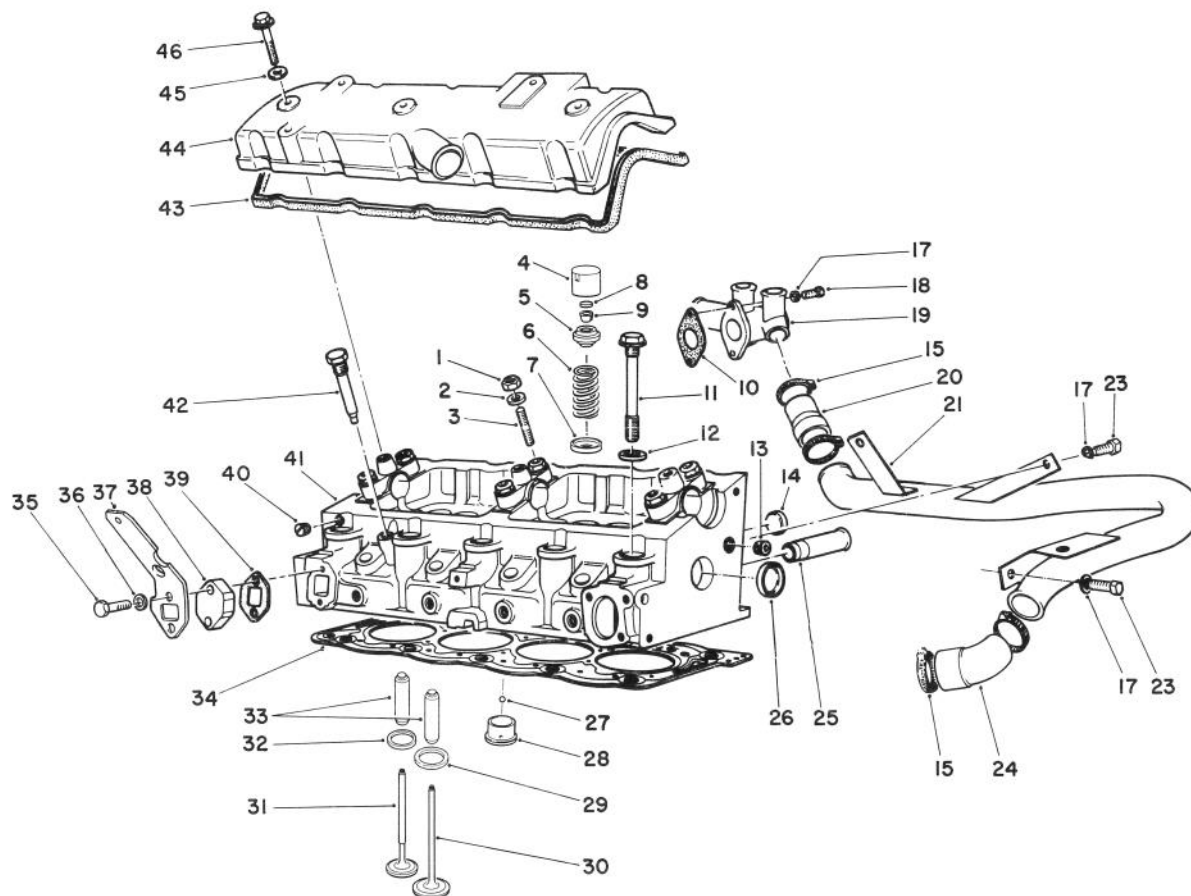


T-0965

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
8	74-6970	Insert - Valve (3.025mm)	8
*	74-6980	Insert - Valve (3.050mm)	8
*	74-6990	Insert - Valve (3.075mm)	8
*	74-7000	Insert - Valve (3.100mm)	8
*	74-7010	Insert - Valve (3.125mm)	8
*	74-7020	Insert - Valve (3.150mm)	8
*	74-7030	Insert - Valve (3.175mm)	8
*	74-7040	Insert - Valve (3.200mm)	8
*	74-7050	Insert - Valve (3.225mm)	8
*	74-7060	Insert - Valve (3.250mm)	8
*	74-7070	Insert - Valve (3.275mm)	8
*	74-7080	Insert - Valve (3.300mm)	8
*	74-7090	Insert - Valve (3.325mm)	8
*	74-7100	Insert - Valve (3.350mm)	8
*	74-7110	Insert - Valve (3.375mm)	8
*	74-7120	Insert - Valve (3.400mm)	8
*	74-7130	Insert - Valve (3.425mm)	8
*	74-7140	Insert - Valve (3.450mm)	8
*	74-7150	Insert - Valve (3.475mm)	8
*	74-7160	Insert - Valve (3.500mm)	8
*	74-7170	Insert - Valve (3.550mm)	8
*	74-7180	Insert - Valve (3.625mm)	8
*	74-7190	Insert - Valve (3.700mm)	8
*	74-7200	Insert - Valve (3.775mm)	8
*	74-7210	Insert - Valve (3.850mm)	8

Ref. No.	Part No.	Description	No. Used
8	74-7220	Insert - Valve (3.925mm)	8
*	74-7230	Insert - Valve (4.000mm)	8
9	74-7240	Collar - Split	16
10	74-7250	Gasket - Fitting	1
11	74-7260	Bolt - Head	10
12	74-7270	Washer - Flat	10
13	74-7280	Plug	2
14	74-7840	Plug	2
15	2412-119	Clamp - Hose	4
17	68-9420	Washer - Lock	5
18	48-9460	Screw - Cap Hex. Hd.	2
19	74-7340	Fitting - Coolant	1
20	74-7350	Hose	1
21	74-7360	Tube - Collector	1
23	48-7700	Screw - Cap Hex. Hd.	3
24	74-7390	Hose - Elbow	1
25	74-7400	Tube	1
26	74-7410	Plug	2
27	74-7420	Ball	4
28	74-7430	Chamber - Turbulence (32.45mm)	4
*	74-7440	Chamber - Turbulence (32.65mm)	4

 *Not Illustrated

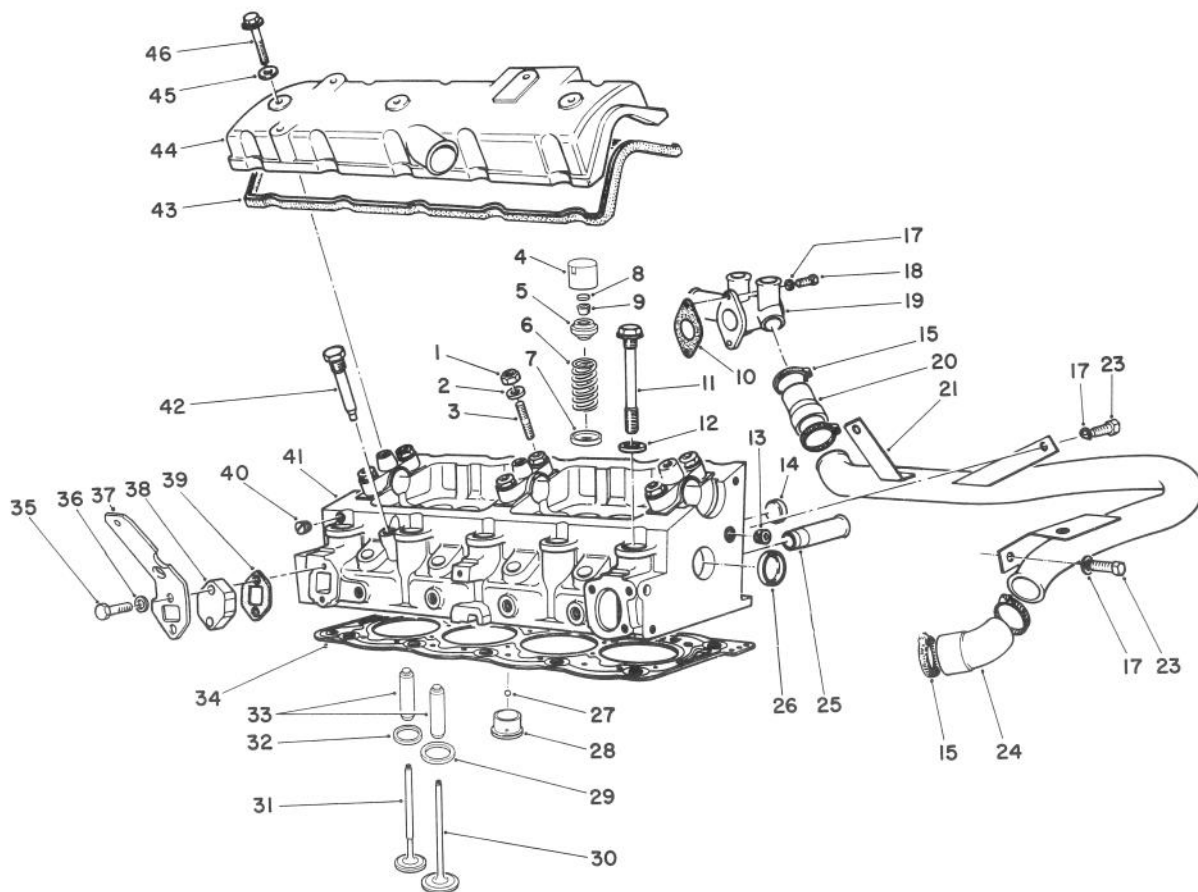


T-0965

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
29	74-7450	Seat - Intake Valve (39.3mm)	4	35	74-7550	Screw - Cap Hex. Hd.	2
*	74-7460	Seat - Intake Valve (39.5mm)	4	36	74-7560	Washer - Lock	2
30	74-7480	Valve - Intake	4	37	77-3890	Bracket - Hood Cable	1
31	74-7470	Valve - Exhaust	4	38	74-7580	Plate	1
32	74-7490	Seat - Exhaust Valve (34.3mm)	4	39	74-7590	Gasket	1
*	74-7500	Seat - Exhaust Valve (34.5mm)	4	40	74-7600	Plug	4
33	74-7510	Guide - Valve (14.29mm)	8	41	74-7610	Cylinder Head Assembly	1
*	74-7520	Guide - Valve (14.59mm)	8	42	74-7620	Plug	1
34	74-7530	Gasket - Head (1.61mm)	1	43	74-7630	Gasket - Valve Cover	1
*	74-7540	Gasket - Head (1.73mm)	1	44	74-7640	Cover - Valve	1
				45	74-7650	Washer - Flat	3
				46	48-7640	Bolt - Valve Cover	3
				*	74-7670	Head Bolt & Washer Set (Incl. Ref. #11 & 12)	1

 *Not Illustrated

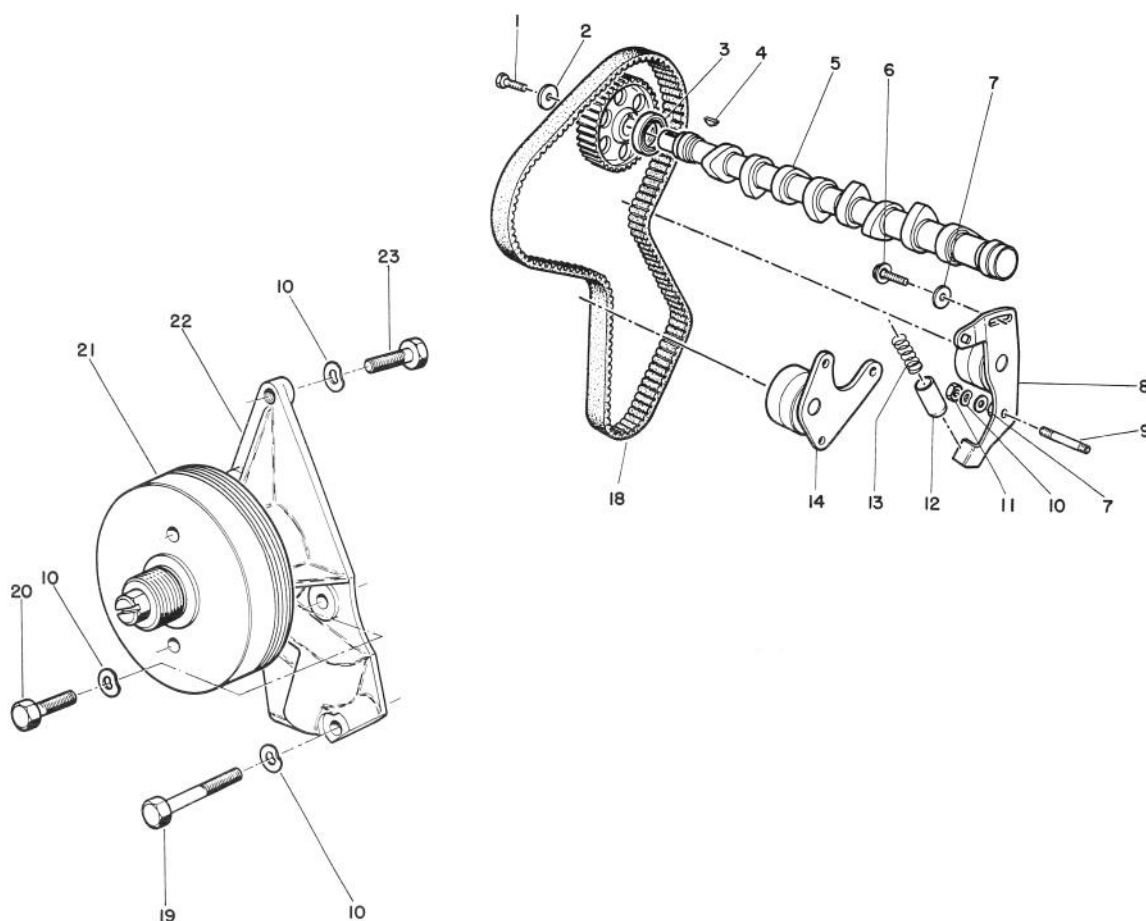


T-1106

CAMSHAFT & FAN SUPPORT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	77-3440	Screw	2
2	77-3450	Washer	2
3	77-3420	Gasket	2
4	77-3410	Key	1
5	77-3400	Camshaft	1
6	77-3460	Screw	1
7	74-8900	Washer - Flat	2
8	77-3540	Roller Assembly	1
9	74-6530	Stud	1
10	68-9420	Washer - Lock	6

Ref. No.	Part No.	Description	No. Used
11	46-0330	Nut - Lock	1
12	77-3520	Cup	1
13	77-3510	Spring	1
14	77-3500	Roller Assembly	1
18	77-3430	Belt	1
19	60-6700	Screw - Cap Hex. Hd.	1
20	77-3360	Screw	3
21	77-3380	Pulley	1
22	77-3390	Support	1
23	77-3370	Screw	1

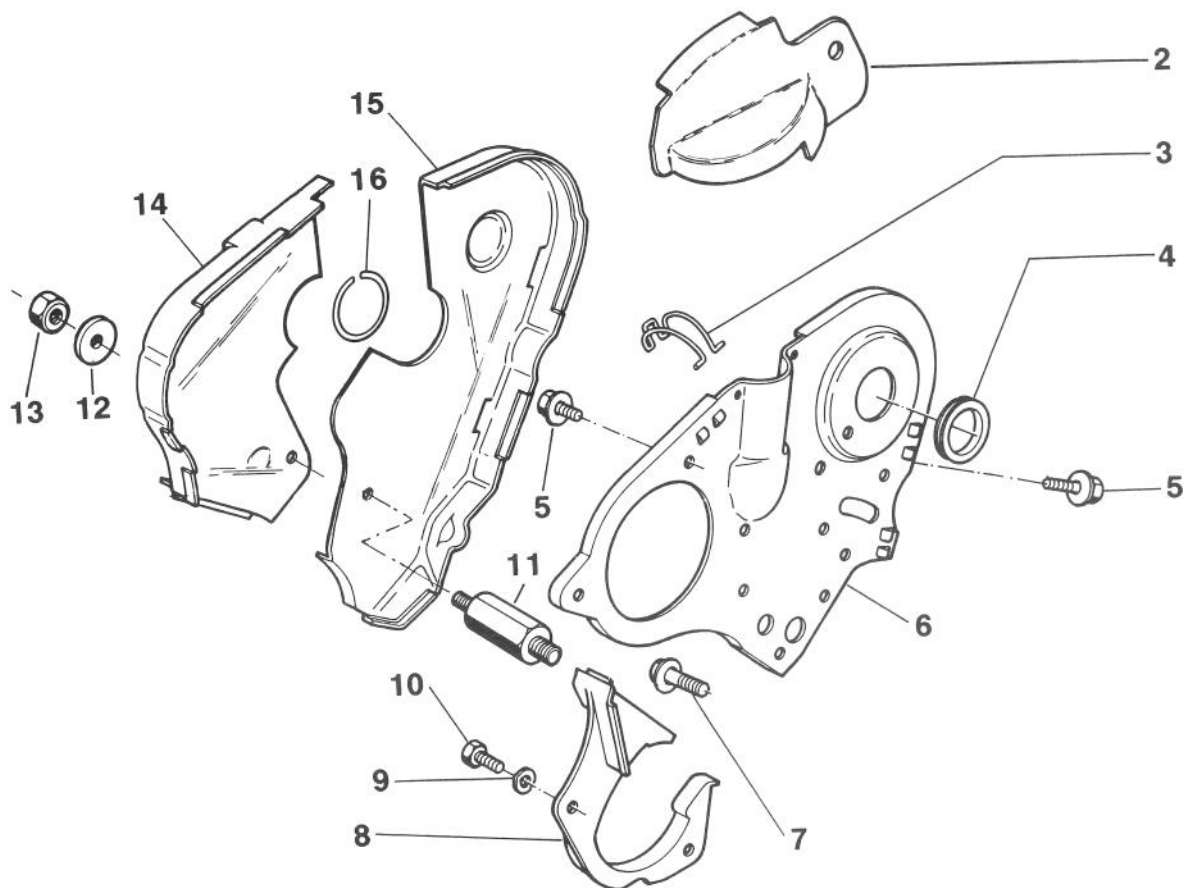 


T-1115

BELT COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	77-3590	Shield	1
3	77-3830	Clip	4
4	77-3840	Grommet	1
5	48-7700	Screw - Hex. Washer Hd.	2
6	77-3800	Shield	1
7	48-9460	Screw - Hex. Washer Hd.	2
8	77-3810	Shield	1
9	74-7560	Washer - Spring	2

Ref. No.	Part No.	Description	No. Used
10	74-7910	Screw - Cap Hex. Hd.	2
11	77-3820	Support - Shield	1
12	77-3870	Washer - Flat	1
13	77-3860	Nut - Lock	1
14	77-3580	Shield	1
15	77-3570	Shield	1
16	77-3850	Ring - Snap	1

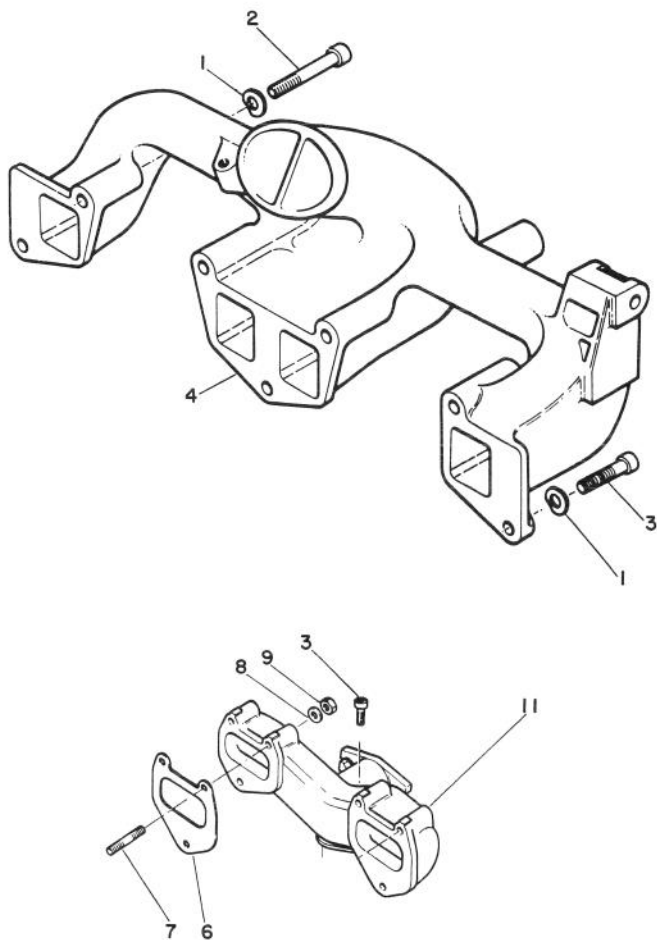 


T-1107

INTAKE & EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	68-9420	Washer - Spring	7
2	77-3280	Screw	5
3	77-3290	Screw	4
4	77-3270	Manifold - Intake	1
6	77-3310	Gasket	2

Ref. No.	Part No.	Description	No. Used
7	77-3300	Stud	6
8	68-9420	Washer - Lock	6
9	77-3320	Nut - Hex	6
11	77-3340	Manifold - Exhaust	1

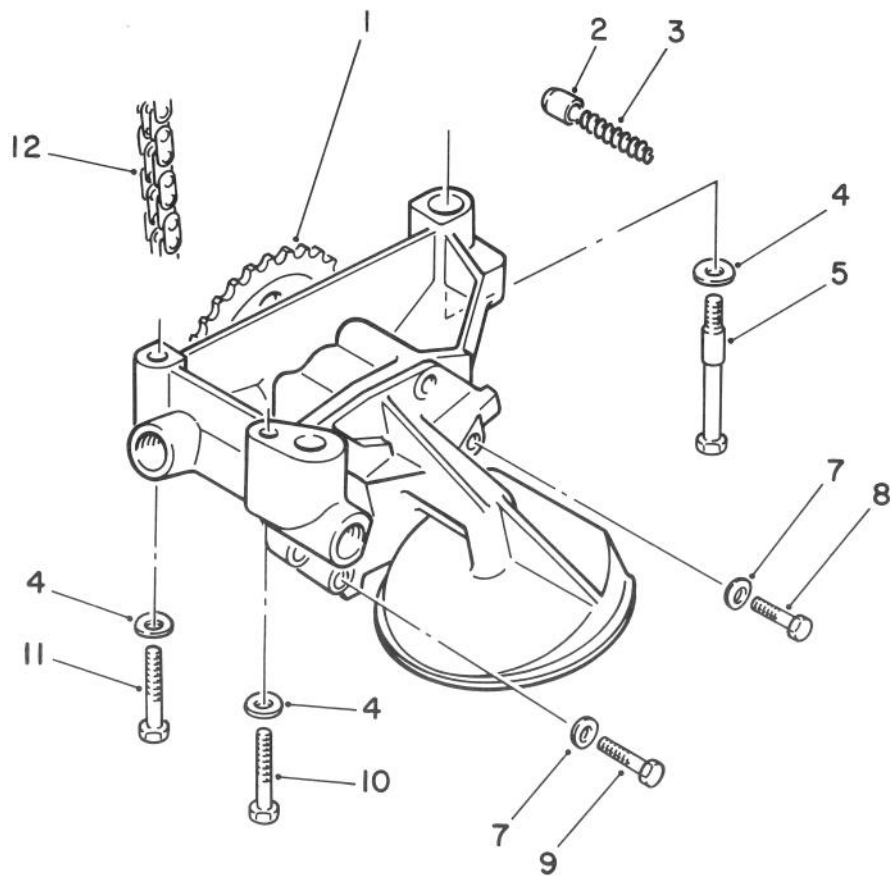 


T-0964

OIL PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-5070	Oil Pump Assembly	1
2	76-5080	Piston	1
3	76-5090	Spring - Piston	1
4	68-9420	Washer - Spring	3
5	76-5100	Bolt - Shoulder	1
7	74-7560	Washer - Spring	5

Ref. No.	Part No.	Description	No. Used
8	74-7910	Screw - Cap Hex. Hd.	2
9	48-7640	Screw - Cap Hex. Hd.	3
10	76-5150	Screw - Cap Hex. Hd.	1
11	76-5160	Screw - Cap Hex. Hd.	1
12	76-5170	Chain - Pump Drive	1

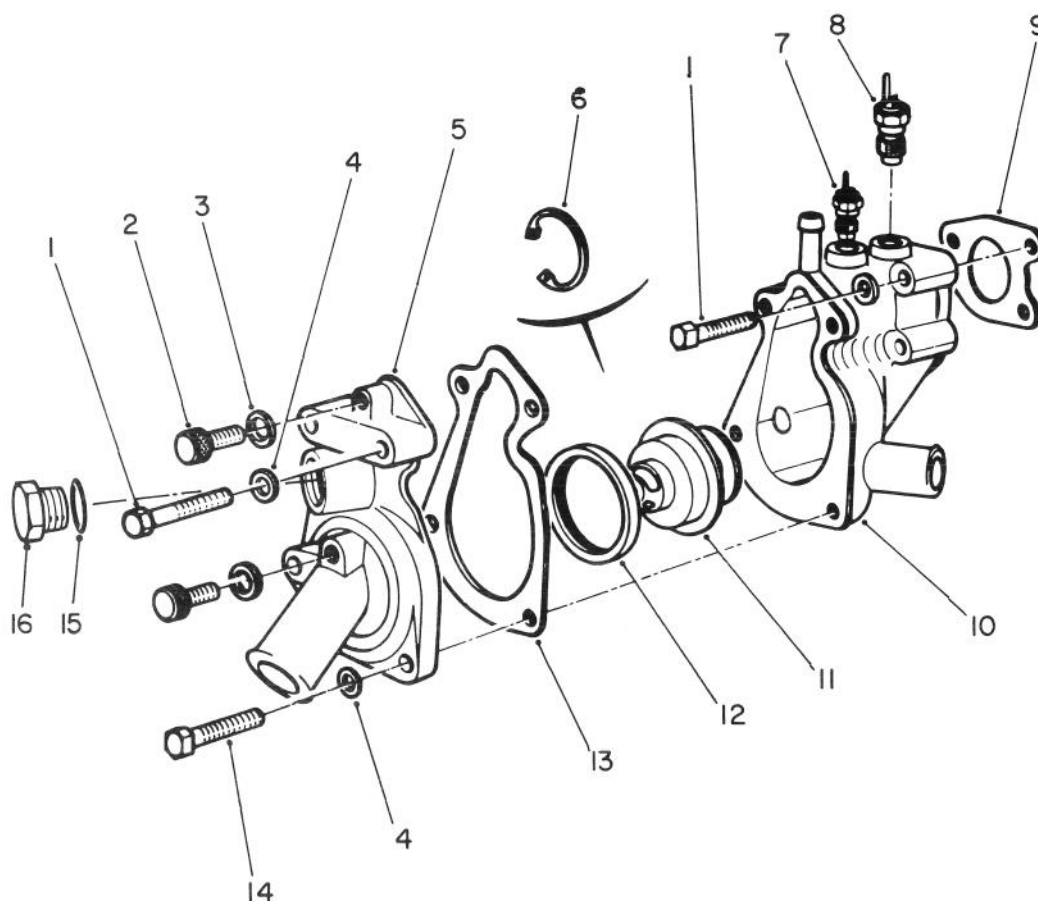 


T-0974

COLLECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-5330	Screw - Cap Hex. Hd.	2
2	76-5340	Plug - Drain	2
3	76-5350	Gasket - Drain Plug	2
4	74-7560	Washer - Spring	4
5	76-5360	Cover - Collector	1
6	76-5370	Ring - Retaining	1
7	76-5380	Temperature Sending Unit	1
8	76-5400	Switch - Temp. 105°C	1

Ref. No.	Part No.	Description	No. Used
9	76-5410	Gasket - Collector	1
10	76-5420	Housing - Collector	1
11	76-5430	Thermostat 81°C	1
12	76-5450	Gasket - Thermostat	1
13	76-5460	Gasket - Collector Housing	1
14	76-5470	Screw - Cap Hex. Hd.	2
15	74-8810	Gasket	1
16	74-8820	Plug	1

 *Not Illustrated

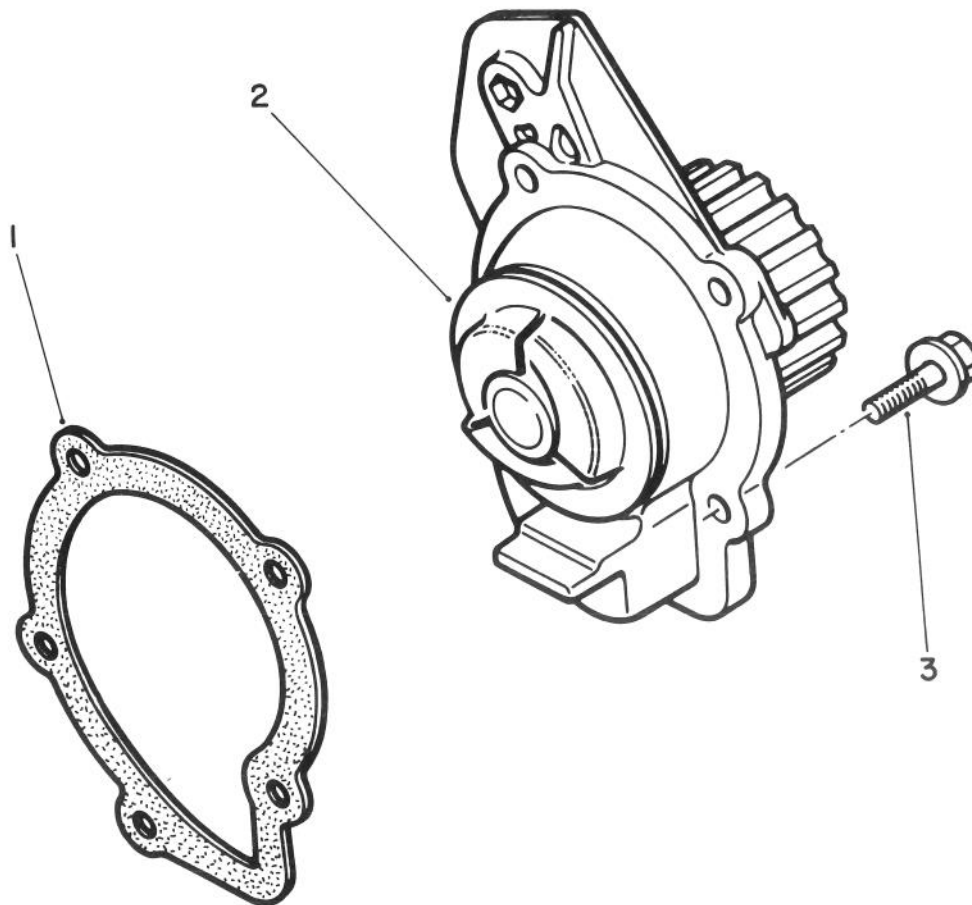


T-0970

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-5480	Gasket - Water Pump	1
2	76-5490	Water Pump Assembly (Incl. Ref. #1)	1

Ref. No.	Part No.	Description	No. Used
3	76-5500	Screw - Cap Hex. Hd.	5

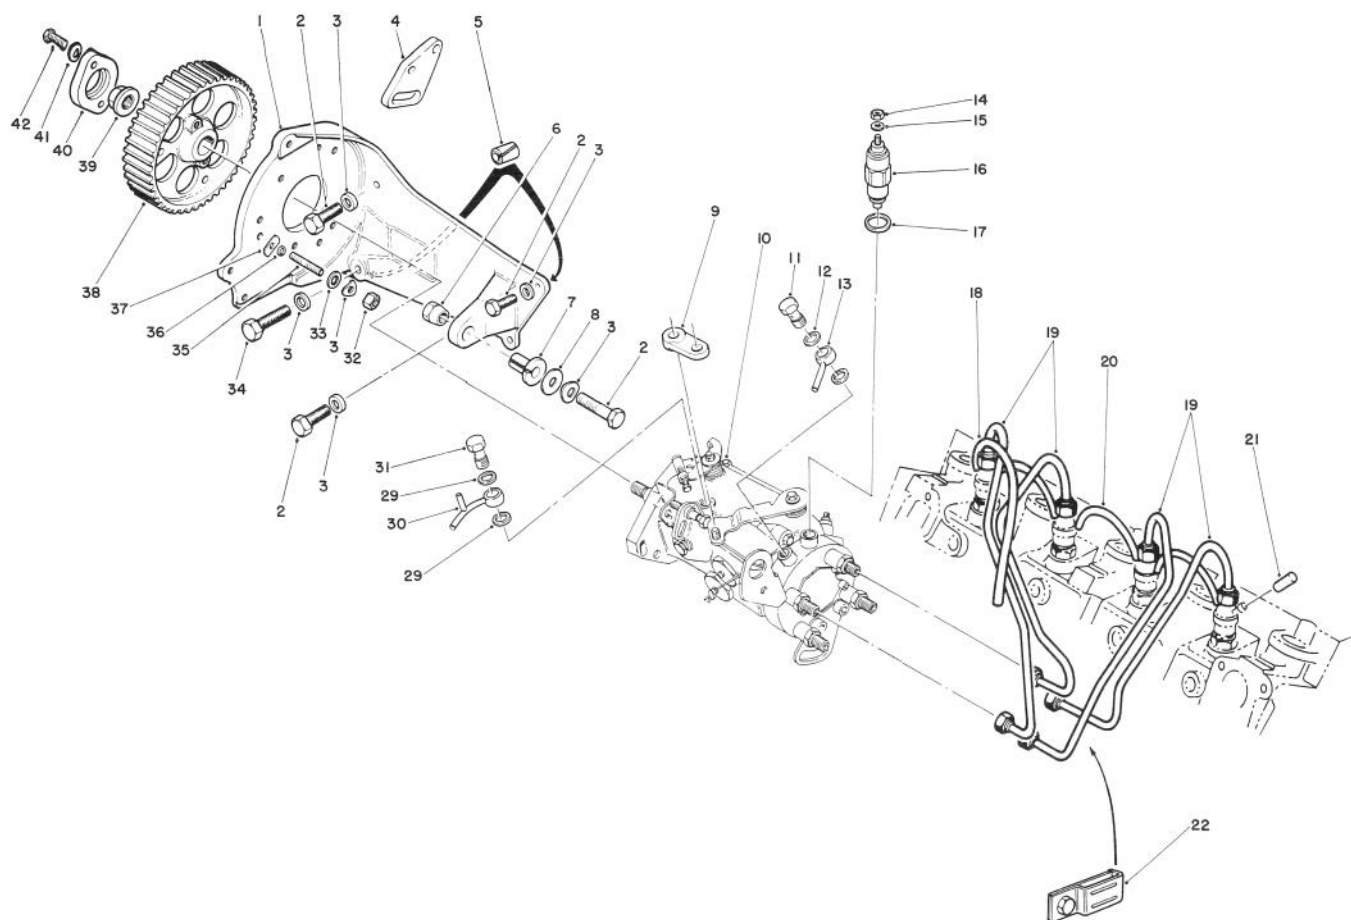 


T-0969

FUEL INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-8580	Bracket - Pump	1
2	60-6760	Screw - Cap Hex. Hd.	4
3	68-9420	Washer - Spring	8
4	74-8600	Bracket - Pump	1
5	74-8610	Pin - Spring	1
6	74-8620	Nut - Conical	1
7	74-8630	Bushing - Flange	1
8	74-8640	Washer - Flat	1
9	74-8650	Pacer	1
10	74-8660	Injection Pump Assembly	1
11	74-8670	Fuel Inlet Assembly (Incl. Ref. #13)	1
12	74-8680	Gasket	2
13		Banjo - Fuel Inlet	1
14	48-7880	Nut	1
15	74-8710	Washer	1
16	74-8720	Stop Valve Assembly	1
17	74-8730	Ring - Seal	1
18	74-8740	Tube - Pump Return	1
19	74-8750	Injection Tube Set	1

Ref. No.	Part No.	Description	No. Used
20	74-8760	Hose - Rubber	3
21	74-8770	Plug	1
22	74-8780	Clamp - Plastic	1
*	74-8790	Clamp - Metal	1
29	74-8870	Gasket	2
30		Banjo - Fuel Outlet	1
31	74-8890	Fuel Outlet Assembly (Incl. Ref. #30)	1
32	46-0330	Nut	3
33	74-8900	Washer - Flat	1
34	60-6700	Screw - Cap Hex. Hd.	1
35	76-4910	Stud	3
36	68-9420	Washer - Lock	3
37	76-4930	Washer	3
38	76-4940	Pulley - Pump	1
39	76-4950	Nut - Flange	1
40	76-4960	Flange	1
41	74-7560	Washer - Spring	2
42	74-8130	Screw - Cap Hex. Hd.	2

 *Not Illustrated

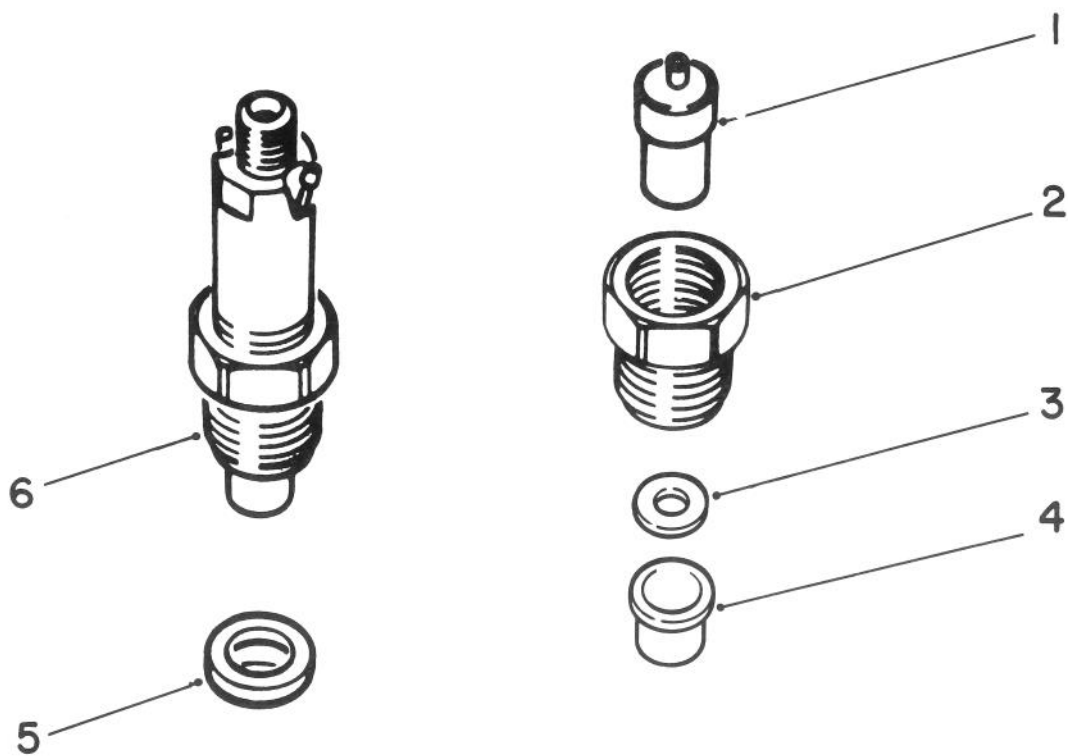


T-0971

FUEL INJECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-5510	Injector - Fuel	4
2	76-5520	Holder - Fuel Injector	4
3	76-5530	Washer	4
4	76-5540	Bushing - Injector	4

Ref. No.	Part No.	Description	No. Used
5	76-5550	Gasket - Fuel Injector	4
6	76-5560	Fuel Injector Assembly (Incl. Ref. #1-5)	4

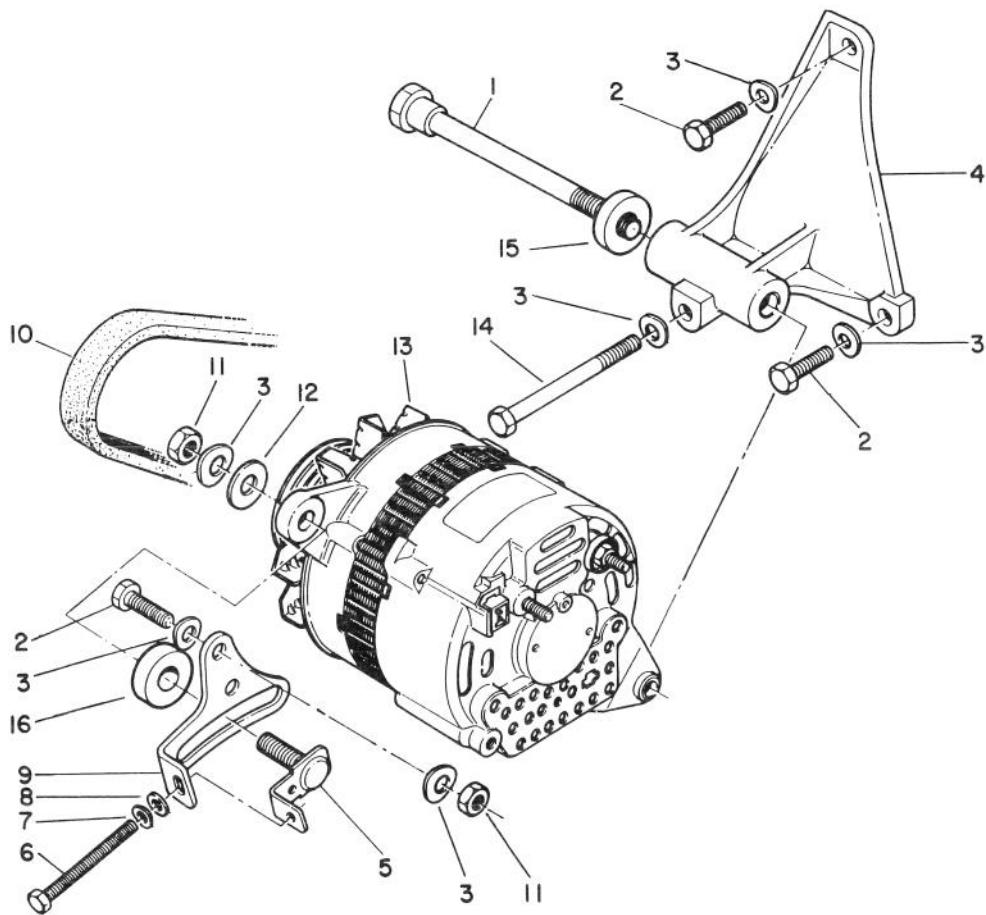 


T-0967

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-4970	Screw - Shoulder	1
2	48-9460	Screw - Cap Hex. Hd.	3
3	68-9420	Washer - Spring	6
4	76-4980	Bracket - Mounting	1
5	76-4990	Bolt - Slide	1
6	76-5000	Bolt - Adjusting	1
7	76-5010	Washer - Spring	1
8	76-5020	Washer - Flat	1

Ref. No.	Part No.	Description	No. Used
9	76-5030	Bracket - Slide	1
10	76-5040	Belt - V	1
11	46-0330	Nut - Hex.	2
12	74-8640	Washer - Flat	1
13	76-5050	Alternator	1
14	76-5060	Screw - Cap Hex. Hd.	1
15	77-3260	Washer	1
16	77-3250	Washer	1

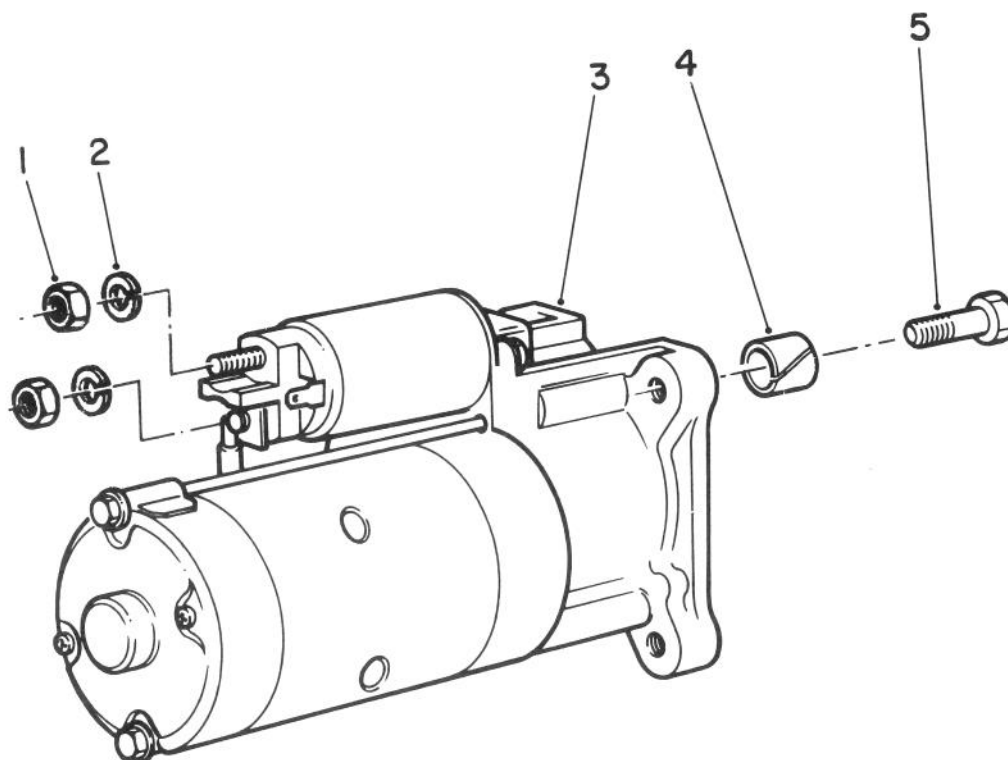 


T-0968

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-0330	Nut-Hex	2
2	76-5570	Washer-Lock	2
3	76-5580	Starter	1

Ref. No.	Part No.	Description	No. Used
4	76-5590	Sleeve - Spring	1
5	48-7810	Screw-Mounting	3

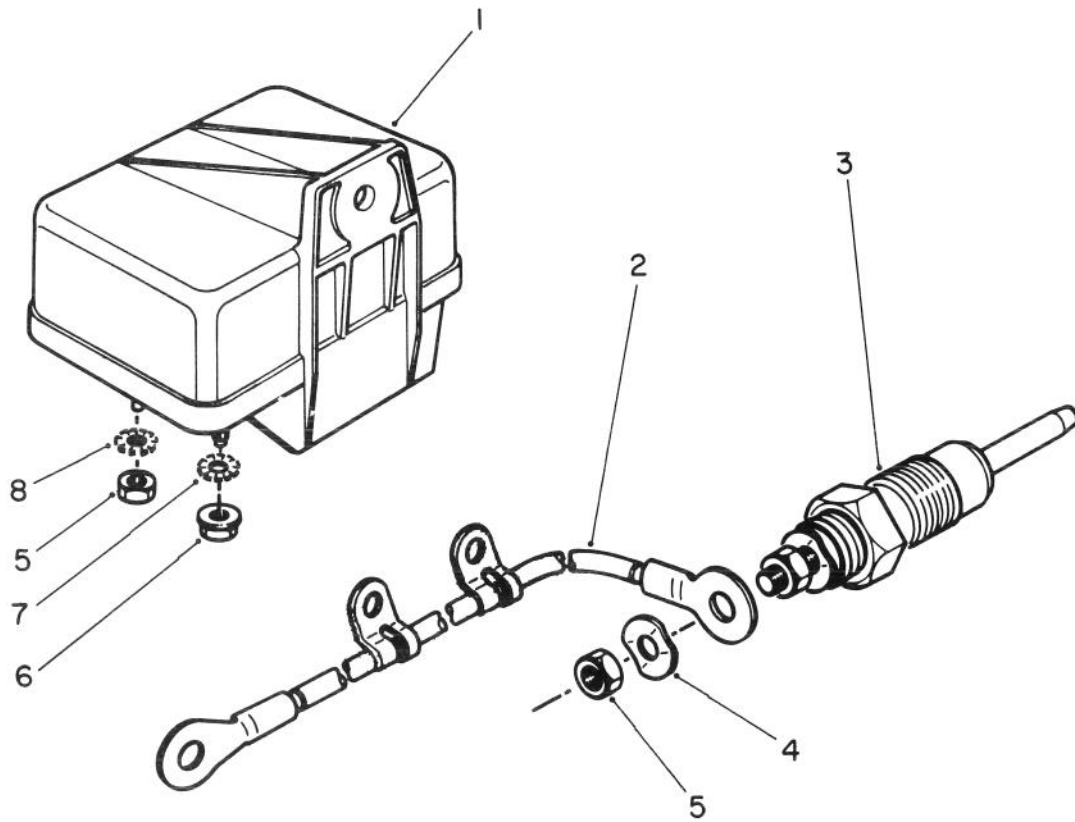 


T-0972

GLOW PLUG & GLOW RELAY

Ref. No.	Part No.	Description	No. Used
1	76-5260	Relay - Glow Plug	1
2	76-5270	Cable - Glow Plug	4
3	76-5280	Plug - Glow	4
4	76-5290	Washer - Spring	4

Ref. No.	Part No.	Description	No. Used
5	48-7880	Nut - Hex.	5
6	65-7980	Nut - Hex. Flange	1
7	76-5310	Washer - E.T.L.W.	1
8	74-8710	Washer - E.T.L.W.	1

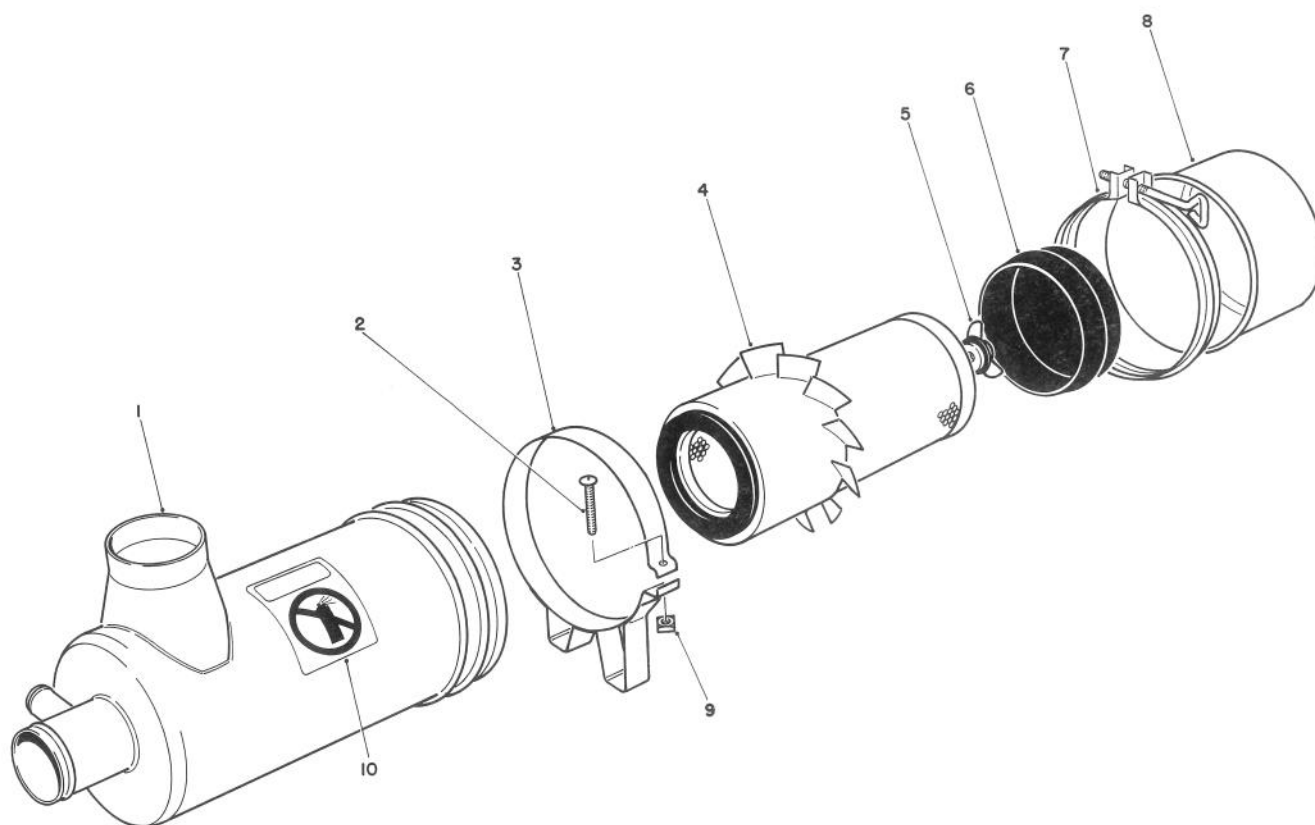 


T-1113

AIR CLEANER NO. 74-6000

Ref. No.	Part No.	Description	No. Used
1	74-6000	Air Cleaner Assembly (Incl. Ref. #4-8)	1
2	3258-19	Screw - Rd. Head Machine	2
3	27-7170	Band Assembly (Incl. Ref. 2 & 9)	1
4	27-7110	Element Assembly	1

Ref. No.	Part No.	Description	No. Used
5	27-7120	Nut & Gasket Assembly	1
6	27-7140	Skirt - Baffle	1
7	27-7130	Clamp Assembly	1
8	27-7150	Cap Assembly	1
9	32107-11	Nut	2
10	76-8770	Decal - Caution	1

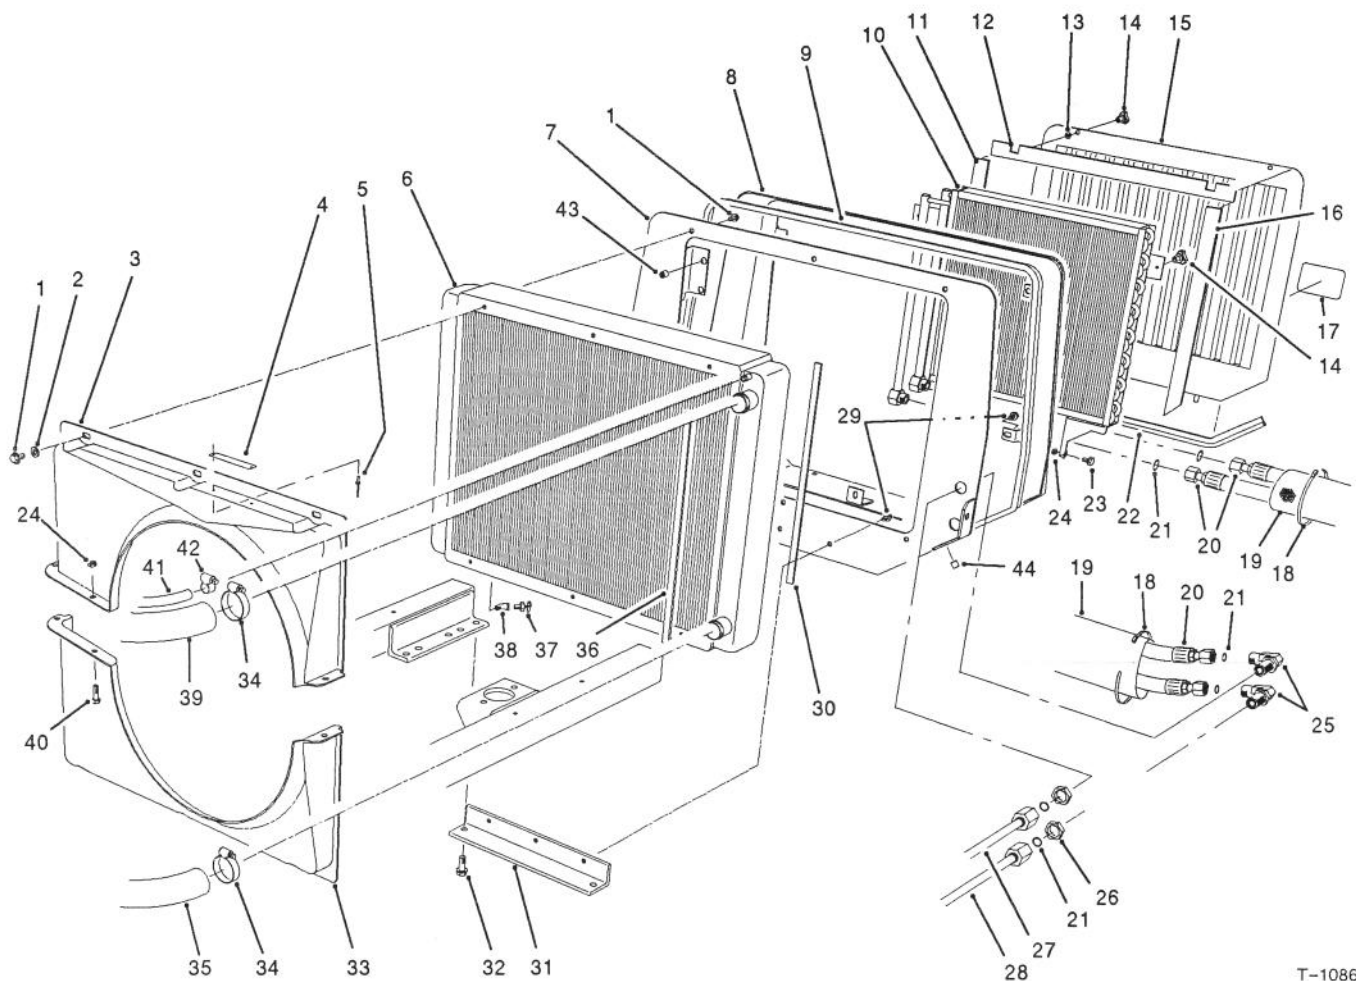 


T-1086

RADIATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3234-14	Screw - Hex. Flange Hd.	12
2	3256-23	Washer - Flat	6
3	74-4980	Shroud - Fan Upper	1
4	76-8750	Plate - Caution	1
5	3290-271	Rivet - Pop	2
6	74-3410	Radiator	1
7	14-0939	Radiator Mount Assembly (Incl. Ref. #43 & 44)	1
8	76-6800	Chamber	1
9	76-6363	Moulding - Inner	1
10	82-3740	Oil Cooler Assembly (Incl. Ref. #21)	1
11	82-3640	Foam - Screen R.H.	1
12	82-3650	Foam - Screen Top	1
13	32151-72	Retainer - Push-On	4
14	77-3620	Retainer - Cover	4
15	82-3730	Screen - Radiator	1
16	82-3630	Foam - Screen L.H.	1
17	67-1300	Decal - TORO	1
18	3290-379	Tie - Cable	2
19	70-1380	Sleeve - Protector	1
20	76-9540	Hose - Hydraulic	2
21	237-65	Seal - O-Ring	6
22	76-6362	Moulding - Outer	1

Ref. No.	Part No.	Description	No. Used
23	37-8770	Screw - Hex. Washer Hd.	2
24	3296-47	Nut - Lock	5
25	340-72	Fitting - Hydraulic 90° (Incl. Ref. #21)	2
26	340-74	Nut - Bulkhead	2
27	74-6400	Tube - Hydraulic	1
28	74-6390	Tube - Hydraulic	1
29	3234-12	Screw - Hex. Washer Hd.	7
30	76-6381	Seal - Strip	2
31	74-5460	Angle Radiator Support	1
32	3234-27	Screw - Hex. Washer Hd.	2
33	74-4990	Shroud - Fan Lower	1
34	2412-3	Clamp - Hose	2
35	74-6020	Hose - Radiator Lower	1
36	76-6382	Seal - Strip	2
37	304-46	Fitting - Radiator Drain	1
38	2811-1	Fitting - 45° Elbow	1
39	74-5930	Hose - Radiator Upper	1
40	322-3	Screw - Cap Hex. Hd.	3
41	74-9120	Hose - Expansion Tank	1
42	2412-108	Clamp - Hose	1
43	32148-9	Insert - Threaded	8
44	32148-10	Insert - Threaded	2

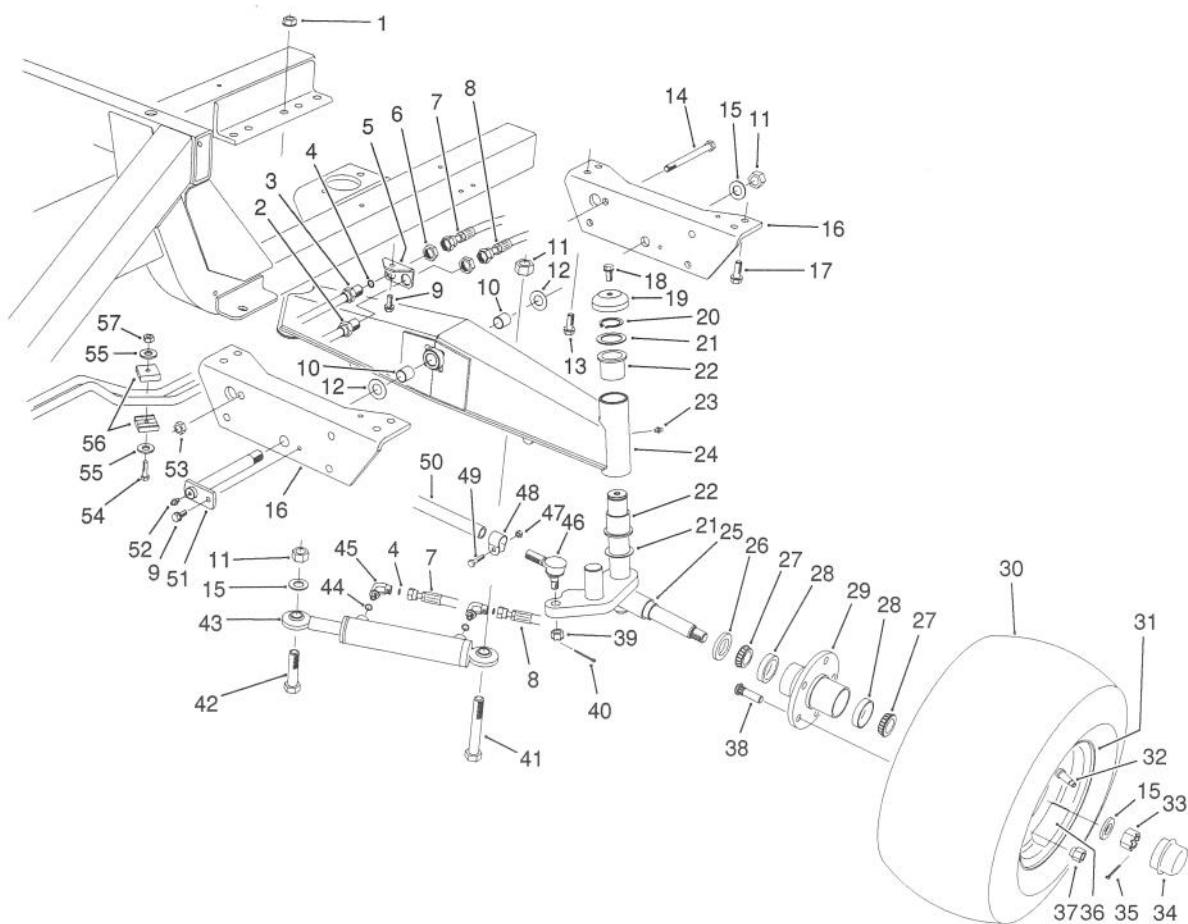 


T-1079

REAR AXLE ASSEMBLY (Model No. 03600)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32128-23	Nut - Flange Lock	6	22	69-6470	Bushing - Flange	4
2	74-6260	Tube - Hydraulic L.H. (Incl. Ref. #4)	1	23	302-11	Fitting - Grease	2
3	74-6270	Tube - Hydraulic R.H. (Incl. Ref. #4)	1	24	74-5000	Rear Axle Assembly (Incl. Ref. #10 & 22-23)	1
4	237-22	Seal - O-Ring	4	25	74-5330	Spindle - L.H.	1
5	74-6450	Bracket - Bulkhead	1	*	74-5350	Spindle - R.H.	1
6	340-70	Nut - Bulkhead	2	26	253-129	Seal - Inner	2
7	76-6550	Hose - Hydraulic Rod End	1	27	254-94	Cone - Bearing	4
8	76-6900	Hose - Hydraulic Cap End	1	28	254-72	Cup - Bearing	4
9	32144-11	Screw - Hex. Flange Hd.	2	29	21-2820	Hub - Wheel (Incl. Ref. #28 & 38)	2
10	76-4260	Bushing - Sleeve	2	30	74-5560	Tire	2
11	3296-51	Nut - Lock	3	31	217-122	Rim	2
12	76-6570	Washer - Thrust	2	32	232-27	Stem - Valve	2
13	3234-32	Screw - Cap Hex. Hd.	6	33	32136-5	Nut - Slotted	2
14	325-20	Screw - Cap Hex. Hd.	2	34	241-119	Cap - Hub	2
15	3256-28	Washer - Flat	4	35	3272-13	Pin - Cotter	2
16	76-4170	Support - Axle	2	36	76-8740	Decal - Torque	2
17	3234-27	Screw - Hex. Washer Hd.	2	*	74-5940	Tie Rod Assembly (Incl. Ref. #39 & 46-50)	1
18	3234-12	Screw - Cap Hex. Hd.	2	37	242-50	Nut - Lug	10
19	69-8890	Cap - Spindle	2	38	10-6830	Stud - Drive	10
20	32151-10	Ring - Retaining	2	39	32136-13	Nut - Slotted	2
21	62-2170	Washer - Thrust	4				

 *Not Illustrated

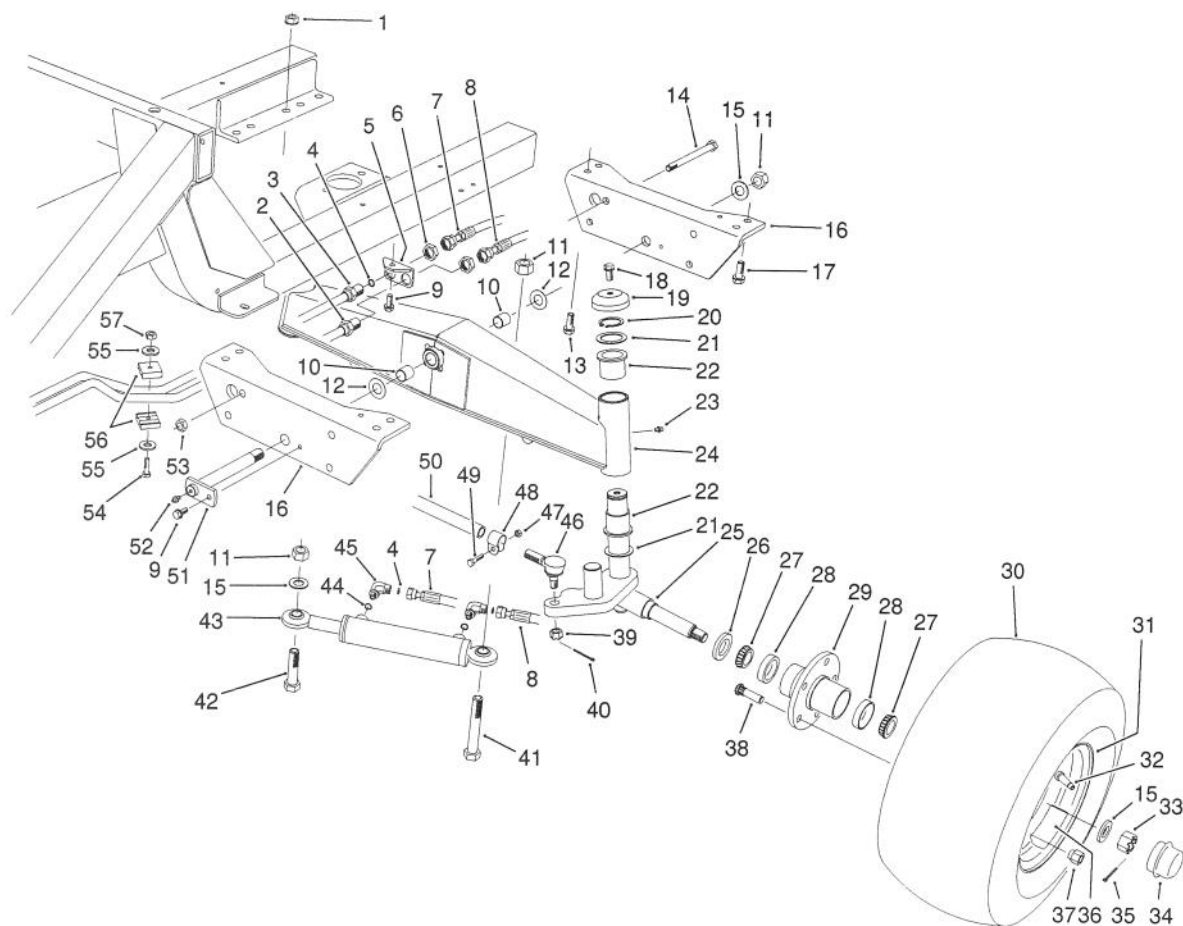


T-1079

REAR AXLE ASSEMBLY (Model No. 03600) (Cont.)

Ref. No.	Part No.	Description	No. Used
40	3272-12	Pin - Cotter	2
41	76-8990	Bolt - Cylinder	1
42	328-25	Screw - Cap Hex. Hd.	1
43	74-5530	Hydraulic Cylinder Assy.	1
44	237-78	Seal - O-Ring	2
45	340-97	Fitting - Hydraulic 90° (Incl. Ref. #4 & 44)	2
46	2411-46	Joint - Ball L.H. (Incl. Ref. #39)	1
*	2411-45	Joint - Ball R.H. (Incl. Ref. #39)	1
47	32152-5	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
48	2412-122	Clamp Assembly (Incl. Ref. #47 & 49)	2
49	3210-7	Screw - Cap Hex. Hd.	2
50	2412-123	Tie Rod Assembly (Incl. Ref. #47-49)	1
51	74-5250	Pin - Axle Pivot	1
52	302-2	Fitting - Grease	1
53	3296-45	Nut - Lock	2
54	321-8	Screw - Cap Hex. Hd.	1
55	3256-22	Washer - Flat	2
56	56-7973	Clamp - Tube	2
57	32153-4	Nut - Lock	1

 *Not Illustrated

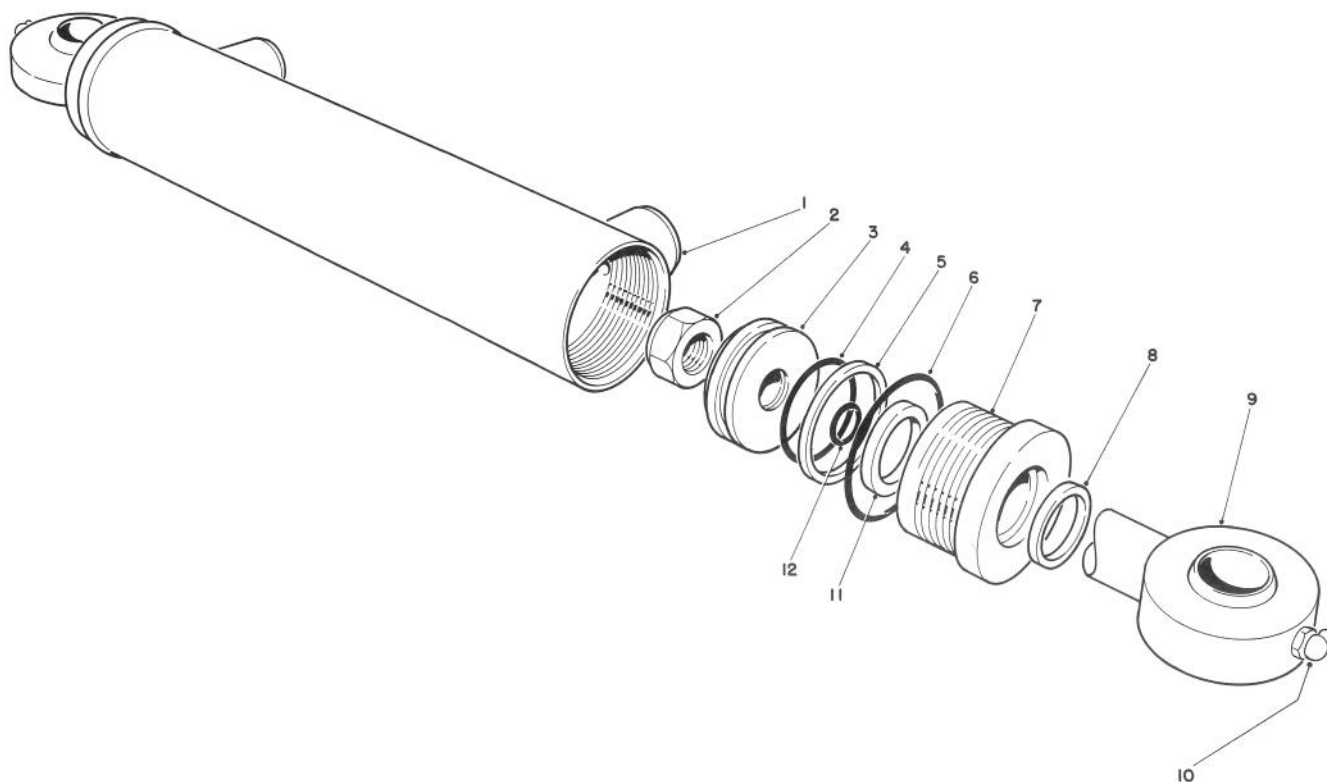


T-0994

HYDRAULIC CYLINDER NO. 74-5530 (Model No. 03600)

Ref. No.	Part No.	Description	No. Used
1	74-9730	Butt & Tube Assy. (Incl. Ref. #1)	1
2	74-9760	Nut-Lock	1
3	74-9740	Piston	1
4		O-Ring	1
5		Seal-Teflon	1
6		O-Ring	1
7	74-9750	Gland	1

Ref. No.	Part No.	Description	No. Used
8		Wiper	1
9	74-9720	Rod-Piston (Incl. Ref. #10)	1
10		Fitting-Grease	2
11		U-Cup	1
12		O-Ring	1
*	74-9830	Seal Kit (Incl. Ref. #4-6, 8, 11 & 12)	1

 *Not Illustrated

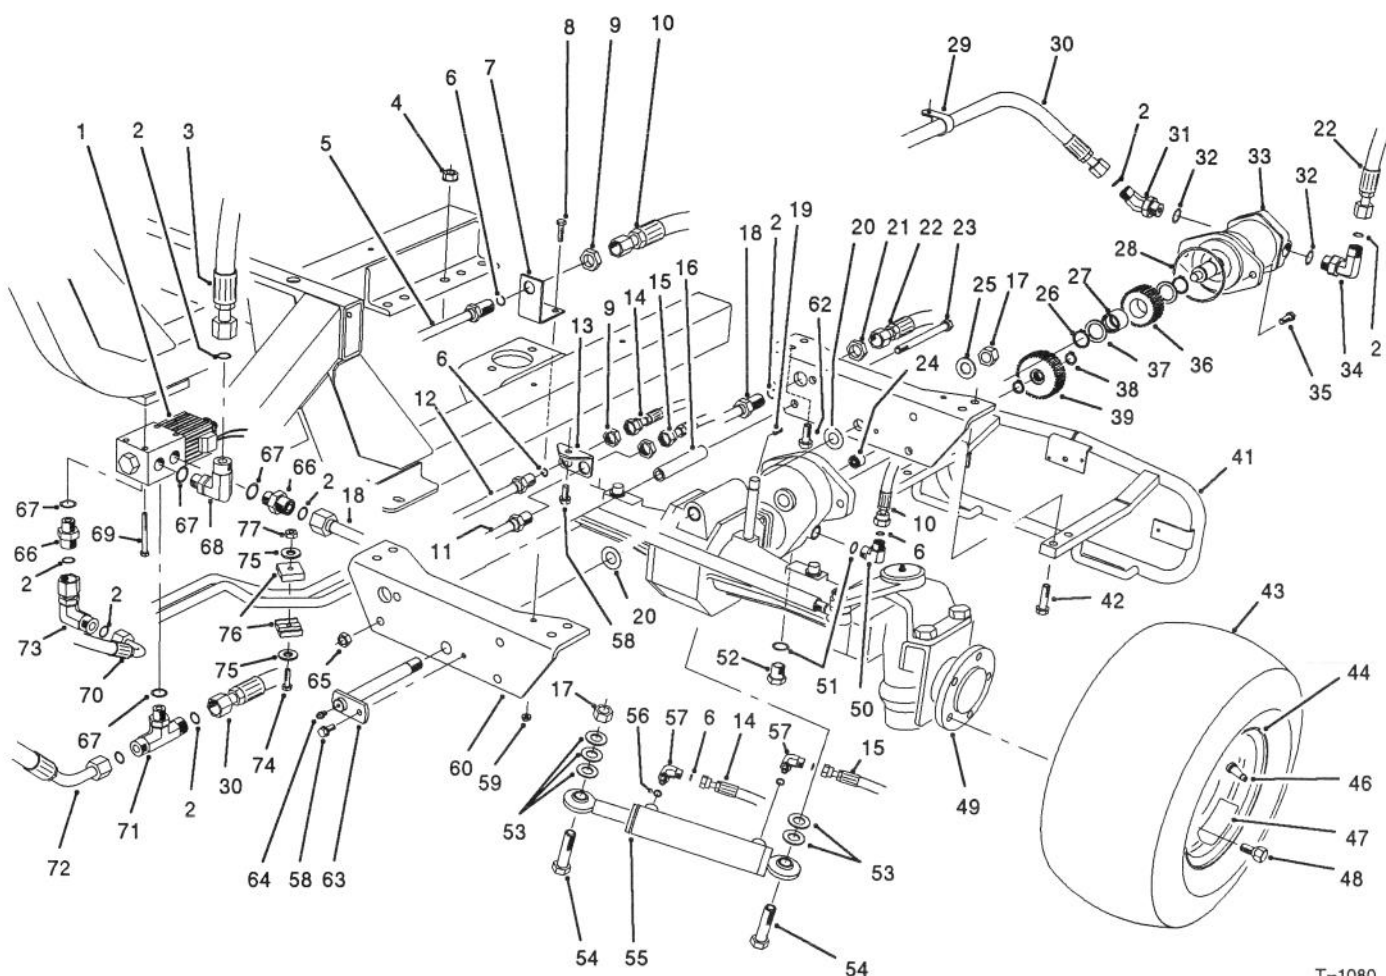


T-1080

REAR AXLE ASSEMBLY (Model No. 03601)

Ref. No.	Part No.	Description	No. Used
1	76-9970	Valve - Solenoid	1
2	237-65	Seal - O-Ring	9
3	86-2740	Hose - Hydraulic	1
4	32128-23	Nut - Flange Lock	8
5	74-6230	Tube - Hydraulic	
	(Incl. Ref. #6)		1
6	237-22	Seal - O-Ring	5
7	76-9290	Bracket - Bulkhead	1
8	3234-4	Screw - Cap Hex. Hd.	1
9	340-70	Nut - Bulkhead	3
10	76-8180	Hose - Hydraulic	1
11	74-6260	Tube - Hydraulic L.H.	
	(Incl. Ref. #6)		1
12	74-6270	Tube - Hydraulic R.H.	
	(Incl. Ref. #6)		1
13	74-6450	Bracket - Bulkhead	1
14	76-9590	Hose - Hydraulic (Rod End)	1
15	76-8200	Hose - Hydraulic (Cap End)	1
16	76-8350	Stop - Axle	2
17	3296-51	Nut - Lock	3
18	86-2770	Tube - Hydraulic	
	(Incl. Ref. #2)		1
19	3247-2	Screw - Set	1

Ref. No.	Part No.	Description	No. Used
20	76-6570	Washer - Thrust	2
21	340-74	Nut - Bulkhead	1
22	86-2730	Hose - Hydraulic	1
23	325-20	Screw - Cap Hex. Hd.	2
24	74-5700	Bearing - Needle	1
25	3256-28	Washer - Flat	1
26	32151-96	Ring - Retaining	2
27	71-4580	Clutch - Roller	1
28	237-166	Seal - O-Ring	1
29	2412-74	Clamp - R	1
30	86-2710	Hose - Hydraulic	1
31	340-156	Fitting - Hydraulic 45°	
	(Incl. Ref. #2 & 32)		1
32	237-81	Seal - O-Ring	2
33	76-6580	Motor - Hydraulic	1
34	340-139	Fitting - Hydraulic 90°	
	(Incl. Ref. #2 & 32)		1
35	325-4	Screw - Cap Hex. Hd.	2
36	76-4200	Gear - Motor	1
37	71-4590	Washer - Thrust	2
38	32120-15	Ring - Retaining	2
39	76-4190	Gear - Axle	1
41	76-9200	Bumper	1

 *Not Illustrated

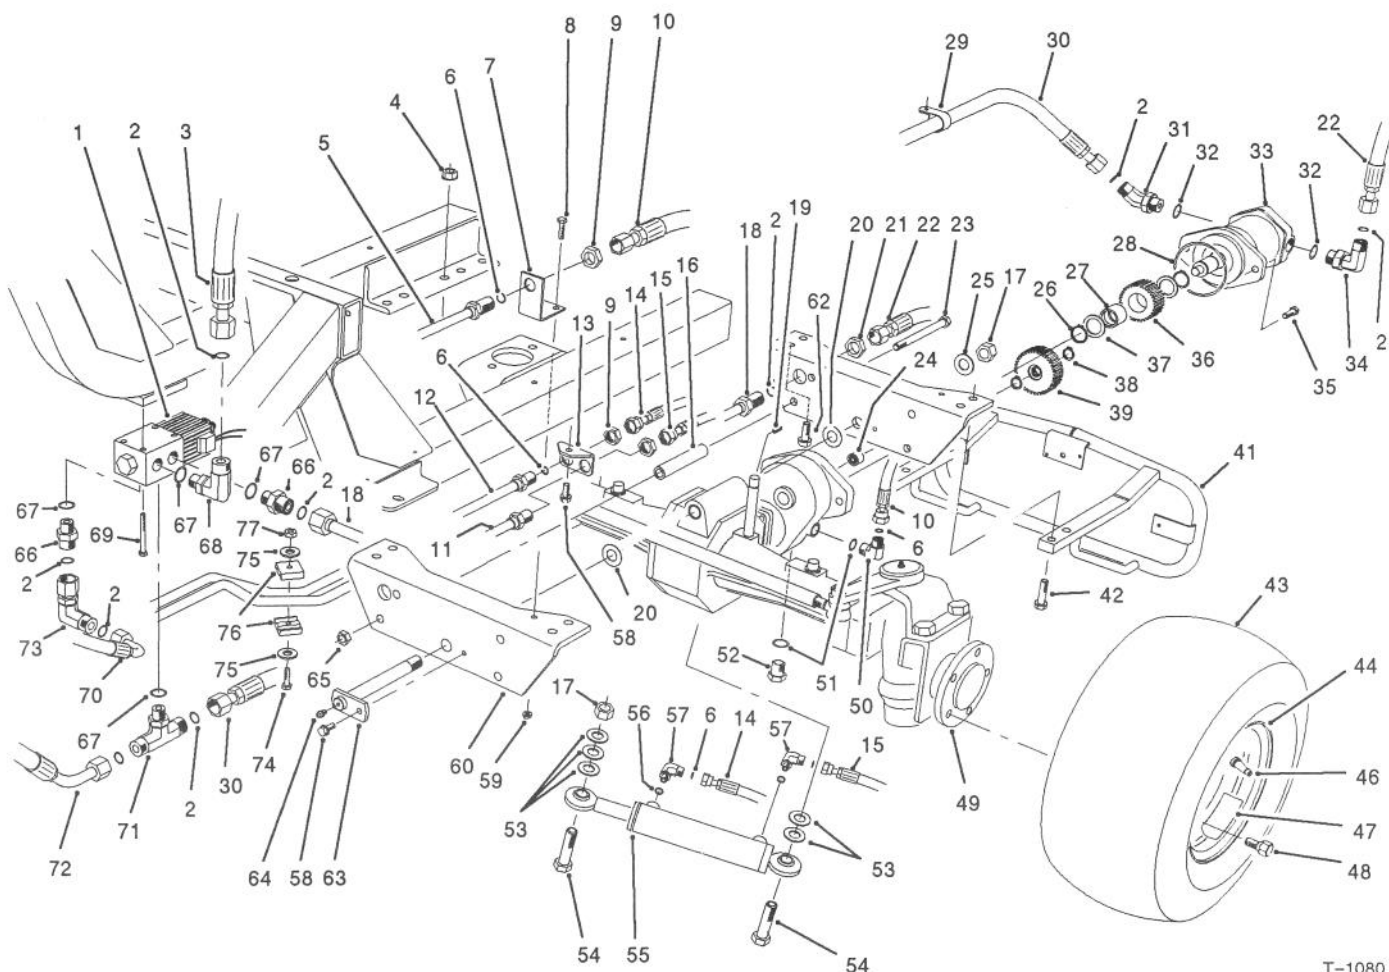


T-1080

REAR AXLE ASSEMBLY (Model No. 03601) (Cont.)

Ref. No.	Part No.	Description	No. Used
42	3234-27	Screw - Cap Hex. Hd.	2
43	74-5560	Tire	2
44	217-122	Rim	2
46	232-27	Stem - Valve	2
47	76-8740	Decal - Torque	2
48	74-5500	Bolt - Wheel	10
49	74-5620	Axle Assembly	1
50	340-77	Fitting - Hydraulic 90° (Incl. Ref. #6 & 51)	1
51	237-42	Seal - O-Ring	2
52	353-508	Plug - Hydraulic (Incl. Ref. #51)	1
53	67-9410	Washer - Flat	5
54	328-25	Screw - Cap Hex. Hd.	2
55	74-3450	Cylinder - Hydraulic	1
56	237-78	Seal - O-Ring	2
57	340-97	Fitting - Hydraulic 90° (Incl. Ref. #6 & 56)	2
58	32144-11	Screw - Hex. Washer Hd.	2
59	32128-33	Nut - Flange Lock	1

Ref. No.	Part No.	Description	No. Used
60	76-4170	Support - Axle	2
62	3234-32	Screw - Cap Hex. Hd.	6
63	74-5250	Pin - Axle Pivot	1
64	302-2	Fitting - Grease	1
65	3296-45	Nut - Lock	2
66	340-155	Fitting - Hydraulic Straight (Incl. Ref. #2 & 67)	2
67	237-79	Seal - O-Ring	4
68	340-153	Fitting - Hydraulic 90° (Incl. Ref. #2 & 67)	1
69	321-15	Screw - Cap Hex. Hd.	2
70	86-2720	Hose - Hydraulic	1
71	340-157	Fitting - Hydraulic Tee (Incl. Ref. #2 & 67)	1
72	77-4080	Hose - Hydraulic	1
73	340-160	Fitting - Hydraulic	1
74	321-8	Screw - Cap Hex. Hd.	1
75	3256-22	Washer - Flat	2
76	56-7973	Clamp - Hose	2
77	32153-4	Nut - Lock	1

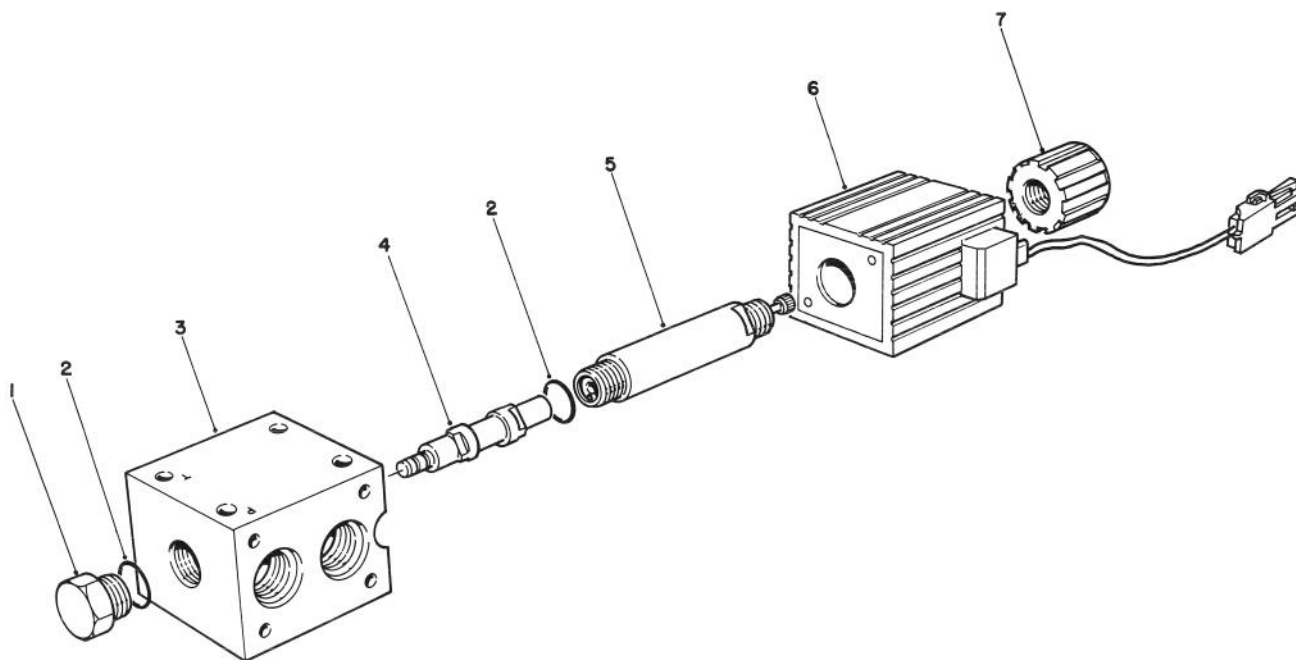 


T-1126

4WD SOLENOID VALVE ASSEMBLY NO. 76-9970

Ref. No.	Part No.	Description	No. Used
1	237-80	Adapter Assembly (Incl. Ref. #2)	1
2		O-Ring	2
3		Valve - Directional	1
4		Spool	1

Ref. No.	Part No.	Description	No. Used
5	218-591 218-592	Tube Assembly (Incl. Ref. #2)	1
6		Coil Assembly	1
7		Nut - Coil	1

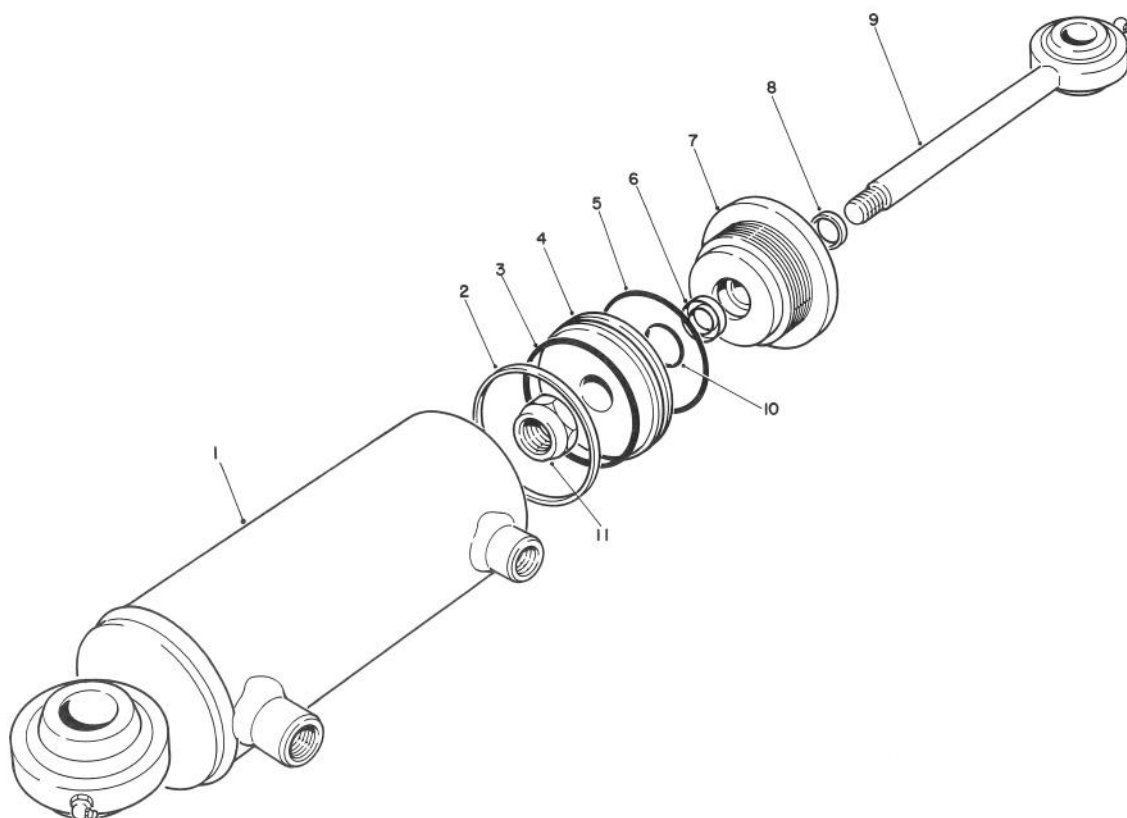 


T-1037

HYDRAULIC CYLINDER NO. 74-3450 (Model No. 03601)

Ref. No.	Part No.	Description	No. Used
1	74-9610	Butt & Tube Assembly	1
2		Seal-Teflon	1
3		O-Ring	1
4	66-1940	Piston	1
5		O-Ring	1
6		U-Cup	1
7	74-9640	Gland	1

Ref. No.	Part No.	Description	No. Used
8		Wiper	1
9	74-9600	Piston Rod Assembly	1
10		O-Ring	1
11	66-1930	Nut-Lock	1
*	74-9710	Kit - Seal (Incl. Ref. #2, 3, 5, 6, 8,& 10)	

 *Not Illustrated

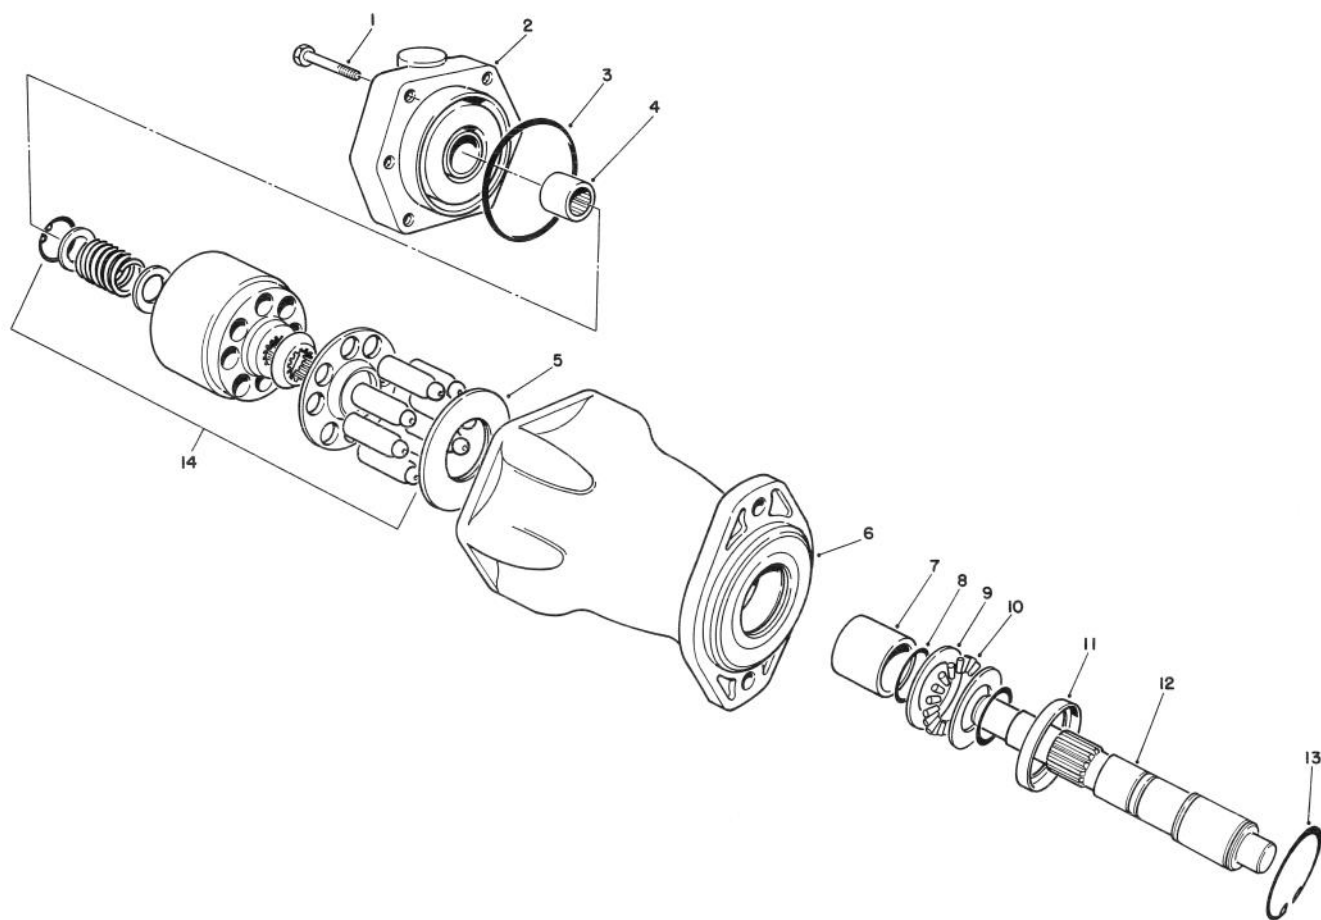


T-1041

HYDRAULIC MOTOR NO. 76-6580 (Model No. 03601)

Ref. No.	Part No.	Description	No. Used
1	76-6990	Screw - Cap, Hex. Hd.	6
2	76-6920	Back Plate Assembly (Incl. Ref. #4)	1
3	76-6980	O-Ring	1
4		Bearing	1
5	76-6970	Insert - Camplate	1
6	76-6940	Housing Assembly (Incl. Ref. #7)	1

Ref. No.	Part No.	Description	No. Used
7		Bearing	1
8	76-7000	Ring - Retaining	2
9	76-6950	Race - Thrust	1
10	76-6960	Bearing - Thrust	1
11	76-7020	Spacer	1
12	76-6930	Shaft - Drive	1
13	76-7010	Ring - Retaining	1
14	76-6910	Rotating Assembly	1

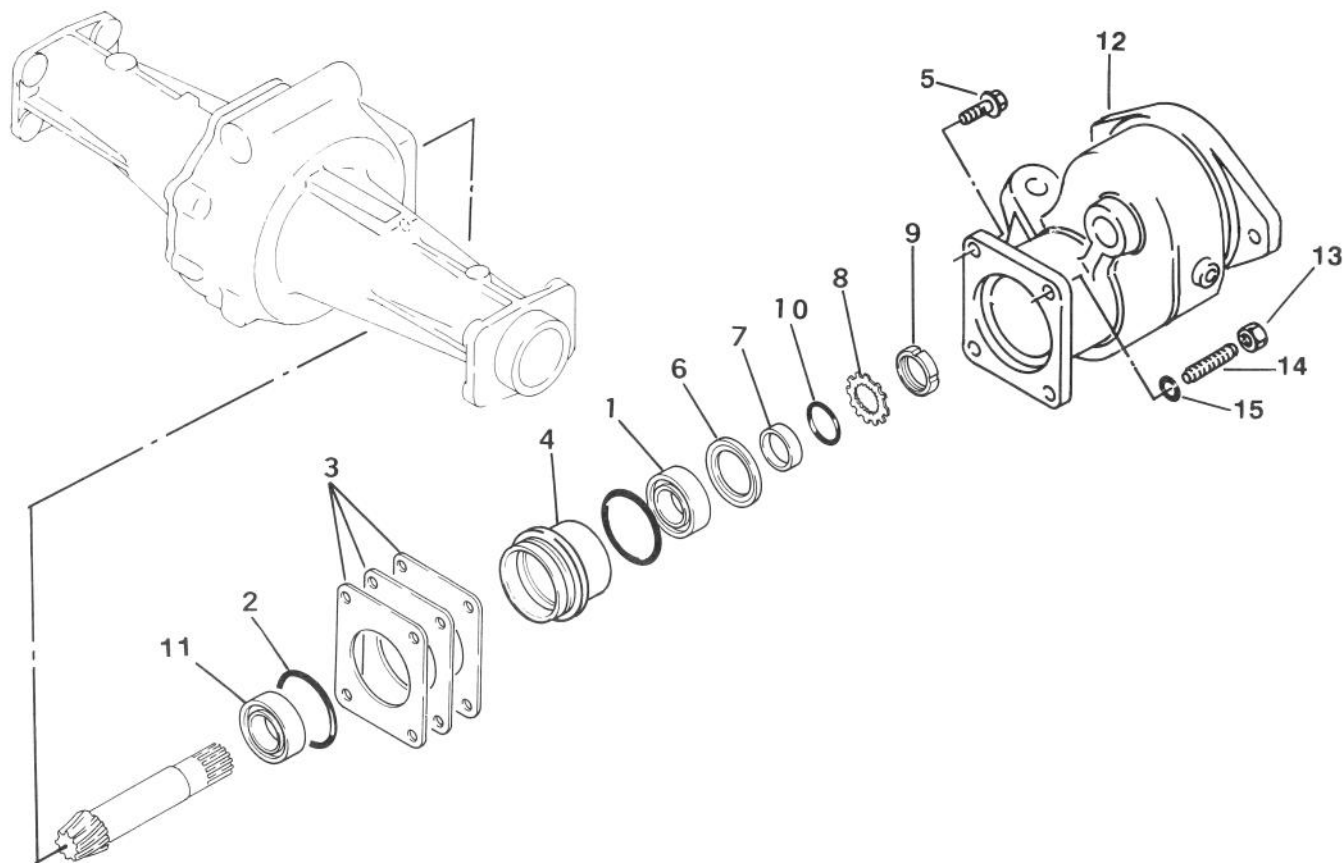 


T-1109

SLEEVE ASSEMBLY 4WD AXLE No. 74-5620 (Model No. 03601 Only)

Ref. No.	Part No.	Description	No. Used
1	76-7370	Bearing	1
2	76-7400	O-Ring	2
3	76-7410	Shim - 0.1 mm	A/R
*	76-7420	Shim - 0.2 mm	A/R
*	76-7430	Shim - 0.4 mm	A/R
4	76-7320	Sleeve	1
5	76-7150	Bolt	3
6	76-7340	Seal - Oil	1
7	76-7350	Bushing	1
8	76-7380	Washer	1

Ref. No.	Part No.	Description	No. Used
9	76-7390	Nut - Lock	1
10	76-7360	O-Ring	1
11	76-7330	Bearing	1
12	74-5630	Adapter	1
13	76-7460	Washer	1
14	76-7450	Bolt - Stud	1
15	76-7690	Nut	1
*	77-4010	Shim Set (Incl. Ref. #3)	1

 *Not Illustrated

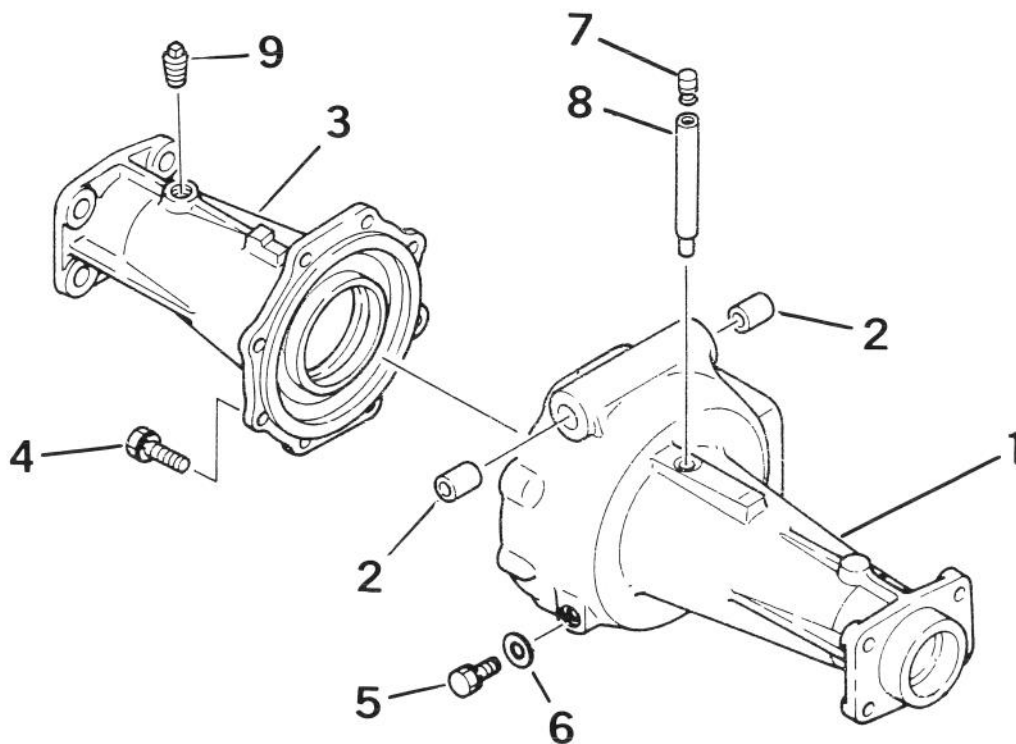


T-1112

AXLE HOUSING ASSEMBLY

4WD AXLE No. 74-5620 (Model No. 03601 Only)

Ref. No.	Part No.	Description	No. Used
1	76-7100	Housing - Axle A	1
2	76-4260	Bushing	2
3	76-7130	Housing - Axle B	1
4	76-7150	Bolt	8
5	76-7110	Plug	1

Ref. No.	Part No.	Description	No. Used
6	76-7120	Seal - Washer	1
7	76-7480	Plug - Vent	1
8	76-7470	Pipe	1
9	76-7140	Plug	1

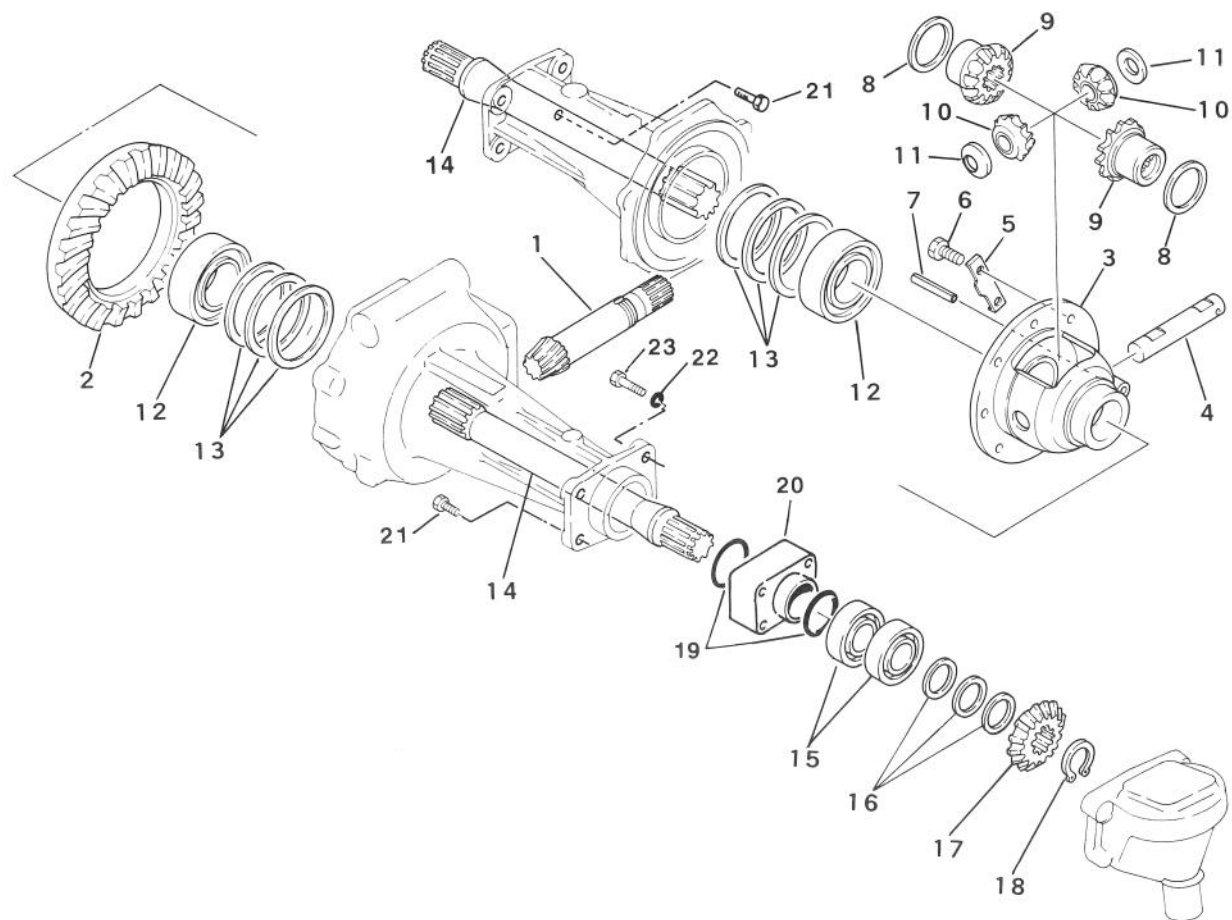 


T-1111

DIFFERENTIAL & SHAFT ASSEMBLY 4WD AXLE No. 74-5620 (Model No. 03601 Only)

Ref. No.	Part No.	Description	No. Used
1	76-7250	Shaft - Drive	1
2	76-7240	Ring - Gear	1
3	76-7170	Case - Differential	1
4	76-7200	Shaft - Pinion	1
5	76-7230	Washer - Lock	4
6	76-7260	Bolt	8
7	76-7270	Pin - Spring	1
8	76-7220	Washer - Thrust	2
9	76-7190	Gear - Side	2
10	76-7180	Pinion - Mate	2
11	76-7210	Washer - Thrust	2
12	76-7280	Bearing	2
13	76-7290	Shim - 0.1 mm	A/R
*	76-7300	Shim - 0.2 mm	A/R
*	76-7310	Shim - 0.3 mm	A/R
14	76-7490	Shaft - Differential	2
15	76-7500	Bearing	4

Ref. No.	Part No.	Description	No. Used
16	76-7520	Shim - 0.1 mm	A/R
*	76-7530	Shim - 0.2 mm	A/R
*	76-7540	Shim - 0.4 mm	A/R
17	76-7510	Pinion - 14T	2
18	76-7550	Ring - Retaining	2
19	76-7580	Seal - O-Ring	4
20	76-7590	Spacer	2
21	76-7600	Bolt - Reamer	2
22	76-7620	Washer - Lock	6
23	76-7610	Bolt	6
*	76-7160	Gear Case Assembly (Incl. Ref. #2-11)	1
*	77-4000	Shim Set (Incl. Ref. #13)	1
*	77-4020	Shim Set (Incl. Ref. #16)	1

 *Not Illustrated

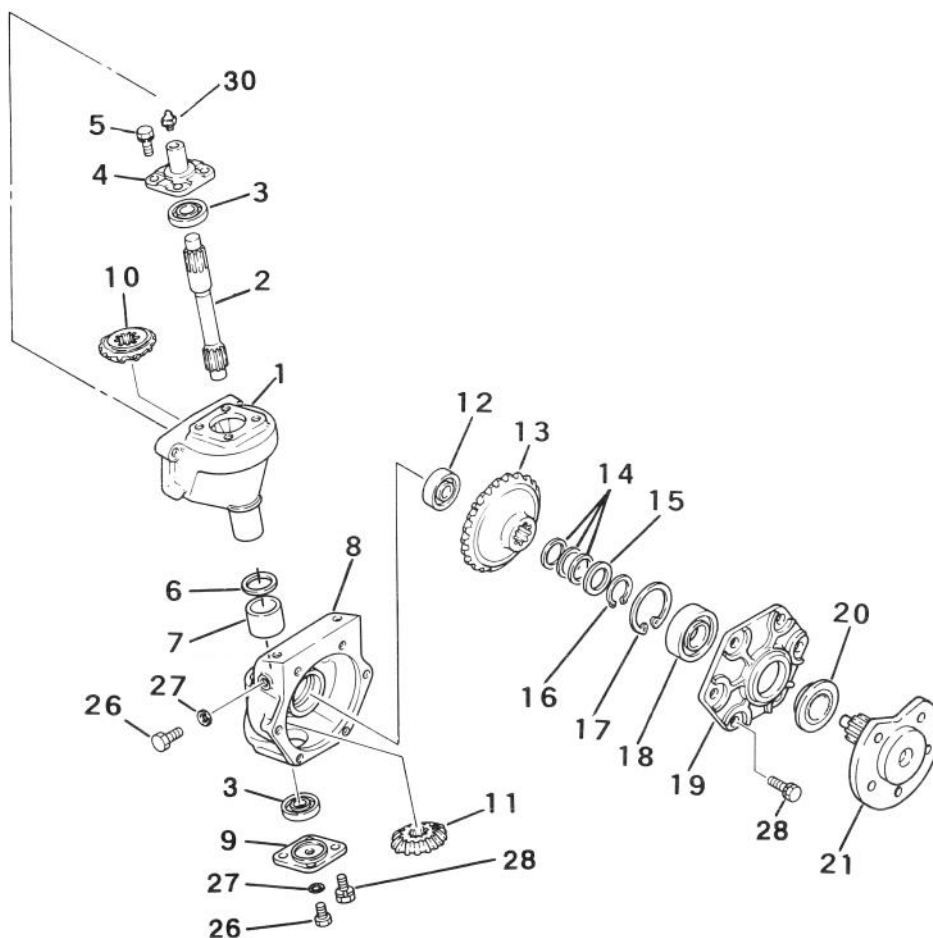


T-1110

STEERING GEAR CASE ASSEMBLY 4WD AXLE No. 74-5620 (Model No. 03601 Only)

Ref. No.	Part No.	Description	No. Used
1	76-7560	Case - Gear	2
2	76-7650	Shaft - Final Drive	2
3	76-7670	Bearing	4
4	76-7660	Holder - 25 mm L.H.	1
*	76-7630	Holder - 20 mm R.H.	1
5	76-7640	Bolt	8
6	76-7740	Seal - Oil	2
7	76-7730	Bushing	2
8	76-7680	Case - Final Drive	2
9	76-7770	Cover	2
10	76-7510	Pinion - 14T	2
11	76-7750	Pinion - 15T	2
12	76-7850	Bearing	2
13	76-7840	Gear - Bevel	2

Ref. No.	Part No.	Description	No. Used
14	76-7890	Shim - 0.15 mm	A/R
*	76-7900	Shim - 0.2 mm	A/R
*	76-7910	Shim - 0.4 mm	A/R
15	76-7880	Spacer	2
16	76-7920	Ring - Retaining	2
17	76-7930	Ring - Retaining	2
18	76-7860	Bearing	2
19	76-7810	Holder - Bearing	2
20	76-7870	Seal - Oil	2
21	76-7830	Shaft - Wheel	2
26	76-7110	Plug	4
27	76-7120	Seal - Washer	4
28	76-7640	Bolt	20
30	76-7960	Fitting - Grease	2
*	77-4030	Shim Set (Incl. Ref. #14)	1

 *Not Illustrated

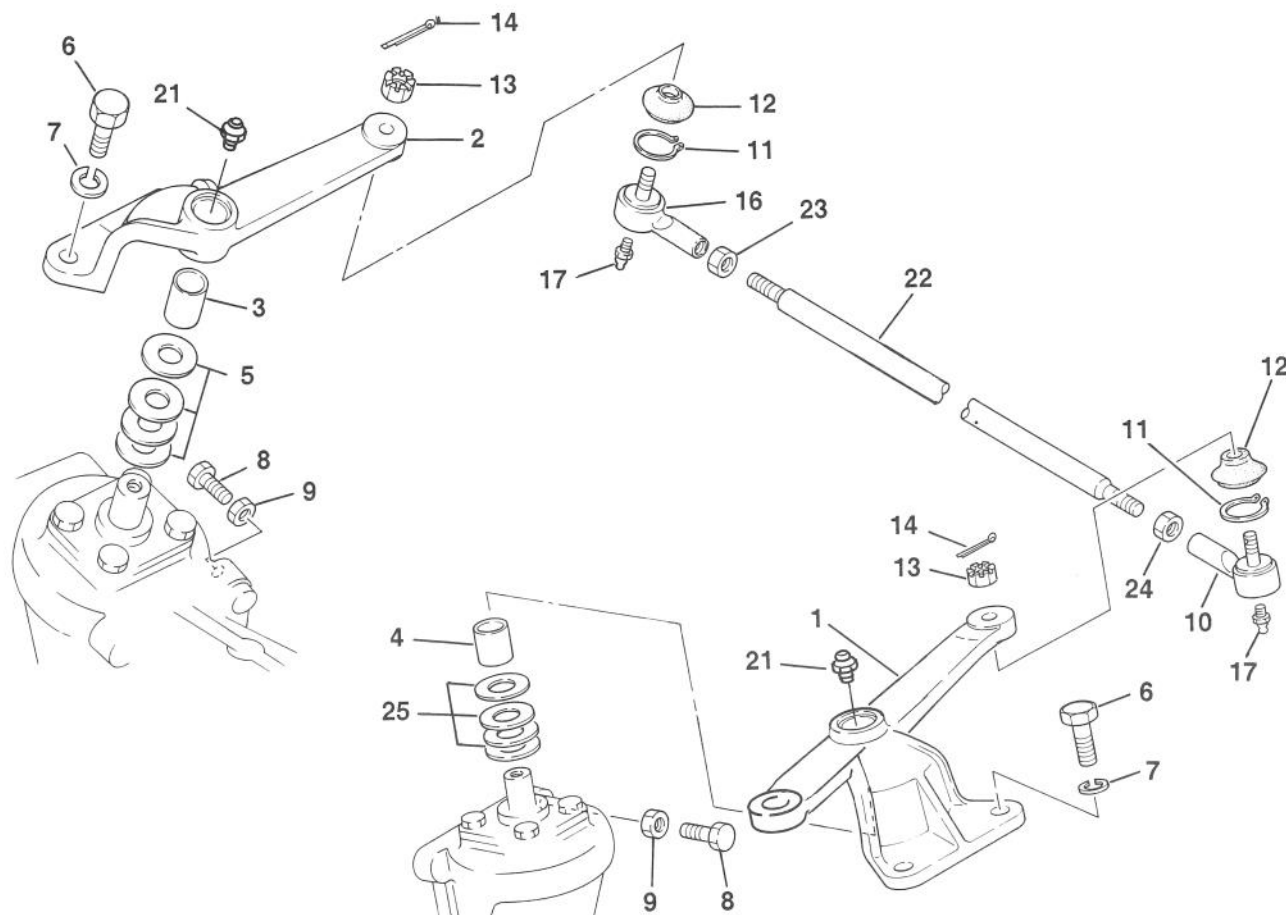


T-1108

STEERING ARM LINKAGE AXLE No. 74-5620 (Model No. 03601 Only)

Ref. No.	Part No.	Description	No. Used
1	76-4270	Arm - Drag Link	1
2	76-7940	Arm - Tie Rod	1
3	76-4260	Bushing	1
4	76-7950	Bushing	1
5	76-7820	Shim - 1.0 mm	A/R
*	76-7970	Shim - 1.4 mm	A/R
*	76-7980	Shim - 1.2 mm	A/R
*	76-7990	Shim - .08 mm	A/R
6	76-8000	Bolt	4
7	76-8010	Washer	2
8	76-7710	Bolt	2
9	76-7720	Nut	4
10	76-8030	Rod End - L.H.	1
11		Ring - Retaining	2
12		Cover	2
13		Nut - Slotted	2

14		Pin - Cotter	2
16	76-8050	Rod End - R.H.	1
17		Fitting - Grease	2
21	76-7960	Fitting - Grease	2
22	76-8020	Rod - Tie	1
23	76-8060	Nut - R.H.	1
24	76-8040	Nut - L.H.	1
25	76-7700	Shim - 0.8 mm	A/R
*	76-7760	Shim - 1.0 mm	A/R
*	76-7780	Shim - 1.2 mm	A/R
*	76-7790	Shim - 1.4 mm	A/R
*	77-4050	Shim Set (Incl. Ref. #5)	1
*	77-4040	Shim Set (Incl. Ref. #25)	1

 *Not Illustrated

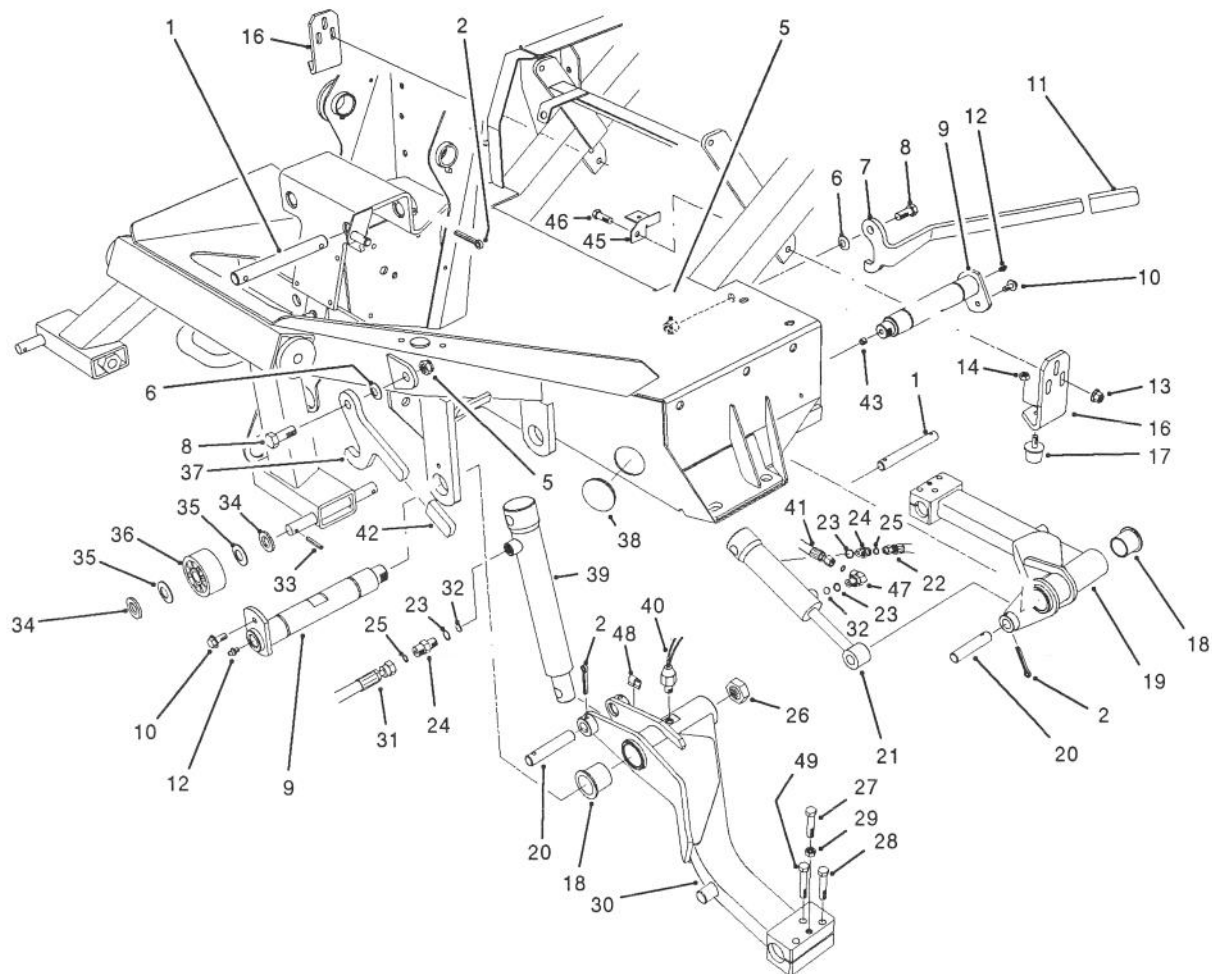


T-1083

LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-6850	Pin - Cylinder (Cap End)	3
2	3272-50	Pin - Cotter	6
5	3296-25	Nut - Lock	3
6	3290-483	Washer - Belleville	3
7	76-9360	Latch - Lockup Center	1
8	325-5	Screw - Cap Hex. Hd.	3
9	74-5280	Pin - Lift Arm Pivot	3
10	32144-11	Screw - Hex. Washer Hd.	3
11	48-7080	Handle - Lift Arm (Center)	1
12	302-2	Fitting - Grease	3
13	3290-357	Hut - Flange Lock	4
14	32128-20	Nut - Lock	2
16	84-0660	Bracket - Bumper	2
17	68-3270	Bumper	2
18	69-6470	Bushing - Flange	6
19	74-5100	Lift Arm Assembly Center (Incl. Ref. #18)	1
20	76-6860	Pin - Cylinder (Rod End)	3
21	74-3440	Hydraulic Cylinder Assembly	1
22	76-9410	Hose - Hydraulic	1
23	237-42	Seal - O-Ring	4
24	340-2	Fitting - Hydraulic Straight (Incl. Ref. #23 & 25)	3
25	237-22	Seal - O-Ring	4
26	3296-49	Nut - Hex.	3
27	323-50	Bolt - Self Tapping	3

Ref. No.	Part No.	Description	No. Used
28	323-10	Screw - Cap Hex. Hd.	6
29	3218-3	Nut - Jam	3
30	74-5200	Lift Arm Assembly L.H. (Incl. Ref. #18)	1
*	74-5300	Lift Arm Assembly R.H. (Incl. Ref. #18)	1
31	76-8220	Hose - Hydraulic	2
32	59-7340	Plate - Orifice	3
33	32121-6	Pin - Roll	4
34	51-2060	Washer - Flat	8
35	3290-317	Washer - Wave	8
36	82-4910	Roller	4
37	76-9350	Latch - Lockup Front	2
38	2410-69	Plug - Hole	1
39	74-3460	Hydraulic Cylinder Assembly	2
40	72-4310	Switch - Lift	3
41	76-9900	Hose - Hydraulic	1
42	48-7081	Handle - Lift Arm (Front)	2
43	285-17	Plug - Socket Pipe	3
45	74-6470	Bracket - Line Clamp	1
46	323-7	Screw - Cap Hex. Hd.	4
47	340-77	Fitting - Hydraulic 90° (Incl. Ref. #23 & 25)	1
48	249-50	Clip - Wire	3
49	323-11	Screw - Cap Hex. Hd.	3

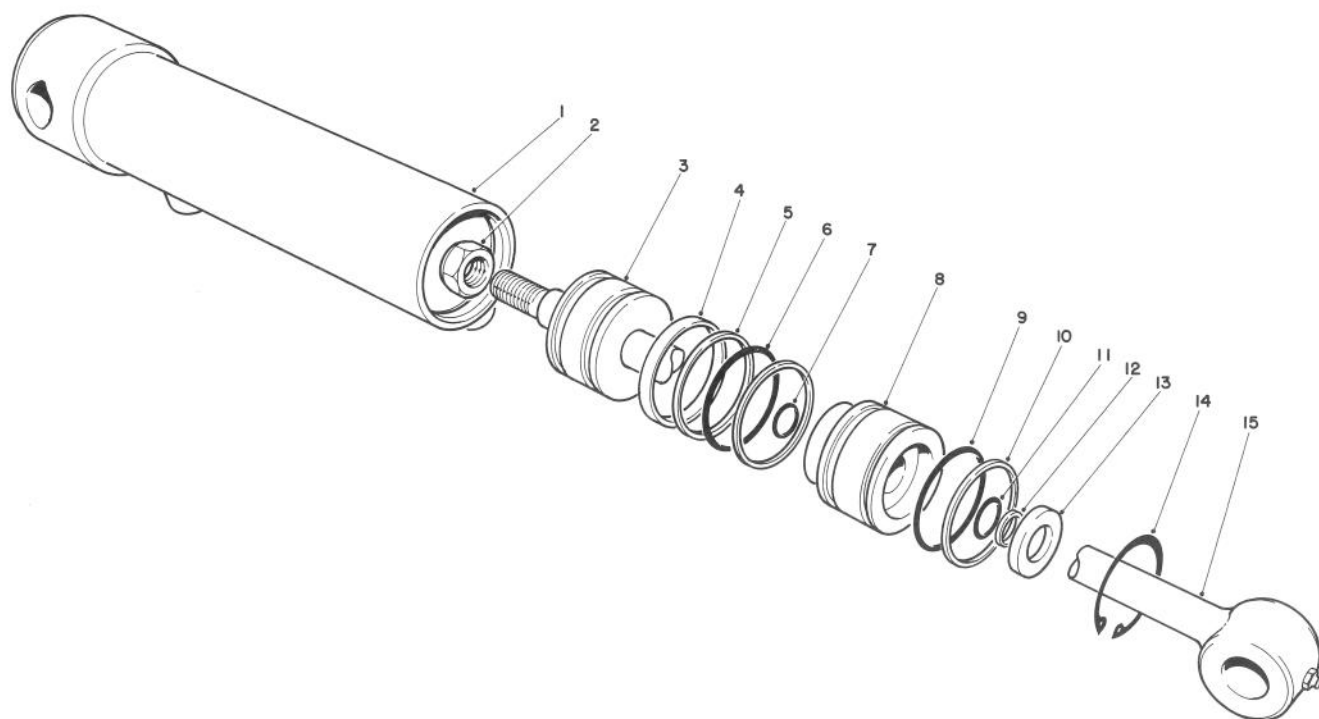 


T-0993

HYDRAULIC CYLINDER NO. 74-3440

Ref. No.	Part No.	Description	No. Used
1	74-9960	Barrel Assembly	1
2	74-9940	Nut-Lock	1
3	74-9950	Piston	1
4		Ring-Wear	1
5		Back-up	2
6		O-Ring	1
7		O-Ring	1
8	74-9980	Head	1
9		O-Ring	1

Ref. No.	Part No.	Description	No. Used
10		Back-up	1
11		O-Ring	1
12		Back-up	1
13		Wiper	1
14	32120-42	Ring-Retaining	1
15	74-9970	Rod	1
*	74-9990	Seal Kit (Incl. Ref. #4-7, & 9-13)	1

 *Not Illustrated

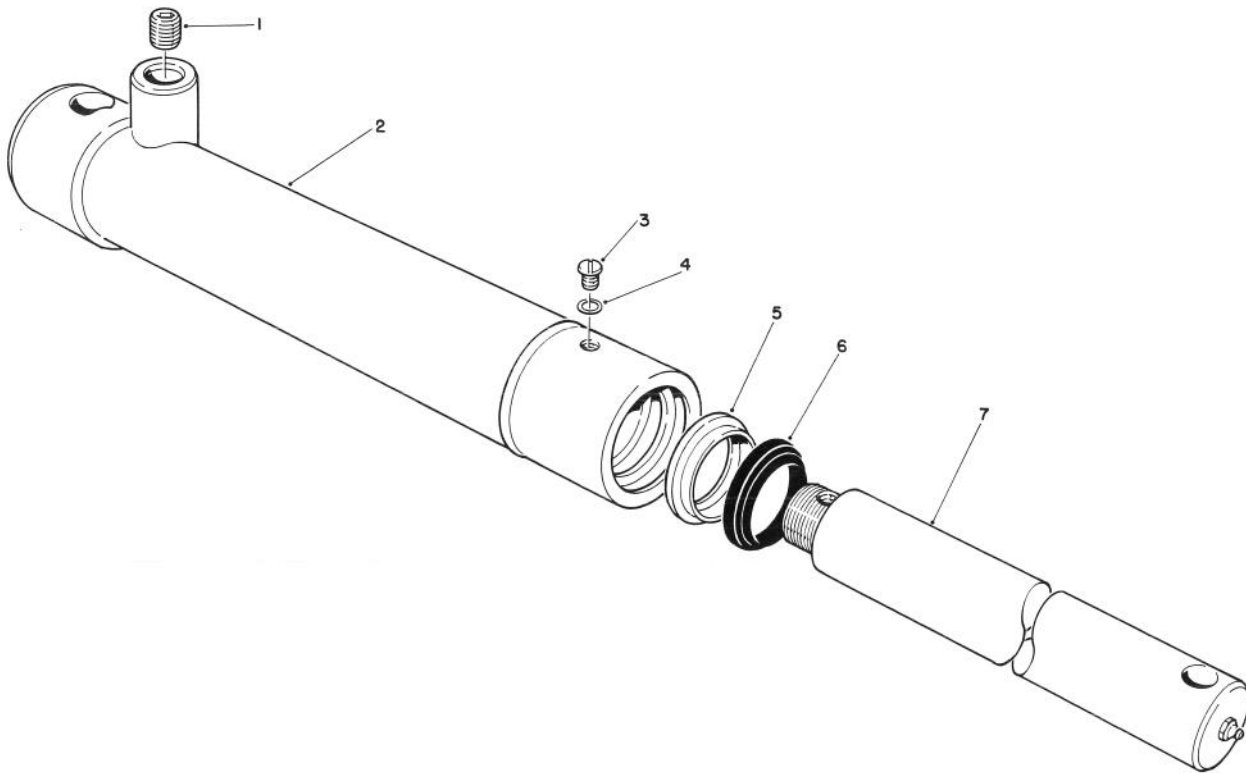


T-1038

HYDRAULIC CYLINDER NO. 74-3460

Ref. No.	Part No.	Description	No. Used
1	74-9550	Set Screw	1
2	74-9560	Barrel Assy. (Incl. Piston)	1
3	74-9580	Screw-Bleeder	1
4	77-3960	Washer - Seal	1
5		U-Cup	1

Ref. No.	Part No.	Description	No. Used
6		Wiper-Rod	1
7	74-9570	Rod	1
*	74-9590	Seal Kit (Incl. Ref. #5 & 6)	1

 *Not Illustrated

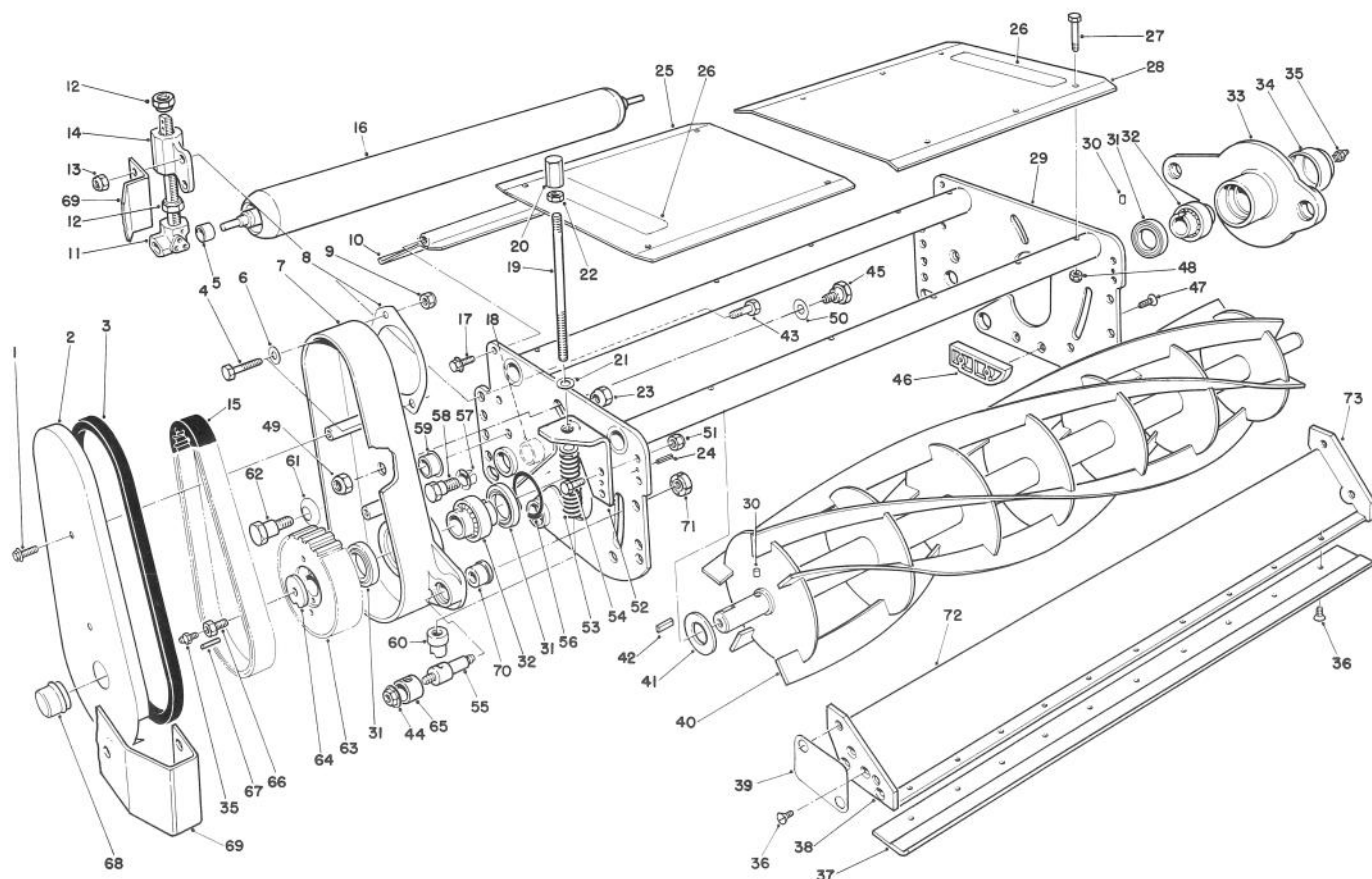


T-0178

CUTTING UNIT ASSEMBLY No. 1 (Center) & 3 (R.H.) 5 Blade Model No. 03753, 7 Blade Model No. 03756, & 11 Blade Model No. 03751

Ref. No.	Part No.	Description	No. Used
1	3234-14	Screw - Flange Hd.	2
2	75-7580	Cover - Drive Housing R.H.	1
3	47-7170	Gasket	1
4	324-6	Bolt	2
5	59-5780	Bushing - Roller	2
6	3256-25	Washer - Flat	1
7	62-6470	Housing - Drive, R.H.	1
8	48-9050	Plate - Shield, Drive	1
9	3296-48	Nut - Lock	2
10	75-7680	Deflector - Grass, R.H./Ctr.	1
11	84-6100	Assembly - Collar	2
12	59-5820	Nut - Cone	4
13	3296-25	Nut - Lock	4
14	59-5770	Housing - Roller, Adj.	2
15	47-7160	Belt	1
16	59-5630	Assembly - Roller, Rear	1
17	3234-12	Screw - Flange Hd.	2
18	62-6110	Assembly - Bushing	4
19	72-0390	Rod - Bedknife, Adj.	2
20	72-0380	Knob - Hex.	2
21	257-5	Washer - Thrust	4
22	3218-5	Nut - Jam	2
23	242-50	Nut - Cone	2

Ref. No.	Part No.	Description	No. Used
24	32121-2	Pin - Roll	2
25	59-5840	Cover - Outboard	1
26	76-8760	Decal	2
27	3234-34	Screw	8
28	59-5830	Cover - Inboard	1
29	14-0829	Frame (Incl. Ref. #18)	1
30	48-8880	Pin - Dowel	2
31	253-145	Seal	3
32	59-6140	Bearing	2
33	59-5550	Housing - Bearing	1
34	59-5560	Cap - Dust	1
35	302-5	Fitting - Grease	2
36	57-4910	Screw (5 & 7 Blade)	10
36	57-4910	Screw (11 Blade)	19
37	59-5890	Bedknife (7 Blade)	1
*	72-0480	Bedknife (5 Blade)	1
*	76-3620	Bedknife (11 Blade)	1
38	76-3610	Plate - End, R.H. (11 Blade)	1
39	76-3580	Spacer	2
40	13-8229	Reel (5-Blade)	1
*	13-8219	Reel (7-Blade)	1
*	14-0919	Reel (11-Blade)	1

 *Not Illustrated

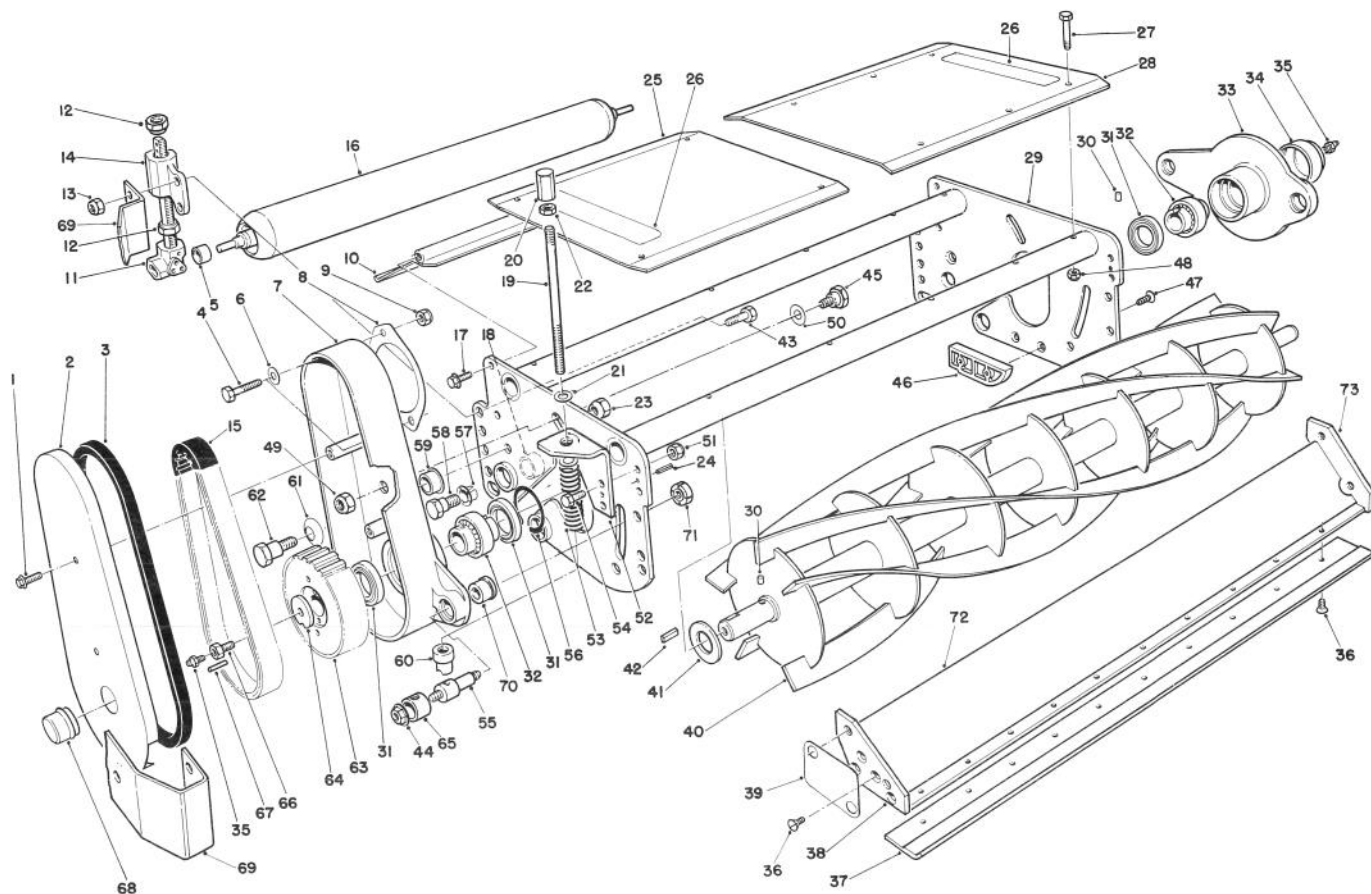


T-0178

CUTTING UNIT ASSEMBLY No. 1 (Center) & 3 (R.H.) 5 Blade Model No. 03753, 7 Blade Model No. 03756, & 11 Blade Model No. 03751 (Continued)

Ref. No.	Part No.	Description	No. Used
41	38-7330	Shield - Grass	2
42	75-7570	Key - Rectangular	1
43	325-7	Screw - Cap Hex. Hd.	4
44	32128-15	Nut - Flange	2
45	62-6080	Bolt - Shoulder	2
46	62-6070	Block - Deflector (7 Blade)	2
*	77-4810	Block - Deflector (11 Blade)	2
47	32108-101	Screw - Flat Hd. (7 & 11 Blade)	4
48	3296-8	Nut - Lock	8
49	3296-28	Nut - Lock	1
50	3256-59	Washer - Flat	1
51	3296-26	Nut - Lock	4
52	72-0460	Bracket - L.H. Bedknife Adj.	1
*	72-0450	Bracket - R.H. Bedknife Adj.	1
53	72-0400	Spring	2
54	323-7	Screw - Cap Hex. Hd.	4
55	72-0440	Pin - Pivot	2
56	32151-71	Ring - Retaining	1
57	256-292	Bushing - Nyliner	4
58	84-6090	Bolt - Shoulder	4

Ref. No.	Part No.	Description	No. Used
59	256-252	Bushing - Flange	2
60	72-0410	Stand Off	2
61	3290-440	Washer - Belleville	2
62	48-9020	Bolt	2
63	47-7140	Pulley - Driven	1
64	59-6150	Washer - Pulley	1
65	72-0420	Clamp Tube	2
66	59-6190	Screw - Cap, Reel	1
67	32121-50	Pin - Roll	1
68	59-7490	Plug - Grease Fitting	1
69	72-0470	Guard	2
70	72-0430	Bushing - Flange	2
71	82-9390	Nut - Special	2
72	59-5470	Bedbar, Welded Assembly (5 & 7 Blade)	1
*72	77-4340	Bedbar (11 Blade)	1
73	76-3600	Plate - End, L.H. (11 Blade)	1
74	32121-11	Pin - Roll	4
*	14-2099	Kit - Overhaul (Incl. Ref. #18, 30-32, 36, 39, 42, 56, 57, 59 & 70)	1

 *Not Illustrated

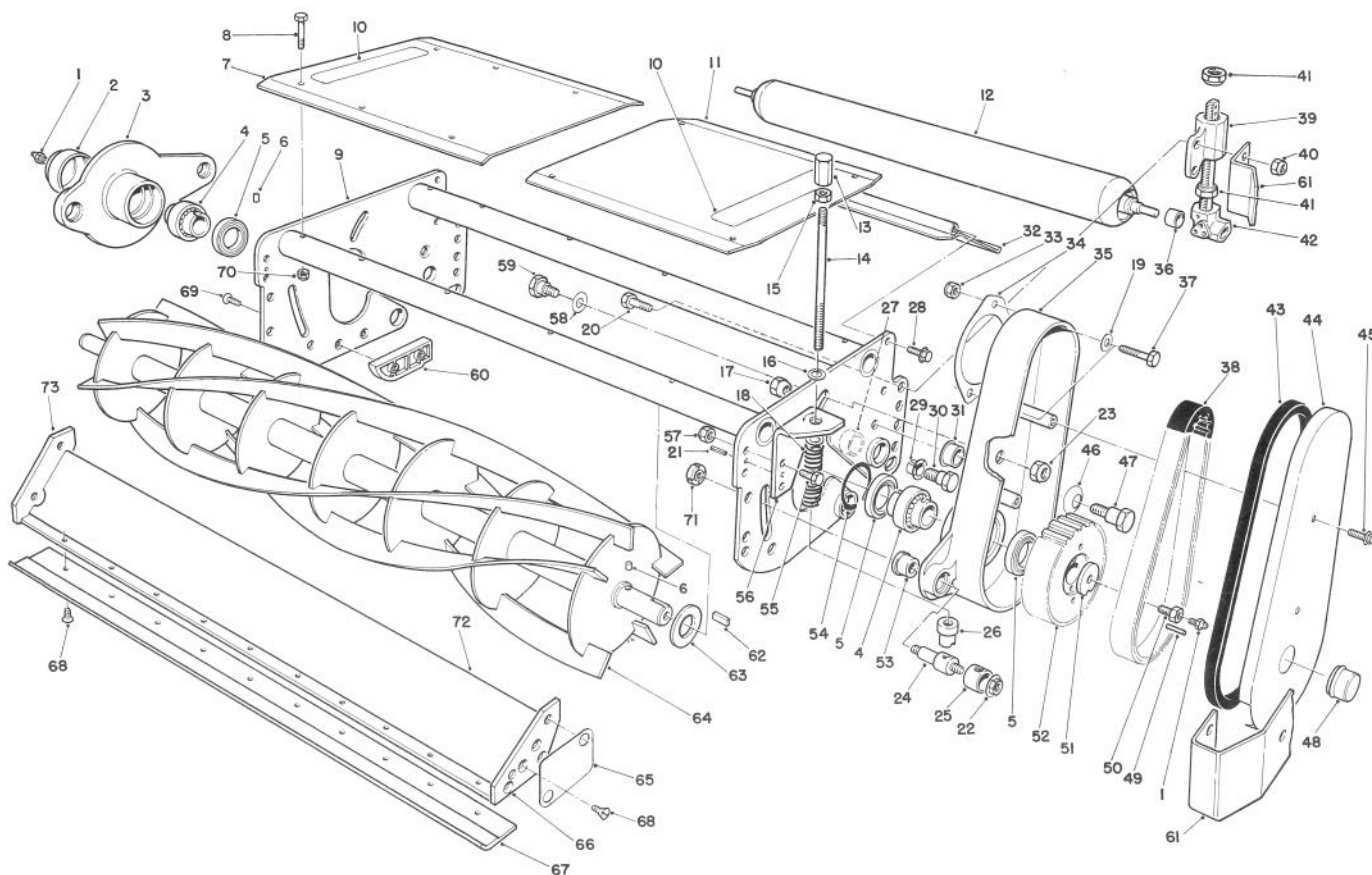


T-0179

CUTTING UNIT ASSEMBLY No. 2 (L.H.) 5 Blade Model No. 03752, 7 Blade Model No. 03754, & 11 Blade Model No. 03741

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting - Grease	2
2	59-5560	Cap - Dust	1
3	59-5550	Housing - Bearing	1
4	59-6140	Bearing	2
5	253-145	Seal	3
6	48-8880	Pin - Dowel	2
7	59-5830	Cover - Inboard	1
8	3234-34	Screw - Cap Hex. Hd.	8
9	14-0829	Frame (Incl. Ref. #27)	1
10	76-8760	Decal	2
11	59-5840	Cover - Outboard	1
12	59-5630	Assembly - Roller, Rear	1
13	72-0380	Knob - Hex.	2
14	72-0390	Rod - Bedknife Adj.	2
15	3218-5	Nut - Jam	2
16	257-5	Washer	4
17	242-50	Nut - Cone	2
18	72-0400	Spring	2
19	3256-25	Washer - Flat	1
20	325-7	Screw - Cap Hex. Hd.	4
21	32121-2	Pin - Roll	2
22	32128-15	Nut - Flange	2

Ref. No.	Part No.	Description	No. Used
23	3296-28	Nut - Lock	1
24	72-0440	Pin - Pivot	2
25	72-0420	Clamp - Tube	2
26	72-0410	Stand Off	2
27	62-6110	Assembly - Bushing	4
28	3234-12	Screw - Flange Hd.	2
29	256-292	Bushing - Nylon	4
30	84-6090	Bolt - Shoulder	4
31	256-252	Bushing - Flange	2
32	75-7680	Deflector - Grass	1
33	3296-48	Nut - Lock	2
34	48-9050	Plate - Shield, Drive	1
35	62-6480	Housing - Drive, L.H.	1
36	59-5780	Bushing - Roller	2
37	324-6	Screw - Cap Hex. Hd.	2
38	47-7160	Belt	1
39	59-5770	Housing - Roller, Adj.	2
40	3296-25	Nut - Lock	4
41	59-5820	Nut - Cone	4
42	84-6100	Assembly - Collar	2
43	47-7170	Gasket	1
44	75-7590	Cover - Drive Housing L.H.	1
45	3234-14	Screw - Flange Hd.	2

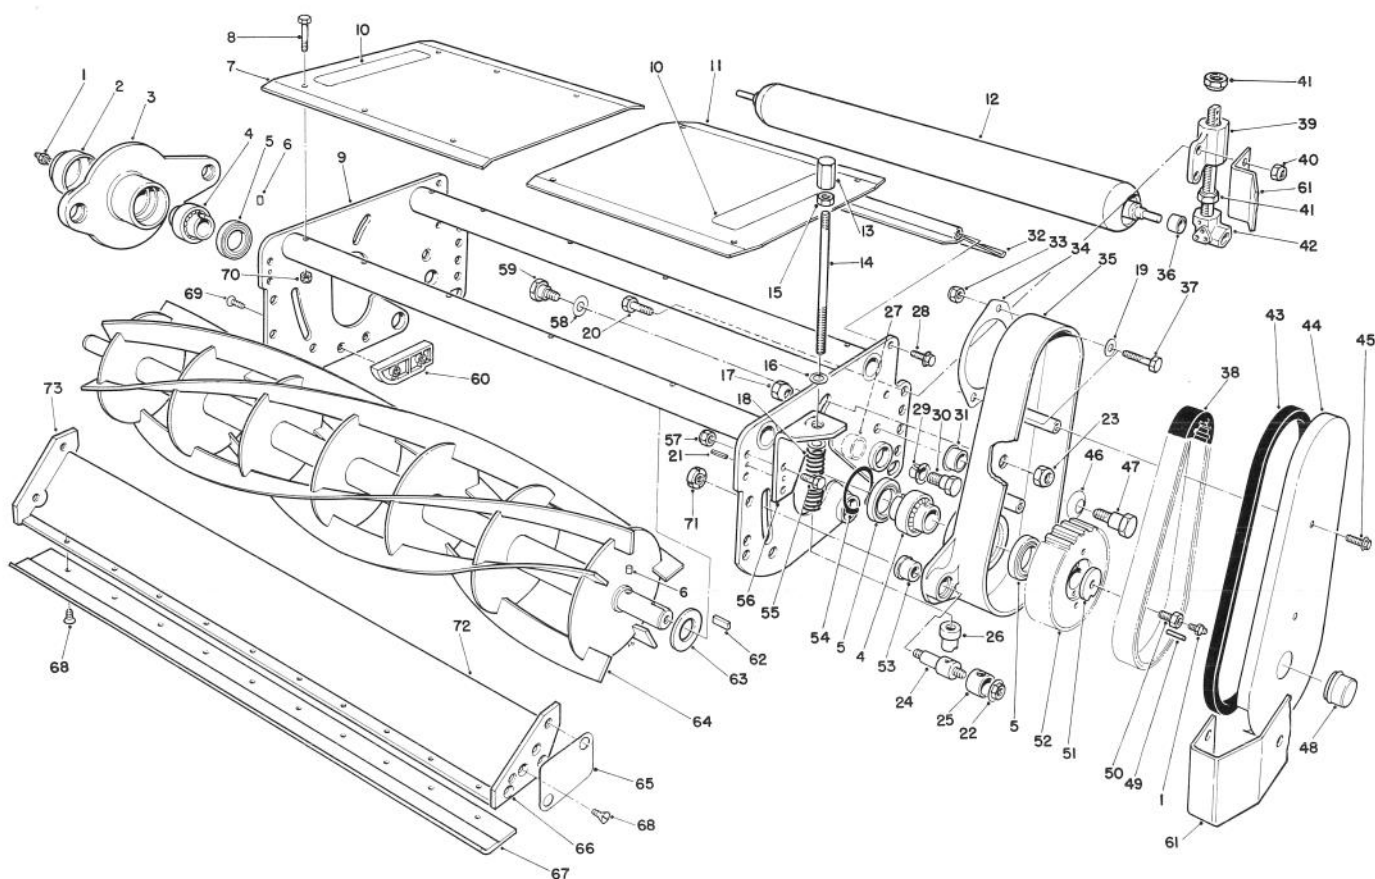 


T-0179

CUTTING UNIT ASSEMBLY No. 2 (L.H.) 5 Blade Model No. 03752, 7 Blade Model No. 03754, & 11 Blade Model No. 03741 (Continued)

Ref. No.	Part No.	Description	No. Used
46	3290-440	Washer - Belleville	2
47	48-9020	Bolt	2
48	59-7490	Plug - Grease Fitting	1
49	32121-50	Pin - Roll	1
50	59-6190	Screw - Cap, Reel	1
51	59-6150	Washer - Pulley	1
52	47-7140	Pulley - Driven	1
53	72-0430	Bushing - Flange	2
54	32151-71	Ring - Retaining	1
55	323-7	Bolt	4
56	72-0460	Bracket - L.H. Bedknife Adj.	1
*	72-0450	Bracket - R.H. Bedknife Adj.	1
57	3296-26	Nut - Lock	4
58	3256-39	Washer - Flat	1
59	62-6080	Bolt - Shoulder	1
60	62-6070	Block - Deflector (7 Blade)	2
*	77-4810	Block - Deflector (11 Blade)	2
61	72-0470	Guard	1
62	75-7570	Key - Rectangular	1
63	38-7330	Shield - Grass	2
64	13-8229	Reel (5-Blade)	1
*	13-8219	Reel (7-Blade)	1
*	14-0919	Reel (11 Blade)	1

Ref. No.	Part No.	Description	No. Used
65	76-3580	Spacer	2
66	76-3600	Plate - End, L.H. (11 Blade)	1
67	59-5890	Bedknife (7 Blade)	1
*	72-0480	Bedknife (5 Blade)	1
*	76-3620	Bedknife (11 Blade)	1
68	57-4910	Screw (5 & 7 Blade)	10
68	57-4910	Screw (11 Blade)	19
69	32108-101	Screw - Flat Head (7 & 11 Blade)	4
70	3296-8	Nut - Lock	8
71	82-9390	Nut - Special	2
72	59-5470	Bedbar - Welded Assembly (5 & 7 Blade)	1
*72	77-4340	Bedbar (11 Blade)	1
73	76-3610	Plate - End, R.H. (11 Blade)	1
74	32121-11	Pin - Roll	4
*	63-4330	Decal - 5 Blade	1
*	14-2099	Overhaul Kit (Incl. Ref. #4-6, 27, 29, 31, 53, 54, 62, 65 & 68)	1

 *Not Illustrated

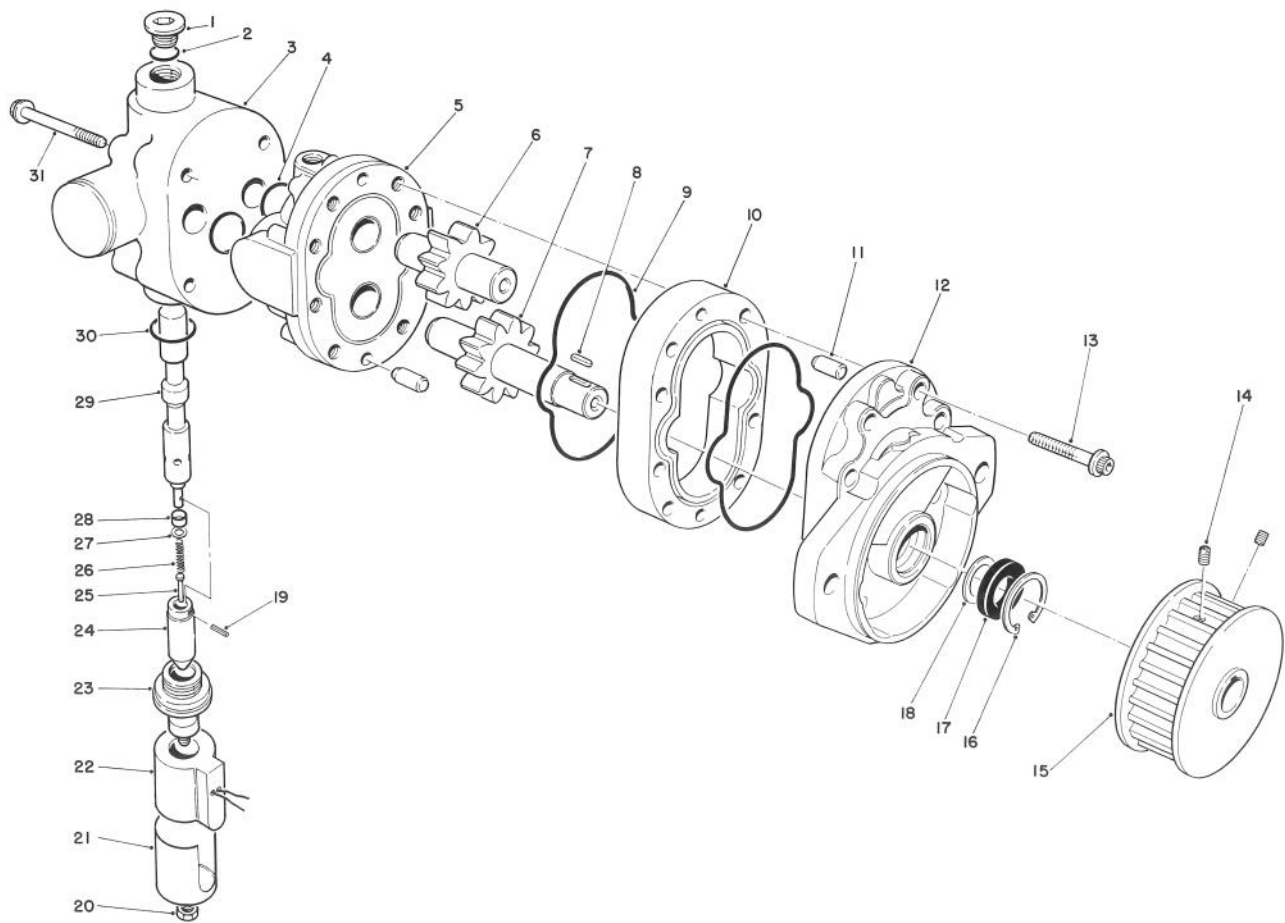


T-1075

REEL MOTOR

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	74-9280	Plug Assembly (Incl. Ref. #2)	1	19	74-9310	Pin - Roll	1
2		O-Ring	1	20	74-9300	Nut	1
3		Spool - Body	1	21	74-9270	Case - Solenoid	1
4	74-9290	O-Ring	2	22	74-9260	Solenoid Coil Assembly	1
5	74-9190	Backplate Assembly	1	23	74-9220	Core - Solenoid	1
6	74-9170	Idler Gear Assembly	1	24	74-9250	Plunger - Spool Solenoid	1
7	74-9210	Drive Gear Assembly	1	25	74-9240	Plunger	1
8	47-2380	Key	1	26	74-9140	Spring	1
9	56-6710	O-Ring	2	27	74-9330	Washer	1
10	74-9160	Body Assembly	1	28	74-9230	Spacer	1
11	42-2010	Pin - Dowel	2	29		Spool	1
12	66-5730	Front Plate Assembly	1	30	74-9380	Seal - O-Ring	1
13	74-9370	Screw - Cap Socket Hd.	8	31	42-3140	Screw - Hex. Washer Hd.	4
14	3246-17	Screw - Set	2	*	74-9410	Kit - Seal (Incl. Ref. #4, 9, 16 & 17)	1
15	47-7150	Pulley - Drive	1	*	74-3390	Reel Motor Assembly (Incl. Ref. #1-13 & 16-31)	3
16	59-8320	Ring - Retaining	1	*	74-9400	By-Pass Valve Assembly (Incl. Ref. #1-3 & 19-30)	1
17	66-5710	Seal - Shaft	1				
18	60-5890	Washer	1				

 *Not Illustrated

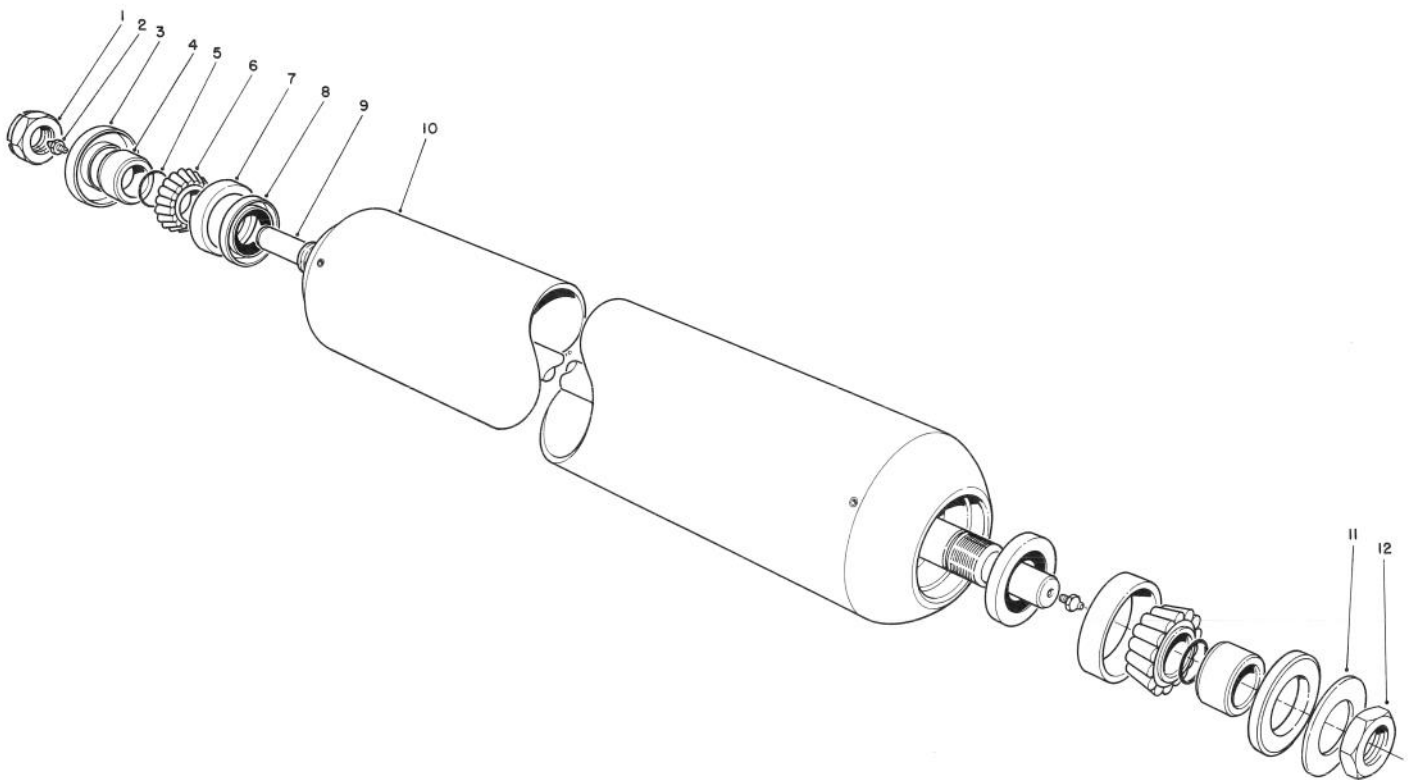


T-0180

REAR ROLLER NO. 59-5630

Ref. No.	Part No.	Description	No. Used
1	3296-15	Nut - Lock	1
2	302-5	Fitting - Grease	2
3	253-117	Seal - Grease	2
4	59-5690	Sleeve - Wear	2
5	237-54	Seal - O-Ring	2
6	254-78	Cone - Bearing	2

Ref. No.	Part No.	Description	No. Used
7	254-79	Cup - Bearing	2
8	253-122	Seal - Grease	2
9	66-5640	Shaft - Roller	1
10	59-5640	Tube & End Cap Assembly	1
11	66-5620	Washer - Thrust	2
12	3220-7	Nut - Jam	1

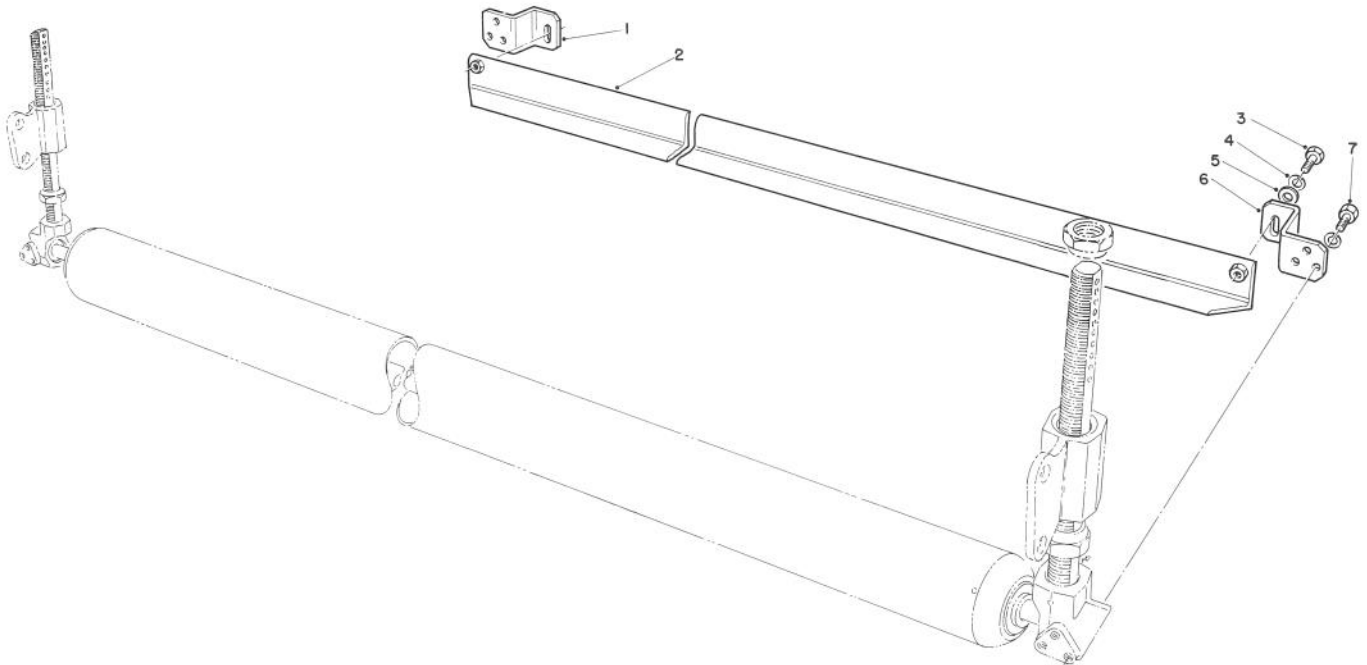 


T-0184

REAR ROLLER SCRAPER NO. 59-6090 (Optional)

Ref. No.	Part No.	Description	No. Used
1	59-6070	Bracket - Scraper R.H.	1
2	59-6090	Scraper Assembly (Incl. Ref. #1-7)	1
3	322-3	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
4	3253-4	Washer - Lock	8
5	3256-2	Washer - Flat	2
6	59-6080	Bracket - Scraper L.H.	1
7	322-2	Screw - Cap Hex. Hd.	6

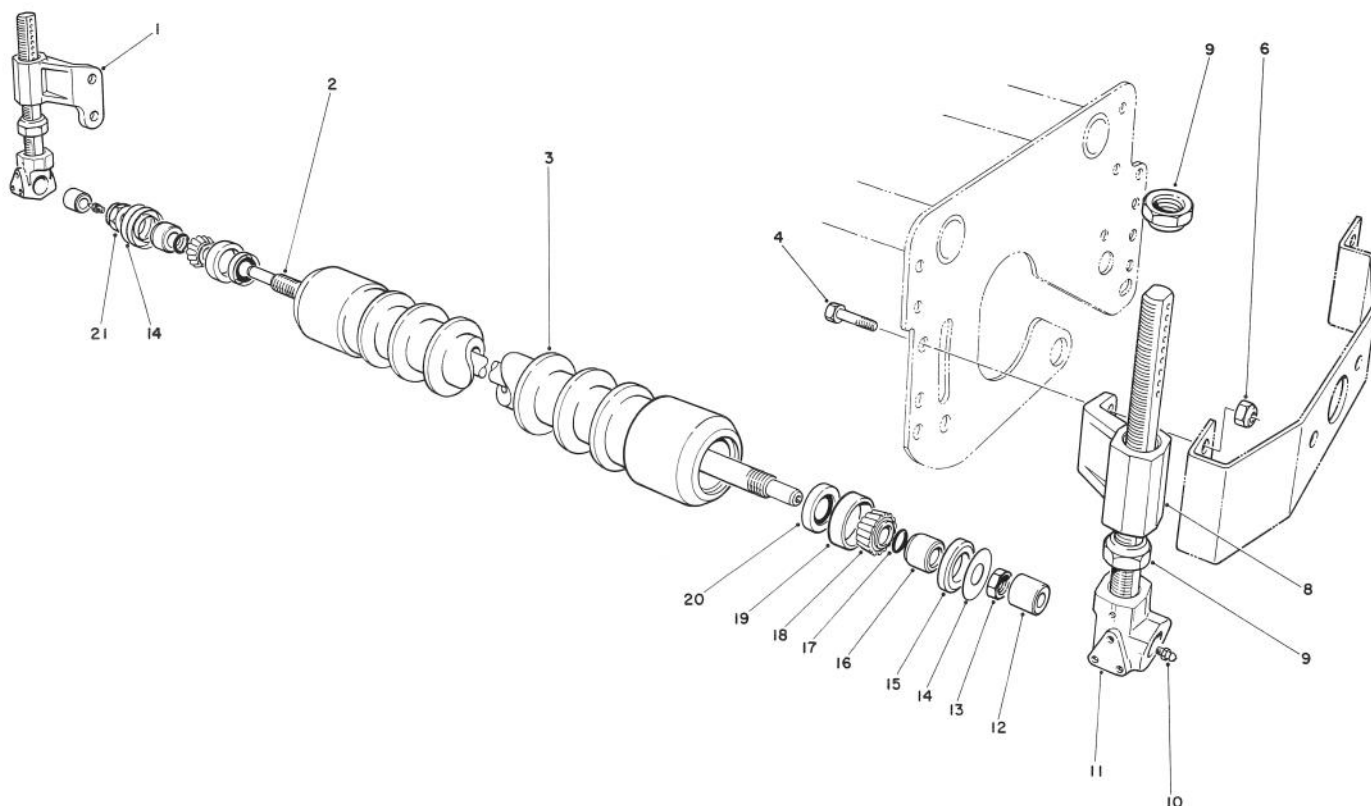 

T-0183A

WIEHLE ROLLER (Set of 3) MODEL NO. 03644 (Opt)


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1	62-5980	Housing - Roller Adj. R.H.	1	13	3220-7	Nut - Jam	1
‡*	84-6040	Housing - Roller Adj. R.H.	1	14	66-5620	Washer - Thrust	2
†2	66-5650	Shaft - Roller	1	15	253-165	Seal - Outer	2
‡*	84-6070	Shaft - Roller	1	16	59-5690	Sleeve - Wear	2
3		Roller - Wiehle	1	17	237-54	O-Ring	2
4	325-7	Screw - Cap Hex. Hd.	4	18	254-78	Cone - Bearing	2
6	3296-25	Nut - Lock	4	19	254-79	Cup - Bearing	2
7	59-5620	Guard	2	20	253-122	Seal - Grease	2
†8	62-5960	Housing - Roller Adj. L.H.	1	21	32127-47	Nut - Lock, Flex	1
‡*	84-6050	Housing - Roller Adj. L.H.	1	*†	62-6130	Assembly - Roller, 34.25" (Incl. Ref. #2, 3, 10 & 12-21)	1
9	59-5820	Nut - Cone	4	*‡	84-6080	Assembly - Roller, 33.25" (Incl. Ref. ##2, 3, 10 & 12-21)	1
10	302-5	Fitting - Grease	2				
†11	62-6010	Assembly - Collar	2				
‡*	84-6100	Assembly - Collar	2				
12	59-5780	Bushing	2				

*Not Illustrated

NOTE: Quantity listed is for 1 roller only.

†For use with 34.25" Long Roller Only.

 ‡For use with 33.25" Long Roller Only.

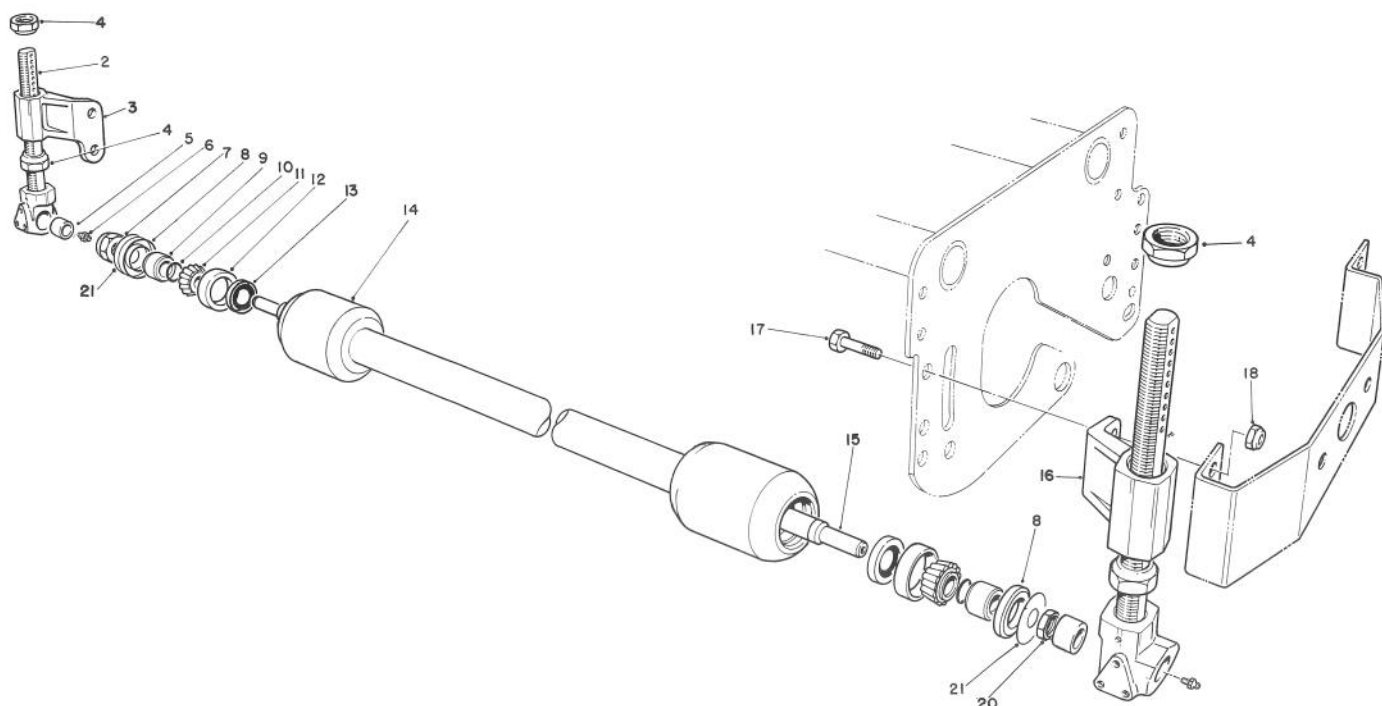

T-0182A

SECTIONAL ROLLER (Set of 3) MODEL NO. 03648 (Opt)


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†2	62-6010	Assembly - Collar	2	†15	66-5650	Shaft	1
‡*	84-6100	Assembly - Collar	2	‡*	84-6070	Shaft	1
†3	62-5980	Housing - Roller Adj. R.H.	1	†16	62-5960	Housing - Roller Adj. L.H.	1
‡*	84-6040	Housing - Roller Adj. R.H.	1	‡*	84-6050	Housing - Roller Adj. L.H.	1
4	59-5820	Nut - Cone	4	17	325-7	Screw - Cap Hex. Hd.	4
5	59-5780	Assembly - Bushing	2	18	3296-25	Nut - Lock	4
6	302-5	Fitting - Grease	2	19	59-5620	Guard	2
7	3296-15	Nut - Lock	1	20	3220-7	Nut - Jam	1
8	253-165	Seal - Grease	2	21	66-5620	Washer - Thrust	2
9	59-5690	Sleeve - Wear	2	*†	62-6180	Assembly - Roller, 34.25" (Incl. Ref. #6-15 & 20-21)	1
10	237-54	O-Ring	2	*‡	84-6150	Assembly - Roller, 33.25" (Incl. Ref. #6-15 & 20-21)	1
11	254-78	Cone - Bearing	2				
12	254-79	Cup - Bearing	2				
13	253-122	Seal - Grease	2				
†14	62-6150	Roller, 34.25"	1				
‡*	84-6140	Roller, 33.25"	1				

*Not Illustrated

NOTE: Quantity listed is for 1 roller only.

†For use with 34.25" Long Roller Only.

 ‡For use with 33.25" Long Roller Only.

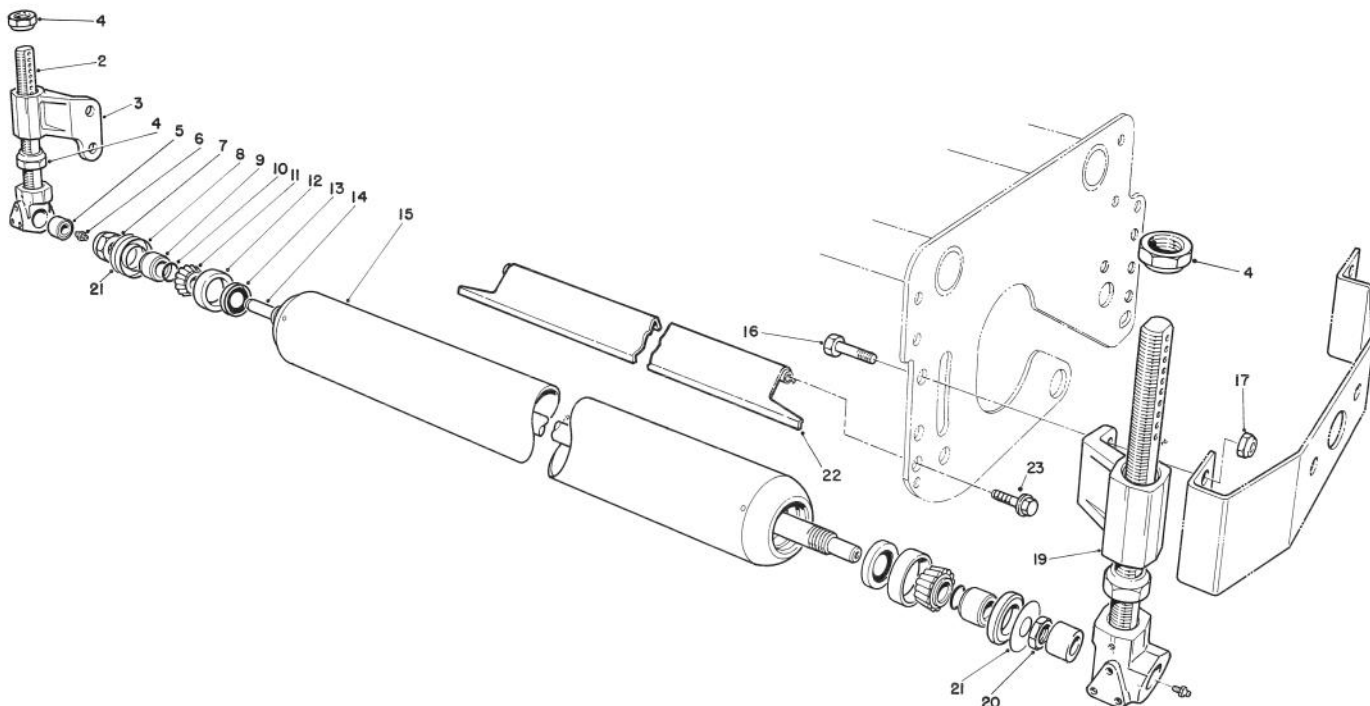

T-0181

FULL ROLLER (Set of 3) MODEL NO. 03646 (Optional)

Ref. No.	Part No.	Description	No. Used
†2	62-6010	Assembly - Collar	2
‡*	84-6100	Assembly - Collar	2
†3	62-5980	Housing - Roller Adj. R.H.	1
‡*	84-6040	Housing - Roller Adj. R.H.	1
4	59-5820	Nut - Cone	4
5	59-5780	Assembly - Bushing	2
6	302-5	Fitting - Grease	2
7	3296-15	Nut - Lock	1
8	253-165	Seal - Grease	2
9	59-5690	Sleeve - Wear	2
10	237-54	O-Ring	2
11	254-78	Cone - Bearing	2
12	254-79	Cup - Bearing	2
13	253-122	Seal - Grease	2
†14	66-5650	Shaft - Roller	1
‡*	84-6070	Shaft - Roller	1
†15	62-6190	Roller - Tube, 34.25"	1
‡*	84-6170	Roller - Tube, 33.25"	1
16	325-7	Screw - Cap Hex. Hd.	4
17	3296-25	Nut - Lock	4
†19	62-5960	Housing - Roller Adj. L.H.	1
‡*	84-6050	Housing - Roller Adj. L.H.	1
20	3220-7	Nut - Jam	1
21	66-5620	Washer - Thrust	2
*†	62-6200	Assembly - Roller, 34.25"	1
*‡	84-6180	Assembly - Roller, 33.25"	1

FRONT ROLLER SCRAPER NO. 62-6220 (Optional)


Ref. No.	Part No.	Description	No. Used
22	62-6220	Scraper Assembly (Incl. Ref. #23)	1
23	3234-11	Screw - Hex. Washer Hd.	2

*Not Illustrated

NOTE: Quantity listed is for 1 roller only.

†For use with 34.25" Long Roller Only.

 ‡For use with 33.25" Long Roller Only.

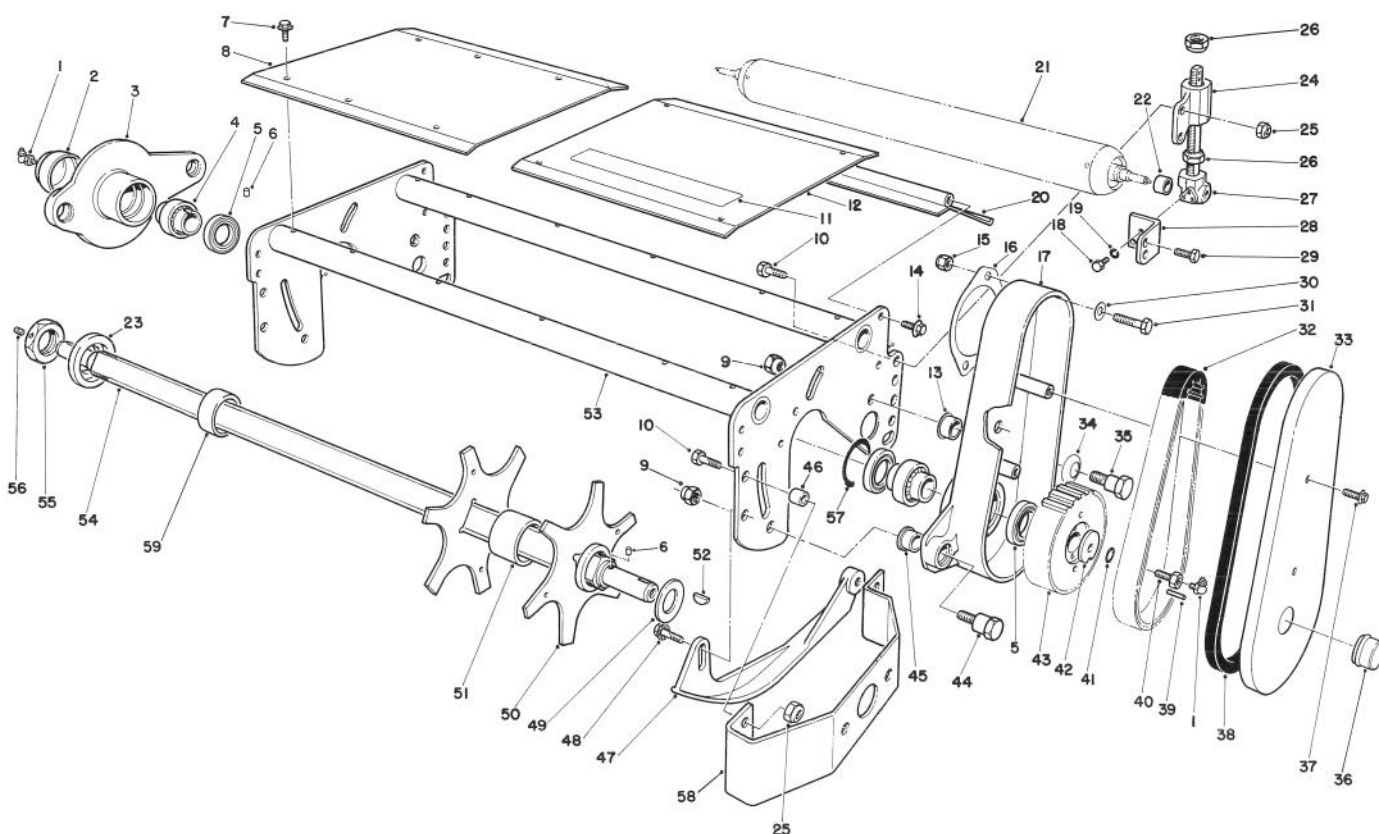

T-0185


DETHATCHER REEL ASSEMBLY (Optional) **(No. 1 (Center) & 3 (R.H.) Model No. 03732)** **(No. 2 (L.H.) Model No. 03730)**

Ref. No.	Part No.	Description	No. Used
1	302-40	Fitting - Grease 90°	2
2	59-5560	Cap - Dust	1
3	59-5550	Housing - Bearing	1
4	59-6140	Bearing	2
5	253-145	Seal	3
6	48-8880	Pin - Dowel	2
7	11-9760	Screw	8
8	59-5830	Cover - Inboard	1
9	3296-28	Nut - Lock	4
10	325-7	Bolt	6
11	59-7790	Decal	1
12	59-5840	Cover - Outboard	1
13	256-252	Bushing - Flange	2
14	3234-12	Screw - Flange	2
15	3296-48	Nut - Lock	2
16	48-9050	Plate - Shield, Drive	1
17	62-6480	Housing - Drive, L.H.	1
*	62-6470	Housing - Drive, R.H.	1
18	322-2	Bolt	6
19	3253-4	Washer - Lock	6
20	52-9660	Deflector - Grass, L.H.	1
*	51-1600	Deflector - Grass, R.H.	1
21	59-5630	Assembly - Roller, Rear	1

Ref. No.	Part No.	Description	No. Used
22	59-5780	Assembly - Bushing	2
‡23	82-3060	Spacer - Adjustment	1
24	59-5770	Housing - Roller, Adjuster	2
25	3296-25	Nut - Lock	8
26	59-5820	Nut - Cone	4
27	84-6100	Assembly - Collar	2
28	59-6010	Skid Bracket - L.H.	1
*	59-6000	Skid Bracket - R.H.	1
29	325-5	Screw - Cap Hex. Hd.	2
30	3256-25	Washer - Flat	1
31	324-6	Screw - Cap Hex. Hd.	2
32	47-7160	Belt	1
33	48-9081	Cover - Drive Housing L.H.	1
*	48-9071	Cover - Drive Housing R.H.	1
34	3290-440	Washer - Belleville	2
35	48-9020	Bolt - Shoulder	2
36	59-7490	Plug - Grease Fitting	1
37	3234-14	Screw - Flange	2
38	47-7170	Gasket	1
39	32121-50	Pin - Roll	1
40	59-6190	Screw - Cap Hex. Hd.	1
41	3254-4	Washer - Lock	1
42	59-6150	Washer - Pulley	1

*Not Illustrated

 ‡For use on 20 blade units only.

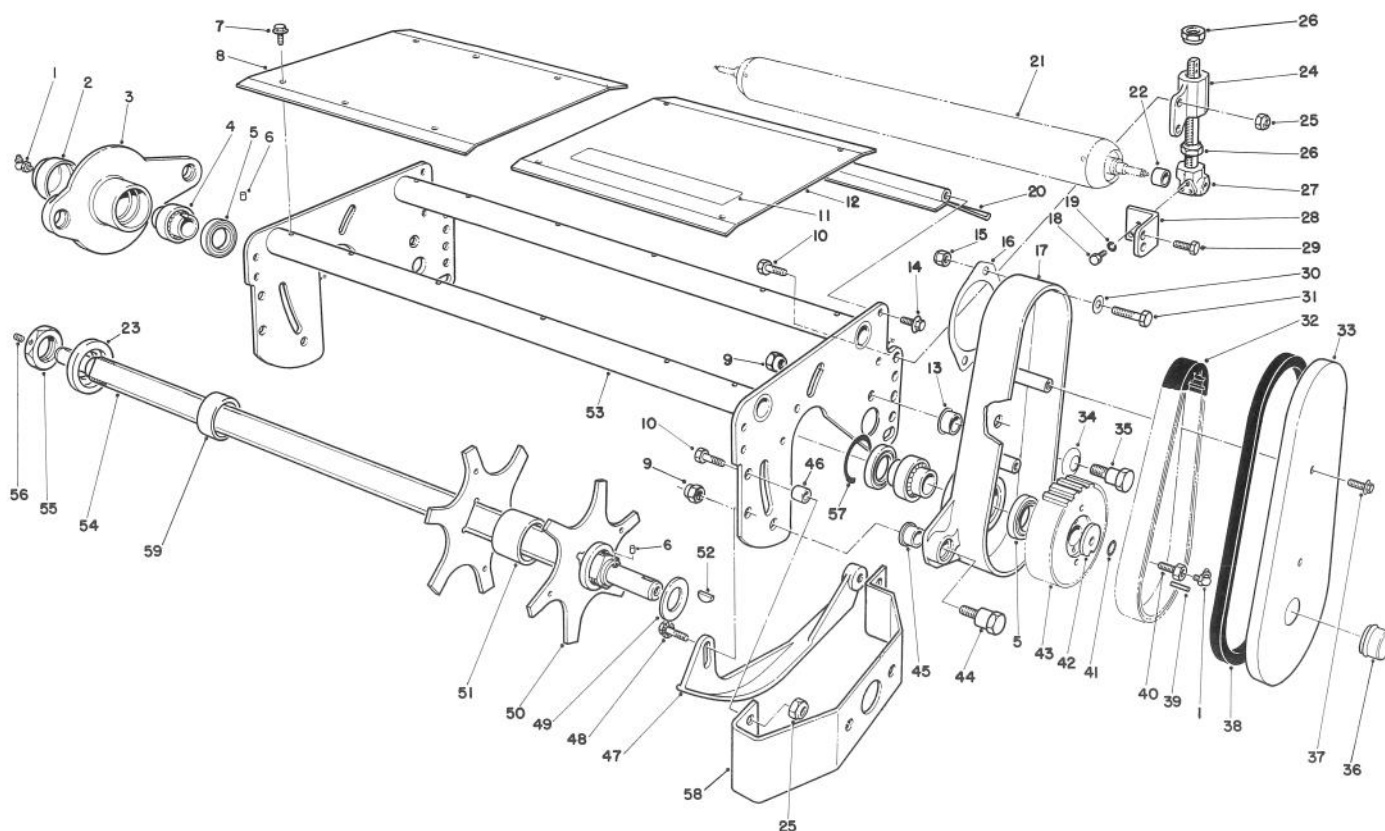

T-0185

DETHATCHER REEL ASSEMBLY (Optional) (No. 1 (Center) & 3 (R.H.) Model No. 03732) (No. 2 (L.H.) Model No. 03730) (Continued)


Ref. No.	Part No.	Description	No. Used
43	47-7140	Pulley - Driven	1
44	59-6340	Bolt - Shoulder	2
45	256-113	Bushing - Flange	2
46	59-6030	Spacer	4
47	84-0810	Skid - L.H.	1
*	84-0820	Skid - R.H.	1
48	3234-27	Screw - Flange	2
49	38-7330	Shield - Grass	2
†50	59-6280	Blade	12
‡*	82-3070	Blade	20
†51	59-6320	Spacer	11

Ref. No.	Part No.	Description	No. Used
‡*	59-6321	Spacer	19
52	3257-3	Key - Woodruff	1
53	59-6250	Frame	1
54	59-6290	Assembly - Shaft & Stop	1
55	59-6330	Nut	1
56	3246-17	Screw - Set	1
57	32151-71	Ring - Retaining	1
58	72-0470	Guard	2
†59	59-6322	Spacer	1
*	325-9	Screw - Cap Hex. Hd.	2
*	84-0880	Spacer - Skid	2

*Not Illustrated

†For use on 12 blade units only.

 ‡For use on 20 blade units only.

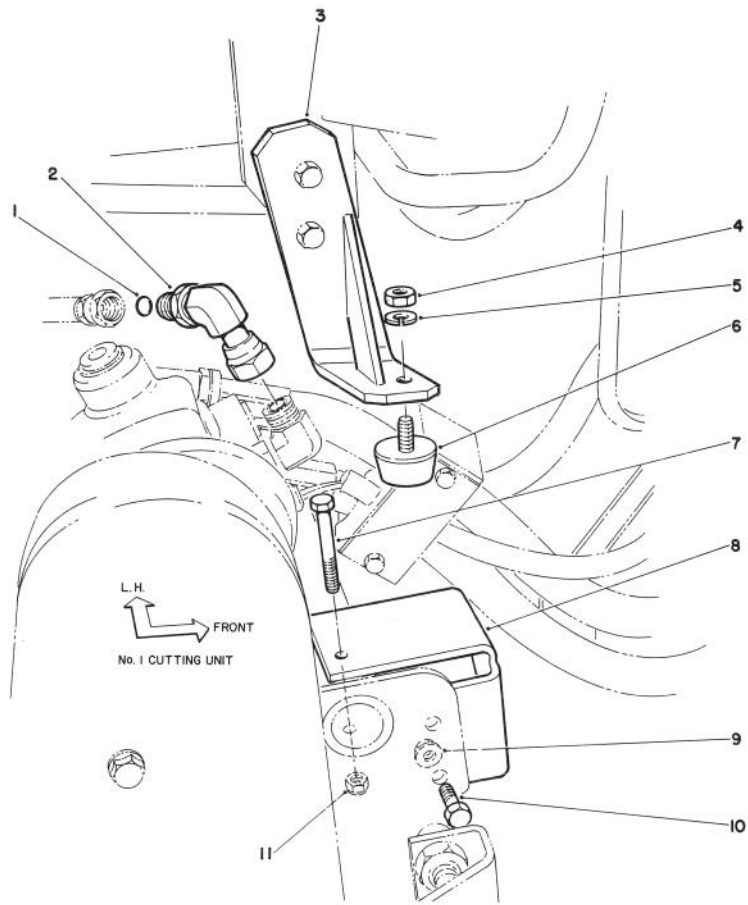


T-1172

DETHATCHER TIPPER BRACKET KIT NO. 77-4220 (Optional)

Ref. No.	Part No.	Description	No. Used
1	237-22	O-Ring	1
2	340-159	Fitting - Hydraulic 90° (Incl. Ref. #1)	1
3	77-3910	Bracket W.A. - Bumper	1
4	48-7930	Nut - Lock	1
5	48-9570	Washer - Lock	1

Ref. No.	Part No.	Description	No. Used
6	48-3280	Bumper	1
7	321-11	Screw - Cap, Hex. Hd.	1
8	77-3940	Bracket - Dethatcher	1
9	3290-357	Nut - Flange	2
10	323-6	Screw - Cap, Hex. Hd.	2
11	3296-42	Nut - Lock	1

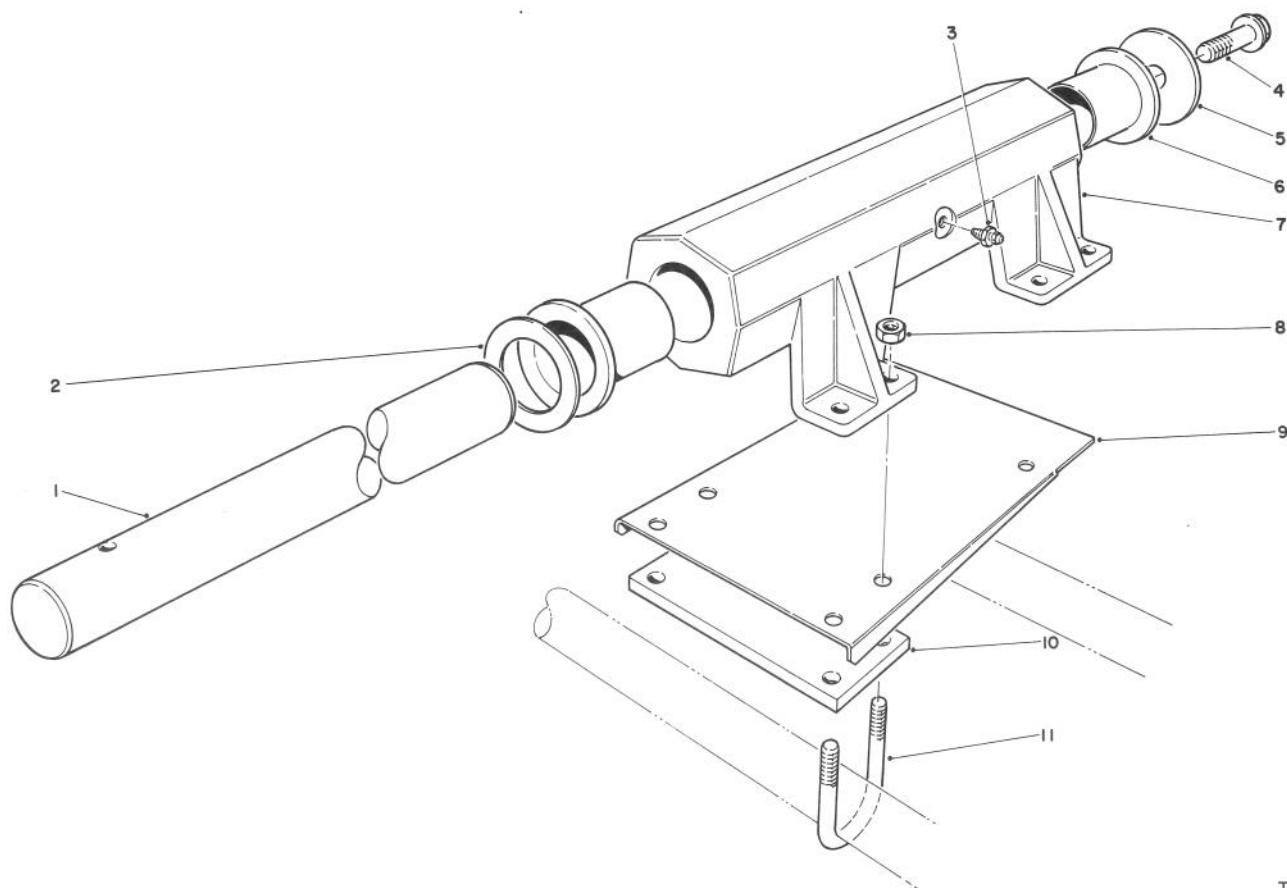 


T-1118

FIXED HEAD KIT MODEL NO. 03642 (Optional) (Cutting Unit No. 1 (Center))

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	75-7720	Shaft	1	7	75-7710	Barrel - Pivot	1
2	29-2770	Washer - Thrust	1	8	3296-47	Nut - Lock	8
3	302-2	Fitting - Grease	1	9	75-7750	Plate - Fixed Head	1
4	3234-32	Screw - Hex. Washer Hd.	1	†10	75-7740	Spacer	1
5	75-7730	Washer - Thrust	1	11	75-7770	Bolt - U	4
6	68-6480	Bushing - Flange	2				

 †Not required when using Dethatcher Reel Units Model No. 03730.

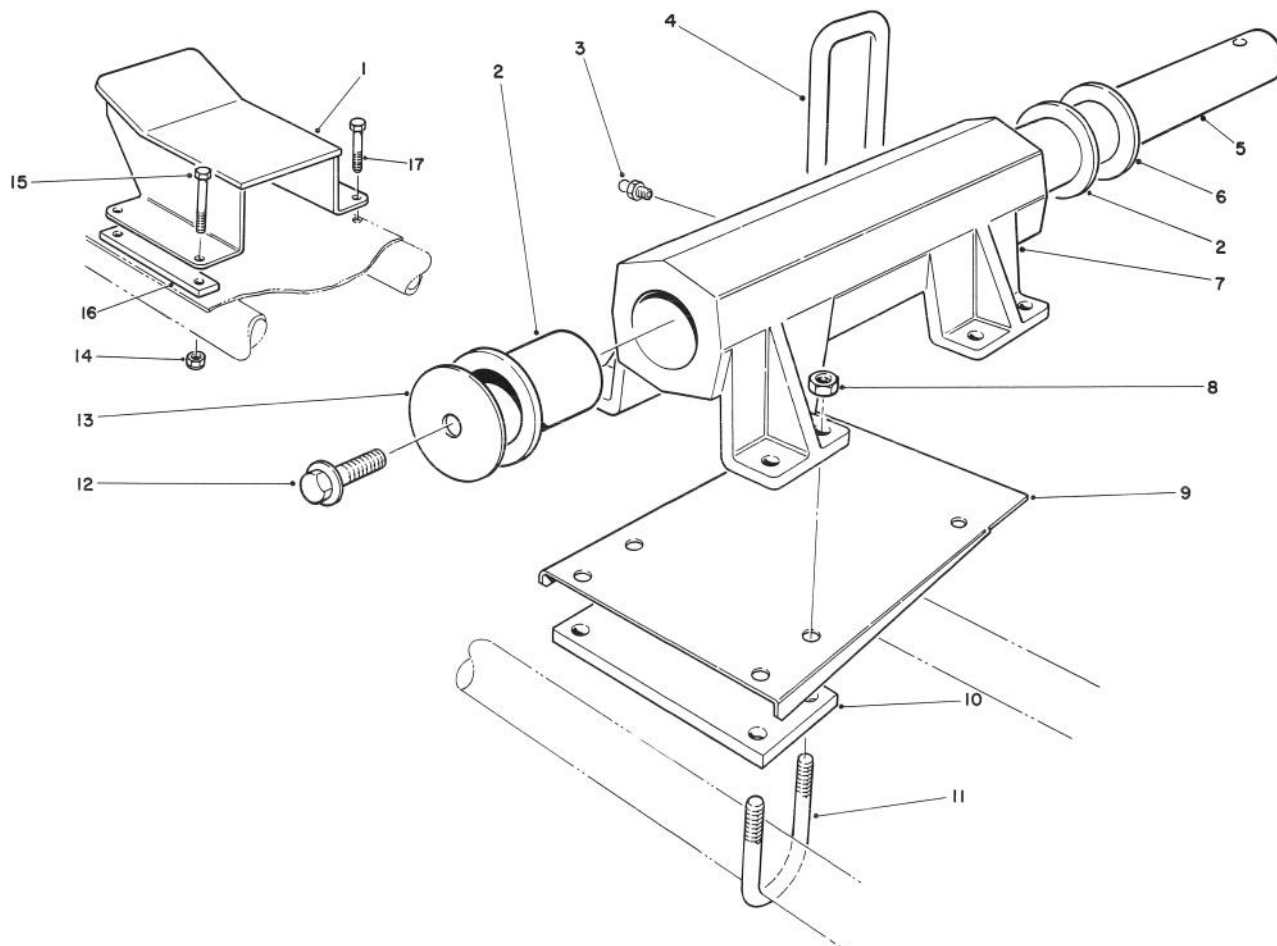


T-1119

FIXED HEAD KIT MODEL NO. 03642 (Optional) (Cutting Unit No. 2 (L.H.) & 3 (R.H.))

Ref. No.	Part No.	Description	No. Used
1	76-8390	Tipper - Reel	1
2	68-6480	Bushing - Flange	2
3	302-2	Fitting - Grease	1
4	76-6280	Bracket - Hose	2
5	75-7720	Shaft	1
6	29-2770	Washer - Thrust	1
7	75-7710	Barrel - Pivot	1
8	3296-47	Nut - Lock	8
9	75-7750	Plate - Fixed Head	1

Ref. No.	Part No.	Description	No. Used
†10	75-7740	Spacer	1
11	75-7770	Bolt - U	4
12	3234-32	Screw - Cap Hex. Hd.	1
13	75-7730	Washer - Thrust	1
14	3296-8	Nut - Lock	4
15	321-15	Screw - Cap Hex. Hd.	2
16	76-9310	Spacer	1
17	321-18	Screw - Cap Hex. Hd.	2

 
†Not required when using Dethatcher Reel Units Model No. 03730 & 03732.

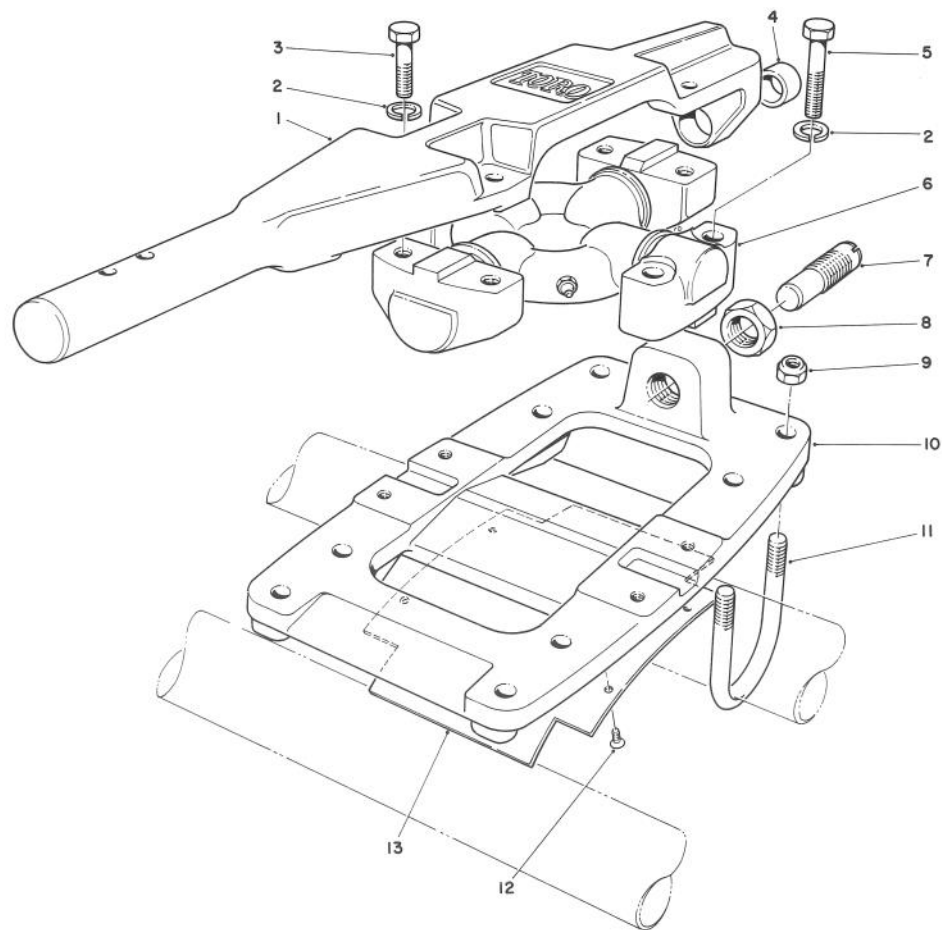

T-1120

CUTTING UNIT FLOTATION KIT MODEL No. 03640 (Optional) (Cutting Unit No. 1 (Center))

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	59-5880	Arm - Pivot	1	8	3218-7	Nut - Jam	1
2	3253-21	Washer - Lock	8	9	3296-47	Nut - Lock	8
3	3211-4	Screw - Cap Hex. Hd.	4	10	75-7660	Base - Pivot	1
4	256-311	Bushing - Steel Back	1	11	75-7770	Bolt - U	4
5	3211-8	Screw - Cap Hex. Hd.	4	12	32144-107	Screw	4
6	59-5910	Cross & Bearing	1	13	75-8100	Cover	1
7	59-5940	Pin - Lockout	1				

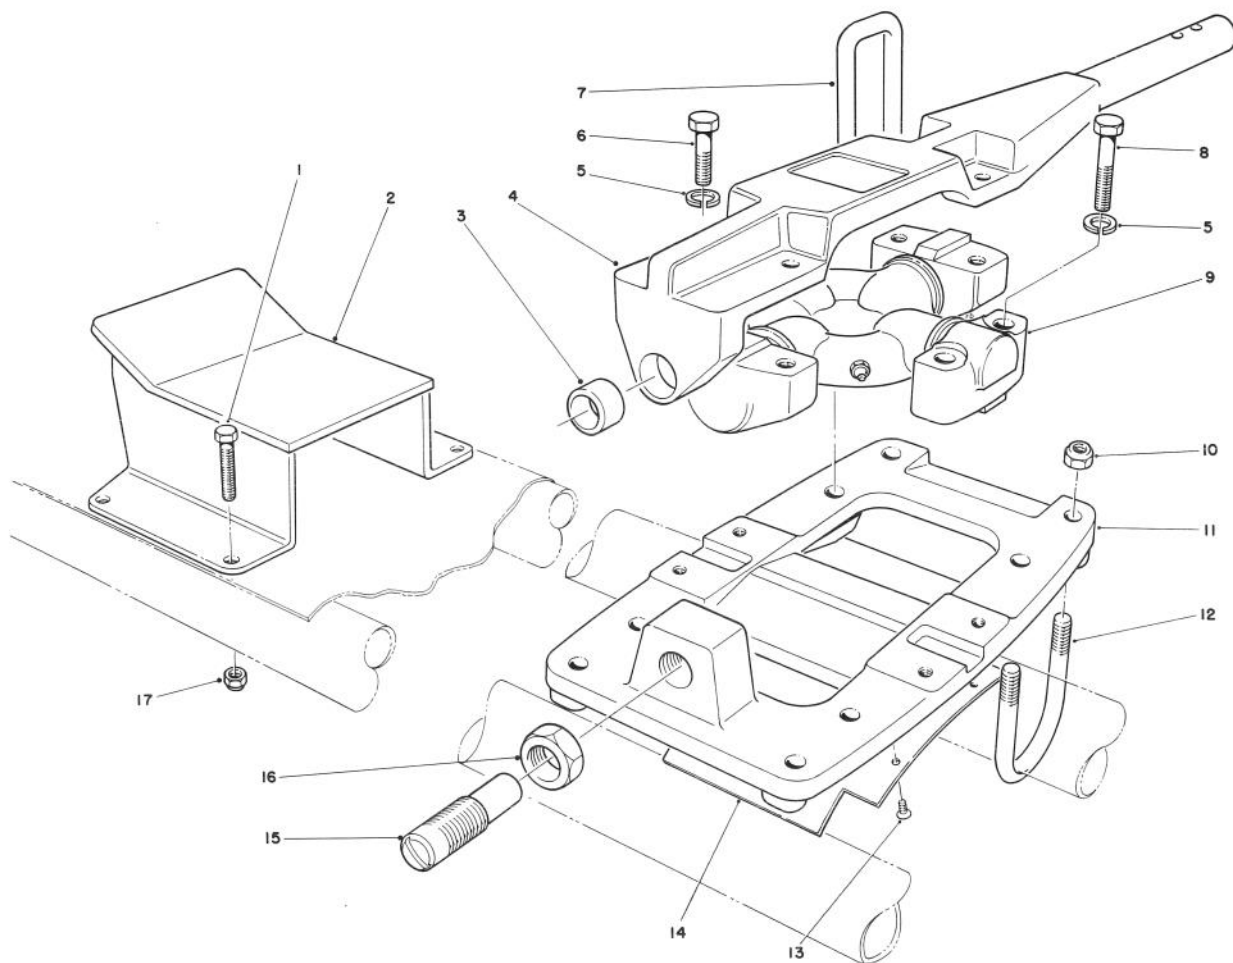 


T-1121

CUTTING UNIT FLOTATION KIT MODEL No. 03640 (Optional) (Cutting Unit No. 2 (L.H.) & 3 (R.H.))

Ref. No.	Part No.	Description	No. Used
1	321-18	Screw - Cap Hex. Hd.	4
2	76-8390	Tipper - Reel	1
3	256-311	Bushing - Steel Back	1
4	59-5880	Arm - Pivot	1
5	3253-21	Washer - Lock	8
6	3211-4	Screw - Cap Hex. Hd.	4
7	76-6280	Bracket - Hose	1
8	3211-8	Screw - Cap Hex. Hd.	4
9	59-5910	Cross & Bearing	1

Ref. No.	Part No.	Description	No. Used
10	3296-47	Nut - Lock	8
11	75-7660	Base - Pivot	1
12	75-7770	Bolt - U	4
13	32144-107	Screw	4
14	75-8100	Cover	1
15	59-5940	Pin - Lockout	1
16	3218-7	Nut - Jam	1
17	3296-8	Nut - Lock	4

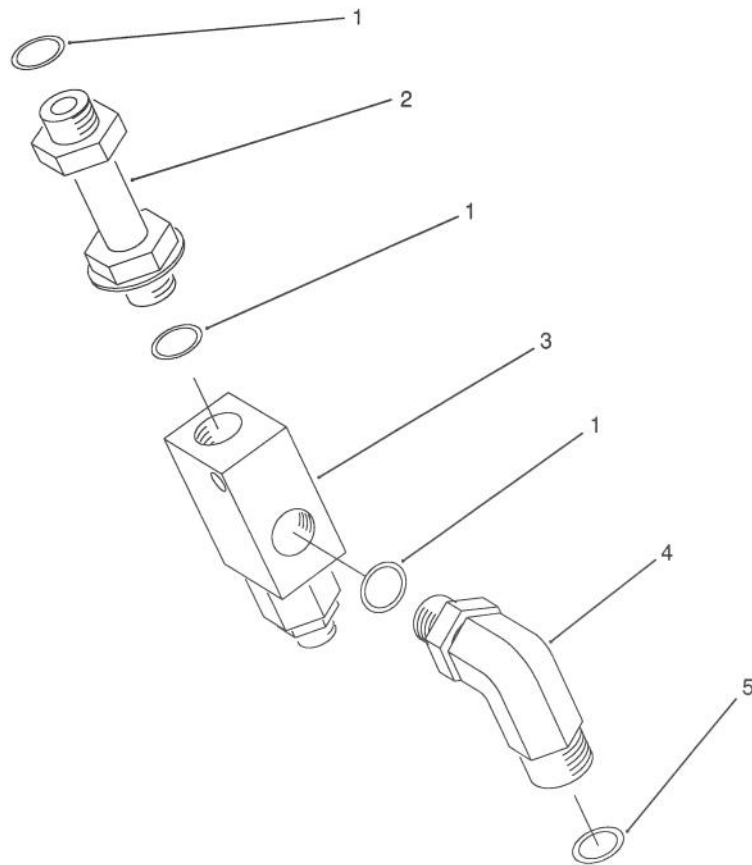 


T-1310

ADJUSTABLE COUNTERBALANCE KIT NO. 82-4940 (Optional)

Ref. No.	Part No.	Description	No. Used
1	237-79	Seal - O-Ring	3
2	74-5910	Fitting - Hydraulic Union (Incl. Ref. #1)	1
3	74-5640	Valve - Relief	1

Ref. No.	Part No.	Description	No. Used
4	340-153	Fitting - Hydraulic 90° (Incl. Ref. #1 & 5)	1
5	237-65	Seal - O-Ring	1

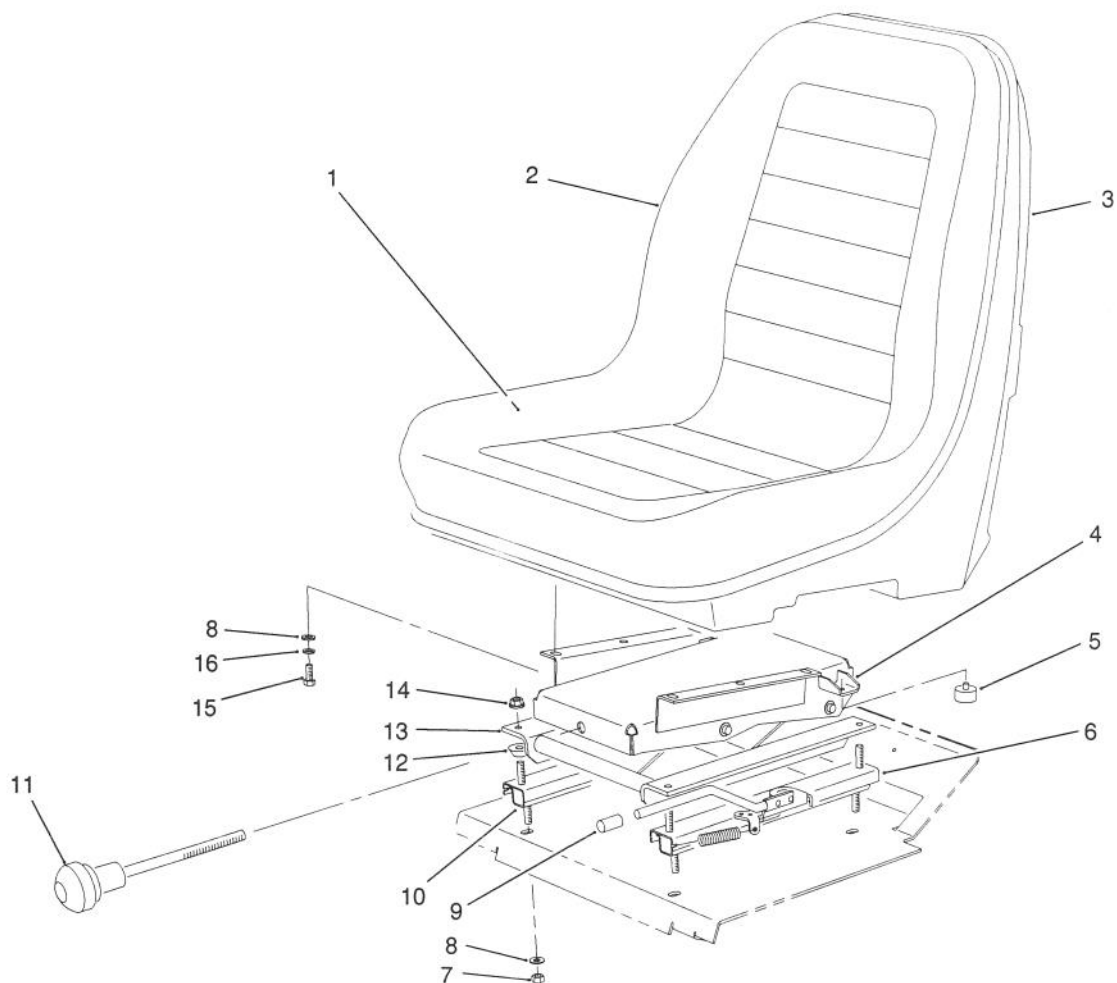 


T-1131

DELUXE SEAT ASSEMBLY MODEL NO. 30772 (Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	67-9550	Cushion - Seat	1	11	76-1960	Knob - Seat Adjustment	1
2	66-5400	Seat Assembly (incl. Ref. #1 & 3)	1	12	66-9290	Spacer - Suspension	4
3	67-9560	Bucket - Seat	1	13	66-8610	Suspension - Seat	1
4	66-8600	Plate - Seat Base	1	*	66-8580	Bushing - Suspension	4
5	66-8520	Bumper - Seat	2	*	66-8550	Rod - Pivot	2
6	66-8510	Adjuster & Handle Assembly	1	*	66-8560	Nut - Push	4
7	3296-29	Nut - Lock	4	*	66-8570	Spring - Suspension	2
8	3256-2	Washer - Flat	8	*	66-8540	Hanger - Spring	1
9	75-3570	Tip - Handle	1	14	32128-25	Nut - Flange Lock	4
10	66-8530	Adjuster Assembly	1	15	322-3	Screw - Cap Hex. Hd.	4
				16	3253-4	Washer - Lock	4

 *Not Illustrated

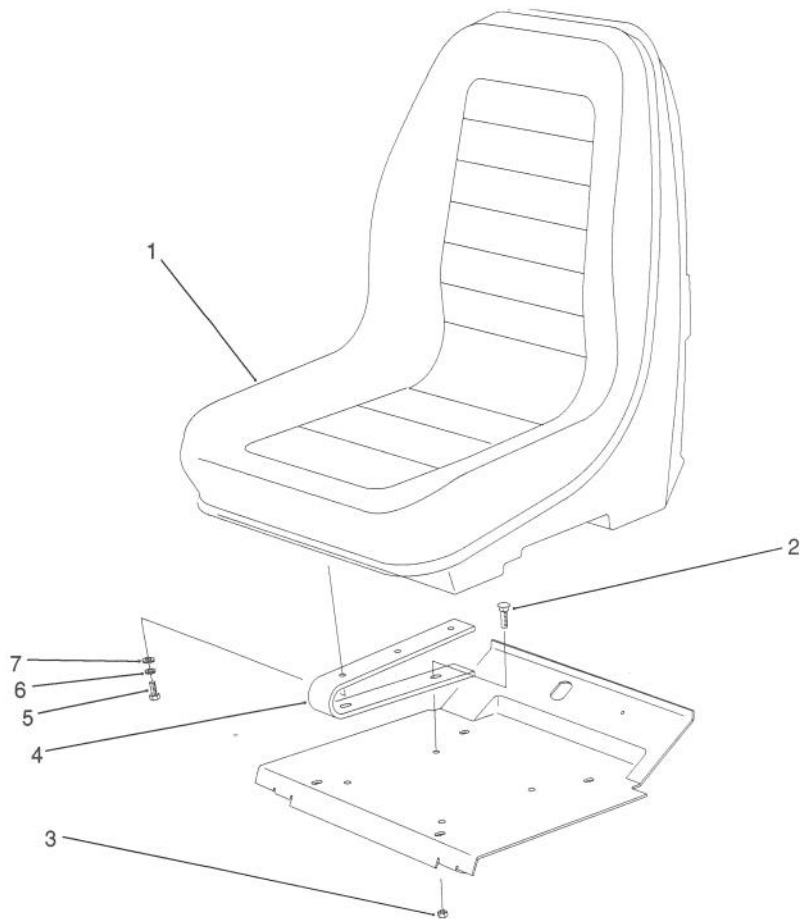


T-1312

LOW SEAT ASSEMBLY (Optional)

Ref. No.	Part No.	Description	No. Used
1	66-5400	Seat Assembly	1
2	3230-16	Bolt - Carriage	4
3	3296-29	Nut - Lock	4
4	68-3280	Spring - Seat	2

Ref. No.	Part No.	Description	No. Used
5	322-4	Screw - Cap Hex. Hd.	4
6	3253-4	Washer - Lock	4
7	3256-2	Washer	4

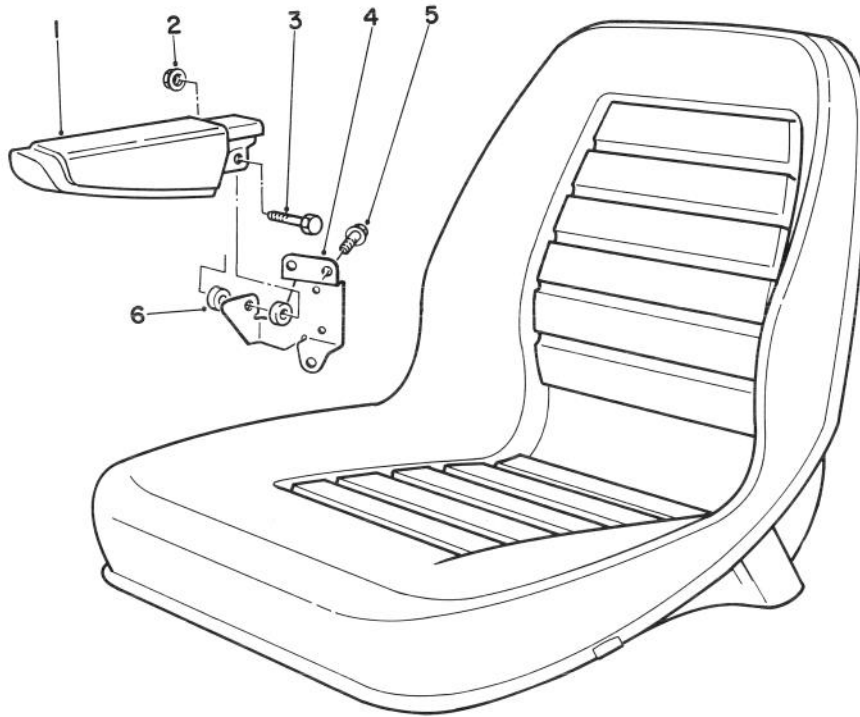 


T-0634

ARMREST ASSEMBLY MODEL NO. 30707 (Optional)

Ref. No.	Part No.	Description	No. Used
1	69-1180	Armrest	2
2	32128-19	Nut - Flange Lock	2
3	323-9	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
4	69-0770	Bracket - Armrest R.H.	1
*	69-0760	Bracket - Armrest L.H.	1
5	3234-14	Screw - Hex. Flange Hd.	6
6	69-1260	Spacer	4

 *Not Illustrated

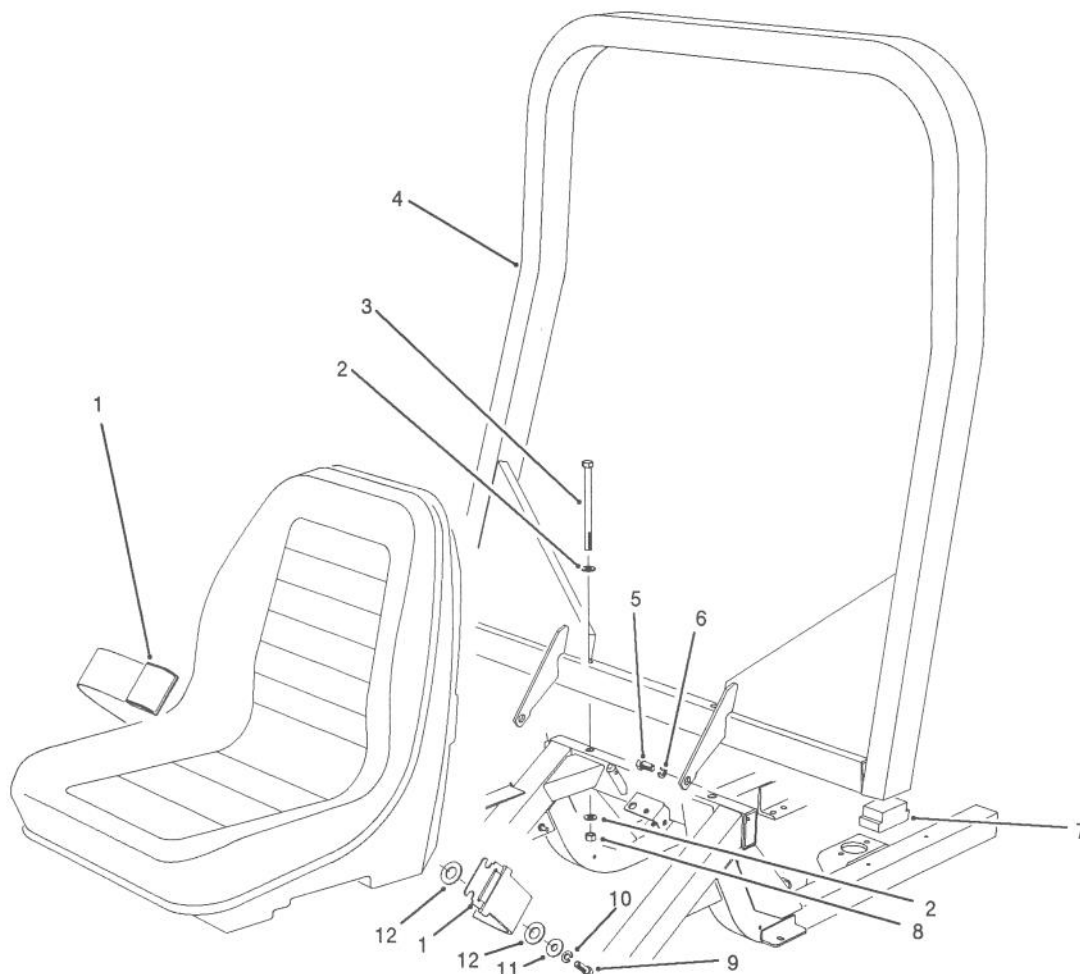


T-1116

R.O.P.S. ASSEMBLY (Standard For Model No. 03601) (Optional For Model No. 03600)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	21-4191	Seat Belt Assembly	1	8	3296-25	Nut - Lock	2
2	3256-26	Washer - Flat	4	9	3212-5	Screw - Cap Hex. Hd.	2
3	325-33	Screw - Cap Hex. Hd.	2	10	3253-6	Washer - Lock	2
4	76-9370	Bar - R.O.P.S.	1	11	3256-5	Washer - Flat	2
5	325-2	Screw - Cap Hex. Hd.	2	12	3256-28	Washer - Flat	2
6	3253-7	Washer - Lock	2	*		Canopy Assembly (Optional)	1
7	82-5370	Foam - R.O.P.S. Bar	2				

*Not Illustrated

 NOTE: When purchasing Canopy assembly or R.O.P.S. assembly in its entirety, order direct from Custom Products PO Box 718 Litchfield, MN 55355

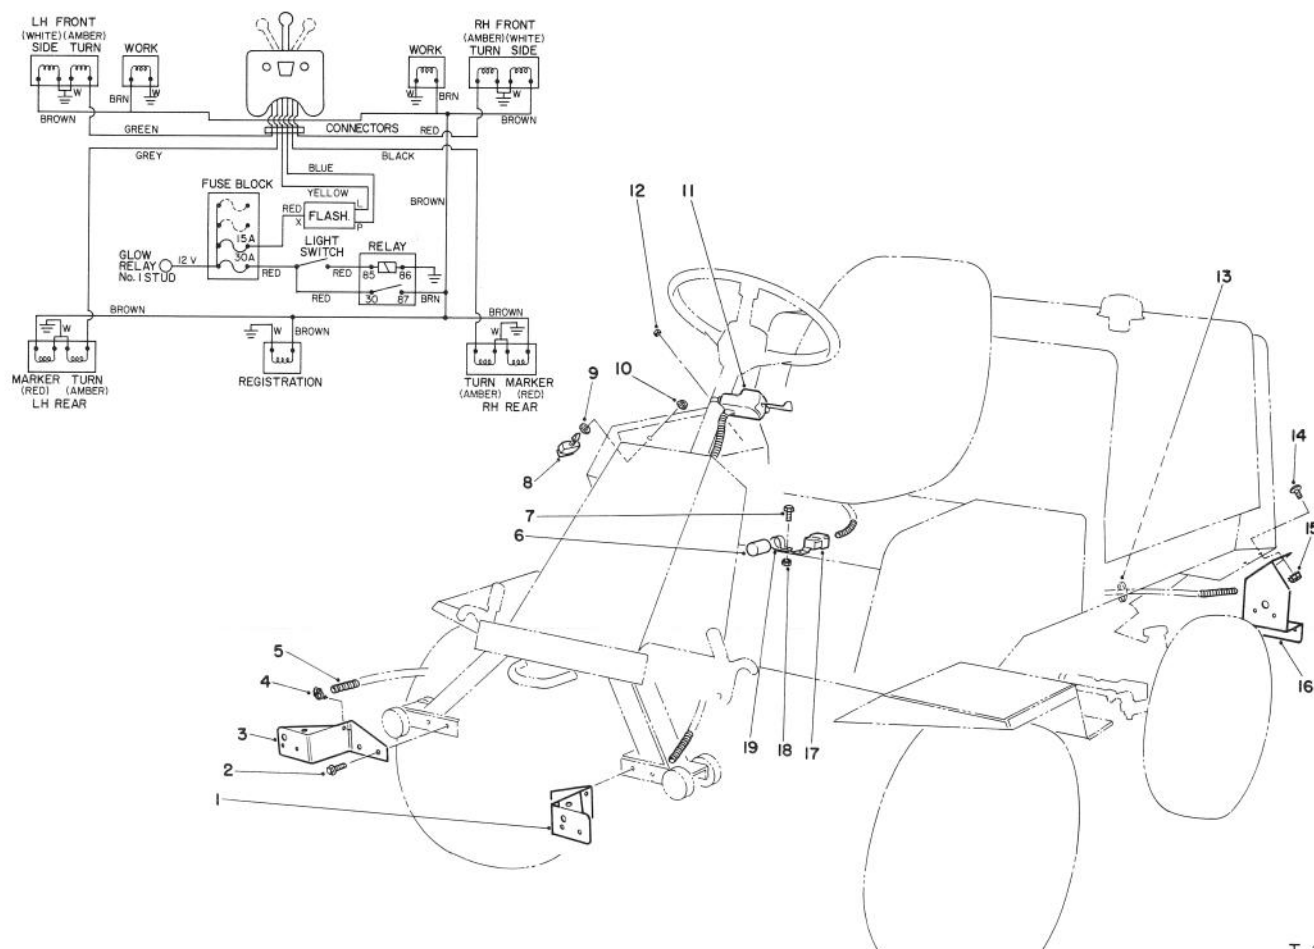

T-1171

LIGHT KIT MODEL NO. 03654 (Optional)

Ref. No.	Part No.	Description	No. Used
1	77-4150	Bracket W.A. - Front, L.H.	1
2	32144-11	Screw - Self Tapping	4
3	77-4120	Bracket W.A. - Front R.H.	1
4	218-492	Clip - Wire	2
5	80-3390	Wire Harness	1
6	218-456	Flasher	1
7	321-2	Screw - Cap, Hex. Hd.	2
8	28-4110	Switch - Lights (Incl. Ref. #9 & 10)	1
9	218-498	Nut - Lock	1
10	218-497	Facenut - Beveled	1


Ref. No.	Part No.	Description	No. Used
11	77-4250	Signal - Control	1
12	48-7890	Nut - Hex	1
13	3290-378	Tie - Wire	10
14	32122-30	Screw - Truss Hd.	4
15	32149-7	Nut - Keps	4
16	77-4100	Bracket - Rear, L.H.	1
*	77-4110	Bracket - Rear, R.H.	1
17	63-7590	Relay - Lights	1
18	32149-2	Nut - Keps	2
19	2412-104	Clamp - R	1

*Not Illustrated



Ref. No.	Part No.	Description	No. Used
1	62-6300	Sleeve Assembly	1
2	33-1270	Bowl	1

Ref. No.	Part No.	Description	No. Used
3	33-1260	Cover Assembly	1

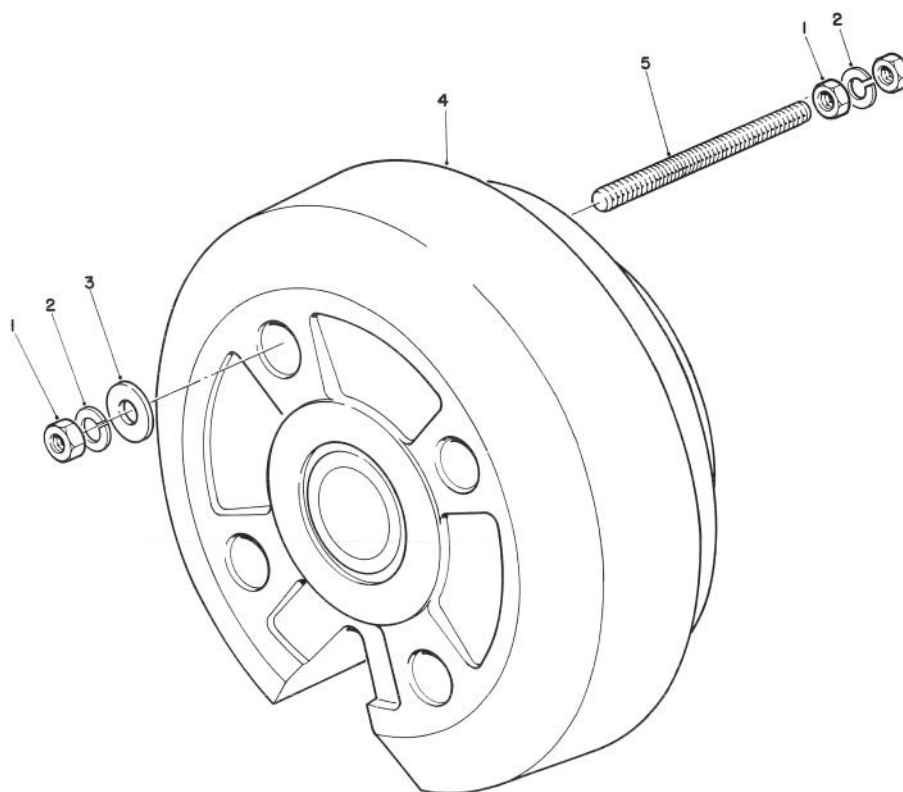 

T-1163


FRONT WHEEL WEIGHT NO. 77-6700 (Optional)

Ref. No.	Part No.	Description	No. Used
1		Nut - Hex.	6
2		Washer - Lock	4
3		Washer - Flat	2

Ref. No.	Part No.	Description	No. Used
4	77-6700	Wheel Weight Assembly (Incl. Ref. 1-3 & 5)	1
5		Rod - Threaded	2

SPECIAL TOOLS

 
GAUGE BAR ASSEMBLY NO. 59-7900

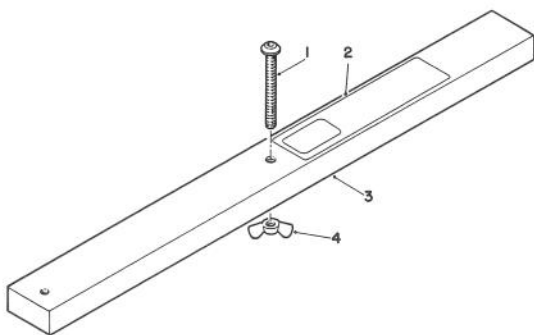

T-0191

Ref. No.	Part No.	Description	No. Used
1	3274-75	Screw - Button Hd.	1
2	59-7930	Decal	1
3	59-7940	Bar - Gauge	1
4	32103-3	Nut - Wing	1

 
BACKLAPPING BRUSH ASSEMBLY NO. 29-9100

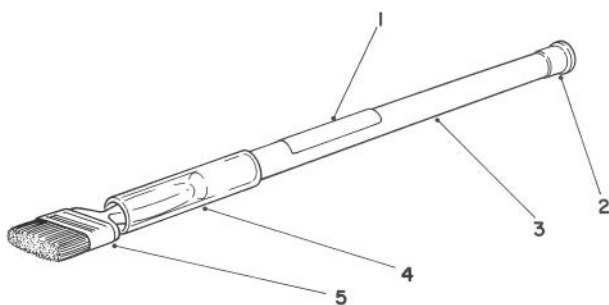

T-0731

Ref. No.	Part No.	Description	No. Used
1	12-9140	Decal	1
2	2410-18	Plug	1
3	29-9080	Handle	1
4	29-9090	Hose - Handle	1
5	36-4310	Brush	1

 BEDKNIFE SCREW TOOL NO. 51-0880

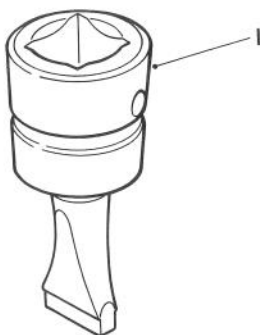

T-0729

Ref. No.	Part No.	Description	No. Used
1	51-0880	Tool - Bedknife Screw	1

PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3-1506	Bushing - Flange	3	6	2	46-6810	Screw - Hex. Washer Hd.	18	4	4
3-3251	Spring - Compression	11	31	1	46-6810	Screw - Hex. Washer Hd.	24	44	4
3-6498	Washer	28	11	2	46-6811	Screw - Hex. Washer Hd.	33	39	2
3-6685	Spring - Seat	14	23	1	46-8091	Screw - Hex. Washer Hd.	1	24	4
10-6830	Stud - Drive	55	38	10	47-2380	Key	75	8	1
10-8110	Washer	12	49	1	47-2380	Key - Square	24	3	2
11-9760	Screw	82	7	8	47-6990	Nut - Lock	11	17	1
12-9140	Decal	97	1	1	47-7140	Pulley - Driven	72	63	1
13-8219	Reel (7-Blade)	71	*	1	47-7140	Pulley - Driven	74	52	1
13-8219	Reel (7-Blade)	74	*	1	47-7140	Pulley - Driven	83	43	1
13-8229	Reel (5-Blade)	71	40	1	47-7150	Pulley - Drive	75	15	1
13-8229	Reel (5-Blade)	74	64	1	47-7150	Pulley - Reel Drive	24	1	2
14-0829	Frame	71	29	1	47-7160	Belt	71	15	1
14-0829	Frame	73	9	1	47-7160	Belt	73	38	1
14-0859	Fuel Tank Plate Assembly	20	25	1	47-7160	Belt	82	32	1
14-0919	Reel (11 Blade)	74	*	1	47-7170	Gasket	71	3	1
14-0919	Reel (11-Blade)	71	*	1	47-7170	Gasket	73	43	1
14-0939	Radiator Mount Assembly	54	7	1	47-7170	Gasket	82	38	1
14-0949	Battery Base Assembly	34	90	1	48-1800	Cylinder Block Kit	6	2	1
14-2099	Kit - Overhaul	72	*	1	48-3280	Bumper	84	6	1
14-2099	Overhaul Kit	74	*	1	48-4590	Horn	14	31	1
20-9500	Washer - Flat	11	37	2	48-7080	Handle - Lift Arm (Center)	68	11	1
21-2820	Hub - Wheel	55	29	2	48-7081	Handle - Lift Arm (Front)	68	42	2
21-4191	Seat Belt Assembly	93	1	1	48-7570	Screw - Cap Hex. Hd.	33	23	3
21-9260	Cover - Dust	12	56	1	48-7610	Screw - Cap Hex. Hd.	34	85	3
23-7270	Nut - Lug	7	18	10	48-7640	Bolt - Valve Cover	41	46	3
25-2380	Plate - Thrust	6	10	1	48-7640	Screw - Cap Hex. Hd.	45	9	3
25-2430	Pin - Straight	6	13	1	48-7700	Screw - Cap Hex. Hd.	33	18	8
27-2360	Switch - Ignition	17	19	1	48-7700	Screw - Cap Hex. Hd.	35	102	2
27-3710	Dipstick	3	16	1	48-7700	Screw - Cap Hex. Hd.	40	23	3
27-7110	Element Assembly	53	4	1	48-7700	Screw - Hex. Washer Hd.	43	5	2
27-7120	Nut & Gasket Assembly	53	5	1	48-7780	Screw - Cap Hex. Hd.	34	81	3
27-7130	Clamp Assembly	53	7	1	48-7810	Screw - Cap Hex. Hd.	35	97	3
27-7140	Skirt - Baffle	53	6	1	48-7810	Screw-Mounting	51	5	3
27-7150	Cap Assembly	53	8	1	48-7840	Screw - Cap Hex. Hd.	33	10	1
27-7170	Band Assembly	53	3	1	48-7880	Nut	48	14	1
27-7180	Cap - Air Cleaner Inlet	2	31	1	48-7880	Nut - Hex.	15	5	2
28-3380	Plate - Valve	6	1	1	48-7880	Nut - Hex.	52	5	5
28-3520	Seal - O-Ring	30	22	1	48-7890	Nut - Hex.	94	12	1
28-3570	Seal - O-Ring	30	34	1	48-7890	Nut - Hex.	15	4	1
28-4110	Switch - Lights	94	8	1	48-7930	Nut - Hex.	15	3	1
29-2770	Washer - Thrust	85	2	1	48-7930	Nut - Lock	84	4	1
29-2770	Washer - Thrust	86	6	1	48-8880	Pin - Dowel	71	30	2
29-6163	Switch - Micro	28	28	1	48-8880	Pin - Dowel	73	6	2
29-9080	Handle	97	3	1	48-8880	Pin - Dowel	82	6	2
29-9090	Hose - Handle	97	4	1	48-9020	Bolt	72	62	2
31-0390	Washer - Friction	11	36	2	48-9020	Bolt	74	47	2
33-1260	Cover Assembly	95	3	1	48-9020	Bolt - Shoulder	82	35	2
33-1270	Bowl	95	2	1	48-9050	Plate - Shield, Drive	73	34	1
36-4310	Brush	97	5	1	48-9050	Plate - Shield, Drive	71	8	1
37-0500	Follower - Reel Speed	16	37	1	48-9050	Plate - Shield, Drive	82	16	1
37-2610	Switch - Toggle	17	16	1	48-9071	Cover - Drive Housing R.H.	82	*	1
37-2690	Capacitor	14	30	1	48-9081	Cover - Drive Housing L.H.	82	33	1
37-8770	Screw - Hex. Washer Hd.	54	23	2	48-9460	Screw - Cap Hex. Hd.	33	19	2
38-7330	Shield - Grass	72	41	2	48-9460	Screw - Cap Hex. Hd.	40	18	2
38-7330	Shield - Grass	74	63	2	48-9460	Screw - Cap Hex. Hd.	50	2	3
38-7330	Shield - Grass	83	49	2	48-9460	Screw - Hex. Washer Hd.	43	7	2
42-2010	Pin - Dowel	75	11	2	48-9470	Screw - Cap Hex. Hd.	33	11	1
42-3120	Capscrew	29	4	8	48-9570	Washer - Lock	84	5	1
42-3140	Screw - Hex. Washer Hd.	75	31	4	49-0170	Seal Kit	13	*	1
43-8600	Spring - Switch	14	17	1	49-2640	Seal-Shaft	29	5	1
43-8610	Cap - Switch Spring	14	14	1	49-2660	Frontplate Assembly	29	7	1
43-8620	Body - Switch	14	18	1	49-2670	Plate-Wear	29	13	1
43-8860	Rod - Switch	14	13	1	49-2680	Seal - O-Ring (Molded)	29	10	1
43-8870	Boot - Switch	14	10	1	49-2690	Gasket-Backup	29	12	1
43-9071	Seat Switch Assembly	14	*	1	49-2700	Seal-Bearing	29	11	1
46-0330	Nut	48	32	3	51-0880	Tool - Bedknife Screw	97	1	1
46-0330	Nut - Hex.	50	11	2	51-1600	Deflector - Grass, R.H.	82	*	1
46-0330	Nut - Lock	39	1	6	51-2060	Washer - Flat	68	34	8
46-0330	Nut - Lock	42	11	1	52-5980	Spacer	14	25	1
46-0330	Nut-Hex	51	1	2	52-9230	Ring-Retaining	13	3	1
46-6550	Fitting - Fuel 90°	20	6	2	52-9240	Bushing-Seal, Gland	13	4	1
46-6560	Bushing - Rubber	20	9	2	52-9250	Needle Bearing Kit	13	*	1
46-6810	Screw - Hex. Washer Hd.	1	3	9	52-9260	Screw-Set	13	1	1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
52-9270	Seat-Ball, Check	13 24 1	59-5820	Nut - Cone	73 41 4
52-9280	Ball-Check	13 22 1	59-5820	Nut - Cone	78 9 4
52-9290	Retainer-Check Ball	13 21 1	59-5820	Nut - Cone	79 4 4
52-9660	Deflector - Grass, L.H.	82 20 1	59-5820	Nut - Cone	80 4 4
53-9480	Washer - Flat	33 14 3	59-5820	Nut - Cone	82 26 4
53-9681	Mount - Engine	33 15 3	59-5830	Cover - Inboard	71 28 1
55-4130	Hose - Coolant	33 40 1	59-5830	Cover - Inboard	73 7 1
56-6710	O-Ring	75 9 2	59-5830	Cover - Inboard	82 8 1
56-6710	Seal - O-Ring	29 9 2	59-5840	Cover - Outboard	71 25 1
56-7973	Clamp - Hose	59 76 2	59-5840	Cover - Outboard	73 11 1
56-7973	Clamp - Tube	56 56 2	59-5840	Cover - Outboard	82 12 1
56-7977	Clamp - Tube	31 39 2	59-5880	Arm - Pivot	87 1 1
56-7982	Sleeve - Protective	4 45 2	59-5880	Arm - Pivot	88 4 1
56-7982	Sleeve - Protective	9 65 2	59-5890	Bedknife (7 Blade)	71 37 1
56-7982	Sleeve - Protective	32 45 1	59-5890	Bedknife (7 Blade)	74 67 1
57-3210	Screw - Hex. Hd.	28 19 1	59-5910	Cross & Bearing	87 6 1
57-4910	Screw (11 Blade)	71 36 19	59-5910	Cross & Bearing	88 9 1
57-4910	Screw (11 Blade)	74 68 19	59-5940	Pin - Lockout	87 7 1
57-4910	Screw (5 & 7 Blade)	71 36 10	59-5940	Pin - Lockout	88 15 1
57-4910	Screw (5 & 7 Blade)	74 68 10	59-6000	Bracket - Skid R.H.	81 1 1
57-5420	Screw - Shoulder	26 27 1	59-6000	Skid Bracket - R.H.	82 * 1
58-3880	Clamp - Hose	24 22 2	59-6010	Bracket - Skid L.H.	81 3 1
58-3880	Clamp - Tube	18 31 1	59-6010	Skid Bracket - L.H.	82 28 1
58-6290	Poppet Assembly	19 34 3	59-6030	Spacer	81 12 4
58-6310	Spacer	19 28 3	59-6030	Spacer	83 46 4
58-6320	Wiper - Seal	19 24 3	59-6070	Bracket - Scraper R.H.	77 1 1
58-6330	Seat Assy.	19 35 3	59-6080	Bracket - Scraper L.H.	77 6 1
58-6340	Seal - O-Ring	19 36 3	59-6090	Scraper Assembly	77 2 1
58-6350	Plug Assembly	19 11 3	59-6140	Bearing	71 32 2
58-6370	Washer - Back-Up	19 10 6	59-6140	Bearing	73 4 2
58-6400	Bushing	19 25 3	59-6140	Bearing	82 4 2
58-6420	Cap Assembly	19 30 3	59-6150	Washer - Pulley	72 64 1
58-6440	Poppet	19 22 1	59-6150	Washer - Pulley	74 51 1
58-6450	Seal - O-Ring	19 12 6	59-6150	Washer - Pulley	82 42 1
58-6460	Ring - Retaining	19 29 3	59-6190	Screw - Cap, Reel	72 66 1
58-6470	Washer	19 18 A/R	59-6190	Screw - Cap Hex. Hd.	82 40 1
58-6480	Washer	19 19 A/R	59-6190	Screw - Cap, Reel	74 50 1
58-6490	Washer	19 20 A/R	59-6250	Frame	83 53 1
58-6700	Washer	19 26 3	59-6280	Blade	12 83 50
58-6710	Plug Assy.	19 6 1	59-6290	Assembly - Shaft & Stop	83 54 1
58-6720	Seal - O-Ring	19 7 1	59-6320	Spacer	83 51 11
58-6730	Spring	19 27 3	59-6321	Spacer	83 * 19
58-6750	Seal - O-Ring	19 17 1	59-6322	Spacer	83 59 1
58-6760	Spring	19 3 3	59-6330	Nut	83 55 1
58-6770	Plunger - Detent	19 4 3	59-6340	Bolt - Shoulder	83 44 2
58-6780	Plug Assy.	19 1 3	59-6430	Valve - Check	12 46 1
58-6790	Seal - O-Ring	19 5 3	59-6730	Race-Bearing	13 7 2
59-5470	Bedbar - Welded Assembly	74 72 1	59-6740	Bearing-Needle, Thrust	13 8 1
59-5470	Bedbar, Welded Assembly	72 72 1	59-6820	Centering Spring Kit	13 11 1
59-5550	Housing - Bearing	71 33 1	59-6830	Kit-Centering Pin	13 20 1
59-5550	Housing - Bearing	82 3 1	59-6850	Plate-Spacer	13 14 1
59-5550	Housing - Bearing	73 3 1	59-6860	Drive	13 15 1
59-5560	Cap - Dust	71 34 1	59-6890	Cap-End	13 18 1
59-5560	Cap - Dust	73 2 1	59-7130	Knob - Reel Speed	16 20 1
59-5560	Cap - Dust	82 2 1	59-7260	Sleeve - Protective	24 36 2
59-5620	Guard	78 7 2	59-7340	Plate - Orifice	68 32 3
59-5620	Guard	79 19 2	59-7490	Plug - Grease Fitting	72 68 1
59-5630	Assembly - Roller, Rear	71 16 1	59-7490	Plug - Grease Fitting	74 48 1
59-5630	Assembly - Roller, Rear	73 12 1	59-7490	Plug - Grease Fitting	82 36 1
59-5630	Assembly - Roller, Rear	82 21 1	59-7790	Decal	82 11 1
59-5640	Tube & End Cap Assembly	76 10 1	59-7930	Decal	97 2 1
59-5690	Sleeve - Wear	76 4 2	59-7940	Bar - Gauge	97 3 1
59-5690	Sleeve - Wear	78 16 2	59-8320	Ring - Retaining	75 16 1
59-5690	Sleeve - Wear	79 9 2	60-3520	O - Ring	29 25 1
59-5690	Sleeve - Wear	80 9 2	60-3530	Screw-Cap, Hex. Hd.	29 28 2
59-5770	Housing - Roller, Adj.	71 14 2	60-3540	Washer	29 27 2
59-5770	Housing - Roller, Adj.	73 39 2	60-3780	Seal Kit	19 *
59-5770	Housing - Roller, Adjuster	82 24 2	60-5710	Plug Assembly	29 18 1
59-5780	Assembly - Bushing	79 5 2	60-5720	Seal - O-Ring	19 9 6
59-5780	Assembly - Bushing	80 5 2	60-5730	Disc	29 20 1
59-5780	Assembly - Bushing	82 22 2	60-5820	Spring	29 21 1
59-5780	Bushing	78 12 2	60-5860	Plug Assembly	29 24 1
59-5780	Bushing - Roller	71 5 2	60-5890	Washer	29 6 1
59-5780	Bushing - Roller	73 36 2	60-5890	Washer	75 18 1
59-5820	Nut - Cone	71 12 4	60-6450	Disc	19 2 A/R

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
60-6700	Screw - Cap Hex. Hd.	42 19 1	66-5730	Front Plate Assembly	75 12 1
60-6700	Screw - Cap Hex. Hd.	48 34 1	66-8510	Adjuster & Handle Assembly	90 6 1
60-6760	Screw - Cap Hex. Hd.	48 2 4	66-8520	Bumper - Seat	90 5 2
61-2790	Screen - Fill	26 31 1	66-8530	Adjuster Assembly	90 10 1
62-1230	Washer	35 100 2	66-8540	Hanger - Spring	90 * 1
62-2170	Washer - Thrust	55 21 4	66-8550	Rod - Pivot	90 * 2
62-5960	Housing - Roller Adj. L.H.	78 8 1	66-8560	Nut - Push	90 * 4
62-5960	Housing - Roller Adj. L.H.	79 16 1	66-8570	Spring - Suspension	90 * 2
62-5960	Housing - Roller Adj. L.H.	80 19 1	66-8580	Bushing - Suspension	90 * 4
62-5980	Housing - Roller Adj. R.H.	78 1 1	66-8600	Plate - Seat Base	90 4 1
62-5980	Housing - Roller Adj. R.H.	79 3 1	66-8610	Suspension - Seat	90 13 1
62-5980	Housing - Roller Adj. R.H.	80 3 1	66-9290	Spacer - Suspension	90 12 4
62-6010	Assembly - Collar	2 80 2	67-0870	Bolt - Shoulder	16 27 1
62-6010	Assembly - Collar	78 11 2	67-0870	Screw - Shoulder	2 39 2
62-6010	Assembly - Collar	79 2 2	67-1300	Decal - TORO	54 17 1
62-6070	Block - Deflector (7 Blade)	72 46 2	67-7120	Link - Fusible	15 8 1
62-6070	Block - Deflector (7 Blade)	74 60 2	67-7130	Diode	15 7 1
62-6080	Bolt - Shoulder	74 59 1	67-7160	Block - Fuse	16 42 1
62-6080	Bolt - Shoulder	72 45 2	67-9410	Washer - Flat	59 53 5
62-6110	Assembly - Bushing	71 18 4	67-9550	Cushion - Seat	90 1 1
62-6110	Assembly - Bushing	73 27 4	67-9560	Bucket - Seat	90 3 1
62-6130	Assembly - Roller, 34.25"	78 * 1	68-3270	Bumper	68 17 2
62-6150	Roller, 34.25"	79 14 1	68-3280	Spring - Seat	91 4 2
62-6180	Assembly - Roller, 34.25"	79 * 1	68-6150	Breather	20 10 2
62-6190	Roller - Tube, 34.25"	80 15 1	68-6480	Bushing - Flange	85 6 2
62-6200	Assembly - Roller, 34.25"	80 * 1	68-6480	Bushing - Flange	86 2 2
62-6220	Scraper Assembly	80 22 1	68-7573	Seal - Shroud L.H.	1 10 2
62-6300	Sleeve Assembly	95 1 1	68-8080	Wheel - Steering	11 18 1
62-6470	Housing - Drive, R.H.	71 7 1	68-9420	Washer - Lock	34 77 4
62-6470	Housing - Drive, R.H.	82 * 1	68-9420	Washer - Lock	35 101 2
62-6480	Housing - Drive, L.H.	73 35 1	68-9420	Washer - Lock	40 17 5
62-6480	Housing - Drive, L.H.	82 17 1	68-9420	Washer - Lock	42 10 6
62-7400	Decal - TORO	1 1 1	68-9420	Washer - Lock	44 8 6
62-7650	Gasket - Sending Unit	20 28 1	68-9420	Washer - Lock	48 36 3
62-7770	Key - Ignition	17 5 1	68-9420	Washer - Spring	44 1 7
63-4330	Decal - 5 Blade	74 * 1	68-9420	Washer - Spring	45 4 3
63-7590	Relay - Lights	94 17 1	68-9420	Washer - Spring	48 3 8
63-7590	Relay - SPDT	14 28 1	68-9420	Washer - Spring	50 3 6
63-7590	Relay - SPDT	16 18 2	69-0760	Bracket - Armrest L.H.	92 * 1
63-7622	Hose - Fuel	20 22 2	69-0770	Bracket - Armrest R.H.	92 4 1
63-7622	Hose - Fuel	33 29 1	69-1170	Gauge - Sight	26 34 1
63-7626	Hose - Fuel	20 33 1	69-1180	Armrest	92 1 2
63-7627	Hose - Fuel	20 8 1	69-1260	Spacer	92 6 4
63-7627	Hose - Fuel	33 31 1	69-1560	Lever - Tilt Steering	11 24 1
63-7880	Latch - Brake	10 16 1	69-1780	Lift Valve Assembly	18 18 1
63-7900	Latch - Parking Brake	11 34 1	69-1790	Plunger	19 37 2
63-8410	Washer	10 34 1	69-1800	Plug Assembly	19 32 3
63-8410	Washer	28 3 5	69-1810	Spring	19 33 3
63-9751	Mount - Linkage Rod	10 10 4	69-1820	Spring - Black	19 21 1
63-9751	Mount - Rubber	28 25 5	69-1830	Plug Assembly	19 16 1
65-5100	Handle - Hood	1 26 2	69-1840	Plunger	19 31 1
65-6390	Washer - Thrust	3 36 1	69-3020	Latch - Draw	1 21 1
65-7980	Nut - Hex. Flange	52 6 1	69-4780	Clamp - Gauge	17 13 1
66-1930	Nut-Lock	61 11 1	69-6470	Bushing - Flange	55 22 4
66-1940	Piston	61 4 1	69-6470	Bushing - Flange	68 18 6
66-2490	Clamp - Battery	33 5 1	69-7010	Lever - Lift Control L.H.	18 * 1
66-2871	Cable - Hood	1 15 1	69-8890	Cap - Spindle	55 19 2
66-2871	Cable - Hood	33 35 1	69-8940	Washer	8 6 2
66-2920	Washer - Friction	16 4 3	69-8940	Washer	24 34 2
66-2920	Washer - Nylon	10 39 1	69-8970	Spacer	8 7 1
66-2940	Gauge - Fuel	17 9 1	69-8970	Spacer	24 33 1
66-2950	Meter - Hour	17 10 1	69-9000	Spacer	7 30 2
66-2960	Cluster - Warning Light	17 7 1	69-9000	Spacer	9 54 2
66-3240	Cap - Expansion Tank	33 41 1	69-9000	Spacer	24 39 3
66-5400	Seat Assembly	90 2 1	69-9010	Washer	7 31 4
66-5400	Seat Assembly	91 1 1	69-9010	Washer	9 51 4
66-5620	Washer - Thrust	76 11 2	69-9010	Washer	24 31 6
66-5620	Washer - Thrust	78 14 2	69-9140	Link - Lift Lever	18 12 3
66-5620	Washer - Thrust	79 21 2	69-9880	Tire	7 15 2
66-5620	Washer - Thrust	80 21 2	70-1380	Sleeve - Protector	54 19 1
66-5640	Shaft - Roller	76 9 1	70-1480	Relay - Starter	20 35 1
66-5650	Shaft	79 15 1	70-2560	Decal - Oil	1 9 1
66-5650	Shaft - Roller	80 14 1	70-8621	Cap - Fuel	20 3 1
66-5650	Shaft - Roller	78 2 1	70-8640	Cap - Hydraulic Reservoir	26 30 1
66-5710	Seal - Shaft	75 17 1	71-4580	Clutch - Roller	58 27 1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. Qty.	Part No.	Description	Pg. Ref. No. Qty.
71-4590	Washer - Thrust	58 37 2	74-5560	Tire	55 30 2
72-0130	Horn Button Assembly	11 16 1	74-5560	Tire	59 43 2
72-0380	Knob - Hex.	71 20 2	74-5580	Tank - Fuel	20 32 1
72-0380	Knob - Hex.	73 13 2	74-5590	Gasket - Exhaust	34 57 1
72-0390	Rod - Bedknife Adj.	73 14 2	74-5620	Axle Assembly	59 49 1
72-0390	Rod - Bedknife, Adj.	71 19 2	74-5630	Adapter	63 12 1
72-0400	Spring	72 53 2	74-5640	Valve - Relief	89 3 1
72-0400	Spring	73 18 2	74-5660	Shaft - Axle	7 12 2
72-0410	Stand Off	72 60 2	74-5670	Coupling - Spring Center	34 84 1
72-0410	Stand Off	73 26 2	74-5680	Bearing - Ball	7 24 2
72-0420	Clamp - Tube	73 25 2	74-5700	Bearing - Needle	58 24 1
72-0420	Clamp Tube	72 65 2	74-5710	Shift Linkage Bracket Assy.	3 7 1
72-0430	Bushing - Flange	72 70 2	74-5730	Shaft - Shift Linkage	3 8 1
72-0430	Bushing - Flange	74 53 2	74-5760	Valve - PCV	34 64 1
72-0440	Pin - Pivot	73 24 2	74-5770	Lever - Shift	11 6 1
72-0440	Pin - Pivot	72 55 2	74-5790	Shaft - Shift Linkage	11 8 1
72-0450	Bracket - R.H. Bedknife Adj.	72 * 1	74-5860	Sending Unit - Fuel	20 29 1
72-0450	Bracket - R.H. Bedknife Adj.	74 * 1	74-5890	Fitting - Hydraulic 90°	31 33 1
72-0460	Bracket - L.H. Bedknife Adj.	72 52 1	74-5910	Fitting - Hydraulic Union	89 2 1
72-0460	Bracket - L.H. Bedknife Adj.	74 56 1	74-5930	Hose - Radiator Upper	33 20 1
72-0470	Guard	72 69 2	74-5930	Hose - Radiator Upper	54 39 1
72-0470	Guard	74 61 1	74-5940	Tie Rod Assembly	55 * 1
72-0470	Guard	83 58 2	74-5980	Muffler	34 72 1
72-0480	Bedknife (5 Blade)	71 * 1	74-6000	Air Cleaner Assembly	34 68 1
72-0480	Bedknife (5 Blade)	74 * 1	74-6000	Air Cleaner Assembly	53 1 1
72-3790	Wire - Neutral Switch	28 27 1	74-6010	Hose - Coolant	33 47 1
72-4310	Switch - Lift	68 40 3	74-6020	Hose - Radiator Lower	34 59 1
72-4320	Switch - Ball	14 15 1	74-6020	Hose - Radiator Lower	54 35 1
72-4320	Switch - Ball	16 25 1	74-6030	Hose - Air Intake	34 49 1
72-4320	Switch - Neutral	3 17 1	74-6040	Hose - Coolant	33 42 1
73-3580	Washer	4 46 2	74-6050	Lever - Lift Control Mid.	18 * 1
74-0720	Tube - Manual	14 1 1	74-6060	Lever - Lift Control R.H.	18 16 1
74-3390	Motor - Hydraulic	8 20 1	74-6090	Pipe - Exhaust	34 74 1
74-3390	Motor - Reel	24 4 2	74-6110	Stop - Pedal	10 38 1
74-3390	Reel Motor Assembly	75 * 3	74-6210	Tube - Hydraulic	9 48 1
74-3410	Radiator	54 6 1	74-6210	Tube - Hydraulic	24 28 1
74-3420	Gear Pump Assembly	28 44 1	74-6220	Tube - Hydraulic	3 33 1
74-3420	Gear Pump Assembly	29 * 1	74-6220	Tube - Hydraulic	26 2 1
74-3440	Hydraulic Cylinder Assembly	68 21 1	74-6230	Tube - Hydraulic	26 16 1
74-3450	Cylinder - Hydraulic	59 55 1	74-6230	Tube - Hydraulic	58 5 1
74-3460	Hydraulic Cylinder Assembly	68 39 2	74-6240	Tube - Hydraulic	9 56 1
74-3630	Actuator - Brake	7 4 2	74-6240	Tube - Hydraulic	24 15 1
74-3640	Disc - Brake	7 3 4	74-6250	Tube - Hydraulic	8 23 1
74-3650	Fan - Cooling	34 51 1	74-6250	Tube - Hydraulic	24 14 1
74-3660	Power Steering Valve Assy.	11 40 1	74-6260	Tube - Hydraulic	24 26 1
74-3670	Steering Column Assembly	11 4 1	74-6260	Tube - Hydraulic L.H.	55 2 1
74-4010	Support - Expansion Tank	33 46 1	74-6260	Tube - Hydraulic L.H.	58 11 1
74-4050	Bracket - Hood Support	35 99 1	74-6270	Tube - Hydraulic	24 25 1
74-4080	Orifice - Breather	26 24 1	74-6270	Tube - Hydraulic R.H.	55 3 1
74-4090	Tread - Foot	2 43 1	74-6270	Tube - Hydraulic R.H.	58 12 1
74-4150	Bracket - Muffler Front	34 78 1	74-6300	Tube - Hydraulic	18 26 1
74-4160	Bracket - Muffler Rear	34 71 1	74-6300	Tube - Hydraulic	24 12 1
74-4230	Bracket - Oil Filter	26 37 1	74-6310	Tube - Hydraulic	18 25 1
74-4900	Tube - Water	34 62 1	74-6310	Tube - Hydraulic	24 13 1
74-4970	Guard - Bulkhead	24 43 1	74-6340	Tube - Hydraulic	9 49 1
74-4980	Shroud - Fan Upper	54 3 1	74-6340	Tube - Hydraulic R.H.	7 * 1
74-4990	Shroud - Fan Lower	54 33 1	74-6350	Tube - Hydraulic	24 27 1
74-5000	Rear Axle Assembly	55 24 1	74-6350	Tube - Hydraulic L.H.	7 33 1
74-5100	Lift Arm Assembly Center	68 19 1	74-6360	Tube - Hydraulic	8 13 1
74-5200	Lift Arm Assembly L.H.	68 30 1	74-6360	Tube - Hydraulic	24 38 1
74-5250	Pin - Axle Pivot	56 51 1	74-6370	Tube - Hydraulic	8 16 1
74-5250	Pin - Axle Pivot	59 63 1	74-6370	Tube - Hydraulic	26 18 1
74-5280	Pin - Lift Arm Pivot	68 9 3	74-6380	Tube - Hydraulic	18 33 1
74-5300	Lift Arm Assembly R.H.	68 * 1	74-6380	Tube - Hydraulic	26 6 1
74-5330	Spindle - L.H.	55 25 1	74-6390	Tube - Hydraulic	54 28 1
74-5350	Spindle - R.H.	55 * 1	74-6400	Tube - Hydraulic	26 38 1
74-5410	Housing - Axle	7 11 2	74-6400	Tube - Hydraulic	54 27 1
74-5440	Hub - Wheel	7 14 2	74-6420	Bracket - Bulkhead L.H.	7 35 1
74-5460	Angle Radiator Support	54 31 1	74-6430	Bracket - Bulkhead R.H.	7 * 1
74-5470	Bracket - Engine Front	33 9 1	74-6440	Bracket - Bulkhead	8 11 1
74-5480	Cable - Throttle	16 3 1	74-6450	Bracket - Bulkhead	55 5 1
74-5500	Bolt - Wheel	59 48 10	74-6450	Bracket - Bulkhead	58 13 1
74-5510	Engine Assembly	33 25 1	74-6470	Bracket - Clamp	24 21 1
74-5520	Clutch - Fan	34 54 1	74-6470	Bracket - Line Clamp	68 45 1
74-5530	Hydraulic Cylinder Assy.	56 43 1			

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
74-6490	Hose - Water Tube	34 61 2	74-7250	Gasket - Fitting	40 10 1
74-6520	Washer - Flat	39 2 6	74-7260	Bolt - Head	40 11 10
74-6530	Stud	39 3 6	74-7270	Washer - Flat	40 12 10
74-6530	Stud	42 9 1	74-7280	Plug	40 13 2
74-6540	Tappet - Valve	39 4 8	74-7340	Fitting - Coolant	40 19 1
74-6550	Cup - Upper Valve Spring	39 5 8	74-7350	Hose	40 20 1
74-6560	Spring - Valve	39 6 8	74-7360	Tube - Collector	40 21 1
74-6570	Cup - Lower Valve Spring	39 7 8	74-7390	Hose - Elbow	40 24 1
74-6580	Insert - Valve (1.650mm)	39 8 8	74-7400	Tube	40 25 1
74-6590	Insert - Valve (1.725mm)	39 * 8	74-7410	Plug	40 26 2
74-6600	Insert - Valve (1.800mm)	39 * 8	74-7420	Ball	40 27 4
74-6610	Insert - Valve (1.900mm)	39 * 8	74-7430	Chamber - Turbulence	40 28 4
74-6620	Insert - Valve (1.975mm)	39 * 8	74-7440	Chamber - Turbulence	40 * 4
74-6630	Insert - Valve (2.050mm)	39 * 8	74-7450	Seat - Intake Valve	41 29 4
74-6640	Insert - Valve (2.125mm)	39 * 8	74-7460	Seat - Intake Valve	41 * 4
74-6650	Insert - Valve (2.225mm)	39 * 8	74-7470	Valve - Exhaust	41 31 4
74-6660	Insert - Valve (2.250mm)	39 * 8	74-7480	Valve - Intake	41 30 4
74-6670	Insert - Valve (2.275mm)	39 * 8	74-7490	Seat - Exhaust Valve	41 32 4
74-6680	Insert - Valve (2.300mm)	39 * 8	74-7500	Seat - Exhaust Valve	41 * 4
74-6690	Insert - Valve (2.325mm)	39 * 8	74-7510	Guide - Valve (14.29mm)	41 33 8
74-6700	Insert - Valve (2.350mm)	39 * 8	74-7520	Guide - Valve (14.59mm)	41 * 8
74-6710	Insert - Valve (2.375mm)	39 * 8	74-7530	Gasket - Head (1.61mm)	41 34 1
74-6720	Insert - Valve (2.400mm)	39 * 8	74-7540	Gasket - Head (1.73mm)	41 * 1
74-6730	Insert - Valve (2.425mm)	39 * 8	74-7550	Screw - Cap Hex. Hd.	41 35 2
74-6740	Insert - Valve (2.450mm)	39 * 8	74-7560	Washer	37 8 6
74-6750	Insert - Valve (2.475mm)	39 * 8	74-7560	Washer - Lock	41 36 2
74-6760	Insert - Valve (2.500mm)	39 * 8	74-7560	Washer - Spring	43 9 2
74-6770	Insert - Valve (2.525mm)	39 * 8	74-7560	Washer - Spring	45 7 5
74-6780	Insert - Valve (2.550mm)	39 * 8	74-7560	Washer - Spring	46 4 4
74-6790	Insert - Valve (2.575mm)	39 * 8	74-7560	Washer - Spring	48 41 2
74-6800	Insert - Valve (2.600mm)	39 * 8	74-7580	Plate	41 38 1
74-6810	Insert - Valve (2.625mm)	39 * 8	74-7590	Gasket	41 39 1
74-6820	Insert - Valve (2.650mm)	39 * 8	74-7600	Plug	41 40 4
74-6830	Insert - Valve (2.675mm)	39 * 8	74-7610	Cylinder Head Assembly	41 41 1
74-6840	Insert - Valve (2.700mm)	39 * 8	74-7620	Plug	41 42 1
74-6850	Insert - Valve (2.725mm)	39 * 8	74-7630	Gasket - Valve Cover	41 43 1
74-6860	Insert - Valve (2.750mm)	39 * 8	74-7640	Cover - Valve	41 44 1
74-6870	Insert - Valve (2.775mm)	39 * 8	74-7650	Washer - Flat	41 45 3
74-6880	Insert - Valve (2.800mm)	39 * 8	74-7670	Head Bolt & Washer Set	41 * 1
74-6890	Insert - Valve (2.825mm)	39 * 8	74-7690	Cap - Filler	36 2 1
74-6900	Insert - Valve (2.850mm)	39 * 8	74-7700	Dipstick - Oil	36 3 1
74-6910	Insert - Valve (2.875mm)	39 * 8	74-7710	Hose - Breather	36 4 1
74-6920	Insert - Valve (2.900mm)	39 * 8	74-7720	Hose - PCV	34 63 1
74-6930	Insert - Valve (2.925mm)	39 * 8	74-7730	Hose - PCV	34 65 1
74-6940	Insert - Valve (2.950mm)	39 * 8	74-7770	Hose - Crankcase	36 11 1
74-6950	Insert - Valve (2.975mm)	39 * 8	74-7780	Gasket	36 12 1
74-6960	Insert - Valve (3.000mm)	39 * 8	74-7790	Screw	36 13 1
74-6970	Insert - Valve (3.025mm)	40 8 8	74-7800	Pin - Spring	36 14 2
74-6980	Insert - Valve (3.050mm)	40 * 8	74-7810	Gasket - Plate	36 15 1
74-6990	Insert - Valve (3.075mm)	40 * 8	74-7820	Plate	36 16 1
74-7000	Insert - Valve (3.100mm)	40 * 8	74-7830	Screw - Washer Hd.	36 17 2
74-7010	Insert - Valve (3.125mm)	40 * 8	74-7840	Plug	36 18 8
74-7020	Insert - Valve (3.150mm)	40 * 8	74-7840	Plug	40 14 2
74-7030	Insert - Valve (3.175mm)	40 * 8	74-7850	Gasket	36 19 4
74-7040	Insert - Valve (3.200mm)	40 * 8	74-7870	Gasket - Oil Pan	36 21 1
74-7050	Insert - Valve (3.225mm)	40 * 8	74-7880	Pin - Groove	36 22 2
74-7060	Insert - Valve (3.250mm)	40 * 8	74-7890	Pan - Oil	36 23 1
74-7070	Insert - Valve (3.275mm)	40 * 8	74-7900	Washer - Stop	36 24 23
74-7080	Insert - Valve (3.300mm)	40 * 8	74-7910	Screw - Cap Hex. Hd.	36 25 20
74-7090	Insert - Valve (3.325mm)	40 * 8	74-7910	Screw - Cap Hex. Hd.	43 10 2
74-7100	Insert - Valve (3.350mm)	40 * 8	74-7910	Screw - Cap Hex. Hd.	45 8 2
74-7110	Insert - Valve (3.375mm)	40 * 8	74-7920	Plug	36 20 1
74-7120	Insert - Valve (3.400mm)	40 * 8	74-7930	Screw - Bearing Cap	36 27 10
74-7130	Insert - Valve (3.425mm)	40 * 8	74-7940	Bushing - Spring	36 28 1
74-7140	Insert - Valve (3.450mm)	40 * 8	74-7950	Screw - Plate	36 29 6
74-7150	Insert - Valve (3.475mm)	40 * 8	74-7960	Stud - Filter	36 30 1
74-7160	Insert - Valve (3.500mm)	40 * 8	74-7970	Filter - Oil	36 31 1
74-7170	Insert - Valve (3.550mm)	40 * 8	74-7980	Switch - Pressure	36 32 1
74-7180	Insert - Valve (3.625mm)	40 * 8	74-7990	Pin - Spring	36 33 4
74-7190	Insert - Valve (3.700mm)	40 * 8	74-8000	Plug	36 34 2
74-7200	Insert - Valve (3.775mm)	40 * 8	74-8010	Tube	36 35 1
74-7210	Insert - Valve (3.850mm)	40 * 8	74-8020	Shortblock Assembly	36 36 1
74-7220	Insert - Valve (3.925mm)	40 8 8	74-8030	Pin - Spring	36 37 1
74-7230	Insert - Valve (4.000mm)	40 * 8	74-8040	Plug	36 38 1
74-7240	Collar - Split	40 9 16	74-8050	Oil Decanter Assembly	36 1 1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
74-8060	Gasket Set	36 * 1	74-8870	Gasket	48 29 2
74-8070	Screw - Cap Hex. Hd.	37 1 1	74-8890	Fuel Outlet Assembly	48 31 1
74-8080	Washer	37 2 1	74-8900	Washer - Flat	42 7 2
74-8090	Pulley	37 3 1	74-8900	Washer - Flat	48 33 1
74-8100	Gear - Pinion	37 4 1	74-8910	Bracket - Horn	14 32 1
74-8110	Sprocket - Oil Pump	37 5 1	74-8920	Washer - Copper	29 29 4
74-8120	Key - Woodruff	37 6 2	74-8950	Body Assembly	29 14 1
74-8130	Screw - Cap Hex. Hd.	37 7 4	74-8960	Idle Gear Assembly	29 2 1
74-8130	Screw - Cap Hex. Hd.	48 42 2	74-8970	Drive Gear Assembly	29 3 1
74-8140	Cover	37 9 1	74-8980	Backplate Assembly	29 22 1
74-8150	Gasket - Cover	37 10 1	74-8990	Spool Assembly	29 23 1
74-8160	Seal - Shaft	37 11 1	74-9000	Relief Valve Assy.	29 17 1
74-8170	Bearing Set (Std.)	37 12 5	74-9010	Kit - Seal	29 * 1
74-8180	Bearing Set (.30mm OS)	37 * 5	74-9020	Backplate Repair Kit	29 * 1
74-8190	Thrust Bearing Set (Std.)	37 13 2	74-9040	Coupling	29 26 1
74-8200	Thrust Bearing Set	37 * 2	74-9080	Cable - Battery Pos.	33 1 1
74-8210	Thrust Bearing Set	37 * 2	74-9090	Cable - Battery Neg.	33 * 1
74-8220	Thrust Bearing Set	37 * 2	74-9100	Pad - Forward Pedal	10 7 1
74-8230	Crankshaft	37 14 1	74-9110	Pad - Reverse Pedal	10 9 1
74-8240	Seal	37 15 1	74-9120	Hose - Expansion Tank	33 43 1
74-8250	Pin	37 16 1	74-9120	Hose - Expansion Tank	54 41 1
74-8260	Flywheel	37 17 1	74-9122	Hose - Return	26 26 1
74-8270	Pin	37 18 3	74-9122	Hose - Vent	20 17 1
74-8280	Screw - Cap Hex. Hd.	37 19 8	74-9140	Spring	75 26 1
74-8290	Seal - #1 Bearing Cap	37 20 2	74-9160	Body Assembly	75 10 1
74-8300	Clip - Piston Pin	37 21 8	74-9170	Idle Gear Assembly	75 6 1
74-8310	Pin - Piston	37 22 4	74-9190	Backplate Assembly	75 5 1
74-8320	Piston Ring Set (Stage #1)	37 23 4	74-9210	Drive Gear Assembly	75 7 1
74-8330	Piston Ring Set (Stage #2)	37 * 4	74-9220	Core - Solenoid	75 23 1
74-8340	Piston Ring Set (Stage #3)	37 * 4	74-9230	Spacer	75 28 1
74-8350	Bushing - Sleeve	37 24 4	74-9240	Plunger	75 25 1
74-8360	Rod - Connecting	37 25 4	74-9250	Plunger - Spool Solenoid	75 24 1
74-8370	Nut - Hex.	37 26 8	74-9260	Solenoid Coil Assembly	75 22 1
74-8380	Bearing - Connecting Rod	37 27 4	74-9270	Case - Solenoid	75 21 1
74-8390	Bearing - Connecting Rod	37 * 4	74-9280	Plug Assembly	75 1 1
74-8400	Bolt - Connecting Rod	37 28 4	74-9290	O-Ring	75 4 2
74-8420	Piston Set - Stage #1	37 29 1	74-9300	Nut	75 20 1
74-8430	Piston Set - Stage #2	38 29 1	74-9310	Pin - Roll	75 19 1
74-8440	Piston Set - Stage #3	38 * 1	74-9330	Washer	75 27 1
74-8450	Piston Ring - Oil (Std.)	38 30 4	74-9370	Screw - Cap Socket Hd.	75 13 8
74-8460	Piston Ring - Oil (Stage #1)	38 * 4	74-9380	Seal - O-Ring	75 30 1
74-8470	Piston Ring - Oil (Stage #2)	38 * 4	74-9400	By-Pass Valve Assembly	75 * 1
74-8480	Piston Ring - Oil (Stage #3)	38 * 4	74-9410	Kit - Seal	75 * 1
74-8490	Piston Ring - Compression	38 31 4	74-9430	Cap - End	6 14 1
74-8500	Piston Ring - Compression	38 * 4	74-9440	Gasket	6 11 1
74-8510	Piston Ring - Compression	38 31 4	74-9450	Plug	6 4 1
74-8520	Piston Ring - Compression	38 * 4	74-9480	Seal - Lip	6 6 1
74-8530	Piston Ring - Compression	38 32 4	74-9500	Screw - Cap Hex. Hd.	6 16 4
74-8540	Piston Ring - Compression	38 * 4	74-9510	Washer - Flat	6 15 1
74-8550	Piston Ring - Compression	38 * 4	74-9550	Set Screw	70 1 1
74-8560	Piston Ring - Compression	38 * 4	74-9560	Barrel Assy.	70 2 1
74-8570	Screw - Cap Hex. Hd.	38 33 2	74-9570	Rod	70 7 1
74-8580	Bracket - Pump	48 1 1	74-9580	Screw-Bleeder	70 3 1
74-8600	Bracket - Pump	48 4 1	74-9590	Seal Kit	70 * 1
74-8610	Pin - Spring	48 5 1	74-9600	Piston Rod Assembly	61 9 1
74-8620	Nut - Conical	48 6 1	74-9610	Butt & Tube Assembly	61 1 1
74-8630	Bushing - Flange	48 7 1	74-9640	Gland	61 7 1
74-8640	Washer - Flat	48 8 1	74-9710	Kit - Seal	61 * 1
74-8640	Washer - Flat	50 12 1	74-9720	Rod-Piston	57 9 1
74-8650	Pacer	48 9 1	74-9730	Butt & Tube Assy.	57 1 1
74-8660	Injection Pump Assembly	48 10 1	74-9740	Piston	57 3 1
74-8670	Fuel Inlet Assembly	48 11 1	74-9750	Gland	57 7 1
74-8680	Gasket	48 12 2	74-9760	Nut-Lock	57 2 1
74-8710	Washer	48 15 1	74-9830	Seal Kit	57 * 1
74-8710	Washer - E.T.L.W.	52 8 1	74-9940	Nut-Lock	69 2 1
74-8720	Stop Valve Assembly	48 16 1	74-9950	Piston	69 3 1
74-8730	Ring - Seal	48 17 1	74-9960	Barrel Assembly	69 1 1
74-8740	Tube - Pump Return	48 18 1	74-9970	Rod	69 15 1
74-8750	Injection Tube Set	48 19 1	74-9980	Head	69 8 1
74-8760	Hose - Rubber	48 20 3	74-9990	Seal Kit	69 * 1
74-8770	Plug	48 21 1	75-0140	Spring - Conical	30 28 4
74-8780	Clamp - Plastic	48 22 1	75-0240	Seal - O-Ring	30 29 4
74-8790	Clamp - Metal	48 * 1	75-0400	Plate - Thrust	30 2 2
74-8810	Gasket	46 15 1	75-0470	Cylinder Block Kit	30 3 2
74-8820	Plug	46 16 1	75-0480	Pin	30 38 4

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
75-0500	Bearing - Needle	30 39 2	76-5080	Piston	45 2 1
75-0510	Pin	30 4 2	76-5090	Spring - Piston	45 3 1
75-0540	Tether - Reservoir Cap	26 29 1	76-5100	Bolt - Shoulder	45 5 1
75-0550	Strainer - Tank	27 47 1	76-5150	Screw - Cap Hex. Hd.	45 10 1
75-3570	Tip - Handle	90 9 1	76-5160	Screw - Cap Hex. Hd.	45 11 1
75-4090	Neutral Switch Assembly	28 21 1	76-5170	Chain - Pump Drive	45 12 1
75-5470	Washer	28 14 4	76-5180	Washer - Copper	21 1 4
75-7570	Key - Rectangular	72 42 1	76-5190	Fitting - Adjustable	21 2 2
75-7570	Key - Rectangular	74 62 1	76-5200	Fuel Filter Assembly	20 23 1
75-7580	Cover - Drive Housing R.H.	71 2 1	76-5200	Fuel Filter Assembly	21 3 1
75-7590	Cover - Drive Housing L.H.	73 44 1	76-5220	Element - Filter	21 5 1
75-7660	Base - Pivot	87 10 1	76-5260	Relay - Glow Plug	16 21 1
75-7660	Base - Pivot	88 11 1	76-5260	Relay - Glow Plug	52 1 1
75-7680	Deflector - Grass	73 32 1	76-5270	Cable - Glow Plug	52 2 4
75-7680	Deflector - Grass, R.H./Ctr.	71 10 1	76-5280	Plug - Glow	52 3 4
75-7710	Barrel - Pivot	85 7 1	76-5290	Washer - Spring	52 4 4
75-7710	Barrel - Pivot	86 7 1	76-5310	Washer - E.T.L.W.	52 7 1
75-7720	Shaft	85 1 1	76-5330	Screw - Cap Hex. Hd.	46 1 2
75-7720	Shaft	86 5 1	76-5340	Plug - Drain	46 2 2
75-7730	Washer - Thrust	85 5 1	76-5350	Gasket - Drain Plug	46 3 2
75-7730	Washer - Thrust	86 13 1	76-5360	Cover - Collector	46 5 1
75-7740	Spacer	85 10 1	76-5370	Ring - Retaining	46 6 1
75-7740	Spacer	86 10 1	76-5380	Temperature Sending Unit	46 7 1
75-7750	Plate - Fixed Head	85 9 1	76-5400	Switch - Temp. 105°C	46 8 1
75-7750	Plate - Fixed Head	86 9 1	76-5410	Gasket - Collector	46 9 1
75-7770	Bolt - U	85 11 4	76-5420	Housing - Collector	46 10 1
75-7770	Bolt - U	86 11 4	76-5430	Thermostat 81°C	46 11 1
75-7770	Bolt - U	87 11 4	76-5450	Gasket - Thermostat	46 12 1
75-7770	Bolt - U	88 12 4	76-5460	Gasket - Collector Housing	46 13 1
75-8100	Cover	87 13 1	76-5470	Screw - Cap Hex. Hd.	46 14 2
75-8100	Cover	88 14 1	76-5480	Gasket - Water Pump	47 1 1
75-9550	Valve - Check	26 7 6	76-5490	Water Pump Assembly	47 2 1
76-1960	Knob - Seat Adjustment	90 11 1	76-5500	Screw - Cap Hex. Hd.	47 3 5
76-3580	Spacer	71 39 2	76-5510	Injector - Fuel	49 1 4
76-3580	Spacer	74 65 2	76-5520	Holder - Fuel Injector	49 2 4
76-3600	Plate - End, L.H. (11 Blade)	72 73 1	76-5530	Washer	49 3 4
76-3600	Plate - End, L.H. (11 Blade)	74 66 1	76-5540	Bushing - Injector	49 4 4
76-3610	Plate - End, R.H. (11 Blade)	71 38 1	76-5550	Gasket - Fuel Injector	49 5 4
76-3610	Plate - End, R.H. (11 Blade)	74 73 1	76-5560	Fuel Injector Assembly	49 6 4
76-3620	Bedknife (11 Blade)	71 * 1	76-5570	Washer-Lock	51 2 2
76-3620	Bedknife (11 Blade)	74 * 1	76-5580	Starter	51 3 1
76-4100	Shaft - Reel Speed	16 38 1	76-5590	Sleeve - Spring	51 4 1
76-4120	Bracket - Engine R.H.	33 17 1	76-5610	Pinion - Output	5 1 1
76-4160	Plate - Cover	34 58 1	76-5630	Gear - Spur	5 3 1
76-4170	Support - Axle	55 16 2	76-5640	Gasket	5 4 1
76-4170	Support - Axle	59 60 2	76-5650	Washer - Thrust	5 8A 3
76-4180	Boot	8 44 2	76-5660	Pin-Dowel	5 6 2
76-4190	Gear - Axle	58 39 1	76-5670	Seal-Oil	5 7 2
76-4200	Gear - Motor	58 36 1	76-5680	Shim - Orange	5 52 A/R
76-4220	Bracket - Engine L.H.	34 82 1	76-5680	Washer - Thrust	5 8 1
76-4230	Guide - Exhaust Manifold	34 56 2	76-5690	Washer - Thrust	5 9 2
76-4240	Plate - Adaptor	7 1 2	76-5700	Bearing-Thrust	5 10 1
76-4260	Bushing	64 2 2	76-5710	Plug-Magnetic - Drain	5 11 1
76-4260	Bushing	67 3 1	76-5720	Screw - Hex Hd.	5 12 13
76-4260	Bushing - Sleeve	55 10 2	76-5740	Shim - White	5 * A/R
76-4270	Arm - Drag Link	67 1 1	76-5750	Case Assembly	5 15 1
76-4300	Lever - Throttle	16 7 1	76-5760	Cover Assembly	5 16 1
76-4310	Bracket - Battery Base	34 88 1	76-5770	Gear - Output	5 17 1
76-4880	Plug - Electrical	15 2 1	76-5780	Gear - Spur	5 18 1
76-4910	Stud	48 35 3	76-5790	Gear - Cluster	5 19 1
76-4930	Washer	48 37 3	76-5800	Shaft - Counter	5 20 1
76-4940	Pulley - Pump	48 38 1	76-5810	Shaft & Gear - Shifter	5 21 1
76-4950	Nut - Flange	48 39 1	76-5820	Screw - Hex Flanged Hd.	5 22 1
76-4960	Flange	48 40 1	76-5830	Ball - Steel	5 23 1
76-4970	Screw - Shoulder	50 1 1	76-5840	Spring - Shifter Fork	5 24 1
76-4980	Bracket - Mounting	50 4 1	76-5850	Seal - Oil	5 25 1
76-4990	Bolt - Slide	50 5 1	76-5860	Bearing - Needle	5 26 2
76-5000	Bolt - Adjusting	50 6 1	76-5870	Bearing - Needle	5 27 3
76-5010	Washer - Spring	50 7 1	76-5880	Bearing - Needle	5 28 1
76-5020	Washer - Flat	50 8 1	76-5890	Ring - Retaining	5 30 2
76-5030	Bracket - Slide	50 9 1	76-5900	Fork - Shift	5 35 1
76-5040	Belt - V	50 10 1	76-5910	Rod - Shift (High-Low)	5 36 1
76-5050	Alternator	50 13 1	76-5920	Gear - Ring	5 37 1
76-5060	Screw - Cap Hex. Hd.	50 14 1	76-5930	Block - Drive	5 38 2
76-5070	Oil Pump Assembly	45 1 1			

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
76-5940	Pin - Drive	5	39	1	76-7210	Washer - Thrust	65	11	2
76-5950	Pinion - Bevel	5	40	2	76-7220	Washer - Thrust	65	8	2
76-5960	Carrier	5	41	1	76-7230	Washer - Lock	65	5	4
76-5970	Bearing - Ball	5	42	2	76-7240	Ring - Gear	65	2	1
76-5980	Screw - Hex Flanged Hd.	5	43	6	76-7250	Shaft - Drive	65	1	1
76-5990	Carrier - Differential	5	45	1	76-7260	Bolt	65	6	8
76-6000	Gear - Bevel	5	47	2	76-7270	Pin - Spring	65	7	1
76-6010	Spacer	5	49	2	76-7280	Bearing	65	12	2
76-6010	Spacer - Transaxle	7	38	2	76-7290	Shim - 0.1 mm	65	13 A/R	
76-6020	Washer - Thrust	5	50	2	76-7300	Shim - 0.2 mm	65	* A/R	
76-6030	Seal - Oil	5	51	1	76-7310	Shim - 0.3 mm	65	* A/R	
76-6040	Plug - Pipe	4	47	1	76-7320	Sleeve	63	4	1
76-6040	Plug - Pipe	5	14	2	76-7330	Bearing	63	11	1
76-6270	Foam - Cover	18	7	1	76-7340	Seal - Oil	63	6	1
76-6280	Bracket - Hose	86	4	2	76-7350	Bushing	63	7	1
76-6280	Bracket - Hose	88	7	1	76-7360	O-Ring	63	10	1
76-6300	Gerotor	13	16	1	76-7370	Bearing	63	1	1
76-6310	Screw-Cap	13	19	7	76-7380	Washer	63	8	1
76-6320	Spacer	13	17	1	76-7390	Nut - Lock	63	9	1
76-6330	Control Parts Assembly	13	*	1	76-7400	O-Ring	63	2	2
76-6340	Foam - Access Panel	2	45	1	76-7410	Shim - 0.1 mm	63	3 A/R	
76-6360	Strip - Seal	1	12	2	76-7420	Shim - 0.2 mm	63	* A/R	
76-6361	Strip - Seal Tower	2	49	1	76-7430	Shim - 0.4 mm	63	* A/R	
76-6362	Moulding - Outer	54	22	1	76-7450	Bolt - Stud	63	14	1
76-6363	Moulding - Inner	54	9	1	76-7460	Washer	63	13	1
76-6370	Foam - Hood Front	1	27	1	76-7470	Pipe	64	8	1
76-6380	Strip - Seal Access Panel	2	48	1	76-7480	Plug - Vent	64	7	1
76-6381	Seal - Strip	54	30	2	76-7490	Shaft - Differential	65	14	2
76-6382	Seal - Strip	54	36	2	76-7500	Bearing	65	15	4
76-6430	Foam - Hood Middle	2	32	1	76-7510	Pinion - 14T	65	17	2
76-6440	Foam - Hood Rear	2	33	1	76-7510	Pinion - 14T	66	10	2
76-6450	Strip - Seal Hood R.H.	2	*	1	76-7520	Shim - 0.1 mm	65	16 A/R	
76-6460	Strip - Seal Hood L.H.	2	36	1	76-7530	Shim - 0.2 mm	65	* A/R	
76-6470	Strip - Seal Hood Front	1	25	1	76-7540	Shim - 0.4 mm	65	* A/R	
76-6490	Element - Hydraulic Filter	26	41	1	76-7550	Ring - Retaining	65	18	2
76-6510	Brake Linkage Arm Assy.	8	33	2	76-7560	Case - Gear	66	1	2
76-6550	Hose - Hydraulic Rod End	55	7	1	76-7580	Seal - O-Ring	65	19	4
76-6570	Washer - Thrust	55	12	2	76-7590	Spacer	65	20	2
76-6570	Washer - Thrust	58	20	2	76-7600	Bolt - Reamer	65	21	2
76-6580	Motor - Hydraulic	58	33	1	76-7610	Bolt	65	23	6
76-6600	Pipe - Stand	20	4	1	76-7620	Washer - Lock	65	22	6
76-6610	Clevis - Brake	9	46	2	76-7630	Holder - 20 mm R.H.	66	*	1
76-6800	Chamber	54	8	1	76-7640	Bolt	66	5	8
76-6850	Pin - Cylinder (Cap End)	68	1	3	76-7640	Bolt	66	28	20
76-6860	Pin - Cylinder (Rod End)	68	20	3	76-7650	Shaft - Final Drive	66	2	2
76-6880	Hose - Hydraulic	8	10	1	76-7660	Holder - 25 mm L.H.	66	4	1
76-6900	Hose - Hydraulic Cap End	55	8	1	76-7670	Bearing	66	3	4
76-6910	Rotating Assembly	62	14	1	76-7680	Case - Final Drive	66	8	2
76-6920	Back Plate Assembly	62	2	1	76-7690	Nut	63	15	1
76-6930	Shaft - Drive	62	12	1	76-7700	Shim - 0.8 mm	67	25 A/R	
76-6940	Housing Assembly	62	6	1	76-7710	Bolt	67	8	2
76-6950	Race - Thrust	62	9	1	76-7720	Nut	67	9	4
76-6960	Bearing - Thrust	62	10	1	76-7730	Bushing	66	7	2
76-6970	Insert - Camplate	62	5	1	76-7740	Seal - Oil	66	6	2
76-6980	O-Ring	62	3	1	76-7750	Pinion - 15T	66	11	2
76-6990	Screw - Cap, Hex. Hd.	62	1	6	76-7760	Shim - 1.0 mm	67	* A/R	
76-7000	Ring - Retaining	62	8	2	76-7770	Cover	66	9	2
76-7010	Ring - Retaining	62	13	1	76-7780	Shim - 1.2 mm	67	* A/R	
76-7020	Spacer	62	11	1	76-7790	Shim - 1.4 mm	67	* A/R	
76-7040	Pad - Foot	18	3	1	76-7810	Holder - Bearing	66	19	2
76-7090	Cover - Console	18	6	1	76-7820	Shim - 1.0 mm	67	5 A/R	
76-7100	Housing - Axle A	64	1	1	76-7830	Shaft - Wheel	66	21	2
76-7110	Plug	64	5	1	76-7840	Gear - Bevel	66	13	2
76-7110	Plug	66	26	4	76-7850	Bearing	66	12	2
76-7120	Seal - Washer	64	6	1	76-7860	Bearing	66	18	2
76-7120	Seal - Washer	66	27	4	76-7870	Seal - Oil	66	20	2
76-7130	Housing - Axle B	64	3	1	76-7880	Spacer	66	15	2
76-7140	Plug	64	9	1	76-7890	Shim - 0.15 mm	66	14 A/R	
76-7150	Bolt	63	5	3	76-7900	Shim - 0.2 mm	66	* A/R	
76-7150	Bolt	64	4	8	76-7910	Shim - 0.4 mm	66	* A/R	
76-7160	Gear Case Assembly	65	*	1	76-7920	Ring - Retaining	66	16	2
76-7170	Case - Differential	65	3	1	76-7930	Ring - Retaining	66	17	2
76-7180	Pinion - Mate	65	10	2	76-7940	Arm - Tie Rod	67	2	1
76-7190	Gear - Side	65	9	2	76-7950	Bushing	67	4	1
76-7200	Shaft - Pinion	65	4	1	76-7960	Fitting - Grease	66	30	2

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
76-7960	Fitting - Grease	67 21 2	76-9310	Spacer	86 16 1
76-7970	Shim - 1.4 mm	67 * A/R	76-9340	Fender R.H.	2 * 1
76-7980	Shim - 1.2 mm	67 * A/R	76-9350	Latch - Lockup Front	68 37 2
76-7990	Shim - .08 mm	67 * A/R	76-9360	Latch - Lockup Center	68 7 1
76-8000	Bolt	67 6 4	76-9370	Bar - R.O.P.S.	93 4 1
76-8010	Washer	67 7 2	76-9380	Plate - Skid	7 27 1
76-8020	Rod - Tie	67 22 1	76-9400	Hose - Hydraulic	8 3 2
76-8030	Rod End - L.H.	67 10 1	76-9410	Hose - Hydraulic	8 28 1
76-8040	Nut - L.H.	67 24 1	76-9410	Hose - Hydraulic	68 22 1
76-8050	Rod End - R.H.	67 16 1	76-9430	Spring - Extension	28 17 1
76-8060	Nut - R.H.	67 23 1	76-9440	Rod - Seat Prop	14 8 1
76-8120	Bolt - U	7 25 2	76-9450	Boot - Steering Column	11 20 1
76-8140	Bracket - Steering Gear	11 35 1	76-9460	Plate - Seat	14 37 1
76-8150	Support - Steering Shaft	11 39 1	76-9480	Sleeve - Seat Pivot	14 34 2
76-8160	Support - Steering Gear	11 1 1	76-9530	Hose - Hydraulic	12 48 1
76-8170	Hose - Hydraulic	24 37 4	76-9540	Hose - Hydraulic	54 20 2
76-8180	Hose - Hydraulic	58 10 1	76-9560	Hose - Hydraulic	11 45 1
76-8190	Decal - ReelmasterR 335D	2 34 2	76-9560	Hose - Hydraulic	24 41 1
76-8200	Hose - Hydraulic (Cap End)	58 15 1	76-9570	Hose - Hydraulic	11 44 1
76-8210	Hose - Hydraulic	24 7 2	76-9570	Hose - Hydraulic	24 10 1
76-8220	Hose - Hydraulic	24 8 2	76-9590	Hose - Hydraulic (Rod End)	58 14 1
76-8220	Hose - Hydraulic	68 31 2	76-9680	Bearing Housing Assembly	10 18 1
76-8230	Spring - Extension	8 42 2	76-9690	Rod - Brake Linkage	8 29 2
76-8250	Pin - Linkage Arm	8 36 2	76-9690	Rod - Brake Linkage	10 4 2
76-8260	Bracket - Transaxle Support	3 19 1	76-9700	Cover - Tower	1 2 1
76-8270	Rod - Clevis Adjusting	8 40 2	76-9710	Bracket - Bulkhead	9 52 1
76-8280	Mount - Throttle Cable	33 28 1	76-9720	Shaft - Brake	10 26 1
76-8290	Shroud - Lower R.H.	1 11 1	76-9760	Damper - Pivot	28 42 1
76-8300	Cover - Axle Housing	7 7 2	76-9780	Decal - 4 Matic	17 1 1
76-8340	Shaft - Tilt Steering	11 38 1	76-9790	Foam - Fuel Tank	20 2 1
76-8350	Stop - Axle	58 16 2	76-9800	Hood	1 28 1
76-8390	Tipper - Reel	86 1 1	76-9900	Hose - Hydraulic	18 32 1
76-8390	Tipper - Reel	88 2 1	76-9900	Hose - Hydraulic	68 41 1
76-8430	Support - Hood Front	1 13 1	76-9930	Foam - Seat Plate Rear	14 6 1
76-8440	Boot - Throttle	16 22 1	76-9950	Bracket - Ring	26 20 4
76-8450	Boot - Lift Lever	16 8 1	76-9970	Valve - Solenoid	58 1 1
76-8640	Stud - Traction	28 12 1	76-9980	Holder - Seal	34 66 1
76-8700	Panel - Gauge	17 2 1	76-9990	Seal - Air Intake	34 67 1
76-8710	Panel - Console	16 23 1	77-3250	Washer	50 16 1
76-8720	Panel - Steering Tower	11 14 1	77-3260	Washer	50 15 1
76-8740	Decal - Torque	7 21 2	77-3270	Manifold - Intake	44 4 1
76-8740	Decal - Torque	55 36 2	77-3280	Screw	44 2 5
76-8740	Decal - Torque	59 47 2	77-3290	Screw	44 3 4
76-8750	Plate - Caution	54 4 1	77-3300	Stud	44 7 6
76-8760	Decal	71 26 2	77-3310	Gasket	44 6 2
76-8760	Decal	73 10 2	77-3320	Nut - Hex	44 9 6
76-8770	Decal - Caution	53 10 1	77-3320	Nut - Lock	34 76 2
76-8780	Decal - Fuel	20 12 1	77-3340	Manifold - Exhaust	44 11 1
76-8810	Decal - Safety	10 42 1	77-3360	Screw	42 20 3
76-8830	Arm - Brake Linkage	10 24 2	77-3370	Screw	42 23 1
76-8850	Rod - Shift Linkage	3 1 1	77-3380	Pulley	42 21 1
76-8850	Rod - Shift Linkage	11 27 1	77-3390	Support	42 22 1
76-8860	Harness - Wire (Main)	24 16 1	77-3400	Camshaft	42 5 1
76-8860	Harness - Wire Main	15 6 1	77-3410	Key	42 4 1
76-8870	Lever Damper Assembly	28 43 1	77-3420	Gasket	42 3 2
76-8890	Pedal - Brake L.H.	10 21 1	77-3430	Belt	42 18 1
76-8930	Brake Pedal Assembly R.H.	10 23 1	77-3440	Screw	42 1 2
76-8950	Harness - Wire (Lamp)	17 * 1	77-3450	Washer	42 2 2
76-8960	Harness - Wire Reel	12 54 1	77-3460	Screw	42 6 1
76-8960	Harness - Wire Reel	15 1 1	77-3500	Roller Assembly	42 14 1
76-8960	Harness - Wire Reel	25 46 1	77-3510	Spring	42 13 1
76-8970	Harness - Wire #1	9 63 1	77-3520	Cup	42 12 1
76-8980	Harness - Wire (Reel)	24 6 2	77-3540	Roller Assembly	42 8 1
76-8990	Bolt - Cylinder	56 41 1	77-3550	Tank - Expansion	33 38 1
76-9030	Bearing Housing Assembly	10 30 1	77-3560	Cap	35 95 1
76-9050	Rod - Parking Brake	11 33 1	77-3570	Shield	43 15 1
76-9060	Gauge - Temperature	17 8 1	77-3580	Shield	43 14 1
76-9090	Arm - Reel Speed	16 36 2	77-3590	Shield	43 2 1
76-9100	Spacer - Rod Eye	3 3 1	77-3600	Plate - Cover	34 86 1
76-9160	Bracket - Hood Pivot L.H.	2 40 1	77-3620	Retainer - Cover	1 7 2
76-9170	Bracket - Hood Pivot R.H.	2 * 1	77-3620	Retainer - Cover	17 21 2
76-9190	Rod - Seat Spring	14 12 1	77-3620	Retainer - Cover	54 14 4
76-9200	Bumper	58 41 1	77-3640	Bearing	6 12 1
76-9290	Bracket - Bulkhead	58 7 1	77-3700	Gasket - Muffler	34 79 1
76-9300	Fender L. H.	2 46 1	77-3780	Pin - Lynch	14 3 1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
77-3790	Plug - Drain	36 26 1	82-5170	Plate - Pump Control	28 26 1
77-3800	Shield	43 6 1	82-5180	Control - Pump	28 24 1
77-3810	Shield	43 8 1	82-5190	Shaft - Traction Pedal	10 8 1
77-3820	Support - Shield	43 11 1	82-5210	Hose - Hydraulic	7 * 1
77-3830	Clip	43 3 4	82-5210	Hose - Hydraulic	31 38 1
77-3840	Grommet	43 4 1	82-5240	Plate - Pivot	28 41 1
77-3850	Ring - Snap	43 16 1	82-5250	Plate - Adapter	16 35 1
77-3860	Nut - Lock	43 13 1	82-5270	Bracket - Spring	28 16 1
77-3870	Washer - Flat	43 12 1	82-5280	Shaft - Pivot	28 30 1
77-3880	Bracket - Air Cleaner	34 80 1	82-5290	Rod - Traction Control	28 39 1
77-3890	Bracket - Hood Cable	33 33 1	82-5290	Rod - Traction Linkage	10 11 1
77-3890	Bracket - Hood Cable	41 37 1	82-5300	Support - Heel	18 1 1
77-3900	Screw - Cap Hex. Hd.	33 36 1	82-5310	Hydraulic Tube Assembly	31 18 1
77-3910	Bracket W.A. - Bumper	84 3 1	82-5320	Hydraulic Tube Assembly	31 9 1
77-3940	Bracket - Dethatcher	84 8 1	82-5330	Hydraulic Tube Assembly	32 42 1
77-3960	Washer - Seal	70 4 1	82-5330	Tube - Hydraulic	7 37 1
77-3970	Support - Relay	16 17 1	82-5340	Bracket - Pump	31 14 1
77-3990	Spark Arrester Muffler	34 * 1	82-5350	Hose - Hydraulic	32 44 1
77-4000	Shim Set	65 * 1	82-5360	Clamp - Tube	31 10 1
77-4010	Shim Set	63 * 1	82-5361	Clamp - Tube	31 17 1
77-4020	Shim Set	65 * 1	82-5370	Foam - R.O.P.S. Bar	93 7 2
77-4030	Shim Set	66 * 1	82-5380	Shim - Pinion .045"	3 42 A/R
77-4040	Shim Set	67 * 1	82-5390	Shim - Pinion .038"	3 * A/R
77-4050	Shim Set	67 * 1	82-5400	Shim - Pinion .052"	3 * A/R
77-4060	Spacer	24 17 2	82-9390	Nut - Special	72 71 2
77-4080	Hose - Hydraulic	9 62 1	82-9390	Nut - Special	74 71 2
77-4080	Hose - Hydraulic	59 72 1	84-0030	Shaft Assembly	6 3 1
77-4090	Hydraulic Motor Assembly	3 27 1	84-0080	Spiral Gear Set (Matched)	5 * 1
77-4100	Bracket - Rear, L.H.	94 16 1	84-0090	Shim - Blue	5 * A/R
77-4110	Bracket - Rear, R.H.	94 * 1	84-0130	Shim - Pink	5 * A/R
77-4120	Bracket W.A. - Front R.H.	94 3 1	84-0140	Shim - Brown	5 * A/R
77-4150	Bracket W.A. - Front, L.H.	94 1 1	84-0190	Link - Shift Linkage	3 4 1
77-4200	Harness - Wire Relay	20 37 1	84-0210	Gasket - End Cap	30 46 2
77-4250	Signal - Control	94 11 1	84-0220	Body - Center	30 45 1
77-4260	Arm - Shift Linkage	11 21 1	84-0230	Coupling	30 40 1
77-4340	Bedbar (11 Blade)	72 * 72 1	84-0240	Housing - Pump	30 24 1
77-4340	Bedbar (11 Blade)	74 * 72 1	84-0250	Swash Plate - Variable	30 1 2
77-4810	Block - Deflector (11 Blade)	72 * 2	84-0260	Bearing - Roller	30 12 4
77-4810	Block - Deflector (11 Blade)	74 * 2	84-0270	Spacer - Trunnion	30 10 4
77-6700	Wheel Weight Assembly	96 4 1	84-0280	Plate - Valve R.H.	30 25 1
80-3390	Wire Harness	94 5 1	84-0290	Plate - Valve L.H.	30 5 1
82-3060	Spacer - Adjustment	82 23 1	84-0300	Shaft - Pump	30 17 1
82-3070	Blade	83 * 20	84-0310	Bearing - Ball	30 18 1
82-3600	Shroud - Lower L.H.	2 42 1	84-0320	Ring - Retaining	30 19 1
82-3630	Foam - Screen L.H.	54 16 1	84-0330	Screw - Cap Hex. Hd.	30 16 8
82-3640	Foam - Screen R.H.	54 11 1	84-0340	Housing - Pump	30 37 1
82-3650	Foam - Screen Top	54 12 1	84-0350	Shaft - Pump	30 43 1
82-3660	Bracket - Cover	20 39 1	84-0360	Washer	30 15 8
82-3680	Counterbalance Tube Assy.	18 35 1	84-0370	Bearing - Ball	30 42 1
82-3700	Reservoir - Hydraulic	26 32 1	84-0380	Ring - Retaining Internal	30 23 2
82-3730	Screen - Radiator	54 15 1	84-0390	Ring - Retaining	30 41 1
82-3740	Oil Cooler Assembly	54 10 1	84-0400	Seal - Lip	30 20 1
82-3750	Cover - Console	17 20 1	84-0410	Carrier - Seal	30 21 1
82-3770	Panel - Access	2 47 1	84-0430	Seal - O-Ring	30 8 4
82-4690	Pad - Brake	10 15 2	84-0440	Cover - Trunnion	30 7 2
82-4870	Decal - Service	18 5 1	84-0450	Cover - Trunnion	30 44 2
82-4880	Decal - Service	18 * 1	84-0460	Screw	30 6 16
82-4900	Foam - Seat Front	14 7 1	84-0470	Seal - Lip	30 9 2
82-4910	Roller	68 36 4	84-0480	Poppet - Charge Relief	30 32 1
82-4920	Frame Assembly	1 6 1	84-0490	Spring - Compression	30 33 1
82-4930	Front Transaxle Assembly	3 12 1	84-0500	Charge Relief Plug Assy.	30 35 1
82-4950	Retractable Spring Plunger	11 5 1	84-0520	Plug - Special	30 31 4
82-4970	Ring - Retaining	6 17 1	84-0530	Valve - Screw 175 BAR	30 47 2
82-4990	Housing - Fixed	6 9 1	84-0540	Valve - Screw 345 BAR	30 26 2
82-5030	Arm - Traction Linkage	10 13 1	84-0550	Ring - Retaining	30 27 4
82-5050	Screw - Cap Hex. Hd.	28 22 2	84-0560	Seal - O-Ring	30 30 4
82-5080	Hose - Hydraulic	12 47 1	84-0570	Shim - Trunnion Kit	30 11 4
82-5080	Hose - Hydraulic	31 32 1	84-0580	Shim - Charge Relief Kit	30 36 1
82-5100	Tandem Pump Assembly	28 8 1	84-0650	Valve - Velocity Fuse	9 59 1
82-5110	Hose - Suction	27 50 1	84-0660	Bracket - Bumper	68 16 2
82-5110	Hose - Suction	31 27 1	84-0810	Skid - L.H.	83 47 1
82-5120	Plate - Adaptor	33 24 1	84-0820	Skid - R.H.	83 * 1
82-5130	Lever - Reel	28 6 1	84-0840	Fitting - Hydraulic 45°	31 34 1
82-5160	Rod - Reel Lever	16 34 1	84-0850	Hose - Hydraulic	18 22 1
82-5160	Rod - Reel Lever	28 1 1			

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
84-0850	Hose - Hydraulic	31 35 1	237-22	Seal - O-Ring	31 25 2
84-0880	Spacer - Skid	81 7 2	237-22	Seal - O-Ring	55 4 4
84-0880	Spacer - Skid	83 * 2	237-22	Seal - O-Ring	58 6 5
84-0890	Hose - Hydraulic	27 52 1	237-22	Seal - O-Ring	68 25 4
84-0890	Hose - Hydraulic	31 26 1	237-30	Seal - O-Ring	3 32 1
84-0900	Hose - Hydraulic	26 11 1	237-30	Seal - O-Ring	8 14 2
84-0900	Hose - Hydraulic	31 16 1	237-30	Seal - O-Ring	14 16 1
84-1480	Hose - Dampner	28 47 1	237-30	Seal - O-Ring	18 21 1
84-6040	Housing - Roller Adj. R.H.	78 * 1	237-30	Seal - O-Ring	26 3 5
84-6040	Housing - Roller Adj. R.H.	79 * 1	237-30	Seal - O-Ring	31 15 3
84-6040	Housing - Roller Adj. R.H.	80 * 1	237-42	Seal - O-Ring	8 22 2
84-6050	Housing - Roller Adj. L.H.	78 * 1	237-42	Seal - O-Ring	18 8 5
84-6050	Housing - Roller Adj. L.H.	79 * 1	237-42	Seal - O-Ring	25 49 2
84-6050	Housing - Roller Adj. L.H.	80 * 1	237-42	Seal - O-Ring	59 51 2
84-6070	Shaft	79 * 1	237-42	Seal - O-Ring	68 23 4
84-6070	Shaft - Roller	78 * 1	237-54	O-Ring	78 17 2
84-6070	Shaft - Roller	80 * 1	237-54	O-Ring	79 10 2
84-6080	Assembly - Roller, 33.25"	78 * 1	237-54	O-Ring	80 10 2
84-6090	Bolt - Shoulder	72 58 4	237-54	Seal - O-Ring	76 5 2
84-6090	Bolt - Shoulder	73 30 4	237-65	Seal - O-Ring	3 23 2
84-6100	Assembly - Collar	73 42 2	237-65	Seal - O-Ring	6 5 1
84-6100	Assembly - Collar	78 * 2	237-65	Seal - O-Ring	7 32 2
84-6100	Assembly - Collar	79 * 2	237-65	Seal - O-Ring	8 2 6
84-6100	Assembly - Collar	80 * 2	237-65	Seal - O-Ring	18 34 1
84-6100	Assembly - Collar	82 27 2	237-65	Seal - O-Ring	24 29 6
84-6100	Assembly - Collar	71 11 2	237-65	Seal - O-Ring	26 12 3
84-6140	Roller, 33.25"	79 * 1	237-65	Seal - O-Ring	31 3 6
84-6150	Assembly - Roller, 33.25"	79 * 1	237-65	Seal - O-Ring	54 21 6
84-6170	Roller - Tube, 33.25"	80 * 1	237-65	Seal - O-Ring	58 2 9
84-6180	Assembly - Roller, 33.25"	80 * 1	237-65	Seal - O-Ring	89 5 1
84-8010	Skid - L.H.	81 8 1	237-78	Seal - O-Ring	31 8 5
84-8020	Skid - R.H.	81 11 1	237-78	Seal - O-Ring	56 44 2
86-2710	Hose - Hydraulic	58 30 1	237-78	Seal - O-Ring	59 56 2
86-2720	Hose - Hydraulic	3 * 1	237-79	Seal - O-Ring	3 26 3
86-2720	Hose - Hydraulic	59 70 1	237-79	Seal - O-Ring	9 64 1
86-2730	Hose - Hydraulic	58 22 1	237-79	Seal - O-Ring	11 41 4
86-2740	Hose - Hydraulic	31 1 1	237-79	Seal - O-Ring	18 19 2
86-2740	Hose - Hydraulic	58 3 1	237-79	Seal - O-Ring	26 5 2
86-2750	Hose - Hydraulic	3 24 1	237-79	Seal - O-Ring	31 31 1
86-2750	Hose - Hydraulic	31 19 1	237-79	Seal - O-Ring	59 67 4
86-2760	Hose - Hydraulic	3 22 1	237-79	Seal - O-Ring	89 1 3
86-2760	Hose - Hydraulic	31 2 1	237-80	O-Ring	60 2 2
86-2770	Tube - Hydraulic	58 18 1	237-80	Seal - O-Ring	26 8 5
86-3000	Head - Hydraulic Filter	26 40 1	237-80	Seal - O-Ring	30 14 3
217-122	Rim	55 31 2	237-80	Seal - O-Ring	31 5 6
217-122	Rim	59 44 2	237-81	Seal - O-Ring	8 19 2
217-123	Rim	7 22 2	237-81	Seal - O-Ring	26 33 3
218-446	Nut - Hex.	17 4 1	237-81	Seal - O-Ring	58 32 2
218-447	Washer - Lock	17 3 1	237-136	Grommet	14 20 2
218-456	Flasher	94 6 1	237-146	Seal - O-Ring	31 30 1
218-461	Nut - Hex	14 11 2	237-161	Seal - O-Ring	28 45 1
218-492	Clip - Wire	94 4 2	237-166	Seal - O-Ring	58 28 1
218-497	Facenut - Beveled	94 10 1	237-167	Seal - O-Ring	3 28 1
218-498	Nut - Lock	94 9 1	240-3	Grommet	7 29 2
218-500	Nut - Hex.	17 6 1	240-3	Grommet	9 53 2
218-573	Fuse - 5A	16 43 2	240-3	Grommet	24 40 3
218-581	Fuse - 15A	16 * 1	240-4	Grommet	8 8 1
218-591	Coil Assembly	60 6 1	240-4	Grommet	24 32 1
218-592	Nut - Coil	60 7 1	240-6	Grommet	20 18 3
218-593	Fuse - 30A	16 * 1	241-119	Cap - Hub	7 19 2
219-17	Bulb - Warning Light	17 * 4	241-119	Cap - Hub	55 34 2
2112-9	Clamp - Muffler	34 73 1	242-34	Stud Drive	7 13 10
232-27	Stem - Valve	7 16 2	242-50	Nut - Cone	73 17 2
232-27	Stem - Valve	55 32 2	242-50	Nut - Cone	71 23 2
232-27	Stem - Valve	59 46 2	242-50	Nut - Lug	55 37 10
233-17	Knob - Parking Brake	11 15 1	249-49	Ring - D	26 22 4
233-39	Knob - Throttle	16 6 1	249-50	Clip - Wire	68 48 3
233-42	Knob	18 15 3	2410-18	Plug	97 2 1
237-7	Seal - O-Ring	14 19 1	2410-64	Plug - Dome	11 25 2
237-21	Seal - O-Ring	8 27 1	2410-69	Plug - Hole	68 38 1
237-22	O-Ring	84 1 1	2410-73	Pin - Tether	26 28 1
237-22	Seal - O-Ring	8 5 7	2411-36	Eye - Rod	3 2 1
237-22	Seal - O-Ring	11 43 4	2411-36	Eye - Rod	8 31 2
237-22	Seal - O-Ring	18 24 4	2411-36	Eye - Rod	10 2 3
237-22	Seal - O-Ring	24 11 11	2411-36	Eye - Rod	11 13 1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
2411-36	Eye - Rod	16	32	2	285-17	Plug - Socket Pipe	68	43	3
2411-36	Eye - Rod	28	31	2	285-22	Plug - Pipe	20	27	1
2411-45	Joint - Ball R.H.	56	*	1	289-44	Nipple - Pipe	3	15	1
2411-46	Joint - Ball L.H.	56	46	1	289-50	Nipple - Pipe	3	41	1
2412-3	Clamp - Hose	33	21	2	2811-1	Fitting - 45° Elbow	54	38	1
2412-3	Clamp - Hose	54	34	2	2812-1	Fitting - Reducing Bushing	20	26	1
2412-32	Clamp - R	16	2	1	2812-11	Fitting - Reducing Bushing	3	11	1
2412-34	Clamp - Hose	27	49	1	2813-14	Fitting - Pipe Elbow 90°	3	14	1
2412-34	Clamp - Hose	31	28	1	302-2	Fitting - Grease	10	20	1
2412-74	Clamp - R	12	50	1	302-2	Fitting - Grease	56	52	1
2412-74	Clamp - R	14	29	1	302-2	Fitting - Grease	59	64	1
2412-74	Clamp - R	58	29	1	302-2	Fitting - Grease	68	12	3
2412-96	Clamp - Hose	33	45	1	302-2	Fitting - Grease	85	3	1
2412-102	Clamp - R	7	39	1	302-2	Fitting - Grease	86	3	1
2412-104	Clamp - R	1	16	1	302-5	Fitting - Grease	3	35	1
2412-104	Clamp - R	34	83	1	302-5	Fitting - Grease	8	38	2
2412-104	Clamp - R	94	19	1	302-5	Fitting - Grease	10	27	3
2412-108	Clamp - Hose	20	5	12	302-5	Fitting - Grease	28	9	1
2412-108	Clamp - Hose	26	25	2	302-5	Fitting - Grease	76	2	2
2412-108	Clamp - Hose	33	30	8	302-5	Fitting - Grease	71	35	2
2412-108	Clamp - Hose	54	42	1	302-5	Fitting - Grease	73	1	2
2412-119	Clamp - Hose	33	44	3	302-5	Fitting - Grease	78	10	2
2412-119	Clamp - Hose	40	15	4	302-5	Fitting - Grease	79	6	2
2412-122	Clamp Assembly	56	48	2	302-5	Fitting - Grease	80	6	2
2412-123	Tie Rod Assembly	56	50	1	302-11	Fitting - Grease	16	39	1
2412-125	Clamp - Hose	34	50	1	302-11	Fitting - Grease	55	23	2
2412-126	Clamp - R	24	19	2	302-14	Breather	3	10	1
2412-129	Clamp - Hose	35	92	9	302-40	Fitting - Grease 90°	82	1	2
2412-129	Clamp - Hose	36	8	4	304-46	Fitting - Radiator Drain	54	37	1
2412-130	Clamp - Hose	35	93	1	321-2	Screw - Cap Hex. Hd.	16	19	1
2412-133	Clamp - R	14	2	2	321-2	Screw - Cap Hex. Hd.	20	34	1
251-259	Bearing - Ball	28	13	2	321-2	Screw - Cap, Hex. Hd.	94	7	2
253-84	Seal - Oil	16	11	1	321-4	Screw - Cap Hex. Hd.	14	26	1
253-117	Seal - Grease	76	3	2	321-8	Screw - Cap Hex. Hd.	18	29	1
253-122	Seal - Grease	76	8	2	321-8	Screw - Cap Hex. Hd.	24	24	2
253-122	Seal - Grease	78	20	2	321-8	Screw - Cap Hex. Hd.	56	54	1
253-122	Seal - Grease	79	13	2	321-8	Screw - Cap Hex. Hd.	59	74	1
253-122	Seal - Grease	80	13	2	321-9	Screw - Cap Hex. Hd.	10	31	3
253-129	Seal - Inner	55	26	2	321-9	Screw - Cap Hex. Hd.	31	12	2
253-145	Seal	71	31	3	321-10	Screw - Cap Hex. Hd.	18	10	2
253-145	Seal	73	5	3	321-11	Screw - Cap, Hex. Hd.	84	7	1
253-145	Seal	82	5	3	321-15	Screw - Cap Hex. Hd.	59	69	2
253-165	Seal - Grease	79	8	2	321-15	Screw - Cap Hex. Hd.	86	15	2
253-165	Seal - Grease	80	8	2	321-18	Screw - Cap Hex. Hd.	86	17	2
253-165	Seal - Outer	78	15	2	321-18	Screw - Cap Hex. Hd.	88	1	4
254-72	Cup - Bearing	55	28	4	322-1	Screw - Cap Hex. Hd.	7	5	6
254-78	Cone - Bearing	76	6	2	322-2	Bolt	82	18	6
254-78	Cone - Bearing	78	18	2	322-2	Screw - Cap Hex. Hd.	14	38	2
254-78	Cone - Bearing	79	11	2	322-2	Screw - Cap Hex. Hd.	77	7	6
254-78	Cone - Bearing	80	11	2	322-2	Screw - Cap Hex. Hd.	81	5	6
254-79	Cup - Bearing	76	7	2	322-3	Screw - Cap Hex. Hd.	34	53	8
254-79	Cup - Bearing	78	19	2	322-3	Screw - Cap Hex. Hd.	54	40	3
254-79	Cup - Bearing	79	12	2	322-3	Screw - Cap Hex. Hd.	77	3	2
254-79	Cup - Bearing	80	12	2	322-3	Screw - Cap Hex. Hd.	90	15	4
254-94	Cone - Bearing	55	27	4	322-4	Screw - Cap Hex. Hd.	10	41	2
256-10	Bushing - Flange	1	4	2	322-4	Screw - Cap Hex. Hd.	91	5	4
256-10	Bushing - Flange	10	22	4	322-5	Screw - Cap Hex. Hd.	16	9	1
256-32	Bushing - Sleeve	1	8	2	322-6	Screw - Cap Hex. Hd.	28	48	2
256-49	Bushing - Sleeve	8	34	2	322-7	Screw - Cap Hex. Hd.	28	15	1
256-90	Bushing - Flange	10	19	1	322-7	Screw - Cap Hex. Hd.	32	43	1
256-113	Bushing - Flange	28	10	2	322-10	Screw - Cap Hex. Hd.	28	7	2
256-113	Bushing - Flange	83	45	2	322-16	Screw - Cap Hex. Hd.	33	26	2
256-237	Bushing - Sleeve	1	5	1	323-4	Screw - Cap Hex. Hd.	27	44	3
256-252	Bushing - Flange	72	59	2	323-6	Screw - Cap Hex. Hd.	11	3	4
256-252	Bushing - Flange	73	31	2	323-6	Screw - Cap Hex. Hd.	16	31	4
256-252	Bushing - Flange	82	13	2	323-6	Screw - Cap Hex. Hd.	28	18	1
256-292	Bushing - Nyliner	72	57	4	323-6	Screw - Cap, Hex. Hd.	84	10	2
256-292	Bushing - Nyliner	73	29	4	323-7	Bolt	74	55	4
256-311	Bushing - Steel Back	87	4	1	323-7	Screw - Cap Hex. Hd.	3	21	2
256-311	Bushing - Steel Back	88	3	1	323-7	Screw - Cap Hex. Hd.	8	37	2
257-5	Washer	73	16	4	323-7	Screw - Cap Hex. Hd.	20	20	2
257-5	Washer - Thrust	71	21	4	323-7	Screw - Cap Hex. Hd.	28	37	2
283-2	Pin - Clevis	9	45	2	323-7	Screw - Cap Hex. Hd.	68	46	4
283-58	Pin - Clevis	2	30	1	323-7	Screw - Cap Hex. Hd.	72	54	4
283-58	Pin - Clevis	33	34	1					

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
323-8	Screw - Cap Hex. Hd.	3 39 1	3234-4	Screw - Hex. Flange Hd.	3 34 2
323-8	Screw - Cap Hex. Hd.	11 22 1	3234-5	Screw - Hex. Washer Hd.	34 69 5
323-8	Screw - Cap Hex. Hd.	28 46 1	3234-11	Screw - Hex. Flange Hd.	34 60 2
323-9	Screw - Cap Hex. Hd.	10 14 1	3234-11	Screw - Hex. Washer Hd.	33 16 6
323-9	Screw - Cap Hex. Hd.	33 3 1	3234-11	Screw - Hex. Washer Hd.	80 23 2
323-9	Screw - Cap Hex. Hd.	92 3 2	3234-12	Screw - Cap Hex. Hd.	55 18 2
323-10	Screw - Cap Hex. Hd.	68 28 6	3234-12	Screw - Flange	82 14 2
323-11	Screw - Cap Hex. Hd.	68 49 3	3234-12	Screw - Flange Hd.	71 17 2
323-12	Screw - Cap Hex. Hd.	10 29 2	3234-12	Screw - Flange Hd.	73 28 2
323-17	Screw - Cap Hex. Hd.	18 13 1	3234-12	Screw - Hex. Flange Hd.	3 18 2
323-29	Screw - Cap Hex. Hd.	28 23 3	3234-12	Screw - Hex. Washer Hd.	2 41 9
323-33	Screw - Cap Hex. Hd.	33 8 2	3234-12	Screw - Hex. Washer Hd.	20 1 2
323-34	Screw - Cap Hex. Hd.	1 19 2	3234-12	Screw - Hex. Washer Hd.	54 29 7
323-34	Screw - Cap Hex. Hd.	20 24 7	3234-13	Screw - Hex. Washer Hd.	26 35 2
323-34	Screw - Cap Hex. Hd.	33 6 1	3234-14	Screw - Flange	82 37 2
323-50	Bolt - Self Tapping	68 27 3	3234-14	Screw - Flange Hd.	71 1 2
324-6	Bolt	71 4 2	3234-14	Screw - Flange Hd.	73 45 2
324-6	Screw - Cap Hex. Hd.	31 23 1	3234-14	Screw - Hex. Flange Hd.	10 17 2
324-6	Screw - Cap Hex. Hd.	73 37 2	3234-14	Screw - Hex. Flange Hd.	54 1 12
324-6	Screw - Cap Hex. Hd.	82 31 2	3234-14	Screw - Hex. Flange Hd.	92 5 6
324-12	Screw - Cap Hex. Hd.	33 13 3	3234-14	Screw - Hex. Washer Hd.	2 38 4
325-2	Screw - Cap Hex. Hd.	3 37 1	3234-17	Screw - Cap Hex. Hd.	12 51 1
325-2	Screw - Cap Hex. Hd.	93 5 2	3234-17	Screw - Hex. Washer Hd.	34 48 1
325-4	Screw - Cap Hex. Hd.	7 28 1	3234-27	Screw - Cap Hex. Hd.	59 42 2
325-4	Screw - Cap Hex. Hd.	58 35 2	3234-27	Screw - Cap Hex. Hd.	81 9 2
325-5	Screw - Cap Hex. Hd.	7 34 2	3234-27	Screw - Flange	83 48 2
325-5	Screw - Cap Hex. Hd.	68 8 3	3234-27	Screw - Hex. Washer Hd.	54 32 2
325-5	Screw - Cap Hex. Hd.	82 29 2	3234-27	Screw - Hex. Washer Hd.	55 17 2
325-6	Screw - Cap Hex. Hd.	81 2 2	3234-32	Screw - Cap Hex. Hd.	55 13 6
325-7	Bolt	82 10 6	3234-32	Screw - Cap Hex. Hd.	59 62 6
325-7	Screw - Cap Hex. Hd.	72 43 4	3234-32	Screw - Cap Hex. Hd.	86 12 1
325-7	Screw - Cap Hex. Hd.	78 4 4	3234-32	Screw - Hex. Washer Hd.	85 4 1
325-7	Screw - Cap Hex. Hd.	79 17 4	3234-34	Screw	71 27 8
325-7	Screw - Cap Hex. Hd.	80 16 4	3234-34	Screw - Cap Hex. Hd.	73 8 8
325-7	Screw - Cap Hex. Hd.	81 10 2	3246-17	Screw - Set	24 2 4
325-7	Screw - Cap Hex. Hd.	73 20 4	3246-17	Screw - Set	75 14 2
325-9	Screw - Cap Hex. Hd.	14 36 2	3246-17	Screw - Set	83 56 1
325-9	Screw - Cap Hex. Hd.	8 41 2	3247-2	Screw - Set	58 19 1
325-9	Screw - Cap Hex. Hd.	81 13 2	3249-11	Screw - Round Hd.	28 29 2
325-9	Screw - Cap Hex. Hd.	83 * 2	3253-3	Washer - Lock	18 28 1
325-15	Screw - Cap Hex. Hd.	7 26 10	3253-4	Washer - Lock	7 6 6
325-15	Screw - Cap Hex. Hd.	8 4 10	3253-4	Washer - Lock	34 52 4
325-20	Screw - Cap Hex. Hd.	55 14 2	3253-4	Washer - Lock	77 4 8
325-20	Screw - Cap Hex. Hd.	58 23 2	3253-4	Washer - Lock	81 4 6
325-33	Screw - Cap Hex. Hd.	93 3 2	3253-4	Washer - Lock	82 19 6
328-25	Screw - Cap Hex. Hd.	56 42 1	3253-4	Washer - Lock	90 16 4
328-25	Screw - Cap Hex. Hd.	59 54 2	3253-4	Washer - Lock	91 6 4
3210-7	Screw - Cap Hex. Hd.	56 49 2	3253-6	Washer - Lock	93 10 2
3211-4	Screw - Cap Hex. Hd.	87 3 4	3253-7	Washer - Lock	93 6 2
3211-4	Screw - Cap Hex. Hd.	88 6 4	3253-15	Washer - Lock	20 30 5
3211-8	Screw - Cap Hex. Hd.	87 5 4	3253-21	Washer - Lock	1 18 2
3211-8	Screw - Cap Hex. Hd.	88 8 4	3253-21	Washer - Lock	5 44 6
3212-5	Screw - Cap Hex. Hd.	93 9 2	3253-21	Washer - Lock	11 2 4
3217-7	Nut - Hex.	28 20 1	3253-21	Washer - Lock	20 21 9
3218-2	Nut - Jam	10 40 2	3253-21	Washer - Lock	27 45 3
3218-2	Nut - Jam	16 10 1	3253-21	Washer - Lock	33 7 3
3218-3	Nut - Jam	68 29 3	3253-21	Washer - Lock	87 2 8
3218-5	Nut - Jam	71 22 2	3253-21	Washer - Lock	88 5 8
3218-5	Nut - Jam	73 15 2	3254-4	Washer - Lock	82 41 1
3218-6	Nut - Jam	33 27 1	3255-7	Washer - E.T.L.W.	16 44 1
3218-7	Nut - Jam	87 8 1	3255-8	Washer - E.T.L.W.	25 45 1
3218-7	Nut - Jam	88 16 1	3255-8	Washer - Lock	33 22 2
3220-3	Nut - Jam	3 40 1	3255-8	Washer - Lock E.T.L.W.	16 41 1
3220-3	Nut - Jam	8 30 2	3256-1	Washer - Flat	16 16 1
3220-3	Nut - Jam	10 3 3	3256-2	Washer	91 7 4
3220-3	Nut - Jam	11 11 1	3256-2	Washer - Flat	77 5 2
3220-3	Nut - Jam	16 33 2	3256-2	Washer - Flat	90 8 8
3220-3	Nut - Jam	28 2 2	3256-3	Washer	14 21 1
3220-7	Nut - Jam	76 12 1	3256-3	Washer	17 22 2
3220-7	Nut - Jam	78 13 1	3256-3	Washer - Flat	2 37 2
3220-7	Nut - Jam	79 20 1	3256-3	Washer - Flat	10 43 1
3220-7	Nut - Jam	80 20 1	3256-3	Washer - Flat	16 28 2
3230-16	Bolt - Carriage	91 2 4	3256-3	Washer - Flat	28 32 2
3231-22	Bolt - Carriage	2 44 2	3256-3	Washer - Flat	32 41 2
3234-4	Screw - Cap Hex. Hd.	58 8 1	3256-3	Washer - Flat	35 91 3

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3256-4	Washer	31 22 1	3290-483	Washer - Belleville	68 6 3
3256-5	Washer - Flat	93 11 2	3296-2	Nut - Lock	1 23 2
3256-22	Washer	24 23 2	3296-2	Nut Lock	17 12 1
3256-22	Washer	31 11 2	3296-8	Nut - Lock	72 48 8
3256-22	Washer - Flat	11 32 1	3296-8	Nut - Lock	74 70 8
3256-22	Washer - Flat	14 27 1	3296-8	Nut - Lock	86 14 4
3256-22	Washer - Flat	18 27 1	3296-8	Nut - Lock	88 17 4
3256-22	Washer - Flat	56 55 2	3296-9	Nut - Lock	28 33 2
3256-22	Washer - Flat	59 75 2	3296-12	Nut - Lock	16 45 2
3256-23	Washer - Flat	14 39 2	3296-15	Nut - Lock	76 1 1
3256-23	Washer - Flat	54 2 6	3296-15	Nut - Lock	79 7 1
3256-24	Washer - Flat	1 17 2	3296-15	Nut - Lock	80 7 1
3256-24	Washer - Flat	10 37 1	3296-25	Nut - Lock	68 5 3
3256-24	Washer - Flat	18 14 2	3296-25	Nut - Lock	71 13 4
3256-24	Washer - Flat	20 11 9	3296-25	Nut - Lock	73 40 4
3256-24	Washer - Flat	27 46 3	3296-25	Nut - Lock	78 6 4
3256-24	Washer - Flat	33 4 4	3296-25	Nut - Lock	79 18 4
3256-25	Washer - Flat	71 6 1	3296-25	Nut - Lock	80 17 4
3256-25	Washer - Flat	73 19 1	3296-25	Nut - Lock	81 6 6
3256-25	Washer - Flat	32 30 1	3296-25	Nut - Lock	82 25 8
3256-26	Washer - Flat	7 9 3	3296-25	Nut - Lock	93 8 2
3256-26	Washer - Flat	11 28 4	3296-26	Nut - Lock	72 51 4
3256-26	Washer - Flat	14 35 2	3296-26	Nut - Lock	74 57 4
3256-26	Washer - Flat	93 2 4	3296-28	Nut - Lock	72 49 1
3256-27	Washer - Flat	9 55 4	3296-28	Nut - Lock	73 23 1
3256-28	Washer - Flat	16 12 2	3296-28	Nut - Lock	82 9 4
3256-28	Washer - Flat	55 15 4	3296-29	Nut - Lock	28 5 4
3256-28	Washer - Flat	58 25 1	3296-29	Nut - Lock	31 40 1
3256-28	Washer - Flat	93 12 2	3296-29	Nut - Lock	90 7 4
3256-39	Washer - Flat	74 58 1	3296-29	Nut - Lock	91 3 4
3256-49	Washer - Flat	14 5 1	3296-39	Nut - Lock	8 39 2
3256-59	Washer - Flat	72 50 1	3296-39	Nut - Lock	18 17 1
3256-71	Washer - Flat	28 35 3	3296-41	Nut - Lock	16 5 1
3257-3	Key - Woodruff	83 52 1	3296-42	Nut - Lock	10 33 1
3258-19	Screw - Rd. Head Machine	53 2 2	3296-42	Nut - Lock	16 15 1
3272-1	Pin - Cotter	18 11 6	3296-42	Nut - Lock	20 36 1
3272-5	Pin - Cotter	11 30 2	3296-42	Nut - Lock	24 18 2
3272-6	Pin - Cotter	9 47 2	3296-42	Nut - Lock	31 21 2
3272-10	Pin - Cotter	1 29 1	3296-42	Nut - Lock	84 11 1
3272-10	Pin - Cotter	11 29 1	3296-45	Nut - Lock	8 43 2
3272-10	Pin - Cotter	33 32 1	3296-45	Nut - Lock	56 53 2
3272-12	Pin - Cotter	56 40 2	3296-45	Nut - Lock	59 65 2
3272-13	Pin - Cotter	55 35 2	3296-47	Nut - Lock	16 40 1
3272-50	Pin - Cotter	68 2 6	3296-47	Nut - Lock	28 49 2
3274-19	Screw - Cap Socket Hd.	10 12 1	3296-47	Nut - Lock	54 24 5
3274-68	Screw - Socket Button Hd.	17 18 4	3296-47	Nut - Lock	85 8 8
3274-75	Screw - Button Hd.	97 1 1	3296-47	Nut - Lock	86 8 8
3274-87	Screw - Flat Hd. Socket	7 2 12	3296-47	Nut - Lock	87 9 8
3284-3	Pin - Roll	14 24 1	3296-47	Nut - Lock	88 10 8
3290-126	Screw - Hex. Washer Hd.	16 26 2	3296-48	Nut - Lock	71 9 2
3290-271	Rivet - Pop	54 5 2	3296-48	Nut - Lock	73 33 2
3290-282	Rivet - Pop	14 4 1	3296-48	Nut - Lock	82 15 2
3290-307	Pin - Hair	14 22 1	3296-49	Nut - Hex.	68 26 3
3290-317	Washer - Wave	68 35 8	3296-49	Nut - Lock	11 10 2
3290-357	Hut - Flange Lock	68 13 4	3296-51	Nut - Lock	16 13 1
3290-357	Nut - Flange	84 9 2	3296-51	Nut - Lock	55 11 3
3290-357	Nut - Flange Lock	1 20 4	3296-51	Nut - Lock	58 17 3
3290-357	Nut - Flange Lock	3 20 1	3296-59	Nut - Lock	3 5 1
3290-357	Nut - Flange Lock	16 29 1	3296-59	Nut - Lock	8 32 2
3290-357	Nut - Flange Lock	28 34 1	3296-59	Nut - Lock	10 1 4
3290-357	Nut - Flange Lock	34 87 6	3296-59	Nut - Lock	11 12 1
3290-359	Screw - Round Hd.	1 22 2	3296-59	Nut - Lock	16 30 4
3290-378	Tie - Cable	3 43 3	3296-59	Nut - Lock	28 4 4
3290-378	Tie - Cable	9 57 5	3296-67	Nut - Axle	7 20 2
3290-378	Tie - Cable	12 53 1	32103-3	Nut - Wing	97 4 1
3290-378	Tie - Cable	24 5 3	32104-82	Screw - Hex. Flange Hd.	2 50 1
3290-378	Tie - Cable	26 1 2	32105-12	Screw - Hex. Hd.	17 15 1
3290-378	Tie - Cable	32 46 1	32107-11	Nut	53 9 2
3290-378	Tie - Wire	94 13 10	32108-101	Screw - Flat Hd.	72 47 4
3290-379	Tie - Cable	33 37 3	32108-101	Screw - Flat Head	74 69 4
3290-379	Tie - Cable	54 18 2	32120-15	Ring - Retaining	58 38 2
3290-440	Washer - Belleville	72 61 2	32120-19	Ring - Retaining	8 35 4
3290-440	Washer - Belleville	74 46 2	32120-22	Ring - Retaining	7 23 2
3290-440	Washer - Belleville	82 34 2	32120-42	Ring-Retaining	69 14 1
3290-477	Washer - Curved	28 36 2	32121-2	Pin - Roll	71 24 2

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
32121-2	Pin - Roll	73 21 2	32151-72	Retainer - Push-On	17 23 2
32121-6	Pin - Roll	3 38 1	32151-72	Retainer - Push-On	54 13 4
32121-6	Pin - Roll	11 26 1	32151-73	Ring - Clip	28 38 1
32121-6	Pin - Roll	16 14 2	32151-96	Ring - Retaining	58 26 2
32121-6	Pin - Roll	68 33 4	32152-5	Nut - Lock	56 47 2
32121-10	Pin - Roll	11 7 1	32153-4	Nut - Lock	56 57 1
32121-11	Pin - Roll	10 32 2	32153-4	Nut - Lock	59 77 1
32121-11	Pin - Roll	72 74 4	3333-975	Tie - Cable	12 55 1
32121-11	Pin - Roll	74 74 4	340-2	Fitting - Hydraulic Straight	9 61 1
32121-24	Pin - Roll	3 9 1	340-2	Fitting - Hydraulic Straight	18 23 3
32121-25	Pin - Roll	10 25 2	340-2	Fitting - Hydraulic Straight	68 24 3
32121-50	Pin - Roll	10 35 1	340-3	Fitting - Hydraulic Straight	18 36 1
32121-50	Pin - Roll	72 67 1	340-4	Fitting - Hydraulic Straight	18 20 1
32121-50	Pin - Roll	74 49 1	340-6	Fitting - Hydraulic Straight	26 4 1
32121-50	Pin - Roll	82 39 1	340-7	Fitting - Hydraulic Straight	31 4 3
32121-123	Pin - Roll	11 9 2	340-8	Fitting - Hydraulic Straight	26 39 1
32122-24	Screw - Round Hd.	20 31 5	340-17	Fitting - Hydraulic 90°	31 36 1
32122-30	Screw - Truss Hd.	94 14 4	340-55	Fitting - Hydraulic 45°	4 44 1
32127-47	Nut - Lock, Flex	78 21 1	340-68	Fitting - Hydraulic Tee	9 58 1
32128-13	Nut - Flange Lock	34 75 2	340-70	Nut - Bulkhead	8 12 1
32128-15	Nut - Flange	72 44 2	340-70	Nut - Bulkhead	24 9 5
32128-15	Nut - Flange	73 22 2	340-70	Nut - Bulkhead	55 6 2
32128-19	Nut - Flange Lock	34 55 2	340-70	Nut - Bulkhead	58 9 3
32128-19	Nut - Flange Lock	92 2 2	340-72	Fitting - Hydraulic 90°	24 42 2
32128-20	Nut - Flange Lock	34 70 10	340-72	Fitting - Hydraulic 90°	8 1 2
32128-20	Nut - Lock	10 36 2	340-72	Fitting - Hydraulic 90°	54 25 2
32128-20	Nut - Lock	12 52 1	340-74	Nut - Bulkhead	7 36 2
32128-20	Nut - Lock	68 14 2	340-74	Nut - Bulkhead	9 50 2
32128-23	Nut - Flange Lock	7 10 4	340-74	Nut - Bulkhead	24 30 3
32128-23	Nut - Flange Lock	55 1 6	340-74	Nut - Bulkhead	54 26 2
32128-23	Nut - Flange Lock	58 4 8	340-74	Nut - Bulkhead	58 21 1
32128-25	Nut - Flange Lock	90 14 4	340-76	Fitting - Hydraulic Straight	25 47 1
32128-33	Nut - Flange Lock	17 17 4	340-77	Fitting - Hydraulic 90°	8 21 1
32128-33	Nut - Flange Lock	59 59 1	340-77	Fitting - Hydraulic 90°	25 48 2
32128-33	Nut - Lock	14 9 1	340-77	Fitting - Hydraulic 90°	59 50 1
32128-37	Nut - Flange Lock	31 20 1	340-77	Fitting - Hydraulic 90°	68 47 1
32128-37	Nut - Flange Lock	33 12 3	340-97	Fitting - Hydraulic 90°	56 45 2
32128-50	Nut - Flange Lock	7 8 4	340-97	Fitting - Hydraulic 90°	59 57 2
32136-5	Nut - Slotted	55 33 2	340-101	Fitting - Hydraulic 45°	3 31 1
32136-13	Nut - Slotted	55 39 2	340-105	Fitting - Hydraulic 90°	26 13 1
32144-1	Screw - Hex. Hd.	17 14 2	340-105	Fitting - Hydraulic 90°	31 24 2
32144-4	Screw - Hex. Flange Hd.	11 19 4	340-109	Fitting - Hydraulic Tee	26 19 1
32144-4	Screw - Hex. Hd.	14 33 1	340-110	Fitting - Hydraulic 90° El.	9 60 1
32144-4	Screw - Hex. Washer Hd.	16 1 11	340-117	Fitting - Hydraulic Cap	8 17 1
32144-4	Screw - Hex. Washer Hd.	17 11 6	340-120	Fitting - Hydraulic Tee	24 35 1
32144-4	Screw - Hex. Washer Hd.	26 21 2	340-138	Fitting - Hydraulic 45°	11 42 3
32144-11	Screw	18 2 2	340-139	Fitting - Hydraulic 90°	8 18 2
32144-11	Screw - Hex. Flange Hd.	10 28 4	340-139	Fitting - Hydraulic 90°	26 43 1
32144-11	Screw - Hex. Flange Hd.	55 9 2	340-139	Fitting - Hydraulic 90°	58 34 1
32144-11	Screw - Hex. Washer Hd.	1 14 10	340-152	Cap - Hydraulic	26 17 1
32144-11	Screw - Hex. Washer Hd.	11 23 4	340-153	Fitting - Hydraulic 90°	3 25 1
32144-11	Screw - Hex. Washer Hd.	26 36 2	340-153	Fitting - Hydraulic 90°	59 68 1
32144-11	Screw - Hex. Washer Hd.	34 89 2	340-153	Fitting - Hydraulic 90°	89 4 1
32144-11	Screw - Hex. Washer Hd.	59 58 2	340-154	Fitting - Hydraulic 90°	8 9 1
32144-11	Screw - Hex. Washer Hd.	68 10 3	340-155	Fitting - Hydraulic Straight	59 66 2
32144-11	Screw - Self Tapping	94 2 4	340-156	Fitting - Hydraulic 45°	58 31 1
32144-26	Screw - Hex. Flange Hd.	28 40 2	340-157	Fitting - Hydraulic Tee	59 71 1
32144-26	Screw - Hex. Flange Hd.	31 13 2	340-159	Fitting - Hydraulic 90°	84 2 1
32144-26	Screw - Hex. Washer Hd.	24 20 2	340-160	Fitting - Hydraulic	59 73 1
32144-107	Screw	87 12 4	340-160	Fitting - Hydraulic 90°	27 51 1
32144-107	Screw	88 13 4	353-508	Fitting - Hydraulic Plug	18 9 2
32148-9	Insert - Threaded	2 52 2	353-508	Plug - Hydraulic	59 52 1
32148-9	Insert - Threaded	20 38 3	353-551	Plug	26 15 3
32148-9	Insert - Threaded	35 98 1	353-551	Plug Assembly	30 13 3
32148-9	Insert - Threaded	54 43 8	354-77	Fitting - Test Port	31 7 5
32148-10	Insert - Threaded	54 44 2	354-78	Fitting - Hydraulic Hose	31 29 1
32149-2	Nut - Keps	94 18 2	354-79	Cap - Fitting (Yellow)	31 6 5
32149-7	Nut - Keps	94 15 4	354-87	Fitting - Hydraulic 90°	27 48 1
32151-10	Ring - Retaining	55 20 2	354-94	Fitting - Barb	20 16 1
32151-62	Ring - Retaining	3 30 1	354-95	Fitting - Barb	20 14 1
32151-71	Ring - Retaining	72 56 1	354-103	Fitting - Straight	26 23 1
32151-71	Ring - Retaining	83 57 1			
32151-71	Ring - Retaining	74 54 1			
32151-72	Retainer - Push-In	2 51 2			

*Not Illustrated

TABLE OF CONTENTS

Description	Page	Description	Page
Frame & Body Assembly	1-2	Differential & Shaft Assembly	
Front Transaxle Installation Assembly	3-4	Axle No. 74-5620 (Model No. 03601)	65
Transaxle No. 82-4930	5	Steering Gear Case Assembly	
Hydraulic Motor No. 77-4090	6	Axle No. 74-5620 (Model No. 03601)	66
Front Axle Assembly	7	Steering Arm Linkage Axle No. 74-5620	
Brake Linkage Assembly	8-9	(Model No. 03601)	67
Traction & Brake Pedals Assembly	10	Lift Arm Assembly	68
Steering Tower Assembly	11-12	Hydraulic Cylinder No. 74-3440	69
Power Steering Valve No. 74-3660	13	Hydraulic Cylinder No. 74-3460	70
Seat Plate Assembly	14	Cutting Unit Assembly No. 1 (Center) &	
Electrical Schematic	15	No. 3 (R.H.) 5 Blade Model No. 03753,	
Control Console Assembly	16	7 Blade Model No. 03756, & 11 Blade	
Gage Panel Assembly	17	Model No. 03751	71-72
Lift Valve Installation Assembly	18	Cutting Unit Assembly	
Lift Valve No. 69-1780	19	No. 2 (L.H.) 5 Blade Model No. 03752,	
Fuel Tank Assembly	20	7 Blade Model No. 03754, & 11 Blade	
Fuel Filter Assembly	21	Model No. 03741	73-74
Hydraulic Schematic Model No. 03600	22	Reel Motor	75
Hydraulic Schematic Model No. 03601	23	Rear Roller No. 59-5630	76
Front Hydraulic Assembly	24-25	Rear Roller Scraper (Optional)	77
Hydraulic Reservoir Assembly	26-27	Wiehle Roller Model No. 03644 (Optional)	78
Hydraulic Pump Installation Assembly	28	Sectional Roller Model No. 03648 (Optional) ..	79
Gear Pump Assembly No. 74-3420	29	Full Roller (Set of 3) Model No. 03646	
Tandem Pump Assembly No. 82-5100	30	(Optional)	80
Hydraulic Pump Fittings Assembly	31-32	Front Roller Scraper (Optional)	80
Engine Installation Assembly	33-35	Side Skid Kit Model No. 03650 (Optional)	81
Crankcase Assembly	36	Dethatcher Reel Assembly (Optional)	
Crankshaft Assembly	37-38	(No. 1 (Center) & 3 (R.H.) Model No. 03732)	
Cylinder Head Assembly	39-41	(No. 2 (L.H.) Model No. 03730)	82-83
Camshaft & Fan Support Assembly	42	Dethatcher Tipper Bracket Kit No. 77-4220	
Belt Cover Assembly	43	(Optional)	84
Intake & Exhaust Manifold Assembly	44	Fixed Head Kit Model No. 03642 (Optional)	
Oil Pump Assembly	45	(Cutting Unit No. 1 (Center))	85
Collector Assembly	46	Fixed Head Kit Model No. 03642 (Optional)	
Water Pump Assembly	47	(Cutting Unit No. 2 (R.H.) & 3 (L.H.))	86
Fuel Injection Pump Assembly	48	Cutting Unit Flotation Kit Model No. 03640	
Fuel Injector Assembly	49	(Optional) (Cutting Unit No. 1 (Center))	87
Alternator Assembly	50	Cutting Unit Flotation Kit Model No. 03640	
Starter Assembly	51	(Optional) (Cutting Unit No. 2 (R.H.) &	
Glow Plug & Glow Relay	52	3 (L.H.))	88
Air Cleaner No. 74-6000	53	Adjustable Counterbalance Kit No. 82-4940	
Radiator Assembly	54	(Optional)	89
Rear Axle Assembly		Deluxe Seat Assembly Model No. 30772	
(Model No. 03600)	55-56	(Optional)	90
Hydraulic Cylinder No. 74-5530		Low Seat Assembly (Optional)	91
(Model No. 03600)	57	Armrest Assembly Model No. 30707	
Rear Axle Assembly		(Optional)	92
(Model No. 03601)	58-59	R.O.P.S. Assembly	
Solenoid Valve Assembly No. 76-9970		(Standard For Model No. 03601)	
(Model No. 03601 Only)	60	(Optional For Model No. 03600)	93
Hydraulic Cylinder No. 74-3450		Light Kit Model No. 03654	94
(Model No. 03601)	61	Pre-Cleaner Assembly No. 48-7430	
Hydraulic Motor No. 76-6580		(Optional)	95
(Model No. 03601)	62	Front Wheel Weight Assembly No. 77-6700	
Sleeve Assembly Axle No. 74-5620		(Optional)	96
(Model No. 03601)	63	Special Tools	97
Axle Housing Assembly Axle No. 74-5620		Part Number Index	98-112
(Model No. 03601)	64		

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 335D has two identification numbers; a model number and a serial number. The two numbers are stamped on a decal which is located on the frame in the front left corner. In any correspondence concerning the Reelmaster 335D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 335D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any

reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.