



21in Commercial Lawn Mower

Model No. 22271 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front End and Tunnel Assembly	 3	Camshaft Pulley Assembly Honda GSV190LA S3A	 14
Wheel Assembly No. 114-2752	 4	Recoil Starter Assembly Honda GSV190LA S3A	 15
Rear Axle, Transmission and Discharge Chute Assembly	 5	Fan Cover Assembly Honda GSV190LA S3A	 16
Wheel Assembly No. 114-2753	 6	Carburetor Assembly Honda GSV190LA S3A	 17
Engine and Blade Assembly	 7	Air Cleaner Assembly Honda GSV190LA S3A	 18
Handle Assembly	 8	Muffler Assembly Honda GSV190LA S3A	 19
Rear Bag Assembly	 9	Fuel Tank Assembly Honda GSV190LA S3A	 20
Cylinder Barrel Assembly Honda GSV190LA S3A	 10	Flywheel Assembly Honda GSV190LA S3A	 21
Oil Pan Assembly Honda GSV190LA S3A	 11	Control Assembly Honda GSV190LA S3A	 22
Crankshaft Assembly Honda GSV190LA S3A	 12	Choke Lever Assembly Honda GSV190LA S3A	 23
Piston and Connecting Rod Assembly Honda GSV190LA S3A	 13	Label Assembly Honda GSV190LA S3A	 24

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HS. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- ① Obtain from your local Honda dealer

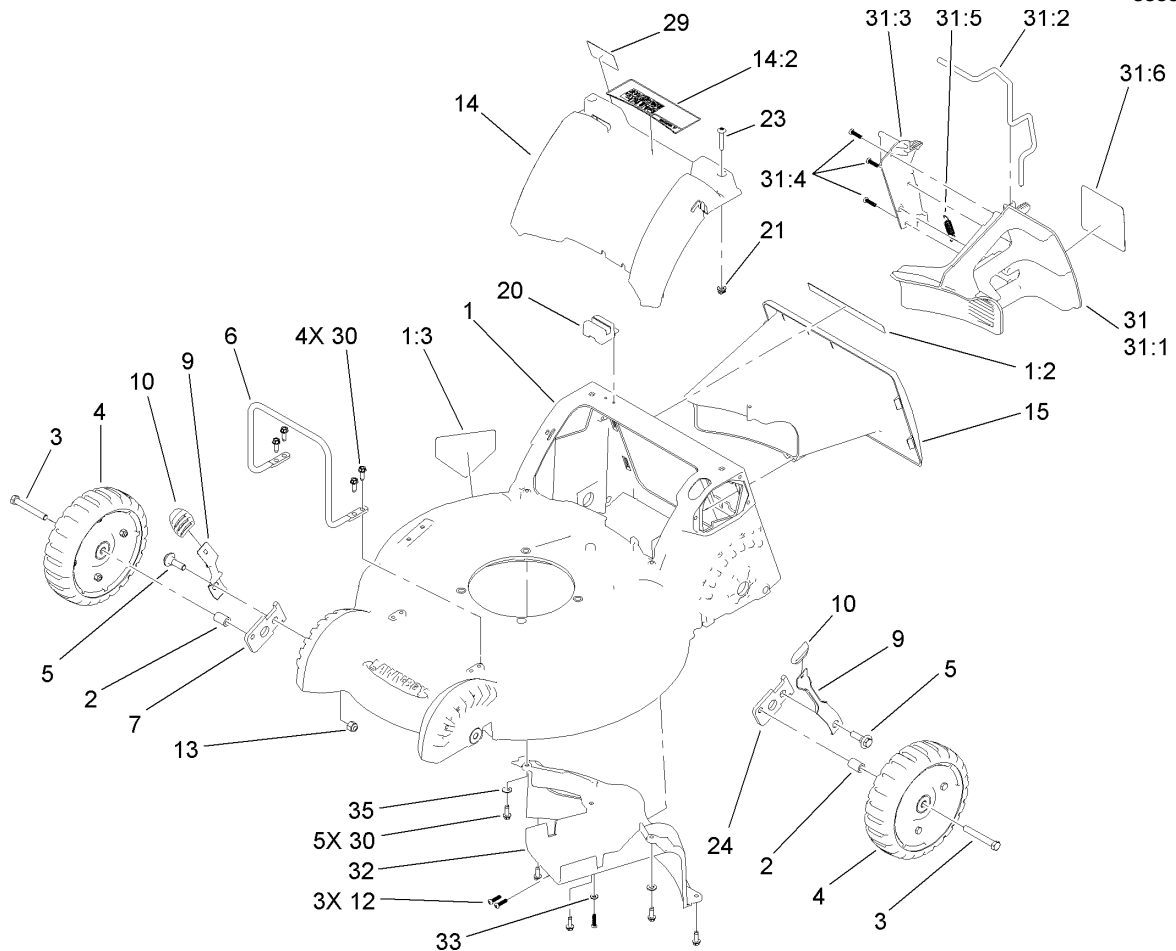


Front End and Tunnel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-8791	1	Housing	31:2	110-9448	1	Latch-Mulch Plug
1:2	107-3889	1	Decal-Safety	31:3	110-9447	1	Plug-Mulch, RH
1:3	94-8072	1	Decal-Danger	31:4	108-7476	3	Screw-Plastite
2	114-2754	2	Spacer	31:5	110-9458	1	Spring-Extension
3	323-13	2	Screw-HH	31:6	110-9457	1	Decal-Mulch Plug
4	114-2752	2	8 Inch Wheel ASM	32	110-9413	1	Baffle-Rear
5	614672	2	Bolt-Shoulder	33	3256-14	1	Washer-Flat
6	110-9475-03	1	Guard-Engine	35	3256-22	2	Washer-Flat
7	110-9421	1	Arm-Pivot, RH				
9	110-9434	2	Arm-Spring, Front				
10	105-3042	2	Knob-Lever, HOC				
12	108-7476	6	Screw-Plastite				
13	3296-39	2	Nut-Lock, NI				
14	108-9349	1	Cover-Rear				
14:2	107-3888	1	Decal-Safety				
15	110-9455	1	Tunnel				
20	110-1786	1	Module-Switch				
21	94-1610	2	Nut-Clip				
23	108-0965	2	Screw-PTH				
24	110-9420	1	Arm-Pivot, LH				
29	107-1938	1	Decal-Bag Attachment				
30	49-2040	9	Screw-HWHTF				
31	110-9468	1	Mulch Plug ASM				
31:1	110-9446	1	Plug-Mulch, LH				

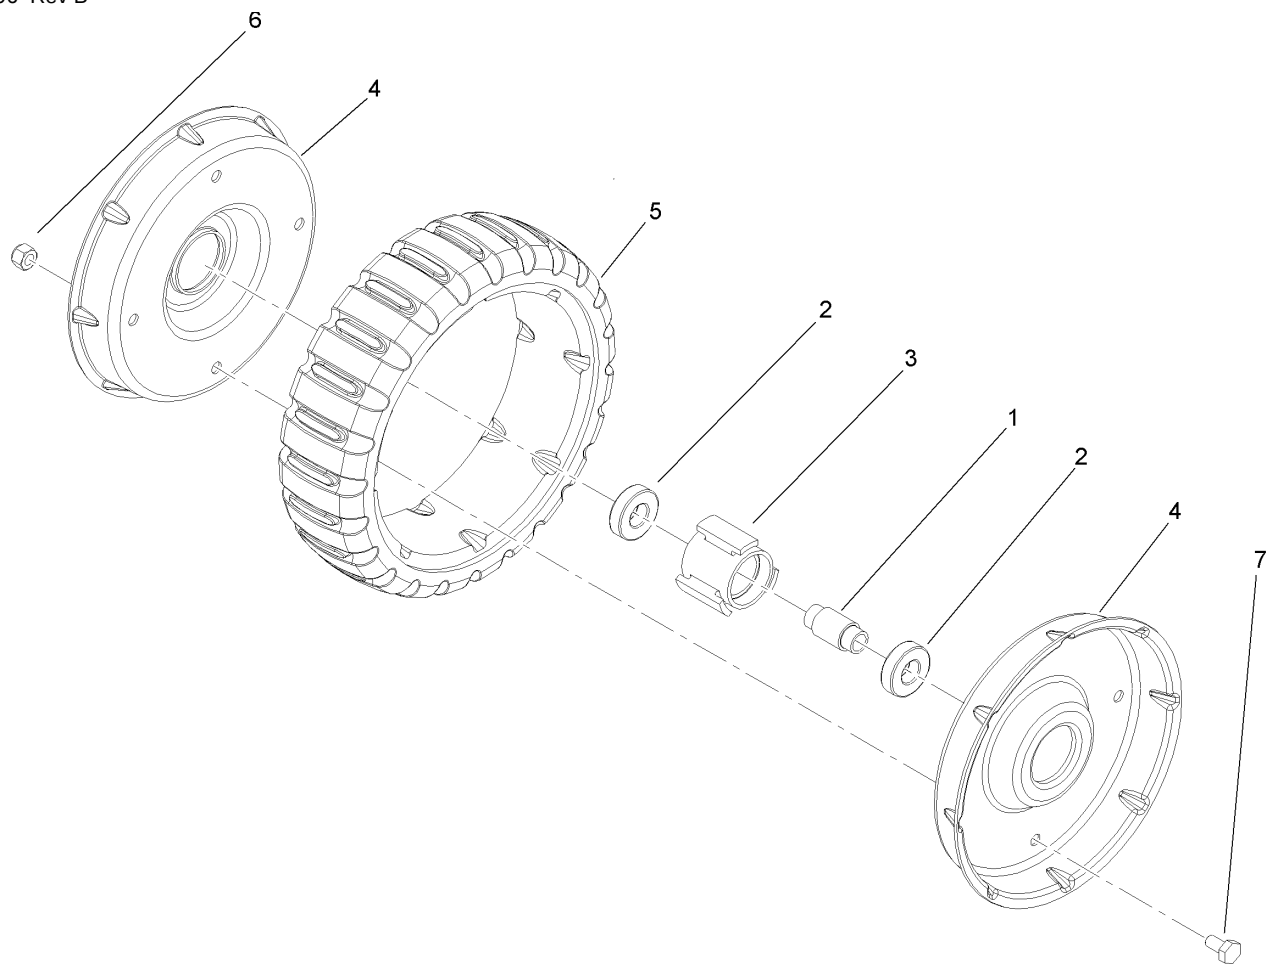 

Wheel Assembly No. 114-2752


Ref	Part No.	Qty.	Description				
1	52-2440	1	Spacer-Bearing				
2	52-2450	2	Bearing-Wheel				
3	52-2410	1	Hub-Bearing				
4	114-2750	2	Wheel Half				
5	110-9499	1	Tire-8 Inch				
6	3296-42	4	Nut-Lock, NI				
7	321-2	4	Screw-HH				

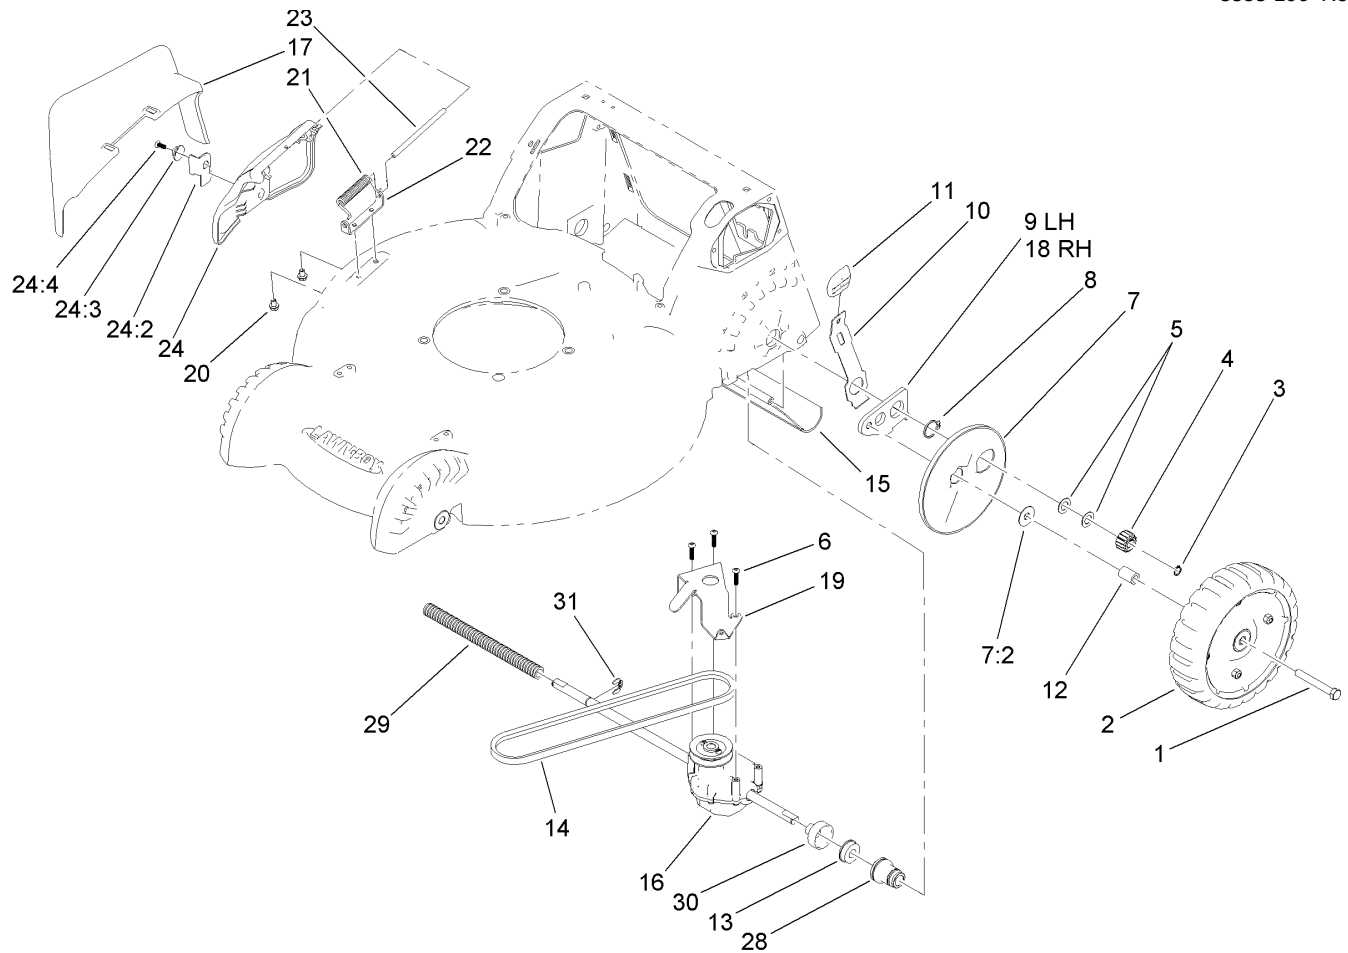 

Rear Axle, Transmission and Discharge Chute Assembly


Ref	Part No.	Qty.	Description
1	323-13	2	Screw-HH
2	114-2753	2	8 Inch Wheel ASM
3	32151-61	2	Ring-Retaining
4	110-9417	2	Pinion
5	36-4780	2	Washer-Plain
6	108-7476	3	Screw-Plastite
7	110-1793	2	Wheel Cover ASM
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	108-9344	1	Arm-Rear Pivot, LH
10	110-9445	2	Arm-Spring, Rear
11	110-0549	2	Knob-HOC
12	114-2754	2	Spacer
13	104-8699	2	Bearing-Ball
14	110-9429	1	V-Belt
15	112-8768	1	Shield-Trailing
16	110-9479	1	Transmission ASM
17	105-3028	1	Chute-Discharge, Side
18	108-9343	1	Arm-Rear Pivot, RH
19	110-9418-03	1	Bracket-Transmission
20	99-8445	2	Screw-HWH
21	99-5293	1	Spring-Torsion
22	112-6416	1	Bracket-Cover
23	99-5291	1	Rod-Cover

Ref	Part No.	Qty.	Description
24	106-8376	1	Discharge Door ASM
24:2	107-0795	1	Latch-Door
24:3	107-7456	1	Cap-Door
24:4	107-7461	1	Screw-Plastite
28	110-9422	2	Retainer-Bearing
29	24-7922	1	Cover-Shaft, Drive
30	114-2755	2	Cap-Bearing
31	65-2720	1	Ring-Clip, Locking

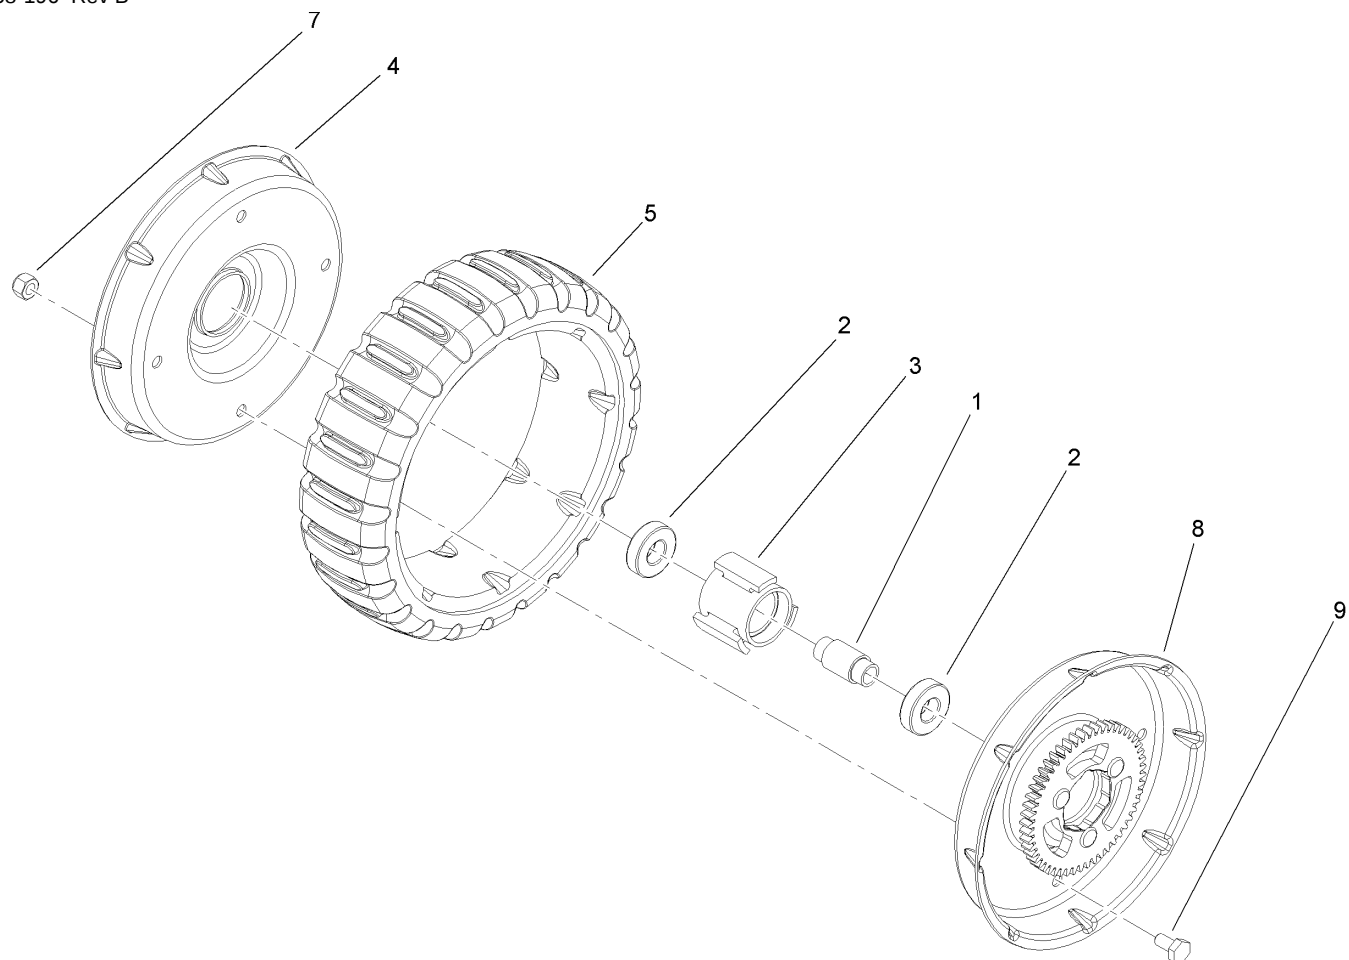 


Wheel Assembly No. 114-2753

Ref	Part No.	Qty.	Description
1	52-2440	1	Spacer-Bearing
2	52-2450	2	Bearing-Wheel
3	52-2410	1	Hub-Bearing
4	114-2750	1	Wheel Half
5	110-9499	1	Tire-8 Inch
7	3296-42	4	Nut-Lock, NI
8	114-2751	1	Hub And Gear ASM
9	321-2	4	Screw-HH

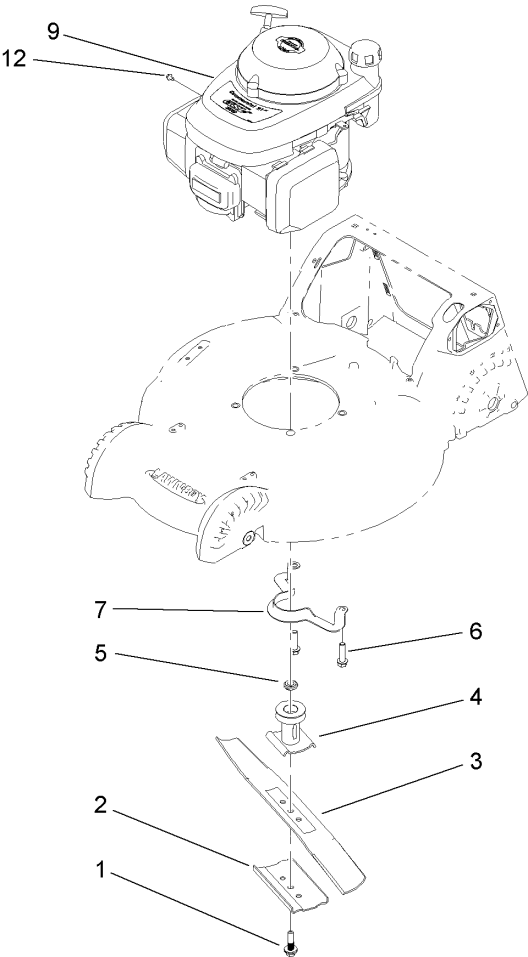 

Engine and Blade Assembly


Ref	Part No.	Qty.	Description				
1	112-8789	1	Bolt-Shoulder				
2	108-3766-03	1	Support-Blade				
3	108-3759-03	1	Blade-Bagging				
4	114-2774	1	Driver-Blade				
5	106-3999	1	Spacer-Driver				
6	32144-102	3	Screw-HWH				
7	108-8110-03	1	Guide-Belt				
9		1	Engine-Honda, Gsv190La S3A				
12	98-1394	1	Screw-HWH				

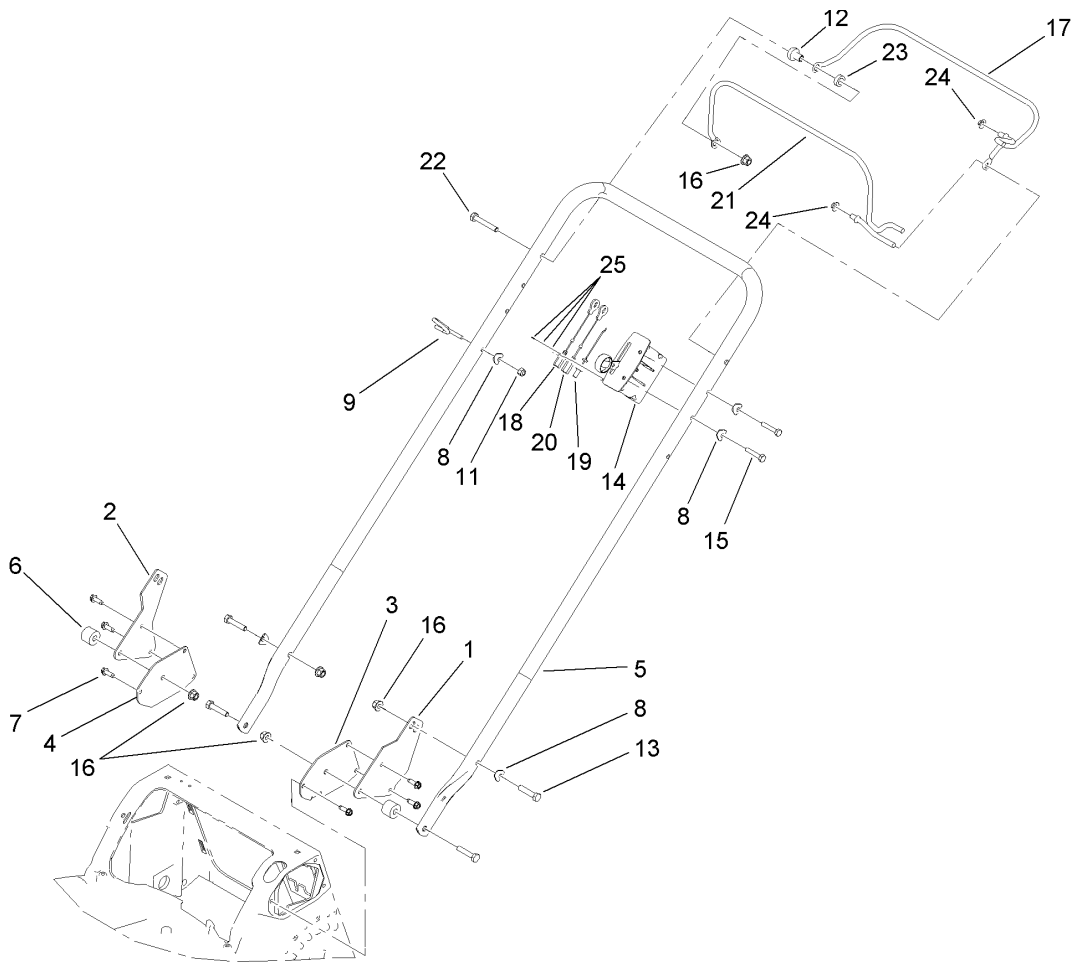 

Handle Assembly


Ref	Part No.	Qty.	Description				
1	110-9494-03	1	Support-Strut, LH				
2	110-9495-03	1	Support-Strut, RH				
3	114-2760-03	1	Plate-Handle, Traction				
4	110-9471-03	1	Plate-Handle				
5	107-4162-03	1	Handle				
6	112-8797-03	2	Spacer-Steamed				
7	49-2040	6	Screw-HWHTF				
8	3-7501	5	Washer				
9	114-2775	1	Guide-Rope				
11	3296-42	1	Nut-Lock, NI				
12	49-1630	1	Spacer-Support				
13	322-7	4	Screw-HH				
14	108-2645	1	Control-Head, Throttle				
15	321-13	2	Screw-HH				
16	3296-58	5	Nut-Lock, NI				
17	114-2768-03	1	Bail-Brake				
18	114-2771	1	Cable-Brake				
19	110-4923	1	Throttle Cable ASM				
20	114-2770	1	Cable-Traction				
21	114-2769-03	1	Bail-Traction				
22	322-10	1	Screw-HH				
23	256-276	1	Spacer-Nylon				
24	109-0917	2	Nut-Push				
25	32151-86	3	E-Ring				

 9

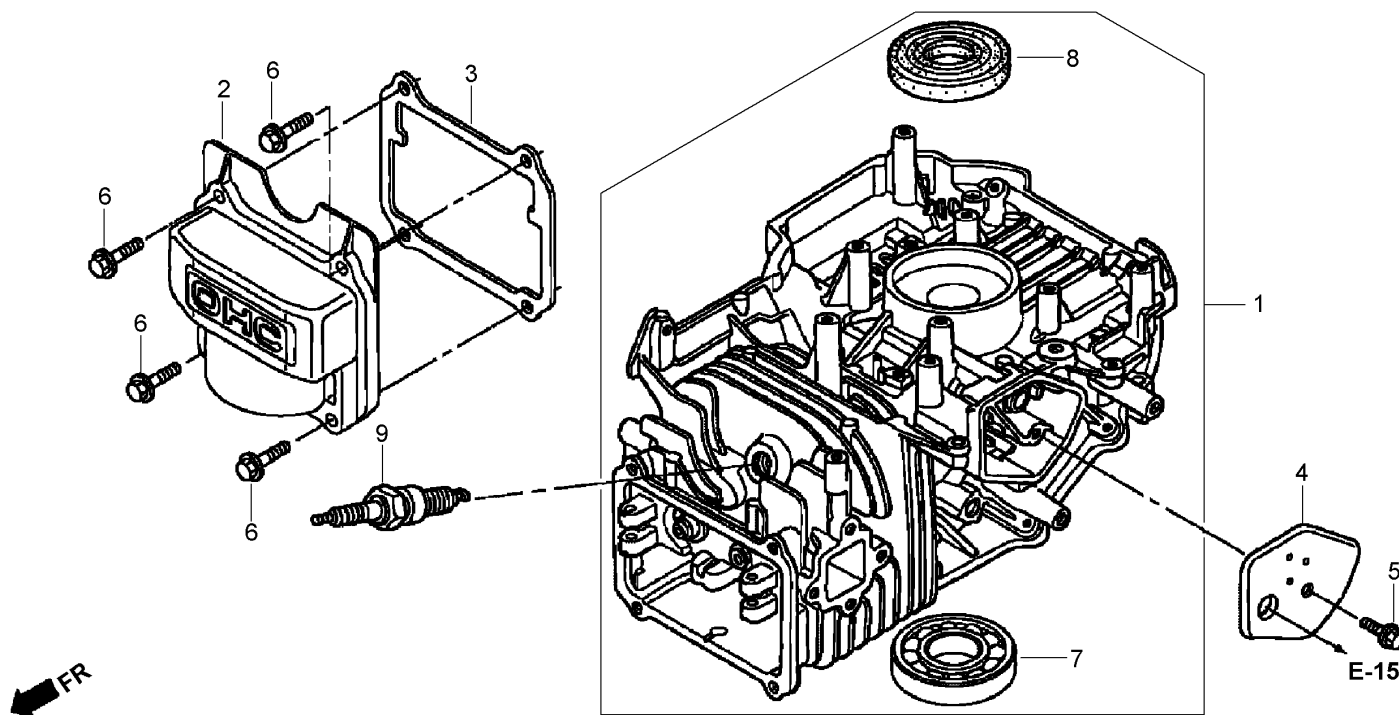

Cylinder Barrel Assembly Honda GSV190LA S3A


Ref	Part No.	Qty.	Description				
❶1	12000-Z2C-000	1	Cylinder ASM				
❶2	12311-Z2A-000	1	Cover-Head, Cylinder				
❶3	12312-Z2A-000	1	Gasket-Cover, Head				
❶4	12355-ZL8-000	1	Cover-Breather (Breather Valve ASM)				
❶5	90014-952-000	1	Bolt-Flange (6X14) (C T200)				
❶6	90121-952-000	4	Bolt-Flange (6X25) (C T 200)				
❶7	91001-894-004	1	Bearing-Ball, Radial				
❶8	91201-Z2A-003	1	Seal-Oil (25.4X74X6)				
❶9	98079-56846	1	Spark Plug (B P R 6E S) (N G K)				

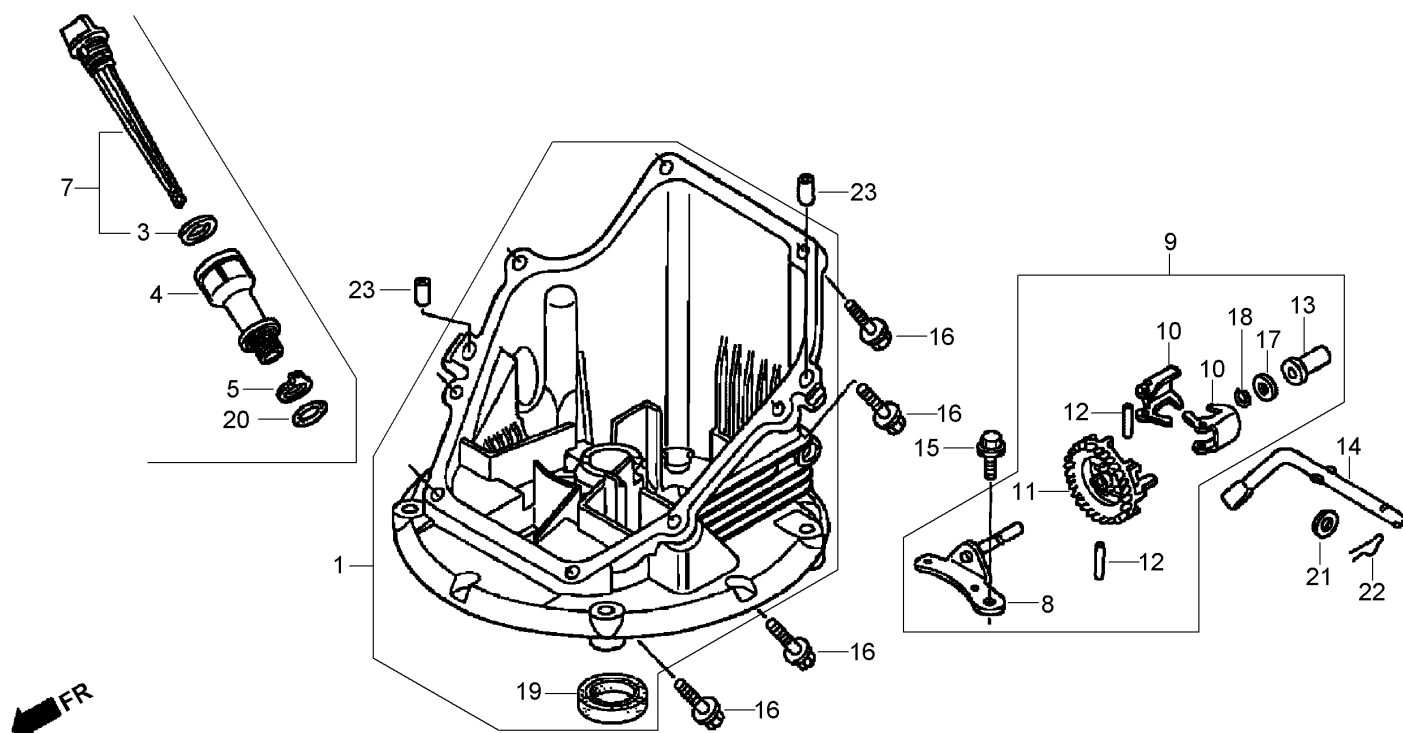 

Oil Pan Assembly Honda GSV190LA S3A


Ref	Part No.	Qty.	Description
❶1	11300-Z0Y-406	1	Oil Pan ASM
❶1	11300-Z2D-V10	1	Oil Pan ASM
❸3	15625-ZE6-000	1	Gasket-Cap, Oil Filler
❹4	15631-ZM0-000	1	Extension-Filler, Oil
❺5	15639-ZM0-000	1	Washer-Lock, Extension
❷7	15650-ZM0-801	1	Oil Level Gauge ASM
❸8	16508-ZM0-010	1	Shaft-Holder, Governor
❹9	16510-ZM0-010	1	Governor ASM
❶10	16511-ZL8-000	2	Weight-Governor
❶11	16512-ZM0-000	1	Holder-Weight, Governor
❶12	16513-ZE1-000	2	Pin-Weight, Governor
❶13	16531-ZE1-000	1	Slider-Governor
❶14	16541-ZM0-000	1	Shaft-Arm, Governor

Ref	Part No.	Qty.	Description
❶15	90014-952-000	1	Bolt-Flange (6X14) (C T200)
❶16	90121-952-000	8	Bolt-Flange (6X25) (C T 200)
❶17	90451-ZE1-000	1	Washer-Thrust (6Mm)
❶18	90602-ZE1-000	1	Clip-Holder, Governor
❶19	91202-ZL8-003	1	Seal-Oil (28X41.25X6)
❶20	91356-MA6-005	1	O-Ring (14.8X24) (N O K)
❶21	94101-06800	1	Washer-Plain (6Mm)
❶22	94251-08000	1	Pin-Lock (8Mm)
❶23	94301-08200	2	Pin-Dowel (8X20)

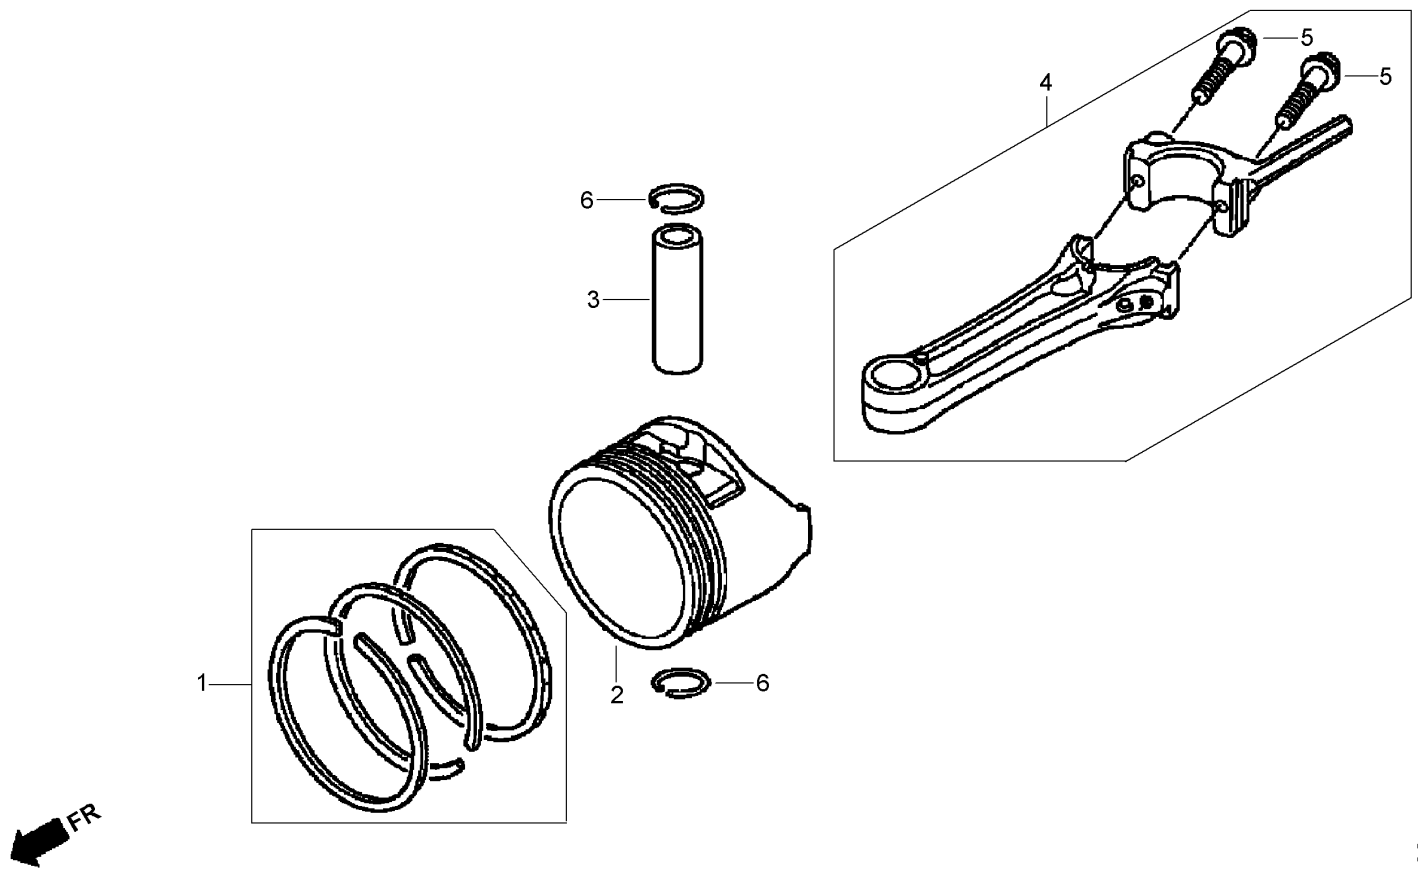 

Piston and Connecting Rod Assembly Honda GSV190LA S3A


Ref	Part No.	Qty.	Description				
❶1	13010-Z2C-014	1	Piston Ring Set (STD) (Teikoku)				
❶2	13101-Z0Y-010	1	Piston				
❶3	13111-Z0Y-000	1	Pin-Piston				
❶4	13200-Z0Y-000	1	Connecting Rod ASM				
❶5	90001-ZE1-000	2	Bolt-Rod, Connecting				
❶6	90551-ZE0-000	2	Clip-Pin, Piston (13Mm)				

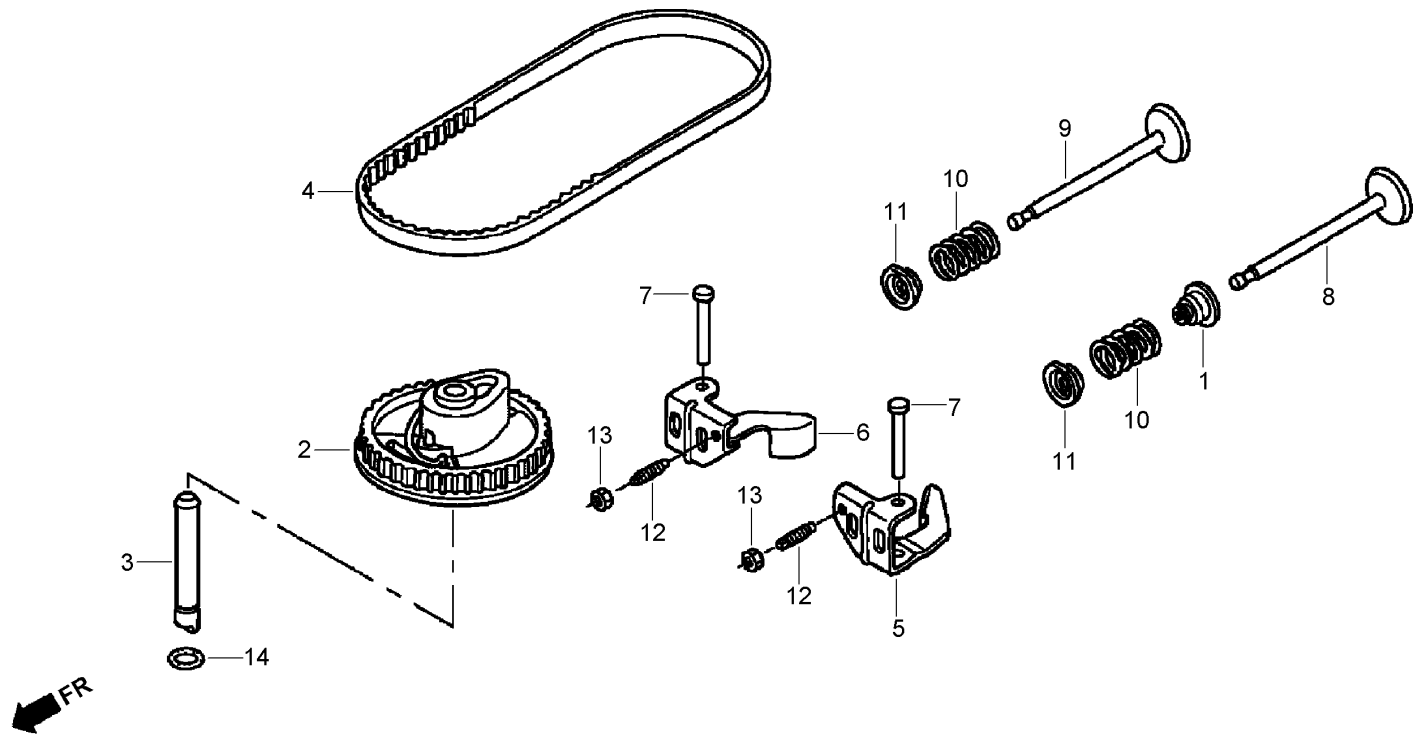 

Camshaft Pulley Assembly Honda GSV190LA S3A


Ref	Part No.	Qty.	Description
❶1	12209-ZM0-003	1	Seal-Stem, Valve
❷2	14320-Z0Y-000	1	Pulley-Camshaft
❸3	14324-ZL8-000	1	Shaft-Pulley, Cam
❹4	14400-Z0J-014	1	Belt-Timing (84H U7 G-200)
❺5	14431-Z0J-000	1	Arm-Rocker, Intake Valve
❻6	14441-Z0J-000	1	Arm-Rocker, Exhaust Valve
❼7	14461-ZL8-000	2	Shaft-Arm, Rocker
❽8	14711-ZL8-000	1	Valve-Intake (Technostar)
❽8	14711-Z0J-000	1	Valve-Intake (Rocknel)
❾9	14721-ZL8-000	1	Valve-Exhaust
❿10	14751-ZL8-000	2	Spring-Valve
❿11	14771-Z0J-000	2	Retainer-Spring, Valve
❿12	90012-333-000	2	Screw-Adjusting, Tappet

Ref	Part No.	Qty.	Description
❿13	90206-001-000	2	Nut-Adjusting, Tappet
❿14	91301-ZM0-V31	1	O-Ring (6.8X19) (Arai)

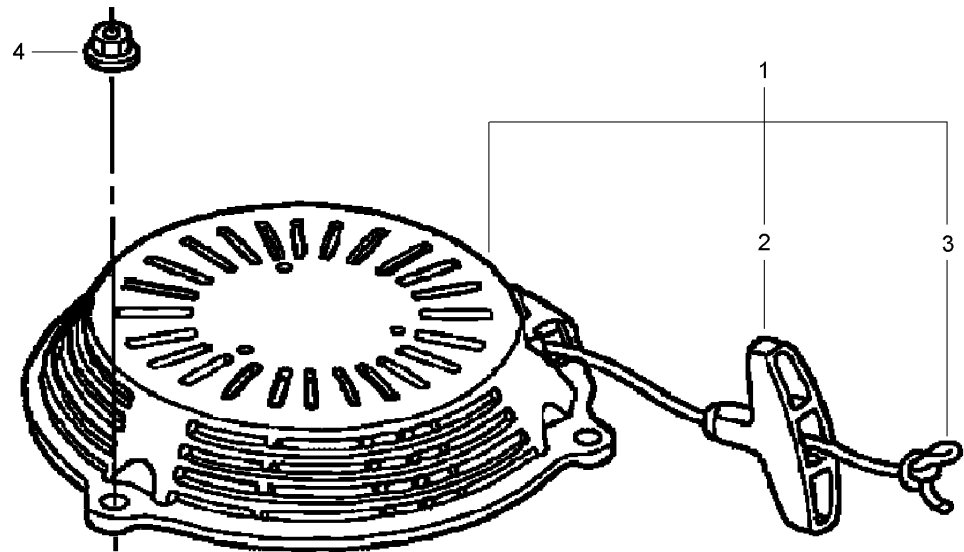 


Recoil Starter Assembly Honda GSV190LA S3A

Ref	Part No.	Qty.	Description				
❶1	28400-Z0Y-013ZA	1	Recoil Starter ASM-R280 (Power Red)				
❶1	28400-Z0Y-013ZB	1	Recoil Starter ASM-N H1 (Black)				
❷2	28461-ZL8-003	1	Grip-Starter				
❸3	28462-ZL8-631	1	Rope-Starter, Recoil (Long Type)				
❹4	90201-ZM0-000	3	Nut-Flange (6Mm)				

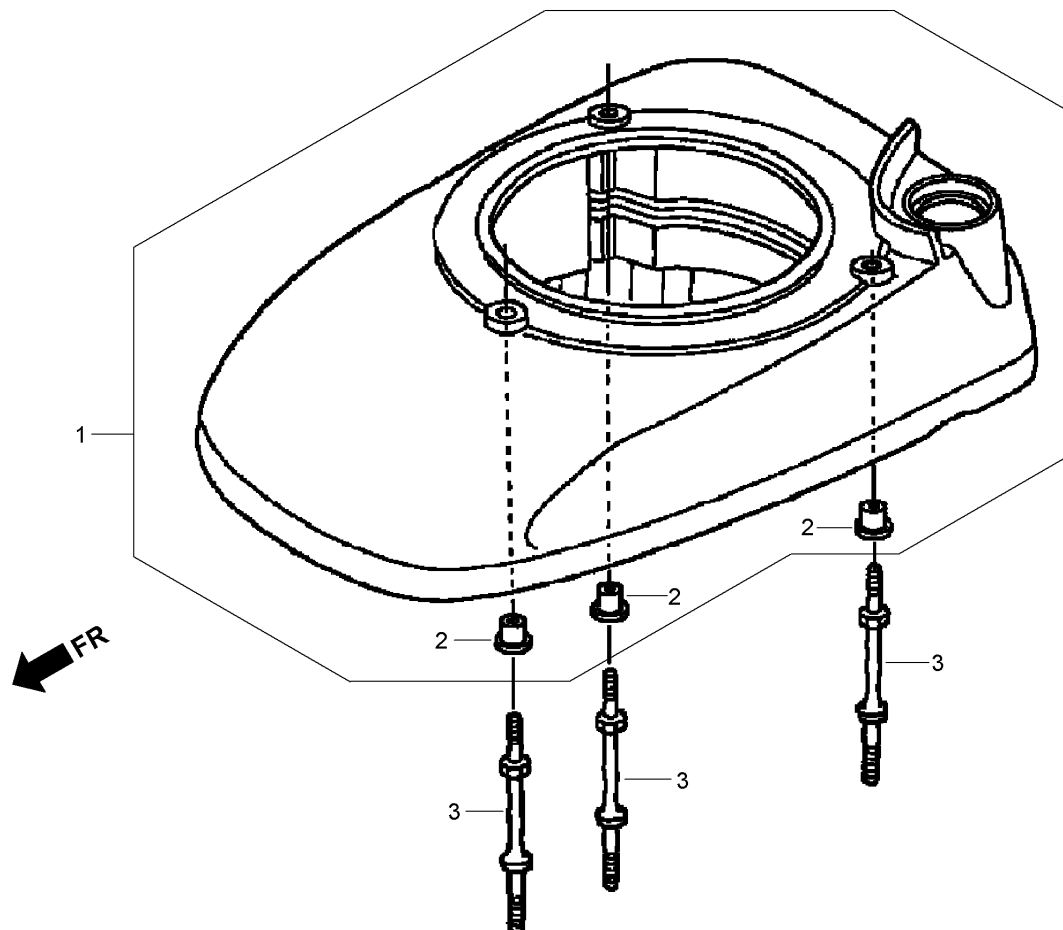 

Fan Cover Assembly Honda GSV190LA S3A

Ref	Part No.	Qty.	Description				
❶1	19610-Z0L-860ZA	1	Cover-Fan, N H1 (Black)				
❶1	19610-Z0L-860ZB	1	Cover-Fan, R280 (Power Red)				
❶2	19619-ZL8-300	3	Collar-Cover, Fan				
❶3	90043-ZL8-000	3	Bolt-Stud (H T 42.5Mm)				

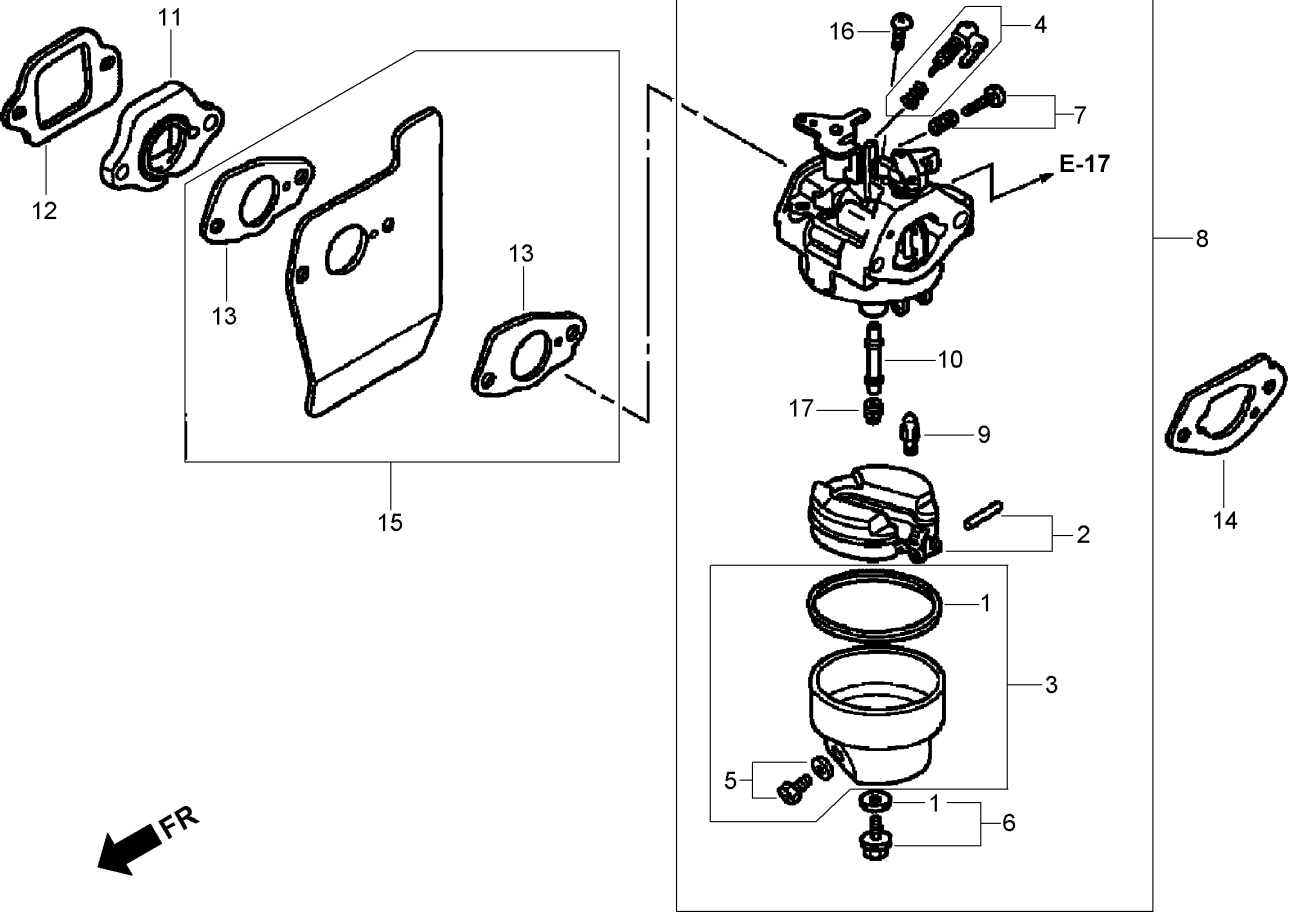 


Carburetor Assembly

Honda GSV190LA S3A

Ref	Part No.	Qty.	Description
❶	16010-883-015	1	Gasket Set
❷	16013-ZL1-003	1	Float Set
❸	16015-887-782	1	Float Chamber Set
❹	16016-ZG0-W00	1	Screw Set
❺	16024-ZE1-811	1	Drain Screw Set
❻	16028-ZE0-005	1	Screw Set
❼	16029-ZG0-901	1	Screw Set (Throttle Stop)
❽	16100-Z2D-821	1	Carburetor ASM (B B 65D A)
❾	16155-ZM0-013	1	Valve-Float
❿	16166-Z0Y-003	1	Nozzle-Main
⓫	16211-ZL8-000	1	Insulator-Carburetor
⓬	16212-ZL8-000	1	Gasket-Insulator
⓭	16221-883-800	2	Gasket-Carburetor


Ref	Part No.	Qty.	Description
❶	16228-ZL8-000	1	Gasket-Carburetor
❷	19650-ZM0-000	1	Guide-Air
❸	93500-05006-0H	1	Screw-Pan (5X6)
❹	99101-124-0620	1	Jet-Main (No.62)
❺	99101-124-0650	1	Jet-Main (No.65)
❻	99101-124-0680	1	Jet-Main (No.68)

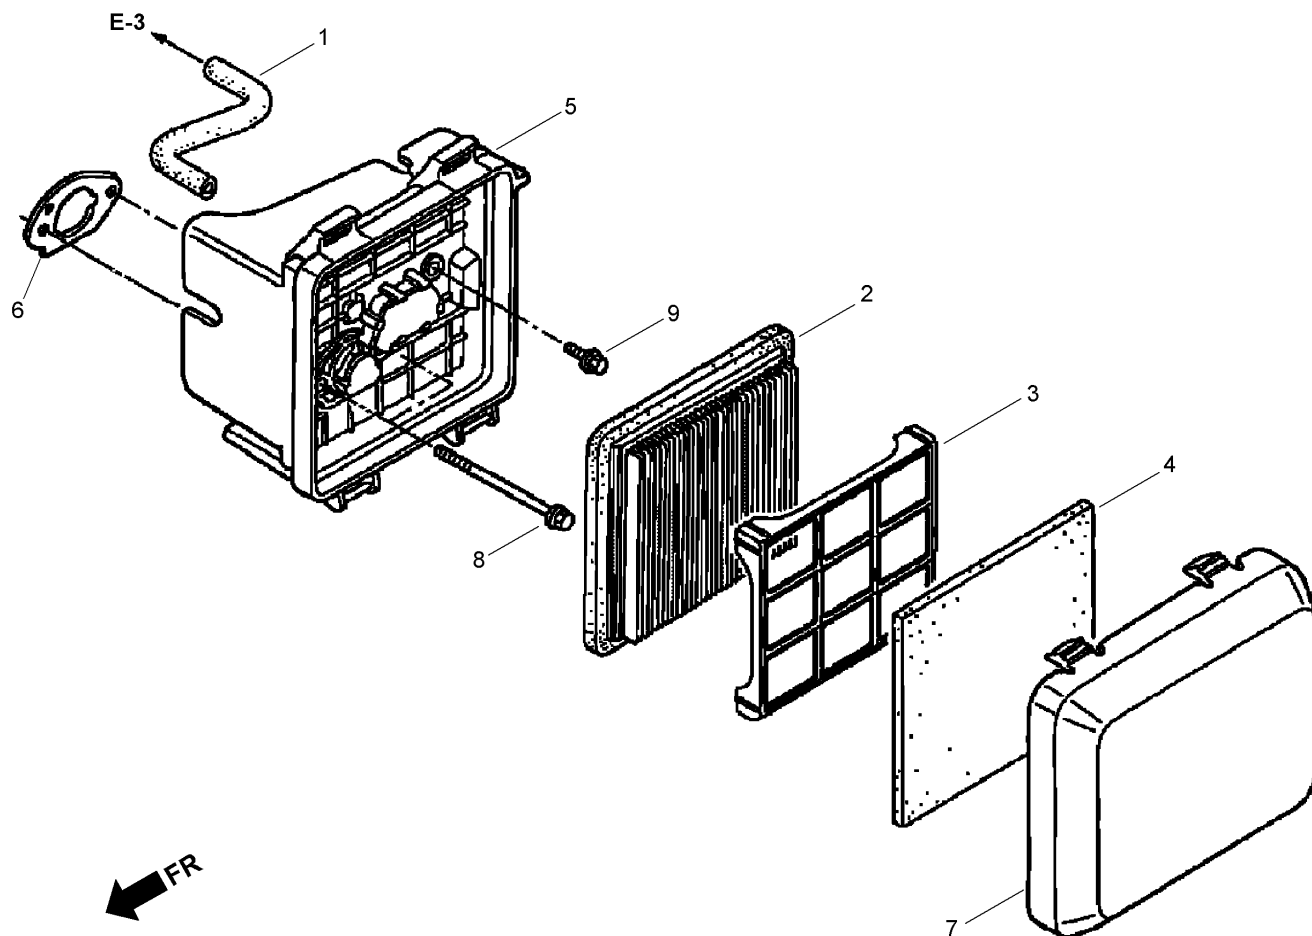 

Air Cleaner Assembly


Honda GSV190LA S3A

Ref	Part No.	Qty.	Description				
❶1	15721-ZM0-000	1	Tube-Breather				
❶2	17211-ZL8-023	1	Element-Cleaner, Air				
❶3	17212-Z2A-000	1	Grid-Cleaner, Air				
❶4	17218-Z2A-000	1	Filter (Outer) (Wet)				
❶5	17220-ZM0-000	1	Air Cleaner Case ASM				
❶6	17228-ZM0-000	1	Gasket-Cleaner, Air				
❶7	17231-Z2B-000	1	Cover-Cleaner, Air (Dual)				
❶8	90003-ZM0-000	2	Bolt-Flange (6X86) (C T200)				
❶9	95701-06014-08	1	Bolt-Flange (6X14)				

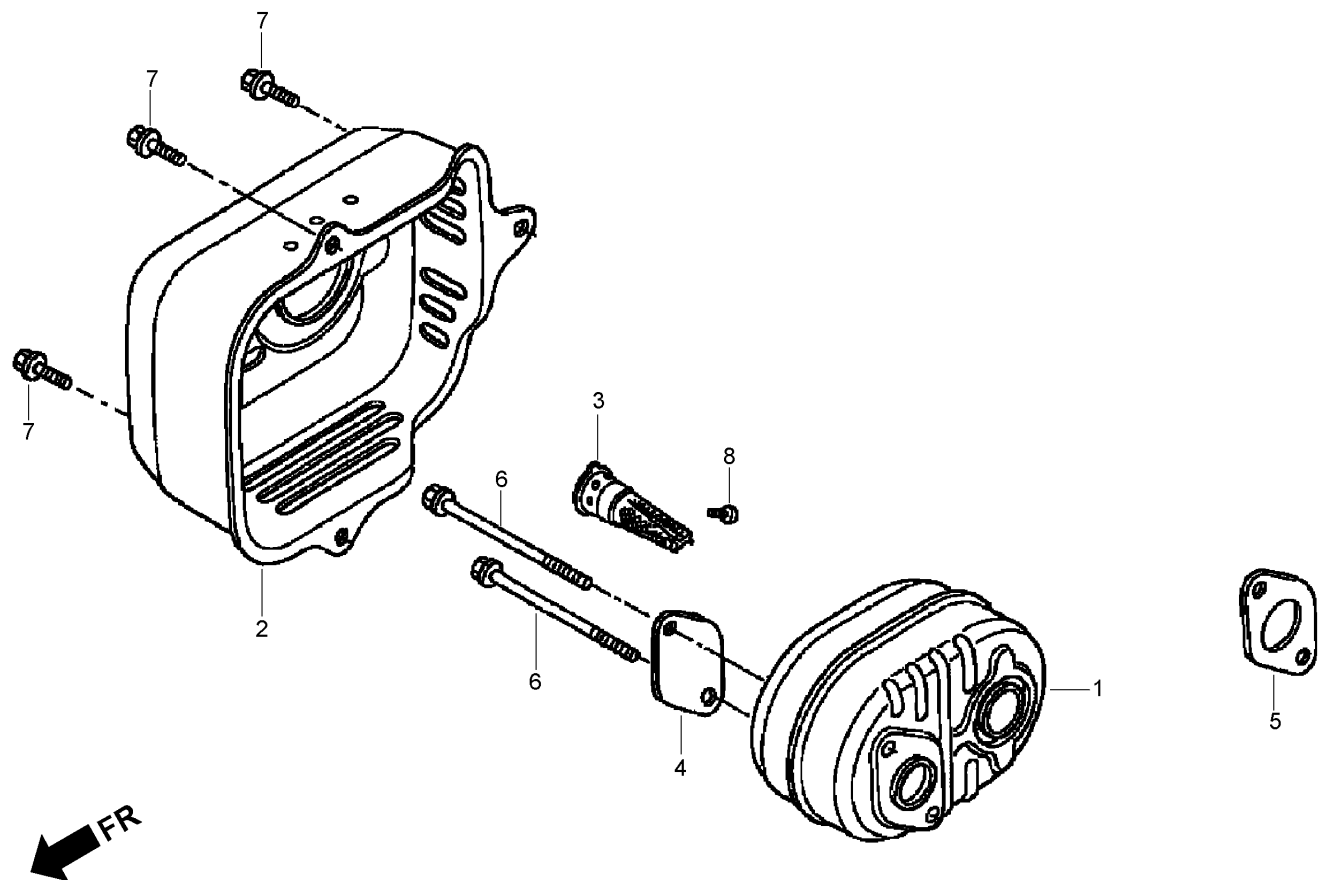 

Muffler Assembly Honda GSV190LA S3A

Ref	Part No.	Qty.	Description				
❶1	18310-Z0Y-000	1	Muffler				
❶2	18321-Z0L-J00	1	Protector-Muffler				
❶3	18350-ZL8-000	1	Arrester-Spark				
❶4	18356-ZL8-000	1	Plate-Number, Arrester				
❶5	18381-ZL8-305	1	Gasket-Muffler				
❶6	90004-ZL8-000	2	Bolt-Flange (6X79) (C T200)				
❶7	90013-883-000	3	Bolt-Flange (6X12) (C T200)				
❶8	90055-ZE1-000	1	Screw-Tapping (4X6)				

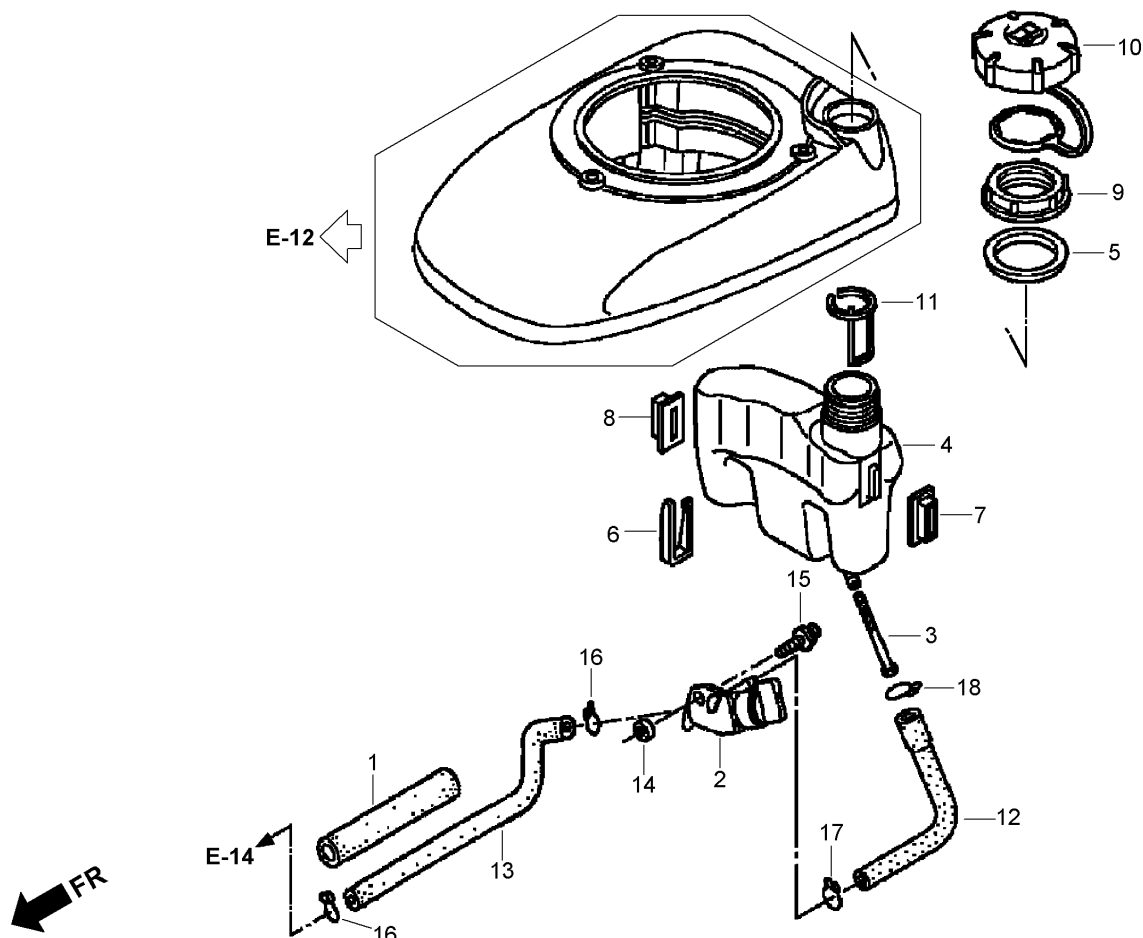 


Fuel Tank Assembly

Honda GSV190LA S3A

Ref	Part No.	Qty.	Description
❶1	16854-ZH8-000	1	Supporter-Rubber (107 Mm)
❶2	16950-ZM0-003	1	Petcock ASM
❶3	16952-ZA8-800	1	Filter-Fuel
❶4	17511-Z0L-000	1	Tank-Fuel
❶5	17514-Z0L-000	1	Seal-Neck, Fuel Filler
❶6	17516-Z0L-000	1	Clip-Mounting, Tank
❶7	17532-Z0L-000	1	Rubber A-Mounting, Tank
❶8	17533-Z0L-000	1	Rubber B-Mounting, Tank
❶9	17534-Z0L-000	1	Nut-Mounting, Tank
❶10	17620-Z0J-800	1	Fuel Tank Cap ASM
❶11	17636-Z0L-000	1	Gauge-Level, Fuel
❶12	17701-Z0L-810	1	Tube-Tank, Fuel
❶13	17702-ZM0-800	1	Tube-Fuel


Ref	Part No.	Qty.	Description
①14	91501-Z0L-800	1	Collar-Petcock, Fuel
①15	93891-05010-08	1	Screw-Washer (5X10)
①16	95002-02080	2	Clip-Tube (B8)
①17	95002-02100	1	Clip-Tube (B10)
①18	95002-70000	1	Clip-Tube (C11)

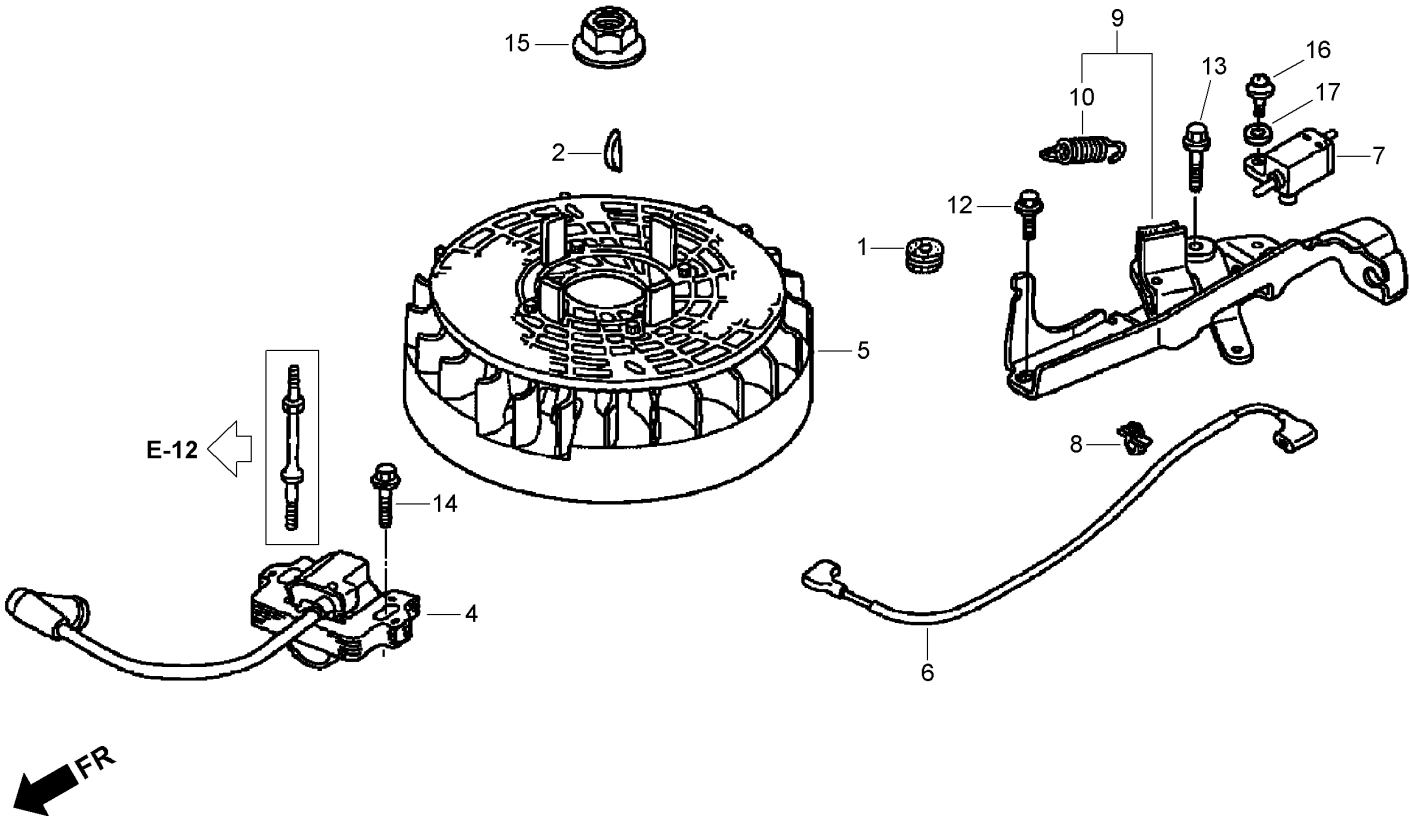 

Flywheel Assembly
Honda GSV190LA S3A


Ref	Part No.	Qty.	Description
❶1	11344-MB0-000	1	Grommet A-Cover, R R (8X16X6.6)
❷2	13331-357-000	1	Key-Woodruff, Special (25X18)
❹4	30500-Z0J-003	1	Ignition Coil ASM (Phelon) (Use For Flywheel Of Phelon)
❺5	31105-Z0Y-010	1	Flywheel ASM (Phelon) (Use For Ignition Coil Of Phelon)
❻6	32195-ZM0-800	1	Wire-Switch, Stop
❼7	35120-ZM0-003	1	Engine Stop Switch ASM (N C)
❽8	51125-Z0L-003	1	Holder-Wire (Fastex)
❽8	90681-959-003	1	Clip A-Cable (Nifco)
❾9	75110-Z0L-800	1	Brake ASM
❿10	75113-ZM0-000	1	Spring-Lever, Brake
❿12	90014-952-000	1	Bolt-Flange (6X14) (C T200)
❿13	90018-ZE1-000	1	Bolt-Flange (6X23) (C T200)
❿14	90022-888-010	1	Bolt-Flange (6X20) (C T200)

Ref	Part No.	Qty.	Description
❿15	90213-S3Y-000	1	Nut-Flange (14Mm)
❿16	93892-04012-00	1	Screw-Washer (4X12)
❿17	94103-04000	1	Washer-Plain (4Mm)

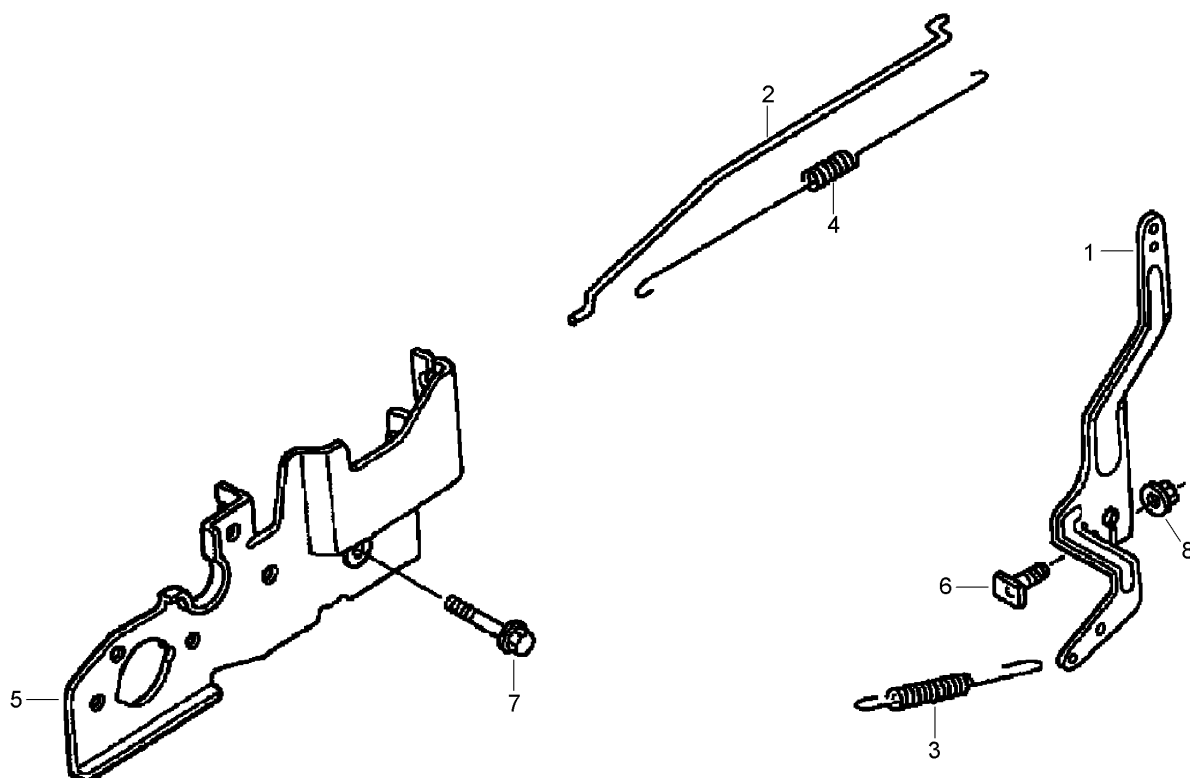 


Control Assembly Honda GSV190LA S3A

Ref	Part No.	Qty.	Description				
❶1	16551-ZM0-010	1	Arm-Governor				
❶2	16555-Z0L-800	1	Rod-Governor				
❶3	16561-Z0L-000	1	Spring-Governor				
❶4	16562-ZM0-000	1	Spring-Return, Throttle				
❶5	16580-Z0L-810	1	Base-Control				
❶6	90015-ZE5-010	1	Bolt-Arm, Governor				
❶7	90016-ZE8-000	1	Bolt-Flange (6X45) (C T200)				
❶8	94050-06000	1	Nut-Flange (6 Mm)				

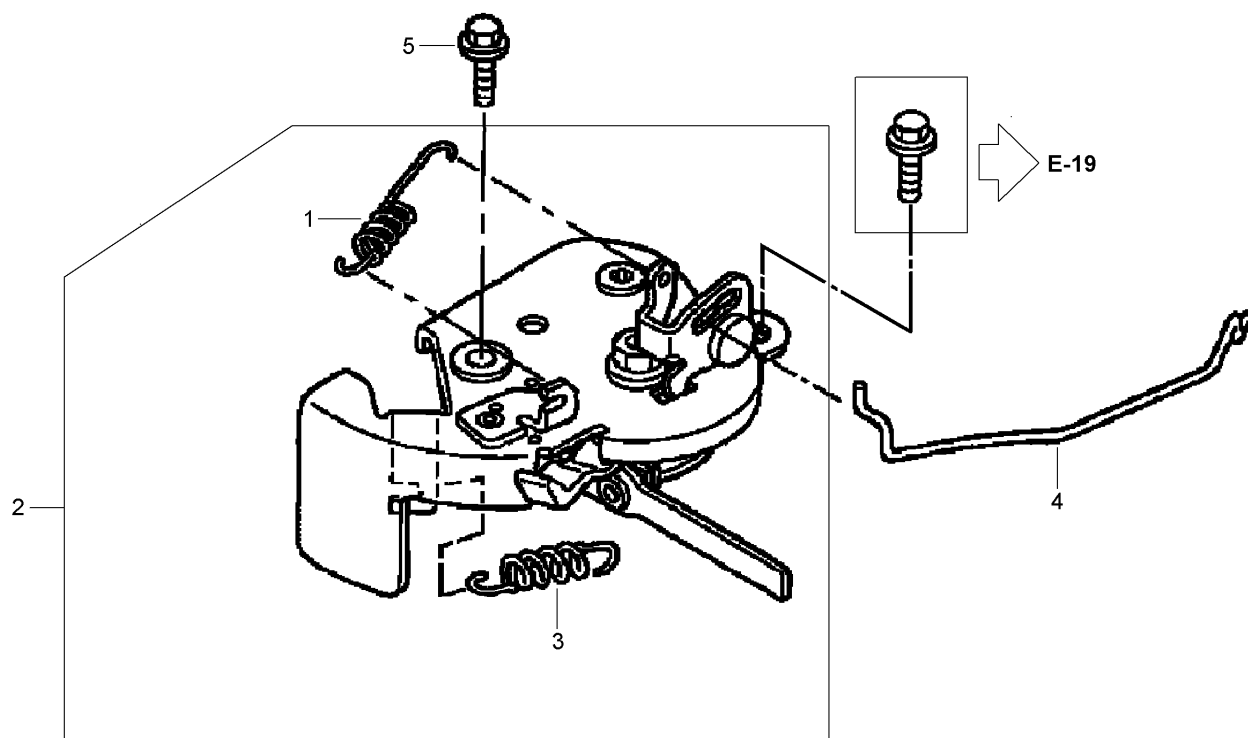 

Choke Lever Assembly Honda GSV190LA S3A

Ref	Part No.	Qty.	Description				
❶1	16592-Z2D-800	1	Spring-Return				
❶2	16610-Z2D-801	1	Choke Lever ASM				
❶3	16614-Z2D-800	1	Spring-Lever, Choke				
❶4	16632-Z0L-800	1	Rod-Stop				
❶5	90029-888-000	1	Bolt-Flange (6X16) (C T200)				

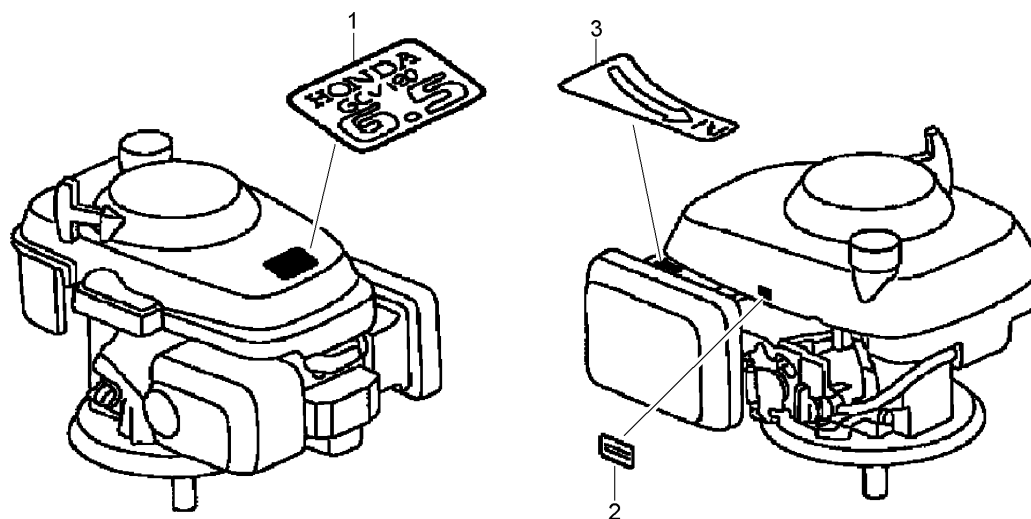 

Label Assembly Honda GSV190LA S3A

Ref	Part No.	Qty.	Description
❶1	87101-Z2D-000	1	Mark-Emblem (G S V190 6.5)
❷2	87114-ZH7-821	1	Label-Warning (Not Certified For Sale)
❸3	87528-Z0L-V20	1	Mark-Indication, Choke

NOTES

NOTES

NOTES

