


MODEL NO. 20322-2000001 & UP

PARTS CATALOG

21" RECYCLER® Mower

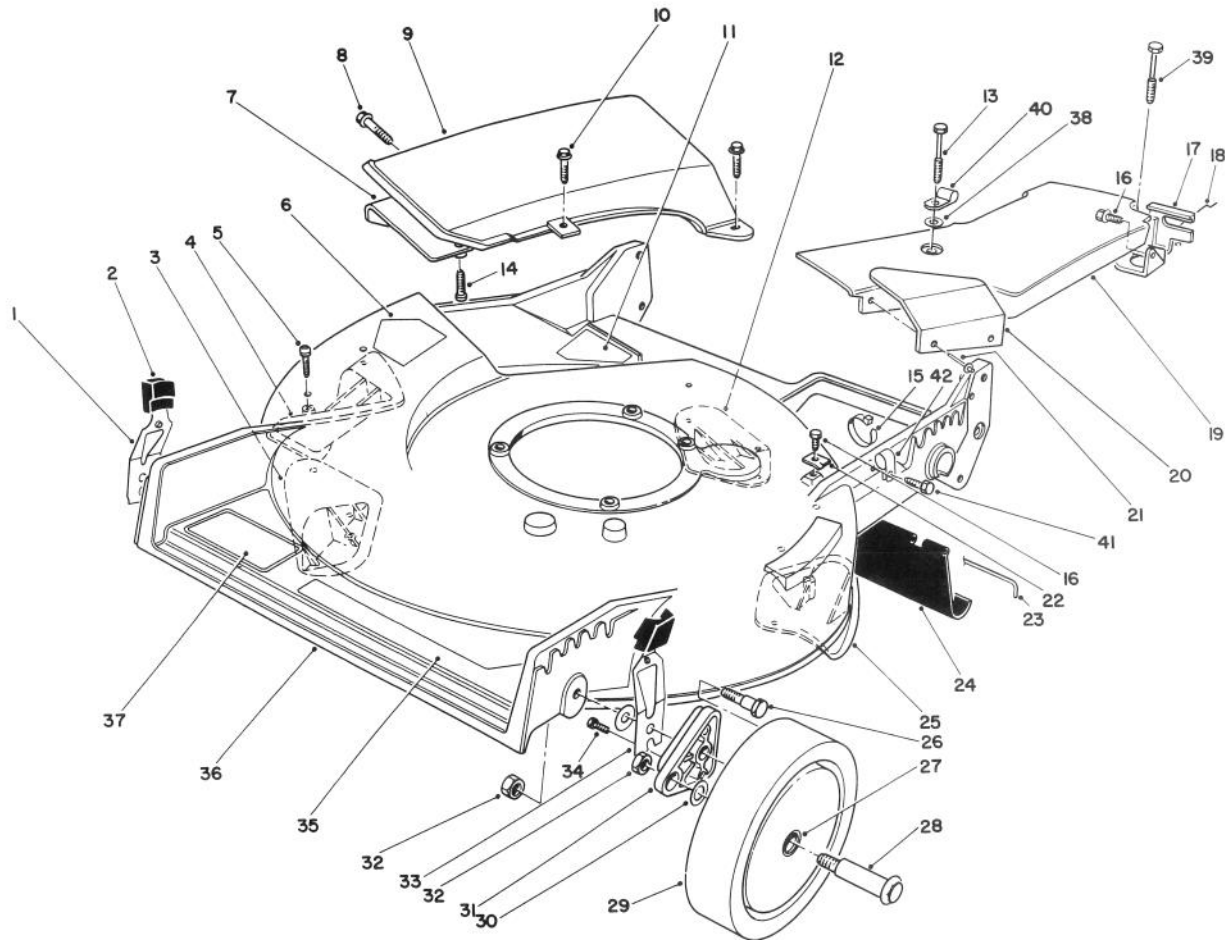


C-1020

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-0560	Spring Arm Ass'y - R.H.	1
2	25-7740	Knob - Spring Arm	2
3	76-2120	Plate - Kicker Rt. Front	1
4	76-2130	Plate - Kicker Rt. Rear	1
5	32144-111	Screw - Pan Hd.	8
6	39-5770	Decal - Danger	1
7		Deflector - Recycler	1
8	46-6810	Screw - Hex Washer Hd. Thread Forming	1
9	14-4069	Cover Assembly (Incl. Ref. #7 & 14)	1
10	46-6811	Screw w/Washer	3
11	82-8450	Decal - Danger	1
12	76-2150	Plate - Kicker Left Rear	1
13	37-7262	Screw - Special	1
14		Screw	5
15	3290-378	Tie - Cable	1

Ref. No.	Part No.	Description	No. Used
16	32144-70	Screw - Hex Washer Hd. Thread Forming	2
17	82-5680	Bracket - Traction Adj.	1
18	46-7030	Retainer - Cable	1
19	52-7406	Belt Cover Assembly (Incl. Ref. #20 & 21)	1
20	77-0280	Shield - Heat	1
21	3295-35	Rivet	2
22	62-3720	Clamp - Cable	1
23	33-3208	Rod - Shield	1
24	44-0580	Shield - Rear	1
25	76-2140	Plate - Kicker Left Front	1
26	66-0561	Screw - Pivot	2
27	27-6250	Bushing	4
28	27-6231	Bolt - Wheel	2
29	11-9509	Wheel & Tire Assembly (Incl. Ref. #27)	2


TPS

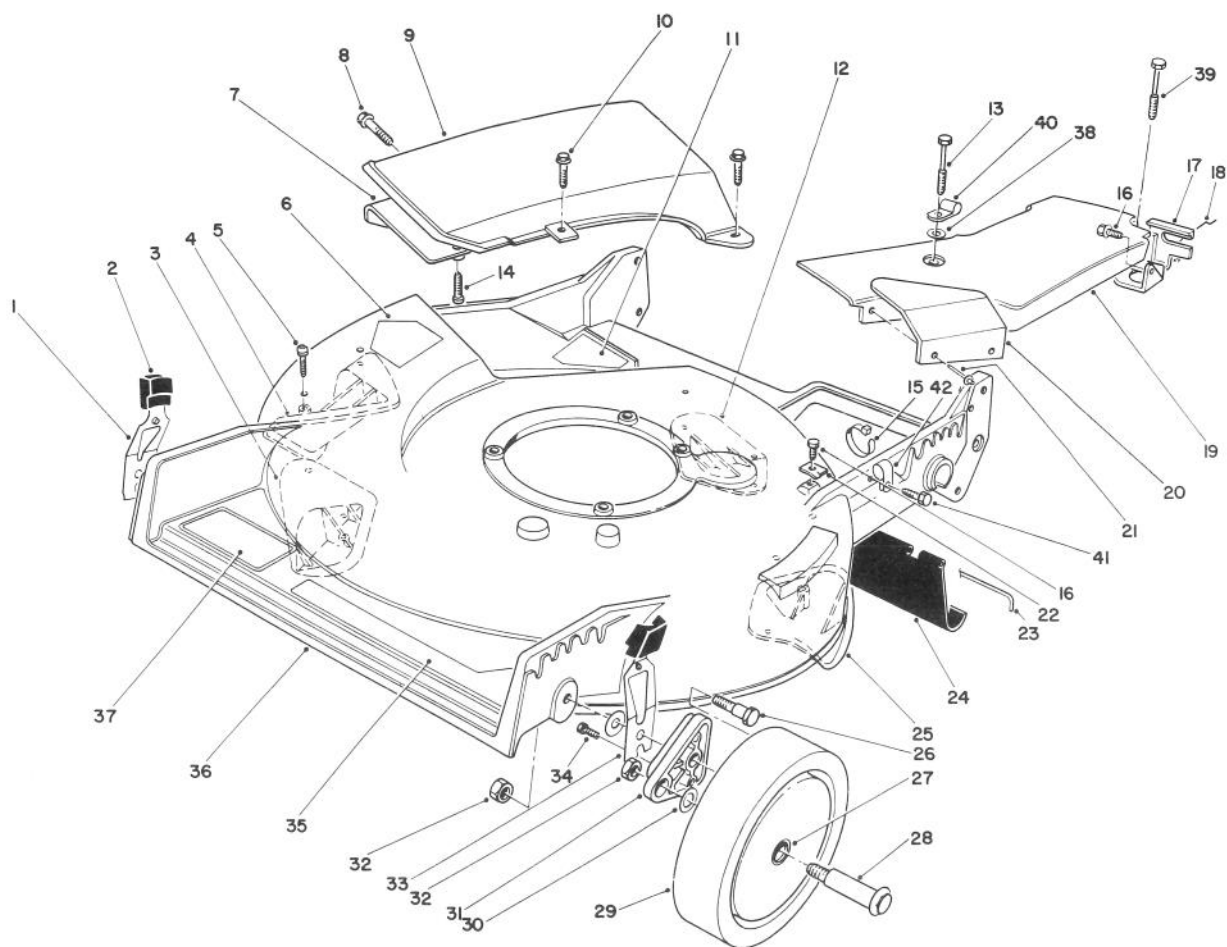

C-1020

HOUSING ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
30	40-1940	Washer - Wheel	4	37	71-0600	Decal - Toro	1
31	66-0580	Arm - Pivot	2	38	3-5792	Washer	1
32	52-3620	Nut - Lock	4	39	37-7260	Screw - Special	1
33	71-0570	Spring Arm Ass'y - L.H.	1	40	2412-87	Clamp - Cable	1
34	32144-85	Screw - Hex Hd. Cap	2	41	12-5450	Screw - Hex Washer Hd. Self Tapping	1
35	76-1950	Decal - Deck	1	42	2412-83	R-Clamp	1
36	14-3519	Housing Assembly (Incl. Ref. #3-6, 12, & 25)	1				

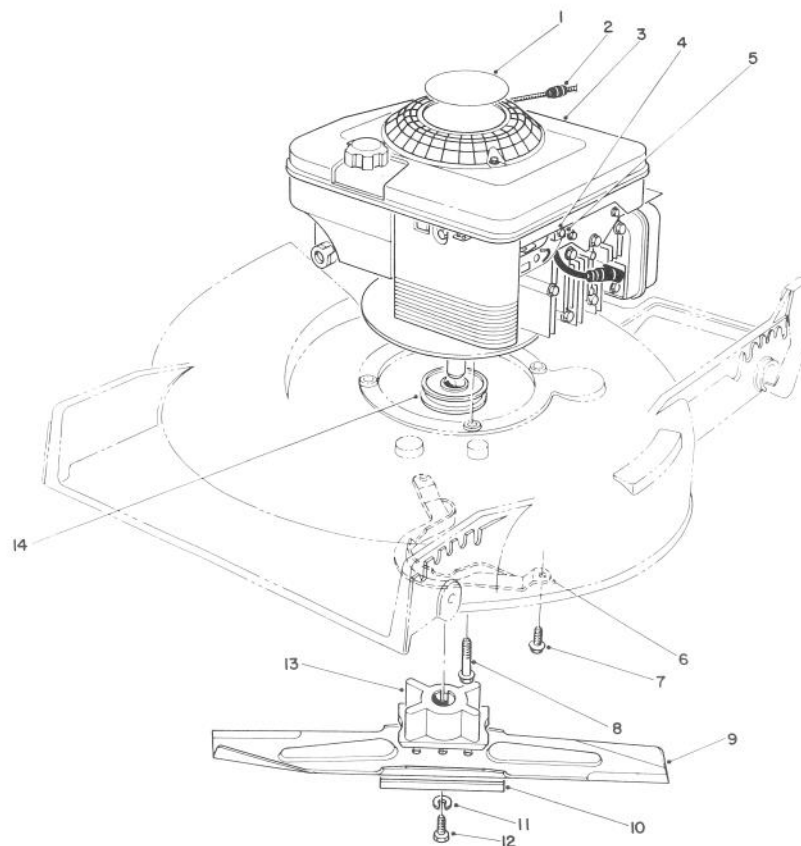


C-0567

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	75-9400	Decal - Engine	1	8	32144-102	Screw - Thread Forming	3
2	2210-316	Stop - Rope	1	9	75-9420	Blade - 21"	1
3		Engine	1	10	80-0510	Stiffener - Blade	1
†4	2210-249	Clamp - Casing	1	11	3253-22	Washer - Lock	1
†5	2210-313	Screw - Clamp	1	12	26-0670	Screw - Blade	1
6	66-0570	Guide - Belt	1	13	62-7540	Retainer - Blade	1
7	32144-70	Screw - Thread Forming	2	14	62-7550	Pulley - Driver	1

†Supplied with Engine

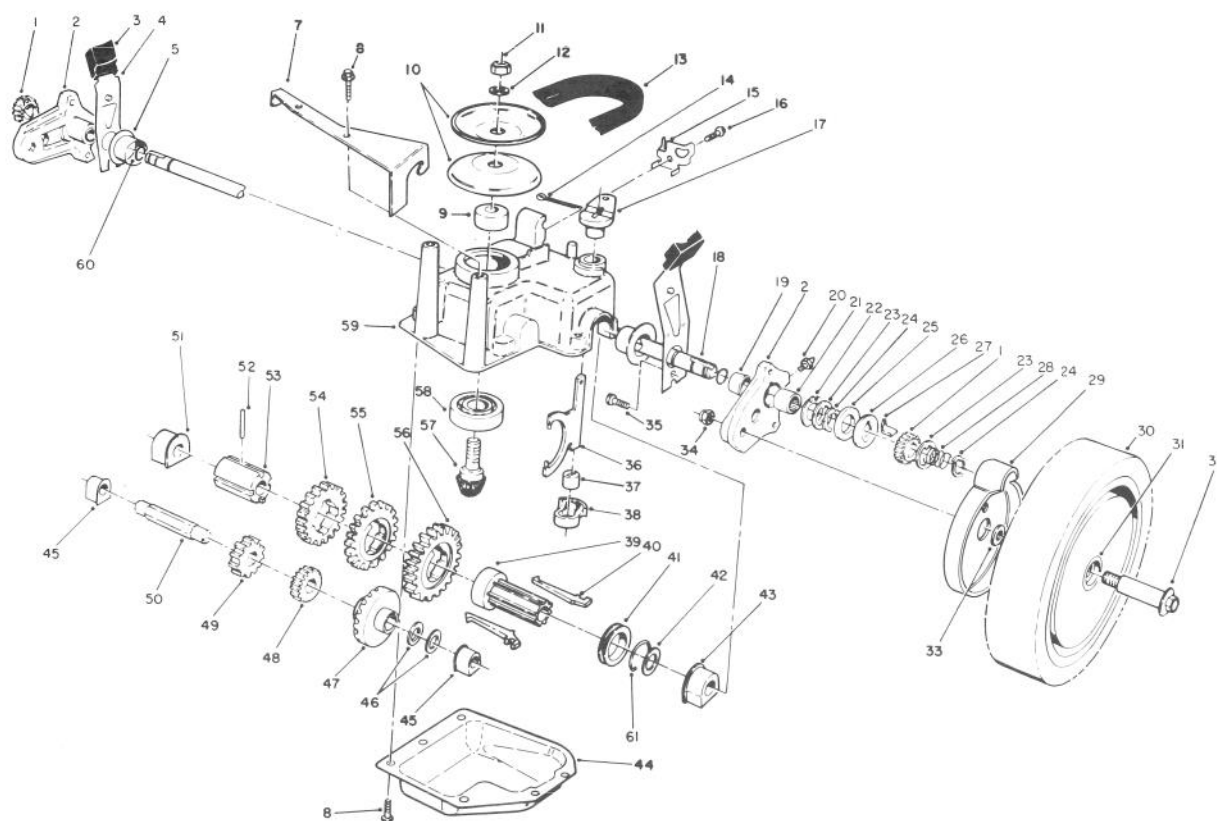


C-0521

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	65-4750	Pinion	2
2	63-8701	Pivot Arm Assembly (Incl. Ref # 19, 20, & 21)	2
3	25-7740	Knob - Arm	2
4	63-8720	Spring Arm Assembly	2
5	42-3520	End Cap	2
7	62-4320	Bracket - Belt Guide	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Locknut	1
12	3256-24	Washer - Flat	1
13	62-3900	V-Belt	1
14	3272-10	Pin - Cotter	1
15	82-8780	Cable - Retainer	1
16	32144-70	Screw - Thread Forming	1
17	60-8821	Lever - Shift	1
18	65-4770	Shaft - Output	1
19	70-9760	Bushing	2
20	302-56	Fitting - Grease	2
21	48-2060	Needle Bearing	2
22	65-4730	Thrust Washer	2
23	65-4740	Thrust Washer	4
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2

Ref. No.	Part No.	Description	No. Used
26	65-4760	Washer - Clutch	2
27	66-6050	Key - Rocker L.H.	1
*	66-6040	Key - Rocker R.H.	1
28	65-4720	Spring	2
29	74-1660	Cover - Wheel	2
30	11-9519	Wheel - Tire & Gear Ass'y (Incl. Ref. # 31)	2
31	27-6250	Bushing - Wheel	4
32	27-6231	Wheel Bolt	2
33	74-1671	Spacer - Wheel Cover	2
34	3296-6	Locknut	2
35	32144-85	Screw	2
36	60-8870	Yoke - Shift	1
37	29-9570	Bushing - Yoke	1
38	60-8810	Retainer - Shift Fork	1
39	76-0780	Sleeve - Shift Key	1
40	76-0760	Key - Shift	2
41	76-0770	Collar - Shift	1
42	36-4780	Washer - Thrust	1
43	60-8770	Bushing - Output Shaft	1
44	60-8730	Cover - Gear Case	1
45	60-8750	Bushing - Int. Shaft	2
46	36-4791	Washer - Thrust	2
47	55-3760	Gear - Pinion 15 Tooth	1
48	55-3780	Gear - Pinion 20 Tooth	1

*Not Illustrated

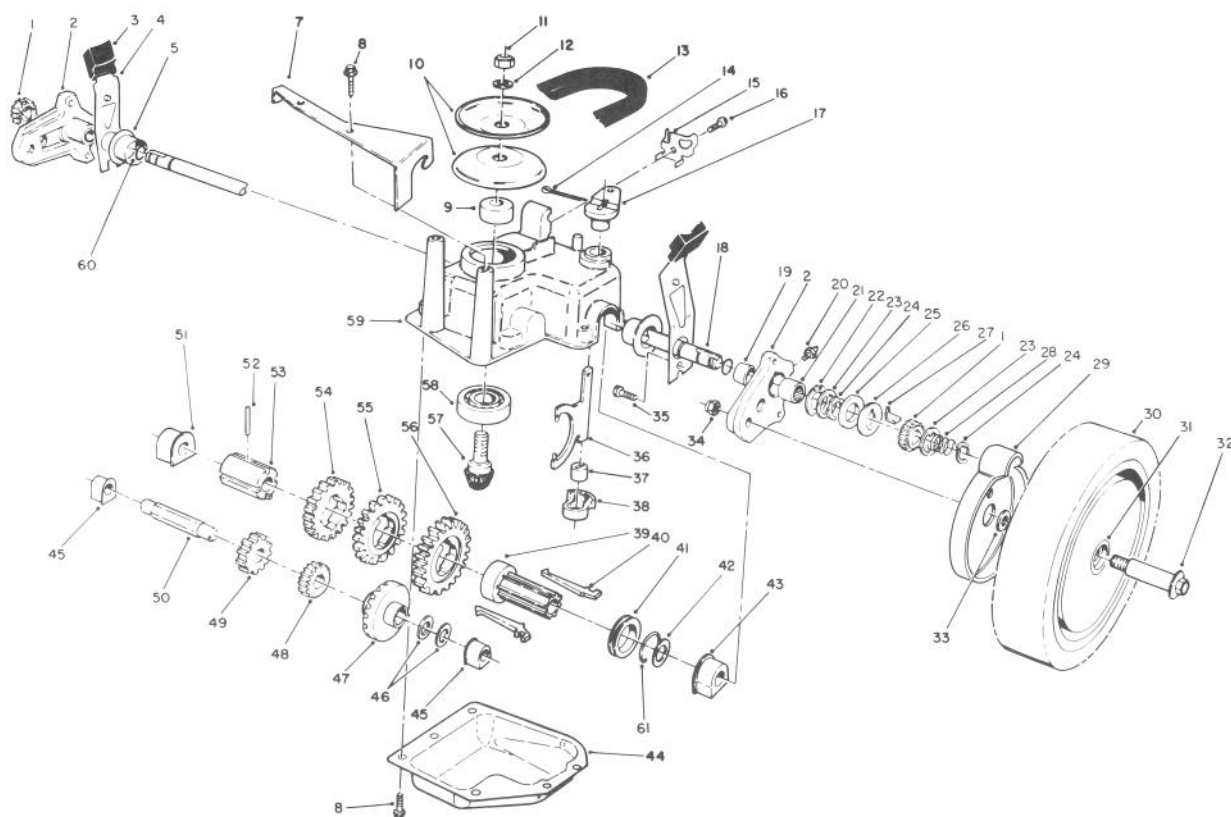


C-0521

GEAR CASE ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
49	55-3800	Gear - Pinion	1	56	55-3770	Gear - 49 Tooth 1st Gear	1
50	60-8800	Shaft - Intermediate	1	57	60-8890	Pinion - Bevel	1
51	60-8850	Bushing - Output Shaft	1	58	38-7820	Bearing - Ball	1
52	32121-120	Pin - Coil	1	59	60-8710	Gear Case - Upper	1
53	60-8790	Sleeve - Gear	1	60	237-153	O-Ring	2
54	55-3810	Gear - 39 Tooth 3rd Gear	1	61	65-5250	Clip - Spring	1
55	55-3790	Gear - 44 Tooth 2nd Gear	1	*	62-6673	Gear Case Assembly	1

*Not Illustrated

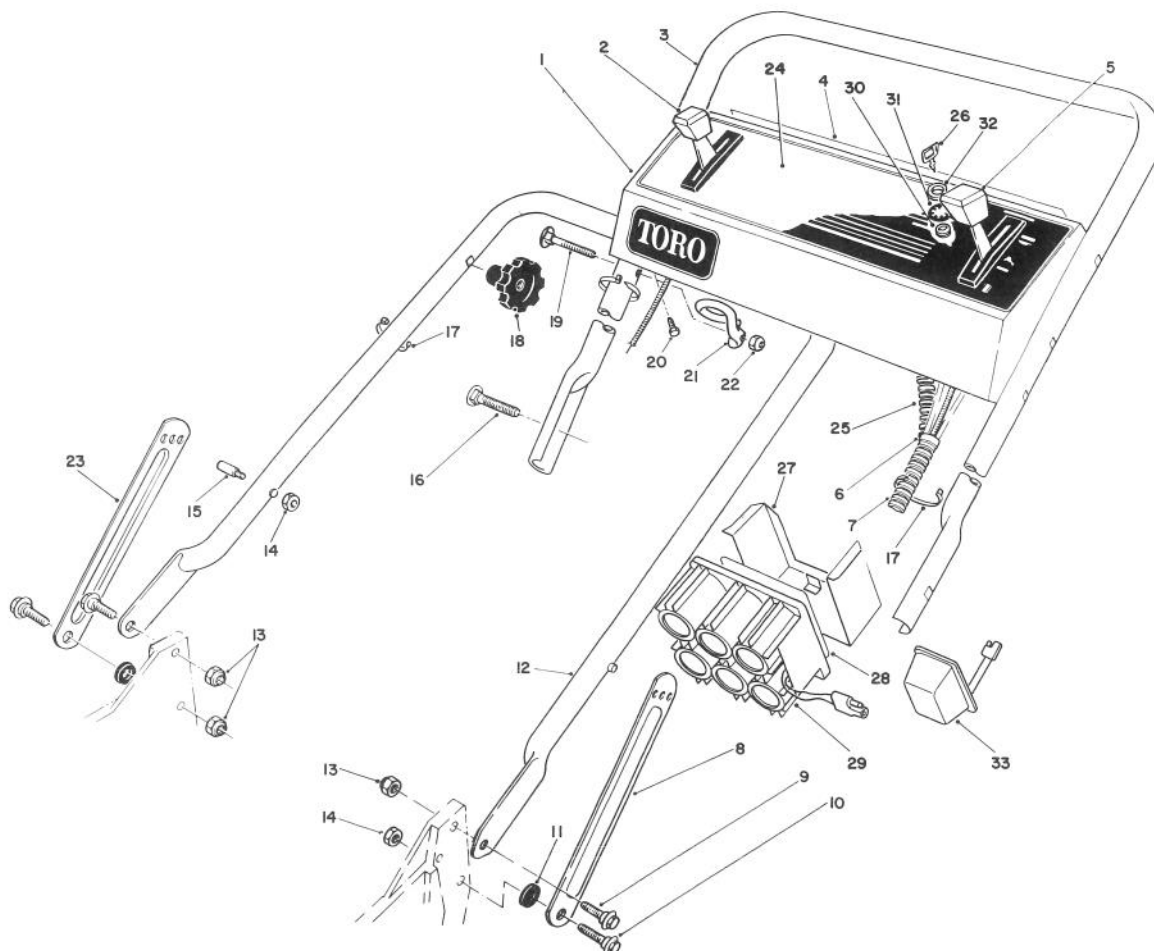


C-1021

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	14-6169	Panel - Control (Incl. Ref. #24)	1
2	76-2711	Control - Ground Speed (Bend Type #1) (Sheath Lg. 41 3/4") (Wire Lg. 2 1/2")	1
3	49-4237	Handle - Upper	1
4	63-9060	Decal - Danger	1
5	74-3894	Control - Throttle (Bend Type #6) (Sheath Lg. 60") (Wire Lg. 1 3/4")	1
6	2412-50	Clip Convoluted Tubing	4
7	46-6440	Cover - Control Cables	1
8	84-8360	Latch - Handle L.H.	1
9	27-7211	Screw - Shoulder	2
10	27-7210	Screw - Shoulder	2
11	3-3287	Spacer	2
12	82-5530	Lower Handle Assembly	1
13	3296-29	Nut - Lock	3
14	3296-47	Nut - Lock	3

Ref. No.	Part No.	Description	No. Used
†15	49-2750	Pin - Handle	2
16	17-9421	Screw - Handle	2
17	3290-378	Tie - Cable	4
18	19-4050	Knob - Handle Release	2
19	46-6433	Screw - Handle	1
20	32104-76	Screw - Self Tap Slotted	5
21	46-8080	Guide - Rope	1
22	3296-42	Nut - Lock	1
23	84-8400	Latch - Handle R.H.	1
24	84-4990	Decal - Instructions	1
25	80-3671	Harness - Wire	1
26	63-8360	Key - Ignition	1
27	55-8180	Retainer - Battery	1
28	55-8190	Decal - Charging Instructions	1
29	55-7520	Battery Assembly	1
30	46-5780	Switch - Starter (Incl. Ref. #31 & 32)	1
31	3254-5	Washer - Lock	1
32	218-461	Nut - Hex	1
33	6-9780	Charger - Battery	1

†Service Replacement Part

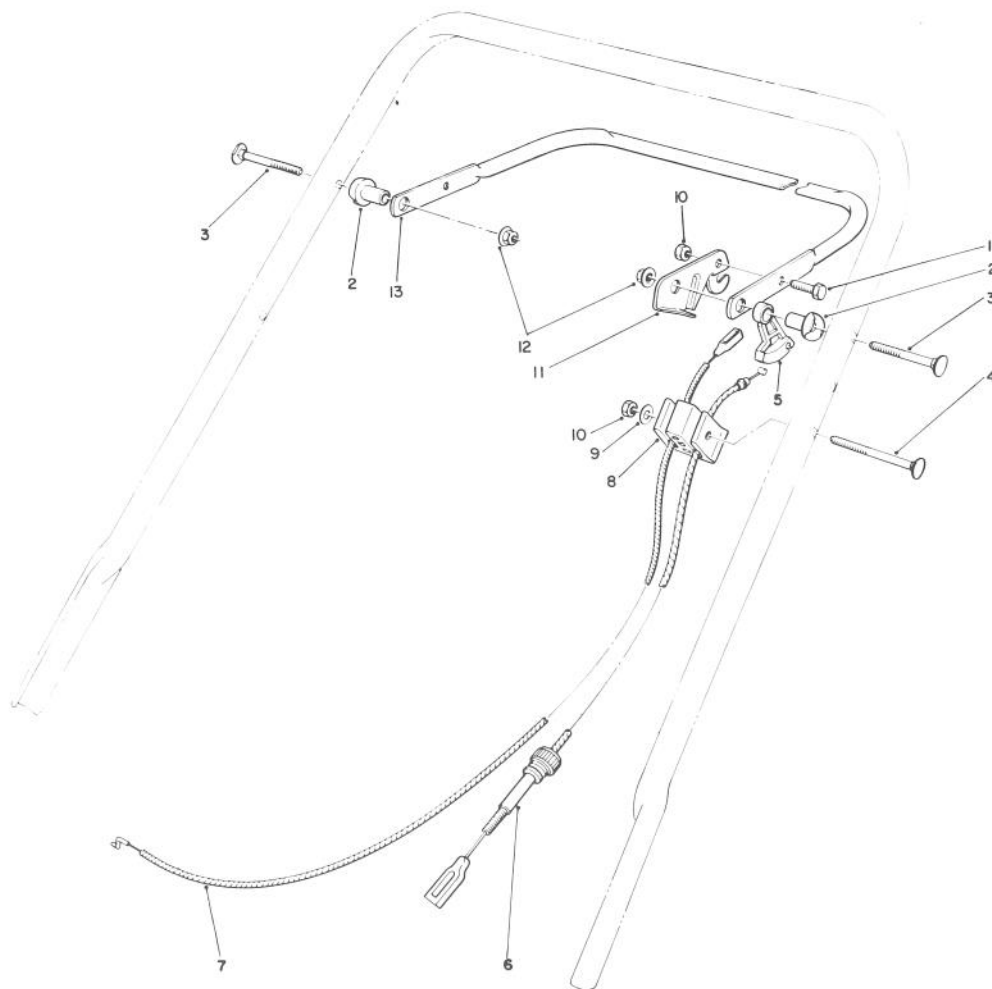


C-0330

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321-3	Screw - Hex Hd. Cap	1
2	49-1630	Support - Spacer	2
3	17-9421	Screw - Handle	2
4	46-6434	Screw - Handle	1
5	46-5520	Lever - Traction	1
6	46-5481	Cable - Traction	1
7	76-4330	Cable - Brake	1

Ref. No.	Part No.	Description	No. Used
8	46-6980	Support - Cable	1
9	3256-22	Washer - Flat	1
10	3296-42	Nut - Lock	2
11	66-5350	Lever - Control	1
12	3296-58	Nut - Lock	2
13	71-3080	Bar - Control	1

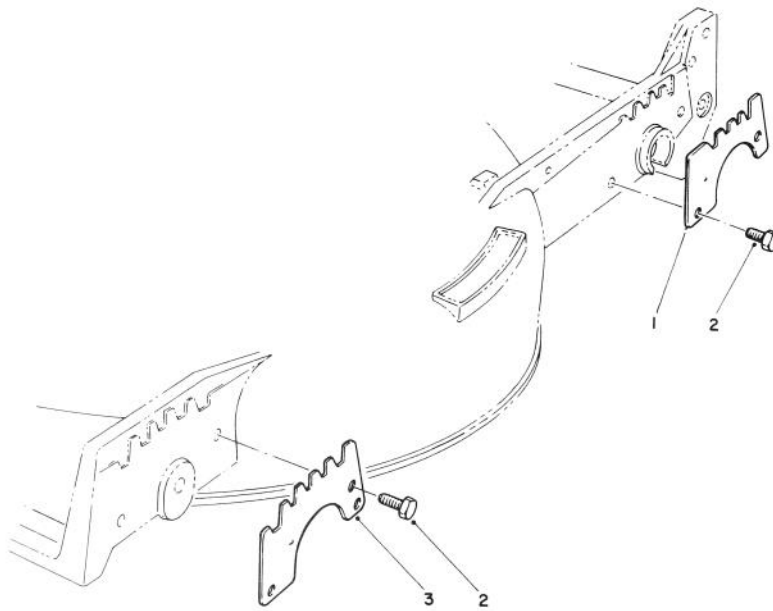


C-0332

WEAR PLATE MODEL NO. 49-4080 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	49-4070	Plate - Rear Wear	2
2	32104-17	Thread Forming Screw	8


Ref. No.	Part No.	Description	No. Used
3	43-5050	Plate - Wear Front	2

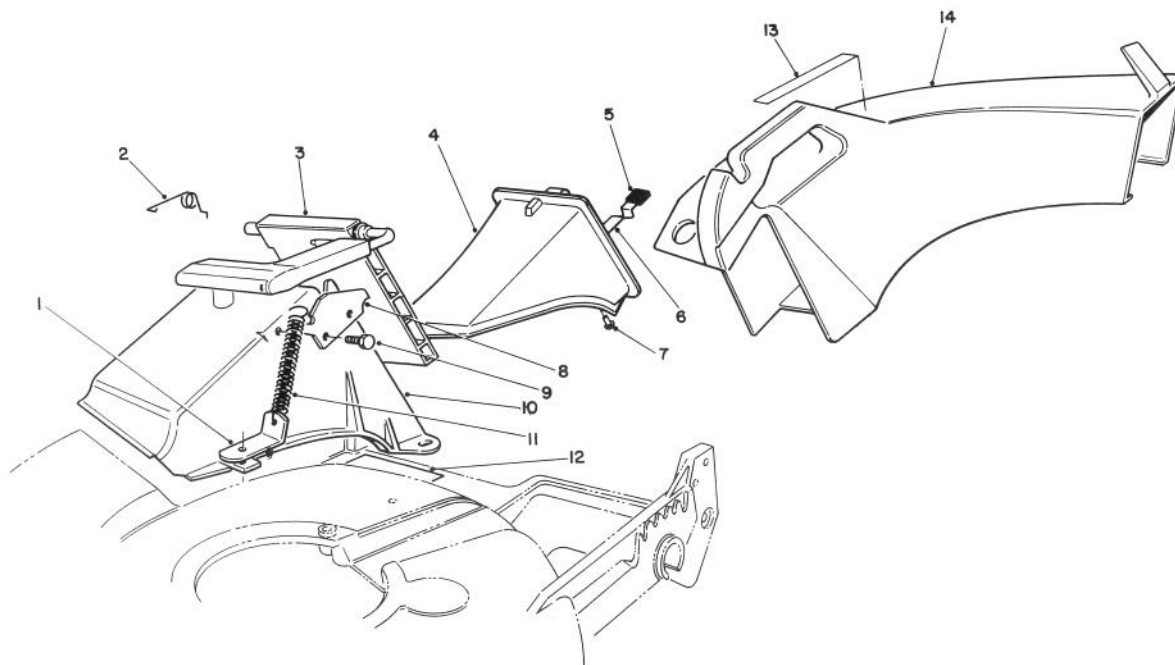

C-1035

RECYCLER SIDE DISCHARGE KIT MODEL NO. 59189 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	80-3780	Bracket - Spring	1	8	76-4570	Plate - Latch	1
2	80-3770	Retainer - Door	1	9	46-8090	Screw - Hex Washer Hd. Self Tapping	2
3	77-0200	Discharge Door Assembly	1	10	82-9150	Tunnel - Discharge	1
4	77-0500	Plug Assembly (Incl. Ref. #5-7)	1	11	76-4660	Spring - Door	1
5	76-4650	Grip - Latch	1	12	85-7250	Decal - Caution	1
6	76-4640	Latch - Plug	1	13	76-4780	Decal - Warning	1
7	3295-35	Rivet	1	14	65-2730	Chute - Discharge	1

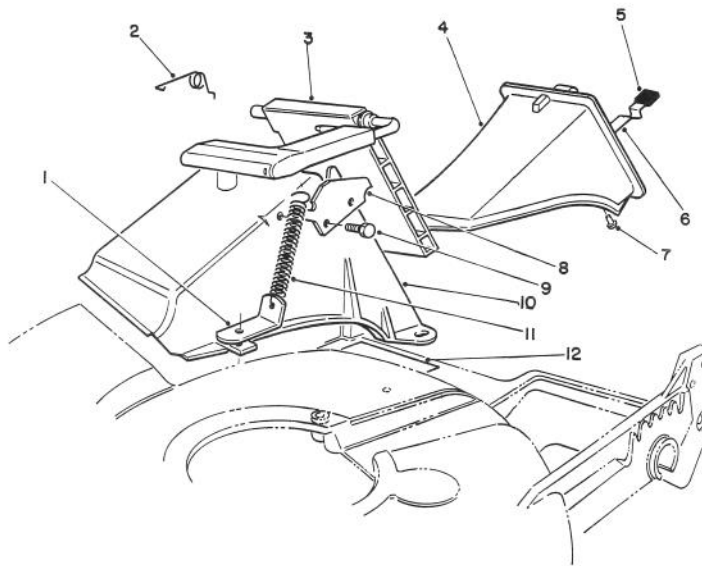


C-1034

RECYCLER BAGGING KIT MODEL NO. 59174 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	80-3780	Bracket - Spring	1
2	80-3770	Retainer - Door	1
3	77-0200	Discharge Door Assembly	1
4	77-0500	Plug - Assembly (Incl. Ref. #11-13)	1
5	76-4650	Grip - Latch	1
6	76-4640	Latch - Plug	1
7	3295-35	Rivet	1


Ref. No.	Part No.	Description	No. Used
8	76-4570	Plate - Latch	1
9	46-8090	Screw - Hex Washer Hd. Self Tapping	2
10	82-9150	Tunnel - Discharge	1
11	76-4660	Spring - Door	1
12	85-7250	Decal	1

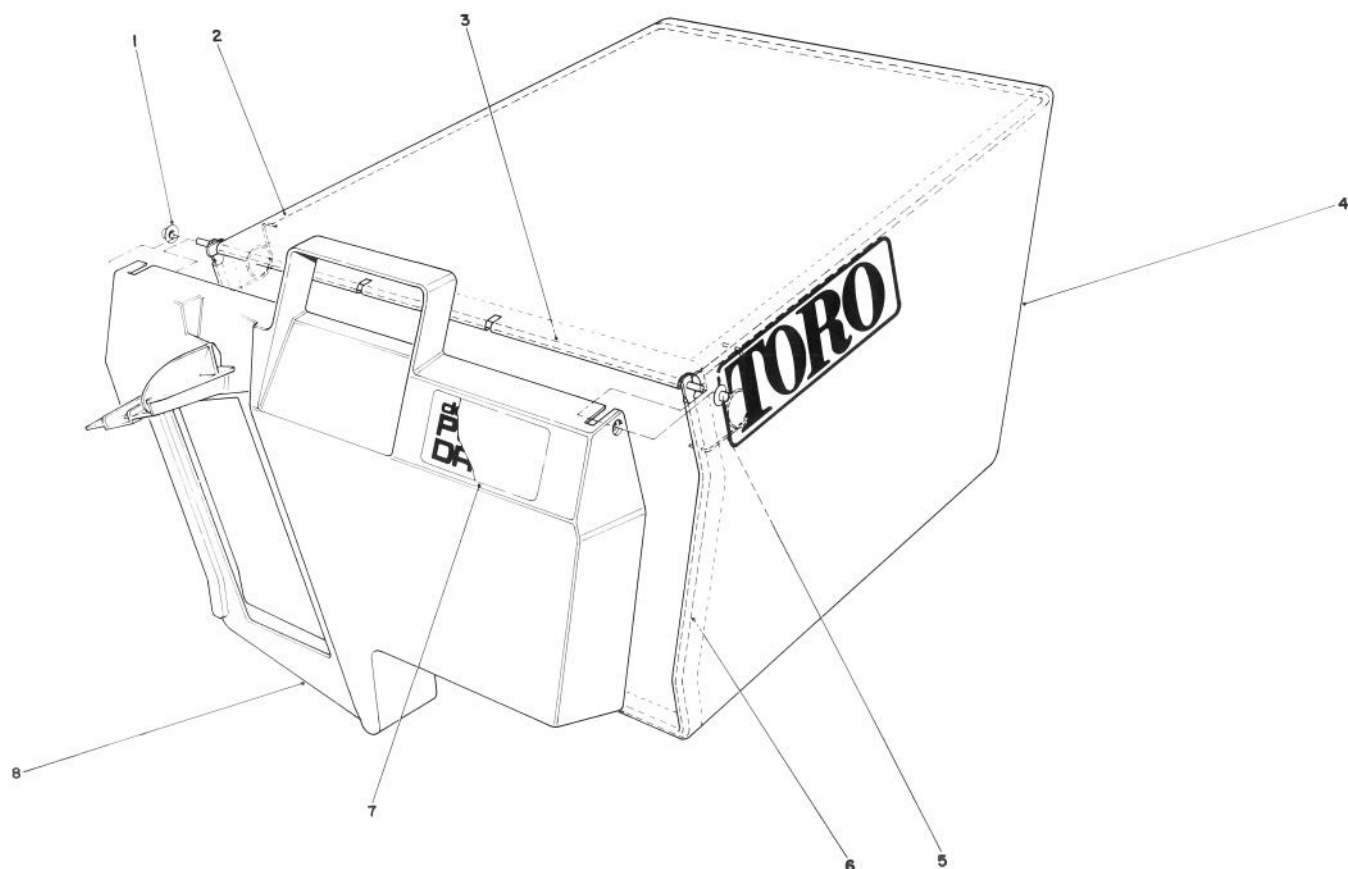

C-0731

RECYCLER BAGGING KIT MODEL NO. 59174 (CONTINUED) (OPTIONAL)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3290-422	Nut - Push	2	5	36-6910	Spring	2
2	42-4030	Bag Frame - Upper	1	6	42-4020	Frame - Bag	1
3	33-4820	Hinge - Bag Door	1	7	66-2150	Decal - Bag Door	1
4	44-0522	Bag - Grass	1	8	37-1393	Door - Grass Bag	1

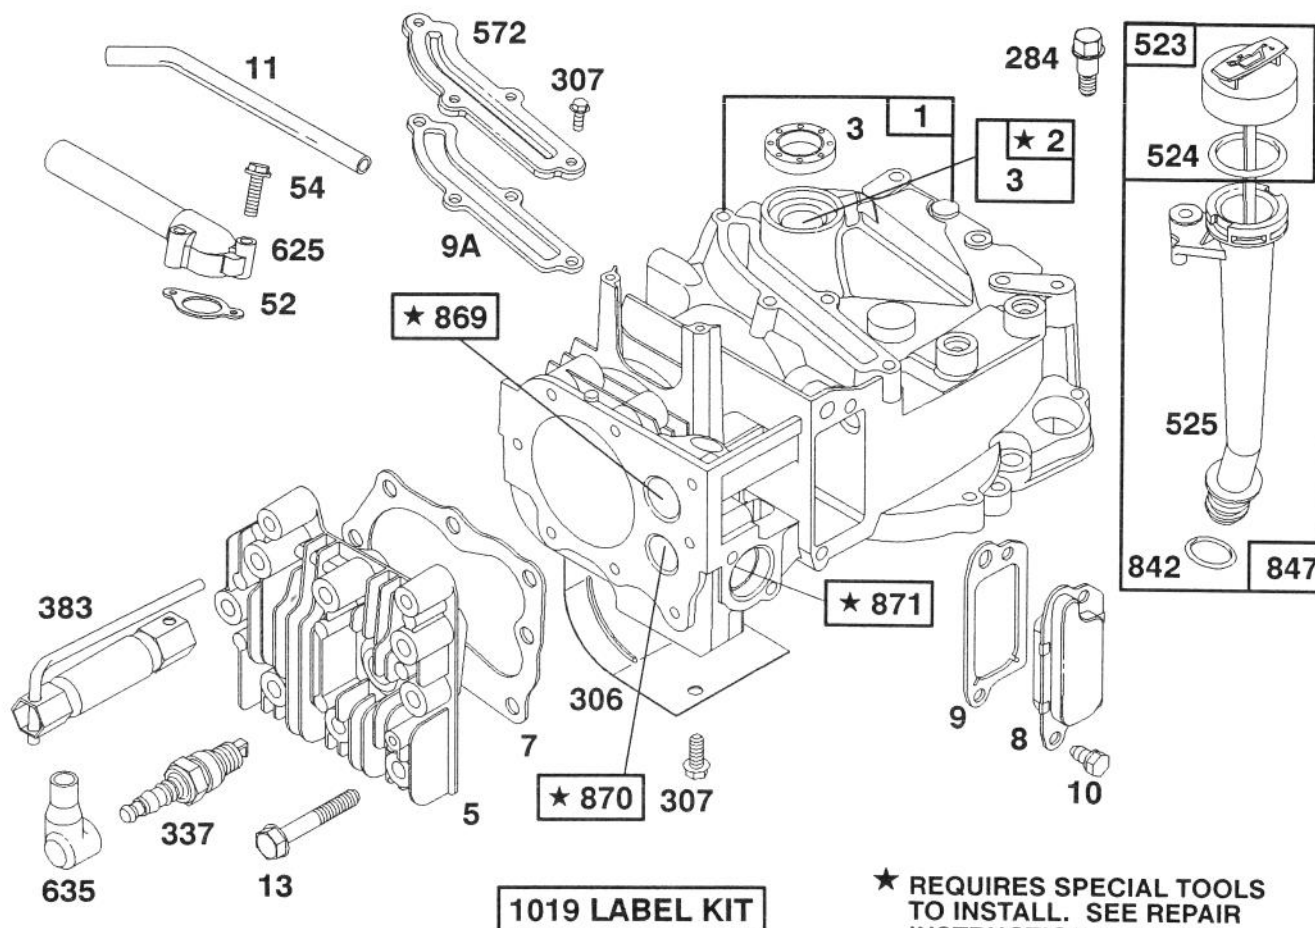


ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing-Cylinder	
		Note: Requires Special Tools for Installation.	1
★3	393862	Seal-Oil	1
5	213861	Head-Cylinder	1
★7	272200	Gasket-Cylinder Hd.	1
8	399717	Breather-Vlv. Chamber	1
★9	271904	Gasket-Valve Cover	1
★9A	272238	Gasket-Baffle Plate	1
10	94222	Screw-Breather Mtg.	1
11	231685	Tube-Breather	1
13	94547	Screw-Cylinder Hd.	1
★52	272199	Gasket-Intake Elbow	1
54	94526	Screw-Intake Elbow Mounting	1
284	94511	Screw-Hex. Head	1
306	224324	Shield-Cylinder	1

Ref. No.	Part No.	Description	No. Used
307	94515	Screw-Hex. Head	1
337	802592	Plug-Spark	1
383	89838	Wrench-Spark Plug	1
523	493950	Cap with Dipstick-Oil Filler	1
524	280393	Seal-Filler Tube	1
525	493952	Tube-Oil Filler	1
572	224328	Baffle-Cylinder	1
625	492717	Tube-Fuel Intake	1
635	66538	Elbow-Spark Plug	1
842	280966	Seal-O-Ring	1
847	493459	Dipstick and Tube Assy.-Oil Filler	1
869	213512	Seat-Intake Valve (Standard)	1
870	213513	Seat-Exhaust Valve (Standard)	1
871	262001	Guide-Exhaust Valve	
		Note: 63709 Guide-Intake Valve See Repair Instruction Manual.	1
1019	494256	Label Kit	1


★ Included in Gasket Set-Part No. 493263.

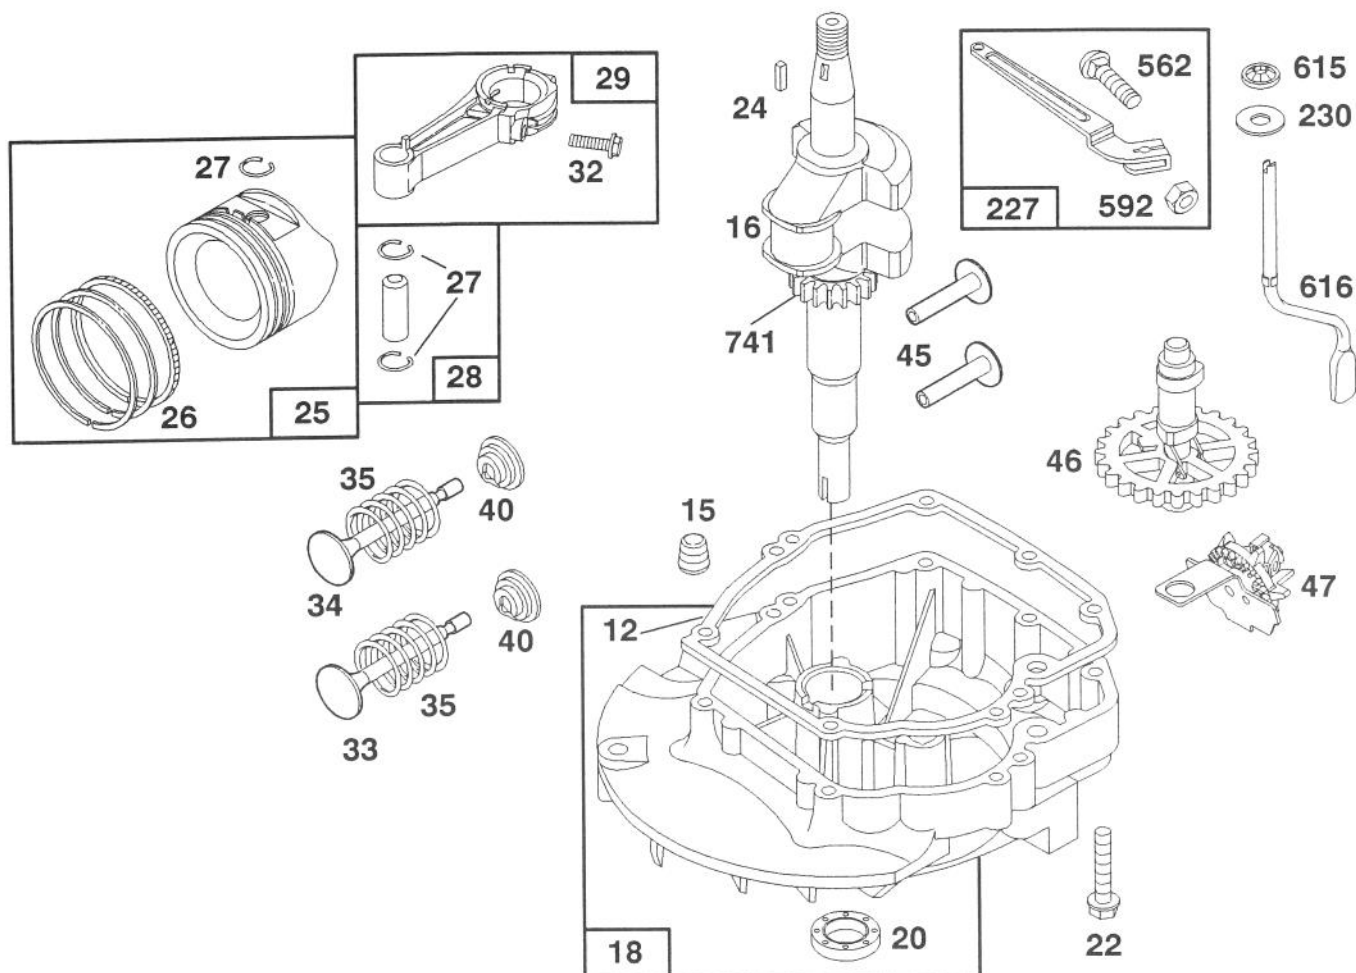

ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket-Crankcase	1	27	26026	Lock-Piston Pin	1
15	93418	Plug-Oil Drain	1	28	298909	Pin Assembly-Piston (Standard)	1
16	494546	Crankshaft		29	490566	Rod Assembly-Connecting	
		Note: Order 94388				Note: For Connecting Rod	
		For Timing Gear Key.	1			Bearing-Order No. 490743.	1
18	493279	Sump-Engine	1	32	94405	Screw-Connecting Rod	1
★20	399781	Seal-Oil	1	33	262651	Valve-Exhaust	1
22	94220	Screw-Sump Mtg. Sem		34	262652	Valve-Intake	1
		Note: 94612 Screw-Sump Mtg.		35	262224	Spring-Valve	1
		One Used in Hole		40	93312	Retainer-Valve Spring	1
		Nearest Breather.	1	45	262204	Tappet-Valve	1
24	222698	Key-Flywheel	1	46	492830	Gear-Cam	1
25	493262	Piston Assy. (Standard)	1	47	493737	Oil Slinger Gear and Bracket	1
	493385	Piston Assy. (.010" O.S.)	1	227	492349	Lever Assembly-Gov.	1
	493386	Piston Assy. (.020" O.S.)	1	230	67072	Washer-Gov. Crank	1
	493387	Piston Assy. (.030" O.S.)	1	562	92613	Bolt-Governor Lever	1
		PISTON RING SETS:	1	592	231082	Nut-Hex	1
26	493261	Ring Set-Piston (Std.)	1	615	94474	Pushnut (Governor Crank)	1
	493388	Ring Set-Piston (.010" O.S.)	1	616	262578	Crank-Governor	1
	493389	Ring Set-Piston (.020" O.S.)	1	741	262598	Gear-Timing	1
	493390	Ring Set-Piston (.030" O.S.)	1				

★ Included in Gasket Set-Part No. 493263.

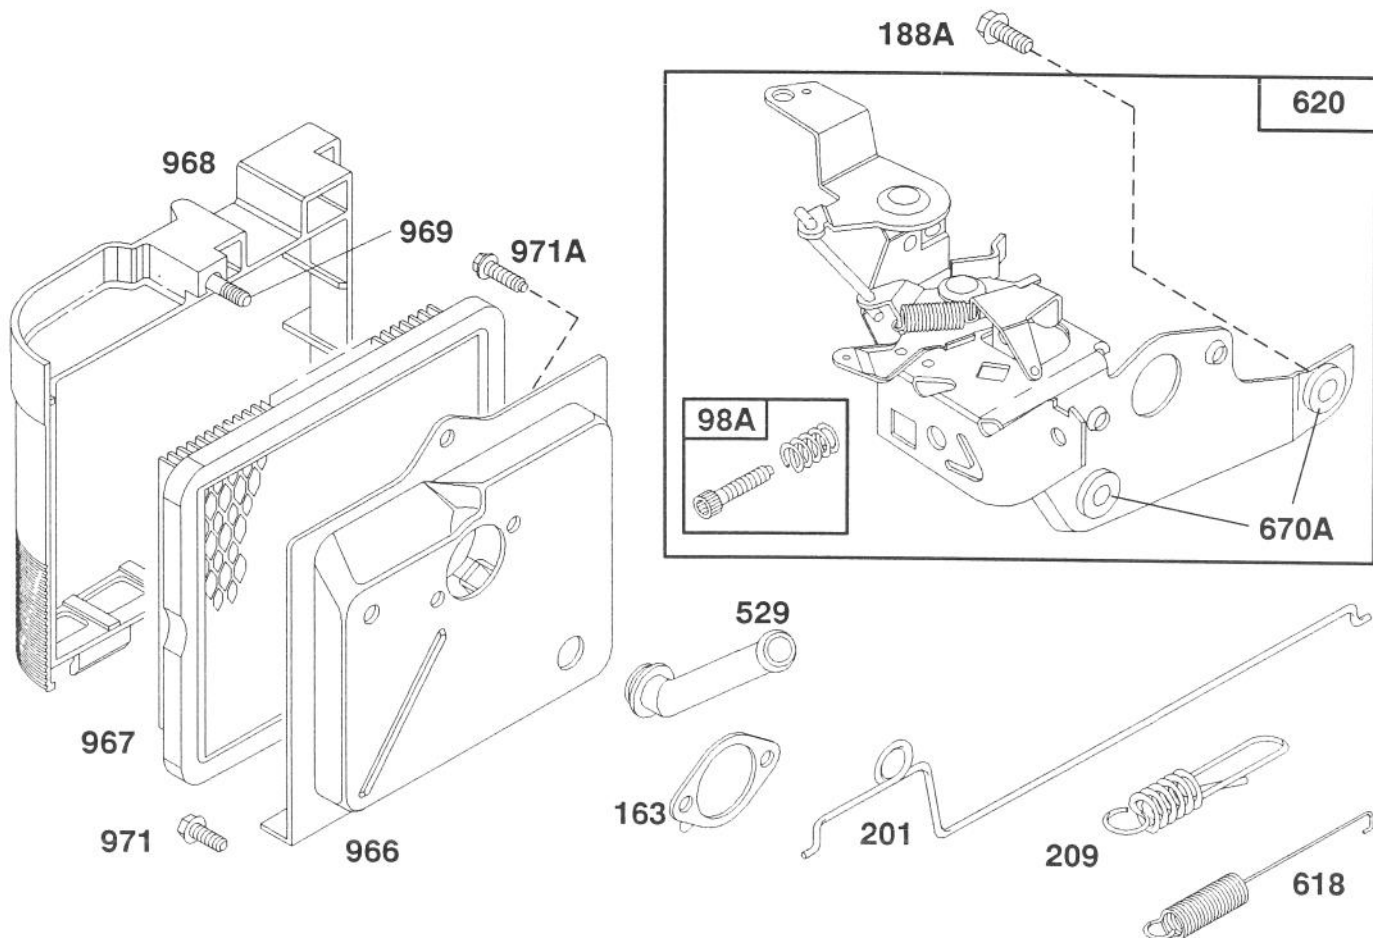


ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
98A	493280	Screw Assy.-Speed Adj.	1
★163	272296	Gasket-Air Cleaner	1
188A	94644	Screw-Hex. Head	1
201	262579	Link-Governor	1
209	262661	Spring-Governor	1
529	280943	Grommet-Breather	1
618	262749	Spring-Choke Return	1
620	493894	Bracket Assembly-Carburetor Control	1

Ref. No.	Part No.	Description	No. Used
670A	493823	Spacer-Carburetor Bracket (Includes 2)	1
966	492363	Base-Air Cleaner	1
967	491588	Filter-Air	1
968	280937	Cover-Air Cleaner	1
969	94120	Screw-Cover Mtg.	1
971	94269	Screw-Air Cleaner	1
971A	94121	Screw-Air Cleaner (Base to Carburetor)	1

★ Included in Gasket Set-Part No. 493263.

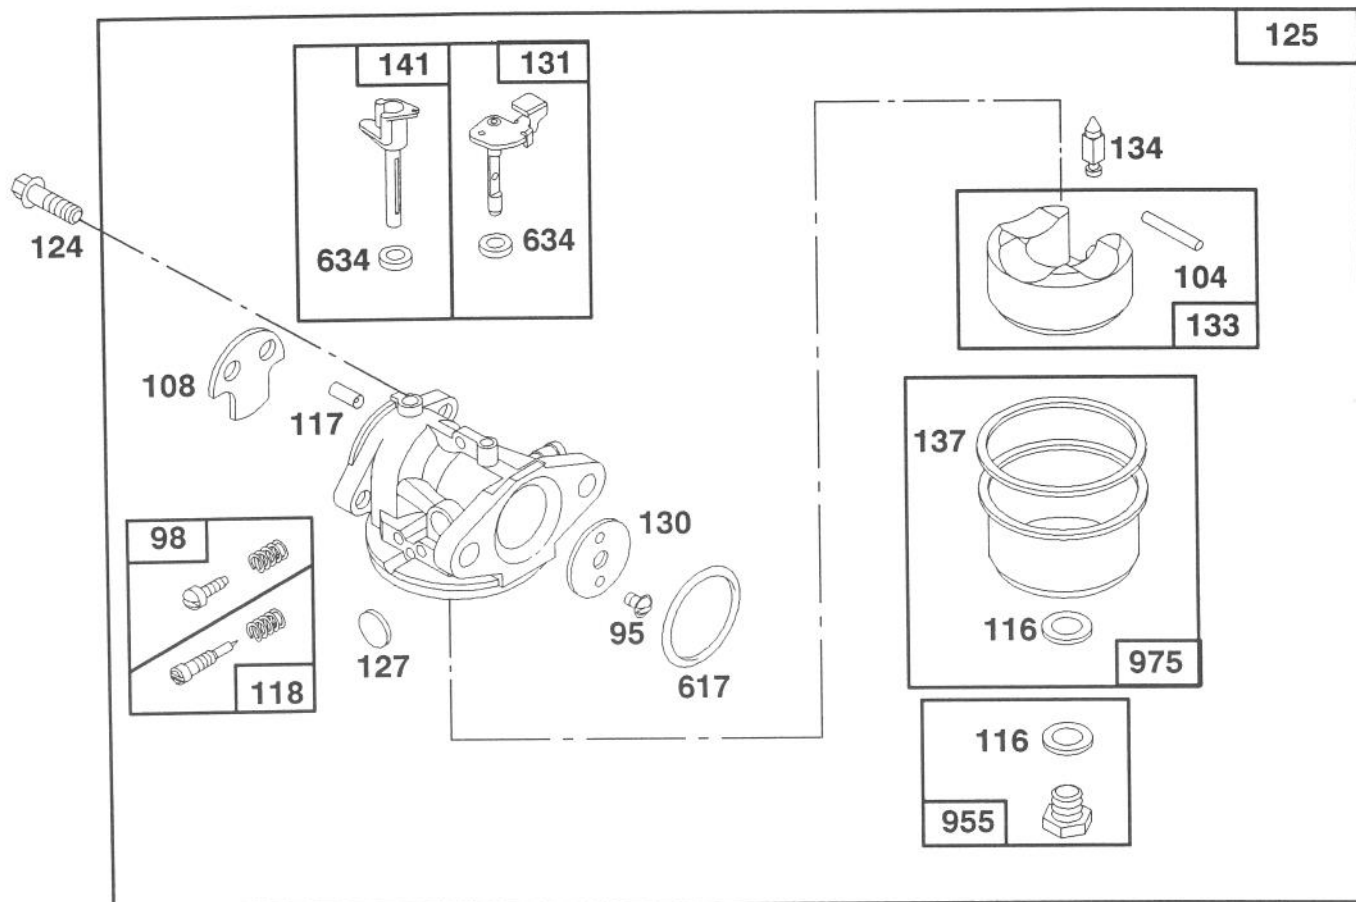


ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw-Throttle Valve Mounting	1
98	398185	Screw-Idle Adjustment	1
• 104	231371	Pin-Float Hinge	1
108	223471	Valve-Choke	1
•♦ 116		Gasket-Sealing (Sold in Kit Only).	1
• 117		Jet (Sold in Kit Only).	1
118	493765	Valve and Spring-Needle	1
124	94525	Screw-Carburetor Mtg.	1
125	494217	Carburetor Assembly	1
• 127		Plug-Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
130	223470	Valve-Throttle	1
131	493267	Shaft and Lever-Throttle	1
133	398187	Float Assy.-Carburetor	1
• 134	398188	Valve-Inlet (Includes Seat)	1
•♦ 137		Gasket-Bowl (Sold in Kit Only).	1
141	494218	Shaft-Choke	1
•♦ 617	270344	Seal-Fuel Intake Tube	1
•♦ 634		Washer-Shaft (Sold in Kit Only).	1
955	493869	Screw-Fuel Bowl	1
975	493640	Bowl-Carburetor	1


- Included in Carburetor Overhaul Kit-Part No. 493762.
- ♦ Included in Carburetor Gasket Set-Part No. 490937.

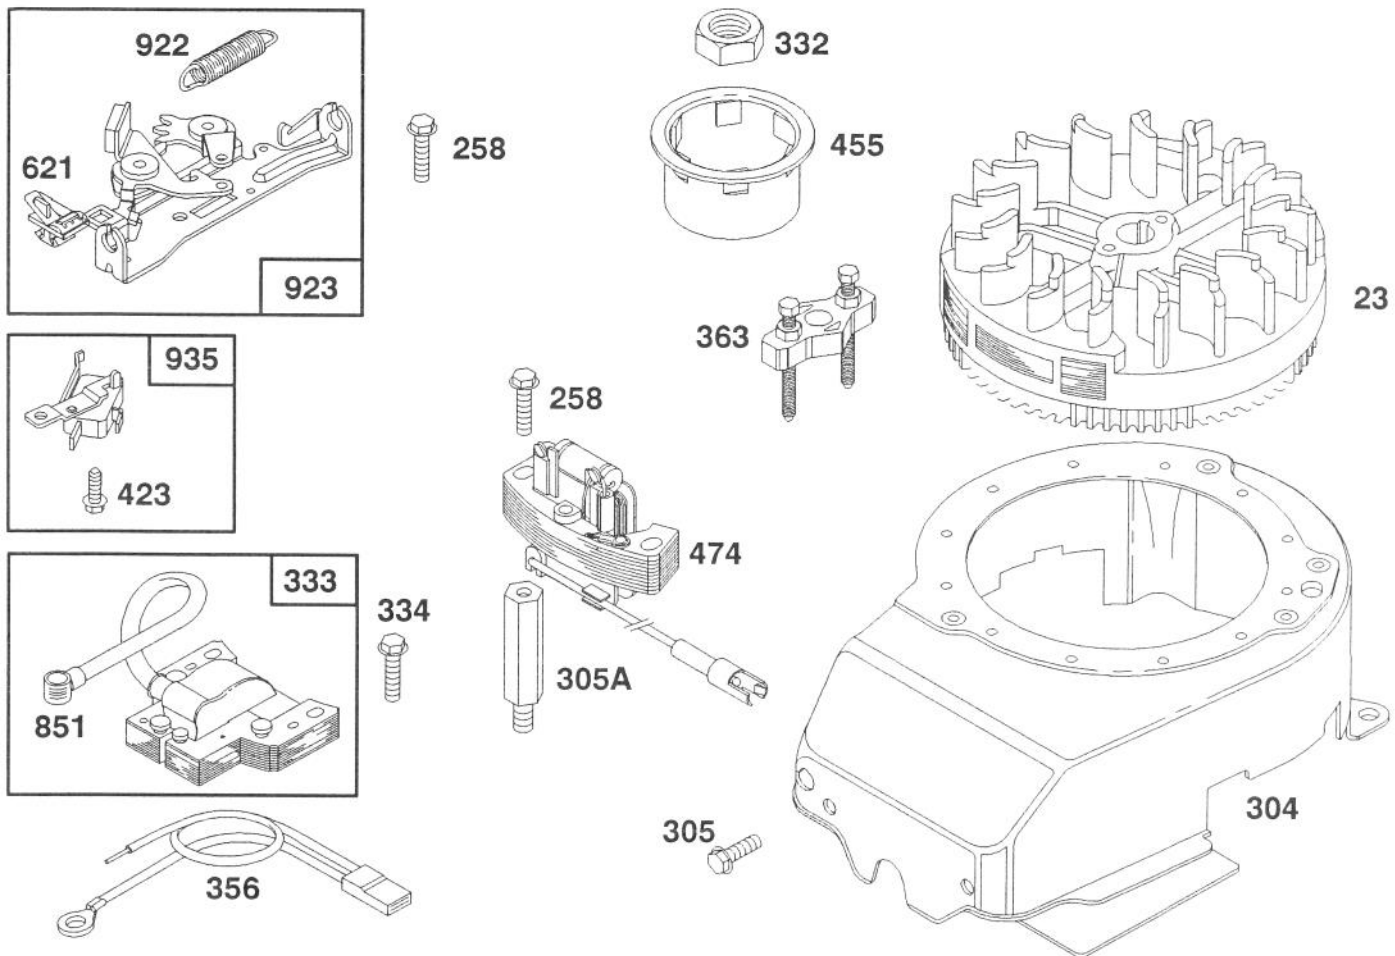

ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
23	492175	Flywheel Assembly	1
258	94512	Screw-Hex Head	1
304	493293	Housing-Blower	1
305	94513	Screw-Hex Head Sem	1
305A	94510	Stud-Stator Mounting	1
332	92284	Nut-Flywheel	1
333	802574	Armature-Magneto	1
334	93381	Screw-Armature Mounting	1
356	398808	Wire-Ground	1






Ref. No.	Part No.	Description	No. Used
363	19069	Puller-Flywheel	1
423	93758	Screw-Hex. Hd. Washer	1
455	224250	Cup-Starter	1
474	492841	Stator Assembly	1
621	396847	Switch-Stop	1
851	221798	Terminal-Ignition Cable	1
922	262640	Spring-Brake	1
923	493442	Brake Assembly	1
935	398758	Bracket and Switch Assembly	1

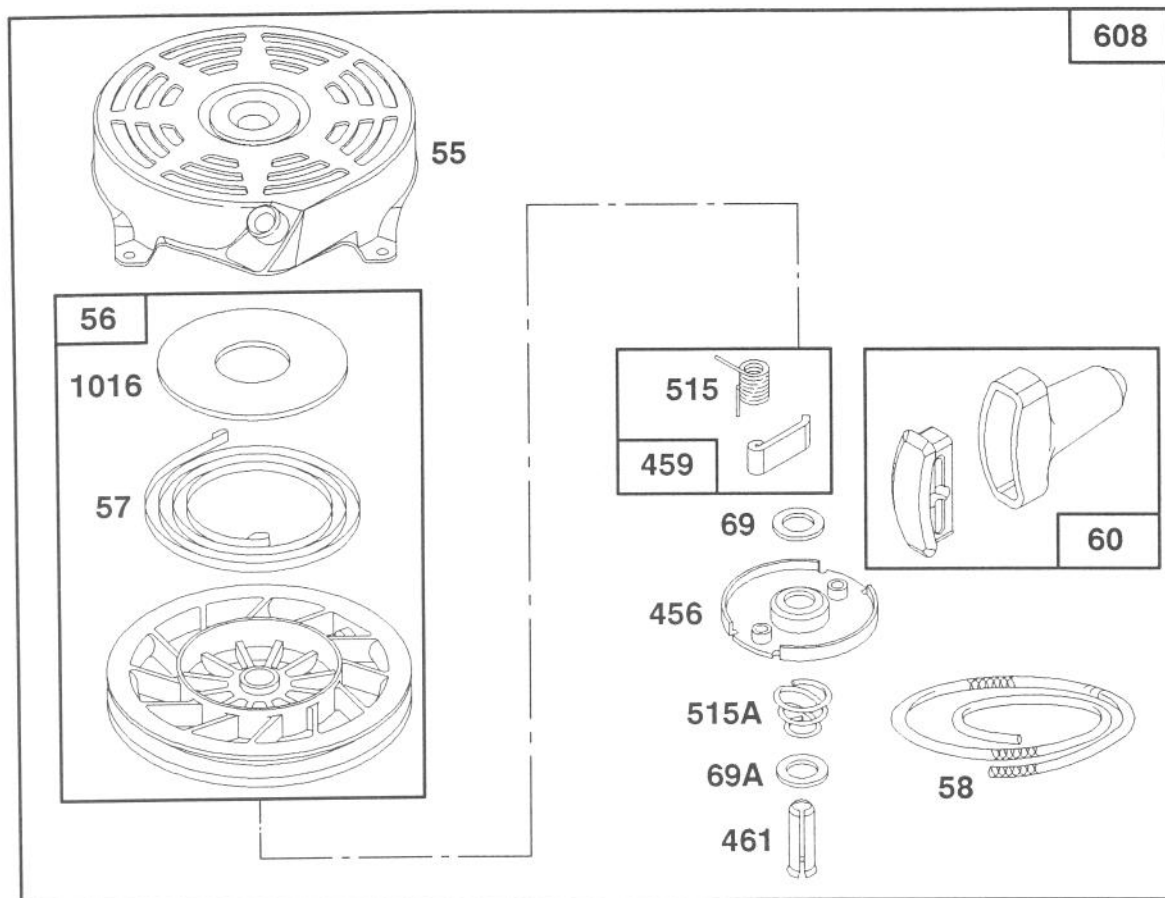

ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
55	492831	Housing-Rewind Starter	1
56	492832	Pulley-Rewind Starter	1
57	262594	Spring-Rewind Starter	1
58	280399	Rope-Rewind Starter (Cut to 88-5/8")	1
60	393152	Handle-Rewind Starter	1
69	280973	Washer-Rewind Starter	1
69A	224322	Washer-Rewind Starter	1
456	224321	Retainer-Rewind Starter	1
459	492833	Pawl-Starter	1


Ref. No.	Part No.	Description	No. Used
461	262626	Pin-Starter	1
515	262556	Spring-Pawl	1
515A	262625	Spring-Torsion	1
608	493295	Starter Assy.-Rewind Includes:	
	94128	Screw-Hex. Hd.	1
	92987	Nut-Hex.	1
946	223294	Stop-Rope	1
1016	224278	Cover-Rewind Starter	1

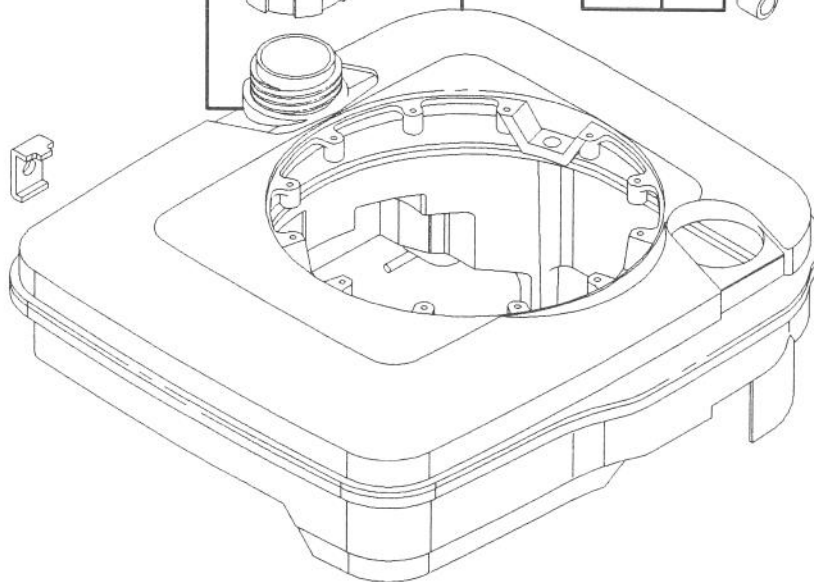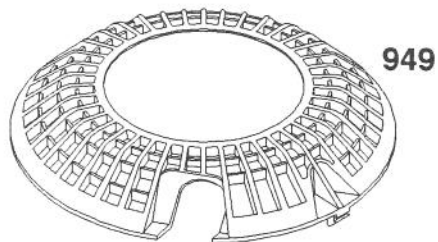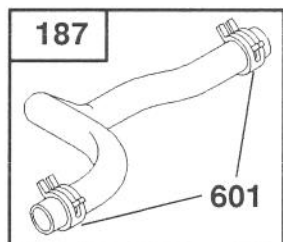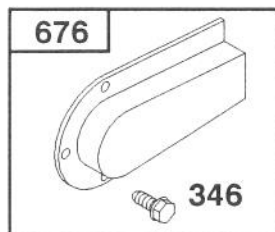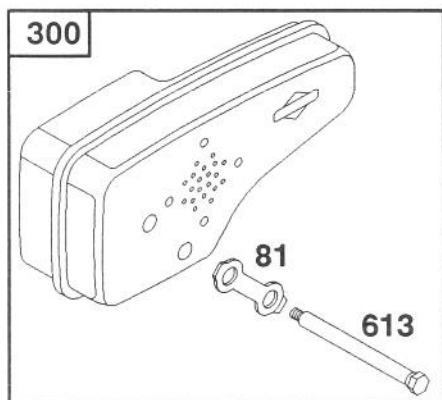

ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock-Muffler Screw	1
187	492791	Hose-Fuel	1
188	398540	Screw-Tank Mounting (Includes Washer)	1
265	221535	Clamp-Casing	1
267	94204	Screw-Clamp Mtg.	1
284	94511	Screw-Hex Head	1
300	490547	Muffler-Exhaust	1




Ref. No.	Part No.	Description	No. Used
346	93705	Screw-Hex. Head	1
601	93807	Clamp-Hose	1
613	94231	Screw-Muffler Mtg.	1
670	280512	Spacer-Fuel Tank	1
676	493871	Deflector-Muffler	1
949	281136	Guard-Finger	1
957	397974	Cap Assembly-Fuel	1
972	494358	Tank Assembly-Fuel	1

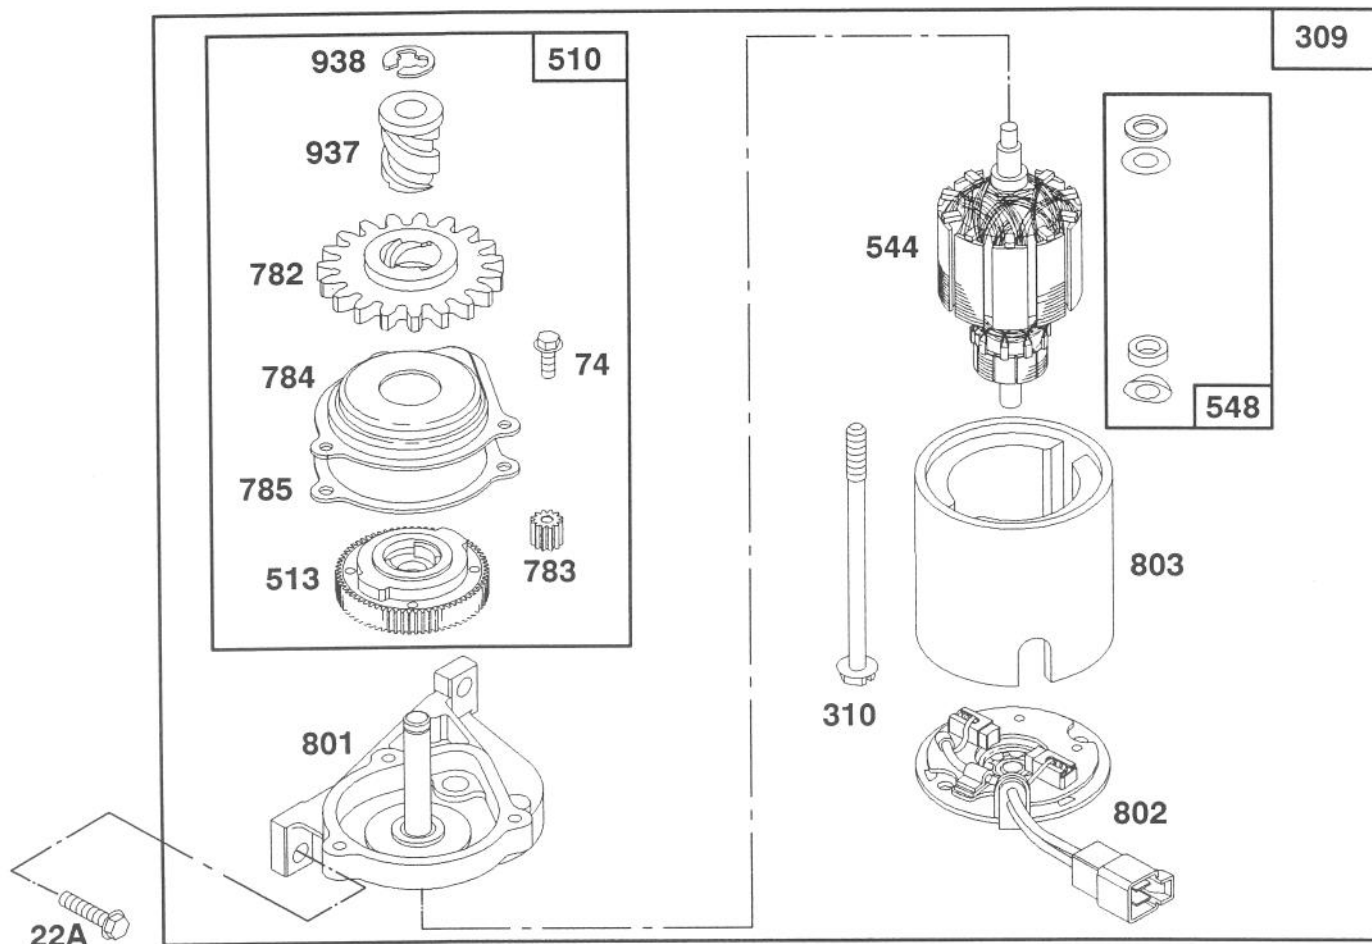

ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
22A	94268	Screw-Hex. Washer Hd.	1
74	93490	Screw-Hex. Head	1
309	492336	Starter-Electric	1
310	94553	Screw-Hex. Washer Head	1
510	494147	Drive Kit-Starter	1
513	394815	Clutch Assy.-Starter	1
544	492921	Armature Assy.	1
548	492919	Washer Set-Starter	1
782	281127	Pinion-Starter	1

Ref. No.	Part No.	Description	No. Used
783	261606	Gear-Pinion	1
784	224262	Cover-Gear	1
785	272201	Gasket-Cover	1
801	492335	Bracket Assy.-Starter	1
802	492922	Head Assy.-Starter	1
803	492920	Shell and Magnet Assy.-Starter	1
937	281125	Spline-Starter	1
938	93941	Retainer-Lock	1

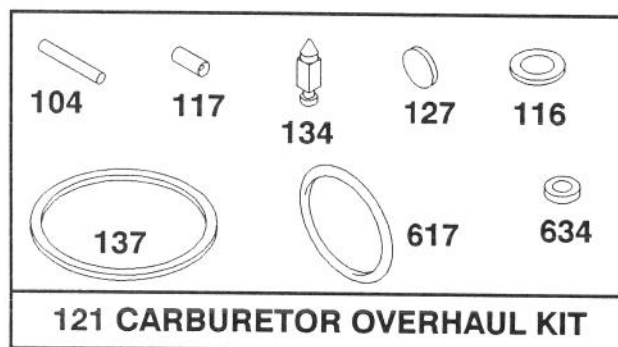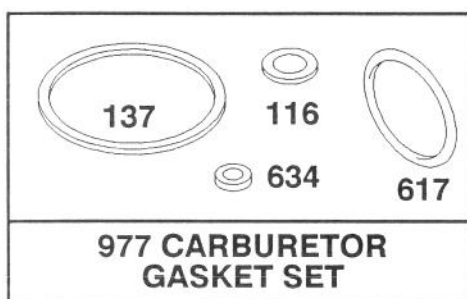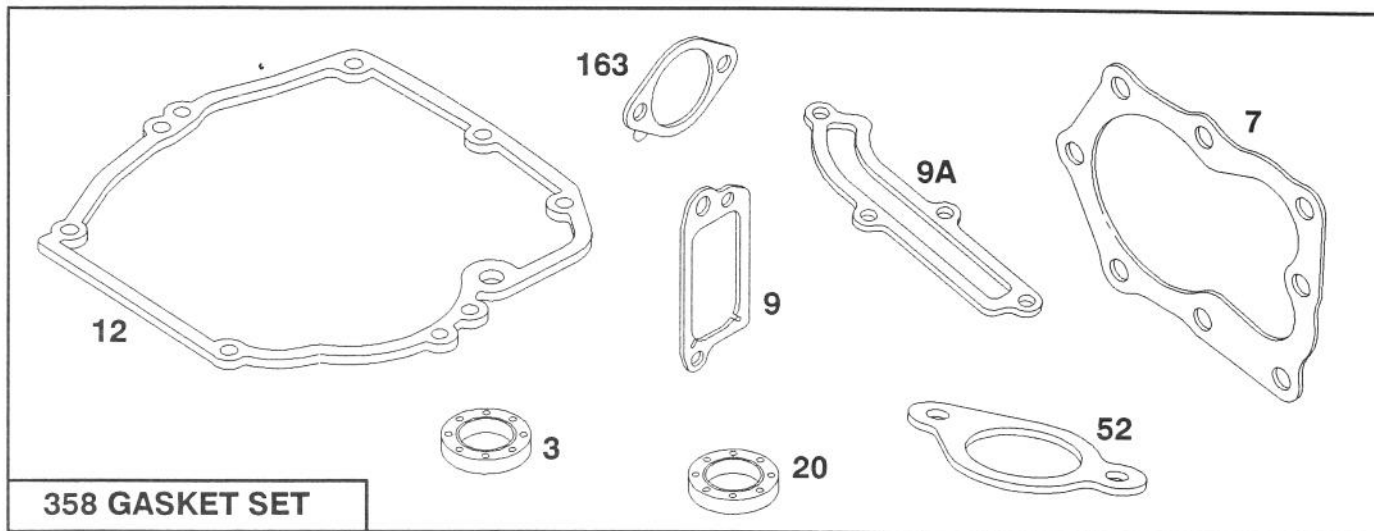

ENGINE BRIGGS & STRATTON MODEL 124707-3185-01

Ref. No.	Part No.	Description	No. Used
★3	393862	Seal-Oil	1
★7	272200	Gasket-Cylinder Hd.	1
★9	271904	Gasket-Valve Cover	1
★9A	272238	Gasket-Baffle Plate	1
★12	272198	Gasket-Crankcase	1
★20	399781	Seal-Oil	1
★52	272199	Gasket-Intake Elbow	1
●104	231371	Pin-Float Hinge	1
●●116		Gasket-Sealing (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●117		Jet (Sold in Kit Only).	1
121	493762	Carburetor Overhaul Kit	1
●127		Plug-Welch (Sold in Kit Only).	1
●134	398188	Valve-Inlet (Includes Seat)	1
●●137		Gasket-Bowl (Sold in Kit Only)	1
★163	272296	Gasket-Air Cleaner	1
358	493263	Gasket Set	1
●●617	270344	Seal-Fuel Intake Tube	1
●●634		Washer-Shaft (Sold in Kit Only)	1
977	490937	Gasket Set-Carburetor	1

● Included in Carburetor Overhaul Kit-Part No. 493762.

●● Included in Carburetor Gasket Set-Part No. 490937.

★ Included in Gasket Set-Part No. 493263.