



Dingo® 222 Traction Unit

Model No. 22300 - 890001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame And Loader Arm Assembly	 3	Electrical Assembly	 14
Front Wheel Assembly	 4	Group 1-Crankshaft	 15
Rear Wheel Assembly	 5	Group 2-Crankcase	 16
Hydraulic Motor Assembly No. 98-4704	 6	Group 3-Oil Pan/lubrication	 17
Engine Assembly	 7	Group 4-Head/valve/breather	 18
Fuel Tank Assembly 100-2531	 8	Group 5-Ignition/electrical	 19
Hydraulic Assembly	 9	Group 6-Blower Housing & Baffles	 20
Hydraulic Assembly (continued)	 10	Group 7-Starting System	 21
Hydraulic Cylinder Assembly	 11	Group 8-Fuel System	 22
Hydraulic Valve Assembly	 12	Group 9-Engine Controls	 23
Decal Locations	 13	Group 10-Air Intake/filtration	 24
		Group 11-Exhaust	 25


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|--|----------------------------|
| ❶ Not illustrated | ❷ Obtain Parts From Kohler |
| ❸ Obtain Locally | ❹ Not Serviced Separately |
| ❺ Pivot Pin Requires Special Bolt Number 99-5105 | |

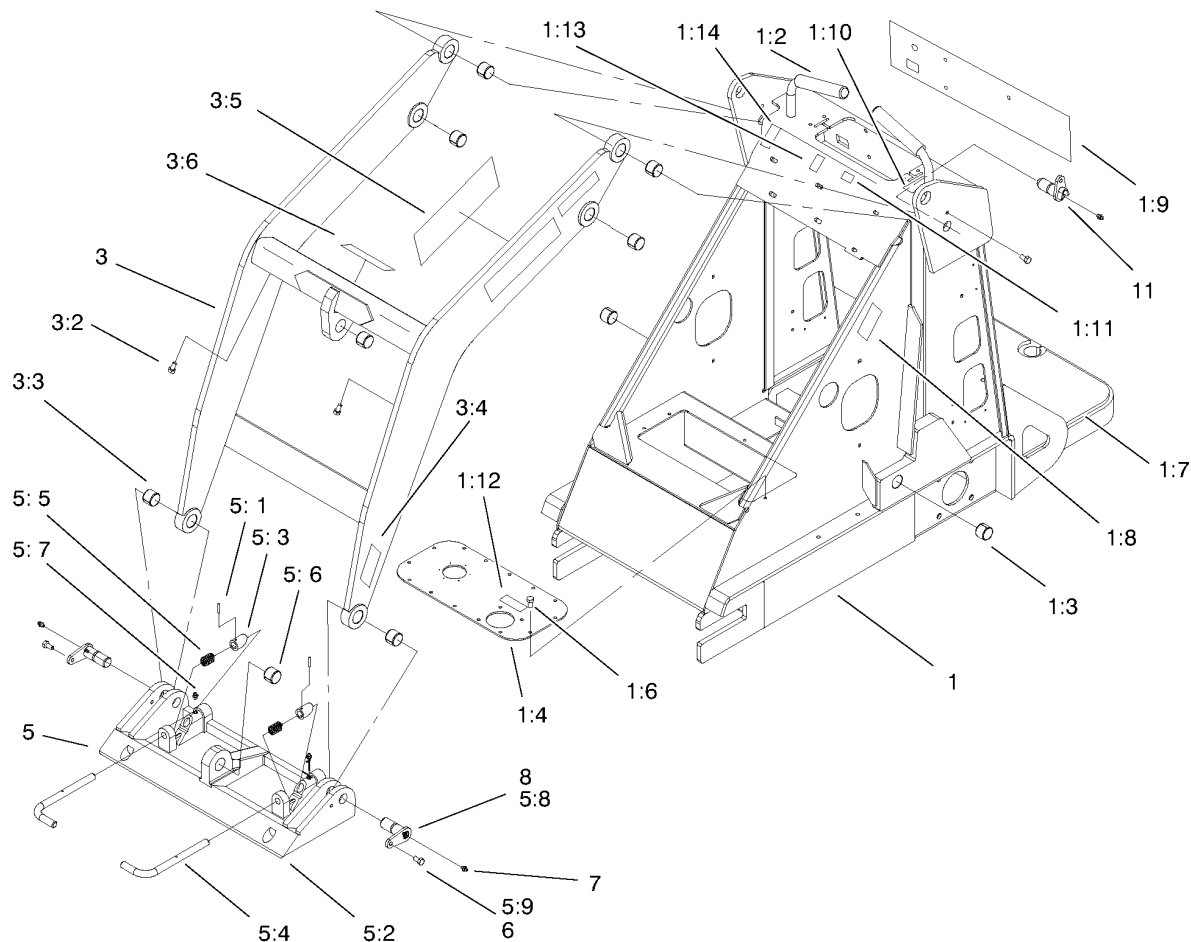

Frame And Loader Arm Assembly

Ref	Part No.	Qty.	Description
1	99-3252	1	Frame-ASM
1:2	99-3251	2	Grip-Cushion
1:3	98-4871	2	Bushing-Tension
1:4	99-3253	1	Cover HYD
1:6	33113-020	16	Screw-HH
1:7	98-9947	2	Tread-Foot
1:8	80-8010	2	Decal-Warning, Keep Hands Away
1:9	99-1385	1	Decal-Panel, Instrument
1:10	98-8219	1	Decal-Throttle
1:11	98-8220	1	Decal-Limiter, Speed
1:12	85-4730	1	Decal-Only, HYD Oil
1:13	98-8235	1	Decal-Selector
1:14	98-4677	1	Decal-Power, Auxiliary
3	99-1354	1	Loader ASM
3:2	32144-70	2	Screw-HWHTF
3:3	98-4871	7	Bushing-Tension
3:4	80-8010	4	Decal-Warning, Keep Hands Away
3:5	98-9051	1	Decal-Danger
3:6	98-4682	1	Decal-Caution
5	98-4690	1	Quick Attach ASM
5:1	32121-94	2	Pin-Special
5:2	98-4691	1	Mount-Quick Attach

Ref	Part No.	Qty.	Description
5:3	98-4692	2	Cam-Attach, Quick
5:4	98-4693	2	Pin-Quick Attach
5:5	98-4694	2	Spring-Compression
5:6	98-4871	1	Bushing-Tension
5:7	302-5	2	Fitting-Grease
5:8	99-1414	2	Pin-Pivot
5:9	99-5105	2	Bolt-Shoulder
6	48-7700	10	Screw-HH
7	302-5	10	Fitting-Grease
8	99-3045	10	ASM - Pivot Pin, Au
11	98-4716	2	Pin-Pivot

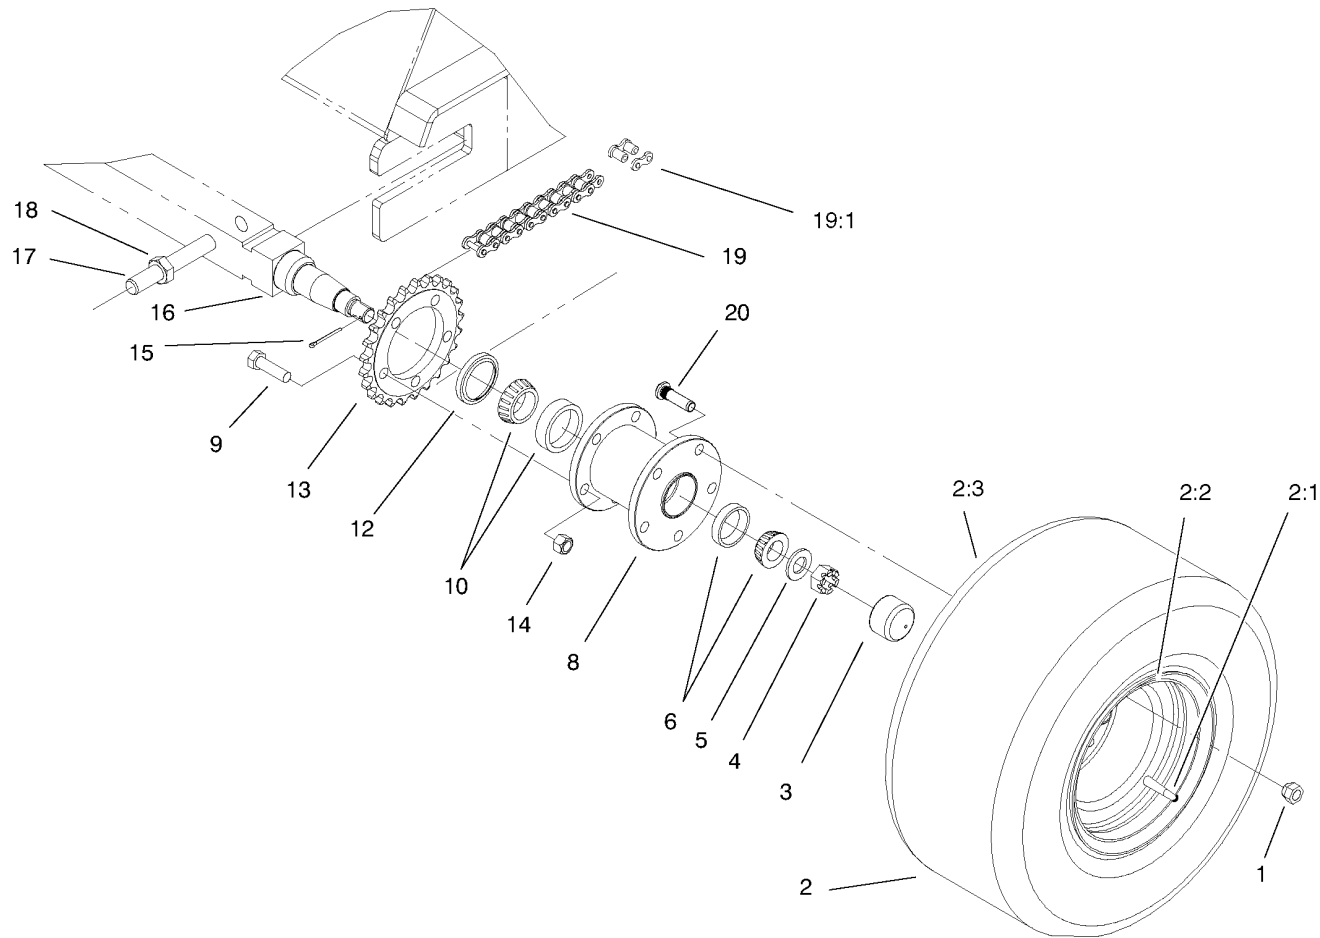


Front Wheel Assembly

Ref	Part No.	Qty.	Description				
1	242-35	20	Nut-Wheel				
2	99-3257	4	Tire And Wheel ASM				
2:1	106396	4	Tube-Tire				
2:2	99-3063	4	Wheel				
2:3	99-3062	4	Tire				
3	99-3258	2	Dust Cap				
4	32146-14	2	Locknut				
5	3256-28	2	Washer-Flat				
6	99-3260	2	Bearing-Roller Tapered				
8	99-3261	2	Hub-Front				
9	324-6	20	Screw-HH				
10	99-3262	2	Bearing-Cup And Cone				
12	106-8184	2	Seal-Bearing, Wheel				
13	98-9937	4	Sprocket-25T				
14	3219-4	20	Nut-Hex				
15	3272-12	2	Pin-Cotter				
16	99-3264	1	Axle-Front				
17	98-4706	2	Bolt-Tension				
18	3218-7	4	Nut-Jam				
19	98-4906	2	Chain-Roller				
19:1	98-9089	2	Link-Connecting				
20	242-34	20	Stud-Drive				




Ref	Part No.	Qty.	Description				
1	26-3790	2	Nut-Lock				
2	99-3255	2	Hub - Rear				
3	98-4704	2	Hydraulic Motor ASM				
①3:1	94-8178	2	Seal Kit				
4	48-9540	8	Nut-Lock, Hex NI				
5	48-9450	8	Bolt				

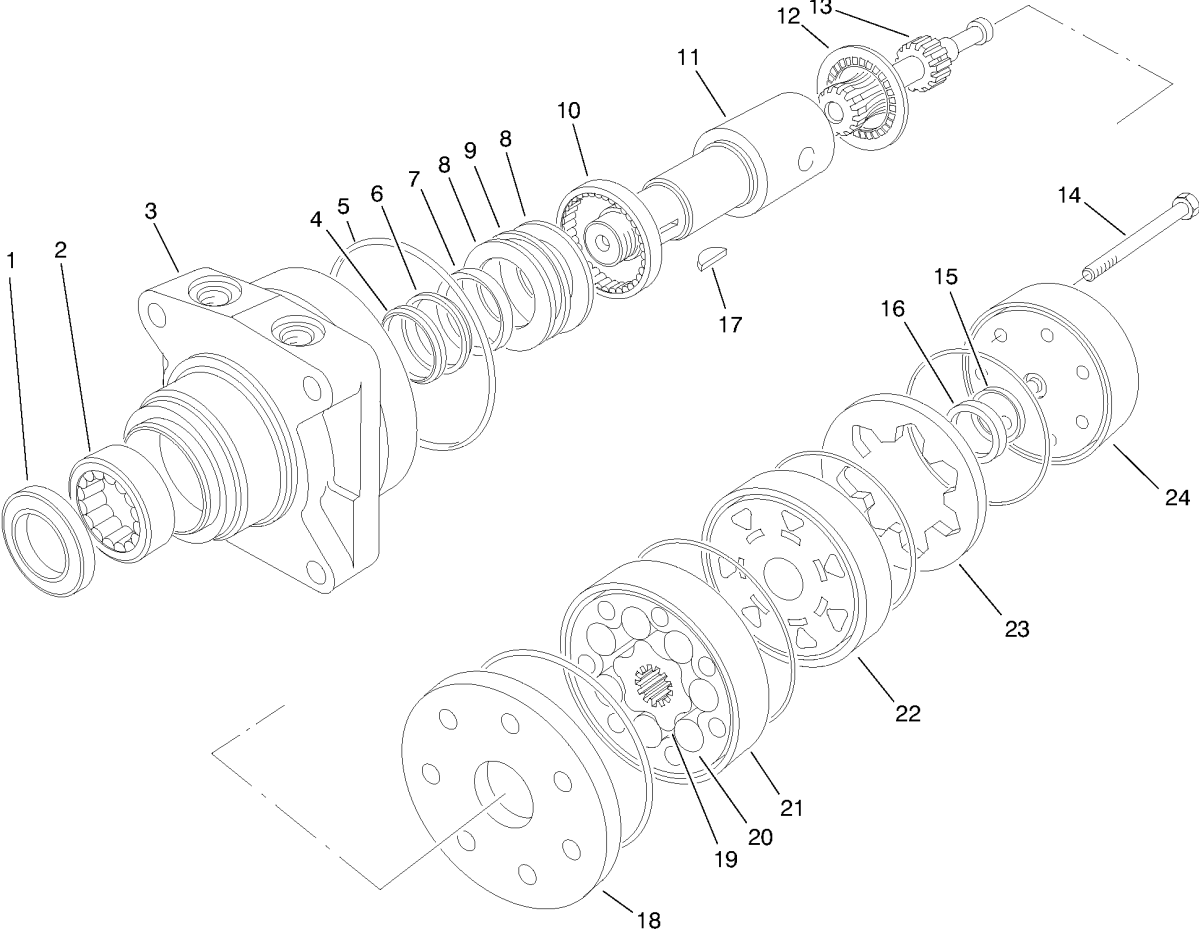

Hydraulic Motor Assembly No. 98-4704


Ref	Part No.	Qty.	Description				
4		1	Screw				
11	99-3090	1	Shaft-Coupling				
13		7	Link-Drive				
14	99-3091	1	Screw-Cap, HH				
17	3257-42	1	Key-Woodruff				
18		1	Plate-Wear				
22		1	Manifold				
24		1	End Cover Assembly				
1	94-8178	1	Seal Kit (Incl. Ref. #1, 4-7 & 15)				

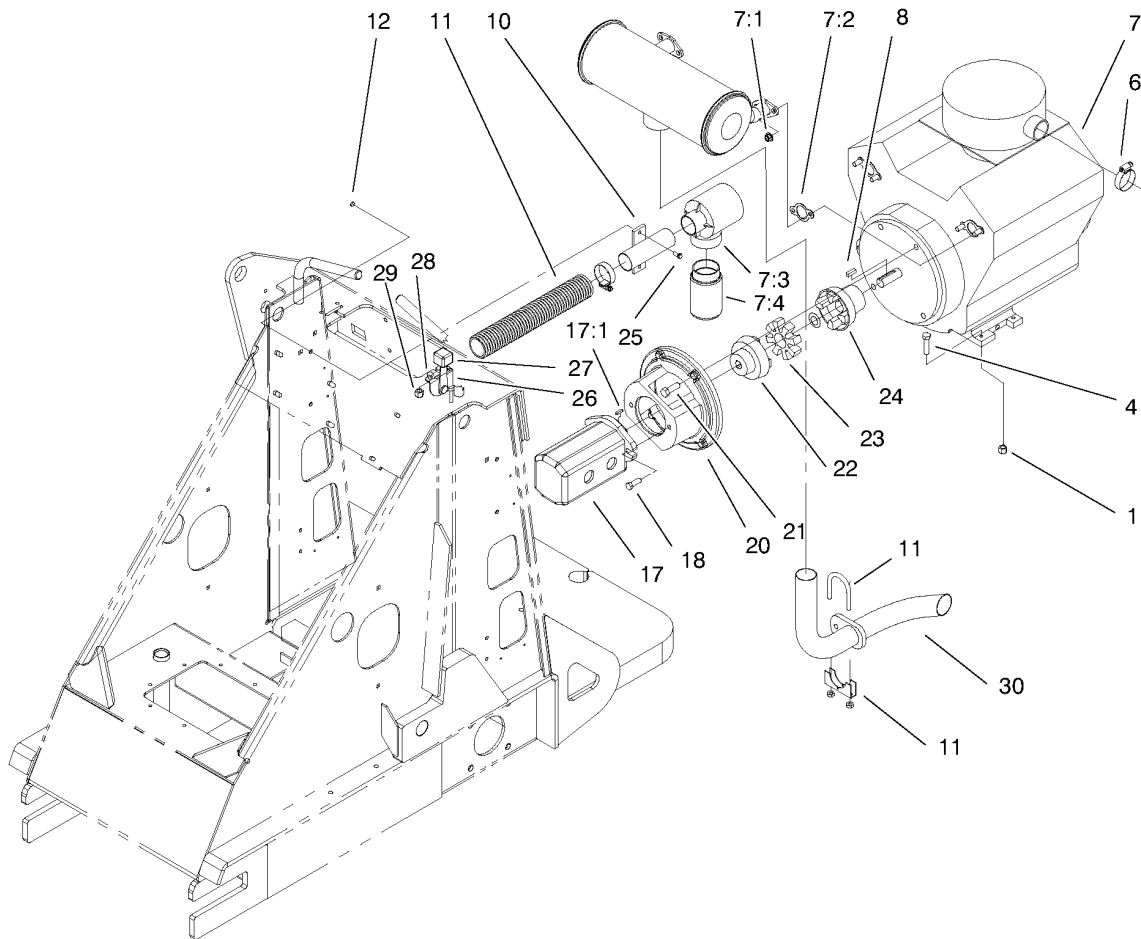

Engine Assembly


Ref	Part No.	Qty.	Description
1	3296-39	4	Nut-Lock, NI
4	323-9	4	Screw-HH
6	2412-111	4	Clamp
7		1	Engine (Ch22S 66551) Kohler 22 Hp
7:1	92-6780	4	Nut-HF
7:2	93-0350	2	Gasket-Exhaust
7:3	98-9903	1	Precleaner - Kohler F/W
7:4	98-9904	1	Jar - Precleaner
8	10-7070	1	Key-Square
10	99-3266	1	Tube Weld ASM
11	98-9073	1	Hose - Air
12	3296-29	16	Nut-Lock, NI
❶14	100-2531	1	Fuel Tank Kit-Gas
16	99-3293	1	Plate
17	99-3270	1	Pump-Gear, Tandem
17:1	98-4700	1	Key-Square
❶17:2	99-5004	1	Seal Kit - Pump
❶17:3	48-8070	1	Washer-Lock
❶17:4	100-2112	1	Nut-Jam
18	48-7780	4	Screw
20	99-3283	1	Coupling
21	324-6	4	Screw-HH
22	99-3269	1	Coupling

Ref	Part No.	Qty.	Description
23	99-3268	1	Hub-Pump
24	99-3267	1	Hub-Engine
25	322-3	2	Screw-HH
26	98-4707	1	Plate - Control
27	85-9310	1	Control-Choke / Throttle
28	3234-33	2	Screw-HHF
29	32146-17	2	Nut-Lock
30	99-3272	1	Tube-Exhaust
❶	2412-98	2	Clamp
❶	98-4668	1	Hose-Fuel

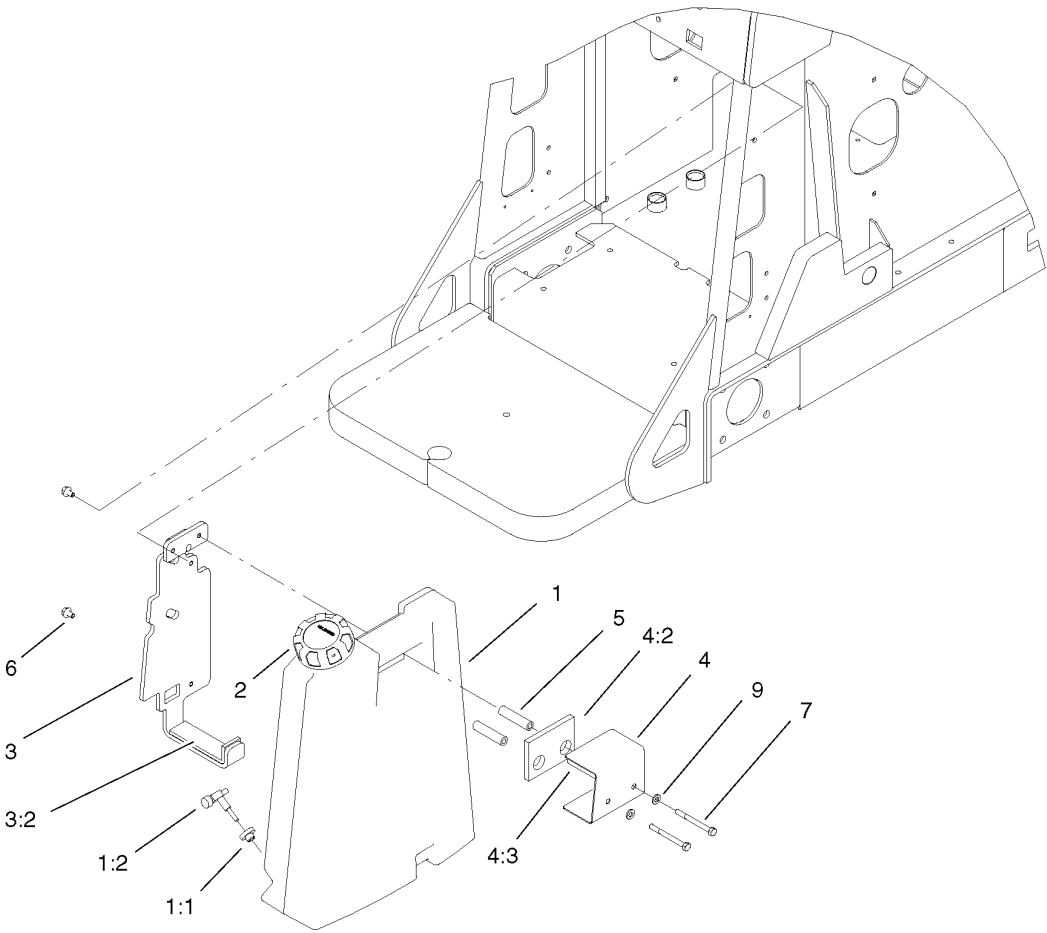

Fuel Tank Assembly 100-2531


Ref	Part No.	Qty.	Description				
1	98-4654	1	Fuel Tank ASM				
1:1	104047	1	Bushing				
1:2	104048	1	Valve-Fuel				
2	88-3980	1	Gas Cap ASM				
3	100-2540	1	Mount ASM				
3:2	100-2194	1	Pad-Foam				
4	100-2541	1	Plate ASM				
4:2	100-2195	1	Pad-Foam				
4:3	100-2196	1	Pad-Foam				
5	100-1718	2	Spacer				
6	100-1719	2	Screw-Flange				
7	100-1720	2	Screw-HH				
8	2412-108	1	Clamp-Worm				
9	3256-23	2	Washer-Flat				

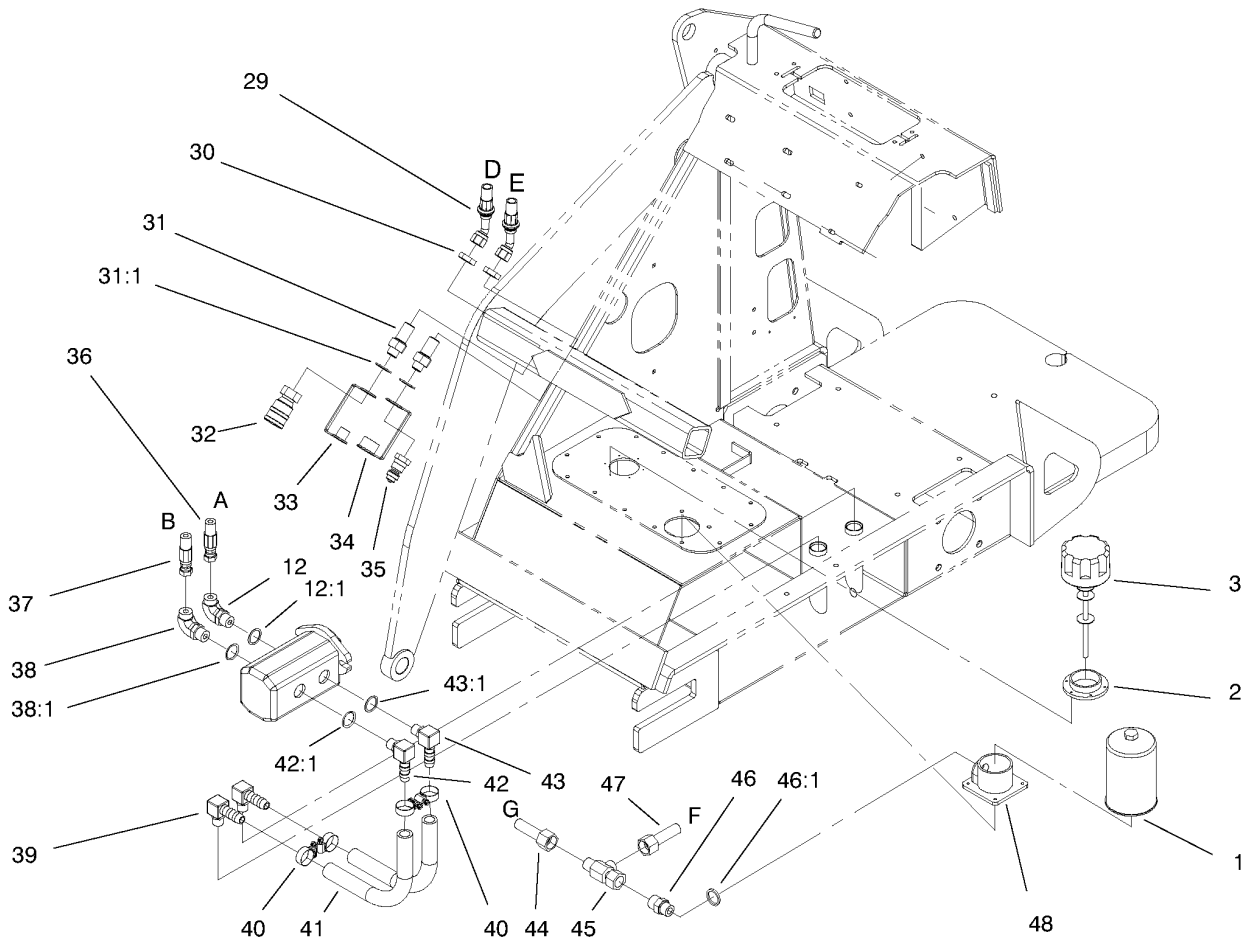

Hydraulic Assembly

Ref	Part No.	Qty.	Description
1	99-5084	1	Filter-Element
2	99-3288	1	Cap-Mount
3	99-3287	1	Cap-HYD
12	99-3291	1	Adapter
12:1	99-5078	1	O-Ring
29	99-5068	2	Hose-HYD
30	99-5070	2	Nut-Bulkhead
31	99-5071	2	Union-Bulkhead
31:1	99-5078	2	O-Ring
32	99-1394	1	Quick Coupler-Female
33	98-9913	1	Dust Plug
34	98-9912	1	Cap-Dust
35	99-1393	1	Quick Coupler - Male
36	99-5066	1	Hose-HYD
37	99-5069	1	Hose-HYD
38	99-5072	1	Adaptor - 90 DEG
38:1	99-5075	1	O-Ring
39	99-5088	2	Fitting-Barbed 90 DEG
40	2412-129	4	Clamp-Hose
41	99-5067	2	Hose - HYD
42	99-5087	1	Fitting-Barbed 90 DEG
42:1	99-5075	1	O-Ring
43	99-5086	1	Fitting-Barbed 90 DEG
43:1	99-5078	1	O-Ring


Ref	Part No.	Qty.	Description
44	99-5060	1	Tube-HYD
45	94-7022	1	Tee
46	99-5083	1	Fitting-Straight
46:1	99-5085	1	O-Ring
47	99-5061	1	Tube-HYD
48	99-3289	1	Filter-Mount

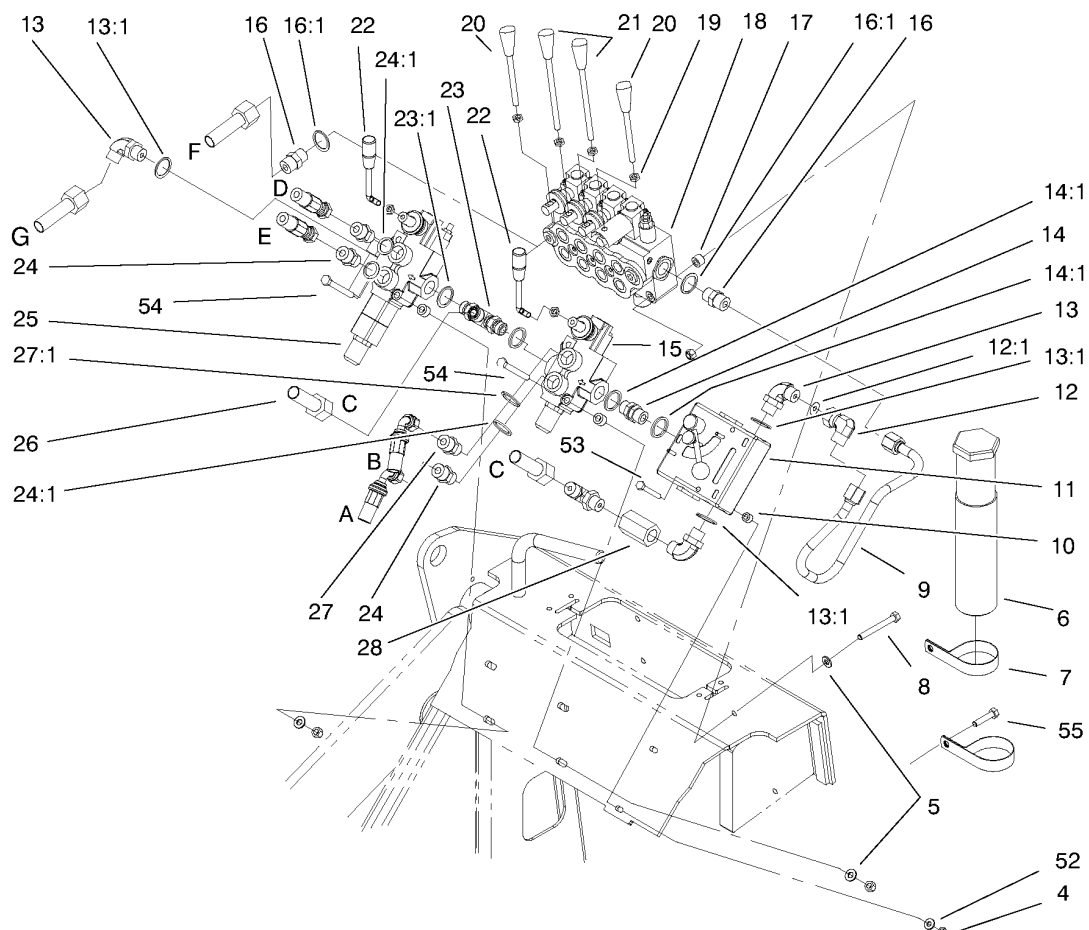

Hydraulic Assembly (continued)


Ref	Part No.	Qty.	Description
4	3296-42	6	Nut-Lock, NI
5	3256-23	7	Washer-Flat
6	74-0720	1	Tube-Manual
7	2412-133	2	R-Clamp
8	322-20	3	Screw-HH
9	99-5059	1	Tube-HYD
10	98-4799	2	Tube-Spacer
11	99-3277	1	Valve - HYD, Flow
11:1	99-3298	1	Seal Kit - Valve
11:2	98-9098	1	Handle Hardware Kit
12	99-3291	1	Adapter
12:1	99-5078	1	O-Ring
13	99-5079	4	Adaptor - 90 DEG
13:1	99-5078	4	O-Ring
14	99-5080	1	Connector-Straight Adj.
14:1	99-5078	2	O-Ring
15	99-3276	1	Valve - HYD, Selector
15:1	98-4721	1	Seal Kit
16	99-5081	2	Fitting-Straight
16:1	99-5078	2	O-Ring
17	98-4695	7	Spacer
18	99-3275	1	Valve - HYD, 4-Spool
18:1	98-4720	1	Seal Kit
19	42-9580	10	Nut-Hex

Ref	Part No.	Qty.	Description
20	98-4722	2	Lever - Valve
21	98-4723	2	Lever - Valve
22	98-4729	2	Lever-Valve
23	99-5090	1	Adapter-Tee Adjustable
23:1	99-5078	2	O-Ring
24	99-5082	7	Fitting-Straight
24:1	99-5075	14	O-Ring
25	99-3274	1	Valve-HYD, Aux.
25:1	98-4721	1	Seal Kit
26	99-5058	1	Tube-HYD
27	99-5073	1	Fitting
27:1	99-5075	1	O-Ring
28	99-5077	1	Valve-Inline Check
52	3256-22	3	Washer-Flat
53	321-14	2	Screw-HH
54	322-13	4	Screw-HH
55	32144-70	2	Screw-HWHTF

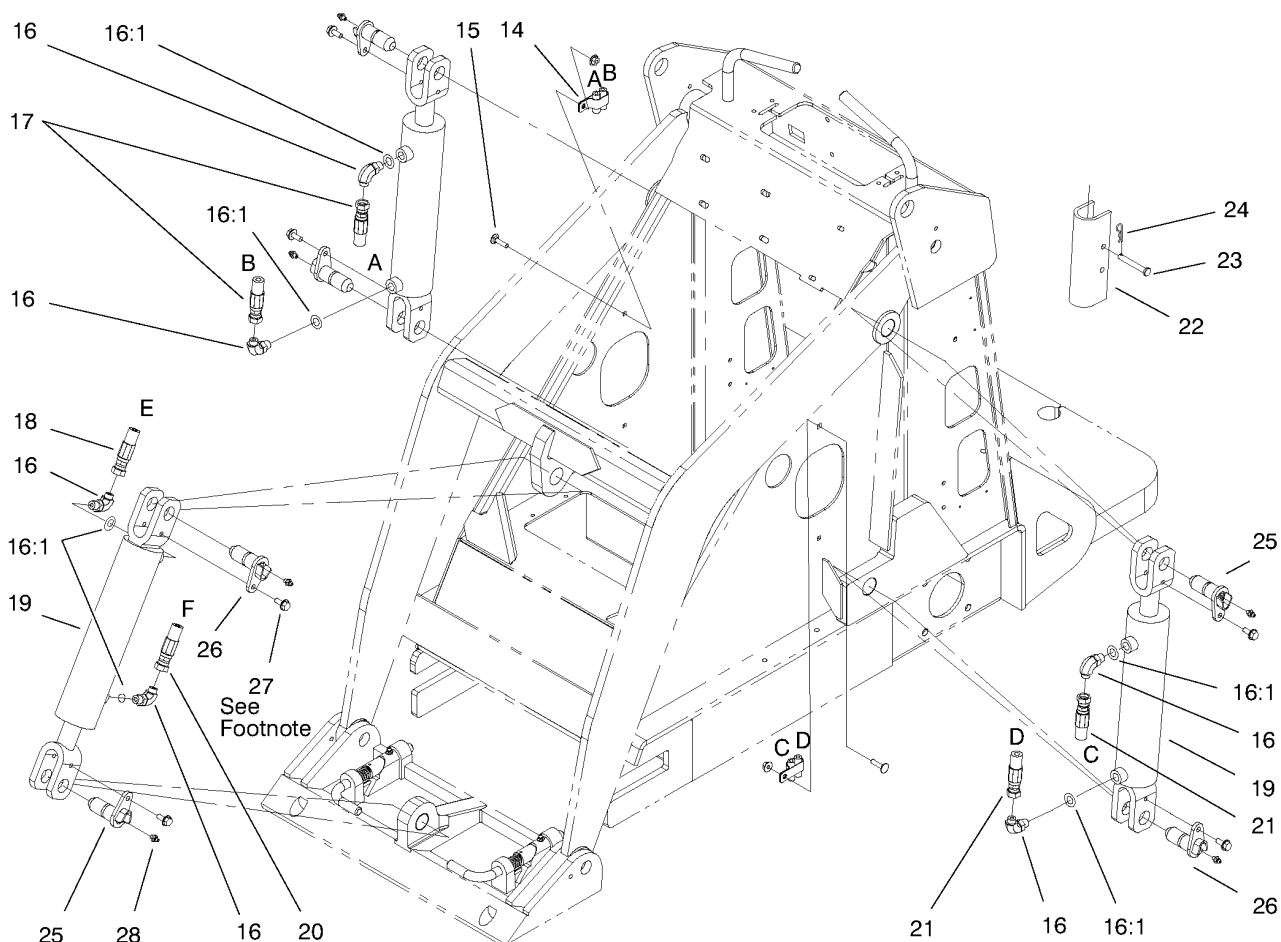

Hydraulic Cylinder Assembly


Ref	Part No.	Qty.	Description
14	2412-137	2	Clamp-R, Double
15	3230-2	2	Bolt-CARR
16	353-374	6	Elbow-90 DEG
16:1	237-42	6	O-Ring
17	99-5062	2	Hose-HYD
18	99-5063	1	Hose-HYD
19	99-3165	3	Hydraulic Cylinder
① 19:1	99-3181	3	Seal Kit-Cylinder
20	99-5064	1	Hose-HYD
21	99-5065	2	Hose-HYD
22	98-4675	2	Lock-Cylinder
23	283-52	2	Pin-Clevis
24	3290-467	2	Pin-Hair
⑤ 25	99-3045	6	ASM - Pivot Pin, Au
⑤ 26	99-3044	6	ASM - Pivot Pin, Au
27	48-7700	2	Screw-HH
28	302-5	2	Fitting-Grease

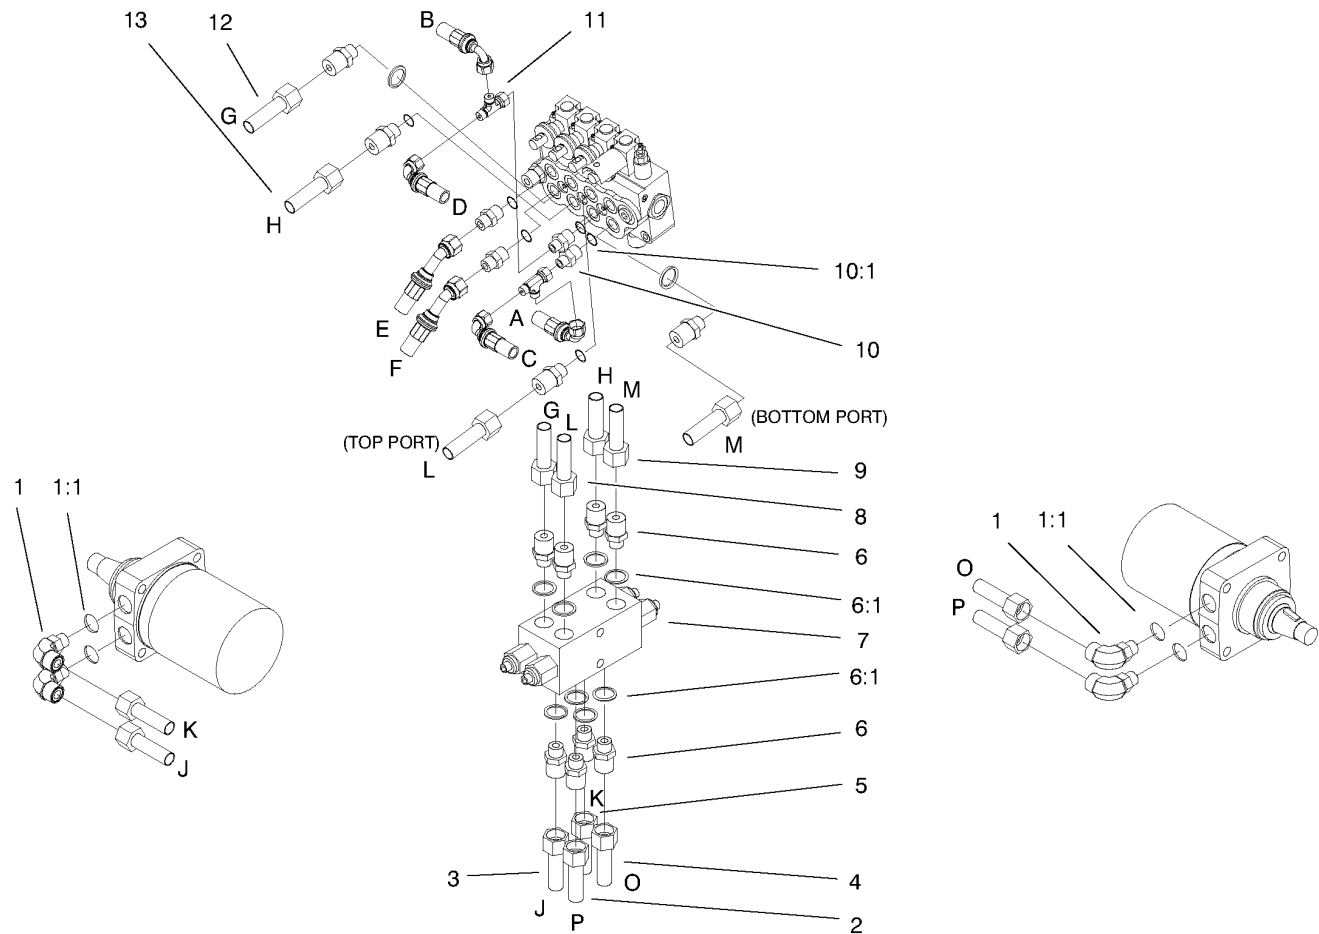

Hydraulic Valve Assembly


Ref	Part No.	Qty.	Description				
1	353-370	4	Elbow-90 DEG				
1:1	237-80	4	O-Ring				
2	99-5054	1	Tube-HYD				
3	99-5053	1	Tube-HYD				
4	99-5050	1	Tube-HYD				
5	99-5056	1	Tube-HYD				
6	353-388	8	Fitting-Straight				
6:1	237-80	8	O-Ring				
7	99-3279	1	Valve-Counterbalance				
7:1	98-2712	2	Seal Kit				
8	99-5055	1	Tube-HYD				
9	99-5051	1	Tube-HYD				
10	99-5074	4	Fitting				
10:1	99-5075	4	O-Ring				
11	99-5076	2	Connector-Swivel				
12	99-5052	1	Tube-HYD				
13	99-5057	1	Tube-HYD				

13

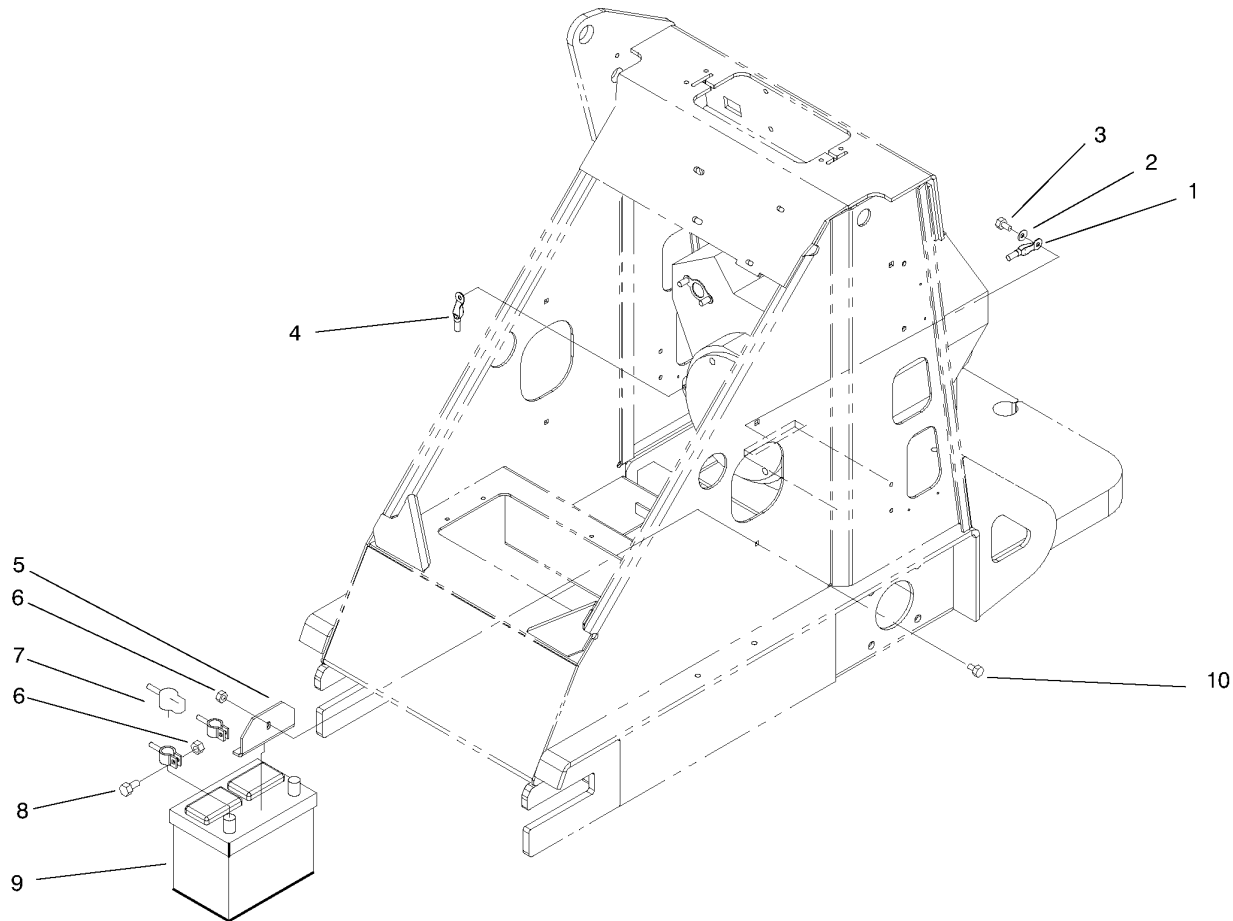

Electrical Assembly


Ref	Part No.	Qty.	Description				
1	111077	1	Assy Wire				
2	3255-8	1	Washer-Lock				
3	33114-020	3	Screw-HH				
4	94-6204	1	Wire - Battery Positive				
5	98-4658	1	Clamp-Battery				
6	3296-16	3	Nut-Lock, NI				
7	77-0981	1	Boot-Terminal, Red				
8	3234-4	2	Screw-HHF				
9		1	Battery				
10	3229-2	1	Screw-CARR				
1	32144-18	2	Screw-HH				

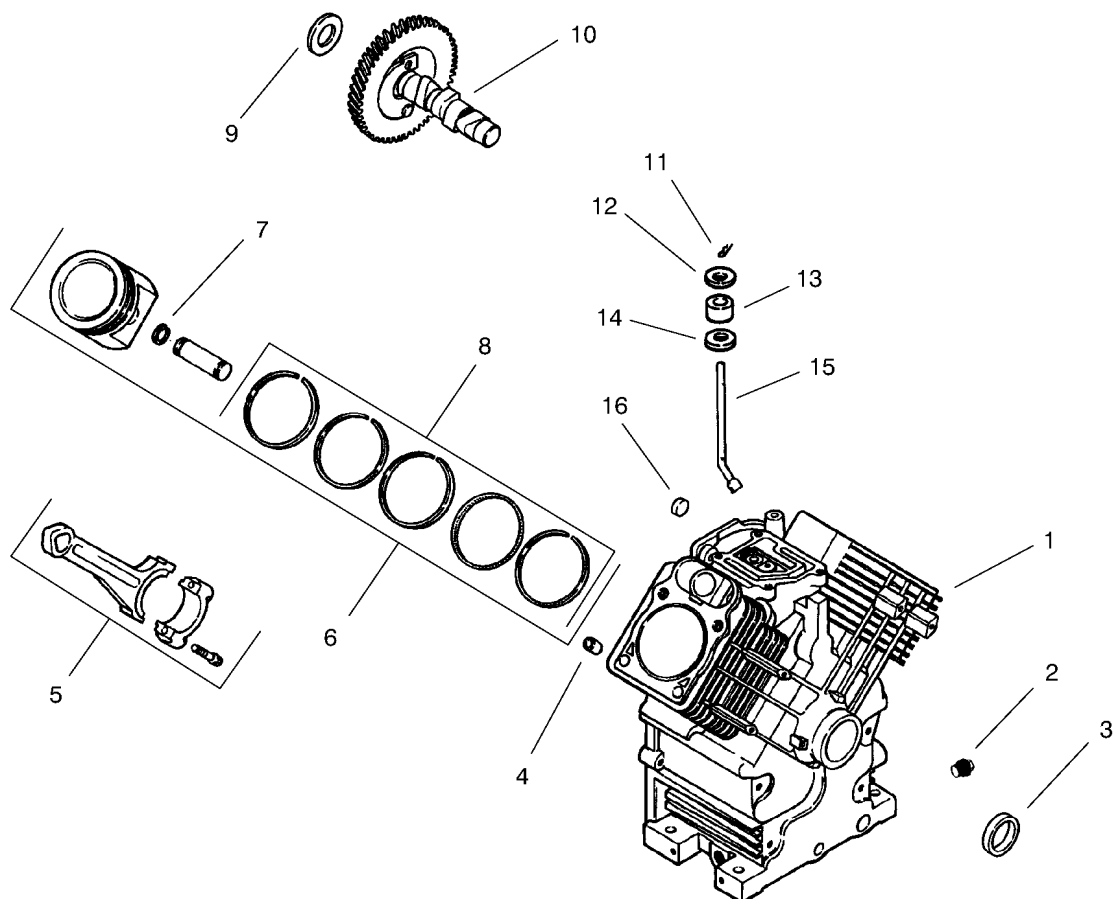

Group 2-Crankcase


Ref	Part No.	Qty.	Description
②1		1	Cylinder Block (Use Miniblock 24 782 01)
②2	52 139 02	2	Plug-Drain
②3	24 032 01	1	Seal-Oil
②4	12 380 17	6	Dowel-Locating
②5	24 067 13	2	Rod-Connecting (Standard)
②	24 067 14	2	Rod-Connecting (.25)
②6	24 874 01	2	Piston ASM STD Inc4/7/8
②	24 874 02	2	Set-Piston W/Ring .25
②	24 874 03	2	Piston ASM .50 Inc4/7/8
②7	24 018 01	4	Retainer-Piston Pin
②8	24 108 01	2	Ring Set(STD.)
②	24 108 02	2	Set-Ring .25
②	24 108 03	2	Set-Ring .50
②9	12 422 09	0	Shim-Camshaft
②	12 422 13	0	Shim-Camshaft
②	12 422 07	0	Shim-Camshaft
②	12 422 08	0	Shim-Camshaft
②	12 422 10	0	Shim-Camshaft
②	12 422 11	0	Shim-Camshaft
②	12 422 12	0	Shim-Camshaft
②10	24 012 05	1	Camshaft
②11	12 380 04	1	Pin-Hitch
②12	M-0631005	1	Washer

Ref	Part No.	Qty.	Description
②13	12 032 01	1	Seal-Cross Shaft
②14	X-25-102	1	Washer
②15	24 144 01	1	Shaft-Governor Cross
②16	52 139 09	1	Plug

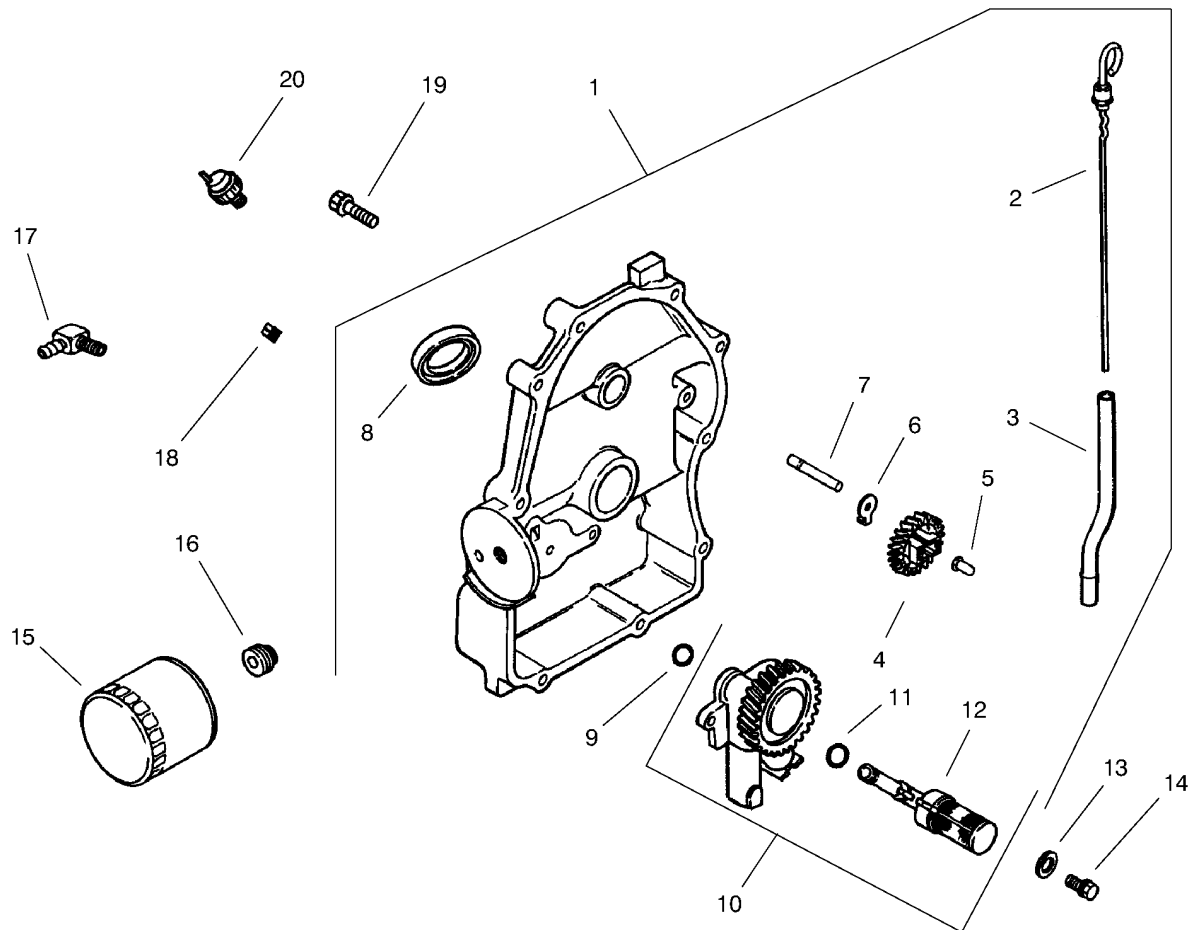


Group 3-Oil Pan/lubrication

Ref	Part No.	Qty.	Description				
21	24 009 82	1	Plate, Closure Assembly (Includes 2-12)				
22	24 038 06	1	Dipstick				
23	24 123 08	1	Tube-Dipstick				
24	24 043 12	1	Kit, Governor Gear (Includes 5)				
25	12 380 01	1	Pin-Governor				
26	52 448 02	1	Tab-Locking				
27	12 144 02	1	Shaft-Gear, Governor				
28	52 032 08	1	Seal-Oil				
29	24 153 08	1	O Ring				
210	24 393 10	1	Oil Pump Assembly (Includes 11,12)				
211	24 153 01	1	O-Ring				
212	24 381 04	1	Pick Up-Oil				
213	M-0631005	2	Washer				
214	M-0645025	2	Screw				
215	52 050 02	1	Filter-Oil				
216	24 136 01	1	Nipple-Filter, Oil				
217	25 155 02	1	Connector				
218	X-75-23	1	Plug				
219	24 086 16	10	Screw				
220	24 099 03	1	Switch-Pressure				

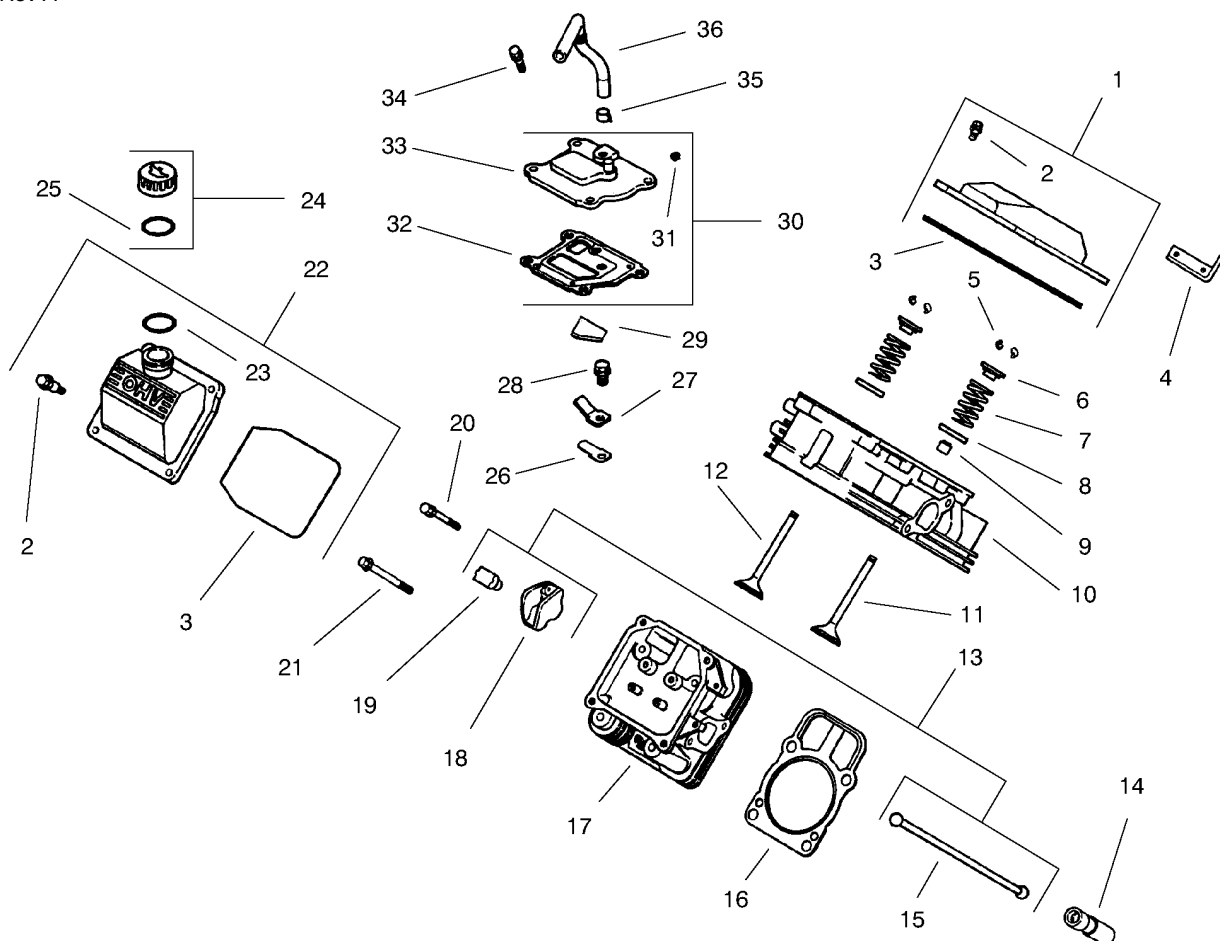

Group 4-Head/valve/breather


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
②1	24 755 74	1	Kit, Valve Cover-Plain (Includes 2-3)	②21	12 086 16	8	Screw
②2	24 086 32	4	Screw	②22	24 755 75	1	Kit, Valve Cover-Oil Fill (Includes 2,3,23)
②3	24 153 16	1	O-Ring	②23	24 153 09	1	O-Ring
②4	24 445 01	1	Strap-Lifting	②24	24 755 46	1	Kit, Oil Fill Cap (Includes 25)
②5	12 755 03	4	Retainer Kit	②25	12 153 03	1	"o"ring
②6	12 173 01	4	Cap-Spring, Valve	②26	24 402 03	1	Reed
②7	24 089 02	4	Spring-Valve	②27	12 018 01	1	Retainer-Reed
②8	235011	4	Retainer-Spring	②28	M-0545010	1	Screw
②9	24 032 05	2	Seal-Stem, Valve	②29	24 050 01	1	Filter-Breather
②10	24 318 09	1	Head ASM-#1 Cylinder	②30	24 033 01	1	Kit, Breather (Includes 31-33)
②11	24 017 01	2	Valve-Intake	②31	X-75-23	1	Plug
②	24 017 02	2	Valve-Intake (.25)	②32	24 041 23	1	Gasket-Breather
②12	24 016 01	2	Valve-Exhaust	②33	24 096 02	1	Cover-Breather
②	24 016 02	2	Valve-Exhaust (.25)	②34	M-0645020	4	Screw
②13	24 755 66	1	Kit, Valve Train (Includes 15,18,19)	②35	X-426-9	1	Clamp
②14	12 351 02	4	Lifter-Valve	②36	24 326 06	1	Hose-Breather
②15	24 411 05	4	Rod-Push				
②16	24 041 08	2	Gasket-Cylinder Head				
②17	24 318 10	1	Head ASM-#2 Cylinder				
②18	25 186 01	4	Arm-Rocker				
②19	24 599 01	4	Pivot-Arm, Rocker				
②20	M-0640034	4	Screw				

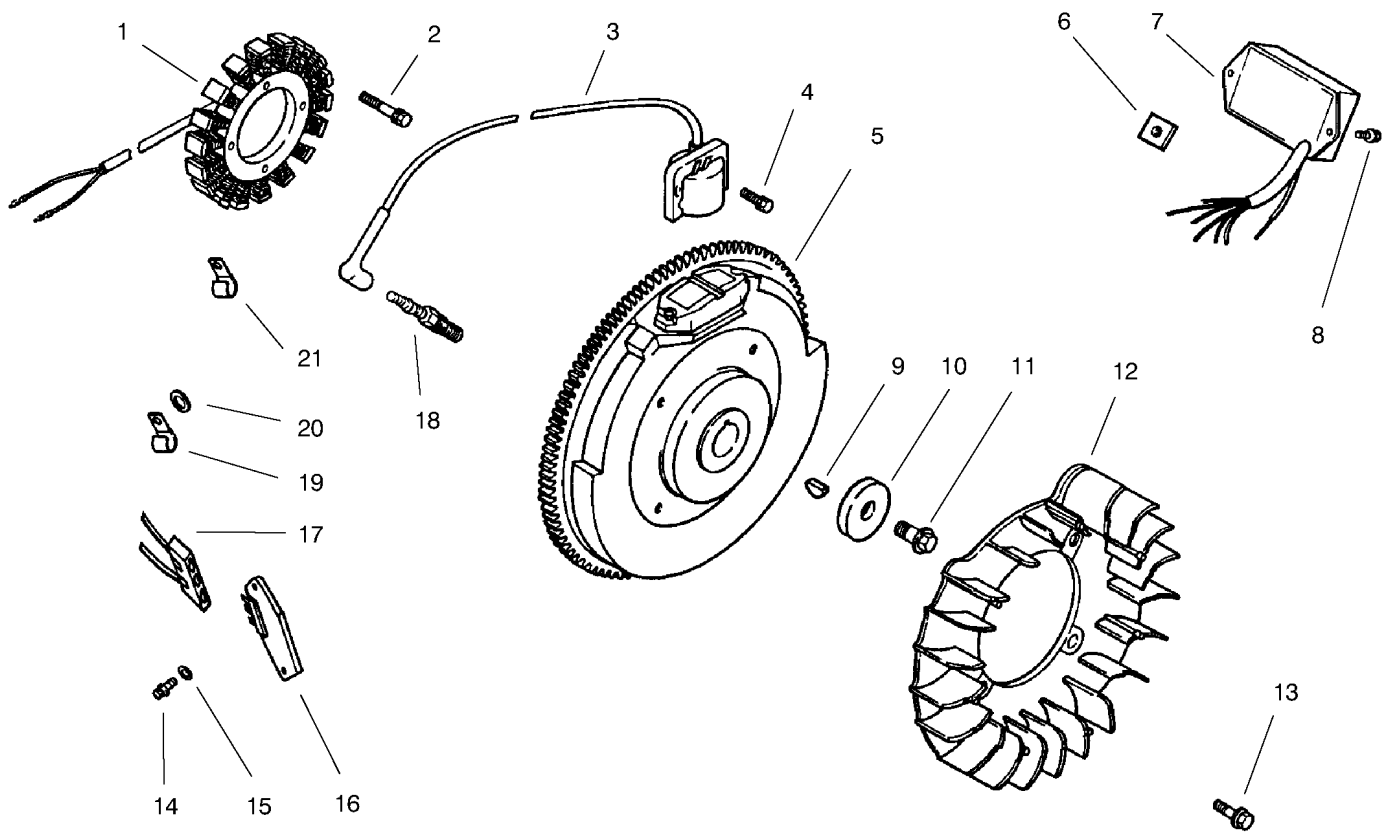

Group 5-Ignition/electrical


Ref	Part No.	Qty.	Description
❶1	54 755 09	1	Kit, 15 Amp Stator (Incl. 24 126 71 Bracket)
❶2	M-0548025	2	Screw
❶3	24 584 11	2	Module-Ignition
❶4	M-0561025	4	Screw-HSH
❶5	24 025 02	1	Flywheel
❶6	24 100 02	2	Nut-Plastic
❶7	24 584 09	1	Module, Speed Adv.
❶8	24 086 41	2	Screw
❶9	X-42-15	1	Key
❶10	12 468 03	1	Washer
❶11	12 086 14	1	Screw
❶12	24 157 03	1	Fan
❶13	25 086 47	4	Bolt-Shoulder
❶14	24 086 18	2	Screw
❶15	X-25-92	2	Washer
❶16	25 403 03	1	Rectifier-Regulator
❶17	236602	1	Connector
❶18	12 132 02	2	Plug-Spark
❶19	47 154 01	1	Clamp
❶20	X-25-63	1	Washer
❶21	48 154 02	1	Clip
❶❶	25 518 28	1	Lead-Black
❶❶	24 176 42	1	Harness, Wiring

Ref	Part No.	Qty.	Description
❶❶	24 126 71	1	Bracket-Wire, Stator
❶❶	X-22-11	1	Washer
❶❶	X-25-63	1	Washer

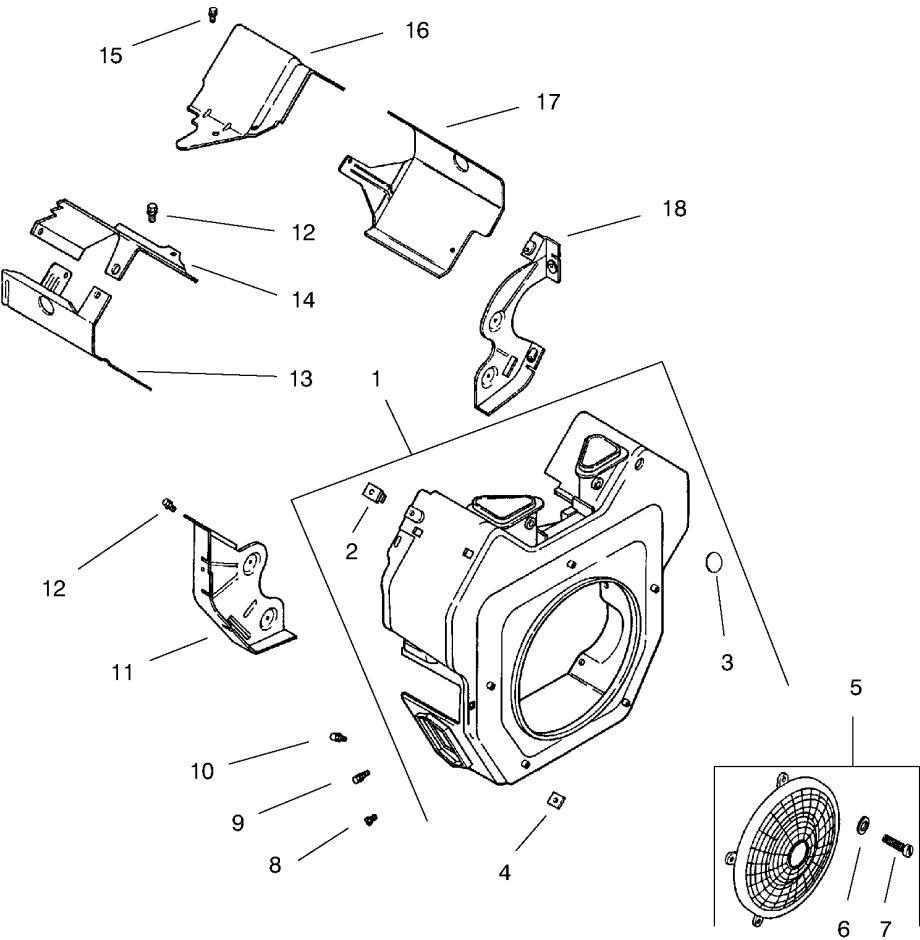


Group 6-Blower Housing & Baffles

Ref	Part No.	Qty.	Description				
❶1	24 027 40	1	Housing, Blower (Includes 2-5)				
❷2	24 100 02	2	Nut-Plastic				
❸3	25 139 16	1	Plug-Button				
❹4	24 100 01	2	Nut				
❺5	24 755 81	1	Kit, Fixed Gurard (Includes 6&7)				
❻6	24 468 10	5	Washer				
❼7	24 086 35	5	Screw, Panhead				
❽8	M-0551016	1	Screw				
❾9	M-0545016	5	Screw-HF				
❿10	M-0545020	2	Screw				
❶❶11	24 146 02	1	Plate-Backing #2 Side				
❶❷12	M-0645016	6	Screw				
❶❸13	24 063 20	1	Baffle-Cylinder, #2				
❶❹14	24 063 17	1	Baffle-Valley, #2 Side				
❶❺15	M-0545010	2	Screw				
❶❻16	24 063 24	1	Baffle-Valley, #1 Side				
❶❼17	24 063 08	1	Baffle, Cylinder Barrel				
❶❶18	24 146 08	1	Plate-Backing #1				
❶❷❶1	24 113 62	1	Decal, Hp				
❶❷❷1	25 113 21	1	Decal, Pro				

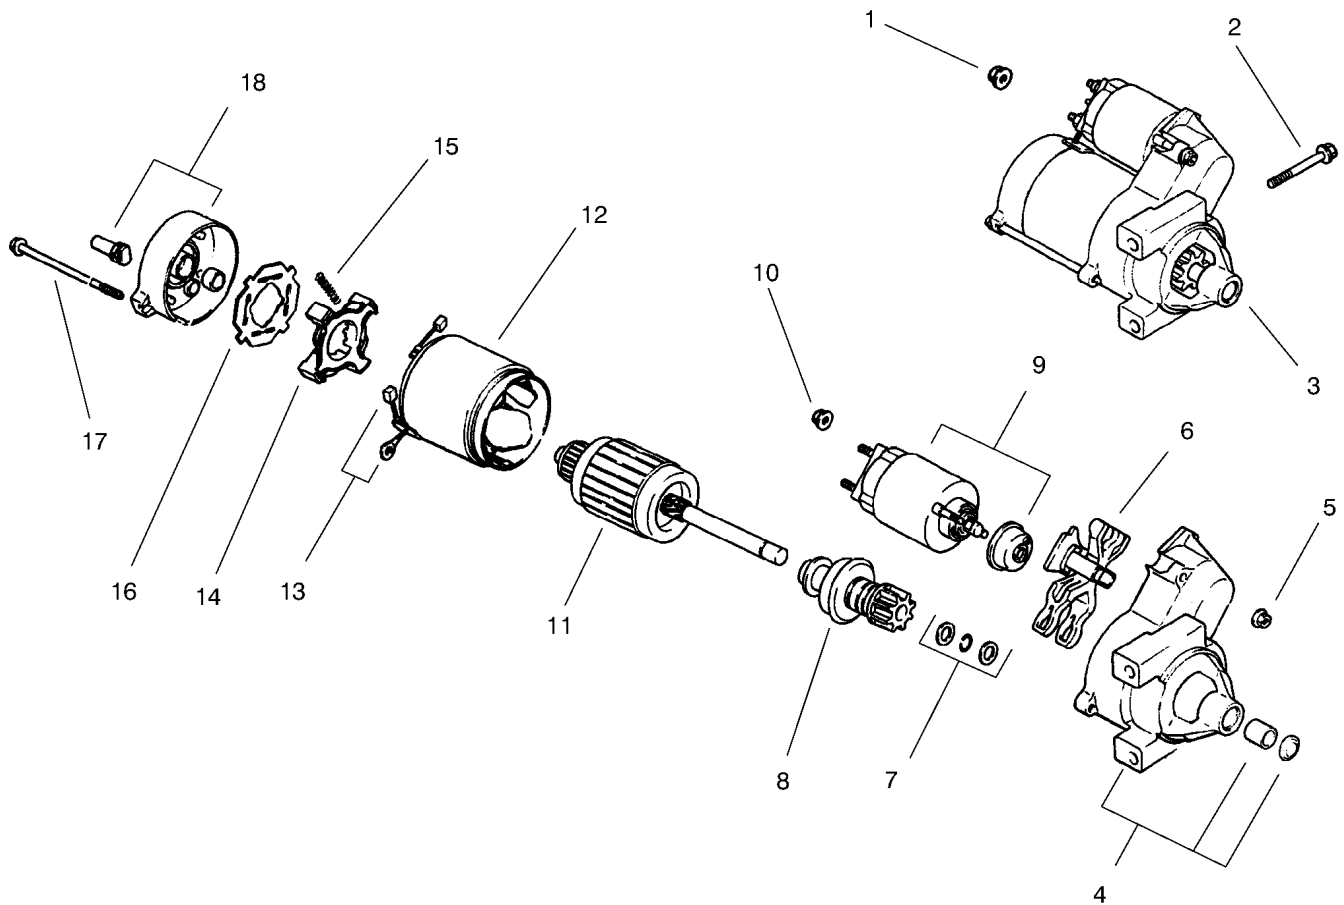


Group 7-Starting System

Ref	Part No.	Qty.	Description				
①	M-0841080	1	Nut				
②	M-0839080	2	ScREW				
③	24 098 01	1	Starter, Solenoid Shift Assembly (Incl. 4-18)				
④	24 081 04	1	Cap-Drive End				
⑤	52 100 10	2	Nut				
⑥	12 090 10	1	Lever Starter Drive				
⑦	24 755 84	1	Washer				
⑧	12 239 01	1	Drive Pinion				
⑨	52 435 02	1	Solenoid				
⑩	52 100 09	1	Nut				
⑪	12 170 04	1	Armature-Starter				
⑫	12 471 01	1	Frame				
⑬	52 221 01	1	Kit, Brush & Spring (Includes 15)				
⑭	52 323 03	1	Holder-Brush				
⑮	52 089 09	4	Spring Brush				
⑯	52 168 01	1	Insulator				
⑰	52 211 05	2	Bolt				
⑱	24 301 01	1	Commutator-End Cap				

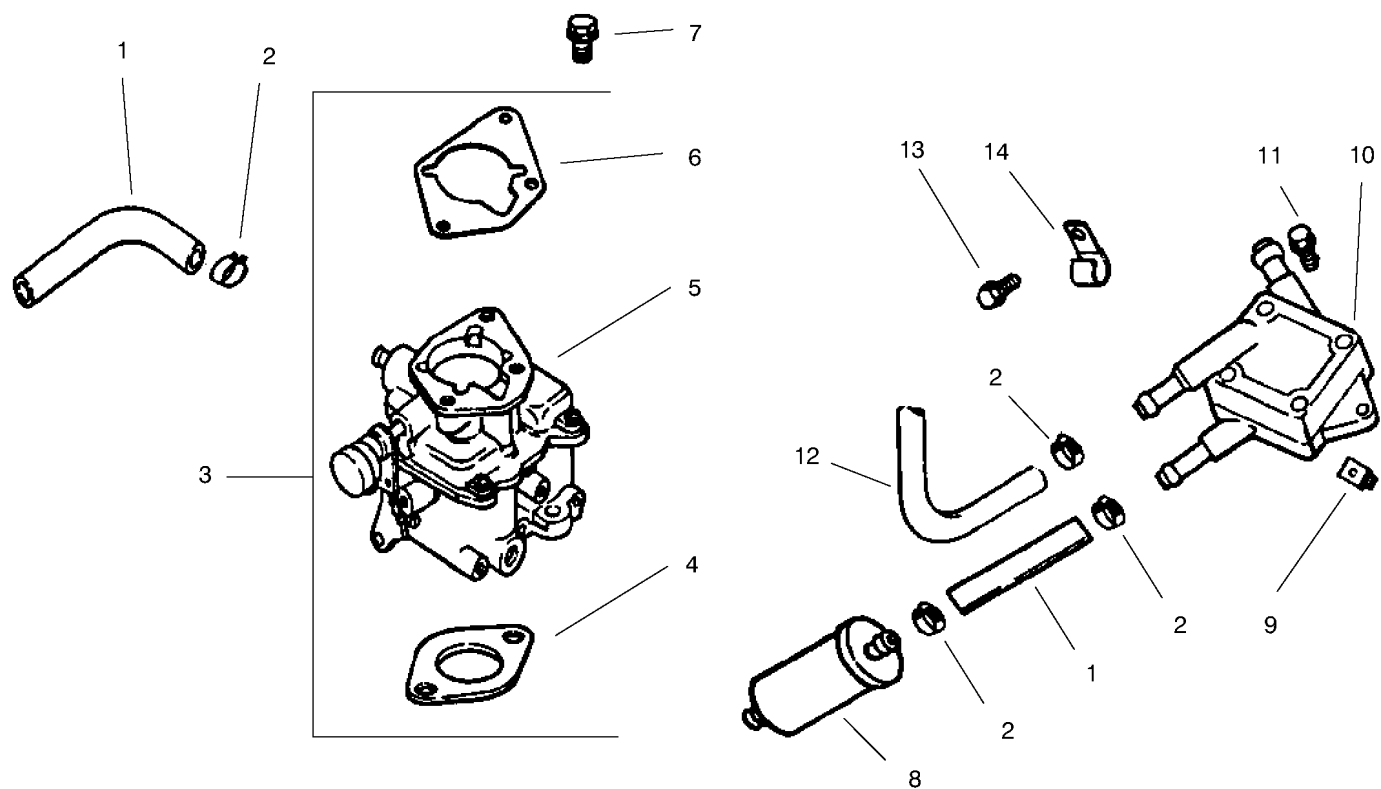


Group 8-Fuel System

Ref	Part No.	Qty.	Description				
②1	25 353 10	2	Line Fuel				
②2	X-426-9	6	Clamp				
②3	24 853 43	1	Kit, Carburetor W/Gasket (Includes 4-6)				
②4	24 041 06	1	Gasket				
②5	24 053 43	1	Carburetor Assembly				
②6	24 041 17	1	Gasket				
②7	M-0651030	2	Screw				
②8	24 050 02	1	Filter-Fuel				
②9	24 100 01	2	Nut				
②10	24 393 04	1	Pump-Fuel				
②11	24 086 12	2	Screw				
②12	24 353 04	1	Line, Fuel17"				
②13	M-0650012	1	Screw				
②14	47 154 01	1	Clamp				

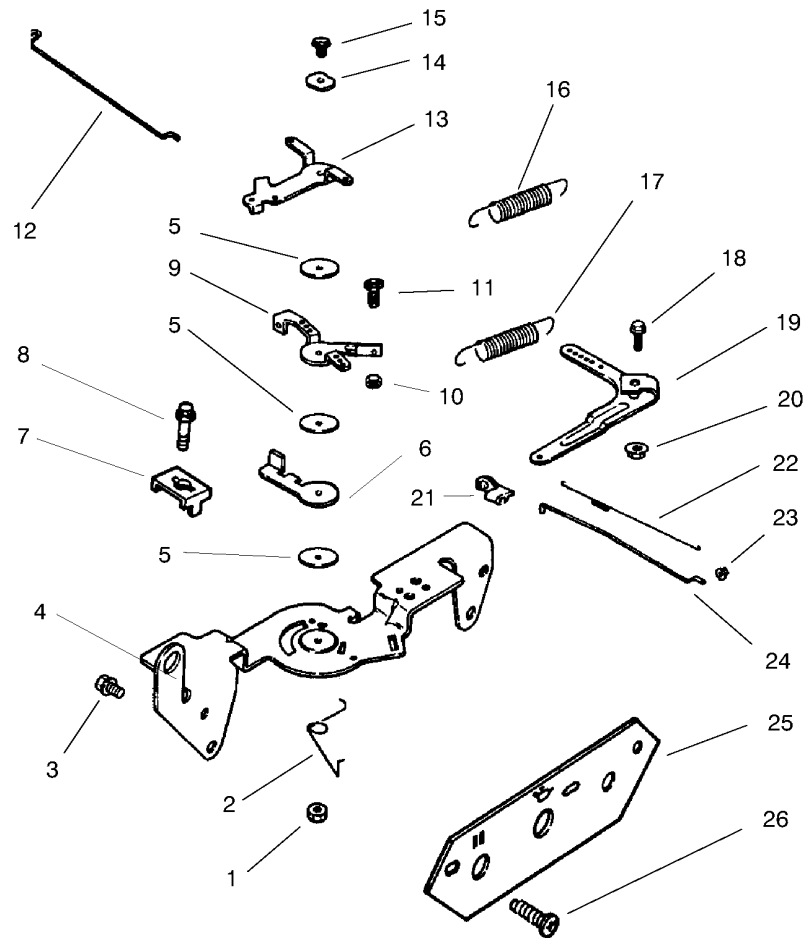

Group 9-Engine Controls

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
21	M-0547050	1	Nut	25	24 378 01	1	Panel, Control
22	24 089 03	1	Spring-Choke Return	26	24 086 06	1	Screw
23	M-0645016	4	Screw				
24	24 126 56	1	Bracket-Control				
25	24 468 01	3	Washer				
26	24 090 07	1	Lever-Actuator, Throttle				
27	12 237 01	2	Clamp				
28	M-0545016	2	Screw-HF				
29	24 090 03	1	Lever-Throttle Control				
210	M-0446030	1	Nut				
211	M-0401030	1	Screw				
212	24 079 02	1	Linkage-Choke				
213	24 090 05	1	Lever-Choke				
214	41 468 03	1	Washer-Wave				
215	M-0545020	1	Screw				
216	24 089 38	1	Spring-Throttle Limiter				
217	24 089 15	1	Carriage Bolt				
218	SM-0642025	1	Screw				
219	24 090 14	1	Lever-Govenor				
220	M-0641060	1	Nut				
221	25 158 11	1	Bushing-Linkage				
222	24 089 01	1	Spring-Linkage				
223	25 158 08	1	Bushing-Linkage				
224	24 079 01	1	Linkage-Throttle				

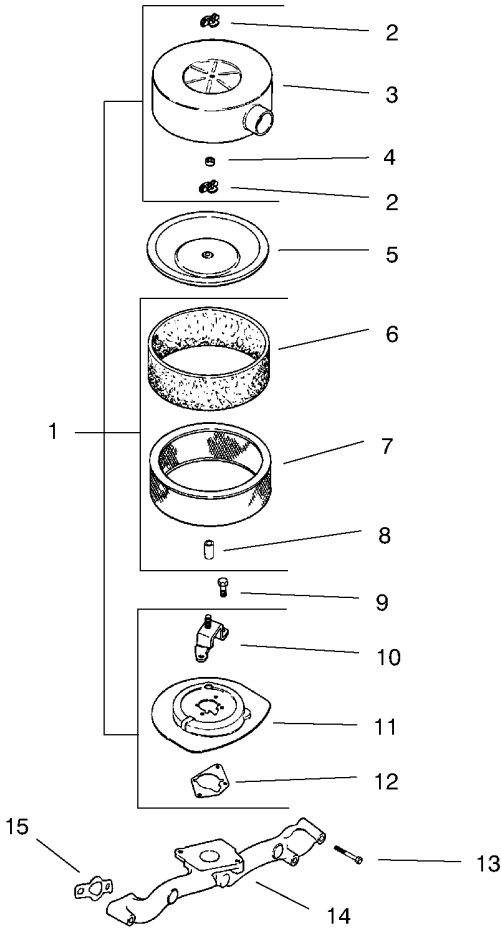

Group 10-Air Intake/filtration

Ref	Part No.	Qty.	Description				
21	24 755 21	1	Kit, Air Cleaner Cover (Includes 2-4, 6-8, 10-12 And Decal 24 113 31)				
22	12 100 01	1	Wingnut				
23	24 096 52	1	Cover, Air Cleaner				
24	41 032 02	1	Seal				
25	24 096 01	1	Cover-Inner Aircleaner				
26	24 083 02	1	Bement-Precleaner				
27	47 083 03	1	Bement-Air Cleaner				
28	230046	1	Seal				
29	M-0639016	3	Screw				
210	24 126 22	1	Bracket-Air Cleaner				
211	24 094 05	1	Base-Air Cleaner				
212	24 041 06	1	Gasket				
213	M-0651055	4	Screw				
214	24 164 14	1	Manifold				
215	24 041 01	2	Gasket-Intake, Manifold				
12	24 113 31	1	Decal, Air Cleaner				
12	24 048 02	1	Precleaner Assembly				

NOTES

NOTES

