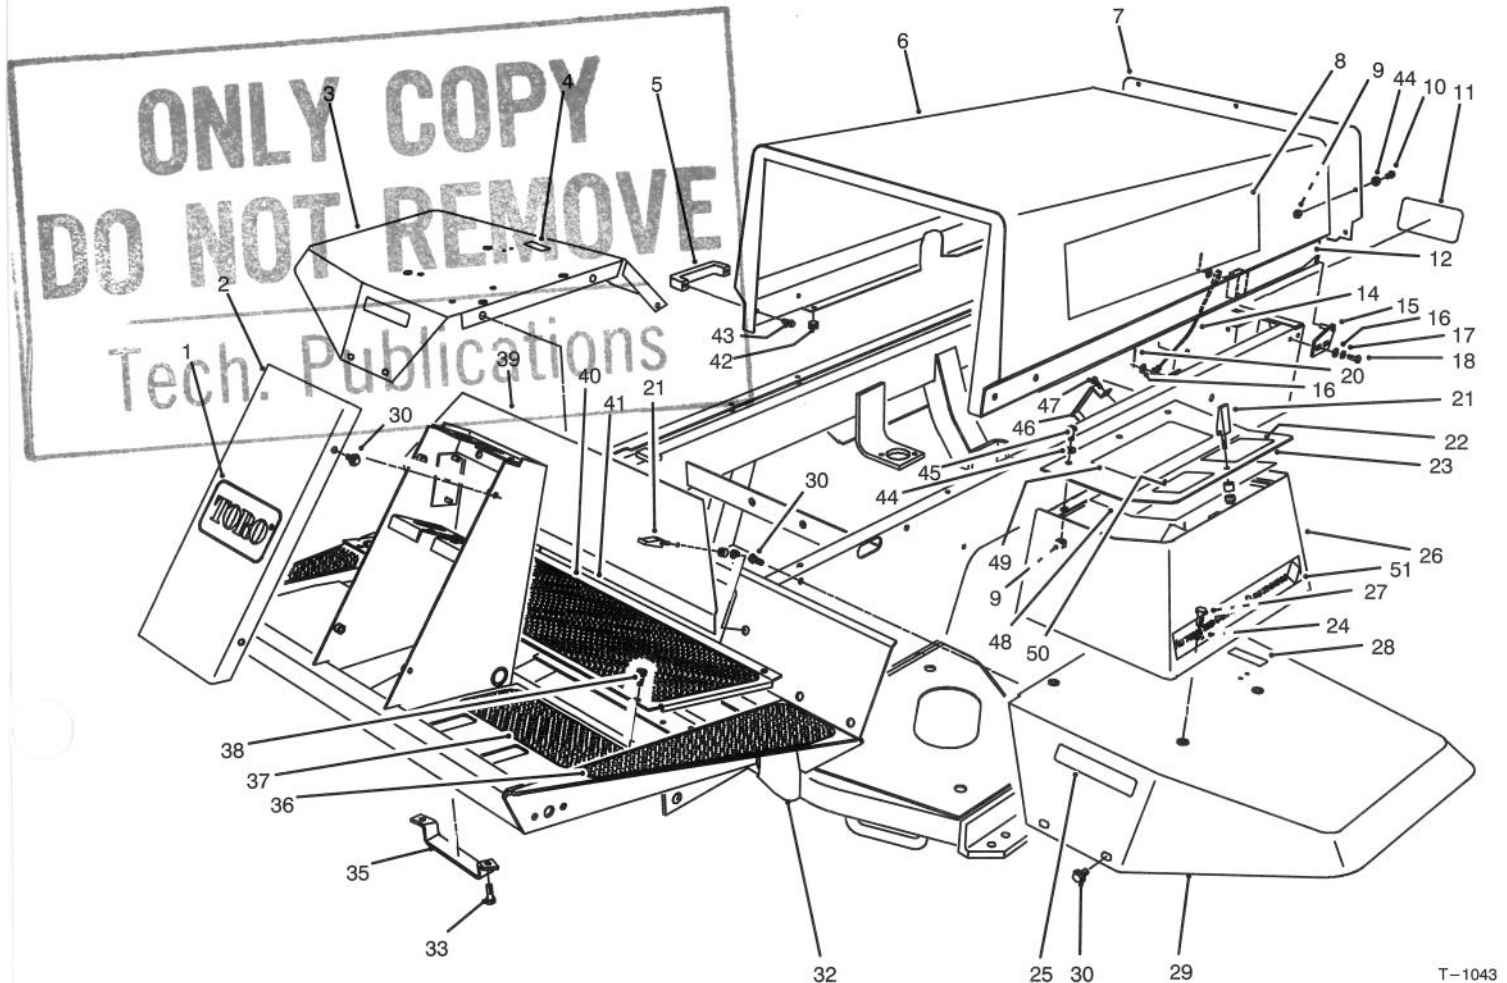 


TORO®

MODEL NO. 03502-20001 & UP

**PARTS
CATALOG****REELMASTER® 5100D
TRACTION UNIT WITH ACCESSORIES**

T-1043

FRAME & BODY ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62-5550	Decal - TORO	1	16	3256-23	Washer - Flat	6
2	75-1420	Cover - Steering Tower	1	17	3253-4	Washer - Lock	4
3	75-3840	Fender - R.H.	1	18	322-5	Screw - Cap Hex. Hd.	4
‡4	85-4730	Decal - Hydraulic Oil (English)	1	20	3272-4	Pin - Cotter	2
5	65-5100	Handle	2	21	74-5950	Swell Latch Assembly	3
6	14-0959	Hood	1	‡22	75-1280	Decal - Warning (English)	1
7	75-2820	Grill - Hood	1	23	75-6260	Cover - Tool Box	1
8	85-4410	Decal - Reelmaster® 5100D	2	24	3256-3	Washer - Flat	4
9	3296-42	Nut - Lock	10	‡25	75-5190	Decal - No Riders (English)	2
10	321-39	Screw - Cap Hex. Hd.	7	26	75-5810	Box - Tool	1
11	62-7400	Decal - TORO	1	27	322-3	Screw - Cap Hex. Hd.	4
12	75-0670	Decal - Hood Trim L.H.	1	‡28	52-1320	Decal - Fuel (English)	1
*	75-0680	Decal - Hood Trim R.H.	1	29	75-3860	Fender - L.H.	1
14	75-0570	Cable - Hood	1	30	3234-14	Screw - Hex. Washer Hd.	14
15	63-6900	Hinge - Hood L.H.	1	32	85-4600	Frame Assembly	1
*	63-6890	Hinge - Hood R.H.	1	33	322-4	Screw - Cap Hex. Hd.	2
				35	75-2860	Bracket - Hose	1

‡For different language versions of this part, see International Decal Cross Reference.

*Not Illustrated

© The TORO Company -1992

 TPS

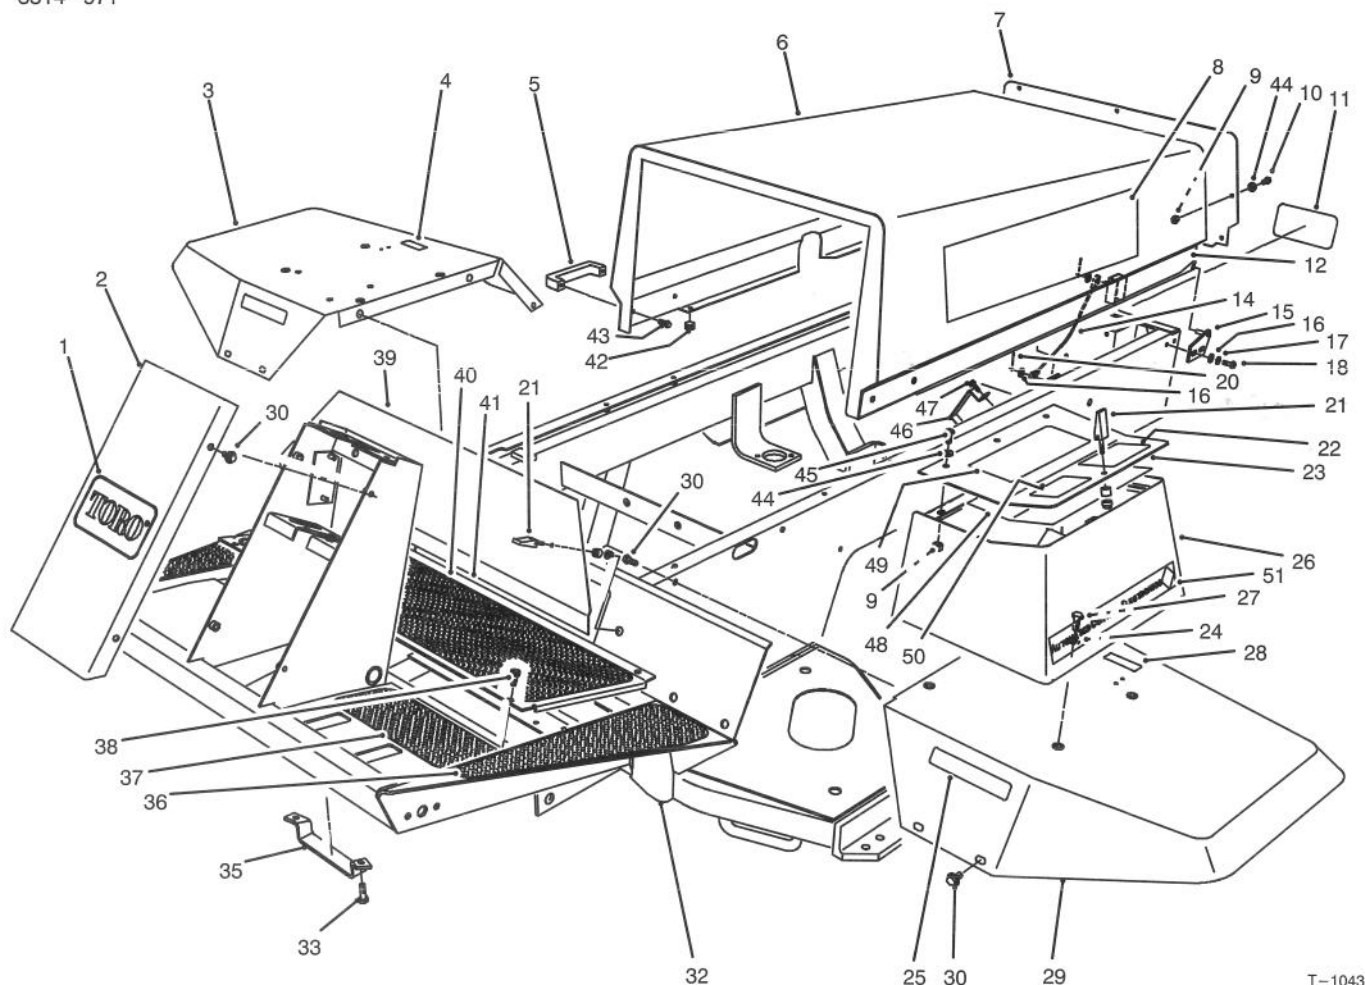

T-1043


FRAME & BODY ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
36	75-0650	Tread - Footrest L.H.	1
*	75-0640	Tread - Footrest R.H.	1
37	75-0620	Tread - Foot L.H.	1
*	75-0610	Tread - Foot R.H.	1
38	75-6840	Knob - Knurled	4
39	75-1390	Panel - Access	1
40	75-0630	Tread - Foot Center	1
41	75-1410	Panel - Floor	1
42	237-141	Bumper	2
43	46-8091	Screw - Cap Hex. Hd.	4

Ref. No.	Part No.	Description	No. Used
44	3256-1	Washer - Flat	10
45	3258-166	Screw - Phillip Hd.	3
46	75-6280	Bracket - Hose	1
47	49-2040	Screw - Hex. Washer Hd.	2
‡48	85-4740	Decal - Instructions (English)	1
‡49	75-7540	Decal - Warning (English)	1
‡50	88-6700	Decal - ANSI (English) (For Reference Only)	1
51	88-0430	Decal - A.C.E.	2

*Not Illustrated

 ‡For different language versions of this part, see International Decal Cross Reference.

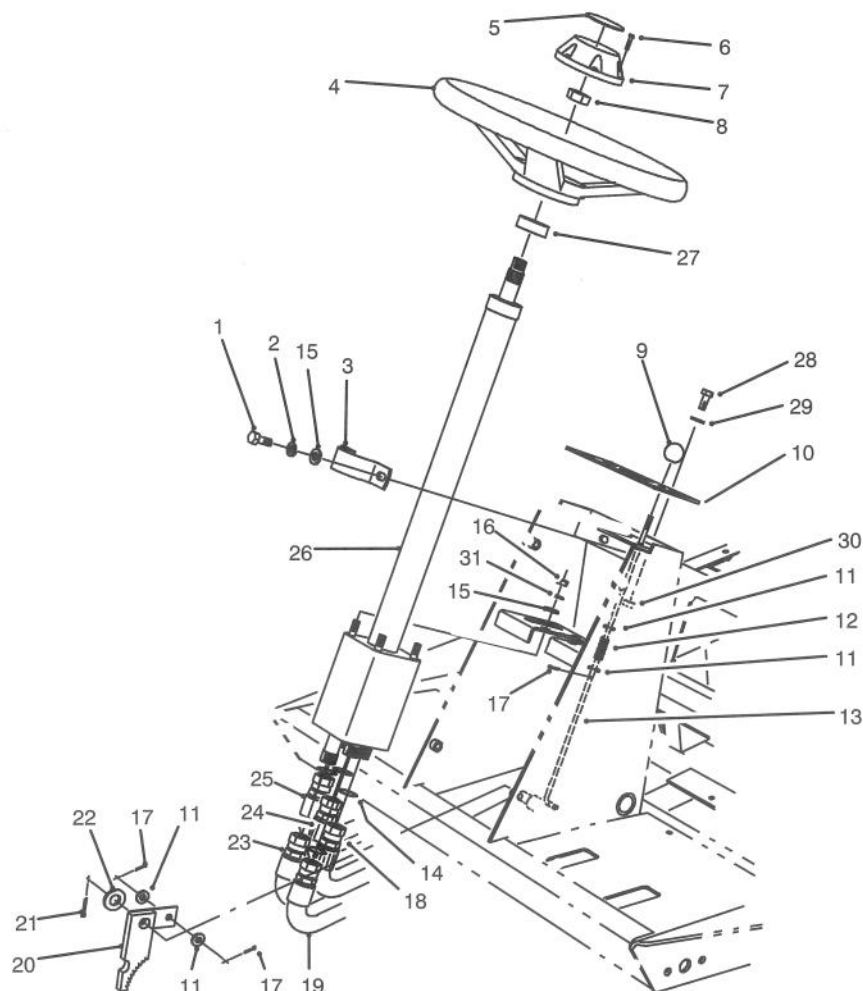


T-1044

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	322-3	Screw - Cap Hex. Hd.	2	17	3272-5	Pin - Cotter	3
2	3253-4	Washer - Lock	2	18	75-6230	Hose - Hydraulic RT	1
3	75-2810	Clamp - Steering Valve	1	19	75-6240	Hose - Hydraulic IN	1
4	75-0560	Steering Wheel Assembly (Incl. Ref. #6-8)	1	20	63-7900	Rack - Parking Brake	1
5	68-5370	Decal - TORO	1	21	3272-10	Pin - Cotter	1
6	32144-21	Screw	1	22	3256-26	Washer - Flat	1
7	68-5140	Cap - Steering Wheel	1	23	75-5940	Hose - Hydraulic AUX	1
8	3220-6	Nut - Steering Wheel	1	24	75-6220	Hose - Hydraulic LT	1
9	233-17	Knob - Parking Brake	1	25	75-6250	Hose - Hydraulic OUT	1
10	75-0580	Panel - Tower	1	26	75-0600	Steering Valve Assembly (Incl. Ref. #14)	1
11	3256-22	Washer - Flat	4	27	21-9260	Seal - Shaft	1
12	3-3251	Spring - Compression	1	28	3258-166	Screw - Phillip Hd.	2
13	75-1490	Rod - Parking Brake	1	29	3256-1	Washer - Flat	2
14	237-22	Seal - O-Ring	5	30	3296-42	Nut - Lock	2
15	3256-23	Washer - Flat	6	31	3255-8	Washer - Lock ETLW	1
16	3296-20	Nut - Lock	4	*	3290-378	Tie - Cable	3

*Not Illustrated

 3314-971

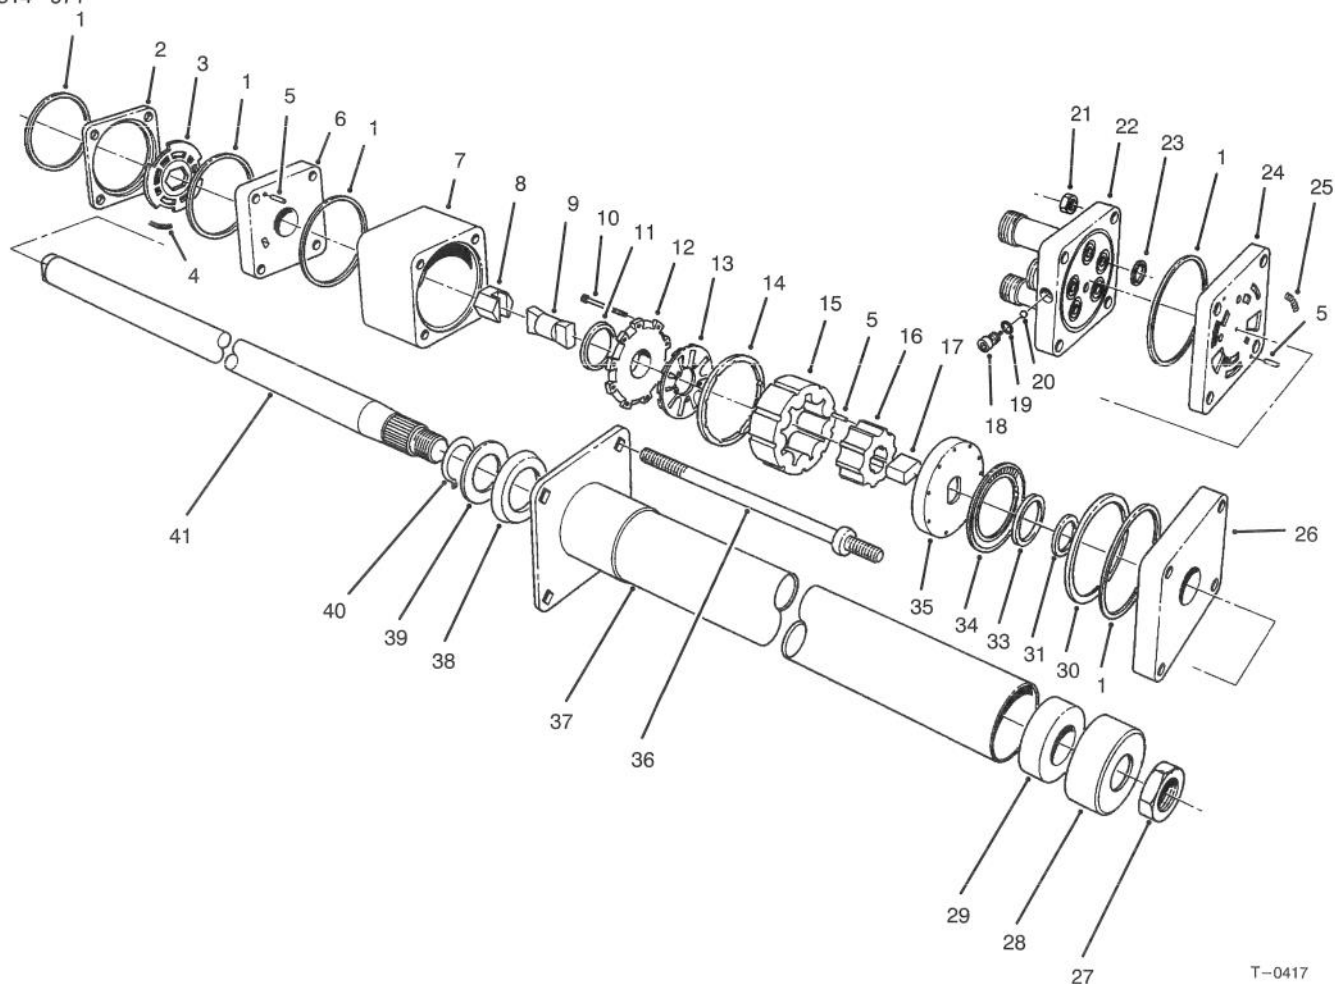


T-0417

STEERING VALVE ASSEMBLY No. 75-0600

Ref. No.	Part No.	Description	No. Used
1		Ring-Seal	5
2		Ring-Valve	1
3		Plate-Valve	1
4		Spring	3
5		Pin-Alignment	9
6		Manifold-Isolation	1
7		Ring-Metering	1
8		Hex Drive Assy.	1
9		Link-Drive	1
10		Screw-Hex Socket Hd.	11
11		Seal-Commutator	1
12		Cover-Commutator	1
13		Commutator	1
14		Ring-Commutator	1
15		Stator	1
16		Rotor	1
17		Spacer-Drive Link	1
18		Plug	1
19		O-Ring	1
20		Ball	1
21		Nut-Hex	4
22		Cover-Port	1
23		O-Ring	5
24		Manifold-Port	1
25		Spring	3

Ref. No.	Part No.	Description	No. Used
26		Plate-Cover, Upper	1
27	3220-6	Nut	1
28	66-9770	Seal	1
29	66-9780	Bushing	1
30		Spacer-Bearing, Thrust	1
31		Spacer-Seal	1
33		Seal-Face	1
34		Bearing-Thrust	1
35		Plate-Drive	1
36	66-9850	Bolt-Special	4
37	66-9860	Upper Cover & Jacket	1
38	66-9870	Plate-Retaining	1
39	66-9880	Washer-Retaining Plate	1
40	66-9890	Ring-Retaining	1
41	66-9900	Shaft-Input	1
*	66-9970	Spring Kit (Incl. Ref. #4 & 25)	1
*	66-9980	Seal-Kit (Incl. Ref. #1, 11, 19, 23 & 33)	1
*	66-9990	Needle Roller Kit (Incl. Ref. #5)	1
*	75-0600	Valve-Power Steering (Incl. Ref. #1-26 & 30-36)	1

 *Not Illustrated

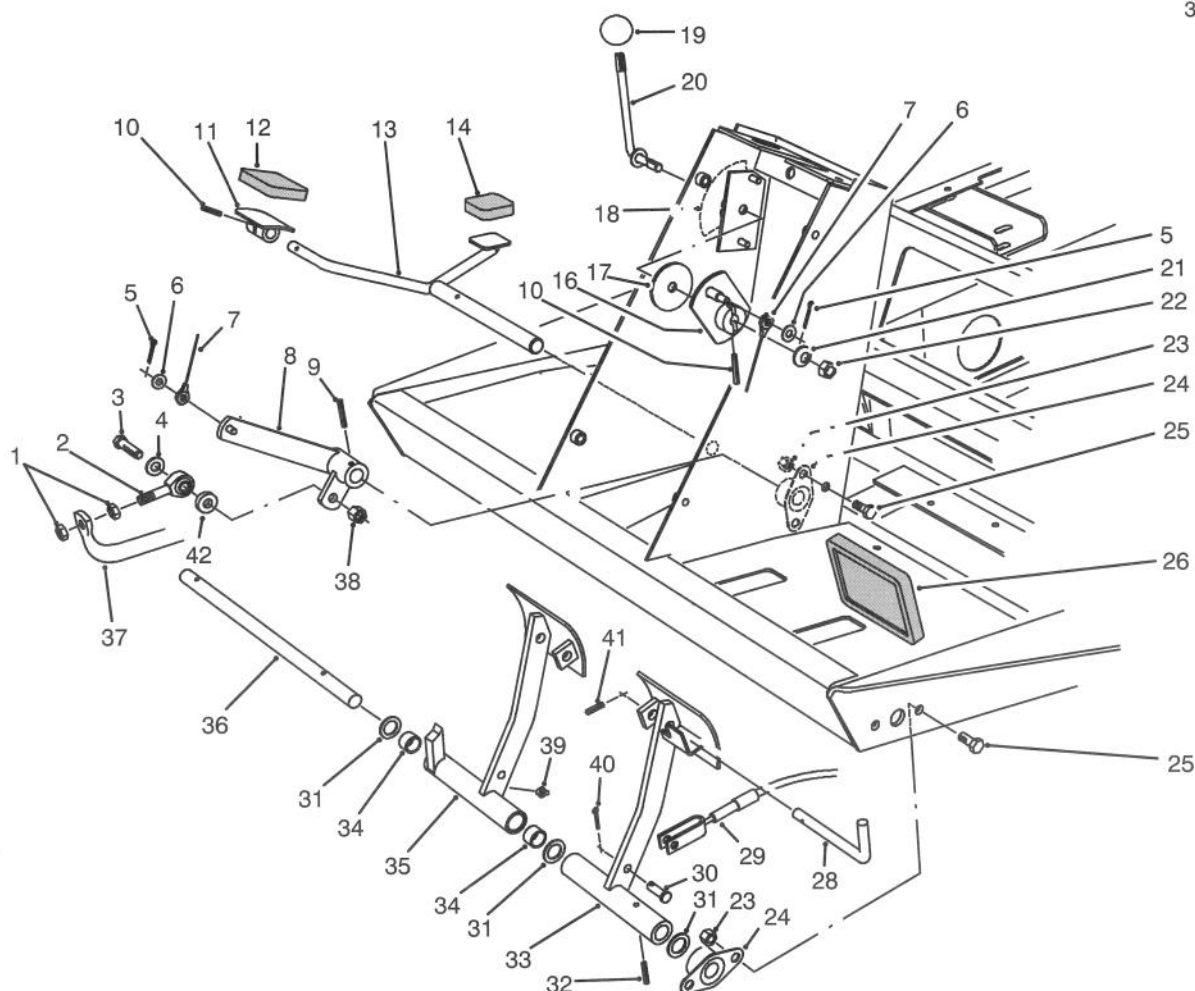


T-1045

TRACTION & BRAKE PEDALS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3220-3	Nut - Jam	2	23	3296-29	Nut - Lock	8
2	2411-36	Bearing - Rod End	1	24	256-236	Bearing - Flange	4
3	323-9	Screw - Cap Hex. Hd.	1	25	322-3	Screw - Cap Hex. Hd.	8
4	3256-24	Washer - Flat	1	26	7-3900	Pad - Brake	2
5	3272-2	Pin - Cotter	2	28	63-7880	Pin - Brake Latch	1
6	3256-22	Washer - Flat	2	29	63-7733	Cable - Brake L.H.	1
7	75-6580	Cable - Pedal	1	*	63-7732	Cable - Brake R.H.	1
8	75-3270	Lever - Traction Pivot	1	30	283-58	Pin - Clevis	4
9	32121-6	Pin - Roll	1	31	3256-69	Washer - Thrust	3
10	32121-45	Pin - Roll	2	32	32121-16	Pin - Roll	1
11	49-6440	Plate - Traction Pedal	1	33	75-1440	Pedal - Brake L.H.	1
12	74-9100	Pad - Forward	1	34	256-42	Bushing - Sleeve	2
13	75-2970	Pedal - Traction	1	35	75-1430	Brake Pedal Assembly R.H. (Incl. Ref. #34 & 39)	1
14	74-9110	Pad - Reverse	1	36	75-1470	Shaft - Brake Pedal	1
16	75-6510	Lever - Bracket	1	37	75-2170	Tube - Pump Control	1
17	75-6550	Disc - Friction	1	38	3296-39	Nut - Lock	1
‡18	75-6710	Decal - Fast/Slow (English)	1	39	302-5	Fitting - Grease	1
19	233-42	Knob	1	40	3272-10	Pin - Cotter	4
20	75-6490	Lever - Pedal Stop	1	41	32121-50	Pin - Roll	1
21	3290-461	Washer - Belleville	1	42	5-0652	Spacer	1
22	3296-59	Nut - Lock	1				

*Not Illustrated

 ‡For different language versions of this part, see International Decal Cross Reference.

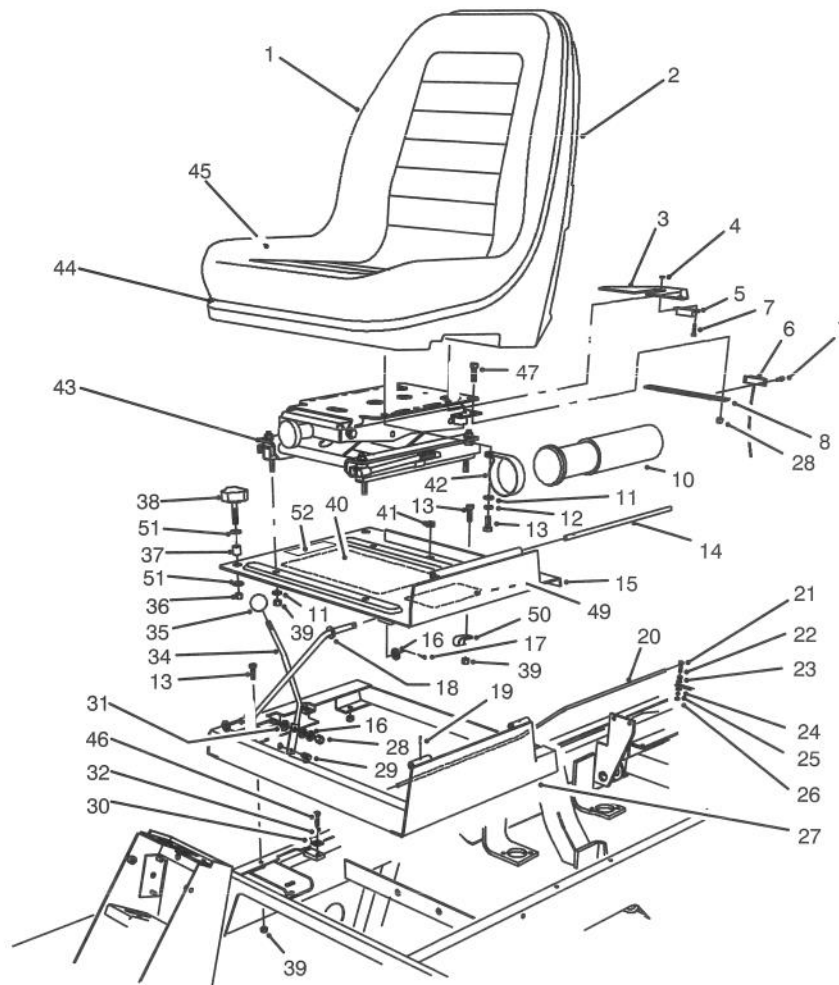


T-1046

SEAT & THROTTLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-5400	Seat Assembly (Incl. Ref. #2 & 44-45)	1
2	67-9560	Shell - Seat	1
3	75-4370	Bracket - Switch (Seat)	1
4	3296-54	Nut - Lock	4
5	75-6330	Magnet - Switch	1
6	75-6320	Sensor - Switch	1
7	3250-29	Screw - Cap Hex. Hd.	4
8	75-4360	Bracket - Switch	1
10	74-0720	Tube - Manual	1
11	3256-23	Washer - Flat	8
12	3253-4	Washer - Lock	4
13	322-3	Screw - Cap Hex. Hd.	9
14	75-3400	Shaft - Seat Pivot	1
15	75-3880	Plate - Seat	1
16	3256-24	Washer - Flat	3
17	3272-10	Pin - Cotter	2
18	75-3680	Rod - Seat	1
19	32121-38	Pin - Roll	1
20	75-1350	Cable - Throttle	1
21		Screw - Special	2
22		Sleeve - Connector	2
23		Washer - Spring	2

Ref. No.	Part No.	Description	No. Used
24		Washer - Flat	2
25		Washer - I.T.L.W.	2
26		Nut - Hex.	2
27	75-3300	Frame - Seat	1
28	3296-39	Nut - Lock	3
29	63-6760	Throttle Cable Swivel Assy. (Incl. Ref. #21-26)	2
30	3-6657	Clamp - Cable	1
31	66-2920	Washer - Friction	2
32	3253-3	Washer - Lock	1
34	75-3430	Rod - Throttle	1
35	233-42	Knob - Throttle	1
36	3296-59	Nut - Lock	2
37	75-5270	Spacer - Locking Knob	2
38	75-5260	Knob - Locking	2
39	3296-29	Nut - Lock	9
40	84-4610	Decal - Instruction	1
41	237-141	Grommet	1
42	2412-133	Clamp - R	2
43		Seat Suspension Assembly	1
44		Edging - Seat	1
45	67-9550	Kit - Seat Cushion	1
46	321-4	Screw - Cap Hex. Hd.	1

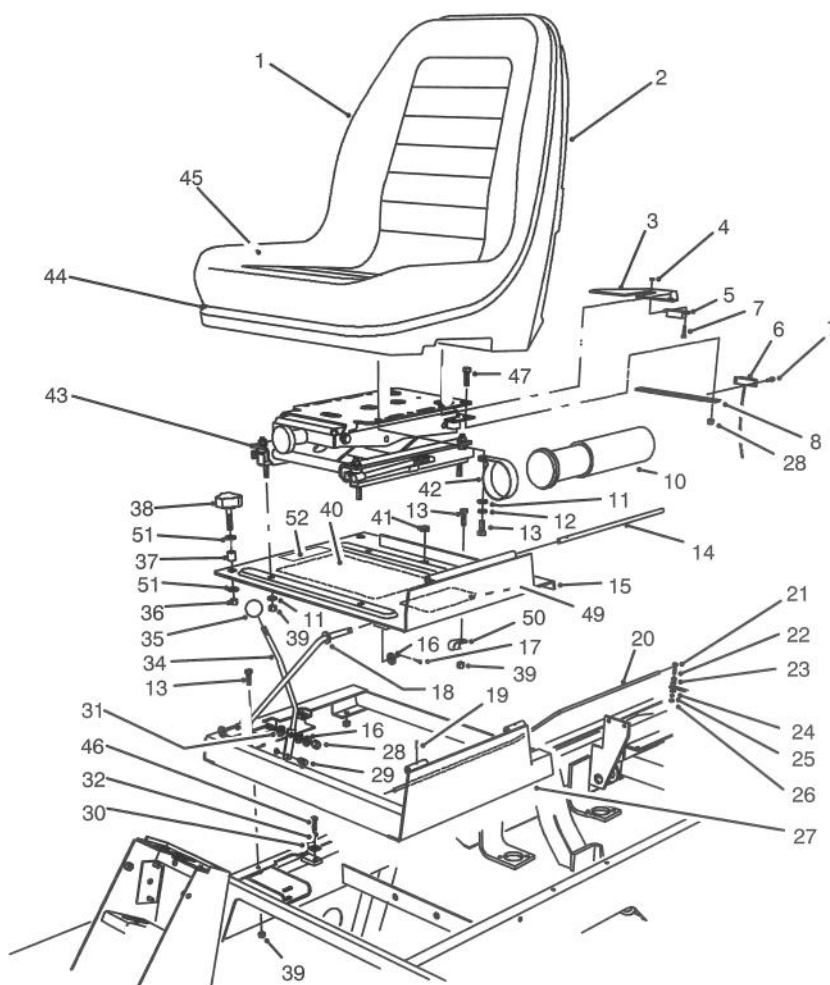 


T-1046

SEAT & THROTTLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
47	323-4	Screw - Cap Hex. Hd.	2	51	52-2860	Washer - Flat	4
‡49	85-4530	Decal - Danger (English)	1	‡52	83-7440	Decal - Knob (English)	1
50	2412-93	Clamp - R	1				

 ‡For different language versions of this part, see International Decal Cross Reference.

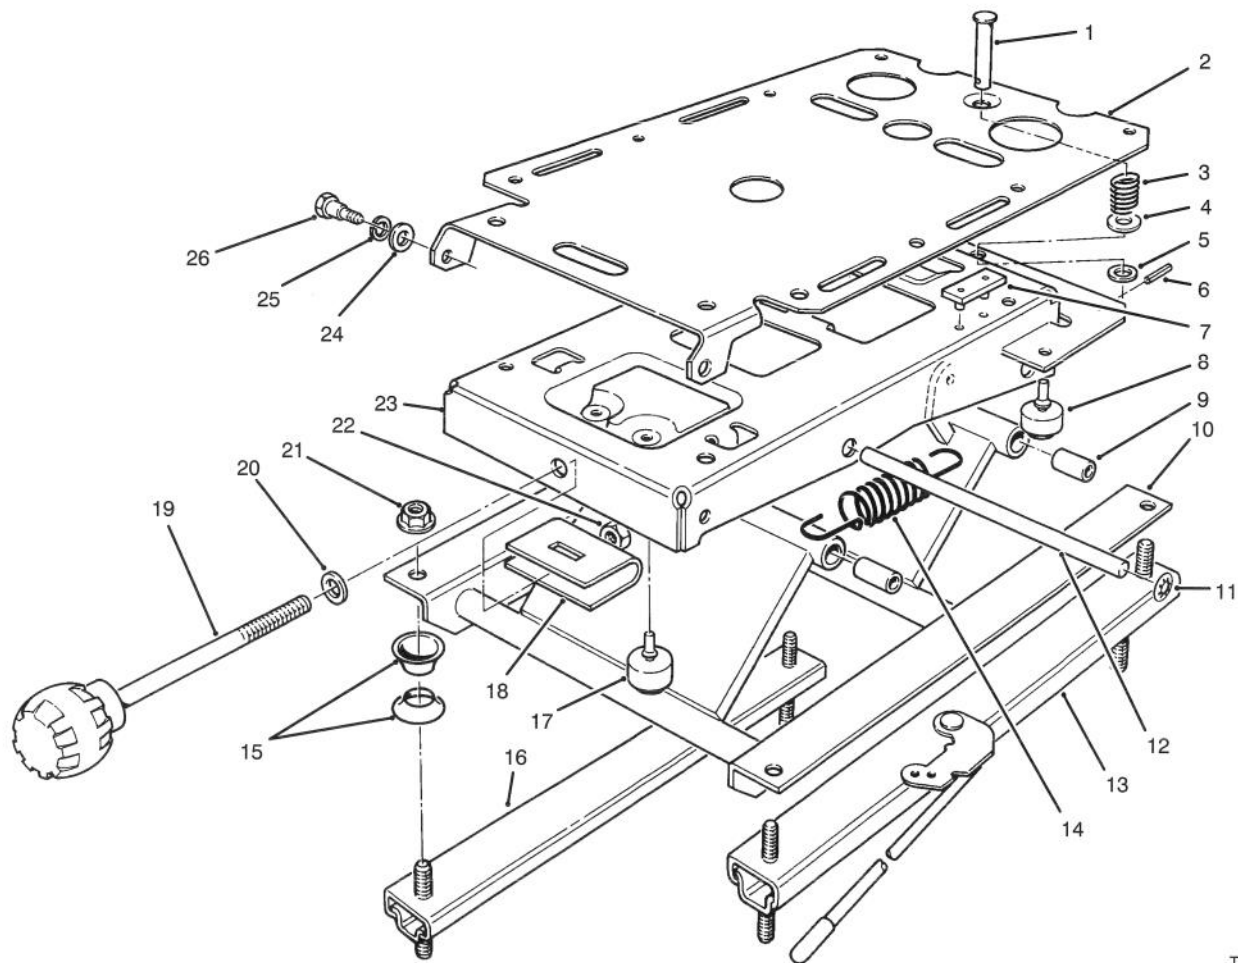


T-1031

SEAT SUSPENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	80-4860	Pin - Clevis	1
2	75-3580	Plate - Mounting, Seat	1
3	75-3530	Spring - Compression	1
4	3256-5	Washer - Flat	1
5	3256-24	Washer	1
6	75-3540	Pin - Roll	1
7	75-3550	Bumper - Seat	2
8	76-2940	Bumper - Rubber	2
9	76-1920	Bushing - Sleeve	4
10	66-8610	Weldment - Lower	1
11	66-8560	Nut - Push	4
12	76-1910	Shaft - Pivot	2
13	82-9060	Adjuster W/Handle	1

Ref. No.	Part No.	Description	No. Used
14	76-1940	Spring - Extension	2
15	66-9290	Spacer	6
16	66-8530	Adjuster	1
17	66-8520	Bumper - Down-stop	2
18	77-2870	Weldment - Hanger	1
19	76-1930	Knob - Tension Adjustment	1
20	3256-46	Washer - Flat	1
21	32128-26	Nut - Flange	4
22	3296-44	Nut - Lock	1
23	75-3480	Weldment - Upper	1
24	3256-26	Washer - Flat	2
25	3253-6	Washer - Lock	2
26	75-3510	Bolt - Shoulder	2

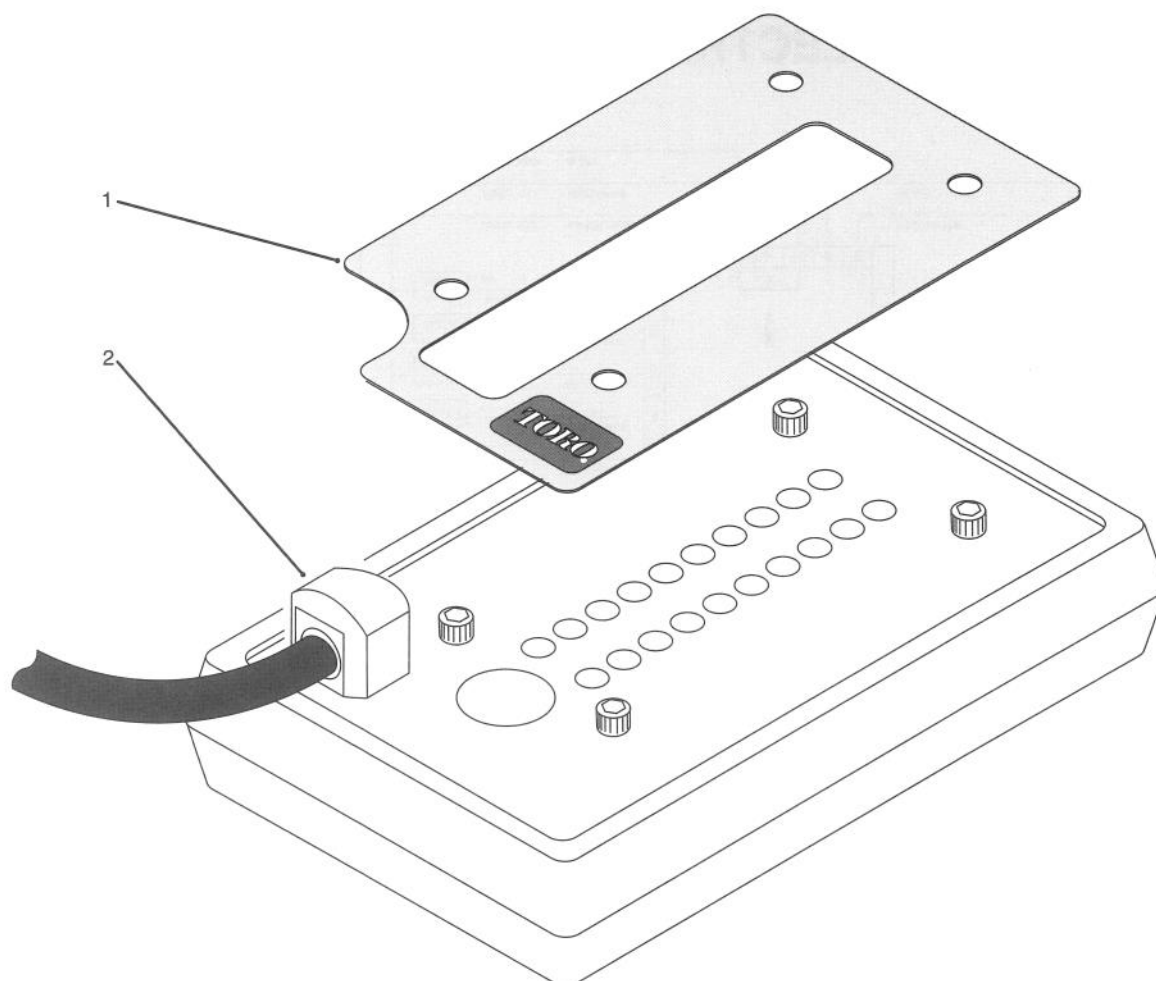 


T-1458


DIAGNOSTIC-ACE DISPLAY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	85-4760	Decal - Diagnostic-ACE RM 5100D V 1.0	1

Ref. No.	Part No.	Description	No. Used
2	85-4750	Display - Diagnostic-ACE	1

  ELECTRICAL SCHEMATIC

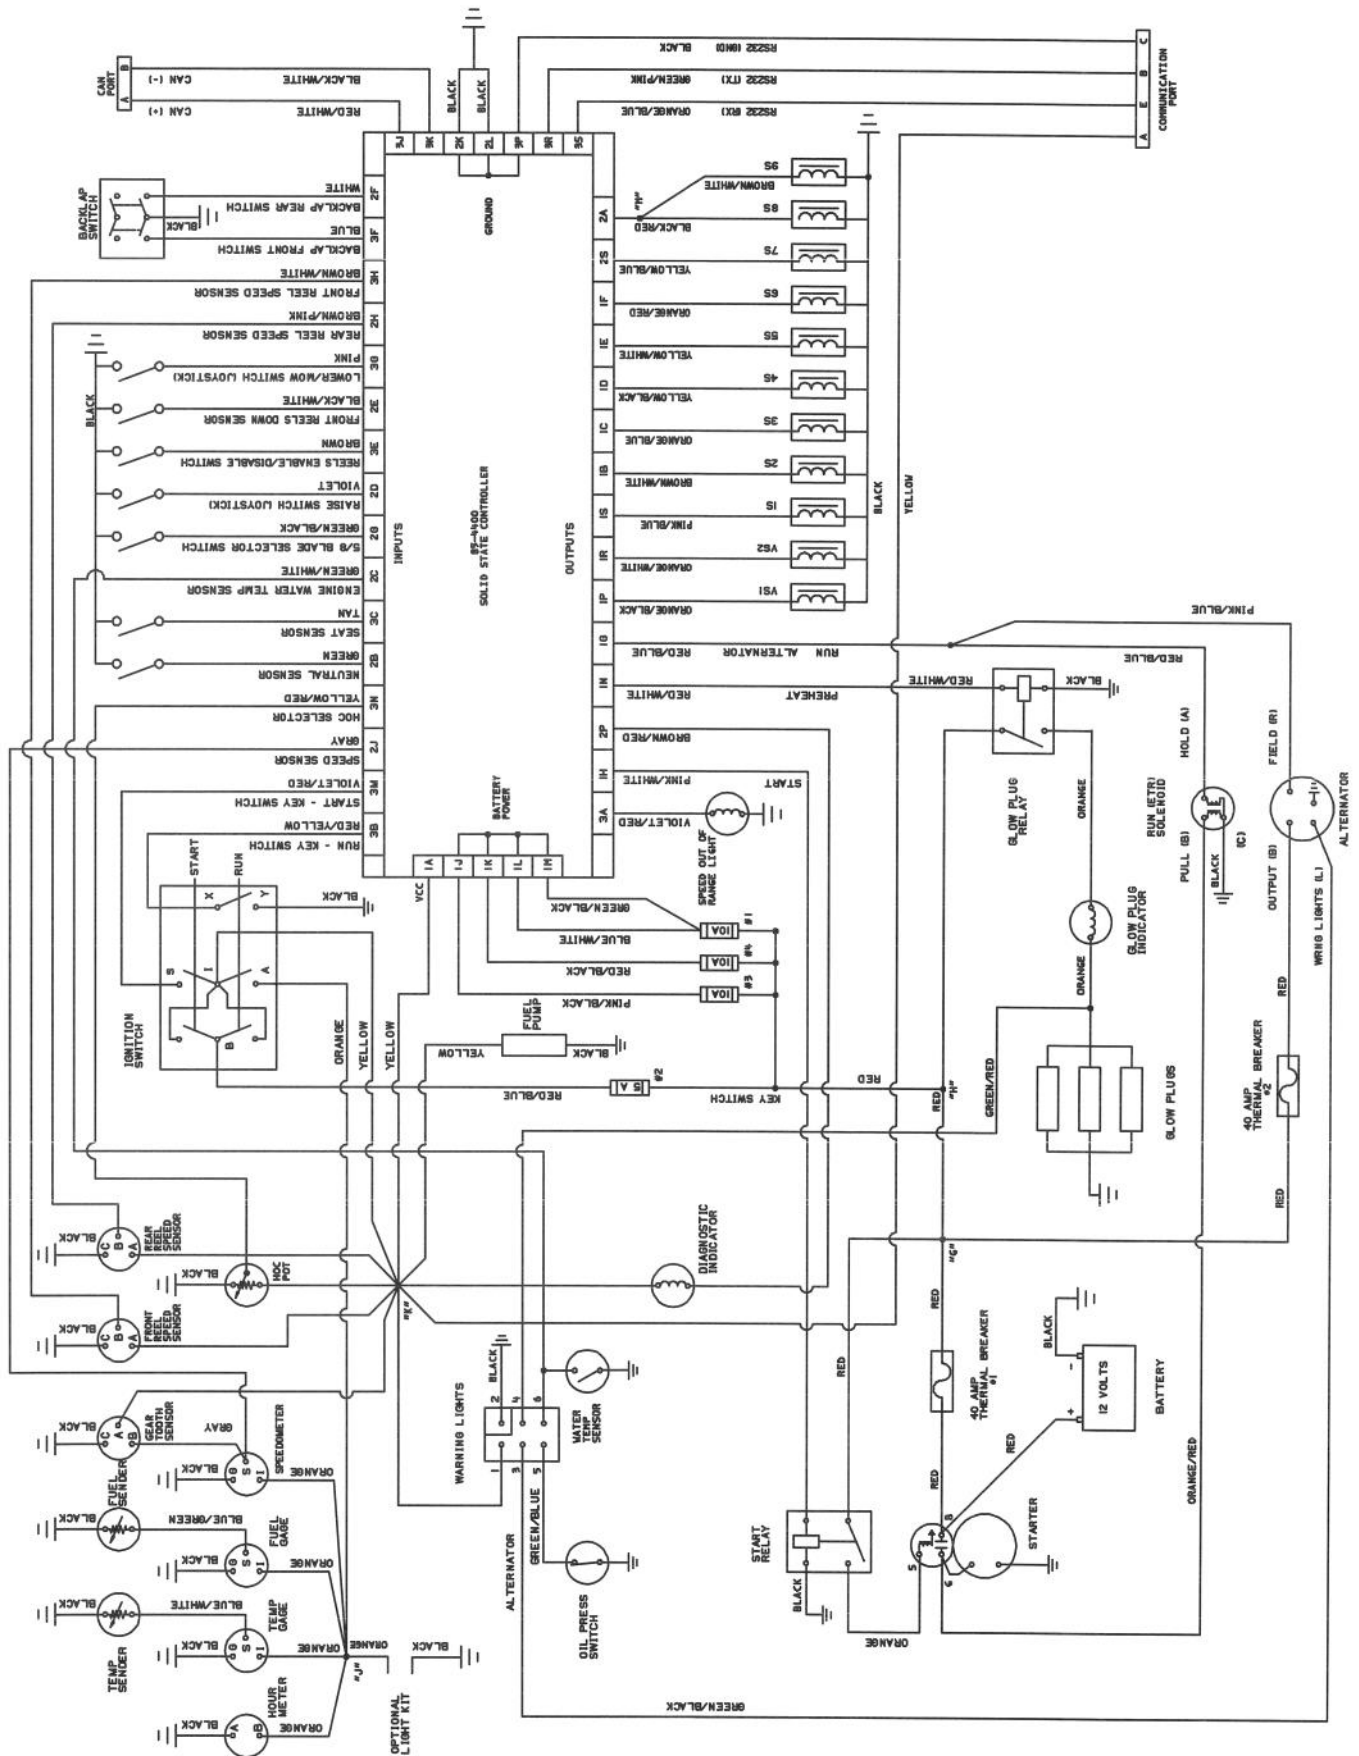

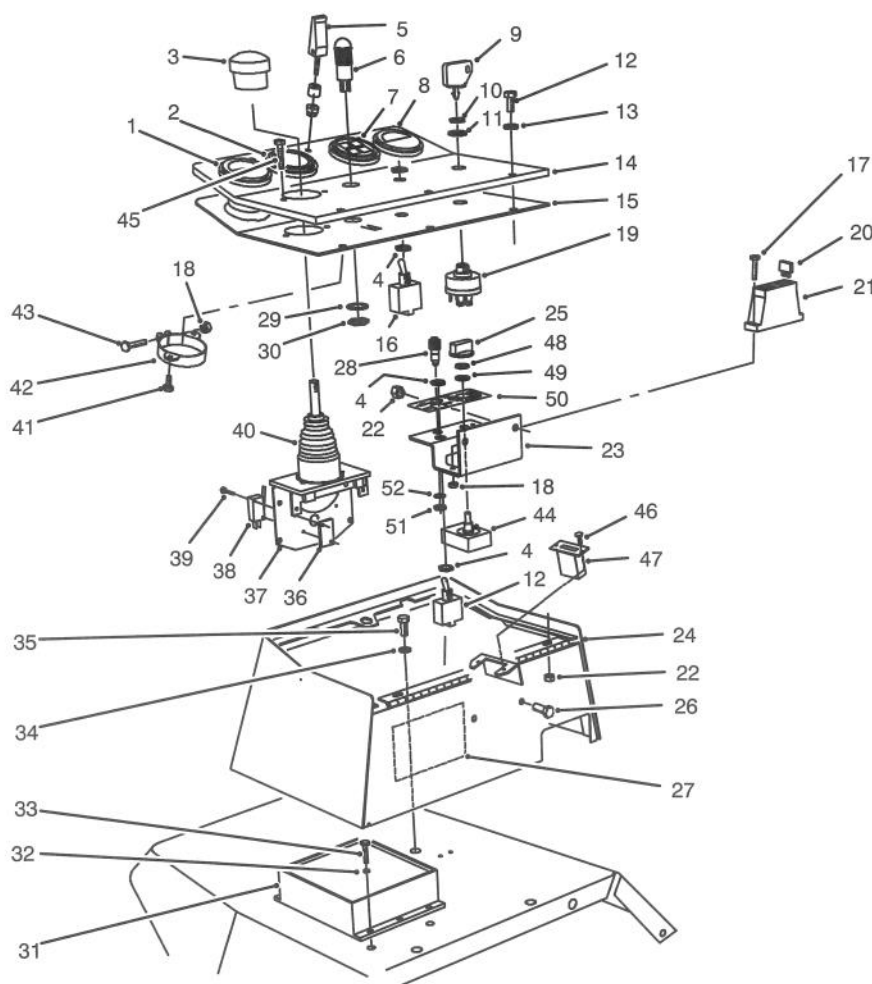

T-1501


CONTROL CONSOLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	66-2940	Gauge - Fuel	1	†20	218-573	Fuse - 5A	10
2	85-4420	Gauge - Speedometer	1	*†	218-578	Fuse - 10A	1
3	3290-489	Knob - Lift Control	1	*†	218-594	Fuse - 20A	1
4	218-498	Nut - Hex.	4	†21	67-7160	Block - Fuse	1
5	249-48	Swell Latch Assembly	1	22	3296-42	Nut - Lock	7
6	44-2210	Warning Light Assembly (Incl. Ref. #29 & 30)	1	23	85-4450	Bracket - Fuse Block	1
*	218-533	Lens - Red	1	24	75-5740	Box - Control	1
*	219-19	Bulb - #1815	1	25	85-4480	Knob	1
7	66-2960	Cluster - Warning	1	26	321-39	Screw - Cap Hex. Hd.	2
8	63-7430	Gauge - Temperature	1	‡27	85-4720	Decal - Instruction (English)	1
9	63-8360	Key - Ignition	1	28	75-4710	Warning Light Harness (Incl. Ref. #51 & 52)	1
10	218-446	Nut - Locking	1	*	219-17	Bulb - Light	5
11	218-447	Washer - E.T.L.W.	1	29	218-536	Washer - Lock	1
12	3258-166	Screw - Phillip Hd.	5	30	218-535	Nut - Lock	1
13	3256-1	Washer - Flat	5	31	85-4400	Controller - Electronic Note: This part must be programmed by distributor before installation.	1
14	75-0591	Panel - Control	1				
15	75-6270	Cover - Control Box	1				
16	75-1010	Toggle Switch Assembly (Incl. Ref. #4)	2				
17	32105-13	Screw - Cap Hex. Hd.	2	32	3253-3	Washer - Lock	3
18	3296-2	Nut - Lock	3	33	321-4	Screw - Cap Hex. Hd.	3
19	27-2360	Ignition Switch Assembly (Incl. Ref. #9-11)	1	34	3256-3	Washer - Flat	4
				35	322-3	Screw - Cap Hex. Hd.	4
				36	3290-354	Plate - Nut	2

*Not Illustrated

†Included in main wire harness assembly.

 ‡For different language versions of this part, see International Decal Cross Reference.

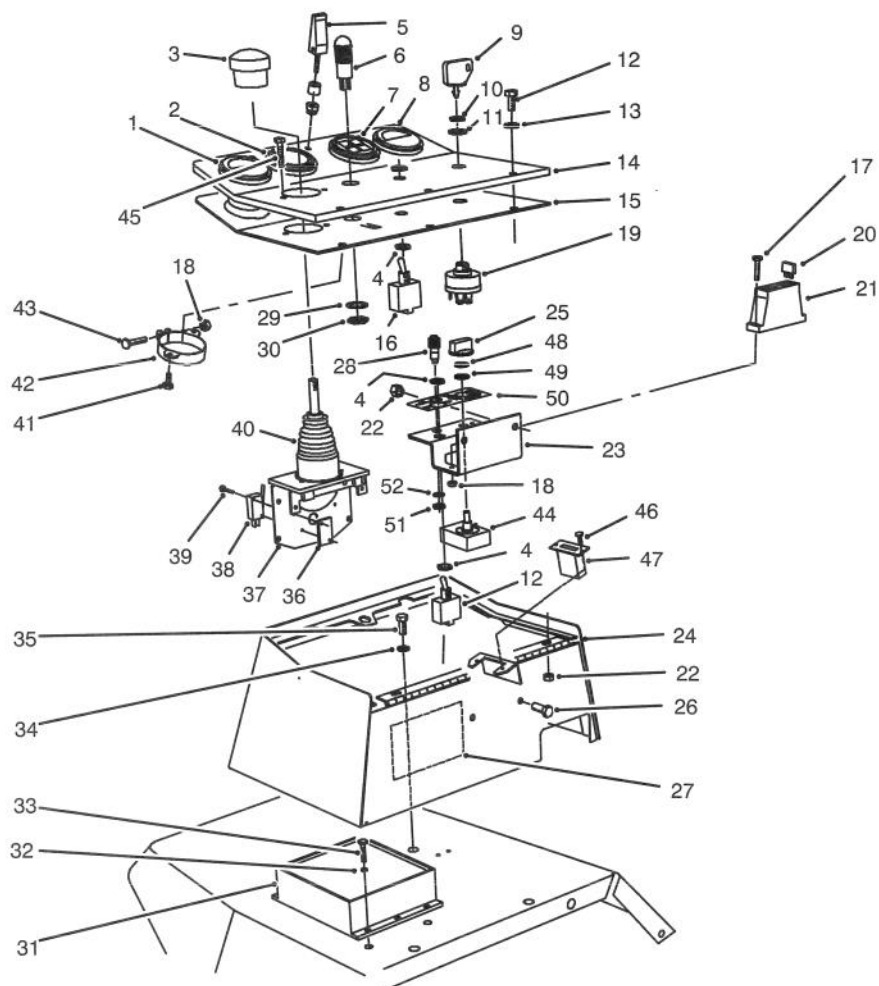

T-1501


CONTROL CONSOLE ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
37	75-3420	Lift Control Assembly (Incl. Ref. #3, 36 & 38-40)	1	46	32144-18	Screw - Cap Hex. Hd.	2
38	218-590	Switch - Micro	2	47	75-6820	Meter - Hour	1
39	3290-93	Screw - Cap Hex. Hd.	4	48		Nut - Lock	1
40	3290-488	Boot - Lift Control	1	49		Washer - Lock	1
41	32144-1	Screw - Cap Hex. Hd.	2	50	85-460	Decal - HOC Selector	1
42	69-4780	Clamp - Light Cluster	1	51		Nut - Lock	1
43	32105-1	Screw - Cap Hex. Hd.	1	52		Washer - Lock	1
44	85-4470	Potentiometer Assembly (Incl. Ref. #48 & 49) Note: Replacement of this part requires recalibration of electronic controller by distributor after installation.	1	*	85-4360	Main Wire Harness Assy.	1
45	3273-26	Screw - Hex. Socket Hd.	2	*†	85-4491	Lamp - Diagnostic	1
				*†	70-8570	Breaker - Circuit	2
				*†	86-7560	Connector - Cover (3 Way)	3
				*†	86-7550	Connector - Cover (2 Way)	2
				*†	85-4650	Connector - Loop Back	1
				*	85-4690	Software - ECU RM5100D	1

*Not Illustrated

†Included in main wire harness assembly.

  HYDRAULIC SCHEMATIC

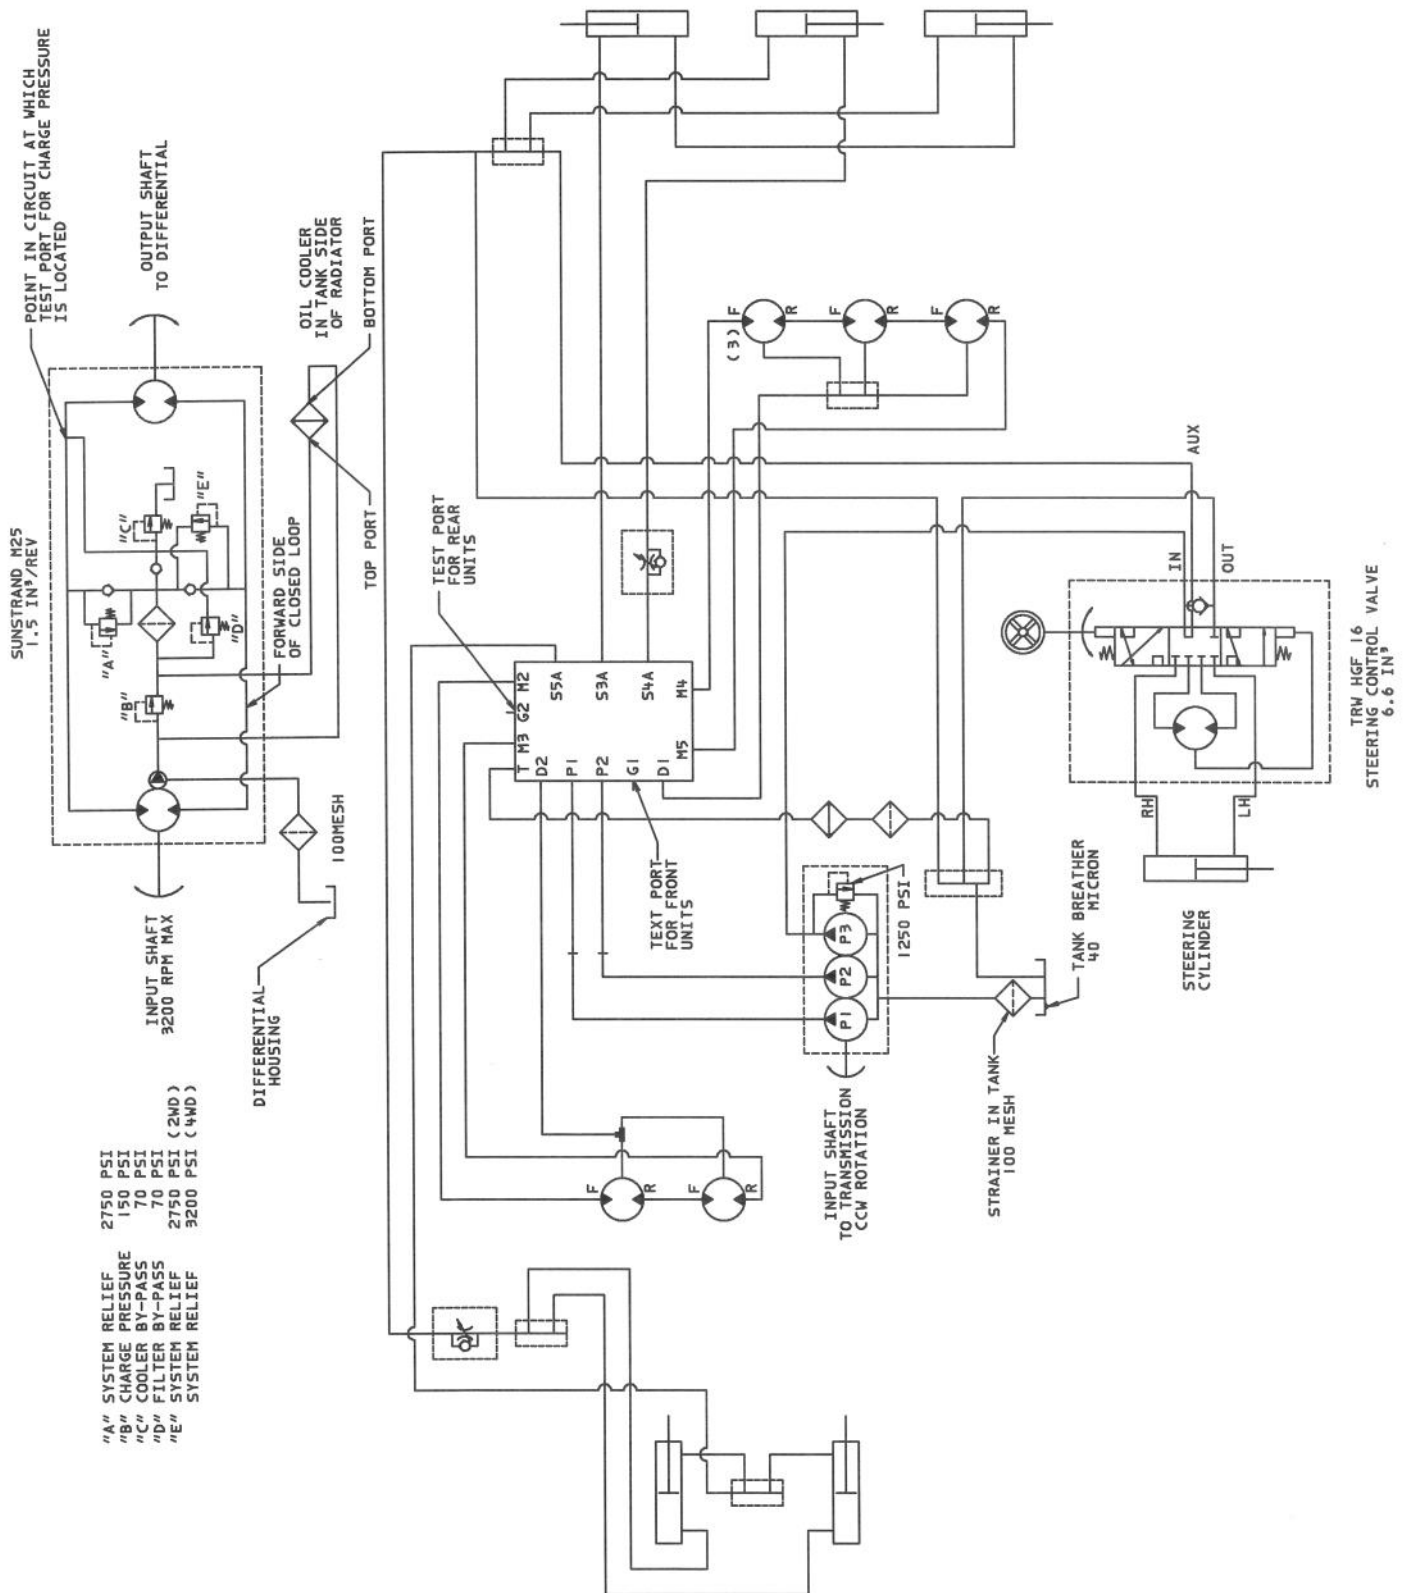

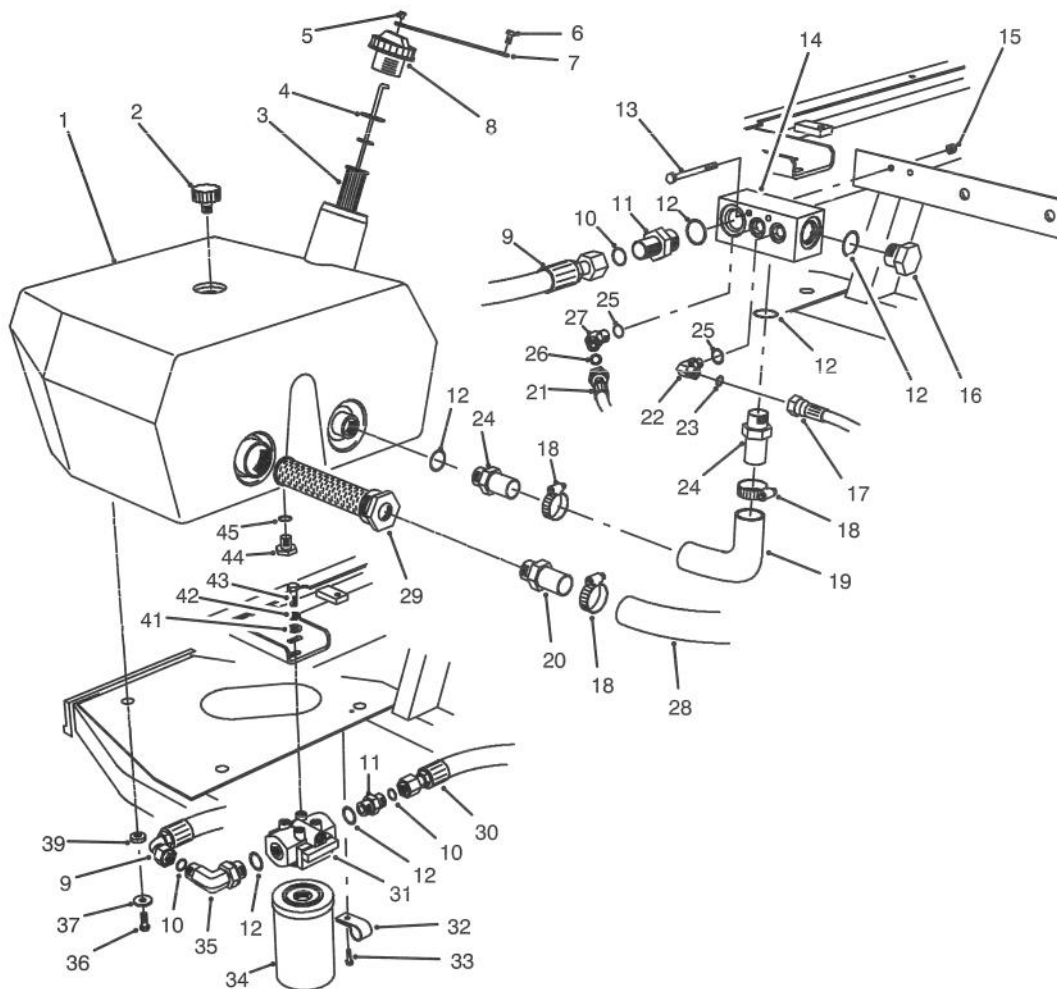


T-1048

HYDRAULIC RESERVOIR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75-1170	Reservoir - Hydraulic	1
2	68-6150	Breather - Hydraulic Tank	1
3	61-2790	Screen - Filler	1
4	75-3710	Dipstick	1
5	2410-73	Retainer - Tether	1
6	321-2	Screw - Cap Hex. Hd.	1
7	75-0540	Tether - Cap	1
8	70-8640	Cap - Hydraulic Reservoir	1
9	75-6130	Hose - Hydraulic	1
10	237-65	Seal - O-Ring	5
11	340-8	Fitting - Hydraulic Straight (Incl. Ref. #10 & 12)	2
12	237-81	Seal - O-Ring	4
13	321-23	Screw - Cap Hex. Hd.	2
14	75-5480	Manifold - Tank	1
15	3296-42	Nut - Lock	2
16	354-74	Fitting - Hydraulic Plug (Incl. Ref. #12)	1
17	75-6250	Hose - Hydraulic	1
18	2412-34	Clamp - Hose	3
19	75-5720	Hose - Hydraulic	1
20	353-682	Fitting - Hydraulic Straight	1

Ref. No.	Part No.	Description	No. Used
21	75-6200	Hose - Hydraulic	1
22	340-77	Fitting - Hydraulic 90° (Incl. Ref. #23 & 25)	1
23	237-22	Seal - O-Ring	3
24	354-73	Fitting - Hydraulic Straight (Incl. Ref. #12)	2
25	237-42	Seal - O-Ring	2
26	237-21	Seal - O-Ring	1
27	340-137	Fitting - Hydraulic 45° (Incl. Ref. #25 & 26)	1
28	75-6870	Hose - Hydraulic Suction	1
29	75-0550	Strainer - Suction	1
30	75-6140	Hose - Hydraulic	1
31	75-1300	Hydraulic Filter Head Assy.	1
32	2412-93	Clamp - R	2
33	32144-10	Screw - Hex. Washer Hd.	2
34	75-1310	Element - Hydraulic Filter	1
35	340-139	Fitting - Hydraulic 90° (Incl. Ref. #10 & 12)	1
36	323-5	Screw - Cap Hex. Hd.	3
37	63-8410	Washer - Flat	3
39	240-11	Grommet	3

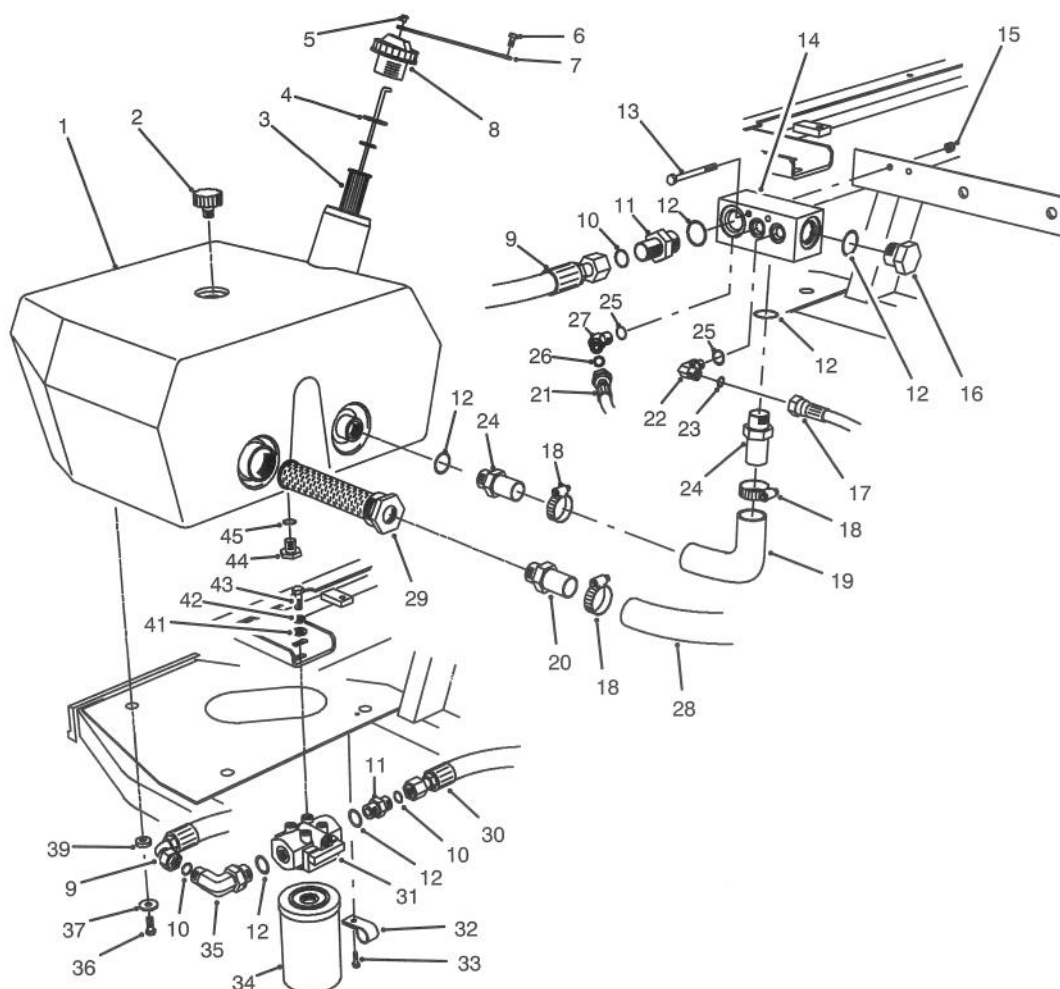 


T-1048

HYDRAULIC RESERVOIR ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
41	3256-24	Washer - Flat	2
42	3253-21	Washer - Lock	2
43	323-4	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
44	353-550	Fitting - Plug (Incl. Ref. #45)	1
45	237-79	Seal - O-Ring	1

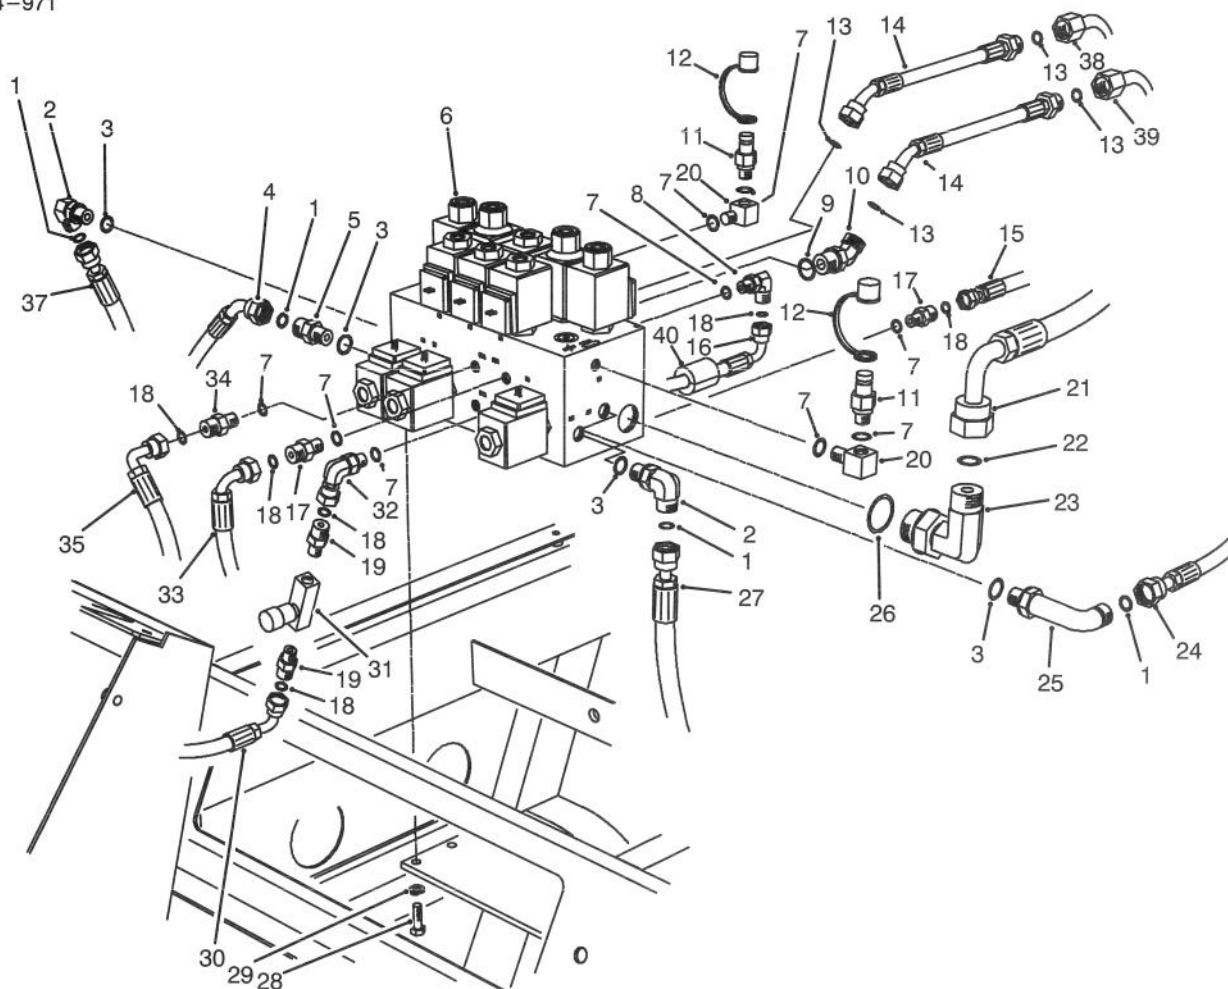 


T-1094

HYDRAULIC CONTROL MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	237-22	Seal - O-Ring	4
2	340-77	Fitting - Hydraulic 90° (Incl. Ref. #1 & 3)	2
3	237-42	Seal - O-Ring	4
4	75-6000	Hose - Hydraulic	1
5	340-2	Fitting - Hydraulic Straight (Incl. Ref. #1 & 3)	1
6	85-4550	Control Manifold Assembly	1
7	237-78	Seal - O-Ring	8
8	340-132	Fitting - Hydraulic 90° (Incl. Ref. #7 & 18)	1
9	237-79	Seal - O-Ring	2
10	340-101	Fitting - Hydraulic Straight (Incl. Ref. #9 & 13)	2
11	354-77	Fitting - Test Port (Incl. Ref. #7)	2
12	354-79	Cap - Test Port	2
13	237-30	Seal - O-Ring	4
14	86-9190	Hose - Hydraulic	2
15	88-9460	Hose - Hydraulic	1
16	75-5950	Hose - Hydraulic	1
17	340-92	Fitting - Hydraulic Straight (Incl. Ref. #7 & 18)	3
18	237-21	Seal - O-Ring	6

Ref. No.	Part No.	Description	No. Used
19	340-13	Fitting - Hydraulic Straight (Incl. Ref. #18)	2
20	75-6640	Fitting - Hydraulic 90° (Incl. Ref. #7)	2
21	75-6160	Hose - Hydraulic	1
22	237-65	Seal - O-Ring	1
23	340-139	Fitting - Hydraulic 90° (Incl. Ref. #22 & 26)	1
24	88-9470	Hose - Hydraulic	1
25	69-4320	Fitting - Hydraulic 90° (Incl. Ref. #1 & 3)	1
26	237-81	Seal - O-Ring	1
27	75-6040	Hose - Hydraulic	1
28	322-3	Screw - Cap Hex. Hd.	4
29	3253-4	Washer - Lock	4
30	75-5900	Hose - Hydraulic	1
31	82-8270	Valve - Flow Control	1
32	340-143	Fitting - Hydraulic 90° (Incl. Ref. #7)	1
33	75-6060	Hose - Hydraulic	1
35	75-5890	Hose - Hydraulic	1
37	75-5990	Hose - Hydraulic	1
38	75-5250	Tube - Hydraulic	1
39	75-5240	Tube - Hydraulic	1
40	38-3400	Guadr - Rubber	1

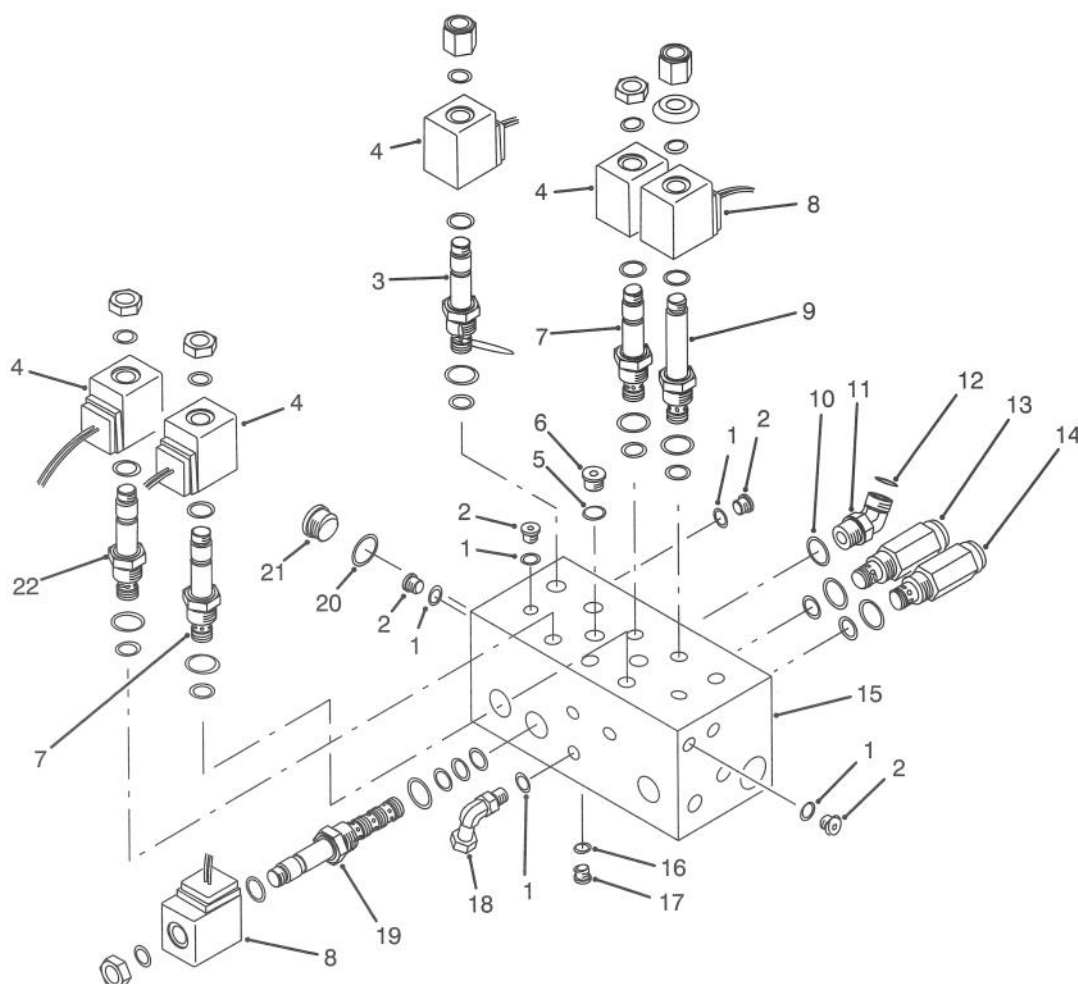 


T-1503

CONTROL MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	237-78	Seal - O-Ring	10
2	353-990	Plug (Incl. Ref. #1)	9
3	88-7020	Cartridge - N.O. (Use Seal Kit #75-2080)	2
4	88-9190	Solenoid - 20 Watt	6
5	237-42	Seal - O-Ring	2
6	353-989	Plug (Incl. Ref. #5)	2
7	88-6990	Cartridge - N.C. (Use Seal Kit #75-2080)	3
8	88-9200	Solenoid - 28 Watt	5
9	88-6970	Cartridge - N.O. (Use Seal Kit #75-2080)	2
10	237-79	Seal - O-Ring	1
11	340-101	Fitting - Hydraulic 45° (Incl. Ref. #10 & 12)	1
12	237-30	Seal - O-Ring	1
13	75-0920	Cartridge - Relief 3000 psi (Use Seal Kit #75-2080)	1

Ref. No.	Part No.	Description	No. Used
14	75-2010	Cartridge - Relief 2000 psi (Use Seal Kit #75-2080)	1
15		Body - Manifold	1
16	237-156	Seal - O-Ring	2
17	353-991	Plug (Incl. Ref. #16)	2
18	340-143	Fitting - Hydraulic 90° (Incl. Ref. #1)	1
19	88-6960	Cartridge - 4W/2P (Use Seal Kit #75-2090)	3
20	237-80	Seal - O-Ring	1
21	354-70	Plug (Incl. Ref. #20)	1
22	88-6980	Cartridge - N.C. (Use Seal Kit #75-2080)	1
*	75-2080	Kit - Seal	10
*	75-2090	Kit - Seal	3

 *Not Illustrated

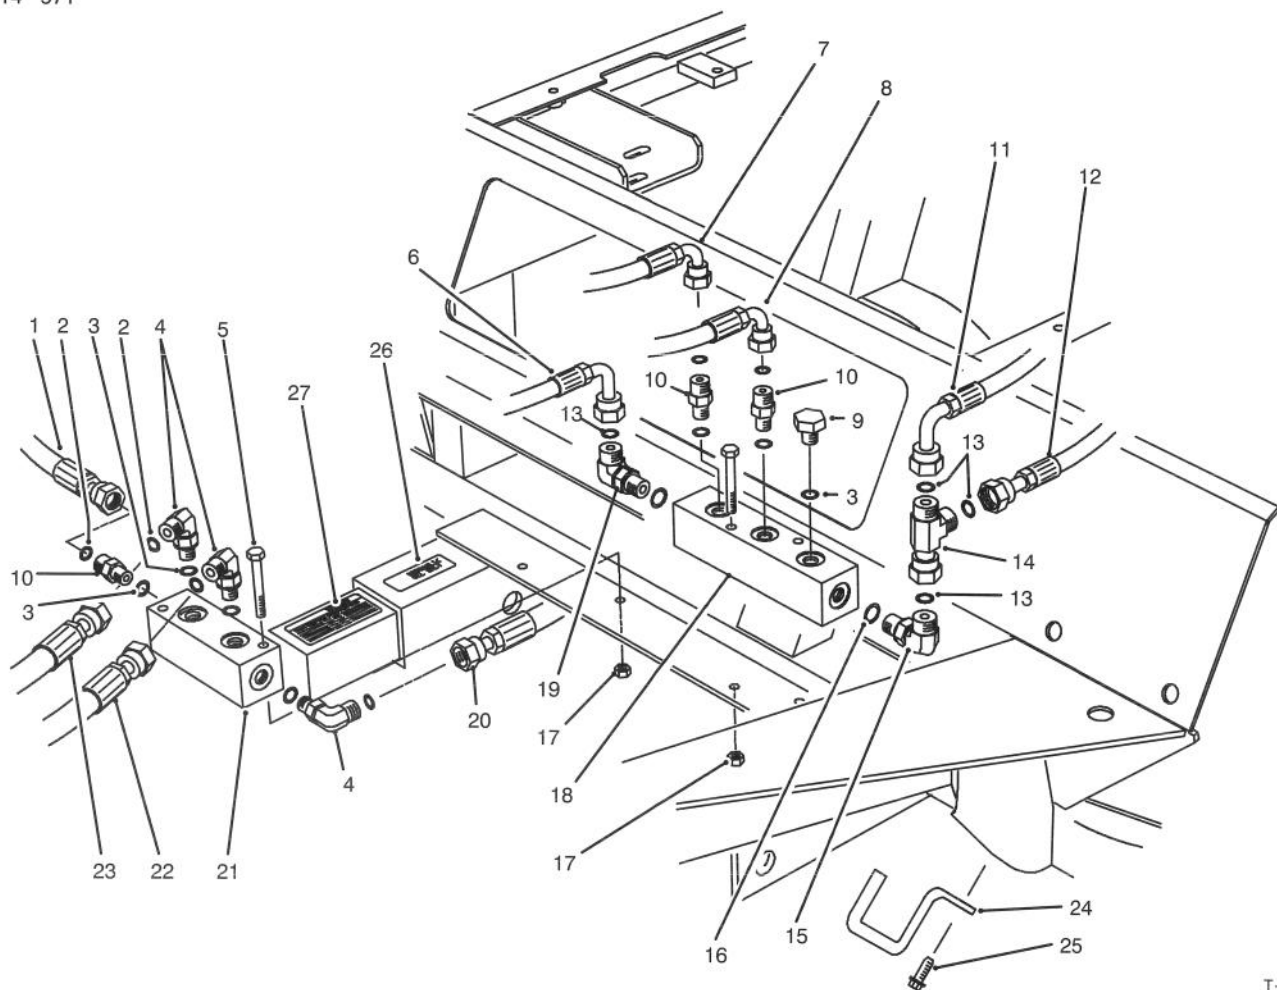


T-1058

FRONT HYDRAULIC MANIFOLDS

Ref. No.	Part No.	Description	No. Used
1	75-5980	Hose - Hydraulic	1
2	237-21	Seal - O-Ring	6
3	237-78	Seal - O-Ring	7
4	340-132	Fitting - Hydraulic 90° (Incl. Ref. #2 & 3)	3
5	321-11	Screw - Cap Hex. Hd.	4
6	75-5940	Hose - Hydraulic	1
7	75-5890	Hose - Hydraulic	1
8	75-5910	Hose - Hydraulic	1
9	353-512	Plug - Hydraulic (Incl. Ref. #3)	1
10	340-92	Fitting - Hydraulic Straight (Incl. Ref. #2 & 3)	3
11	75-6020	Hose - Hydraulic	1
12	75-6200	Hose - Hydraulic	1
13	237-22	Seal - O-Ring	4

Ref. No.	Part No.	Description	No. Used
14	340-151	Fitting - Hydraulic Tee (Incl. Ref. #13)	1
15	340-82	Fitting - Hydraulic 90° (Incl. Ref. #13 & 16)	1
16	237-42	Seal - O-Ring	2
17	3296-42	Nut - Lock	4
18	75-1190	Manifold - Hydraulic	1
19	340-77	Fitting - Hydraulic 90° (Incl. Ref. #13 & 16)	1
20	75-5950	Hose - Hydraulic	1
21	75-1180	Manifold - Hydraulic	1
22	75-5960	Hose - Hydraulic	1
23	88-9520	Hose - Hydraulic	1
24	75-5300	Rod - Hose Support	2
25	49-2040	Screw - Hex. Washer Hd.	4
26	85-4730	Decal - Oil	1
27	88-0440	Decal - Floor Plate	1

 
*Not Illustrated

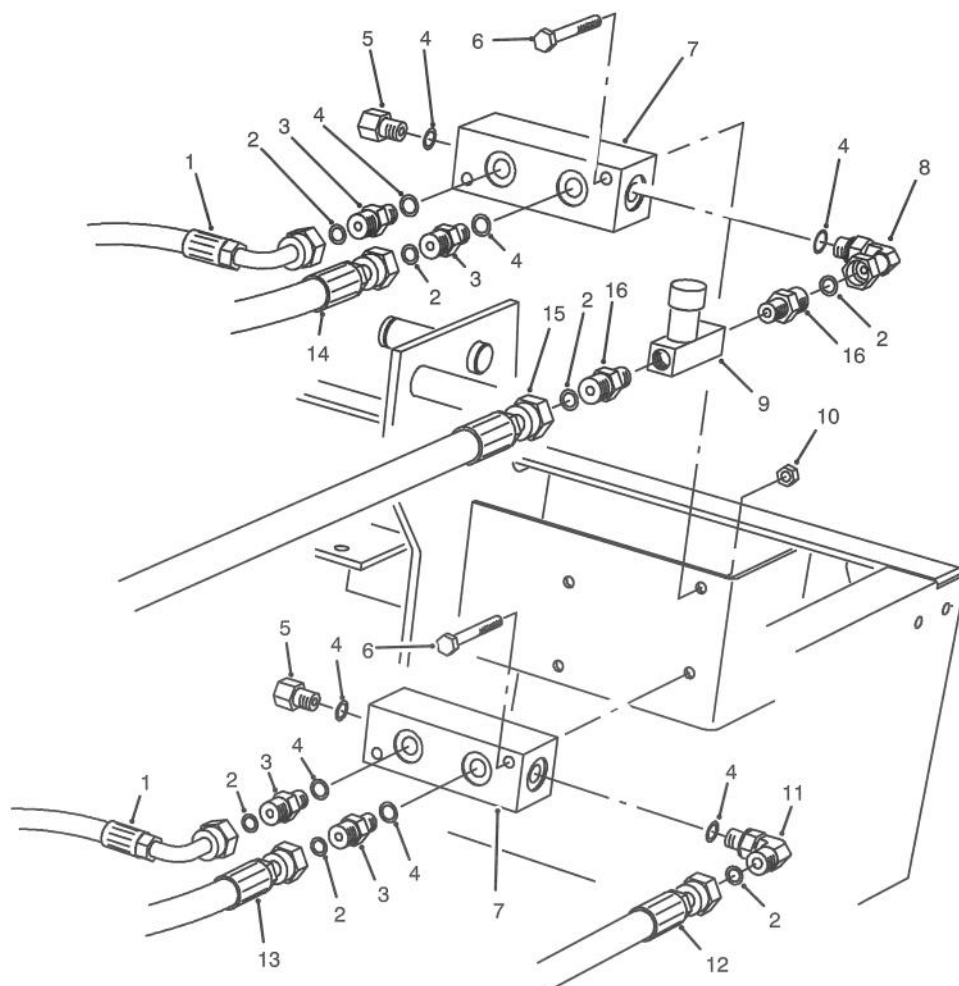

T-1095

REAR HYDRAULIC MANIFOLDS

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	75-6180	Hose - Hydraulic	2	9	82-8270	Valve - Flow Control	1
2	237-21	Seal - O-Ring	7	10	3296-42	Nut - Lock	4
3	340-92	Fitting - Hydraulic Straight (Incl. Ref. #2 & 4)	4	11	340-132	Fitting - Hydraulic 90° (Incl. Ref. #2 & 4)	1
4	237-78	Seal - O-Ring	8	12	75-6060	Hose - Hydraulic	1
5	353-512	Fitting - Hydraulic Plug (Incl. Ref. #4)	2	13	75-6080	Hose - Hydraulic	1
6	321-11	Screw - Cap Hex. Hd.	4	14	75-6070	Hose - Hydraulic	1
7	75-1180	Manifold	2	15	75-6020	Hose - Hydraulic	1
8	340-143	Fitting - Hydraulic 90° (Incl. Ref. #4)	1	16	340-13	Fitting - Hydraulic Straight (Incl. Ref. #2)	2

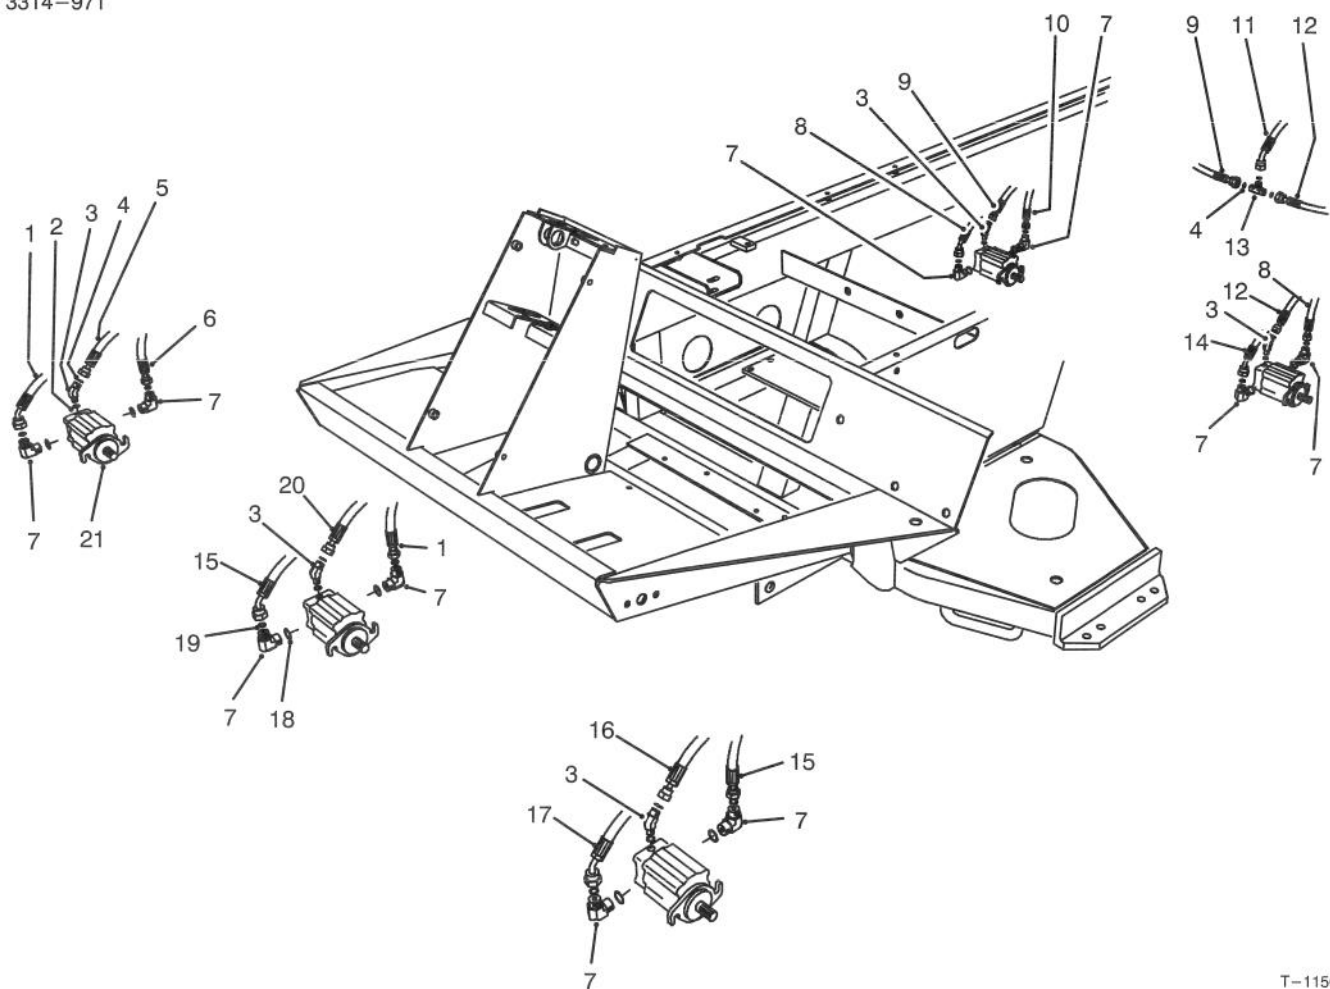 


T-1150

CUTTING UNIT HYDRAULIC COMPONENTS

Ref. No.	Part No.	Description	No. Used
1	88-9540	Hose - Hydraulic	1
2	237-78	Seal - O-Ring	5
3	340-103	Fitting - Hydraulic 45° (Incl. Ref. #2 & 4)	5
4	237-21	Seal - O-Ring	8
5	75-5980	Hose - Hydraulic	1
6	75-6000	Hose - Hydraulic	1
7	340-18	Fitting - Hydraulic 90° (Incl. Ref. #18 & 19)	10
8	75-6190	Hose - Hydraulic	1
9	88-9490	Hose - Hydraulic	1
10	75-6040	Hose - Hydraulic	1

Ref. No.	Part No.	Description	No. Used
11	88-9460	Hose - Hydraulic	1
12	88-9480	Hose - Hydraulic	1
13	340-21	Fitting - Hydraulic Tee (Incl. Ref. #4)	1
14	88-9470	Hose - Hydraulic	1
15	88-9530	Hose - Hydraulic	1
16	75-5960	Hose - Hydraulic	1
17	75-5990	Hose - Hydraulic	1
18	237-79	Seal - O-Ring	10
19	237-22	Seal - O-Ring	10
20	88-9520	Hose - Hydraulic	1
21	75-1400	Motor - Hydraulic	5

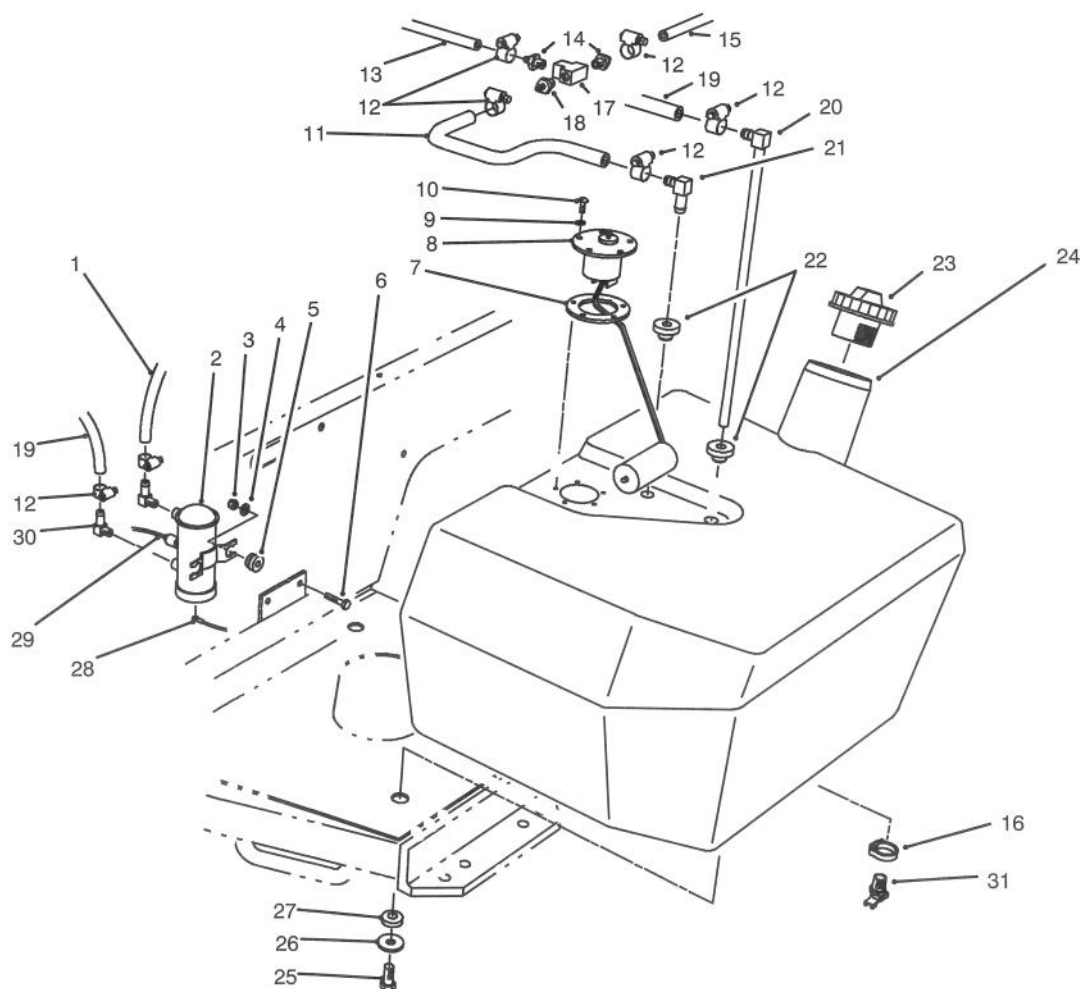 

T-1049


FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	63-7610	Hose - Fuel	1
2	53-8150	Fuel Pump Assembly (Incl. Ref. #5 & 28-29)	1
3	3296-42	Nut - Lock	2
4	3256-22	Washer - Flat	2
†5		Mount - Rubber	2
6	321-8	Screw - Cap Hex. Hd.	2
7	62-7650	Gasket - Sending Unit	1
8	63-7640	Unit - Sending	1
9	3253-15	Washer - Lock	5
10	32122-24	Screw - Round Hd.	5
11	27-5340	Hose - Fuel	1
12	2412-108	Clamp - Hose	7
13	75-4700	Hose - Fuel	1
14	354-22	Fitting - Fuel Straight	2
15	75-4701	Hose - Fuel	1
16	2412-36	Clamp - Drain	1

Ref. No.	Part No.	Description	No. Used
17	354-20	Fitting - Fuel Tee	1
18	354-21	Fitting - Fuel Straight	1
19	44-2670	Hose - Fuel	1
20	66-8121	Standpipe - Elbow 90°	1
21	46-6550	Connector - Fuel Elbow 90°	1
22	46-6560	Grommet	2
23	70-8620	Cap - Fuel Tank (Green)	1
*	70-8621	Cap - Fuel Tank (Black)	1
24	75-1080	Fuel Tank Assembly (Incl. Ref. #16 & 31)	1
25	323-5	Screw - Cap Hex. Hd.	3
26	63-8410	Washer - Flat	3
27	240-11	Grommet	3
28	70-8530	Wire - Fuel Pump	1
29	218-579	Wire - Fuel Pump	1
30	67-1690	Fitting - Fuel Elbow 90°	2
31	304-46	Fitting - Drain	1

*Not Illustrated

 †Not Serviced Separately

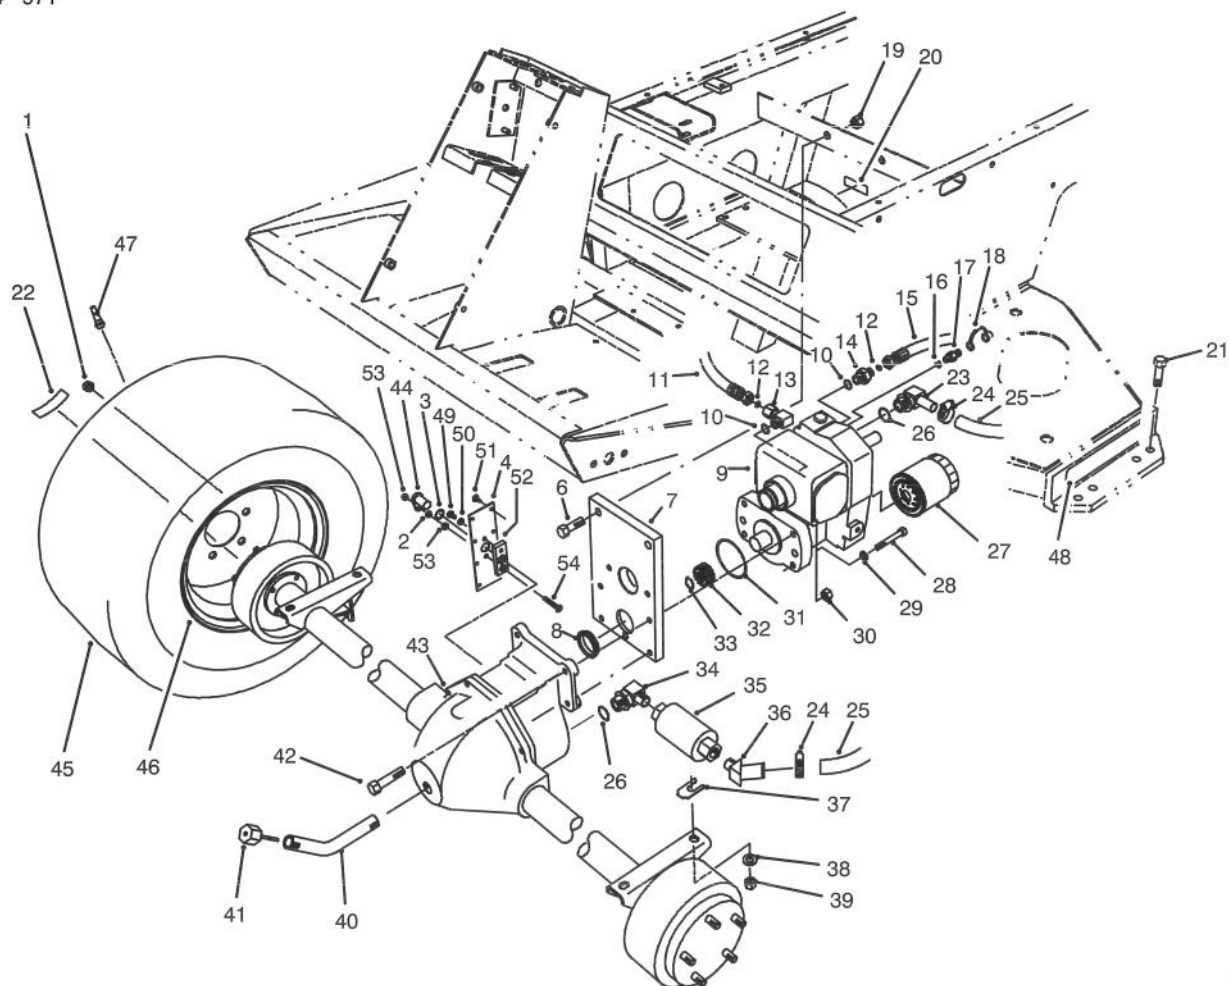


T-1050

FRONT AXLE & TRANSMISSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	23-7270	Nut - Lug	10	23	75-4720	Fitting - Hydraulic 90° (Incl. Ref. #26)	1
2	3218-1	Nut - Jam	1	24	2412-34	Clamp - Hose	2
3	237-181	Seal - O-Ring	1	25	75-6350	Hose	1
4	85-4330	Cover - Gear	1	26	237-81	Seal - O-Ring	2
6	325-7	Screw - Cap Hex. Hd.	2	27	75-1330	Filter - Oil	1
7	75-3100	Transmission Support Assy. (Incl. Ref. #8)	1	28	323-12	Screw - Cap Hex. Hd.	2
8	75-3110	Collar - Transmission	1	29	3253-21	Washer - Lock	2
9	75-0010	Transmission Assembly	1	30	3296-39	Nut - Lock	2
10	237-79	Seal - O-Ring	2	31	237-161	Seal - O-Ring	1
11	75-6170	Hose - Hydraulic	1	32	86-7220	Gear - Pinion	1
12	237-22	Seal - O-Ring	2	33	32151-62	Ring - Retaining	1
13	340-18	Fitting - Hydraulic 90° (Incl. Ref. #10 & 12)	1	34	354-75	Fitting - Hydraulic 90° (Incl. Ref. #26)	1
14	340-3	Fitting - Hydraulic Straight (Incl. Ref. #10 & 12)	1	35	75-6340	Strainer - In-Line	1
15	75-6150	Hose - Hydraulic	1	36	354-72	Fitting - Hydraulic 45°	1
16	237-78	Seal - O-Ring	1	37	42-6080	Shim - Axle	A/R
17	354-77	Fitting - Hydraulic Test Port (Incl. Ref. #16)	1	38	3256-25	Washer - Flat	4
18	354-79	Cap - Test Port	1	39	3296-48	Nut - Lock	4
19	3296-23	Nut - Lock	2	40	75-6850	Tube - Oil Fill	1
‡20	77-0490	Decal - Bolt (English)	1	41	27-3710	Dipstick - Axle	1
21	324-6	Screw - Cap Hex. Hd.	4	42	323-20	Screw - Cap Hex. Hd.	2
22	76-8730	Decal - Bolt Torque	2	43	86-7200	Front Axle Assembly	1
				44	85-4350	Sensor - Gear Tooth	1
				45	231-134	Tire	2

 ‡For different language versions of this part, see International Decal Cross Reference.

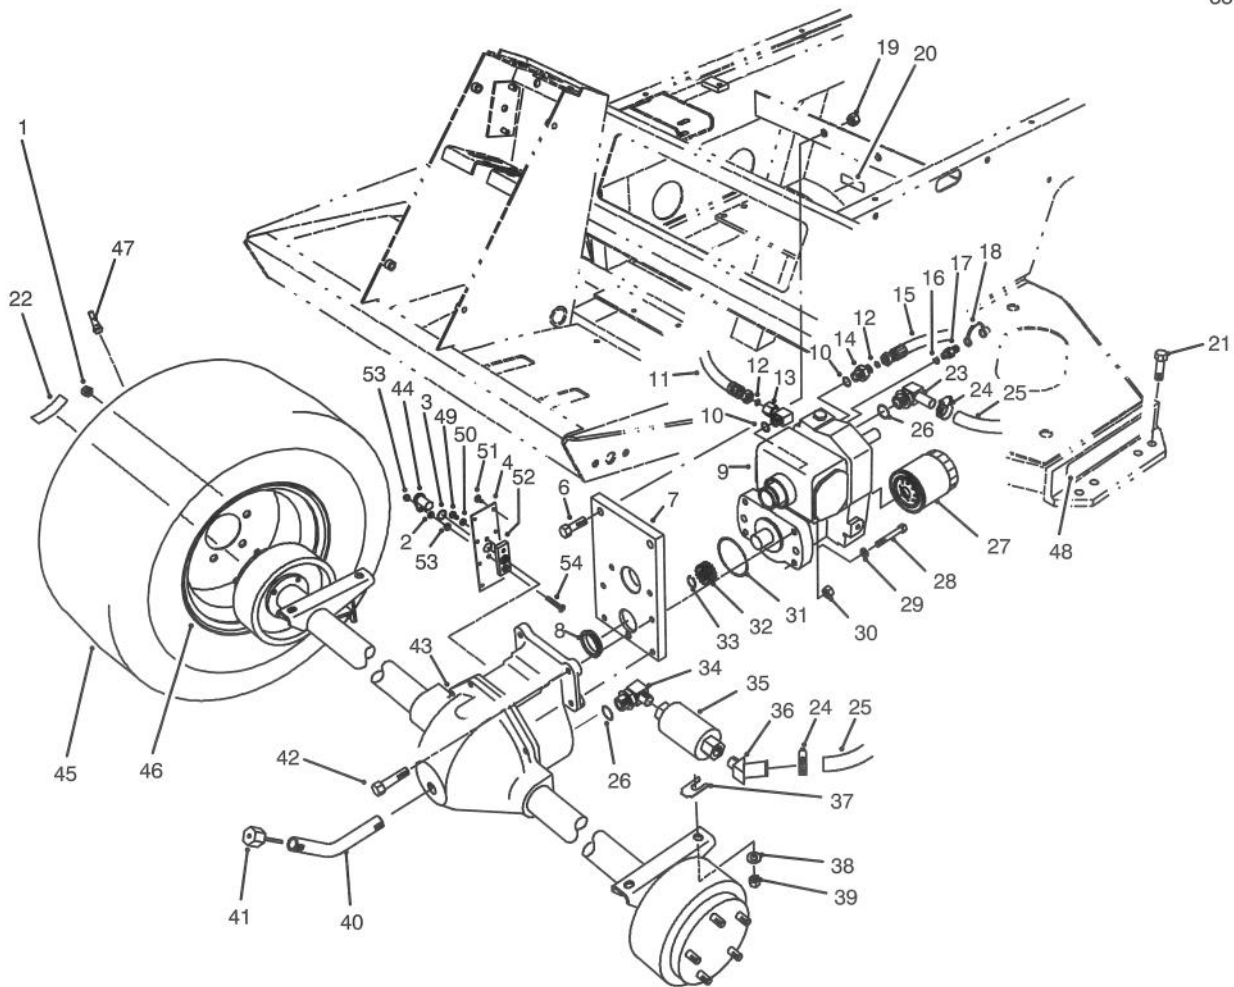


T-1050

FRONT AXLE & TRANSMISSION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
46	217-120	Rim	2
47	232-27	Stem - Valve	2
‡48	75-0810	Decal - Caution (English)	2
49	321-2	Screw - Cap Hex. Hd.	1
50	3253-3	Washer - Lock	1

Ref. No.	Part No.	Description	No. Used
51	32144-112	Screw - Cap Hex. Hd.	8
52	85-4340	Plate - Sensor Mounting	1
53	3296-56	Nut - Lock	2
54	32108-9	Screw - Machine	1

 ‡For different language versions of this part, see International Decal Cross Reference.

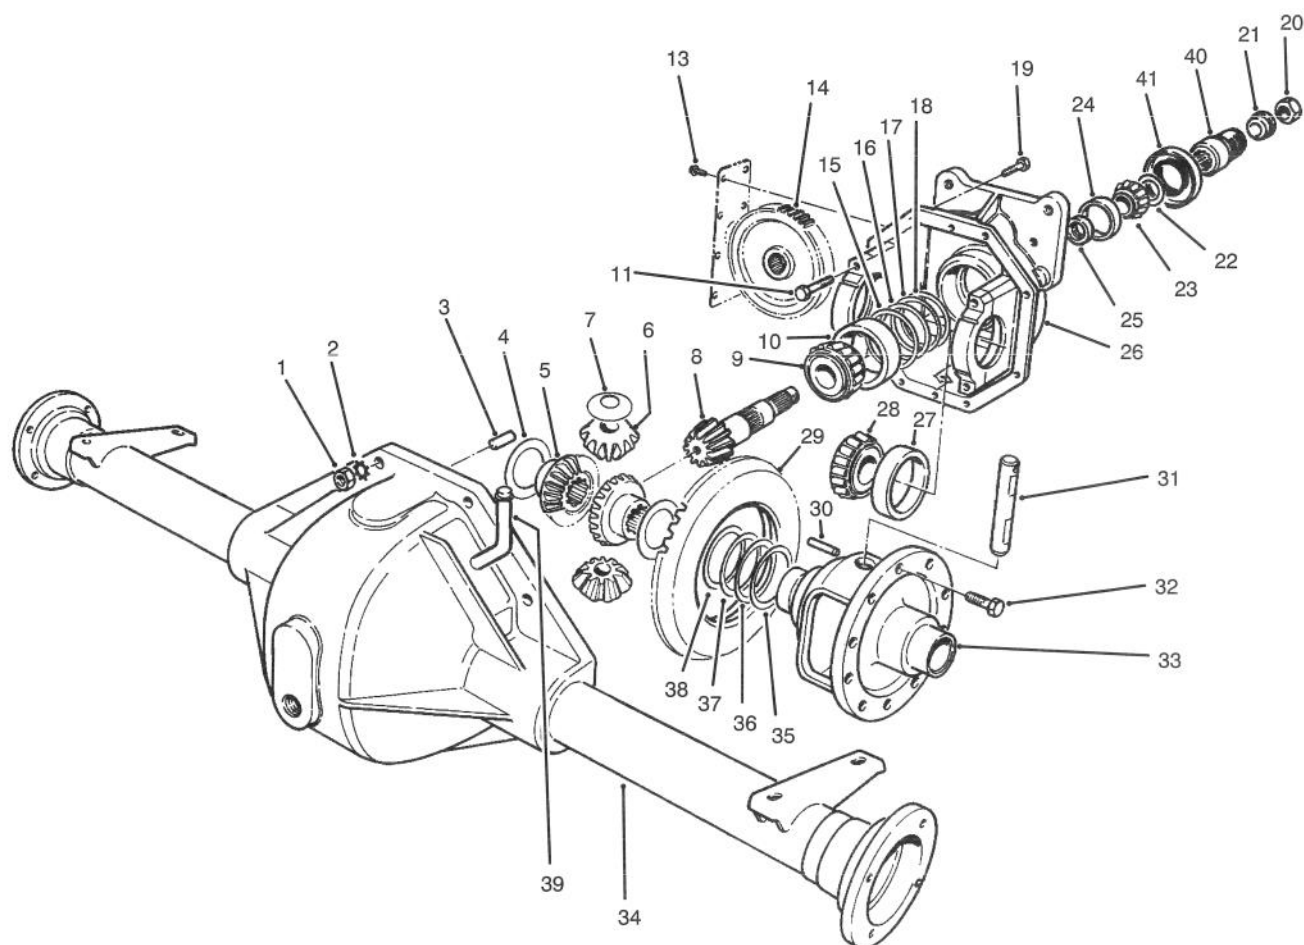

T-1315


FRONT AXLE ASSEMBLY NO. 86-7200

Ref. No.	Part No.	Description	No. Used
1	3219-2	Nut	8
2	3255-8	Washer-Lock	8
3	21-8270	Pin-Dowel	2
4	21-7720	Washer-Thrust	2
5	24-8790	Gear-Bevel, Differential	2
6	21-7690	Gear-Pinion	2
7	21-7730	Washer-Thrust	2
†8		Pinion-Drive	1
9	43-6760	Cone-Bearing, tapered	1
10	43-6750	Cup-Bearing, Tapered	1
11	324-23	Screw-Cap, Hex Hd.	4
13	32144-112	Screw-Thread Forming	8
14	86-7230	Gear-Spur	1
15	43-6710	Diff. Adjust. Shim .003	A/R
16	43-6711	Diff. Adjust. Shim .005	A/R
17	43-6712	Diff. Adjust. Shim .010	A/R
18	43-6713	Diff. Adjust. Shim .030	A/R
19	3210-7	Screw-Cap, Hex Hd.	8
20	71-4350	Nut	1
21	83-5130	Spacer - Pinion	1
22	72-3570	Shim .094 - Diff. Adjust.	A/R
*	72-3571	Shim .096 - Diff. Adjust.	A/R
*	72-3572	Shim .098 - Diff. Adjust.	A/R

Ref. No.	Part No.	Description	No. Used
22	72-3573	Shim .100 - Diff. Adjust.	A/R
*	72-3574	Shim .102 - Diff. Adjust.	A/R
*	72-3575	Shim .104 - Diff. Adjust.	A/R
*	72-3576	Shim .106 - Diff. Adjust.	A/R
*	72-3577	Shim .108 - Diff. Adjust.	A/R
*	72-3578	Shim .110 - Diff. Adjust.	A/R
*	72-3580	Shim .112 - Diff. Adjust.	A/R
*	72-3581	Shim .114 - Diff. Adjust.	A/R
*	72-3582	Shim .116 - Diff. Adjust.	A/R
*	72-3583	Shim .118 - Diff. Adjust.	A/R
*	72-3584	Shim .120 - Diff. Adjust.	A/R
*	72-3585	Shim .125 - Diff. Adjust.	A/R
*	72-3586	Shim .127 - Diff. Adjust.	A/R
*	72-3587	Shim .129 - Diff. Adjust.	A/R
*	72-3588	Shim .131 - Diff. Adjust.	A/R
*	72-3590	Shim .133 - Diff. Adjust.	A/R
*	72-3591	Shim .135 - Diff. Adjust.	A/R
*	72-3592	Shim .137 - Diff. Adjust.	A/R
*	72-3593	Shim .139 - Diff. Adjust.	A/R
*	72-3594	Shim .141 - Diff. Adjust.	A/R
*	72-3595	Shim .143 - Diff. Adjust.	A/R
*	72-3596	Shim .145 - Diff. Adjust.	A/R
*	72-3597	Shim .147 - Diff. Adjust.	A/R

*Not Illustrated

 †Not Serviced Separately

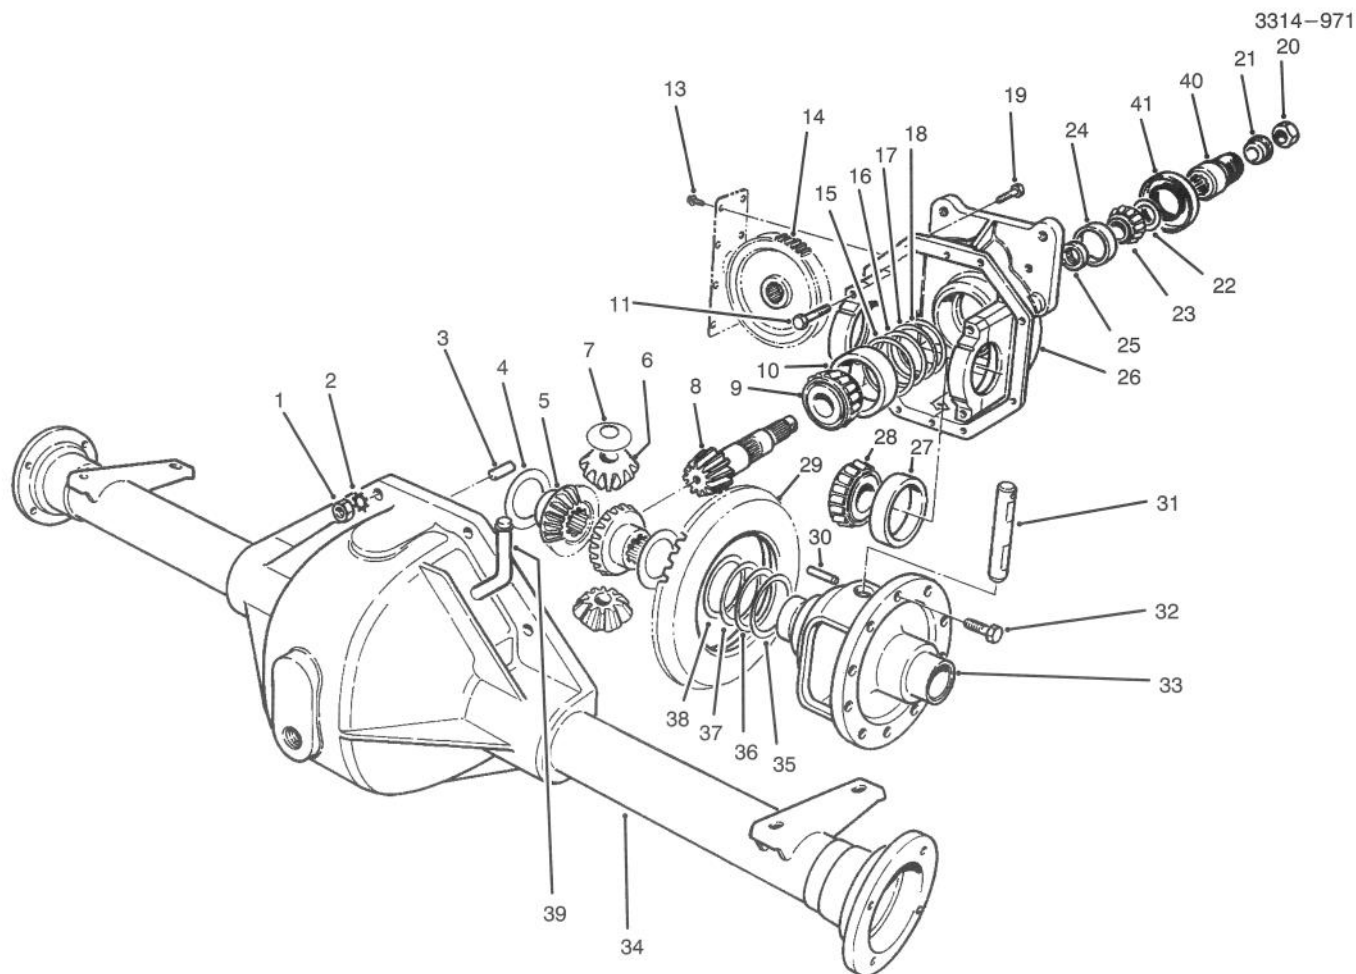

T-1315


FRONT AXLE ASSEMBLY NO. 86-7200 (Continued)

Ref. No.	Part No.	Description	No. Used
22	72-3598	Shim .149 - Diff. Adjust.	A/R
*	72-3600	Shim .151 - Diff. Adjust.	A/R
23	254-91	Cone-Bearing	1
24	21-8390	Cup-Bearing	1
25	21-8020	Spacer-Front Pinion	1
26	86-7190	Upper Housing (Incl. Ref. #11)	1
27	254-66	Cup-Tapered Bearing	2
28	254-65	Cone-Tapered Bearing	2
†29		Gear-Ring	1
30	21-7710	Pin-Roll	1
31	21-7700	Shaft-Pinion Mate	1

Ref. No.	Part No.	Description	No. Used
32	21-7770	Screw-Drive Gear	5
33	21-7670	Case-Differential	1
34	75-0720	Housing-Lower	1
35	21-8120	Diff. Adjust. Shim .030	A/R
36	21-8110	Diff. Adjust. Shim .010	A/R
37	21-8100	Diff. Adjust. Shim .005	A/R
38	21-8090	Diff. Adjust. Shim .003	A/R
39	21-8230	Vent Tube Assembly	1
40	83-4910	Coupler - Pinion	1
41	71-4330	Seal	1
*	72-3620	Gear & Pinion Assembly (Incl. Ref. #8 & 29)	1

*Not Illustrated

 †Not Serviced Separately

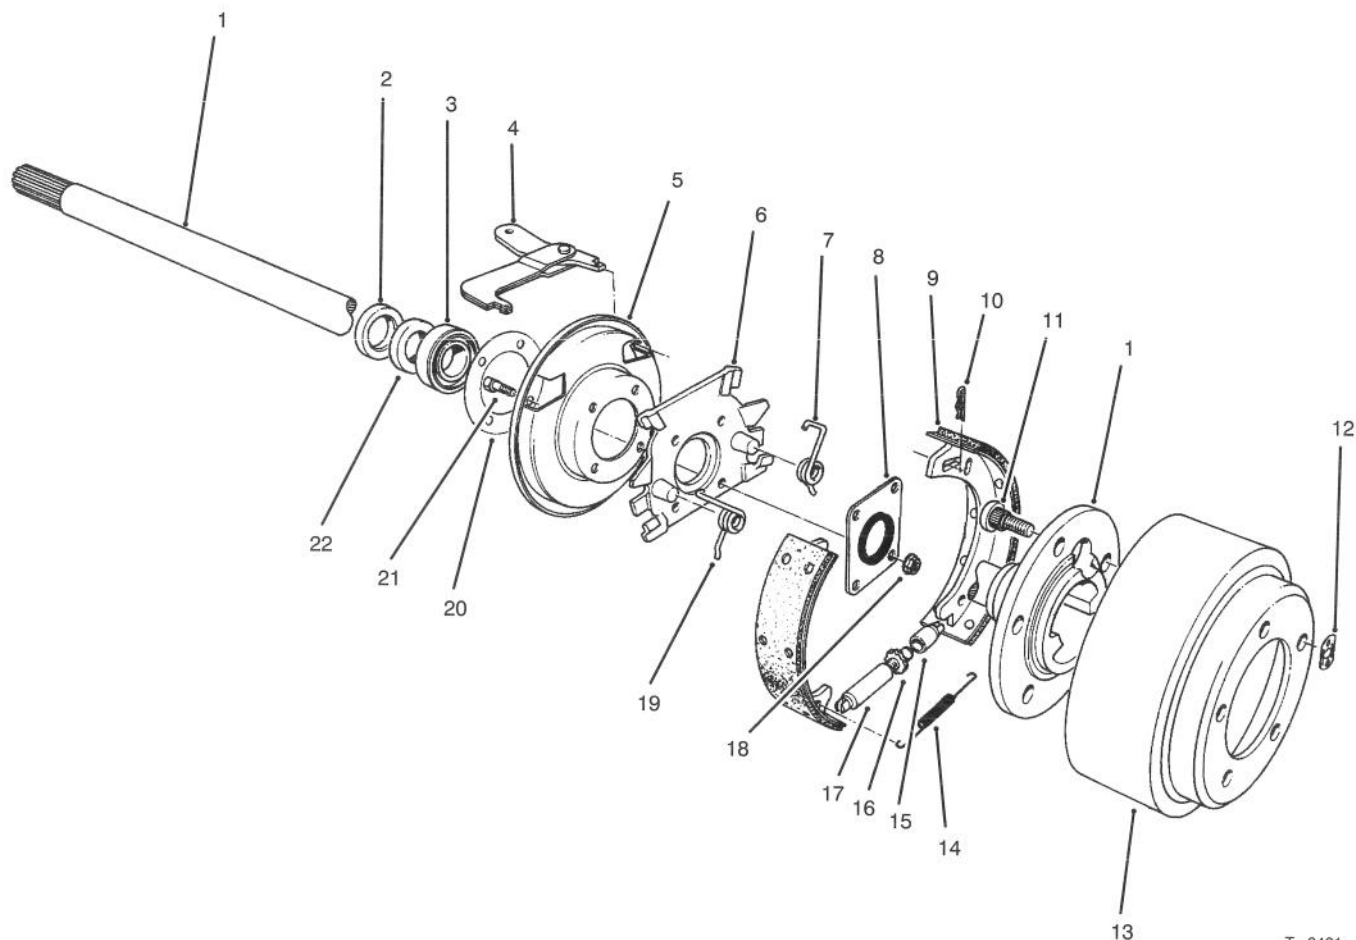


T-0421

BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	27-6862	Shaft-Axle, Flanged L.H.	1
*	27-6852	Shaft-Axle, Flanged R.H.	1
2	21-8330	Seal-Oil	2
3	21-8180	Bearing	2
4	24-9180	Lever, Brake, Parking	2
5	21-9450	Shield-Dust	2
6	43-6810	Spider-Torque	2
7	21-9430	Spring-Shoe Return, R.H.	2
8	28-0670	Seal-Oil	2
9	43-2690	Shoe & Lining Assembly	4
10	21-9460	Retainer-Brake, Parking	4
11	242-34	Stud-Flange, Axle	10

Ref. No.	Part No.	Description	No. Used
12	21-8360	Clip-Retaining	2
13	28-0680	Drum-Brake	2
14	21-9440	Spring-Adjusting Screw	2
15	21-9390	Socket-Adjusting Screw	2
16	21-9370	Screw-Adjusting	2
17	21-9380	Nut-Pivot	2
18	43-6800	Nut-Lock	8
19	21-9420	Spring-Shoe Return, L.H.	2
20	21-8320	Gasket-Bearing, Wheel	2
21	28-0660	Screw-Cap, Hex Hd.	8
22	24-8840	Ring-Bearing, Wheel	2
*	43-2690	Pair of Lined Brake Shoes	2

 *Not Illustrated

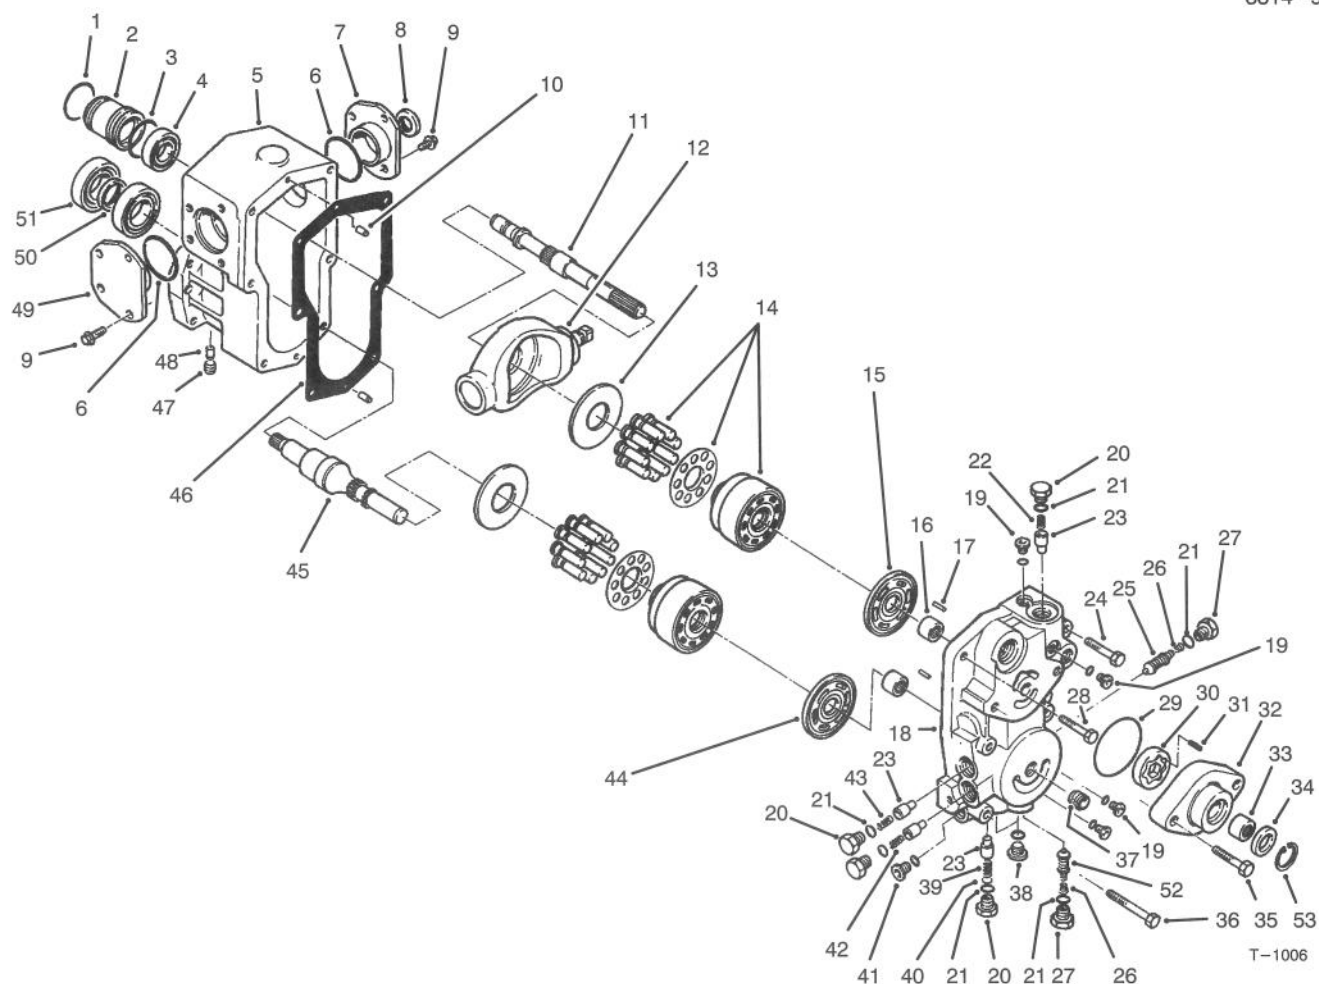


TRANSMISSION ASSEMBLY NO. 75-0010

Ref. No.	Part No.	Description	No. Used
1	75-0430	Ring - Retaining	1
2	75-0150	Guide - Seal	1
3	75-0410	O-Ring	1
4	75-0520	Bearing - Ball	1
5	75-0020	Housing	1
6	75-0210	O-Ring	2
7	86-7520	Trunion Cover Assy. R.H.	1
8	75-0230	Seal - Lip	1
9	75-0090	Screw - Cap Hex Hd.	8
10	75-0480	Pin	2
11	86-7540	Shaft - Pump	1
12	75-0390	Plate - Swash	1
13	75-0400	Plate - Thrust	2
14	75-0470	Cylinder Block Kit	2
15	75-0380	Plate - Valve	1
16	75-0500	Bearing - Needle	2
17	75-0510	Pin	2
18	75-0040	Center Section	1
19	75-0170	Plug - Straight Thread	4
20	75-0060	Plug	4
21	75-0240	O-Ring	6
22	75-0250	Spring	1
23	75-0260	Valve - Relief	4

Ref. No.	Part No.	Description	No. Used
24	75-0130	Screw - Cap Hex Hd.	3
25	75-0300	Valve - SCR	1
26	75-0140	Spring - Conical	1
27	75-0190	Plug - Special	2
28	75-0120	Screw - Cap Hex Hd.	1
29	75-0370	O-Ring	1
30	75-0360	Gerotor	1
31	75-0350	Pin	1
32	83-4780	Housing - Charge Pump	1
33	75-0340	Bearing - Needle	1
34	75-0330	Seal - Lip	1
35	75-0110	Screw - Cap Hex Hd.	2
36	75-0180	Screw - Cap Hex Hd.	2
37	75-0320	Nipple	1
38	75-0200	Plug - Straight Thread	2
39	75-0270	Spring	1
40	75-0310	Shim	1
41	75-0070	Plug	1
42	75-0280	Spring	1
43	75-0290	Spring	1
44	75-0490	Plate - Valve	1
45	75-0440	Shaft - Motor	1
46	75-0030	Gasket - Housing	1

*Not Illustrated

 3314-971

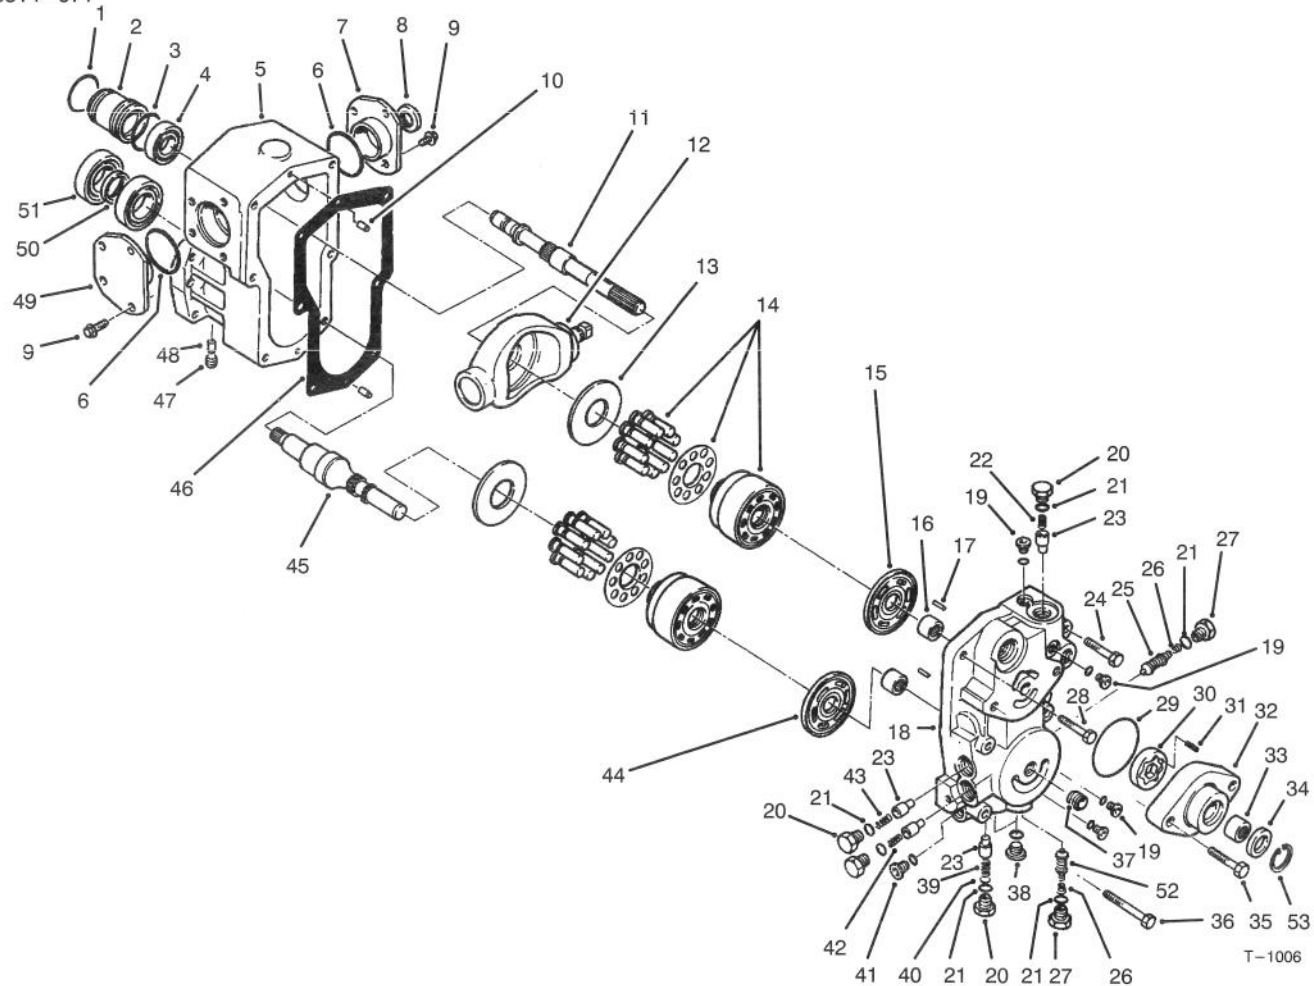


TRANSMISSION ASSEMBLY NO. 75-0010 (Continued)

Ref. No.	Part No.	Description	No. Used
47	75-0160	Plug - Pipe	1
48	75-0220	Pin	2
49	86-7530	Trunion Cover Assy. L.H.	1
50	75-0450	Collar	1

Ref. No.	Part No.	Description	No. Used
51	75-0460	Bearing - Ball	2
52	75-6930	Valve - SCR	1
53	32120-74	Ring - Retaining	1

 *Not Illustrated

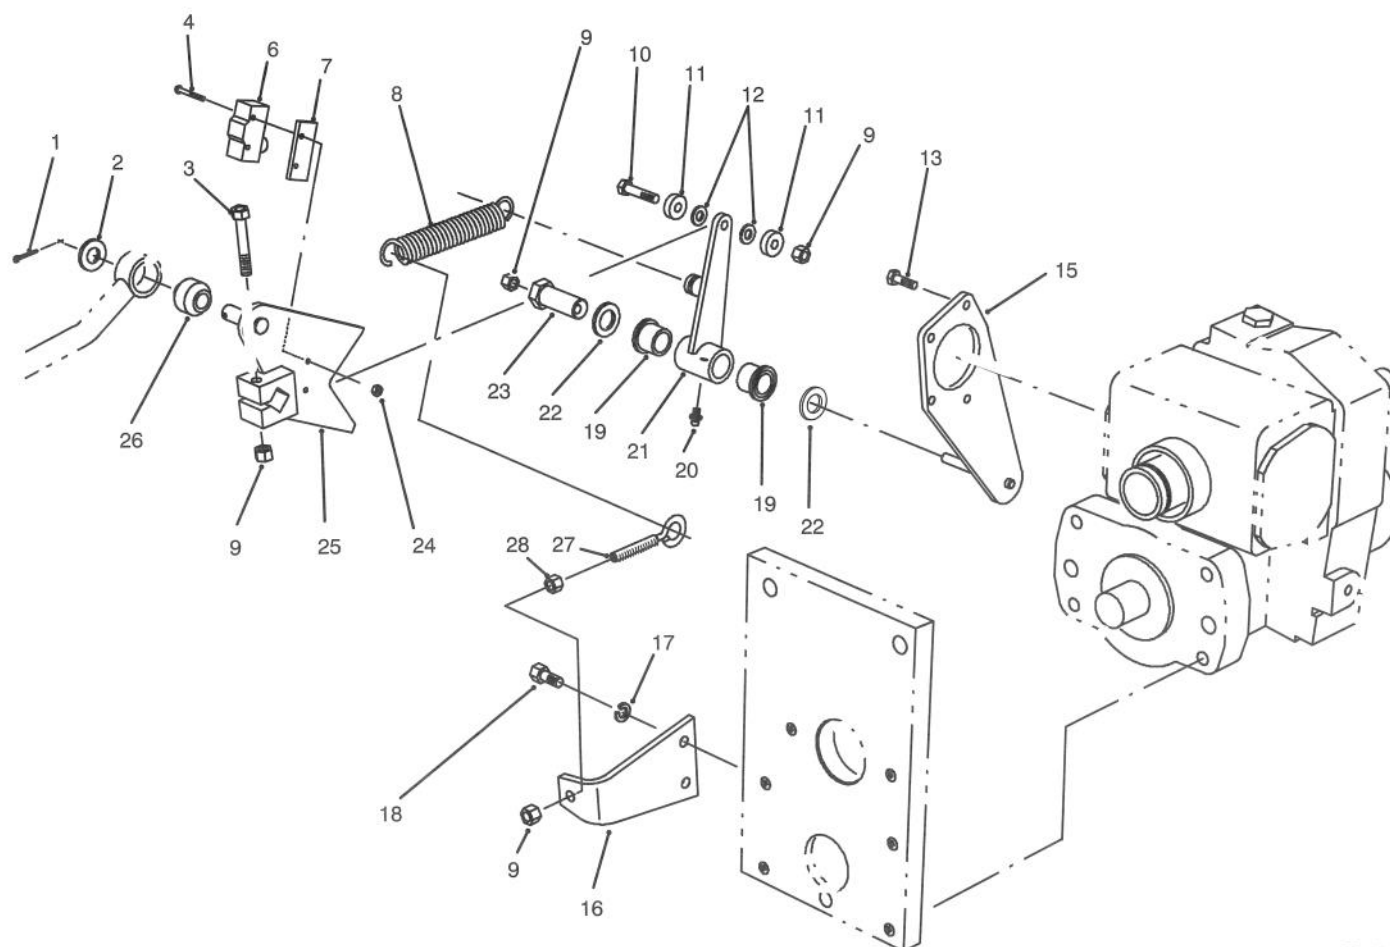


T-1051

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272-10	Pin - Cotter	1
2	3256-26	Washer - Flat	1
3	322-10	Screw - Cap Hex. Hd.	1
4	32105-21	Screw	2
6	29-6162	Switch - Neutral	1
7	75-4130	Plate - Switch	1
8	76-9430	Spring - Extension	1
9	3296-29	Nut - Lock	4
10	322-7	Screw - Cap Hex. Hd.	1
11	251-259	Bearing - Ball	2
12	75-5470	Spacer	2
13	32144-22	Screw - Cap Hex. Hd.	4
15	75-4080	Plate - Traction	1
16	85-9900	Plate - Spring Anchor	1

Ref. No.	Part No.	Description	No. Used
17	3253-4	Washer - Lock	2
18	322-3	Screw - Cap Hex. Hd.	2
19	256-113	Bushing - Flange	2
20	302-5	Fitting - Grease	1
21	75-4090	Switch Arm Assembly (Incl. Ref. #19 & 20)	1
22	3-6498	Washer - Thrust	2
23	76-8640	Stud - Traction	1
24	3296-9	Nut - Hex.	2
25	75-4100	Control - Pump	1
26	23-2270	Bushing - Rubber	1
27	85-9910	Eyebolt	1
28	3217-6	Nut - Hex.	1

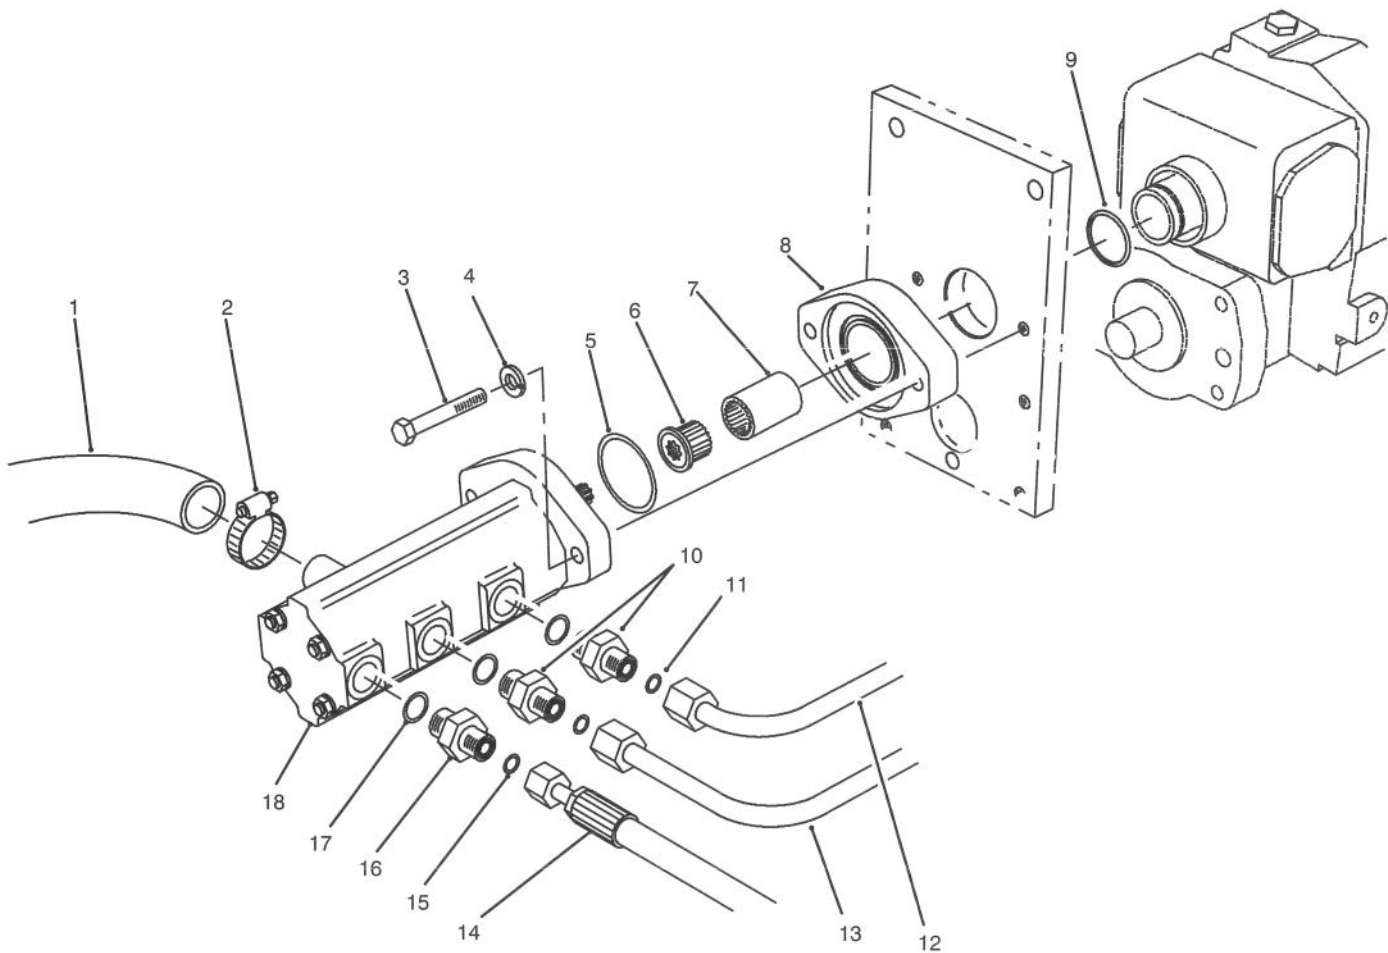 


T-1052

GEAR PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75-6870	Hose - Suction	1
2	2412-34	Clamp - Hose	1
3	323-12	Screw - Cap Hex. Hd.	2
4	3253-5	Washer - Lock	2
5	237-162	Seal - O-Ring	1
6	86-9200	Sleeve - Pump	1
7	75-2430	Coupling - Transmission	1
8	75-4400	Adaptor - Transmission	1
9	237-163	Seal - O-Ring	1
10	340-4	Fitting - Hydraulic Straight (Incl. Ref. #11 & 17)	2


Ref. No.	Part No.	Description	No. Used
11	237-30	Seal - O-Ring	2
12	75-5240	Tube - Hydraulic	1
13	75-5250	Tube - Hydraulic	1
14	75-6240	Hose - Hydraulic	1
15	237-22	Seal - O-Ring	1
16	340-3	Fitting - Hydraulic Straight (Incl. Ref. #15 & 17)	1
17	237-79	Seal - O-Ring	3
18	75-0800	Gear Pump Assembly	1

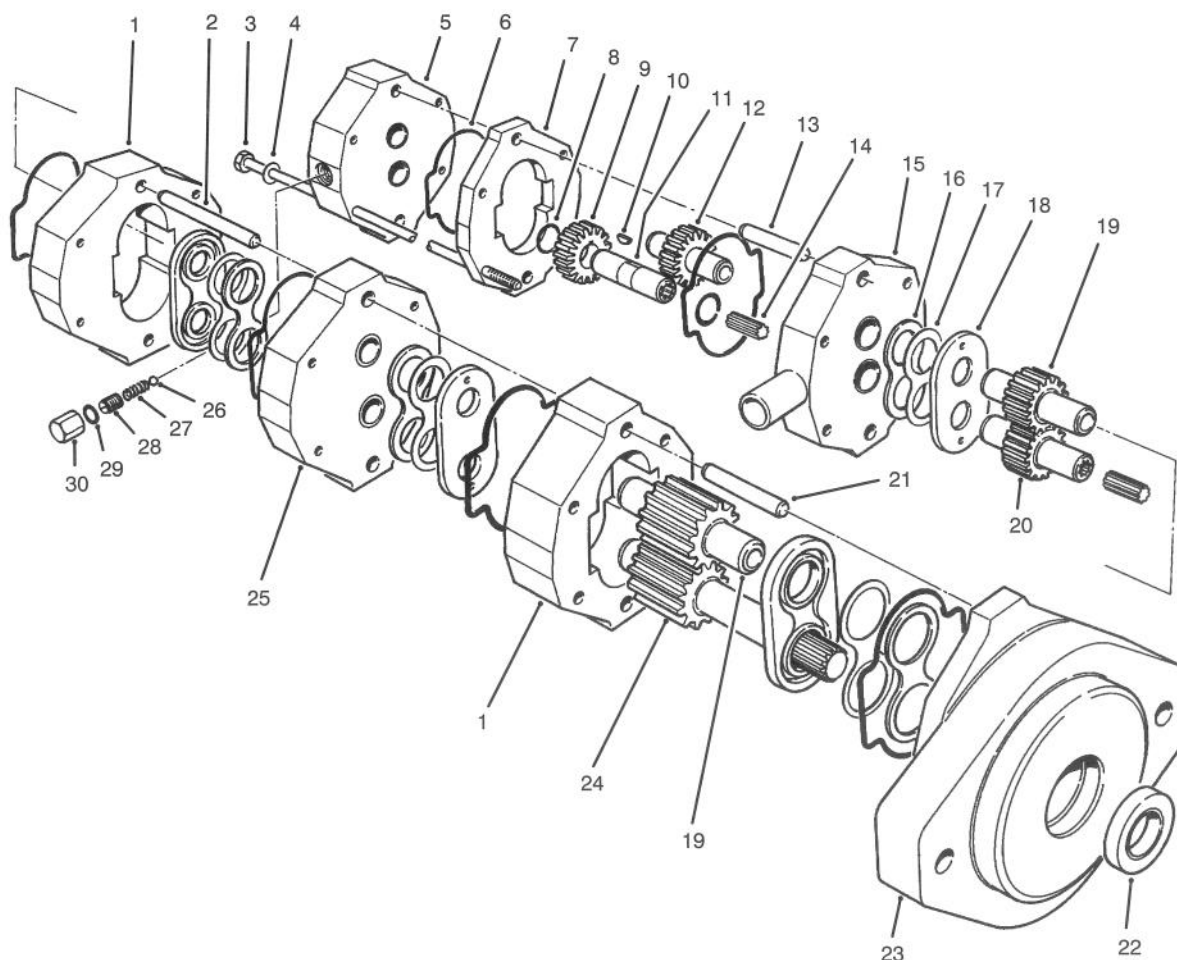 

T-1029

HYDRAULIC PUMP NO. 75-0800

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	354-54	Plate - Gear	2	17	354-67	Seal - Pre-Load Hi Pressure	4
2	354-56	Pin - Dowel	2	18	354-68	Plate - Load	4
3	354-64	Screw - Cap Hex. Hd.	4	19	354-66	Shaft - Idler	2
4	354-16	Washer	4	20	354-57	Gear - Drive	1
5	354-63	Cover Assembly	1	21	354-14	Pin - Dowel	2
6	353-922	Seal - Ring	6	22	354-15	Seal - Oil	1
7	354-60	Plate - Gear	1	23	354-53	Pump Body Assembly	1
8	353-886	Ring - Retaining	2	24	354-52	Shaft - Drive	1
9	354-62	Gear	1	25	354-55	Plate Assembly (Incl. Ref. #26-30)	1
10	354-61	Key - Woodruff	1	26	354-38	Ball - Valve	1
11	354-59	Shaft - Drive	1	27	354-39	Spring - Compression	1
12	354-65	Idler Shaft Assembly	1	28	354-37	Adjuster - Valve	1
13	354-13	Pin - Dowel	2	29	354-35	Gasket	1
14	354-5	Coupling	2	30	354-36	Cap - Adjuster Valve	1
15	354-58	Plate Assembly	1				
16	354-69	Seal - Load Hi Pressure	4				

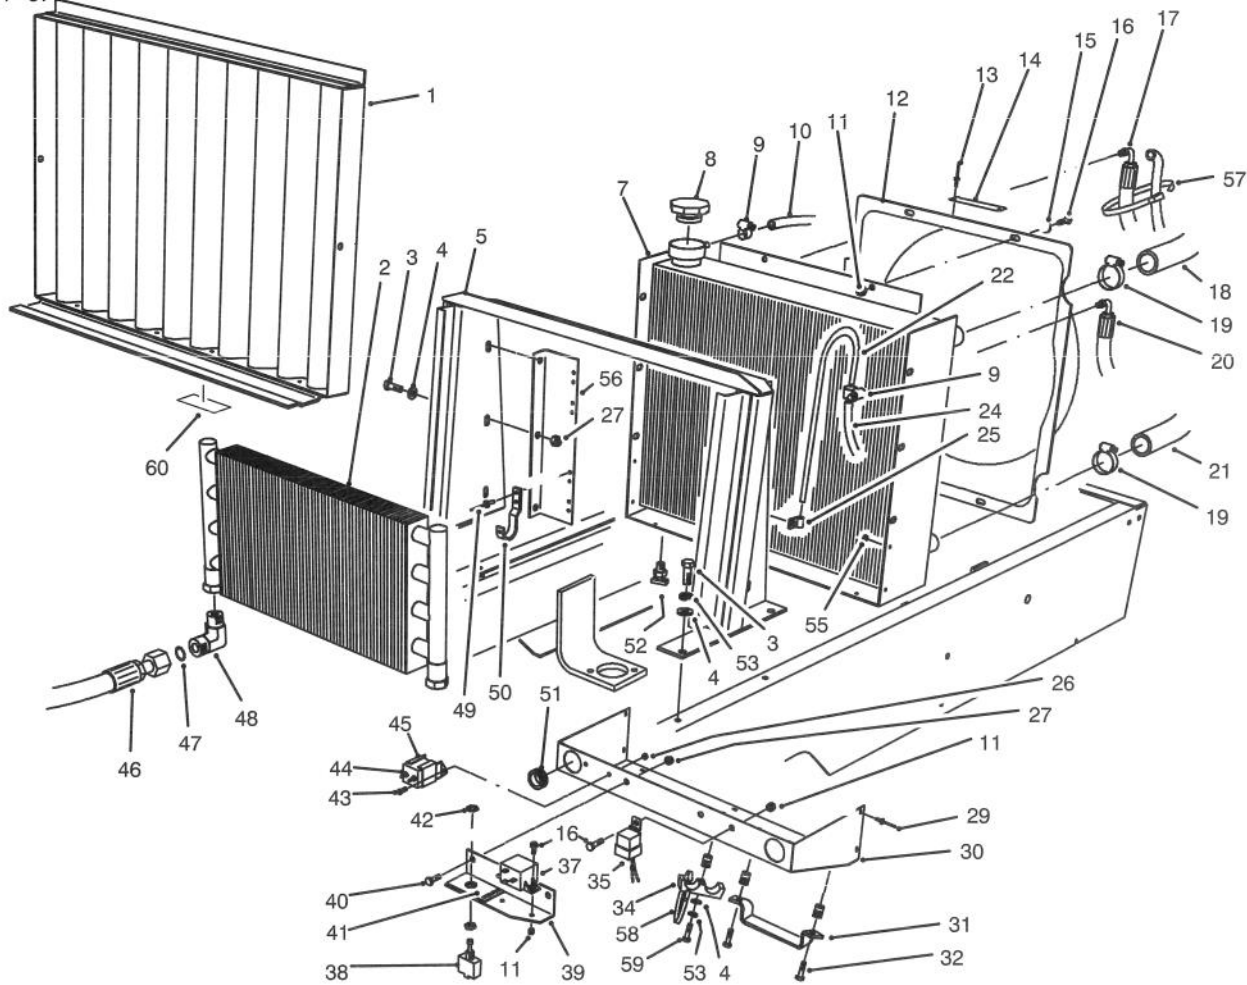 

T-1053


RADIATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75-4060	Screen - Radiator	1
2	75-1040	Cooler - Oil	1
3	322-5	Screw - Cap Hex. Hd.	10
4	3256-23	Washer - Flat	11
5	75-4260	Support - Radiator	1
7	75-6290	Radiator	1
8	66-3240	Cap - Radiator	1
9	2412-108	Clamp - Hose	2
10	75-2850	Hose - Expansion Tank	1
11	3296-42	Nut - Lock	7
12	75-4350	Shroud - Fan	1
13	3290-271	Rivet - Pop	2
14	76-8750	Plate - Caution	1
15	3256-22	Washer - Flat	4
16	321-4	Screw - Cap Hex. Hd.	7
17	75-6170	Hose - Hydraulic	1
18	75-2240	Hose - Radiator Upper	1
19	2412-3	Clamp - Hose	4
20	75-6150	Hose - Hydraulic	1
21	75-2260	Hose - Radiator Lower	1
22	66-3180	Tube - Vent	1
24	75-4701	Hose - Fuel Vent	1
25	2412-103	Clamp - R	2

Ref. No.	Part No.	Description	No. Used
26	32149-7	Nut - Lock	2
27	3296-29	Nut - Lock	8
29	3269-13	Rivet - Pop	7
30	75-4310	Shield - Radiator	1
31	75-2860	Bracket - Hose	1
32	322-4	Screw - Cap Hex. Hd.	2
34	56-7974	Clamp - Tube	1
35	63-7590	Relay - Starter	1
37	66-8800	Relay - Glow Plug	1
38	75-1020	Switch - Backlap	
		(Incl. Ref. #42)	1
39	75-3390	Bracket - Backlap	1
40	322-2	Screw - Cap Hex. Hd.	2
‡41	75-0750	Decal - Backlap Switch	
		(English)	1
42	218-498	Nut - Lock	2
43	32105-8	Screw - Cap Hex. Hd.	2
44	67-4700	Resistor - Glow	1
45	70-8560	Retainer - Glow Resistor	1
46	75-6140	Hose - Hydraulic R.H.	1
*	75-6160	Hose - Hydraulic L.H.	1
47	237-65	Seal - O-Ring	2

*Not Illustrated

 ‡For different language versions of this part, see International Decal Cross Reference.

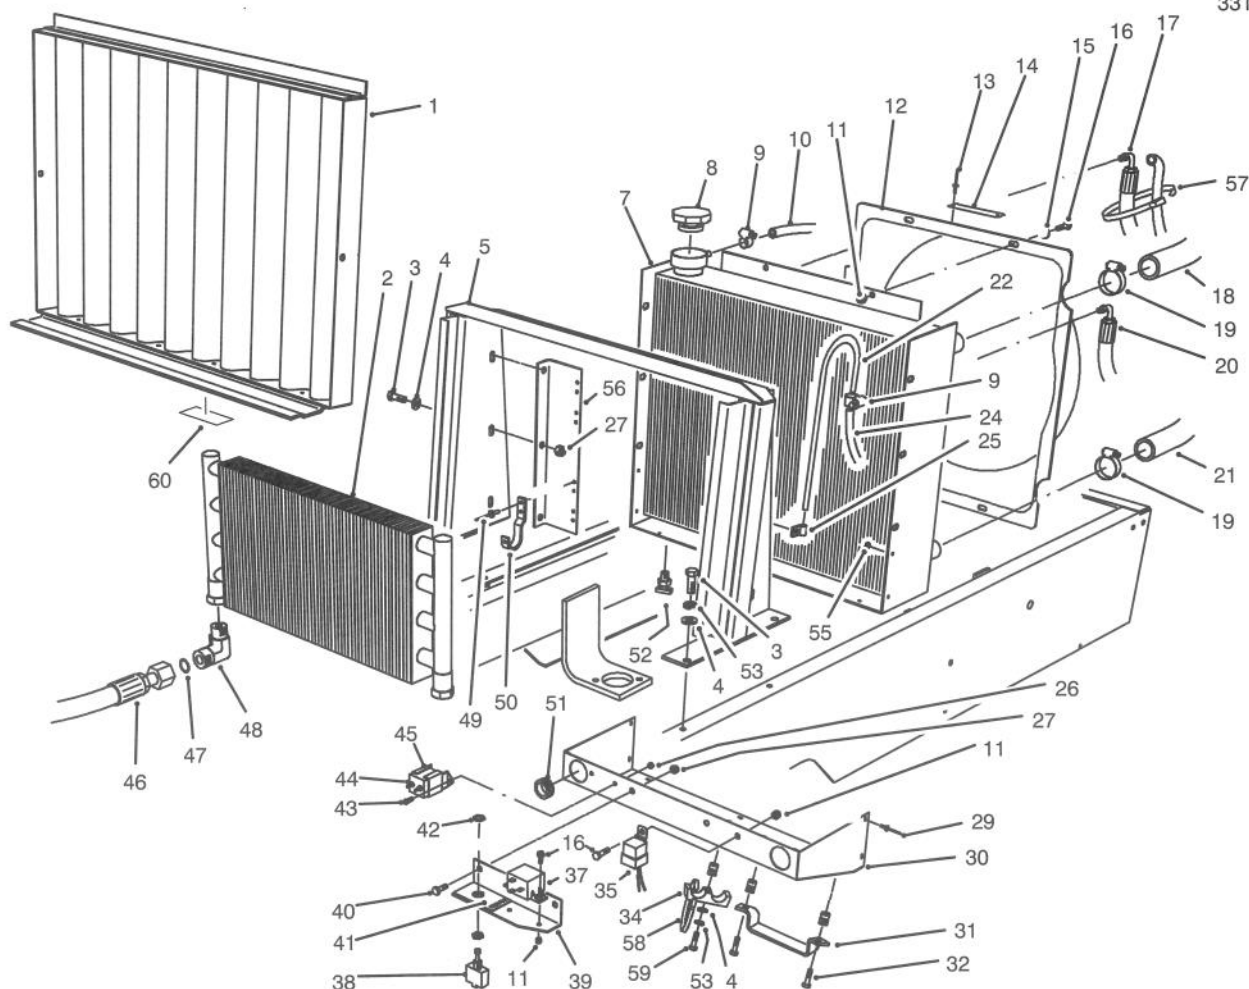


T-1053

RADIATOR ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
48	340-108	Fitting - Hydraulic 90° (Incl. Ref. #47)	2	56	75-5180	Support Plate Assy. R.H. (Incl. Ref. #49 & 50)	1
49	3269-15	Rivet - Pop	8	*	75-5170	Support Plate Assy. L.H. (Incl. Ref. #49 & 50)	1
50	75-0930	Hook - Oil Cooler	4	57	3290-378	Tie - Cable	1
51	240-3	Grommet	2	58	3333-975	Tie - Cable	1
52	304-46	Drain - Radiator	1	59	322-6	Screw - Cap Hex. Hd.	1
53	3253-4	Washer - Lock	5	‡60	83-7450	Decal - Down (English)	1
55	3269-10	Washer - Back-up	7				

*Not Illustrated

 ‡For different language versions of this part, see International Decal Cross Reference.

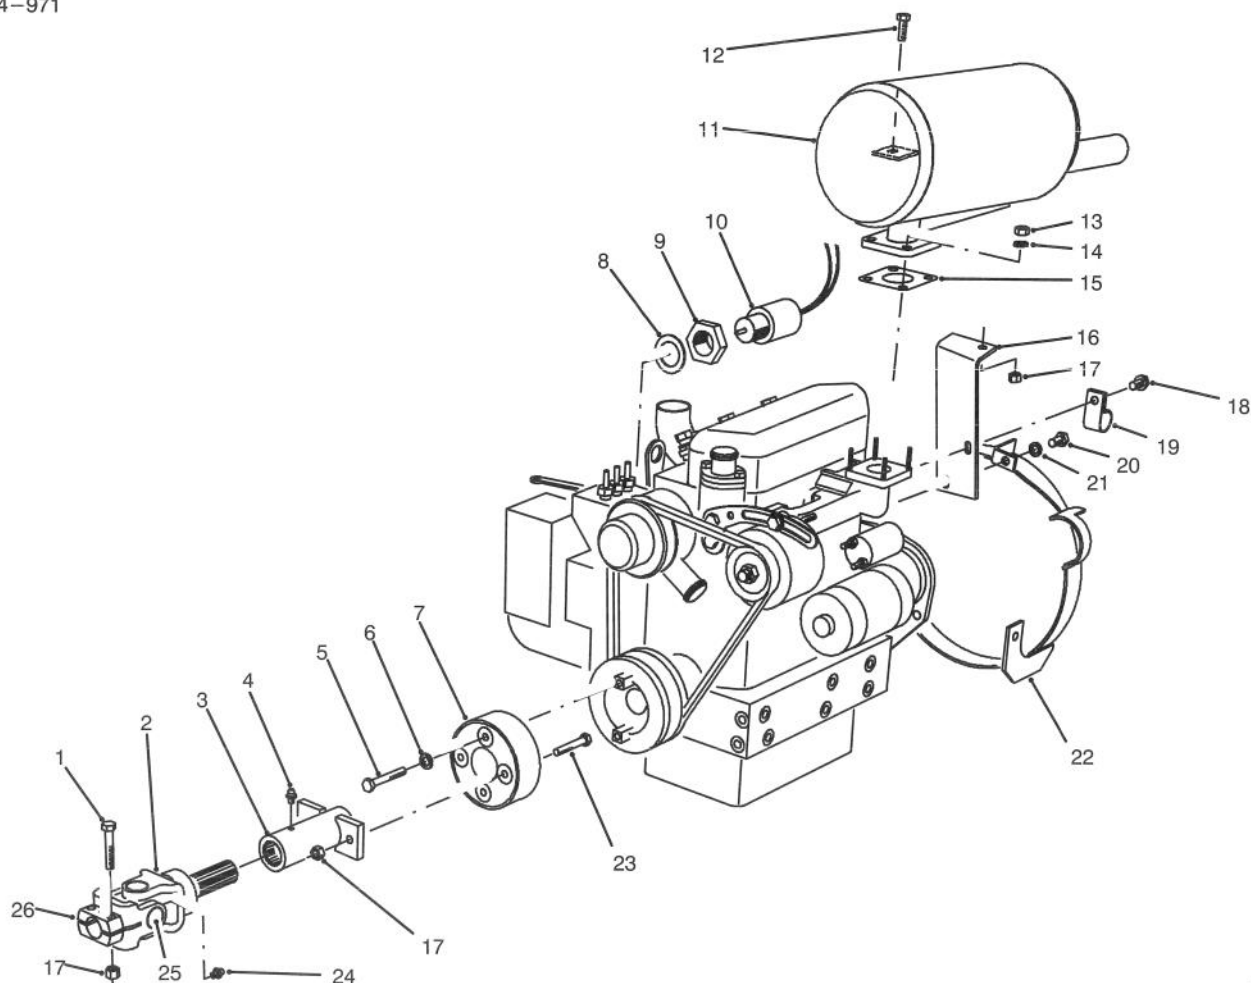


T-1054

MUFFLER & PUMP DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-9	Screw - Cap Hex. Hd.	2
2	75-6410	Yoke - Shaft	1
3	75-6420	Yoke - Slip Tube	1
4	302-58	Fitting - Grease	1
5	43-3220	Screw - Cap Hex. Hd.	2
6	48-9570	Washer - Lock	2
7	75-4630	Coupling - Driveshaft	1
8	43-2740	Gasket	1
9	43-2750	Nut - Lock	1
10	63-7440	Solenoid - Stop	1
11	75-1070	Muffler	1
*	75-6880	Screen - Spark Arrester (Optional)	1
12	322-4	Screw - Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
13	48-7930	Nut - Lock	4
14	42-9850	Washer - Lock	4
15	42-9110	Gasket - Muffler	1
16	75-4490	Bracket - Muffler	1
17	3296-29	Nut - Lock	5
18	67-2340	Screw - Hex. Washer Hd.	1
19	2412-81	Clamp - R	1
20	43-0090	Screw - Cap Hex. Hd.	3
21	48-9590	Washer - Lock	1
22	75-0940	Guard - Flywheel	1
23	322-12	Screw - Cap Hex. Hd.	2
24	62-3820	Fitting - Grease	1
25	54-9180	Kit - U-Joint	1
26	54-9040	Yoke - End	1

 
*Not Illustrated

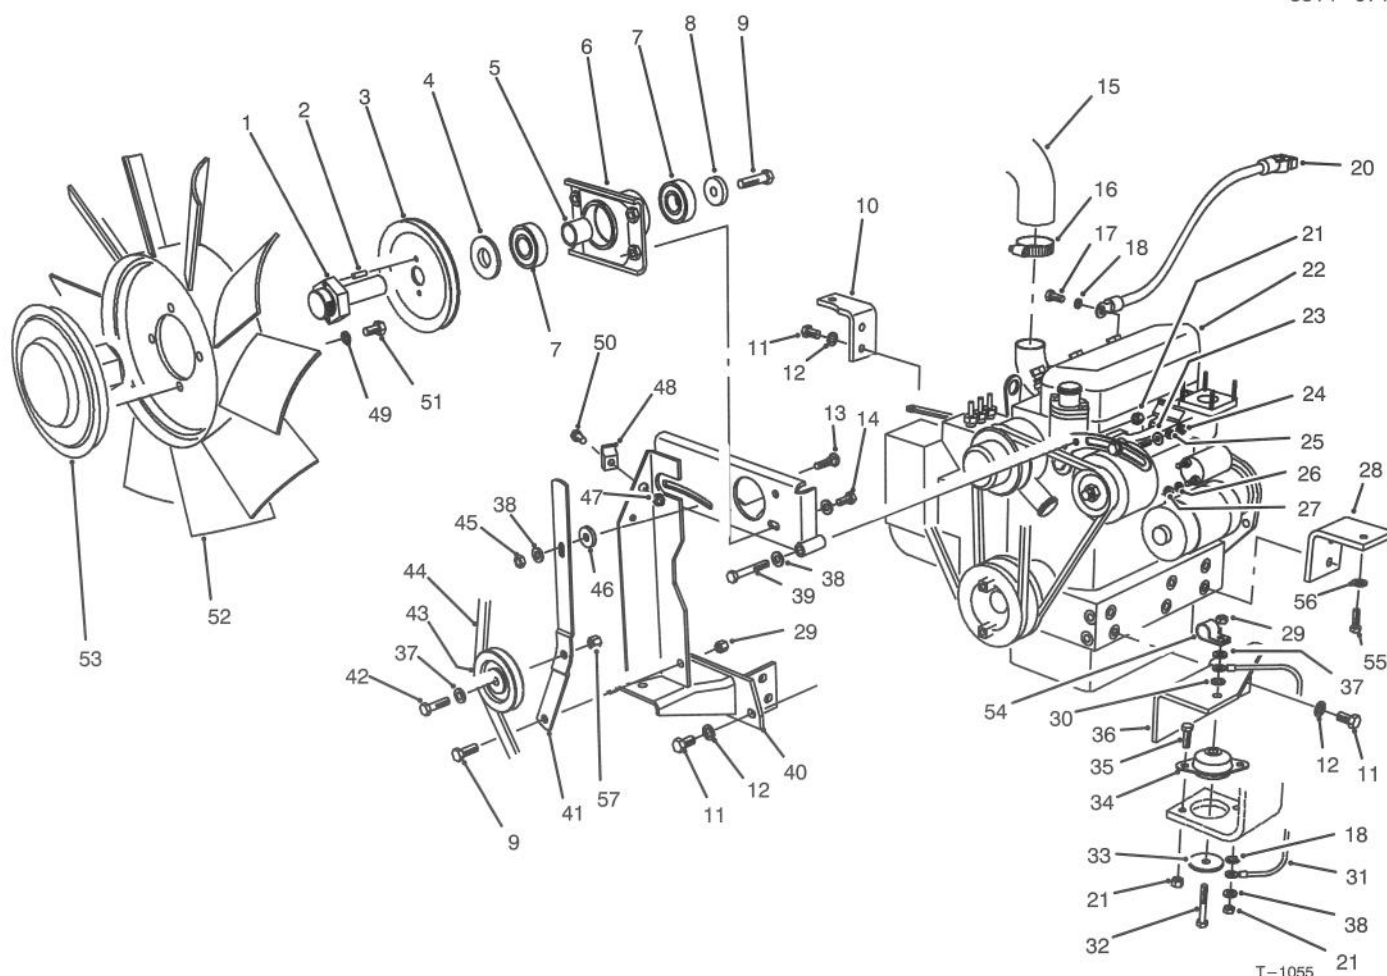

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75-6380	Shaft - Fan	1
2	32121-2	Pin - Roll	2
3	75-6390	Pulley - Fan	1
4	47-0110	Spacer - Spindle	1
5	75-5310	Spacer - Bearing	1
6	75-4450	Hub - Fan Drive	1
7	251-318	Bearing - Ball	2
8	67-1630	Spacer - Fan	1
9	323-6	Screw - Cap Hex. Hd.	2
10	71-2910	Bracket - Engine R.H. Rear	1
11	63-7790	Screw - Cap Hex. Hd.	8
12	48-9590	Washer - Lock	10
13	3230-2	Bolt - Carriage	1
14	322-3	Screw - Cap Hex. Hd.	4
15	75-2460	Hose - Air Cleaner	1
16	2412-92	Clamp - Hose	1
17	48-7700	Screw - Cap Hex. Hd.	1
18	3255-8	Washer - Lock	2
20	75-1360	Cable - Battery (Ground)	1
21	3296-29	Nut - Lock	9
22	75-0900	Engine Assembly	1
23	5-3637	Washer - Flat	1
24	43-5970	Nut - Hex.	1


Ref. No.	Part No.	Description	No. Used
25	43-5920	Washer - Lock	1
26	42-9850	Washer - Lock	2
27	57-6390	Nut - Lock	2
28	75-2830	Bracket - Engine L.H. Rear	1
29	3296-39	Nut - Lock	4
30	3255-9	Washer - Lock E.T.L.W.	1
31	70-8220	Cable - Ground	1
32	323-11	Screw - Cap Hex. Hd.	3
33	63-7400	Washer - Flat	4
34	63-7140	Mount - Engine	4
35	322-5	Screw - Cap Hex. Hd.	8
36	66-2320	Bracket - Engine L.H. Front	1
37	3256-24	Washer - Flat	4
38	3256-23	Washer - Flat	5
39	322-11	Screw - Cap Hex. Hd.	1
40	75-4220	Bracket - Fan	1
41	63-6720	Bracket - Fan Idler	1
42	323-7	Screw - Cap Hex. Hd.	1
43	63-8140	Pulley - Idler	1
44	75-1380	Belt - V	1
45	32149-1	Nut - Lock	1
46	27-9560	Spacer	1
47	3296-42	Nut - Lock	1

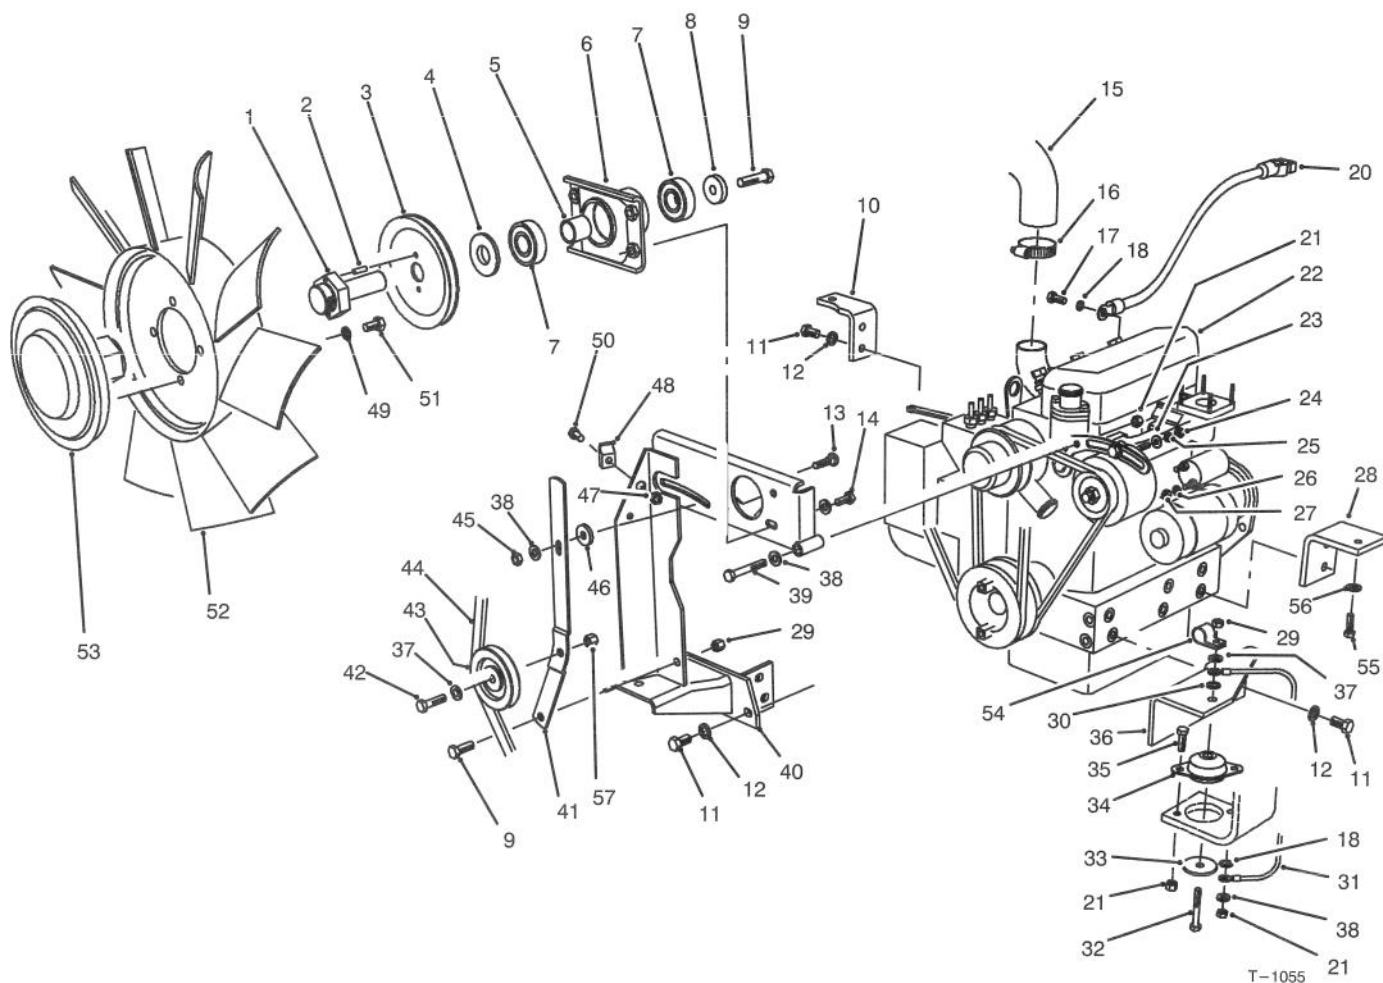 

ENGINE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
48	3-6657	Clamp - Cable	1
49	3253-4	Washer - Lock	4
50	321-4	Screw - Cap Hex. Hd.	1
51	322-2	Screw - Cap Hex. Hd.	4
52	75-3780	Fan	1

Ref. No.	Part No.	Description	No. Used
53	74-5520	Clutch - Fan	1
54	2412-126	Clamp - R	1
55	323-9	Screw - Cap Hex. Hd.	1
56	3253-21	Washer - Lock	1
57	3296-59	Nut - Lock	1

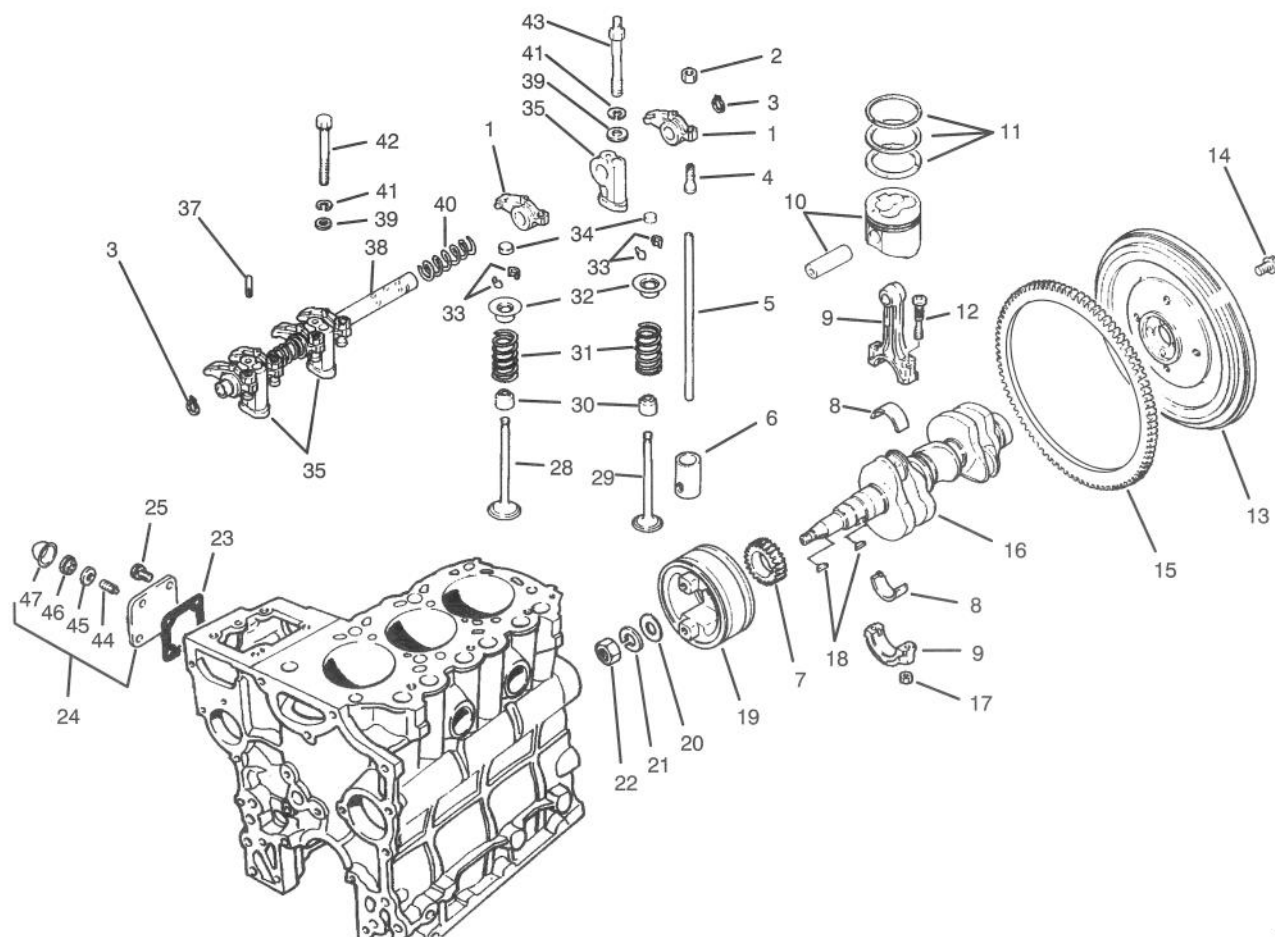 


T-0565

VALVES AND CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	67-3160	Arm-Rocker	6	14	67-2990	Bolt	4
2	67-3230	Nut - Jam	6	15	67-2980	Gear - Ring	1
3	67-3240	Snap Ring	2	16	67-2920	Crankshaft	1
4	67-3210	Screw - Adjusting	6	17	42-9590	Nut	6
5	67-3150	Rod-Push	6	18	56-0480	Key - Woodruff	2
6	67-3120	Tappet	6	19	67-2930	Pulley - Crankshaft	1
7	67-2910	Gear	1	20	67-2950	Washer	1
8	75-5010	Bearing Set STD	3	21	67-2960	Washer - Lock	1
*	67-2890	Bearing Set 0.25 mm US	3	22	67-2940	Nut - Jam	1
*	67-2900	Bearing Set 0.50 mm US	3	23	67-4310	Gasket	1
9	67-2850	Rod Assembly-Connecting (Incl. Ref. #12 & 17)	3	24	75-5110	Cover Assy. (Incl. Ref. #44-47)	1
10	75-5080	Piston & Pin Set STD	3	25	42-9440	Bolt W/Washer	4
*	75-5090	Piston & Pin Set 0.25 mm OS	3	28	67-3130	Valve - Intake	3
*	75-5100	Piston & Pin Set 0.50 mm OS	3	29	67-3140	Valve - Exhaust	3
11	75-5050	Ring Set STD	3	30	42-7870	Seal	6
*	75-5060	Ring Set 0.25 mm OS	3	31	67-3110	Spring	6
*	75-5070	Ring Set 0.50 mm OS	3	32	67-3100	Retainer	6
12	67-2860	Bolt	6	33	42-7860	Lock	12
13	67-2970	Flywheel Assembly (Incl. Ref. #14)	1	34	67-3180	Cap	6
				35	67-3200	Stay - Rocker	3
				37	67-3220	Pin	1
				38	67-3190	Rocker Shaft Assembly	1

 *Not Illustrated

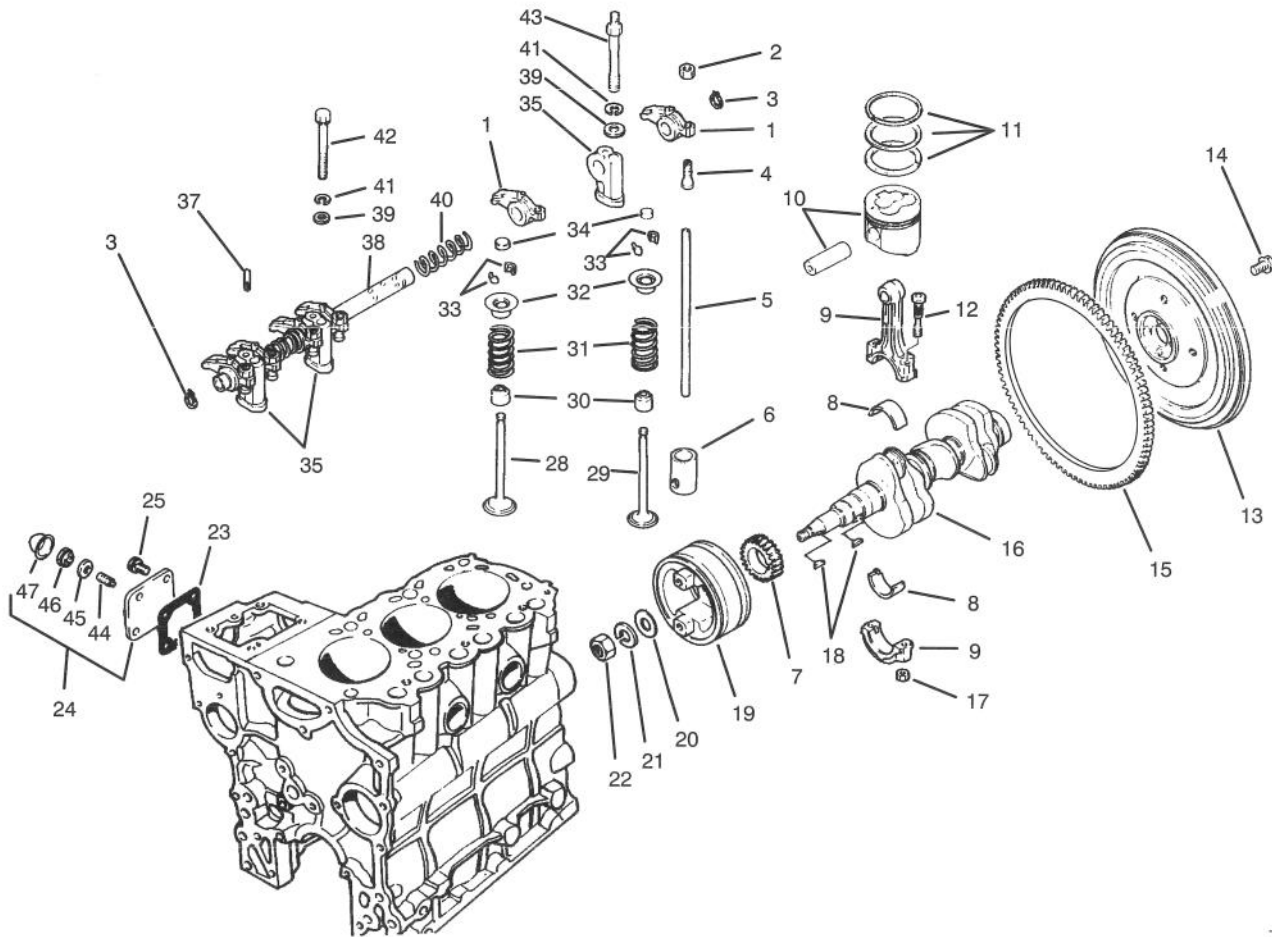


T-0565

VALVES AND CRANKSHAFT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
39	42-9660	Washer	3
40	67-3170	Spring	2
41	67-3260	Washer	3
42	42-9510	Bolt	1
43	67-3250	Bolt-Rocker Stay	2

Ref. No.	Part No.	Description	No. Used
44	43-3160	Screw - Adjusting	1
45	75-5120	Gasket	1
46	43-5960	Nut - Special	1
47	43-2820	Cap - Sealing	1

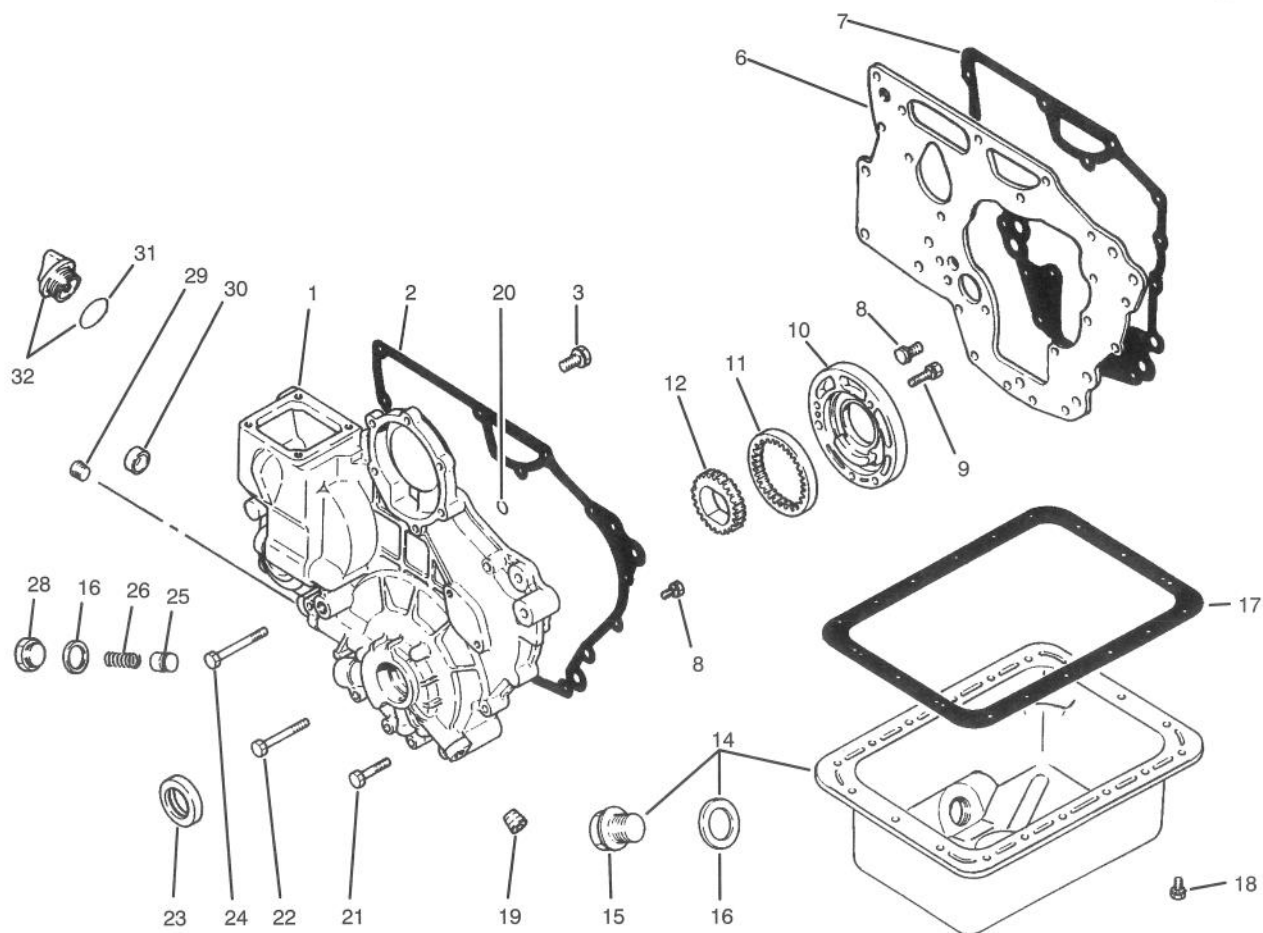 


T-0567

CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	75-4920	Case	1	19	42-7210	Plug-Taper	1
2	67-2580	Gasket - Case	1	20	67-2630	Seal - O-Ring	2
3	67-2340	Bolt W/Washer	3	21	67-2600	Bolt	3
6	67-2310	Plate - Front	1	22	67-2610	Bolt	4
7	67-2320	Gasket - Plate	1	23	67-2590	Seal - Oil	1
8	42-9440	Bolt W/Washer	11	24	67-2620	Bolt	1
9	67-2560	Bolt W/Washer	3	25	67-2500	Plunger - Relief	1
10	67-2550	Housing - Oil Pump	1	26	67-2510	Spring - Relief	1
11	67-2540	Gear - Outer	1	28	67-2520	Plug	1
12	67-2530	Gear - Inner	1	29	67-2570	Plug - Taper	1
14	75-4910	Oil Pan Assembly (Incl. Ref. #15-16)	1	30	67-2640	Cap	1
15	42-9260	Plug - Drain	1	31	67-2660	Seal - O-Ring	1
16	42-7290	Gasket - Drain	2	32	67-2650	Oil Fill Cap Assembly (Incl. Ref. #31)	1
17	67-2480	Gasket - Oil Pan	1	*	75-5040	Gasket Kit (Incl. Ref. #2, 7, 16 & 17)	1
18	42-9490	Bolt W/Washer	18				

 *Not Illustrated

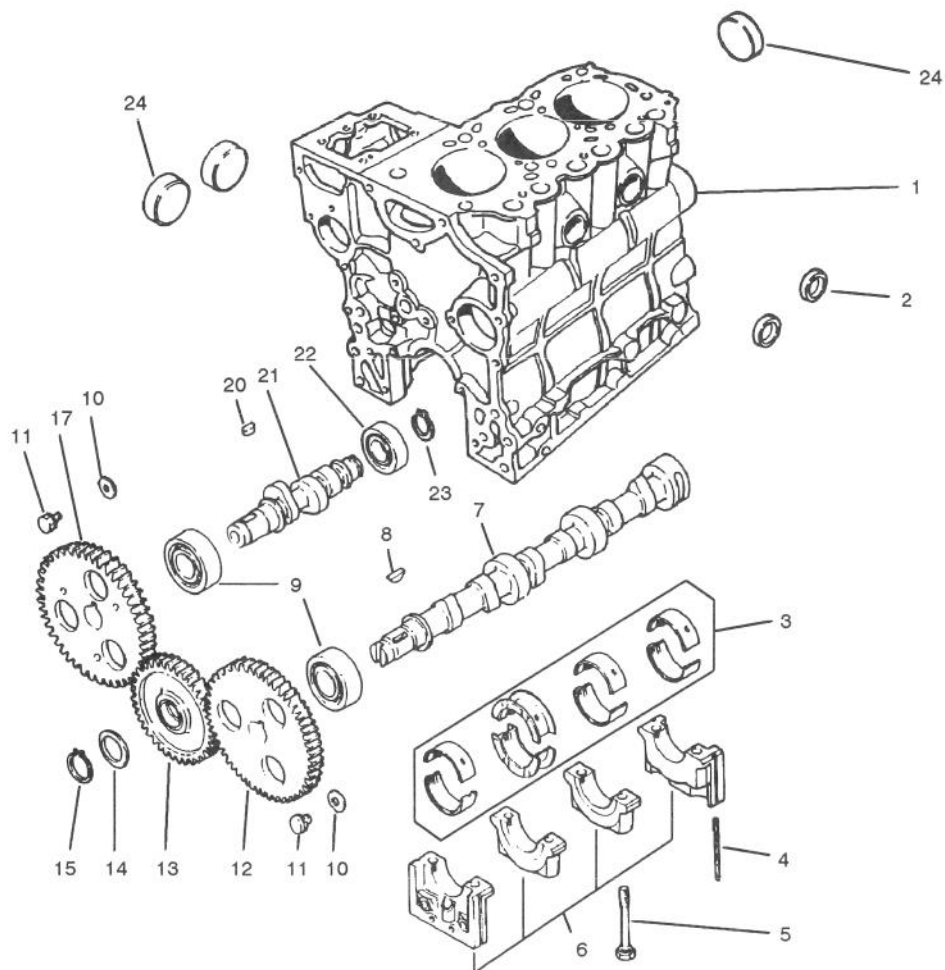


T-0564

CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75-4960	Block Assembly (Incl. Ref. #2, 5, 6 & 24)	1
2	42-7080	Cap	2
3	75-4900	Bearing Set STD	1
*	67-2410	Bearing Set 0.25 mm US	1
*	67-2420	Bearing Set 0.50 mm US	1
4	67-2200	Seal	4
5	67-2250	Bolt	8
6		Cap Assembly	1
7	67-3010	Cam Shaft	1
8	56-0480	Key - Woodruff	1
9	67-3030	Bearing	2

Ref. No.	Part No.	Description	No. Used
10	67-3000	Washer	2
11	42-9490	Bolt W/Washer	2
12	67-3020	Gear	1
13	67-3090	Gear Assembly	1
14	67-3040	Plate	1
15	56-1060	Snap Ring	1
17	67-3070	Gear	1
20	42-7840	Key	1
21	67-3060	Shaft	1
22	67-3050	Bearing	1
23	67-3080	Snap Ring	1
24	56-0020	Plug	3

 *Not Illustrated

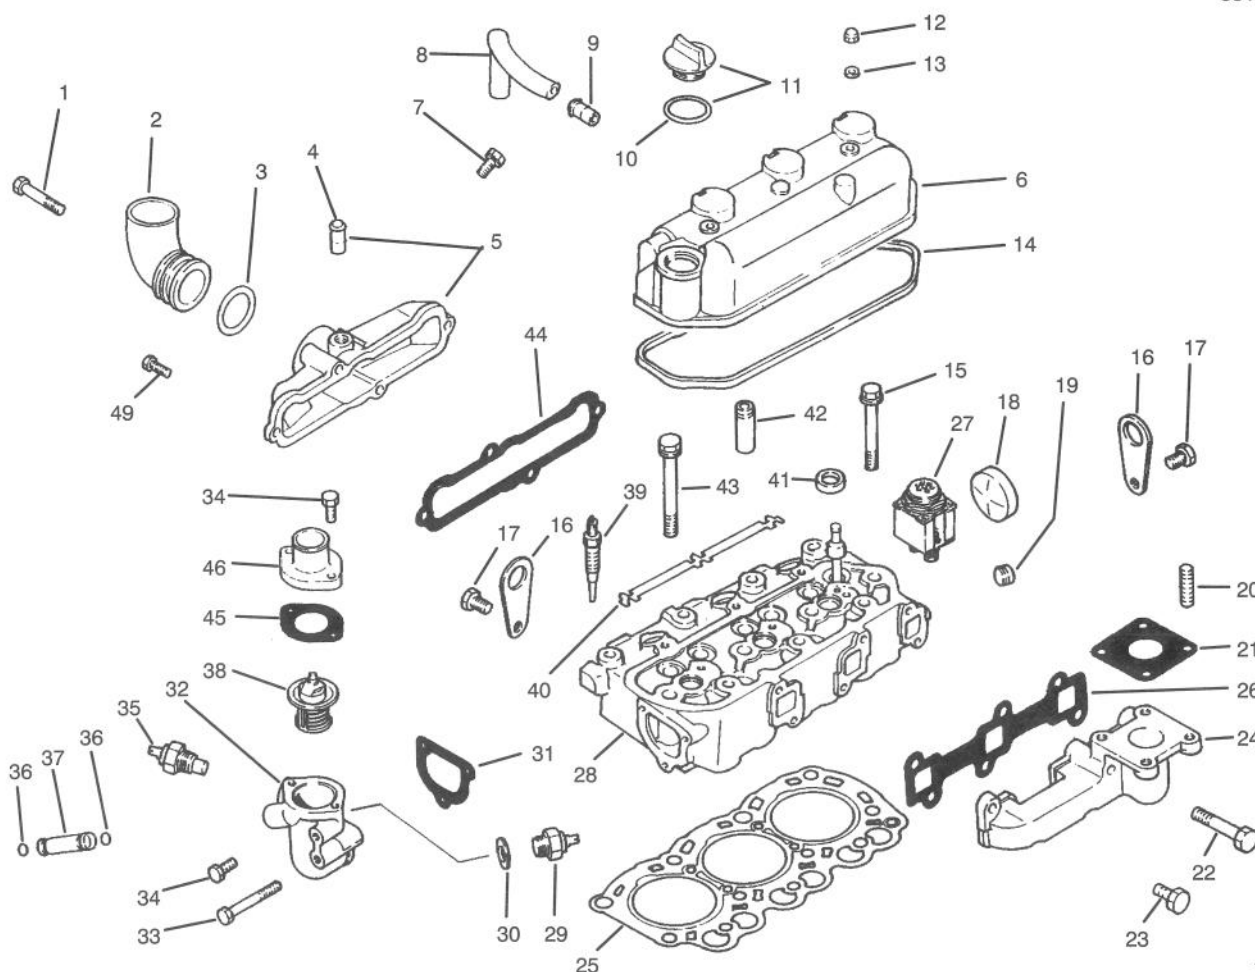


T-0566

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67-4400	Bolt	2
2	67-4520	Pipe	1
3	67-4540	Seal - O-Ring	1
4	42-7510	Pipe	1
5	67-4530	Cover - Intake	1
6	67-2750	Cover Assembly (Incl. Ref. #9)	1
7	42-9430	Bolt W/Washer	1
8	67-2670	Hose - Breather	1
9	42-7510	Pipe	1
10	67-2660	Seal - O-Ring	1
11	67-2650	Cap - Oil Filler	1
12	67-2770	Nut - Cap	2
13	67-2780	Washer	2
14	67-2760	Gasket	1
15	67-2740	Bolt - Flange	3
16	67-2680	Hanger - Engine	2
17	67-2340	Bolt W/Washer	4
18	56-0020	Plug - Expansion	1
19	67-2570	Plug - Taper	1
20	42-9570	Stud	4
21	42-9110	Gasket	1
22	67-4580	Bolt	2

Ref. No.	Part No.	Description	No. Used
23	67-4590	Bolt	4
24	67-4560	Manifold - Exhaust	1
25	75-4950	Gasket - Cylinder Head	1
26	67-4570	Gasket - Exhaust Manifold	1
27	67-4700	Lamp - Glow	1
28	75-4930	Cylinder Head Assembly (Incl. Ref. #18, 41 & 42)	1
29	67-4500	Switch - Thermo	1
30	67-4490	Gasket	1
31	67-4460	Gasket - Switch	1
32	67-4450	Fitting - Thermostat	1
33	67-4470	Bolt	1
34	67-2330	Bolt	4
35	67-4510	Gauge Nut - Temperature	1
36	43-2710	Seal - O-Ring	2
37	67-4480	Pipe - By-Pass	1
38	67-4440	Thermostat	1
39	67-4680	Plug - Glow	3
40	67-4690	Plate - Glow Plug	1
41	67-2710	Cap - Sealing	3
42	67-2700	Guide - Valve	6
43	67-2730	Bolt	8
44	67-4550	Gasket - Intake Manifold	1

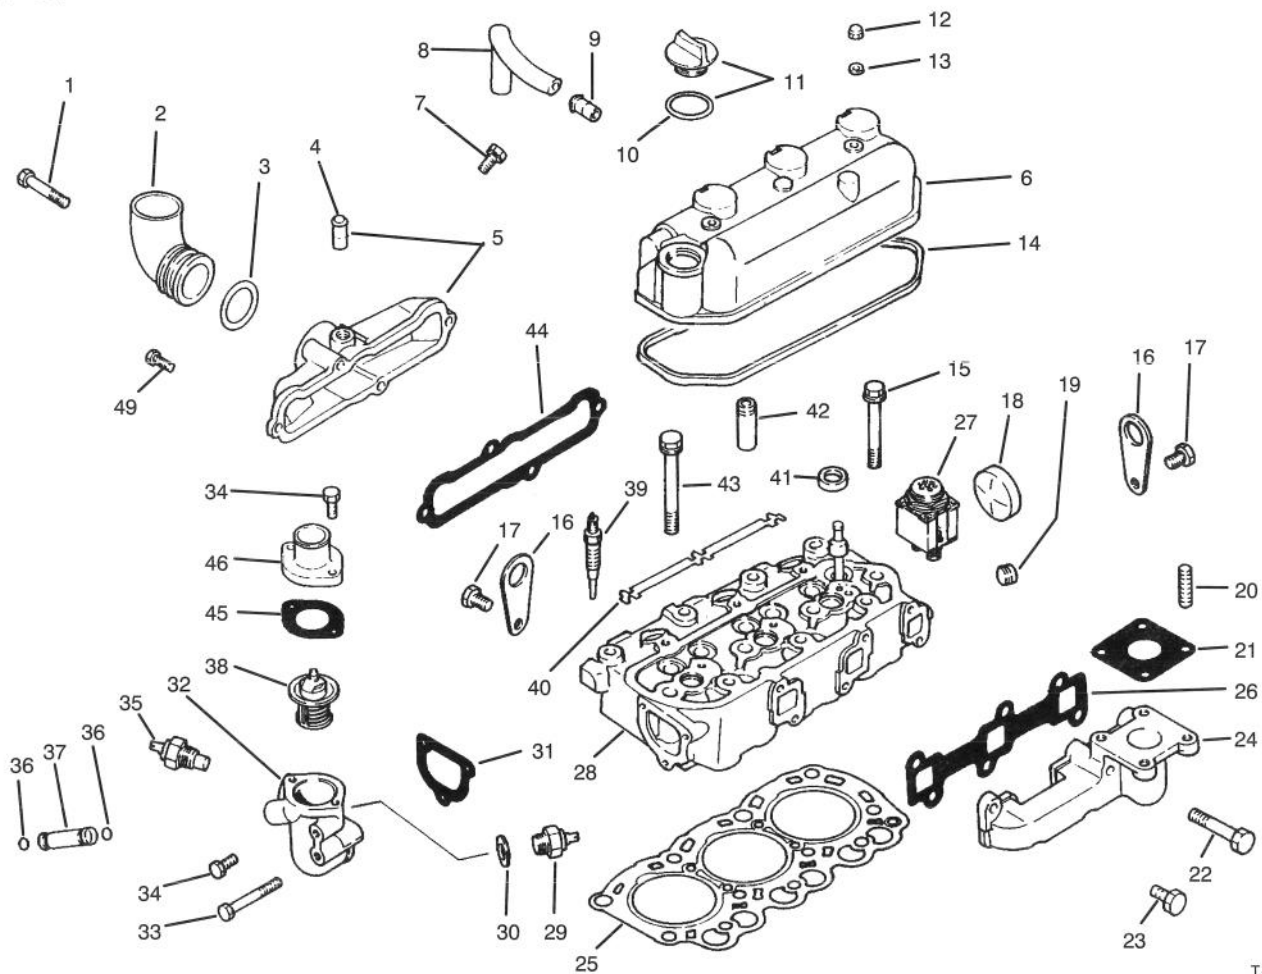 


T-0566

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	67-4430	Gasket - Fitting	1
46	67-4420	Fitting - Water	1

Ref. No.	Part No.	Description	No. Used
49	67-2330	Bolt	2

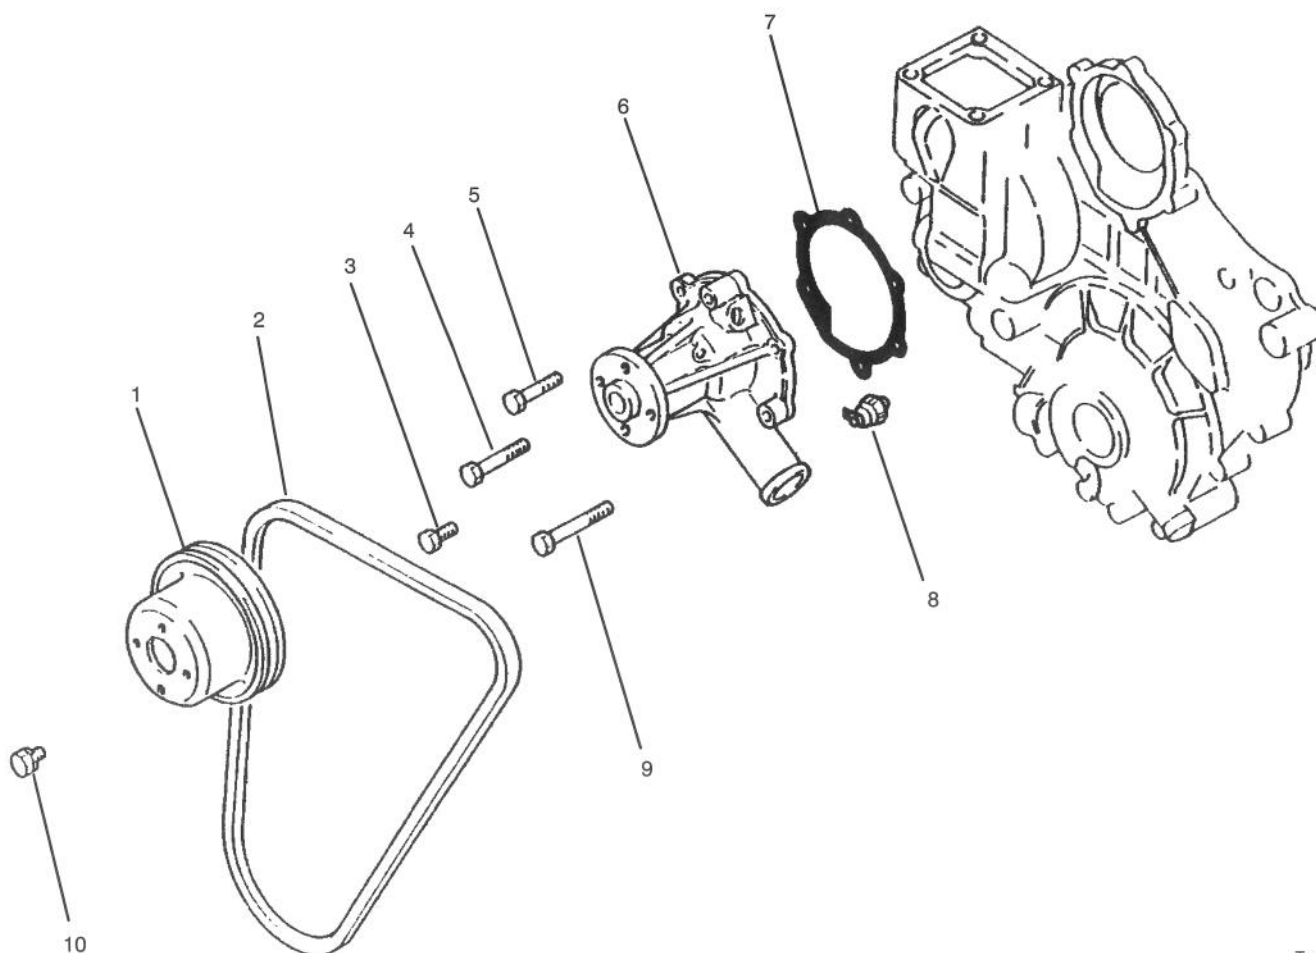 


T-0568

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67-4360	Pulley - Water Pump	1
2	67-4410	V-Belt	1
3	67-2330	Bolt	2
4	67-4400	Bolt	1
5	67-2600	Bolt	1

Ref. No.	Part No.	Description	No. Used
6	67-4380	Water Pump Assembly	1
7	67-4390	Gasket - Water Pump	1
8	67-4350	Switch - Oil Pressure	1
9	67-2610	Bolt	2
10	42-9490	Bolt W/Washer	4

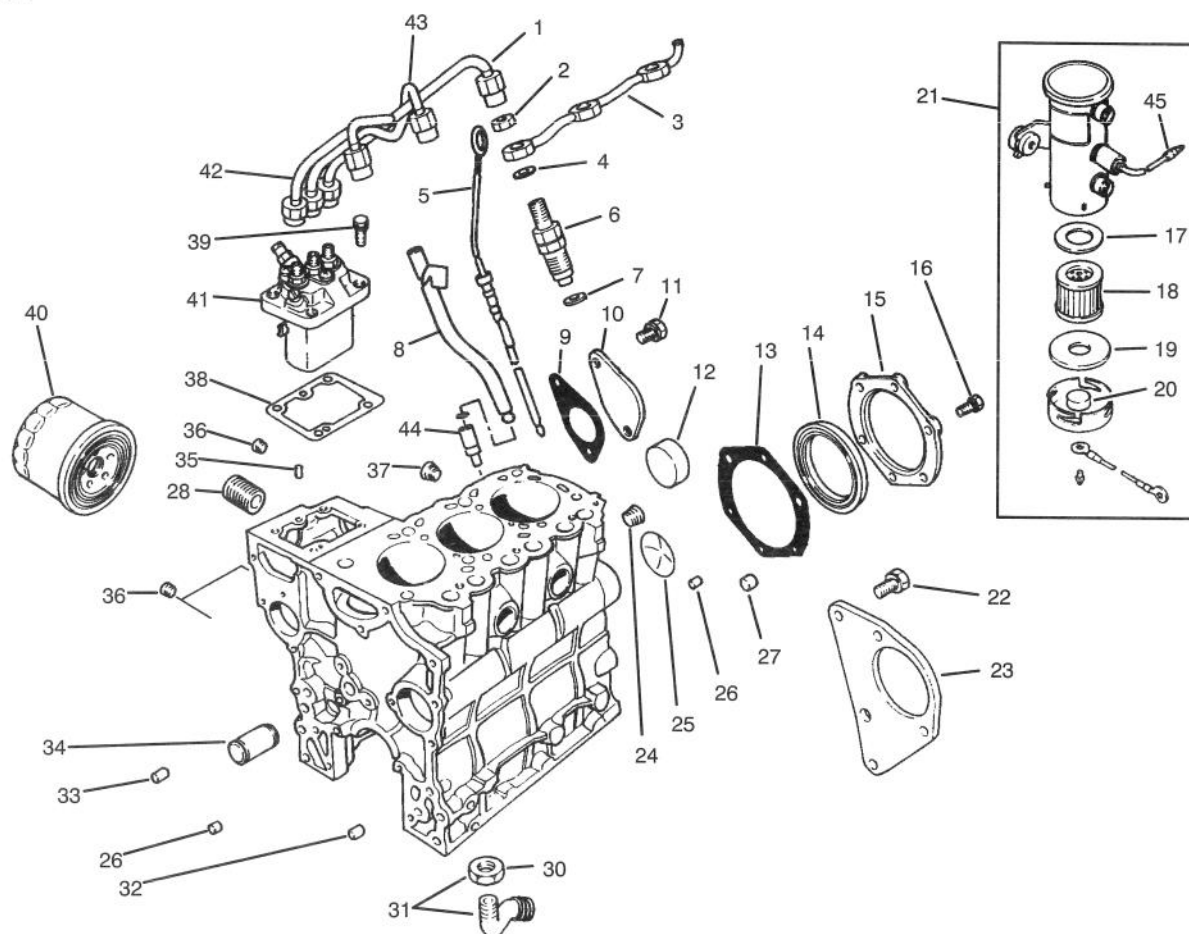 


T-0569

FUEL SUPPLY & ENGINE BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67-3420	Pipe Assy. No. 3	1
2	67-3430	Nut	3
3	70-8700	Pipe - Fuel Return	1
4	67-3440	Gasket	3
5	70-8880	Dipstick	1
6	67-3380	Nozzle & Holder Assembly	1
7	67-3390	Gasket - Nozzle Holder	3
8	70-8870	Guide - Oil Level	1
9	67-2300	Gasket	1
10	67-2290	Cover	1
11	67-2340	Bolt W/Washer	2
12	56-0020	Plug-Expansion	3
13	67-2280	Gasket-Seal, Oil	1
14	67-2230	Seal-Oil	1
15	67-2270	Case - Oil Seal	1
16	67-2330	Bolt	6
17	43-2570	Gasket-Coil Side	1
18	43-2550	Filter	1
19	43-2560	Gasket - Side Cover	1
20	43-2580	Magnet	1
21	53-8150	Pump Assembly (Incl. Ref. #17-20)	1

Ref. No.	Part No.	Description	No. Used
22	67-2440	Bolt W/Washer	3
23	67-2430	Bracket - Starter	1
24	67-2390	Plug - Taper	1
25	67-2350	Plug - Expansion	1
26	67-2360	Bushing - Knock	2
27	67-2380	Bushing - Knock	3
28	56-1230	Shaft - Oil Filter	1
30	42-9650	Nut - Jam	1
31	67-4340	Screen Assembly (Incl. Ref. #30)	1
32	67-2370	Bushing - Knock	1
33	42-7190	Bushing - Knock	2
34	67-2260	Shaft-Idler	1
35	56-0220	Pin - Dowel	2
36	67-2210	Plug - Taper	3
37	56-0100	Plug - Taper	1
38	67-3280	Shim 0.2 mm	1
*	67-3290	Shim 0.3 mm	1
*	67-3300	Shim 0.5 mm	1
*	67-3310	Shim 0.4 mm	1
*	67-3320	Shim 0.6 mm	1

 *Not Illustrated

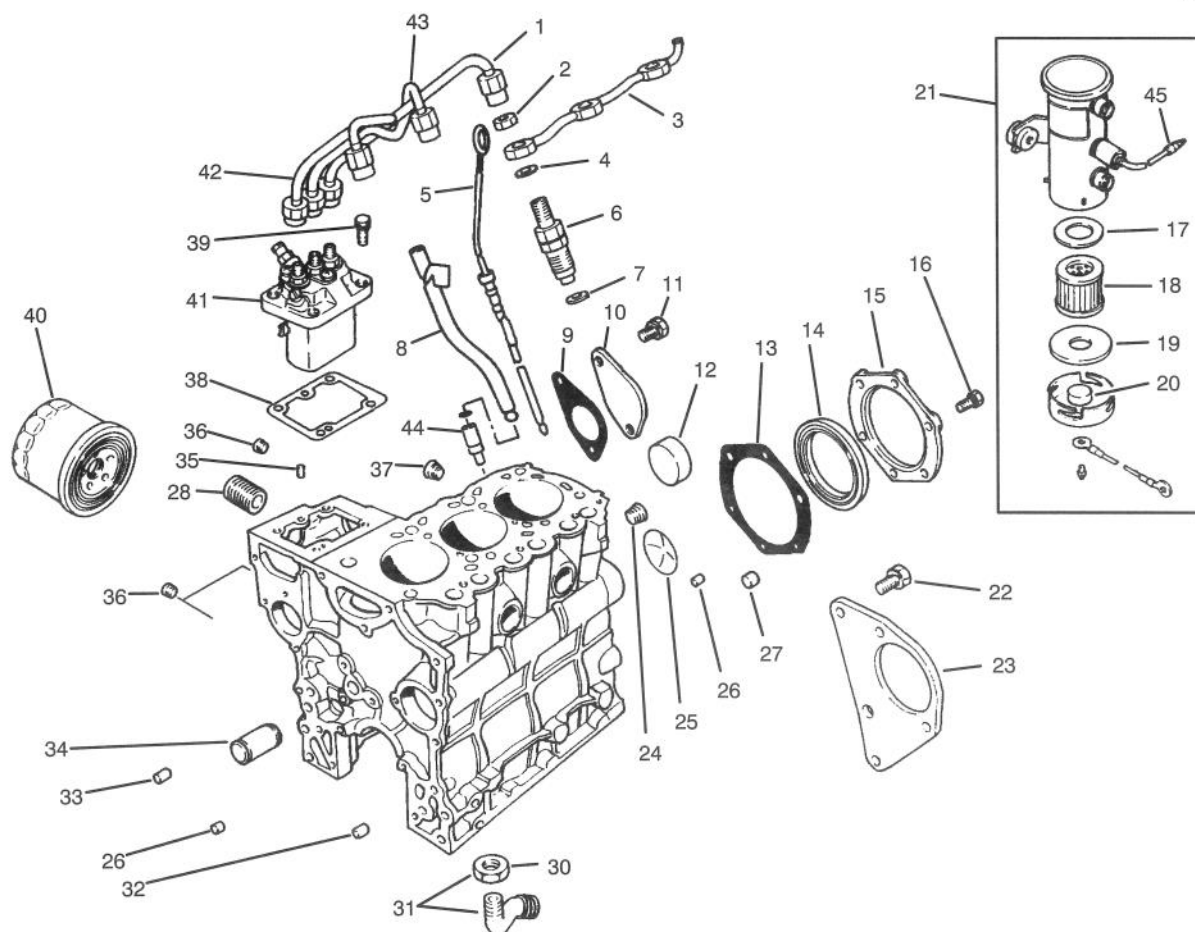


T-0569

FUEL SUPPLY & ENGINE BLOCK ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
38	67-3330	Shim 0.7 mm	1	40	67-4330	Oil Filter Assembly	1
*	67-3340	Shim 0.8 mm	1	41	75-5020	Injector Pump Assembly	1
*	67-3350	Shim 0.9 mm	1	42	67-3400	Pipe Assy. No. 1	1
*	67-3360	Shim 1.0 mm	1	43	67-3410	Pipe Assy. No. 2	1
39	67-3370	Bolt W/Washer	4	44	82-8110	Retainer - Oil Guide	1

 *Not Illustrated

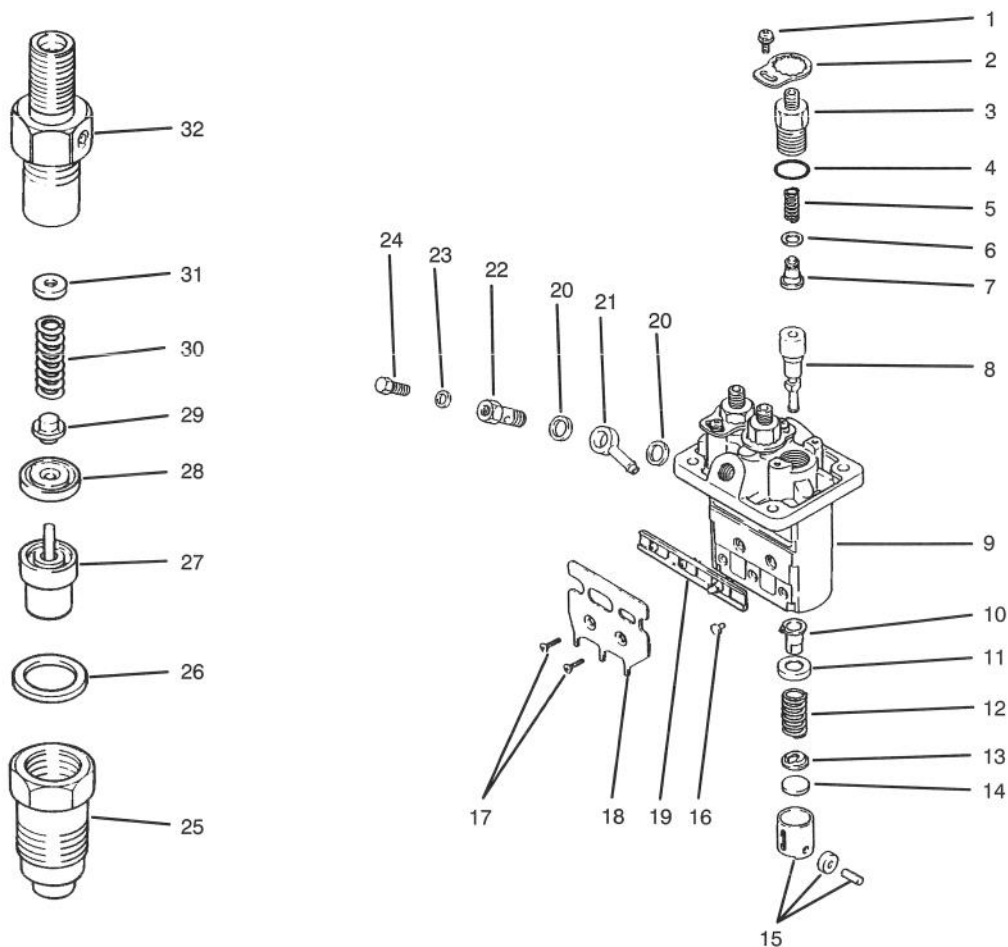


T-0570

FUEL INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67-3770	Screw W/Washer	3
2	67-3760	Plate - Lock	3
3	67-3740	Holder-Delivery Valve	3
4	67-3480	Seal - O-Ring	3
5	67-3490	Spring	3
6	42-8240	Gasket	3
7	67-3500	Valve	3
8	75-4970	Element	3
9	67-3460	Housing-Pump	1
10	67-3520	Sleeve	3
11	67-3530	Seat - Spring Upper	3
12	67-3540	Spring	3
13	67-3550	Seat - Spring Lower	3
14	67-3560	Plate - Shim 1.85 mm	1
*	67-3570	Plate - Shim 1.9 mm	1
*	67-3580	Plate - Shim 1.95 mm	1
*	67-3590	Plate - Shim 2.0 mm	1
*	67-3600	Plate - Shim 2.05 mm	1
*	67-3610	Plate - Shim 2.1 mm	1
*	67-3620	Plate - Shim 2.15 mm	1
*	67-3630	Plate - Shim 2.2 mm	1
*	67-3640	Plate - Shim 2.25 mm	1

Ref. No.	Part No.	Description	No. Used
14	67-3650	Plate - Shim 2.3 mm	1
*	67-3660	Plate - Shim 2.35 mm	1
*	67-3670	Plate - Shim 2.4 mm	1
*	67-3680	Plate - Shim 2.45 mm	1
*	67-3690	Plate - Shim 2.5 mm	1
15	67-3700	Tappet	3
16	67-3810	Pin - Tappet Guide	3
17	67-3790	Screw	2
18	67-3800	Bracket - Wire Stop	1
19	67-3780	Rack	1
20	67-3750	Washer	2
21	67-3740	Nipple - Swivel	1
22	67-3730	Screw	1
23	67-3720	Washer	1
24	67-3710	Screw - Air Bleed	1
25	67-3970	Nut - Retaining	3
26	67-3980	Gasket	3
27	67-3960	Nozzle	3
28	67-3950	Piece - Distance	3
29	67-3940	Pin - Pressure	3
30	67-3930	Spring	3
31	67-3830	Washer 1.25 mm	1

 *Not Illustrated

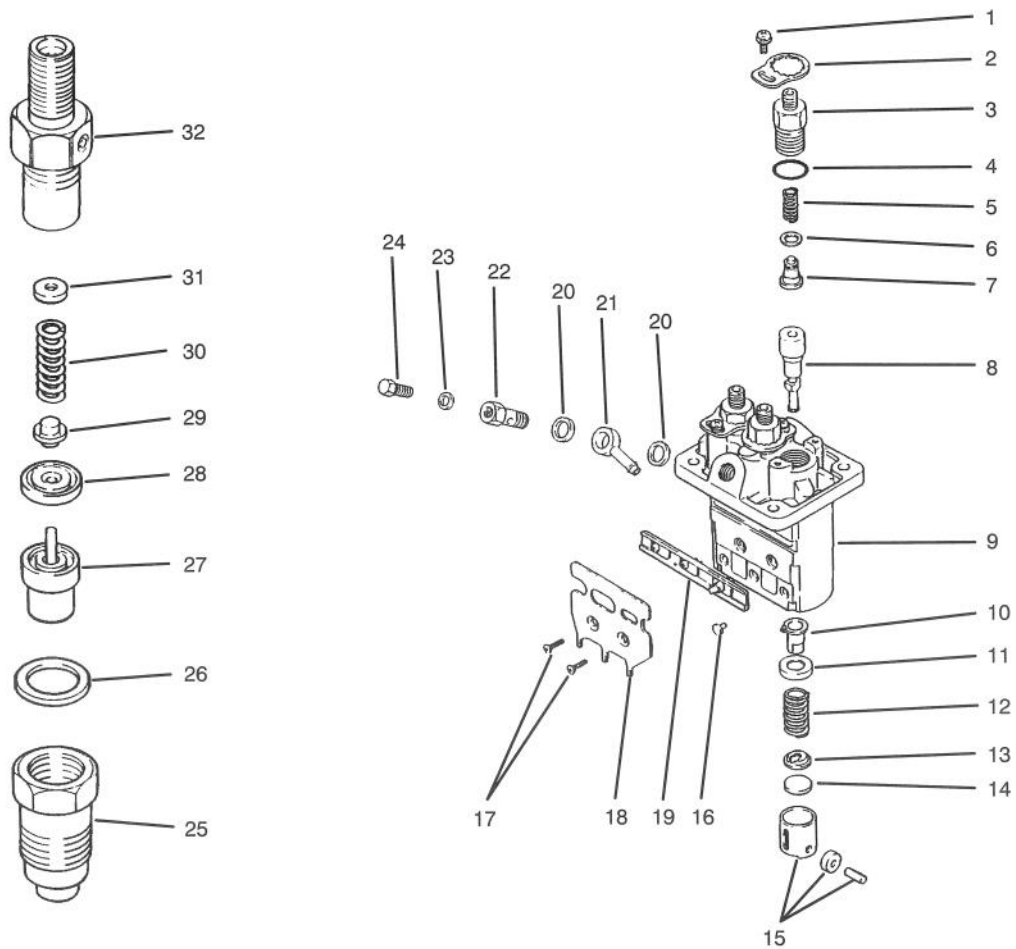


T-0570

FUEL INJECTION PUMP ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
31	67-3840	Washer 1.3 mm	1
*	67-3850	Washer 1.35 mm	1
*	67-3860	Washer 1.4 mm	1
*	67-3870	Washer 1.45 mm	1
*	67-3880	Washer 1.5 mm	1
*	67-3890	Washer 1.55 mm	1
*	67-3900	Washer 1.6 mm	1

Ref. No.	Part No.	Description	No. Used
31	67-3910	Washer 1.65 mm	1
*	67-3920	Washer 1.7 mm	1
32	75-5000	Body	3
*	53-8150	Pump Assembly (Incl. Ref. 21-24)	1
*	67-3380	Nozzle and Holder Assembly (Incl. Ref. #25-32)	3

 *Not Illustrated

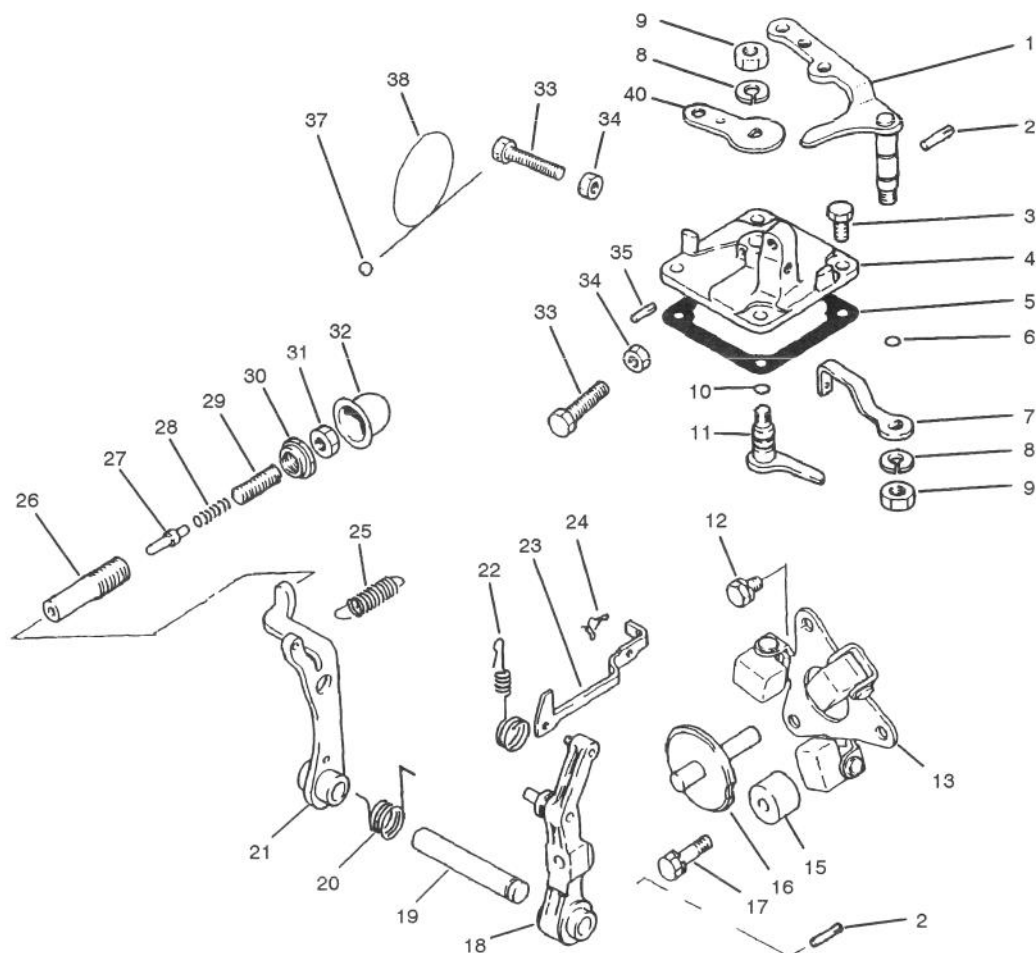


T-0571

GOVERNOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67-3990	Lever - Speed Control	1
2	67-4000	Pin	2
3	67-4270	Bolt	4
4	67-4130	Cover - Governor	1
5	67-4160	Gasket	1
6	42-8830	Seal - O-Ring	1
7	75-4980	Lever - Governor Spring	1
8	67-3260	Washer	2
9	42-9640	Nut - Jam	2
10	42-8830	Seal - O-Ring	1
11	67-4140	Lever - Stop	1
12	42-9430	Bolt W/Washer	2
13	67-4040	Weight Assembly	1
15	67-4010	Stopper	1
16	67-4070	Shaft - Sliding	1
17	67-4280	Bolt W/Washer	1
18	67-4060	Lever - Governor	1
19	67-4050	Shaft - Governor	1
20	67-5040	Spring	1
21	67-4090	Lever - Tension	1
22	70-8720	Spring - Tie Rod	1

Ref. No.	Part No.	Description	No. Used
23	67-4030	Rod - Tie	1
24	67-4080	Clip	1
25	75-4990	Spring - Governor	1
26	67-4210	Case - Torque Spring	1
27	67-4230	Stopper	1
28	67-4190	Spring - Torque	1
29	67-4220	Screw - Adjusting	1
30	67-4200	Nut - Special	1
31	67-4180	Nut	1
32	43-2820	Cap - Sealing Torque Set	1
33	42-9420	Bolt - Speed Set	4
34	67-4290	Nut	4
35	67-4120	Pin - Grooved	1
37	42-8690	Metal - Sealing	1
38	42-8700	Wire	1
40	67-4150	Lever - Stop	1
*	67-4110	Cover Assembly (Incl. Ref. #4, 8-11, 35 & 40)	1
*	67-4170	Spring Set (Incl. Ref. #26-31)	

 *Not Illustrated

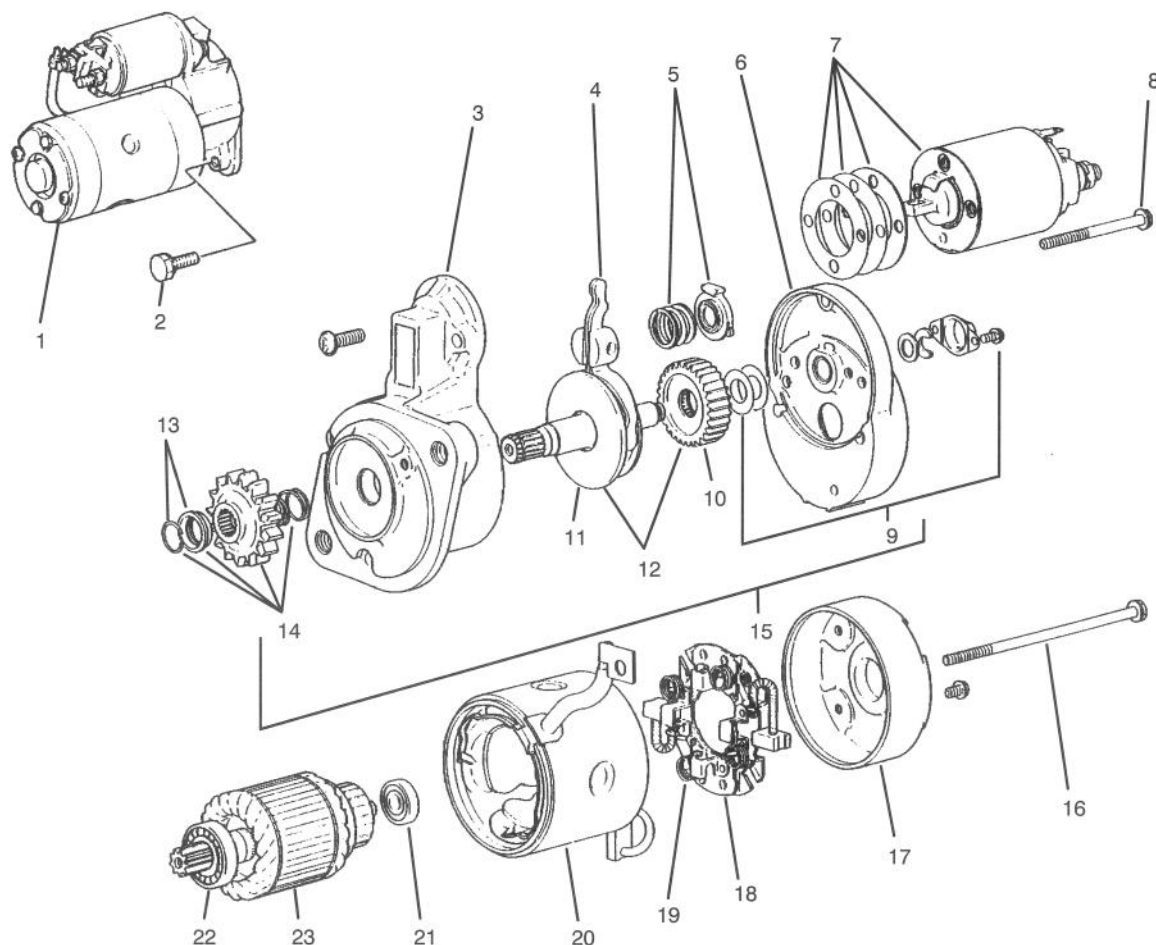


T-0572

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-8760	Starter Assembly (Incl. Ref. #3-23)	1
2	67-4610	Bolt W/Washer	2
3	70-8770	Bracket - Front	1
4	67-4720	Lever	1
5	67-4730	Spring Set	1
6	70-8780	Bracket - Center	1
7	67-4750	Switch	1
8	56-1570	Bolt Set	1
9	56-1680	Cover Set	1
10	56-1670	Gear	1
11	67-4790	Shaft	1
12	67-4780	Gear Set (Incl. Ref. #10 & 11)	1
13	56-1640	Stopper Set	1

Ref. No.	Part No.	Description	No. Used
14	67-4770	Pinion Set (Incl. Ref. #13)	1
15	67-4760	Shaft Assembly (Incl. Ref. #9, 12 & 14)	1
16	56-1610	Bolt	1
17	56-1720	Bracket - Rear	1
18	56-1700	Holder - Brush (Incl. Ref. #19)	1
19	56-1710	Spring - Brush	4
20	67-4800	Yoke	1
21	56-1600	Bearing - Rear	1
22	56-1590	Bearing - Front	1
23	56-1580	Armature Set (Incl. Ref. #21 & 22)	1

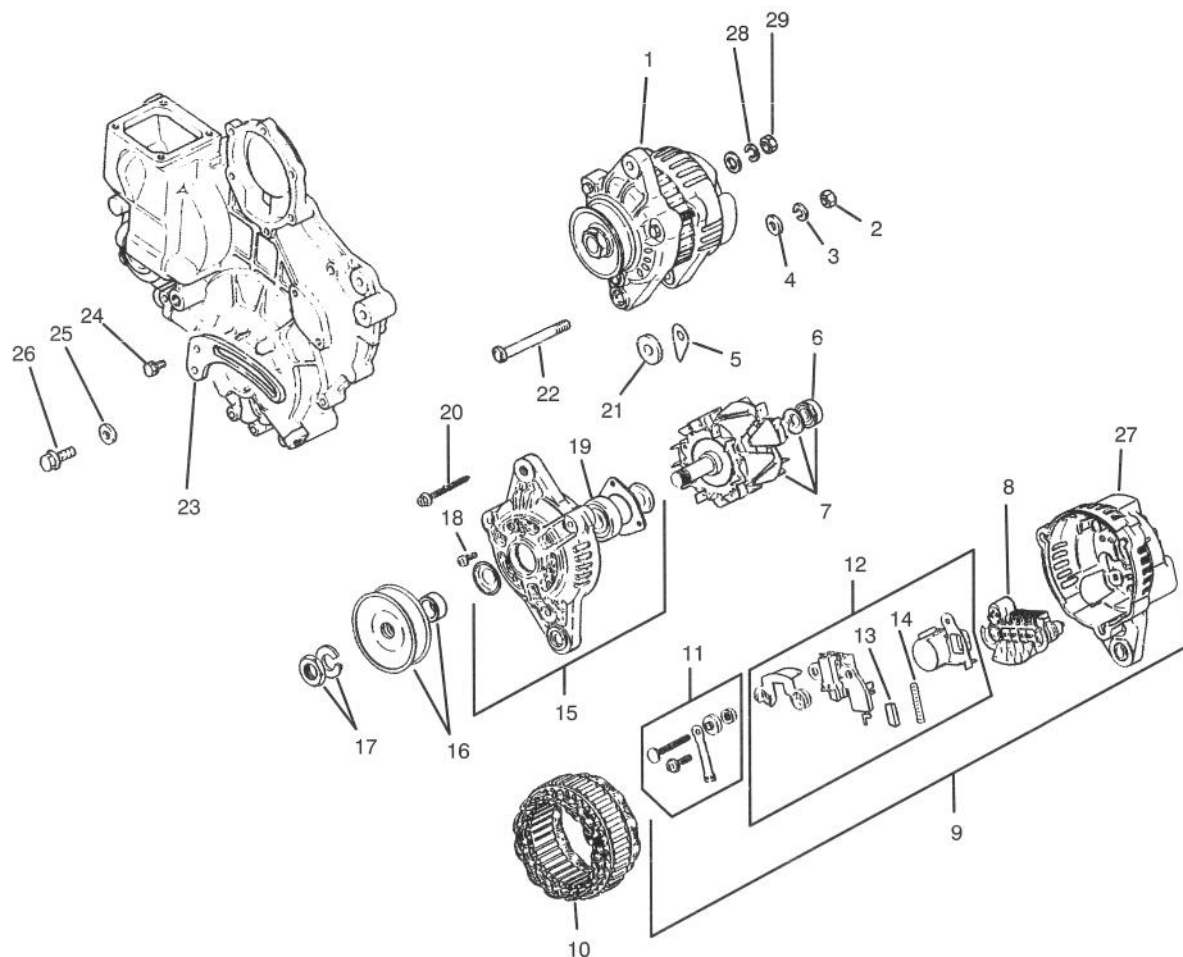 


T-0573

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67-4630	Alternator Assembly (Incl. Ref. #6-17)	1
2	67-4670	Nut	1
3	67-3260	Washer	1
4	42-9660	Washer	1
5	43-0370	Shim	1
6	67-4870	Bearing - Rear	1
7	67-4860	Rotor Assembly (Incl. Ref. #6)	1
8	67-4930	Rectifier	1
9	67-4890	Rear Cover Assembly (Incl. Ref. #8, 11, 12 & 27)	1
10	67-4880	Stator	1
11	67-4900	Terminal Set	1
12	67-4910	Regulator Assembly (Incl. Ref. #13 & 14)	1

Ref. No.	Part No.	Description	No. Used
13	67-4920	Brush	2
14	43-0510	Spring - Brush	2
15	67-4830	Front Bracket Assembly (Incl. Ref. #18 & 19)	1
16	67-4810	Pulley Set	1
17	43-1920	Nut Set	1
18	67-4840	Screw Set	1
19	67-4850	Bearing - Front	1
20	67-4820	Bolt Set	1
21	67-4620	Spacer	1
22	67-4640	Bolt	1
23	75-4940	Brace - Alternator	1
24	42-9440	Bolt W/Washer	1
25	54-8660	Washer	1
26	67-4660	Bolt - Flange	1
27	72-6140	Cover - Rear	1

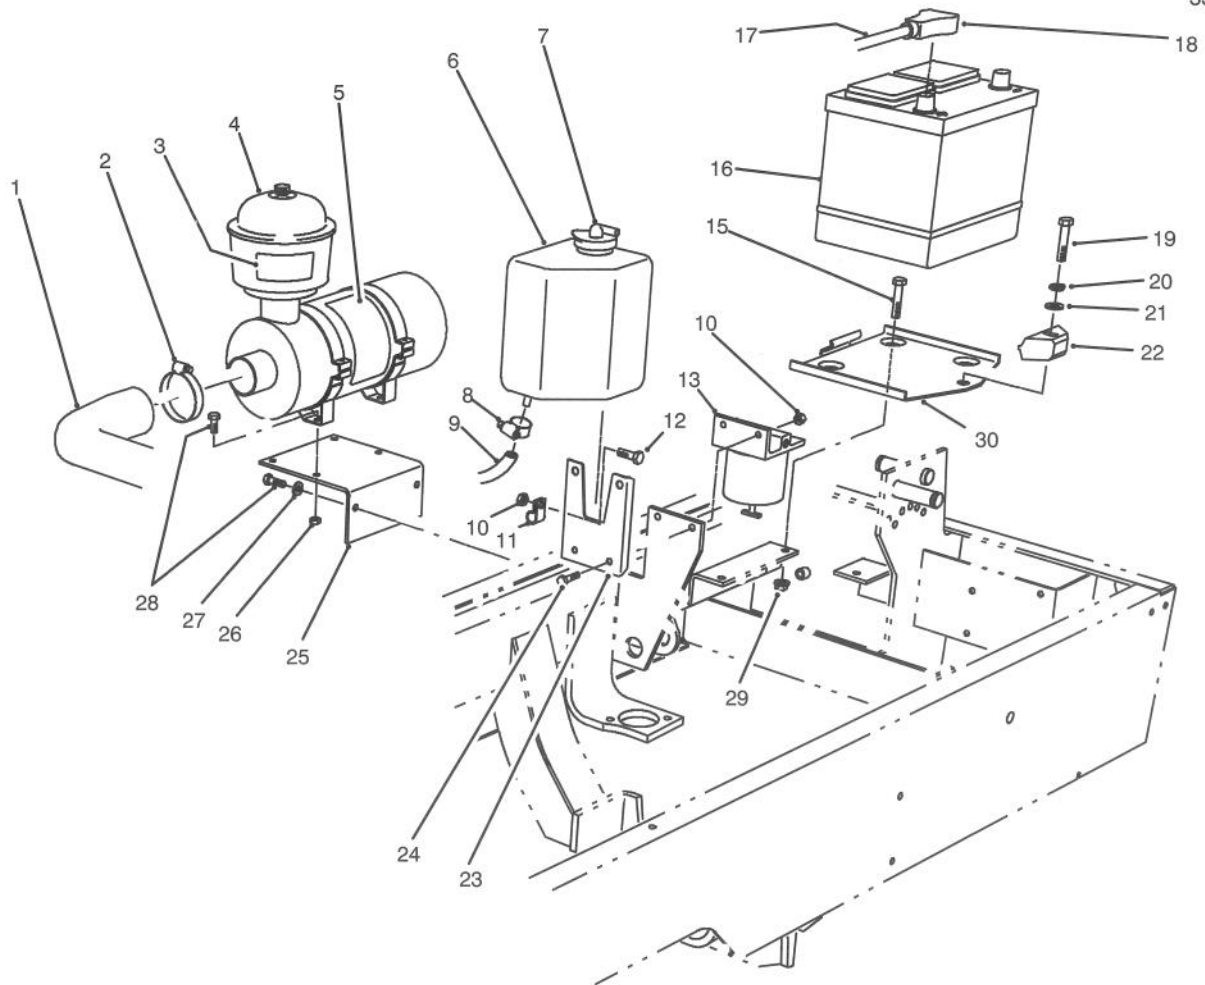 


T-1056

ENGINE COMPONENTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	75-2460	Hose - Air Cleaner	1	16		Battery (Type 26, 530 Amp.)	1
2	2412-42	Clamp - Hose	1	17	75-1370	Battery Cable Assy. (+) (Incl. Ref. #18)	1
‡3	67-1700	Decal - Starting Fluid (English)	1	18	28-1280	Boot - Cable	1
4	48-4220	Air Cleaner Assembly (Incl. Ref. #5)	1	19	323-9	Screw - Cap Hex. Hd.	1
5	27-7160	Decal - Instructions	1	20	3253-21	Washer - Lock	1
6	63-7380	Expansion Tank Assembly (Incl. Ref. #7)	1	21	3256-24	Washer - Flat	1
7	71-1520	Cap - Expansion Tank	1	22	66-2490	Clamp - Battery	1
8	2412-108	Clamp - Hose	1	23	75-4250	Bracket - Expansion Tank	1
9	75-2850	Hose - Expansion Tank	1	24	321-6	Screw - Cap Hex. Hd.	2
10	3296-42	Nut - Lock	3	25	75-3140	Bracket - Air Cleaner	1
11	2412-93	Clamp - R	1	26	3296-29	Nut - Lock	4
12	321-2	Screw - Cap Hex. Hd.	1	27	3256-23	Washer - Flat	2
13	63-8300	Fuel Filter Assembly	1	28	322-3	Screw - Cap Hex. Hd.	6
15	322-4	Screw - Cap Hex. Hd.	3	29	32128-25	Nut - Lock	3
				30	66-2330	Base - Battery	1

 ‡For different language versions of this part, see International Decal Cross Reference.

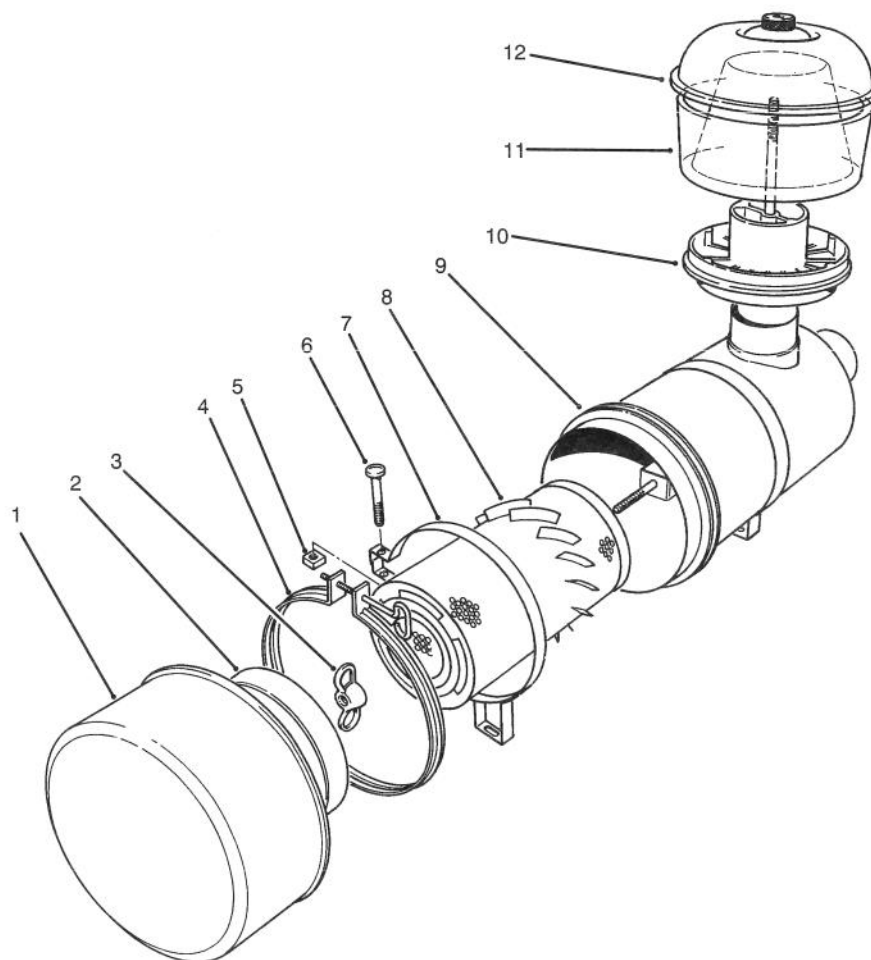

T-0126


AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	27-7150	Cup Assembly	1
2	27-7140	Baffle	1
3	27-7120	Nut	1
4	27-7130	Clamp Assembly	1
5	32107-11	Nut-Square	2
6	3258-19	Screw-Machine	2
7	27-7170	Band Assembly (Incl. Ref. #5 & 6)	2
8	27-7110	Element Assembly	1

Ref. No.	Part No.	Description	No. Used
9†		Housing	1
10	62-6300	Sleeve Assembly	1
11	33-1270	Bowl	1
12	33-1260	Cover Assembly	1
*	48-7430	Pre-Cleaner Assembly (Incl. Ref. #10-12)	1
*	48-4220	Air Filter Assembly (Incl. Ref. #1-4, 8-9)	1
*	27-7220	Air Cleaner Soap	1

*Not Illustrated

 †Not Serviceable Separately

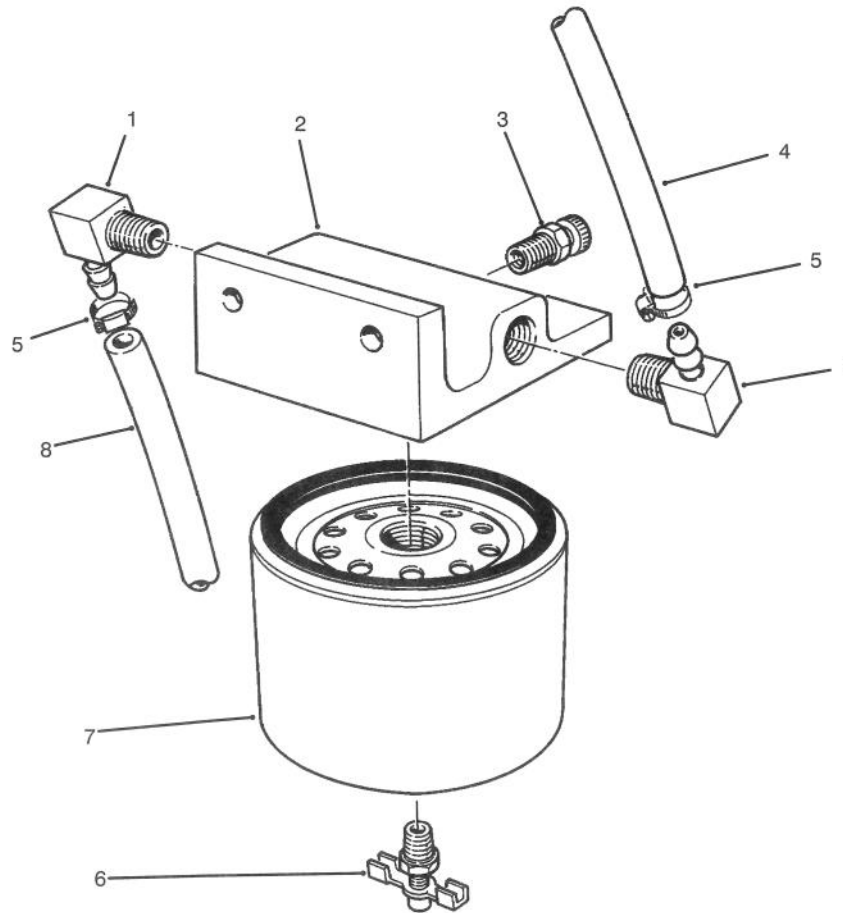


T-1030

FUEL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	353-781	Fitting-Elbow	2	7	63-8300	Element-Spin-On (Incl. Ref. #6)	1
2	63-8280	Head-Filter, Fuel (Incl. Ref. #3)	1	8	63-7610	Hose-Fuel	1
3	63-8290	Vent-Air	1	*	63-8300	Fuel Filter Assembly (Incl. Ref. #2, 3 & 6-7)	1
4	63-7620	Hose-Fuel	1				
5	2412-108	Clamp-Hose	2				
6	63-8310	Valve-Drain	1				

 *Not Illustrated

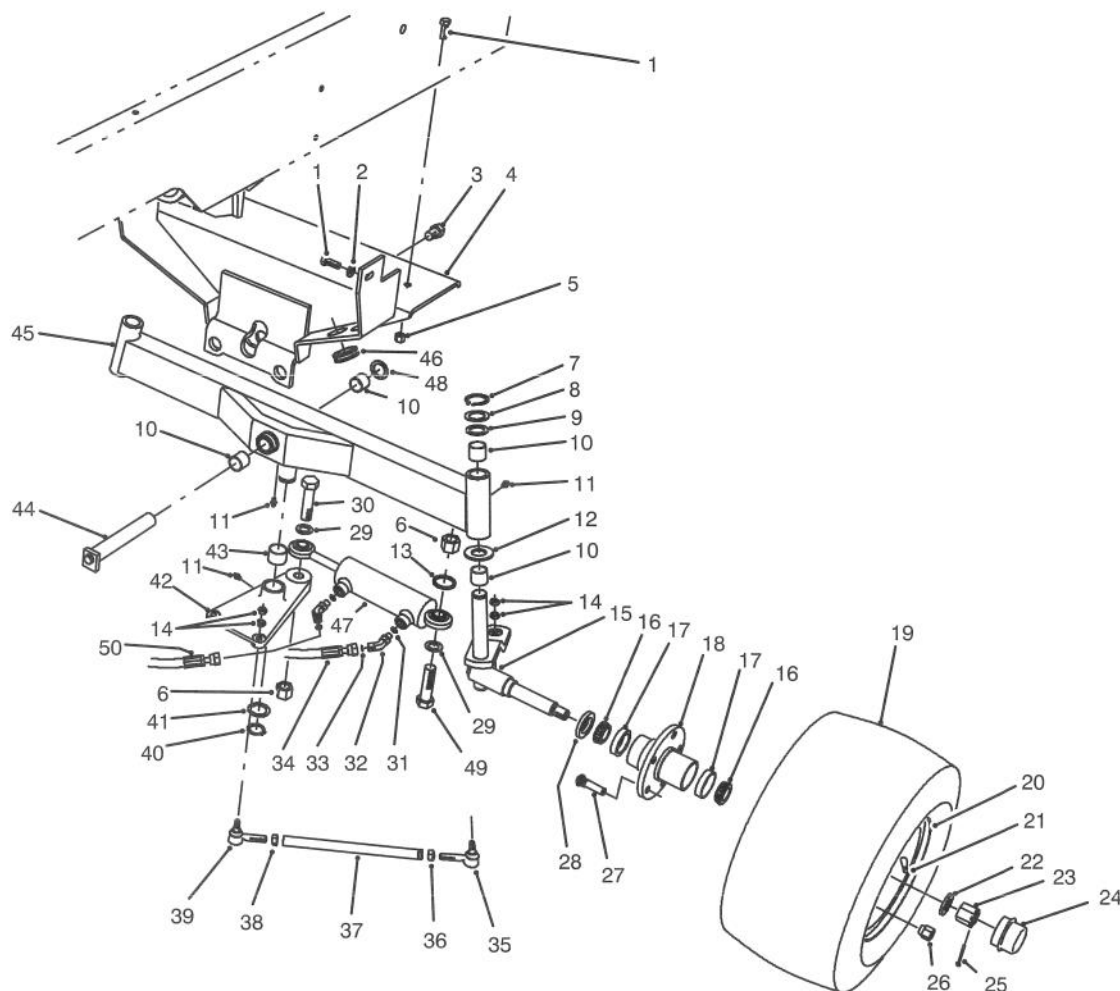


T-1057

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	323-6	Screw - Cap Hex. Hd.	4	23	32136-5	Nut - Slotted	2
2	3256-24	Washer - Flat	2	24	241-119	Cap - Dust	2
3	327-2	Screw - Cap Hex. Hd.	1	25	3272-13	Pin - Cotter	2
4	75-1100	Support - Rear Axle	1	26	242-50	Nut - Lug	10
5	3296-39	Nut - Lock	2	27	10-6830	Stud - Drive	10
6	32153-6	Nut - Lock	2	28	253-129	Seal - Grease	2
7	32151-36	Ring - Retaining	2	29	67-9410	Washer - Thrust	2
8	5-1226	Washer - Shim	A/R	30	328-25	Screw - Cap Hex. Hd.	1
9	10-8110	Washer - Thrust	2	31	237-78	Seal - O-Ring	2
10	67-1751	Bushing - Sleeve	6	32	340-103	Fitting - Hydraulic 45° (Incl. Ref. #31 & 33)	2
11	302-5	Fitting - Grease	4	33	237-21	Seal - O-Ring	2
12	256-121	Washer - Thrust	2	34	75-6220	Hose - Hydraulic	1
13	67-7250	Spacer - Cylinder	1	35	21-0140	Joint - Ball	2
14	3220-3	Nut - Jam	8	36	3220-5	Nut - Jam	2
15	75-4440	Spindle - Rear L.H.	1	37	75-3130	Rod - Tie	2
*	75-4420	Spindle - Rear R.H.	1	38	3220-12	Nut - Jam L.H. Thread	2
16	254-94	Cone - Bearing	4	39	21-0150	Joint - Ball L.H. Thread	2
17	254-72	Cup - Bearing	4	40	32151-77	Ring - Retaining	1
18	21-2820	Hub - Rear Wheel	2	41	76-2980	Washer - Thrust	1
19	231-141	Tire	2	42	75-4410	Pivot Plate Assembly (Incl. Ref. #11 & 43)	1
20	217-121	Rim	2	43	76-2970	Bushing - Sleeve	2
21	232-35	Stem - Valve	2				
22	3256-28	Washer - Flat	2				

 *Not Illustrated

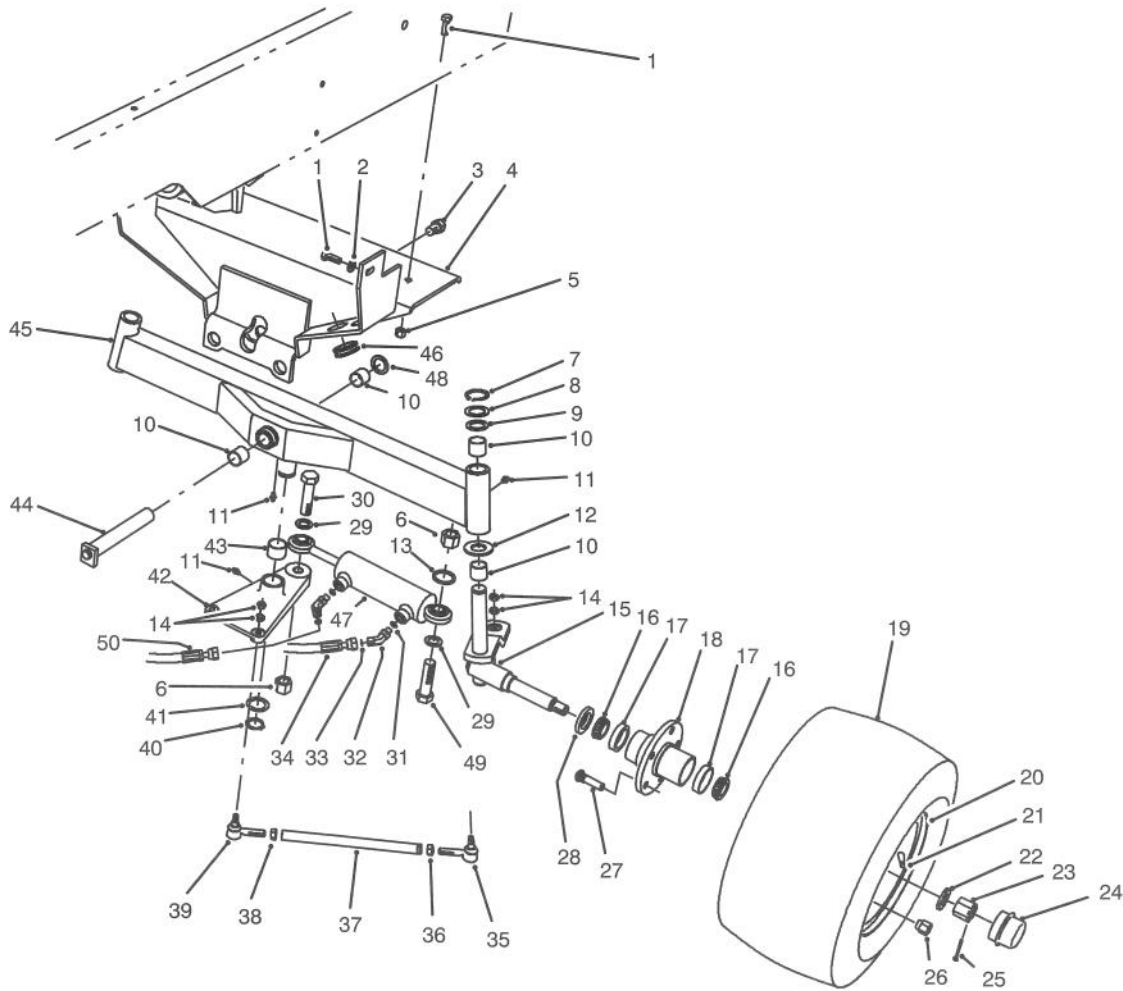


T-1057

REAR AXLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
44	75-4180	Pin - Rear Axle Pivot	1
45	75-2900	Rear Axle Assembly (Incl. Ref. #10 & 11)	1
46	237-165	Grommet	2

Ref. No.	Part No.	Description	No. Used
47	75-1200	Hydraulic Cylinder Assembly	1
48	5-1226	Washer - Thrust	1
49	328-27	Screw - Cap Hex. Hd.	1
50	75-6230	Hose - Hydraulic	1

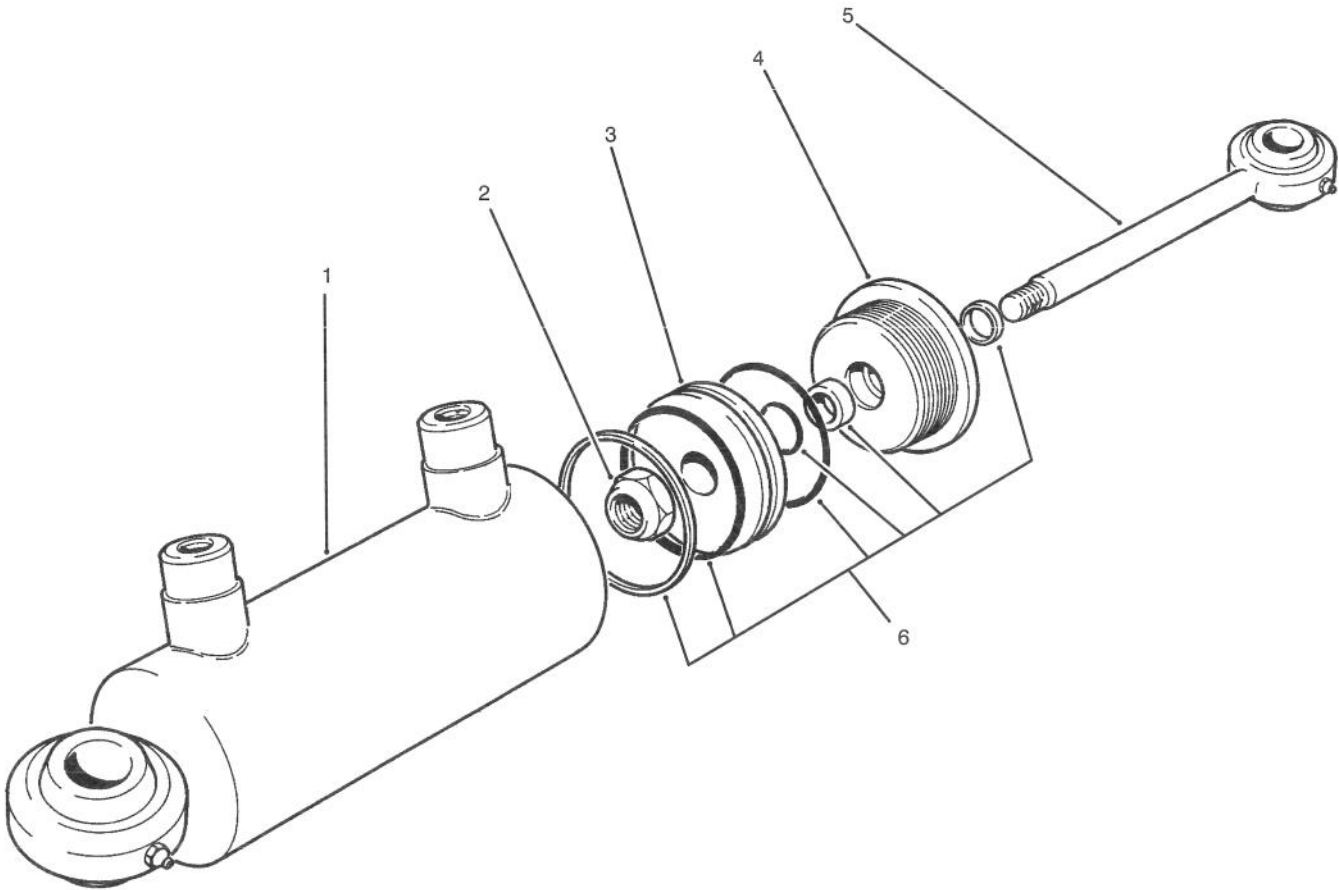 


T-0996

HYDRAULIC CYLINDER NO. 75-1200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1		Barrel Assembly	1	4	75-1260	Head-Internal	1
2	75-1210	Nut-Lock	1	5	75-1230	Piston Rod Assembly	1
3	75-1220	Piston	1	6	75-1250	Seal Kit	1

 †Not Serviced Separately

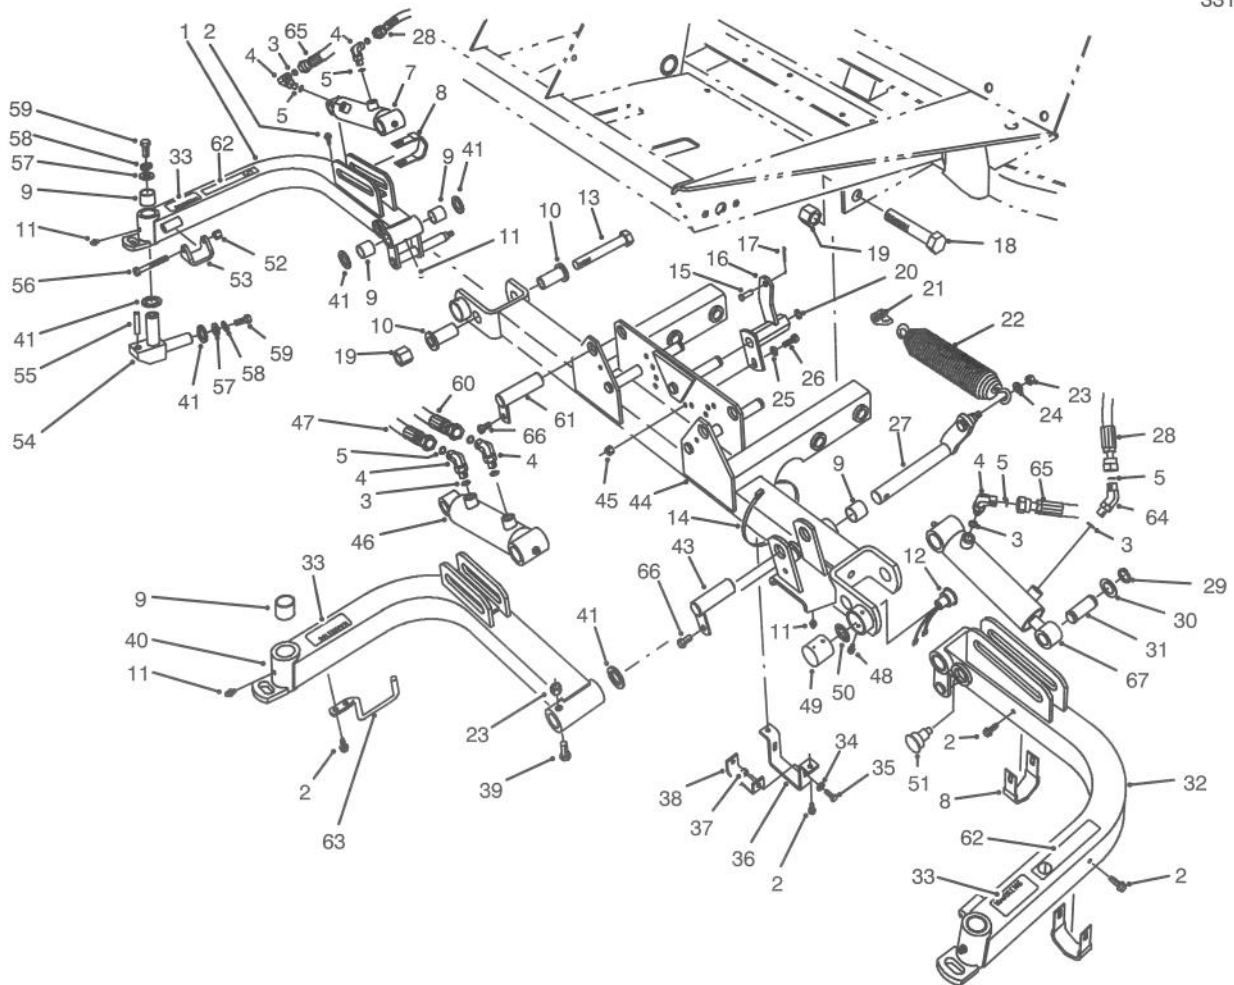


T-1059

FRONT LIFT ARMS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	75-5450	Lift Arm Assembly R.H. (Incl. Ref. #9 & 11)	1	21	282-4	Clevis - Spring	3
2	49-2040	Screw - Thread Forming	10	22	5-0743	Spring - Extension	3
3	237-78	Seal - O-Ring	6	23	3296-44	Nut - Lock	4
4	340-132	Fitting - Hydraulic 90° (Incl. Ref. #3 & 5)	5	24	3256-24	Washer - Flat	3
5	237-21	Seal - O-Ring	6	25	3256-23	Washer - Flat	3
7	83-7480	Hydraulic Cylinder Assembly	1	26	322-5	Screw - Cap Hex. Hd.	3
8	75-5330	Clamp - Hose	3	27	75-4550	Shaft - Center Arm Pivot	1
9	67-1750	Bushing - Sleeve	12	28	75-5890	Hose - Hydraulic	2
10	84-8320	Insert - Hinge	4	29	32120-93	Ring - Retaining	6
11	302-5	Fitting - Grease	6	30	3-6498	Washer - Thrust	6
12	75-6300	Sensor - Reed Switch	1	31	75-5350	Pin - Cylinder Rod End	3
13	328-12	Screw - Cap Hex. Hd.	2	32	75-5460	Lift Arm Assembly L.H. (Incl. Ref. #9 & 11)	1
14	3290-336	Tie - Cable	3	33	55-4300	Decal - Warning (English)	3
15	283-6	Pin - Clevis	3	34	3256-22	Washer - Flat	2
16	75-5210	Bracket - Spring Center	1	35	321-4	Screw - Cap Hex. Hd.	2
*	75-5200	Bracket - Spring R.H.	1	36	75-5370	Mount - Clamp	1
*	75-5220	Bracket - Spring L.H.	1	37	3296-42	Nut - Lock	2
17	3272-10	Pin - Cotter	3	38	75-5380	Bracket - Clamp	1
18	328-7	Screw - Cap Hex. Hd.	4	39	323-11	Screw - Cap Hex. Hd.	1
19	3296-51	Nut - Lock	6	40	75-5420	Lift Arm Assembly Center (Incl. Ref. #9 & 11)	1
20	32151-48	Ring - Retaining	3	41	256-115	Washer - Thrust	11

*Not Illustrated

 †For different language versions of this part, see International Decal Cross Reference.

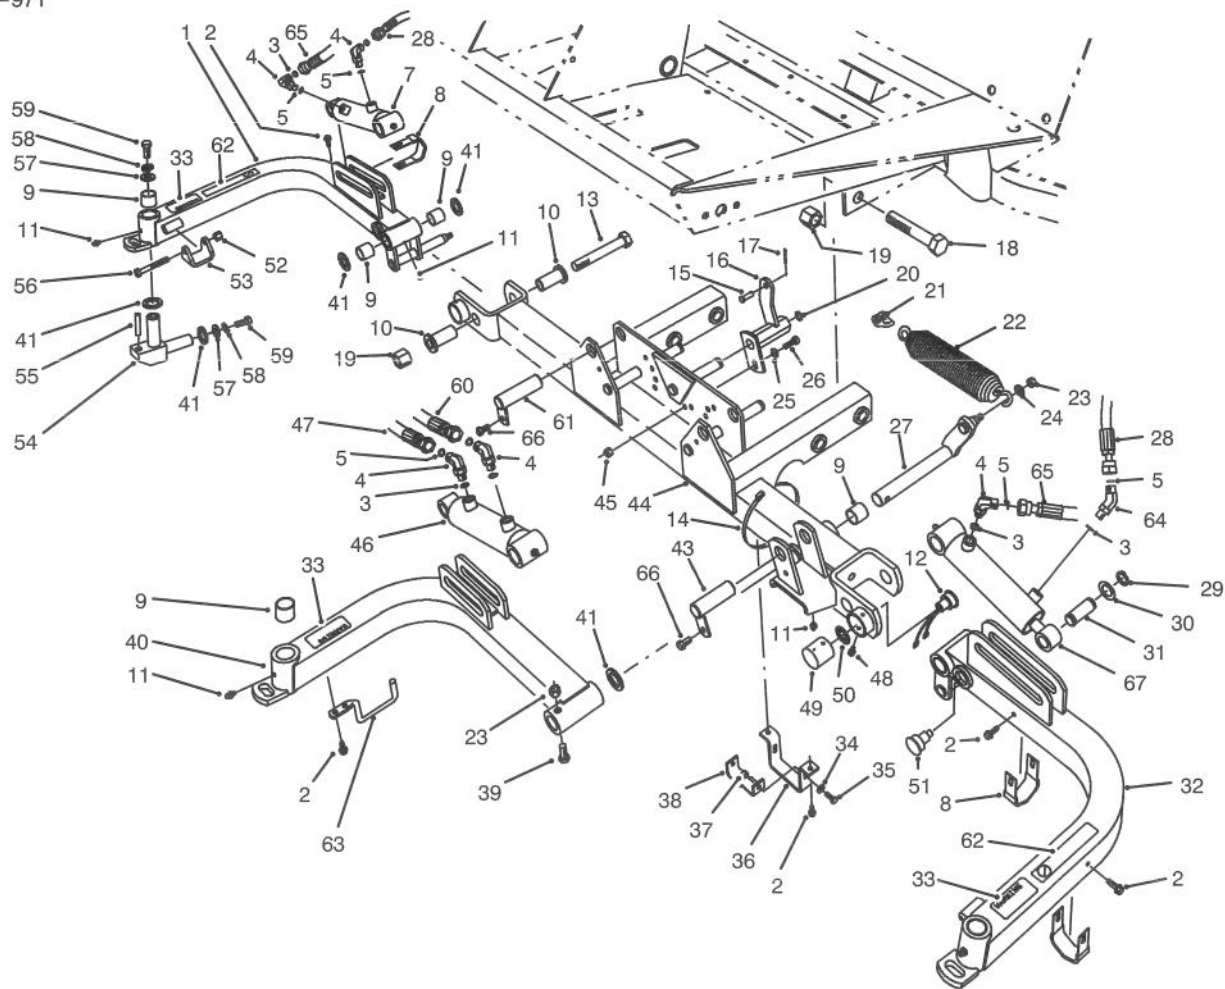


T-1059

FRONT LIFT ARMS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
43	83-6790	Pin - Cylinder (Short)	1
44	75-3040	Carrier Frame Assembly (Incl. Ref. #9 & 11)	1
45	3296-29	Nut - Lock	3
46	85-9880	Hydraulic Cylinder Assembly	1
47	75-5900	Hose - Hydraulic	1
48	32104-76	Screw - Thread Forming	2
49	75-6370	Cover - Sensor	1
50	32151-94	Ring - Retaining	1
51	75-6310	Magnet - Reed Switch	1
52	3296-39	Nut - Lock	2
53	75-5410	Bracket - Arm	2
54	75-3010	Joint - Arm	3
55	32121-122	Pin - Roll	3

Ref. No.	Part No.	Description	No. Used
56	323-12	Screw - Cap Hex. Hd.	2
57	3256-6	Washer - Flat	6
58	3253-7	Washer - Lock	6
59	325-4	Screw - Cap Hex. Hd.	6
60	75-5910	Hose - Hydraulic	1
61	83-6780	Pin - Cylinder (Long)	2
62	36-3400	Decal - No Step (English)	2
63	75-5300	Rod - Hose Support	1
64	340-103	Fitting - Hydraulic 45° (Incl. Ref. #3 & 4)	1
65	82-6490	Hose - Hydraulic	1
66	32144-14	Screw - Self Tapping	3
67	83-7490	Hydraulic Cylinder Assy.	1

 ‡For different language versions of this part, see International Decal Cross Reference.

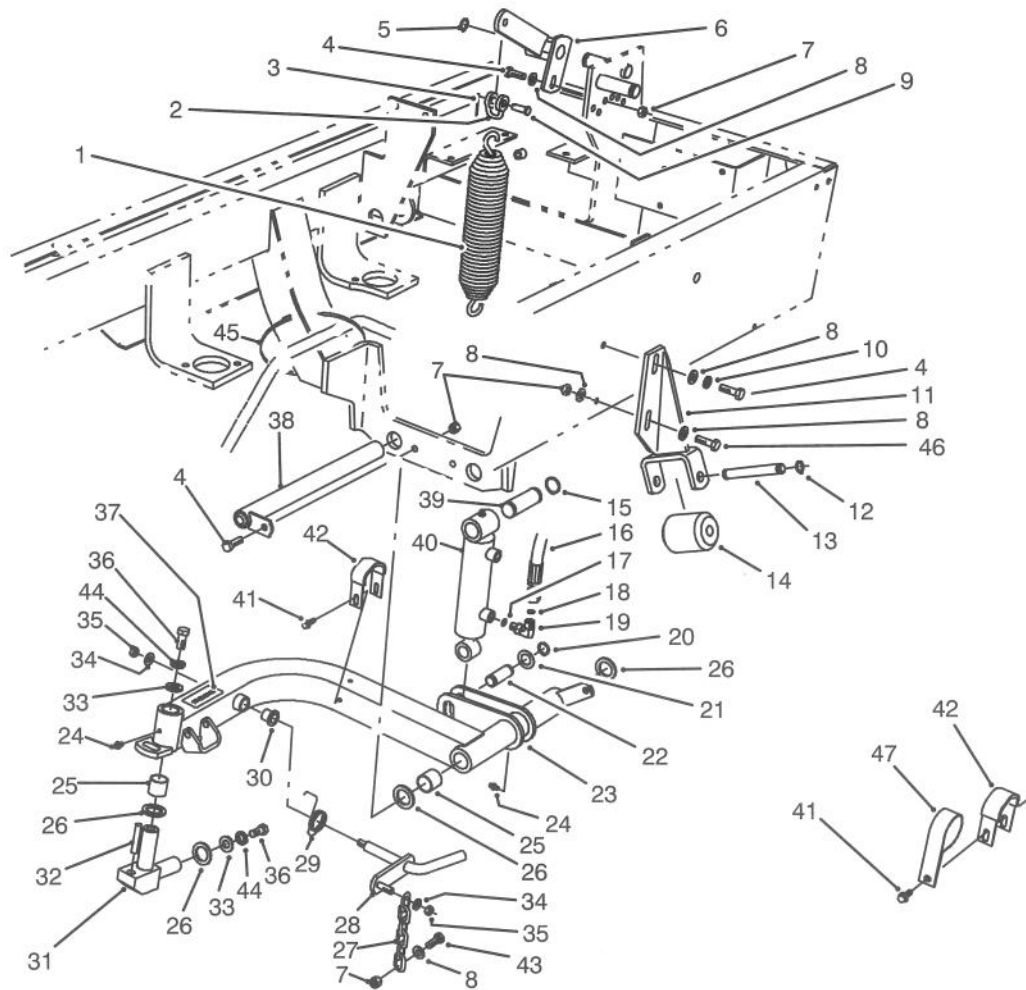


T-1060

REAR LIFT ARMS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	5-0743	Spring - Counterbalance	2	20	32120-93	Ring - Retaining	4
2	282-4	Clevis - Spring	2	21	3-6498	Washer - Thrust	4
3	3272-10	Pin - Cotter	2	22	75-5350	Pin - Cylinder Rod End	2
4	322-5	Screw - Cap Hex. Hd.	6	23	75-5440	Lift Arm Assy. Rear R.H. (Incl. Ref. #24, 25 & 30)	1
5	32151-48	Ring - Retaining	2	*	75-5430	Lift Arm Assy. Rear L.H. (Incl. Ref. #24, 25 & 30)	1
6	75-4690	Bracket - Spring Rear R.H.	1	24	302-5	Fitting - Grease	4
*	75-4650	Bracket - Spring Rear L.H.	1	25	67-1750	Bushing - Sleeve	8
7	3296-29	Nut - Lock	8	26	256-115	Washer - Thrust	8
8	3256-23	Washer - Flat	10	27	5-1096	Chain - Cutting Unit	2
9	283-6	Pin - Clevis	2	28	75-4590	Rod - Pivot	2
10	3253-4	Washer - Lock	2	29	75-4520	Spring - Torsion R.H.	1
11	75-3810	Bracket - Roller	2	*	75-4530	Spring - Torsion L.H.	1
12	32151-61	Ring - Retaining	4	30	256-287	Bushing - Flange	4
13	75-5400	Shaft - Roller	2	31	75-3010	Joint - Arm	2
14	75-5390	Roller	2	32	32121-122	Pin - Roll	2
15	32151-36	Ring - Retaining	4	33	3256-6	Washer - Flat	4
16	75-6180	Hose - Hydraulic R.H.	2	34	3256-24	Washer - Flat	4
*	75-6070	Hose - Hydraulic L.H. (Cap)	1	35	3296-39	Nut - Lock	4
*	75-6080	Hose - Hydraulic L.H. (Rod)	1	36	325-4	Screw - Cap Hex. Hd.	4
17	237-78	Seal - O-Ring	4	37	55-4300	Decal - Warning (English)	2
18	237-21	Seal - O-Ring	4	38	75-3750	Pin - Pivot	2
19	340-132	Fitting - Hydraulic 90° (Incl. Ref. #17 & 18)	4				

*Not Illustrated

 
‡For different language versions of this part, see International Decal Cross Reference.

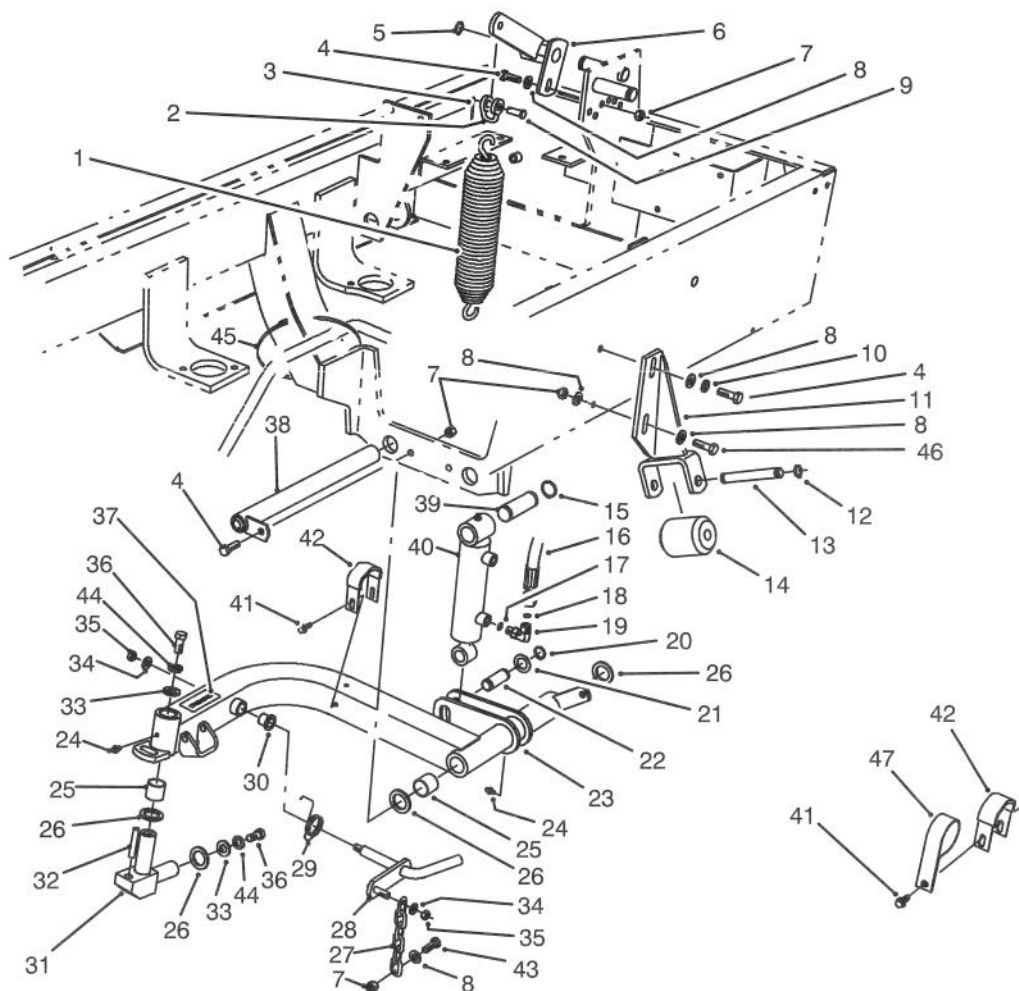

T-1060

REAR LIFT ARMS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
39	75-5360	Pin - Cylinder Cap End	2	45	3290-336	Tie - Cable	1
40	85-9880	Hydraulic Cylinder Assy.	2	46	322-6	Screw - Cap Hex.	2
41	49-2040	Screw - Thread Forming	5	47	2412-107	Clamp - R (Used on left rear cutting unit lift arm only)	1
42	75-5330	Clamp - Hydraulic Line	2				
43	322-12	Screw - Cap Hex. Hd.	2				
44	3253-7	Washer - Lock	4				

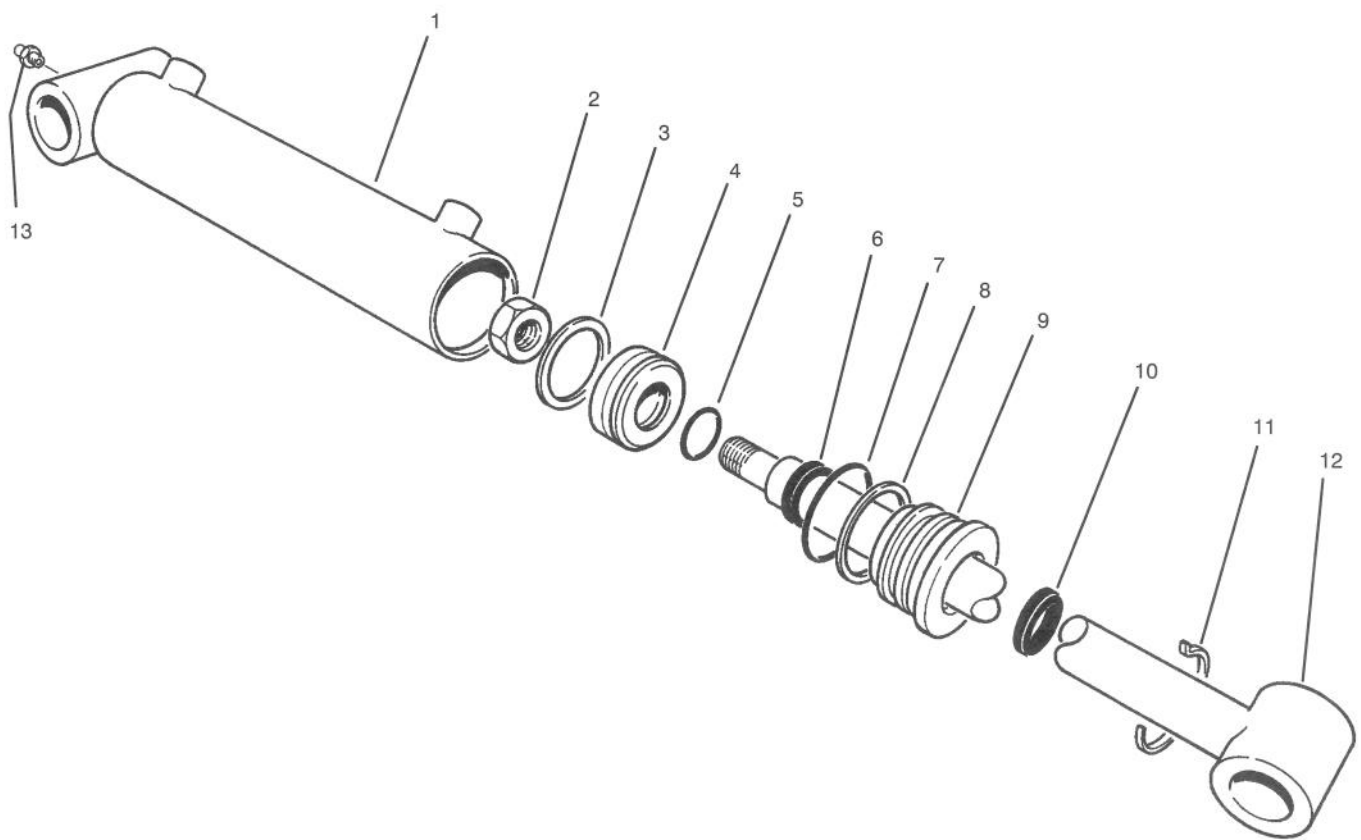 


T-1032

HYDRAULIC CYLINDER NO. 85-9880

Ref. No.	Part No.	Description	No. Used
†1		Barrel	1
2	32152-10	Nut	1
†3		Uni-ring	1
4	70-2780	Piston	1
†5		Seal - O-Ring	1
†6		Seal-Rod	1
†7		Seal - O-Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
9	84-1670	Head	1
†10		Seal-Dust	1
11	84-1680	Ring-Retaining	1
12	75-3790	Clevis	1
13	302-5	Fitting - Grease	1
*	86-7330	Seal repair Kit (Incl. Ref. #3, 5-8 & 10)	1

 *Not Illustrated
†Not Serviced Separately

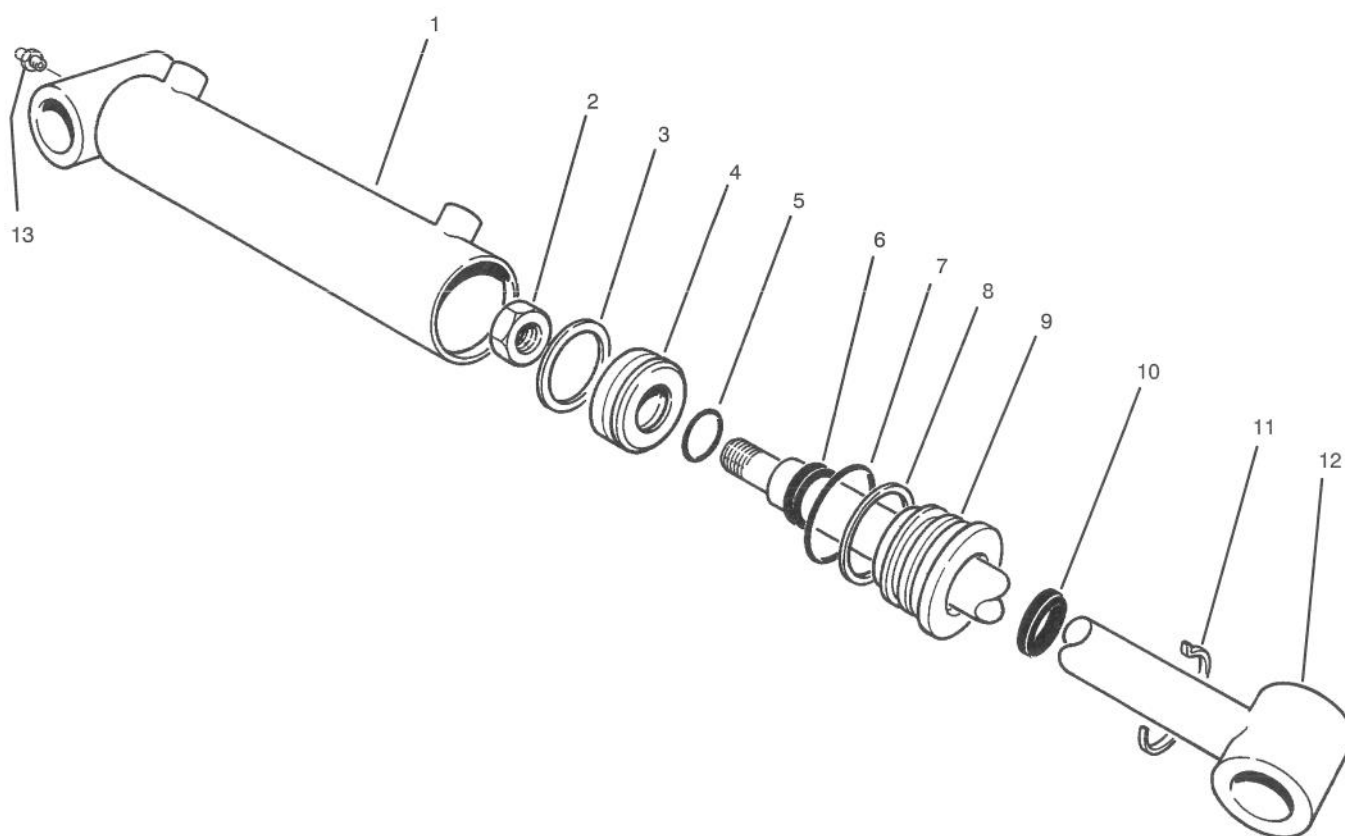

T-1032


HYDRAULIC CYLINDER NO. 83-7480

Ref. No.	Part No.	Description	No. Used
†1		Barrel	1
2	32152-10	Nut	1
†3		Uni-ring	1
4	84-1710	Piston	1
†5		O-Ring	1
†6		Seal-Rod	1
†7		O-Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
9	84-1720	Head	1
†10		Seal-Dust	1
11	84-1730	Ring-Retaining	1
12	84-1740	Clevis	1
13	302-5	Fitting - Grease	1
*	84-1760	Seal repair Kit (Incl. Ref. #3, 5-8 & 10)	1

*Not Illustrated

 †Not Serviced Separately

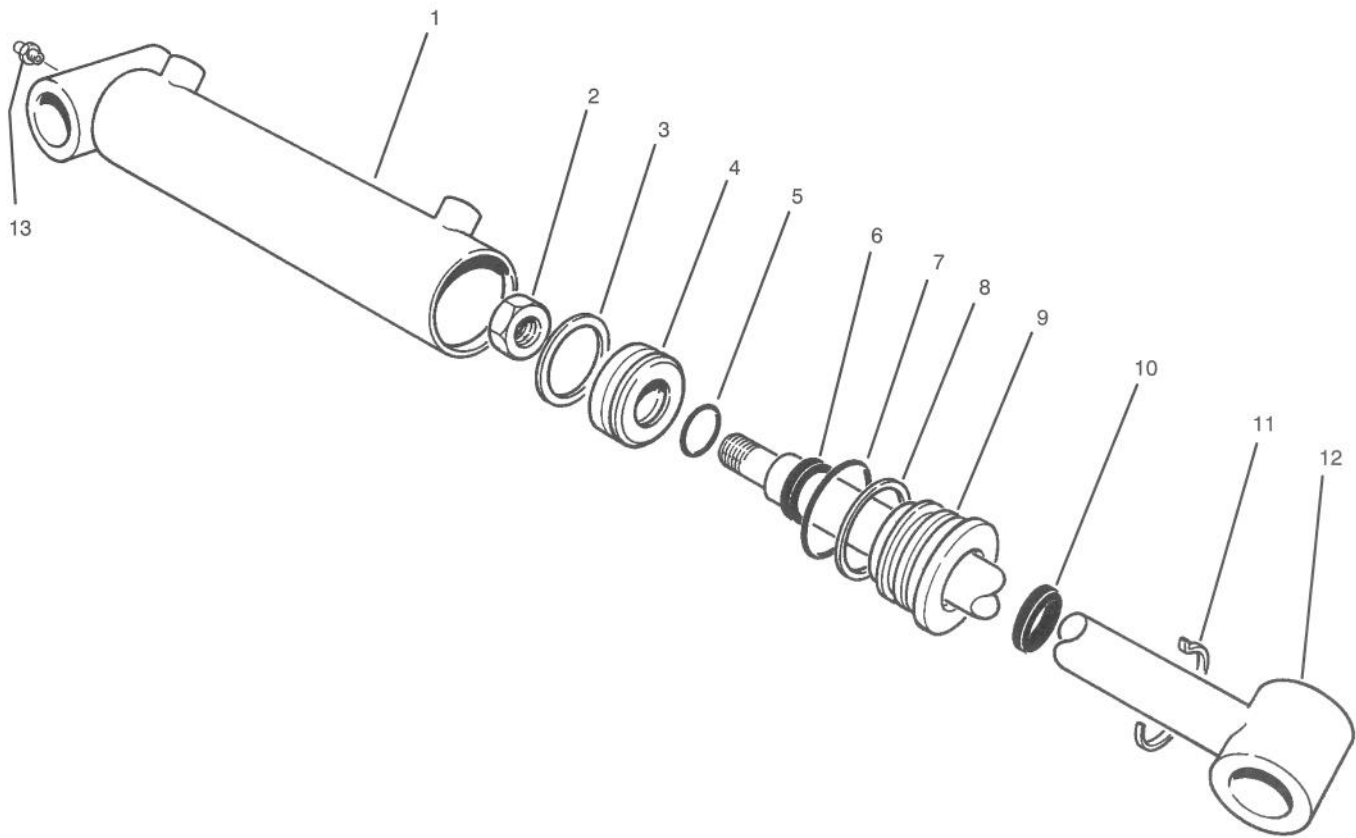


T-1032

HYDRAULIC CYLINDER NO. 83-7490

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1		Barrel	1	9	84-1670	Head	1
2	32152-10	Nut	1	†10		Seal-Dust	1
†3		Uni-ring	1	11	84-1680	Ring-Retaining	1
4	70-2780	Piston	1	12	75-2120	Clevis	1
†5		O-Ring	1	13	302-5	Fitting - Grease	1
†6		Seal-Rod	1	*	86-7330	Seal Repair Kit (Incl. Ref. #3, 5-8 & 10)	1
†7		O-Ring	1				
†8		Backup	1				

 *Not Illustrated
†Not Serviced Separately

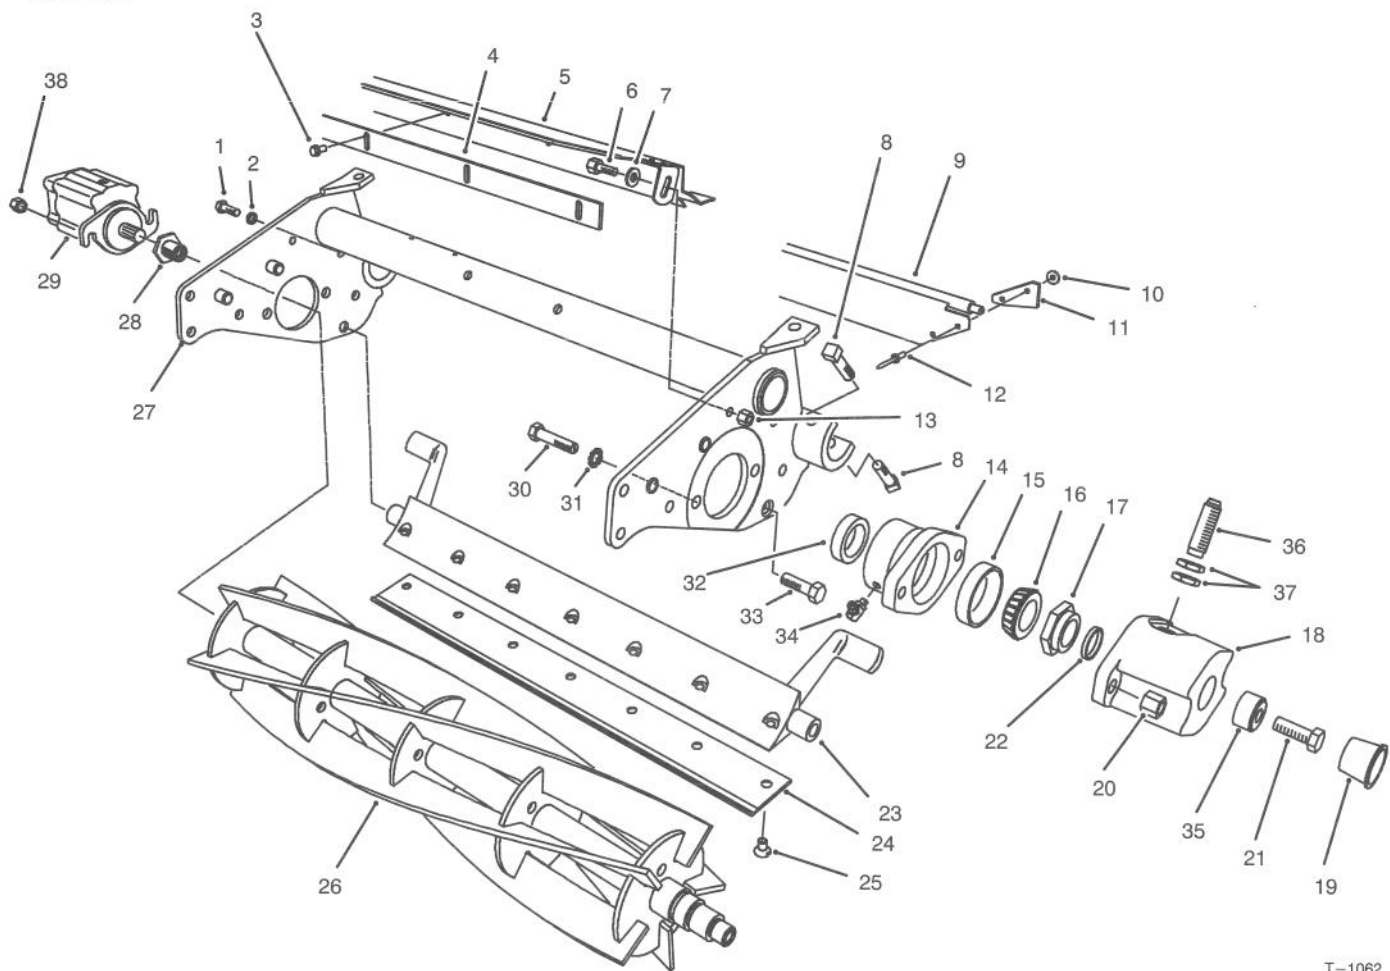


T-1062

REEL ASSEMBLY (5 & 8 Blade Cutting Units)

Ref. No.	Part No.	Description	No. Used
1	322-5	Screw - Cap Hex. Hd.	1
2	3253-4	Washer - Lock	1
3	32144-73	Screw - Self Tapping	5
4	36-7260	Bar - Cutoff	1
5	75-1840	Shield - Grass	1
6	321-4	Screw - Cap Hex. Hd.	2
7	3256-1	Washer - Flat	2
8	3243-13	Screw - Sq. Hd. Set	4
9	75-1560	Deflector - Rear	1
10	3256-49	Washer - Flat	4
11	75-1720	Flap - Rear Shield	2
12	3290-409	Rivet - Pop	4
13	3296-42	Nut - Lock	2
14	10-5120	Housing - Bearing	2
15	254-72	Cup - Bearing	2
16	254-94	Cone - Bearing	2
17	3296-60	Nut - Reel	1
18	85-4620	End Cap Assembly (Incl. Ref. #22)	1
19	12-0450	Plug - Hole	1
20	3296-39	Nut - Lock L.H.	2

Ref. No.	Part No.	Description	No. Used
21	30-2120	Screw - Cap Hex. Hd. L.H.	1
22	253-61	Seal - Oil	1
23	10-4930	Bedbar	1
24	63-8610	Bedknife	1
25	57-4910	Screw - Bedknife	7
26	14-0659	Reel - 5 Blade	1
*	14-0649	Reel - 8 Blade	1
27	75-6660	Frame - Cutting Unit	1
28	77-0340	Screw - Spline	1
29	75-1400	Reel Motor Assembly	1
30	57-3210	Screw - Special	4
31	3255-9	Washer - E.T.L.W.	4
32	253-96	Seal - Oil	2
33	217-74	Bolt - Bedbar	2
34	302-60	Fitting - Grease L.H. 90°	1
35	85-4380	Magnet	2
36	85-4390	Sensor Assembly (Incl. Ref. #37)	2
37		Nut - Jam	4
38	32128-36	Nut - Flange Lock R.H.	2
*	302-11	Fitting - Grease R.H. 45°	1

 *Not Illustrated

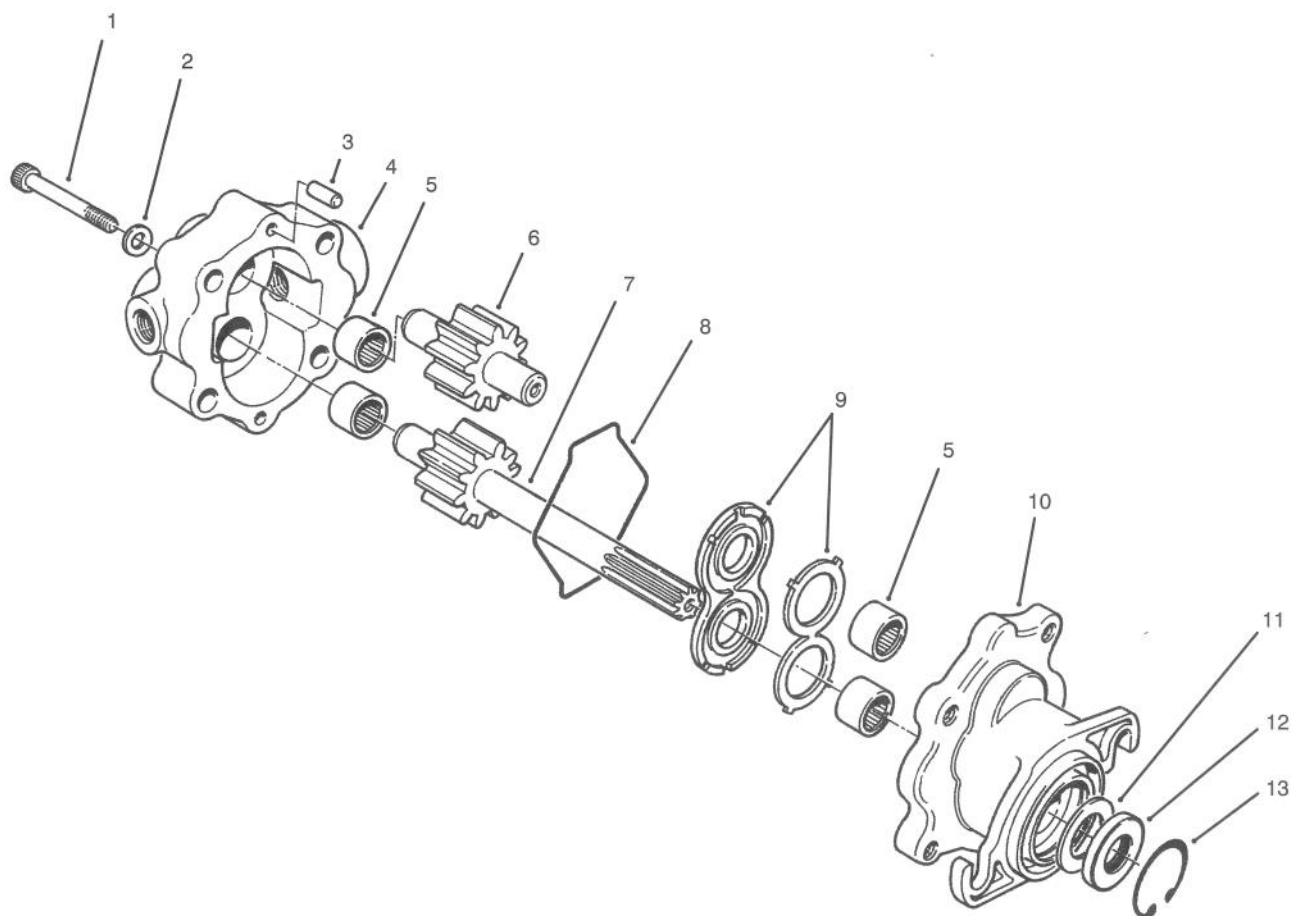

T-1009


REEL MOTOR ASSEMBLY NO. 75-1400

Ref. No.	Part No.	Description	No. Used
1	354-50	Screw-Hex Socket Hd.	4
2	354-51	Washer	4
3	353-599	Pin-Dowel	2
4	354-47	Cover Assy. (Incl. Ref. #5)	1
†5		Bearing-Needle	4
6	354-45	Idler Gear Assembly	1
7	354-49	Drive Shaft Assembly	1
8	354-46	Ring-Seal	1
†9		Plate Assembly-Load	1

Ref. No.	Part No.	Description	No. Used
10	354-44	Body Assy. (Incl. Ref. #5)	1
†11		Spacer	1
†12		Seal-Shaft	1
13	32151-41	Ring-Retaining	1
*	72-4380	Seal Kit (Incl. Ref. #11-13)	1
*	75-1270	Repair Kit (Incl. Ref. #8, & 11-13)	1

*Not Illustrated

 †Not Serviced Separately

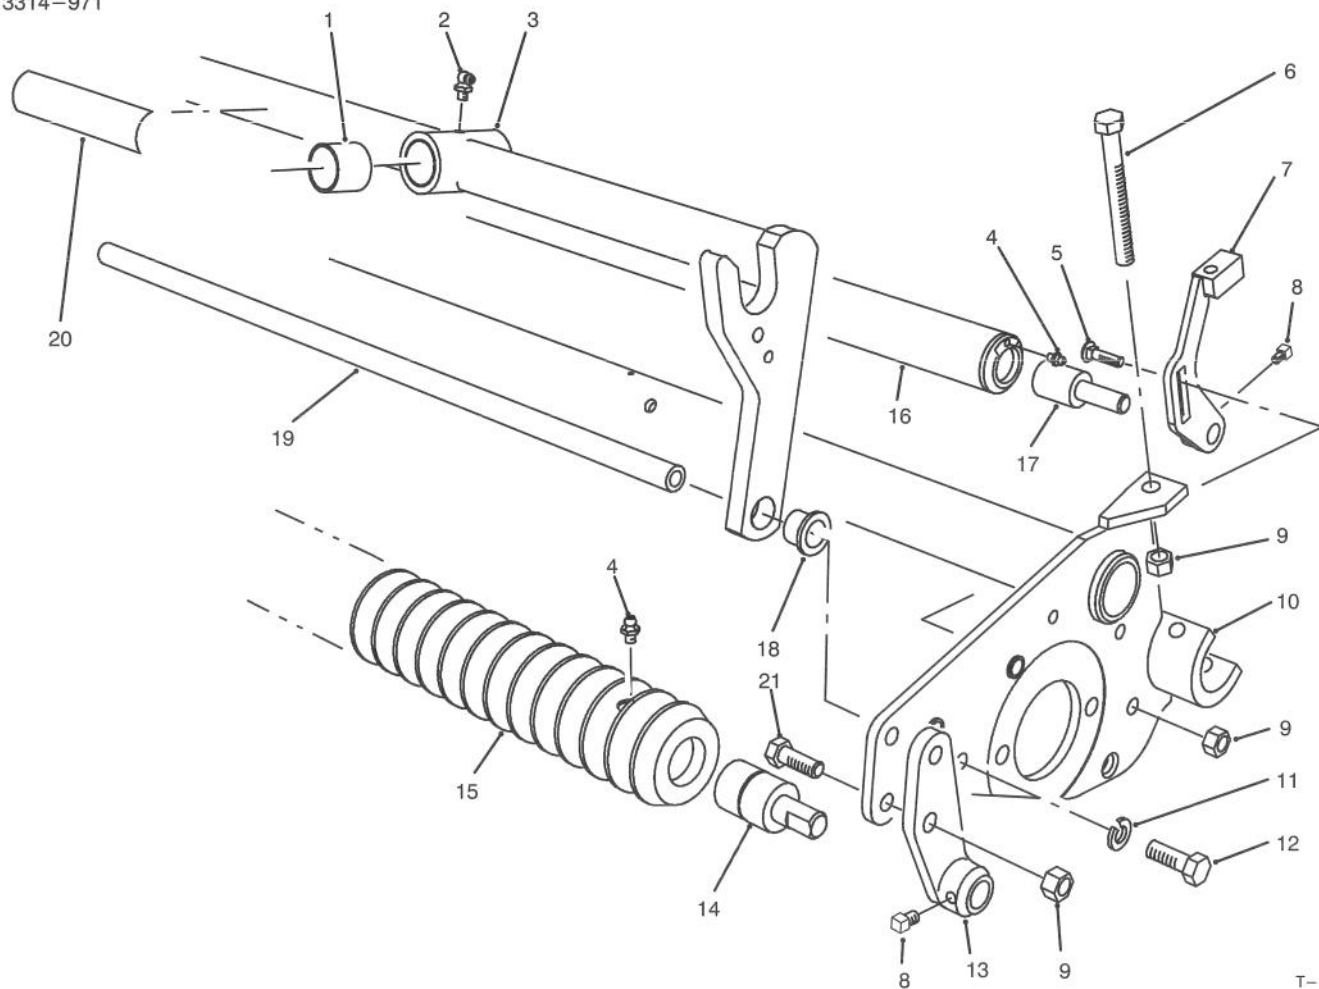

T-1061

ROLLER ASSEMBLY


(5 Blade Cutting Unit Serial No. 20001 thru 20555) (8 Blade Cutting Unit Serial No. 20001 thru 21322)

Ref. No.	Part No.	Description	No. Used
1	67-1750	Bushing - Sleeve	2
2	302-60	Fitting - Grease	1
3	75-1600	Carrier Frame Assembly (Incl. Ref. #1, 2 & 18)	1
4	302-5	Fitting - Grease	4
5	3231-2	Bolt - Carriage	2
6	323-49	Screw - Cap Hex. Hd.	2
7	75-1620	Bracket - HOC Rear L.H.	1
*	75-1610	Bracket - HOC Rear R.H.	1
8	3242-1	Screw - Sq. Hd. Set	4
9	3296-39	Nut - Lock	8
10	75-6660	Cutting Unit Frame Assy. (Incl. Ref. #11, 12 & 19)	1
11	3253-21	Washer - Lock	2

Ref. No.	Part No.	Description	No. Used
12	323-6	Screw - Cap Hex. Hd.	2
13	75-1980	Bracket - HOC Front L.H.	1
*	75-1960	Bracket - HOC Front R.H.	1
14	75-1290	Bearing Assembly	2
15	75-1520	Wiehle Roller Assembly (Incl. Ref. #4 & 12)	1
16	85-7220	Rear Roller Assembly (Incl. Ref. #4 & 17)	1
17	21-8430	Bearing Assembly	2
18	75-2160	Bearing - Flange	2
19	75-1710	Support - Cutting Unit	1
‡20	67-7960	Decal - Warning (English)	1
21	323-7	Screw - Cap Hex. Hd.	4

*Not Illustrated

 ‡For different language versions of this part, see International Decal Cross Reference.

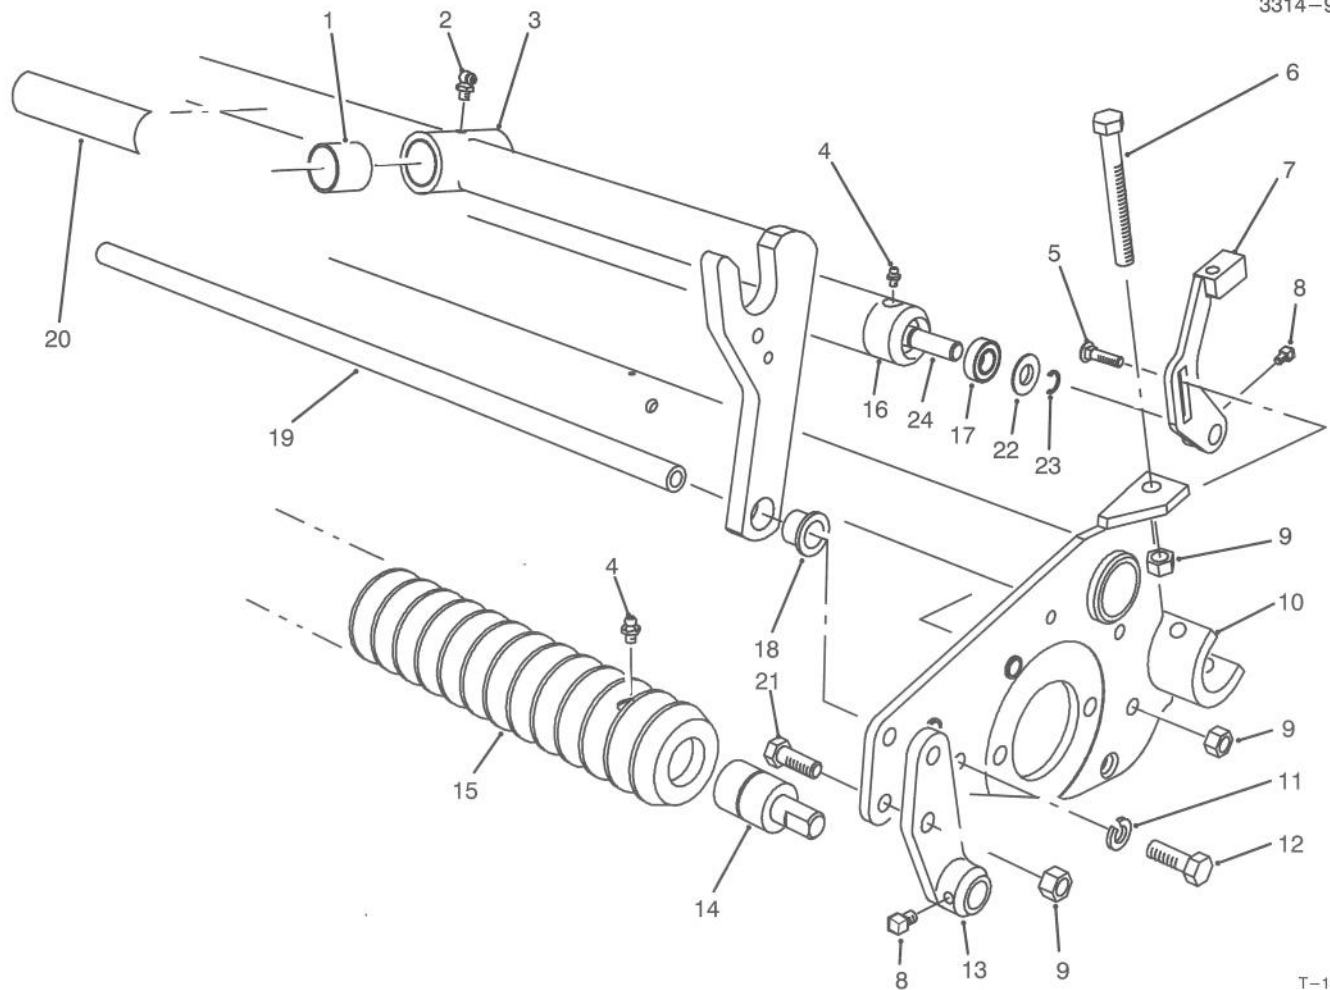

T-1439

ROLLER ASSEMBLY

(5 Blade Cutting Unit Serial No. 20556 & Up)


(8 Blade Cutting Unit Serial No. 21323 & Up)

Ref. No.	Part No.	Description	No. Used
1	67-1750	Bushing - Sleeve	2
2	302-60	Fitting - Grease	1
3	75-1600	Carrier Frame Assembly (Incl. Ref. #1, 2 & 18)	1
4	302-5	Fitting - Grease	4
5	3231-2	Bolt - Carriage	2
6	323-49	Screw - Cap Hex. Hd.	2
7	75-1620	Bracket - HOC Rear L.H.	1
*	75-1610	Bracket - HOC Rear R.H.	1
8	3242-1	Screw - Sq. Hd. Set	4
9	3296-39	Nut - Lock	8
10	75-6660	Cutting Unit Frame Assy. (Incl. Ref. #11, 12 & 19)	1
11	3253-21	Washer - Lock	2
12	323-6	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
13	75-1980	Bracket - HOC Front L.H.	1
*	75-1960	Bracket - HOC Front R.H.	1
14	75-1290	Bearing Assembly	2
15	75-1520	Wiehle Roller Assembly (Incl. Ref. #4 & 12)	1
16	85-7220	Rear Roller Assembly (Incl. Ref. #4, 17 & 22-24)	1
17	85-9970	Bearing Assembly	2
18	75-2160	Bearing - Flange	2
19	75-1710	Support - Cutting Unit	1
‡20	67-7960	Decal - Warning (English)	1
21	323-7	Screw - Cap Hex. Hd.	4
22	85-7190	Washer - Shield	2
23	32151-12	Ring - Retaining	2
24	85-7180	Shaft - Roller	1

*Not Illustrated

 ‡For different language versions of this part, see International Decal Cross Reference.

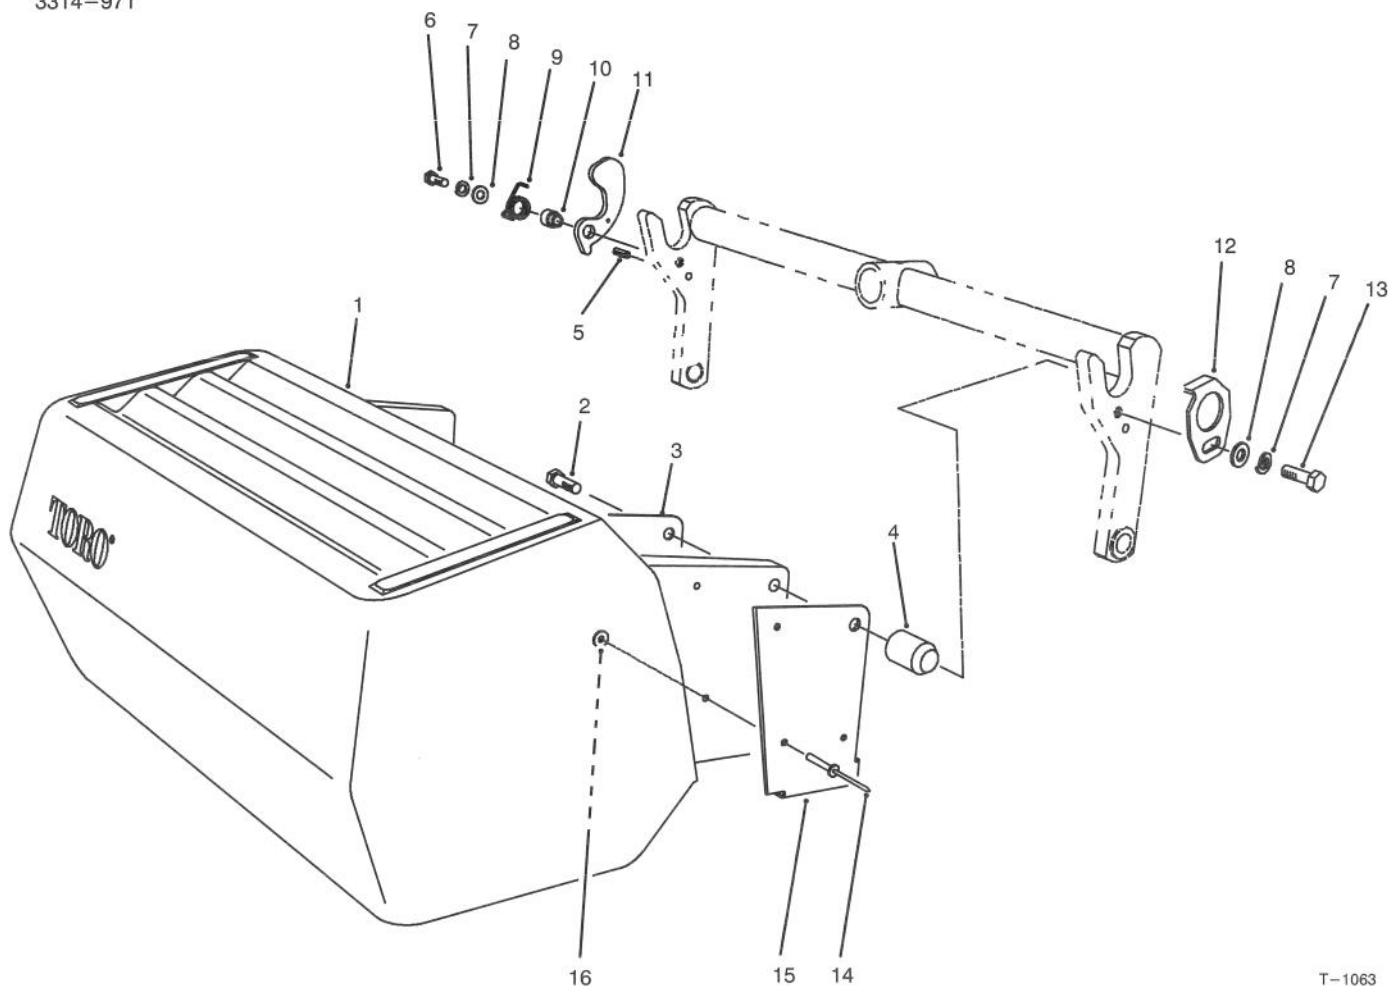

T-1063


GRASS BASKET ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75-4010	Basket - Grass	1
2	323-6	Screw - Cap Hex. Hd.	2
3	75-4030	Support - Basket Inner L.H.	1
*	75-4020	Support - Basket Inner R.H.	1
4	75-3930	Pin - Basket	2
5	32121-11	Pin - Roll	1
6	322-6	Screw - Cap Hex. Hd.	1
7	3253-4	Washer - Lock	2
8	3256-71	Washer - Flat	2

Ref. No.	Part No.	Description	No. Used
9	75-3970	Spring - Torsion R.H.	1
*	75-3960	Spring - Torsion L.H.	1
10	75-3940	Collar - Basket	1
11	75-3950	Bracket - Basket	1
12	75-3920	Guide - Basket	1
13	322-1	Screw - Cap Hex. Hd.	1
14	3269-28	Rivet - Pop	10
15	75-4040	Support - Basket Outer L.H.	1
*	75-4050	Support - Basket Outer R.H.	1
16	3256-49	Washer - Flat	10

*Not Illustrated

 Note: Front left, center, and rear right assemblies shown.

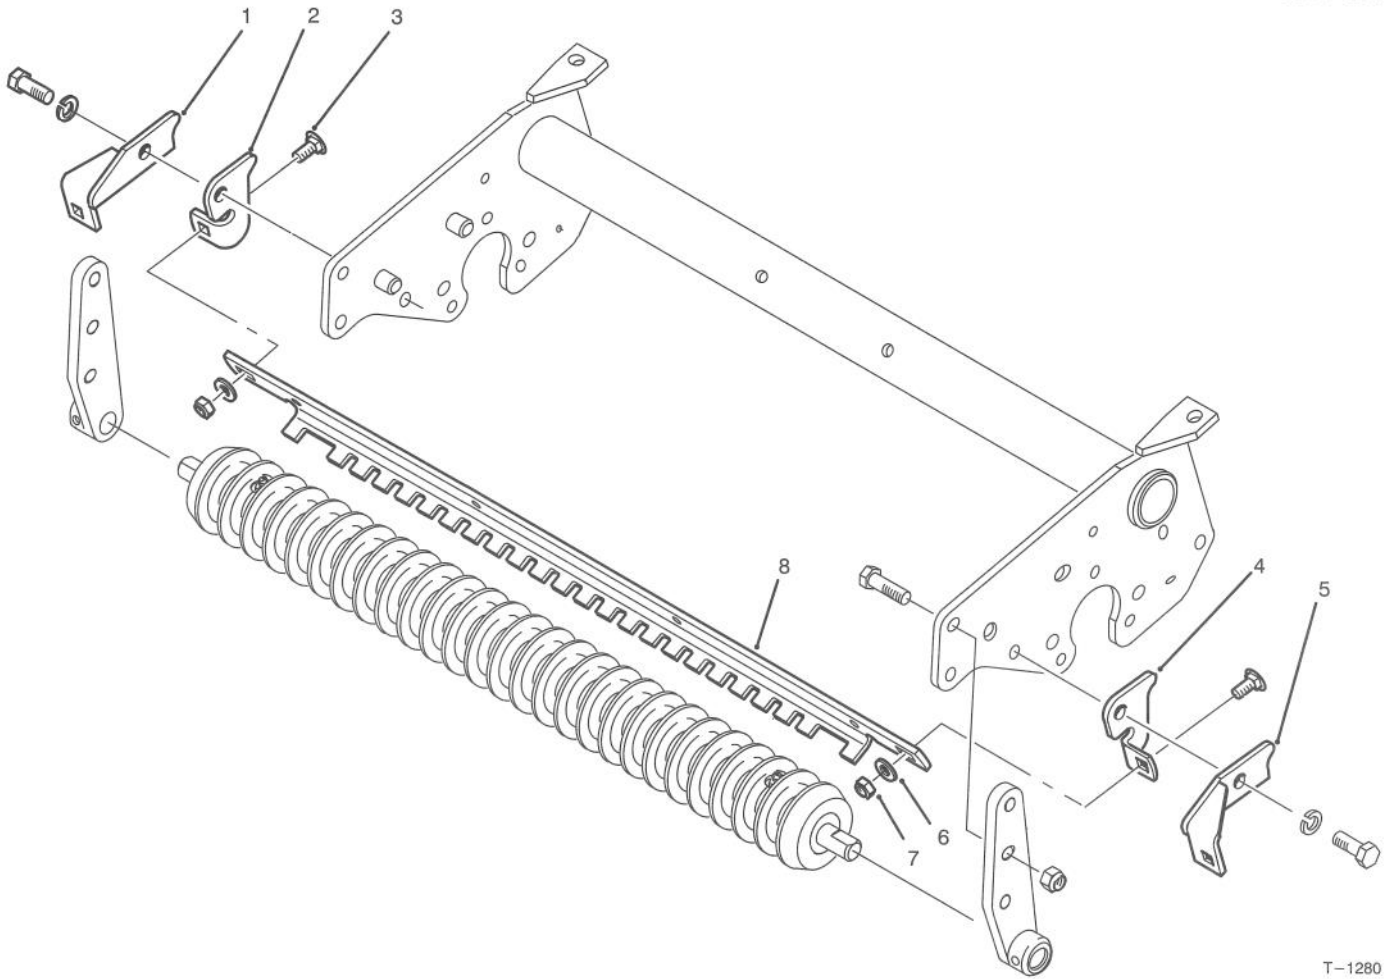


FRONT ROLLER SCRAPER KIT NO. 83-5400 (Optional)

Ref. No.	Part No.	Description	No. Used
1	83-6950	Bracket - Scraper R.H.	1
2	83-6930	Bracket - Scraper R.H.	1
3	3230-1	Bolt - Carriage	2
4	83-6940	Bracket - Scraper L.H.	1

Ref. No.	Part No.	Description	No. Used
5	83-6980	Bracket - Scraper L.H.	1
6	3256-23	Washer - Flat	2
7	3296-29	Nut - Lock	2
8	82-6830	Bracket - Scraper	1

 NOTE: Quantities listed per cutting unit.

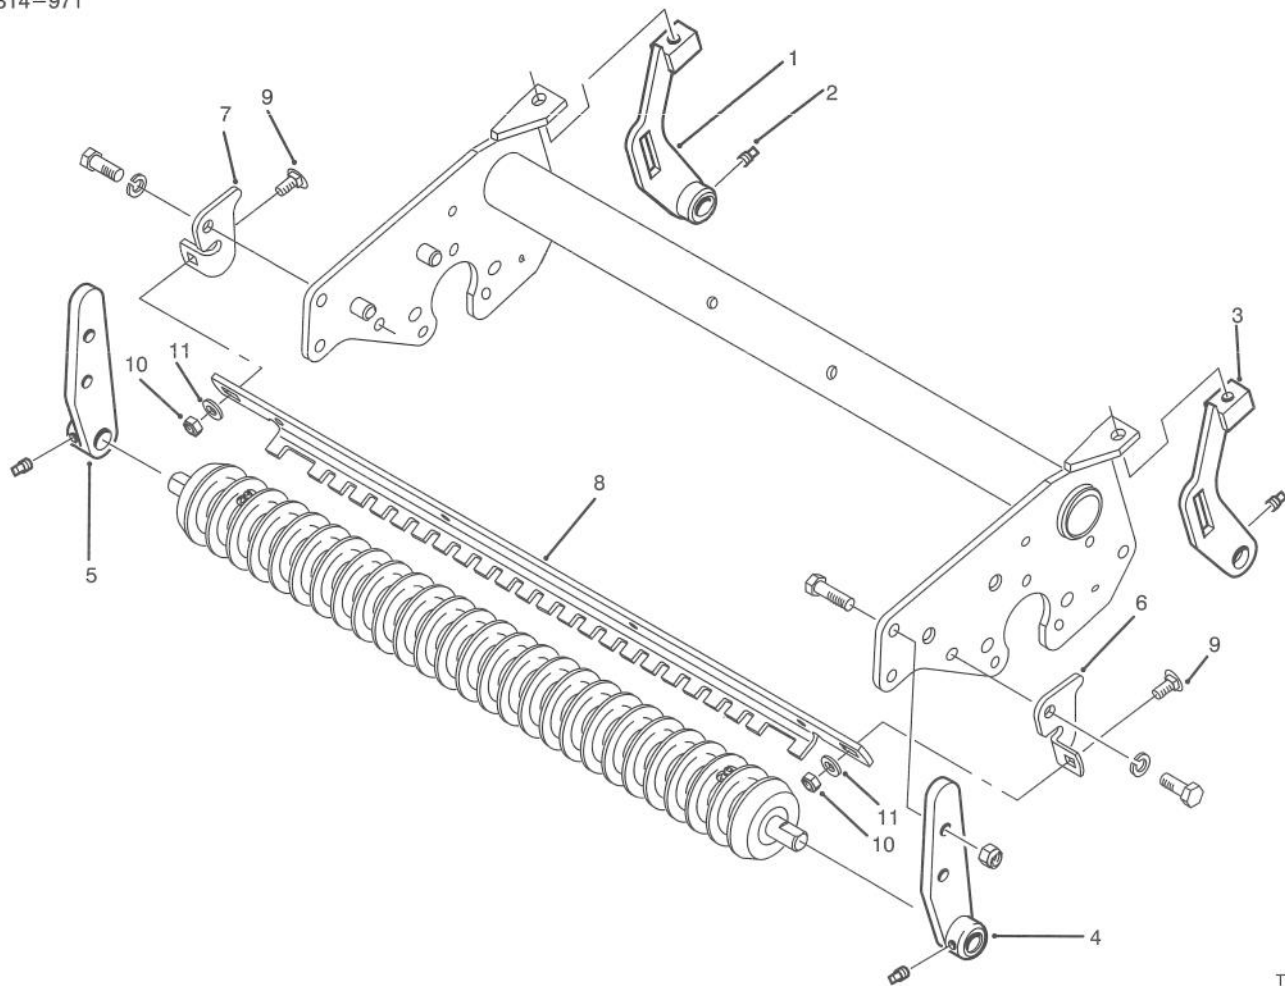


T-1308

HIGH HEIGHT-OF-CUT KIT NO. 83-5300 (Optional)

Ref. No.	Part No.	Description	No. Used
1	83-5210	H.O.C. - Right Rear	5
2	3242-1	Screw - Set Sq. Hd.	20
3	83-5230	H.O.C. - Left Rear	5
4	83-5250	Support - Front L.H.	5
5	83-5240	Support - Front R.H.	5
*6	83-4880	Bracket - High Scraper L.H.	5

Ref. No.	Part No.	Description	No. Used
*7	83-4870	Bracket - High Scraper R.H.	5
*8	82-6830	Bracket - Scraper	5
*9	3230-1	Bolt - Carriage	10
*10	3296-29	Nut - Lock	10
*11	3256-23	Washer - Flat	10

 *Not Included with Kit. These parts are required to install a front roller scraper when using the High Height-of-Cut Kit.

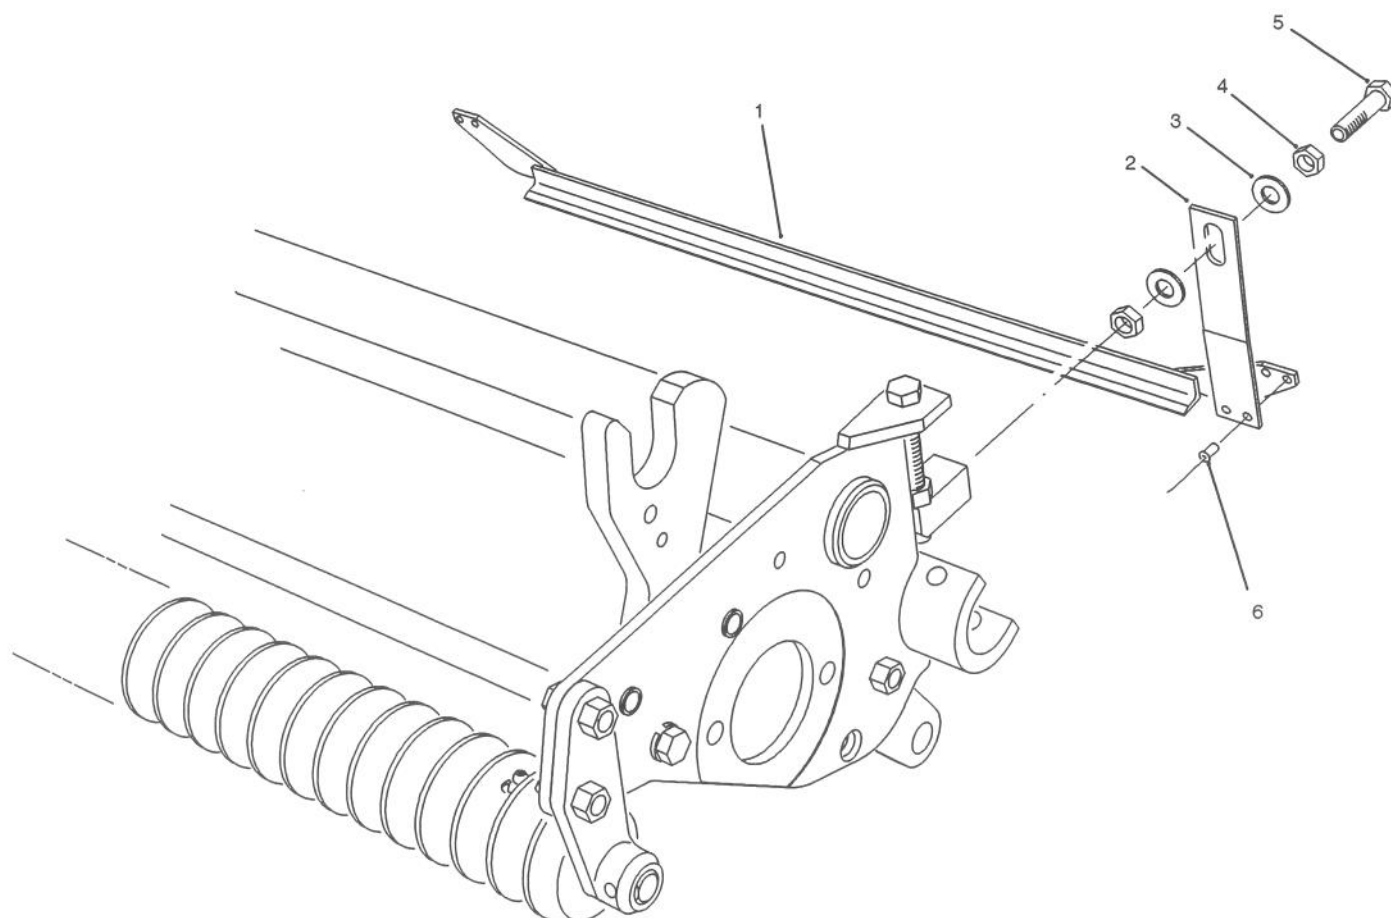


T-1096

ROLLER SCRAPER KIT MODEL NO. 03512 (Optional)

Ref. No.	Part No.	Description	No. Used
1	75-1750	Scraper - Roller	1
2	75-1740	Spring - Scraper	2
3	3256-24	Washer - Flat	4

Ref. No.	Part No.	Description	No. Used
4	3218-3	Nut - Jam	4
5	323-50	Screw - Cap Hex. Hd.	2
6	3269-3	Rivet - Pop	4

 NOTE: Quantities listed per cutting unit.
 *Not Illustrated

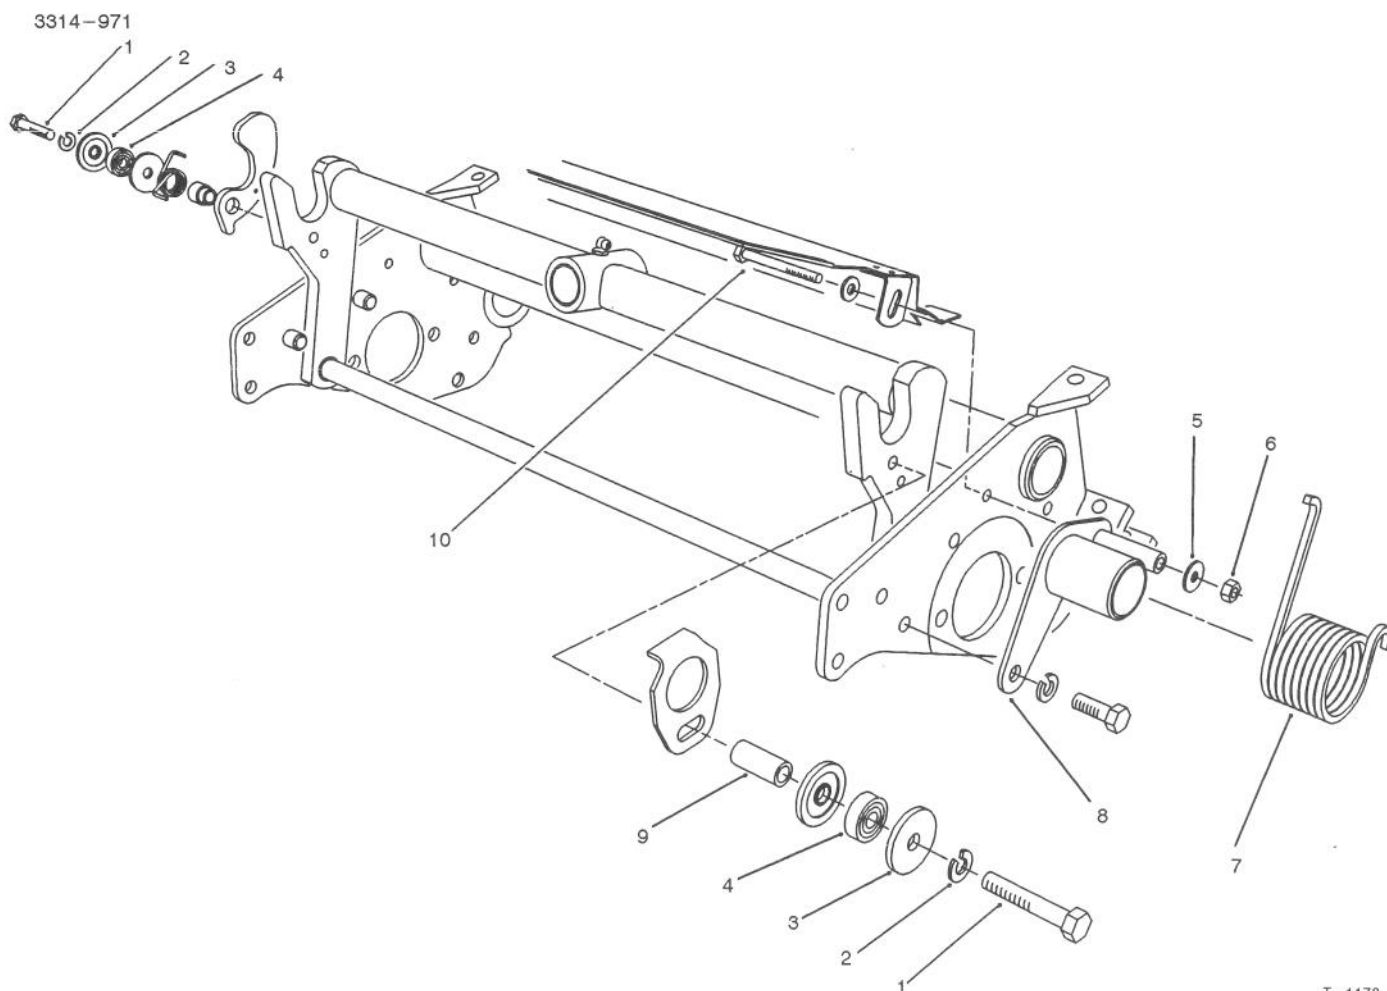

T-1178


TURF COMPENSATION KIT MODEL NO. 03510 (Optional)

Ref. No.	Part No.	Description	No. Used
1	322-9	Screw - Cap Hex. Hd.	10
2	3253-4	Washer - Lock	10
3	82-6890	Washer - Special	20
4	251-259	Bearing	10
5	3256-78	Washer - Flat	10
6	3296-42	Nut - Lock	10

Ref. No.	Part No.	Description	No. Used
7	83-4730	Spring - Torsion L.H.	5
*	83-4720	Spring - Torsion R.H.	5
8	83-4710	Plate - Spring L.H.	5
*	83-4700	Plate - Spring R.H.	5
9	82-6840	Spacer	10
10	321-23	Screw - Cap Hex. Hd.	10

Note: Front left, center, and rear right assemblies shown.

 
*Not Illustrated

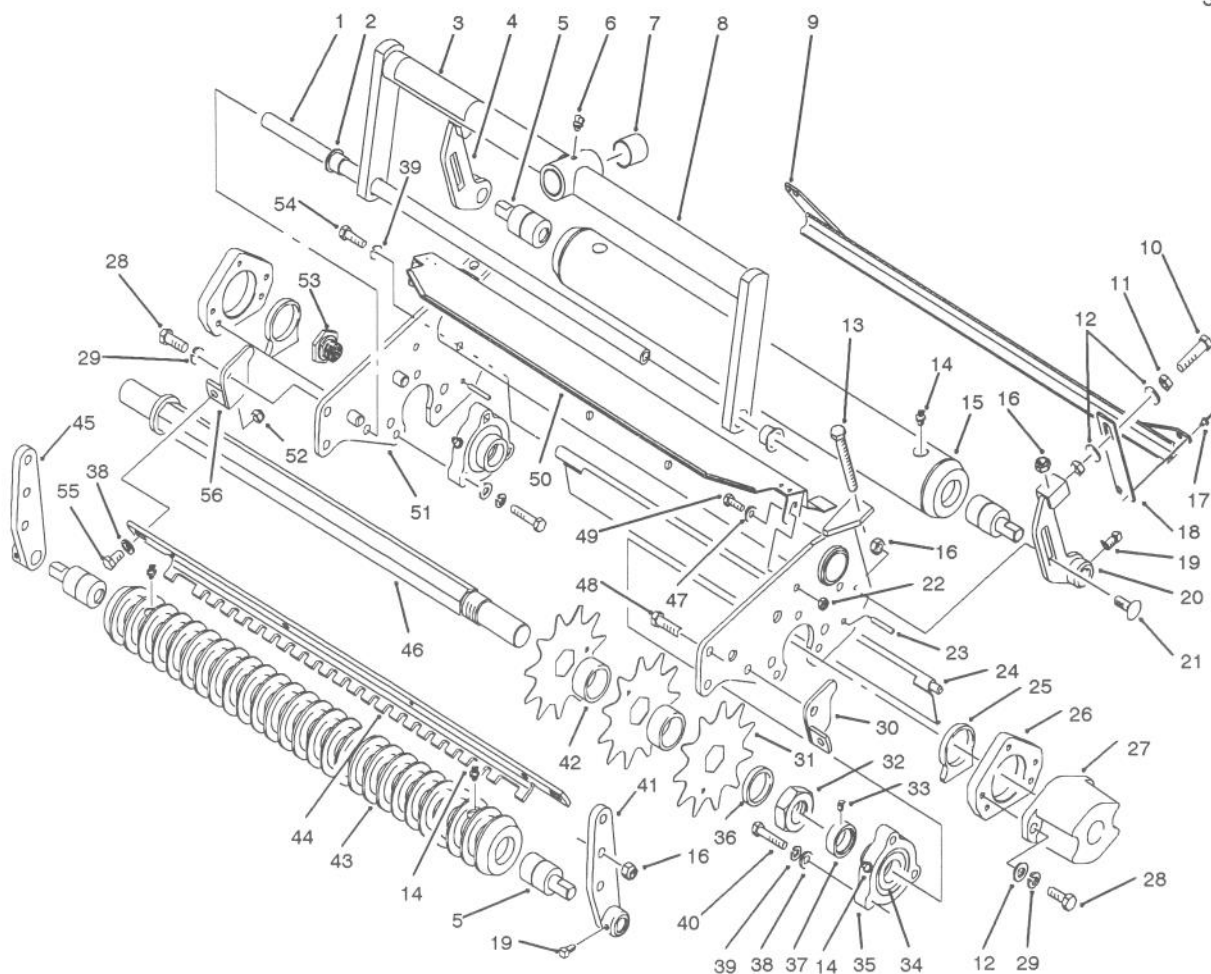

T-1241

DETHATCHER ASSEMBLY MODEL NO. 03516 (Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	75-1710	Support	1	21	3231-3	Bolt - Carriage	2
2	75-2160	Bushing - Flange	2	22	3296-42	Nut - Lock	2
3	67-7960	Decal - Warning	1	23	32121-12	Pin - Roll	2
4	82-6630	Bracket - H.O.C. R.H.	1	24	82-6780	Deflector - Rear	1
5	75-1290	Bearing	4	25	82-6820	Spacer - Bearing	2
6	302-60	Fitting - Grease	1	26	82-6810	Plate - Bearing	2
7	67-1750	Bushing - Axle	2	27	10-5080	Cap - End	1
8	82-6540	Frame W.A. - Carrier (Incl. Ref. #2, 6 & 7)	1	28	323-6	Screw - Cap Hex. Hd.	6
9	82-6740	Assy. - Scraper, Rear (Incl. Ref. #17 & 18)	1	29	3253-21	Washer - Lock	6
10	323-53	Screw - Cap Hex. Hd.	2	30	82-6880	Scraper - L.H.	1
11	3218-3	Nut - Hex. Jam	4	31	17-1590	Blade - 11 Tooth	24
12	3256-24	Washer - Flat	8	32	3220-18	Nut - Jam	1
13	323-49	Screw - Special	2	33	3245-35	Screw - Set	2
14	302-11	Fitting - Grease 45°	6	34	251-337	Bearing - Ball	2
15	82-6680	Assembly - Roller, Rear (Incl. Ref. #5 & 14)	1	35	76-2460	Assembly - Bearing (Incl. Ref. #14, 33-34 & 37)	2
16	3296-39	Nut - Lock	8	36	17-1600	Spacer	2
17	3269-3	Rivet - Pop	4	37	251-77	Collar - Lock	2
18	82-6770	Spring - Scraper	2	38	3256-23	Washer - Flat	8
19	3242-1	Screw - Set	4	39	3253-4	Washer - Lock	7
20	82-6650	Bracket - H.O.C. L.H.	1	40	322-7	Screw - Cap Hex. Hd.	6
				41	82-6530	Support H.O.C. - Left	1

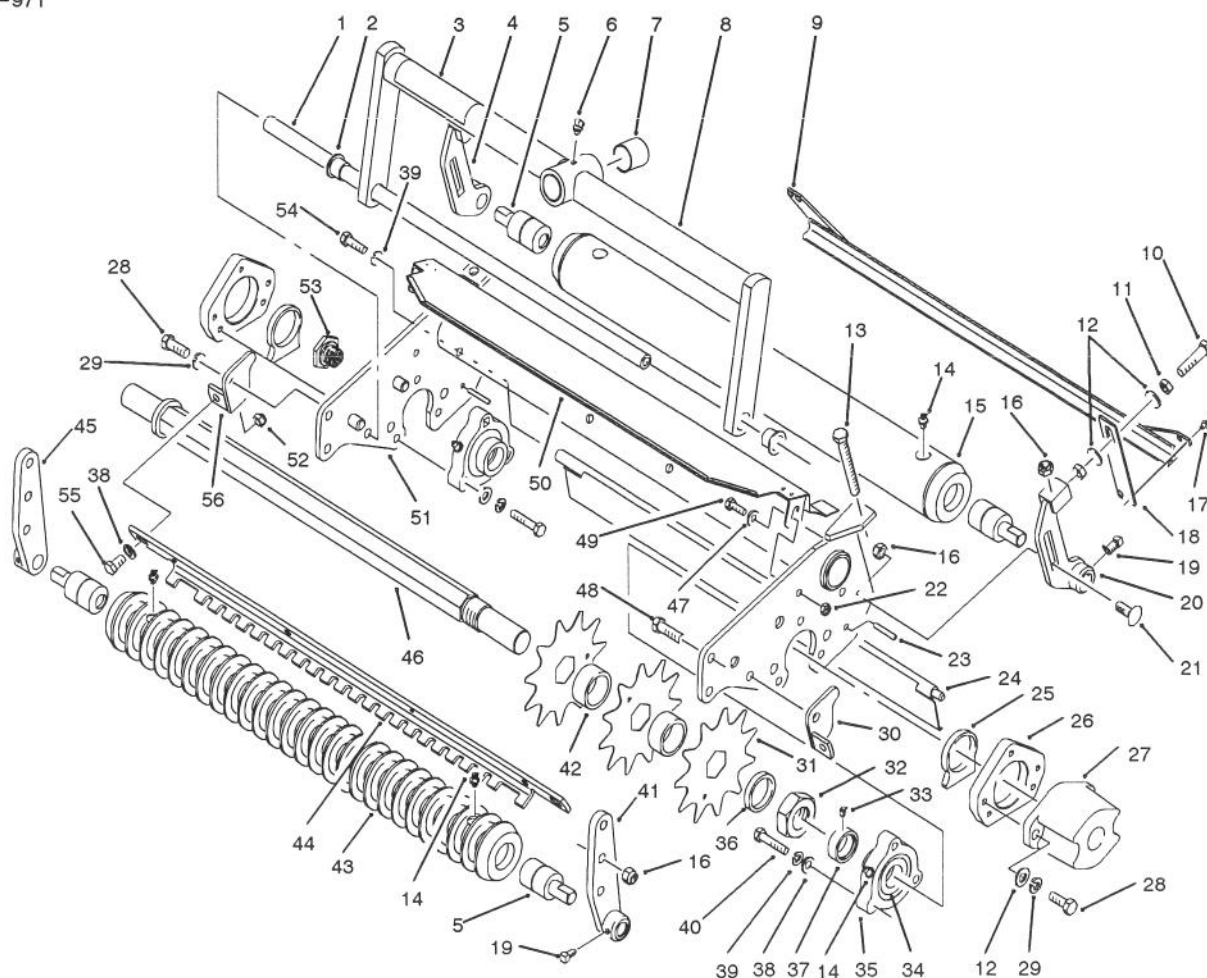 


T-1241

DETHATCHER ASSEMBLY MODEL NO. 03516 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
42	82-6600	Spacer	23
43	75-1520	Assembly - Roller, Wiehle (Incl. Ref. #5 & 14)	1
44	82-6830	Bracket - Scraper	1
45	82-6510	Support H.O.C. - Right	1
46	82-6570	Shaft - Reel	1
47	3256-1	Washer - Flat	2
48	323-7	Screw - Cap Hex. Hd.	4

Ref. No.	Part No.	Description	No. Used
49	321-4	Screw - Cap Hex. Hd.	2
50	75-1840	Assembly - Shield, Grass	1
51	82-6710	Assembly - Frame	1
52	3296-29	Nut - Lock	2
53	77-0340	Screw - Spline	1
54	322-5	Screw - Cap Hex. Hd.	1
55	322-3	Screw - Cap Hex. Hd.	2
56	82-6870	Scraper - RH	1

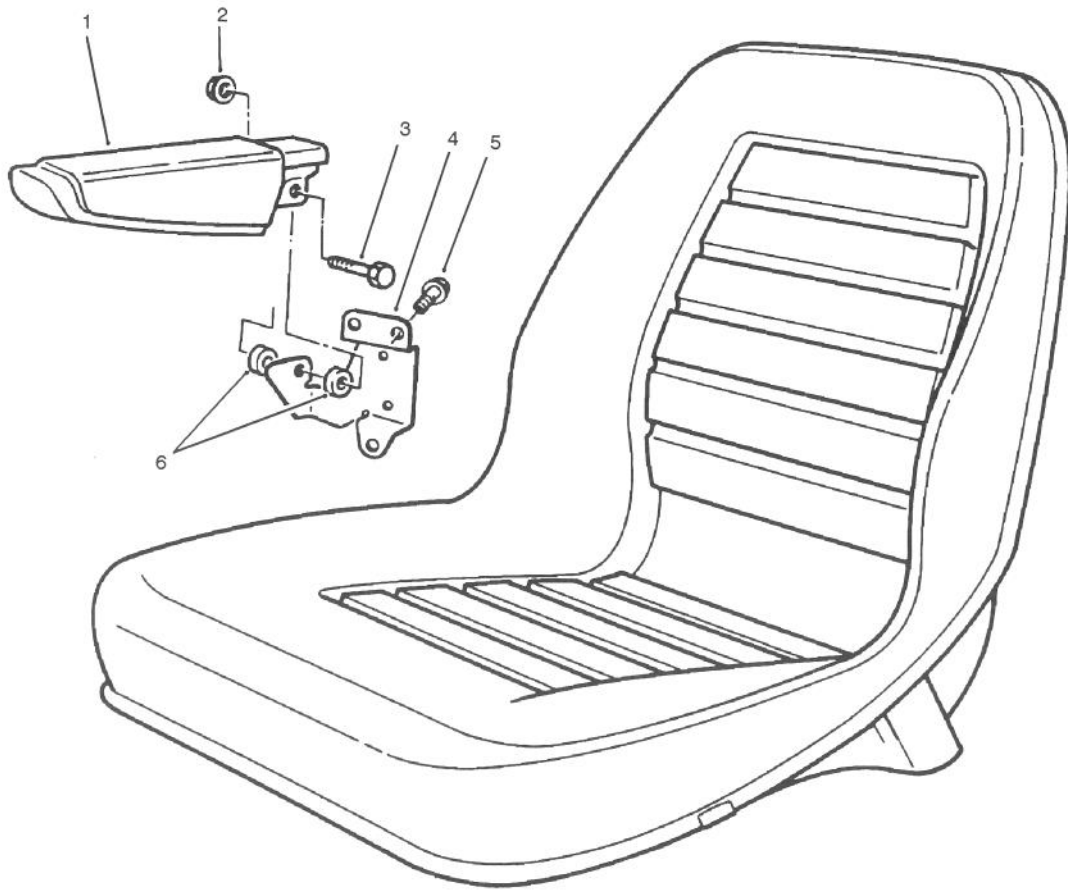 


T-0634

ARMREST KIT MODEL NO. 30707 (Optional)

Ref. No.	Part No.	Description	No. Used
1	69-1180	Armrest	2
2	32128-19	Nut - Flange Lock	2
3	323-9	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
4	69-0770	Bracket - Armrest R.H.	1
*	69-0760	Bracket - Armrest L.H.	1
5	3234-23	Screw - Hex. Flange Hd.	6
6	69-1260	Spacer	4

 *Not Illustrated

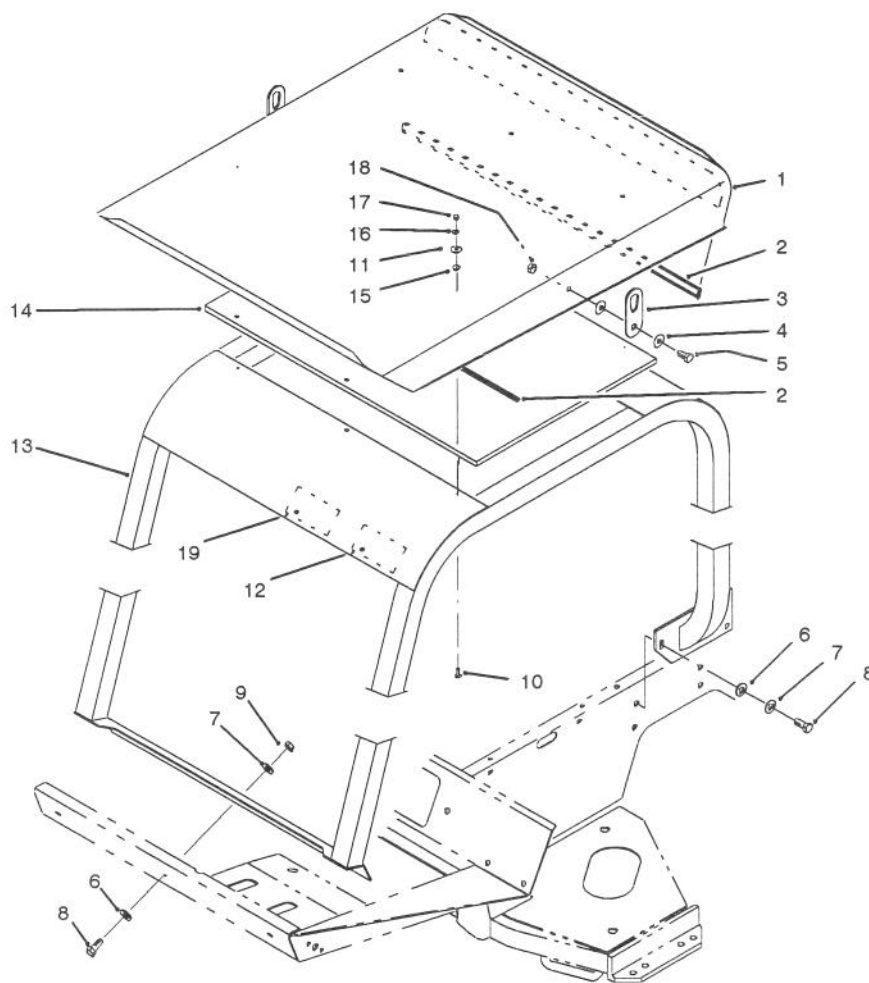

T-1304


R.O.P.S. ASSEMBLY (Optional)

Ref. No.	Part No.	Description	No. Used
1	83-7370	Roof	1
2	83-7390	Seal	2
3	83-7400	Ear - Lift	2
4	3256-24	Washer - Flat	4
5	323-6	Screw - Cap Hex. Hd.	2
6	3256-26	Washer - Flat	9
7	3253-7	Washer - Lock	9
8	325-5	Screw - Cap Hex. Hd.	9
9	3217-9	Nut - Lock	3
10	3250-45	Screw - Pan Hd.	6
11	3256-22	Washer - Flat	6

Ref. No.	Part No.	Description	No. Used
‡12	83-7430	Decal - Danger (English)	1
13	83-7410	Roll - Bar	1
14	83-7380	Insulation - Roof	1
15	83-7420	Washer - Rubber	6
16	3253-3	Washer - Lock	6
17	32111-7	Nut - Acorn	6
18	3296-39	Nut - Lock	2
19	85-9980	Decal - ROPS	1
*	21-4191	Seat Belt Assembly	1
*	3212-4	Screw - Cap Hex. Hd.	2
*	3253-6	Washer - Lock	2

*Not Illustrated

 ‡For different language versions of this part, see International Decal Cross Reference.

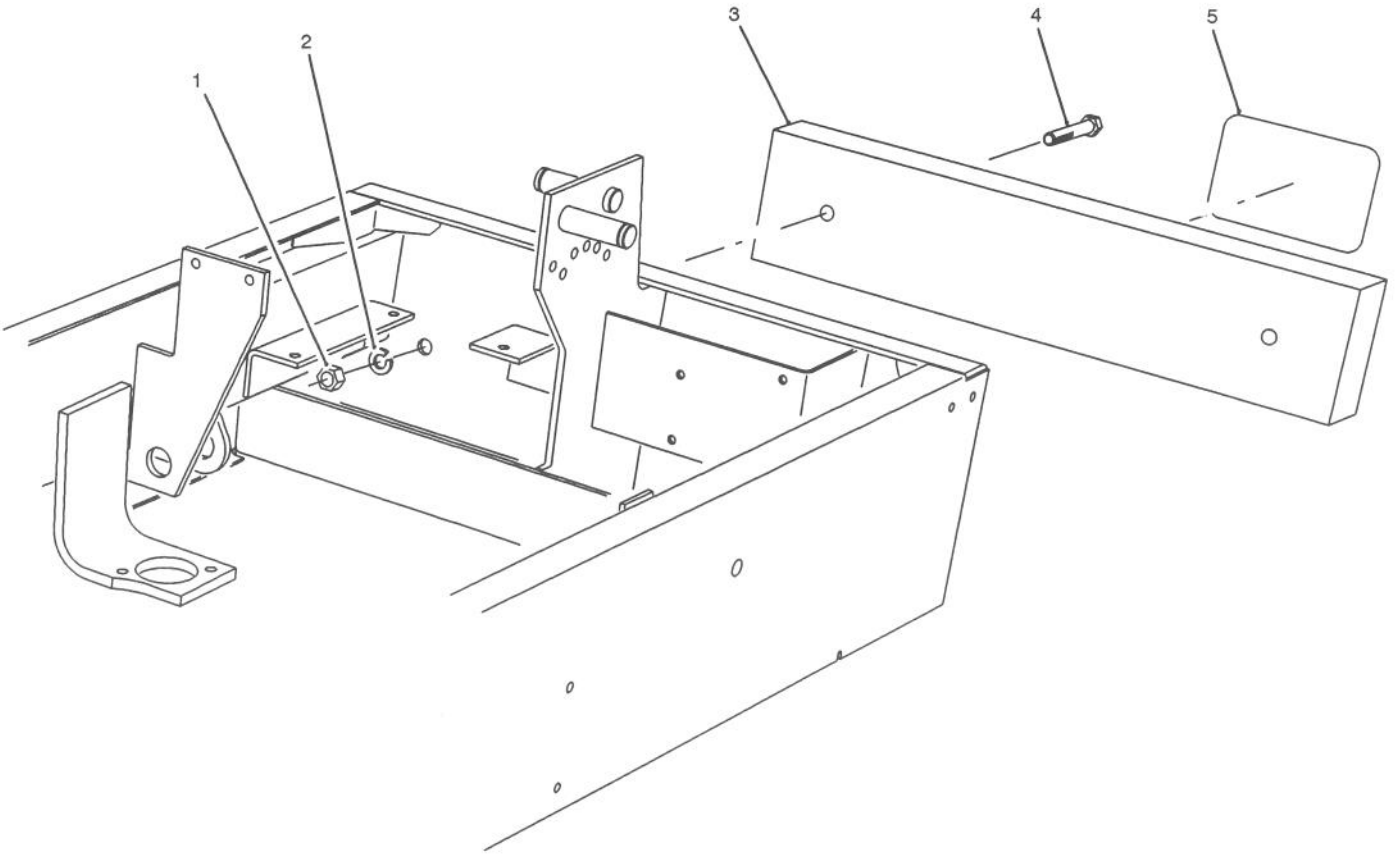

T-1152


WEIGHT KIT NO. 75-6690 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3217-9	Nut - Hex.	2
2	3253-27	Washer - Lock	2
3		Bar - Weight	1

Ref. No.	Part No.	Description	No. Used
4	325-8	Screw - Cap Hex. Hd.	2
5	62-5550	Decal - TORO	1

SPECIAL TOOLS

 
GAUGE BAR ASSEMBLY NO. 13-8199

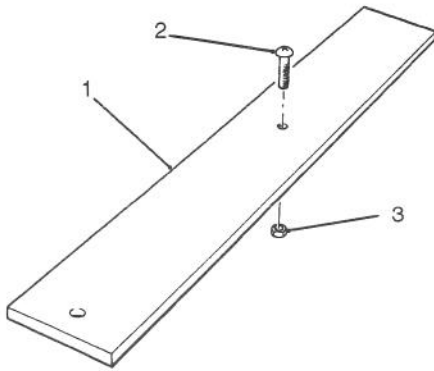

T-1151

Ref. No.	Part No.	Description	No. Used
1	65-8320	Bar - Height-Of-Cut	1
2	32122-22	Screw	1
3	3219-14	Nut - Hex.	1

 
BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

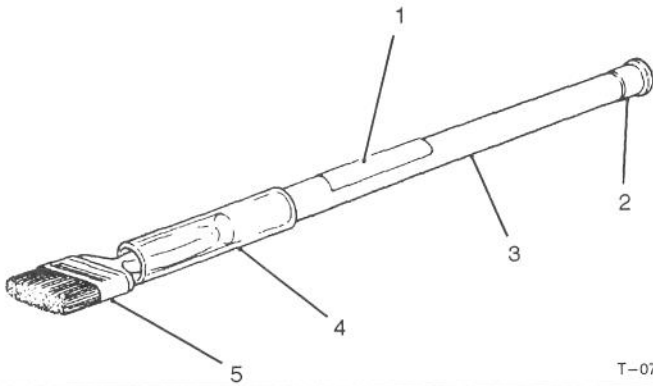

T-0731

Ref. No.	Part No.	Description	No. Used
1	12-9140	Decal	1
2	2410-18	Plug	1
3	29-9080	Handle	1
4	29-9090	Hose - Handle	1
5	36-4310	Brush	1

 
BEDKNIFE SCREW TOOL NO. *TOR510880

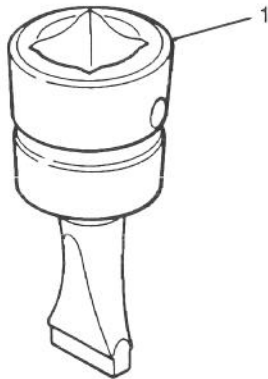

T-0729

Ref. No.	Part No.	Description	No. Used
1		Tool - Bedknife Screw	1

 HYDRAULIC MOTOR TOOLS

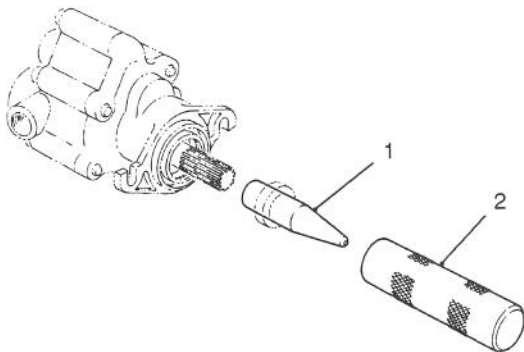


T-0727

Ref. No.	Part No.	Description	No. Used
1	*TOR491430	Protector - Seal	1
2	*TOR491450	Installer - Seal	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

SPECIAL TOOLS

 AXLE TOOL NO. *TOR859920

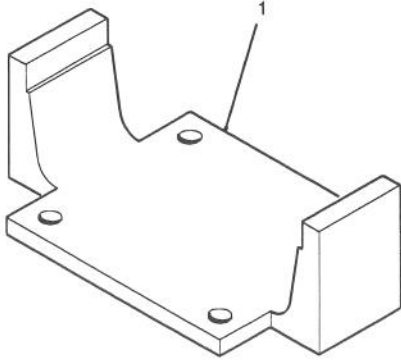

T-1325

Ref. No.	Part No.	Description	No. Used
1		Tool – Axle	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

INTERNATIONAL DECAL CROSS REFERENCE

JAPANESE DECAL KIT NO. 83-6880

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	JAPANESE
Decal No Step	Lift Arms	36-3400	84-2780
Decal Diesel Only	Left Fender	52-1320	84-2860
Decal Spring Loaded	Lift Arms	55-4300	84-2940
Decal ANSI	Tool Box Cover	88-6700 Ref. Only	92-1100
Decal No Starting Fluid	Air Cleaner	67-1700	84-3100
Decal Hydraulic Oil	Right Fender & Frame	85-4730	88-1980
Decal Backlap	Backlap Bracket	75-0750	84-3260
Decal Towing	Tool Box Cover	75-1280	84-3340
Decal No Riders	Fenders	75-5190	84-3420
Decal Fast/Slow	Steering Tower	75-6710	84-3500
Decal Reels	Under Seat Plate	85-4530	92-1108
Decal Slopes	Tool Box	75-7540	84-3660
Decal Bolt	Frame	77-0490	80-4880
Decal This End Down	Radiator Screen	83-7450	84-3820
Decal Knobs	Seat Plate	83-7440	84-3900
Decal Change Filter	Frame	75-0790	84-3980
Decal Fuses	Inside Control Box	85-4720	84-4060
Decal Reference Chart	Inside Tool Box	85-4740	92-1116
Decal Hands/Feet	Cutting Unit Frames	67-7960	84-4220
Decal Seat Belts	R.O.P.S. Roof	83-7430	84-4300
Decal Asbestos	Behind Front Wheels	75-0810	84-4310
Decal Floor Plate	Main Frame	88-0440	88-1900
Decal Instruction	Under Seat Plate	84-4610	92-1124

DANISH DECAL KIT NO. 83-6870

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	DANISH
Decal No Step	Lift Arms	36-3400	84-2770
Decal Diesel Only	Left Fender	52-1320	84-2850
Decal Spring Loaded	Lift Arms	55-4300	84-2930
Decal ANSI	Tool Box Cover	88-6700 Ref. Only	92-1101
Decal No Starting Fluid	Air Cleaner	67-1700	84-3090
Decal Hydraulic Oil	Right Fender & Frame	85-4730	88-2010
Decal Backlap	Backlap Bracket	75-0750	84-3250
Decal Towing	Tool Box Cover	75-1280	84-3330
Decal No Riders	Fenders	75-5190	84-3410
Decal Fast/Slow	Steering Tower	75-6710	84-3490
Decal Reels	Under Seat Plate	85-4530	92-1109
Decal Slopes	Tool Box	75-7540	84-3650
Decal Bolt	Frame	77-0490	84-3730
Decal This End Down	Radiator Screen	83-7450	84-3810
Decal Knobs	Seat Plate	83-7440	84-3890
Decal Change Filter	Frame	75-0790	84-3970
Decal Fuses	Inside Control Box	85-4720	84-4050
Decal Reference Chart	Inside Tool Box	85-4740	92-1117
Decal Hands/Feet	Cutting Unit Frames	67-7960	84-4210
Decal Seat Belts	R.O.P.S. Roof	83-7430	84-4290
Decal Asbestos	Behind Front Wheels	75-0810	84-4320
Decal Floor Plate	Main Frame	88-0440	88-1930
Decal Instruction	Under Seat Plate	84-4610	92-1125

INTERNATIONAL DECAL CROSS REFERENCE

DUTCH DECAL KIT NO. 83-6830

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	DUTCH
Decal No Step	Lift Arms	36-3400	84-2760
Decal Diesel Only	Left Fender	52-1320	84-2840
Decal Spring Loaded	Lift Arms	55-4300	84-2920
Decal ANSI	Tool Box Cover	88-6700 Ref. Only	92-1102
Decal No Starting Fluid	Air Cleaner	67-1700	84-3080
Decal Hydraulic Oil	Right Fender & Frame	85-4730	88-2050
Decal Backlap	Backlap Bracket	75-0750	84-3240
Decal Towing	Tool Box Cover	75-1280	84-3320
Decal No Riders	Fenders	75-5190	84-3400
Decal Fast/Slow	Steering Tower	75-6710	84-3480
Decal Reels	Under Seat Plate	85-4530	92-1110
Decal Slopes	Tool Box	75-7540	84-3640
Decal Bolt	Frame	77-0490	84-3720
Decal This End Down	Radiator Screen	83-7450	84-3800
Decal Knobs	Seat Plate	83-7440	84-3880
Decal Change Filter	Frame	75-0790	84-3960
Decal Fuses	Inside Control Box	85-4720	84-4040
Decal Reference Chart	Inside Tool Box	85-4740	92-1118
Decal Hands/Feet	Cutting Unit Frames	67-7960	84-4200
Decal Seat Belts	R.O.P.S. Roof	83-7430	84-4280
Decal Asbestos	Behind Front Wheels	75-0810	75-0820
Decal Floor Plate	Main Frame	88-0440	88-1970
Decal Instruction	Under Seat Plate	84-4610	92-1126

ITALIAN DECAL KIT NO. 83-6860

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	ITALIAN
Decal No Step	Lift Arms	36-3400	84-2750
Decal Diesel Only	Left Fender	52-1320	84-2830
Decal Spring Loaded	Lift Arms	55-4300	84-2910
Decal ANSI	Tool Box Cover	88-6700 Ref. Only	92-1103
Decal No Starting Fluid	Air Cleaner	67-1700	84-3070
Decal Hydraulic Oil	Right Fender & Frame	85-4730	88-2030
Decal Backlap	Backlap Bracket	75-0750	84-3230
Decal Towing	Tool Box Cover	75-1280	84-3310
Decal No Riders	Fenders	75-5190	84-3390
Decal Fast/Slow	Steering Tower	75-6710	84-3470
Decal Reels	Under Seat Plate	85-4530	92-1111
Decal Slopes	Tool Box	75-7540	84-3630
Decal Bolt	Frame	77-0490	84-3710
Decal This End Down	Radiator Screen	83-7450	84-3790
Decal Knobs	Seat Plate	83-7440	84-3870
Decal Change Filter	Frame	75-0790	84-3950
Decal Fuses	Inside Control Box	85-4720	84-4030
Decal Reference Chart	Inside Tool Box	85-4740	92-1119
Decal Hands/Feet	Cutting Unit Frames	67-7960	84-4190
Decal Seat Belts	R.O.P.S. Roof	83-7430	84-4270
Decal Asbestos	Behind Front Wheels	75-0810	75-0850
Decal Floor Plate	Main Frame	88-0440	88-1950
Decal Instruction	Under Seat Plate	84-4610	92-1127

INTERNATIONAL DECAL CROSS REFERENCE

SPANISH DECAL KIT NO. 83-6850

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SPANISH
Decal No Step	Lift Arms	36-3400	84-2740
Decal Diesel Only	Left Fender	52-1320	84-2820
Decal Spring Loaded	Lift Arms	55-4300	84-2900
Decal ANSI	Tool Box Cover	88-6700 Ref. Only	92-1104
Decal No Starting Fluid	Air Cleaner	67-1700	84-3060
Decal Hydraulic Oil	Right Fender & Frame	85-4730	88-2000
Decal Backlap	Backlap Bracket	75-0750	84-3220
Decal Towing	Tool Box Cover	75-1280	84-3300
Decal No Riders	Fenders	75-5190	84-3380
Decal Fast/Slow	Steering Tower	75-6710	84-3460
Decal Reels	Under Seat Plate	85-4530	92-1112
Decal Slopes	Tool Box	75-7540	84-3620
Decal Bolt	Frame	77-0490	84-3700
Decal This End Down	Radiator Screen	83-7450	84-3780
Decal Knobs	Seat Plate	83-7440	84-3860
Decal Change Filter	Frame	75-0790	84-3940
Decal Fuses	Inside Control Box	85-4720	84-4020
Decal Reference Chart	Inside Tool Box	85-4740	92-1120
Decal Hands/Feet	Cutting Unit Frames	67-7960	84-4180
Decal Seat Belts	R.O.P.S. Roof	83-7430	84-4260
Decal Asbestos	Behind Front Wheels	75-0810	75-0860
Decal Floor Plate	Main Frame	88-0440	88-1920
Decal Instruction	Under Seat Plate	84-4610	92-1128

GERMAN DECAL KIT NO. 83-6810

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	GERMAN
Decal No Step	Lift Arms	36-3400	84-2730
Decal Diesel Only	Left Fender	52-1320	84-2810
Decal Spring Loaded	Lift Arms	55-4300	84-2890
Decal ANSI	Tool Box Cover	88-6700 Ref. Only	92-1105
Decal No Starting Fluid	Air Cleaner	67-1700	84-3050
Decal Hydraulic Oil	Right Fender & Frame	85-4730	88-2040
Decal Backlap	Backlap Bracket	75-0750	84-3210
Decal Towing	Tool Box Cover	75-1280	84-3290
Decal No Riders	Fenders	75-5190	84-3370
Decal Fast/Slow	Steering Tower	75-6710	84-3450
Decal Reels	Under Seat Plate	85-4530	92-1113
Decal Slopes	Tool Box	75-7540	84-3610
Decal Bolt	Frame	77-0490	84-3690
Decal This End Down	Radiator Screen	83-7450	84-3770
Decal Knobs	Seat Plate	83-7440	84-3850
Decal Change Filter	Frame	75-0790	84-3930
Decal Fuses	Inside Control Box	85-4720	84-4010
Decal Reference Chart	Inside Tool Box	85-4740	92-1121
Decal Hands/Feet	Cutting Unit Frames	67-7960	84-4170
Decal Seat Belts	R.O.P.S. Roof	83-7430	84-4250
Decal Asbestos	Behind Front Wheels	75-0810	75-0840
Decal Floor Plate	Main Frame	88-0440	88-1960
Decal Instruction	Under Seat Plate	84-4610	92-1129

INTERNATIONAL DECAL CROSS REFERENCE

FRENCH DECAL KIT NO. 83-6920

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	FRENCH
Decal No Step	Lift Arms	36-3400	84-2720
Decal Diesel Only	Left Fender	52-1320	84-2800
Decal Spring Loaded	Lift Arms	55-4300	84-2880
Decal ANSI	Tool Box Cover	88-6700 Ref. Only	92-1106
Decal No Starting Fluid	Air Cleaner	67-1700	84-3040
Decal Hydraulic Oil	Right Fender & Frame	85-4730	88-2020
Decal Backlap	Backlap Bracket	75-0750	84-3200
Decal Towing	Tool Box Cover	75-1280	84-3280
Decal No Riders	Fenders	75-5190	84-3360
Decal Fast/Slow	Steering Tower	75-6710	84-3440
Decal Reels	Under Seat Plate	85-4530	92-1114
Decal Slopes	Tool Box	75-7540	84-3600
Decal Bolt	Frame	77-0490	84-3680
Decal This End Down	Radiator Screen	83-7450	84-3760
Decal Knobs	Seat Plate	83-7440	84-3840
Decal Change Filter	Frame	75-0790	84-3920
Decal Fuses	Inside Control Box	85-4720	84-4000
Decal Reference Chart	Inside Tool Box	85-4740	92-1122
Decal Hands/Feet	Cutting Unit Frames	67-7960	84-4160
Decal Seat Belts	R.O.P.S. Roof	83-7430	84-4240
Decal Asbestos	Behind Front Wheels	75-0810	75-0830
Decal Floor Plate	Main Frame	88-0440	88-1940
Decal Instruction	Under Seat Plate	84-4610	92-1130

SWEDISH DECAL KIT NO. 83-6840

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SWEDISH
Decal No Step	Lift Arms	36-3400	84-2710
Decal Diesel Only	Left Fender	52-1320	84-2790
Decal Spring Loaded	Lift Arms	55-4300	84-2870
Decal ANSI	Tool Box Cover	88-6700 Ref. Only	92-1107
Decal No Starting Fluid	Air Cleaner	67-1700	84-3030
Decal Hydraulic Oil	Right Fender & Frame	85-4730	88-1990
Decal Backlap	Backlap Bracket	75-0750	84-3190
Decal Towing	Tool Box Cover	75-1280	84-3270
Decal No Riders	Fenders	75-5190	84-3350
Decal Fast/Slow	Steering Tower	75-6710	84-3430
Decal Reels	Under Seat Plate	85-4530	92-1115
Decal Slopes	Tool Box	75-7540	84-3590
Decal Bolt	Frame	77-0490	84-3670
Decal This End Down	Radiator Screen	83-7450	84-3750
Decal Knobs	Seat Plate	83-7440	84-3830
Decal Change Filter	Frame	75-0790	84-3910
Decal Fuses	Inside Control Box	85-4720	84-3990
Decal Reference Chart	Inside Tool Box	85-4740	92-1123
Decal Hands/Feet	Cutting Unit Frames	67-7960	84-4150
Decal Seat Belts	R.O.P.S. Roof	83-7430	84-4230
Decal Asbestos	Behind Front Wheels	75-0810	75-0870
Decal Floor Plate	Main Frame	88-0440	88-1910
Decal Instruction	Under Seat Plate	84-4610	92-1131

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-3251	Spring - Compression	3 12 1	27-7140	Baffle	52 2 1
3-6498	Washer - Thrust	59 21 4	27-7150	Cup Assembly	52 1 1
3-6498	Washer - Thrust	29 22 2	27-7160	Decal - Instructions	51 5 1
3-6498	Washer - Thrust	57 30 6	27-7170	Band Assembly	52 7 2
3-6657	Clamp - Cable	6 30 1	27-7220	Air Cleaner Soap	52 * 1
3-6657	Clamp - Cable	36 48 1	27-9560	Spacer	35 46 1
5-0652	Spacer	5 42 1	28-0660	Screw - Cap, Hex Hd.	26 21 8
5-0743	Spring - Counterbalance	59 1 2	28-0670	Seal - Oil	26 8 2
5-0743	Spring - Extension	57 22 3	28-0680	Drum - Brake	26 13 2
5-1096	Chain - Cutting Unit	59 27 2	28-1280	Boot - Cable	51 18 1
5-1226	Washer - Shim	54 8 A/R	29-6162	Switch - Neutral	29 6 1
5-1226	Washer - Thrust	55 48 1	29-9080	Handle	78 3 1
5-3637	Washer - Flat	35 23 1	29-9090	Hose - Handle	78 4 1
7-3900	Pad - Brake	5 26 2	30-2120	Screw - Cap Hex. Hd. L.H.	64 21 1
10-4930	Bedbar	64 23 1	33-1260	Cover Assembly	52 12 1
10-5080	Cap - End	73 27 1	33-1270	Bowl	52 11 1
10-5120	Housing - Bearing	64 14 2	36-3400	Decal - No Step (English)	58 62 2
10-6830	Stud - Drive	54 27 10	36-4310	Brush	78 5 1
10-8110	Washer - Thrust	54 9 2	36-7260	Bar - Cutoff	64 4 1
12-0450	Plug - Hole	64 19 1	38-3400	Guadr - Rubber	16 40 1
12-9140	Decal	78 1 1	42-6080	Shim - Axle	22 37 A/R
14-0649	Reel - 8 Blade	64 * 1	42-7080	Cap	40 2 2
14-0659	Reel - 5 Blade	64 26 1	42-7190	Bushing - Knock	44 33 2
14-0959	Hood	1 6 1	42-7210	Plug - Taper	39 19 1
17-1590	Blade - 11 Tooth	73 31 24	42-7290	Gasket - Drain	39 16 2
17-1600	Spacer	73 36 2	42-7510	Pipe	41 4 1
21-0140	Joint - Ball	54 35 2	42-7510	Pipe	41 9 1
21-0150	Joint - Ball L.H. Thread	54 39 2	42-7840	Key	40 20 1
21-2820	Hub - Rear Wheel	54 18 2	42-7860	Lock	37 33 12
21-4191	Seat Belt Assembly	76 * 1	42-7870	Seal	37 30 6
21-7670	Case - Differential	25 33 1	42-8240	Gasket	46 6 3
21-7690	Gear - Pinion	24 6 2	42-8690	Metal - Sealing	48 37 1
21-7700	Shaft - Pinion Mate	25 31 1	42-8700	Wire	48 38 1
21-7710	Pin - Roll	25 30 1	42-8830	Seal - O-Ring	48 6 1
21-7720	Washer - Thrust	24 4 2	42-8830	Seal - O-Ring	48 10 1
21-7730	Washer - Thrust	24 7 2	42-9110	Gasket	41 21 1
21-7770	Screw - Drive Gear	25 32 5	42-9110	Gasket - Muffler	34 15 1
21-8020	Spacer - Front Pinion	25 25 1	42-9260	Plug - Drain	39 15 1
21-8090	Diff. Adjust. Shim .003	25 38 A/R	42-9420	Bolt - Speed Set	48 33 4
21-8100	Diff. Adjust. Shim .005	25 37 A/R	42-9430	Bolt W/Washer	41 7 1
21-8110	Diff. Adjust. Shim .010	25 36 A/R	42-9430	Bolt W/Washer	48 12 2
21-8120	Diff. Adjust. Shim .030	25 35 A/R	42-9440	Bolt W/Washer	39 8 11
21-8180	Bearing	26 3 2	42-9440	Bolt W/Washer	50 24 1
21-8230	Vent Tube Assembly	25 39 1	42-9440	Bolt W/Washer	37 25 4
21-8270	Pin - Dowel	24 3 2	42-9490	Bolt W/Washer	43 10 4
21-8320	Gasket - Bearing, Wheel	26 20 2	42-9490	Bolt W/Washer	40 11 2
21-8330	Seal - Oil	26 2 2	42-9490	Bolt W/Washer	39 18 18
21-8360	Clip - Retaining	26 12 2	42-9510	Bolt	38 42 1
21-8390	Cup - Bearing	25 24 1	42-9570	Stud	41 20 4
21-8430	Bearing Assembly	66 17 2	42-9590	Nut	37 17 6
21-9260	Seal - Shaft	3 27 1	42-9640	Nut - Jam	48 9 2
21-9370	Screw - Adjusting	26 16 2	42-9650	Nut - Jam	44 30 1
21-9380	Nut - Pivot	26 17 2	42-9660	Washer	50 4 1
21-9390	Socket - Adjusting Screw	26 15 2	42-9660	Washer	38 39 3
21-9420	Spring - Shoe Return, L.H.	26 19 2	42-9850	Washer - Lock	34 14 4
21-9430	Spring - Shoe Return, R.H.	26 7 2	42-9850	Washer - Lock	35 26 2
21-9440	Spring - Adjusting Screw	26 14 2	43-0090	Screw - Cap Hex. Hd.	34 20 3
21-9450	Shield - Dust	26 5 2	43-0370	Shim	50 5 1
21-9460	Retainer - Brake, Parking	26 10 4	43-0510	Spring - Brush	50 14 2
23-2270	Bushing - Rubber	29 26 1	43-1920	Nut Set	50 17 1
23-7270	Nut - Lug	22 1 10	43-2550	Filter	44 18 1
24-8790	Gear - Bevel, Differential	24 5 2	43-2560	Gasket - Side Cover	44 19 1
24-8840	Ring - Bearing, Wheel	26 22 2	43-2570	Gasket - Coil Side	44 17 1
24-9180	Lever, Brake, Parking	26 4 2	43-2580	Magnet	44 20 1
27-2360	Ignition Switch Assembly	11 19 1	43-2690	Pair of Lined Brake Shoes	26 * 2
27-3710	Dipstick - Axle	22 41 1	43-2690	Shoe & Lining Assembly	26 9 4
27-5340	Hose - Fuel	21 11 1	43-2710	Seal - O-Ring	41 36 2
27-6852	Shaft - Axle, Flanged R.H.	26 * 1	43-2740	Gasket	34 8 1
27-6862	Shaft - Axle, Flanged L.H.	26 1 1	43-2750	Nut - Lock	34 9 1
27-7110	Element Assembly	52 8 1	43-2820	Cap - Sealing	38 47 1
27-7120	Nut	52 3 1	43-2820	Cap - Sealing Torque Set	48 32 1
27-7130	Clamp Assembly	52 4 1	43-3160	Screw - Adjusting	38 44 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3314-971

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
43-3220	Screw - Cap Hex. Hd.	34 5 2	63-6720	Bracket - Fan Idler	35 41 1
43-5920	Washer - Lock	35 25 1	63-6760	Throttle Cable Swivel Assy.	6 29 2
43-5960	Nut - Special	38 46 1	63-6890	Hinge - Hood R.H.	1 * 1
43-5970	Nut - Hex.	35 24 1	63-6900	Hinge - Hood L.H.	1 15 1
43-6710	Diff. Adjust. Shim .003	24 15 A/R	63-7140	Mount - Engine	35 34 4
43-6711	Diff. Adjust. Shim .005	24 16 A/R	63-7380	Expansion Tank Assembly	51 6 1
43-6712	Diff. Adjust. Shim .010	24 17 A/R	63-7400	Washer - Flat	35 33 4
43-6713	Diff. Adjust. Shim .030	24 18 A/R	63-7430	Gauge - Temperature	11 8 1
43-6750	Cup-Bearing, Tapered	24 10 1	63-7440	Solenoid - Stop	34 10 1
43-6760	Cone-Bearing, tapered	24 9 1	63-7590	Relay - Starter	32 35 1
43-6800	Nut-Lock	26 18 8	63-7610	Hose - Fuel	21 1 1
43-6810	Spider-Torque	26 6 2	63-7610	Hose-Fuel	53 8 1
44-2210	Warning Light Assembly	11 6 1	63-7620	Hose-Fuel	53 4 1
44-2670	Hose - Fuel	21 19 1	63-7640	Unit - Sending	21 8 1
46-6550	Connector - Fuel Elbow 90°	21 21 1	63-7732	Cable - Brake R.H.	5 * 1
46-6560	Grommet	21 22 2	63-7733	Cable - Brake L.H.	5 29 1
46-8091	Screw - Cap Hex. Hd.	2 43 4	63-7790	Screw - Cap Hex. Hd.	35 11 8
47-0110	Spacer - Spindle	35 4 1	63-7880	Pin - Brake Latch	5 28 1
48-4220	Air Cleaner Assembly	51 4 1	63-7900	Rack - Parking Brake	3 20 1
48-4220	Air Filter Assembly	52 * 1	63-8140	Pulley - Idler	35 43 1
48-7430	Pre-Cleaner Assembly	52 * 1	63-8280	Head-Filter, Fuel	53 2 1
48-7700	Screw - Cap Hex. Hd.	35 17 1	63-8290	Vent-Air	53 3 1
48-7930	Nut - Lock	34 13 4	63-8300	Element-Spin-On	53 7 1
48-9570	Washer - Lock	34 6 2	63-8300	Fuel Filter Assembly	53 * 1
48-9590	Washer - Lock	35 12 10	63-8300	Fuel Filter Assembly	51 13 1
48-9590	Washer - Lock	34 21 1	63-8310	Valve-Drain	53 6 1
49-2040	Screw - Hex. Washer Hd.	18 25 4	63-8360	Key - Ignition	11 9 1
49-2040	Screw - Hex. Washer Hd.	2 47 2	63-8410	Washer - Flat	21 26 3
49-2040	Screw - Thread Forming	57 2 10	63-8410	Washer - Flat	14 37 3
49-2040	Screw - Thread Forming	60 41 5	63-8610	Bedknife	64 24 1
49-6440	Plate - Traction Pedal	5 11 1	65-5100	Handle	1 5 2
52-1320	Decal - Fuel (English)	1 28 1	65-8320	Bar - Height-Of-Cut	78 1 1
52-2860	Washer - Flat	7 51 4	66-2320	Bracket - Engine L.H. Front	35 36 1
53-8150	Fuel Pump Assembly	21 2 1	66-2330	Base - Battery	51 30 1
53-8150	Pump Assembly	47 * 1	66-2490	Clamp - Battery	51 22 1
53-8150	Pump Assembly	44 21 1	66-2920	Washer - Friction	6 31 2
54-8660	Washer	50 25 1	66-2940	Gauge - Fuel	11 1 1
54-9040	Yoke - End	34 26 1	66-2960	Cluster - Warning	11 7 1
54-9180	Kit - U-Joint	34 25 1	66-3180	Tube - Vent	32 22 1
55-4300	Decal - Warning (English)	57 33 3	66-3240	Cap - Radiator	32 8 1
55-4300	Decal - Warning (English)	59 37 2	66-5400	Seat Assembly	6 1 1
56-0020	Plug	40 24 3	66-8121	Standpipe - Elbow 90°	21 20 1
56-0020	Plug - Expansion	41 18 1	66-8520	Bumper - Down-stop	8 17 2
56-0020	Plug-Expansion	44 12 3	66-8530	Adjuster	8 16 1
56-0100	Plug - Taper	44 37 1	66-8560	Nut - Push	8 11 4
56-0220	Pin - Dowel	44 35 2	66-8610	Weldment - Lower	8 10 1
56-0480	Key - Woodruff	40 8 1	66-8800	Relay - Glow Plug	32 37 1
56-0480	Key - Woodruff	37 18 2	66-9290	Spacer	8 15 6
56-1060	Snap Ring	40 15 1	66-9770	Seal	4 28 1
56-1230	Shaft - Oil Filter	44 28 1	66-9780	Bushing	4 29 1
56-1570	Bolt Set	49 8 1	66-9850	Bolt-Special	4 36 4
56-1580	Armature Set	49 23 1	66-9860	Upper Cover & Jacket	4 37 1
56-1590	Bearing - Front	49 22 1	66-9870	Plate-Retaining	4 38 1
56-1600	Bearing - Rear	49 21 1	66-9880	Washer-Retaining Plate	4 39 1
56-1610	Bolt	49 16 1	66-9890	Ring-Retaining	4 40 1
56-1640	Stopper Set	49 13 1	66-9900	Shaft-Input	4 41 1
56-1670	Gear	49 10 1	66-9970	Spring Kit	4 * 1
56-1680	Cover Set	49 9 1	66-9980	Seal-Kit	4 * 1
56-1700	Holder - Brush	49 18 1	66-9990	Needle Roller Kit	4 * 1
56-1710	Spring - Brush	49 19 4	67-1630	Spacer - Fan	35 8 1
56-1720	Bracket - Rear	49 17 1	67-1690	Fitting - Fuel Elbow 90°	21 30 2
56-7974	Clamp - Tube	32 34 1	67-1700	Decal - Starting Fluid	51 3 1
57-3210	Screw - Special	64 30 4	67-1750	Bushing - Axle	73 7 2
57-4910	Screw - Bedknife	64 25 7	67-1750	Bushing - Sleeve	66 1 2
57-6390	Nut - Lock	35 27 2	67-1750	Bushing - Sleeve	67 1 2
61-2790	Screen - Filler	14 3 1	67-1750	Bushing - Sleeve	57 9 12
62-3820	Fitting - Grease	34 24 1	67-1750	Bushing - Sleeve	59 25 8
62-5550	Decal - TORO	1 1 1	67-1751	Bushing - Sleeve	54 10 6
62-5550	Decal - TORO	77 5 1	67-2200	Seal	40 4 4
62-6300	Sleeve Assembly	52 10 1	67-2210	Plug - Taper	44 36 3
62-7400	Decal - TORO	1 11 1	67-2230	Seal-Oil	44 14 1
62-7650	Gasket - Sending Unit	21 7 1	67-2250	Bolt	40 5 8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
67-2260	Shaft-Idler	44	34	1	67-3020	Gear	40	12	1
67-2270	Case - Oil Seal	44	15	1	67-3030	Bearing	40	9	2
67-2280	Gasket-Seal, Oil	44	13	1	67-3040	Plate	40	14	1
67-2290	Cover	44	10	1	67-3050	Bearing	40	22	1
67-2300	Gasket	44	9	1	67-3060	Shaft	40	21	1
67-2310	Plate - Front	39	6	1	67-3070	Gear	40	17	1
67-2320	Gasket - Plate	39	7	1	67-3080	Snap Ring	40	23	1
67-2330	Bolt	43	3	2	67-3090	Gear Assembly	40	13	1
67-2330	Bolt	44	16	6	67-3100	Retainer	37	32	6
67-2330	Bolt	41	34	4	67-3110	Spring	37	31	6
67-2330	Bolt	42	49	2	67-3120	Tappet	37	6	6
67-2340	Bolt W/Washer	39	3	3	67-3130	Valve - Intake	37	28	3
67-2340	Bolt W/Washer	44	11	2	67-3140	Valve - Exhaust	37	29	3
67-2340	Bolt W/Washer	41	17	4	67-3150	Rod-Push	37	5	6
67-2340	Screw - Hex. Washer Hd.	34	18	1	67-3160	Arm-Rocker	37	1	6
67-2350	Plug - Expansion	44	25	1	67-3170	Spring	38	40	2
67-2360	Bushing - Knock	44	26	2	67-3180	Cap	37	34	6
67-2370	Bushing - Knock	44	32	1	67-3190	Rocker Shaft Assembly	37	38	1
67-2380	Bushing - Knock	44	27	3	67-3200	Stay - Rocker	37	35	3
67-2390	Plug - Taper	44	24	1	67-3210	Screw - Adjusting	37	4	6
67-2410	Bearing Set 0.25 mm US	40	*	1	67-3220	Pin	37	37	1
67-2420	Bearing Set 0.50 mm US	40	*	1	67-3230	Nut - Jam	37	2	6
67-2430	Bracket - Starter	44	23	1	67-3240	Snap Ring	37	3	2
67-2440	Bolt W/Washer	44	22	3	67-3250	Bolt-Rocker Stay	38	43	2
67-2480	Gasket - Oil Pan	39	17	1	67-3260	Washer	50	3	1
67-2500	Plunger - Relief	39	25	1	67-3260	Washer	48	8	2
67-2510	Spring - Relief	39	26	1	67-3260	Washer	38	41	3
67-2520	Plug	39	28	1	67-3280	Shim 0.2 mm	44	38	1
67-2530	Gear - Inner	39	12	1	67-3290	Shim 0.3 mm	44	*	1
67-2540	Gear - Outer	39	11	1	67-3300	Shim 0.5 mm	44	*	1
67-2550	Housing - Oil Pump	39	10	1	67-3310	Shim 0.4 mm	44	*	1
67-2560	Bolt W/Washer	39	9	3	67-3320	Shim 0.6 mm	44	*	1
67-2570	Plug - Taper	41	19	1	67-3330	Shim 0.7 mm	45	38	1
67-2570	Plug - Taper	39	29	1	67-3340	Shim 0.8 mm	45	*	1
67-2580	Gasket - Case	39	2	1	67-3350	Shim 0.9 mm	45	*	1
67-2590	Seal - Oil	39	23	1	67-3360	Shim 1.0 mm	45	*	1
67-2600	Bolt	43	5	1	67-3370	Bolt W/Washer	45	39	4
67-2600	Bolt	39	21	3	67-3380	Nozzle & Holder Assembly	44	6	1
67-2610	Bolt	43	9	2	67-3380	Nozzle and Holder Assembly	47	*	3
67-2610	Bolt	39	22	4	67-3390	Gasket - Nozzle Holder	44	7	3
67-2620	Bolt	39	24	1	67-3400	Pipe Assy. No. 1	45	42	1
67-2630	Seal - O-Ring	39	20	2	67-3410	Pipe Assy. No. 2	45	43	1
67-2640	Cap	39	30	1	67-3420	Pipe Assy. No. 3	44	1	1
67-2650	Cap - Oil Filler	41	11	1	67-3430	Nut	44	2	3
67-2650	Oil Fill Cap Assembly	39	32	1	67-3440	Gasket	44	4	3
67-2660	Seal - O-Ring	41	10	1	67-3460	Housing-Pump	46	9	1
67-2660	Seal - O-Ring	39	31	1	67-3480	Seal - O-Ring	46	4	3
67-2670	Hose - Breather	41	8	1	67-3490	Spring	46	5	3
67-2680	Hanger - Engine	41	16	2	67-3500	Valve	46	7	3
67-2700	Guide - Valve	41	42	6	67-3520	Sleeve	46	10	3
67-2710	Cap - Sealing	41	41	3	67-3530	Seat - Spring Upper	46	11	3
67-2730	Bolt	41	43	8	67-3540	Spring	46	12	3
67-2740	Bolt - Flange	41	15	3	67-3550	Seat - Spring Lower	46	13	3
67-2750	Cover Assembly	41	6	1	67-3560	Plate - Shim 1.85 mm	46	14	1
67-2760	Gasket	41	14	1	67-3570	Plate - Shim 1.9 mm	46	*	1
67-2770	Nut - Cap	41	12	2	67-3580	Plate - Shim 1.95 mm	46	*	1
67-2780	Washer	41	13	2	67-3590	Plate - Shim 2.0 mm	46	*	1
67-2850	Rod Assembly-Connecting	37	9	3	67-3600	Plate - Shim 2.05 mm	46	*	1
67-2860	Bolt	37	12	6	67-3610	Plate - Shim 2.1 mm	46	*	1
67-2890	Bearing Set 0.25 mm US	37	*	3	67-3620	Plate - Shim 2.15 mm	46	*	1
67-2900	Bearing Set 0.50 mm US	37	*	3	67-3630	Plate - Shim 2.2 mm	46	*	1
67-2910	Gear	37	7	1	67-3640	Plate - Shim 2.25 mm	46	*	1
67-2920	Crankshaft	37	16	1	67-3650	Plate - Shim 2.3 mm	46	14	1
67-2930	Pulley - Crankshaft	37	19	1	67-3660	Plate - Shim 2.35 mm	46	*	1
67-2940	Nut - Jam	37	22	1	67-3670	Plate - Shim 2.4 mm	46	*	1
67-2950	Washer	37	20	1	67-3680	Plate - Shim 2.45 mm	46	*	1
67-2960	Washer - Lock	37	21	1	67-3690	Plate - Shim 2.5 mm	46	*	1
67-2970	Flywheel Assembly	37	13	1	67-3700	Tappet	46	15	3
67-2980	Gear - Ring	37	15	1	67-3710	Screw - Air Bleed	46	24	1
67-2990	Bolt	37	14	4	67-3720	Washer	46	23	1
67-3000	Washer	40	10	2	67-3730	Screw	46	22	1
67-3010	Cam Shaft	40	7	1	67-3740	Holder-Delivery Valve	46	3	3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3314-971

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
67-3740	Nipple - Swivel	46 21 1	67-4540	Seal - O-Ring	41 3 1
67-3750	Washer	46 20 2	67-4550	Gasket-Intake Manifold	41 44 1
67-3760	Plate - Lock	46 2 3	67-4560	Manifold - Exhaust	41 24 1
67-3770	Screw W/Washer	46 1 3	67-4570	Gasket - Exhaust Manifold	41 26 1
67-3780	Rack	46 19 1	67-4580	Bolt	41 22 2
67-3790	Screw	46 17 2	67-4590	Bolt	41 23 4
67-3800	Bracket - Wire Stop	46 18 1	67-4610	Bolt W/Washer	49 2 2
67-3810	Pin - Tappet Guide	46 16 3	67-4620	Spacer	50 21 1
67-3830	Washer 1.25 mm	46 31 1	67-4630	Alternator Assembly	50 1 1
67-3840	Washer 1.3 mm	47 31 1	67-4640	Bolt	50 22 1
67-3850	Washer 1.35 mm	47 * 1	67-4660	Bolt - Flange	50 26 1
67-3860	Washer 1.4 mm	47 * 1	67-4670	Nut	50 2 1
67-3870	Washer 1.45 mm	47 * 1	67-4680	Plug - Glow	41 39 3
67-3880	Washer 1.5 mm	47 * 1	67-4690	Plate - Glow Plug	41 40 1
67-3890	Washer 1.55 mm	47 * 1	67-4700	Lamp - Glow	41 27 1
67-3900	Washer 1.6 mm	47 * 1	67-4700	Resistor - Glow	32 44 1
67-3910	Washer 1.65 mm	47 31 1	67-4720	Lever	49 4 1
67-3920	Washer 1.7 mm	47 * 1	67-4730	Spring Set	49 5 1
67-3930	Spring	46 30 3	67-4750	Switch	49 7 1
67-3940	Pin - Pressure	46 29 3	67-4760	Shaft Assembly	49 15 1
67-3950	Piece - Distance	46 28 3	67-4770	Pinion Set	49 14 1
67-3960	Nozzle	46 27 3	67-4780	Gear Set	49 12 1
67-3970	Nut - Retaining	46 25 3	67-4790	Shaft	49 11 1
67-3980	Gasket	46 26 3	67-4800	Yoke	49 20 1
67-3990	Lever - Speed Control	48 1 1	67-4810	Pulley Set	50 16 1
67-4000	Pin	48 2 2	67-4820	Bolt Set	50 20 1
67-4010	Stopper	48 15 1	67-4830	Front Bracket Assembly	50 15 1
67-4030	Rod - Tie	48 23 1	67-4840	Screw Set	50 18 1
67-4040	Weight Assembly	48 13 1	67-4850	Bearing - Front	50 19 1
67-4050	Shaft - Governor	48 19 1	67-4860	Rotor Assembly	50 7 1
67-4060	Lever - Governor	48 18 1	67-4870	Bearing - Rear	50 6 1
67-4070	Shaft - Sliding	48 16 1	67-4880	Stator	50 10 1
67-4080	Clip	48 24 1	67-4890	Rear Cover Assembly	50 9 1
67-4090	Lever - Tension	48 21 1	67-4900	Terminal Set	50 11 1
67-4110	Cover Assembly	48 * 1	67-4910	Regulator Assembly	50 12 1
67-4120	Pin - Grooved	48 35 1	67-4920	Brush	50 13 2
67-4130	Cover - Governor	48 4 1	67-4930	Rectifier	50 8 1
67-4140	Lever - Stop	48 11 1	67-5040	Spring	48 20 1
67-4150	Lever - Stop	48 40 1	67-7160	Block - Fuse	11 21 1
67-4160	Gasket	48 5 1	67-7250	Spacer - Cylinder	54 13 1
67-4170	Spring Set	48 * 1	67-7960	Decal - Warning	73 3 1
67-4180	Nut	48 31 1	67-7960	Decal - Warning (English)	66 20 1
67-4190	Spring - Torque	48 28 1	67-7960	Decal - Warning (English)	67 20 1
67-4200	Nut - Special	48 30 1	67-9410	Washer - Thrust	54 29 2
67-4210	Case - Torque Spring	48 26 1	67-9550	Kit - Seat Cushion	6 45 1
67-4220	Screw - Adjusting	48 29 1	67-9560	Shell - Seat	6 2 1
67-4230	Stopper	48 27 1	68-5140	Cap - Steering Wheel	3 7 1
67-4270	Bolt	48 3 4	68-5370	Decal - TORO	3 5 1
67-4280	Bolt W/Washer	48 17 1	68-6150	Breather - Hydraulic Tank	14 2 1
67-4290	Nut	48 34 4	69-0760	Bracket - Armrest L.H.	75 * 1
67-4310	Gasket	37 23 1	69-0770	Bracket - Armrest R.H.	75 4 1
67-4330	Oil Filter Assembly	45 40 1	69-1180	Armrest	75 1 2
67-4340	Screen Assembly	44 31 1	69-1260	Spacer	75 6 4
67-4350	Switch - Oil Pressure	43 8 1	69-4320	Fitting - Hydraulic 90°	16 25 1
67-4360	Pulley - Water Pump	43 1 1	69-4780	Clamp - Light Cluster	12 42 1
67-4380	Water Pump Assembly	43 6 1	70-2780	Piston	61 4 1
67-4390	Gasket - Water Pump	43 7 1	70-2780	Piston	63 4 1
67-4400	Bolt	41 1 2	70-8220	Cable - Ground	35 31 1
67-4400	Bolt	43 4 1	70-8530	Wire - Fuel Pump	21 28 1
67-4410	V-Belt	43 2 1	70-8560	Retainer - Glow Resistor	32 45 1
67-4420	Fitting - Water	42 46 1	70-8570	Breaker - Circuit	12 * 2
67-4430	Gasket - Fitting	42 45 1	70-8620	Cap - Fuel Tank (Green)	21 23 1
67-4440	Thermostat	41 38 1	70-8621	Cap - Fuel Tank (Black)	21 * 1
67-4450	Fitting - Thermostat	41 32 1	70-8640	Cap - Hydraulic Reservoir	14 8 1
67-4460	Gasket - Switch	41 31 1	70-8700	Pipe - Fuel Return	44 3 1
67-4470	Bolt	41 33 1	70-8720	Spring - Tie Rod	48 22 1
67-4480	Pipe - By-Pass	41 37 1	70-8760	Starter Assembly	49 1 1
67-4490	Gasket	41 30 1	70-8770	Bracket - Front	49 3 1
67-4500	Switch - Thermo	41 29 1	70-8780	Bracket - Center	49 6 1
67-4510	Gauge Nut - Temperature	41 35 1	70-8870	Guide - Oil Level	44 8 1
67-4520	Pipe	41 2 1	70-8880	Dipstick	44 5 1
67-4530	Cover - Intake	41 5 1	71-1520	Cap - Expansion Tank	51 7 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
71-2910	Bracket - Engine R.H. Rear	35 10 1	75-0370	O-Ring	27 29 1
71-4330	Seal	25 41 1	75-0380	Plate - Valve	27 15 1
71-4350	Nut	24 20 1	75-0390	Plate - Swash	27 12 1
72-3570	Shim .094 - Diff. Adjust.	24 22 A/R	75-0400	Plate - Thrust	27 13 2
72-3571	Shim .096 - Diff. Adjust.	24 * A/R	75-0410	O-Ring	27 3 1
72-3572	Shim .098 - Diff. Adjust.	24 * A/R	75-0430	Ring - Retaining	27 1 1
72-3573	Shim .100 - Diff. Adjust.	24 22 A/R	75-0440	Shaft - Motor	27 45 1
72-3574	Shim .102 - Diff. Adjust.	24 * A/R	75-0450	Collar	28 50 1
72-3575	Shim .104 - Diff. Adjust.	24 * A/R	75-0460	Bearing - Ball	28 51 2
72-3576	Shim .106 - Diff. Adjust.	24 * A/R	75-0470	Cylinder Block Kit	27 14 2
72-3577	Shim .108 - Diff. Adjust.	24 * A/R	75-0480	Pin	27 10 2
72-3578	Shim .110 - Diff. Adjust.	24 * A/R	75-0490	Plate - Valve	27 44 1
72-3580	Shim .112 - Diff. Adjust.	24 * A/R	75-0500	Bearing - Needle	27 16 2
72-3581	Shim .114 - Diff. Adjust.	24 * A/R	75-0510	Pin	27 17 2
72-3582	Shim .116 - Diff. Adjust.	24 * A/R	75-0520	Bearing - Ball	27 4 1
72-3583	Shim .118 - Diff. Adjust.	24 * A/R	75-0540	Tether - Cap	14 7 1
72-3584	Shim .120 - Diff. Adjust.	24 * A/R	75-0550	Strainer - Suction	14 29 1
72-3585	Shim .125 - Diff. Adjust.	24 * A/R	75-0560	Steering Wheel Assembly	3 4 1
72-3586	Shim .127 - Diff. Adjust.	24 * A/R	75-0570	Cable - Hood	1 14 1
72-3587	Shim .129 - Diff. Adjust.	24 * A/R	75-0580	Panel - Tower	3 10 1
72-3588	Shim .131 - Diff. Adjust.	24 * A/R	75-0591	Panel - Control	11 14 1
72-3590	Shim .133 - Diff. Adjust.	24 * A/R	75-0600	Steering Valve Assembly	3 26 1
72-3591	Shim .135 - Diff. Adjust.	24 * A/R	75-0600	Valve - Power Steering	4 * 1
72-3592	Shim .137 - Diff. Adjust.	24 * A/R	75-0610	Tread - Foot R.H.	2 * 1
72-3593	Shim .139 - Diff. Adjust.	24 * A/R	75-0620	Tread - Foot L.H.	2 37 1
72-3594	Shim .141 - Diff. Adjust.	24 * A/R	75-0630	Tread - Foot Center	2 40 1
72-3595	Shim .143 - Diff. Adjust.	24 * A/R	75-0640	Tread - Footrest R.H.	2 * 1
72-3596	Shim .145 - Diff. Adjust.	24 * A/R	75-0650	Tread - Footrest L.H.	2 36 1
72-3597	Shim .147 - Diff. Adjust.	24 * A/R	75-0670	Decal - Hood Trim L.H.	1 12 1
72-3598	Shim .149 - Diff. Adjust.	25 22 A/R	75-0680	Decal - Hood Trim R.H.	1 * 1
72-3600	Shim .151 - Diff. Adjust.	25 * A/R	75-0720	Housing - Lower	25 34 1
72-3620	Gear & Pinion Assembly	25 * 1	75-0750	Decal - Backlap Switch	32 41 1
72-4380	Seal Kit	65 * 1	75-0800	Gear Pump Assembly	30 18 1
72-6140	Cover - Rear	50 27 1	75-0810	Decal - Caution (English)	23 48 2
74-0720	Tube - Manual	6 10 1	75-0900	Engine Assembly	35 22 1
74-5520	Clutch - Fan	36 53 1	75-0920	Cartridge - Relief 3000 psi	17 13 1
74-5950	Swell Latch Assembly	1 21 3	75-0930	Hook - Oil Cooler	33 50 4
74-9100	Pad - Forward	5 12 1	75-0940	Guard - Flywheel	34 22 1
74-9110	Pad - Reverse	5 14 1	75-1010	Toggle Switch Assembly	11 16 2
75-0010	Transmission Assembly	22 9 1	75-1020	Switch - Backlap	32 38 1
75-0020	Housing	27 5 1	75-1040	Cooler - Oil	32 2 1
75-0030	Gasket - Housing	27 46 1	75-1070	Muffler	34 11 1
75-0040	Center Section	27 18 1	75-1080	Fuel Tank Assembly	21 24 1
75-0060	Plug	27 20 4	75-1100	Support - Rear Axle	54 4 1
75-0070	Plug	27 41 1	75-1170	Reservoir - Hydraulic	14 1 1
75-0090	Screw - Cap Hex Hd.	27 9 8	75-1180	Manifold	19 7 2
75-0110	Screw - Cap Hex Hd.	27 35 2	75-1180	Manifold - Hydraulic	18 21 1
75-0120	Screw - Cap Hex Hd.	27 28 1	75-1190	Manifold - Hydraulic	18 18 1
75-0130	Screw - Cap Hex Hd.	27 24 3	75-1200	Hydraulic Cylinder Assembly	55 47 1
75-0140	Spring - Conical	27 26 1	75-1210	Nut - Lock	56 2 1
75-0150	Guide - Seal	27 2 1	75-1220	Piston	56 3 1
75-0160	Plug - Pipe	28 47 1	75-1230	Piston Rod Assembly	56 5 1
75-0170	Plug - Straight Thread	27 19 4	75-1250	Seal Kit	56 6 1
75-0180	Screw - Cap Hex Hd.	27 36 2	75-1260	Head - Internal	56 4 1
75-0190	Plug - Special	27 27 2	75-1270	Repair Kit	65 * 1
75-0200	Plug - Straight Thread	27 38 2	75-1280	Decal - Warning (English)	1 22 1
75-0210	O-Ring	27 6 2	75-1290	Bearing	73 5 4
75-0220	Pin	28 48 2	75-1290	Bearing Assembly	66 14 2
75-0230	Seal - Lip	27 8 1	75-1290	Bearing Assembly	67 14 2
75-0240	O-Ring	27 21 6	75-1300	Hydraulic Filter Head Assy.	14 31 1
75-0250	Spring	27 22 1	75-1310	Element - Hydraulic Filter	14 34 1
75-0260	Valve - Relief	27 23 4	75-1330	Filter - Oil	22 27 1
75-0270	Spring	27 39 1	75-1350	Cable - Throttle	6 20 1
75-0280	Spring	27 42 1	75-1360	Cable - Battery (Ground)	35 20 1
75-0290	Spring	27 43 1	75-1370	Battery Cable Assy. (+)	51 17 1
75-0300	Valve - SCR	27 25 1	75-1380	Belt - V	35 44 1
75-0310	Shim	27 40 1	75-1390	Panel - Access	2 39 1
75-0320	Nipple	27 37 1	75-1400	Motor - Hydraulic	20 21 5
75-0330	Seal - Lip	27 34 1	75-1400	Reel Motor Assembly	64 29 1
75-0340	Bearing - Needle	27 33 1	75-1410	Panel - Floor	2 41 1
75-0350	Pin	27 31 1	75-1420	Cover - Steering Tower	1 2 1
75-0360	Gerotor	27 30 1	75-1430	Brake Pedal Assembly R.H.	5 35 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3314-971

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
75-1440	Pedal - Brake L.H.	5 33 1	75-3840	Fender - R.H.	1 3 1
75-1470	Shaft - Brake Pedal	5 36 1	75-3860	Fender - L.H.	1 29 1
75-1490	Rod - Parking Brake	3 13 1	75-3880	Plate - Seat	6 15 1
75-1520	Assembly - Roller, Wiehle	74 43 1	75-3920	Guide - Basket	68 12 1
75-1520	Wiehle Roller Assembly	66 15 1	75-3930	Pin - Basket	68 4 2
75-1520	Wiehle Roller Assembly	67 15 1	75-3940	Collar - Basket	68 10 1
75-1560	Deflector - Rear	64 9 1	75-3950	Bracket - Basket	68 11 1
75-1600	Carrier Frame Assembly	66 3 1	75-3960	Spring - Torsion L.H.	68 * 1
75-1600	Carrier Frame Assembly	67 3 1	75-3970	Spring - Torsion R.H.	68 9 1
75-1610	Bracket - HOC Rear R.H.	66 * 1	75-4010	Basket - Grass	68 1 1
75-1610	Bracket - HOC Rear R.H.	67 * 1	75-4020	Support - Basket Inner R.H.	68 * 1
75-1620	Bracket - HOC Rear L.H.	66 7 1	75-4030	Support - Basket Inner L.H.	68 3 1
75-1620	Bracket - HOC Rear L.H.	67 7 1	75-4040	Support - Basket Outer L.H.	68 15 1
75-1710	Support	73 1 1	75-4050	Support - Basket Outer R.H.	68 * 1
75-1710	Support - Cutting Unit	66 19 1	75-4060	Screen - Radiator	32 1 1
75-1710	Support - Cutting Unit	67 19 1	75-4080	Plate - Traction	29 15 1
75-1720	Flap - Rear Shield	64 11 2	75-4090	Switch Arm Assembly	29 21 1
75-1740	Spring - Scraper	71 2 2	75-4100	Control - Pump	29 25 1
75-1750	Scraper - Roller	71 1 1	75-4130	Plate - Switch	29 7 1
75-1840	Assembly - Shield, Grass	74 50 1	75-4180	Pin - Rear Axle Pivot	55 44 1
75-1840	Shield - Grass	64 5 1	75-4220	Bracket - Fan	35 40 1
75-1960	Bracket - HOC Front R.H.	66 * 1	75-4250	Bracket - Expansion Tank	51 23 1
75-1960	Bracket - HOC Front R.H.	67 * 1	75-4260	Support - Radiator	32 5 1
75-1980	Bracket - HOC Front L.H.	66 13 1	75-4310	Shield - Radiator	32 30 1
75-1980	Bracket - HOC Front L.H.	67 13 1	75-4350	Shroud - Fan	32 12 1
75-2010	Cartridge - Relief 2000 psi	17 14 1	75-4360	Bracket - Switch	6 8 1
75-2080	Kit - Seal	17 * 10	75-4370	Bracket - Switch (Seat)	6 3 1
75-2090	Kit - Seal	17 * 3	75-4400	Adaptor - Transmission	30 8 1
75-2120	Clevis	63 12 1	75-4410	Pivot Plate Assembly	54 42 1
75-2160	Bearing - Flange	66 18 2	75-4420	Spindle - Rear R.H.	54 * 1
75-2160	Bearing - Flange	67 18 2	75-4440	Spindle - Rear L.H.	54 15 1
75-2160	Bushing - Flange	73 2 2	75-4450	Hub - Fan Drive	35 6 1
75-2170	Tube - Pump Control	5 37 1	75-4490	Bracket - Muffler	34 16 1
75-2240	Hose - Radiator Upper	32 18 1	75-4520	Spring - Torsion R.H.	59 29 1
75-2260	Hose - Radiator Lower	32 21 1	75-4530	Spring - Torsion L.H.	59 * 1
75-2430	Coupling - Transmission	30 7 1	75-4550	Shaft - Center Arm Pivot	57 27 1
75-2460	Hose - Air Cleaner	51 1 1	75-4590	Rod - Pivot	59 28 2
75-2460	Hose - Air Cleaner	35 15 1	75-4630	Coupling - Driveshaft	34 7 1
75-2810	Clamp - Steering Valve	3 3 1	75-4650	Bracket - Spring Rear L.H.	59 * 1
75-2820	Grill - Hood	1 7 1	75-4690	Bracket - Spring Rear R.H.	59 6 1
75-2830	Bracket - Engine L.H. Rear	35 28 1	75-4700	Hose - Fuel	21 13 1
75-2850	Hose - Expansion Tank	51 9 1	75-4701	Hose - Fuel	21 15 1
75-2850	Hose - Expansion Tank	32 10 1	75-4701	Hose - Fuel Vent	32 24 1
75-2860	Bracket - Hose	32 31 1	75-4710	Warning Light Harness	11 28 1
75-2860	Bracket - Hose	1 35 1	75-4720	Fitting - Hydraulic 90°	22 23 1
75-2900	Rear Axle Assembly	55 45 1	75-4900	Bearing Set STD	40 3 1
75-2970	Pedal - Traction	5 13 1	75-4910	Oil Pan Assembly	39 14 1
75-3010	Joint - Arm	59 31 2	75-4920	Case	39 1 1
75-3010	Joint - Arm	58 54 3	75-4930	Cylinder Head Assembly	41 28 1
75-3040	Carrier Frame Assembly	58 44 1	75-4940	Brace - Alternator	50 23 1
75-3100	Transmission Support Assy.	22 7 1	75-4950	Gasket - Cylinder Head	41 25 1
75-3110	Collar - Transmission	22 8 1	75-4960	Block Assembly	40 1 1
75-3130	Rod - Tie	54 37 2	75-4970	Element	46 8 3
75-3140	Bracket - Air Cleaner	51 25 1	75-4980	Lever - Governor Spring	48 7 1
75-3270	Lever - Traction Pivot	5 8 1	75-4990	Spring - Governor	48 25 1
75-3300	Frame - Seat	6 27 1	75-5000	Body	47 32 3
75-3390	Bracket - Backlap	32 39 1	75-5010	Bearing Set STD	37 8 3
75-3400	Shaft - Seat Pivot	6 14 1	75-5020	Injector Pump Assembly	45 41
75-3420	Lift Control Assembly	12 37 1	75-5040	Gasket Kit	39 * 1
75-3430	Rod - Throttle	6 34 1	75-5050	Ring Set STD	37 11 3
75-3480	Weldment - Upper	8 23 1	75-5060	Ring Set 0.25 mm OS	37 * 3
75-3510	Bolt - Shoulder	8 26 2	75-5070	Ring Set 0.50 mm OS	37 * 3
75-3530	Spring - Compression	8 3 1	75-5080	Piston & Pin Set STD	37 10 3
75-3540	Pin - Roll	8 6 1	75-5090	Piston & Pin Set	37 * 3
75-3550	Bumper - Seat	8 7 2	75-5100	Piston & Pin Set	37 * 3
75-3580	Plate - Mounting, Seat	8 2 1	75-5110	Cover Assy.	37 24 1
75-3680	Rod - Seat	6 18 1	75-5120	Gasket	38 45 1
75-3710	Dipstick	14 4 1	75-5170	Support Plate Assy. L.H.	33 * 1
75-3750	Pin - Pivot	59 38 2	75-5180	Support Plate Assy. R.H.	33 56 1
75-3780	Fan	36 52 1	75-5190	Decal - No Riders (English)	1 25 2
75-3790	Clevis	61 12 1	75-5200	Bracket - Spring R.H.	57 * 1
75-3810	Bracket - Roller	59 11 2	75-5210	Bracket - Spring Center	57 16 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
75-5220	Bracket - Spring L.H.	57 * 1	75-6200	Hose - Hydraulic	14 21 1
75-5240	Tube - Hydraulic	30 12 1	75-6220	Hose - Hydraulic	54 34 1
75-5240	Tube - Hydraulic	16 39 1	75-6220	Hose - Hydraulic LT	3 24 1
75-5250	Tube - Hydraulic	30 13 1	75-6230	Hose - Hydraulic	55 50 1
75-5250	Tube - Hydraulic	16 38 1	75-6230	Hose - Hydraulic RT	3 18 1
75-5260	Knob - Locking	6 38 2	75-6240	Hose - Hydraulic	30 14 1
75-5270	Spacer - Locking Knob	6 37 2	75-6240	Hose - Hydraulic IN	3 19 1
75-5300	Rod - Hose Support	18 24 2	75-6250	Hose - Hydraulic	14 17 1
75-5300	Rod - Hose Support	58 63 1	75-6250	Hose - Hydraulic OUT	3 25 1
75-5310	Spacer - Bearing	35 5 1	75-6260	Cover - Tool Box	1 23 1
75-5330	Clamp - Hose	57 8 3	75-6270	Cover - Control Box	11 15 1
75-5330	Clamp - Hydraulic Line	60 42 2	75-6280	Bracket - Hose	2 46 1
75-5350	Pin - Cylinder Rod End	59 22 2	75-6290	Radiator	32 7 1
75-5350	Pin - Cylinder Rod End	57 31 3	75-6300	Sensor - Reed Switch	57 12 1
75-5360	Pin - Cylinder Cap End	60 39 2	75-6310	Magnet - Reed Switch	58 51 1
75-5370	Mount - Clamp	57 36 1	75-6320	Sensor - Switch	6 6 1
75-5380	Bracket - Clamp	57 38 1	75-6330	Magnet - Switch	6 5 1
75-5390	Roller	59 14 2	75-6340	Strainer - In-Line	22 35 1
75-5400	Shaft - Roller	59 13 2	75-6350	Hose	22 25 1
75-5410	Bracket - Arm	58 53 2	75-6370	Cover - Sensor	58 49 1
75-5420	Lift Arm Assembly Center	57 40 1	75-6380	Shaft - Fan	35 1 1
75-5430	Lift Arm Assy. Rear L.H.	59 * 1	75-6390	Pulley - Fan	35 3 1
75-5440	Lift Arm Assy. Rear R.H.	59 23 1	75-6410	Yoke - Shaft	34 2 1
75-5450	Lift Arm Assembly R.H.	57 1 1	75-6420	Yoke - Slip Tube	34 3 1
75-5460	Lift Arm Assembly L.H.	57 32 1	75-6490	Lever - Pedal Stop	5 20 1
75-5470	Spacer	29 12 2	75-6510	Lever - Bracket	5 16 1
75-5480	Manifold - Tank	14 14 1	75-6550	Disc - Friction	5 17 1
75-5720	Hose - Hydraulic	14 19 1	75-6580	Cable - Pedal	5 7 1
75-5740	Box - Control	11 24 1	75-6640	Fitting - Hydraulic 90°	16 20 2
75-5810	Box - Tool	1 26 1	75-6660	Cutting Unit Frame Assy.	66 10 1
75-5890	Hose - Hydraulic	18 7 1	75-6660	Cutting Unit Frame Assy.	67 10 1
75-5890	Hose - Hydraulic	57 28 2	75-6660	Frame - Cutting Unit	64 27 1
75-5890	Hose - Hydraulic	16 35 1	75-6710	Decal - Fast/Slow	5 18 1
75-5900	Hose - Hydraulic	16 30 1	75-6820	Meter - Hour	12 47 1
75-5900	Hose - Hydraulic	58 47 1	75-6840	Knob - Knurled	2 38 4
75-5910	Hose - Hydraulic	18 8 1	75-6850	Tube - Oil Fill	22 40 1
75-5910	Hose - Hydraulic	58 60 1	75-6870	Hose - Hydraulic Suction	14 28 1
75-5940	Hose - Hydraulic	18 6 1	75-6870	Hose - Suction	30 1 1
75-5940	Hose - Hydraulic AUX	3 23 1	75-6880	Screen - Spark Arrester	34 * 1
75-5950	Hose - Hydraulic	16 16 1	75-6930	Valve - SCR	28 52 1
75-5950	Hose - Hydraulic	18 20 1	75-7540	Decal - Warning (English)	2 49 1
75-5960	Hose - Hydraulic	20 16 1	76-1910	Shaft - Pivot	8 12 2
75-5960	Hose - Hydraulic	18 22 1	76-1920	Bushing - Sleeve	8 9 4
75-5980	Hose - Hydraulic	18 1 1	76-1930	Knob - Tension Adjustment	8 19 1
75-5980	Hose - Hydraulic	20 5 1	76-1940	Spring - Extension	8 14 2
75-5990	Hose - Hydraulic	20 17 1	76-2460	Assembly - Bearing	73 35 2
75-5990	Hose - Hydraulic	16 37 1	76-2940	Bumper - Rubber	8 8 2
75-6000	Hose - Hydraulic	16 4 1	76-2970	Bushing - Sleeve	54 43 2
75-6000	Hose - Hydraulic	20 6 1	76-2980	Washer - Thrust	54 41 1
75-6020	Hose - Hydraulic	18 11 1	76-8640	Stud - Traction	29 23 1
75-6020	Hose - Hydraulic	19 15 1	76-8730	Decal - Bolt Torque	22 22 2
75-6040	Hose - Hydraulic	20 10 1	76-8750	Plate - Caution	32 14 1
75-6040	Hose - Hydraulic	16 27 1	76-9430	Spring - Extension	29 8 1
75-6060	Hose - Hydraulic	19 12 1	77-0340	Screw - Spline	64 28 1
75-6060	Hose - Hydraulic	16 33 1	77-0340	Screw - Spline	74 53 1
75-6070	Hose - Hydraulic	19 14 1	77-0490	Decal - Bolt (English)	22 20 1
75-6070	Hose - Hydraulic L.H. (Cap)	59 * 1	77-2870	Weldment - Hanger	8 18 1
75-6080	Hose - Hydraulic	19 13 1	80-4860	Pin - Clevis	8 1 1
75-6080	Hose - Hydraulic L.H. (Rod)	59 * 1	82-6490	Hose - Hydraulic	58 65 1
75-6130	Hose - Hydraulic	14 9 1	82-6510	Support H.O.C. - Right	74 45 1
75-6140	Hose - Hydraulic	14 30 1	82-6530	Support H.O.C. - Left	73 41 1
75-6140	Hose - Hydraulic R.H.	32 46 1	82-6540	Frame W.A. - Carrier	73 8 1
75-6150	Hose - Hydraulic	22 15 1	82-6570	Shaft - Reel	74 46 1
75-6150	Hose - Hydraulic	32 20 1	82-6600	Spacer	74 42 23
75-6160	Hose - Hydraulic	16 21 1	82-6630	Bracket - H.O.C. R.H.	73 4 1
75-6160	Hose - Hydraulic L.H.	32 * 1	82-6650	Bracket - H.O.C. L.H.	73 20 1
75-6170	Hose - Hydraulic	22 11 1	82-6680	Assembly - Roller, Rear	73 15 1
75-6170	Hose - Hydraulic	32 17 1	82-6710	Assembly - Frame	74 51 1
75-6180	Hose - Hydraulic	19 1 2	82-6740	Assy. - Scraper, Rear	73 9 1
75-6180	Hose - Hydraulic R.H.	59 16 2	82-6770	Spring - Scraper	73 18 2
75-6190	Hose - Hydraulic	20 8 1	82-6780	Deflector - Rear	73 24 1
75-6200	Hose - Hydraulic	18 12 1	82-6810	Plate - Bearing	73 26 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3314-971

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
82-6820	Spacer - Bearing	73 25 2	85-4690	Software - ECU RM5100D	12 * 1
82-6830	Bracket - Scraper	70 * 8 5	85-4720	Decal - Instruction	11 27 1
82-6830	Bracket - Scraper	69 8 1	85-4730	Decal - Hydraulic Oil	1 4 1
82-6830	Bracket - Scraper	74 44 1	85-4730	Decal - Oil	18 26 1
82-6840	Spacer	72 9 10	85-4740	Decal - Instructions	2 48 1
82-6870	Scraper - RH	74 56 1	85-4750	Display - Diagnostic-ACE	9 2 1
82-6880	Scraper - L.H.	73 30 1	85-4760	Decal - Diagnostic-ACE	9 1 1
82-6890	Washer - Special	72 3 20	85-7180	Shaft - Roller	67 24 1
82-8110	Retainer - Oil Guide	45 44 1	85-7190	Washer - Shield	67 22 2
82-8270	Valve - Flow Control	19 9 1	85-7220	Rear Roller Assembly	66 16 1
82-8270	Valve - Flow Control	16 31 1	85-7220	Rear Roller Assembly	67 16 1
82-9060	Adjuster W/Handle	8 13 1	85-9880	Hydraulic Cylinder Assembly	58 46 1
83-4700	Plate - Spring R.H.	72 * 5	85-9880	Hydraulic Cylinder Assy.	60 40 2
83-4710	Plate - Spring L.H.	72 8 5	85-9900	Plate - Spring Anchor	29 16 1
83-4720	Spring - Torsion R.H.	72 * 5	85-9910	Eyebolt	29 27 1
83-4730	Spring - Torsion L.H.	72 7 5	85-9970	Bearing Assembly	67 17 2
83-4780	Housing - Charge Pump	27 32 1	85-9980	Decal - ROPS	76 19 1
83-4870	Bracket - High Scraper R.H.	70 * 7 5	86-7190	Upper Housing	25 26 1
83-4880	Bracket - High Scraper L.H.	70 * 6 5	86-7200	Front Axle Assembly	22 43 1
83-4910	Coupler - Pinion	25 40 1	86-7220	Gear - Pinion	22 32 1
83-5130	Spacer - Pinion	24 21 1	86-7230	Gear-Spur	24 14 1
83-5210	H.O.C. - Right Rear	70 1 5	86-7330	Seal Repair Kit	63 * 1
83-5230	H.O.C. - Left Rear	70 3 5	86-7330	Seal repair Kit	61 * 1
83-5240	Support - Front R.H.	70 5 5	86-7520	Trunion Cover Assy. R.H.	27 7 1
83-5250	Support - Front L.H.	70 4 5	86-7530	Trunion Cover Assy. L.H.	28 49 1
83-6780	Pin - Cylinder (Long)	58 61 2	86-7540	Shaft - Pump	27 11 1
83-6790	Pin - Cylinder (Short)	58 43 1	86-7550	Connector - Cover (2 Way)	12 * 2
83-6930	Bracket - Scraper R.H.	69 2 1	86-7560	Connector - Cover (3 Way)	12 * 3
83-6940	Bracket - Scraper L.H.	69 4 1	86-9190	Hose - Hydraulic	16 14 2
83-6950	Bracket - Scraper R.H.	69 1 1	86-9200	Sleeve - Pump	30 6 1
83-6980	Bracket - Scraper L.H.	69 5 1	88-0430	Decal - A.C.E.	2 51 2
83-7370	Roof	76 1 1	88-0440	Decal - Floor Plate	18 27 1
83-7380	Insulation - Roof	76 14 1	88-6700	Decal - ANSI (English)	2 50 1
83-7390	Seal	76 2 2	88-6960	Cartridge - 4W/2P	17 19 3
83-7400	Ear - Lift	76 3 2	88-6970	Cartridge - N.O.	17 9 2
83-7410	Roll - Bar	76 13 1	88-6980	Cartridge - N.C.	17 22 1
83-7420	Washer - Rubber	76 15 6	88-6990	Cartridge - N.C.	17 7 3
83-7430	Decal - Danger (English)	76 12 1	88-7020	Cartridge - N.O.	17 3 2
83-7440	Decal - Knob (English)	7 52 1	88-9190	Solenoid - 20 Watt	17 4 6
83-7450	Decal - Down (English)	33 60 1	88-9200	Solenoid - 28 Watt	17 8 5
83-7480	Hydraulic Cylinder Assembly	57 7 1	88-9460	Hose - Hydraulic	20 11 1
83-7490	Hydraulic Cylinder Assy.	58 67 1	88-9460	Hose - Hydraulic	16 15 1
84-1670	Head	61 9 1	88-9470	Hose - Hydraulic	20 14 1
84-1670	Head	63 9 1	88-9470	Hose - Hydraulic	16 24 1
84-1680	Ring-Retaining	61 11 1	88-9480	Hose - Hydraulic	20 12 1
84-1680	Ring-Retaining	63 11 1	88-9490	Hose - Hydraulic	20 9 1
84-1710	Piston	62 4 1	88-9520	Hose - Hydraulic	20 20 1
84-1720	Head	62 9 1	88-9520	Hose - Hydraulic	18 23 1
84-1730	Ring-Retaining	62 11 1	88-9530	Hose - Hydraulic	20 15 1
84-1740	Clevis	62 12 1	88-9540	Hose - Hydraulic	20 1 1
84-1760	Seal repair Kit	62 * 1	217-74	Bolt - Bedbar	64 33 2
84-4610	Decal - Instruction	6 40 1	217-120	Rim	23 46 2
84-8320	Insert - Hinge	57 10 4	217-121	Rim	54 20 2
85-460	Decal - HOC Selector	12 50 1	218-446	Nut - Locking	11 10 1
85-4330	Cover - Gear	22 4 1	218-447	Washer - E.T.L.W.	11 11 1
85-4340	Plate - Sensor Mounting	23 52 1	218-498	Nut - Hex.	11 4 4
85-4350	Sensor - Gear Tooth	22 44 1	218-498	Nut - Lock	32 42 2
85-4360	Main Wire Harness Assy.	12 * 1	218-533	Lens - Red	11 * 1
85-4380	Magnet	64 35 2	218-535	Nut - Lock	11 30 1
85-4390	Sensor Assembly	64 36 2	218-536	Washer - Lock	11 29 1
85-4400	Controller - Electronic	11 31 1	218-573	Fuse - 5A	11 20 10
85-4410	Decal - Reelmasterr 5100D	1 8 2	218-578	Fuse - 10A	11 * 1
85-4420	Gauge - Speedometer	11 2 1	218-579	Wire - Fuel Pump	21 29 1
85-4450	Bracket - Fuse Block	11 23 1	218-590	Switch - Micro	12 38 2
85-4470	Potentiometer Assembly	12 44 1	218-594	Fuse - 20A	11 * 1
85-4480	Knob	11 25 1	219-17	Bulb - Light	11 * 5
85-4491	Lamp - Diagnostic	12 * 1	219-19	Bulb - #1815	11 * 1
85-4530	Decal - Danger (English)	7 49 1	231-134	Tire	22 45 2
85-4550	Control Manifold Assembly	16 6 1	231-141	Tire	54 19 2
85-4600	Frame Assembly	1 32 1	232-27	Stem - Valve	23 47 2
85-4620	End Cap Assembly	64 18 1	232-35	Stem - Valve	54 21 2
85-4650	Connector - Loop Back	12 * 1	233-17	Knob - Parking Brake	3 9 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
233-42	Knob	5 19 1	2412-93	Clamp - R	51 11 1
233-42	Knob - Throttle	6 35 1	2412-93	Clamp - R	14 32 2
237-21	Seal - O-Ring	18 2 6	2412-93	Clamp - R	7 50 1
237-21	Seal - O-Ring	19 2 7	2412-103	Clamp - R	32 25 2
237-21	Seal - O-Ring	20 4 8	2412-107	Clamp - R	60 47 1
237-21	Seal - O-Ring	57 5 6	2412-108	Clamp - Hose	51 8 1
237-21	Seal - O-Ring	16 18 6	2412-108	Clamp - Hose	32 9 2
237-21	Seal - O-Ring	59 18 4	2412-108	Clamp - Hose	21 12 7
237-21	Seal - O-Ring	14 26 1	2412-108	Clamp-Hose	53 5 2
237-21	Seal - O-Ring	54 33 2	2412-126	Clamp - R	36 54 1
237-22	Seal - O-Ring	16 1 4	2412-133	Clamp - R	6 42 2
237-22	Seal - O-Ring	22 12 2	251-77	Collar - Lock	73 37 2
237-22	Seal - O-Ring	18 13 4	251-259	Bearing	72 4 10
237-22	Seal - O-Ring	3 14 5	251-259	Bearing - Ball	29 11 2
237-22	Seal - O-Ring	30 15 1	251-318	Bearing - Ball	35 7 2
237-22	Seal - O-Ring	20 19 10	251-337	Bearing - Ball	73 34 2
237-22	Seal - O-Ring	14 23 3	253-61	Seal - Oil	64 22 1
237-30	Seal - O-Ring	30 11 2	253-96	Seal - Oil	64 32 2
237-30	Seal - O-Ring	17 12 1	253-129	Seal - Grease	54 28 2
237-30	Seal - O-Ring	16 13 4	254-65	Cone-Tapered Bearing	25 28 2
237-42	Seal - O-Ring	16 3 4	254-66	Cup-Tapered Bearing	25 27 2
237-42	Seal - O-Ring	17 5 2	254-72	Cup - Bearing	64 15 2
237-42	Seal - O-Ring	18 16 2	254-72	Cup - Bearing	54 17 4
237-42	Seal - O-Ring	14 25 2	254-91	Cone-Bearing	25 23 1
237-65	Seal - O-Ring	14 10 5	254-94	Cone - Bearing	54 16 4
237-65	Seal - O-Ring	16 22 1	254-94	Cone - Bearing	64 16 2
237-65	Seal - O-Ring	32 47 2	256-42	Bushing - Sleeve	5 34 2
237-78	Seal - O-Ring	17 1 10	256-113	Bushing - Flange	29 19 2
237-78	Seal - O-Ring	20 2 5	256-115	Washer - Thrust	59 26 8
237-78	Seal - O-Ring	18 3 7	256-115	Washer - Thrust	57 41 11
237-78	Seal - O-Ring	57 3 6	256-121	Washer - Thrust	54 12 2
237-78	Seal - O-Ring	19 4 8	256-236	Bearing - Flange	5 24 4
237-78	Seal - O-Ring	16 7 8	256-287	Bushing - Flange	59 30 4
237-78	Seal - O-Ring	22 16 1	282-4	Clevis - Spring	59 2 2
237-78	Seal - O-Ring	59 17 4	282-4	Clevis - Spring	57 21 3
237-78	Seal - O-Ring	54 31 2	283-6	Pin - Clevis	59 9 2
237-79	Seal - O-Ring	16 9 2	283-6	Pin - Clevis	57 15 3
237-79	Seal - O-Ring	17 10 1	283-58	Pin - Clevis	5 30 4
237-79	Seal - O-Ring	22 10 2	302-5	Fitting - Grease	66 4 4
237-79	Seal - O-Ring	30 17 3	302-5	Fitting - Grease	67 4 4
237-79	Seal - O-Ring	20 18 10	302-5	Fitting - Grease	54 11 4
237-79	Seal - O-Ring	15 45 1	302-5	Fitting - Grease	57 11 6
237-80	Seal - O-Ring	17 20 1	302-5	Fitting - Grease	61 13 1
237-81	Seal - O-Ring	14 12 4	302-5	Fitting - Grease	62 13 1
237-81	Seal - O-Ring	16 26 1	302-5	Fitting - Grease	63 13 1
237-81	Seal - O-Ring	22 26 2	302-5	Fitting - Grease	29 20 1
237-141	Bumper	2 42 2	302-5	Fitting - Grease	59 24 4
237-141	Grommet	6 41 1	302-5	Fitting - Grease	5 39 1
237-156	Seal - O-Ring	17 16 2	302-11	Fitting - Grease 45°	73 14 6
237-161	Seal - O-Ring	22 31 1	302-11	Fitting - Grease R.H. 45°	64 * 1
237-162	Seal - O-Ring	30 5 1	302-58	Fitting - Grease	34 4 1
237-163	Seal - O-Ring	30 9 1	302-60	Fitting - Grease	66 2 1
237-165	Grommet	55 46 2	302-60	Fitting - Grease	67 2 1
237-181	Seal - O-Ring	22 3 1	302-60	Fitting - Grease	73 6 1
240-3	Grommet	33 51 2	302-60	Fitting - Grease L.H. 90°	64 34 1
240-11	Grommet	21 27 3	304-46	Drain - Radiator	33 52 1
240-11	Grommet	14 39 3	304-46	Fitting - Drain	21 31 1
241-119	Cap - Dust	54 24 2	321-2	Screw - Cap Hex. Hd.	14 6 1
242-34	Stud-Flange, Axle	26 11 10	321-2	Screw - Cap Hex. Hd.	51 12 1
242-50	Nut - Lug	54 26 10	321-2	Screw - Cap Hex. Hd.	23 49 1
249-48	Swell Latch Assembly	11 5 1	321-4	Screw - Cap Hex. Hd.	64 6 2
2410-18	Plug	78 2 1	321-4	Screw - Cap Hex. Hd.	32 16 7
2410-73	Retainer - Tether	14 5 1	321-4	Screw - Cap Hex. Hd.	11 33 3
2411-36	Bearing - Rod End	5 2 1	321-4	Screw - Cap Hex. Hd.	57 35 2
2412-3	Clamp - Hose	32 19 4	321-4	Screw - Cap Hex. Hd.	6 46 1
2412-34	Clamp - Hose	30 2 1	321-4	Screw - Cap Hex. Hd.	74 49 2
2412-34	Clamp - Hose	14 18 3	321-4	Screw - Cap Hex. Hd.	36 50 1
2412-34	Clamp - Hose	22 24 2	321-6	Screw - Cap Hex. Hd.	51 24 2
2412-36	Clamp - Drain	21 16 1	321-8	Screw - Cap Hex. Hd.	21 6 2
2412-42	Clamp - Hose	51 2 1	321-11	Screw - Cap Hex. Hd.	18 5 4
2412-81	Clamp - R	34 19 1	321-11	Screw - Cap Hex. Hd.	19 6 4
2412-92	Clamp - Hose	35 16 1	321-23	Screw - Cap Hex. Hd.	72 10 10

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3314-971

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
321-23	Screw - Cap Hex. Hd.	14 13 2	325-5	Screw - Cap Hex. Hd.	76 8 9
321-39	Screw - Cap Hex. Hd.	1 10 7	325-7	Screw - Cap Hex. Hd.	22 6 2
321-39	Screw - Cap Hex. Hd.	11 26 2	325-8	Screw - Cap Hex. Hd.	77 4 2
322-1	Screw - Cap Hex. Hd.	68 13 1	327-2	Screw - Cap Hex. Hd.	54 3 1
322-2	Screw - Cap Hex. Hd.	32 40 2	328-7	Screw - Cap Hex. Hd.	57 18 4
322-2	Screw - Cap Hex. Hd.	36 51 4	328-12	Screw - Cap Hex. Hd.	57 13 2
322-3	Screw - Cap Hex. Hd.	3 1 2	328-25	Screw - Cap Hex. Hd.	54 30 1
322-3	Screw - Cap Hex. Hd.	6 13 9	328-27	Screw - Cap Hex. Hd.	55 49 1
322-3	Screw - Cap Hex. Hd.	35 14 4	3210-7	Screw-Cap, Hex Hd.	24 19 8
322-3	Screw - Cap Hex. Hd.	29 18 2	3212-4	Screw - Cap Hex. Hd.	76 * 2
322-3	Screw - Cap Hex. Hd.	5 25 8	3217-6	Nut - Hex.	29 28 1
322-3	Screw - Cap Hex. Hd.	1 27 4	3217-9	Nut - Hex.	77 1 2
322-3	Screw - Cap Hex. Hd.	16 28 4	3217-9	Nut - Lock	76 9 3
322-3	Screw - Cap Hex. Hd.	51 28 6	3218-1	Nut - Jam	22 2 1
322-3	Screw - Cap Hex. Hd.	11 35 4	3218-3	Nut - Hex. Jam	73 11 4
322-3	Screw - Cap Hex. Hd.	74 55 2	3218-3	Nut - Jam	71 4 4
322-4	Screw - Cap Hex. Hd.	34 12 1	3219-2	Nut	24 1 8
322-4	Screw - Cap Hex. Hd.	51 15 3	3219-14	Nut - Hex.	78 3 1
322-4	Screw - Cap Hex. Hd.	32 32 2	3220-3	Nut - Jam	5 1 2
322-4	Screw - Cap Hex. Hd.	1 33 2	3220-3	Nut - Jam	54 14 8
322-5	Screw - Cap Hex. Hd.	64 1 1	3220-5	Nut - Jam	54 36 2
322-5	Screw - Cap Hex. Hd.	32 3 10	3220-6	Nut	4 27 1
322-5	Screw - Cap Hex. Hd.	59 4 6	3220-6	Nut - Steering Wheel	3 8 1
322-5	Screw - Cap Hex. Hd.	1 18 4	3220-12	Nut - Jam L.H. Thread	54 38 2
322-5	Screw - Cap Hex. Hd.	57 26 3	3220-18	Nut - Jam	73 32 1
322-5	Screw - Cap Hex. Hd.	35 35 8	3230-1	Bolt - Carriage	70 *9 10
322-5	Screw - Cap Hex. Hd.	74 54 1	3230-1	Bolt - Carriage	69 3 2
322-6	Screw - Cap Hex.	60 46 2	3230-2	Bolt - Carriage	35 13 1
322-6	Screw - Cap Hex. Hd.	68 6 1	3231-2	Bolt - Carriage	66 5 2
322-6	Screw - Cap Hex. Hd.	33 59 1	3231-2	Bolt - Carriage	67 5 2
322-7	Screw - Cap Hex. Hd.	29 10 1	3231-3	Bolt - Carriage	73 21 2
322-7	Screw - Cap Hex. Hd.	73 40 6	3234-14	Screw - Hex. Washer Hd.	1 30 14
322-9	Screw - Cap Hex. Hd.	34 1 2	3234-23	Screw - Hex. Flange Hd.	75 5 6
322-9	Screw - Cap Hex. Hd.	72 1 10	3242-1	Screw - Set	73 19 4
322-10	Screw - Cap Hex. Hd.	29 3 1	3242-1	Screw - Set Sq. Hd.	70 2 20
322-11	Screw - Cap Hex. Hd.	35 39 1	3242-1	Screw - Sq. Hd. Set	66 8 4
322-12	Screw - Cap Hex. Hd.	34 23 2	3242-1	Screw - Sq. Hd. Set	67 8 4
322-12	Screw - Cap Hex. Hd.	60 43 2	3243-13	Screw - Sq. Hd. Set	64 8 4
323-4	Screw - Cap Hex. Hd.	15 43 2	3245-35	Screw - Set	73 33 2
323-4	Screw - Cap Hex. Hd.	7 47 2	3250-29	Screw - Cap Hex. Hd.	6 7 4
323-5	Screw - Cap Hex. Hd.	21 25 3	3250-45	Screw - Pan Hd.	76 10 6
323-5	Screw - Cap Hex. Hd.	14 36 3	3253-3	Washer - Lock	76 16 6
323-6	Screw - Cap Hex. Hd.	54 1 4	3253-3	Washer - Lock	11 32 3
323-6	Screw - Cap Hex. Hd.	68 2 2	3253-3	Washer - Lock	6 32 1
323-6	Screw - Cap Hex. Hd.	76 5 2	3253-3	Washer - Lock	23 50 1
323-6	Screw - Cap Hex. Hd.	35 9 2	3253-4	Washer - Lock	3 2 2
323-6	Screw - Cap Hex. Hd.	66 12 2	3253-4	Washer - Lock	64 2 1
323-6	Screw - Cap Hex. Hd.	67 12 2	3253-4	Washer - Lock	72 2 10
323-6	Screw - Cap Hex. Hd.	73 28 6	3253-4	Washer - Lock	68 7 2
323-7	Screw - Cap Hex. Hd.	66 21 4	3253-4	Washer - Lock	59 10 2
323-7	Screw - Cap Hex. Hd.	67 21 4	3253-4	Washer - Lock	6 12 4
323-7	Screw - Cap Hex. Hd.	35 42 1	3253-4	Washer - Lock	1 17 4
323-7	Screw - Cap Hex. Hd.	74 48 4	3253-4	Washer - Lock	29 17 2
323-9	Screw - Cap Hex. Hd.	5 3 1	3253-4	Washer - Lock	16 29 4
323-9	Screw - Cap Hex. Hd.	75 3 2	3253-4	Washer - Lock	73 39 7
323-9	Screw - Cap Hex. Hd.	51 19 1	3253-4	Washer - Lock	36 49 4
323-9	Screw - Cap Hex. Hd.	36 55 1	3253-4	Washer - Lock	33 53 5
323-11	Screw - Cap Hex. Hd.	35 32 3	3253-5	Washer - Lock	30 4 2
323-11	Screw - Cap Hex. Hd.	57 39 1	3253-6	Washer - Lock	76 * 2
323-12	Screw - Cap Hex. Hd.	30 3 2	3253-6	Washer - Lock	8 25 2
323-12	Screw - Cap Hex. Hd.	22 28 2	3253-7	Washer - Lock	76 7 9
323-12	Screw - Cap Hex. Hd.	58 56 2	3253-7	Washer - Lock	60 44 4
323-20	Screw - Cap Hex. Hd.	22 42 2	3253-7	Washer - Lock	58 58 6
323-49	Screw - Cap Hex. Hd.	66 6 2	3253-15	Washer - Lock	21 9 5
323-49	Screw - Cap Hex. Hd.	67 6 2	3253-21	Washer - Lock	66 11 2
323-49	Screw - Special	73 13 2	3253-21	Washer - Lock	67 11 2
323-50	Screw - Cap Hex. Hd.	71 5 2	3253-21	Washer - Lock	51 20 1
323-53	Screw - Cap Hex. Hd.	73 10 2	3253-21	Washer - Lock	22 29 2
324-6	Screw - Cap Hex. Hd.	22 21 4	3253-21	Washer - Lock	73 29 6
324-23	Screw-Cap, Hex Hd.	24 11 4	3253-21	Washer - Lock	15 42 2
325-4	Screw - Cap Hex. Hd.	59 36 4	3253-21	Washer - Lock	36 56 1
325-4	Screw - Cap Hex. Hd.	58 59 6	3253-27	Washer - Lock	77 2 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3255-8	Washer - Lock	35 18 2	3272-10	Pin - Cotter	6 17 2
3255-8	Washer - Lock ETLW	3 31 1	3272-10	Pin - Cotter	3 21 1
3255-8	Washer - Lock	24 2 8	3272-10	Pin - Cotter	5 40 4
3255-9	Washer - E.T.L.W.	64 31 4	3272-13	Pin - Cotter	54 25 2
3255-9	Washer - Lock E.T.L.W.	35 30 1	3273-26	Screw - Hex. Socket Hd.	12 45 2
3256-1	Washer - Flat	64 7 2	3290-93	Screw - Cap Hex. Hd.	12 39 4
3256-1	Washer - Flat	11 13 5	3290-271	Rivet - Pop	32 13 2
3256-1	Washer - Flat	3 29 2	3290-336	Tie - Cable	57 14 3
3256-1	Washer - Flat	2 44 10	3290-336	Tie - Cable	60 45 1
3256-1	Washer - Flat	74 47 2	3290-354	Plate - Nut	11 36 2
3256-3	Washer - Flat	1 24 4	3290-378	Tie - Cable	3 *
3256-3	Washer - Flat	11 34 4	3290-378	Tie - Cable	33 57 1
3256-5	Washer - Flat	8 4 1	3290-409	Rivet - Pop	64 12 4
3256-6	Washer - Flat	59 33 4	3290-461	Washer - Belleville	5 21 1
3256-6	Washer - Flat	58 57 6	3290-488	Boot - Lift Control	12 40 1
3256-22	Washer - Flat	21 4 2	3290-489	Knob - Lift Control	11 3 1
3256-22	Washer - Flat	5 6 2	3296-2	Nut - Lock	11 18 3
3256-22	Washer - Flat	3 11 4	3296-9	Nut - Hex.	29 24 2
3256-22	Washer - Flat	76 11 6	3296-20	Nut - Lock	3 16 4
3256-22	Washer - Flat	32 15 4	3296-23	Nut - Lock	22 19 2
3256-22	Washer - Flat	57 34 2	3296-29	Nut - Lock	70 *10 10
3256-23	Washer - Flat	70 *11 10	3296-29	Nut - Lock	59 7 8
3256-23	Washer - Flat	32 4 11	3296-29	Nut - Lock	69 7 2
3256-23	Washer - Flat	69 6 2	3296-29	Nut - Lock	29 9 4
3256-23	Washer - Flat	59 8 10	3296-29	Nut - Lock	34 17 5
3256-23	Washer - Flat	6 11 8	3296-29	Nut - Lock	35 21 9
3256-23	Washer - Flat	3 15 6	3296-29	Nut - Lock	5 23 8
3256-23	Washer - Flat	1 16 6	3296-29	Nut - Lock	51 26 4
3256-23	Washer - Flat	57 25 3	3296-29	Nut - Lock	32 27 8
3256-23	Washer - Flat	51 27 2	3296-29	Nut - Lock	6 39 9
3256-23	Washer - Flat	35 38 5	3296-29	Nut - Lock	58 45 3
3256-23	Washer - Flat	73 38 8	3296-29	Nut - Lock	74 52 2
3256-24	Washer	8 5 1	3296-39	Nut - Lock	54 5 2
3256-24	Washer - Flat	54 2 2	3296-39	Nut - Lock	66 9 8
3256-24	Washer - Flat	71 3 4	3296-39	Nut - Lock	67 9 8
3256-24	Washer - Flat	5 4 1	3296-39	Nut - Lock	73 16 8
3256-24	Washer - Flat	76 4 4	3296-39	Nut - Lock	76 18 2
3256-24	Washer - Flat	73 12 8	3296-39	Nut - Lock	6 28 3
3256-24	Washer - Flat	6 16 3	3296-39	Nut - Lock	35 29 4
3256-24	Washer - Flat	51 21 1	3296-39	Nut - Lock	22 30 2
3256-24	Washer - Flat	57 24 3	3296-39	Nut - Lock	59 35 4
3256-24	Washer - Flat	59 34 4	3296-39	Nut - Lock	5 38 1
3256-24	Washer - Flat	35 37 4	3296-39	Nut - Lock	58 52 2
3256-24	Washer - Flat	15 41 2	3296-39	Nut - Lock L.H.	64 20 2
3256-25	Washer - Flat	22 38 4	3296-42	Nut - Lock	21 3 2
3256-26	Washer - Flat	29 2 1	3296-42	Nut - Lock	72 6 10
3256-26	Washer - Flat	76 6 9	3296-42	Nut - Lock	1 9 10
3256-26	Washer - Flat	3 22 1	3296-42	Nut - Lock	19 10 4
3256-26	Washer - Flat	8 24 2	3296-42	Nut - Lock	51 10 3
3256-28	Washer - Flat	54 22 2	3296-42	Nut - Lock	32 11 7
3256-46	Washer - Flat	8 20 1	3296-42	Nut - Lock	64 13 2
3256-49	Washer - Flat	64 10 4	3296-42	Nut - Lock	14 15 2
3256-49	Washer - Flat	68 16 10	3296-42	Nut - Lock	18 17 4
3256-69	Washer - Thrust	5 31 3	3296-42	Nut - Lock	11 22 7
3256-71	Washer - Flat	68 8 2	3296-42	Nut - Lock	73 22 2
3256-78	Washer - Flat	72 5 10	3296-42	Nut - Lock	3 30 2
3258-19	Screw - Machine	52 6 2	3296-42	Nut - Lock	57 37 2
3258-166	Screw - Phillip Hd.	11 12 5	3296-42	Nut - Lock	35 47 1
3258-166	Screw - Phillip Hd.	3 28 2	3296-44	Nut - Lock	8 22 1
3258-166	Screw - Phillip Hd.	2 45 3	3296-44	Nut - Lock	57 23 4
3269-3	Rivet - Pop	71 6 4	3296-48	Nut - Lock	22 39 4
3269-3	Rivet - Pop	73 17 4	3296-51	Nut - Lock	57 19 6
3269-10	Washer - Back-up	33 55 7	3296-54	Nut - Lock	6 4 4
3269-13	Rivet - Pop	32 29 7	3296-56	Nut - Lock	23 53 2
3269-15	Rivet - Pop	33 49 8	3296-59	Nut - Lock	5 22 1
3269-28	Rivet - Pop	68 14 10	3296-59	Nut - Lock	6 36 2
3272-2	Pin - Cotter	5 5 2	3296-59	Nut - Lock	36 57 1
3272-4	Pin - Cotter	1 20 2	3296-60	Nut - Reel	64 17 1
3272-5	Pin - Cotter	3 17 3	32104-76	Screw - Thread Forming	58 48 2
3272-10	Pin - Cotter	29 1 1	32105-1	Screw - Cap Hex. Hd.	12 43 1
3272-10	Pin - Cotter	59 3 2	32105-8	Screw - Cap Hex. Hd.	32 43 2
3272-10	Pin - Cotter	57 17 3	32105-13	Screw - Cap Hex. Hd.	11 17 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3314-971

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
32105-21	Screw	29 4 2	340-108	Fitting - Hydraulic 90°	33 48 2
32107-11	Nut-Square	52 5 2	340-132	Fitting - Hydraulic 90°	18 4 3
32108-9	Screw - Machine	23 54 1	340-132	Fitting - Hydraulic 90°	57 4 5
32111-7	Nut - Acorn	76 17 6	340-132	Fitting - Hydraulic 90°	16 8 1
32120-74	Ring - Retaining	28 53 1	340-132	Fitting - Hydraulic 90°	19 11 1
32120-93	Ring - Retaining	59 20 4	340-132	Fitting - Hydraulic 90°	59 19 4
32120-93	Ring - Retaining	57 29 6	340-137	Fitting - Hydraulic 45°	14 27 1
32121-2	Pin - Roll	35 2 2	340-139	Fitting - Hydraulic 90°	16 23 1
32121-6	Pin - Roll	5 9 1	340-139	Fitting - Hydraulic 90°	14 35 1
32121-11	Pin - Roll	68 5 1	340-143	Fitting - Hydraulic 90°	19 8 1
32121-12	Pin - Roll	73 23 2	340-143	Fitting - Hydraulic 90°	17 18 1
32121-16	Pin - Roll	5 32 1	340-143	Fitting - Hydraulic 90°	16 32 1
32121-38	Pin - Roll	6 19 1	340-151	Fitting - Hydraulic Tee	18 14 1
32121-45	Pin - Roll	5 10 2	353-512	Fitting - Hydraulic Plug	19 5 2
32121-50	Pin - Roll	5 41 1	353-512	Plug - Hydraulic	18 9 1
32121-122	Pin - Roll	59 32 2	353-550	Fitting - Plug	15 44 1
32121-122	Pin - Roll	58 55 3	353-599	Pin-Dowel	65 3 2
32122-22	Screw	78 2 1	353-682	Fitting - Hydraulic Straight	14 20 1
32122-24	Screw - Round Hd.	21 10 5	353-781	Fitting-Elbow	53 1 2
32128-19	Nut - Flange Lock	75 2 2	353-886	Ring - Retaining	31 8 2
32128-25	Nut - Lock	51 29 3	353-922	Seal - Ring	31 6 6
32128-26	Nut - Flange	8 21 4	353-989	Plug	17 6 2
32128-36	Nut - Flange Lock R.H.	64 38 2	353-990	Plug	17 2 9
32136-5	Nut - Slotted	54 23 2	353-991	Plug	17 17 2
32144-1	Screw - Cap Hex. Hd.	12 41 2	354-5	Coupling	31 14 2
32144-10	Screw - Hex. Washer Hd.	14 33 2	354-13	Pin - Dowel	31 13 2
32144-14	Screw - Self Tapping	58 66 3	354-14	Pin - Dowel	31 21 2
32144-18	Screw - Cap Hex. Hd.	12 46 2	354-15	Seal - Oil	31 22 1
32144-21	Screw	3 6 1	354-16	Washer	31 4 4
32144-22	Screw - Cap Hex. Hd.	29 13 4	354-20	Fitting - Fuel Tee	21 17 1
32144-73	Screw - Self Tapping	64 3 5	354-21	Fitting - Fuel Straight	21 18 1
32144-112	Screw - Cap Hex. Hd.	23 51 8	354-22	Fitting - Fuel Straight	21 14 2
32144-112	Screw-Thread Forming	24 13 8	354-35	Gasket	31 29 1
32149-1	Nut - Lock	35 45 1	354-36	Cap - Adjuster Valve	31 30 1
32149-7	Nut - Lock	32 26 2	354-37	Adjuster - Valve	31 28 1
32151-12	Ring - Retaining	67 23 2	354-38	Ball - Valve	31 26 1
32151-36	Ring - Retaining	54 7 2	354-39	Spring - Compression	31 27 1
32151-36	Ring - Retaining	59 15 4	354-44	Body Assy.	65 10 1
32151-41	Ring - Retaining	65 13 1	354-45	Idler Gear Assembly	65 6 1
32151-48	Ring - Retaining	59 5 2	354-46	Ring-Seal	65 8 1
32151-48	Ring - Retaining	57 20 3	354-47	Cover Assy.	65 4 1
32151-61	Ring - Retaining	59 12 4	354-49	Drive Shaft Assembly	65 7 1
32151-62	Ring - Retaining	22 33 1	354-50	Screw-Hex Socket Hd.	65 1 4
32151-77	Ring - Retaining	54 40 1	354-51	Washer	65 2 4
32151-94	Ring - Retaining	58 50 1	354-52	Shaft - Drive	31 24 1
32152-10	Nut	61 2 1	354-53	Pump Body Assembly	31 23 1
32152-10	Nut	62 2 1	354-54	Plate - Gear	31 1 2
32152-10	Nut	63 2 1	354-55	Plate Assembly	31 25 1
32153-6	Nut - Lock	54 6 2	354-56	Pin - Dowel	31 2 2
3333-975	Tie - Cable	33 58 1	354-57	Gear - Drive	31 20 1
340-2	Fitting - Hydraulic Straight	16 5 1	354-58	Plate Assembly	31 15 1
340-3	Fitting - Hydraulic Straight	22 14 1	354-59	Shaft - Drive	31 11 1
340-3	Fitting - Hydraulic Straight	30 16 1	354-60	Plate - Gear	31 7 1
340-4	Fitting - Hydraulic Straight	30 10 2	354-61	Key - Woodruff	31 10 1
340-8	Fitting - Hydraulic Straight	14 11 2	354-62	Gear	31 9 1
340-13	Fitting - Hydraulic Straight	19 16 2	354-63	Cover Assembly	31 5 1
340-13	Fitting - Hydraulic Straight	16 19 2	354-64	Screw - Cap Hex. Hd.	31 3 4
340-18	Fitting - Hydraulic 90°	22 13 1	354-65	Idler Shaft Assembly	31 12 1
340-18	Fitting - Hydraulic 90°	20 7 10	354-66	Shaft - Idler	31 19 2
340-21	Fitting - Hydraulic Tee	20 13 1	354-67	Seal - Pre-Load Hi Pressure	31 17 4
340-77	Fitting - Hydraulic 90°	16 2 2	354-68	Plate - Load	31 18 4
340-77	Fitting - Hydraulic 90°	18 19 1	354-69	Seal - Load Hi Pressure	31 16 4
340-77	Fitting - Hydraulic 90°	14 22 1	354-70	Plug	17 21 1
340-82	Fitting - Hydraulic 90°	18 15 1	354-72	Fitting - Hydraulic 45°	22 36 1
340-92	Fitting - Hydraulic Straight	19 3 4	354-73	Fitting - Hydraulic Straight	14 24 2
340-92	Fitting - Hydraulic Straight	18 10 3	354-74	Fitting - Hydraulic Plug	14 16 1
340-92	Fitting - Hydraulic Straight	16 17 3	354-75	Fitting - Hydraulic 90°	22 34 1
340-101	Fitting - Hydraulic 90°	17 11 1	354-77	Fitting - Hydraulic Test Port	22 17 1
340-101	Fitting - Hydraulic Straight	16 10 2	354-77	Fitting - Test Port	16 11 2
340-103	Fitting - Hydraulic 45°	20 3 5	354-79	Cap - Test Port	16 12 2
340-103	Fitting - Hydraulic 45°	54 32 2	354-79	Cap - Test Port	22 18 1
340-103	Fitting - Hydraulic 45°	58 64 1			

*Not Illustrated

TABLE OF CONTENTS

Description	Page	Description	Page
Frame & Body Assembly	1-2	Alternator Assembly	50
Steering Tower Assembly	3	Engine Components Assembly	51
Steering Valve Assembly No. 75-0600	4	Air Cleaner Assembly	52
Traction & Brake Pedals Assembly	5	Fuel Filter Assembly	53
Seat & Throttle Assembly	6-7	Rear Axle Assembly	54-55
Seat Suspension Assembly	8	Hydraulic Cylinder No. 75-1200	56
Diagnostic-ACE Display Assembly	9	Front Lift Arms Assembly	57-58
Electrical Schematic	10	Rear Lift Arms Assembly	59-60
Control Console Assembly	11-12	Hydraulic Cylinder Assembly No. 85-9880	61
Hydraulic Schematic	13	Hydraulic Cylinder Assembly No. 83-7480	62
Hydraulic Reservoir Assembly	14-15	Hydraulic Cylinder Assembly No. 83-7490	63
Hydraulic Control Manifold Assembly	16	Reel Assembly	
Control Manifold Assembly	17	(5 & 8 Blade Cutting Units)	64
Front Hydraulic Manifolds	18	Reel Motor Assembly No. 75-1400	65
Rear Hydraulic Manifolds	19	Roller Assembly	
Cutting Unit Hydraulic Components	20	(5 Blade C.U. Serial No. 20001 thru 20555)	
Fuel Tank Assembly	21	(8 Blade C.U. Serial No. 20001 thru 21322)	66
Front Axle & Transmission Assembly	22-23	Roller Assembly	
Front Axle Assembly No. 86-7200	24-25	(5 Blade C.U. Serial No. 20556 & Up)	
Brake Assembly	26	(8 Blade C.U. Serial No. 21323 & Up)	67
Transmission Assembly No. 75-0010	27-28	Grass Basket Assembly	68
Traction Control Assembly	29	Front Scraper Kit No. 83-5400 (Optional)	69
Gear Pump Installation Assembly	30	High Height-Of-Cut Kit No. 83-5300	
Hydraulic Pump Assembly No. 75-0800	31	(Optional)	70
Radiator Assembly	32-33	Roller Scraper Kit Model No. 03512	
Muffler & Pump Drive Assembly	34	(Optional)	71
Engine Installation Assembly	35-36	Turf Compensation Kit Model No. 03510	
Valves & Crankshaft Assembly	37-38	(Optional)	72
Crankcase Assembly	39	Dethatcher Assembly Model No. 03516	
Camshaft Assembly	40	(Optional)	73-74
Cylinder Head Assembly	41-42	Armrest Kit Model No. 30707 (Optional)	75
Water Pump Assembly	43	R.O.P.S. Assembly (Optional)	76
Fuel Supply & Engine Block Assembly	44-45	Rear Weight Kit No. 75-6690 (Optional)	77
Fuel Injection Pump Assembly	46-47	Special Tools	78-79
Governor Assembly	48	International Decal Cross Reference	80-83
Starter Assembly	49	Part Number Index	84-95

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster® 5100D has two identification numbers; a model number and a serial number. The two numbers are stamped on a decal which is located on the traction unit frame under the seat. In any correspondence concerning the Reelmaster 5100D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 5100D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro

Distributor (Dealer) to obtain guarantee policies for your country, province or state.