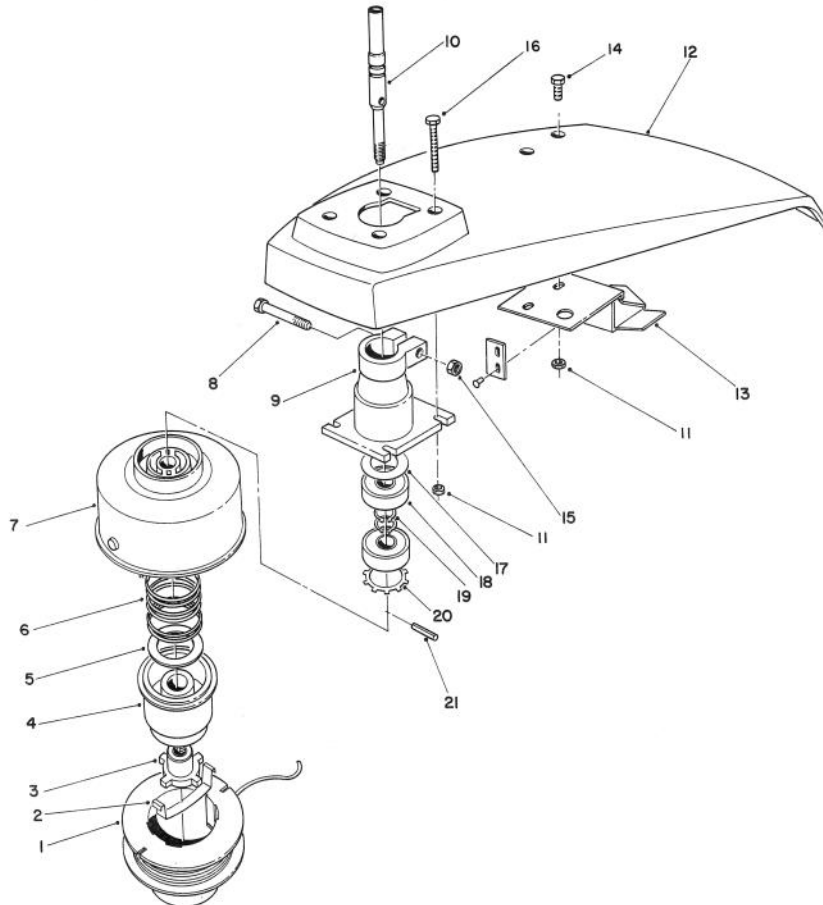


TORO®**MODEL NO. 51637-2000001 & UP****PARTS
CATALOG****TC 2010 GAS TRIMMER**

C-0255


CUTTER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-4640	Spool - Prewound .08 Dia. 38' (Incl. Ref.#2 & 22)	1
2	33-8940	Saddle	1
3	42-6050	Driver	1
4	33-6230	Core - Spool	1
5	3256-42	Washer	1
6	29-7130	Spring - Compression	1
7	42-5950	Drum w/Eyelet	1
8	321-9	Screw - Hex. Hd.	1
9	42-5931	Housing - Bearing (Incl. Ref. #10,17-21)	1
10		Shaft - Power	1
11	3296-2	Nut - Lock	6
12	52-5730	Shield	1
13	42-5920	Bracket & Knife Blade	1

Ref. No.	Part No.	Description	No. Used
14	3290-500	Screw - Hex. Washer Hd.	2
15	3296-42	Nut - Lock	1
16	3290-501	Screw - Hex. Washer Hd.	4
17	42-6030	Washer	1
18	49-2410	Bearing - Ball	2
19	32151-65	Ring - Retaining	2
20	42-5770	Spring - Grip	1
21	32121-95	Pin - Coil	1
22		Line - Cutting .08 Dia. 38'	1
*	43-5000	Line - Cutting .08 Dia. (38' Optional)	1
*	46-2710	Line - Cutting .08 Dia. (405' 1Lb. Optional)	1
*	83-4620	Cutter Head Assembly (Incl. Ref. #1-7 & 22)	1

*Not Illustrated

TPS

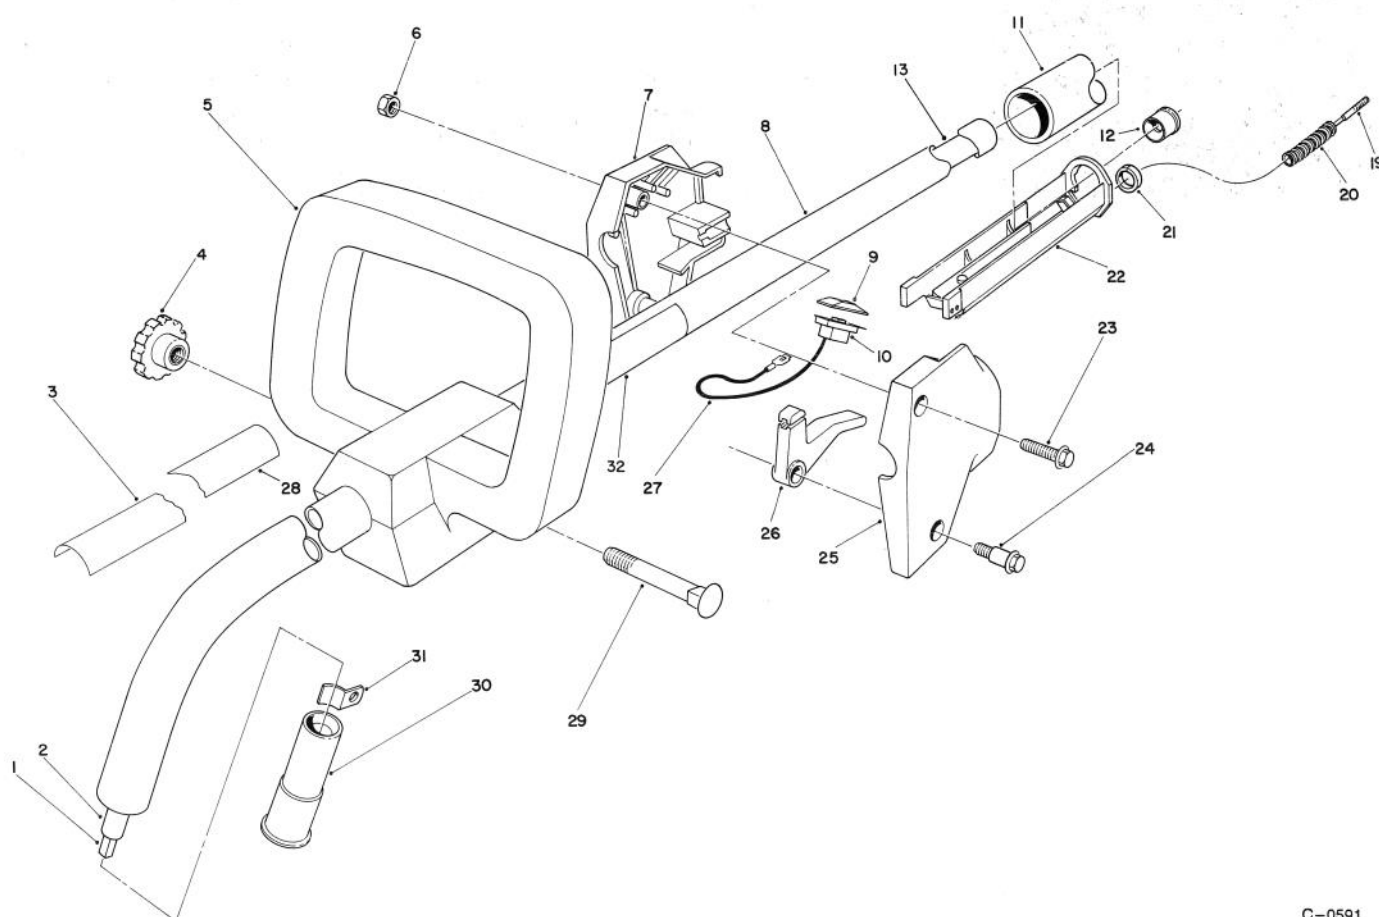


C-0591

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-9810	Shaft - Wound Drive	1
2	57-5460	Liner - Shaft	1
3	76-4480	Decal - TC 2010	1
4	19-4050	Knob - Handle Release	1
5	42-5551	Handle	1
6	3296-12	Nut - Lock	2
7	57-5480	Housing - R.H.	1
8	53-7360	Tube - Curved	1
9	218-557	Cap - Switch	1
10	42-6000	Switch	1
11	53-7110	Grip	1
12	54-7630	Bushing - Pilot	1
13	57-5470	Spacer	1
19	76-4370	Cable - Throttle	1
20	55-8411	Cover - Cable	1

Ref. No.	Part No.	Description	No. Used
21	2412-48	Clip	2
22	53-7280	Trough	1
23	32105-12	Screw - Hex. Washer Hd.	1
24	57-5420	Screw - Shoulder	1
25	57-5490	Housing - L. H.	1
26	53-7273	Lever - Throttle	1
27	53-7370	Wire	2
28	82-6210	Decal - Warning	1
29	3-7253	Bolt - Carriage	1
30	44-6640	Insert	1
31	46-9890	Retainer - Tube	2
32	83-6620	Decal - Instructions	1
*	57-5510	Casing Assembly (Incl. Ref.#2 & 13)	1

*Not Illustrated

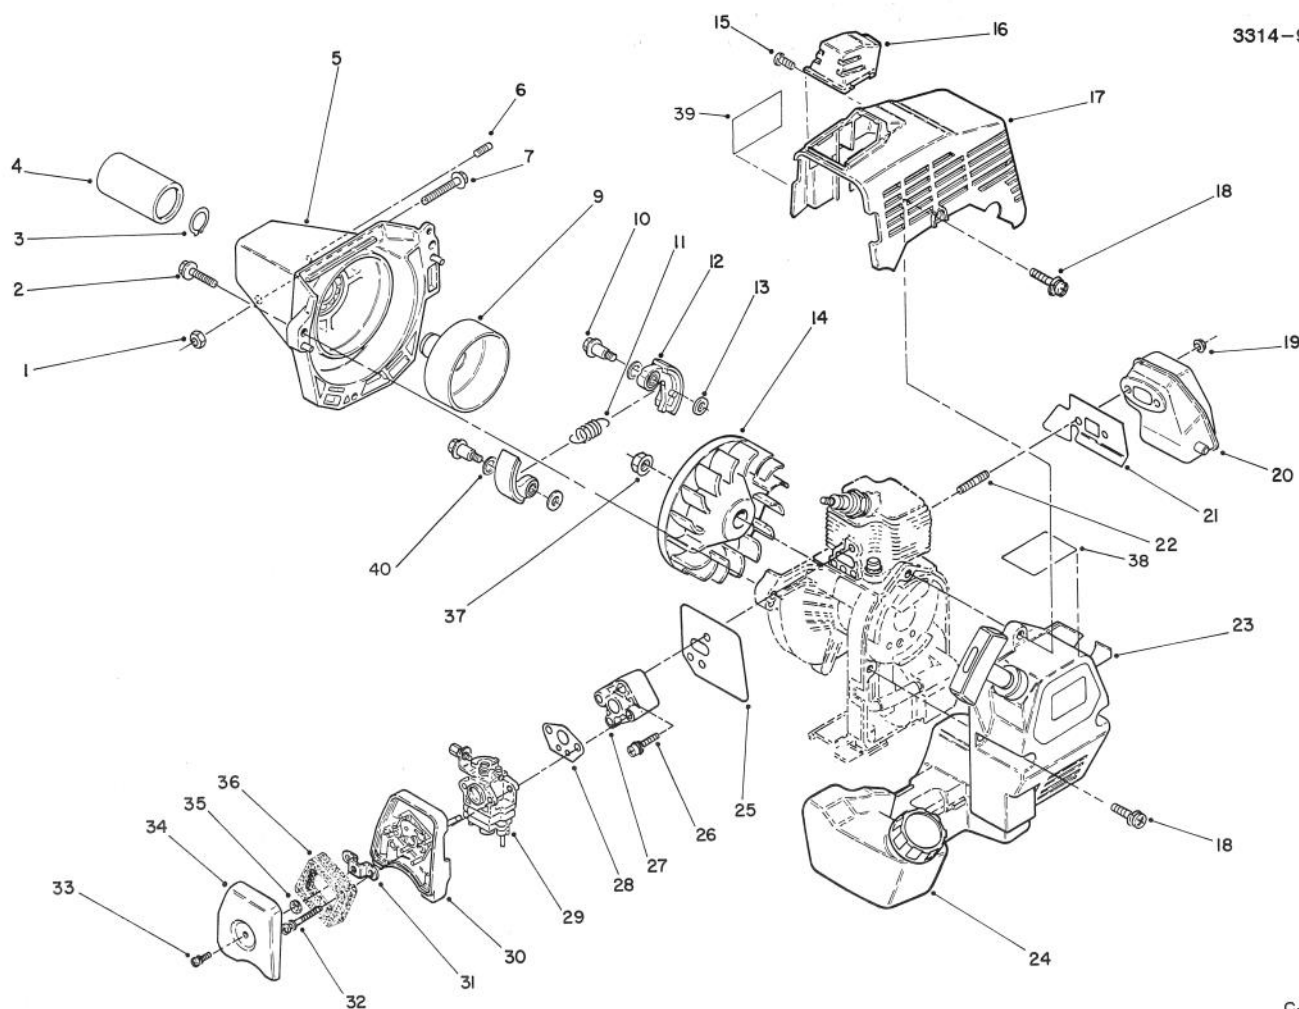

C-0582


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	56-8770	Nut - Lock	1
2	54-4790	Bolt/Washer	3
3	54-4470	Ring - Retaining	1
4	82-8490	Spacer	1
5	77-2160	Housing - Clutch	1
6	3247-10	Screw - Set	1
7	77-2150	Screw/Washer	1
9	60-7640	Clutch - Drum	1
10	82-6040	Bolt Clutch	2
11	54-6230	Spring	1
12	54-6220	Shoe - Clutch	2
*	77-1830	Clutch Assembly (Incl. Ref. #11 & 12)	1
13	77-1840	Washer	2
14	60-7780	Fan	1
15	54-6890	Screw	1
16	77-1190	Guard - Spark Plug	1
17	77-1200	Cover - Engine	1
18	77-1860	Screw/Washer	3
19	77-1790	Nut - Flanged	2
20	77-1780	Muffler	1

Ref. No.	Part No.	Description	No. Used
21	82-6080	Gasket - Muffler	1
22	77-1210	Stud	2
23	82-6180	Recoil Assembly	1
24	88-0220	Fuel Tank Assembly	1
25	77-1460	Gasket - Insulator	1
26	60-7930	Screw/Washer	2
27	77-1450	Insulator	1
28	77-1430	Gasket - Carburetor	1
29	88-0270	Carburetor Assembly	1
30	77-1760	Case - Air Cleaner	1
31	77-1750	Bracket - Cover	1
32	54-4870	Screw/Washer	2
33	60-7680	Screw/Washer	1
34	77-1710	Cover - Air Cleaner	1
35	77-1720	Nut	1
36	77-1730	Element - Air Cleaner	1
37	54-4670	Nut - Conical	1
38	84-8830	Decal - Fuel Mix	1
39	65-2690	Decal - Hot	1
40	82-6050	Washer - Wave	2
*		Engine - TM21	1

*Not Illustrated

3314-992

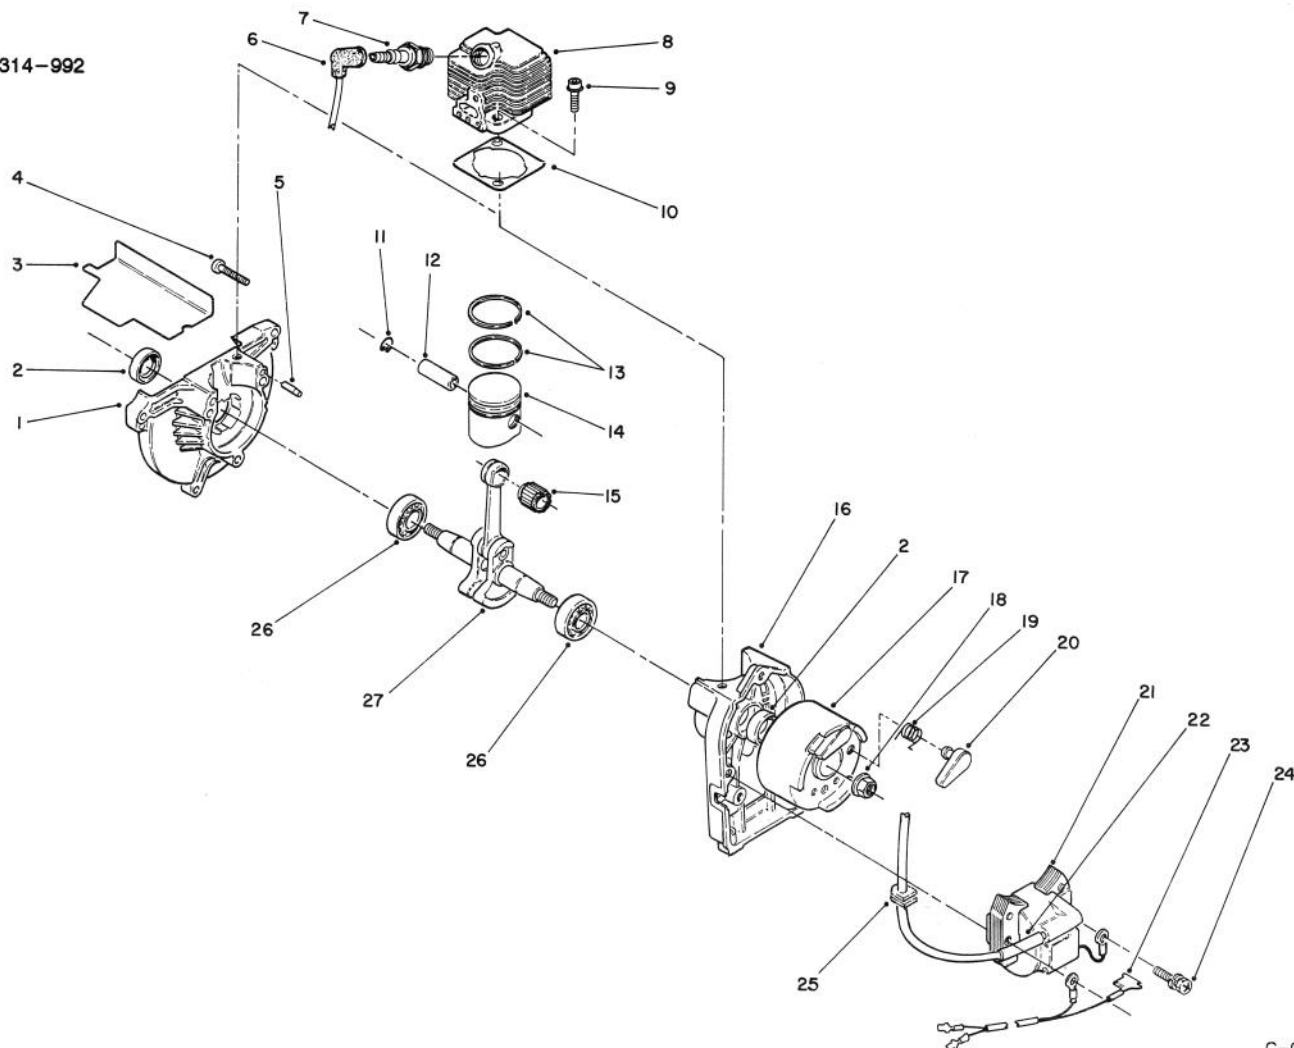




C-0583

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	77-1160	Case - Drive	1
2	54-4380	Seal - Oil	2
3	82-6070	Gasket - Insulator	1
4	54-4330	Screw - Pan Hd.	3
5	60-7590	Pin - Dowel	2
6	77-1340	Boot - plug	1
7	45-0320	Plug - Spark (NGK BM6A)	1
8	77-1220	Cylinder Head	1
9	60-7720	Bolt - Cylinder Head	2
10	60-7730	Gasket - Cylinder Head	1
11	54-5920	Clip - Piston Pin	2
12	60-7760	Pin - Piston	1
13	60-7740	Set - Piston Ring	1
14	77-1280	Piston Assembly (Incl. Ref.#11 & 12)	1

Ref. No.	Part No.	Description	No. Used
15	54-5930	Bearing - Needle	1
16	60-7600	Case - Starter	1
17	77-1360	Flywheel Assembly (Incl. Ref.#19 & 20)	1
18	54-4670	Nut - Conical	1
19	77-1370	Spring - Return	1
20	77-1380	Ratchet	1
21	77-1400	Coil - Ignition	1
22	77-2180	Tube - Insulator	1
23	84-8620	Wire Assembly	1
24	54-4790	Bolt/Washer	2
25	60-7840	Grommet	1
26	54-4360	Bearing - Main	2
27	77-1330	Crankshaft Assembly	1

*Not Illustrated

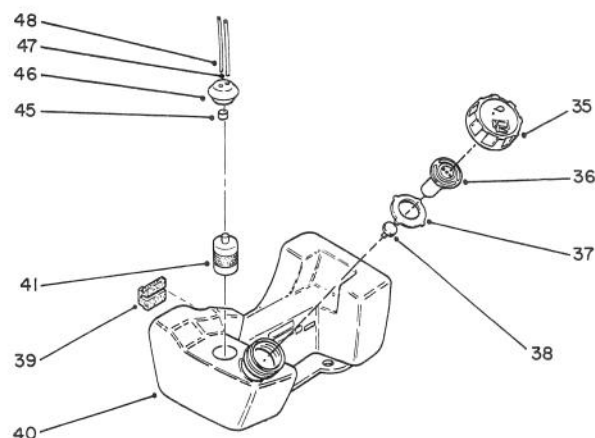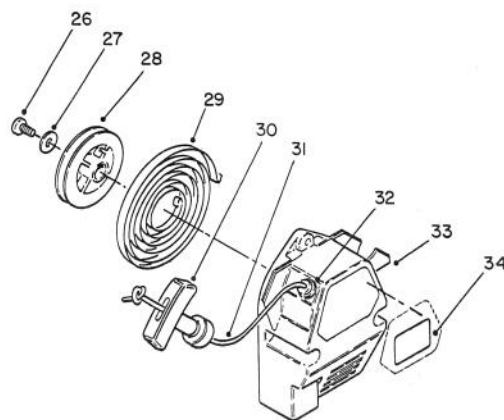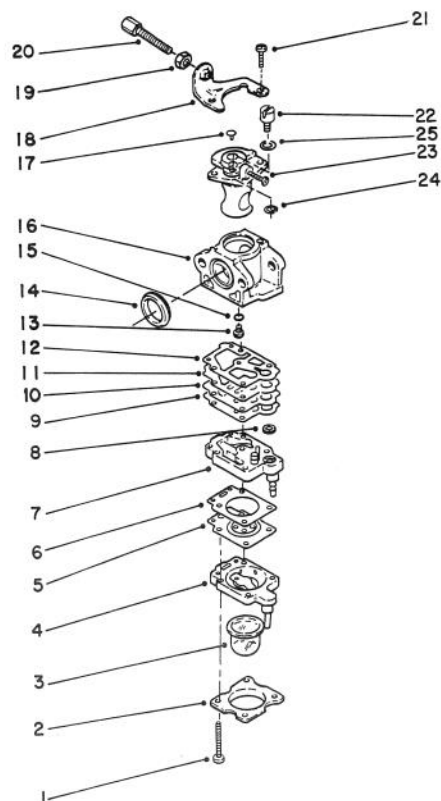




C-1257

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	77-1690	Screw	4
2	77-1680	Cover - Primer	1
3	77-1670	Bulb - Primer	1
4	77-1660	Body - Primer	1
5	77-1650	Diaphragm	1
6	77-1640	Gasket - Diaphragm	1
7	77-1630	Body Assembly - Pump (Incl. Ref. #8)	1
8	77-1620	Screen	1
9	77-1610	Gasket - Pump	1
10	77-1600	Plate	1
11	77-1590	Diaphragm	1
12	77-1580	Gasket - Diaphragm	1
13	77-1570	Jet #43	1
*	82-2540	Jet - High Altitude #41	1
14	77-1550	Gasket	1
15	77-1560	"O"Ring - Main Jet	1
16		Body - Carburetor (Ref.)	1
17	77-1530	Plug	1
18	77-1490	Bracket	1
19	77-1480	Nut - Lock	1
20	77-1470	Screw - Adjustment	1

Ref. No.	Part No.	Description	No. Used
21	77-1500	Screw	1
22	77-1510	Swivel - Cable	1
23	77-1540	Valve - Throttle	1
24	77-1520	Ring - Clip	1
*	88-0270	Carburetor Assembly (Incl. Ref. #1 - 24 & 48)	1
*	77-2110	Kit - Carburetor Repair (incl. Ref. #5,6,8,9, 11-15 & #28 page 3)	1
25	77-9900	Washer	1
26	60-8220	Screw	1
27	65-4470	Washer	1
28	60-8230	Reel	1
29	54-5420	Spring - Recoil	1
30	54-5440	Handle - Recoil	1
31	54-6370	Rope - Recoil	1
32	77-1930	Guide - Rope	1
33	82-6170	Case - Recoil	1
34	76-0790	Decal - Toro	1
*	82-6180	Recoil Assembly (Incl. Ref. #25-32)	1

*Not Illustrated

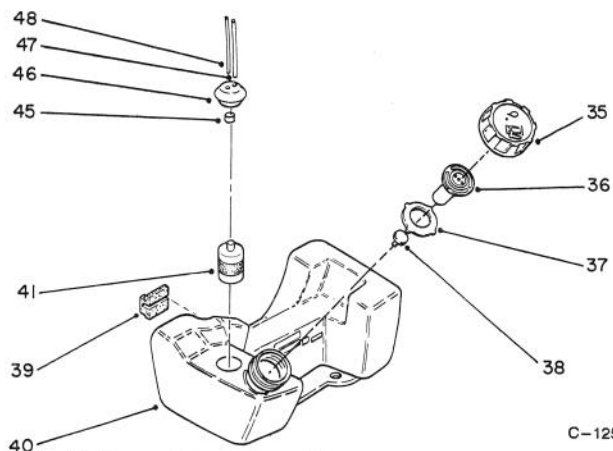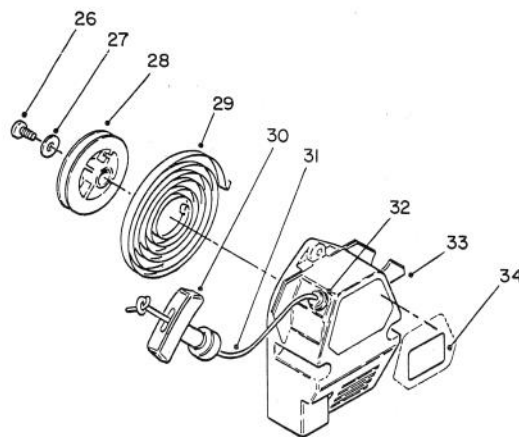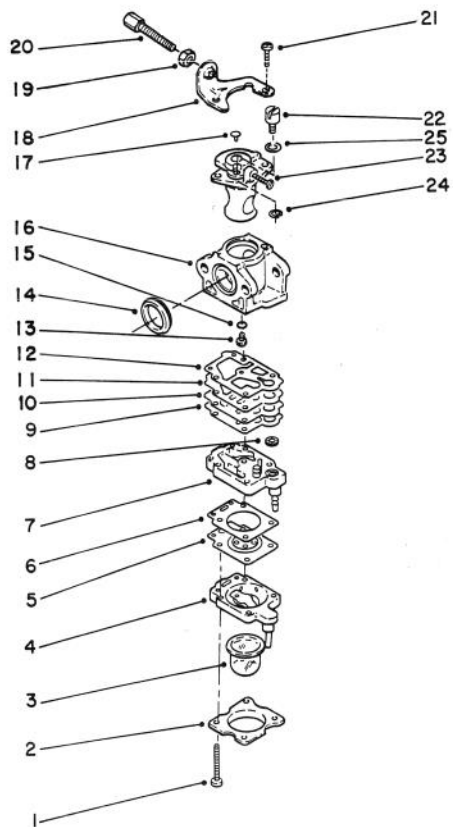


C-1257

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
35	77-1990	Cap - Fuel	1
36	77-2000	Valve - Breather	1
37	77-2010	Gasket	1
38	77-2020	Cap - Valve	1
*	77-1980	Cap Assembly (Incl. Ref. #34-37)	1
39	60-8280	Pad	4

Ref. No.	Part No.	Description	No. Used
40	88-0220	Tank Assembly - Fuel (Incl. Ref. #34-37)	1
41	88-0250	Filter Assembly - Fuel	1
45	77-1970	Collar	1
46	77-2030	Grommet - Fuel Tank	1
47	88-0390	Tube - Fuel	1
48	77-1960	Tube - Fuel	1

*Not Illustrated

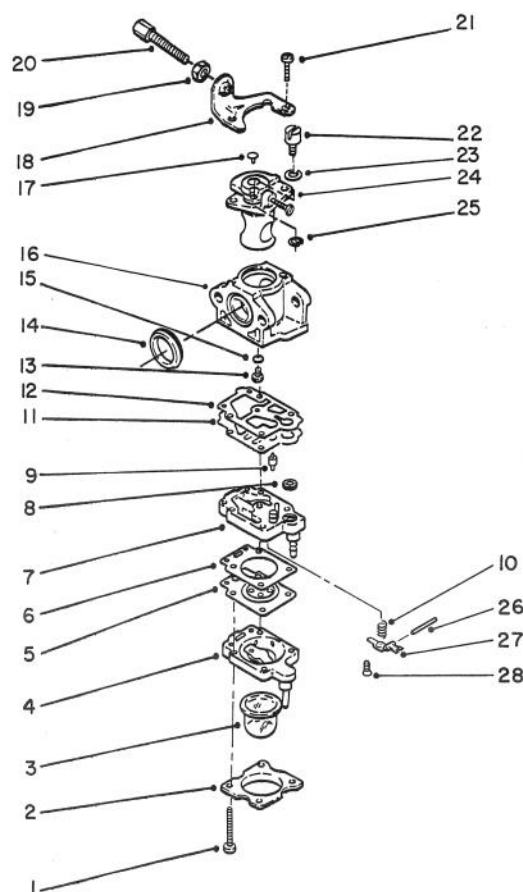

C-1259


CARBURETOR ASSEMBLY (Serial Nos. 2003408 & Up)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-0330	Screw	4	17	77-1530	Plug	1
2	88-0320	Cover - Primer	1	18	77-1490	Bracket - Throttle	1
3	77-1670	Bulb - Primer	1	19	77-1480	Nut - Lock	1
4	88-0310	Body - Primer	1	20	77-1470	Screw - Adjustment	1
5	77-1650	Diaphragm	1	21	77-1500	Screw	1
6	88-0300	Gasket - Diaphragm	1	22	77-1510	Swivel - Cable	1
7	88-0290	Body Assembly - Fuel Pump (Incl. Ref. #8)	1	23	77-9900	Washer	1
8	77-1620	Screen	1	24	77-1540	Valve - Throttle	1
9	88-0340	Valve - Needle	1	25	77-1520	Ring - Clip	1
10	88-0350	Spring	1	26	88-0370	Pin	1
11	77-1590	Diaphragm	1	27	88-0360	Lever	1
12	77-1580	Gasket - Diaphragm	1	28	88-0380	Screw	1
13	77-1570	Jet - #43	1	*	88-0270	Carburetor Assembly (Incl. Ref. #1 - 24 & 48)	1
*	82-2540	Jet - High Altitude #41	1	*	88-0410	Kit - Carburetor Repair (Incl. Ref. #5,6,8,9,11-15 & #28 page 4)	1
14	77-1550	Gasket	1				
15	77-1560	"O"Ring - Main Jet	1				
16		Body - Carburetor (Ref.)	1				

Litho in U.S.A.

AL-923613

*Not Illustrated

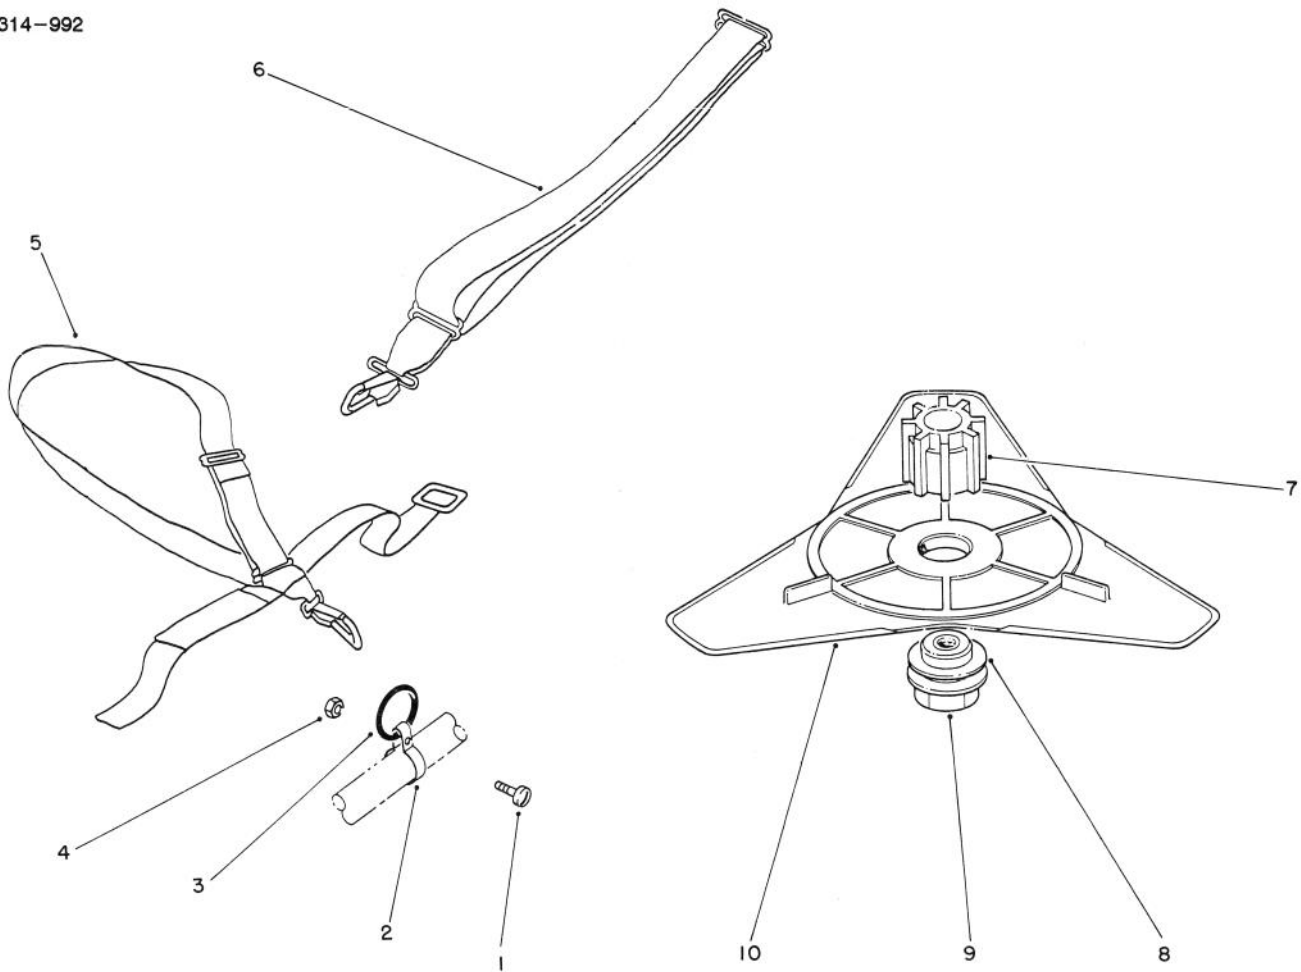

C-1025

FLEX BLADE & HARNESS ACCESSORIES(Optional)

Ref. No.	Part No.	Description	No. Used
1	3251-4	Screw	1
2	44-2430	Clamp	1
3	44-7540	Ring	1
4	3296-12	Nut - Lock	1
5	46-2961	Shoulder Waist Harness	1
6	46-2951	Shoulder Harness	1
7	44-2410	Adapter - Blade	1

Ref. No.	Part No.	Description	No. Used
8	51-1340	Washer	1
9	44-2420	Nut - Adapter	1
10	46-2790	Blade - Flex 10"	1
*	46-2691	Kit - Harness, Clamp & Ring (Incl. Ref. #1-4)	1
*	83-4390	Kit - Flex Blade / Harness (Incl. Ref. #1-4 & 6-9)	1

*Not Illustrated