



Groundsmaster® 7200 Traction Unit with 62in Rotary Mower

Model No. 30462 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 4	Carrier Frame and Valve Assembly	 36
Radiator Assembly	 5	Carrier Frame Assembly No. 112-1631	 37
Control Panel Assembly	 6	Hydraulic Cylinder Assembly No. 110-9834	 38
Transmission Assembly	 7	Hydraulic Valve Assembly No. 114-2877	 39
Gear Pump Assembly No. 112-9542	 8	Caster Fork Assembly	 40
Charge Pump Housing Assembly		Caster Wheel Assembly No. 108-9954	 41
Transmission Assembly No. 107-0801	 9	Deck Linkage Assembly	 42
Center Section Assembly Transmission Assembly No. 107-0801	 10	Roll-Over Protection System and Rear Wheel Assembly	 43
Gear Case and Clutch Assembly		Crankcase Assembly	 44
Transmission Assembly No. 107-0801	 11	Oil Pan Assembly	 45
Traction Control Assembly	 12	Cylinder Head Assembly	 46
Engine Component Assembly	 13	Gear Case Assembly	 47
Air Cleaner Assembly No. 104-3428	 14	Head Cover Assembly	 48
Engine and Muffler Assembly	 15	Dipstick and Guide Assembly	 49
Hydraulic Assembly	 16	Main Bearing Case Assembly	 50
Parking Brake Assembly	 17	Camshaft and Idle Gear Shaft Assembly	 51
Electrical Assembly	 18	Piston and Crankshaft Assembly	 52
Hood Assembly	 19	Flywheel Assembly	 53
Fuel Tank Assembly	 20	Fuel Camshaft and Governor Shaft Assembly	 54
Seat Assembly	 21	Idle Apparatus Assembly	 55
Seat Assembly No. 107-2286	 22	Injection Pump Assembly	 56
Driveshaft Assembly	 23	Governor Assembly	 57
Driveshaft Assembly No. 110-3575	 24	Speed Control Plate Assembly	 58
Rear Drive Assembly	 25	Nozzle Holder and Glow Plug Assembly	 59
Hydraulic Motor Assembly No. 108-5230	 26	Nozzle Holder Assembly	 60
Hydraulic Motor Assembly No. 108-5155	 27	Alternator and Pulley Assembly	 61
Deck Roller, Belt and Pulley Assembly	 28	Alternator Components	 62
Deck Decal Assembly	 29	Starter Assembly	 63
Low Driven Idler Assembly No. 104-3532	 30	Starter Assembly No. 98-9705	 64
High Driven Spindle Assembly No. 104-3531	 31	Water Flange and Thermostat Assembly	 65
Double Driven Spindle Assembly No. 104-3530	 32	Water Pump Assembly	 66
Belt Cover, Gearbox and Baffle Assembly	 33	Valve and Rocker Arm Assembly	 67
Gearbox Assembly No. 110-6386-03	 34	Inlet Manifold Assembly	 68
Deck Adjustment Link and Bumper Assembly	 35	Muffler Gasket and Operator Manual	 69
		Upper and Lower Gasket Kits	 70
		Attachments and Accessories List	 71


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	LH.	left hand
BBC.	blade brake clutch	NI.	nylon insert
CARR.	carriage	NPTF.	national pipe thread fine
DEG.	degrees	PFH.	phillips flat head
EXT.	external	PPH.	phillips pan head
FH.	flat head	PPHTF.	phillips pan head thread forming
GA.	gauge	PRH.	phillips round head
HD.	heavy-duty	PTH.	phillips truss head
HF.	hex flange	PTO.	power-take-off
HH.	hex head	RH.	right hand
HHF.	hex head flange	ROPS.	roll-over protection system
HHFTF.	hex head flange thread forming	SFH.	slotted fillister head
HJ.	hex jam	SHH.	slotted hex head
HLH.	hex lag head	SHWH.	slotted hex washer head
HOC.	height-of-cut	SPH.	slotted pan head
HSBH.	hex socket button head	SQH.	square head
HSFH.	hex socket flat head	SRH.	slotted round head
HSH.	hex socket head	STD.	standard
HWH.	hex washer head	TAP.	self tapping
HWHTF.	hex washer head thread forming	TTH.	torx truss head


Footnotes

- ❶ Not serviced separately

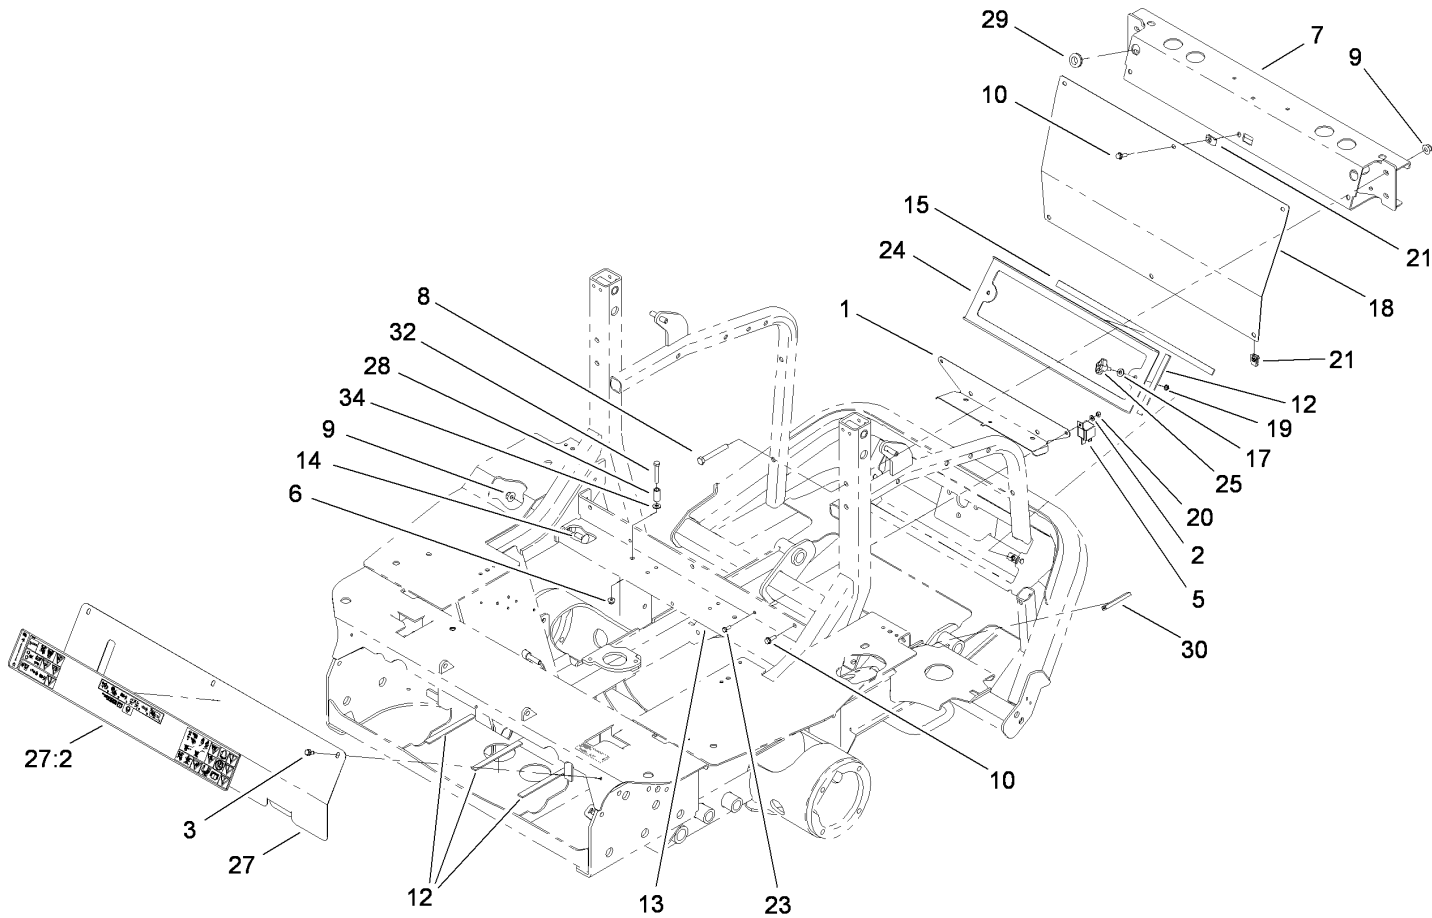

Frame Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	114-4055-03	1	Bracket-Wire	29	237-124	2	Grommet
2	3256-51	2	Washer-Flat	30	110-8276	1	Trim-Hold Down, Battery
3	32144-10	3	Screw-HWH	32	321-10	2	Screw-HH
5	99-7435	1	Relay-Power	34	3256-22	2	Washer-Flat
6	104-7201	2	Nut-HF				
7	112-6361-03	1	Crossmember ASM				
8	323-13	4	Screw-HH				
9	104-8301	8	Nut-Flange, NI				
10	3234-4	6	Screw-HHF				
12	105-0778	5	Strip-Foam				
13	105-7296-03	1	Support-Seat				
14	3231-2	4	Screw-CARR				
15	112-6387	2	Strip-Foam				
17	3256-22	2	Washer-Flat				
18	112-6367-03	1	Panel-Rear				
19	32151-106	2	Ring-Retaining				
20	3296-2	2	Nut-Lock				
21	107069	8	Clip				
23	32105-2	2	Screw-SHWH				
24	112-6384-03	1	Screen ASM				
25	98-8332	2	Knob				
27	110-9794	1	Cover-Front				
27:2	110-9772	1	Decal-Safety				
28	95-5807	2	Spacer				

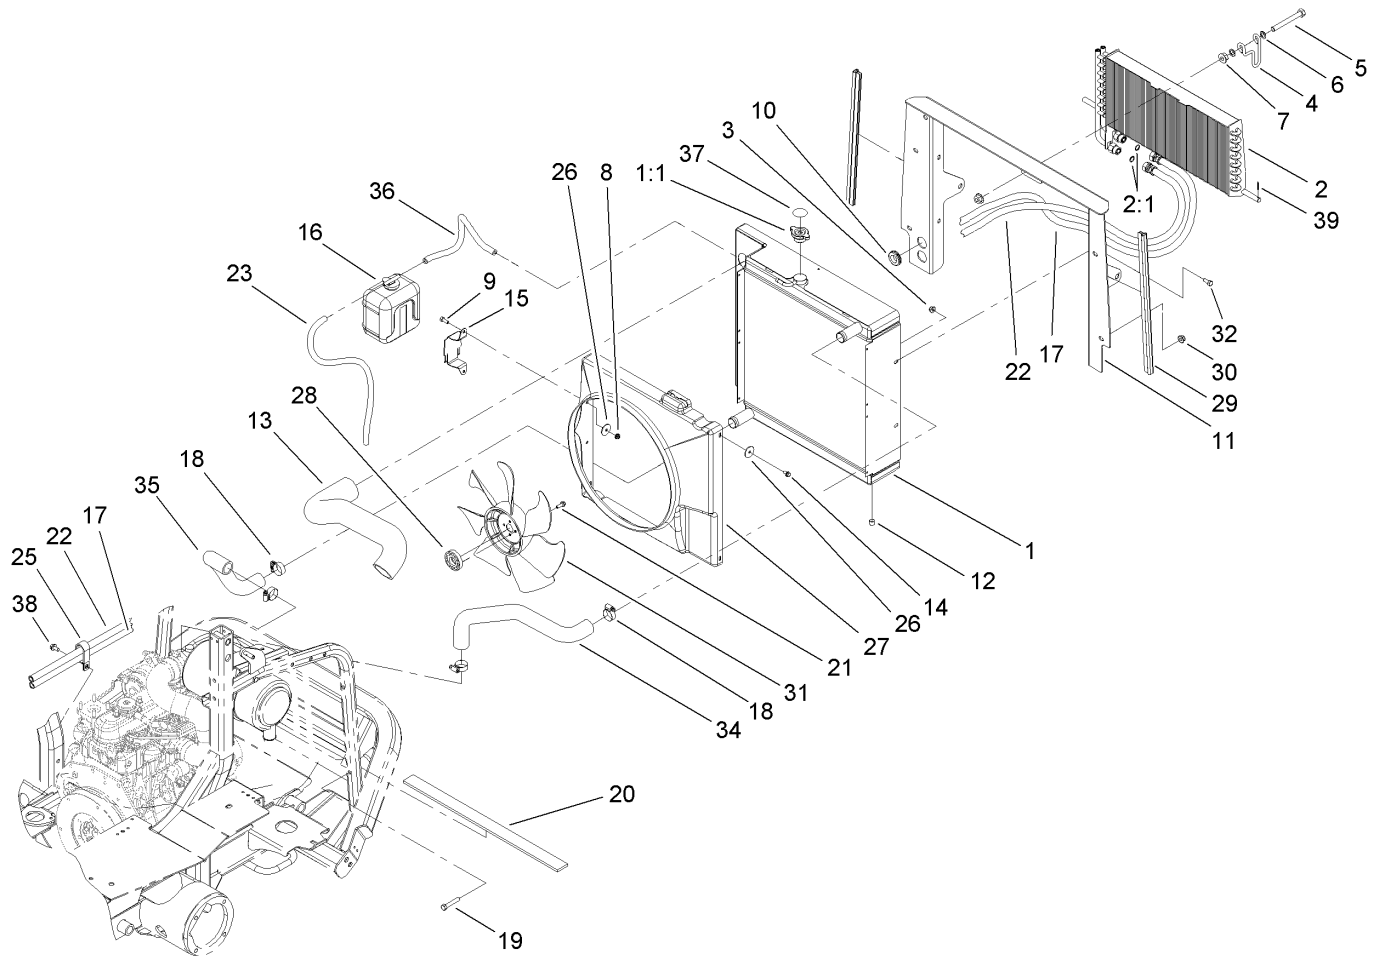

Radiator Assembly


Ref	Part No.	Qty.	Description
1	99-3637	1	Radiator
1:1	93-5957	1	Cap-Radiator
2	112-1684	1	Cooler-Oil
2:1	237-30	2	O-Ring
3	104-8300	4	Nut-Flange, NI
4	104-5429	1	Clamp-Form, Wire
5	325-17	1	Screw-HH
6	41-8440	2	Washer
7	32128-49	2	Nut-HHF
8	104-7201	2	Nut-HF
9	321-4	2	Screw-HH
10	240-4	2	Grommet-Rubber
11	110-8277-03	1	Frame-Radiator
12	99-8551	1	Plug-Pipe
13	105-7281	1	Hose-Air Inlet, Upper
14	32104-116	4	Screw
15	108-9930-03	1	Bracket-Bottle
16	108-0638	1	Bottle-Overflow
17	110-5542	1	HYD Hose ASM
18	2412-34	4	Clamp-Hose
19	323-10	4	Screw-HH
20	108-9935	1	Strip-Foam
21	33103-020	4	Screw-HHF
22	110-5543	1	HYD Hose ASM

Ref	Part No.	Qty.	Description
23	108-3284	1	Hose-Fuel
25	2412-137	1	Clamp-R, Double
26	3256-55	6	Washer-Flat
27	108-9927	1	Shroud-Fan
28	104-4247	1	Spacer-Fan
29	107-2269	2	Seal-Bulb
30	104-8301	4	Nut-Flange, NI
31	104-4246	1	Fan-Engine
32	3234-5	4	Screw-HHF
34	105-7282	1	Hose-Radiator, Upper
35	105-7283	1	Hose-Radiator, Lower
36	109-0274	1	Hose-Fuel
37	106-6755	1	Decal-Cap, Radiator
38	32144-14	1	Screw-HWHTF
39	32121-107	1	Pin-Roll, Slotted

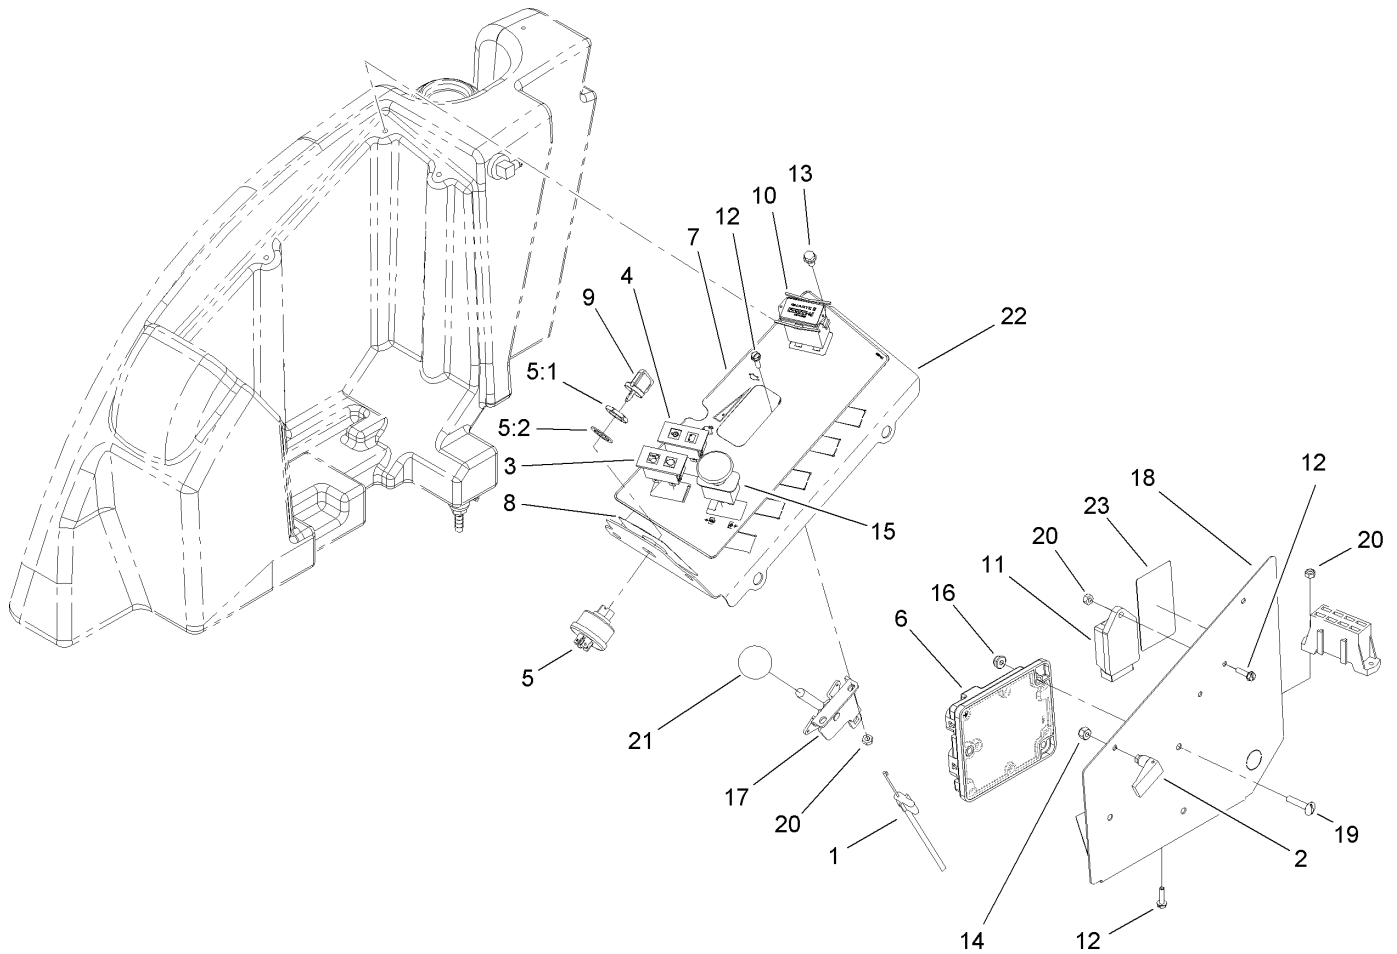

Control Panel Assembly


Ref	Part No.	Qty.	Description
1	110-5548	1	Cable-Throttle
2	74-5950	2	Latch-Swell
3	100-8071	1	Lamp-Warning
4	100-8070	1	Lamp-Warning
5	104-2541	1	Switch ASM
5:1	218-461	1	Nut-HH
5:2	3254-5	1	Washer-Tooth
6	106-9277	1	Module-Control, Standard
7	110-8253	1	Decal-Panel, Control
8	110-8254	1	Decal-Start, Control Panel
9	63-8360	2	Key-Ignition
10	1-513374	1	Meter-Hour
11	98-7611	1	Controller-Glow
12	32105-13	5	Screw-HWH
13	3234-13	5	Screw-HHF
14	1-804254	2	Nut
15	93-9999	1	Switch-PTO
16	104-7201	3	Nut-HF
17	110-5547	1	Control Lever ASM
18	110-8257-03	1	Cover-Panel, Control
19	3258-19	3	Screw
20	3296-2	5	Nut-Lock
21	233-42	1	Knob
22	110-8256-03	1	Panel-Control

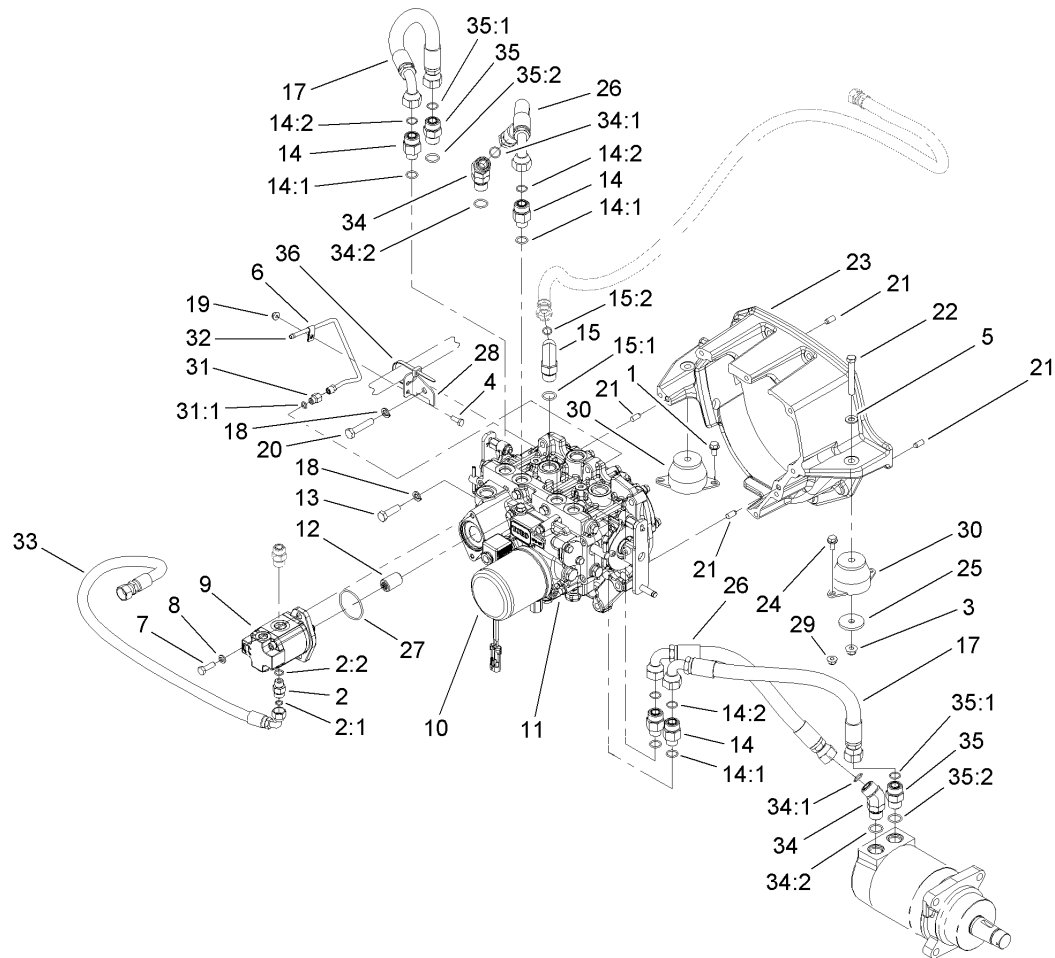

Transmission Assembly


Ref	Part No.	Qty.	Description
1	32144-14	2	Screw-HWHTF
2	340-2	1	Fitting-HYD, Straight
2:1	237-22	1	O-Ring
2:2	237-42	1	O-Ring
3	104-8301	2	Nut-Flange, NI
4	321-4	1	Screw-HH
5	3256-24	2	Washer-Flat
6	2412-72	1	Clip-Closed, Insulated
7	33114-025	2	Screw-HH
8	3253-4	2	Washer-Lock
9	112-9542	1	Pump-Gear
10	108-5194	1	Filter-Oil
11	107-0801	1	Transmission ASM
12	108-9920	1	Coupler-Spline, 9T
13	33115-035	1	Screw-HH
14	340-155	4	Fitting-HYD, Straight
14:1	237-79	1	O-Ring
14:2	237-151	1	O-Ring
15	340-105	1	Fitting-HYD, 90 DEG
15:1	237-80	1	O-Ring
15:2	237-30	1	O-Ring
17	112-1683	2	Hose ASM
18	48-9590	7	Washer-Lock
19	104-7201	1	Nut-HF

Ref	Part No.	Qty.	Description
20	33115-050	6	Screw-HH
21	87-1910	4	Pin-Dowel
22	323-13	2	Screw-HH
23	108-5193	1	Housing-Flywheel
24	3234-17	2	Screw-HHF
25	80-8560	2	Washer-Hardened
26	110-5518	2	Hose ASM
27	108-9919	1	O-Ring
28	110-5534	1	Support-Tube
29	104-8300	2	Nut-Flange, NI
30	107-2289	2	Mount-Motor
31	110-5536	1	Fitting-HYD, Adapter
31:1	237-78	1	O-Ring
32	110-5537	1	Tube ASM
33	94-5961	1	Hose ASM
34	340-14	2	Fitting-HYD, 45 DEG
34:1	237-65	1	O-Ring
34:2	237-80	1	O-Ring
35	340-7	2	Adapter
35:1	237-65	1	O-Ring
35:2	237-80	1	O-Ring
36	3290-378	1	Tie-Cable

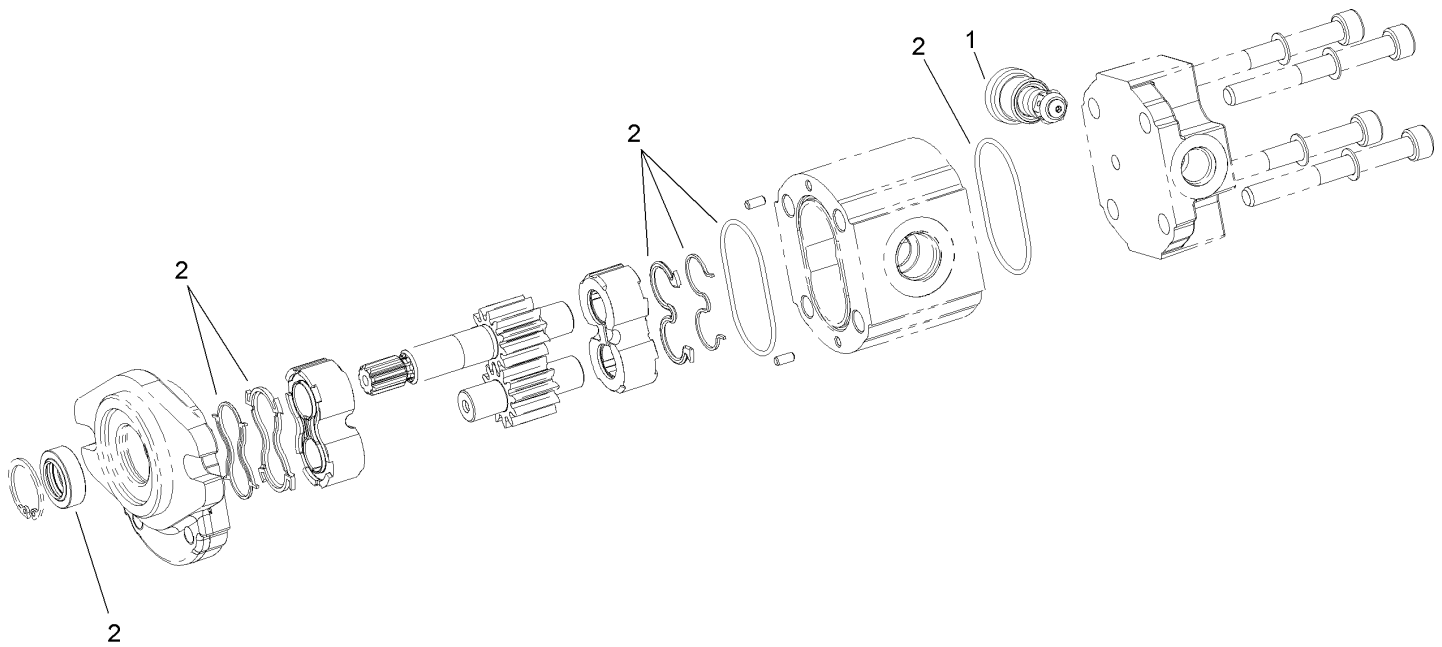

Gear Pump Assembly No. 112-9542


Ref	Part No.	Qty.	Description
1	112-0198	1	Valve
2	112-0199	1	Seal Kit

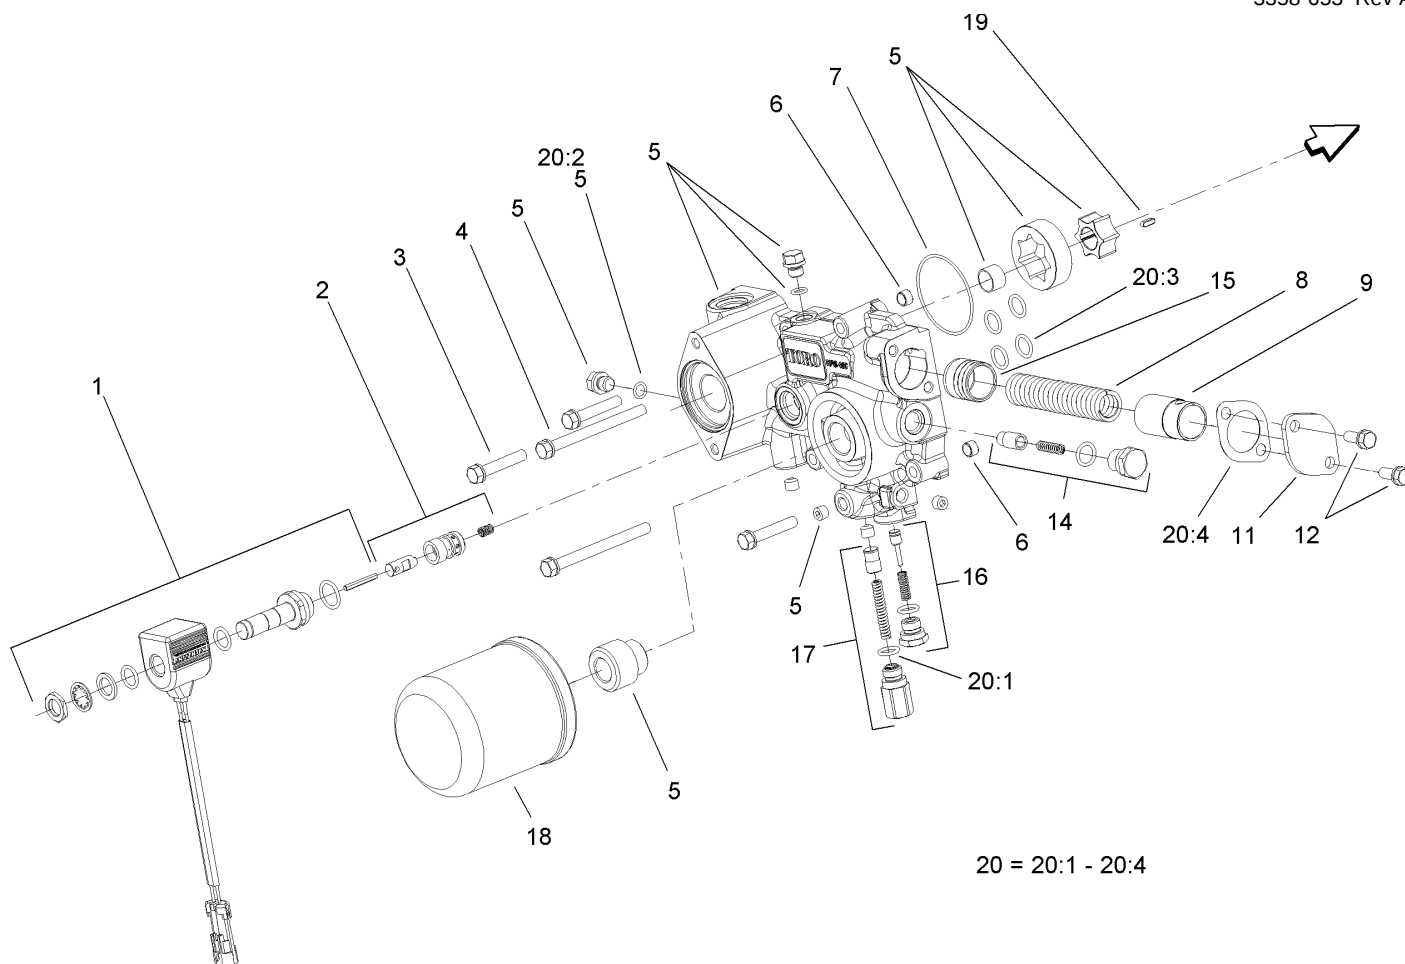

Charge Pump Housing Assembly

Transmission Assembly No. 107-0801


Ref	Part No.	Qty.	Description
1	107-0851	1	Solenoid ASM
2	107-0850	1	Solenoid Valve ASM
3	107-0863	3	Bolt
4	107-0864	2	Bolt
5	107-0840	1	Pump Body ASM
6	107-0848	2	Pin
7	107-0856	1	O-Ring
8	107-0845	1	Spring
9	107-0844	1	Collar
11	107-0846	1	Cover
12	93-0457	2	Bolt And Washer ASM
14	107-0843	1	Filter Bypass Valve ASM
15	107-0818	1	Piston
16	107-0842	1	Charge Relief Valve ASM
17	107-0841	1	Pressure Valve ASM
18	108-5194	1	Filter-Oil
19	107-0865	1	Key
20	107-0855	1	Charge Pump Seal Kit
20:1	93-0418	2	O-Ring
20:2	107-0817	2	O Ring-Plug
20:3	104-3298	6	Packing
20:4	107-0847	1	Gasket

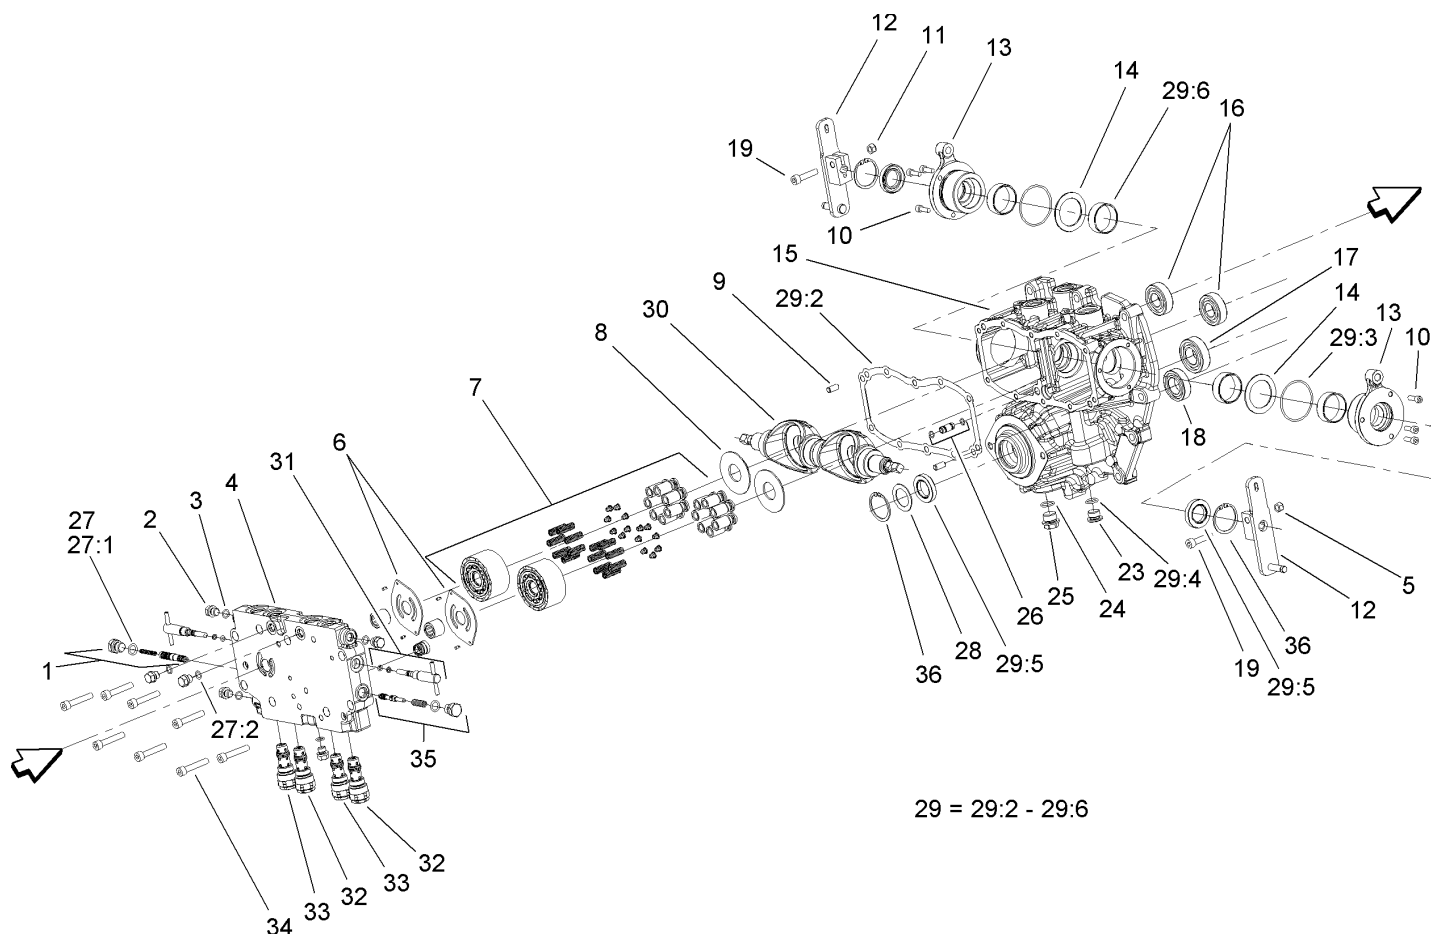

Center Section Assembly Transmission Assembly No. 107-0801

Ref	Part No.	Qty.	Description
1	107-0807	1	Valve-Flushing, RH
2	107-0857	6	Plug
3	107-0817	6	O Ring-Plug
4	107-0802	1	Case-Center
5	107-0858	1	U-Nut
6	107-0805	2	Plate-Valve
7	107-0824	2	Cylinder Block ASM
8	107-0830	2	Plate-Thrust
9	92-0765	4	Pin-Parallel
10	107-0859	6	Bolt
11	107-0858	2	U-Nut
12	107-0831	2	Arm-Control
13	107-0832	2	Side Cover ASM
14	107-0829	2	Washer
15	107-0809	1	Housing-Pump
16	107-0826	2	Bearing
17	107-0821	1	Bearing
18	107-0838	1	Bearing
19	107-0860	2	Bolt
23	107-0861	1	Plug-NPTF
24	107-0862	1	O-Ring
25	107-0867	1	Plug
26	107-0812	1	Pipe
27	107-0852	1	Center Case Seal Kit


Ref	Part No.	Qty.	Description
27:1	93-0418	2	O-Ring
27:2	107-0817	6	O Ring-Plug
28	107-0813	1	Spacer
29	107-0853	1	Pump Housing Seal Kit
29:2	107-0810	1	Gasket-Case, Center
29:3	107-0817	2	O Ring-Plug
29:4	104-3298	1	Packing
29:5	107-0814	3	Seal
29:6	107-0825	4	Ring-Seal
30	107-0828	2	Plate-Swash
31	107-0808	2	Valve-Bypass
32	107-0804	2	Valve-Rear
33	107-0803	2	Valve-Front
34	107-0863	8	Bolt
35	107-0806	1	Valve-Flushing, LH
36	92-0757	2	Ring-Snap

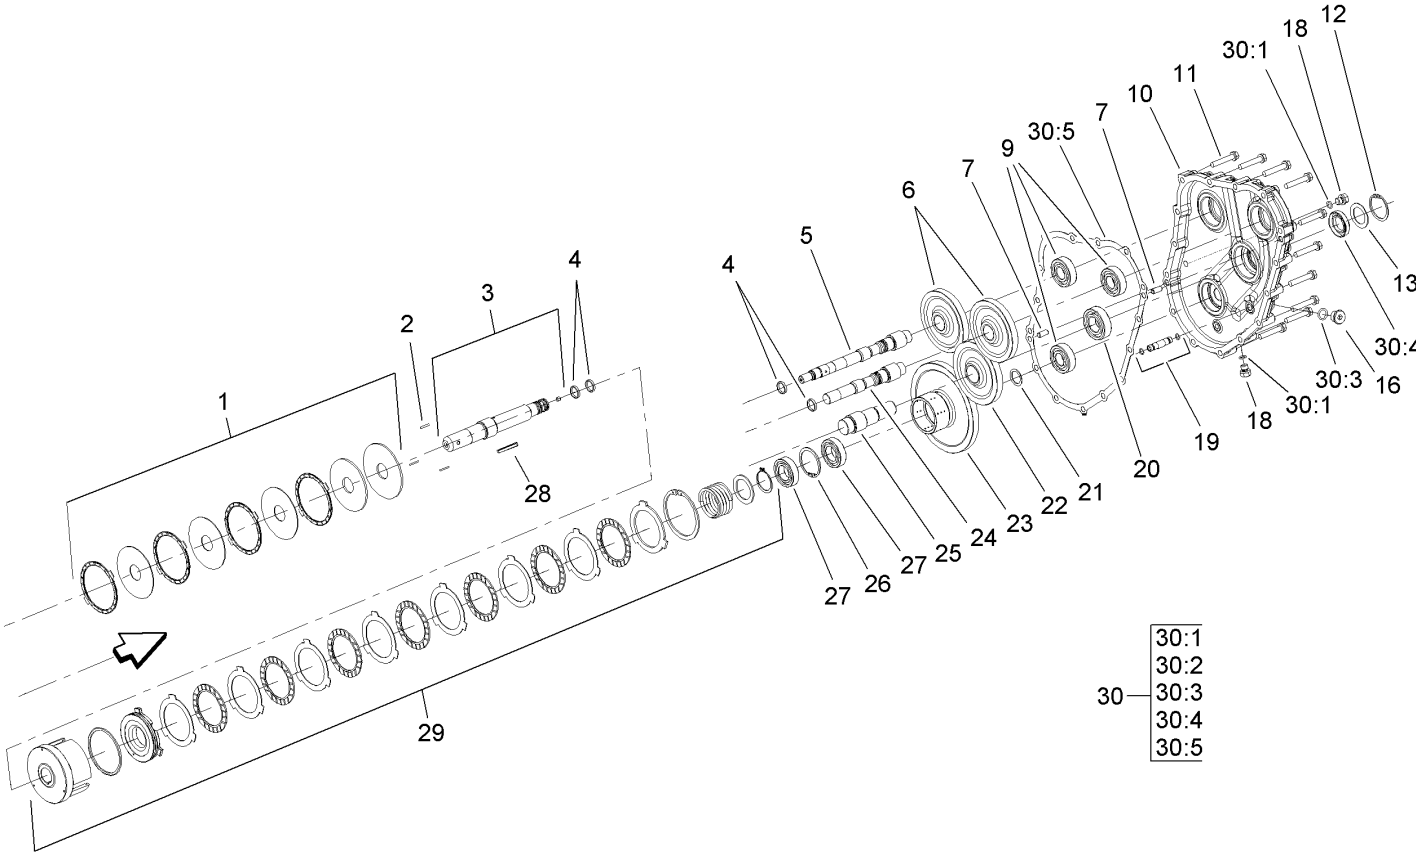

Gear Case and Clutch Assembly
Transmission Assembly No. 107-0801


Ref	Part No.	Qty.	Description
1	107-0839	1	PTO Brake ASM
2	107-0837	3	Rod-Push
3	107-0833	1	PTO Shaft ASM
4	107-0825	2	Ring-Seal
5	107-0827	1	Shaft-Pump
6	107-0823	2	Gear-Pump
7	92-0765	4	Pin-Parallel
9	107-0826	4	Bearing
10	107-0815	1	Housing-Gear Case
11	107-0863	13	Bolt
12	92-0757	1	Ring-Snap
13	107-0813	1	Spacer
16	107-0861	1	Plug-NPTF
18	107-0857	6	Plug
19	107-0811	1	Pipe
20	107-0821	2	Bearing
21	107-0836	1	Spacer
22	107-0820	1	Gear-Input
23	107-0834	1	Gear-PTO
24	107-0822	1	Shaft-Pump
25	107-0819	1	Shaft-Input
26	92-0758	1	Ring-Snap
27	107-0838	3	Bearing
28	107-0866	1	Key

Ref	Part No.	Qty.	Description
29	107-0835	1	Clutch Cylinder ASM
30	107-0854	1	Gear Housing Seal Kit
30:1	107-0817	2	O Ring-Plug
30:2		2	O-Ring
30:3	104-3298	1	Packing
30:4	107-0814	1	Seal
30:5	107-0816	1	Gasket-Housing, Gear

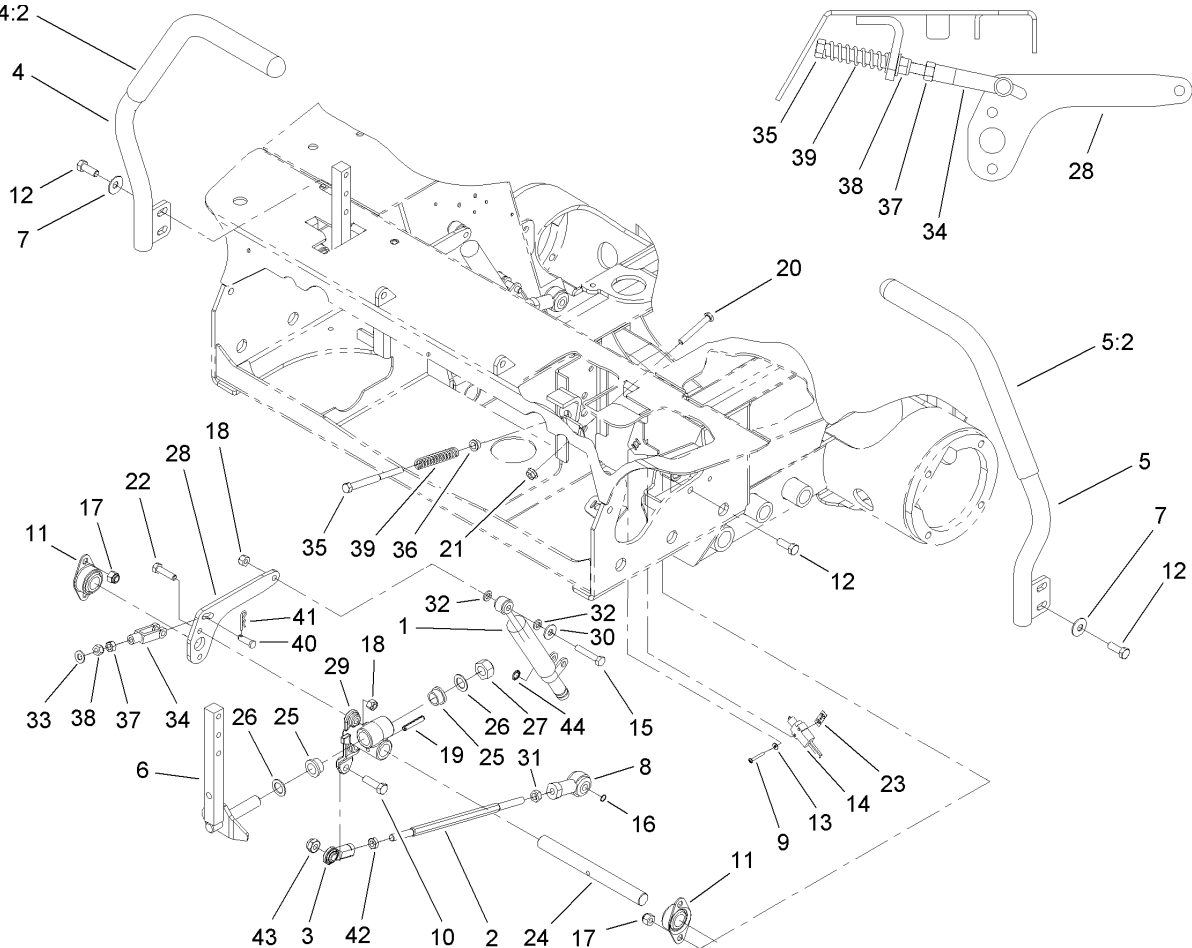

Traction Control Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	105-7280	2	Damper	23	108-9824	2	Nut-Switch
2	105-7239	2	Rod-Threaded	24	108-9830	2	Shaft-Pivot
3	103-1167	2	Joint-Ball End, LH	25	105-3455	4	Bushing
4	108-5208	1	RH Lever And Grip ASM	26	105-3481	4	Washer-Thrust
4:2	108-5213	1	Grip-Foam	27	32152-6	2	Nut-Lock, Cone
5	108-5209	1	LH Lever And Grip ASM	28	108-9829-03	2	Lever-Damper
5:2	108-5213	1	Grip-Foam	29	108-9831	2	Hub-Control
6	108-9833-03	2	Lever ASM	30	3256-3	2	Washer-Flat
7	3290-461	4	Washer-Spring	31	3219-3	2	Nut-Hex
8	105-7199	2	Rod End-Isolated	32	3253-4	4	Washer-Lock
9	3250-35	4	Screw-PPH	33	3256-23	2	Washer-Flat
10	323-7	2	Screw-HH	34	1-303105	2	Yoke-Adjustable
11	1-633102	4	Bearing-Flange, Side	35	1-603737	2	Bolt-Return, Neutral
12	323-6	12	Screw-HH	36	1-603735	2	Bushing-Flanged
13	3256-53	4	Washer-Flat	37	3219-2	2	Nut-Hex
14	99-3410	2	Switch	38	3296-4	2	Nut-Lock
15	322-9	2	Screw-HH	39	1-603807	2	Spring-Return, Neutral
16	32120-46	2	Ring-Retaining	40	283-1	2	Pin-Clevis
17	3296-39	8	Nut-Lock, NI	41	3290-307	2	Pin-Hair
18	3296-29	6	Nut-Lock, NI	42	3220-16	2	Nut-Jam, LH
19	32121-15	2	Pin-Roll	43	3296-44	2	Nut-Lock, NI
20	9114524	2	Bolt-TAP, HH	44	32151-72	2	Ring-Retaining
21	32128-26	2	Nut-Flange				
22	322-6	4	Screw-HH				

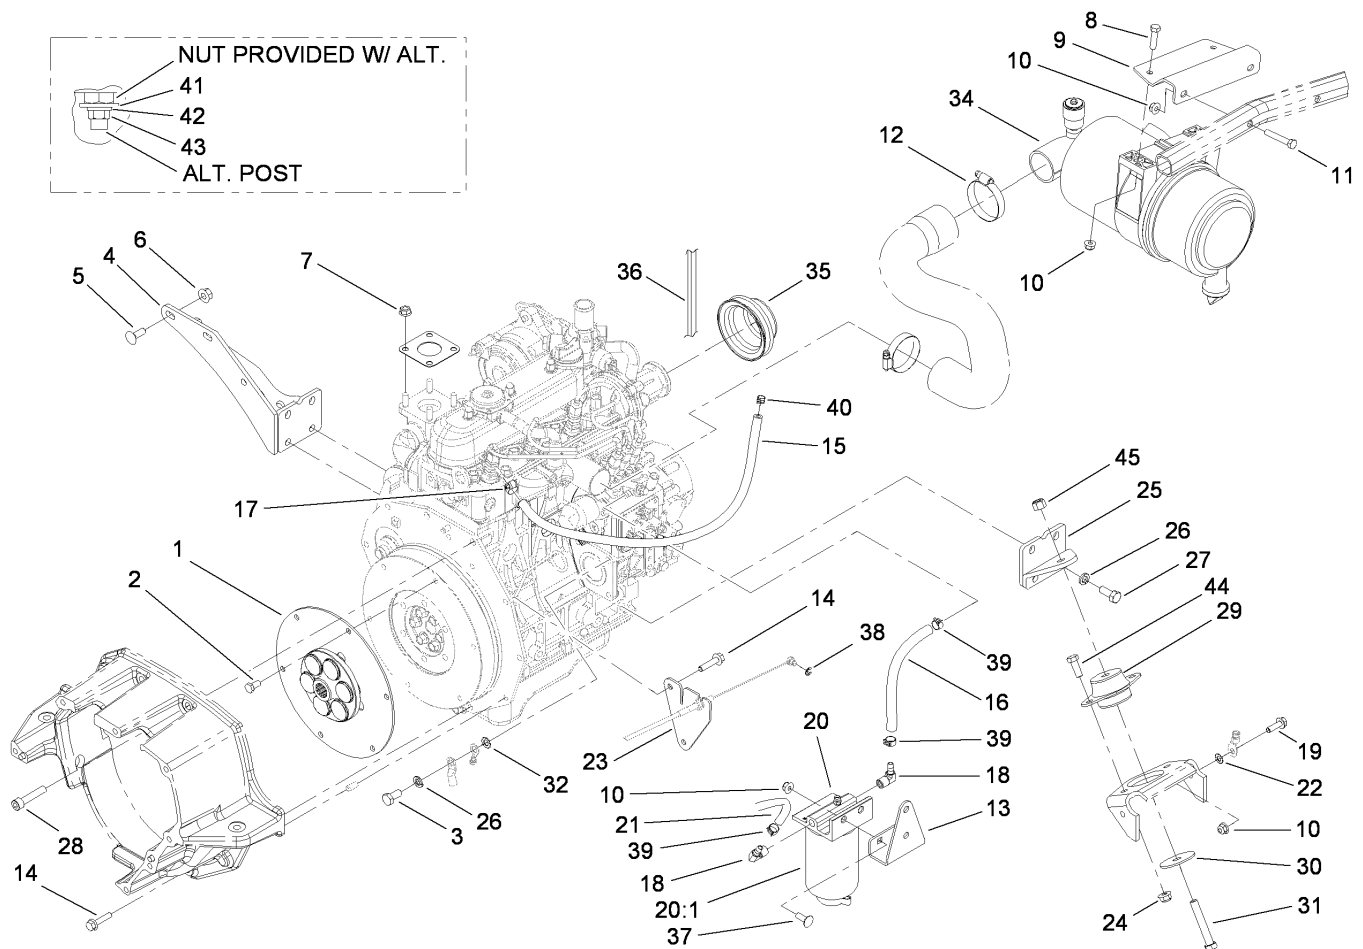

Engine Component Assembly


Ref	Part No.	Qty.	Description
1	110-9729	1	Flywheel Coupling ASM
2	33114-016	6	Screw-HH
3	63-7790	1	Screw-Cap
4	108-9926-03	1	Muffler Bracket ASM
5	3231-22	2	Screw-CARR
6	32128-29	2	Locknut-Flange
7	33004-00	4	Nut-HF
8	322-6	2	Screw-HH
9	108-9843-03	1	Support-Cleaner, Air
10	104-8300	7	Nut-Flange, NI
11	322-10	2	Screw-HH
12	2412-130	1	Clamp-Hose
13	114-4058-03	1	Mount-Separator
14	33104-035	8	Screw-HHF
15	110-8255	1	Hose-Fuel
16	110-4104	1	Hose-Fuel
17	2412-108	1	Clamp-Worm
18	353-781	2	Fitting-Elbow
19	3234-17	1	Screw-HHF
20	110-9044	1	Filter-Separator
20:1	110-9049	1	Filter-Spin On
21	114-4028	1	Hose-Fuel
22	3255-8	1	Washer-Lock
23	114-4060	1	Bracket-Throttle

Ref	Part No.	Qty.	Description
24	104-8301	4	Nut-Flange, NI
25	105-7235-03	1	LH Rear Mount ASM
26	48-9590	9	Washer-Lock
27	43-0090	8	Screw-HH
28	3274-106	2	Screw-HSH
29	53-9681	2	Mount-Engine
30	87-5100	2	Washer-Snubbing
31	324-11	2	Screw-HH
32	3255-9	1	Washer-Lock
34	104-3428	1	Air Cleaner ASM
35	98-9584	1	Pulley-Fan
36	98-9676	1	V-Belt
37	3230-10	2	Screw-CARR
38	701197	1	E-Ring
39	92-2379	3	Clamp-Hose
40	2412-80	1	Clamp-Line, Fuel
41	3256-2	1	Washer-Flat
42	43-5930	1	Washer-Spring
43	33013-00	1	Nut-Hex
44	323-6	4	Screw-HH
45	3296-48	2	Nut-Lock, NI

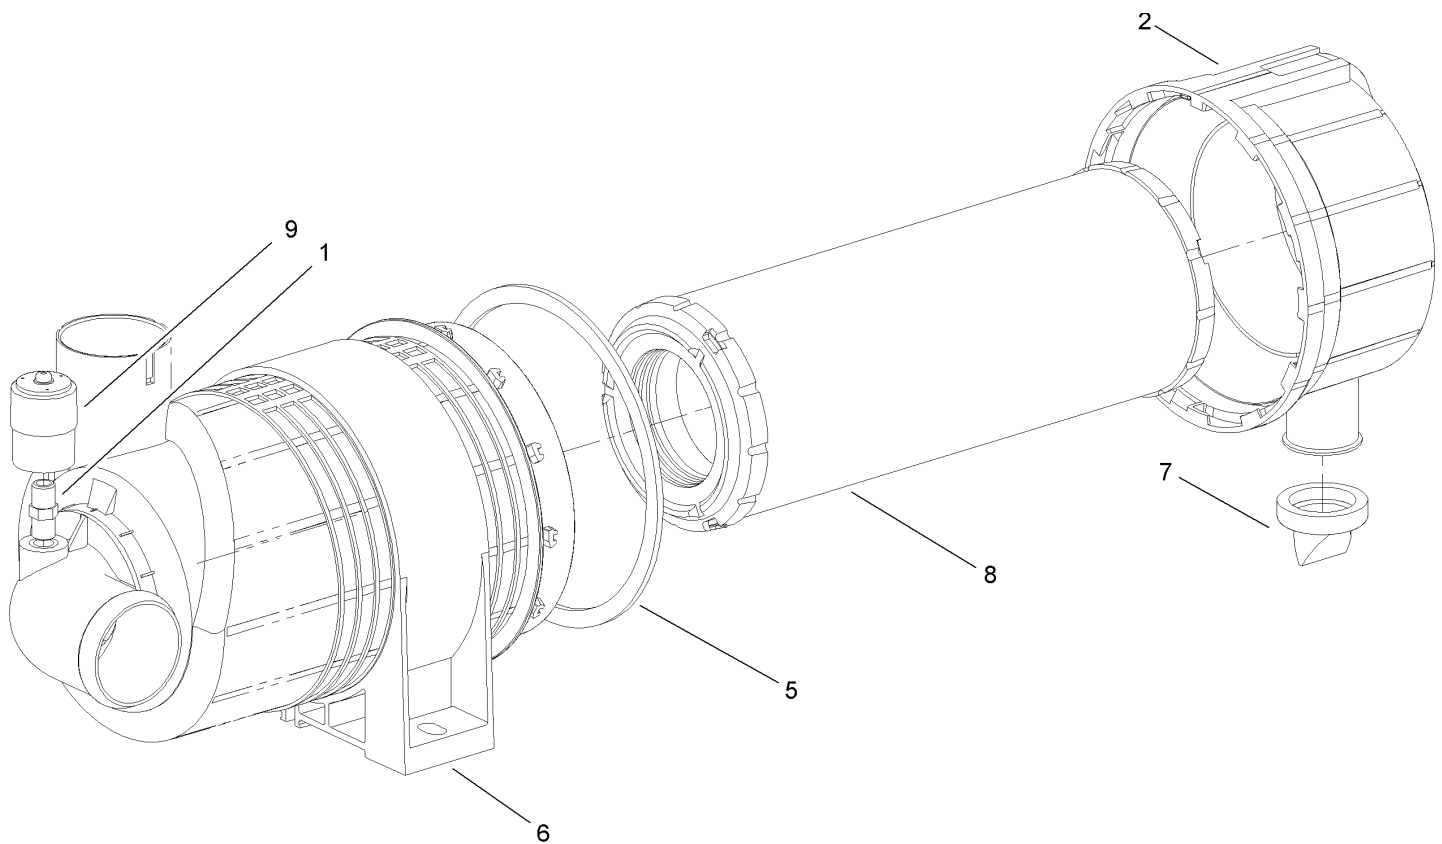

Air Cleaner Assembly No. 104-3428


Ref	Part No.	Qty.	Description				
1	105-4292	1	Nipple-Pipe				
2	104-0497	1	Cover ASM				
5	104-4897	1	Gasket				
6	98-4525	1	Bracket-Cleaner, Air				
7	104-0498	1	Valve-Vacuator				
8	108-3810	1	Filter-Air				
9	93-9164	1	Indicator-Mini				

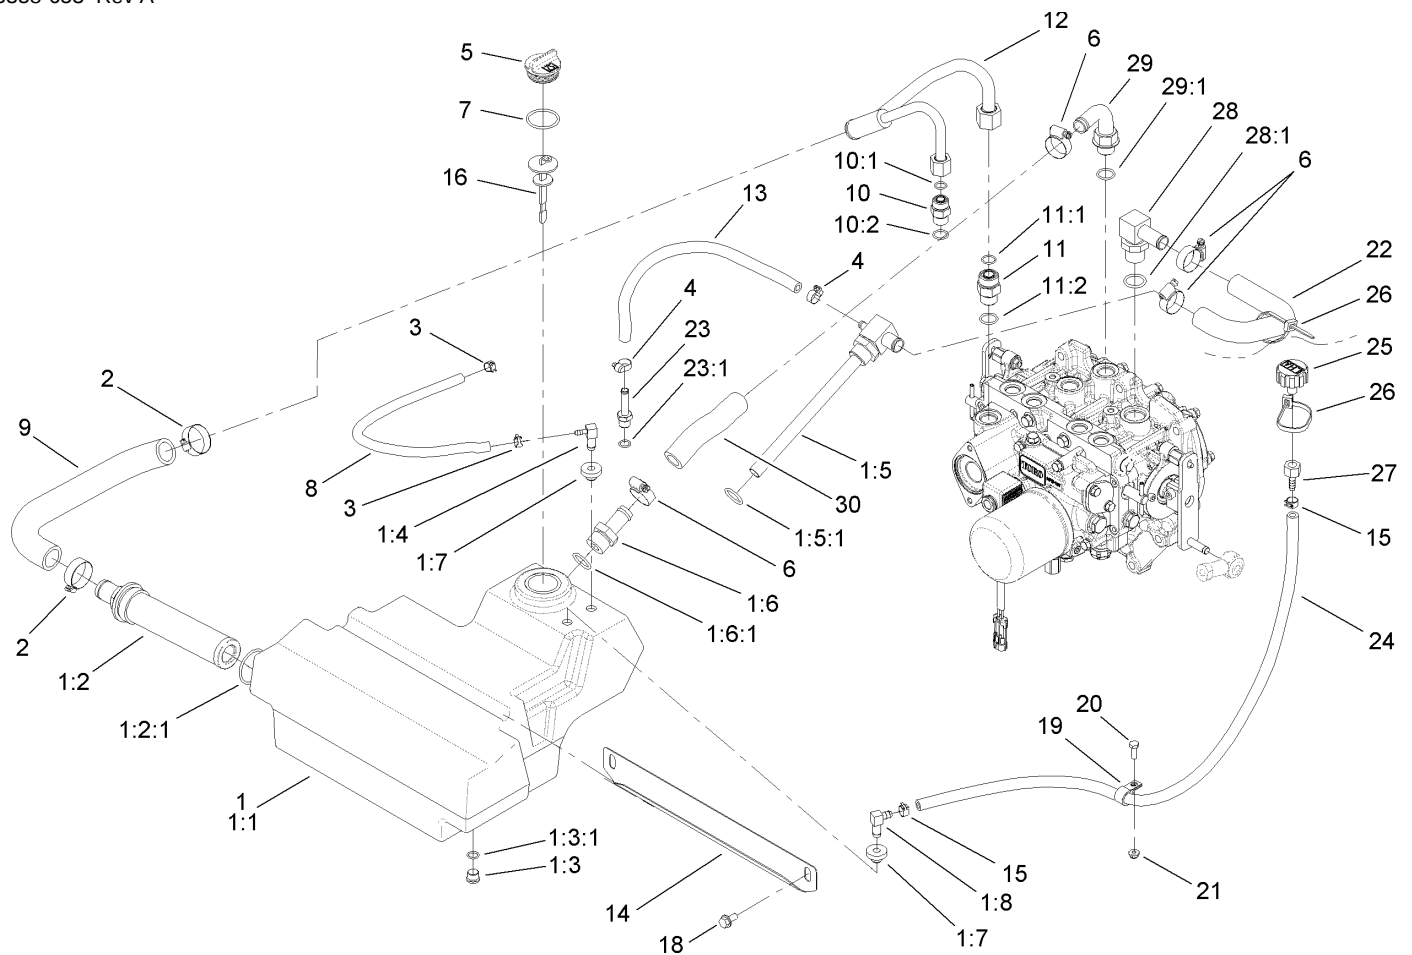

Hydraulic Assembly


Ref	Part No.	Qty.	Description
1	110-8237	1	Hydraulic Reservoir ASM
1:1	108-5200	1	Reservoir-Hydraulic
1:2	104-7546	1	Strainer-Tank
1:2:1	340-136	1	O-Ring
1:3	353-989	1	Plug-Hex, Hollow
1:3:1	237-42	1	O-Ring
1:4	104-5228	1	Fitting-Elbow
1:5	108-9894	1	Fitting-Elbow, Special
1:5:1	237-81	1	O-Ring
1:6	354-73	1	Fitting-Straight
1:6:1	237-81	1	O-Ring
1:7	46-6560	2	Bushing
1:8	46-6550	1	Fitting-Elbow, 90 DEG
2	2412-34	2	Clamp-Hose
3	2412-98	2	Clamp
4	2412-108	2	Clamp-Worm
5	93-7498	1	Plug-Plastic
6	2412-129	4	Clamp-Hose
7	94-8166	1	O-Ring
8	109-0299	1	Hose-Fuel
9	110-5526	1	Hose-Suction
10	340-4	1	Fitting-HYD, Straight
10:1	237-30	1	O-Ring
10:2	237-79	1	O-Ring

Ref	Part No.	Qty.	Description
11	340-7	1	Adapter
11:1	237-65	1	O-Ring
11:2	237-80	1	O-Ring
12	110-5532	1	Tube ASM
13	94-5625	1	Hose-Overflow, Radiator
14	110-5529-03	1	Support-Reservoir
15	92-2379	2	Clamp-Hose
16	112-6365	1	Dipstick ASM
18	32144-14	2	Screw-HWHTF
19	2412-87	1	Clamp-Cable
20	321-4	1	Screw-HH
21	104-7201	1	Nut-HF
22	110-5524	1	Hose-Return
23	353-979	1	Fitting-Straight
23:1	237-42	1	O-Ring
24	110-9662	1	Hose-Fuel
25	68-6150	1	Breather
26	3290-379	2	Tie-Cable
27	354-95	1	Fitting-Straight
28	353-987	1	Fitting-HYD, 90
28:1	237-81	1	O-Ring
29	110-5522	1	Fitting-Elbow, 90
29:1	237-80	1	O-Ring
30	112-1680	1	Hose-HYD

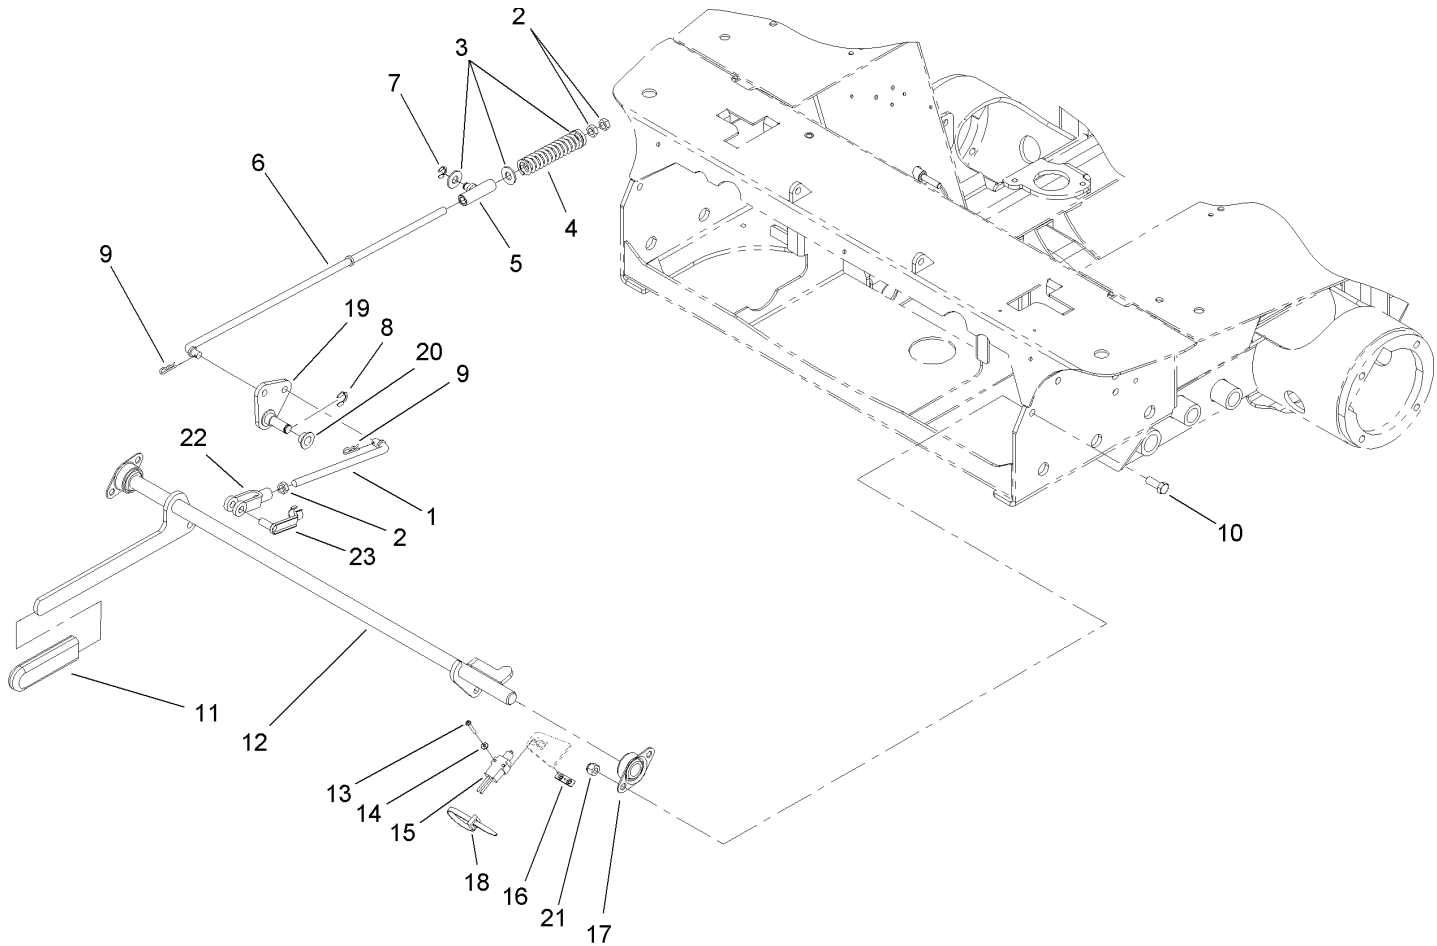


Parking Brake Assembly

Ref	Part No.	Qty.	Description				
1	110-5498	2	Rod-Brake, Front				
2	3219-3	6	Nut-Hex				
3	3256-4	6	Washer-Flat				
4	109-2230	2	Spring-Compression				
5	112-1676	2	Swivel ASM				
6	110-5494	2	Rod-Brake, Rear				
7	32151-47	2	Ring-Retaining				
8	32151-68	2	Ring-Retaining				
9	3290-307	4	Pin-Hair				
10	323-6	4	Screw-HH				
11	1-633268	1	Grip-Lever, Brake				
12	108-5214-03	1	Brake Handle ASM				
13	3250-35	2	Screw-PPH				
14	3256-53	2	Washer-Flat				
15	95-8900	1	Switch				
16	108-9824	1	Nut-Switch				
17	1-633102	2	Bearing-Flange, Side				
18	3290-378	1	Tie-Cable				
19	110-9754	2	Brake Pivot ASM				
20	1-513140	4	Bearing-Control				
21	3296-39	4	Nut-Lock, NI				
22	1-633131	2	Yoke-Linkage, Brake				
23	103-2399	2	Pin-Spring, Clevis				

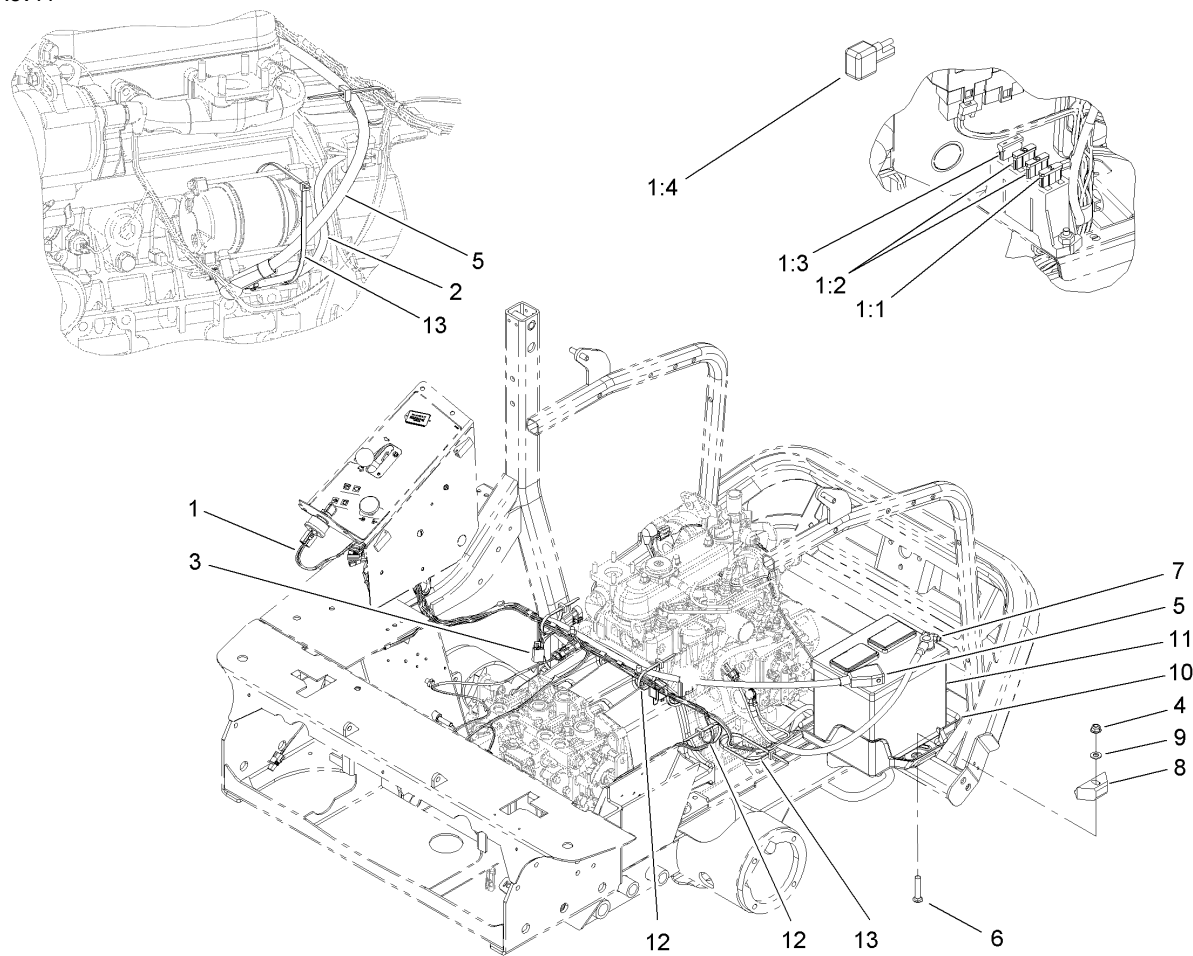


Electrical Assembly

Ref	Part No.	Qty.	Description				
1	114-3382	1	Harness-Wire, Main				
1:1	94-6710	1	Fuse-Blade, 2 Amp				
1:2	218-578	2	Fuse-10 Amp				
1:3	109355	1	Fuse-15 Amp				
1:4	100-4918	1	Diode				
2	99-3441	1	Harness-Wire, Fusible Link				
3	108-8657	1	Harness-Wire, Seat				
4	104-8301	1	Nut-Flange, NI				
5	104-0086	1	Cable-Battery, Positive				
6	3231-6	1	Screw-CARR				
7	105-0040	1	Cable-Battery, Negative				
8	66-2490	1	Retainer-Battery				
9	3256-24	1	Washer-Flat				
10	108-9928	1	Tray-Battery				
11	106-5187	1	Battery				
12	3290-378	3	Tie-Cable				
13	3290-379	2	Tie-Cable				

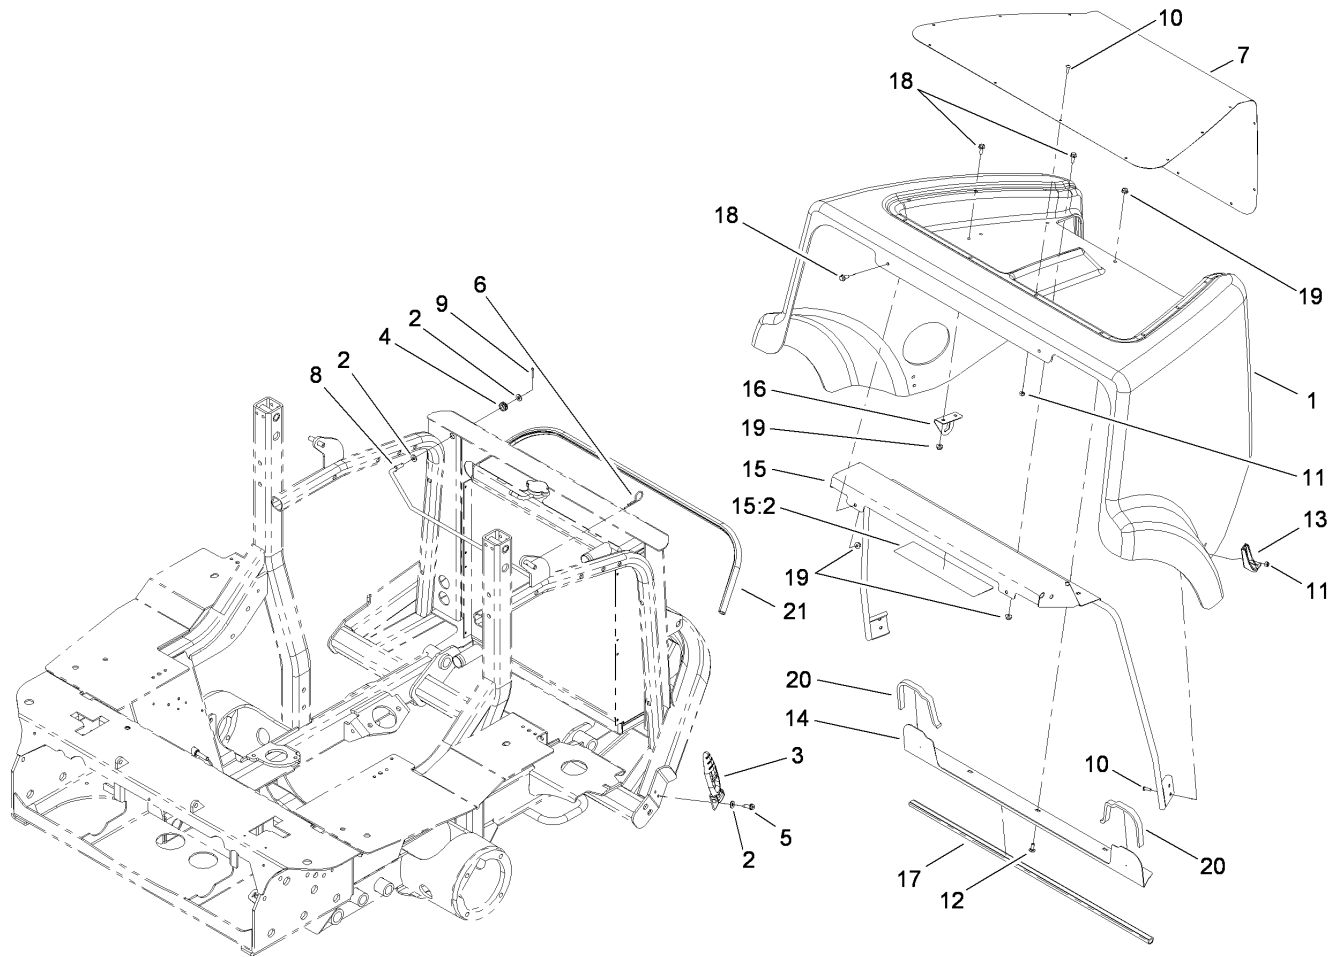

Hood Assembly


Ref	Part No.	Qty.	Description				
1	112-6311	1	Hood ASM				
2	3256-2	4	Washer-Flat				
3	103-2898	2	Latch-Rubber				
4	237-136	1	Grommet				
5	32104-95	2	Screw-HWH				
6	3290-255	1	Pin-Cotter, Hair				
7	108-9943-03	1	Screen-Intake				
8	110-8291	1	Rod-Prop, Hood				
9	3272-6	1	Pin-Cotter				
10	3274-39	21	Screw-HSBH				
11	3296-2	21	Nut-Lock				
12	3229-11	3	Screw-CARR				
13	103-2897	2	Latch-Catch				
14	110-8285-03	1	Angle-Seal				
15	110-9795	1	Support-Hood				
15:2	110-9781	1	Decal-Danger				
16	108-9811	1	Support-Rod, Prop				
17	110-8287	1	Bulb-Seal				
18	3234-33	8	Screw-HHF				
19	104-7201	11	Nut-HF				
20	110-8288	2	Seal-Foam				
21	112-1694	1	Seal-Bulb				

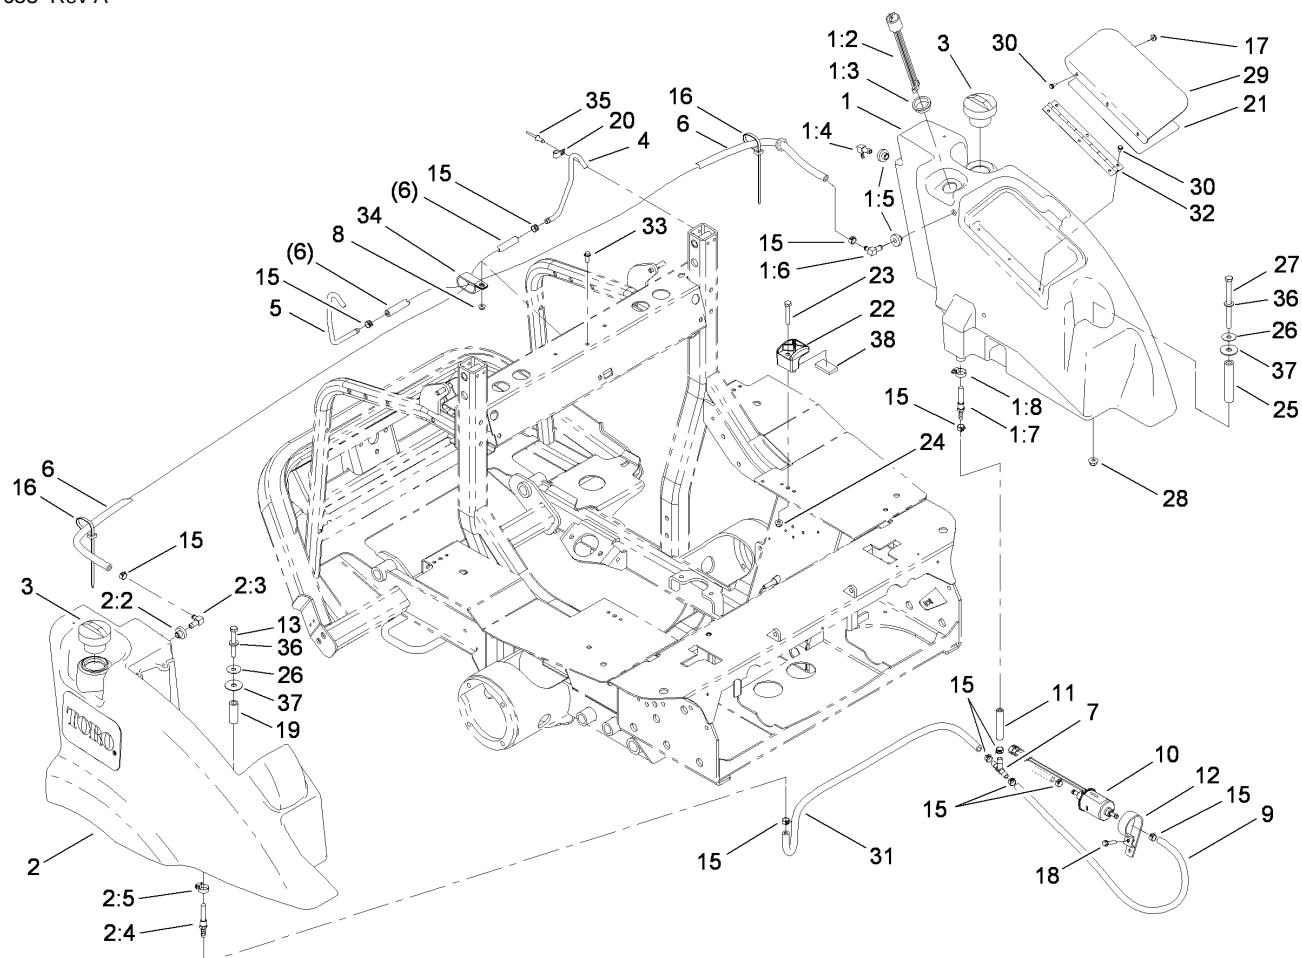

Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	110-8230	1	LH Fuel Tank ASM
1:2	110-8262	1	Gauge-Fuel
1:3	95-8972	1	Grommet
1:4	104-5228	1	Fitting-Elbow
1:5	46-6560	2	Bushing
1:6	1-643259	1	Fitting-Elbow
1:7	112-6374	1	Fitting-Strainer
1:8	2412-36	1	Clamp-Hose
2	110-8236	1	RH Fuel Tank ASM
2:2	46-6560	1	Bushing
2:3	1-643259	1	Fitting-Elbow
2:4	112-6374	1	Fitting-Strainer
2:5	2412-36	1	Clamp-Hose
3	115-3002	2	Cap-Biodiesel
4	110-8261	1	Tube-Vent, LH
5	110-8260	1	Tube-Vent, RH
6	110-6186	2	Hose-Fuel
7	354-107	1	Fitting-HYD, Tee
8	104-7201	1	Nut-HF
9	110-4112	1	Hose-Fuel
10	110-8806	1	Pump-Fuel
11	112-6388	1	Hose-Fuel
12	110-8817	1	Bracket-Pump, Fuel
13	323-13	1	Screw-HH


Ref	Part No.	Qty.	Description
15	92-2379	11	Clamp-Hose
16	3290-378	2	Tie-Cable
17	32149-8	3	Nut-Keps
18	32144-110	1	Screw-HWH
19	92-1239	1	Spacer-Support
20	2412-89	2	Clamp
21	110-8252	1	Decal-Instructions, Service
22	107-4543	4	Clamp
23	322-10	4	Screw-HH
24	104-8300	4	Nut-Flange, NI
25	110-5539	1	Spacer
26	105-6814	2	Washer-Plain
27	323-39	1	Screw-HH
28	104-8301	2	Nut-Flange, NI
29	110-5540-03	1	Cover-Toolbox
30	112-6349	6	Screw-HWH
31	110-9662	1	Hose-Fuel
32	108-2024	1	Hinge
33	3234-4	1	Screw-HHF
34	2412-137	1	Clamp-R, Double
35	3290-412	2	Rivet
36	3256-24	2	Washer-Flat
37	95-1905	2	Washer-Rubber
38	112-9561	4	Pad-Foam

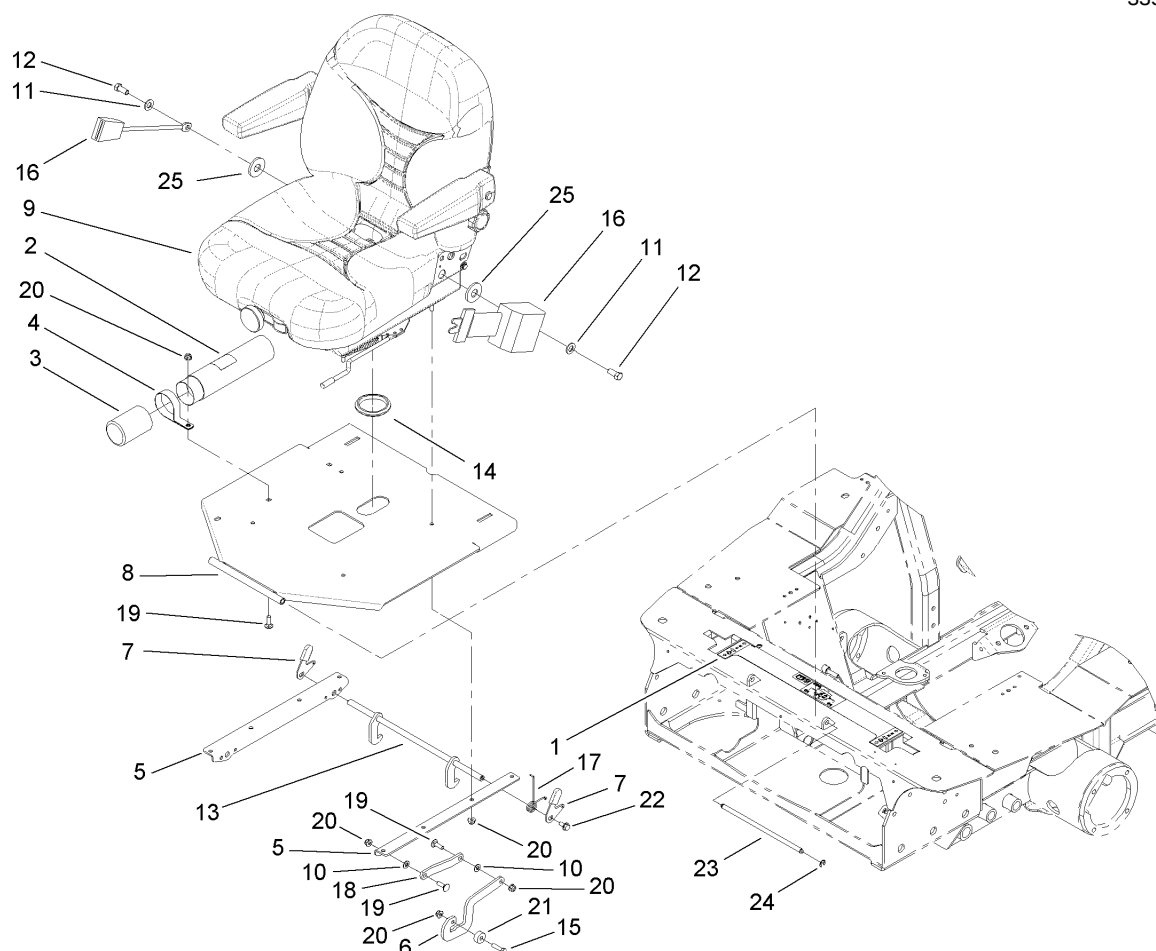

Seat Assembly


Ref	Part No.	Qty.	Description
1	110-9774	1	Decal-Safety
2	104-7050	1	Housing-Manual
3	104-7048	1	Cap-Housing
4	2412-133	2	R-Clamp
5	108-5238-03	2	Angle-Latch
6	110-5512	1	Lever-Stop, Seat
7	108-5243	2	Lever-Latch
8	107-2272-03	1	Plate-Seat
9	107-2286	1	Seat ASM
10	3256-23	2	Washer-Flat
11	3256-25	2	Washer-Flat
12	3212-4	2	Screw-HH
13	108-5240	1	Latch ASM
14	237-164	1	Grommet
15	322-6	1	Screw-HH
16	100-4928	1	Belt-Seat
17	106-4048	1	Spring-Torsion
18	110-5513	1	Link-Seat
19	3230-2	4	Bolt-CARR
20	104-8300	9	Nut-Flange, NI
21	104-1429	1	Spacer-Plain
22	32144-14	2	Screw-HWHTF
23	112-1686	1	Pin-Clevis
24	105-7004	2	E-Ring

Ref	Part No.	Qty.	Description
25	99-7667	2	Washer-Flat

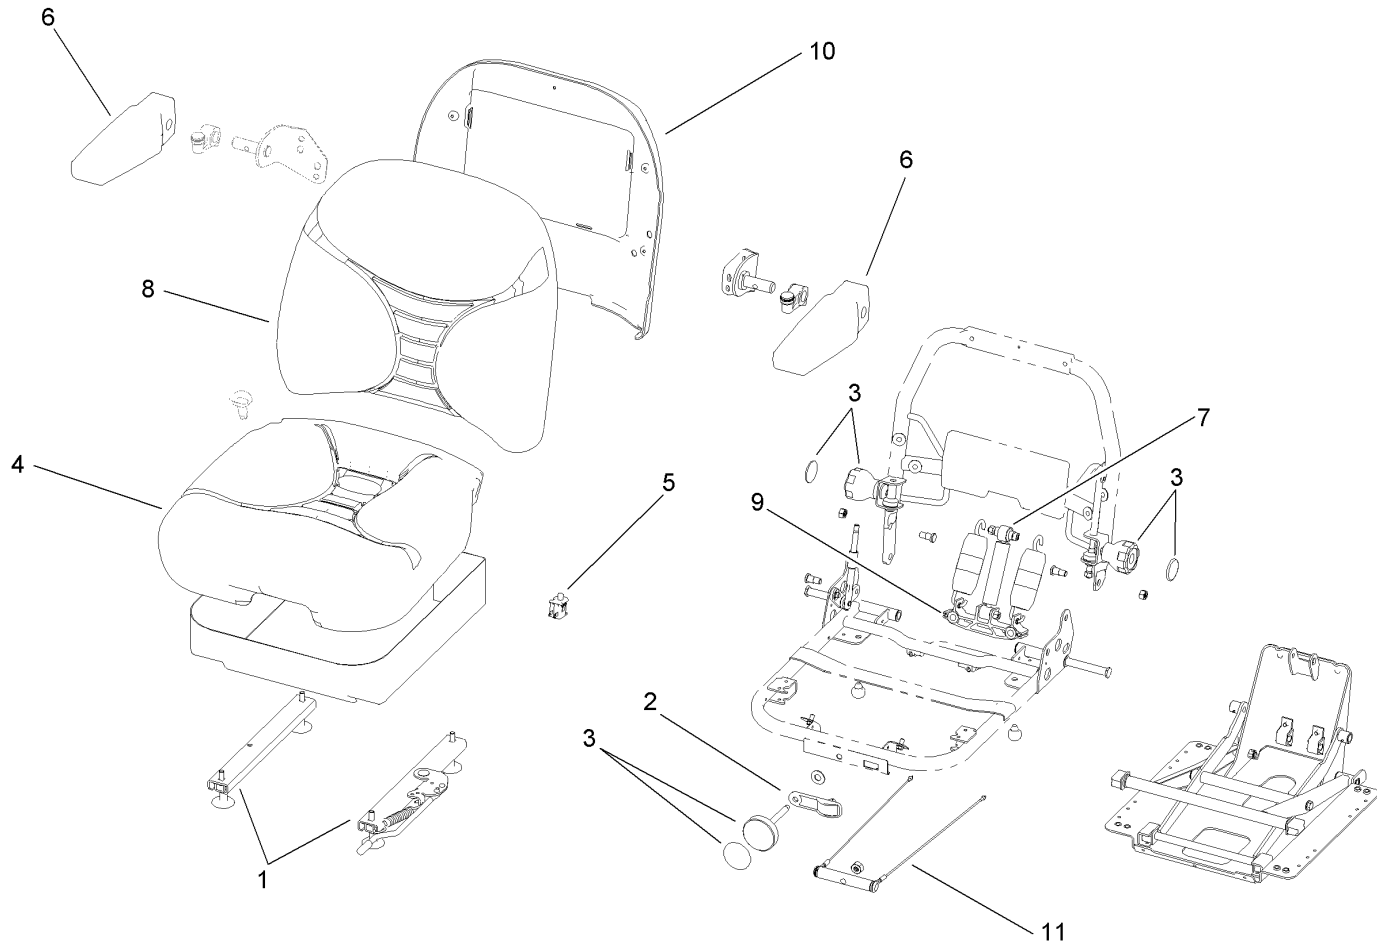


Seat Assembly No. 107-2286

Ref	Part No.	Qty.	Description
1	107-1880	1	Seat Track Kit
2	107-1885	1	Weight Indicator Kit
3	107-1881	1	Knob Kit
4	107-1883	1	Bottom Cushion Kit
5	82-2190	1	Switch-Bail
6	107-1887	1	Armrest Kit
7	107-1884	1	Shock Absorber Kit
8	107-1882	1	Back Cushion Kit
9	109-3343	1	Spring And Saddle Kit
10	109-3344	1	Back Panel Kit
11	109-3345	1	Weight Adjust Kit

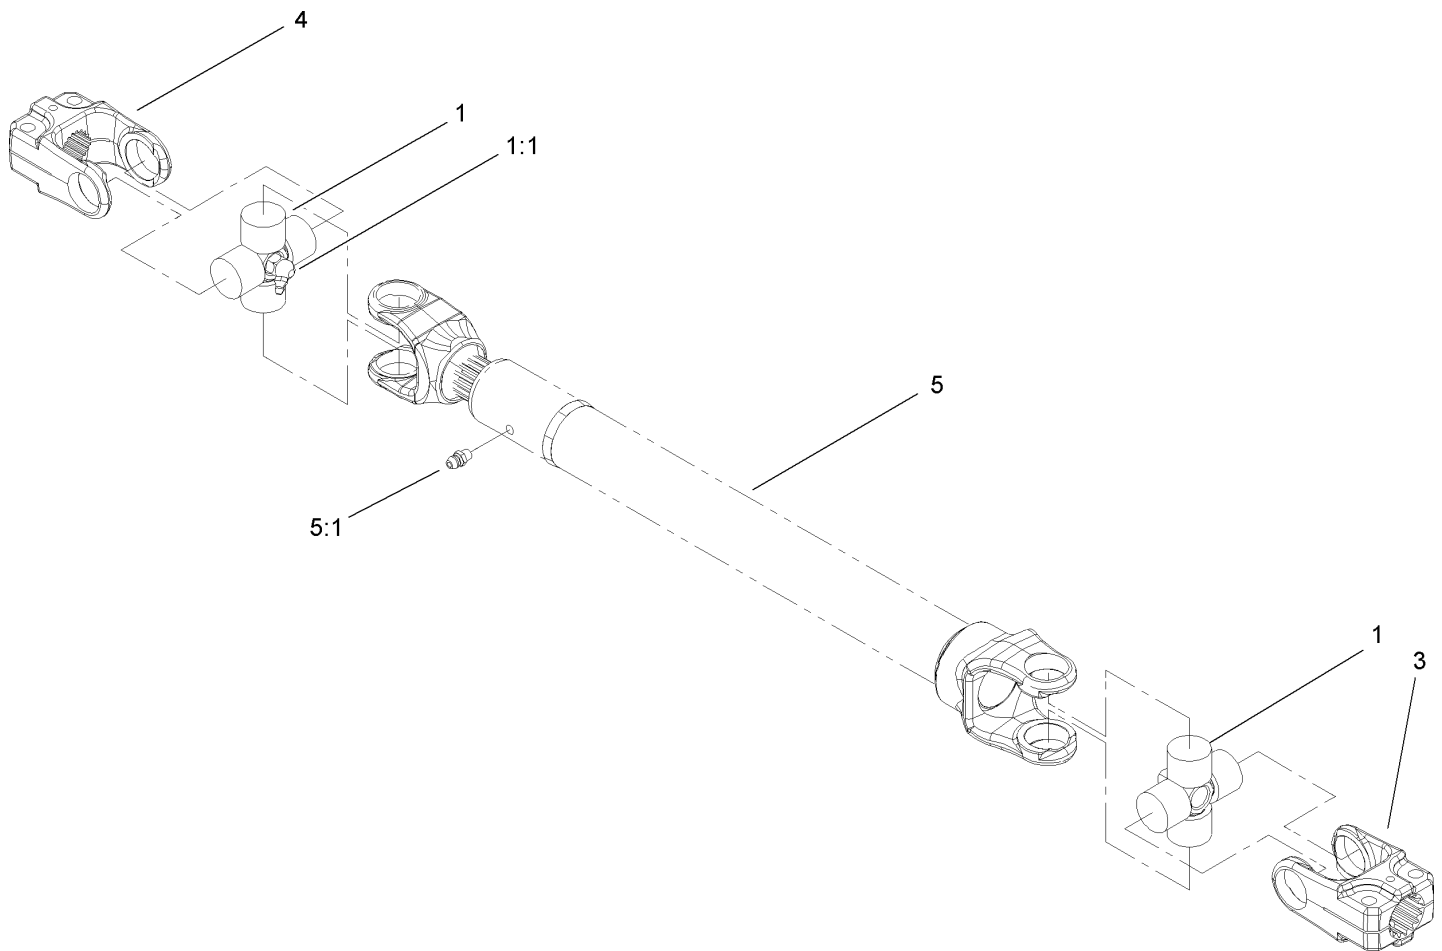


Driveshaft Assembly No. 110-3575

Ref	Part No.	Qty.	Description				
1	112-1687	2	Cross And Bearing Kit				
1:1	62-3820	1	Fitting-Grease				
3	54-9040	1	Yoke-End				
4	54-9090	1	Yoke-End				
①5		1	Tube-Yoke, Slip				
5:1	302-22	1	Fitting-Grease				

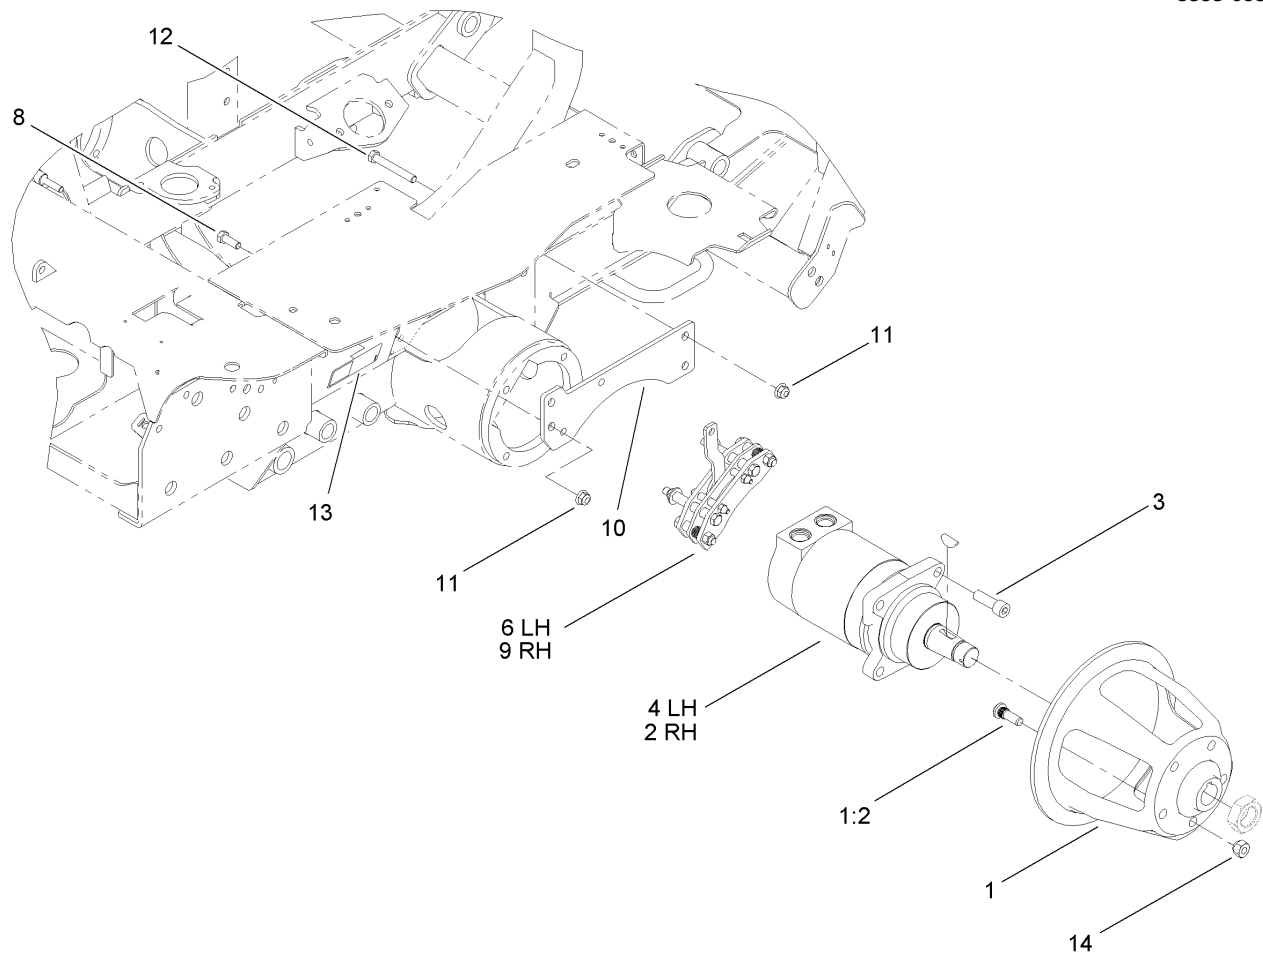


Rear Drive Assembly

Ref	Part No.	Qty.	Description				
1	110-5535	2	Wheel Hub ASM				
1:2	87-8730	5	Stud				
2	108-5230	1	RH HYD Motor ASM				
3	100-6116	8	Screw-HHF				
4	108-5155	1	LH HYD Motor ASM				
6	108-5151	1	Caliper-Brake, LH				
8	323-6	4	Screw-HH				
9	108-5150	1	Caliper-Brake, RH				
10	112-9550-03	2	Bracket-Brake				
11	104-8301	8	Nut-Flange, NI				
12	323-14	4	Screw-HH				
13	106-9206	2	Decal-Torque, Wheel				
14	23-7270	10	Nut-Wheel				

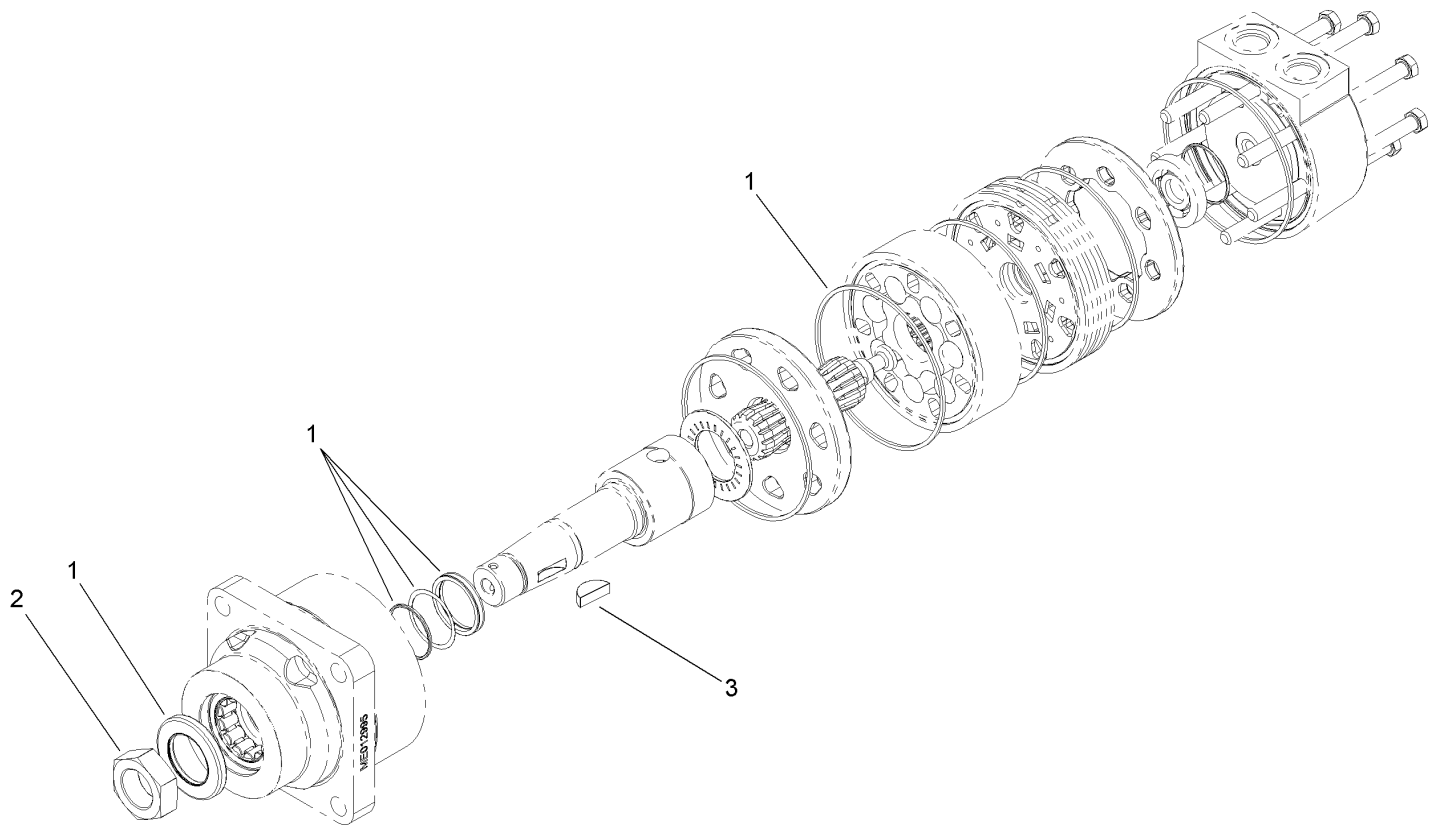


Hydraulic Motor Assembly No. 108-5230

Ref	Part No.	Qty.	Description
1	112-8405	1	Seal Kit
2	107-9319	1	Nut-Hex
3	3257-42	1	Key-Woodruff

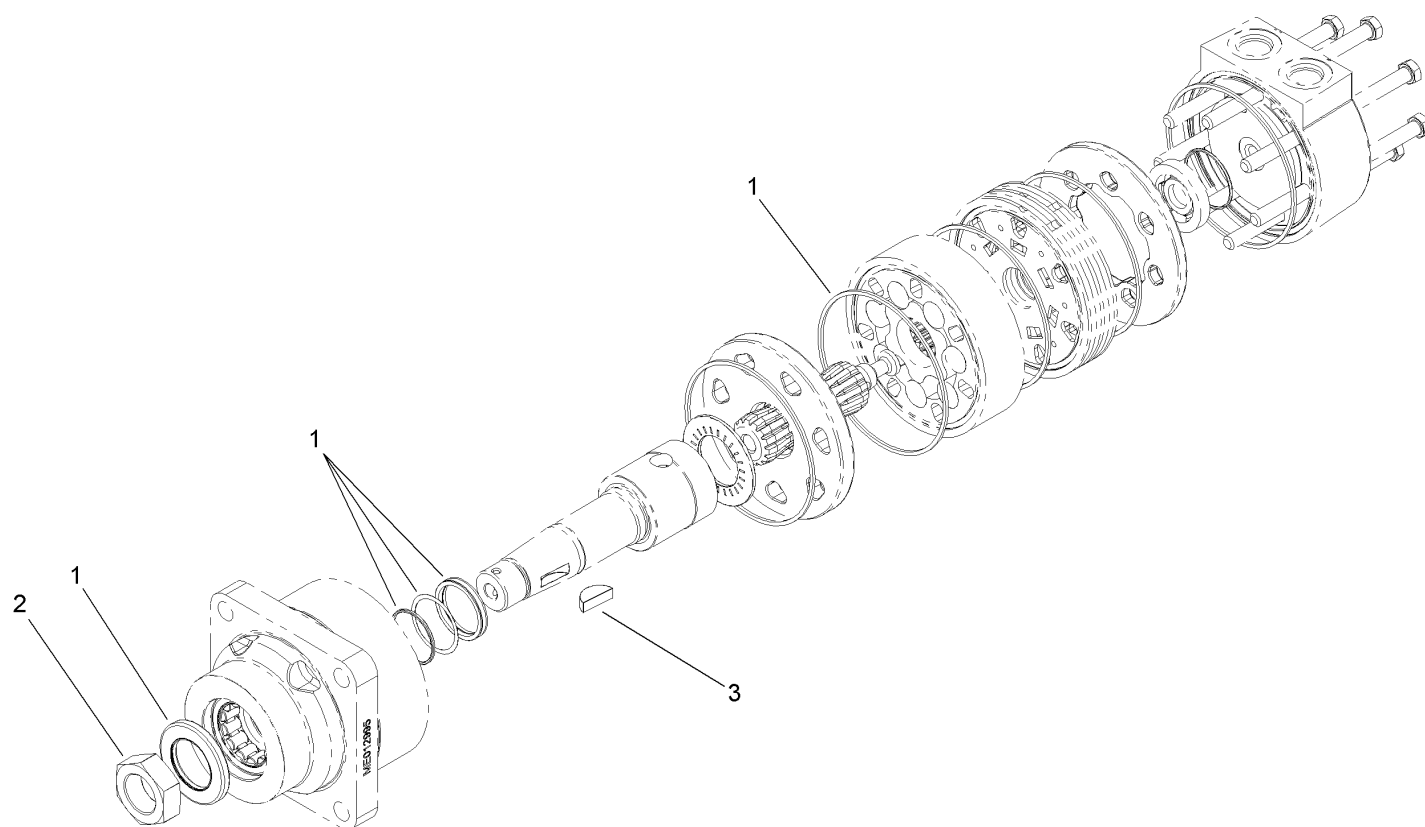


Hydraulic Motor Assembly No. 108-5155

Ref	Part No.	Qty.	Description
1	112-8405	1	Seal Kit
2	107-9319	1	Nut-Hex
3	3257-42	1	Key-Woodruff

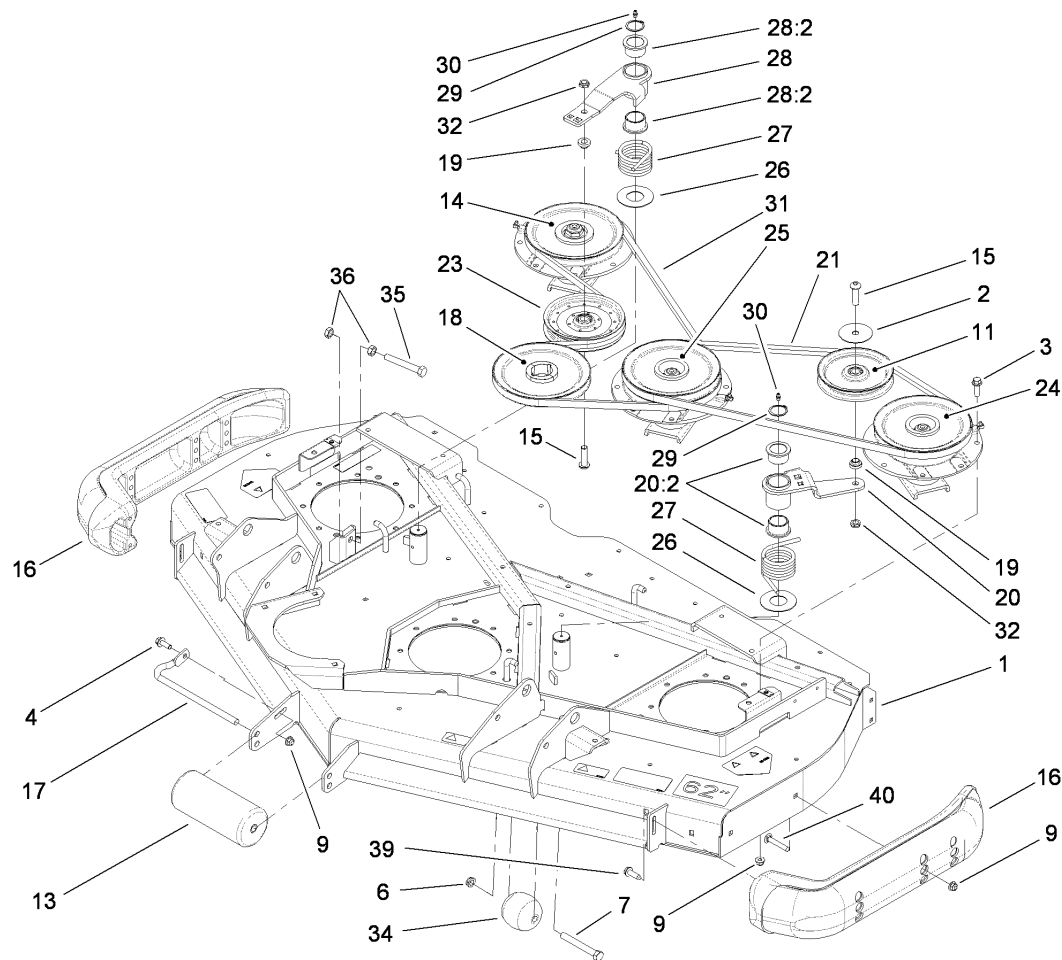


Deck Roller, Belt and Pulley Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	108-9907	1	Deck ASM	28:2	93-4510	2	Bushing-Caster
2	100-3102	1	Washer-Flat	29	32120-84	2	Ring-Snap, External
3	3234-24	24	Screw-HHF	30	302-5	2	Fitting-Grease
4	3234-42	1	Screw-HHF	31	110-9594	1	Belt-V
6	3296-45	2	Nut-Lock, NI	32	3296-45	2	Nut-Lock, NI
7	325-17	2	Screw-HH	34	29-4820	2	Roller
9	104-8301	29	Nut-Flange, NI	35	325-14	1	Screw-HH
11	01-268-0160	1	Pulley-Idler	36	3218-5	2	Nut-Jam
13	68-6710	1	Roller	39	9136144	2	Screw-HWHTF
14	104-3532	1	Low Driven Spindle ASM	40	3231-33	4	Screw-CARR
15	108-1993	2	Screw-HSBH				
16	112-1479	2	Skid-Bumper, Deck				
17	68-6840	1	Shaft-Roller				
18	107-4767	1	Pulley ASM				
19	108-1924	2	Spacer-Idler				
20	110-3564	1	Idler Arm ASM				
20:2	93-4510	2	Bushing-Caster				
21	110-9595	1	Belt-V				
23	110-9596	1	Pulley-Idler				
24	104-3531	1	High Driven Spindle ASM				
25	104-3530	1	Double Driven Spindle ASM				
26	108-1926	2	Washer				
27	108-1921	2	Spring-Torsion				
28	108-1930	1	Idler Arm ASM				

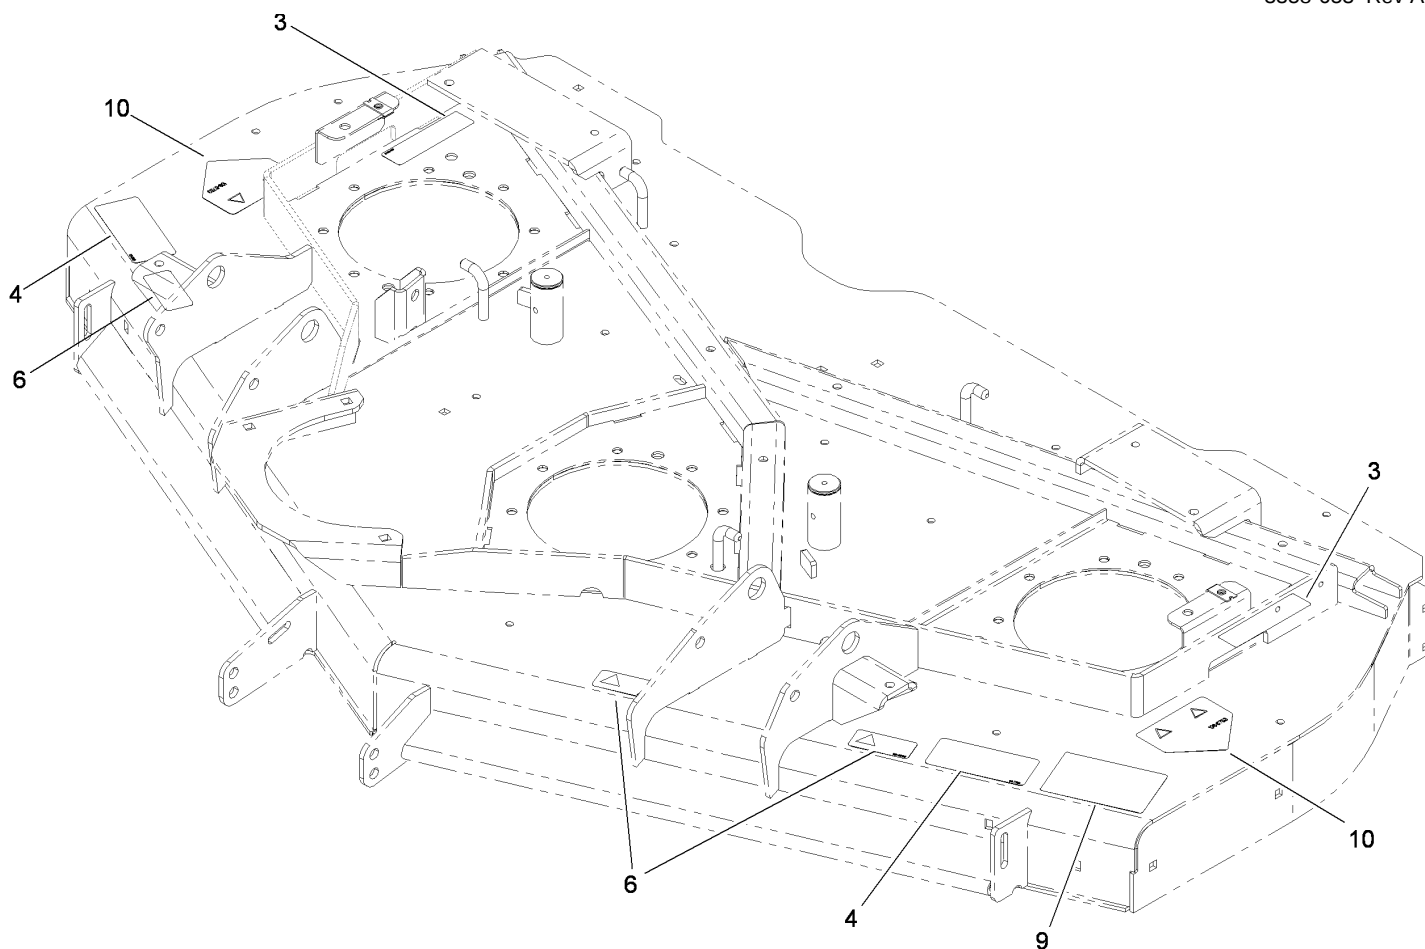


Deck Decal Assembly

Ref	Part No.	Qty.	Description
3	100-6578	2	Decal-Danger
4	93-7818	2	Decal-Torque, Blade Bolt
6	93-6696	3	Decal-Warning
9	66-1630	1	Decal-62
10	106-6753	2	Decal-Danger, Ce

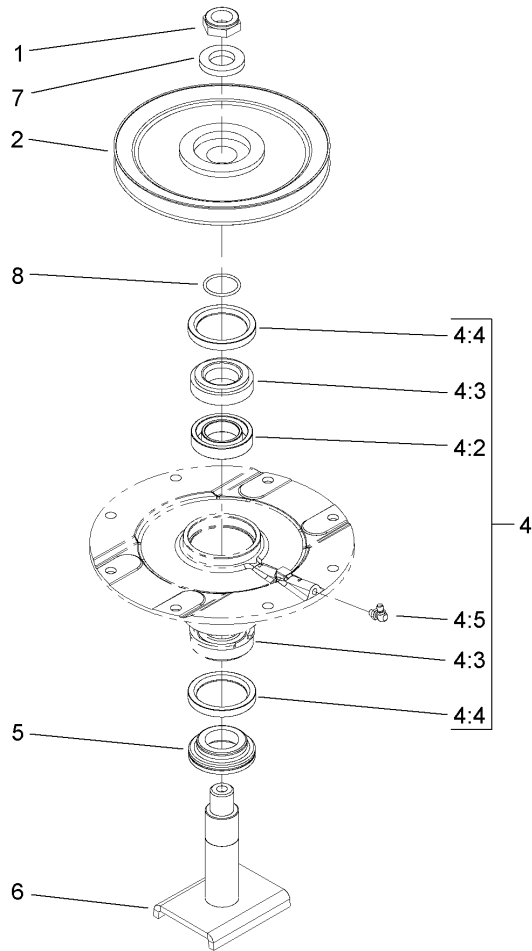


Low Driven Idler Assembly No. 104-3532

Ref	Part No.	Qty.	Description				
1	3296-60	1	Nut-Lock, NI				
2	104-3546	1	Pulley-Driven, Low				
4	104-3552	1	Spindle Housing ASM				
4:2	104-3549	1	Bearing Spacer Set				
4:3	110-8297	1	Bearing ASM				
4:4	253-154	2	Seal-Oil				
4:5	302-60	1	Fitting-Grease, 90 DEG				
5	69-6950	1	Spacer-Shaft, Spindle				
6	104-3554	1	Spindle Shaft ASM				
7	104-8322	1	Washer-Hardened				
8	106-7159	1	O-Ring				

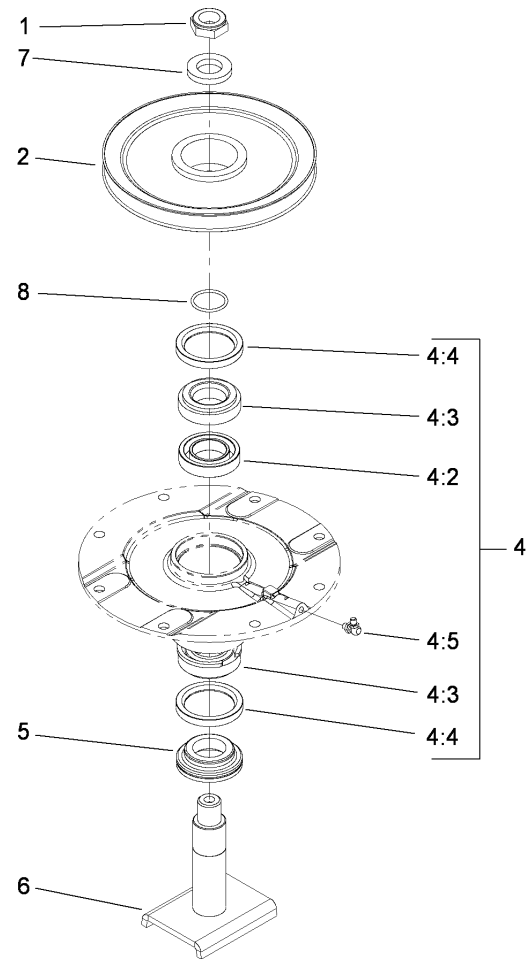


High Driven Spindle Assembly No. 104-3531

Ref	Part No.	Qty.	Description				
1	3296-60	1	Nut-Lock, NI				
2	104-3548	1	Pulley-Driven, High				
4	104-3552	1	Spindle Housing ASM				
4:2	104-3549	1	Bearing Spacer Set				
4:3	110-8297	1	Bearing ASM				
4:4	253-154	2	Seal-Oil				
4:5	302-60	1	Fitting-Grease, 90 DEG				
5	69-6950	1	Spacer-Shaft, Spindle				
6	104-3554	1	Spindle Shaft ASM				
7	104-8322	1	Washer-Hardened				
8	106-7159	1	O-Ring				

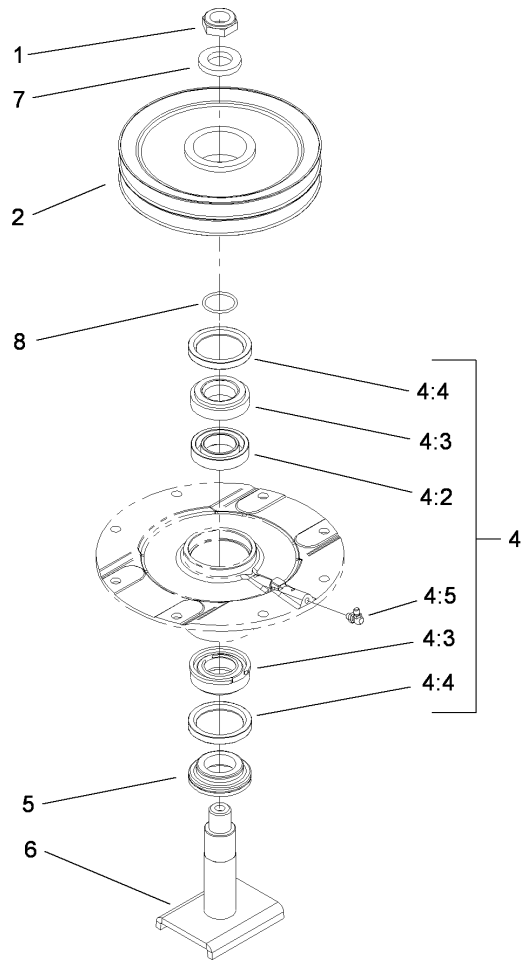


Double Driven Spindle Assembly No. 104-3530

Ref	Part No.	Qty.	Description				
1	3296-60	1	Nut-Lock, NI				
2	104-3547	1	Pulley-Driven, Double				
4	104-3552	1	Spindle Housing ASM				
4:2	104-3549	1	Bearing Spacer Set				
4:3	110-8297	1	Bearing ASM				
4:4	253-154	2	Seal-Oil				
4:5	302-60	1	Fitting-Grease, 90 DEG				
5	69-6950	1	Spacer-Shaft, Spindle				
6	104-3554	1	Spindle Shaft ASM				
7	104-8322	1	Washer-Hardened				
8	106-7159	1	O-Ring				

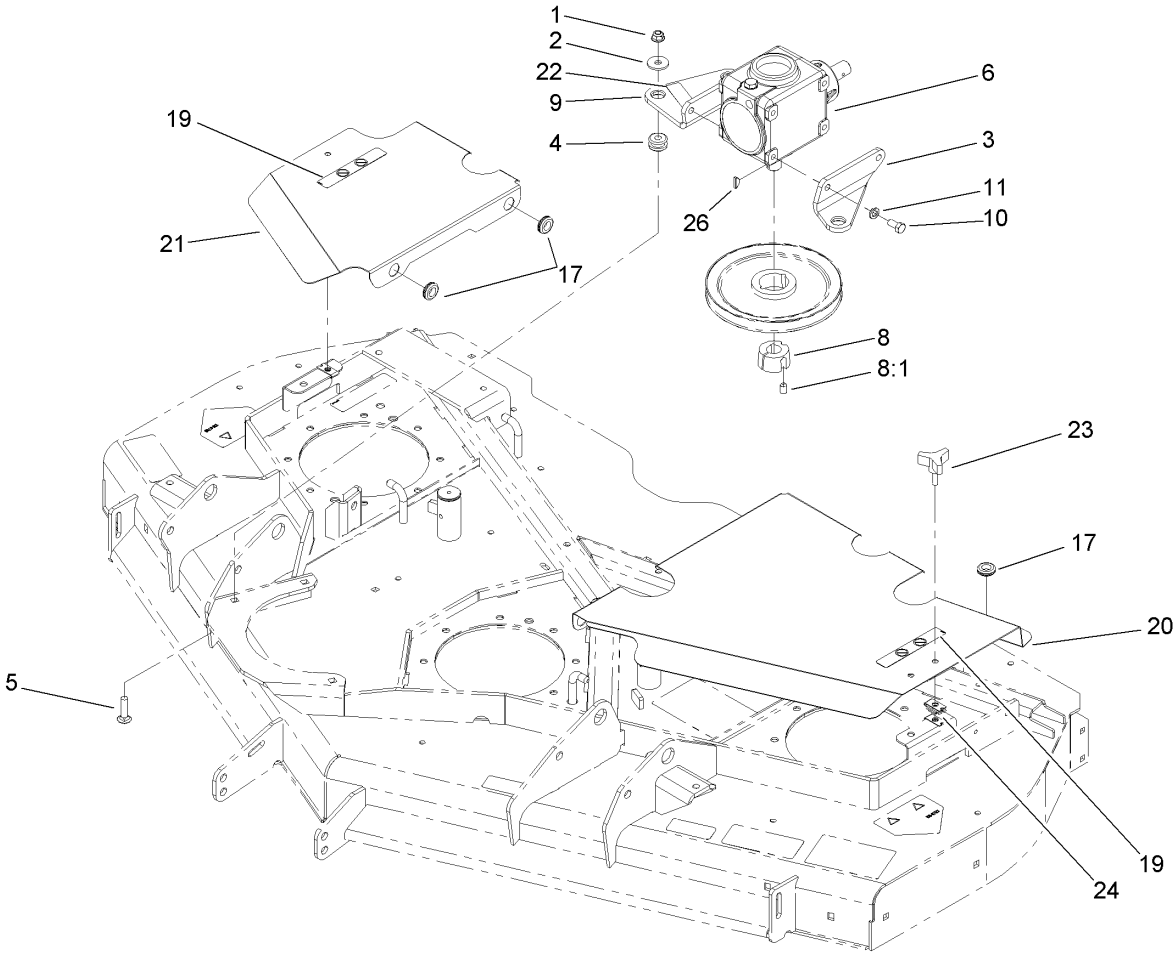


Belt Cover, Gearbox and Baffle Assembly

Ref	Part No.	Qty.	Description				
1	104-8301	3	Nut-Flange, NI				
2	63-8410	3	Washer				
3	110-6384-03	1	Bracket-Gearbox, LH				
4	63-9750	3	Mount				
5	3231-26	3	Screw-CARR				
6	110-6386-03	1	Gearbox				
8	23-1640	1	Bushing-Taperlock				
8:1	3247-4	2	Screw-Set				
9	110-6385-03	1	Bracket-Gearbox, RH				
10	323-4	4	Screw-HH				
11	3253-21	4	Washer-Lock				
17	112-9559	5	Grommet				
19	93-6687	2	Decal-No Step				
20	112-1458-03	1	Cover-Deck, LH				
21	112-1459-03	1	Cover-Deck, RH				
22	93-6697	1	Decal-Lube				
23	106-2240	2	Knob				
24	110-3510	2	Nut-Retainer				
26	3257-5	1	Key-Woodruff				

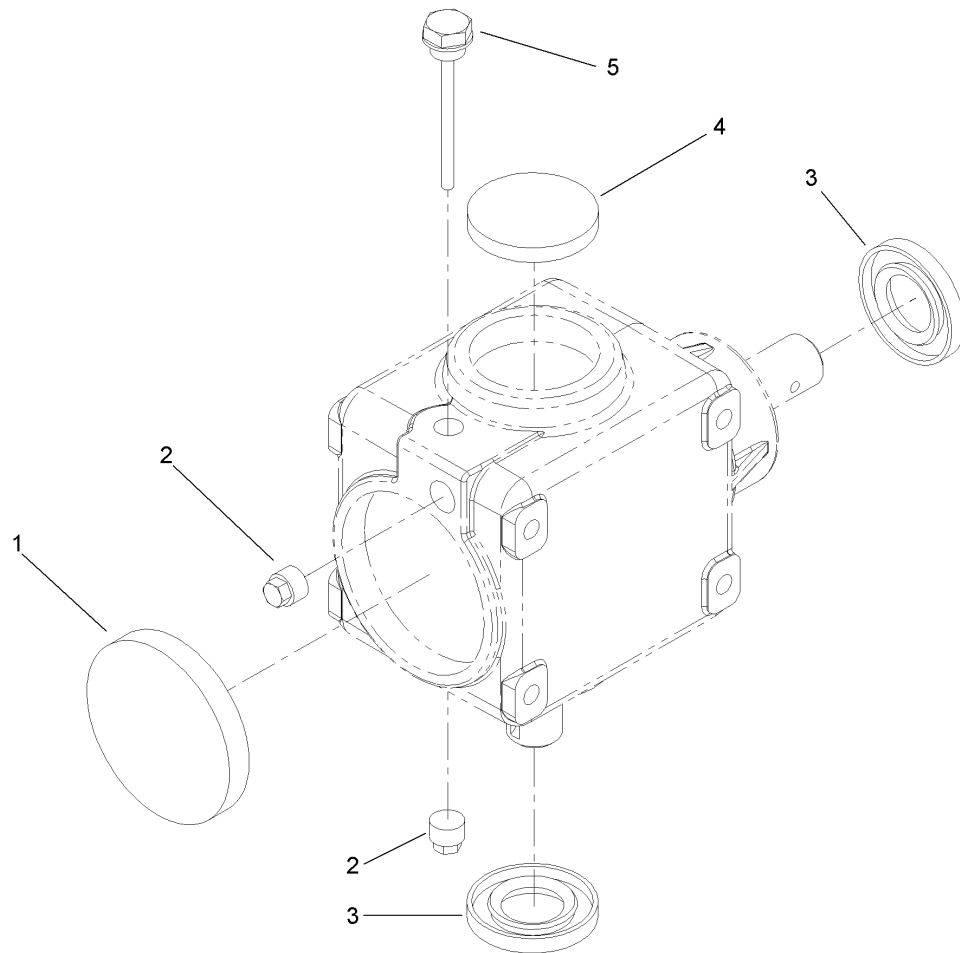


Gearbox Assembly No. 110-6386-03

Ref	Part No.	Qty.	Description				
1	107-2932	1	Cap-Oil				
2	107-2933	2	Plug				
3	107-2934	2	Seal-Oil				
4	107-2935	1	Cap-Oil				
5	110-8283	1	Plug-Filler, Dipstick				

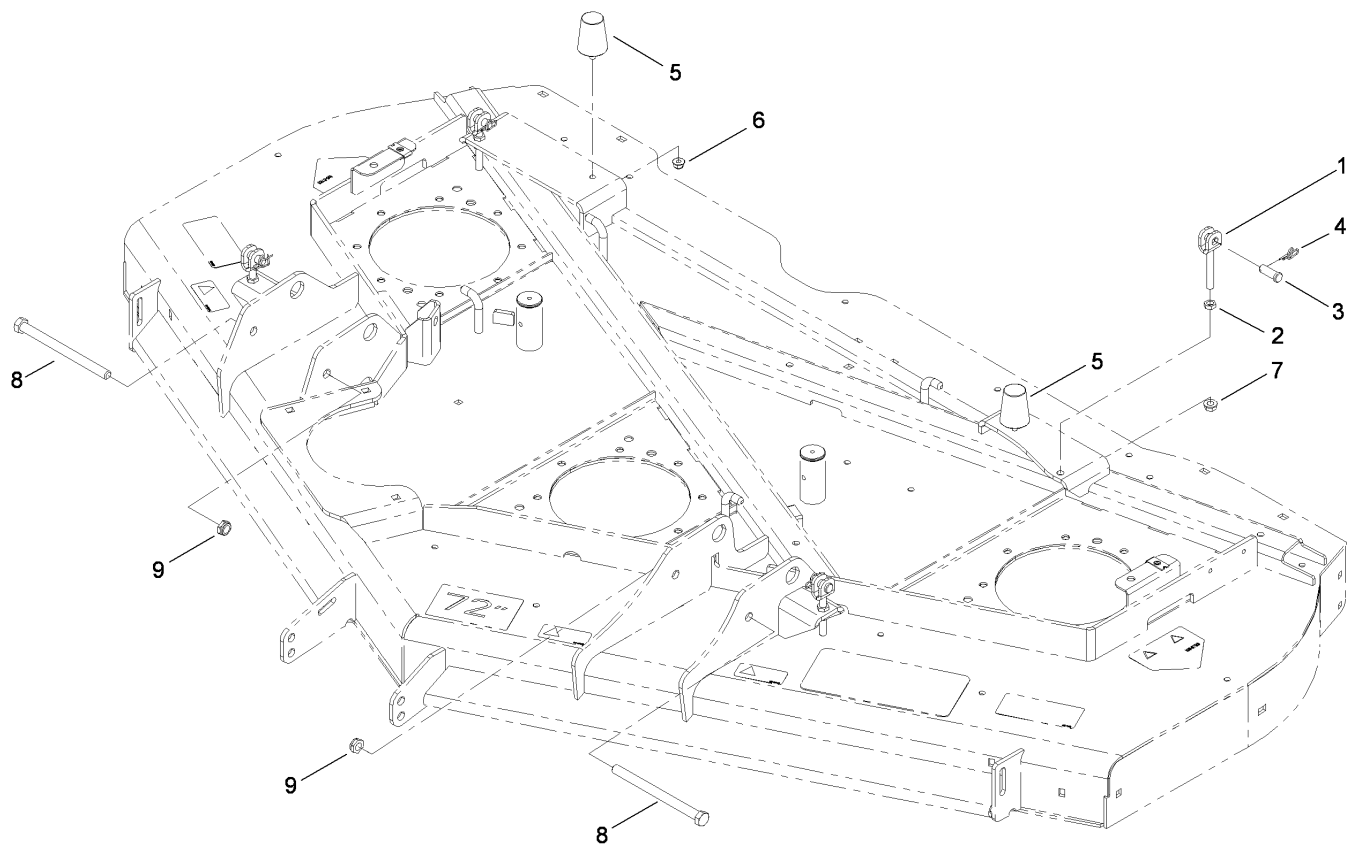

Deck Adjustment Link and Bumper Assembly


Ref	Part No.	Qty.	Description				
1	112-1485	4	Clevis-Adjustment				
2	3218-3	4	Nut-Jam				
3	700601	4	Pin-Clevis				
4	112-1491	4	Pin-Rue Ring				
5	110-5070	2	Bumper-Neoprene				
6	104-8300	2	Nut-Flange, NI				
7	3290-357	4	Nut-HHF, Whiz				
8	325-23	2	Screw-HH				
9	3296-45	2	Nut-Lock, NI				

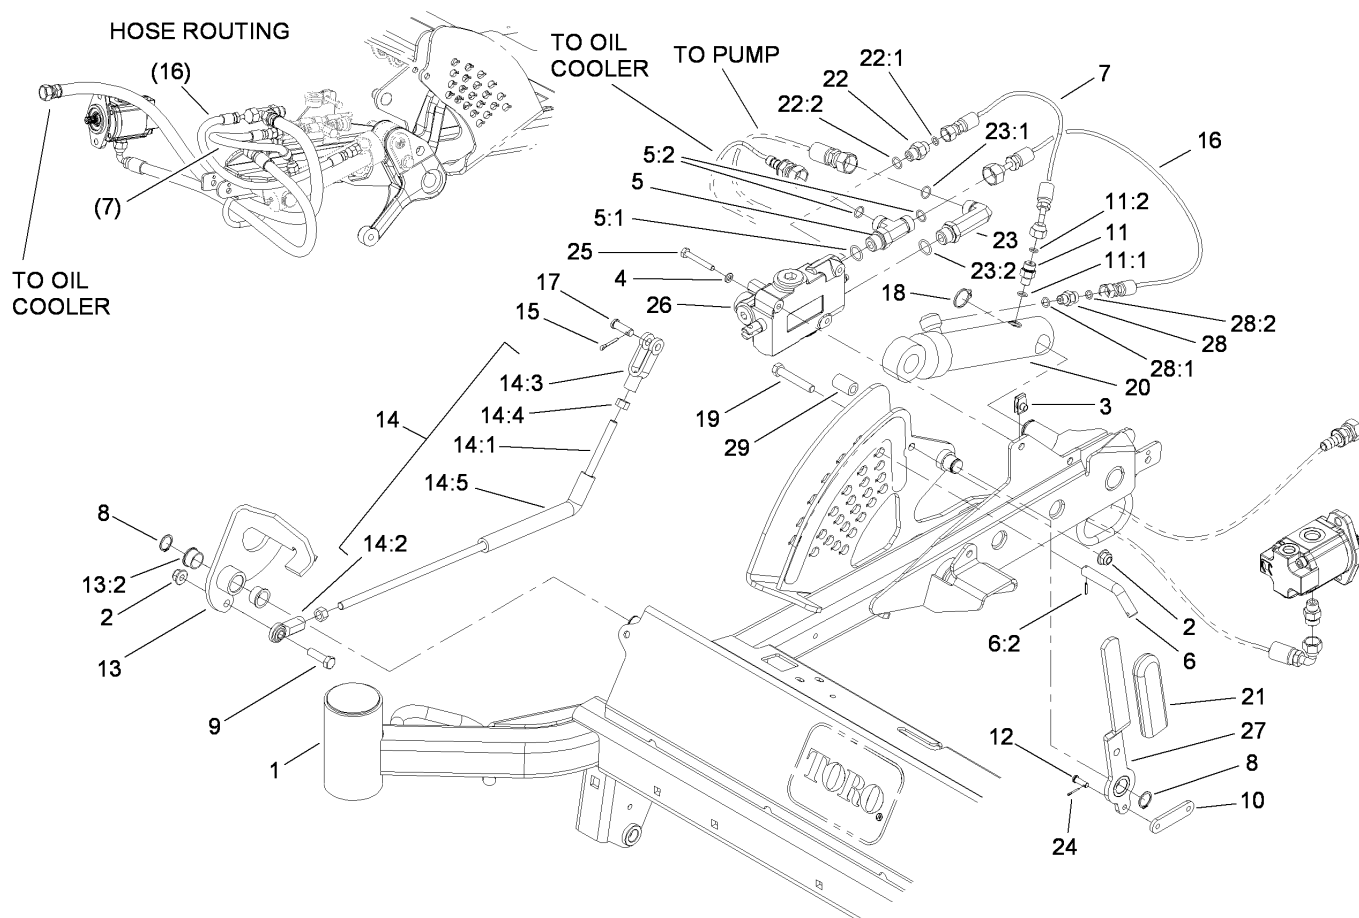

Carrier Frame and Valve Assembly


Ref	Part No.	Qty.	Description
1	112-1631	1	Carrier Frame ASM
2	104-8301	2	Nut-Flange, NI
3	107069	2	Clip
4	3253-3	2	Washer-Lock
5	340-109	1	Fitting-HYD, Tee
5:1	237-79	1	O-Ring
5:2	237-30	2	O-Ring
6	112-1621	1	Pin-HOC
6:2	32121-107	1	Pin-Roll, Slotted
7	110-8966	1	Hose ASM
8	32120-72	2	Ring-Snap
9	323-7	1	Screw-HH
10	114-4042	1	Link
11	95-1639	1	Fitting-HYD
11:1	237-78	1	O-Ring
11:2	237-21	1	O-Ring
12	1-808265	2	Pin-Clevis
13	112-9534	1	Pedal ASM
13:2	256-252	2	Bearing-Flange
14	112-9539	1	Link ASM
14:1	112-9535	1	Rod-Threaded
14:2	103-0608	1	Joint-Ball, End
14:3	1-633131	1	Yoke-Linkage, Brake
14:4	3219-3	2	Nut-Hex

Ref	Part No.	Qty.	Description
14:5	114-4041	1	Hose-Foam
15	3272-10	1	Pin-Cotter
16	112-6324	1	Hose ASM
17	283-2	1	Pin-Clevis
18	32151-36	1	Ring-Retaining
19	323-11	1	Screw-HH
20	110-9834	1	Cylinder-HYD
21	1-633268	1	Grip-Lever, Brake
22	340-1	1	Adapter
22:1	237-21	1	O-Ring
22:2	237-42	1	O-Ring
23	99-6160	1	Fitting-Elbow, 90 DEG
23:1	237-30	1	O-Ring
23:2	237-79	1	O-Ring
24	3272-1	2	Pin-Cotter
25	321-11	2	Screw-HH
26	114-2877	1	Valve ASM
27	114-4027-03	1	Lever ASM
28	340-92	1	Fitting-HYD, Straight
28:1	237-78	1	O-Ring
28:2	237-21	1	O-Ring
29	93-6981	1	Spacer

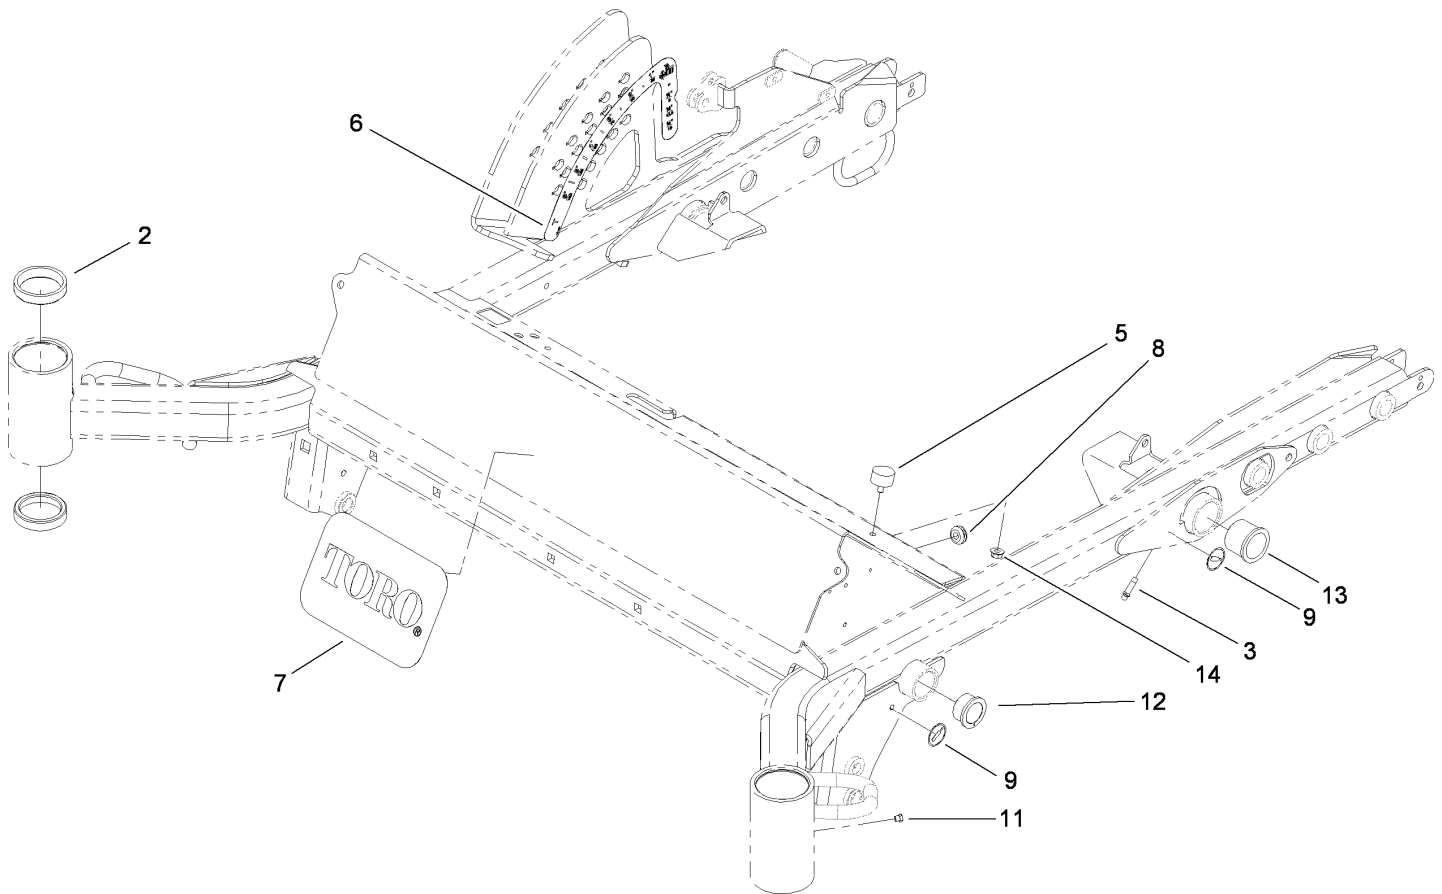


Carrier Frame Assembly No. 112-1631

Ref	Part No.	Qty.	Description				
2	254-107	4	Cup-Bearing, Tapered				
3	302-64	2	Fitting-Grease				
5	240-14	4	Bumper-Rubber				
6	112-1620	1	Decal-HOC				
7	62-5550	1	Decal				
8	237-141	1	Grommet-Rubber				
9	58-6520	4	Decal-Grease				
11	1-811010	2	Plug				
12	94-7574	2	Bushing-Flanged				
13	256-268	2	Bushing				
14	104-7201	4	Nut-HF				

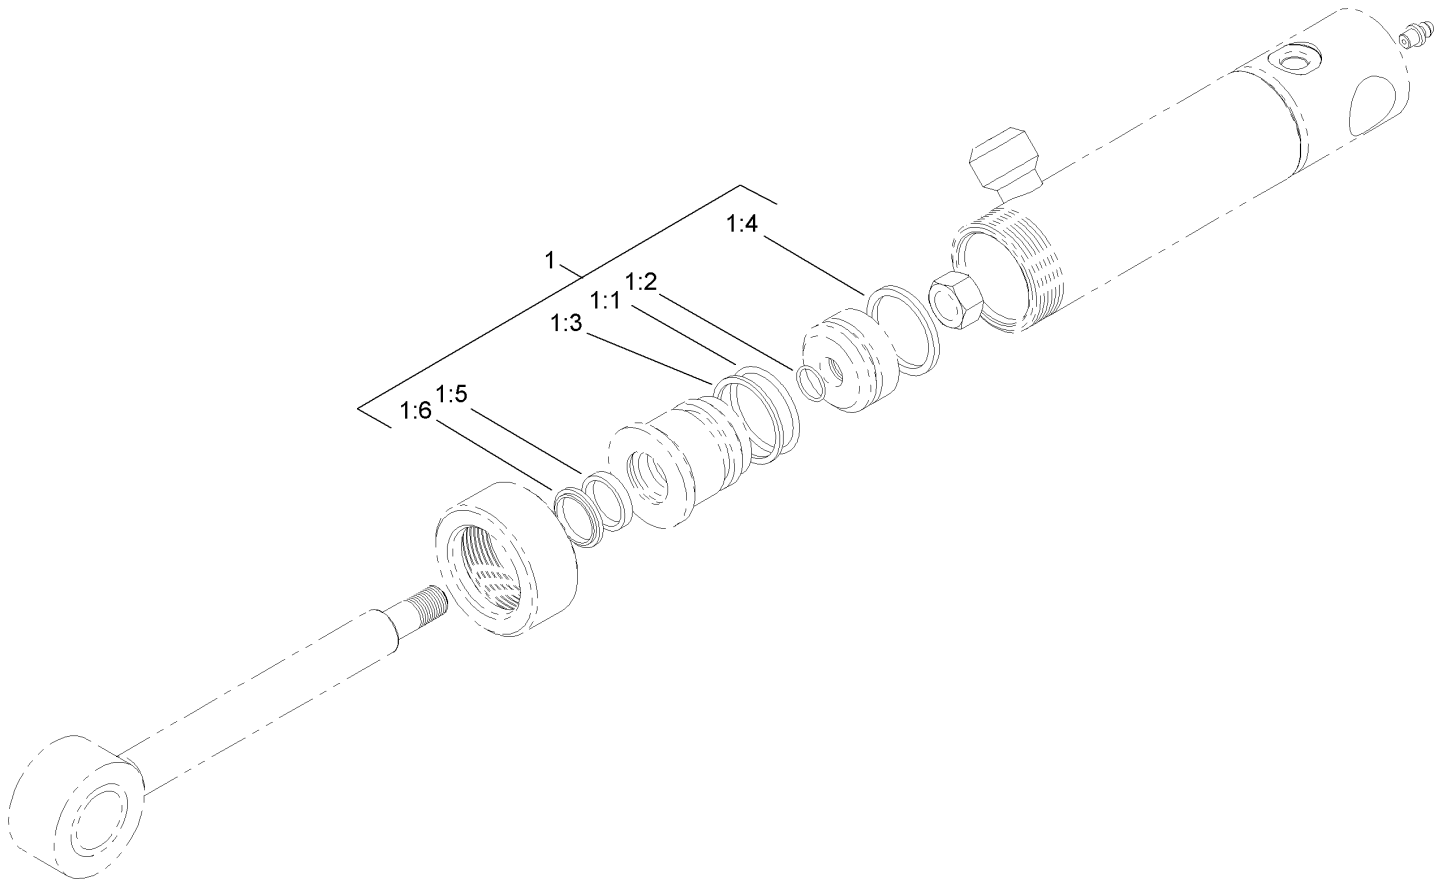


Hydraulic Cylinder Assembly No. 110-9834

Ref	Part No.	Qty.	Description				
1	112-6353	1	Seal Kit				
1:1		1	O-Ring				
1:2		1	O-Ring				
1:3		1	Backup				
1:4		1	Seal-Bp				
1:5		1	Seal-Rod				
1:6		1	Seal-Dust				

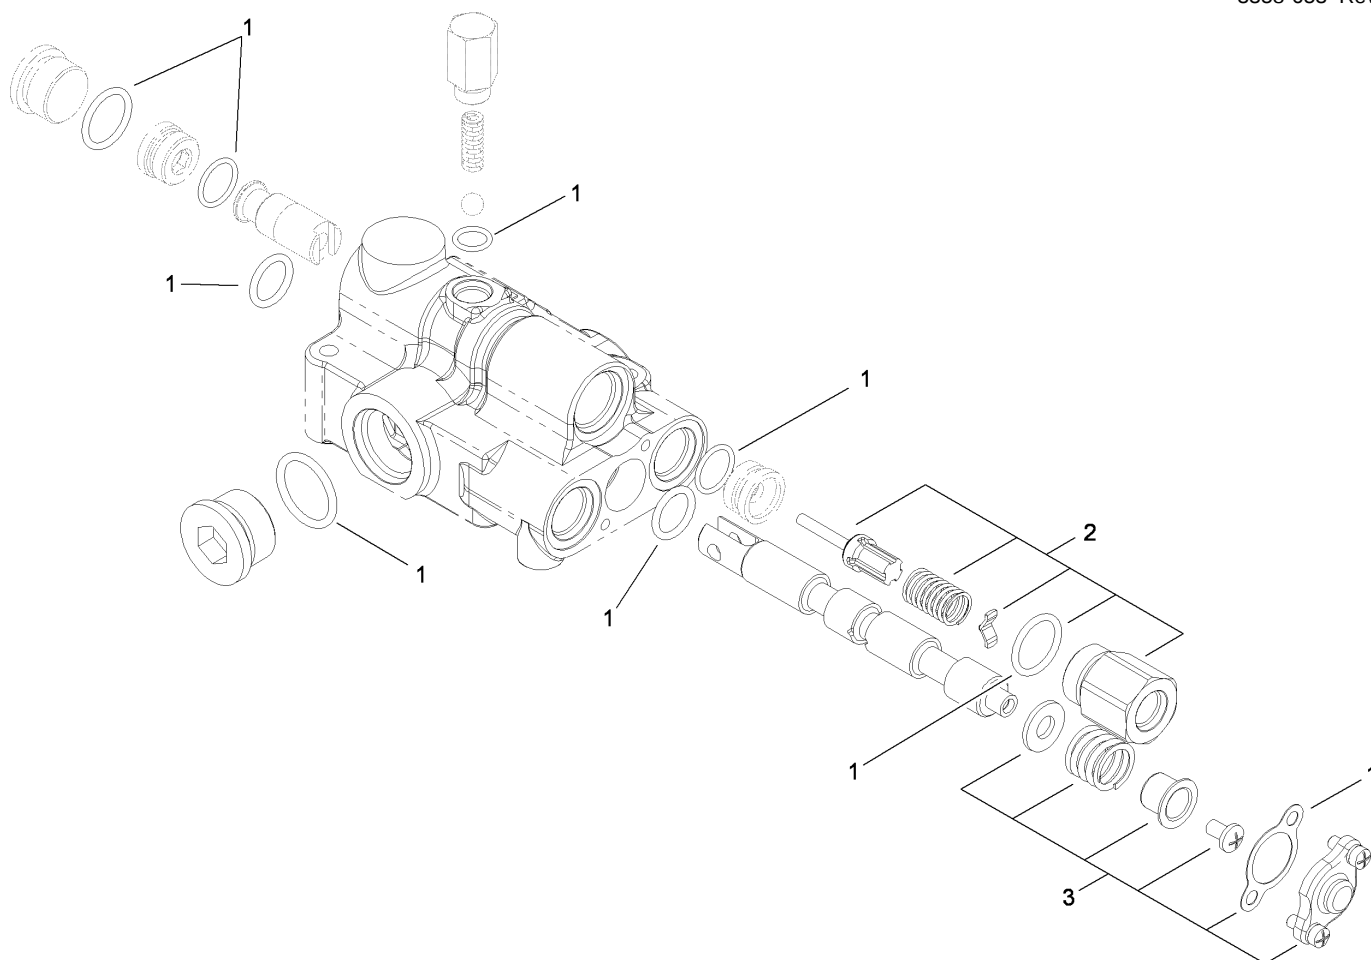


Hydraulic Valve Assembly No. 114-2877

Ref	Part No.	Qty.	Description
1	110-6442	1	Seal Kit
2	110-6441	1	Pilot Check Kit
3	114-2889	1	Spring Center Kit

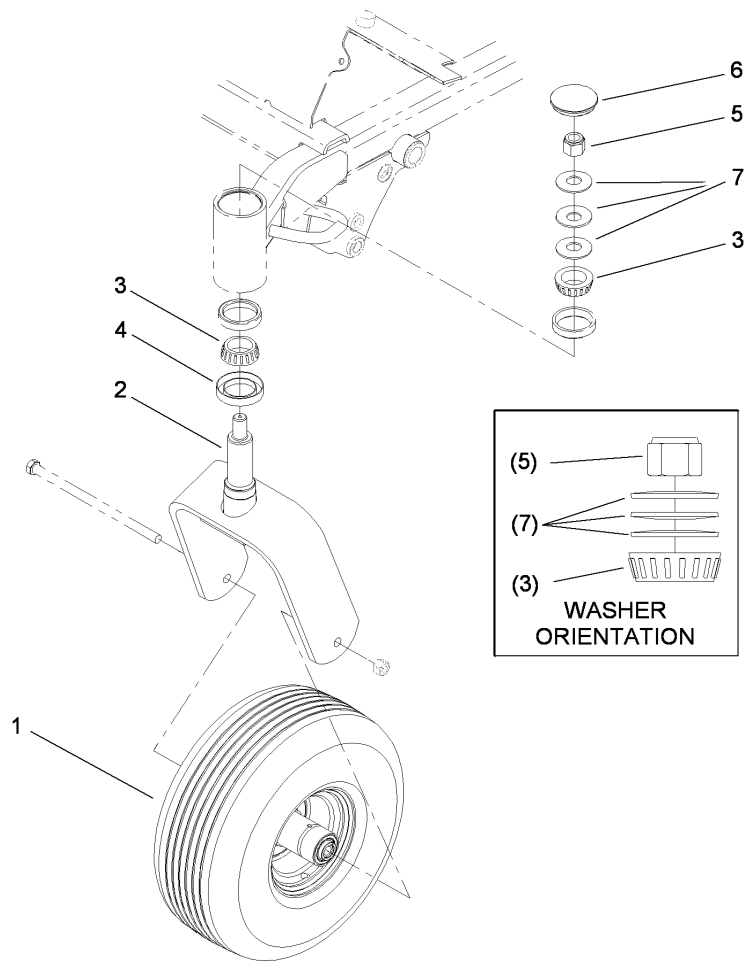


Caster Fork Assembly

Ref	Part No.	Qty.	Description				
1	108-9954	2	Caster Wheel ASM				
2	108-9946-03	2	Fork-Caster				
3	254-106	4	Cone-Bearing, Tapered				
4	69-2980	2	Seal				
5	3296-51	2	Nut-Lock, NI				
6	108-9950	2	Cap-Grease				
7	108-9957	6	Washer-Belleville				

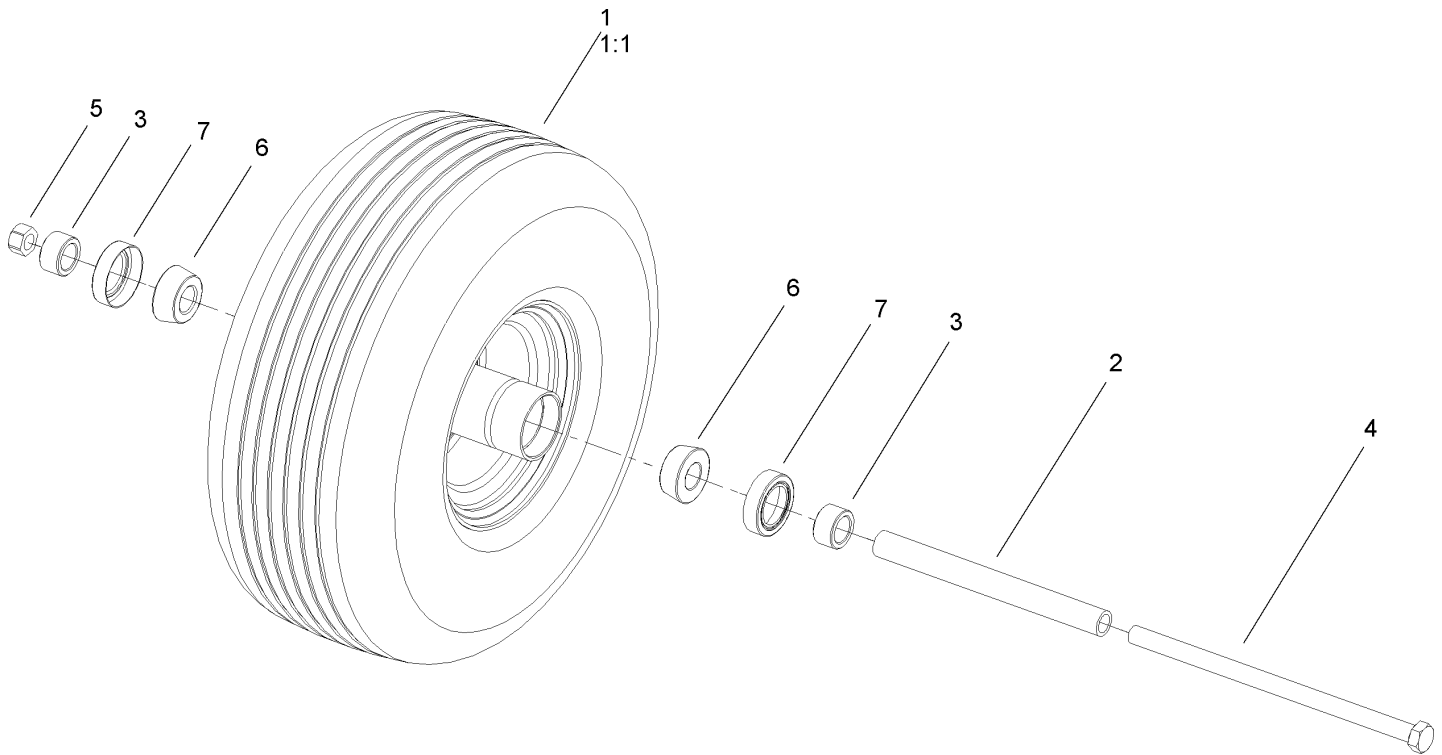

Caster Wheel Assembly No. 108-9954


Ref	Part No.	Qty.	Description				
1	108-9956	1	Tire And Wheel ASM				
1:1	108-9955	1	Tire				
2	1-633959	1	Spacer-Caster, Front				
3	1-633581	2	Spacer-Bearing				
4	325-39	1	Screw-HH				
5	3296-25	1	Nut-Lock, NI				
6	1-633585	2	Bearing-Cone, Taper				
7	1-633580	2	Seal-Bearing				

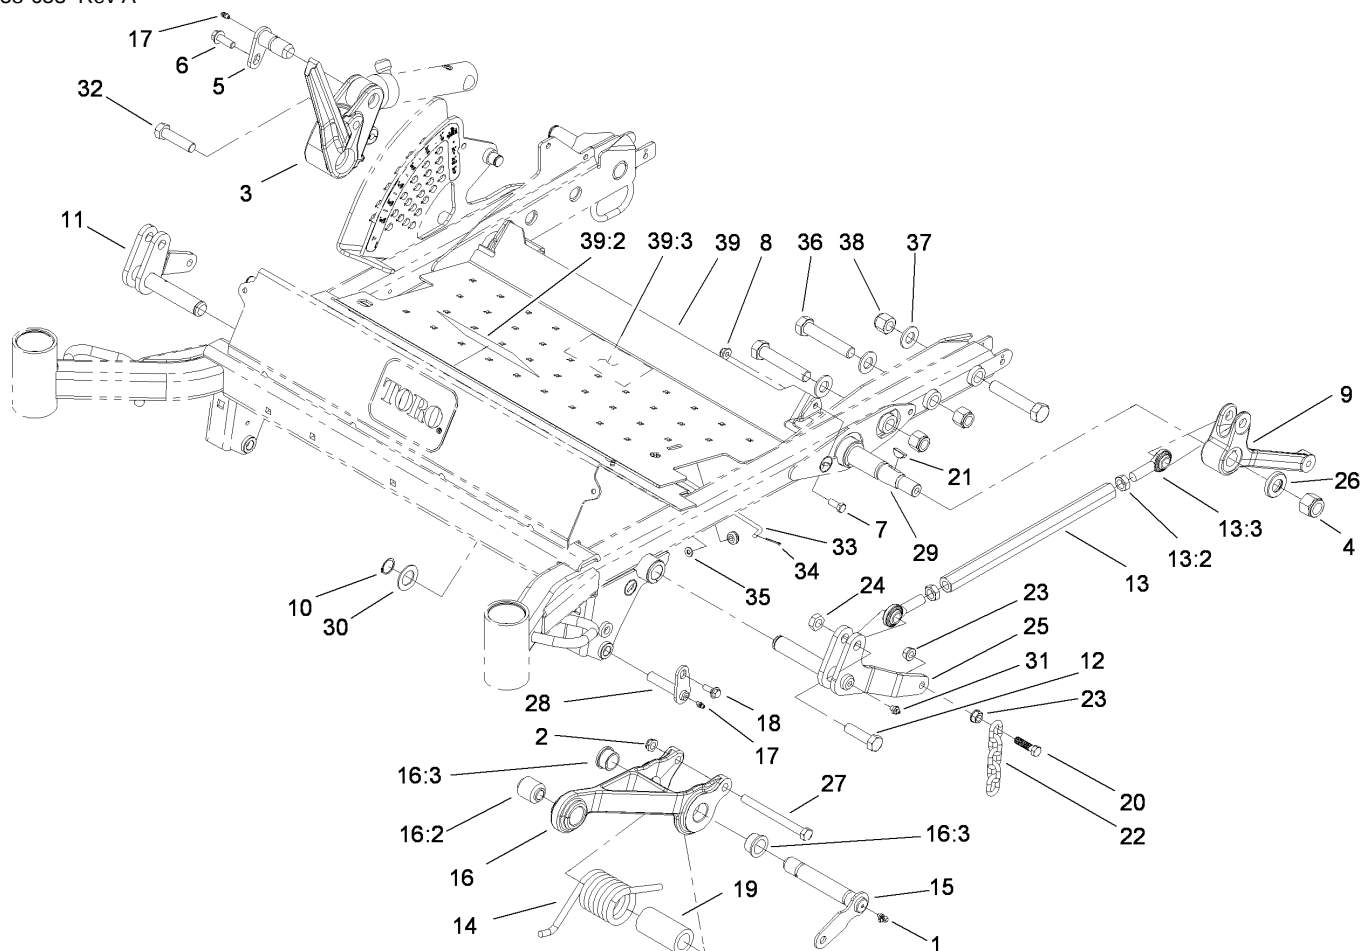

Deck Linkage Assembly


Ref	Part No.	Qty.	Description
1	302-60	4	Fitting-Grease, 90 DEG
2	3296-45	2	Nut-Lock, NI
3	112-1635-03	1	Arm-Lift, RH
4	94-8000	2	Nut-Hex
5	98-2654	1	Pivot Pin ASM
6	3234-15	1	Screw
7	323-5	2	Screw-HH
8	104-8301	2	Nut-Flange, NI
9	112-1637-03	1	Arm-Lift, LH
10	32151-29	2	Ring-Retaining
11	110-9820-03	1	RH Lift ASM
12	327-22	3	Screw-HH
13	114-4059	2	Link ASM
13:2	3220-6	2	Nut-Jam
13:3	1-633029	2	Balljoint-Spherical
14	112-9520	2	Spring-Torsion
15	112-1622	2	Pin
16	112-1625	2	Pull Link ASM
16:2	107-2328	1	Bushing
16:3	256-132	2	Bushing-Flange
17	302-5	3	Fitting-Grease
18	27-0410	2	Screw-Shoulder
19	110-9845	2	Spacer-Plain
20	103-1898	4	Screw-HH

Ref	Part No.	Qty.	Description
21	3257-42	2	Key-Woodruff
22	1-633447	4	Chain-Lift, Deck
23	32128-37	6	Nut-HF
24	3296-61	3	Nut-Lock
25	110-9818-03	1	LH Lift ASM
26	112-9585	2	Washer-Hardened
27	325-22	2	Screw-HH
28	112-1602	2	Pin-Retainer
29	112-9522-03	1	Shaft-Lift, Deck
30	69-9010	2	Washer
31	302-2	2	Fitting-Grease
32	327-7	1	Screw-HH
33	110-9847	1	Rod-Prop
34	3272-6	1	Pin-Cotter
35	3256-22	1	Washer-Flat
36	328-7	5	Screw-HH
37	92-5836	5	Washer
38	3296-51	5	Nut-Lock, NI
39	114-4048	1	Floor Plate ASM
39:2	107-1866	1	Decal-Danger, Slope
39:3	112-1461	1	Decal-Routing, Belt

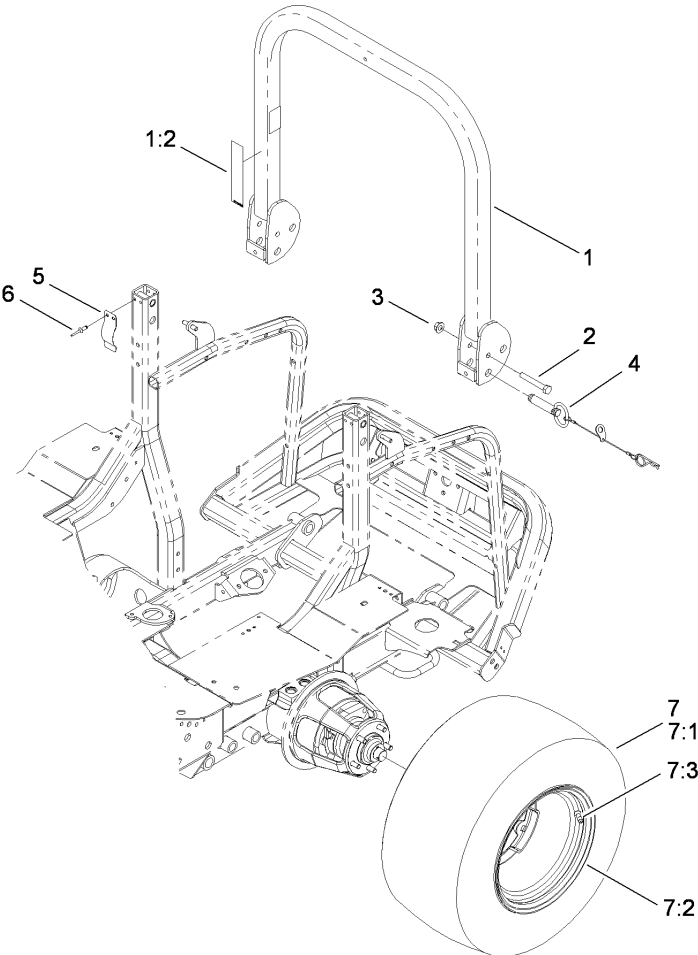


**Roll-Over Protection System
and Rear Wheel Assembly**

Ref	Part No.	Qty.	Description				
1	110-9770	1	Upper ROPS ASM				
1:2	107-3069	1	Decal-Warning, Folding ROPS (Ce)				
2	325-13	2	Screw-HH				
3	32128-23	2	Nut-HF				
4	103-4553	2	ROPS Fold Pin ASM				
5	110-5696	2	Spring-Leaf				
6	3290-412	4	Rivet				
7	106-7864	2	Tire And Wheel ASM				
7:1	106-7868	1	Tire				
7:2	87-6750	1	Wheel				
7:3	232-27	1	Stem-Valve				

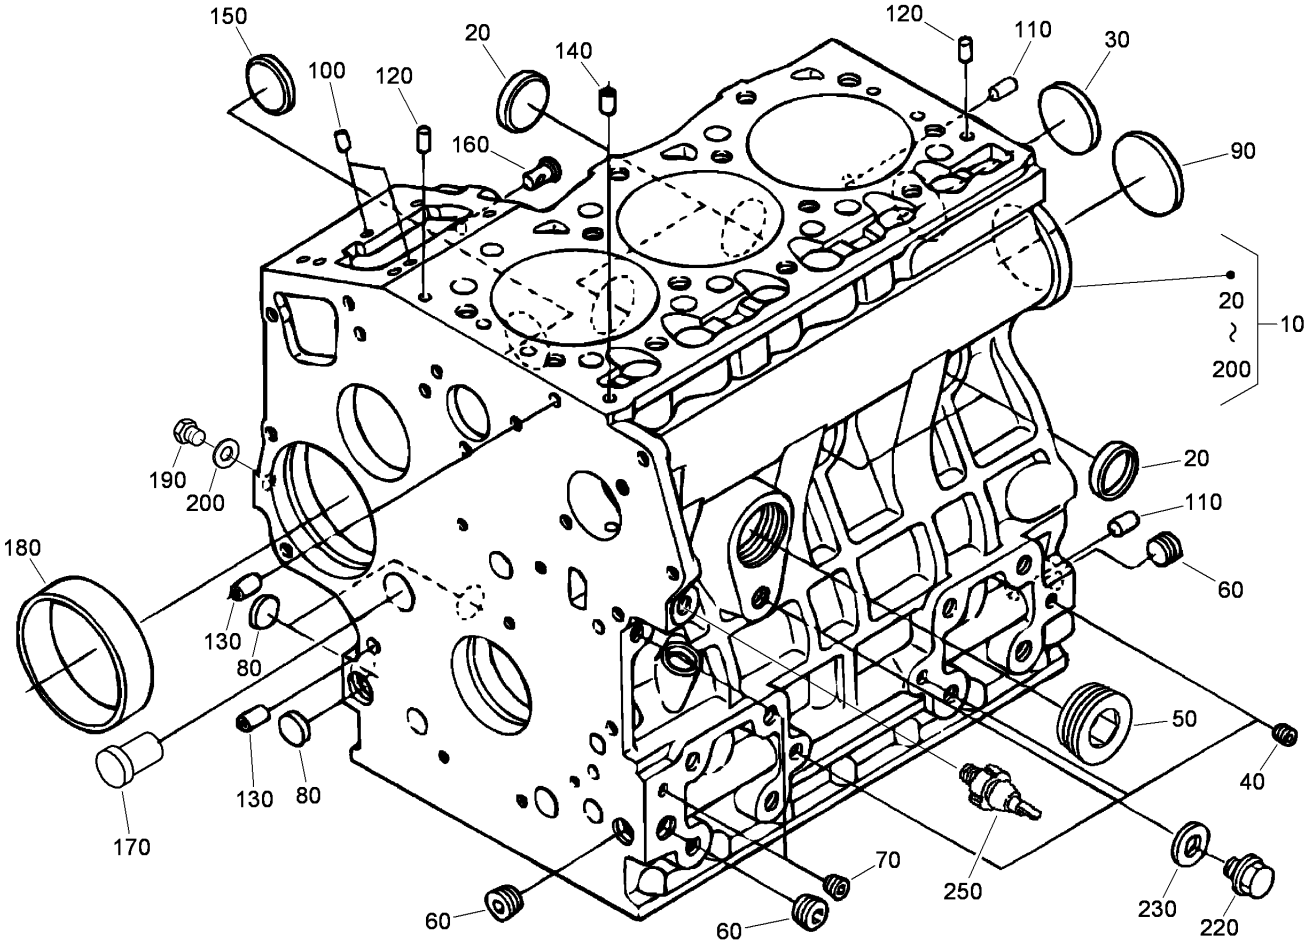


Crankcase Assembly

Ref	Part No.	Qty.	Description				
10	108-6571	1	Crankcase ASM				
20	98-9398	4	Cap-Sealing				
30	98-7539	1	Cap-Sealing				
40	98-7540	3	Plug				
50	105-3779	1	Plug				
60	98-9597	3	Plug				
70	98-7487	2	Plug				
80	98-9379	3	Plug				
90	98-9668	1	Plug				
100	98-9375	2	Pin-Straight				
110	98-9377	2	Pin-Straight				
120	105-3795	2	Pin-Straight				
130	98-9387	2	Pin-Pipe				
140	98-9539	1	Pin-Pipe				
150	98-9599	1	Plug				
160	98-9630	1	Pin-Spring, Start				
170	98-9675	1	Plug				
180	98-9656	1	Bushing-Governor, Gear				
190	98-7507	1	Plug				
200	98-7428	1	Gasket				
220	99-3447	1	Plug				
230	106-7056	1	Gasket				
250	98-9416	1	Switch-Oil				

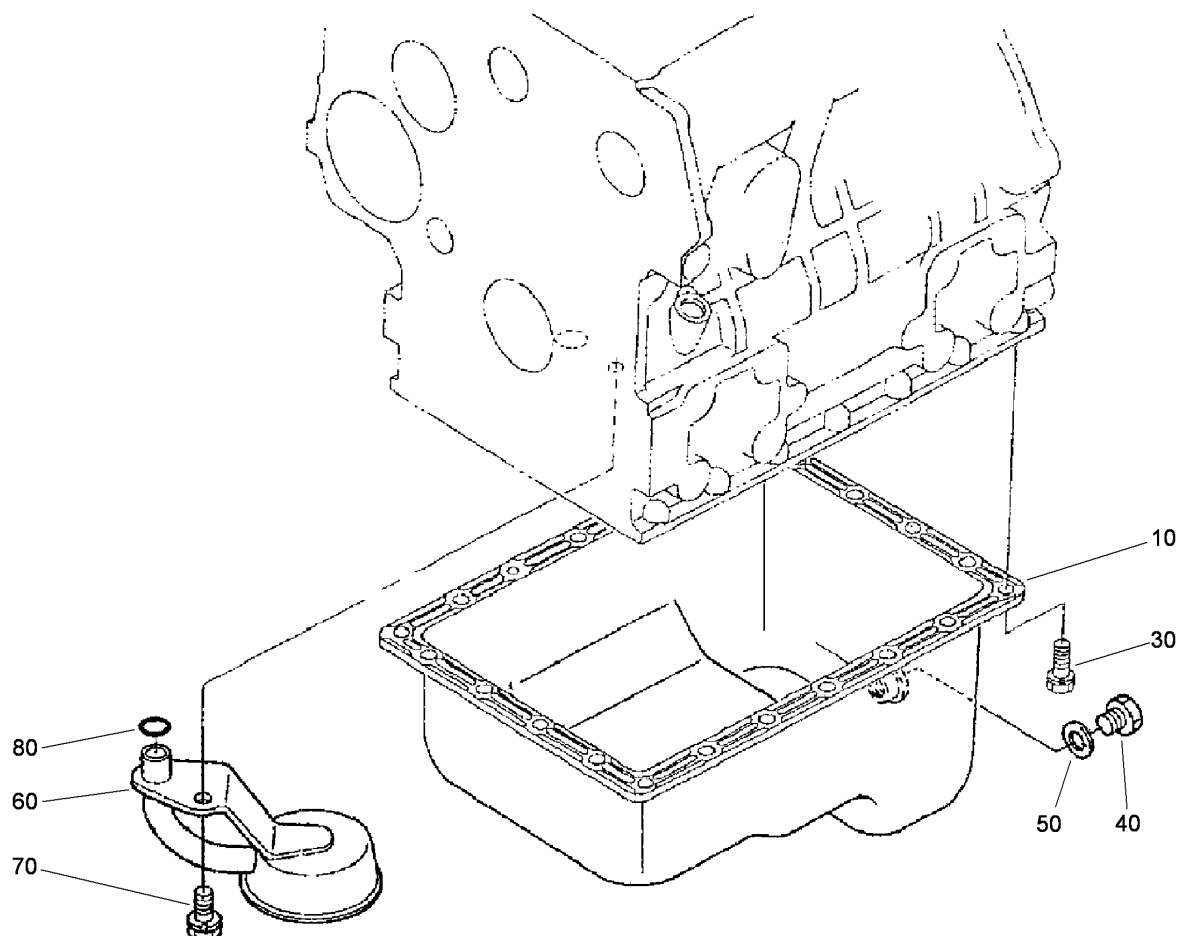


Oil Pan Assembly

Ref	Part No.	Qty.	Description
10	112-0179	1	Pan-Oil
30	107-9065	22	Bolt
40	108-6572	1	Plug-Drain
50	98-7524	1	Gasket
60	108-1401	1	Filter-Oil
70	98-7526	1	Bolt
80	105-3776	1	O-Ring

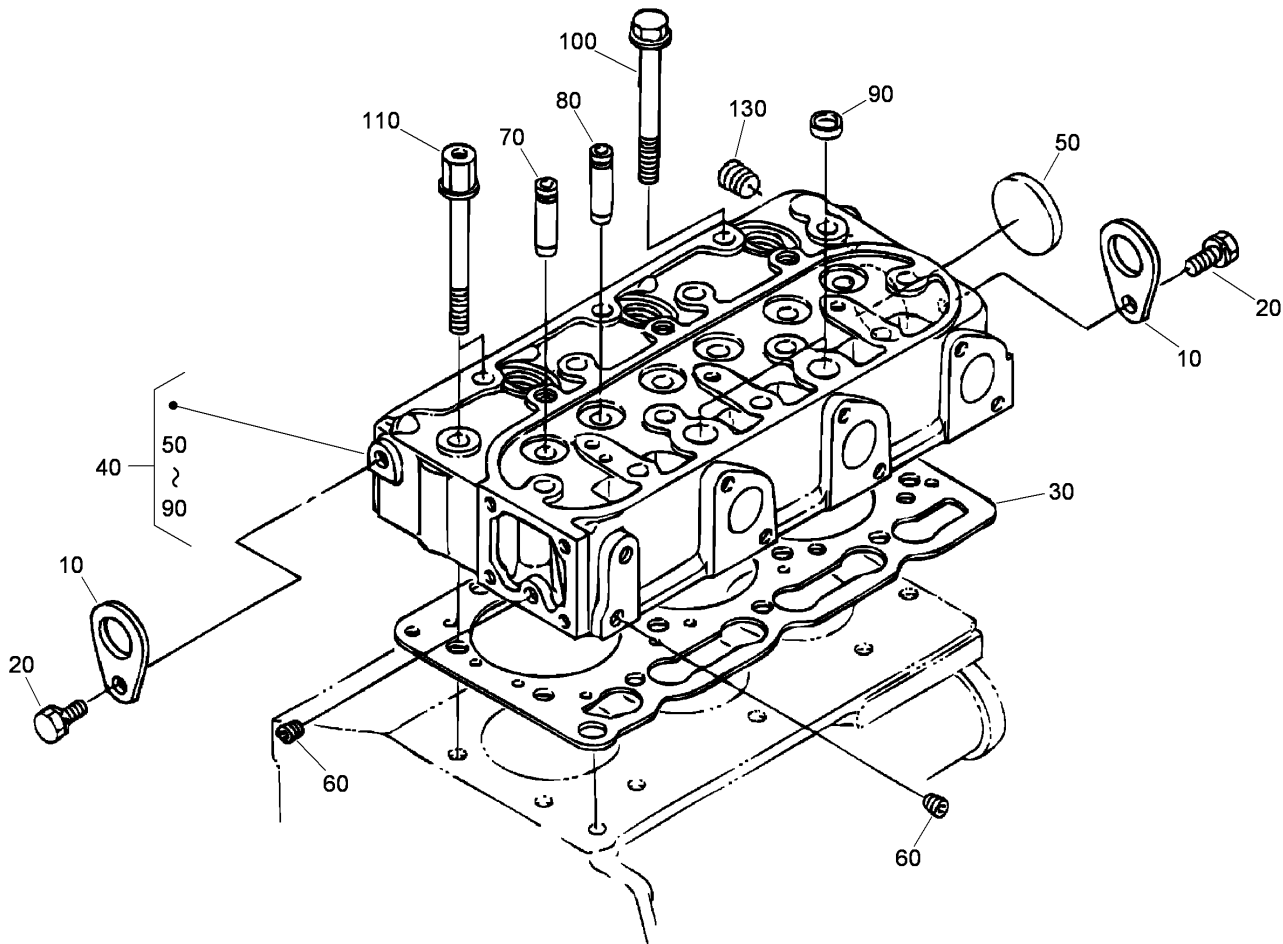

Cylinder Head Assembly


Ref	Part No.	Qty.	Description				
10	98-7531	2	Hook-Engine				
20	100-9195	2	Bolt				
30	108-6573	1	Gasket-Head, Cylinder				
40	108-6574	1	Cylinder Head ASM				
50	105-3705	1	Cap-Sealing				
60	98-7540	2	Plug				
70	107-9066	3	Guide-Valve, Inlet				
80	107-9067	3	Guide-Valve, Exhaust				
90	98-9389	2	Cap-Sealing				
100	98-9479	1	Bolt-Head, Cylinder				
110	98-9647	2	Bolt-Head, Cylinder				
130	98-9444	1	Plug				

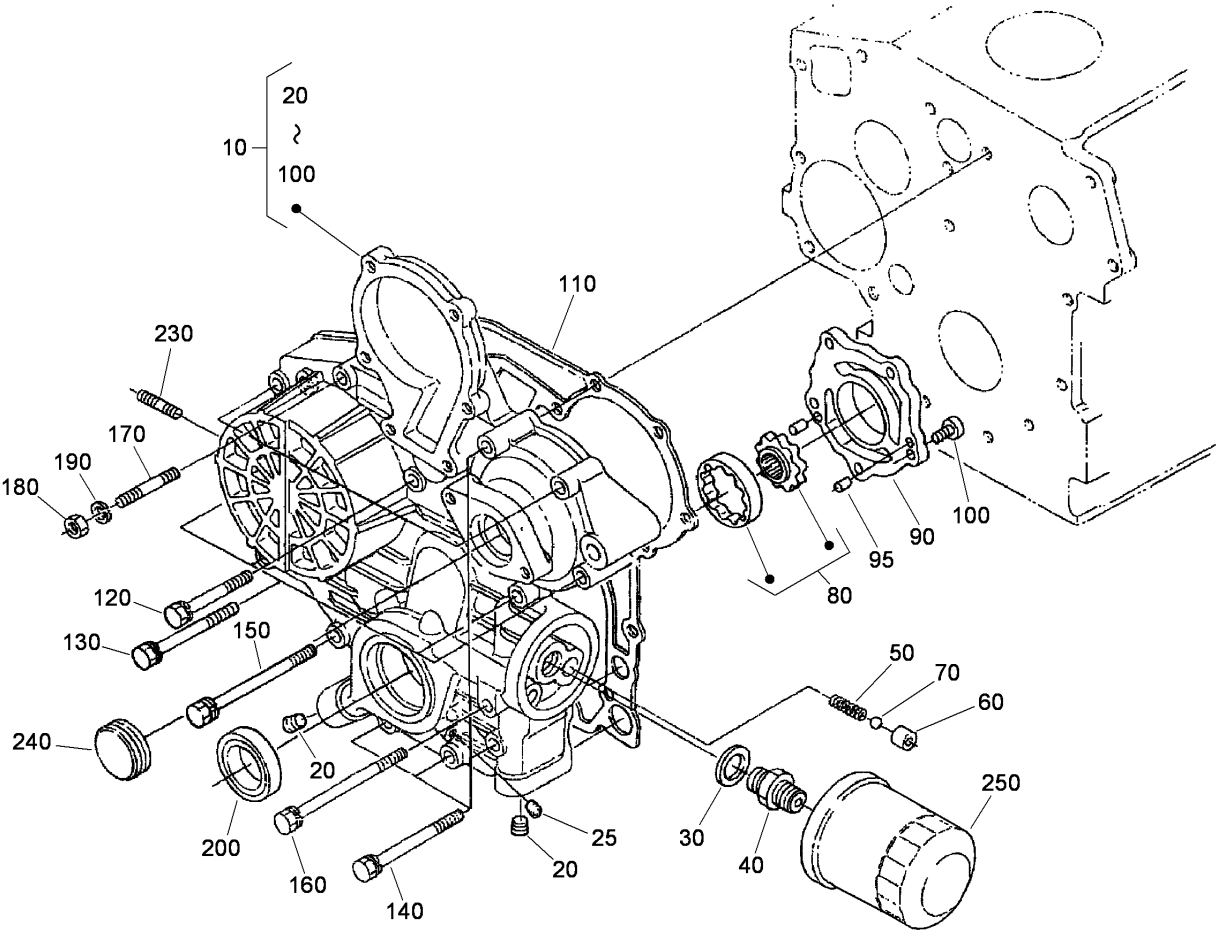

Gear Case Assembly


Ref	Part No.	Qty.	Description
10	107-9068	1	Gear Case ASM
20	98-9598	2	Plug
25	98-7487	1	Plug
30	98-7562	1	Washer-Plain
40	98-9388	1	Joint-Pipe
50	98-9544	1	Spring
60	98-9543	1	Seat-Valve
70	98-9380	1	Ball
80	98-9540	1	Oil Pump Rotor ASM
90	107-9069	1	Cover-Pump, Oil
95	107-9072	2	Pin-Straight
100	107-9071	5	Screw
110	98-9633	1	Gasket-Case, Gear
120	107-9073	3	Bolt
130	105-3797	4	Bolt
140	98-9356	2	Bolt
150	107-9074	1	Bolt
160	98-9586	2	Bolt
170	105-3709	1	Stud
180	98-7572	1	Nut
190	98-7699	1	Washer-Spring
200	98-9482	1	Seal-Oil
230	105-3710	2	Stud
240	98-9641	1	Cover

Ref	Part No.	Qty.	Description
250	108-3841	1	Filter-Oil

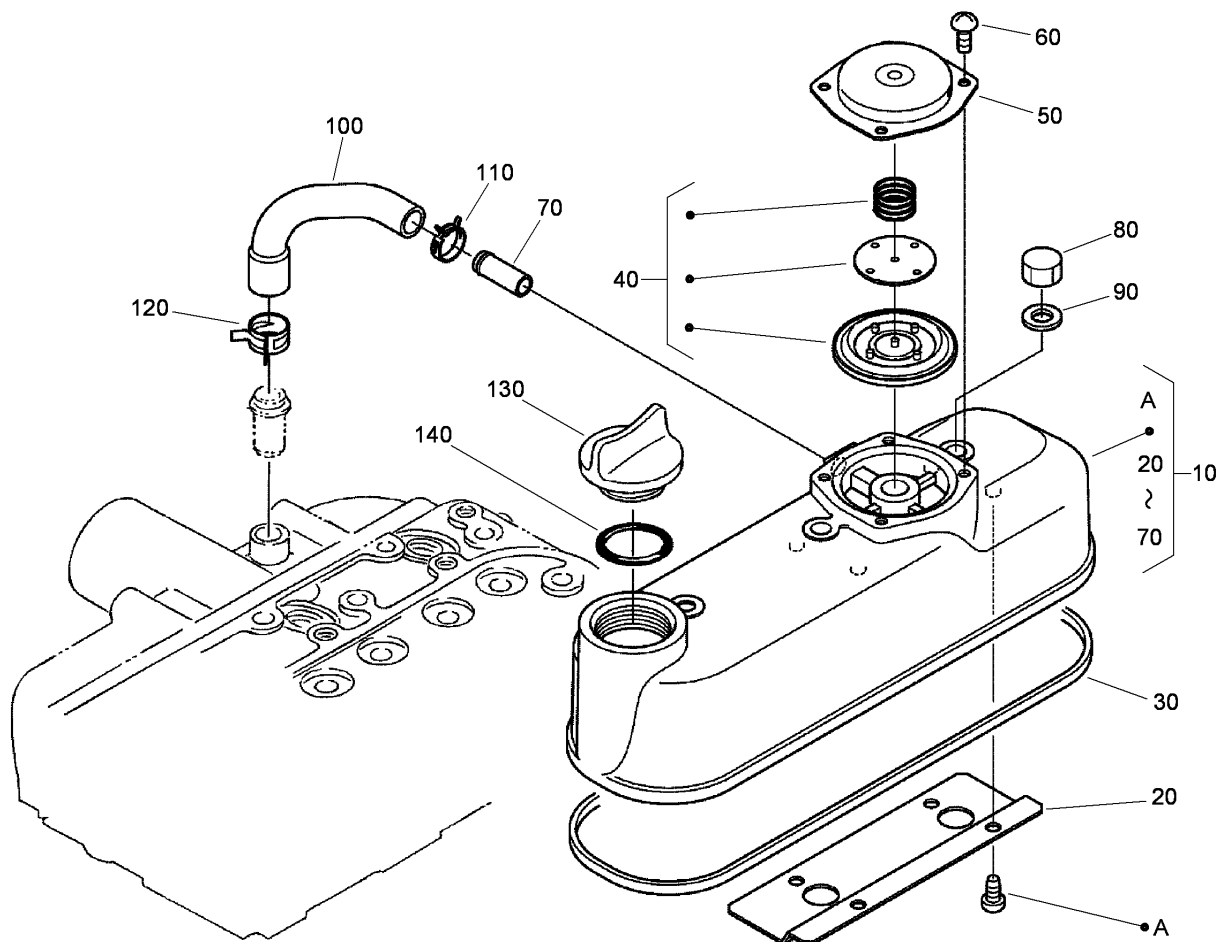


Head Cover Assembly

Ref	Part No.	Qty.	Description				
10	108-6575	1	Cylinder Head Cover ASM				
20	108-2857	1	Shield-Breather				
30	98-9615	1	Gasket-Cover, Head				
40	110-3715	1	Valve-Breather				
50	108-2862	1	Cover-Breather				
60	98-9364	4	Screw (With Washer)				
70	98-7766	1	Pipe-Return, Water				
80	98-9455	3	Nut-Cap				
90	98-9454	3	Gasket				
100	108-2858	1	Tube-Breather				
110	108-2859	1	Clamp-Hose				
120	108-2860	1	Clamp-Hose				
130	107-9075	1	Plug-Filler, Oil				
140	99-3446	1	O-Ring				

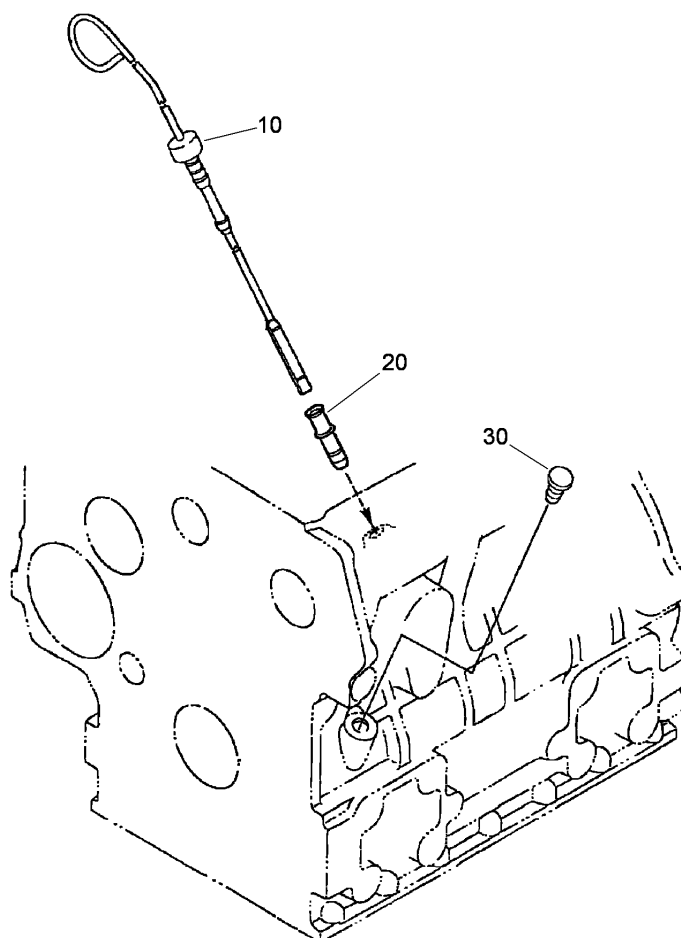


Dipstick and Guide Assembly

Ref	Part No.	Qty.	Description
10	107-9076	1	Gauge-Oil
20	105-4580	1	Guide
30	110-3720	1	Plug-Gauge, Oil

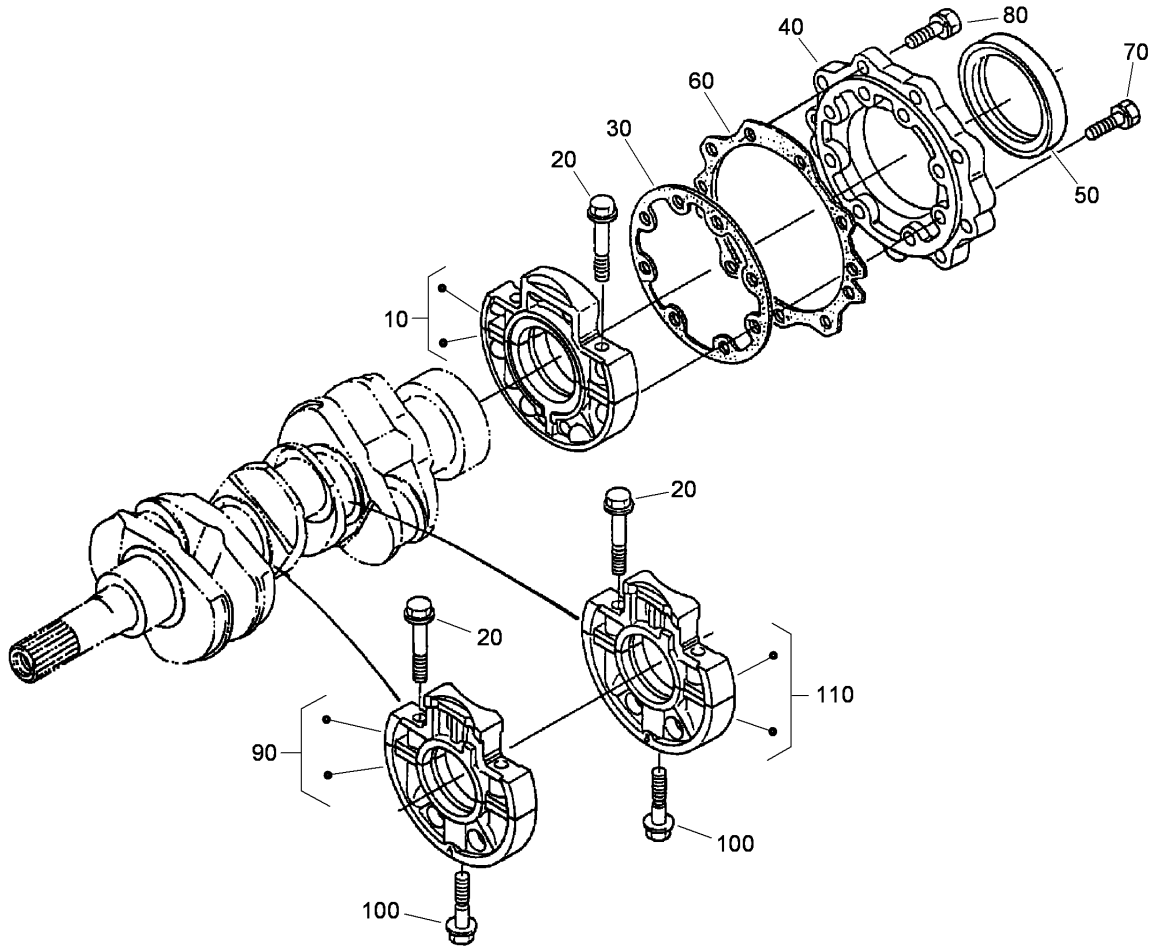


Main Bearing Case Assembly

Ref	Part No.	Qty.	Description				
10	98-9480	1	Main Bearing Case ASM				
20	98-9484	6	Bolt-Case, Bearing				
30	98-9634	1	Gasket-Case, Bearing				
40	98-9487	1	Cover-Case, Bearing				
50	112-0180	1	Seal-Oil				
60	98-9635	1	Gasket-Cover, Bearing Case				
70	98-9352	8	Bolt				
80	98-7568	9	Bolt				
90	98-9606	1	Main Bearing Case ASM				
100	98-9485	2	Bolt-Case, Bearing				
110	98-9607	1	Main Bearing Case ASM				

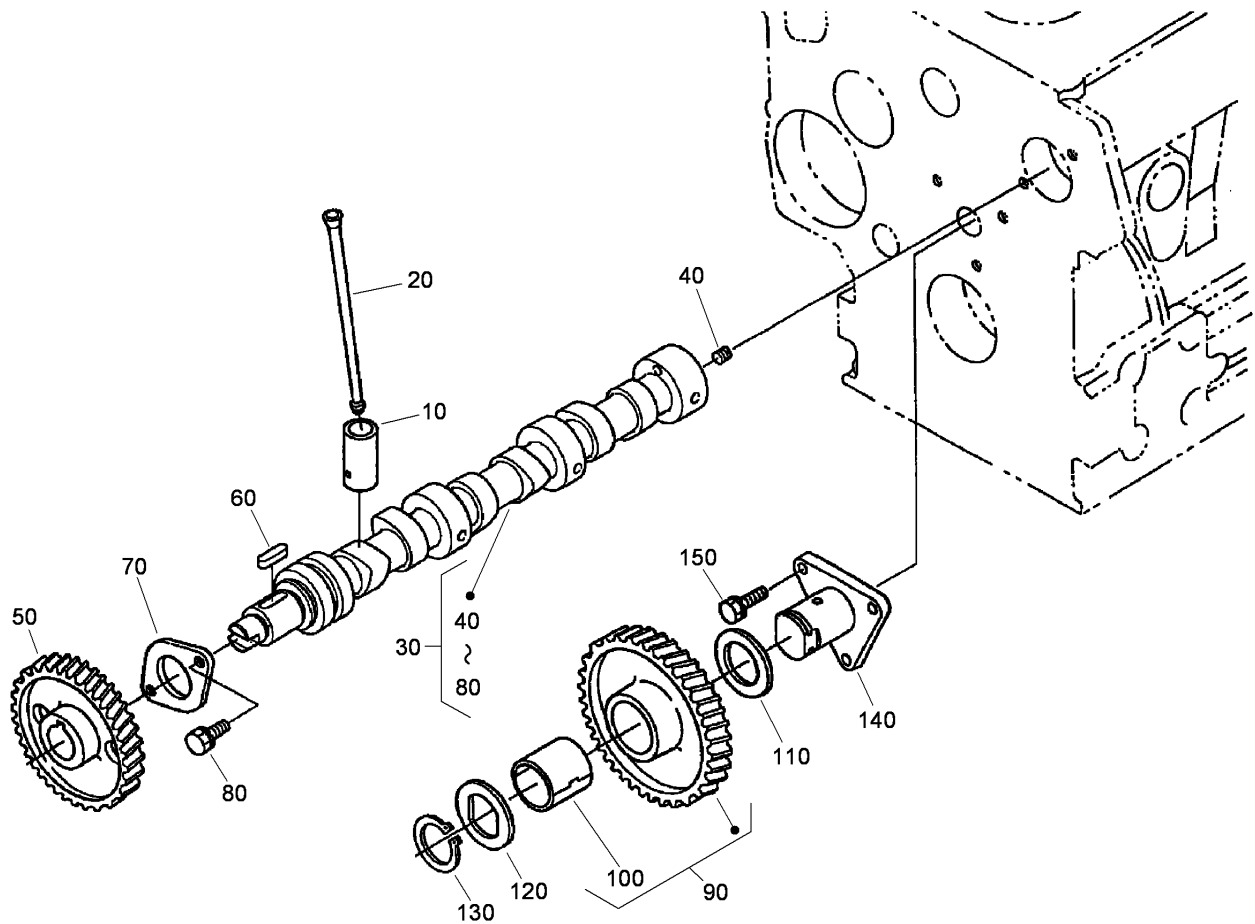

Camshaft and Idle Gear Shaft Assembly


Ref	Part No.	Qty.	Description				
10	112-0185	6	Tappet				
20	98-9509	6	Rod-Push				
30	108-6576	1	Camshaft ASM				
40	98-7449	1	Screw-Set				
50	98-9512	1	Gear-Cam				
60	98-9378	1	Key-Feather				
70	98-9510	1	Stopper-Camshaft				
80	98-7692	2	Bolt				
90	98-9649	1	Idle Gear ASM				
100	98-9650	1	Bushing-Gear, Idle				
110	98-9535	1	Collar-Gear, Idle				
120	98-9536	1	Collar-Gear, Idle				
130	98-9534	1	Clip-Circular, Idle Gear				
140	98-9533	1	Shaft-Gear, Idle				
150	98-7692	3	Bolt				

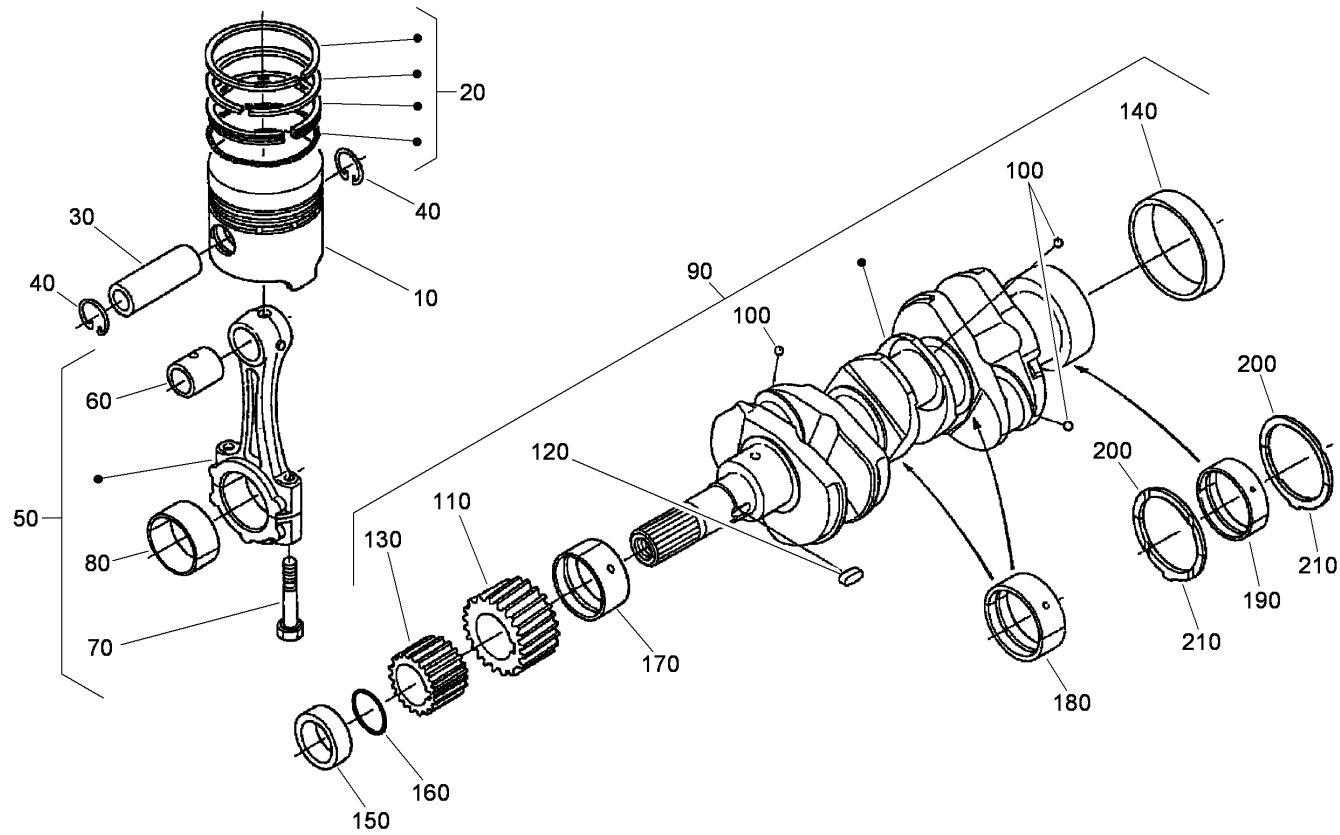

Piston and Crankshaft Assembly


Ref	Part No.	Qty.	Description
10	112-8415	3	Piston ASM
10	112-8404	3	Piston
20	98-9551	3	Piston Ring ASM (STD)
20	108-1404	3	Piston Ring ASM (0.5Mm)
30	98-9513	3	Pin-Piston
40	98-9514	6	Clip-Circular, Piston Pin
50	98-9516	3	Connecting Rod ASM
60	98-9515	3	Bushing-Pin, Piston
70	98-9517	6	Bolt-Rod, Connecting
80	98-9520	3	Bearing-Rod (0.4Mm)
80	98-9519	3	Bearing-Rod (0.2Mm)
80	98-9518	3	Metal-Crankpin (STD)
90	98-9642	1	Crankshaft ASM
100	110-3729	3	Ball
110	98-9532	1	Gear-Crankshaft
120	98-9666	1	Key
130	98-9542	1	Gear-Drive, Oil Pump
140	98-9522	1	Sleeve-Crankshaft
150	98-9521	1	Collar-Crankshaft
160	105-3783	1	O-Ring
170	98-9523	1	Metal Crankshaft (STD)
170	98-9528	1	Bearing-Main (0.2Mm)
170	98-9529	1	Bearing-Main (0.4Mm)
180	98-9524	2	Metal-Crankshaft (STD Set)

Ref	Part No.	Qty.	Description
180	98-9530	2	Bearing-Main (0.2Mm)
180	98-9531	2	Bearing-Main (0.4Mm)
190	112-7006	1	Bearing-Main (STD)
190	112-7007	1	Metal-Crankshaft (.2Mm)
190	112-7008	1	Metal-Crankshaft (.4Mm)
200	98-9413	2	Bearing-Thrust (STD)
200	98-9414	2	Bearing-Thrust (0.2Mm)
200	98-9415	2	Bearing-Thrust (0.4Mm)
210	98-9688	2	Bearing-Thrust (STD)
210	98-9689	2	Bearing-Thrust (0.2Mm)
210	98-9690	2	Bearing-Thrust (0.4Mm)

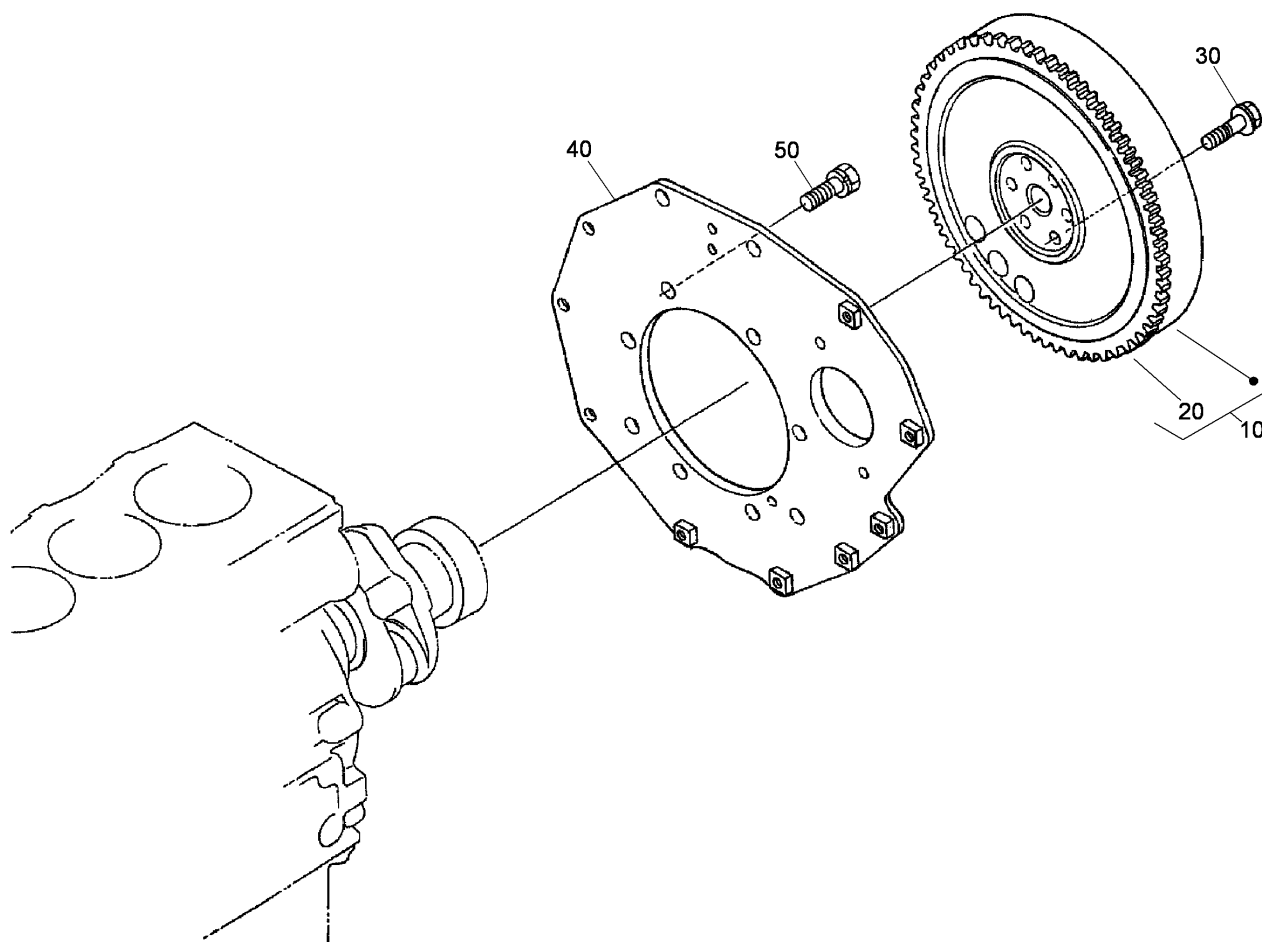


Flywheel Assembly

Ref	Part No.	Qty.	Description
10	105-3784	1	Flywheel ASM
20	105-3722	1	Gear-Ring
30	98-9537	6	Bolt-Flywheel
40	98-9486	1	Plate-End, Rear
50	98-9392	8	Bolt

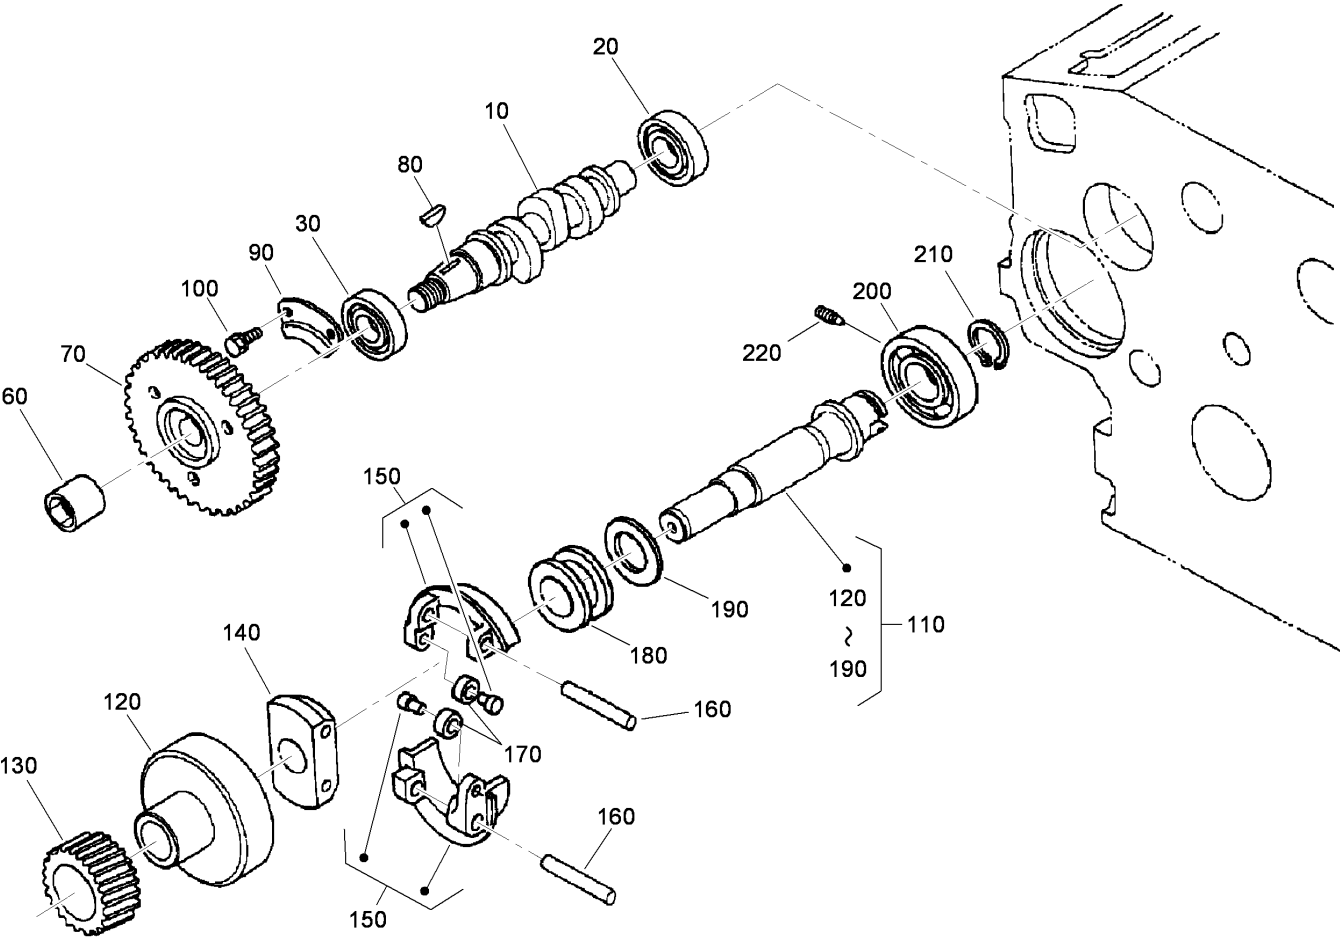


Fuel Camshaft and Governor Shaft Assembly

Ref	Part No.	Qty.	Description				
10	98-9459	1	Camshaft-Fuel				
20	107-9077	1	Bearing-Ball				
30	107-9078	1	Bearing-Ball				
60	98-9590	1	Nut-Cap				
70	98-9669	1	Gear-Pump, Injection				
80	98-9595	1	Key-Woodruff				
90	98-9511	1	Stopper-Fuel, Camshaft				
100	98-7692	2	Bolt				
110	98-9644	1	Governor Shaft ASM				
120	98-9562	1	Holder-Gear, Governor				
130	98-9673	1	Gear-Governor				
140	98-9561	1	Holder-Weight, Governor				
150	98-9559	2	Governor Weight ASM				
160	98-9560	2	Shaft-Weight, Governor				
170	98-9692	2	Roller				
180	98-9563	1	Sleeve-Governor				
190	98-9564	1	Washer-Thrust				
200	107-9079	1	Bearing-Ball				
210	98-9657	1	Clip-Circular, Governor Shaft				
220	98-9565	1	Screw-Set				

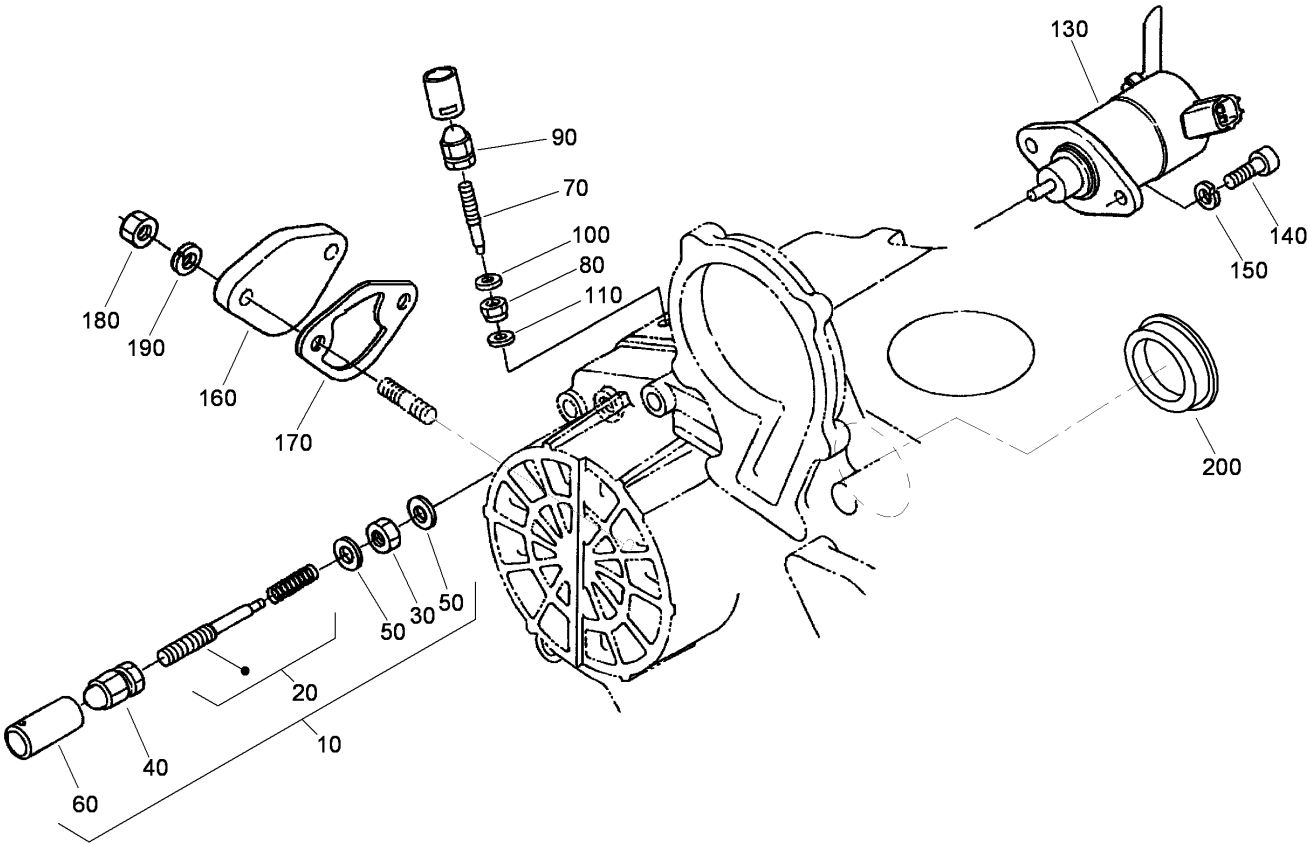


Idle Apparatus Assembly

Ref	Part No.	Qty.	Description				
10	98-9678	1	Idle Apparatus ASM				
20	112-7014	1	Adjusting Bolt ASM				
30	98-9439	1	Nut				
40	112-0181	1	Nut				
50	98-7654	2	Gasket				
60	98-7656	1	Cap				
70	112-7015	1	Bolt-Adjusting				
80	100-2175	1	Nut-Lock				
90	112-0181	1	Nut				
100	98-7654	1	Gasket				
110	107-9081	1	Gasket				
130	104-5155	1	Solenoid-Stop				
140	105-3799	2	Bolt-HSH				
150	98-7699	2	Washer-Spring				
160	99-3514	1	Cover				
170	98-9636	1	Gasket-Pump, Fuel				
180	98-7572	2	Nut				
190	98-7699	2	Washer-Spring				
200	112-7016	1	Cover-Pump				

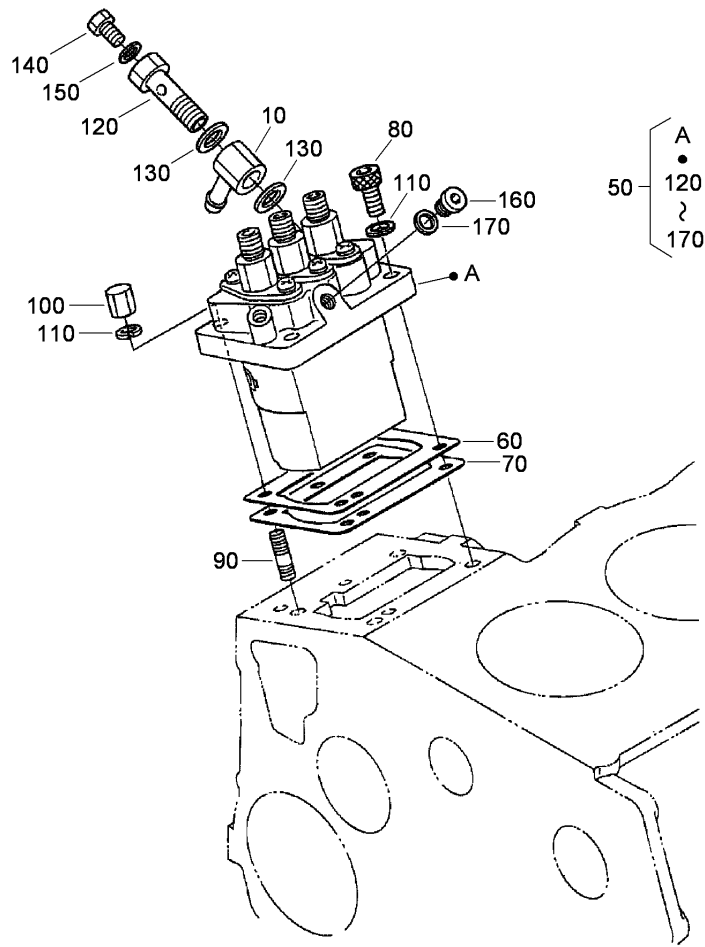


Injection Pump Assembly

Ref	Part No.	Qty.	Description				
10	98-9596	1	Joint-Eye				
50	98-9643	1	Injection Pump ASM				
60	98-9457	1	Shim-Injection (0.25Mm)				
60	98-9456	1	Shim (0.2Mm)				
70	98-9458	1	Shim-Injection (0.30Mm)				
80	98-9361	2	Bolt-HSH				
90	98-9438	2	Stud				
100	98-9440	2	Nut-Cap				
110	98-7699	4	Washer-Spring				
120	98-9464	1	Bolt-Joint				
130	98-9445	2	Gasket				
140	98-9430	1	Screw				
150	98-9446	1	Gasket				
160	98-9466	1	Plug				
170	98-9451	1	Gasket				

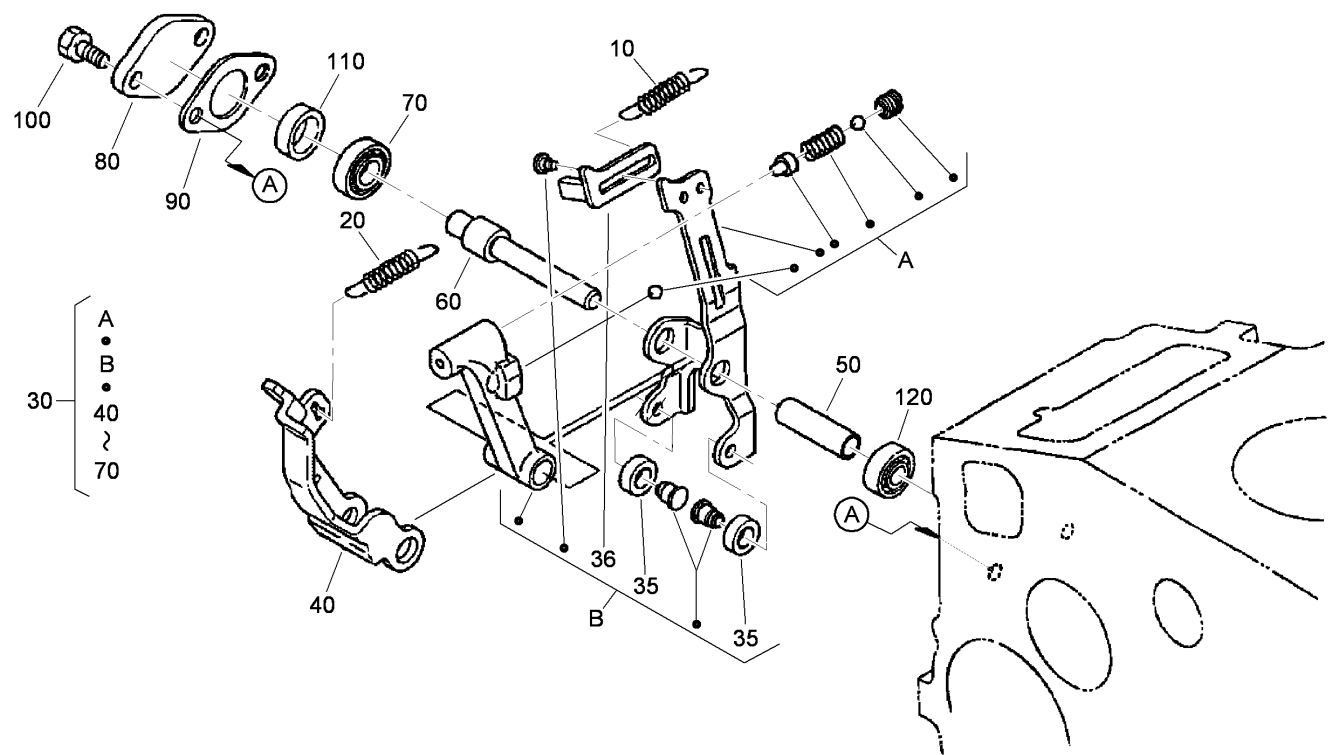


Governor Assembly

Ref	Part No.	Qty.	Description				
10	105-3786	1	Spring-Start				
20	98-9681	1	Spring-Governor				
30	107-9082	1	Fork Lever ASM				
35	98-9692	2	Roller				
36	107-9083	1	Lever-Thrust				
40	107-9084	1	Lever-Fork				
50	107-9085	1	Shaft-Lever, Fork				
60	107-9086	1	Shaft-Lever, Fork				
70	98-9570	1	Bearing-Miniaturize				
80	98-9569	1	Cover-Shaft, Fork Lever				
90	98-9682	1	Gasket				
100	98-9351	2	Bolt				
110	98-9567	1	Collar				
120	98-9571	1	Bearing-Miniaturize				

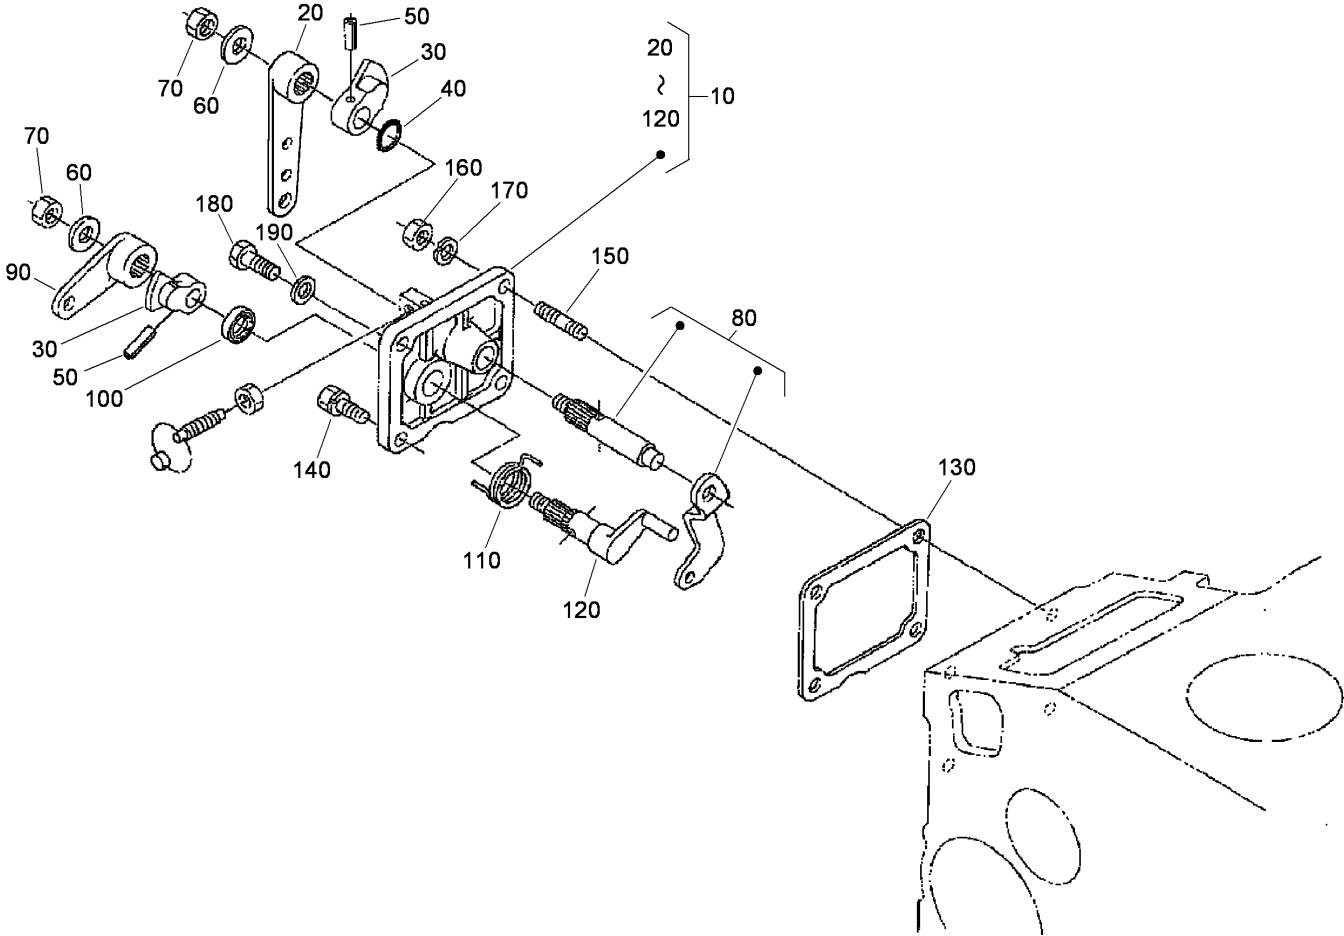


Speed Control Plate Assembly

Ref	Part No.	Qty.	Description				
10	105-3735	1	Control Plate ASM				
20	98-9662	1	Lever-Control, Speed				
30	98-9572	2	Lever-Control, Speed				
40	105-3788	1	O-Ring				
50	98-7602	2	Pin-Spring				
60	98-9594	2	Washer-Plain				
70	98-9589	2	Nut				
80	98-9658	1	Governor Lever ASM				
90	98-9663	1	Lever-Stop, Engine				
100	98-7601	1	Seal-Oil				
110	98-9472	1	Spring-Return				
120	98-9664	1	Shaft-Lever, Stop				
130	98-9637	1	Gasket				
140	98-7692	1	Bolt				
150	105-3710	2	Stud				
160	98-7572	2	Nut				
170	98-7699	2	Washer-Spring				
180	99-8348	1	Bolt				
190	98-7654	2	Gasket				

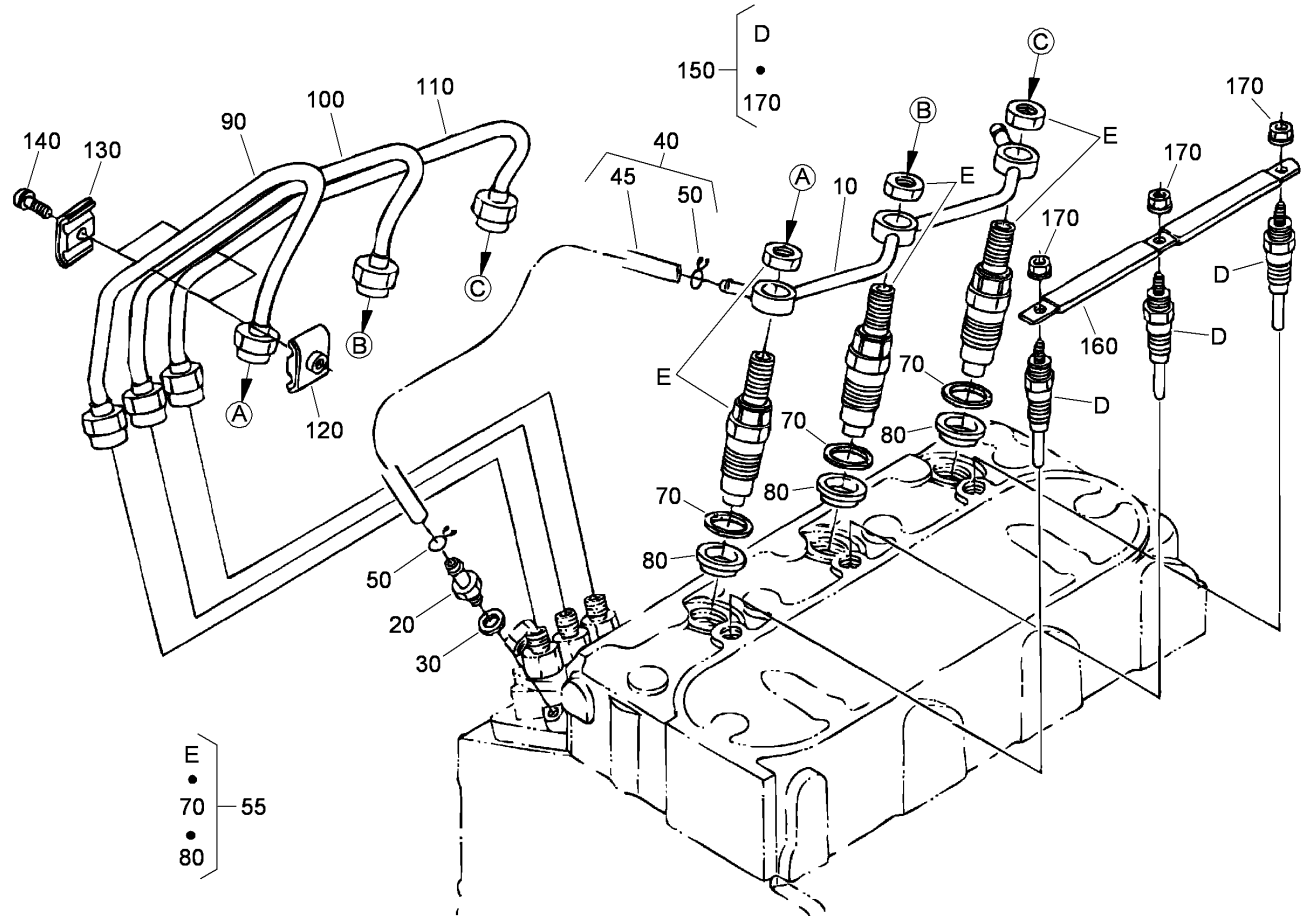


Nozzle Holder and Glow Plug Assembly

Ref	Part No.	Qty.	Description				
10	98-9620	1	Over Flow Pipe ASM				
20	98-9431	1	Screw-Bleeder				
30	98-7654	1	Gasket				
40	98-9420	1	Over Flow Pipe ASM				
45	112-0182	1	Pipe-Over Flow				
50	98-7671	2	Clip-Pipe				
55	108-2866	3	Nozzle Holder Kit				
70	98-7676	3	Gasket				
80	98-7677	3	Seal-Heat				
90	98-9653	1	Pipe-Injection				
100	98-9654	1	Pipe-Injection				
110	98-9655	1	Pipe-Injection				
120	98-7682	2	Clamp-Pipe				
130	98-7683	2	Clamp-Pipe				
140	98-7684	2	Screw (W/Washer)				
150	98-9695	3	Plug-Glow				
160	98-9631	1	Cord-Plug, Glow				
170	99-8377	3	Nut-Flange				

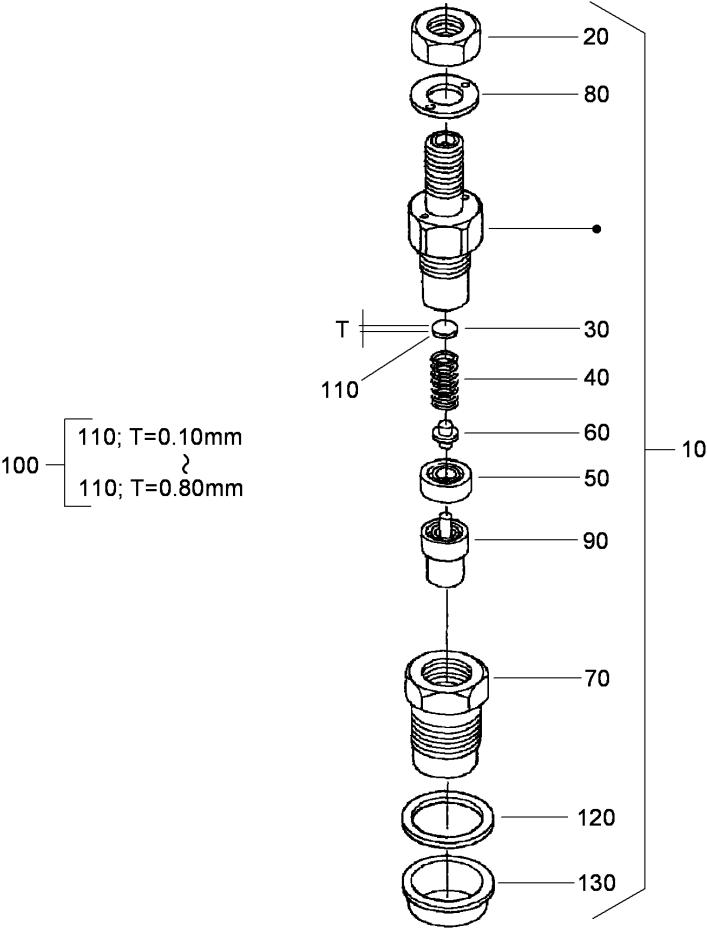


Nozzle Holder Assembly

Ref	Part No.	Qty.	Description				
10	108-2866	3	Nozzle Holder Kit				
20	99-8301	3	Nut				
30	99-8302	3	Washer-Adjusting				
40	99-8303	3	Spring-Nozzle				
50	99-8304	3	Spacer-Distance				
60	99-8305	3	Rod-Push				
70	99-8306	3	Nut-Nozzle				
80	99-8307	3	Washer-Plain				
90	107-7826	3	Piece-Nozzle				
100	99-8309	3	Adjusting Washer ASM				
110	99-8310	3	Washer-Adjust (0.10Mm)				
110	99-8311	3	Washer-Adjust (0.20Mm)				
110	99-8312	3	Washer-Adjust (0.30Mm)				
110	99-8313	3	Washer-Adjust (0.40Mm)				
110	99-8314	3	Washer-Adjust (0.50Mm)				
110	99-8315	3	Washer-Adjust (0.52Mm)				
110	99-8316	3	Washer-Adjust (0.54Mm)				
110	99-8317	3	Washer-Adjust (0.56Mm)				
110	99-8318	3	Washer-Adjust (0.58Mm)				
110	99-8319	3	Washer-Adjust (0.80Mm)				
120	98-7676	3	Gasket				
130	98-7677	3	Seal-Heat				

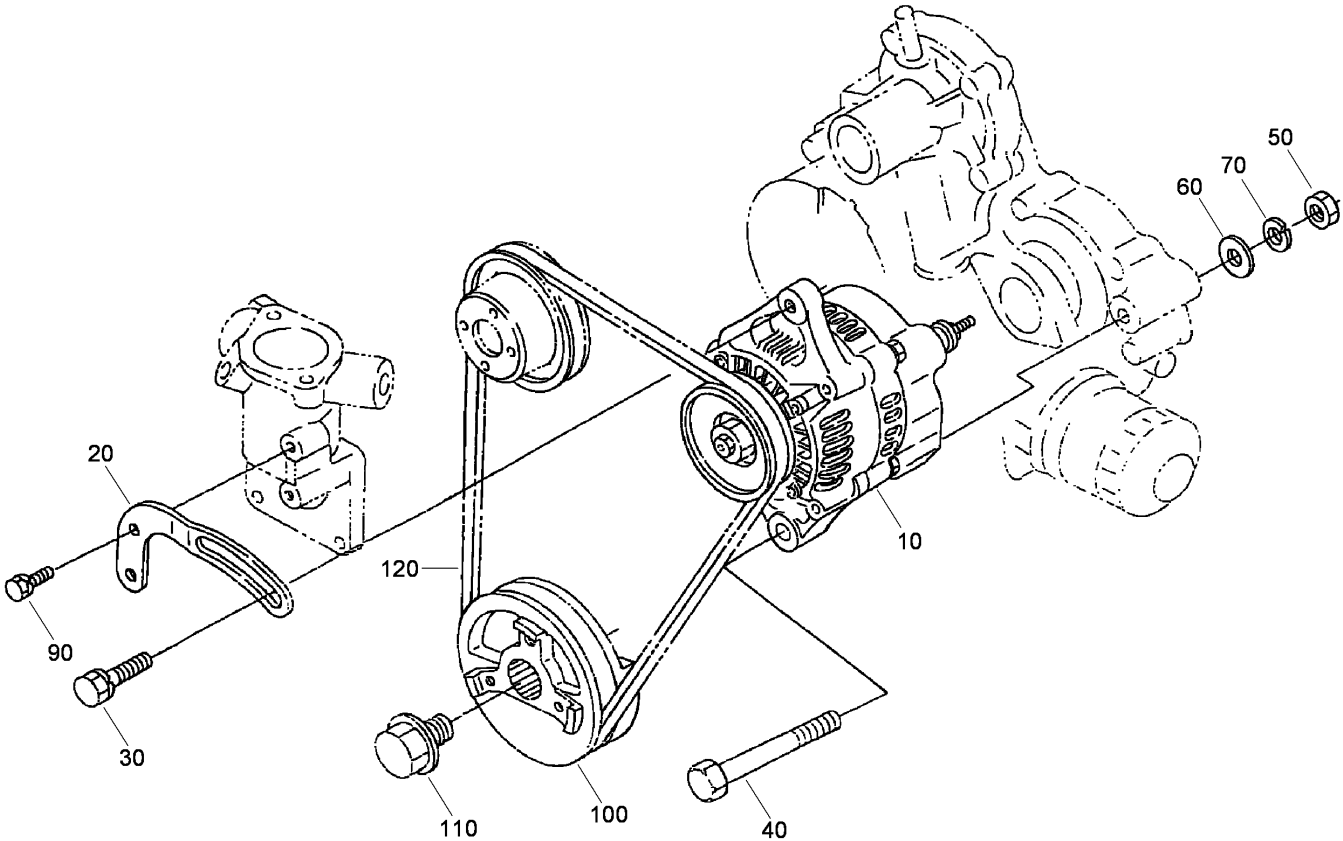

Alternator and Pulley Assembly


Ref	Part No.	Qty.	Description				
10	98-9474	1	Alternator ASM				
20	98-9573	1	Stay-Dynamo				
30	108-7088	1	Bolt				
40	98-9360	1	Bolt				
50	98-7737	1	Nut				
60	98-9366	1	Washer-Plain				
70	98-7738	1	Washer-Spring				
90	98-7692	1	Bolt				
100	98-9473	1	Pulley-Drive, Fan				
110	98-9585	1	Bolt				
120	98-9676	1	V-Belt				

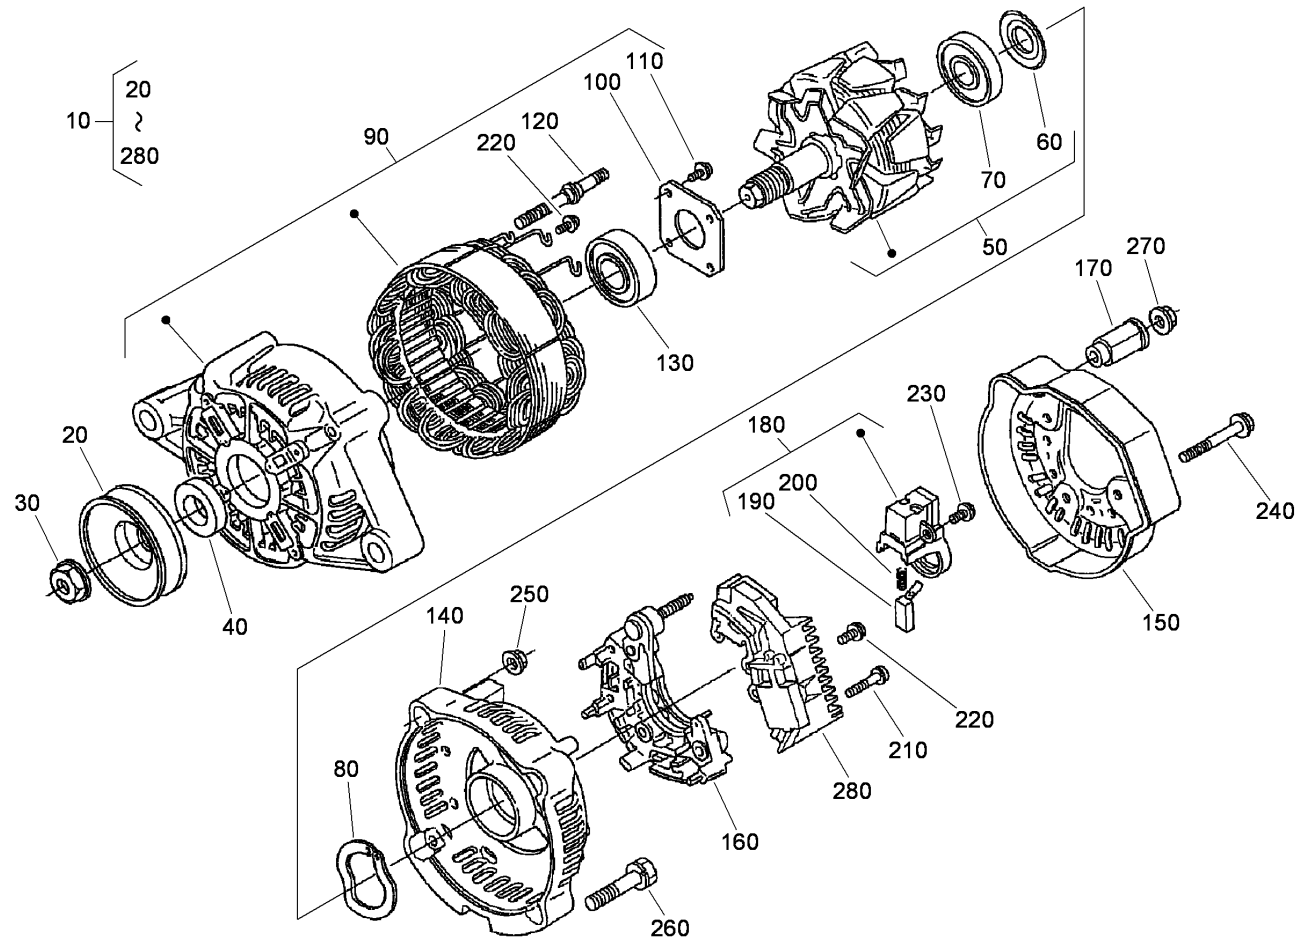

Alternator Components


Ref	Part No.	Qty.	Description
10	98-9474	1	Alternator ASM
20	98-9453	1	Pulley-Dynamo
30	98-7708	1	Nut
40	98-7709	1	Collar
50	107-0136	1	Rotor
60	98-7711	1	Cover-Bearing
70	107-0138	1	Bearing-Ball
80	98-7713	1	Washer-Thrust
90	107-0139	1	Drive End Frame ASM
100	98-7715	1	Plate-Retainer
110	98-7716	4	Screw-Head, Round
120	98-7717	2	Bolt-Through
130	107-0137	1	Bearing-Ball
140	107-9087	1	Frame-End
150	107-0140	1	Cover-End
160	98-7721	1	Rectifier ASM
170	98-7722	1	Bushing-Insulation
180	107-0141	1	Holder-Brush
190	98-7724	2	Brush
200	98-7725	2	Spring-Brush
210	98-7726	2	Screw-Head, Round
220	98-7727	6	Screw-Head, Round
230	98-7728	1	Screw-Head, Round
240	98-7729	3	Bolt

Ref	Part No.	Qty.	Description
250	98-7730	2	Nut
260	98-7731	2	Bolt
270	98-7732	1	Nut
280	110-3799	1	Regulator ASM

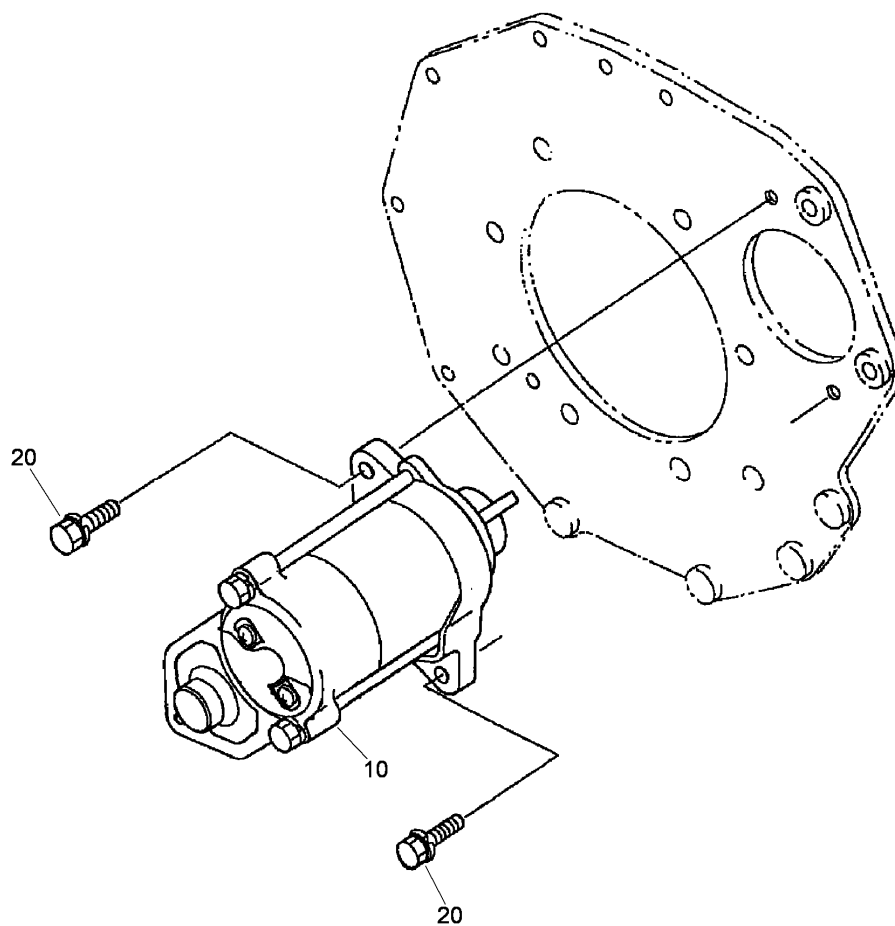

Starter Assembly


Ref	Part No.	Qty.	Description
10	98-9705	1	Starter ASM
20	98-7697	2	Bolt

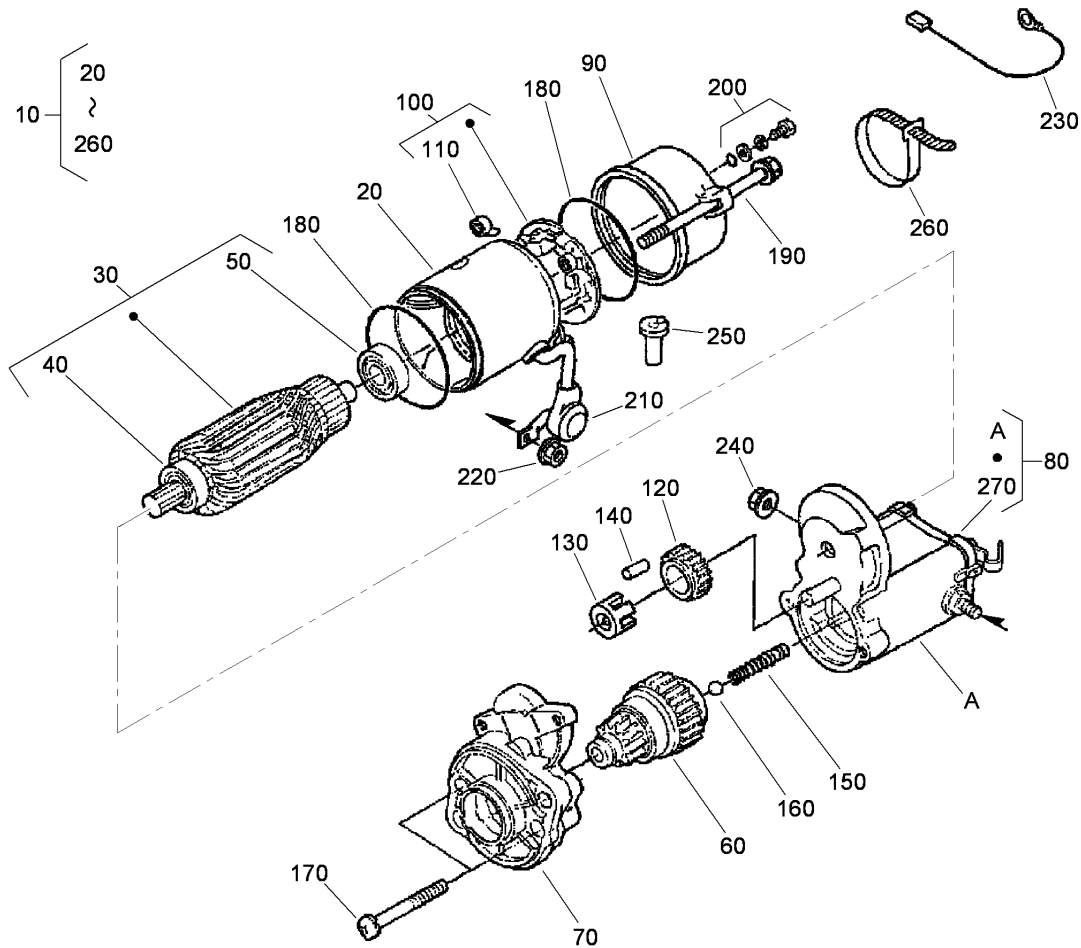

Starter Assembly No. 98-9705


Ref	Part No.	Qty.	Description
10	98-9705	1	Starter ASM
20	104-8608	1	Yoke ASM
30	98-7742	1	Armature ASM
40	98-7744	1	Bearing
50	98-7743	1	Bearing
60	99-8373	1	Clutch-Running, Over
70	99-8374	1	Frame-End, Drive
80	105-3746	1	Magnetic Switch ASM
90	98-7748	1	Frame-End
100	98-7749	1	Brush Holder ASM
110	98-7750	4	Spring-Brush
120	98-7751	1	Gear
130	98-7752	1	Retainer
140	98-7753	5	Roller
150	98-7754	1	Spring
160	98-7755	1	Ball
170	98-7756	2	Bolt
180	98-7757	2	O-Ring
190	100-9240	2	Bolt
200	98-7758	2	Bolt ASM
210	99-8375	1	Cover
220	99-8371	1	Nut-Hex
230	98-9711	1	Cord-Solenoid, Stop
240	99-8376	1	Nut-Hex

Ref	Part No.	Qty.	Description
250	98-7759	1	Pipe-Drain
260	98-9712	1	Band-Cover
270	105-2886	1	Cover ASM

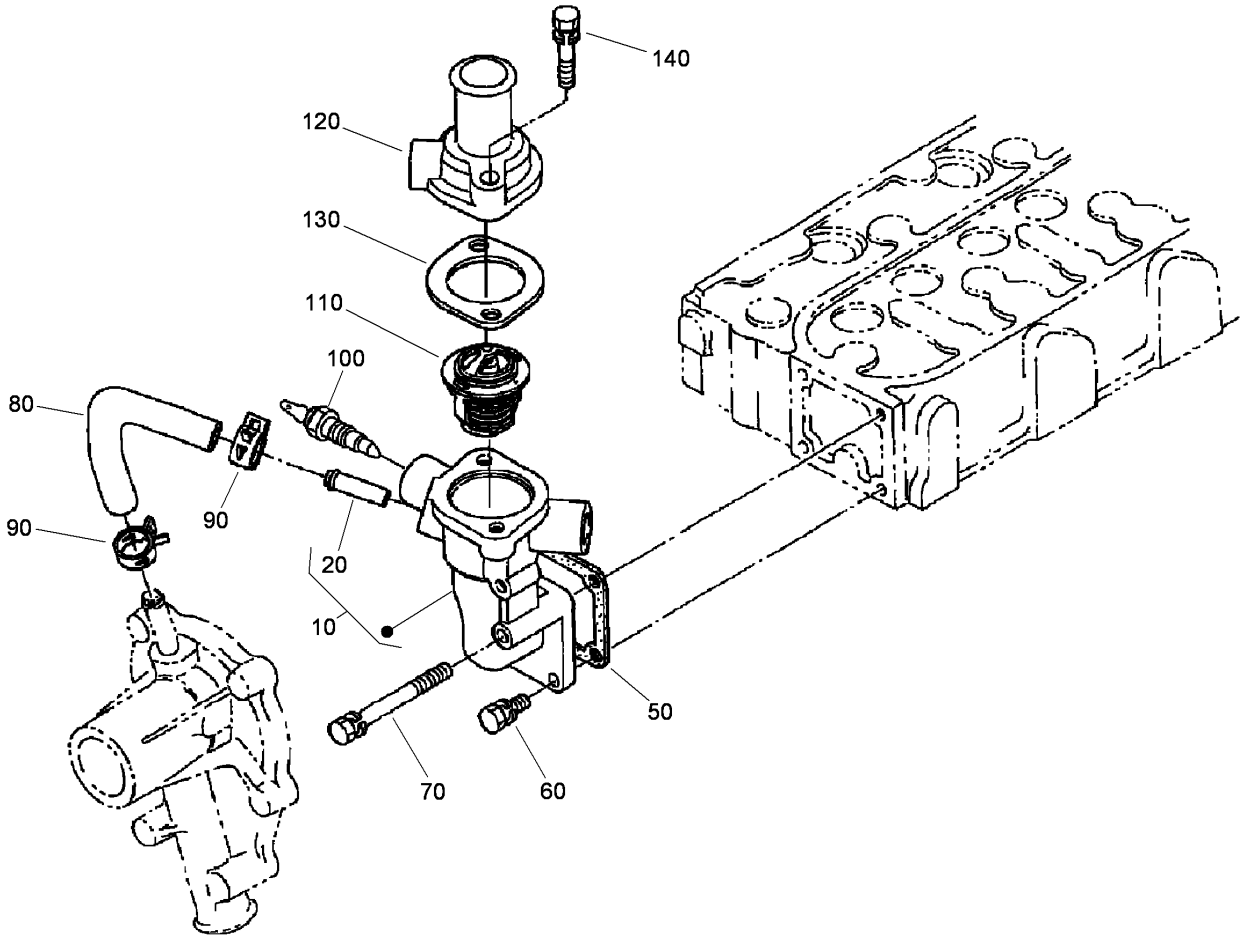


Water Flange and Thermostat Assembly

Ref	Part No.	Qty.	Description				
10	98-9713	1	Water Flange ASM				
20	98-9580	1	Pipe-Return, Water				
50	98-9638	1	Gasket-Flange, Water				
60	98-7692	3	Bolt				
70	98-9356	1	Bolt				
80	98-9578	1	Pipe-Return, Water				
90	98-9579	2	Band-Pipe				
100	112-0183	1	Switch-Thermometer				
110	98-7778	1	Thermostat ASM				
120	98-9471	1	Cover-Thermostat				
130	105-3748	1	Gasket-Thermostat				
140	98-7777	2	Bolt				

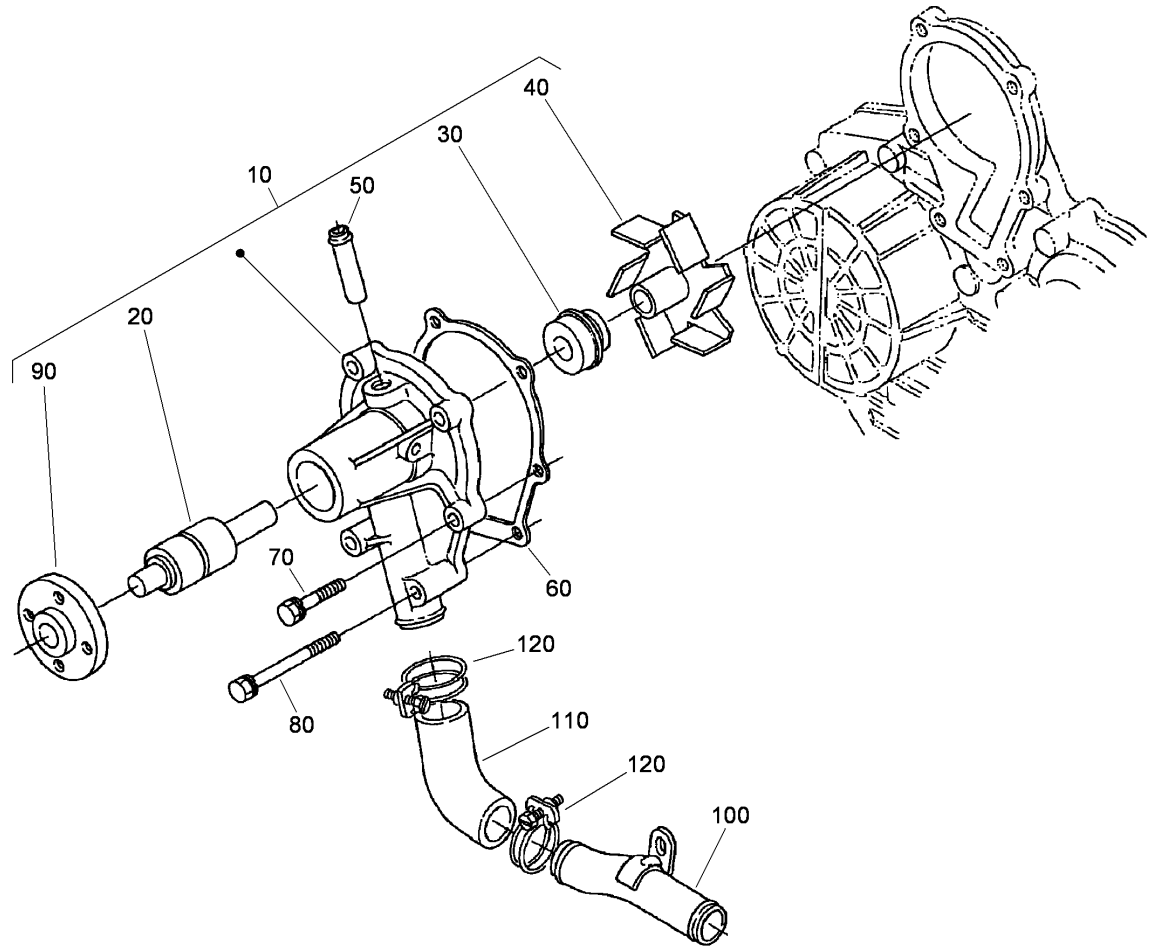


Water Pump Assembly

Ref	Part No.	Qty.	Description				
10	107-9089	1	Water Pump ASM				
20	99-3517	1	Bearing-Pump, Water				
30	105-3750	1	Mechanical Seal ASM				
40	112-7017	1	Impeller-Pump, Water				
50	100-1932	1	Pipe-Return, Water				
60	99-3454	1	Gasket-Pump, Water				
70	98-9353	4	Bolt				
80	107-9090	2	Bolt				
90	99-3516	4	Flange-Pump, Water				
100	98-9716	1	Pipe-Water				
110	107-9091	1	Pipe-Water				
120	98-9717	2	Clamp				

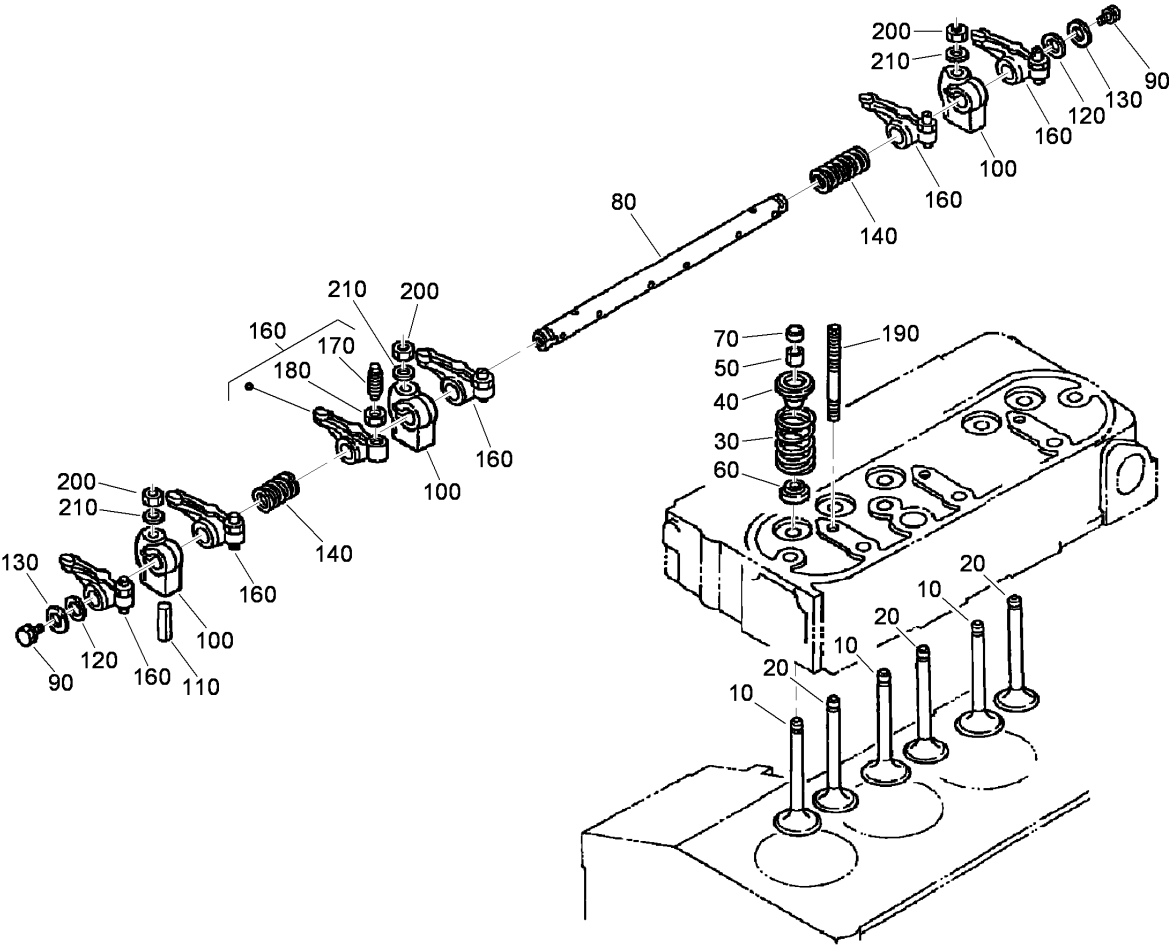


Valve and Rocker Arm Assembly

Ref	Part No.	Qty.	Description				
10	112-7018	3	Valve-Inlet				
20	112-7021	3	Valve-Exhaust				
30	98-9648	6	Spring-Valve				
40	107-9092	6	Retainer-Spring				
50	98-9390	6	Collet-Set, Valve Spring				
60	99-8385	6	Seat-Stem, Valve				
70	98-9497	6	Cap-Valve				
80	105-3790	1	R-Arm Shaft ASM				
90	100-9265	2	Bolt				
100	98-9505	3	Bracket-Arm, Rocker				
110	105-3758	1	Pin-Spring				
120	98-9507	2	Washer-Shaft, R-Arm				
130	110-3832	2	Washer-Plain				
140	98-9504	2	Spring-Arm, Rocker				
160	112-7020	6	Rocker Arm ASM				
170	98-9502	6	Screw-Adjusting				
180	98-9503	6	Nut				
190	98-9506	3	Stud				
200	98-9393	3	Nut				
210	98-9385	3	Washer-Flat				

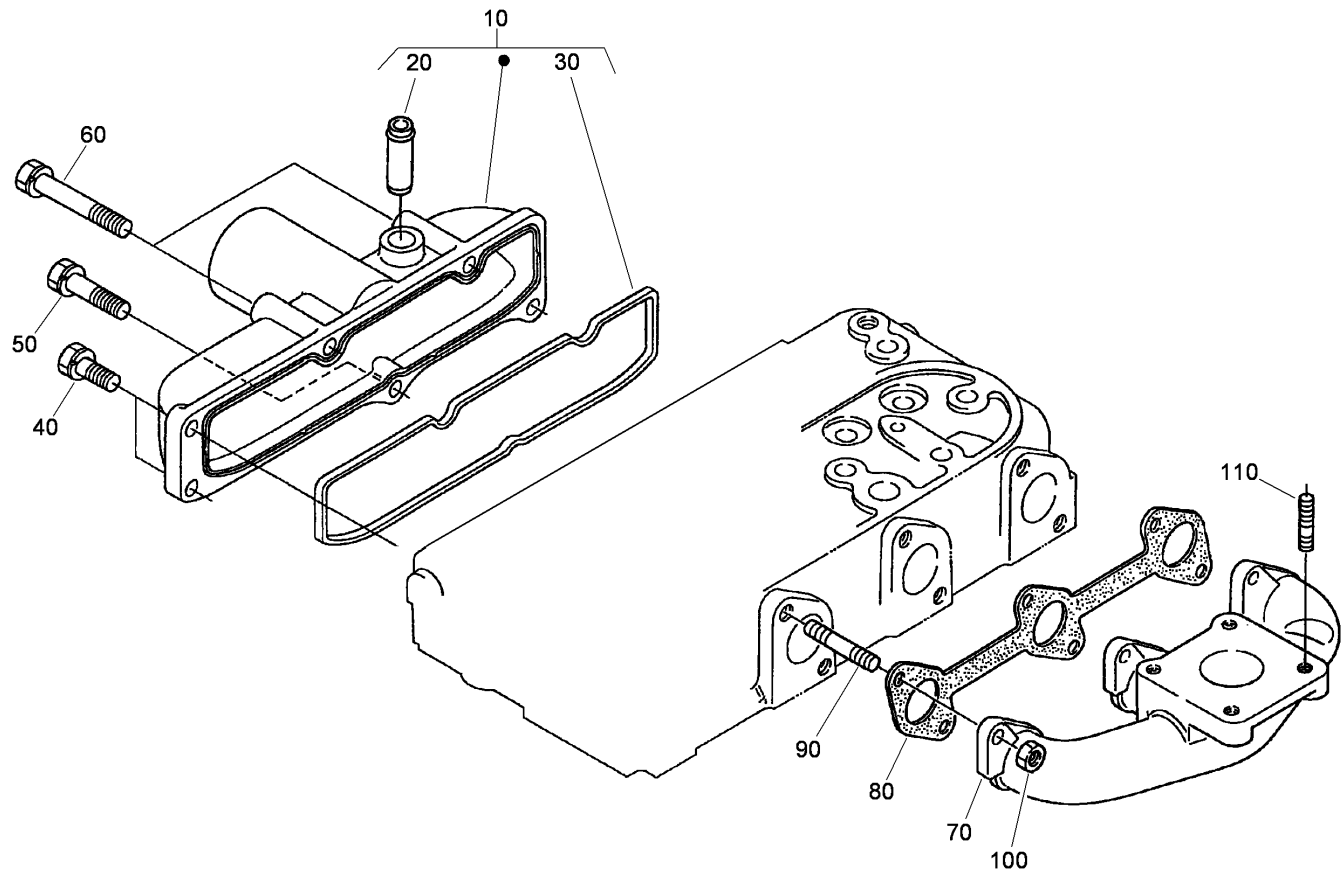


Inlet Manifold Assembly

Ref	Part No.	Qty.	Description				
10	108-6577	1	Inlet Manifold ASM				
20	98-9492	1	Joint-Pipe, Breather				
30	98-9609	1	Gasket				
40	98-7605	3	Bolt				
50	98-9353	1	Bolt				
60	105-3797	2	Bolt				
70	107-9093	1	Manifold-Exhaust				
80	99-8327	1	Gasket-Manifold, Exhaust				
90	98-9588	6	Stud				
100	98-9665	6	Nut				
110	98-7769	4	Stud				

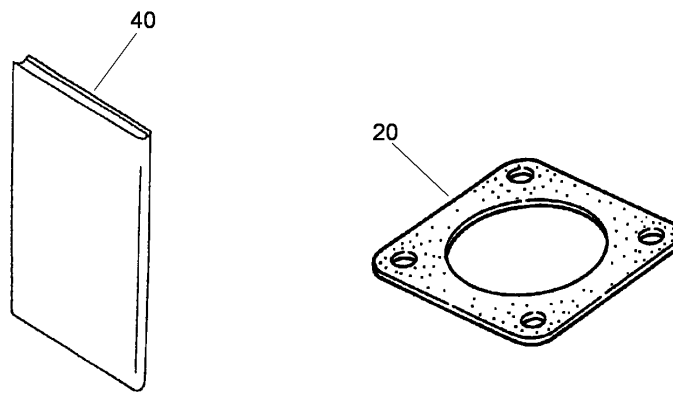

Muffler Gasket and Operator Manual

Ref	Part No.	Qty.	Description
20	99-8343	1	Gasket-Muffler
40	107-7827	1	Manual-Operator, Kubota

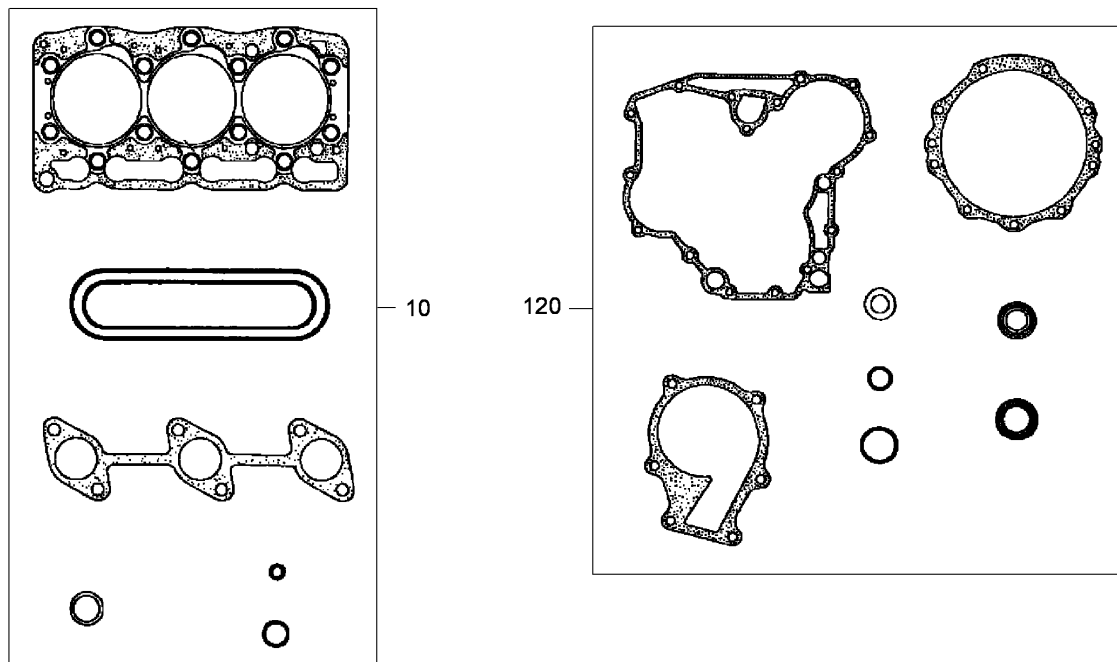

Upper and Lower Gasket Kits

Ref	Part No.	Qty.	Description
10	107-7848	1	Upper Gasket Kit
120	107-9095	1	Lower Gasket Kit

Attachments and Accessories

For 30462 - Groundsmaster 7200 Traction Unit with 62in Rotary Mower

Product Name	Model/Part
Tooth Rake	08751
Finish Grader	08754
Drag Mat Carrier System	08756
Steel Drag Mat	08757
Coco Drag Mat	08758
Lug Tire (24 X 12 - 12)	103-6771
Bahiagrass Baffle Kit	105-7269
Blade-Belt Kit, 62 Inch Guardian Only	105-7270
Blade-Belt Kit, 72 Inch Guardian Only	105-7271
Blade-Belt Kit, 72 Inch Side Discharge Only	105-7272
Striping Kit, 72 Inch Side Discharge Only	105-7273
Yellow Hydraulic Cap	107-1576
Cap-Diesel, Green	107-2172
Premium Engine Oil, 15w40 (Drum)	108-1181
Premium Engine Oil, 15w40 (Pail)	108-1182
Premium Transmission/Hydraulic Tractor Fluid (Drum)	108-1183
Premium Transmission/Hydraulic Tractor Fluid (Pail)	108-1184
Recycler Kit	108-1901
Conversion Kit, 72 Inch Rear-Discharge to Guardian Recycler	108-1903
Leaf Mulching Kit, 72 Inch Side Discharge Only	108-5273
Wheel And Tire ASM (Semi Pneumatic)	110-6406
Spark Arrestor Kit	112-1688
Bio-Diesel Fuel Filter Kit	112-9140
Slow Moving Vehicle Kit	114-4050
5 Inch Air Cleaner Safety Element	114-4057
Weight Mount Bracket Kit	114-4090
42-pound Weight, For Kit 114-4090	114-4096
MVP (Filter) Kit	30037
Guardian Recycler Completion Kit	30304
Polar Trac Kit	30370
Polar Trac Cab	30371
Road Light Kit	30374
Z-Stand Kit	30375
Rear Quick Attach System	30377
V-Plow Mounting Kit	30378
Auxiliary Hydraulic Power Kit	30380
Auxiliary Power Unit	30382
CE Kit	30392
Debris Blower	30393
Rear Discharge Kit, Groundsmaster 7200 Series Traction Unit with 62 Inch	30463
Rear Discharge Kit, Groundsmaster 7200 Series Traction Unit with 72 Inch	30466
48 Inch V-Plow	30750

