 


MODEL NO. 20327B-2000001 & UP

PARTS CATALOG

21" RECYCLER[®] Mower

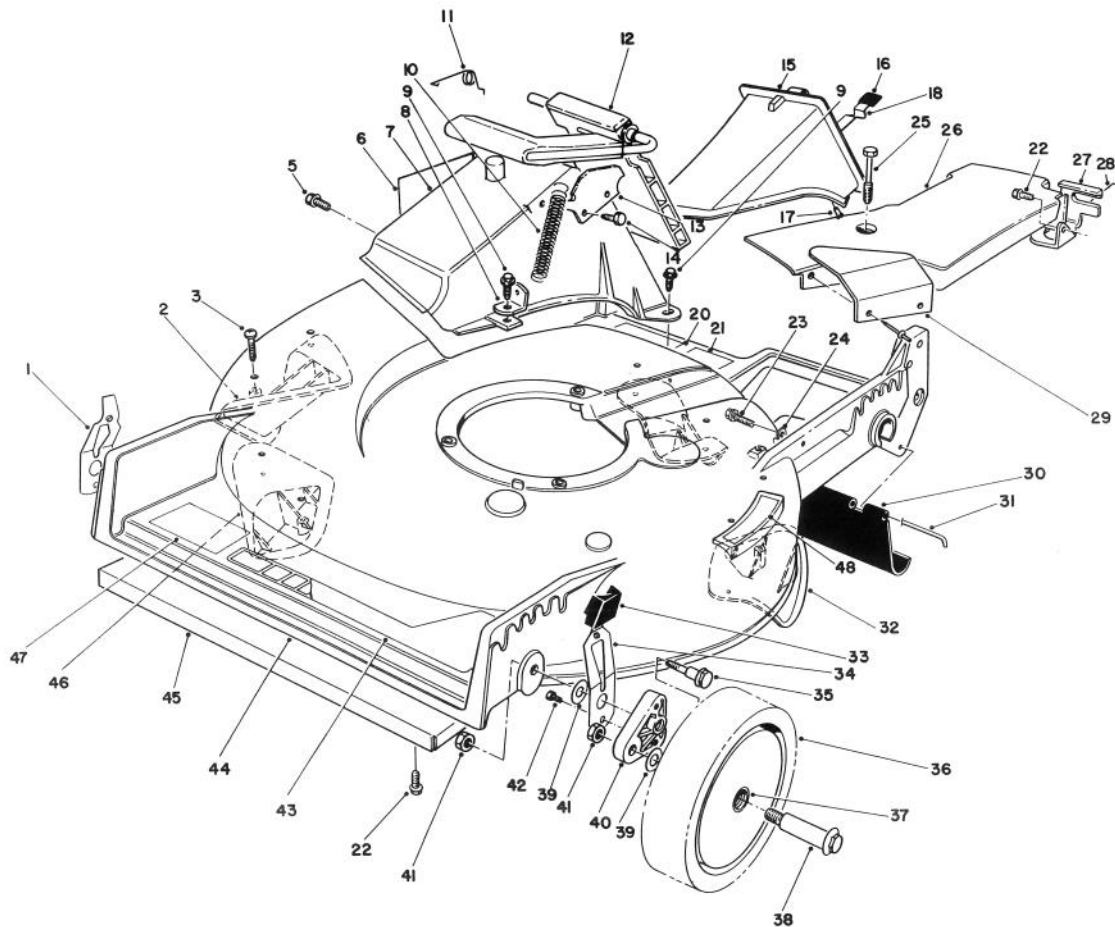


C-1081

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-0560	Spring Arm Ass'y - R.H.	1
2	76-2130	Plate - Kicker Left Front	1
3	32144-111	Screw - Pan Hd.	8
5	46-6810	Screw - Hex Washer Hd. Thread Forming	1
6	62-4060	Decal - Danger	1
7	82-9151	Tunnel - Discharge	1
8	80-3780	Bracket - Spring	1
9	46-6811	Screw w/Washer	3
10	76-4660	Spring - Door	1
11	80-3770	Retainer - Door	1
12	77-0200	Discharge Door Assembly	1
13	76-4570	Plate - Latch	1
14	46-8090	Screw - Hex Washer Hd. Self Tapping	2
15	77-0502	Plug Assembly (Incl. Ref. #16-18)	1
16	76-4650	Grip - Latch	1

Ref. No.	Part No.	Description	No. Used
17	3295-35	Rivet	3
18	76-4640	Latch - Plate	1
19	76-2150	Plate - Kicker Left Rear	1
20	66-0680	Decal - French Regulation	1
21	66-2000	Decal - Noise Level	1
22	32144-70	Screw - Hex Washer Hd. Thread Forming	5
23	32144-112	Screw - Self Tapping	1
24	3212-83	Clamp - R	1
25	37-7260	Screw - Special Cap	2
26	52-7406	Belt Cover Assembly (Incl. Ref. #17 & 29)	1
27	82-5680	Bracket - Traction Adjust.	1
28	46-7030	Retainer - Cable	1
29	77-0280	Shield - Heat	1
30	44-0580	Shield -Rear	1
31	33-3208	Rod - Shield	1
32	76-2140	Plate - Kicker Right Rear	1

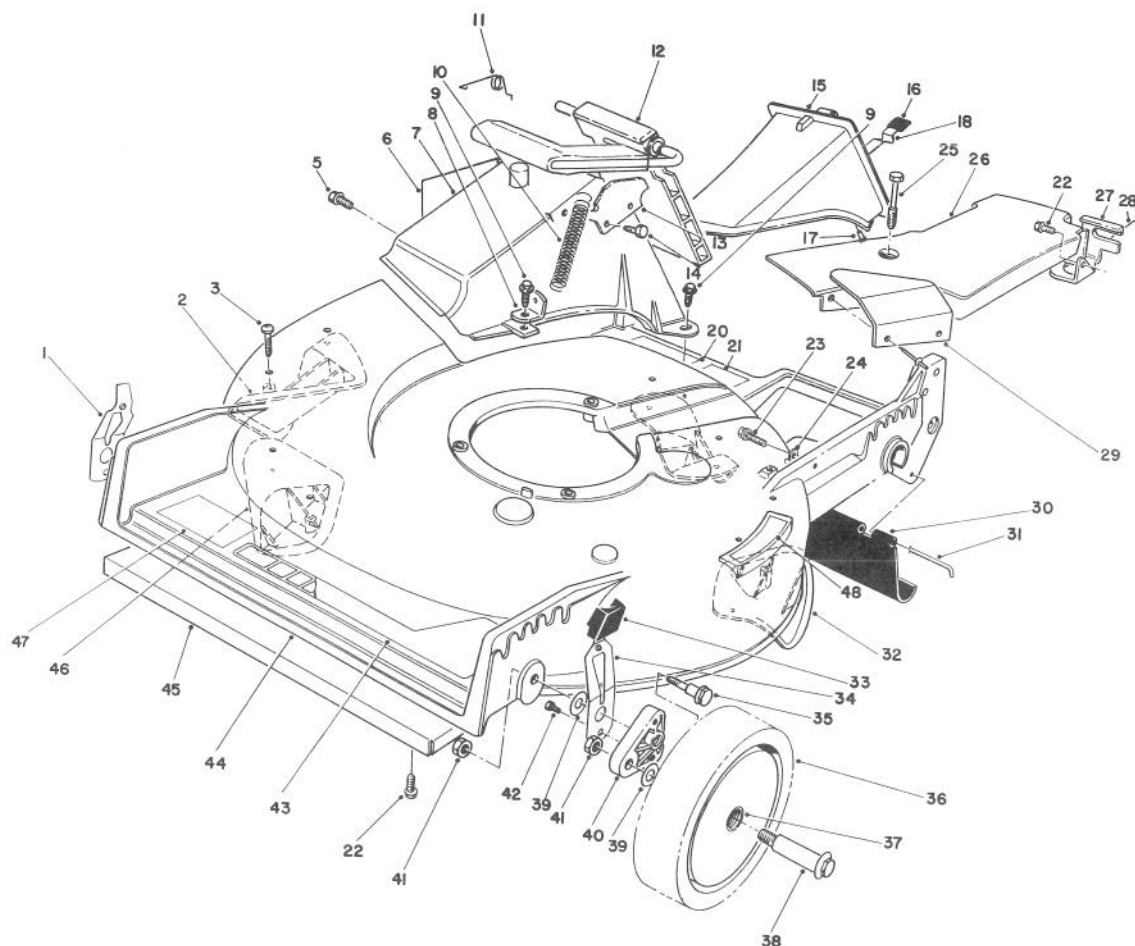 


C-1081

HOUSING ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used
33	25-7740	Knob - Spring Arm	2
34	71-0570	Spring Arm Ass'y - L.H.	1
35	66-0561	Screw - Pivot	2
36	11-9509	Wheel & Tire Assembly (Incl. Ref. #37)	2
37	27-6250	Bushing	4
38	27-6231	Bolt - Wheel	2
39	40-1940	Washer - Wheel	4
40	66-0580	Arm - Pivot	2
41	52-3620	Nut - Lock	4

Ref. No.	Part No.	Description	No. Used
42	32144-85	Screw - Hex Hd. Cap	2
43	76-1950	Decal - Deck	1
44	14-3519	Housing Assembly (Incl. Ref. #2-4, 19, 31 & 46)	1
45	46-5400	Shield - Front	1
46	76-2120	Plate - Kicker Rt. Front	1
47	71-0600	Decal- Toro	1
48	62-3950	Decal - Step Pad	1

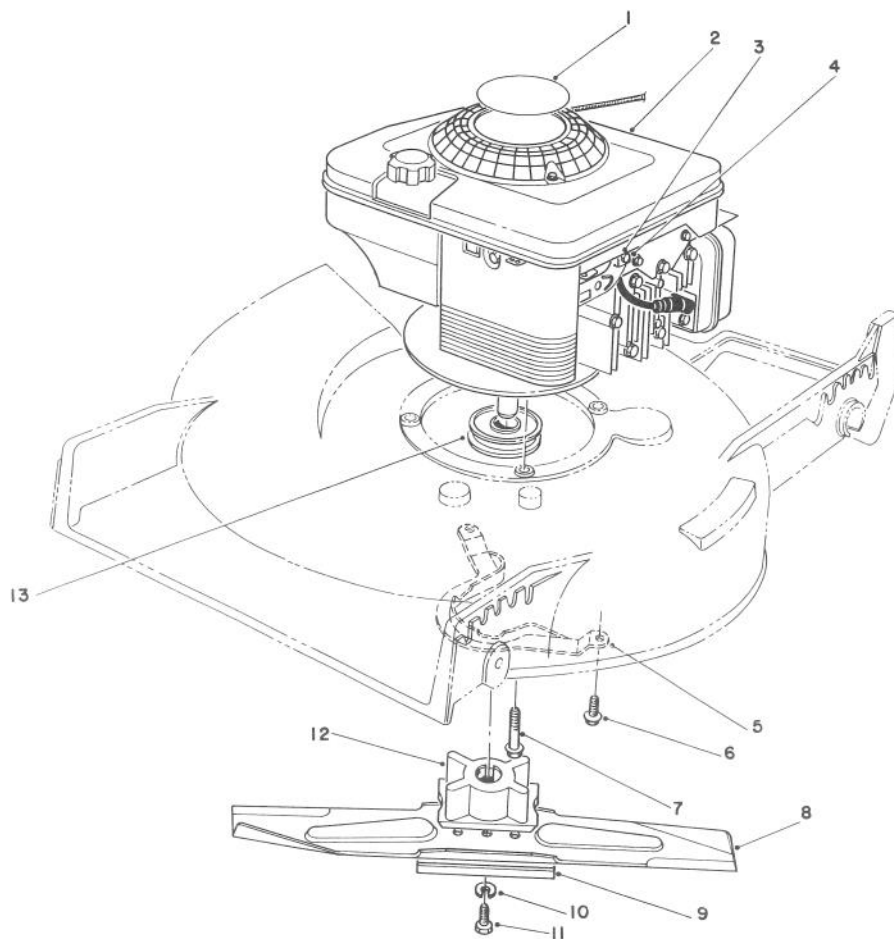 


C-1082

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	71-8460	Decal - Engine	1	8	14-1659	Blade - 21" (Incl. Ref. #9)	1
2		Engine	1	9	80-0510	Stiffener - Blade	1
†3	2210-249	Clamp - Casing	1	10	3253-22	Washer - Lock	1
†4	2210-313	Screw - Clamp	1	11	26-0670	Screw - Blade	1
5	66-0570	Guide - Belt	1	12	62-7540	Retainer - Blade	1
6	32144-70	Screw - Thread Forming	2	13	62-7550	Pulley - Driver	1
7	32144-102	Screw - Thread Forming	3				

 †Provided with Engine

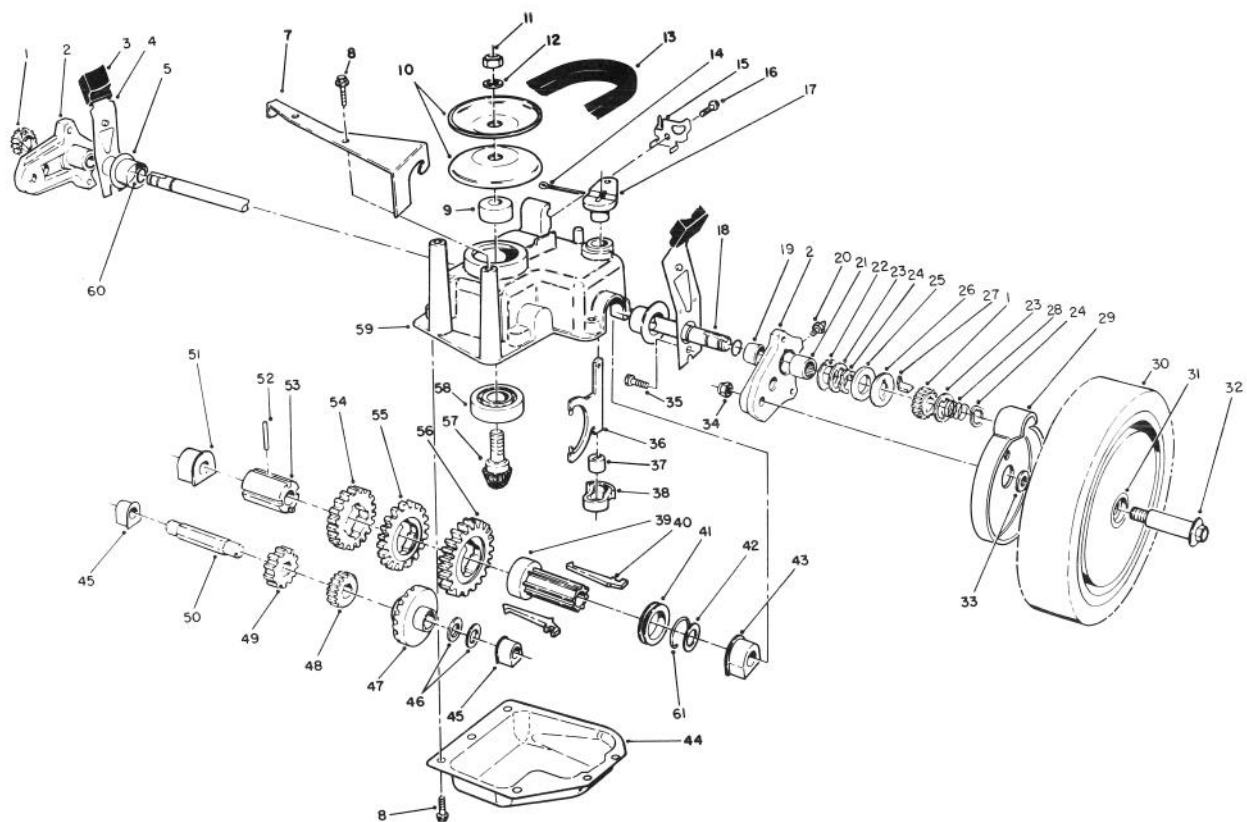


C-0521

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	65-4750	Pinion	2
2	63-8701	Pivot Arm Assembly (Incl. Ref # 19, 20, & 21)	2
3	25-7740	Knob - Arm	2
4	63-8720	Spring Arm Assembly	2
5	42-3520	End Cap	2
7	62-4320	Bracket - Belt Guide	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Locknut	1
12	3256-24	Washer - Flat	1
13	62-3900	V-Belt	1
14	3272-10	Pin - Cotter	1
15	82-8780	Cable - Retainer	1
16	32144-70	Screw - Thread Forming	1
17	60-8821	Lever - Shift	1
18	65-4770	Shaft - Output	1
19	70-9760	Bushing	2
20	302-56	Fitting - Grease	2
21	48-2060	Needle Bearing	2
22	65-4730	Thrust Washer	2
23	65-4740	Thrust Washer	4
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2

Ref. No.	Part No.	Description	No. Used
26	65-4760	Washer - Clutch	2
27	66-6050	Key - Rocker L.H.	1
*	66-6040	Key - Rocker R.H.	1
28	65-4720	Spring	2
29	74-1660	Cover - Wheel	2
30	11-9519	Wheel - Tire & Gear Ass'y (Incl. Ref. # 31)	2
31	27-6250	Bushing - Wheel	4
32	27-6231	Wheel Bolt	2
33	74-1671	Spacer - Wheel Cover	2
34	52-3620	Locknut	2
35	32144-85	Screw	2
36	60-8870	Yoke - Shift	1
37	29-9570	Bushing - Yoke	1
38	60-8810	Retainer - Shift Fork	1
39	76-0780	Sleeve - Shift Key	1
40	76-0760	Key - Shift	2
41	76-0770	Collar - Shift	1
42	36-4780	Washer - Thrust	1
43	60-8770	Bushing - Output Shaft	1
44	60-8730	Cover - Gear Case	1
45	60-8750	Bushing - Int. Shaft	2
46	36-4791	Washer - Thrust	2
47	55-3760	Gear - Pinion 15 Tooth	1
48	55-3780	Gear - Pinion 20 Tooth	1

 *Not Illustrated

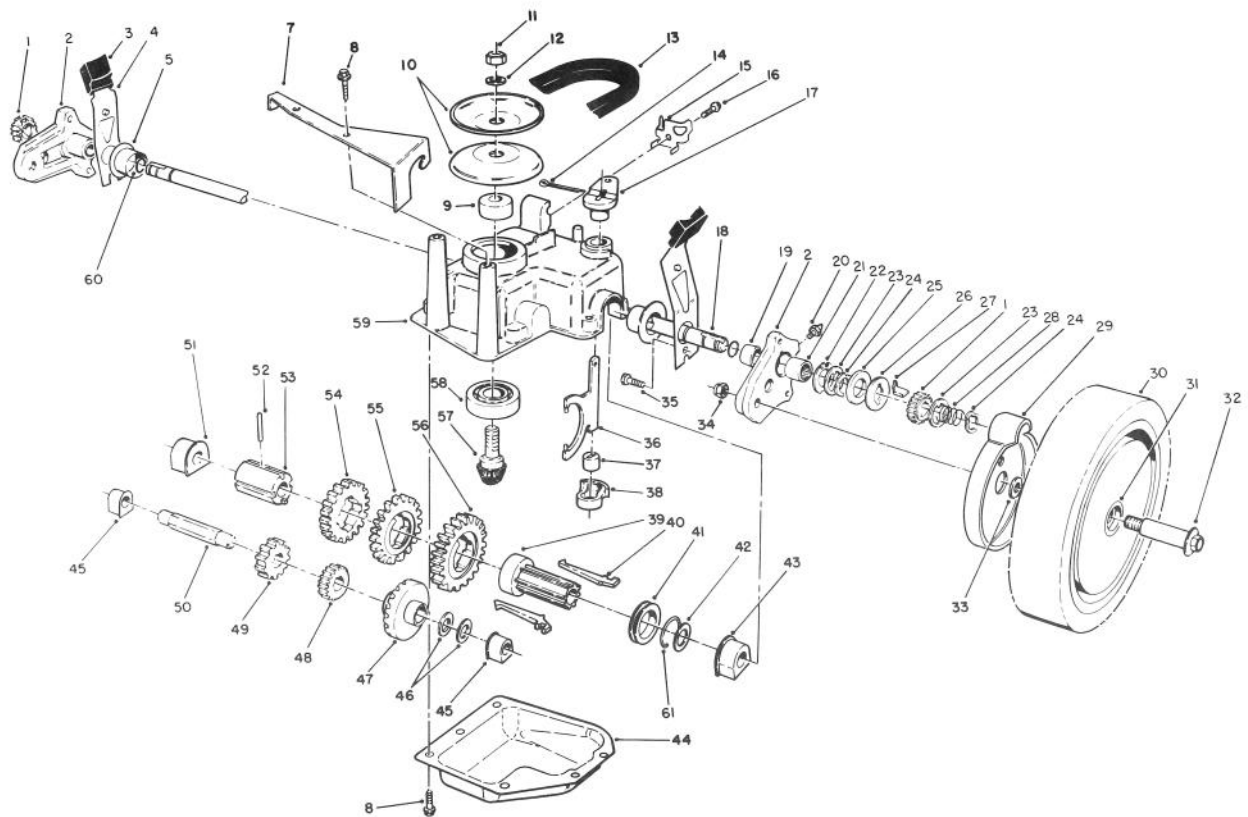


C-0521

GEAR CASE ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
49	55-3800	Gear - Pinion	1	56	55-3770	Gear - 49 Tooth 1st Gear	1
50	60-8800	Shaft - Intermediate	1	57	60-8890	Pinion - Bevel	1
51	60-8850	Bushing - Output Shaft	1	58	38-7820	Bearing - Ball	1
52	32121-120	Pin - Coil	1	59	60-8710	Gear Case - Upper	1
53	60-8790	Sleeve - Gear	1	60	237-153	O-Ring	2
54	55-3810	Gear - 39 Tooth 3rd Gear	1	61	65-5250	Clip - Spring	1
55	55-3790	Gear - 44 Tooth 2nd Gear	1	*	62-6673	Gear Case Assembly	1

 *Not Illustrated

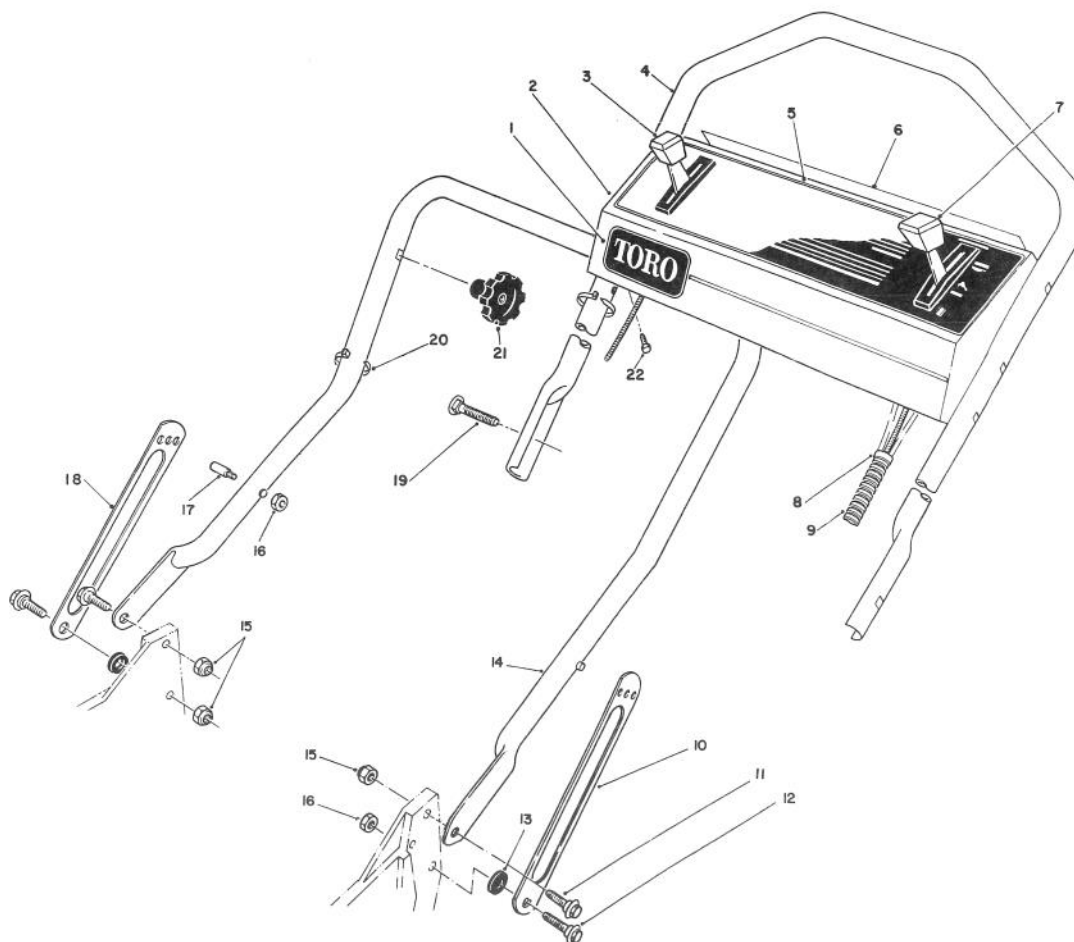


C-1083

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	84-5630	Decal - Toro	1
2	14-4759	Panel - Control (Incl. Ref. #5)	1
3	76-2711	Control - Ground Speed	
4	84-8330	Handle -Upper	1
5	66-0290	Decal - Control Panel	1
6	66-1790	Decal - Rear Panel	1
7	66-0236	Control - Throttle (Bend Type #3) (Sheath Lg. 60") (Wire Lg. 1-3/4")	1
8	2412-50	Clip - Convoluted Tubing	4
9	46-6440	Cover - Control Cables	1

Ref. No.	Part No.	Description	No. Used
10	84-8360	Latch - Handle L.H.	1
11	27-7211	Screw - Shoulder	2
12	27-7210	Screw - Shoulder	2
13	3-3287	Spacer	2
14	43-1361	Lower Handle Assembly	1
15	3296-29	Nut - Lock	3
16	3296-47	Nut - Lock	3
†17	49-2750	Pin - handle	2
18	84-8400	Latch - Handle R.H.	1
19	17-9421	Screw - Handle	2
20	3290-378	Tie - Cable	2
21	19-4050	Knob - Handle Release	2
22	32104-76	Screw - Self Tap Slotted	5

 †Service Replacement Part

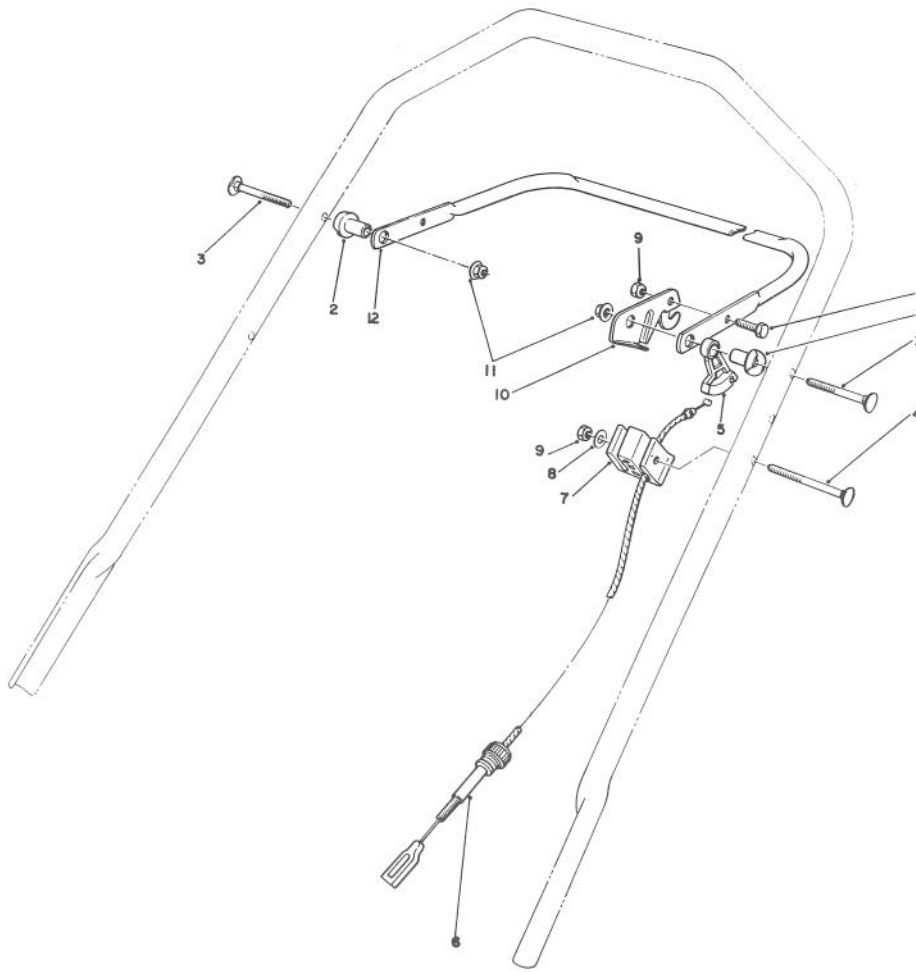


C-1084

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321-3	Screw - Hex Hd. Cap	1
2	49-1630	Support - Spacer	2
3	17-9421	Screw - Handle	2
4	46-6434	Screw - Handle	1
5	46-5520	Lever - Traction	1
6	46-5481	Cable - Traction	1

Ref. No.	Part No.	Description	No. Used
7	46-6980	Support - Cable	1
8	3256-22	Washer - Flat	1
9	3296-42	Nut - Lock	2
10	74-1820	Lever - Control	1
11	3296-58	Nut - Lock	2
12	52-7430	Bar - Control	1

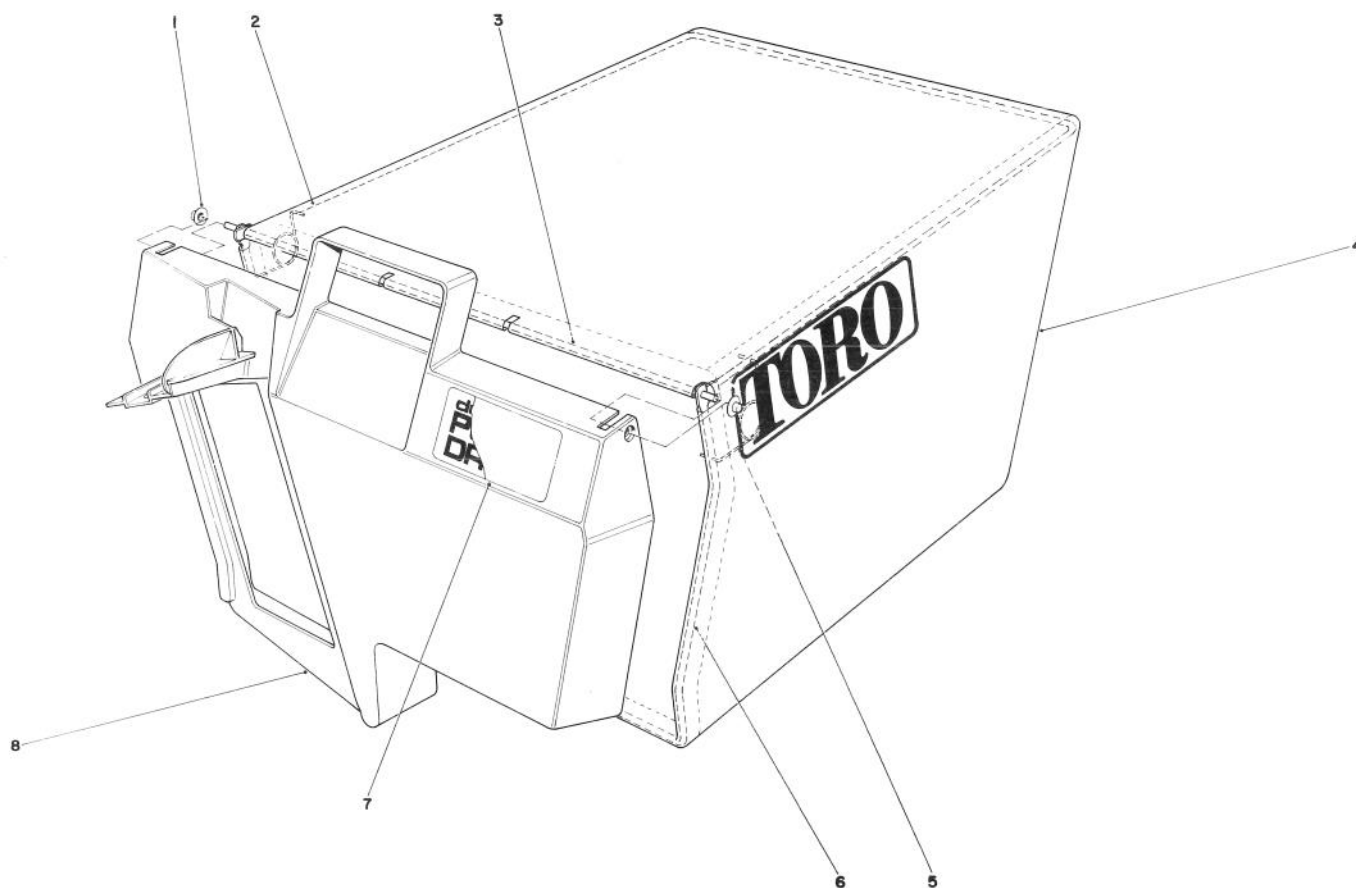 


C-0331

GRASS BAG ASSEMBLY NO. 11-0189

Ref. No.	Part No.	Description	No. Used
1	3290-422	Nut - Push	2
2	42-4030	Bag Frame - Upper	1
3	33-4820	Hinge - Bag Door	1
4	44-0522	Bag - Grass	1

Ref. No.	Part No.	Description	No. Used
5	36-6910	Spring	2
6	42-4020	Frame - Bag	1
7	66-2150	Decal - Bag Door	1
8	37-1393	Door - Grass Bag	1

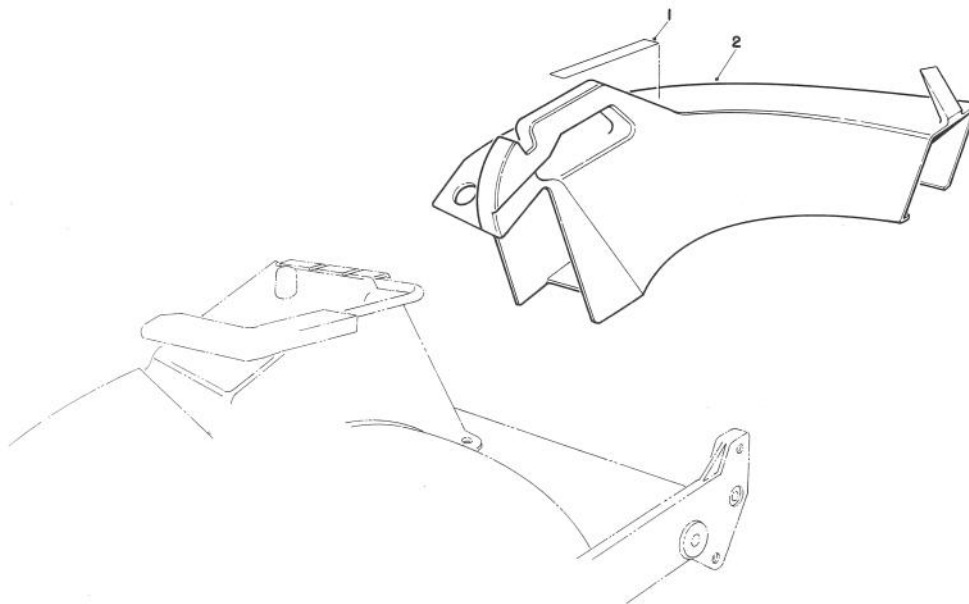 


T-0716

SIDE DISCHARGE CHUTE MODEL NO. 59110 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	76-4780	Decal - Caution	1
2	13-0229	Chute - Discharge (Incl. Ref. #1)	1

Ref. No.	Part No.	Description	No. Used

 *Not Illustrated

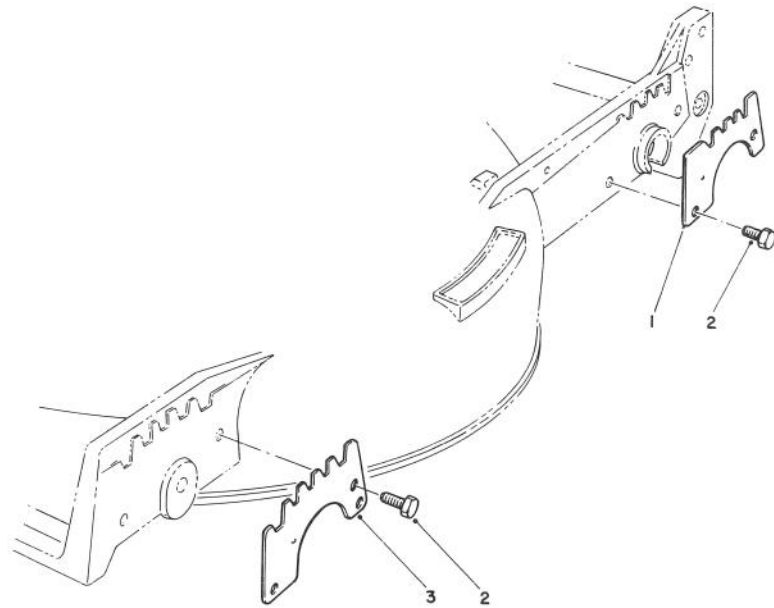


C-0332

WEAR PLATE MODEL NO. 49-4080 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	49-4070	Plate - Rear Wear	2
2	32104-17	Thread Forming Screw	8

Ref. No.	Part No.	Description	No. Used
3	43-5050	Plate - Wear Front	2

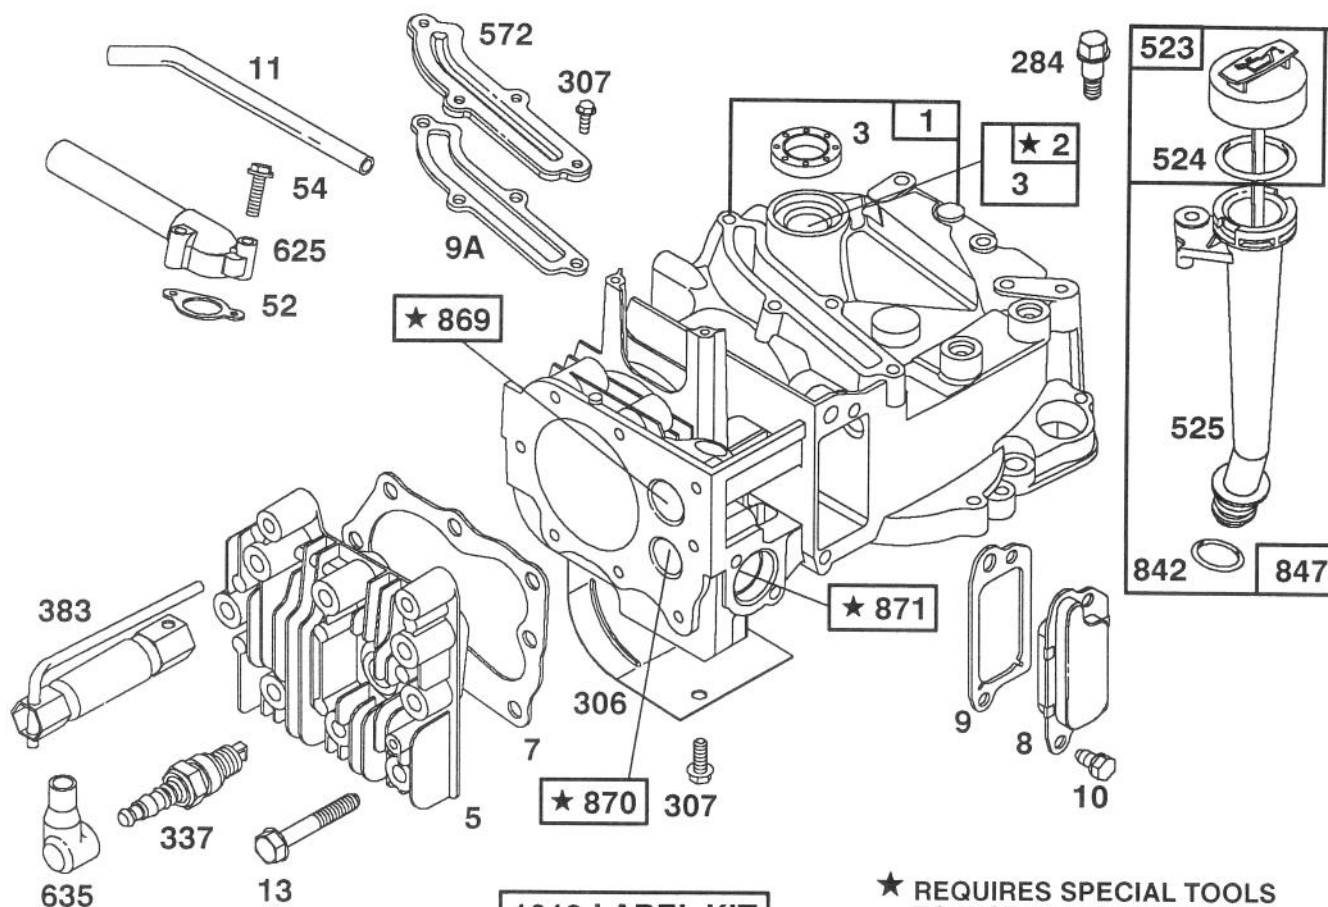 


ENGINE BRIGGS & STRATTON MODEL 124702-0189-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing-Cylinder	
		Note: Requires Special Tools for Installation.	
★3	393862	Seal-Oil	1
5	213861	Head-Cylinder	1
★7	272200	Gasket-Cylinder Hd.	1
8	399717	Breather-Valve Chamber	1
★9	271904	Gasket-Valve Cover	1
★9A	272238	Gasket-Baffle Plate	1
10	94222	Screw-Breather Mtg.	1
11	231685	Tube-Breather	1
13	94547	Screw-Cylinder Hd.	1
★52	272199	Gasket-Intake Elbow	1
54	94526	Screw-Intake Elbow Mounting	1
284	94511	Screw-Hex. Head	1
306	224324	Shield-Cylinder	1

Ref. No.	Part No.	Description	No. Used
307	94515	Screw-Hex. Head	1
337	802592	Plug-Spark	1
383	89838	Wrench-Spark Plug	1
523	493950	Cap with Dipstick-Oil Filler	1
524	280393	Seal-Filler Tube	1
525	493952	Tube-Oil Filler	1
572	224328	Baffle-Cylinder	1
625	492717	Tube-Fuel Intake	1
635	66538	Elbow-Spark Plug	1
842	280966	Seal-O-Ring	1
847	493459	Dipstick and Tube Assy.-Oil Filler	1
869	213512	Seat-Intake Valve (Standard)	1
870	213513	Seat-Exhaust Valve (Standard)	1
871	262001	Guide-Exhaust Valve	
		Note: 63709 Guide-Intake Valve See Repair Instruction Manual.	1
1019	494256	Label Kit	1

 ★ Included in Gasket Set-Part No. 493263.

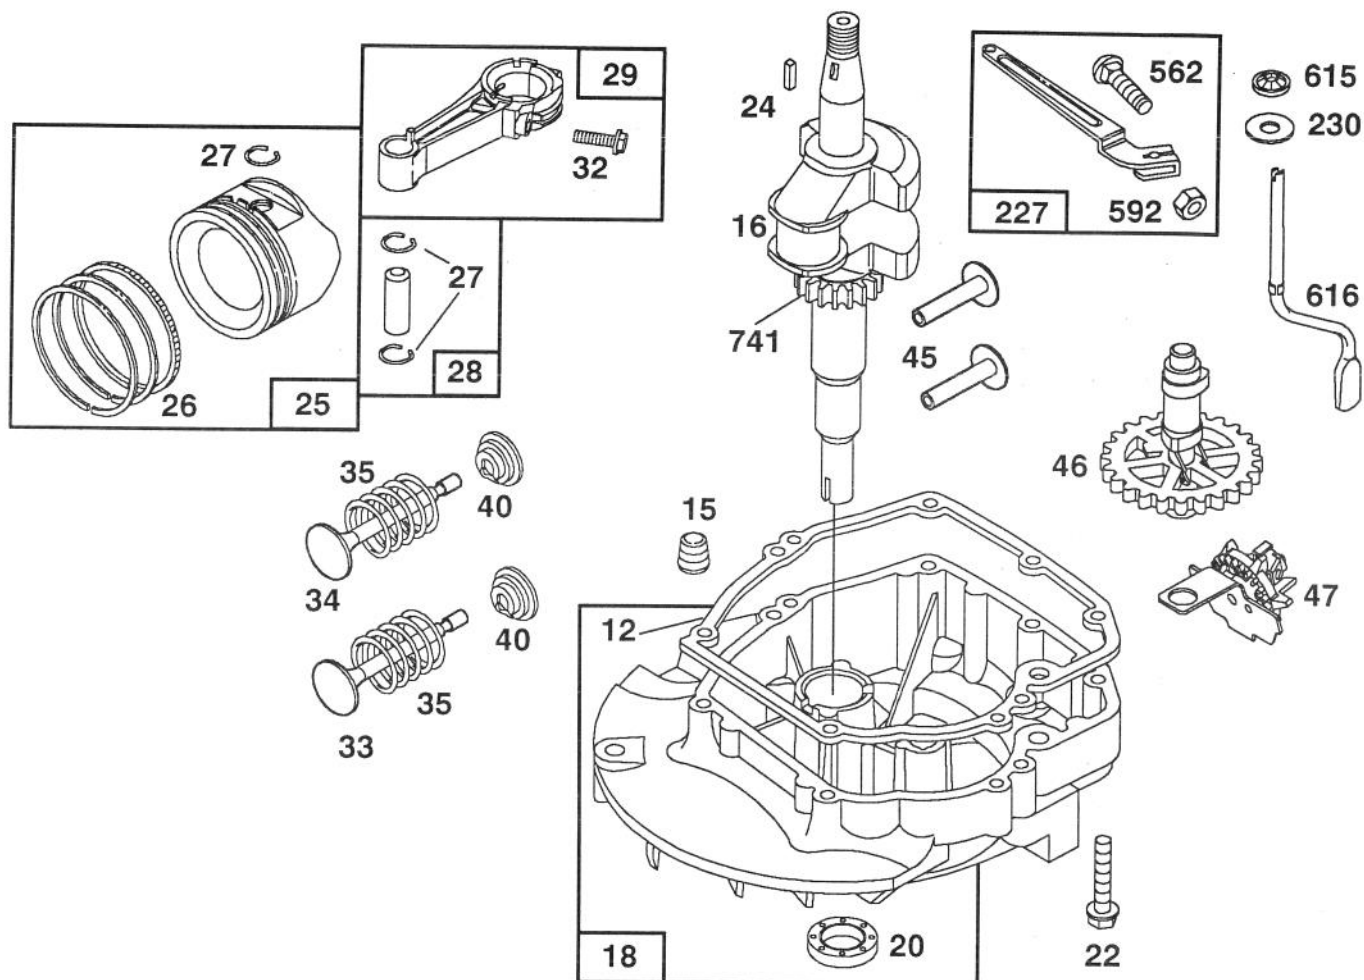


ENGINE BRIGGS & STRATTON MODEL 124702-0189-01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket-Crankcase	1
15	94613	Plug-Oil Drain	1
16	494546	Crankshaft	
		Note: Order 94388 For Timing Gear Key.	
18	493279	Sump-Engine	1
★20	399781	Seal-Oil	1
22	94220	Screw-Sump Mtg. Sem	
		Note: 94612 Screw-Sump Mtg. One Used in Hole	
		Nearest Breather.	1
24	222698	Key-Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
		PISTON RING SETS:	
26	493261	Ring Set-Piston (Std.)	1
	493388	Ring Set-Piston (.010" O.S.)	1
	493389	Ring Set-Piston (.020" O.S.)	1
	493390	Ring Set-Piston (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock-Piston Pin	1
28	298909	Pin Assembly-Piston (Standard)	1
29	490566	Rod Assembly-Connecting	
		Note: For Connecting Rod with .020" Undersize Crankpin Bearing-Order No. 490743.	
32	94405	Screw-Connecting Rod	1
33	262651	Valve-Exhaust	1
34	262652	Valve-Intake	1
35	262224	Spring-Valve	1
40	93312	Retainer-Valve Spring	1
45	262204	Tappet-Valve	1
46	492830	Gear-Cam	1
47	493737	Oil Slinger Gear and Bracket	1
227	492349	Lever Assembly-Gov.	1
230	67072	Washer-Gov. Crank	1
562	92613	Bolt-Governor Lever	1
592	231082	Nut-Hex.	1
615	94474	Pushnut (Governor Crank)	1
616	262578	Crank-Governor	1
741	262598	Gear-Timing	1

 ★ Included in Gasket Set-Part No. 493263.

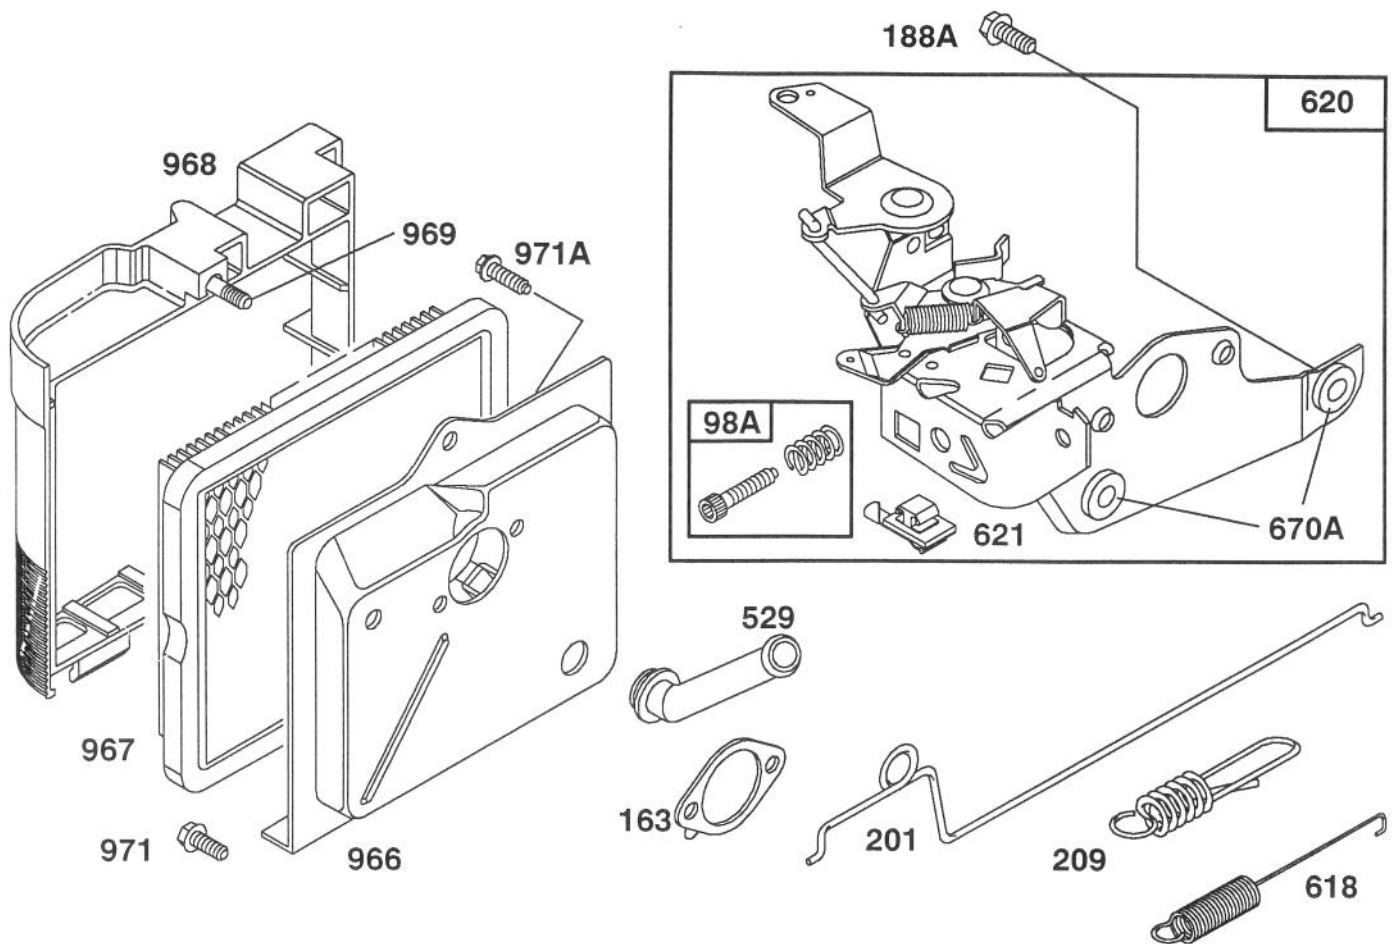


ENGINE BRIGGS & STRATTON MODEL 124702-0189-01

Ref. No.	Part No.	Description	No. Used
98A	493280	Screw Assy.-Speed Adjusting	1
★163	272296	Gasket-Air Cleaner	1
188A	94644	Screw-Hex. Head	1
201	262579	Link-Governor	1
209	262661	Spring-Governor	1
529	280943	Grommet-Breather	1
618	262749	Spring-Choke Return	1
620	493894	Bracket Assembly-Carburetor Control	1
621	396847	Switch-Stop	1

Ref. No.	Part No.	Description	No. Used
670A	493823	Spacer-Carburetor Bracket (Includes 2)	2
966	492363	Base-Air Cleaner	1
967	491588	Filter-Air	1
968	280937	Cover-Air Cleaner	1
969	94120	Screw-Cover Mtg.	1
971	94269	Screw-Air Cleaner	1
971A	94121	Screw-Air Cleaner (Base to Carburetor)	1

 ★ Included in Gasket Set-Part No. 493263.

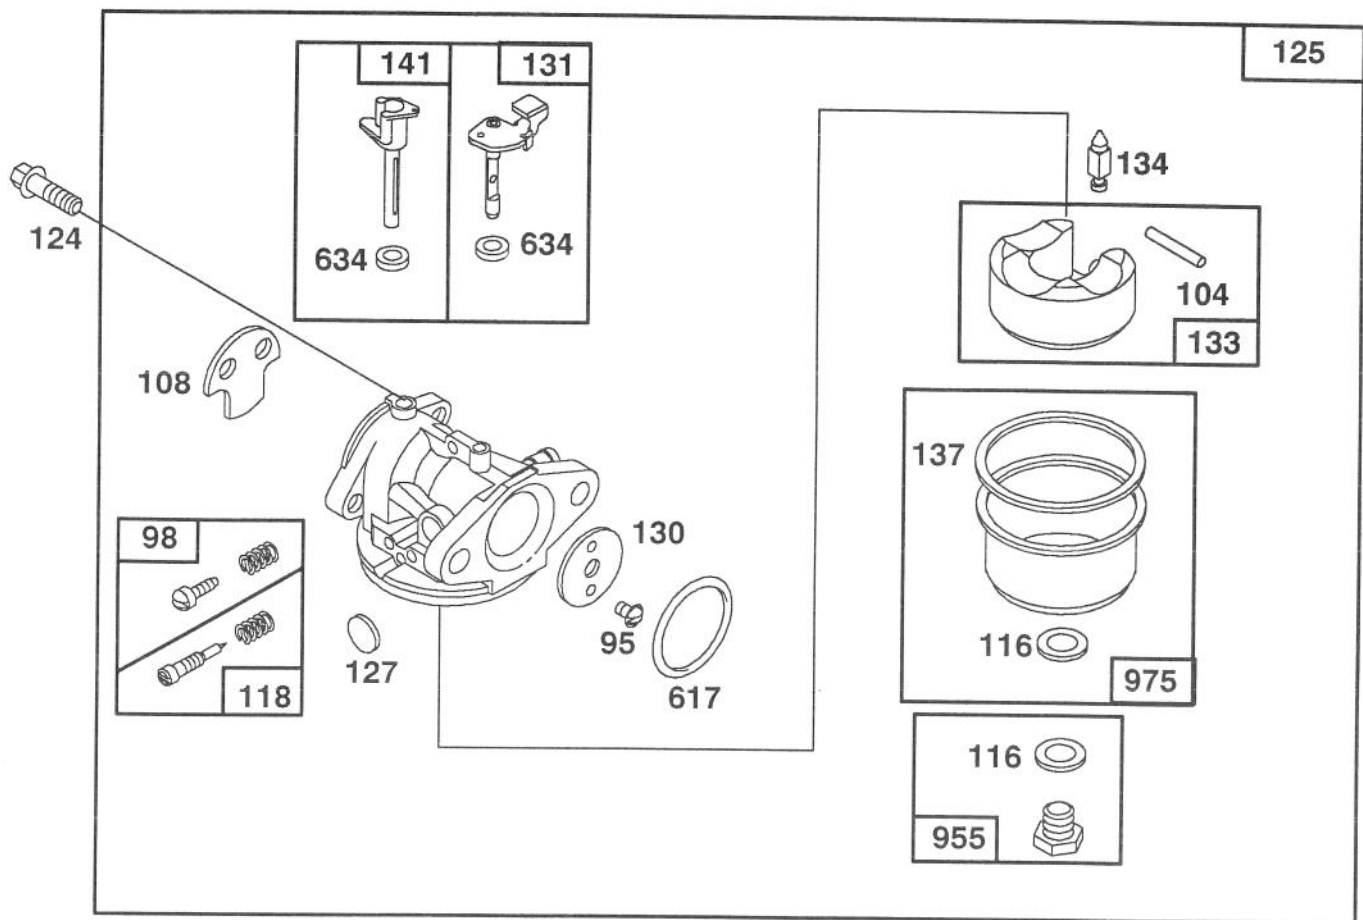


ENGINE BRIGGS & STRATTON MODEL 124702-0189-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw-Throttle Valve Mounting	1
98	398185	Screw-Idle Adjustment	1
• 104	231371	Pin-Float Hinge	1
108	223471	Valve-Choke	1
◆◆ 116		Gasket-Sealing (Sold in Kit Only).	1
• 118	493765	Valve and Spring-Needle	1
124	94525	Screw-Carburetor Mtg.	1
125	494217	Carburetor Assembly	1
• 127		Plug-Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
130	223470	Valve-Throttle	1
131	493267	Shaft and Lever-Throttle	1
133	398187	Float Assy.-Carburetor	1
• 134	398188	Valve-Inlet (Includes Seat)	1
◆◆ 137		Gasket-Bowl (Sold in Kit Only).	1
141	494218	Shaft-Choke	1
◆◆ 617	270344	Seal-Fuel Intake Tube	1
◆◆ 634		Washer-Shaft (Sold in Kit Only).	1
955	493869	Screw-Fuel Bowl	1
975	493640	Bowl-Carburetor	1

• Included in Carburetor Overhaul Kit-Part No. 493762.

 
◆ Included in Carburetor Gasket Set-Part No. 490937.

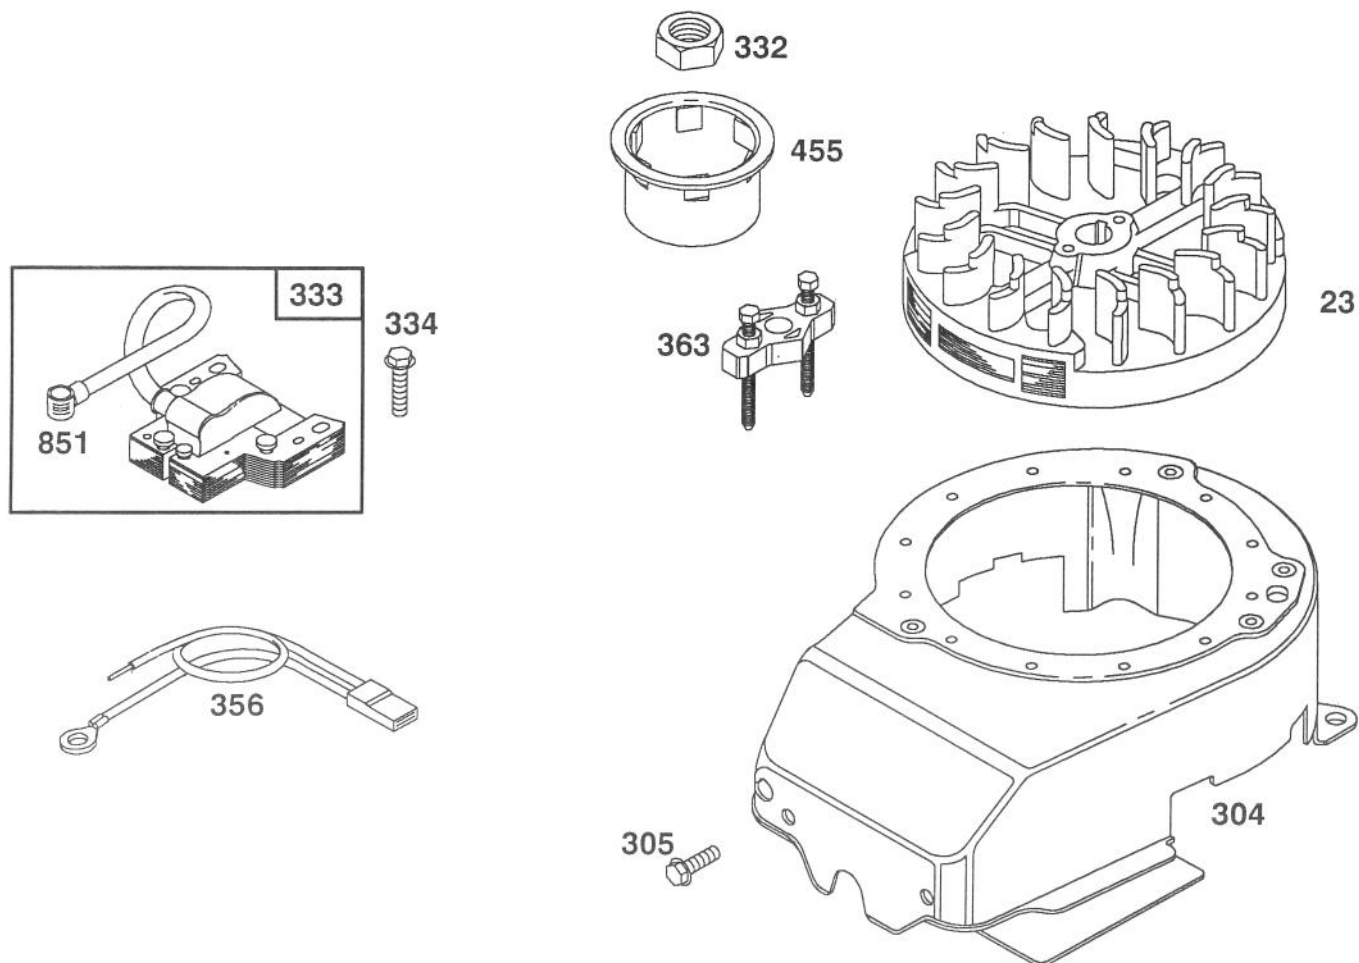

ENGINE BRIGGS & STRATTON MODEL 124702-0189-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel Assembly	1
304	493294	Housing-Blower	1
305	94513	Screw-Hex. Head Sem	1
332	92284	Nut-Flywheel	1
333	802574	Armature-Magneto	1





Ref. No.	Part No.	Description	No. Used
334	93381	Screw-Armature Mounting	1
356	398808	Wire-Ground	1
363	19069	Puller-Flywheel	1
455	224250	Cup-Starter	1
851	221798	Terminal-Ignition Cable	1

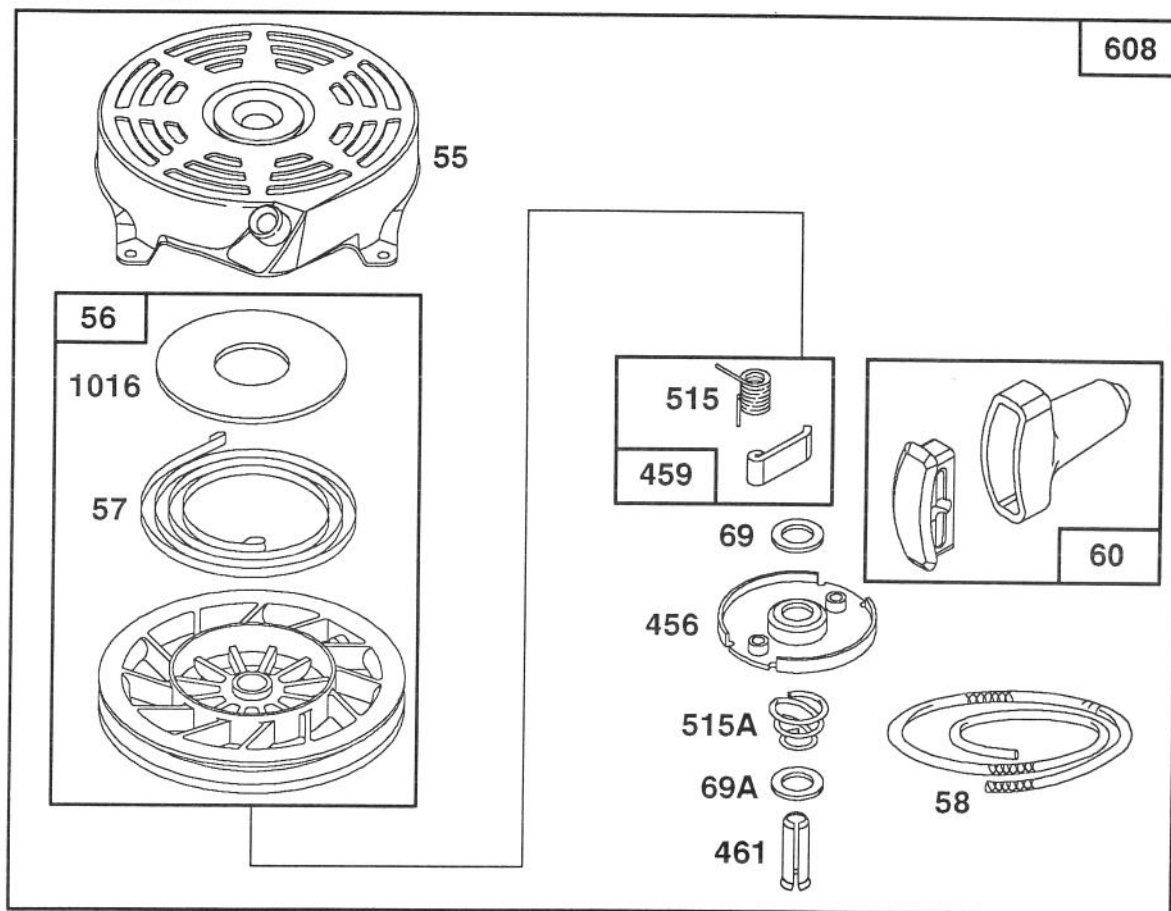 

ENGINE BRIGGS & STRATTON MODEL 124702-0189-01

Ref. No.	Part No.	Description	No. Used
55	492831	Housing-Rewind Starter	1
56	492832	Pulley-Rewind Starter	1
57	262594	Spring-Rewind Starter	1
58	280399	Rope-Rewind Starter (Cut to 88-5/8")	1
60	393152	Handle-Rewind Starter	1
69	280973	Washer-Rewind Starter	1
69A	224322	Washer-Rewind Starter	1
456	224321	Retainer-Rewind Starter	1




Ref. No.	Part No.	Description	No. Used
459	492833	Pawl-Starter	1
461	262626	Pin-Starter	1
515	262556	Spring-Pawl	1
515A	262625	Spring-Torsion	1
608	493295	Starter Assy.-Rewind Includes: 94128 Screw-Hex. Hd. 92987 Nut-Hex.	1
1016	224278	Cover-Rewind Starter	1

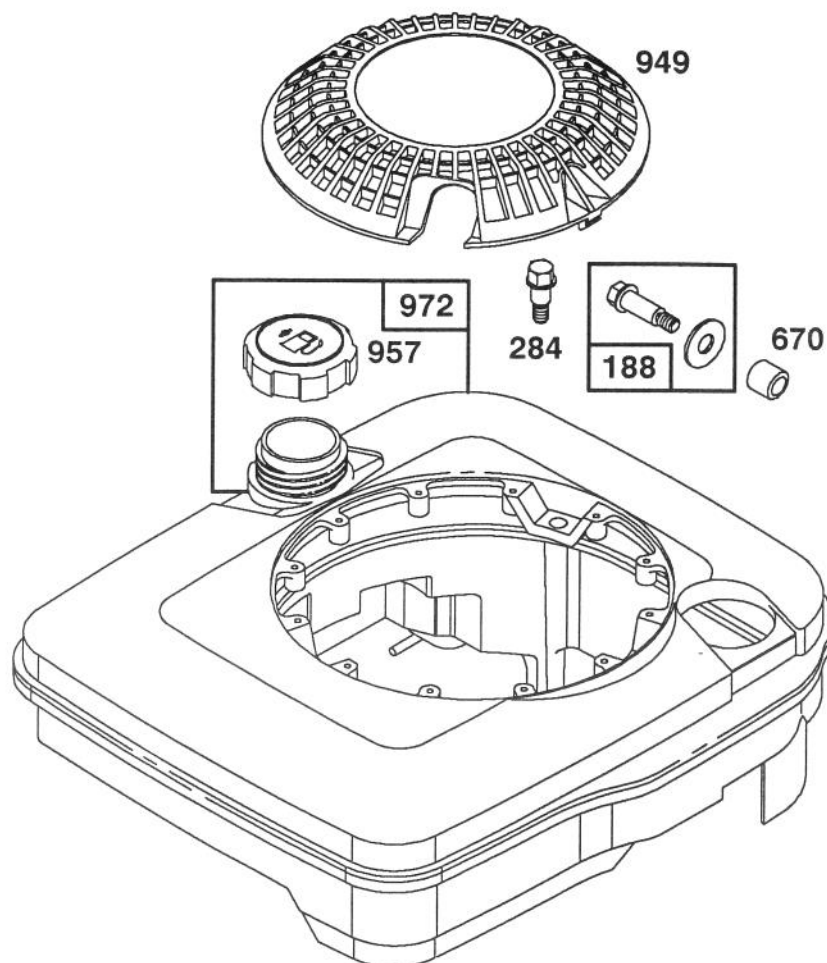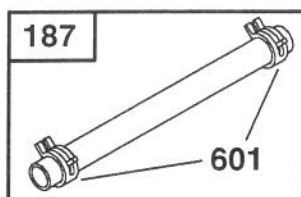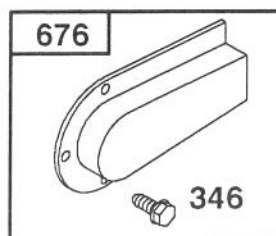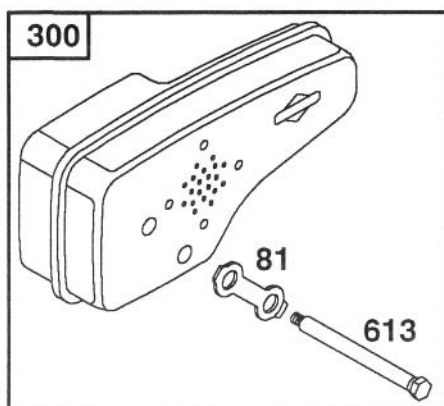    

ENGINE BRIGGS & STRATTON MODEL 124702-0189-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock-Muffler Screw	1
187	492790	Hose-Fuel	1
188	398540	Screw-Tank Mounting (Includes Washer)	1
284	94511	Screw-Hex. Head	1
300	490547	Muffler-Exhaust	1
346	93705	Screw-Hex. Head	1

Ref. No.	Part No.	Description	No. Used
601	93807	Clamp-Hose	1
613	94231	Screw-Muffler Mtg.	1
670	280512	Spacer-Fuel Tank	1
676	493871	Deflector-Muffler	1
949	281136	Guard-Finger	1
957	397974	Cap Assembly-Fuel	1
972	494358	Tank Assembly-Fuel	1

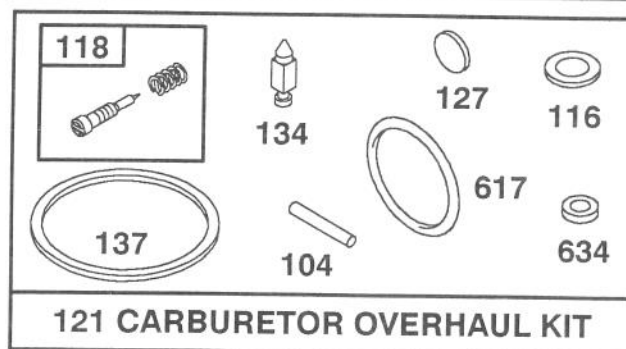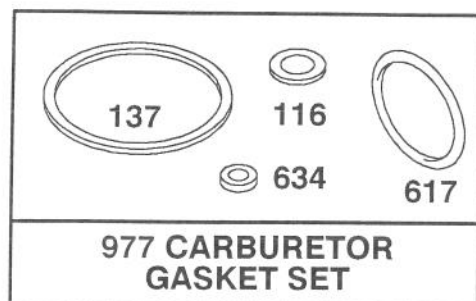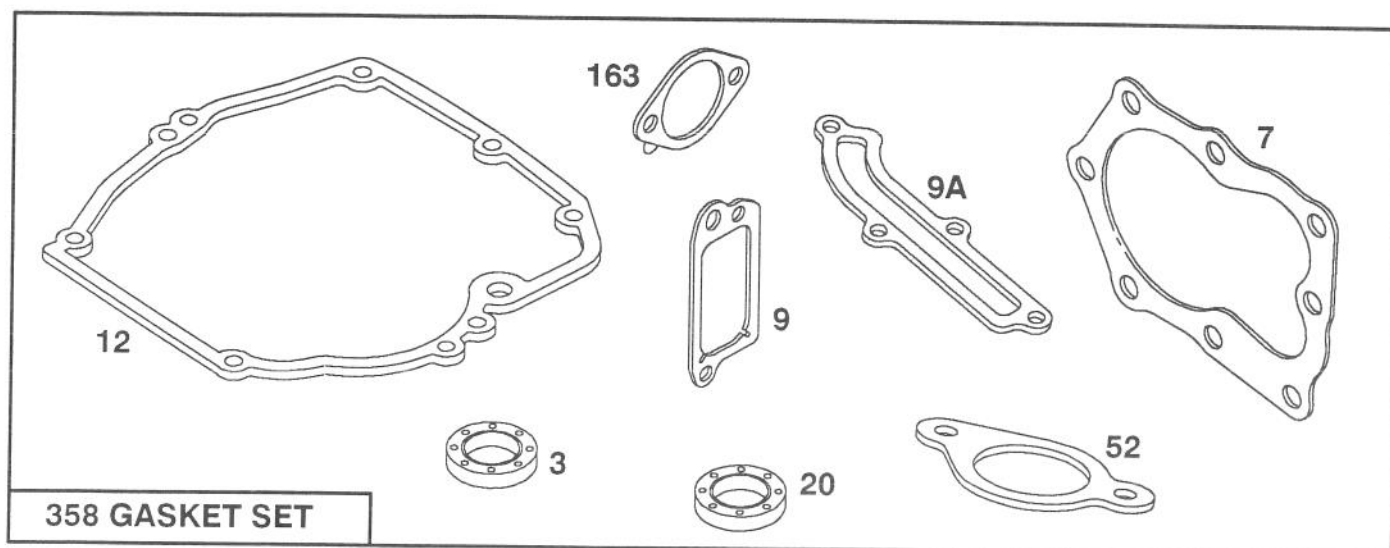   

ENGINE BRIGGS & STRATTON MODEL 124702-0189-01

Ref. No.	Part No.	Description	No. Used
★3	393862	Seal-Oil	1
★7	272200	Gasket-Cylinder Hd.	1
★9	271904	Gasket-Valve Cover	1
★9A	272238	Gasket-Baffle Plate	1
★12	272198	Gasket-Crankcase	1
★20	399781	Seal-Oil	1
★52	272199	Gasket-Intake Elbow	1
●104	231371	Pin-Float Hinge	1
◆116		Gasket-Sealing (Sold in Kit Only).	1
●118	493765	Valve and Spring-Needle	1

Ref. No.	Part No.	Description	No. Used
121	493762	Carburetor Overhaul Kit	1
●127		Plug-Welch (Sold in Kit Only).	1
●134	398188	Valve-Inlet (Includes Seat)	1
◆137		Gasket-Bowl (Sold in Kit Only).	1
★163	272296	Gasket-Air Cleaner	1
358	493263	Gasket Set	1
◆617	270344	Seal-Fuel Intake Tube	1
◆634		Washer-Shaft (Sold in Kit Only).	1
977	490937	Gasket Set-Carburetor	1

● Included in Carburetor Overhaul Kit-Part No. 493762.

◆ Included in Carburetor Gasket Set-Part No. 490937.

★ Included in Gasket Set-Part No. 493263.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.
AL-916034

MAINTENANCE RECORD

[illegible]