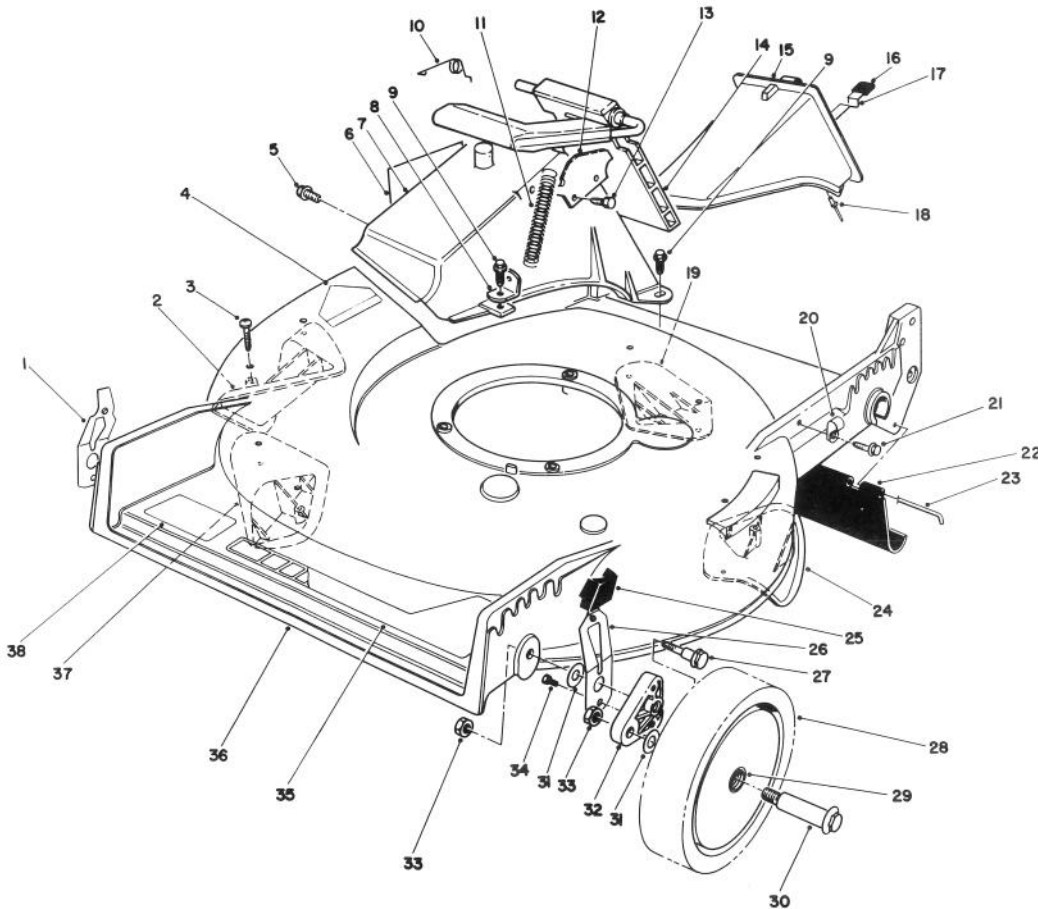


**TORO®**

MODEL NO. 20326-2000001 &amp; UP


**PARTS  
CATALOG****21" RECYCLER®**  
Mower

C-1125

**HOUSING ASSEMBLY**

| Ref. No. | Part No.  | Description                           | No. Used |
|----------|-----------|---------------------------------------|----------|
| 1        | 71-0560   | Spring Arm Ass'y - R.H.               | 2        |
| 2        | 76-2130   | Plate - Kicker Left Front             | 1        |
| 3        | 32144-111 | Screw - Pan Hd.                       | 8        |
| 4        | 56-6270   | Decal - Danger                        | 1        |
| 5        | 46-6810   | Screw - Hex Washer Hd. Thread Forming | 1        |
| 6        | 62-4060   | Decal - Danger                        | 1        |
| 7        | 82-9151   | Tunnel - Discharge                    | 1        |
| 8        | 80-3780   | Bracket - Spring                      | 1        |
| 9        | 46-6811   | Screw w/Washer                        | 3        |
| 10       | 80-3770   | Retainer - Door                       | 1        |
| 11       | 76-4660   | Spring - Door                         | 1        |
| 12       | 76-4570   | Plate - Latch                         | 1        |
| 13       | 46-8090   | Screw - Hex Washer Hd. Self Tapping   | 2        |

| Ref. No. | Part No.  | Description                                 | No. Used |
|----------|-----------|---------------------------------------------|----------|
| 14       | 77-0200   | Door - Discharge                            | 1        |
| 15       | 77-0501   | Discharge Plug Assembly (Incl. Ref. #16-18) | 1        |
| 16       | 76-4650   | Grip - Latch                                | 1        |
| 17       | 76-4640   | Latch - Plug                                | 1        |
| 18       | 3295-35   | Rivet                                       | 1        |
| 19       | 76-2160   | Plate - Kicker Left Rear                    | 1        |
| 20       | 2412-89   | R-Clamp                                     | 1        |
| 21       | 32144-112 | Screw - Hex Washer Hd Self Tapping          | 1        |
| 22       | 44-0580   | Shield - Rear                               | 1        |
| 23       | 33-3208   | Rod - Shield                                | 1        |
| 24       | 76-2140   | Plate - Kicker Right Rear                   | 1        |
| 25       | 25-7740   | Knob - Spring Arm                           | 4        |
| 26       | 71-0570   | Spring Arm Ass'y - L.H.                     | 2        |

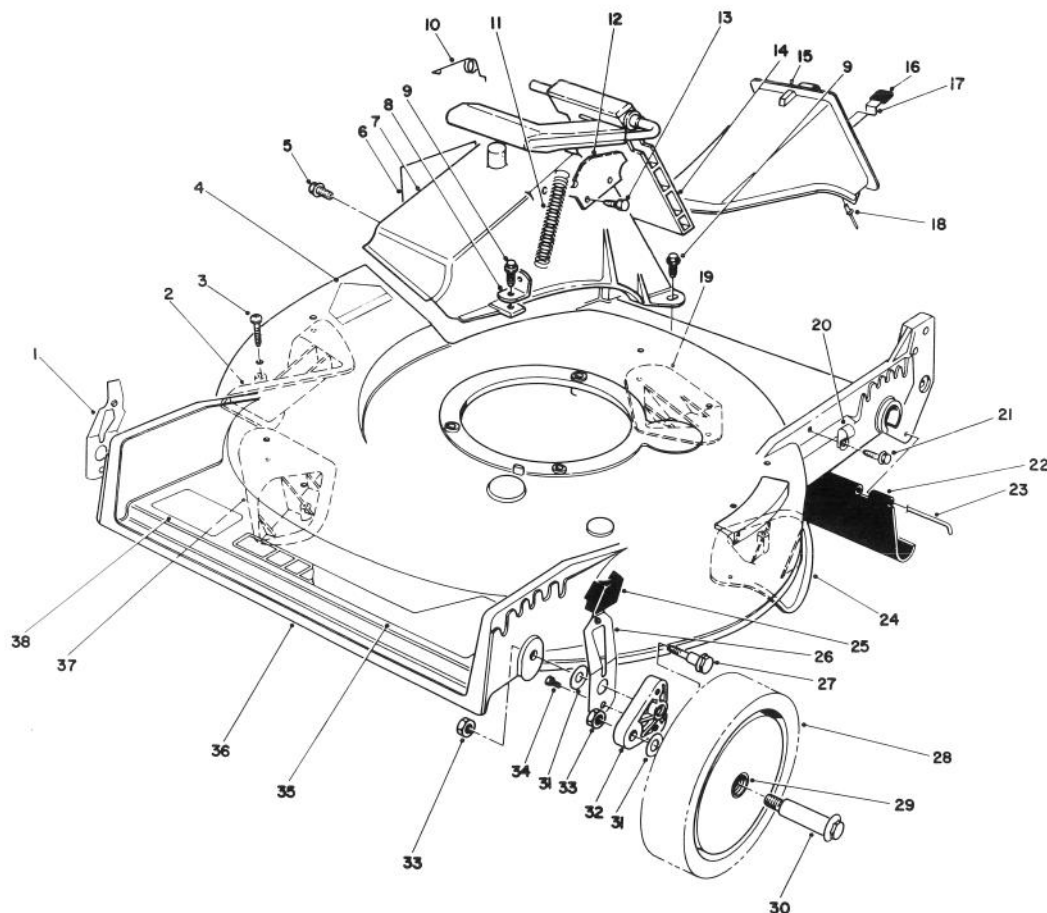


C-1125

## HOUSING ASSEMBLY (CONTINUED)

| Ref. No. | Part No. | Description                               | No. Used | Ref. No. | Part No. | Description                                            | No. Used |
|----------|----------|-------------------------------------------|----------|----------|----------|--------------------------------------------------------|----------|
| 27       | 66-0561  | Screw - Pivot                             | 4        | 34       | 32144-85 | Screw - Hex Hd. Cap                                    | 4        |
| 28       | 11-9509  | Wheel & Tire Assembly<br>(Incl. Ref. #29) | 4        | 35       | 76-1950  | Decal - Deck                                           | 1        |
| 29       | 27-6250  | Bushing - Wheel                           | 8        | 36       | 14-3499  | Housing Assembly<br>(Incl. Ref. #2-4, 19, 24,<br>& 37) | 1        |
| 30       | 27-6231  | Bolt - Wheel                              | 4        | 37       | 76-2120  | Plate - Kicker Rt. Front                               | 1        |
| 31       | 40-1940  | Washer - Wheel                            | 8        | 38       | 71-0600  | Decal - Toro                                           | 1        |
| 32       | 66-0580  | Arm - Pivot                               | 4        |          |          |                                                        |          |
| 33       | 52-3620  | Nut - Lock                                | 8        |          |          |                                                        |          |

\*Not Illustrated

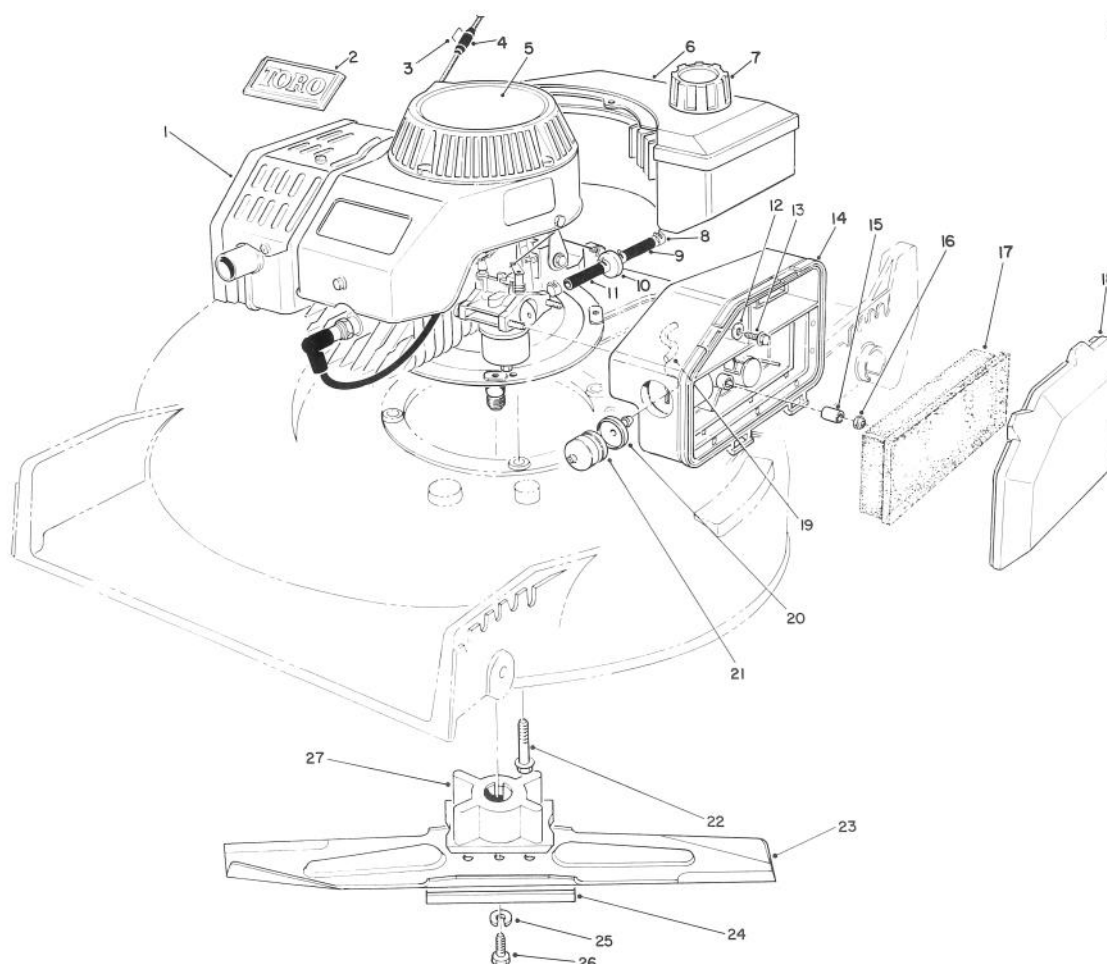


C-0608

## ENGINE ASSEMBLY

| Ref. No. | Part No. | Description            | No. Used | Ref. No. | Part No. | Description                | No. Used |
|----------|----------|------------------------|----------|----------|----------|----------------------------|----------|
| 1        | 51-0413  | Engine (Complete)      | 1        | 15       | 62-3980  | Sleeve                     | 2        |
| 2        | 46-8290  | Plate - Toro Logo      | 1        | 16       | 50-7180  | Nut - Lock                 | 2        |
| †3       |          | Staple                 | 1        | 17       | 63-9380  | Foam Element - Air Cleaner | 1        |
| 4        | 81-3980  | Stop - Rope            | 1        | 18       | 63-9340  | Cover - Air Cleaner        | 1        |
| 5        | 66-0510  | Decal - Recoil         | 1        | 19       | 44-3172  | Hose - Primer              | 1        |
| 6        | 81-0042  | Fuel Tank Assembly     | 1        | 20       | 44-2750  | Body - Primer              | 1        |
| 7        | 55-3575  | Gas Cap Assembly       | 1        | 21       | 66-7460  | Bulb - Primer              | 1        |
| 8        | 2412-95  | Clamp - Fuel Line      | 4        | 22       | 66-9300  | Screw - Hex Flange Hd.     | 3        |
| 9        | 51-3215  | Line - Fuel            | 1        | 23       | 14-1659  | Blade - 21"                | 1        |
| 10       | 56-6360  | Filter - Fuel          | 1        |          |          | (Incl. Ref. #24)           | 1        |
| 11       | 51-3216  | Line - Fuel            | 1        | 24       | 80-0510  | Stiffener - Blade          | 1        |
| 12       | 3256-16  | Washer - Flat          | 1        | 25       | 3253-22  | Washer - Lock              | 1        |
| 13       | 51-2690  | Screw - Hex Washer Hd. | 1        | 26       | 26-0670  | Screw - Blade              | 1        |
| 14       | 63-9330  | Air Cleaner            | 1        | 27       | 62-7540  | Retainer - Blade           | 1        |


†Obtain Locally

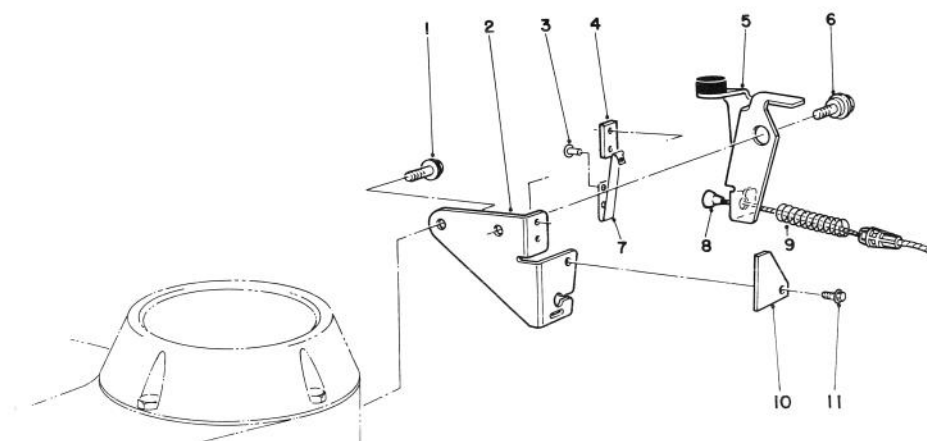

## BRAKE ASSEMBLY

C-0531

| Ref. No. | Part No. | Description             | No. Used | Ref. No. | Part No.  | Description          | No. Used |
|----------|----------|-------------------------|----------|----------|-----------|----------------------|----------|
| 1        | 46-0790  | Screw - Self Tapping    | 1        | 7        | 60-9010   | Strap - Ground       | 1        |
| 2        | 84-7820  | Plate - Mounting        | 1        | 8        | 85-6901   | Cable - Brake        | 1        |
| 3        | 3290-459 | Rivet                   | 2        | 9        | 66-5370   | Spring - Compression | 1        |
| 4        | 77-5260  | Strap - Insulation      | 1        | 10       | 53-4690   | Stop - Ground Strap  | 1        |
| 5        | 66-5380  | Brake Plate Assembly    | 1        | 11       | 32144-112 | Screw - Self Tapping | 1        |
| 6        | 56-6190  | Screw - Shoulder Metric | 1        |          |           |                      |          |

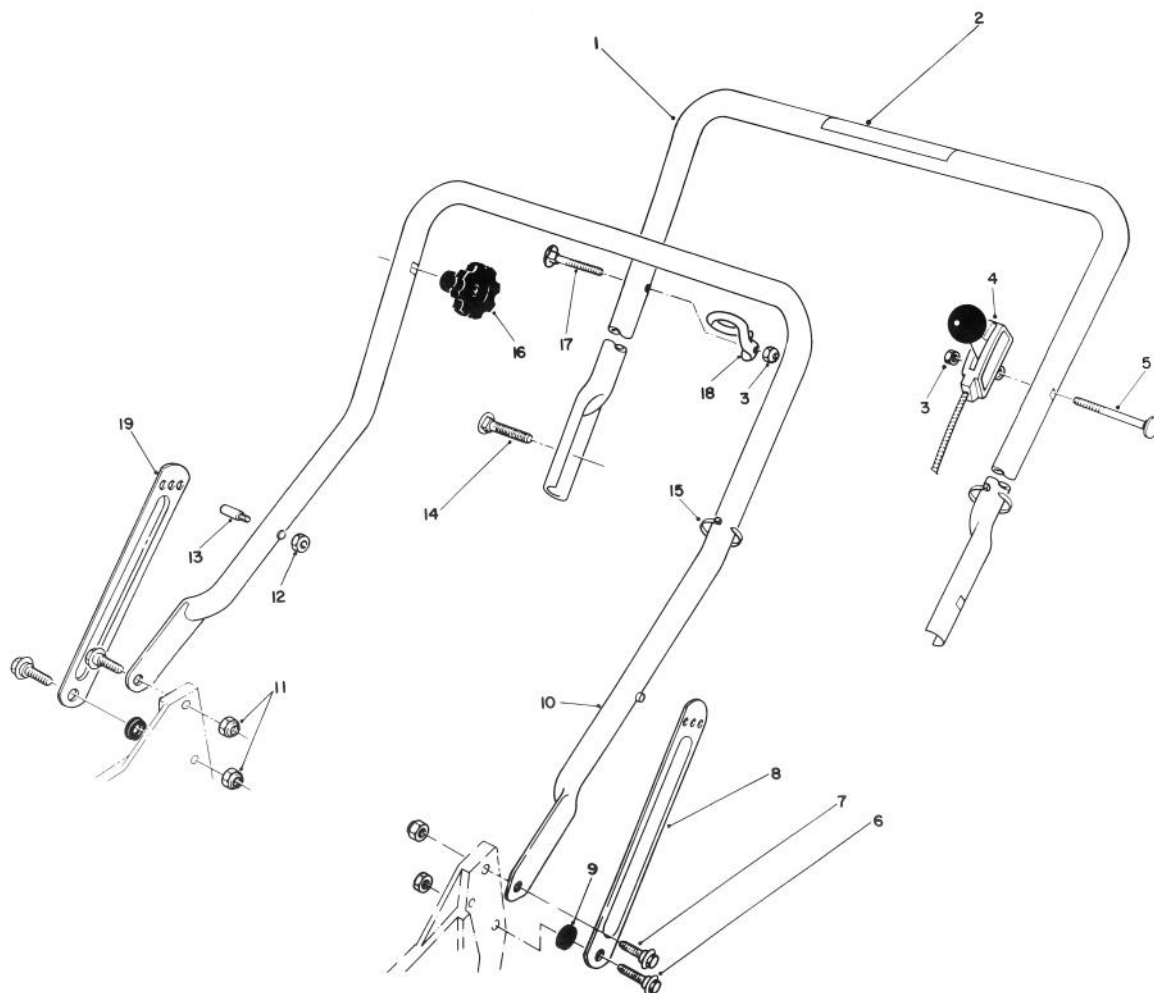


C-1126

## HANDLE ASSEMBLY

| Ref. No. | Part No. | Description                                                                       | No. Used | Ref. No. | Part No. | Description           | No. Used |
|----------|----------|-----------------------------------------------------------------------------------|----------|----------|----------|-----------------------|----------|
| 1        | 13-2319  | Handle - Upper<br>(Incl Ref. #2)                                                  | 1        | 9        | 3-3287   | Spacer                | 2        |
| 2        | 63-8540  | Decal - Warning                                                                   | 1        | 10       | 43-1361  | Lower Handle Assembly | 1        |
| 3        | 3296-42  | Locknut                                                                           | 2        | 11       | 3296-29  | Locknut               | 4        |
| 4        | 84-5660  | Control - Throttle<br>(Bend Type #1)<br>(Sheath Lg. 42 5/8")<br>(Wire Lg. 1-3/4") | 1        | †12      | 3296-47  | Locknut               | 2        |
| 5        | 46-6430  | Screw - Handle                                                                    | 1        | †13      | 49-2750  | Pin - Handle          | 2        |
| 6        | 27-7210  | Screw - Shoulder                                                                  | 2        | 14       | 17-9421  | Screw - Handle        | 2        |
| 7        | 27-7211  | Screw - Shoulder                                                                  | 2        | 15       | 3290-378 | Tie - Cable           | 2        |
| 8        | 84-8360  | Latch - Handle L.H.                                                               | 1        | 16       | 19-4050  | Knob - Handle Release | 2        |
|          |          |                                                                                   |          | 17       | 46-6433  | Screw - Handle        | 1        |
|          |          |                                                                                   |          | 18       | 46-8080  | Guide - Rope          | 1        |
|          |          |                                                                                   |          | 19       | 84-8400  | Latch - Handle R.H.   | 1        |

†Service Replacement Parts

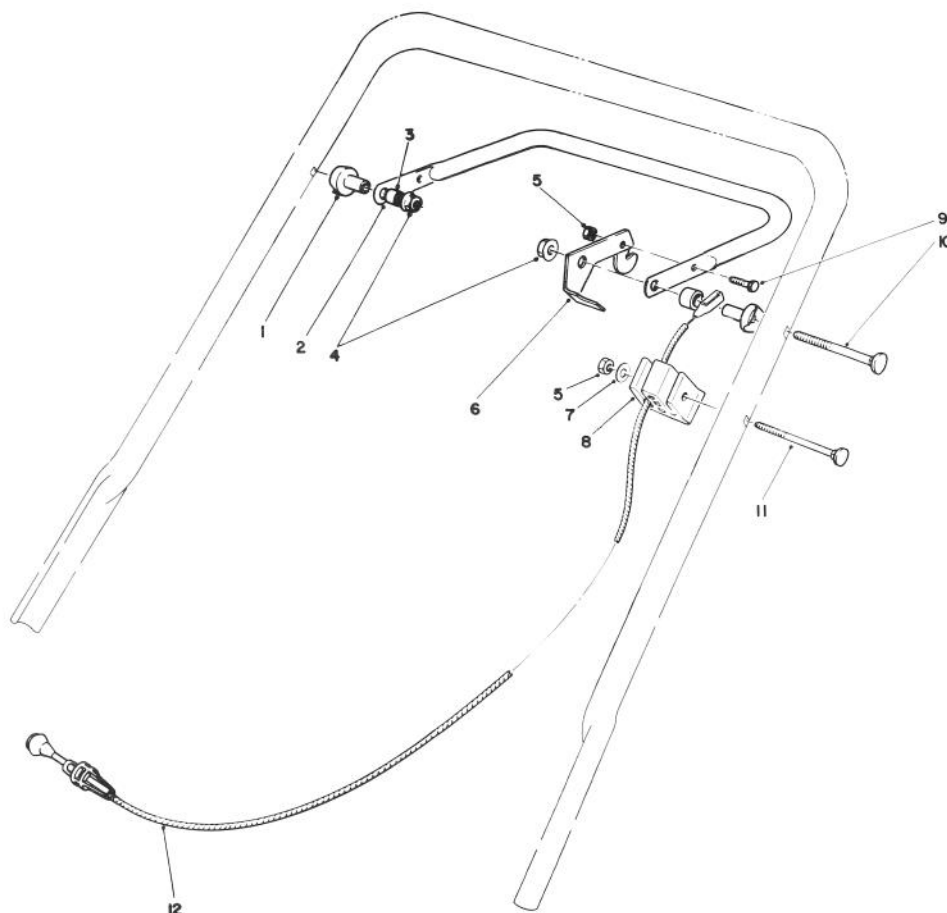


C-1127

## TRACTION CONTROL ASSEMBLY

| Ref. No. | Part No. | Description      | No. Used |
|----------|----------|------------------|----------|
| 1        | 49-1630  | Support - Spacer | 2        |
| 2        | 71-3080  | Bar - Control    | 1        |
| 3        | 256-276  | Spacer - Nylon   | 2        |
| 4        | 3296-58  | Locknut          | 2        |
| 5        | 3296-42  | Locknut          | 2        |
| 6        | 66-5350  | Lever - Control  | 1        |

| Ref. No. | Part No. | Description        | No. Used |
|----------|----------|--------------------|----------|
| 7        | 3256-22  | Washer - Flat      | 1        |
| 8        | 46-6980  | Support - Cable    | 1        |
| 9        | 321-3    | Capscrew - Hex Hd. | 1        |
| 10       | 17-9421  | Screw - Handle     | 2        |
| 11       | 46-6434  | Screw - Handle     | 1        |
| 12       | 85-6901  | Cable - Brake      | 1        |

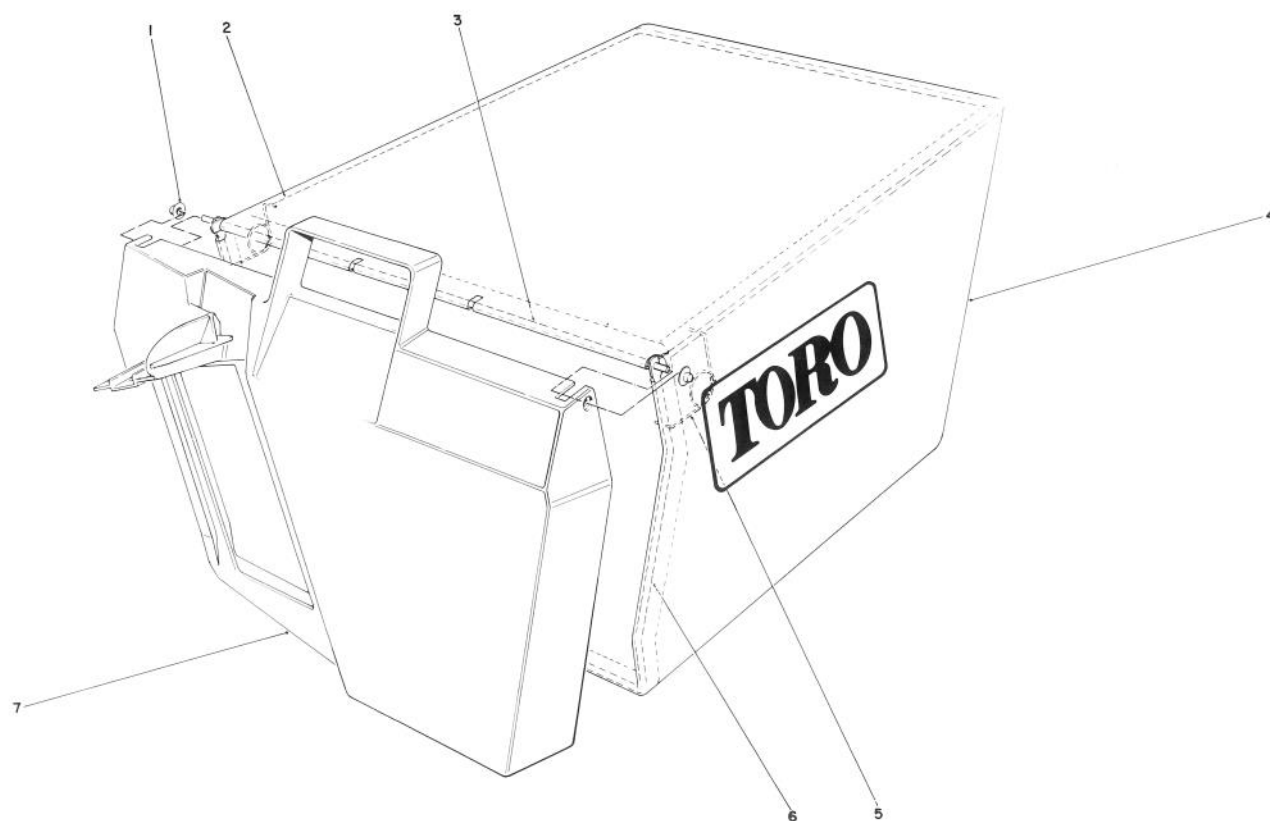


C-0301

## GRASS BAG ASSEMBLY 11-0159

| Ref. No. | Part No. | Description       | No. Used |
|----------|----------|-------------------|----------|
| 1        | 3290-422 | Nut - Push        | 2        |
| 2        | 42-4030  | Bag Frame - Upper | 1        |
| 3        | 33-4820  | Hinge - Bag Door  | 1        |
| 4        | 44-0522  | Bag - Grass       | 1        |

| Ref. No. | Part No. | Description      | No. Used |
|----------|----------|------------------|----------|
| 5        | 36-6910  | Spring           | 2        |
| 6        | 43-0030  | Frame - Bag      | 1        |
| 7        | 36-1332  | Door - Grass Bag | 1        |

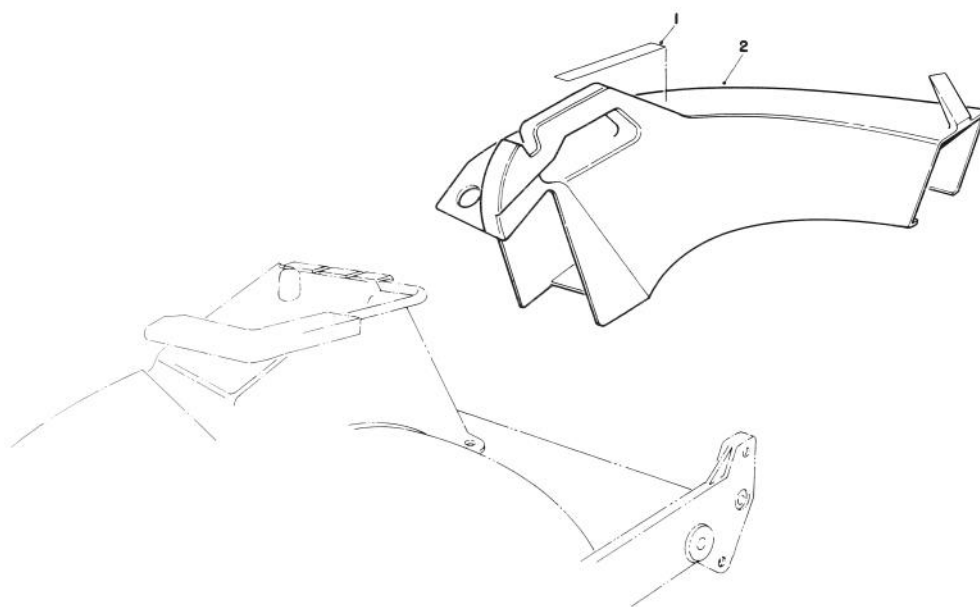


T-0716

## SIDE DISCHARGE CHUTE MODEL NO 59168 (OPTIONAL)

| Ref. No. | Part No. | Description                          | No. Used |
|----------|----------|--------------------------------------|----------|
| 1        | 76-4780  | Decal - Caution                      | 1        |
| 2        |          | Chute - Discharge<br>(Incl. Ref. #1) | 1        |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-------------|----------|
|          |          |             |          |

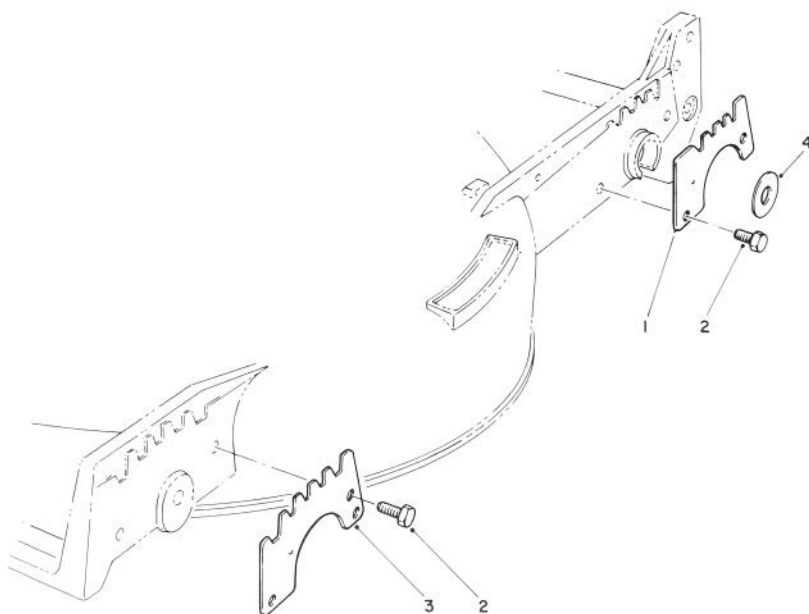


C-0304

## WEAR PLATE MODEL NO. 49-4080 (OPTIONAL)

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 1        | 49-4070  | Plate - Rear Wear    | 2        |
| 2        | 32104-17 | Thread Forming Screw | 8        |

| Ref. No. | Part No. | Description        | No. Used |
|----------|----------|--------------------|----------|
| 3        | 43-5050  | Plate - Wear Front | 2        |
| 4        | 33-0390  | Washer             | 2        |

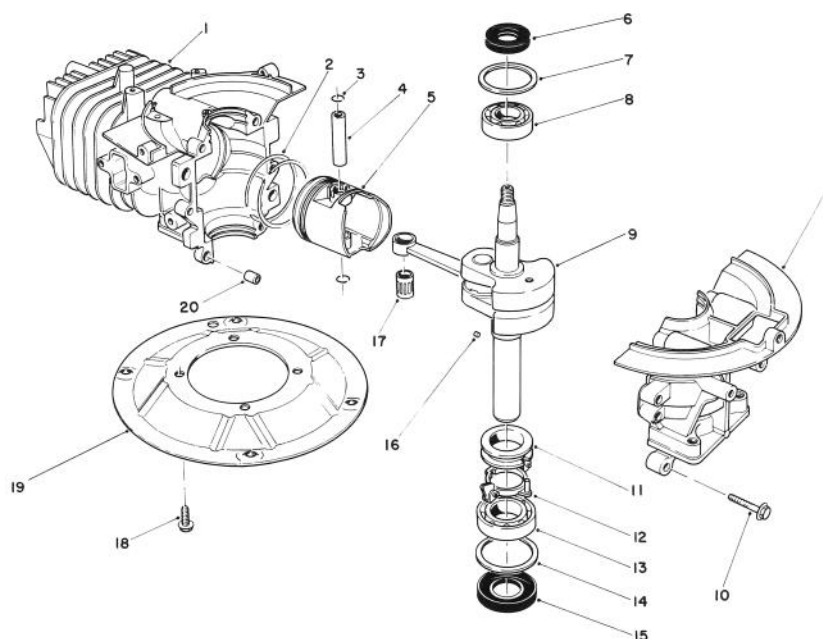


## CRANK SHAFT ASSEMBLY (Model No. 47PM1-1)

C-0190

| Ref. No. | Part No. | Description                        | No. Used |
|----------|----------|------------------------------------|----------|
| 1        | 81-2800  | Crankcase/Cylinder Ass'y           | 1        |
| 2        | 81-0590  | Ring Set                           | 1        |
| 3        | 81-0620  | Circlip                            | 2        |
| 4        | 81-0600  | Pin - Wrist                        | 1        |
| 5        | 81-0580  | Piston (58mm)                      | 1        |
| 6        | 81-0720  | Oil Seal - Upper                   | 1        |
| 7        | 81-0710  | Thrust Washer - Upper              | 1        |
| 8        | 81-0690  | Bearing - Upper (20mm)             | 1        |
| 9        | 81-4600  | Crankshaft/Connecting Rod Assembly | 1        |
| 10       | 81-0540  | Bolt (30mm Lg.)                    | 6        |

| Ref. No. | Part No. | Description            | No. Used |
|----------|----------|------------------------|----------|
| 11       | 81-0770  | Spacer - Governor      | 1        |
| 12       | 81-0750  | Bracket - Governor Arm | 1        |
| 13       | 81-0700  | Bearing - Lower (25mm) | 1        |
| 14       | 81-0730  | Thrust Washer - Lower  | 1        |
| 15       | 81-0740  | Oil Seal - Lower       | 1        |
| 16       | 81-0760  | Pin - Crankshaft       | 1        |
| 17       | 81-0610  | Bearing - Wrist Pin    | 1        |
| 18       | 81-0570  | Bolt (20mm Lg.)        | 4        |
| 19       | 81-0560  | Plate - Mounting       | 1        |
| 20       | 81-0520  | Pin - Crankcase        | 2        |
| *        | 12-7699  | Short Block Assembly   | 1        |

\*Not Illustrated

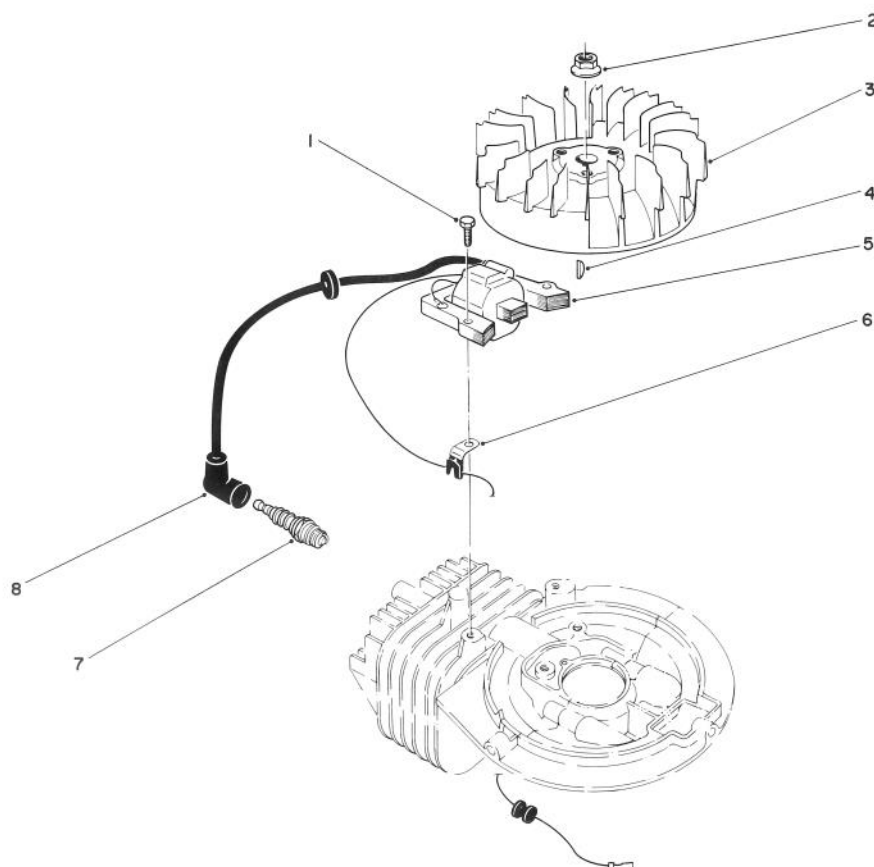


C-0176

## IGNITION ASSEMBLY (Model No. 47PM1-1)

| Ref. No. | Part No. | Description            | No. Used | Ref. No. | Part No. | Description        | No. Used |
|----------|----------|------------------------|----------|----------|----------|--------------------|----------|
| 1        | 81-5680  | Capscrew - Hex Hd.     | 2        | 6        | 81-1480  | Clamp              | 1        |
| 2        | 81-1330  | Nut                    | 1        | 7        | 81-0181  | Spark Plug         | 1        |
| 3        | 81-2810  | Flywheel - Magneto     | 1        | 8        | 81-1500  | Cover - Spark Plug | 1        |
| 4        | 81-2370  | Key - Flywheel         | 1        | *        | 41-7650  | Puller - Flywheel  | 1        |
| 5        | 81-2820  | Coil/Ignition Assembly | 1        |          |          |                    |          |

\*Not Illustrated

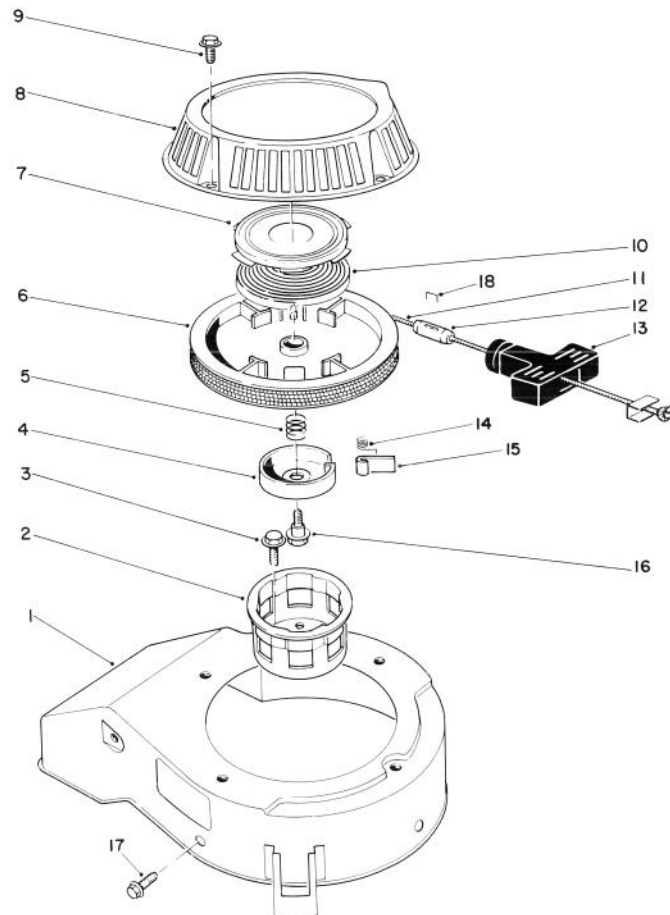


C-0178

## RECOIL ASSEMBLY (Model No. 47PM1-1)

| Ref. No. | Part No. | Description                  | No. Used | Ref. No. | Part No. | Description                              | No. Used |
|----------|----------|------------------------------|----------|----------|----------|------------------------------------------|----------|
| 1        | 81-2070  | Cover - Cooling Fan          | 1        | 13       | 81-1630  | Handle - Recoil                          | 1        |
| 2        | 81-1290  | Pulley - Starter Cup         | 1        | 14       | 81-1220  | Spring - Dog                             | 1        |
| 3        | 81-1300  | Bolt (16mm Lg.)              | 3        | 15       | 81-1230  | Dog                                      | 1        |
| 4        | 81-1250  | Retainer - Dog               | 1        | 16       | 81-1260  | Bolt - Shoulder                          | 1        |
| 5        | 81-1240  | Spring - Compression         | 1        | 17       | 81-1170  | Bolt - Self Tapping<br>(15mm Lg.)        | 3        |
| 6        | 81-1210  | Reel - Rope Pulley           | 1        | †18      |          | Staple                                   | 1        |
| 7        |          | Retainer Cup - Recoil Spring | 1        | *        | 81-2040  | Starter Assembly<br>(Incl. Ref. #4-16)   | 1        |
| 8        | 81-2090  | Case - Recoil                | 1        | *        | 81-2300  | Spring & Retainer<br>(Incl. Ref. #6 & 9) | 1        |
| 9        | 81-1280  | Bolt                         | 4        |          |          |                                          |          |
| 10       |          | Spring - Recoil              | 1        |          |          |                                          |          |
| 11       | 81-1270  | Rope                         | 1        |          |          |                                          |          |
| 12       | 81-3980  | Stop - Recoil                | 1        |          |          |                                          |          |


\*Not Illustrated  
†Obtain Locally

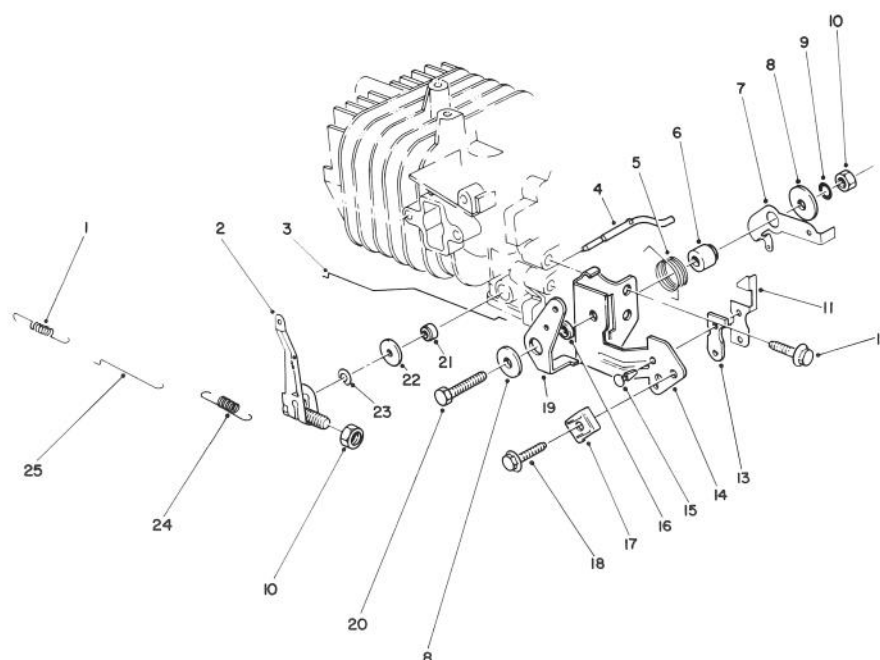

C-0192

## GOVERNOR ASSEMBLY (Model No. 47PM1-1)

| Ref. No. | Part No. | Description                    | No. Used | Ref. No. | Part No. | Description                   | No. Used |
|----------|----------|--------------------------------|----------|----------|----------|-------------------------------|----------|
| 1        | 81-0920  | Spring - Carburetor Rod        | 1        | 13       | 81-1830  | Insulator - Kill Switch       | 1        |
| 2        | 81-5420  | Governor Arm/Bolt Ass'y        | 1        | 14       | 81-2420  | Bracket - Throttle Control    | 1        |
| 3        | 81-5410  | Rod - Choke                    | 1        | 15       | 81-1850  | Rivet - Kill Switch           | 2        |
| 4        | 81-2880  | Shaft - Governor               | 1        | 16       | 81-2470  | Spacer - Choke Control Lever  | 1        |
| 5        | 81-2460  | Spring - Choke Control Lever   | 1        | 17       | 81-2430  | Clamp - Cable                 | 1        |
| 6        | 81-1770  | Spacer - Governor Spring Lever | 1        | 18       | 50-0130  | Bolt - Cable Clamp            | 1        |
| 7        | 81-2850  | Lever - Governor Spring        | 1        | 19       | 81-1710  | Lever - Choke Control         | 1        |
| 8        | 81-1750  | Washer - Choke Control Lever   | 2        | 20       | 81-1730  | Bolt - Throttle Control Brkt. | 1        |
| 9        | 81-1450  | Washer - Lock                  | 1        | 21       | 81-0850  | Oil Seal - Governor Shaft     | 1        |
| 10       | 81-0900  | Nut                            | 2        | 22       | 81-0860  | Washer                        | 1        |
| 11       | 81-1840  | Terminal - Kill Switch         | 1        | 23       | 81-0870  | E-Ring                        | 1        |
| 12       | 81-1170  | Bolt - Self Tapping (15mm Lg.) | 1        | 24       | 81-2830  | Spring - Governor             | 1        |
|          |          |                                |          | 25       | 81-0910  | Rod - Carburetor              | 1        |

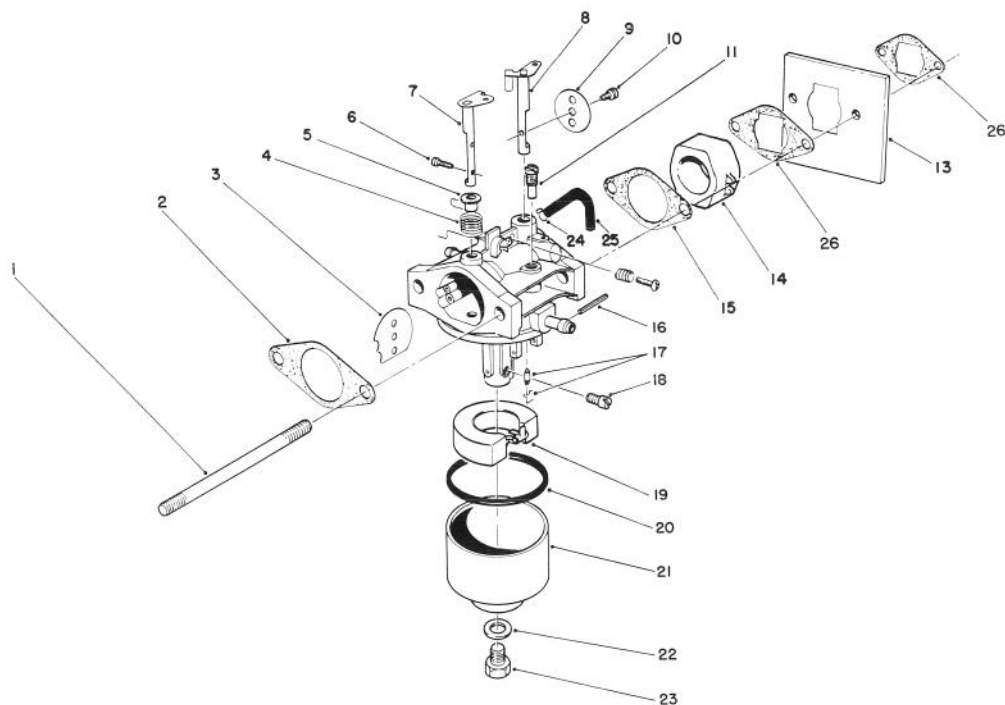


C-0191

## CARBURETOR ASSEMBLY (Model No. 47PM1-1)

| Ref. No. | Part No. | Description              | No. Used |
|----------|----------|--------------------------|----------|
| 1        | 81-5450  | Stud Bolt - Carburetor   | 2        |
| 2        | 81-0090  | Gasket                   | 2        |
| 3        | 81-0240  | Valve - Choke            | 1        |
| 4        | 81-0230  | Spring - Choke           | 1        |
| 5        | 81-0220  | Bushing - Choke Valve    | 1        |
| 6        | 81-2160  | Screw                    | 2        |
| 7        | 81-1950  | Shaft - Choke            | 1        |
| 8        | 81-0250  | Shaft - Throttle         | 1        |
| 9        | 81-0260  | Valve - Throttle         | 1        |
| 10       | 81-0270  | Screw - Throttle Valve   | 1        |
| 11       | 81-1030  | Jet - Pilot (#40)        | 1        |
| 13       | 81-5490  | Shield - Carburetor      | 1        |
| 14       | 81-5440  | Insulator - Carburetor   | 1        |
| 15       | 81-0780  | Gasket                   | 1        |
| 16       | 81-5600  | Pin                      | 1        |
| 17       | 81-4910  | Needle Valve/Spring Wire | 1        |
| 18       | 81-1060  | Jet - Main (#75)         | 1        |

| Ref. No. | Part No. | Description                                         | No. Used |
|----------|----------|-----------------------------------------------------|----------|
| *        | 81-2340  | Jet - Main (#72.5) High Alt., Above 6000 (Optional) | 1        |
| 19       | 81-0970  | Float                                               | 1        |
| 20       | 81-1010  | Gasket - Float Bowl                                 | 1        |
| 21       | 81-5660  | Bowl - Float                                        | 1        |
| 22       | 81-1020  | Gasket - Bowl Screw                                 | 1        |
| 23       | 81-5670  | Screw - Bowl                                        | 1        |
| 24       | 81-5460  | Clamp - Vent Tube                                   | 1        |
| 25       | 81-5470  | Tube - Vent                                         | 1        |
| 26       | 81-2320  | Gasket                                              | 2        |
| *        | 12-6379  | Carburetor Kit (Incl. Ref. #2, 15, 17, 20, & 22)    | 1        |
| *        | 81-5430  | Carburetor Assembly - Complete                      | 1        |
| *        | 81-5810  | Needle Valve Seat Kit (Incl. Ref. #17)              | 1        |

\*Not Illustrated

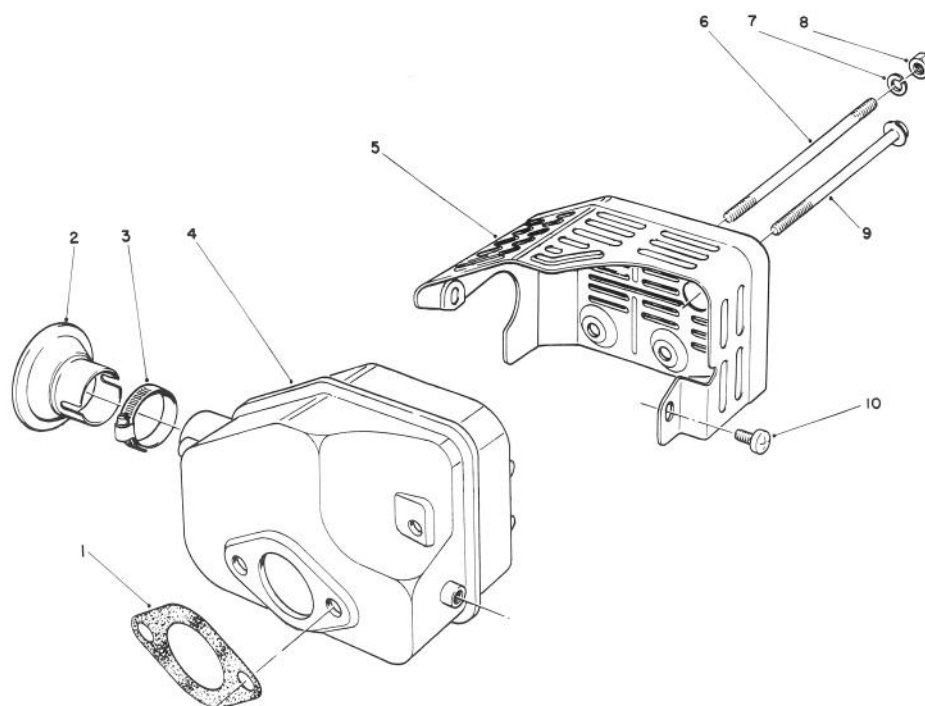

C-0667

## MUFFLER ASSEMBLY (Model No. 47PM1-1)

| Ref. No. | Part No. | Description      | No. Used | Ref. No. | Part No. | Description          | No. Used |
|----------|----------|------------------|----------|----------|----------|----------------------|----------|
| 1        | 81-1080  | Gasket - Muffler | 1        | 6        | 81-1100  | Bolt                 | 2        |
| *2       | 81-0200  | Spark Arrester   | 1        | 7        | 81-1120  | Washer - Lock        | 2        |
| †3       |          | Clamp            | 1        | 8        | 81-1110  | Nut                  | 2        |
| 4        | 81-5690  | Muffler          | 1        | 9        | 81-1150  | Bolt - Self Tapping  | 1        |
| 5        | 81-2450  | Cover - Muffler  | 1        | 10       | 81-1140  | Screw - Phillips Hd. | 2        |

\*Optional Equipment

†Obtain Locally

## PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

## COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

## MAINTENANCE RECORD

[illegible]