

 


MODEL NO. 32120503-200001 & UP
 MODEL NO. 32120E03-200001 & UP
 MODEL NO. 3210B503-200001 & UP
 MODEL NO. 3210BE03-200001 & UP

**PARTS
 CATALOG**

**WHEEL HORSE®
 200 SERIES LAWN TRACTOR**

3315-195

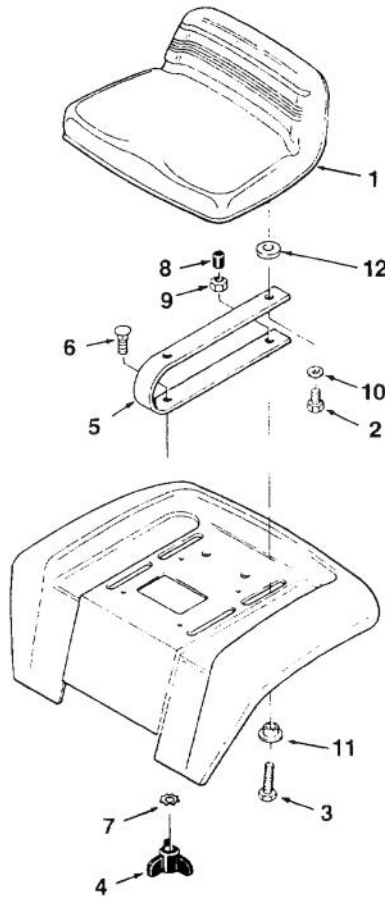


C-0897

SEAT ASSEMBLY (210-5 & 210-H)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	78-7600	Seat	1	7	78-2740	Washer - Lock	2
2	322-5	Screw - Hex. Hd.	4	8	111439	Grip	2
3	322-41	Screw - Hex. Hd.	2	9	3296-29	Nut - Lock	2
4	78-7180	Knob	2	10	3253-4	Washer - Lock	4
5	112837	Spring	2	11	105503	Spacer	2
6	3230-3	Bolt	2	12	109989	Spacer - Nylon	4

TPS

 SEAT ASSEMBLY (212-5 & 212-H)

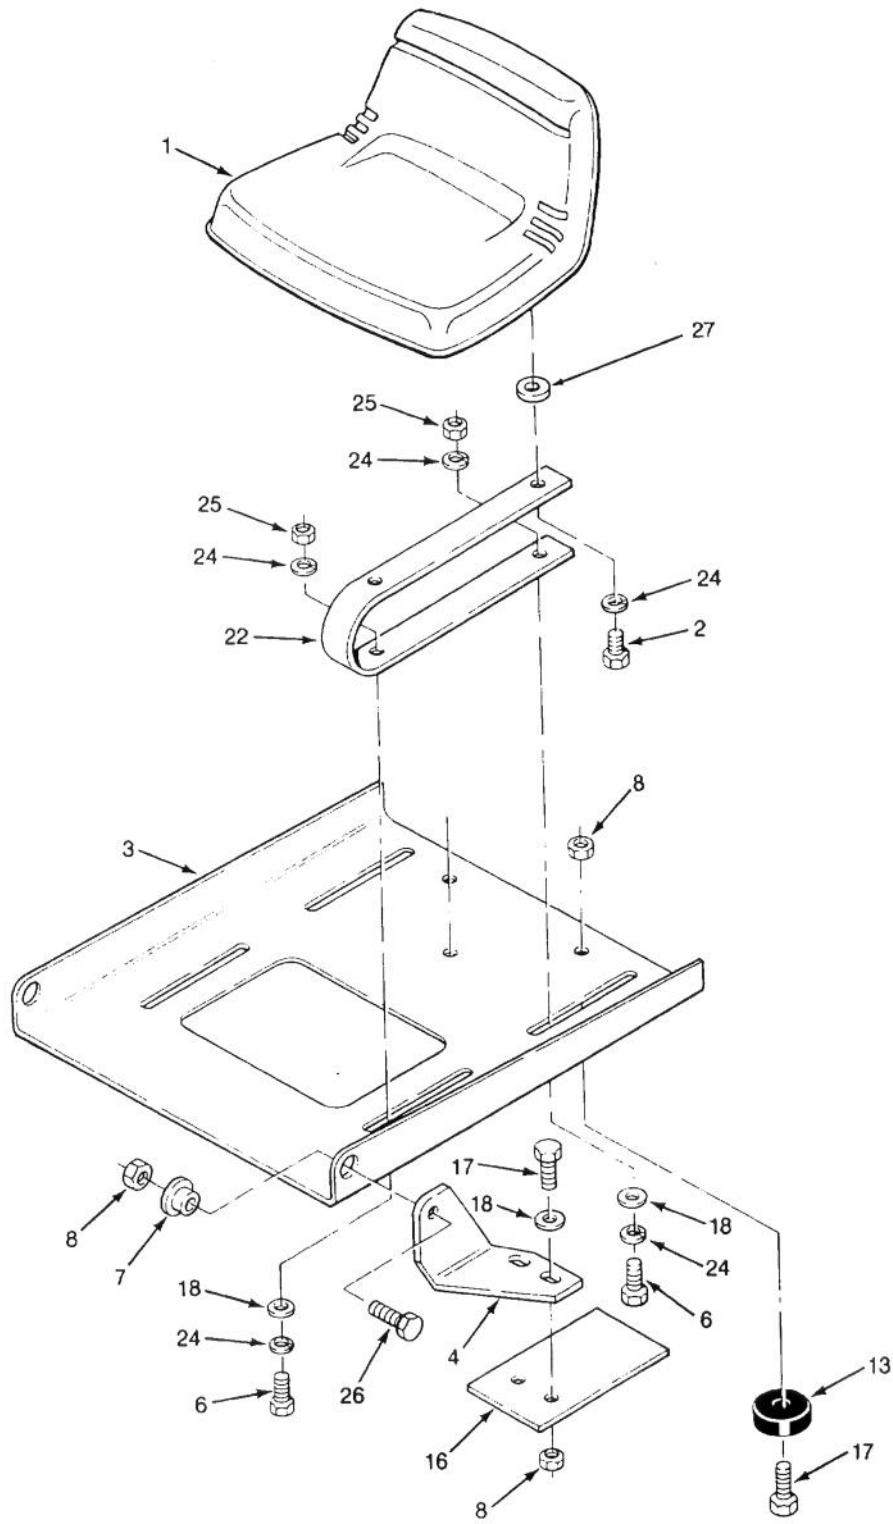


SEAT ASSEMBLY (212-5 & 212-H)

Ref. No.	Part No.	Description	No. Used
1	78-9160	Seat	1
2	322-5	Bolt	4
3	113852	Plate -- Seat Pivot	1
4	112745	Bracket -- Pivot L.H.	1
*	112744	Bracket -- Pivot R.H.	1
6	322-4	Bolt	4
7	105503	Bushing	2
8	3296-29	Nut -- Lock	8
13	108889	Bumper	2

Ref. No.	Part No.	Description	No. Used
16	112961	Plate	2
17	322-5	Bolt	6
18	3256-23	Washer	8
22	112837	Spring -- Seat	2
24	3253-4	Washer -- Lock	8
25	3217-6	Nut -- Hex.	4
26	322-6	Bolt	4
27	109989	Spacer -- Nylon	4

*Not Illustrated

 FRAME ASSEMBLY

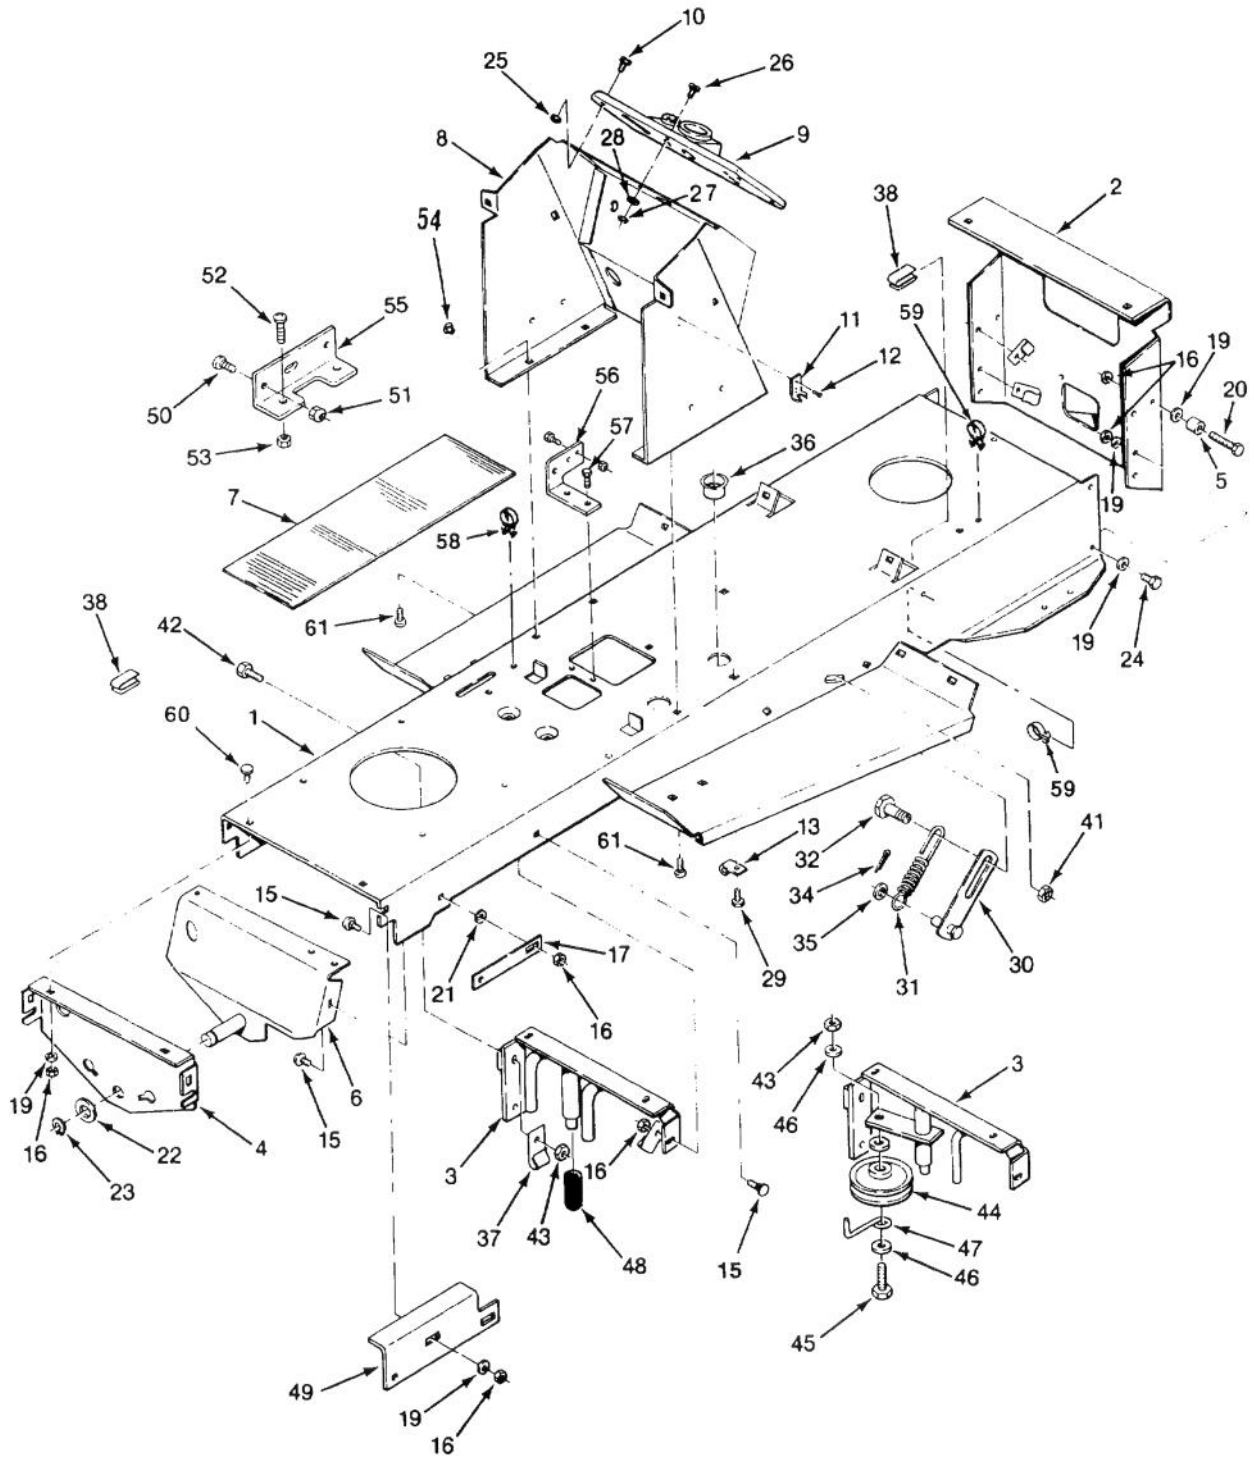


FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	78-1640	Frame	1
2	114417	Plate - Rear Drawbar	1
3	112850	Plate - Frame Support (210-H & 212-H)	1
*	114852	Plate - Frame Support (210-5 & 212-5)	1
4	111397	Plate - Front Axle Support	1
5	114610	Roller - Cam	2
6	112977	Support - Rear Axle	1
7	106488	Mat - Footrest (210-5 & 210-H)	2
*	110180	Mat - Footrest (212-5 & 212-H)	2
8	78-1820	Hoodstand (210-5 & 210-H)	1
*	78-3390	Hoodstand (212-5 & 212-H)	1
9	111467	Panel - Console	1
10	111499	Screw - Pan Hd.	6
11	117343	Keeper - Latch	2
12	117431	Rivet - Pop	4
13	111392	Clip - J	1
15	3230-16	Bolt - Carriage	5
16	3296-29	Nut - Lock	9
17	111763	Strap (210-5 & 210-H)	2
18	900037	Bolt - Carriage	1
19	3256-23	Washer	15
20	322-6	Screw - Hex. Hd.	3
21	3254-2	Washer - Lock	2
22	1278	Washer - Shim (.050")	A/R
*	5210	Washer - Shim (.015")	A/R
23	32120-93	Ring - Retaining	1
24	322-3	Screw - Hex. Hd.	4
25	915740	Nut - Hex.	4
26	910837	Screw	1
27	3217-5	Nut - Lock	1
28	3253-3	Washer - Lock	1

Ref. No.	Part No.	Description	No. Used
29	908017	Bolt	3
30	111524	Link	2
31	111527	Spring	2
32	78-1670	Cam - Adjustment	2
34	3272-16	Pin - Cotter	2
35	920242	Washer - Special	2
36	938031	Bushing	1
37	8830	Clip	1
38	113116	Retainer	2
40	908019	Bolt	1
41	109779	Nut	2
42	323-7	Bolt	1
43	3296-39	Nut - Lock	3
44	110370	Pulley - Idler (210-5 & 212-5)	1
45	323-10	Bolt	1
46	3256-24	Washer	2
47	109230	Retainer - Belt	1
48	111439	Grip	1
49	114990	Bracket - R.H. (212-5 & 212-H)	1
*	114989	Bracket - L.H. (212-5 & 212-H)	1
50	960152	Screw	2
51	3296-42	Nut - Lock	2
52	910796	Screw	2
53	915740	Nut - Lock	2
54	938050	Plug - Nylon (210-5 & 210-H) (212-5 & 212-H)	1
55	117142	Bracket - Fuse	1
56	78-2050	Bracket - Switch	1
57	926640	Screw - Machine	2
58	115860	Clip - Snap-In	1
59	115858	Clip - Snap-In	2
60	900036	Bolt - Carriage	2
61	926697	Bolt	4

*Not Illustrated

 BODY ASSEMBLY

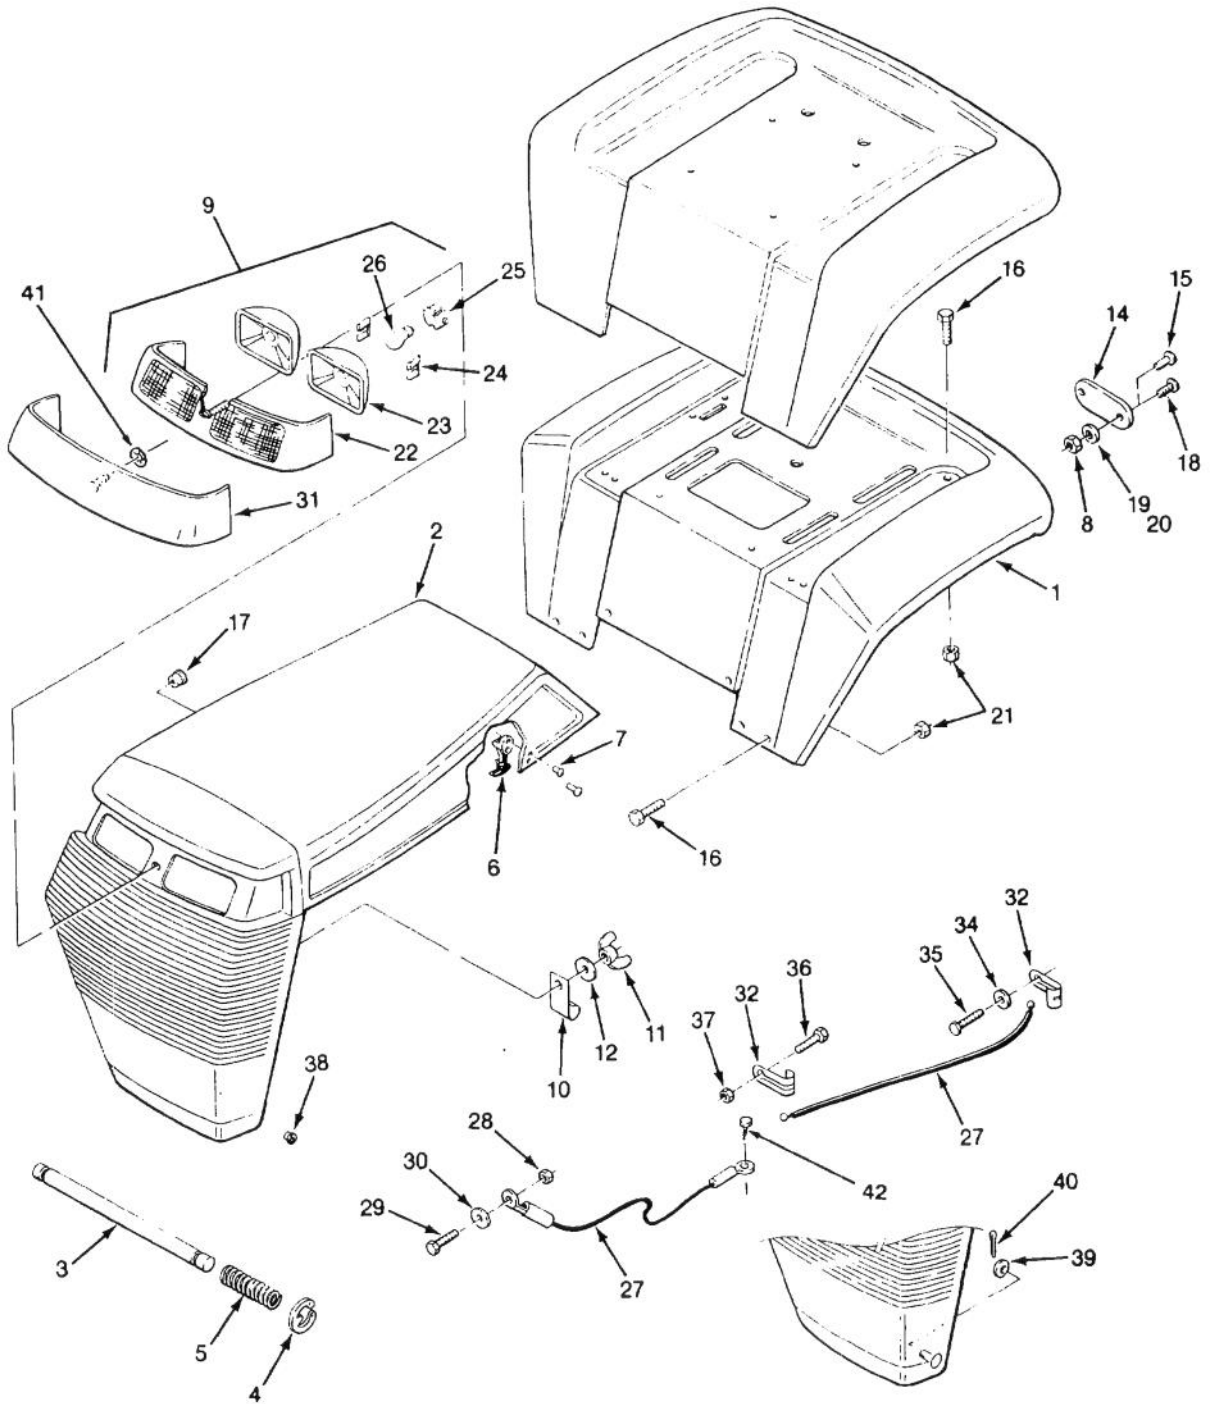


BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	78-7540	Fender (210-5 & 210-H)	1	21	915662	Nut - Lock	8
*	79-0050	Fender (212-5)	1	22	116601	Bar - Light (212-5 & 212-H)	1
*	114389	Fender (212-H)	1	23	111684	Bucket - Light (212-5 & 212-H)	2
2	78-8570	Hood & Grill (210-5 & 210-H)	1	24	111685	Retainer (212-5 & 212-H)	2
*	116800	Hood & Grill (212-5 & 212-H)	1	25	116262	Socket - Light (212-5 & 212-H)	2
3	111480	Rod (210-5 & 210-H)	1	26	7228	Bulb - Light (212-5 & 212-H)	2
4	107772	Ring - Retaining (210-5 & 210-H)	2	27	114443	Cable - Hood Lanyard (210-5 & 210-H)	1
5	111536	Spring (210-5 & 210-H)	2	*	115414	Cable - Hood Lanyard (212-5 & 212-H)	1
6	117344	Handle Assembly	2	28	915740	Nut - Lock	1
7	117432	Rivet - Pop	4	29	913111	Screw - Machine	1
8	915551	Nut (Optional)	2	30	112925	Washer - Backing	1
9	116591	Headlight Bar Assembly (Incl. Ref. #22-24 & 26) (212-5 & 212-H)	1	31	78-3210	Cover - Light Opening (210-5 & 210-H)	1
10	111392	Clip (212-5 & 212-H)	1	32	115413	Clevis (212-5 & 212-H)	2
11	32103-19	Nut - Wing (212-5 & 212-H)	1	34	920081	Washer - Lock (212-5 & 212-H)	1
12	103995	Washer - Special (212-5 & 212-H)	1	35	118060	Bolt (212-5 & 212-H)	1
14	108547	Reflector	2	36	913111	Screw (212-5 & 212-H)	1
15	109193	Rivet - Pop	4	37	915740	Nut - Lock	1
16	3230-23	Bolt - Carriage	8	38	5977	Bushing - Nyliner	2
17	938031	Bushing	1	39	3256-23	Washer	2
18	910808	Screw (Optional)	2	40	3272-6	Pin - Cotter	2
19	920004	Washer	2	41	78-7170	Nut - Push (210-5 & 210-H)	1
20	920079	Washer - Lock (Optional)	2	42	926566	Bolt (210-5 & 210-H)	1

*Not Illustrated

 ELECTRICAL SYSTEM ASSEMBLY

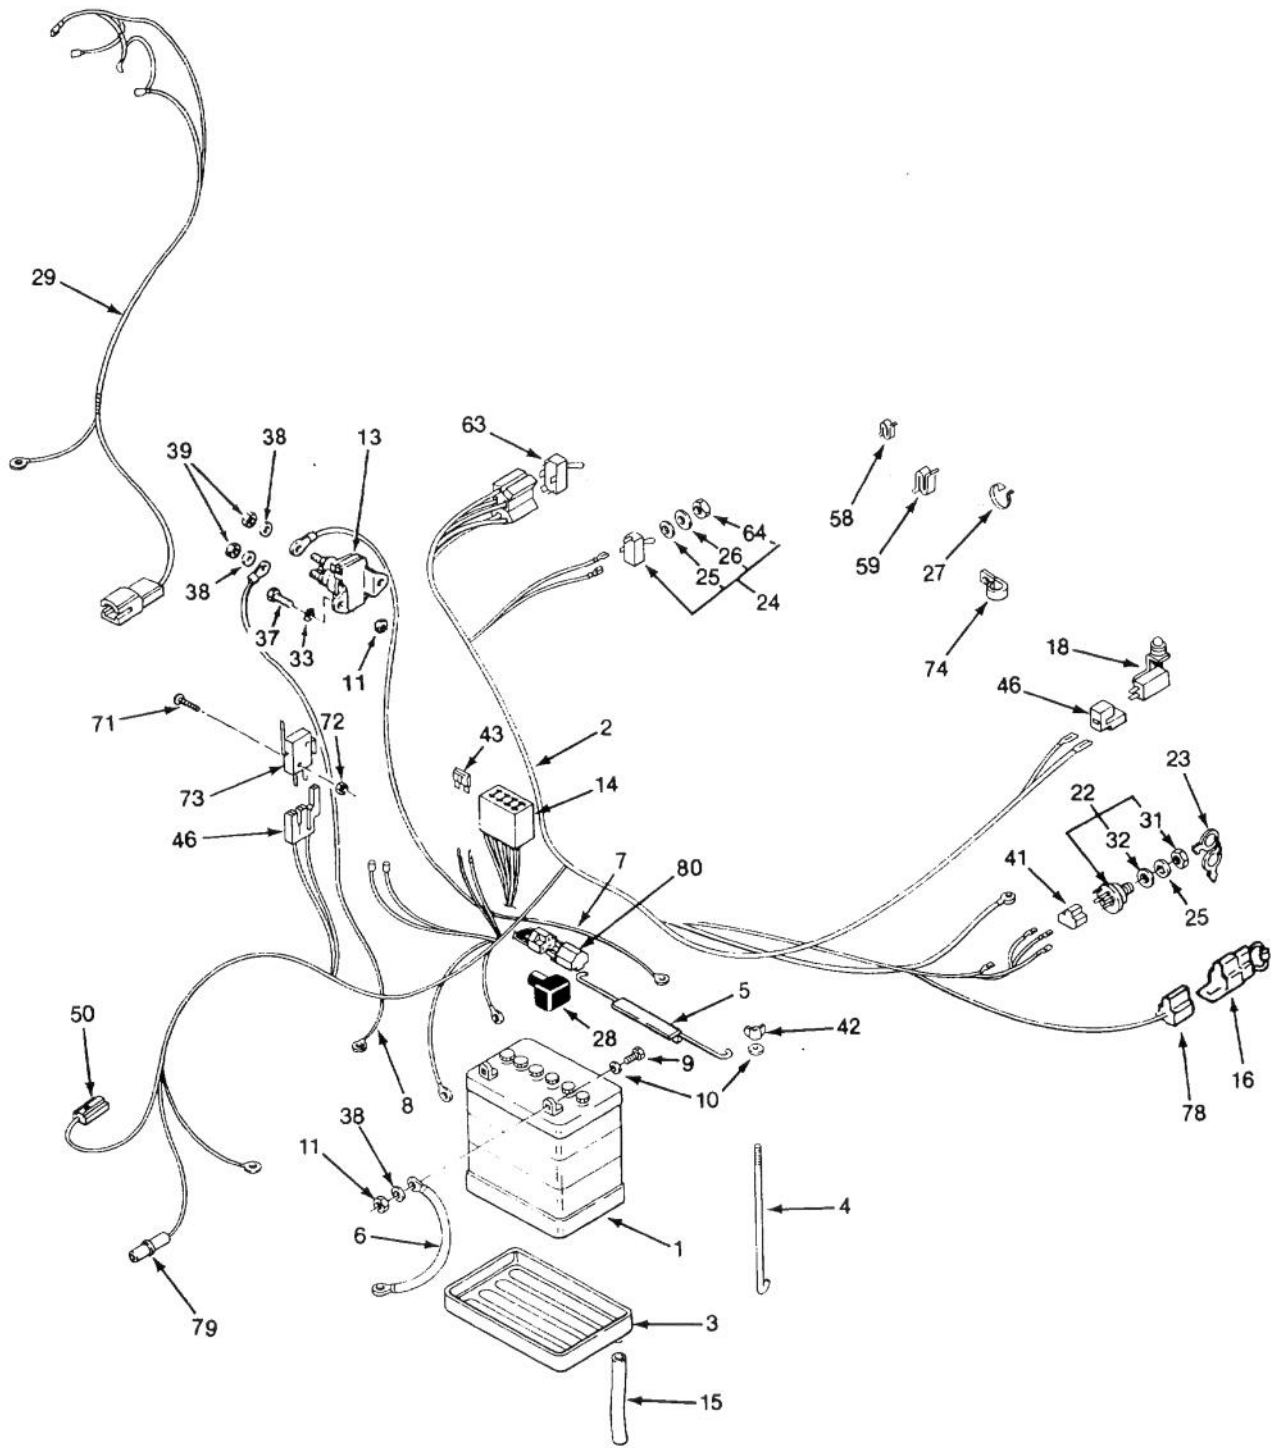


ELECTRICAL SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	104962	Battery (210-5, 210-H & 212-5)	1			(Incl. Ref. #25, 26 & 64)	1
*	105842	Battery (212-H)	1	25	920262	Washer - Special	1
2	78-1340	Harness Wire (210-5 & 210-H) (Incl. Ref. #14, 41, 46, 78 & 79)	1	26	920259	Washer - Special	1
*	79-3920	Harness Wire (212-5 & 212-H) (Incl. Ref. #14, 41 & 46)	1	27	100571	Tie - Cable	1
3	106948	Tray - Battery	1	28	109553	Cover - Battery Terminal	1
4	109547	Hook	2	29	115204	Harness - Headlight (212-5 & 212-H)	1
5	117316	Hold-Down - Battery	1	31	101884	Nut - Switch	1
6		Cable - Battery	1	32	920160	Washer - Lock	1
7	111076	Wire - Solenoid/Battery (210-5 & 210-H) (212-5 & 212-H)	2	33	3255-7	Washer - Lock	2
8	111682	Wire - Solenoid/Starter (210-5 & 210-H)	1	37	960151	Screw - Hex. Hd. (210-5 & 210-H)	1
*	112757	Wire - Solenoid/Starter (212-5 & 212-H)	1	38	3253-3	Washer - Lock	2
9	321-4	Bolt	2	39	3218-1	Nut - Jam	2
10	3256-22	Washer	6	41	105302	Connector - 5 Terminal	1
11	3217-5	Nut	5	42	32103-22	Nut - Wing	2
13	110167	Solenoid (210-5 & 210-H) (Incl. Ref. #11)	1	43	109355	Fuse - 15 Amp.	1
14	120930	Holder - Fuse	1	*	109102	Fuse - 25 Amp.	1
15	114721	Tube - Drain	1	*	NN10277	Fuse - 30 Amp. (212-5 & 212-H)	1
16	78-1630	Kit - Diode Replacement (210-5 & 210-H)	1	46	111498	Body - Connector (210-5 & 210-H) (212-5 & 212-H)	2
18	38-1420	Switch - Seat	1	50	104926	Body - Connector (212-5 & 212-H)	2
22	111216	Switch - Ignition (210-5 & 210-H) (Incl. Ref. #31-32)	1	58	8830	Clip	1
*	116338	Switch - Ignition (212-5 & 212-H) (Incl. Ref. #31-32)	1	59	3023	Clip (210-5 & 210-H) (212-5 & 212-H)	5
23	116738	Key - Ignition	2	63	78-3030	Switch - PTO	1
24	102138	Switch - Light (212-5 & 212-H)		71	910948	Screw	2
				72	915732	Nut - Lock	2
				73	115230	Switch - Clutch	1
				74	105490	Clamp	1
				78	110459	Connector - 2 Terminal (210-5 & 210-H)	1
				79	107831	Socket - Connector	1
				80	116397	Relay (210-5 & 210-H) (212-5 & 212-H)	2
				*		Wiring Harness (See pg. 67)	3

*Not Illustrated

 FRONT AXLE & STEERING ASSEMBLY

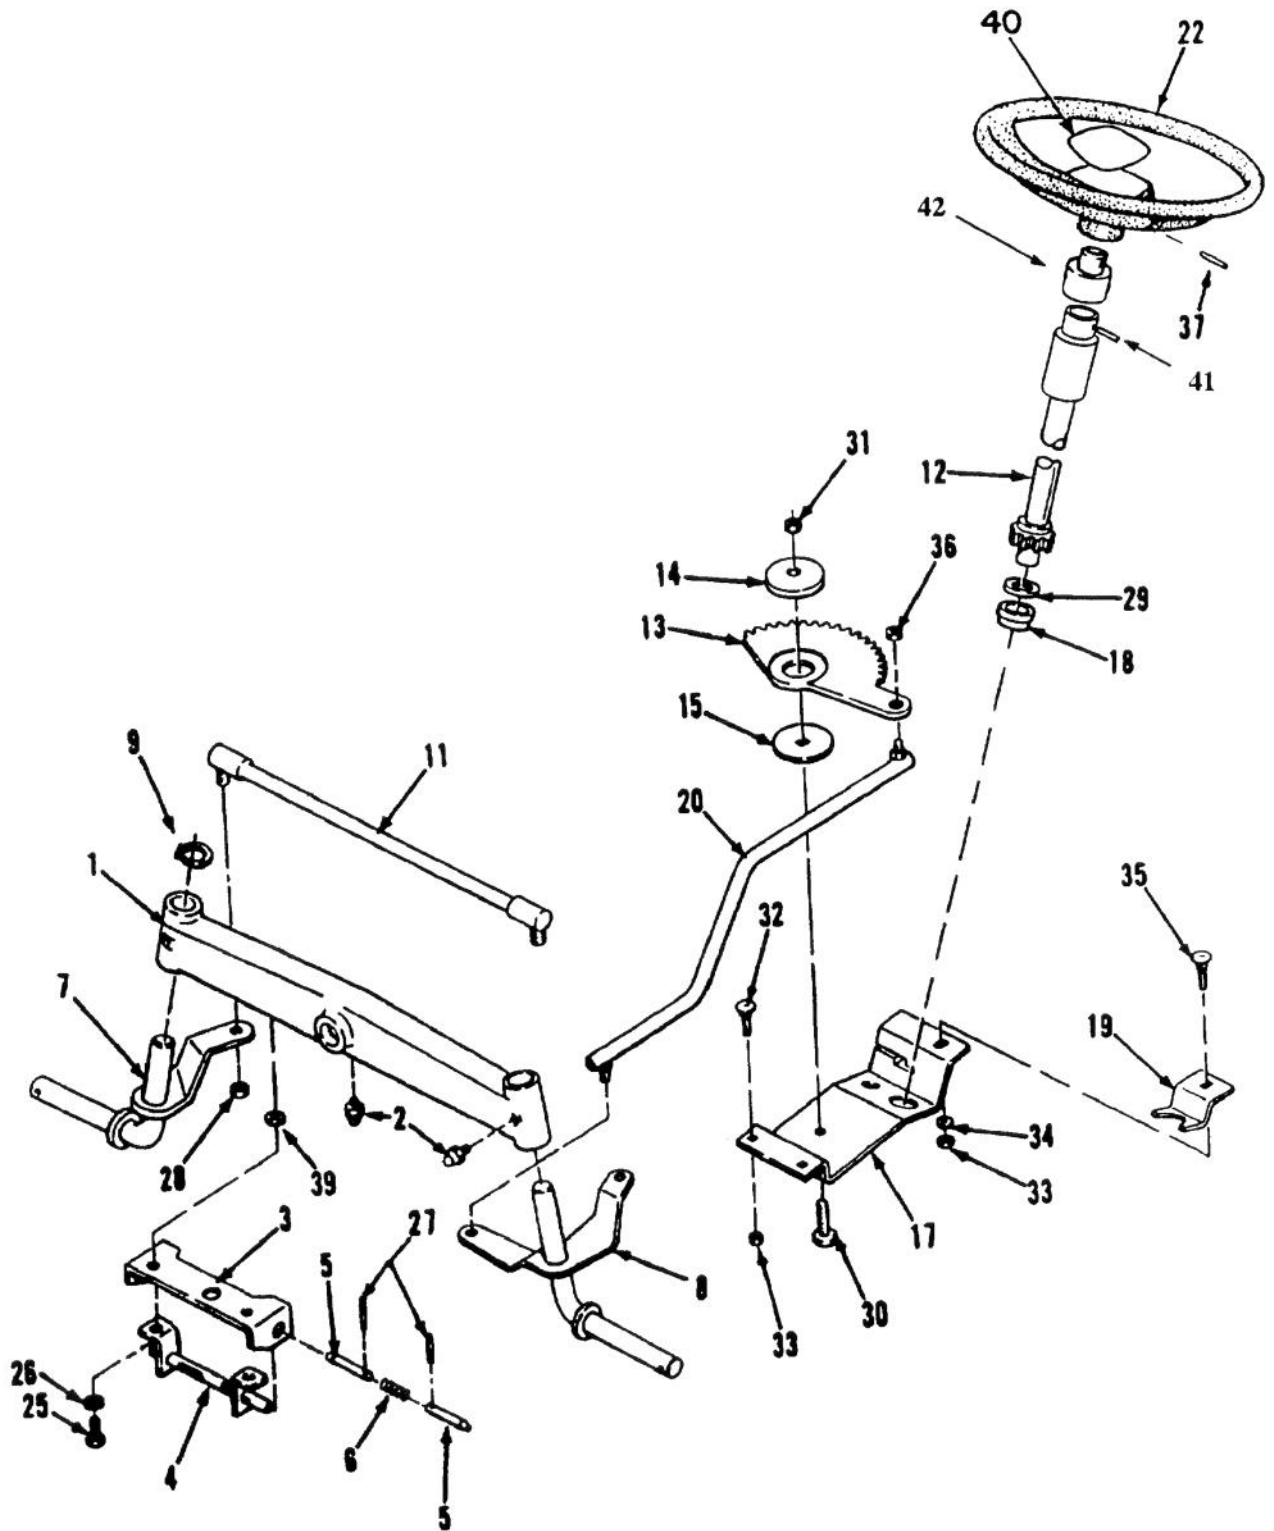


FRONT AXLE & STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	114385	Axle - Front	1	20	111423	Rod - Drag Link	1
2	302-5	Fitting - Grease	3	22	78-3100	Wheel - Steering	1
3	112847	Bracket - Support	1	25	322-4	Screw - Hex. Hd.	2
4	113044	Tube	1	26	3253-4	Washer - Lock	2
5	113030	Pin	2	27	32121-103	Pin - Spirol	2
6	111531	Spring	1	28	915001	Nut - Lock	2
7	111406	Spindle - R.H.	1	29	3765	Washer - Shim (.050")	A/R
8	111409	Spindle - L.H.	1	30	3231-28	Bolt	1
9	32120-93	Ring - Retaining	2	31	108881	Nut - Lock	1
11	112981	Rod - Tie	1	32	3230-22	Bolt	2
12	79-5660	Shaft - Pinion	1	33	3229-29	Nut - Lock	3
13	111417	Gear - Sector	1	34	3256-23	Washer	1
14	111418	Bushing - Eccentric	1	35	3230-2	Bolt	1
15	111419	Washer	1	36	915002	Nut - Lock	2
17	78-1991	Bracket - Steering Gear	1	37	933272	Pin - Spirol	1
*	78-3221	Bracket - Steering Gear (210-5 & 212-5)	1	39	2844	Washer - Special	2
		Bracket - Steering Gear (210-H & 212-H)	1	40	78-0370	Insert - Steering Wheel	1
18	110391	Bushing	1	41	32121-111	Pin - Spirol	1
19	111422	Retainer	1	42	116480	Coupler - Shaft	1

*Not Illustrated

 WHEEL & TIRE ASSEMBLY

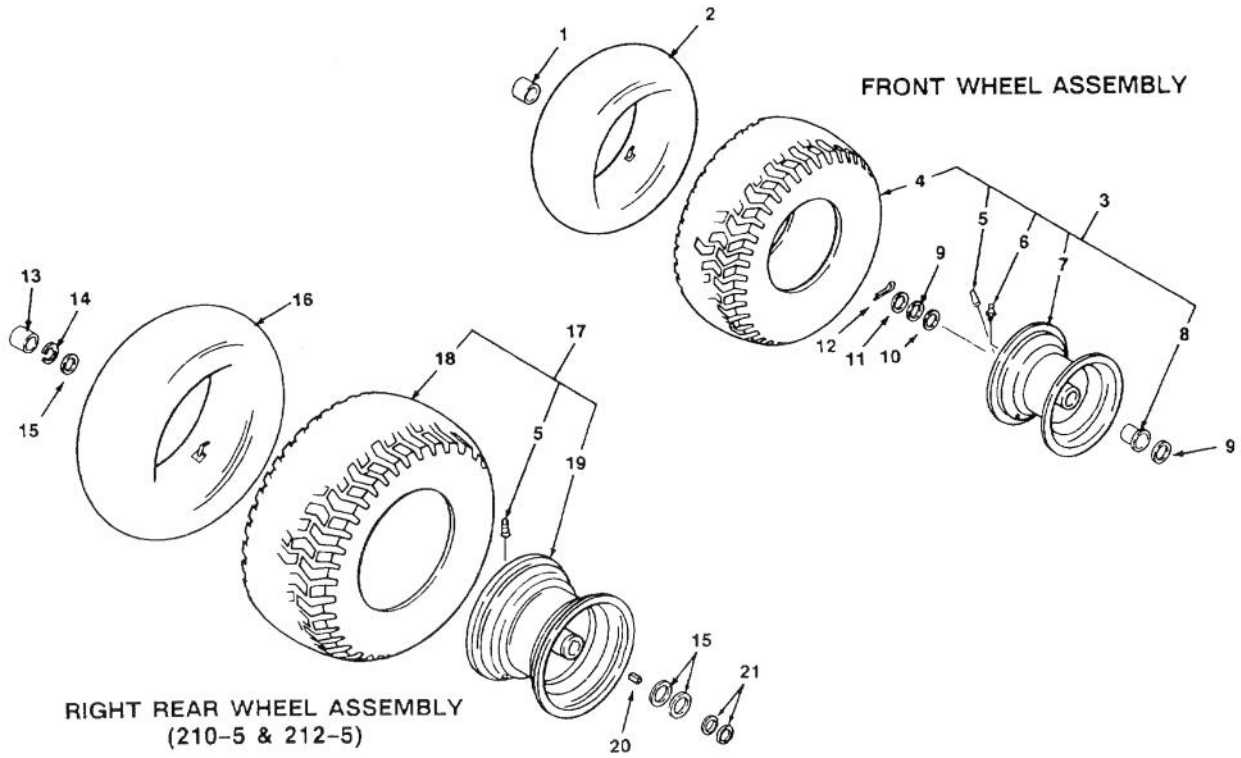


WHEEL & TIRE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	109154	Hubcap	2
2	100079	Tube - Inner	2
3	116883	Front Wheel & Tire Assy. (Incl. Ref. #4-8)	2
4	116884	Tire - Front	2
5	5108	Valve - Stem	4
6	109500	Fitting - Grease	2
7	116885	Front Wheel Assembly (Incl. Ref. #5, 6 & 8)	2
8	116887	Bushing - Flange	4
9	1278	Washer - .050"	A/R
10	5210	Washer - .015"	A/R
11	109262	Washer - Hubcap	2
12	3272-17	Pin - Cotter	2
13	109261	Hubcap	2
14	32151-48	Ring - Snap	2
15	109262	Washer - .050"	6

Ref. No.	Part No.	Description	No. Used
16	105450	Tube - Inner	2
17	79-5580	Rear Wheel & Tire Assy. (Incl. Ref. #5, 18 & 19)	2
18	116880	Tire - Rear	2
19	116881	Rear Wheel Assembly (Incl. Ref. #5)	2
20	1120	Key - Square	2
21	1278	Washer - .050"	4
22	920251	Washer - .050"	4
23	5-1336	Key - Square	2
24	79-5560	Rear Wheel & Tire Assy. (Incl. Ref. #5, 16 & 25)	2
25	79-5570	Rear Wheel Assembly (Incl. Ref. #5)	2
26	120860	Washer - .075"	6
27	32151-36	Ring - Snap	2

 
BRAKE & IDLER ASSEMBLY (210-5 & 212-5)

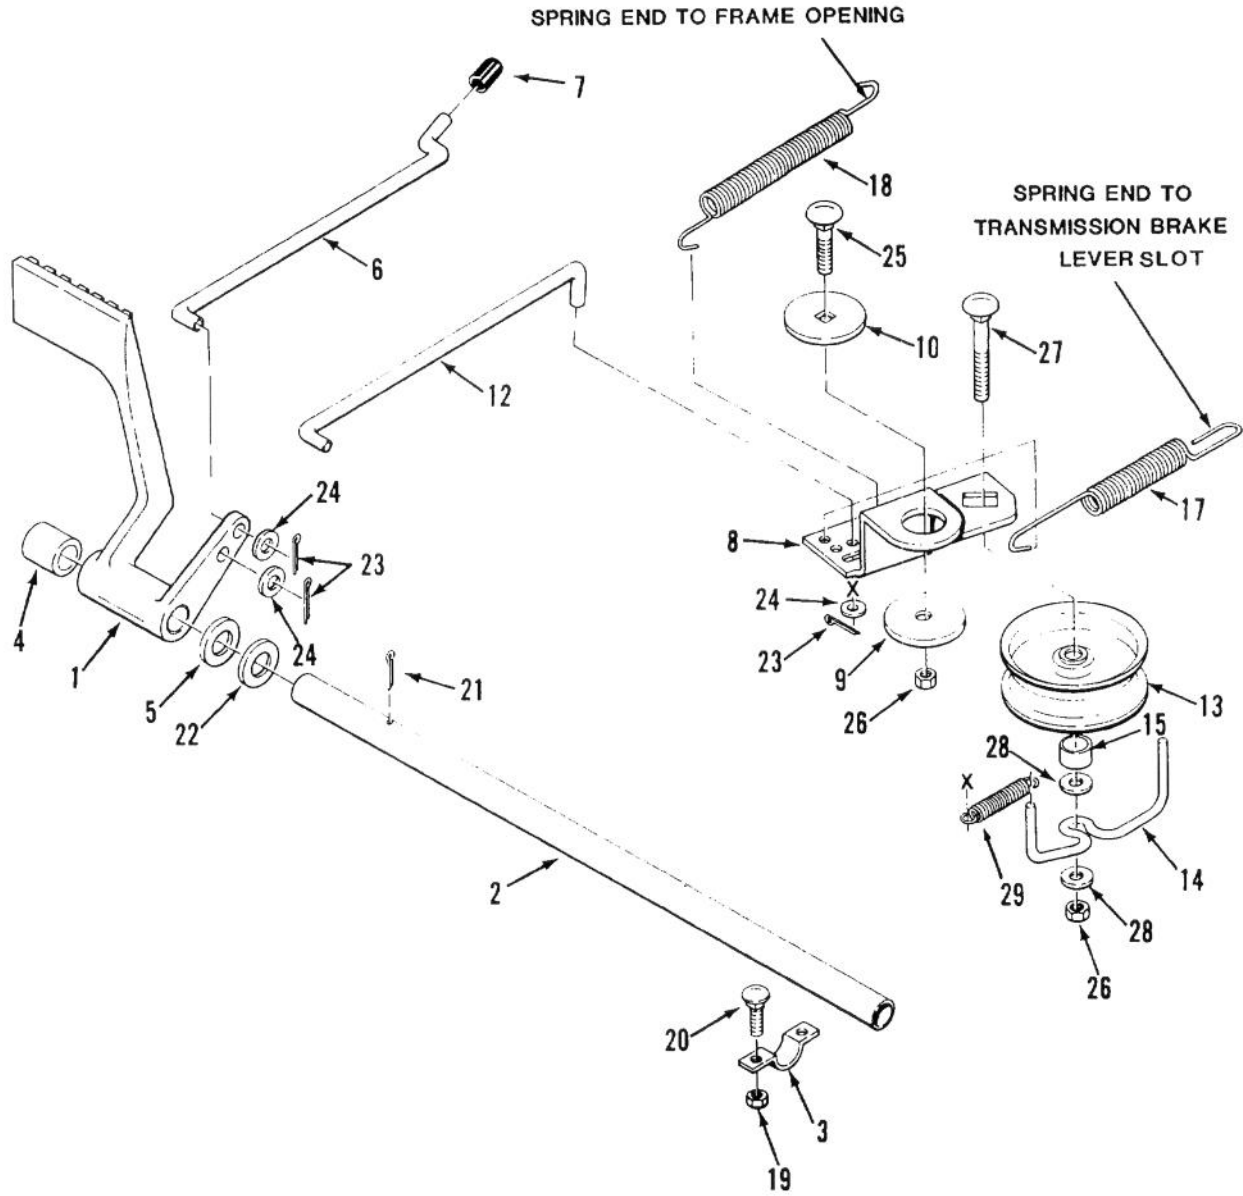

BRAKE & IDLER ASSEMBLY (210-5 & 212-5)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	111436	Pedal - Brake/Idler	1	17	111445	Spring - Brake	1
2	111437	Shaft - Pedal	1	18	111446	Spring - Idler	1
3	106288	Clamp - Shaft	2	19	3296-29	Nut - Lock	4
4	110015	Spacer	1	20	3230-16	Bolt - Carriage	4
5	111712	Washer - Wave	1	21	3272-16	Pin - Cotter	1
6	112984	Rod - Lock	1	22	920215	Washer	1
7	111439	Grip	1	23	3272-6	Pin - Cotter	3
8	114859	Arm - Idler	1	24	3256-23	Washer	3
9	111418	Bushing - Eccentric	1	25	3231-25	Bolt - Carriage	1
10	111419	Washer	1	26	3296-39	Nut - Lock	2
12	113129	Rod - Brake/Idler	1	27	3231-33	Bolt - Carriage	1
13	111442	Pulley - Idler	1	28	3256-24	Washer	2
14	111443	Guide - Belt	1	29	116150	Spring - Extension	1
15	104525	Spacer	1				

 
BRAKE & IDLER ASSEMBLY (210-H & 212-H)

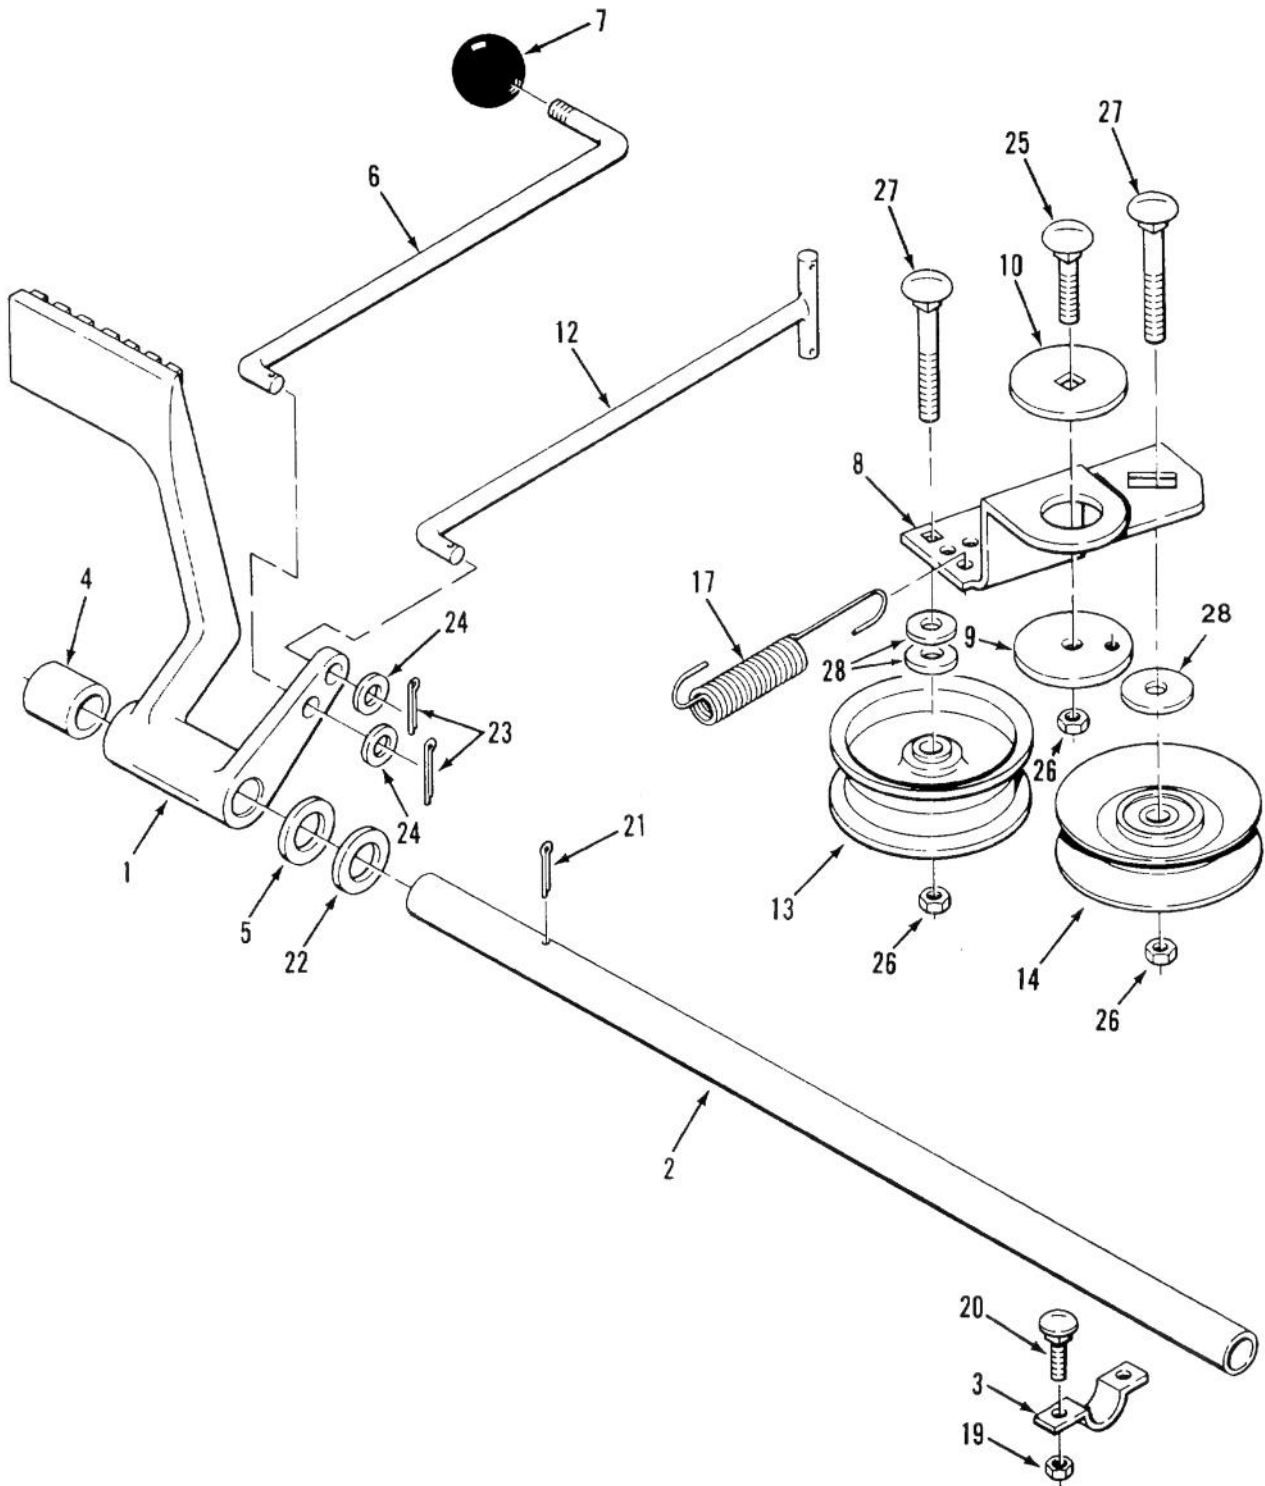

BRAKE & IDLER ASSEMBLY (210-H & 212-H)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	114418	Pedal - Brake	1	17	102572	Spring - Idler	1
2	111437	Shaft - Pedal	1	19	3296-29	Nut - Lock	4
3	106288	Clamp - Shaft	2	20	3230-1	Bolt - Carriage	4
4	110015	Spacer	1	21	3272-16	Pin - Cotter	1
5	111712	Washer - Wave	1	22	920215	Washer	1
6	114705	Rod - Lock	1	23	3272-6	Pin - Cotter	3
7	111070	Knob	1	24	3256-23	Washer	3
8	114034	Arm - Idler	1	25	3231-25	Bolt - Carriage	1
9	111418	Bushing - Eccentric	1	26	3296-39	Nut - Lock	3
10	111419	Washer	1	27	3231-29	Bolt - Carriage	2
12	114707	Rod - Brake	1	28	3256-4	Washer	2
13	111442	Pulley - Idler	1	29	3256-24	Washer - Flat	2
14	109444	Pulley - Idler	1				

 ENGINE PULLEY & PTO CLUTCH ASSEMBLY

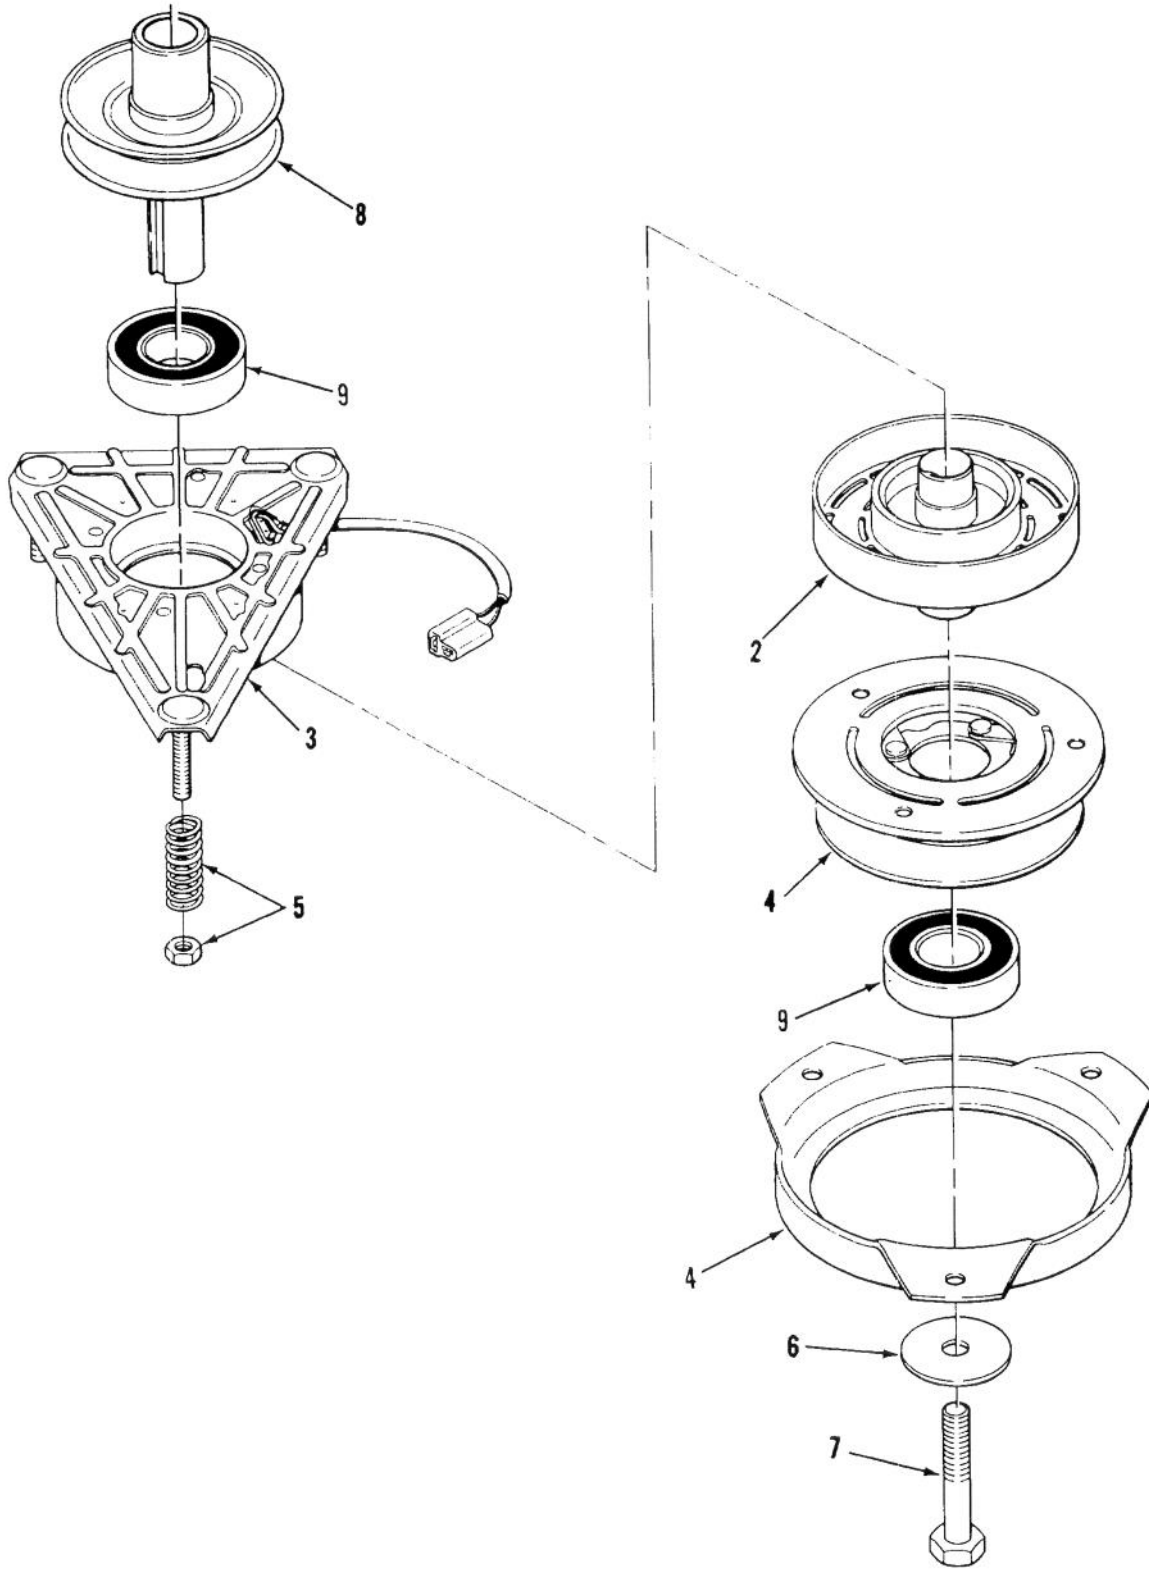


ENGINE PULLEY & PTO CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	115629	Electric Clutch Assembly (Incl. Ref. #2-5)	1
2	113820	Rotor Assembly	1
3	113821	Field Assembly (Incl. Ref. #9)	1
4	113822	Armature & Pulley Assy. (Incl. Ref. #9)	1
5	113823	Spring & Nut Assembly	3

Ref. No.	Part No.	Description	No. Used
6	112843	Washer	1
7	911446	Bolt (210-5 & 210-H)	1
*	112853	Bolt (212-5 & 212-H)	1
8	112858	Pulley - Engine	1
9	114064	Bearing - Ball	2

*Not Illustrated

 ENGINE FUEL & EXHAUST ASSEMBLY

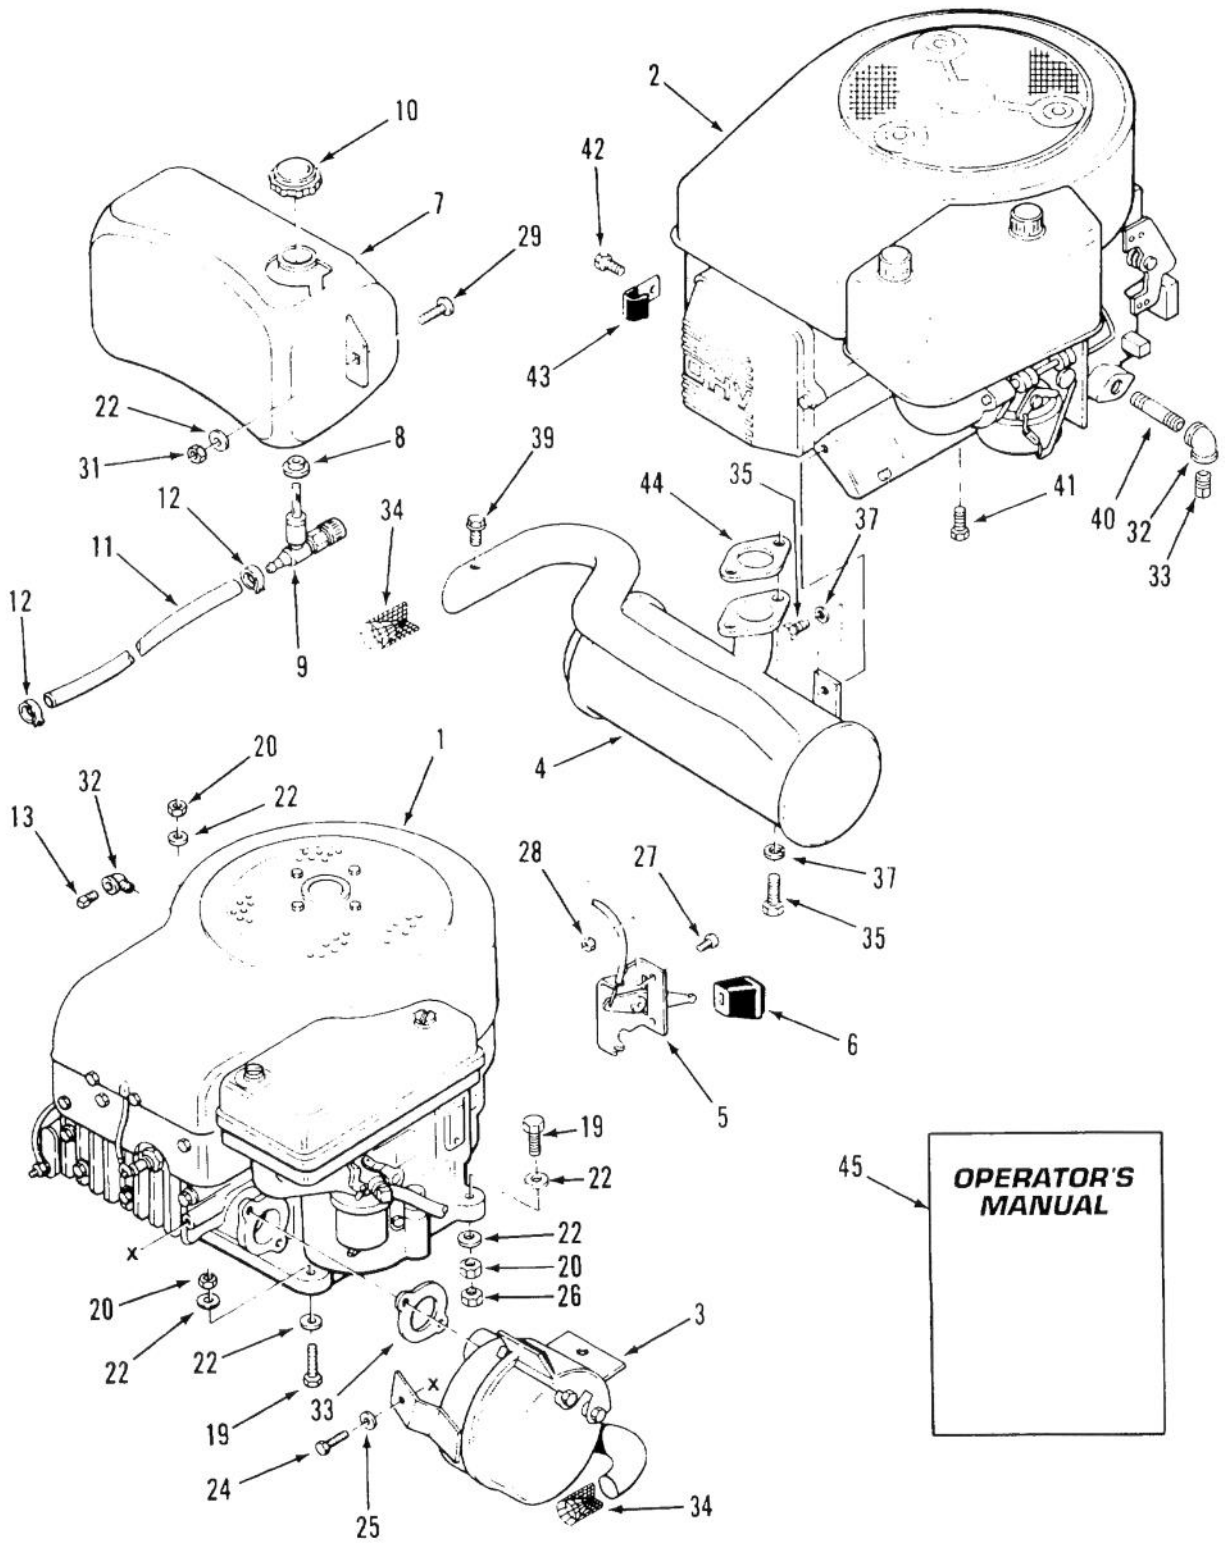


ENGINE FUEL & EXHAUST ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	79-4130	Engine - 10.5HP (Briggs & Stratton Model No. 257707 Type 0123-01) (210-5 & 210-H)	1
2	116799	Engine - 12.5HP TORO Power Plus Model No. E125V Type N/10964B (212-5 & 212-H)	1
3	115391	Muffler Assembly (210-5 & 210-H)	1
4	116702	Muffler (212-5 & 212-H)	1
5	79-3320	Control - Throttle (210-5 & 210-H)	1
*	117256	Control - Throttle (212-5 & 212-H)	1
6	116454	Knob	1
7	112153	Fuel Tank Assembly (Incl. Ref. #8 & 9)	1
8	104047	Bushing	1
9	104048	Valve	1
10	111474	Cap - Gas	1
11	113324	Line - Fuel (210-5 & 210-H)	1
*	117225	Line - Fuel (212-5 & 212-H)	1
12	2412-98	Clamp - Hose	2
13	943420	Plug (210-5 & 210-H)	1

Ref. No.	Part No.	Description	No. Used
19	908022	Screw - Hex. Hd. (210-5 & 210-H)	4
20	915662	Nut - Lock	5
22	3256-23	Washer (210-5 & 210-H)	10
		Washer (212-5 & 212-H)	2
24	908001	Bolt (210-5 & 210-H)	1
25	920007	Washer	3
26	915112	Nut - Lock	1
27	910792	Screw - Pan Hd.	1
28	915740	Nut - Lock	2
29	3230-1	Bolt - Carriage	2
31	3296-29	Nut - Lock	2
32	943083	Fitting - 45° (210-5 & 210-H)	1
*	114764	Fitting - 90° (212-5 & 212-H)	1
33	114636	Plug - Pipe	1
34	115356	Arrester - Spark	1
35	113113	Screw - Hex. Hd.	3
37	3253-4	Washer - Lock	3
39	911652	Screw	1
40	114636	Extension - Oil Drain (212-5 & 212-H)	1
41	926696	Screw	4
42	48-7630	Bolt	2
43	111392	Clip - J	2
44	117184	Gasket (212-5 & 212-H)	1

*Not Illustrated

 12.5HP ENGINE CYLINDER BLOCK ASSEMBLY

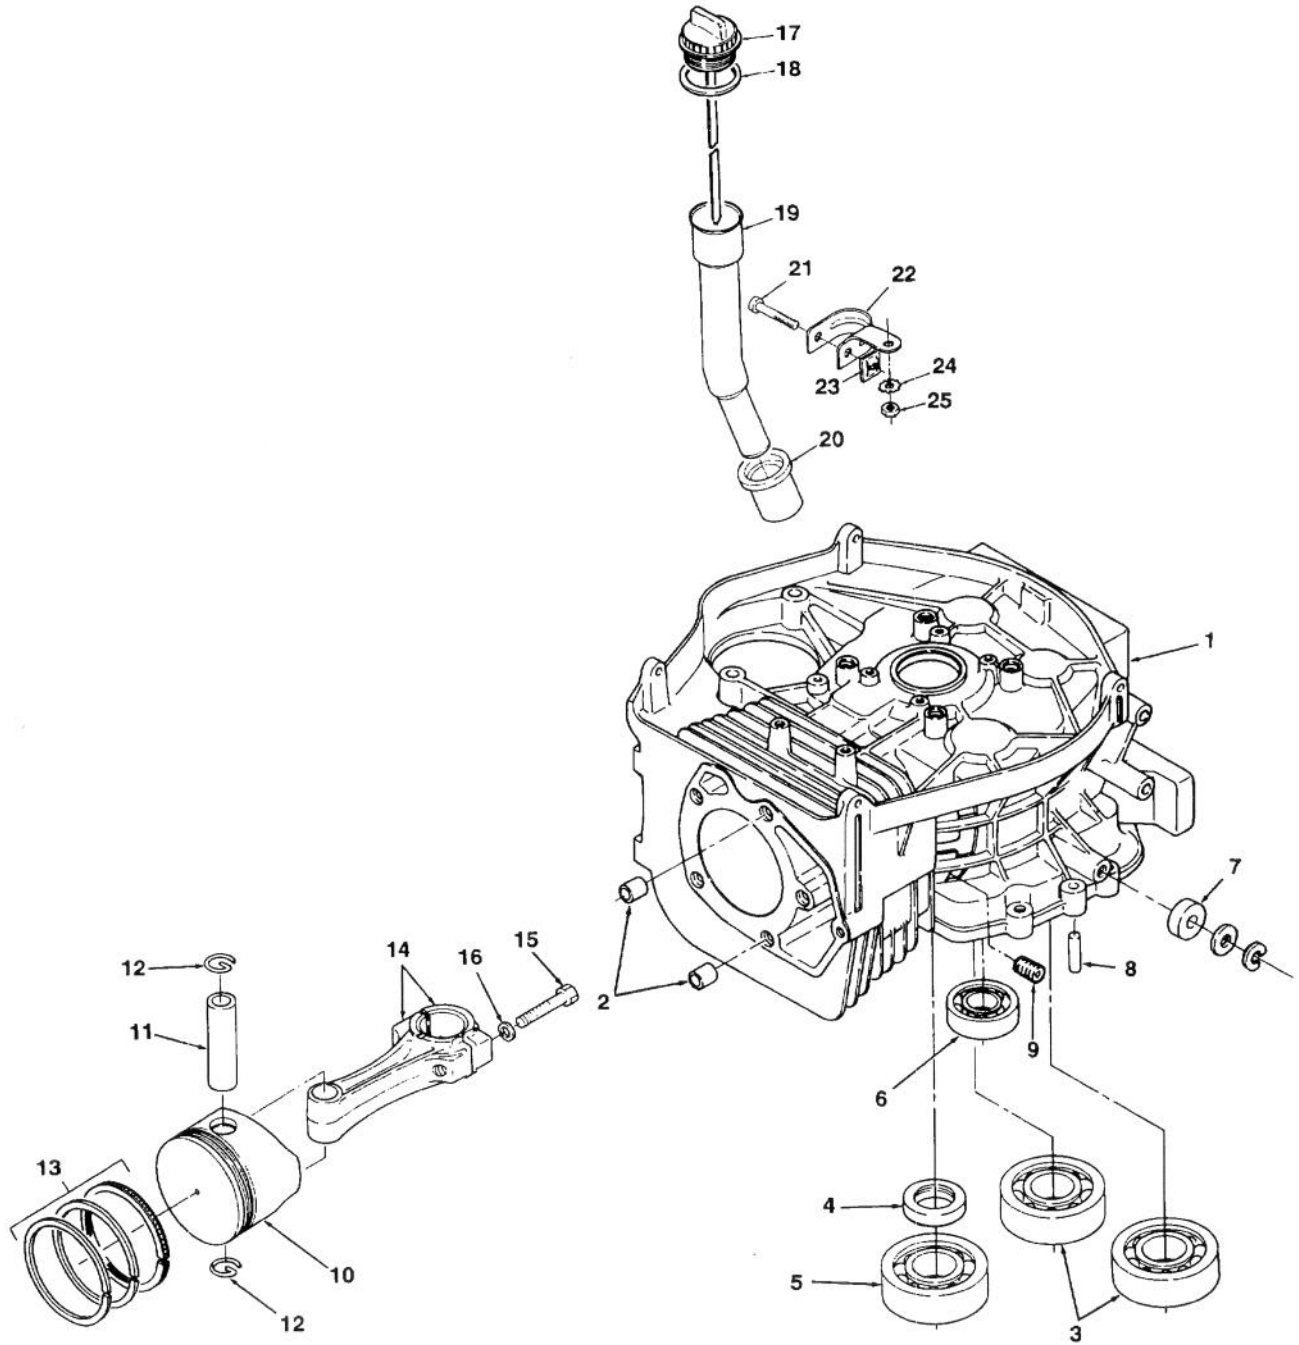


12.5HP ENGINE CYLINDER BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	NN10852	Block – Cylinder	1
2	NN10626	Pin – Dowel	2
3	NN10678	Bearing – Ball	2
4	NN10569	Seal – Oil	1
5	NN10570	Bearing – Crankshaft	1
6	NN10571	Bearing – Camshaft	1
7	NN10646	Seal – Governor Shaft	1
8	79-5840	Pin – Alignment	2
9	NN10653	Plug – Pipe	1
10	NN10579	Kit – Piston (Standard) (Incl. Ref. #11 & 12)	1
*	NN10580	Kit – Piston (.25mm Oversize) (Incl. Ref. #11 & 12)	1
*	NN10581	Kit – Piston (.50mm Oversize) (Incl. Ref. #11 & 12)	1
11	NN10582	Pin – Piston	1
12	NN10583	Ring – Retaining	2
13	NN10584	Set – Piston Ring (Standard)	1
*	NN10585	Set – Piston Ring (.25mm Oversize)	1
*	NN10586	Set – Piston Ring (.50mm Oversize)	1

Ref. No.	Part No.	Description	No. Used
14	NN10587	Kit – Connecting Rod (Standard) (Incl. Ref. #15 & 16)	1
*	NN10588	Kit – Connecting Rod (.25mm Undersize) (Incl. Ref. 15 & 16)	
*	NN10589	Kit – Connecting Rod (.50mm Undersize) (Incl. Ref. #15 & 16)	1
15	NN10590	Bolt	2
16	NN10591	Washer	2
17	NN10688	Indicator (Incl. Ref. #18)	1
18	NN10323	Seal – O-Ring	1
19	NN10689	Tube	1
20	NN10690	Seal	1
21	82-1560	Screw	1
22	NN10691	Bracket – Support	1
23	82-1700	Nut – Speed	1
24	NN10740	Washer – Lock	1
25	NN10768	Nut	1

*Not Illustrated

 12.5HP ENGINE CRANKSHAFT & CAMSHAFT ASSEMBLY

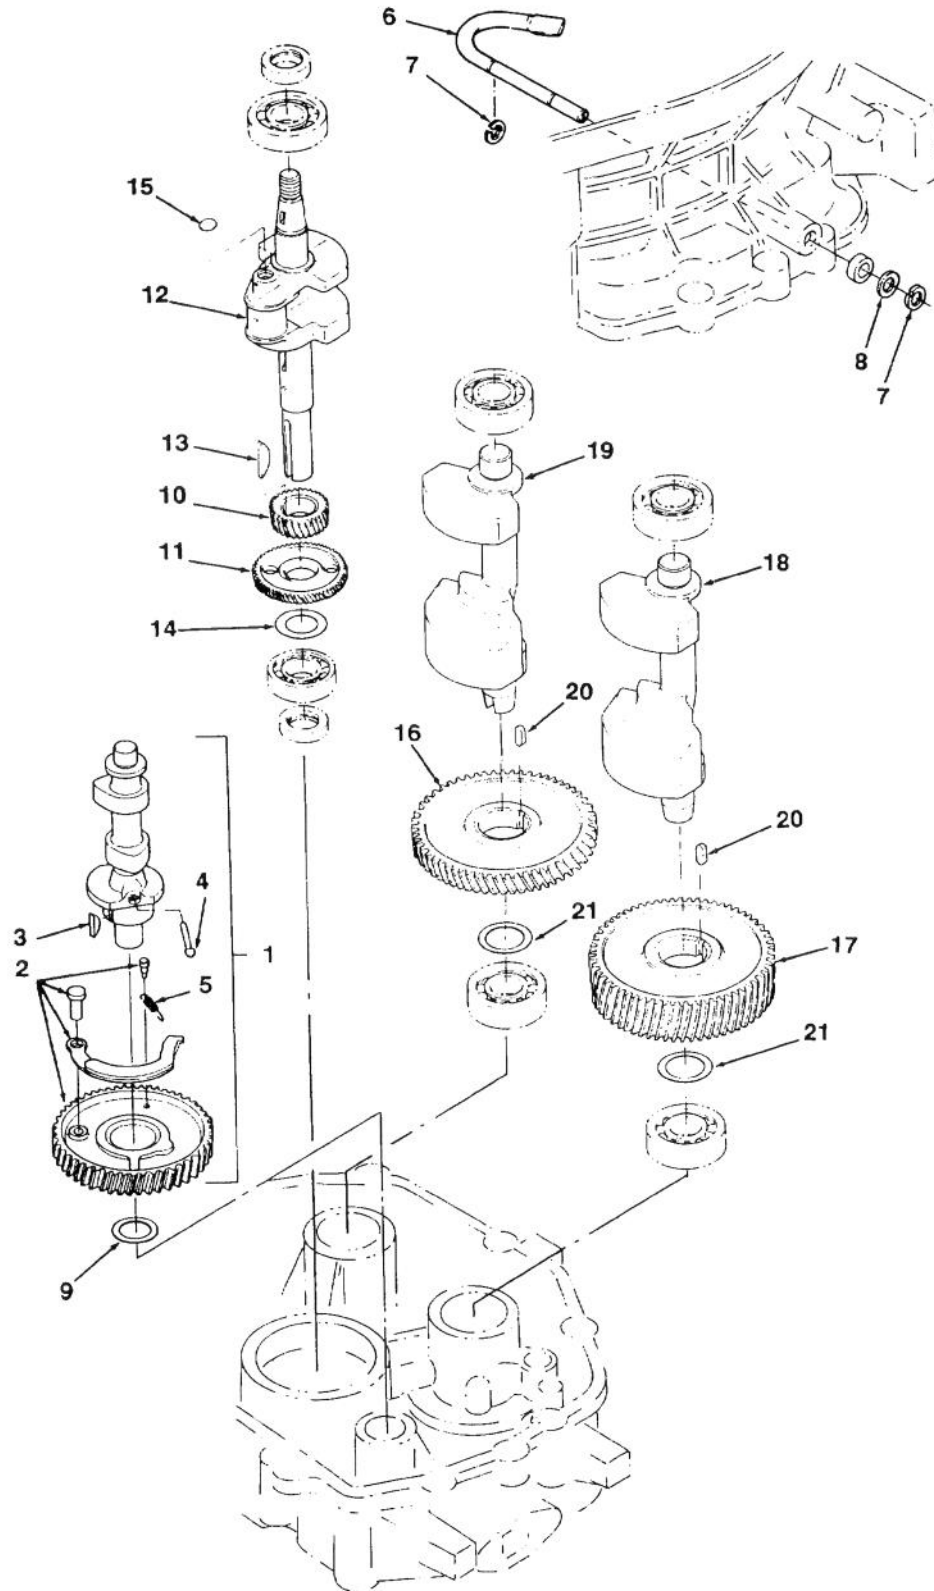


12.5HP ENGINE CRANKSHAFT & CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	NN10627	Camshaft Assembly (Incl. Ref. #2-5)	1	14	NN10746	Shim - Crankshaft (.20mm)	1
2	NN10642	Camgear Assembly	1	*	NN10747	Shim - Crankshaft (.30mm)	1
3	NN10643	Key - Camgear	1	*	NN10748	Shim - Crankshaft (.40mm)	1
4	NN10644	Pin	1	*	NN10749	Shim - Crankshaft (.50mm)	1
5	NN10645	Spring	1	*	79-5850	Shim - Crankshaft (.70mm)	1
6	NN10640	Lever	1	*	79-5860	Shim - Crankshaft (.80mm)	1
7	NN10641	Clip - Retaining	2	15	NN10750	Plug	1
8	82-1350	Washer	1	16	NN10751	Gear	1
9	NN10630	Shim - Camshaft (.50mm)	1	17	NN10752	Gear	1
*	NN10631	Shim - Camshaft (.60mm)	1	18	NN10753	Shaft	1
*	NN10632	Shim - Camshaft (.80mm)	1	19	NN10754	Shaft	1
*	NN10633	Shim - Camshaft (.90mm)	1	20	NN10755	Key - Gear	2
*	NN10634	Shim - Camshaft (1.00mm)	1	21	NN10756	Shim - Balancer Shaft (.50mm)	1
*	NN10635	Shim - Camshaft (1.20mm)	1	*	NN10757	Shim - Balancer Shaft (.60mm)	1
10	NN10742	Gear - Crankshaft	1	*	NN10758	Shim - Balancer Shaft (.70mm)	1
11	NN10743	Gear - Balancer	1	*	NN10759	Shim - Balancer Shaft (.80mm)	1
12	NN10744	Crankshaft	1	*	NN10760	Shim - Balancer Shaft (.90mm)	1
13	NN10745	Key - Gear	1	*	NN10761	Shim - Balancer Shaft (1.00mm)	1
				*	NN10762	Shim - Balancer Shaft (1.20mm)	1

*Not Illustrated

 
12.5HP ENGINE OIL BASE & PUMP ASSEMBLY

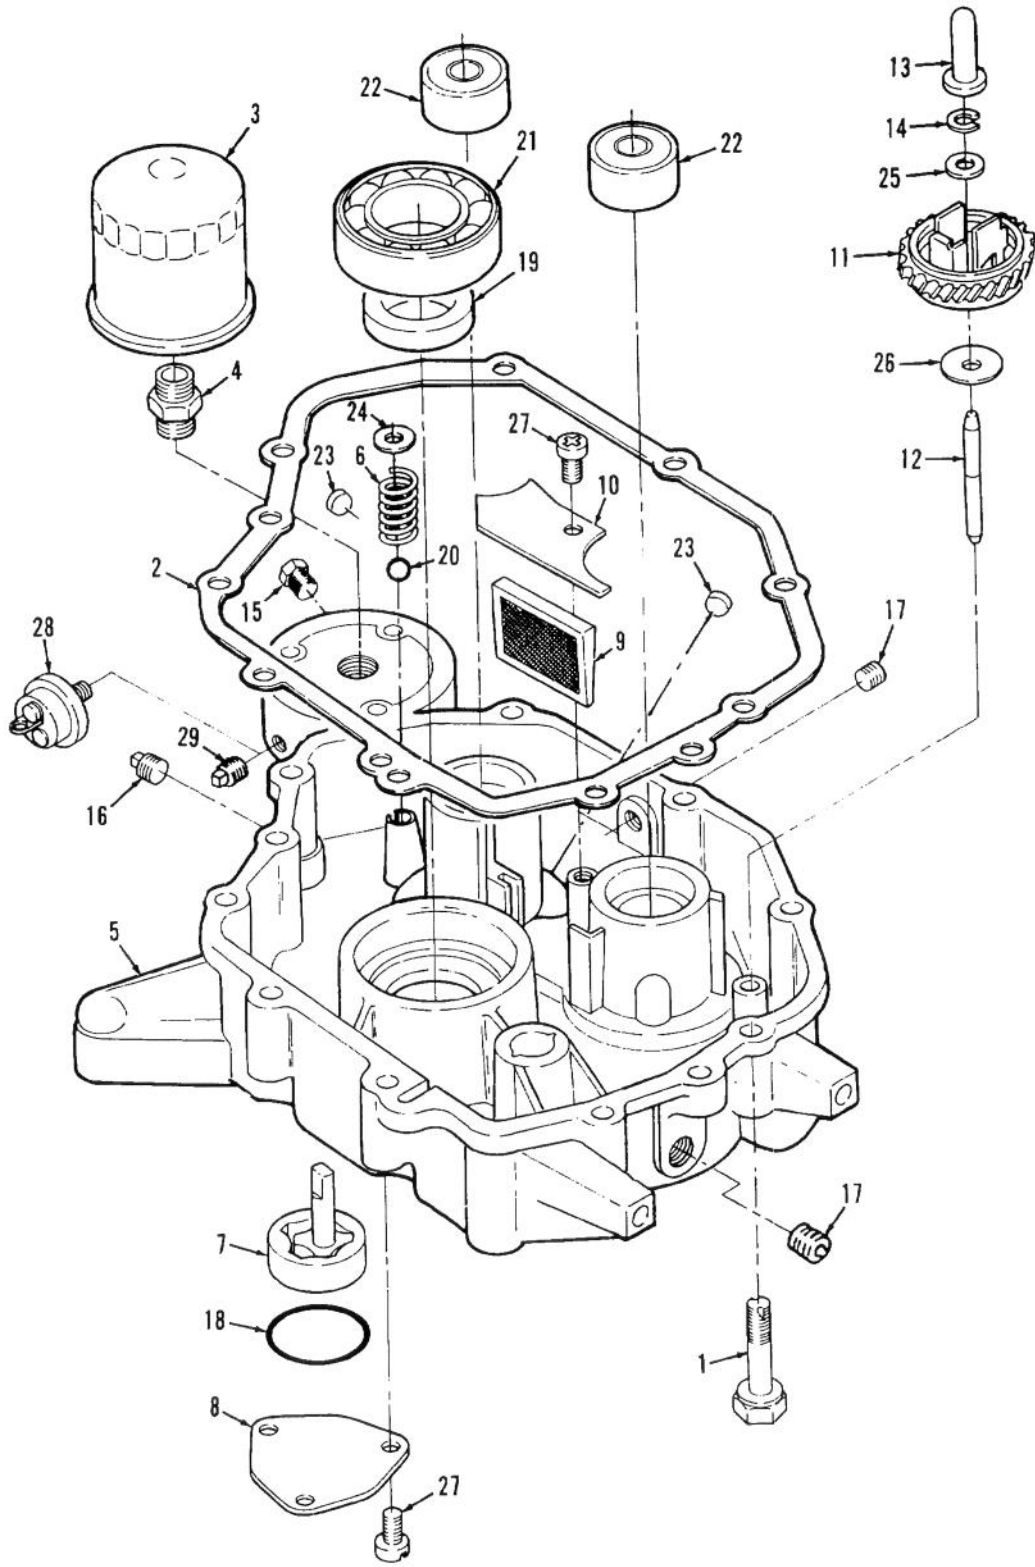

12.5HP ENGINE OIL BASE & PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	NN10680	Bolt	9	16	82-1130	Plug - Pipe	1
2	NN10681	Gasket - Oil Base	1	17	NN10686	Plug - Pipe	2
3	NN10684	Filter - Oil	1	18	NN10575	Seal - O-Ring	1
4	NN10685	Adapter - Oil Filter	1	19	NN10569	Seal - Oil	1
5	NN10675	Base - Oil	1	20	NN10534	Ball - Steel	1
6	NN10133	Spring - Relief Valve	1	21	NN10677	Bearing - Ball	1
7	NN10572	Pump - Oil	1	22	NN10678	Bearing - Ball	2
8	NN10573	Cover - Oil Pump	1	23	59-0760	Plug	2
9	NN10577	Screen - Oil Pickup	1	24	NN10539	Ring - Retaining	1
10	NN10578	Cover - Screen	1	25	NN10628	Washer - Flat	1
11	NN10636	Gear - Governor	1	26	NN10629	Washer - Flat	1
12	NN10637	Shaft - Governor	1	27	NN10868	Screw - Torx Pan Hd.	4
13	NN10638	Sleeve - Governor	1	28	NN10813	Switch - Oil Pressure	1
14	NN10639	Stop - Governor	1	29	NN10307	Plug - Pipe	1
15	NN10687	Plug - Pipe	2				

 12.5HP ENGINE CYLINDER HEAD & VALVES ASSEMBLY

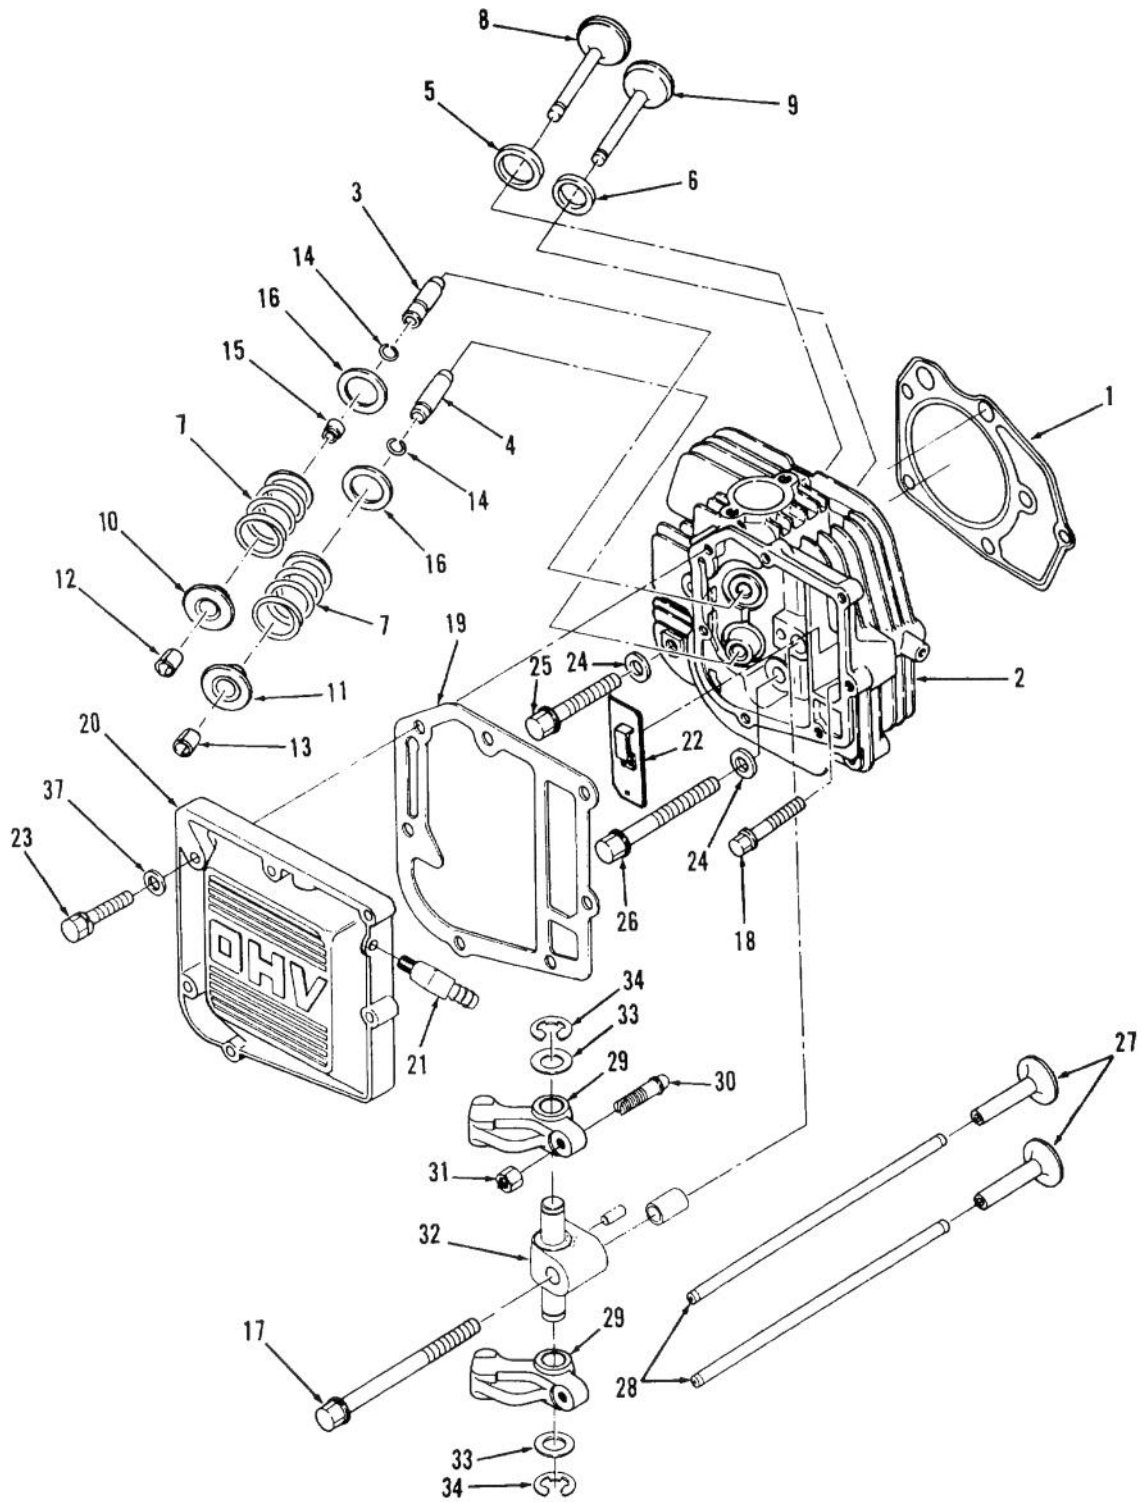


12.5HP ENGINE CYLINDER HEAD & VALVES ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	NN10592	Gasket – Cylinder Head	1	19	NN10609	Gasket	1
2	NN10593	Cylinder Head Assembly (Incl. Ref. #3–16)	1	20	NN10610	Cover – Valve	1
*	NN10594	Cylinder Head Assembly (Incl. Ref. #3–6)	1	21	NN10611	Fitting – 45°	1
3	79–5880	Guide – Intake Valve	1	22	NN10612	Breather	1
4	79–5870	Guide – Exhaust Valve	1	23	NN10613	Screw – Hex. Socket Hd.	7
5		Seat – Intake Valve	1	24	NN10614	Washer	2
6		Seat – Exhaust Valve	1	25	NN10615	Bolt	2
7	NN10597	Spring – Valve	2	26	NN10616	Bolt	2
8	NN10598	Valve – Intake	1	27	NN10617	Tappet	2
9	NN10599	Valve – Exhaust	1	28	NN10618	Rod – Push	2
10	NN10600	Retainer – Intake	1	29	NN10619	Rocker Arm Assembly (Incl. Ref. #30 & 31)	1
11	NN10601	Retainer – Exhaust	1	30	NN10620	Screw	2
12	NN10602	Lock – Intake	1	31	NN10621	Nut	2
13	NN10603	Lock – Exhaust	1	32	NN10622	Shaft – Rocker Arm	1
14	NN10604	Ring	2	33	NN10623	Washer – Rocker Arm	2
15	NN10605	Seal – Intake	1	34	NN10624	Clip – Retainer	2
16	NN10606	Washer	2	35	NN10625	Pin – Dowel	1
17	NN10607	Bolt	1	36	NN10626	Pin – Dowel (Hollow)	1
18	NN10608	Bolt	1	37	82–1340	Washer – Flat	7

*Not Illustrated

 
12.5HP ENGINE IGNITION ASSEMBLY

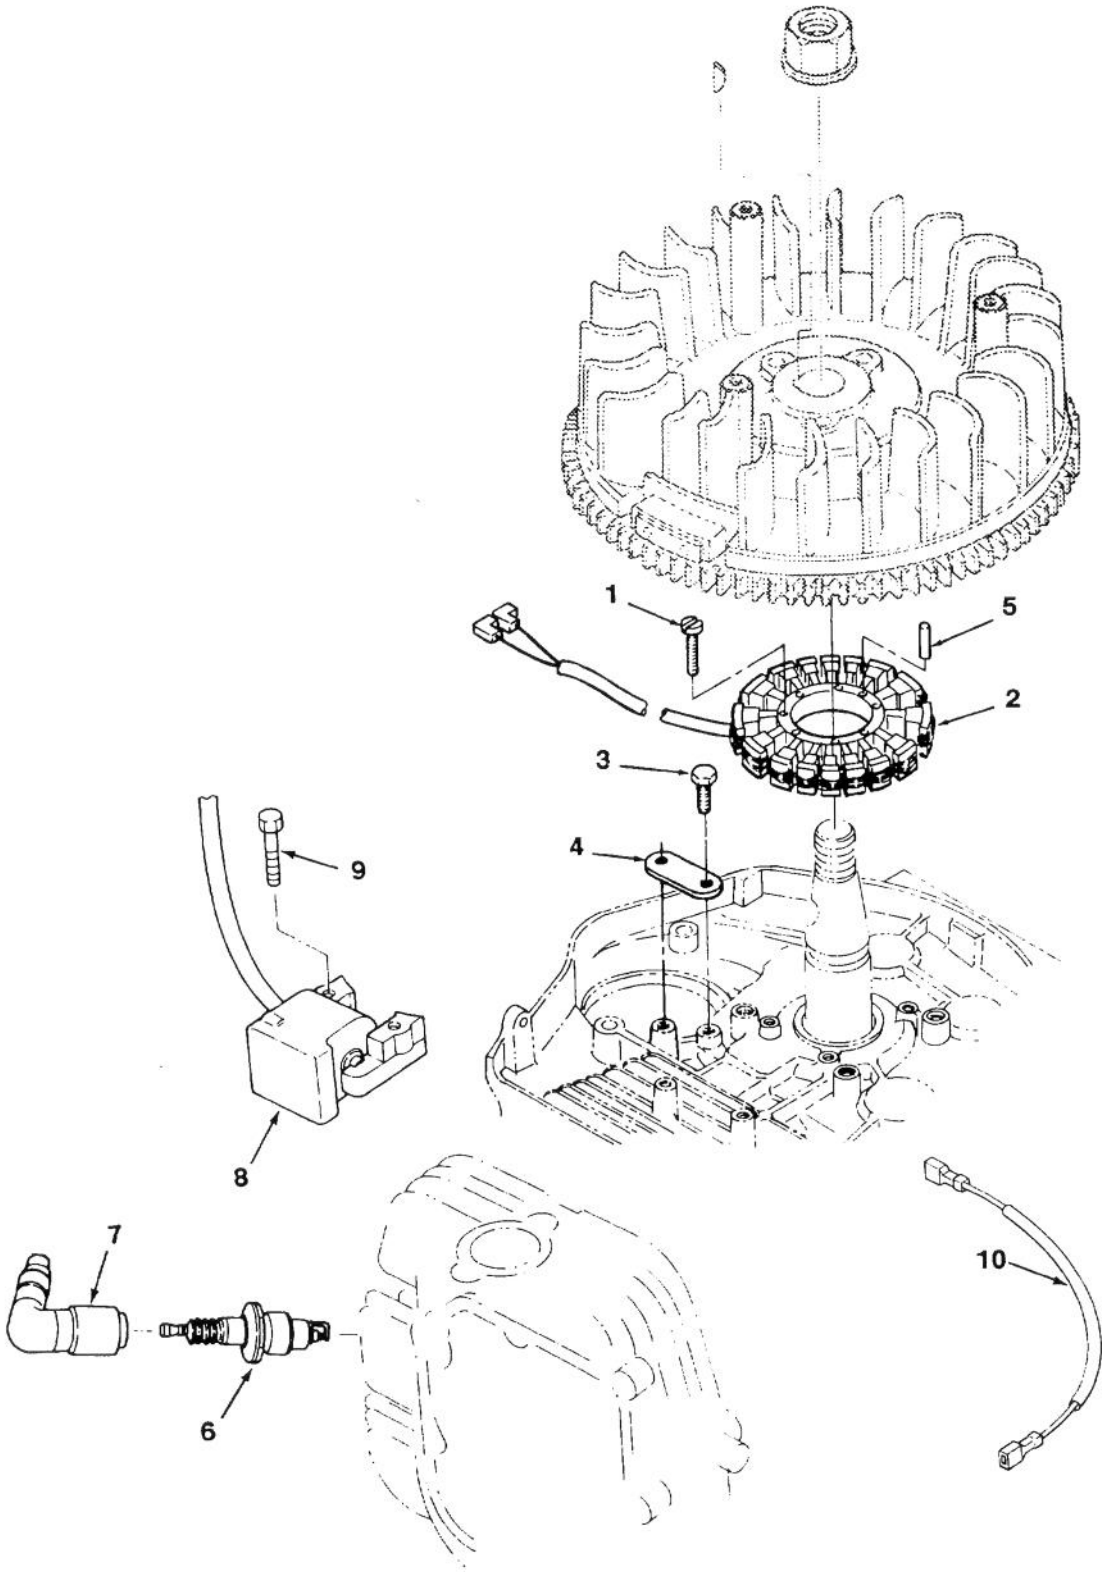

12.5HP ENGINE IGNITION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	NN10735	Screw – Torx Pan Hd.	2	6	NN10820	Plug – Spark	1
2	NN10734	Stator	1	7	NN10729	Lead	1
3	NN10733	Bolt – Hex. Hd.	1	8	NN10730	Coil – Ignition	1
4	79-5890	Clamp – Cord	1	9	NN10731	Bolt – Hex. Hd.	2
5	79-5900	Pin – Alignment	2	10	NN10673	Harness – Regulator	1

 12.5HP ENGINE AIR CLEANER ASSEMBLY

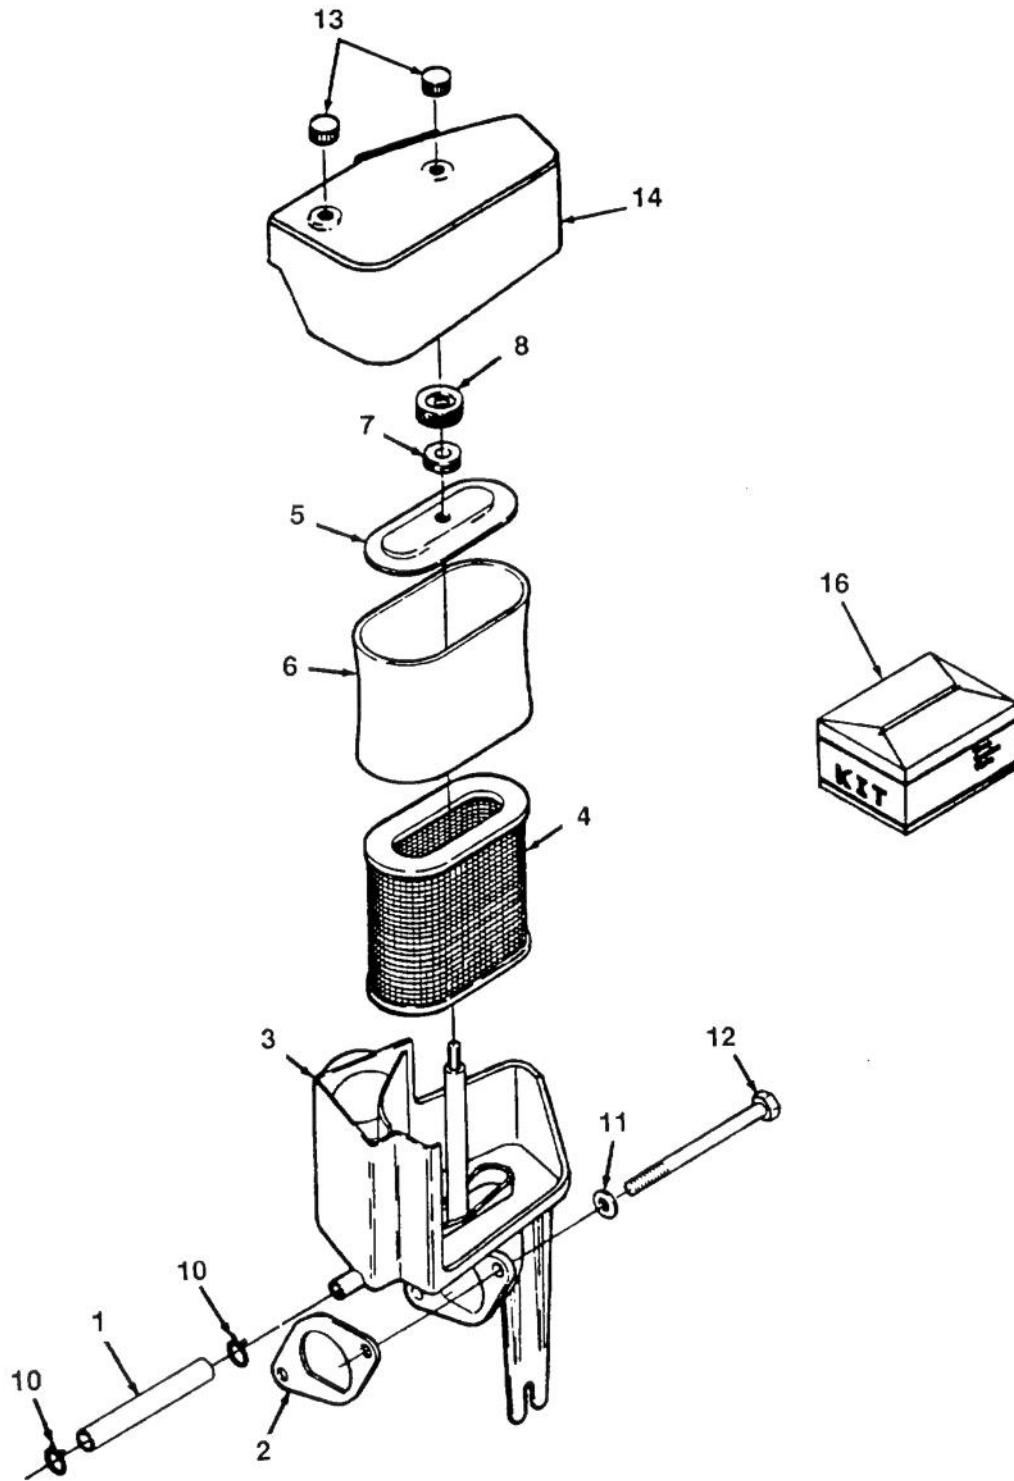


12.5HP ENGINE AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	NN10693	Hose - Breather	1	10	NN10812	Clamp - Hose	2
2	NN10694	Gasket	1	11	82-1350	Washer - Flat	2
3	NN10899	Adapter	1	12	NN10702	Screw - Hex. Hd.	2
4	NN10872	Element	1	13	NN10700	Knob	2
5	NN10697	Cover - Element	1	14	NN10799	Cover - Air Cleaner	1
6	NN10698	Wrapper - Element	1	16	79-5910	Kit - Air Cleaner (Incl. Ref. #2-8 & 13-15)	1
7	NN10704	Grommet	1				
8	NN10703	Knob	1				

*Not Illustrated

 12.5HP ENGINE GOVERNOR LINKAGE & COVER ASS'Y.

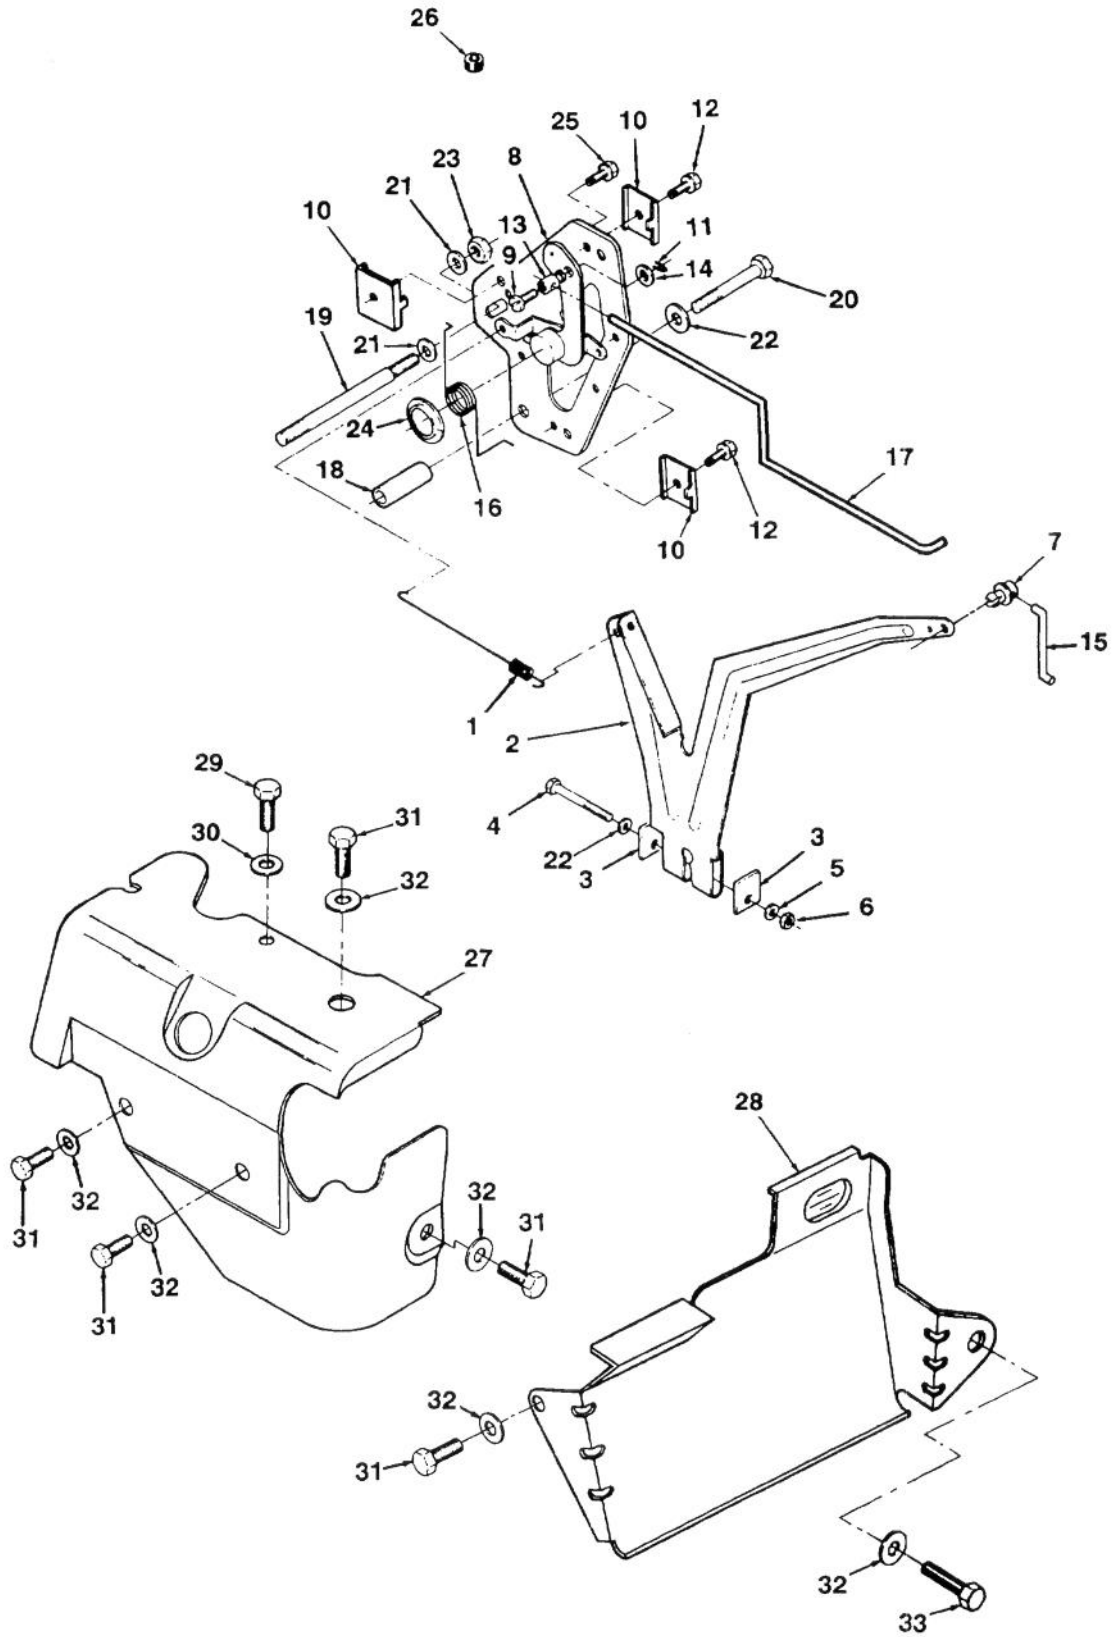


12.5HP ENGINE GOVERNOR LINKAGE & COVER ASS'Y.

Ref. No.	Part No.	Description	No. Used
1	NN10657	Spring – Governor	1
2	NN10647	Lever – Governor	1
3	NN10816	Washer – Governor Lever	2
4	NN10648	Screw – Hex. Hd.	1
5	NN10740	Washer – Lock	1
6	NN10768	Nut – Hex.	1
7	NN10674	Clip – Link	1
8	NN10651	Throttle Plate Assembly	1
9	NN10652	Screw – Machine	1
10	NN10653	Clamp – Cable	1
11	59-0720	Pin – Cotter	1
12	72-3900	Screw – Thread Forming	1
13	NN10656	Swivel – Choke Lever	1
14	59-0850	Washer – Flat	1
15	NN10658	Link – Throttle	1
16	NN10654	Spring – Choke Linkage	1
17	NN10659	Link – Choke	1

Ref. No.	Part No.	Description	No. Used
18	NN10660	Spacer	1
19	NN10661	Stud	1
20	NN10817	Screw – Thread Forming	1
21	82-1340	Washer – Flat	2
22	82-1350	Washer – Flat	2
23	NN10663	Nut – Hex.	1
24	NN10344	Ring – Retaining	1
25	NN10785	Screw – Thread Forming	1
26	NN10683	Plug – Pipe	1
27	NN10722	Housing – Cylinder Air	1
28	NN10723	Deflector – Air	1
29	NN10725	Screw – Hex. Hd.	1
30	82-1340	Washer – Flat	1
31	NN10726	Screw – Hex. Hd.	5
32	82-1350	Washer – Flat	6
33	NN10727	Screw – Hex. Hd.	1

*Not Illustrated

 
12.5HP ENGINE FLYWHEEL & COVER ASSEMBLY

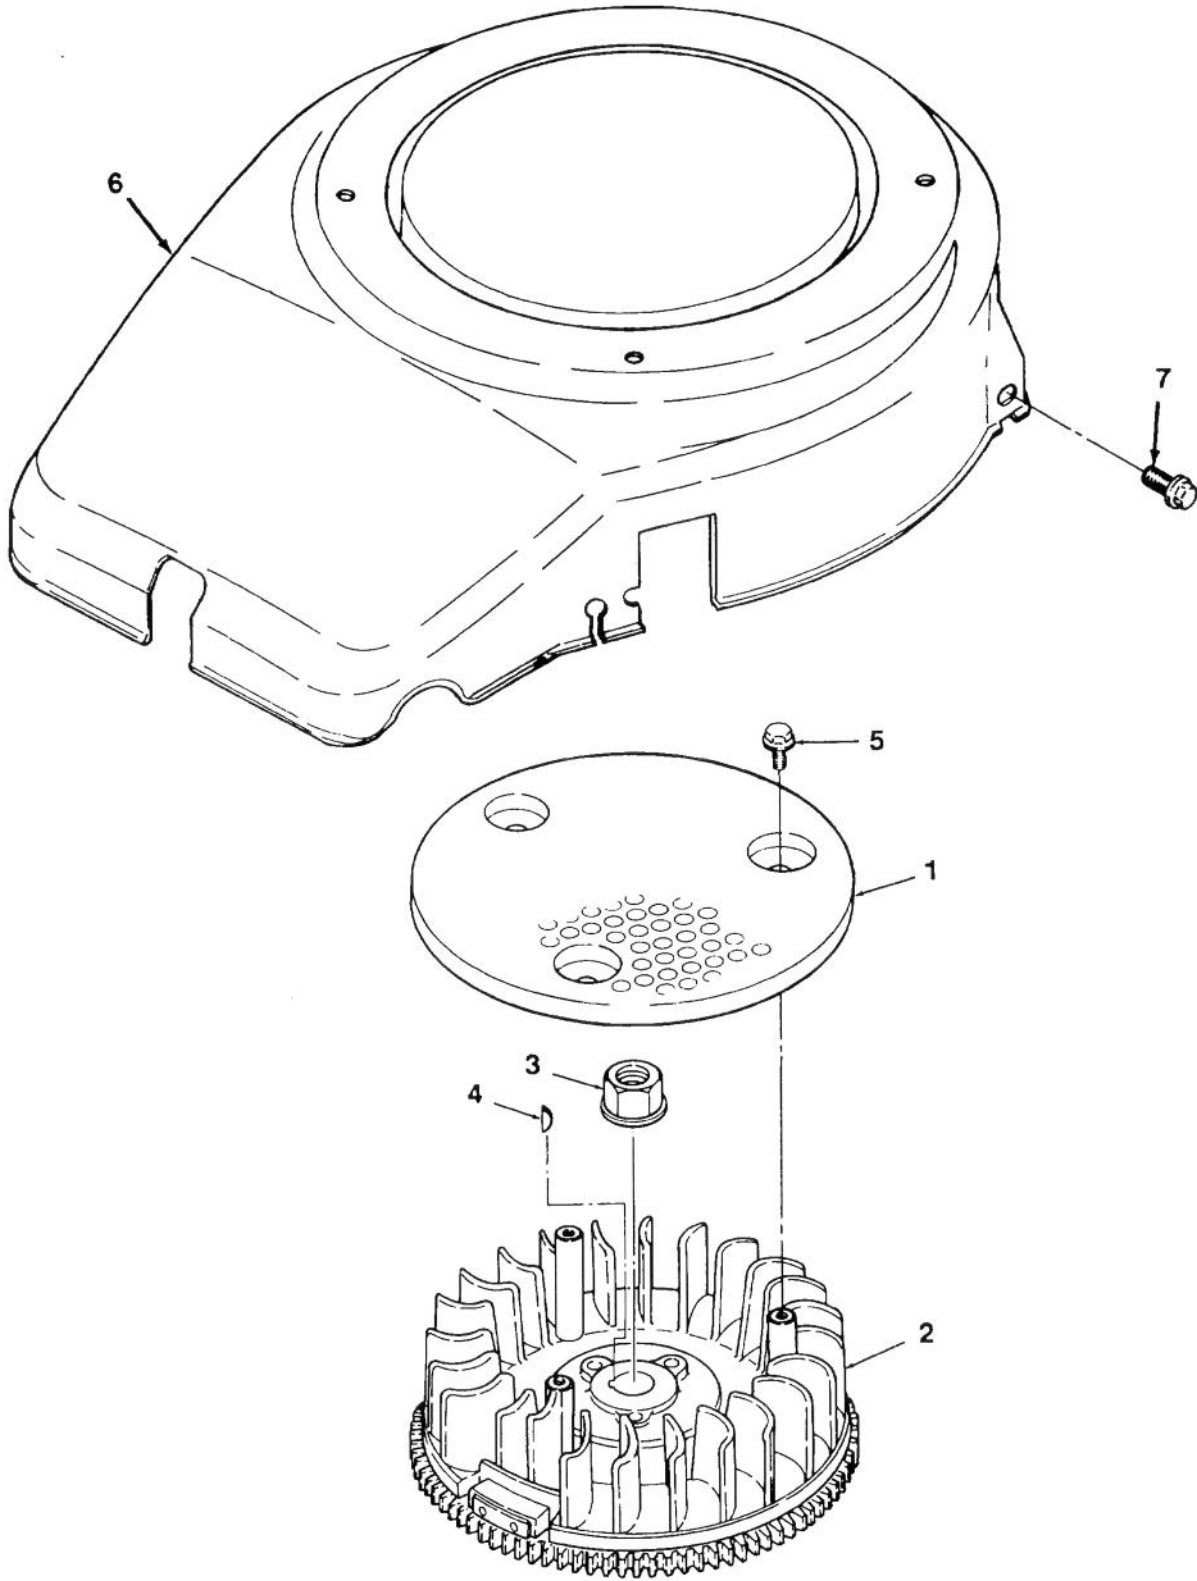

12.5HP ENGINE FLYWHEEL & COVER ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	NN10711	Screen	1
2	NN10712	Blower Wheel Assembly	1
3	NN10713	Key	1
4	NN10714	Screw - Hex. Hd.	3

Ref. No.	Part No.	Description	No. Used
5	NN10715	Nut	1
6	NN10720	Housing - Blower	1
7	NN10721	Bolt	4

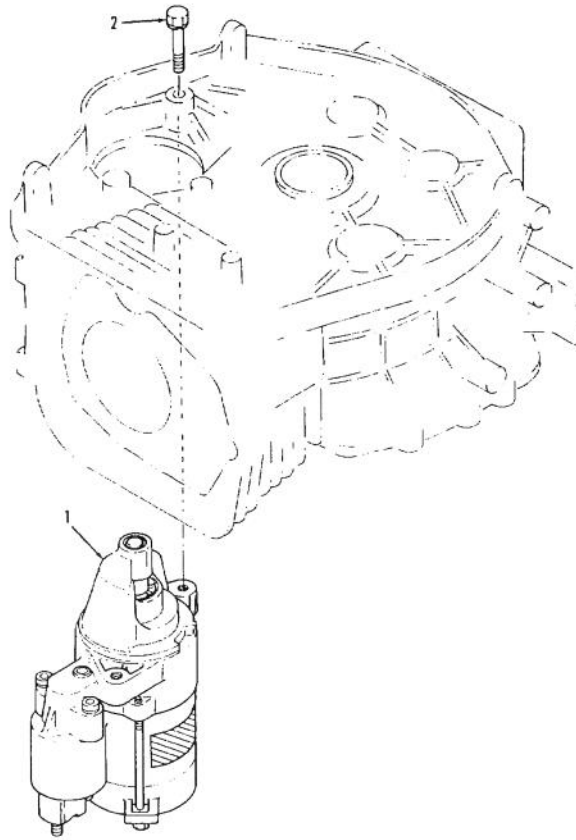 

12.5HP ENGINE STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	NN10739	Starter	1	2	NN10738	Screw - Hex. Hd.	2

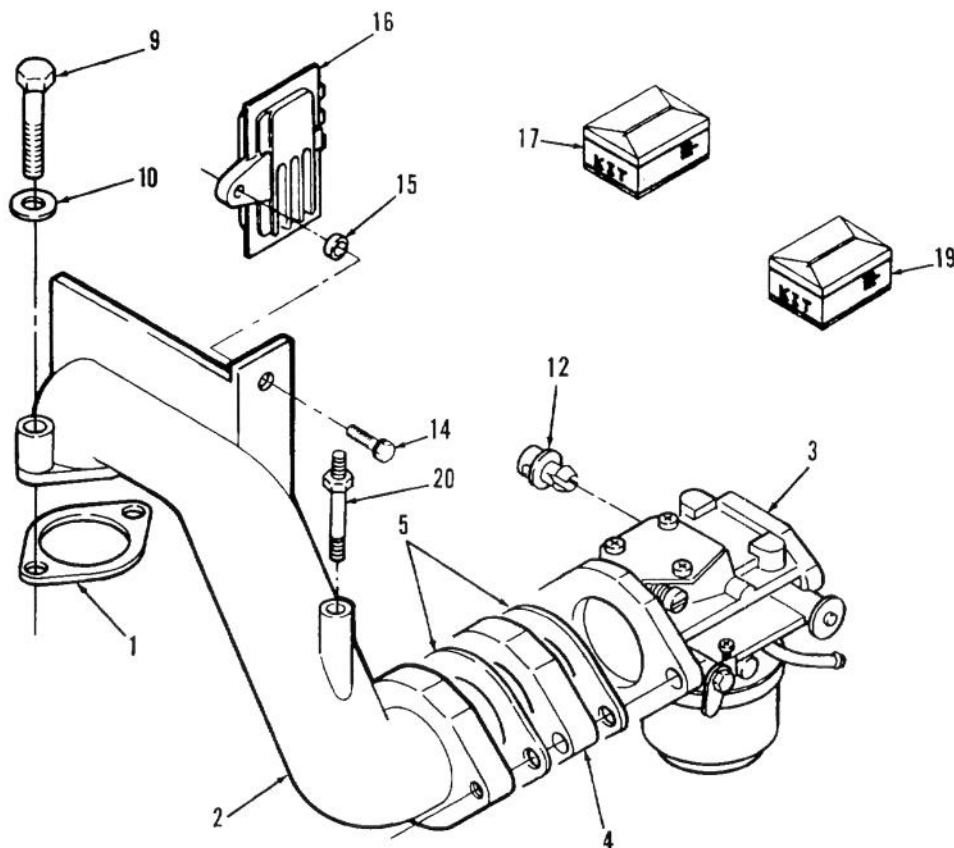 

12.5HP ENGINE CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	NN10666	Gasket	1	14	NN10792	Screw – Hex. Washer Hd.	1
2	NN10818	Elbow – Intake	1	15	NN10218	Bushing	1
3	NN10668	Carburetor Assembly	1	16	NN10794	Regulator – Voltage	1
4	NN10669	Insulator	1	17	NN10261	Kit – Float	1
5	NN10670	Gasket	2	19	NN10907	Kit – Carburetor Repair	1
9	79-5820	Screw – Hex. Hd.	2	20	NN10701	Stud	1
10	79-5830	Washer – Flat	2	*	85-7340	High Altitude Jet (1.08mm)	1
12	NN10674	Clip – Link	2				


*Not Illustrated

DECAL & MISCELLANEOUS PARTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	79-4520	Decal - Hood R.H. (210-5)	1	13	807335	Loose Parts Package (210-5)	1
*	79-4540	Decal - Hood R.H. (210-H)	1	*	807336	Loose Parts Package (210-H)	1
*	117474	Decal - Hood R.H. (212-5)	1	*	807348	Loose Parts Package (212-5)	1
*	79-4580	Decal - Hood R.H. (212-H)	1	*	807346	Loose Parts Package (212-H)	1
*	79-4530	Decal - Hood L.H. (210-5)	1	14	111632	Decal - Clutch & Brake	1
*	79-4550	Decal - Hood L.H. (210-H)	1	15	114442	Decal - Hydro Push (210-H & 212-H)	1
*	117475	Decal - Hood L.H. (212-5)	1	16	115196	Decal - Attach-a-Matic	1
*	79-4590	Decal - Hood L.H. (212-H)	1	17	111926	Decal - Electrical System	1
3	116590	Decal - Hood Rear	1	18	115398	Decal - Maintenance	2
4	111327	Decal - Parking Brake	1	19	79-5400	Decal - Throttle	1
5	78-8440	Decal - PTO Clutch	1	21	112670	Decal - Danger	1
6	118600	Decal - Power Plus (212-5 & 212-H)	1	22	120040	Decal - TORO	1
7	117512	Decal - 5-Speed (210-5 & 212-5)	2	23	114944	Decal - Shift 5-Speed (210-5 & 212-5)	1
8	117511	Decal - Hydro (210-H & 212-H)	2	24	114051	Decal - Motion Control (210-H & 212-H)	1
9	117760	Decal - Fender	1	26	113370	Decal - PTO Adjustment	1
10	78-2290	Decal - Hood Front (210-5 & 210-H)	1	28	118610	Decal - Power Plus	1
*	116874	Decal - Hood Front (212-5 & 212-H)	1	33	78-8480	Decal - Ignition	1
				35	78-8490	Decal - Lights (212-5 & 212-H)	1
				36	79-0370	Decal - Danger	1

*Not Illustrated

 TRANSMISSION ASSEMBLY (210-5 & 212-5)

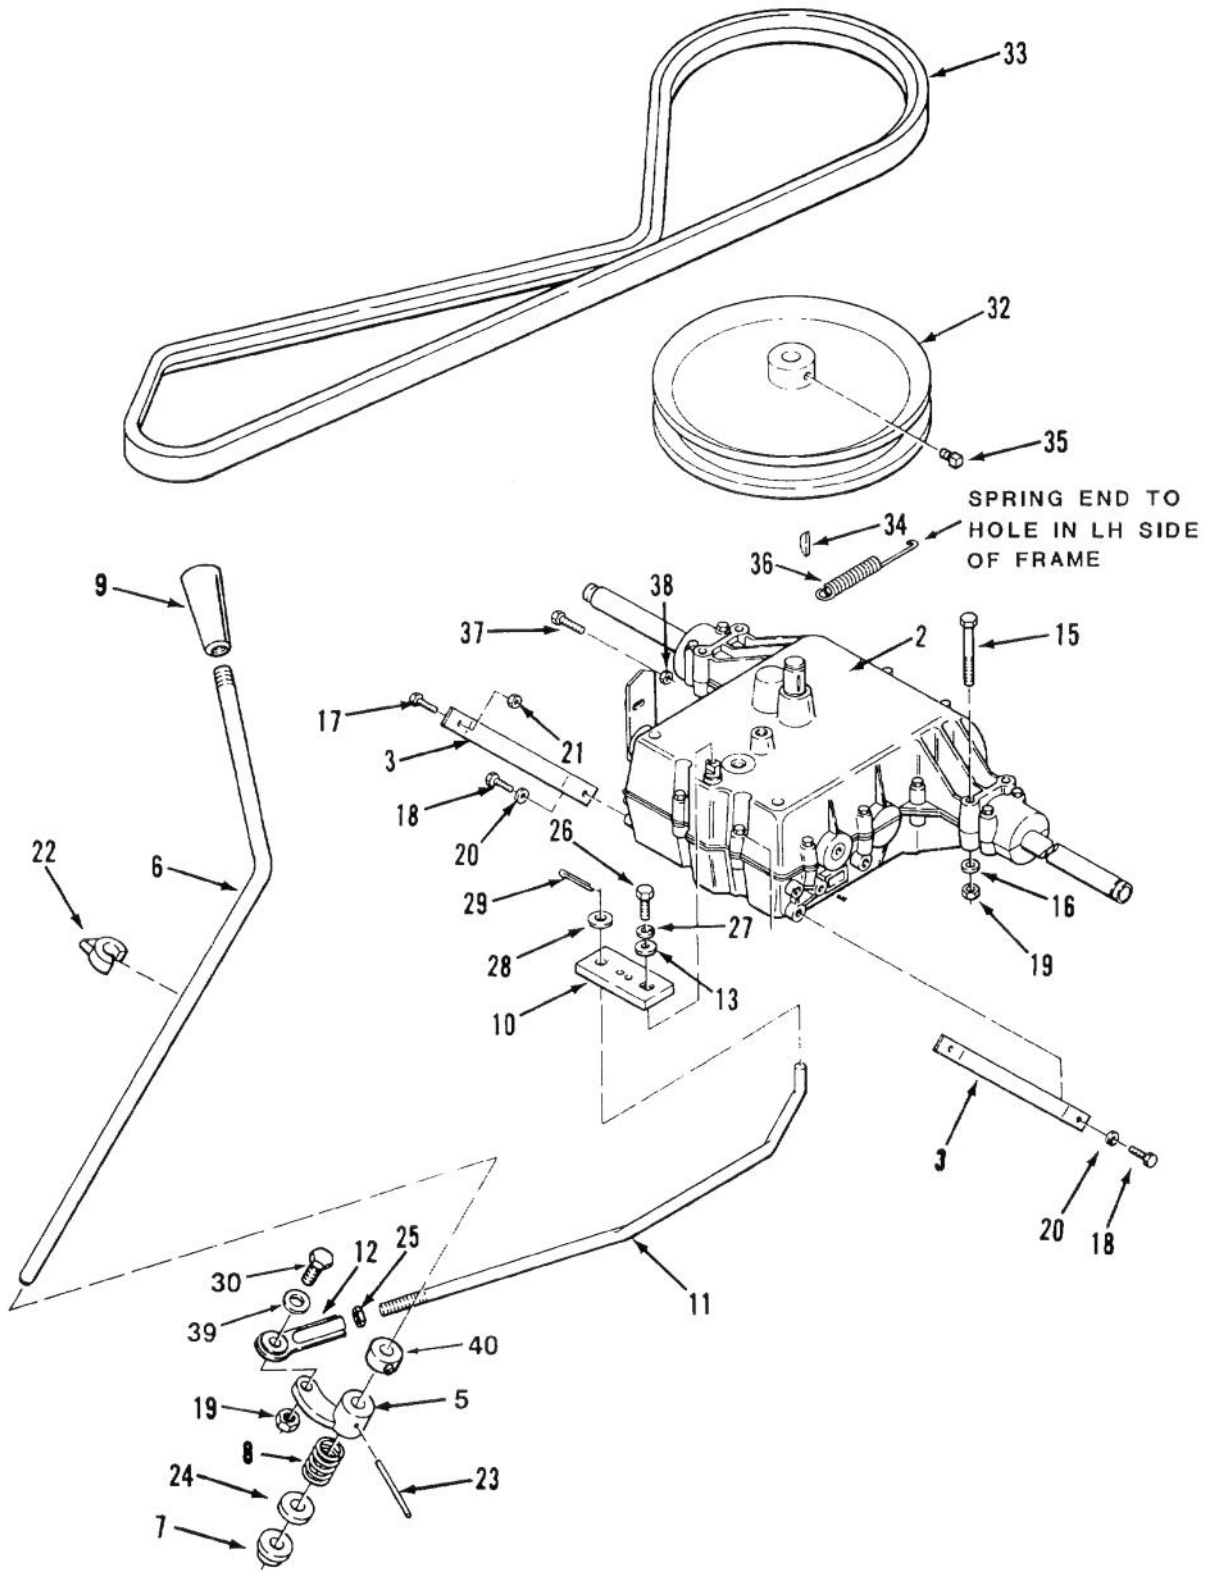


TRANSMISSION ASSEMBLY (210-5 & 212-5)

3315-195

Ref. No.	Part No.	Description	No. Used
2	78-3340	Transmission Assembly (Peerless Model 930-020)	1
3	112982	Strap - Torque	2
5	111430	Arm	1
6	78-2020	Shaft	1
7	5666	Bushing - Nylon	1
8	111432	Spring	1
9	112983	Knob	1
10	115198	Arm - Transmission	1
11	115042	Rod	1
12	115043	End - Rod	1
13	104869	Washer - Special	1
15	322-12	Screw - Hex. Hd.	4
16	3256-23	Washer	6
17	900036	Bolt - Carriage	2
18	926720	Screw	2
19	3296-29	Nut - Lock	5
20	3253-4	Washer - Lock	2
21	915112	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
22	113025	Pointer	1
23	933273	Pin - Spirol	1
24	3765	Washer - Shim	A/R
25	3220-2	Nut - Jam	1
26	329-5	Screw - Hex. Hd.	1
27	3253-3	Washer - Lock	1
28	920268	Washer	1
29	3272-6	Pin - Cotter	1
30	322-6	Bolt	1
32	108790	Pulley - Transmission	1
33	114860	Belt - Transmission Drive	1
34	937225	Key - Hi-Pro	1
35	3242-2	Screw - Sq. Hd. Set	2
36	110769	Spring - Brake Return	1
37	322-5	Bolt - Brake Stop	1
38	915112	Nut - Lock	1
39	3256-23	Washer - Flat	1
40	78-2030	Collar	1

 TRANSMISSION ASSEMBLY (210-H & 212-H)

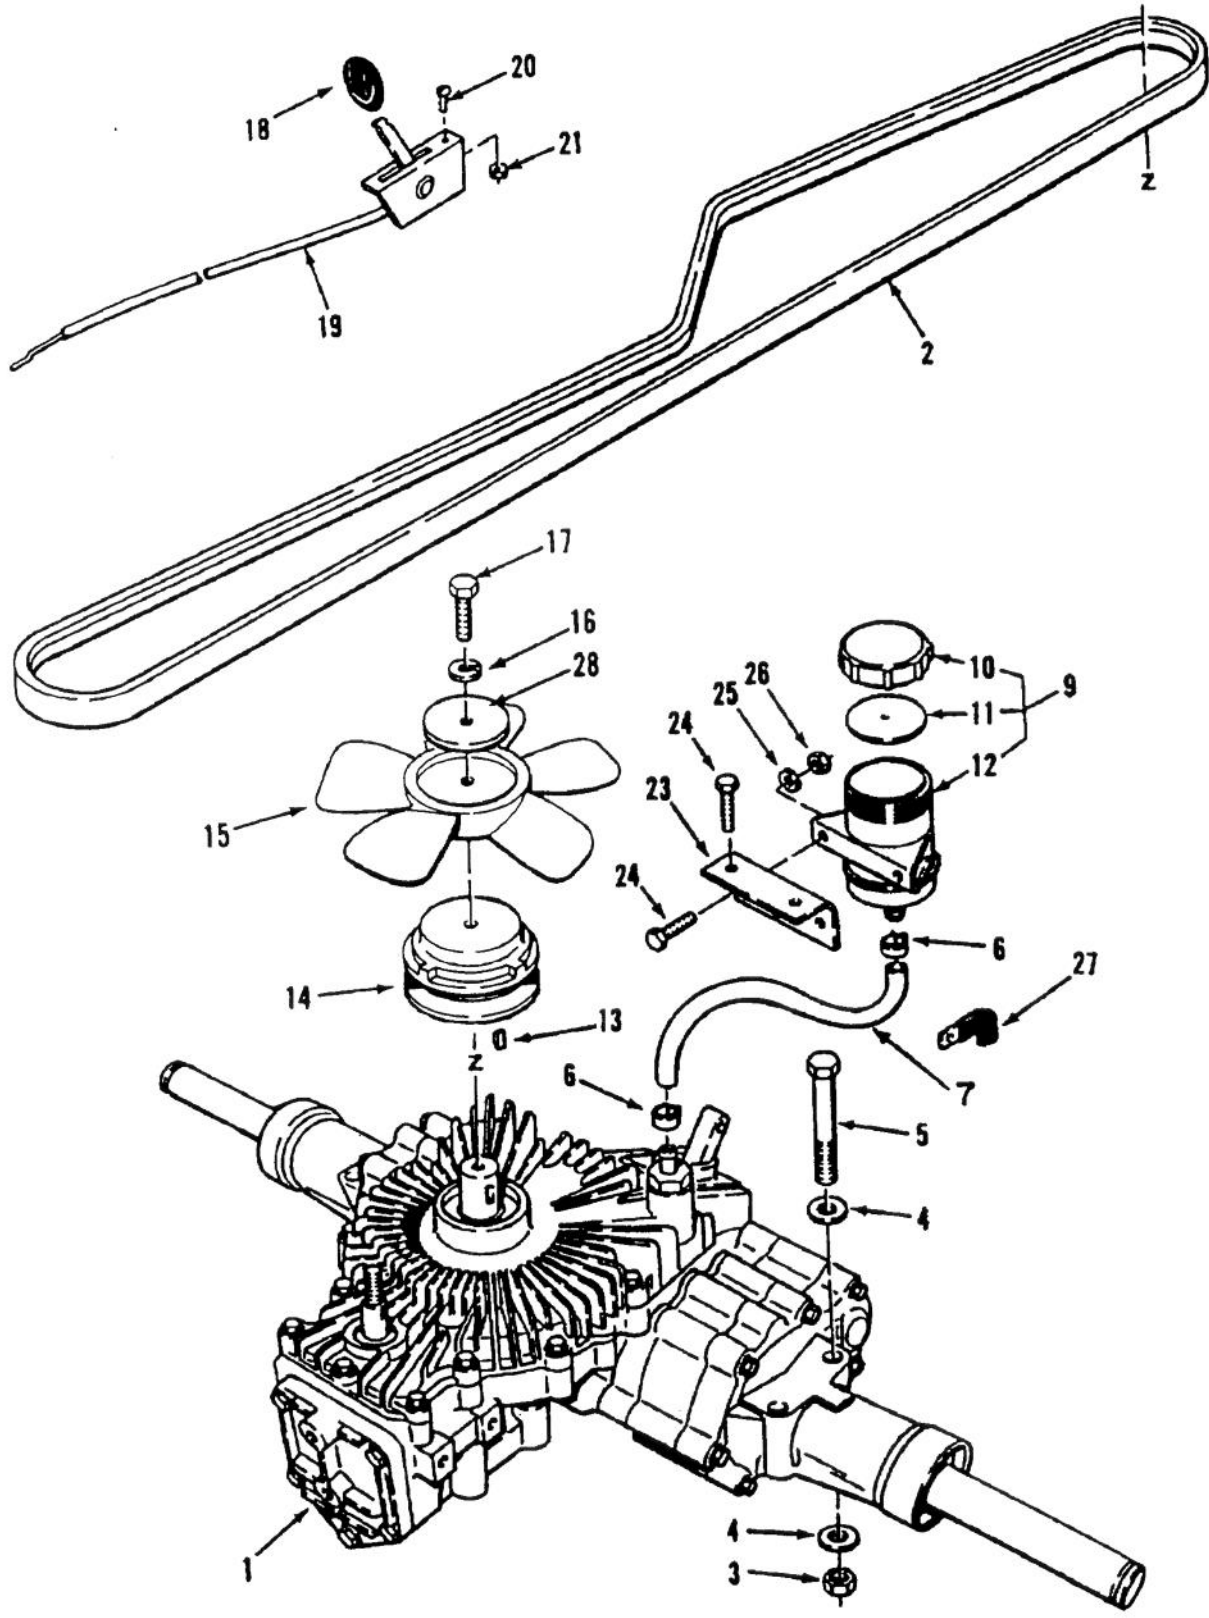


TRANSMISSION ASSEMBLY (212-H)

Ref. No.	Part No.	Description	No. Used
1	79-2750	Transmission Assembly (Eaton Model 751-042)	1
2	114433	Belt	1
3	3296-29	Nut - Lock	4
4	3256-23	Washer - Flat	4
5	322-14	Bolt	4
6	79-2380	Clamp - Hose	2
7	79-2730	Hose	1
*	79-2740	Spring (Inside Item #7)	1
9	79-3500	Reservoir Assembly (Incl. Ref. #10-12)	1
10	79-1080	Cover	1
11	114563	Gasket - Cover	1
12	79-3510	Reservoir	1
13	937222	Key - Hi-Pro	1

Ref. No.	Part No.	Description	No. Used
14	78-2870	Pulley - Input Shaft	1
15	114638	Fan	1
16	103995	Washer - Lock	1
17	908003	Bolt	1
18	103917	Knob	1
19	116126	Cable - Push Valve	1
20	910792	Screw	2
21	915740	Nut - Lock	2
23	116007	Bracket - Reservoir	1
24	321-4	Bolt	2
25	3256-22	Washer - Flat	2
26	3296-42	Nut - Lock	2
27	8830	Clip	2
28	103995	Washer	1

*Not Illustrated

 TRANSMISSION EATON MODEL 751-042

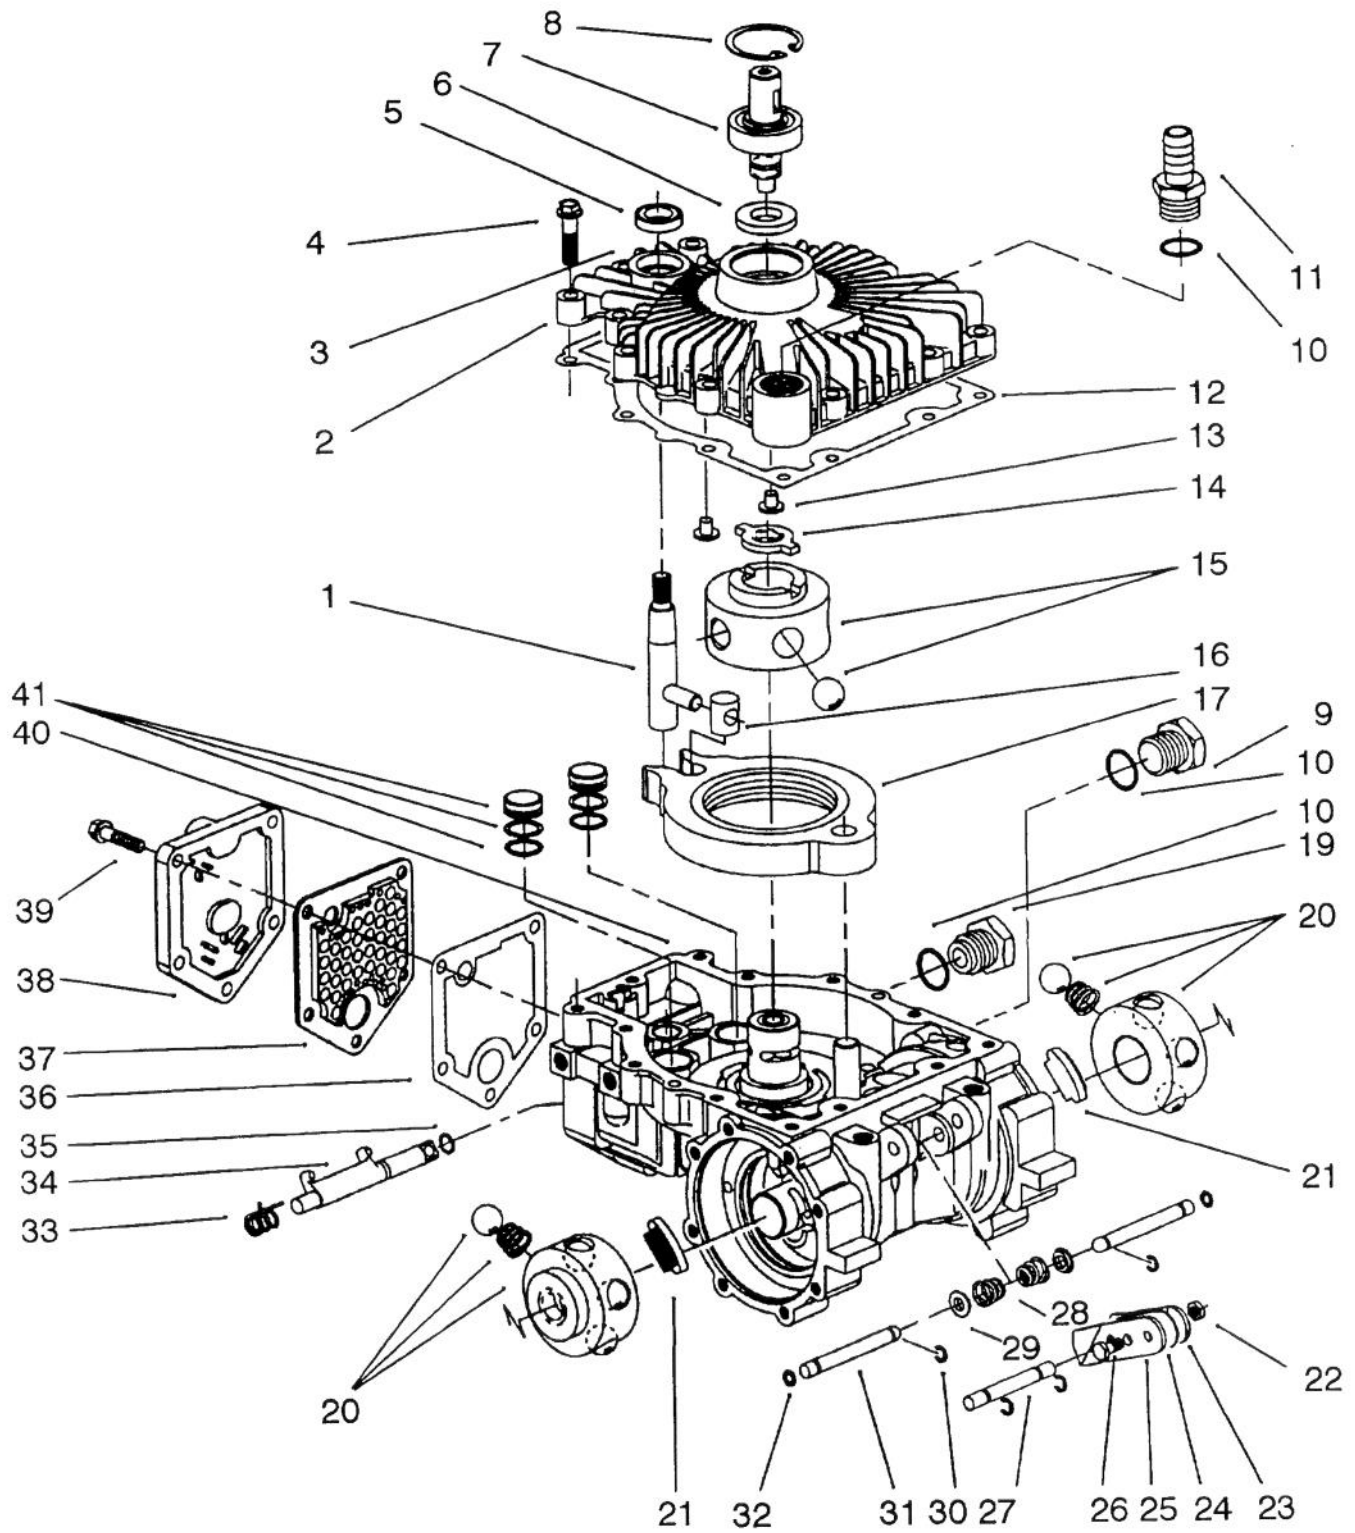


c-1204

TRANSMISSION EATON MODEL 751-042

Ref. No.	Part No.	Description	No. Used
1	88-2200	Shaft - Control	1
2	88-2210	Cover Assembly (Incl. Ref.# 3, 5-8)	1
3	88-2220	Cover	1
4	88-2230	Screw - 1/4-20	13
5	112605	Seal - Control Shaft	1
6	112604	Seal - Input Shaft	1
7	88-2240	Shaft - Input	1
8	112600	Ring - Retaining	1
9	88-2250	Plug Assembly (incl. Ref. #10)	1
10	88-2260	Seal - "O"Ring	3
11	88-2850	Fitting 90°	1
12	88-2280	Gasket - Cover	1
13	112595	Button	2
14	88-2290	Drive	1
15	88-2300	Pump Assembly, Rotor Ball	1
16	88-2310	Insert	1
17	88-2320	Ring Assembly - Cam	1
19	88-2340	Nut - Assembly	1
20	88-2860	Motor Assembly Rotor Ball	2

Ref. No.	Part No.	Description	No. Used
21	88-2350	Pad - Friction	2
22	88-2360	Nut - Lock	1
23	88-2370	Lever - Brake, R.H.	1
24	88-2380	Shim - .020	A/R
*	88-3140	Shim - .030	A/R
25	88-2390	Lever - Brake, L.H.	1
26	88-2400	Screw - Hex. Hd.	1
27	88-2410	Shaft - Brake	1
28	88-2420	Spring - Conical,	2
29	88-2430	Base - Spring	2
30	88-2440	Ring - Retaining	4
31	88-2450	Rod - Push	2
32	88-2460	Seal - Quad	2
33	88-2470	Spring - Dump Valve	1
34	88-2480	Bracket - Dump Valve	1
35	88-2490	"O"Ring - Seal	1
36	88-2500	Gasket - Filter	1
37	88-2510	Filter	1
38	88-2520	Cover - Valve	1
39	88-2530	Screw - 1/4-20 Hex. Hd.	5
40	88-2540	Housing	1
41	88-2540	Piston Assembly	2

 TRANSMISSION EATON MODEL 751-042

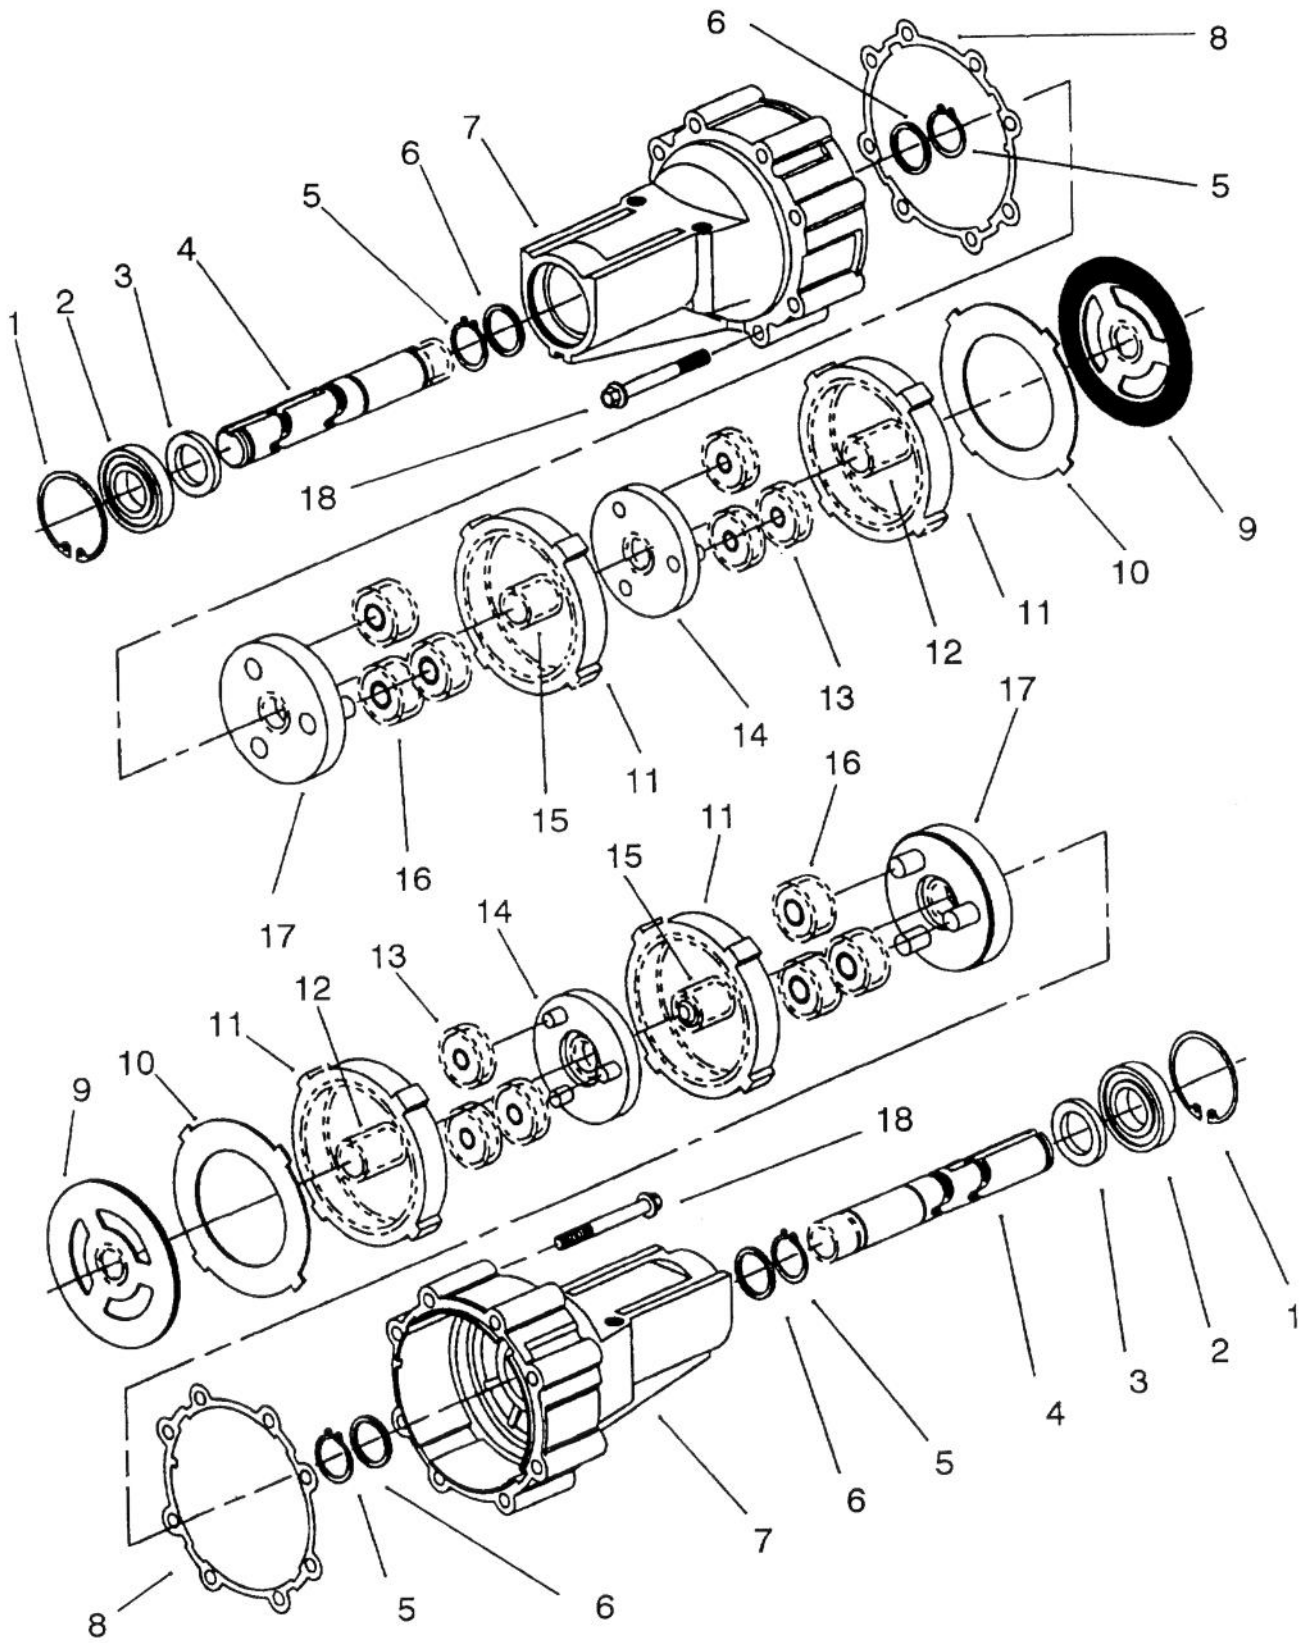


TRANSMISSION EATON MODEL 751-042

Ref. No.	Part No.	Description	No. Used
1	88-2560	Ring - Retaining	2
2	88-2570	Bearing - Ball	2
3	88-2580	Seal - Radial Lip	2
4	88-2590	Shaft - Axle	2
5	88-2600	Ring - Retaining	4
6	88-2610	Washer - Thrust	4
7	88-2620	Housing - Axle	2
*	88-2630	Housing Assembly - Axle (Incl. Ref.# 1-7)	2
8	88-2640	Gasket - Axle Housing	2
9	88-2650	Plate - Reaction	2

Ref. No.	Part No.	Description	No. Used
10	88-2660	Plate - Backup	2
11	88-2870	Gear - Ring, 54 Tooth	4
12	88-2880	Gear - First, 15 Tooth	2
13	88-2890	Gear - Planet, First	6
14	88-2900	Carrier Primary	2
15	88-2910	Gear - Second, 15 Tooth	2
16	88-2920	Gear - Second, 21 Tooth	6
17	88-2830	Carrier - Secondary	2
18	88-2840	Screw - 5/16 Hex. Hd.	16

 TRANSMISSION LINKAGE ASSEMBLY (210-H & 212-H)

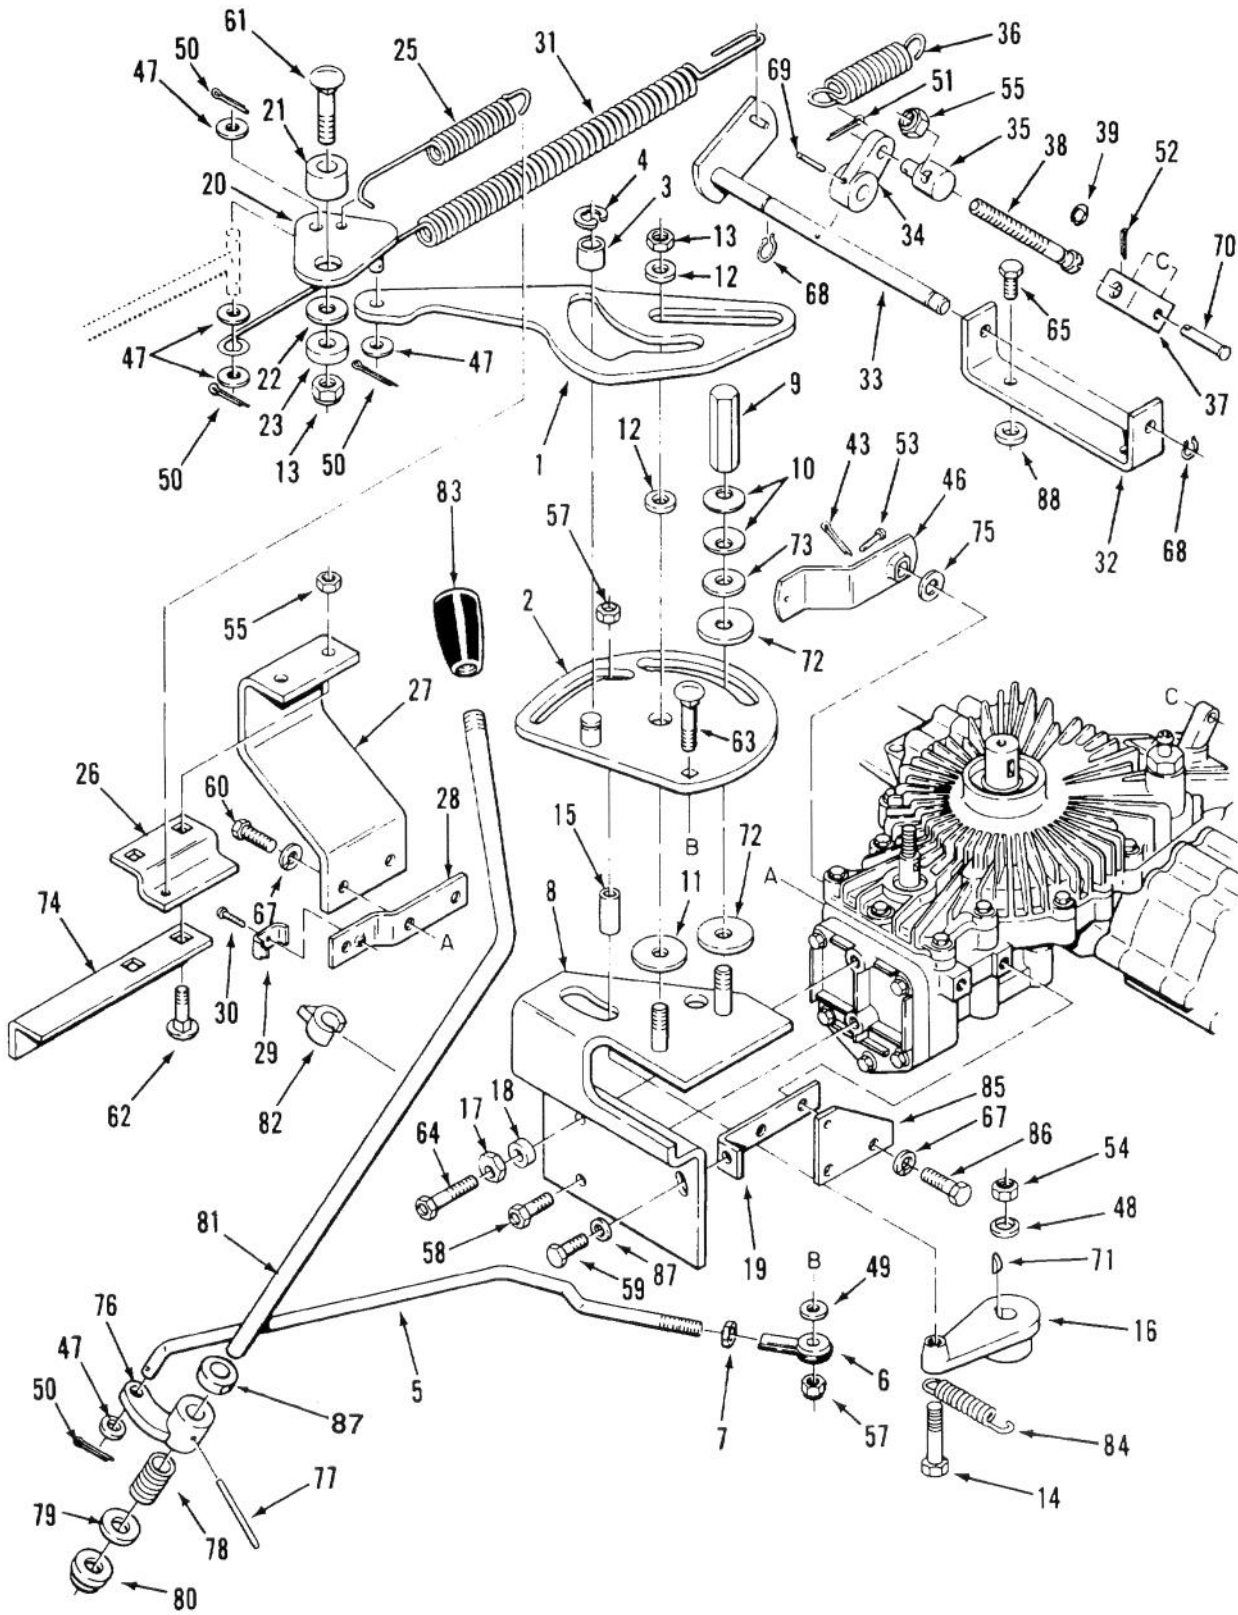


TRANSMISSION LINKAGE ASSEMBLY (210-H & 212-H)

Ref. No.	Part No.	Description	No. Used
1	114416	Plate - Neutral Return	1
2	114401	Plate - Cam	1
3	100656	Bearing - Cam Return	1
4	32120-47	Ring - Retaining	1
5	116339	Rod - Speed Control	1
6	110189	Rod - End	1
7	3220-1	Nut - Jam	1
8	114403	Support - Cam Plate	1
9	114695	Nut - Special	1
10	100365	Washer - Spring Disc	2
11	100305	Washer - Friction	1
12	100309	Spacer - Cam	2
13	109779	Nut - Jam	2
14	911459	Bolt	1
15	114402	Spacer	1
16	116340	Arm - Motion Control	1
17	106661	Cam	1
18	109447	Gear - Spacer	1
19	114656	Support - Angle	1
20	114404	Plate - Neutral Pivot	1
21	114697	Spacer	1
22	920271	Washer - Special	1
23	104859	Spacer - Lift Link	1
25	114818	Spring	1
26	114668	Bracket - Spring	1
27	114410	Bracket - Torque	1
28	115678	Plate - Mounting	1
29	111688	Clamp	1
30	926641	Screw	1
31	114698	Spring - Brake	1
32	114666	Bracket	1
33	79-3480	Pivot - Brake	1
34	114663	Plate	1
35	104524	Trunnion	1
36	107677	Spring - Brake	1
37	114665	Clevis	1
38	79-2720	Bolt - Adjusting	1
39	32151-73	Ring - Retaining	1
43	932000	Pin - Cotter	1
46	116398	Plate - Arm	1

Ref. No.	Part No.	Description	No. Used
47	3256-23	Washer	5
48	3256-24	Washer	1
49	3256-22	Washer	1
50	3272-6	Pin - Cotter	3
51	3272-7	Pin - Cotter	1
52	3272-2	Pin - Cotter	1
53	932948	Pin - Clevis	1
54	32146-2	Nut - Lock	1
55	3296-29	Nut - Lock	3
57	3296-42	Nut - Lock	2
58	926696	Bolt	1
59	322-2	Bolt	1
60	322-3	Bolt	2
61	3231-4	Bolt - Carriage	1
62	3230-2	Bolt - Carriage	2
63	3229-2	Bolt - Carriage	1
64	926698	Screw	1
65	908016	Bolt	2
67	3253-4	Washer - Lock	4
68	32151-52	Ring - Snap	2
69	32120-50	Pin - Spirol	1
70	932948	Pin - Clevis	1
71	937082	Key - Woodruff	1
72	114821	Washer - Friction	2
73	3256-4	Washer	1
74	115677	Bracket	1
75	920259	Washer	1
76	111430	Arm	1
77	933273	Pin - Spirol	1
78	111432	Spring	1
79	3765	Washer - Shim	1
80	5666	Bushing Nylon	1
81	78-3230	Shaft	1
82	113025	Pointer	1
83	112983	Knob	1
84	117326	Spring	1
85	117325	Bracket - Spring	1
86	322-5	Screw - Hex. Hd.	2
87	78-2030	Collar	1
88	111044	Spacer	2

*Not Illustrated

 ENGINE BRIGGS & STRATTON MODEL 257707-0123-01

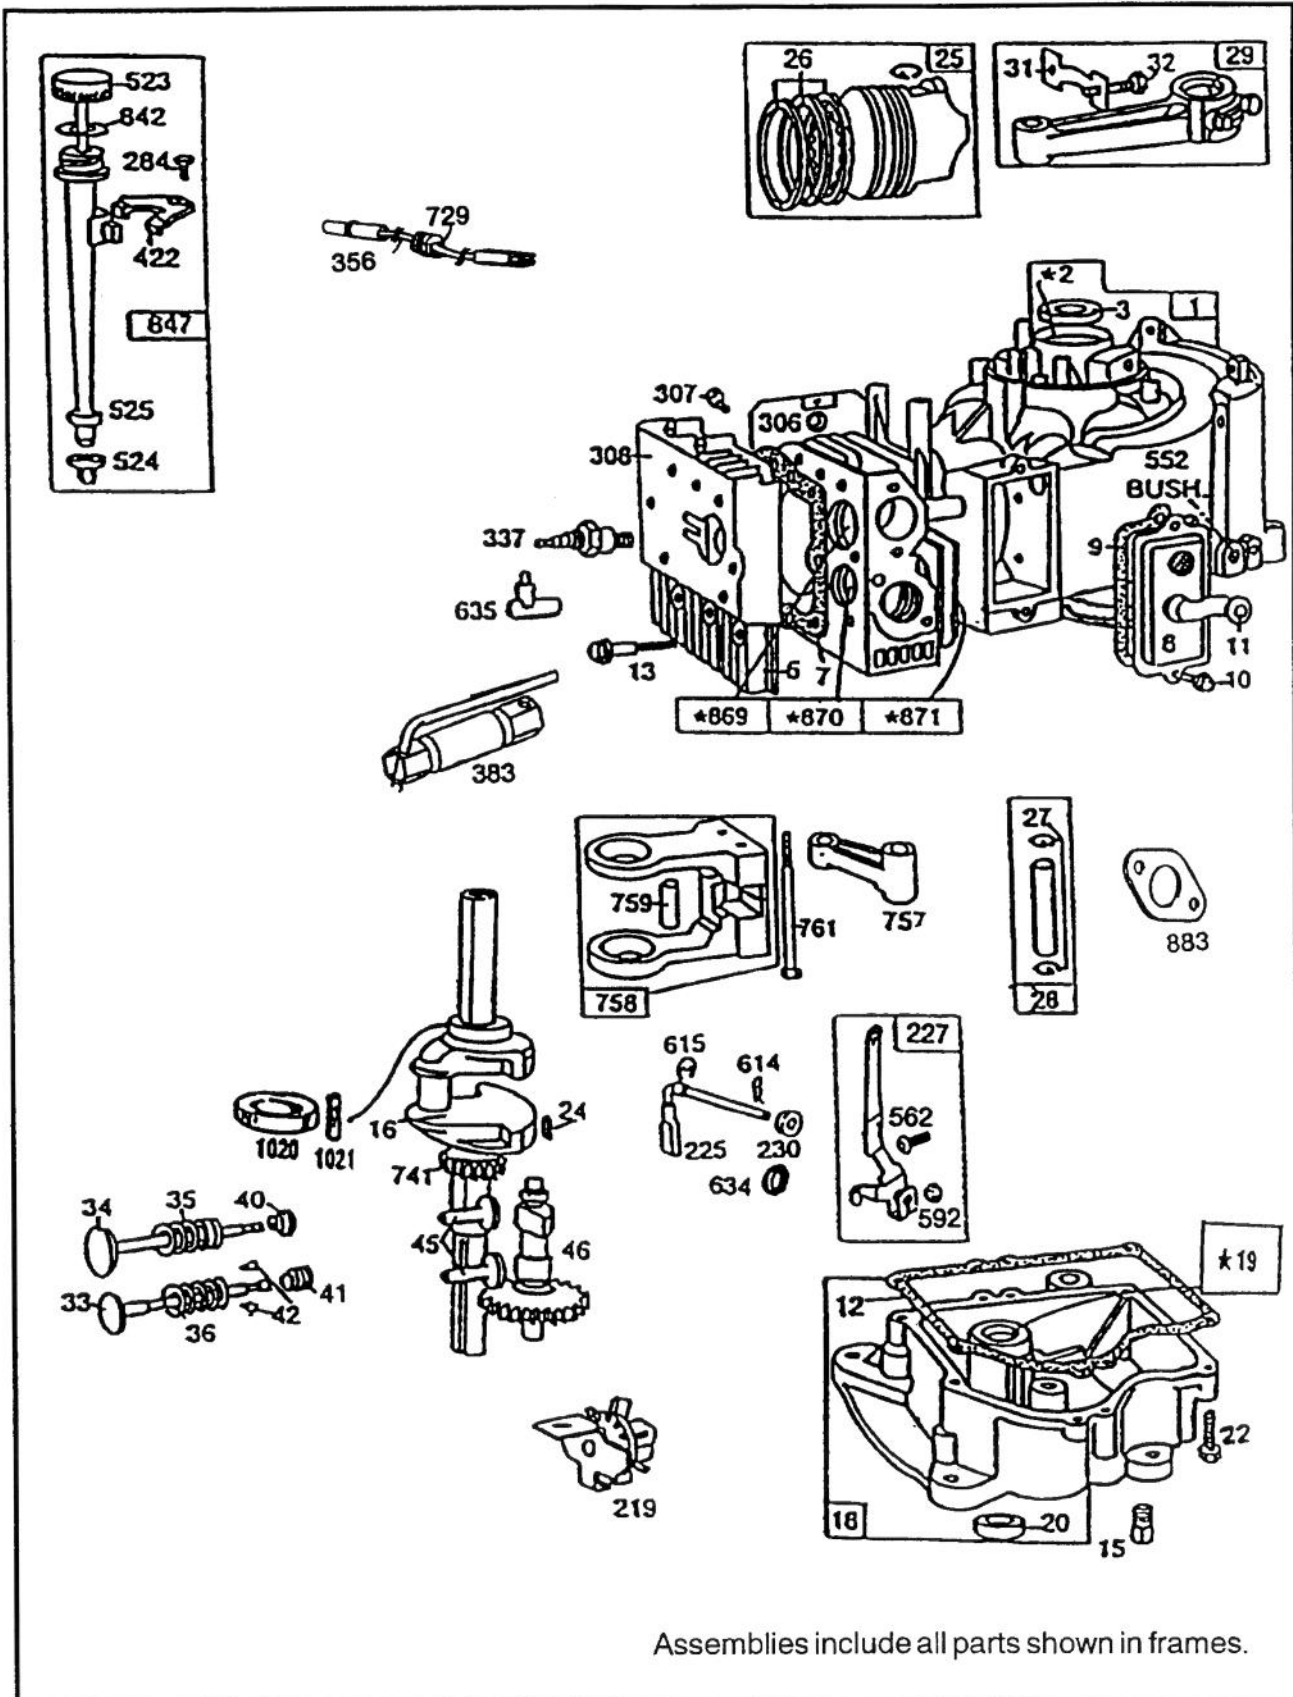

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 257707-0123-01

Ref. No.	Part No.	Description	No. Used
1	395705	Cylinder Assembly	2
2	399265	Bearing-Cylinder Note: Requires Special Tools For Installation.	
3	391086	Seal-Oil	1
5	212914	Head-Cylinder	1
*7	271866	Gasket-Cylinder Head	1
8	391406	Breather Assembly	
*9	27803	Gasket-Valve Cover	
10	94621	Screw-Sem	
11	280100	Tube-Breather	
*12	271702	Gasket-Crankcase Cover (1/64" Thick)	
*	270915	Gasket-Crankcase Cover (.005" Thick)	
*	270916	Gasket-Crankcase Cover (.009" Thick)	
13	93723	Screw-Cylinder Head	
15	94239	Plug-Oil Drain	
16	491647	Crankshaft Note: Order 94196 for Timing Gear Key.	
18	391784	Sump-Engine	
19	490666	Bushing-Sump Note: Requires Special Tools For Installation.	
20	291675	Seal-Oil	
22	93585	Screw-Sump Mtg.	
24	222698	Key-Flywheel	
25	394661	Piston Assy. (Standard)	
	394662	Piston Assembly (.010" O.S.)	
	394663	Piston Assembly (.020" O.S.)	
	394664	Piston Assembly (.030" O.S.)	
		PISTON RING SETS: Note: For Chrome Ring Set (Standard Size) Order No. 392331.	1
26	391780	Ring Set-Piston (Std.)	
	391781	Ring Set-Piston (.010" O.S.)	
	391782	Ring Set-Piston (.020" O.S.)	
	391783	Ring Set-Piston (.030" O.S.)	
27	260924	Lock-Piston Pin	
28	299691	Pin Assy.-Piston-Standard	
	391286	Pin Assembly-Piston (.005" O.S.)	1
29	490348	Rod Assy.- Conn. Note: For Connecting Rod With .020" Undersize Crankpin Bore-Order No. 490469.	
31	222299	Lock-Connecting Rod Screw	
32	92909	Screw-Conn. Rod	

* Included in Gasket Set-Part No. 393411.


Ref. No.	Part No.	Description	No. Used
33	261185	Valve-Exhaust	
34	261462	Valve-Intake	
35	65906	Spring-Intake Valve	
36	26828	Spring-Exhaust Valve	
40	221596	Retainer-Intake Valve	
41	292260	Rotocoil-Ex. Valve	
42	93630	Retainer-Exhaust Valve Rotocoil (2)	
45	262248	Tappet-Valve	
46	212897	Gear-Cam	
219	490815	Oil Slinger, Governor Gear and Bracket Assembly	
225	231058	Crank-Governor	
227	493935	Lever Assy.-Governor	
230	222450	Washer-Governor Crank	
284	94419	Screw-Clamp Mtg.	
306	224542	Shield-Cylinder	
307	93949	Screw-Cylinder Shield Mtg. Sem	
308	222725	Cover-Cylinder Head	
337	802592	Plug-Spark	
356	494328	Wire Assy.	
358	393411	Gasket Set	
383	89838	Wrench-Spark Plug	
422	223394	Clamp-Oil Filler Tube	
523	391841	Cap and Dipstick-Oil Filler	
524	68838	Seal-Filler Tube	
525	280134	Tube-Oil Filler	
552	231597	Bushing-Governor Crank	
562	92613	Bolt-Governor Lever	
592	231082	Nut-Hex.	
614	93306	Cotter-Pin	
615	93307	Retainer-E-Ring	
634	491323	Seal-Oil	
635	66538	Elbow-Spark Plug	
729	281159	Clip-Lead Wire	
741	262135	Gear-Timing	
757	212359	Link-Counterweight	
758	391373	Counterweight Assembly	
759	298909	Pin-Counterweight	
761	93875	Screw-Counterweight	
842	270920	Seal-Oil Filler Cap	
847	392067	Fill Group-Oil	
869	261463	Seat-Intake Valve (Standard)	
870	213316	Seat-Exhaust Valve (Standard)	
871	261961	Guide-Exhaust Valve Note: 231218 Guide-Intake Valve (Brass) See Repair Manual	
883	272293	Gasket-Exhaust Pipe	
1020	261242	Eccentric	
1021	94160	Pin-Eccentric	

 ENGINE BRIGGS & STRATTON MODEL 257707-0123-01

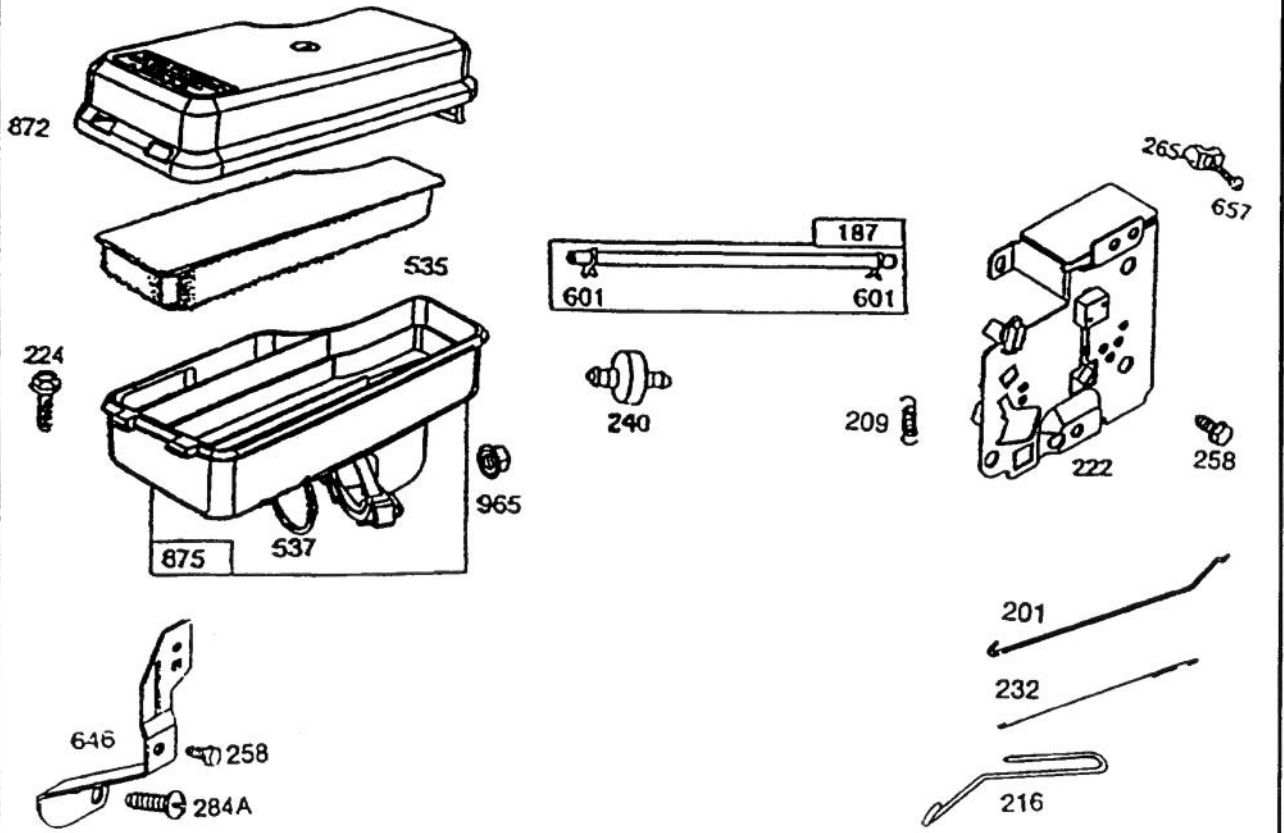

121 Carburetor Overhaul Kit

 977 Carburetor Gasket Set

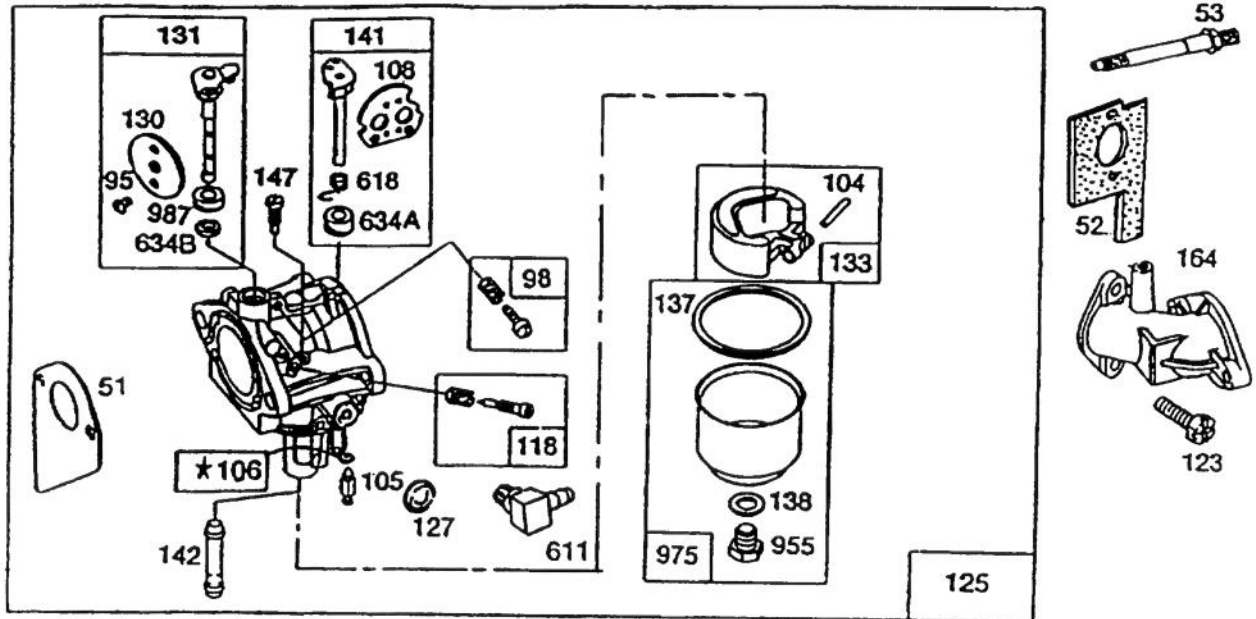


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 257707-0123-01

Ref. No.	Part No.	Description	No. Used
◆51	272465	Gasket-Carburetor (Carb. to Elbow)	
★52	270872	Gasket-Carburetor Mounting	
53	94637	Stud-Carburetor Mounting	
●95	94098	Screw-Throttle	
98	494382	Screw-Idle Speed	
●104	231789	Pin-Float Hinge	
●105	231790	Valve Assy.-Inlet Needle	
●106	281169	Inlet Valve Seat	
108	224666	Valve-Choke	
118	494383	Valve-Needle	
121	494882	Carburetor Overhaul Kit	
123	94616	Screw-Carburetor Mtg.	
125	494881	Carburetor Assembly	
●127		Plug-Welch (Sold in Kit Only).	
130	224539	Valve-Throttle	
131	494379	Shaft and Lever-Throttle	
133	494381	Float-Carburetor	
◆◆137	281165	Gasket-Float Bowl	
◆◆138	281164	Washer-Float Bowl Screw	
141	494879	Shaft and Lever-Choke	
●142	494878	Nozzle/Jet-Carburetor	
●147	231794	Pilot-Jet	
164	213819	Elbow-Carburetor	
187	393815	Hose Assy.-Fuel	
201	262767	Link-Governor	

Ref. No.	Part No.	Description	No. Used
209	261306	Spring-Governor	
216	262778	Link-Choke	
222	494041	Plate-Governor Control	
224	94513	Screw-Hex. Head	
232	262785	Spring-Governor Link	
240	298090	Filter-Fuel	
258	94620	Screw-Hex. Head	
265	221535	Clamp-Casing	
284A	94326	Screw-Pan Head	
535	272405	Element-Air Cleaner	
537	281106	O-Ring	
601	93053	Clamp-Hose	
611	494451	Fuel Inlet Tube	
618	262803	Spring-Choke	
●634A	281168	Seal-Choke Shaft	
●634B	281167	Washer-Throttle Shaft	
646	224546	Brace-Air Cleaner	
657	93496	Screw-Sem	
872	281108	Cover-Air Cleaner	
875	494745	Body-Air Cleaner	
955	94642	Screw-Fuel Bowl	
965	94108	Locknut	
975	494378	Bowl Assy.-Carburetor	
977	494385	Carburetor Gasket Kit	
●987	281166	Seal-Throttle Shaft	

 
- ◆ Included in Carburetor Overhaul Kit-Part No. 494882.
- ◆◆ Included in Carburetor Gasket Set-Part No. 494385.
- ★ Included in Gasket Set-Part No. 393411.

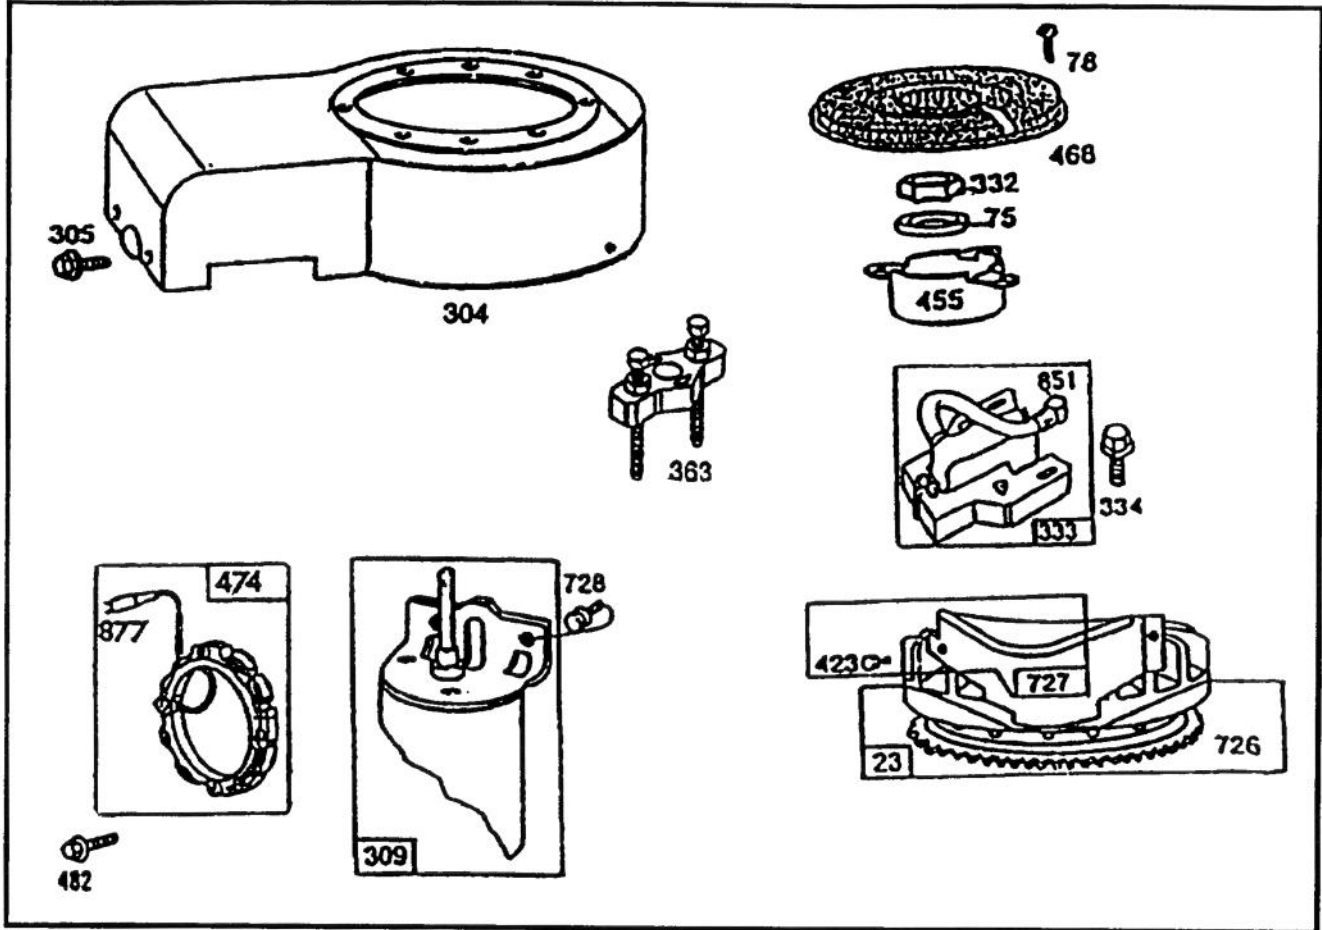

ENGINE BRIGGS & STRATTON MODEL 257707-0123-01

Ref. No.	Part No.	Description	No. Used
23	391988	Flywheel and Ring Gear Assy.	
75	224061	Washer-Spring	
78	93805	Screw-Sem	
304	494087	Housing-Blower	
305	94608	Screw-Blower Housing Mtg.	
332	92284	Nut-Hex. (Flywheel Mtg.)	
333	398811	Armature-Magneto	
334	93381	Screw-Armature Mounting Sem	
363	19203	Puller-Flywheel	
423	93984	Screw-Hex. Hd. (Shield Mtg.)	


Ref. No.	Part No.	Description	No. Used
455	222561	Cup-Screen Mtg.	
468	222562	Screen-Flush Rotating	
474	392595	Stator Assy. (Tri Circuit)	
482	93621	Screw-Sem	
726	392134	Gear-Ring (Includes Mtg. Parts)	
727	395405	Shield-Stator	
728	93535	Screw-Hex. Hd.	
851	221798	Terminal-Ignition Cable	
877	393537	Connector Assy.-Stator	

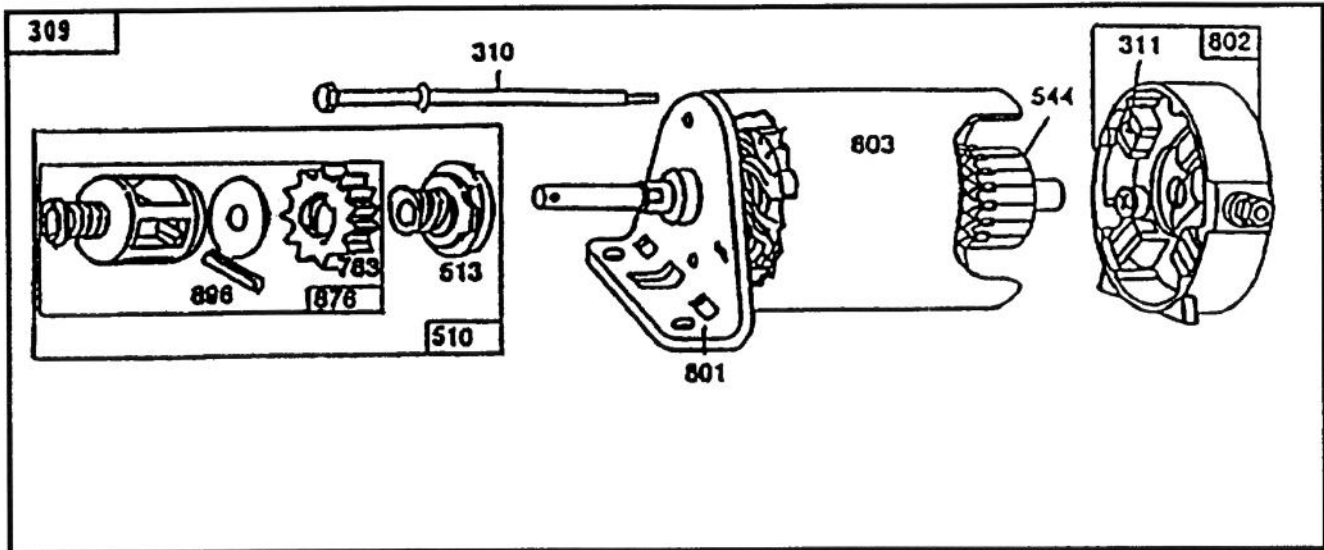 

STARTER B/S MODEL 257707-0123-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
309	394805	Motor & Drive Assembly	1	783	280104	Gear	1
310	94003	Bolt Assembly	2	801	394856	Cap Assembly - Drive End	1
311	395538	Brush Assembly	1	802	395537	Cap Assembly - Commutator End (Incl. Ref. #513, 783, 876 & 896)	1
510	490421	Drive Assembly (Incl. Ref. #513, 783, 876 & 896)	1	803	398159	Housing Assembly	1
513	398003	Clutch Assembly	1	876	490467	Retainer & Pin	1
544	390837	Armature Assembly	1	896	94288	Pin - Roll	1

 PEERLESS TRANSMISSION MODEL NO. 930-020 (210-5 & 212-5)

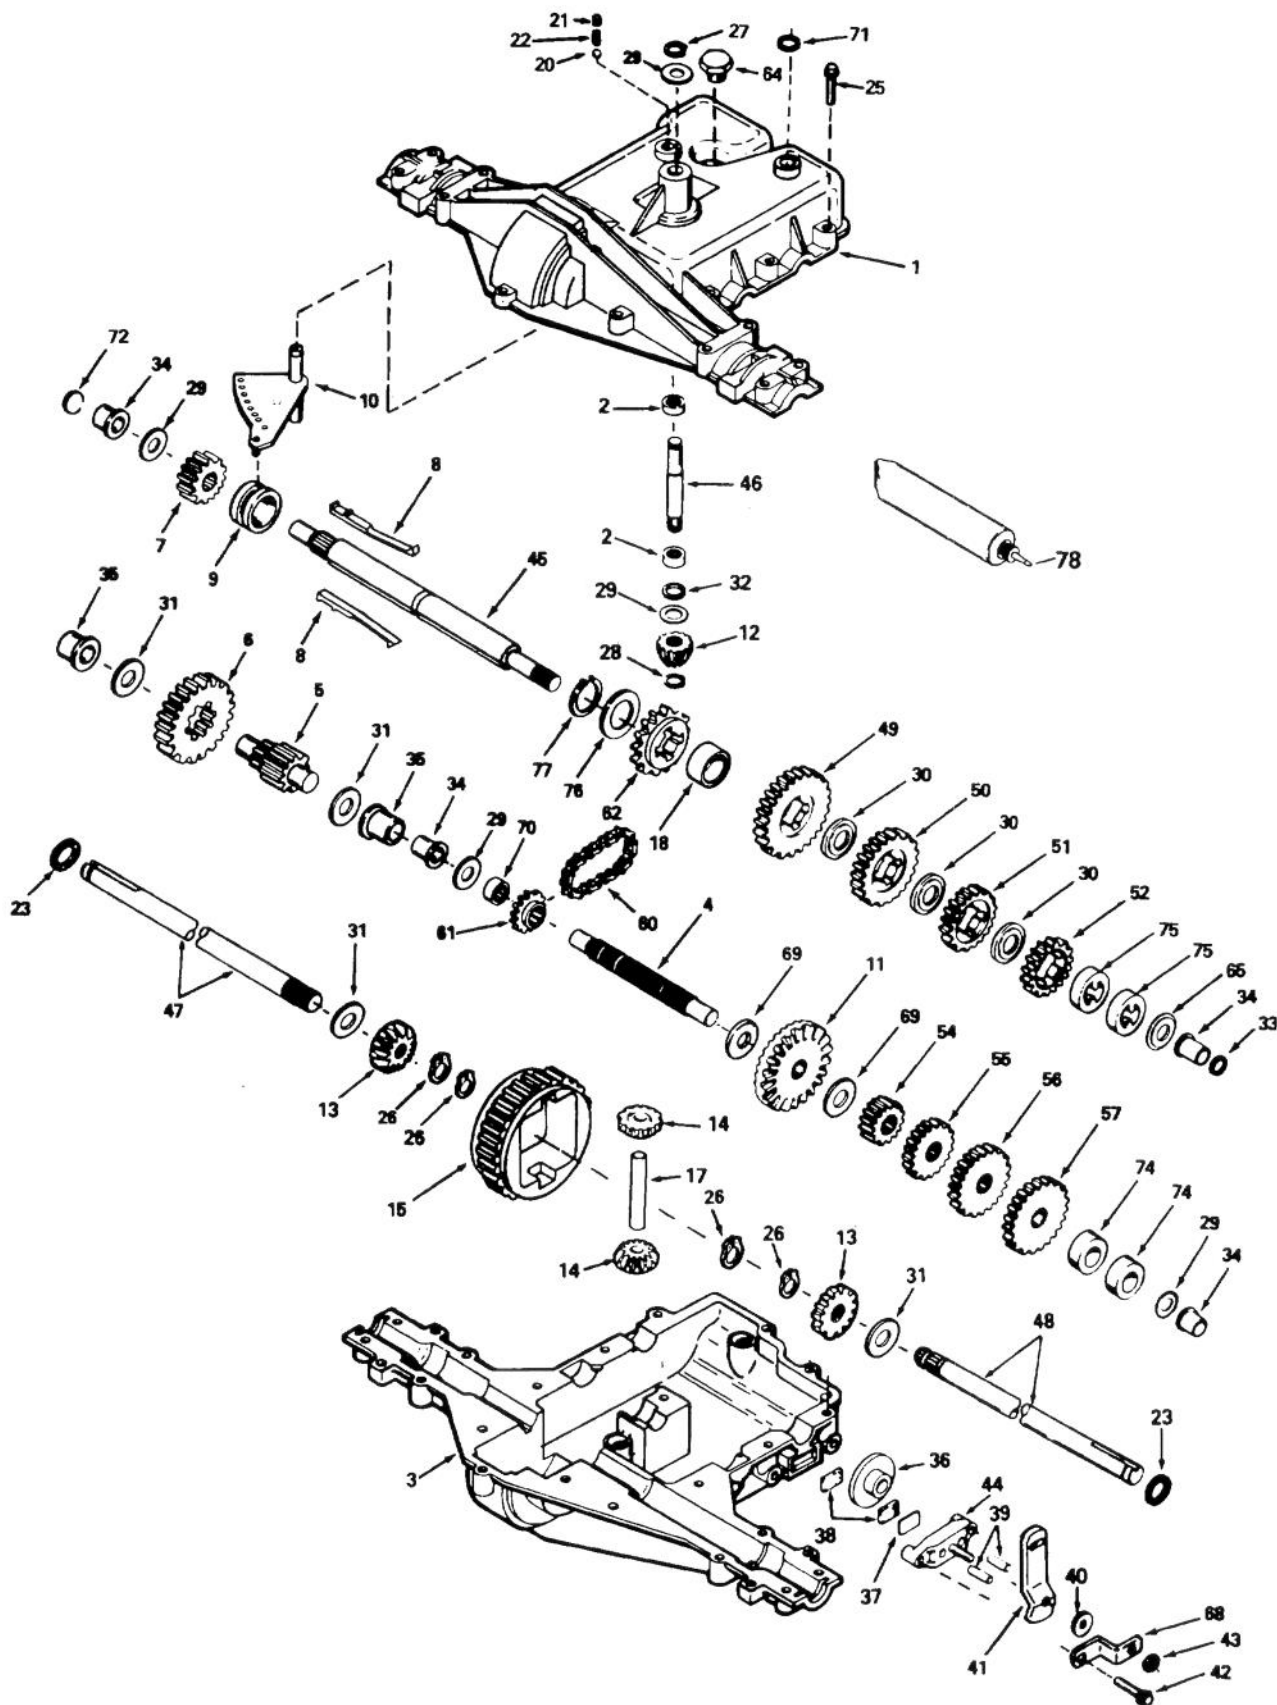

PEERLESS TRANSMISSION MODEL NO. 930-020 (210-5 & 212-5)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	772108	Cover - Transaxle	1	39	786026	Pin - Dowel	2
2	780086	Bearing - Needle	2	40	792076	Washer - Flat	1
3	770102	Case - Transaxle	1	41	790039	Lever - Brake	1
4	776260	Shaft - Counter	1	42	792073	Screw - Flanged Hex Hd.	2
5	776219	Output Shaft & Pinion Assy.	1	43	792075	Nut - Lock	1
6	778139	Gear - Output	1	44	790025	Holder - Brake Pad	1
7	778136	Gear - Spur (15 teeth)	1	45	776315A	Shaft - Brake (4-keyed)	1
8	792136	Key - Shifter	2	46	776135	Shaft - Input	1
9	784352	Collar - Shifter	1	47	774688	Axle (11-5/8" long)	1
10	784354	Shift Rod & Fork Assy.	1	48	774747	Axle (16-1/4" long)	1
11	778229	Gear - Bevel (42 teeth)	1	49	778191	Gear - Spur (37 teeth)	1
12	778113A	Bevel Pinion - Input	1	50	778125	Gear - Spur (35 teeth)	1
13	778221	Gear - Bevel	2	51	778124A	Gear - Spur (30 teeth)	1
14	778068	Gear - Bevel Pinion	2	52	778123A	Gear - Spur (25 teeth)	1
15	778260	Gear - Ring	1	53	778121A	Gear - Spur (20 teeth)	1
16	786139	Pin - Drive	1	54	778230	Gear - Spur (12 teeth)	1
18	786102	Spacer	1	55	778151	Gear - Spur (15 teeth)	1
20	792077	Ball - Steel	1	56	778126A	Gear - Spur (20 teeth)	1
21	792078	Set Screw	1	57	778127A	Gear - Spur (25 teeth)	1
22	792079	Spring	1	58	778129A	Gear - Spur (30 teeth)	1
23	788061	Ring - Seal	2	60	786062A	Chain - Roller	1
25	792073	Screw - Flanged Hex. Hd.	17	61	786061	Sprocket (10 teeth)	1
26	792125	Ring - Retainer (Pkg. of 2)	4	62	786124	Sprocket (14 teeth)	1
27	792035	Ring - Retainer	1	64	792074	Plug - Hex. Hd.	1
28	788040	Ring - Retainer	1	65	780109	Washer - Thrust	1
29	780072	Washer - Thrust	5	68	786086	Bracket - Brake Lever	1
30	780108	Washer - Thrust	4	69	780051	Washer - Thrust	2
31	780001	Washer	4	70	786118	Spacer	1
32	792001	Seal - O-Ring	1	71	788069	Seal - Square Cut	1
33	788051	Seal - Square Cut	1	72	786116	Disk	1
34	780105A	Bushing - Flanged	4	74	786071	Spacer	1
35	780118A	Bushing - Flanged	2	75	786072	Spacer	1
36	790003	Disk - Brake	1	76	780090	Washer - Thrust	1
37	790007	Plate - Brake Pad	1	77	788075	Ring - Retaining	1
38	790006	Pad - Brake	2	78	788067B	Grease (32 oz. bottle)	1

TORO PART NUMBER INDEX

3315-195

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
1120	Key - Square	13 20 2	109154	Hubcap	13 1 2
1278	Washer - .050	13 9 A/R	109193	Rivet - Pop	7 15 4
1278	Washer - .050	13 21 4	109230	Retainer - Belt	5 47 1
1278	Washer - Shim (.050)	5 22 A/R	109261	Hubcap	13 13 2
2844	Washer - Special	11 39 2	109262	Washer - .050	13 15 6
3023	Clip	9 59 5	109262	Washer - Hubcap	13 11 2
3765	Washer - Shim	43 24 A/R	109355	Fuse - 15 Amp.	9 43 1
3765	Washer - Shim	51 79 1	109444	Pulley - Idler	17 14 1
3765	Washer - Shim (.050)	11 29 A/R	109447	Gear - Spacer	51 18 1
5108	Valve - Stem	13 5 4	109500	Fitting - Grease	13 6 2
5210	Washer - .015	13 10 A/R	109547	Hook	9 4 2
5210	Washer - Shim (.015)	5 * A/R	109553	Cover - Battery Terminal	9 28 1
5666	Bushing Nylon	51 80 1	109779	Nut	5 41 2
5666	Bushing - Nylon	43 7 1	109779	Nut - Jam	51 13 2
5977	Bushing - Nyliner	7 38 2	109989	Spacer - Nylon	1 12 4
7228	Bulb - Light	7 26 2	109989	Spacer - Nylon	3 27 4
8830	Clip	45 27 2	110015	Spacer	15 4 1
8830	Clip	5 37 1	110015	Spacer	17 4 1
8830	Clip	9 58 1	110167	Solenoid	9 13 1
100079	Tube - Inner	13 2 2	110180	Mat - Footrest	5 * 2
100305	Washer - Friction	51 11 1	110189	Rod - End	51 6 1
100309	Spacer - Cam	51 12 2	110370	Pulley - Idler	5 44 1
100365	Washer - Spring Disc	51 10 2	110391	Bushing	11 18 1
100571	Tie - Cable	9 27 1	110459	Connector - 2 Terminal	9 78 1
100656	Bearing - Cam Return	51 3 1	110769	Spring - Brake Return	43 36 1
101884	Nut - Switch	9 31 1	111044	Spacer	51 88 2
102138	Switch - Light	9 24 1	111070	Knob	17 7 1
102572	Spring - Idler	17 17 1	111076	Wire - Solenoid/Battery	9 7 2
103917	Knob	45 18 1	111216	Switch - Ignition	9 22 1
103995	Washer	45 28 1	111327	Decal - Parking Brake	41 4 1
103995	Washer - Lock	45 16 1	111392	Clip	7 10 1
103995	Washer - Special	7 12 1	111392	Clip - J	5 13 1
104047	Bushing	21 8 1	111392	Clip - J	21 43 2
104048	Valve	21 9 1	111397	Plate - Front Axle Support	5 4 1
104524	Trunnion	51 35 1	111406	Spindle - R.H.	11 7 1
104525	Spacer	15 15 1	111409	Spindle - L.H.	11 8 1
104859	Spacer - Lift Link	51 23 1	111417	Gear - Sector	11 13 1
104869	Washer - Special	43 13 1	111418	Bushing - Eccentric	15 9 1
104926	Body - Connector	9 50 2	111418	Bushing - Eccentric	17 9 1
104962	Battery	9 1 1	111418	Bushing - Eccentric	11 14 1
105302	Connector - 5 Terminal	9 41 1	111419	Washer	15 10 1
105450	Tube - Inner	13 16 2	111419	Washer	17 10 1
105490	Clamp	9 74 1	111419	Washer	11 15 1
105503	Bushing	3 7 2	111422	Retainer	11 19 1
105503	Spacer	1 11 2	111423	Rod - Drag Link	11 20 1
105842	Battery	9 * 1	111430	Arm	43 5 1
106288	Clamp - Shaft	15 3 2	111430	Arm	51 76 1
106288	Clamp - Shaft	17 3 2	111432	Spring	43 8 1
106488	Mat - Footrest	5 7 2	111432	Spring	51 78 1
106661	Cam	51 17 1	111436	Pedal - Brake/Idler	15 1 1
106948	Tray - Battery	9 3 1	111437	Shaft - Pedal	15 2 1
107677	Spring - Brake	51 36 1	111437	Shaft - Pedal	17 2 1
107772	Ring - Retaining	7 4 2	111439	Grip	15 7 1
107831	Socket - Connector	9 79 1	111439	Grip	1 8 2
108547	Reflector	7 14 2	111439	Grip	5 48 1
108790	Pulley - Transmission	43 32 1	111442	Pulley - Idler	15 13 1
108881	Nut - Lock	11 31 1	111442	Pulley - Idler	17 13 1
108889	Bumper	3 13 2	111443	Guide - Belt	15 14 1
109102	Fuse - 25 Amp.	9 * 1	111445	Spring - Brake	15 17 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-195

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
111446	Spring - Idler	15	18	1	114064	Bearing - Ball	19	9	2
111467	Panel - Console	5	9	1	114385	Axle - Front	11	1	1
111474	Cap - Gas	21	10	1	114389	Fender	7	*	1
111480	Rod	7	3	1	114401	Plate - Cam	51	2	1
111498	Body - Connector	9	46	1	114402	Spacer	51	15	1
111499	Screw - Pan Hd.	5	10	6	114403	Support - Cam Plate	51	8	1
111524	Link	5	30	2	114404	Plate - Neutral Pivot	51	20	1
111527	Spring	5	31	2	114410	Bracket - Torque	51	27	1
111531	Spring	11	6	1	114416	Plate - Neutral Return	51	1	1
111536	Spring	7	5	2	114417	Plate - Rear Drawbar	5	2	1
111632	Decal - Clutch & Brake	41	14	1	114418	Pedal - Brake	17	1	1
111682	Wire - Solenoid/Starter	9	8	1	114433	Belt	45	2	1
111684	Bucket - Light	7	23	2	114442	Decal - Hydro Push	41	15	1
111685	Retainer	7	24	2	114443	Cable - Hood Lanyard	7	27	1
111688	Clamp	51	29	1	114563	Gasket - Cover	45	11	1
111712	Washer - Wave	15	5	1	114610	Roller - Cam	5	5	2
111712	Washer - Wave	17	5	1	114636	Extension - Oil Drain	21	40	1
111763	Strap	5	17	2	114636	Plug - Pipe	21	33	1
111926	Decal - Electrical System	41	17	1	114638	Fan	45	15	1
112153	Fuel Tank Assembly	21	7	1	114656	Support - Angle	51	19	1
112595	Button	47	13	2	114663	Plate	51	34	1
112600	Ring - Retaining	47	8	1	114665	Clevis	51	37	1
112604	Seal - Input Shaft	47	6	1	114666	Bracket	51	32	1
112605	Seal - Control Shaft	47	5	1	114668	Bracket - Spring	51	26	1
112670	Decal - Danger	41	21	1	114695	Nut - Special	51	9	1
112744	Bracket - Pivot R.H.	3	*	1	114697	Spacer	51	21	1
112745	Bracket - Pivot L.H.	3	4	1	114698	Spring - Brake	51	31	1
112757	Wire - Solenoid/Starter	9	*	1	114705	Rod - Lock	17	6	1
112837	Spring	1	5	2	114707	Rod - Brake	17	12	1
112837	Spring - Seat	3	22	2	114721	Tube - Drain	9	15	1
112843	Washer	19	6	1	114764	Fitting - 90_	21	*	1
112847	Bracket - Support	11	3	1	114818	Spring	51	25	1
112850	Plate - Frame Support	5	3	1	114821	Washer - Friction	51	72	2
112853	Bolt	19	*	1	114852	Plate - Frame Support	5	*	1
112858	Pulley - Engine	19	8	1	114859	Arm - Idler	15	8	1
112925	Washer - Backing	7	30	1	114860	Belt - Transmission Drive	43	33	1
112961	Plate	3	16	2	114944	Decal - Shift 5-Speed	41	23	1
112977	Support - Rear Axle	5	6	1	114989	Bracket - L.H.	5	*	1
112981	Rod - Tie	11	11	1	114990	Bracket - R.H.	5	49	1
112982	Strap - Torque	43	3	2	115042	Rod	43	11	1
112983	Knob	43	9	1	115043	End - Rod	43	12	1
112983	Knob	51	83	1	115196	Decal - Attach-a-Matic	41	16	1
112984	Rod - Lock	15	6	1	115198	Arm - Transmission	43	10	1
113025	Pointer	43	22	1	115204	Harness - Headlight	9	29	1
113025	Pointer	51	82	1	115230	Switch - Clutch	9	73	1
113030	Pin	11	5	2	115356	Arrester - Spark	21	34	1
113044	Tube	11	4	1	115391	Muffler Assembly	21	3	1
113113	Screw - Hex. Hd.	21	35	3	115398	Decal - Maintenance	41	18	1
113116	Retainer	5	38	2	115413	Clevis	7	32	2
113129	Rod - Brake/Idler	15	12	1	115414	Cable - Hood Lanyard	7	*	1
113324	Line - Fuel	21	11	1	115629	Electric Clutch Assembly	19	1	1
113370	Decal - PTO Adjustment	41	26	1	115677	Bracket	51	74	1
113820	Rotor Assembly	19	2	1	115678	Plate - Mounting	51	28	1
113821	Field Assembly	19	3	1	115858	Clip - Snap-In	5	59	2
113822	Armature & Pulley Assy.	19	4	1	115860	Clip - Snap-In	5	58	1
113823	Spring & Nut Assembly	19	5	3	116007	Bracket - Reservoir	45	23	1
113852	Plate - Seat Pivot	3	3	1	116126	Cable - Push Valve	45	19	1
114034	Arm - Idler	17	8	1	116150	Spring - Extension	15	29	1
114051	Decal - Motion Control	41	24	1	116262	Socket - Light	7	25	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref.		Part No.	Description	Pg. Ref.	
		No.	Qty.			No.	Qty.
116338	Switch - Ignition	9	* 1	910808	Screw	7	18 2
116339	Rod - Speed Control	51	5 1	910837	Screw	5	26 1
116340	Arm - Motion Control	51	16 1	910948	Screw	9	71 2
116397	Relay	9	80 2	911446	Bolt	19	7 1
116398	Plate - Arm	51	46 1	911459	Bolt	51	14 1
116454	Knob	21	6 1	911652	Screw	21	39 1
116480	Coupler - Shaft	11	42 1	913111	Screw	7	36 1
116590	Decal - Hood Rear	41	3 1	913111	Screw - Machine	7	29 1
116591	Headlight Bar Assembly	7	9 1	915001	Nut - Lock	11	28 2
116601	Bar - Light	7	22 1	915002	Nut - Lock	11	36 2
116702	Muffler	21	4 1	915112	Nut - Lock	43	21 2
116738	Key - Ignition	9	23 2	915112	Nut - Lock	21	26 1
116799	Engine - 12.5HP	21	2 1	915112	Nut - Lock	43	38 1
116800	Hood & Grill	7	* 1	915551	Nut	7	8 2
116874	Decal - Hood Front	41	* 1	915662	Nut - Lock	21	20 5
116880	Tire - Rear	13	18 2	915662	Nut - Lock	7	21 8
116881	Rear Wheel Assembly	13	19 2	915732	Nut - Lock	9	72 2
116883	Front Wheel & Tire Assy.	13	3 2	915740	Nut - Hex.	5	25 4
116884	Tire - Front	13	4 2	915740	Nut - Lock	45	21 2
116885	Front Wheel Assembly	13	7 2	915740	Nut - Lock	21	28 2
116887	Bushing - Flange	13	8 4	915740	Nut - Lock	7	28 1
117142	Bracket - Fuse	5	55 1	915740	Nut - Lock	7	37 1
117184	Gasket	21	44 1	915740	Nut - Lock	5	53 2
117225	Line - Fuel	21	* 1	920004	Washer	7	19 2
117256	Control - Throttle	21	* 1	920007	Washer	21	25 3
117316	Hold-Down - Battery	9	5 1	920079	Washer - Lock	7	20 2
117325	Bracket - Spring	51	85 1	920081	Washer - Lock	7	34 1
117326	Spring	51	84 1	920160	Washer - Lock	9	32 1
117343	Keeper - Latch	5	11 2	920215	Washer	15	22 1
117344	Handle Assembly	7	6 2	920215	Washer	17	22 1
117431	Rivet - Pop	5	12 4	920242	Washer - Special	5	35 2
117432	Rivet - Pop	7	7 4	920251	Washer - .050	13	22 4
117474	Decal - Hood R.H.	41	* 1	920259	Washer	51	75 1
117475	Decal - Hood L.H.	41	* 1	920259	Washer - Special	9	26 1
117511	Decal - Hydro	41	8 2	920262	Washer - Special	9	25 1
117512	Decal - 5-Speed	41	7 2	920268	Washer	43	28 1
117760	Decal - Fender	41	9 1	920271	Washer - Special	51	22 1
118060	Bolt	7	35 1	926566	Bolt	7	42 1
118600	Decal - Power Plus	41	6 1	926640	Screw - Machine	5	57 2
118610	Decal - Power Plus	41	28 1	926641	Screw	51	30 1
120040	Decal - TORO	41	22 1	926696	Bolt	51	58 1
120860	Washer - .075	13	26 6	926696	Screw	21	41 4
120930	Holder - Fuse	9	14 1	926697	Bolt	5	61 4
807335	Loose Parts Package	41	13 1	926698	Screw	51	64 1
807336	Loose Parts Package	41	* 1	926720	Screw	43	18 2
807346	Loose Parts Package	41	* 1	932000	Pin - Cotter	51	43 1
807348	Loose Parts Package	41	* 1	932948	Pin - Clevis	51	53 1
900036	Bolt - Carriage	43	17 2	932948	Pin - Clevis	51	70 1
900036	Bolt - Carriage	5	60 2	933272	Pin - Spirol	11	37 1
900037	Bolt - Carriage	5	18 1	933273	Pin - Spirol	43	23 1
908001	Bolt	21	24 1	933273	Pin - Spirol	51	77 1
908003	Bolt	45	17 1	937082	Key - Woodruff	51	71 1
908016	Bolt	51	65 2	937222	Key - Hi-Pro	45	13 1
908017	Bolt	5	29 3	937225	Key - Hi-Pro	43	34 1
908019	Bolt	5	40 1	938031	Bushing	7	17 1
908022	Screw - Hex. Hd.	21	19 4	938031	Bushing	5	36 1
910792	Screw	45	20 2	938050	Plug - Nylon	5	54 1
910792	Screw - Pan Hd.	21	27 1	943083	Fitting - 45_	21	32 1
910796	Screw	5	52 2	943420	Plug	21	13 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-195

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
960151	Screw - Hex. Hd.	9	37	1	NN10619	Rocker Arm Assembly	29	29	1
960152	Screw	5	50	2	NN10620	Screw	29	30	2
5-1336	Key - Square	13	23	2	NN10621	Nut	29	31	2
NN10133	Spring - Relief Valve	27	6	1	NN10622	Shaft - Rocker Arm	29	32	1
NN10218	Bushing	39	15	1	NN10623	Washer - Rocker Arm	29	33	2
NN10261	Kit - Float	39	17	1	NN10624	Clip - Retainer	29	34	2
NN10277	Fuse - 30 Amp.	9	*	1	NN10625	Pin - Dowel	29	35	1
NN10307	Plug - Pipe	27	29	1	NN10626	Pin - Dowel	23	2	2
NN10323	Seal - O-Ring	23	18	1	NN10626	Pin - Dowel	29	36	1
NN10344	Ring - Retaining	35	24	1	NN10627	Camshaft Assembly	25	1	1
NN10534	Ball - Steel	27	20	1	NN10628	Washer - Flat	27	25	1
NN10539	Ring - Retaining	27	24	1	NN10629	Washer - Flat	27	26	1
NN10569	Seal - Oil	23	4	1	NN10630	Shim - Camshaft	25	9	1
NN10569	Seal - Oil	27	19	1	NN10631	Shim - Camshaft	25	*	1
NN10570	Bearing - Crankshaft	23	5	1	NN10632	Shim - Camshaft	25	*	1
NN10571	Bearing - Camshaft	23	6	1	NN10633	Shim - Camshaft	25	*	1
NN10572	Pump - Oil	27	7	1	NN10634	Shim - Camshaft	25	*	1
NN10573	Cover - Oil Pump	27	8	1	NN10635	Shim - Camshaft	25	*	1
NN10575	Seal - O-Ring	27	18	1	NN10636	Gear - Governor	27	11	1
NN10577	Screen - Oil Pickup	27	9	1	NN10637	Shaft - Governor	27	12	1
NN10578	Cover - Screen	27	10	1	NN10638	Sleeve - Governor	27	13	1
NN10579	Kit - Piston	23	10	1	NN10639	Stop - Governor	27	14	1
NN10580	Kit - Piston	23	*	1	NN10640	Lever	25	6	1
NN10581	Kit - Piston	23	*	1	NN10641	Clip - Retaining	25	7	2
NN10582	Pin - Piston	23	11	1	NN10642	Camgear Assembly	25	2	1
NN10583	Ring - Retaining	23	12	2	NN10643	Key - Camgear	25	3	1
NN10584	Set - Piston Ring	23	13	1	NN10644	Pin	25	4	1
NN10585	Set - Piston Ring	23	*	1	NN10645	Spring	25	5	1
NN10586	Set - Piston Ring	23	*	1	NN10646	Seal - Governor Shaft	23	7	1
NN10587	Kit - Connecting Rod	23	14	1	NN10647	Lever - Governor	35	2	1
NN10588	Kit - Connecting Rod	23	*		NN10648	Screw - Hex. Hd.	35	4	1
NN10589	Kit - Connecting Rod	23	*	1	NN10651	Throttle Plate Assembly	35	8	1
NN10590	Bolt	23	15	2	NN10652	Screw - Machine	35	9	1
NN10591	Washer	23	16	2	NN10653	Clamp - Cable	35	10	1
NN10592	Gasket - Cylinder Head	29	1	1	NN10653	Plug - Pipe	23	9	1
NN10593	Cylinder Head Assembly	29	2	1	NN10654	Spring - Choke Linkage	35	16	1
NN10594	Cylinder Head Assembly	29	*	1	NN10656	Swivel - Choke Lever	35	13	1
NN10597	Spring - Valve	29	7	2	NN10657	Spring - Governor	35	1	1
NN10598	Valve - Intake	29	8	1	NN10658	Link - Throttle	35	15	1
NN10599	Valve - Exhaust	29	9	1	NN10659	Link - Choke	35	17	1
NN10600	Retainer - Intake	29	10	1	NN10660	Spacer	35	18	1
NN10601	Retainer - Exhaust	29	11	1	NN10661	Stud	35	19	1
NN10602	Lock - Intake	29	12	1	NN10663	Nut - Hex.	35	23	1
NN10603	Lock - Exhaust	29	13	1	NN10666	Gasket	39	1	1
NN10604	Ring	29	14	2	NN10668	Carburetor Assembly	39	3	1
NN10605	Seal - Intake	29	15	1	NN10669	Insulator	39	4	1
NN10606	Washer	29	16	2	NN10670	Gasket	39	5	2
NN10607	Bolt	29	17	1	NN10673	Harness - Regulator	31	10	1
NN10608	Bolt	29	18	1	NN10674	Clip - Link	35	7	1
NN10609	Gasket	29	19	1	NN10674	Clip - Link	39	12	2
NN10610	Cover - Valve	29	20	1	NN10675	Base - Oil	27	5	1
NN10611	Fitting - 45_	29	21	1	NN10677	Bearing - Ball	27	21	1
NN10612	Breather	29	22	1	NN10678	Bearing - Ball	23	3	2
NN10613	Screw - Hex. Socket Hd.	29	23	7	NN10678	Bearing - Ball	27	22	2
NN10614	Washer	29	24	2	NN10680	Bolt	27	1	9
NN10615	Bolt	29	25	2	NN10681	Gasket - Oil Base	27	2	1
NN10616	Bolt	29	26	2	NN10683	Plug - Pipe	35	26	1
NN10617	Tappet	29	27	2	NN10684	Filter - Oil	27	3	1
NN10618	Rod - Push	29	28	2	NN10685	Adapter - Oil Filter	27	4	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref.		Part No.	Description	Pg. Ref.	
		No.	Qty.			No.	Qty.
NN10686	Plug - Pipe	27	17 2	NN10768	Nut - Hex.	35	6 1
NN10687	Plug - Pipe	27	15 2	NN10785	Screw - Thread Forming	35	25 1
NN10688	Indicator	23	17 1	NN10792	Screw - Hex. Washer Hd.	39	14 1
NN10689	Tube	23	19 1	NN10794	Regulator - Voltage	39	16 1
NN10690	Seal	23	20 1	NN10799	Cover - Air Cleaner	33	14 1
NN10691	Bracket - Support	23	22 1	NN10812	Clamp - Hose	33	10 2
NN10693	Hose - Breather	33	1 1	NN10813	Switch - Oil Pressure	27	28 1
NN10694	Gasket	33	2 1	NN10816	Washer - Governor Lever	35	3 2
NN10697	Cover - Element	33	5 1	NN10817	Screw - Thread Forming	35	20 1
NN10698	Wrapper - Element	33	6 1	NN10818	Elbow - Intake	39	2 1
NN10700	Knob	33	13 2	NN10820	Plug - Spark	31	6 1
NN10701	Stud	39	20 1	NN10852	Block - Cylinder	23	1 1
NN10702	Screw - Hex. Hd.	33	12 2	NN10868	Screw - Torx Pan Hd.	27	27 4
NN10703	Knob	33	8 1	NN10872	Element	33	4 1
NN10704	Grommet	33	7 1	NN10899	Adapter	33	3 1
NN10711	Screen	37	1 1	NN10907	Kit - Carburetor Repair	39	19 1
NN10712	Blower Wheel Assembly	37	2 1	38-1420	Switch - Seat	9	18 1
NN10713	Key	37	3 1	48-7630	Bolt	21	42 2
NN10714	Screw - Hex. Hd.	37	4 3	59-0720	Pin - Cotter	35	11 1
NN10715	Nut	37	5 1	59-0760	Plug	27	23 2
NN10720	Housing - Blower	37	6 1	59-0850	Washer - Flat	35	14 1
NN10721	Bolt	37	7 4	72-3900	Screw - Thread Forming	35	12 1
NN10722	Housing - Cylinder Air	35	27 1	78-0370	Insert - Steering Wheel	11	40 1
NN10723	Deflector - Air	35	28 1	78-1340	Harness Wire	9	2 1
NN10725	Screw - Hex. Hd.	35	29 1	78-1630	Kit - Diode Replacement	9	16 1
NN10726	Screw - Hex. Hd.	35	31 5	78-1640	Frame	5	1 1
NN10727	Screw - Hex. Hd.	35	33 1	78-1670	Cam - Adjustment	5	32 2
NN10729	Lead	31	7 1	78-1820	Hoodstand	5	8 1
NN10730	Coil - Ignition	31	8 1	78-1991	Bracket - Steering Gear	11	17 1
NN10731	Bolt - Hex. Hd.	31	9 2	78-2020	Shaft	43	6 1
NN10733	Bolt - Hex. Hd.	31	3 1	78-2030	Collar	43	40 1
NN10734	Stator	31	2 1	78-2030	Collar	51	87 1
NN10735	Screw - Torx Pan Hd.	31	1 2	78-2050	Bracket - Switch	5	56 1
NN10738	Screw - Hex. Hd.	38	2 2	78-2290	Decal - Hood Front	41	10 1
NN10739	Starter	38	1 1	78-2740	Washer - Lock	1	7 2
NN10740	Washer - Lock	35	5 1	78-2870	Pulley - Input Shaft	45	14 1
NN10740	Washer - Lock	23	24 1	78-3030	Switch - PTO	9	63 1
NN10742	Gear - Crankshaft	25	10 1	78-3100	Wheel - Steering	11	22 1
NN10743	Gear - Balancer	25	11 1	78-3210	Cover - Light Opening	7	31 1
NN10744	Crankshaft	25	12 1	78-3221	Bracket - Steering Gear	11	* 1
NN10745	Key - Gear	25	13 1	78-3230	Shaft	51	81 1
NN10746	Shim - Crankshaft	25	14 1	78-3340	Transmission Assembly	43	2 1
NN10747	Shim - Crankshaft	25	* 1	78-3390	Hoodstand	5	* 1
NN10748	Shim - Crankshaft	25	* 1	78-7170	Nut - Push	7	41 1
NN10749	Shim - Crankshaft	25	* 1	78-7180	Knob	1	4 2
NN10750	Plug	25	15 1	78-7540	Fender	7	1 1
NN10751	Gear	25	16 1	78-7600	Seat	1	1 1
NN10752	Gear	25	17 1	78-8440	Decal - PTO Clutch	41	5 1
NN10753	Shaft	25	18 1	78-8480	Decal - Ignition	41	33 1
NN10754	Shaft	25	19 1	78-8490	Decal - Lights	41	35 1
NN10755	Key - Gear	25	20 2	78-8570	Hood & Grill	7	2 1
NN10756	Shim - Balancer Shaft	25	21 1	78-9160	Seat	3	1 1
NN10757	Shim - Balancer Shaft	25	* 1	79-0050	Fender	7	* 1
NN10758	Shim - Balancer Shaft	25	* 1	79-0370	Decal - Danger	41	36 1
NN10759	Shim - Balancer Shaft	25	* 1	79-1080	Cover	45	10 1
NN10760	Shim - Balancer Shaft	25	* 1	79-2380	Clamp - Hose	45	6 2
NN10761	Shim - Balancer Shaft	25	* 1	79-2720	Bolt - Adjusting	51	38 1
NN10762	Shim - Balancer Shaft	25	* 1	79-2730	Hose	45	7 1
NN10768	Nut	23	25 1	79-2740	Spring (Inside Item #7)	45	* 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-195

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
79-2750	Transmission Assembly	45	1	1	88-2420	Spring - Conical,	47	28	2
79-3320	Control - Throttle	21	5	1	88-2430	Base - Spring	47	29	2
79-3480	Pivot - Brake	51	33	1	88-2440	Ring - Retaining	47	30	4
79-3500	Reservoir Assembly	45	9	1	88-2450	Rod - Push	47	31	2
79-3510	Reservoir	45	12	1	88-2460	Seal - Quad	47	32	2
79-3920	Harness Wire	9	*	1	88-2470	Spring - Dump Valve	47	33	1
79-4130	Engine - 10.5HP	21	1	1	88-2480	Bracket - Dump Valve	47	34	1
79-4520	Decal - Hood R.H.	41	1	1	88-2490	ORing - Seal	47	35	1
79-4530	Decal - Hood L.H.	41	*	1	88-2500	Gasket - Filter	47	36	1
79-4540	Decal - Hood R.H.	41	*	1	88-2510	Filter	47	37	1
79-4550	Decal - Hood L.H.	41	*	1	88-2520	Cover - Valve	47	38	1
79-4580	Decal - Hood R.H.	41	*	1	88-2530	Screw - 1/4-20 Hex. Hd.	47	39	5
79-4590	Decal - Hood L.H.	41	*	1	88-2540	Housing	47	40	1
79-5400	Decal - Throttle	41	19	1	88-2540	Piston Assembly	47	41	2
79-5560	Rear Wheel & Tire Ass'y.	13	24	2	88-2560	Ring - Retaining	49	1	2
79-5570	Rear Wheel Assembly	13	25	2	88-2570	Bearing - Ball	49	2	2
79-5580	Rear Wheel & Tire Ass'y.	13	17	2	88-2580	Seal - Radial Lip	49	3	2
79-5660	Shaft - Pinion	11	12	1	88-2590	Shaft - Axle	49	4	2
79-5820	Screw - Hex. Hd.	39	9	2	88-2600	Ring - Retaining	49	5	4
79-5830	Washer - Flat	39	10	2	88-2610	Washer - Thrust	49	6	4
79-5840	Pin - Alignment	23	8	2	88-2620	Housing - Axle	49	7	2
79-5850	Shim - Crankshaft	25	*	1	88-2630	Housing Assembly	49	*	2
79-5860	Shim - Crankshaft	25	*	1	88-2640	Gasket - Axle Housing	49	8	2
79-5870	Guide - Exhaust Valve	29	4	1	88-2650	Plate - Reaction	49	9	2
79-5880	Guide - Intake Valve	29	3	1	88-2660	Plate - Backup	49	10	2
79-5890	Clamp - Cord	31	4	1	88-2830	Carrier - Secondary	49	17	2
79-5900	Pin - Alignment	31	5	2	88-2840	Screw - 5/16 Hex. Hd.	49	18	16
79-5910	Kit - Air Cleaner	33	16	1	88-2850	Fitting 90°	47	11	1
82-1130	Plug - Pipe	27	16	1	88-2860	Motor Assembly	47	20	2
82-1340	Washer - Flat	35	21	2	88-2870	Gear - Ring, 54 Tooth	49	11	4
82-1340	Washer - Flat	35	30	1	88-2880	Gear - First, 15 Tooth	49	12	2
82-1340	Washer - Flat	29	37	7	88-2890	Gear - Planet, First	49	13	6
82-1350	Washer	25	8	1	88-2900	Carrier Primary	49	14	2
82-1350	Washer - Flat	33	11	2	88-2910	Gear - Second,	49	15	2
82-1350	Washer - Flat	35	22	2	88-2920	Gear - Second,	49	16	6
82-1350	Washer - Flat	35	32	6	88-3140	Shim - .030	47	*	A/R
82-1560	Screw	23	21	1	2412-98	Clamp - Hose	21	12	2
82-1700	Nut - Speed	23	23	1	302-5	Fitting - Grease	11	2	3
85-7340	High Altitude Jet (1.08mm)	39	*	1	321-4	Bolt	9	9	2
88-2200	Shaft - Control	47	1	1	321-4	Bolt	45	24	2
88-2210	Cover Assembly	47	2	1	322-2	Bolt	51	59	1
88-2220	Cover	47	3	1	322-3	Bolt	51	60	2
88-2230	Screw - 1/4-20	47	4	13	322-3	Screw - Hex. Hd.	5	24	4
88-2240	Shaft - Input	47	7	1	322-4	Bolt	3	6	4
88-2250	Plug Assembly	47	9	1	322-4	Screw - Hex. Hd.	11	25	2
88-2260	Seal - ORing	47	10	3	322-5	Bolt	3	2	4
88-2280	Gasket - Cover	47	12	1	322-5	Bolt	3	17	6
88-2290	Drive	47	14	1	322-5	Bolt - Brake Stop	43	37	1
88-2300	Pump Assembly,	47	15	1	322-5	Screw - Hex. Hd.	1	2	4
88-2310	Insert	47	16	1	322-5	Screw - Hex. Hd.	51	86	2
88-2320	Ring Assembly - Cam	47	17	1	322-6	Bolt	3	26	4
88-2340	Nut - Assembly	47	19	1	322-6	Bolt	43	30	1
88-2350	Pad - Friction	47	21	2	322-6	Screw - Hex. Hd.	5	20	3
88-2360	Nut - Lock	47	22	1	322-12	Screw - Hex. Hd.	43	15	4
88-2370	Lever - Brake, R.H.	47	23	1	322-14	Bolt	45	5	4
88-2380	Shim - .020	47	24	A/R	322-17	Screw - Hex. Hd.	1	3	2
88-2390	Lever - Brake, L.H.	47	25	1	323-7	Bolt	5	42	1
88-2400	Screw - Hex. Hd.	47	26	1	323-10	Bolt	5	45	1
88-2410	Shaft - Brake	47	27	1	329-5	Screw - Hex. Hd.	43	26	1


*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref.			Part No.	Description	Pg. Ref.		
		No.	No.	Qty.			No.	No.	Qty.
3217-5	Nut	9	11	5	3256-23	Washer	7	39	2
3217-5	Nut - Lock	5	27	1	3256-23	Washer	51	47	5
3217-6	Nut - Hex.	3	25	4	3256-23	Washer - Flat	45	4	4
3218-1	Nut - Jam	9	39	2	3256-23	Washer - Flat	43	39	1
3220-1	Nut - Jam	51	7	1	3256-24	Washer	15	28	2
3220-2	Nut - Jam	43	25	1	3256-24	Washer	5	46	2
3229-2	Bolt - Carriage	51	63	1	3256-24	Washer	51	48	1
3229-29	Nut - Lock	11	33	3	3256-24	Washer - Flat	17	29	2
3230-1	Bolt - Carriage	17	20	4	3272-2	Pin - Cotter	51	52	1
3230-1	Bolt - Carriage	21	29	2	3272-6	Pin - Cotter	15	23	3
3230-2	Bolt	11	35	1	3272-6	Pin - Cotter	17	23	3
3230-2	Bolt - Carriage	51	62	2	3272-6	Pin - Cotter	43	29	1
3230-3	Bolt	1	6	2	3272-6	Pin - Cotter	7	40	2
3230-16	Bolt - Carriage	5	15	5	3272-6	Pin - Cotter	51	50	3
3230-16	Bolt - Carriage	15	20	4	3272-7	Pin - Cotter	51	51	1
3230-22	Bolt	11	32	2	3272-16	Pin - Cotter	15	21	1
3230-23	Bolt - Carriage	7	16	8	3272-16	Pin - Cotter	17	21	1
3231-4	Bolt - Carriage	51	61	1	3272-16	Pin - Cotter	5	34	2
3231-25	Bolt - Carriage	15	25	1	3272-17	Pin - Cotter	13	12	2
3231-25	Bolt - Carriage	17	25	1	3296-29	Nut - Lock	45	3	4
3231-28	Bolt	11	30	1	3296-29	Nut - Lock	3	8	8
3231-29	Bolt - Carriage	17	27	2	3296-29	Nut - Lock	1	9	2
3231-33	Bolt - Carriage	15	27	1	3296-29	Nut - Lock	5	16	9
3242-2	Screw - Sq. Hd. Set	43	35	2	3296-29	Nut - Lock	15	19	4
3253-3	Washer - Lock	43	27	1	3296-29	Nut - Lock	17	19	4
3253-3	Washer - Lock	5	28	1	3296-29	Nut - Lock	43	19	5
3253-3	Washer - Lock	9	38	2	3296-29	Nut - Lock	21	31	2
3253-4	Washer - Lock	1	10	4	3296-29	Nut - Lock	51	55	3
3253-4	Washer - Lock	43	20	2	3296-39	Nut - Lock	15	26	2
3253-4	Washer - Lock	3	24	8	3296-39	Nut - Lock	17	26	3
3253-4	Washer - Lock	11	26	2	3296-39	Nut - Lock	5	43	3
3253-4	Washer - Lock	21	37	3	3296-42	Nut - Lock	45	26	2
3253-4	Washer - Lock	51	67	4	3296-42	Nut - Lock	5	51	2
3254-2	Washer - Lock	5	21	2	3296-42	Nut - Lock	51	57	2
3255-7	Washer - Lock	9	33	2	32103-19	Nut - Wing	7	11	1
3256-4	Washer	17	28	2	32103-22	Nut - Wing	9	42	2
3256-4	Washer	51	73	1	32120-47	Ring - Retaining	51	4	1
3256-22	Washer	9	10	6	32120-50	Pin - Spirol	51	69	1
3256-22	Washer	51	49	1	32120-93	Ring - Retaining	11	9	2
3256-22	Washer - Flat	45	25	2	32120-93	Ring - Retaining	5	23	1
3256-23	Washer	43	16	6	32121-103	Pin - Spirol	11	27	2
3256-23	Washer	3	18	8	32121-111	Pin - Spirol	11	41	1
3256-23	Washer	5	19	15	32146-2	Nut - Lock	51	54	1
3256-23	Washer	21	22	10	32151-36	Ring - Snap	13	27	2
3256-23	Washer	15	24	3	32151-48	Ring - Snap	13	14	2
3256-23	Washer	17	24	3	32151-52	Ring - Snap	51	68	2
3256-23	Washer	11	34	1	32151-73	Ring - Retaining	51	39	1


*Not Illustrated

 WIRING HARNESS

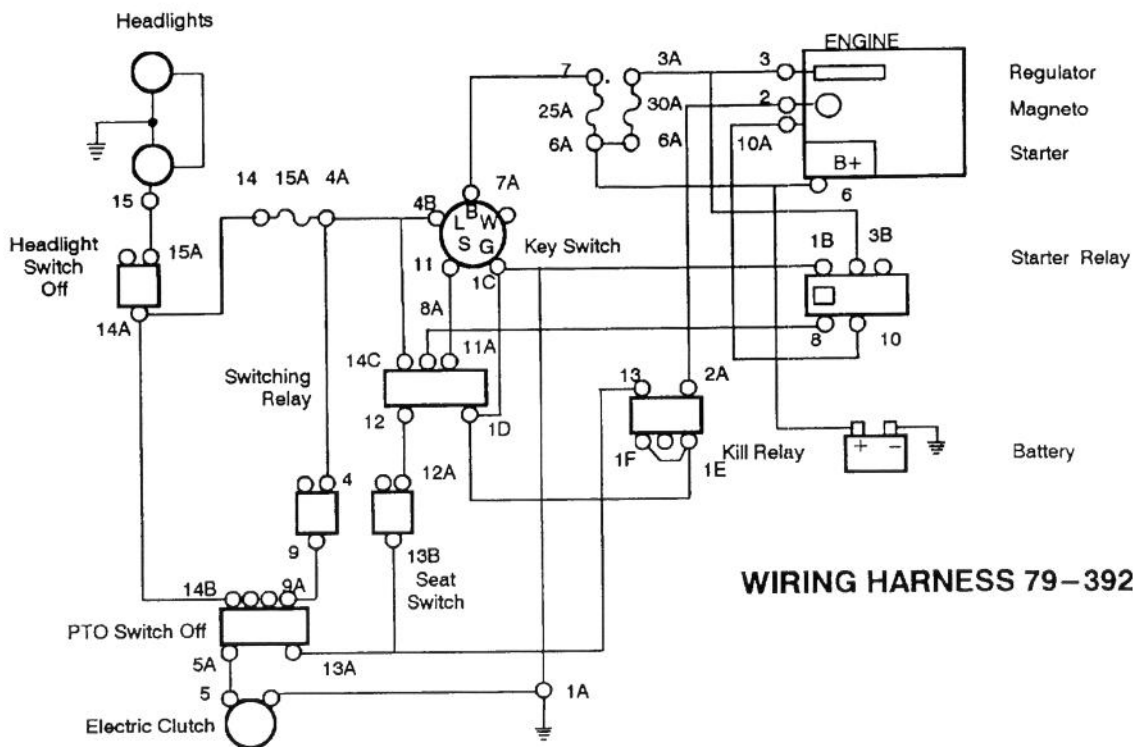

WIRING HARNESS 78-1340

 C-01260

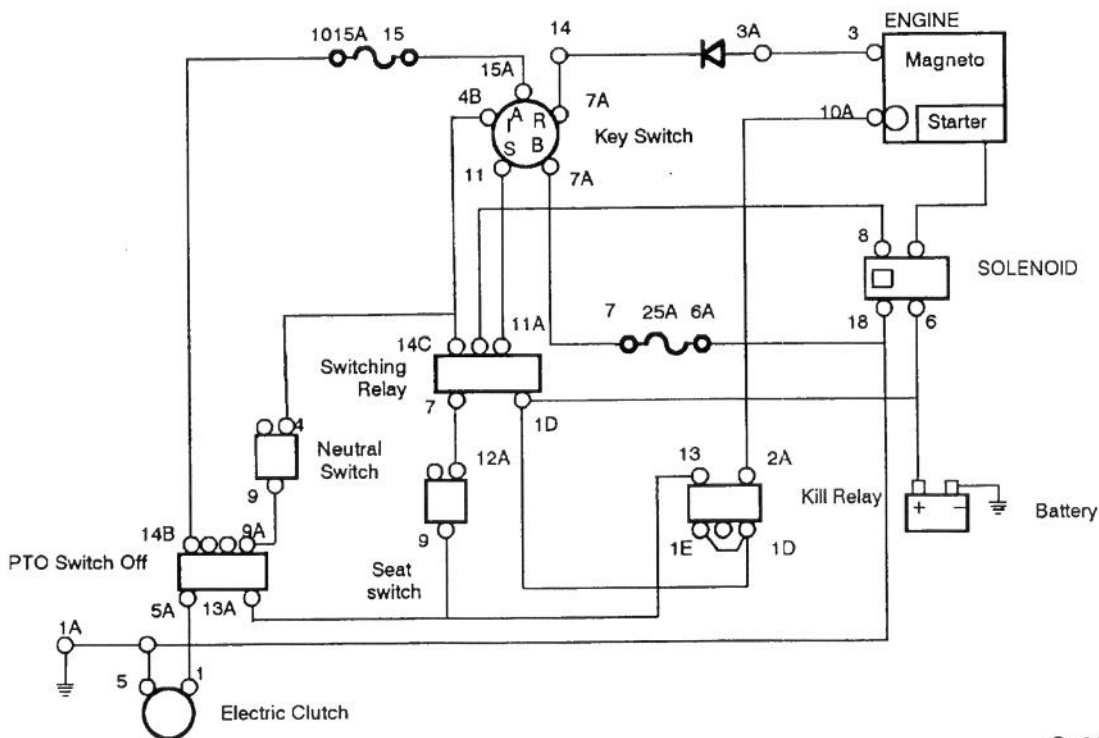

C-01261

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The 200 Series Garden Tractors have two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the 200 Series Garden Tractor, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the 200 Series Garden Tractor.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Seat Assembly - 210'S	1	Flywheel & Cover Assembly	36
Seat Assembly - 212'S	2	Starter Assembly	38
Frame Assembly	4	Carburetor Assembly	39
Body Assembly	6	Decal & Miscellaneous Parts Assembly	40
Electrical System Assembly	8	Transmission Assembly (210-5, 212-5)	42
Front Axle & Steering Assembly	10	Transmission Assembly (210-H, 212-H)	44
Wheel & Tire Assembly	12	Transmission Eaton 751-042 (210-H, 212-H)	46-48
Brake & Idler Assembly (210-5, 212-5)	14	Transmission Linkage Assembly (210-H, 212-H)	50
Brake & Idler Assembly (210-H, 212-H)	16	10.5 H.P. Engine Briggs & Stratton	
Engine Pulley & PTO Clutch Assembly	18	Cylinder Assembly	62
12H.P Engine Fuel & Exhaust Assembly	20	Carburetor, Air Cleaner	54
Engine Cylinder Block Assembly	22	Flywheel, Ring Gear	56
Crankshaft & Camshaft	24	Starter	57
Oil Base & Pump Assembly	26	Peerless Transmission	
Cylinder Head & Valves	28	Model No. 930-020 (210-5, 212-5)	58
Ignition Assembly	30	Toro Numerical Part Number Index	59-66
Air Cleaner Assembly	32	Wiring Harness	67
Governor Linkage & Cover	34		