 




MODEL NO. 03425-20233 & UP

PARTS CATALOG

REELMASTER® 216-D 3wd TRACTION UNIT WITH ACCESSORIES

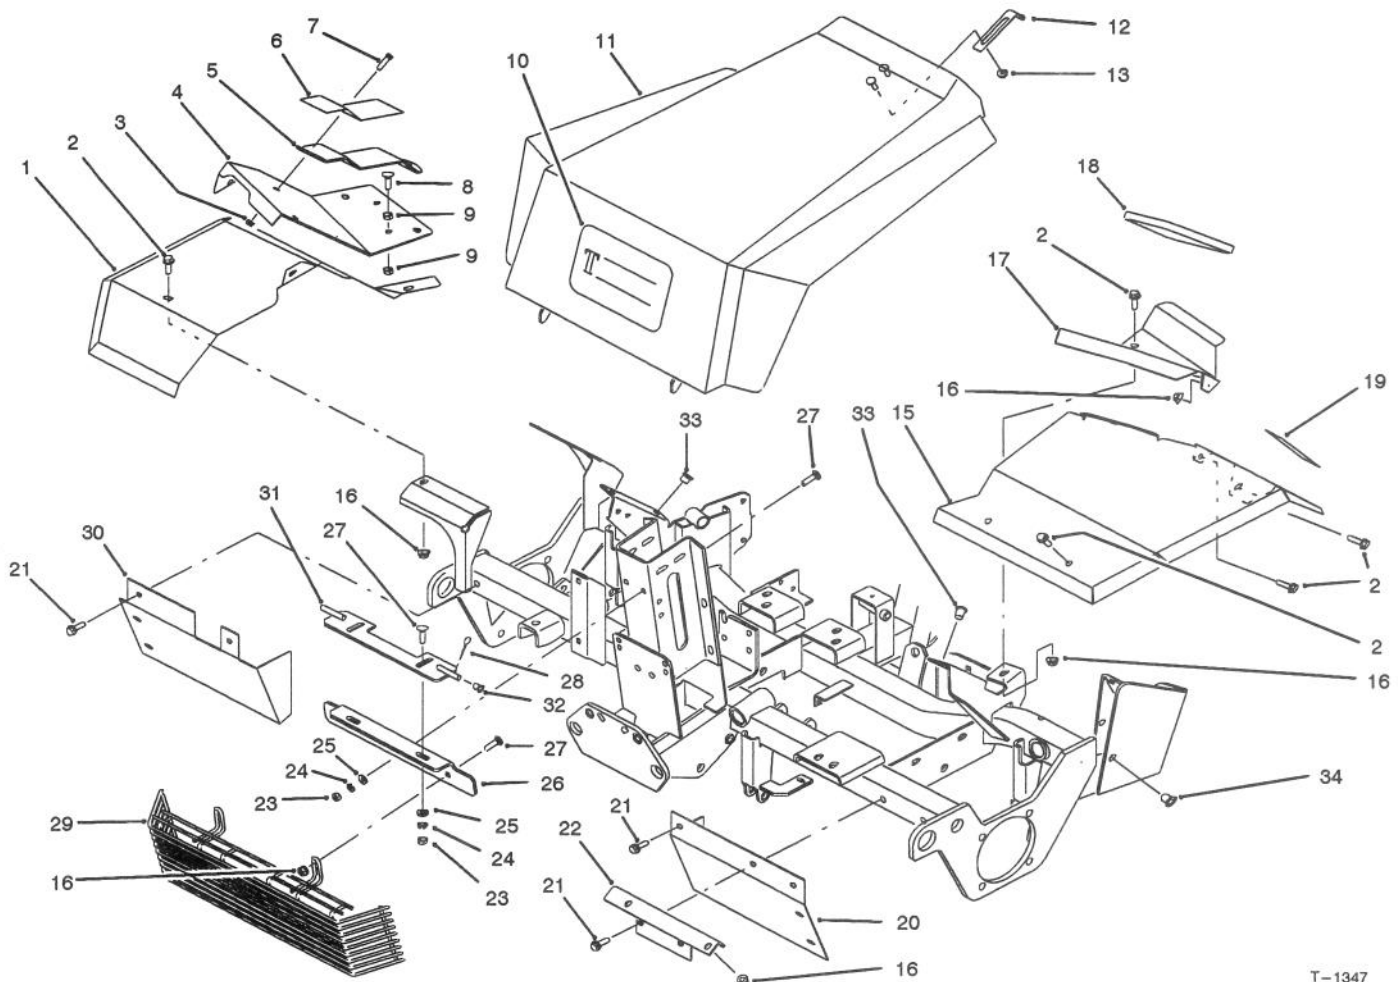

T-1347


HOOD & GRILLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-9720	Fender - R.H.	1
2	3234-5	Screw - Hex. Washer Hd.	14
3	32128-33	Nut - Flange Lock	2
4	83-9740	Footrest - R.H.	1
5	76-2200	Footrest - Traction	1
6	76-2260	Pad - Footrest Traction	1
7	3229-1	Screw - Carriage	2
8	3230-27	Screw - Carriage	1
9	3218-2	Nut - Hex.	2
10	62-7400	Decal - TORO	1
11	83-7950	Hood	1
12	83-9970	Latch - Hood	1
13	32128-14	Nut - Flange Lock	2
15	83-9700	Fender - L.H.	1
16	32128-44	Nut - Flange Lock	13
17	83-9710	Footrest - L.H.	1
18	83-9840	Pad - Footrest L.H.	1

Ref. No.	Part No.	Description	No. Used
†19	84-1650	Decal - Brake	1
20	83-9800	Shield - Grass Front L.H.	1
21	32104-82	Screw - Hex. Washer Hd.	5
22	83-8510	Bracket - Fender L.H.	1
23	3217-6	Nut - Hex.	4
24	3253-4	Washer - Lock	4
25	3256-23	Washer - Flat	4
26	85-4870	Support - Hinge	1
27	3230-23	Screw - Carriage	6
28	3290-467	Pin - Cotter Hair	2
29	83-8850	Grille - Front	1
30	83-8860	Shield - Grass Front R.H.	1
31	85-4890	Hinge - Hood	1
32	256-320	Bushing	2
33	32148-7	Insert - Threaded	3
34	32138-8	Insert - Threaded	1

†For different language versions of this part, see International Decal Cross Reference.

 TPS

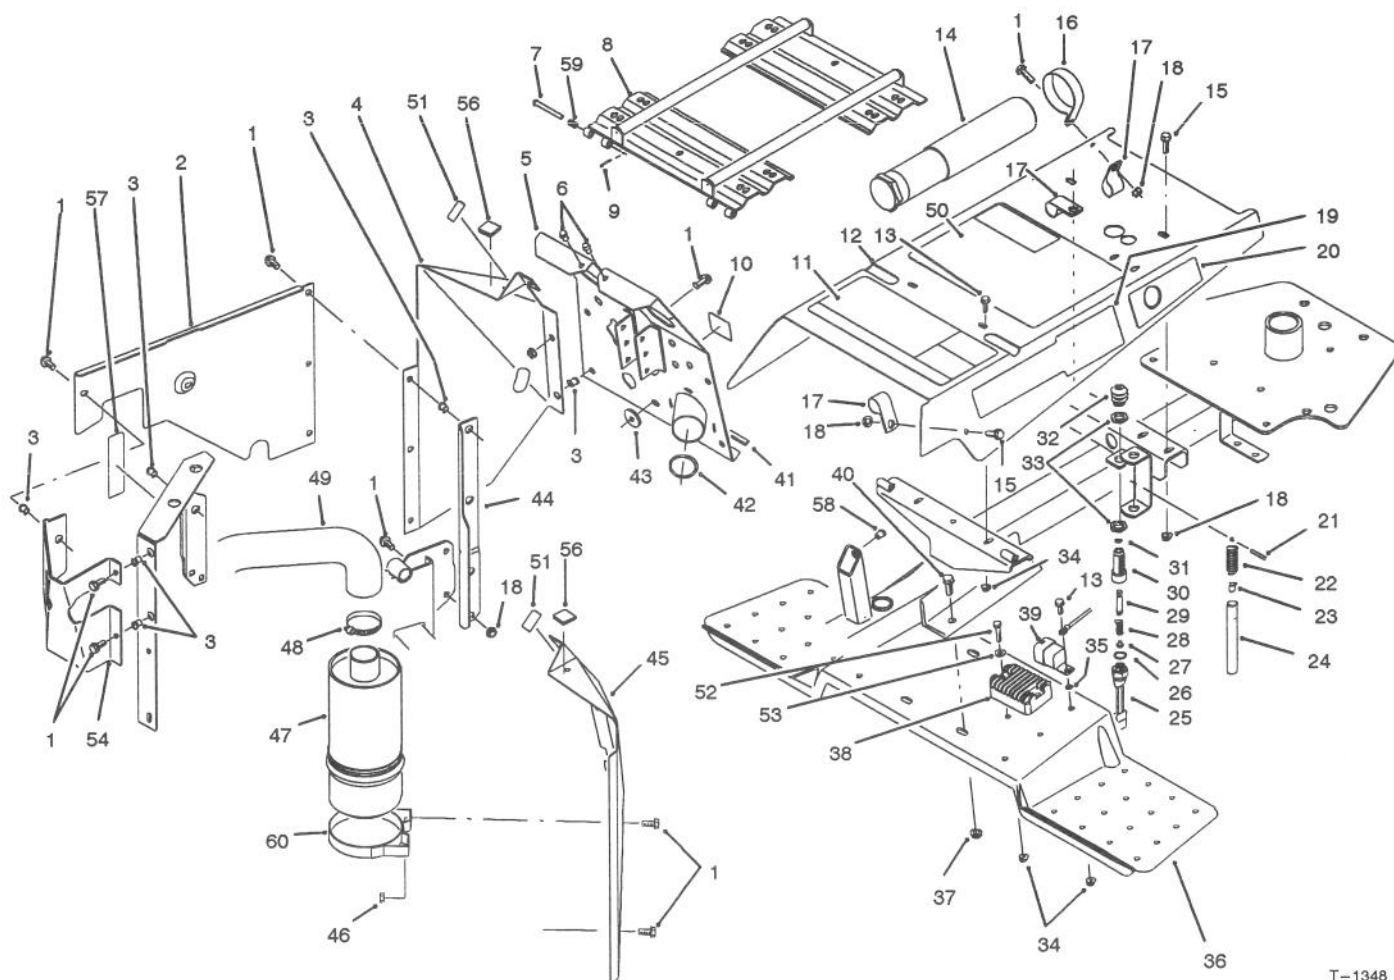


T-1348

SKIRT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3234-5	Screw - Hex. Flange Hd.	24	27	43-8610	Guide - Spring	1
2	83-8230	Panel - Right Front	1	28	43-8600	Spring - Compression	1
3	32148-7	Insert - Threaded	8	29	43-8860	Plunger - Switch	1
4	83-8120	Panel - Right Rear	1	30	43-8620	Guide - Pin	1
5	83-8190	Panel - Control	1	31	237-7	Seal - O-Ring	1
6	237-37	Bumper - Rubber	2	32	43-8870	Boot - Switch	1
7	283-49	Pin - Clevis	2	33	218-461	Nut - Hex.	2
8	76-2670	Plate - Seat Mounting	1	34	32128-33	Nut - Flange Lock	5
9	3272-4	Pin - Cotter	2	35	3255-7	Washer - ETLW	1
†10	83-9150	Decal - Starting Fluid	1	36	83-9730	Step - Foot	1
†11	83-9550	Decal - Warning	1	37	32128-43	Nut - Flange Lock	4
12	83-8880	Panel - Skirt	1	†38	185516060	Regulator - Voltage	1
13	3234-4	Screw - Hex. Flange Hd.	3	39	63-7590	Relay	1
14	74-0720	Tube - Manual	1	40	3234-11	Screw - Hex. Flange Hd.	4
15	3234-36	Screw - Hex. Flange Hd.	3	41	76-6471	Trim - Control Panel Bottom	1
16	2412-133	Clamp - R	2	42	237-71	Seal - O-Ring	1
17	2412-39	Clamp - R	3	43	62-7170	Spacer	1
18	32128-44	Nut - Flange Lock	10	44	83-9170	Right Channel Assembly (Incl. Ref. #3)	1
19	83-8890	Decal - Reelmaster 216-D	2	45	83-8110	Panel - Left	1
†20	80-4220	Decal - Control	1	46	32128-20	Nut - Flange Lock	4
21	32121-6	Pin - Roll	1	47	85-4910	Air Cleaner Assembly	1
22	37-9590	Spring - Compression	1	48	2412-92	Clamp - Hose	1
23	28-6180	Pin	1	49	83-8550	Hose - Air Cleaner	1
24	27-9870	Pin - Seat	1	†50	83-8900	Decal - Service Information	1
25	72-4320	Switch - Seat	1	51	85-5180	Trim	2
26	237-30	Seal - O-Ring	1				

†Obtain from your Local Perkins Dealer.

 ‡For different language versions of this part, see International Decal Cross Reference.

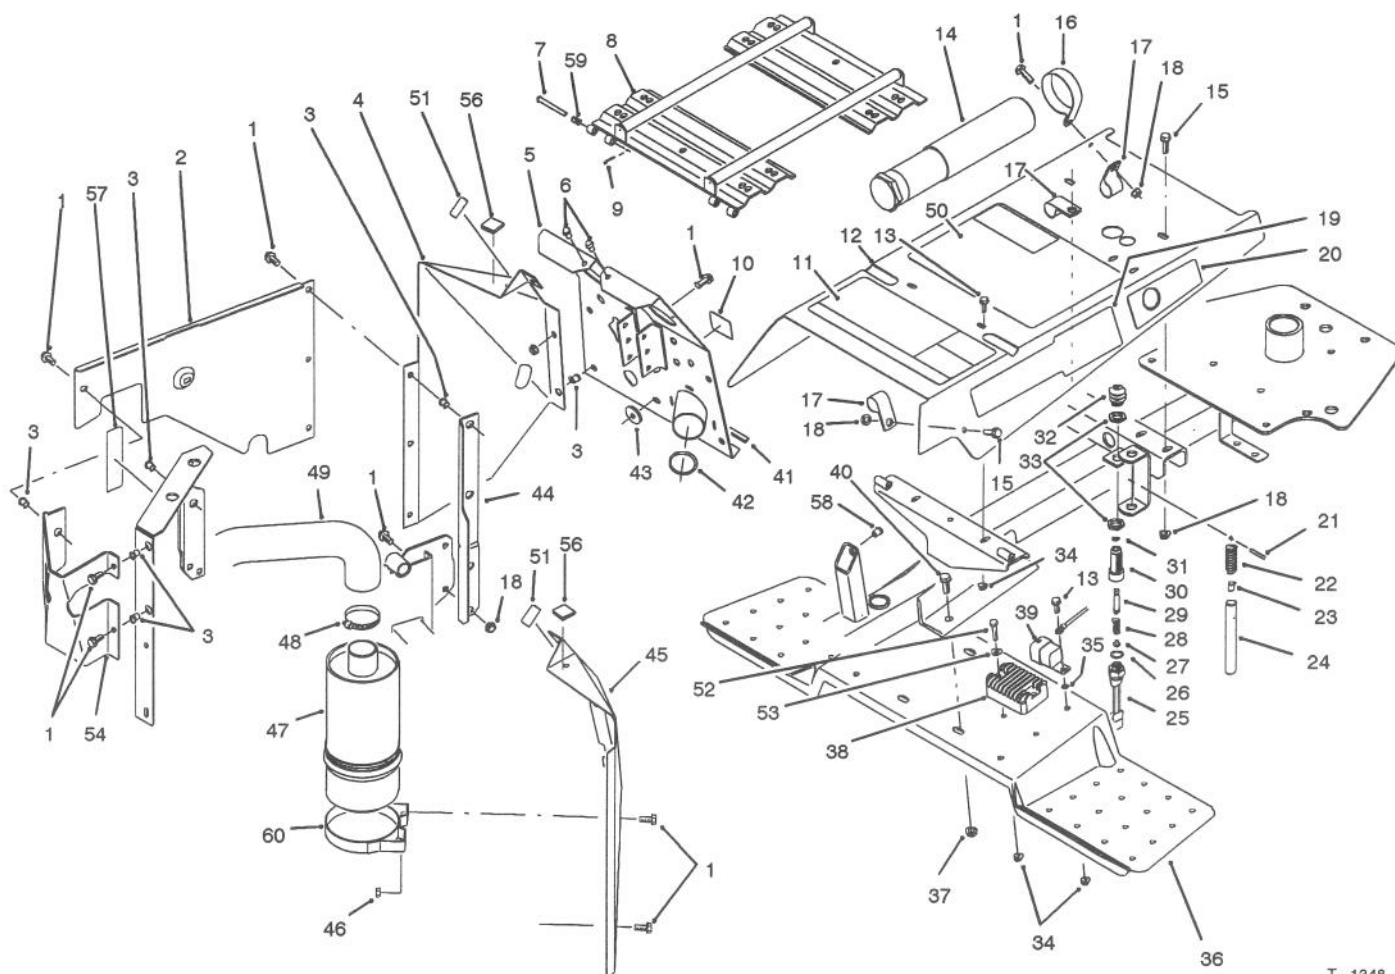


T-1348

SKIRT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
52	321-8	Screw - Cap Hex. Hd.	2
53	3256-22	Washer - Flat	2
54	85-5010	Bracket - Right Front	1
56	85-5140	Foam - Hood	2
57	67-5360	Decal - Danger	1
58	32148-8	Insert - Threaded	1
59	80-4130	Bushing	4

Ref. No.	Part No.	Description	No. Used
60	33-1350	Clamp Assembly (Incl. Ref. #61 & 62)	2
*61	3258-19	Screw - Round Hd.	2
*62	32107-11	Nut - Square	2
*	43-9071	Seat Switch Assembly (Incl. Ref. #25-33)	1

 *Not Illustrated

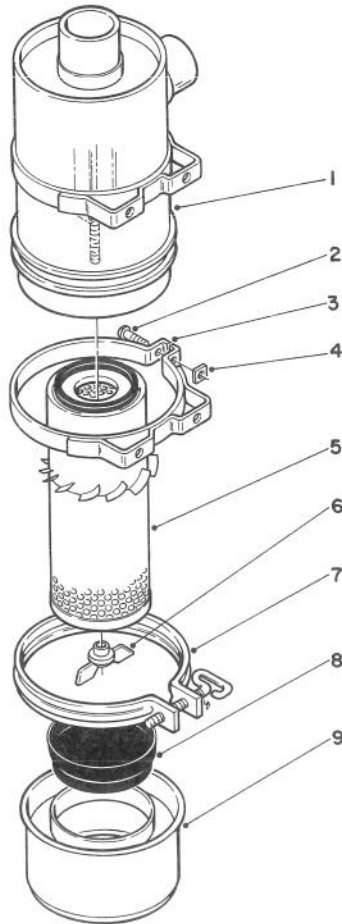


T-1349

AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Body	1
2	3258-19	Screw - Round Hd.	2
3	33-1350	Band Assembly (Incl. Ref. #2 & 4)	2
4	32107-11	Nut - Square	2
5	33-1300	Element Assembly	1

Ref. No.	Part No.	Description	No. Used
6	33-1330	Nut Assembly	1
7	33-1340	Clamp Assembly	1
8	33-1310	Baffle	1
9	33-1320	Cup	1
*	85-4910	Air Cleaner (Complete) (Incl. Ref. #1 & 5-9)	1

 *Not Illustrated

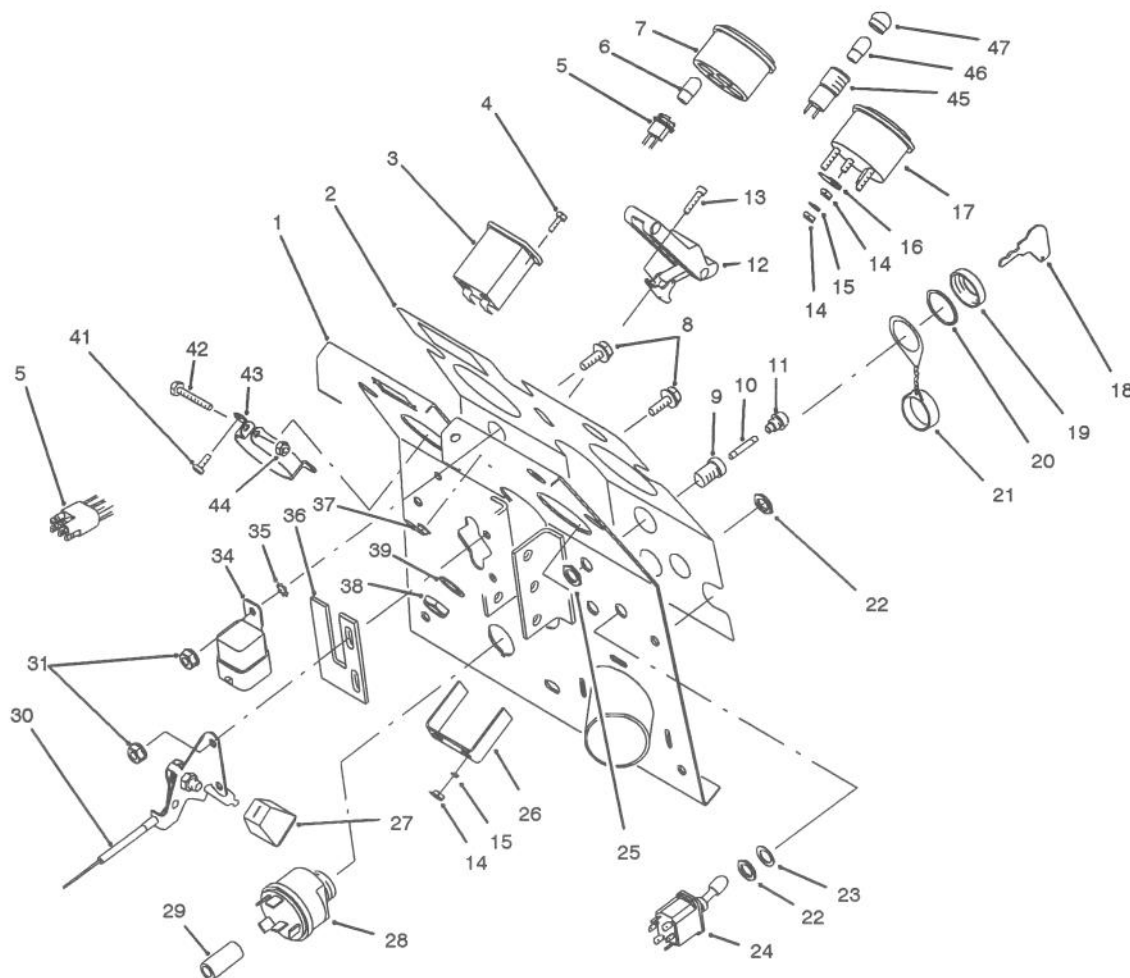

T-1350

INSTRUMENT PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-8190	Panel - Instrument	1
2	83-8180	Decal - Instrument Panel	1
3	75-6820	Hourmeter	1
4	32144-18	Screw - Hex. Hd.	2
5	75-4710	Harness - Warning Light	1
6	219-17	Bulb - Light	4
7	66-2960	Cluster - Warning	1
8	3234-4	Screw - Hex. Washer Hd.	3
9	218-489	Fuse Holder Assembly (Incl. Ref. #11 & 25)	2
10	218-469	Fuse - 15 Amp.	2
11		Cap - Fuse Holder	2
12	80-6980	Latch - Hood	1
13	3274-90	Screw - Hex. Socket Hd.	2
14	3219-14	Nut - Hex.	6
15	3253-2	Washer - Lock	5
16	3256-14	Washer - Flat	2
17	63-7430	Temperature Gauge Assy. (Incl. Ref. #14-16 & 26)	1
†18	385210060	Key - Ignition	2
†19		Nut - Retaining	1
†20	390190030	Seal - Switch	1
†21	385800010	Cover - Switch	1
22	218-500	Nut - Hex.	2
23	3254-20	Washer - Lock	1


Ref. No.	Part No.	Description	No. Used
24	85-4980	Switch Assembly (Incl. Ref. #22-23)	1
25		Nut - Hex.	2
26		Clamp - Gauge	1
27		Knob - Throttle	1
†28	385201160	Ignition Switch Assembly (Incl. Ref. #18 & 19)	1
29	80-7345	Hose	
30	83-8280	Throttle Assembly (Incl. Ref. #27)	1
31	32128-33	Nut - Flange Lock	3
34	63-7590	Relay	1
35	3255-7	Washer - Lock E.T.L.W.	1
36	85-5000	Plate - Throttle	1
37	32149-9	Nut - Flange Lock	2
38		Nut - Hex.	1
39		Washer - Flat	1
41	32144-39	Screw - Pan Hd.	2
42	32105-1	Screw - Hex. Hd.	1
43	69-4780	Clamp - Light Cluster	1
44	3296-2	Nut - Lock	1
45	44-2212	Light Assembly (Incl. Ref. #38-39 & 46-47)	1
46	219-18	Bulb - Light	1
47	218-562	Lens - Light	1

†Obtain from your local Perkins Dealer.



Ref. No.	Part No.	Description	No. Used
1	83-8920	Harness - Wire	1

 
6

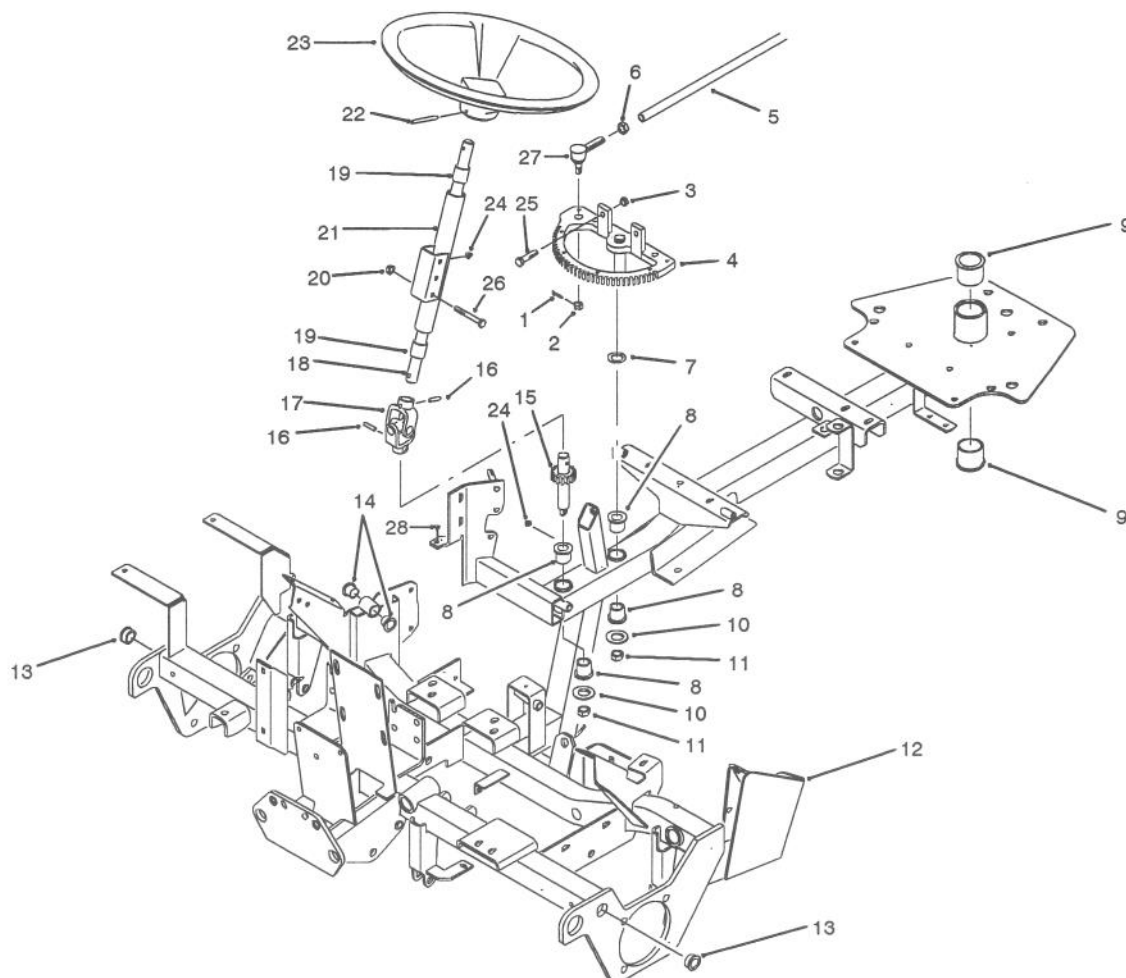

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin - Cotter	1
2	32136-4	Nut - Castle	1
3	3218-3	Nut - Jam	2
4	61-2040	Rack - Steering	1
5	61-2070	Rod - Steering	1
6	3220-5	Nut - Jam	1
7	3-6498	Washer - Thrust	A/R
8	256-117	Bushing - Flange	4
9	256-245	Bushing - Flange	2
10	3256-26	Washer - Flat	2
11	3296-28	Nut - Lock	2
12	83-7570	Frame Assembly (Incl. Ref. #8, 9, 13 & 14)	1
13	256-247	Bushing - Flange	2
14	256-287	Bushing - Flange	2
15	61-2010	Pinion - Steering	1

Ref. No.	Part No.	Description	No. Used
16	32121-15	Pin - Roll	2
17	61-3360	Joint - Universal	1
18	61-2080	Shaft - Steering	1
19	256-27	Bushing - Sleeve	2
20	3296-29	Nut - Flange Lock	1
21	61-2090	Steering Column Assembly (Incl. Ref. #19)	1
22	32121-10	Pin - Roll	1
23	76-1420	Wheel - Steering	1
24	302-5	Fitting - Grease	3
25	32141-84	Screw - Cap Hex. Hd.	2
26	322-12	Screw - Cap Hex. Hd.	1
27	21-0140	Rod End Assembly (Incl. Ref. #2)	1
28	32148-14	Insert - Threaded	1

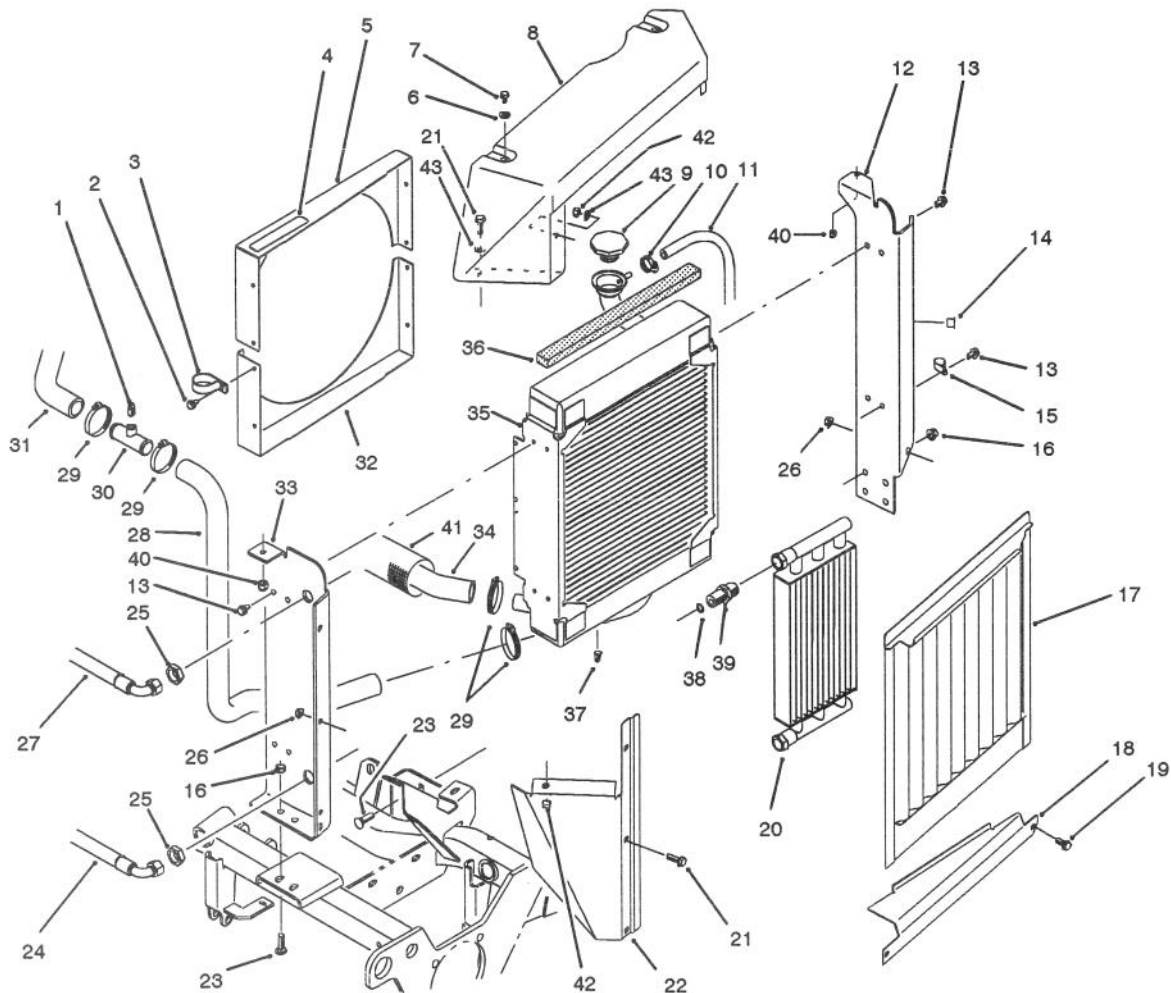 


T-1352

RADIATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	281-7	Plug - Pipe	1	24	85-5030	Hose - Hydraulic	1
2	32104-116	Screw - Hex. Washer Hd.	8	25	340-127	Nut - Bulkhead	2
3	2412-74	Clamp - R	1	26	32128-44	Nut - Flange Lock	4
‡4	77-3100	Decal - Warning	1	27	83-9670	Hose - Hydraulic	1
5	83-7840	Shroud - Fan Top	1	28	83-9060	Hose - Radiator	1
6	3256-22	Washer - Flat	2	29	2412-34	Clamp - Hose	5
7	3234-4	Screw - Cap Hex. Hd.	2	30	83-9080	Connector - Bleed	1
8	83-8040	Cover - Left	1	31	83-9070	Hose - Radiator	1
9	66-3240	Cap - Radiator	1	32	83-7850	Shroud - Fan Bottom	1
10	2412-108	Clamp - Hose	1	33	83-7990	Bracket - Radiator Front	1
11	71-3382	Hose - Overflow	1	34	83-9050	Hose - Radiator	1
12	83-7980	Bracket - Radiator Rear	1	35	83-7550	Radiator Assembly (Incl. Ref. #37)	1
13	3234-28	Screw - Hex. Washer Hd.	8	36	83-9030	Foam - Top	1
14	32148-8	Insert - Threaded	3	37	281-1	Plug - Pipe	2
15	2412-41	Clamp - R	1	38	237-30	Seal - O-Ring	2
16	32128-43	Nut - Flange Lock	6	39	83-7970	Fitting - Hydraulic Bulkhead (Incl. Ref. #38)	2
17	83-8150	Screen - Radiator	1	40	3296-42	Nut - Lock	2
18	83-8070	Bracket - Radiator Bottom	1	41	85-5170	Sleeve	1
19	3234-5	Screw - Hex. Washer Hd.	2	42	3296-29	Nut - Lock	2
20	24-0760	Cooler - Oil	1	43	3256-23	Washer - Flat	2
21	3234-17	Screw - Hex. Washer Hd.	4				
22	83-8210	Panel - Front Left	1				
23	3231-22	Bolt - Carriage	6				

 
‡For different language versions of this part, see International Decal Cross Reference.

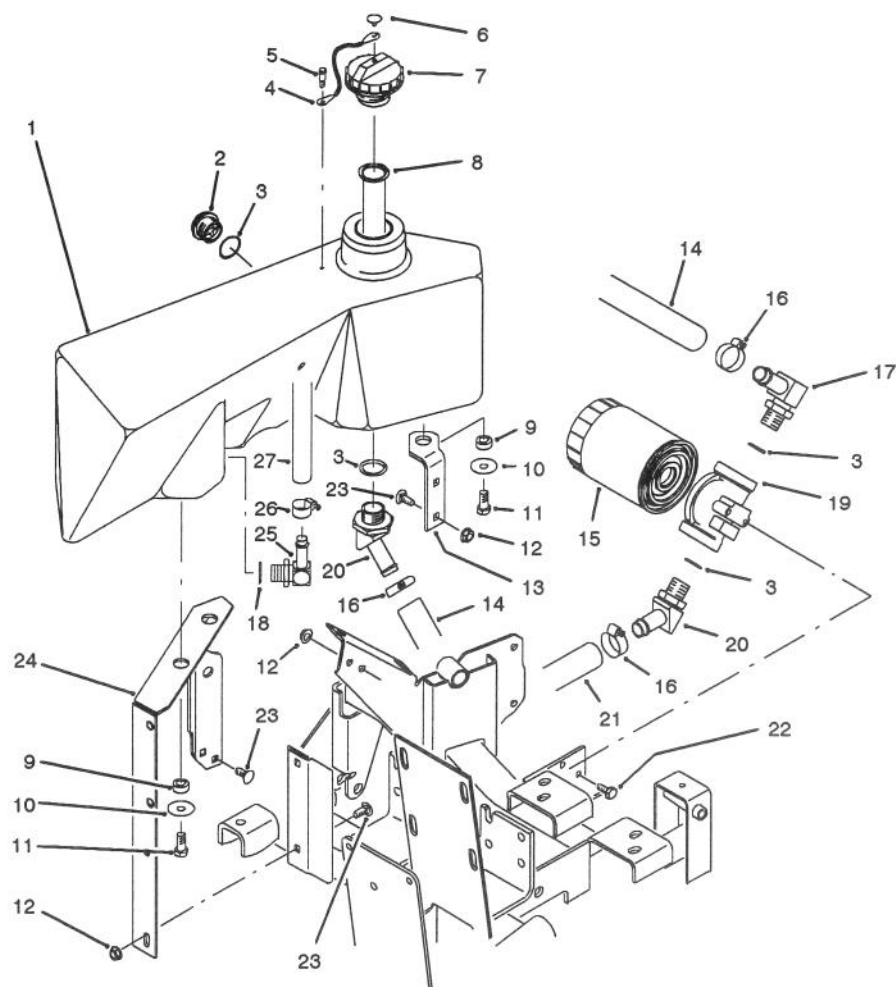

T-1353

HYDRAULIC RESERVOIR & FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-7720	Reservoir - Hydraulic	1	15	54-0110	Element - Oil Filter	1
2	69-1170	Glass - Sight (Incl. Ref. #3)	1	16	3212-34	Clamp - Hose	3
3	237-81	Seal - O-Ring	4	17	353-987	Fitting - Hydraulic 90° (Incl. Ref. #3)	1
4	75-0540	Teather - Cap	1	18	237-79	Seal - O-Ring	1
5	57-5420	Screw - Shoulder	1	19	68-8990	Head - Oil Filter	1
6	2410-73	Retainer - Teather	1	20	354-127	Fitting - Hydraulic 45° (Incl. Ref. #3)	2
7	70-8640	Cap - Hydraulic Reservoir (Incl Ref. #4 & 6)	1	21	83-9650	Hose - Hydraulic	1
8	61-2790	Screen - Filler	1	22	3234-4	Screw - Hex. Washer Hd.	2
9	240-11	Grommet	3	23	3230-23	Screw - Carriage	6
10	63-8410	Washer - Flat	3	24	83-7780	Bracket - Support	1
11	323-5	Screw - Cap Hex. Hd.	3	25	354-120	Fitting - Hydraulic 90° (Incl. Ref. #18)	1
12	32128-44	Nut - Hex. Flange Hd.	6	26	2412-36	Clamp - Hose	1
13	83-9920	Bracket - Reservoir	1	27	83-9670	Hose - Hydraulic	1
14	83-9651	Hose - Hydraulic	1				

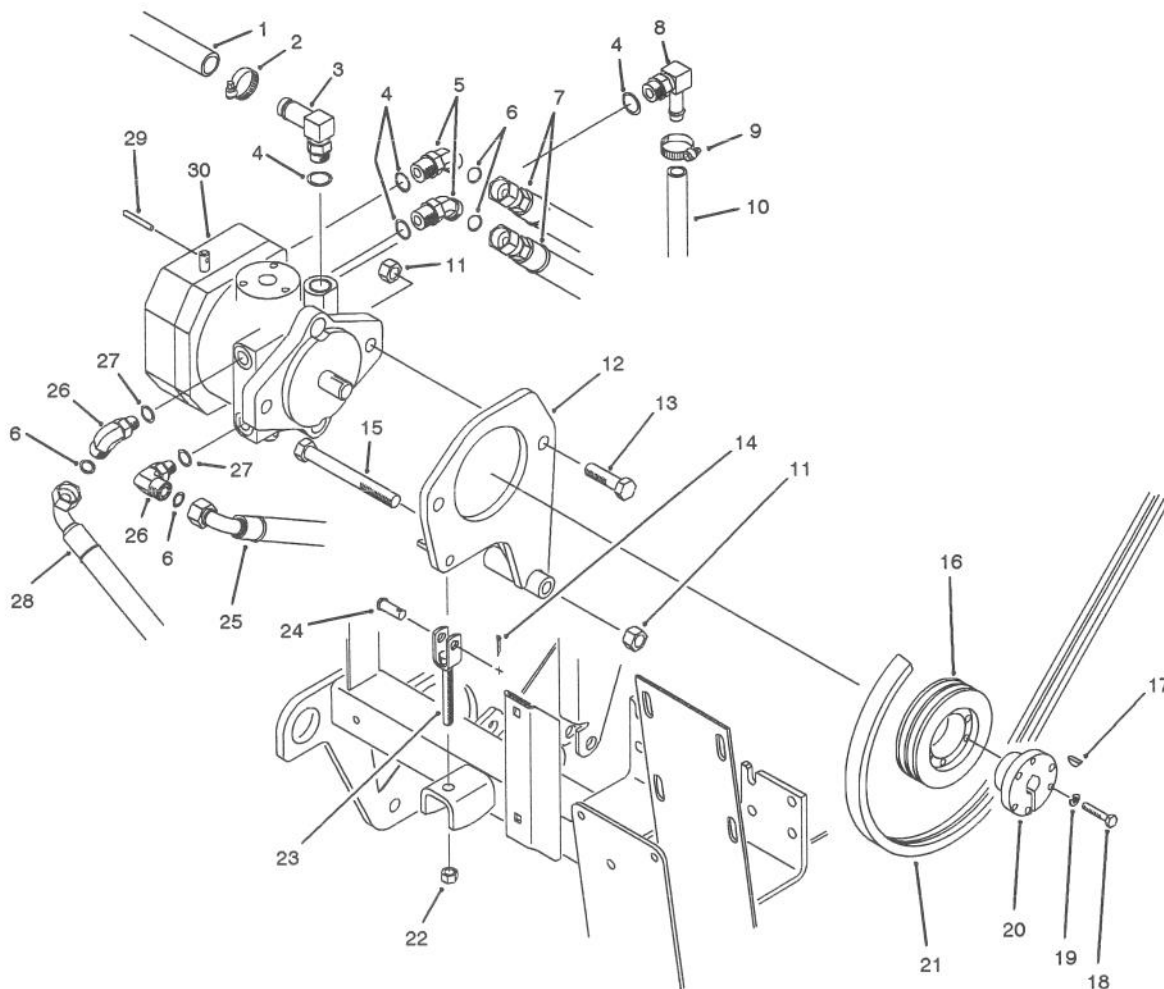 


T-1354

HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-9650	Hose - Hydraulic	1
2	2412-34	Clamp - Hose	1
3	354-128	Fitting - Hydraulic 90° (Incl. Ref. #4)	1
4	237-79	Seal - O-Ring	4
5	340-101	Fitting - Hydraulic 45° (Incl. Ref. #4 & 6)	2
6	237-30	Seal - O-Ring	4
7	83-9600	Hose - Hydraulic	2
8	354-120	Fitting - Hydraulic 90° (Incl. Ref. #4)	1
9	2412-36	Clamp - Hose	1
10	85-5030	Hose - Hydraulic	1
11	3296-23	Nut - Lock	3
12	83-8320	Mount - Pump	1
13	325-7	Screw - Cap Hex. Hd.	2
14	3272-6	Pin - Cotter	1
15	325-18	Screw - Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
16	85-4960	Pulley	1
17	3257-32	Key - Woodruff	1
18	321-13	Screw - Cap Hex. Hd.	3
19	3253-3	Washer - Lock	3
20	59-2150	Taper Lock Bushing Assy. (Incl. Ref. #18 & 19)	1
21	83-8540	Belt - Pump Drive	1
22	3296-6	Nut - Lock	1
23	83-9660	Clevis	1
24	283-2	Pin - Clevis	1
25	83-9640	Hose - Hydraulic	1
26	340-99	Fitting - Hydraulic 90° (Incl. Ref. #6 & 27)	2
27	237-42	Seal - O-Ring	2
28	83-9630	Hose - Hydraulic	1
29	32121-34	Pin - Dowel	1
30	85-4920	Hydraulic Pump Assembly (Incl. Ref. #17)	1

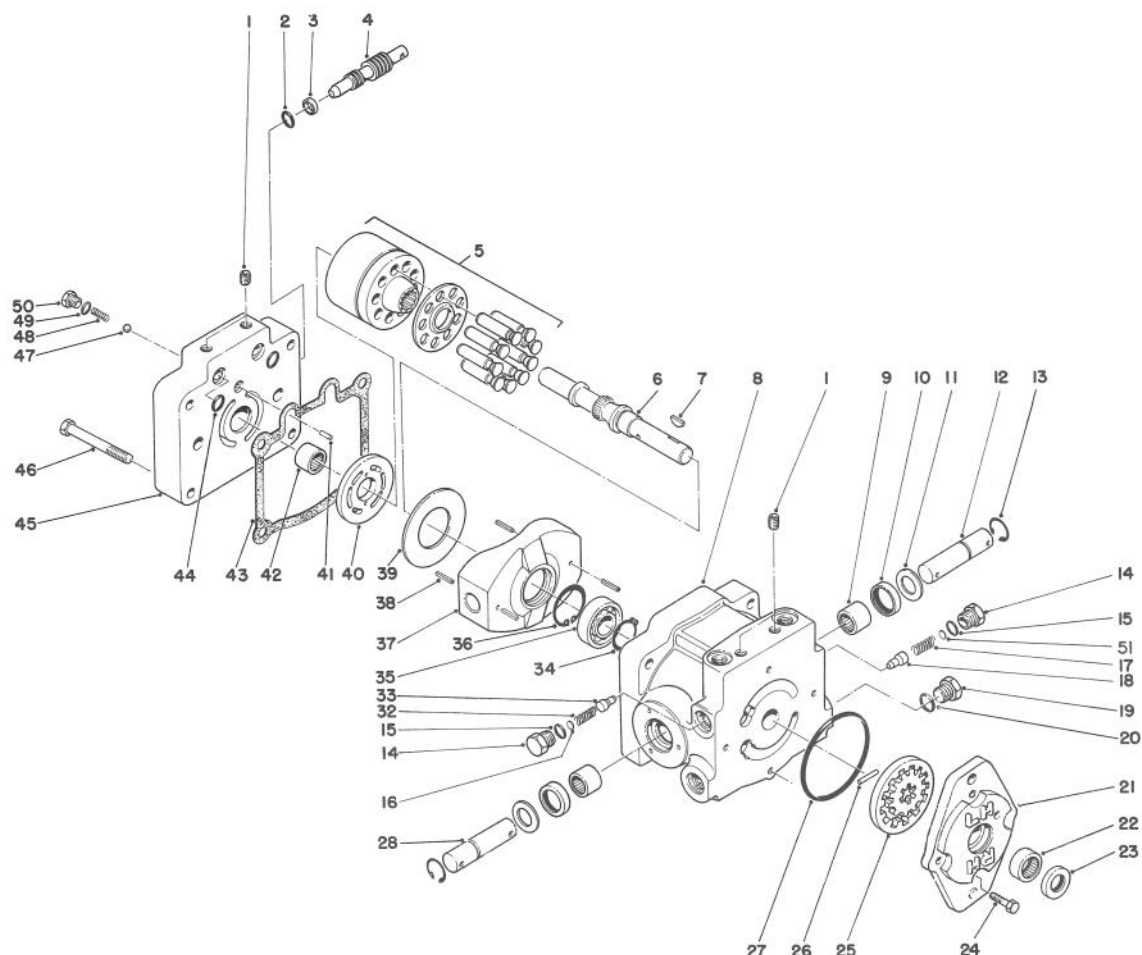 


T-0245

HYDRAULIC PUMP ASSEMBLY NO. 85-4920

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	285-17	Plug - Pipe	6	25	25-2680	Gerotor Assembly	1
2	237-22	O-Ring	1	26	25-2530	Pin - Straight	1
3	25-2630	Ring	1	27	237-95	O-Ring	1
4	25-2620	Valve - By-Pass	1	28	49-8480	Shaft - Trunion	1
5	48-1800	Cylinder Block Kit	1	32	25-2480	Spring - Charge Relief	1
6	67-8020	Shaft - Pump	1	33	28-3420	Cone - Charge Relief	1
7	3257-32	Key - Woodruff	1	34	32120-15	Ring - Retaining	1
8	61-0080	Hydraulic Pump Assembly (Complete)	1	35	251-8	Bearing - Ball	1
9	252-82	Bearing - Needle	2	36	32120-11	Ring - Retaining	1
10	25-3210	Seal - Lip	2	37	25-2450	Swash/Plate	1
11	25-2510	Washer	2	38	32121-91	Pin - Coiled Spring	3
12	25-2580	Shaft - Trunion	1	39	25-2380	Plate - Thrust	1
13	32151-46	Ring - Retaining	2	40	25-2390	Plate - Valve	1
14	25-2460	Plug	2	41	25-2430	Pin - Straight	1
15	237-86	O-Ring	2	42	67-8080	Bearing - Needle	1
16	25-2470	Kit - Shim Pack	2	43	25-2400	Gasket	1
17	25-2570	Spring - Relief Valve	1	44	62-4290	O-Ring	2
18	25-2560	Cone - Relief Valve	1	45	67-8090	Cap - Pump End	1
19	67-8030	Plug Assembly (Incl. Ref. #20)	1	46	323-11	Screw - Cap Hex. Hd.	4
20	67-8040	O-Ring	1	47	25-2490	Ball - Check Valve	2
21	25-2690	Housing - Charge Pump	1	48	25-2640	Spring - Check Valve	2
22	67-8050	Bearing - Needle	1	50	25-2650	Plug - Check Valve	2
23	67-8060	Seal - Lip	1	*	25-3180	Kit - Check Valve (Incl. Ref. #47-50)	1
24	322-4	Screw - Cap Hex. Hd.	4	*	49-8520	Kit - Implement Relief (Incl. Ref. #14-18)	1

 *Not Illustrated

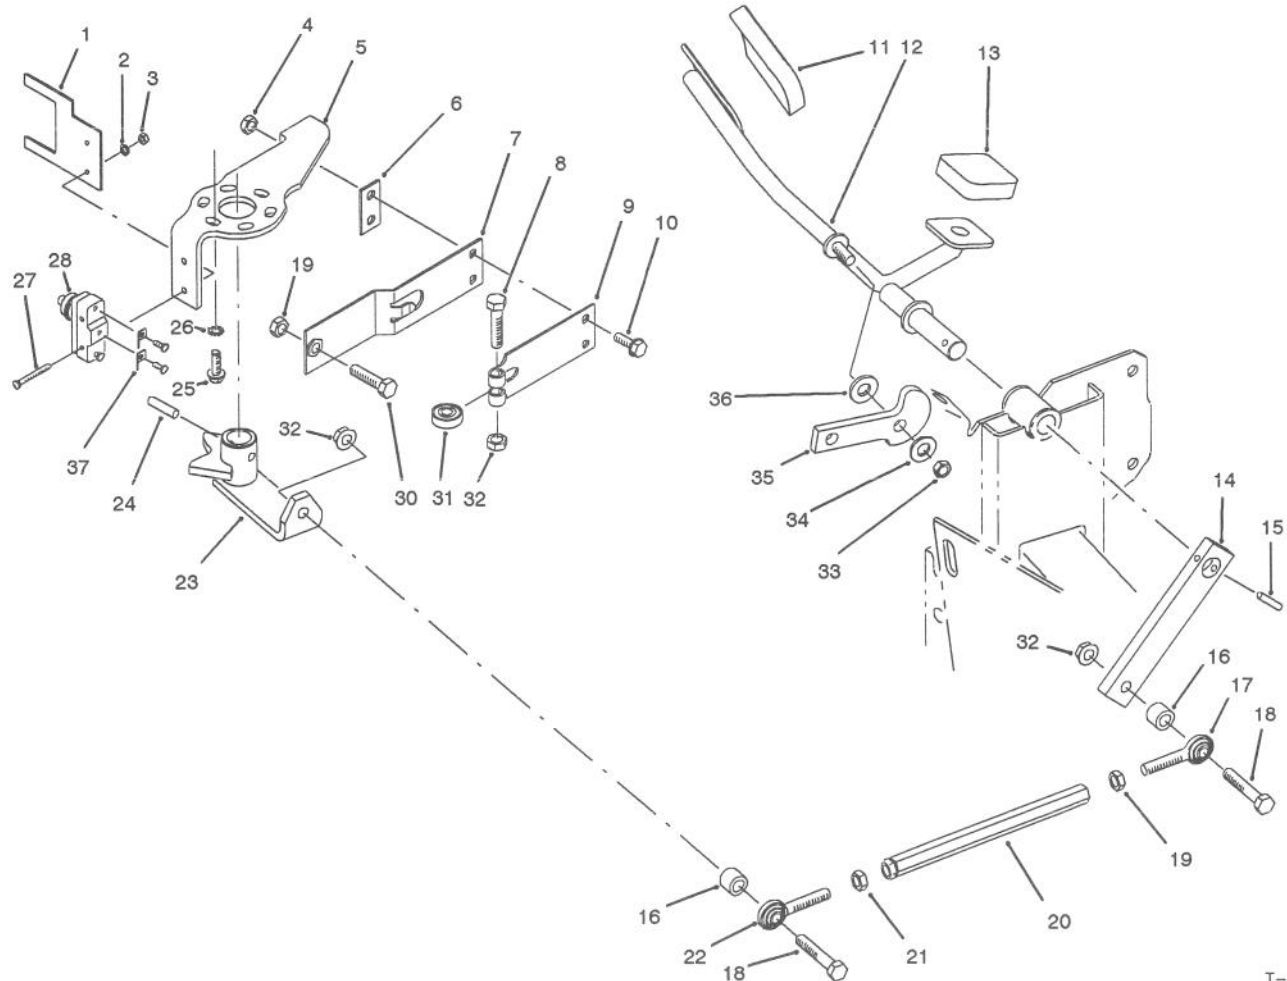


T-1355

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-8810	Stop - Spring	1
2	3254-9	Washer - ITLW	2
3	3217-16	Nut - Lock	2
4	3296-16	Nut - Lock	2
5	29-6120	Plate - Pump	1
6	51-3150	Shim - Spring	1
7	29-6170	Spring - Extended Leaf	1
8	322-17	Screw - Cap Hex. Hd.	1
9	29-6150	Spring - Leaf	1
10	321-6	Screw - Hex. Flange Hd.	2
11	74-9100	Pad - Forward	1
12	83-8270	Pedal - Traction	1
13	74-9110	Pad - Reverse	1
14	61-2610	Arm - Traction	1
15	32121-6	Pin - Roll	1
16	61-2370	Spacer	2
17	2411-52	End - Rod	1
18	322-9	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
19	3220-2	Nut - Jam	2
20	83-8760	Rod - Control	1
21	3220-20	Nut - Jam	1
22	2411-53	End - Rod	1
23	83-8770	Lever - Pump	1
24	32121-24	Pin - Roll	1
25	11-9760	Screw - Hex. Flange Hd.	3
26	3255-7	Washer - ETLW	3
27	3249-11	Screw - Round Hd.	2
28	29-6163	Switch	1
30	3210-7	Screw - Cap Hex. Hd.	1
31	251-259	Bearing - Ball	1
32	3296-29	Nut - Lock	3
33	3296-59	Nut - Lock	1
34	3256-24	Washer - Flat	1
35	74-6110	Cam - Stop	1
36	66-2920	Spacer	1
37	218-596	Tab	2

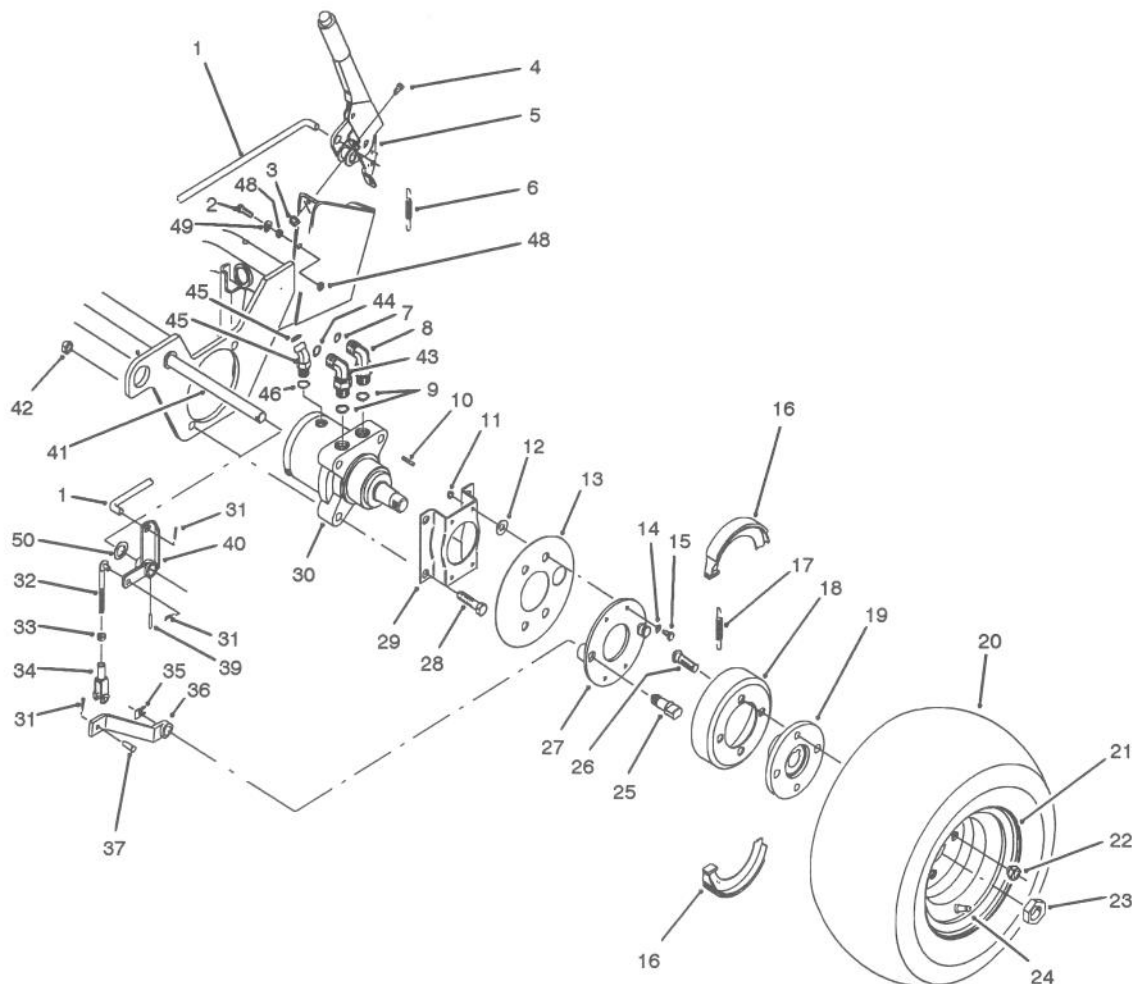 


T-1356

FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-9350	Rod - Parking Brake	1
2	322-17	Screw - Cap Hex. Hd.	1
3	32128-44	Nut - Lock	2
4	3234-5	Screw - Hex. Washer Hd.	2
5	61-3990	Parking Brake Assembly	1
6	5-7290	Spring - Extension	1
7	237-30	Seal - O-Ring	2
8	340-105	Fitting - Hydraulic 90° (Incl. Ref. 7 & 9)	2
9	237-80	Seal - O-Ring	4
10	65-4640	Key - Square	2
11	3296-42	Nut - Lock	8
12	3256-16	Washer - Flat	8
13	83-9340	Shield - Grass	2
14	3253-3	Washer - Lock	8
15	321-5	Screw - Cap Hex. Hd.	8
16	70-9840	Shoe - Brake	4
17	70-9880	Spring - Extension	4
18	10-6821	Brake Drum Assembly (Incl. Ref. #19 & 26)	2
19	10-6870	Hub - Wheel	2
20	231-127	Tire	2
21	217-60	Rim	2
22	242-50	Nut - Lug	8

Ref. No.	Part No.	Description	No. Used
23	26-3790	Nut - Lock	2
24	232-27	Valve - Stem	2
25	70-9860	Pin - Pivot Brake	2
26	85-6540	Stud - Drive	8
27	70-9870	Plate - Brake	2
28	325-11	Screw - Cap Hex. Hd.	8
29	84-2000	Bracket - Brake	2
30	66-5291	Hydraulic Motor Assembly (Incl. Ref. #10)	2
31	3272-6	Pin - Cotter	5
32	84-1990	Rod - Adjusting	2
33	3220-2	Nut - Jam	2
34	282-2	Clevis	2
35	70-9850	Clip - Retaining	2
36	83-9250	Lever - Brake	2
37	283-1	Pin - Clevis	2
39	32121-6	Pin - Roll	2
40	83-9270	Pivot - Brake L.H.	1
*	83-9310	Pivot - Brake R.H.	1
41	83-9330	Shaft - Brake	1
42	3296-23	Nut - Lock	8
43	340-17	Fitting - Hydraulic 90° (Incl. Ref. #9 & 44)	2
44	237-65	Seal - O-Ring	2

 *Not Illustrated

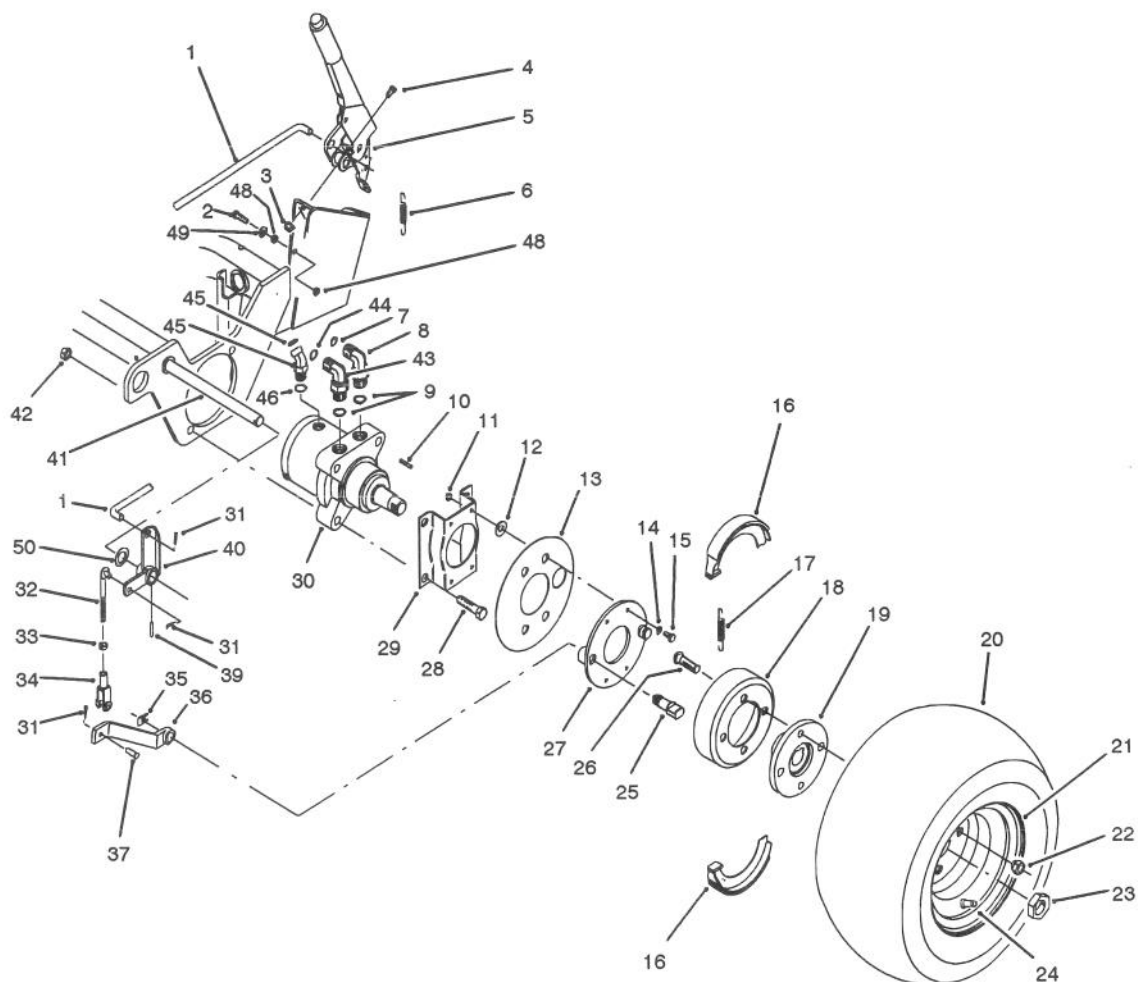


T-1356

FRONT WHEEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	340-103	Fitting - Hydraulic 45° (Incl. Ref. #46 & 47) (For Left Wheel Motor)	1
*	340-140	Fitting - Hydraulic Tee (Incl. Ref. #46 & 47) (For Right Wheel Motor)	1
46	237-78	Seal - O-Ring	2

Ref. No.	Part No.	Description	No. Used
47	237-21	Seal - O-Ring	3
48	32128-20	Nut - Lock	2
49	3256-23	Washer	1
50	3-6498	Washer	2
*	71-1500	Brake Assembly (Incl. Ref. #16, 17, 25, 27 & 35)	2

 *Not Illustrated

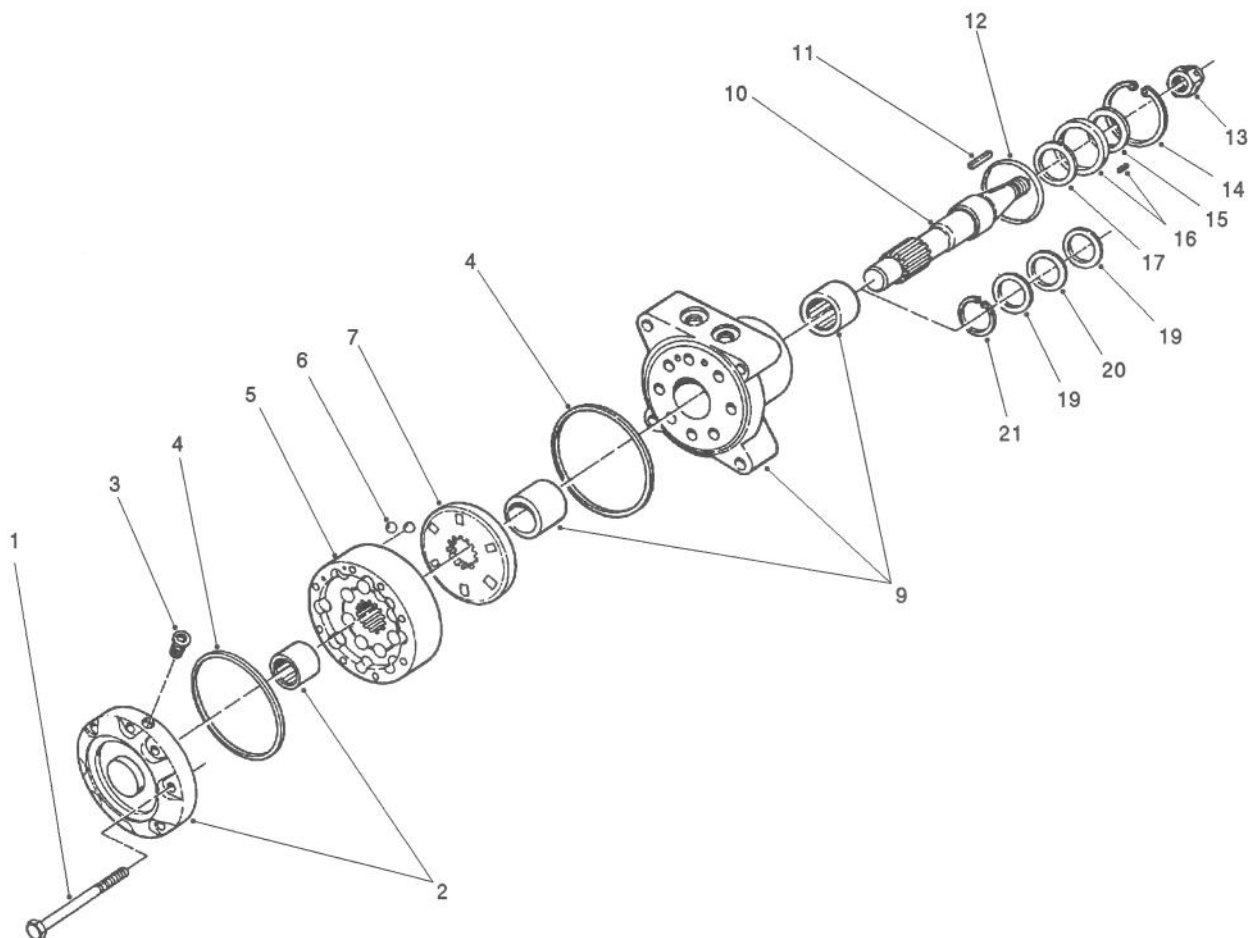

T-0274


HYDRAULIC DRIVE MOTOR ASSEMBLY NO. 66-5291

Ref. No.	Part No.	Description	No. Used
1	65-4580	Screw - Cap Hex Hd.	8
2	65-4680	Cover & Bearing Assembly	1
3	65-4560	Plug - Hex (Hollow)	1
4	65-4570	Seal - Square Ring	2
5	66-6110	IGR Assembly	1
6	65-4550	Valve - Check Ball	2
7	70-8150	Plate - Valve	1
9	65-4670	Body & Bearing Assembly	1
10	65-4660	Shaft	1
11	65-4640	Key - Square	1
12	65-4620	Seal - O-Ring	1

Ref. No.	Part No.	Description	No. Used
14	65-4500	Seal - Snap Ring	1
†15		Seal-Dust	1
†16		Retainer/Pin	1
†17		Seal-Lip	1
*	76-2350	Seal/Retainer Assembly (Incl. Ref. #15-17)	1
19	65-4600	Washer - Thrust	2
20	65-4610	Bearing - Thrust	1
21	65-4590	Ring - Snap	1
*	76-2360	Body Seal Kit (Incl. Ref. #4, 12 & 15-17)	1

*Not Illustrated

 
†Not available from Toro as a replacement part.

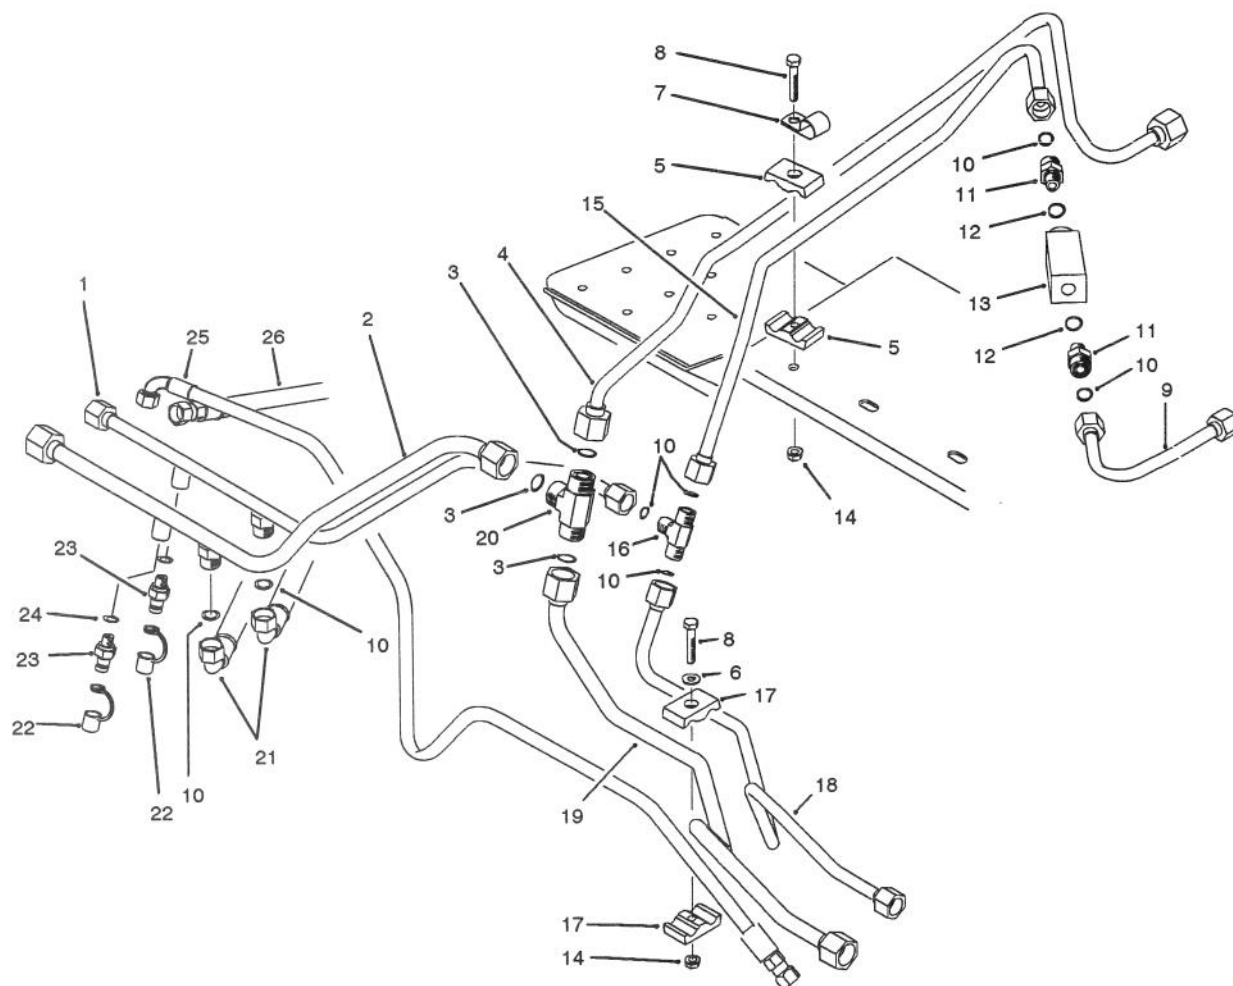

T-1358

DRIVE MOTOR PLUMBING ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-9470	Hydraulic Tube Assembly (Incl. Ref. #10)	1	14	3296-29	Nut - Lock	2
2	83-9440	Hydraulic Tube Assembly (Incl. Ref. #10)	1	15	83-9490	Tube - Hydraulic	1
3	237-65	Seal - O-Ring	3	16	340-102	Fitting - Hydraulic Tee (Incl. Ref. #10)	1
4	83-9460	Tube - Hydraulic	1	17	56-7977	Clamp - Hydraulic Tube	2
5	56-7976	Clamp - Hydraulic Tube	2	18	83-9480	Tube - Hydraulic	1
6	3256-3	Washer - Flat	1	19	83-9450	Tube - Hydraulic	1
7	2412-39	Clamp - R	1	20	340-19	Fitting - Hydraulic Tee (Incl. Ref. #3)	1
8	322-9	Screw - Cap Hex. Hd.	2	21	83-9600	Hose - Hydraulic	2
9	83-9500	Tube - Hydraulic	1	22	354-79	Cap - Test Port	2
10	237-30	Seal - O-Ring	7	23	354-77	Hydraulic Test Port Fitting (Incl. Ref. #24)	2
11	340-5	Fitting - Hydraulic Straight (Incl. Ref. #10 & 12)	2	24	237-78	Seal - O-Ring	2
12	237-42	Seal - O-Ring	2	25	85-5300	Hose - Hydraulic	1
13	71-2960	Valve - Flow Control	1	26	85-4990	Hose - Hydraulic	1

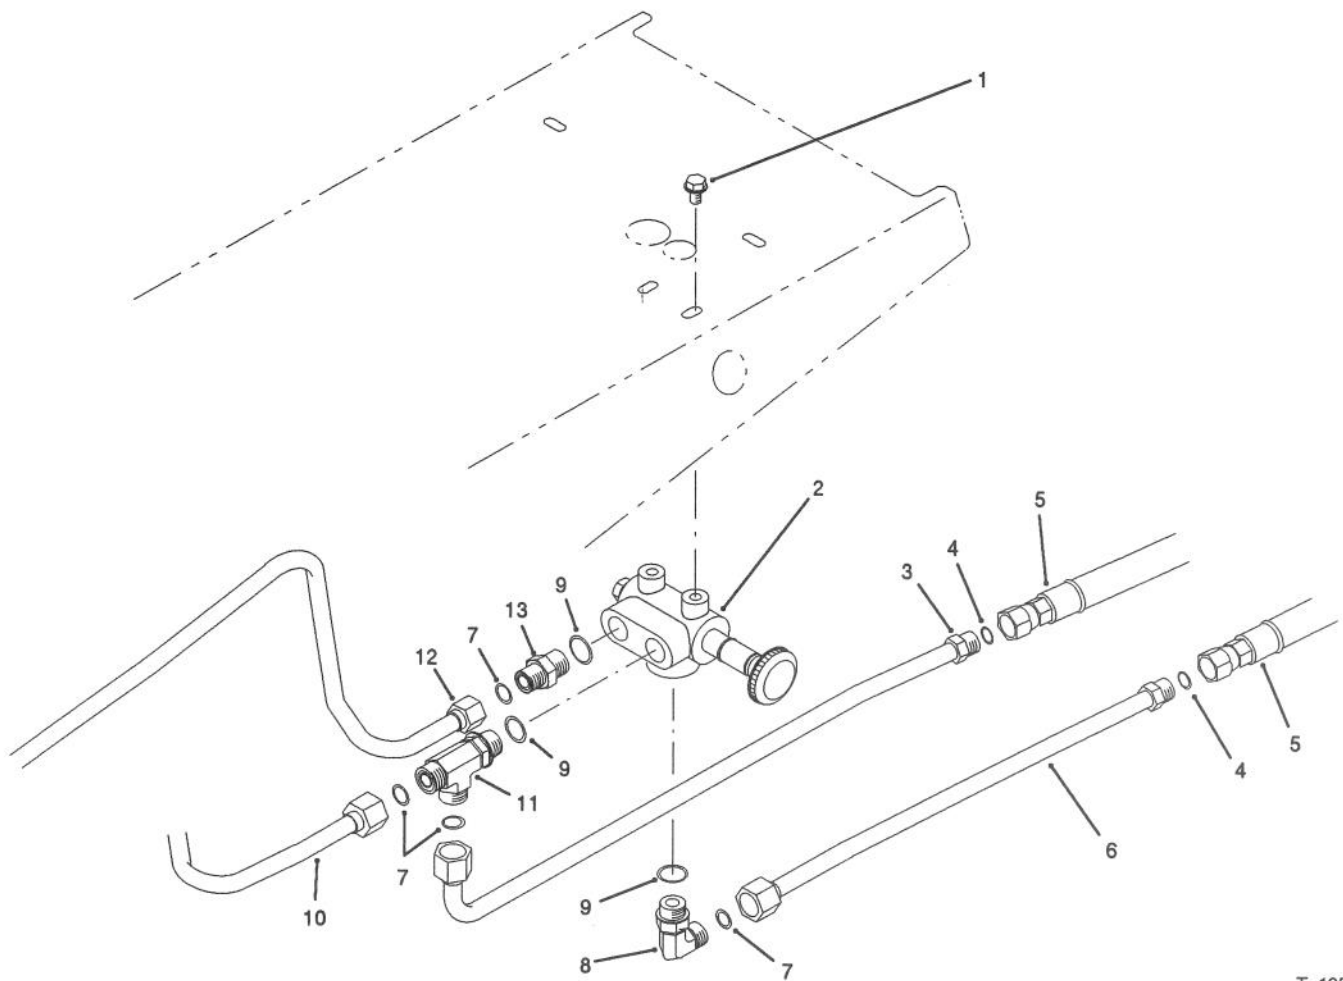 

T-1359

REAR WHEEL DRIVE VALVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3234-28	Screw - Hex. Flange Hd.	2	8	340-98	Fitting - Hydraulic 90° (Incl. Ref. #7 & 9)	1
2	71-2830	2 Position Valve Assembly	1	9	237-79	Seal - O-Ring	3
3	71-0710	Hydraulic Tube Assembly (Incl. Ref. #4)	1	10	83-9500	Tube - Hydraulic	1
4	237-22	Seal - O-Ring	2	11	340-109	Fitting - Hydraulic Tee (Incl. Ref. #7 & 9)	1
5	80-4090	Hose - Hydraulic	2	12	83-9460	Tube - Hydraulic	1
6	71-0840	Hydraulic Tube Assembly (Incl. Ref. #4)	1	13	340-4	Fitting - Hydraulic Straight (Incl. Ref. #7 & 9)	1
7	237-30	Seal - O-Ring	4				

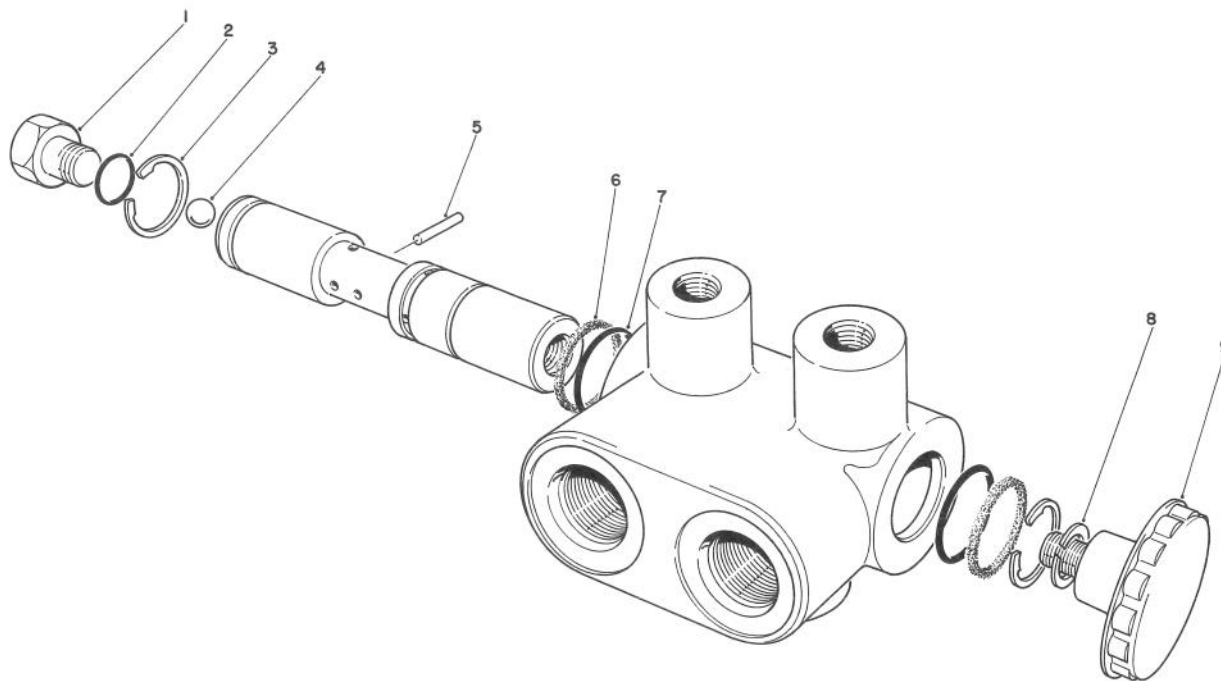 

T-0672


2 POSITION VALVE ASSEMBLY NO. 71-2830

Ref. No.	Part No.	Description	No. Used
1	353-512	Plug - Hydraulic	1
2	237-22	Seal - O-Ring	1
3	32151-78	Ring - Retaining	2
4	354-23	Ball - Check	1
5	32121-38	Pin - Roll	1
†6		Washer - Backup	2

Ref. No.	Part No.	Description	No. Used
7	237-54	Seal - O-Ring	2
8	3253-5	Washer - Lock	1
9	233-46	Knob	1
*	71-1220	Seal Repair Kit (Incl. Ref. #2, 3, 6 & 7)	1

*Not Illustrated

 †Available only in Seal Repair Kit No. 71-1220.

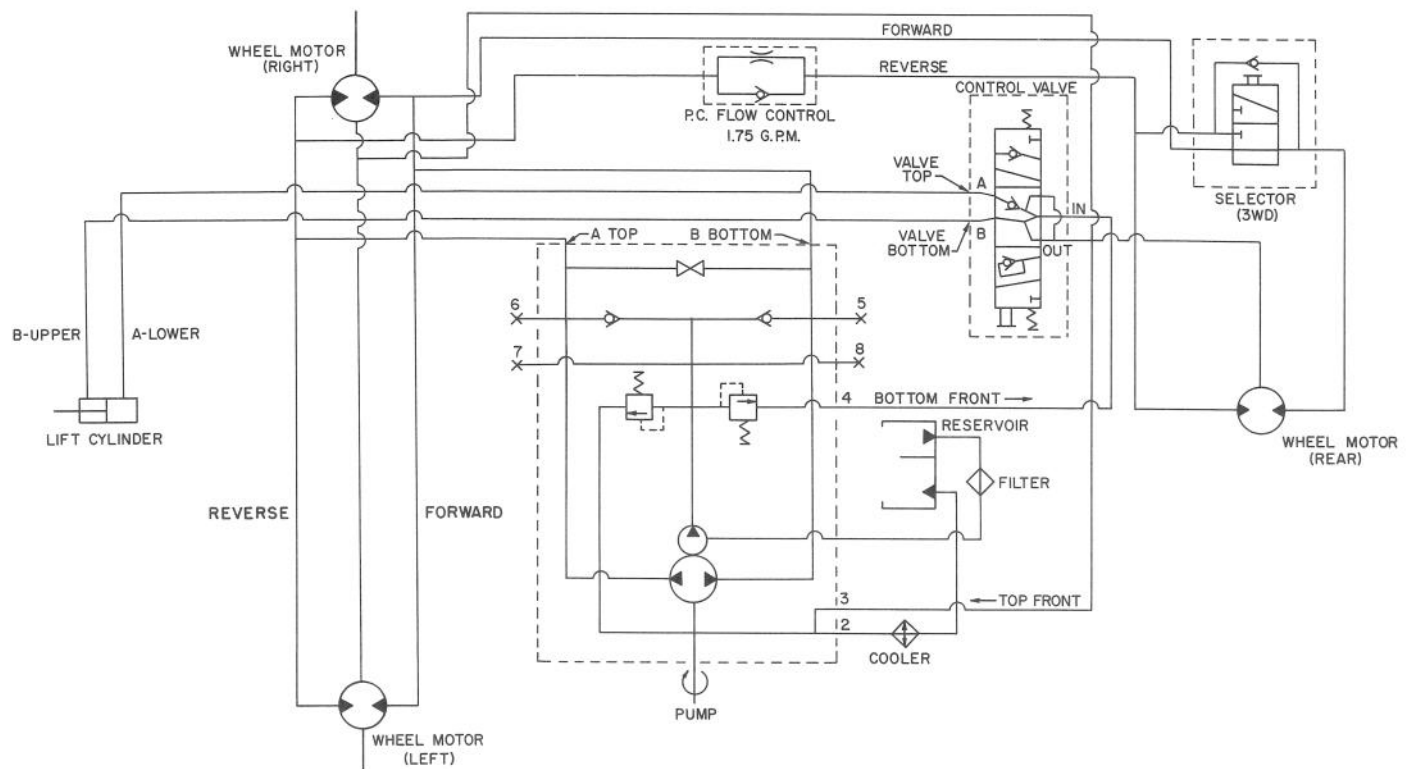


T-1411

HYDRAULIC SCHEMATIC

Ref. No.	Part No.	Description	No. Used

Ref. No.	Part No.	Description	No. Used

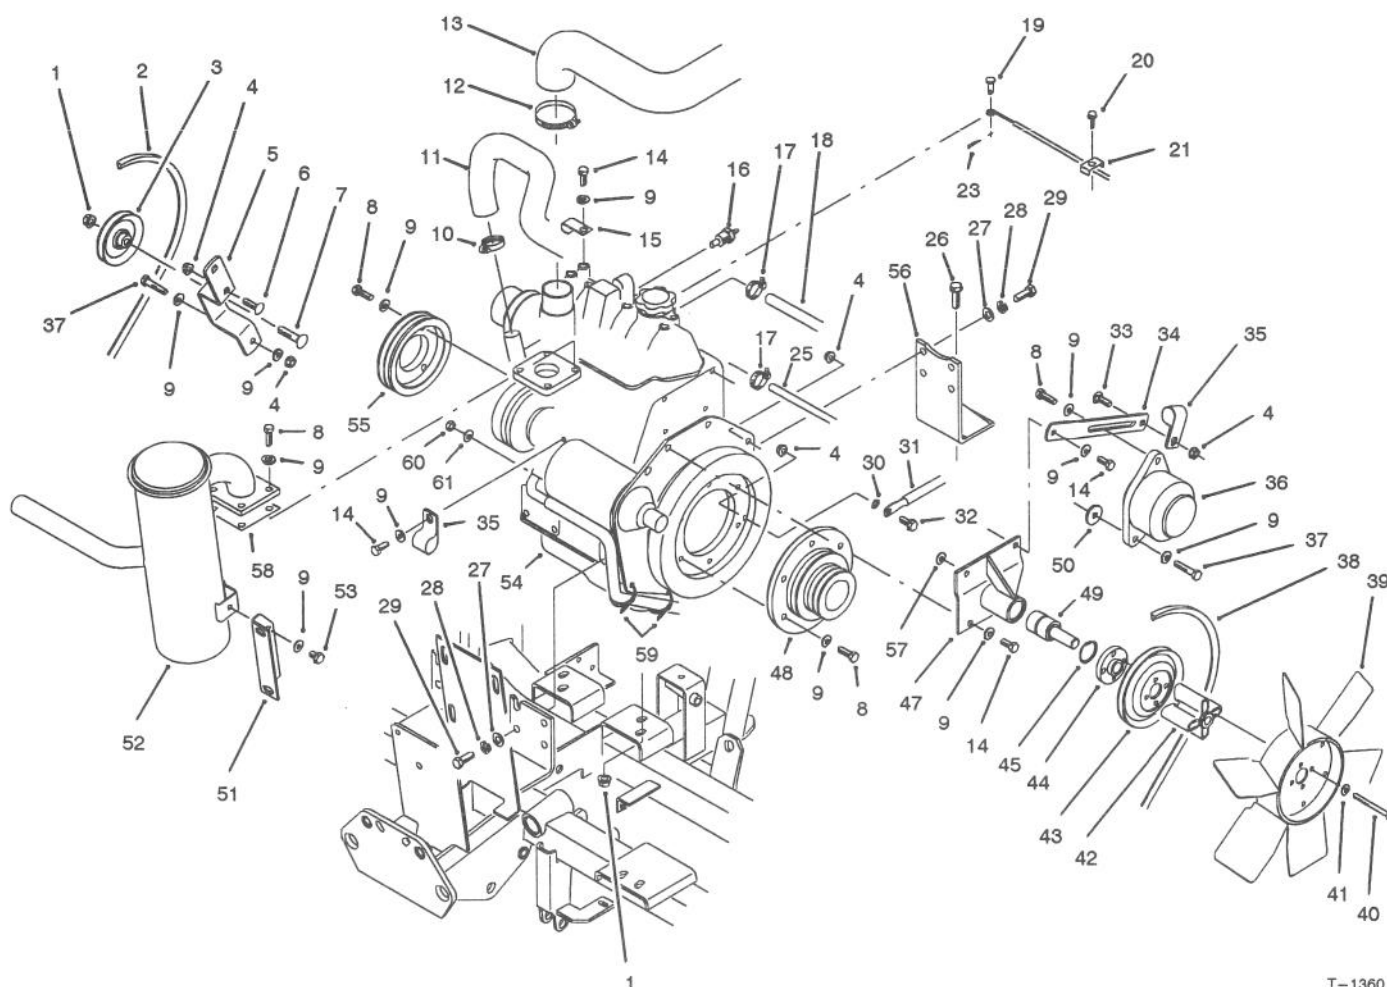 


T-1360

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-43	Nut - Flange Lock	5
2	37-9090	Belt - V	1
3	63-8140	Pulley - Idler	1
4	32128-44	Nut - Flange Lock	5
5	83-7690	Bracket - Idler	1
6	3230-22	Screw - Carriage	1
7	3231-26	Screw - Carriage	1
8	48-9460	Screw - Cap Hex. Hd.	14
9	3256-23	Washer - Flat	23
10	2412-34	Clamp - Hose	1
11	83-9070	Hose - Coolant	1
12	2412-92	Clamp - Hose	1
13	83-8550	Hose - Air Intake	1
14	48-7700	Screw - Cap Hex. Hd.	6
15	249-53	Clamp - J	1
16	82-3110	Sensor - Temp	1
17	2412-108	Clamp - Hose	2
18	63-7620	Hose - Fuel	1
19	283-62	Pin - Clevis	1
20	3290-432	Screw - Hex. Hd.	1
21	81-1690	Clamp - Throttle Cable	1
23	3272-9	Pin - Cotter	1
25	75-4703	Hose - Fuel	1
26	3234-24	Screw - Hex. Flange Hd.	4
27	3256-24	Washer - Flat	16
28	48-9590	Washer - Lock	16

29	48-7780	Screw - Cap Hex. Hd.	16
30	3255-8	Washer - Lock E.T.L.W.	1
31	83-9210	Cable - Ground	1
32	3234-5	Screw - Hex. Washer Hd.	1
33	3230-1	Screw - Carriage	1
34	83-7700	Bracket - Alternator	1
35	2412-39	Clamp - R	2
†36	185046210	Alternator	1
37	322-7	Screw - Cap Hex. Hd.	2
38	83-9020	Belt - V	1
†39	145306380	Fan	1
40	321-14	Screw - Cap Hex. Hd.	4
41	48-8010	Washer - Flat	4
42	83-7620	Spacer - Fan	1
43	83-7630	Pulley - Fan	1
44	83-7610	Hub - Fan	1
45	32120-10	Ring - Retaining	1
47	83-9880	Bracket - Fan Spindle	1
48	83-8410	Pulley - Engine	1
49	36-7290	Spindle - Fan	1
50	62-9510	Washer - Flat	1
51	83-8220	Bracket - Muffler	1
52	83-8500	Muffler	1
53	3234-28	Screw - Hex. Washer Hd.	1
54	83-7540	Engine Assembly	1
55	83-7590	Pulley - Engine	1

 †Obtain from your local Perkins Dealer.

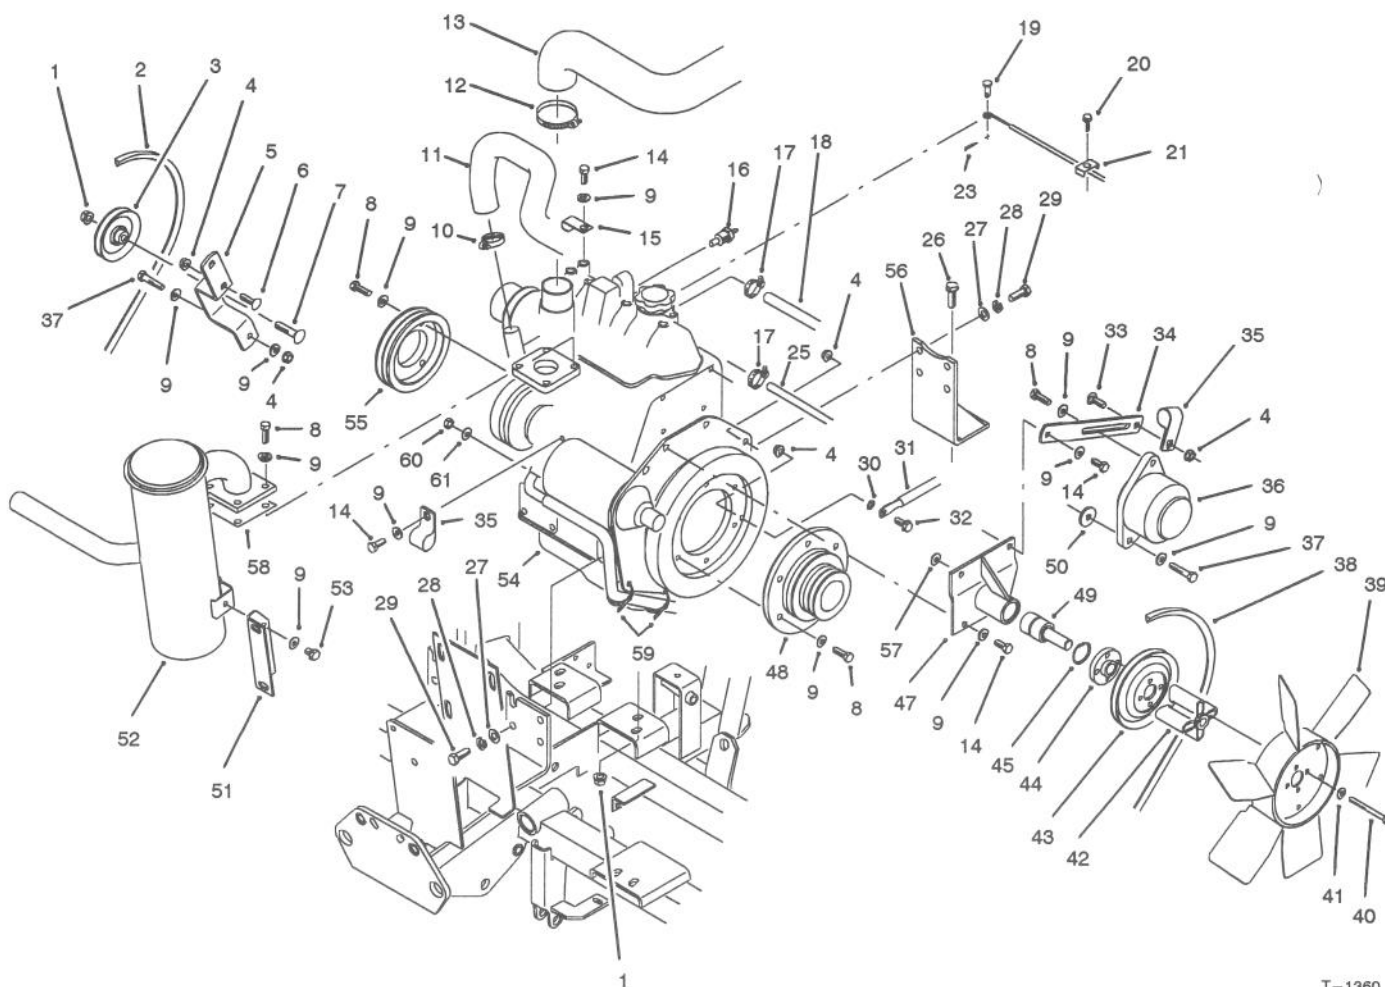


T-1360

ENGINE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
56	83-8470	Bracket - Engine Mount	2
57	65-8270	Washer	1
58	83-9910	Gasket - Muffler	1


Ref. No.	Part No.	Description	No. Used
59	3290-379	Tie - Cable	2
60	57-6390	Nut	1
61	42-9850	Washer	1

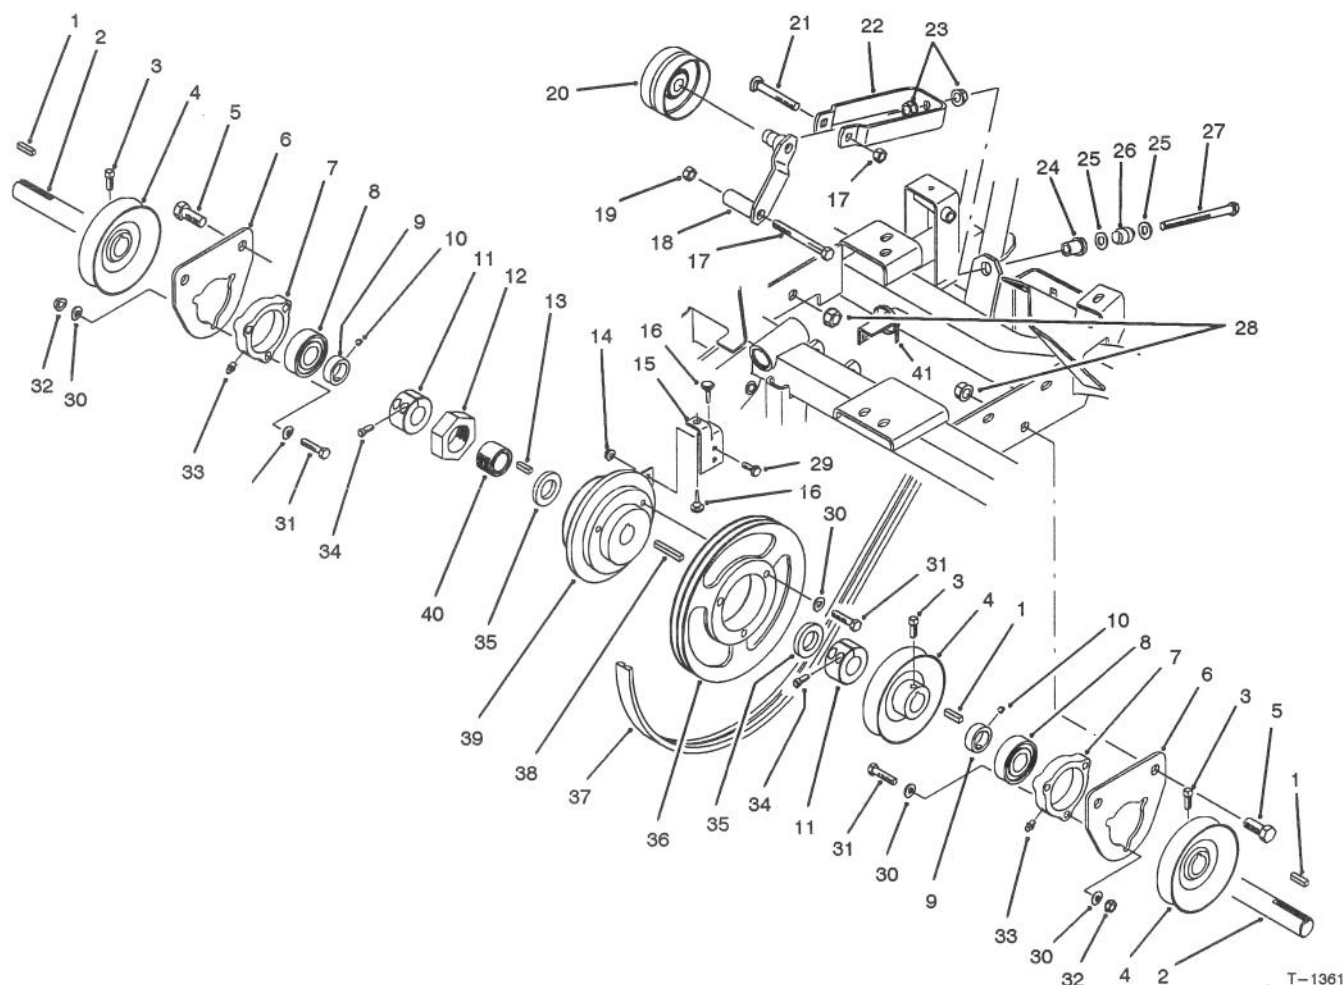 

REEL DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5-7280	Key - Square	3
2	83-7820	Shaft - Drive	1
3	3242-4	Screw - Square Hd. Set	6
4	61-0140	Pulley - Reel	3
5	3234-32	Screw - Cap Hex. Hd.	4
6	61-2350	Support - Bearing	2
7	76-2460	Bearing Assembly (Incl. Ref. #7-10 & 33)	2
8	251-337	Bearing - Ball	2
9	251-77	Collar - Locking	2
10	3245-35	Screw - Set	4
11	83-7790	Collar	2
12	3218-17	Nut - Jam	1
13	10-7070	Key - Square	1
14	32128-33	Nut - Flange Lock	2
15	83-7830	Retainer - Clutch	1
16	240-13	Bumper	2
17	3296-39	Nut - Lock	2
18	83-8620	Bracket - Idler	1
19	323-15	Screw - Cap Hex. Hd.	1
20	83-8400	Pulley - Idler	1

Ref. No.	Part No.	Description	No. Used
21	3231-31	Bolt - Carriage	1
22	83-8630	Yoke - Belt Tension	1
23	32128-43	Nut - Flange Lock	2
24	83-9810	Bushing - Flange	1
25	3256-24	Washer - Flat	2
26	83-9690	Spring - Compression	1
27	83-9680	Screw - Cap Hex. Hd.	1
28	3296-23	Nut - Flange Lock	4
29	3234-4	Screw - Hex. Flange Hd.	2
30	3256-23	Washer - Flat	15
31	322-17	Screw - Cap Hex. Hd.	9
32	3296-29	Nut - Flange Lock	6
33	302-5	Fitting - Grease	2
34	3273-18	Screw - Hex. Socket Hd.	4
35	83-7810	Spacer	2
36	83-8420	Pulley - Clutch	1
37	83-8490	Belt - Drive	1
38	83-8080	Key - Square	1
39	83-9140	Clutch Assembly	1
40	83-7800	Sleeve	1
41	3290-379	Tie - Cable	1

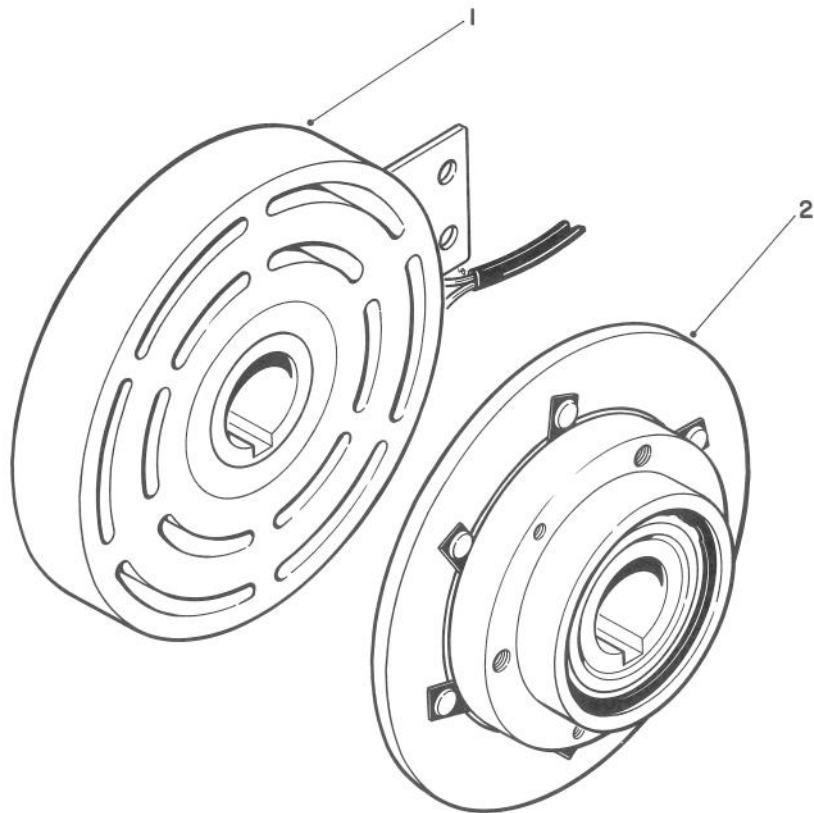 


T-1362

ELECTRIC CLUTCH ASSEMBLY NO. 83-9140

Ref. No.	Part No.	Description	No. Used
1	84-7770	Field & Rotor Assembly	1

Ref. No.	Part No.	Description	No. Used
2	84-7780	Armature Assembly	1

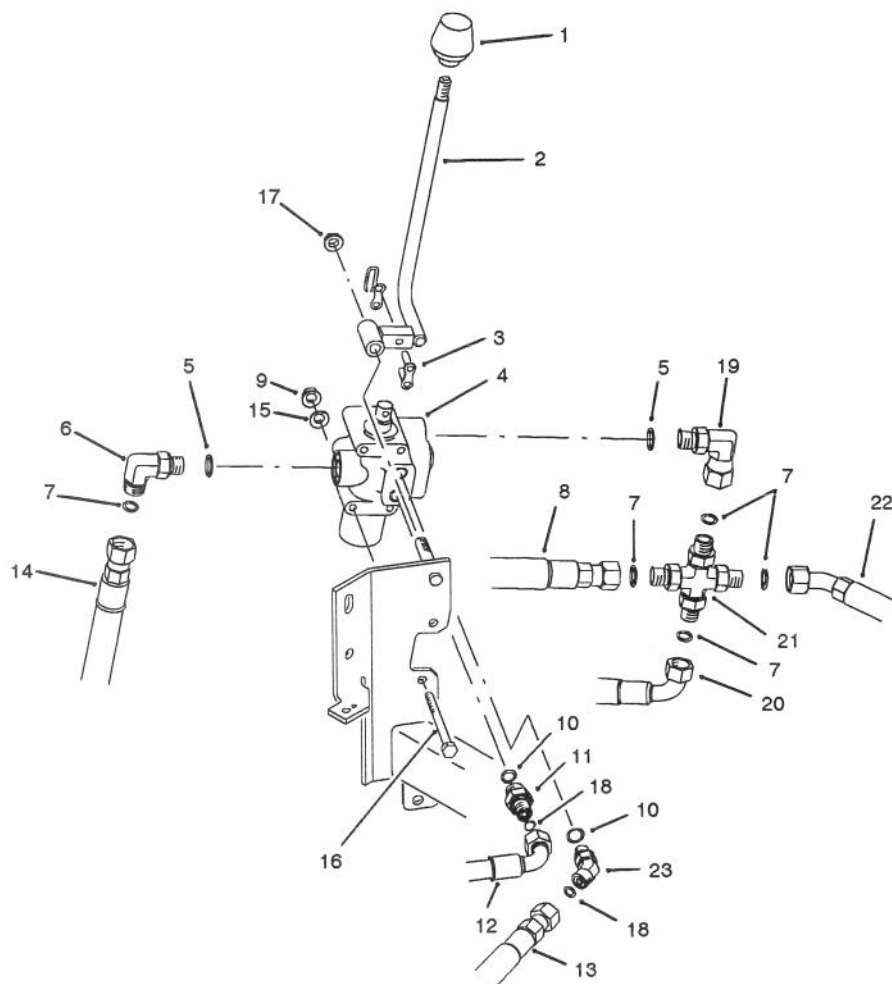 


T-1363

CUTTING UNIT LIFT VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-37	Knob	1
2	85-5160	Lever - Lift Valve	1
3	2710-16	Connecting Link Assembly	1
4	43-1950	Lift Valve Assembly	1
5	237-42	Seal - O-Ring	1
6	340-77	Fitting - Hydraulic 90° (Incl. Ref. #5 & 7)	1
7	237-22	Seal - O-Ring	5
8	83-9630	Hose - Hydraulic	1
9	3296-16	Nut - Flange Lock	2
10	237-78	Seal - O-Ring	2
11	340-92	Fitting - Hydraulic Straight (Incl. Ref. #10 & 18)	1
12	83-9620	Hose - Hydraulic	1

Ref. No.	Part No.	Description	No. Used
13	85-5810	Hose - Hydraulic	1
14	83-9640	Hose - Hydraulic	1
15	3256-22	Washer - Flat	2
16	321-23	Screw - Cap Hex. Hd.	2
17	3296-39	Nut - Flange Lock	1
18	237-21	Seal - O-Ring	2
19	340-110	Fitting - Hydraulic 90° (Incl. Ref. #5)	1
20	85-4990	Hose - Hydraulic	1
21	340-23	Fitting - Hydraulic Cross (Incl. Ref. #7)	1
22	85-5190	Hose - Hydraulic	1
23	340-103	Fitting - Hydraulic 45° (Incl. Ref. #10 & 18)	1

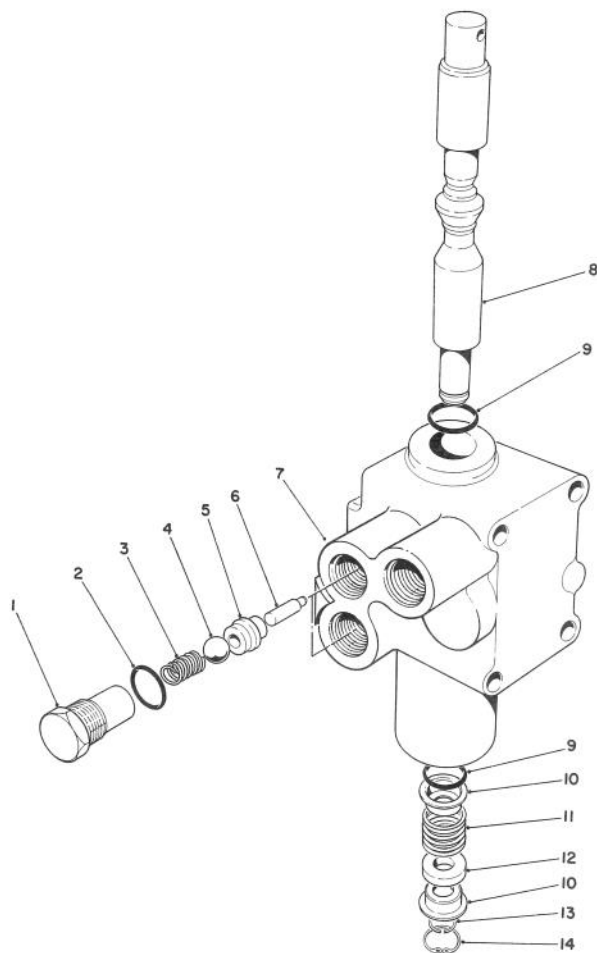 


T-0280

CONTROL VALVE ASSEMBLY NO. 43-1950

Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2
2	237-42	Seal - O-Ring	2
3	22-8340	Spring	2
4	22-8350	Ball	2
5	22-8370	Seat - Check Valve	2
6	22-8360	Pin - Cam	2
7		Body	1

Ref. No.	Part No.	Description	No. Used
8	22-8420	Spool	1
9	22-8500	Seal - O-Ring	2
10	22-8380	Retainer - Spring	2
11	22-8410	Spring	1
12	23-3030	Spacer	1
13	22-8480	Snap Ring - Spool	1
14	22-8490	Snap Ring	1

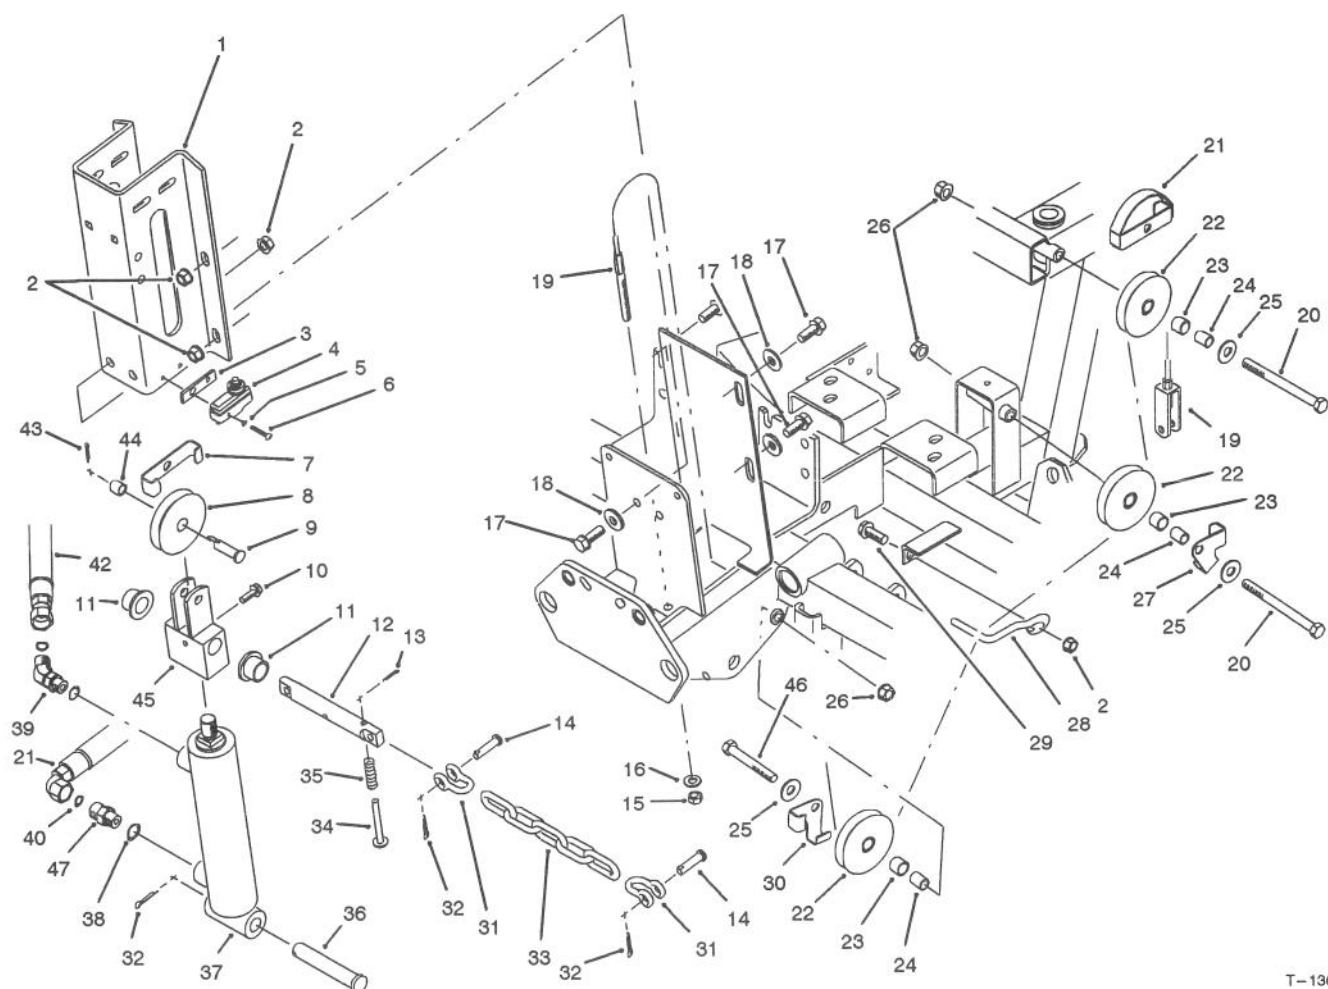 


T-1364

CUTTING UNIT LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-9760	Bracket - Cylinder Support	1
2	32128-43	Nut - Flange Lock	7
3	61-2990	Spacer - Switch	1
4	29-6163	Switch - Lift	1
5	3254-9	Washer - Lock Internal	2
6	3250-35	Screw - Pan Hd.	2
7	5-2655	Keeper - Cable	1
8	5-2653	Cable Pulley Assembly (Incl. Ref. #44)	1
9	283-42	Pin - Clevis	1
10	3234-4	Screw - Hex. Washer Hd.	1
11	84-8440	Bushing - Flange	2
12	72-4190	Pin - Cylinder Guide	1
13	3272-4	Pin - Cotter	1
14	283-6	Pin - Clevis	4
15	3296-4	Nut - Lock	1
16	3256-23	Washer - Flat	1
17	3234-25	Screw - Hex. Washer Hd.	5
18	80-6990	Washer	4
19	83-8590	Cable - Lift	1
20	323-17	Screw - Cap Hex. Hd.	2
21	61-3240	Keeper - Cable	1
22	61-3210	Cable Pulley Assembly (Incl. Ref. #23)	3
23	256-1	Bushing - Sleeve	3
24	61-3230	Spacer	3

Ref. No.	Part No.	Description	No. Used
25	3256-24	Washer - Flat	3
26	3296-39	Nut - Flange Lock	3
27	83-9130	Keeper - Cable	1
28	63-1400	Guide - Cable	1
29	3234-11	Screw - Hex. Washer Hd.	1
30	5-2656	Keeper - Cable	1
31	282-4	Clevis	4
32	3272-11	Pin - Cotter	5
33	61-3830	Chain - Lift	2
34	71-1380	Pin - Spring	1
35	71-1370	Spring - Compression	1
36	283-78	Pin - Clevis	1
37	76-0020	Hydraulic Cylinder Assembly	1
38	237-42	Seal - O-Ring	2
39	340-87	Fitting - Hydraulic 45° (Incl. Ref. #38 & 40)	1
40	237-22	Seal - O-Ring	2
41	85-5310	Hose - Hydraulic	1
42	83-9620	Hose - Hydraulic	1
43	3272-6	Pin - Cotter	1
44	61-2430	Hub - Lift	1
45	256-2	Bushing - Sleeve	1
46	323-13	Screw - Cap Hex. Hd.	1
47	340-2	Fitting - Hydraulic Straight (Incl. Ref. #38 & 40)	1

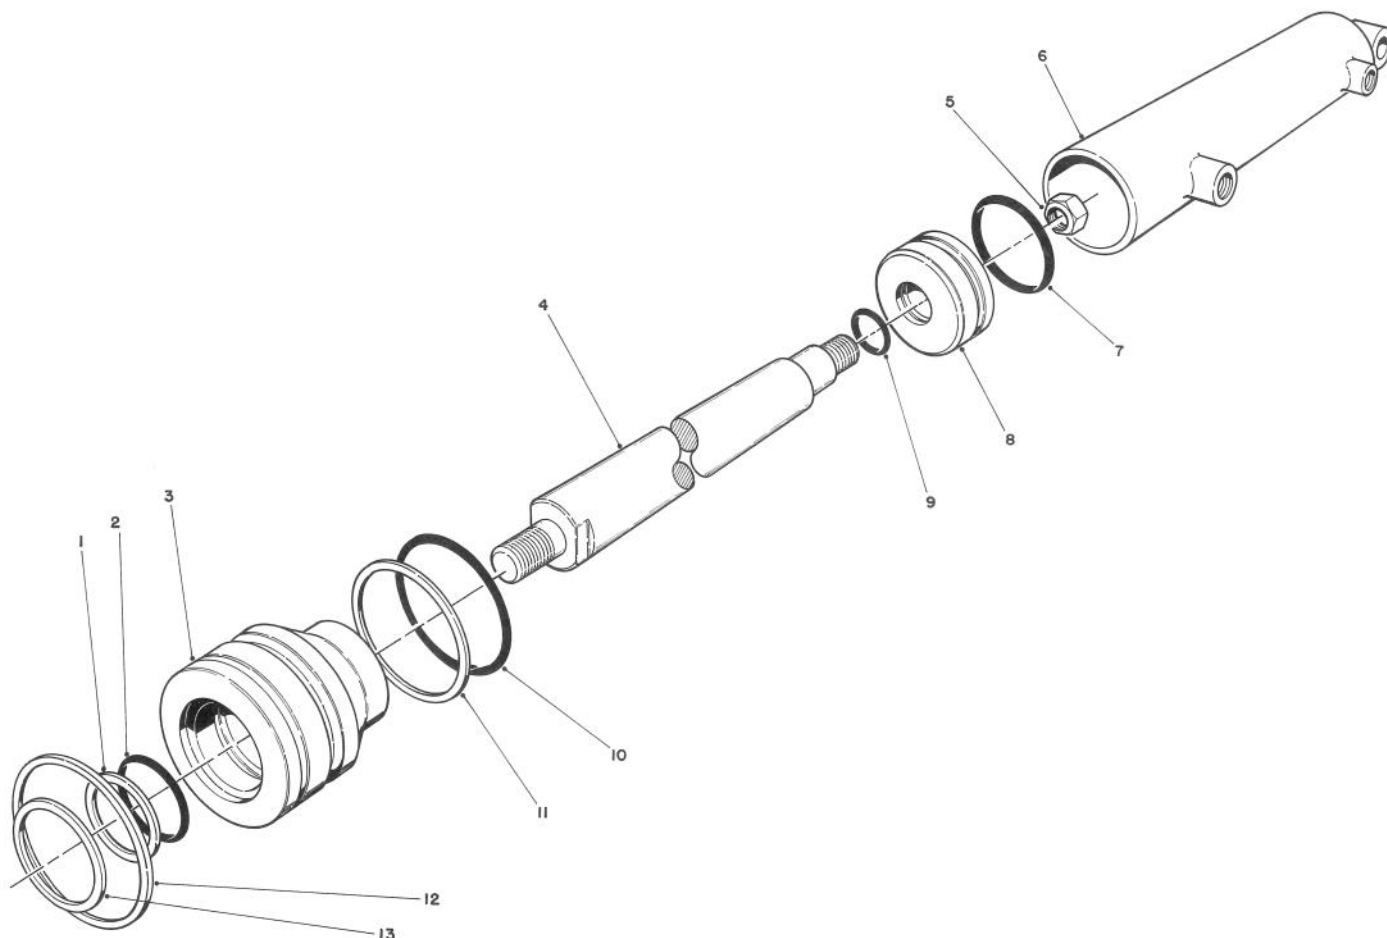 


T-0278

HYDRAULIC CYLINDER ASSEMBLY NO. 76-0020

Ref. No.	Part No.	Description	No. Used
1		Washer - Backup	1
2		Seal - O-Ring	1
3	76-0090	Head	1
4	76-2320	Shaft	1
5	76-2330	Nut - Lock	1
6		Barrel	1
7		Uniring	1
8	76-0040	Piston	1

Ref. No.	Part No.	Description	No. Used
9		Seal - O-Ring	1
10		Seal - O-Ring	1
11		Washer - Backup	1
12	76-0050	Ring - Retaining	1
13		Seal-Dust	1
*	76-0030	Repair Kit (Incl. Ref. #1-2, 7, 9-11 & 13)	1

 *Not Illustrated

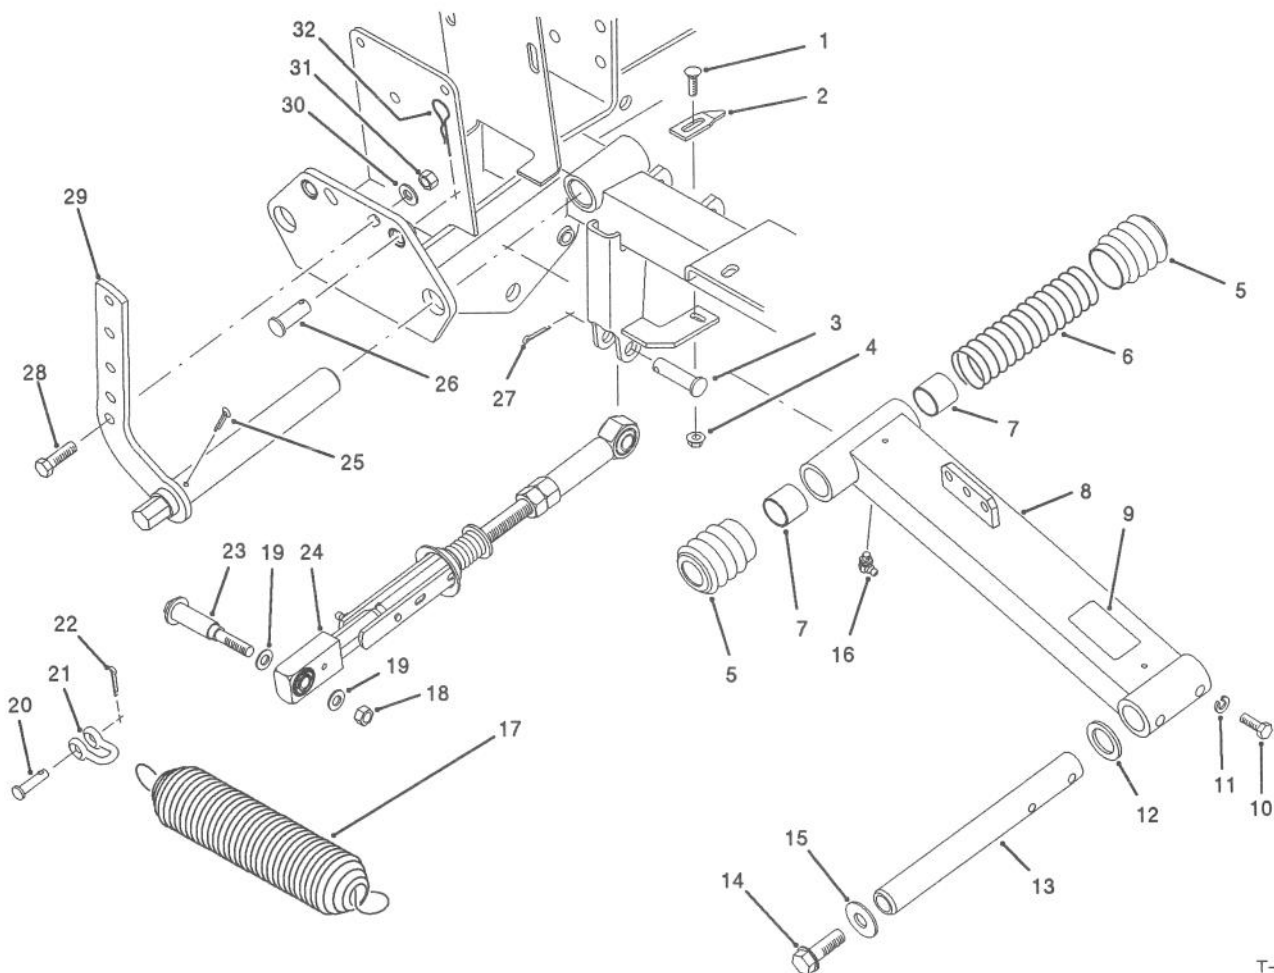

T-1365


FRONT CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3229-1	Bolt - Carriage	2
2	76-2430	Scraper - Pulley	2
3	283-40	Pin - Clevis	2
4	32128-33	Nut - Flange Lock	2
5	61-7250	Boot	4
6	61-3270	Spring - Compression	2
7	3-0348	Bushing - Sleeve	4
8	61-2880	Lift Arm Assembly L.H. (Incl. Ref. #7 & 16)	1
*	61-2830	Lift Arm Assembly R.H. (Incl. Ref. #7 & 16)	1
‡9	55-4300	Decal - Warning	2
10	322-4	Screw - Cap Hex. Hd.	4
11	3253-4	Washer - Lock	4
12	256-115	Washer - Thrust	2
13	61-3000	Rod - Pivot	2
14	3234-32	Screw - Hex. Flange Hd.	2
15	3256-6	Washer - Flat	2

Ref. No.	Part No.	Description	No. Used
16	302-60	Fitting - Grease	2
17	5-0743	Spring - Extension	2
18	3296-59	Nut - Lock	2
19	3256-45	Washer - Flat	4
20	283-6	Pin - Clevis	2
21	282-4	Clevis	2
22	3272-11	Pin - Cotter	2
23	76-0370	Bolt - Shoulder	2
24	83-7900	Belt Tensioner Assembly	2
25	3272-17	Pin - Cotter	2
26	283-8	Pin - Clevis	2
27	3272-13	Pin - Cotter	2
28	323-7	Screw - Cap Hex. Hd.	2
29	61-2930	Shaft - Pivot L.H.	1
*	61-2900	Shaft - Pivot R.H.	1
30	3256-24	Washer - Flat	2
31	3296-39	Nut - Lock	2
32	3290-322	Pin - Hair	2

*Not Illustrated

 ‡For different language versions of this part, see International Decal Cross Reference.

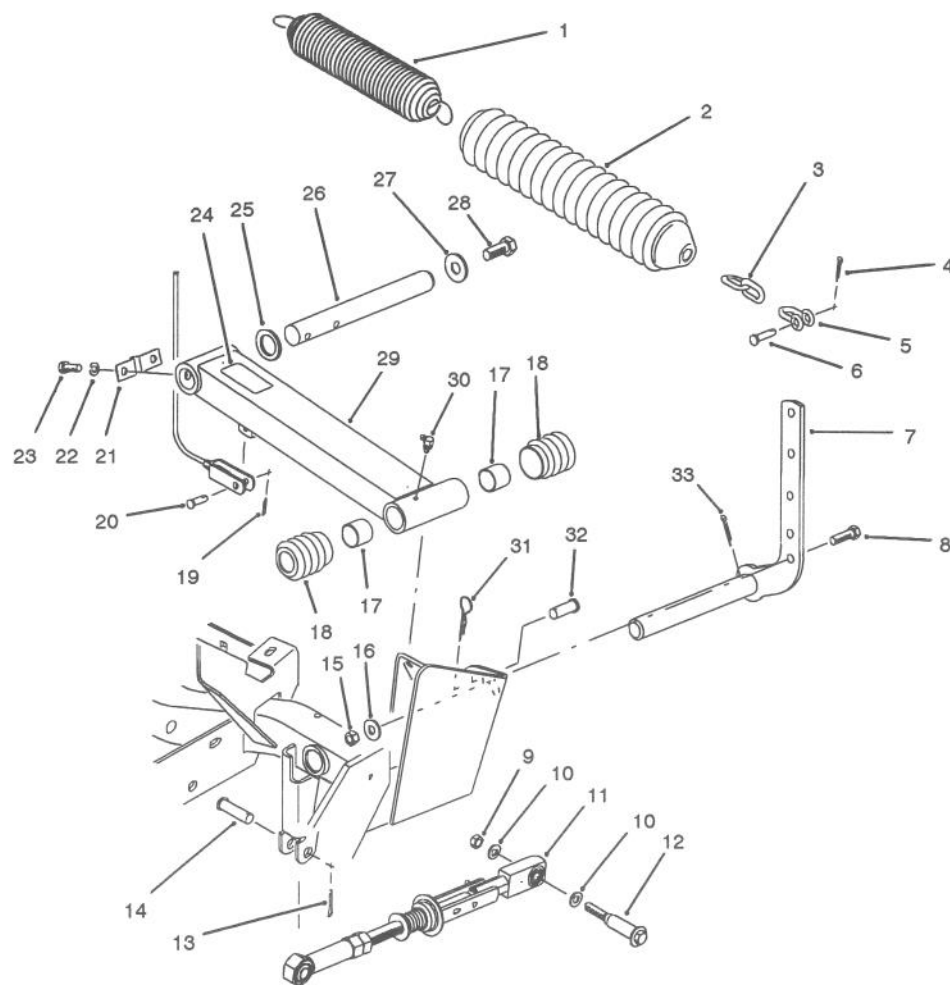


T-1366

REAR CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5-0743	Spring - Extension	1
2	62-7240	Cover - Spring	1
3	62-7300	Chain	1
4	3272-11	Pin - Cotter	1
5	282-4	Clevis	1
6	283-6	Pin - Clevis	1
7	61-2930	Shaft - Pivot	1
8	323-7	Screw - Cap Hex. Hd.	1
9	3296-59	Nut - Lock	2
10	3256-45	Washer - Flat	4
11	83-7900	Belt Tensioner Assembly	2
12	76-0370	Bolt - Shoulder	2
13	3272-13	Pin - Cotter	2
14	283-40	Pin - Clevis	2
15	3296-39	Nut - Lock	1
16	3256-24	Washer - Flat	1
17	3-0348	Bushing - Sleeve	2

Ref. No.	Part No.	Description	No. Used
18	62-7250	Boot	2
19	3272-6	Pin - Cotter	1
20	283-1	Pin - Clevis	1
21	61-3820	Retainer - Cable	1
22	3253-4	Washer - Lock	2
23	322-4	Screw - Cap Hex. Hd.	2
‡24	55-4300	Decal - Warning	1
25	256-115	Washer - Thrust	1
26	61-3000	Rod - Pivot	1
27	3256-6	Washer - Flat	1
28	3234-32	Screw - Cap Hex. Hd.	1
29	61-2890	Lift Arm Assembly (Incl. Ref. #17 & 30)	1
30	302-60	Fitting - Grease	1
31	3290-322	Pin - Hair	1
32	283-8	Pin - Clevis	1
33	3272-17	Pin - Cotter	1

 ‡For different language versions of this part, see International Decal Cross Reference.

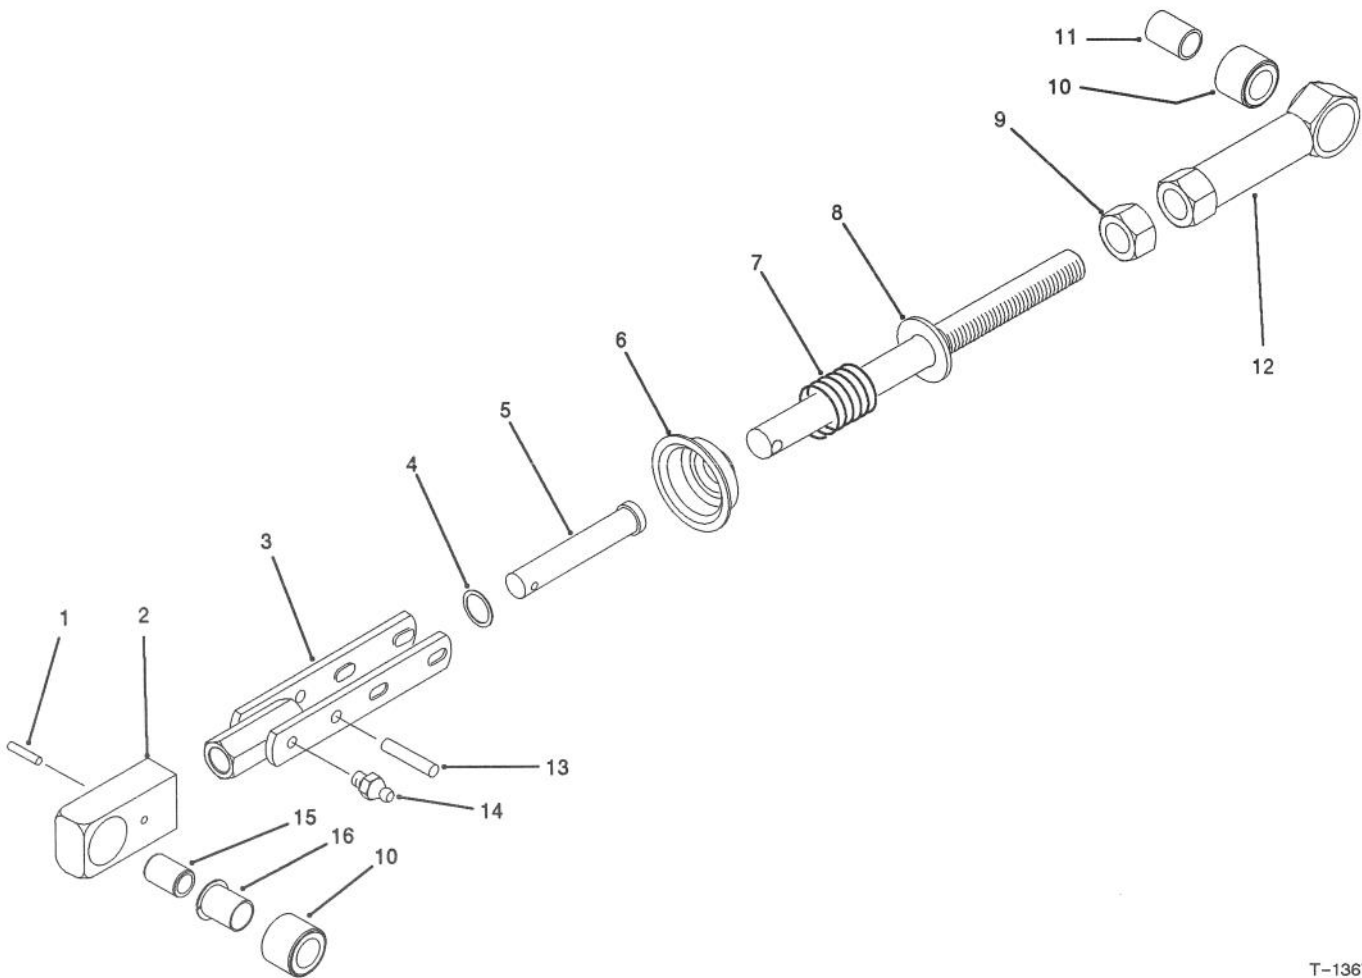


T-1367

BELT TENSIONER ASSEMBLY NO. 83-7900

Ref. No.	Part No.	Description	No. Used
1	32121-23	Pin - Roll	1
2	76-0350	Housing - Bushing	1
3	83-7930	Yoke	1
4	3256-54	Washer - Flat	1
5	283-55	Pin - Clevis	1
6	76-0360	Cup - Retainer	1
7	76-0410	Spring - Compression	1
8	83-7910	Rod	1

Ref. No.	Part No.	Description	No. Used
9	3218-6	Nut - Jam	1
10	56-9510	Bushing Assembly	2
11	256-173	Bushing - Sleeve	1
12	76-0300	Housing - Bushing	1
13	32121-9	Pin - Roll	1
14	302-5	Fitting - Grease	1
15	76-0390	Spacer	1
16	56-9520	Bushing - Nyliner	1

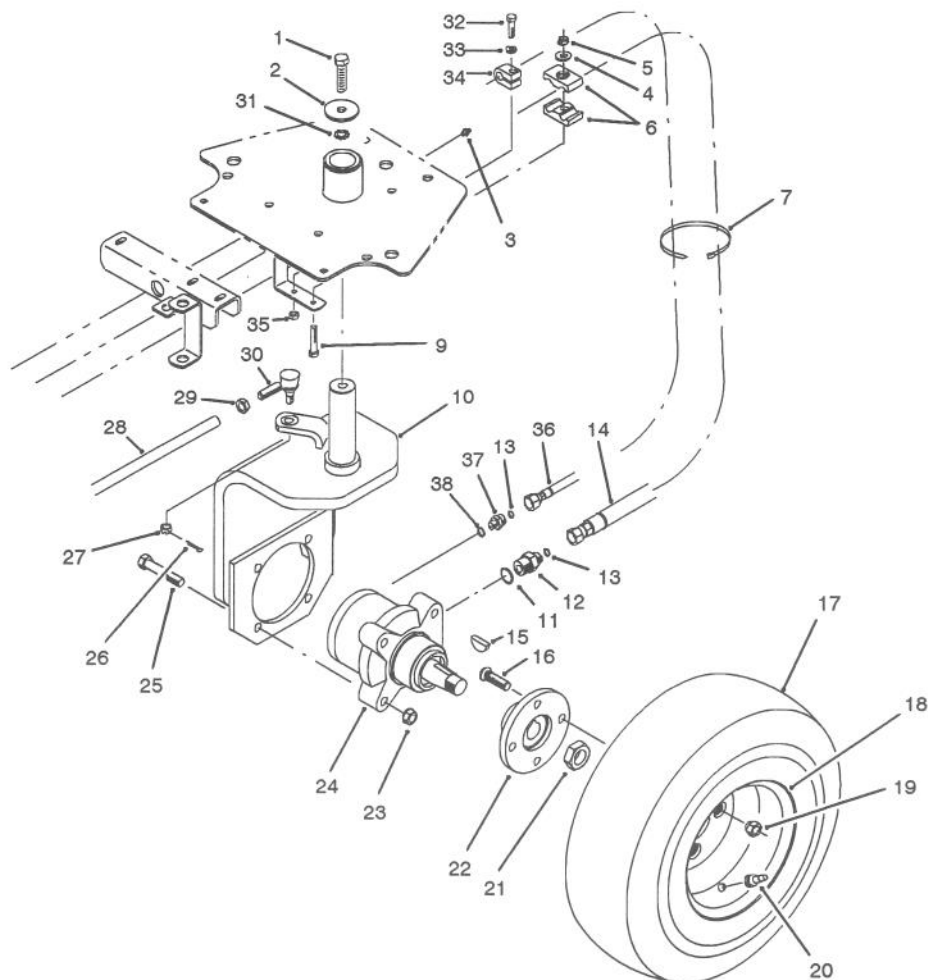 


T-1369

REAR WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	325-6	Screw - Cap Hex. Hd.	1
2	75-7730	Spacer	1
3	302-5	Fitting - Grease	1
4	3256-3	Washer - Flat	1
5	3296-29	Nut - Flange Lock	1
6	56-7976	Clamp - Hose	2
7	3290-379	Tie - Cable	1
9	322-9	Screw - Cap Hex. Hd.	1
10	83-7270	Fork - Caster	1
11	237-80	Seal - O-Ring	2
12	340-141	Fitting - Hydraulic Straight (Incl. Ref. #11 & 13)	2
13	237-22	Seal - O-Ring	3
14	80-4090	Hose - Hydraulic	2
15	65-4640	Key - Woodruff	1
16	10-6830	Stud - Drive	4
17	231-127	Tire	1
18	242-76	Rim	1
19	242-50	Nut - Lug	4
20	232-47	Valve - Stem	1
21	26-3790	Nut - Lock	1

Ref. No.	Part No.	Description	No. Used
22	10-6870	Hub - Wheel	1
23	3296-23	Nut - Flange Lock	4
24	66-5291	Hydraulic Motor Assembly (Incl. Ref. #15)	1
25	325-11	Screw - Cap Hex. Hd.	4
26	3272-6	Pin - Cotter	1
27	32136-4	Nut - Castle	1
28	61-2070	Rod - Steering	1
29	3220-12	Nut - Jam	1
30	21-0140	Rod End Assembly (Incl. Ref. #27)	1
31	3255-2	Washer - Lock	1
32	321-8	Screw - Cap Hex. Hd.	1
33	3256-22	Washer - Flat	1
34	85-5200	Clamp	1
35	3296-42	Nut - Lock	1
36	85-5190	Hose - Hydraulic	1
37	340-88	Fitting - Hydraulic Straight (Incl. Ref. #13 & 38)	1
38	237-78	Seal - O-Ring	1

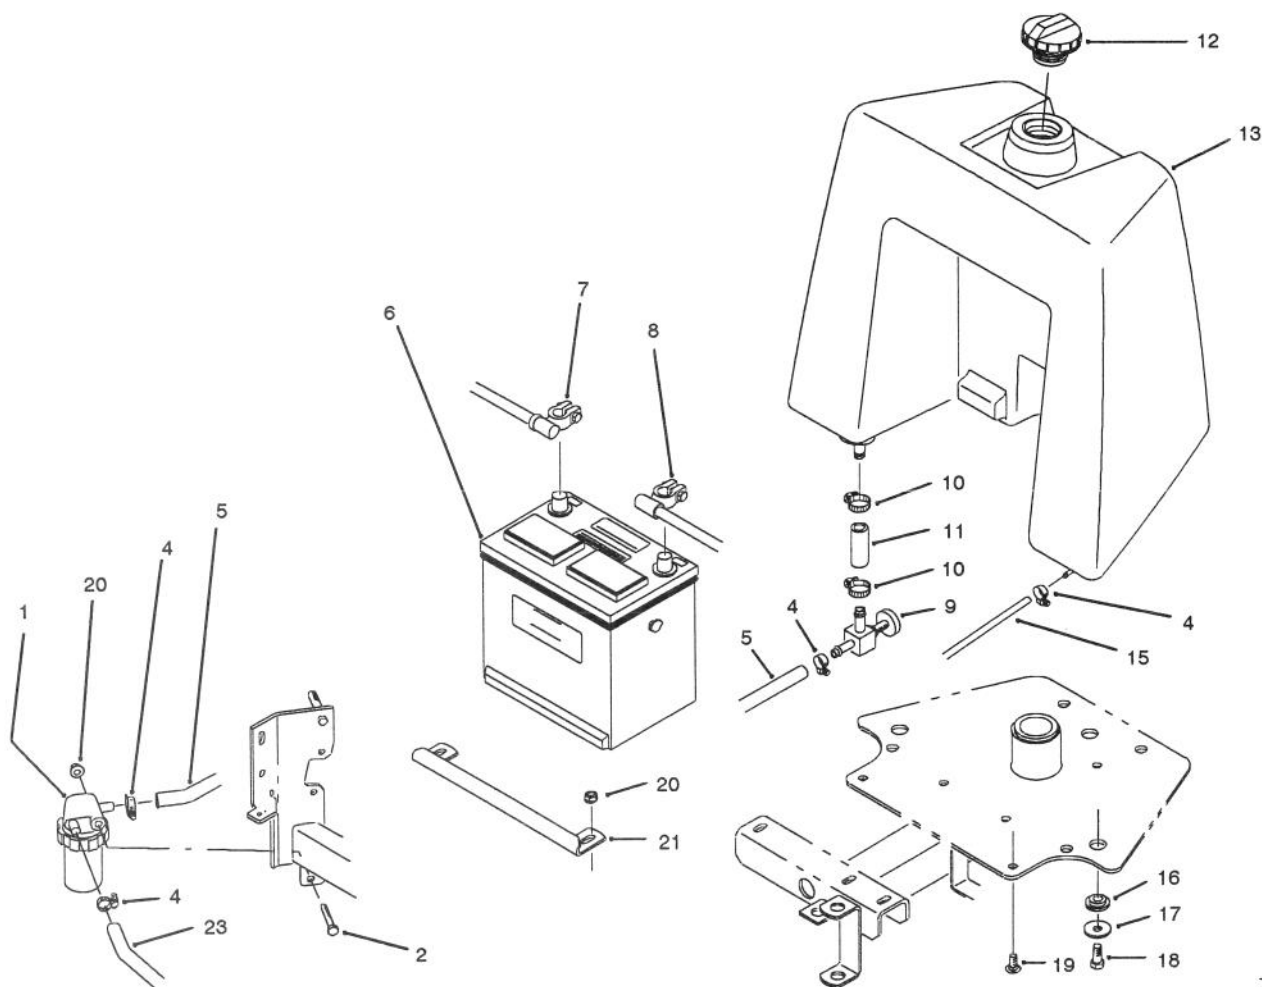 


T-1370

FUEL SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
†1	130366040	Filter – Fuel	1
2	321-12	Screw – Cap Hex. Hd.	1
4	2412-108	Clamp – Hose	4
5	63-7620	Hose – Fuel	1
6	83-9000	Battery	1
7	83-9220	Cable – Battery Pos.	1
8	83-9210	Cable – Battery Neg.	1
9	56-2520	Valve – Fuel Shut-Off	1
10	2412-36	Clamp – Hose	2
11	56-2230	Hose – Fuel	1

Ref. No.	Part No.	Description	No. Used
12	70-8621	Cap – Fuel Tank	1
13	83-8720	Tank – Fuel	1
15	75-4703	Hose – Fuel	1
16	240-11	Grommet	3
17	63-8410	Washer – Flat	3
18	323-5	Screw – Cap Hex. Hd.	3
19	3230-1	Screw – Carriage	2
20	32128-44	Nut – Flange Lock	3
21	83-9240	Hold-Down – Battery	1
23	23-2140	Hose – Fuel	1

 †Obtain from your local Perkins Dealer.

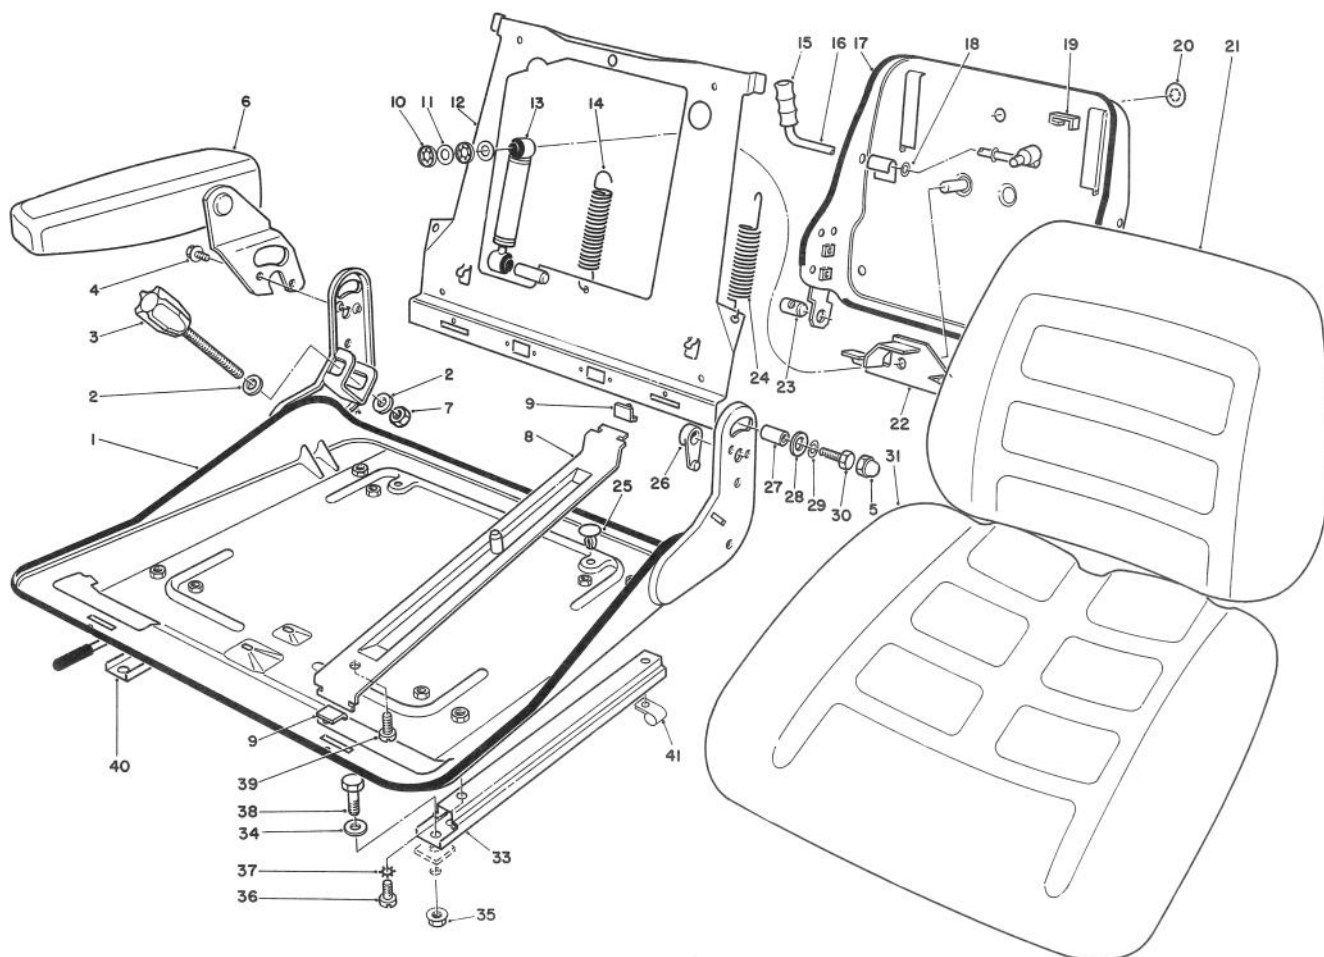


T-0281

SEAT ASSEMBLY MODEL NO. 30797 (Optional)

Ref. No.	Part No.	Description	No. Used
1	56-3810	Platform - Seat	1
2	56-3880	Washer - Flat	2
3	56-3870	Knob - Adjustment	1
4	56-3850	Screw - Hex. Hd. Machine	2
5	56-3960	Cover - Screw	4
6	55-4331	Arm Rest Assembly R.H.	1
	55-4330	Arm Rest Assembly L.H.	1
7	56-3890	Nut - Hex.	1
8	56-3970	Carrier - Seat	2
9	56-3980	Clip - Rail	4
10	56-4080	Clamp - Axle	2
11	39-9500	Washer - Flat	2
12	56-4040	Plate - Back	1
13	62-7670	Shock Absorber - Seat	1
14	56-4050	Spring - Extension	1
15		Grip - Cover	1
16	56-4150	Lever - Handle (Incl. Ref. #15)	1
17	56-3820	Cover - Seat Sack	1
18	56-4160	Washer - Flat	2
19	56-4130	Bumper	2
20	56-4120	Cover	1
21	56-3800	Cushion - Seat Back	1
22	56-4100	Bracket - Lever	1

Ref. No.	Part No.	Description	No. Used
23	56-4170	Pin - Clevis	1
24	56-4060	Spring - Extension	1
25	56-4190	Cap - Seat	2
26	56-3900	Spacer - Arm L.H.	1
	56-3910	Spacer - Arm R.H.	1
27	56-3920	Bushing - Sleeve	4
28	56-3930	Washer - Flat	4
29	56-3940	Washer - Lock	4
30	56-3950	Screw - Cap Hex. Hd.	4
31	76-2240	Cushion - Seat Bottom	1
32	55-8380	Seat Wire Assembly	1
33	40-3820	Bottom Rail Assembly L.H.	1
34	3256-23	Washer - Flat	4
35	32128-25	Nut - Flange Lock	4
36	56-4020	Screw - Machine	4
37	56-4030	Washer - Lock	4
38	322-3	Screw - Cap Hex. Hd.	4
39	56-3990	Screw - Machine	2
40	40-3790	Bottom Rail Assembly R.H.	1
41	2412-67	Clamp - R	1
*	76-2230	Seat Assembly (Incl. Ref. #1-3, 5, 7-31, 33, 36-37 & 39-40)	1

 *Not Illustrated

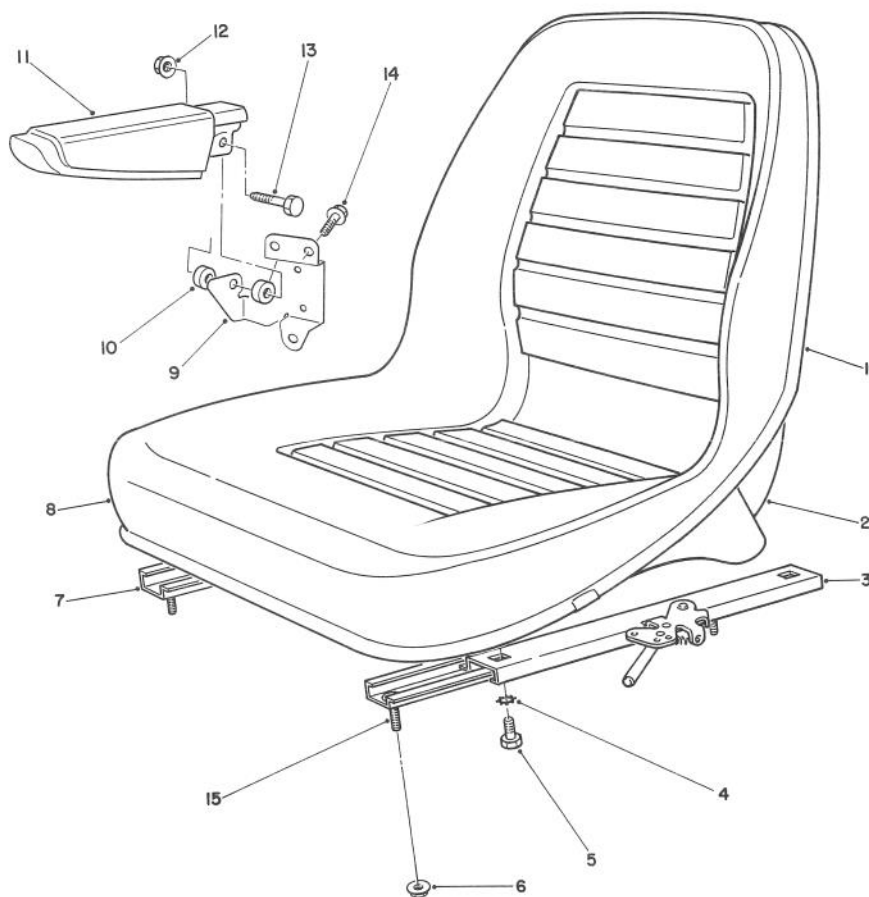


T-1070

SEAT ASSEMBLY MODEL NO. 30796 (Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Trim	1	†9	69-0770	Bracket - Arm R.H.	1
2		Shell	1		69-0760	Bracket - Arm L.H.	1
3	80-4260	Adjuster - L.H.	1	†10	69-1260	Spacer	4
4	3255-8	Washer - Ext. Tooth Lock	4	†11	69-1180	Armrest	2
5	322-2	Capscrew - Hex. Hd.	4	†12	32128-19	Nut - Flange	2
6	32128-25	Nut - Hex. Flange	4	†13	323-9	Screw - Cap Hex. Hd.	2
7	80-4250	Adjuster - R.H.	1	†14	3234-23	Screw - Hex. Flange	6
8		Cushion	1	15	3230-1	Bolt - Carriage	4
*	66-5400	Seat Assembly (Inc. Ref. #1, 2 & 8)	1				

*Not Illustrated

 †Optional item

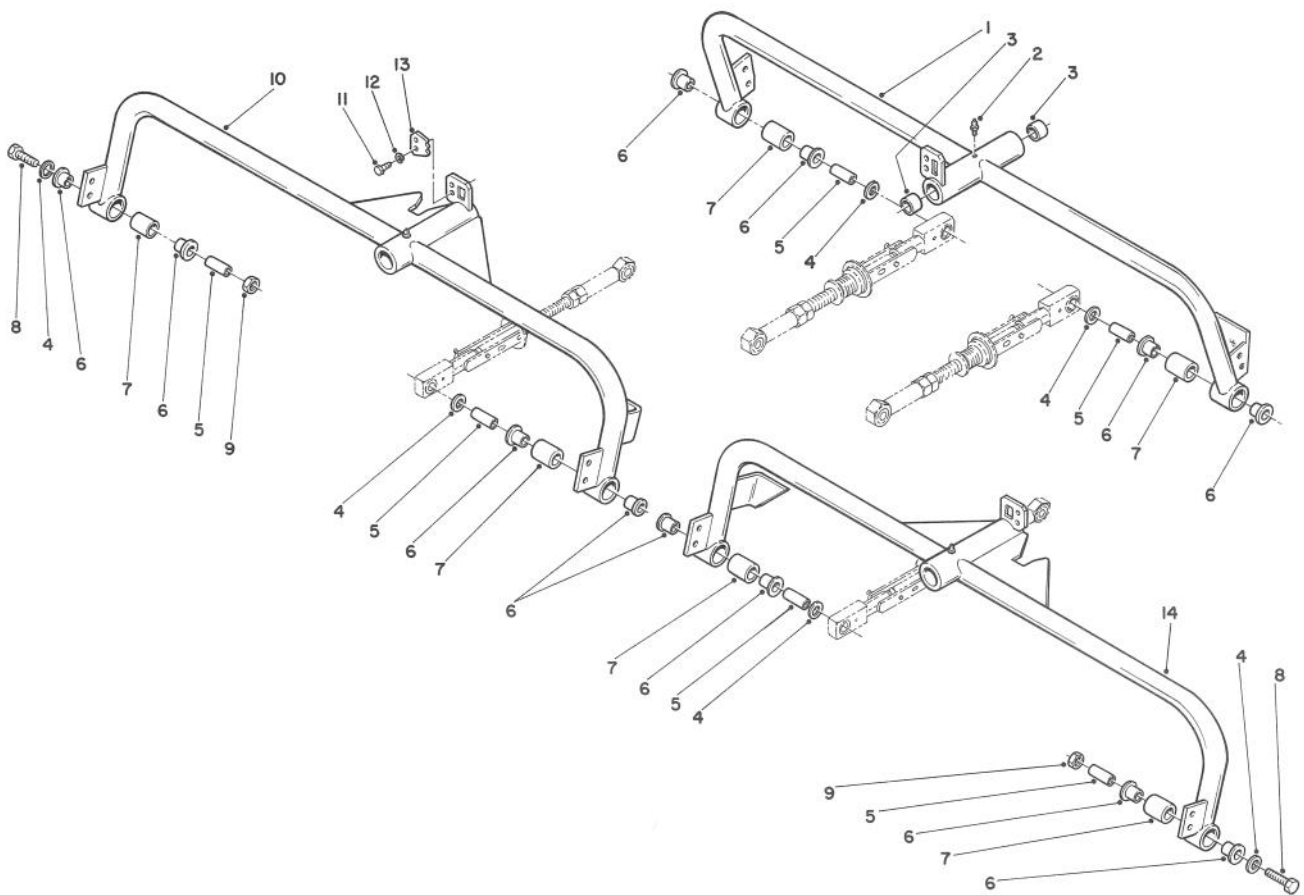


T-1371

CUTTING UNIT CARRIER FRAME ASSEMBLY (Floating Suspension For 8 & 11 Blade Cutting Units)

Ref. No.	Part No.	Description	No. Used
1	61-0870	Rear Carrier Frame Assy. (Incl. Ref. #2, 3 & 7)	1
2	302-5	Fitting - Grease	3
3	3-0348	Bushing	6
4	3256-26	Washer - Flat	6
5	61-1370	Spacer	6
6	256-285	Bushing - Flange	12
7	61-0710	Bushing Assembly	6
8	325-10	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
9	3296-59	Nut - Lock	2
10	61-0860	Right Carrier Frame Assy. (Incl. Ref. #2, 3 & 7)	1
11	321-2	Screw - Cap Hex. Hd.	6
12	3253-3	Washer - Lock	6
13	61-3600	Tab - Lift	3
14	61-0880	Left Carrier Frame Assy. (Incl. Ref. #2, 3 & 7)	1

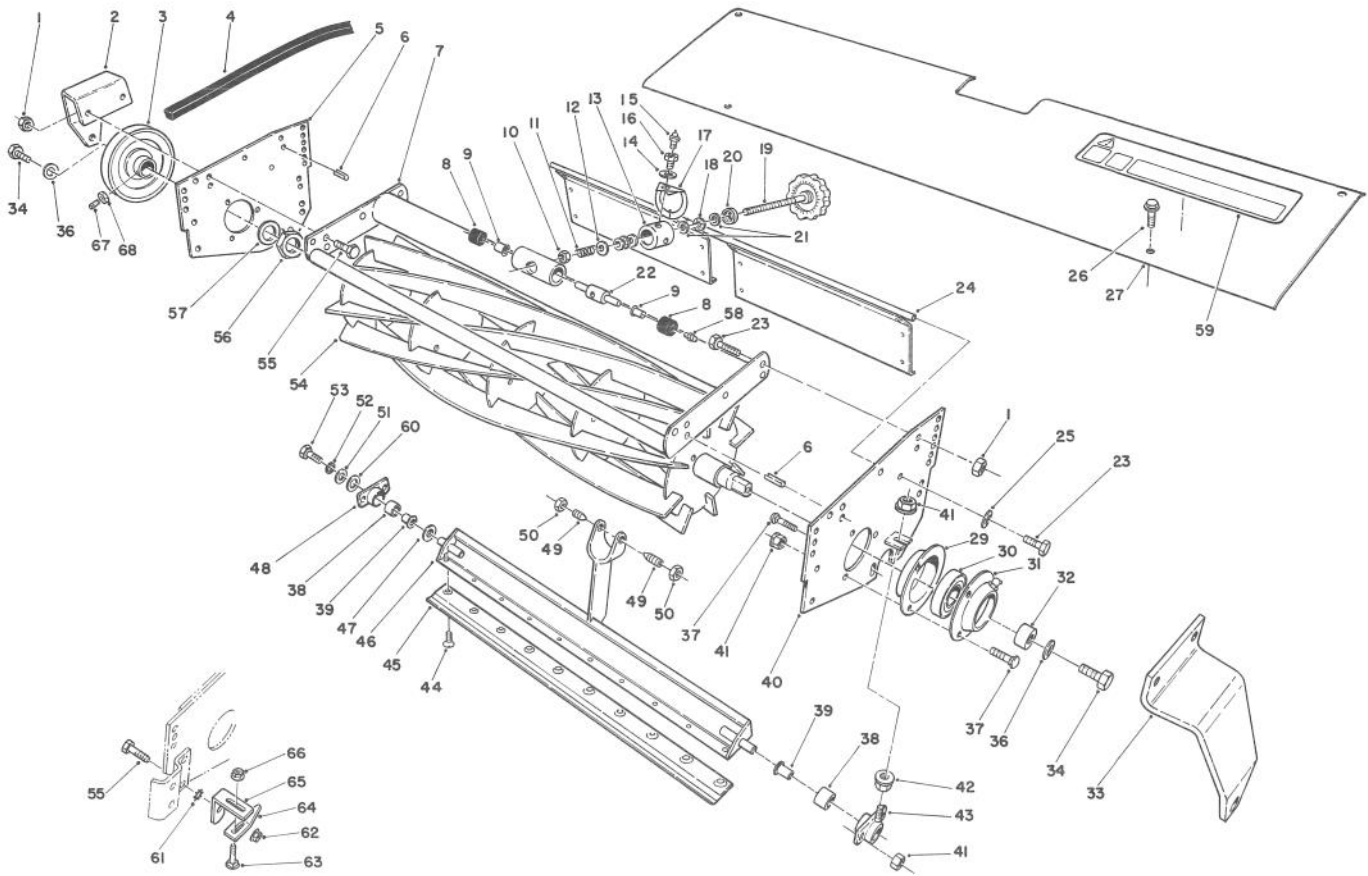 

T-0285


8 & 11 BLADE CUTTING UNIT REEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	8
2	61-0900	Bracket - Tensioner/Carrier (Use 2 Brackets on Rear Cutting Unit)	1
3	80-4270	Pulley - Reel	1
4	61-3380	V-Belt - Reel	1
5	61-1320	Sideplate	1
6	32121-36	Pin - Roll	4
7	61-0930	Frame - Reel	1
8	62-5510	Rubber Bushing Assembly	2
9	52-2890	Bushing - Flanged (Nylon)	2
10	3296-62	Nut - Lock	1
11	57-5270	Spring - Compression	1
12	29-8870	Washer	1
13	52-2980	Pivot - Single Point Adjust	1
14	3256-25	Washer - Flat	1
15	302-5	Fitting - Grease	1
16	52-2990	Capscrew - Spring Retainer	1
17	52-3000	Arm - Spring	1
18	257-6	Bearing - Thrust	2
19	61-1070	Handle - Assembly	1
20	253-84	Seal	1
21	257-5	Washer - Thrust	4
22	57-5260	Pin - S.P.A.	1
23	323-6	Screw - Cap Hex. Hd.	6
24	61-1130	Rear Grass Guard	1

Ref. No.	Part No.	Description	No. Used
25	3253-5	Washer - Lock	2
26	32144-10	Screw - Hex. Washer Hd.	4
27	61-0560	Shield - Top	1
29	76-2500	Flange - Bearing	2
30	251-331	Bearing	2
31	76-2490	Flange - Bearing (Lube)	2
*	302-11	Fitting - Grease	2
32	61-0500	Spacer - Reel	1
33	61-0890	Bracket - Carrier	1
34	3211-4	Screw - Cap Hex. Hd.	2
36	67-9760	Washer	2
37	3230-20	Bolt - Carriage	10
38	56-9510	Bushing Assy.	2
39	56-9520	Bushing - Flanged	2
40	61-0940	Sideplate - Adjust	1
41	3296-29	Nut - Lock	11
42	3217-6	Nut	1
43	61-0970	Housing - Bedbar Adj.	1
44	57-4910	Screw - Special	10
45	62-5180	Bedknife - 7 In. Reel	1
46	61-1210	Bedbar	1
47	61-1950	Washer - Bedbar	1
48	61-1010	Bedbar Housing	1
49	57-5190	Screw - Adjustment	2
50	3218-18	Nut - Jam	2
51	3256-56	Washer - Flat	1

NOTE: Front Left Cutting Unit Shown

 *Not Illustrated

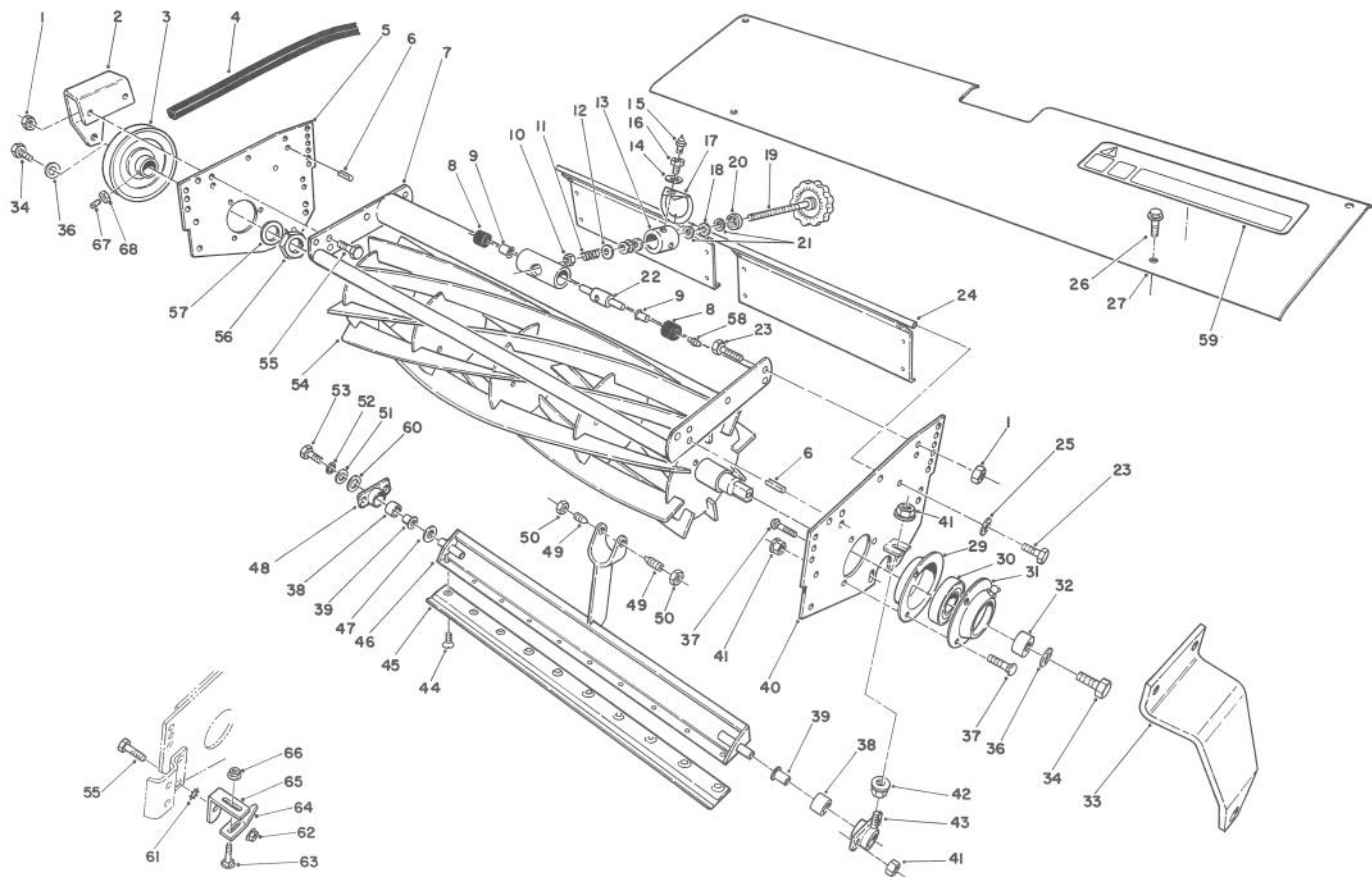

T-0285

8 & 11 BLADE CUTTING UNIT ASSEMBLY (Continued)


Ref. No.	Part No.	Description	No. Used
52	3253-4	Washer - Lock	1
53	322-3	Screw - Cap Hex. Hd.	1
54	12-7099	Reel Assembly - 8 Blade (Left C.U.)	1
*	12-7089	Reel Assembly - 8 Blade (Right & Center C.U.)	1
*	13-1709	Reel Assembly - 11 Blade (Left C.U.)	1
*	13-1699	Reel Assembly - 11 Blade (Right & Center C.U.)	1
55	323-7	Screw - Cap Hex. Hd.	5
56	67-5840	Nut - Jam	1
57	27-1850	Washer	1
58	302-18	Fitting - Grease	1

Ref. No.	Part No.	Description	No. Used
‡59	62-5070	Decal - Warning	1
60	62-7120	Spacer	1
61	3255-2	Washer - Lock E.T.L.W.	1
62	32128-21	Nut - Flange Lock	1
63	3229-11	Bolt - Carriage	1
64	76-2430	Bracket - Debris Cleaner	1
65	76-2440	Support - Debris Cleaner	1
66	32128-10	Nut - Flange Lock	1
67	3243-6	Screw - Set Sq. Hd.	1
68	3218-3	Nut - Jam	1
*	13-3649	Overhaul Kit (Incl. Ref. #8, 9, 18, 20, 30, 38, 39 & 44)	1

NOTE: Front Left Cutting Unit Shown

*Not Illustrated

 ‡For different language versions of this part, see International Decal Cross Reference.

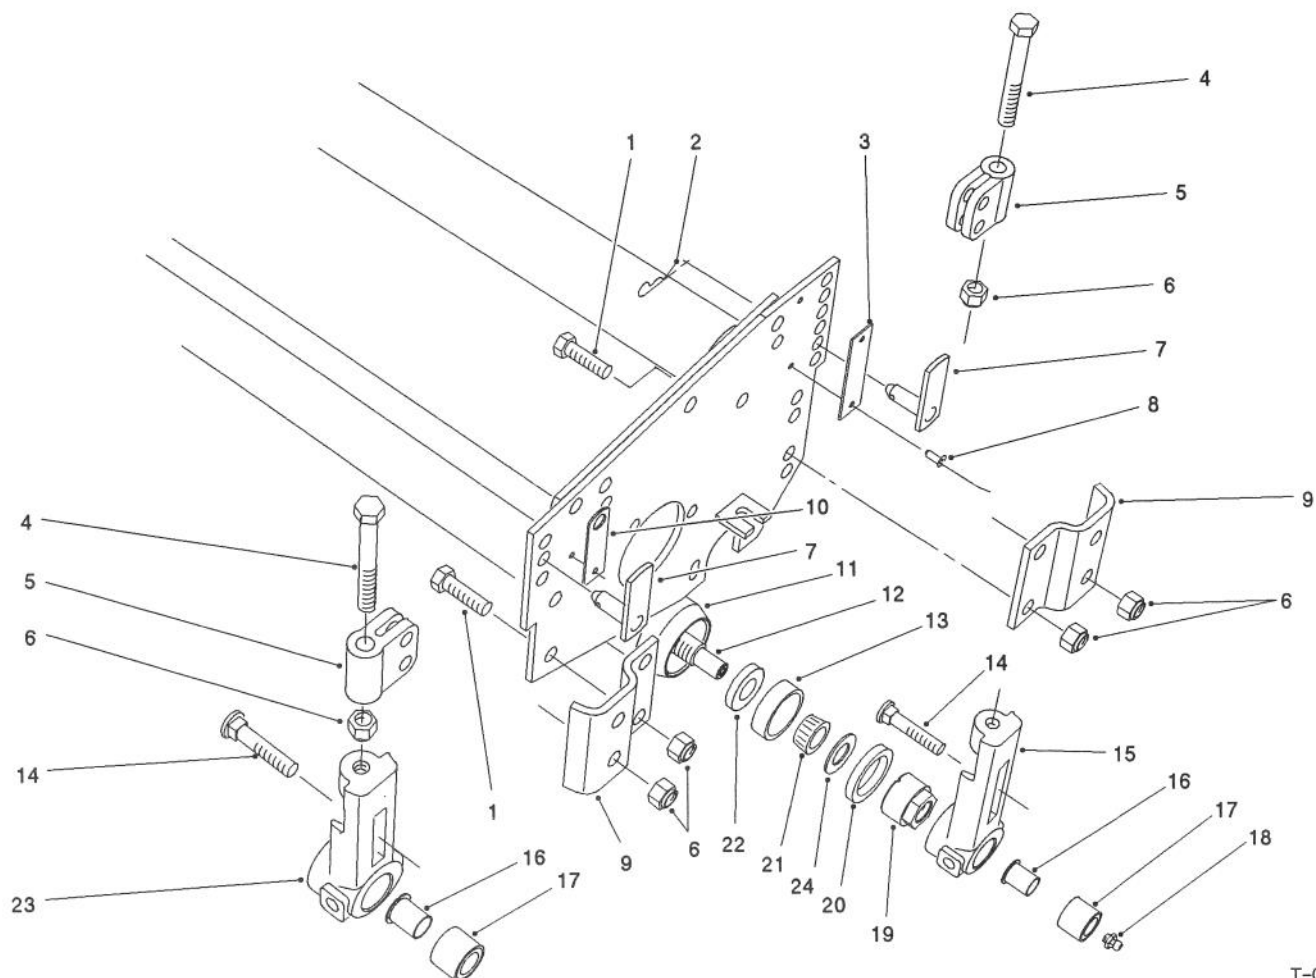

T-0286


8 & 11 BLADE CUTTING UNIT ROLLER ASSEMBLY (Floating Suspension)

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw - Cap Hex Hd.	8
2	3290-467	Cotter - Hairpin	4
3	61-3800	Plate - HOC Rear	2
4	61-0790	Screw - Cap Hex Hd.	4
5	61-0420	Support - HOC	4
6	3296-39	Nut - Lock	16
7	71-3690	Pin - HOC	4
8	3290-55	Rivet - Pop	6
9	61-0910	Bracket - Angle	4
10	61-3790	Plate - HOC Front	2
11	61-0380	Cap - Roller	2
12	61-0400	Shaft - Roller	1
13	254-79	Cup - Bearing	2
14	3231-2	Bolt - Carriage	4

Ref. No.	Part No.	Description	No. Used
15	61-0430	Bracket - Rear	2
16	56-9520	Bushing - Flanged	2
17	56-9510	Bushing	4
18	302-5	Fitting - Grease	2
19	71-3590	Nut - Adjustment	2
20	253-153	Seal - Outer	2
21	254-78	Cone - Bearing	2
22	253-152	Seal - Inner	2
23	61-0440	Bracket - Front	2
24	62-7660	Washer - Shim (not used on all full roller assemblies)	2
*	61-0410	Full Roller Assembly (Incl. Ref. #11-13, 18-22 & 24)	1

NOTE: Front Left Cutting Unit Shown

 *Not Illustrated

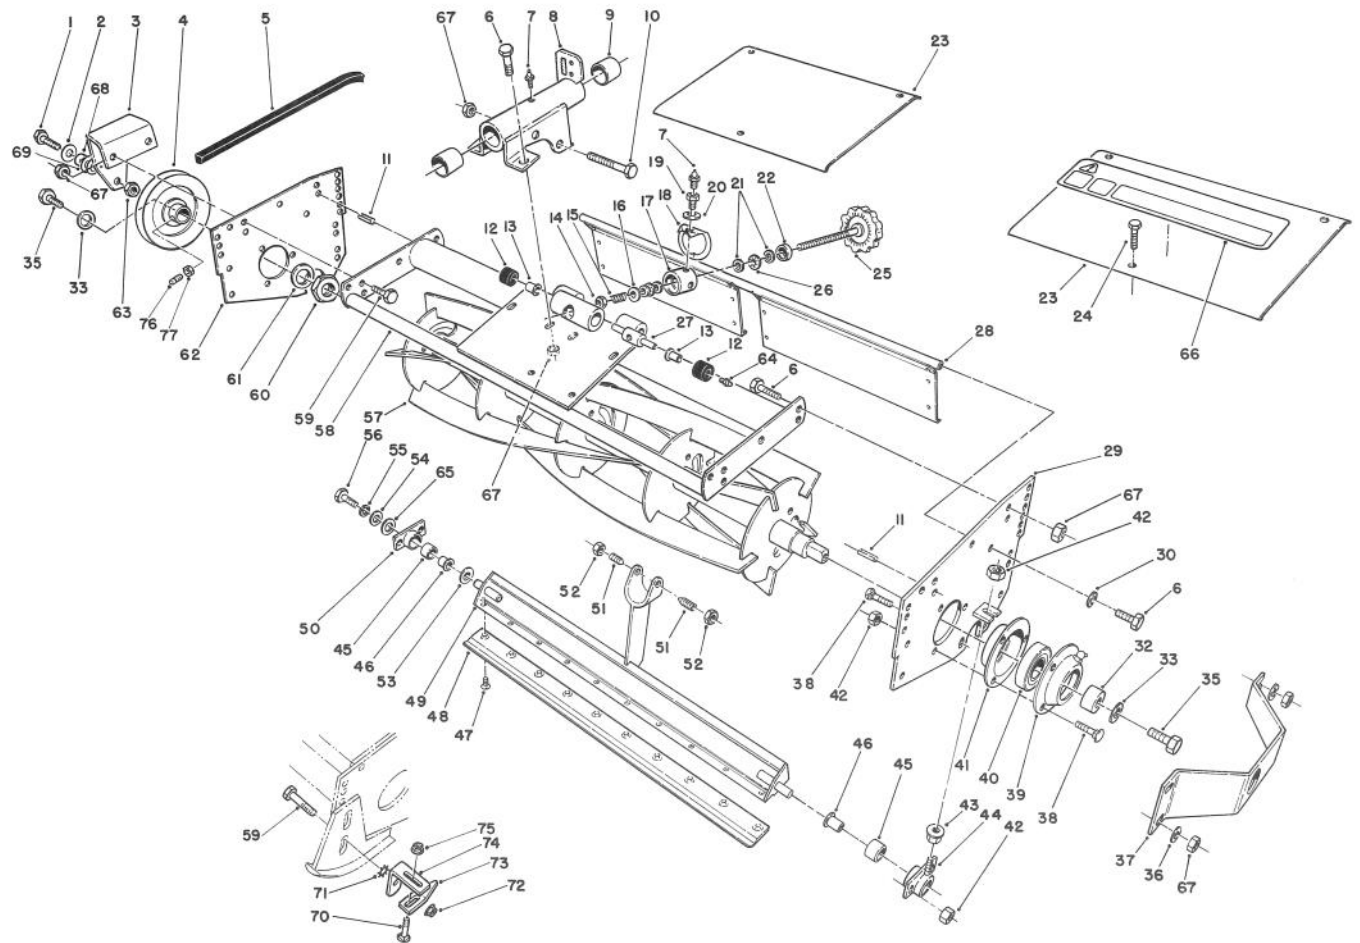

T-0283


5 BLADE CUTTING UNIT REEL ASSEMBLY (Fixed Suspension)

Ref. No.	Part No.	Description	No. Used
1	323-9	Screw - Cap Hex. Hd. (Use 2 capscrews on rear cutting unit)	1
2	3256-4	Washer - Flat (Use 2 washers on rear cutting unit)	1
3	61-0900	Bracket - Tensioner (Use 2 brackets on rear cutting unit)	1
4	80-4280	Pulley - Reel, 5 Blade	1
5	61-3380	V-Belt	1
6	323-6	Screw - Cap Hex. Hd.	8
7	302-5	Fitting - Grease	2
8	61-1050	Front Support - L.H. (Incl. Ref. #7 & 9)	1
*	61-3660	Front Support - R.H. (Incl. Ref. #7 & 9)	1
*	61-0670	Rear Support (Incl. Ref. #7 & 9)	1
9	3-0348	Bushing	2
10	323-12	Screw - Cap Hex. Hd.	1
11	32121-36	Pin-Roll	4
12	62-5510	Rubber Bushing Assembly	2
13	52-2890	Bushing - Flanged Nylon	2
14	3296-62	Nut - Lock	1
15	57-5270	Spring - Compression	1
16	29-8870	Washer - Flat	1

Ref. No.	Part No.	Description	No. Used
17	52-2980	Pivot - Single Point Adjust	1
18	52-3000	Arm - Spring	1
19	52-2990	Capscrew - Spring Retainer	1
20	3256-25	Washer - Flat	1
21	257-5	Washer - Thrust	4
22	253-84	Seal	1
23	61-0550	Shield - Top	2
24	32144-10	Screw - Cap Hex. Hd.	6
25	61-1070	Handle - Assembly	1
26	257-6	Bearing - Thrust	2
27	57-5260	Pin - S.P.A.	1
28	61-1130	Rear Grass Guard	1
29	61-0940	Sideplate - Adjust	1
30	3253-5	Washer - Lock	2
32	61-0500	Spacer - Bearing	1
33	67-9760	Washer - Flat	2
35	3211-4	Screw - Cap Hex. Hd.	2
36	3256-3	Washer - Flat	5
37	61-0610	Guard - Side (Used on front units only)	1
38	3230-20	Bolt - Carriage	10
39	76-2490	Flange - Bearing (Lube)	2
*	302-11	Fitting - Grease	2
40	251-331	Bearing	2
41	76-2500	Flange - Bearing	2
42	3296-29	Nut - Lock	11
43	3217-6	Nut	1

NOTE: Front Left Cutting Unit Shown

 *Not Illustrated

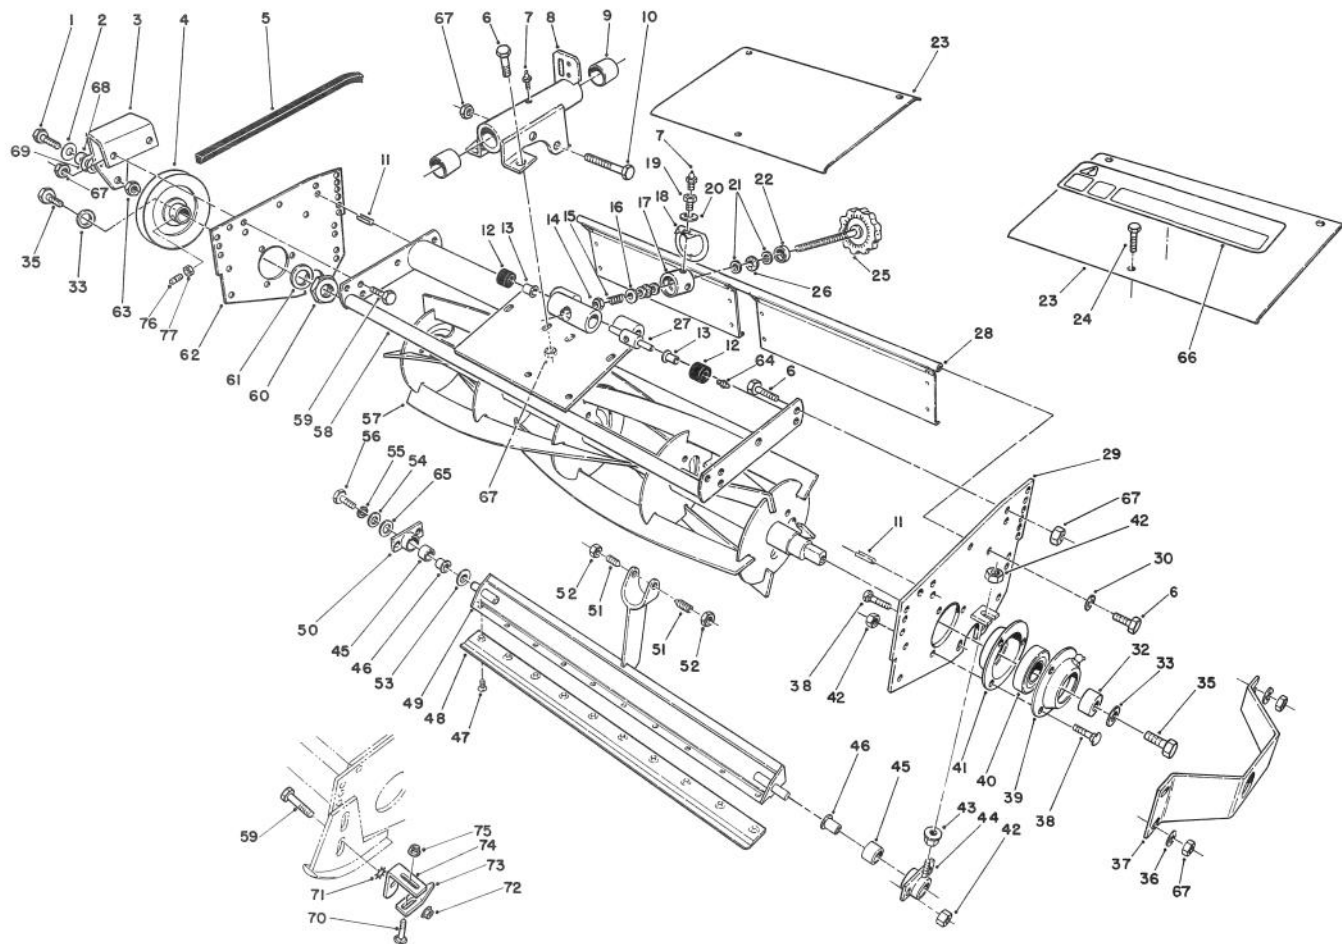


T-0283

5 BLADE CUTTING UNIT REEL ASSEMBLY(Continued) (Fixed Suspension)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
44	61-0970	Housing - Bedbar Adj.	1	65	62-7120	Spacer	1
45	56-9510	Bushing Assembly	2	‡66	62-5070	Decal - Warning	1
46	56-9520	Bushing - Flanged	2	67	3296-39	Nut - Lock (Use 14 nuts on rear unit)	12
47	57-4910	Screw - Special	10	68	76-2290	Spacer (Use 2 spacers on rear cutting unit)	1
48	62-5180	Bedknife - 7 In. Reel	1	69	3256-45	Washer Flat (Use 4 washers on rear cutting unit)	2
49	61-1210	Bedbar	1	70	3229-11	Bolt - Carriage (Rear cutting unit)	1
50	61-1010	Bedbar Housing	1	71	3255-2	Washer - Lock E.T.L.W. (Rear cutting unit)	1
51	57-5190	Screw - Adjustment	2	72	32128-21	Nut - Flange Lock (Rear cutting unit)	1
52	3218-18	Nut-Jam	2	73	76-2430	Bracket - Debris Cleaner (Rear cutting unit)	1
53	61-1950	Washer-Bedbar	1	74	76-2440	Support - Debris Cleaner (Rear cutting unit)	1
54	3256-56	Washer - Flat	1	75	32128-10	Nut - Flange Lock (Rear cutting unit)	1
55	3253-4	Washer-Lock	1	76	3243-6	Screw - Set Sq. Hd.	1
56	322-3	Screw - Cap Hex. Hd.	1	77	3218-3	Nut - Jam	1
57	12-7079	Reel Assy. - 5 Blade (Left C.U.)	1	*	13-3649	Overhaul Kit (Incl. Ref. #12, 13, 22, 26 40 & 45-47)	1
*	12-7059	Reel Assy. - 5 Blade (Right & Rear C.U.)	1				
58	61-0660	Reel Frame	1				
59	323-7	Screw - Cap Hex. Hd. (Use 5 screws on rear cutting unit)	2				
60	67-5840	Nut - Jam	1				
61	27-1850	Washer	1				
62	61-1320	Sideplate - Reel	1				
63	3296-59	Nut - Lock (Use 2 nuts on rear C.U.)	1				
64	302-18	Fitting - Grease	1				

NOTE: Front Left Cutting Unit Shown

 *Not Illustrated ‡For different language versions of this part, see International Decal Cross Reference.

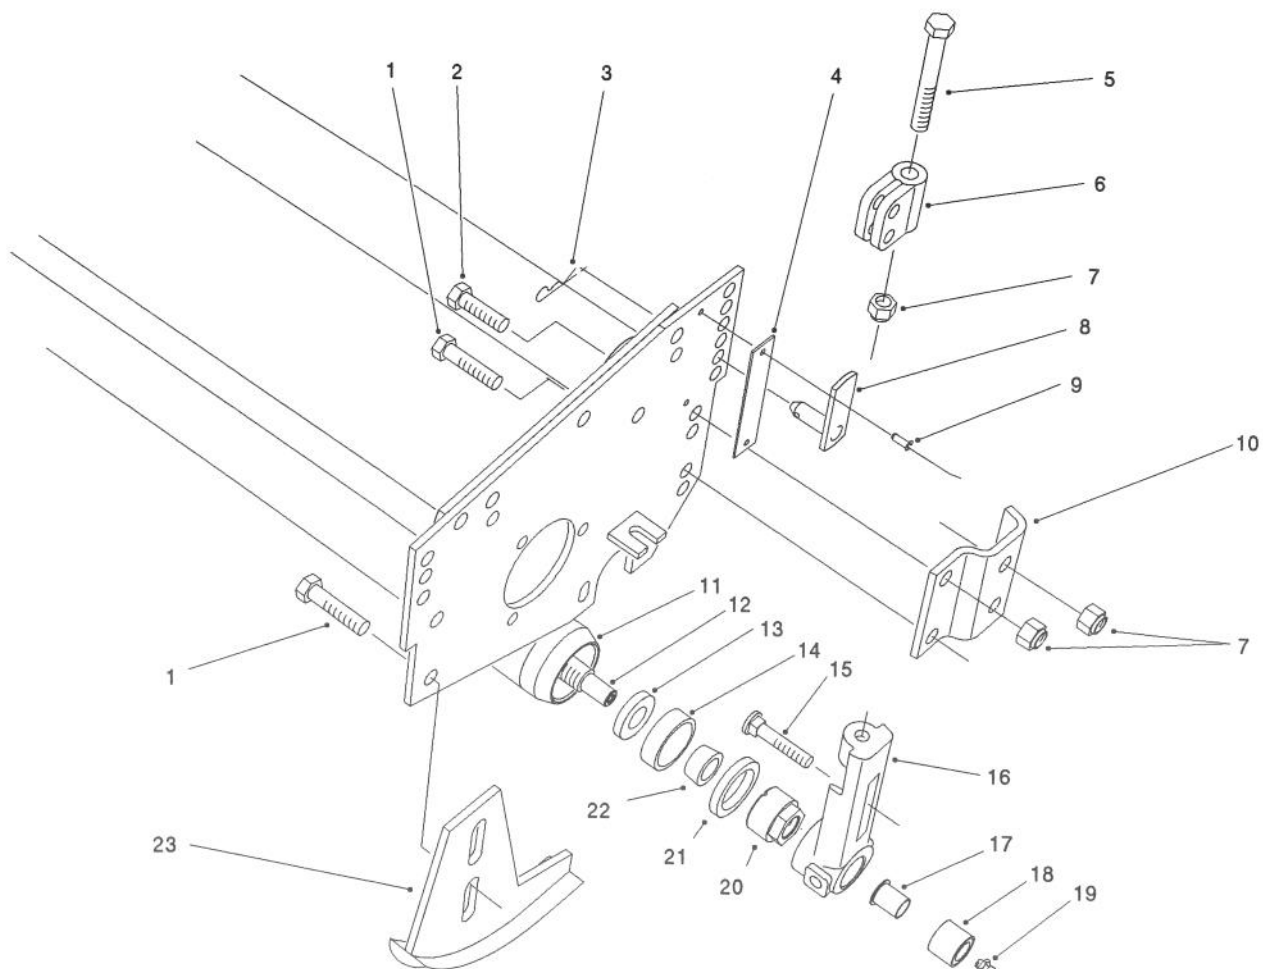

T-0284


5 BLADE CUTTING UNIT ROLLER ASSEMBLY (Fixed Suspension)

Ref. No.	Part No.	Description	No. Used
1	323-7	Screw - Cap Hex. Hd.	3
2	323-6	Screw - Cap Hex. Hd.	5
3	3290-467	Cotter - Hairpin	2
4	61-3810	Plate - HOC	2
5	61-0790	Screw - Cap Hex. Hd.	2
6	61-0420	Support - HOC	2
7	3296-39	Nut - Lock	9
8	71-3690	Pin - HOC	2
9	3290-55	Rivet - Pop	4
10	61-0910	Bracket - Angle	2
11	61-0380	Cap - Roller	2
12	61-0400	Shaft - Roller	1
13	253-152	Seal - Inner	2

Ref. No.	Part No.	Description	No. Used
14	254-79	Cup - Bearing	2
15	3231-2	Bolt - Carriage	2
16	61-0430	Bracket - Rear	2
17	56-9520	Bushing - Flanged	1
18	56-9510	Bushing Assembly	2
19	302-5	Fitting - Grease	2
20	71-3590	Nut - Adjustment	2
21	253-153	Seal - Outer	2
22	254-78	Cone - Bearing	2
23	03446	Skid Kit (Incl. Ref. #1)	1
*	61-0410	Roller Assembly (Incl. Ref. #11-14, 19-22)	1

NOTE: Front Left Cutting Unit Shown

 *Not Illustrated

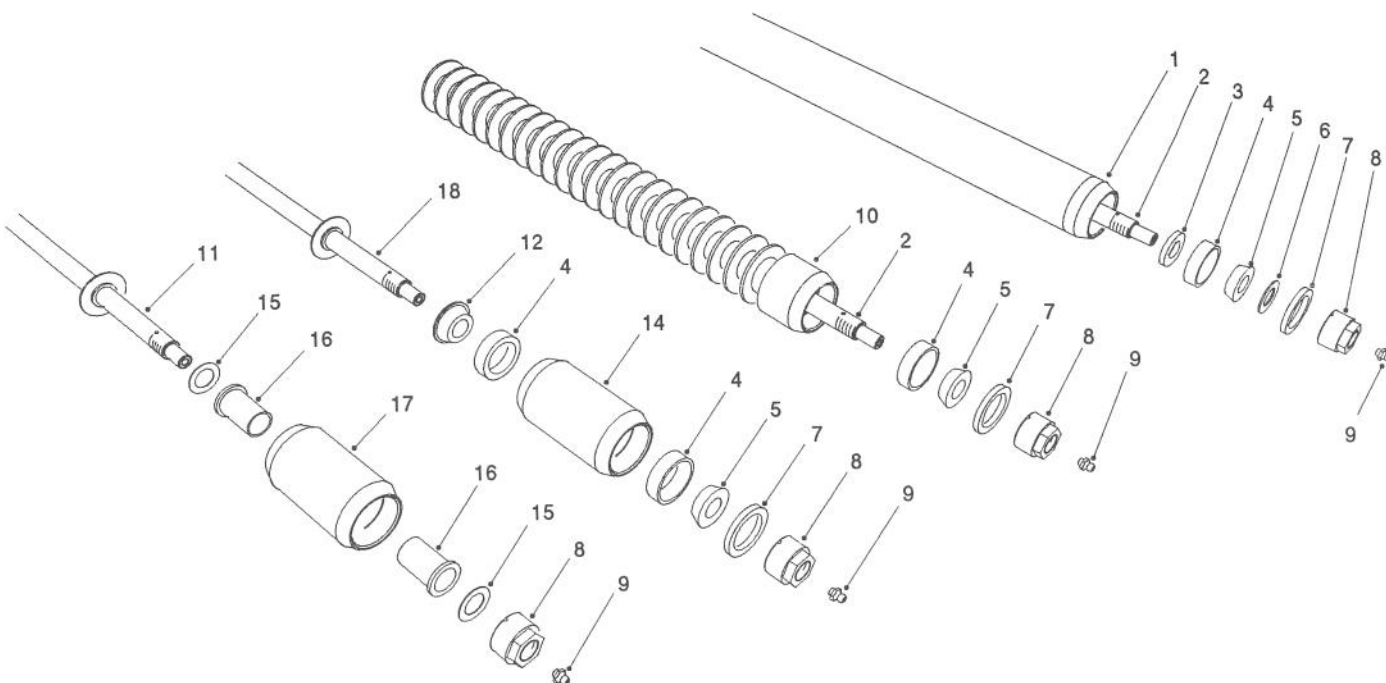


T-0287

CUTTING UNIT ROLLER OPTIONS

Ref. No.	Part No.	Description	No. Used
1	61-0380	Cap - Full Roller	2
2	61-0400	Shaft - Full/Wiehle Roller	2
3	253-152	Seal - Inner	2
4	254-79	Cup - Bearing (Outer)	8
5	254-78	Cone - Bearing (Outer)	6
6	62-7660	Washer - Shim (not used on all full roller assemblies)	2
7	253-153	Seal - Outer	6
8	71-3590	Nut - Adjustment	8
9	302-5	Fitting - Grease	8
10	82-2400	Wiehle Roller Weld Assy.	1
11	62-4990	Shaft - Anti-Scalp Roller	1
12	252-112	Cone - Bearing (Inner)	2
14	76-2400	Roller - Sectional	2
15	3-6498	Washer - Thrust	4
16	256-117	Bushing - Flanged	4
17	63-5060	Roller - Anti-Scalp	2

Ref. No.	Part No.	Description	No. Used
18	76-2380	Shaft - Sectional Roller	1
*	61-0410	Full Roller Assembly (Incl. Ref. #1 -9)	1
*	62-7410	Wiehle Roller Assembly (Incl. Ref. #2, 4-5 & 7-10)	1
*	62-4970	Sectional Roller Assembly (Incl. Ref. #4-5, 7-9, 12, 14 & 18)	1
*	63-5090	Anti-Scalp Roller Assembly (Incl. Ref. #8-9, 11 & 15-17)	1
*	03440	Full Roller Kit (Incl. 3 No. 61-0410)	1
*	03450	Wiehle Roller Kit (Incl. 3 No. 62-7410)	1
*	03445	Sectional Roller Kit (Incl. 3 No. 62-4970)	1
*	03447	Anti-Scalp Roller Kit (Incl. 3 No. 63-5090)	1

 *Not Illustrated

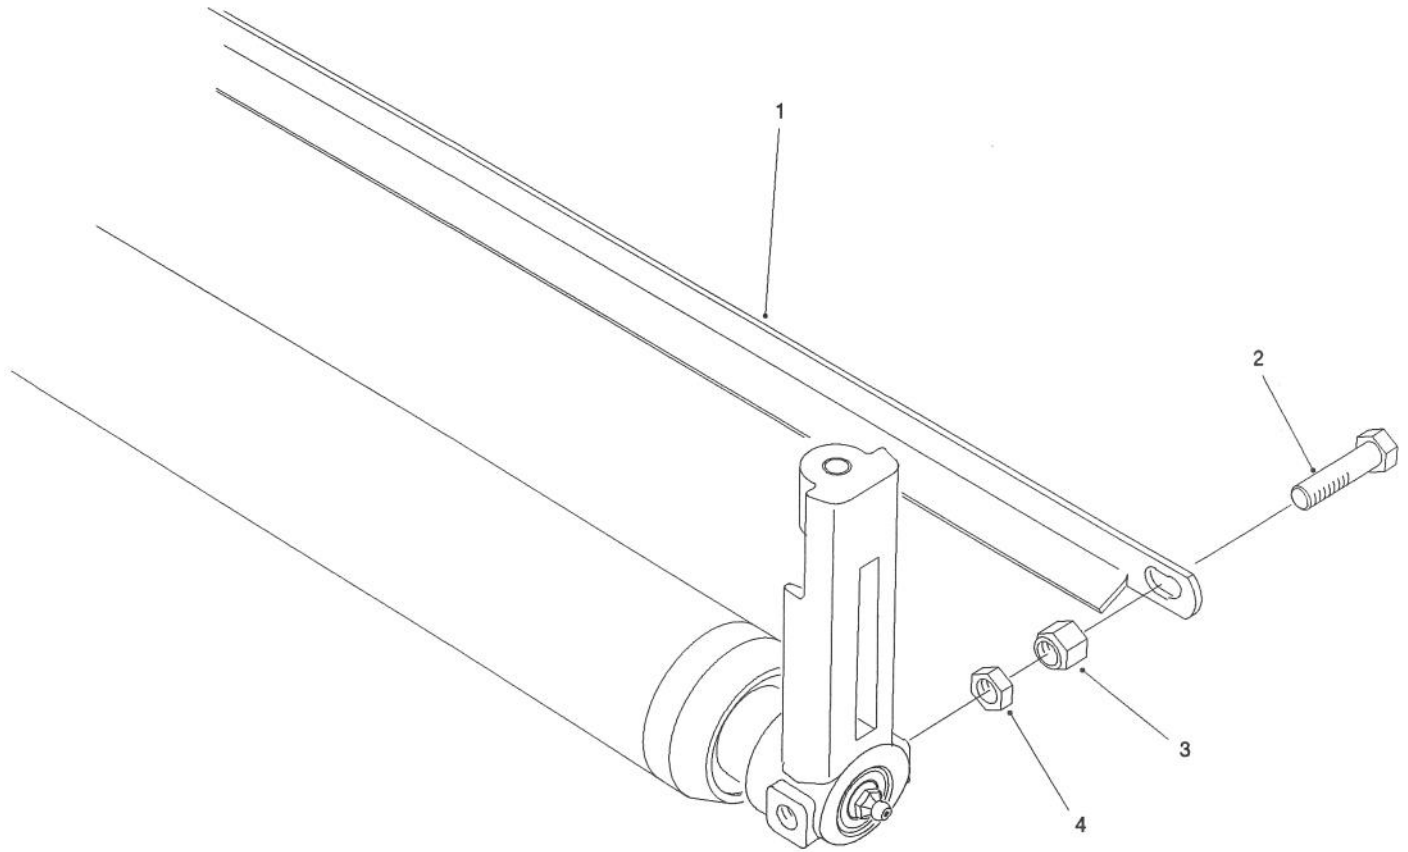


T-0288

CUTTING UNIT ROLLER SCRAPER KIT NO. 60-9560 (Optional)

Ref. No.	Part No.	Description	No. Used
1	61-0590	Scraper - Roller	3
2	323-7	Screw - Cap Hex. Hd.	6

Ref. No.	Part No.	Description	No. Used
3	3296-59	Nut - Lock	6
4	3218-3	Nut - Jam	6

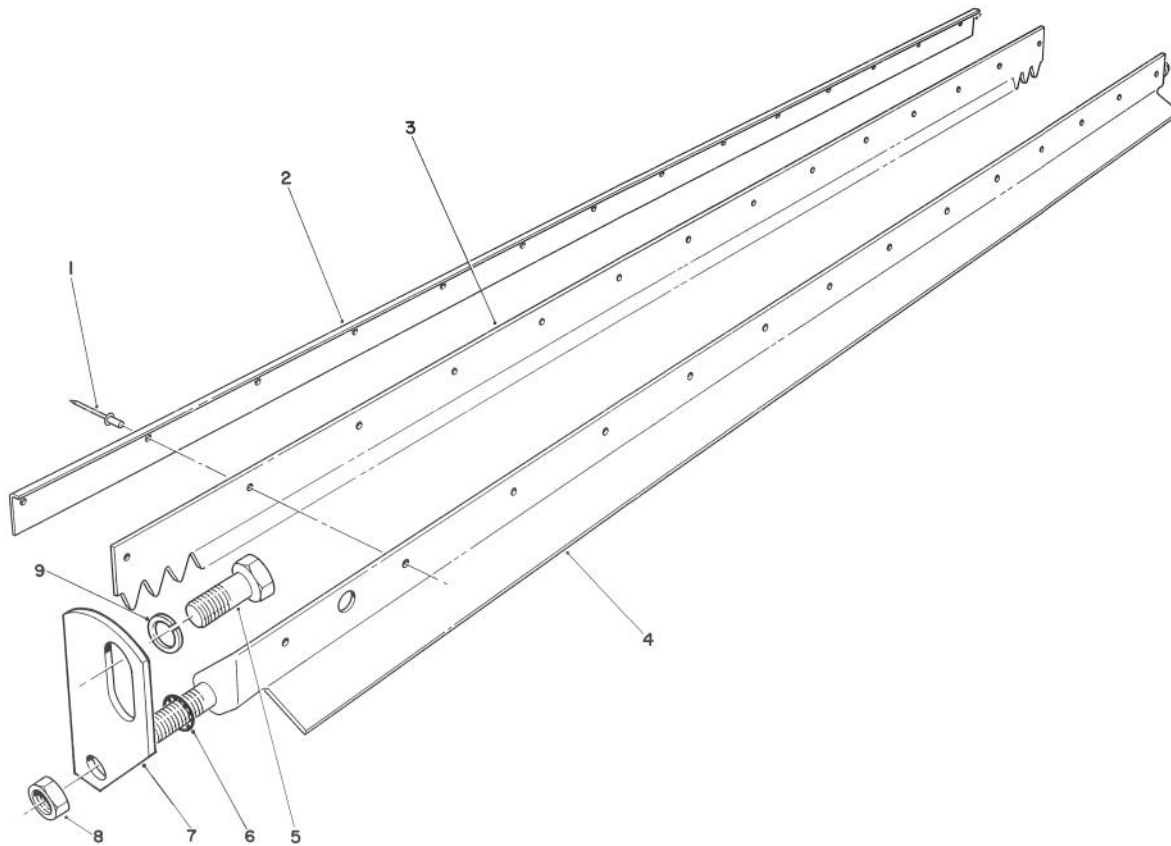 


T-1036

COMB KIT PART NO. 67-9400 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3296-13	Rivet - Pop	14
2	67-9450	Support - Comb	1
3	67-9470	Comb	1
4	67-9430	Plate - Comb	1
5	323-7	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
6	3254-18	Washer - Lock I.T.L.W.	6
7	80-4690	Support - Scraper	2
8	3296-39	Nut - Lock	2
9	3256-35	Washer	6

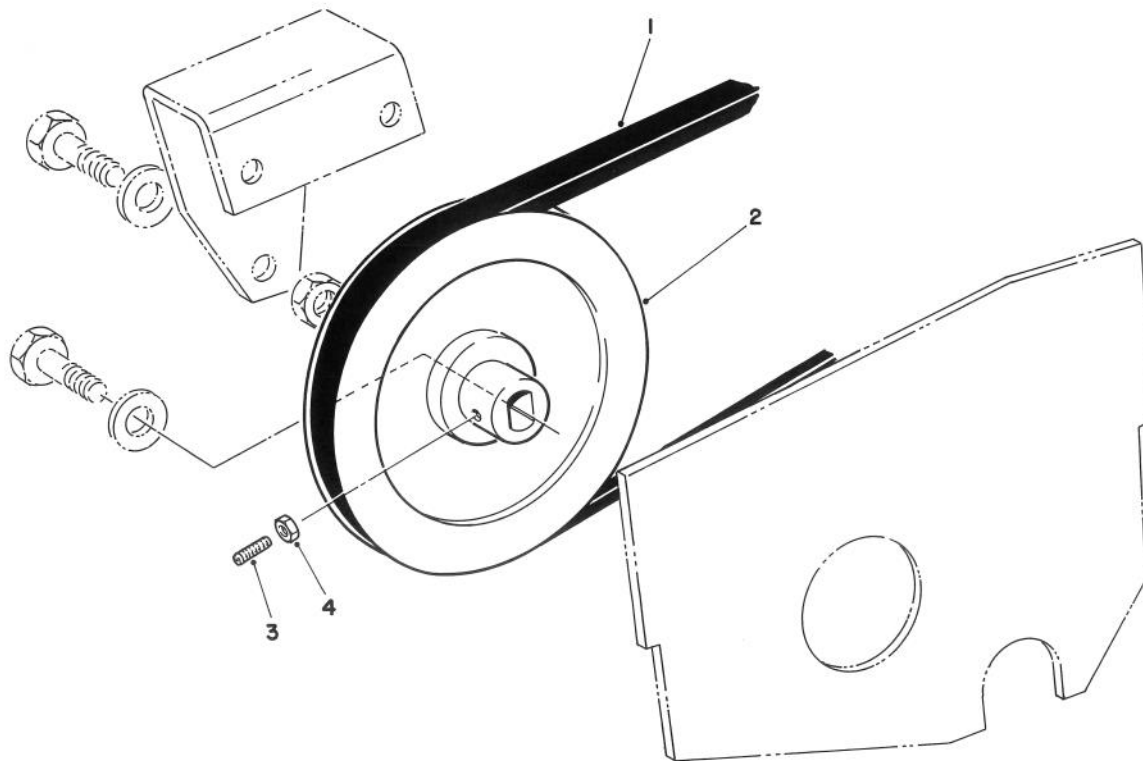 


T-0930

LARGE PULLEY KIT NO. 67-9540 (Optional)

Ref. No.	Part No.	Description	No. Used
1	80-4290	Pulley - Reel	3
2	72-4770	Belt - V	3

Ref. No.	Part No.	Description	No. Used
3	3247-6	Screw - Set	3
4	3218-3	Nut - Jam	3

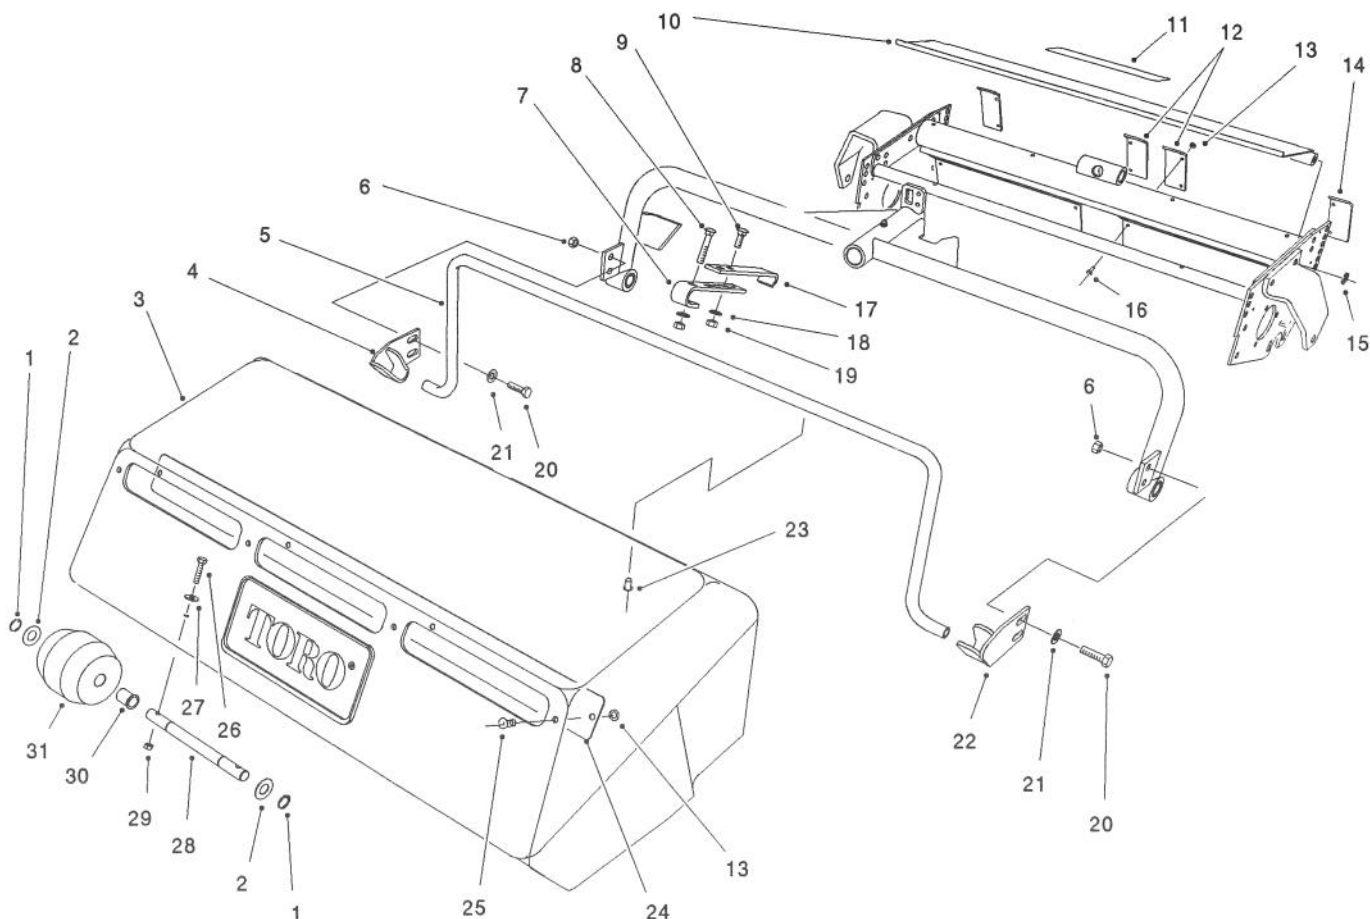 

T-0289


GRASS COLLECTION SYSTEM MODEL NO. 03433 (Optional) (Front Cutting Unit Basket Assembly)

Ref. No.	Part No.	Description	No. Used
1	32120-64	Ring - Snap	8
2	3-9274	Spacer - Wheel	8
3	61-1330	Front Grass Basket Assy. (Incl. Ref. #1, 2, 5, 7-9, 13, 17-19 & 23-31)	2
4	61-1280	Bracket - Basket R.H.	2
5	61-1190	Support - Basket (Front)	2
6	3296-39	Nut - Lock	8
7	61-3160	Hanger - Basket (Front)	2
8	3230-5	Bolt - Carriage	2
9	3230-2	Bolt - Carriage	4
10	61-0750	Deflector - Grass	2
11	62-5070	Decal - Warning	2
12	61-3290	Cover - Middle	4
13	3256-49	Washer - Flat	32
14	61-3280	Cover - End	4
15	3253-21	Washer - Lock	4

Ref. No.	Part No.	Description	No. Used
16	3269-23	Rivet - Pop	24
17	62-7230	Hanger - Adjustable (Front)	2
18	3256-23	Washer - Flat	6
19	3296-29	Nut - Lock	6
20	323-7	Screw - Cap Hex. Hd.	8
21	3256-24	Washer - Flat	8
22	61-1270	Bracket - Basket L.H.	2
23	3269-18	Rivet - Pop	20
24	61-3170	Baffle - Grass	2
25	3269-22	Rivet - Pop	8
26	321-8	Screw - Cap Hex. Hd.	8
27	3256-2	Washer - Flat	8
28	5-2891	Shaft - Wheel	4
29	32153-4	Nut-Lock	8
30	256-90	Bushing - Flange	8
31	4-7439	Wheel Assembly (Incl. Ref. #30)	4

NOTE: Left Front Cutting Unit Shown

 NOTE: Model No. 03433 Includes 2 Front and 1 Rear Basket Assembly.

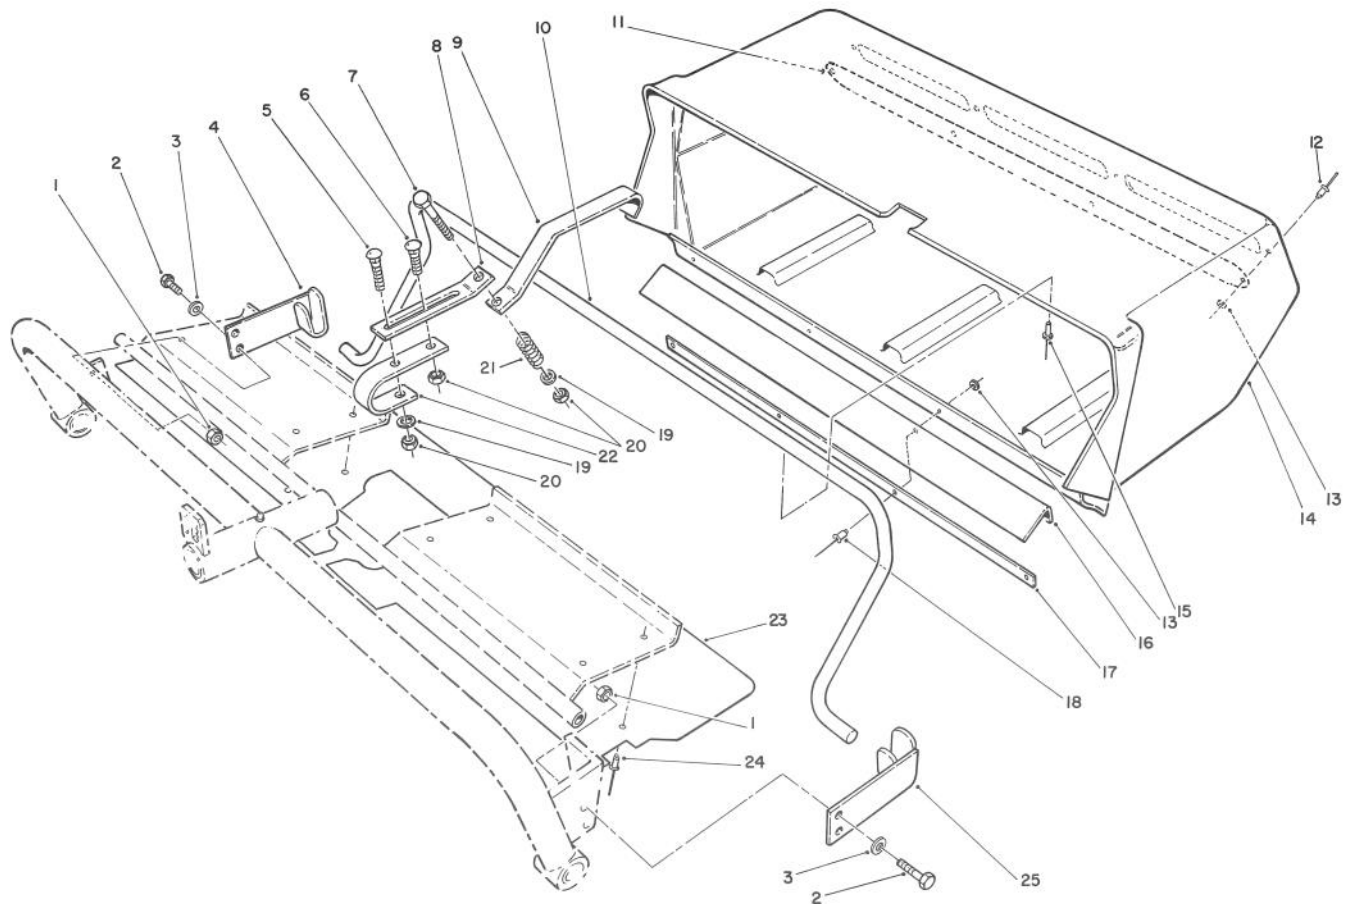


T-0290

GRASS COLLECTION SYSTEM MODEL NO. 03433 (Optional) (Rear Cutting Unit Basket Assembly)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	3	14	61-1340	Rear Grass Basket Assy. (Incl. Ref. #10-13 & 15-18)	1
2	323-7	Screw - Cap Hex. Hd.	4	15	3269-18	Rivet - Pop	10
3	3256-24	Washer - Flat	4	16	62-5130	Flap - Rubber	1
4	61-1260	Bracket - Basket R.H.	1	17	63-8740	Strap - Basket	1
5	3230-8	Bolt - Carriage	1	18	3290-282	Rivet - Pop	10
6	3230-2	Bolt - Carriage	1	19	3256-23	Washer - Flat	2
7	322-7	Screw - Cap Hex. Hd.	1	20	3296-29	Nut - Lock	3
8	67-5910	Plate - Rear	1	21	63-4220	Spring - Compression	1
9	67-5890	Hanger - Basket Rear	1	22	62-7480	Bracket - Hanger	1
10	67-5920	Support - Basket Rear	1	23	67-5800	Flap - Basket Rear	1
11	61-3170	Baffle - Grass	1	24	3269-23	Rivet - Pop	8
12	3269-22	Rivet - Pop	4	25	61-1250	Bracket - Basket L.H.	1
13	3256-49	Washer	8				

 NOTE: Model No. 03433 Includes 2 Front and 1 Rear Basket Assembly.

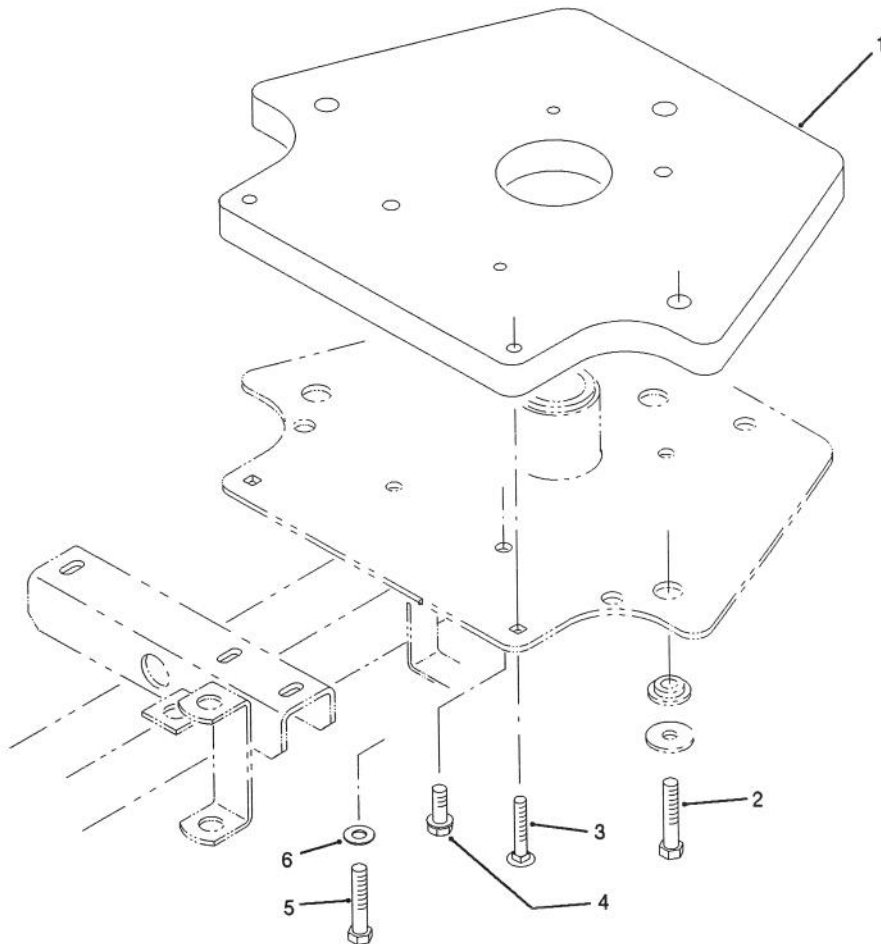


T-1372

WEIGHT KIT NO. 83-9370

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-9390	Weight	1	4	3234-11	Screw - Hex. Washer Hd.	2
2	323-10	Screw - Cap Hex. Hd.	3	†5	323-10	Screw - Cap Hex. Hd.	2
*†	232-14	Screw - Cap Hex. Hd.	3	†6	3256-24	Washer - Flat	2
3	3230-5	Screw - Carriage	2				
*†	3230-9	Screw - Carriage	2				

*Not Illustrated

 †Required when installing 2 weights.

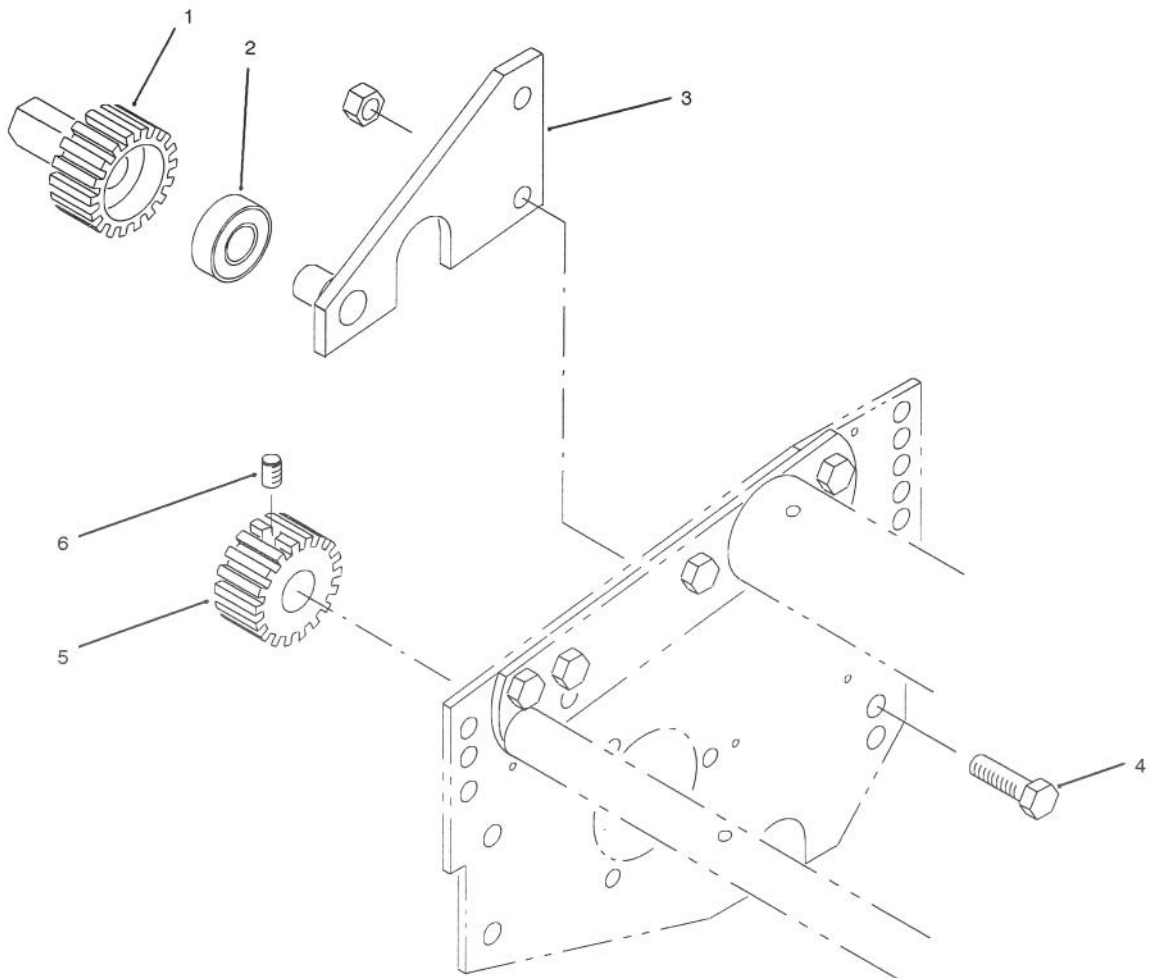

T-1372

BACKLAP KIT NO. 84-5510


Ref. No.	Part No.	Description	No. Used
1	84-5590	Gear - Driver	1
2	251-270	Bearing - Ball	1
3	84-5580	Plate - Attachment (L.H. Cutting Unit)	1
*	84-5570	Plate - Attachment (R.H. & Ctr. Cutting Unit)	2

Ref. No.	Part No.	Description	No. Used
4	323-7	Screw - Cap Hex. Hd.	6
5	84-5560	Gear - Reel Shaft	3
6	3246-9	Screw - Set	6

*Not Illustrated

SPECIAL TOOLS

 
DRIVE MOTOR SEAL INSTALLATION TOOL NO. *19-2660

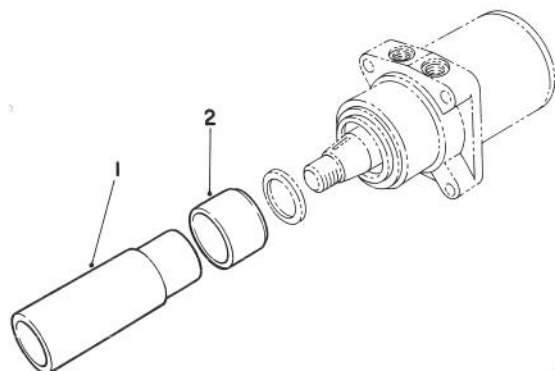

T-0728

Ref. No.	Part No.	Description	No. Used
1		Driver - Seal	1
2		Holder - Seal	1

 
BEDKNIFE SCREW TOOL NO. *TOR510880

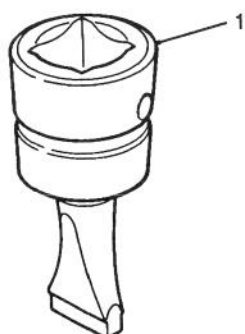

T-0729

Ref. No.	Part No.	Description	No. Used
1		Tool - Bedknife Screw	1

 
HYDRAULIC OIL RESERVOIR PLUG NO. *63-4310

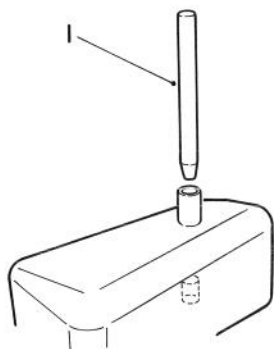

T-1213

Ref. No.	Part No.	Description	No. Used
1		Plug - Reservoir	1

 
BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

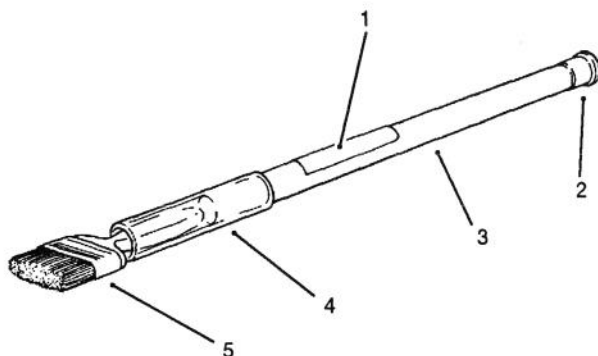

T-0731

Ref. No.	Part No.	Description	No. Used
1	12-9140	Decal	1
2	2410-18	Plug	1
3	29-9080	Handle	1
4	29-9090	Hose - Handle	1
5	36-4310	Brush	1

 *Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

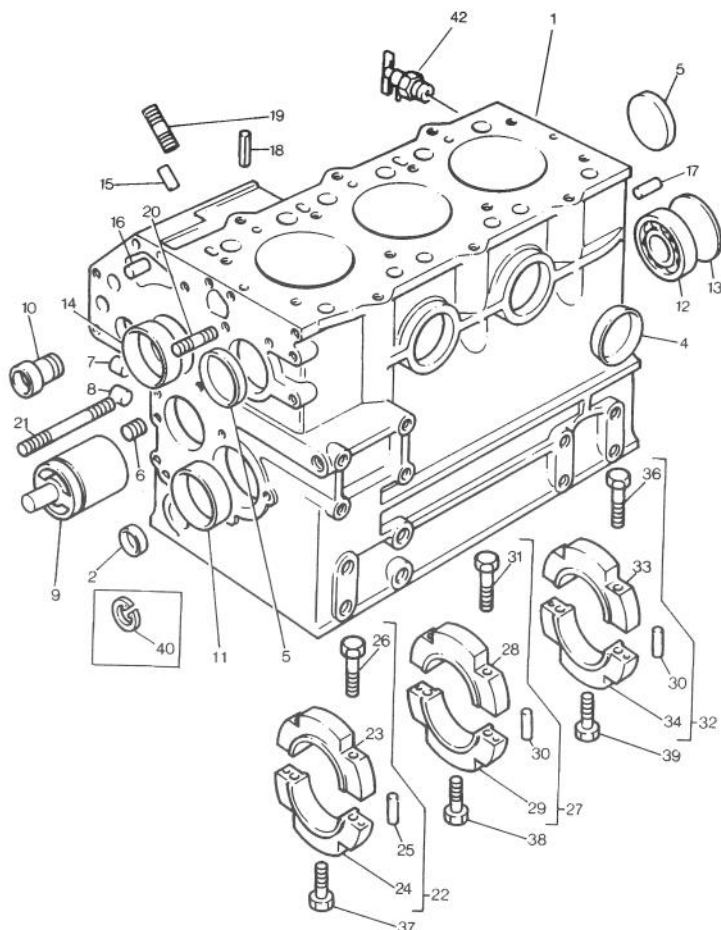


CYLINDER BLOCK ASSEMBLY

T-1377

Ref. No.	Part No.	Description	No. Used
1	110186030	Kit - Cylinder Block	1
2	064200015	Plug	1
4	064200040	Plug	2
5	064200040	Plug	2
6	198466050	Plug	3
7	198466010	Plug	4
8	198466070	Plug	2
9	165296160	Shaft	1
10	198517090	Bush	1
11	198517300	Bush	1
*	198517304	Bush -.25mm	1
*	198517307	Bush -.50mm	1
12	040106203	Bearing - Ball	1
13	064100045	Plug	1
14	042303015	Bush	1
15	030500512	Dowel	2
16	030500512	Dowel	2
17	030500820	Dowel	2
18	030309005	Pin	2
19	012100620	Stud	2
20	012100635	Stud	1
21	012100660	Stud	1
22	110156220	Holder	1
		Incl. Ref. #23 & 24)	1

Ref. No.	Part No.	Description	No. Used
23		Cap	1
24		Cap	1
25	030500612	Dowel	2
26	010810840	Screw	2
27	110156230	Holder	1
		Incl. Ref. #28 & 29)	1
28		Cap	1
29		Cap	1
30	030500612	Dowel	2
31	010810840	Screw	2
32	110156240	Holder	1
		Incl. Ref. #33 & 34)	1
33		Cap	1
34		Cap	1
35	030500612	Dowel	2
36	010810840	Screw	2
37	011310850	Screw	1
38	011310850	Screw	1
39	010700845	Screw	2
40	036509005	Circlip	1
41	064200018	Plug	2
42	198736052	Cock	1
*	110006330	Short Block Assembly	1
*	195906610	Kit - Gasket	1

 *Not Illustrated

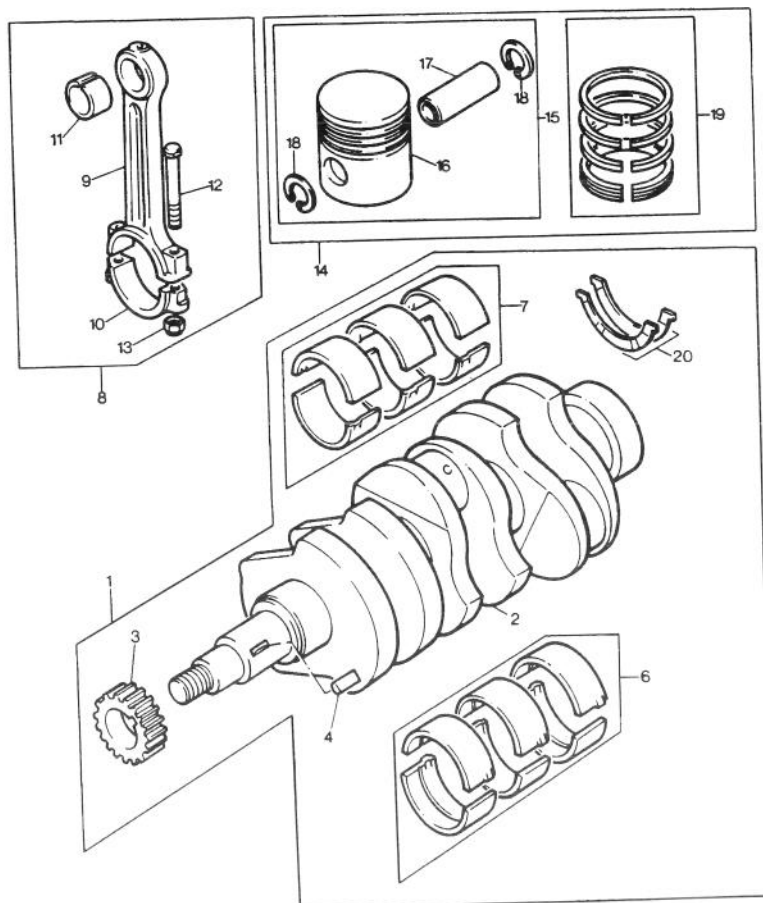


T-1378

CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	115236020	Kit – Crankshaft Incl. Ref. #2)	1
2		Crankshaft	1
3	115276210	Gear	1
4	030509020	Key	1
6	198586030	Kit – Bearing Std.	1
*	198586034	Kit – Bearing –0.25mm	1
*	198586037	Kit – Bearing –0.50mm	1
7	198586060	Kit – Bearing Std.	1
*	198586064	Kit – Bearing –0.25mm	1
*	198586067	Kit – Bearing –0.50mm	1
8	115026240	Connecting Rod Assembly Incl. Ref. # 9 & 10)	3
9		Rod	1
10		Cap	1
11	198517325	Bush	1
12	115176130	Screw	2

Ref. No.	Part No.	Description	No. Used
13	020109103	Nut	2
14	115016670	Kit – Piston Std.	3
*	115016674	Kit – Piston +0.5mm	1
*	115016677	Kit – Piston +1.0mm	1
15	115016770	Kit – Piston Std. Incl. Ref. #16)	1
*	115016774	Kit – Piston +0.5mm Incl. Ref. #16)	1
*	115016777	Kit – Piston +1.0mm Incl. Ref. #16)	1
16		Piston	1
17	115326260	Pin	1
18	03500019	Circlip	2
19	115107260	Kit – Piston Ring	1
*	115107263	Kit – Piston Ring +0.5mm	1
*	115107265	Kit – Piston Ring +1.0mm	1

 *Not Illustrated

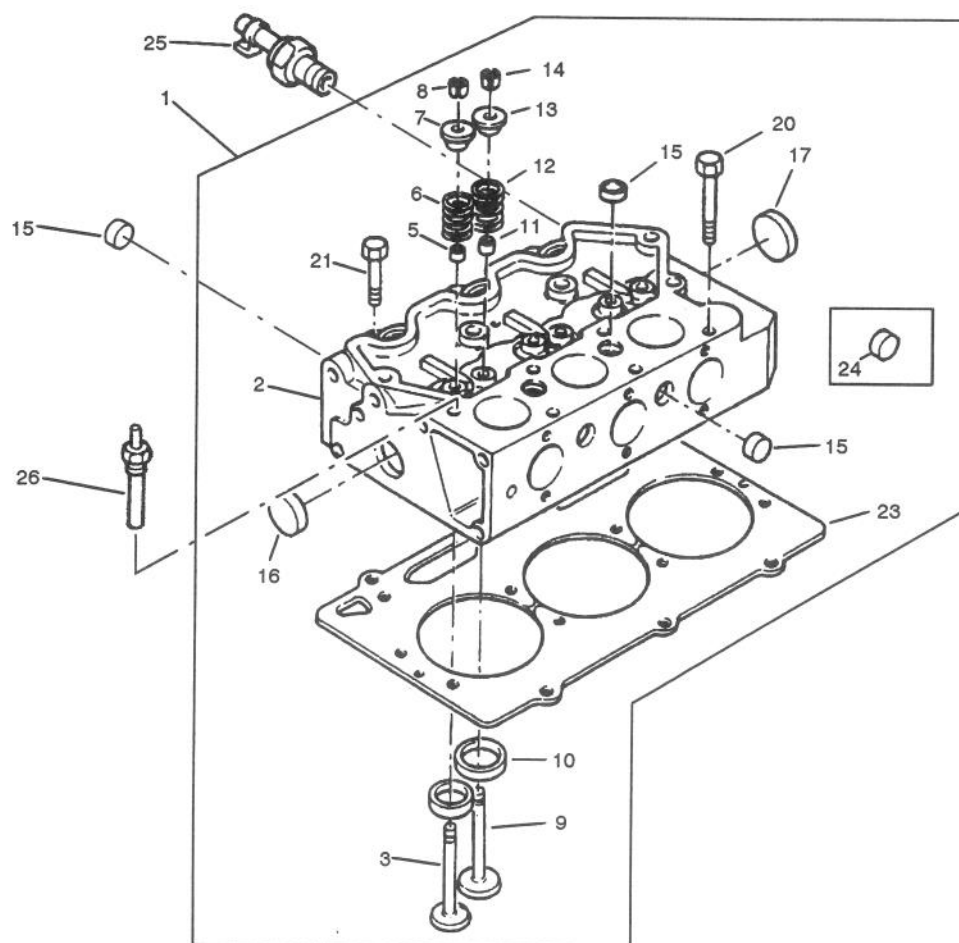


T-1379

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	111016911	Kit - Cylinder Head	1	14	120226080	Cotter	6
2	111086030	Kit - Cylinder Head	1	15	198466070	Plug	4
3	120166280	Valve Inlet	3	16	064200022	Plug	3
5	120406080	Seal	3	17	064200022	Plug	3
6	198217070	Spring	3	20	111136340	Screw	11
7	120186100	Cap	3	21	111136350	Screw	3
8	120226080	Cotter	6	23	111147100	Gasket +1.2mm	1
9	120176290	Valve Exhaust	3	*	111147110	Gasket +1.3mm	1
10	110136290	Insert	3	24	064200018	Plug	2
11	120406080	Seal	3	25	185246060	Switch - Oil Pressure	1
12	198217070	Spring	3	26	385720101	Sender - Temperature	1
13	120186100	Cap	3				

 *Not Illustrated

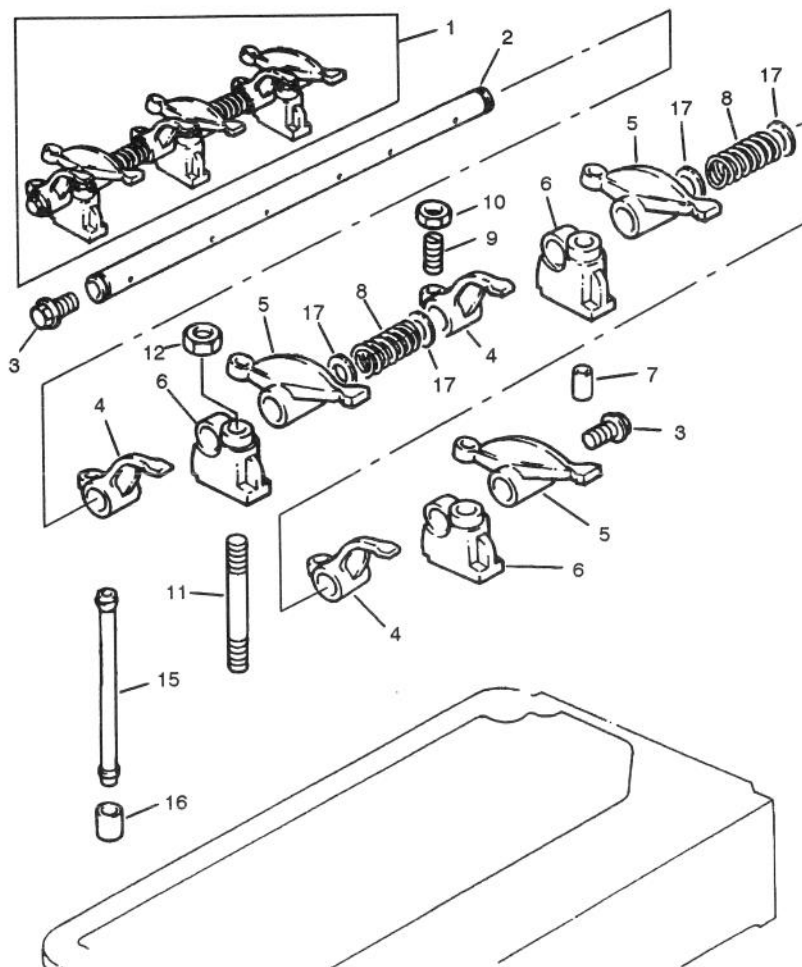


T-1380

ROCKER ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	120336020	Rocker Shaft Assembly	1
2	120316190	Shaft	1
3	064609006	Plug	2
4	120356120	Lever	3
5	120356110	Lever	3
6	120346170	Bracket	3
7	030300325	Pin	1
8	198217080	Spring	2

Ref. No.	Part No.	Description	No. Used
9	199486220	Adjusting Screw	6
10	020109076	Nut	6
11	012109177	Stud	3
12	023100008	Nut	3
15	120456240	Rod	6
16	120116100	Tappet	6
17	199280280	Washer	4

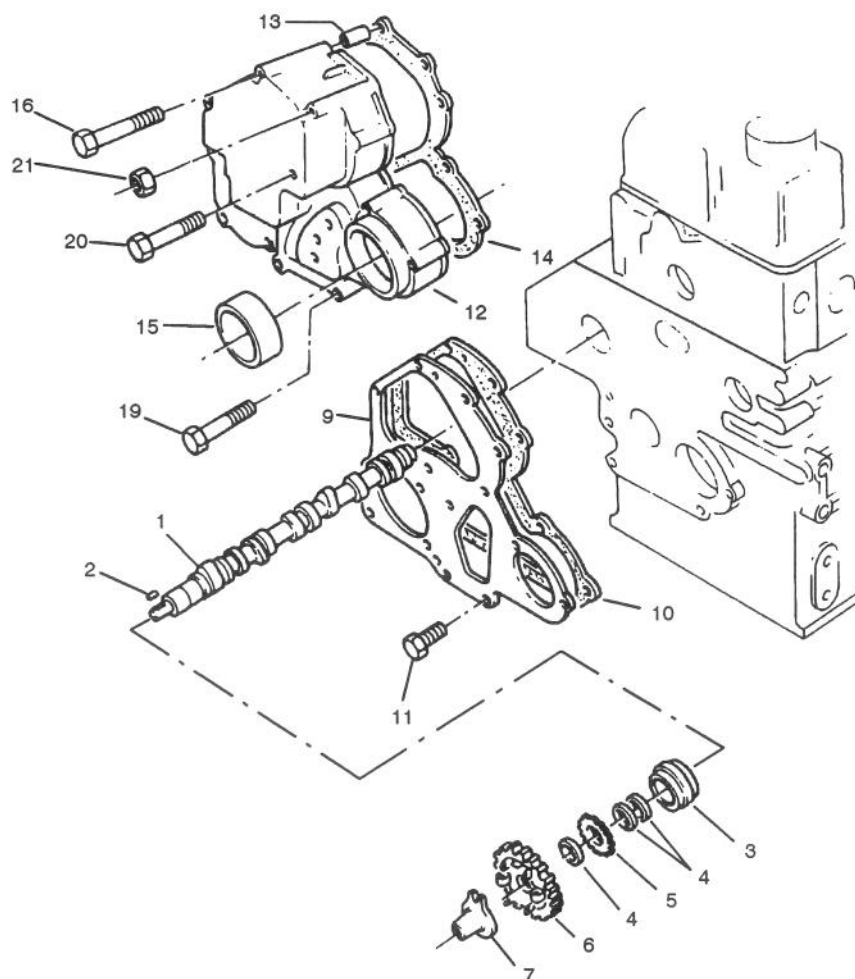 


T-1381

CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	120026120	Camshaft	1
2	034100508	Key	1
3	040109059	Bearing	1
4	199216230	Spacer	3
5	120736081	Gear	1
6	120016030	Gear	1
7	125256120	Tappet	1
9	165166260	Plate	1
10	165996400	Joint	1

Ref. No.	Part No.	Description	No. Used
11	011300612	Bolt	3
12	165106130	Cover	1
13	030300414	Pin	1
14	165996410	Joint	1
15	198636090	Seal	1
16	011300680	Screw	2
19	011300640	Screw	4
20	011300660	Screw	2
21	023100006	Nut	1

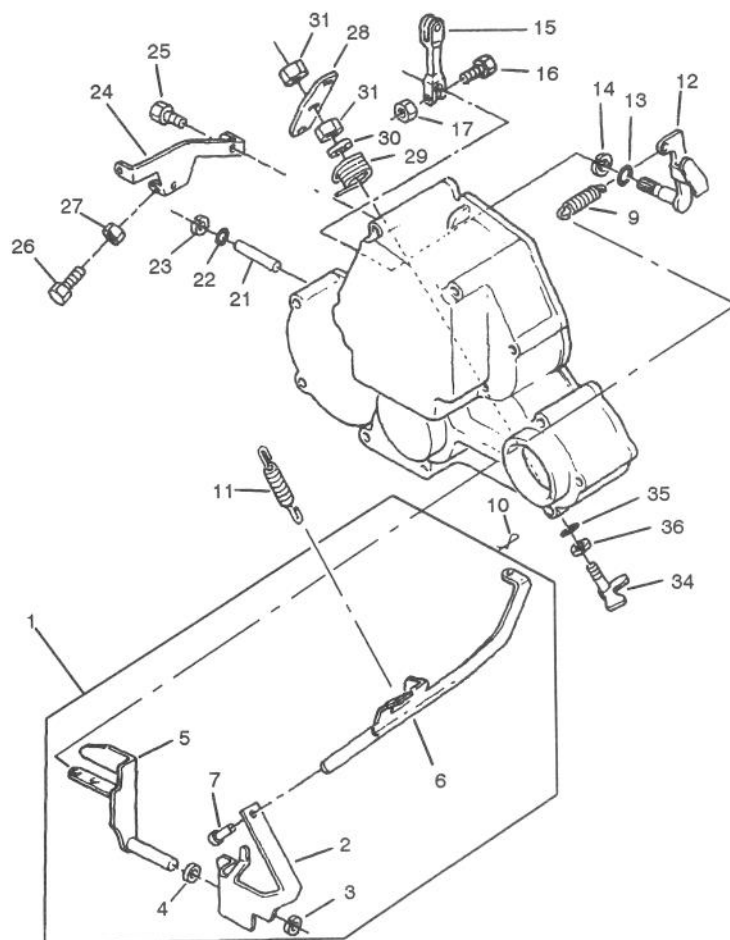 


T-1382

TIMING COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	125046140	Lever (Incl. Ref. #2, 6 & 7)	1
2		Lever	1
3	036800008	Circlip	1
4	026200010	Washer	1
5	125406071	Lever	1
6		Link	1
7		Pin	1
9	198217220	Spring	1
10	031100004	Pin	1
11	198217420	Spring	1
12	125156170	Arm	1
13	052100070	O Ring	1
14	036800008	Circlip	1
15	125416020	Lever	1
16	010110630	Screw	1

Ref. No.	Part No.	Description	No. Used
17	023100006	Nut	1
21	125116130	Shaft	1
22	052100030	Seal - O-Ring	1
23	036800005	Circlip	1
24	125976120	Stay	1
25	011300618	Screw	2
26	010109264	Screw	2
27	023100006	Nut	2
28	125176080	Lever	1
29	198216760	Spring	1
30	026200008	Washer	1
31	020300008	Nut	2
34	125156180	Arm	1
35	052100050	O Ring	1
36	036800006	Circlip	1

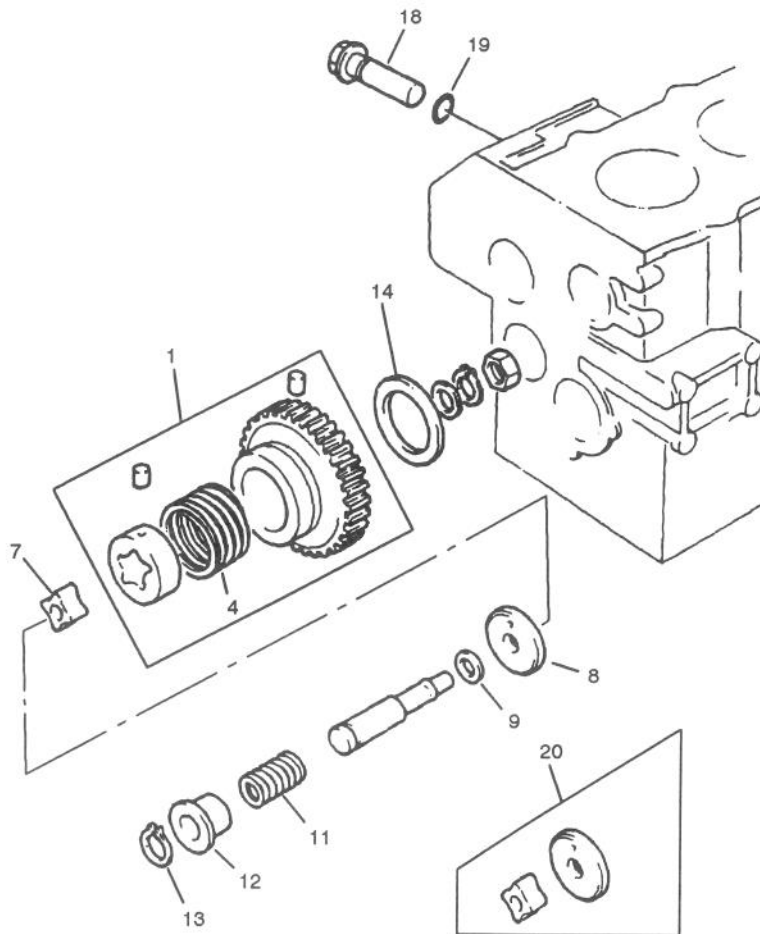 


T-1383

OIL PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	165026110	Gear	1
4	198216821	Spring	1
7	140166130	Rotor	1
8	140116140	Cover	1
9	199286150	Shim +0.10mm	1
*	199286160	Shim +0.15mm	1
*	199286170	Shim +0.20mm	1
*	199286180	Shim +0.50mm	1

Ref. No.	Part No.	Description	No. Used
11	198216720	Spring	1
12	199236540	Collar	1
13	036800010	Circlip	1
14	199266180	Washer	1
18	140036120	Valve	1
19	052100150	Seal - O-Ring	1
20	140186010	Repair Kit	1

 *Not Illustrated

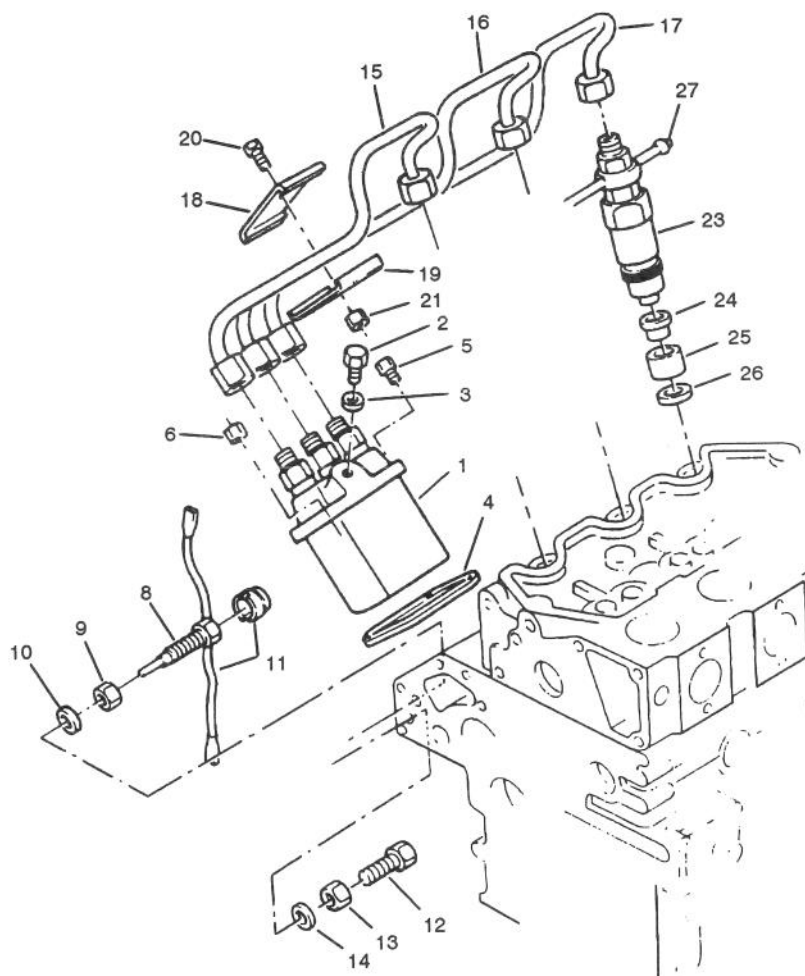


T-1384

FUEL INJECTION SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	131017340	Injection Pump	1	13	023109002	Nut	1
2	131236201	Screw	1	14	025100010	Washer	1
3	025100006	Washer	1	15	131507010	Injection Pipe No. 1 Cyl.	1
4	131437310	Shim +0.2mm	1	16	131507020	Injection Pipe No. 2 Cyl.	1
*	131437320	Shim +0.3mm	1	17	131507030	Injection Pipe No. 3 Cyl.	1
*	131437330	Shim +0.4mm	1	18	199106020	Damper	2
*	131437340	Shim +0.5mm	1	19	199106020	Damper	2
*	131437340	Shim +1.0mm	1	20	010100625	Screw	2
5	011300620	Screw	2	21	023100006	Nut	2
6	023100006	Nut	2	23	131406340	Atomiser	3
8	131046160	Screw	1	24	131426200	Gasket	3
9	023109002	Nut	1	25	111316280	Insert	3
10	025100010	Washer	1	26	198996090	Seal	3
11	198236030	Wire	1	27	131606260	Pipe	1
12	010109270	Screw	1				

 *Not Illustrated

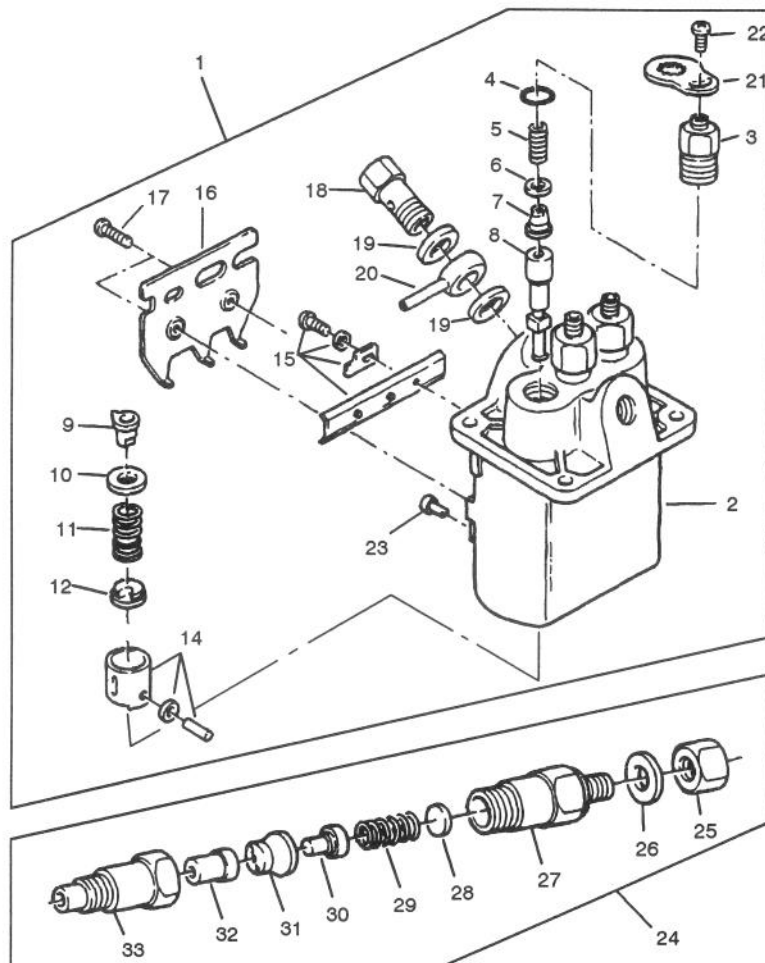


T-1385

INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	131017340	Injection Pipe	1
2	131296665	Housing	1
3	131196120	Holder	3
4	131226170	Seal - O-Ring	3
5	131176430	Spring	3
6	131186050	Gasket	3
7	131156160	Valve	3
8	131116410	Element	3
9	131296951	Sleeve	3
10	131296620	Seat	3
11	131176440	Spring	3
12	131296621	Seat	3
*	131296622	Plate +1.85mm	1
*	131296623	Plate +1.90mm	1
*	131296625	Plate +2.00mm	1
*	131296626	Plate +2.05mm	1
*	131296627	Plate +2.10mm	1
*	131296628	Plate +2.15mm	1
*	131296629	Plate +2.20mm	1
*	131296630	Plate +2.25mm	1
*	131296631	Plate +2.30mm	1
*	131296632	Plate +2.35mm	1
*	131296633	Plate +2.40mm	1
*	131296634	Plate +2.45mm	1
*	131296635	Plate +2.50mm	1
14	131256120	Tappet	3

Ref. No.	Part No.	Description	No. Used
15	131296636	Rack	1
16	131296650	Bracket	1
17	131136320	Screw	2
18	131236190	Bolt	1
19	131246180	Washer	2
20	131246130	Nipple	1
21	131296662	Plate	3
22	131136330	Screw	3
23	131296651	Pin	3
24	131406340	Atomiser	3
25	131446069	Nut	1
26	131426210	Washer	1
27	131446065	Body	1
28	131437250	Shim +0.90mm	1
*	131437251	Shim +0.925mm	1
*	131437252	Shim +0.95mm	1
*	131437253	Shim +0.975mm	1
*	131437354	Shim +1.00mm	1
*	131437255	Shim +1.025mm	1
*	131437256	Shim +1.05mm	1
*	131437257	Shim +1.075mm	1
*	131437258	Shim +1.10mm	1
*	131437259	Shim +1.125mm	1
*	131437260	Shim +1.15mm	1
*	131437261	Shim +1.175mm	1
*	131437262	Shim +1.20mm	1

 *Not Illustrated

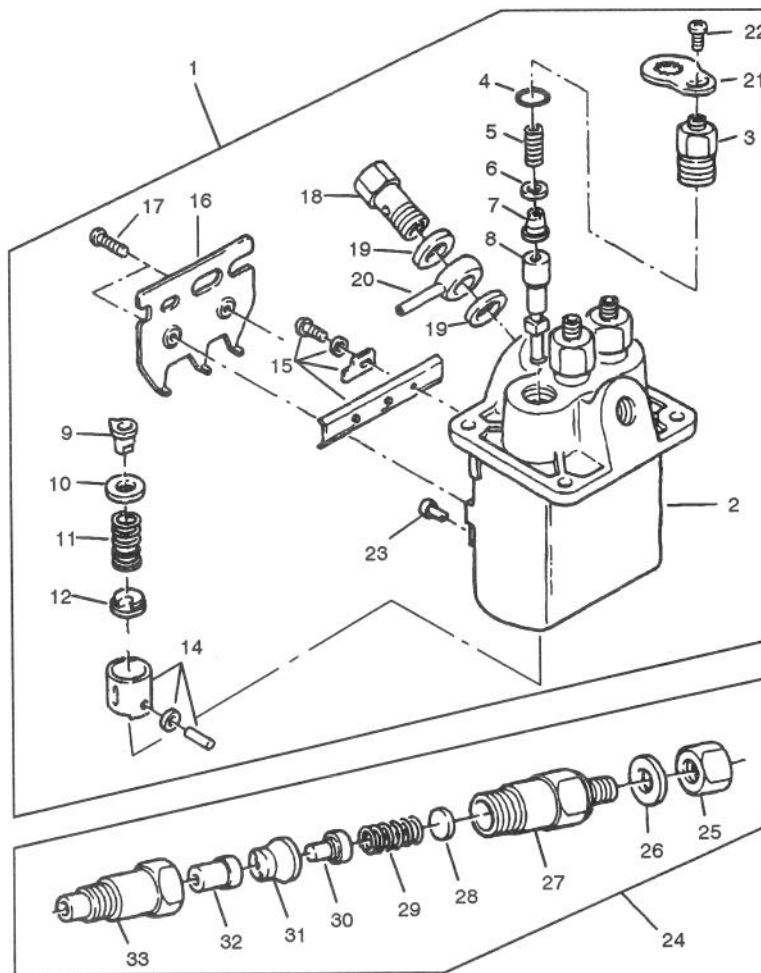


T-1385

INJECTION PUMP ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
28	131437263	Shim +1.225mm	1	29	131446066	Spring	1
*	131437264	Shim +1.250mm	1	30	131446070	Pin	1
*	131437265	Shim +1.275mm	1	31	131446068	Spacer	1
*	131437266	Shim +1.30mm	1	32	131416150	Nozzle	1
*	131437267	Shim +1.325mm	1	33	131446067	Nut	1
*	131437268	Shim +1.35mm	1				
*	131437269	Shim +1.375mm	1				
*	131437270	Shim +1.40mm	1				
*	131437271	Shim +1.425mm	1				
*	131437272	Shim +1.45mm	1				

 *Not Illustrated

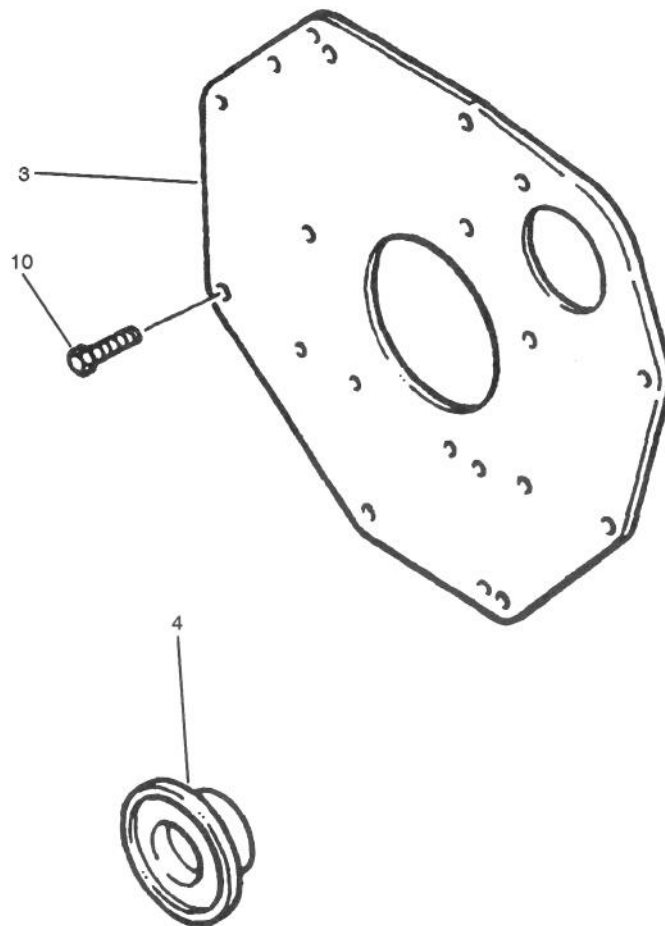


T-1386

FLYWHEEL HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
3	110366700	Plate	1
4	198636080	Seal	1

Ref. No.	Part No.	Description	No. Used
10	011310816	Screw	10

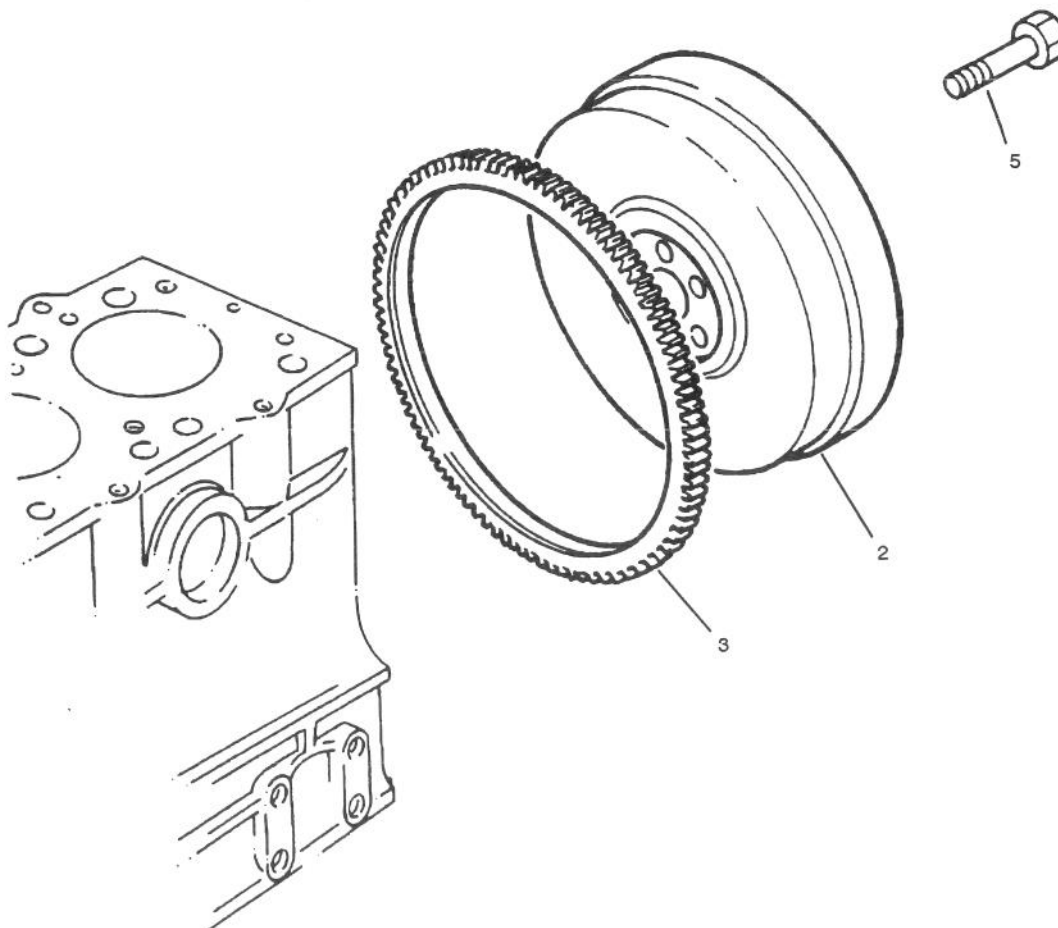 


T-1387

FLYWHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	115356921	Flywheel	1
3	115376150	Gear – Ring	1

Ref. No.	Part No.	Description	No. Used
5	010109330	Screw	4

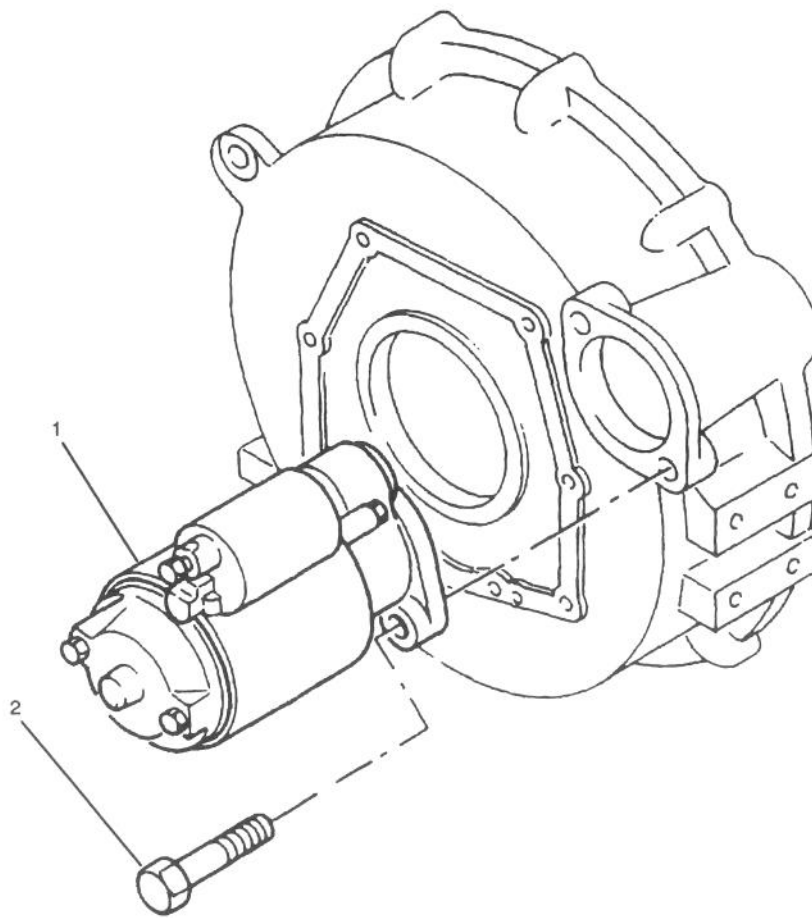 


T-1388

STARTER INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185086370	Startermotor	1

Ref. No.	Part No.	Description	No. Used
2	011601020	Screw	2

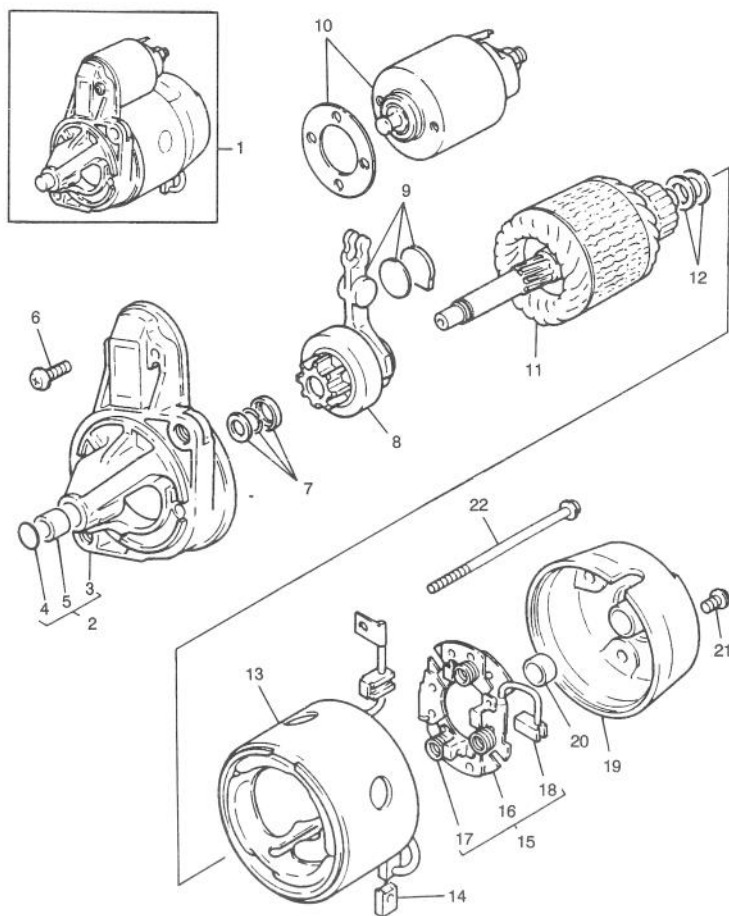 


T-1389

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185086370	Startermotor	1
2	185846471	Cover (Incl. Ref. #3 & 4)	1
3		Cover	1
4		Ring	1
5	185846472	Bush	2
6	185846468	Screw	2
7	185846473	Washer	1
8	185866240	Pinion	1
9	185846469	Lever	1
10	185816220	Switch	1
11	185846474	Armature	1

Ref. No.	Part No.	Description	No. Used
12	185846475	Washer	1
13	185846476	Yoke	1
14	185416400	Brush	1
15	185416390	Holder (Incl. Ref. #16)	1
16		Holder	1
17	185886010	Spring	1
18	185416410	Brush	1
19	185846477	Cover	1
20	185846478	Bush	1
21	185846468	Screw	3
22	185846470	Screw	2

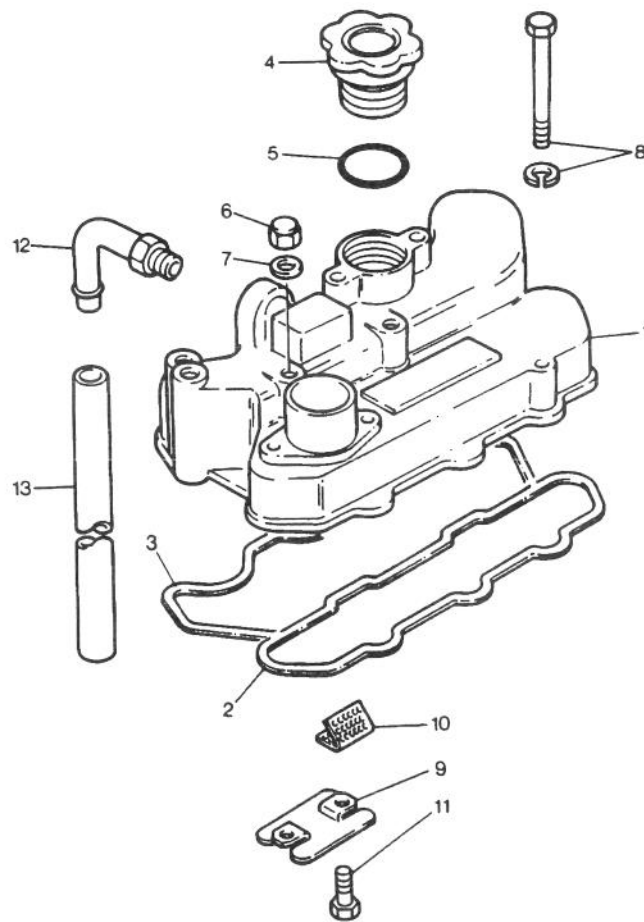 


T-1391

VALVE COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	111216630	Cover	1	7	198996060	Washer	3
*	111026371	Cover	1	8	011300650	Screw	2
2	111996330	Gasket	1	9	110666110	Plate	1
3	111996060	Gasket	1	10	110666120	Gauze	1
4	198436010	Cap	1	11	011300612	Bolt	2
5	052100400	Seal	1	12	110986500	Pipe	1
6	024500008	Nut	3	13	068122560	Hose	1

 *Not Illustrated

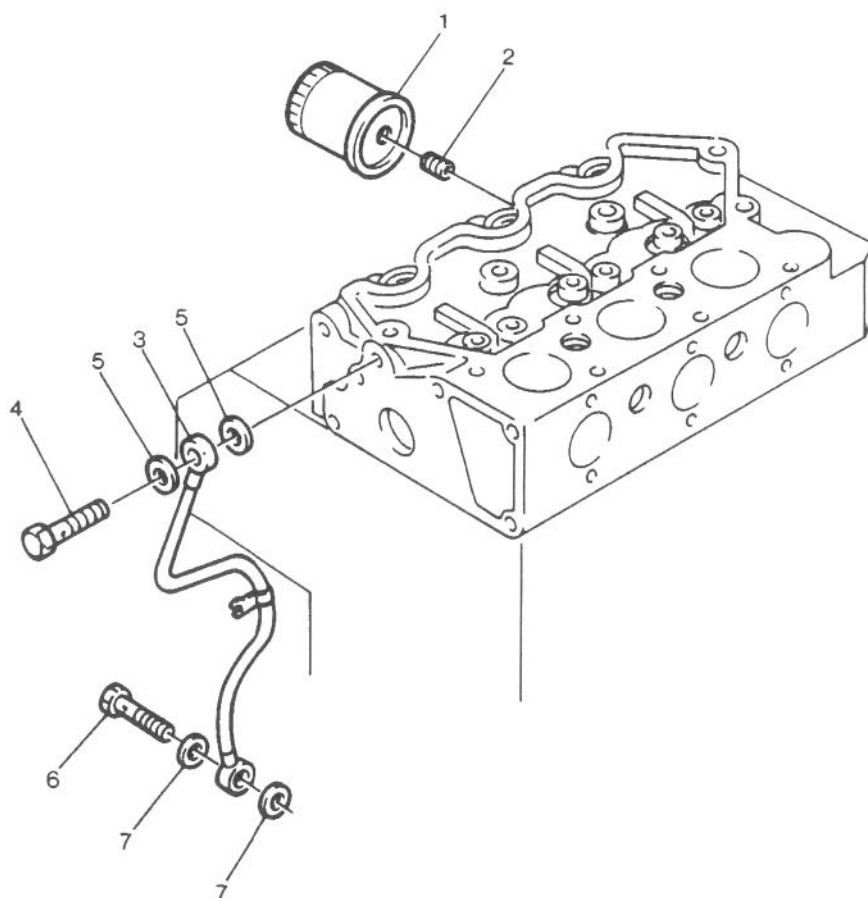


T-1392

OIL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	140516190	Filter – Oil	1
2	140546020	Connection	1
3	140606680	Pipe	1
4	198486780	Bolt	1

Ref. No.	Part No.	Description	No. Used
5	198996060	Washer	2
6	198486780	Bolt	1
7	198996060	Washer	2

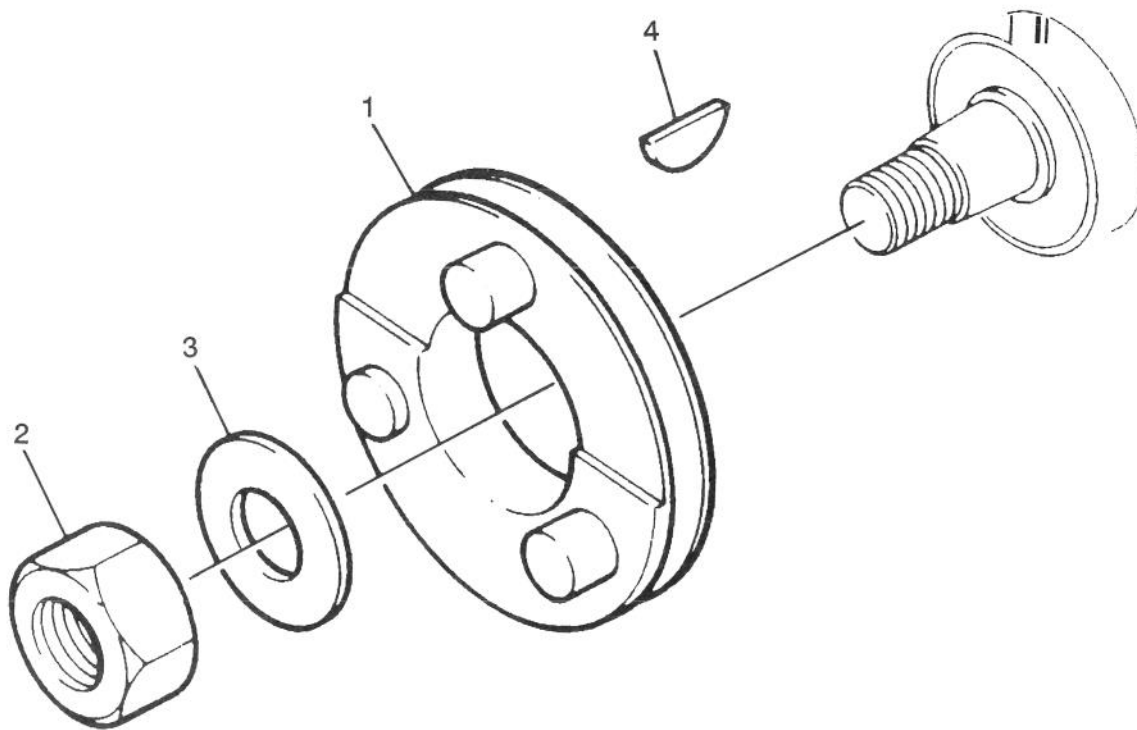 


T-1393

FRONT DRIVE PULLEY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	115397550	Pulley	1
2	020800018	Nut	1

Ref. No.	Part No.	Description	No. Used
3	026200018	Washer	1
4	134100508	Key	1

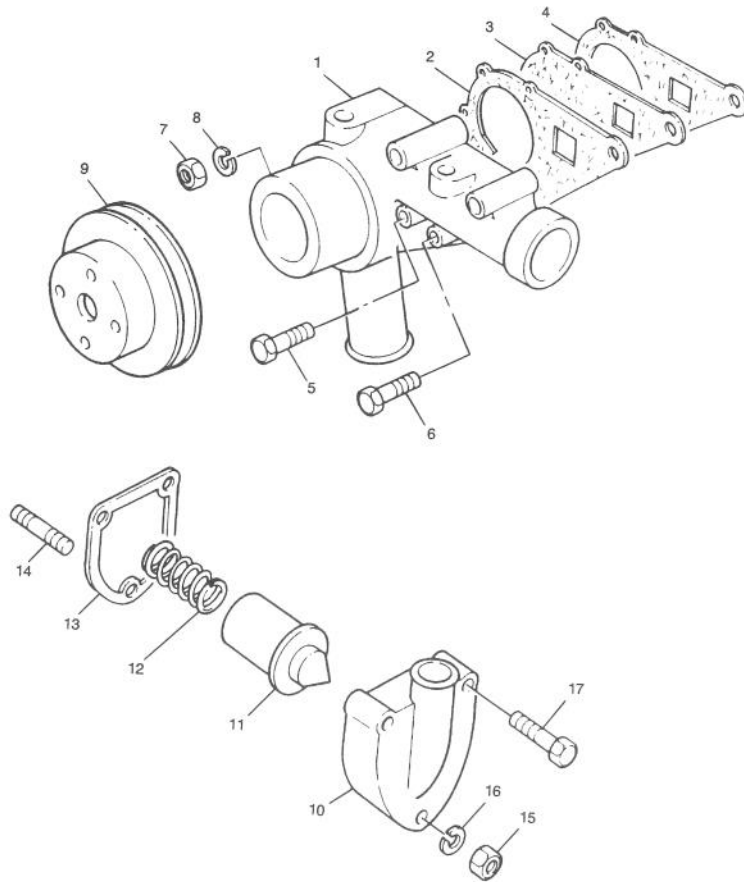 


WATER PUMP ASSEMBLY

T-1394

Ref. No.	Part No.	Description	No. Used
1	145016840	Pump – Water	1
2	145996430	Gasket	1
3	145146270	Backplate	1
4	145996420	Gasket	1
5	011300635	Screw	3
6	011300650	Screw	4
7	023100006	Nut	1
8	027100006	Washer	1
9	145336490	Pulley	1

Ref. No.	Part No.	Description	No. Used
10	145216160	Housing	1
11	145206061	Thermostat	1
12	198217090	Spring	1
13	145996440	Gasket	1
14	012100650	Stud	1
15	023100006	Nut	1
16	027100006	Washer	1
17	011300650	Screw	2

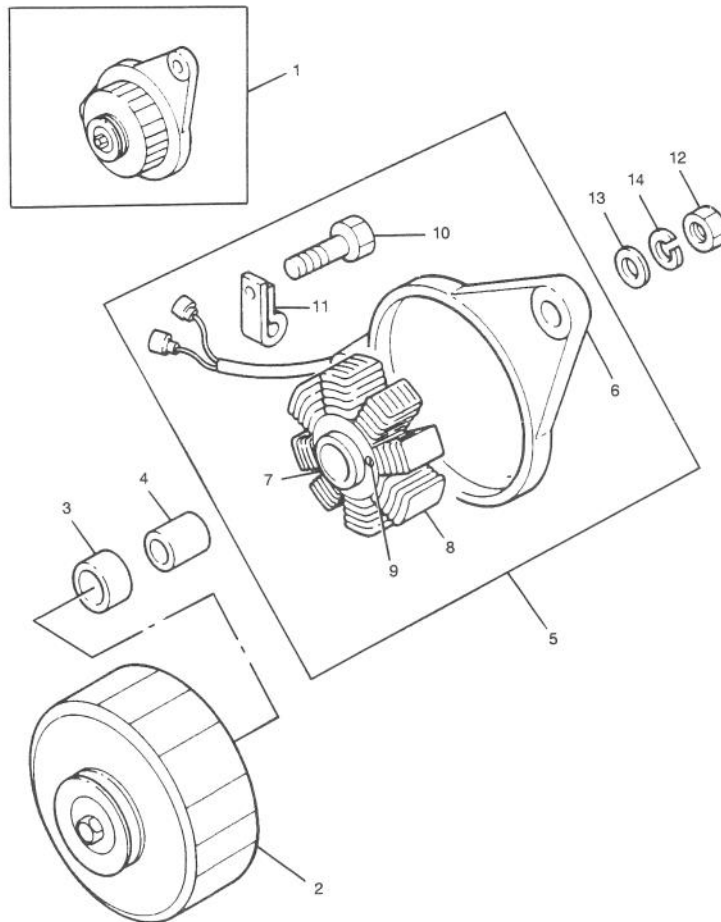 


T-1397

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185046210	Alternator	1
2	185446219	Pulley	1
3	040126201	Bearing	1
4	199236510	Collar	1
5	185446217	Plate	1
6	185716200	Plate	1
7	040126201	Bearing	1

Ref. No.	Part No.	Description	No. Used
8	185426218	Stator	1
9	015140425	Screw	2
10	015140408	Screw	1
11	185446220	Clip	1
12	020210010	Nut	1
13	026100010	Washer	1
14	027100010	Washer	1

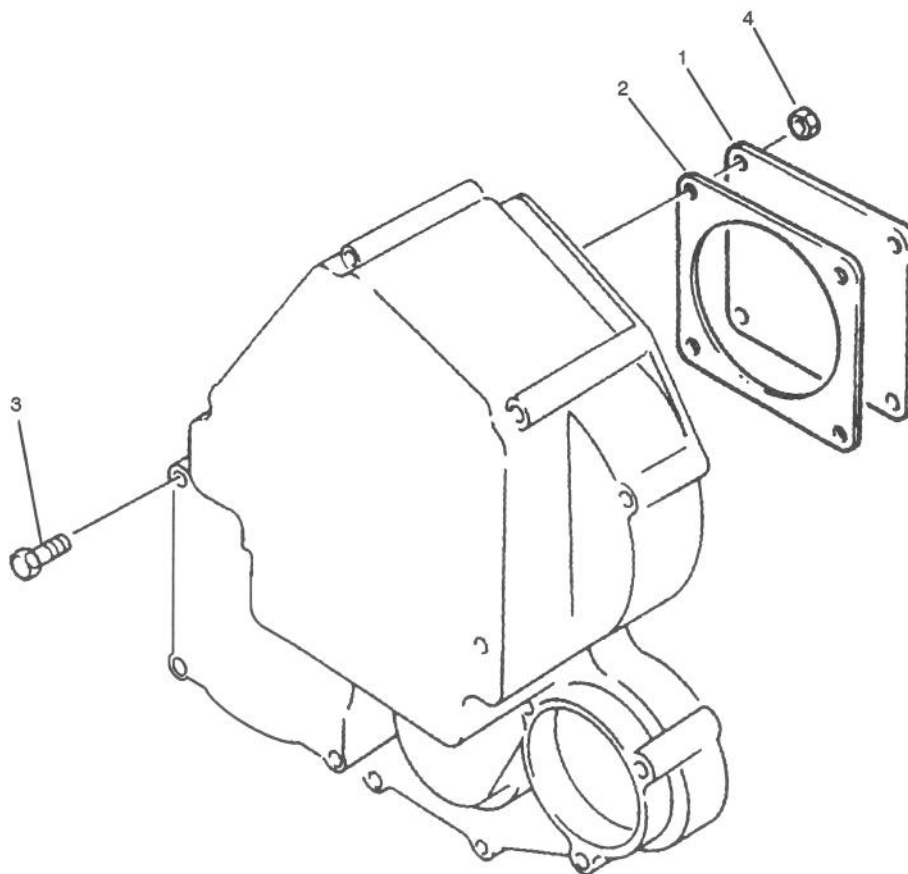 


T-1398

TIMING COVER PLATE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	165206360	Plate	1
2	165996420	Gasket	1

Ref. No.	Part No.	Description	No. Used
3	010110850	Screw	4
4	023100008	Nut	4

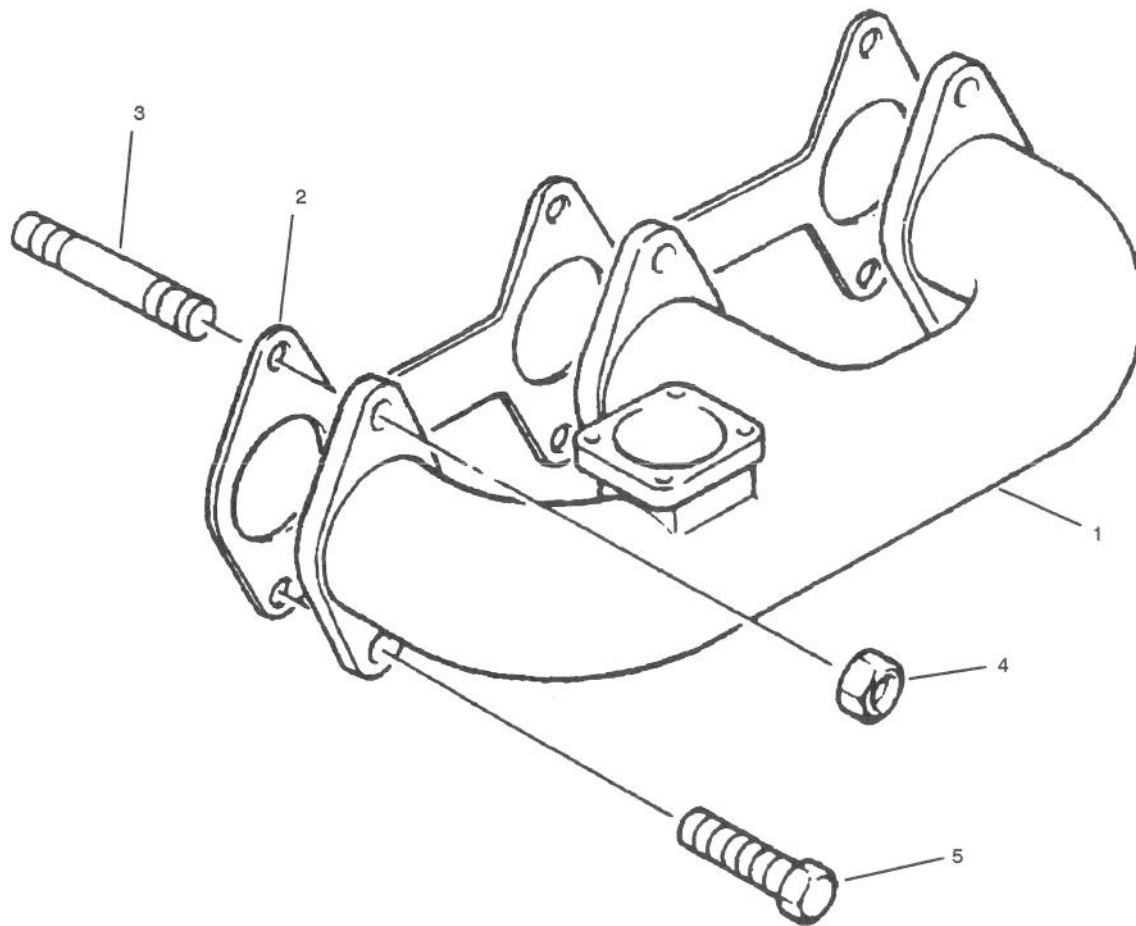 


T-1399

EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	135616630	Manifold – Exhaust	1
2	135996520	Gasket	1
3	012110625	Stud	3


Ref. No.	Part No.	Description	No. Used
4	023100006	Nut	3
5	011310625	Screw	3

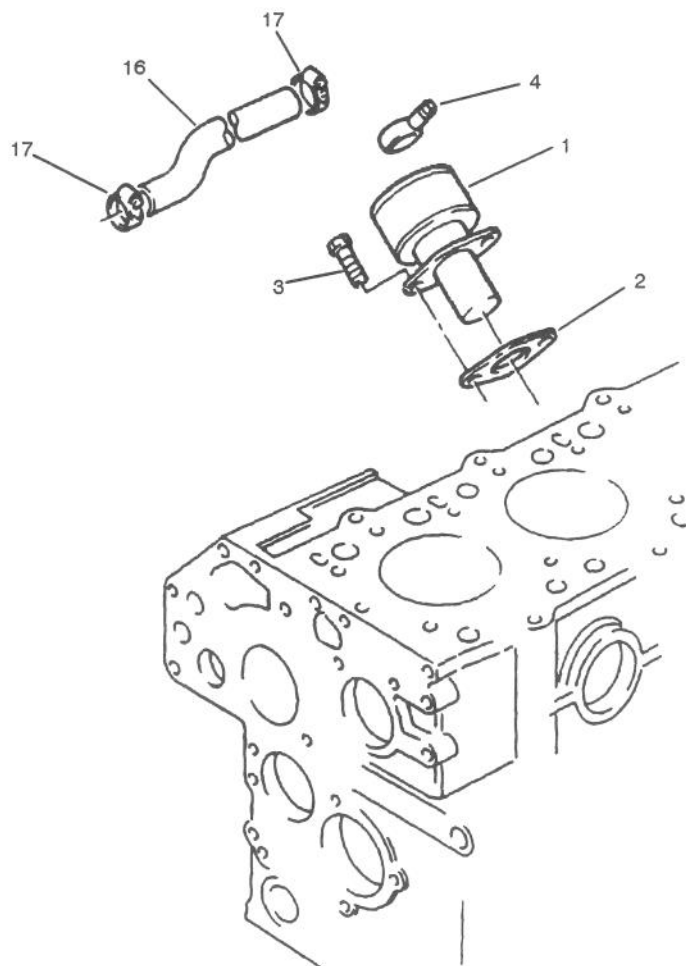 

T-1400

LOW PRESSURE FUEL SYSYEM ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	130506140	Pump – Lift	1	4	198486840	Connection	2
2	130996070	Gasket	1	16	068209084	Hose	1
3	011140616	Screw	2	17	067100015	Clip	2

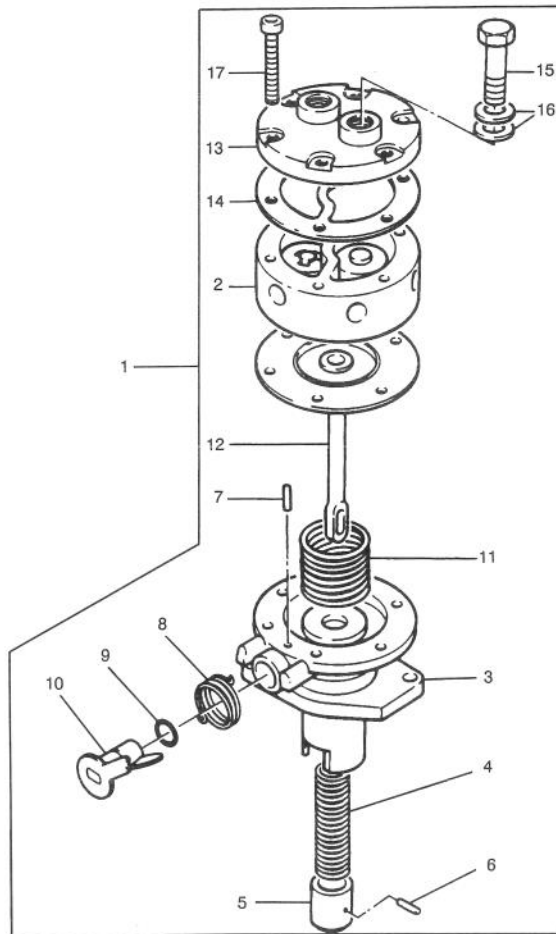 

T-1401

LIFT PUMP ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	130506140	Lift Pump Assembly (Incl. Ref. #2)	1	9	131226180	Seal - O-Ring	1
2		Body	1	10	130516086	Lever	1
3	130516080	Body	1	11	130516087	Spring	1
4	130516081	Spring	1	12	130516084	Diaphragm	1
5	130516082	Plunger	1	13	130516090	Cap	1
6	130516085	Pin	1	14	130516089	Gasket	1
7	130516088	Pin	1	15	130516092	Bolt	2
8	130516083	Spring	1	16	130516069	Washer	4
				17	130516091	Screw	6

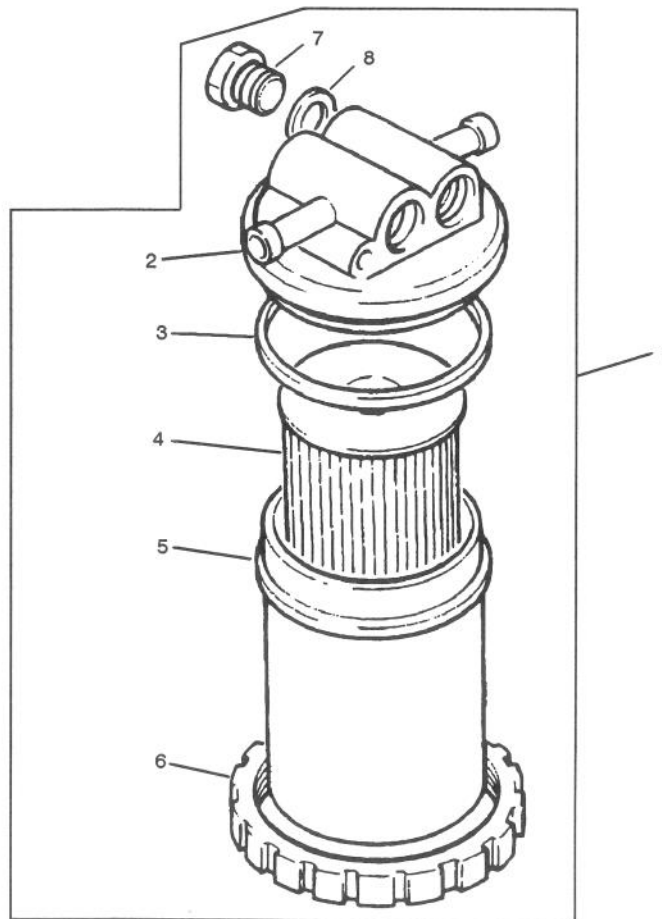 

T-1402

FUEL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	130306041	Fuel Filter Assembly (Incl. Ref. #2)	1	5	130336031	Container	1
2		Head	1	6	130446090	Seal - O-Ring	1
3	052100440	Seal - O-Ring	1	7	130446080	Plug	2
4	130366040	Element	1	8	130326120	Washer	2

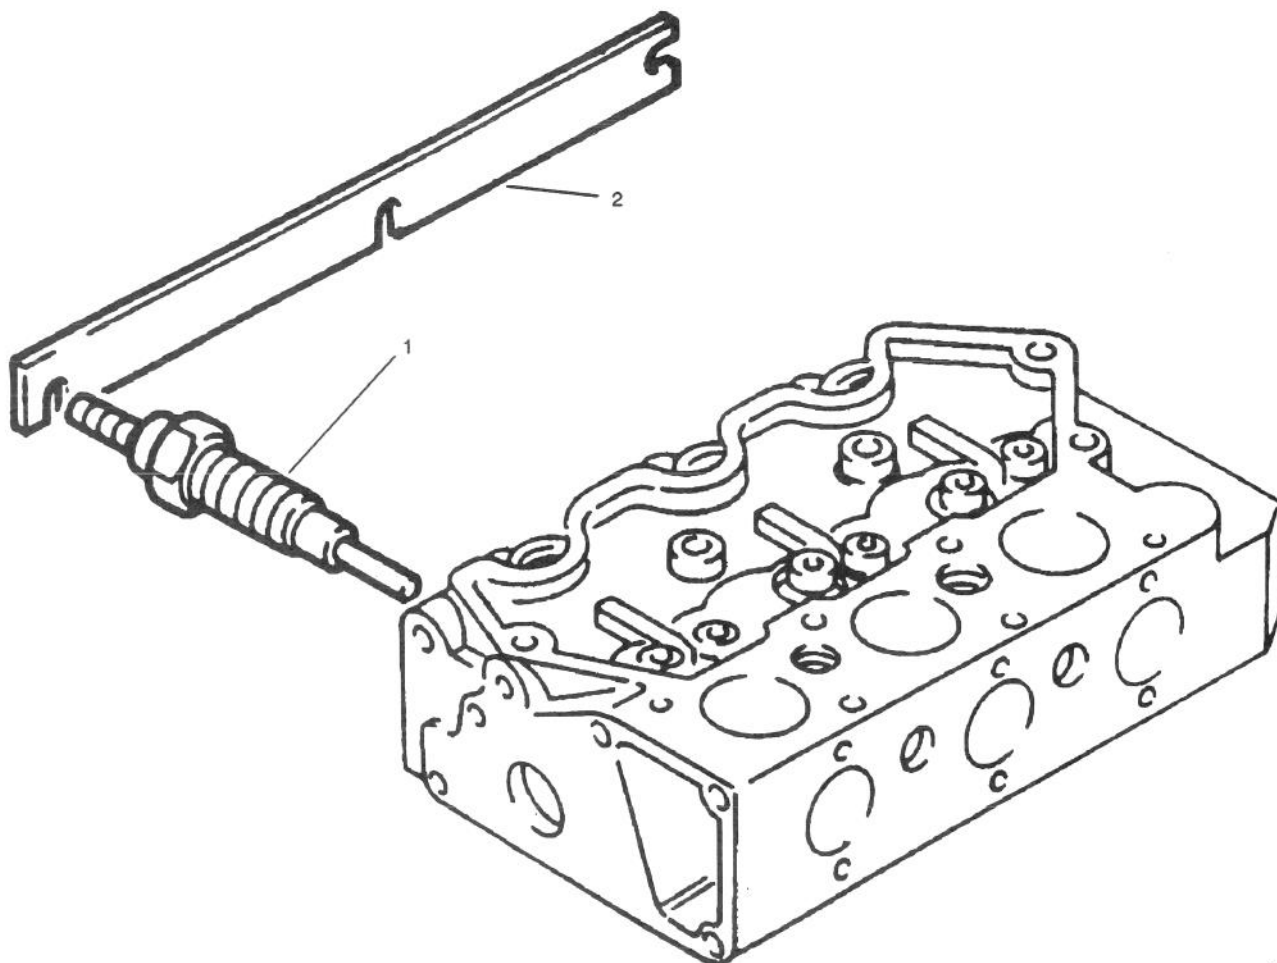 


T-1403

COLD START SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185366060	Heater	3

Ref. No.	Part No.	Description	No. Used
2	185376170	Bar	1

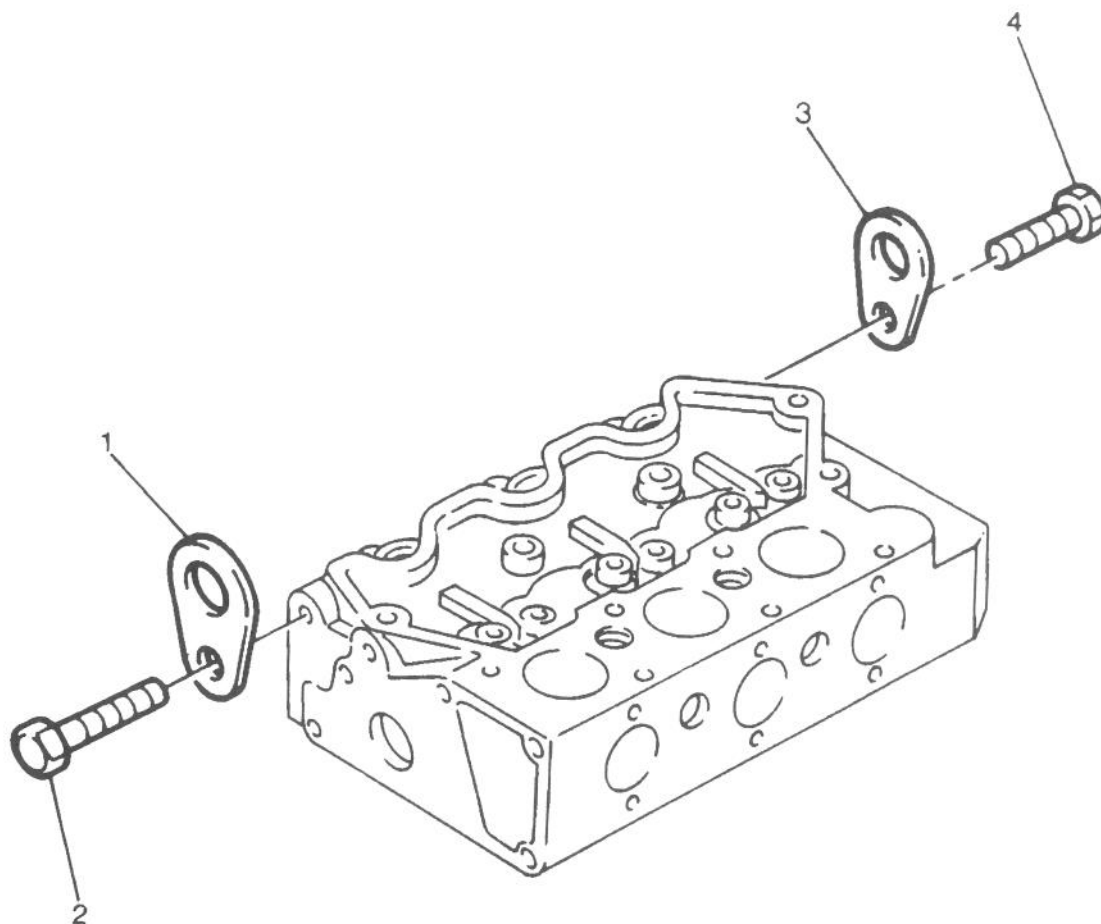 


T-1404

ENGINE LIFTING TAB ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	195816200	Plate	1
2	011310816	Screw	1

Ref. No.	Part No.	Description	No. Used
3	195816200	Plate	1
4	011310816	Screw	1

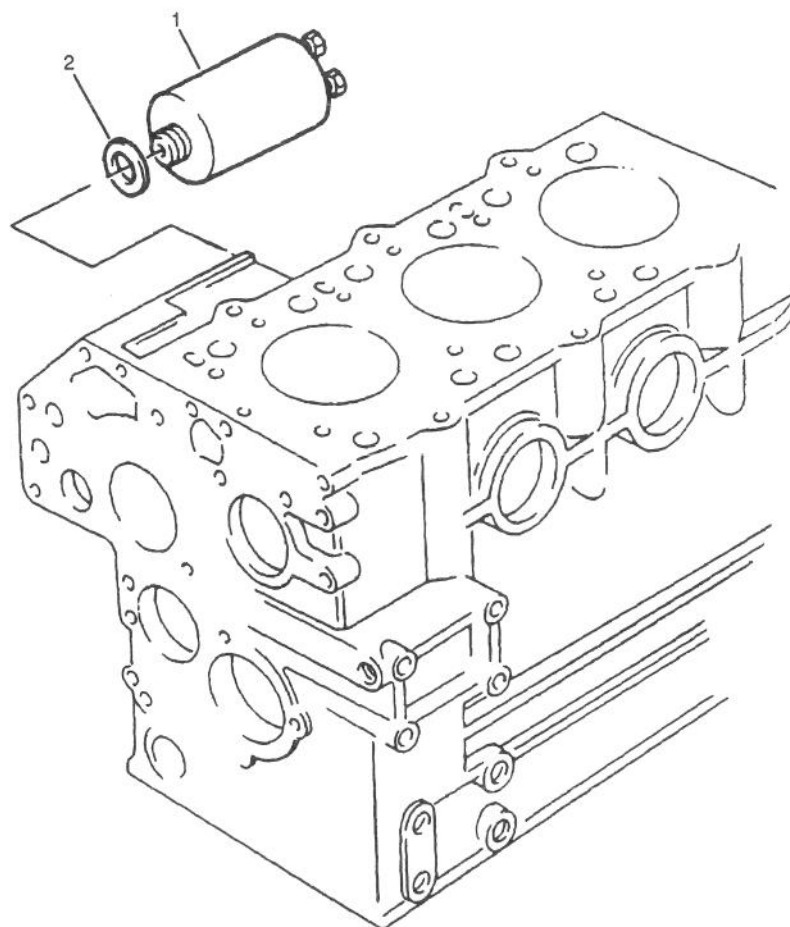 


T-1405

THROTTLE STOP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185206082	Solenoid	1

Ref. No.	Part No.	Description	No. Used
2	025100016	Washer	1

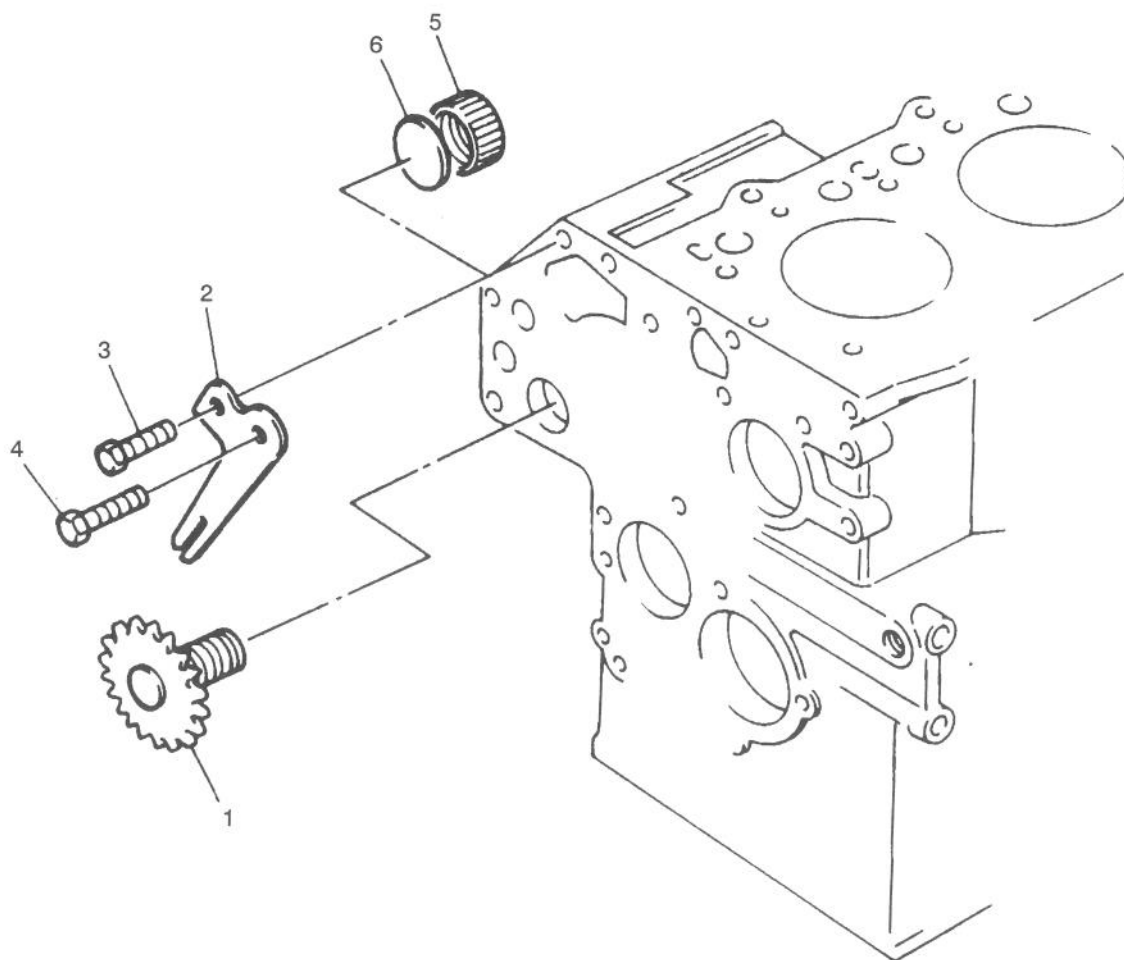 


RECORDER ASSEMBLY

T-1406

Ref. No.	Part No.	Description	No. Used
1	120076070	Shaft	1
2	199566651	Plate	1
3	011310612	Screw	1

Ref. No.	Part No.	Description	No. Used
4	010700610	Screw	1
5	199376230	Cap	1
6	120996060	Seal	1

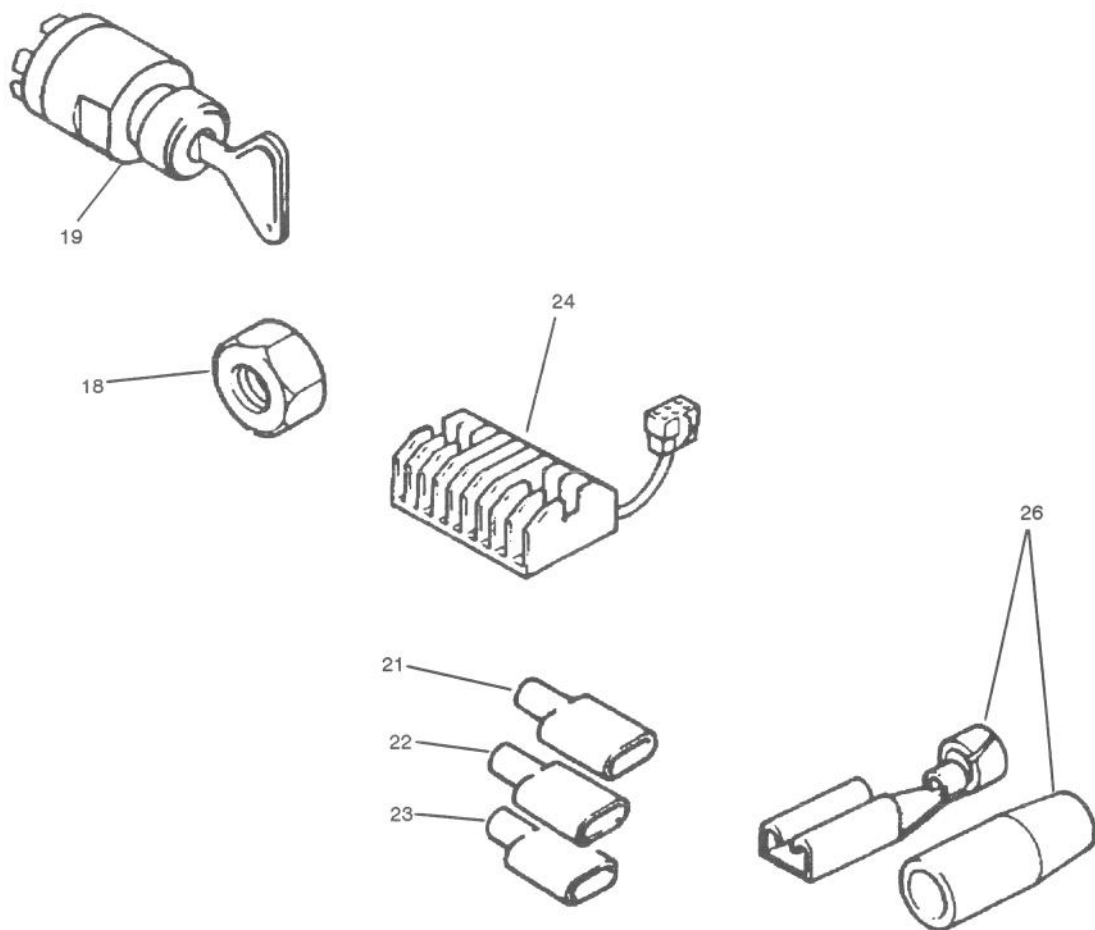 

T-1407

ELECTRICAL COMPONENT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
18	020100008	Nut	1
19	385201160	Switch	1
21	385620010	Connection	1
22	385620280	Connection	2

Ref. No.	Part No.	Description	No. Used
23	385620270	Connection	1
24	185516060	Regulator	1
26	385620200	Connection	2

INTERNATIONAL DECAL CROSS REFERENCE

JAPANESE DECAL KIT NO. 85-5110

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	JAPANESE
Decal Control	Skirt Panel	80-4220	84-6960
Decal Service	Skirt Panel	83-8900	84-7180
Panel Starting Fluid	Control Panel	83-9150	84-6660
Decal Parking Brake	Left Fender	84-1650	84-6860
Decal Warning	Fan Top Shroud	77-3100	84-6760
Decal Warning	Skirt Panel	83-9550	84-7080
Decal Warning	Hydraulic Tank Support	67-5360	84-7280
Decal Warning	Cutting Unit Top Shields	62-5070	84-6560
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2940

ITALIAN DECAL KIT NO. 85-5120

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	ITALIAN
Decal Control	Skirt Panel	80-4220	84-6950
Decal Service	Skirt Panel	83-8900	84-7170
Panel Starting Fluid	Control Panel	83-9150	84-6650
Decal Parking Brake	Left Fender	84-1650	84-6850
Decal Warning	Fan Top Shroud	77-3100	84-6750
Decal Warning	Skirt Panel	83-9550	84-7070
Decal Warning	Hydraulic Tank Support	67-5360	84-7270
Decal Warning	Cutting Unit Top Shields	62-5070	84-6550
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2910

SWEDISH DECAL KIT NO. 85-5060

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SWEDISH
Decal Control	Skirt Panel	80-4220	84-6990
Decal Service	Skirt Panel	83-8900	84-7210
Panel Starting Fluid	Control Panel	83-9150	84-6690
Decal Parking Brake	Left Fender	84-1650	84-6890
Decal Warning	Fan Top Shroud	77-3100	84-6790
Decal Warning	Skirt Panel	83-9550	84-7110
Decal Warning	Hydraulic Tank Support	67-5360	84-7310
Decal Warning	Cutting Unit Top Shields	62-5070	84-6590
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2870

GERMAN DECAL KIT NO. 85-5050

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	GERMAN
Decal Control	Skirt Panel	80-4220	84-6940
Decal Service	Skirt Panel	83-8900	84-7160
Panel Starting Fluid	Control Panel	83-9150	84-6640
Decal Parking Brake	Left Fender	84-1650	84-6840
Decal Warning	Fan Top Shroud	77-3100	84-6740
Decal Warning	Skirt Panel	83-9550	84-7060
Decal Warning	Hydraulic Tank Support	67-5360	84-7260
Decal Warning	Cutting Unit Top Shields	62-5070	84-6540
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2900

INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

SPANISH DECAL KIT NO. 85-5070

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SPANISH
Decal Control	Skirt Panel	80-4220	84-6980
Decal Service	Skirt Panel	83-8900	84-7200
Panel Starting Fluid	Control Panel	83-9150	84-6680
Decal Parking Brake	Left Fender	84-1650	84-6880
Decal Warning	Fan Top Shroud	77-3100	84-6780
Decal Warning	Skirt Panel	83-9550	84-7100
Decal Warning	Hydraulic Tank Support	67-5360	84-7300
Decal Warning	Cutting Unit Top Shields	62-5070	84-6580
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2900

FRENCH DECAL KIT NO. 85-5040

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	FRENCH
Decal Control	Skirt Panel	80-4220	84-6930
Decal Service	Skirt Panel	83-8900	84-7150
Panel Starting Fluid	Control Panel	83-9150	84-6630
Decal Parking Brake	Left Fender	84-1650	84-6830
Decal Warning	Fan Top Shroud	77-3100	84-6730
Decal Warning	Skirt Panel	83-9550	84-7050
Decal Warning	Hydraulic Tank Support	67-5360	84-7250
Decal Warning	Cutting Unit Top Shields	62-5070	84-6530
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2800

DANISH DECAL KIT NO. 85-5130

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	DANISH
Decal Control	Skirt Panel	80-4220	84-6900
Decal Service	Skirt Panel	83-8900	84-7120
Panel Starting Fluid	Control Panel	83-9150	84-6600
Decal Parking Brake	Left Fender	84-1650	84-6800
Decal Warning	Fan Top Shroud	77-3100	84-6700
Decal Warning	Skirt Panel	83-9550	84-7020
Decal Warning	Hydraulic Tank Support	67-5360	84-7220
Decal Warning	Cutting Unit Top Shields	62-5070	84-6500
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2930

DUTCH DECAL KIT NO. 85-5080

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	DUTCH
Decal Control	Skirt Panel	80-4220	84-6910
Decal Service	Skirt Panel	83-8900	84-7130
Panel Starting Fluid	Control Panel	83-9150	84-6610
Decal Parking Brake	Left Fender	84-1650	84-8610
Decal Warning	Fan Top Shroud	77-3100	84-6710
Decal Warning	Skirt Panel	83-9550	84-7030
Decal Warning	Hydraulic Tank Support	67-5360	84-7230
Decal Warning	Cutting Unit Top Shields	62-5070	84-6510
Decal Warning	Cutting Unit Lift Arms	55-4300	84-2920

INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

FINNISH DECAL KIT NO. 85-5090

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	FINISH
Decal Control	Skirt Panel	80-4220	84-6920
Decal Service	Skirt Panel	83-8900	84-7140
Panel Starting Fluid	Control Panel	83-9150	84-6620
Decal Parking Brake	Left Fender	84-1650	84-6820
Decal Warning	Fan Top Shroud	77-3100	84-6720
Decal Warning	Skirt Panel	83-9550	84-7040
Decal Warning	Hydraulic Tank Support	67-5360	84-7240
Decal Warning	Cutting Unit Top Shields	62-5070	84-6520
Decal Warning	Cutting Unit Lift Arms	55-4300	84-7010

NORWEGIAN DECAL KIT NO. 85-5100

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	NORWEGIAN
Decal Control	Skirt Panel	80-4220	84-6970
Decal Service	Skirt Panel	83-8900	84-7190
Panel Starting Fluid	Control Panel	83-9150	84-6670
Decal Parking Brake	Left Fender	84-1650	84-6870
Decal Warning	Fan Top Shroud	77-3100	84-6770
Decal Warning	Skirt Panel	83-9550	84-7090
Decal Warning	Hydraulic Tank Support	67-5360	84-7270
Decal Warning	Cutting Unit Top Shields	62-5070	84-6570
Decal Warning	Cutting Unit Lift Arms	55-4300	84-7000

PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
03440	Full Roller Kit	42 * 1	25-3210	Seal - Lip	11 10 2
03445	Sectional Roller Kit	42 * 1	26-3790	Nut - Lock	31 21 1
03446	Skid Kit	41 23 1	26-3790	Nut - Lock	13 23 2
03447	Anti-Scalp Roller Kit	42 * 1	27-1850	Washer	37 57 1
03450	Wiehle Roller Kit	42 * 1	27-1850	Washer	40 61 1
3-0348	Bushing	35 3 6	27-9870	Pin - Seat	2 24 1
3-0348	Bushing	39 9 2	28-3420	Cone - Charge Relief	11 33 1
3-0348	Bushing - Sleeve	28 7 4	28-6180	Pin	2 23 1
3-0348	Bushing - Sleeve	29 17 2	29-6120	Plate - Pump	12 5 1
3-6498	Washer	14 50 2	29-6150	Spring - Leaf	12 9 1
3-6498	Washer - Thrust	7 7 A/R	29-6163	Switch	12 28 1
3-6498	Washer - Thrust	42 15 4	29-6163	Switch - Lift	26 4 1
3-9274	Spacer - Wheel	46 2 8	29-6170	Spring - Extended Leaf	12 7 1
4-7439	Wheel Assembly	46 31 4	29-8870	Washer	36 12 1
5-0743	Spring - Extension	29 1 1	29-8870	Washer - Flat	39 16 1
5-0743	Spring - Extension	28 17 2	29-9080	Handle	50 3 1
5-2653	Cable Pulley Assembly	26 8 1	29-9090	Hose - Handle	50 4 1
5-2655	Keeper - Cable	26 7 1	33-1300	Element Assembly	4 5 1
5-2656	Keeper - Cable	26 30 1	33-1310	Baffle	4 8 1
5-2891	Shaft - Wheel	46 28 4	33-1320	Cup	4 9 1
5-7280	Key - Square	22 1 3	33-1330	Nut Assembly	4 6 1
5-7290	Spring - Extension	13 6 1	33-1340	Clamp Assembly	4 7 1
10-6821	Brake Drum Assembly	13 18 2	33-1350	Band Assembly	4 3 2
10-6830	Stud - Drive	31 16 4	33-1350	Clamp Assembly	3 60 2
10-6870	Hub - Wheel	13 19 2	36-4310	Brush	50 5 1
10-6870	Hub - Wheel	31 22 1	36-7290	Spindle - Fan	20 49 1
10-7070	Key - Square	22 13 1	37-9090	Belt - V	20 2 1
11-9760	Screw - Hex. Flange Hd.	12 25 3	37-9590	Spring - Compression	2 22 1
12-7059	Reel Assy. - 5 Blade	40 * 1	39-9500	Washer - Flat	33 11 2
12-7079	Reel Assy. - 5 Blade	40 57 1	40-3790	Bottom Rail Assembly R.H.	33 40 1
12-7089	Reel Assembly - 8 Blade	37 * 1	40-3820	Bottom Rail Assembly L.H.	33 33 1
12-7099	Reel Assembly - 8 Blade	37 54 1	42-9850	Washer	21 61 1
12-9140	Decal	50 1 1	43-1950	Lift Valve Assembly	24 4 1
13-1699	Reel Assembly - 11 Blade	37 * 1	43-8600	Spring - Compression	2 28 1
13-1709	Reel Assembly - 11 Blade	37 * 1	43-8610	Guide - Spring	2 27 1
13-3649	Overhaul Kit	37 * 1	43-8620	Guide - Pin	2 30 1
13-3649	Overhaul Kit	40 * 1	43-8860	Plunger - Switch	2 29 1
21-0140	Rod End Assembly	7 27 1	43-8870	Boot - Switch	2 32 1
21-0140	Rod End Assembly	31 30 1	43-9071	Seat Switch Assembly	3 * 1
22-8330	Plug	25 1 2	44-2212	Light Assembly	5 45 1
22-8340	Spring	25 3 2	46-8810	Stop - Spring	12 1 1
22-8350	Ball	25 4 2	48-1800	Cylinder Block Kit	11 5 1
22-8360	Pin - Cam	25 6 2	48-7700	Screw - Cap Hex. Hd.	20 14 6
22-8370	Seat - Check Valve	25 5 2	48-7780	Screw - Cap Hex. Hd.	20 29 16
22-8380	Retainer - Spring	25 10 2	48-8010	Washer - Flat	20 41 4
22-8410	Spring	25 11 1	48-9460	Screw - Cap Hex. Hd.	20 8 14
22-8420	Spool	25 8 1	48-9590	Washer - Lock	20 28 16
22-8480	Snap Ring - Spool	25 13 1	49-8480	Shaft - Trunion	11 28 1
22-8490	Snap Ring	25 14 1	49-8520	Kit - Implement Relief	11 * 1
22-8500	Seal - O-Ring	25 9 2	51-3150	Shim - Spring	12 6 1
23-2140	Hose - Fuel	32 23 1	52-2890	Bushing - Flanged (Nylon)	36 9 2
23-3030	Spacer	25 12 1	52-2890	Bushing - Flanged Nylon	39 13 2
24-0760	Cooler - Oil	8 20 1	52-2980	Pivot - Single Point Adjust	36 13 1
25-2380	Plate - Thrust	11 39 1	52-2980	Pivot - Single Point Adjust	39 17 1
25-2390	Plate - Valve	11 40 1	52-2990	Capscrew - Spring Retainer	36 16 1
25-2400	Gasket	11 43 1	52-2990	Capscrew - Spring Retainer	39 19 1
25-2430	Pin - Straight	11 41 1	52-3000	Arm - Spring	36 17 1
25-2450	Swash/Plate	11 37 1	52-3000	Arm - Spring	39 18 1
25-2460	Plug	11 14 2	54-0110	Element - Oil Filter	9 15 1
25-2470	Kit - Shim Pack	11 16 2	55-4300	Decal - Warning	28 9 2
25-2480	Spring - Charge Relief	11 32 1	55-4300	Decal - Warning	29 24 1
25-2490	Ball - Check Valve	11 47 2	55-4330	Arm Rest Assembly L.H.	33 1 1
25-2510	Washer	11 11 2	55-4331	Arm Rest Assembly R.H.	33 6 1
25-2530	Pin - Straight	11 26 1	55-8380	Seat Wire Assembly	33 32 1
25-2560	Cone - Relief Valve	11 18 1	56-2230	Hose - Fuel	32 11 1
25-2570	Spring - Relief Valve	11 17 1	56-2520	Valve - Fuel Shut-Off	32 9 1
25-2580	Shaft - Trunion	11 12 1	56-3800	Cushion - Seat Back	33 21 1
25-2620	Valve - By-Pass	11 4 1	56-3810	Platform - Seat	33 1 1
25-2630	Ring	11 3 1	56-3820	Cover - Seat Sack	33 17 1
25-2640	Spring - Check Valve	11 48 2	56-3850	Screw - Hex. Hd. Machine	33 4 2
25-2650	Plug - Check Valve	11 50 2	56-3870	Knob - Adjustment	33 3 1
25-2680	Gerotor Assembly	11 25 1	56-3880	Washer - Flat	33 2 2
25-2690	Housing - Charge Pump	11 21 1	56-3890	Nut - Hex.	33 7 1
25-3180	Kit - Check Valve	11 * 1	56-3900	Spacer - Arm L.H.	33 26 1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
56-3910	Spacer - Arm R.H.	33 1	61-0860	Right Carrier Frame Assy.	35 10 1
56-3920	Bushing - Sleeve	33 27 4	61-0870	Rear Carrier Frame Assy.	35 1 1
56-3930	Washer - Flat	33 28 4	61-0880	Left Carrier Frame Assy.	35 14 1
56-3940	Washer - Lock	33 29 4	61-0890	Bracket - Carrier	36 33 1
56-3950	Screw - Cap Hex. Hd.	33 30 4	61-0900	Bracket - Tensioner	39 3 1
56-3960	Cover - Screw	33 5 4	61-0900	Bracket - Tensioner/Carrier	36 2 1
56-3970	Carrier - Seat	33 8 2	61-0910	Bracket - Angle	38 9 4
56-3980	Clip - Rail	33 9 4	61-0910	Bracket - Angle	41 10 2
56-3990	Screw - Machine	33 39 2	61-0930	Frame - Reel	36 7 1
56-4020	Screw - Machine	33 36 4	61-0940	Sideplate - Adjust	39 29 1
56-4030	Washer - Lock	33 37 4	61-0940	Sideplate - Adjust	36 40 1
56-4040	Plate - Back	33 12 1	61-0970	Housing - Bedbar Adj.	36 43 1
56-4050	Spring - Extension	33 14 1	61-0970	Housing - Bedbar Adj.	40 44 1
56-4060	Spring - Extension	33 24 1	61-1010	Bedbar Housing	36 48 1
56-4080	Clamp - Axle	33 10 2	61-1010	Bedbar Housing	40 50 1
56-4100	Bracket - Lever	33 22 1	61-1050	Front Support - L.H.	39 8 1
56-4120	Cover	33 20 1	61-1070	Handle - Assembly	36 19 1
56-4130	Bumper	33 19 2	61-1070	Handle - Assembly	39 25 1
56-4150	Lever - Handle	33 16 1	61-1130	Rear Grass Guard	36 24 1
56-4160	Washer - Flat	33 18 2	61-1130	Rear Grass Guard	39 28 1
56-4170	Pin - Clevis	33 23 1	61-1190	Support - Basket (Front)	46 5 2
56-4190	Cap - Seat	33 25 2	61-1210	Bedbar	36 46 1
56-7976	Clamp - Hose	31 6 2	61-1210	Bedbar	40 49 1
56-7976	Clamp - Hydraulic Tube	16 5 2	61-1250	Bracket - Basket L.H.	47 25 1
56-7977	Clamp - Hydraulic Tube	16 17 2	61-1260	Bracket - Basket R.H.	47 4 1
56-9510	Bushing	38 17 4	61-1270	Bracket - Basket L.H.	46 22 2
56-9510	Bushing Assembly	30 10 2	61-1280	Bracket - Basket R.H.	46 4 2
56-9510	Bushing Assembly	41 18 2	61-1320	Sideplate	36 5 1
56-9510	Bushing Assembly	40 45 2	61-1320	Sideplate - Reel	40 62 1
56-9510	Bushing Assy.	36 38 2	61-1330	Front Grass Basket Assy.	46 3 2
56-9520	Bushing - Flanged	38 16 2	61-1340	Rear Grass Basket Assy.	47 14 1
56-9520	Bushing - Flanged	41 17 1	61-1370	Spacer	35 5 6
56-9520	Bushing - Flanged	36 39 2	61-1950	Washer - Bedbar	36 47 1
56-9520	Bushing - Flanged	40 46 2	61-1950	Washer - Bedbar	40 53 1
56-9520	Bushing - Nylon	30 16 1	61-2010	Pinion - Steering	7 15 1
57-4910	Screw - Special	36 44 10	61-2040	Rack - Steering	7 4 1
57-4910	Screw - Special	40 47 10	61-2070	Rod - Steering	7 5 1
57-5190	Screw - Adjustment	36 49 2	61-2070	Rod - Steering	31 28 1
57-5190	Screw - Adjustment	40 51 2	61-2080	Shaft - Steering	7 18 1
57-5260	Pin - S.P.A.	36 22 1	61-2090	Steering Column Assembly	7 21 1
57-5260	Pin - S.P.A.	39 27 1	61-2350	Support - Bearing	22 6 2
57-5270	Spring - Compression	36 11 1	61-2370	Spacer	12 16 2
57-5270	Spring - Compression	39 15 1	61-2430	Hub - Lift	26 45 1
57-5420	Screw - Shoulder	9 5 1	61-2610	Arm - Traction	12 14 1
57-6390	Nut	21 60 1	61-2790	Screen - Filler	9 8 1
59-2150	Taper Lock Bushing Assy.	10 20 1	61-2830	Lift Arm Assembly R.H.	28 * 1
61-0080	Hydraulic Pump Assembly	11 8 1	61-2880	Lift Arm Assembly L.H.	28 8 1
61-0140	Pulley - Reel	22 4 3	61-2890	Lift Arm Assembly	29 29 1
61-0380	Cap - Full Roller	42 1 2	61-2900	Shaft - Pivot R.H.	28 * 1
61-0380	Cap - Roller	38 11 2	61-2930	Shaft - Pivot	29 7 1
61-0380	Cap - Roller	41 11 2	61-2930	Shaft - Pivot L.H.	28 29 1
61-0400	Shaft - Full/Wiehle Roller	42 2 2	61-2990	Spacer - Switch	26 3 1
61-0400	Shaft - Roller	38 12 1	61-3000	Rod - Pivot	28 13 2
61-0400	Shaft - Roller	41 12 1	61-3000	Rod - Pivot	29 26 1
61-0410	Full Roller Assembly	38 * 1	61-3160	Hanger - Basket (Front)	46 7 2
61-0410	Full Roller Assembly	42 * 1	61-3170	Baffle - Grass	47 11 1
61-0410	Roller Assembly	41 * 1	61-3170	Baffle - Grass	46 24 2
61-0420	Support - HOC	38 5 4	61-3210	Cable Pulley Assembly	26 22 3
61-0420	Support - HOC	41 6 2	61-3230	Spacer	26 24 3
61-0430	Bracket - Rear	38 15 2	61-3240	Keeper - Cable	26 21 1
61-0430	Bracket - Rear	41 16 2	61-3270	Spring - Compression	28 6 2
61-0440	Bracket - Front	38 23 2	61-3280	Cover - End	46 14 4
61-0500	Spacer - Bearing	39 32 1	61-3290	Cover - Middle	46 12 4
61-0500	Spacer - Reel	36 32 1	61-3360	Joint - Universal	7 17 1
61-0550	Shield - Top	39 23 2	61-3380	V-Belt	39 5 1
61-0560	Shield - Top	36 27 1	61-3380	V-Belt - Reel	36 4 1
61-0590	Scraper - Roller	43 1 3	61-3600	Tab - Lift	35 13 3
61-0610	Guard - Side	39 37 1	61-3660	Front Support - R.H.	39 * 1
61-0660	Reel Frame	40 58 1	61-3790	Plate - HOC Front	38 10 2
61-0670	Rear Support	39 * 1	61-3800	Plate - HOC Rear	38 3 2
61-0710	Bushing Assembly	35 7 6	61-3810	Plate - HOC	41 4 2
61-0750	Defector - Grass	46 10 2	61-3820	Retainer - Cable	29 21 1
61-0790	Screw - Cap Hex Hd.	38 4 4	61-3830	Chain - Lift	26 33 2
61-0790	Screw - Cap Hex. Hd.	41 5 2	61-3990	Parking Brake Assembly	13 5 1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
61-7250	Boot	28 5 4	67-8080	Bearing - Needle	11 42 1
62-4290	O-Ring	11 44 2	67-8090	Cap - Pump End	11 45 1
62-4970	Sectional Roller Assembly	42 * 1	67-9430	Plate - Comb	44 4 1
62-4990	Shaft - Anti-Scalp Roller	42 11 1	67-9450	Support - Comb	44 2 1
62-5070	Decal - Warning	37 59 1	67-9470	Comb	44 3 1
62-5070	Decal - Warning	40 66 1	67-9760	Washer	36 36 2
62-5070	Decal - Warning	46 11 2	67-9760	Washer - Flat	39 33 2
62-5130	Flap - Rubber	47 16 1	68-8990	Head - Oil Filter	9 19 1
62-5180	Bedknife - 7 In. Reel	36 45 1	69-0760	Bracket - Arm L.H.	34 * 1
62-5180	Bedknife - 7 In. Reel	40 48 1	69-0770	Bracket - Arm R.H.	34 9 1
62-5510	Rubber Bushing Assembly	36 8 2	69-1170	Glass - Sight	9 2 1
62-5510	Rubber Bushing Assembly	39 12 2	69-1180	Armrest	34 11 2
62-7120	Spacer	37 60 1	69-1260	Spacer	34 10 4
62-7120	Spacer	40 65 1	69-4780	Clamp - Light Cluster	5 43 1
62-7170	Spacer	2 43 1	70-8150	Plate - Valve	15 7 1
62-7230	Hanger - Adjustable (Front)	46 17 2	70-8621	Cap - Fuel Tank	32 12 1
62-7240	Cover - Spring	29 2 1	70-8640	Cap - Hydraulic Reservoir	9 7 1
62-7250	Boot	29 18 2	70-9840	Shoe - Brake	13 16 4
62-7300	Chain	29 3 1	70-9850	Clip - Retaining	13 35 2
62-7400	Decal - TORO	1 10 1	70-9860	Pin - Pivot Brake	13 25 2
62-7410	Wiehle Roller Assembly	42 * 1	70-9870	Plate - Brake	13 27 2
62-7480	Bracket - Hanger	47 22 1	70-9880	Spring - Extension	13 17 4
62-7660	Washer - Shim	42 6 2	71-0710	Hydraulic Tube Assembly	17 3 1
62-7660	Washer - Shim (not used)	38 24 2	71-0840	Hydraulic Tube Assembly	17 6 1
62-7670	Shock Absorber - Seat	33 13 1	71-1220	Seal Repair Kit	18 * 1
62-9510	Washer - Flat	20 50 1	71-1370	Spring - Compression	26 35 1
63-1400	Guide - Cable	26 28 1	71-1380	Pin - Spring	26 34 1
63-4220	Spring - Compression	47 21 1	71-1500	Brake Assembly	14 * 2
63-5060	Roller - Anti-Scalp	42 17 2	71-2830	2 Position Valve Assembly	17 2 1
63-5090	Anti-Scalp Roller Assembly	42 * 1	71-2960	Valve - Flow Control	16 13 1
63-7430	Temperature Gauge Assy.	5 17 1	71-3382	Hose - Overflow	8 11 1
63-7590	Relay	5 34 1	71-3590	Nut - Adjustment	42 8 8
63-7590	Relay	2 39 1	71-3590	Nut - Adjustment	38 19 2
63-7620	Hose - Fuel	32 5 1	71-3590	Nut - Adjustment	41 20 2
63-7620	Hose - Fuel	20 18 1	71-3690	Pin - HOC	38 7 4
63-8140	Pulley - Idler	20 3 1	71-3690	Pin - HOC	41 8 2
63-8410	Washer - Flat	9 10 3	72-4190	Pin - Cylinder Guide	26 12 1
63-8410	Washer - Flat	32 17 3	72-4320	Switch - Seat	2 25 1
63-8740	Strap - Basket	47 17 1	72-4770	Belt - V	45 2 3
65-4500	Seal - Snap Ring	15 14 1	74-0720	Tube - Manual	2 14 1
65-4550	Valve - Check Ball	15 6 2	74-6110	Cam - Stop	12 35 1
65-4560	Plug - Hex (Hollow)	15 3 1	74-9100	Pad - Forward	12 11 1
65-4570	Seal - Square Ring	15 4 2	74-9110	Pad - Reverse	12 13 1
65-4580	Screw - Cap Hex Hd.	15 1 8	75-0540	Teather - Cap	9 4 1
65-4590	Ring - Snap	15 21 1	75-4703	Hose - Fuel	32 15 1
65-4600	Washer - Thrust	15 19 2	75-4703	Hose - Fuel	20 25 1
65-4610	Bearing - Thrust	15 20 1	75-4710	Harness - Warning Light	5 5 1
65-4620	Seal - O-Ring	15 12 1	75-6820	Hourmeter	5 3 1
65-4640	Key - Square	13 10 2	75-7730	Spacer	31 2 1
65-4640	Key - Square	15 11 1	76-0020	Hydraulic Cylinder Assembly	26 37 1
65-4640	Key - Woodruff	31 15 1	76-0030	Repair Kit	27 * 1
65-4660	Shaft	15 10 1	76-0040	Piston	27 8 1
65-4670	Body & Bearing Assembly	15 9 1	76-0050	Ring - Retaining	27 12 1
65-4680	Cover & Bearing Assembly	15 2 1	76-0090	Head	27 3 1
65-8270	Waher	21 57 1	76-0300	Housing - Bushing	30 12 1
66-2920	Spacer	12 36 1	76-0350	Housing - Bushing	30 2 1
66-2960	Cluster - Warning	5 7 1	76-0360	Cup - Retainer	30 6 1
66-3240	Cap - Radiator	8 9 1	76-0370	Bolt - Shoulder	29 12 2
66-5291	Hydraulic Motor Assembly	31 24 1	76-0370	Bolt - Shoulder	28 23 2
66-5291	Hydraulic Motor Assembly	13 30 2	76-0390	Spacer	30 15 1
66-5400	Seat Assembly	34 * 1	76-0410	Spring - Compression	30 7 1
66-6110	IGR Assembly	15 5 1	76-1420	Wheel - Steering	7 23 1
67-5360	Decal - Danger	3 57 1	76-2200	Footrest - Traction	1 5 1
67-5800	Flap - Basket Rear	47 23 1	76-2230	Seat Assembly	33 * 1
67-5840	Nut - Jam	37 56 1	76-2240	Cushion - Seat Bottom	33 31 1
67-5840	Nut - Jam	40 60 1	76-2260	Pad - Footrest Traction	1 6 1
67-5890	Hanger - Basket Rear	47 9 1	76-2290	Spacer	40 68 1
67-5910	Plate - Rear	47 8 1	76-2320	Shaft	27 4 1
67-5920	Support - Basket Rear	47 10 1	76-2330	Nut - Lock	27 5 1
67-8020	Shaft - Pump	11 6 1	76-2350	Seal/Retainer Assembly	15 * 1
67-8030	Plug Assembly	11 19 1	76-2360	Body Seal Kit	15 * 1
67-8040	O-Ring	11 20 1	76-2380	Shaft - Sectional Roller	42 18 1
67-8050	Bearing - Needle	11 22 1	76-2400	Roller - Sectional	42 14 2
67-8060	Seal - Lip	11 23 1	76-2430	Bracket - Debris Cleaner	37 64 1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
76-2430	Bracket - Debris Cleaner	40 73 1	83-8490	Belt - Drive	22 37 1
76-2430	Scraper - Pulley	28 2 2	83-8500	Muffler	20 52 1
76-2440	Support - Debris Cleaner	37 65 1	83-8510	Bracket - Fender L.H.	1 22 1
76-2440	Support - Debris Cleaner	40 74 1	83-8540	Belt - Pump Drive	10 21 1
76-2460	Bearing Assembly	22 7 2	83-8550	Hose - Air Cleaner	2 49 1
76-2490	Flange - Bearing (Lube)	36 31 2	83-8550	Hose - Air Intake	20 13 1
76-2490	Flange - Bearing (Lube)	39 39 2	83-8590	Cable - Lift	26 19 1
76-2500	Flange - Bearing	36 29 2	83-8620	Bracket - Idler	22 18 1
76-2500	Flange - Bearing	39 41 2	83-8630	Yoke - Belt Tension	22 22 1
76-2670	Plate - Seat Mounting	2 8 1	83-8720	Tank - Fuel	32 13 1
76-6471	Trim - Control Panel Bottom	2 41 1	83-8760	Rod - Control	12 20 1
77-3100	Decal - Warning	8 4 1	83-8770	Lever - Pump	12 23 1
80-4090	Hose - Hydraulic	17 5 2	83-8850	Grille - Front	1 29 1
80-4090	Hose - Hydraulic	31 14 2	83-8860	Shield - Grass Front R.H.	1 30 1
80-4130	Bushing	3 59 4	83-8880	Panel - Skirt	2 12 1
80-4220	Decal - Control	2 20 1	83-8890	Decal - Reelmaster 216-D	2 19 2
80-4250	Adjuster - R.H.	34 7 1	83-8900	Decal - Service Information	2 50 1
80-4260	Adjuster - L.H.	34 3 1	83-8920	Harness - Wire	6 1 1
80-4270	Pulley - Reel	36 3 1	83-9000	Battery	32 6 1
80-4280	Pulley - Reel, 5 Blade	39 4 1	83-9020	Belt - V	20 38 1
80-4290	Pulley - Reel	45 1 3	83-9030	Foam - Top	8 36 1
80-4690	Support - Scraper	44 7 2	83-9050	Hose - Radiator	8 34 1
80-6980	Latch - Hood	5 12 1	83-9060	Hose - Radiator	8 28 1
80-6990	Washer	26 18 4	83-9070	Hose - Coolant	20 11 1
80-7345	Hose	5 29	83-9070	Hose - Radiator	8 31 1
81-1690	Clamp - Throttle Cable	20 21 1	83-9080	Connector - Bleed	8 30 1
82-2400	Wihle Roller Weld Assy.	42 10 1	83-9130	Keeper - Cable	26 27 1
82-3110	Sensor - Temp	20 16 1	83-9140	Clutch Assembly	22 39 1
83-7270	Fork - Caster	31 10 1	83-9150	Decal - Starting Fluid	2 10 1
83-7540	Engine Assembly	20 54 1	83-9170	Right Channel Assembly	2 44 1
83-7550	Radiator Assembly	8 35 1	83-9210	Cable - Battery Neg.	32 8 1
83-7570	Frame Assembly	7 12 1	83-9210	Cable - Ground	20 31 1
83-7590	Pulley - Engine	20 55 1	83-9220	Cable - Battery Pos.	32 7 1
83-7610	Hub - Fan	20 44 1	83-9240	Hold-Down - Battery	32 21 1
83-7620	Spacer - Fan	20 42 1	83-9250	Lever - Brake	13 36 2
83-7630	Pulley - Fan	20 43 1	83-9270	Pivot - Brake L.H.	13 40 1
83-7690	Bracket - Idler	20 5 1	83-9310	Pivot - Brake R.H.	13 * 1
83-7700	Bracket - Alternator	20 34 1	83-9330	Shaft - Brake	13 41 1
83-7720	Reservoir - Hydraulic	9 1 1	83-9340	Shield - Grass	13 13 2
83-7780	Bracket - Support	9 24 1	83-9350	Rod - Parking Brake	13 1 1
83-7790	Collar	22 11 2	83-9390	Weight	48 1 1
83-7800	Sleeve	22 40 1	83-9440	Hydraulic Tube Assembly	16 2 1
83-7810	Spacer	22 35 2	83-9450	Tube - Hydraulic	16 19 1
83-7820	Shaft - Drive	22 2 1	83-9460	Tube - Hydraulic	16 4 1
83-7830	Retainer - Clutch	22 15 1	83-9460	Tube - Hydraulic	17 12 1
83-7840	Shroud - Fan Top	8 5 1	83-9470	Hydraulic Tube Assembly	16 1 1
83-7850	Shroud - Fan Bottom	8 32 1	83-9480	Tube - Hydraulic	16 18 1
83-7900	Belt Tensioner Assembly	29 11 2	83-9490	Tube - Hydraulic	16 15 1
83-7900	Belt Tensioner Assembly	28 24 2	83-9500	Tube - Hydraulic	16 9 1
83-7910	Rod	30 8 1	83-9500	Tube - Hydraulic	17 10 1
83-7930	Yoke	30 3 1	83-9550	Decal - Warning	2 11 1
83-7950	Hood	1 11 1	83-9600	Hose - Hydraulic	10 7 2
83-7970	Fitting - Hydraulic Bulkhead	8 39 2	83-9600	Hose - Hydraulic	16 21 2
83-7980	Bracket - Radiator Rear	8 12 1	83-9620	Hose - Hydraulic	24 12 1
83-7990	Bracket - Radiator Front	8 33 1	83-9620	Hose - Hydraulic	26 42 1
83-8040	Cover - Left	8 8 1	83-9630	Hose - Hydraulic	24 8 1
83-8070	Bracket - Radiator Bottom	8 18 1	83-9630	Hose - Hydraulic	10 28 1
83-8080	Key - Square	22 38 1	83-9640	Hose - Hydraulic	24 14 1
83-8110	Panel - Left	2 45 1	83-9640	Hose - Hydraulic	10 25 1
83-8120	Panel - Right Rear	2 4 1	83-9650	Hose - Hydraulic	10 1 1
83-8150	Screen - Radiator	8 17 1	83-9650	Hose - Hydraulic	9 21 1
83-8180	Decal - Instrument Panel	5 2 1	83-9651	Hose - Hydraulic	9 14 1
83-8190	Panel - Control	2 5 1	83-9660	Clevis	10 23 1
83-8190	Panel - Instrument	5 1 1	83-9670	Hose - Hydraulic	8 27 1
83-8210	Panel - Front Left	8 22 1	83-9670	Hose - Hydraulic	9 27 1
83-8220	Bracket - Muffler	20 51 1	83-9680	Screw - Cap Hex. Hd.	22 27 1
83-8230	Panel - Right Front	2 2 1	83-9690	Spring - Compression	22 26 1
83-8270	Pedal - Traction	12 12 1	83-9700	Fender - L.H.	1 15 1
83-8280	Throttle Assembly	5 30 1	83-9710	Footrest - L.H.	1 17 1
83-8320	Mount - Pump	10 12 1	83-9720	Fender - R.H.	1 1 1
83-8400	Pulley - Idler	22 20 1	83-9730	Step - Foot	2 36 1
83-8410	Pulley - Engine	20 48 1	83-9740	Footrest - R.H.	1 4 1
83-8420	Pulley - Clutch	22 36 1	83-9760	Bracket - Cylinder Support	26 1 1
83-8470	Bracket - Engine Mount	21 56 2	83-9800	Shield - Grass Front L.H.	1 20 1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
83-9810	Bushing - Flange	22 24 1	237-42	Seal - O-Ring	16 12 2
83-9840	Pad - Footrest L.H.	1 18 1	237-42	Seal - O-Ring	10 27 2
83-9880	Bracket - Fan Spindle	20 47 1	237-42	Seal - O-Ring	26 38 2
83-9910	Gasket - Muffler	21 58 1	237-54	Seal - O-Ring	18 7 2
83-9920	Bracket - Reservoir	9 13 1	237-65	Seal - O-Ring	16 3 3
83-9970	Latch - Hood	1 12 1	237-65	Seal - O-Ring	13 44 2
84-1650	Decal - Brake	1 19 1	237-71	Seal - O-Ring	2 42 1
84-1990	Rod - Adjusting	13 32 2	237-78	Sael - O-Ring	31 38 1
84-2000	Bracket - Brake	13 29 2	237-78	Seal - O-Ring	24 10 2
84-5560	Gear - Reel Shaft	49 5 3	237-78	Seal - O-Ring	16 24 2
84-5570	Plate - Attachment	49 * 2	237-78	Seal - O-Ring	14 46 2
84-5580	Plate - Attachment	49 3 1	237-79	Seal - O-Ring	10 4 4
84-5590	Gear - Driver	49 1 1	237-79	Seal - O-Ring	17 9 3
84-7770	Field & Rotor Assembly	23 1 1	237-79	Seal - O-Ring	9 18 1
84-7780	Armature Assembly	23 2 1	237-80	Seal - O-Ring	13 9 4
84-8440	Bushing - Flange	26 11 2	237-80	Seal - O-Ring	31 11 2
85-4870	Support - Hinge	1 26 1	237-81	Seal - O-Ring	9 3 4
85-4890	Hinge - Hood	1 31 1	237-86	O-Ring	11 15 2
85-4910	Air Cleaner (Complete)	4 * 1	237-95	O-Ring	11 27 1
85-4910	Air Cleaner Assembly	2 47 1	240-11	Grommet	9 9 3
85-4920	Hydraulic Pump Assembly	10 30 1	240-11	Grommet	32 16 3
85-4960	Pulley	10 16 1	240-13	Bumper	22 16 2
85-4980	Switch Assembly	5 24 1	242-50	Nut - Lug	31 19 4
85-4990	Hose - Hydraulic	24 20 1	242-50	Nut - Lug	13 22 8
85-4990	Hose - Hydraulic	16 26 1	242-76	Rim	31 18 1
85-5000	Plate - Throttle	5 36 1	249-53	Clamp - J	20 15 1
85-5010	Bracket - Right Front	3 54 1	2410-18	Plug	50 2 1
85-5030	Hose - Hydraulic	10 10 1	2410-73	Retainer - Teather	9 6 1
85-5030	Hose - Hydraulic	8 24 1	2411-52	End - Rod	12 17 1
85-5140	Foam - Hood	3 56 2	2411-53	End - Rod	12 22 1
85-5160	Lever - Lift Valve	24 2 1	2412-34	Clamp - Hose	10 2 1
85-5170	Sleeve	8 41 1	2412-34	Clamp - Hose	20 10 1
85-5180	Trim	2 51 2	2412-34	Clamp - Hose	8 29 5
85-5190	Hose - Hydraulic	24 22 1	2412-36	Clamp - Hose	10 9 1
85-5190	Hose - Hydraulic	31 36 1	2412-36	Clamp - Hose	32 10 2
85-5200	Clamp	31 34 1	2412-36	Clamp - Hose	9 26 1
85-5300	Hose - Hydraulic	16 25 1	2412-39	Clamp - R	16 7 1
85-5310	Hose - Hydraulic	26 41 1	2412-39	Clamp - R	2 17 3
85-5810	Hose - Hydraulic	24 13 1	2412-39	Clamp - R	20 35 2
85-6540	Stud - Drive	13 26 8	2412-41	Clamp - R	8 15 1
217-60	Rim	13 21 2	2412-67	Clamp - R	33 41 1
218-461	Nut - Hex.	2 33 2	2412-74	Clamp - R	8 3 1
218-469	Fuse - 15 Amp.	5 10 2	2412-92	Clamp - Hose	20 12 1
218-489	Fuse Holder Assembly	5 9 2	2412-92	Clamp - Hose	2 48 1
218-500	Nut - Hex.	5 22 2	2412-108	Clamp - Hose	32 4 4
218-562	Lens - Light	5 47 1	2412-108	Clamp - Hose	8 10 1
218-596	Tab	12 37 2	2412-108	Clamp - Hose	20 17 2
219-17	Bulb - Light	5 6 4	2412-133	Clamp - R	2 16 2
219-18	Bulb - Light	5 46 1	251-8	Bearing - Ball	11 35 1
231-127	Tire	31 17 1	251-77	Collar - Locking	22 9 2
231-127	Tire	13 20 2	251-259	Bearing - Ball	12 31 1
232-14	Screw - Cap Hex. Hd.	48 *{ 3	251-270	Bearing - Ball	49 2 1
232-27	Valve - Stem	13 24 2	251-331	Bearing	36 30 2
232-47	Valve - Stem	31 20 1	251-331	Bearing	39 40 2
233-37	Knob	24 1 1	251-337	Bearing - Ball	22 8 2
233-46	Knob	18 9 1	252-82	Bearing - Needle	11 9 2
237-7	Seal - O-Ring	2 31 1	252-112	Cone - Bearing (Inner)	42 12 2
237-21	Seal - O-Ring	24 18 2	253-84	Seal	36 20 1
237-21	Seal - O-Ring	14 47 3	253-84	Seal	39 22 1
237-22	O-Ring	11 2 1	253-152	Seal - Inner	42 3 2
237-22	Seal - O-Ring	18 2 1	253-152	Seal - Inner	41 13 2
237-22	Seal - O-Ring	17 4 2	253-152	Seal - Inner	38 22 2
237-22	Seal - O-Ring	24 7 5	253-153	Seal - Outer	42 7 6
237-22	Seal - O-Ring	31 13 3	253-153	Seal - Outer	38 20 2
237-22	Seal - O-Ring	26 40 2	253-153	Seal - Outer	41 21 2
237-30	Seal - O-Ring	10 6 4	254-78	Cone - Bearing	38 21 2
237-30	Seal - O-Ring	13 7 2	254-78	Cone - Bearing	41 22 2
237-30	Seal - O-Ring	17 7 4	254-78	Cone - Bearing (Outer)	42 5 6
237-30	Seal - O-Ring	16 10 7	254-79	Cup - Bearing	38 13 2
237-30	Seal - O-Ring	2 26 1	254-79	Cup - Bearing	41 14 2
237-30	Seal - O-Ring	8 38 2	254-79	Cup - Bearing (Outer)	42 4 8
237-37	Bumper - Rubber	2 6 2	256-1	Bushing - Sleeve	26 23 3
237-42	Seal - O-Ring	25 2 2	256-2	Bushing - Sleeve	26 44 1
237-42	Seal - O-Ring	24 5 1	256-27	Bushing - Sleeve	7 19 2

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
256-90	Bushing - Flange	46 30 8	322-9	Screw - Cap Hex. Hd.	31 9 1
256-115	Washer - Thrust	28 12 2	322-9	Screw - Cap Hex. Hd.	12 18 2
256-115	Washer - Thrust	29 25 1	322-12	Screw - Cap Hex. Hd.	7 26 1
256-117	Bushing - Flange	7 8 4	322-17	Screw - Cap Hex. Hd.	13 2 1
256-117	Bushing - Flanged	42 16 4	322-17	Screw - Cap Hex. Hd.	12 8 1
256-173	Bushing - Sleeve	30 11 1	322-17	Screw - Cap Hex. Hd.	22 31 9
256-245	Bushing - Flange	7 9 2	323-5	Screw - Cap Hex. Hd.	9 11 3
256-247	Bushing - Flange	7 13 2	323-5	Screw - Cap Hex. Hd.	32 18 3
256-285	Bushing - Flange	35 6 12	323-6	Screw - Cap Hex. Hd.	38 1 8
256-287	Bushing - Flange	7 14 2	323-6	Screw - Cap Hex. Hd.	41 2 5
256-320	Bushing	1 32 2	323-6	Screw - Cap Hex. Hd.	39 6 8
257-5	Washer - Thrust	36 21 4	323-6	Screw - Cap Hex. Hd.	36 23 6
257-5	Washer - Thrust	39 21 4	323-7	Screw - Cap Hex. Hd.	41 1 3
257-6	Bearing - Thrust	36 18 2	323-7	Screw - Cap Hex. Hd.	43 2 6
257-6	Bearing - Thrust	39 26 2	323-7	Screw - Cap Hex. Hd.	47 2 4
2710-16	Connecting Link Assembly	24 3 1	323-7	Screw - Cap Hex. Hd.	49 4 6
281-1	Plug - Pipe	8 37 2	323-7	Screw - Cap Hex. Hd.	44 5 2
281-7	Plug - Pipe	8 1 1	323-7	Screw - Cap Hex. Hd.	29 8 1
282-2	Clevis	13 34 2	323-7	Screw - Cap Hex. Hd.	46 20 8
282-4	Clevis	29 5 1	323-7	Screw - Cap Hex. Hd.	28 28 2
282-4	Clevis	28 21 2	323-7	Screw - Cap Hex. Hd.	37 55 5
282-4	Clevis	26 31 4	323-7	Screw - Cap Hex. Hd.	40 59 2
283-1	Pin - Clevis	29 20 1	323-9	Screw - Cap Hex. Hd.	39 1 1
283-1	Pin - Clevis	13 37 2	323-9	Screw - Cap Hex. Hd.	34 13 2
283-2	Pin - Clevis	10 24 1	323-10	Screw - Cap Hex. Hd.	48 5 2
283-6	Pin - Clevis	29 6 1	323-10	Screw - Cap Hex. Hd.	48 2 3
283-6	Pin - Clevis	26 14 4	323-11	Screw - Cap Hex. Hd.	11 46 4
283-6	Pin - Clevis	28 20 2	323-12	Screw - Cap Hex. Hd.	39 10 1
283-8	Pin - Clevis	28 26 2	323-13	Screw - Cap Hex. Hd.	26 46 1
283-8	Pin - Clevis	29 32 1	323-15	Screw - Cap Hex. Hd.	22 19 1
283-40	Pin - Clevis	28 3 2	323-17	Screw - Cap Hex. Hd.	26 20 2
283-40	Pin - Clevis	29 14 2	325-6	Screw - Cap Hex. Hd.	31 1 1
283-42	Pin - Clevis	26 9 1	325-7	Screw - Cap Hex. Hd.	10 13 2
283-49	Pin - Clevis	2 7 2	325-10	Screw - Cap Hex. Hd.	35 8 2
283-55	Pin - Clevis	30 5 1	325-11	Screw - Cap Hex. Hd.	31 25 4
283-62	Pin - Clevis	20 19 1	325-11	Screw - Cap Hex. Hd.	13 28 8
283-78	Pin - Clevis	26 36 1	325-18	Screw - Cap Hex. Hd.	10 15 1
285-17	Plug - Pipe	11 1 6	3210-7	Screw - Cap Hex. Hd.	12 30 1
302-5	Fitting - Grease	35 2 3	3211-4	Screw - Cap Hex. Hd.	36 34 2
302-5	Fitting - Grease	31 3 1	3211-4	Screw - Cap Hex. Hd.	39 35 2
302-5	Fitting - Grease	39 7 2	3212-34	Clamp - Hose	9 16 3
302-5	Fitting - Grease	42 9 8	3217-6	Nut	36 42 1
302-5	Fitting - Grease	30 14 1	3217-6	Nut	39 43 1
302-5	Fitting - Grease	36 15 1	3217-6	Nut - Hex.	1 23 4
302-5	Fitting - Grease	38 18 2	3217-16	Nut - Lock	12 3 2
302-5	Fitting - Grease	41 19 2	3218-2	Nut - Hex.	1 9 2
302-5	Fitting - Grease	7 24 3	3218-3	Nut - Jam	7 3 2
302-5	Fitting - Grease	22 33 2	3218-3	Nut - Jam	43 4 6
302-11	Fitting - Grease	36 * 2	3218-3	Nut - Jam	45 4 3
302-11	Fitting - Grease	39 * 2	3218-3	Nut - Jam	37 68 1
302-18	Fitting - Grease	37 58 1	3218-3	Nut - Jam	40 77 1
302-18	Fitting - Grease	40 64 1	3218-6	Nut - Jam	30 9 1
302-60	Fitting - Grease	28 16 2	3218-17	Nut - Jam	22 12 1
302-60	Fitting - Grease	29 30 1	3218-18	Nut - Jam	36 50 2
321-2	Screw - Cap Hex. Hd.	35 11 6	3218-18	Nut - Jam	40 52 2
321-5	Screw - Cap Hex. Hd.	13 15 8	3219-14	Nut - Hex.	5 14 6
321-6	Screw - Hex. Flange Hd.	12 10 2	3220-2	Nut - Jam	12 19 2
321-8	Screw - Cap Hex. Hd.	46 26 8	3220-2	Nut - Jam	13 33 2
321-8	Screw - Cap Hex. Hd.	31 32 1	3220-5	Nut - Jam	7 6 1
321-8	Screw - Cap Hex. Hd.	3 52 2	3220-12	Nut - Jam	31 29 1
321-12	Screw - Cap Hex. Hd.	32 2 1	3220-20	Nut - Jam	12 21 1
321-13	Screw - Cap Hex. Hd.	10 18 3	3229-1	Bolt - Carriage	28 1 2
321-14	Screw - Cap Hex. Hd.	20 40 4	3229-1	Screw - Carriage	1 7 2
321-23	Screw - Cap Hex. Hd.	24 16 2	3229-11	Bolt - Carriage	37 63 1
322-2	Capscrew - Hex. Hd.	34 5 4	3229-11	Bolt - Carriage	40 70 1
322-3	Screw - Cap Hex. Hd.	33 38 4	3230-1	Bolt - Carriage	34 15 4
322-3	Screw - Cap Hex. Hd.	37 53 1	3230-1	Screw - Carriage	32 19 2
322-3	Screw - Cap Hex. Hd.	40 56 1	3230-1	Screw - Carriage	20 33 1
322-4	Screw - Cap Hex. Hd.	28 10 4	3230-2	Bolt - Carriage	47 6 1
322-4	Screw - Cap Hex. Hd.	29 23 2	3230-2	Bolt - Carriage	46 9 4
322-4	Screw - Cap Hex. Hd.	11 24 4	3230-5	Bolt - Carriage	46 8 2
322-7	Screw - Cap Hex. Hd.	47 7 1	3230-5	Screw - Carriage	48 3 2
322-7	Screw - Cap Hex. Hd.	20 37 2	3230-8	Bolt - Carriage	47 5 1
322-9	Screw - Cap Hex. Hd.	16 8 2	3230-9	Screw - Carriage	48 *{ 2

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3230-20	Bolt - Carriage	36	37	10	3256-6	Washer - Flat	28	15	2
3230-20	Bolt - Carriage	39	38	10	3256-6	Washer - Flat	29	27	1
3230-22	Screw - Carriage	20	6	1	3256-14	Washer - Flat	5	16	2
3230-23	Screw - Carriage	9	23	6	3256-16	Washer - Flat	13	12	8
3230-23	Screw - Carriage	1	27	6	3256-22	Washer - Flat	8	6	2
3230-27	Screw - Carriage	1	8	1	3256-22	Washer - Flat	24	15	2
3231-2	Bolt - Carriage	38	14	4	3256-22	Washer - Flat	31	33	1
3231-2	Bolt - Carriage	41	15	2	3256-22	Washer - Flat	3	53	2
3231-22	Bolt - Carriage	8	23	6	3256-23	Washer	14	49	1
3231-26	Screw - Carriage	20	7	1	3256-23	Washer - Flat	20	9	23
3231-31	Bolt - Carriage	22	21	1	3256-23	Washer - Flat	26	16	1
3234-4	Screw - Cap Hex. Hd.	8	7	2	3256-23	Washer - Flat	46	18	6
3234-4	Screw - Hex. Flange Hd.	2	13	3	3256-23	Washer - Flat	47	19	2
3234-4	Screw - Hex. Flange Hd.	22	29	2	3256-23	Washer - Flat	1	25	4
3234-4	Screw - Hex. Washer Hd.	5	8	3	3256-23	Washer - Flat	22	30	15
3234-4	Screw - Hex. Washer Hd.	26	10	1	3256-23	Washer - Flat	33	34	4
3234-4	Screw - Hex. Washer Hd.	9	22	2	3256-23	Washer - Flat	8	43	2
3234-5	Screw - Hex. Flange Hd.	2	1	24	3256-24	Washer - Flat	48	6	2
3234-5	Screw - Hex. Washer Hd.	1	2	14	3256-24	Washer - Flat	47	3	4
3234-5	Screw - Hex. Washer Hd.	13	4	2	3256-24	Washer - Flat	29	16	1
3234-5	Screw - Hex. Washer Hd.	8	19	2	3256-24	Washer - Flat	46	21	8
3234-5	Screw - Hex. Washer Hd.	20	32	1	3256-24	Washer - Flat	22	25	2
3234-11	Screw - Hex. Flange Hd.	2	40	4	3256-24	Washer - Flat	26	25	3
3234-11	Screw - Hex. Washer Hd.	48	4	2	3256-24	Washer - Flat	20	27	16
3234-11	Screw - Hex. Washer Hd.	26	29	1	3256-24	Washer - Flat	28	30	2
3234-17	Screw - Hex. Washer Hd.	8	21	4	3256-24	Washer - Flat	12	34	1
3234-23	Screw - Hex. Flange	34	14	6	3256-25	Washer - Flat	36	14	1
3234-24	Screw - Hex. Flange Hd.	20	26	4	3256-25	Washer - Flat	39	20	1
3234-25	Screw - Hex. Washer Hd.	26	17	5	3256-26	Washer - Flat	35	4	6
3234-28	Screw - Hex. Flange Hd.	17	1	2	3256-26	Washer - Flat	7	10	2
3234-28	Screw - Hex. Washer Hd.	8	13	8	3256-35	Washer	44	9	6
3234-28	Screw - Hex. Washer Hd.	20	53	1	3256-45	Washer - Flat	29	10	4
3234-32	Screw - Cap Hex. Hd.	22	5	4	3256-45	Washer - Flat	28	19	4
3234-32	Screw - Cap Hex. Hd.	29	28	1	3256-45	Washer Flat	40	69	2
3234-32	Screw - Hex. Flange Hd.	28	14	2	3256-49	Washer	47	13	8
3234-36	Screw - Hex. Flange Hd.	2	15	3	3256-49	Washer - Flat	46	13	32
3242-4	Screw - Square Hd. Set	22	3	6	3256-54	Washer - Flat	30	4	1
3243-6	Screw - Set Sq. Hd.	37	67	1	3256-56	Washer - Flat	36	51	1
3243-6	Screw - Set Sq. Hd.	40	76	1	3256-56	Washer - Flat	40	54	1
3245-35	Screw - Set	22	10	4	3257-32	Key - Woodruff	11	7	1
3246-9	Screw - Set	49	6	6	3257-32	Key - Woodruff	10	17	1
3247-6	Screw - Set	45	3	3	3258-19	Screw - Round Hd.	3	*61	2
3249-11	Screw - Round Hd.	12	27	2	3258-19	Screw - Round Hd.	4	2	2
3250-35	Screw - Pan Hd.	26	6	2	3269-18	Rivet - Pop	47	15	10
3253-2	Washer - Lock	5	15	5	3269-18	Rivet - Pop	46	23	20
3253-3	Washer - Lock	35	12	6	3269-22	Rivet - Pop	47	12	4
3253-3	Washer - Lock	13	14	8	3269-22	Rivet - Pop	46	25	8
3253-3	Washer - Lock	10	19	3	3269-23	Rivet - Pop	46	16	24
3253-4	Washer - Lock	28	11	4	3269-23	Rivet - Pop	47	24	8
3253-4	Washer - Lock	29	22	2	3272-4	Pin - Cotter	2	9	2
3253-4	Washer - Lock	1	24	4	3272-4	Pin - Cotter	26	13	1
3253-4	Washer - Lock	37	52	1	3272-6	Pin - Cotter	7	1	1
3253-4	Washer - Lock	40	55	1	3272-6	Pin - Cotter	10	14	1
3253-5	Washer - Lock	18	8	1	3272-6	Pin - Cotter	29	19	1
3253-5	Washer - Lock	36	25	2	3272-6	Pin - Cotter	31	26	1
3253-5	Washer - Lock	39	30	2	3272-6	Pin - Cotter	13	31	5
3253-21	Washer - Lock	46	15	4	3272-6	Pin - Cotter	26	43	1
3254-9	Washer - ITLW	12	2	2	3272-9	Pin - Cotter	20	23	1
3254-9	Washer - Lock Internal	26	5	2	3272-11	Pin - Cotter	29	4	1
3254-18	Washer - Lock I.T.L.W.	44	6	6	3272-11	Pin - Cotter	28	22	2
3254-20	Washer - Lock	5	23	1	3272-11	Pin - Cotter	26	32	5
3255-2	Washer - Lock	31	31	1	3272-13	Pin - Cotter	29	13	2
3255-2	Washer - Lock E.T.L.W.	37	61	1	3272-13	Pin - Cotter	28	27	2
3255-2	Washer - Lock E.T.L.W.	40	71	1	3272-17	Pin - Cotter	28	25	2
3255-7	Washer - ETLW	12	26	3	3272-17	Pin - Cotter	29	33	1
3255-7	Washer - ETLW	2	35	1	3273-18	Screw - Hex. Socket Hd.	22	34	4
3255-7	Washer - Lock E.T.L.W.	5	35	1	3274-90	Screw - Hex. Socket Hd.	5	13	2
3255-8	Washer - Ext. Tooth Lock	34	4	4	3290-55	Rivet - Pop	38	8	6
3255-8	Washer - Lock E.T.L.W.	20	30	1	3290-55	Rivet - Pop	41	9	4
3256-2	Washer - Flat	46	27	8	3290-282	Rivet - Pop	47	18	10
3256-3	Washer - Flat	31	4	1	3290-322	Pin - Hair	29	31	1
3256-3	Washer - Flat	16	6	1	3290-322	Pin - Hair	28	32	2
3256-3	Washer - Flat	39	36	5	3290-379	Tie - Cable	31	7	1
3256-4	Washer - Flat	39	2	1	3290-379	Tie - Cable	22	41	1

*Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3290-379	Tie - Cable	21 59 2	32128-14	Nut - Flange Lock	1 13 2
3290-432	Screw - Hex. Hd.	20 20 1	32128-19	Nut - Flange	34 { 12 2
3290-467	Cotter - Hairpin	38 2 4	32128-20	Nut - Flange Lock	2 46 4
3290-467	Cotter - Hairpin	41 3 2	32128-20	Nut - Lock	14 48 2
3290-467	Pin - Cotter Hair	1 28 2	32128-21	Nut - Flange Lock	37 62 1
3296-2	Nut - Lock	5 44 1	32128-21	Nut - Flange Lock	40 72 1
3296-4	Nut - Lock	26 15 1	32128-25	Nut - Flange Lock	33 35 4
3296-6	Nut - Lock	10 22 1	32128-25	Nut - Hex. Flange	34 6 4
3296-13	Rivet - Pop	44 1 14	32128-33	Nut - Flange Lock	1 3 2
3296-16	Nut - Flange Lock	24 9 2	32128-33	Nut - Flange Lock	28 4 2
3296-16	Nut - Lock	12 4 2	32128-33	Nut - Flange Lock	22 14 2
3296-23	Nut - Flange Lock	31 23 4	32128-33	Nut - Flange Lock	5 31 3
3296-23	Nut - Flange Lock	22 28 4	32128-33	Nut - Flange Lock	2 34 5
3296-23	Nut - Lock	10 11 3	32128-43	Nut - Flange Lock	20 1 5
3296-23	Nut - Lock	13 42 8	32128-43	Nut - Flange Lock	26 2 7
3296-28	Nut - Lock	7 11 2	32128-43	Nut - Flange Lock	8 16 6
3296-29	Nut - Flange Lock	31 5 1	32128-43	Nut - Flange Lock	22 23 2
3296-29	Nut - Flange Lock	7 20 1	32128-43	Nut - Flange Lock	2 37 4
3296-29	Nut - Flange Lock	22 32 6	32128-44	Nut - Flange Lock	20 4 5
3296-29	Nut - Lock	16 14 2	32128-44	Nut - Flange Lock	1 16 13
3296-29	Nut - Lock	46 19 6	32128-44	Nut - Flange Lock	2 18 10
3296-29	Nut - Lock	47 20 3	32128-44	Nut - Flange Lock	32 20 3
3296-29	Nut - Lock	12 32 3	32128-44	Nut - Flange Lock	8 26 4
3296-29	Nut - Lock	36 41 11	32128-44	Nut - Hex. Flange Hd.	9 12 6
3296-29	Nut - Lock	39 42 11	32128-44	Nut - Lock	13 3 2
3296-29	Nut - Lock	8 42 2	32136-4	Nut - Castle	7 2 1
3296-39	Nut - Flange Lock	24 17 1	32136-4	Nut - Castle	31 27 1
3296-39	Nut - Flange Lock	26 26 3	32138-8	Insert - Threaded	1 34 1
3296-39	Nut - Lock	36 1 8	32141-84	Screw - Cap Hex. Hd.	7 25 2
3296-39	Nut - Lock	47 1 3	32144-10	Screw - Cap Hex. Hd.	39 24 6
3296-39	Nut - Lock	38 6 16	32144-10	Screw - Hex. Washer Hd.	36 26 4
3296-39	Nut - Lock	46 6 8	32144-18	Screw - Hex. Hd.	5 4 2
3296-39	Nut - Lock	41 7 9	32144-39	Screw - Pan Hd.	5 41 2
3296-39	Nut - Lock	44 8 2	32148-7	Insert - Threaded	2 3 8
3296-39	Nut - Lock	29 15 1	32148-7	Insert - Threaded	1 33 3
3296-39	Nut - Lock	22 17 2	32148-8	Insert - Threaded	8 14 3
3296-39	Nut - Lock	28 31 2	32148-8	Insert - Threaded	3 58 1
3296-39	Nut - Lock	40 67 12	32148-14	Insert - Threaded	7 28 1
3296-42	Nut - Lock	13 11 8	32149-9	Nut - Flange Lock	5 37 2
3296-42	Nut - Lock	31 35 1	32151-46	Ring - Retaining	11 13 2
3296-42	Nut - Lock	8 40 2	32151-78	Ring - Retaining	18 3 2
3296-59	Nut - Lock	43 3 6	32153-4	Nut - Lock	46 29 8
3296-59	Nut - Lock	29 9 2	340-2	Fitting - Hydraulic Straight	26 47 1
3296-59	Nut - Lock	35 9 2	340-4	Fitting - Hydraulic Straight	17 13 1
3296-59	Nut - Lock	28 18 2	340-5	Fitting - Hydraulic Straight	16 11 2
3296-59	Nut - Lock	12 33 1	340-17	Fitting - Hydraulic 90°	13 43 2
3296-59	Nut - Lock	40 63 1	340-19	Fitting - Hydraulic Tee	16 20 1
3296-62	Nut - Lock	36 10 1	340-23	Fitting - Hydraulic Cross	24 21 1
3296-62	Nut - Lock	39 14 1	340-77	Fitting - Hydraulic 90°	24 6 1
32104-82	Screw - Hex. Washer Hd.	1 21 5	340-87	Fitting - Hydraulic 45°	26 39 1
32104-116	Screw - Hex. Washer Hd.	8 2 8	340-88	Fitting - Hydraulic Straight	31 37 1
32105-1	Screw - Hex. Hd.	5 42 1	340-92	Fitting - Hydraulic Straight	24 11 1
32107-11	Nut - Square	3 *62 2	340-98	Fitting - Hydraulic 90°	17 8 1
32107-11	Nut - Square	4 4 2	340-99	Fitting - Hydraulic 90°	10 26 2
32120-10	Ring - Retaining	20 45 1	340-101	Fitting - Hydraulic 45°	10 5 2
32120-11	Ring - Retaining	11 36 1	340-102	Fitting - Hydraulic Tee	16 16 1
32120-15	Ring - Retaining	11 34 1	340-103	Fitting - Hydraulic 45°	24 23 1
32120-64	Ring - Snap	46 1 8	340-103	Fitting - Hydraulic 45°	14 45 1
32121-6	Pin - Roll	12 15 1	340-105	Fitting - Hydraulic 90°	13 8 2
32121-6	Pin - Roll	2 21 1	340-109	Fitting - Hydraulic Tee	17 11 1
32121-6	Pin - Roll	13 39 2	340-110	Fitting - Hydraulic 90°	24 19 1
32121-9	Pin - Roll	30 13 1	340-127	Nut - Bulkhead	8 25 2
32121-10	Pin - Roll	7 22 1	340-140	Fitting - Hydraulic Tee	14 * 1
32121-15	Pin - Roll	7 16 2	340-141	Fitting - Hydraulic Straight	31 12 2
32121-23	Pin - Roll	30 1 1	353-512	Plug - Hydraulic	18 1 1
32121-24	Pin - Roll	12 24 1	353-987	Fitting - Hydraulic 90°	9 17 1
32121-34	Pin - Dowel	10 29 1	354-23	Ball - Check	18 4 1
32121-36	Pin - Roll	36 6 4	354-77	Hydraulic Test Port Fitting	16 23 2
32121-36	Pin - Roll	39 11 4	354-79	Cap - Test Port	16 22 2
32121-38	Pin - Roll	18 5 1	354-120	Fitting - Hydraulic 90°	10 8 1
32121-91	Pin - Coiled Spring	11 38 3	354-120	Fitting - Hydraulic 90°	9 25 1
32128-10	Nut - Flange Lock	37 66 1	354-127	Fitting - Hydraulic 45°	9 20 2
32128-10	Nut - Flange Lock	40 75 1	354-128	Fitting - Hydraulic 90°	10 3 1

*Not Illustrated

AL-916240

Litho in U.S.A.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 216-D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Reelmaster 216-D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 216-D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

INDEX

Description	Page	Description	Page
Hood & Grille	1	Comb Kit Part No. 67-9400 (Optional)	44
Skirt Assembly	2-3	Large Pulley Kit Part No. 67-9540 (Optional)	45
Air Cleaner Assembly	4	Grass Collection System	
Instrument Panel Assembly	5	Model No. 03433 (Optional)	
Electrical Schematic	6	(Front Cutting Unit Basket Assembly)	46
Frame Assembly	7	Grass Collection System	
Radiator Assembly	8	Model No. 03433 (Optional)	
Hydraulic Reservoir & Filter Assembly	9	(Rear Cutting Unit Basket Assembly)	47
Hydraulic Pump Installation Assembly	10	Weight Kit No. 83-9370	48
Hydraulic Pump Assembly No. 85-4920	11	Backlap Kit No. 84-5510	49
Traction Control Assembly	12	Special Tools	50
Front Wheel Assembly	13-14	Cylinder Block Assembly	51
Hydraulic Drive Motor No. 66-5291	15	Crankshaft Assembly	52
Drive Motor Plumbing Assembly	16	Cylinder Head Assembly	53
Rear Wheel Drive Valve Assembly	17	Rocker Arm Assembly	54
2 Position Valve Assembly No. 71-2830	18	Camshaft Assembly	55
Hydraulic Schematic	19	Timing Cover Assembly	56
Engine Installation Assembly	20-21	Oil Pump Assembly	57
Reel Drive Assembly	22	Fuel Injection System Assembly	58
Electric Clutch Assembly No. 83-9140	23	Injection Pump Assembly	59-60
Cutting Unit Lift Valve Installation Assembly	24	Flywheel Housing Assembly	61
Control Valve No. 43-1950	25	Flywheel Assembly	62
Cutting Unit Lift Assembly	26	Starter Installation Assembly	63
Hydraulic Cylinder No. 76-0020	27	Starter Assembly	64
Front Cutting Unit Lift Arm Assembly	28	Oil Sump Assembly	65
Rear Cutting Unit Lift Arm Assembly	29	Valve Cover Assembly	66
Belt Tensioner Assembly No. 83-7900	30	Oil Filter Assembly	67
Rear Wheel Assembly	31	Front Drive Pulley Assembly	68
Fuel System Assembly	32	Water Pump Assembly	69
Seat Assembly Model No. 30797 (Optional)	33	Alternator Assembly	70
Seat Assembly Model No. 30796 (Optional)	34	Timing Cover Plate Assembly	71
Cutting Unit Carrier Frame Assembly		Exhaust Manifold Assembly	72
(Floating Cutting Unit Suspension)	35	Low Pressure Fuel System Assembly	73
8 & 11 Blade Cutting Unit Reel Assembly ...	36-37	Lift Pump Assembly	74
8 & 11 Blade Cutting Unit Roller Assembly		Fuel Filter Assembly	75
(Floating Suspension)	38	Cold Start System Assembly	76
5 Blade Cutting Unit Reel Assembly		Engine Lifting Tab Assembly	77
(Fixed Suspension)	39-40	Throttle Stop Assembly	78
5 Blade Cutting Unit Roller Assembly		Recorder Assembly	79
(Fixed Suspension)	41	Electrical Component Assembly	80
Cutting Unit Roller Options	42	International Decal Cross Reference	81-83
Cutting Unit Roller Scraper Kit		Part Number Index	84-91
Part No. 60-9590 (Optional)	43		