

# Retractable Seatbelt Kit

## Zero-Turn-Radius Riding Mowers

Model No. 110-0883

### Installation Instructions

#### Loose Parts

Use the chart below to verify that all parts have been shipped.

| Procedure | Description  | Qty.             | Use  |
|-----------|--|------------------|--|
| 1         | Bolt (7/16 x 1 inch)<br>Locknut (7/16 inch)<br>Seat belt retractor<br>Seat belt receiver | 2<br>2<br>1<br>1 | Install the seat belt on a Standard Seat.          |
| 2         | Bolt (7/16 x 1 inch)<br>Seat belt retractor<br>Seat belt receiver                        | 2<br>1<br>1      | Install the seat belt on a deluxe suspension seat. |

**1**

#### Installing the Seat Belt on a Standard Seat

##### Parts needed for this procedure:

|   |                      |
|---|----------------------|
| 2 | Bolt (7/16 x 1 inch) |
| 2 | Locknut (7/16 inch)  |
| 1 | Seat belt retractor  |
| 1 | Seat belt receiver   |

 
#### Procedure



Serious injury or death can happen when the seat belt is used without a roll bar installed.

Do not install the seat belt without a roll bar installed.

If you do not have a rollbar, contact an Authorized Service dealer to obtain the correct Roll Over Protection System (ROPS).




To avoid injury or death from rollover: keep the roll bar in the raised locked position and use the seat belt.

Ensure that the rear part of the seat is secured with the seat latch.

Do not install and use the seat belt without a roll bar installed. Contact an Authorized Service dealer to obtain the correct Roll Over Protection System (ROPS).


1. Unlatch the seat and tip the seat forward.
2. Remove the two bolts and washers holding the seat cushion to the seat pan and remove the seat cushion (Figure 1). Retain the seat cushion fasteners for later use.

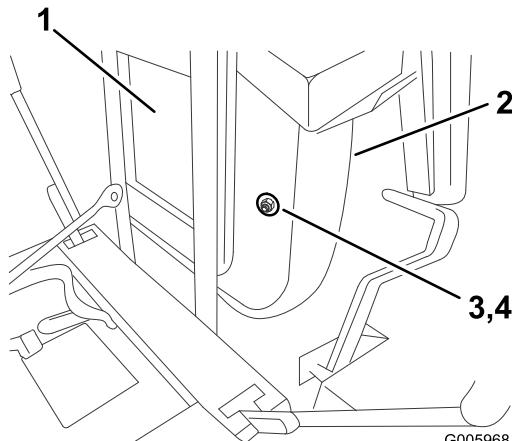

**Figure 1**

|                 |                                |
|-----------------|--------------------------------|
| 1. Seat pan     | 3. Bolt, left and right side   |
| 2. Seat cushion | 4. Washer, left and right side |

3. Remove the existing seat belt retractor and receiver from the seat by removing the nut and bolt securing the belt assemblies to the seat (Figure 2).
4. Install the new seat belt retractor and receiver with 2 bolts (7/16 x 1 inch) and 2 nuts (7/16 inches) (Figure 2).

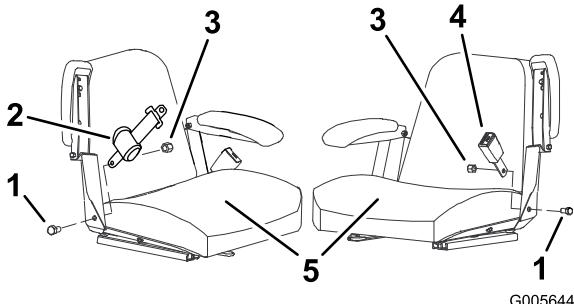

**Figure 2**

|                        |                       |
|------------------------|-----------------------|
| 1. Bolt                | 4. Seat belt receiver |
| 2. Seat belt retractor | 5. Seat               |
| 3. Nut                 |                       |

5. Install the seat cushion with the two bolts and washers previously removed (Figure 1).

## 2

### Installing the Seat Belt on a Deluxe Suspension Seat

#### Parts needed for this procedure:

|   |                      |
|---|----------------------|
| 2 | Bolt (7/16 x 1 inch) |
| 1 | Seat belt retractor  |
| 1 | Seat belt receiver   |


#### Procedure



Serious injury or death can happen when the seat belt is used without a roll bar installed.



**Do not install the seat belt without a roll bar installed.**

If you do not have a rollbar, contact an Authorized Service dealer to obtain the correct Roll Over Protection System (ROPS).

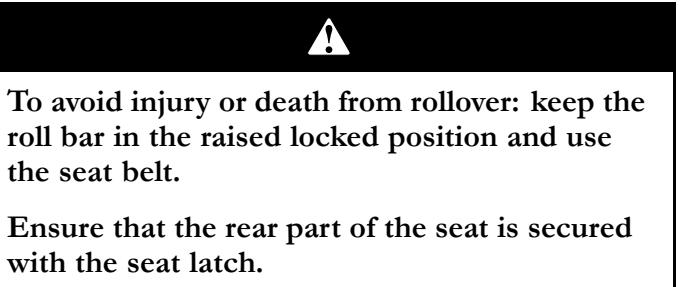

Do not install and use the seat belt without a roll bar installed. Contact an Authorized Service dealer to obtain the correct Roll Over Protection System (ROPS).

1. Unlatch the seat and tip the seat forward.
2. Remove the existing seat belt retractor and receiver (Figure 3).
3. Install the new seat belt retractor and receiver to the deluxe seat with 2 bolts (7/16 x 1 inch) (Figure 3).

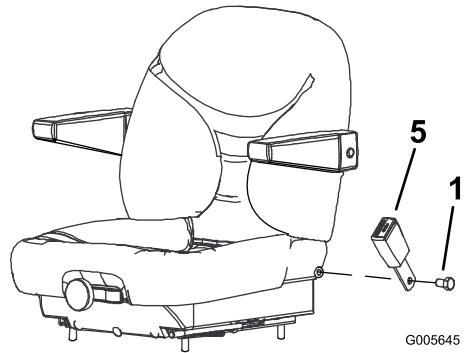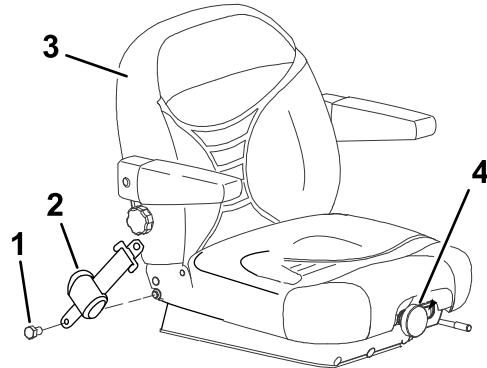

**Figure 3**

|                          |                               |
|--------------------------|-------------------------------|
| 1. Bolt, (7/16 x 1 inch) | 4. Suspension adjustment knob |
| 2. Seat belt retractor   | 5. Seat belt receiver         |
| 3. Seat                  |                               |