



18-44Z TimeCutter™ Z Riding Mower

Model No. 74351 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 3	Crankcase Assembly Briggs and Stratton 31H777-0168-E1	 19
Control Assembly	 5	Oil Filter, Tube and Pump Assembly Briggs and Stratton 31H777-0168-E1	 20
Hydro and Belt Drive Assembly	 6	Carburetor Assembly Briggs and Stratton 31H777-0168-E1	 21
RH Hydrostat Assembly Part No. 107-2466	 7	Governor Assembly Briggs and Stratton 31H777-0168-E1	 22
LH Hydrostat Assembly Part No. 107-2465	 9	Blower Housing Assembly Briggs and Stratton 31H777-0168-E1	 23
Engine Assembly	 11	Starter Assembly Briggs and Stratton 31H777-0168-E1	 24
Deck, Spindle and Belt Drive Assembly	 13	Gasket Assembly Briggs and Stratton Model 31H777-0168-E1	 25
Deflector and Baffle Assembly	 14	Carburetor Overhaul Kit Assembly Briggs and Stratton Model 31H777-0168-E1	 26
Electrical Assembly	 15		
Cylinder Assembly Briggs and Stratton 31H777-0168-E1	 16		
Cylinder Head Assembly Briggs and Stratton 31H777-0168-E1	 17		
Crankshaft Assembly Briggs and Stratton 31H777-0168-E1	 18		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|---|---|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Included in Engine Gasket Set-Ref. 358. | ❹ Included in Valve Gasket Set-Ref. 1095. |
| ❺ Included in Carburetor Overhaul Kit-Ref. 121. | ❻ Included in Carburetor Gasket Set-Ref. 977. |
| ❼ Obtain from your local Briggs & Stratton dealer | |

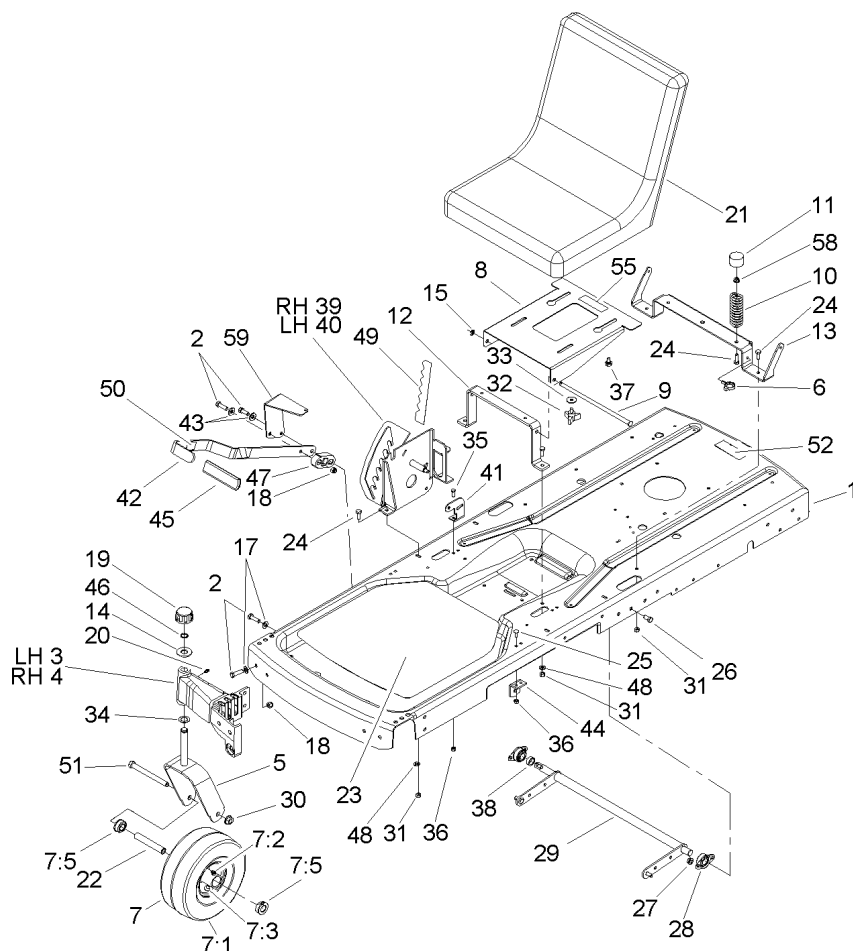

Frame Assembly


Ref	Part No.	Qty.	Description
1	107-1744-01	1	Frame
2	323-18	10	Screw-HH
3	105-6986-01	1	Caster-LH
4	105-6985-01	1	Castor-RH
5	106-2196-01	2	Caster Fork ASM
6	105-1853	1	Clamp-Hose
7	105-3471	2	Front Wheel And Tire ASM
7:1	105-1943	1	Tire
7:2	302-11	1	Fitting-Lube, 45 DEG
7:3	232-27	1	Stem-Valve
7:5	114-1640	2	Bushing-Flange
7:99	93-4244	1	Tube-Inner (W/Valve)
8	105-6953-03	1	Bracket-Seat
9	105-6955	1	Pin-Pivot
10	92-7054	2	Spring-Compression
11	701178	2	Cap-Protector
12	105-6954-03	1	Brace-Seat, Front
13	106-2210-03	1	Brace-Seat, Rear
14	28-2480	2	Washer
15	105-7004	1	E-Ring
17	3256-24	8	Washer-Flat
18	3296-39	9	Nut-Lock, NI
19	61-9780	2	Cap-Hub
20	302-5	2	Fitting-Grease

Ref	Part No.	Qty.	Description
21	106-2221	1	Seat
22	104-3667	2	Spanner-Wheel
23	105-3460	1	Pad-Antiskid
24	322-4	14	Screw-HH
25	3229-1	4	Screw-CARR
26	323-4	4	Screw-HH
27	3290-357	4	Nut-HHF, Whiz
28	1-633102	2	Bearing-Flange, Side
29	107-1731-03	1	Lift Arm ASM
30	32128-23	2	Nut-HF
31	3296-29	12	Nut-Lock, NI
32	92-9674	2	Knob
33	5-4460	2	Washer-Pivot
34	3-6498	2	Washer-Thrust
35	321-4	4	Screw-HH
36	3296-42	8	Nut-Lock, NI
37	37-8770	2	Bolt-Shoulder
38	106-2222	1	Spacer
39	106-2158-03	1	RH Plate ASM
40	106-2159-03	1	LH Plate ASM
41	106-2180	2	Bracket-Bellcrank
42	105-3435-03	1	Lever-Lift
43	98-5975	2	Washer-Belleville
44	105-3439	2	Bracket-Lift

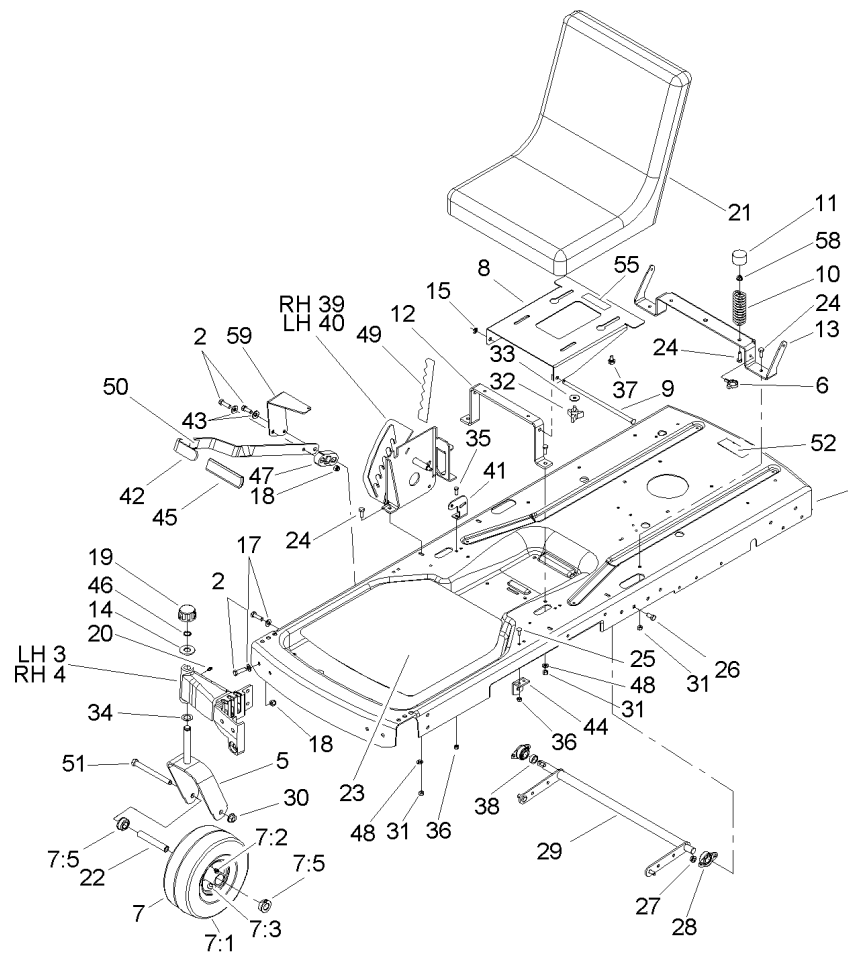

Frame Assembly (continued)


Ref	Part No.	Qty.	Description				
45	105-3450	1	Grip-Lever, Lift				
46	32151-103	2	Ring-Snap				
47	106-2211	1	Block-Lift				
48	3256-23	6	Washer-Flat				
49	106-2223	1	Decal-HOC				
50	106-8743	1	Decal				
51	325-22	2	Screw-HH				
52	106-7026	1	Decal-Transport				
55	106-8716	1	Decal-Services				
58	32128-25	2	Nut-HF				
59	107-2516-03	1	Mount-Spring, Front				

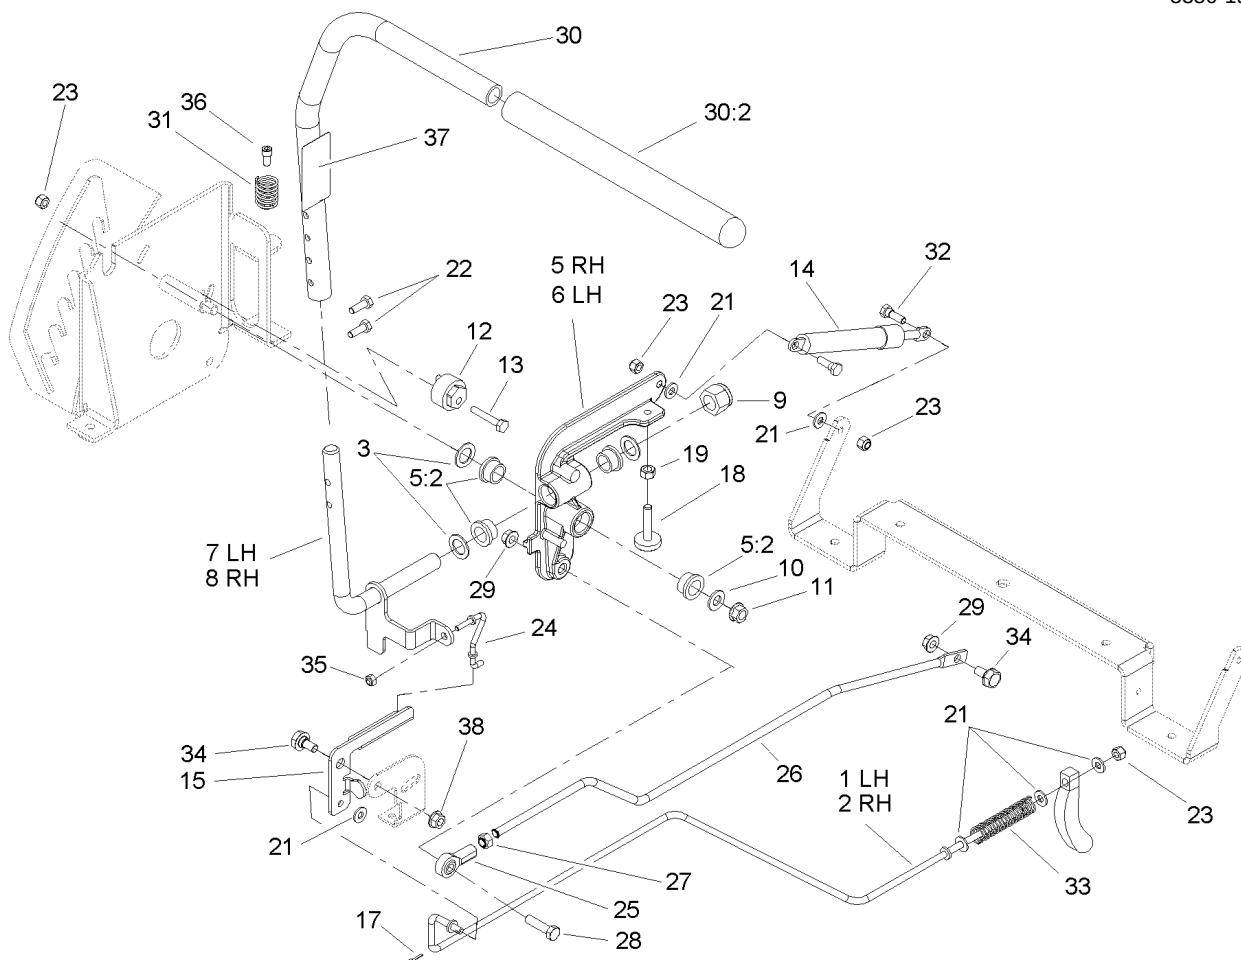

Control Assembly

Ref	Part No.	Qty.	Description
1	105-7045	1	Rod-Brake, LH
❶2	105-7044	1	Rod-Brake, RH
3	105-3481	6	Washer-Thrust
5	106-8671	1	RH Actuator Arm W/Bushing ASM
5:2	105-3455	4	Bushing
❶6	106-8672	1	LH Actuator Arm W/Bushing ASM
❶6:2	105-3455	4	Bushing
7	105-3488	1	LH Pivot Shaft ASM
❶8	105-3487	1	RH Pivot Shaft ASM
9	3296-53	2	Nut-Lock, NI
10	3256-24	2	Washer-Flat
11	3296-59	2	Nut-Lock, NI
12	105-3485	2	Bushing-Eccentric
13	321-9	2	Screw-HH
14	103-2913	2	Damper-Control, Motion
15	106-2181	2	Bellcrank
17	3272-5	2	Pin-Cotter
18	105-3486	2	Stop-Adjustment
19	3217-6	2	Nut-Hex
21	3256-22	12	Washer-Flat
22	321-4	4	Screw-HH
23	3296-42	8	Nut-Lock, NI
24	106-2179	2	Link-Brake
25	1-543017	2	Balljoint-RH


Ref	Part No.	Qty.	Description
26	105-7048	2	Rod-Hydro
27	3219-2	2	Nut-Hex
28	322-6	2	Screw-HH
29	32128-20	4	Nut-HF
30	106-2242	2	Handle ASM
30:2	1-633257	1	Grip-Control, Motion
31	105-3469	2	Spring-Compression
32	106-2214	4	Bolt-Shoulder
33	105-3465	2	Spring-Compression
34	37-8771	4	Bolt-Shoulder
35	3296-2	2	Nut-Lock
36	3274-52	2	Screw-HSH
37	106-8742	2	Decal
38	32128-25	2	Nut-HF

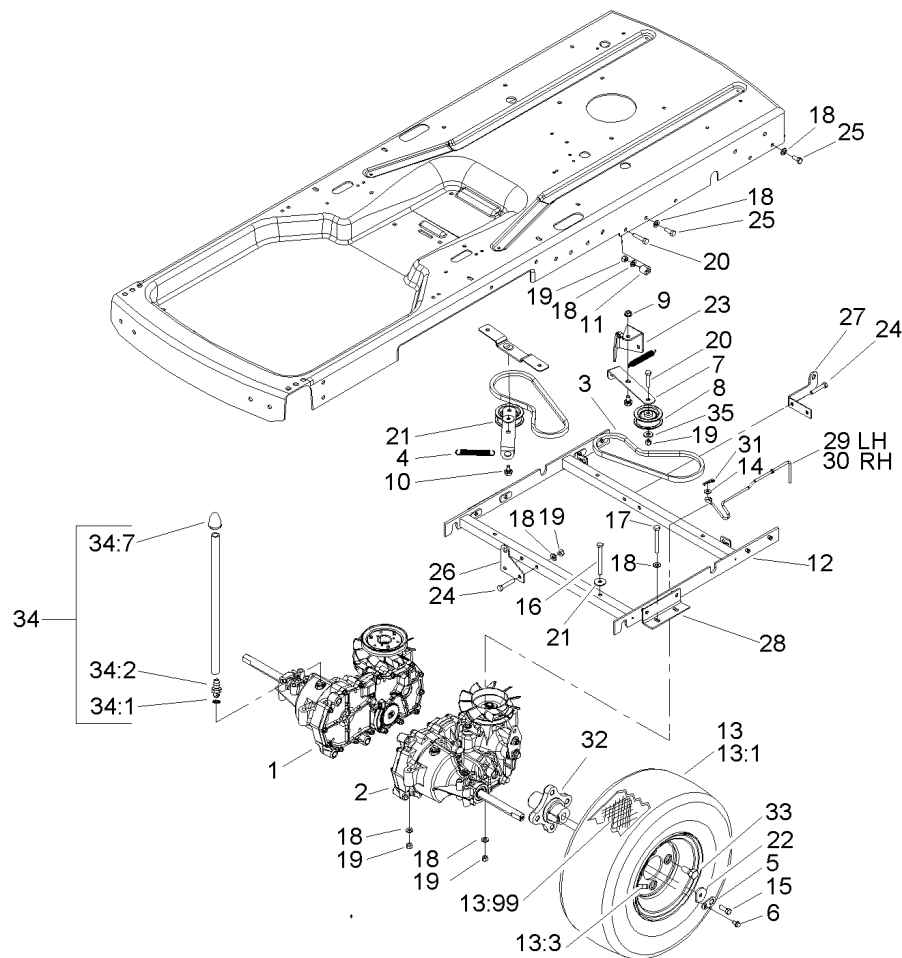

Hydro and Belt Drive Assembly


Ref	Part No.	Qty.	Description
1	107-2466	1	RH Hydrostat ASM
2	107-2465	1	LH Hydrostat ASM
3	106-2174	2	V-Belt
4	95-3805	2	Spring
5	105-3438	2	Tab-Locking
6	3234-13	2	Screw-HHF
7	105-7047	2	Arm-Idler
8	106-2176	2	Pulley-Idler
9	32128-25	1	Nut-HF
10	37-8770	2	Bolt-Shoulder
11	105-1941	2	Spacer
12	107-2462-03	1	Hydro Mount ASM
13	106-7005	2	Rear Wheel ASM
13:1	105-3468	1	Tire
13:3	232-27	1	Stem-Valve
13:99	232-37	1	Tube
14	3256-1	2	Washer-Flat
15	3210-5	2	Screw-HH
16	322-20	4	Screw-HH
17	322-13	4	Screw-HH
18	3256-23	24	Washer-Flat
19	3296-29	16	Nut-Lock, NI
20	322-7	4	Screw-HH
21	5-4460	5	Washer-Pivot

Ref	Part No.	Qty.	Description
22	106-7001	2	Washer-Wheel
23	107-1734	1	Stop-Clutch
24	322-9	4	Screw-HH
25	322-4	8	Screw-HH
26	105-7049	1	Bracket-Spring
27	105-7046	1	Bracket-Spring
28	105-7039-03	2	Support-Hydro
29	107-2463	1	Arm-Bypass, LH
30	107-2464	1	Arm-Bypass, RH
31	1-806003	2	Pin-Hair
32	106-6987-03	2	Hub-Machined
33	71-4450	8	Bolt-Lug
34	106-7002	2	Vent Hose ASM
34:1	93-3816	1	O-Ring
34:2	93-3814	1	Fitting-Hose
34:7	107-1701	1	Cap Vent ASM
35	3256-3	2	Washer-Flat

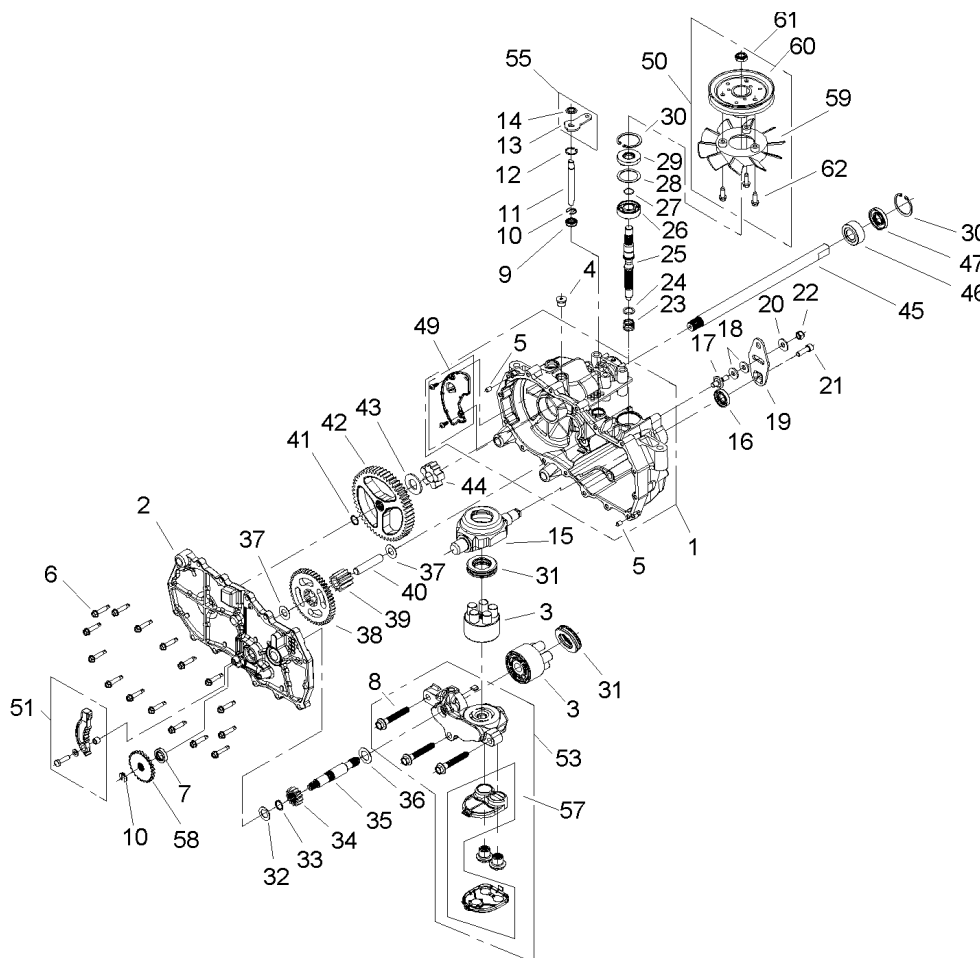


RH Hydrostat Assembly Part No. 107-2466

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-8674	1	LH Main Housing ASM	24	94-1937	1	Washer-Block, Thrust
2	106-8675	1	LH Side ASM	25	104-5306	1	Shaft-Input
3	104-2106	2	Cylinder Block ASM	26	104-5311	1	Bearing-Ball
4	104-2189	1	Plug-Thread, Straight	27	104-5307	1	Ring-Retaining
5	9004800-2506	2	Pin-Hydrogear	28	104-5308	1	Spacer
6	104-5305	16	Screw-HHF	29	104-5310	1	Seal-Lip
7	104-5347	1	Seal-Oil	30	104-5309	2	Ring-Retaining
8	94-6926	3	Bolt	31	94-6922	2	Bearing-Thrust
9	106-8676	1	Seal-Lip	32	104-5339	1	Washer-Flat
10	106-8677	2	Ring-Retaining, EXT	33	104-5340	1	Ring-Retaining
11	106-8678	1	Rod-Bypass	34	104-5316	1	Gear-Pinion, 13T
12	106-8679	1	Ring-Retaining, Int	35	106-8683	1	Shaft-Motor
13	107-2490	1	Arm-Bypass	36	104-5360	1	Washer-Shaft, Motor
14	106-8681	1	Ring-Retaining, EXT	37	94-1933	2	Washer
15	104-5304	1	Swashplate-Trunnion	38	104-5317	1	Gear
16	104-5313	1	Seal-Lip	39	104-5318	1	Gear-Jackshaft, 10T
17	104-2116	1	Stud	40	104-5329	1	Pin-Jackshaft
18	105-1873	2	Puck-Friction	41	104-5328	1	Ring-Retaining, Spiral
19	106-8747	1	Arm-Control	42	106-8684	1	Gear-Bull, 52T
20	5-4460	1	Washer-Pivot	43	94-1943	1	Washer
21	107-2488	1	Screw	44	104-5320	1	Bearing-Sleeve
22	105-1872	1	Nut	45	106-8685	1	Axle
23	94-1936	1	Spring-Block	46	104-5321	1	Bearing-Sleeve, Outboard
				47	104-5322	1	Seal-Lip

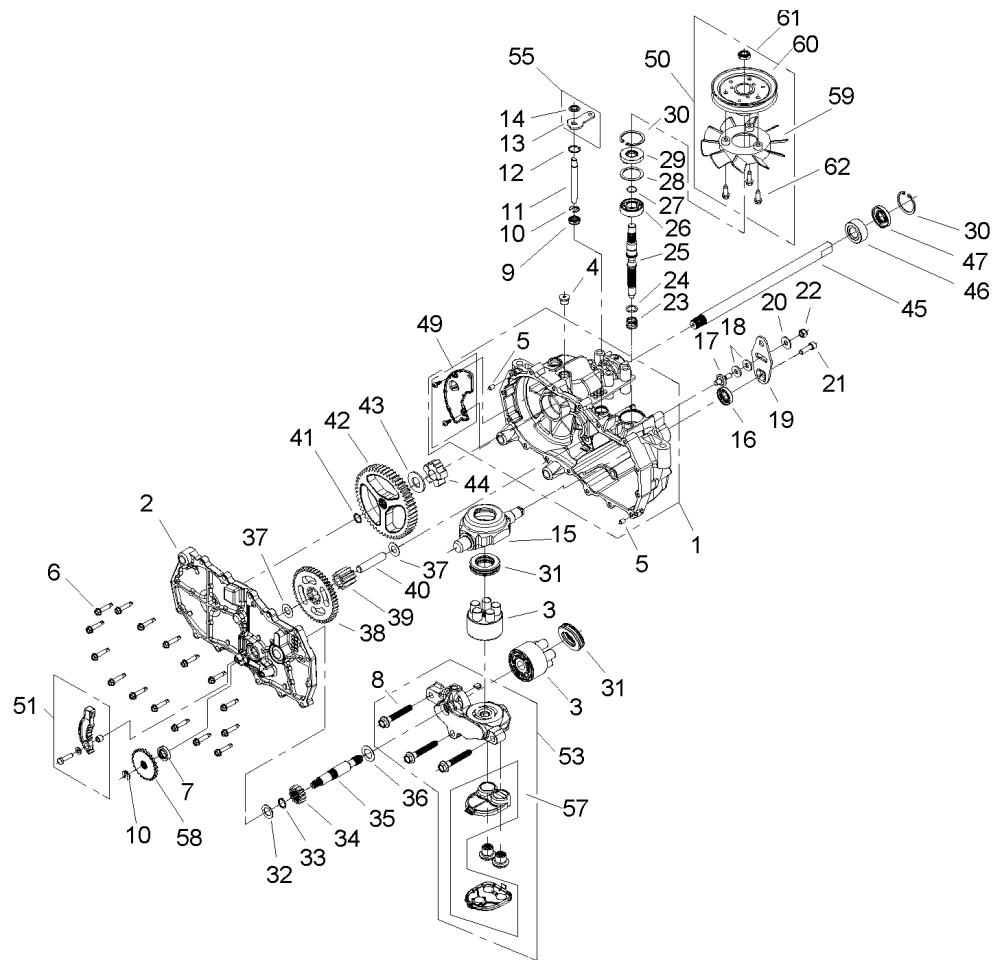


RH Hydrostat Assembly Part No. 107-2466 (continued)

Ref	Part No.	Qty.	Description				
❶48	106-8686	1	Seal Kit				
49	106-8687	1	LH Expansion Plate Kit				
50	105-1928	1	Fan Pulley Kit				
51	106-8688	1	Brake Arm Kit				
53	106-8690	1	LH Center Section Filter Kit				
❶54	104-2147	1	Sealant				
55	107-2489	1	Bypass Arm Kit				
57	106-8693	1	Filter Kit				
58	106-8694	1	Disc-Brake, Cog				
59	105-1927	1	Fan				
60	105-1896	1	Pulley				
61	105-1875	1	Nut-Lock				
62	104-2120	3	Screw				

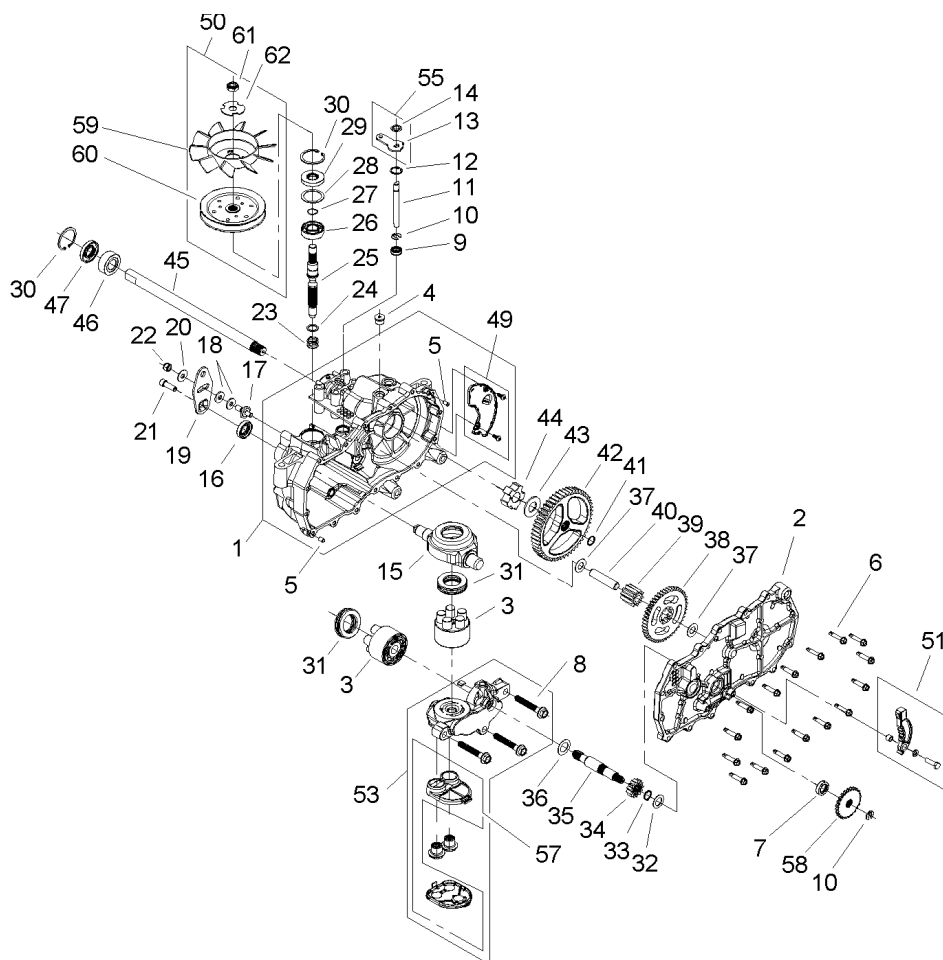


LH Hydrostat Assembly Part No. 107-2465

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-8695	1	RH Main Housing ASM	24	94-1937	1	Washer-Block, Thrust
2	106-8696	1	RH Side ASM	25	104-5306	1	Shaft-Input
3	104-2106	2	Cylinder Block ASM	26	104-5311	1	Bearing-Ball
4	104-2189	1	Plug-Thread, Straight	27	104-5307	1	Ring-Retaining
5	9004800-2506	2	Pin-Hydrogear	28	104-5308	1	Spacer
6	104-5305	16	Screw-HHF	29	104-5310	1	Seal-Lip
7	104-5347	1	Seal-Oil	30	104-5309	2	Ring-Retaining
8	94-6926	3	Bolt	31	94-6922	2	Bearing-Thrust
9	106-8676	1	Seal-Lip	32	104-5339	1	Washer-Flat
10	106-8677	2	Ring-Retaining, EXT	33	104-5340	1	Ring-Retaining
11	106-8678	1	Rod-Bypass	34	104-5316	1	Gear-Pinnion, 13T
12	106-8679	1	Ring-Retaining, Int	35	106-8683	1	Shaft-Motor
13	107-2490	1	Arm-Bypass	36	104-5360	1	Washer-Shaft, Motor
14	106-8681	1	Ring-Retaining, EXT	37	94-1933	2	Washer
15	104-5304	1	Swashplate-Trunnion	38	104-5317	1	Gear
16	104-5313	1	Seal-Lip	39	104-5318	1	Gear-Jackshaft, 10T
17	104-2116	1	Stud	40	104-5329	1	Pin-Jackshaft
18	105-1873	2	Puck-Friction	41	104-5328	1	Ring-Retaining, Spiral
19	106-8747	1	Arm-Control	42	106-8684	1	Gear-Bull, 52T
20	5-4460	1	Washer-Pivot	43	94-1943	1	Washer
21	107-2488	1	Screw	44	104-5320	1	Bearing-Sleeve
22	105-1872	1	Nut	45	106-8685	1	Axle
23	94-1936	1	Spring-Block	46	104-5321	1	Bearing-Sleeve, Outboard
				47	104-5322	1	Seal-Lip

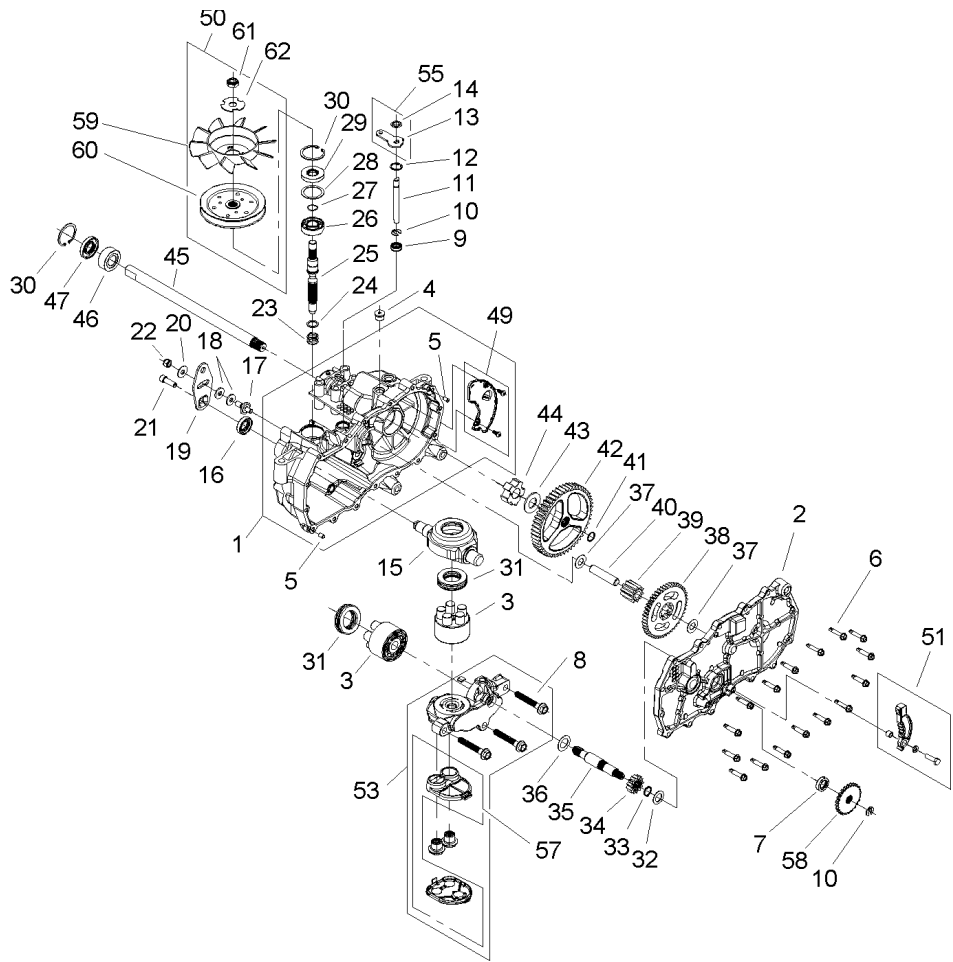

LH Hydrostat Assembly Part No. 107-2465 (continued)


Ref	Part No.	Qty.	Description				
❶48	106-8686	1	Seal Kit				
49	106-8697	1	RH Expansion Plate Kit				
50	106-8698	1	Fan Pulley Kit				
51	106-8688	1	Brake Arm Kit				
53	106-8699	1	RH Center Section Filter Kit				
❶54	104-2147	1	Sealant				
55	107-2489	1	Bypass Arm Kit				
57	106-8693	1	Filter Kit				
58	106-8694	1	Disc-Brake, Cog				
59	110-8566	1	Fan-6 Inch, 10 Blade				
60	104-1754	1	Pulley				
61	105-1875	1	Nut-Lock				
62	107-9122	3	Washer-Slotted				

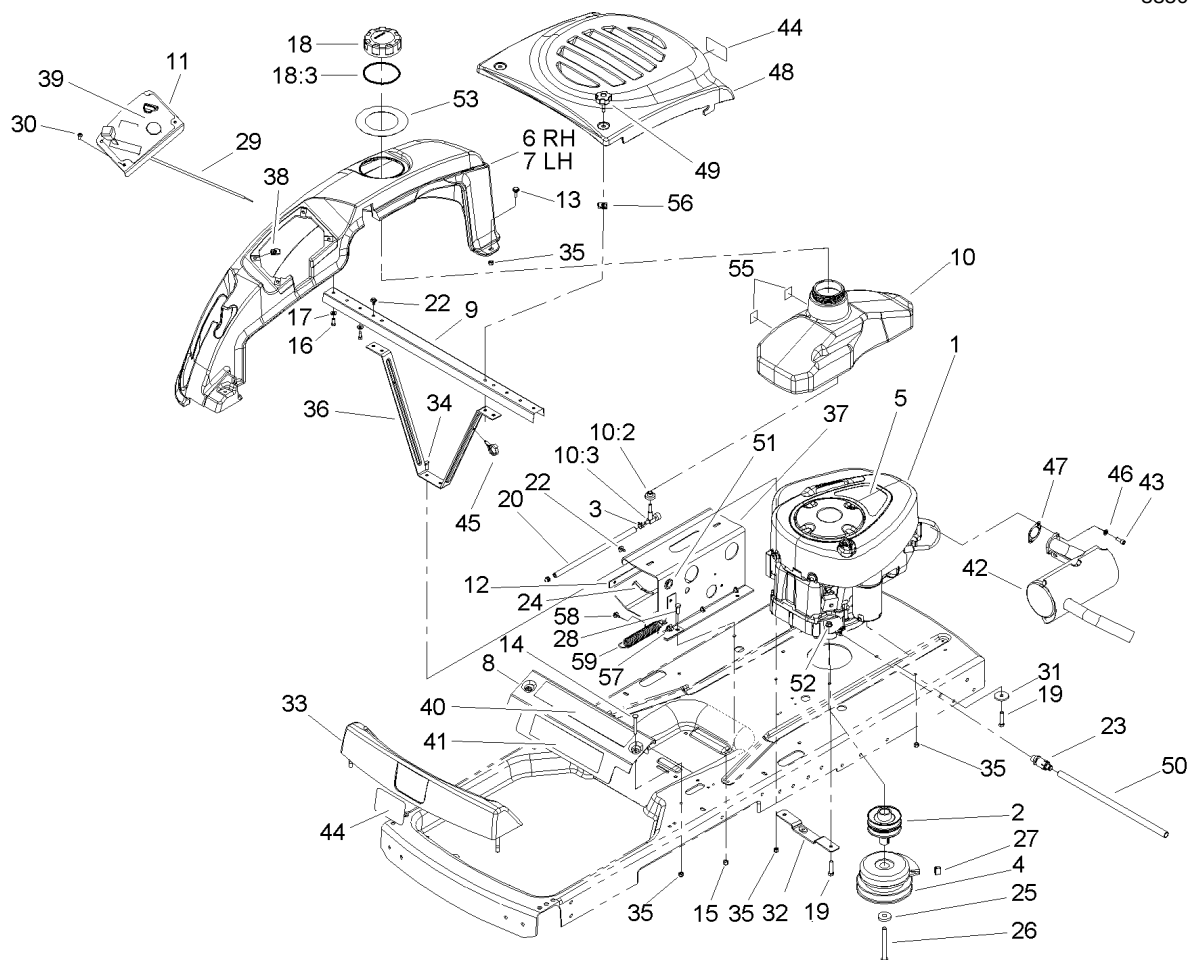

Engine Assembly


Ref	Part No.	Qty.	Description
1		1	Engine-Briggs And Stratton, 31H777-0168-E1
2	105-3472	1	Pulley-Engine
3	2412-98	2	Clamp
4	107-1733	1	Clutch-PTO
5	107-2530	1	Clamp-Muffler
6	106-2161	1	Cover-Side, RH
7	106-2162	1	Cover-Side, LH
8	106-2164-03	1	Bracket-Support, Front
9	106-2165-03	1	Bracket-Support, Rear
10	105-3464	1	Gas Tank ASM
10:2	46-6560	1	Bushing
10:3	104048	1	Valve-Fuel
11	106-2167-03	1	Panel-Control
12	105-3453-03	1	Plate-Support
13	11-9030	2	Screw-Shoulder
14	3229-7	2	Screw-CARR
15	3296-29	2	Nut-Lock, NI
16	46-8090	4	Screw-Plastite
17	3256-22	4	Washer-Flat
18	88-3980	1	Gas Cap ASM
18:3	88-4010	1	Gasket-Cap, Gas
19	322-7	4	Screw-HH
20	106-8720	1	Hose-Fuel

Ref	Part No.	Qty.	Description
22	46-8560	6	Screw-HHF
23	92-6877	1	Valve-Drain, Oil
24	609830	2	Spring
25	112843	1	Washer
26	3212-16	1	Screw-HH
27	98-5023	1	Bumper
28	322-4	2	Screw-HH
29	104-3626	1	Cable-Throttle
30	3258-166	4	Screw-PRH
31	62-7190	2	Spacer-Steel
32	106-2156	1	Plate-Mount, Idler
33	105-6965	1	Footrest ASM
34	321-4	2	Screw-HH
35	3296-42	7	Nut-Lock, NI
36	106-6994-03	1	Brace ASM
37	107-2485-03	1	Plate-Tank
38	107069	4	Clip
39	106-2224	1	Decal-Control
40	107-7398	1	Decal-Danger
41	107-2515	1	Decal
42	106-7007	1	Muffler
43	3274-10	2	Screw-HSH
44	105-6971	2	Decal
45	105-1853	2	Clamp-Hose

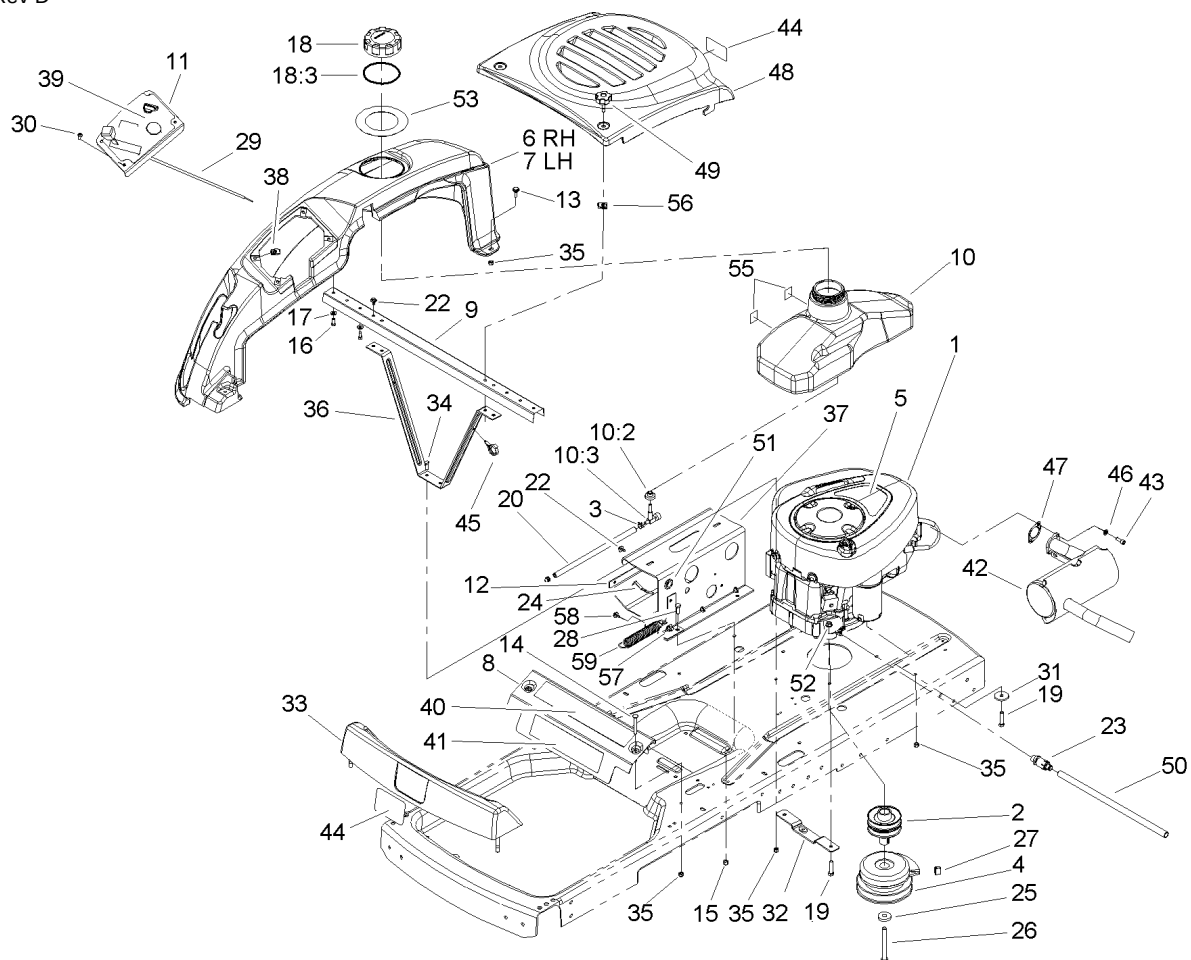

Engine Assembly (continued)


Ref	Part No.	Qty.	Description
46	3253-4	2	Washer-Lock
47	88-4410	1	Gasket-Muffler
48	106-2163	1	Cover-Hood
49	106-7017	2	Knob
50	106-7022	1	Tube-Drain, Oil
51	237-124	1	Grommet
52	32128-25	4	Nut-HF
53	106-7042	1	Seal-Rubber
55	104-2488	2	Foam-Switch, Seat
56	106-8737	2	Nut-Retainer
57	107-2506-03	1	Mount-Spring
58	32144-44	1	Screw-HWH
59	106-2177	1	Spring-Extension

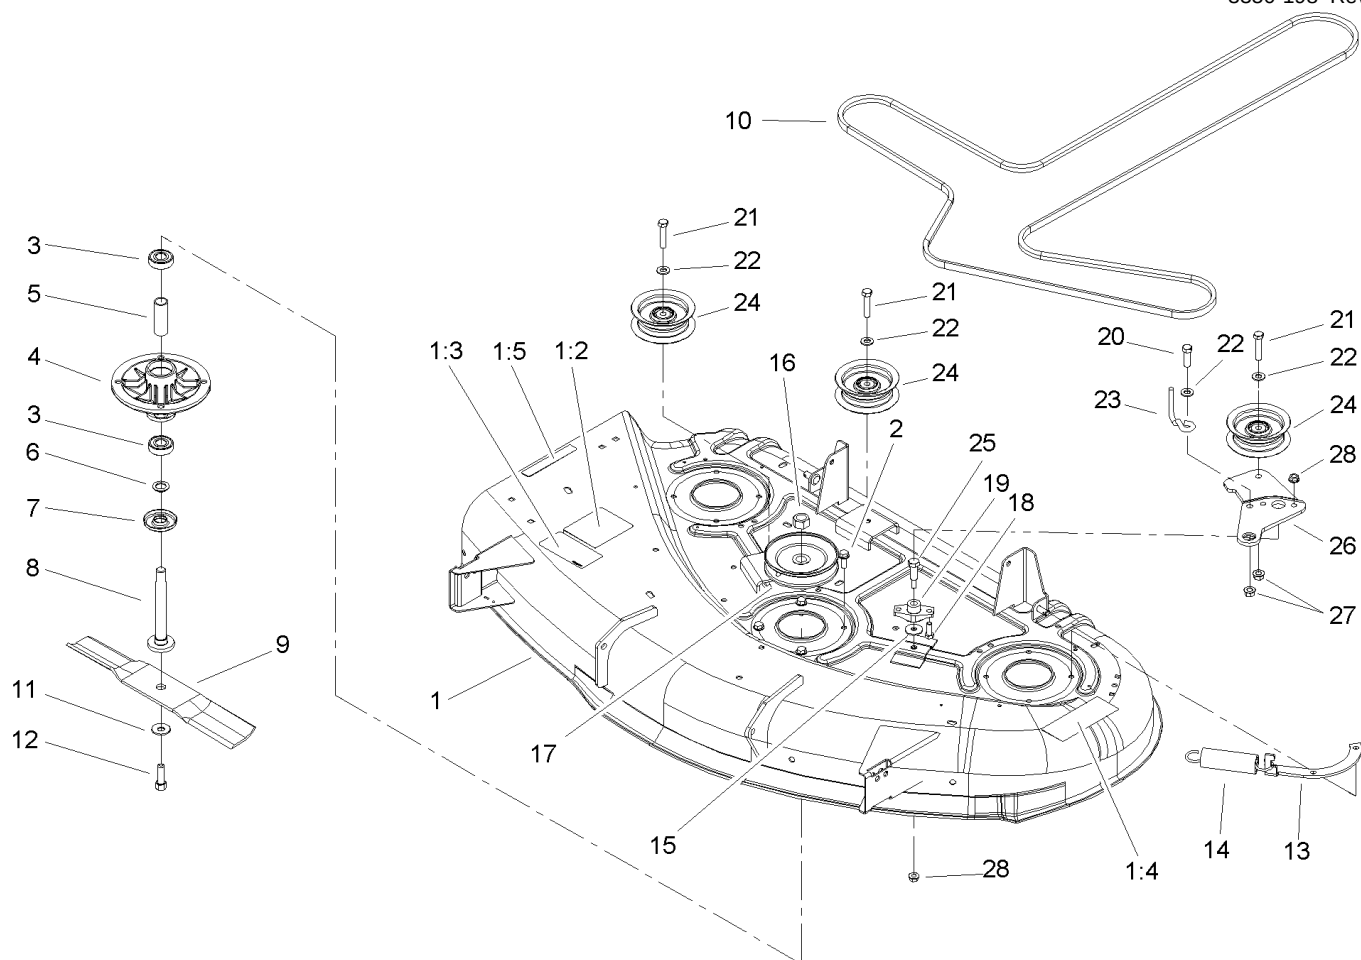

Deck, Spindle and Belt Drive Assembly

Ref	Part No.	Qty.	Description
1	107-2478	1	Deck
1:2	99-3943	1	Decal-Routing, Belt
1:3	107-2486	1	Decal-Wheel Adjustment
1:4	92-7108	1	Decal-Danger
1:5	92-7109	1	Decal-Caution
2	32144-41	12	Screw-Taptite
3	100-1048	6	Bearing-Ball
4	88-4510	3	Housing-Spindle
5	62-3661	3	Spacer-Bearing
6	80-4380	3	Spacer
7	80-4360	3	Shield-Bearing
8	80-4341	3	Shaft
9	54-0010-03	3	Blade
10	107-1735	1	Belt-V
11	3290-465	3	Washer-Belleville
12	26-0671	3	Screw-Blade
13	107-2513	1	Bracket-Spring
14	1-603414	1	Spring-Extension
15	5-4460	1	Washer-Pivot
16	3219-6	3	Nut-Hex
17	107-1724	3	Pulley ASM
18	322-4	2	Screw-HH
19	88-4980	1	Bushing-Arm, Idler
20	323-7	1	Screw-HH


Ref	Part No.	Qty.	Description
21	323-9	3	Screw-HH
22	3256-24	4	Washer-Flat
23	107-7307	1	Guide-Idler, Belt
24	106-2175	3	Pulley-Idler, Flat
25	7-0030	1	Bolt-Shoulder
26	107-2467-03	1	Arm-Idler
27	32128-21	2	Nut-HF
28	32128-25	3	Nut-HF

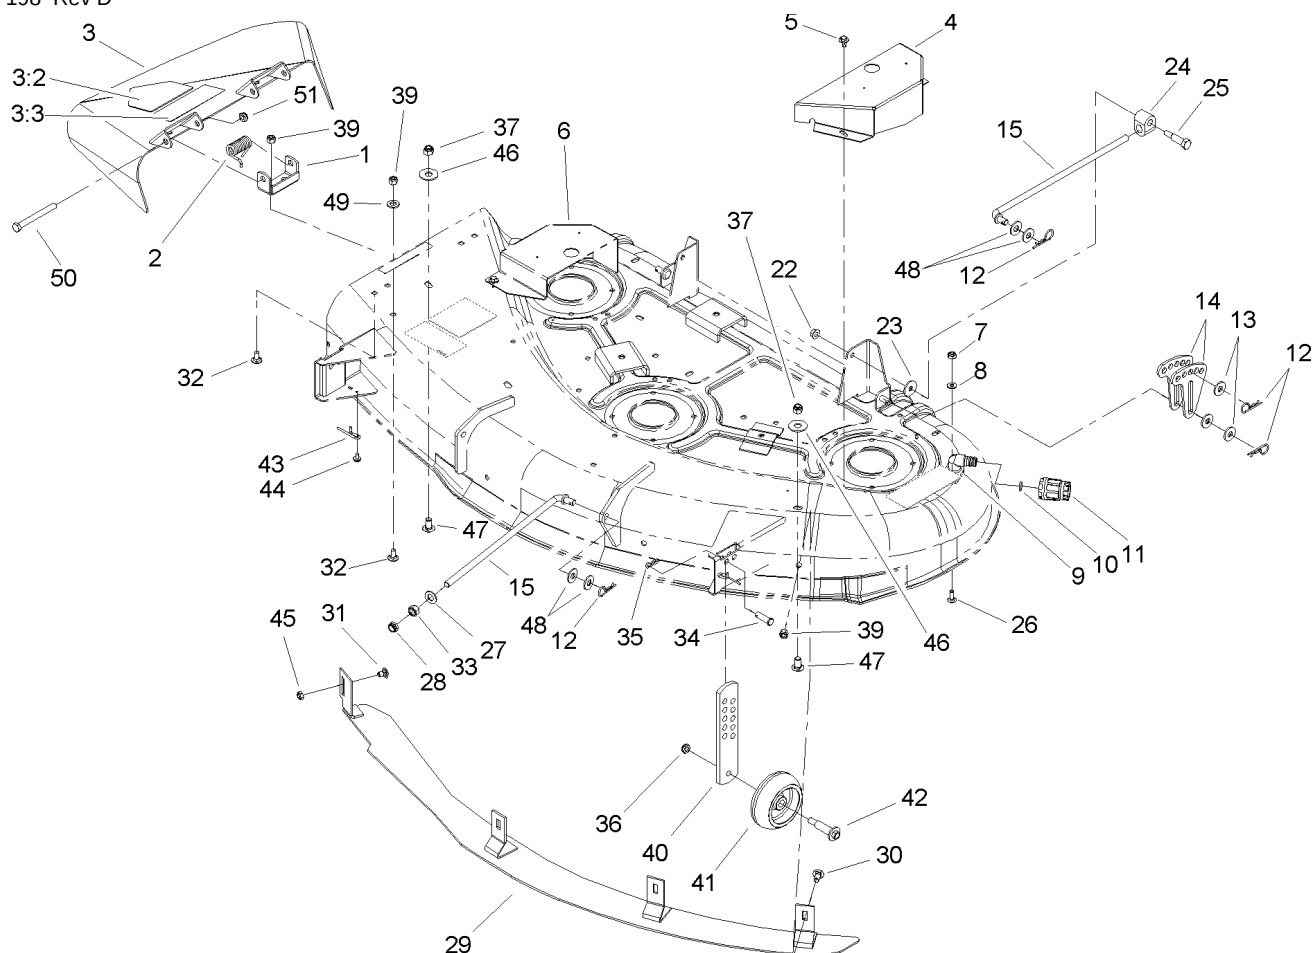

Deflector and Baffle Assembly


Ref	Part No.	Qty.	Description
1	29-5590-03	2	Bracket-Pivot
2	40-6230	2	Spring
3	100-8003	1	Deflector/Decal ASM
3:2	93-1122	1	Decal-Danger
3:3	92-7108	1	Decal-Danger
4	104-3646-01	1	Cover-Belt, LH
5	46-8560	4	Screw-HHF
6	104-3645-01	1	Cover-Belt, RH
7	3296-16	2	Nut-Lock, NI
8	3256-1	2	Washer-Flat
9	95-2747	1	Fitting-Washout
10	46-6290	1	O-Ring
11	95-3270	1	Connector-Hose
12	9335054	8	Pin-Hair
13	80-6990	6	Washer-Hardened
14	88-5570-03	4	Link-Adjusting, HOC
15	105-3437	4	Rod-Hanger
22	32128-25	2	Nut-HF
23	5-4460	2	Washer-Pivot
24	88-4230	2	Trunnion-HOC
25	7-0030	2	Bolt-Shoulder
26	3229-1	2	Screw-CARR
27	3256-25	2	Washer-Flat
28	3296-38	2	Nut-Lock, NI

Ref	Part No.	Qty.	Description
29	93-9950-03	1	Baffle
30	3230-1	3	Bolt-CARR
31	3230-19	1	Screw-CARR
32	3230-18	5	Screw-CARR
33	3219-4	2	Nut-Hex
34	283-2	2	Pin-Clevis
35	3290-307	2	Pin-Hair
36	3296-59	2	Nut-Lock, NI
37	3296-39	2	Nut-Lock, NI
39	3296-29	8	Nut-Lock, NI
40	93-8010	2	Plate-Gage, Wheel
41	701756	2	Wheel-Gage
42	56-6591	2	Bolt-Wheel
43	94-1981	2	Spring-Gage, Wheel
44	32104-76	2	Screw
45	3296-47	1	Nut-Lock, NI
46	3256-5	2	Washer-Flat
47	3231-21	2	Screw-CARR
48	3256-4	8	Washer-Flat
49	3256-24	1	Washer-Flat
50	3211-15	2	Screw-HH
51	3296-5	2	Nut-Lock

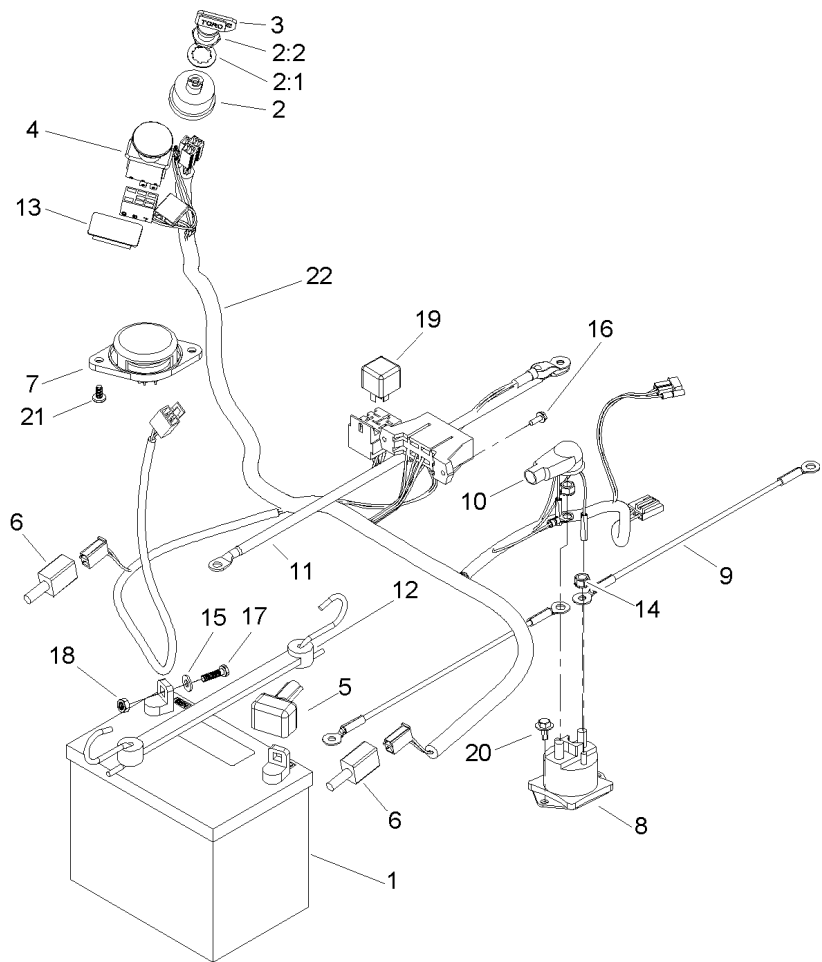

Electrical Assembly

Ref	Part No.	Qty.	Description				
1	104-2491	1	Battery-Dry				
2	88-9830	1	Key Switch ASM				
2:1	3254-5	1	Washer-Tooth				
2:2	218-461	1	Nut-HH				
3	63-8360	1	Key-Ignition				
4	95-7489	1	Switch-PTO				
5	28-8080	1	Boot-Terminal				
6	106-2216	2	Switch				
7	105-6959	1	Switch-Seat				
8	106-8245	1	Solenoid				
9	56-7670	2	Wire ASM				
10	93-3190	1	Boot-Insulator, Terminal				
11	95-7654	1	Cable				
12	104-2466	1	Holddown-Battery				
13	99-7420	1	Plug-Hole				
14	32149-2	2	Nut-Keps				
15	3256-22	2	Washer-Flat				
16	32144-1	3	Screw-Taptite				
17	321-4	2	Screw-HH				
18	32128-33	3	Nut-HF				
19	98-7249	1	Relay				
20	46-8560	2	Screw-HHF				
21	105-6968	2	Screw-Seat, Switch				
22	107-2539	1	Harness - Wire (B&s),16Amp				

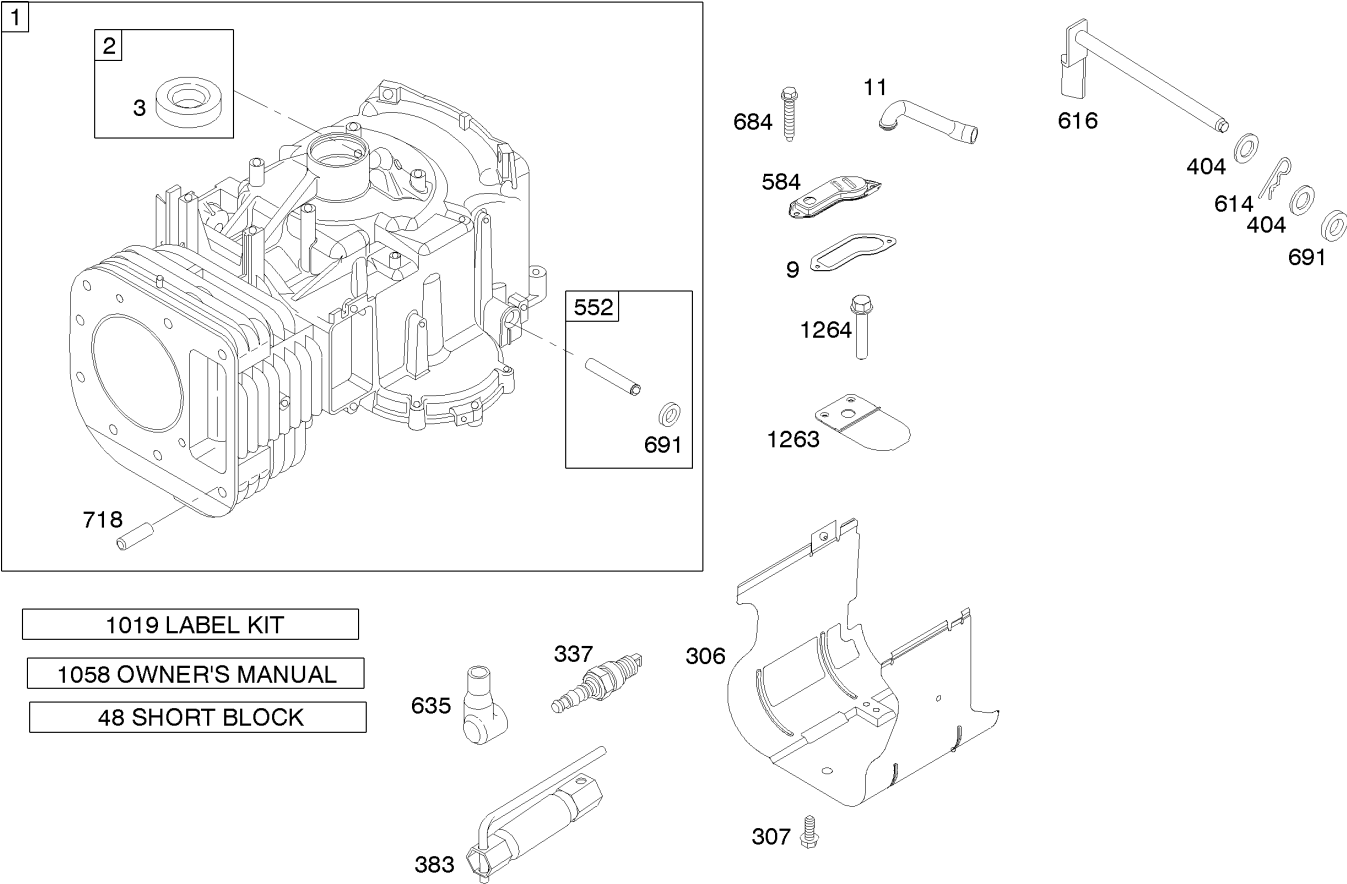


Assemblies include all parts shown in frames.

Cylinder Assembly

Briggs and Stratton 31H777-0168-E1


Ref	Part No.	Qty.	Description				
1	697174	1	Cylinder ASM				
2	399265	1	Bushing And Seal Kit				
3	391086	1	Seal-Oil				
9	697109	1	Gasket-Breather				
11	697113	1	Tube-Breather				
48	697762	1	Short Block ASM				
306	697107	1	Shield-Cylinder				
307	691003	1	Screw				
337	491055	1	Plug-Spark				
383	89838	1	Wrench-Plug, Spark				
404	691691	1	Washer				
552	697144	1	Bushing-Crank, Governor				
584	697112	1	Cover-Passage, Breather				
614	691620	1	Pin-Cotter				
616	692012	1	Crank-Governor				
635	691909	1	Boot-Spark Plug				
684	697157	1	Screw				
691	692407	1	Seal-Shaft, Governor				
718	690959	1	Pin-Locating				
1019	697143	1	Label Kit				
1058	275038	1	Owner's Manual				
1263	697124	1	Reed-Breather				
1264	697104	1	Screw				

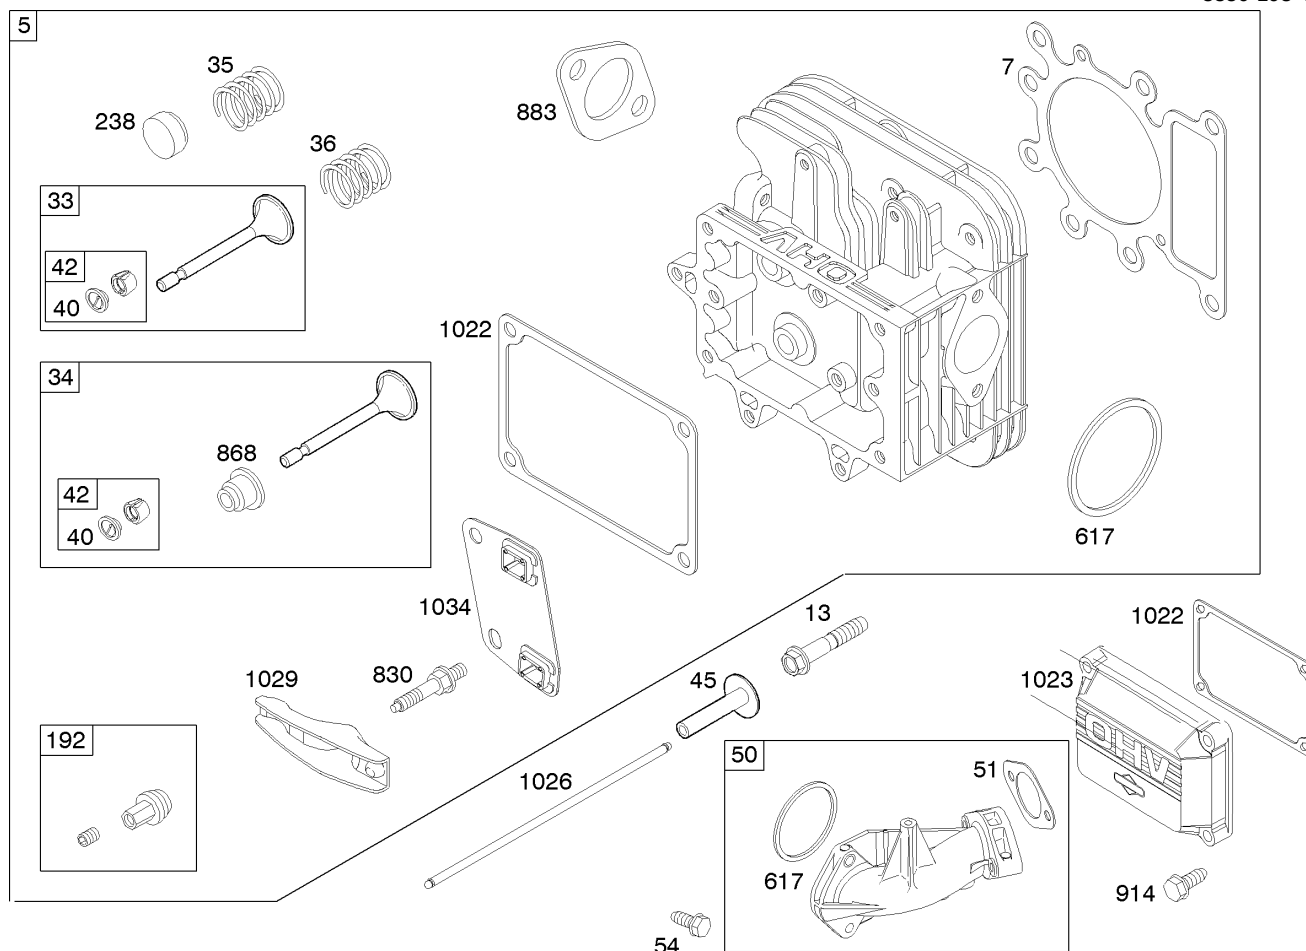

Cylinder Head Assembly Briggs and Stratton 31H777-0168-E1

Ref	Part No.	Qty.	Description
75	698147	1	Head-Cylinder
347	699168	1	Gasket-Head, Cylinder
7			
713	690360	1	Screw
733	695760	1	Valve-Exhaust
734	695761	1	Valve-Intake
735	691279	1	Spring-Valve
736	691279	1	Spring-Valve
740	691752	1	Retainer-Valve
742	499586	1	Keeper-Valve
745	690564	1	Tappet-Valve
750	690193	1	Manifold-Intake
3451	692137	1	Gasket-Intake
56			
754	691148	1	Screw
7192	691986	1	Adjustor-Arm, Rocker
7238	691843	1	Cap-Valve
35617	692138	1	Seal-O Ring
7			
7830	691095	1	Stud-Arm, Rocker
34868	690968	1	Seal-Valve
7			
7883	692236	1	Gasket-Exhaust
7914	690960	1	Screw
371022	272475	1	Gasket-Cover, Rocker


Ref	Part No.	Qty.	Description
71023	692492	1	Cover-Rocker
71026	692003	1	Rod-Push
7	692011	1	Rod-Push
71029	691751	1	Arm-Rocker
71034	690822	1	Guide-Rod, Push

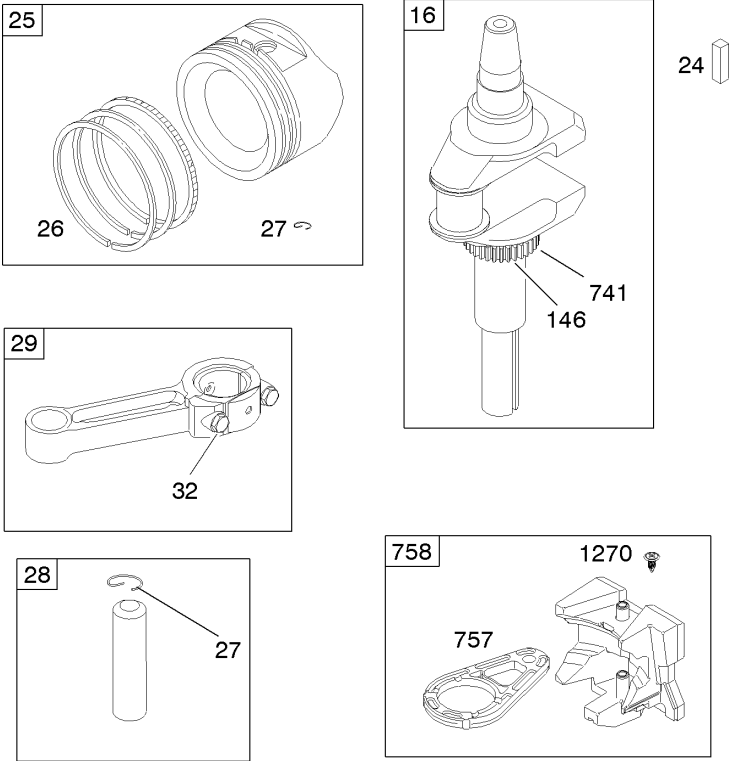

Assemblies include all parts shown in frames.

Crankshaft Assembly
Briggs and Stratton 31H777-0168-E1

Ref	Part No.	Qty.	Description				
16	697127	1	Crankshaft				
24	222698	1	Key				
25	699052	1	Piston ASM (Standard)				
7	699054	1	Piston ASM (.020In Oversize)				
26	699051	1	Ring Set (Standard)				
7	697559	1	Ring Set (.020In Oversize)				
27	698469	1	Lock-Pin, Piston				
28	697099	1	Pin-Piston (STD)				
29	697126	1	Rod-Connecting (Standard)				
32	692852	1	Screw				
146	691639	1	Key-Timing				
741	697128	1	Gear-Timing				
757	697607	1	Link-Counterweight				
758	697134	1	Counterweight				
1270	697156	1	Plug-Counterweight, Avs				

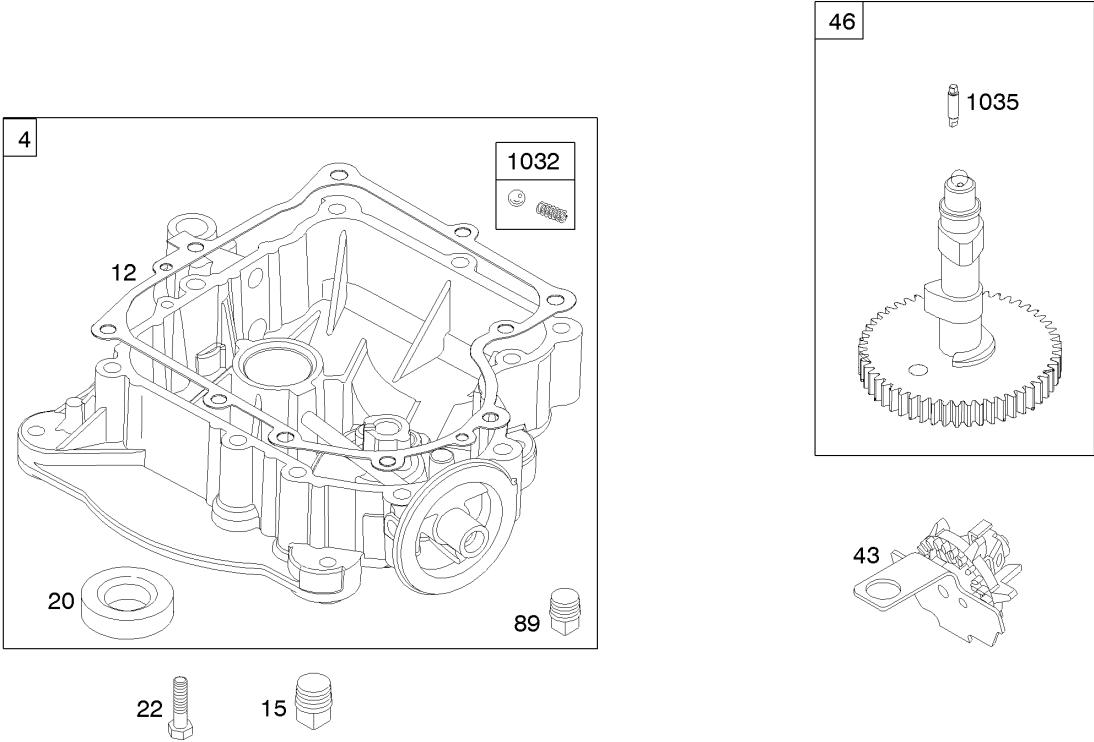


Assemblies include all parts shown in frames.

Crankcase Assembly

Briggs and Stratton 31H777-0168-E1


Ref	Part No.	Qty.	Description				
4	697188	1	Sump-Engine				
12	697110	1	Gasket-Crankcase				
15	690946	1	Plug-Drain, Oil				
20	690947	1	Seal-Oil				
22	692125	1	Screw				
43	691968	1	Slinger-Governor,Oil				
46	698492	1	Camshaft				
89	690283	1	Plug-Oil				
1032	491710	1	Ball-Pump, Oil				
1035	693784	1	Shaft-Pump, Oil				

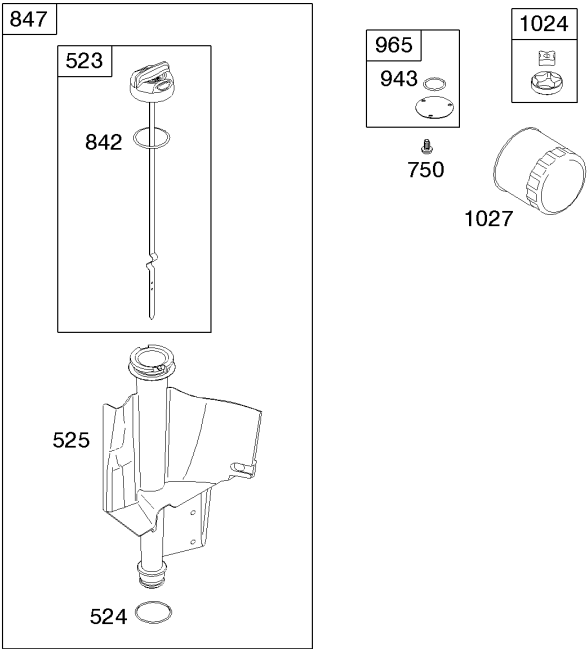

Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly
Briggs and Stratton 31H777-0168-E1

Ref	Part No.	Qty.	Description				
7523	697086	1	Dipstick				
37524	691032	1	Seal, O-Ring				
7525	697184	1	Tube-Dipstick				
7750	691033	1	Screw				
37842	691031	1	Seal-O Ring				
7847	697611	1	Dipstick And Tube ASM				
37943	690589	1	Seal, O-Ring				
7965	499613	1	Cover-Pump, Oil				
71024	499054	1	Pump-Oil				
71027	492932	1	Filter-Oil				

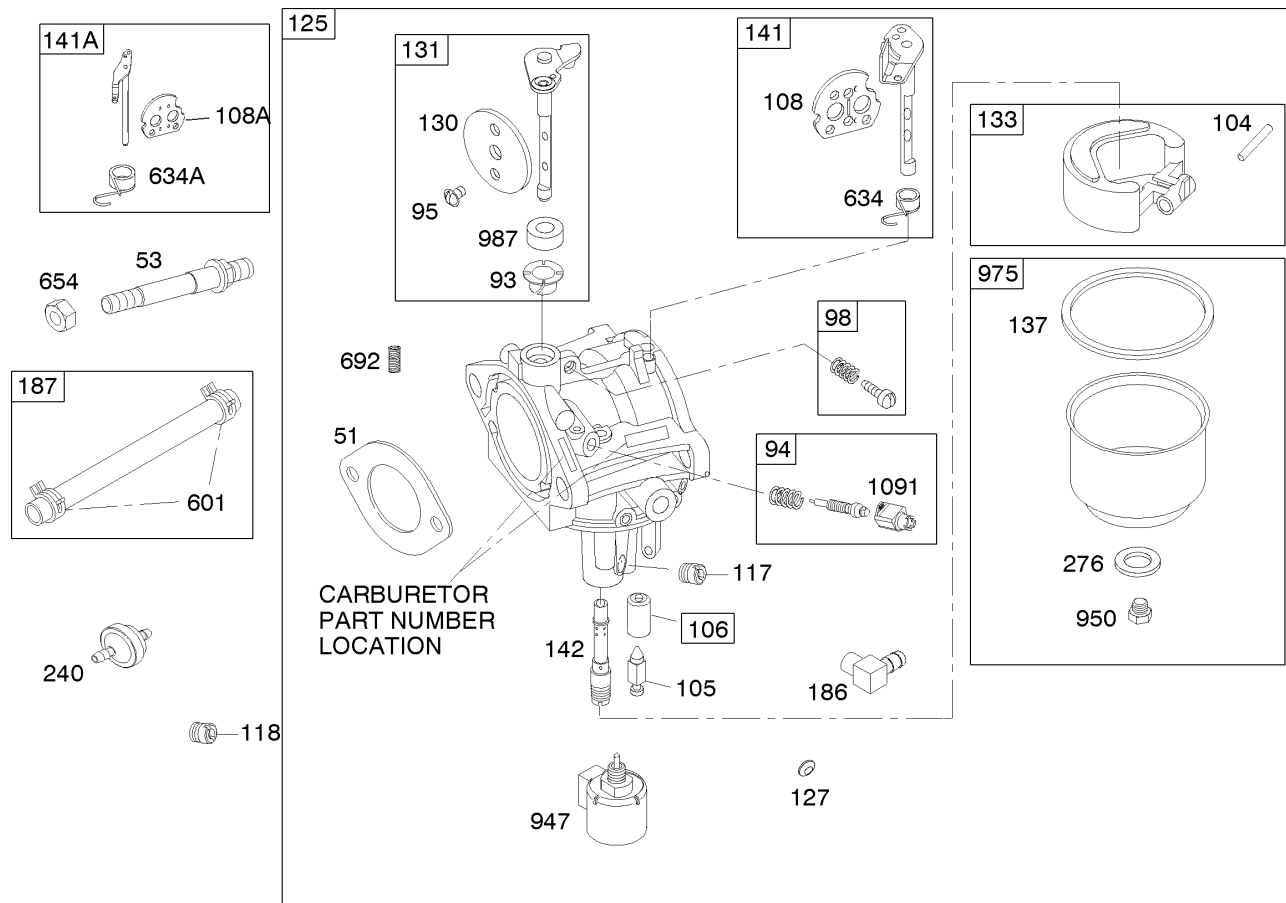


Assemblies include all parts shown in frames.

Carburetor Assembly

Briggs and Stratton 31H777-0168-E1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
5451	692137	0	Gasket-Intake	186	698174	1	Connector-Hose
56				187	697098	1	Line-Fuel
753	690227	1	Stud	240	394358	1	Filter-Fuel
5793	690602	1	Bushing-Shaft, Throttle	56276	692255	1	Washer-Sealing
794	498030	1	Idle Mixture Kit	7			
5795	691636	1	Screw	7601	95162	1	Clamp-Hose
798	495800	1	Idle Speed Kit	57634	690801	1	Spring / Seal ASM
57104	690525	1	Pin-Hinge, Carburetor Float	57634A	690802	1	Spring And Seal ASM
57105	231855	1	Valve-Needle, Float	7654	690958	1	Nut
57106	690577	1	Seat-Inlet	7692	690572	1	Spring-Detent
7108	690464	1	Valve-Choke	7947	694393	1	Solenoid-Fuel
7108A	692344	1	Valve-Choke	7950	691657	1	Screw
57117	694352	1	Jet-Main (STD)	7975	495933	1	Bowl-Float
7118	697228	1	Jet-Main (High Altitude)	57987	691326	1	Seal-Shaft, Throttle
7125	698445	1	Carburetor	71091	691333	1	Cap-Limiter
7127	695005	1	Plug-Welch				
7130	691750	1	Valve-Throttle				
7131	494379	1	Throttle Shaft Kit				
7133	494381	1	Float-Carburetor				
56137	281165	1	Gasket-Bowl, Float				
7							
7141	495097	1	Choke Shaft Kit				
7141A	495931	1	Choke Shaft Kit				
57142	697140	1	Nozzle-Carburetor				

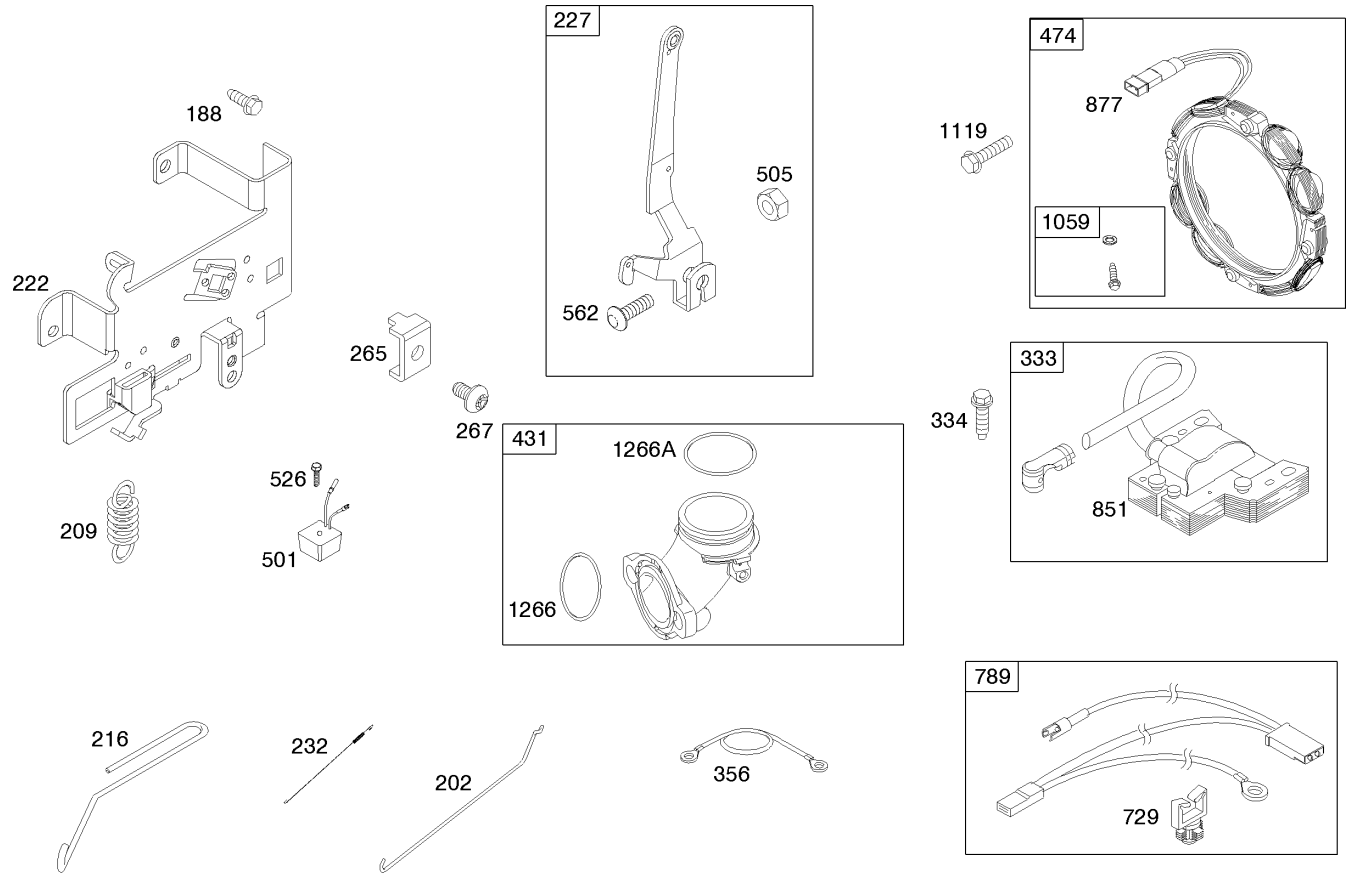


Assemblies include all parts shown in frames.

Governor Assembly

Briggs and Stratton 31H777-0168-E1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
188	691693	1	Screw	1266	691917	1	Seal-O Ring
202	691841	1	Link-Governor, Mechanical	1266A	697123	1	Seal-O Ring
209	692208	1	Spring-Governor				
216	691840	1	Link-Choke				
222	694042	1	Bracket-Control				
227	691374	1	Lever-Control, Governor				
232	691842	1	Spring-Link, Governor				
265	691024	1	Clamp-Casing				
267	695134	1	Screw				
333	492341	1	Armature-Magneto				
334	691061	1	Screw				
356	697089	1	Stop-Wire				
431	697122	1	Elbow-Intake				
474	696458	1	Alternator				
501	691185	1	Regulator				
505	691251	1	Nut				
526	697348	1	Screw				
562	691119	1	Screw				
729	691335	1	Clip-Wire				
789	692037	1	Wiring-Harness				
851	493880	1	Terminal-Spark Plug				
877	399916	1	Connector-Wire, Alternator				
1059	698516	1	Screw And Washer Kit				
1119	691183	1	Screw				

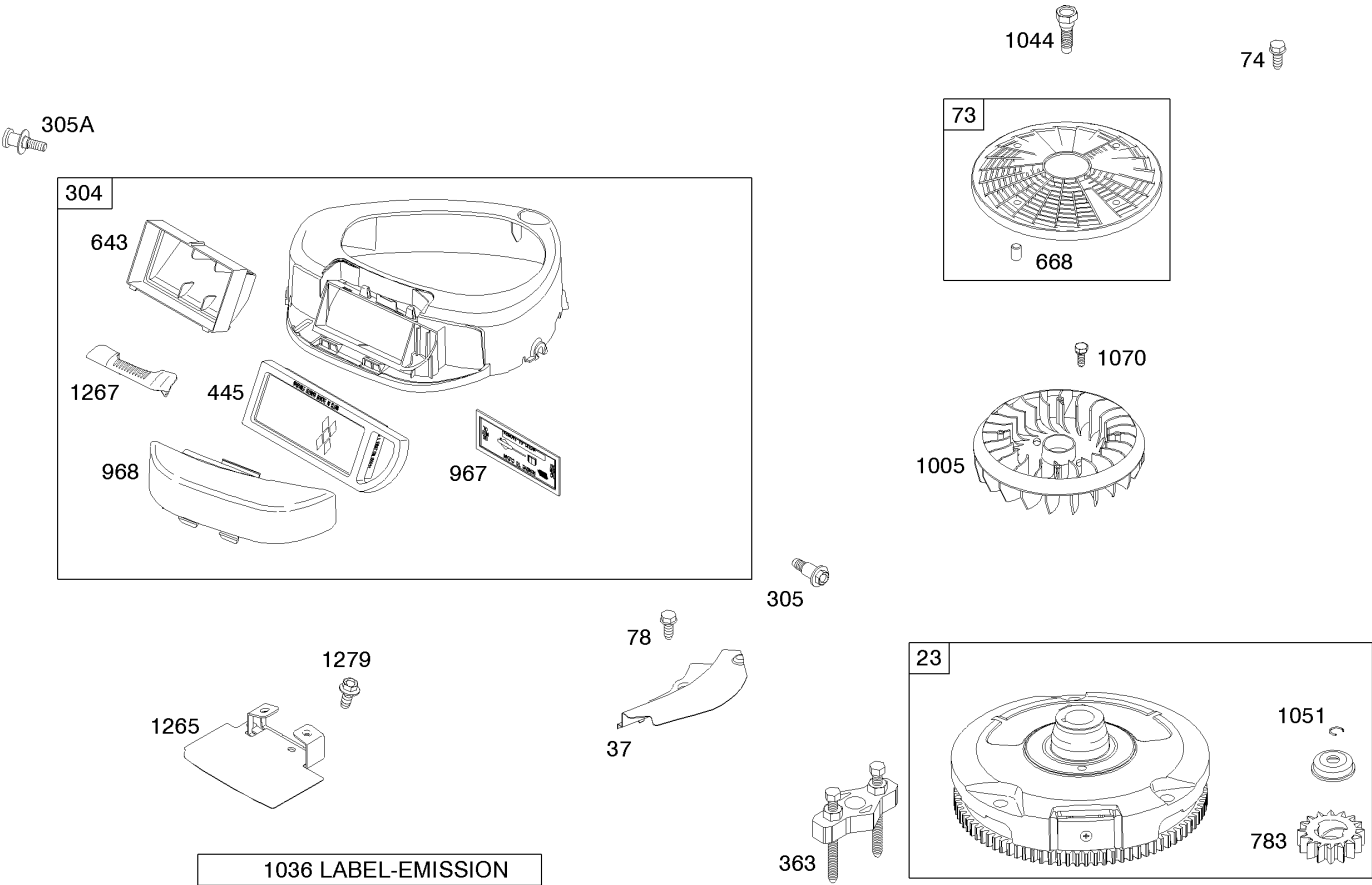


Assemblies include all parts shown in frames.

Blower Housing Assembly



Briggs and Stratton 31H777-0168-E1

Ref	Part No.	Qty.	Description				
23	693556	1	Flywheel				
37	697108	1	Guard-Flywheel				
73	697133	1	Screen-Rotating				
74	697897	1	Screw				
78	691003	1	Screw				
304	698804	1	Housing-Blower				
305	697102	1	Screw				
305A	697103	1	Screw				
363	19203	1	Puller-Flywheel				
445	698083	1	Filter-Cartridge, Air Cleaner				
643	698401	1	Retainer-Filter, Air				
668	691500	1	Spacer				
783	693713	1	Gear-Pinion				
967	697015	1	Filter-Cleaner, Pre				
968	697084	1	Cover-Cleaner, Air				
1005	697111	1	Fan-Flywheel				
1036	695700	1	Label-Emission				
1044	698139	1	Screw				
1051	691265	1	Ring-Retaining				
1070	690372	1	Screw				
1265	697125	1	Support-Housing, Blower				
1267	697135	1	Latch-Blower Housing				
1279	690960	1	Screw				

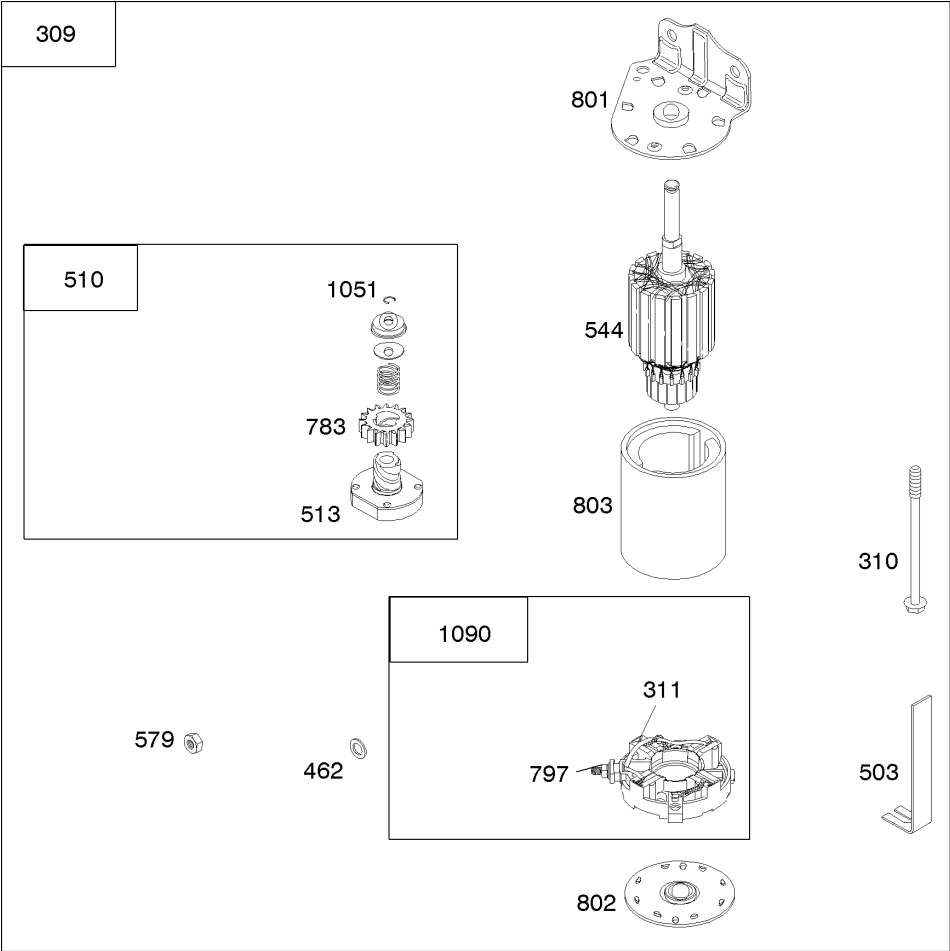

Starter Assembly
Briggs and Stratton 31H777-0168-E1



Ref	Part No.	Qty.	Description				
7309	693551	1	Motor-Starter				
7310	690323	1	Bolt				
7311	497608	1	Brush Set				
7462	691261	1	Washer				
7503	691532	1	Strap-Starter				
7510	693699	1	Drive-Starter				
7513	692024	1	Clutch-Drive				
7544	692034	1	Armature-Starter				
7579	691029	1	Nut				
7697	690372	1	Screw				
7729A	691224	1	Clip-Wire				
7729B	694123	1	Clip-Wire				
7783	693713	1	Gear-Pinion				
7797	693167	1	Nut				
7801	691283	1	Cap-Drive				
7802	691286	1	Cap-End				
7803	693757	1	Housing-Starter				
71051	691265	1	Ring-Retaining				
71090	691293	1	Retainer-Brush				

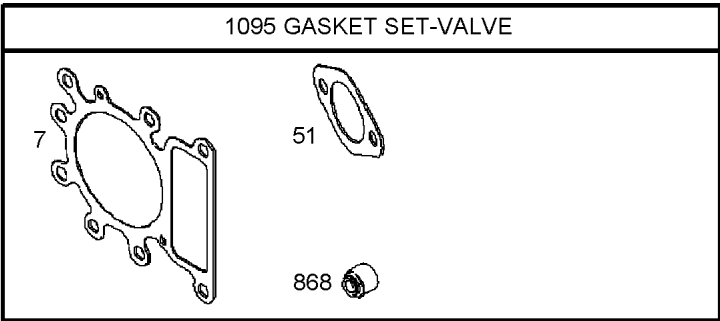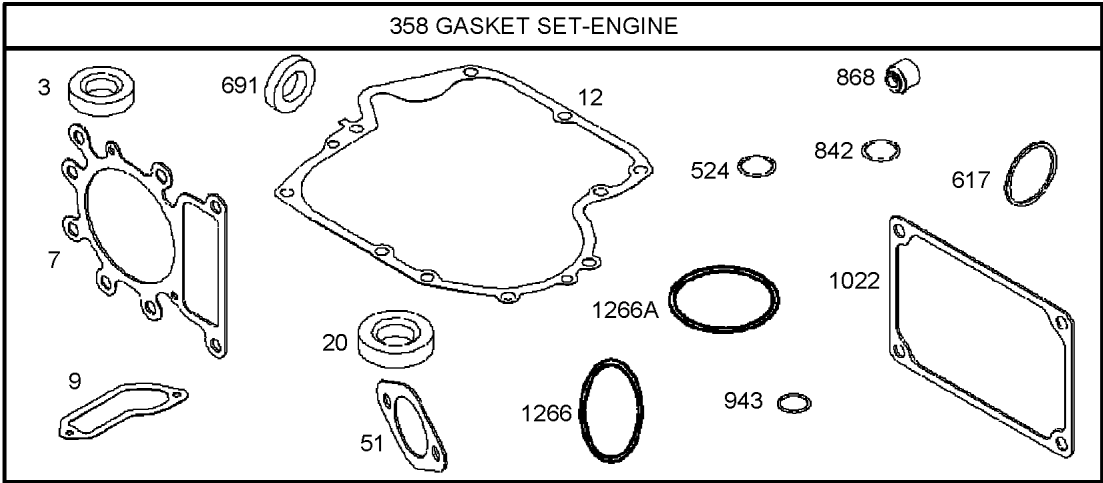

Assemblies include all parts shown in frames.

Gasket Assembly
Briggs and Stratton Model 31H777-0168-E1

Ref	Part No.	Qty.	Description				
373	391086	1	Seal-Oil				
347	692410	1	Gasket-Cylinder Head				
7							
379	697109	1	Gasket-Breather				
3712	697110	1	Gasket-Crankcase				
3720	690947	1	Seal-Oil				
3451	692137	1	Gasket-Intake				
36							
7358	697191	1	Gasket Set-Engine				
35617	692138	1	Seal-O Ring				
7							
37524	691032	1	Seal, O-Ring				
37691	692407	1	Seal-Shaft, Governor				
37842	691031	1	Seal-O Ring				
34868	690968	1	Seal-Valve				
7							
37943	690589	1	Seal, O-Ring				
371022	272475	1	Gasket-Cover, Rocker				
71095	691581	1	Valve Gasket Set				
351266	691917	1	Seal-O Ring				
7							
371266A	697123	0	Seal-O Ring				

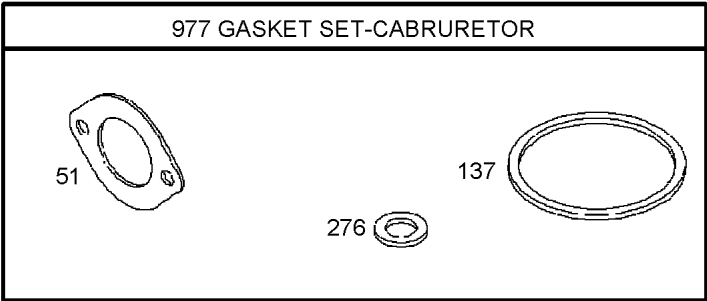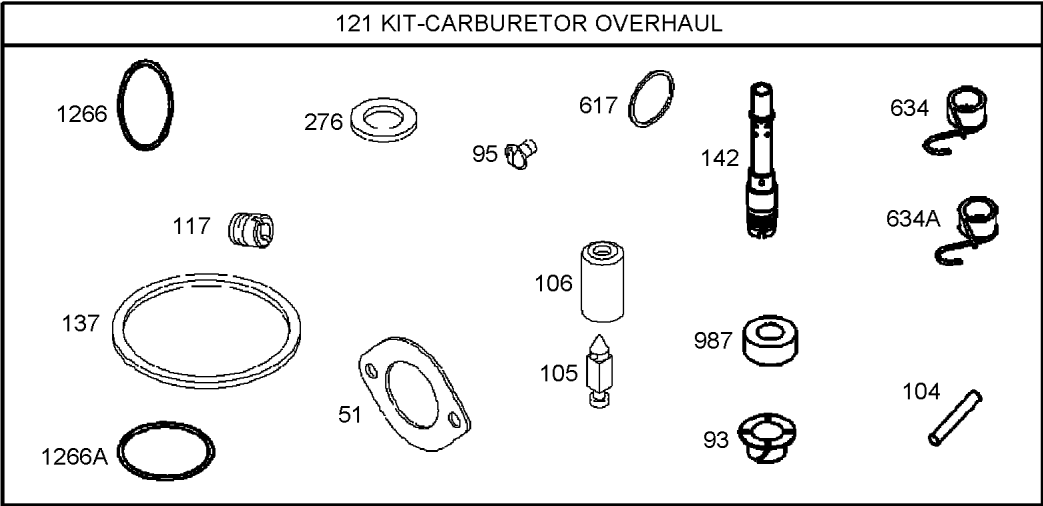

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Briggs and Stratton Model 31H777-0168-E1

Ref	Part No.	Qty.	Description				
51	692137	1	Gasket-Intake				
93	690602	1	Bushing-Shaft, Throttle				
95	691636	1	Screw				
104	690525	1	Pin-Hinge, Carburetor Float				
105	231855	1	Valve-Needle, Float				
106	690577	1	Seat-Inlet				
117	694352	1	Jet-Main (STD)				
121	697241	1	Carburetor Overhaul Kit				
137	281165	1	Gasket-Bowl, Float				
142	697140	1	Nozzle-Carburetor				
276	692255	1	Washer-Sealing				
617	692138	1	Seal-O Ring				
634	690801	1	Spring / Seal ASM				
634A	690802	1	Spring And Seal ASM				
977	690192	1	Carburetor Gasket Set				
987	691326	1	Seal-Shaft, Throttle				
1266	691917	1	Seal-O Ring				
1266A	697123	1	Seal-O Ring				

NOTES

