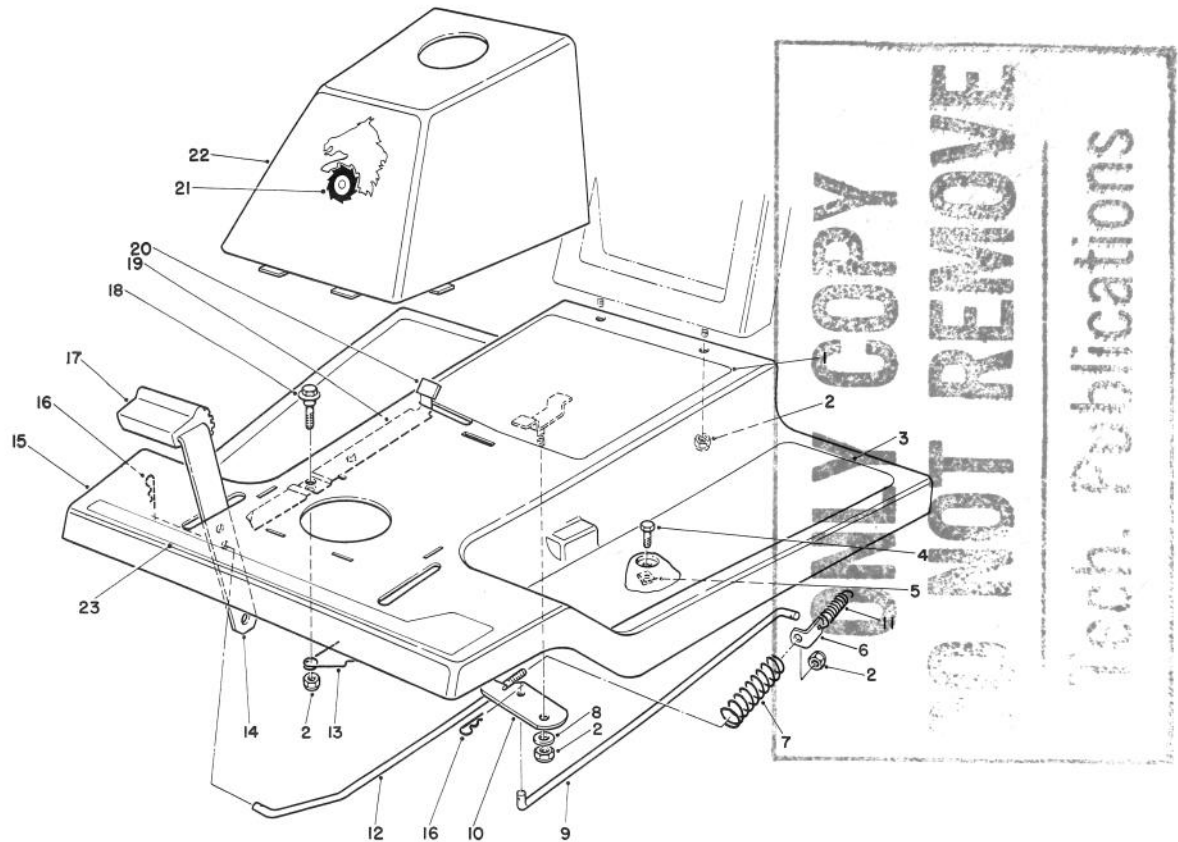


TORO®

MODEL NO. 56132-2000001 & UP

**PARTS
CATALOG****WHEEL HORSE®
8-25 RECYCLER® RIDING MOWER**


C-0727

FRONT BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-1620	Decal - Instruction	1
2	3296-29	Nut - Lock	5
3	44-7030	Tread - Foot Rest	2
4	32104-110	Screw - Cap Hex. Hd.	4
5	3290-347	Nut - U-Type	4
6	67-1590	Bracket - Brake Return	1
7	67-1430	Spring - Compression	1
8	26-9530	Washer - Pivot	1
9	67-1340	Rod - Brake, Transmission	1
10	67-1330	Lever - Brake, Bellcrank	1
11	67-1450	Spring - Extension	1
12	67-1350	Rod - Front, Brake	1

Ref. No.	Part No.	Description	No. Used
13	19-1970	Spring - Brake, Parking	1
14	67-1130	Pedal - Brake & Clutch	2
15	67-1070	Body W.A. - Front	1
16	3290-250	Pin - Hair, Cotter	2
17	65-2920	Pad - Pedal	2
18	19-1470	Bolt - Shoulder	1
19	19-1610	Lever - Brake, Parking	1
20	19-2200	Tip - Brake, Parking	1
21	76-3870	Decal	1
22	55-7102	Tower (Incl. Ref. #21)	1
23	82-6260	Decal - Recycler	1

TPS

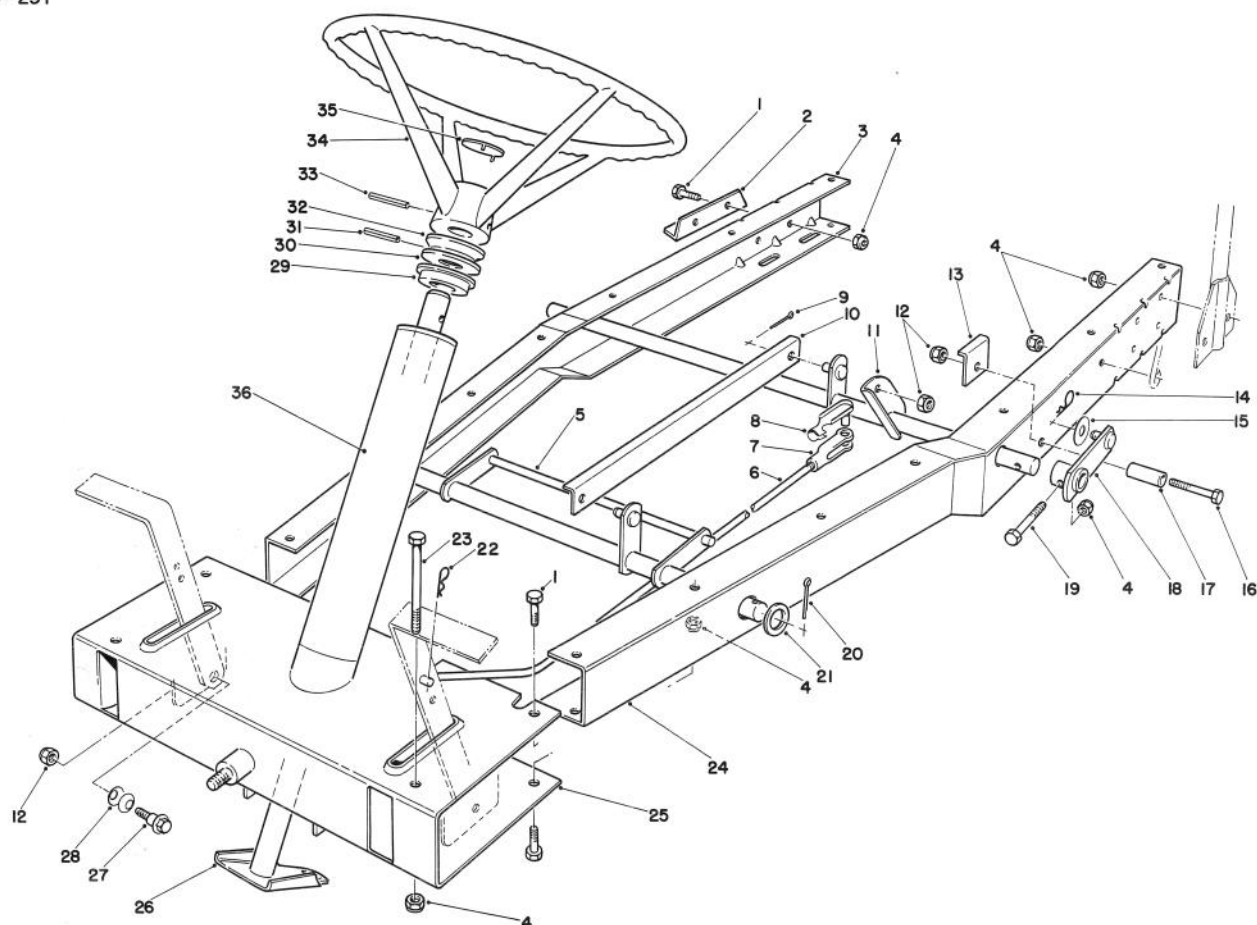


C-0005

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-3	Screw - Cap Hex. Hd.	6
2	44-7140	Mount - Bearing, Axle	1
3	67-0520	Channel - R.H.	1
4	3296-29	Nut - Lock	16
5	67-0010	Lift W.A. - Front, Deck	1
6	67-0430	Rod - Clutch	1
7	282-27	Clevis	1
8	67-1530	Assembly - Pin, Clevis	1
9	3272-6	Pin - Cotter	2
10	67-0090	Bracket - Link, H.O.C.	1
11	67-0050	Tube W.A. - Support, Rear	1
12	3296-39	Nut - Lock	5
13	67-1510	Brace - Stop, Deck	2
14	3290-355	Pin - Hair, Cotter	2
15	67-1460	Washer - Flat	2
16	323-10	Screw - Cap Hex. Hd.	2
17	68-8380	Spacer - Stop, Deck	2
18	67-0300	Lever W.A. - H.O.C.	2
19	46-2511	Bolt - Mounting, Axle	2

Ref. No.	Part No.	Description	No. Used
20	3272-23	Pin - Cotter	2
21	3256-29	Washer - Flat	2
22	3290-250	Pin - Hair, Cotter	1
23	322-14	Screw - Cap Hex. Hd.	2
24	67-0530	Channel - L.H.	1
25	67-0450	Frame W.A. - Front	1
26	67-0830	Shaft W.A. - Steering	1
27	67-0870	Bolt - Shoulder	2
28	3290-413	Washer - Belleville	4
29	67-0850	Bushing - Steering	2
30	67-0860	Washer - Steering	1
31	32121-32	Pin - Roll	1
32	67-0440	Spacer - Steering	1
33	32121-78	Pin - Roll	1
34	49-3240	Wheel - Steering	1
35	66-6910	Insert - Wheel, Steering	1
36	76-4080	Decal	1
*	13-6049	Kit - Loose parts	1

*Not Illustrated

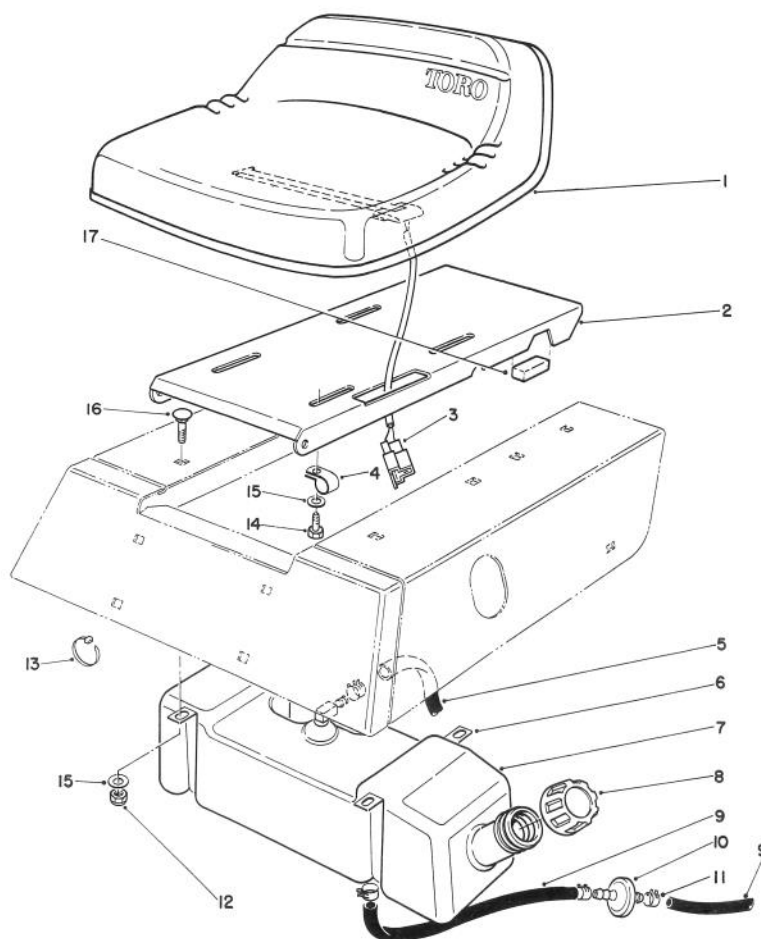


C-0002A

SEAT & GAS TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-6680	Seat	1
2	67-1241	Base - Seat	1
3	38-1420	Switch - Seat	1
4	18-2970	R-Clamp	1
5	47-2986	Hose - Gas	1
6	67-0950	Strap - Tank, Gas	2
7	80-4580	Tank - Gas	1
8	55-3576	Assembly - Cap, Gas	1
9	47-2964	Hose - Gas	2

Ref. No.	Part No.	Description	No. Used
10	56-6360	Filter	1
11	2412-98	Clamp - Hose	5
12	3296-29	Nut - Lock	4
13	3290-378	Tie - Cable	1
14	322-3	Screw - Cap Hex. Hd.	4
15	3256-23	Washer - Flat	8
16	3230-20	Bolt - Carriage	6
17	66-6920	Pad - Isolator	2

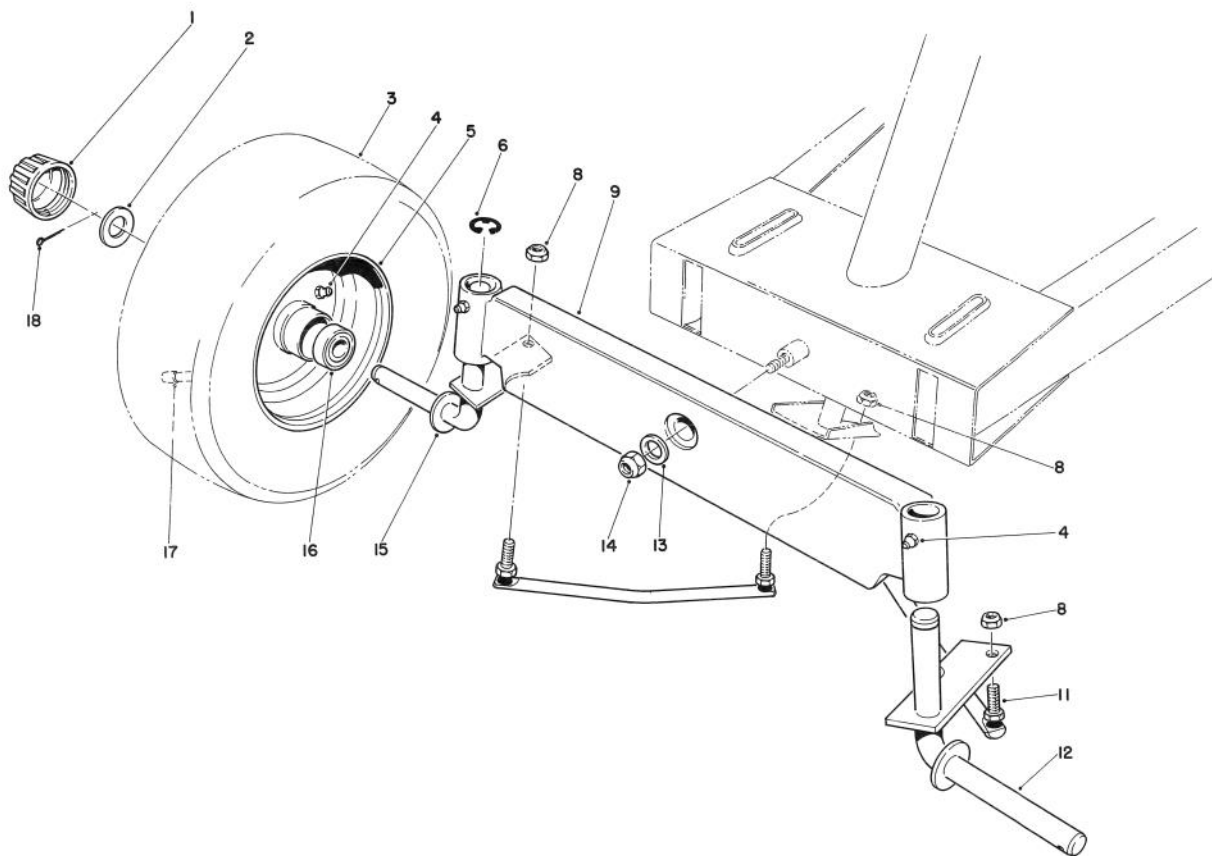


C-0003A

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-9780	Cap - Hub	2
2	28-2480	Washer - Flat	2
3	231-116	Tire	2
4	302-5	Fitting - Grease	4
5	217-80	Rim	2
6	32151-48	Ring - Retaining	2
8	3296-4	Nut - Lock	4
9	67-0990	Axle - Front	1

Ref. No.	Part No.	Description	No. Used
11	67-0880	Assembly - Tie Rod	2
12	67-0810	Spindle - L.H.	1
13	3256-26	Washer - Flat	1
14	3296-25	Nut - Lock	1
15	67-0800	Spindle - R.H.	1
16	251-210	Bearing	4
17	232-27	Valve Stem w/Cap	2
18	3272-12	Pin - Cotter	2

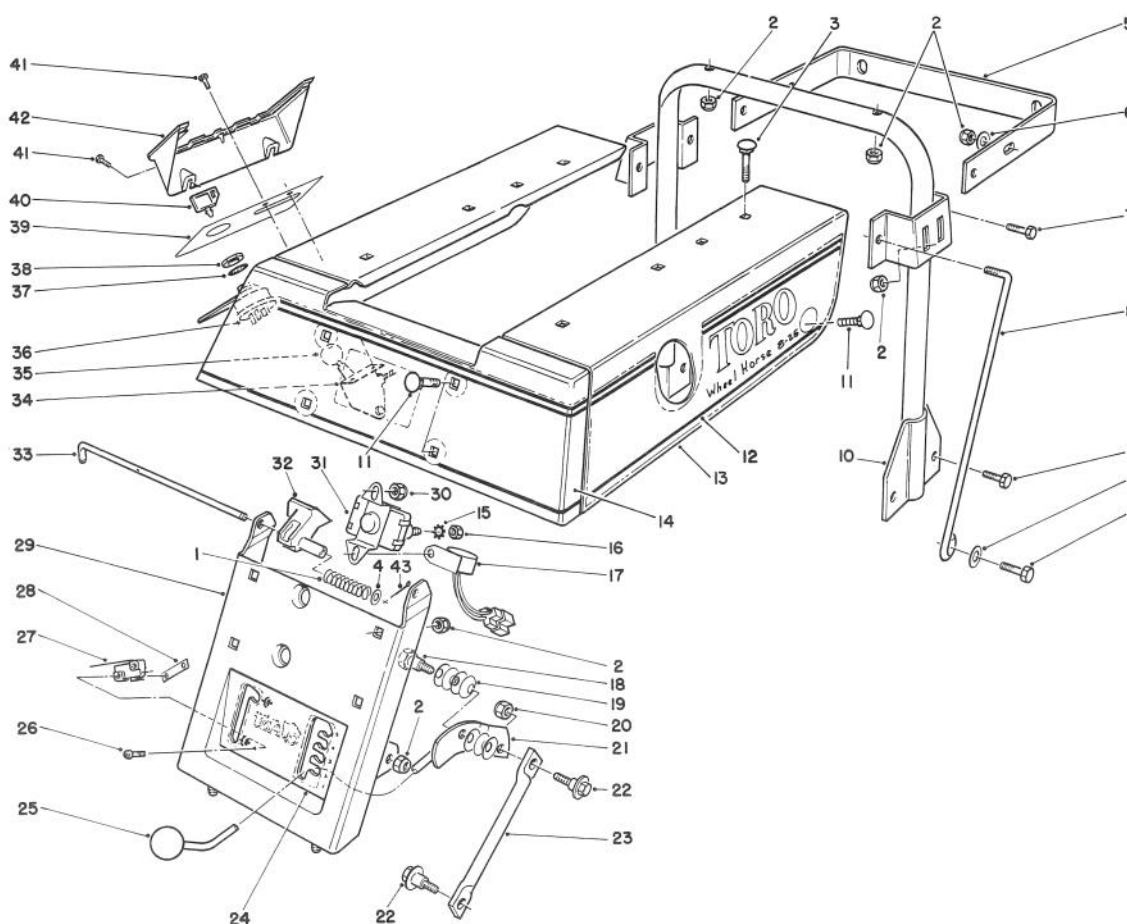


C-0007

REAR BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-8310	Spring - Prop, Seat	1
2	3296-29	Nut - Lock	11
3	3230-3	Bolt - Carriage	2
4	3256-22	Washer - Flat	1
5	67-1500	Bar - Stand	1
6	3256-23	Washer - Flat	4
7	322-5	Screw - Cap Hex. Hd.	4
8	67-1480	Brace - Support, Seat	2
9	322-3	Screw - Cap Hex. Hd.	4
10	67-0790	Support W.A. - Seat	1
11	3230-20	Bolt - Carriage	6
12	76-3840	Decal - Toro L.H.	1
*	76-3880	Decal - Toro R.H.	1
13	67-0231	Body W.A. - Rear	1
14	76-3850	Decal - Front	1
15	3255-7	Washer - Lock, Int. Tooth	2
16	3218-1	Nut - Jam	2
17	28-7890	Module - Interlock	1
18	28-0540	Bolt - Shoulder	1
19	3290-413	Washer - Belleville	7
20	3296-39	Nut - Lock	1
21	67-0270	Handle W.A. - H.O.C.	1
22	67-0870	Bolt - Shoulder	2

Ref. No.	Part No.	Description	No. Used
23	67-0080	Link - H.O.C.	1
24	76-3920	Decal - H.O.C. & Deck Engagement	1
25	233-22	Knob	1
26	3290-313	Screw - Pan Head	2
27	40-8200	Switch - Micro	1
28	3290-354	Nut - Double	1
29	67-1090	Support W.A. - Seat	1
30	3296-42	Nut - Lock	2
31	47-1910	Solenoid	1
32	80-4330	Prop - Seat	1
33	80-4550	Rod - Base, Seat	1
34	66-6640	Control - Throttle	1
35	233-59	Knob	1
36	23-0660	Switch - Ignition (Incl. Ref. #37 & 38)	1
37	3254-5	Washer - Lock, Int. Tooth	1
38	218-461	Nut - Hex.	1
39	67-1270	Decal - Panel, Control	1
40	63-8360	Key	2
41	32144-42	Screw - Hex. Hd. Tapping	4
42	67-1030	Cover - Panel, Control	1
43	3274-4	Pin - Cotter	1

*Not Illustrated

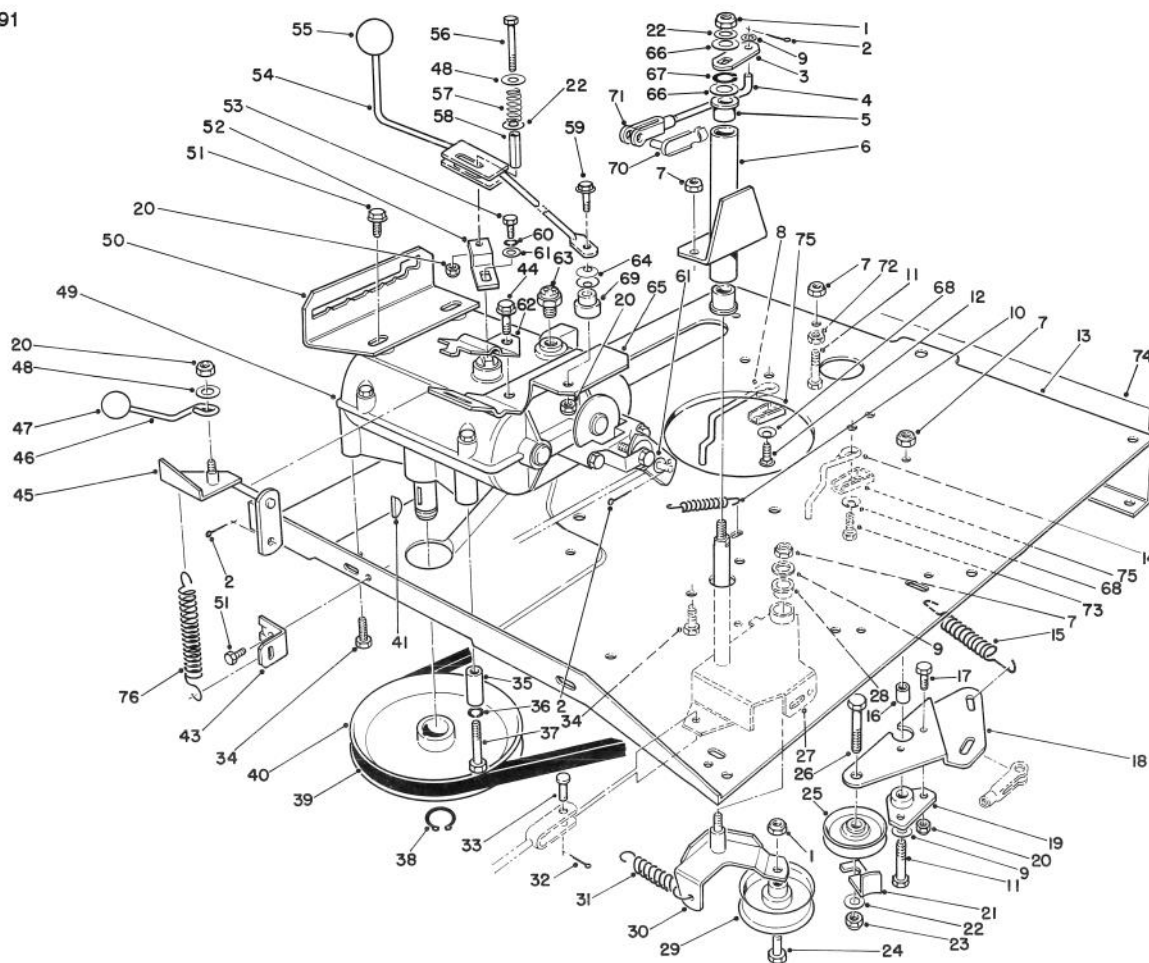


C-0009A

TRANSMISSION & LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	2
2	3272-6	Pin - Cotter	1
3	67-0690	Flat - Deck Engage	1
4	68-8370	Link - Deck Engage	1
5	256-90	Bushing	3
6	67-0540	Tube W.A. - Pivot (Incl. Ref. #5)	1
7	3296-29	Nut - Lock	8
8	67-0930	Guide R.H. - Belt, Engine	1
9	3256-23	Washer - Flat	3
10	26-6700	Spring - Return, Brake	1
11	322-6	Screw - Cap Hex. Hd.	1
12	3230-2	Bolt - Carriage	1
13	76-4090	Plate - Engine	1
14	67-0940	Guide L.H. - Belt, Engine	1
15	68-9950	Spring - Traction	1
16	67-0410	Spacer - Pivot	1
17	321-4	Screw - Cap Hex. Hd.	2
18	67-0420	Plate - Mount, idler	1
19	67-0400	Mount - Pivot	1
20	3296-42	Nut - Lock	5
21	12-9020	Retainer - Belt	1
22	3256-24	Washer - Flat	3
23	3296-59	Nut - Lock	1


Ref. No.	Part No.	Description	No. Used
24	323-10	Screw - Cap Hex. Hd.	1
25	12-5820	Pulley - Idler, Traction	1
26	323-8	Screw - Cap Hex. Hd.	1
27	67-0360	Bracket - Arm, Idler (Incl. Ref. #28)	1
28	256-155	Bushing	1
29	56-9870	Pulley - Idler, Deck	1
30	67-0330	Idler - Plate, Mount	1
31	67-9170	Spring	1
32	3274-4	Pin - Cotter	1
33	283-67	Pin - Clevis	1
34	322-3	Screw - Cap Hex. Hd.	5
35	67-0920	Guide - Belt	1
36	3253-4	Washer - Lock	1
37	322-10	Screw - Cap Hex. Hd.	1
38	32120-64	Ring - Retaining	1
39	67-0900	Belt - Traction	1
40	82-6450	Pulley - Transmission	1
41	3257-23	Key	1
43	67-0750	Bracket - Mount, Spring	1
44	32144-70	Screw - Hex. Hd. Tapping	1
45	67-0600	Lever W.A. - Deck Engage	1
46	67-0640	Handle - Deck Engage	1

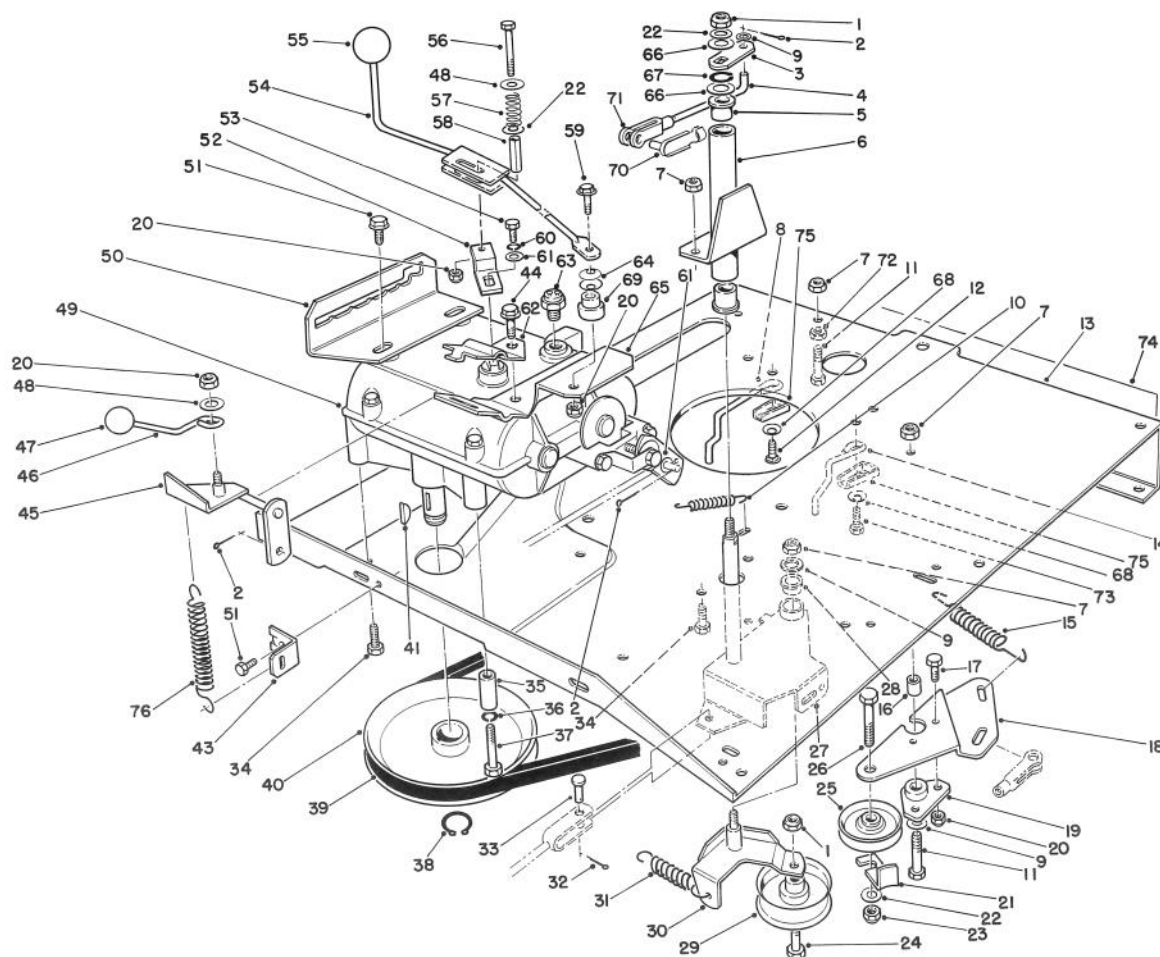

C-0009A

TRANSMISSION & LINKAGE ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
47	233-22	Knob	1	62	67-0670	Bracket - Engage, Deck	1
48	3256-55	Washer - Fender	2	63	28-4250	Switch - Neutral	1
49	67-1400	Transmission	1	64	3290-478	Washer - Belleville	2
50	56-7630	Gate - Shift	1	65	67-0660	Bracket - Mount, Shifter	1
51	32144-14	Screw - Wash. Hd., Tap.	4	66	20-3220	Washer - Flat	2
52	56-7620	Lever - Shift	1	67	32151-62	Ring - Retaining	1
53	329-4	Screw - Cap Hex. Hd.	1	68	3290-456	Washer - Belleville	2
54	76-3940	Lever W.A. - Shift	1	69	76-3970	Spacer - Pivot	1
55	233-48	Knob	1	70	67-1530	Assembly - Pin, Clevis	1
56	321-15	Screw - Cap Hex. Hd.	1	71	282-27	Clevis	1
57	56-7730	Spring	1	72	3218-2	Nut - Jam	1
58	56-7740	Spacer	1	73	32144-26	Screw - Thread Forming	1
59	321-8	Screw - Cap Hex. Hd.	1	74	76-3860	Decal	1
60	3253-3	Washer - Lock	1	75	76-3820	Anchor - Guide, Belt	2
61	3256-22	Washer - Flat	5	76	76-4660	Spring	1

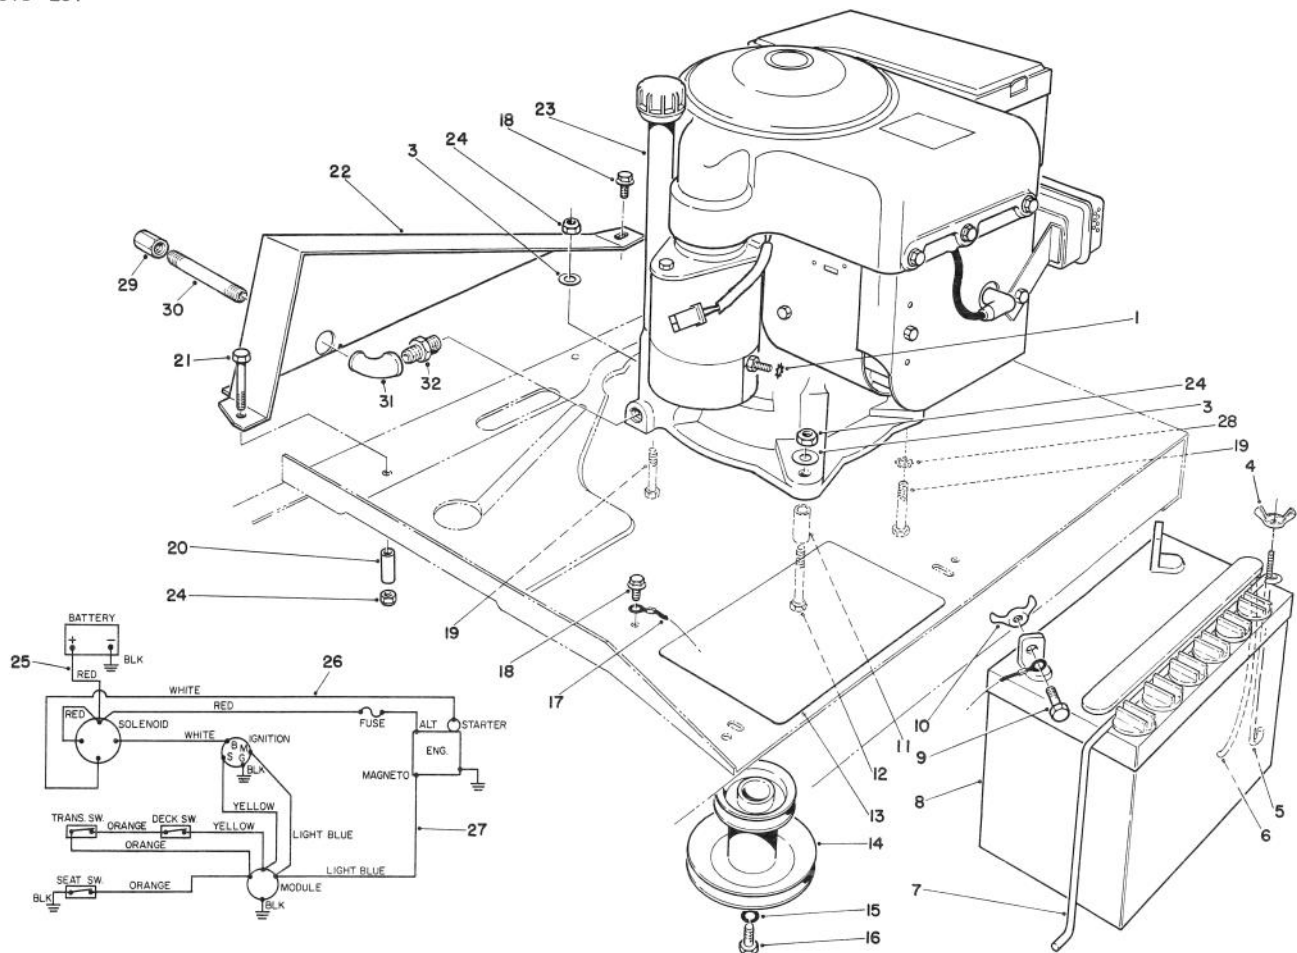


C-0006A

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3255-7	Washer - Lock, Int. Tooth	1
3	3256-23	Washer - Flat	4
4	32103-14	Nut - Wing	1
5	56-7720	Post - Hold Down, Battery	1
6	56-2540	Tube - Drain	1
7	56-7710	Hold Down - Battery	1
8	80-2600	Battery 12V	1
9	321-4	Screw - Cap Hex. Hd.	2
10	32103-22	Nut - Wing	2
11	80-4560	Spacer	1
12	322-12	Screw - Cap Hex. Hd.	1
13	62-4300	Pad - Anti-Skid	1
14	83-4840	Pulley - Engine	1
15	3256-25	Washer - Flat	1
16	62-3760	Screw - Cap Hex. Hd.	1
17	56-7870	Assembly - Wire Battery to Ground	1

Ref. No.	Part No.	Description	No. Used
18	32144-14	Screw - Self Tapping	2
19	322-7	Screw - Cap Hex. Hd.	3
20	67-0920	Guide - Belt	1
21	322-10	Screw - Cap Hex. Hd.	1
22	67-0962	Guard - Chain	1
23		Engine - 8 H.P. B & S	1
24	3296-29	Nut - Lock	5
25	67-1170	Assembly - Wire Battery to Solenoid	1
26	67-1160	Assembly - Wire Solenoid to Starter	1
27	82-6740	Harness - Wire	1
28	3255-8	Washer - Lock	4
29	288-2	Cap - Pipe	1
30	289-34	Nipple - Pipe	1
31	2811-17	Elbow - Street	1
32	2812-1	Reducer	1

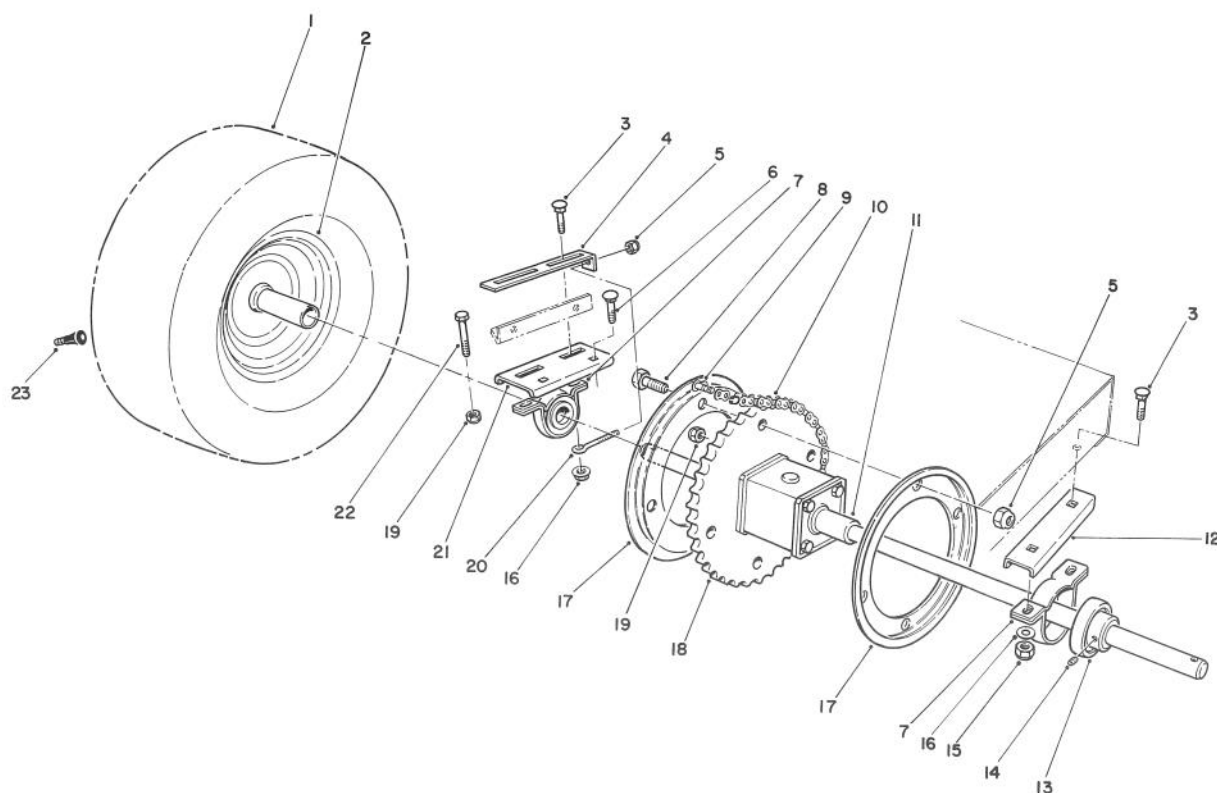


C-0008

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	231-115	Tire	2
2	44-9760	Rim	2
3	3231-4	Bolt - Carriage	2
4	61-9990	Plate - Adjusting	1
5	3296-42	Nut - Lock	5
6	3231-25	Bolt - Carriage	4
7	47-1480	Mount - Bearing	2
8	321-4	Screw - Cap Hex. Hd.	4
9	2710-11	Link - Connecting	1
10	67-0910	Chain	1
		(Incl. Ref. #9)	1
11	56-9960	Differential	1
12	66-6630	Support L.H.	1

Ref. No.	Part No.	Description	No. Used
13	47-1490	Bearing	2
		(Incl. Ref. #14)	
14	3245-32	Screw - Set	4
15	3296-39	Nut - Lock	6
16	3256-24	Washer - Flat	4
17	76-1580	Guide - Chain	2
18	76-4010	Sprocket	1
19	3296-29	Nut - Lock	6
20	61-9980	Screw - Adjusting	1
21	66-6620	Support R.H.	1
22	46-2511	Bolt - Axle	2
23	232-27	Valve Stem w/Cap	2
*	11-0410	Kit - Tire Chains (Optional)	1

*Not Illustrated

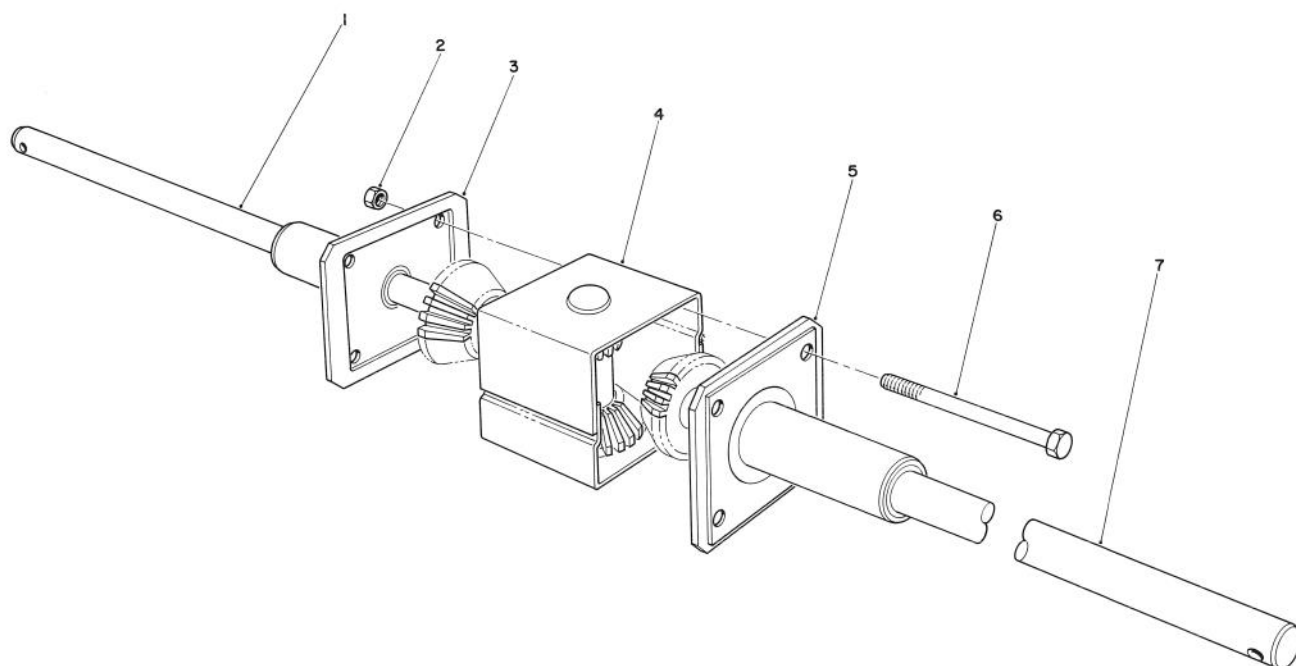


C-0010

DIFFERENTIAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	55-7762	Axle - R.H.	1	5	55-7771	Cap - End, L.H.	1
2	32152-1	Nut - Lock	4	6	322-22	Screw - Cap Hex. Hd.	4
3	55-7770	Cap - End, R.H.	1	7	55-7763	Axle - L.H.	1
4	55-7780	Case - Gear, Transfer	1	*	56-9960	Differential - Complete	1


*Not Illustrated

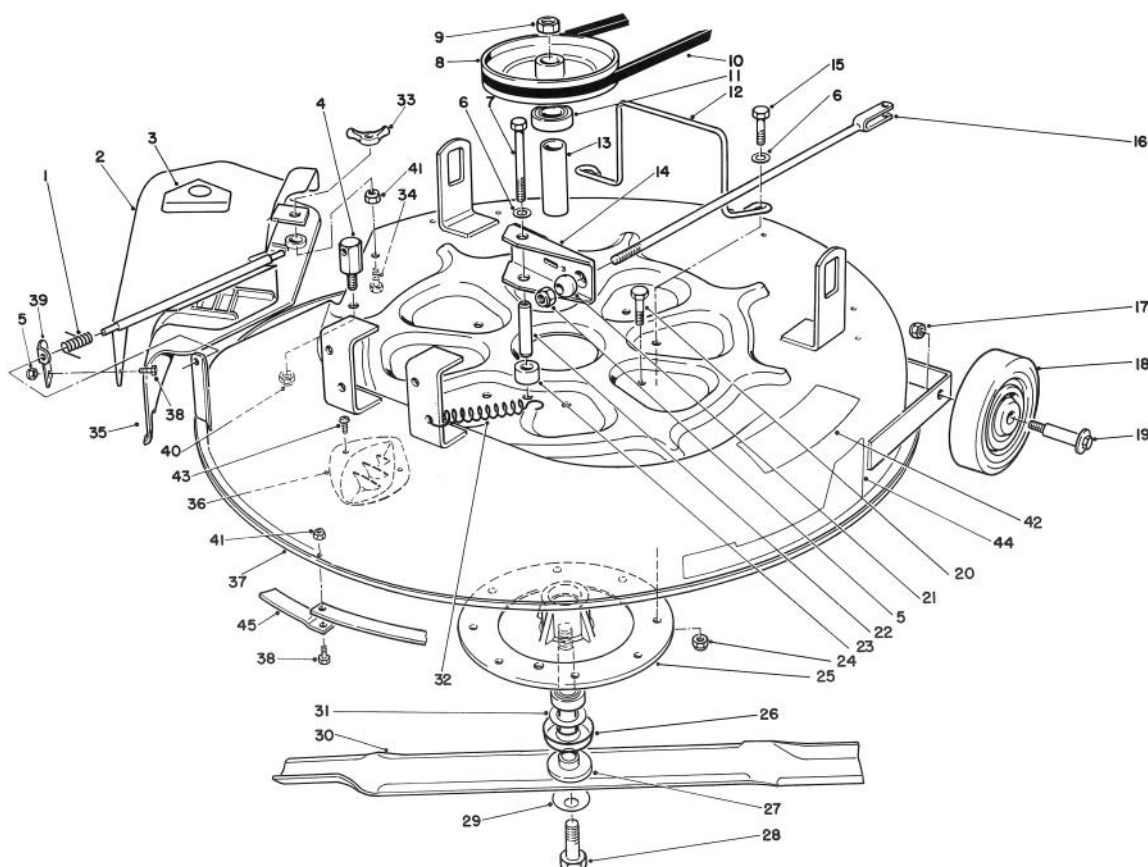

C-0728

CUTTING UNIT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	28-8010	Spring	1	23	67-0740	Spacer - Brake, Deck	1
2	67-1151	Deflector (Incl. Ref. #3)	1	24	3296-29	Nut - Lock	9
3	54-9220	Decal - Danger	1	25	67-0970	Hub - Spindle	1
4	67-0140	Post - Pivot	1	26	80-4360	Shield - Bearing	1
5	3296-8	Nut - Lock	2	27	80-4340	Shaft - Spindle	1
6	3256-23	Washer - Lock	3	28	26-0671	Bolt - Blade	1
7	322-22	Screw - Cap Hex. Hd.	1	29	3290-465	Washer - Belleville	1
8	80-4460	Pulley - Deck	1	30	80-4530	Blade	1
9	3219-6	Nut - Hex.	1	31	80-4380	Spacer - Spindle	1
10	67-1390	V-Belt	1	32	67-1440	Spring - Brake	1
11	38-7820	Bearing - Ball	2	33	32109-14	Nut - Wing	1
12	80-4520	Guide - Belt	1	34	3234-21	Screw - Cap Hex. Hd.	1
13	62-3660	Spacer - Bearing	1	35	80-4450	Cover - Recycler	1
14	67-1370	Assy. - Brake, Deck	1	36	80-4510	Kicker	4
15	322-6	Screw - Cap Hex. Hd.	2	37	82-6230	Deck	1
16	67-0570	Rod W.A. - Brake, Deck	1	38	321-4	Screw - Cap Hex. Hd.	9
17	3296-39	Nut - Lock	2	39	67-1600	Bracket - Deflector	1
18	61-9760	Wheel - Deck	2	40	3296-59	Nut - Lock	1
19	56-6590	Bolt - Wheel	2	41	3296-42	Nut - Lock	9
20	322-3	Screw - Cap Hex. Hd.	6	42	76-4070	Decal - Danger	1
21	67-0710	Ball - Swivel	1	43	32104-130	Screw - Special	8
22	67-0730	Post - Mount, Brake	1	44	82-6250	Decal - Recycler	1
				45	80-4540	Ring - Deck, Recycler	4

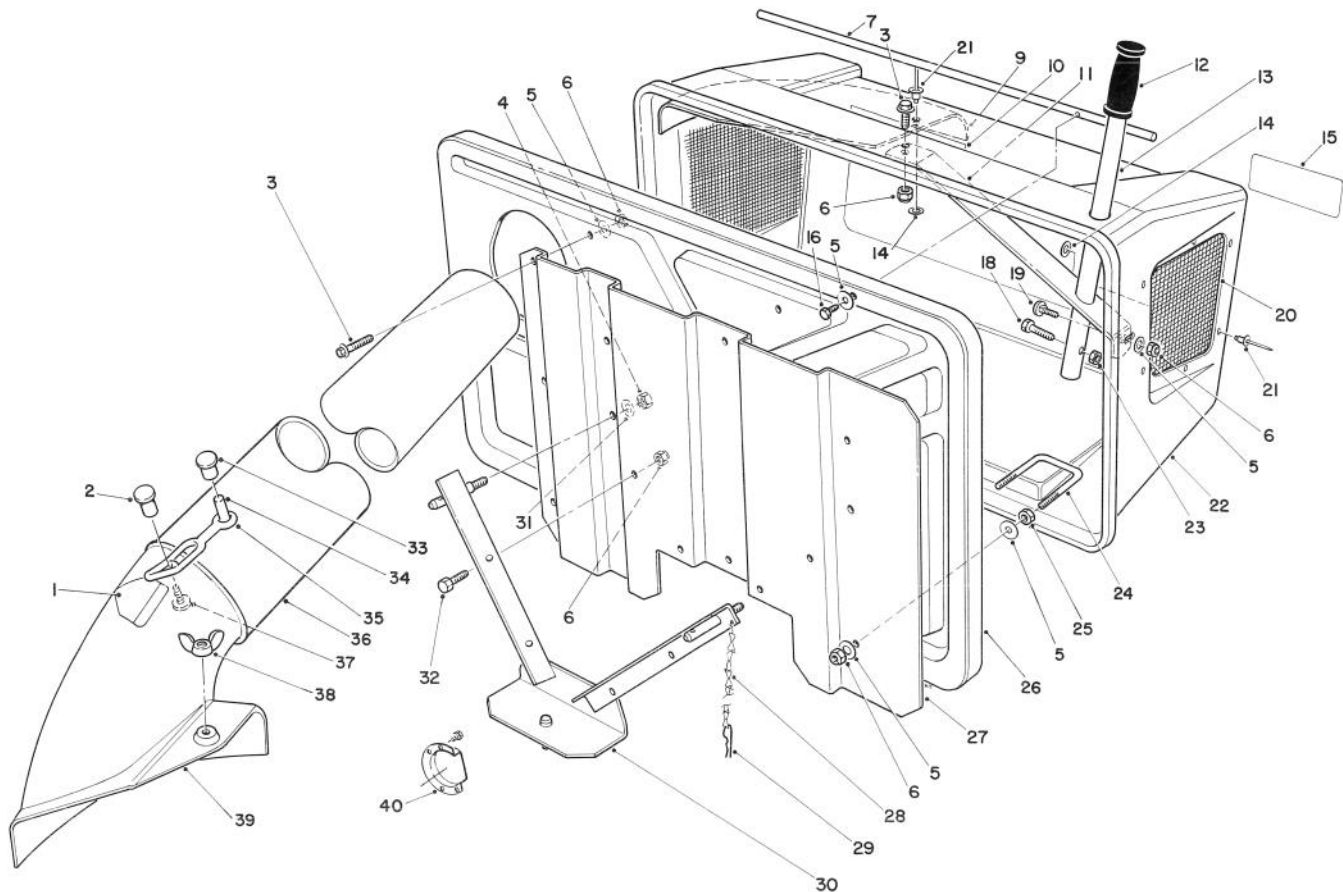


C-0011B

EASY EMPTY BAGGING KIT MODEL 59047 (Optional)

Ref. No.	Part No.	Description	No. Used
1	54-9220	Decal - Chute	1
2	233-68	Knob	1
3	3234-5	Screw - Hex. Hd. Flange	8
4	3296-17	Nut - Lock	2
5	3256-2	Washer - Flat	14
6	3296-29	Nut - Lock	15
7	25-1360	Rod - Pivot	1
9	25-1470	Deflector	1
10	46-2850	Decal - Warning	1
11	25-1390	Guide - Handle	1
12	233-40	Grip - Handle	1
13	25-1380	Tube - Handle	1
14	3269-6	Washer - Backup, Rivet	14
15	25-2200	Decal - Easy Empty Bagger	1
16	321-30	Screw - Cap Hex. Hd.	2
18	321-8	Screw - Cap Hex. Hd.	1
19	3230-1	Bolt - Carriage	1
20	26-0010	Screen	1
21	3290-382	Rivet - Pop	14
22	25-1290	Hopper	1

Ref. No.	Part No.	Description	No. Used
23	32153-4	Nut - Lock	1
24	25-1370	Latch	1
25	3217-6	Nut - Hex.	2
26	67-9980	Cap	1
27	67-1540	Plate - Mounting	1
28	2830-9	Chain	2
29	3290-355	Pin - Hair, Cotter	2
30	67-9900	V-Bracket	1
31	3256-24	Washer - Flat	2
32	322-2	Screw - Cap Hex. Hd.	4
33	3290-479	Fastener - Panel	1
34	22-9741	Spacer	1
35	82-5690	Retainer - Duct	1
36	67-9890	Duct	1
37	32140-64	Screw	1
38	32103-14	Nut - Wing	1
39	67-1550	Chute	1
		(Incl. Ref. #1, 2 & 37)	
40	2210-319	Deflector - Muffler	1

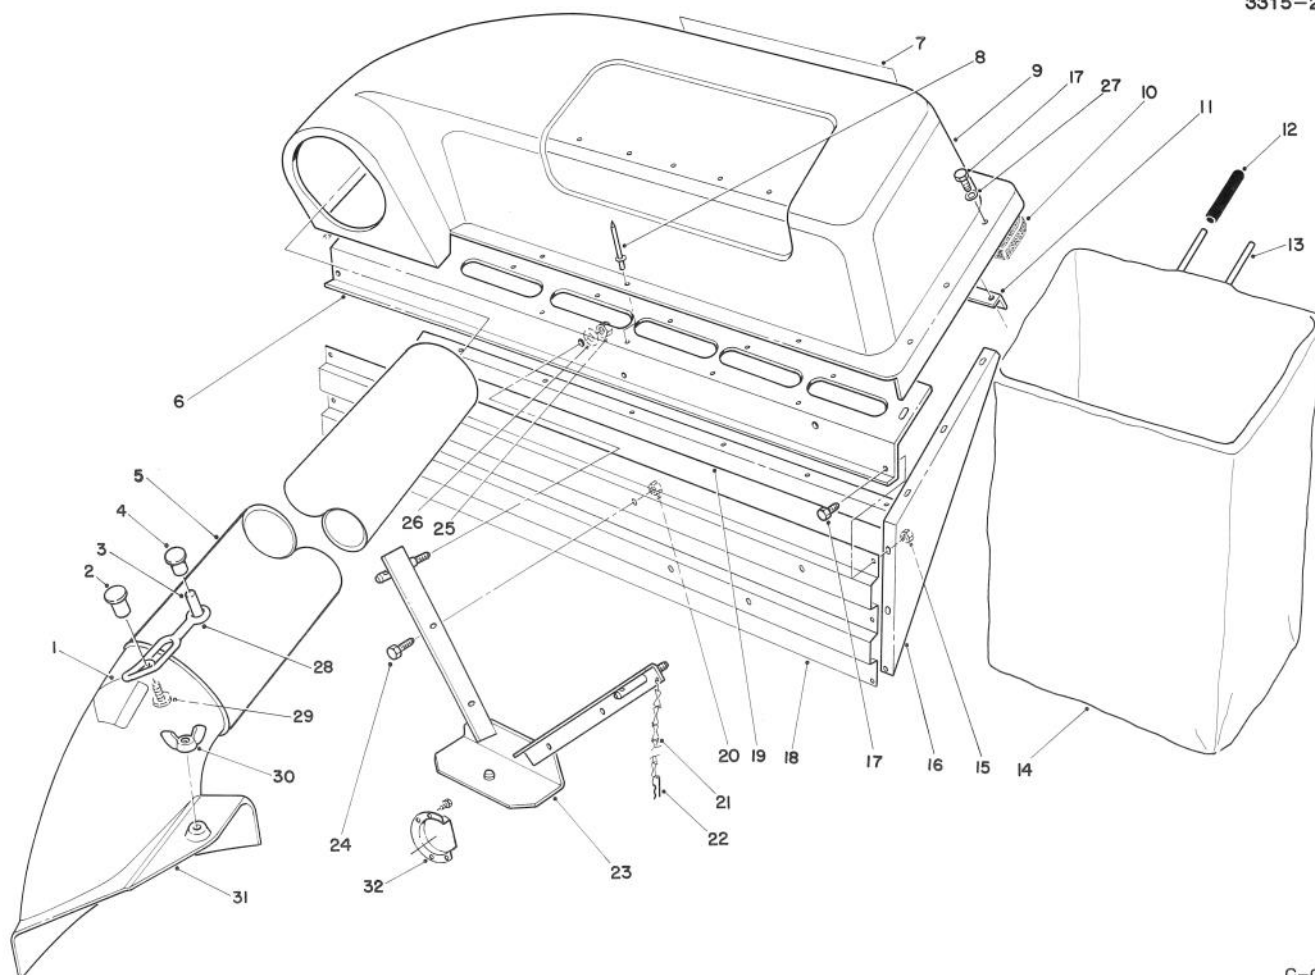


C-0012B

TWIN BAGGER GRASS CATCHER MODEL 59053 (Opt.)

Ref. No.	Part No.	Description	No. Used
1	54-9220	Decal - Chute	1
2	233-68	Knob	1
3	22-9741	Spacer	1
4	3290479	Fastner - Panel	1
5	67-9890	Duct	1
6	57-7920	Baffle	1
7	57-7840	Decal - Twin Bagger	1
8	3269-15	Rivet - Pop	18
9	67-9960	Cover	1
10	57-7820	Seal - Foam	1
11	57-7880	Bracket - Frame, Bag	2
12	47-2550	Grip - Handle	4
13	57-7960	Frame - Bag	2
14	57-7990	Bag	2
15	3296-42	Nut - Lock	12
16	57-7980	Plate - Side	2
17	321-3	Screw - Cap Hex. Hd.	12

Ref. No.	Part No.	Description	No. Used
18	67-9960	Shield - Muffler	1
19	57-7890	Channel - Support, Bag	1
20	3296-29	Nut - Lock	4
21	2830-9	Chain	2
22	3290-355	Pin - Hair, Cotter	2
23	67-9900	V-Bracket	1
24	322-2	Screw - Cap Hex. Hd.	4
25	3296-17	Nut - Lock	2
26	3256-24	Washer - Flat	2
27	3256-1	Washer - Flat	5
28	82-5690	Retainer - Duct	1
29	32140-64	Screw	1
30	32103-14	Nut - Wing	1
31	67-1550	Assembly - Chute (Incl. Ref. #1, 2 & 29)	1
32	2210-319	Deflector - Muffler	1

BRIGGS & STRATTON MODEL NO. 191707-0121-01

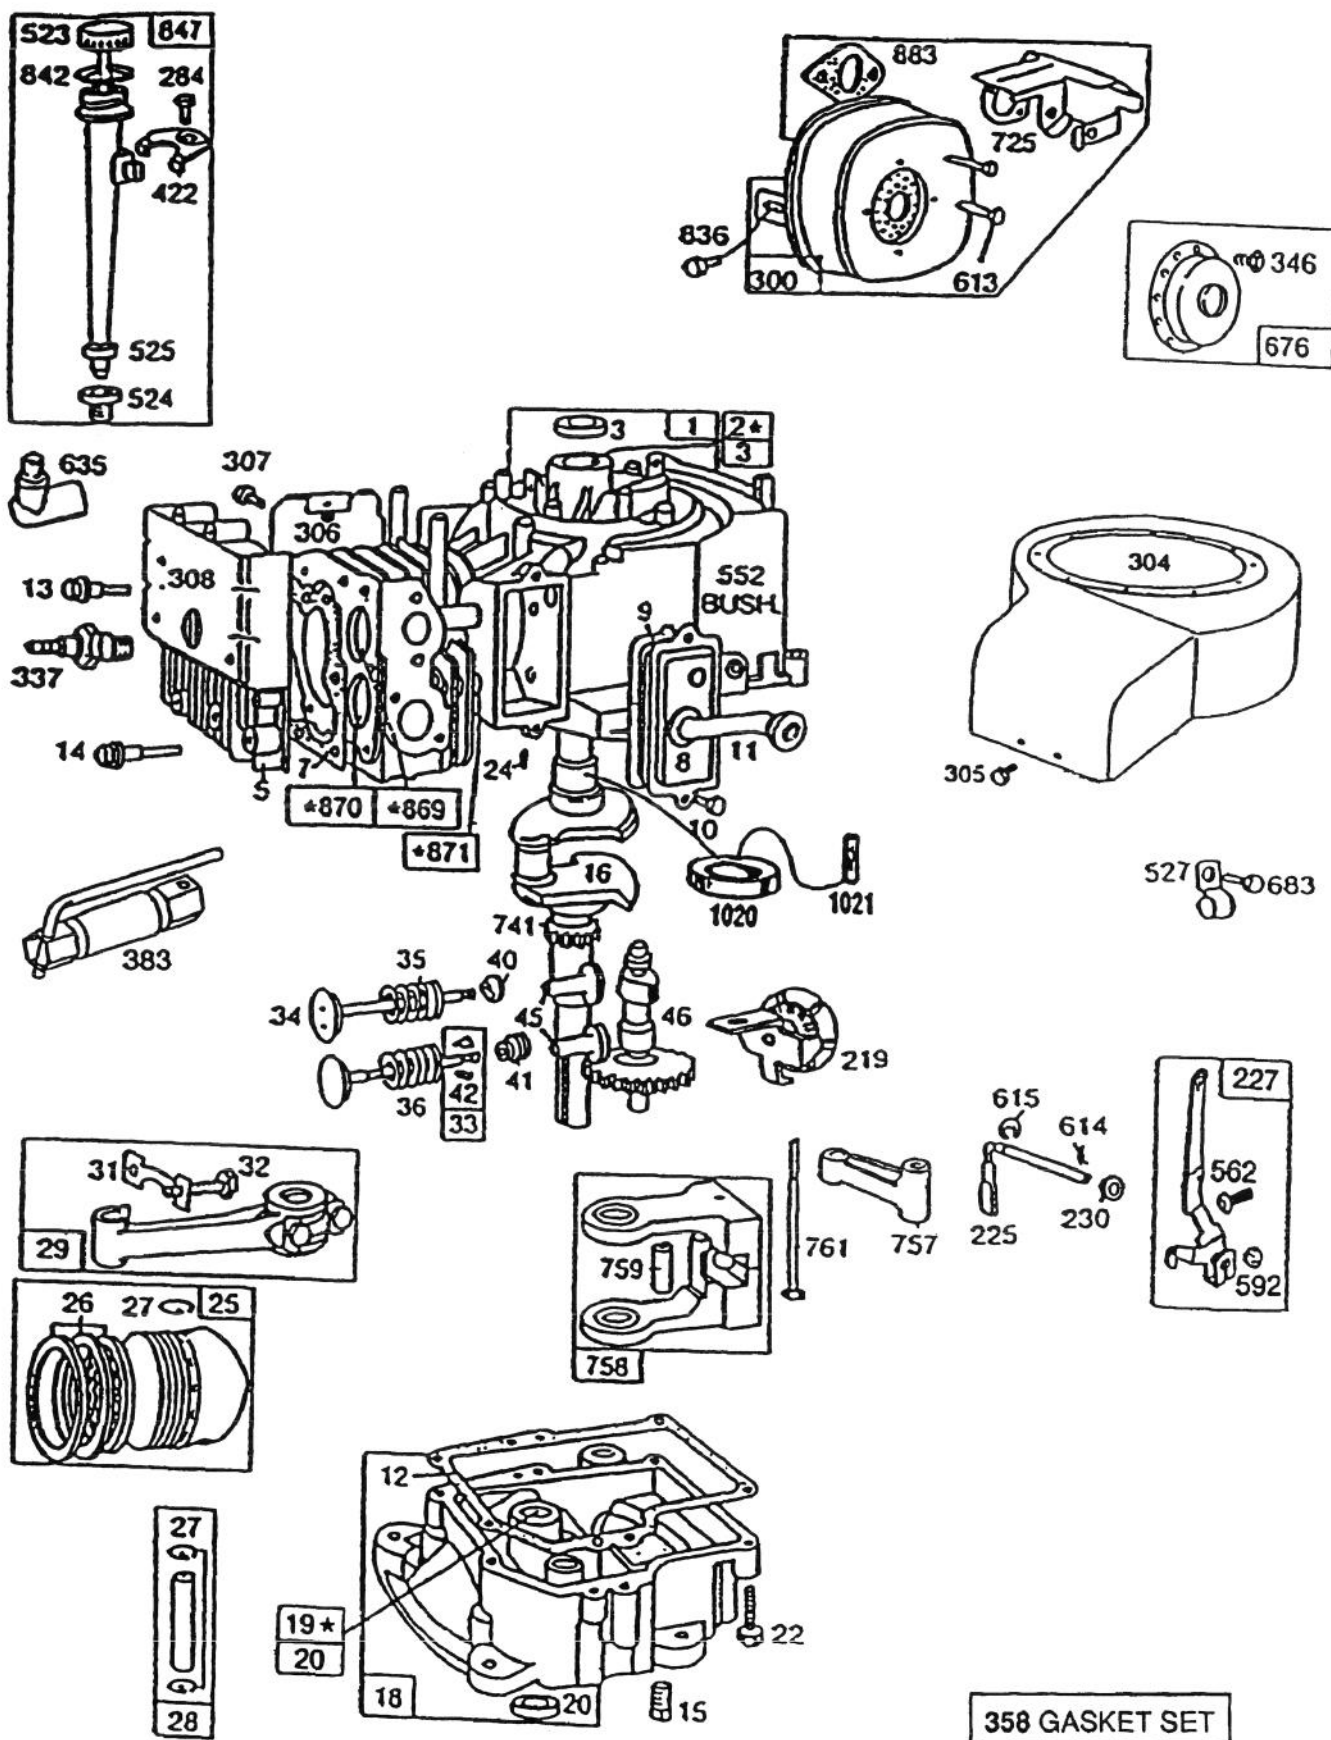

358 GASKET SET

*REQUIRES SPECIAL TOOLS TO INSTALL.
SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.

C-1172


BRIGGS & STRATTON MODEL NO. 191707-0121-01

Ref. No.	Part No.	Description	No. Used
1	396269	Assembly - Cylinder	1
2	399267	Bearing - Cylinder Note: Requires special tools for installation.	1
3	294606	Seal - Oil	1
5	212286	Head - Cylinder	1
*7	272163	Gasket - Head, Cylinder	1
8	391406	Assembly - Breather	1
*9	27803	Gasket - Cover, Valve	1
10	94621	Screw	1
11	280005	Tube - Breather	1
*12	271701	Gasket - Cover, Crankcase 1/64" Thick	1
*	27876	Gasket - Cover, Crankcase .005" Thick	1
*	27877	Gasket - Cover, Crankcase .009" Thick	1
13	94565	Screw - Head, Cylinder	1
14	93723	Screw - Head, Cylinder (3" Long)	1
15	94239	Plug - Drain, Oil	1
16	396876	Crankshaft Note: Order Part 94388 for timing gear pin replacement.	1
18	392548	Base - Engine	1
19	295963	Bushing - Base, Engine Note: Requires special tool for installation.	1
20	391086	Seal - Oil	1
22	93585	Screw - Base, Mounting	1
24	222698	Key - Flywheel	1
25	391673	Assy. - Piston, Std.	1
	391674	Assy. - Piston, .010" O.S.	1
	391675	Assy. - Piston, .020" O.S.	1
	391676	Assy. - Piston, .030" O.S.	1
		PISTON RING SETS Note: For Chrome Piston Ring Set - Standard Size - Order No. 299743.	
26	391669	Ring Set - Piston, Std.	1
	391670	Ring Set - Piston, .010" O.S.	1
	391671	Ring Set - Piston, .020" O.S.	1
	391672	Ring Set - Piston, .030" O.S.	1
27	68546	Lock - Piston Pin	1
28	295840	Assy. - Piston Pin, Std.	1
	295841	Assy. - Piston Pin, .005" O.S.	1
29	390402	Assy. - Rod, Connecting Note: For Connecting Rod with .020" Undersize Crankpin Bore - Order No. 390773.	1
31	222114	Lock - Screw, Conn. Rod	1
32	92659	Screw - Connecting Rod	1
33	390419	Valve - Exhaust	1

Ref. No.	Part No.	Description	No. Used
34	261055	Valve - Intake	1
35	65906	Spring - Valve, Intake	1
36	26828	Spring - Valve, Exhaust	1
40	221596	Retainer - Valve, Intake	1
41	292260	Rotocoil - Valve, Exhaust	1
42	93630	Retainer - Valve, Exhaust Rotocoil	2
45	260933	Tappet - Valve	1
46	211689	Gear - Cam	1
225	231058	Crank - Gov. (1/4" Dia.)	1
227	43935	Assy. Lever - Governor for 1/4" Dia. Crank	1
230	222450	Washer - Lever, Governor (1/4" Inside Diameter)	1
284	94419	Screw - Clamp, Mounting	1
300	398507	Muffler - Exhaust	1
304	494084	Housing - Blower	1
305	94608	Screw - Blower Hsg., Sems	1
306	224543	Shield - Cylinder	1
307	93949	Screw - Shield, Cylinder	1
308	222636	Cover - Head, Cylinder	1
337	802592	Plug - Spark	1
346	93705	Screw	1
358	299577	Gasket Set	1
383	89838	Wrench - Spark Plug	1
422	223394	Clamp - Tube, Oil Filler	1
523	391840	Cap & Dipstick - Oil Filler	1
524	68838	Seal - Tube, Filler	1
525	280133	Tube - Filler, Oil	1
527	221428	Clamp	1
552	491986	Bushing - Crank, Gov.	1
562	92613	Bolt - Lever, Governor	1
592	231082	Nut - Hex.	1
613	94042	Screw - Muffler	1
614	93306	Pin - Hair, Cotter	1
615	93307	Retainer - E-Ring	1
635	66538	Elbow - Plug, Spark	1
676	395700	Deflector - Exhaust	1
683	93572	Screw	1
725	223540	Shield - Muffler	1
741	262479	Gear - Timing	1
757	212359	Link - Counterweight	1
758	390172	Assy. - Counterweight	1
759	298909	Pin - Counterweight	1
761	93874	Screw - Counterweight	1
836	93559	Screw	1
842	270920	Seal - Cap, Filler	1
847	392066	Filler Group - Oil	1
869	211661	Seat - Valve, Intake (Std.)	1
870	211661	Seat - Valve, Exhaust (Std.)	1
871	231218	Guide - Exhaust or Intake Valve, See repair manual	1
883	272309	Gasket - Pipe, Exhaust	1
1020	261190	Eccentric	1
1021	94160	Pin - Eccentric	1


*Included in Gasket Set - Part No. 299577.

BRIGGS & STRATTON MODEL NO. 191707-0121-01

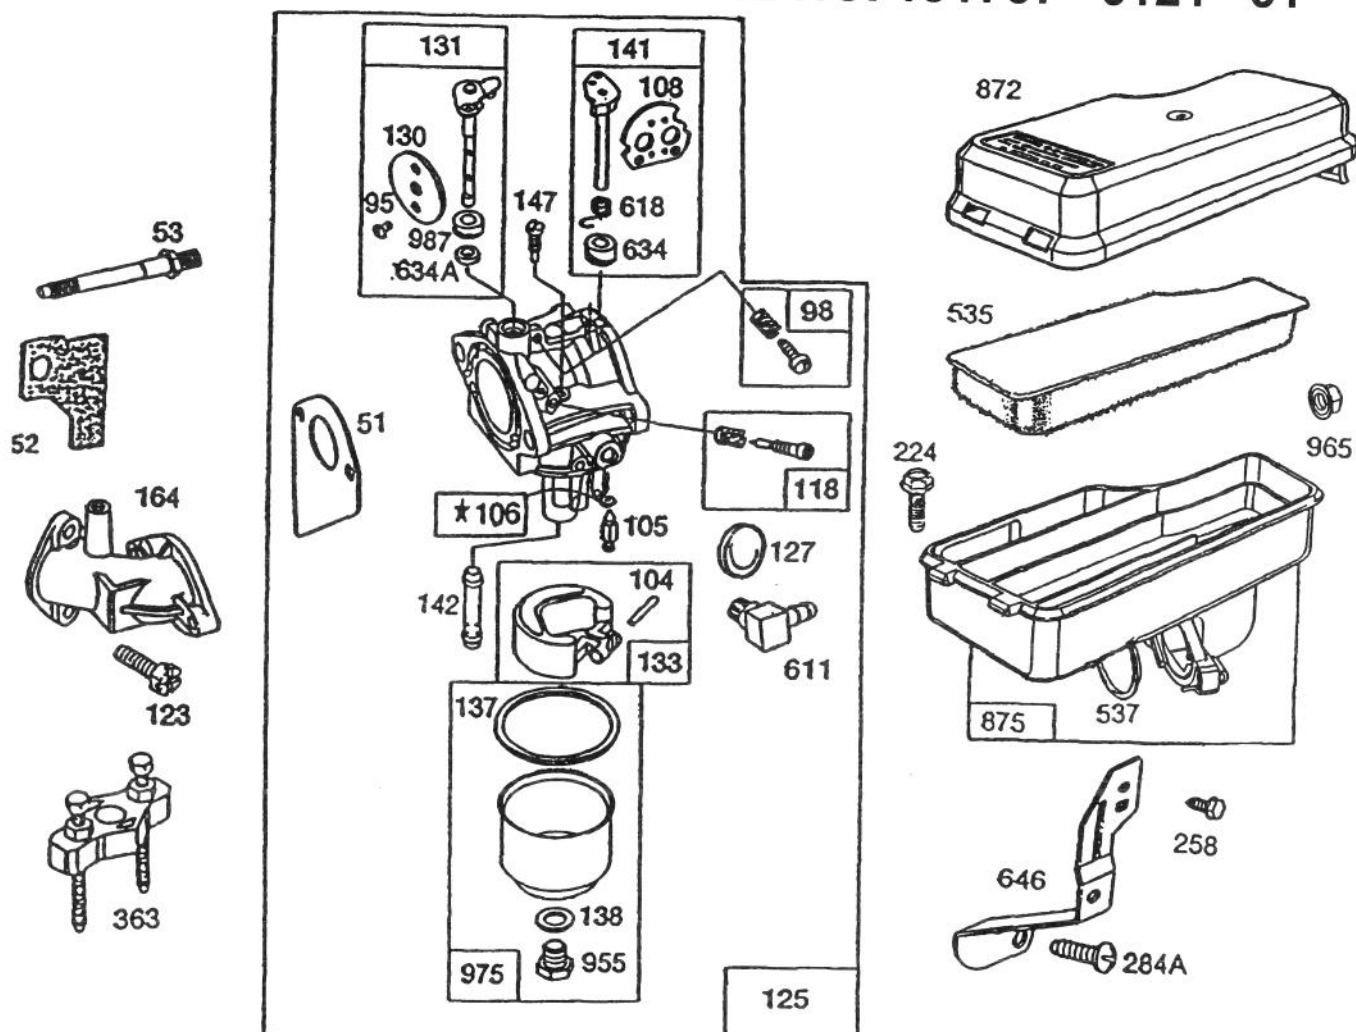

121 CARBURETOR OVERHAUL KIT

977 CARBURETOR GASKET SET

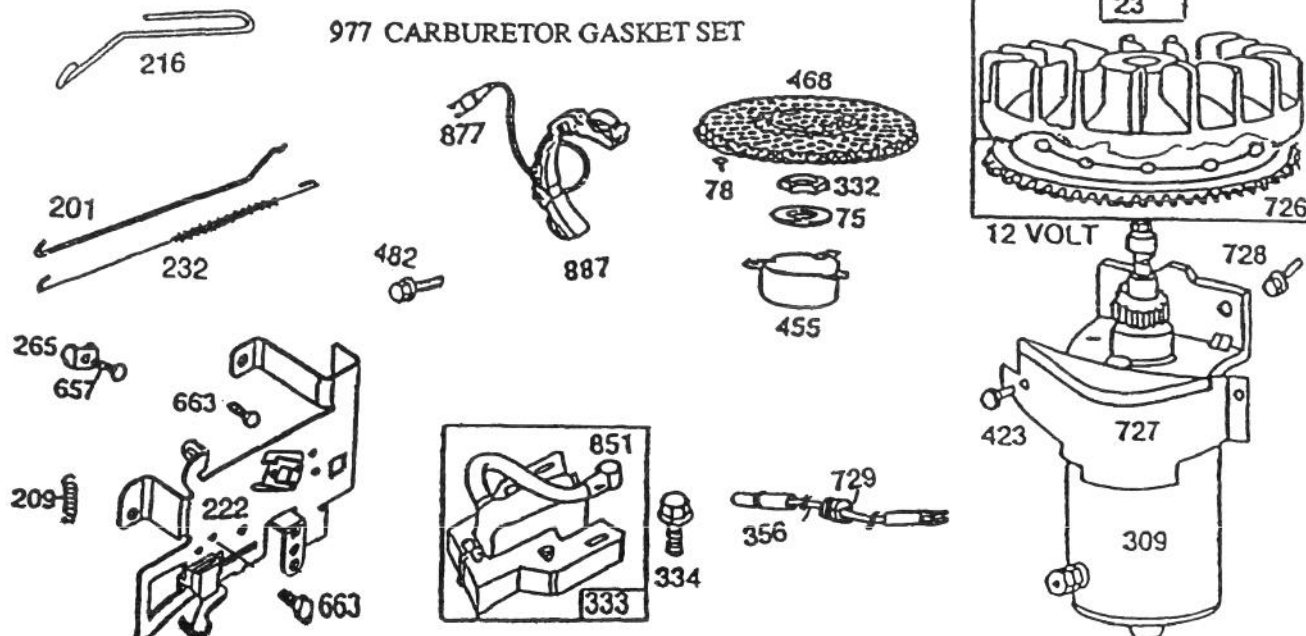

*REQUIRES SPECIAL TOOLS TO INSTALL.
SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.

BRIGGS & STRATTON MODEL NO. 191707-0121-01


Ref. No.	Part No.	Description	No. Used
223	391983	Flywheel and Ring Gear Assy. - Magneto (Incl. Aluminum Ring Gear)	1
*#51	272465	Gasket - Carburetor (Carb. to Elbow)	1
‡52	270824	Gasket - Carb. Mtg.	1
53	94637	Stud - Gasket Mtg.	1
75	224061	Washer - Spring	1
78	93805	Screw - Sem	1
*95	94098	Screw - Throttle	1
98	494382	Screw - Idle Speck	1
*104	231789	Pin - Float Hinge	1
*105	231790	Valve Assy. - Inlet Needle	1
*106	281169	Inlet Valve Seat	1
108	224540	Valve - Choke	1
118	494383	Valve - Needle	1
121	494880	Carburetor Overhaul Kit	1
123	94616	Screw - Carburetor Mtg.	1
125	494894	Carburetor Assembly	1
*127		Plug - Welch (Kit Only)	1
130	224668	Valve - Throttle	1
131	494885	Shaft & Lever - Throttle	1
133	494381	Float - Carburetor	1
*#137	281165	Gasket - Float Bowl	1
*#138	281164	Washer - Float Bowl	1
141	494380	Shaft & Lever - Choke	1
*142	494877	Nozzle - Carburetor	1
*147	231794	Screw - Nozzle	1
164	213819	Carburetor Elbow	1
201	262769	Link - Governor	1
209	260871	Spring - Governor	1
216	262768	Link - Choke	1
222	493896	Plate - Gov. Plate	1
224	94513	Screw - Sem	1
232	262787	Spring - Governor Link	1
258	94620	Screw - Hex. Tapping	1
265	221535	Clamp - Casing	1
284A	94326	Screw - Brace Mtg.	1

Ref. No.	Part No.	Description	No. Used
309		Motor - Starting (12 Volt) See Chart for Replacement Parts for Starting Motor on Illustrated Pages	1
332	92284	Nut - Flywheel	1
333	398811	Armature Assembly	1
334	93381	Screw - Armature Mtg. Sem	1
356	494328	Wire - Ground	1
363	19165	Puller - Flywheel	1
423	94073	Screw - Sem	1
455	222561	Cup - Screen Mounting	1
468	222562	Screen - Flush Rotating	1
482	93621	Screw - Sem	1
535	272405	Element - Foam Air Cleaner	1
537	281106	O-Ring - Air Cleaner	1
611	494451	Fuel Inlet Tube	1
618	262803	Spring - Choke Return	1
*634	281168	Seal - Choke Shaft	1
*634A	281167	Washer - Throttle Shaft	1
646	224614	Brace - Air Cleaner	1
657	93496	Screw - Sem	1
663	94419	Screw	1
726	392134	Gear - Ring (Aluminum) (Incl. Mtg. Parts)	1
727	395405	Cover - Starter (Incl. Mtg. Screws)	1
728	93535	Screw - Sem	1
729	281159	Clip - Lead Wire	1
851	221798	Terminal - Ignition Cable	1
872	281108	Cover - Air Cleaner	1
875	494745	Body - Air Cleaner	1
877	393814	Diode & Connector Assy.	1
887	391529	Stator Assembly - Alternator (D.C.)	1
955	94642	Screw - Fuel Bowl	1
965	94108	Nut - Lock	1
975	494378	Bowl Assy. - Carburetor	1
*987	281166	Seal - Throttle Shaft	1

*Included in Carburetor Overhaul Set - Part No. 494880.

‡Included in Carburetor Gasket Set - Part No. 494385.

‡Included in Gasket Set - Part No. 299577.

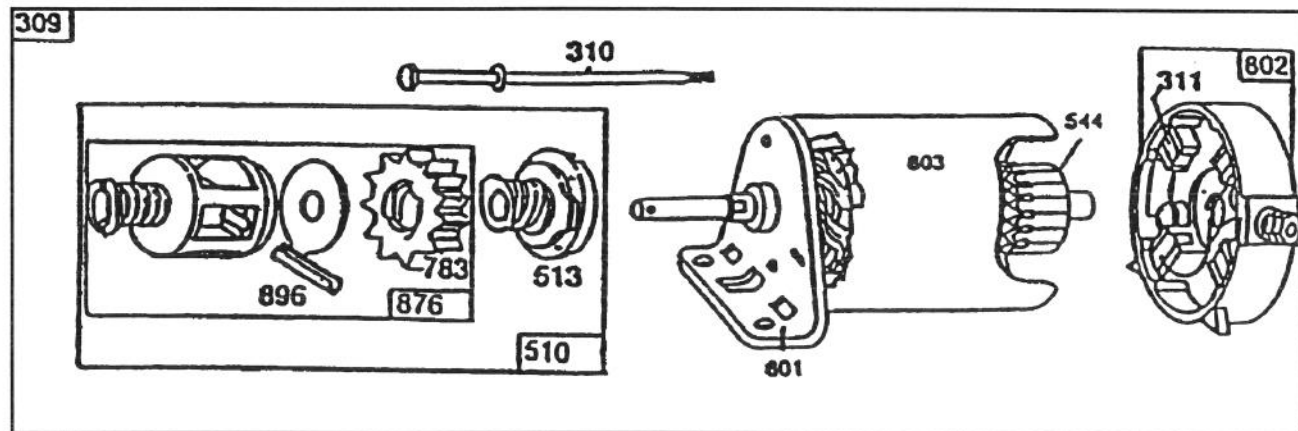


C-0784

STARTER – BRIGGS & STRATTON NO. 191707-0121-01

Ref. No.	Part No.	Description	No. Used
309	394805	Assembly – Motor & Drive	1
310	94003	Assembly – Thru Bolt	2
311	395538	Assembly – Brush	2
510	490421	Assembly – Drive (Incl. Ref. #513, 783, 876 & 896)	1
513	398003	Assembly – Clutch	1
544	390837	Assembly – Armature	1
783	280104	Gear	1

Ref. No.	Part No.	Description	No. Used
801	394856	Assembly – End Cap	1
802	395537	Assembly – Commutator, End Cap	1
803	398159	Assembly – Housing (3-21/32" Long)	1
876	490467	Kit – Retainer	1
896	94288	Pin – Roll	1

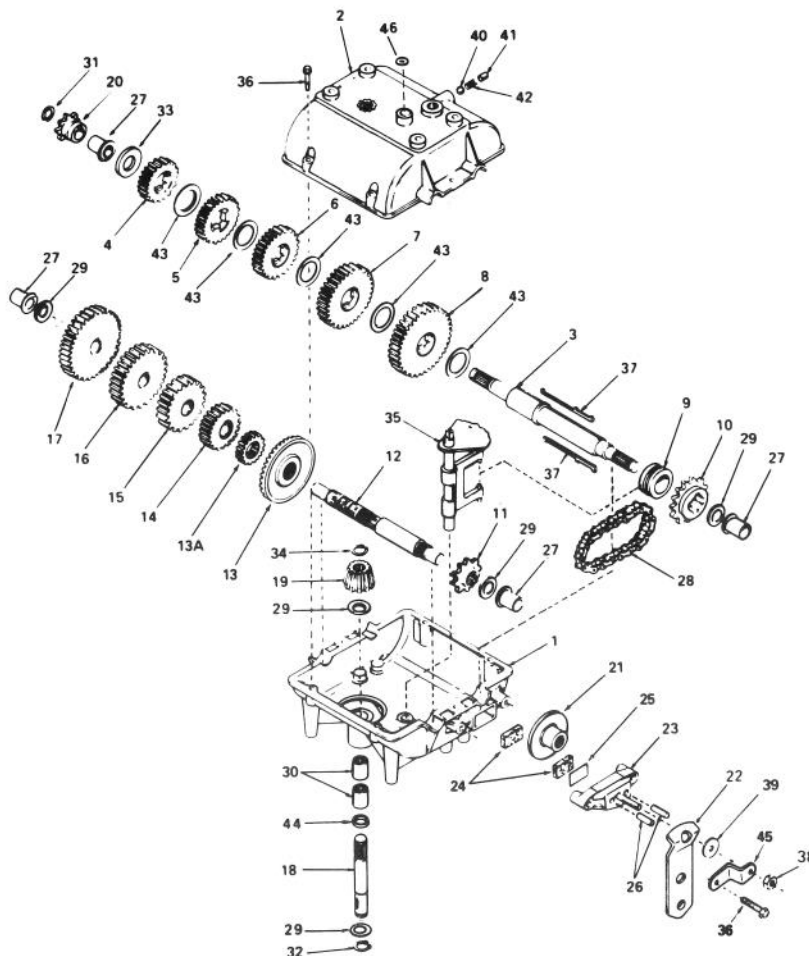

C-0441

TRANSMISSION PEERLESS MODEL 700-025

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	770061	Case - Transmission	1	24	790006	Pad - Brake	2
2	772083	Cover - Transmission	1	25	790007	Plate - Pad, Brake	1
3	776217	Shaft - Output	1	26	786026	Pin - Dowel	2
4	778121A	Gear - Spur (20 Teeth)	1	27	780105A	Bushing - Flange	4
5	778122A	Gear - Spur (22 Teeth)	1	28	786081	Chain - Roller (No. 41 Chain, 24 Links)	1
6	778123A	Gear - Spur (25 Teeth)	1	29	780072	Washer - Thrust	5
7	778124A	Gear - Spur (30 Teeth)	1	30	780086	Bearing - Needle	2
8	778125	Gear - Spur (35 Teeth)	1	31	792072	Ring - Retaining	1
9	784266	Collar - Shift	1	32	792035	Ring - Retaining	1
10	786083	Sprocket (18 Teeth)	1	33	780109	Washer	1
11	786082	Sprocket (9 Teeth)	1	34	788040	Ring - Retaining	1
12	776134	Shaft - Counter	1	35	784267	Assy. Rod & Fork - Shift	1
13	788137A	Gear - Bevel (42 Teeth)	1	36	792073	Screw - Thread Forming	8
13A	778136	Gear - Spur (15 Teeth)	1	37	792089A	Key	2
14	778126A	Gear - Spur (20 Teeth)	1	38	792075	Nut - Lock	1
15	778127A	Gear - Spur (25 Teeth)	1	39	792076	Washer	1
16	778128A	Gear - Spur (28 Teeth)	1	40	792077	Ball - Steel	1
17	778129A	Gear - Spur (30 Teeth)	1	41	792078	Screw - Set	1
18	776135	Shaft - Input	1	42	792079	Spring	1
19	778113A	Bevel - Pinion, Input	1	43	780108	Washer - Thrust	5
20	786047	Sprocket (8 Teeth)	1	44	792001	O-Ring	1
21	790003	Disk - Brake	1	45	786086	Bracket - Lever, Brake	1
22	790008A	Lever - Brake	1	46	788069	Seal - Square Cut	1
23	790025	Holder - Pad, Brake	1				

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
11-0410	Kit - Tire Chains (Optional)	9 * 1	55-7762	Axle - R.H.	10 1 1
12-5820	Pulley - Idler, Traction	6 25 1	55-7763	Axle - L.H.	10 7 1
12-9020	Retainer - Belt	6 21 1	55-7770	Cap - End, R.H.	10 3 1
13-6049	Kit - Loose parts	2 * 1	55-7771	Cap - End, L.H.	10 5 1
18-2970	R-Clamp	3 4 1	55-7780	Case - Gear, Transfer	10 4 1
19-1470	Bolt - Shoulder	1 18 1	56-2540	Tube - Drain	8 6 1
19-1610	Lever - Brake, Parking	1 19 1	56-6360	Filter	3 10 1
19-1970	Spring - Brake, Parking	1 13 1	56-6590	Bolt - Wheel	11 19 2
19-2200	Tip - Brake, Parking	1 20 1	56-7620	Lever - Shift	7 52 1
20-3220	Washer - Flat	7 66 2	56-7630	Gate - Shift	7 50 1
22-9741	Spacer	13 3 1	56-7710	Hold Down - Battery	8 7 1
22-9741	Spacer	12 34 1	56-7720	Post - Hold Down, Battery	8 5 1
23-0660	Switch - Ignition	5 36 1	56-7730	Spring	7 57 1
25-1290	Hopper	12 22 1	56-7740	Spacer	7 58 1
25-1360	Rod - Pivot	12 7 1	56-7870	Assembly - Wire	8 17 1
25-1370	Latch	12 24 1	56-9870	Pulley - Idler, Deck	6 29 1
25-1380	Tube - Handle	12 13 1	56-9960	Differential	9 11 1
25-1390	Guide - Handle	12 11 1	56-9960	Differential - Complete	10 * 1
25-1470	Deflector	12 9 1	57-7820	Seal - Foam	13 10 1
25-2200	Decal - Easy Empty Bagger	12 15 1	57-7840	Decal - Twin Bagger	13 7 1
26-0010	Screen	12 20 1	57-7880	Bracket - Frame, Bag	13 11 2
26-0671	Bolt - Blade	11 28 1	57-7890	Channel - Support, Bag	13 19 1
26-6700	Spring - Return, Brake	6 10 1	57-7920	Baffle	13 6 1
26-9530	Washer - Pivot	1 8 1	57-7960	Frame - Bag	13 13 2
28-0540	Bolt - Shoulder	5 18 1	57-7980	Plate - Side	13 16 2
28-2480	Washer - Flat	4 2 2	57-7990	Bag	13 14 2
28-4250	Switch - Neutral	7 63 1	61-9760	Wheel - Deck	11 18 2
28-7890	Module - Interlock	5 17 1	61-9780	Cap - Hub	4 1 2
28-8010	Spring	11 1 1	61-9980	Screw - Adjusting	9 20 1
38-1420	Switch - Seat	3 3 1	61-9990	Plate - Adjusting	9 4 1
38-7820	Bearing - Ball	11 11 2	62-3660	Spacer - Bearing	11 13 1
40-8200	Switch - Micro	5 27 1	62-3760	Screw - Cap Hex. Hd.	8 16 1
44-7030	Tread - Foot Rest	1 3 2	62-4300	Pad - Anti-Skid	8 13 1
44-7140	Mount - Bearing, Axle	2 2 1	63-8360	Key	5 40 2
44-9760	Rim	9 2 2	65-2920	Pad - Pedal	1 17 2
46-2511	Bolt - Axle	9 22 2	66-6620	Support R.H.	9 21 1
46-2511	Bolt - Mounting, Axle	2 19 2	66-6630	Support L.H.	9 12 1
46-2850	Decal - Warning	12 10 1	66-6640	Control - Throttle	5 34 1
47-1480	Mount - Bearing	9 7 2	66-6680	Seat	3 1 1
47-1490	Bearing	9 13 2	66-6910	Insert - Wheel, Steering	2 35 1
47-1910	Solenoid	5 31 1	66-6920	Pad - Isolator	3 17 2
47-2550	Grip - Handle	13 12 4	67-0010	Lift W.A. - Front, Deck	2 5 1
47-2964	Hose - Gas	3 9 2	67-0050	Tube W.A. - Support, Rear	2 11 1
47-2986	Hose - Gas	3 5 1	67-0080	Link - H.O.C.	5 23 1
49-3240	Wheel - Steering	2 34 1	67-0090	Bracket - Link, H.O.C.	2 10 1
54-9220	Decal - Chute	12 1 1	67-0140	Post - Pivot	11 4 1
54-9220	Decal - Chute	13 1 1	67-0231	Body W.A. - Rear	5 13 1
54-9220	Decal - Danger	11 3 1	67-0270	Handle W.A. - H.O.C.	5 21 1
55-3576	Assembly - Cap, Gas	3 8 1	67-0300	Lever W.A. - H.O.C.	2 18 2
55-7102	Tower	1 22 1	67-0330	Idler - Plate, Mount	6 30 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-291

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
67-0360	Bracket - Arm, Idler	6 27 1	67-1350	Rod - Front, Brake	1 12 1
67-0400	Mount - Pivot	6 19 1	67-1370	Assy. - Brake, Deck	11 14 1
67-0410	Spacer - Pivot	6 16 1	67-1390	V-Belt	11 10 1
67-0420	Plate - Mount, Idler	6 18 1	67-1400	Transmission	7 49 1
67-0430	Rod - Clutch	2 6 1	67-1430	Spring - Compression	1 7 1
67-0440	Spacer - Steering	2 32 1	67-1440	Spring - Brake	11 32 1
67-0450	Frame W.A. - Front	2 25 1	67-1450	Spring - Extension	1 11 1
67-0520	Channel - R.H.	2 3 1	67-1460	Washer - Flat	2 15 2
67-0530	Channel - L.H.	2 24 1	67-1480	Brace - Support, Seat	5 8 2
67-0540	Tube W.A. - Pivot	6 6 1	67-1500	Bar - Stand	5 5 1
67-0570	Rod W.A. - Brake, Deck	11 16 1	67-1510	Brace - Stop, Deck	2 13 2
67-0600	Lever W.A. - Deck Engage	6 45 1	67-1530	Assembly - Pin, Clevis	2 8 1
67-0640	Handle - Deck Engage	6 46 1	67-1530	Assembly - Pin, Clevis	7 70 1
67-0660	Bracket - Mount, Shifter	7 65 1	67-1540	Plate - Mounting	12 27 1
67-0670	Bracket - Engage, Deck	7 62 1	67-1550	Assembly - Chute	13 31 1
67-0690	Flat - Deck Engage	6 3 1	67-1550	Chute	12 39 1
67-0710	Ball - Swivel	11 21 1	67-1590	Bracket - Brake Return	1 6 1
67-0730	Post - Mount, Brake	11 22 1	67-1600	Bracket - Deflector	11 39 1
67-0740	Spacer - Brake, Deck	11 23 1	67-9170	Spring	6 31 1
67-0750	Bracket - Mount, Spring	6 43 1	67-9890	Duct	13 5 1
67-0790	Support W.A. - Seat	5 10 1	67-9890	Duct	12 36 1
67-0800	Spindle - R.H.	4 15 1	67-9900	V-Bracket	13 23 1
67-0810	Spindle - L.H.	4 12 1	67-9900	V-Bracket	12 30 1
67-0830	Shaft W.A. - Steering	2 26 1	67-9960	Cover	13 9 1
67-0850	Bushing - Steering	2 29 2	67-9960	Shield - Muffler	13 18 1
67-0860	Washer - Steering	2 30 1	67-9980	Cap	12 26 1
67-0870	Bolt - Shoulder	5 22 2	68-8370	Link - Deck Engage	6 4 1
67-0870	Bolt - Shoulder	2 27 2	68-8380	Spacer - Stop, Deck	2 17 2
67-0880	Assembly - Tie Rod	4 11 2	68-9950	Spring - Traction	6 15 1
67-0900	Belt - Traction	6 39 1	71-8310	Spring - Prop, Seat	5 1 1
67-0910	Chain	9 10 1	76-1580	Guide - Chain	9 17 2
67-0920	Guide - Belt	8 20 1	76-1620	Decal - Instruction	1 1 1
67-0920	Guide - Belt	6 35 1	76-3820	Anchor - Guide, Belt	7 75 2
67-0930	Guide R.H. - Belt, Engine	6 8 1	76-3840	Decal - Toro L.H.	5 12 1
67-0940	Guide L.H. - Belt, Engine	6 14 1	76-3850	Decal - Front	5 14 1
67-0950	Strap - Tank, Gas	3 6 2	76-3860	Decal	7 74 1
67-0962	Guard - Chain	8 22 1	76-3870	Decal	1 21 1
67-0970	Hub - Spindle	11 25 1	76-3880	Decal - Toro R.H.	5 * 1
67-0990	Axle - Front	4 9 1	76-3920	Decal - H.O.C. & Deck	5 24 1
67-1030	Cover - Panel, Control	5 42 1	76-3940	Lever W.A. - Shift	7 54 1
67-1070	Body W.A. - Front	1 15 1	76-3970	Spacer - Pivot	7 69 1
67-1090	Support W.A. - Seat	5 29 1	76-4010	Sprocket	9 18 1
67-1130	Pedal - Brake & Clutch	1 14 2	76-4070	Decal - Danger	11 42 1
67-1151	Deflector	11 2 1	76-4080	Decal	2 36 1
67-1160	Assembly - Wire	8 26 1	76-4090	Plate - Engine	6 13 1
67-1170	Assembly - Wire	8 25 1	76-4660	Spring	7 76 1
67-1241	Base - Seat	3 2 1	80-2600	Battery 12V	8 8 1
67-1270	Decal - Panel, Control	5 39 1	80-4330	Prop - Seat	5 32 1
67-1330	Lever - Brake, Bellcrank	1 10 1	80-4340	Shaft - Spindle	11 27 1
67-1340	Rod - Brake, Transmission	1 9 1	80-4360	Shield - Bearing	11 26 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
80-4380	Spacer - Spindle	11 31 1	321-4	Screw - Cap Hex. Hd.	8 9 2
80-4450	Cover - Recycler	11 35 1	321-4	Screw - Cap Hex. Hd.	6 17 2
80-4460	Pulley - Deck	11 8 1	321-4	Screw - Cap Hex. Hd.	11 38 9
80-4510	Kicker	11 36 4	321-8	Screw - Cap Hex. Hd.	12 18 1
80-4520	Guide - Belt	11 12 1	321-8	Screw - Cap Hex. Hd.	7 59 1
80-4530	Blade	11 30 1	321-15	Screw - Cap Hex. Hd.	7 56 1
80-4540	Ring - Deck, Recycler	11 45 4	321-30	Screw - Cap Hex. Hd.	12 16 2
80-4550	Rod - Base, Seat	5 33 1	322-2	Screw - Cap Hex. Hd.	13 24 4
80-4560	Spacer	8 11 1	322-2	Screw - Cap Hex. Hd.	12 32 4
80-4580	Tank - Gas	3 7 1	322-3	Screw - Cap Hex. Hd.	2 1 6
82-5690	Retainer - Duct	13 28 1	322-3	Screw - Cap Hex. Hd.	5 9 4
82-5690	Retainer - Duct	12 35 1	322-3	Screw - Cap Hex. Hd.	3 14 4
82-6230	Deck	11 37 1	322-3	Screw - Cap Hex. Hd.	11 20 6
82-6250	Decal - Recycler	11 44 1	322-3	Screw - Cap Hex. Hd.	6 34 5
82-6260	Decal - Recycler	1 23 1	322-5	Screw - Cap Hex. Hd.	5 7 4
82-6450	Pulley - Transmission	6 40 1	322-6	Screw - Cap Hex. Hd.	6 11 1
82-6740	Harness - Wire	8 27 1	322-6	Screw - Cap Hex. Hd.	11 15 2
83-4840	Pulley - Engine	8 14 1	322-7	Screw - Cap Hex. Hd.	8 19 3
217-80	Rim	4 5 2	322-10	Screw - Cap Hex. Hd.	8 21 1
218-461	Nut - Hex.	5 38 1	322-10	Screw - Cap Hex. Hd.	6 37 1
2210-319	Deflector - Muffler	13 32 1	322-12	Screw - Cap Hex. Hd.	8 12 1
2210-319	Deflector - Muffler	12 40 1	322-14	Screw - Cap Hex. Hd.	2 23 2
231-115	Tire	9 1 2	322-22	Screw - Cap Hex. Hd.	10 6 4
231-116	Tire	4 3 2	322-22	Screw - Cap Hex. Hd.	11 7 1
232-27	Valve Stem w/Cap	4 17 2	323-8	Screw - Cap Hex. Hd.	6 26 1
232-27	Valve Stem w/Cap	9 23 2	323-10	Screw - Cap Hex. Hd.	2 16 2
233-22	Knob	7 47 1	323-10	Screw - Cap Hex. Hd.	6 24 1
233-22	Knob	5 25 1	329-4	Screw - Cap Hex. Hd.	7 53 1
233-40	Grip - Handle	12 12 1	3217-6	Nut - Hex.	12 25 2
233-48	Knob	7 55 1	3218-1	Nut - Jam	5 16 2
233-59	Knob	5 35 1	3218-2	Nut - Jam	7 72 1
233-68	Knob	12 2 1	3219-6	Nut - Hex.	11 9 1
233-68	Knob	13 2 1	3230-1	Bolt - Carriage	12 19 1
2412-98	Clamp - Hose	3 11 5	3230-2	Bolt - Carriage	6 12 1
251-210	Bearing	4 16 4	3230-3	Bolt - Carriage	5 3 2
256-90	Bushing	6 5 3	3230-20	Bolt - Carriage	5 11 6
256-155	Bushing	6 28 1	3230-20	Bolt - Carriage	3 16 6
2710-11	Link - Connecting	9 9 1	3231-4	Bolt - Carriage	9 3 2
282-27	Clevis	2 7 1	3231-25	Bolt - Carriage	9 6 4
282-27	Clevis	7 71 1	3234-5	Screw - Hex. Hd. Flange	12 3 8
283-67	Pin - Clevis	6 33 1	3234-21	Screw - Cap Hex. Hd.	11 34 1
288-2	Cap - Pipe	8 29 1	3245-32	Screw - Set	9 14 4
289-34	Nipple - Pipe	8 30 1	3253-3	Washer - Lock	7 60 1
2811-17	Elbow - Street	8 31 1	3253-4	Washer - Lock	6 36 1
2812-1	Reducer	8 32 1	3255-7	Washer - Lock, Int. Tooth	8 1 1
2830-9	Chain	13 21 2	3255-7	Washer - Lock, Int. Tooth	5 15 2
2830-9	Chain	12 28 2	3255-8	Washer - Lock	8 28 4
302-5	Fitting - Grease	4 4 4	3256-1	Washer - Flat	13 27 5
321-3	Screw - Cap Hex. Hd.	13 17 12	3256-2	Washer - Flat	12 5 14
321-4	Screw - Cap Hex. Hd.	9 8 4	3256-22	Washer - Flat	5 4 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-291

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3256-22	Washer - Flat	7 61 5	3296-29	Nut - Lock	1 2 5
3256-23	Washer - Flat	8 3 4	3296-29	Nut - Lock	5 2 11
3256-23	Washer - Flat	5 6 4	3296-29	Nut - Lock	2 4 16
3256-23	Washer - Flat	6 9 3	3296-29	Nut - Lock	12 6 15
3256-23	Washer - Flat	3 15 8	3296-29	Nut - Lock	6 7 8
3256-23	Washer - Lock	11 6 3	3296-29	Nut - Lock	3 12 4
3256-24	Washer - Flat	9 16 4	3296-29	Nut - Lock	9 19 6
3256-24	Washer - Flat	6 22 3	3296-29	Nut - Lock	13 20 4
3256-24	Washer - Flat	13 26 2	3296-29	Nut - Lock	11 24 9
3256-24	Washer - Flat	12 31 2	3296-29	Nut - Lock	8 24 5
3256-25	Washer - Flat	8 15 1	3296-39	Nut - Lock	6 1 2
3256-26	Washer - Flat	4 13 1	3296-39	Nut - Lock	2 12 5
3256-29	Washer - Flat	2 21 2	3296-39	Nut - Lock	9 15 6
3256-55	Washer - Fender	7 48 2	3296-39	Nut - Lock	11 17 2
3257-23	Key	6 41 1	3296-39	Nut - Lock	5 20 1
3269-6	Washer - Backup, Rivet	12 14 14	3296-42	Nut - Lock	9 5 5
3269-15	Rivet - Pop	13 8 18	3296-42	Nut - Lock	13 15 12
3272-6	Pin - Cotter	6 2 1	3296-42	Nut - Lock	6 20 5
3272-6	Pin - Cotter	2 9 2	3296-42	Nut - Lock	5 30 2
3272-12	Pin - Cotter	4 18 2	3296-42	Nut - Lock	11 41 9
3272-23	Pin - Cotter	2 20 2	3296-59	Nut - Lock	6 23 1
3274-4	Pin - Cotter	6 32 1	3296-59	Nut - Lock	11 40 1
3274-4	Pin - Cotter	5 43 1	32103-14	Nut - Wing	8 4 1
3290-250	Pin - Hair, Cotter	2 22 1	32103-14	Nut - Wing	13 30 1
3290-250	Pin - Hair, Cotter	1 16 2	32103-14	Nut - Wing	12 38 1
3290-313	Screw - Pan Head	5 26 2	32103-22	Nut - Wing	8 10 2
3290-347	Nut - U-Type	1 5 4	32104-110	Screw - Cap Hex. Hd.	1 4 4
3290-354	Nut - Double	5 28 1	32104-130	Screw - Special	11 43 8
3290-355	Pin - Hair, Cotter	2 14 2	32109-14	Nut - Wing	11 33 1
3290-355	Pin - Hair, Cotter	13 22 2	32120-64	Ring - Retaining	6 38 1
3290-355	Pin - Hair, Cotter	12 29 2	32121-32	Pin - Roll	2 31 1
3290-378	Tie - Cable	3 13 1	32121-78	Pin - Roll	2 33 1
3290-382	Rivet - Pop	12 21 14	32140-64	Screw	13 29 1
3290-413	Washer - Belleville	5 19 7	32140-64	Screw	12 37 1
3290-413	Washer - Belleville	2 28 4	32144-14	Screw - Self Tapping	8 18 2
3290-456	Washer - Belleville	7 68 2	32144-14	Screw - Wash. Hd., Tap.	7 51 4
3290-465	Washer - Belleville	11 29 1	32144-26	Screw - Thread Forming	7 73 1
3290-478	Washer - Belleville	7 64 2	32144-42	Screw - Hex. Hd. Tapping	5 41 4
3290-479	Fastner - Panel	12 33 1	32144-70	Screw - Hex. Hd. Tapping	6 44 1
3296-4	Nut - Lock	4 8 4	32151-48	Ring - Retaining	4 6 2
3296-8	Nut - Lock	11 5 2	32151-62	Ring - Retaining	7 67 1
3296-17	Nut - Lock	12 4 2	32152-1	Nut - Lock	10 2 4
3296-17	Nut - Lock	13 25 2	32153-4	Nut - Lock	12 23 1
3296-25	Nut - Lock	4 14 1			

*Not Illustrated

AL-921729

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA	
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10
11	11
12	12
13	13
14	14
15	15
16	16
17	17
18	18
19	19
20	20
21	21
22	22
23	23
24	24
25	25
26	26
27	27
28	28
29	29
30	30
31	31
32	32
33	33
34	34
35	35
36	36
37	37
38	38
39	39
40	40
41	41
42	42
43	43
44	44
45	45
46	46
47	47
48	48
49	49
50	50
51	51
52	52
53	53
54	54
55	55
56	56
57	57
58	58
59	59
60	60
61	61
62	62
63	63
64	64
65	65
66	66
67	67
68	68
69	69
70	70
71	71
72	72
73	73
74	74
75	75
76	76
77	77
78	78
79	79
80	80
81	81
82	82
83	83
84	84
85	85
86	86
87	87
88	88
89	89
90	90
91	91
92	92
93	93
94	94
95	95
96	96
97	97
98	98
99	99
100	100

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any

reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]