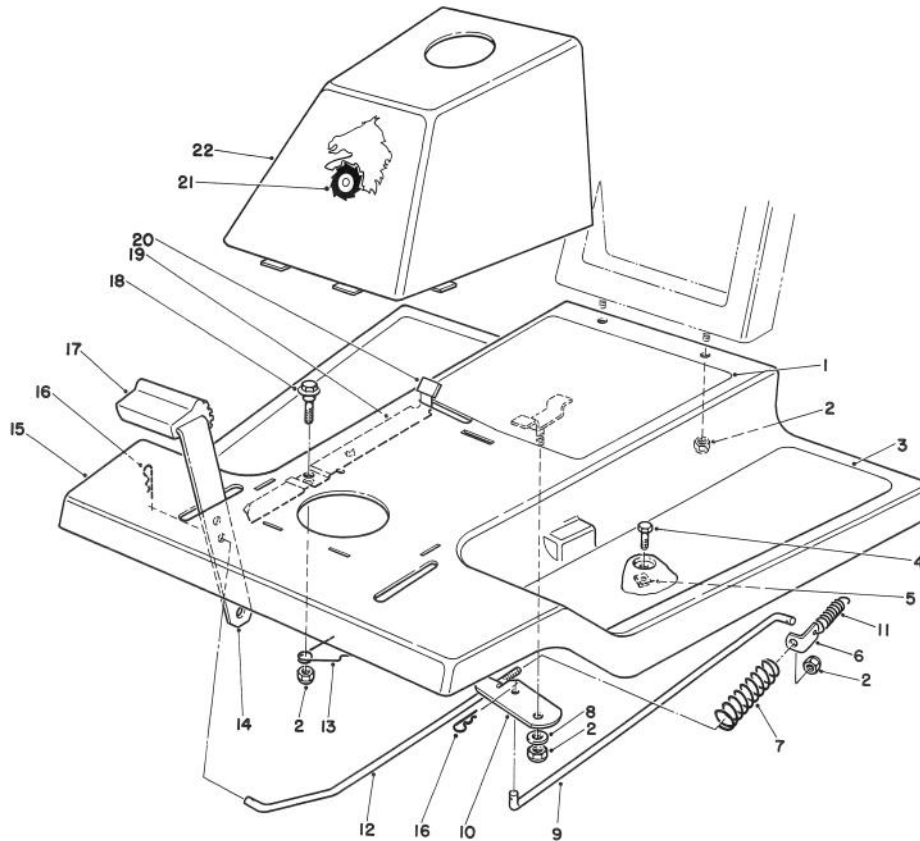


TORO®

MODEL NO. 56133-2000001 & UP

**PARTS
CATALOG****WHEEL HORSE®
8-25 RIDING MOWER**


C-0004

FRONT BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-1620	Decal - Instruction	1
2	3296-29	Nut - Lock	5
3	44-7030	Tread - Foot Rest	2
4	32104-110	Screw - Cap Hex. Hd.	4
5	3290-347	Nut - U-Type	4
6	67-1590	Bracket - Brake Return	1
7	67-1430	Spring - Compression	1
8	26-9530	Washer - Pivot	1
9	67-1340	Rod - Brake, Transmission	1
10	67-1330	Lever - Brake, Bellcrank	1
11	67-1450	Spring - Extension	1
12	67-1350	Rod - Front, Brake	1

Ref. No.	Part No.	Description	No. Used
13	19-1970	Spring - Brake, Parking	1
14	67-1130	Pedal - Brake & Clutch	2
15	67-1070	Body W.A. - Front	1
16	3290-250	Pin - Hair, Cotter	2
17	65-2920	Pad - Pedal	2
18	19-1470	Bolt - Shoulder	1
19	19-1610	Lever - Brake, Parking	1
20	19-2200	Tip - Brake, Parking	1
21	76-3870	Decal	1
22	55-7102	Tower (Incl. Ref. #21)	1

TPS

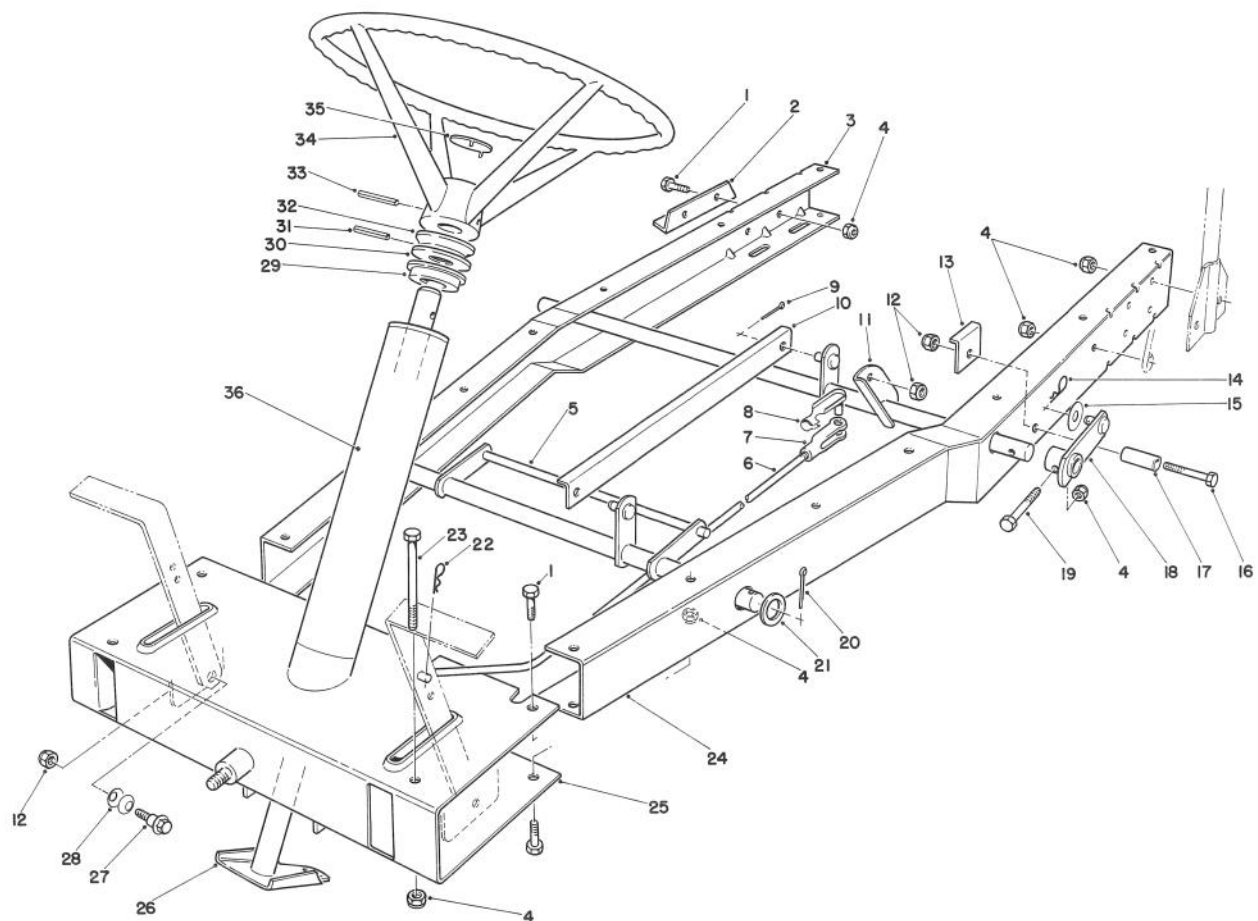


C-0005

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-3	Screw - Cap Hex. Hd.	6
2	44-7140	Mount - Bearing, Axle	1
3	67-0520	Channel - R.H.	1
4	3296-29	Nut - Lock	16
5	67-0010	Lift W.A. - Front, Deck	1
6	67-0430	Rod - Clutch	1
7	282-27	Clevis	1
8	67-1530	Assembly - Pin, Clevis	1
9	3272-6	Pin - Cotter	2
10	76-3890	Bracket - Link, H.O.C.	1
11	67-0050	Tube W.A. - Support, Rear	1
12	3296-39	Nut - Lock	5
13	67-1510	Brace - Stop, Deck	2
14	3290-355	Pin - Hair, Cotter	2
15	67-1460	Washer - Flat	2
16	323-10	Screw - Cap Hex. Hd.	2
17	68-8380	Spacer - Stop, Deck	2
18	76-3790	Lever W.A. - H.O.C.	2
19	46-2511	Bolt - Mounting, Axle	2

Ref. No.	Part No.	Description	No. Used
20	3272-23	Pin - Cotter	2
21	3256-29	Washer - Flat	2
22	3290-250	Pin - Hair, Cotter	1
23	322-14	Screw - Cap Hex. Hd.	2
24	67-0530	Channel - L.H.	1
25	67-0450	Frame W.A. - Front	1
26	67-0830	Shaft W.A. - Steering	1
27	67-0870	Bolt - Shoulder	2
28	3290-413	Washer - Belleville	4
29	67-0850	Bushing - Steering	2
30	67-0860	Washer - Steering	1
31	32121-32	Pin - Roll	1
32	67-0440	Spacer - Steering	1
33	32121-78	Pin - Roll	1
34	49-3240	Wheel - Steering	1
35	66-6910	Insert - Wheel, Steering	1
36	76-4080	Decal	1
*	13-6049	Kit - Loose parts	1

*Not Illustrated

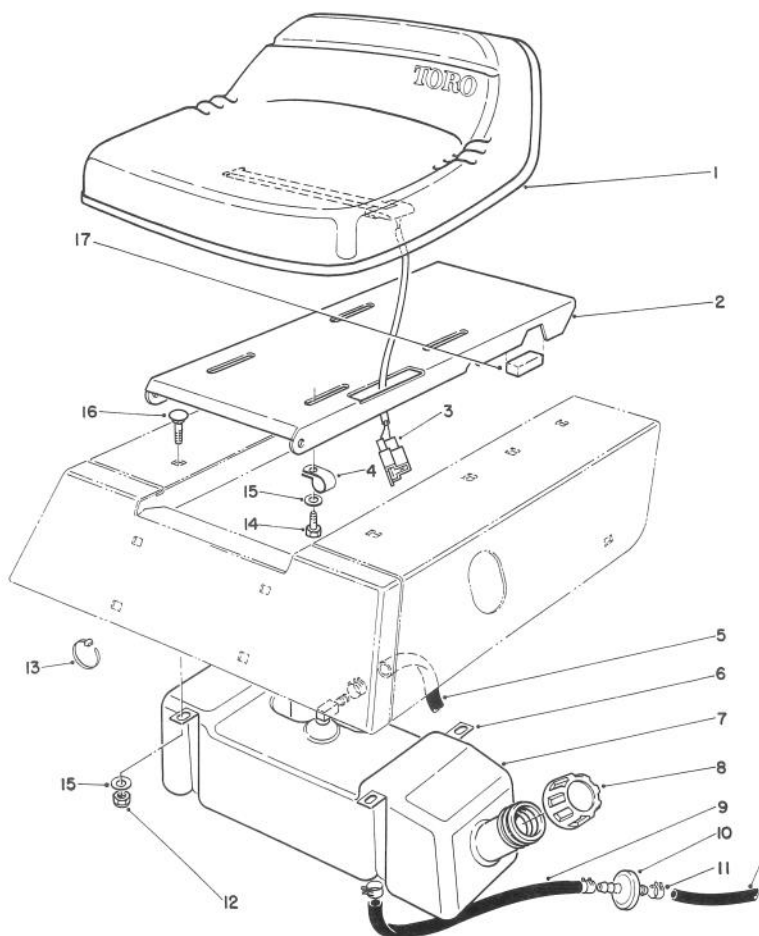


C-0002A

SEAT & GAS TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-6680	Seat	1
2	67-1241	Base - Seat	1
3	38-1420	Switch - Seat	1
4	18-2970	R-Clamp	1
5	47-2986	Hose - Gas	1
6	67-0950	Strap - Tank, Gas	2
7	80-4580	Tank - Gas	1
8	55-3576	Assembly - Cap, Gas	1
9	47-2964	Hose - Gas	2

Ref. No.	Part No.	Description	No. Used
10	56-6360	Filter	1
11	2412-98	Clamp - Hose	5
12	3296-29	Nut - Lock	4
13	3290-378	Tie - Cable	1
14	322-3	Screw - Cap Hex. Hd.	4
15	3256-23	Washer - Flat	8
16	3230-20	Bolt - Carriage	6
17	66-6920	Pad - Isolator	2

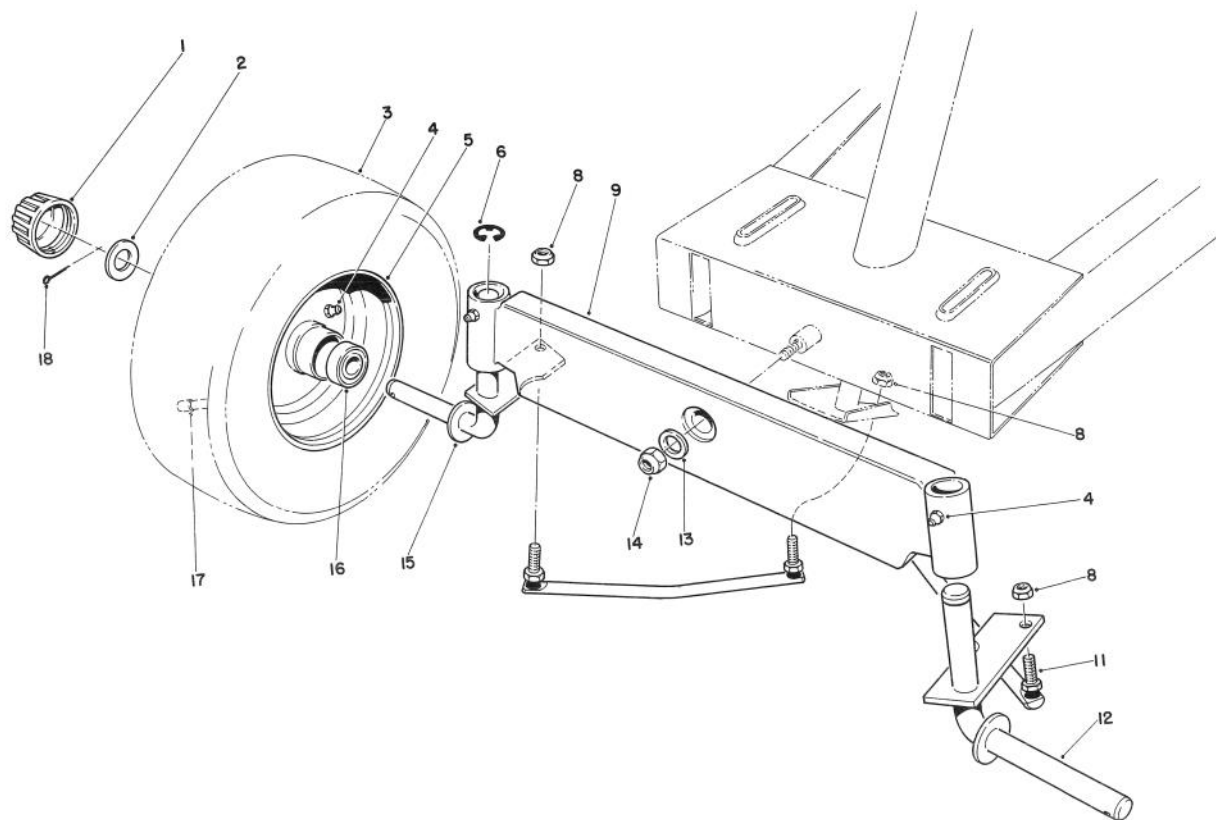


C-0003A

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-9780	Cap - Hub	2
2	28-2480	Washer - Flat	2
3	231-116	Tire	2
4	302-5	Fitting - Grease	4
5	217-80	Rim	2
6	32151-48	Ring - Retaining	2
8	3296-4	Nut - Lock	4
9	67-0990	Axle - Front	1

Ref. No.	Part No.	Description	No. Used
11	67-0880	Assembly - Tie Rod	2
12	67-0810	Spindle - L.H.	1
13	3256-26	Washer - Flat	1
14	3296-25	Nut - Lock	1
15	67-0800	Spindle - R.H.	1
16	251-210	Bearing	4
17	232-27	Valve Stem w/Cap	2
18	3272-12	Pin - Cotter	2

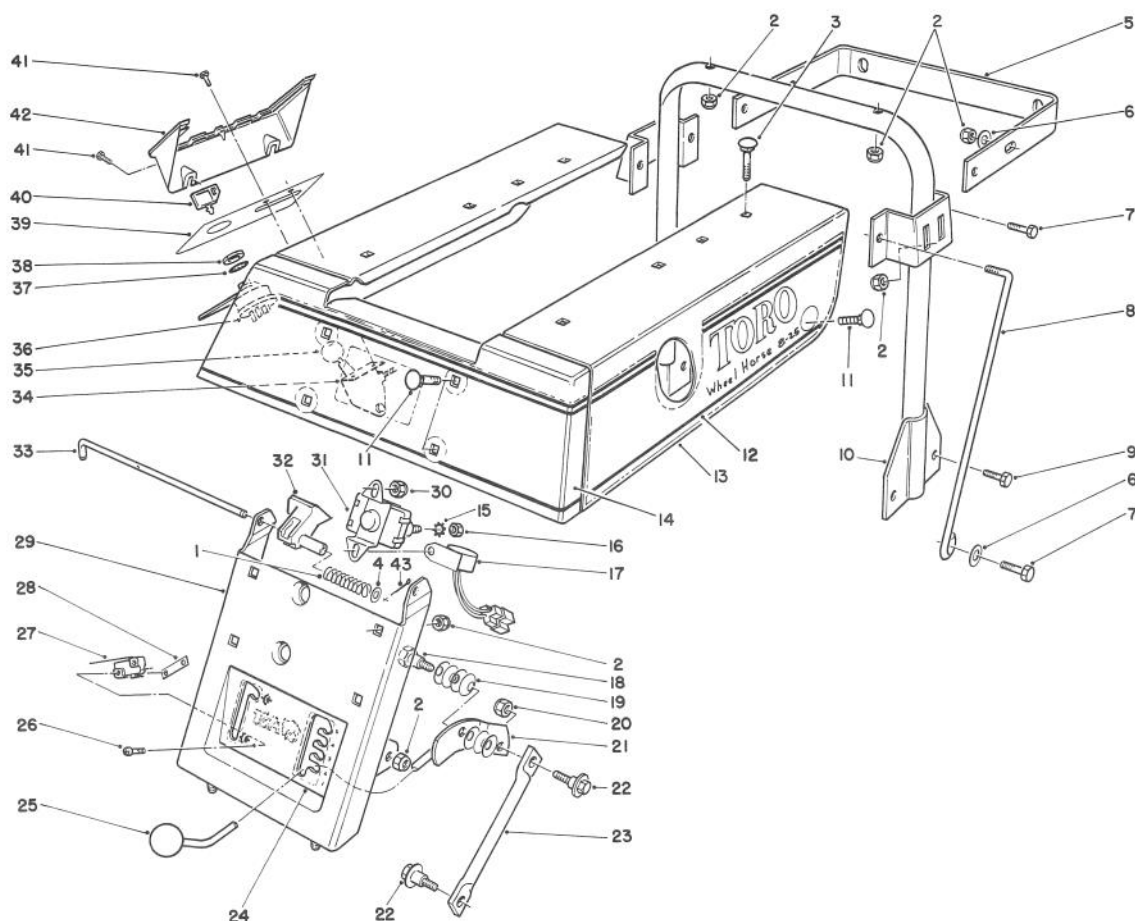


C-0007

REAR BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-8310	Spring - Prop, Seat	1
2	3296-29	Nut - Lock	11
3	3230-3	Bolt - Carriage	2
4	3256-22	Washer - Flat	1
5	67-1500	Bar - Stand	1
6	3256-23	Washer - Flat	4
7	322-5	Screw - Cap Hex. Hd.	4
8	67-1480	Brace - Support, Seat	2
9	322-3	Screw - Cap Hex. Hd.	4
10	67-0790	Support W.A. - Seat	1
11	3230-20	Bolt - Carriage	6
12	76-3840	Decal - Toro L.H.	1
*	76-3880	Decal - Toro R.H.	1
13	67-0231	Body W.A. - Rear	1
14	76-3850	Decal - Front	1
15	3255-7	Washer - Lock, Int. Tooth	2
16	3218-1	Nut - Jam	2
17	28-7890	Module - Interlock	1
18	28-0540	Bolt - Shoulder	1
19	3290-413	Washer - Belleville	7
20	3296-39	Nut - Lock	1
21	67-0270	Handle W.A. - H.O.C.	1
22	67-0870	Bolt - Shoulder	2

Ref. No.	Part No.	Description	No. Used
23	67-0080	Link - H.O.C.	1
24	76-3910	Decal - H.O.C. & Deck Engagement	1
25	233-22	Knob	1
26	3290-313	Screw - Pan Head	2
27	40-8200	Switch - Micro	1
28	3290-354	Nut - Double	1
29	67-1090	Support W.A. - Seat	1
30	3296-42	Nut - Lock	2
31	47-1910	Solenoid	1
32	80-4330	Prop - Seat	1
33	80-4550	Rod - Base, Seat	1
34	66-6640	Control - Throttle	1
35	233-59	Knob	1
36	23-0660	Switch - Ignition (Incl. Ref. #37 & 38)	1
37	3254-5	Washer - Lock, Int. Tooth	1
38	218-461	Nut - Hex.	1
39	67-1270	Decal - Panel, Control	1
40	63-8360	Key	2
41	32144-42	Screw - Hex. Hd. Tapping	4
42	67-1030	Cover - Panel, Control	1
43	3274-4	Pin - Cotter	1

*Not Illustrated

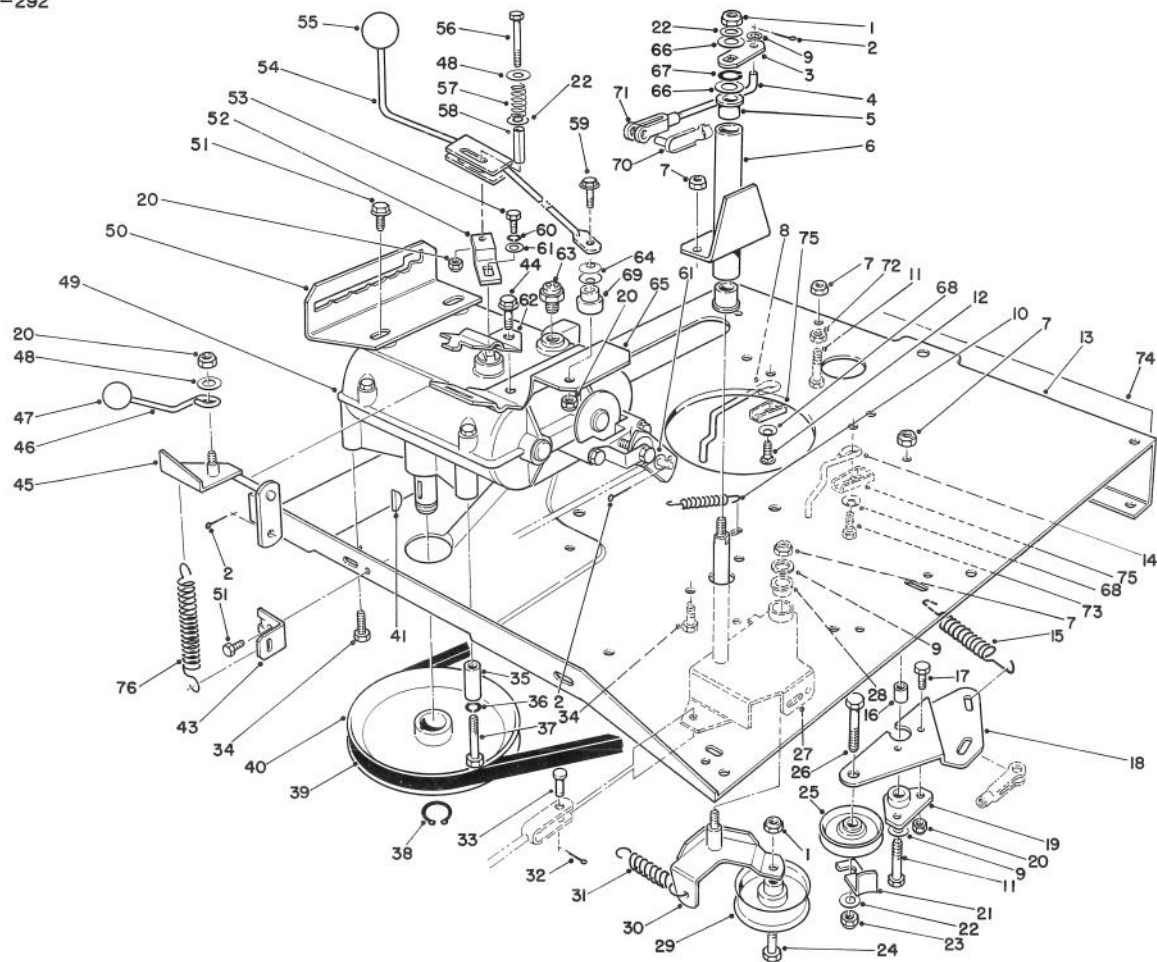


C-0009A

TRANSMISSION & LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	2
2	3272-6	Pin - Cotter	1
3	67-0690	Flat - Deck Engage	1
4	68-8370	Link - Deck Engage	1
5	256-90	Bushing	3
6	67-0540	Tube W.A. - Pivot (Incl. Ref. #5)	1
7	3296-29	Nut - Lock	8
8	67-0930	Guide R.H. - Belt, Engine	1
9	3256-23	Washer - Flat	3
10	26-6700	Spring - Return, Brake	1
11	322-6	Screw - Cap Hex. Hd.	1
12	3230-2	Bolt - Carriage	1
13	76-4090	Plate - Engine	1
14	67-0940	Guide L.H. - Belt, Engine	1
15	68-9950	Spring - Traction	1
16	67-0410	Spacer - Pivot	1
17	321-4	Screw - Cap Hex. Hd.	2
18	67-0420	Plate - Mount, Idler	1
19	67-0400	Mount - Pivot	1
20	3296-42	Nut - Lock	5
21	12-9020	Retainer - Belt	1
22	3256-24	Washer - Flat	3
23	3296-59	Nut - Lock	1

Ref. No.	Part No.	Description	No. Used
24	323-10	Screw - Cap Hex. Hd.	1
25	12-5820	Pulley - Idler, Traction	1
26	323-8	Screw - Cap Hex. Hd.	1
27	67-0360	Bracket - Arm, Idler (Incl. Ref. #28)	1
28	256-155	Bushing	1
29	56-9870	Pulley - Idler, Deck	1
30	67-0330	Idler - Plate, Mount	1
31	67-9170	Spring	1
32	3274-4	Pin - Cotter	1
33	283-67	Pin - Clevis	1
34	322-3	Screw - Cap Hex. Hd.	5
35	67-0920	Guide - Belt	1
36	3253-4	Washer - Lock	1
37	322-10	Screw - Cap Hex. Hd.	1
38	32120-64	Ring - Retaining	1
39	67-0900	Belt - Traction	1
40	82-6450	Pulley - Transmission	1
41	3257-23	Key	1
43	67-0750	Bracket - Mount, Spring	1
44	32144-70	Screw - Hex. Hd. Tapping	1
45	67-0600	Lever W.A. - Deck Engage	1
46	67-0640	Handle - Deck Engage	1
47	233-22	Knob	1

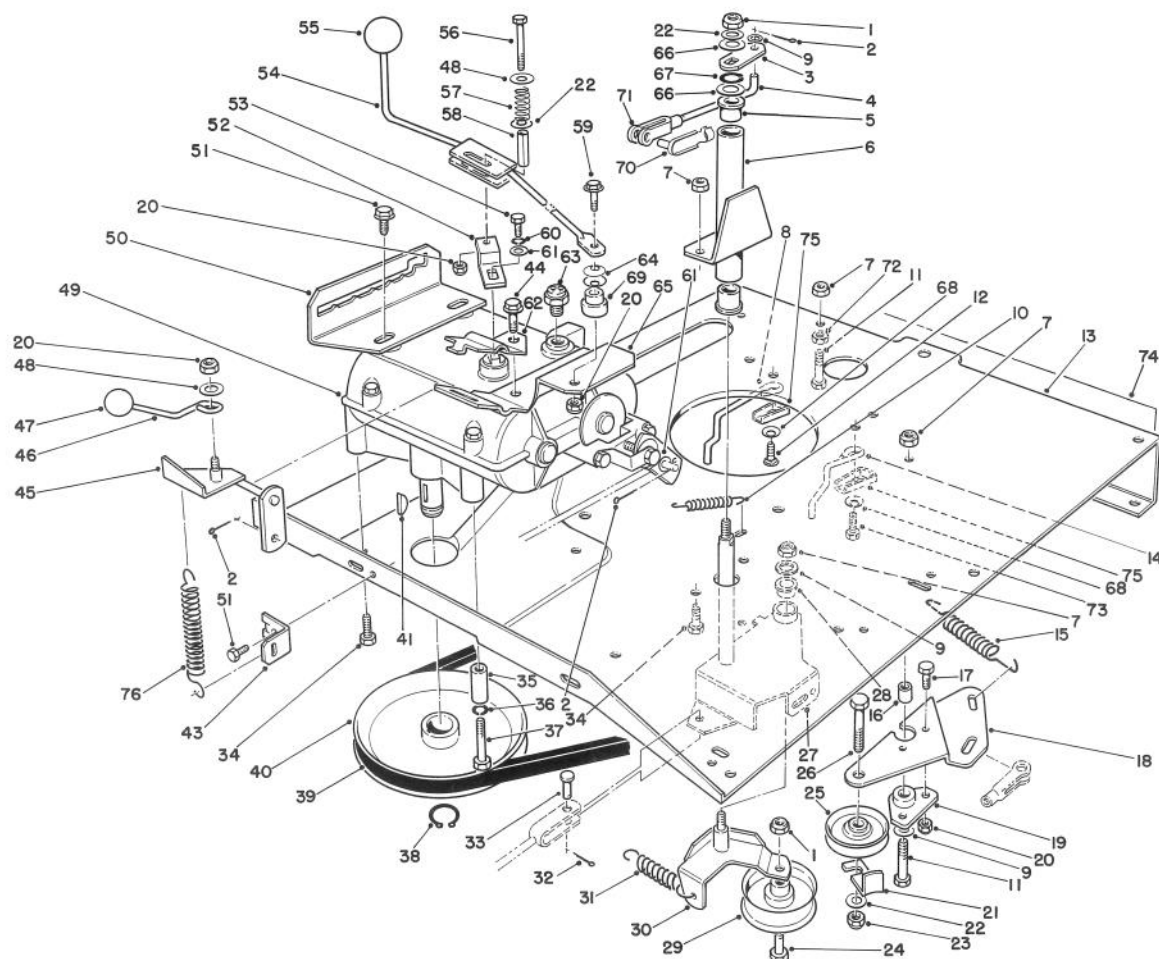


C-0009A

TRANSMISSION & LINKAGE ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used
48	3256-55	Washer - Fender	2
49	67-1400	Transmission	1
50	56-7630	Gate - Shift	1
51	32144-14	Screw - Wash. Hd., Tap.	4
52	56-7620	Lever - Shift	1
53	329-4	Screw - Cap Hex. Hd.	1
54	76-3940	Lever W.A. - Shift	1
55	233-48	Knob	1
56	321-15	Screw - Cap Hex. Hd.	1
57	56-7730	Spring	1
58	56-7740	Spacer	1
59	321-8	Screw - Cap Hex. Hd.	1
60	3253-3	Washer - Lock	1
61	3256-22	Washer - Flat	5
62	67-0670	Bracket - Engage, Deck	1

Ref. No.	Part No.	Description	No. Used
63	28-4250	Switch - Neutral	1
64	3290-478	Washer - Belleville	2
65	67-0660	Bracket - Mount, Shifter	1
66	20-3220	Washer - Flat	2
67	32151-62	Ring - Retaining	1
68	3290-456	Washer - Belleville	2
69	76-3970	Spacer - Pivot	1
70	67-1530	Assembly - Pin, Clevis	1
71	282-27	Clevis	1
72	3218-2	Nut - Jam	1
73	32144-26	Screw - Thread Forming	1
74	76-3860	Decal	1
75	76-3820	Anchor - Guide, Belt	2
76	76-4660	Spring	1

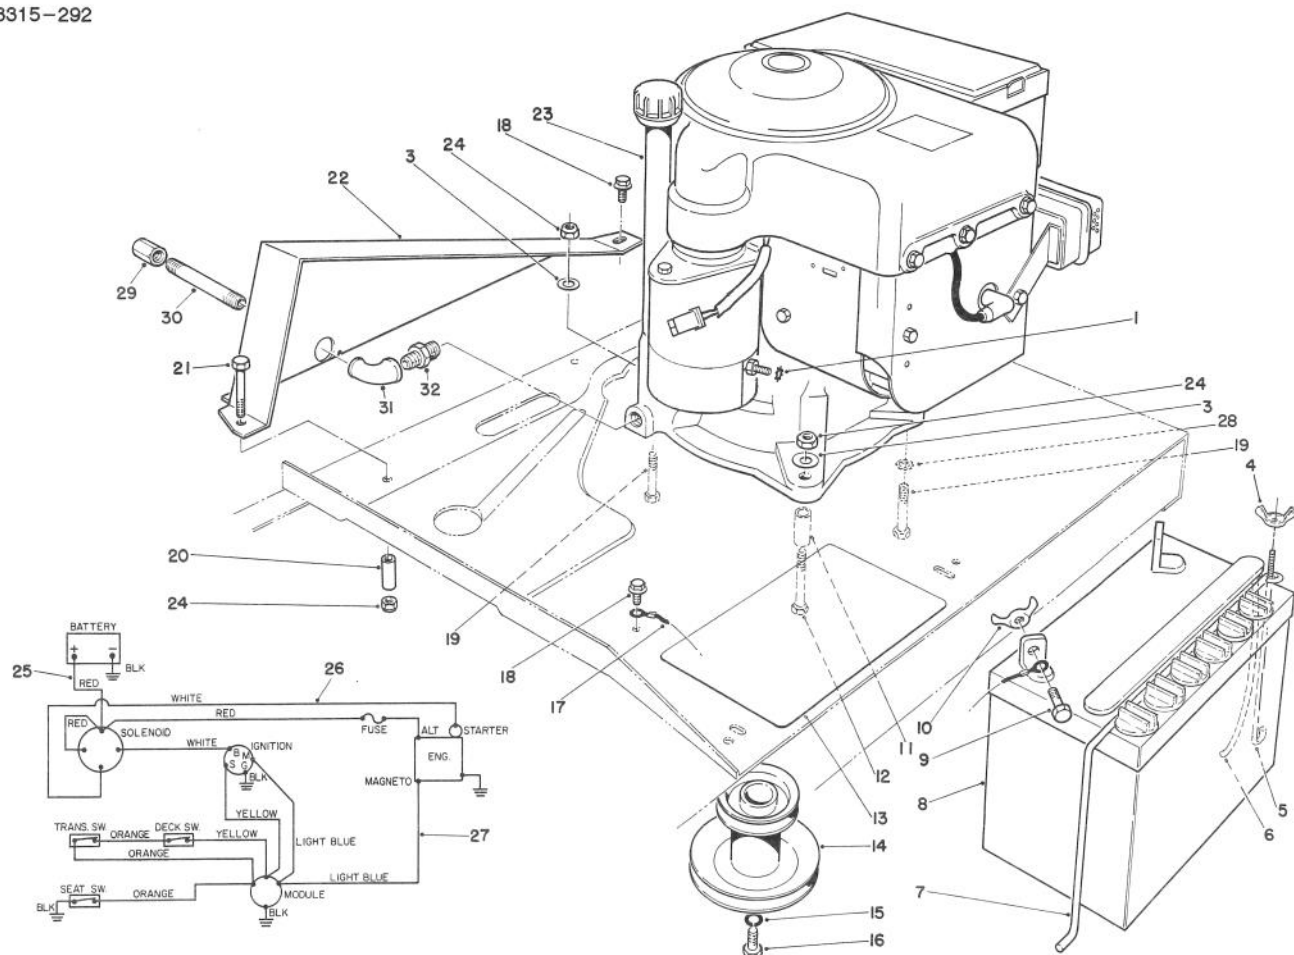


C-0006A

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3255-7	Washer - Lock, Int. Tooth	1
3	3256-23	Washer - Flat	4
4	32103-14	Nut - Wing	1
5	56-7720	Post - Hold Down, Battery	1
6	56-2540	Tube - Drain	1
7	56-7710	Hold Down - Battery	1
8	80-2600	Battery 12V	1
9	321-4	Screw - Cap Hex. Hd.	2
10	32103-22	Nut - Wing	2
11	80-4560	Spacer	1
12	322-12	Screw - Cap Hex. Hd.	1
13	62-4300	Pad - Anti-Skid	1
14	83-4840	Pulley - Engine	1
15	3256-25	Washer - Flat	1
16	62-3760	Screw - Cap Hex. Hd.	1
17	56-7870	Assembly - Wire Battery to Ground	1

Ref. No.	Part No.	Description	No. Used
18	32144-14	Screw - Self Tapping	2
19	322-7	Screw - Cap Hex. Hd.	3
20	67-0920	Guide - Belt	1
21	322-10	Screw - Cap Hex. Hd.	1
22	67-0962	Guard - Chain	1
23		Engine - 8 H.P. B & S	1
24	3296-29	Nut - Lock	5
25	67-1170	Assembly - Wire Battery to Solenoid	1
26	67-1160	Assembly - Wire Solenoid to Starter	1
27	82-6740	Harness - Wire	1
28	3255-8	Washer - Lock	4
29	288-2	Cap - Pipe	1
30	289-34	Nipple - Pipe	1
31	2811-17	Elbow - Street	1
32	2812-1	Reducer	1

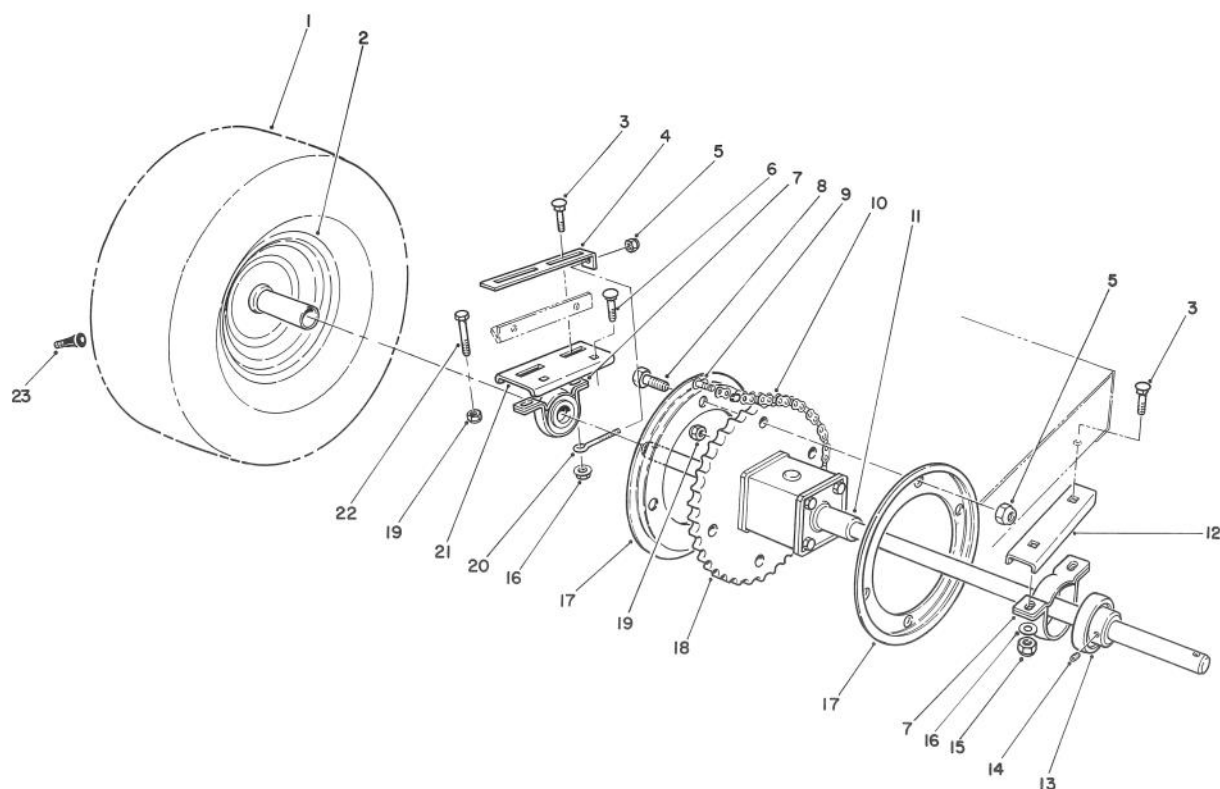


C-0008

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	231-115	Tire	2	13	47-1490	Bearing (Incl. Ref. #14)	2
2	44-9760	Rim	2	14	3245-32	Screw - Set	4
3	3231-4	Bolt - Carriage	2	15	3296-39	Nut - Lock	6
4	61-9990	Plate - Adjusting	1	16	3256-24	Washer - Flat	4
5	3296-42	Nut - Lock	5	17	76-1580	Guide - Chain	2
6	3231-25	Bolt - Carriage	4	18	76-4010	Sprocket	1
7	47-1480	Mount - Bearing	2	19	3296-29	Nut - Lock	6
8	321-4	Screw - Cap Hex. Hd.	4	20	61-9980	Screw - Adjusting	1
9	2710-11	Link - Connecting	1	21	66-6620	Support R.H.	1
10	67-0910	Chain (Incl. Ref. #9)	1	22	46-2511	Bolt - Axle	2
11	56-9960	Differential	1	23	232-27	Valve Stem w/Cap	2
12	66-6630	Support L.H.	1	*	11-0410	Kit - Tire Chains (Optional)	1

*Not Illustrated

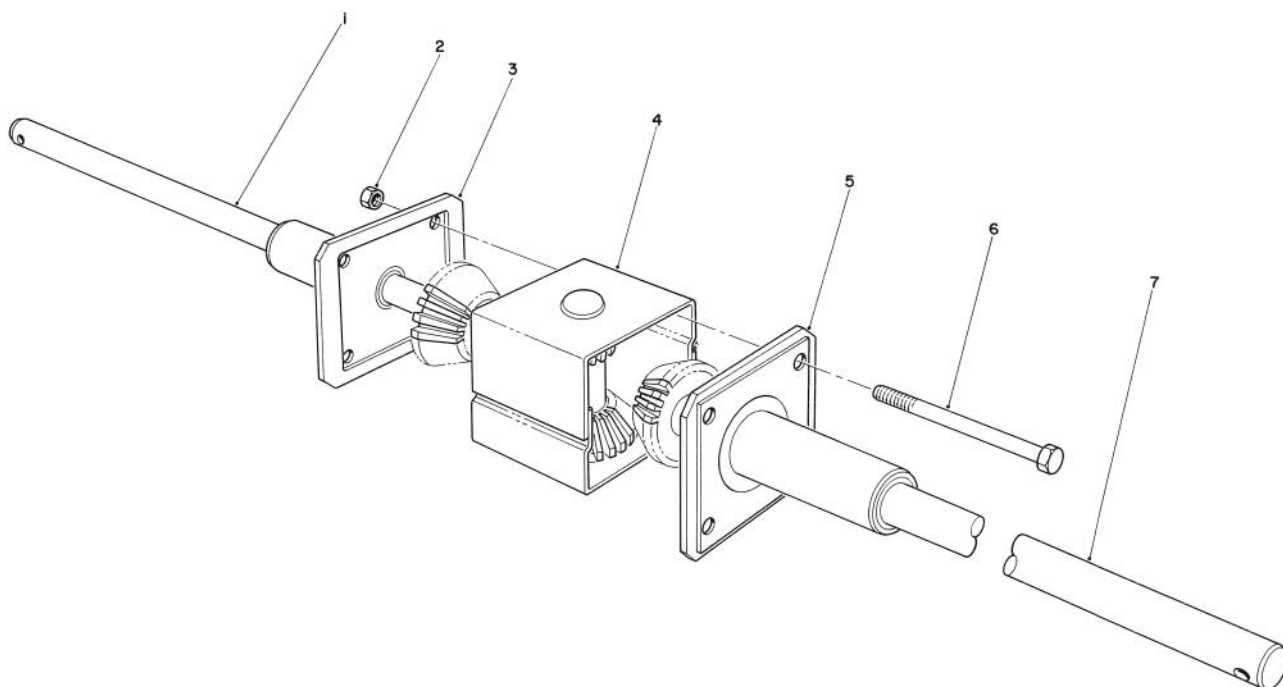


C-0010

DIFFERENTIAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55-7762	Axle - R.H.	1
2	32152-1	Nut - Lock	4
3	55-7770	Cap - End, R.H.	1
4	55-7780	Case - Gear, Transfer	1

Ref. No.	Part No.	Description	No. Used
5	55-7771	Cap - End, L.H.	1
6	322-22	Screw - Cap Hex. Hd.	4
7	55-7763	Axle - L.H.	1
*	56-9960	Differential - Complete	1

*Not Illustrated

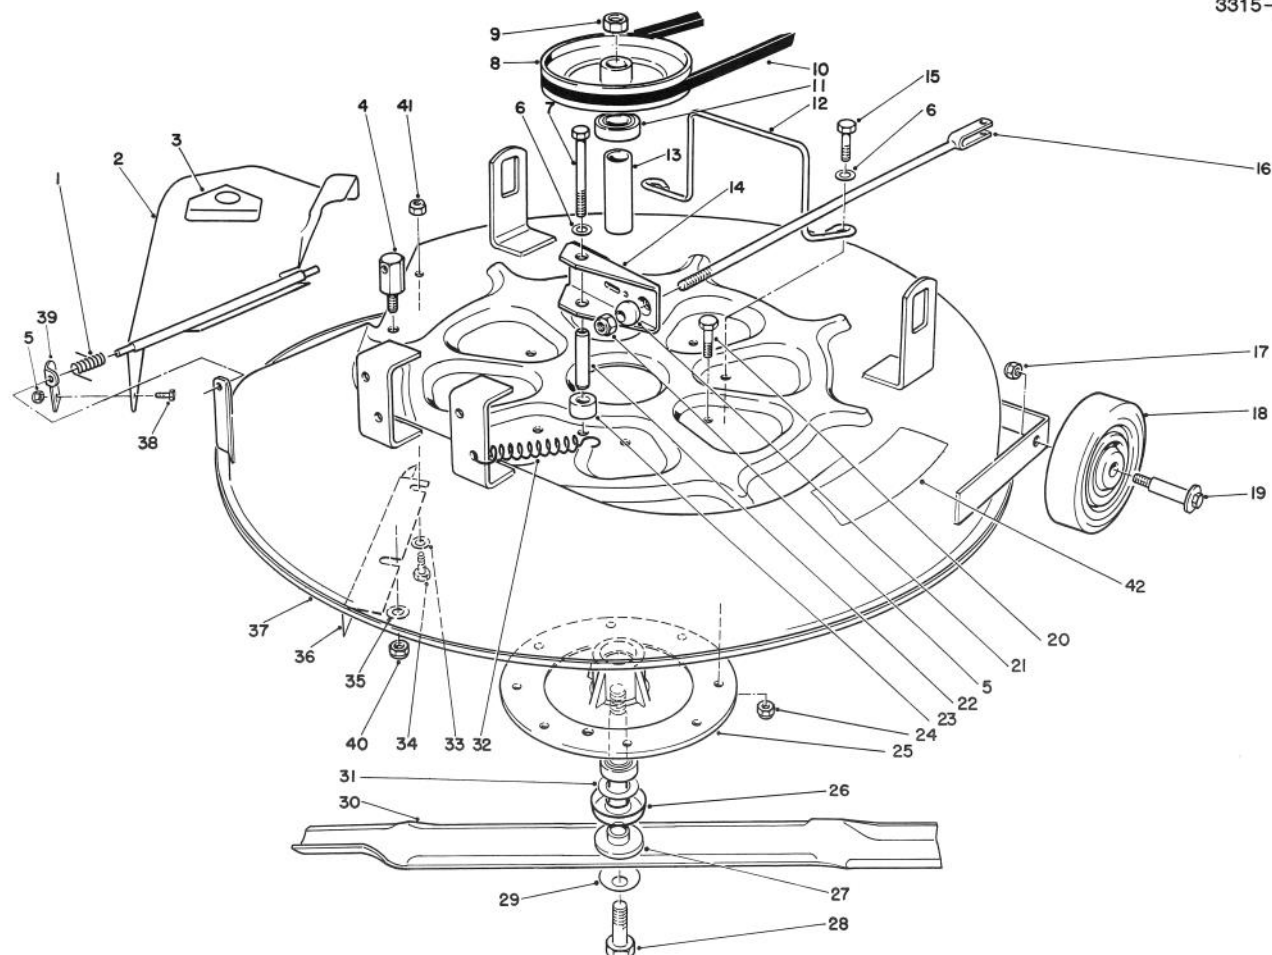


C-0001

CUTTING UNIT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-8010	Spring	1
2	67-1150	Deflector	1
3	54-9220	Decal - Danger	1
4	67-0140	Post - Pivot	1
5	3296-8	Nut - Lock	2
6	3256-23	Washer - Lock	3
7	322-19	Screw - Cap Hex. Hd.	1
8	80-4420	Pulley - Deck	1
9	3219-6	Nut - Hex.	1
10	67-1390	V-Belt	1
11	38-7820	Bearing - Ball	2
12	80-4520	Guide - Belt	1
13	62-3660	Spacer - Bearing	1
14	67-1370	Assy. - Brake, Deck	1
15	322-6	Screw - Cap Hex. Hd.	2
16	67-0570	Rod W.A. - Brake, Deck	1
17	3296-39	Nut - Lock	2
18	61-9760	Wheel - Deck	2
19	56-6590	Bolt - Wheel	2
20	322-3	Screw - Cap Hex. Hd.	6
21	67-0710	Ball - Swivel	1

Ref. No.	Part No.	Description	No. Used
22	67-0730	Post - Mount, Brake	1
23	76-3810	Spacer - Brake, Deck	1
24	3296-29	Nut - Lock	1
25	67-0970	Hub - Spindle	1
26	80-4360	Shield - Bearing	1
27	80-4340	Shaft - Spindle	1
28	26-0671	Bolt - Blade	1
29	3290-465	Washer - Belleville	1
30	67-0200	Blade	1
31	80-4380	Spacer - Spindle	1
32	67-1440	Spring - Brake	1
33	3256-22	Washer - Flat	1
34	3234-21	Screw - Cap Hex. Hd.	1
35	3256-24	Washer - Flat	1
36	67-0130	Baffle	1
37	82-6230	Deck	1
38	321-4	Screw - Cap Hex. Hd.	1
39	67-1600	Bracket - Deflector	1
40	3296-59	Nut - Lock	1
41	3296-42	Nut - Lock	1
42	76-4070	Decal - Danger	1

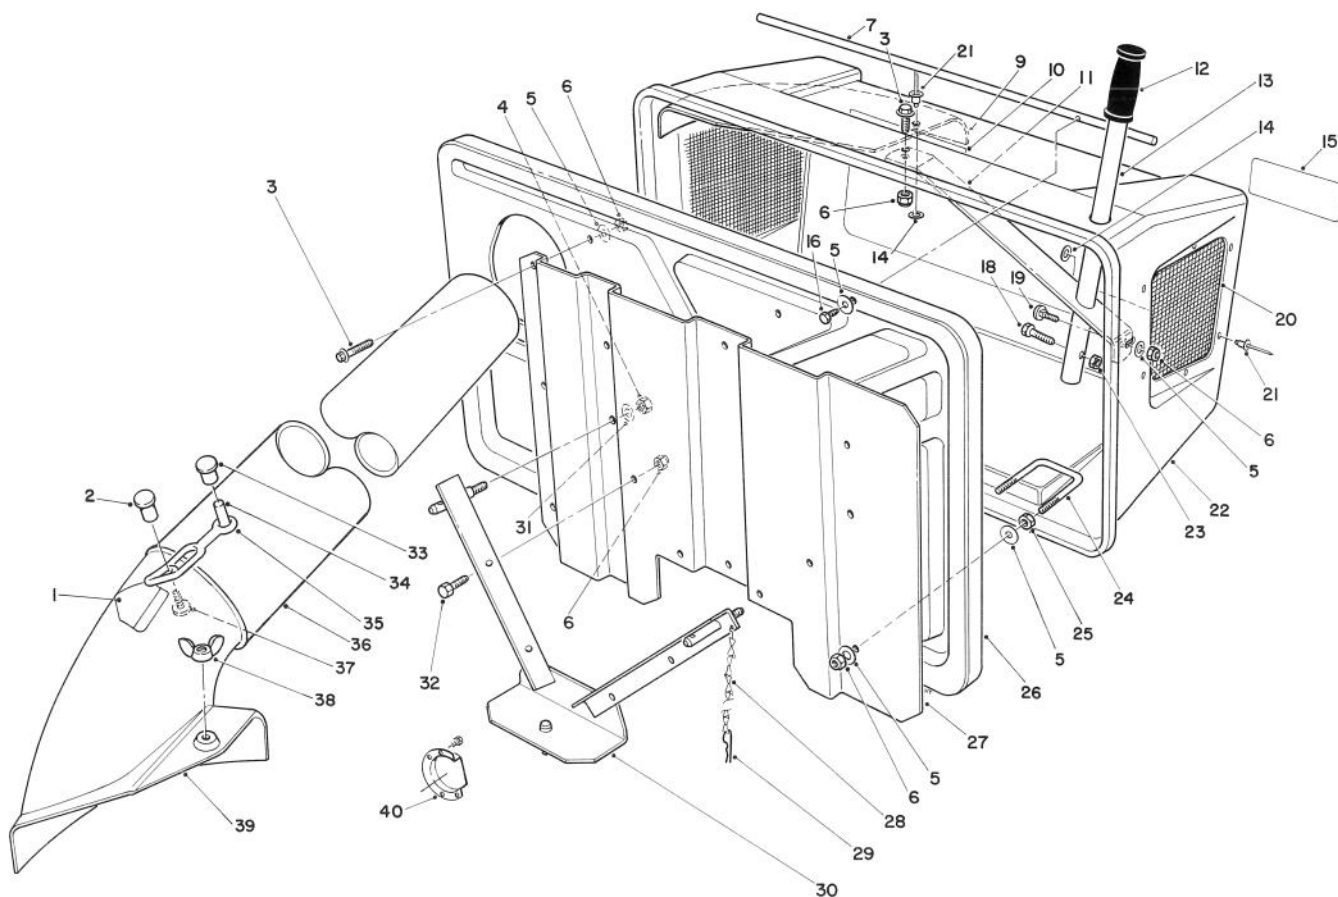


C-0011B

EASY EMPTY BAGGING KIT MODEL 59047 (Optional)

Ref. No.	Part No.	Description	No. Used
1	54-9220	Decal - Chute	1
2	233-68	Knob	1
3	3234-5	Screw - Hex. Hd. Flange	8
4	3296-17	Nut - Lock	2
5	3256-2	Washer - Flat	14
6	3296-29	Nut - Lock	15
7	25-1360	Rod - Pivot	1
9	25-1470	Deflector	1
10	46-2850	Decal - Warning	1
11	25-1390	Guide - Handle	1
12	233-40	Grip - Handle	1
13	25-1380	Tube - Handle	1
14	3269-6	Washer - Backup, Rivet	14
15	25-2200	Decal - Easy Empty Bagger	1
16	321-30	Screw - Cap Hex. Hd.	2
18	321-8	Screw - Cap Hex. Hd.	1
19	3230-1	Bolt - Carriage	1
20	26-0010	Screen	1
21	3290-382	Rivet - Pop	14
22	25-1290	Hopper	1

Ref. No.	Part No.	Description	No. Used
23	32153-4	Nut - Lock	1
24	25-1370	Latch	1
25	3217-6	Nut - Hex.	2
26	67-9980	Cap	1
27	67-1540	Plate - Mounting	1
28	2830-9	Chain	2
29	3290-355	Pin - Hair, Cotter	2
30	67-9900	V-Bracket	1
31	3256-24	Washer - Flat	2
32	322-2	Screw - Cap Hex. Hd.	4
33	3290-479	Fastner - Panel	1
34	22-9741	Spacer	1
35	82-5690	Retainer - Duct	1
36	67-9890	Duct	1
37	32140-64	Screw	1
38	32103-14	Nut - Wing	1
39	67-1550	Chute (Incl. Ref. #1, 2 & 37)	1
40	2210-319	Deflector - Muffler	1

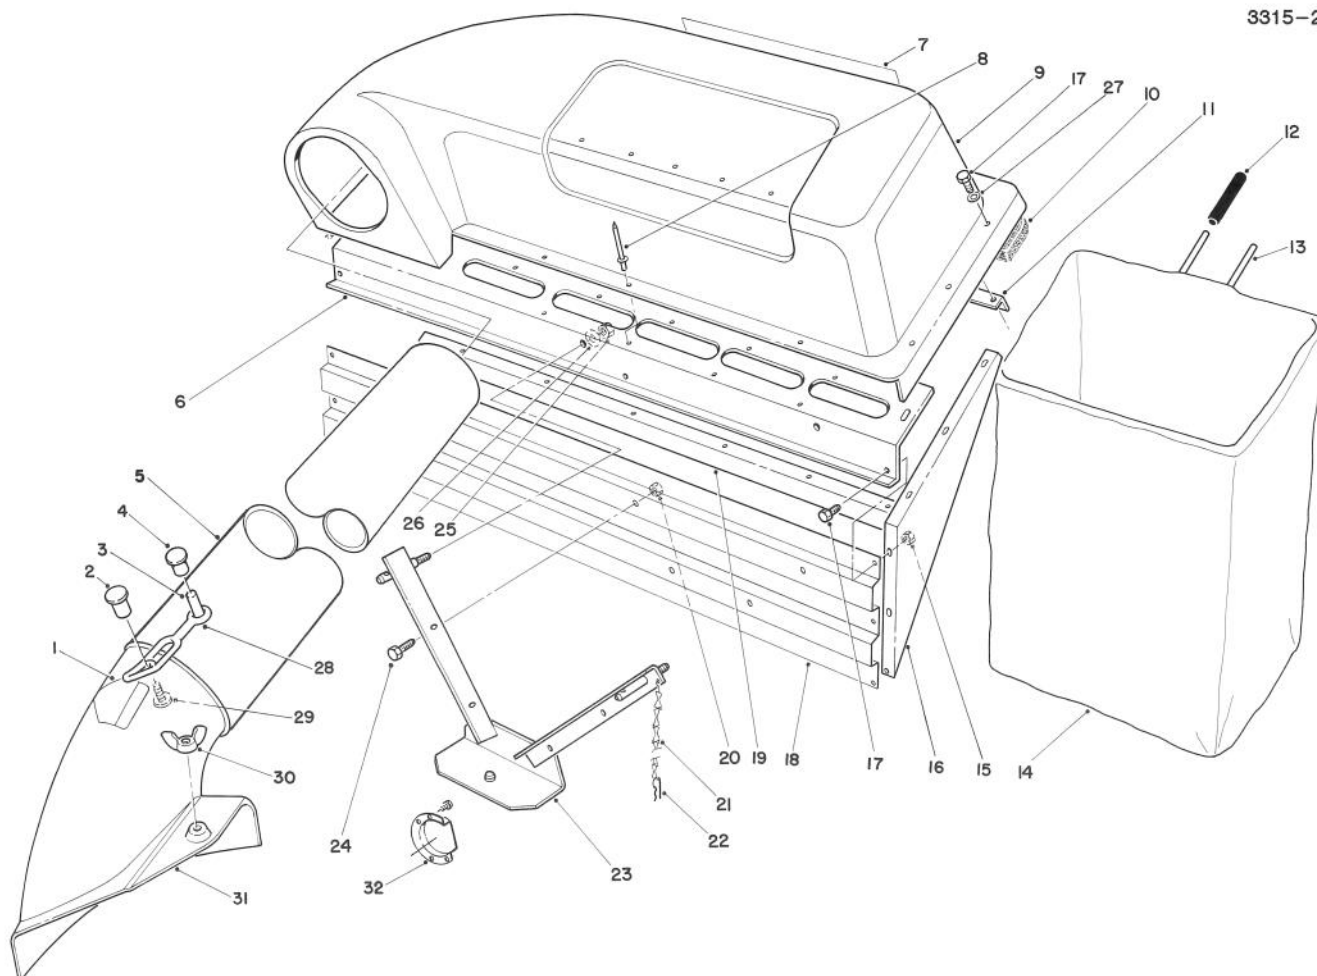


C-0012B

TWIN BAGGER GRASS CATCHER MODEL 59053 (Opt.)

Ref. No.	Part No.	Description	No. Used
1	54-9220	Decal - Chute	1
2	233-68	Knob	1
3	22-9741	Spacer	1
4	3290-479	Fastner - Panel	1
5	67-9890	Duct	1
6	57-7920	Baffle	1
7	57-7840	Decal - Twin Bagger	1
8	3269-15	Rivet - Pop	18
9	67-9960	Cover	1
10	57-7820	Seal - Foam	1
11	57-7880	Bracket - Frame, Bag	2
12	47-2550	Grip - Handle	4
13	57-7960	Frame - Bag	2
14	57-7990	Bag	2
15	3296-42	Nut - Lock	12
16	57-7980	Plate - Side	2
17	321-3	Screw - Cap Hex. Hd.	12

Ref. No.	Part No.	Description	No. Used
18	67-9960	Shield - Muffler	1
19	57-7890	Channel - Support, Bag	1
20	3296-29	Nut - Lock	4
21	2830-9	Chain	2
22	3290-355	Pin - Hair, Cotter	2
23	67-9900	V-Bracket	1
24	322-2	Screw - Cap Hex. Hd.	4
25	3296-17	Nut - Lock	2
26	3256-24	Washer - Flat	2
27	3256-1	Washer - Flat	5
28	82-5690	Retainer - Duct	1
29	32140-64	Screw	1
30	32103-14	Nut - Wing	1
31	67-1550	Assembly - Chute (Incl. Ref. #1, 4 & 29)	1
32	2210-319	Deflector - Muffler	1

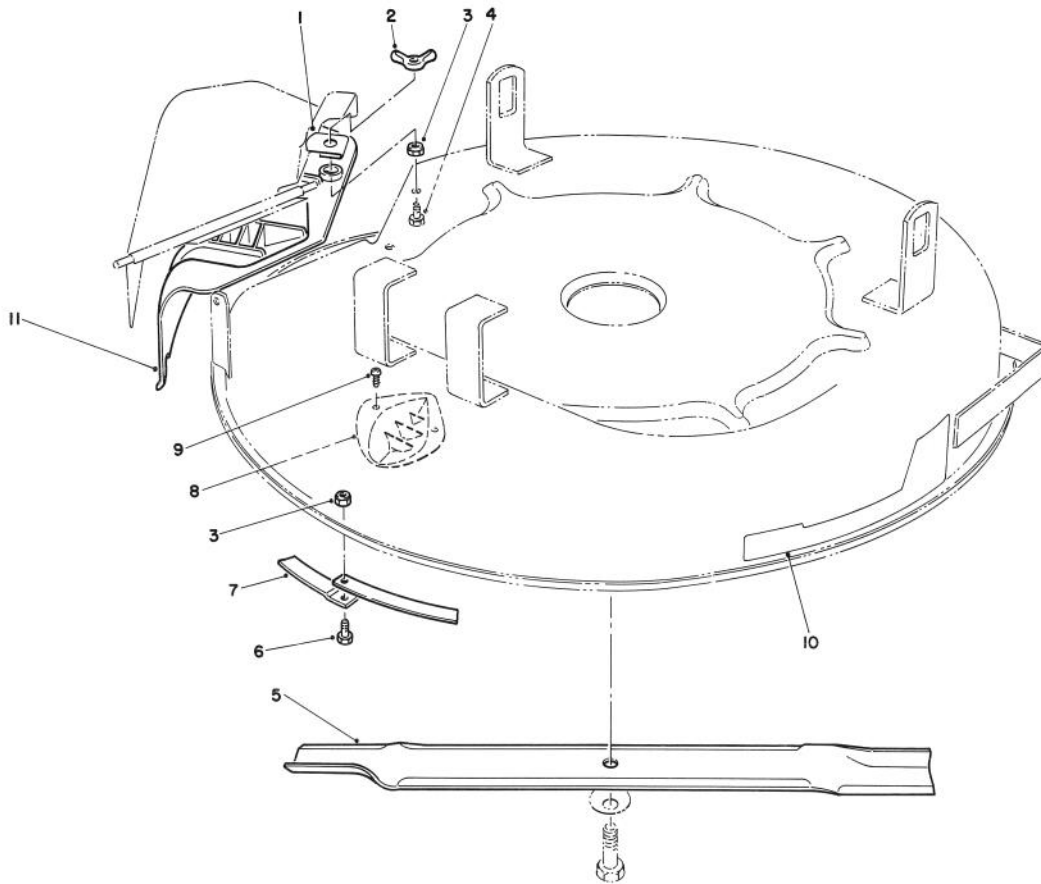


C-0795

RECYCLER KIT – MODEL NO. 59169

Ref. No.	Part No.	Description	No. Used
1	83-6610	Tab	1
2	32103-14	Nut – Wing	1
3	3296-42	Nut – Lock	9
4	3234-21	Screw	1
5	80-4530	Blade – Recycler	1
6	321-4	Screw – Cap Hex. Hd.	8
7	80-4540	Ring – Deck	4

Ref. No.	Part No.	Description	No. Used
8	80-4510	Kicker	4
9	32104-130	Screw – Special	8
10	82-6250	Decal – Recycler	1
11	80-4450	Cover – Recycler	1
*		Kit – Recycler (Incl. Ref. #1-10)	1

*Not Illustrated

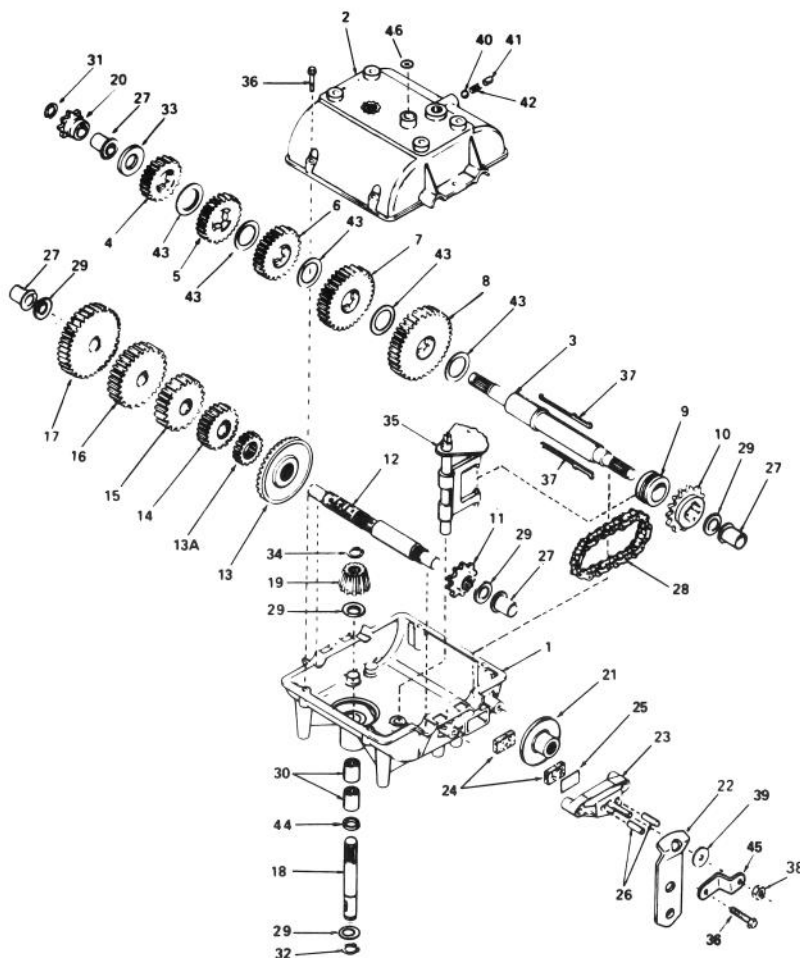


C-0441

TRANSMISSION PEERLESS MODEL 700-025

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	770061	Case - Transmission	1	24	790006	Pad - Brake	2
2	772083	Cover - Transmission	1	25	790007	Plate - Pad, Brake	1
3	776217	Shaft - Output	1	26	786026	Pin - Dowel	2
4	778121A	Gear - Spur (20 Teeth)	1	27	780105A	Bushing - Flange	4
5	778122A	Gear - Spur (22 Teeth)	1	28	786081	Chain - Roller (No. 41 Chain, 24 Links)	1
6	778123A	Gear - Spur (25 Teeth)	1	29	780072	Washer - Thrust	5
7	778124A	Gear - Spur (30 Teeth)	1	30	780086	Bearing - Needle	2
8	778125	Gear - Spur (35 Teeth)	1	31	792072	Ring - Retaining	1
9	784266	Collar - Shift	1	32	792035	Ring - Retaining	1
10	786083	Sprocket (18 Teeth)	1	33	780109	Washer	1
11	786082	Sprocket (9 Teeth)	1	34	788040	Ring - Retaining	1
12	776134	Shaft - Counter	1	35	784267	Assy. Rod & Fork - Shift	1
13	788137A	Gear - Bevel (42 Teeth)	1	36	792073	Screw - Thread Forming	8
13A	778136	Gear - Spur (15 Teeth)	1	37	792089A	Key	2
14	778126A	Gear - Spur (20 Teeth)	1	38	792075	Nut - Lock	1
15	778127A	Gear - Spur (25 Teeth)	1	39	792076	Washer	1
16	778128A	Gear - Spur (28 Teeth)	1	40	792077	Ball - Steel	1
17	778129A	Gear - Spur (30 Teeth)	1	41	792078	Screw - Set	1
18	776135	Shaft - Input	1	42	792079	Spring	1
19	778113A	Bevel - Pinion, Input	1	43	780108	Washer - Thrust	5
20	786047	Sprocket (8 Teeth)	1	44	792001	O-Ring	1
21	790003	Disk - Brake	1	45	786086	Bracket - Lever, Brake	1
22	790008A	Lever - Brake	1	46	788069	Seal - Square Cut	1
23	790025	Holder - Pad, Brake	1				

BRIGGS & STRATTON MODEL NO. 191707-0121-01

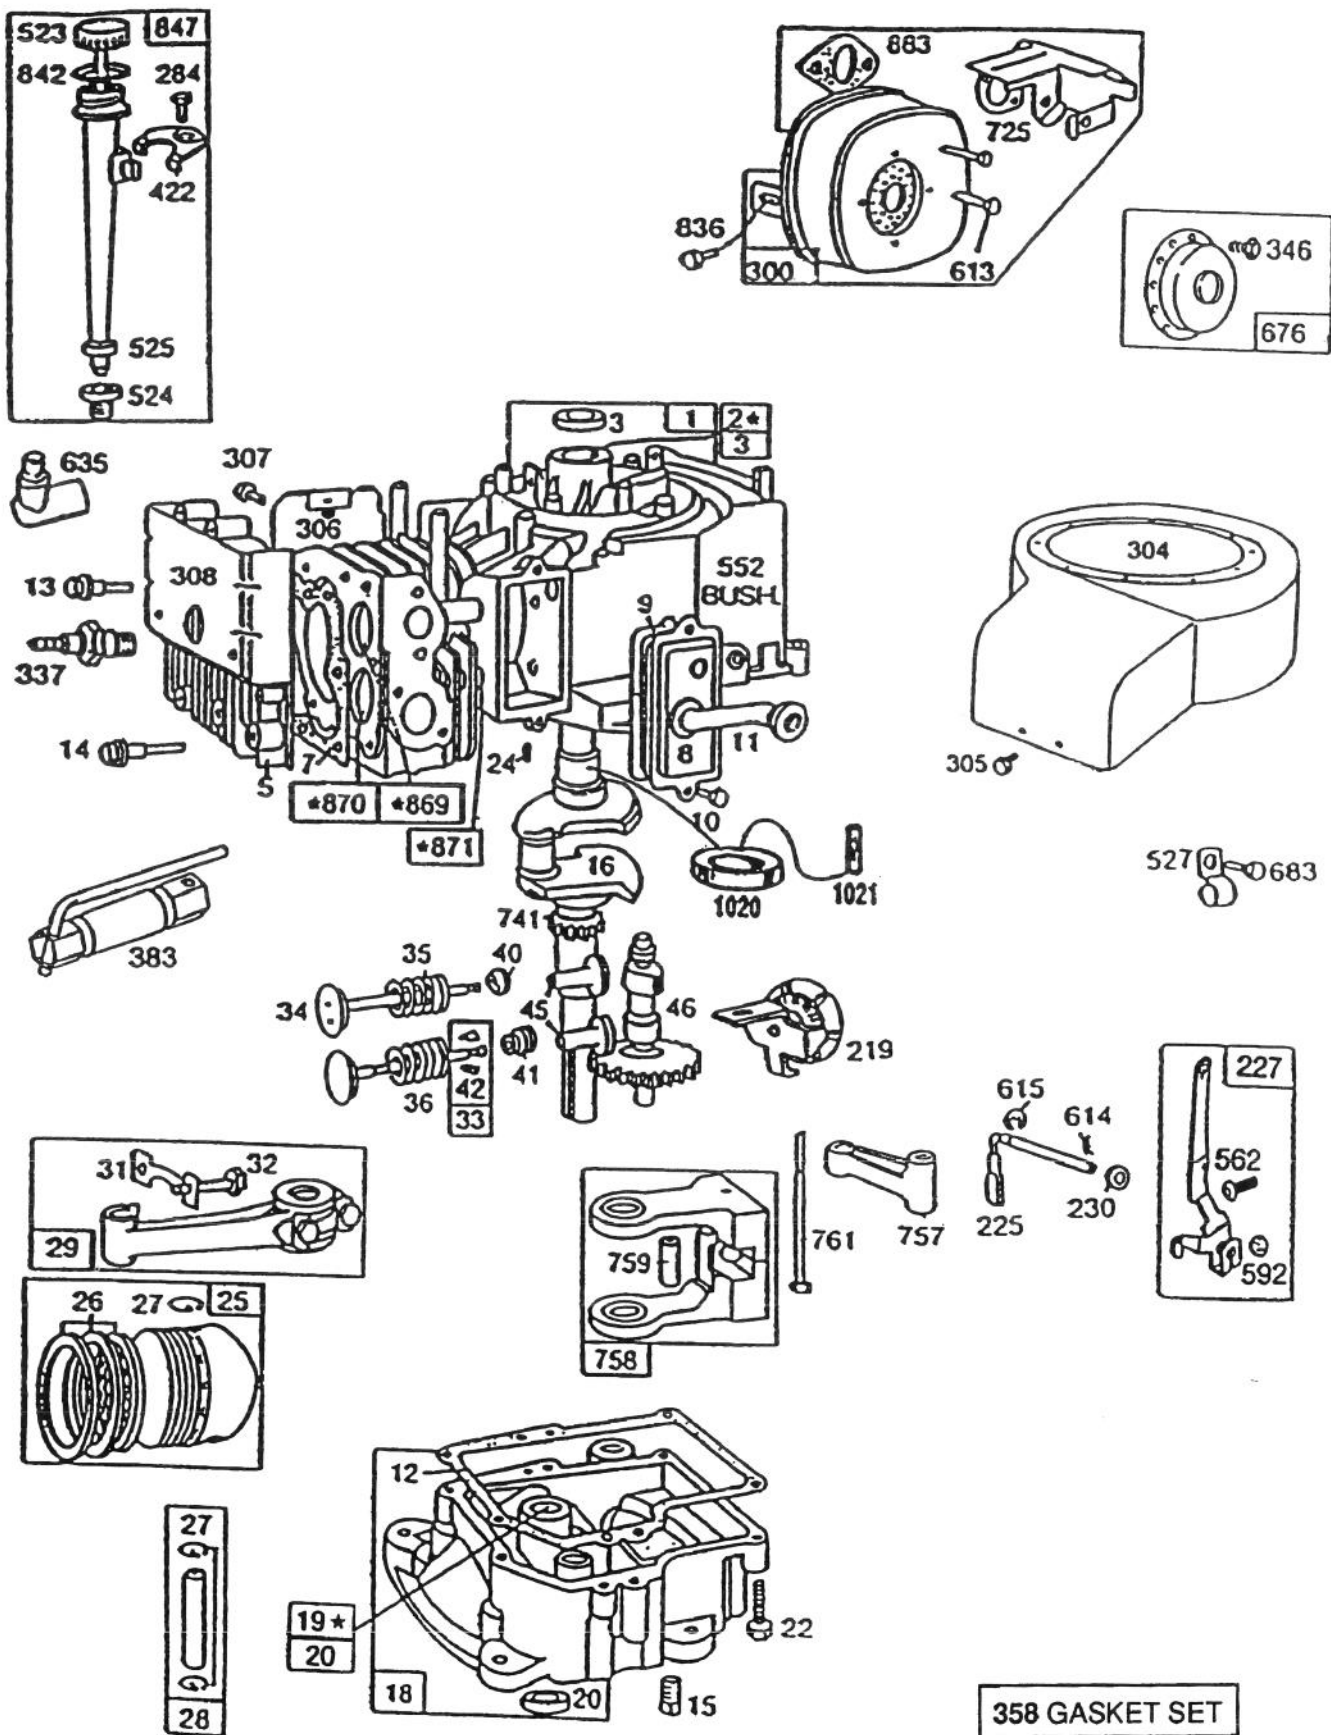

358 GASKET SET

* REQUIRES SPECIAL TOOLS TO INSTALL.
SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.


BRIGGS & STRATTON MODEL NO. 191707-0121-01

Ref. No.	Part No.	Description	No. Used
1	396269	Assembly - Cylinder	1
2	399267	Bearing - Cylinder Note: Requires special tools for installation.	1
3	294606	Seal - Oil	1
5	212286	Head - Cylinder	1
*7	272163	Gasket - Head, Cylinder	1
8	391406	Assembly - Breather	1
*9	27803	Gasket - Cover, Valve	1
10	94621	Screw	1
11	280005	Tube - Breather	1
*12	271701	Gasket - Cover, Crankcase 1/64" Thick	1
*	27876	Gasket - Cover, Crankcase .005" Thick	1
*	27877	Gasket - Cover, Crankcase .009" Thick	1
13	94565	Screw - Head, Cylinder	1
14	93723	Screw - Head, Cylinder (3" Long)	1
15	94239	Plug - Drain, Oil	1
16	396876	Crankshaft Note: Order Part 94388 for timing gear pin replacement.	1
18	392548	Base - Engine	1
19	295963	Bushing - Base, Engine Note: Requires special tool for installation.	1
20	391086	Seal - Oil	1
22	93585	Screw - Base, Mounting	1
24	222698	Key - Flywheel	1
25	391673	Assy. - Piston, Std.	1
	391674	Assy. - Piston, .010" O.S.	1
	391675	Assy. - Piston, .020" O.S.	1
	391676	Assy. - Piston, .030" O.S.	1
		PISTON RING SETS Note: For Chrome Piston Ring Set - Standard Size - Order No. 299743.	
26	391669	Ring Set - Piston, Std.	1
	391670	Ring Set - Piston, .010" O.S.	1
	391671	Ring Set - Piston, .020" O.S.	1
	391672	Ring Set - Piston, .030" O.S.	1
27	68546	Lock - Piston Pin	1
28	295840	Assy. - Piston Pin, Std.	1
	295841	Assy. - Piston Pin, .005" O.S.	1
29	390402	Assy. - Rod, Connecting Note: For Connecting Rod with .020" Undersize Crankpin Bore - Order No. 390773.	1
31	222114	Lock - Screw, Conn. Rod	1
32	92659	Screw - Connecting Rod	1
33	390419	Valve - Exhaust	1
34	261055	Valve - Intake	1
35	65906	Spring - Valve, Intake	1

Ref. No.	Part No.	Description	No. Used
36	26828	Spring - Valve, Exhaust	1
40	221596	Retainer - Valve, Intake	1
41	292260	Rotocoil - Valve, Exhaust	1
42	93630	Retainer - Valve, Exhaust Rotocoil	2
45	260933	Tappet - Valve	1
46	211689	Gear - Cam	1
219	491397	Slinger - Oil, Gov. Gear & Bracket Assembly	1
222	491594	Plate - Control, Governor	1
225	231058	Crank - Gov. (1/4" Dia.)	1
227	493935	Assy. Lever - Governor for 1/4" Dia. Crank	1
230	222450	Washer - Lever, Governor (1/4" Inside Diameter)	1
284	94419	Screw - Clamp, Mounting	1
300	398507	Muffler - Exhaust	1
304	494084	Housing - Blower	1
305	94608	Screw - Blower Hsg., Sems	1
306	224543	Shield - Cylinder	1
307	93949	Screw - Shield, Cylinder	1
308	222636	Cover - Head, Cylinder	1
337	802592	Plug - Spark	1
346	93705	Screw	1
358	299577	Gasket Set	1
383	89838	Wrench - Spark Plug	1
422	223394	Clamp - Tube, Oil Filler	1
523	391840	Cap & Dipstick - Oil Filler	1
524	68838	Seal - Tube, Filler	1
525	280133	Tube - Filler, Oil	1
527	221428	Clamp	2
552	491986	Bushing - Crank, Gov.	1
562	92613	Bolt - Lever, Governor	1
592	231082	Nut - Hex.	1
613	94042	Screw - Muffler	1
614	93306	Pin - Hair, Cotter	1
615	93307	Retainer - E-Ring	1
635	66538	Elbow - Plug, Spark	1
676	395700	Deflector - Exhaust	1
683	93572	Screw	1
725	223540	Shield - Muffler	1
741	262479	Gear - Timing	1
757	212359	Link - Counterweight	1
758	390172	Assy. - Counterweight	1
759	298909	Pin - Counterweight	1
761	93874	Screw - Counterweight	1
836	93559	Screw	1
842	270920	Seal - Cap, Filler	1
847	392066	Filler Group - Oil	1
869	211661	Seat - Valve, Intake (Std.)	1
870	211661	Seat - Valve, Exhaust (Std.)	1
871	231218	Guide - Exhaust or Intake Valve, See repair manual	1
883	272309	Gasket - Pipe, Exhaust	1
1020	261190	Eccentric	1
1021	94160	Pin - Eccentric	1


*Included in Gasket Set - Part No. 299577.

BRIGGS & STRATTON MODEL NO. 191707-0121-01

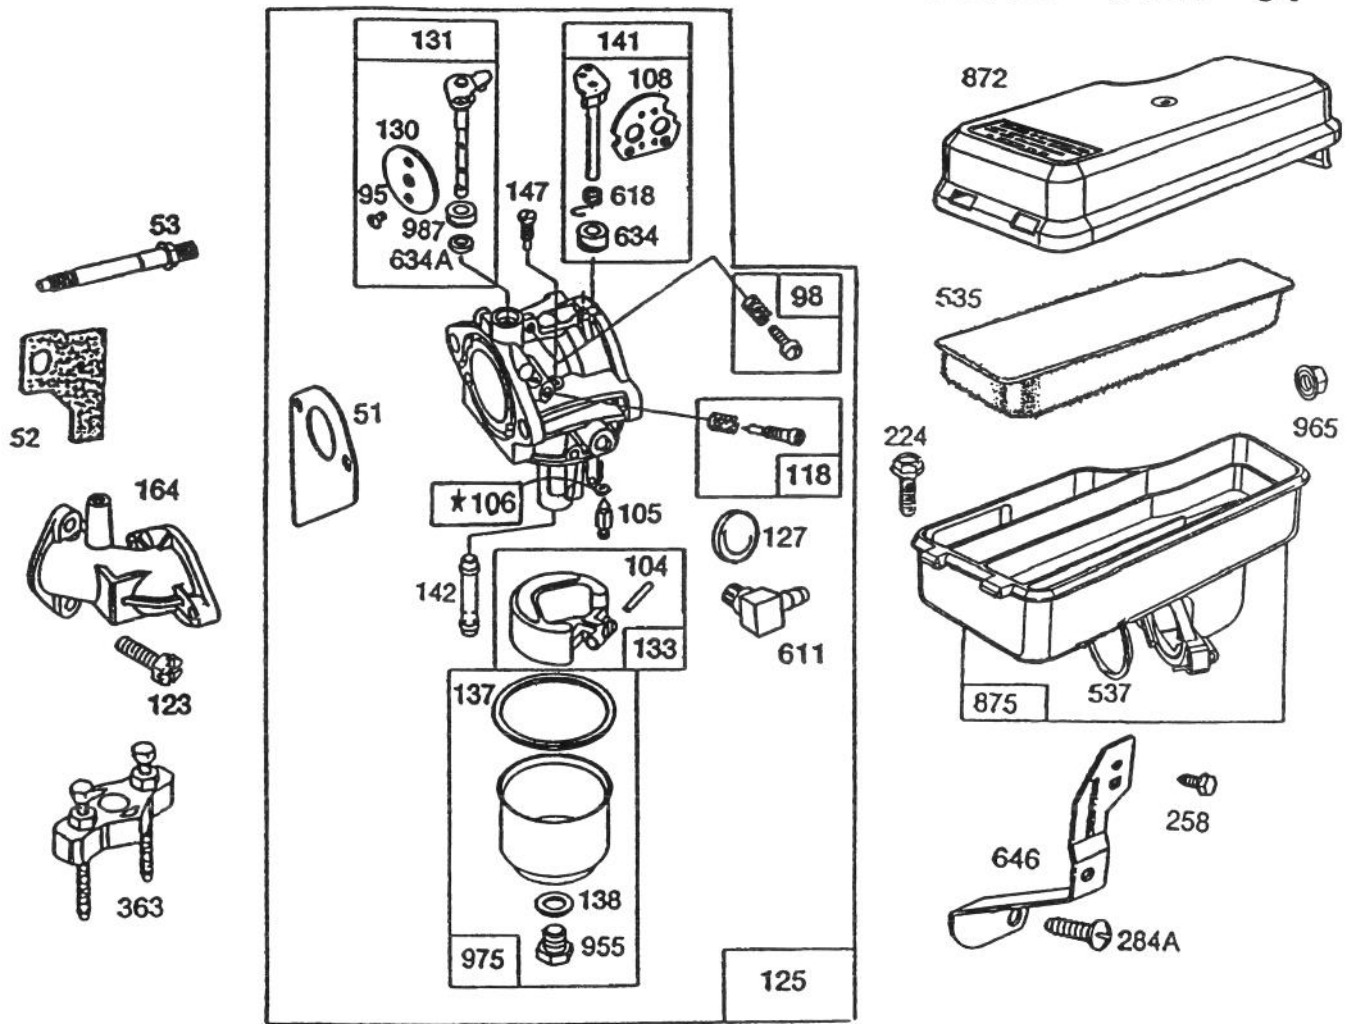

121 CARBURETOR OVERHAUL KIT

977 CARBURETOR GASKET SET

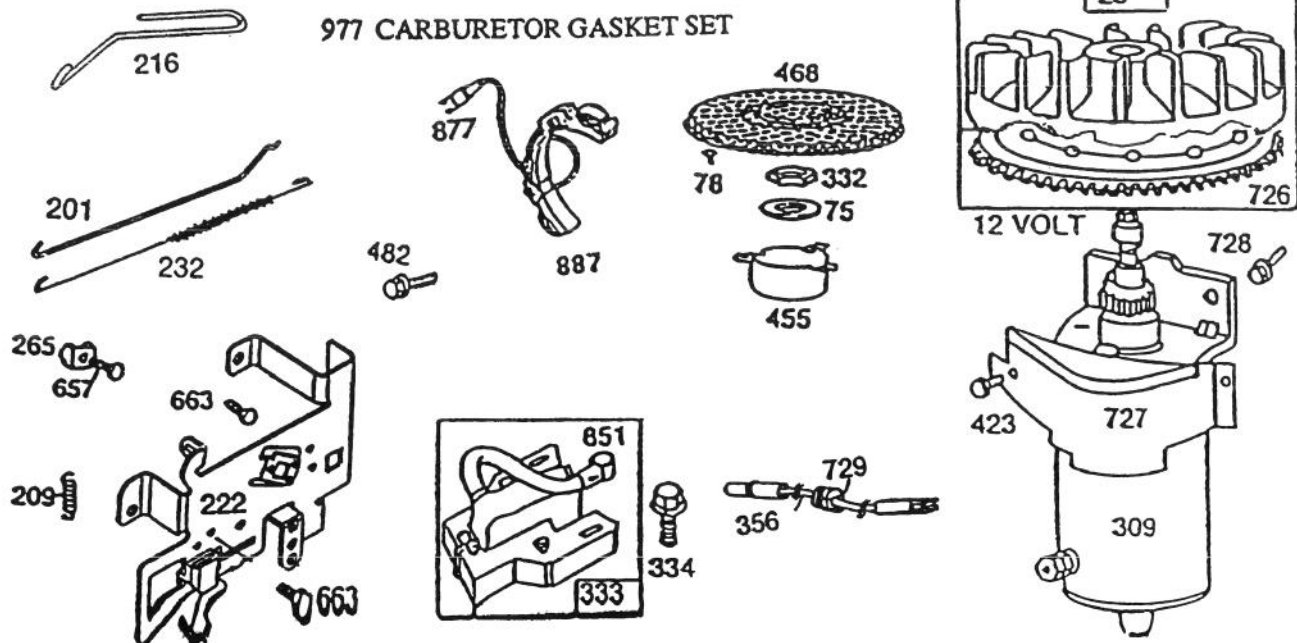

* REQUIRES SPECIAL TOOLS TO INSTALL.
SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.

BRIGGS & STRATTON MODEL NO. 191707-0121-01


Ref. No.	Part No.	Description	No. Used
23	391983	Flywheel and Ring Gear Assy. - Magneto (Incl. Aluminum Ring Gear)	1
†51	272465	Gasket - Carburetor (Carb. to Elbow)	1
~ 52	270824	Gasket - Carb. Mtg.	1
53	94637	Stud - Gasket Mtg.	1
75	224061	Washer - Spring	1
78	93805	Screw - Sem	1
*95	94098	Screw - Throttle	1
98	494382	Screw - Idle Speek	1
*104	231789	Pin - Float Hinge	1
*105	231790	Valve Assy. - Inlet Needle	1
*106	281169	Inlet Valve Seat	1
108	224540	Valve - Choke	1
118	494383	Valve - Needle	1
121	494880	Carburetor Overhaul Kit	1
123	94616	Screw - Carburetor Mtg.	1
125	494894	Carburetor Assembly	1
*127		Plug - Welch (Sold in Kit Only)	1
130	224668	Valve - Throttle	1
131	494885	Shaft & Lever - Throttle	1
133	494381	Float - Carburetor	1
†137	281165	Gasket - Float Bowl	1
†138	281164	Washer - Float Bowl	1
141	494380	Shaft & Lever - Choke	1
*142	494877	Nozzle - Carburetor	1
*147	231794	Screw - Nozzle	1
164	213819	Carburetor Elbow	1
201	262769	Link - Governor	1
209	260871	Spring - Governor	1
216	262768	Link - Choke	1
222	493896	Plate - Gov. Plate	1
224	94513	Screw - Sem	1
232	262787	Spring - Governor Link	1
258	94620	Screw - Hex. Tapping	1
265	221535	Clamp - Casing	1
284A	94326	Screw - Brace Mtg.	1
309		Motor - Starting (12 Volt)	

Ref. No.	Part No.	Description	No. Used
		See Chart for Replacement Parts for Starting Motor on Illustrated Pages	1
332	92284	Nut - Flywheel	1
333	398811	Armature Assembly	1
334	93381	Screw - Armature Mtg. Sem	1
356	494328	Wire - Ground	1
363	19165	Puller - Flywheel	1
423	94073	Screw - Sem	1
455	222561	Cup - Screen Mounting	1
468	222562	Screen - Flush Rotating	1
482	93621	Screw - Sem	1
535	272405	Element - Foam Air Cleaner	1
537	281106	O-Ring - Air Cleaner	1
611	494451	Fuel Inlet Tube	1
618	262803	Spring - Choke Return	1
*634	281168	Seal - Choke Shaft	1
*634A	281167	Washer - Throttle Shaft	1
646	224614	Brace - Air Cleaner	1
657	93496	Screw - Sem	1
663	94419	Screw	1
726	392134	Gear - Ring (Aluminum) (Incl. Mtg. Parts)	1
727	395405	Cover - Starter (Incl. Mtg. Screws)	1
728	93535	Screw - Sem	1
729	281159	Clip - Lead Wire	1
851	221798	Terminal - Ignition Cable	1
872	281108	Cover - Air Cleaner	1
875	494745	Body - Air Cleaner	1
877	393814	Diode & Connector Assy. (D.C.)	1
887	391529	Stator Assembly - Alternator (D.C.)	1
955	94642	Screw - Fuel Bowl	1
965	94108	Nut - Lock	1
975	494378	Bowl Assy. - Carburetor	1
*987	281166	Seal - Throttle Shaft	1

*Included in Carburetor Overhaul Kit - Part no. 494880.

~ Included in Gasket Set - Part No. 299577.

†Included in Carburetor Gasket Set - Part No. 494385 & Carburetor Overhaul Kit No. 494880.

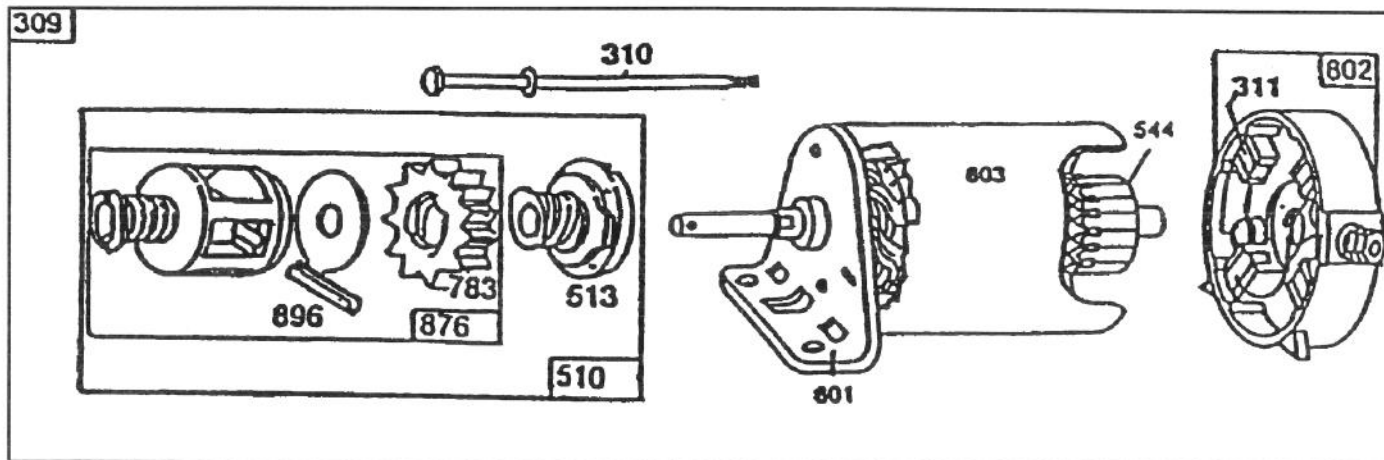

C-0784

STARTER – BRIGGS & STRATTON NO. 191707-0121-01

Ref. No.	Part No.	Description	No. Used
309	394805	Assembly – Motor & Drive	1
310	94003	Assembly – Thru Bolt	2
311	395538	Assembly – Brush	2
510	490421	Assembly – Drive (Incl. Ref. #513, 783, 876 & 896)	1
513	398003	Assembly – Clutch	1
544	390837	Assembly – Armature	1

Ref. No.	Part No.	Description	No. Used
783	280104	Gear	1
801	394856	Assembly – End Cap	1
802	395537	Assembly – Commutator, End Cap	1
803	398159	Assembly – Housing (3-21/32" Long)	1
876	490467	Kit – Retainer	1
896	94288	Pin – Roll	1

TORO PART NUMBER INDEX

3315-292

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
11-0410	Kit - Tire Chains (Optional)	9 * 1	55-7762	Axle - R.H.	10 1 1
12-5820	Pulley - Idler, Traction	6 25 1	55-7763	Axle - L.H.	10 7 1
12-9020	Retainer - Belt	6 21 1	55-7770	Cap - End, R.H.	10 3 1
13-6049	Kit - Loose parts	2 * 1	55-7771	Cap - End, L.H.	10 5 1
18-2970	R-Clamp	3 4 1	55-7780	Case - Gear, Transfer	10 4 1
19-1470	Bolt - Shoulder	1 18 1	56-2540	Tube - Drain	8 6 1
19-1610	Lever - Brake, Parking	1 19 1	56-6360	Filter	3 10 1
19-1970	Spring - Brake, Parking	1 13 1	56-6590	Bolt - Wheel	11 19 2
19-2200	Tip - Brake, Parking	1 20 1	56-7620	Lever - Shift	7 52 1
20-3220	Washer - Flat	7 66 2	56-7630	Gate - Shift	7 50 1
22-9741	Spacer	13 3 1	56-7710	Hold Down - Battery	8 7 1
22-9741	Spacer	12 34 1	56-7720	Post - Hold Down, Battery	8 5 1
23-0660	Switch - Ignition	5 36 1	56-7730	Spring	7 57 1
25-1290	Hopper	12 22 1	56-7740	Spacer	7 58 1
25-1360	Rod - Pivot	12 7 1	56-7870	Assembly - Wire	8 17 1
25-1370	Latch	12 24 1	56-9870	Pulley - Idler, Deck	6 29 1
25-1380	Tube - Handle	12 13 1	56-9960	Differential	9 11 1
25-1390	Guide - Handle	12 11 1	56-9960	Differential - Complete	10 * 1
25-1470	Deflector	12 9 1	57-7820	Seal - Foam	13 10 1
25-2200	Decal - Easy Empty Bagger	12 15 1	57-7840	Decal - Twin Bagger	13 7 1
26-0010	Screen	12 20 1	57-7880	Bracket - Frame, Bag	13 11 2
26-0671	Bolt - Blade	11 28 1	57-7890	Channel - Support, Bag	13 19 1
26-6700	Spring - Return, Brake	6 10 1	57-7920	Baffle	13 6 1
26-9530	Washer - Pivot	1 8 1	57-7960	Frame - Bag	13 13 2
28-0540	Bolt - Shoulder	5 18 1	57-7980	Plate - Side	13 16 2
28-2480	Washer - Flat	4 2 2	57-7990	Bag	13 14 2
28-4250	Switch - Neutral	7 63 1	61-9760	Wheel - Deck	11 18 2
28-7890	Module - Interlock	5 17 1	61-9780	Cap - Hub	4 1 2
28-8010	Spring	11 1 1	61-9980	Screw - Adjusting	9 20 1
38-1420	Switch - Seat	3 3 1	61-9990	Plate - Adjusting	9 4 1
38-7820	Bearing - Ball	11 11 2	62-3660	Spacer - Bearing	11 13 1
40-8200	Switch - Micro	5 27 1	62-3760	Screw - Cap Hex. Hd.	8 16 1
44-7030	Tread - Foot Rest	1 3 2	62-4300	Pad - Anti-Skid	8 13 1
44-7140	Mount - Bearing, Axle	2 2 1	63-8360	Key	5 40 2
44-9760	Rim	9 2 2	65-2920	Pad - Pedal	1 17 2
46-2511	Bolt - Axle	9 22 2	66-6620	Support R.H.	9 21 1
46-2511	Bolt - Mounting, Axle	2 19 2	66-6630	Support L.H.	9 12 1
46-2850	Decal - Warning	12 10 1	66-6640	Control - Throttle	5 34 1
47-1480	Mount - Bearing	9 7 2	66-6680	Seat	3 1 1
47-1490	Bearing	9 13 2	66-6910	Insert - Wheel, Steering	2 35 1
47-1910	Solenoid	5 31 1	66-6920	Pad - Isolator	3 17 2
47-2550	Grip - Handle	13 12 4	67-0010	Lift W.A. - Front, Deck	2 5 1
47-2964	Hose - Gas	3 9 2	67-0050	Tube W.A. - Support, Rear	2 11 1
47-2986	Hose - Gas	3 5 1	67-0080	Link - H.O.C.	5 23 1
49-3240	Wheel - Steering	2 34 1	67-0130	Baffle	11 36 1
54-9220	Decal - Chute	12 1 1	67-0140	Post - Pivot	11 4 1
54-9220	Decal - Chute	13 1 1	67-0200	Blade	11 30 1
54-9220	Decal - Danger	11 3 1	67-0231	Body W.A. - Rear	5 13 1
55-3576	Assembly - Cap, Gas	3 8 1	67-0270	Handle W.A. - H.O.C.	5 21 1
55-7102	Tower	1 22 1	67-0330	Idler - Plate, Mount	6 30 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
67-0360	Bracket - Arm, Idler	6 27 1	67-1370	Assy. - Brake, Deck	11 14 1
67-0400	Mount - Pivot	6 19 1	67-1390	V-Belt	11 10 1
67-0410	Spacer - Pivot	6 16 1	67-1400	Transmission	7 49 1
67-0420	Plate - Mount, Idler	6 18 1	67-1430	Spring - Compression	1 7 1
67-0430	Rod - Clutch	2 6 1	67-1440	Spring - Brake	11 32 1
67-0440	Spacer - Steering	2 32 1	67-1450	Spring - Extension	1 11 1
67-0450	Frame W.A. - Front	2 25 1	67-1460	Washer - Flat	2 15 2
67-0520	Channel - R.H.	2 3 1	67-1480	Brace - Support, Seat	5 8 2
67-0530	Channel - L.H.	2 24 1	67-1500	Bar - Stand	5 5 1
67-0540	Tube W.A. - Pivot	6 6 1	67-1510	Brace - Stop, Deck	2 13 2
67-0570	Rod W.A. - Brake, Deck	11 16 1	67-1530	Assembly - Pin, Clevis	2 8 1
67-0600	Lever W.A. - Deck Engage	6 45 1	67-1530	Assembly - Pin, Clevis	7 70 1
67-0640	Handle - Deck Engage	6 46 1	67-1540	Plate - Mounting	12 27 1
67-0660	Bracket - Mount, Shifter	7 65 1	67-1550	Assembly - Chute	13 31 1
67-0670	Bracket - Engage, Deck	7 62 1	67-1550	Chute	12 39 1
67-0690	Flat - Deck Engage	6 3 1	67-1590	Bracket - Brake Return	1 6 1
67-0710	Ball - Swivel	11 21 1	67-1600	Bracket - Deflector	11 39 1
67-0730	Post - Mount, Brake	11 22 1	67-9170	Spring	6 31 1
67-0750	Bracket - Mount, Spring	6 43 1	67-9890	Duct	13 5 1
67-0790	Support W.A. - Seat	5 10 1	67-9890	Duct	12 36 1
67-0800	Spindle - R.H.	4 15 1	67-9900	V-Bracket	13 23 1
67-0810	Spindle - L.H.	4 12 1	67-9900	V-Bracket	12 30 1
67-0830	Shaft W.A. - Steering	2 26 1	67-9960	Cover	13 9 1
67-0850	Bushing - Steering	2 29 2	67-9960	Shield - Muffler	13 18 1
67-0860	Washer - Steering	2 30 1	67-9980	Cap	12 26 1
67-0870	Bolt - Shoulder	5 22 2	68-8370	Link - Deck Engage	6 4 1
67-0870	Bolt - Shoulder	2 27 2	68-8380	Spacer - Stop, Deck	2 17 2
67-0880	Assembly - Tie Rod	4 11 2	68-9950	Spring - Traction	6 15 1
67-0900	Belt - Traction	6 39 1	71-8310	Spring - Prop, Seat	5 1 1
67-0910	Chain	9 10 1	76-1580	Guide - Chain	9 17 2
67-0920	Guide - Belt	8 20 1	76-1620	Decal - Instruction	1 1 1
67-0920	Guide - Belt	6 35 1	76-3790	Lever W.A. - H.O.C.	2 18 2
67-0930	Guide R.H. - Belt, Engine	6 8 1	76-3810	Spacer - Brake, Deck	11 23 1
67-0940	Guide L.H. - Belt, Engine	6 14 1	76-3820	Anchor - Guide, Belt	7 75 2
67-0950	Strap - Tank, Gas	3 6 2	76-3840	Decal - Toro L.H.	5 12 1
67-0962	Guard - Chain	8 22 1	76-3850	Decal - Front	5 14 1
67-0970	Hub - Spindle	11 25 1	76-3860	Decal	7 74 1
67-0990	Axle - Front	4 9 1	76-3870	Decal	1 21 1
67-1030	Cover - Panel, Control	5 42 1	76-3880	Decal - Toro R.H.	5 * 1
67-1070	Body W.A. - Front	1 15 1	76-3890	Bracket - Link, H.O.C.	2 10 1
67-1090	Support W.A. - Seat	5 29 1	76-3910	Decal - H.O.C. & Deck	5 24 1
67-1130	Pedal - Brake & Clutch	1 14 2	76-3940	Lever W.A. - Shift	7 54 1
67-1150	Deflector	11 2 1	76-3970	Spacer - Pivot	7 69 1
67-1160	Assembly - Wire	8 26 1	76-4010	Sprocket	9 18 1
67-1170	Assembly - Wire	8 25 1	76-4070	Decal - Danger	11 42 1
67-1241	Base - Seat	3 2 1	76-4080	Decal	2 36 1
67-1270	Decal - Panel, Control	5 39 1	76-4090	Plate - Engine	6 13 1
67-1330	Lever - Brake, Bellcrank	1 10 1	76-4660	Spring	7 76 1
67-1340	Rod - Brake, Transmission	1 9 1	80-2600	Battery 12V	8 8 1
67-1350	Rod - Front, Brake	1 12 1	80-4330	Prop - Seat	5 32 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3315-292

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
80-4340	Shaft - Spindle	11 27 1	321-3	Screw - Cap Hex. Hd.	13 17 12
80-4360	Shield - Bearing	11 26 1	321-4	Screw - Cap Hex. Hd.	14 6 8
80-4380	Spacer - Spindle	11 31 1	321-4	Screw - Cap Hex. Hd.	9 8 4
80-4420	Pulley - Deck	11 8 1	321-4	Screw - Cap Hex. Hd.	8 9 2
80-4450	Cover - Recycler	14 11 1	321-4	Screw - Cap Hex. Hd.	6 17 2
80-4510	Kicker	14 8 4	321-4	Screw - Cap Hex. Hd.	11 38 1
80-4520	Guide - Belt	11 12 1	321-8	Screw - Cap Hex. Hd.	12 18 1
80-4530	Blade - Recycler	14 5 1	321-8	Screw - Cap Hex. Hd.	7 59 1
80-4540	Ring - Deck	14 7 4	321-15	Screw - Cap Hex. Hd.	7 56 1
80-4550	Rod - Base, Seat	5 33 1	321-30	Screw - Cap Hex. Hd.	12 16 2
80-4560	Spacer	8 11 1	322-2	Screw - Cap Hex. Hd.	13 24 4
80-4580	Tank - Gas	3 7 1	322-2	Screw - Cap Hex. Hd.	12 32 4
82-5690	Retainer - Duct	13 28 1	322-3	Screw - Cap Hex. Hd.	2 1 6
82-5690	Retainer - Duct	12 35 1	322-3	Screw - Cap Hex. Hd.	5 9 4
82-6230	Deck	11 37 1	322-3	Screw - Cap Hex. Hd.	3 14 4
82-6250	Decal - Recycler	14 10 1	322-3	Screw - Cap Hex. Hd.	11 20 6
82-6450	Pulley - Transmission	6 40 1	322-3	Screw - Cap Hex. Hd.	6 34 5
82-6740	Harness - Wire	8 27 1	322-5	Screw - Cap Hex. Hd.	5 7 4
83-4840	Pulley - Engine	8 14 1	322-6	Screw - Cap Hex. Hd.	6 11 1
83-6610	Tab	14 1 1	322-6	Screw - Cap Hex. Hd.	11 15 2
217-80	Rim	4 5 2	322-7	Screw - Cap Hex. Hd.	8 19 3
218-461	Nut - Hex.	5 38 1	322-10	Screw - Cap Hex. Hd.	8 21 1
2210-319	Deflector - Muffler	13 32 1	322-10	Screw - Cap Hex. Hd.	6 37 1
2210-319	Deflector - Muffler	12 40 1	322-12	Screw - Cap Hex. Hd.	8 12 1
231-115	Tire	9 1 2	322-14	Screw - Cap Hex. Hd.	2 23 2
231-116	Tire	4 3 2	322-19	Screw - Cap Hex. Hd.	11 7 1
232-27	Valve Stem w/Cap	4 17 2	322-22	Screw - Cap Hex. Hd.	10 6 4
232-27	Valve Stem w/Cap	9 23 2	323-8	Screw - Cap Hex. Hd.	6 26 1
233-22	Knob	5 25 1	323-10	Screw - Cap Hex. Hd.	2 16 2
233-22	Knob	6 47 1	323-10	Screw - Cap Hex. Hd.	6 24 1
233-40	Grip - Handle	12 12 1	329-4	Screw - Cap Hex. Hd.	7 53 1
233-48	Knob	7 55 1	3217-6	Nut - Hex.	12 25 2
233-59	Knob	5 35 1	3218-1	Nut - Jam	5 16 2
233-68	Knob	12 2 1	3218-2	Nut - Jam	7 72 1
233-68	Knob	13 2 1	3219-6	Nut - Hex.	11 9 1
2412-98	Clamp - Hose	3 11 5	3230-1	Bolt - Carriage	12 19 1
251-210	Bearing	4 16 4	3230-2	Bolt - Carriage	6 12 1
256-90	Bushing	6 5 3	3230-3	Bolt - Carriage	5 3 2
256-155	Bushing	6 28 1	3230-20	Bolt - Carriage	5 11 6
2710-11	Link - Connecting	9 9 1	3230-20	Bolt - Carriage	3 16 6
282-27	Clevis	2 7 1	3231-4	Bolt - Carriage	9 3 2
282-27	Clevis	7 71 1	3231-25	Bolt - Carriage	9 6 4
283-67	Pin - Clevis	6 33 1	3234-5	Screw - Hex. Hd. Flange	12 3 8
288-2	Cap - Pipe	8 29 1	3234-21	Screw	14 4 1
289-34	Nipple - Pipe	8 30 1	3234-21	Screw - Cap Hex. Hd.	11 34 1
2811-17	Elbow - Street	8 31 1	3245-32	Screw - Set	9 14 4
2812-1	Reducer	8 32 1	3253-3	Washer - Lock	7 60 1
2830-9	Chain	13 21 2	3253-4	Washer - Lock	6 36 1
2830-9	Chain	12 28 2	3255-7	Washer - Lock, Int. Tooth	8 1 1
302-5	Fitting - Grease	4 4 4	3255-7	Washer - Lock, Int. Tooth	5 15 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3255-8	Washer - Lock	8 28 4	3296-17	Nut - Lock	12 4 2
3256-1	Washer - Flat	13 27 5	3296-17	Nut - Lock	13 25 2
3256-2	Washer - Flat	12 5 14	3296-25	Nut - Lock	4 14 1
3256-22	Washer - Flat	5 4 1	3296-29	Nut - Lock	1 2 5
3256-22	Washer - Flat	11 33 1	3296-29	Nut - Lock	5 2 11
3256-22	Washer - Flat	7 61 5	3296-29	Nut - Lock	2 4 16
3256-23	Washer - Flat	8 3 4	3296-29	Nut - Lock	12 6 15
3256-23	Washer - Flat	5 6 4	3296-29	Nut - Lock	6 7 8
3256-23	Washer - Flat	6 9 3	3296-29	Nut - Lock	3 12 4
3256-23	Washer - Flat	3 15 8	3296-29	Nut - Lock	9 19 6
3256-23	Washer - Lock	11 6 3	3296-29	Nut - Lock	13 20 4
3256-24	Washer - Flat	9 16 4	3296-29	Nut - Lock	11 24 1
3256-24	Washer - Flat	6 22 3	3296-29	Nut - Lock	8 24 5
3256-24	Washer - Flat	13 26 2	3296-39	Nut - Lock	6 1 2
3256-24	Washer - Flat	12 31 2	3296-39	Nut - Lock	2 12 5
3256-24	Washer - Flat	11 35 1	3296-39	Nut - Lock	9 15 6
3256-25	Washer - Flat	8 15 1	3296-39	Nut - Lock	11 17 2
3256-26	Washer - Flat	4 13 1	3296-39	Nut - Lock	5 20 1
3256-29	Washer - Flat	2 21 2	3296-42	Nut - Lock	14 3 9
3256-55	Washer - Fender	7 48 2	3296-42	Nut - Lock	9 5 5
3257-23	Key	6 41 1	3296-42	Nut - Lock	13 15 12
3269-6	Washer - Backup, Rivet	12 14 14	3296-42	Nut - Lock	6 20 5
3269-15	Rivet - Pop	13 8 18	3296-42	Nut - Lock	5 30 2
3272-6	Pin - Cotter	6 2 1	3296-42	Nut - Lock	11 41 1
3272-6	Pin - Cotter	2 9 2	3296-59	Nut - Lock	6 23 1
3272-12	Pin - Cotter	4 18 2	3296-59	Nut - Lock	11 40 1
3272-23	Pin - Cotter	2 20 2	32103-14	Nut - Wing	14 2 1
3274-4	Pin - Cotter	6 32 1	32103-14	Nut - Wing	8 4 1
3274-4	Pin - Cotter	5 43 1	32103-14	Nut - Wing	13 30 1
3290-250	Pin - Hair, Cotter	2 22 1	32103-14	Nut - Wing	12 38 1
3290-250	Pin - Hair, Cotter	1 16 2	32103-22	Nut - Wing	8 10 2
3290-313	Screw - Pan Head	5 26 2	32104-110	Screw - Cap Hex. Hd.	1 4 4
3290-347	Nut - U-Type	1 5 4	32104-130	Screw - Special	14 9
3290-354	Nut - Double	5 28 1	32120-64	Ring - Retaining	6 38 1
3290-355	Pin - Hair, Cotter	2 14 2	32121-32	Pin - Roll	2 31 1
3290-355	Pin - Hair, Cotter	13 22 2	32121-78	Pin - Roll	2 33 1
3290-355	Pin - Hair, Cotter	12 29 2	32140-64	Screw	13 29 1
3290-378	Tie - Cable	3 13 1	32140-64	Screw	12 37 1
3290-382	Rivet - Pop	12 21 14	32144-14	Screw - Self Tapping	8 18 2
3290-413	Washer - Belleville	5 19 7	32144-14	Screw - Wash. Hd., Tap.	7 51 4
3290-413	Washer - Belleville	2 28 4	32144-26	Screw - Thread Forming	7 73 1
3290-456	Washer - Belleville	7 68 2	32144-42	Screw - Hex. Hd. Tapping	5 41 4
3290-465	Washer - Belleville	11 29 1	32144-70	Screw - Hex. Hd. Tapping	6 44 1
3290-478	Washer - Belleville	7 64 2	32151-48	Ring - Retaining	4 6 2
3290-479	Fastner - Panel	13 4 1	32151-62	Ring - Retaining	7 67 1
3290-479	Fastner - Panel	12 33 1	32152-1	Nut - Lock	10 2 4
3296-4	Nut - Lock	4 8 4	32153-4	Nut - Lock	12 23 1
3296-8	Nut - Lock	11 5 2			

*Not Illustrated