



Precision Z350 HLX Riding Mower

Model No. 81250 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front Frame Assembly	 3	Piston and Connecting Rod Assembly Honda GXV530 EXA2LB	 22
Seat Assembly	 4	Camshaft Assembly Honda GXV530 EXA2LB	 23
Control Assembly	 5	Fan Cover Assembly Honda GXV530 EXA2LB	 24
Hydro and Belt Drive Assembly	 6	Carburetor Assembly Honda GXV530 EXA2LB	 25
LH Hydrostat Assembly Part No. 108-2394	 7	Exhaust Pipe Assembly Honda GXV530 EXA2LB	 26
RH Hydrostat Assembly Part No. 108-2393	 9	Fuel Pump Assembly Honda GXV530 EXA2LB	 27
Engine Assembly	 11	Flywheel Assembly Honda GXV530 EXA2LB	 28
Styling Assembly	 12	Ignition Coil Assembly Honda GXV530 EXA2LB	 29
44in Deck Assembly	 13	Starter Motor Assembly Honda GXV530 EXA2LB	 30
Deflector Assembly No. 108-8591	 14	Control Assembly Honda GXV530 EXA2LB	 31
Decal Assembly	 15	Regulator Rectifier and Sub-Wire Harness Assembly Honda GXV530 EXA2LB	 32
44in Deck Spindle and Drive Belt Assembly	 16	Label Assembly Honda GXV530 EXA2LB	 33
Electrical Assembly	 17	Attachments and Accessories List	 34
Cylinder Assembly Honda GXV530 EXA2LB	 18		
Crankcase Assembly Honda GXV530 EXA2LB	 19		
Oil Pan Assembly Honda GXV530 EXA2LB	 20		
Crankshaft Assembly Honda GXV530 EXA2LB	 21		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain from your local Honda dealer

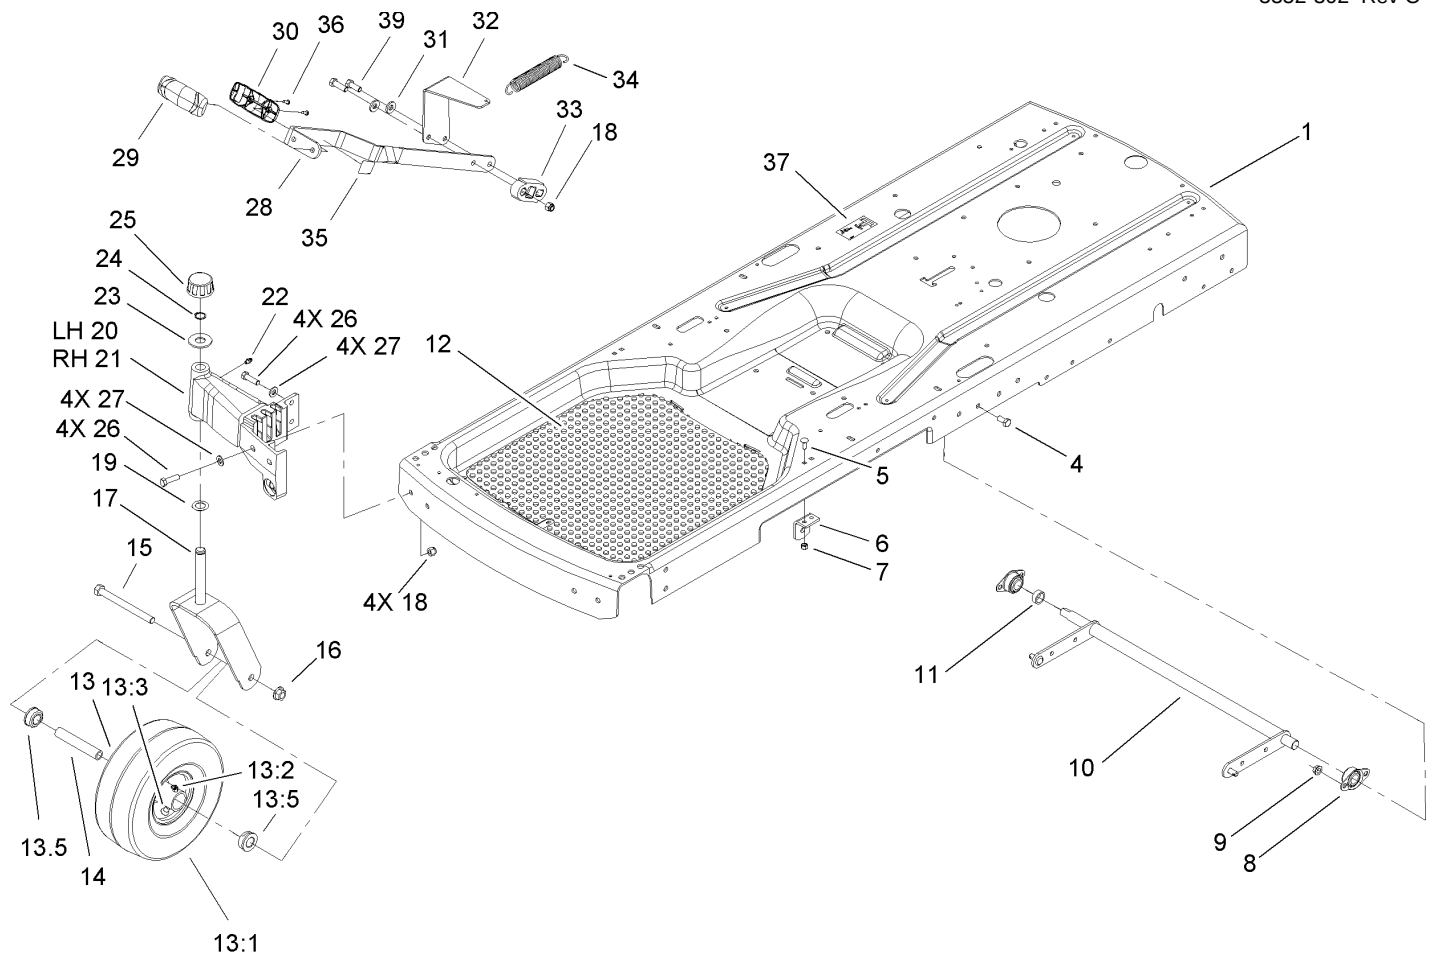

Front Frame Assembly

Ref	Part No.	Qty.	Description
1	108-2326	1	Frame
4	323-4	4	Screw-HH
5	3229-1	4	Screw-CARR
6	105-3439	2	Bracket-Lift
7	3296-42	4	Nut-Lock, NI
8	1-633102	2	Bearing-Flange, Side
9	3290-357	4	Nut-HHF, Whiz
10	107-1731-03	1	Lift Arm ASM
11	106-2222	1	Spacer
12	108-6161	1	Footmat-Frame
13	108-8502	2	Caster Wheel ASM
13:1	108-8503	1	Tire-Smooth
13:2	302-5	1	Fitting-Grease
13:3	232-27	1	Stem-Valve
13:5	114-1640	2	Bushing-Flange
13:99	93-4244	1	Tube-Inner (W/Valve)
14	104-3667	2	Spanner-Wheel
15	325-22	2	Screw-HH
16	32128-23	2	Nut-HF
17	107-9119-03	2	Castor Fork ASM
18	3296-39	9	Nut-Lock, NI
19	3-6498	2	Washer-Thrust
20	105-6986-02	1	Castor-LH
21	105-6985-02	1	Castor-RH


Ref	Part No.	Qty.	Description
22	302-5	2	Fitting-Grease
23	28-2480	2	Washer
24	32151-103	2	Ring-Snap
25	61-9780	2	Cap-Hub
26	323-18	8	Screw-HH
27	3256-24	8	Washer-Flat
28	108-2317-03	1	Lever-Lift
29	108-2318	1	Handle-Top
30	108-2319	1	Handle-Bottom
31	98-5975	2	Washer-Belleville
32	107-2516-03	1	Mount-Spring, Front
33	106-2211	1	Block-Lift
34	106-2177	1	Spring-Extension
35	106-8743	1	Decal
36	94-6961	2	Screw
37	108-6109	1	Decal-Transport, Ce
39	323-7	2	Screw-HH

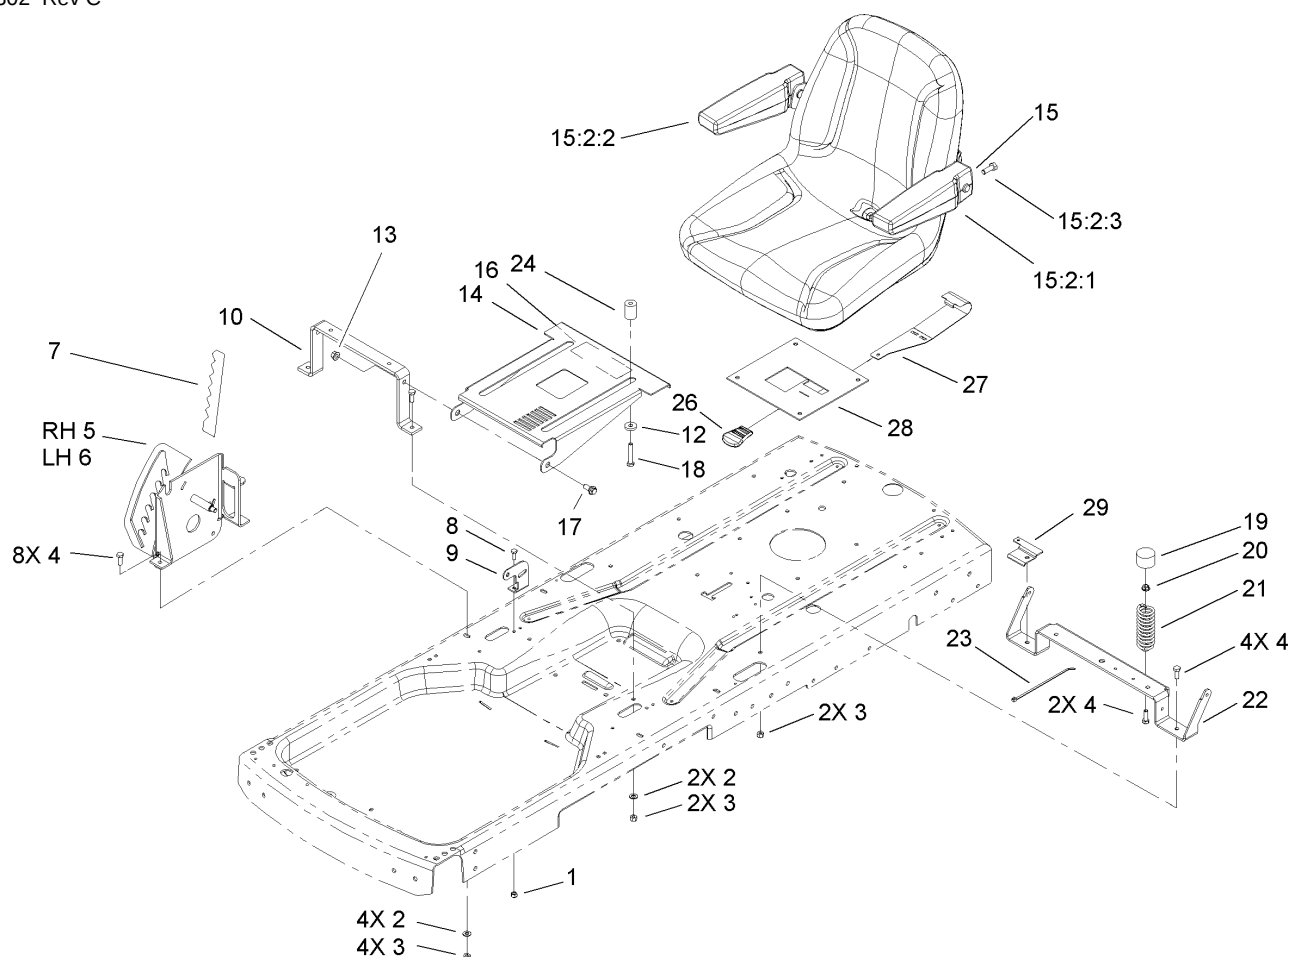

Seat Assembly

Ref	Part No.	Qty.	Description
1	3296-42	4	Nut-Lock, NI
2	3256-23	6	Washer-Flat
3	3296-29	12	Nut-Lock, NI
4	322-4	14	Screw-HH
5	106-2158-03	1	RH Plate ASM
6	106-2159-03	1	LH Plate ASM
7	108-2392	1	Decal-HOC
8	321-4	4	Screw-HH
9	106-2180	2	Bracket-Bellcrank
10	105-6954-03	1	Brace-Seat, Front
12	108-2353	4	Spacer
13	32128-21	2	Nut-HF
14	108-2303-03	1	Bracket-Seat
15	106-6446	1	Seat ASM
15:2:1	108-6177	1	LH Armrest ASM
15:2:2	108-6178	1	RH Armrest ASM
15:2:3	108-6179	6	Screw-HSBH
16	106-8716	1	Decal-Services
17	94-7582	2	Bolt-Shoulder
18	322-11	4	Screw-HH
19	701178	2	Cap-Protector
20	32128-25	2	Nut-HF
21	92-7054	2	Spring-Compression
22	108-2358-03	1	Brace-Seat, Rear


Ref	Part No.	Qty.	Description
23	614249	2	Strap-Tie
24	108-2301	4	Spacer
26	107-1904	1	Knob-Lever, HOC
27	108-2302	1	Latch-Seat
28	108-7175-03	1	Mount-Latch, Seat
29	108-8589-03	1	Bracket

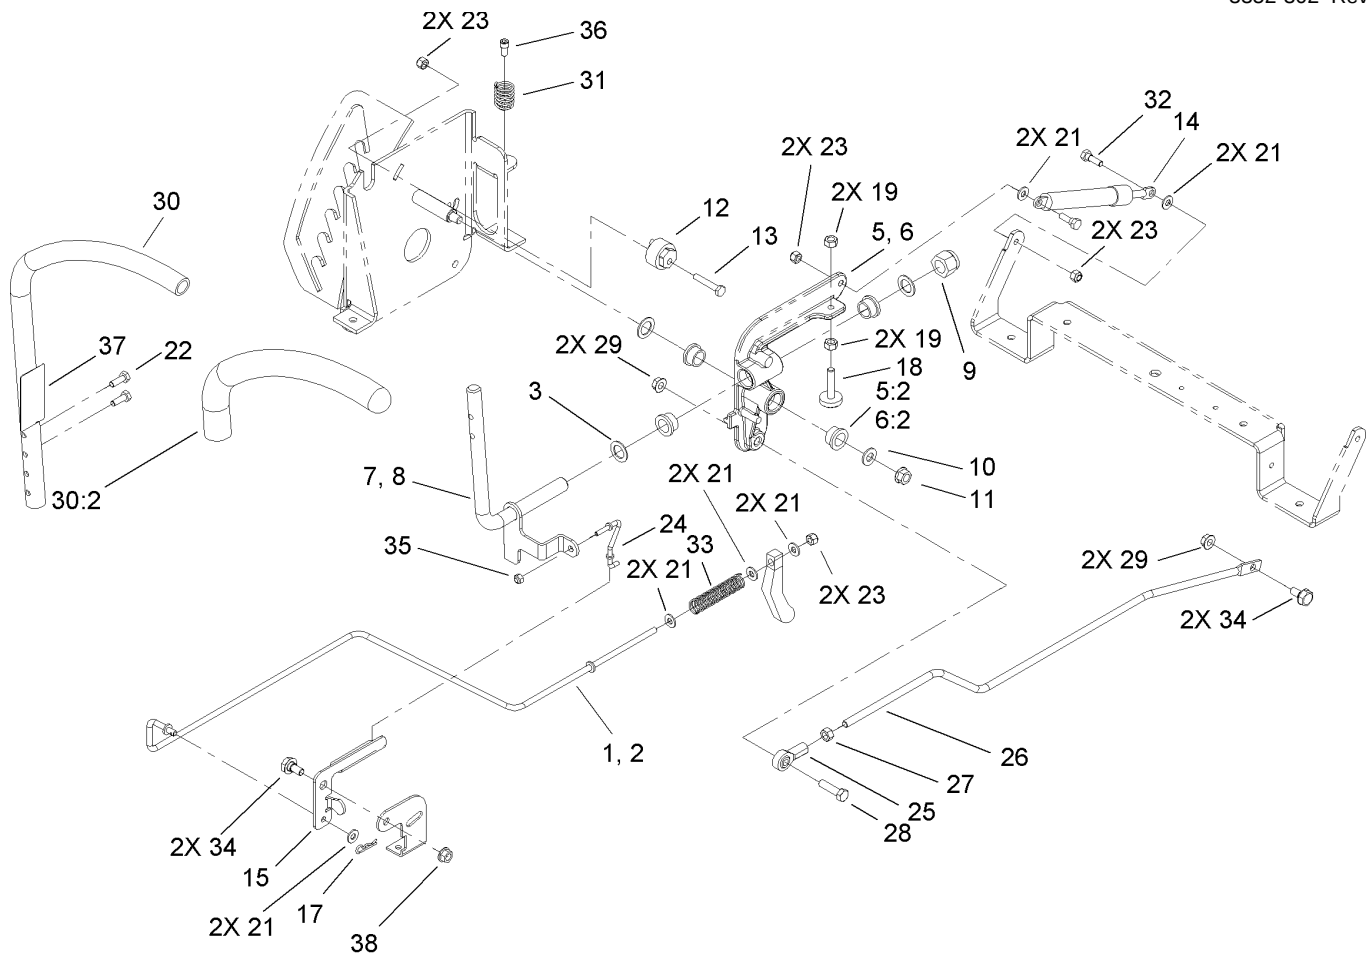

Control Assembly

Ref	Part No.	Qty.	Description
1	105-7045	1	Rod-Brake, LH
2	105-7044	1	Rod-Brake, RH
3	105-3481	6	Washer-Thrust
①5	107-4909	1	LH Activator Arm ASM
①5:2	105-3455	4	Bushing
6	107-4910	1	RH Activator Arm ASM
6:2	105-3455	4	Bushing
①7	105-3488	1	LH Pivot Shaft ASM
8	105-3487	1	RH Pivot Shaft ASM
9	3296-53	2	Nut-Lock, NI
10	3256-24	2	Washer-Flat
11	3296-59	2	Nut-Lock, NI
12	107-4874	2	Eccentric
13	321-9	2	Screw-HH
14	103-2913	2	Damper-Control, Motion
15	106-2181	2	Bellcrank
17	1-806003	2	Pin-Hair
18	105-3486	2	Stop-Adjustment
19	3217-6	4	Nut-Hex
21	3256-22	12	Washer-Flat
22	321-4	4	Screw-HH
23	3296-42	8	Nut-Lock, NI
24	106-2179	2	Link-Brake
25	1-543017	2	Balljoint-RH


Ref	Part No.	Qty.	Description
26	105-7048	2	Rod-Hydro
27	3219-2	2	Nut-Hex
28	322-6	2	Screw-HH
29	32128-20	4	Nut-HF
30	108-6117	2	Handle ASM
30:2	108-6187	1	Grip
31	105-3469	2	Spring-Compression
32	106-2214	4	Bolt-Shoulder
33	105-3465	2	Spring-Compression
34	37-8771	4	Bolt-Shoulder
35	3296-2	2	Nut-Lock
36	3274-52	2	Screw-HSH
37	106-8742	2	Decal
38	32128-25	2	Nut-HF

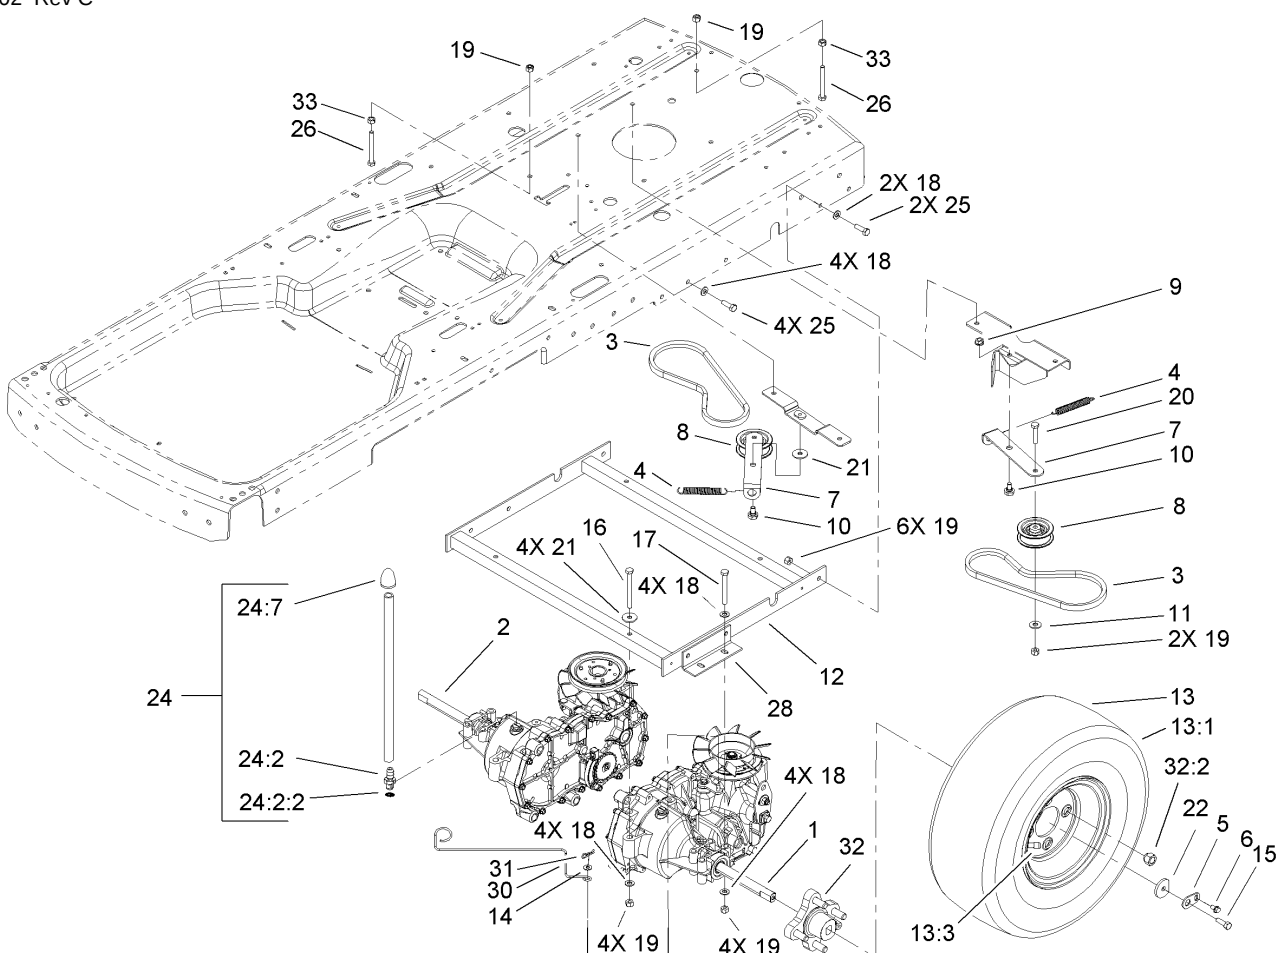

Hydro and Belt Drive Assembly

Ref	Part No.	Qty.	Description
1	108-2394	1	Transaxle-Hydro, LH
2	108-2393	1	Transaxle-Hydro, RH
3	106-2174	2	V-Belt
4	95-3805	2	Spring
5	105-3438	2	Tab-Locking
6	3234-13	2	Screw-HHF
7	105-7047	2	Arm-Idler
8	106-2176	2	Pulley-Idler
9	32128-25	1	Nut-HF
10	37-8770	2	Bolt-Shoulder
11	3256-3	2	Washer-Flat
12	107-4878-03	1	Hydro Mount ASM
13	108-6129	2	Wheel And Tire ASM
13:1	105-3468	1	Tire
13:3	232-27	1	Stem-Valve
13:99	232-37	1	Tube
14	3256-1	2	Washer-Flat
15	3210-5	2	Screw-HH
16	322-20	4	Screw-HH
17	322-13	4	Screw-HH
18	3256-23	18	Washer-Flat
19	3296-29	18	Nut-Lock, NI
20	322-7	2	Screw-HH
21	5-4460	5	Washer-Pivot

Ref	Part No.	Qty.	Description
22	106-7001	2	Washer-Wheel
24	106-7002	2	Vent Hose ASM
24:2	93-3818	1	Fitting ASM
24:2:2	93-3816	1	O-Ring
24:7	107-1701	1	Cap Vent ASM
25	322-5	6	Screw-HH
26	322-13	2	Screw-HH
28	105-7039-03	2	Support-Hydro
30	107-4875	2	Rod-Bypass
31	1-806003	2	Pin-Hair
32	108-9533	1	Hub ASM
32:2	242-50	4	Nut-Lug
33	3217-6	2	Nut-Hex

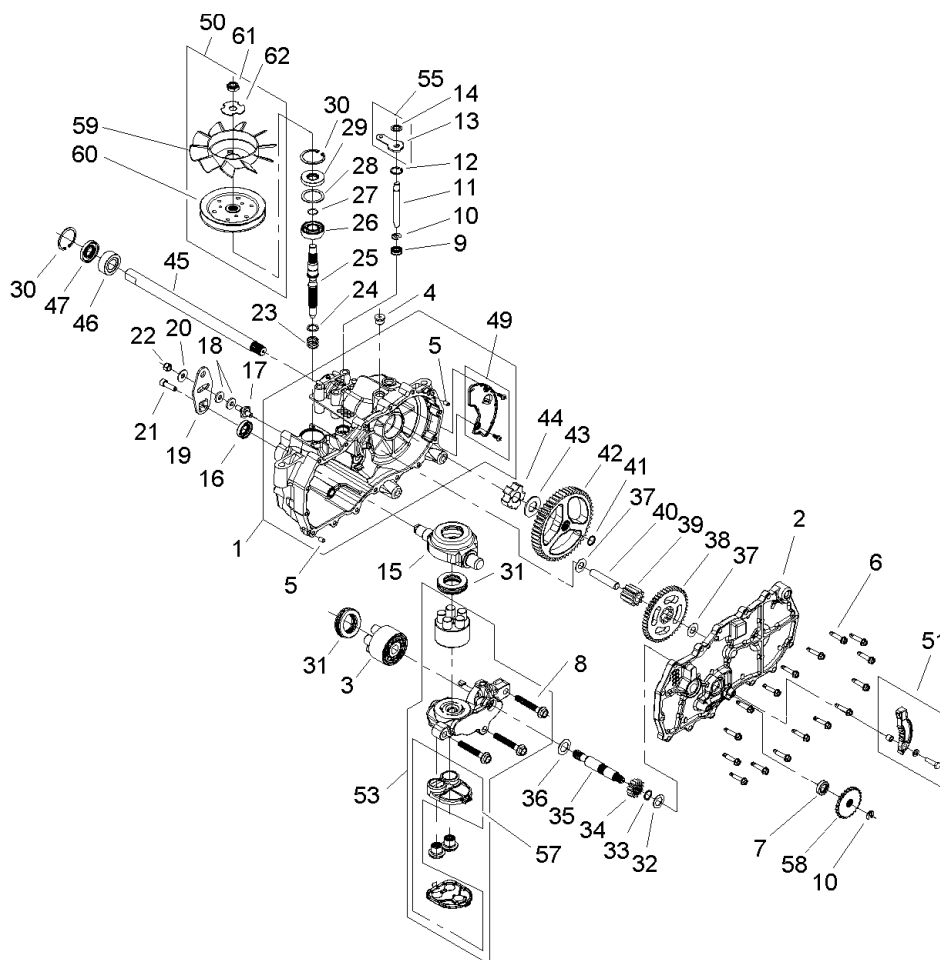


LH Hydrostat Assembly Part No. 108-2394

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-8695	1	RH Main Housing ASM	25	104-5306	1	Shaft-Input
2	106-8696	1	RH Side ASM	26	104-5311	1	Bearing-Ball
3	103-2666	1	Cylinder Block Kit	27	104-5307	1	Ring-Retaining
4	104-2189	1	Plug-Thread, Straight	28	104-5308	1	Spacer
5	104-2170	2	Pin	29	104-5310	1	Seal-Lip
6	104-5305	16	Screw-HHF	30	104-5309	2	Ring-Retaining
7	104-5347	1	Seal-Oil	31	94-6922	2	Bearing-Thrust
8	94-6926	3	Bolt	32	104-5339	1	Washer-Flat
9	106-8676	1	Seal-Lip	33	104-5340	1	Ring-Retaining
10	106-8677	2	Ring-Retaining, EXT	34	104-5316	1	Gear-Pinnion, 13T
11	106-8678	1	Rod-Bypass	35	106-8683	1	Shaft-Motor
12	106-8679	1	Ring-Retaining, Int	36	104-5360	1	Washer-Shaft, Motor
13	107-2490	1	Arm-Bypass	37	94-1933	2	Washer
14	106-8681	1	Ring-Retaining, EXT	38	104-5317	1	Gear
15	104-5304	1	Swashplate-Trunnion	39	104-5318	1	Gear-Jackshaft, 10T
16	104-5313	1	Seal-Lip	40	104-5329	1	Pin-Jackshaft
17	104-2116	1	Stud	41	104-5328	1	Ring-Retaining, Spiral
18	105-1873	2	Puck-Friction	42	106-8684	1	Gear-Bull, 52T
19	106-8747	1	Arm-Control	43	94-1943	1	Washer
20	5-4460	1	Washer-Pivot	44	104-5320	1	Bearing-Sleeve
21	107-2488	1	Screw	45	106-8685	1	Axle
22	105-1872	1	Nut	46	104-5321	1	Bearing-Sleeve, Outboard
23	94-1936	1	Spring-Block	47	104-5322	1	Seal-Lip
24	94-1937	1	Washer-Block, Thrust	48	106-8686	1	Seal Kit



LH Hydrostat Assembly Part No. 108-2394 (continued)


Ref	Part No.	Qty.	Description				
49	106-8697	1	RH Expansion Plate Kit				
50	106-8698	1	Fan Pulley Kit				
51	106-8688	1	Brake Arm Kit				
53	108-6190	1	RH 7-Piston Center Section Kit				
54	104-2147	1	Sealant				
55	107-2489	1	Bypass Arm Kit				
57	106-8693	1	Filter Kit				
58	106-8694	1	Disc-Brake, Cog				
59	110-8566	1	Fan-6 Inch, 10 Blade				
60	104-1754	1	Pulley				
61	105-1875	1	Nut-Lock				
62	107-9122	3	Washer-Slotted				

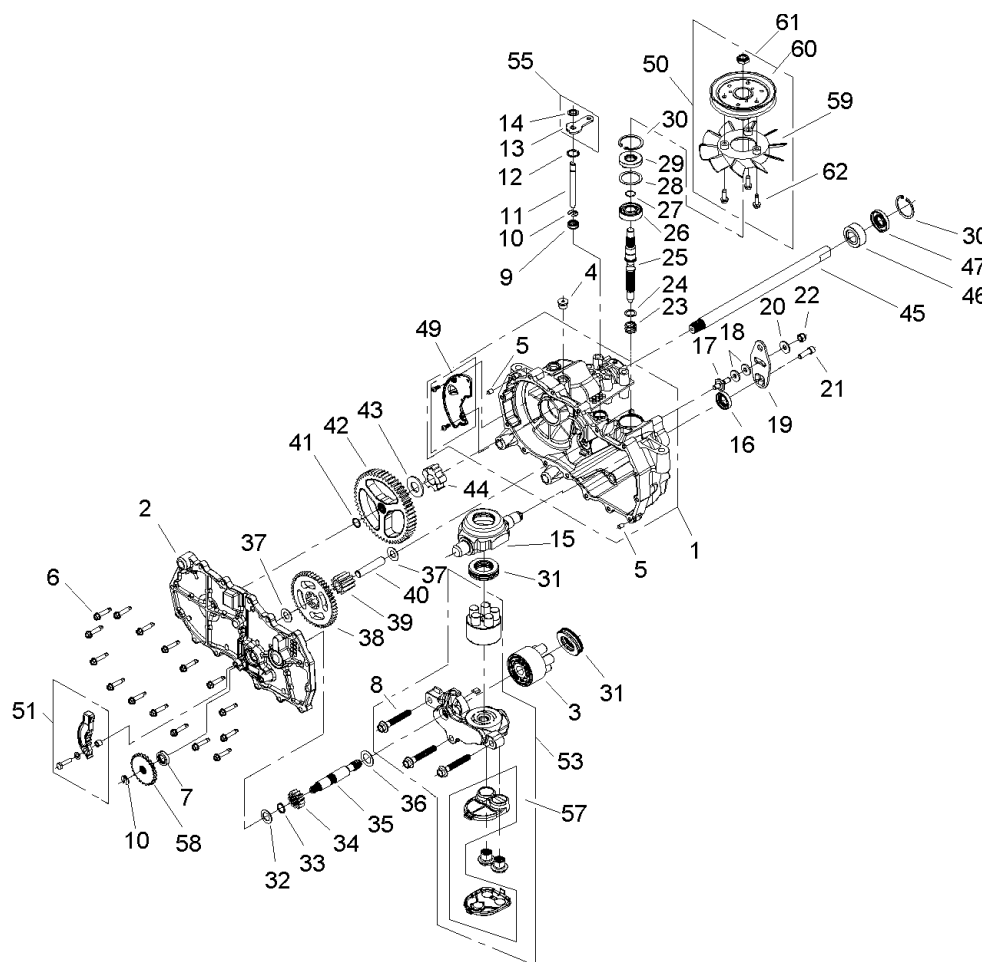

RH Hydrostat Assembly Part No. 108-2393


Ref	Part No.	Qty.	Description
1	106-8674	1	LH Main Housing ASM
2	106-8675	1	LH Side ASM
3	103-2666	1	Cylinder Block Kit
4	104-2189	1	Plug-Thread, Straight
5	104-2170	2	Pin
6	104-5305	16	Screw-HHF
7	104-5347	1	Seal-Oil
8	94-6926	3	Bolt
9	106-8676	1	Seal-Lip
10	106-8677	2	Ring-Retaining, EXT
11	106-8678	1	Rod-Bypass
12	106-8679	1	Ring-Retaining, Int
13	107-2490	1	Arm-Bypass
14	106-8681	1	Ring-Retaining, EXT
15	104-5304	1	Swashplate-Trunnion
16	104-5313	1	Seal-Lip
17	104-2116	1	Stud
18	105-1873	2	Puck-Friction
19	106-8747	1	Arm-Control
20	5-4460	1	Washer-Pivot
21	107-2488	1	Screw
22	105-1872	1	Nut
23	94-1936	1	Spring-Block
24	94-1937	1	Washer-Block, Thrust

Ref	Part No.	Qty.	Description
25	104-5306	1	Shaft-Input
26	104-5311	1	Bearing-Ball
27	104-5307	1	Ring-Retaining
28	104-5308	1	Spacer
29	104-5310	1	Seal-Lip
30	104-5309	2	Ring-Retaining
31	94-6922	2	Bearing-Thrust
32	104-5339	1	Washer-Flat
33	104-5340	1	Ring-Retaining
34	104-5316	1	Gear-Pinnion, 13T
35	106-8683	1	Shaft-Motor
36	104-5360	1	Washer-Shaft, Motor
37	94-1933	2	Washer
38	104-5317	1	Gear
39	104-5318	1	Gear-Jackshaft, 10T
40	104-5329	1	Pin-Jackshaft
41	104-5328	1	Ring-Retaining, Spiral
42	106-8684	1	Gear-Bull, 52T
43	94-1943	1	Washer
44	104-5320	1	Bearing-Sleeve
45	106-8685	1	Axle
46	104-5321	1	Bearing-Sleeve, Outboard
47	104-5322	1	Seal-Lip
48	106-8686	1	Seal Kit

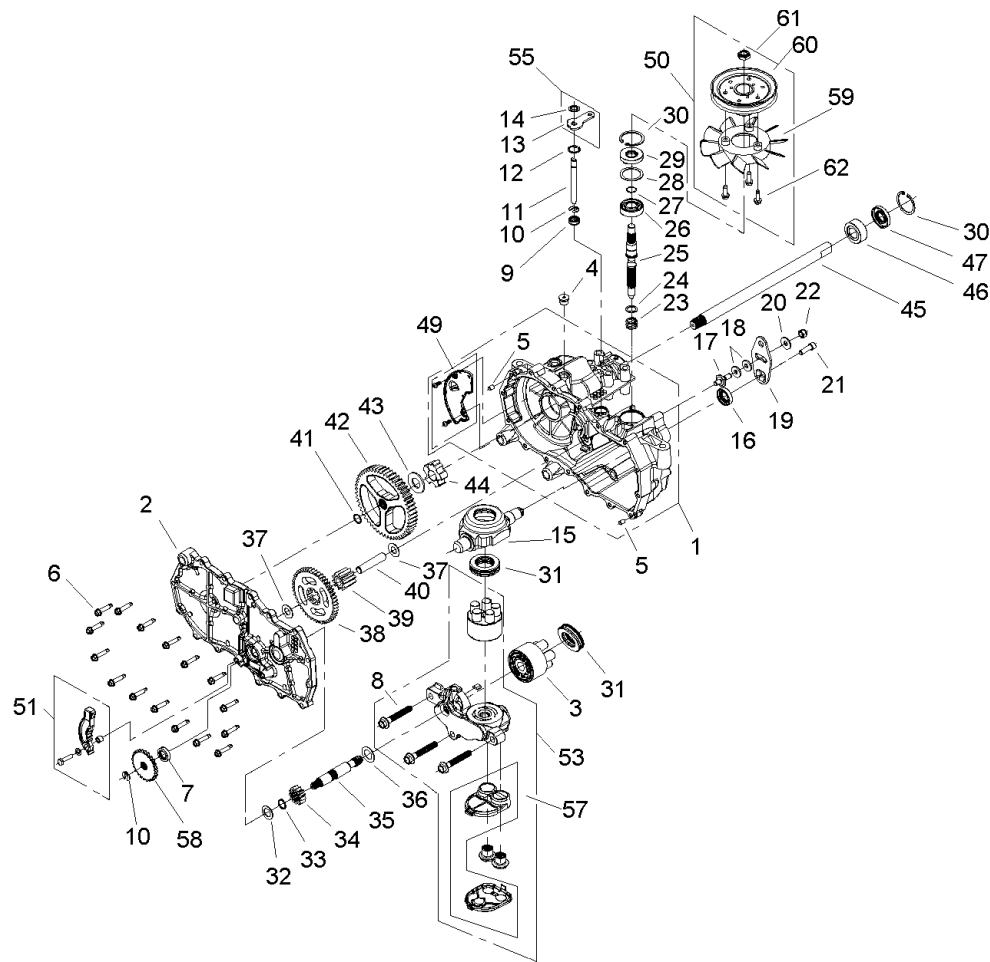

RH Hydrostat Assembly Part No. 108-2393 (continued)


Ref	Part No.	Qty.	Description				
49	106-8687	1	LH Expansion Plate Kit				
50	105-1928	1	Fan Pulley Kit				
51	106-8688	1	Brake Arm Kit				
53	108-6189	1	LH 7-Piston Center Section Kit				
❶54	104-2147	1	Sealant				
55	107-2489	1	Bypass Arm Kit				
57	106-8693	1	Filter Kit				
58	106-8694	1	Disc-Brake, Cog				
59	105-1927	1	Fan				
60	105-1896	1	Pulley				
61	105-1875	1	Nut-Lock				
62	104-2120	3	Screw				

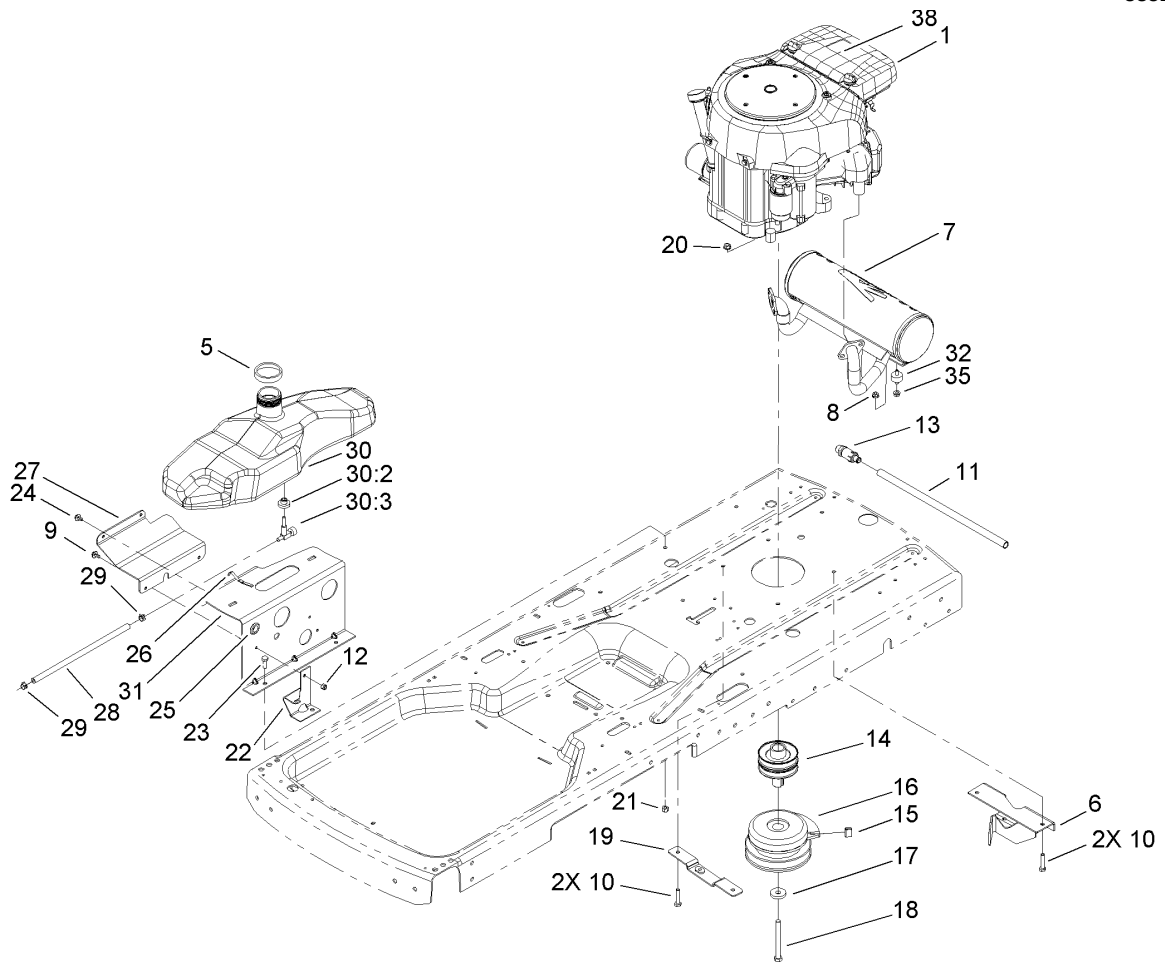

Engine Assembly

Ref	Part No.	Qty.	Description
1		1	Engine-Honda, Gxv 530 Exa2Lb
5	55-9310	1	Seal-Foam
6	107-4873	1	Bracket-Pivot
7	108-2312	1	Muffler
8	32128-33	2	Nut-HF
9	32144-44	1	Screw-HWH
10	322-9	4	Screw-HH
11	106-7022	1	Tube-Drain, Oil
12	3296-42	1	Nut-Lock, NI
13	92-6877	1	Valve-Drain, Oil
14	105-3472	1	Pulley-Engine
15	98-5023	1	Bumper
16	108-9511	1	Clutch-PTO, Electric
17	112843	1	Washer
18	3212-18	1	Screw-HH
19	106-2156	1	Plate-Mount, Idler
20	32128-25	4	Nut-HF
21	3296-29	2	Nut-Lock, NI
22	107-2506-03	1	Mount-Spring
23	322-4	2	Screw-HH
24	46-8560	3	Screw-HHF
25	237-124	1	Grommet
26	609830	2	Spring
27	108-2315-03	1	Plate-Support


Ref	Part No.	Qty.	Description
28	80-7360	1	Hose-Fuel
29	2412-98	2	Clamp
30	107-9172	1	Fuel Tank ASM
30:2	46-6560	1	Bushing
30:3	104048	1	Valve-Fuel
31	108-2314-03	1	Plate-Tank
32	108-6183	2	Isolator-Rubber
35	32128-32	2	Nut-HHF
38	108-9557	1	Decal-Engine

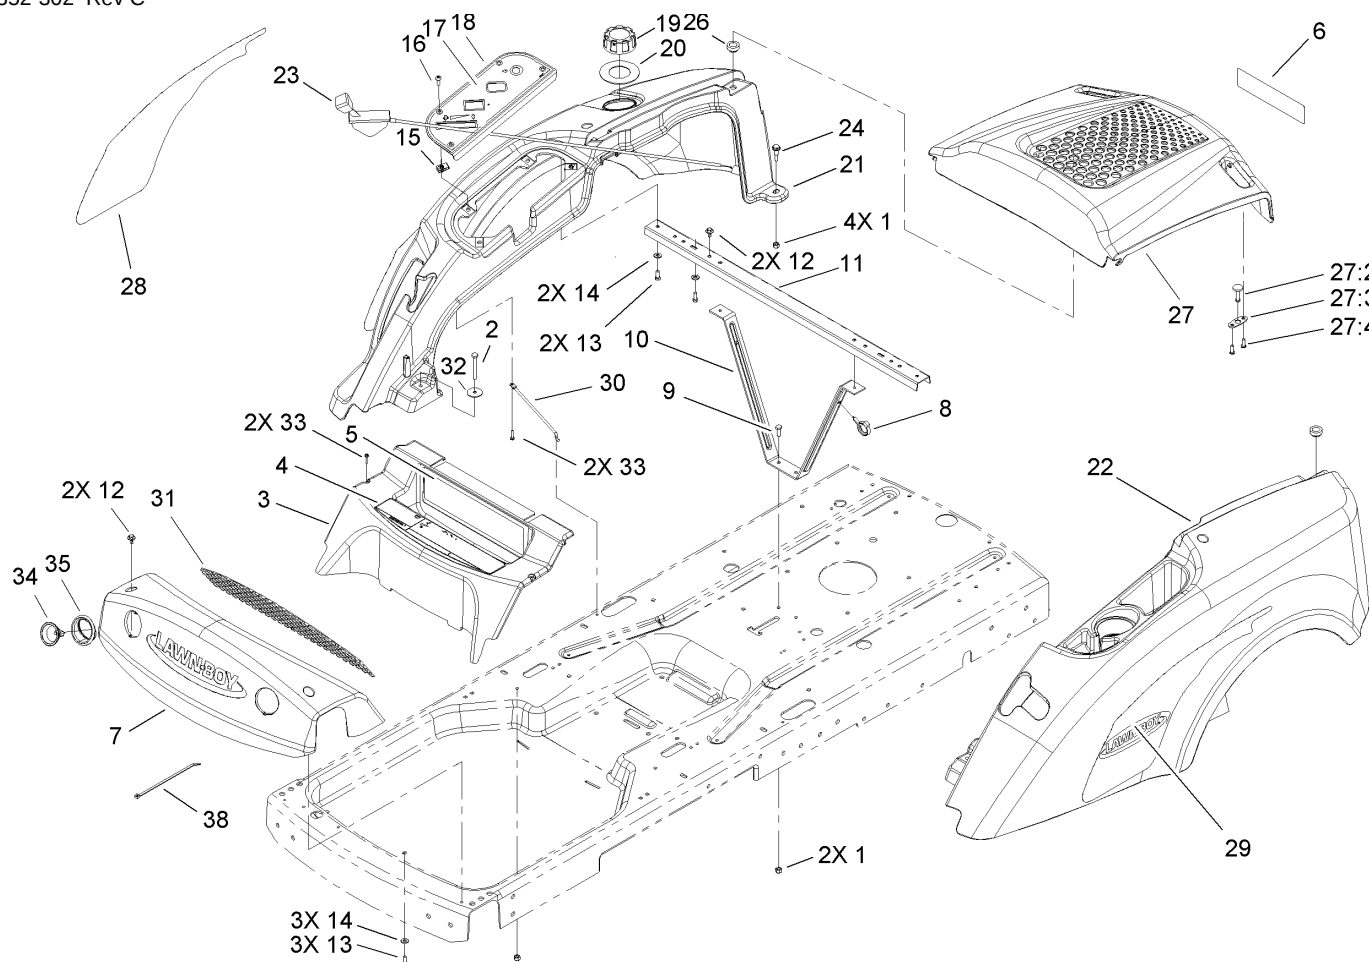

Styling Assembly

Ref	Part No.	Qty.	Description
1	3296-42	6	Nut-Lock, NI
2	321-18	2	Screw-HH
3	108-2316	1	Panel-Kick
4	108-9575	1	Decal-Danger
5	108-6148	1	Decal
6	108-6141	1	Decal
7	108-2328	1	Footrest
8	105-1853	2	Clamp-Hose
9	321-4	2	Screw-HH
10	107-9173-03	1	Brace-Support
11	108-2313-03	1	Channel-Cross
12	46-8560	4	Screw-HHF
13	46-8090	5	Screw-Plastite
14	3256-22	5	Washer-Flat
15	107069	4	Clip
16	3258-166	4	Screw-PRH
17	108-2364	1	Decal
18	107-9174-03	1	Panel-Control
19	93-7198	1	Gas Cap ASM
20	108-6150	1	Washer-Seal, Rubber
21	107-9168	1	Cover-Side, RH
22	107-9169	1	Cover-Side, LH
23	104-8081	1	Cable-Throttle
24	108-6182	2	Screw-Shoulder


Ref	Part No.	Qty.	Description
26	108-2305	2	Grommet
27	108-2334	1	Hood Cover ASM
27:2	107-9198	2	Pin-Hood
27:3	107-9199	2	Plate
27:4	94-6961	4	Screw
28	108-6142	1	Decal
29	108-6143	1	Decal
30	108-2391	2	Rod-Support
31	108-6162	1	Footmat-Footrest
32	3256-58	2	Washer-Flat
33	94-4496	4	Screw-PPH
34	107-9179	2	Light-Halogen
35	107-9178	2	Bezel-Rubber
36	108-6159	1	Harness-Headlights, Footrest
38	250-4	2	Tie-Cable

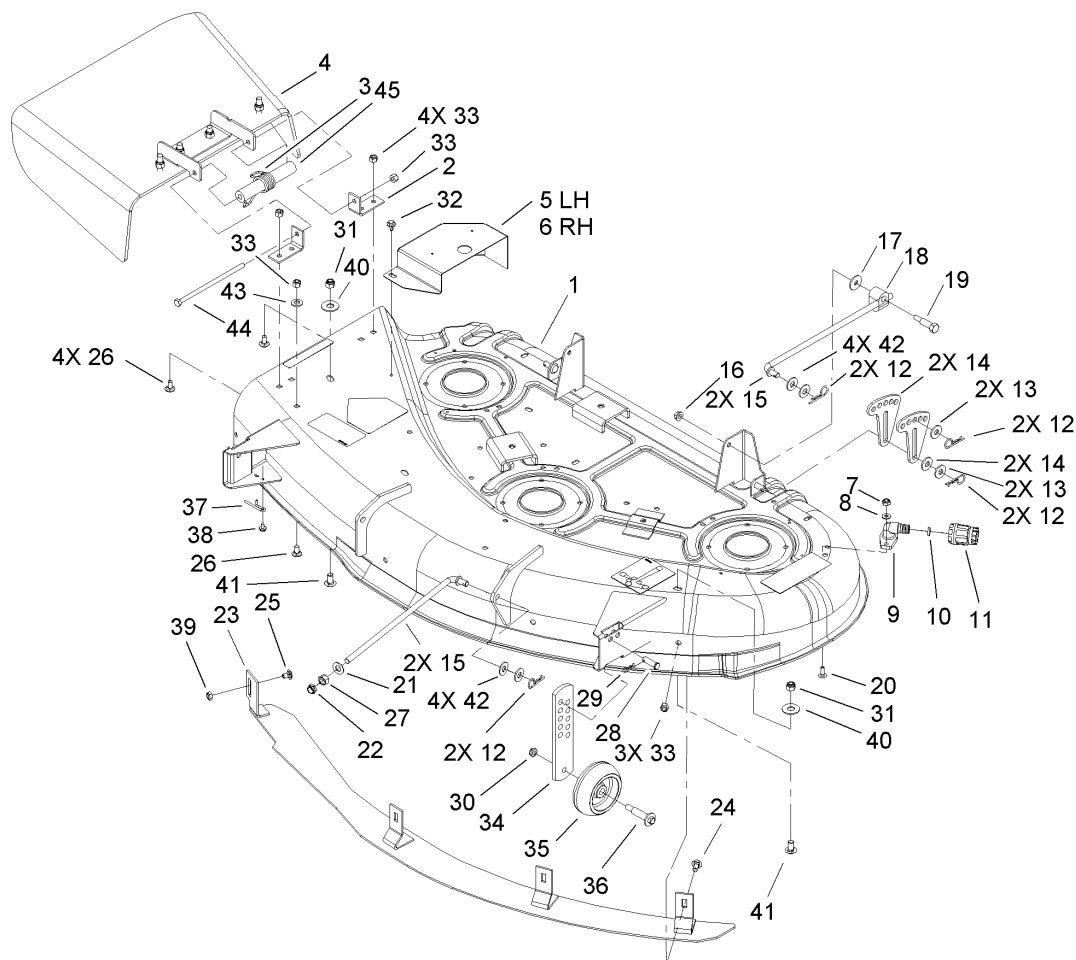

44in Deck Assembly


Ref	Part No.	Qty.	Description
1	108-6114	1	44 Inch Deck ASM
2	108-6196-03	2	Bracket-Pivot, Deflector
3	108-4052	1	Spring-Torsion
4	108-8591	1	Deflector ASM
5	104-3646-03	1	Cover-Belt, LH
6	104-3645-03	1	Cover-Belt, RH
7	3296-16	2	Nut-Lock, NI
8	3256-1	2	Washer-Flat
9	95-2747	1	Fitting-Washout
10	46-6290	1	O-Ring
11	95-3270	1	Connector-Hose
12	9335054	8	Pin-Hair
13	80-6990	6	Washer-Hardened
14	88-5570-03	4	Link-Adjusting, HOC
15	105-3437	4	Rod-Hanger
16	32128-25	2	Nut-HF
17	5-4460	2	Washer-Pivot
18	88-4230	2	Trunnion-HOC
19	7-0030	2	Bolt-Shoulder
20	3229-1	2	Screw-CARR
21	3256-25	2	Washer-Flat
22	3296-38	2	Nut-Lock, NI
23	93-9950-03	1	Baffle
24	3230-1	3	Bolt-CARR

Ref	Part No.	Qty.	Description
25	3230-19	1	Screw-CARR
26	3230-18	5	Screw-CARR
27	3219-4	2	Nut-Hex
28	283-2	2	Pin-Clevis
29	3290-307	2	Pin-Hair
30	3296-59	2	Nut-Lock, NI
31	3296-39	2	Nut-Lock, NI
32	46-8560	4	Screw-HHF
33	3296-29	9	Nut-Lock, NI
34	93-8010	2	Plate-Gage, Wheel
35	701756	2	Wheel-Gage
36	56-6591	2	Bolt-Wheel
37	94-1981	2	Spring-Gage, Wheel
38	32104-76	2	Screw
39	3296-47	1	Nut-Lock, NI
40	3256-5	2	Washer-Flat
41	3231-21	2	Screw-CARR
42	3256-4	8	Washer-Flat
43	3256-24	1	Washer-Flat
44	108-8539	1	Bolt-HH
45	108-7159	1	Spacer-Deflector

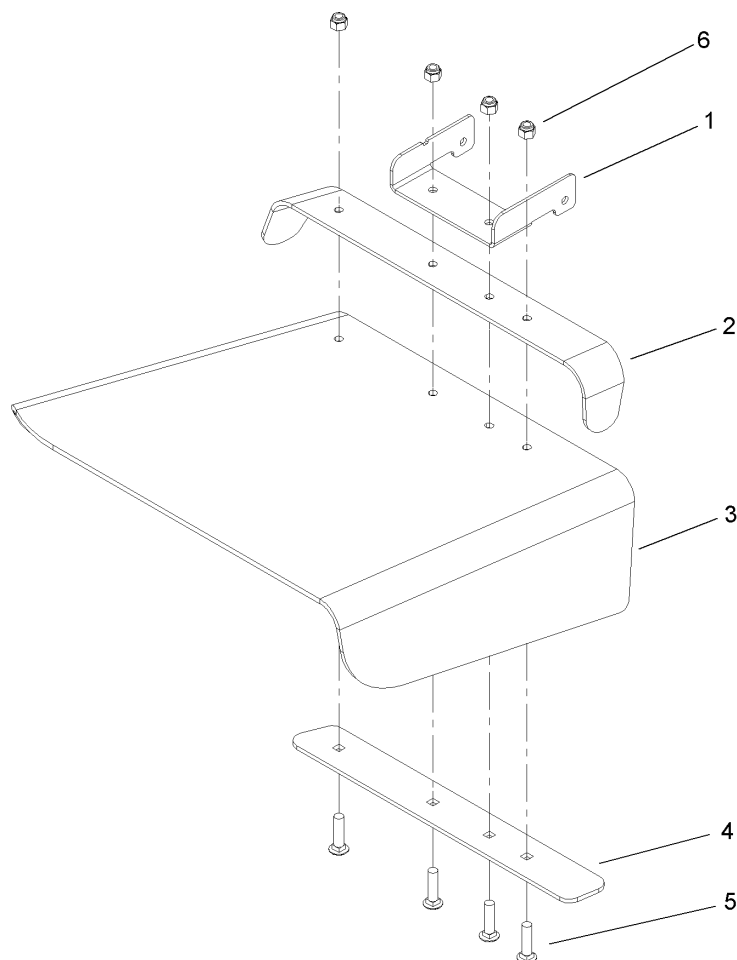


Deflector Assembly No. 108-8591

Ref	Part No.	Qty.	Description
1	108-6184-03	1	Hinge-Deflector
2	108-6172-03	1	Support-Discharge
3	108-8590	1	Deflector-Rubber
4	108-6174-03	1	Strap-Discharge
5	3230-3	4	Screw-CARR
6	3296-29	4	Nut-Lock, NI

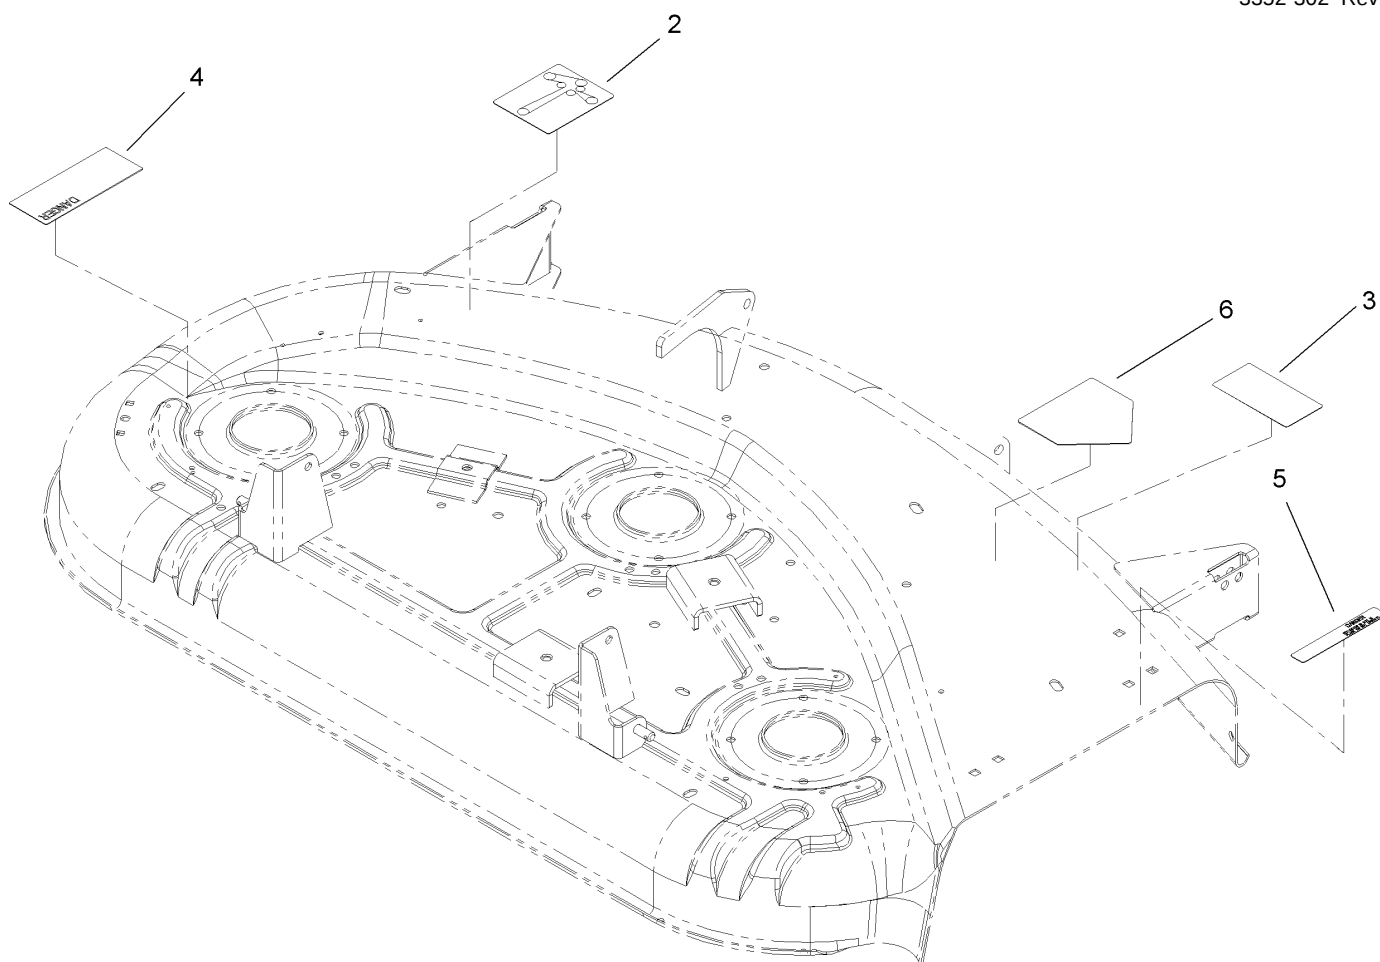


Decal Assembly

Ref	Part No.	Qty.	Description
2	99-3943	1	Decal-Routing, Belt
3	107-2486	1	Decal-Wheel Adjustment
4	92-7108	1	Decal-Danger
5	92-7109	1	Decal-Caution
6	93-1122	1	Decal-Danger

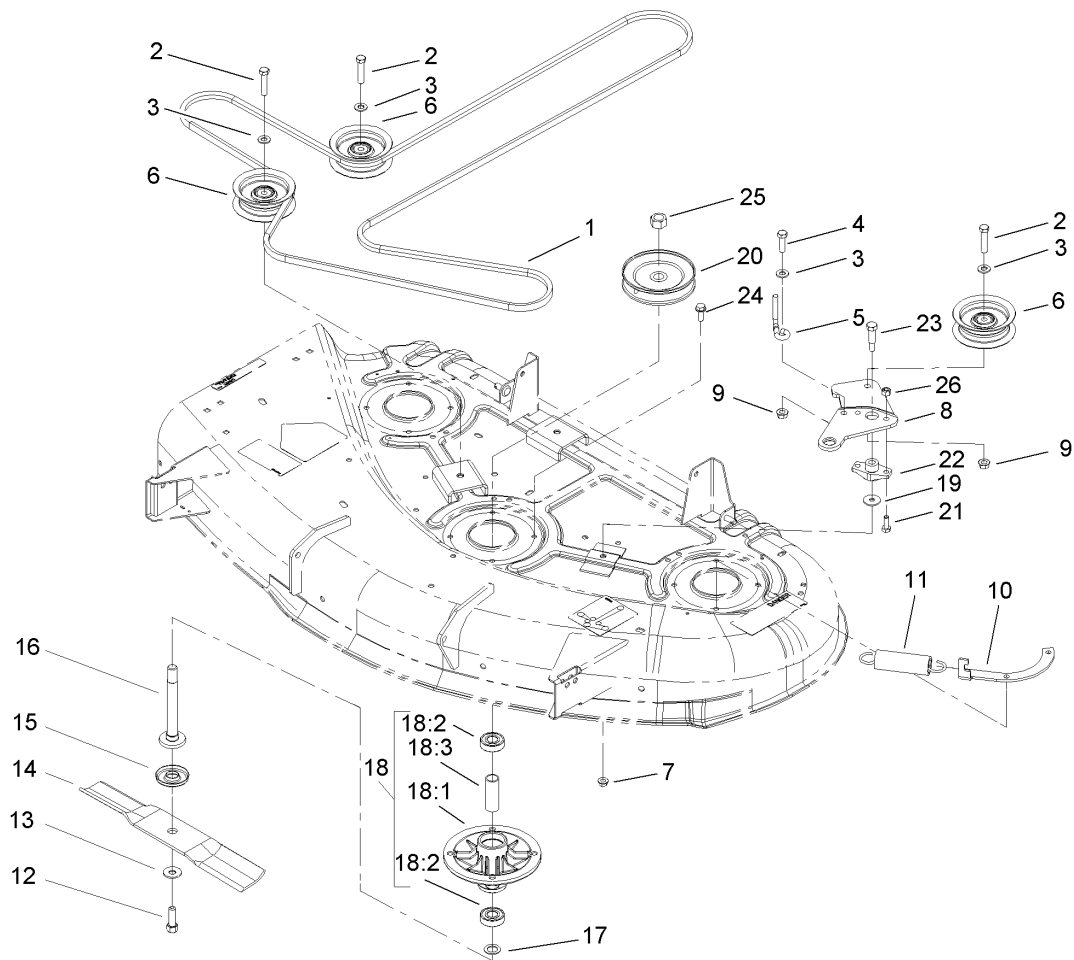


44in Deck Spindle and Drive Belt Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	107-1735	1	Belt-V	22	88-4980	1	Bushing-Arm, Idler
2	323-9	3	Screw-HH	23	7-0030	1	Bolt-Shoulder
3	3256-24	4	Washer-Flat	24	32144-41	12	Screw-Taptite
4	323-7	1	Screw-HH	25	3219-6	3	Nut-Hex
5	107-7307	1	Guide-Idler, Belt	26	3296-29	2	Nut-Lock, NI
6	106-2175	3	Pulley-Idler, Flat				
7	32128-25	1	Nut-HF				
8	107-2467-03	1	Arm-Idler				
9	32128-21	2	Nut-HF				
10	107-2513	1	Bracket-Spring				
11	1-603414	1	Spring-Extension				
12	26-0671	3	Screw-Blade				
13	3290-465	3	Washer-Belleville				
14	54-0010-03	3	Blade				
15	80-4360	3	Shield-Bearing				
16	80-4341	3	Shaft				
17	80-4380	3	Spacer				
18		3	Spindle ASM				
18:1	88-4510	1	Housing-Spindle				
18:2	100-1048	2	Bearing-Ball				
18:3	62-3661	1	Spacer-Bearing				
19	5-4460	1	Washer-Pivot				
20	107-1724	3	Pulley ASM				
21	322-4	2	Screw-HH				

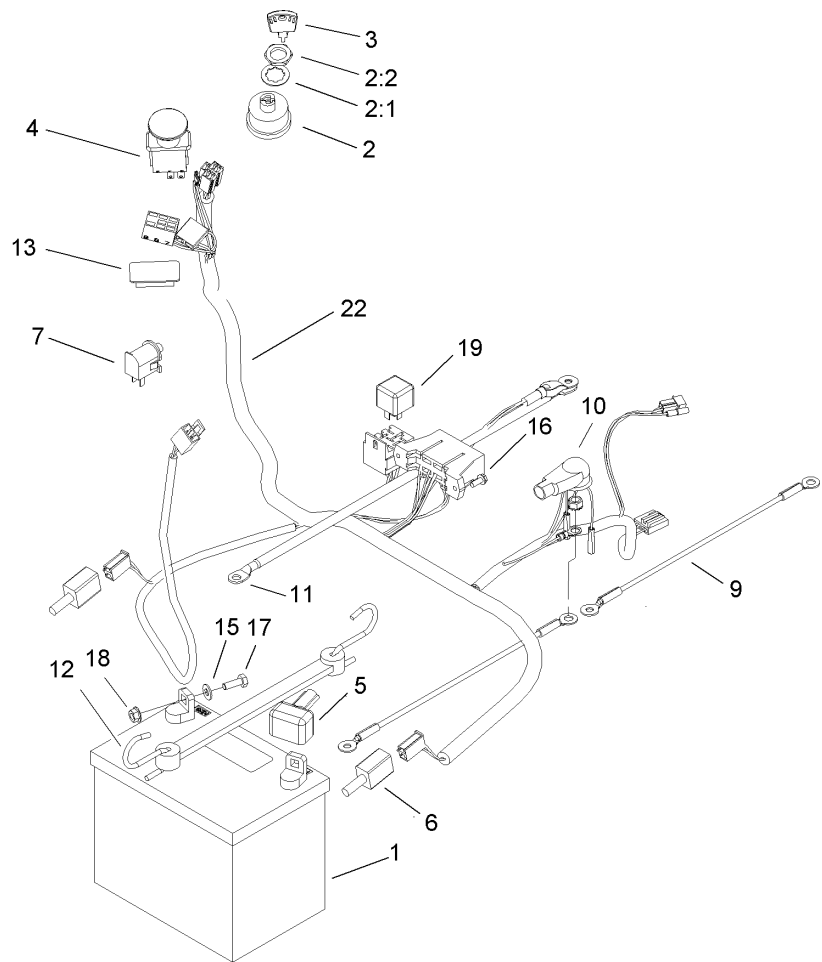

Electrical Assembly


Ref	Part No.	Qty.	Description				
1	104-2491	1	Battery-Dry				
2	88-9830	1	Key Switch ASM				
2:1	3254-5	1	Washer-Tooth				
2:2	218-461	1	Nut-HH				
3	700918	1	Key				
4	95-7489	1	Switch-PTO				
5	28-8080	1	Boot-Terminal				
6	106-2216	2	Switch				
7	82-2190	1	Switch-Bail				
9	93-1189	1	Wire ASM				
10	93-3190	1	Boot-Insulator, Terminal				
11	95-7654	1	Cable				
12	104-2466	1	Holddown-Battery				
13	95-8999	1	Switch				
15	3256-22	2	Washer-Flat				
16	32144-1	4	Screw-Taptite				
17	321-4	2	Screw-HH				
18	32128-33	2	Nut-HF				
19	98-7249	2	Relay				
22	108-6157	1	Harness-Wire W/Lights				
199	33004-00	1	Nut-HF				

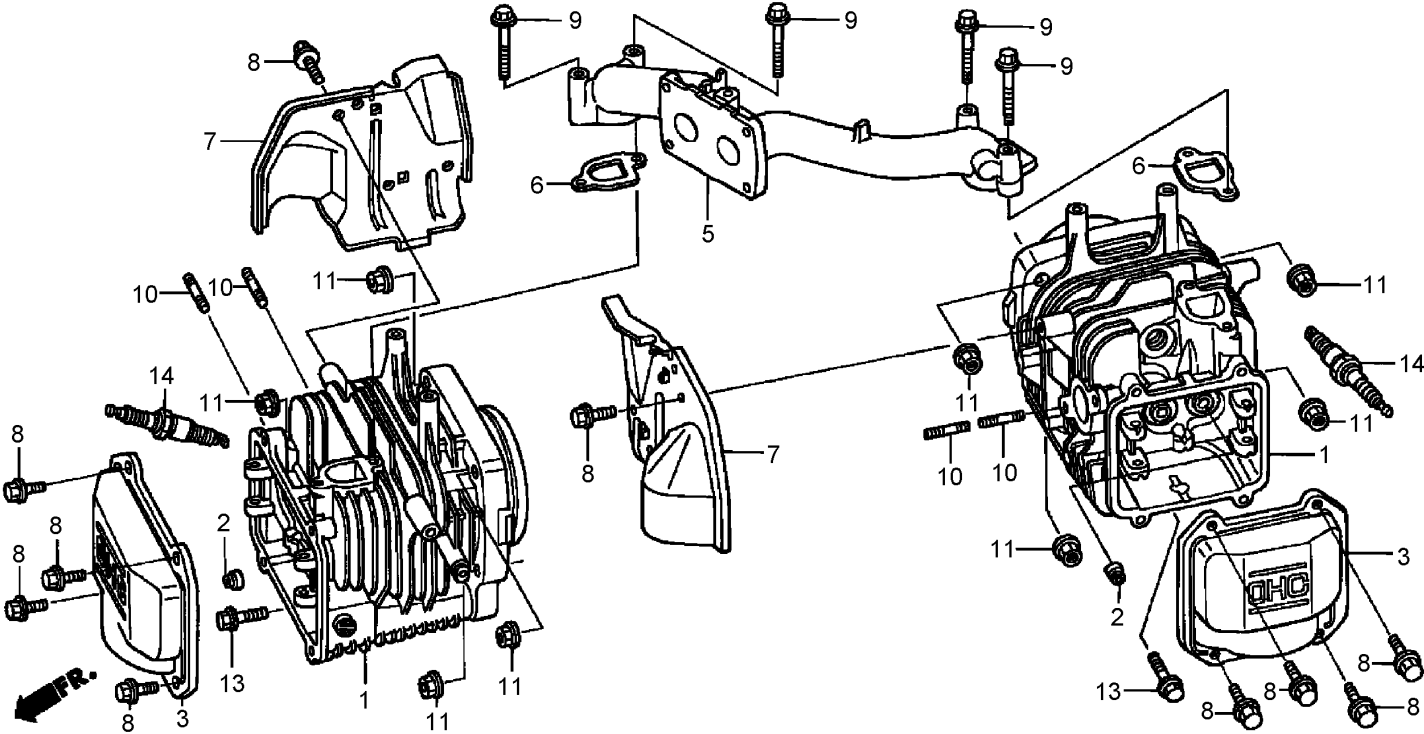

Cylinder Assembly
Honda GXV530 EXA2LB

Ref	Part No.	Qty.	Description
❶1	12100-Z0A-406	2	Cylinder
❷2	12209-422-005	2	Seal-Stem, Valve
❸3	12311-Z0A-000	2	Cover-Head
❺5	17101-Z0A-000	1	Manifold-Intake
❻6	17151-Z0A-000	2	Gasket-Manifold, Intake
❽7	19631-Z0A-000	2	Shroud
❾8	90013-883-000	10	Bolt-Flange (6X12) (C T200)
❿9	90016-ZE8-000	4	Bolt-Flange (6X45) (C T200)
⓫10	90045-892-000	4	Bolt-Stud (6X28)
⓫11	90201-Z0A-000	8	Nut-Flange (8Mm)
⓫13	95701-06030-00	2	Bolt-Flange (6X30)
⓫14	98079-54846	2	Spark Plug (B P R4E S) (N G K)
⓫14	98079-54855	2	Spark Plug (W14E P R-U) (Denso)
⓫14	98079-55846	2	Spark Plug (B P R 5E S) (N G K)


Ref	Part No.	Qty.	Description
❶14	98079-55855	2	Spark Plug (W16E P R-U) (Denso)

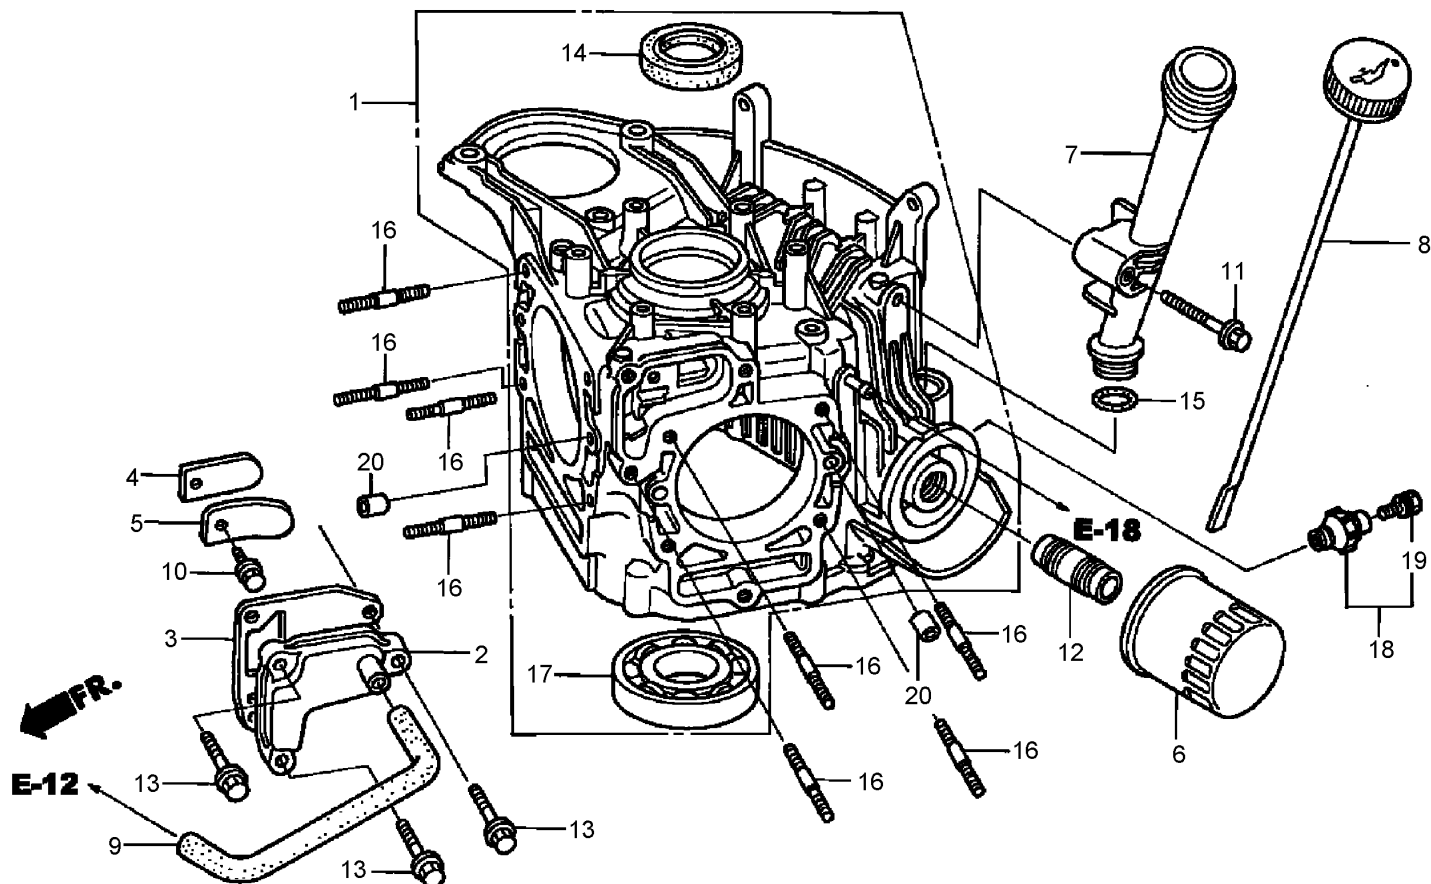

Crankcase Assembly Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description
❶	11100-Z0A-409	1	Crankcase ASM (840)
❷	12356-Z0A-000	1	Cover-Breather
❸	12358-Z0A-000	1	Gasket-Cover, Breather
❹	12372-ZA0-701	1	Plate-Valve
❺	12374-Z0A-000	1	Stopper-Valve
❻	15410-MCJ-000	1	Filter-Oil (Toyo Roki)
❼	15631-Z0A-000	1	Extension-Filler, Oil
❽	15655-Z0A-800	1	Dipstick-Oil
❾	15721-Z0A-000	1	Tube-Breather
❿	90002-892-000	1	Bolt-Flange (5X10)
⓫	90016-ZE8-000	1	Bolt-Flange (6X45) (C T200)
⓬	90018-PN3-000	1	Holder-Filter, Oil
⓭	90121-952-000	3	Bolt-Flange (6X25) (C T 200)

Ref	Part No.	Qty.	Description
❿	91201-ZE3-004	1	Seal-Oil (35X5X8)
⓫	91301-ZE9-003	1	O-Ring (22.5X2.2)
⓬	92900-08028-0E	8	Bolt-Stud (8X28)
⓭	96100-62070-00	1	Bearing-Ball, Radial
⓮	35490-Z0A-003	1	Oil Pressure Switch ASM
⓯	90002-PA6-003	1	Bolt-Washer (4X8) (Denso)
⓰	94301-08140	4	Pin-Dowel (8X14)

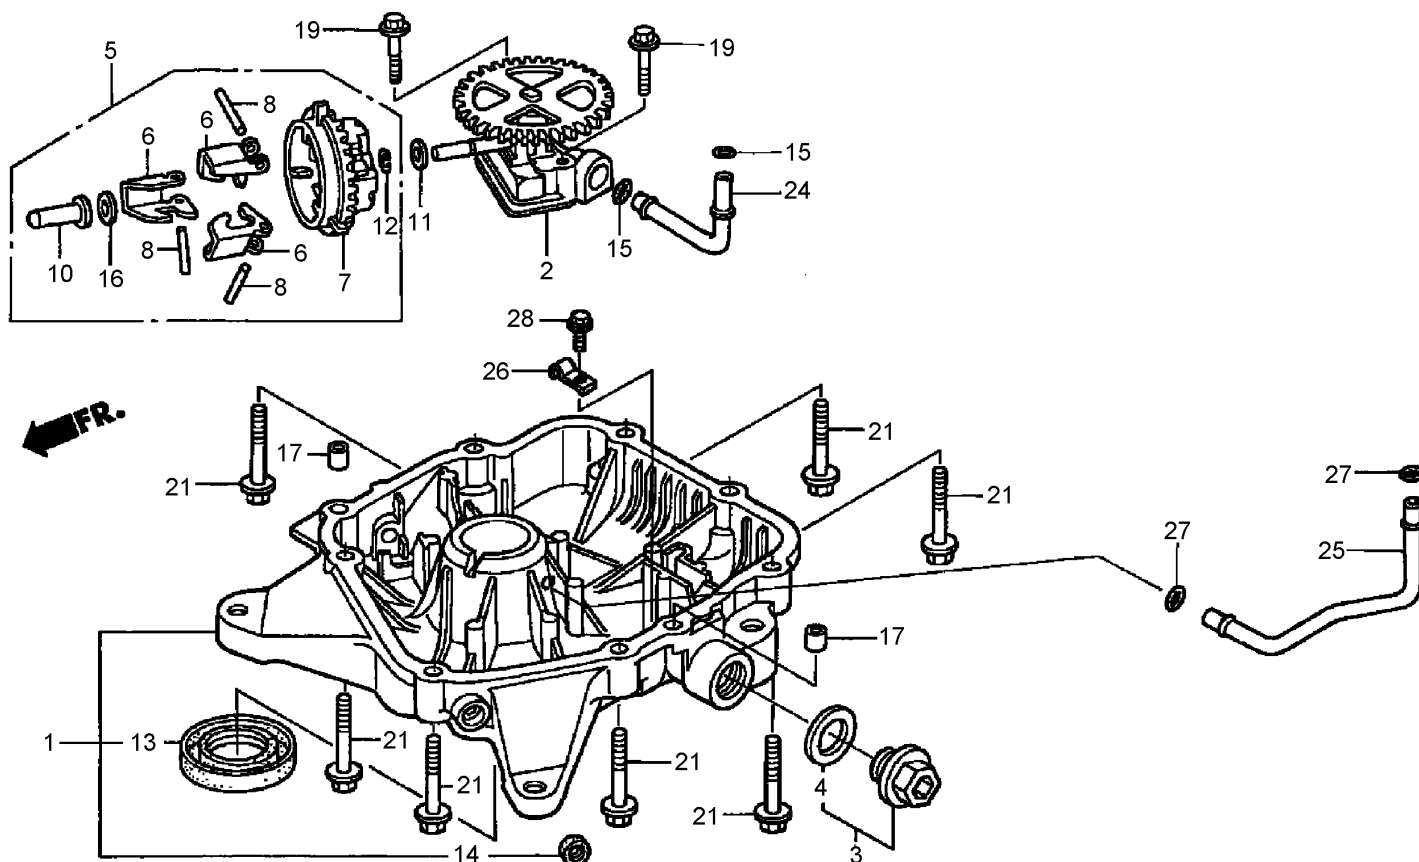

Oil Pan Assembly Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶	11300-Z0A-830	1	Oil Pan ASM	❶	15100-Z0A-811	1	Oil Pump ASM
❷	15100-Z0A-811	1	Oil Pump ASM	❷	15550-Z0A-810	1	Drain Cap ASM
❸	15550-Z0A-810	1	Drain Cap ASM	❸	15625-ZE1-003	1	Gasket-Cap, Oil Filler
❹	15625-ZE1-003	1	Gasket-Cap, Oil Filler	❹	16510-Z0A-000	1	Governor ASM
❺	16510-Z0A-000	1	Governor ASM	❺	16511-Z0A-000	3	Weight-Governor
❻	16511-Z0A-000	3	Weight-Governor	❻	16512-Z0A-000	1	Holder-Weight, Governor
❼	16512-Z0A-000	1	Holder-Weight, Governor	❼	16513-ZE2-000	3	Pin-Weight, Governor
❽	16513-ZE2-000	3	Pin-Weight, Governor	❽	16531-Z0A-000	1	Slider-Governor
❿	16531-Z0A-000	1	Slider-Governor	❿	90473-147-000	1	Washer (6X16)
⓫	90473-147-000	1	Washer (6X16)	⓫	90602-ZE1-000	1	Clip-Holder, Governor
⓬	90602-ZE1-000	1	Clip-Holder, Governor	⓬	91202-Z0A-003	1	Seal-Oil (31X50X8)
⓭	91202-Z0A-003	1	Seal-Oil (31X50X8)	⓭	91259-VM0-000	1	Seal-Oil (10X16X4.5)
⓮	91259-VM0-000	1	Seal-Oil (10X16X4.5)	⓮	91301-Z0A-003	2	O-Ring (7.5X2.3)
				⓯	94101-06800	1	Washer-Plain (6Mm)
				⓰	94301-08140	2	Pin-Dowel (8X14)
				⓱	95701-06035-00	1	Bolt-Flange (6X35)
				⓲	95701-08040-00	7	Bolt-Flange (8X40)
				⓳	15161-Z0A-000	1	Pipe-Pump, Oil
				⓴	15162-Z0A-800	1	Pipe-Supply, Oil
				⓵	15163-Z0A-000	1	Holder-Pipe, Oil
				⓶	91302-Z0A-003	2	O-Ring (5.8X2)
				⓷	95701-06012-00	1	Bolt-Flange (6X12)

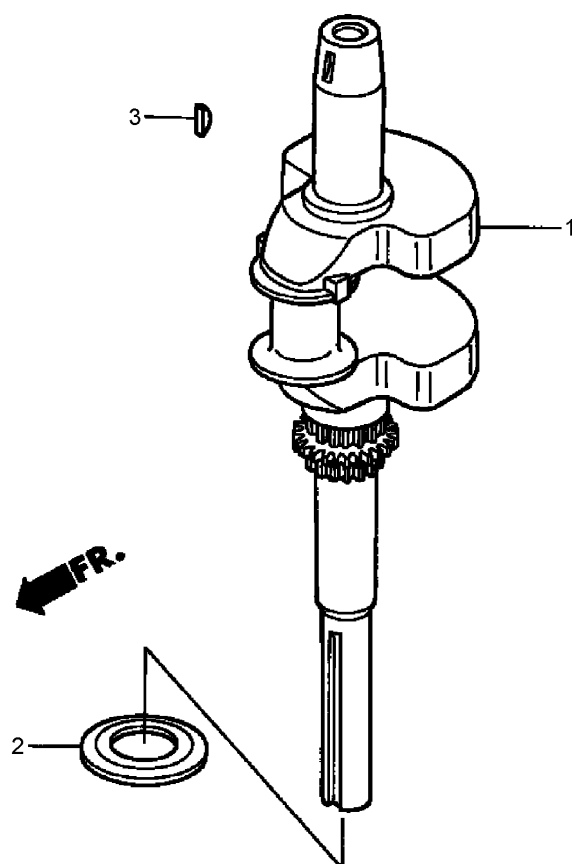

Crankshaft Assembly


Honda GXV530 EXA2LB

Ref	Part No.	Qty.	Description
❸1	13310-Z0A-800	1	Crankshaft
❸2	90401-Z0A-000	1	Washer-Thrust
❸3	90741-ZE2-000	1	Key-Woodruff, Special (25X18)

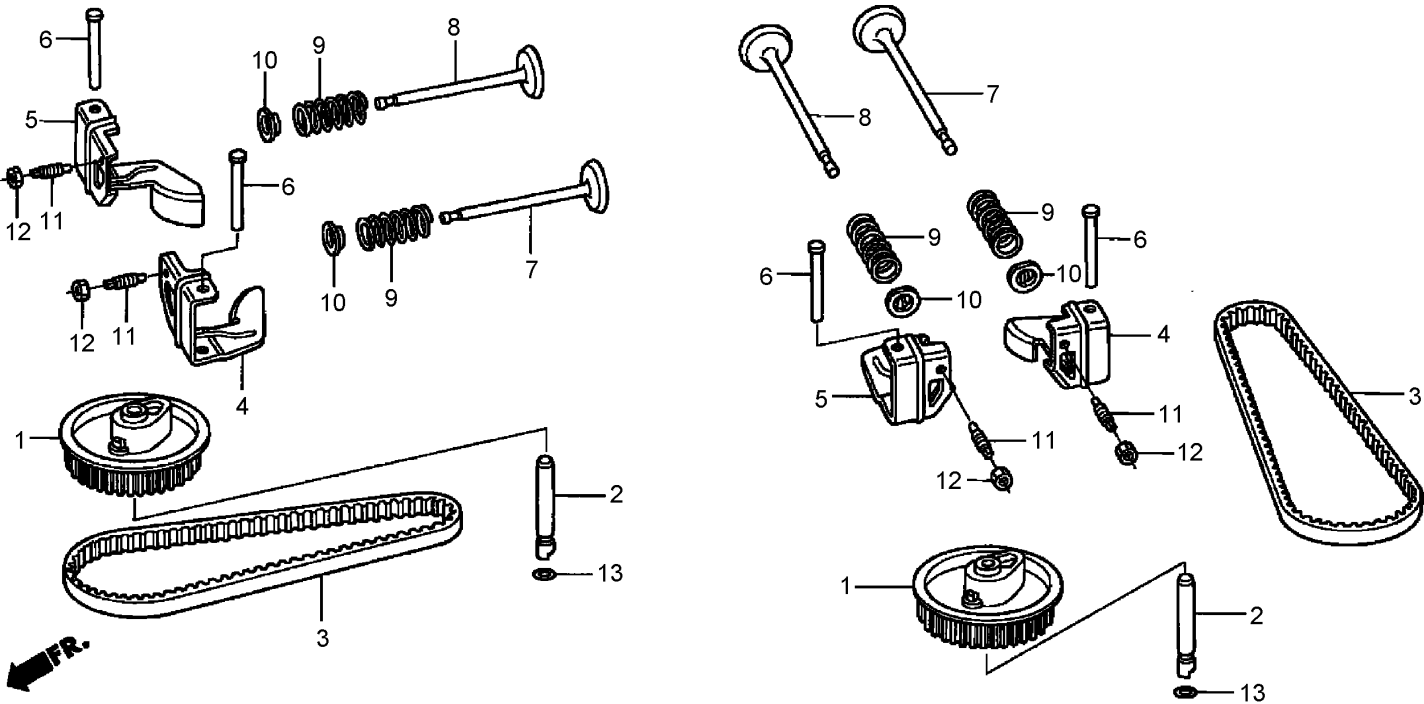

Camshaft Assembly
Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description				
❶	14320-Z0A-000	2	Pulley-Camshaft				
❷	14324-ZL8-000	2	Shaft-Pulley, Cam				
❸	14400-Z0A-003	2	Belt-Timing (97Hu8 G-200)				
❹	14431-Z0A-000	2	Arm-Valve Rocker, Intake				
❺	14441-Z0A-000	2	Arm-Valve Rocker, Exhaust				
❻	14461-Z0A-000	4	Shaft-Arm, Rocker				
❼	14711-Z0A-000	2	Valve-Intake				
❽	14721-Z0A-000	2	Valve-Exhaust				
❾	14751-ZE1-000	4	Spring-Valve				
❿	14771-ZE1-000	4	Retainer-Spring, Valve (Intake)				
⓫	90012-333-000	4	Screw-Adjusting, Tappet				
⓬	90206-001-000	4	Nut-Adjusting, Tappet				
⓭	91301-ZM0-V31	2	O-Ring (6.8X19) (Arai)				

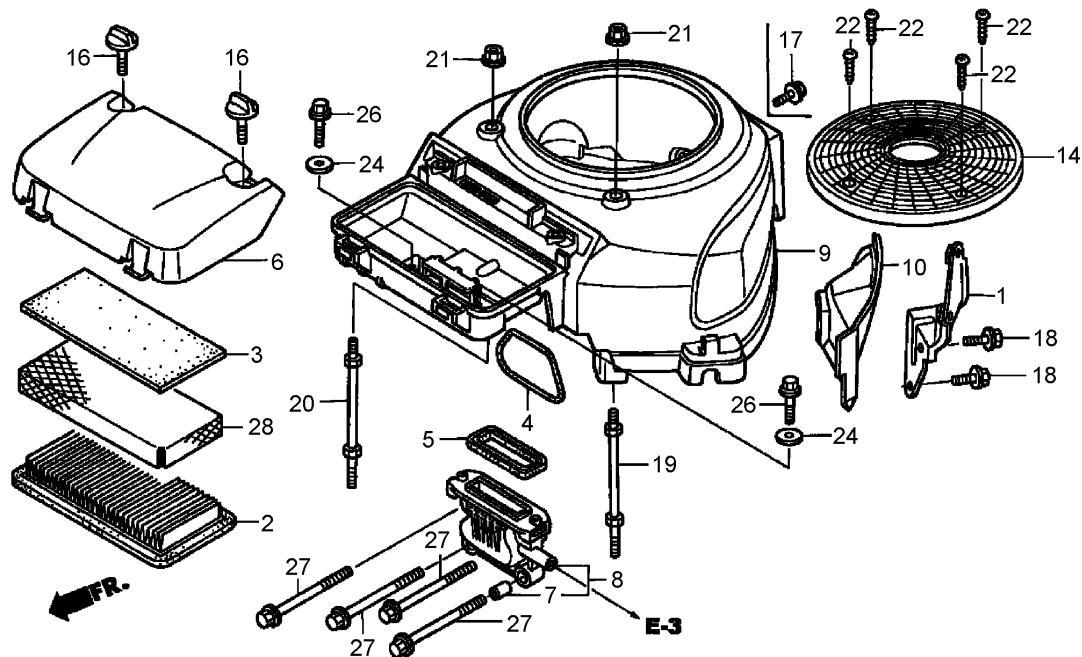

Fan Cover Assembly

Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	16711-Z0A-000	1	Stay-Pump, Fuel	❶18	90014-952-000	2	Bolt-Flange (6X14) (C T200)
❶2	17211-Z0A-013	1	Element-Cleaner, Air	❶19	90044-Z0A-000	1	Bolt-Stud, Left (Ignition Coil)
❶3	17218-Z0A-810	1	Filter (Outer)	❶20	90045-Z0A-000	1	Bolt-Stud, Right (Ignition Coil)
❶4	17228-Z0A-003	1	Gasket-Cleaner, Air	❶21	90201-ZM0-000	2	Nut-Flange (6Mm)
❶5	17229-Z0A-000	1	Seal-Housing, Air Cleaner	❶22	93913-24410	4	Screw-Tapping (4X16)
❶6	17231-Z0A-000	1	Cover-Cleaner, Air	❶22	93913-24780	4	Screw-Tapping (4X30) (P0)
❶7	17238-ZJ4-830	4	Collar A-Cleaner, Air	❶24	94103-06800	2	Washer-Plain (6Mm)
❶8	17410-Z0A-010	1	Elbow-Cleaner, Air	❶26	95701-06012-00	2	Bolt-Flange (6X12)
❶9	19611-Z0A-010ZA	1	Cover-Fan (Nh1) (Black)	❶27	95801-06100-00	4	Bolt-Flange (6X100)
❶10	19612-Z0A-000	1	Plate-Side	❶28	17212-Z0A-000	1	Grid-Cleaner, Air
❶14	28452-Z0A-000ZA	1	Grid-Screen Nh105 (Matte Black)				
❶16	90004-Z0A-000	2	Bolt (6Mm)				
❶17	90013-ZL8-000	2	Bolt-Flange (6X14) (Ct200)				

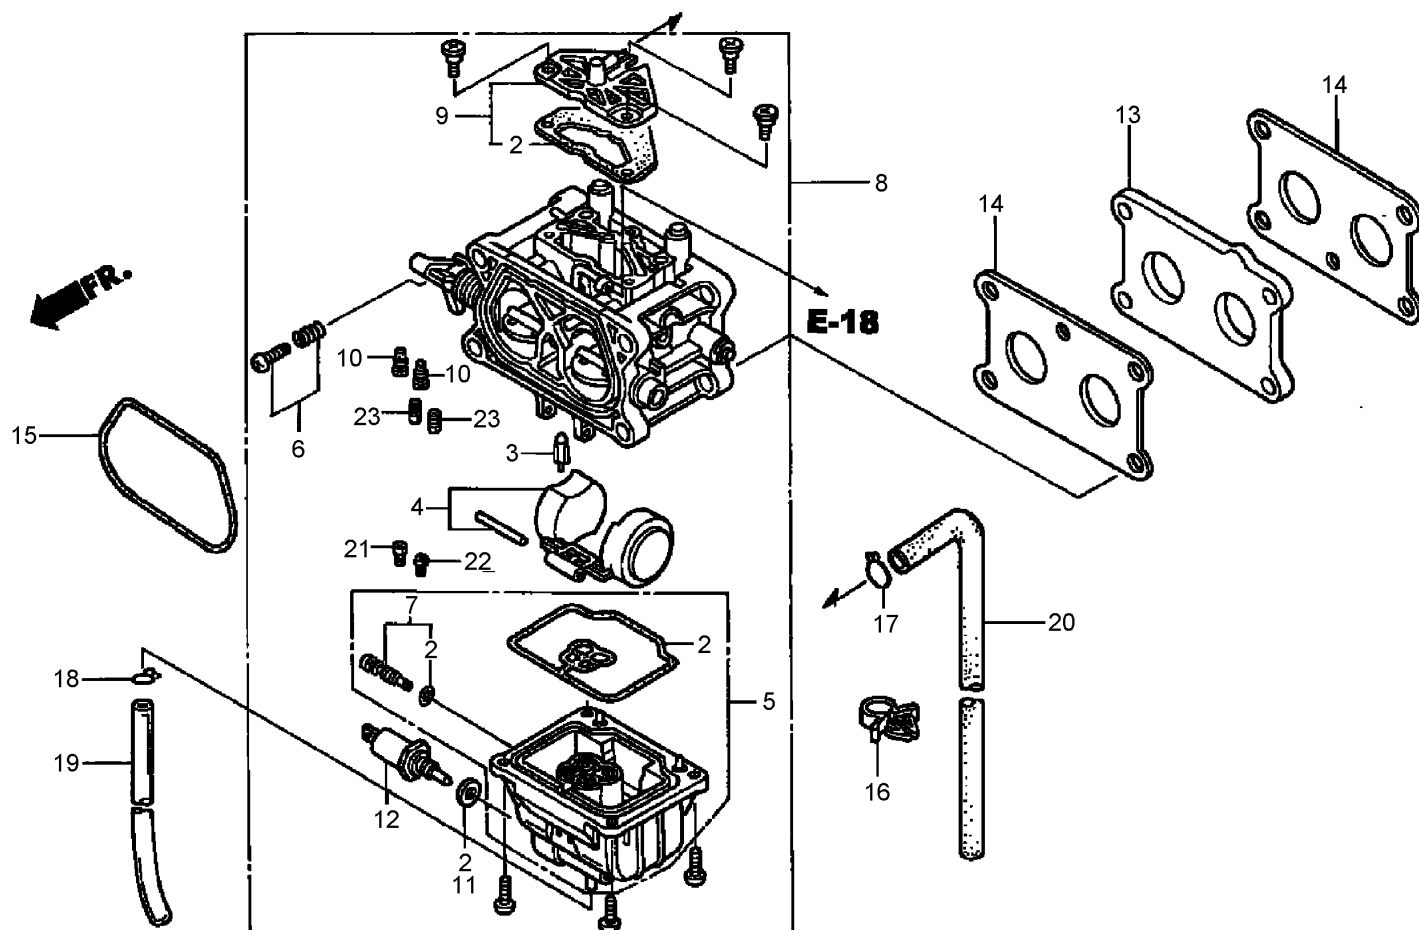

Carburetor Assembly Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description
②	16010-Z0A-802	1	Gasket Set
③	16011-Z0A-004	1	Valve-Float
④	16013-Z0A-004	1	Float Set
⑤	16015-Z0A-802	1	Float Chamber Set
⑥	16016-Z0A-004	1	Screw-Set
⑦	16024-Z0A-004	1	Screw-Set, Drain
⑧	16100-Z0A-813	1	Carburetor ASM (Up To Engine Serial No. 1014986)
⑧	16100-Z0A-814	1	Carburetor ASM (Bw02B C) (Up To Engine Serial No. 1027210)
⑧	16100-Z0A-815	1	Carburetor ASM (Bw02B C) (From Engine Serial No.1027211 To 1061017)
⑧	16100-Z0P-V02	1	Carburetor ASM (Bw02C A) (From Engine Serial No. 1061018)
⑨	16139-Z0A-004	1	Air Vent Cover Set
⑩	16168-Z0A-004	2	Cap
⑪	16178-Z0A-802	1	Gasket

Ref	Part No.	Qty.	Description
⑫	16200-Z0A-802	1	Solenoid Valve ASM
⑬	16211-Z0A-000	1	Insulator-Carburetor
⑭	16212-Z0A-000	2	Gasket-Insulator
⑮	17228-Z0A-003	1	Gasket-Cleaner, Air
⑯	90659-680-013	1	Clip-Harness, Wire
⑰	95002-02080	1	Clip-Tube (B8)
⑱	95002-02650	1	Clip-Tube (B6.5)
⑲	95003-07008-60M	1	Hose-Bulk, Vinyl (4X7X8000) (4X7X300)
⑲	95003-07008-60M	1	Hose-Bulk, Vinyl (4X7X8000) (4X7X300)
⑳	95005-45001-20M	1	Hose-Bulk, Vacuum (45X1000) (45X400)
⑳	95005-45001-20M	1	Hose-Bulk, Vacuum (45X1000) (45X400)
㉑	99131-Z0A-0820	1	Jet-Main (No. 82.5)
㉑	99131-Z0A-0850	1	Jet-Main (No. 85)
㉑	99131-Z0A-0870	1	Jet-Main (No. 87.5)

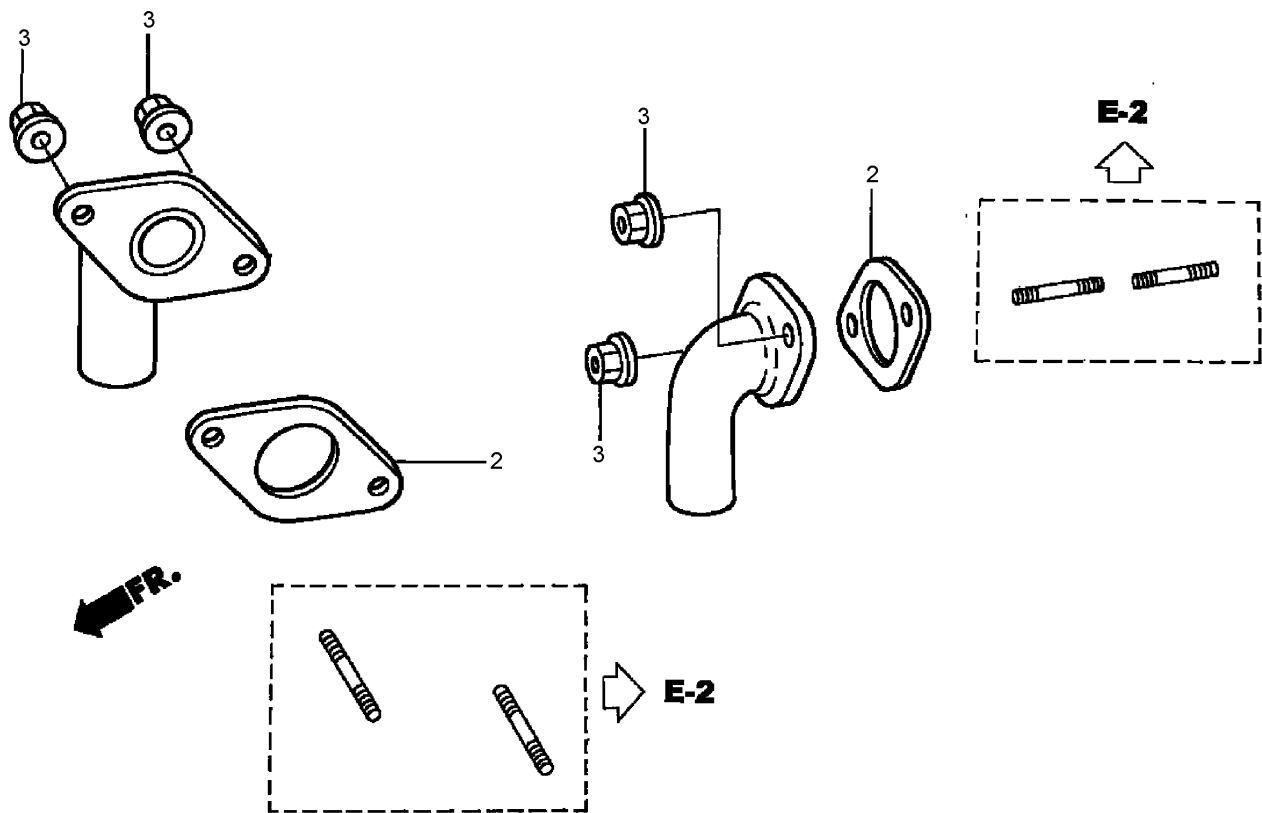

Exhaust Pipe Assembly Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description
③2	18333-Z0A-000	2	Gasket-Pipe, Exhaust
③3	94050-06000	4	Nut-Flange (6 Mm)

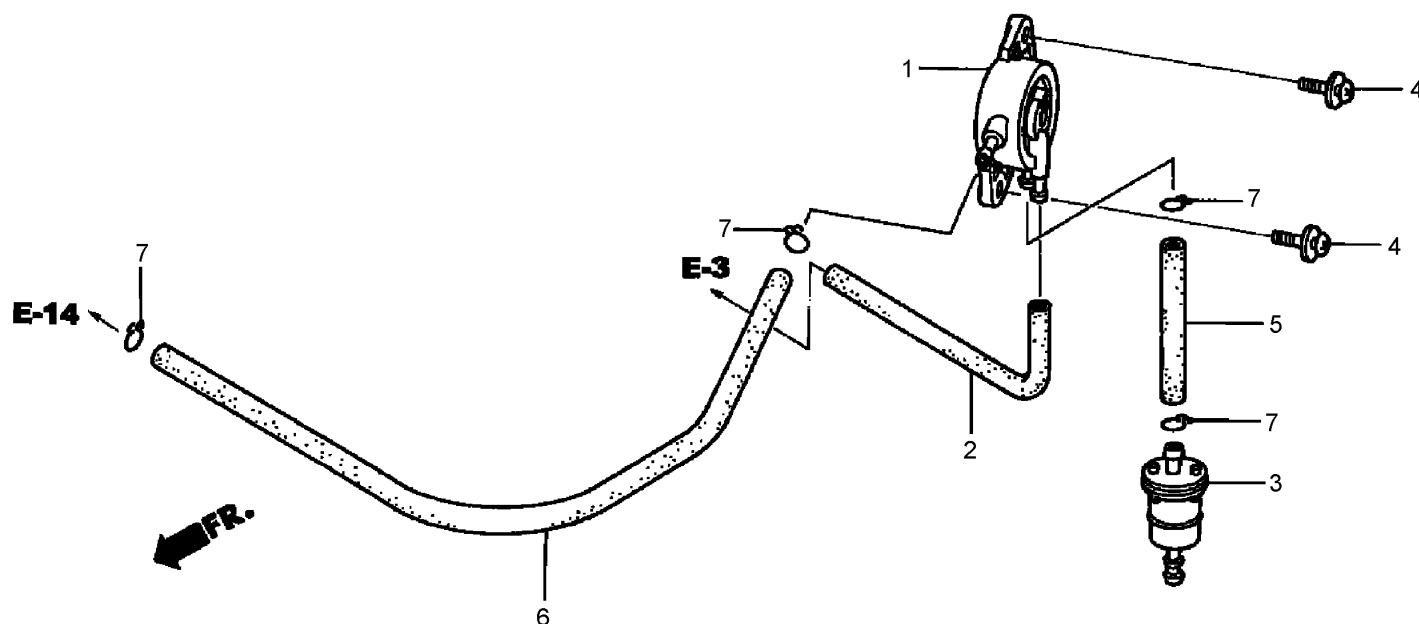

Fuel Pump Assembly

Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description				
③1	16700-ZL8-013	1	Fuel Pump ASM				
③2	16882-Z0A-000	1	Tube-Diaphragm				
③3	16910-ZV4-015	1	Filter-Fuel				
③4	93894-05016-00	2	Screw-Washer (5X16)				
③5	95001-55008-60M	1	Fuel-Hose (5.5X8000) (5.5X100)				
③6	95001-55008-60M	1	Fuel-Hose (5.5X8000) (5.5X100)				
③7	95002-02100	4	Clip-Tube (B10)				

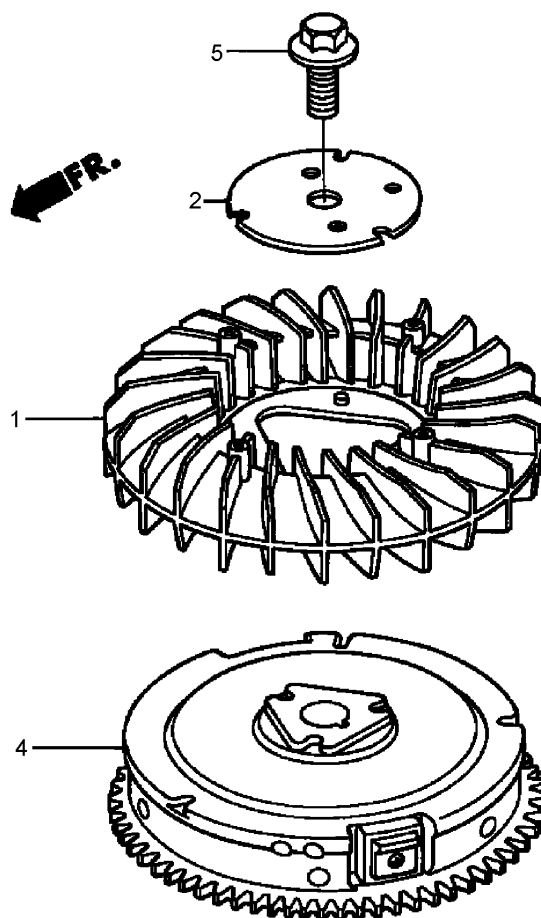

Flywheel Assembly


Honda GXV530 EXA2LB

Ref	Part No.	Qty.	Description				
❸1	19511-Z0A-000	1	Fan-Cooling				
❸2	19513-Z0A-000	1	Plate-Setting, Cooling Fan				
❸4	31110-Z0A-800	1	Flywheel (6P)				
❸5	90011-Z0A-000	1	Bolt-Flange (16X35)				

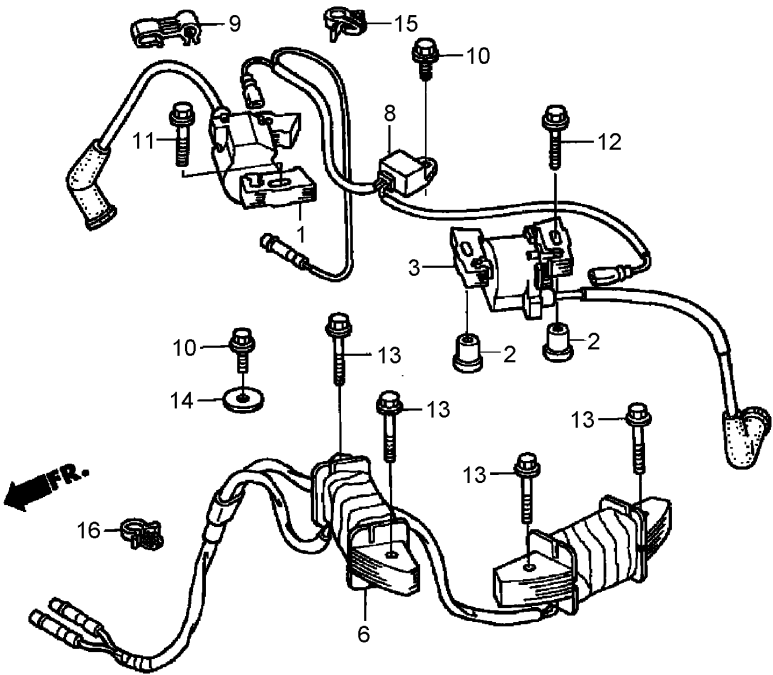

Ignition Coil Assembly
Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description				
❶1	30500-Z0A-013	1	Ignition Coil ASM (No. 1)				
❷2	30509-Z0A-000	2	Collar-Coil, Ignition				
❸3	30550-Z0A-013	1	Ignition Coil ASM (No. 2)				
❹6	31630-Z0A-811	1	Charge Coil ASM (12V-12A)				
❺8	31740-Z0A-003	1	Engine Stop Diode ASM				
❻9	32768-PJ7-000	1	Clamp-Wire, Center				
❼10	90013-883-000	2	Bolt-Flange (6X12) (C T200)				
❽11	95701-06028-00	1	Bolt-Flange (6X28)				
❾12	90016-ZE8-000	1	Bolt-Flange (6X45) (C T200)				
❿13	95701-06032-00	4	Bolt-Flange (6X32)				
⓫14	90136-428-870	1	Washer-Setting, Tank				
⓬15	90654-SA4-003	1	Clip-Harness, Wire (6Mm) (White)				
⓭16	90659-PG6-000	1	Clip-Harness, Wire				

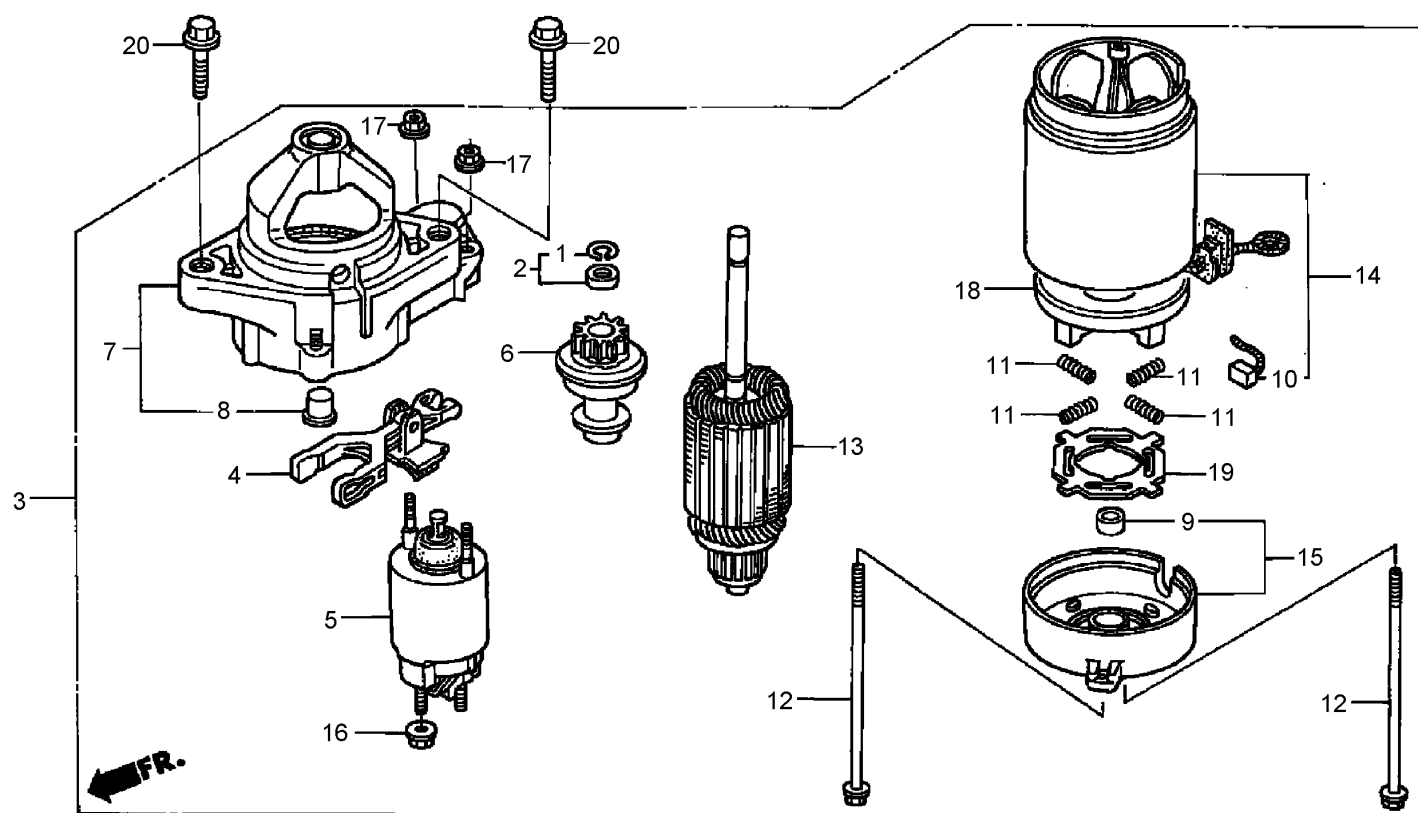

Starter Motor Assembly Honda GXV530 EXA2LB

Ref	Part No.	Qty.	Description
❶	30201-PH9-004	1	Ring-Snap (Denso)
❷	30202-PZ1-003	1	Clutch Stop Collar Set
❸	31200-Z0A-003	1	Starter Motor ASM
❹	31203-PH9-004	1	Lever-Drive, Pinion
❺	31204-ZG4-801	1	Magnetic Switch ASM
❻	31207-Z0A-003	1	Clutch-Overrunning
❼	31208-Z0A-003	1	Housing-Drive Side
❽	31209-PH9-004	1	Bearing (A)
❾	31210-PH9-004	1	Bearing (B)
❿	31211-PH9-004	4	Brush
⓫	31212-PH9-004	4	Spring-Brush
⓬	31214-PH9-004	2	Bolt-Through
⓭	31217-Z0A-003	1	Armature


Ref	Part No.	Qty.	Description
❿	31218-P64-N01	1	Yoke
⓮	31219-Z0A-003	1	Frame-End, Commutator
⓯	31220-PH9-004	1	Nut-Hex (8Mm)
⓰	31223-PA0-006	2	Nut-Flange (5Mm)
⓱	31231-PH9-004	1	Holder-Brush
⓲	31233-PH9-004	1	Insulator-Holder, Brush
⓳	95701-10040-00	2	Bolt-Flange (10X40)

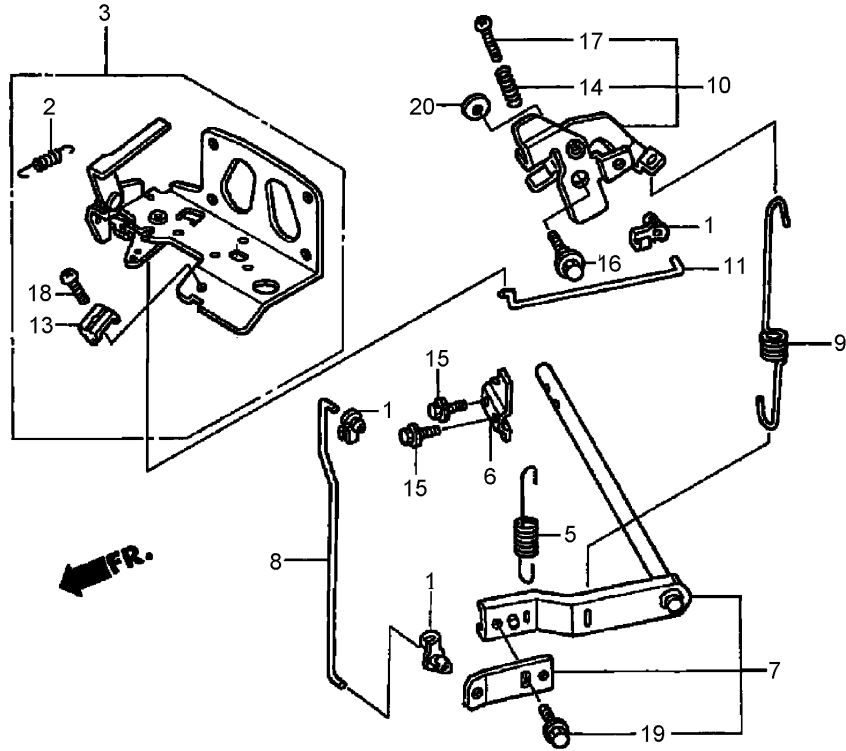

Control Assembly
Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description
❶1	16263-ZJ7-871	3	Rod-Joint
❷2	16268-Z0A-300	1	Spring-Return, Choke
❸3	16500-Z0A-000	1	Control ASM (1-Lever)
❺5	16534-Z0A-000	1	Spring-Starter (Up To Engine Serial No. 1014986)
❺5	16534-Z0P-V00	1	Spring-Starter (From Engine Serial No. 1038646)
❻6	16542-Z0A-000	1	Fork-Governor
❼7	16550-Z0A-000	1	Arm-Governor
❽8	16555-Z0A-000	1	Rod-Governor
❾9	16561-Z0A-000	1	Spring-Governor
❿10	16565-Z0A-000	1	Link-Governor
❿11	16566-Z0A-000	1	Rod-Link, Governor
❿13	16576-891-000	2	Holder-Cable
❿14	16584-883-300	1	Spring-Adjusting, Control

Ref	Part No.	Qty.	Description
❿15	90002-892-000	2	Bolt-Flange (5X10)
❿16	90015-Z0A-000	1	Bolt-Flange (6Mm) (C T200)
❿17	90016-ZG9-N30	1	Screw-Recessed (5X25)
❿18	90016-Z0A-V00	2	Screw-Recessed (5X18)
❿19	95701-06010-00	1	Bolt-Flange (6X10)
❿20	94101-06800	1	Washer-Plain (6Mm)

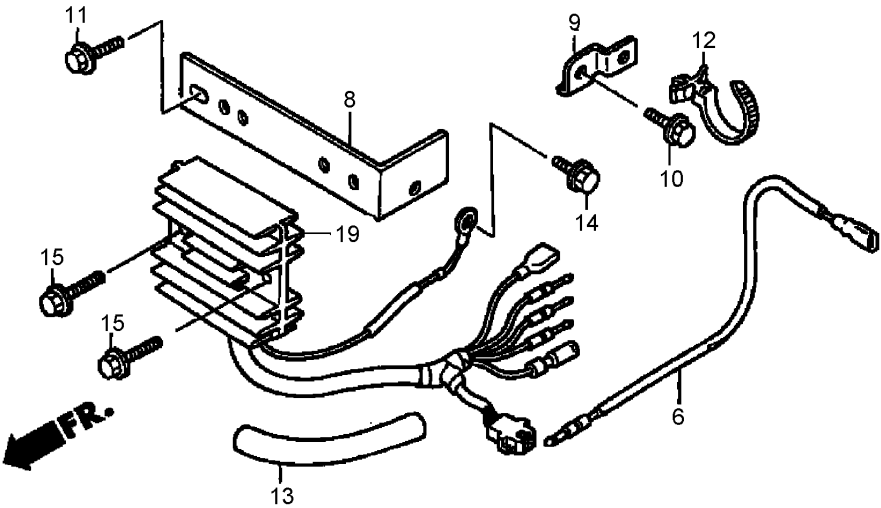

Regulator Rectifier and Sub-Wire Harness Assembly
Honda GXV530 EXA2LB

Ref	Part No.	Qty.	Description				
❸6	32105-Z0A-000	1	Sub-Wire Harness ASM				
❸8	31758-Z0A-800	1	Bracket-Regulator				
❸9	35806-752-630	1	Base-Clip				
❸10	90013-883-000	1	Bolt-Flange (6X12) (C T200)				
❸11	90014-952-000	2	Bolt-Flange (6X14) (C T200)				
❸12	90672-SB2-003	1	Strap-Cable (105Mm) (N H1 Black)				
❸13	91406-ZB3-740	1	Tube-Wire				
❸14	95701-06008-00	1	Bolt-Flange (6X8)				
❸15	95701-06020-00	2	Bolt-Flange (6X20)				
❸19	31750-Z0A-V01	1	Regulator Rectifier ASM				

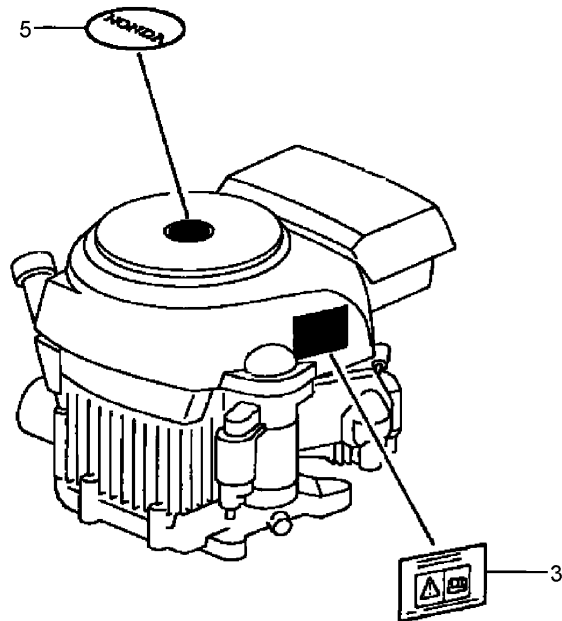

Label Assembly

Honda GXV530 EXA2LB

Ref	Part No.	Qty.	Description				
❶3	87516-Z0A-010		Mark-Caution, Operator				
❶5	87531-Z0A-010		Mark-Honda				

Attachments and Accessories

For 81250 - Precision Z350 HLX Riding Mower

Product Name	Model/Part
Tire Chain Kit	105-1855
44 Inch Mulching Kit	108-7195
44 Inch Vac-Bagger	62570
48 Inch Snow Blade	63600

