



Precision Z340 HLX Riding Mower

Model No. 81246 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front Frame Assembly	 3	Piston and Connecting Rod Assembly Honda GXV530 EXA2LB	 22
Seat Assembly	 4	Camshaft Assembly Honda GXV530 EXA2LB	 23
Control Assembly	 5	Fan Cover Assembly Honda GXV530 EXA2LB	 24
Hydro and Belt Drive Assembly	 6	Carburetor Assembly Honda GXV530 EXA2LB	 25
LH Hydrostat Assembly Part No. 108-2394	 7	Exhaust Pipe Assembly Honda GXV530 EXA2LB	 26
RH Hydrostat Assembly Part No. 108-2393	 9	Fuel Pump Assembly Honda GXV530 EXA2LB	 27
Engine Assembly	 11	Flywheel Assembly Honda GXV530 EXA2LB	 28
Styling Assembly	 12	Ignition Coil Assembly Honda GXV530 EXA2LB	 29
42in Deck Assembly	 13	Starter Motor Assembly Honda GXV530 EXA2LB	 30
42in Deck Assembly No. 110-1899	 14	Control Assembly Honda GXV530 EXA2LB	 31
42in Mulch Assembly	 15	Regulator Rectifier and Sub-Wire Harness Assembly Honda GXV530 EXA2LB	 32
Spindle and Belt Drive Assembly	 16	Label Assembly Honda GXV530 EXA2LB	 33
Electrical Assembly	 17	Attachments and Accessories List	 34
Cylinder Assembly Honda GXV530 EXA2LB	 18		
Crankcase Assembly Honda GXV530 EXA2LB	 19		
Oil Pan Assembly Honda GXV530 EXA2LB	 20		
Crankshaft Assembly Honda GXV530 EXA2LB	 21		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HS. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain from your local Honda dealer

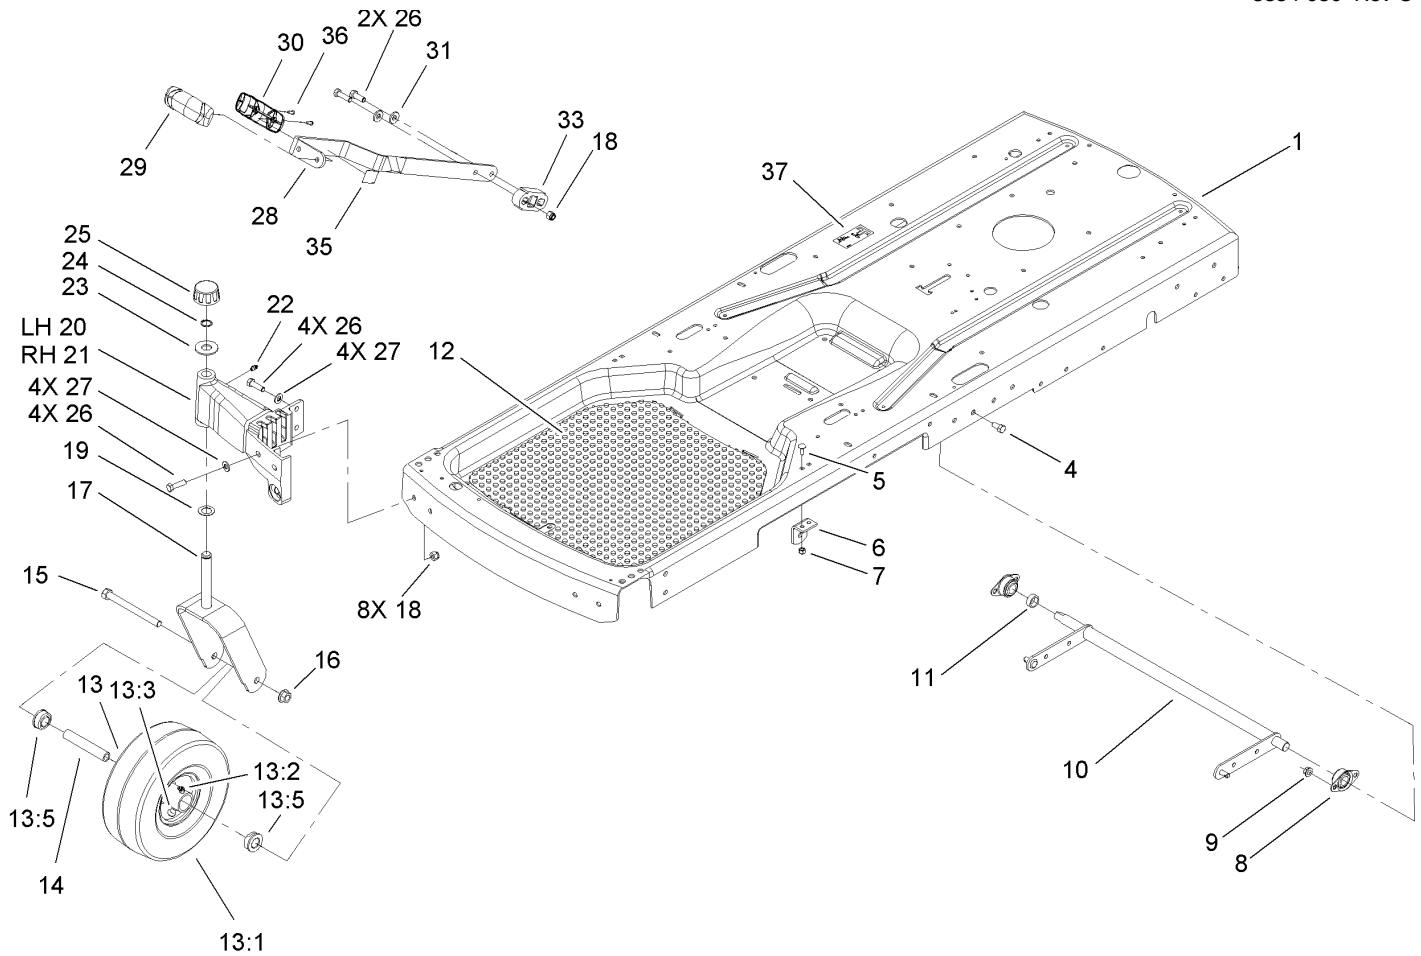

Front Frame Assembly

Ref	Part No.	Qty.	Description
1	108-2326	1	Frame
4	323-4	4	Screw-HH
5	3229-1	4	Screw-CARR
6	105-3439	2	Bracket-Lift
7	3296-42	4	Nut-Lock, NI
8	1-633102	2	Bearing-Flange, Side
9	3290-357	4	Nut-HHF, Whiz
10	105-3499-03	1	Lift Arm ASM
11	106-2222	1	Spacer
12	108-6161	1	Footmat-Frame
13	108-6126	2	Castor Wheel ASM
13:1	105-1943	1	Tire
13:2	302-5	1	Fitting-Grease
13:3	232-27	1	Stem-Valve
13:5	114-1640	2	Bushing-Flange
13:99	93-4244	1	Tube-Inner (W/Valve)
14	104-3667	2	Spanner-Wheel
15	325-22	2	Screw-HH
16	32128-23	2	Nut-HF
17	107-9119-03	2	Castor Fork ASM
18	3296-39	9	Nut-Lock, NI
19	3-6498	2	Washer-Thrust
20	105-6986-02	1	Castor-LH
21	105-6985-02	1	Castor-RH


Ref	Part No.	Qty.	Description
22	302-5	2	Fitting-Grease
23	28-2480	2	Washer
24	32151-103	2	Ring-Snap
25	61-9780	2	Cap-Hub
26	323-18	10	Screw-HH
27	3256-24	8	Washer-Flat
28	108-2317-03	1	Lever-Lift
29	108-2318	1	Handle-Top
30	108-2319	1	Handle-Bottom
31	98-5975	2	Washer-Belleville
33	106-2211	1	Block-Lift
35	106-8743	1	Decal
36	94-6961	2	Screw
37	108-6109	1	Decal-Transport, Ce

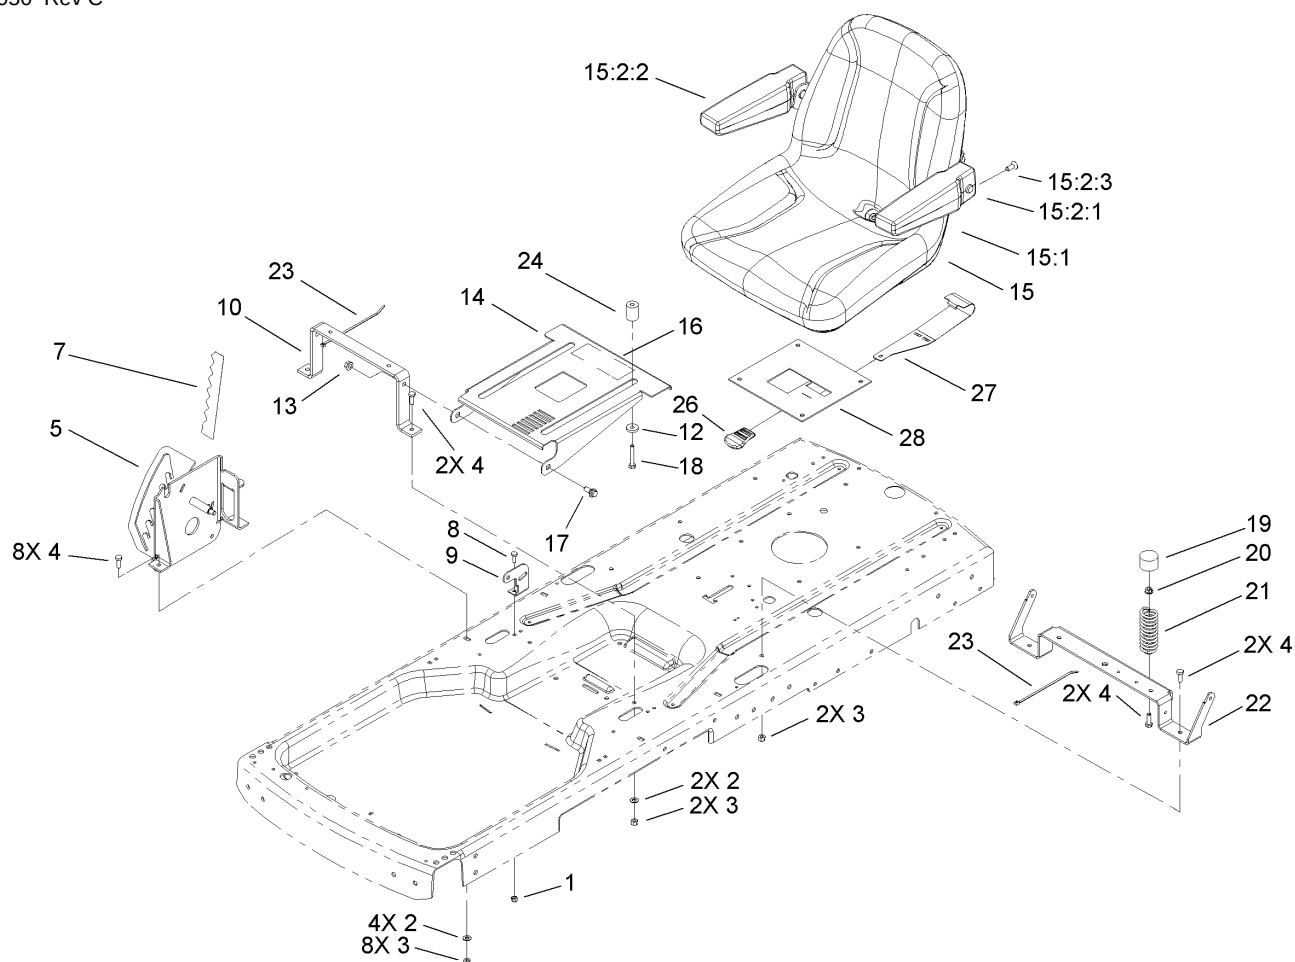 

Seat Assembly

Ref	Part No.	Qty.	Description
1	3296-42	4	Nut-Lock, NI
2	3256-23	6	Washer-Flat
3	3296-29	12	Nut-Lock, NI
4	322-4	14	Screw-HH
5	106-2158-03	1	RH Plate ASM
6	106-2159-03	1	LH Plate ASM
7	106-2223	1	Decal-HOC
8	321-4	4	Screw-HH
9	106-2180	2	Bracket-Bellcrank
10	105-6954-03	1	Brace-Seat, Front
12	108-2353	4	Spacer
13	32128-21	2	Nut-HF
14	108-2303-03	1	Bracket-Seat
15	106-6446	1	Seat ASM
15:1	108-2331	1	Seat
15:2		1	Armrest Kit
15:2:1	110-6569	1	LH Armrest Kit
15:2:2	110-6570	1	RH Armrest Kit
15:2:3	108-6179	6	Screw-HSBH
16	106-8717	1	Decal-Service
17	94-7582	2	Bolt-Shoulder
18	322-11	4	Screw-HH
19	701178	2	Cap-Protector
20	32128-25	2	Nut-HF


Ref	Part No.	Qty.	Description
21	92-7054	2	Spring-Compression
22	108-2358-03	1	Brace-Seat, Rear
23	614249	2	Strap-Tie
24	108-2301	4	Spacer
26	107-1904	1	Knob-Lever, HOC
27	108-2302	1	Latch-Seat
28	108-7175-03	1	Mount-Latch, Seat

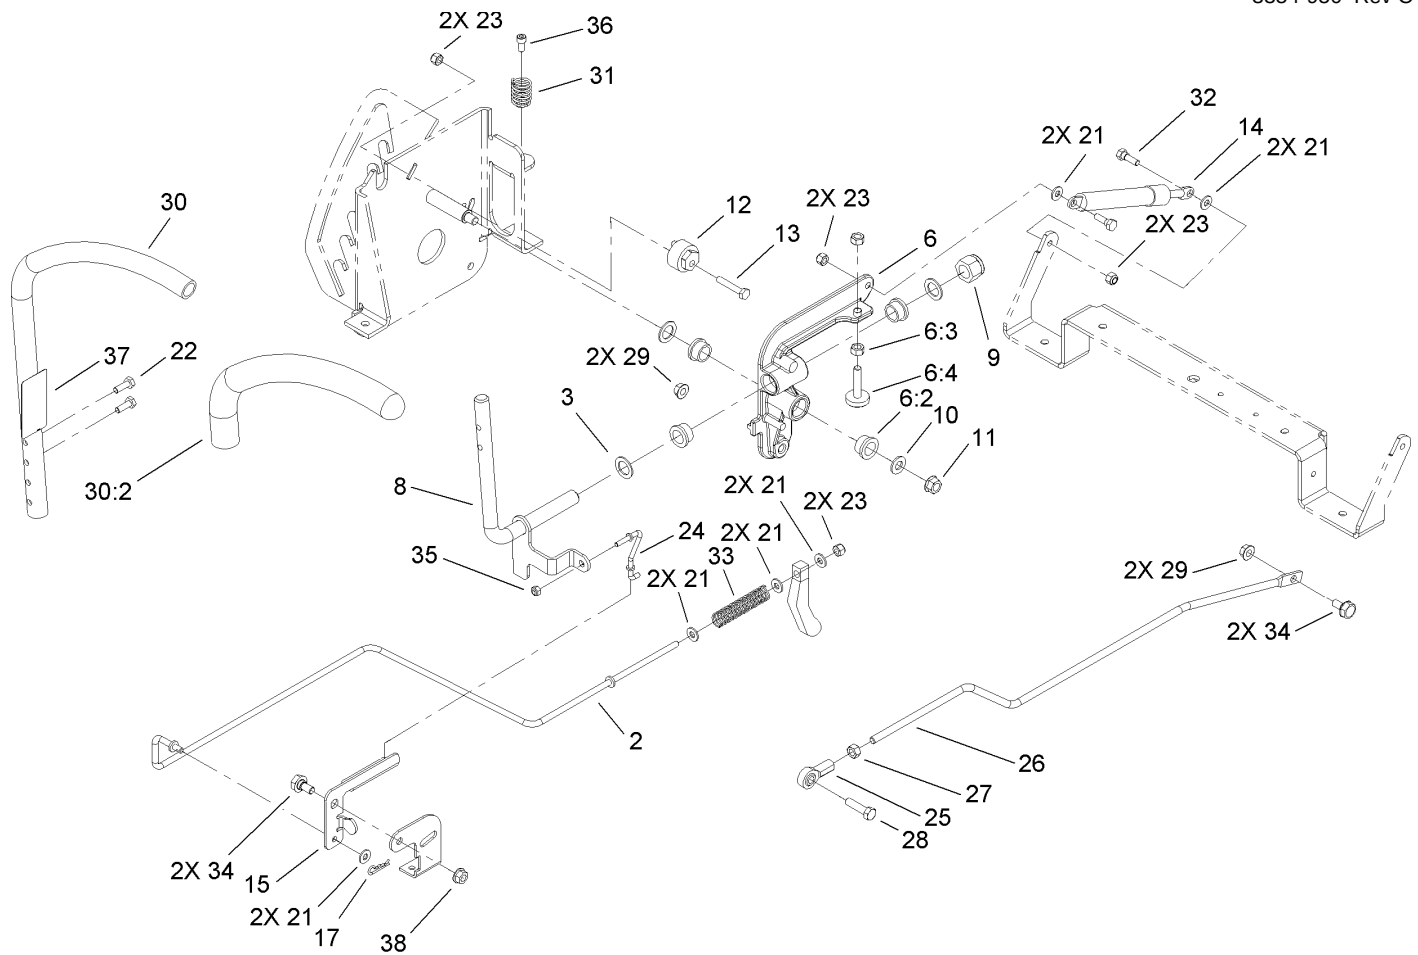 

Control Assembly

Ref	Part No.	Qty.	Description
❶1	105-7045	1	Rod-Brake, LH
2	105-7044	1	Rod-Brake, RH
3	105-3481	6	Washer-Thrust
❶5	110-1869	1	LH Activator Arm ASM
❶5:2	105-3455	4	Bushing
❶5:3	3217-6	2	Nut-Hex
❶5:4	105-3486	1	Stop-Adjustment
6	110-1870	1	RH Activator Arm ASM
6:2	105-3455	4	Bushing
6:3	3217-6	2	Nut-Hex
6:4	105-3486	1	Stop-Adjustment
❶7	105-3488	1	LH Pivot Shaft ASM
8	105-3487	1	RH Pivot Shaft ASM
9	3296-53	2	Nut-Lock, NI
10	3256-24	2	Washer-Flat
11	3296-59	2	Nut-Lock, NI
12	107-4874	2	Eccentric
13	321-9	2	Screw-HH
14	103-2913	2	Damper-Control, Motion
15	106-2181	2	Bellcrank
17	1-806003	2	Pin-Hair
21	3256-22	12	Washer-Flat
22	321-4	4	Screw-HH
23	3296-42	8	Nut-Lock, NI


Ref	Part No.	Qty.	Description
24	106-2179	2	Link-Brake
25	1-543017	2	Balljoint-RH
26	105-7048	2	Rod-Hydro
27	3219-2	2	Nut-Hex
28	322-6	2	Screw-HH
29	32128-20	4	Nut-HF
30	108-6117	2	Handle ASM
30:2	108-6187	1	Grip
31	105-3469	2	Spring-Compression
32	106-2214	4	Bolt-Shoulder
33	105-3465	2	Spring-Compression
34	37-8771	4	Bolt-Shoulder
35	3296-2	2	Nut-Lock
36	3274-52	2	Screw-HSH
37	106-8742	2	Decal
38	32128-25	2	Nut-HF

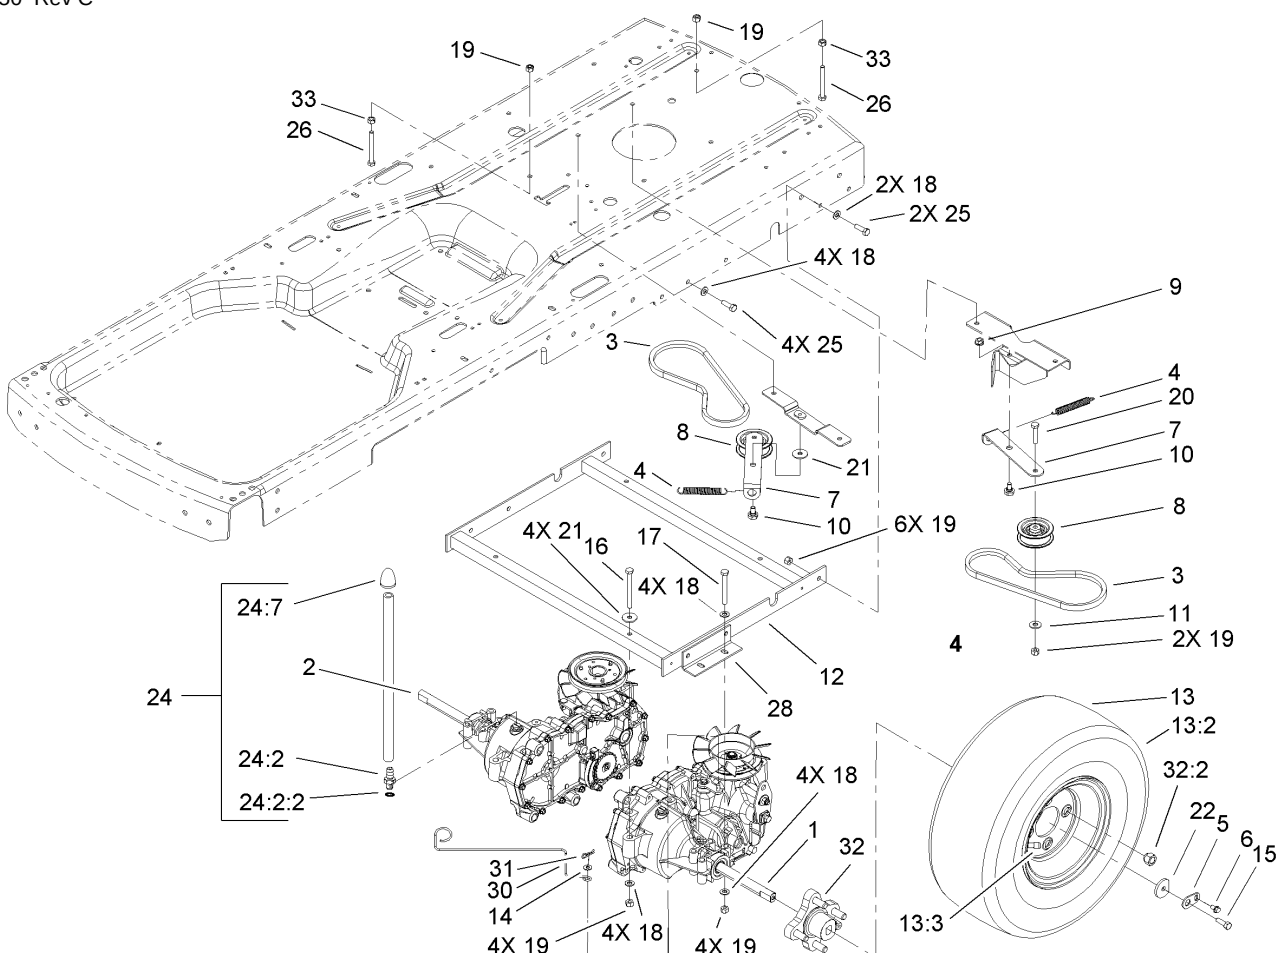 

Hydro and Belt Drive Assembly


Ref	Part No.	Qty.	Description
1	108-2394	1	Transaxle-Hydro, LH
2	108-2393	1	Transaxle-Hydro, RH
3	106-2174	2	V-Belt
4	95-3805	2	Spring
5	105-3438	2	Tab-Locking
6	3234-13	2	Screw-HHF
7	105-7047	2	Arm-Idler
8	106-2176	2	Pulley-Idler
9	32128-25	1	Nut-HF
10	37-8770	2	Bolt-Shoulder
11	3256-3	2	Washer-Flat
12	107-4878-03	1	Hydro Mount ASM
13	108-6128	2	Wheel And Tire ASM
13:2	106-7006	1	Tire
13:3	232-27	1	Stem-Valve
13:99	107-2491	1	Tube-Tire
14	3256-1	2	Washer-Flat
15	3210-5	2	Screw-HH
16	322-20	4	Screw-HH
17	322-13	4	Screw-HH
18	3256-23	18	Washer-Flat
19	3296-29	18	Nut-Lock, NI
20	322-7	2	Screw-HH
21	5-4460	5	Washer-Pivot

Ref	Part No.	Qty.	Description
22	106-7001	2	Washer-Wheel
24	106-7002	2	Vent Hose ASM
24:2	93-3818	1	Fitting ASM
24:2:2	93-3816	1	O-Ring
24:7	107-1701	1	Cap Vent ASM
25	322-5	6	Screw-HH
26	322-13	2	Screw-HH
28	105-7039-03	2	Support-Hydro
30	107-4875	2	Rod-Bypass
31	1-806003	2	Pin-Hair
32	108-9533	1	Hub ASM
32:2	242-50	4	Nut-Lug
33	3217-6	2	Nut-Hex

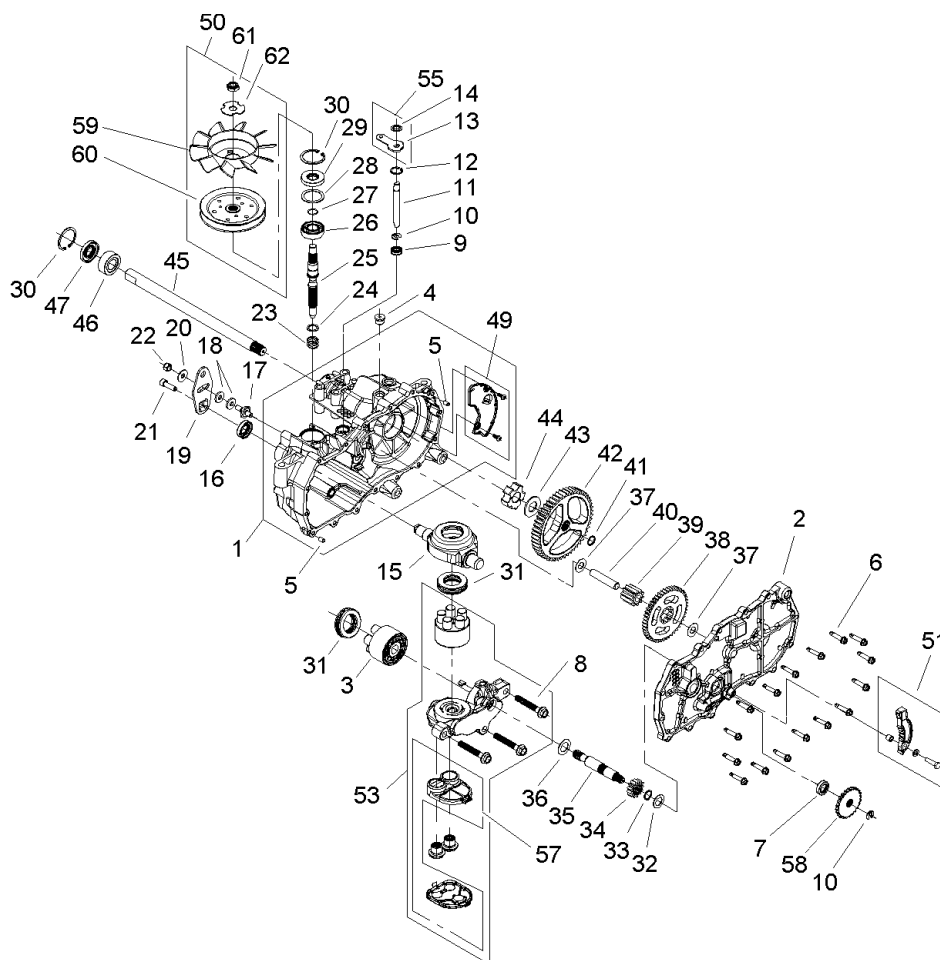 


LH Hydrostat Assembly Part No. 108-2394

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-8695	1	RH Main Housing ASM	25	104-5306	1	Shaft-Input
2	106-8696	1	RH Side ASM	26	104-5311	1	Bearing-Ball
3	103-2666	1	Cylinder Block Kit	27	104-5307	1	Ring-Retaining
4	104-2189	1	Plug-Thread, Straight	28	104-5308	1	Spacer
5	104-2170	2	Pin	29	104-5310	1	Seal-Lip
6	104-5305	16	Screw-HHF	30	104-5309	2	Ring-Retaining
7	104-5347	1	Seal-Oil	31	94-6922	2	Bearing-Thrust
8	94-6926	3	Bolt	32	104-5339	1	Washer-Flat
9	106-8676	1	Seal-Lip	33	104-5340	1	Ring-Retaining
10	106-8677	2	Ring-Retaining, EXT	34	104-5316	1	Gear-Pinnion, 13T
11	106-8678	1	Rod-Bypass	35	106-8683	1	Shaft-Motor
12	106-8679	1	Ring-Retaining, Int	36	104-5360	1	Washer-Shaft, Motor
13	107-2490	1	Arm-Bypass	37	94-1933	2	Washer
14	106-8681	1	Ring-Retaining, EXT	38	104-5317	1	Gear
15	104-5304	1	Swashplate-Trunnion	39	104-5318	1	Gear-Jackshaft, 10T
16	104-5313	1	Seal-Lip	40	104-5329	1	Pin-Jackshaft
17	104-2116	1	Stud	41	104-5328	1	Ring-Retaining, Spiral
18	105-1873	2	Puck-Friction	42	106-8684	1	Gear-Bull, 52T
19	106-8747	1	Arm-Control	43	94-1943	1	Washer
20	5-4460	1	Washer-Pivot	44	104-5320	1	Bearing-Sleeve
21	107-2488	1	Screw	45	106-8685	1	Axle
22	105-1872	1	Nut	46	104-5321	1	Bearing-Sleeve, Outboard
23	94-1936	1	Spring-Block	47	104-5322	1	Seal-Lip
24	94-1937	1	Washer-Block, Thrust	48	106-8686	1	Seal Kit

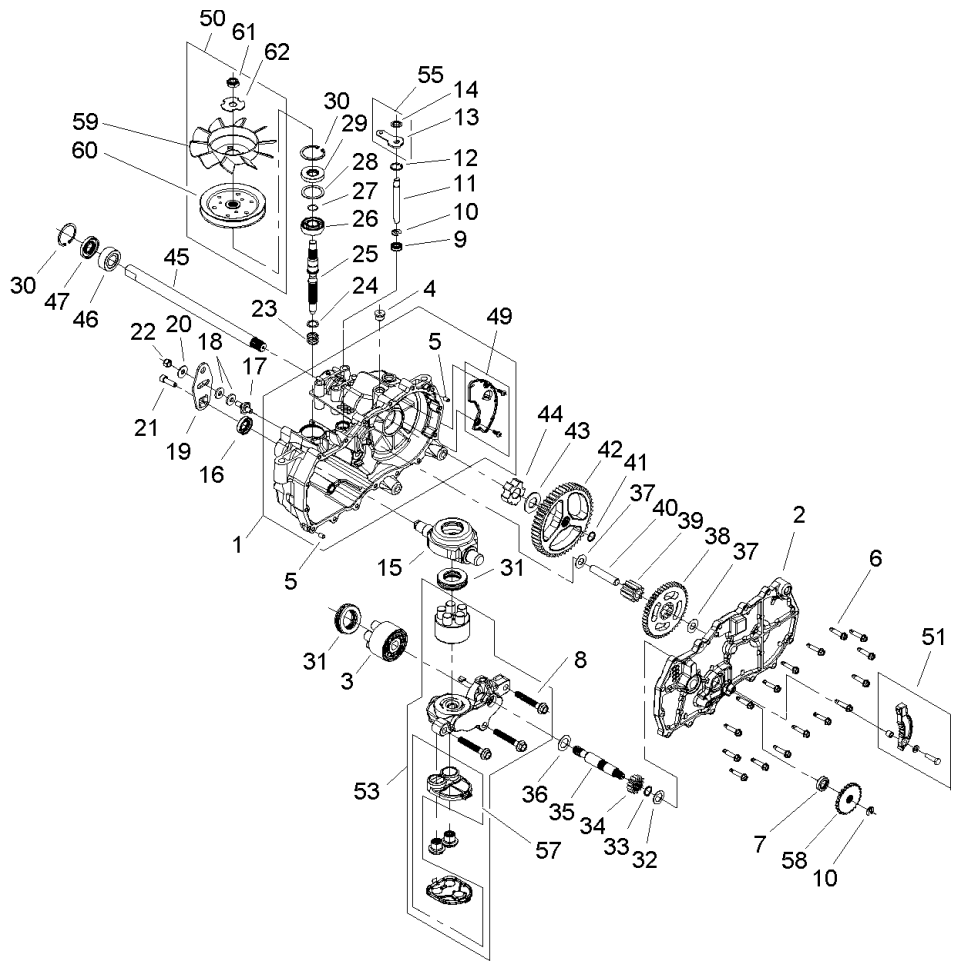 


LH Hydrostat Assembly Part No. 108-2394 (continued)

Ref	Part No.	Qty.	Description				
49	106-8697	1	RH Expansion Plate Kit				
50	106-8698	1	Fan Pulley Kit				
51	106-8688	1	Brake Arm Kit				
53	108-6190	1	RH 7-Piston Center Section Kit				
54	104-2147	1	Sealant				
55	107-2489	1	Bypass Arm Kit				
57	106-8693	1	Filter Kit				
58	106-8694	1	Disc-Brake, Cog				
59	110-8566	1	Fan-6 Inch, 10 Blade				
60	104-1754	1	Pulley				
61	105-1875	1	Nut-Lock				
62	107-9122	3	Washer-Slotted				

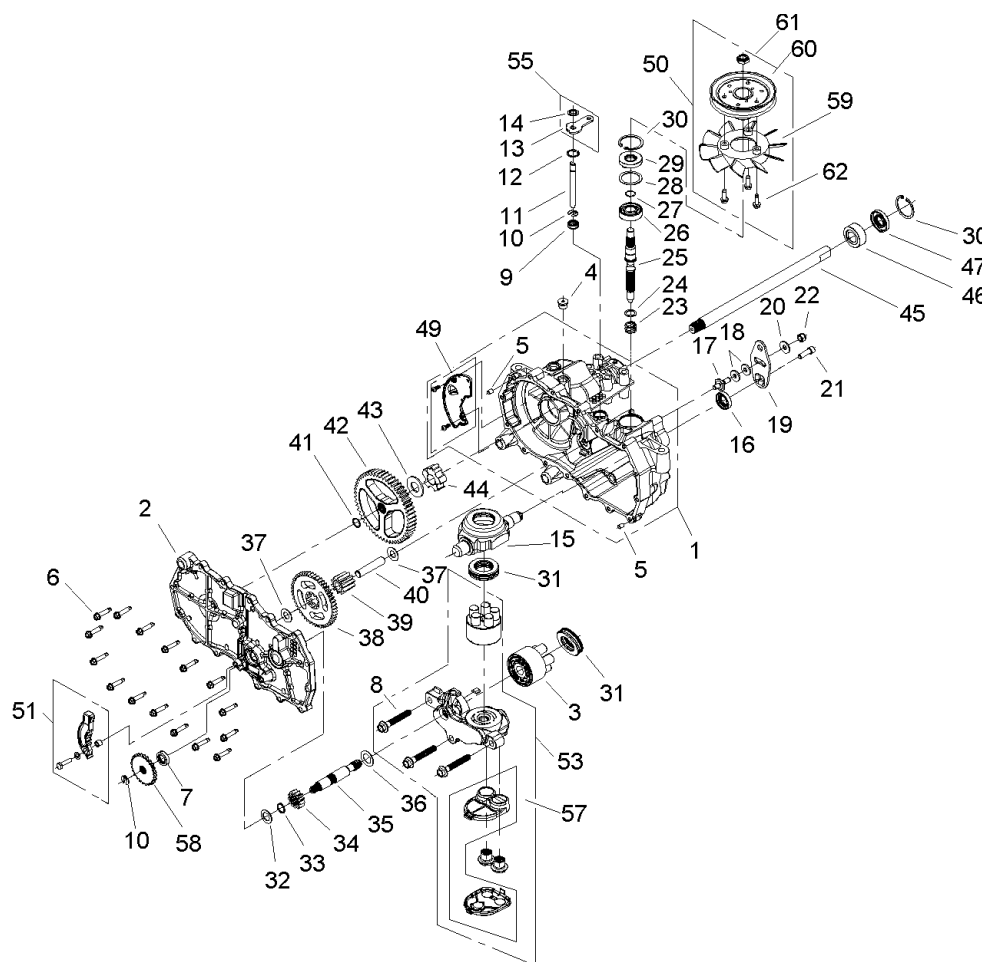 

RH Hydrostat Assembly Part No. 108-2393


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-8674	1	LH Main Housing ASM	25	104-5306	1	Shaft-Input
2	106-8675	1	LH Side ASM	26	104-5311	1	Bearing-Ball
3	103-2666	1	Cylinder Block Kit	27	104-5307	1	Ring-Retaining
4	104-2189	1	Plug-Thread, Straight	28	104-5308	1	Spacer
5	104-2170	2	Pin	29	104-5310	1	Seal-Lip
6	104-5305	16	Screw-HHF	30	104-5309	2	Ring-Retaining
7	104-5347	1	Seal-Oil	31	94-6922	2	Bearing-Thrust
8	94-6926	3	Bolt	32	104-5339	1	Washer-Flat
9	106-8676	1	Seal-Lip	33	104-5340	1	Ring-Retaining
10	106-8677	2	Ring-Retaining, EXT	34	104-5316	1	Gear-Pinion, 13T
11	106-8678	1	Rod-Bypass	35	106-8683	1	Shaft-Motor
12	106-8679	1	Ring-Retaining, Int	36	104-5360	1	Washer-Shaft, Motor
13	107-2490	1	Arm-Bypass	37	94-1933	2	Washer
14	106-8681	1	Ring-Retaining, EXT	38	104-5317	1	Gear
15	104-5304	1	Swashplate-Trunnion	39	104-5318	1	Gear-Jackshaft, 10T
16	104-5313	1	Seal-Lip	40	104-5329	1	Pin-Jackshaft
17	104-2116	1	Stud	41	104-5328	1	Ring-Retaining, Spiral
18	105-1873	2	Puck-Friction	42	106-8684	1	Gear-Bull, 52T
19	106-8747	1	Arm-Control	43	94-1943	1	Washer
20	5-4460	1	Washer-Pivot	44	104-5320	1	Bearing-Sleeve
21	107-2488	1	Screw	45	106-8685	1	Axle
22	105-1872	1	Nut	46	104-5321	1	Bearing-Sleeve, Outboard
23	94-1936	1	Spring-Block	47	104-5322	1	Seal-Lip
24	94-1937	1	Washer-Block, Thrust	48	106-8686	1	Seal Kit

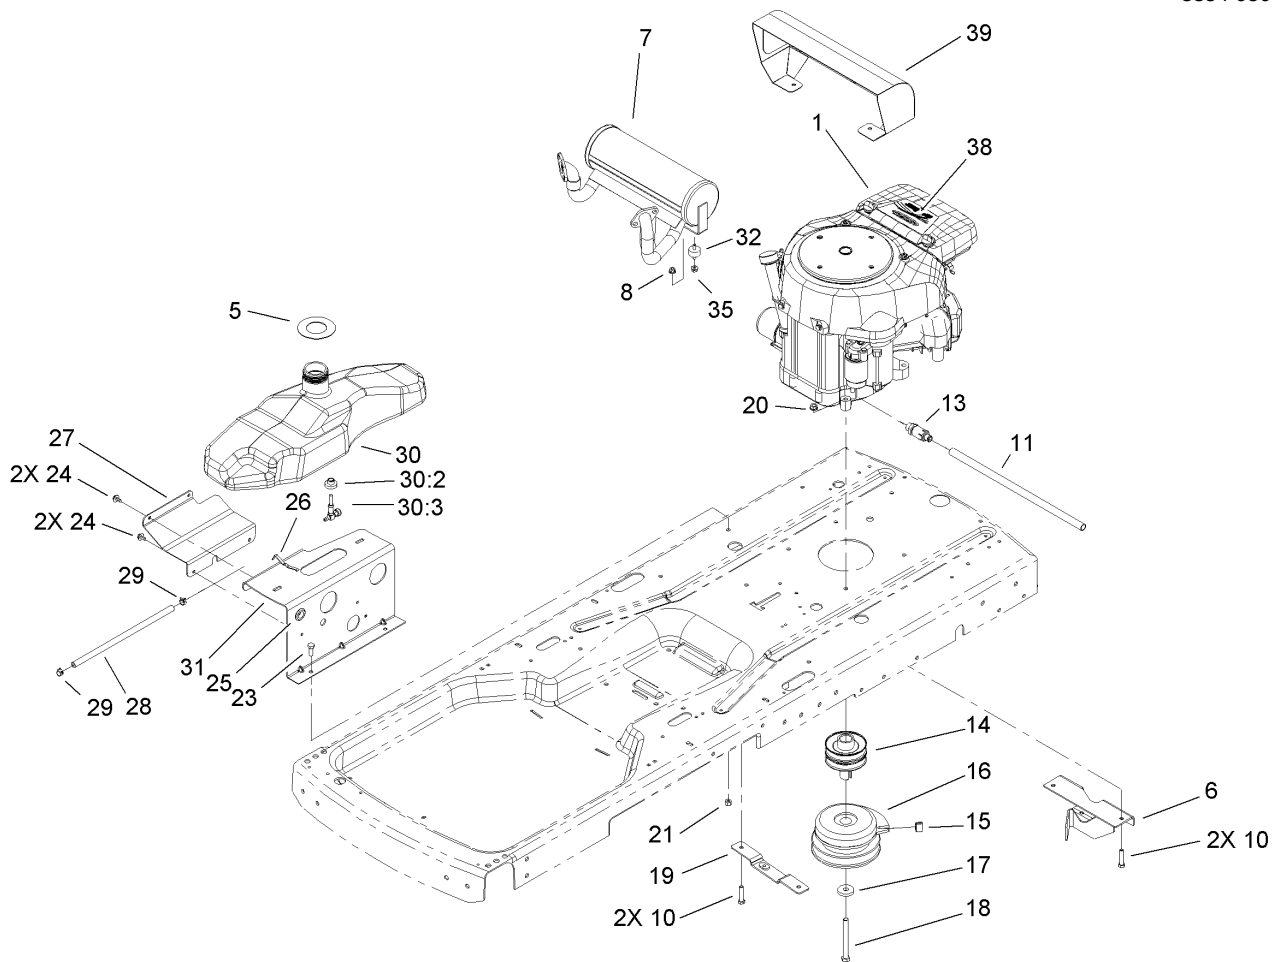 

Engine Assembly

Ref	Part No.	Qty.	Description
1		1	Engine-Honda, Gxv 530 Exa2Lb
5	55-9310	1	Seal-Foam
6	107-4873	1	Bracket-Pivot
7	110-8625	1	Muffler
8	32128-33	2	Nut-HF
10	322-9	4	Screw-HH
11	106-7022	1	Tube-Drain, Oil
13	92-6877	1	Valve-Drain, Oil
14	105-3472	1	Pulley-Engine
15	98-5023	1	Bumper
16	104-3334	1	Clutch-Electric
17	112843	1	Washer
18	3212-16	1	Screw-HH
19	106-2156	1	Plate-Mount, Idler
20	32128-25	4	Nut-HF
21	3296-29	2	Nut-Lock, NI
23	322-4	2	Screw-HH
24	46-8560	4	Screw-HHF
25	237-124	1	Grommet
26	609830	2	Spring
27	108-2315-03	1	Plate-Support
28	110-1876	1	Hose-Fuel
29	2412-98	2	Clamp
30	107-9172	1	Fuel Tank ASM


Ref	Part No.	Qty.	Description
30:2	46-6560	1	Bushing
30:3	110-6565	1	Valve-Fuel
31	108-2314-03	1	Plate-Tank
32	108-6183	2	Isolator-Rubber
35	32128-32	2	Nut-HHF
38	108-9557	1	Decal-Engine
39	110-8623-03	1	Shield-Muffler

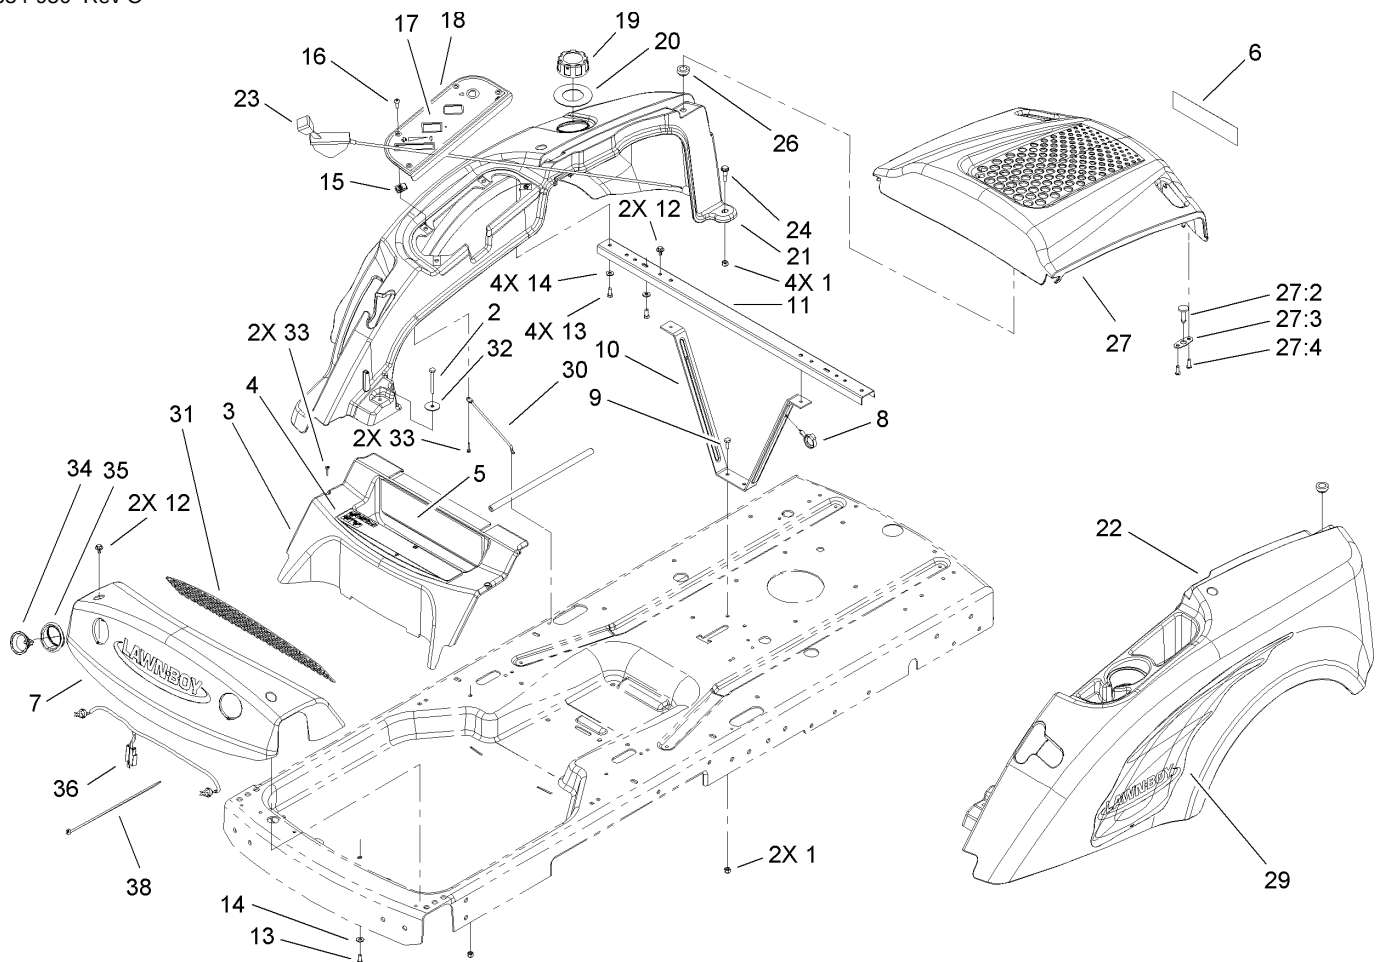 

Styling Assembly


Ref	Part No.	Qty.	Description
1	3296-42	6	Nut-Lock, NI
2	321-18	2	Screw-HH
3	110-6541	1	Panel-Kick
4	108-8575	1	Decal-Danger, Ce
5	108-6147	1	Decal
6	110-6556	1	Decal-Logo
7	108-2328	1	Footrest
8	105-1853	2	Clamp-Hose
9	321-4	2	Screw-HH
10	107-9173-03	1	Brace-Support
11	108-2313-03	1	Channel-Cross
12	46-8560	4	Screw-HHF
13	46-8090	5	Screw-Plastite
14	3256-22	5	Washer-Flat
15	107069	4	Clip
16	3258-166	4	Screw-PRH
17	108-2364	1	Decal
18	107-9174-03	1	Panel-Control
19	93-7198	1	Gas Cap ASM
20	108-6150	1	Washer-Seal, Rubber
21	107-9168	1	Cover-Side, RH
22	107-9169	1	Cover-Side, LH
23	104-8081	1	Cable-Throttle
24	108-6182	2	Screw-Shoulder

Ref	Part No.	Qty.	Description
26	108-2305	2	Grommet
27	108-2334	1	Hood Cover ASM
27:2	107-9198	2	Pin-Hood
27:3	107-9199	2	Plate
27:4	94-6961	4	Screw
28	110-6554	1	Decal-Side Cover, RH
29	110-6553	1	Decal-Side Cover, LH
30	108-2391	2	Rod-Support
31	108-6162	1	Footmat-Footrest
32	3256-58	2	Washer-Flat
33	94-4496	4	Screw-PPH
34	107-9179	2	Light-Halogen
35	107-9178	2	Bezel-Rubber
36	108-6159	1	Harness-Headlights, Footrest
38	250-4	2	Tie-Cable

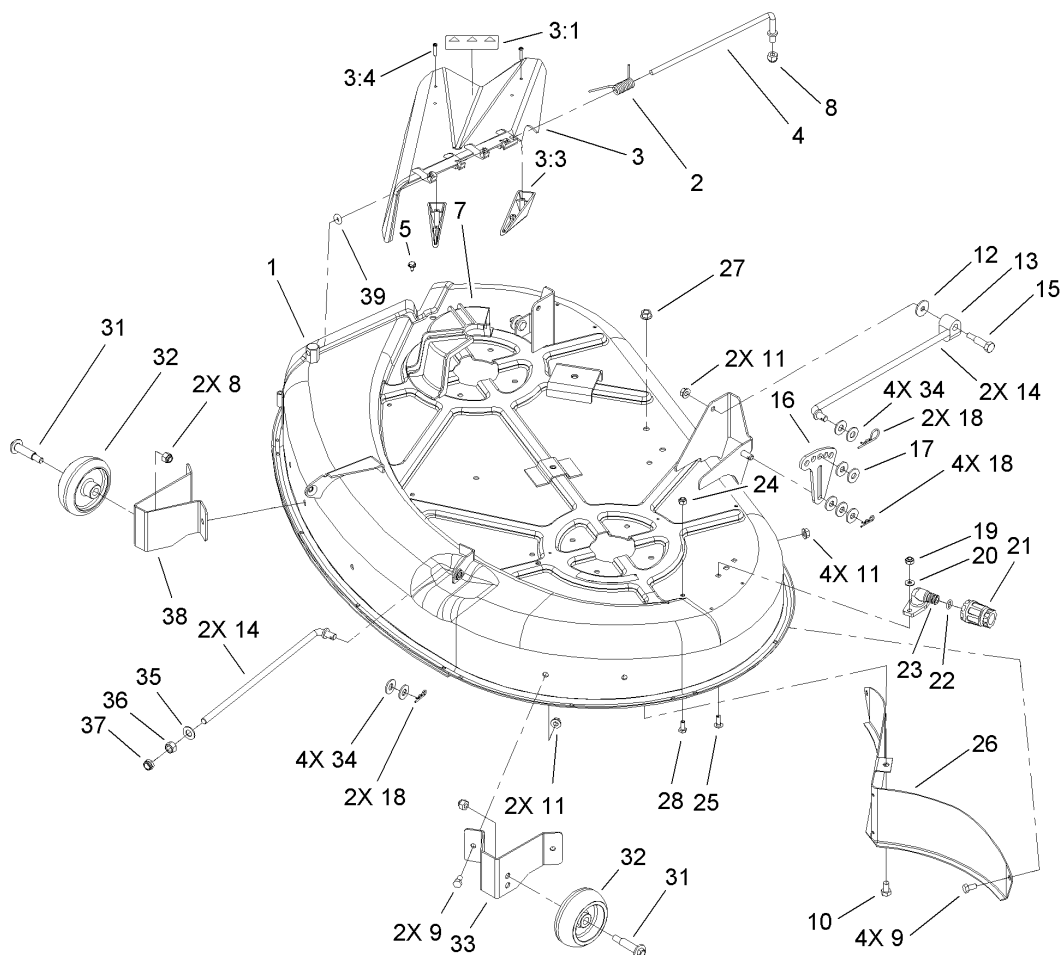 


42in Deck Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	110-1899	1	42 Inch Deck ASM	22	46-6290	1	O-Ring
2	57-6950	1	Spring	23	95-2747	1	Fitting-Washout
3	93-7695	1	Deflector ASM	24	3296-42	1	Nut-Lock, NI
3:1	93-7010	1	Decal-Danger	25	3229-1	2	Screw-CARR
3:3	93-7696	2	Kicker	26	108-8513-03	1	Baffle-Rear
3:4	93-0231	4	Screw-PPH	27	32128-21	1	Nut-HF
4	95-1661	1	Rod-Pivot	28	321-3	1	Screw-HH
5	32104-76	5	Screw	31	56-6591	2	Bolt-Wheel
6	88-4030	1	Guide-Belt, Deck (LH)	32	701756	2	Wheel-Gage
7	88-4020	1	Guide-Belt, Deck (RH)	33	106-8702-03	1	Bracket-Gage Wheel, Front (LH)
8	3296-39	3	Nut-Lock, NI	34	3256-4	8	Washer-Flat
9	322-2	6	Screw-HH	35	3256-25	2	Washer-Flat
10	323-34	1	Screw-HH	36	3219-4	2	Nut-Hex
11	32128-25	8	Nut-HF	37	3296-38	2	Nut-Lock, NI
12	5-4460	2	Washer-Pivot	38	106-8701-03	1	Bracket-Gage Wheel, Front (RH)
13	88-4230	2	Trunnion-HOC	39	106-8745	1	O-Ring
14	105-3437	4	Rod-Hanger				
15	7-0030	2	Bolt-Shoulder				
16	88-5570-03	2	Link-Adjusting, HOC				
17	80-6990	10	Washer-Hardened				
18	9335054	8	Pin-Hair				
19	3296-16	2	Nut-Lock, NI				
20	3256-1	2	Washer-Flat				
21	95-3270	1	Connector-Hose				

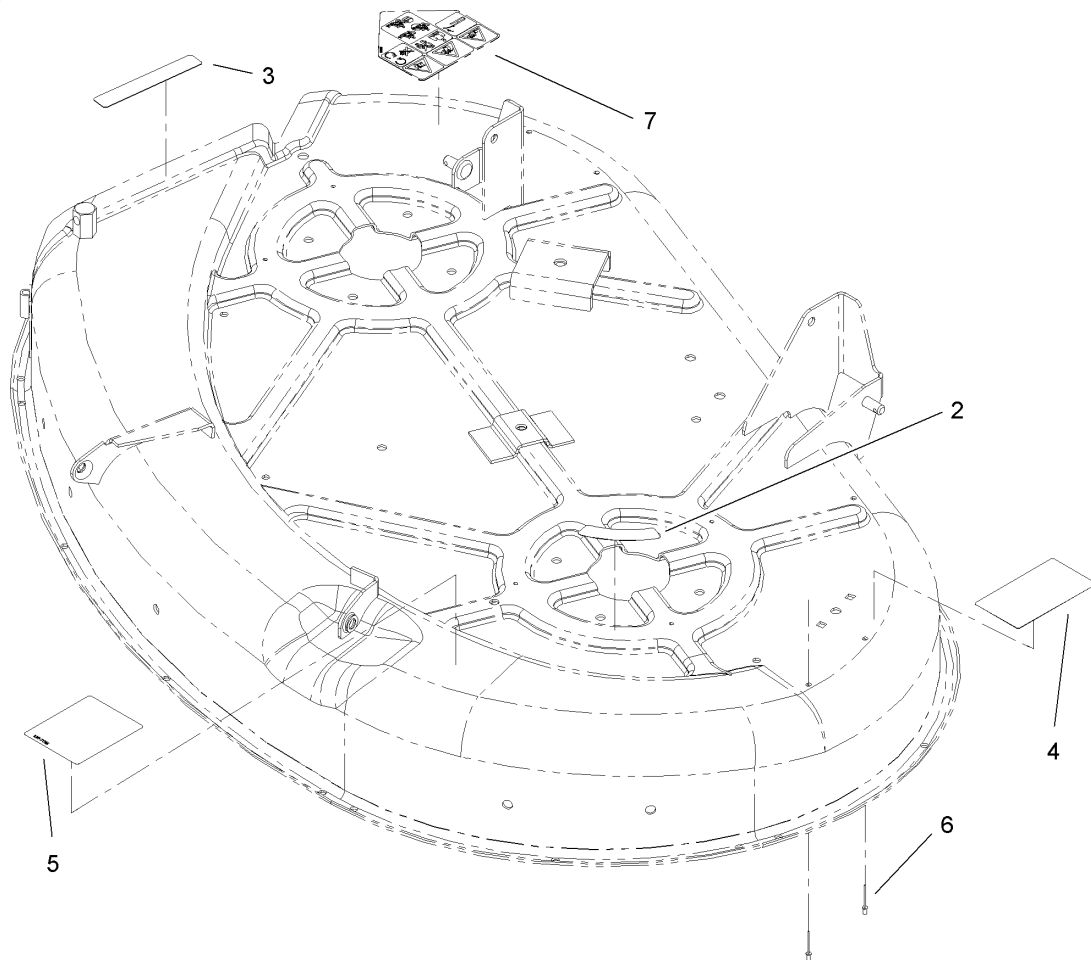 


42in Deck Assembly No. 110-1899

Ref	Part No.	Qty.	Description
2	93-6677	1	Decal-Shield, Danger
3	93-7009	1	Decal-Danger
4	93-7010	1	Decal-Danger
5	105-7015	1	Decal-Routing, Belt
6	3290-282	2	Rivet-Pop
7	110-1868	1	Decal-Danger, Shield

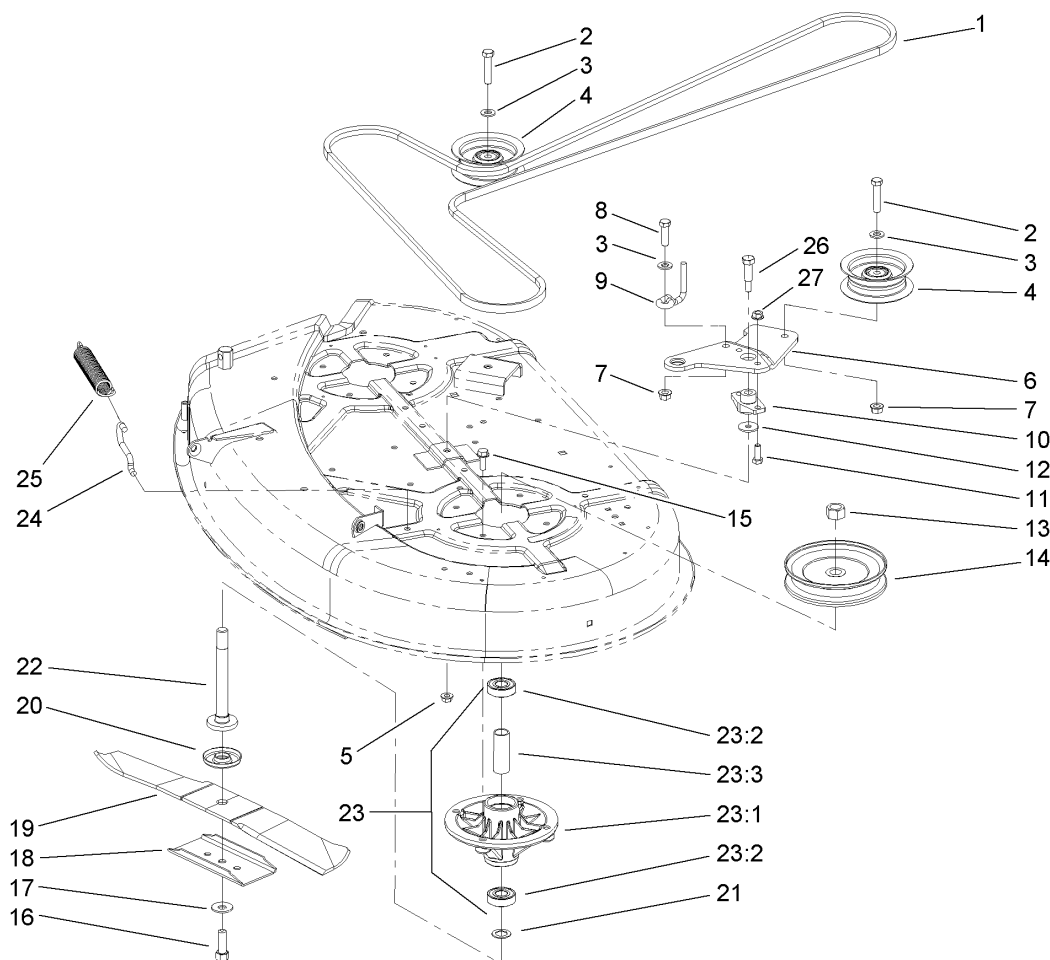 


Spindle and Belt Drive Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-2173	1	Belt-V	23:2	100-1048	2	Bearing-Ball
2	323-9	2	Screw-HH	23:3	62-3661	1	Spacer-Bearing
3	3256-24	3	Washer-Flat	24	88-5970	1	Hook-Return, Spring
4	106-2175	2	Pulley-Idler, Flat	25	106-2177	1	Spring-Extension
5	32128-25	1	Nut-HF	26	7-0030	1	Bolt-Shoulder
6	107-2467-03	1	Arm-Idler	27	3296-29	2	Nut-Lock, NI
7	32128-21	2	Nut-HF				
8	323-7	1	Screw-HH				
9	107-7307	1	Guide-Idler, Belt				
10	88-4980	1	Bushing-Arm, Idler				
11	322-4	2	Screw-HH				
12	5-4460	1	Washer-Pivot				
13	3219-6	2	Nut-Hex				
14	88-5330	2	Pully-Deck				
15	32144-41	8	Screw-Taptite				
16	26-0671	2	Screw-Blade				
17	3290-465	2	Washer-Belleville				
18	106-2248-03	2	Stiffener-Blade				
19	106-2247-03	2	Blade				
20	80-4360	2	Shield-Bearing				
21	80-4380	2	Spacer				
22	80-4341	2	Shaft				
23		2	Spindle ASM				
23:1	88-4510	1	Housing-Spindle				

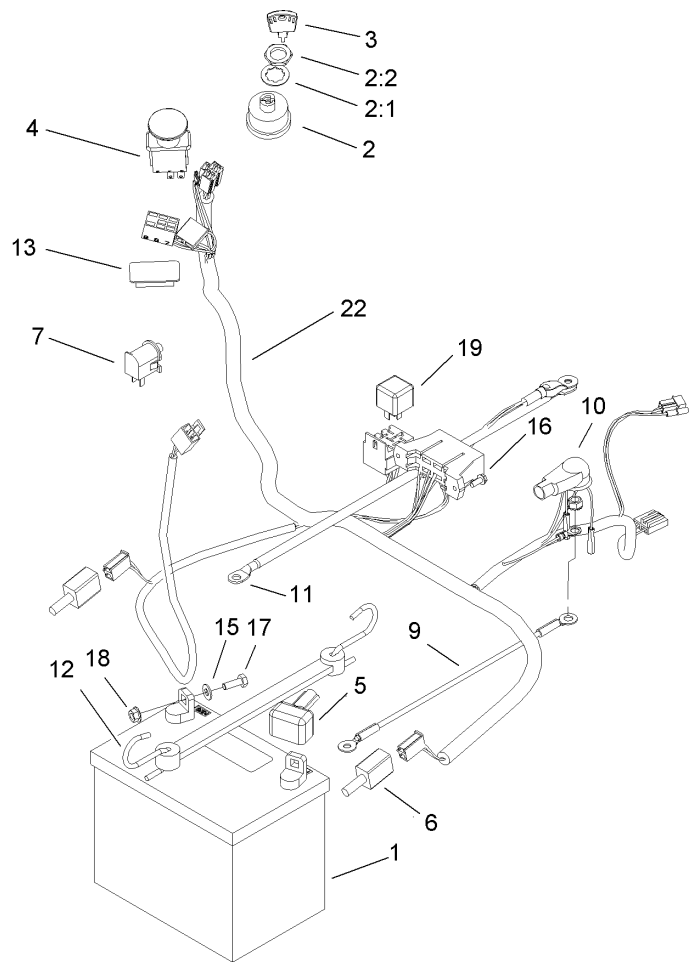 

Electrical Assembly


Ref	Part No.	Qty.	Description				
1	104-2491	1	Battery-Dry				
2	88-9830	1	Key Switch ASM				
2:1	3254-5	1	Washer-Tooth				
2:2	218-461	1	Nut-HH				
3	700918	1	Key				
4	95-7489	1	Switch-PTO				
5	28-8080	1	Boot-Terminal				
6	106-2216	2	Switch				
7	82-2190	1	Switch-Bail				
9	93-1189	1	Wire ASM				
10	93-3190	1	Boot-Insulator, Terminal				
11	95-7654	1	Cable				
12	104-2466	1	Holddown-Battery				
13	95-8999	1	Switch				
15	3256-22	2	Washer-Flat				
16	32144-1	4	Screw-Taptite				
17	321-4	2	Screw-HH				
18	32128-33	2	Nut-HF				
19	98-7249	2	Relay				
22	108-6155	1	Harness-Wire W/Lights				
199	33004-00	1	Nut-HF				

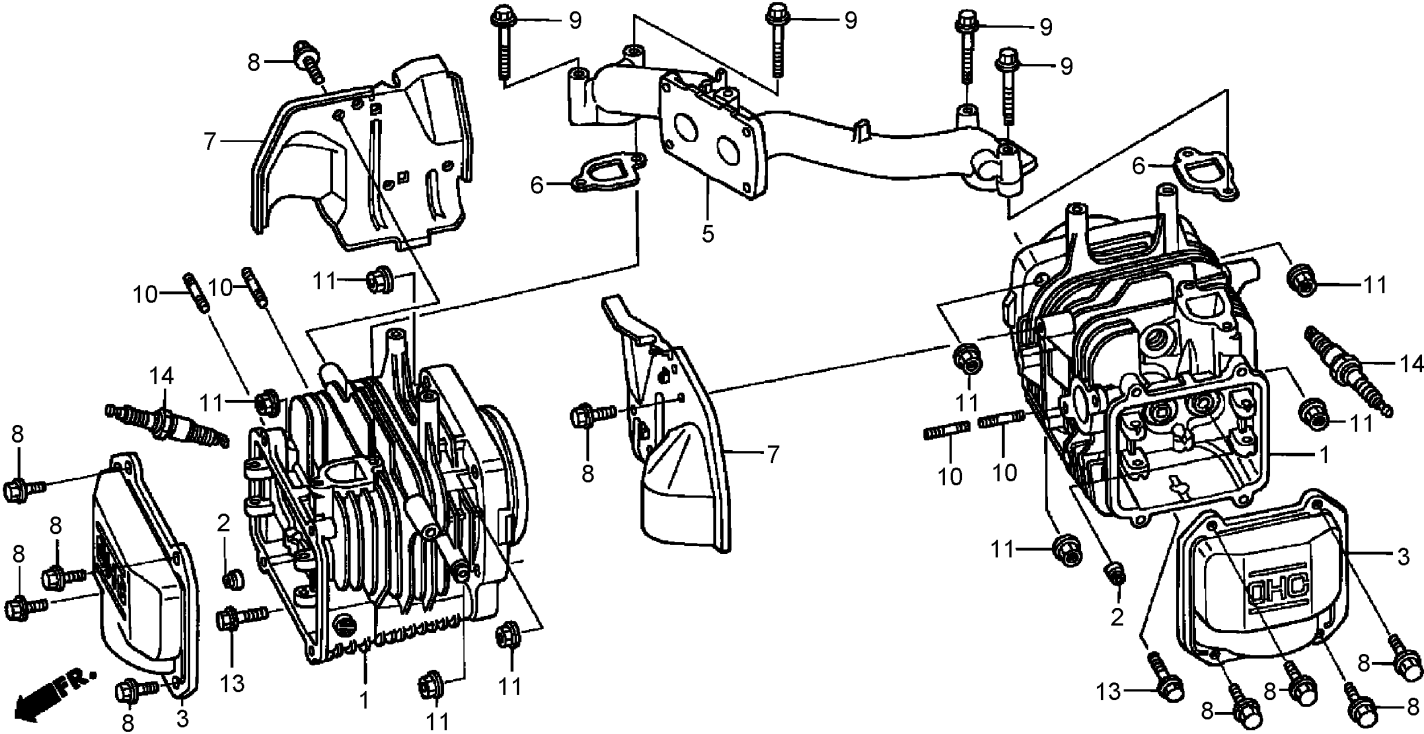 

Cylinder Assembly
Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description
❶1	12100-Z0A-406	2	Cylinder
❷2	12209-422-005	2	Seal-Stem, Valve
❸3	12311-Z0A-000	2	Cover-Head
❺5	17101-Z0A-000	1	Manifold-Intake
❻6	17151-Z0A-000	2	Gasket-Manifold, Intake
❽7	19631-Z0A-000	2	Shroud
❽8	90013-883-000	10	Bolt-Flange (6X12) (C T200)
❽9	90016-ZE8-000	4	Bolt-Flange (6X45) (C T200)
❽10	90045-892-000	4	Bolt-Stud (6X28)
❽11	90201-Z0A-000	8	Nut-Flange (8Mm)
❽13	95701-06030-00	2	Bolt-Flange (6X30)
❽14	98079-54846	2	Spark Plug (B P R4E S) (N G K)
❽14	98079-54855	2	Spark Plug (W14E P R-U) (Denso)
❽14	98079-55846	2	Spark Plug (B P R 5E S) (N G K)

Ref	Part No.	Qty.	Description
❽14	98079-55855	2	Spark Plug (W16E P R-U) (Denso)

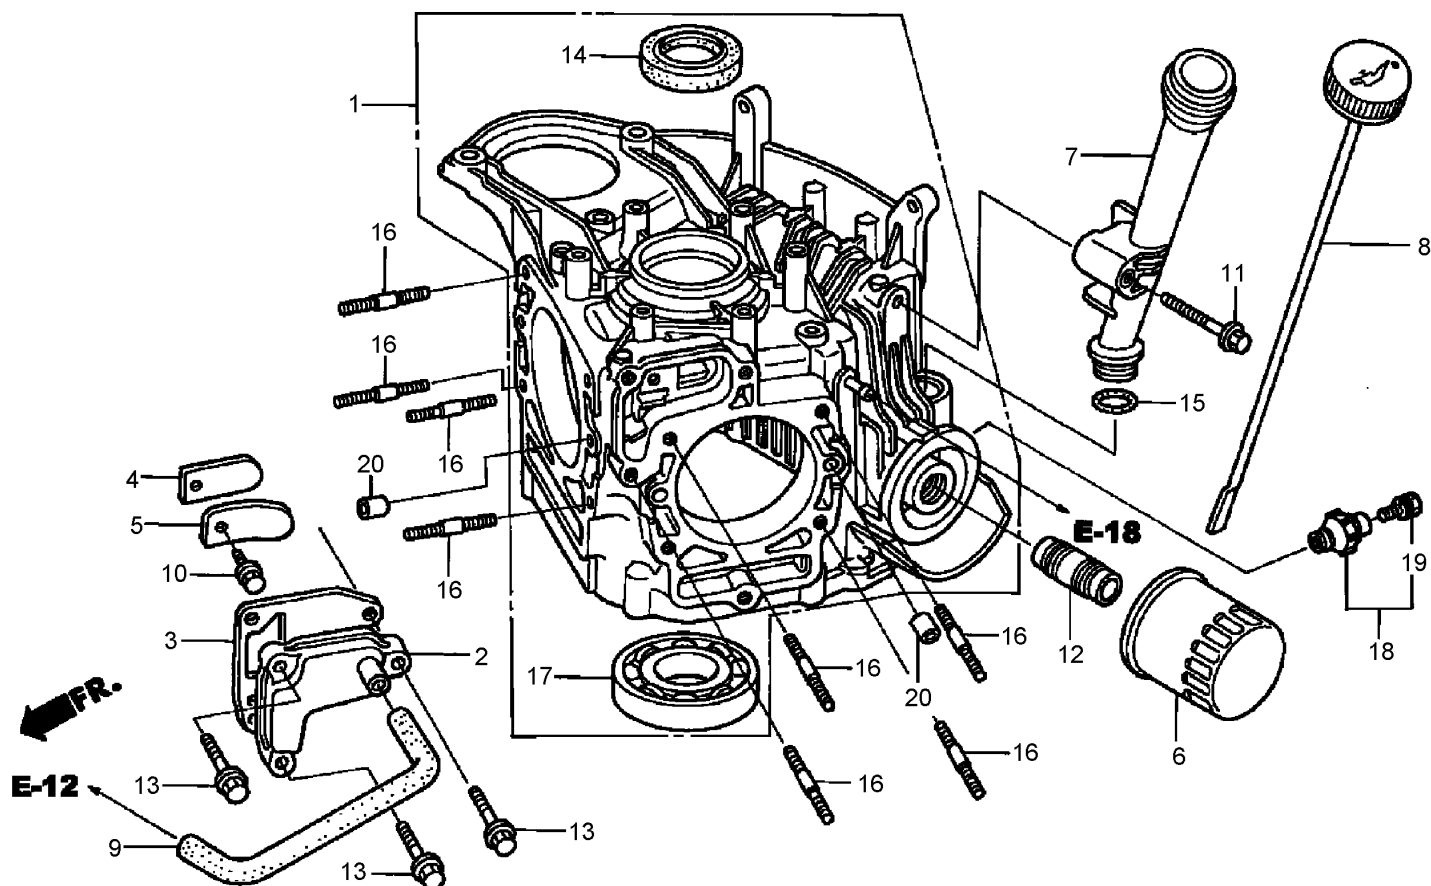 


Crankcase Assembly Honda GXV530 EXA2LB

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶	11100-Z0A-409	1	Crankcase ASM (840)	❶❹	91201-ZE3-004	1	Seal-Oil (35X5X8)
❷	12356-Z0A-000	1	Cover-Breather	❶❺	91301-ZE9-003	1	O-Ring (22.5X2.2)
❸	12358-Z0A-000	1	Gasket-Cover, Breather	❶❻	92900-08028-0E	8	Bolt-Stud (8X28)
❹	12372-ZA0-701	1	Plate-Valve	❶❼	96100-62070-00	1	Bearing-Ball, Radial
❺	12374-Z0A-000	1	Stopper-Valve	❶❽	35490-Z0A-003	1	Oil Pressure Switch ASM
❻	15410-MCJ-000	1	Filter-Oil (Toyo Roki)	❶❾	90002-PA6-003	1	Bolt-Washer (4X8) (Denso)
❼	15631-Z0A-000	1	Extension-Filler, Oil	❶❿	94301-08140	4	Pin-Dowel (8X14)
❽	15655-Z0A-800	1	Dipstick-Oil				
❾	15721-Z0A-000	1	Tube-Breather				
❿	90002-892-000	1	Bolt-Flange (5X10)				
❶❶	90016-ZE8-000	1	Bolt-Flange (6X45) (C T200)				
❶❷	90018-PN3-000	1	Holder-Filter, Oil				
❶❸	90121-952-000	3	Bolt-Flange (6X25) (C T 200)				

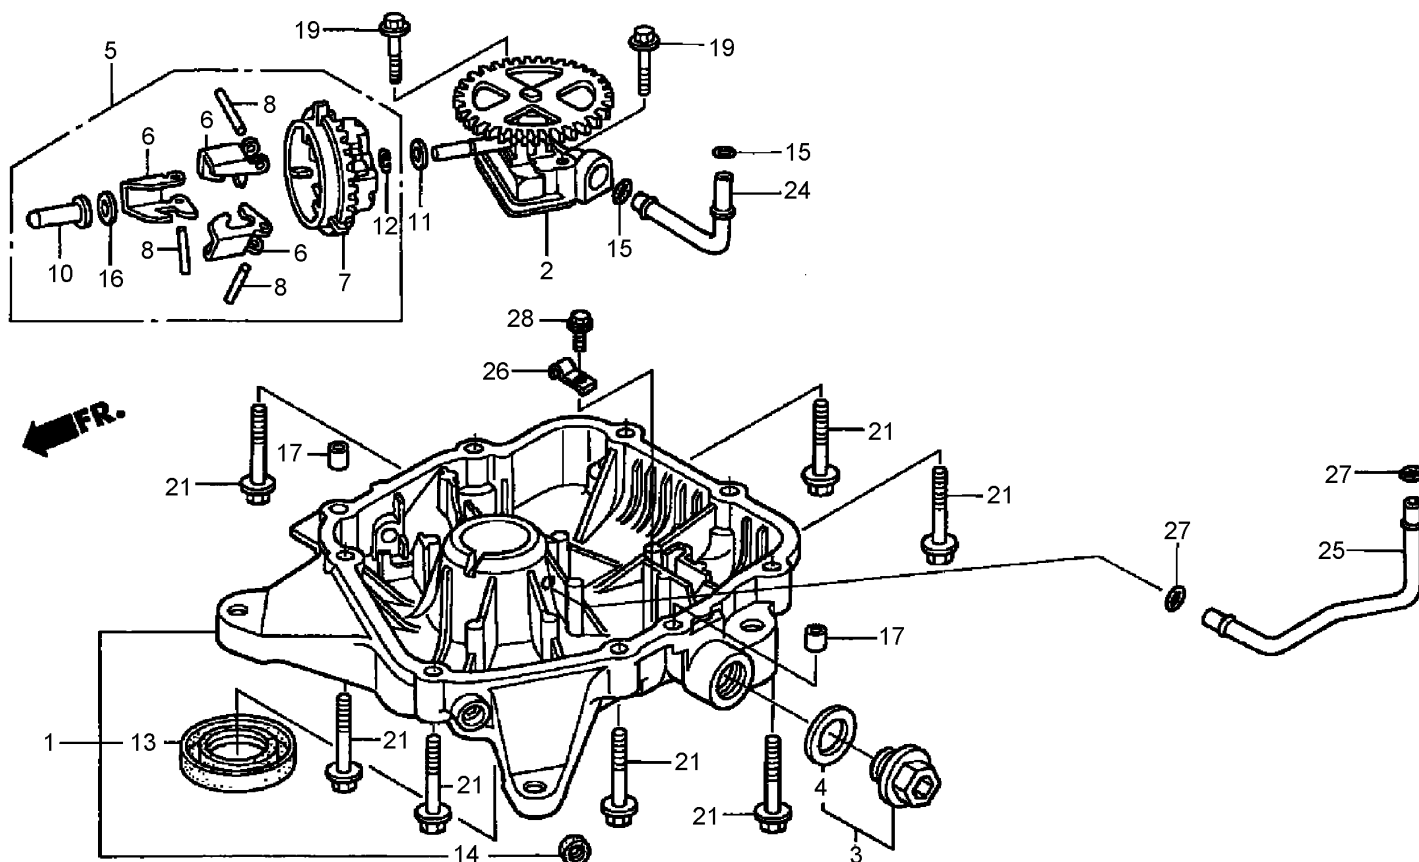 

Oil Pan Assembly Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶	11300-Z0A-830	1	Oil Pan ASM	❶15	91301-Z0A-003	2	O-Ring (7.5X2.3)
❷	15100-Z0A-811	1	Oil Pump ASM	❶16	94101-06800	1	Washer-Plain (6Mm)
❸	15550-Z0A-810	1	Drain Cap ASM	❶17	94301-08140	2	Pin-Dowel (8X14)
❹	15625-ZE1-003	1	Gasket-Cap, Oil Filler	❶19	95701-06035-00	1	Bolt-Flange (6X35)
❺	16510-Z0A-000	1	Governor ASM	❶21	95701-08040-00	7	Bolt-Flange (8X40)
❻	16511-Z0A-000	3	Weight-Governor	❶24	15161-Z0A-000	1	Pipe-Pump, Oil
❼	16512-Z0A-000	1	Holder-Weight, Governor	❶25	15162-Z0A-800	1	Pipe-Supply, Oil
❽	16513-ZE2-000	3	Pin-Weight, Governor	❶26	15163-Z0A-000	1	Holder-Pipe, Oil
❿	16531-Z0A-000	1	Slider-Governor	❶27	91302-Z0A-003	2	O-Ring (5.8X2)
❾11	90473-147-000	1	Washer (6X16)	❶28	95701-06012-00	1	Bolt-Flange (6X12)
❾12	90602-ZE1-000	1	Clip-Holder, Governor				
❾13	91202-Z0A-003	1	Seal-Oil (31X50X8)				
❾14	91259-VM0-000	1	Seal-Oil (10X16X4.5)				

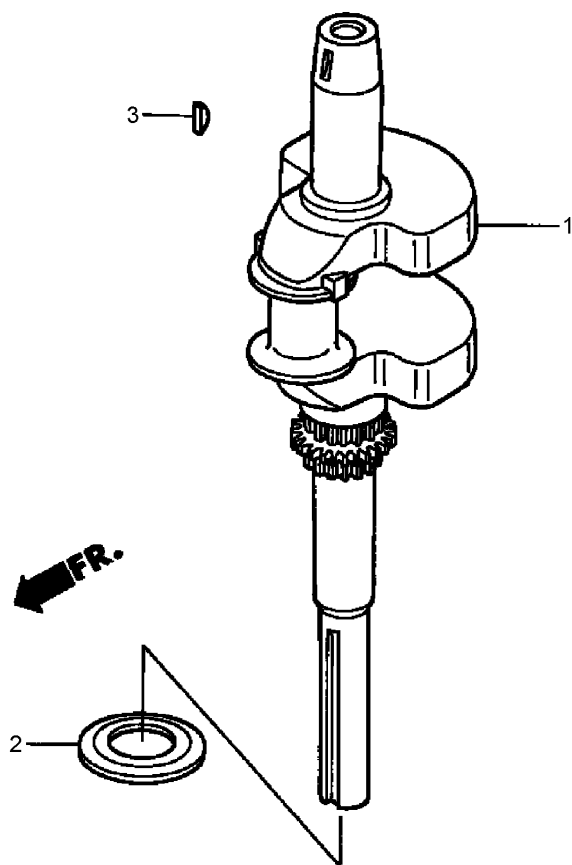 

Crankshaft Assembly


Honda GXV530 EXA2LB

Ref	Part No.	Qty.	Description
❸1	13310-Z0A-800	1	Crankshaft
❸2	90401-Z0A-000	1	Washer-Thrust
❸3	90741-ZE2-000	1	Key-Woodruff, Special (25X18)

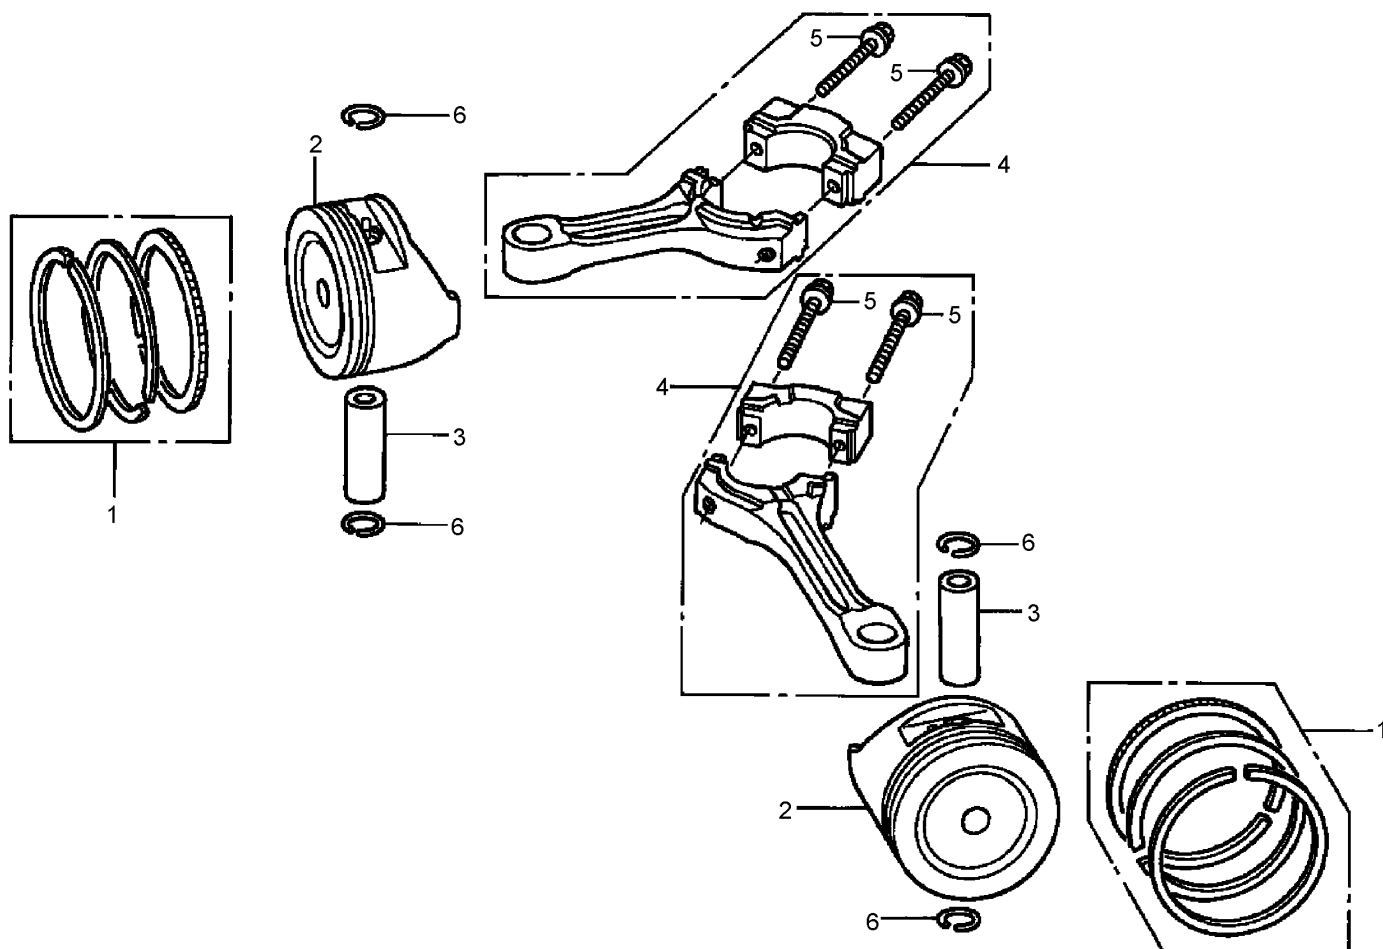 


Piston and Connecting Rod Assembly Honda GXV530 EXA2LB

Ref	Part No.	Qty.	Description				
❸1	13010-Z0A-003	2	Piston Ring Set (STD) (Nippon)				
❸1	13010-Z0A-014	2	Piston Ring Set				
❸2	13101-Z0A-800	2	Piston (STD)				
❸3	13111-ZJ1-840	2	Pin-Piston				
❸4	13200-Z0A-801	2	Connecting Rod ASM				
❸5	90001-ZN1-000	4	Bolt-Rod, Connecting (6X37)				
❸6	90551-ZE1-000	4	Clip-Pin, Piston (18 Mm)				

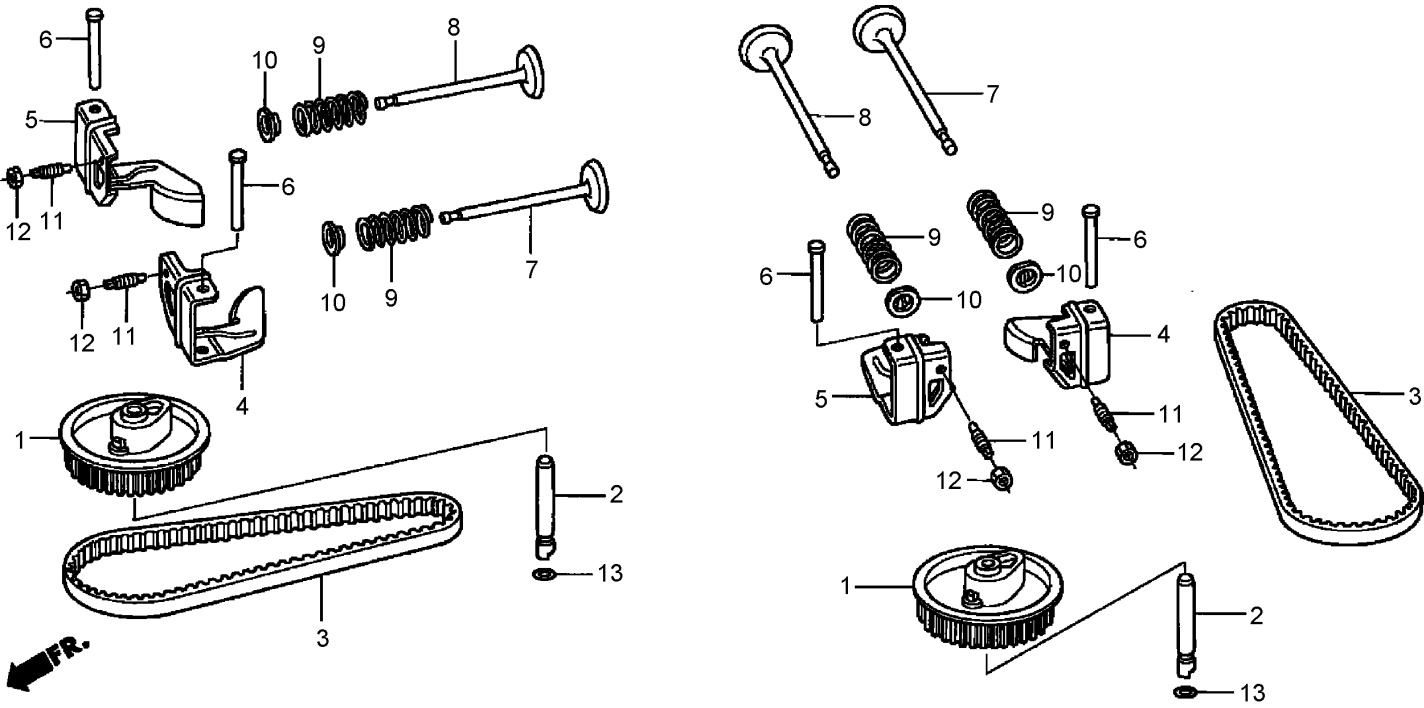 


Camshaft Assembly
Honda GXV530 EXA2LB

Ref	Part No.	Qty.	Description				
❶1	14320-Z0A-000	2	Pulley-Camshaft				
❷2	14324-ZL8-000	2	Shaft-Pulley, Cam				
❸3	14400-Z0A-003	2	Belt-Timing (97Hu8 G-200)				
❹4	14431-Z0A-000	2	Arm-Valve Rocker, Intake				
❺5	14441-Z0A-000	2	Arm-Valve Rocker, Exhaust				
❻6	14461-Z0A-000	4	Shaft-Arm, Rocker				
❼7	14711-Z0A-000	2	Valve-Intake				
❽8	14721-Z0A-000	2	Valve-Exhaust				
❾9	14751-ZE1-000	4	Spring-Valve				
❿10	14771-ZE1-000	4	Retainer-Spring, Valve (Intake)				
⓫11	90012-333-000	4	Screw-Adjusting, Tappet				
⓬12	90206-001-000	4	Nut-Adjusting, Tappet				
⓭13	91301-ZM0-V31	2	O-Ring (6.8X19) (Arai)				

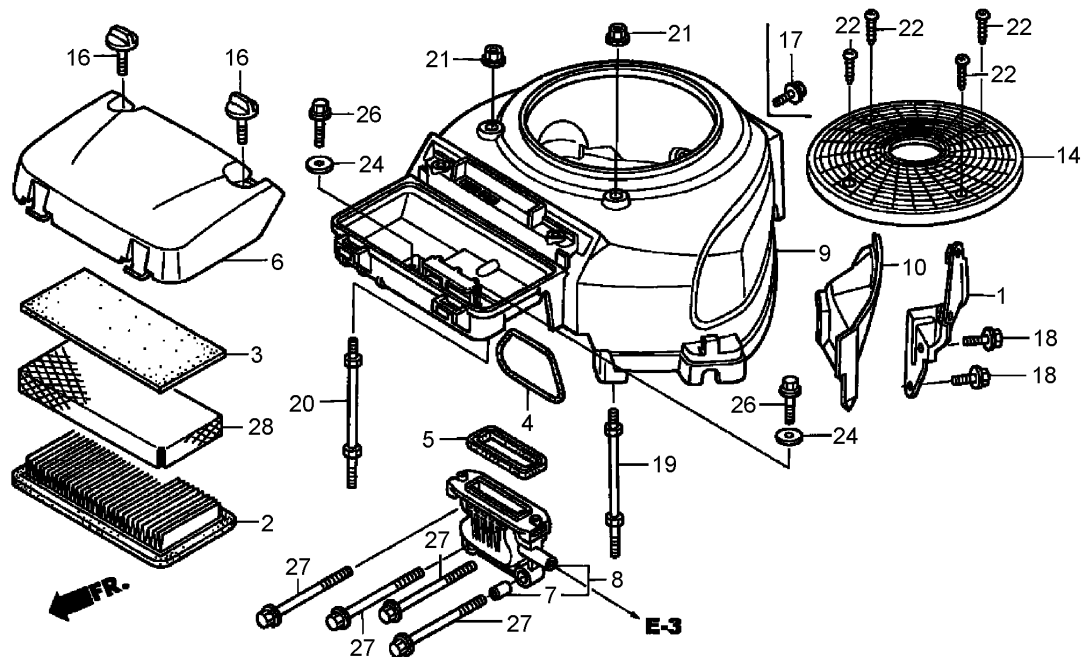 

Fan Cover Assembly Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	16711-Z0A-000	1	Stay-Pump, Fuel	❶18	90014-952-000	2	Bolt-Flange (6X14) (C T200)
❶2	17211-Z0A-013	1	Element-Cleaner, Air	❶19	90044-Z0A-000	1	Bolt-Stud, Left (Ignition Coil)
❶3	17218-Z0A-810	1	Filter (Outer)	❶20	90045-Z0A-000	1	Bolt-Stud, Right (Ignition Coil)
❶4	17228-Z0A-003	1	Gasket-Cleaner, Air	❶21	90201-ZM0-000	2	Nut-Flange (6Mm)
❶5	17229-Z0A-000	1	Seal-Housing, Air Cleaner	❶22	93913-24410	4	Screw-Tapping (4X16)
❶6	17231-Z0A-000	1	Cover-Cleaner, Air	❶22	93913-24780	4	Screw-Tapping (4X30) (P0)
❶7	17238-ZJ4-830	4	Collar A-Cleaner, Air	❶24	94103-06800	2	Washer-Plain (6Mm)
❶8	17410-Z0A-010	1	Elbow-Cleaner, Air	❶26	95701-06012-00	2	Bolt-Flange (6X12)
❶9	19611-Z0A-010ZA	1	Cover-Fan (Nh1) (Black)	❶27	95801-06100-00	4	Bolt-Flange (6X100)
❶10	19612-Z0A-000	1	Plate-Side	❶28	17212-Z0A-000	1	Grid-Cleaner, Air
❶14	28452-Z0A-000ZA	1	Grid-Screen Nh105 (Matte Black)				
❶16	90004-Z0A-000	2	Bolt (6Mm)				
❶17	90013-ZL8-000	2	Bolt-Flange (6X14) (Ct200)				

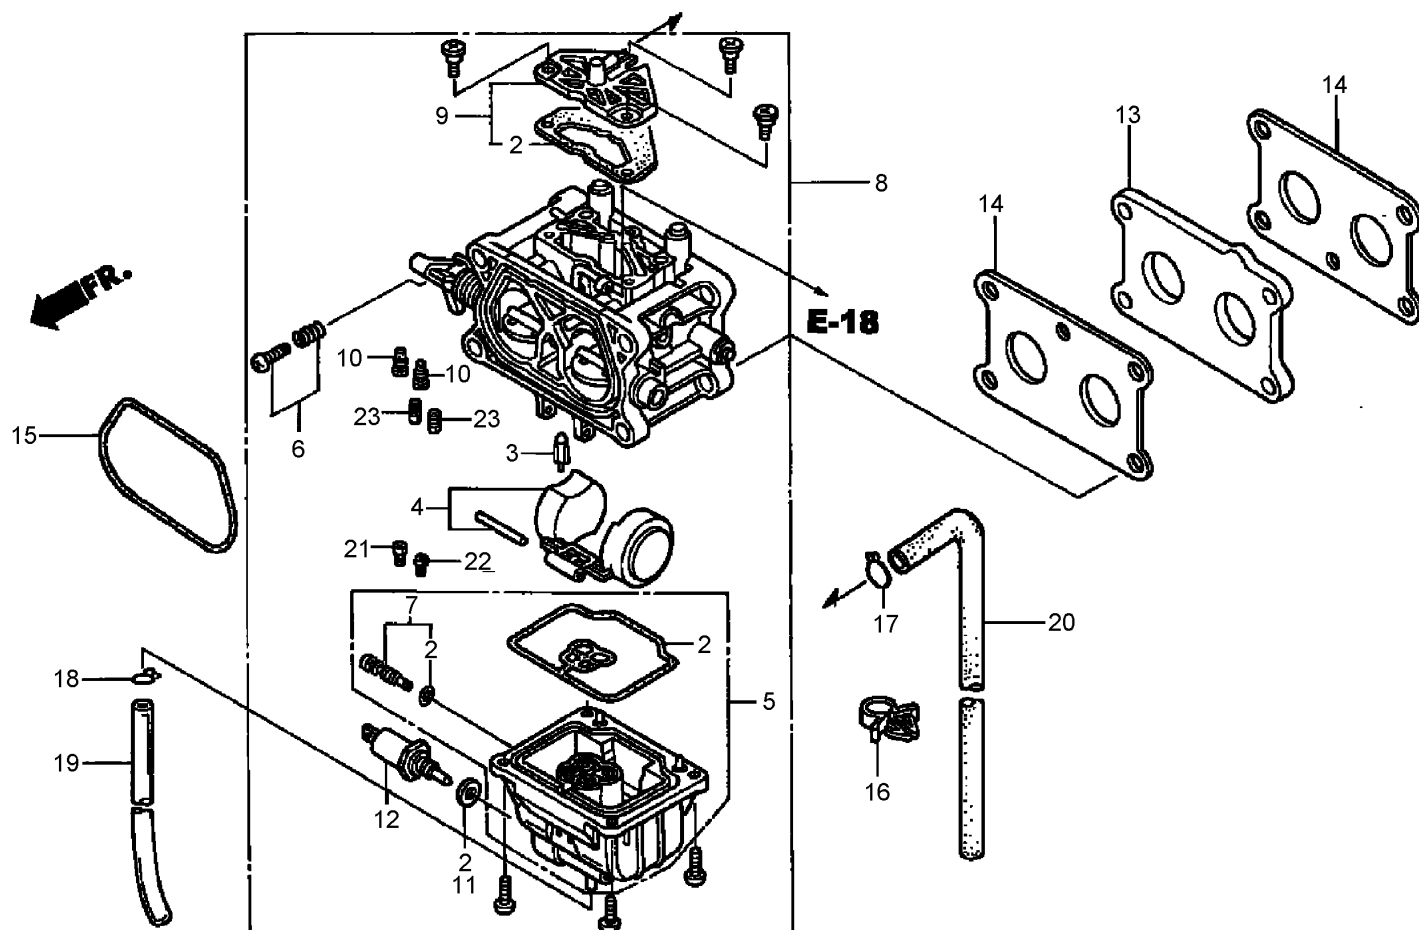 

Carburetor Assembly Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description
❶2	16010-Z0A-802	1	Gasket Set
❶3	16011-Z0A-004	1	Valve-Float
❶4	16013-Z0A-004	1	Float Set
❶5	16015-Z0A-802	1	Float Chamber Set
❶6	16016-Z0A-004	1	Screw-Set
❶7	16024-Z0A-004	1	Screw-Set, Drain
❶8	16100-Z0A-813	1	Carburetor ASM (Up To Engine Serial No. 1014986)
❶8	16100-Z0A-814	1	Carburetor ASM (Bw02B C) (Up To Engine Serial No. 1027210)
❶8	16100-Z0A-815	1	Carburetor ASM (Bw02B C) (From Engine Serial No.1027211 To 1061017)
❶8	16100-Z0P-V02	1	Carburetor ASM (Bw02C A) (From Engine Serial No. 1061018)
❶9	16139-Z0A-004	1	Air Vent Cover Set
❶10	16168-Z0A-004	2	Cap
❶11	16178-Z0A-802	1	Gasket

Ref	Part No.	Qty.	Description
❶12	16200-Z0A-802	1	Solenoid Valve ASM
❶13	16211-Z0A-000	1	Insulator-Carburetor
❶14	16212-Z0A-000	2	Gasket-Insulator
❶15	17228-Z0A-003	1	Gasket-Cleaner, Air
❶16	90659-680-013	1	Clip-Harness, Wire
❶17	95002-02080	1	Clip-Tube (B8)
❶18	95002-02650	1	Clip-Tube (B6.5)
❶19	95003-07008-60M	1	Hose-Bulk, Vinyl (4X7X8000) (4X7X300)
❶19	95003-07008-60M	1	Hose-Bulk, Vinyl (4X7X8000) (4X7X300)
❶20	95005-45001-20M	1	Hose-Bulk, Vacuum (45X1000) (45X400)
❶20	95005-45001-20M	1	Hose-Bulk, Vacuum (45X1000) (45X400)
❶21	99131-Z0A-0820	1	Jet-Main (No. 82.5)
❶21	99131-Z0A-0850	1	Jet-Main (No. 85)
❶21	99131-Z0A-0870	1	Jet-Main (No. 87.5)

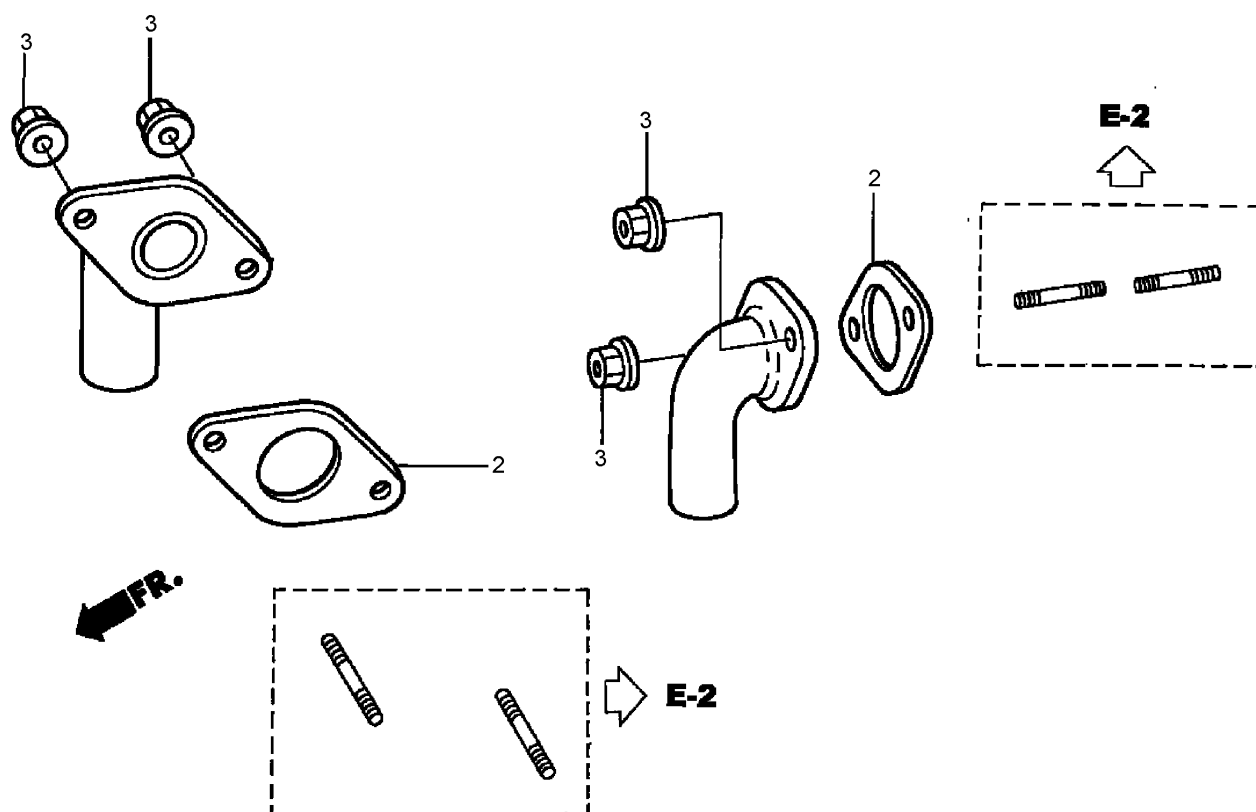 

Exhaust Pipe Assembly Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description
②	18333-Z0A-000	2	Gasket-Pipe, Exhaust
③	94050-06000	4	Nut-Flange (6 Mm)

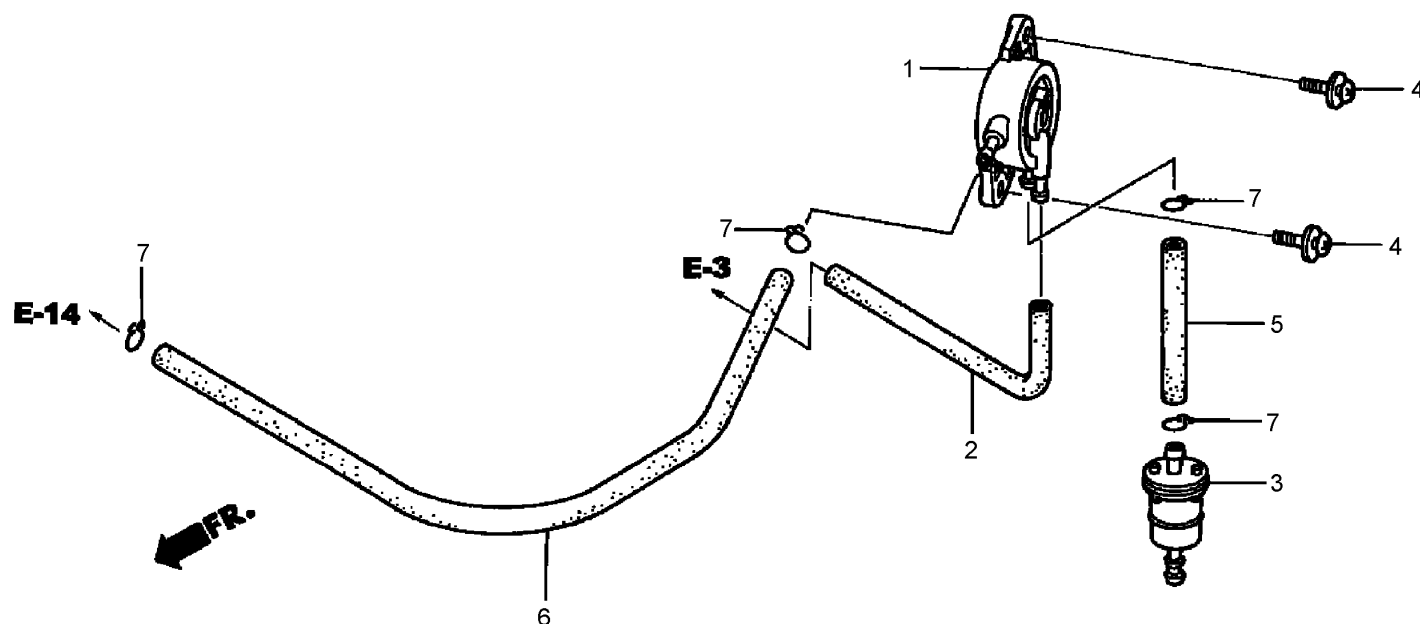 

Fuel Pump Assembly

Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description				
③1	16700-ZL8-013	1	Fuel Pump ASM				
③2	16882-Z0A-000	1	Tube-Diaphragm				
③3	16910-ZV4-015	1	Filter-Fuel				
③4	93894-05016-00	2	Screw-Washer (5X16)				
③5	95001-55008-60M	1	Fuel-Hose (5.5X8000) (5.5X100)				
③6	95001-55008-60M	1	Fuel-Hose (5.5X8000) (5.5X100)				
③7	95002-02100	4	Clip-Tube (B10)				

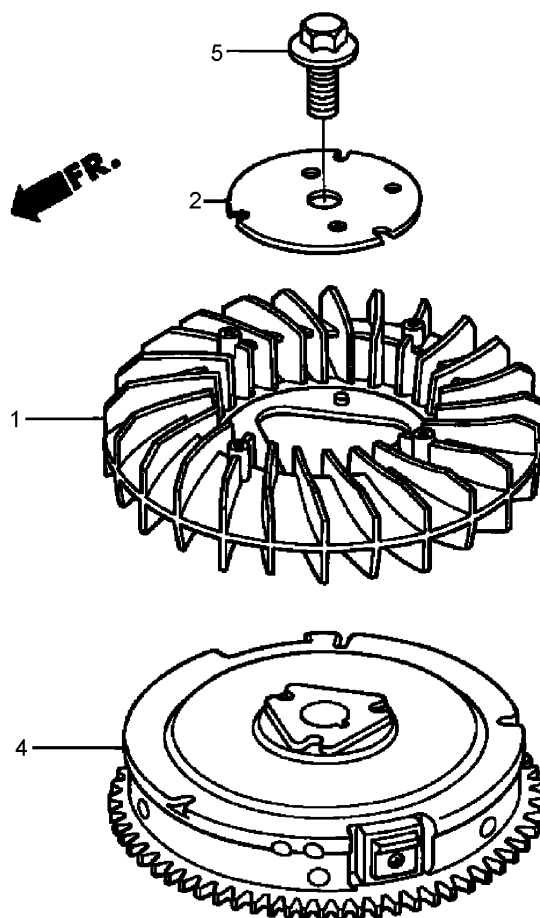 

Flywheel Assembly


Honda GXV530 EXA2LB

Ref	Part No.	Qty.	Description
❸1	19511-Z0A-000	1	Fan-Cooling
❸2	19513-Z0A-000	1	Plate-Setting, Cooling Fan
❸4	31110-Z0A-800	1	Flywheel (6P)
❸5	90011-Z0A-000	1	Bolt-Flange (16X35)

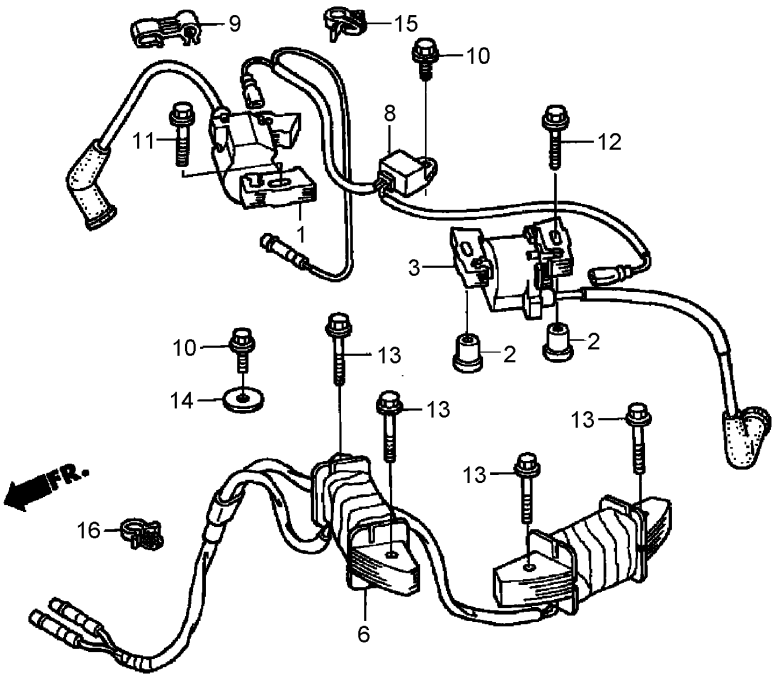 

Ignition Coil Assembly
Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description				
❶1	30500-Z0A-013	1	Ignition Coil ASM (No. 1)				
❷2	30509-Z0A-000	2	Collar-Coil, Ignition				
❸3	30550-Z0A-013	1	Ignition Coil ASM (No. 2)				
❹6	31630-Z0A-811	1	Charge Coil ASM (12V-12A)				
❺8	31740-Z0A-003	1	Engine Stop Diode ASM				
❻9	32768-PJ7-000	1	Clamp-Wire, Center				
❼10	90013-883-000	2	Bolt-Flange (6X12) (C T200)				
❽11	95701-06028-00	1	Bolt-Flange (6X28)				
❾12	90016-ZE8-000	1	Bolt-Flange (6X45) (C T200)				
❿13	95701-06032-00	4	Bolt-Flange (6X32)				
⓫14	90136-428-870	1	Washer-Setting, Tank				
⓬15	90654-SA4-003	1	Clip-Harness, Wire (6Mm) (White)				
⓭16	90659-PG6-000	1	Clip-Harness, Wire				

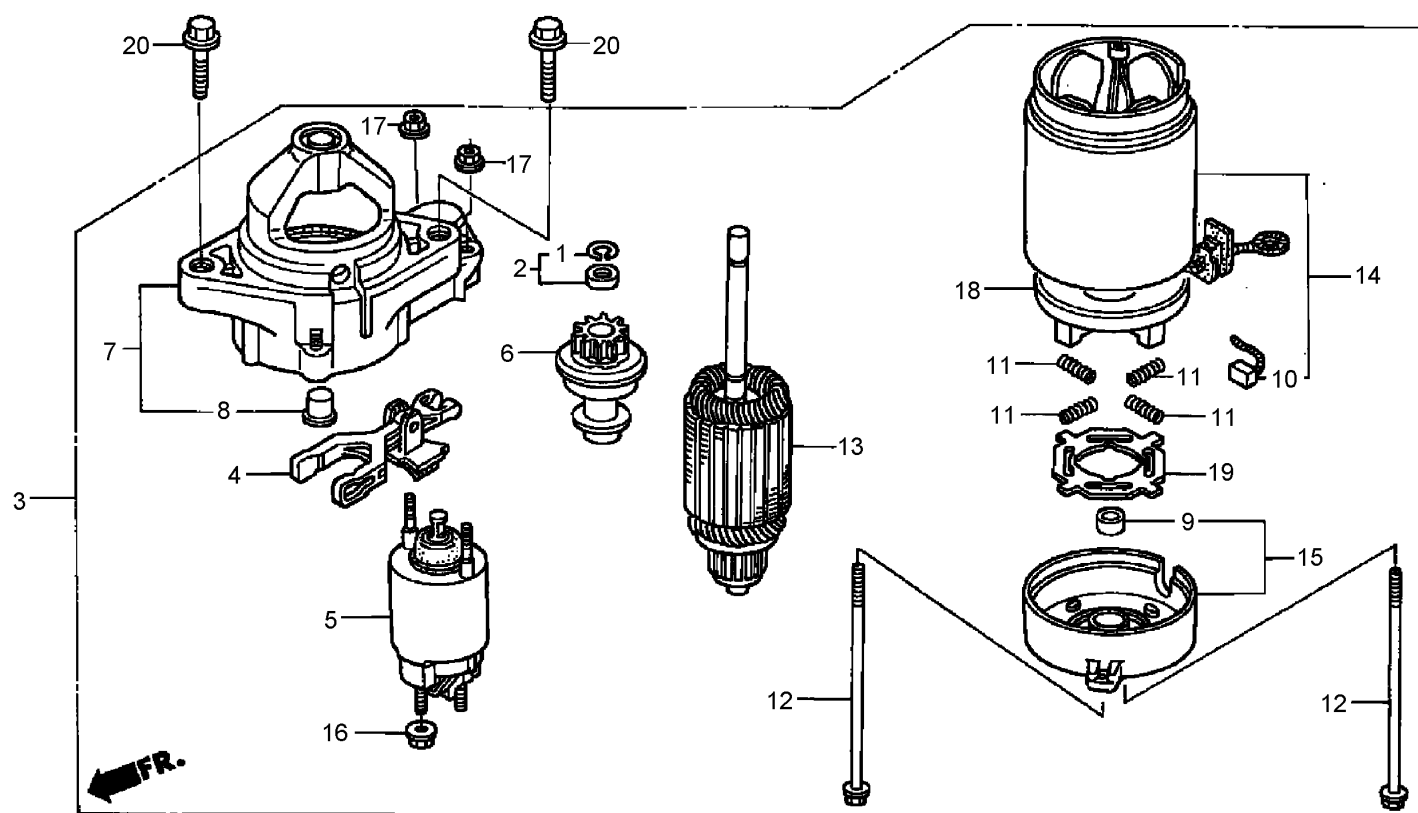 

Starter Motor Assembly Honda GXV530 EXA2LB


Ref	Part No.	Qty.	Description
❶	30201-PH9-004	1	Ring-Snap (Denso)
❷	30202-PZ1-003	1	Clutch Stop Collar Set
❸	31200-Z0A-003	1	Starter Motor ASM
❹	31203-PH9-004	1	Lever-Drive, Pinion
❺	31204-ZG4-801	1	Magnetic Switch ASM
❻	31207-Z0A-003	1	Clutch-Overrunning
❼	31208-Z0A-003	1	Housing-Drive Side
❽	31209-PH9-004	1	Bearing (A)
❾	31210-PH9-004	1	Bearing (B)
❿	31211-PH9-004	4	Brush
⓫	31212-PH9-004	4	Spring-Brush
⓬	31214-PH9-004	2	Bolt-Through
⓭	31217-Z0A-003	1	Armature

Ref	Part No.	Qty.	Description
❿	31218-P64-N01	1	Yoke
⓮	31219-Z0A-003	1	Frame-End, Commutator
⓯	31220-PH9-004	1	Nut-Hex (8Mm)
⓰	31223-PA0-006	2	Nut-Flange (5Mm)
⓱	31231-PH9-004	1	Holder-Brush
⓲	31233-PH9-004	1	Insulator-Holder, Brush
⓳	95701-10040-00	2	Bolt-Flange (10X40)

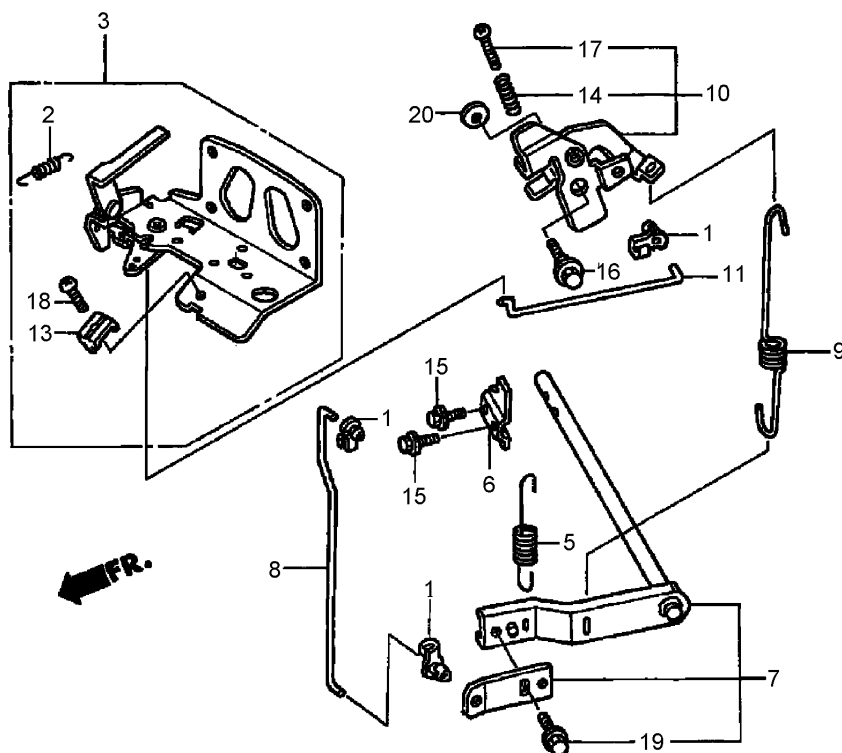 


Control Assembly Honda GXV530 EXA2LB

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶	16263-ZJ7-871	3	Rod-Joint	❶	15	2	Bolt-Flange (5X10)
❷	16268-Z0A-300	1	Spring-Return, Choke	❷	16	1	Bolt-Flange (6Mm) (C T200)
❸	16500-Z0A-000	1	Control ASM (1-Lever)	❸	17	1	Screw-Recessed (5X25)
❺	16534-Z0A-000	1	Spring-Starter (Up To Engine Serial No. 1014986)	❺	18	2	Screw-Recessed (5X18)
❺	16534-Z0P-V00	1	Spring-Starter (From Engine Serial No. 1038646)	❻	19	1	Bolt-Flange (6X10)
❻	16542-Z0A-000	1	Fork-Governor	❽	20	1	Washer-Plain (6Mm)
❼	16550-Z0A-000	1	Arm-Governor				
❽	16555-Z0A-000	1	Rod-Governor				
❾	16561-Z0A-000	1	Spring-Governor				
❿	16565-Z0A-000	1	Link-Governor				
❿	16566-Z0A-000	1	Rod-Link, Governor				
❿	16576-891-000	2	Holder-Cable				
❿	16584-883-300	1	Spring-Adjusting, Control				

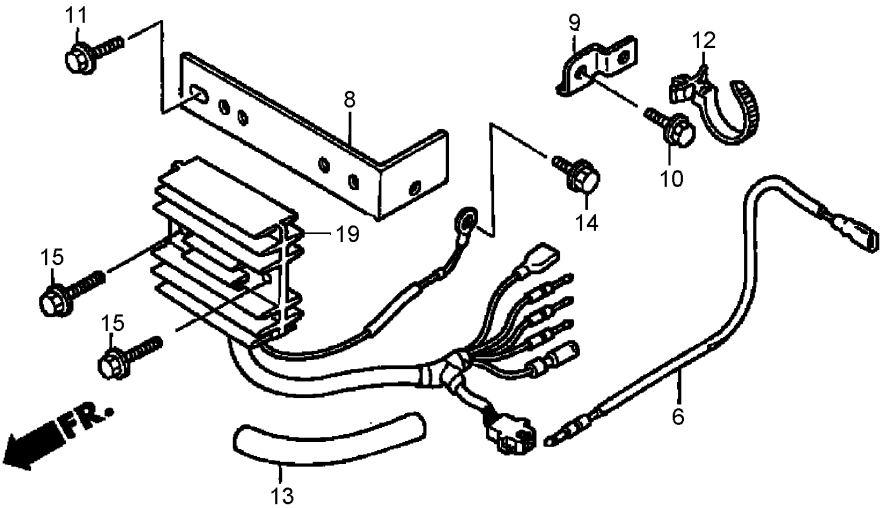 

Regulator Rectifier and Sub-Wire Harness Assembly
Honda GXV530 EXA2LB

Ref	Part No.	Qty.	Description				
❸6	32105-Z0A-000	1	Sub-Wire Harness ASM				
❸8	31758-Z0A-800	1	Bracket-Regulator				
❸9	35806-752-630	1	Base-Clip				
❸10	90013-883-000	1	Bolt-Flange (6X12) (C T200)				
❸11	90014-952-000	2	Bolt-Flange (6X14) (C T200)				
❸12	90672-SB2-003	1	Strap-Cable (105Mm) (N H1 Black)				
❸13	91406-ZB3-740	1	Tube-Wire				
❸14	95701-06008-00	1	Bolt-Flange (6X8)				
❸15	95701-06020-00	2	Bolt-Flange (6X20)				
❸19	31750-Z0A-V01	1	Regulator Rectifier ASM				

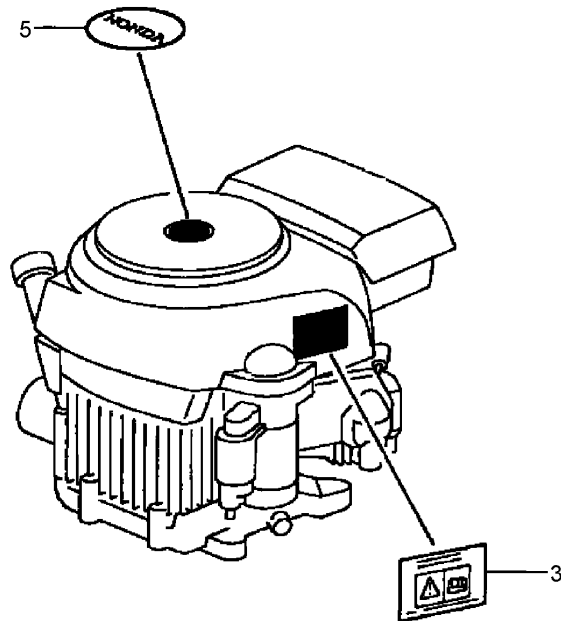 

Label Assembly

Honda GXV530 EXA2LB

Ref	Part No.	Qty.	Description				
❶3	87516-Z0A-010		Mark-Caution, Operator				
❶5	87531-Z0A-010		Mark-Honda				

Attachments and Accessories

For 81246 - Precision Z340 HLX Riding Mower

Product Name	Model/Part
Tire Chains	107-1738
Armrest Kit	108-6163
Smooth Tire Kit	108-8501
42 Inch Twin Bagger	62560
48 Inch Snow Blade	63600

