


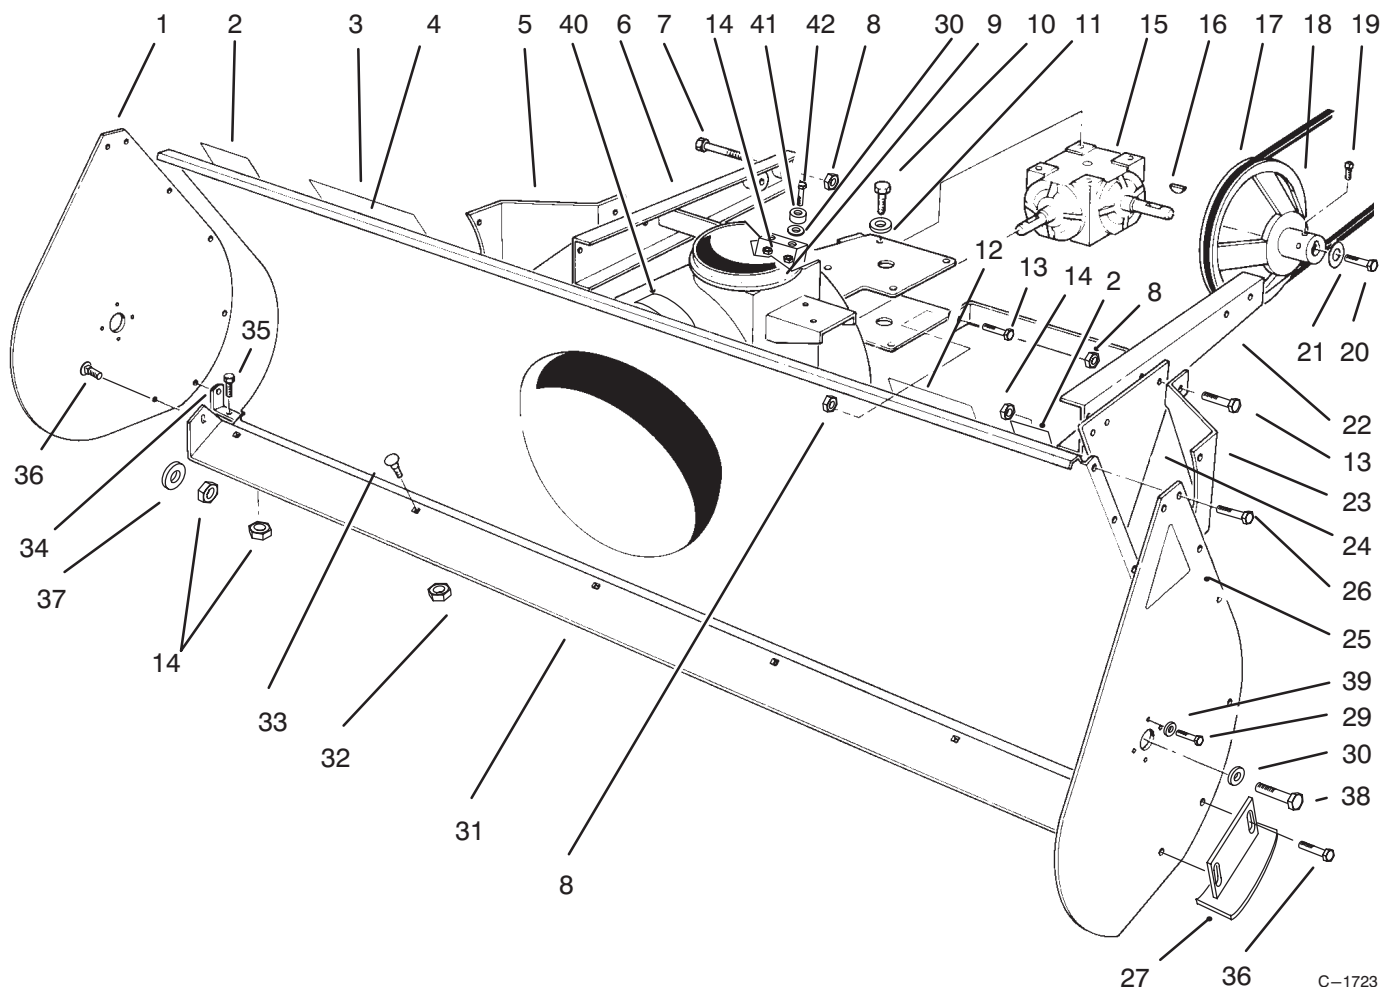

MODEL NO. 30761-590001 & UP


**PARTS
CATALOG**
44" SNOWTHROWER
 For Proline 118 & 120


C-1723

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	57-3510	Plate - Side	2
2	63-2380	Decal - Auger Danger	2
3	92-8652	Decal - Warning	1
4	92-8660	Housing - Auger	1
5	57-3570	Plate - Extension RH	1
6	57-3710	Bar - Extension	1
7	323-12	Screw - Hex. Hd.	4
8	3296-39	Nut - Lock	16
9	25-5170	Ring - Chute	1
10	323-4	Screw - Hex. Hd.	8
11	3254-6	Washer - Lock	8
12	92-8019	Decal - Rear Weight	1


Ref. No.	Part No.	Description	No. Used
13	323-6	Screw - Hex. Hd.	6
14	3296-29	Nut - Lock	22
15	61-8650	Gear Box	1
16	3257-5	Key - Woodruff	2
17	57-3650	Belt	1
18	57-3640	Pulley - Drive	1
19	3242-4	Screw - Set	2
20	30-1070	Screw - Hex. Hd.	1
21	3256-57	Washer	1
22	57-3520	Bar - Extension	1
23	57-3560	Plate - Extension LH	1
24	57-3550	Plate - Skid Mount	2

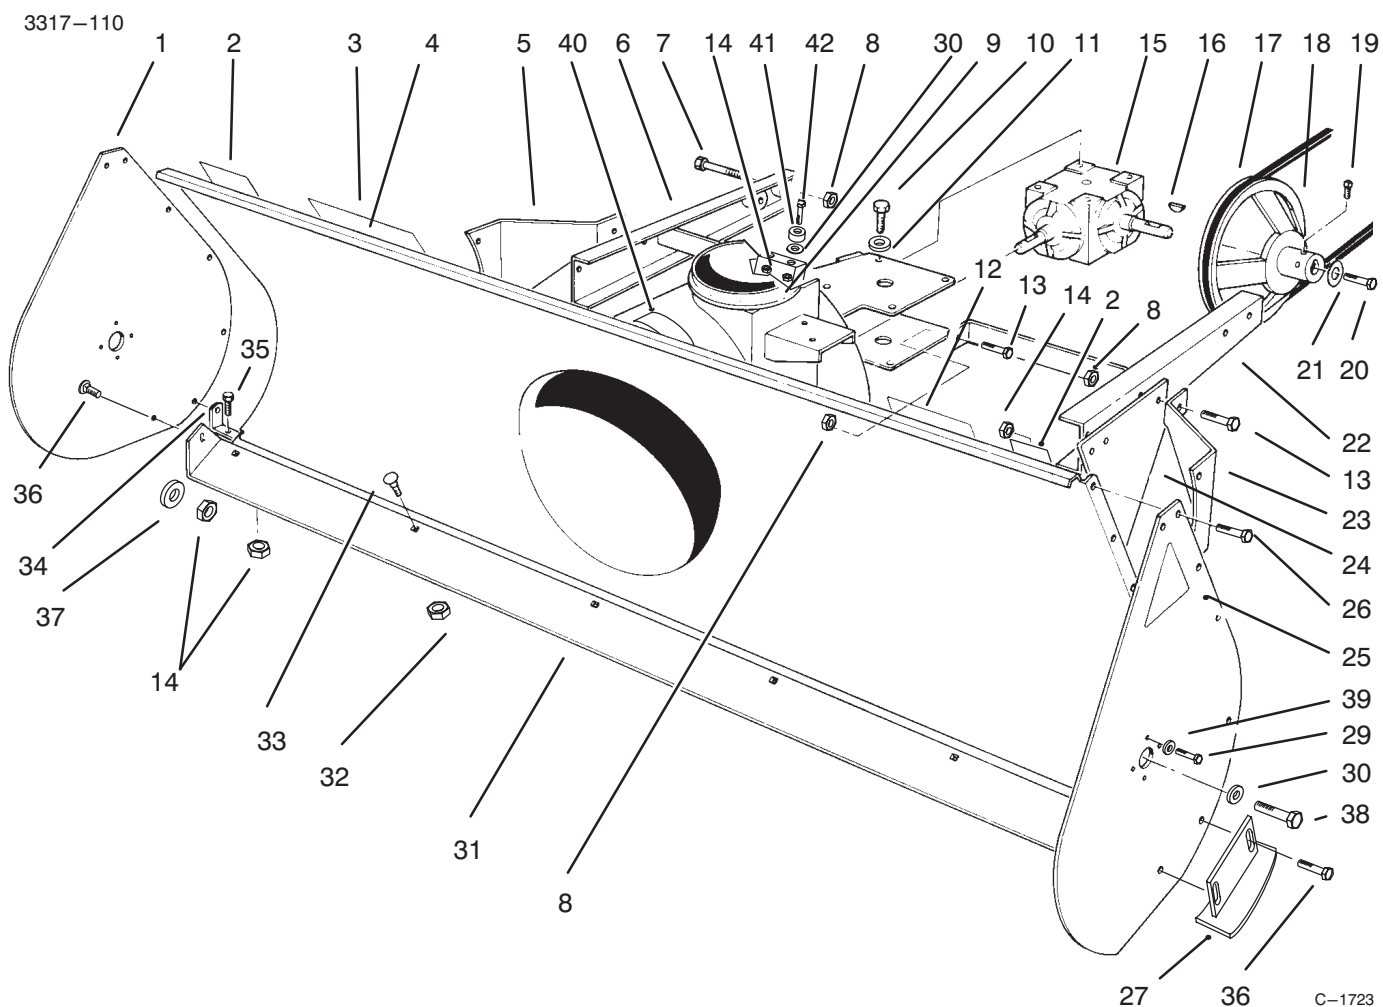

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
25	62-5550	Decal - Auger Sideplate	2
26	322-5	Screw - Hex. Hd.	16
27	78-0800	Skid	2
29	321-4	Screw - Hex. Hd.	8
30	2844	Washer - Flat	4
31	79-6670	Blade - Scraper	1
32	3296-16	Nut - Lock	6
33	3229-25	Bolt - Carriage	6
34	57-9890	Bracket - Blade Support	2

Ref. No.	Part No.	Description	No. Used
35	322-3	Screw - Hex. Hd.	2
36	3230-2	Bolt - Carriage	4
37	3256-23	Washer	2
38	3235-22	Screw - Hex. Hd.	2
39	3256-22	Washer	8
40	74-2080	Decal - Proline	1
41	108889	Bumper	1
42	322-6	Screw	2

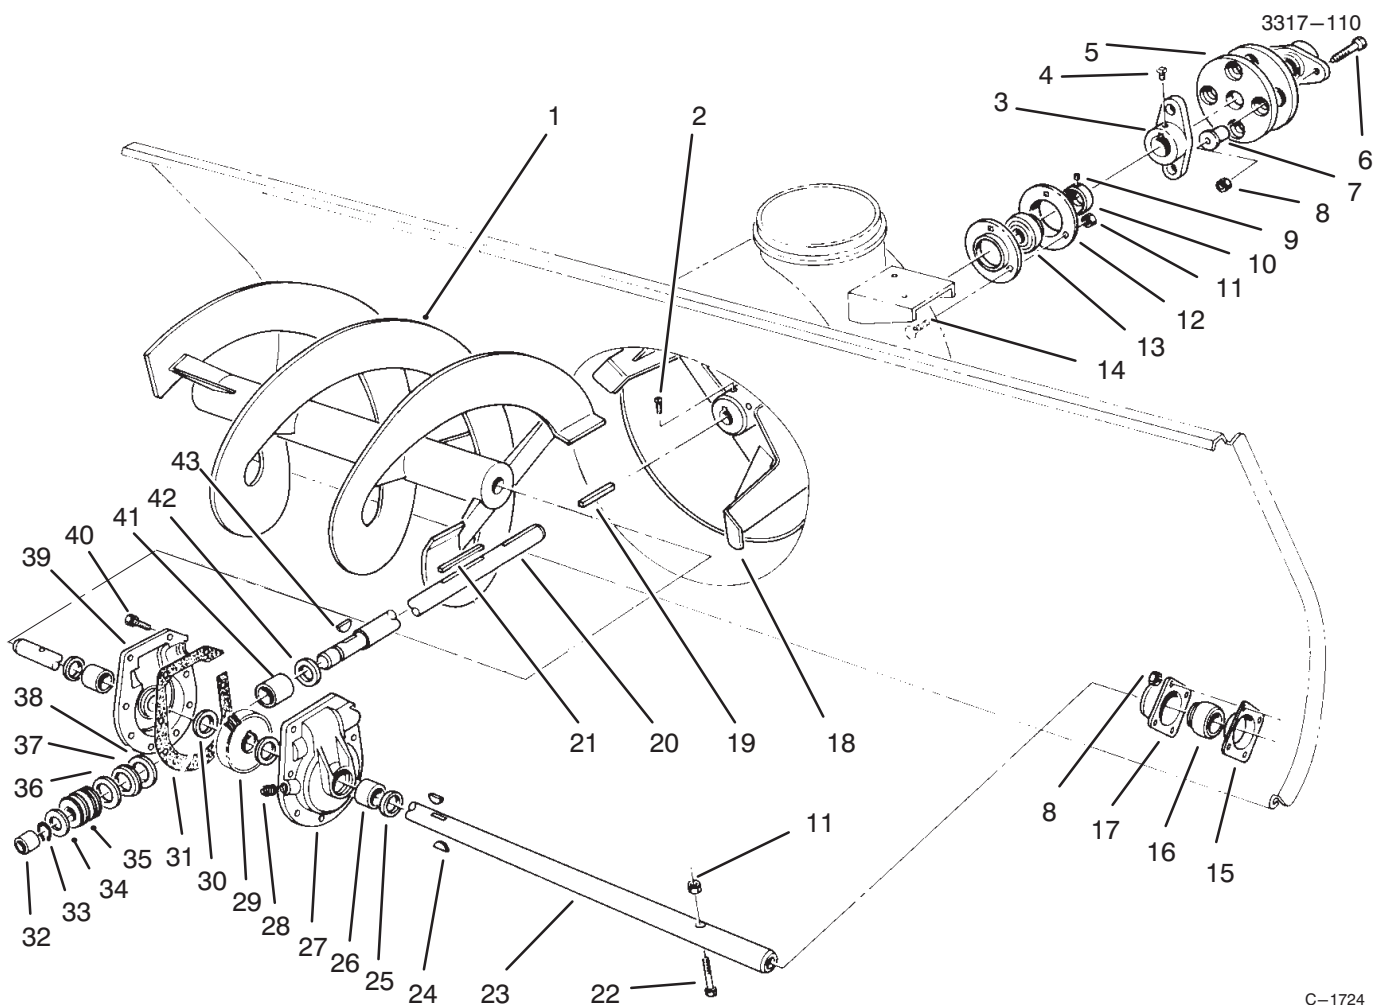


C-1724

AUGER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	57-3300	Auger RH	1
*	57-3370	Auger LH	1
2	3242-4	Screw - Set	2
3	61-4000	Hub	2
4	3241-5	Screw - Set	4
5	44-2230	Coupling - Rubber	2
6	321-9	Screw - Hex. Hd.	4
7	27-6601	Spacer - Coupling	4
8	3296-16	Nut - Lock	12
9	3245-32	Screw - Set	2
10	251-231	Collar - Locking	1
11	3296-29	Nut - Lock	5
12	251-229	Bearing - Flange	2
13	251-224	Bearing - Impeller	1
14	3230-1	Bolt - Carriage	3
15	20-1000	Bearing - Flange Rear	2
16	20-0980	Bearing	2
17	20-0990	Bearing - Flange Front	2
18	19-8890	Impeller	1
19	21-5070	Key - Square	1
20	57-3490	Shaft - Impeller	1
21	6-8590	Key - Impeller	1
22	322-14	Screw - Hex. Hd.	2
23	57-3500	Shaft - Auger	1

Ref. No.	Part No.	Description	No. Used
24	3257-33	Key - Woodruff	2
25	7-0045	Seal - Oil	2
26	256-237	Bushing	2
27	37-8860	Gear Case & Bushing Assy. (Incl. Ref. #25 & 26)	1
28	281-1	Plug - Pipe	1
29	5-7180	Gear - Worm	1
30	252-71	Bearing - Thrust	2
31	51-0460	Gasket	2
32	256-32	Bushing	1
33	32120-72	Ring - Retaining	1
34	3-8664	Washer - Thrust	1
35	5-7170	Worm	1
36	252-77	Washer - Thrust	1
37	252-76	Bearing - Thrust	1
38	252-78	Washer - Thrust	1
39	37-8850	Gear Case & Bushing Assy. (Incl. Ref. #25 & 26)	1
40	32144-41	Screw - Thread Forming	8
41	20-3210	Bushing	1
42	237-87	Seal	1
43	3257-23	Key - Woodruff	1
*	57-3480	Gear Box Assembly	1

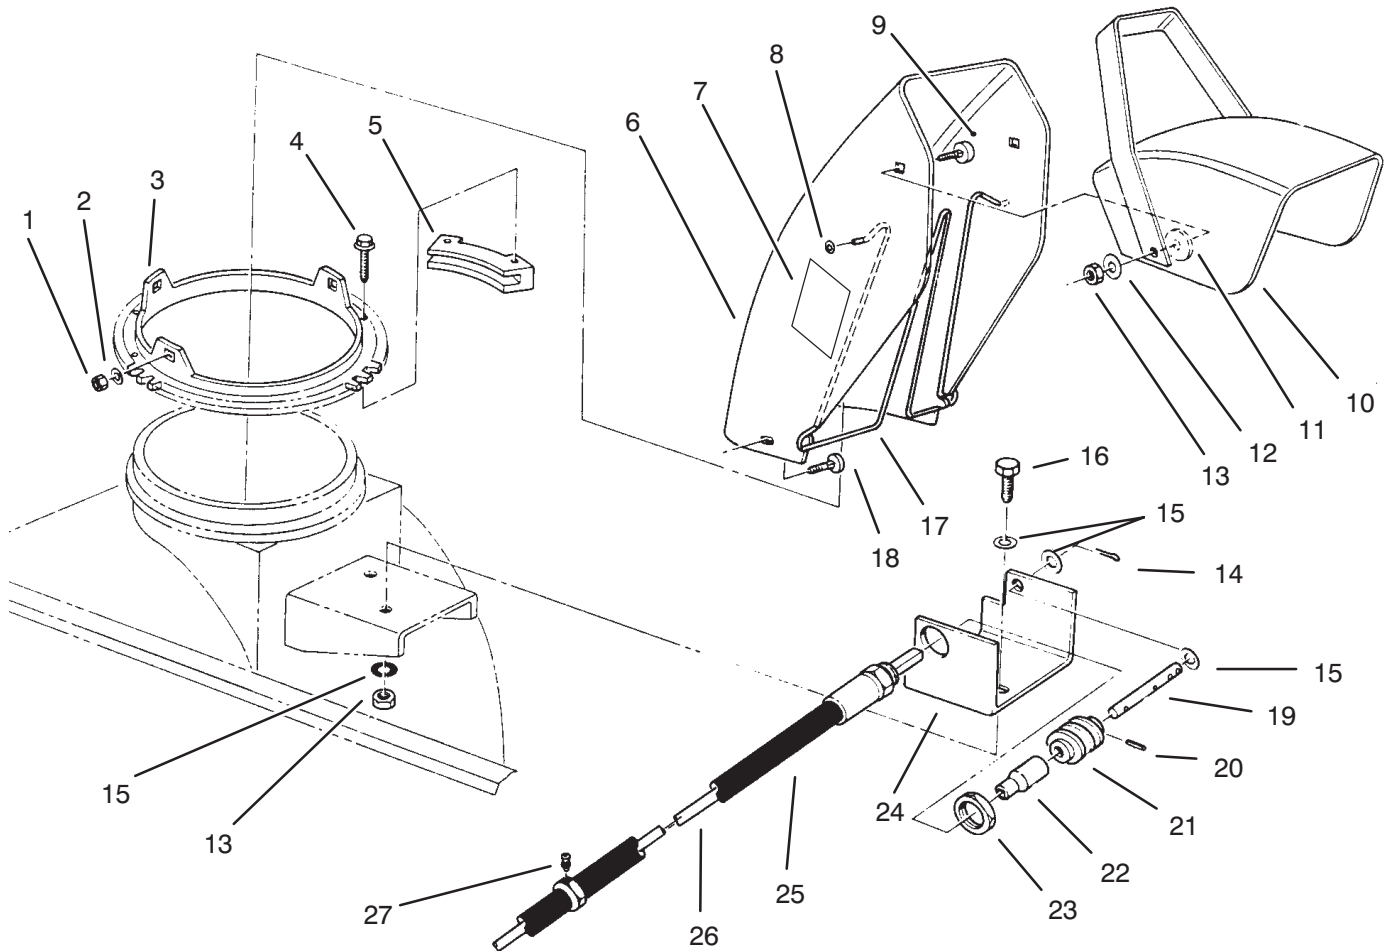


C-1725

CHUTE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	3
2	3256-23	Washer	3
3	25-5290	Ring - Chute Swivel	1
4	27-0220	Screw - Special	6
5	25-5450	Retainer - Chute	3
6	92-6335	Chute - Upper (Incl. Ref. # 7)	1
7	67-3740	Decal - Discharge Danger	2
8	3290-326	Nut - Push	2
9	3231-2	Bolt - Carriage	2
10	11-9349	Deflector	1
11	20-4320	Washer - Rubber	2
12	3290-340	Washer - Belleville	2
13	3296-39	Nut - Lock	4

Ref. No.	Part No.	Description	No. Used
14	3272-10	Pin - Cotter	2
15	3256-24	Washer - Flat	6
16	323-6	Screw	2
17	54-9770	Wire - Chute	1
18	3230-18	Bolt - Carriage	3
19	61-4950	Shaft - Worm Gear	1
20	32121-50	Pin - Roll	2
21	8-8600	Gear - Worm	1
22	61-4940	Coupler	1
23	353-955	Nut - Lock	1
24	61-4930	Bracket - Worm Gear	1
25	61-4870	Hose - Assembly	1
26	61-8520	Shaft - Flexible	1
27	302-5	Fitting - Grease	1

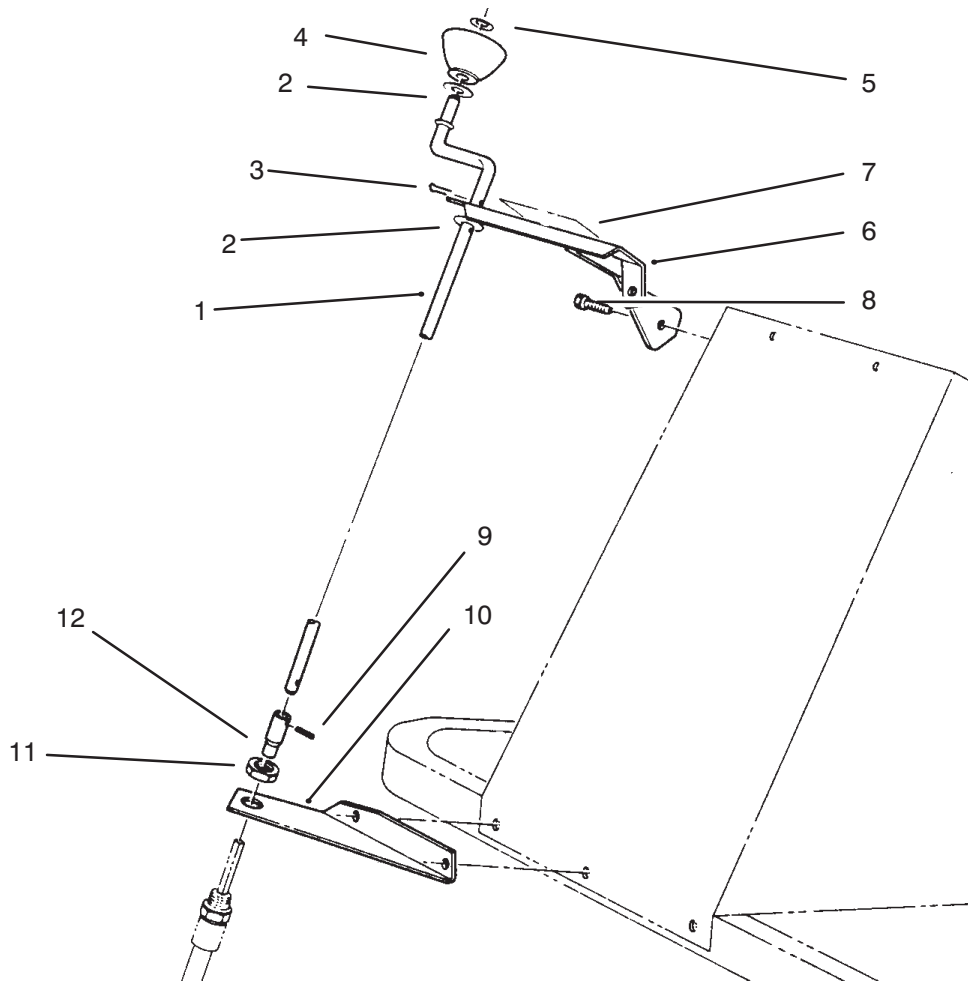


C-1726

CHUTE CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-4900	Rod - Chute Control	1
2	3256-24	Washer - Flat	3
3	3272-10	Pin - Cotter	2
4	61-4890	Knob	1
5	3290-320	Cap - Push	1
6	61-4920	Bracket - Top	1

Ref. No.	Part No.	Description	No. Used
7	63-3510	Decal - Chute Rotation	1
8	321-4	Screw - Hex. Hd.	2
9	32121-50	Pin - Roll	1
10	61-4910	Bracket - Bottom	1
11	353-955	Nut - Lock	1
12	61-4940	Coupler	1

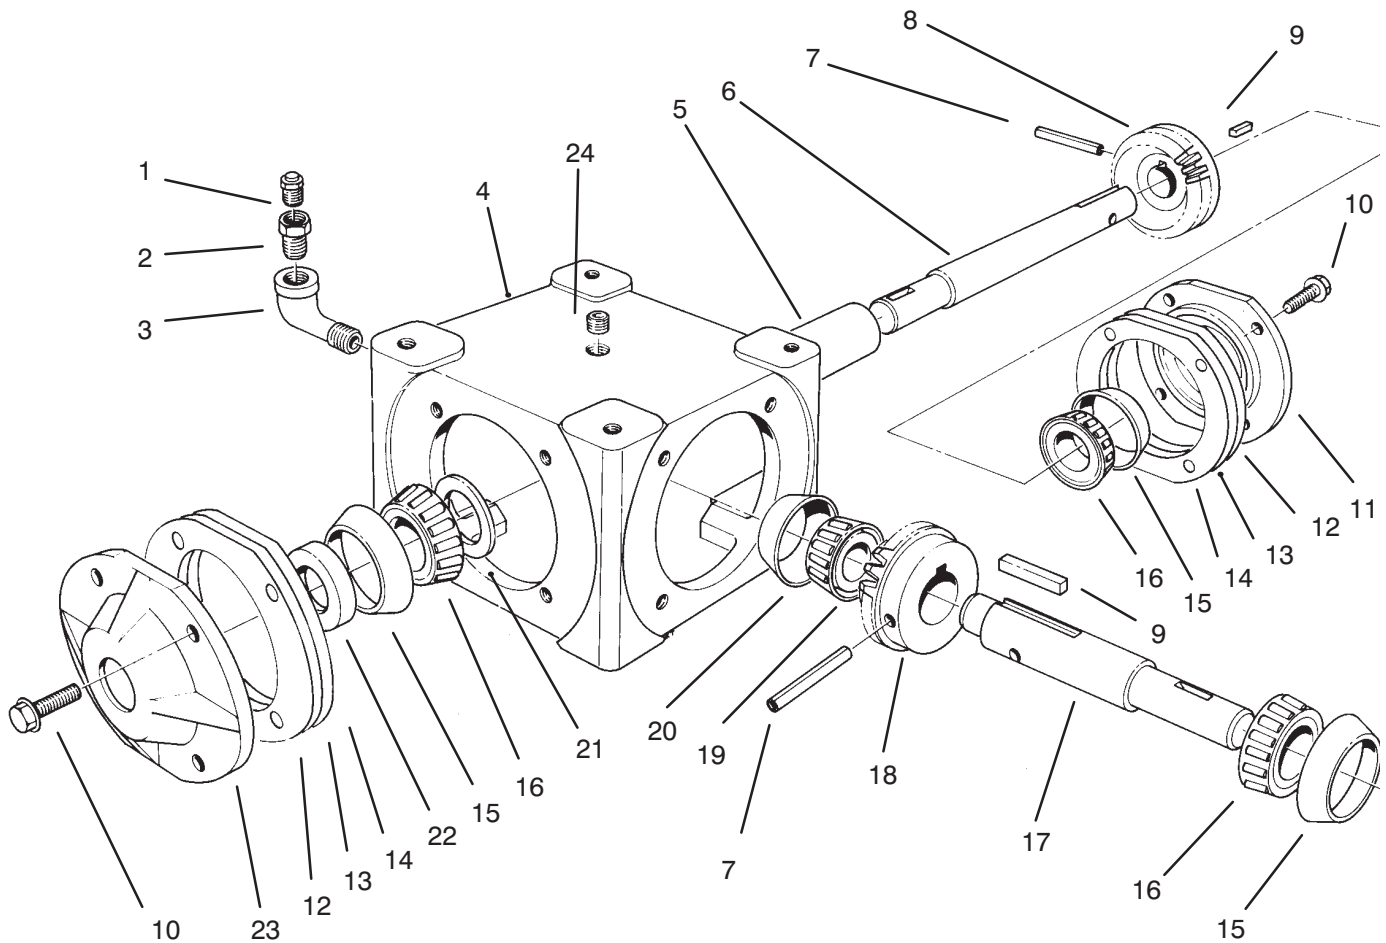


T-0107

GEAR BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62-3520	Valve - Pressure Relief	1
2	62-3550	Bushing - Reducer	1
3	62-3540	Elbow - Street	1
4	62-3300	Housing	1
5	62-3480	Spacer	1
6	62-3460	Shaft	1
7	62-3510	Pin - Roll	2
8	62-3500	Gear	1
9	62-3380	Key	2
10	62-3310	Screw - Hex. Hd.	12
11	62-3320	Cap	1
12	62-3420	Gasket - .015"	A/R

Ref. No.	Part No.	Description	No. Used
13	62-3430	Gasket - .005"	A/R
14	62-3440	Gasket - .003"	A/R
15	62-3340	Cup - Bearing	3
16	62-3330	Cone - Bearing	3
17	62-3390	Shaft	1
18	62-3350	Gear	1
19	62-3370	Cone - Bearing	1
20	62-3360	Cup - Bearing	1
21	62-3470	Washer	1
22	62-3400	Seal	2
23	62-3410	Cap	2
24	62-3490	Plug - Pipe	1

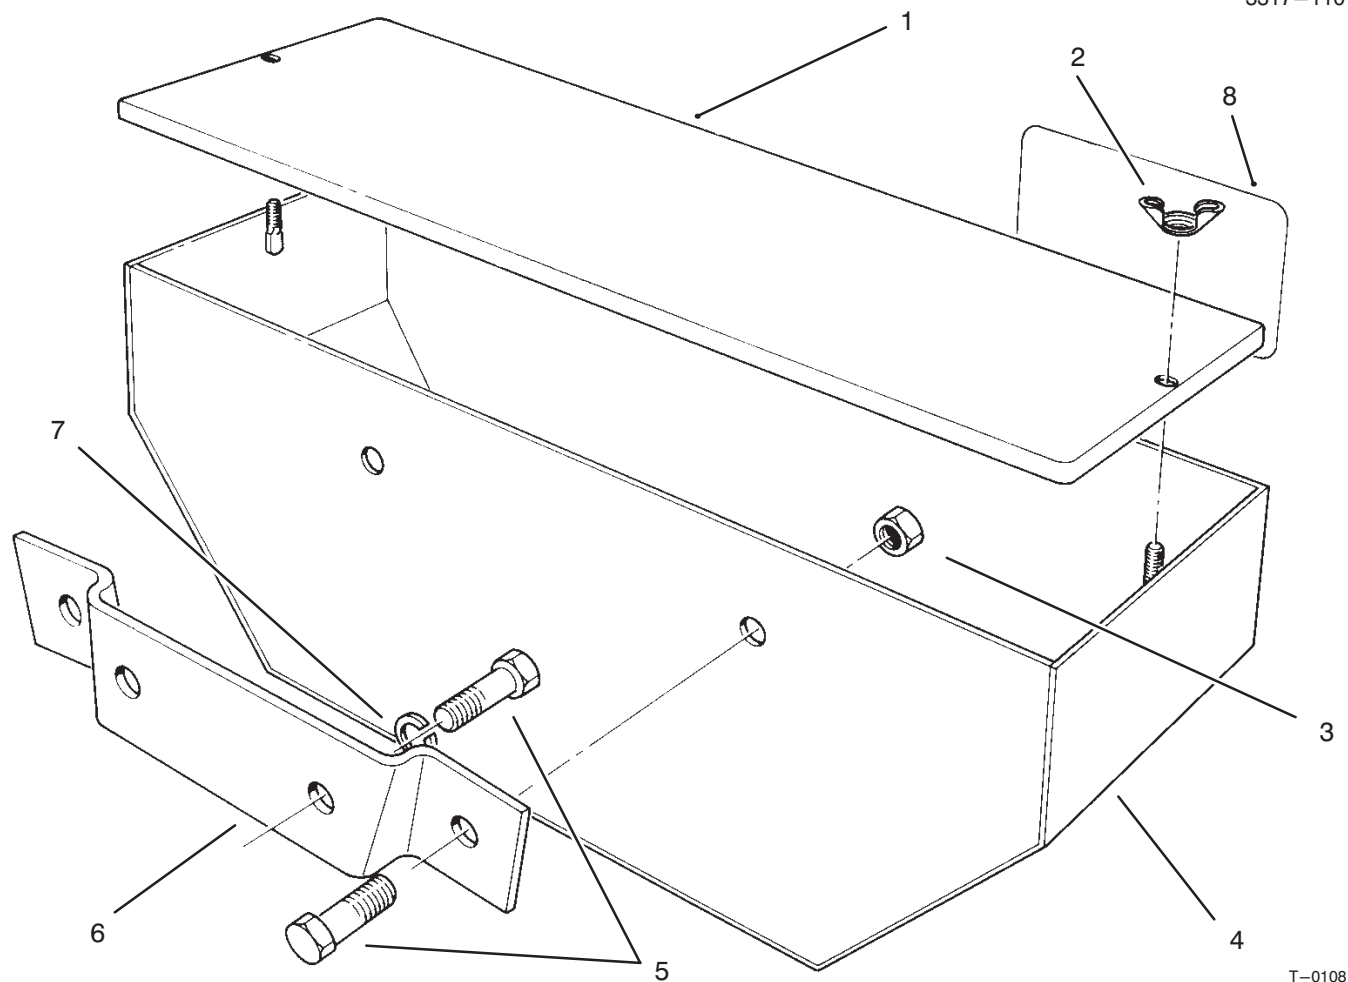


T-0108

WEIGHT BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-4130	Cover - Weight Box	1
2	32103-2	Nut - Wing	2
3	3296-25	Nut - Lock	2
4	61-4090	Box - Weight	1
5	325-5	Screw - Hex. Hd.	4
6	61-4140	Bracket - Mount	1
7	3253-7	Washer - Lock	2

Ref. No.	Part No.	Description	No. Used
8	62-5550	Decal	1
*	40-0590	Reflector	2
*	56-6630	Tire Chain Kit (Optional)	1
*	2410-67	Plug	2
*	61-4090	Weight Box Assembly (Incl. Ref..#1-8)	1

*Not Illustrated

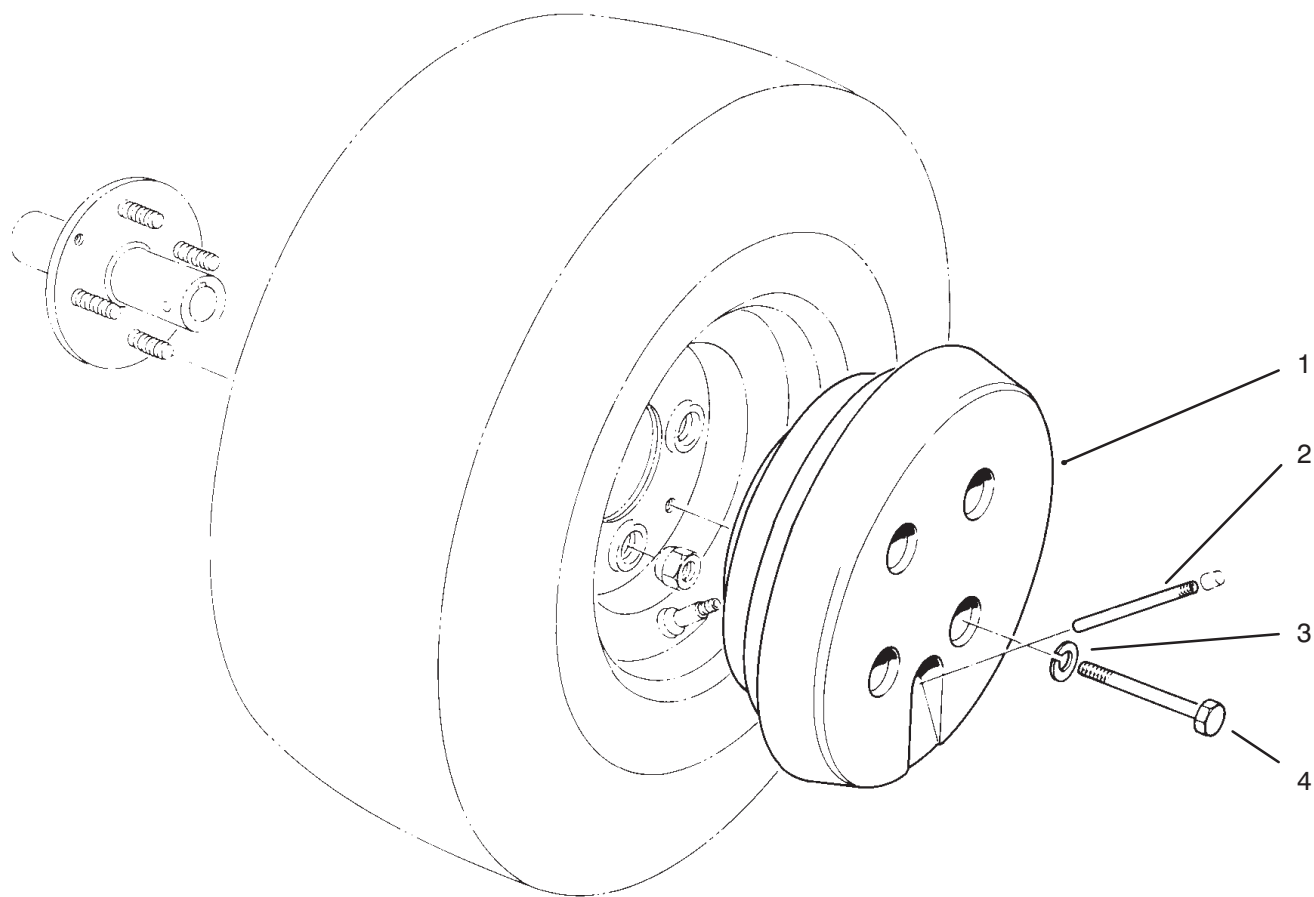


T-0109

WHEEL WEIGHT

Ref. No.	Part No.	Description	No. Used
1	56-5310	Weight - Wheel	2
2	232-45	Extension - Valve	2

Ref. No.	Part No.	Description	No. Used
3	3253-4	Washer - Lock	4
4	322-19	Screw - Hex. Hd.	4

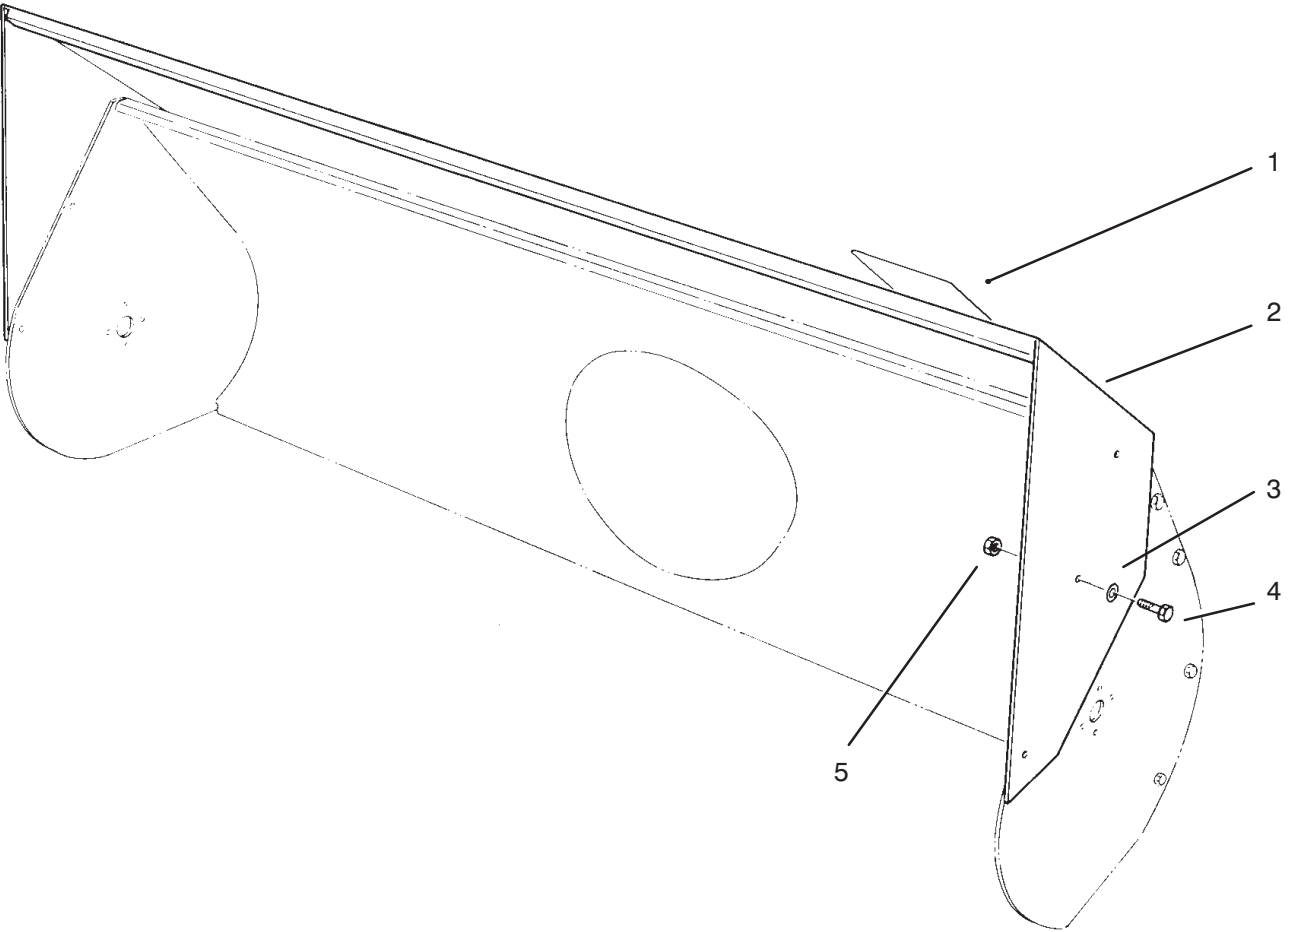

T-0110

AUGER EXTENSION

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	42-1770	Decal	1	4	322-4	Screw - Hex. Hd.	4
2		Extension - Auger	1	5	3296-29	Nut - Lock	4
3	3256-2	Washer	4	*	62-5780	Kit - Auger Extension	1

*Not Illustrated

TORO PART NUMBER INDEX

3317-110

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
2844	Washer – Flat	2 30 4	61-8650	Gear Box	1 15 1
3-8664	Washer – Thrust	3 34 1	62-3300	Housing	6 4 1
5-7170	Worm	3 35 1	62-3310	Screw – Hex. Hd.	6 10 12
5-7180	Gear – Worm	3 29 1	62-3320	Cap	6 11 1
6-8590	Key – Impeller	3 21 1	62-3330	Cone – Bearing	6 16 3
7-0045	Seal – Oil	3 25 2	62-3340	Cup – Bearing	6 15 3
8-8600	Gear – Worm	4 21 1	62-3350	Gear	6 18 1
108889	Screw	2 42 2	62-3360	Cup – Bearing	6 20 1
11-9349	Deflector	4 10 1	62-3370	Cone – Bearing	6 19 1
19-8890	Impeller	3 18 1	62-3380	Key	6 9 2
20-0980	Bearing	3 16 2	62-3390	Shaft	6 17 1
20-0990	Bearing – Flange Front	3 17 2	62-3400	Seal	6 22 2
20-1000	Bearing – Flange Rear	3 15 2	62-3410	Cap	6 23 2
20-3210	Bushing	3 41 1	62-3420	Gasket – .015"	6 12A/R
20-4320	Washer – Rubber	4 11 2	62-3430	Gasket – .005"	6 13A/R
21-5070	Key – Square	3 19 1	62-3440	Gasket – .003"	6 14A/R
25-5170	Ring – Chute	1 9 1	62-3460	Shaft	6 6 1
25-5290	Ring – Chute Swivel	4 3 1	62-3470	Washer	6 21 1
25-5450	Retainer – Chute	4 5 3	62-3480	Spacer	6 5 1
27-0220	Screw – Special	4 4 6	62-3490	Plug – Pipe	6 24 1
27-6601	Spacer – Coupling	3 7 4	62-3500	Gear	6 8 1
30-1070	Screw – Hex. Hd.	1 20 1	62-3510	Pin – Roll	6 7 2
37-8850	Gear Case & Bushing Assy.	3 39 1	62-3520	Valve – Pressure Relief	6 1 1
37-8860	Gear Case & Bushing Assy.	3 27 1	62-3540	Elbow – Street	6 3 1
40-0590	Reflector	7 * 2	62-3550	Bushing – Reducer	6 2 1
42-1770	Decal	9 1 1	62-5550	Decal	7 8 1
44-2230	Coupling – Rubber	3 5 2	62-5550	Decal – Auger Sideplate	2 25 2
51-0460	Gasket	3 31 2	62-5780	Kit – Auger Extension	9 * 1
54-9770	Wire – Chute	4 17 1	63-2380	Decal – Auger Danger	1 2 2
56-5310	Weight – Wheel	8 1 2	63-3510	Decal – Chute Rotation	5 7 1
56-6630	Tire Chain Kit	7 * 1	67-3740	Decal – Discharge Danger	4 7 2
57-3300	Auger RH	3 1 1	74-2080	Decal – Proline	2 40 1
57-3370	Auger LH	3 * 1	78-0800	Skid	2 27 2
57-3480	Gear Box Assembly	3 * 1	79-6670	Blade – Scraper	2 31 1
57-3490	Shaft – Impeller	3 20 1	92-6335	Chute – Upper	4 6 1
57-3500	Shaft – Auger	3 23 1	92-8019	Decal – Rear Weight	1 12 1
57-3510	Plate – Side	1 1 2	92-8652	Decal – Warning	1 3 1
57-3520	Bar – Extension	1 22 1	92-8660	Housing – Auger	1 4 1
57-3550	Plate – Skid Mount	1 24 2	232-45	Extension – Valve	8 2 2
57-3560	Plate – Extension LH	1 23 1	237-87	Seal	3 42 1
57-3570	Plate – Extension RH	1 5 1	2410-67	Plug	7 * 2
57-3640	Pulley – Drive	1 18 1	251-224	Bearing – Impeller	3 13 1
57-3650	Belt	1 17 1	251-229	Bearing – Flange	3 12 2
57-3710	Bar – Extension	1 6 1	251-231	Collar – Locking	3 10 1
57-9890	Bracket – Blade Support	2 34 2	252-71	Bearing – Thrust	3 30 2
61-4000	Hub	3 3 2	252-76	Bearing – Thrust	3 37 1
61-4090	Box – Weight	7 4 1	252-77	Washer – Thrust	3 36 1
61-4090	Weight Box Assembly	7 * 1	252-78	Washer – Thrust	3 38 1
61-4130	Cover – Weight Box	7 1 1	256-32	Bushing	3 32 1
61-4140	Bracket – Mount	7 6 1	256-237	Bushing	3 26 2
61-4870	Hose – Assembly	4 25 1	281-1	Plug – Pipe	3 28 1
61-4890	Knob	5 4 1	302-5	Fitting – Grease	4 27 1
61-4900	Rod – Chute Control	5 1 1	321-4	Screw – Hex. Hd.	5 8 2
61-4910	Bracket – Bottom	5 10 1	321-4	Screw – Hex. Hd.	2 29 8
61-4920	Bracket – Top	5 6 1	321-9	Screw – Hex. Hd.	3 6 4
61-4930	Bracket – Worm Gear	4 24 1	322-3	Screw – Hex. Hd.	2 35 2
61-4940	Coupler	5 12 1	322-4	Screw – Hex. Hd.	9 4 4
61-4940	Coupler	4 22 1	322-5	Screw – Hex. Hd.	2 26 16
61-4950	Shaft – Worm Gear	4 19 1	322-6	Screw	2 42 2
61-8520	Shaft – Flexible	4 26 1	322-14	Screw – Hex. Hd.	3 22 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3317-110

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
322-19	Screw - Hex. Hd.	8 4 4	3256-57	Washer	1 21 1
323-4	Screw - Hex. Hd.	1 10 8	3257-5	Key - Woodruff	1 16 2
323-6	Screw -	4 16 2	3257-23	Key - Woodruff	3 43 1
323-6	Screw - Hex. Hd.	1 13 6	3257-33	Key - Woodruff	3 24 2
323-12	Screw - Hex. Hd.	1 7 4	3272-10	Pin - Cotter	5 3 2
325-5	Screw - Hex. Hd.	7 5 4	3272-10	Pin - Cotter	4 14 2
3229-25	Bolt - Carriage	2 33 6	3290-320	Cap - Push	5 5 1
3230-1	Bolt - Carriage	3 14 3	3290-326	Nut - Push	4 8 2
3230-2	Bolt - Carriage	2 36 4	3290-340	Washer - Belleville	4 12 2
3230-18	Bolt - Carriage	4 18 3	3296-16	Nut - Lock	3 8 12
3231-2	Bolt - Carriage	4 9 2	3296-16	Nut - Lock	2 32 6
3235-22	Screw - Hex. Hd.	2 38 2	3296-25	Nut - Lock	7 3 2
3241-5	Screw - Set	3 4 4	3296-29	Nut - Lock	4 1 3
3242-4	Screw - Set	3 2 2	3296-29	Nut - Lock	9 5 4
3242-4	Screw - Set	1 19 2	3296-29	Nut - Lock	3 11 5
3245-32	Screw - Set	3 9 2	3296-29	Nut - Lock	1 14 22
3253-4	Washer - Lock	8 3 4	3296-39	Nut - Lock	1 8 16
3253-7	Washer - Lock	7 7 2	3296-39	Nut - Lock	4 13 4
3254-6	Washer - Lock	1 11 8	32103-2	Nut - Wing	7 2 2
3256-2	Washer	9 3 4	32120-72	Ring - Retaining	3 33 1
3256-22	Washer	2 39 8	32121-50	Pin - Roll	5 9 1
3256-23	Washer	4 2 3	32121-50	Pin - Roll	4 20 2
3256-23	Washer	2 37 2	32144-41	Screw - Thread Forming	3 40 8
3256-24	Washer - Flat	5 2 3	353-955	Nut - Lock	5 11 1
3256-24	Washer - Flat	4 15 6	353-955	Nut - Lock	4 23 1

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]