

# **LAWN-BOY®**

## **21" SILVER SERIES WALK-BEHIND MOWER**

MODEL NO. 10211-5900001 & UP  
MODEL NO. 10312-5900001 & UP

---

## **PARTS CATALOG**

## PRODUCT CHANGES

In an effort to make improvements available to LAWN-BOY owners as quickly as possible, minor changes are incorporated into LAWN-BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN-BOY Distributor or his Authorized LAWN-BOY Service Dealer for information and part numbers.

## IDENTIFICATION AND ORDERING

### MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

 
**NOTE:** Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

# TABLE OF CONTENTS

Description	Page	Description	Page
Mulch Plate & Wheel Assembly .....	1	Engine Assembly .....	7-10
Cover Assembly .....	2	Recoil Starter Assembly .....	11
Rear Axle Assembly .....	3	Carburetor Assembly .....	12
Gear Case Assembly .....	4	Handle Assembly .....	13
Engine Assembly .....	5	Rear Catcher Assembly .....	14
Blade Assembly .....	6	Numeric Parts Index .....	15-16

## Accessories


Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit .....	Model No. 89814	Leaf Bag Kit w/Chute .....	Model No. 89811
Leaf Bag .....	Model No. 89804	Mower & Feed Fertilizer	
Leaf Shredder Kit .....	Model No. 89860	Spreader .....	Model No. 52070

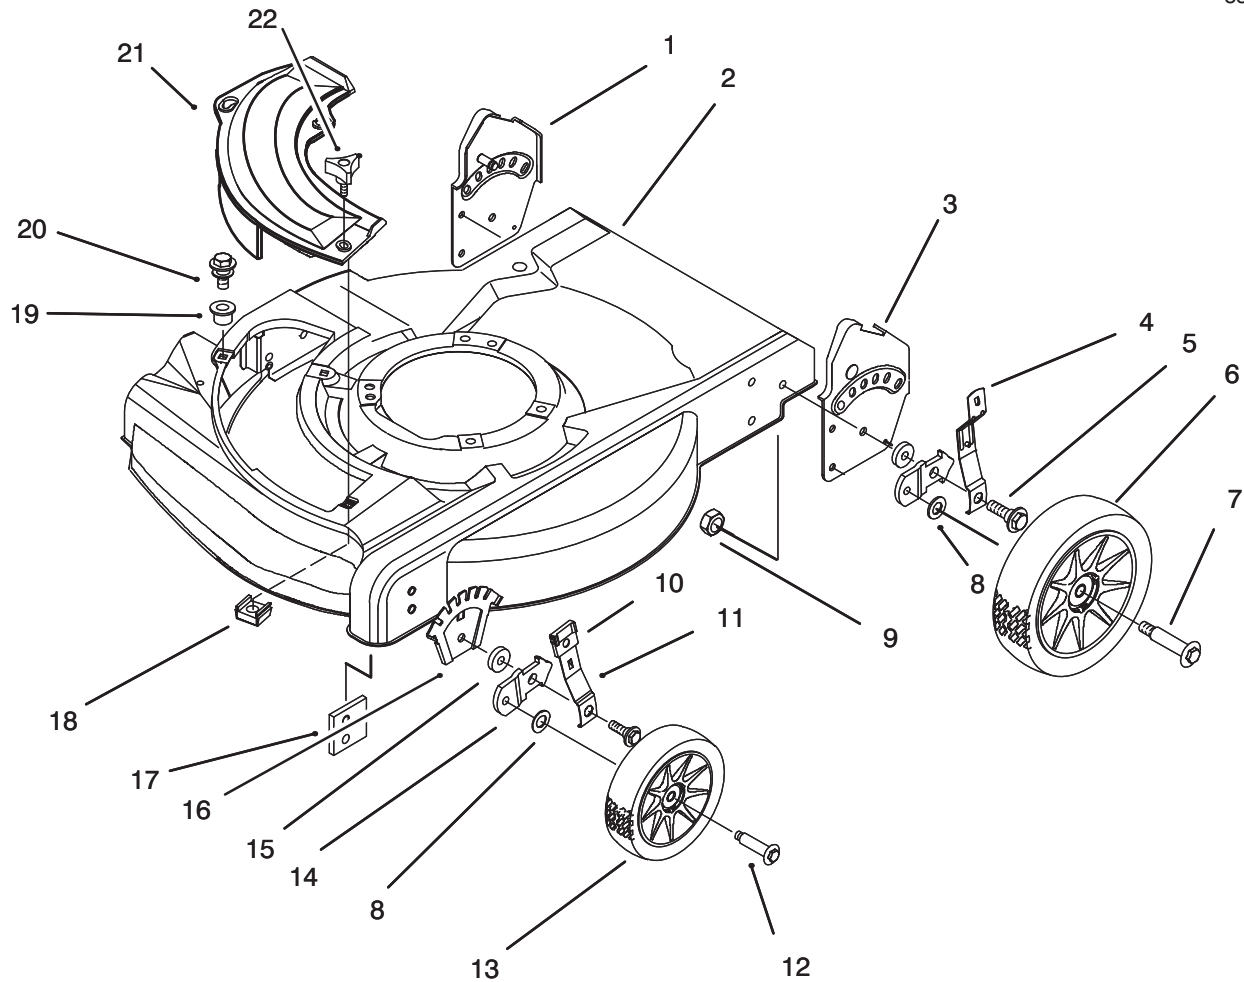

C-1998

## MULCH PLATE & WHEEL ASSEMBLY

 Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-7742	Bracket - Handle R.H. (Model No. 10211 Only)	1	10	92-1008	Knob - Height Adjust	4
2	16-4359	Housing (Model No. 10211 Only)	1	11	614687	Arm - Spring	2
3	92-7743	Bracket - Handle L.H. (Model No. 10211 Only)	1	12	92-1099	Bolt - Shoulder	2
4	92-1005	Arm - Spring (Model No. 10211 Only)	2	13	684776	Wheel & Tire Ass'y 6"	2
5	614672	Bolt - Shoulder Height Adj. (Qt'y (2) Model No. 10312 Only)	4	14	614637	Bracket - Wheel Height Adj. (Qt'y (2) Model No. 10312 Only)	4
6	684777	Wheel & Tire Ass'y 8" (Model No. 10211 Only)	2	15	92-4890	Washer (Qt'y (2) Model No. 10312 Only)	4
7	614650	Bolt - Shoulder (Model No. 10211 Only)	2	16	92-4481	Plate - Height Adj.	2
8	40-1940	Washer (Qt'y (2) Model No. 10312 Only)	4	17	92-7731	Plate - Baffle	2
9	3239-39	Nut - Lock (Model No. 10211 Only)	2	18	613765	Nut - Cage (Model No. 10211 Only)	1
				19	604604	Grommet - Plastic	2
				20	614677	Screw - Sems Thr'd Form.	2
				21	92-8630	Plate - Mulch	1
				22	614682	Knob - Cover Plate	1

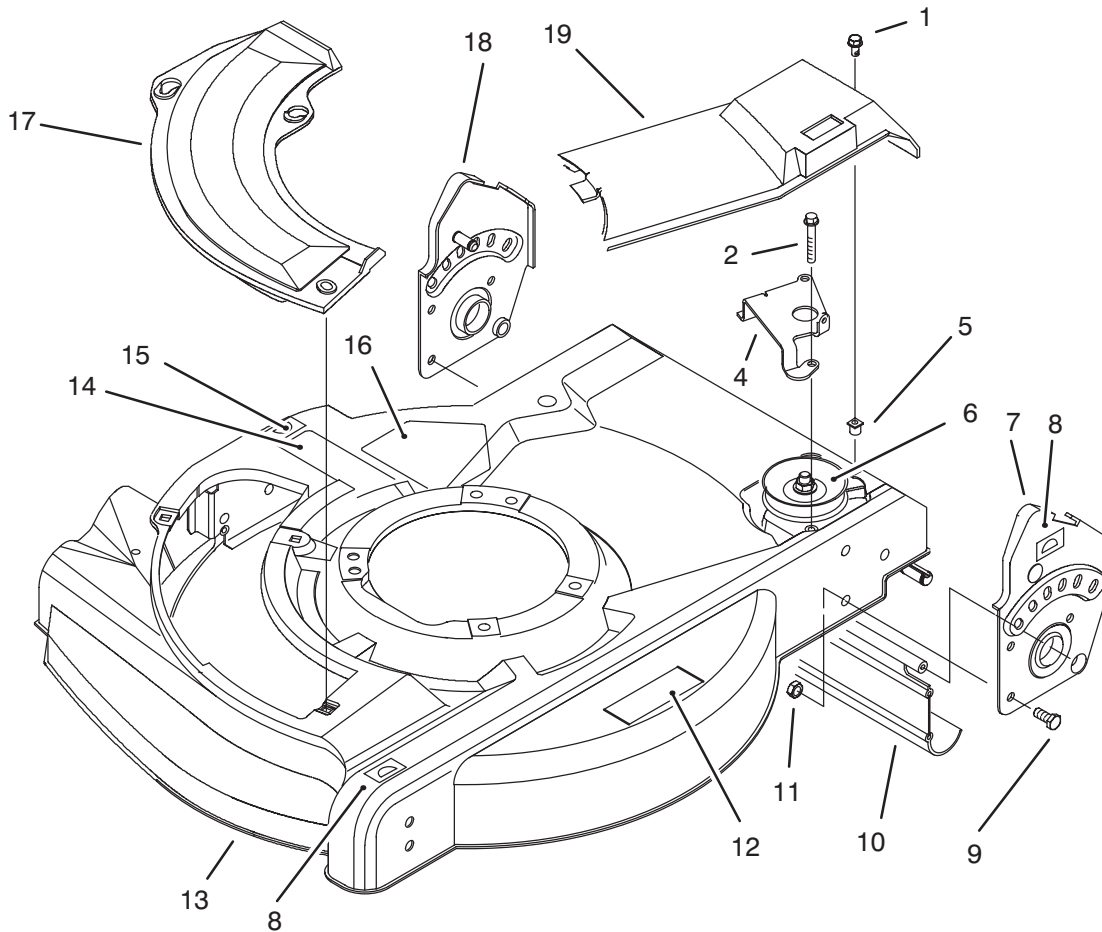


C-2146

## COVER ASSEMBLY

 Ref. No.	Part No.	Description	No. Used
1	92-9665	Screw - Phillips Hd. (Model No. 10312 Only)	1
2	4902040	Screw - Hex Hd. (Model No. 10312 Only)	2
4	92-7728	Guide - Transmission (Model No. 10312 Only)	1
5	605120	Grommet (Model No. 10312 Only)	1
6	92-7735	Gear Case Assembly (Model No. 10312 Only)	1
7	92-7724	Bracket - Handle L.H. (Model No. 10312 Only)	1
8	92-2915	Decal - H.O.C.	2
9	322-6	Screw - Hex Hd. Cap	6

Ref. No.	Part No.	Description	No. Used
10	92-8647	Shield - Trailing	1
11	3296-29	Nut - Lock	6
12	93-7250	Decal - Warning	1
*	93-7253	Decal - Warning (French)	1
13	16-4369	Housing (Model No. 10312 Only)	1
14	92-1097	Decal - Discharge	1
15	92-2914	Decal - H.O.C.	2
16	39-5770	Decal - Danger	1
17	607560	Plate - Cover	1
18	92-7723	Bracket - Handle R.H. (Model No. 10312 Only)	1
19	614671	Cover - Drive (Model No. 10312 Only)	1

\*Not Illustrated

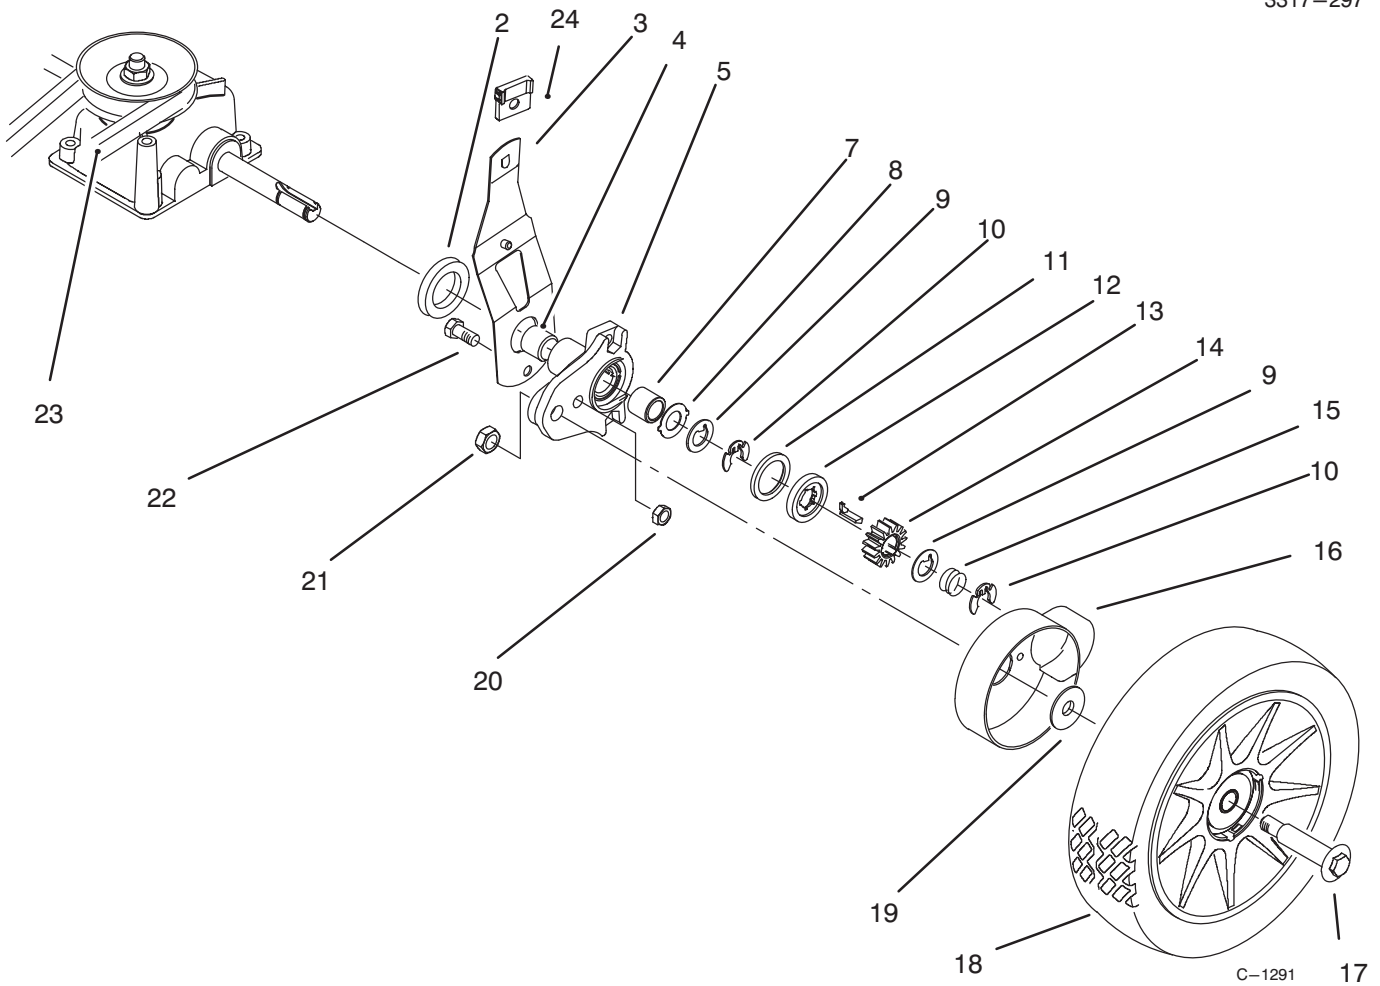


## REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	614447	Spacer – Axle Shaft	2
3	92-1004	Spring Arm Ass'y	2
4	70-9760	Bushing	2
5	92-7746	Pivot Arm Ass'y – Rear (Incl. Ref.#4, 6, & 7)	2
6	614442	Fitting – Grease	2
7	47-2900	Bushing	2
8	65-4730	Washer – Thrust Pivot Arm	2
9	65-4740	Washer – Thrust, Keyed	4
10	65-2720	Ring – Klip. Special	4
11	65-4710	Ring – Friction	2
12	65-4760	Washer – Clutch, Plastic	2

Ref. No.	Part No.	Description	No. Used
13	66-6050	Key – Rocking, LH	1
*	66-6040	Key – Rocking, RH	1
14	65-4750	Gear – Pinion	2
15	65-4720	Spring – Compression	2
16	614427	Cover Wheel	2
17	92-1057	Bolt – Wheel	2
18	92-1042	Wheel Ass'y – 8"	2
19	614426	Washer – Stepped	2
21	610358	Nut	2
22	32144-85	Screw	2
23	92-1043	V-Belt	1
24	92-1008	Knob	2

 \*Not Illustrated

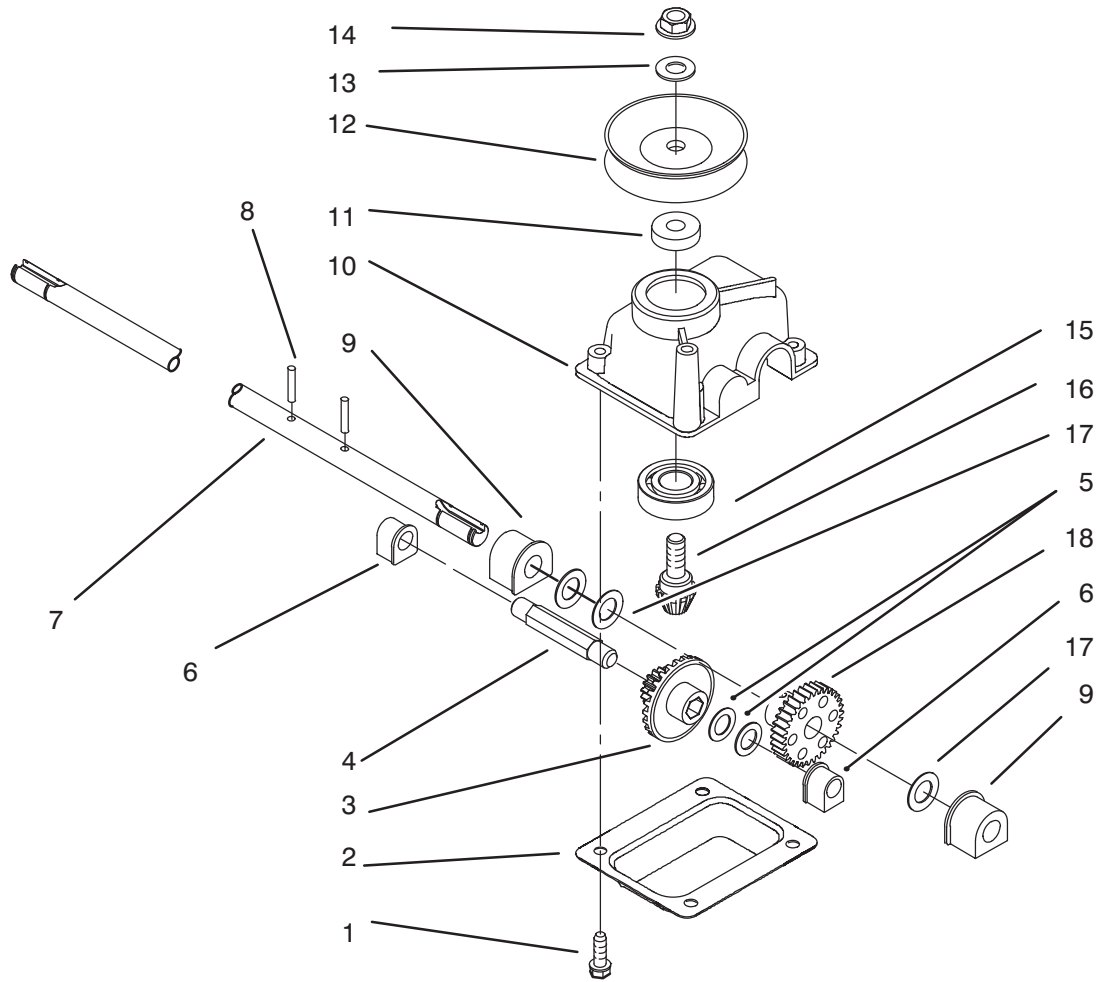


C-1292

## GEAR CASE ASSEMBLY

 Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw - Taptite	4
2	614668	Cover - Gear Case	1
3	55-3760	Pinion - 15 Tooth	1
4	614696	Shaft - Intermediate	1
5	36-4791	Washer	2
6	60-8750	Bushing	2
7	614666	Shaft - Output	1
8	3285-19	Pin - Groove	2
9	60-8850	Bushing - Output	2


Ref. No.	Part No.	Description	No. Used
10	92-7727	Gearcase	1
11	62-6660	Spacer	1
12	614669	Pulley - Half	2
13	3256-24	Washer	1
14	3296-5	Nut	1
15	38-7820	Bearing - Ball	1
16	60-8890	Gear - Bevel Pinion	1
17	36-4780	Washer - Thrust	2
18	614596	Gear 34 Tooth	1

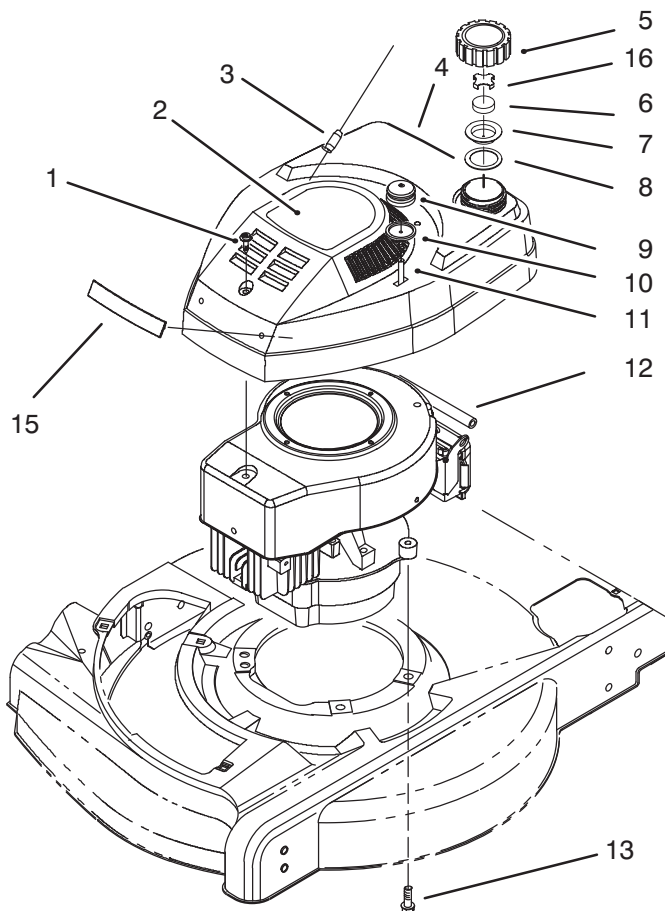

C-2147

## ENGINE ASSEMBLY

 
Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-4302	Screw - Sems	3	7	613311	Gasket	1
2	92-9569	Decal - Shroud (Model No. 10211 Only)	1	8	93-1230	Cover	1
2	92-9570	Decal - Shroud (Model No. 10312 Only)	1	9	66-7460	Bulb - Primer	1
3	92-1701	Stop - Rope	1	10	44-2750	Body - Primer	1
4	92-6380	Tank & Shroud	1	11	44-3174	Hose - Primer	1
5	93-3660	Gas Cap Assembly (Incl. Ref. #6-8, & 16)	1	12	612782	Line - Gas	1
6	609150	Baffle - Foam	1	13	92-1624	Screw - Engine	3
				15	92-8615	Applique - Shroud	1
				16	93-3175	Baffle - Gas Cap	1

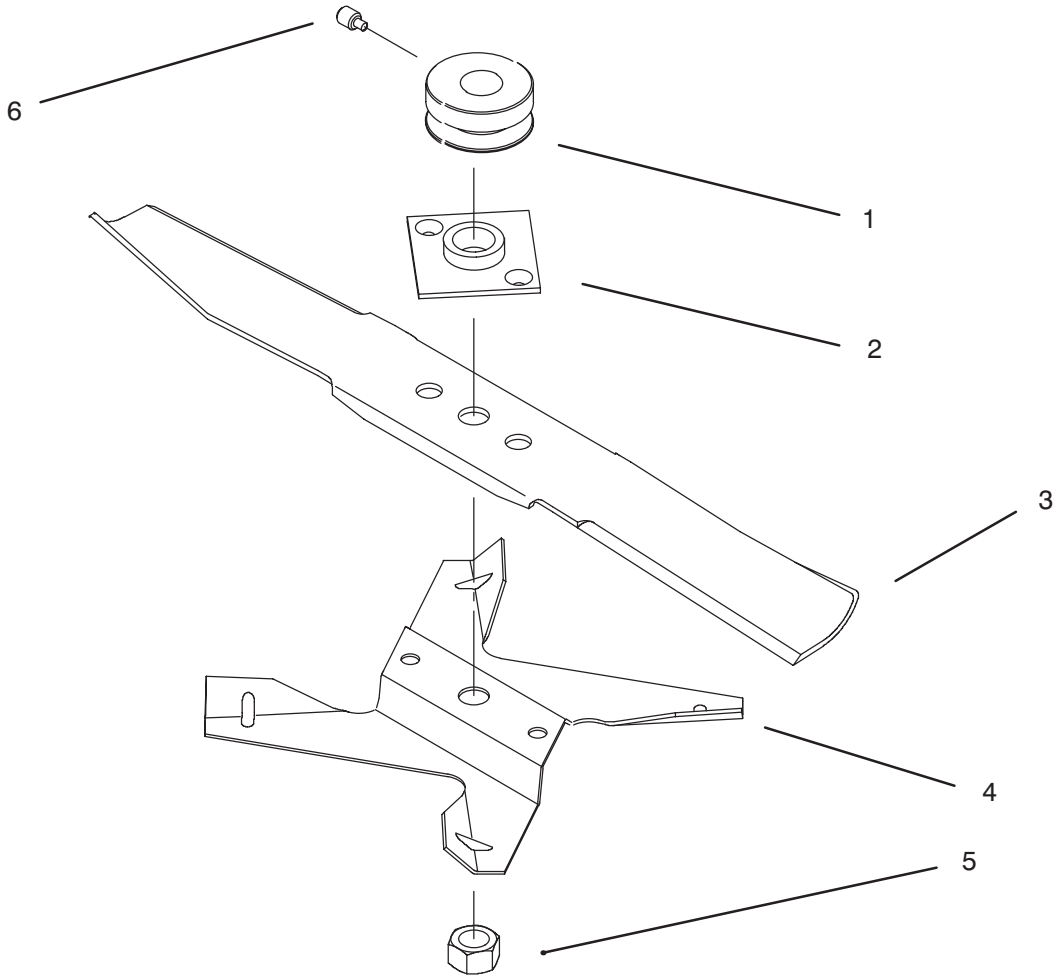

C-2001

## BLADE ASSEMBLY

 
Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-6542	Pulley – Engine (Model No. 10312 Only)	1	4	92-1630	Fan – Mulching	1
2	677525	Plate & Collar	1	5	603164	Nut – Blade	1
3	612543	Blade –21”	1	6	613227	Screw – Set (Model No. 10312 Only)	1

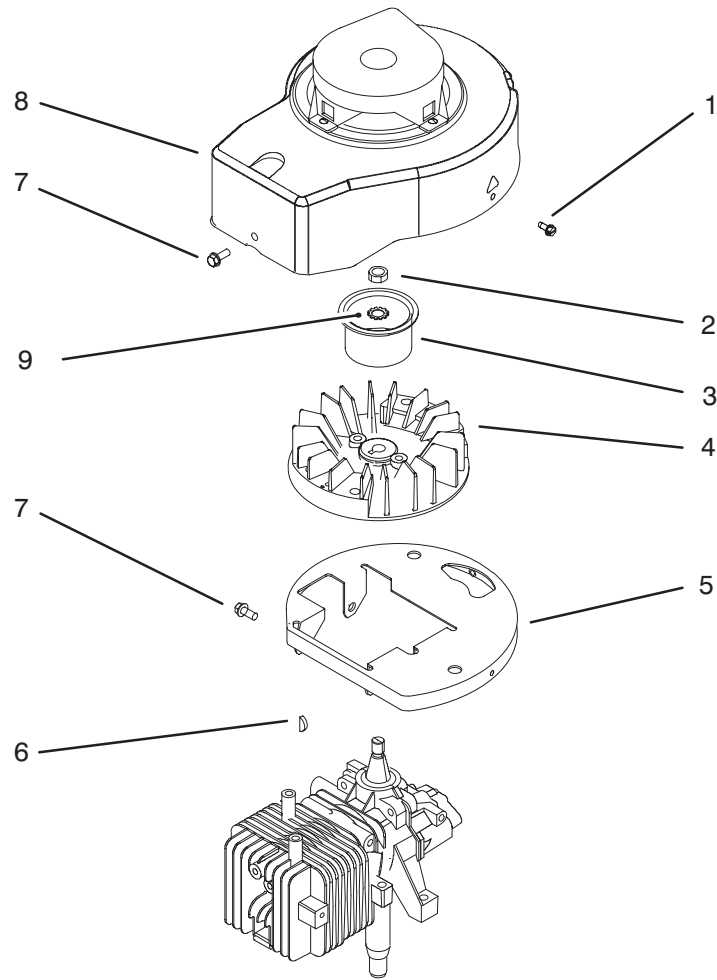

C-2128A

## ENGINE ASSEMBLY

 Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	614699	Screw	3	6	607199	Key	1
2	130743	Nut	1	7	614702	Screw	4
3	614640	Hub - Starter	1	8	93-4304	Shroud Assembly	1
4	684743	Flywheel	1	9	316959	Washer - Lock	1
5	93-1216	Base - Shroud	1				

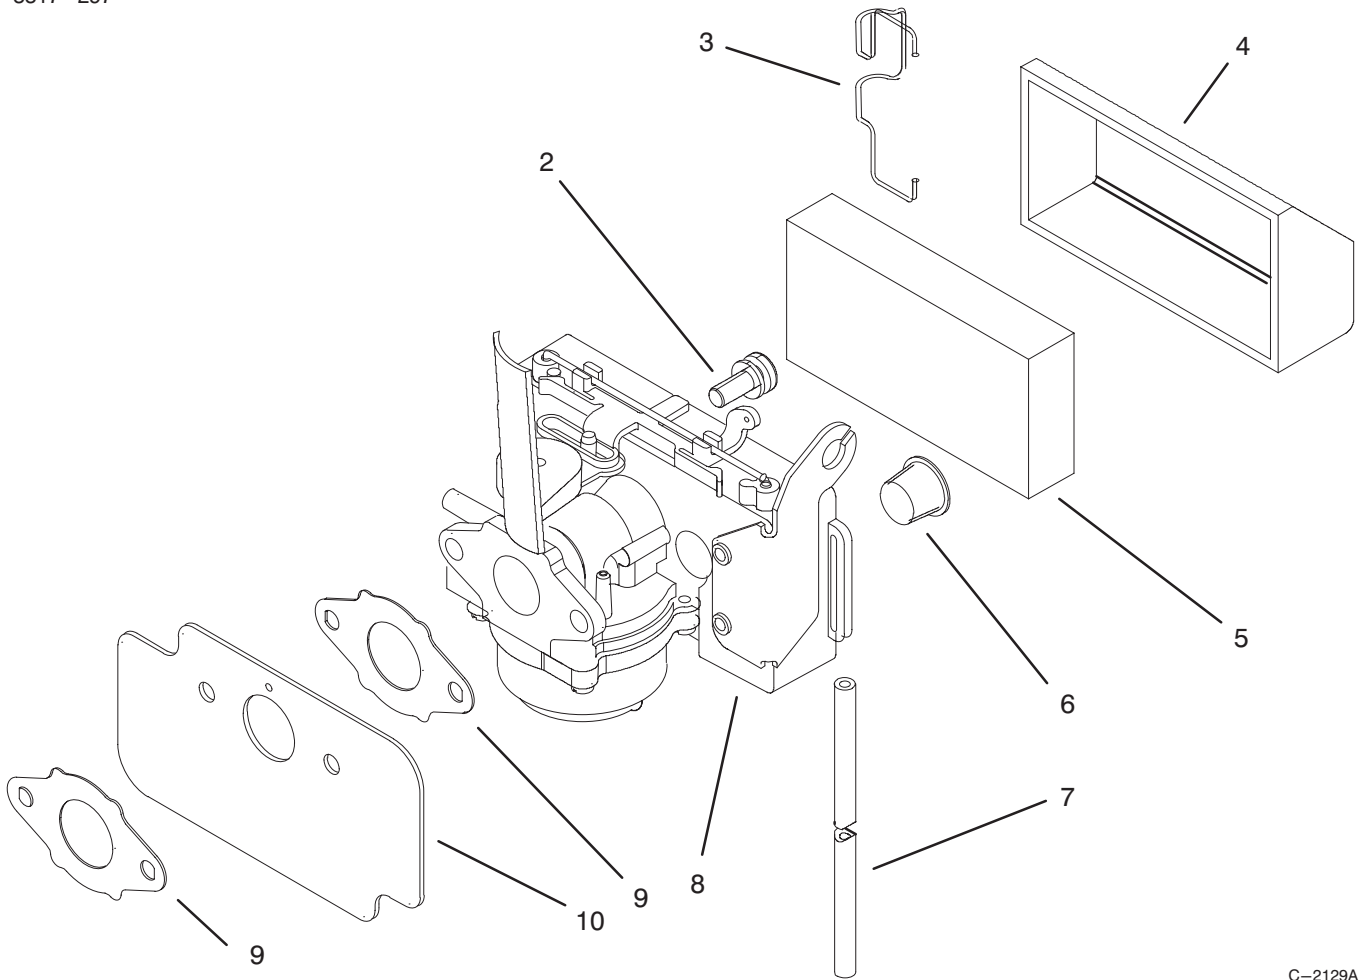


C-2129A

### ENGINE ASSEMBLY (Continued)

 Ref. No.	Part No.	Description	No. Used
2	609482	Screw	2
3	610383	Retainer – Filter	1
4	93-1231	Cover – Air Cleaner	1
5	609493	Element – Filter Air	1
6	611545	Plug	2

Ref. No.	Part No.	Description	No. Used
7	44-3174	Hose – Primer	1
8	92-9695	Carburetor Assembly	1
9	92-4948	Gasket – Carburetor	2
10	93-1221	Shield – Carburetor	1

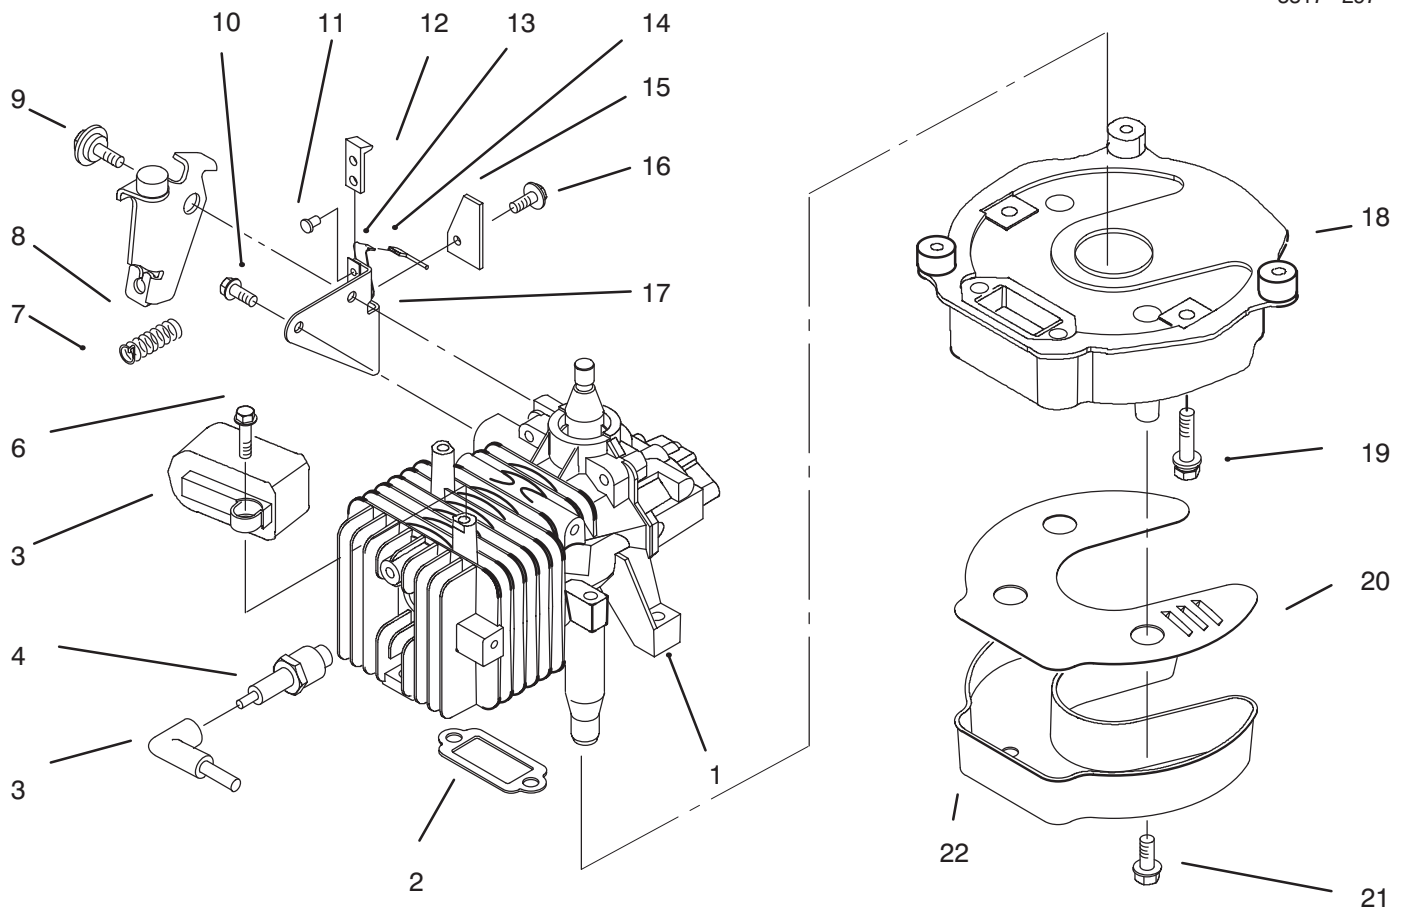


C-1296A

## ENGINE ASSEMBLY (Continued)

 Ref. No.	Part No.	Description	No. Used
1	92-9693	Short Block (Incl. Ref. #2) (Incl. Ref. #9 pg. 8)	1
2	93-1233	Gasket - Exhaust	1
3	92-1152	CD Ignition (Includes)	1
*	681678	Cover & Terminal	1
4	614009	Plug - Spark	1
6	613208	Screw - Hex. Washer Hd.	2
7	66-5370	Spring - Compression	1
8	66-5380	Brake Plate Assembly	1
9	92-9698	Screw - Shoulder	1
10	614702	Screw	1

Ref. No.	Part No.	Description	No. Used
11	3290-459	Rivet - Plastic	2
12	92-2925	Strap - Insulation	1
13	60-9010	Strap - Ground	1
14	92-1156	Wire - Brake Switch Lead	1
15	53-4690	Stop - Ground Strap	1
16	12-5450	Screw - Thread Forming	1
17	84-7820	Plate - Mounting	1
18	614654	Plate - Muffler	1
19	607601	Screw	4
20	614681	Baffle	1
21	609471	Screw	3
22	614674	Cover - Muffler	1

\*Not Illustrated

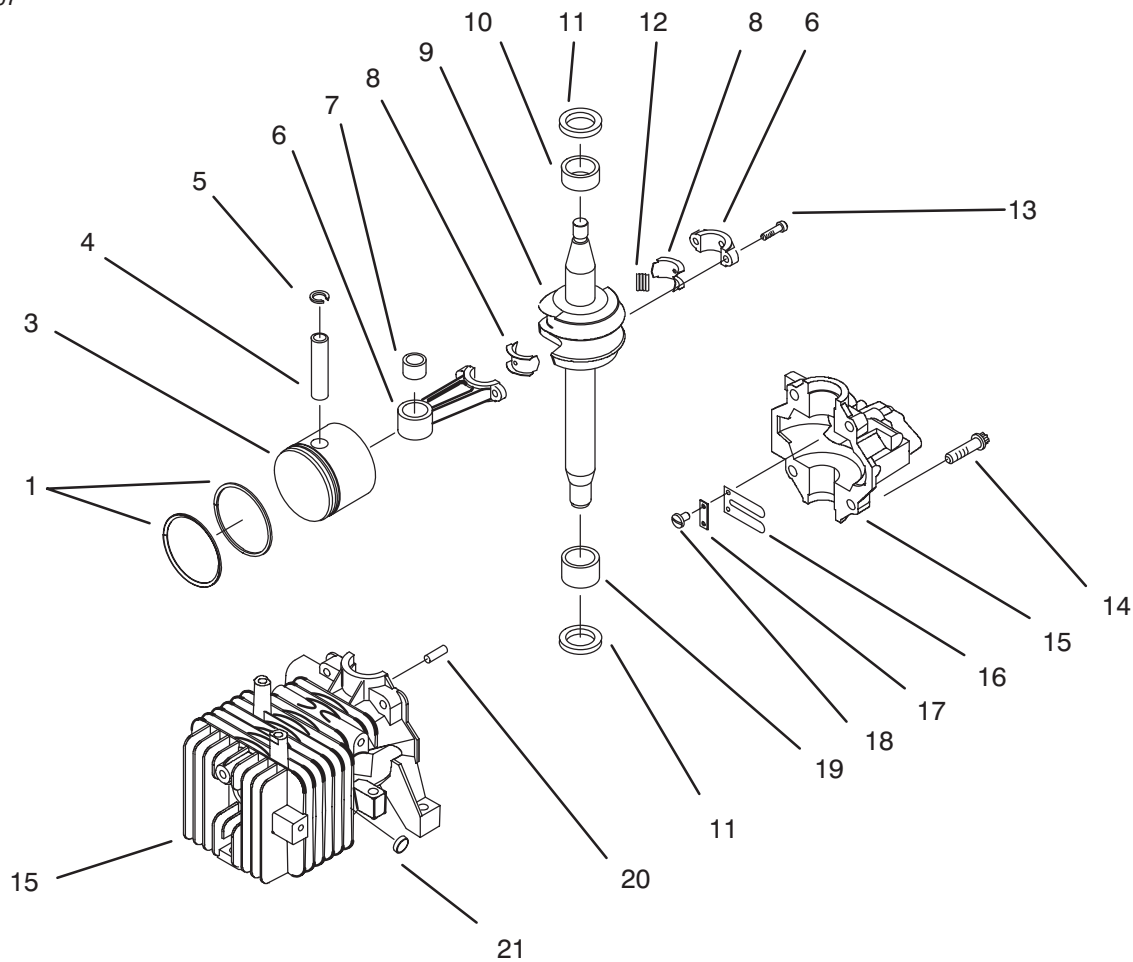


C-1295

## ENGINE ASSEMBLY (Continued)

 Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	681737	Set – Ring	1	12	683911	Bearing – Needle	1
3	92-4923	Piston & Ring Set	1	13	611393	Screw – Hex. Hd.	2
*	92-4925	Piston & Connecting Rod (Incl. Ref. #1, 3-8, 12, & 13)	1	14	614636	Screw – Torx. Washer Hd.	4
4	606608	Pin – Wrist	1	15	93-4311	Cylinder & Crankcase Ass'y (Incl. Ref. #14, 16-18, 20, 21, & 610372 Sealer)	1
5	303712	Ring – Retaining	2	16	602588	Reed – Carburetor	1
6	92-4921	Connecting Rod Assembly (Incl. Ref. #6-8, 12, & 13)	1	17	602587	Reed – Backup Plate	1
7	92-4927	Bearing	1	18	612872	Screw	2
8	677982	Liner – Split (Set of 2)	1	19	681831	Bearing – Needle	1
9	92-6375	Crankshaft	1	20	609629	Dowel	1
10	681830	Bearing – Upper Main	1	21	609123	Plug – Core	4
11	611396	Seal – Oil	2	*	610372	Sealer	1

\*Not Illustrated

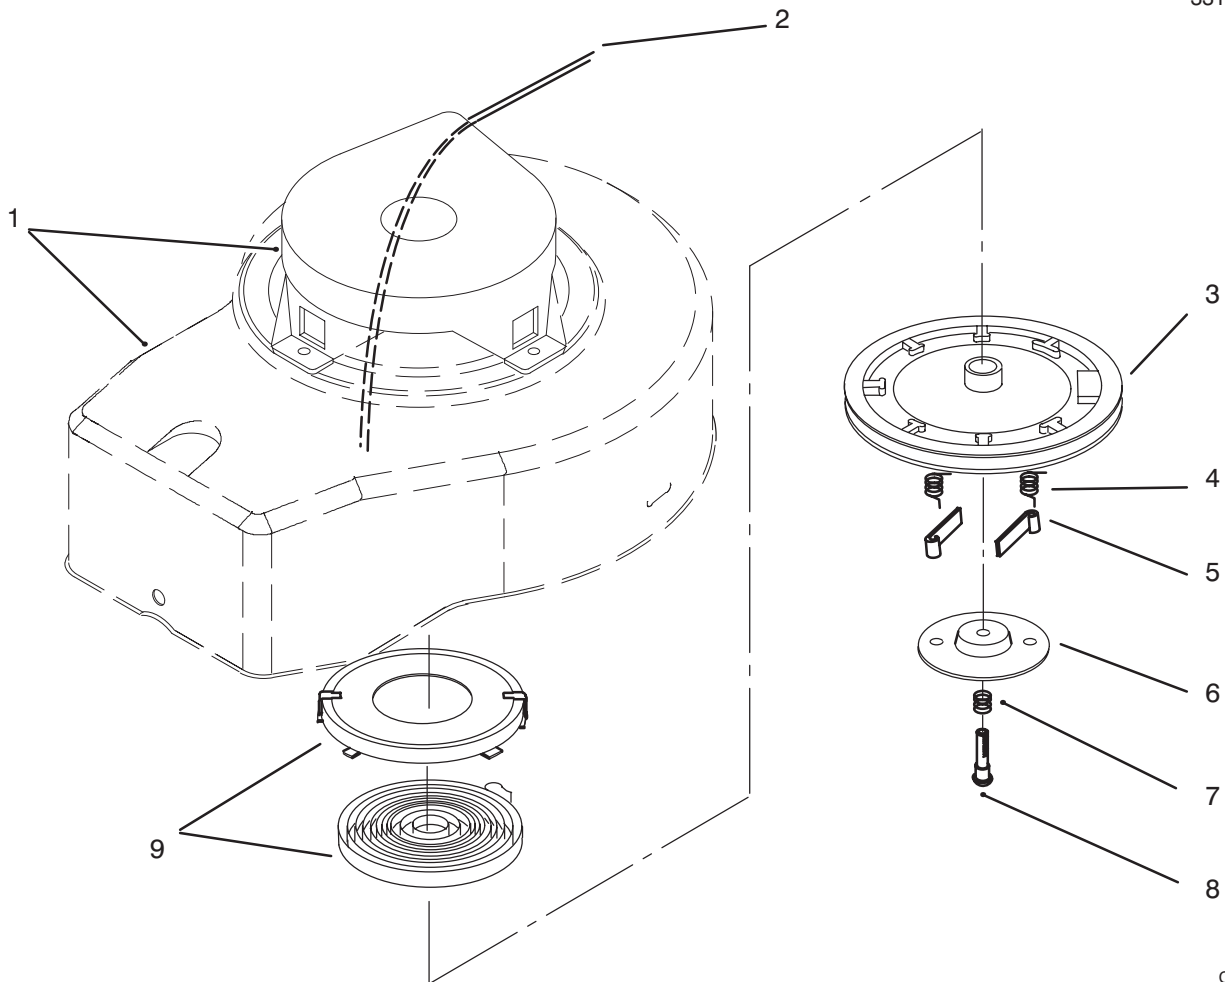


C-1309

## RECOIL STARTER ASSEMBLY

 Ref. No.	Part No.	Description	No. Used
1	93-4304	Housing Assembly	1
2	92-4928	Rope - Starter	1
3	92-4929	Pulley Assembly	1
4	92-4930	Spring - Dog	2
5	92-4931	Dog	2

Ref. No.	Part No.	Description	No. Used
6	92-9692	Retainer	1
7	92-4933	Screw	1
8	92-4934	Spring	1
9	92-4935	Spring Keeper Assembly	1

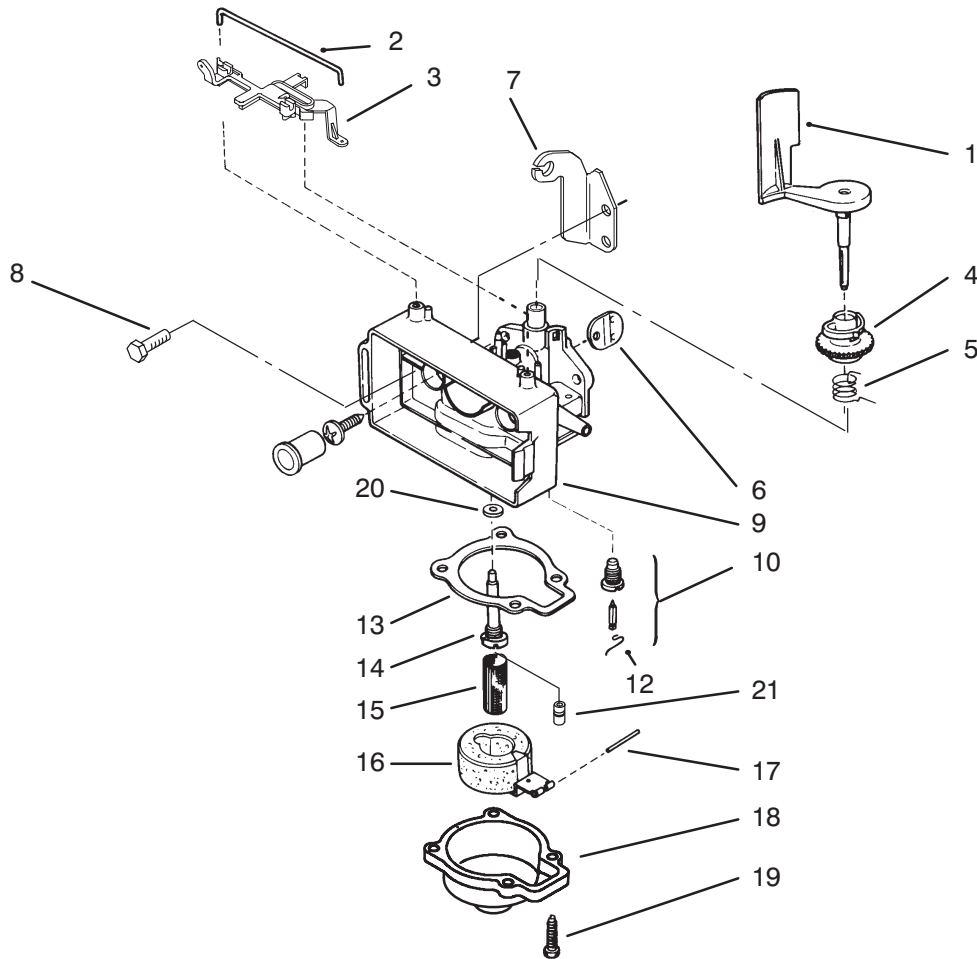


C-2130A

## CARBURETOR ASSEMBLY

 Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-6376	Air Vane & Shaft	1	12	603145	Spring	1
2	610165	Retainer - Speed Control	1	13	602850	Gasket	1
3	93-1225	Lever - Speed Adjust	1	14	92-6371	Nozzle	1
4	610834	Collar - Air Vane	1	15	611071	Filter - Fuel	1
5	92-4944	Spring - Governor	1	16	678113	Float & Arm Assembly	1
6	92-6373	Disc - Throttle	1	17	92-6389	Pin	1
7	92-4949	Bracket - Throttle Control	1	18	92-9691	Float Chamber	1
8	613269	Screw	2	19	608850	Screw	4
9	92-6377	Carburetor Body	1	20	612383	Washer	1
10	92-9697	Kit - Float Valve, Body & Seat (Incl. Ref. #12)	1	21	92-6370	Main Jet	1
				*	92-6385	Jet - High Altitude	1
				*	92-9695	Carburetor Assembly	1


\*Not Illustrated

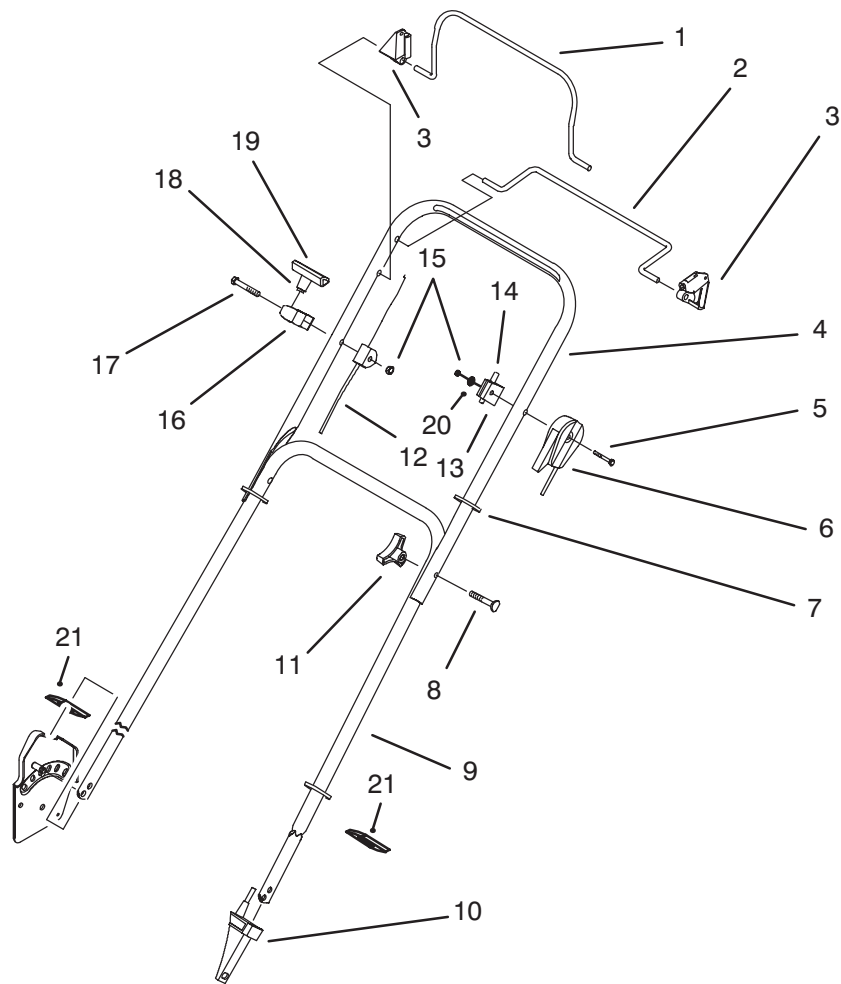

C-2148

## HANDLE ASSEMBLY

 Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-1002	Bail - Flywheel Brake	1			(Model No. 10312 Only)	1
2	92-1001	Bail - SP Control (Model No. 10312 Only)	1	11	614243	Knob	2
3	92-5412	Stop - Pivot (Qt'y (1) Model No. 10211 Only)	2	12	92-7739	Cable - Flywheel Brake	1
4	92-7737	Handle - Upper	1	13	92-7729	Anchor - Cable SP Upper (Model No. 10312 Only)	1
5	321-48	Screw - Hex Hd. Cap (Model No. 10211 Only)	1	14	92-7726	Cable - Traction (Model No. 10312 Only)	1
*	321-49	Screw - Hex Hd. Cap (Model No. 10312 Only)	1	15	3296-73	Nut - Lock	2
6	92-7734	Cable - Throttle	1	16	92-7720	Guide - Rope	1
7	614249	Tie - Cable (Qt'y (1) Model No. 10211 Only)	3	17	321-50	Screw - Hex Hd. Cap (Model No. 10312 Only)	1
8	614697	Screw - Handle	2	18	612825	Handle - Starter	1
9	614643	Handle - Lower	1	19	612824	Clip - Rope Insert	1
10	614693	Anchor - Cable SP Lower		20	92-8632	Washer (Model No. 10211 Only)	1
				21	93-3653	Guard - Handle (Model No. 10211) (Model No. 10312)	2 1

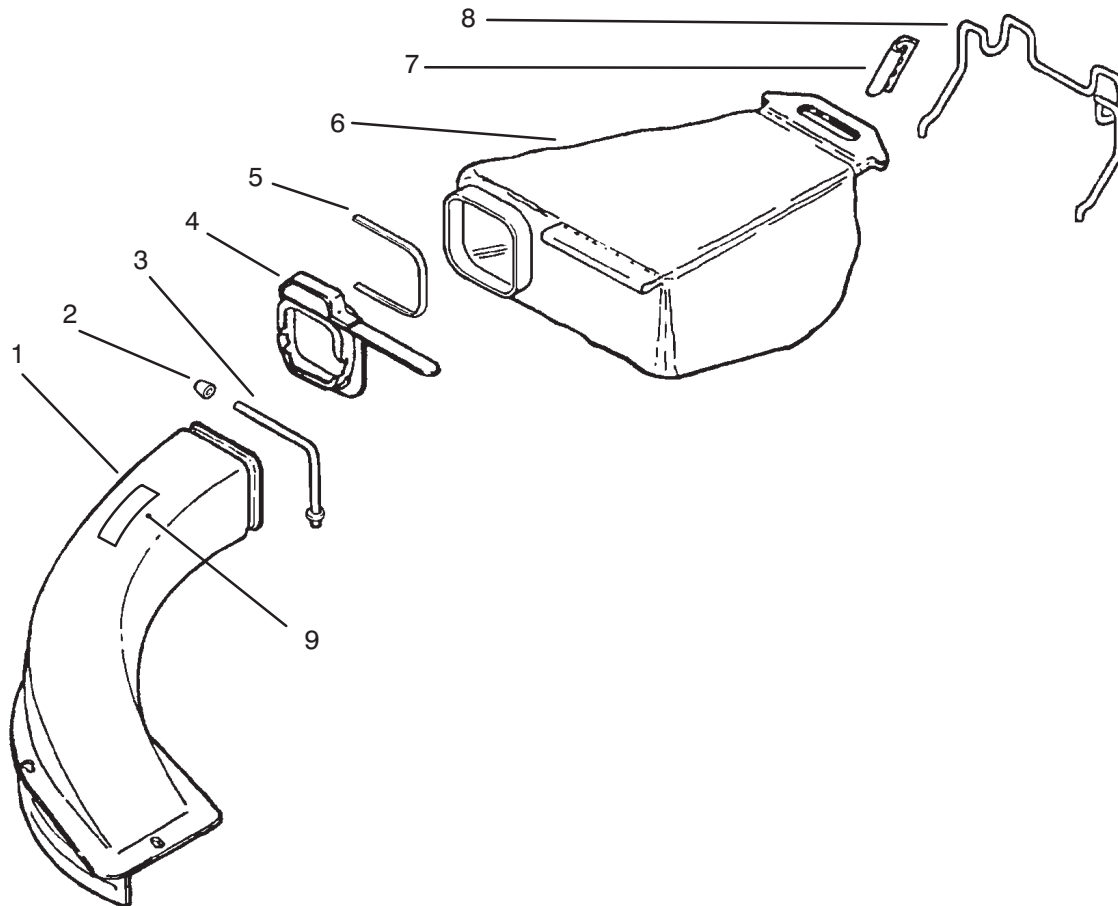

## REAR CATCHER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	684729	Chute & Support Assembly (Incl. Ref.# 2,3 & 9)	1
2	614589	Nut – Cap	1
3	614591	Chute Support	1
4	684727	Adaptor Assembly	1

Ref. No.	Part No.	Description	No. Used
5	614700	Tie Strap	1
*6	89801	Bag Assembly	1
7	613462	Hanger Clamp	2
8	613455	Wide Hanger	1
9	92-2919	Decal – Danger	1

\*Includes Ref.#5 and instruction sheet for installing bag to adapter assembly. Order via model #89801.

# LAWN-BOY PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
89801	Bag Assembly	14	*6	1	614672	Bolt – Shoulder Height Adj.	1	5	4
130743	Nut	7	2	1	614674	Cover – Muffler	9	22	1
303712	Ring – Retaining	10	5	2	614677	Screw – Sems Thr'd Form.	1	20	2
316959	Washer – Lock	7	9	1	614681	Baffle	9	20	1
602587	Reed – Backup Plate	10	17	1	614682	Knob – Cover Plate	1	22	1
602588	Reed – Carburetor	10	16	1	614687	Arm – Spring	1	11	2
602850	Gasket	12	13	1	614693	Anchor – Cable SP Lower	13	10	1
603145	Spring	12	12	1	614696	Shaft – Intermediate	4	4	1
603164	Nut – Blade	6	5	1	614697	Screw – Handle	13	8	2
604604	Grommet – Plastic	1	19	2	614699	Screw	7	1	3
605120	Grommet	2	5	1	614700	Tie Strap	14	5	1
606608	Pin – Wrist	10	4	1	614702	Screw	7	7	4
607199	Key	7	6	1	614702	Screw	9	10	1
607560	Plate – Cover	2	17	1	677525	Plate & Collar	6	2	1
607601	Screw	9	19	4	677982	Liner – Split (Set of 2)	10	8	1
608850	Screw	12	19	4	678113	Float & Arm Assembly	12	16	1
609123	Plug – Core	10	21	4	681678	Cover & Terminal	9	*	1
609150	Baffle – Foam	5	6	1	681737	Set – Ring	10	1	1
609471	Screw	9	21	3	681830	Bearing – Upper Main	10	10	1
609482	Screw	8	2	2	681831	Bearing – Needle	10	19	1
609493	Element – Filter Air	8	5	1	683911	Bearing – Needle	10	12	1
609629	Dowel	10	20	1	684727	Adaptor Assembly	14	4	1
610165	Retainer – Speed Control	12	2	1	684729	Chute & Support Assembly	14	1	1
610358	Nut	3	21	2	684743	Flywheel	7	4	1
610372	Sealer	10	*	1	684776	Wheel & Tire Ass'y 6	1	13	2
610383	Retainer – Filter	8	3	1	684777	Wheel & Tire Ass'y 8	1	6	2
610834	Collar – Air Vane	12	4	1	4902040	Screw – Hex Hd.	2	2	2
611071	Filter – Fuel	12	15	1	12-5450	Screw – Thread Forming	9	16	1
611393	Screw – Hex. Hd.	10	13	2	16-4359	Housing	1	2	1
611396	Seal – Oil	10	11	2	16-4369	Housing	2	13	1
611545	Plug	8	6	2	36-4780	Washer – Thrust	4	17	2
612383	Washer	12	20	1	36-4791	Washer	4	5	2
612543	Blade –21	6	3	1	38-7820	Bearing – Ball	4	15	1
612782	Line – Gas	5	12	1	39-5770	Decal – Danger	2	16	1
612824	Clip – Rope Insert	13	19	1	40-1940	Washer	1	8	4
612825	Handle – Starter	13	18	1	44-2750	Body – Primer	5	10	1
612872	Screw	10	18	2	44-3174	Hose – Primer	8	7	1
613208	Screw – Hex. Washer Hd.	9	6	2	44-3174	Hose – Primer	5	11	1
613227	Screw – Set	6	6	1	47-2900	Bushing	3	7	2
613269	Screw	12	8	2	53-4690	Stop – Ground Strap	9	15	1
613311	Gasket	5	7	1	55-3760	Pinion – 15 Tooth	4	3	1
613455	Wide Hanger	14	8	1	60-8750	Bushing	4	6	2
613462	Hanger Clamp	14	7	2	60-8850	Bushing – Output	4	9	2
613765	Nut – Cage	1	18	1	60-8890	Gear – Bevel Pinion	4	16	1
614009	Plug – Spark	9	4	1	60-9010	Strap – Ground	9	13	1
614243	Knob	13	11	2	62-6660	Spacer	4	11	1
614249	Tie – Cable	13	7	3	65-2720	Ring – Klip. Special	3	10	4
614426	Washer – Stepped	3	19	2	65-4710	Ring – Friction	3	11	2
614427	Cover Wheel	3	16	2	65-4720	Spring – Compression	3	15	2
614442	Fitting – Grease	3	6	2	65-4730	Washer – Thrust Pivot Arm	3	8	2
614447	Spacer – Axle Shaft	3	2	2	65-4740	Washer – Thrust, Keyed	3	9	4
614589	Nut – Cap	14	2	1	65-4750	Gear – Pinion	3	14	2
614591	Chute Support	14	3	1	65-4760	Washer – Clutch, Plastic	3	12	2
614596	Gear 34 Tooth	4	18	1	66-5370	Spring –Compression	9	7	1
614636	Screw – Torx. Washer Hd.	10	14	4	66-5380	Brake Plate Assembly	9	8	1
614637	Bracket – Wheel Height Adj.	1	14	4	66-6040	Key – Rocking, RH	3	*	1
614640	Hub – Starter	7	3	1	66-6050	Key – Rocking, LH	3	13	1
614643	Handle – Lower	13	9	1	66-7460	Bulb – Primer	5	9	1
614650	Bolt – Shoulder	1	7	2	70-9760	Bushing	3	4	2
614654	Plate – Muffler	9	18	1	84-7820	Plate – Mounting	9	17	1
614666	Shaft – Output	4	7	1	92-1001	Bail – SP Control	13	2	1
614668	Cover – Gear Case	4	2	1	92-1002	Bail – Flywheel Brake	13	1	1
614669	Pulley – Half	4	12	2	92-1004	Spring Arm Ass'y	3	3	2
614671	Cover – Drive	2	19	1	92-1005	Arm – Spring	1	4	2

\*Not Illustrated

# LAWN – BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
92-1008	Knob	3	24	2	92-7731	Plate – Baffle	1	17	2
92-1008	Knob – Height Adjust	1	10	4	92-7734	Cable – Throttle	13	6	1
92-1042	Wheel Ass'y – 8	3	18	2	92-7735	Gear Case Assembly	2	6	1
92-1043	V-Belt	3	23	1	92-7737	Handle – Upper	13	4	1
92-1057	Bolt – Wheel	3	17	2	92-7739	Cable – Flywheel Brake	13	12	1
92-1097	Decal – Discharge	2	14	1	92-7742	Bracket – Handle R.H.	1	1	1
92-1099	Bolt – Shoulder	1	12	2	92-7743	Bracket – Handle L.H.	1	3	1
92-1152	CD Ignition	9	3	1	92-7746	Pivot Arm Ass'y – Rear	3	5	2
92-1156	Wire – Brake Switch Lead	9	14	1	92-8615	Applique – Shroud	5	15	1
92-1624	Screw – Engine	5	13	3	92-8630	Plate – Mulch	1	21	1
92-1630	Fan – Mulching	6	4	1	92-8632	Washer	13	20	1
92-1701	Stop – Rope	5	3	1	92-8647	Shield – Trailing	2	10	1
92-2914	Decal – H.O.C.	2	15	2	92-9569	Decal – Shroud	5	2	1
92-2915	Decal – H.O.C.	2	8	2	92-9570	Decal – Shroud	5	2	1
92-2919	Decal – Danger	14	9	1	92-9665	Screw – Phillips Hd.	2	1	1
92-2925	Strap – Insulation	9	12	1	92-9691	Float Chamber	12	18	1
92-4481	Plate – Height Adj.	1	16	2	92-9692	Retainer	11	6	1
92-4890	Washer	1	15	4	92-9693	Short Block	9	1	1
92-4921	Connecting Rod Assembly	10	6	1	92-9695	Carburetor Assembly	12	*	1
92-4923	Piston & Ring Set	10	3	1	92-9695	Carburetor Assembly	8	8	1
92-4925	Piston & Connecting Rod	10	*	1	92-9697	Kit – Float Valve, Body	12	10	1
92-4927	Bearing	10	7	1	92-9698	Screw – Shoulder	9	9	1
92-4928	Rope – Starter	11	2	1	93-1216	Base – Shroud	7	5	1
92-4929	Pulley Assembly	11	3	1	93-1221	Shield – Carburetor	8	10	1
92-4930	Spring – Dog	11	4	2	93-1225	Lever – Speed Adjust	12	3	1
92-4931	Dog	11	5	2	93-1230	Cover	5	8	1
92-4933	Screw	11	7	1	93-1231	Cover – Air Cleaner	8	4	1
92-4934	Spring	11	8	1	93-1233	Gasket – Exhaust	9	2	1
92-4935	Spring Keeper Assembly	11	9	1	93-3175	Baffle – Gas Cap	5	16	1
92-4944	Spring – Governor	12	5	1	93-3653	Guard – Handle	13	21	2
92-4948	Gasket – Carburetor	8	9	2	93-3660	Gas Cap Assembly	5	5	1
92-4949	Bracket – Throttle Control	12	7	1	93-4302	Screw – Sems	5	1	3
92-5412	Stop – Pivot	13	3	2	93-4304	Housing Assembly	11	1	1
92-6370	Main Jet	12	21	1	93-4304	Shroud Assembly	7	8	1
92-6371	Nozzle	12	14	1	93-4311	Cylinder & Crankcase Ass'y	10	15	1
92-6373	Disc – Throttle	12	6	1	93-7250	Decal – Warning	2	12	1
92-6375	Crankshaft	10	9	1	93-7253	Decal – Warning (French)	2	*	1
92-6376	Air Vane & Shaft	12	1	1	321-48	Screw – Hex Hd. Cap	13	5	1
92-6377	Carburetor Body	12	9	1	321-49	Screw – Hex Hd. Cap	13	*	1
92-6380	Tank & Shroud	5	4	1	321-50	Screw – Hex Hd. Cap	13	17	1
92-6385	Jet – High Altitude	12	*	1	322-6	Screw – Hex Hd. Cap	2	9	6
92-6389	Pin	12	17	1	3239-39	Nut – Lock	1	9	2
92-6542	Pulley – Engine	6	1	1	3256-24	Washer	4	13	1
92-7720	Guide – Rope	13	16	1	3285-19	Pin – Groove	4	8	2
92-7723	Bracket – Handle R.H.	2	18	1	3290-459	Rivet – Plastic	9	11	2
92-7724	Bracket – Handle L.H.	2	7	1	3296-5	Nut	4	14	1
92-7726	Cable – Traction	13	14	1	3296-29	Nut – Lock	2	11	6
92-7727	Gearcase	4	10	1	3296-73	Nut – Lock	13	15	2
92-7728	Guide – Transmission	2	4	1	32144-4	Screw – Taptite	4	1	4
92-7729	Anchor – Cable SP Upper	13	13	1	32144-85	Screw	3	22	2

\*Not Illustrated



