



22in Recycler[®] Lawn Mower

Model No. 20064 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck, Side Chute and Rear Door Assembly 3	Crankcase Assembly Briggs and Stratton 124T02-0161-B1 14
Rear Axle Assembly 4	Carburetor Assembly Briggs and Stratton 124T02-0161-B1 15
Front Axle and Transmission Assembly 5	Air Cleaner Assembly Briggs and Stratton 124T02-0161-B1 16
Transmission Assembly No. 106-3955 6	Governor Assembly Briggs and Stratton 124T02-0161-B1 17
Engine and Blade Assembly 7	Muffler and Fuel Tank Assembly Briggs and Stratton 124T02-0161-B1 18
Handle Assembly 8	Blower Housing Assembly Briggs and Stratton 124T02-0161-B1 19
Rear Bag Assembly 9	Starter Assembly Briggs and Stratton 124T02- 0161-B1 20
Cylinder Assembly Briggs and Stratton 124T02-0161-B1 10	Attachments and Accessories List 21
Engine Gasket Set Briggs and Stratton 124T02-0161-B1 11		
Carburetor Overhaul Kit Briggs and Stratton 124T02-0161-B1 12		
Crankshaft Assembly Briggs and Stratton 124T02-0161-B1 13		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|--|---|
| ❶ Not serviced separately | ❷ Obtain from your local Briggs & Stratton dealer |
| ❸ Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ Included in Engine Gasket Set (Ref. No. 358) |
| ❺ Included in Carburetor Gasket Set (Ref. No. 977) | |

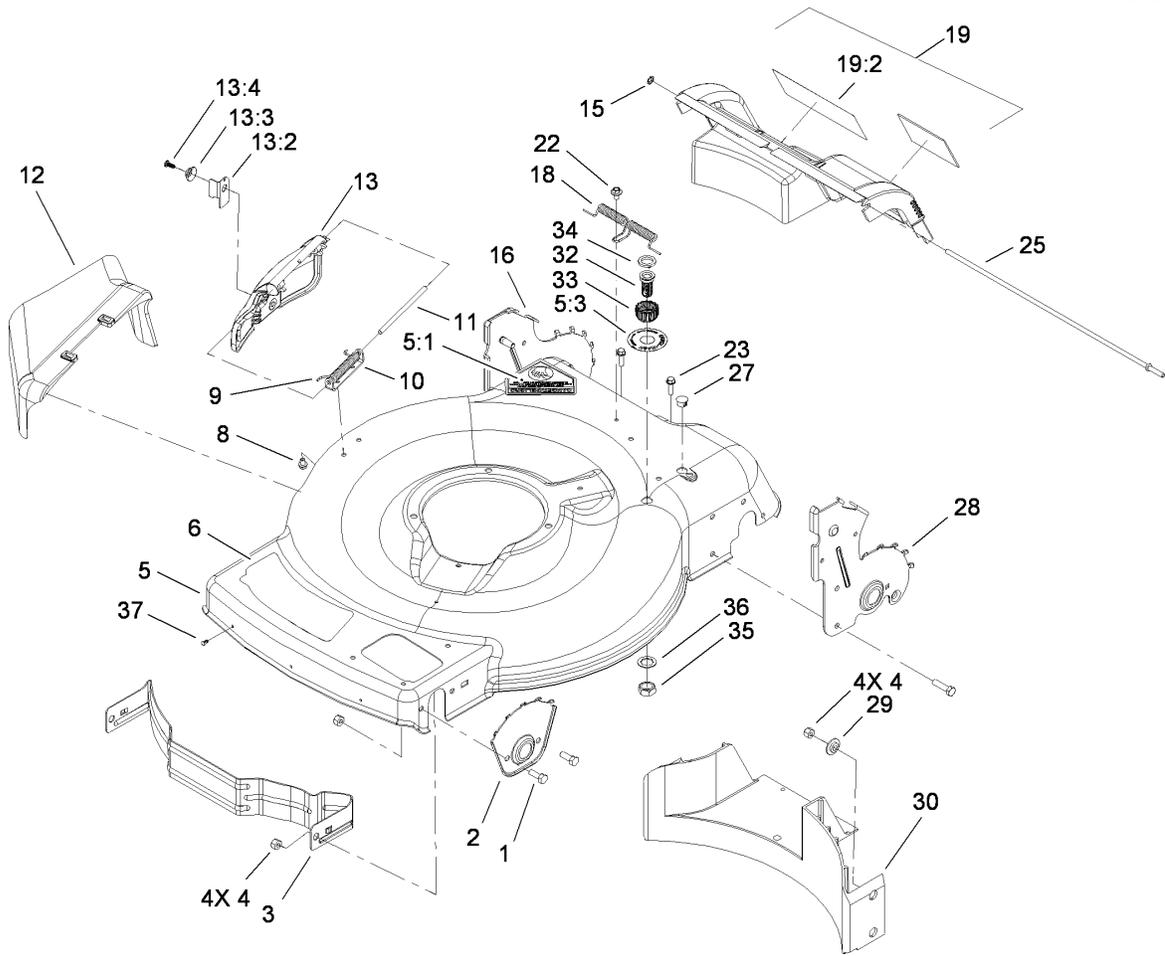

Deck, Side Chute and Rear Door Assembly

Ref	Part No.	Qty.	Description
1	322-3	4	Screw-HH
2	105-1808-03	2	Plate-HOC, Front
3	104-8694-03	1	Baffle-Front
4	3296-29	8	Nut-Lock, NI
5	112-8850	1	Housing ASM
5:1	94-8072	1	Decal-Danger
5:3	112-8867	1	Decal-Washout Port, Trilingual
6	114-0322	1	Decal-Deck
8	99-8445	2	Screw-HWH
9	99-5293	1	Spring-Torsion
10	112-6416	1	Bracket-Cover
11	99-5291	1	Rod-Cover
12	105-3028	1	Chute-Discharge, Side
13	106-8376	1	Discharge Door ASM
13:2	107-0795	1	Latch-Door
13:3	107-7456	1	Cap-Door
13:4	107-7461	1	Screw-Plastite
15	32112-6	1	Nut-Push
16	112-6441	1	8 Inch RH HOC Plate ASM
18	105-3032	1	Spring-Door, Rear
19	112-8864	1	Rear Door ASM
19:2	112-8759	1	Decal-Warning
22	46-6810	1	Screw And Washer ASM
23	46-8091	2	Screw-HWH


Ref	Part No.	Qty.	Description
25	105-1827	1	Rod-Pivot, Rear Door
27	104-9369	1	Plug-Dome
28	112-6443	1	8 Inch LH HOC Plate ASM
29	105-3006	4	Washer-Stepped
30	105-3047	1	Baffle-Rear
32	112-6400	1	Port-Washout
33	112-6401	1	Coupling-Hose, Washout Port
34	112-6438	1	Washer-Seal, Washout Port
35	3218-6	1	Nut-Jam
36	3254-5	1	Washer-Tooth
37	112-6436	3	Plug-Arrow

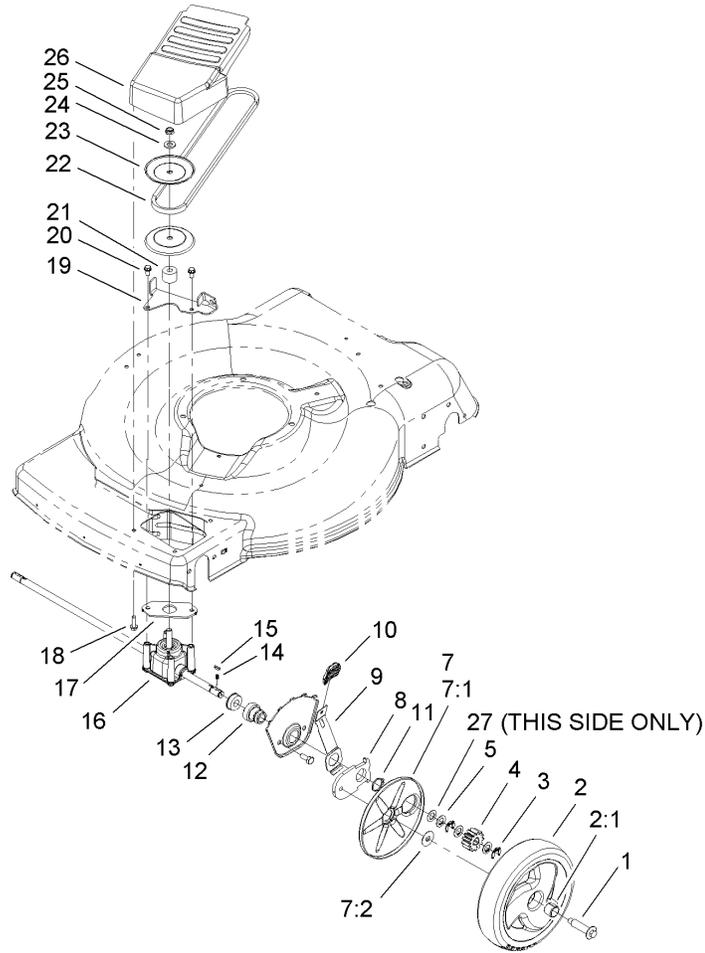

Front Axle and Transmission Assembly

Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	105-1815	2	Wheel Gear ASM
2:1	27-6250	2	Bushing
3	65-2720	4	Ring-Clip, Locking
4	104-8670	2	Gear-Pinion, 13T
5	105-6840	6	Washer-Thrust
7	110-1792	2	Wheel Cover ASM
7:1		1	Cover-Wheel
7:2	614426	1	Washer-Stepped
8	105-1807	2	Arm-Pivot, Front
9	105-1809	2	Arm-Spring
10	105-3042	2	Knob-Lever, HOC
11	32151-36	2	Ring-Retaining
12	104-8698	2	Retainer-Bearing, HOC
13	104-8699	2	Bearing-Ball
14	39-9650	2	Spring-Compression
15	612066	2	Key
16	106-3955	1	Transmission ASM
17	108-9756	1	Gasket-Gearbox
18	46-8091	2	Screw-HWH
19	105-1833-03	1	Bracket-Pivot, Fwd
20	32144-4	2	Screw-HWH
21	92-5791	1	Spacer
22	91-2258	1	V-Belt


Ref	Part No.	Qty.	Description
23	104-8691	2	Pulley-Half, Front
24	3256-24	1	Washer-Flat
25	3296-5	1	Nut-Lock
26	105-1839	1	Cover-Belt, Front
27	36-4780	1	Washer-Plain

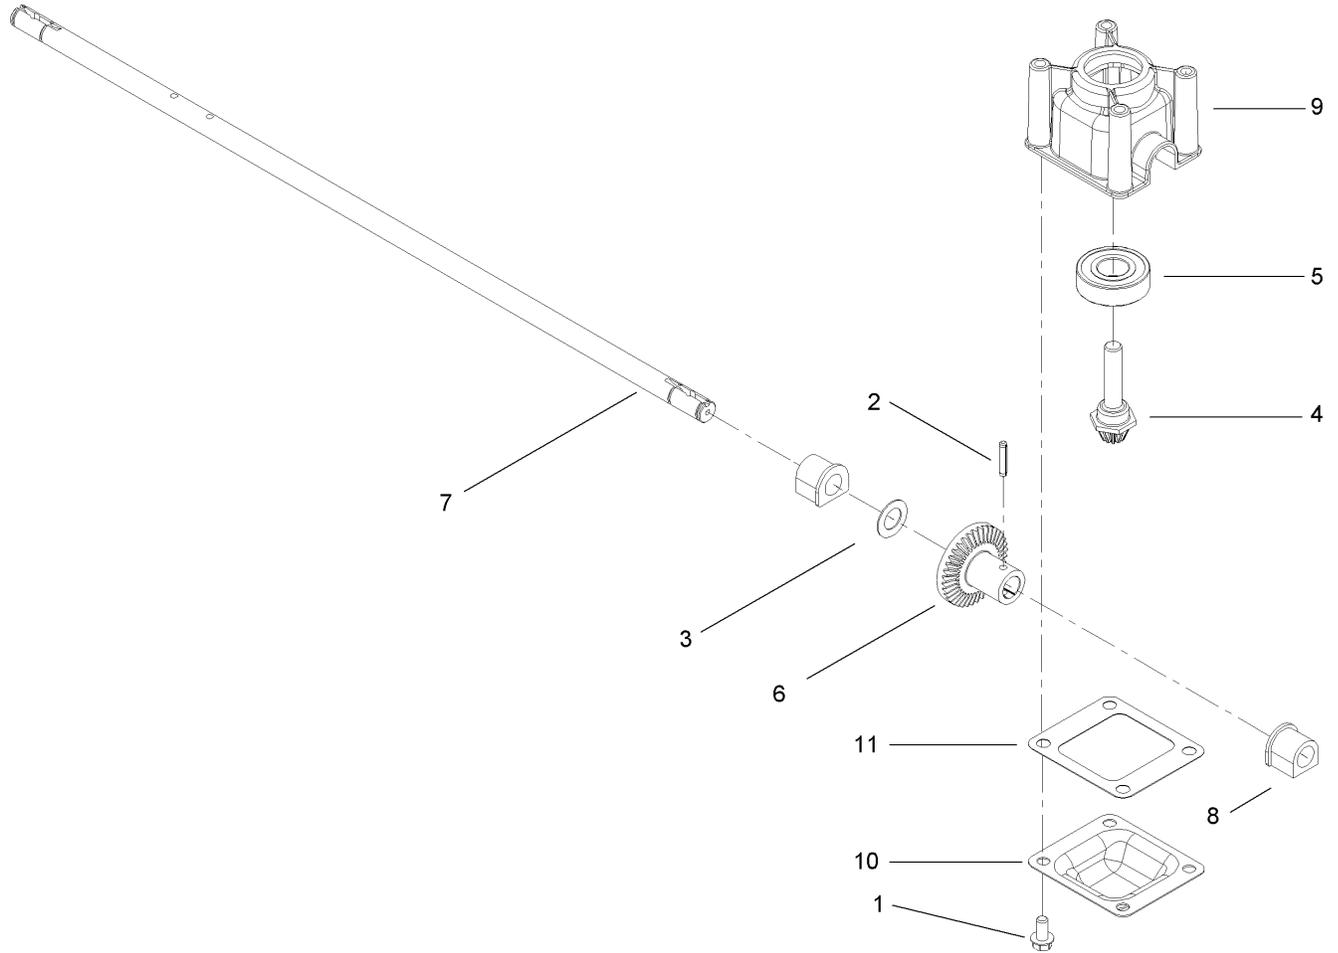

Transmission Assembly No. 106-3955


Ref	Part No.	Qty.	Description
1	32144-4	4	Screw-HWH
2	3285-19	1	Pin-Groove
3	36-4780	1	Washer-Plain
4	92-5790	1	Pinion
5	100-1048	1	Bearing-Ball
6	104-8671	1	Gear-Bevel, 37T
7	106-3957	1	Shaft-Output
8	104-8673	2	Bushing-Shaft, Output
9	104-8674	1	Gearcase-Upper
10	104-8675-03	1	Cover-Gearcase
11	105-6839	1	Gasket-Gearcase

--	--	--	--

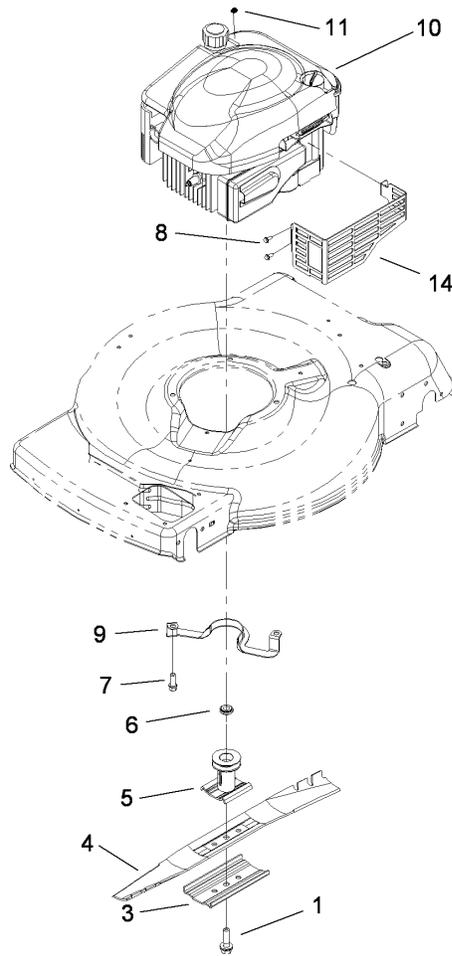

Engine and Blade Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
3	108-3766-03	1	Support-Blade				
4	108-9764-03	1	Blade-22 Inch				
5	106-3987	1	Blade Driver ASM				
6	106-3999	1	Spacer-Driver				
7	95-1726	3	Screw-Taptite				
8	32144-1	3	Screw-Taptite				
9	105-3031-03	1	Guide-Belt				
10		1	Engine-Briggs And Stratton, 124T02-0161-B1				
11	92-1701	1	Stop-Rope				
14	104-7577-03	1	Shield-Muffler				

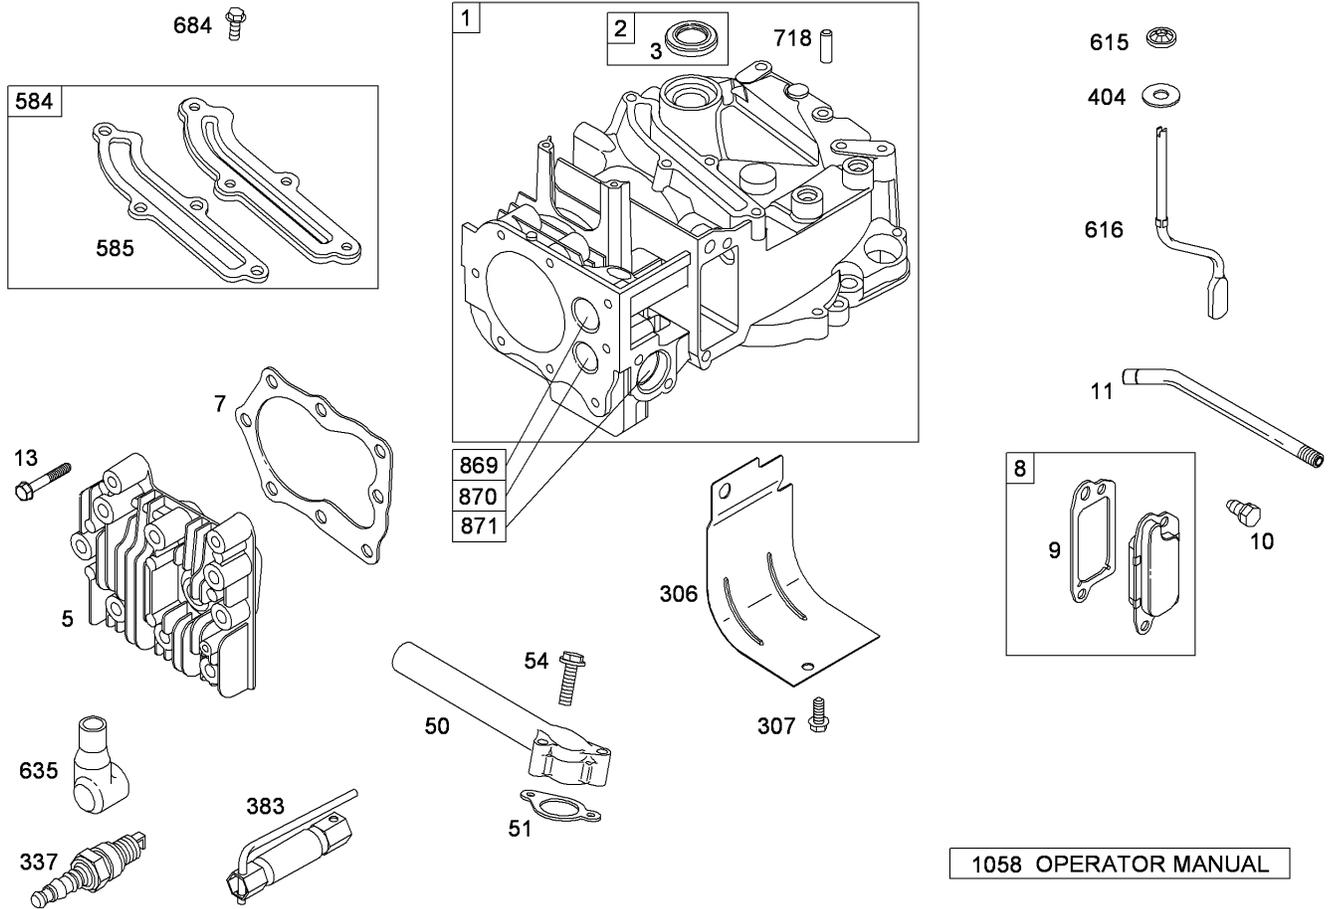


Assemblies include all parts shown in frames

Cylinder Assembly Briggs and Stratton 124T02-0161-B1


Ref	Part No.	Qty.	Description
1	697322	1	Cylinder ASM
2	399269	1	Bushing And Seal Kit
3	299819s	1	Seal-Oil (Magneto Side)
5	691160	1	Head-Cylinder
7	692249	1	Gasket-Head, Cylinder
8	695250	1	Breather ASM
9	696125	1	Gasket-Breather
10	691125	1	Screw (Breather ASM)
11	691781	1	Tube-Breather
13	690912	1	Screw (Cylinder Head)
50	497465	1	Manifold-Intake
51	272199s	1	Gasket-Intake
54	691650	1	Screw (Intake Manifold)
306	690450	1	Shield-Cylinder
307	690345	1	Screw (Cylinder Shield)
337	802592s	1	Plug-Spark
383	89838s	1	Wrench-Spark Plug
404	690272	1	Washer (Governor Crank)
584	697734	1	Cover-Passage, Breather
585	691879	1	Gasket-Passage, Breather
615	690340	1	Retainer-Shaft, Governor
616	698801	1	Crank-Governor
635	66538s	1	Boot-Spark Plug
684	690345	1	Screw (Breather Passage Cover)

Ref	Part No.	Qty.	Description
718	690959	1	Pin-Locating
869	691155	1	Seat-Valve (Intake)
870	690380	1	Seat-Valve (Exhaust)
871	262001	1	Bushing-Guide (Exhaust)
871	63709	1	Bushing-Guide (Intake)
1058	277039TRI	1	Operator Manual

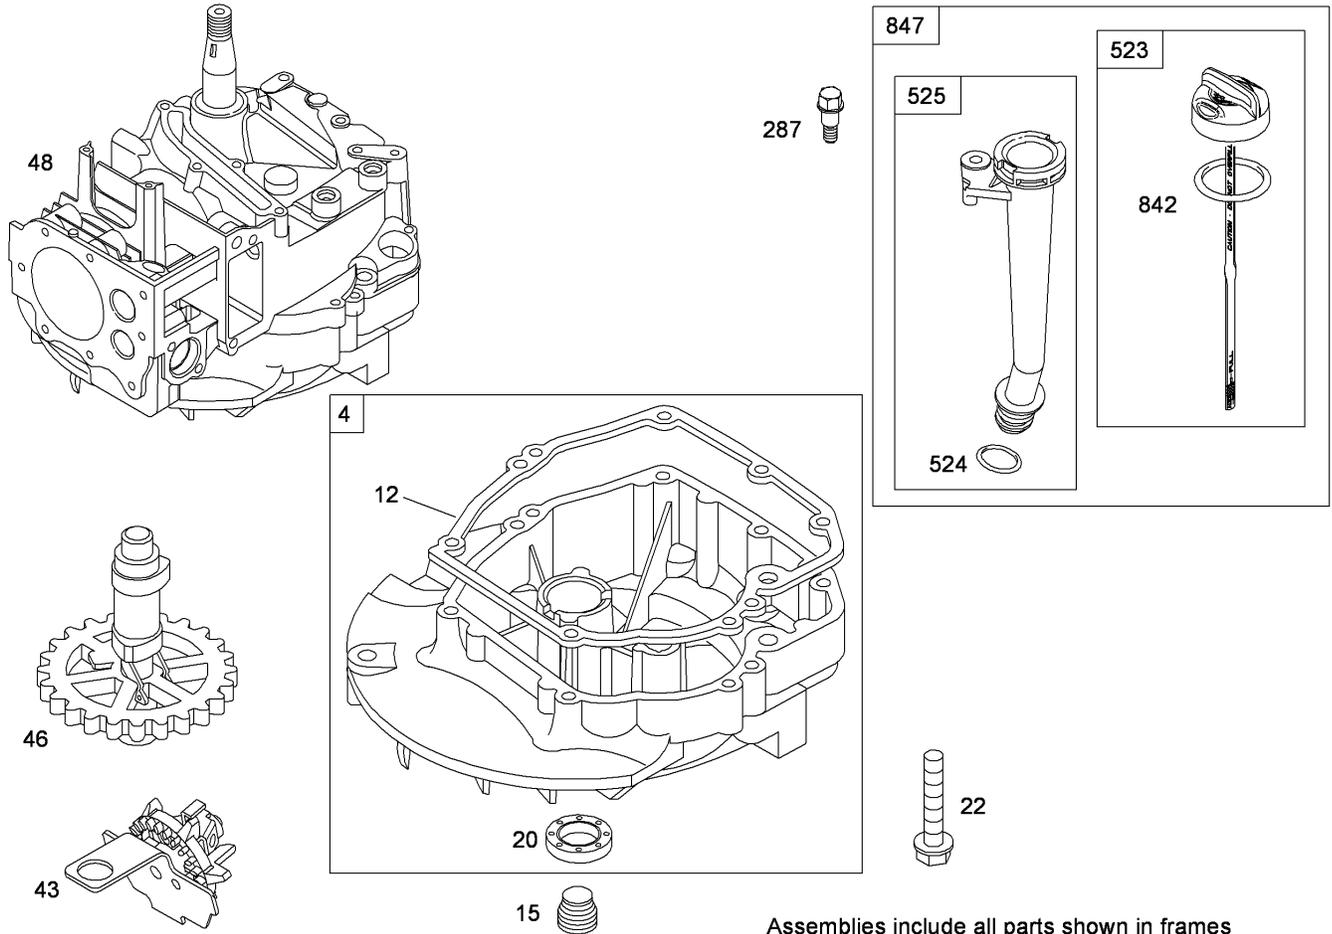

Crankcase Assembly Briggs and Stratton 124T02-0161-B1

Ref	Part No.	Qty.	Description
24	493279	1	Sump-Engine
24 12	692232	1	Gasket-Crankcase (.015 STD)
2 15	691680	1	Plug-Drain, Oil
24 20	399781s	1	Seal-Oil (PTO Side)
2 22	691092	1	Screw (Engine Sump)
2 43	691997	1	Slinger-Governor, Oil
2 46	691449	1	Camshaft
2 48	792742	1	Block-Short
2 287	690940	1	Screw (Dipstick Tube)
2 523	499621	1	Dipstick
24 524	692296	1	Seal-O Ring (Dipstick Tube)
2 525	495265	1	Tube-Dipstick
24 842	691031	1	Seal-O Ring (Dipstick Tube)
2 847	692047	1	Dipstick Tube ASM






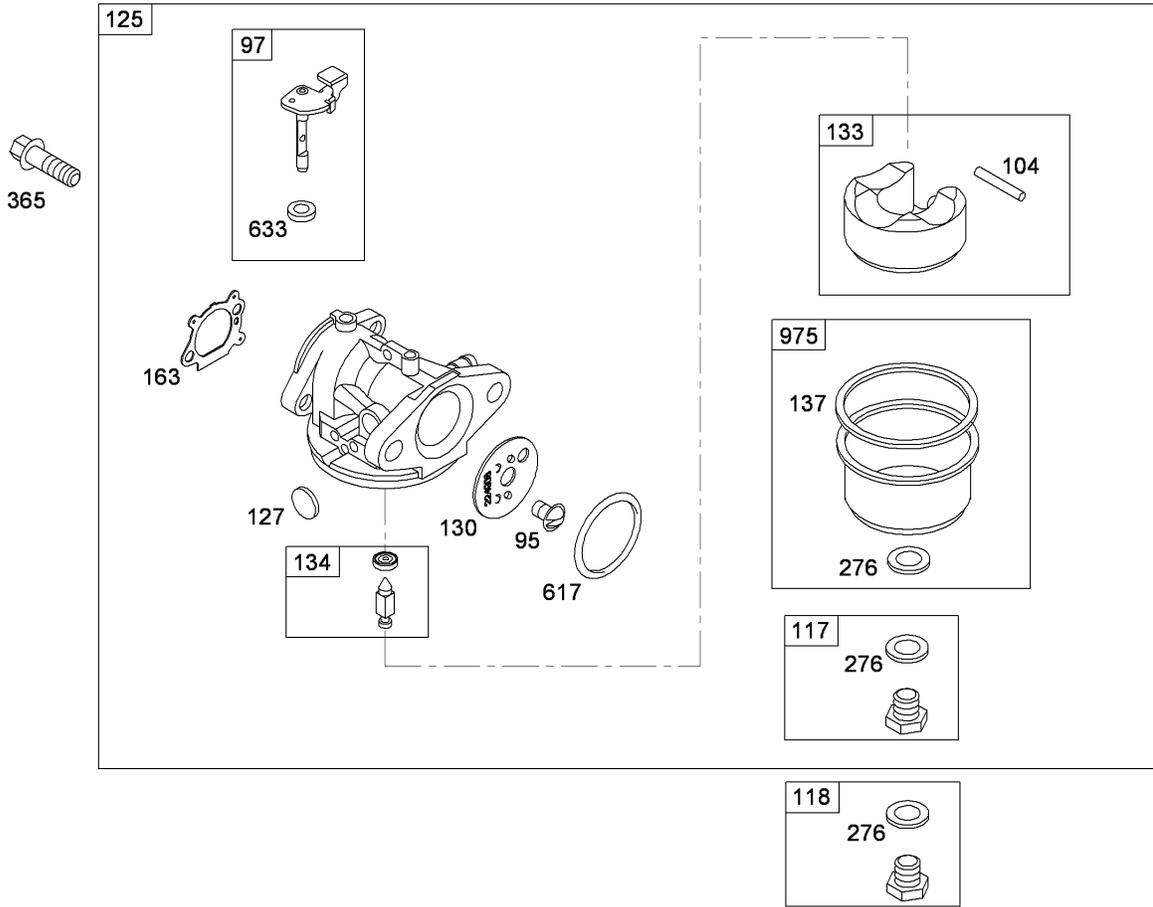


Assemblies include all parts shown in frames

Carburetor Assembly

Briggs and Stratton 124T02-0161-B1

Ref	Part No.	Qty.	Description
②95	691636	1	Screw (Throttle Valve)
②97	696565	1	Shaft-Throttle
②③104	691242	1	Pin-Hinge, Float
②117	498978	1	Jet-Main (STD)
②118	494870	1	Jet-Main (High Altitude)
②125	498170	1	Carburetor
②③127	694468	1	Plug-Welch
②130	696564	1	Valve-Throttle
②133	398187	1	Float-Carburetor
②③134	398188	1	Needle And Seat Kit
②③137	693981	1	Gasket-Bowl, Float
⑤			
②③163	272653	1	Gasket-Cleaner, Air
④⑤			
②③276	271716	1	Washer-Sealing
⑤			
②365	692524	1	Screw (Carburetor)
②③617	270344s	1	Seal-O Ring (Intake Manifold)
⑤			
②③633	691321	1	Seal-Shaft, Choke Throttle
⑤			
②975	493640	1	Bowl-Float

 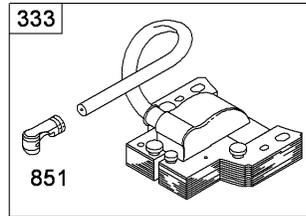
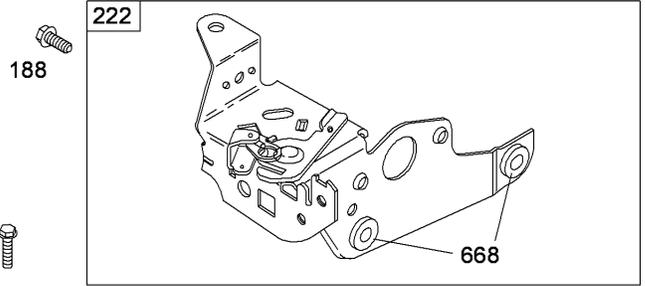
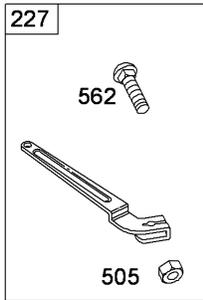
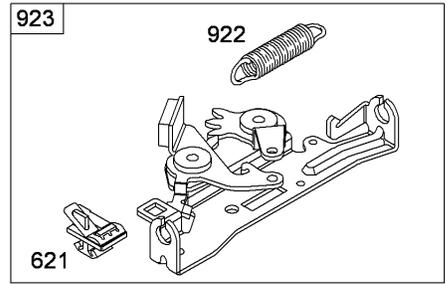
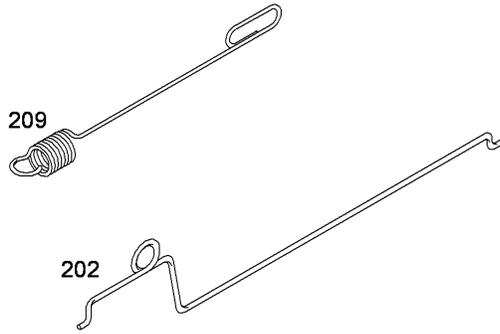


Assemblies include all parts shown in frames

Governor Assembly Briggs and Stratton 124T02-0161-B1

Ref	Part No.	Qty.	Description
②188	693399	1	Screw (Control Bracket)
②202	691829	1	Link-Governor, Mechanical
②209	691292	1	Spring-Governor
②222	793754	1	Bracket-Control
②227	690783	1	Lever-Control, Governor
②333	802574	1	Armature-Magneto
②334	691061	1	Screw (Magneto Armature)
②356	692390	1	Wire-Stop
②505	691251	1	Nut (Governor Control Lever)
②562	691119	1	Screw (Governor Control Lever)
②621	692310	1	Switch-Stop
②④668	493823	1	Spacer
②745	691648	1	Screw (Brake)
②851	493880s	1	Terminal-Spark Plug
②922	691831	1	Spring-Brake
②923	691994	1	Brake ASM

--	--	--	--

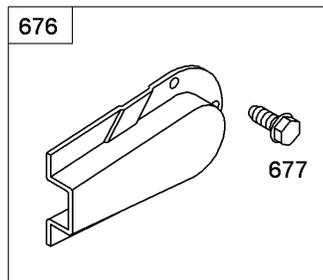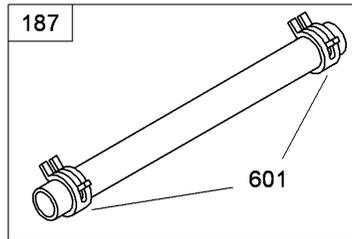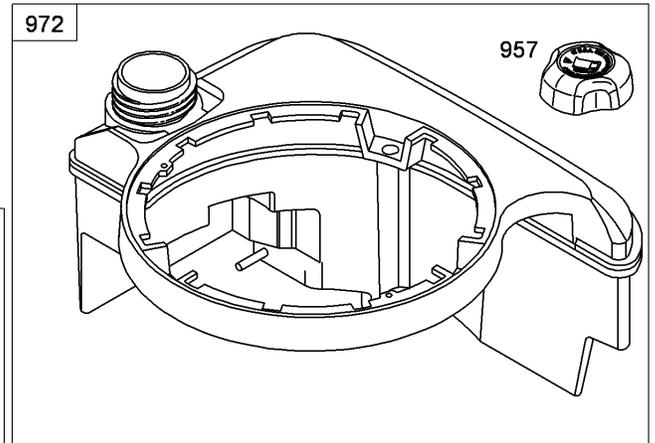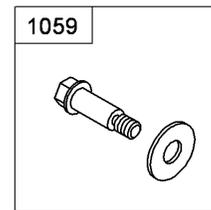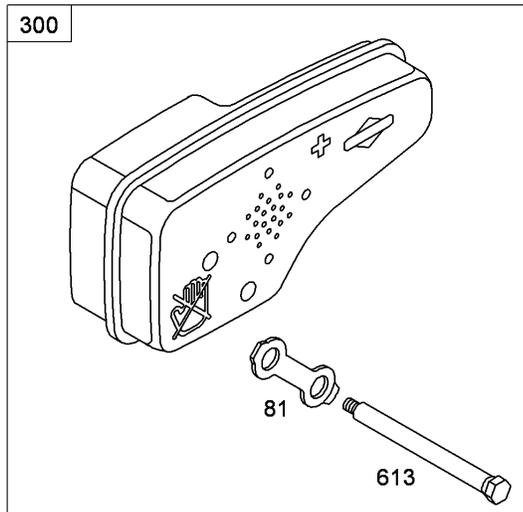


Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly Briggs and Stratton 124T02-0161-B1

Ref	Part No.	Qty.	Description
●81	691740	1	Lock-Screw, Muffler
●187	791766	1	Line-Fuel (Cut To Required Length)
●190	690940	1	Screw (Fuel Tank)
●300	692038	1	Muffler
●601	791850	1	Clamp-Hose
●613	691340	1	Screw (Muffler)
●670	692294	1	Spacer-Tank, Fuel
●676	493871	1	Deflector-Muffler
●677	690661	1	Screw (Muffler Deflector)
●957	699985	1	Cap-Tank, Fuel
●972	699374	1	Tank-Fuel
●1059	692311	1	Screw And Washer Kit

--	--	--	--

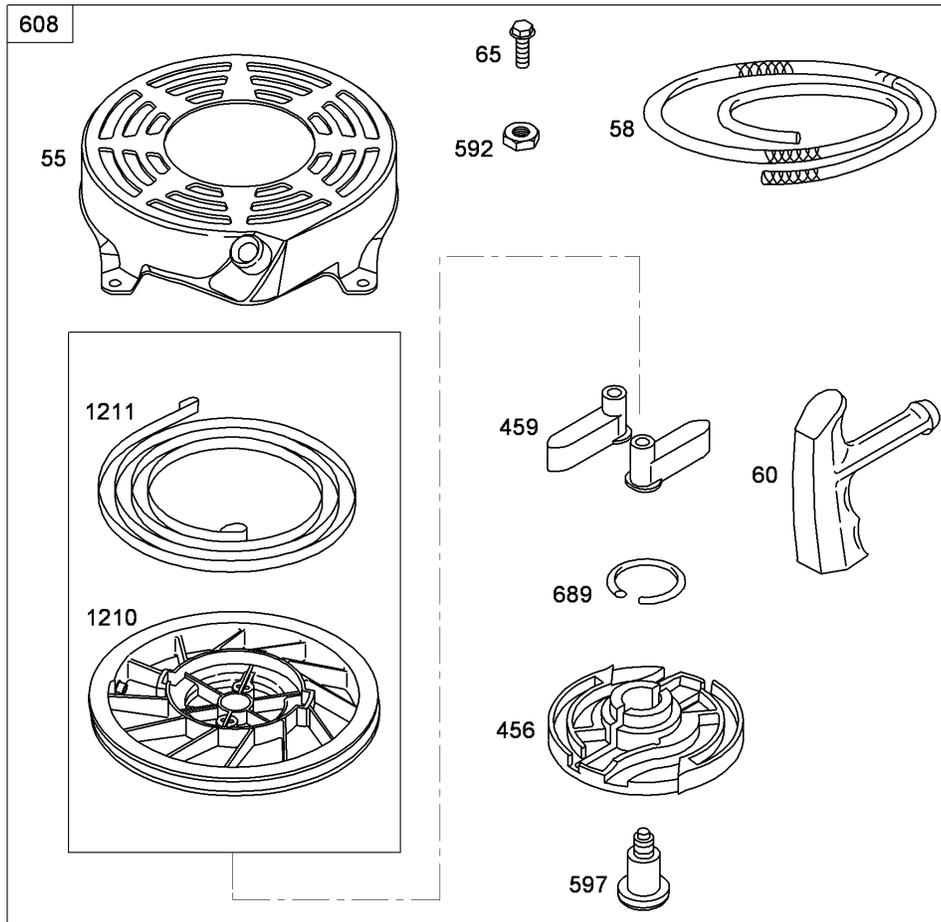

Starter Assembly Briggs and Stratton 124T02-0161-B1

Ref	Part No.	Qty.	Description
②55	691421	1	Housing-Starter, Rewind
②58	697316	1	Rope-Starter (Cut To Required Length)
②60	281434s	1	Grip-Rope, Starter
②65	690837	1	Screw (Rewind Starter)
②456	692299	1	Plate-Friction, Pawl
②459	281505s	1	Ratchet-Pawl
②592	690800	1	Nut (Rewind Starter)
②597	691696	1	Screw (Pawl Friction Plate)
②608	497680	1	Starter-Rewind
②689	691855	1	Spring-Friction
②1210	498144	1	Pulley And Spring ASM (Pulley)
②1211	498144	1	Pulley And Spring ASM (Spring)

--	--	--	--

Attachments and Accessories

For 20064 - 22in Recycler Lawn Mower

Product Name	Model/Part
Loose Parts Kit	114-7991
Replacement Bag	59303
Bagger Kit	59304
22 Inch Blade Kit	59534

NOTES

NOTES

