



22in Recycler[®] Lawn Mower

Model No. 20110 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck, Side Chute and Rear Door Assembly	 3	Air Cleaner Assembly Briggs and Stratton 124T02-0215-B1	 14
Rear Axle Assembly	 4	Governor Assembly Briggs and Stratton 124T02-0215-B1	 15
Front Axle and Transmission Assembly	 5	Muffler and Fuel Tank Assembly Briggs and Stratton 124T02-0215-B1	 16
Transmission Assembly No. 106-3955	 6	Blower Housing Assembly Briggs and Stratton 124T02-0215-B1	 17
Engine and Blade Assembly	 7	Starter Assembly Briggs and Stratton 124T02-0215-B1	 18
Handle Assembly	 8	Engine Gasket Set Briggs and Stratton 124T02-0215-B1	 19
Rear Bag Assembly	 9	Carburetor Overhaul Kit Briggs and Stratton 124T02-0215-B1	 20
Cylinder Assembly Briggs and Stratton 124T02-0215-B1	 10	Attachments and Accessories List	 21
Crankshaft Assembly Briggs and Stratton 124T02-0215-B1	 11		
Crankcase Assembly Briggs and Stratton 124T02-0215-B1	 12		
Carburetor Assembly Briggs and Stratton 124T02-0215-B1	 13		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|--|---|
| ❶ Not serviced separately | ❷ Obtain from your local Briggs & Stratton dealer |
| ❸ Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ Included in Engine Gasket Set (Ref. No. 358) |
| ❺ Included in Carburetor Gasket Set (Ref. No. 977) | |

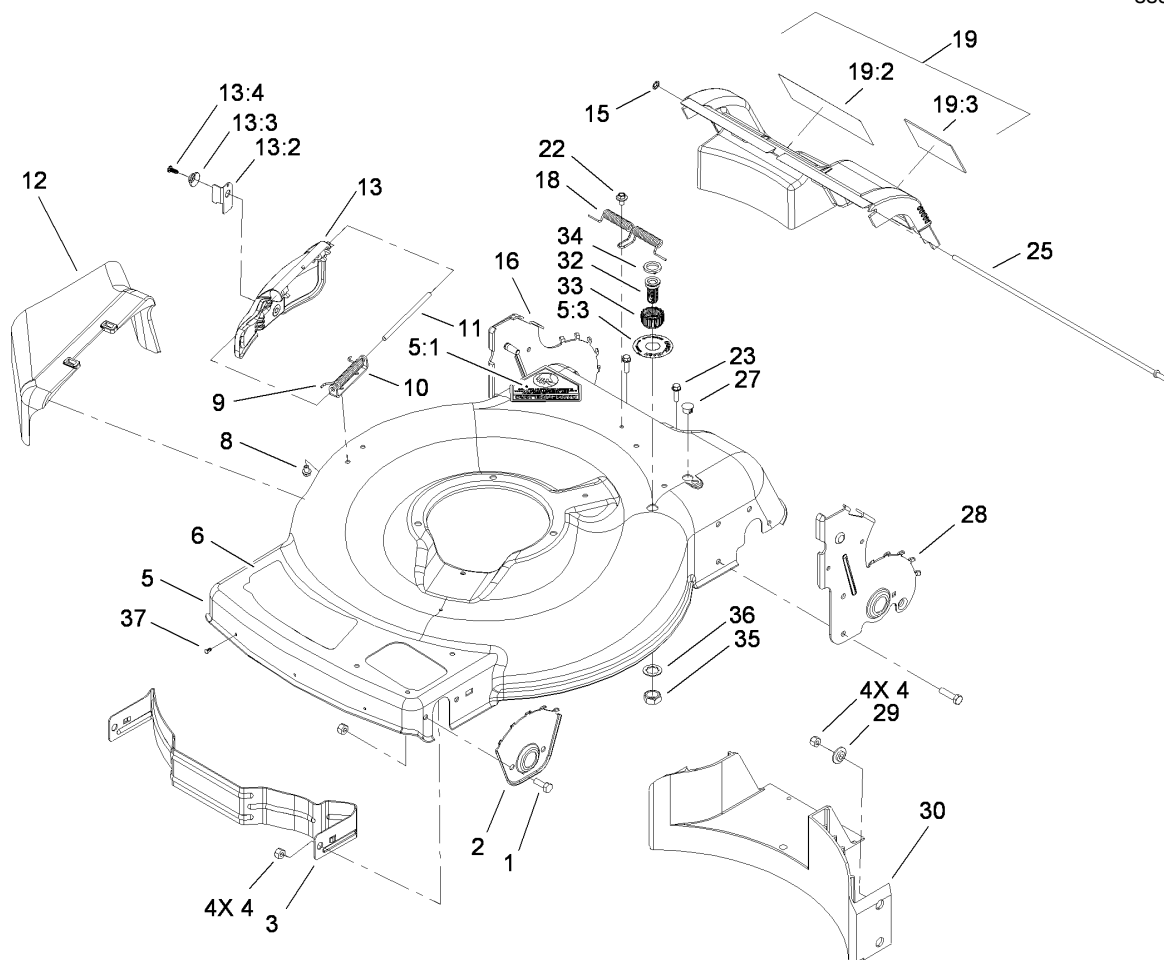

Deck, Side Chute and Rear Door Assembly


Ref	Part No.	Qty.	Description
1	322-3	4	Screw-HH
2	105-1808-03	2	Plate-HOC, Front
3	104-8694-03	1	Baffle-Front
4	3296-29	8	Nut-Lock, NI
5	112-8850	1	Housing ASM
5:1	94-8072	1	Decal-Danger
5:3	112-8867	1	Decal-Washout Port, Trilingual
6	114-0322	1	Decal-Deck
8	99-8445	2	Screw-HWH
9	99-5293	1	Spring-Torsion
10	112-6416	1	Bracket-Cover
11	99-5291	1	Rod-Cover
12	105-3028	1	Chute-Discharge, Side
13	106-8376	1	Discharge Door ASM
13:2	107-0795	1	Latch-Door
13:3	107-7456	1	Cap-Door
13:4	107-7461	1	Screw-Plastite
15	32112-6	1	Nut-Push
16	112-6441	1	8 Inch RH HOC Plate ASM
18	105-3032	1	Spring-Door, Rear
19	112-8865	1	Rear Door ASM
19:2	112-8759	1	Decal-Warning
19:3	104-7908	1	Decal-Warning
22	46-6810	1	Screw And Washer ASM

Ref	Part No.	Qty.	Description
23	46-8091	2	Screw-HWH
25	105-1827	1	Rod-Pivot, Rear Door
27	104-9369	1	Plug-Dome
28	112-6443	1	8 Inch LH HOC Plate ASM
29	105-3006	4	Washer-Stepped
30	105-3047	1	Baffle-Rear
32	112-6400	1	Port-Washout
33	112-6401	1	Coupling-Hose, Washout Port
34	112-6438	1	Washer-Seal, Washout Port
35	3218-6	1	Nut-Jam
36	3254-5	1	Washer-Tooth
37	112-6436	3	Plug-Arrow

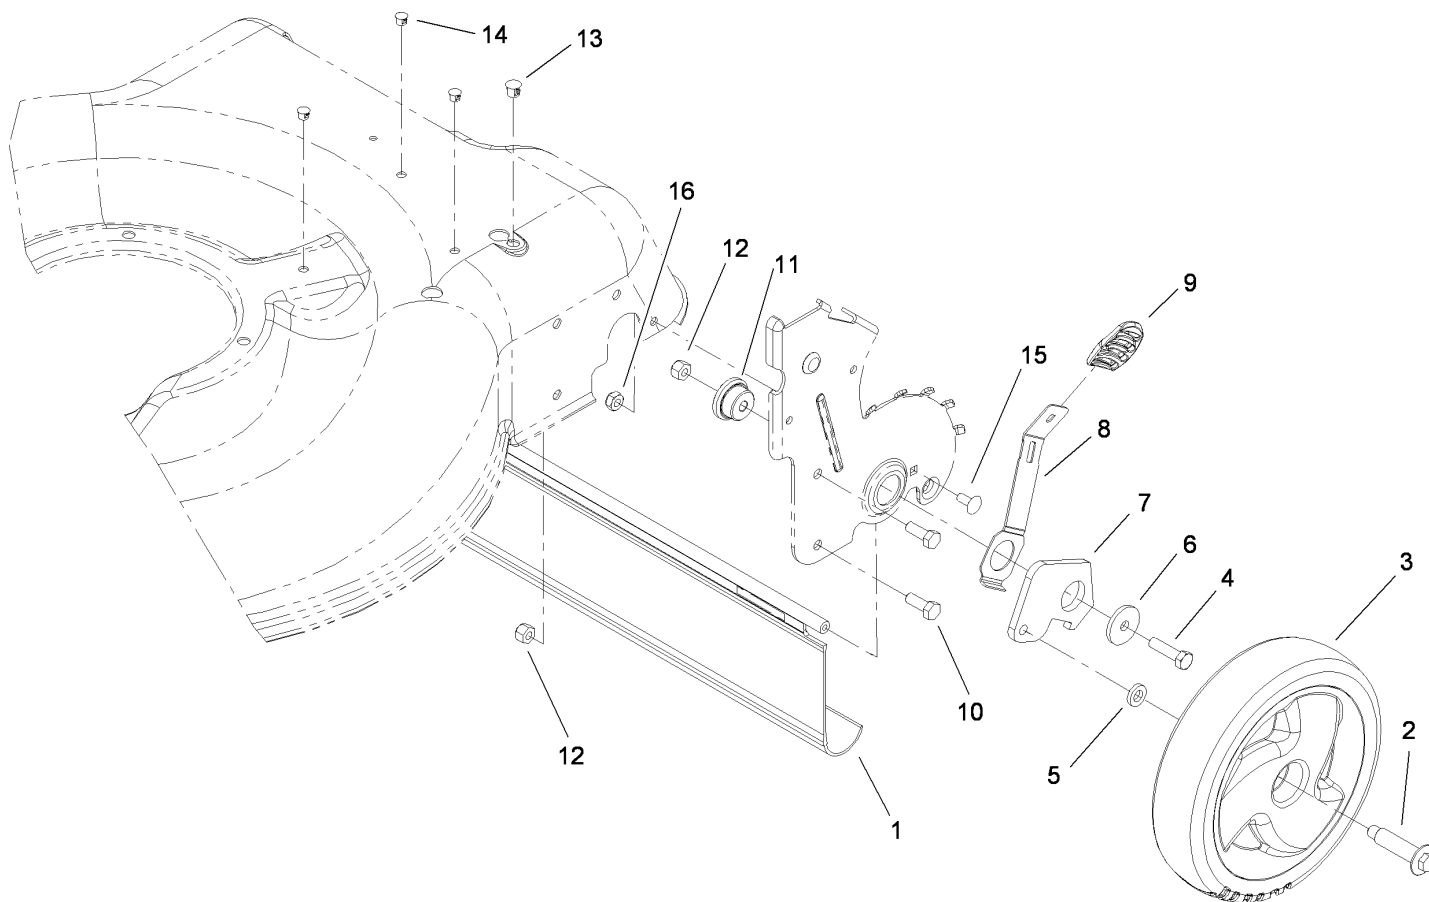


Rear Axle Assembly

Ref	Part No.	Qty.	Description
1	114-1585	1	Shield-Trailing
2	614650	2	Bolt-Shoulder
3	105-1814	2	Wheel ASM
4	322-6	2	Screw-HH
5	110-7466	2	Washer-Bolt, Wheel
6	105-3048	2	Washer-Flat
7	105-1819	1	Arm-Pivot, Rear
8	105-1809	2	Arm-Spring
9	105-3042	2	Knob-Lever, HOC
10	322-4	4	Screw-HH
11	105-1818	2	Bushing-Mount, HOC
12	3296-29	2	Nut-Lock, NI
13	104-9368	1	Plug-Dome
14	104-9373	3	Plug-Dome
15	3229-11	2	Screw-CARR
16	3296-16	2	Nut-Lock, NI

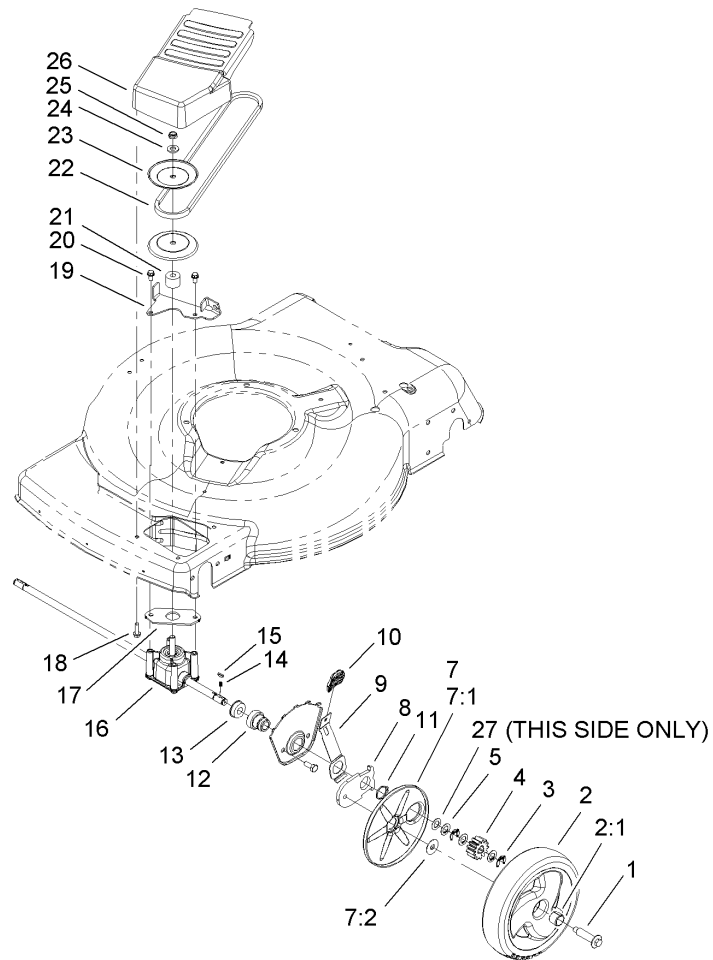


Front Axle and Transmission Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder	23	104-8691	2	Pulley-Half, Front
2	105-1815	2	Wheel Gear ASM	24	3256-24	1	Washer-Flat
2:1	27-6250	2	Bushing	25	3296-5	1	Nut-Lock
3	65-2720	4	Ring-Clip, Locking	26	105-1839	1	Cover-Belt, Front
4	104-8670	2	Gear-Pinion, 13T	27	36-4780	1	Washer-Plain
5	105-6840	6	Washer-Thrust				
7	110-1792	2	Wheel Cover ASM				
7:1		1	Cover-Wheel				
7:2	614426	1	Washer-Stepped				
8	105-1807	2	Arm-Pivot, Front				
9	105-1809	2	Arm-Spring				
10	105-3042	2	Knob-Lever, HOC				
11	32151-36	2	Ring-Retaining				
12	104-8698	2	Retainer-Bearing, HOC				
13	104-8699	2	Bearing-Ball				
14	39-9650	2	Spring-Compression				
15	612066	2	Key				
16	106-3955	1	Transmission ASM				
17	108-9756	1	Gasket-Gearbox				
18	46-8091	2	Screw-HWH				
19	105-1833-03	1	Bracket-Pivot, Fwd				
20	32144-4	2	Screw-HWH				
21	92-5791	1	Spacer				
22	91-2258	1	V-Belt				

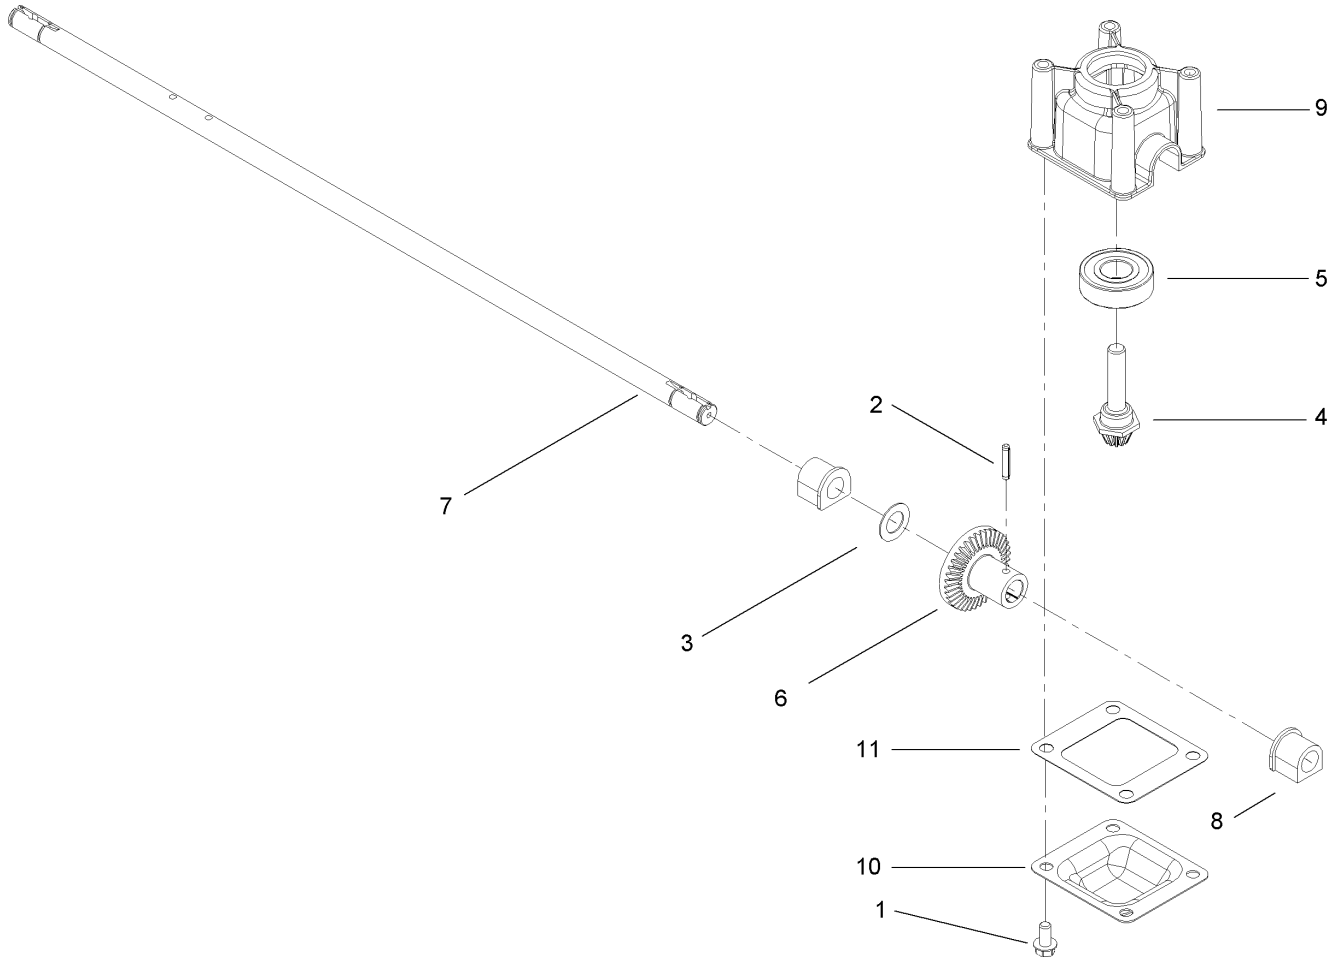


Transmission Assembly No. 106-3955

Ref	Part No.	Qty.	Description				
1	32144-4	4	Screw-HWH				
2	3285-19	1	Pin-Groove				
3	36-4780	1	Washer-Plain				
4	92-5790	1	Pinion				
5	100-1048	1	Bearing-Ball				
6	104-8671	1	Gear-Bevel, 37T				
7	106-3957	1	Shaft-Output				
8	104-8673	2	Bushing-Shaft, Output				
9	104-8674	1	Gearcase-Upper				
10	104-8675-03	1	Cover-Gearcase				
11	105-6839	1	Gasket-Gearcase				

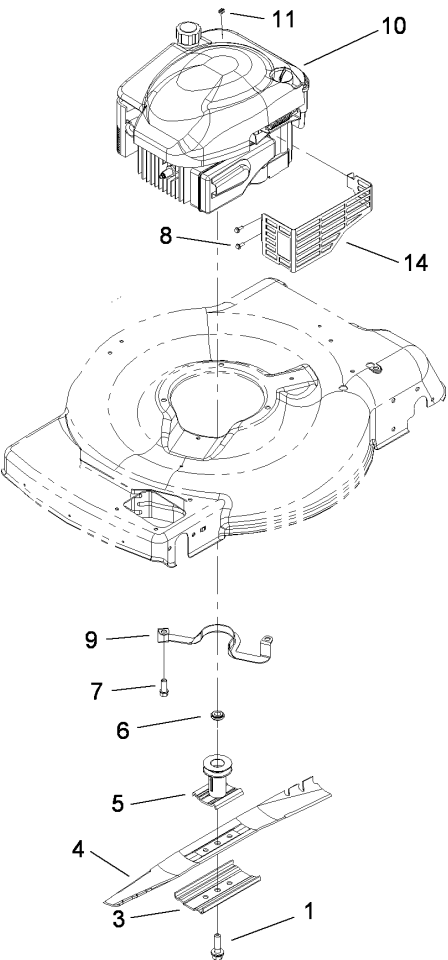

Engine and Blade Assembly


Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
3	108-3766-03	1	Support-Blade				
4	108-9764-03	1	Blade-22 Inch				
5	106-3987	1	Blade Driver ASM				
6	106-3999	1	Spacer-Driver				
7	95-1726	3	Screw-Taptite				
8	32144-1	3	Screw-Taptite				
9	105-3031-03	1	Guide-Belt				
10		1	Engine-Briggs And Stratton, 124T02-0215-B1				
11	2210-316	1	Stop-Rope				
14	104-7577-03	1	Shield-Muffler				

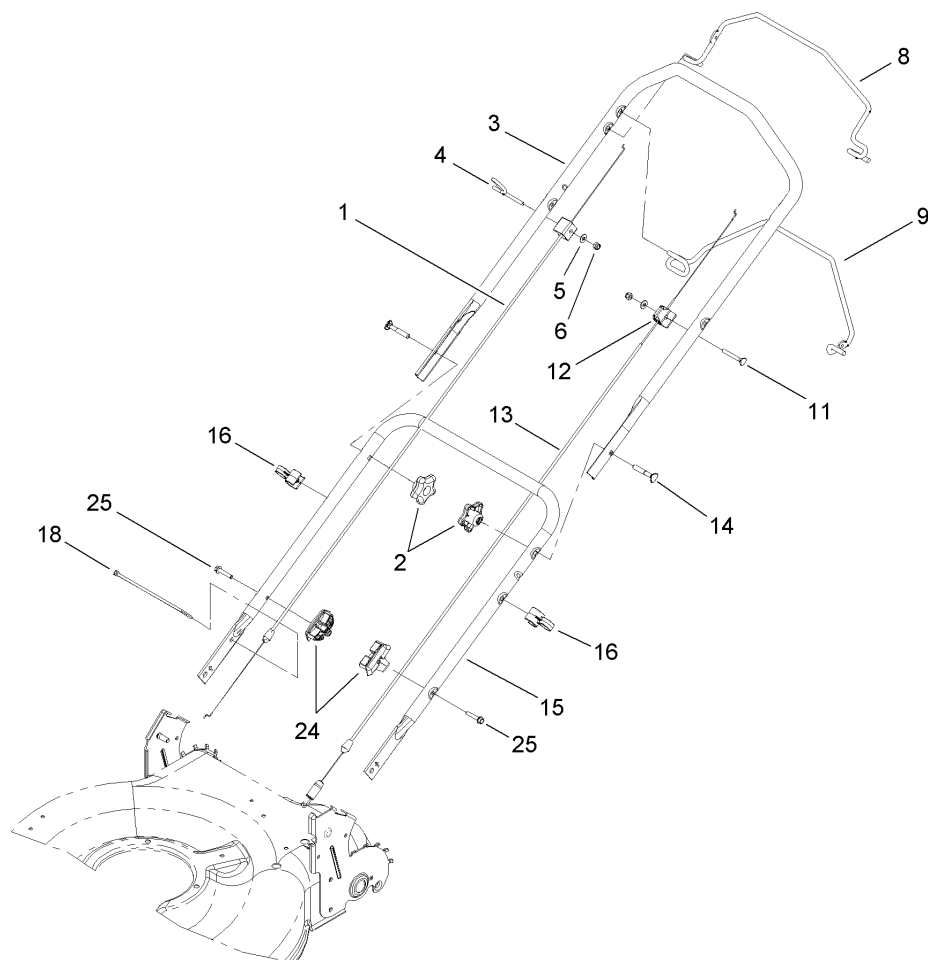

Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-8156	1	Cable-Brake				
2	108-8162	2	Knob-Locking				
3	108-9789-05	1	Handle-Upper				
4	106-8330	1	Guide-Rope				
5	3256-1	2	Washer-Flat				
6	3296-73	2	Nut-Lock, NI				
8	114-7923-03	1	Bail-Brake				
9	108-9790-03	1	Bail-Traction				
11	95-4453	1	Screw				
12	92-7729	1	Anchor-Cable, Upper				
13	105-1845	1	Cable-Traction				
14	112-8876	2	Screw-Handle				
15	112-6440-05	1	Handle-Lower				
16	106-6805	2	Guide-Cable				
18	614249	1	Strap-Tie				
24	108-9788	2	Anchor-Bag				
25	32144-110	2	Screw-HWH				

9

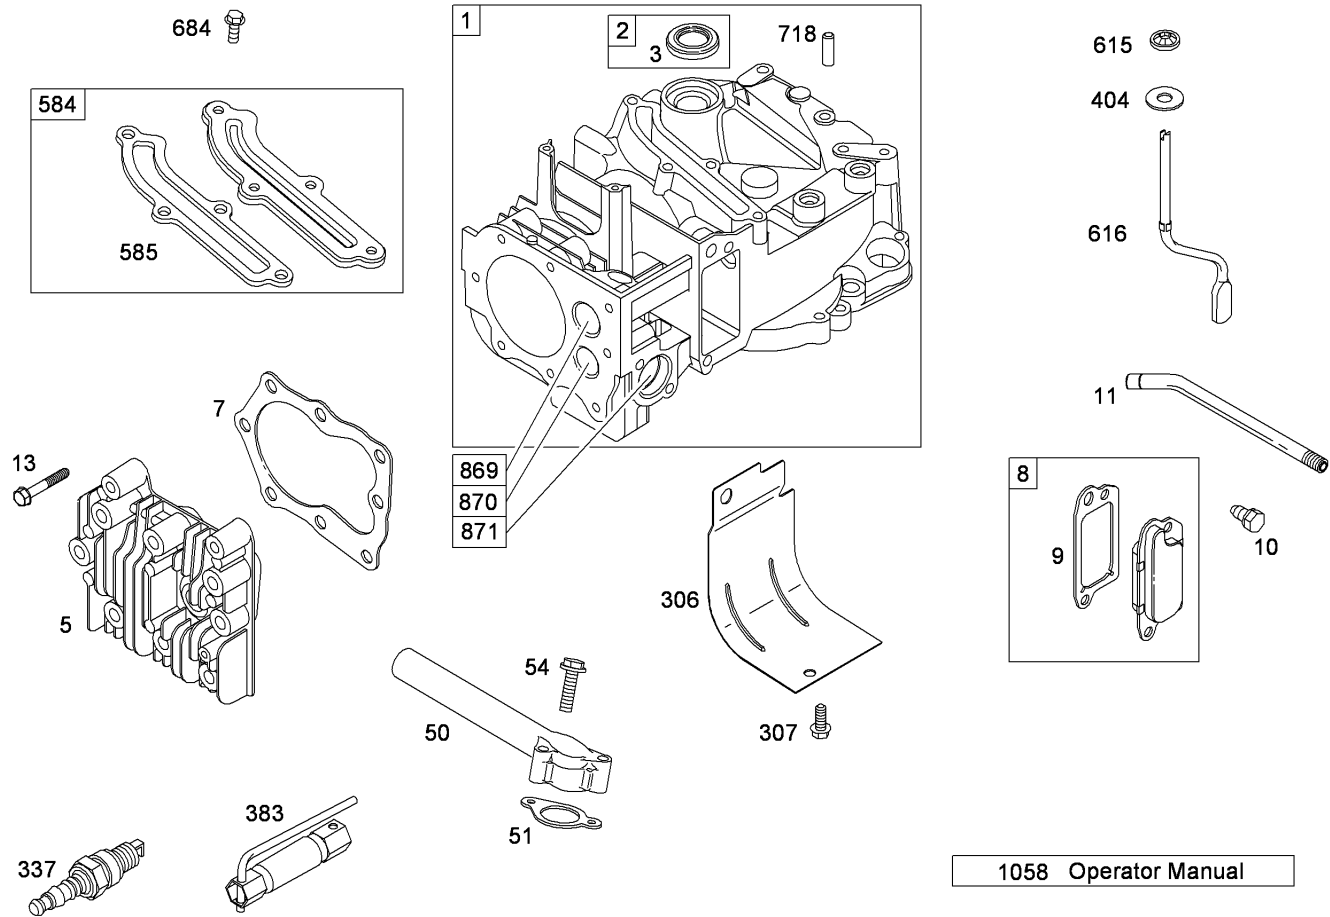






Assemblies include all parts shown in frames

Cylinder Assembly

Briggs and Stratton 124T02-0215-B1

Ref	Part No.	Qty.	Description
1	697322	1	Cylinder ASM
2	399269	1	Bushing And Seal Kit
3	299819s	1	Seal-Oil (Magneto Side)
4	691160	1	Head-Cylinder
5	692249	1	Gasket-Head, Cylinder
6	695250	1	Breather ASM
7	696125	1	Gasket-Breather
8	691125	1	Screw (Breather ASM)
9	691781	1	Tube-Breather
10	690912	1	Screw (Cylinder Head)
11	497465	1	Manifold-Intake
12	272199s	1	Gasket-Intake
13	691650	1	Screw (Intake Manifold)
14	690450	1	Shield-Cylinder
15	690345	1	Screw (Cylinder Shield)
16	802592s	1	Plug-Spark
17	89838s	1	Wrench-Spark Plug
18	690272	1	Washer (Governor Crank)
19	697734	1	Cover-Passage, Breather
20	691879	1	Gasket-Passage, Breather
21	690340	1	Retainer-Shaft, Governor
22	698801	1	Crank-Governor
23	690345	1	Screw (Breather Passage Cover)
24	690959	1	Pin-Locating

Ref	Part No.	Qty.	Description
25	691155	1	Seat-Valve (Intake)
26	690380	1	Seat-Valve (Exhaust)
27	262001	1	Bushing-Guide (Exhaust)
28	63709	1	Bushing-Guide (Intake)
29	277039TRI	1	Operator Manual

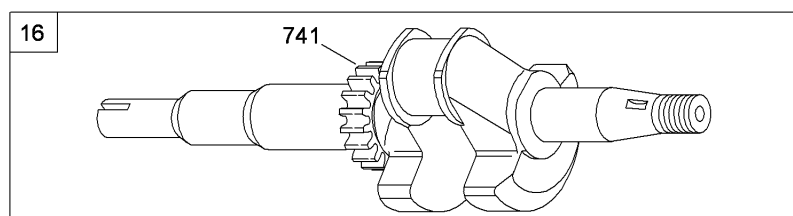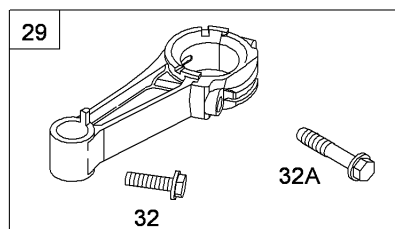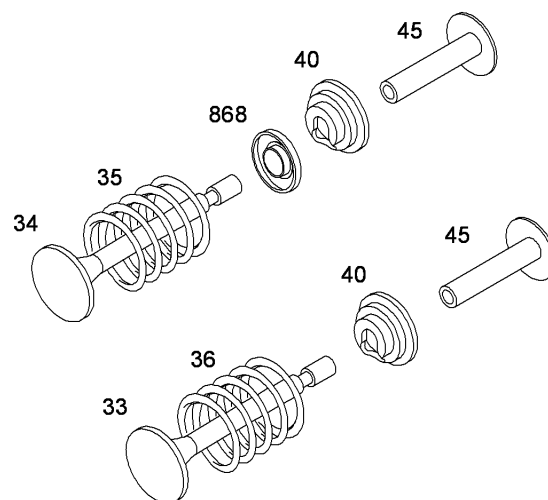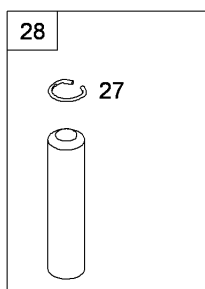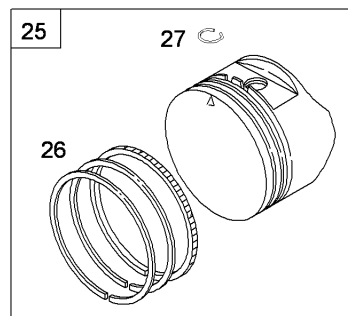


Assemblies include all parts shown in frames

Crankshaft Assembly

Briggs and Stratton 124T02-0215-B1


Ref	Part No.	Qty.	Description				
216	696009	1	Crankshaft				
224	222698s	1	Key-Flywheel				
225	795429	1	Piston ASM (STD)				
225	795430	1	Piston ASM (.020 Oversize)				
226	795431	1	Ring Set (STD)				
226	795432	1	Ring Set (.020 Oversize)				
227	691866	1	Lock-Pin, Piston				
228	499423	1	Pin-Piston (STD)				
229	499424	1	Rod-Connecting				
232	691664	1	Screw (Connecting Rod)				
232A	695759	1	Screw (Connecting Rod)				
233	262651s	1	Valve-Exhaust				
234	262652s	1	Valve-Intake				
235	691270	1	Spring-Valve (Intake)				
236	691270	1	Spring-Valve (Exhaust)				
240	692194	1	Retainer-Valve				
245	690548	1	Tappet-Valve				
2741	790345	1	Gear-Timing				
2868	697338	1	Seal-Valve				

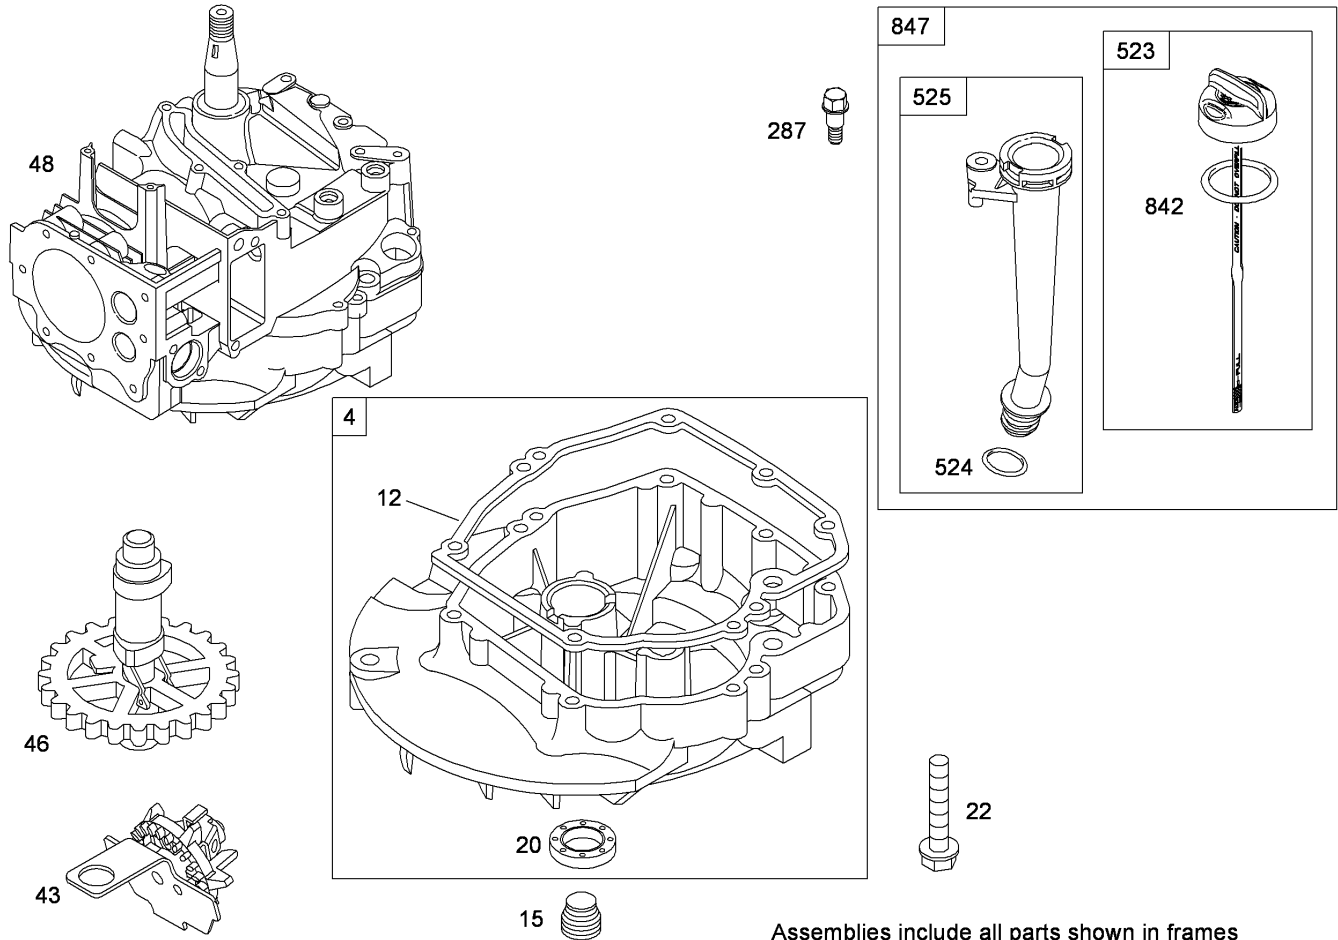

Crankcase Assembly

Briggs and Stratton 124T02-0215-B1

Ref	Part No.	Qty.	Description				
24	493279	1	Sump-Engine				
2412	692232	1	Gasket-Crankcase (.015 STD)				
215	691680	1	Plug-Drain, Oil				
2420	399781s	1	Seal-Oil (PTO Side)				
222	691092	1	Screw (Engine Sump)				
243	691997	1	Slinger-Oil, Governor				
246	691449	1	Camshaft				
248	792742	1	Block-Short				
2287	690940	1	Screw (Dipstick Tube)				
2523	499621	1	Dipstick				
24524	692296	1	Seal-O Ring (Dipstick Tube)				
2525	495265	1	Tube-Dipstick				
24842	691031	1	Seal-O Ring (Dipstick Tube)				
2847	692047	1	Dipstick Tube ASM				


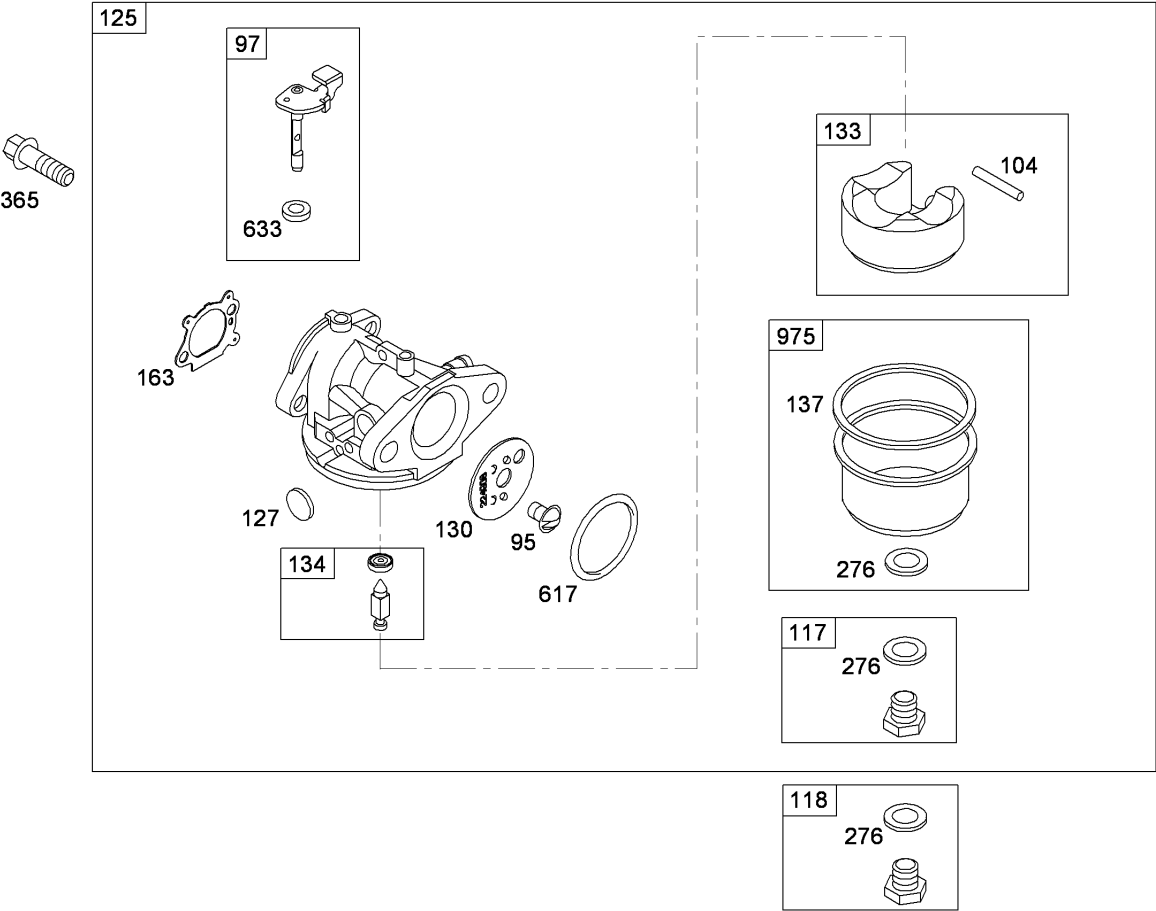


Assemblies include all parts shown in frames

Carburetor Assembly

Briggs and Stratton 124T02-0215-B1

Ref	Part No.	Qty.	Description				
295	691636	1	Screw (Throttle Valve)				
297	696565	1	Shaft-Throttle				
2104	691242	1	Pin-Hinge, Float				
2117	498978	1	Jet-Main (STD)				
2118	494870	1	Jet-Main (High Altitude)				
2125	498170	1	Carburetor				
2127	694468	1	Plug-Welch				
2130	696564	1	Valve-Throttle				
2133	398187	1	Float-Carburetor				
2134	398188	1	Needle And Seat Kit				
2137	693981	1	Gasket-Bowl, Float				
5							
2163	272653	1	Gasket-Cleaner, Air				
45							
2276	271716	1	Washer-Sealing				
5							
2365	692524	1	Screw (Carburetor)				
2617	270344s	1	Seal-O Ring (Intake Manifold)				
5							
2633	691321	1	Seal-Shaft, Choke Throttle				
5							
2975	493640	1	Bowl-Float				

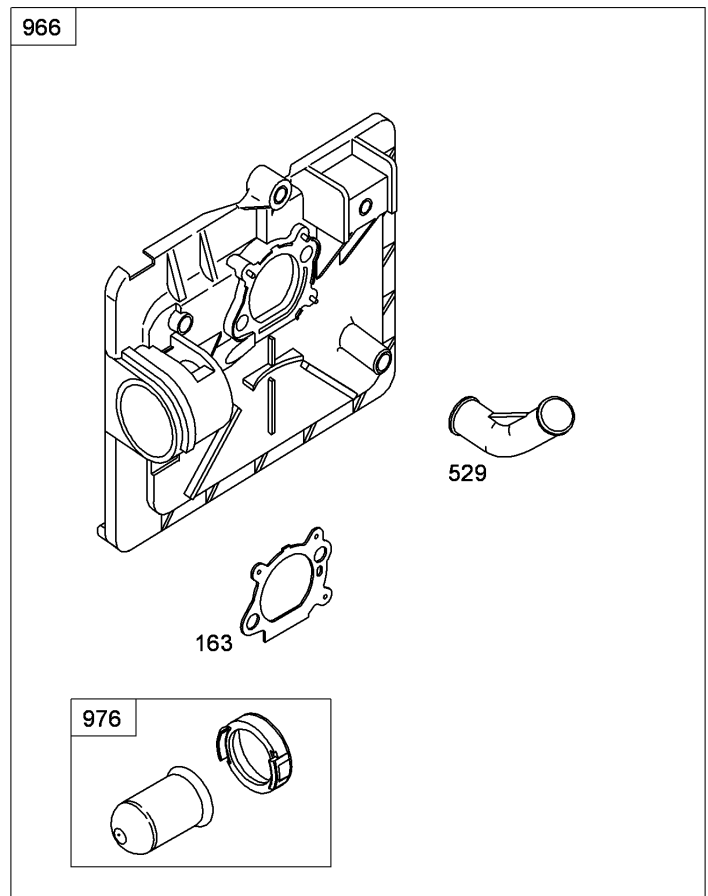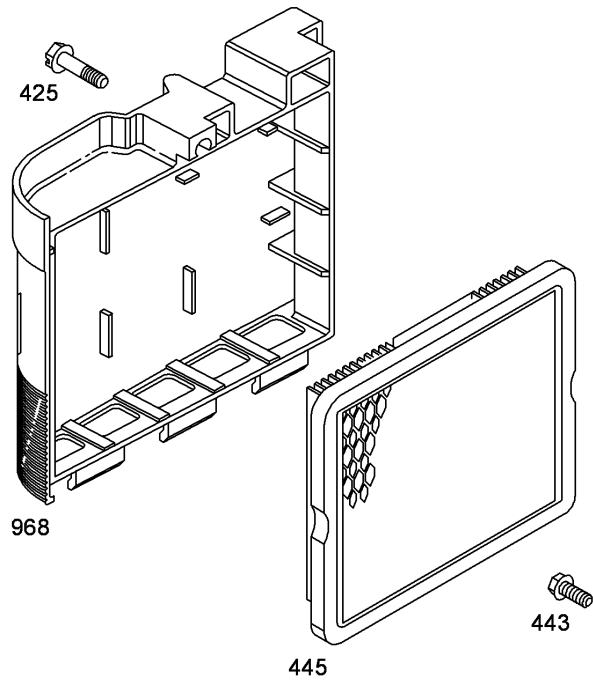


Assemblies include all parts shown in frames

Air Cleaner Assembly

Briggs and Stratton 124T02-0215-B1


Ref	Part No.	Qty.	Description
2 3 163	272653s	1	Gasket-Cleaner, Air
4 5			
2 425	690670	1	Screw (Air Cleaner Cover)
2 443	692523	1	Screw (Air Cleaner Primer Base)
2 445	491588s	1	Filter-Cartridge, Air Cleaner
2 529	691923	1	Grommet
2 966	792040	1	Base-Primer, Air Cleaner
2 968	692298	1	Cover-Cleaner, Air
2 976	694395	1	Primer-Carburetor

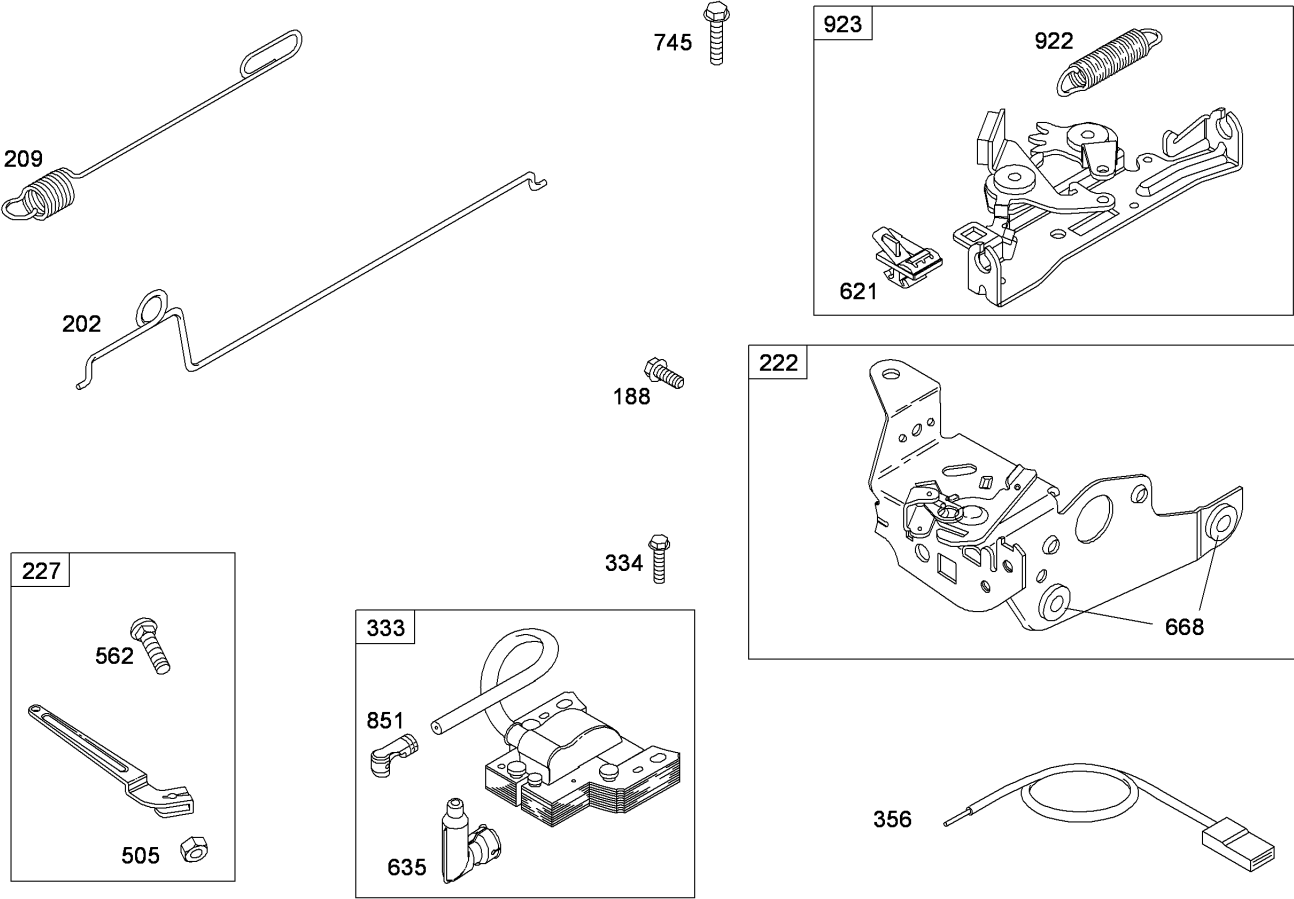

Assemblies include all parts shown in frames

Governor Assembly
Briggs and Stratton 124T02-0215-B1


Ref	Part No.	Qty.	Description				
2188	693399	1	Screw (Control Bracket)				
2202	691829	1	Link-Governor, Mechanical				
2209	691292	1	Spring-Governor				
2222	793754	1	Bracket-Control				
2227	690783	1	Lever-Control, Governor				
2333	793353	1	Armature-Magneto				
2334	691061	1	Screw (Magneto Armature)				
2356	692390	1	Wire-Stop				
2505	691251	1	Nut (Governor Control Lever)				
2562	691119	1	Bolt (Governor Control Lever)				
2621	692310	1	Switch-Stop				
2635	793351	1	Boot-Spark Plug				
24668	493823	1	Spacer				
2745	691648	1	Screw (Brake)				
2851	692424	1	Terminal-Spark Plug				
2922	691831	1	Spring-Brake				
2923	691994	1	Brake ASM				

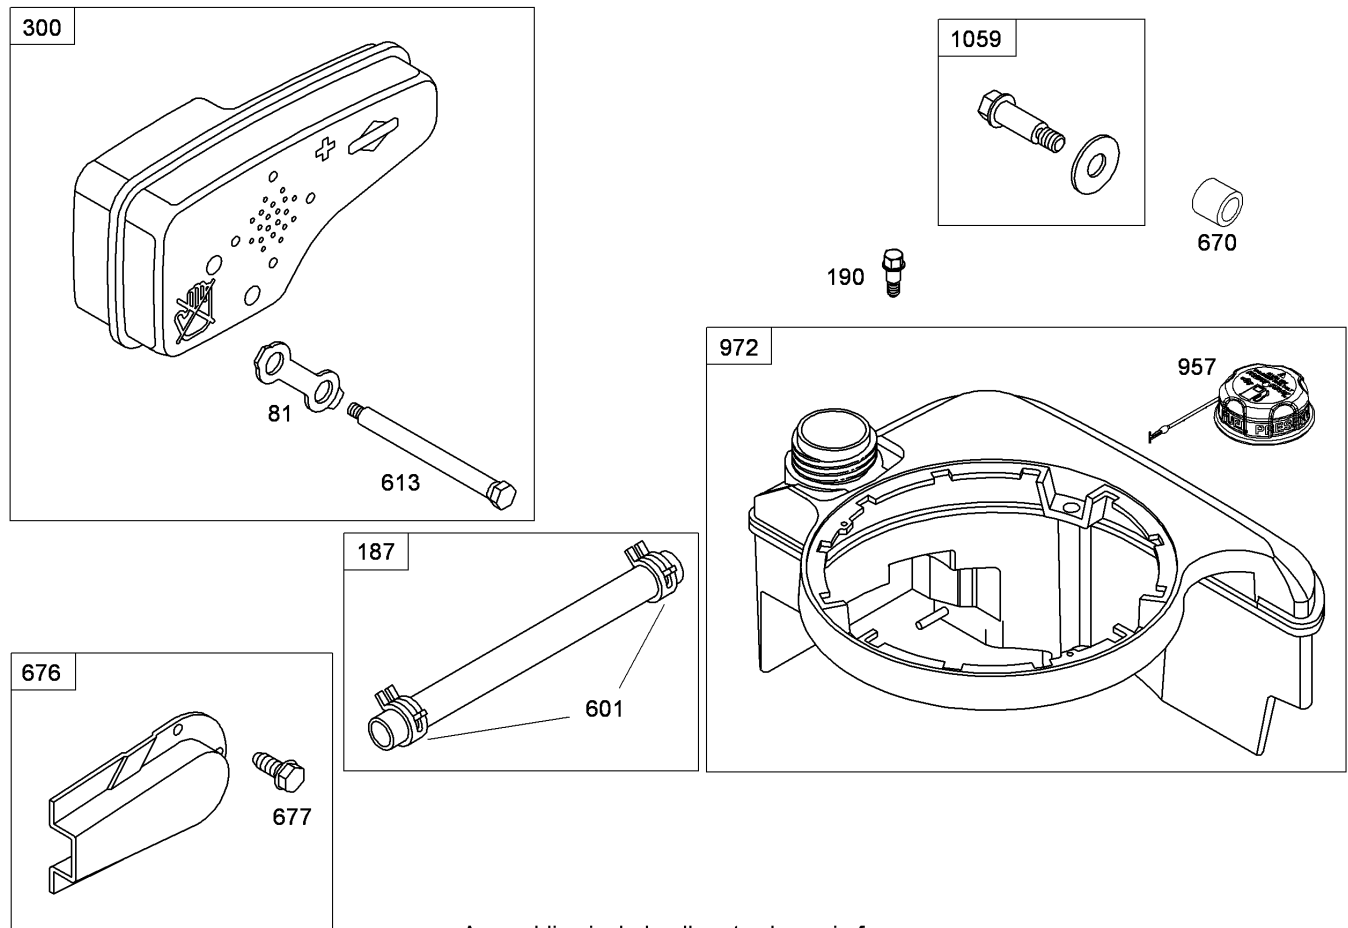

Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly Briggs and Stratton 124T02-0215-B1


Ref	Part No.	Qty.	Description				
281	691740	1	Lock-Screw, Muffler				
2187	791766	1	Line-Fuel (Cut To Required Length)				
2190	690940	1	Screw (Fuel Tank)				
2300	692038	1	Muffler				
2601	791850	1	Clamp-Hose				
2613	691340	1	Screw (Muffler)				
2670	692294	1	Spacer-Tank, Fuel				
2676	493871	1	Deflector-Muffler				
2677	690661	1	Screw (Muffler Deflector)				
2957	699985	1	Cap-Tank, Fuel				
2972	699374	1	Tank-Fuel				
21059	692311	1	Screw And Washer Kit				

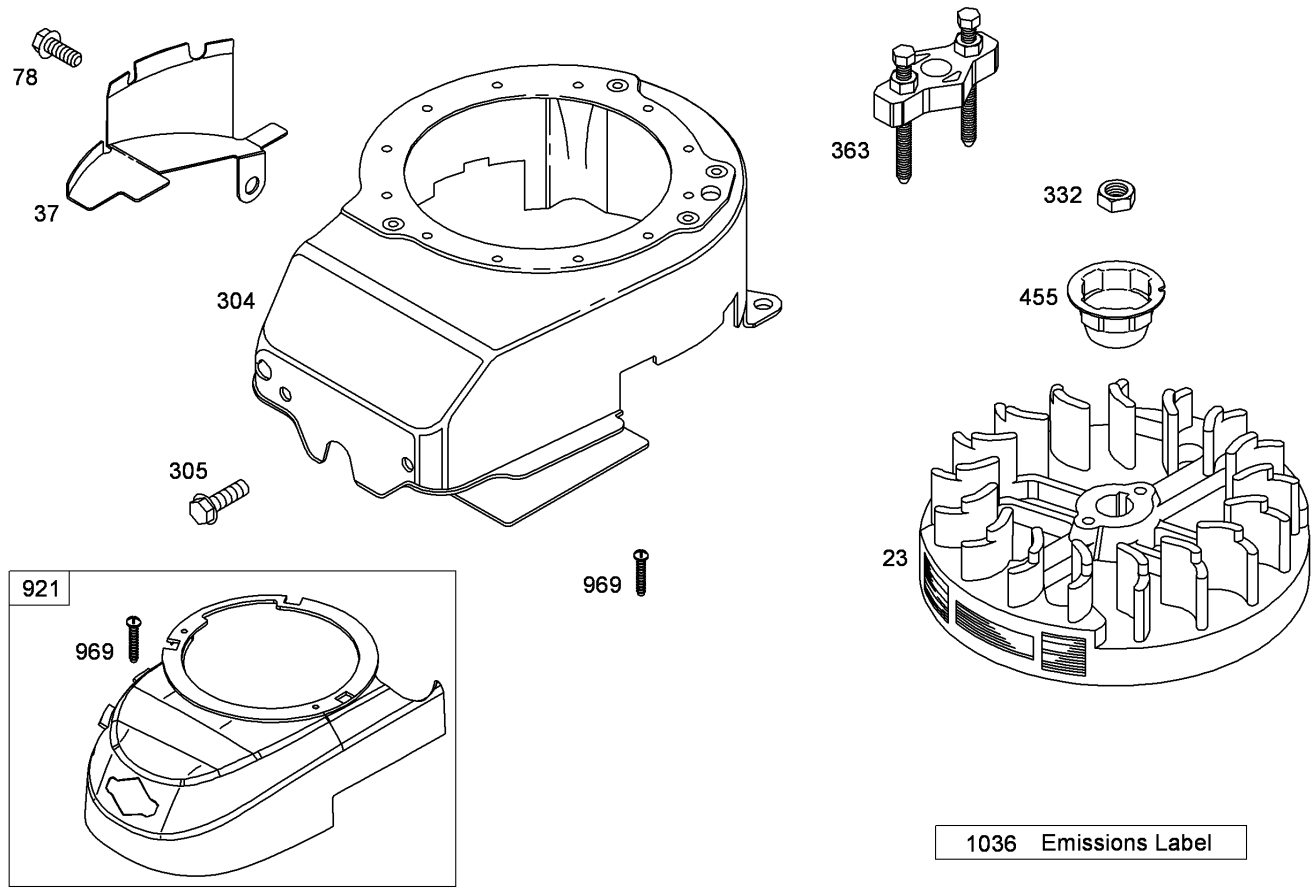

Assemblies include all parts shown in frames

Blower Housing Assembly
Briggs and Stratton 124T02-0215-B1

Ref	Part No.	Qty.	Description				
23	691987	1	Flywheel				
37	694086	1	Guard-Flywheel				
78	691108	1	Screw (Flywheel Guard)				
304	694769	1	Housing-Blower				
305	691108	1	Screw (Blower Housing)				
332	690662	1	Nut (Flywheel)				
363	19069	1	Puller-Flywheel				
455	791760	1	Cup-Flywheel				
921	790036	1	Cover-Housing, Blower				
969	691138	1	Screw (Blower Housing Cover)				
1036		1	Label-Emissions				

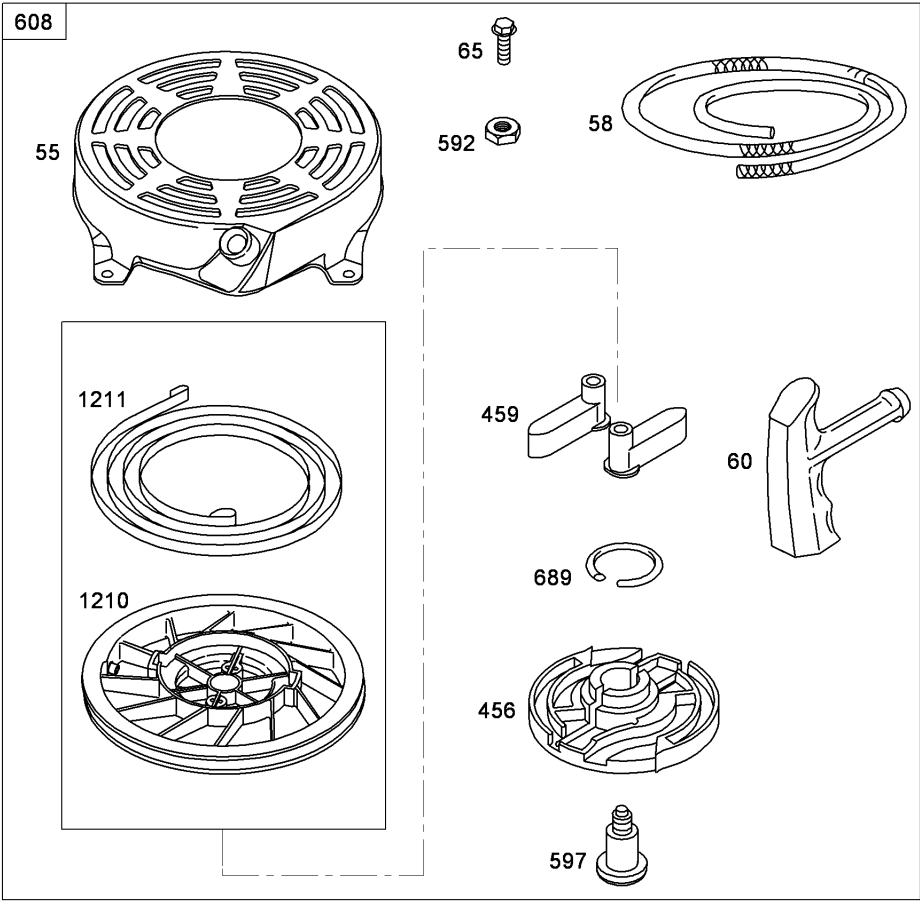


Assemblies include all parts shown in frames

Starter Assembly
Briggs and Stratton 124T02-0215-B1

Ref	Part No.	Qty.	Description				
●55	691421	1	Housing-Starter, Rewind				
●58	697316	1	Rope-Starter (Cut To Required Length)				
●60	281434s	1	Grip-Rope, Starter				
●65	690837	1	Screw (Rewind Starter)				
●456	692299	1	Plate-Friction, Pawl				
●459	281505s	1	Ratchet-Pawl				
●592	690800	1	Nut (Rewind Starter)				
●597	691696	1	Screw (Pawl Friction Plate)				
●608	497680	1	Starter-Rewind				
●689	691855	1	Spring-Friction				
●1210	498144	1	Pulley And Spring ASM (Pulley)				
●1211	498144	1	Pulley And Spring ASM (Spring)				



358 Engine Gasket Set

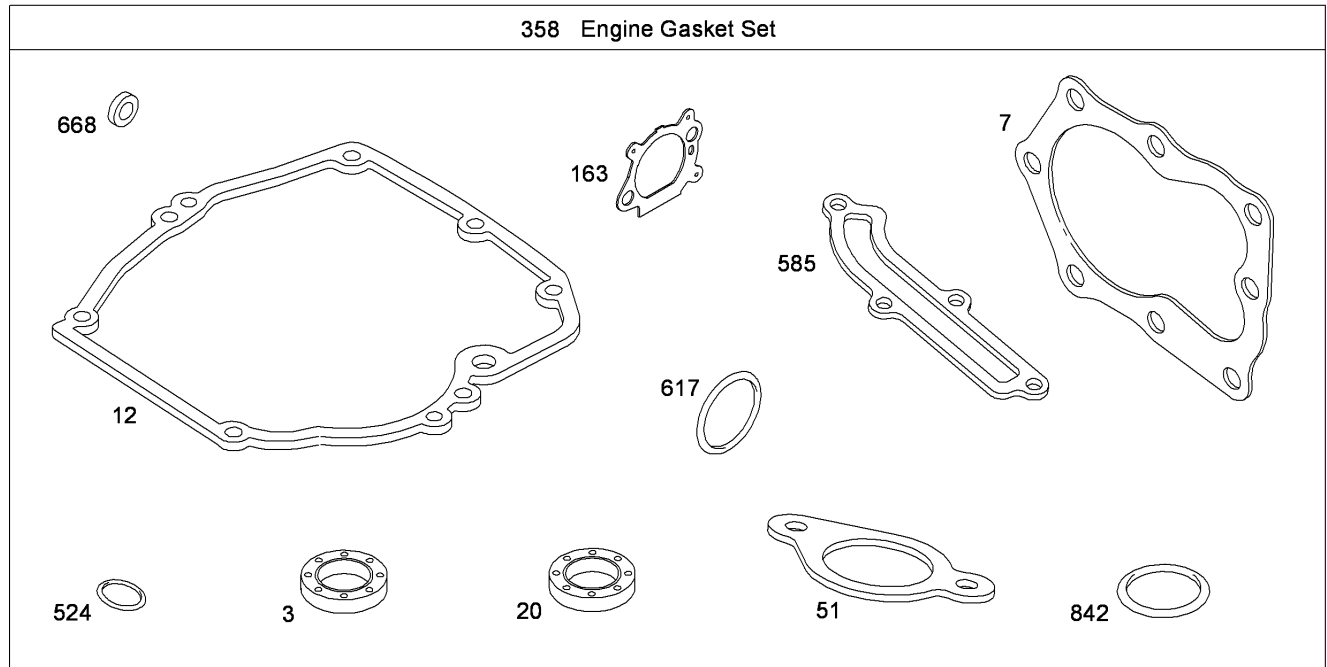

Assemblies include all parts shown in frames

Engine Gasket Set Briggs and Stratton 124T02-0215-B1

Ref	Part No.	Qty.	Description				
243	299819s	1	Seal-Oil (Magnetos Side)				
247	692249	1	Gasket-Head, Cylinder				
2412	692232		Gasket-Crankcase (.015 STD)				
2420	399781s	1	Seal-Oil (PTO Side)				
2451	272199s	1	Gasket-Intake				
23163	272653s	1	Gasket-Cleaner, Air				
4							
2358	794307	1	Engine Gasket Set				
24524	692296	1	Seal-O Ring (Dipstick Tube)				
24585	691879	1	Gasket-Passage, Breather				
23617	270344s	1	Seal-O Ring (Intake Manifold)				
4							
24668	493823	1	Spacer				
24842	691031	1	Seal-O Ring (Dipstick)				

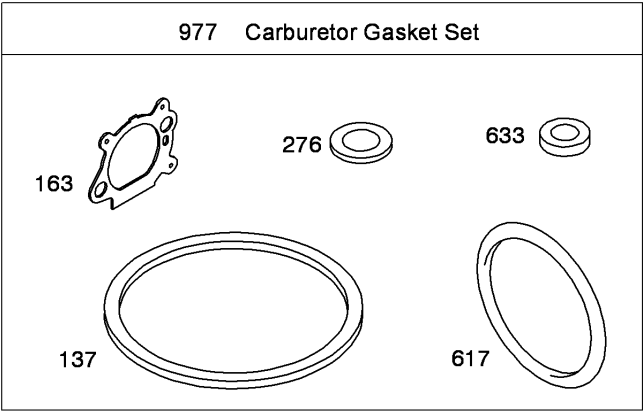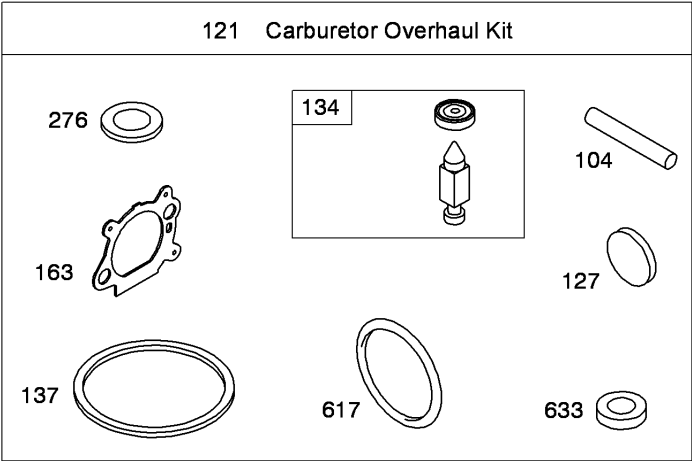

Assemblies include all parts shown in frames

Carburetor Overhaul Kit

Briggs and Stratton 124T02-0215-B1

Ref	Part No.	Qty.	Description				
23104	691242	1	Pin-Hinge, Float				
2121	498260	1	Carburetor Overhaul Kit				
23127	694468	1	Plug-Welch				
23134	398188	1	Needle And Seat Kit				
23137	693981	1	Gasket-Bowl, Float				
5							
23163	272653s	1	Gasket-Cleaner, Air				
45							
23276	271716	1	Washer-Sealing				
5							
23617	270344s	1	Seal-O Ring (Intake Manifold)				
45							
23633	691321	1	Seal-Shaft, Choke Throttle				
5							
2977	498261	1	Carburetor Gasket Set				

Attachments and Accessories

For 20110 - 22in Recycler Lawn Mower

Product Name	Model/Part
Loose Parts Kit	115-1969
Replacement Bag	59303
Bagger Kit	59304
22 Inch Blade Kit	59534

NOTES

NOTES

