


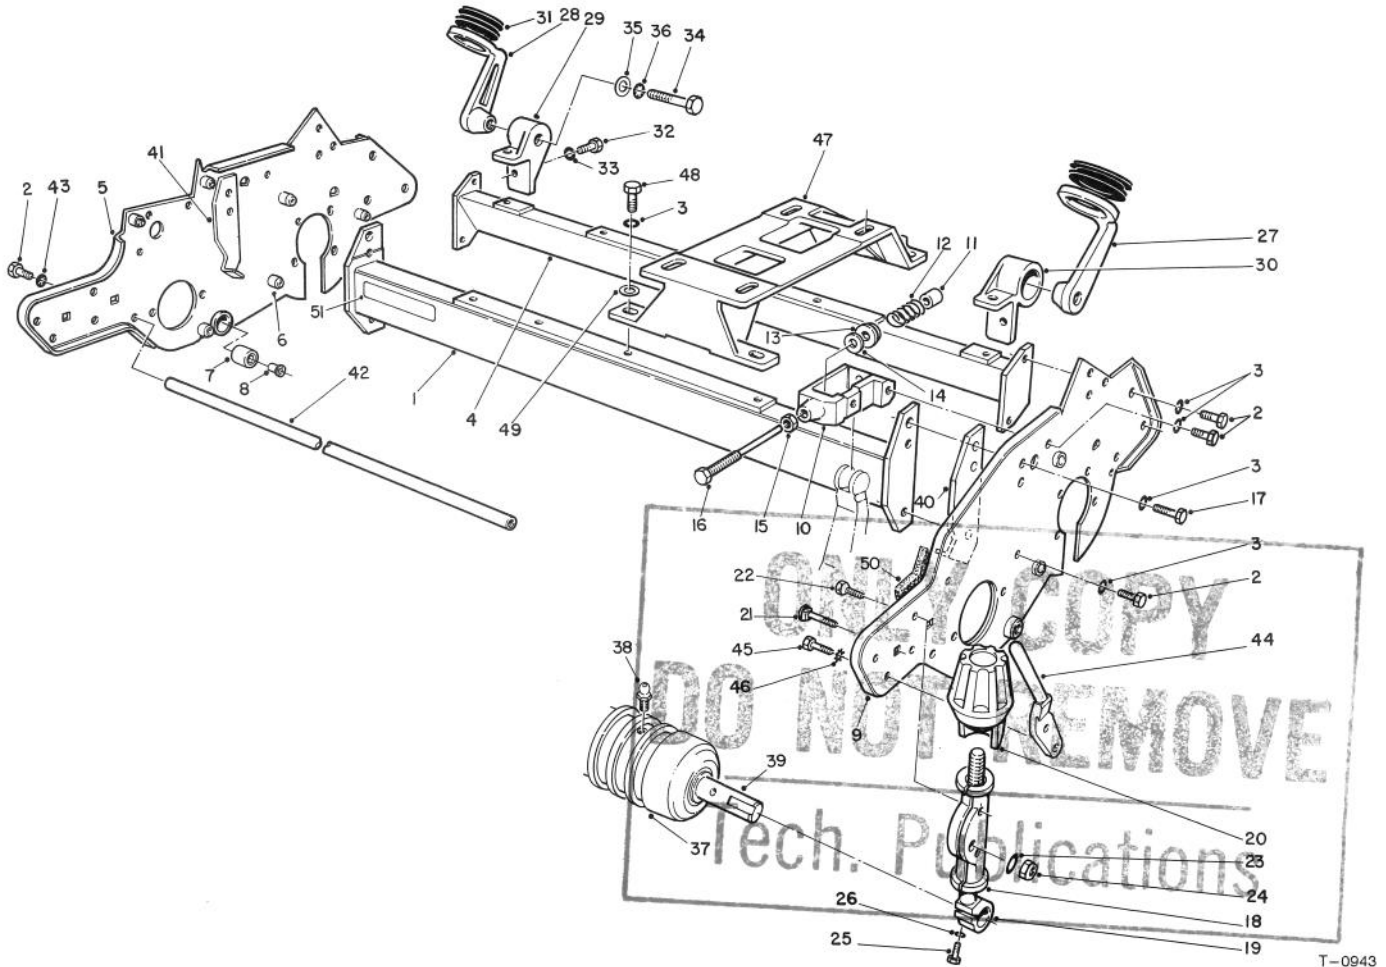


MODEL NO. 04051-40001 & UP

**PARTS
CATALOG**
GREENSMASTER® 1000
Traction Unit & Cutting Unit


T-0943

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-7030	Tube - Front Frame	1	16	65-8690	Screw - Adjusting	2
2	323-4	Screw - Cap Hex. Hd.	12	17	323-18	Screw - Cap Hex. Hd.	2
3	3253-21	Lockwasher	16	18	10-5060	Bracket - H.O.C.	2
4	88-7040	Angle - Rear Frame	1	19	65-9500	Screw - Roller Adjust.	2
5	88-7060	Plate - Side RH	1	20	65-8600	Knob - Height Adjust.	2
6	32148-6	Insert - Threaded	9	21	3230-5	Bolt - Carriage	2
7	63-9510	Bushing Assembly	2	22	92-8914	Bolt - Tapered Face	4
8	52-2890	Nyliner	2	23	3256-23	Washer - Flat	2
9	88-7080	Side Plate Assembly LH (Incl. Ref. #6)	1	24	3296-29	Nut - Lock	2
10	65-8670	Adjuster - Frame	2	25	321-4	Screw - Cap Hex. Hd.	2
11	65-6360	Support - Spring	2	26	3253-3	Washer - Lock	2
12	65-6400	Spring - Compression	2	27	65-7470	Arm - Handle LH	1
13	65-6380	Collar - Thrust	2	28	65-7480	Arm - Handle RH	1
14	65-8680	Washer - Thrust	2	29	65-7490	Socket - Handle RH	1
15	3220-6	Nut - Jam	2	30	65-7500	Socket - Handle LH	1
				31	65-7510	Grommet - Handle	2

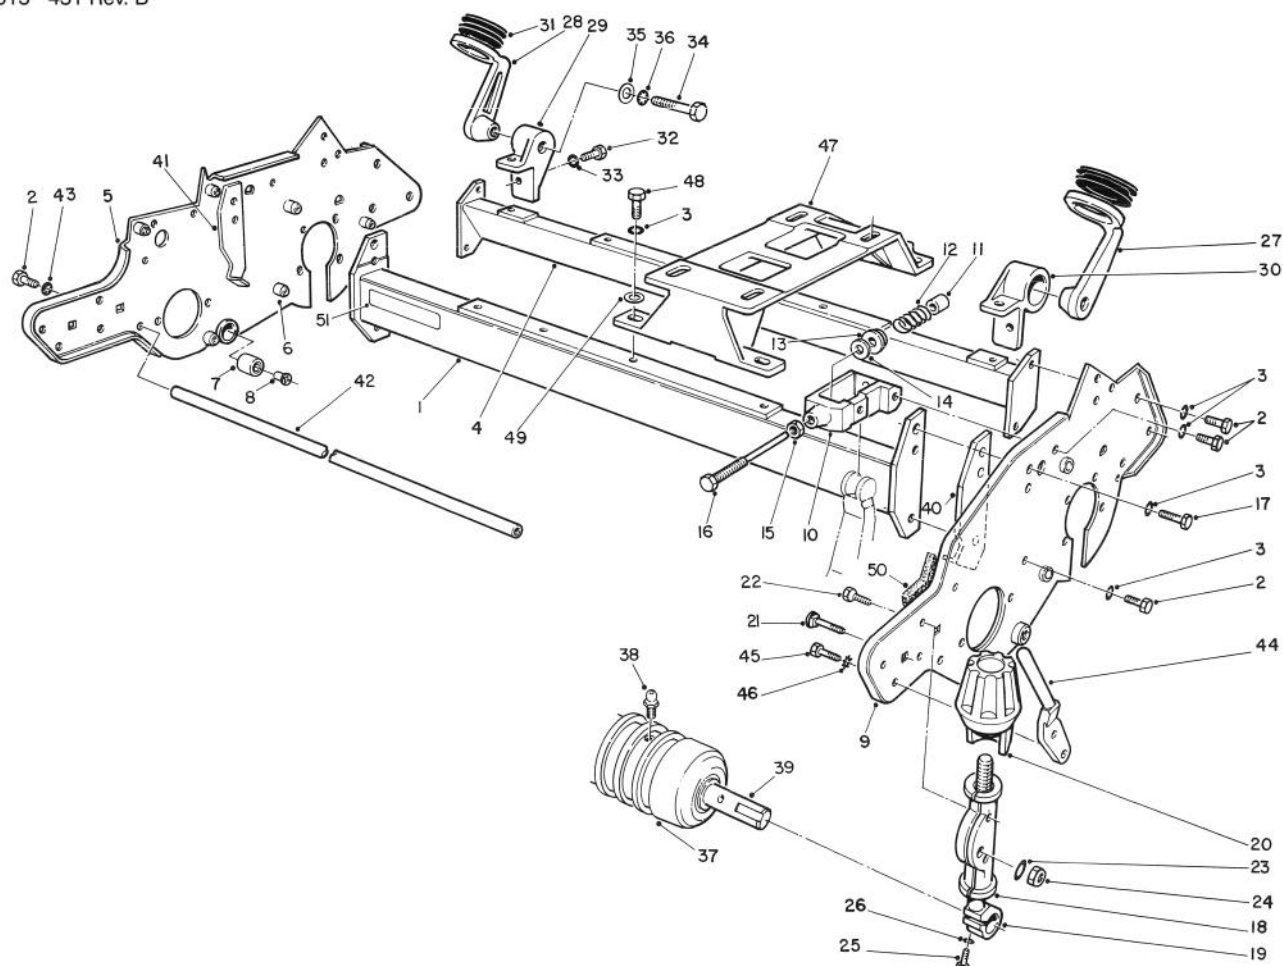


T-0943

FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
32	322-4	Screw - Cap Hex. Hd.	4	42	88-7110	Rod - Frame Support	1
33	3253-4	Washer - Lock	4	43	3254-6	Washer - Lock I.T.L.W.	2
34	325-7	Screw - Cap Hex. Hd.	2	44	65-8570	Rod - Grass Catcher	2
35	3256-26	Washer - Flat	2	45	322-2	Screw - Cap Hex. Hd.	4
36	3254-4	Washer - Lock I.T.L.W.	2	46	3255-8	Washer - Lock I.T.L.W.	4
37	88-6790	Wiehle Roller Assembly (Incl. Ref. #38 & 39)	1	47	88-7670	Base - Engine	1
38	302-5	Fitting - Grease	2	48	323-5	Screw - Cap Hex. Hd.	4
39	52-3210	Bearing	2	49	3256-24	Washer - Flat	4
40	88-7090	Spacer LH	1	50	65-8180	Seal - Grass Catcher	1
41	88-7100	Spacer RH	1	‡51	55-4300	Decal - Warning (English)	2


‡For different language versions of this part, see International Decal Cross Reference.

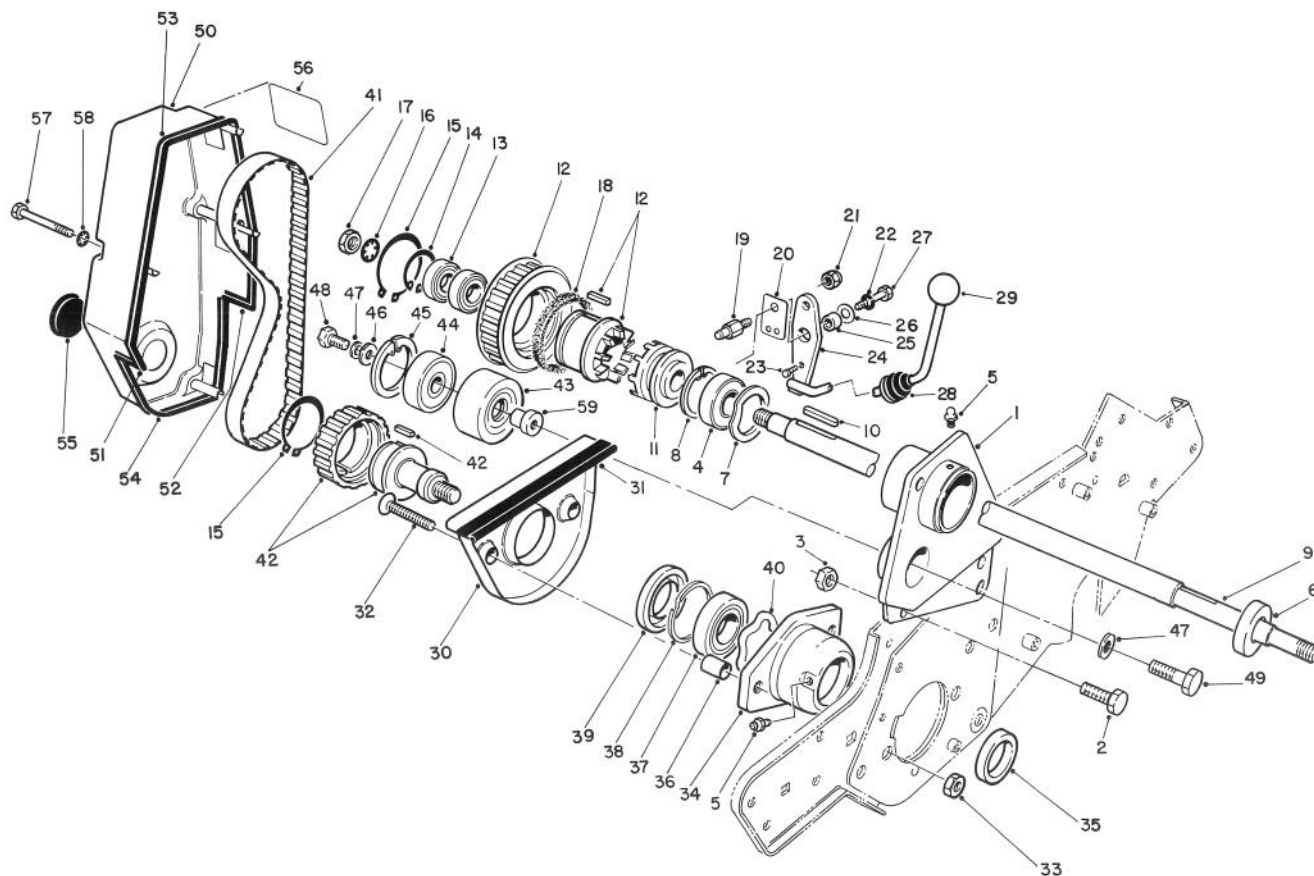

T-0949

REEL DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-8013	Housing - Clutch	1	27	321-4	Screw - Cap Hex. Hd.	1
2	322-5	Screw - Cap Hex. Hd.	2	28	65-8960	Boot - Clutch	1
3	3296-29	Nut - Lock	2	29	233-69	Knob	1
4	251-204	Bearing - Ball	1	30	65-7190	Cover - Groomer Arm	1
5	302-5	Fitting - Grease	2	31	65-7131	Trim - Groomer Arm Cover	1
6	253-118	Seal - Oil	1	32	3289-23	Screw - Flat Hd.	2
7	88-7720	Washer - Wave	1	33	3296-39	Nut	2
8	32120-11	Ring - Retaining	1	34	65-8640	Housing - Bearing	1
9	88-7140	Shaft - Power	1	35	253-96	Seal	1
10	88-7150	Key - Square	2	36	65-8290	Standoff - Cover	2
11	65-6940	Clutch - Jaw Driver	1	37	251-342	Bearing - Self-Aligning	1
12	88-7830	Clutch & Pulley Assembly	1	38	32151-92	Ring - Retaining	1
13	251-336	Bearing - Ball	2	39	253-163	Seal	1
14	32151-89	Ring - Retaining	1	40	3290-485	Washer - Wave	1
15	32151-95	Ring - Retaining	2	41	65-6200	Belt - Reel Drive	1
16	3254-4	Washer - Lock I.T.L.W.	1	42	88-7840	Pulley & Drive Assembly	1
17	3220-5	Nut - Jam	1	43	88-7850	Idler Pulley Assembly (Incl. Ref. #44-48 & 59)	1
18	65-6970	Seal - Felt	1	44	38-7820	Bearing - Ball	1
19	92-7676	Pin - Actuator	1	45	32120-42	Ring - Snap	1
20	65-6290	Spring - Clutch Detent	1	46	88-7200	Washer - Flat	1
21	3296-42	Nut - Lock	1	47	3253-4	Washer - Lock	2
22	3253-3	Washer - Lock	1	48	322-3	Screw - Cap Hex. Hd.	1
23	3259-15	Screw - Drive	1	49	322-5	Screw - Cap Hex. Hd.	1
24	88-7170	Lever - Clutch	1	50	88-7700	Cover - Reel Drive	1
25	88-7860	Spacer	1	51	88-7770	Strip - Seal Front	1
26	3290-414	Washer	1				

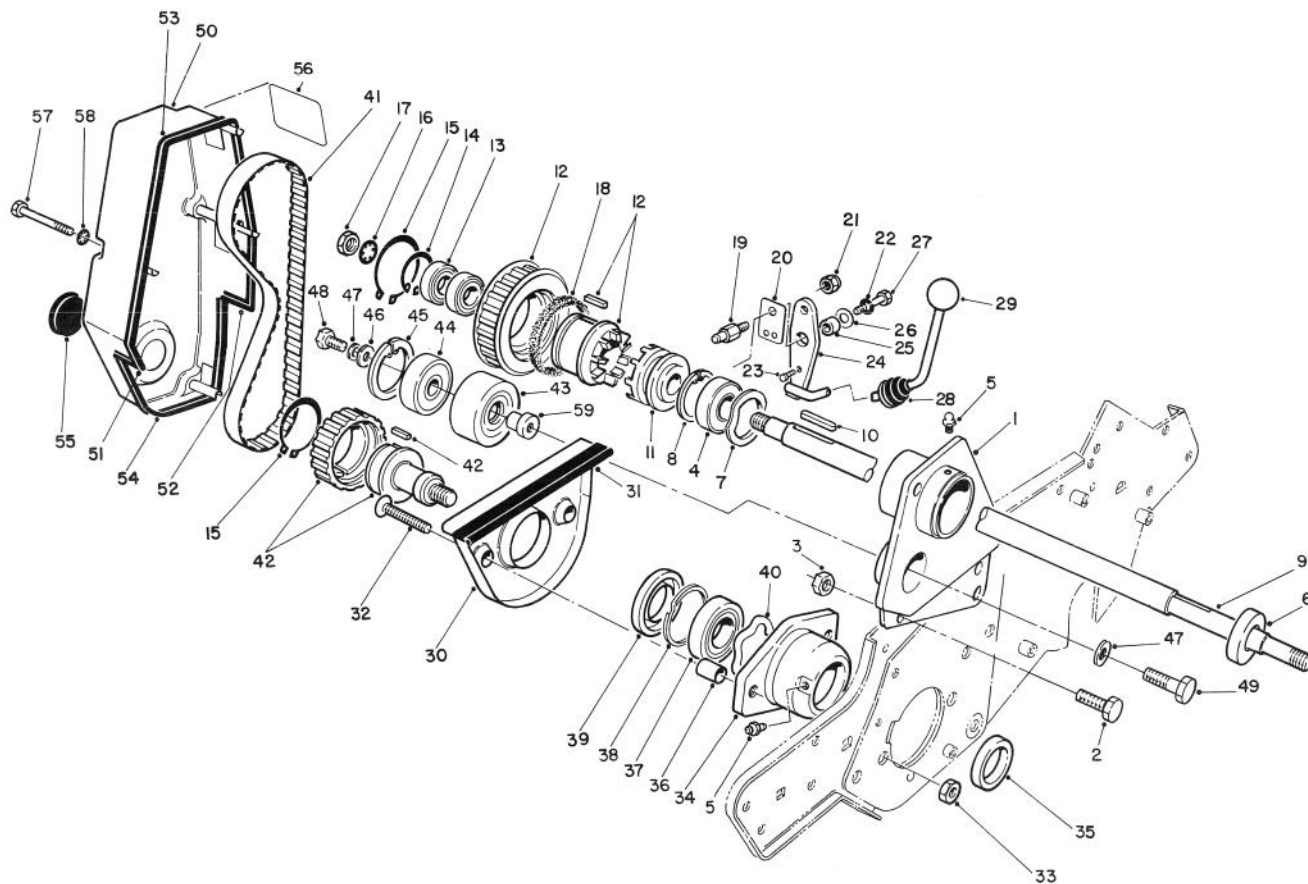


T-0949

REEL DRIVE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
52	88-7780	Strip - Seal Rear	1
53	88-7790	Strip - Seal Upper	1
54	88-7800	Strip - Seal Lower	1
55	237-160	Plug	1

Ref. No.	Part No.	Description	No. Used
‡56	65-7660	Decal - Reel Engagement (English)	1
57	321-20	Screw - Cap Hex. Hd.	4
58	3254-8	Washer - Lock I.T.L.W.	4
59	88-7190	Spacer - Pulley Support	1

‡For different language versions of this part, see International Decal Cross Reference.

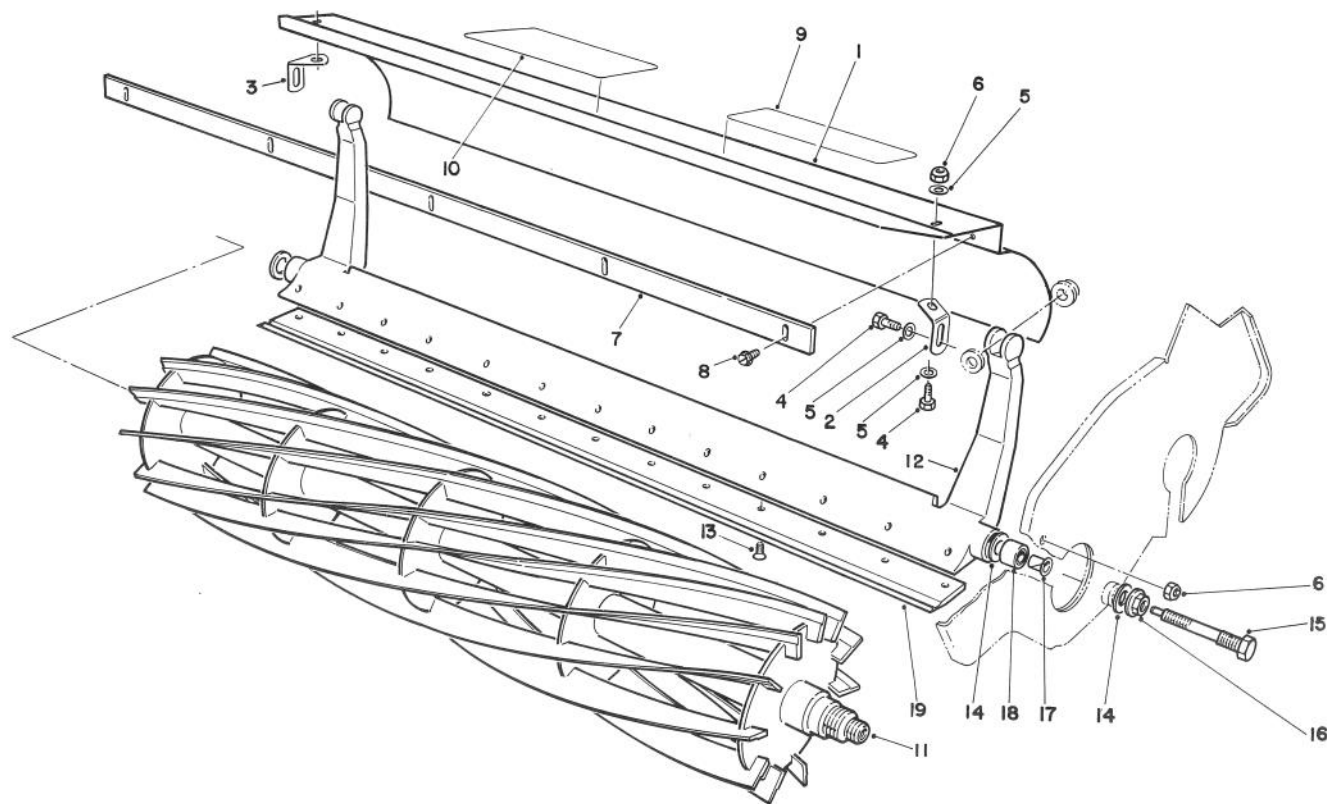


T-0947

REEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	65-9010	Shield - Grass	1	11	92-8653	Reel Assembly - 11 Blade	1
2	65-6450	Bracket - Shield LH	1	*	92-8920	Reel Assembly - 8 Blade	1
3	65-6460	Bracket - Shield RH	1	12	65-6240	Bedbar	1
4	321-3	Screw - Cap Hex. Hd.	4	13	57-4910	Screw - Special	13
5	3256-22	Washer - Flat	6	14	65-6260	Washer - Thrust	4
6	3296-42	Nut - Lock	4	15	65-6270	Bolt - Bedbar	2
7	36-7260	Bar - Cutoff	1	16	32128-48	Nut - Flange	2
8	32144-73	Screw - Self Tapping	5	17	52-2890	Bushing - Flange	2
‡9	62-5070	Decal - Shield (English)	1	18	63-9510	Bushing - Rubber	2
‡10	65-8650	Decal - Service (English)	1	19	63-8470	Bedknife - 1/8	1
				*	63-8560	Bedknife - Tournament	1
				*	65-8250	Bedknife - Micro	1

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

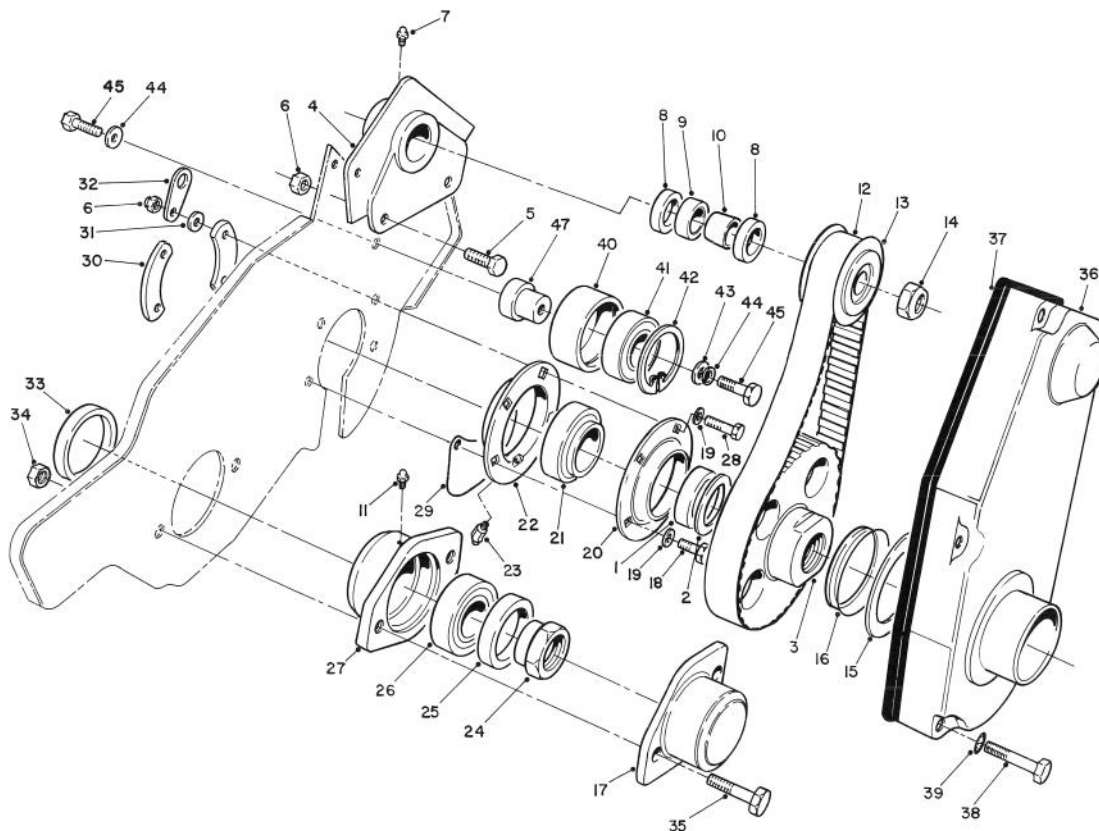


T-0945A

DRUM DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-7530	Spacer	2	24	92-7302	Nut - Bearing Lock	1
2	88-7540	Washer - Backup	2	25	253-163	Seal	1
3	88-7560	Pulley - LH	1	26	251-342	Bearing	1
*	88-7550	Pulley - RH	1	27	65-8640	Housing - Bearing	1
4	88-7470	Housing - LH	1	28	322-42	Screw - Cap Hex. Hd.	2
*	88-7490	Housing - RH	1	29	65-8720	Closure	2
5	322-5	Screw - Cap Hex. Hd.	4	30	65-8730	Clamp - Bearing	4
6	3296-29	Nut - Lock	6	31	3256-23	Washer - Flat	2
7	302-19	Fitting - Grease	2	32	65-8590	Holddown - Handle	2
8	253-160	Seal	4	33	253-96	Seal	1
9	251-338	Bearing	4	34	3296-39	Nut - Lock	2
10	86-7130	Spacer	2	35	323-7	Screw - Cap Hex. Hd.	2
11	302-5	Fitting - Grease	1	36	88-7680	Cover - Drum Belt LH	1
12	65-6210	Belt	2	*	88-7690	Cover - Drum Belt RH	1
13	65-6660	Pulley	2	37	88-7810	Seal Strip - Drum Cover	2
14	3296-57	Nut	2	38	321-11	Screw - Cap Hex. Hd.	8
15	65-6570	Washer	2	39	3254-8	Washer - Lock I.T.L.W.	8
16	253-161	Seal - V-Ring	2	40	88-7850	Idler Pulley Assembly (Incl. Ref. #41-45 & 47)	2
17	65-6220	Cover - Bearing	1	41	38-7820	Bearing - Ball	2
18	322-3	Screw - Cap Hex. Hd.	6	42	32120-42	Ring - Snap	2
19	3253-4	Washer - Lock	8	43	88-7200	Washer - Flat	2
20	65-6590	Flangette	2	44	3253-4	Washer - Lock	2
21	88-7880	Bearing	2	45	322-3	Screw - Cap Hex. Hd.	4
22	65-8710	Flangette (Incl. Ref. #23)	2	47	88-7190	Spacer - Pulley Support	2
23	302-11	Fitting - Grease	2				


*Not Illustrated

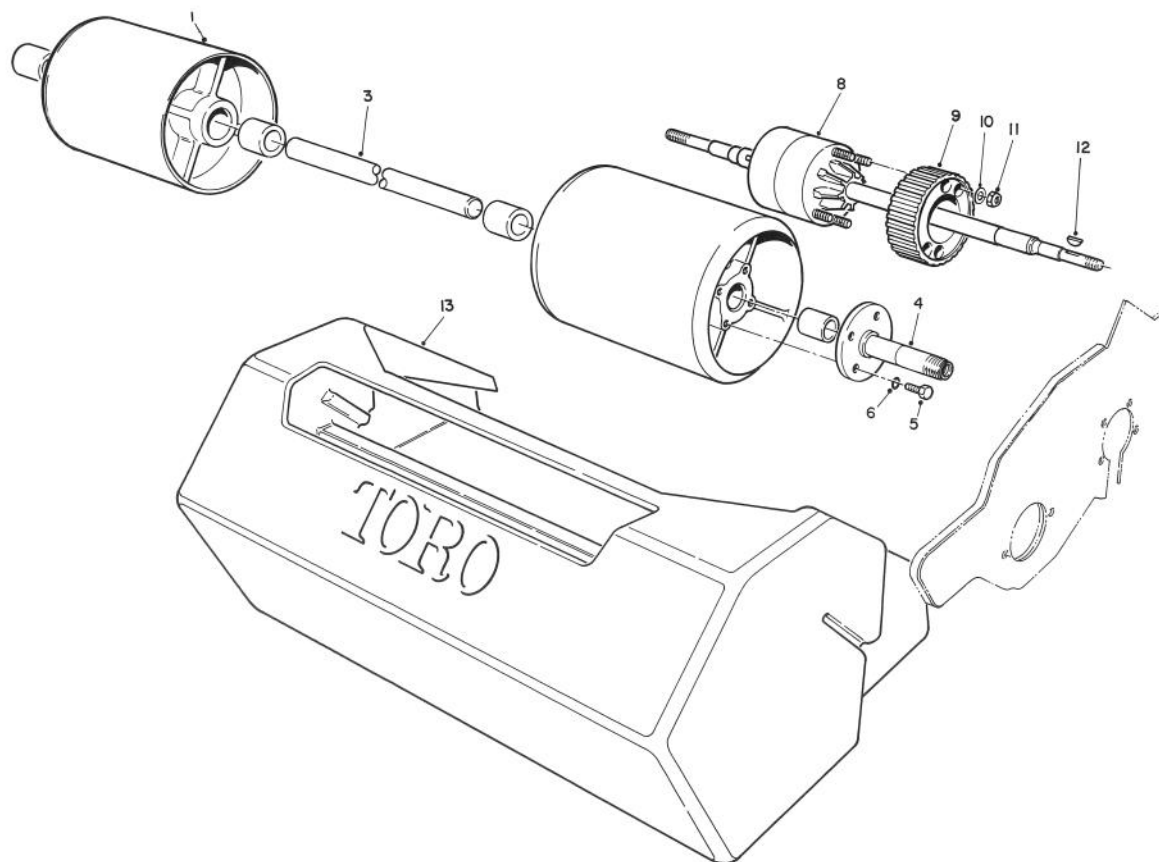

T-0944A

DRUM AND BASKET ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-7280	Drum Assembly	2	9	65-9120	Peerless Model 100-085 Pulley - Differential	1
3	88-7640	Shaft - Drum	1	10	3256-23	Washer - Flat	4
4	88-7520	Shaft - Drum LH	1	11	3296-29	Nut - Lock	4
*	88-7510	Shaft - Drum RH	1	12	3257-32	Key	2
5	322-5	Screw - Cap Hex. Hd.	8	13	65-7230	Basket - Grass	1
6	3253-4	Washer - Lock	8				
8	88-7210	Differential Assembly					

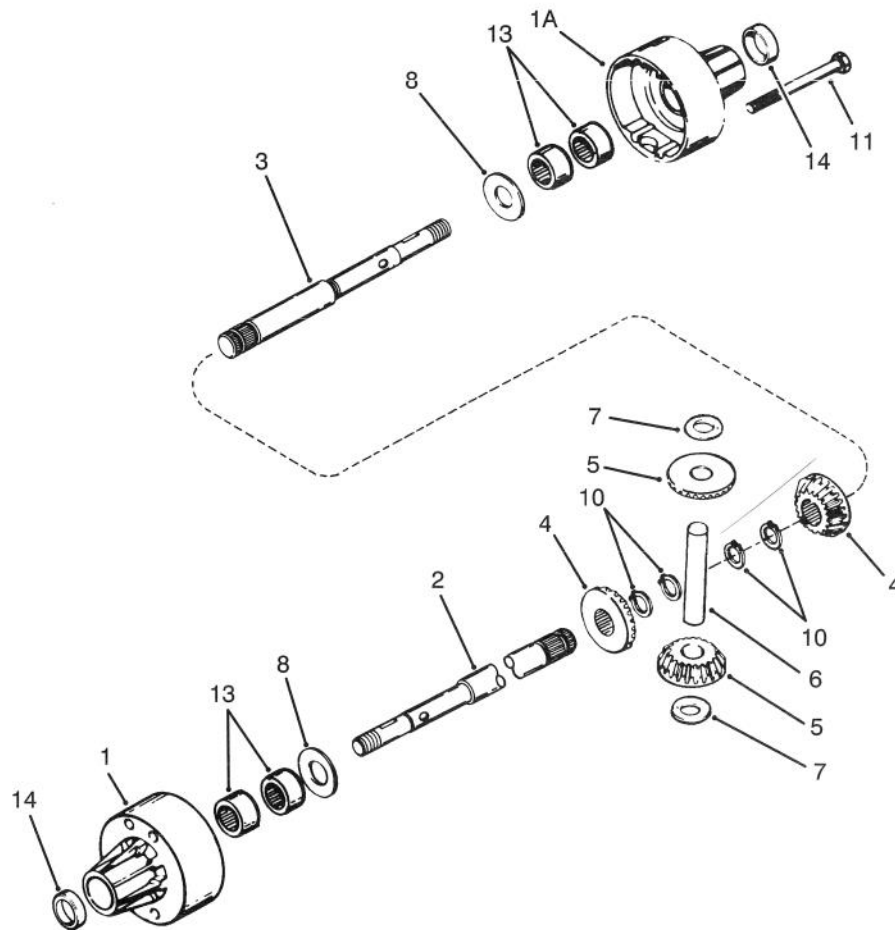


T-1571

DIFFERENTIAL ASSEMBLY PEERLESS MODEL NO. 100-085

Ref. No.	Part No.	Description	No. Used
1	774881	Housing Differential Carrier (Incl. Ref. #13 & 14)	1
1A	774882	Housing Differential Carrier (Incl. Ref. #13 & 14)	1
2	774864A	Axle (20-29/32" Long)	1
3	774863A	Axle (6-7/32" Long)	1
4	778221	Gear Bevel	2
5	778068	Gear Pinion	2

Ref. No.	Part No.	Description	No. Used
6	786040	Pin Drive	1
7	780096	Washer Thrust	2
8	780001	Washer	2
10	792125	Ring - Retaining (Pkg. of 2)	4
11	792093	Screw Flanged Hex Hd.	4
13	780140	Bearing Needle	4
14	788042	Seal Oil	2

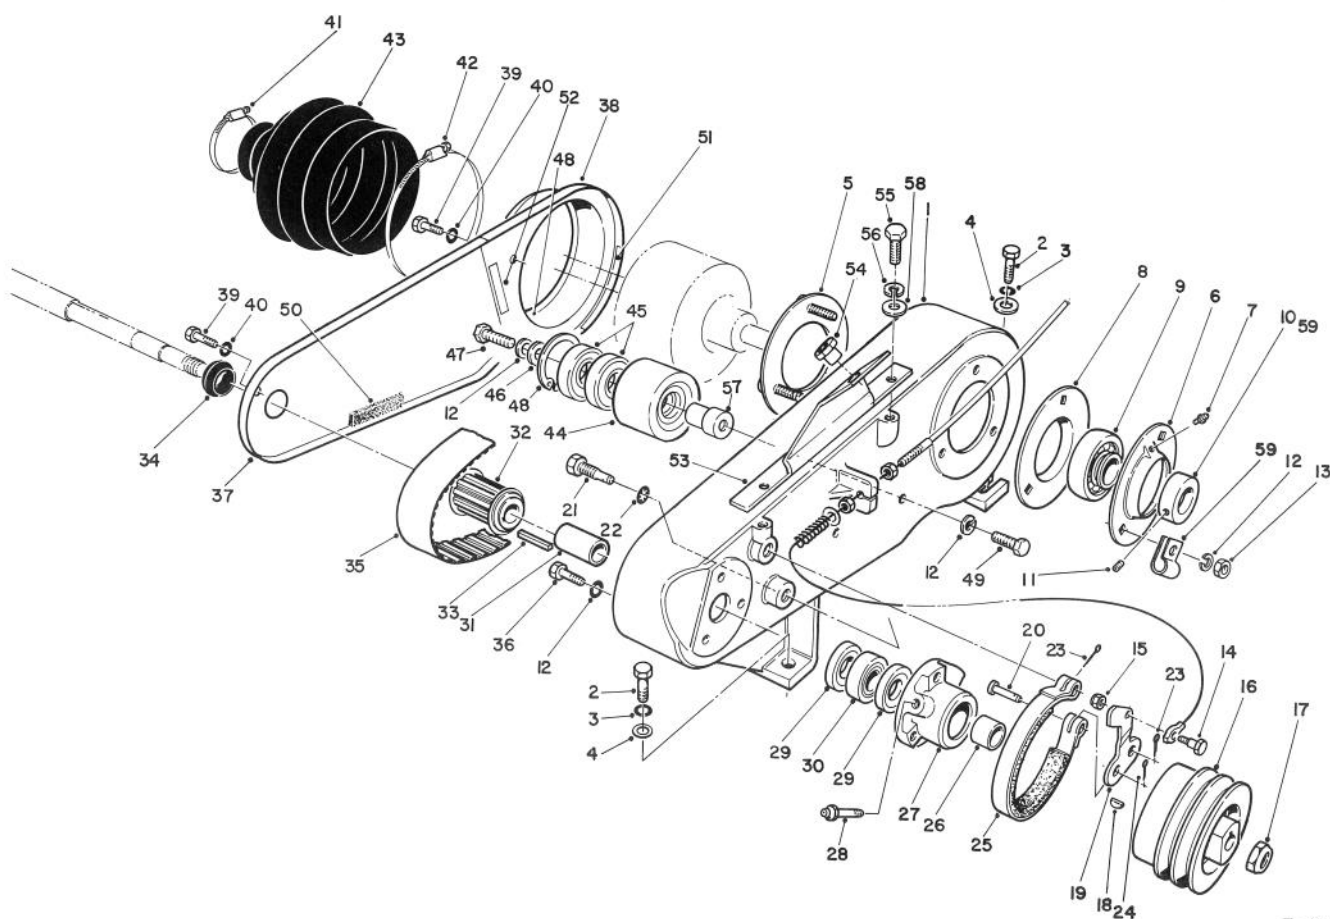


T-0940

COUNTERSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-7230	Housing - Countershaft	1
2	323-5	Screw - Cap Hex. Hd.	4
3	3253-21	Washer - Lock	4
4	3256-24	Washer - Flat	4
5	65-6720	Plate - Screw	1
6	65-6700	Flangette (Incl. Ref. #7)	1
7	302-65	Fitting - Grease	1
8	65-6710	Flangette	1
9	251-343	Bearing (Incl. Ref. #10 & 11)	1
10		Collar - Locking	1
11		Screw - Set	2
12	3253-4	Washer - Lock	8
13	3218-2	Nut - Jam	3
14	11-9030	Bolt - Shoulder	1
15	3296-42	Nut - Lock	1
16	65-8890	Pulley - Input Shaft	1
17	3296-57	Nut - Lock	1
18	3257-32	Key	1
19	65-8610	Lever - Brake	1
20	283-75	Pin - Clevis	1
21	65-6810	Support - Brake	2
22	3254-6	Washer - Lock I.T.L.W.	2
23	3272-6	Pin - Cotter	2
24	3272-8	Pin - Cotter	1

Ref. No.	Part No.	Description	No. Used
25	65-8700	Band - Brake	1
26	86-7130	Spacer - Short	1
27	65-6760	Housing - Bearing	1
28	302-64	Fitting - Grease	1
29	253-160	Seal	2
30	251-338	Bearing	1
31	86-7140	Spacer - Long	1
32	65-8910	Pulley - Countershaft	1
33	65-6850	Key	1
34	88-7710	Seal - Countershaft	1
35	65-9080	Belt	1
36	322-5	Screw - Cap Hex. Hd.	3
37	88-7240	Cover - Box Front	1
38	88-7250	Cover - Box Rear	1
39	321-2	Screw - Cap Hex. Hd.	3
40	3253-3	Washer - Lock	3
41	2412-139	Clamp - Hose	1
42	2412-140	Clamp - Hose	1
43	65-6800	Boot - Differential	1
44	88-7870	Idler Pulley Assembly (Incl. Ref. #12, 45-48 & 57)	1
45	38-7820	Bearing - Ball	2
46	88-7200	Washer - Flat	1
47	322-3	Screw - Cap Hex. Hd.	1
48	32120-42	Ring - Retaining	1
49	322-5	Screw - Cap Hex. Hd.	1

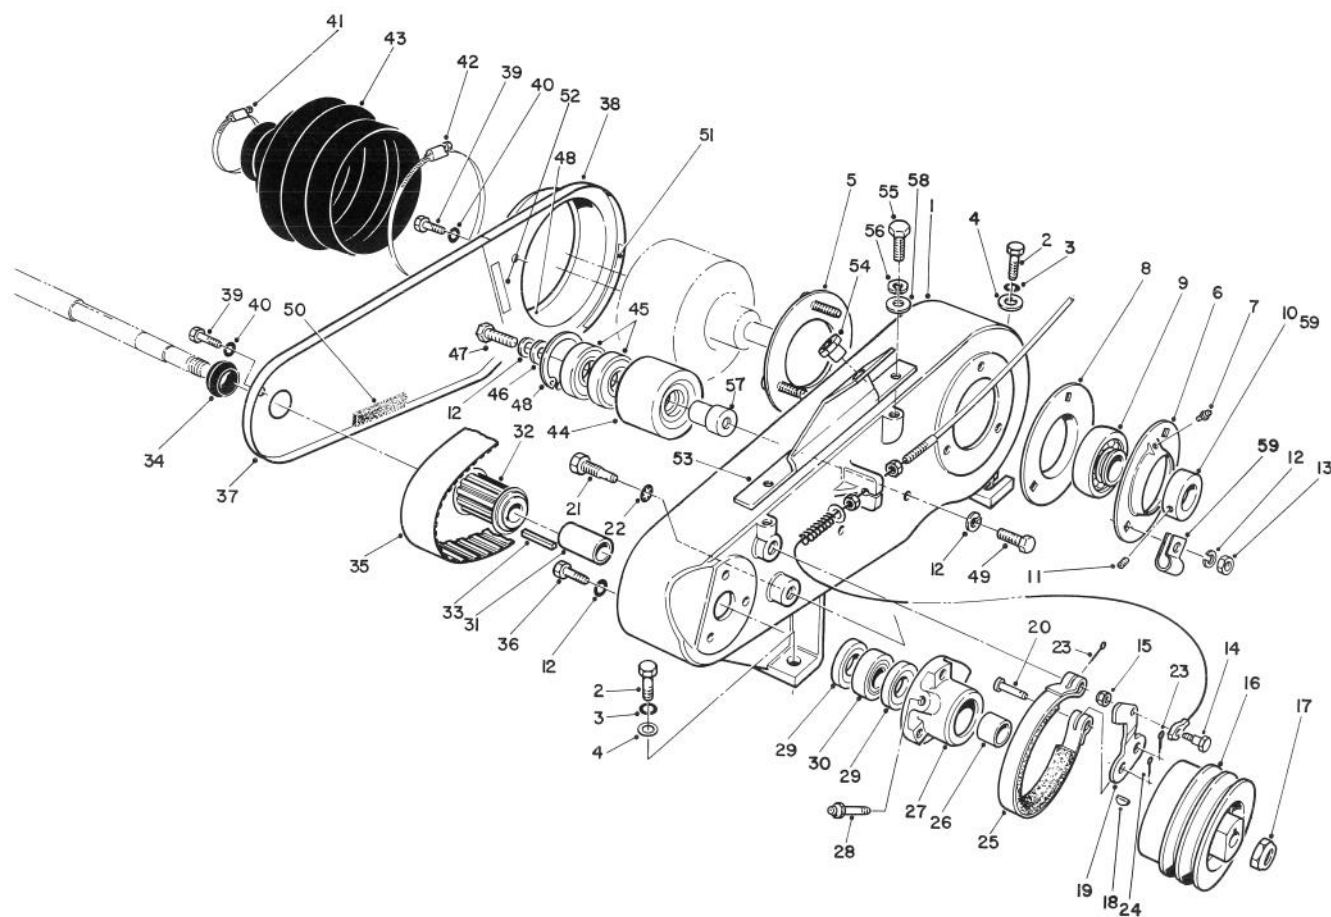


T-0940

COUNTERSHAFT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
50	65-6901	Strip - Cover Seal	1
51	65-6902	Strip - Cover Seal	1
52	65-6903	Strip - Cover Seal	1
53	88-7900	Cover Bracket Assembly (Incl. Ref. #54)	1
54	32148-6	Insert - Threaded	1

Ref. No.	Part No.	Description	No. Used
55	321-3	Screw - Cap Hex. Hd.	2
56	3253-3	Washer - Lock	2
57	88-7380	Spacer - Pulley Support	1
58	3256-22	Washer - Flat	2
59	88-7970	Clip	1

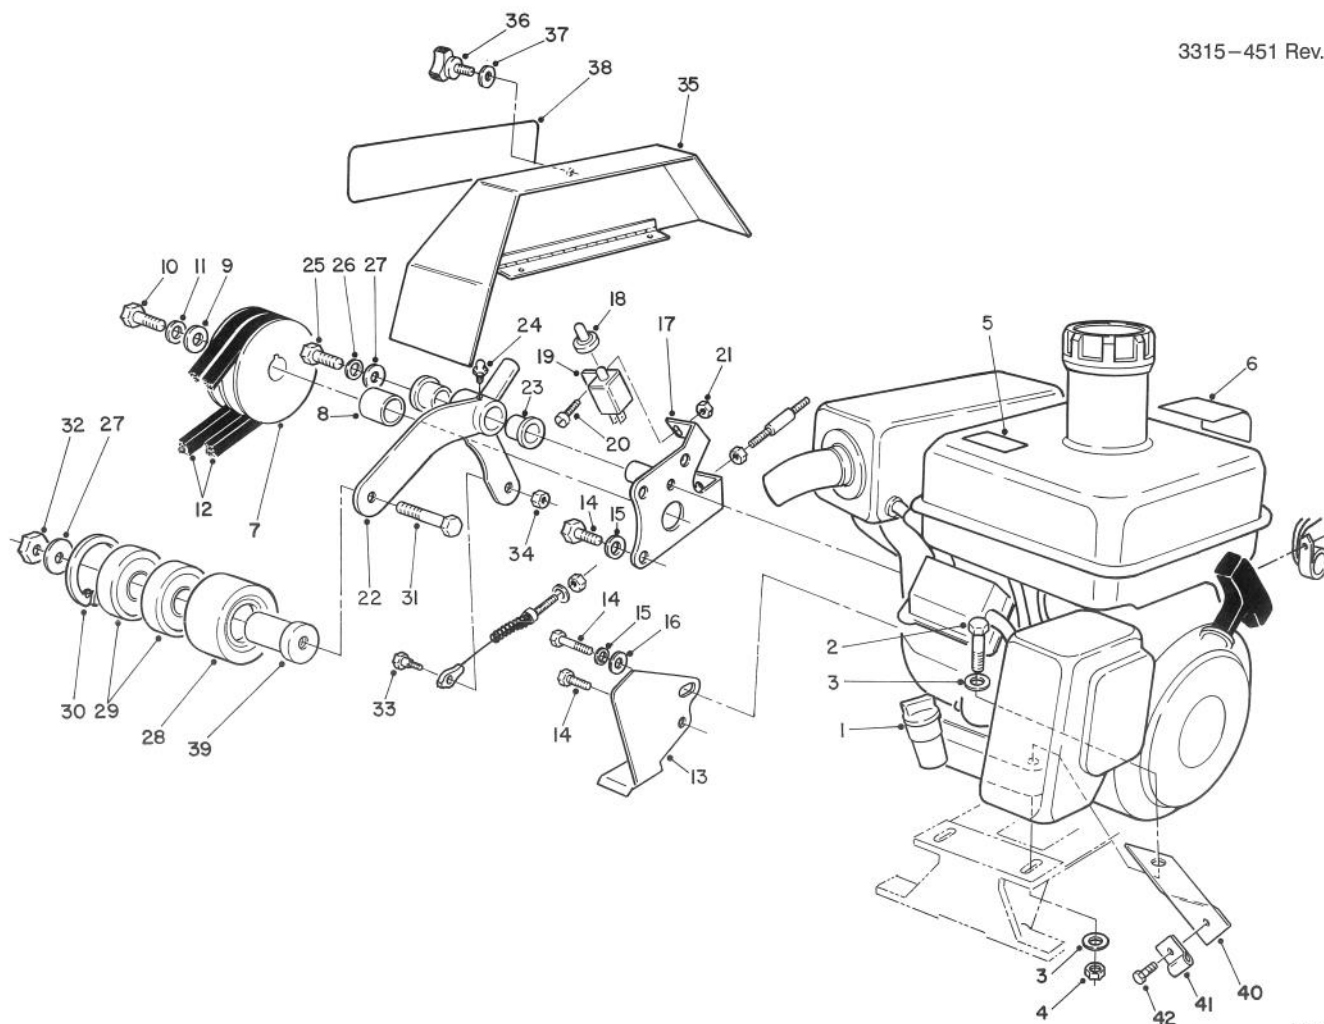


T-0938

ENGINE AND BELLCRANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-7260	Engine Assembly Kawasaki Model FE120G-AS00	1	21	32149-7	Nut - Lock	2
2	322-9	Screw - Cap Hex. Hd.	4	22	88-7330	Bellcrank	1
3	3256-56	Washer - Flat	8	23	65-8770	Bushing	2
4	3296-29	Nut - Lock	4	24	302-5	Fitting - Grease	1
‡5	63-8440	Decal - Hot (English)	1	25	323-4	Screw - Cap Hex. Hd.	1
‡6	88-7620	Decal - Fuel (English)	1	26	3253-21	Washer - Lock	1
7	65-7260	Pulley - Input Drive	1	27	3256-24	Washer - Flat	2
8	65-8260	Spacer - Engine Shaft	1	28	88-7890	Idle Pulley Assembly (Incl. Ref. #29, 30 & 39)	1
9	65-8270	Washer - Flat	1	29	38-7820	Bearing - Ball	2
10	48-9460	Screw - Cap Hex. Hd.	1	30	32120-42	Ring - Retaining	1
11	3253-4	Washer - Lock	1	31	323-31	Screw - Cap Hex. Hd.	1
12	65-7270	Belt - V (Set of 2)	1	32	3296-39	Nut - Lock	1
13	88-7290	Support - Belt	1	33	11-9030	Bolt - Shoulder	1
14	48-7700	Screw - Cap Hex. Hd.	5	34	3296-42	Nut - Lock	1
15	3253-4	Washer - Lock	4	35	88-7750	Cover - Bellcrank	1
16	3256-23	Washer	1	36	88-7660	Retainer - Cover	1
17	88-7320	Support - Bellcrank	1	37	32151-106	Ring - Push-On	1
18	65-7400	Boot - Switch	1	38	88-7630	Decal - Greensmaster 1000	1
19	65-7410	Switch	1	39	88-7350	Spacer - Pulley Support	1
20	3252-4	Screw - Hex. Socket Hd.	2	40	88-7960	Bracket - Throttle Cable	1
				41	2412-21	Clip - Cable	1
				42	32144-73	Screw - Hex. Washer Hd.	1

‡For different language versions of this part, see International Decal Cross Reference.

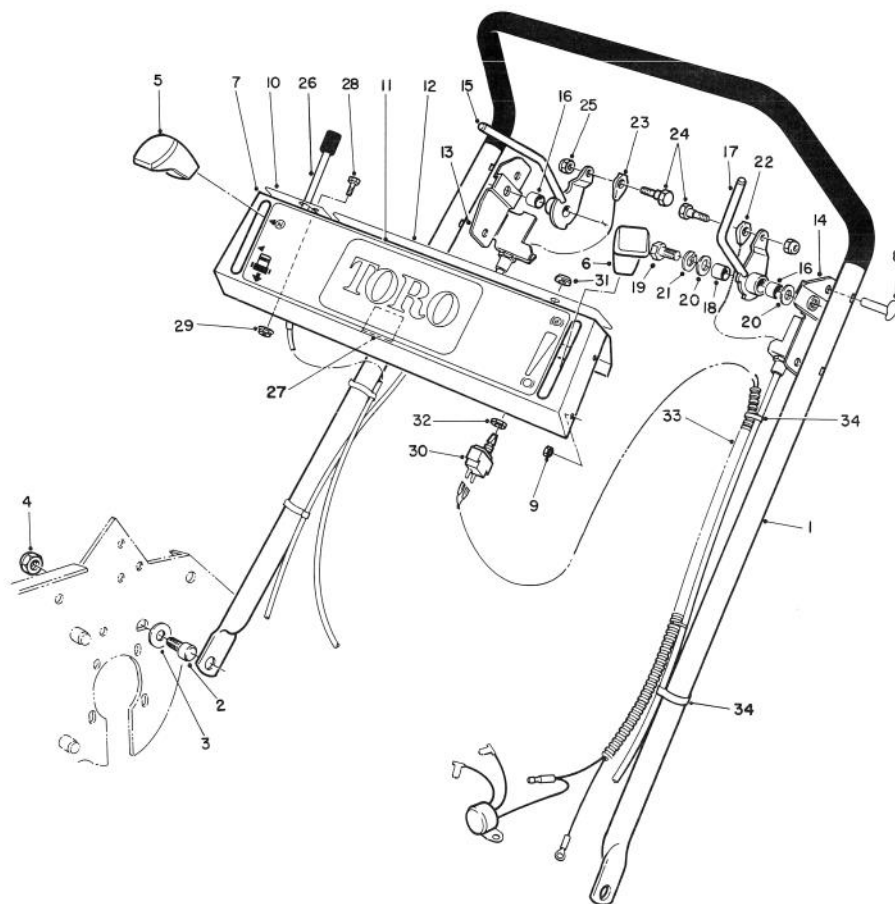

T-0941B


HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-7390	Handle	1
2	65-7450	Stud - Pivot	2
3	65-7460	Washer	2
4	3296-28	Nut - Lock	2
5	65-8970	Knob - Black	1
6	65-8971	Knob - Red	1
7	88-7400	Panel - Control	1
8	17-9420	Screw - Handle	4
9	3296-29	Nut - Lock	4
‡10	65-8170	Decal - Throttle (English)	1
‡11	65-7670	Decal - Throttle Panel (English)	1
‡12	65-7680	Decal - Throttle Ignition (English)	1
13	88-7420	Bracket - Clutch	1
14	88-7440	Bracket - Brake	1
15	65-7610	Clutch Lever Assembly (Incl. Ref. #16)	1
16	256-206	Bushing	2

Ref. No.	Part No.	Description	No. Used
17	65-7710	Brake Lever Assembly (Incl. Ref. #16)	1
18	88-7450	Spacer	2
19	3210-7	Screw - Cap Hex. Hd.	2
20	3256-23	Washer	4
21	3253-4	Washer - Lock	2
22	65-8830	Cable - Brake	1
23	65-8831	Cable - Clutch	1
24	11-9030	Screw - Shoulder	2
25	3296-42	Nut	2
26	88-7910	Throttle Assembly	1
27	66-2000	Decal - Noise Rating	1
28	3290-134	Screw - Cap Hex. Hd.	3
29	3296-2	Nut - Lock	3
30	28-4110	Switch On/Off	1
31	218-497	Nut - Face	1
32	218-498	Nut - Lock	1
33	65-8780	Harness - Wire	1
34	3290-378	Tie - Wire	6

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

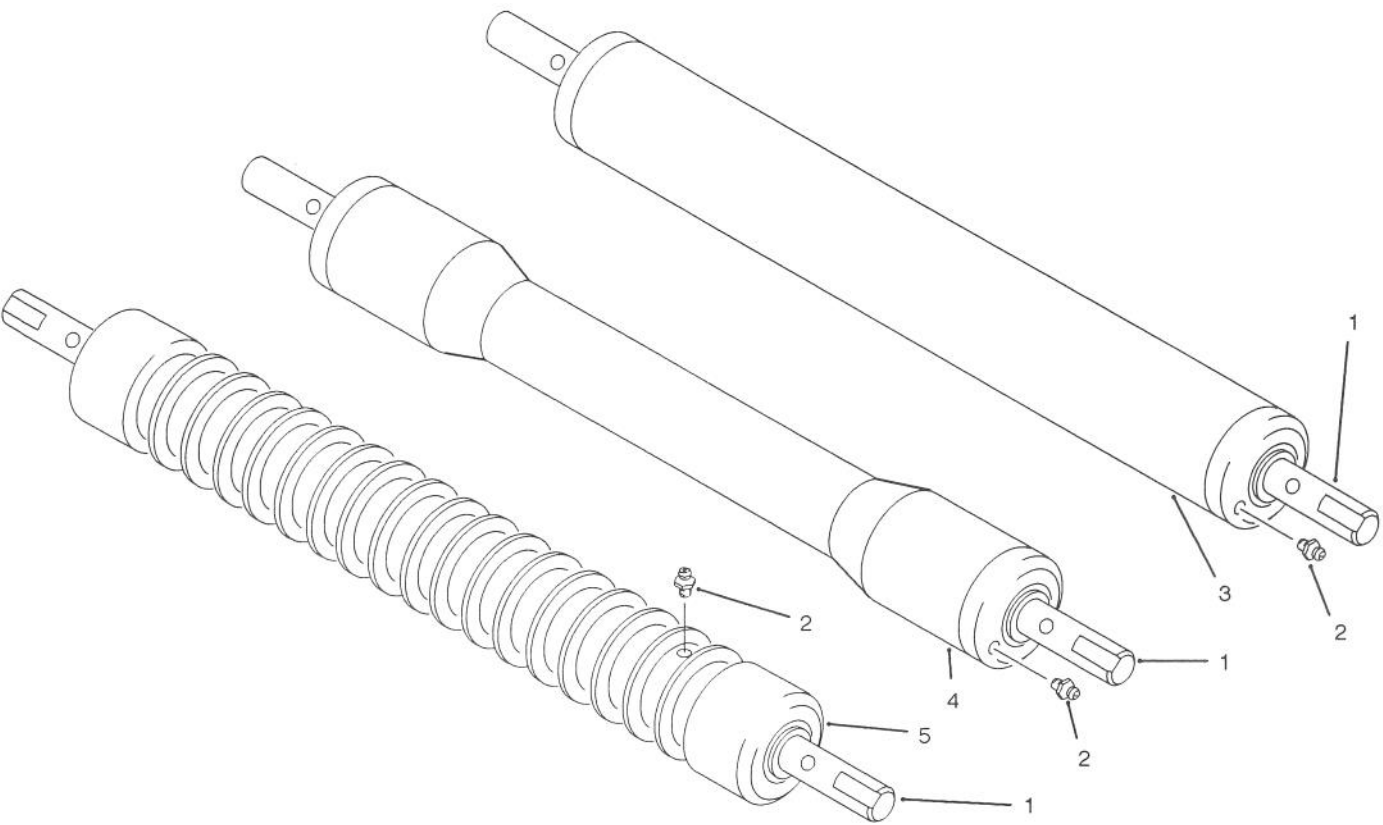


T-0956

CUTTING UNIT ROLLER OPTIONS

Ref. No.	Part No.	Description	No. Used
1	52-3210	Bearing - Roller	2
2	302-5	Fitting - Grease	2
3	52-3170	Assembly - Roller (Incl. Ref. #1 & 2)	1

Ref. No.	Part No.	Description	No. Used
4	52-3590	Assembly - Swaged Roller (Incl. Ref. #1 & 2)	1
5	71-1550	Assembly - Wiehle Roller (Incl. Ref. #1 & 2)	1
*	04118	Wiehle Roller (Carton of 1)	1

*Not Illustrated

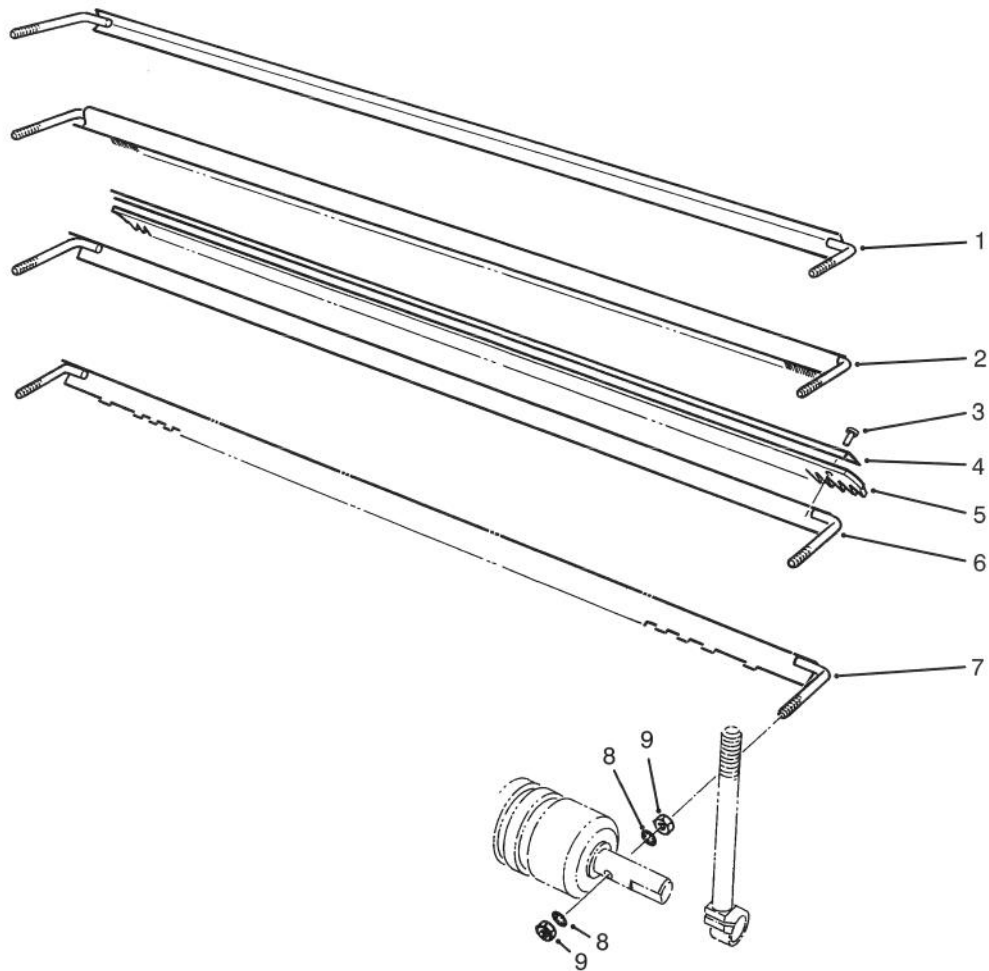

T-0955


SCRAPER OPTIONS

Ref. No.	Part No.	Description	No. Used
1	65-8360	Scraper - Smooth	1
2	33-1000	Scraper - Brush	1
3	3295-15	Rivet	11
4	8-2520	Support - Comb	1
5	8-2530	Comb - Urethane	1

Ref. No.	Part No.	Description	No. Used
6	11-0070	Assembly - Comb, Scraper (Incl. Ref. #3-5)	1
7	65-8340	Scraper - Wiehle Roller	1
8	3254-8	Washer - Lock I.T.L.W.	4
9	3219-1	Nut-Hex	4

SPECIAL TOOLS


BEDKNIFE SCREW TOOL NO. *TOR510880

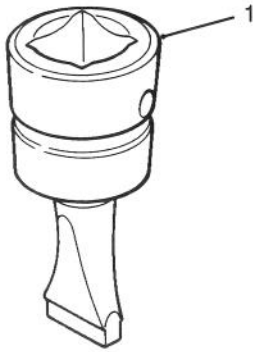

T-0729

Ref. No.	Part No.	Description	No. Used
1	51-0880	Tool - Bedknife Screw	1


BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

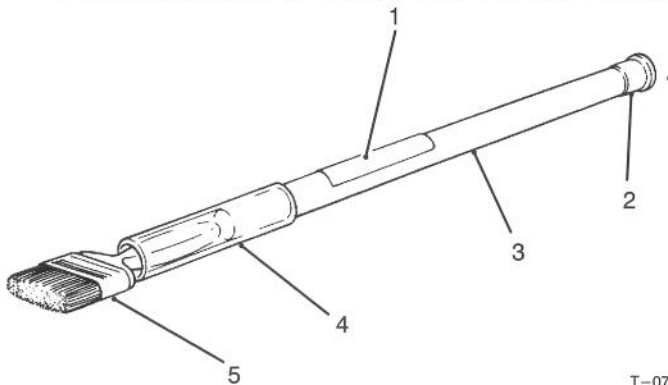

T-0731


Ref. No.	Part No.	Description	No. Used
1	12-9140	Decal	1
2	2410-18	Plug	1
3	29-9080	Handle	1
4	29-9090	Hose - Handle	1
5	36-4310	Brush	1

HEIGHT-OF-CUT BAR ASSEMBLY NO. 13-8199

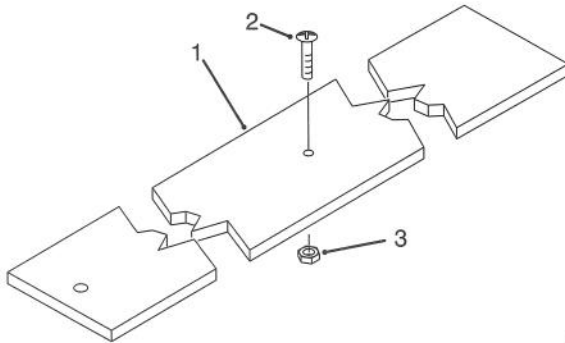

T-1763

Ref. No.	Part No.	Description	No. Used
1	65-8320	Bar	1
2	32122-22	Screw - Phill. Truss Hd.	1
3	3219-14	Nut.	1

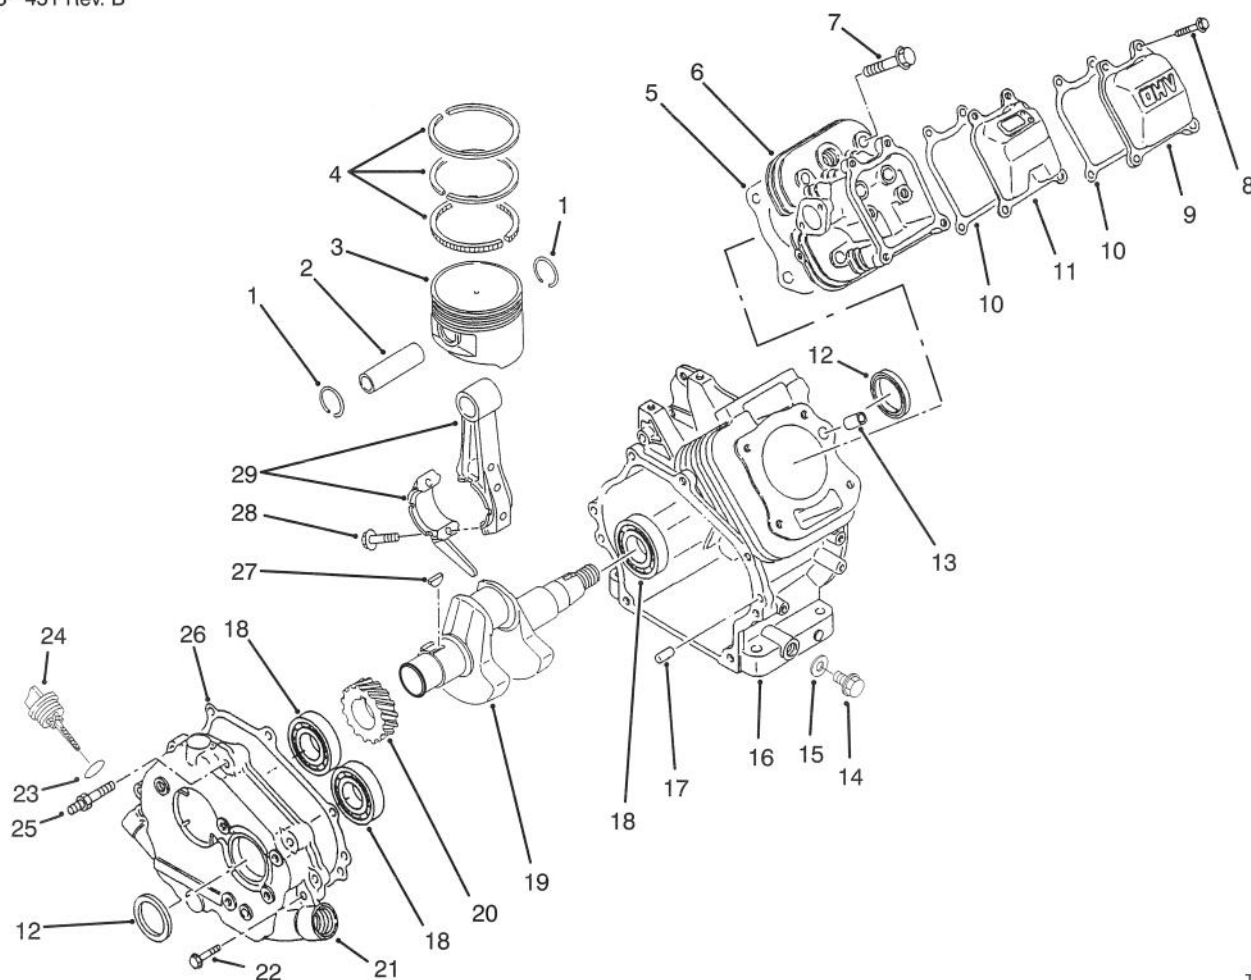


T-1623

ENGINE CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92036-003	Ring - Retaining	2
2	13002-1005	Pin - Piston	1
3	13001-2132	Piston	1
4	13008-6027	Piston Ring Set	1
5	11004-2113	Gasket - Head	1
6	11008-2092	Head - Cylinder	1
7	130T0845	Bolt - Flanged	4
8	130C0612	Bolt - Flanged	4
9	11022-2065-9H	Case - Rocker	1
10	11060-2048	Gasket - Rocker	2
11	14069-2080	Breather	1
12	313650-4231-00	Seal - Oil	2
13	92043-1037	Pin	2
14	92066-2203	Plug - Drain	2
15	11009-2175	Gasket - Drain Plug	2
16	49120-2241	Crankcase	1


Ref. No.	Part No.	Description	No. Used
17	551A0612	Pin	2
18	601A6204	Bearing - Ball	3
19	49119-6122	Crankshaft Assembly (Incl. Ref. #20 & 27)	1
20	59056-2862	Gear - Helical	1
21	49015-6103	Cover - Crankcase	1
22	130G0630	Bolt - Flanged	7
23	92055-2064	Seal - O-Ring	2
24	16115-2091	Cap - Oil Filler	2
25	92150-2261	Stud	1
26	11060-2044	Gasket - Crankcase	1
27	92038-2093	Key	1
28	92150-2122	Bolt - Rod	2
29	13251-6045	Connecting Rod Assy. (Incl. Ref. #29)	1

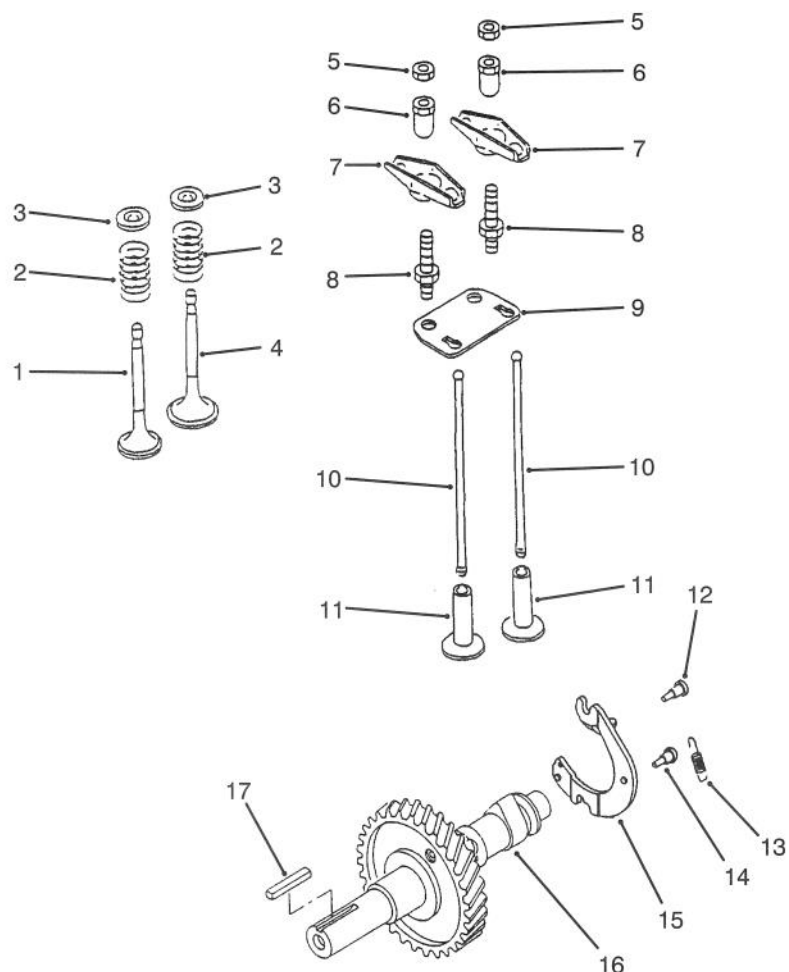

T-1624

ENGINE CAMSHAFT & VALVES ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	12005-2087	Valve - Exhaust	1	10	13116-2072	Rod - Push	2
2	49078-2064	Spring - Valve	2	11	12032-2064	Tappet	2
3	12009-2062	Retainer - Spring	2	12	92043-2130	Pin	2
4	12004-2098	Valve - Intake	1	13	92144-2049	Spring	1
5	92015-2240	Nut	2	14	92043-2122	Pin	1
6	92015-2253	Nut	2	15	21118-2084	Decompressor	1
7	12016-2059	Arm - Rocker	2	16	49118-6081	Camshaft Assembly (Incl. Ref. #12-15)	1
8	92150-2198	Bolt	2	17	511A0525	Key	1
9	13070-2083	Guide	1				

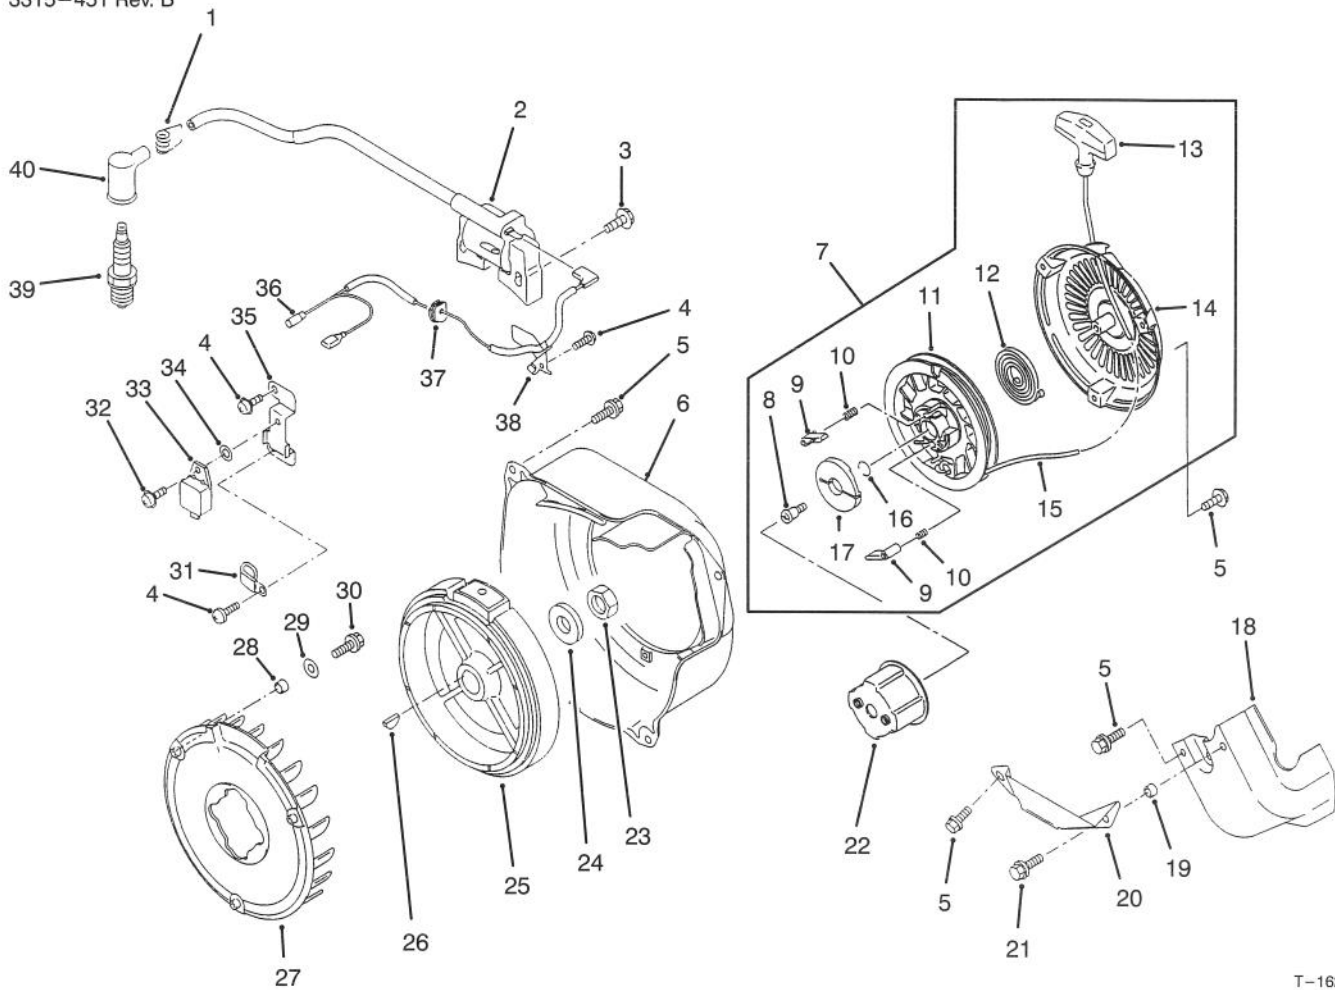


T-1625

ENGINE IGNITION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	317270-8419A	Terminal	1
2	21171-2188	Coil - Ignition	1
3	130B0625	Bolt - Flanged	2
4	92009-2166	Screw	3
5	130B0608	Bolt - Flanged	10
6	59066-2605-9H	Housing - Fan	1
7	49088-2409-9H	Recoil Starter Assy. (Incl. Ref. #8-17)	1
8	92009-2311	Screw	1
9	13165-2082	Pawl - Recoil	2
10	92144-2177	Spring - Return	2
11	59101-2086	Reel - Recoil	1
12	92144-2272	Spring	1
13	313601-3454B	Grip	1
14	32099-2233-9H	Case - Recoil	1
15	59106-2119	Rope	1
16	92033-2160	Ring - Retaining	1
17	13070-2088	Guide - Pawl	1
18	49089-2351-9H	Shroud - Engine	1
19	92027-103	Collar	1
20	49089-2378-9H	Shroud - Engine	1

Ref. No.	Part No.	Description	No. Used
21	130B0614	Bolt - Flanged	1
22	49080-2163	Pulley - Recoil	1
23	314G1400	Nut	1
24	314401-3482A	Washer	1
25	21194-2245	Flywheel	1
26	92038-2077	Key	1
27	59041-2073	Fan	1
28	92143-2009	Collar	3
29	311509-3595-00	Washer	3
30	130G0616	Bolt - Flanged	3
31	92037-2171	Clamp	1
32	242B0410	Screw - Pan Hd.	1
33	21119-2139	Igniter	1
34	315801-6625A	Washer	1
35	11046-2142	Bracket	1
36	26011-2270	Lead - Wire	1
37	92071-2135	Grommet	1
38	92170-2062	Clamp	1
39	92070-1167	Plug - Spark (NGK BP5ES)	1
40	21130-2066	Cap - Spark Plug	1

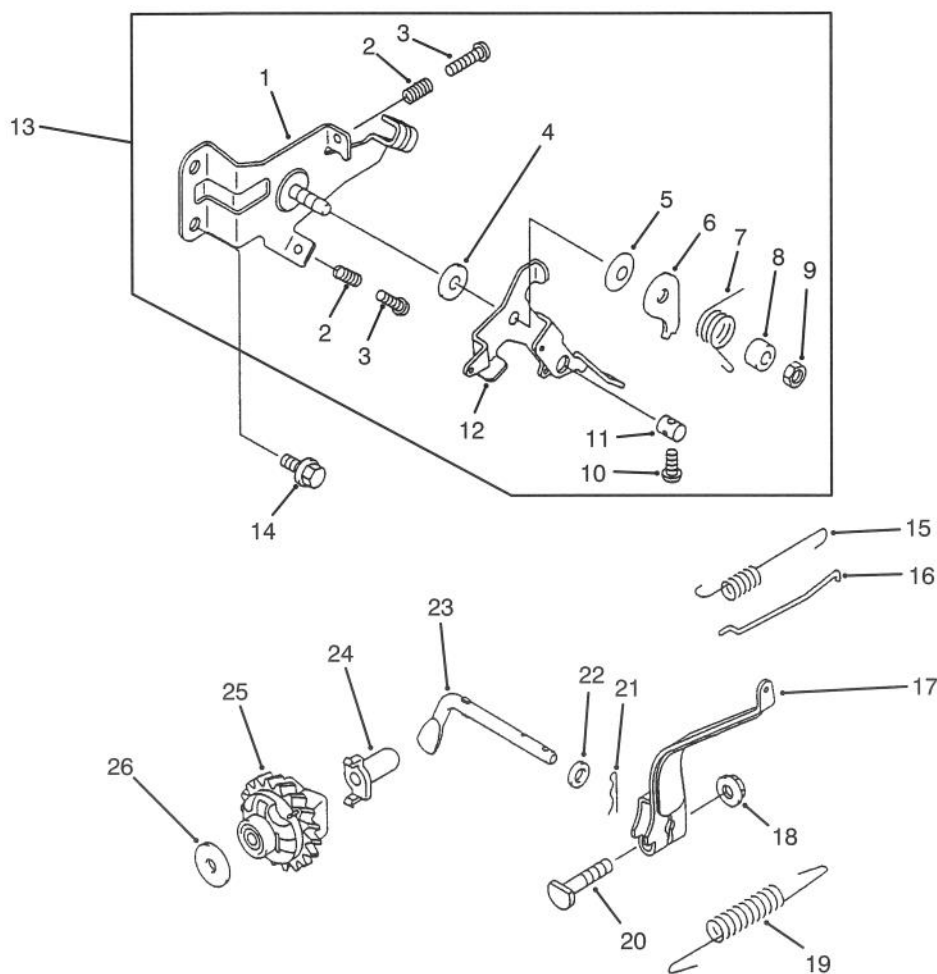


T-1618

ENGINE GOVERNOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	59226-2252	Panel - Control	1
2	92144-2266	Spring	2
3	92150-2227	Bolt	2
4	314401-5383A	Washer	1
5	314401-5388A	Spring	1
6	13183-2371	Plate	1
7	92144-2270	Spring	1
8	92026-2304	Spacer	1
9	314401-5385A	Nut	1
10	214B0414	Screw - Pan Hd.	1
11	92015-2120	Nut	1
12	31368-2330	Lever	1
13	39180-2779	Control Panel Assy. (Incl. Ref. #1-12)	1

Ref. No.	Part No.	Description	No. Used
14	130B0612	Bolt - Flanged	2
15	314499-5232A	Spring	1
16	49046-2098	Rod - Governor	1
17	49103-2124	Arm - Governor	1
18	92015-1193	Nut	1
19	39129-2052	Spring - Governor	1
20	92002-2269	Bolt	1
21	554A0600	Pin - Snap	1
22	92200-2029	Washer	1
23	39003-2074	Arm - Pivot	1
24	314401-5121B	Sleeve	1
25	49110-2076	Governor Assembly	1
26	314401-5135A	Washer	1

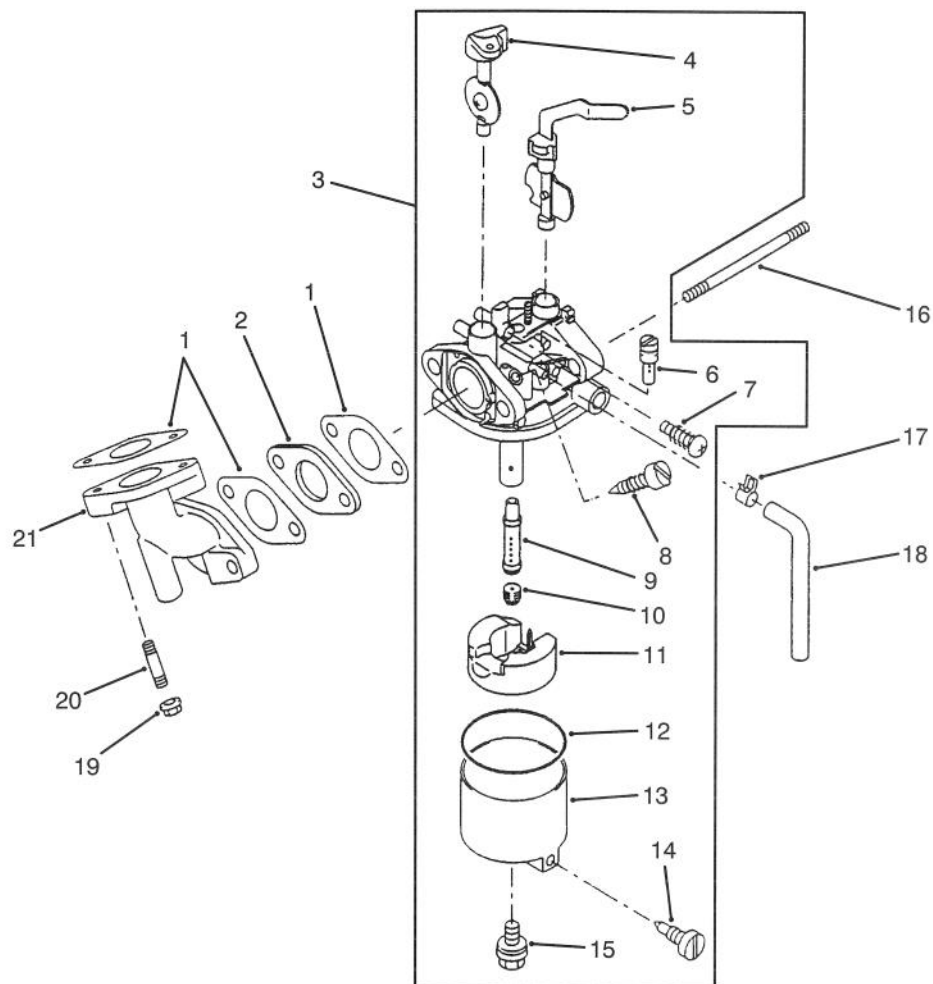


T-1619

ENGINE CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	11060-2051	Gasket - Carburetor	3
2	16073-2156	Insulator	1
3	15003-2298	Carburetor Assembly (Incl. Ref. #4-15)	1
4	16185-2007	Valve - Throttle	1
5	16186-2011	Valve - Choke	1
6	92064-2082	Jet - Pilot #42	1
7	23013-2054	Screw Assembly	1
8	23013-2055	Screw - Assembly	1
9	49121-2167	Nozzle - Main	1
10	92063-2233	Jet - Main #70	1
11	16183-2001	Float Assembly	1


Ref. No.	Part No.	Description	No. Used
12	11009-2919	Gasket	1
13	16184-2002	Float Chamber Assy. (Incl. Ref. #14)	1
14	23013-2053	Screw Assembly	1
15	92150-2209	Bolt	1
16	172G0673	Bolt - Stud	2
17	395115-6812-00	Clamp	1
18	92190-2105	Tube	1
19	92015-1193	Nut	2
20	172G0618	Bolt - Stud	2
21	16060-2160	Pipe - Intake	1

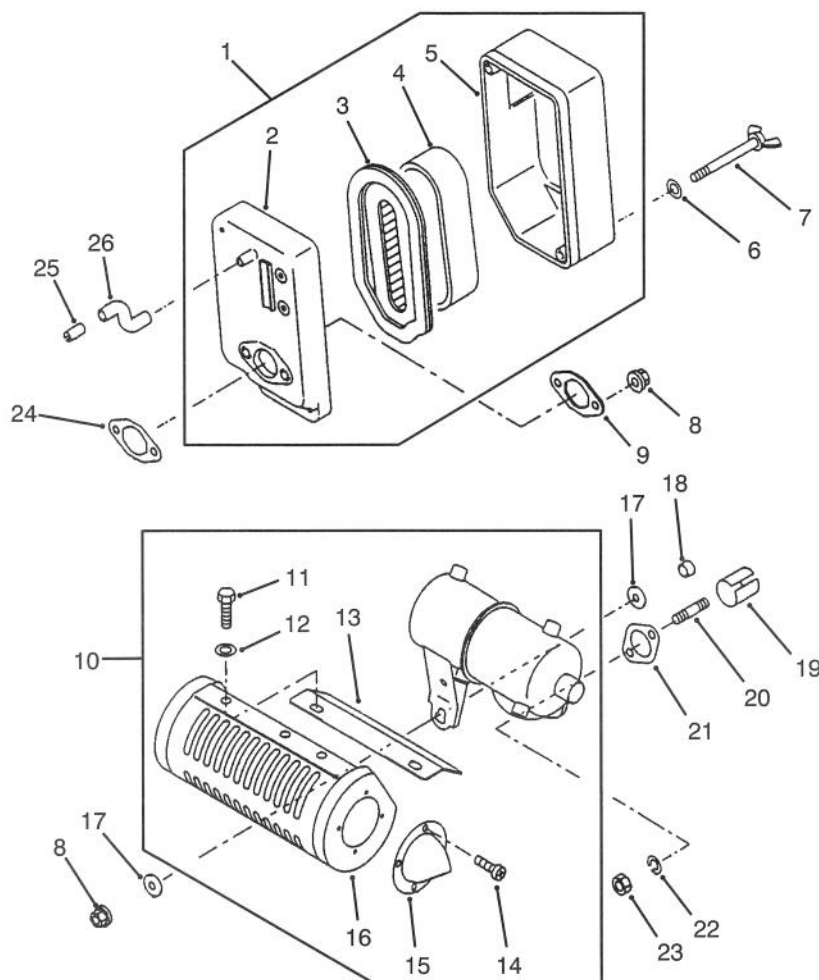

T-1620

ENGINE AIR FILTER & MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	11010-2459	Air Filter Assembly (Incl. Ref. #2-5)	1	13	49106-2527-YM	Cover - Muffler	1
2	11011-2241	Case - Air Filter	1	14	92009-2307	Screw	4
3	11013-2132	Element - Air Filter	1	15	59156-2057-YM	Pipe - Tail	1
4	11013-2133	Element - Air Filter	1	16	49106-2530-YM	Cover - Muffler	1
5	11012-2325	Cap - Air Filter	1	17	92200-2037	Washer	2
6	411F0500	Washer	22	18	92027-2086	Collar	1
7	92150-2226	Bolt	2	19	19049-2220	Pipe - Exhaust	1
8	92015-1193	Nut	3	20	171G0616	Bolt - Stud	2
9	13183-2416	Plate - Air Filter	1	21	11060-2037	Gasket - Muffler	1
10	49069-2256	Muffler Assembly (Incl. Ref. #11-16)	1	22	461F0600	Washer - Spring	2
11	110R0610	Bolt	4	23	311R0600	Nut - Hex.	2
12	411B0600	Washer	4	24	11060-2049	Gasket - Air Filter	1
				25	314401-1341A	Pipe	1
				26	92190-2043	Tube	1

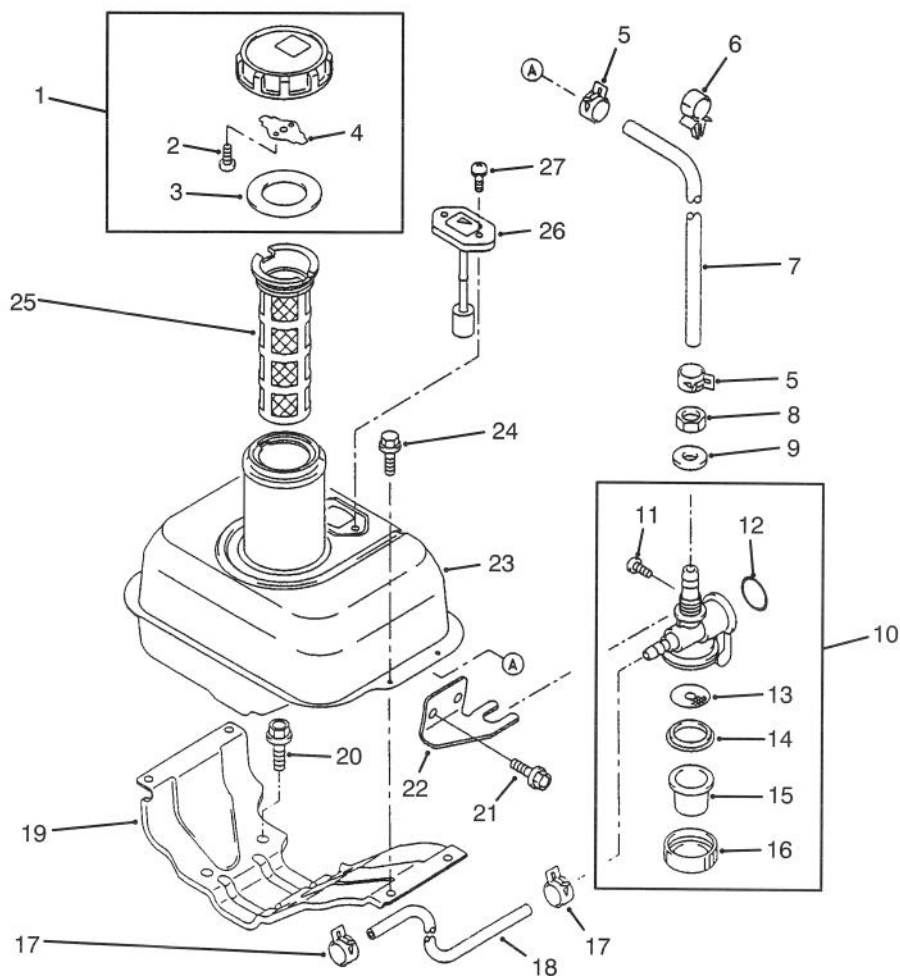


T-1621

ENGINE FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	51048-2055	Fuel Cap Assembly (Incl. Ref. #2-4)	1
2	314401-6732A	Screw	2
3	315801-6643B	Gasket	1
4	315801-6644A	Spring	1
5	316677-6812A	Clamp	2
6	92170-2067	Clamp	1
7	92190-2095	Tube	1
8	313650-6527-00	Nut	1
9	410B1000	Washer	1
10	51023-2131	Tap Assembly (Incl. Ref. #11-16)	1
11	313650-6517-00	Screw	1
12	313650-6512-00	Seal - O-Ring	1
13	14043-2058	Filter - Tap	1

Ref. No.	Part No.	Description	No. Used
14	313650-6518-02	Gasket	1
15	51036-2063	Cup - Tap	1
16	313650-6522-00	Nut	1
17	311702-6812A	Clamp	2
18	92190-2096	Tube	1
19	32052-2209-9H	Bracket - Tank	1
20	130B0816	Bolt - Flanged	4
21	130B0508	Bolt - Flanged	2
22	11047-2073	Bracket	1
23	51001-2264-9H	Tank - Fuel	1
24	187J0614	Bolt	4
25	49019-2106	Filter - Fuel	1
26	52005-2072	Gauge - Fuel	1
27	315801-6577A	Screw	2

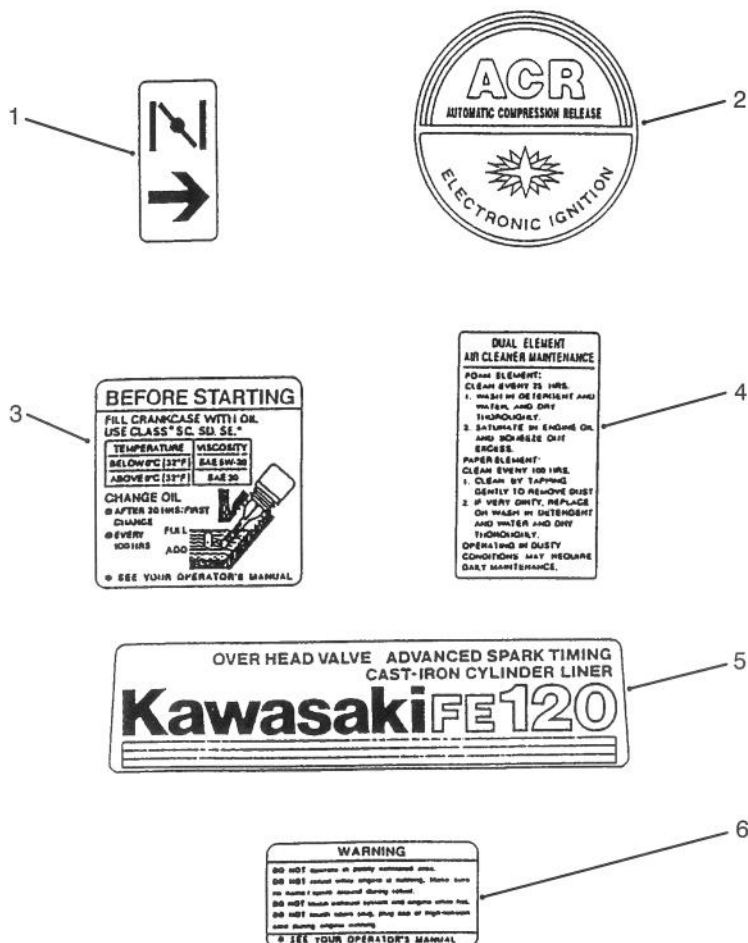

T-1622

ENGINE DECALS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	56030-2423	Decal - Choke	1	4	56031-2387	Decal - Maintenance	1
2	56030-2475	Decal - Recoil	1	5	56038-2792	Decal - Model	1
3	56031-2359	Decal - Instruction	1	6	56040-2188	Decal - Warning	1

INTERNATIONAL DECAL CROSS REFERENCE

JAPANESE DECAL KIT NO. 88-7980

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	JAPANESE
Decal Danger	Engine	88-7620	92-4813
Decal Reel Engagement	Reel Drive Cover	65-7660	92-4817
Decal Throttle	Control Panel	65-8170	92-4821
Decal Manual	Control Panel	65-7680	92-4825
Decal Noise	Control Panel	66-2000	66-2000
Decal Control Panel	Control Panel	65-7670	92-4829
Decal Warning	Frame	55-4300	84-2940
Decal Warning	Grass Shield	62-5070	84-6560
Decal Hot Surface	Engine	63-8440	83-2560
Decal ANSI	Frame	N/A	92-4833
Reference Chart	Grass Shield	65-8650	92-4837

FRENCH DECAL KIT NO. 88-7990

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	FRENCH
Decal Danger	Engine	88-7620	92-4810
Decal Reel Engagement	Reel Drive Cover	65-7660	92-4814
Decal Throttle	Control Panel	65-8170	92-4818
Decal Manual	Control Panel	65-7680	92-4822
Decal Noise	Control Panel	66-2000	66-2000
Decal Control Panel	Control Panel	65-7670	92-4826
Decal Warning	Frame	55-4300	84-2880
Decal Warning	Grass Shield	62-5070	84-6530
Decal Hot Surface	Engine	63-8440	84-9600
Decal ANSI	Frame	N/A	92-4830
Reference Chart	Grass Shield	65-8650	92-4834

INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

GERMAN DECAL KIT NO. 88-8000

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	GERMAN
Decal Danger	Engine	88-7620	92-4812
Decal Reel Engagement	Reel Drive Cover	65-7660	92-4816
Decal Throttle	Control Panel	65-8170	92-4820
Decal Manual	Control Panel	65-7680	92-4824
Decal Noise	Control Panel	66-2000	66-2000
Decal Control Panel	Control Panel	65-7670	92-4828
Decal Warning	Frame	55-4300	84-2890
Decal Warning	Grass Shield	62-5070	84-6540
Decal Hot Surface	Engine	63-8440	84-9610
Decal ANSI	Frame	N/A	92-4832
Reference Chart	Grass Shield	65-8650	92-4836

SPANISH DECAL KIT NO. 88-8010

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SPANISH
Decal Danger	Engine	88-7620	92-4811
Decal Reel Engagement	Reel Drive Cover	65-7660	92-4815
Decal Throttle	Control Panel	65-8170	92-4819
Decal Manual	Control Panel	65-7680	92-4823
Decal Noise	Control Panel	66-2000	66-2000
Decal Control Panel	Control Panel	65-7670	92-4827
Decal Warning	Frame	55-4300	84-2900
Decal Warning	Grass Shield	62-5070	84-6580
Decal Hot Surface	Engine	63-8440	84-9590
Decal ANSI	Frame	N/A	92-4831
Reference Chart	Grass Shield	65-8650	92-4835

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
8-2520	Support - Comb	14 4 1	65-7230	Basket - Grass	7 13 1
8-2530	Comb - Urethane	14 5 1	65-7260	Pulley - Input Drive	11 7 1
10-5060	Bracket - H.O.C.	1 18 2	65-7270	Belt - V (Set of 2)	11 12 1
11-0070	Assembly - Comb, Scraper	14 6 1	65-7400	Boot - Switch	11 18 1
11-9030	Bolt - Shoulder	9 14 1	65-7410	Switch	11 19 1
11-9030	Bolt - Shoulder	11 33 1	65-7450	Stud - Pivot	12 2 2
11-9030	Screw - Shoulder	12 24 2	65-7460	Washer	12 3 2
12-9140	Decal	15 1 1	65-7470	Arm - Handle LH	1 27 1
17-9420	Screw - Handle	12 8 4	65-7480	Arm - Handle RH	1 28 1
28-4110	Switch On/Off	12 30 1	65-7490	Socket - Handle RH	1 29 1
29-9080	Handle	15 3 1	65-7500	Socket - Handle LH	1 30 1
29-9090	Hose - Handle	15 4 1	65-7510	Grommet - Handle	1 31 2
33-1000	Scraper - Brush	14 2 1	65-7610	Clutch Lever Assembly	12 15 1
36-4310	Brush	15 5 1	65-7660	Decal - Reel Engagement	4 56 1
36-7260	Bar - Cutoff	5 7 1	65-7670	Decal - Throttle Panel	12 11 1
38-7820	Bearing - Ball	11 29 2	65-7680	Decal - Throttle Ignition	12 12 1
38-7820	Bearing - Ball	6 41 2	65-7710	Brake Lever Assembly	12 17 1
38-7820	Bearing - Ball	3 44 1	65-8170	Decal - Throttle	12 10 1
38-7820	Bearing - Ball	9 45 2	65-8180	Seal - Grass Catcher	2 50 1
48-7700	Screw - Cap Hex. Hd.	11 14 5	65-8250	Bedknife - Micro	5 * 1
48-9460	Screw - Cap Hex. Hd.	11 10 1	65-8260	Spacer - Engine Shaft	11 8 1
51-0880	Tool - Bedknife Screw	15 1 1	65-8270	Washer - Flat	11 9 1
52-2890	Bushing - Flange	5 17 2	65-8290	Standoff - Cover	3 36 2
52-2890	Nyliner	1 8 2	65-8320	Bar	15 1 1
52-3170	Assembly - Roller	13 3 1	65-8340	Scraper - Wiehle Roller	14 7 1
52-3210	Bearing	2 39 2	65-8360	Scraper - Smooth	14 1 1
52-3210	Bearing - Roller	13 1 2	65-8570	Rod - Grass Catcher	2 44 2
52-3590	Assembly - Swaged Roller	13 4 1	65-8590	Holddown - Handle	6 32 2
55-4300	Decal - Warning	2 51 2	65-8600	Knob - Height Adjust.	1 20 2
57-4910	Screw - Special	5 13 13	65-8610	Lever - Brake	9 19 1
62-5070	Decal - Shield	5 9 1	65-8640	Housing - Bearing	6 27 1
63-8440	Decal - Hot	11 5 1	65-8640	Housing - Bearing	3 34 1
63-8470	Bedknife - 1/8"	5 19 1	65-8650	Decal - Service	5 10 1
63-8560	Bedknife - Tournament	5 * 1	65-8670	Adjuster - Frame	1 10 2
63-9510	Bushing - Rubber	5 18 2	65-8680	Washer - Thrust	1 14 2
63-9510	Bushing Assembly	1 7 2	65-8690	Screw - Adjusting	1 16 2
65-6200	Belt - Reel Drive	3 41 1	65-8700	Band - Brake	9 25 1
65-6210	Belt	6 12 2	65-8710	Flangette	6 22 2
65-6220	Cover - Bearing	6 17 1	65-8720	Closure	6 29 2
65-6240	Bedbar	5 12 1	65-8730	Clamp - Bearing	6 30 4
65-6260	Washer - Thrust	5 14 4	65-8770	Bushing	11 23 2
65-6270	Bolt - Bedbar	5 15 2	65-8780	Harness - Wire	12 33 1
65-6290	Spring - Clutch Detent	3 20 1	65-8830	Cable - Brake	12 22 1
65-6360	Support - Spring	1 11 2	65-8831	Cable - Clutch	12 23 1
65-6380	Collar - Thrust	1 13 2	65-8890	Pulley - Input Shaft	9 16 1
65-6400	Spring - Compression	1 12 2	65-8910	Pulley - Countershaft	9 32 1
65-6450	Bracket - Shield LH	5 2 1	65-8960	Boot - Clutch	3 28 1
65-6460	Bracket - Shield RH	5 3 1	65-8970	Knob - Black	12 5 1
65-6570	Washer	6 15 2	65-8971	Knob - Red	12 6 1
65-6590	Flangette	6 20 2	65-9010	Shield - Grass	5 1 1
65-6660	Pulley	6 13 2	65-9080	Belt	9 35 1
65-6700	Flangette	9 6 1	65-9120	Pulley - Differential	7 9 1
65-6710	Flangette	9 8 1	65-9500	Screw - Roller Adjust.	1 19 2
65-6720	Plate - Screw	9 5 1	66-2000	Decal - Noise Rating	12 27 1
65-6760	Housing - Bearing	9 27 1	71-1550	Assembly - Wiehle Roller	13 5 1
65-6800	Boot - Differential	9 43 1	86-7130	Spacer	6 10 2
65-6810	Support - Brake	9 21 2	86-7130	Spacer - Short	9 26 1
65-6850	Key	9 33 1	86-7140	Spacer - Long	9 31 1
65-6901	Strip - Cover Seal	10 50 1	88-6790	Wiehle Roller Assembly	2 37 1
65-6902	Strip - Cover Seal	10 51 1	88-7030	Tube - Front Frame	1 1 1
65-6903	Strip - Cover Seal	10 52 1	88-7040	Angle - Rear Frame	1 4 1
65-6940	Clutch - Jaw Driver	3 11 1	88-7060	Plate - Side RH	1 5 1
65-6970	Seal - Felt	3 18 1	88-7080	Side Plate Assembly LH	1 9 1
65-7131	Trim - Groomer Arm Cover	3 31 1	88-7090	Spacer LH	2 40 1
65-7190	Cover - Groomer Arm	3 30 1	88-7100	Spacer RH	2 41 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
88-7110	Rod - Frame Support	2 42 1	92-8914	Bolt - Tapered Face	1 22 4
88-7140	Shaft - Power	3 9 1	92-8920	Reel Assembly - 8 Blade	5 * 1
88-7150	Key - Square	3 10 2	218-497	Nut - Face	12 31 1
88-7170	Lever - Clutch	3 24 1	218-498	Nut - Lock	12 32 1
88-7190	Spacer - Pulley Support	6 47 2	233-69	Knob	3 29 1
88-7190	Spacer - Pulley Support	4 59 1	237-160	Plug	4 55 1
88-7200	Washer - Flat	6 43 2	2410-18	Plug	15 2 1
88-7200	Washer - Flat	3 46 1	2412-21	Clip - Cable	11 41 1
88-7200	Washer - Flat	9 46 1	2412-139	Clamp - Hose	9 41 1
88-7210	Differential Assembly	7 8 1	2412-140	Clamp - Hose	9 42 1
88-7230	Housing - Countershaft	9 1 1	251-204	Bearing - Ball	3 4 1
88-7240	Cover - Box Front	9 37 1	251-336	Bearing - Ball	3 13 2
88-7250	Cover - Box Rear	9 38 1	251-338	Bearing	6 9 4
88-7260	Engine Assembly	11 1 1	251-338	Bearing	9 30 1
88-7280	Drum Assembly	7 1 2	251-342	Bearing	6 26 1
88-7290	Support - Belt	11 13 1	251-342	Bearing - Self-Aligning	3 37 1
88-7320	Support - Bellcrank	11 17 1	251-343	Bearing	9 9 1
88-7330	Bellcrank	11 22 1	253-96	Seal	6 33 1
88-7350	Spacer - Pulley Support	11 39 1	253-96	Seal	3 35 1
88-7380	Spacer - Pulley Support	10 57 1	253-118	Seal - Oil	3 6 1
88-7390	Handle	12 1 1	253-160	Seal	6 8 4
88-7400	Panel - Control	12 7 1	253-160	Seal	9 29 2
88-7420	Bracket - Clutch	12 13 1	253-161	Seal - V-Ring	6 16 2
88-7440	Bracket - Brake	12 14 1	253-163	Seal	6 25 1
88-7450	Spacer	12 18 2	253-163	Seal	3 39 1
88-7470	Housing - LH	6 4 1	256-206	Bushing	12 16 2
88-7490	Housing - RH	6 * 1	283-75	Pin - Clevis	9 20 1
88-7510	Shaft - Drum RH	7 * 1	302-5	Fitting - Grease	13 2 2
88-7520	Shaft - Drum LH	7 4 1	302-5	Fitting - Grease	3 5 2
88-7530	Spacer	6 1 2	302-5	Fitting - Grease	6 11 1
88-7540	Washer - Backup	6 2 2	302-5	Fitting - Grease	11 24 1
88-7550	Pulley - RH	6 * 1	302-5	Fitting - Grease	2 38 2
88-7560	Pulley - LH	6 3 1	302-11	Fitting - Grease	6 23 2
88-7620	Decal - Fuel	11 6 1	302-19	Fitting - Grease	6 7 2
88-7630	Decal - Greensmaster 1000	11 38 1	302-64	Fitting - Grease	9 28 1
88-7640	Shaft - Drum	7 3 1	302-65	Fitting - Grease	9 7 1
88-7660	Retainer - Cover	11 36 1	321-2	Screw - Cap Hex. Hd.	9 39 3
88-7670	Base - Engine	2 47 1	321-3	Screw - Cap Hex. Hd.	5 4 4
88-7680	Cover - Drum Belt LH	6 36 1	321-3	Screw - Cap Hex. Hd.	10 55 2
88-7690	Cover - Drum Belt RH	6 * 1	321-4	Screw - Cap Hex. Hd.	1 25 2
88-7700	Cover - Reel Drive	3 50 1	321-4	Screw - Cap Hex. Hd.	3 27 1
88-7710	Seal - Countershaft	9 34 1	321-11	Screw - Cap Hex. Hd.	6 38 8
88-7720	Washer - Wave	3 7 1	321-20	Screw - Cap Hex. Hd.	4 57 4
88-7750	Cover - Bellcrank	11 35 1	322-2	Screw - Cap Hex. Hd.	2 45 4
88-7770	Strip - Seal Front	3 51 1	322-3	Screw - Cap Hex. Hd.	6 18 6
88-7780	Strip - Seal Rear	4 52 1	322-3	Screw - Cap Hex. Hd.	6 45 4
88-7790	Strip - Seal Upper	4 53 1	322-3	Screw - Cap Hex. Hd.	9 47 1
88-7800	Strip - Seal Lower	4 54 1	322-3	Screw - Cap Hex. Hd.	3 48 1
88-7810	Seal Strip - Drum Cover	6 37 2	322-4	Screw - Cap Hex. Hd.	2 32 4
88-7830	Clutch & Pulley Assembly	3 12 1	322-5	Screw - Cap Hex. Hd.	3 2 2
88-7840	Pulley & Drive Assembly	3 42 1	322-5	Screw - Cap Hex. Hd.	7 5 8
88-7850	Idle Pulley Assembly	6 40 2	322-5	Screw - Cap Hex. Hd.	9 36 3
88-7850	Idle Pulley Assembly	3 43 1	322-5	Screw - Cap Hex. Hd.	6 46 2
88-7860	Spacer	3 25 1	322-5	Screw - Cap Hex. Hd.	3 49 1
88-7870	Idle Pulley Assembly	9 44 1	322-5	Screw - Cap Hex. Hd.	9 49 1
88-7880	Bearing	6 21 2	322-9	Screw - Cap Hex. Hd.	11 2 4
88-7890	Idle Pulley Assembly	11 28 1	322-42	Screw - Cap Hex. Hd.	6 28 2
88-7900	Cover Bracket Assembly	10 53 1	323-4	Screw - Cap Hex. Hd.	1 2 12
88-7910	Throttle Assembly	12 26 1	323-4	Screw - Cap Hex. Hd.	11 25 1
88-7960	Bracket - Throttle Cable	11 40 1	323-5	Screw - Cap Hex. Hd.	9 2 4
88-7970	Clip	10 59 1	323-5	Screw - Cap Hex. Hd.	2 48 4
92-7302	Nut - Bearing Lock	6 24 1	323-7	Screw - Cap Hex. Hd.	6 35 2
92-7676	Pin - Actuator	3 19 1	323-18	Screw - Cap Hex. Hd.	1 17 2
92-8013	Housing - Clutch	3 1 1	323-31	Screw - Cap Hex. Hd.	11 31 1
92-8653	Reel Assembly - 11 Blade	5 11 1	325-7	Screw - Cap Hex. Hd.	2 34 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3210-7	Screw - Cap Hex. Hd.	12 19 2	3257-32	Key	9 18 1
3218-2	Nut - Jam	9 13 3	3259-15	Screw - Drive	3 23 1
3219-1	Nut-Hex	14 9 4	3272-6	Pin - Cotter	9 23 2
3219-14	Nut.	15 3 1	3272-8	Pin - Cotter	9 24 1
3220-5	Nut - Jam	3 17 1	3289-23	Screw - Flat Hd.	3 32 2
3220-6	Nut - Jam	1 15 2	3290-134	Screw - Cap Hex. Hd.	12 28 3
3230-5	Bolt - Carriage	1 21 2	3290-378	Tie - Wire	12 34 6
3252-4	Screw - Hex. Socket Hd.	11 20 2	3290-414	Washer	3 26 1
3253-3	Washer - Lock	3 22 1	3290-485	Washer - Wave	3 40 1
3253-3	Washer - Lock	1 26 2	3295-15	Rivet	14 3 11
3253-3	Washer - Lock	9 40 3	3296-2	Nut - Lock	12 29 3
3253-3	Washer - Lock	10 56 2	3296-28	Nut - Lock	12 4 2
3253-4	Washer - Lock	7 6 8	3296-29	Nut - Lock	3 3 2
3253-4	Washer - Lock	11 11 1	3296-29	Nut - Lock	11 4 4
3253-4	Washer - Lock	9 12 8	3296-29	Nut - Lock	6 6 6
3253-4	Washer - Lock	11 15 4	3296-29	Nut - Lock	12 9 4
3253-4	Washer - Lock	6 19 8	3296-29	Nut - Lock	7 11 4
3253-4	Washer - Lock	12 21 2	3296-29	Nut - Lock	1 24 2
3253-4	Washer - Lock	2 33 4	3296-39	Nut	3 33 2
3253-4	Washer - Lock	6 44 2	3296-39	Nut - Lock	11 32 1
3253-4	Washer - Lock	3 47 2	3296-39	Nut - Lock	6 34 2
3253-21	Lockwasher	1 3 16	3296-42	Nut	12 25 2
3253-21	Washer - Lock	9 3 4	3296-42	Nut - Lock	5 6 4
3253-21	Washer - Lock	11 26 1	3296-42	Nut - Lock	9 15 1
3254-4	Washer - Lock I.T.L.W.	3 16 1	3296-42	Nut - Lock	3 21 1
3254-4	Washer - Lock I.T.L.W.	2 36 2	3296-42	Nut - Lock	11 34 1
3254-6	Washer - Lock I.T.L.W.	9 22 2	3296-57	Nut	6 14 2
3254-6	Washer - Lock I.T.L.W.	2 43 2	3296-57	Nut - Lock	9 17 1
3254-8	Washer - Lock I.T.L.W.	14 8 4	32120-11	Ring - Retaining	3 8 1
3254-8	Washer - Lock I.T.L.W.	6 39 8	32120-42	Ring - Retaining	11 30 1
3254-8	Washer - Lock I.T.L.W.	4 58 4	32120-42	Ring - Retaining	9 48 1
3255-8	Washer - Lock I.T.L.W.	2 46 4	32120-42	Ring - Snap	6 42 2
3256-22	Washer - Flat	5 5 6	32120-42	Ring - Snap	3 45 1
3256-22	Washer - Flat	10 58 2	32122-22	Screw - Phill. Truss Hd.	15 2 1
3256-23	Washer	11 16 1	32128-48	Nut - Flange	5 16 2
3256-23	Washer	12 20 4	32144-73	Screw - Hex. Washer Hd.	11 42 1
3256-23	Washer - Flat	7 10 4	32144-73	Screw - Self Tapping	5 8 5
3256-23	Washer - Flat	1 23 2	32148-6	Insert - Threaded	1 6 9
3256-23	Washer - Flat	6 31 2	32148-6	Insert - Threaded	10 54 1
3256-24	Washer - Flat	9 4 4	32149-7	Nut - Lock	11 21 2
3256-24	Washer - Flat	11 27 2	32151-89	Ring - Retaining	3 14 1
3256-24	Washer - Flat	2 49 4	32151-92	Ring - Retaining	3 38 1
3256-26	Washer - Flat	2 35 2	32151-95	Ring - Retaining	3 15 2
3256-56	Washer - Flat	11 3 8	32151-106	Ring - Puush-On	11 37 1
3257-32	Key	7 12 2			

[illegible]

MAINTENANCE RECORD

[illegible]

[illegible]

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Greensmaster 1000 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame side plate. In any correspondence concerning the Greensmaster 1000, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Greensmaster 1000.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Frame Assembly	1-2	Special Tools	15
Reel Drive Assembly	3-4	Engine Crankcase Assembly	16
Reel Assembly	5	Engine Camshaft & Valves Assembly	17
Drum Drive Assembly	6	Engine Ignition Assembly	18
Drum & Basket Assembly	7	Engine Governor Assembly	19
Differential Assembly		Engine Carburetor Assembly	20
Peerless Model No. 100-085	8	Engine Air Filter & Muffler Assembly	21
Countershaft Assembly	9-10	Engine Fuel Tank Assembly	22
Engine & Bellcrank Assembly	11	Engine Decals Assembly	23
Handle Assembly	12	International Decal Cross Reference	24-25
Cutting Unit Roller Options	13	TORO Part Number Index	26-28
Scraper Options	14		