



## Rear Discharge Completion Kit Base 62in Mower for Groundsmaster® 3320 and 3280-D

Model No. 30305

### Parts Catalog

#### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers


Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

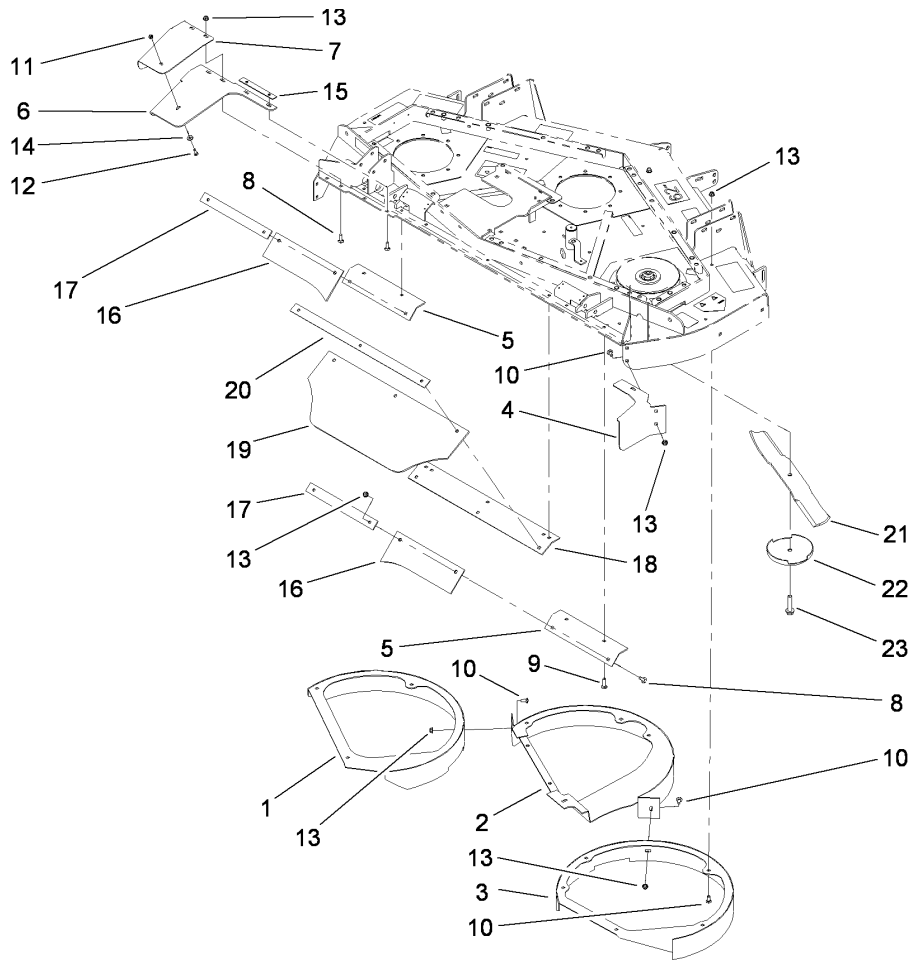

Rear Discharge Assembly

| Ref | Part No.    | Qty. | Description              |  |  |  |  |
|-----|-------------|------|--------------------------|--|--|--|--|
| 1   | 108-5279-01 | 1    | LH Chamber ASM           |  |  |  |  |
| 2   | 108-5282-01 | 1    | Center Chamber ASM       |  |  |  |  |
| 3   | 108-5285-01 | 1    | RH Chamber ASM           |  |  |  |  |
| 4   | 110-0603-01 | 1    | Shield-Foot, Right       |  |  |  |  |
| 5   | 114-2891-01 | 2    | Angle-Outside            |  |  |  |  |
| 6   | 110-0604    | 1    | Deflector-Rubber         |  |  |  |  |
| 7   | 110-0605-01 | 1    | Shield-Foot, Left        |  |  |  |  |
| 8   | 3230-22     | 11   | Screw-CARR               |  |  |  |  |
| 9   | 3230-3      | 9    | Screw-CARR               |  |  |  |  |
| 10  | 3230-23     | 20   | Screw-CARR               |  |  |  |  |
| 11  | 32128-32    | 2    | Nut-HHF                  |  |  |  |  |
| 12  | 321-4       | 2    | Screw-HH                 |  |  |  |  |
| 13  | 104-8300    | 38   | Nut-Flange, NI           |  |  |  |  |
| 14  | 3256-2      | 2    | Washer-Flat              |  |  |  |  |
| 15  | 108-5295-03 | 1    | Bar-Deflector, Hold-Down |  |  |  |  |
| 16  | 114-2894    | 2    | Flap-Outside             |  |  |  |  |
| 17  | 114-2897-01 | 2    | Strap-Outside            |  |  |  |  |
| 18  | 114-2892-01 | 1    | Angle-Center             |  |  |  |  |
| 19  | 114-2895    | 1    | Flap-Center              |  |  |  |  |
| 20  | 114-2898-01 | 1    | Strap-Center             |  |  |  |  |
| 21  | 92-5608-03  | 3    | Blade                    |  |  |  |  |
| 22  | 72-9361     | 3    | Cup-Scalp, Anti          |  |  |  |  |
| 23  | 92-5816     | 3    | Bolt-Blade               |  |  |  |  |